


∗ 1 : w/ Power Seat
∗ 2 : w/o Power Seat

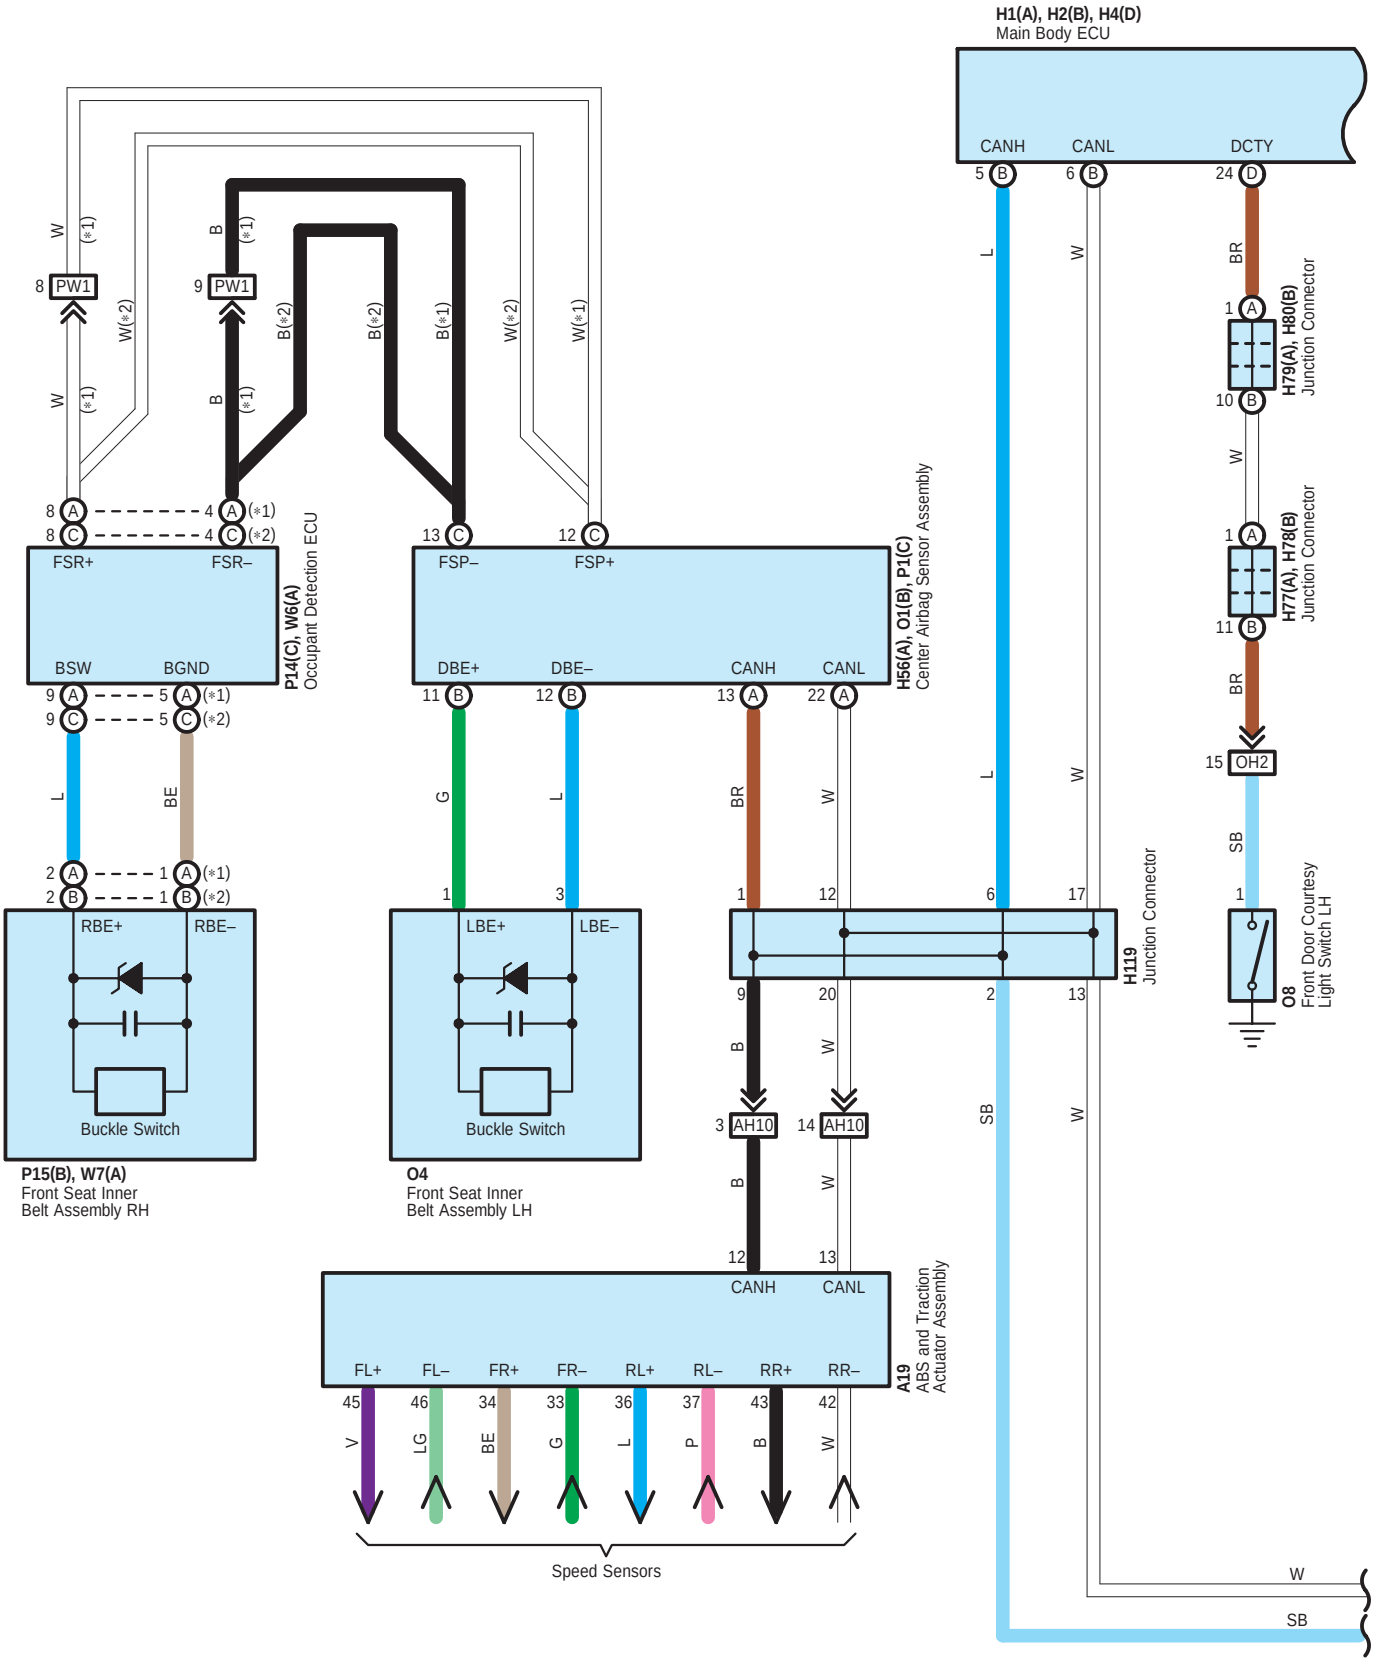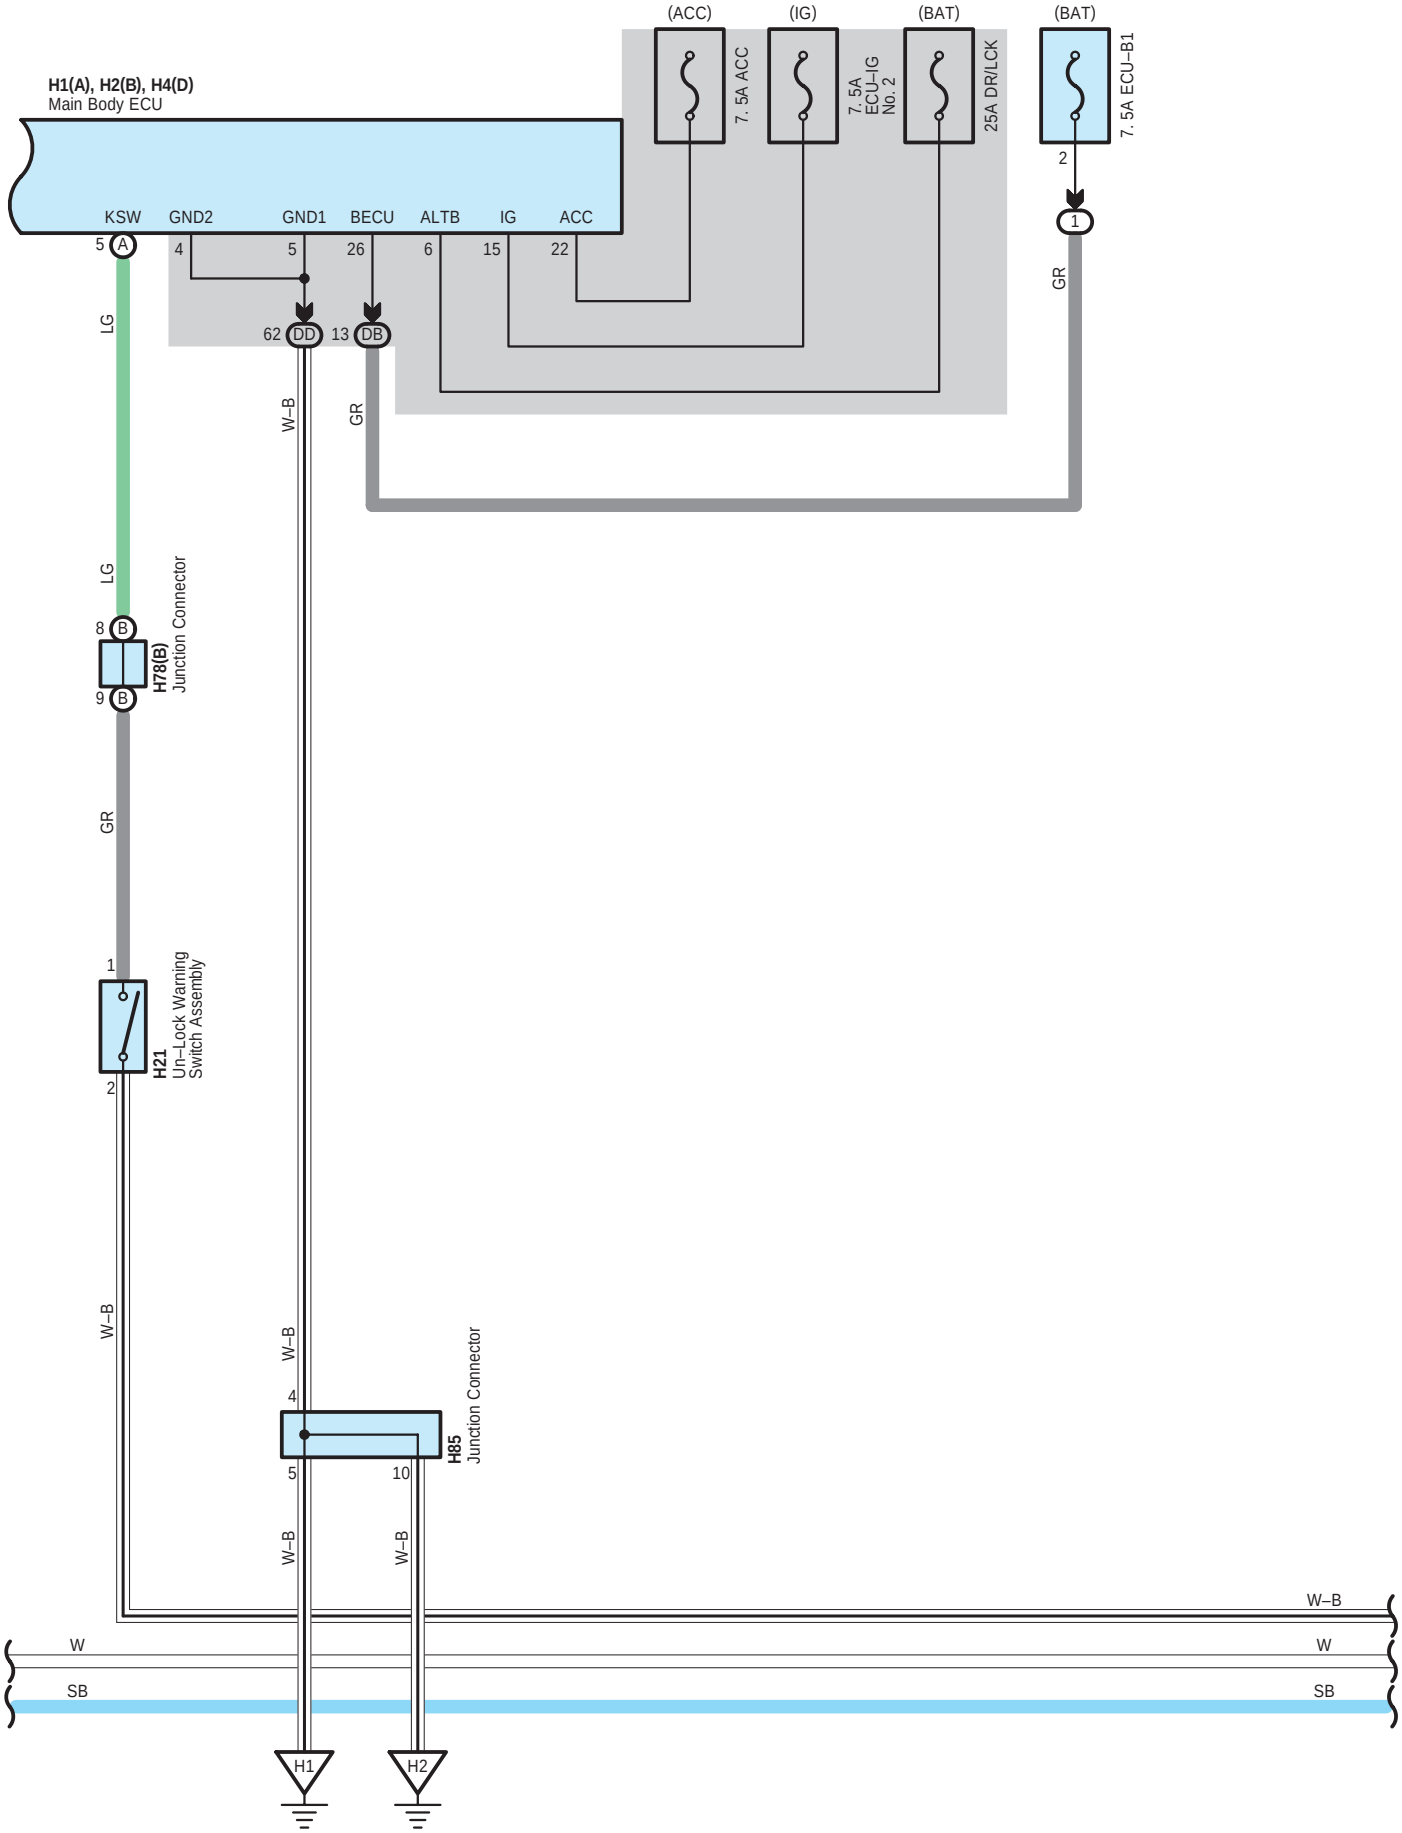



(ACC)
(IG)
(BAT)
(BAT)
7. 5A ACC
7. 5A ECU–IG No. 2
25A DR/LCK
7. 5A ECU–B1
H1(A), H2(B), H4(D)
Main Body ECU
KSW
GND2
GND1
BECU
ALTB
IG
ACC
5 A
4
5
26
6
15
22
2
1
62 DD
13 DB
LG
W–B
GR
GR
LG
8 B
9 B
H78(B)
Junction Connector
GR
1
2
H21
Un–Lock Warning Switch Assembly
W–B
W–B
4
H85
Junction Connector
5
10
W–B
W–B
W–B
W
SB
W
SB
H1
H2


* 3 : w/ Electronic Modulated Air Suspension
* 4 : w/o Electronic Modulated Air Suspension

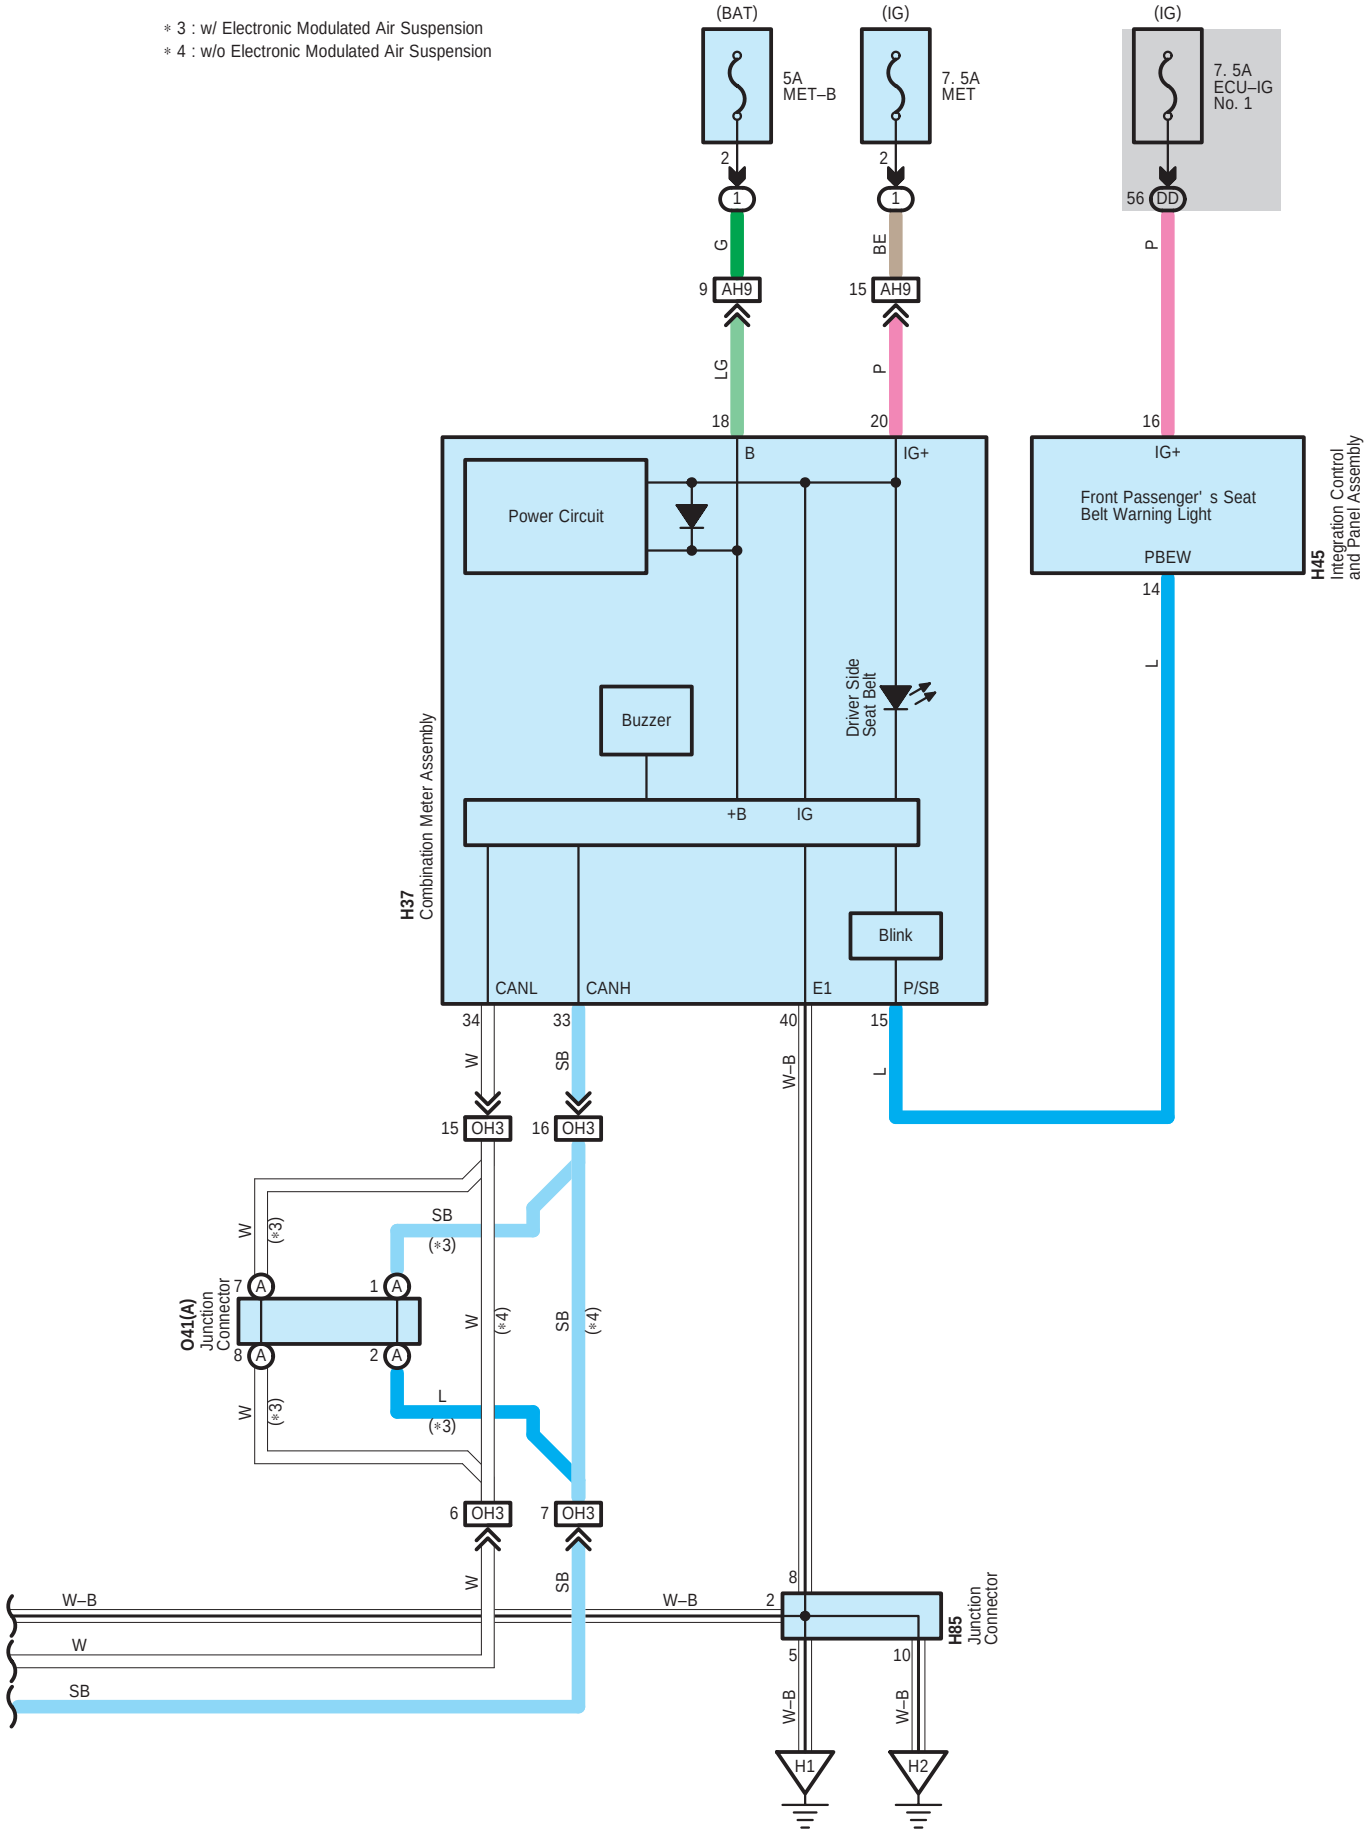


A 19
Black

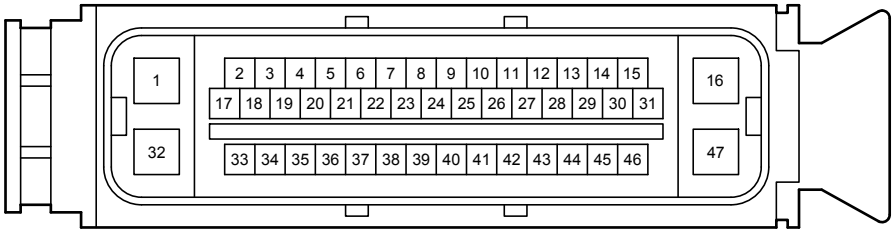


H 1
White

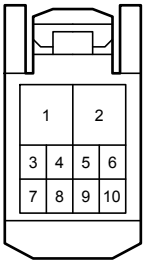

H 2
White

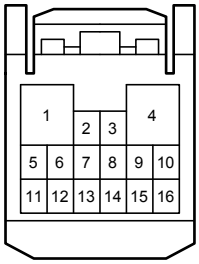


H 4
White

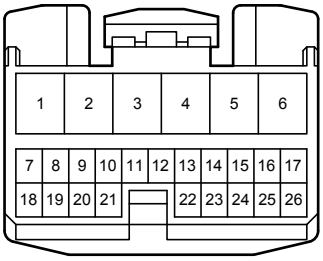


H 21
White




H 37
White

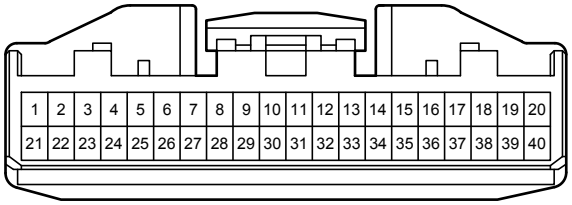


H 45
White

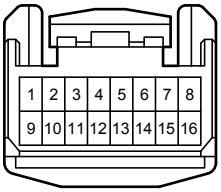


H 56
Yellow

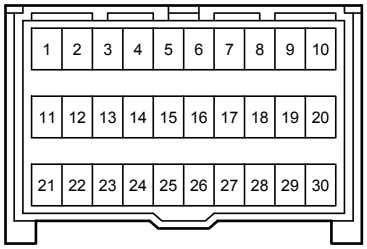


H 77
Black

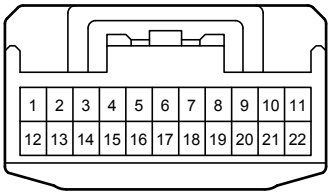


H 78
Black

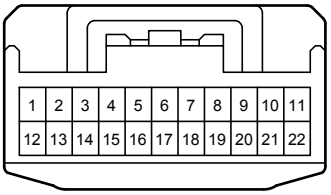


H 79
Black

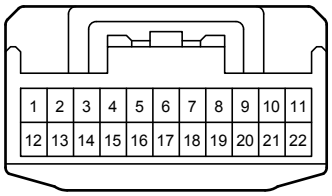


H 80
Black

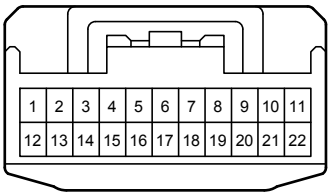


H 85
White

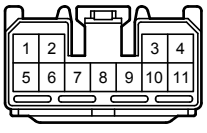

H119
Gray

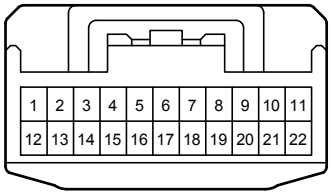

O 1
Yellow

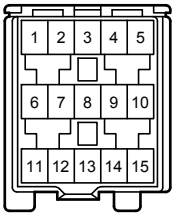


O 4
White




O 8
White




O 41
White

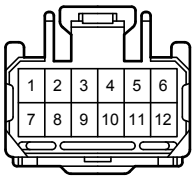


P 1
Yellow

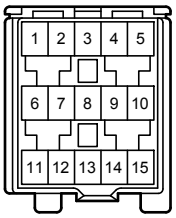


P 14
Black

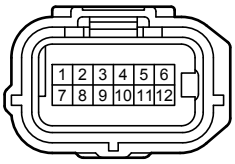


P 15
Gray

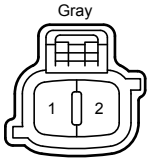


W 6
Black

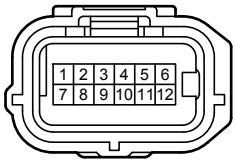


W 7
Gray

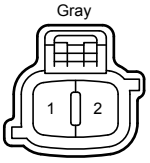


DB
White

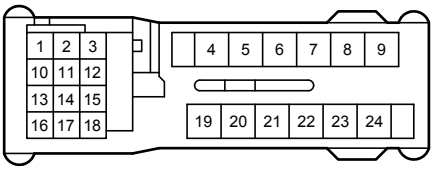


DD
White

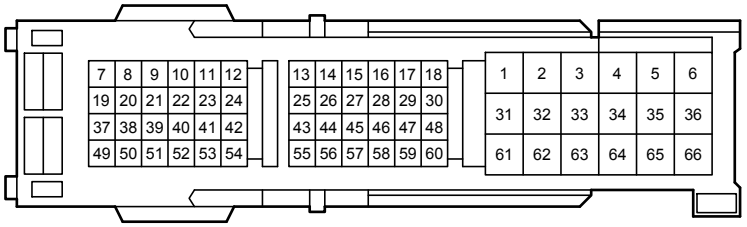


AH9
Gray

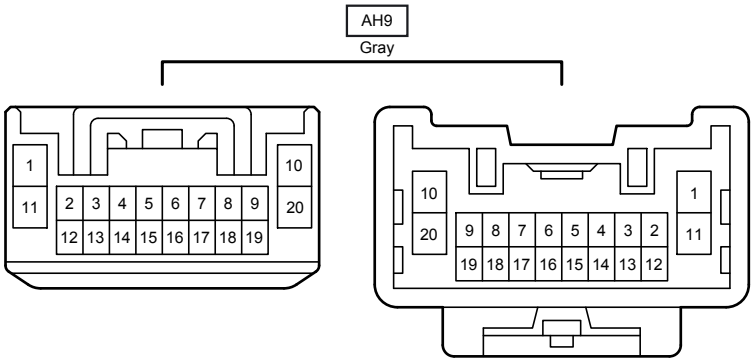


AH10
Gray

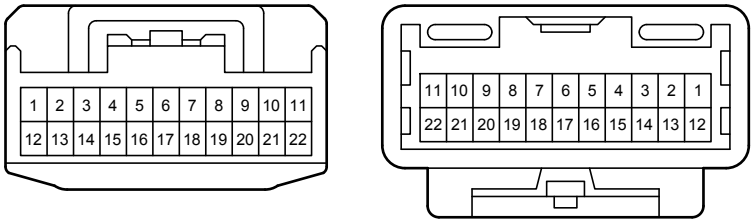

OH2
Black

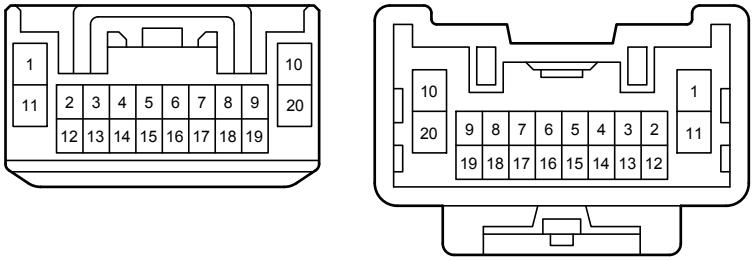

OH3
White

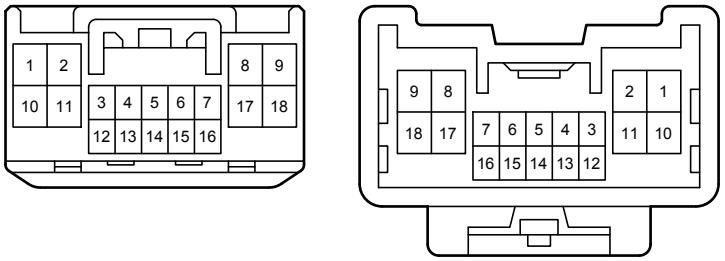

PW1
White

