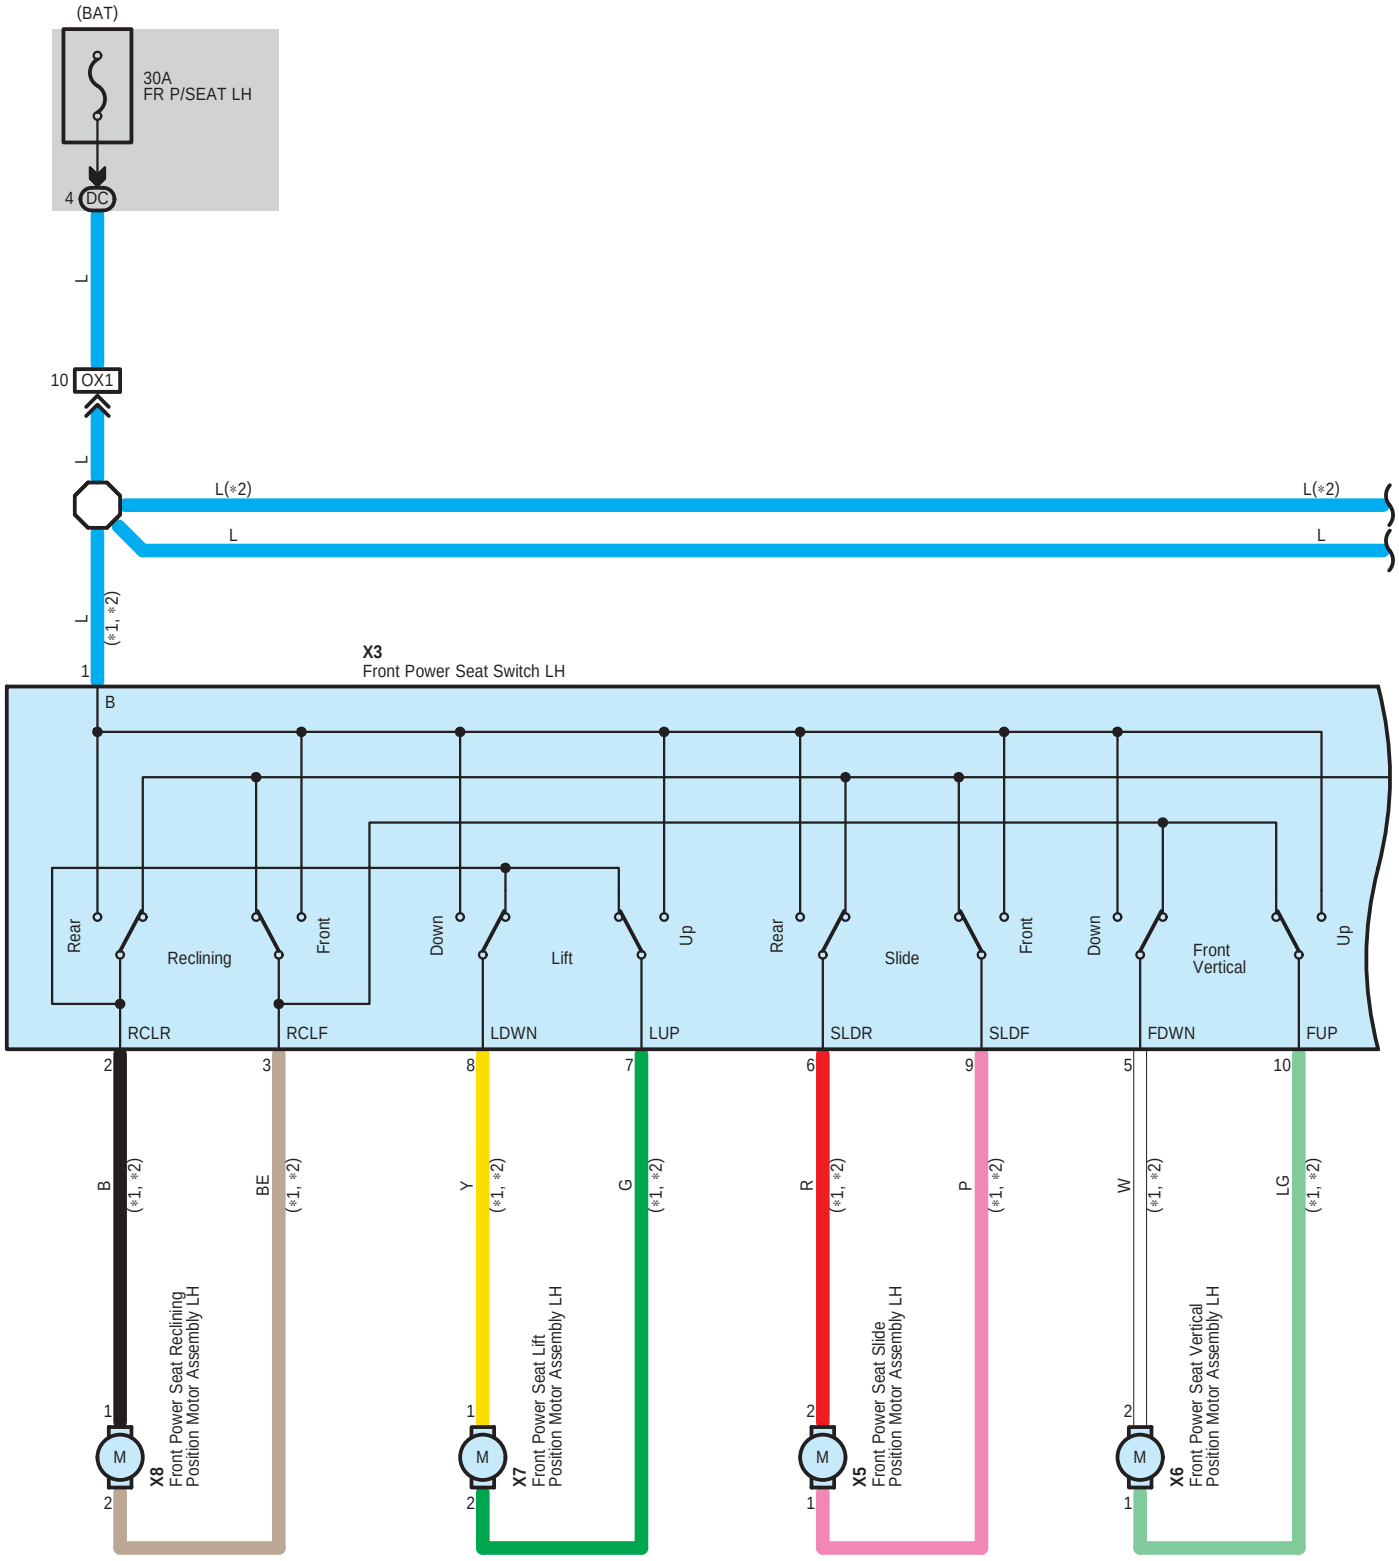
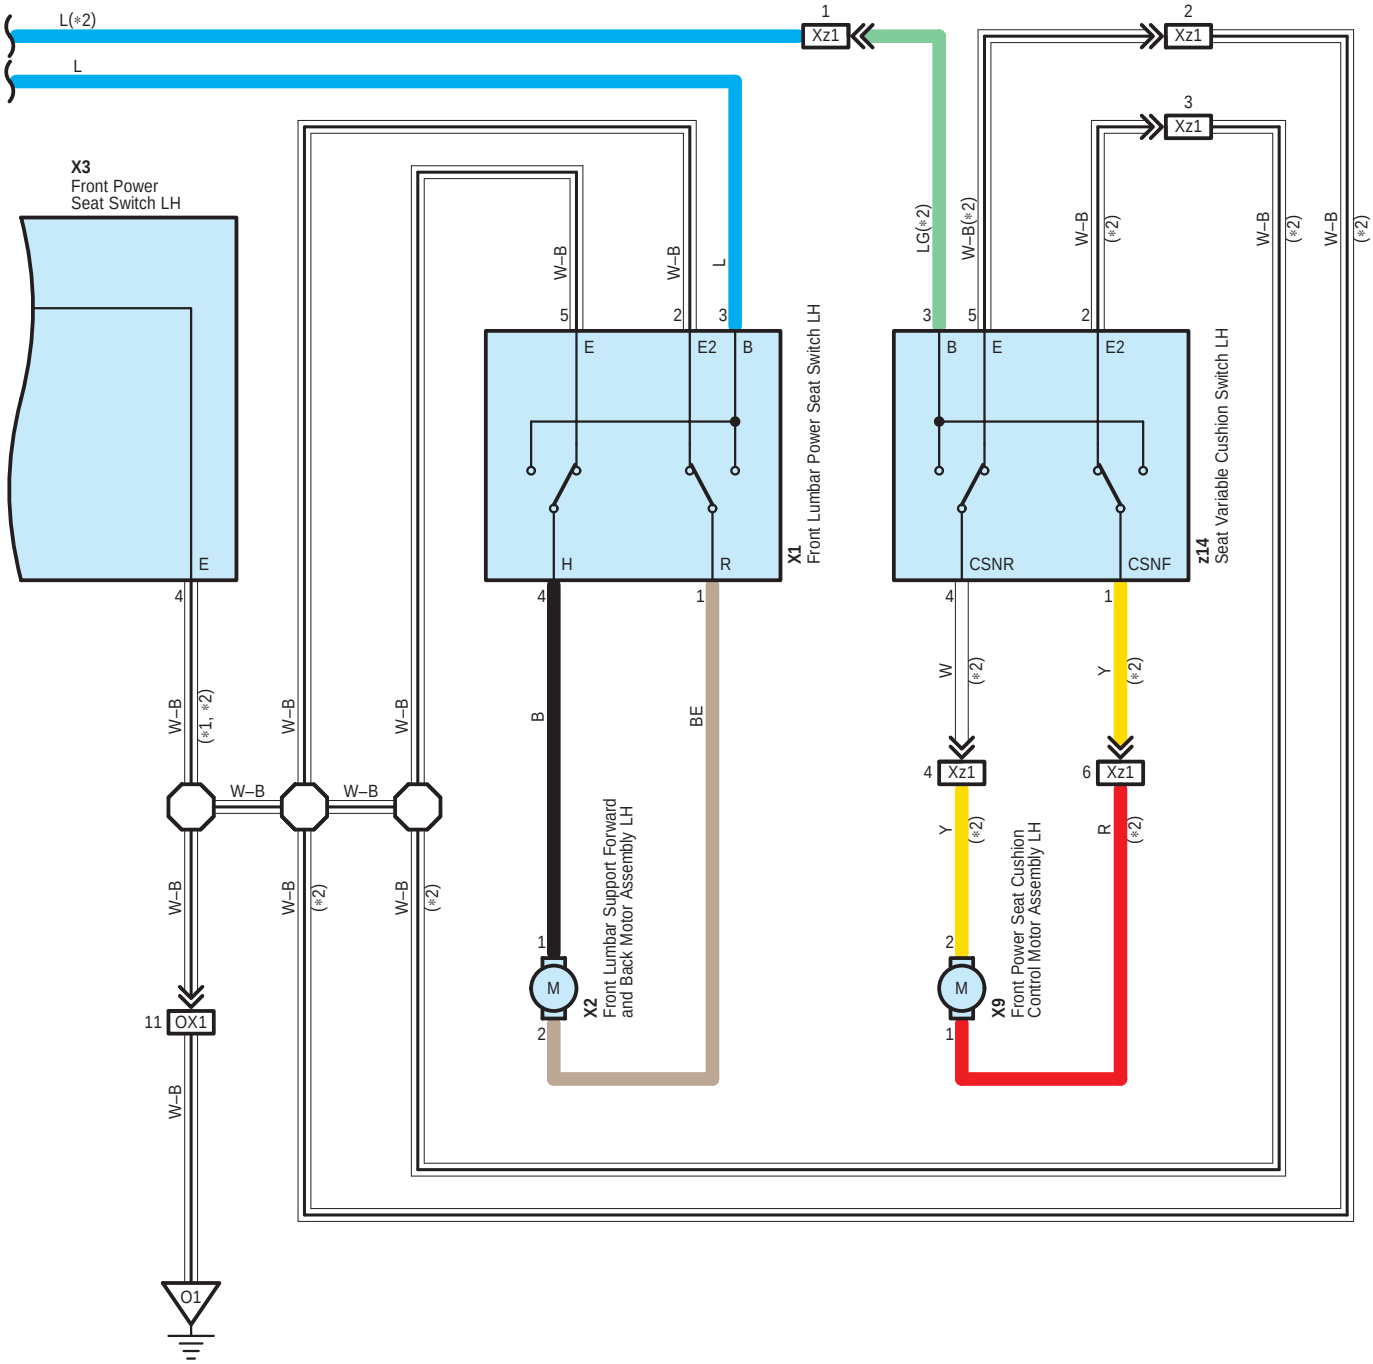
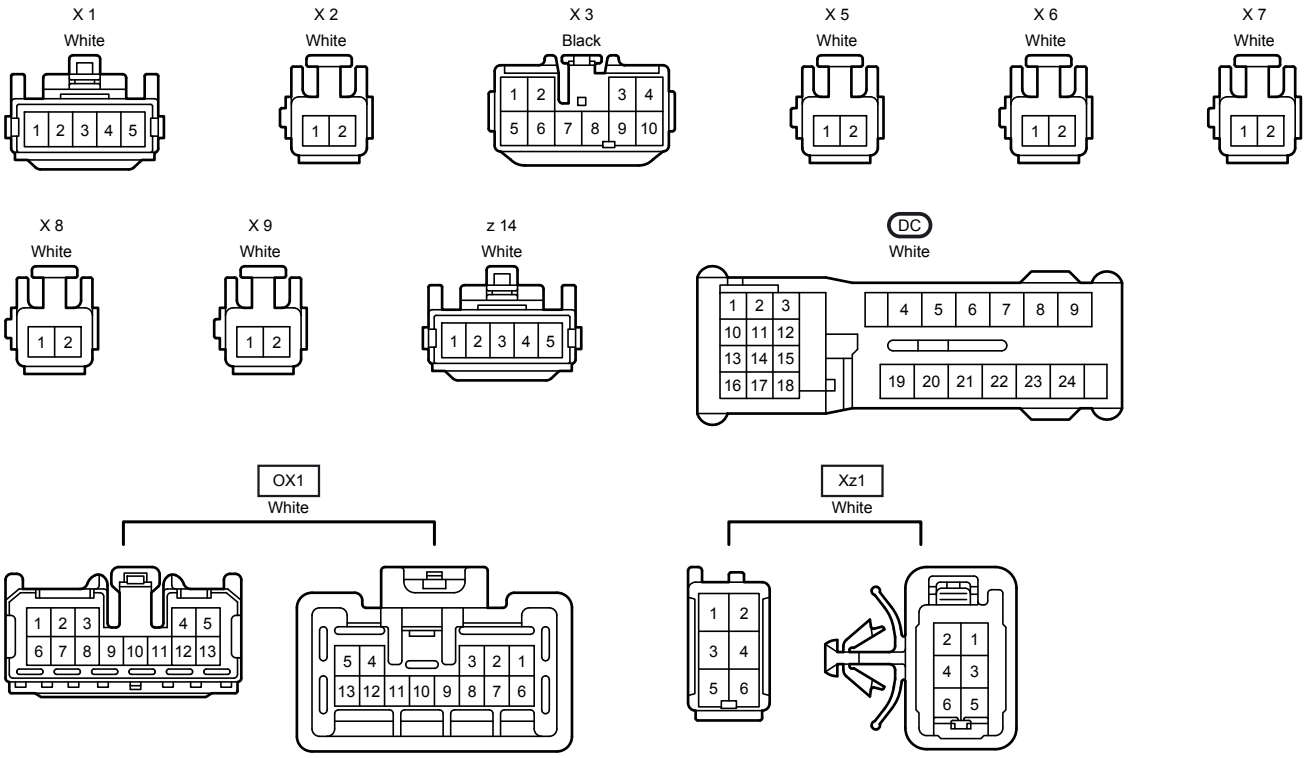

(BAT)
30A
FR P/SEAT LH
4 DC
L
10 OX1
L
L(*2)
L
L(*2)
L
L (*1, *2)
1
X3
Front Power Seat Switch LH
B
Rear
Reclining
Front
Down
Lift
Up
Rear
Slide
Front
Down
Front
Vertical
Up
RCLR
RCLF
LDWN
LUP
SLDR
SLDF
FDWN
FUP
2
3
8
7
6
9
5
10
B (*1, *2)
BE (*1, *2)
Y (*1, *2)
G (*1, *2)
R (*1, *2)
P (*1, *2)
W (*1, *2)
LG (*1, *2)
1
2
M
X8
Front Power Seat Reclining Position Motor Assembly LH
X7
Front Power Seat Lift Position Motor Assembly LH
X5
Front Power Seat Slide Position Motor Assembly LH
X6
Front Power Seat Vertical Position Motor Assembly LH

∗ 1 : 8 Way Control
∗ 2 : 10 Way Control




X 1
White
1 2 3 4 5
X 2
White
1 2
X 3
Black
1 2 3 4
5 6 7 8 9 10
X 5
White
1 2
X 6
White
1 2
X 7
White
1 2
X 8
White
1 2
X 9
White
1 2
z 14
White
1 2 3 4 5
DC
White
1 2 3
10 11 12
13 14 15
16 17 18
4 5 6 7 8 9
19 20 21 22 23 24
OX1
White
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6
Xz1
White
1 2
3 4
5 6
2 1
4 3
6 5