




* 1 : w/ Power Back Door
* 2 : w/o Power Back Door
(BAT)
7. 5A
ECU–B1
(IG)
7. 5A
ECU–IG
No. 2
(BAT)
30A
POWER
No. 5
H88(A), H89(B)
Junction
Connector
H88(A)
Junction
Connector
V10
Rear Wiper Motor Assembly
M
E
L
E
P
W
BECU
SIG
BDR
WIP–
WIP+
SGND
P
W
V2(A), V3(B)
Back Door ECU
GND
BKUL
BKL
KEYE
A UP
A DN
BDN
BUP
V19(A)
Junction
Connector
O40
Junction
Connector
O1
V18
Tail Gate Control
Switch Assembly
UL
L
E
H9
Back Door Power Window
Regulator Switch Assembly
A–UP
A–DN
DOWN
UP
H83
Junction
Connector
H3



H2(B), H3(C), H4(D)
Main Body ECU
LIN2
RWSW
RWON
RWIN
GND2
GND1
RWMR
10 B
7 D
9 C
2 C
4
5
14 B
V
Y
W
L
BE
19 A
62 DD
H79(A), H80(B)
Junction Connector
12 B
5 B
7 A
6 A
R
WR
+1R
C1R
EW
Rear Wash Switch
Rear Wiper Switch
Washer
OFF
LO
HI
On+Washer
12 OH3
2 AH9
BE
BR
9 OO2
H14(A), H15(B)
Windshield Wiper Switch Assembly
2 A
W
4 VO3
Y
16 A
MPX1
V2(A), V3(B)
Back Door ECU
W–B
4
11
H83
Junction Connector
5
10
H85
Junction Connector
H3
H1
H2


H2(B), H3(C), H4(D)
Main Body ECU
BECU
ALTB
IG
ACC
26
6
15
22
13
DB
(ACC)
(IG)
(BAT)
(BAT)
7. 5A ACC
7. 5A ECU–IG No. 2
25A DR/LCK
7. 5A ECU–B1
2
1
GR
GR
(BAT)
20A WSH
6
DB
Y
3
A
A48(A), A49(B) Junction Connector
4
B
3
B
W
L
1
1
1
5
RR WSH Relay
2
3
1
1
BR
B
1
M
A42 Rear Washer Motor and Pump Assembly
2
W–B
A3


A 42
Black

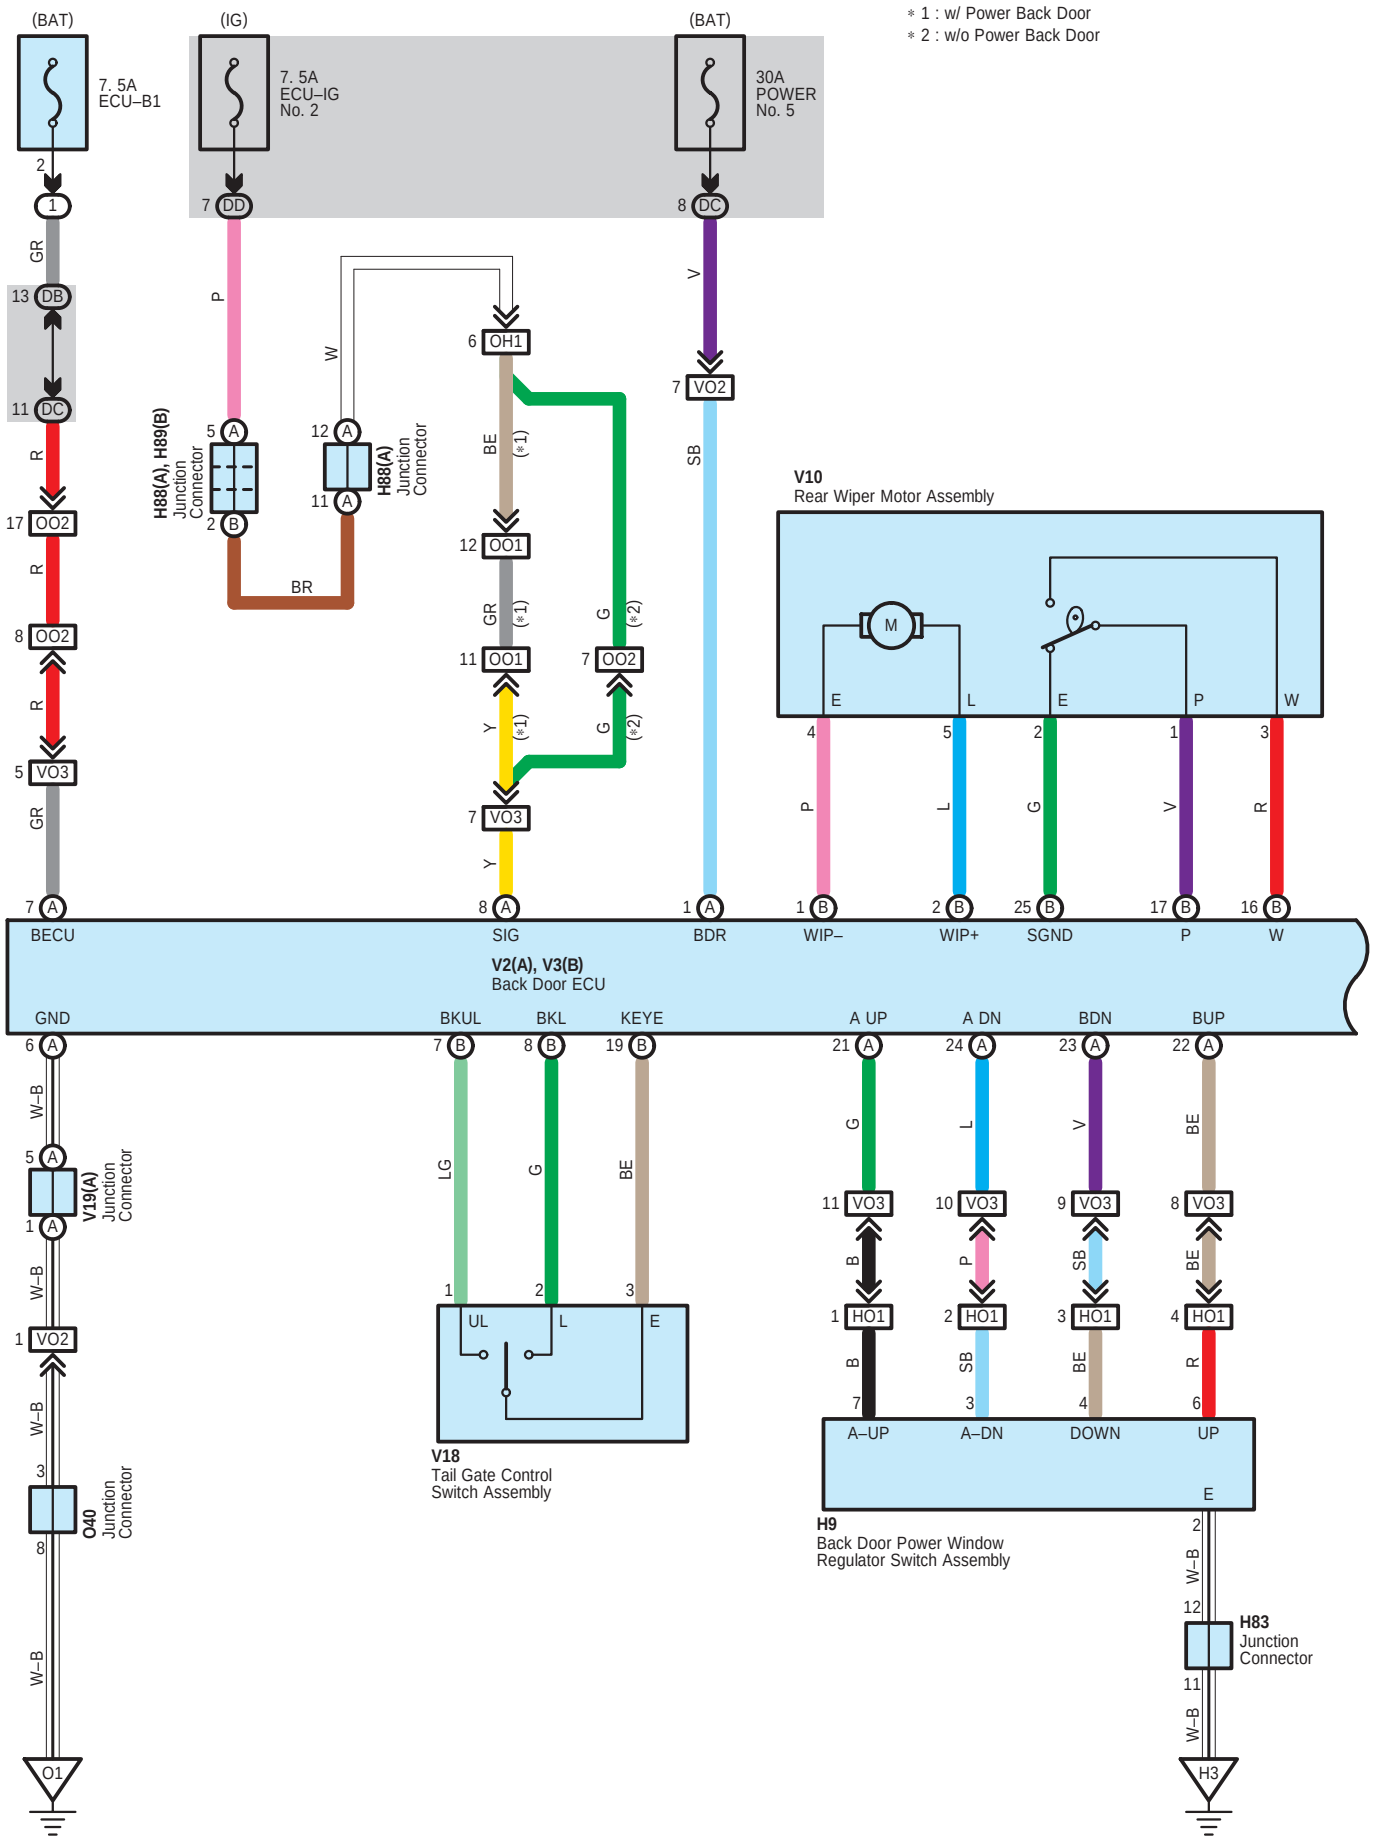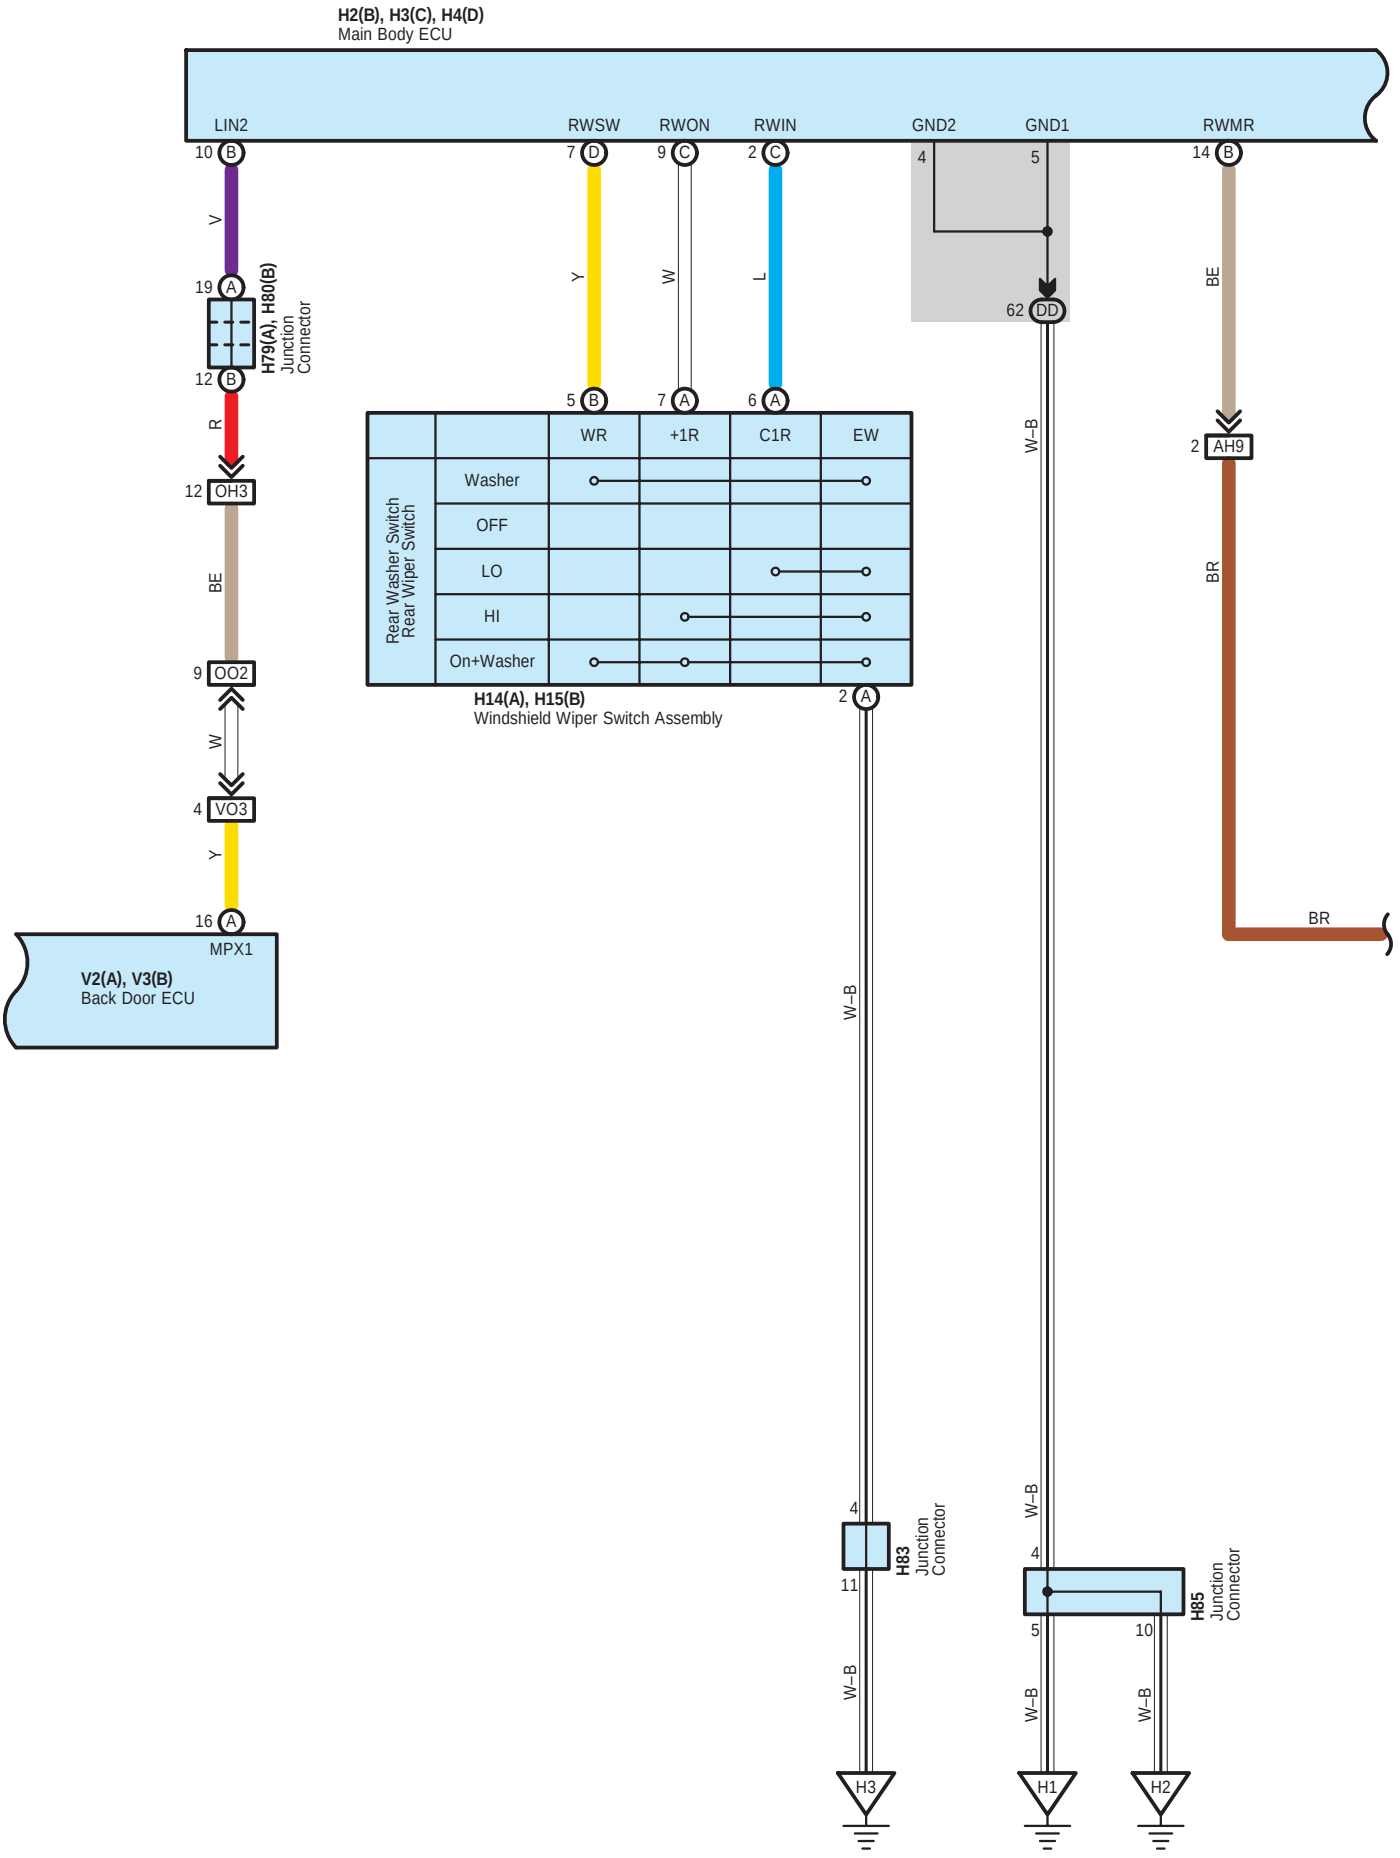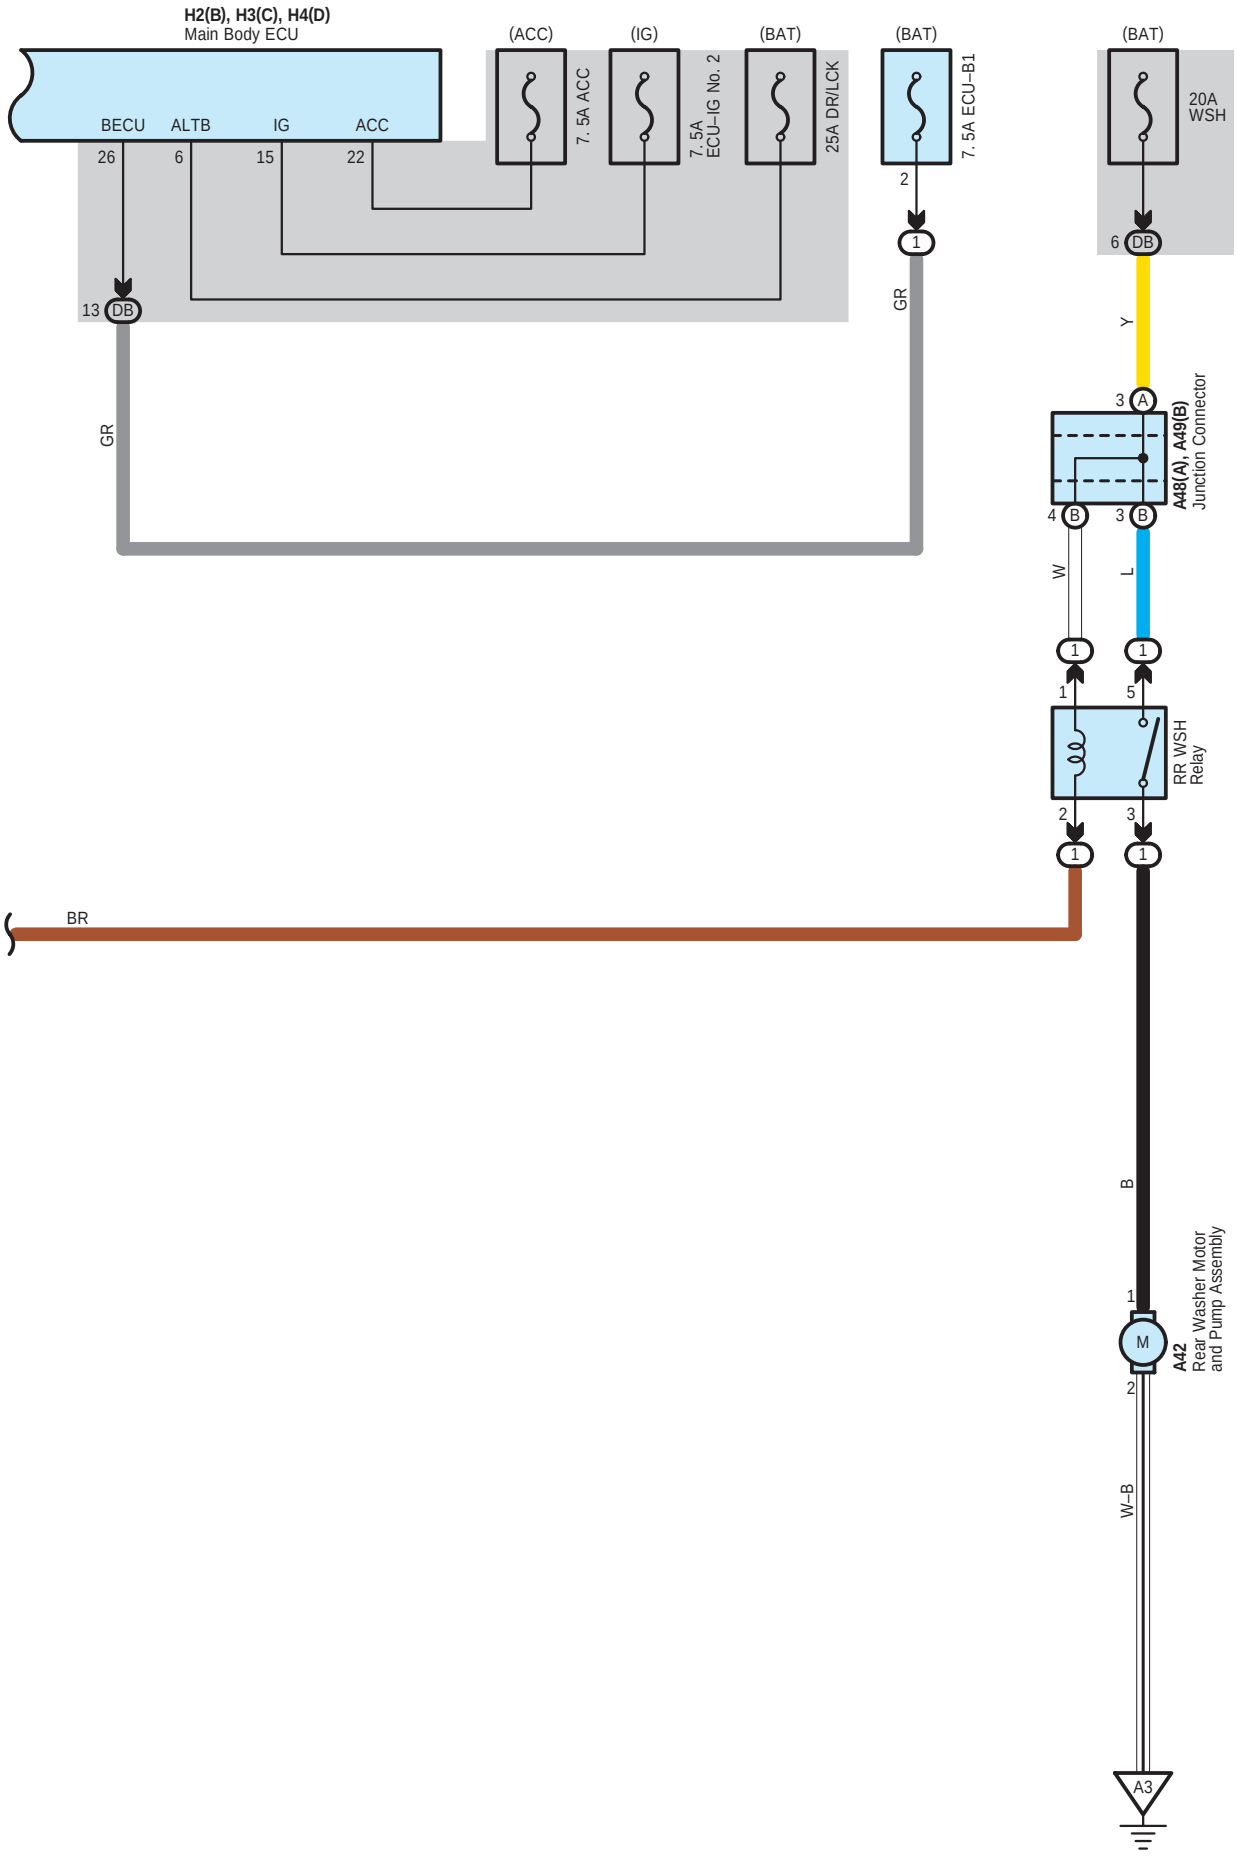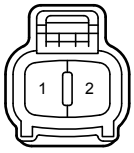


A 48
White

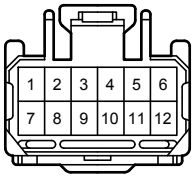


A 49
White

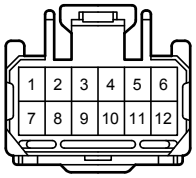


H 2
White

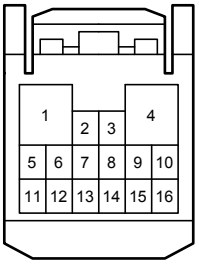


H 3
White

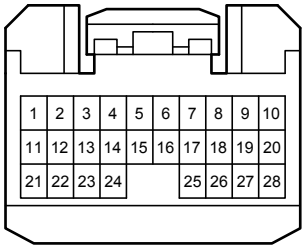


H 4
White

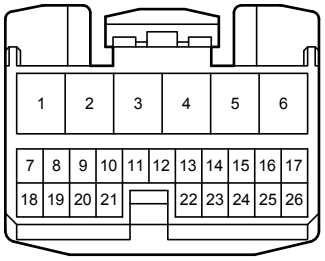


H 9
White

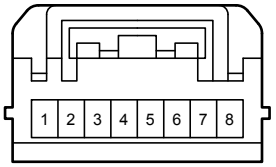


H 14
White

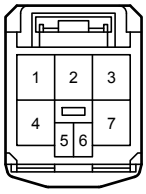


H 15
White

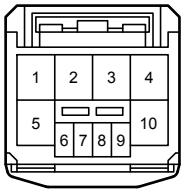


H 79
Black

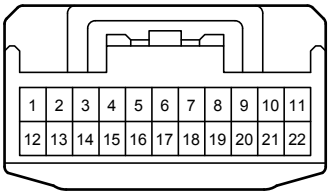


H 80
Black

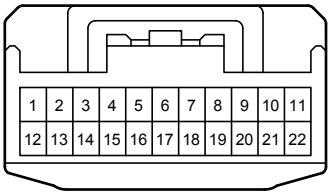


H 83
Gray

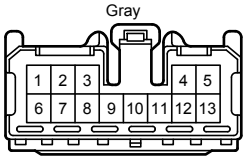


H 85
White

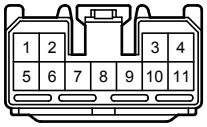


H 88
White

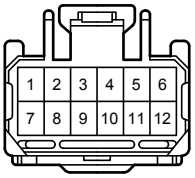


H 89
White

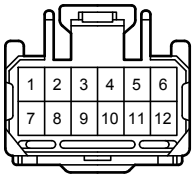


O 40
White

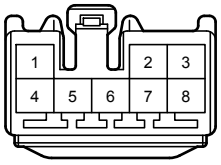

V 2
White

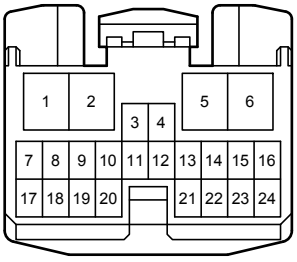


V 3
White

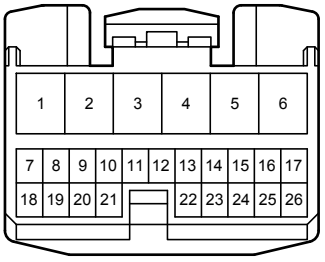


V 10
Gray




V 18
White

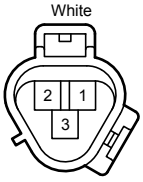


V 19
Gray

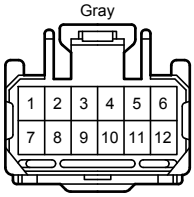


DB
White

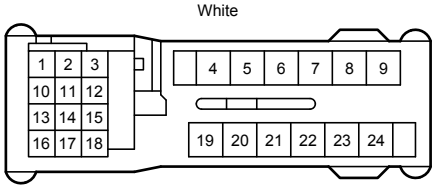


DC
White

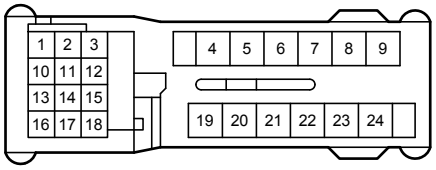


DD
White

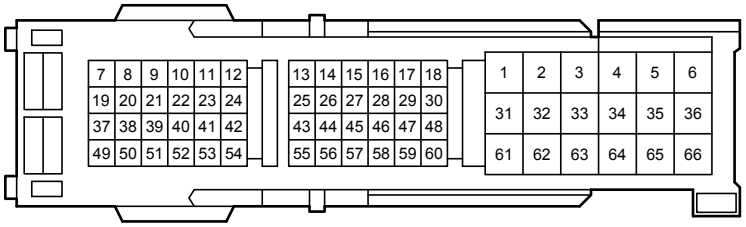


AH9
Gray

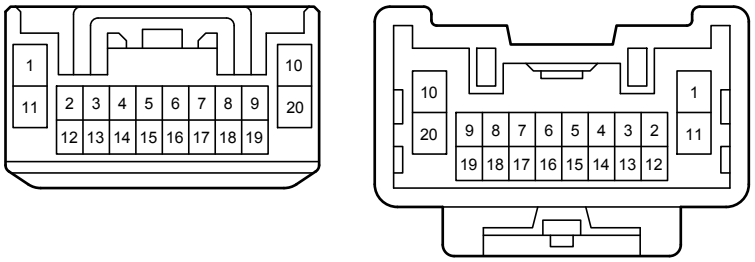


HO1
White

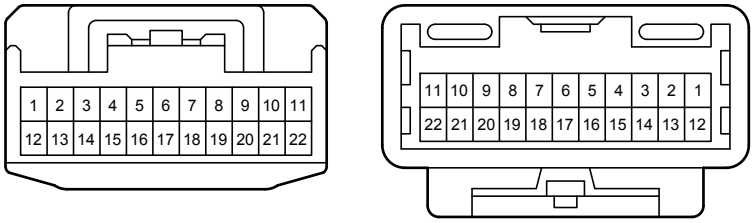


OH1
Black

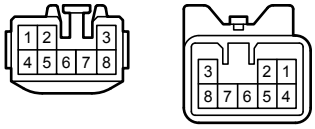


OH3
White

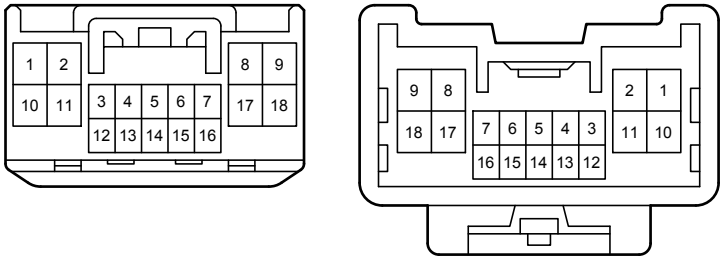


OO1
White

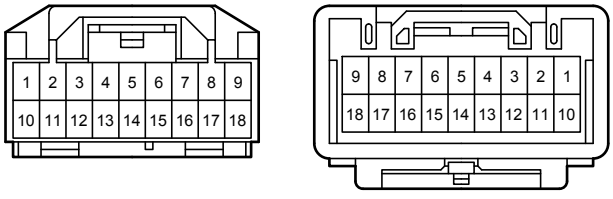

OO2
White

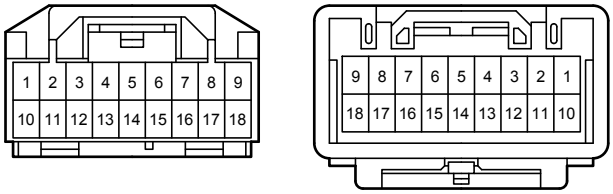

VO2
White

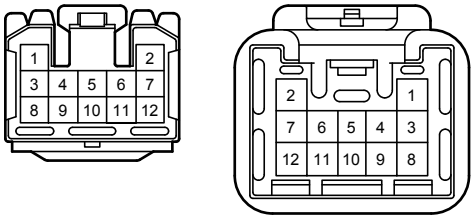

VO3
White

