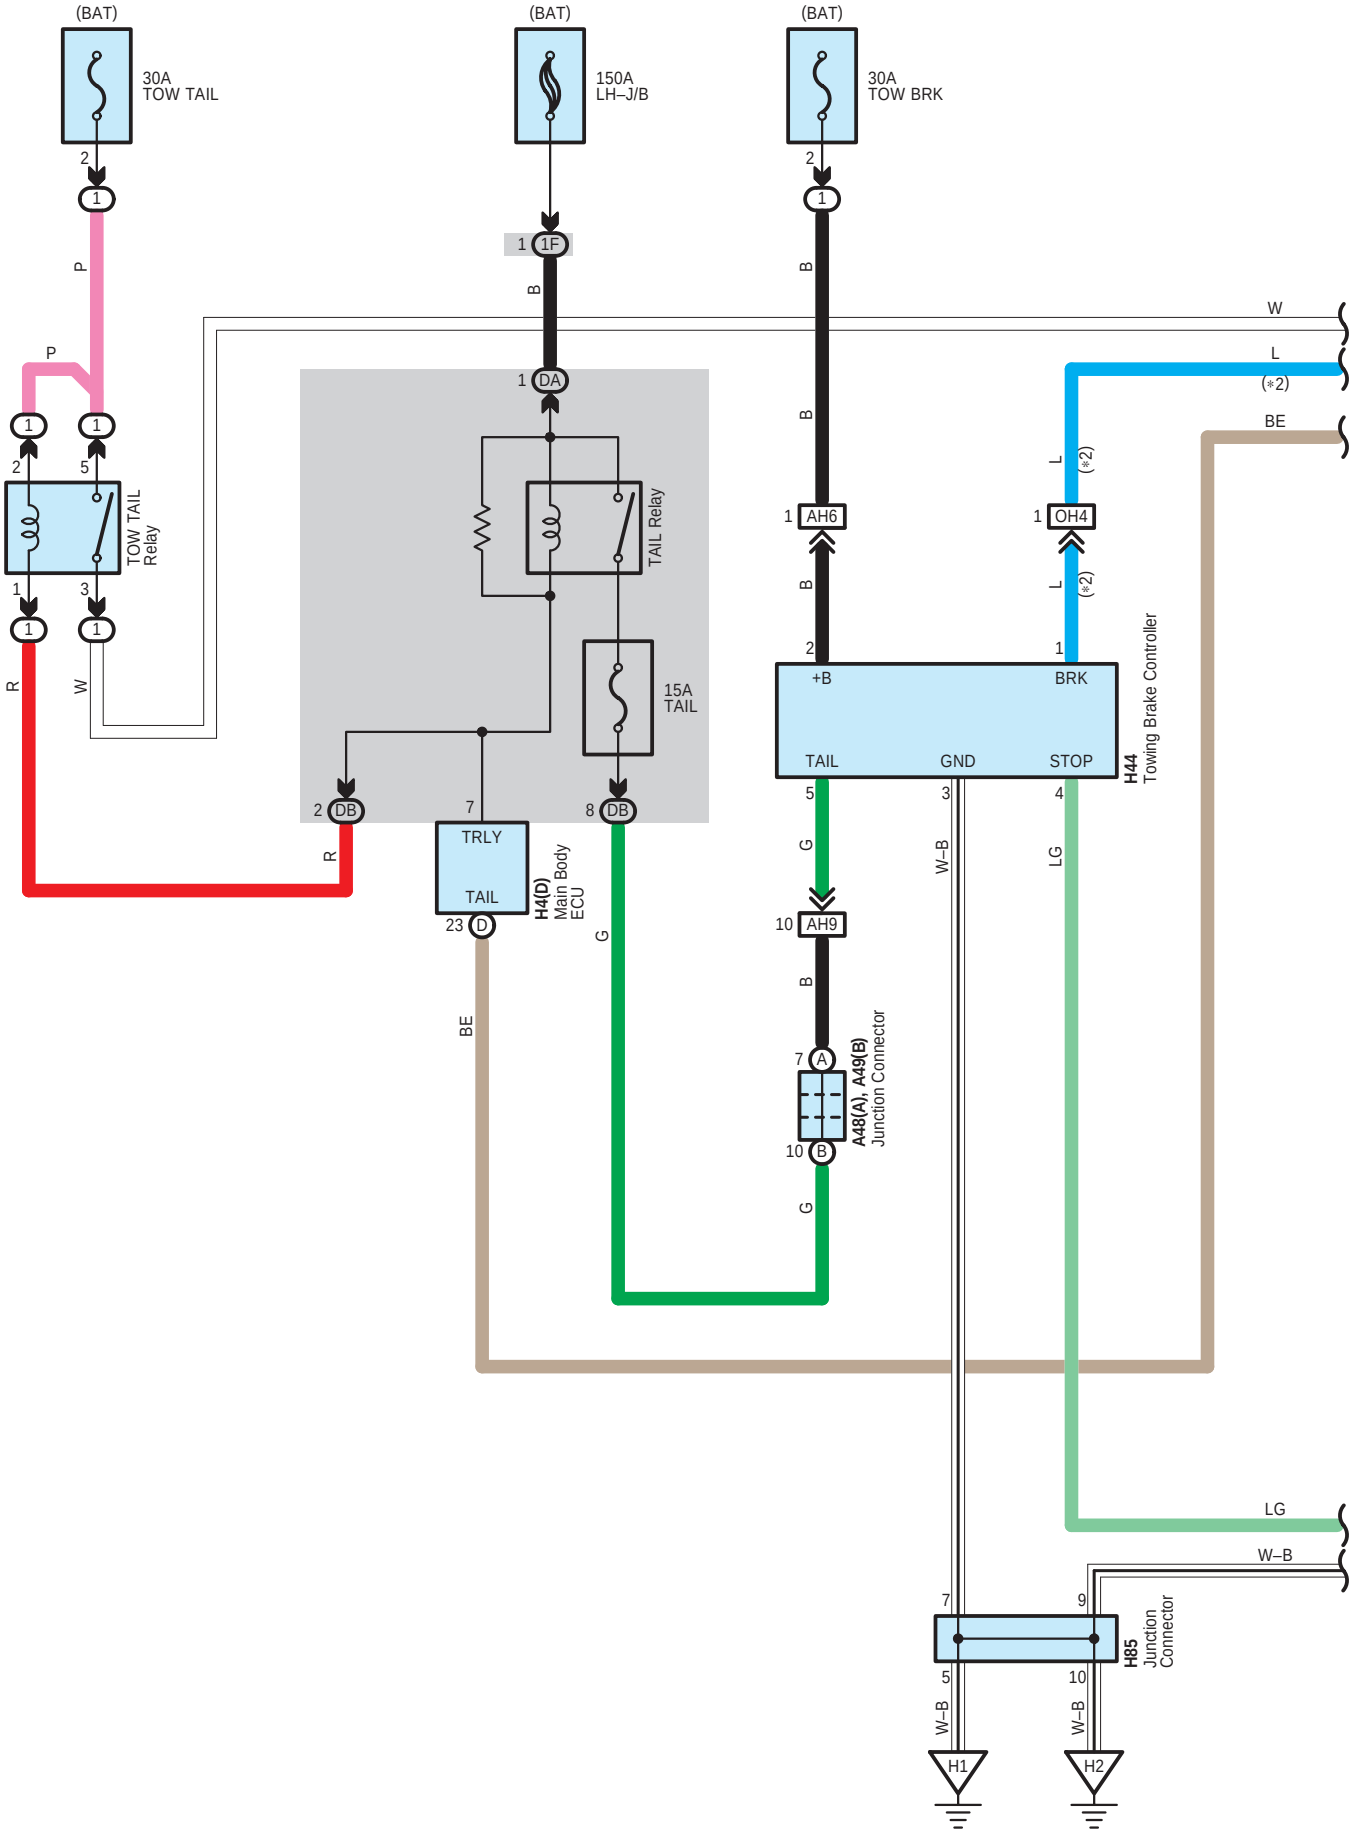
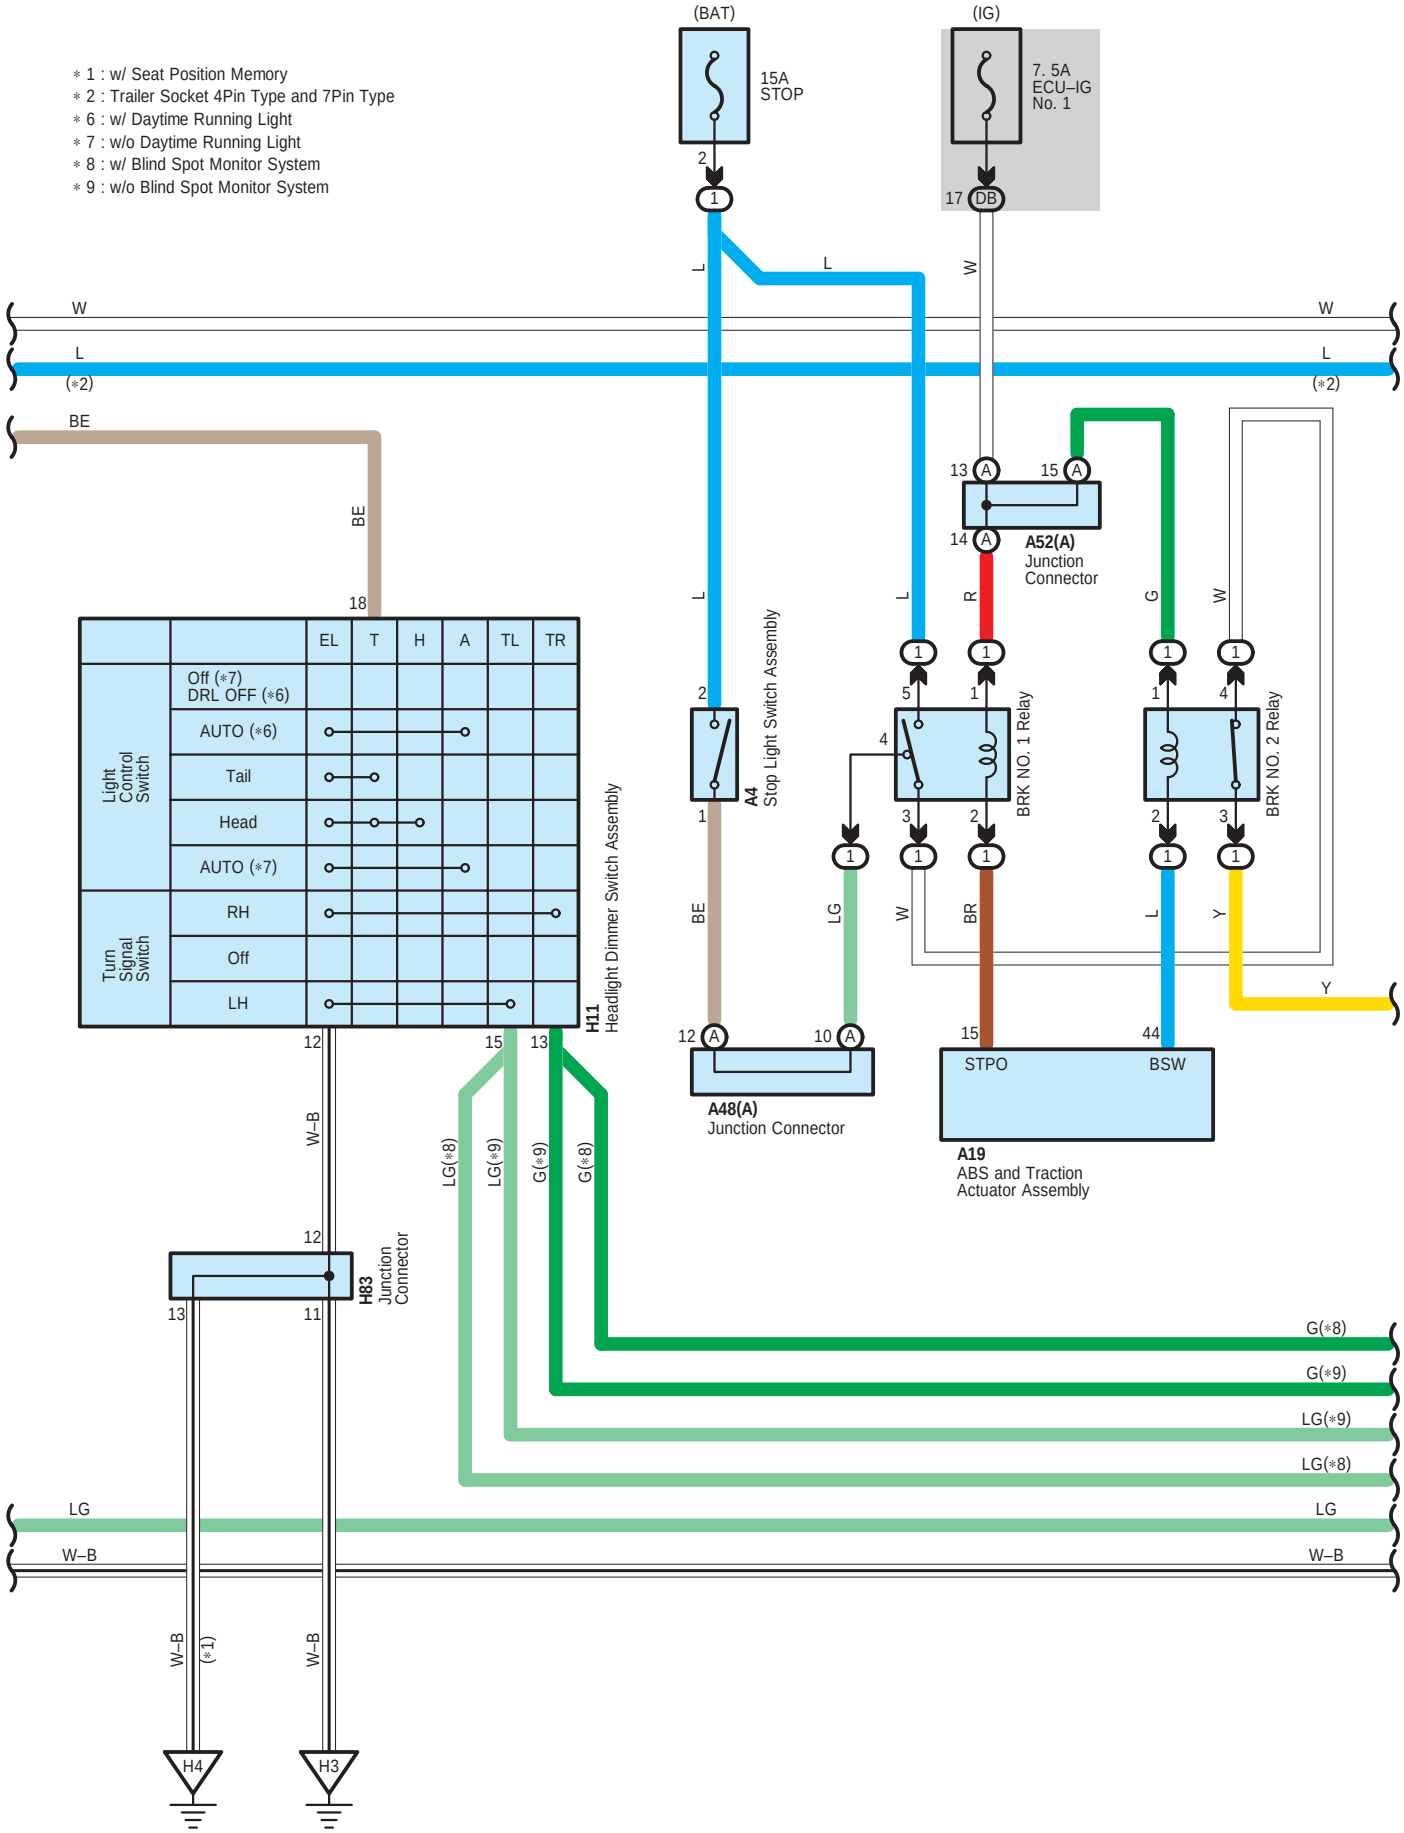
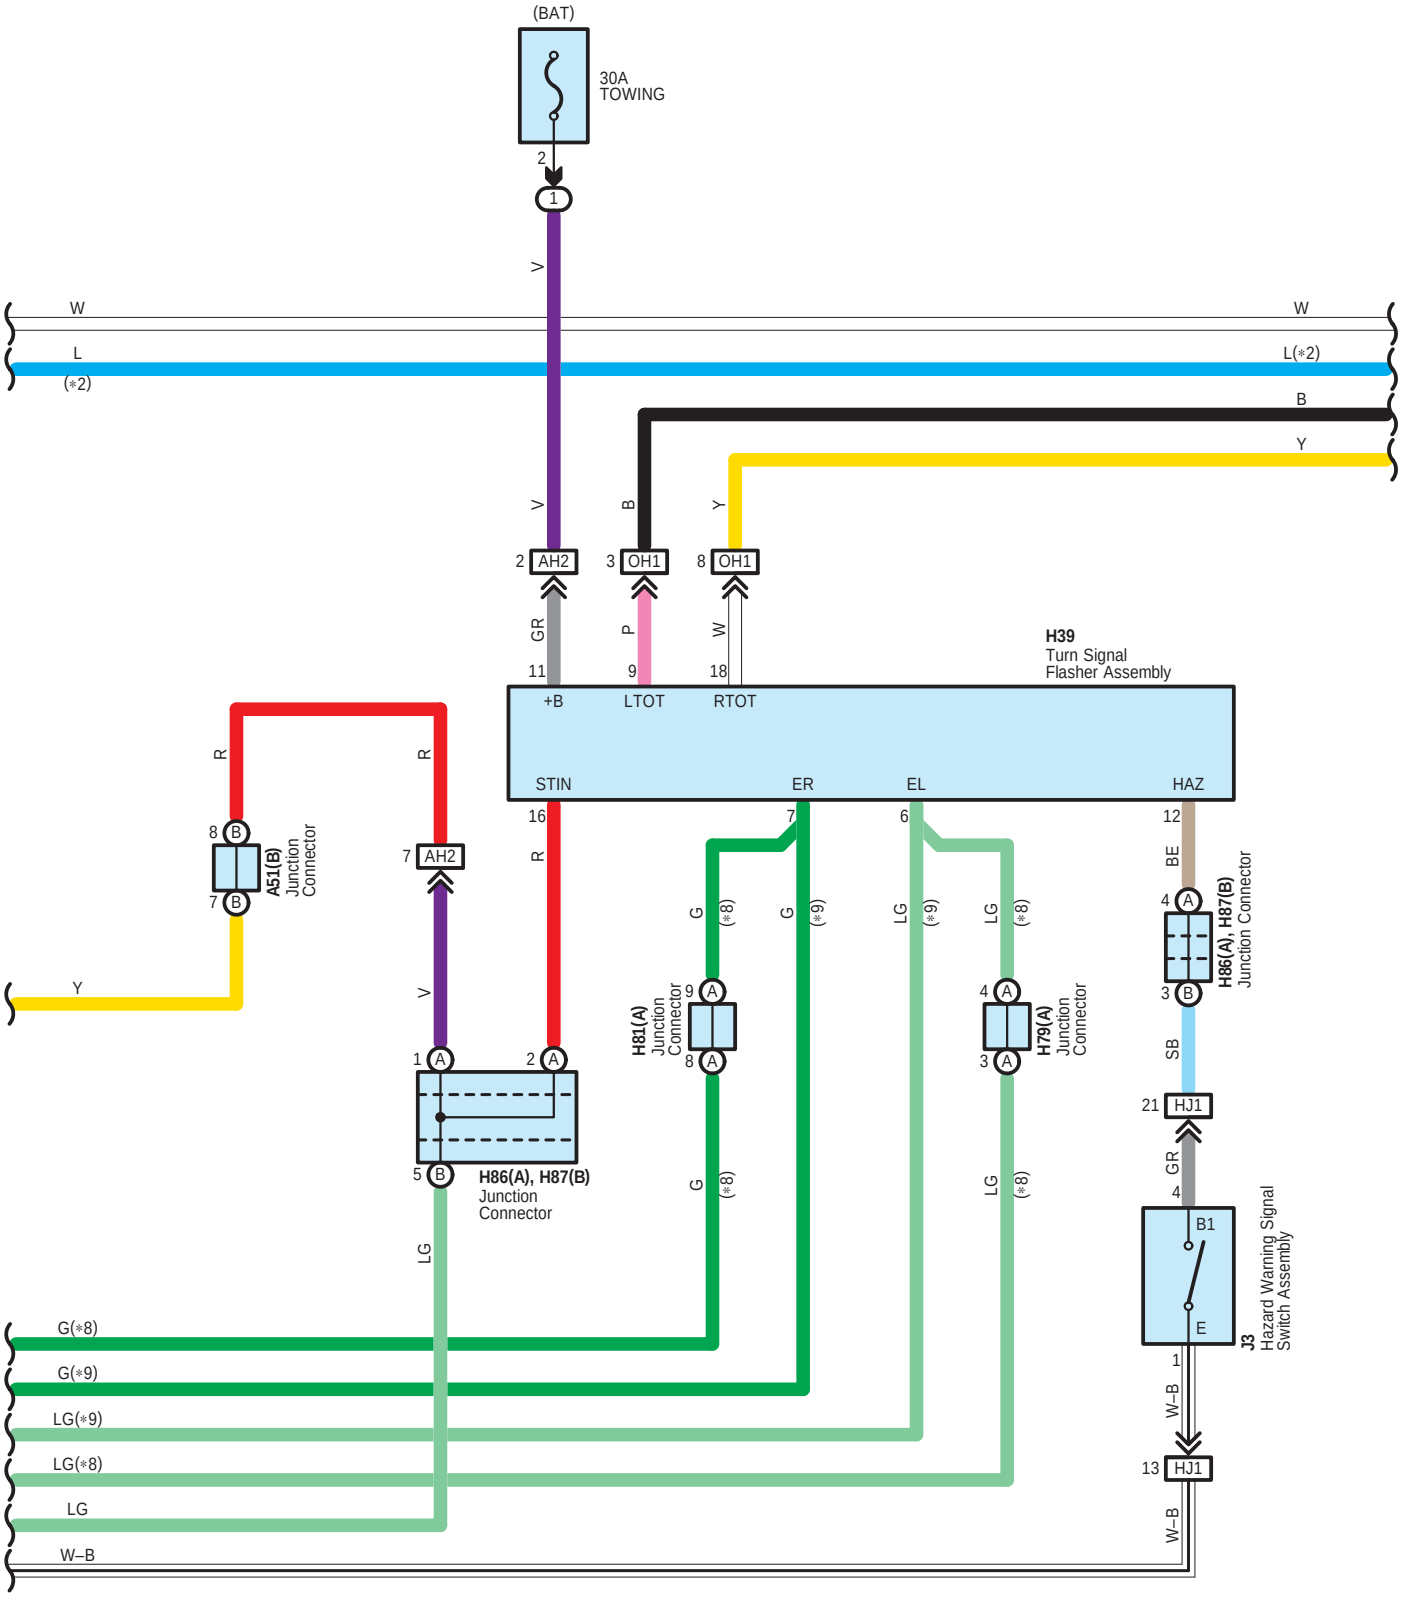
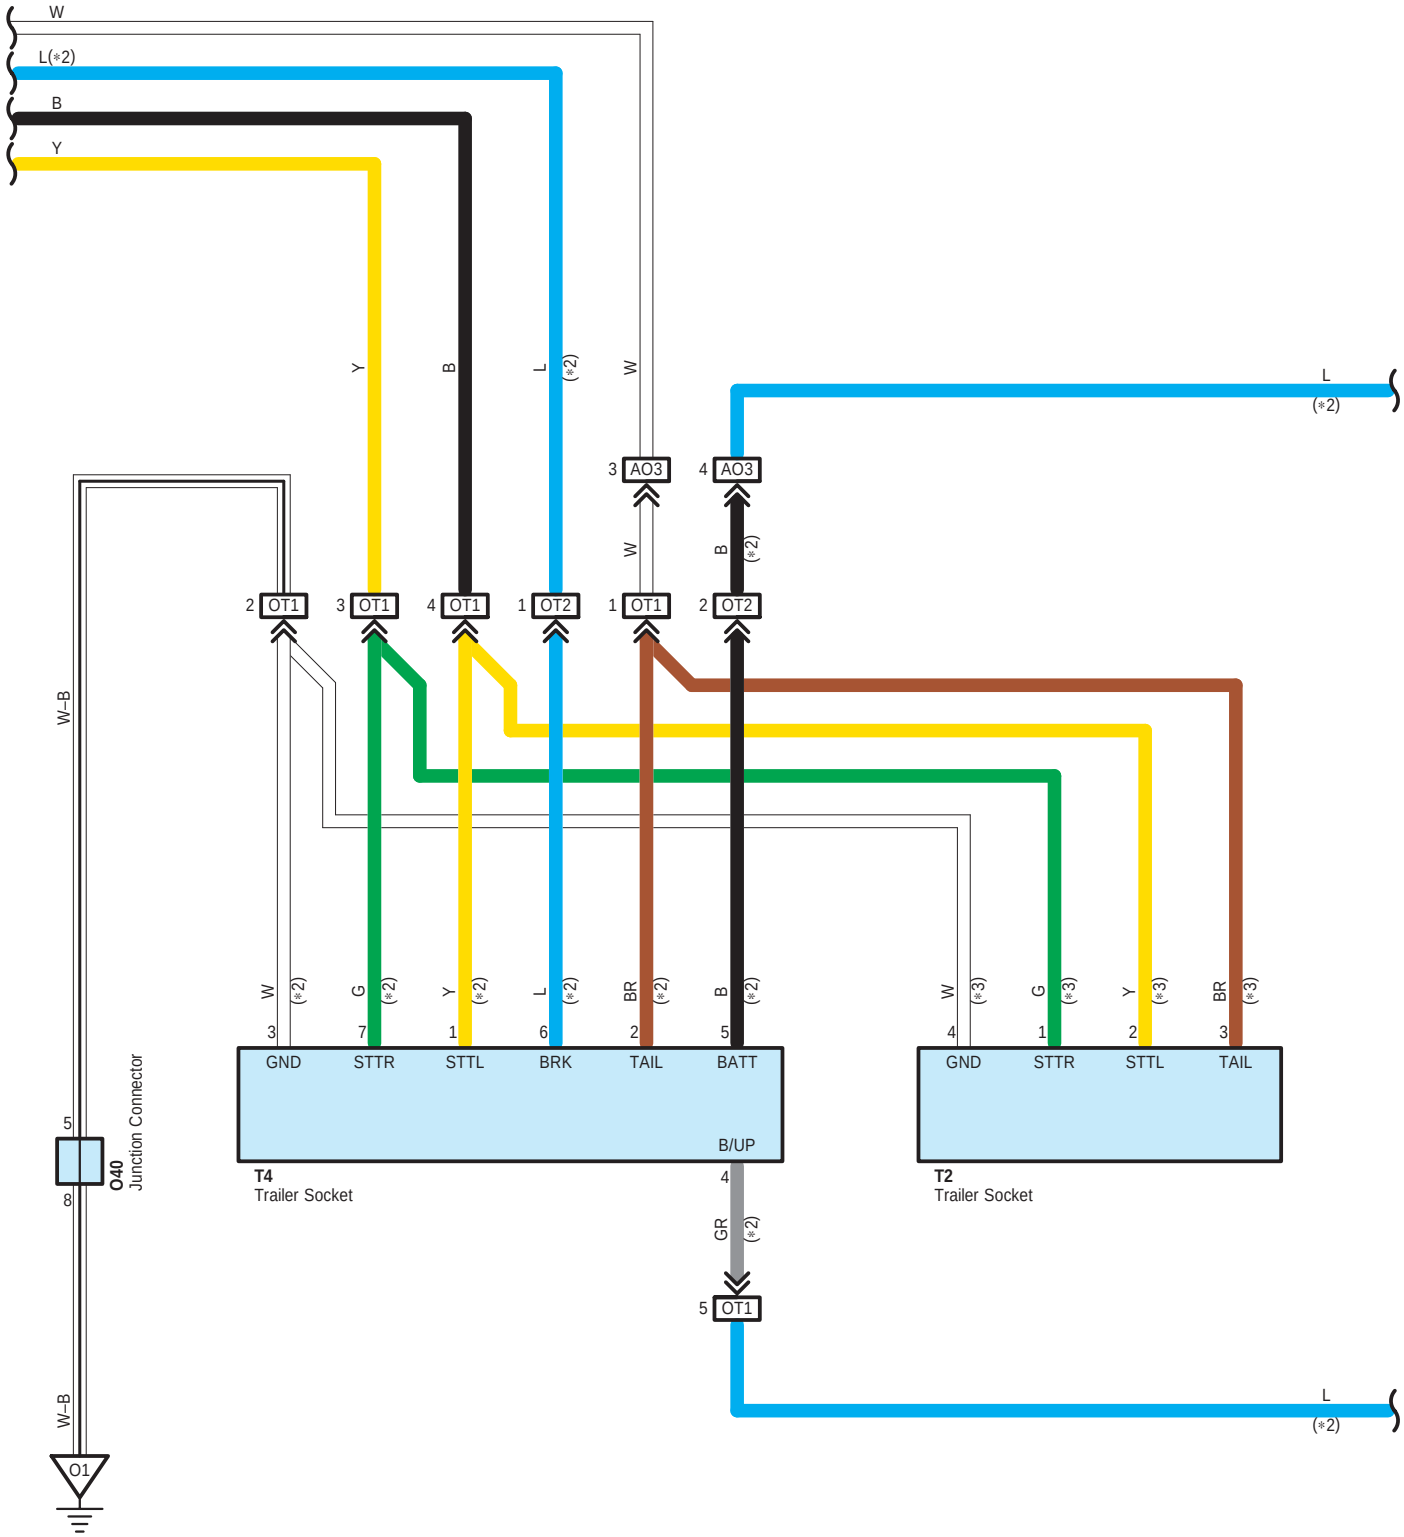
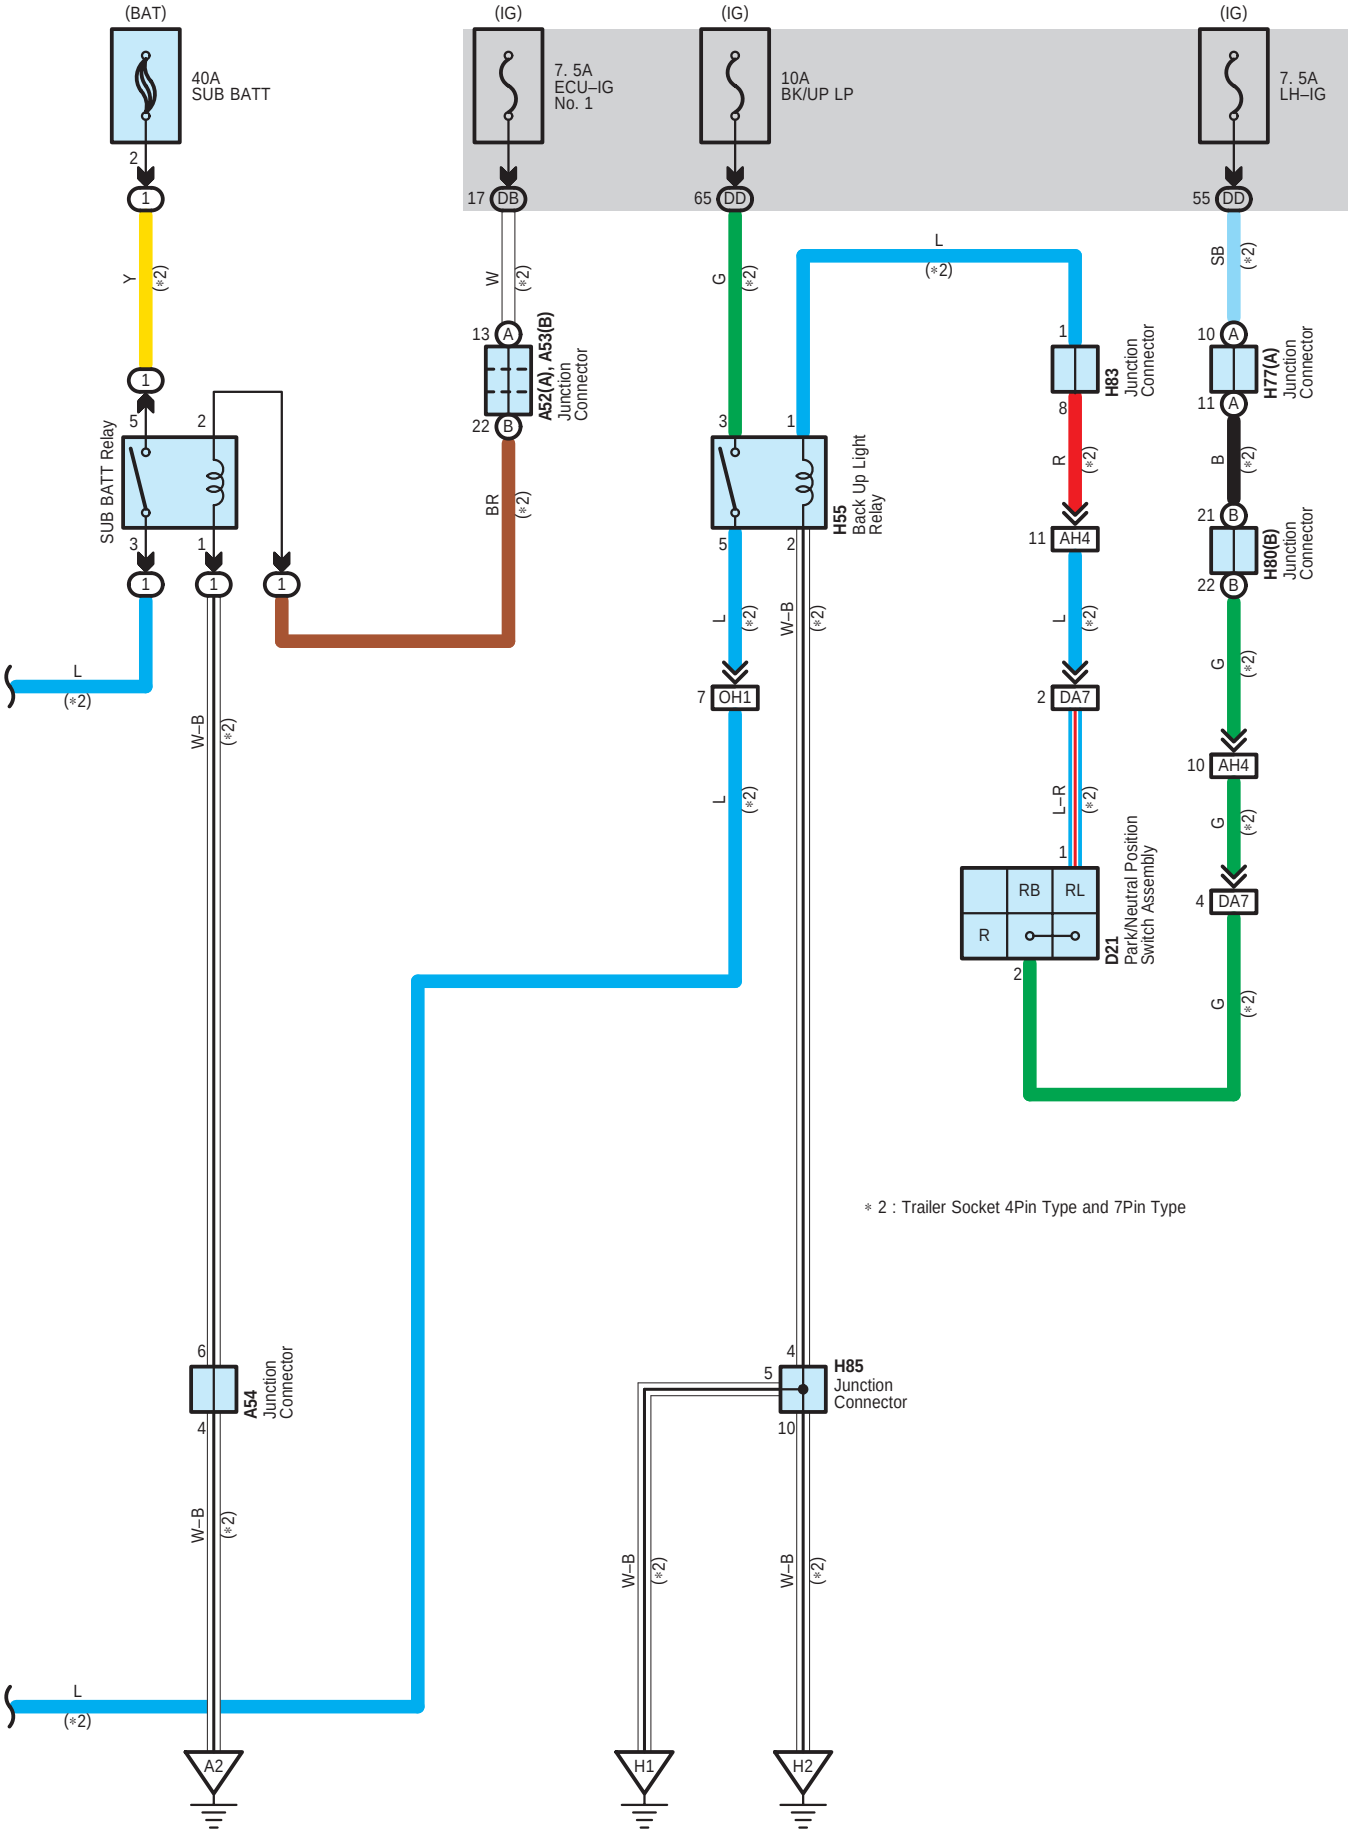

(BAT)
30A
TOW TAIL
(BAT)
150A
LH–J/B
(BAT)
30A
TOW BRK
TOW TAIL
Relay
TAIL Relay
15A
TAIL
TRLY
TAIL
H4(D)
Main Body
ECU
+B
BRK
TAIL
GND
STOP
H44
Towing Brake Controller
AH6
AH9
OH4
A48(A), A49(B)
Junction Connector
H85
Junction
Connector
H1
H2
W
L
(*2)
BE
LG
W–B
P
B
R
G


∗ 1 : w/ Seat Position Memory
∗ 2 : Trailer Socket 4Pin Type and 7Pin Type
∗ 6 : w/ Daytime Running Light
∗ 7 : w/o Daytime Running Light
∗ 8 : w/ Blind Spot Monitor System
∗ 9 : w/o Blind Spot Monitor System
(BAT)
(IG)
15A STOP
7. 5A ECU–IG No. 1
A52(A) Junction Connector
A4 Stop Light Switch Assembly
BRK NO. 1 Relay
BRK NO. 2 Relay
H11 Headlight Dimmer Switch Assembly
Light Control Switch
Turn Signal Switch
Off (∗7) DRL OFF (∗6)
AUTO (∗6)
Tail
Head
AUTO (∗7)
RH
Off
LH
EL
T
H
A
TL
TR
A48(A) Junction Connector
A19 ABS and Traction Actuator Assembly
STPO
BSW
H83 Junction Connector
H4
H3
W
L
(∗2)
BE
R
G
LG
W–B
LG(∗8)
LG(∗9)
G(∗9)
G(∗8)
(∗1)

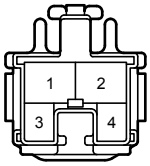

(BAT)
30A
TOWING
2
1
V
W
L
(*2)
W
L(*2)
B
Y
V
B
Y
2 AH2
3 OH1
8 OH1
GR
P
W
11
9
18
+B
LTOT
RTOT
H39
Turn Signal
Flasher Assembly
STIN
ER
EL
HAZ
16
7
6
12
R
R
8 B
7 B
A51(B)
Junction
Connector
7 AH2
Y
V
1 A
2 A
5 B
H86(A), H87(B)
Junction
Connector
LG
H81(A)
Junction
Connector
9 A
8 A
G
(*8)
G
(*9)
G
(*8)
H79(A)
Junction
Connector
4 A
3 A
LG
(*9)
LG
(*8)
LG
(*8)
BE
4 A
3 B
H86(A), H87(B)
Junction Connector
SB
21 HJ1
GR
4
B1
E
J3
Hazard Warning Signal
Switch Assembly
1
W–B
13 HJ1
W–B
G(*8)
G(*9)
LG(*9)
LG(*8)
LG
W–B

＊2 : Trailer Socket 4Pin Type and 7Pin Type
＊3 : Trailer Socket 4Pin Type
＊8 : w/ Blind Spot Monitor System
＊9 : w/o Blind Spot Monitor System

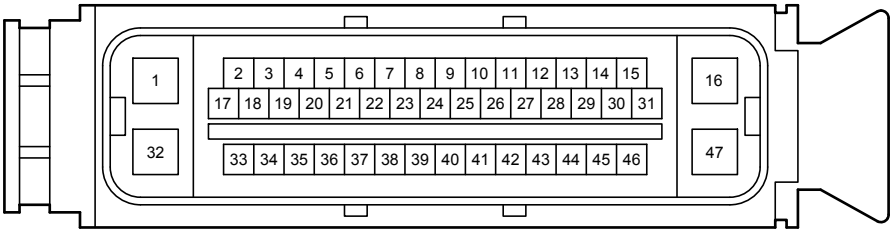



(BAT)
40A
SUB BATT
2
1
Y
(*2)
1
SUB BATT Relay
5
2
3
1
1
1
1
L
(*2)
W–B
(*2)
(IG)
7. 5A
ECU–IG
No. 1
17 DB
W
(*2)
13 A
22 B
A52(A), A53(B)
Junction
Connector
BR
(*2)
(IG)
10A
BK/UP LP
65 DD
G
(*2)
L
(*2)
3
1
5
2
H55
Back Up Light
Relay
L
(*2)
W–B
(*2)
7 OH1
L
(*2)
(IG)
7. 5A
LH–IG
55 DD
SB
(*2)
1
8
H83
Junction
Connector
R
(*2)
11 AH4
L
(*2)
2 DA7
L–R
(*2)
1
RB
RL
R
2
D21
Park/Neutral Position
Switch Assembly
10 A
11 A
H77(A)
Junction
Connector
B
(*2)
21 B
22 B
H80(B)
Junction
Connector
G
(*2)
10 AH4
G
(*2)
4 DA7
G
(*2)
6
4
A54
Junction
Connector
W–B
(*2)
L
(*2)
A2
4
5
10
H85
Junction
Connector
W–B
(*2)
W–B
(*2)
H1
H2
* 2 : Trailer Socket 4Pin Type and 7Pin Type

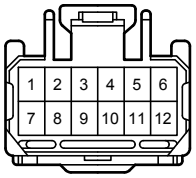
A 4
White



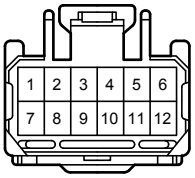

A 19
Black



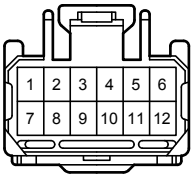

A 48
White



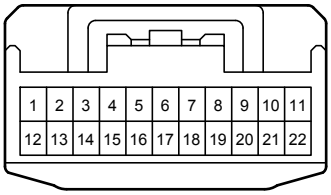

A 49
White



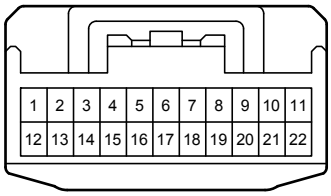

A 51
White



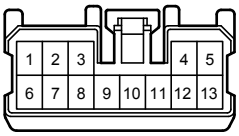

A 52
White



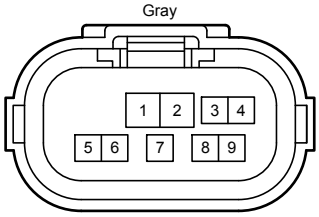

A 53
White



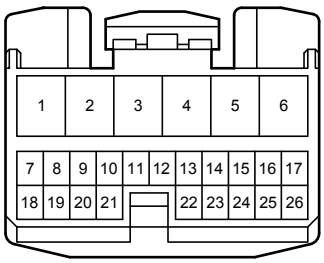

A 54
White



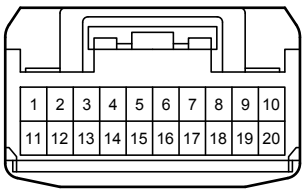

D 21
Gray



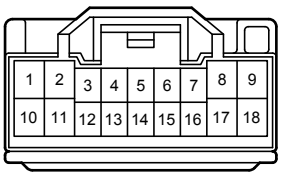

H 4
White



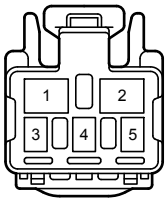

H 11
White



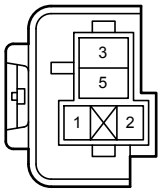

H 39
White



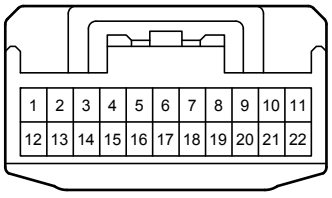

H 44
White



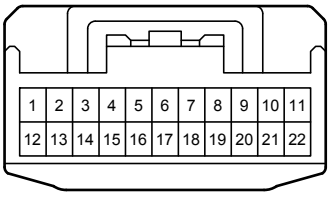

H 55
White



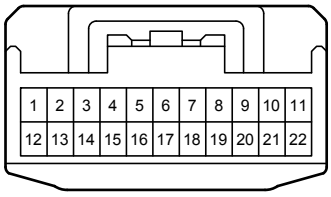

H 77
Black



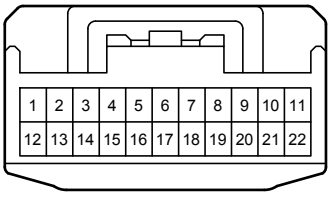

H 79
Black



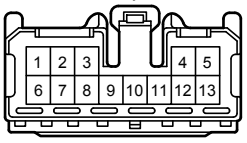

H 80
Black



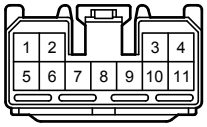

H 81
White



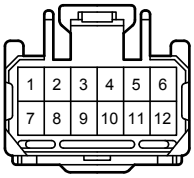

H 83
Gray



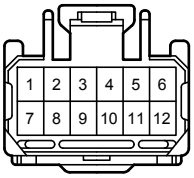
H 85
White



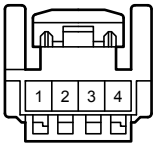

H 86
White



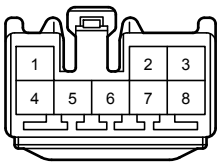

H 87
White



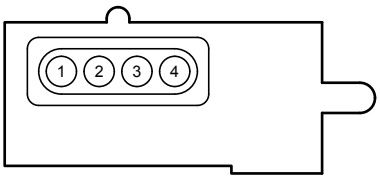

J 3
Gray



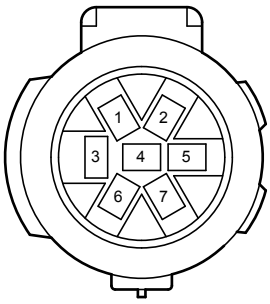

O 40
White





T 2
Black





T 4
Black



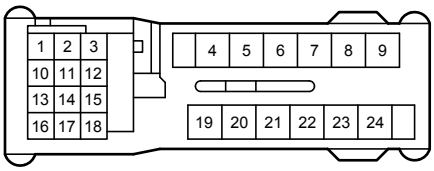

1F



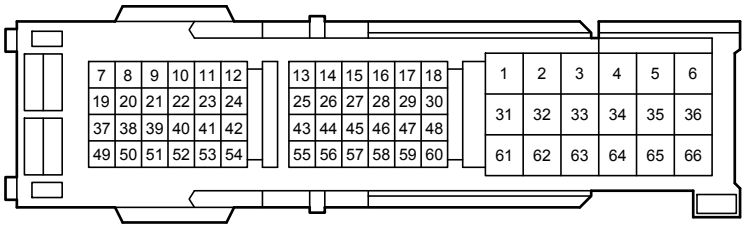

DA
White



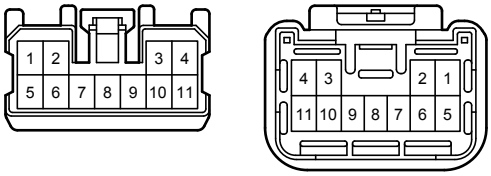

DB
White



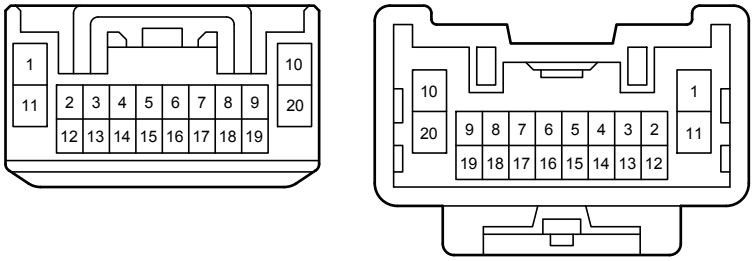

DD
White



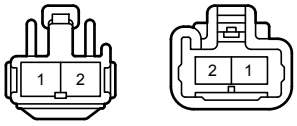

AH2
White



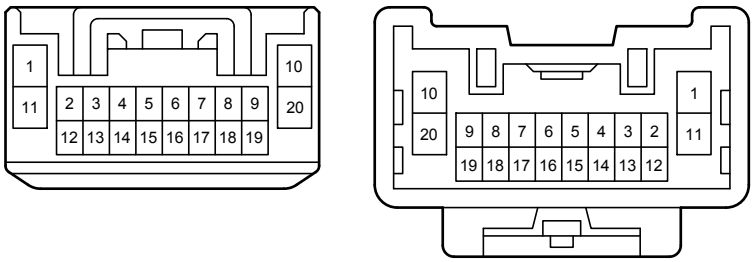
AH4
White



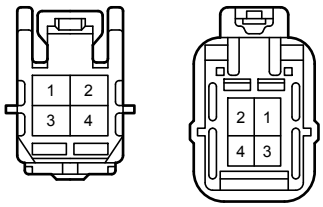

AH6
Gray



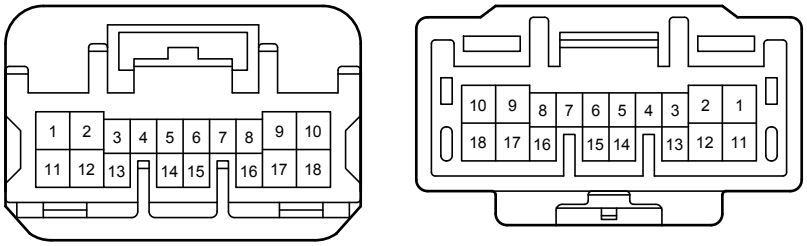

AH9
Gray



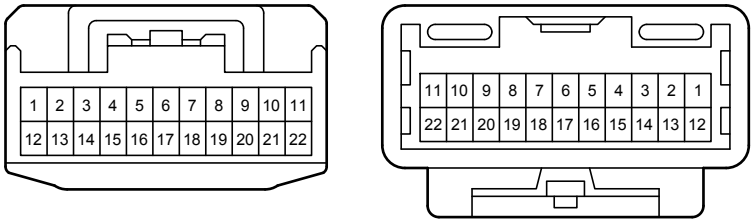

AO3
White



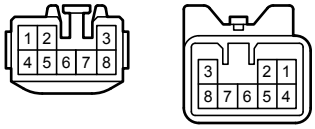

DA7
Gray



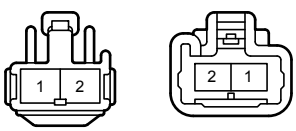

HJ1
White



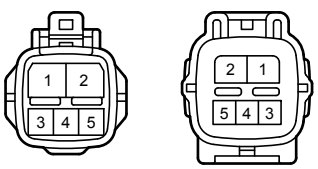

OH1
Black




OH4
White




OT1
Gray




OT2
Gray

