
# BODY LOWER BACK OUTER PANEL (ASSY)


F15017-A

## REPLACEMENT

## REMOVAL

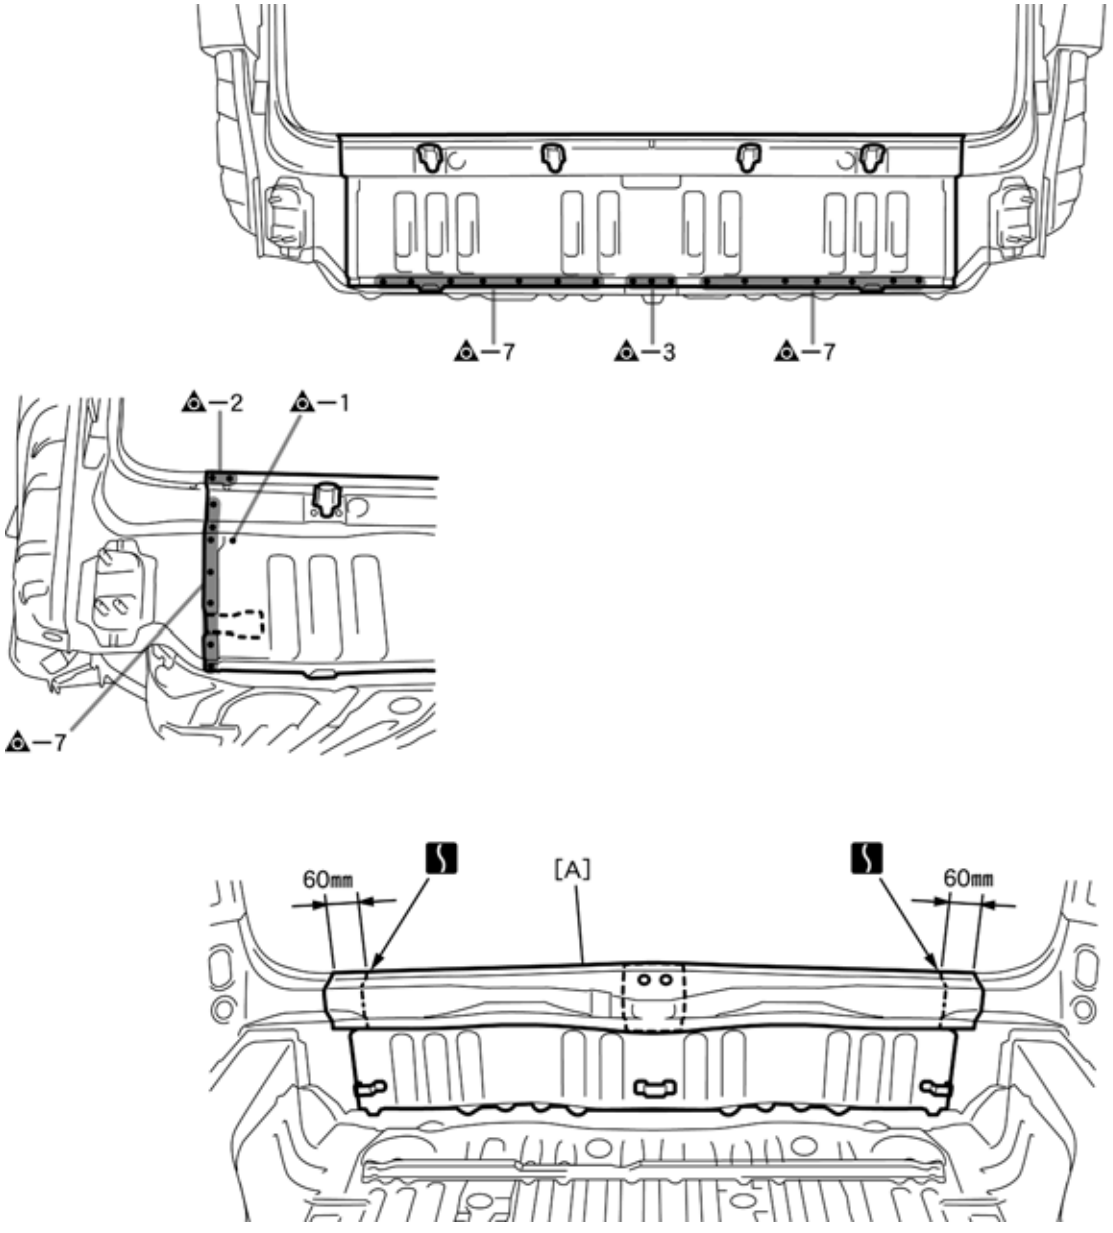

F15017

**POINT**


1 Remove the [A] at the same time.

**PART NAME**

[A] Body Lower Back Inner Panel
60mm (2.36in.)

**INSTALLATION**

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

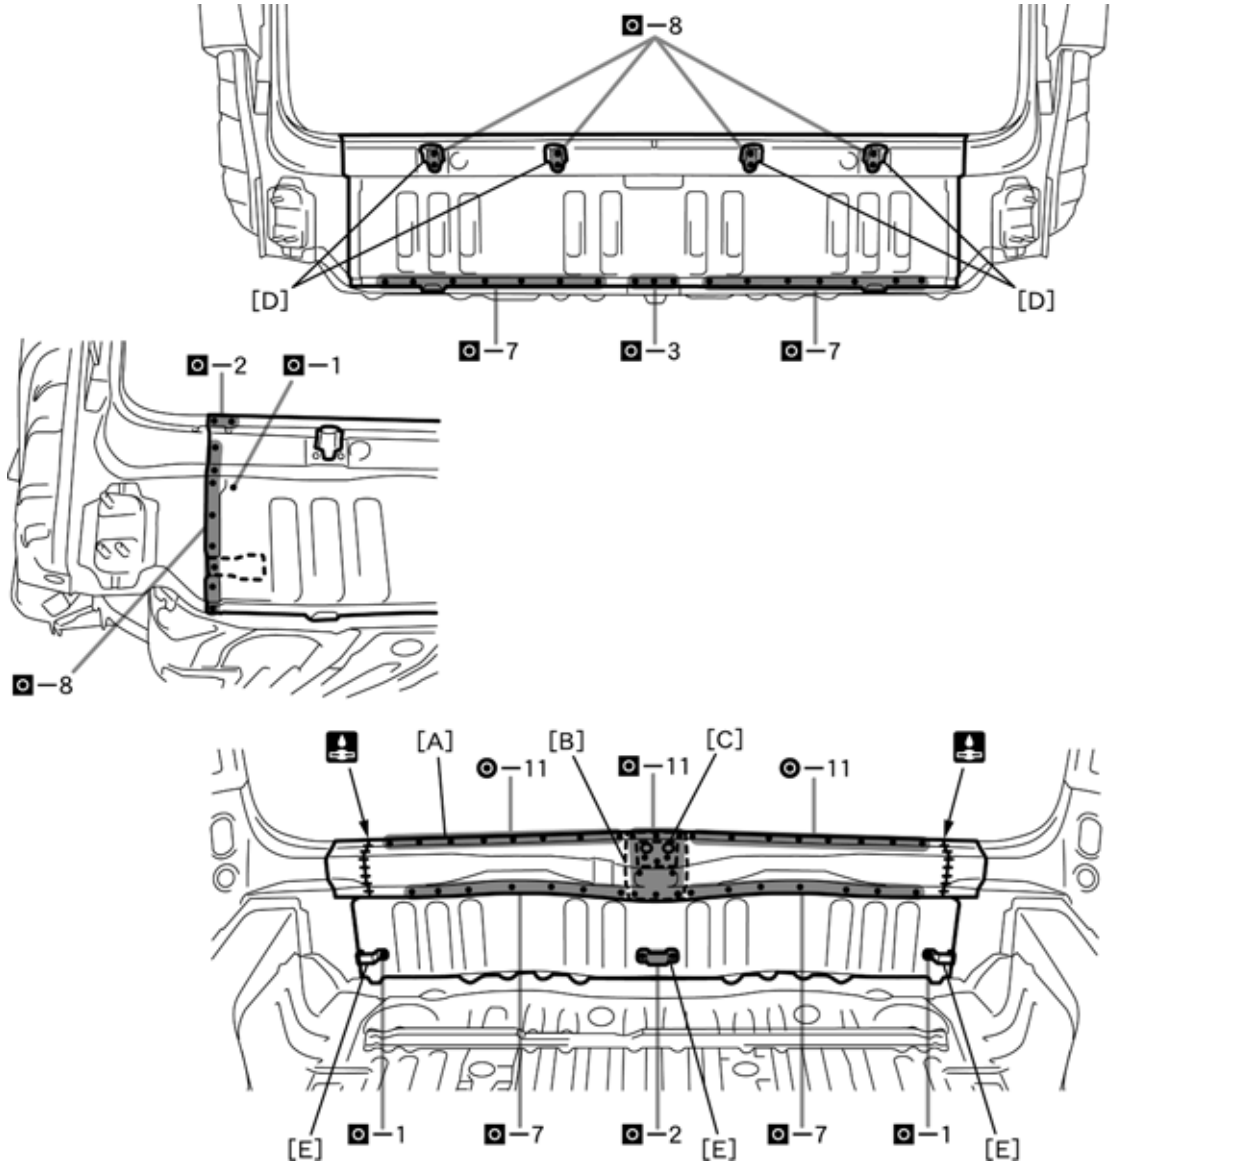



F15018

**POINT**

1 Inspect the fitting of the back door, etc., before welding, since this affects the appearance of the finish.

**PART NAME**

[A] Body Lower Back Inner Panel [B] Back Door Lock Striker Reinforcement
[C] Door Lock Striker Retainer [D] Rear Bumper Upper Center Retainer
[E] Lower Back Trim Retainer

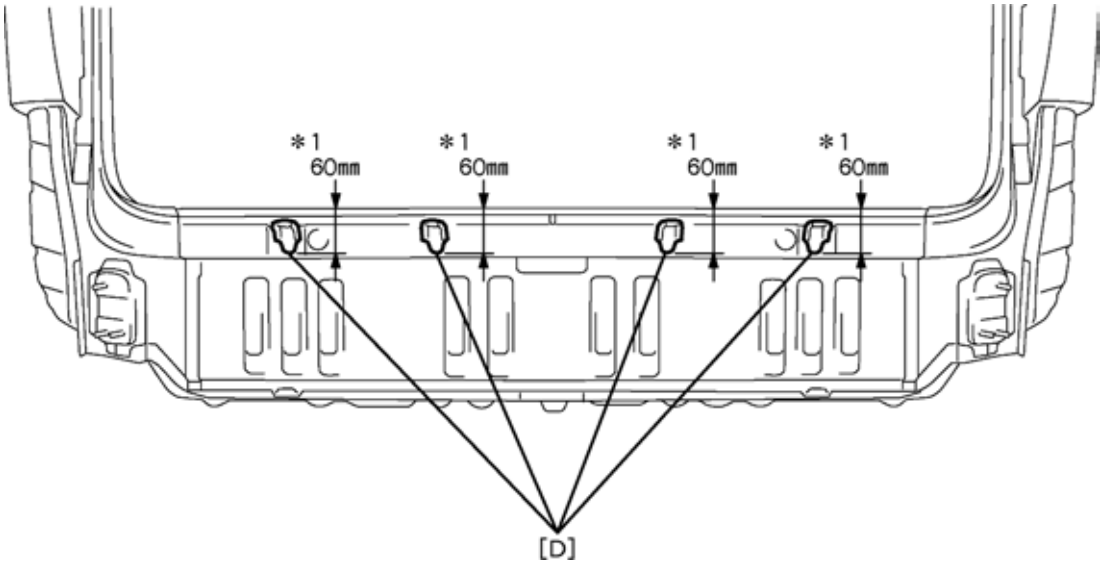


F15019

**POINT**

1 *1: The value is reference value.

**PART NAME**

[D] Rear Bumper Upper Center Retainer
60mm (2.36in.)