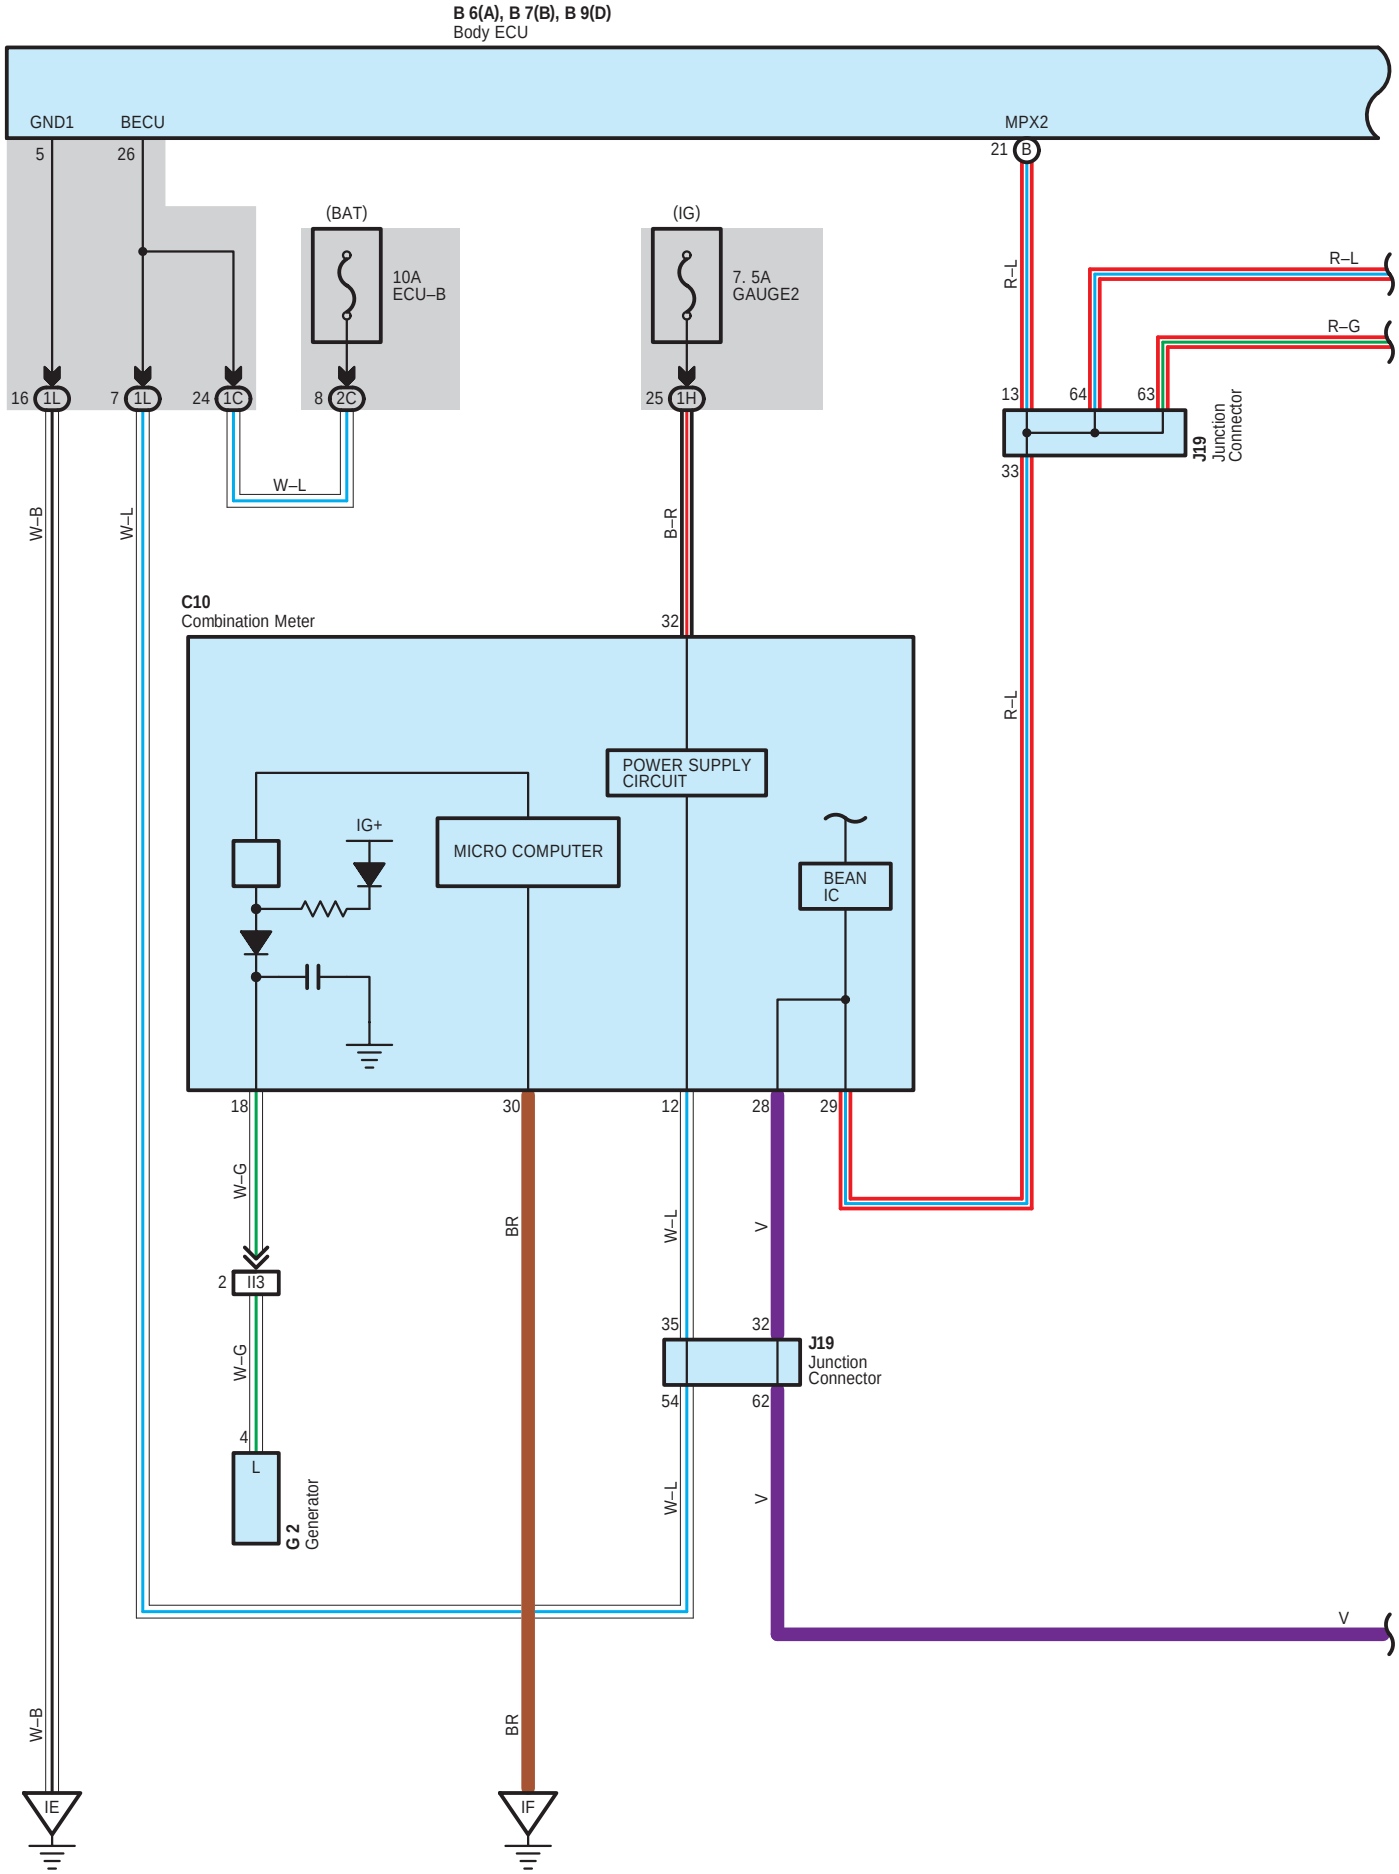
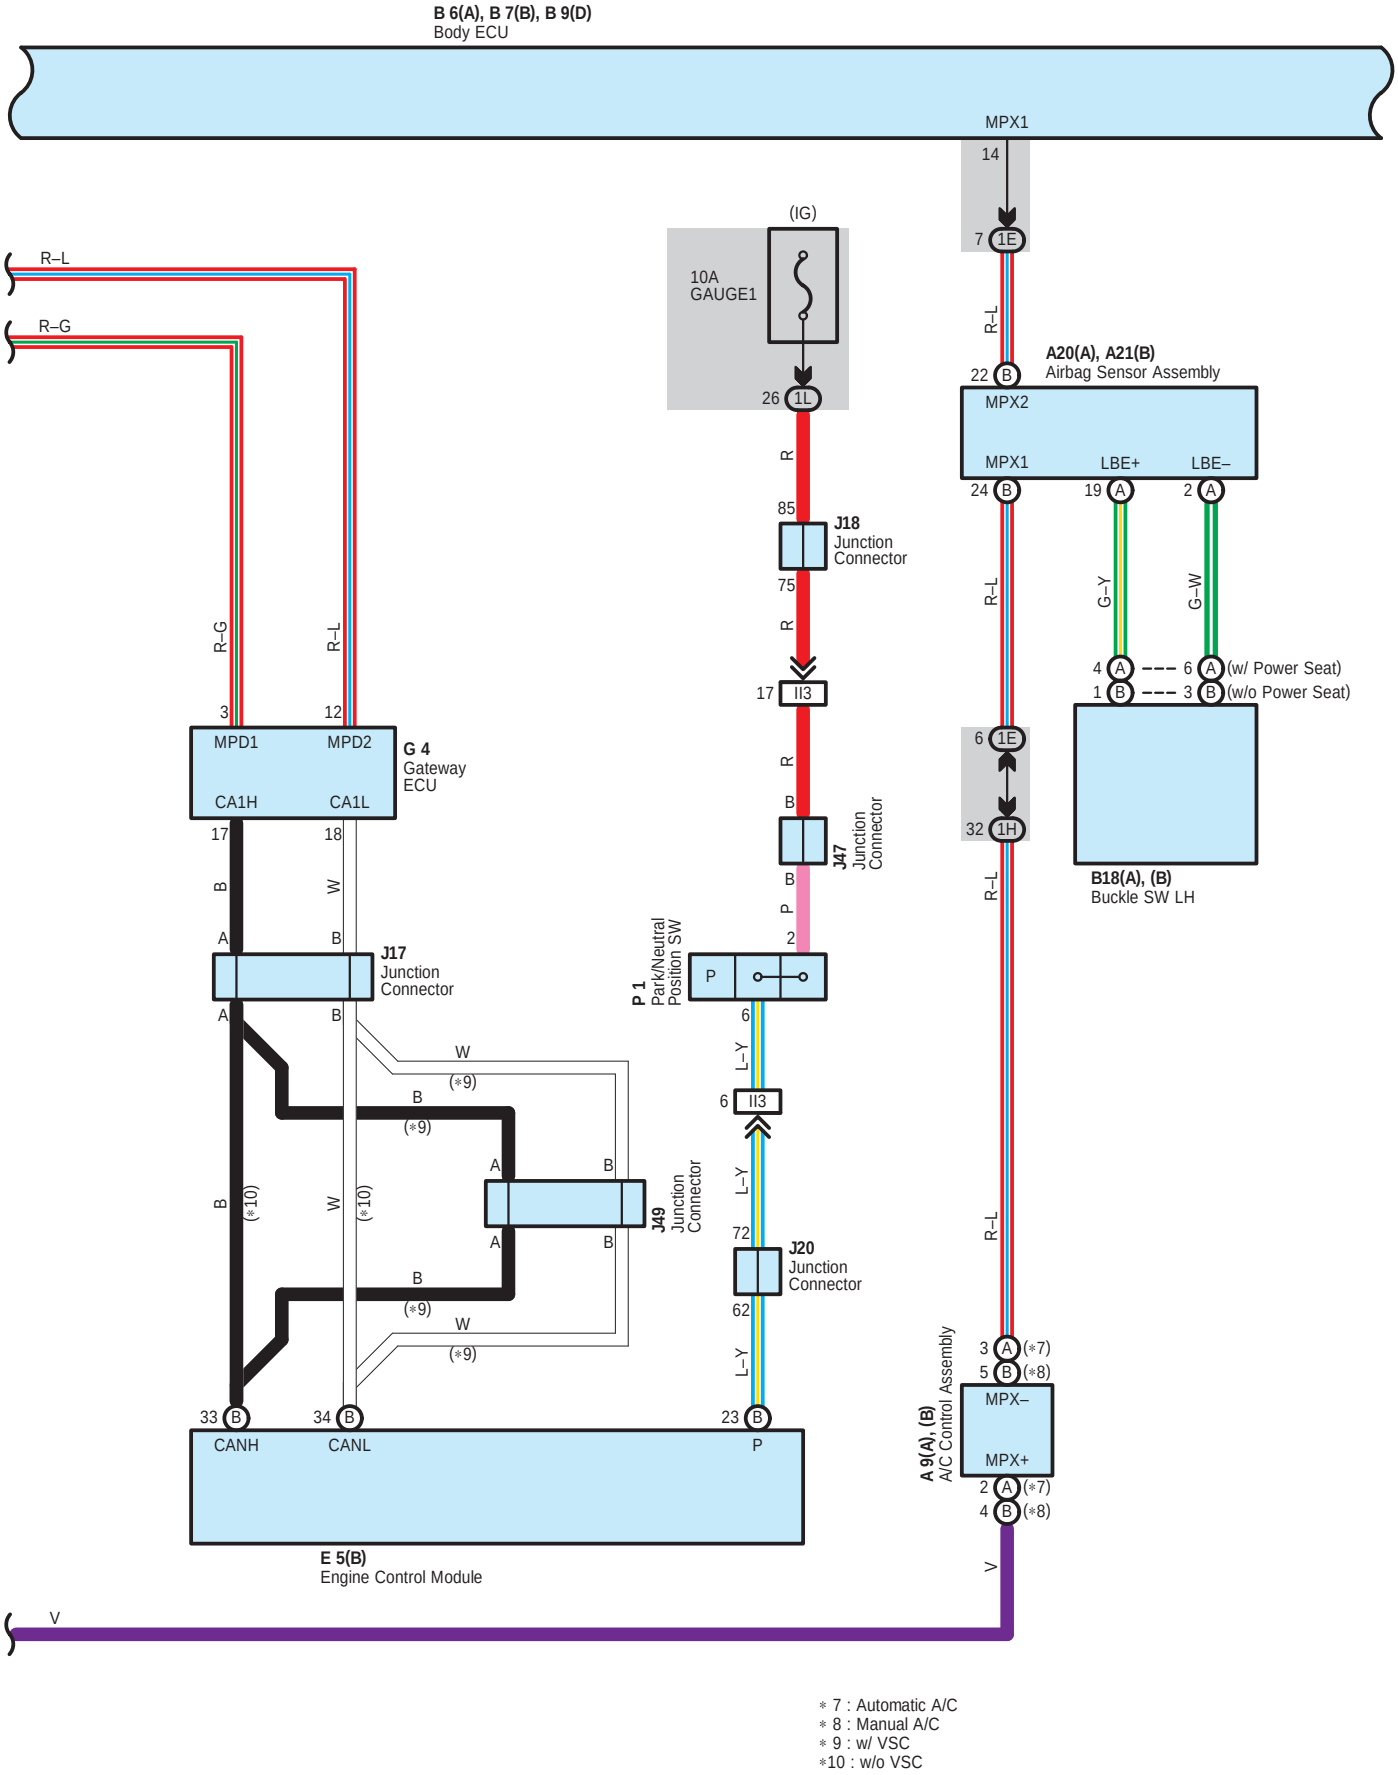
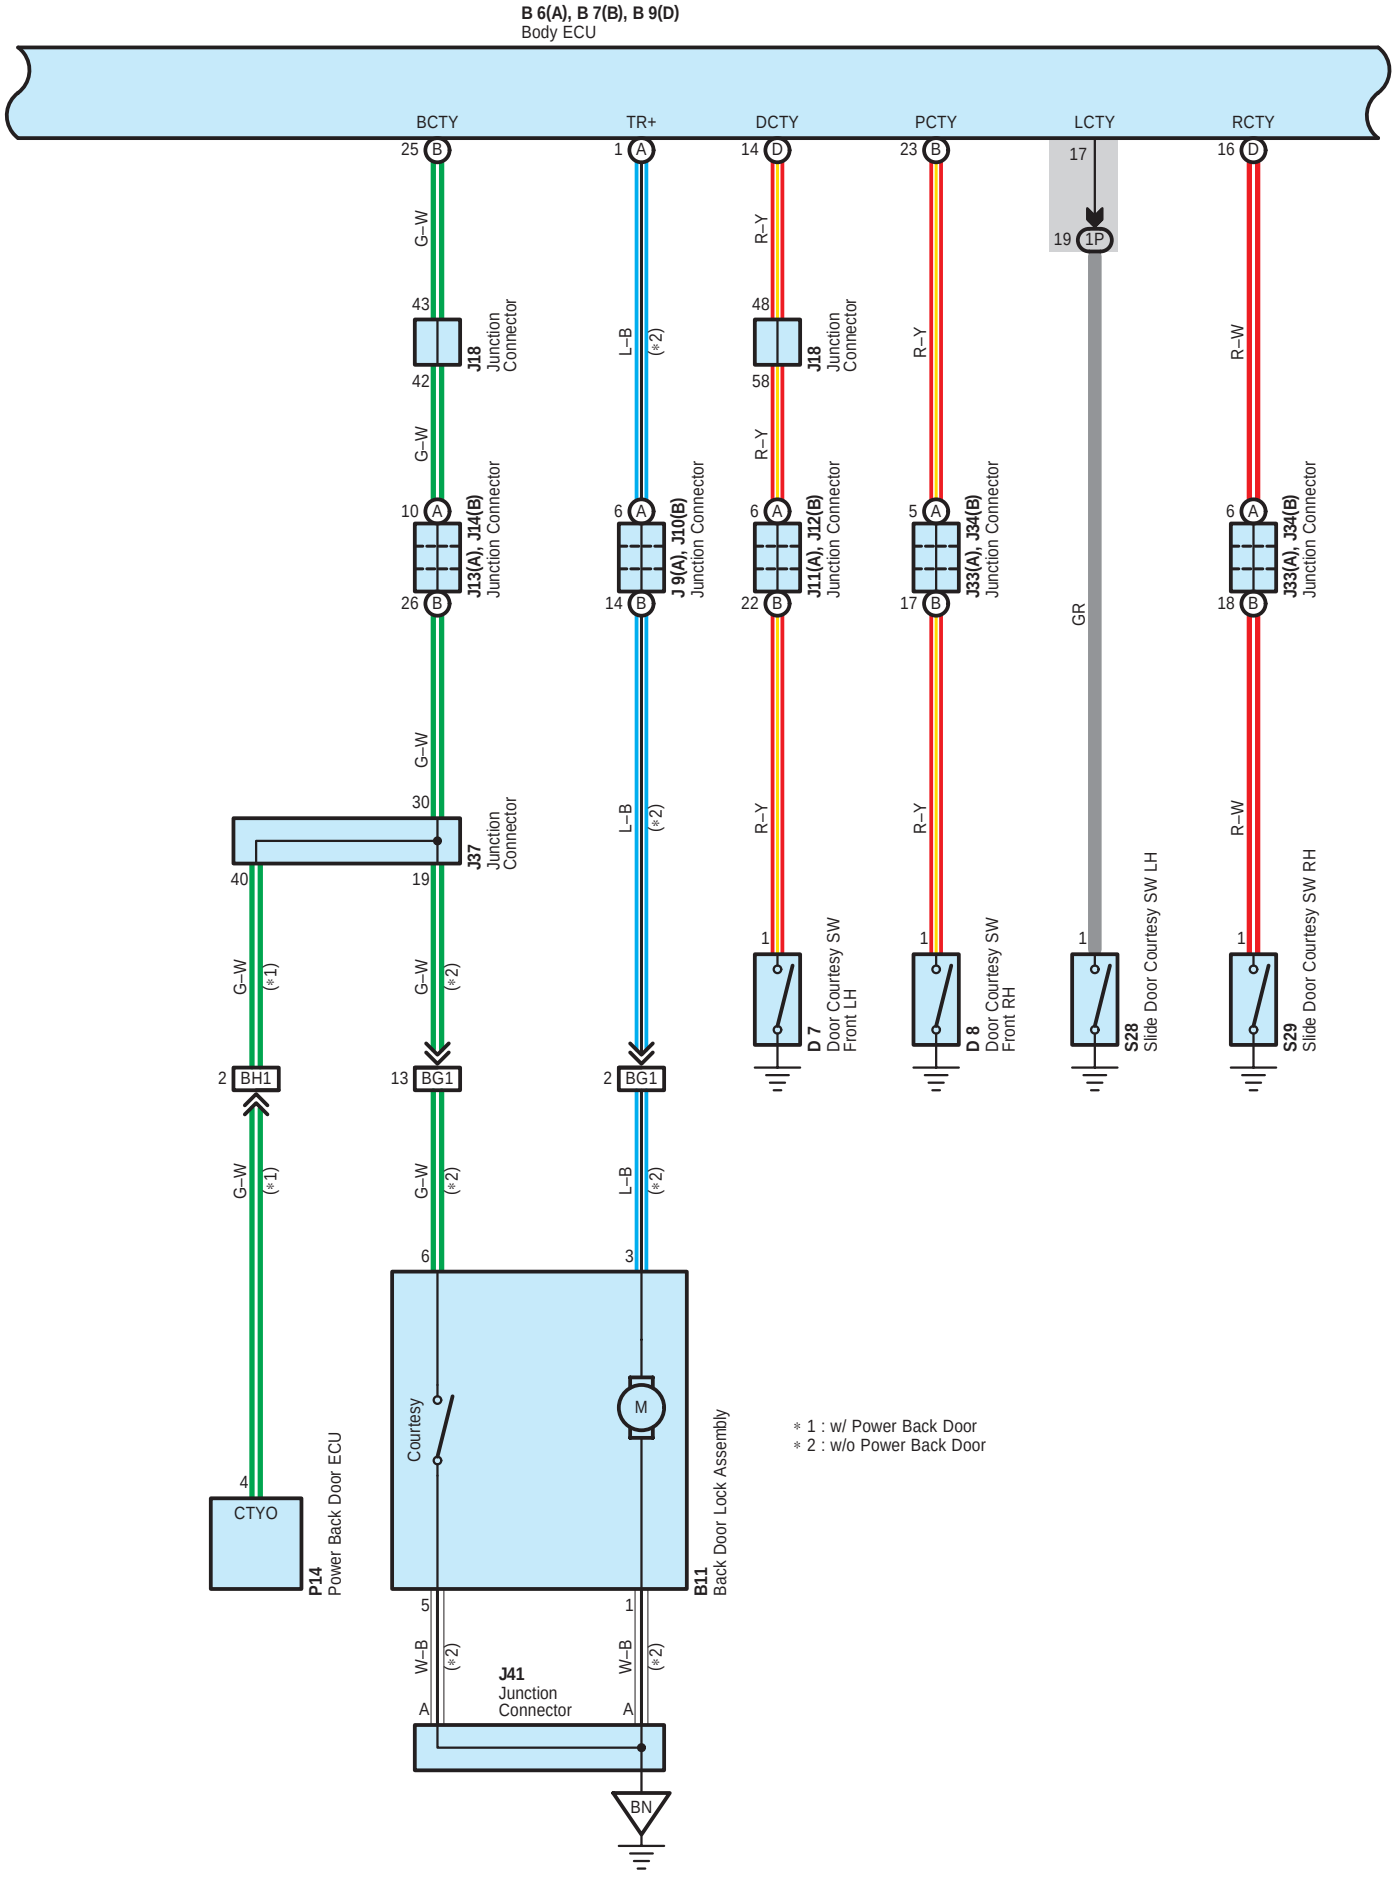
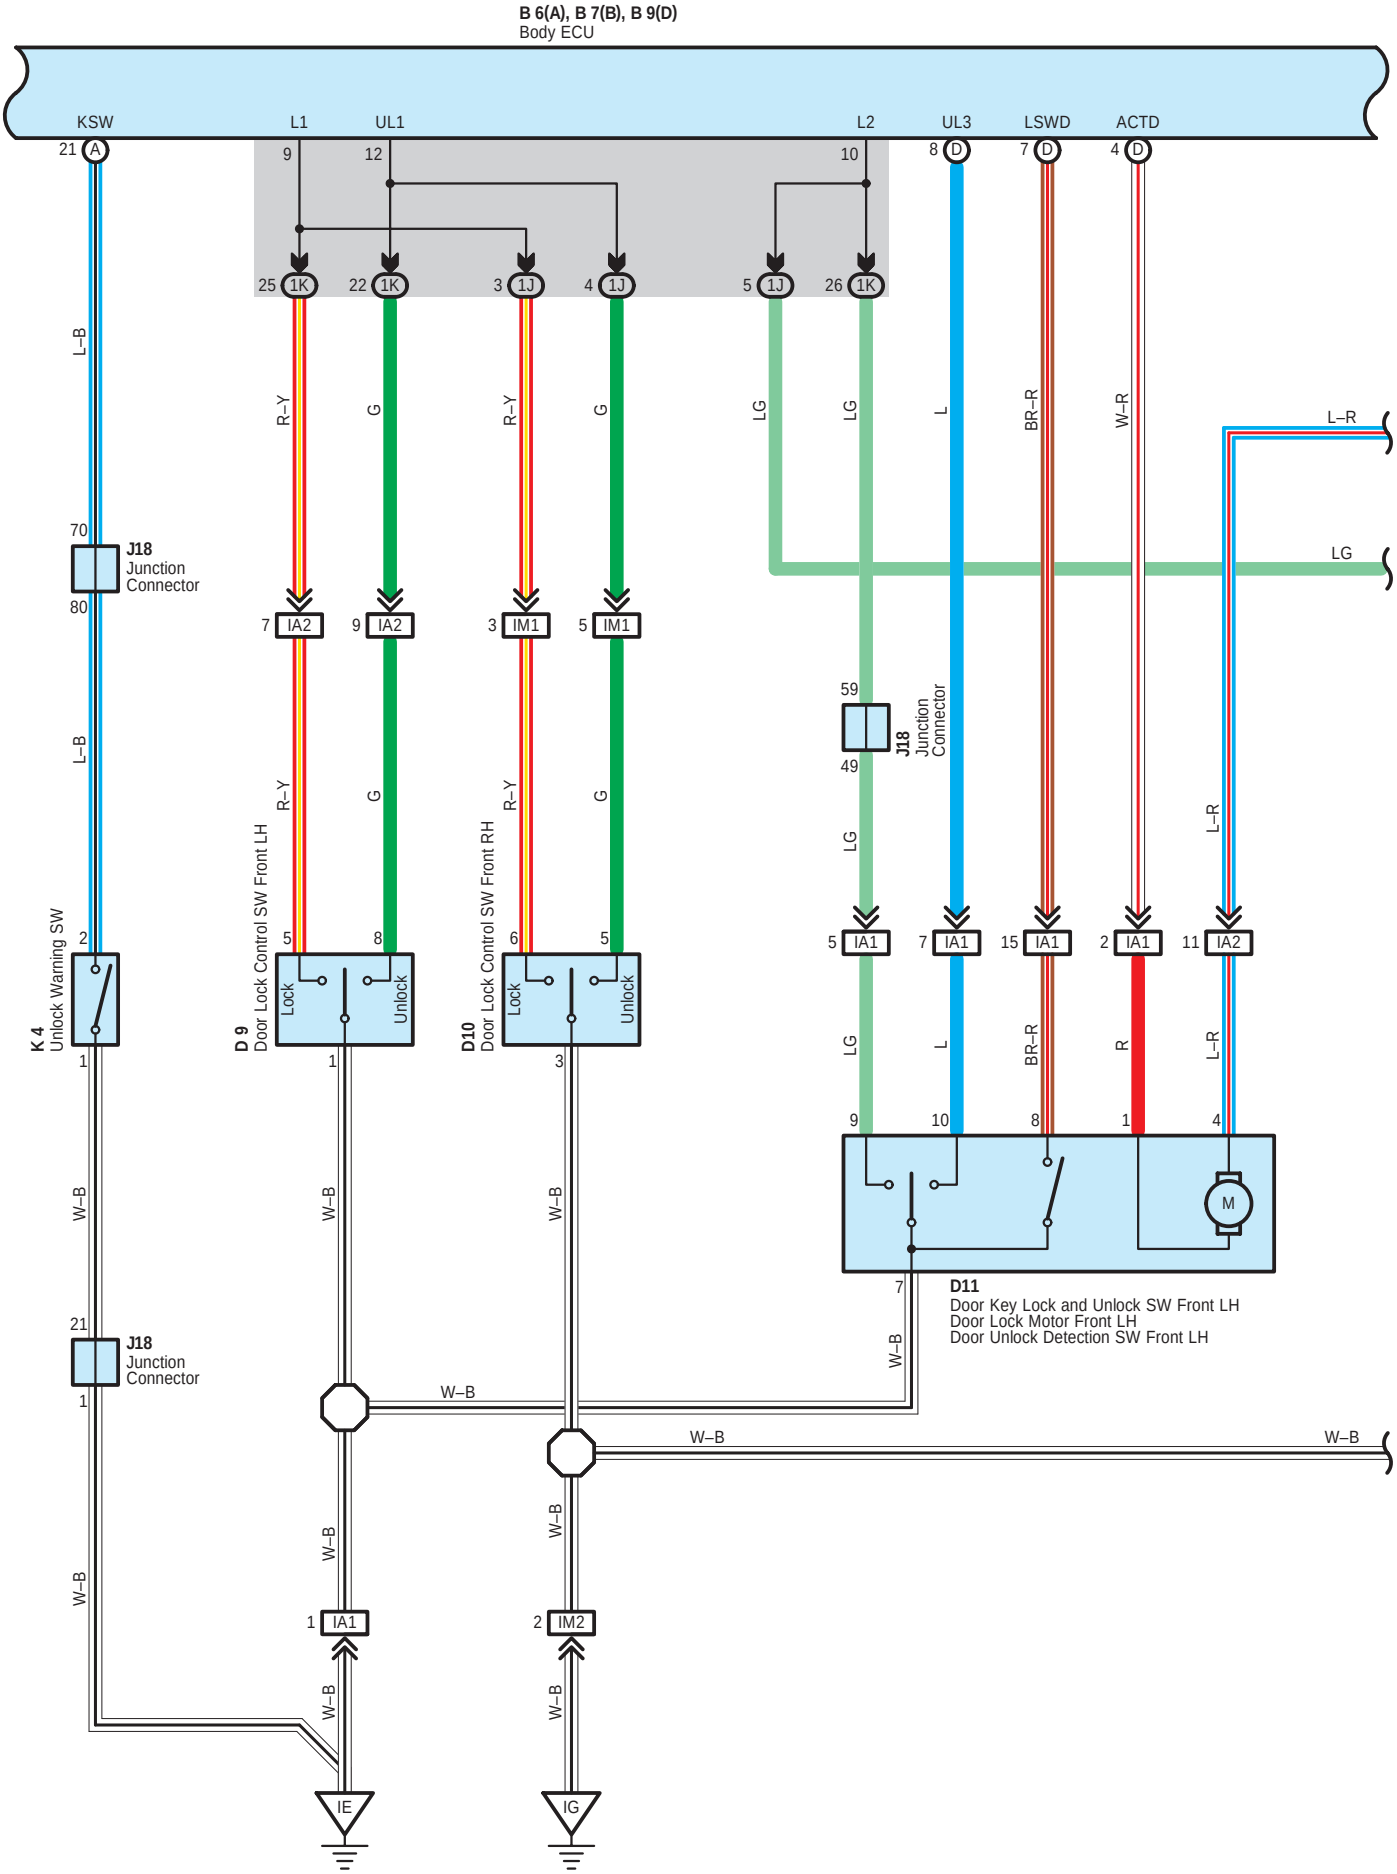
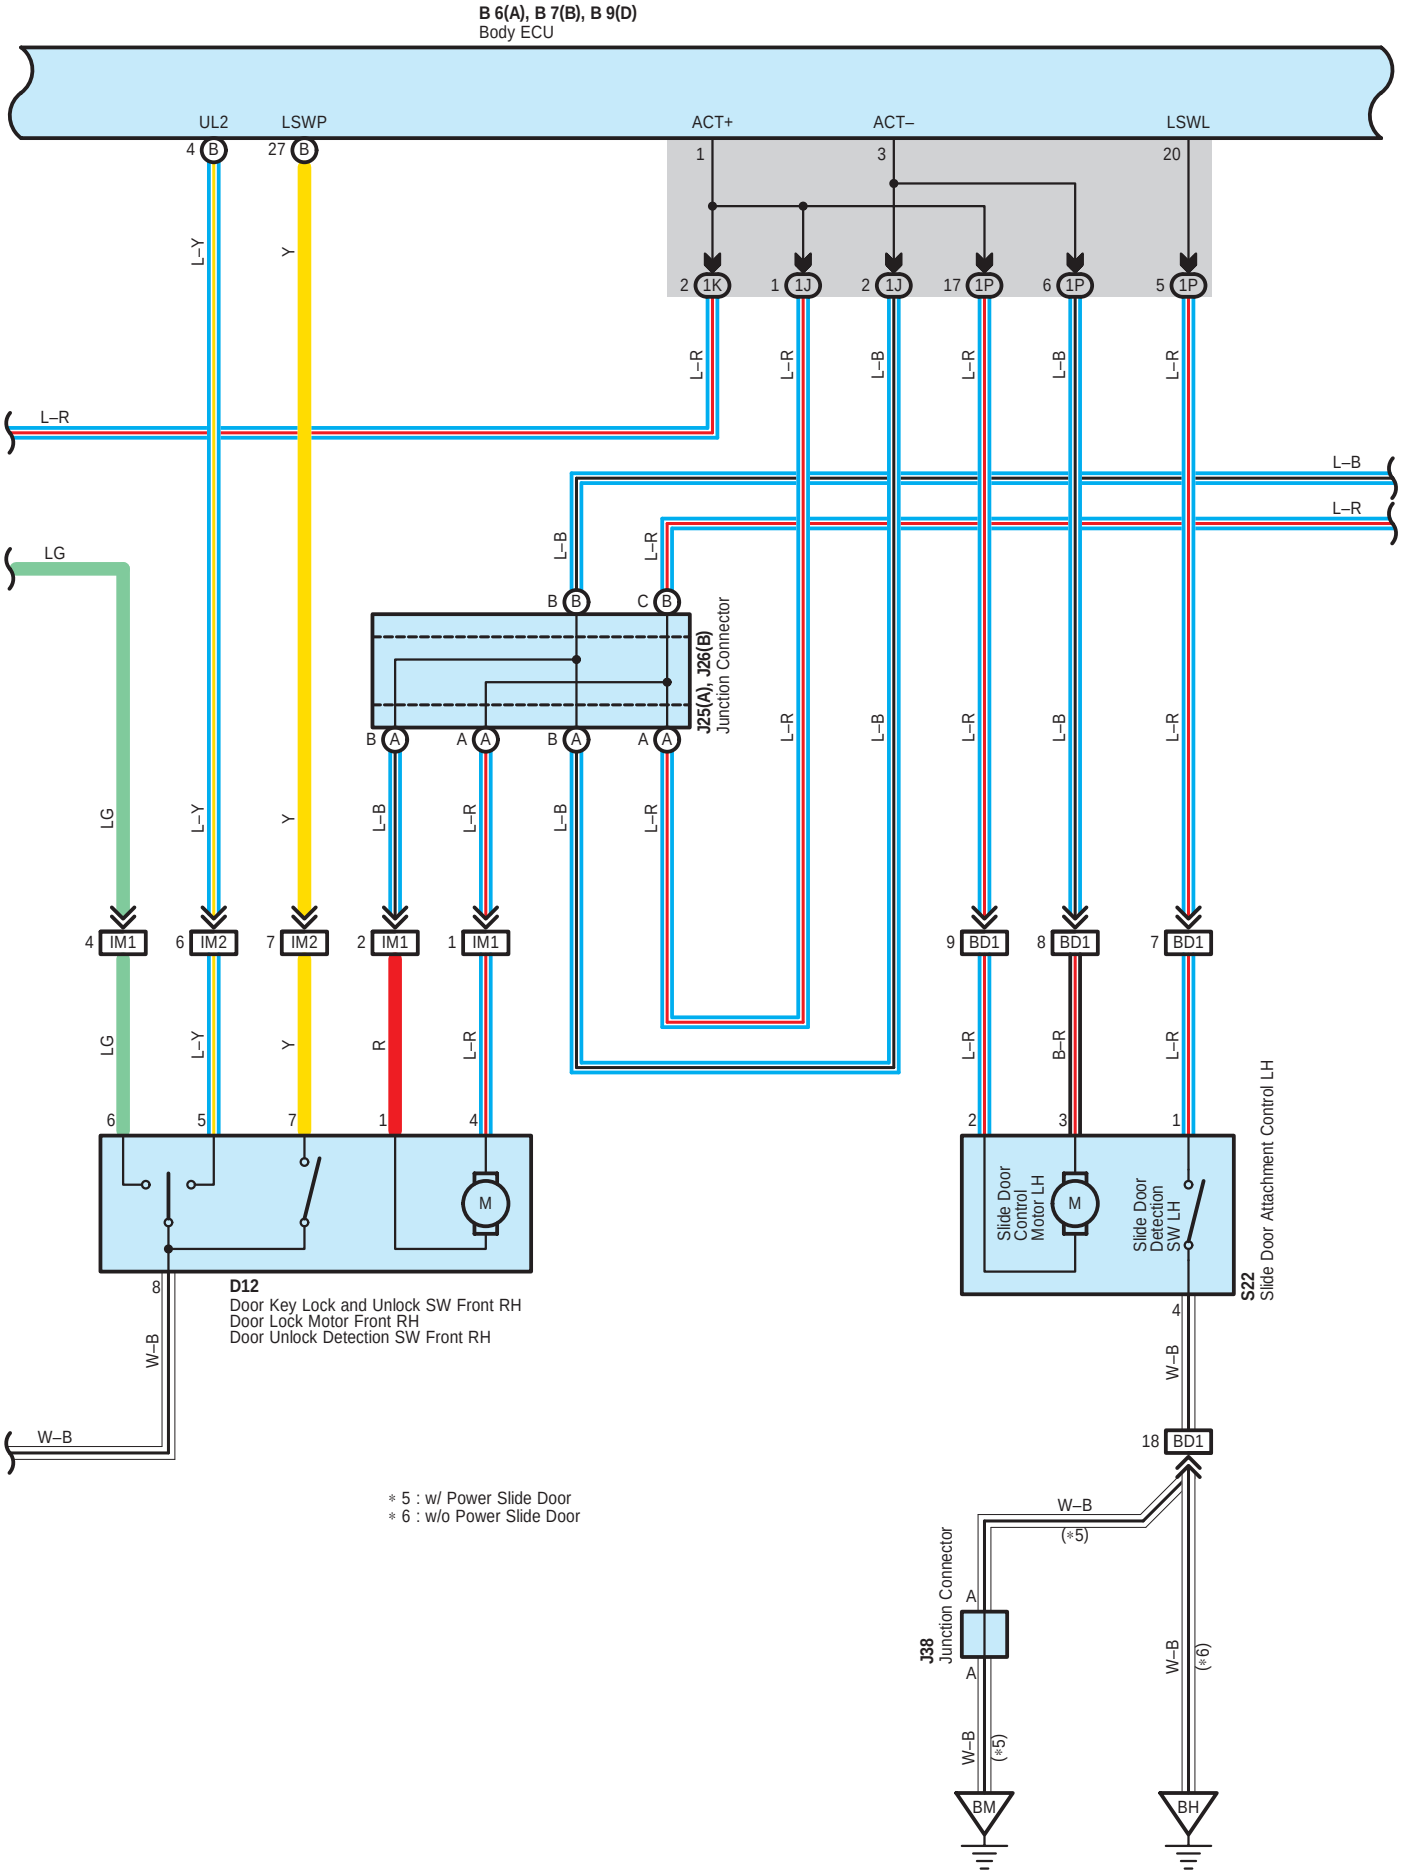
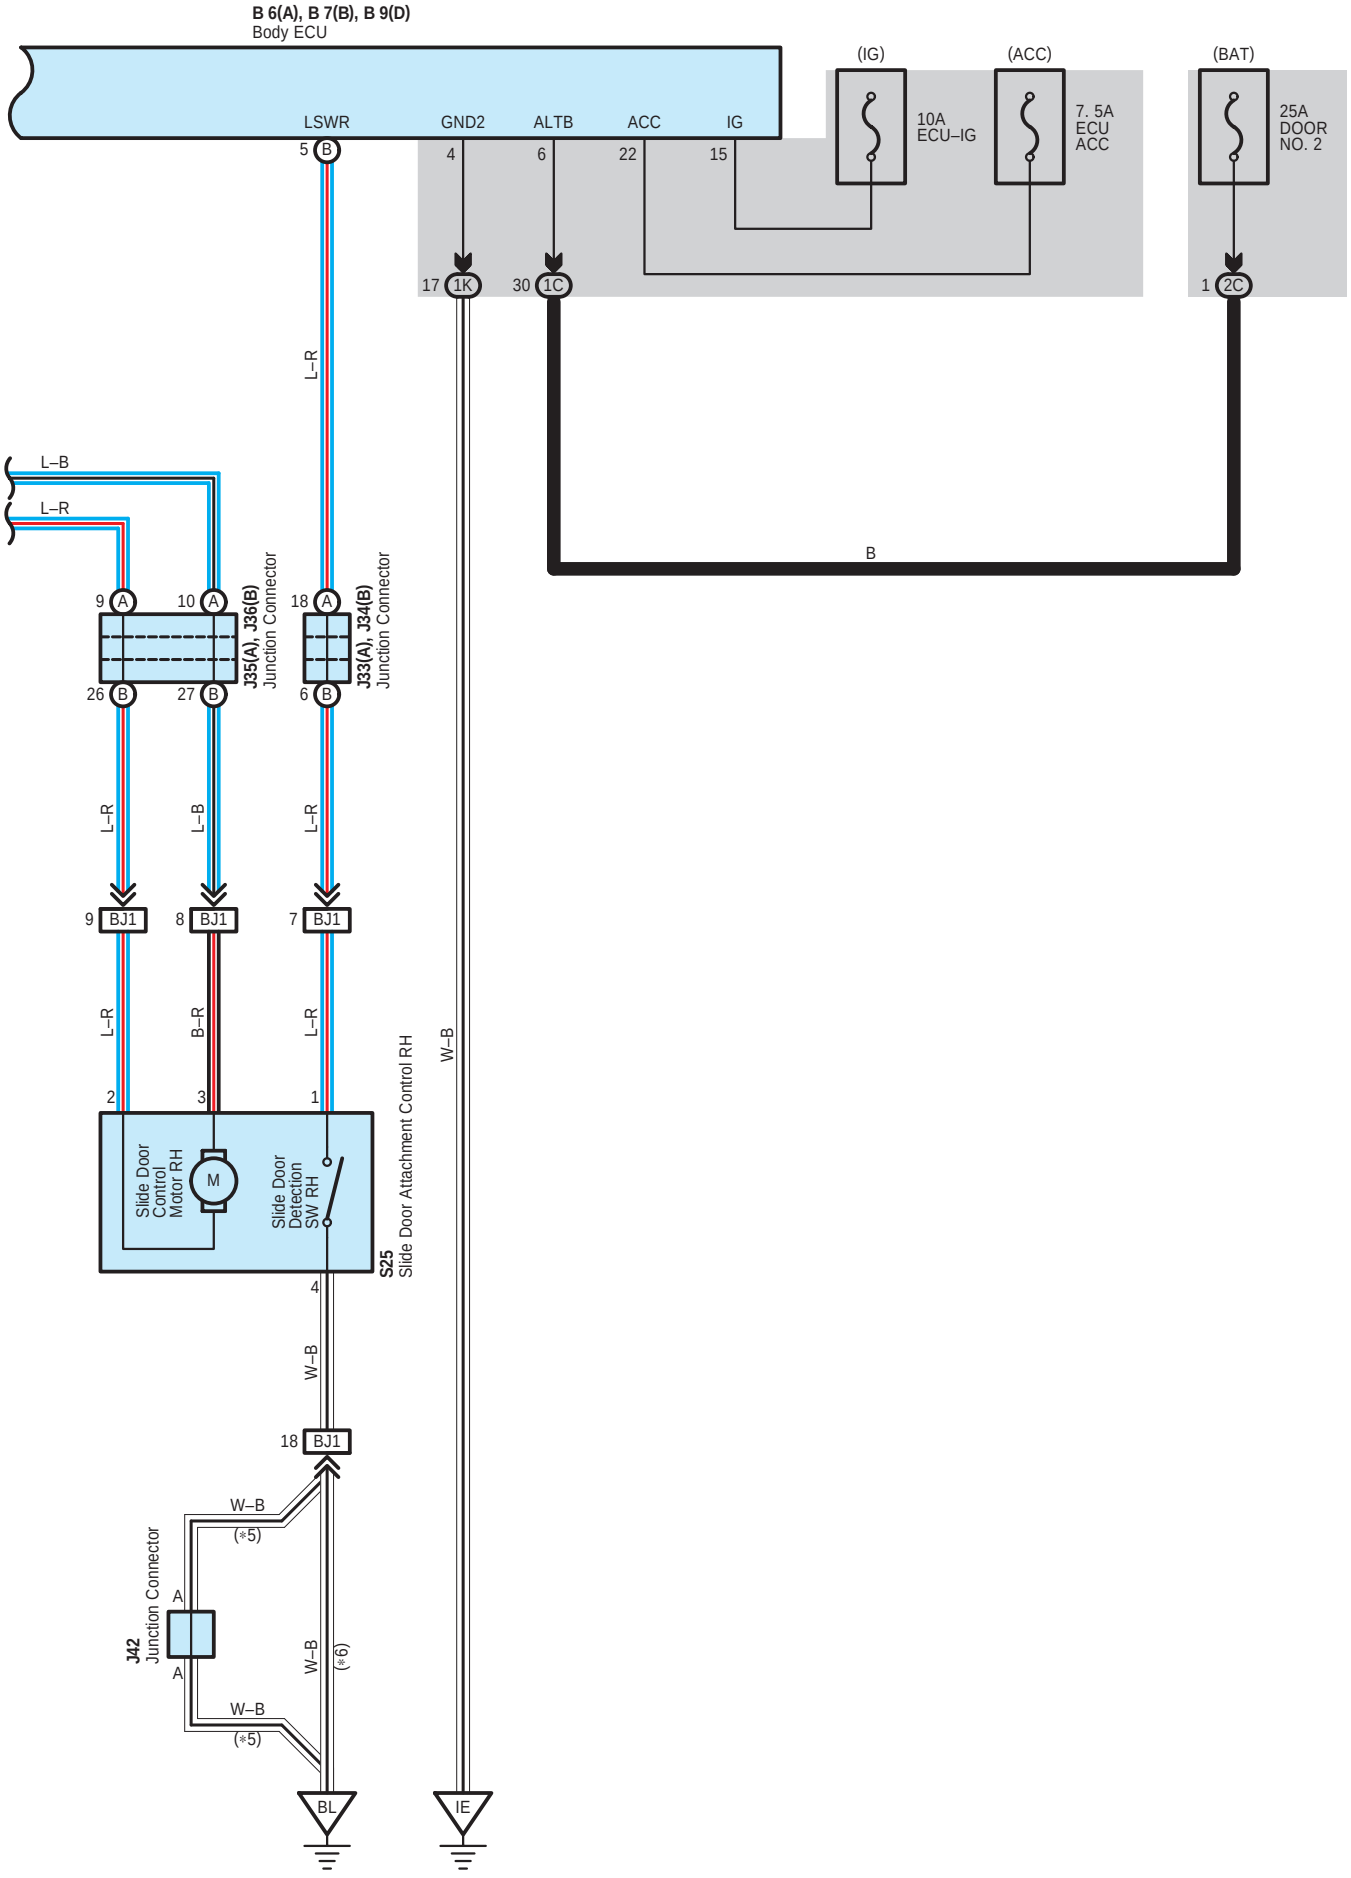

B 6(A), B 7(B), B 9(D)
Body ECU
GND1
BECU
MPX2
5
26
21 B
(BAT)
10A
ECU–B
(IG)
7. 5A
GAUGE2
R–L
R–G
16 1L
7 1L
24 1C
8 2C
25 1H
13
64
63
J19
Junction
Connector
33
W–L
W–B
W–L
B–R
R–L
C10
Combination Meter
32
POWER SUPPLY
CIRCUIT
IG+
MICRO COMPUTER
BEAN
IC
18
30
12
28
29
W–G
BR
W–L
V
2 II3
35
32
J19
Junction
Connector
54
62
W–G
4
L
G 2
Generator
W–L
V
V
W–B
BR
IE
IF


B 6(A), B 7(B), B 9(D)
Body ECU
MPX1
14
7 1E
(IG)
10A
GAUGE1
26 1L
R–L
R–G
A20(A), A21(B)
Airbag Sensor Assembly
22 B
MPX2
MPX1
LBE+
LBE–
24 B
19 A
2 A
R–L
G–Y
G–W
4 A --- 6 A (w/ Power Seat)
1 B --- 3 B (w/o Power Seat)
B18(A), (B)
Buckle SW LH
6 1E
32 1H
R–L
R
85
J18
Junction
Connector
75
R
17 II3
R
B
J47
Junction
Connector
B
P
2
P 1
Park/Neutral
Position SW
P
6
L–Y
6 II3
L–Y
72
J20
Junction
Connector
62
L–Y
23 B
P
R–L
3 A (*7)
5 B (*8)
MPX–
MPX+
2 A (*7)
4 B (*8)
A 9(A), (B)
A/C Control Assembly
V
R–G
R–L
3
12
MPD1
MPD2
G 4
Gateway
ECU
CA1H
CA1L
17
18
B
W
A
B
J17
Junction
Connector
A
B
W
(*9)
B
(*9)
B
(*10)
W
(*10)
A
B
J49
Junction
Connector
A
B
B
(*9)
W
(*9)
33 B
34 B
CANH
CANL
E 5(B)
Engine Control Module
V
* 7 : Automatic A/C
* 8 : Manual A/C
* 9 : w/ VSC
*10 : w/o VSC



B 6(A), B 7(B), B 9(D)
Body ECU
BCTY
TR+
DCTY
PCTY
LCTY
RCTY
25 B
1 A
14 D
23 B
17
16 D
19 1P
G–W
L–B (*2)
R–Y
R–W
GR
43
42
48
58
J18 Junction Connector
10 A
26 B
6 A
14 B
22 B
5 A
17 B
18 B
J13(A), J14(B) Junction Connector
J 9(A), J10(B) Junction Connector
J11(A), J12(B) Junction Connector
J33(A), J34(B) Junction Connector
30
40
19
J37 Junction Connector
G–W (*1)
G–W (*2)
2 BH1
13 BG1
2 BG1
1
D 7 Door Courtesy SW Front LH
D 8 Door Courtesy SW Front RH
S28 Slide Door Courtesy SW LH
S29 Slide Door Courtesy SW RH
6
3
Courtesy
M
4
CTYO
P14 Power Back Door ECU
B11 Back Door Lock Assembly
5
1
W–B (*2)
A
J41 Junction Connector
BN
* 1 : w/ Power Back Door
* 2 : w/o Power Back Door


B 6(A), B 7(B), B 9(D)
Body ECU
KSW
L1
UL1
L2
UL3
LSWD
ACTD
21 A
9
12
10
8 D
7 D
4 D
25 1K
22 1K
3 1J
4 1J
5 1J
26 1K
L–B
R–Y
G
LG
L
BR–R
W–R
L–R
70
80
J18
Junction
Connector
7 IA2
9 IA2
3 IM1
5 IM1
59
49
J18
Junction
Connector
5 IA1
7 IA1
15 IA1
2 IA1
11 IA2
K 4
Unlock Warning SW
2
1
D 9
Door Lock Control SW Front LH
5
8
Lock
Unlock
1
D10
Door Lock Control SW Front RH
6
5
Lock
Unlock
3
9
10
8
1
4
M
7
D11
Door Key Lock and Unlock SW Front LH
Door Lock Motor Front LH
Door Unlock Detection SW Front LH
W–B
21
J18
Junction
Connector
1
1 IA1
2 IM2
IE
IG



B 6(A), B 7(B), B 9(D)
Body ECU
UL2
LSWP
ACT+
ACT–
LSWL
4 B
27 B
1
3
20
2 1K
1 1J
2 1J
17 1P
6 1P
5 1P
L–Y
Y
L–R
L–B
LG
B B
C B
B A
A A
B A
A A
J25(A), J26(B)
Junction Connector
4 IM1
6 IM2
7 IM2
2 IM1
1 IM1
9 BD1
8 BD1
7 BD1
R
B–R
6
5
7
1
4
2
3
1
M
D12
Door Key Lock and Unlock SW Front RH
Door Lock Motor Front RH
Door Unlock Detection SW Front RH
8
W–B
Slide Door Control Motor LH
Slide Door Detection SW LH
S22
Slide Door Attachment Control LH
4
18 BD1
(*5)
(*6)
J38
Junction Connector
A
BM
BH
∗ 5 : w/ Power Slide Door
∗ 6 : w/o Power Slide Door


B 6(A), B 7(B), B 9(D)
Body ECU
LSWR
GND2
ALTB
ACC
IG
(IG)
(ACC)
(BAT)
10A
ECU–IG
7. 5A
ECU
ACC
25A
DOOR
NO. 2
L–R
L–B
B
J335(A), J336(B)
Junction Connector
J333(A), J334(B)
Junction Connector
BJ1
Slide Door
Control
Motor RH
Slide Door
Detection
SW RH
S25
Slide Door Attachment Control RH
W–B
B–R
J42
Junction Connector
(*5)
(*6)
BL
IE


A 9
White

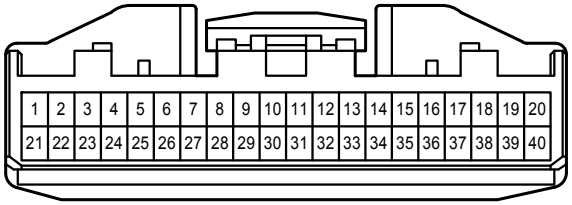


A 20
Yellow

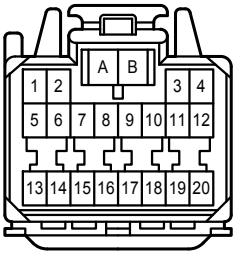


A 21
Yellow

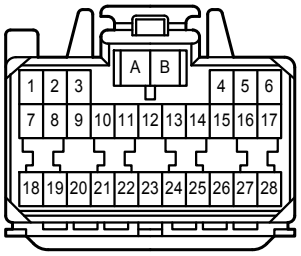


B 6
White

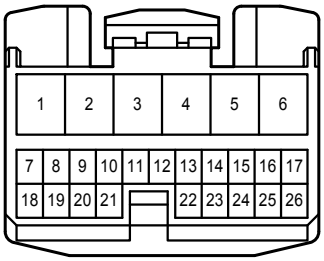


B 7
White

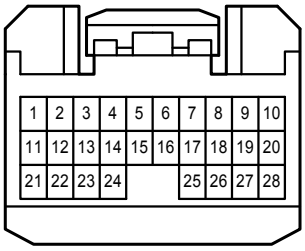

B 9
White

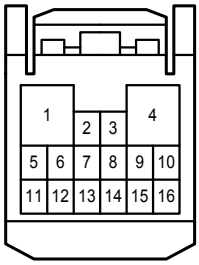

B 11
White




B 18
White




(w/o Power Seat)

B 18
White

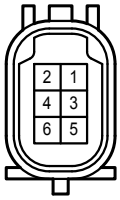

(w/ Power Seat)

C 10
White

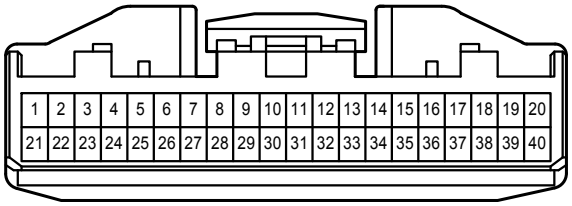


D 7
Black




D 8
Black




D 9
White

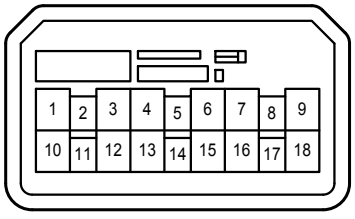


D 10
White

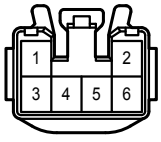


D 11
White

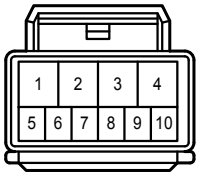

D 12
White

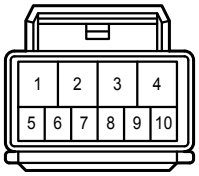


E 5
White

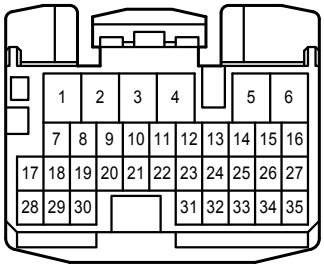


G 2
Black




G 4
White

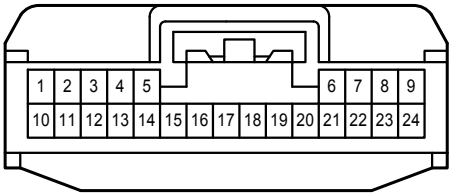


J 9
White

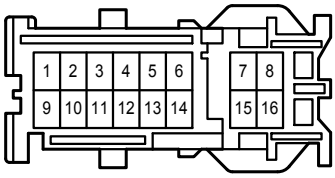


J 10
White

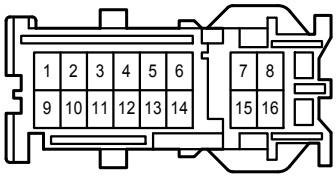


J 11
White

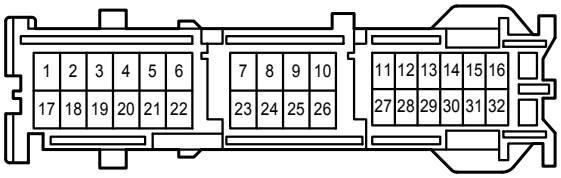


J 12
White

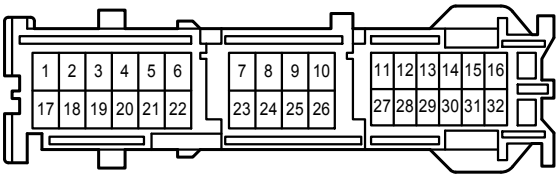


J 13
White

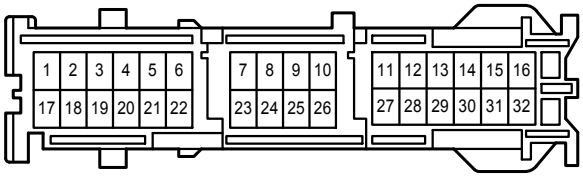


J 14
White

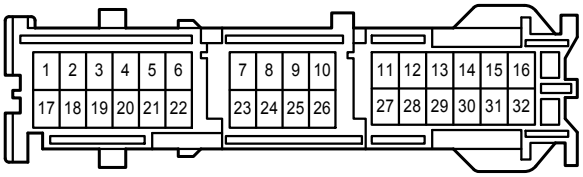


J 17
White

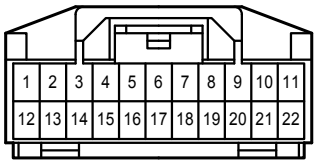


J 18
White

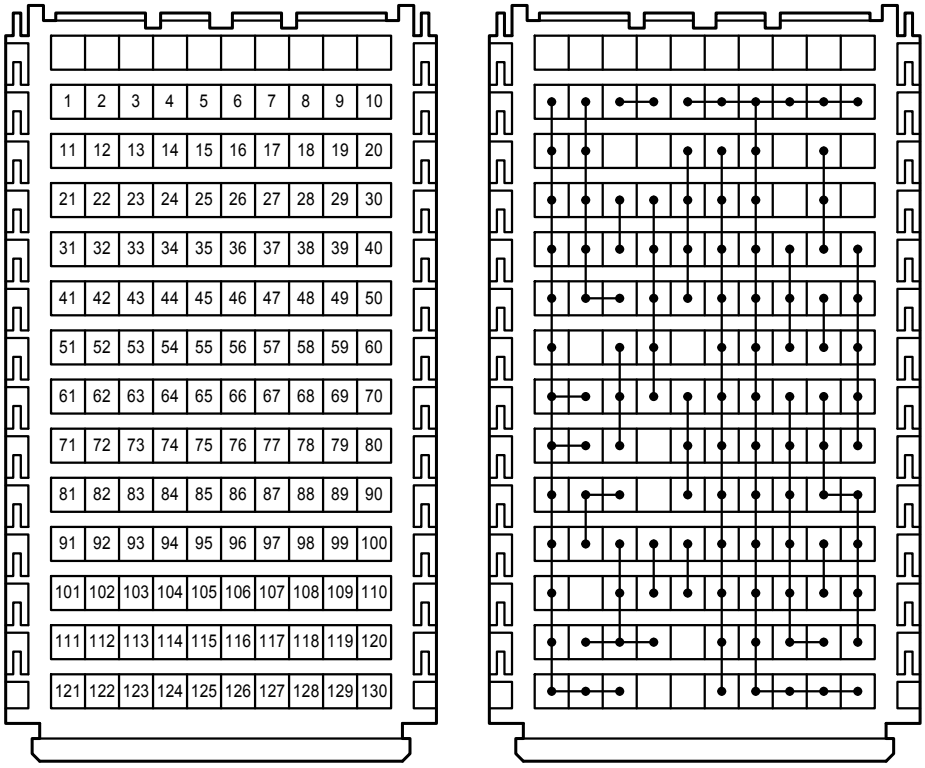


J 19
White

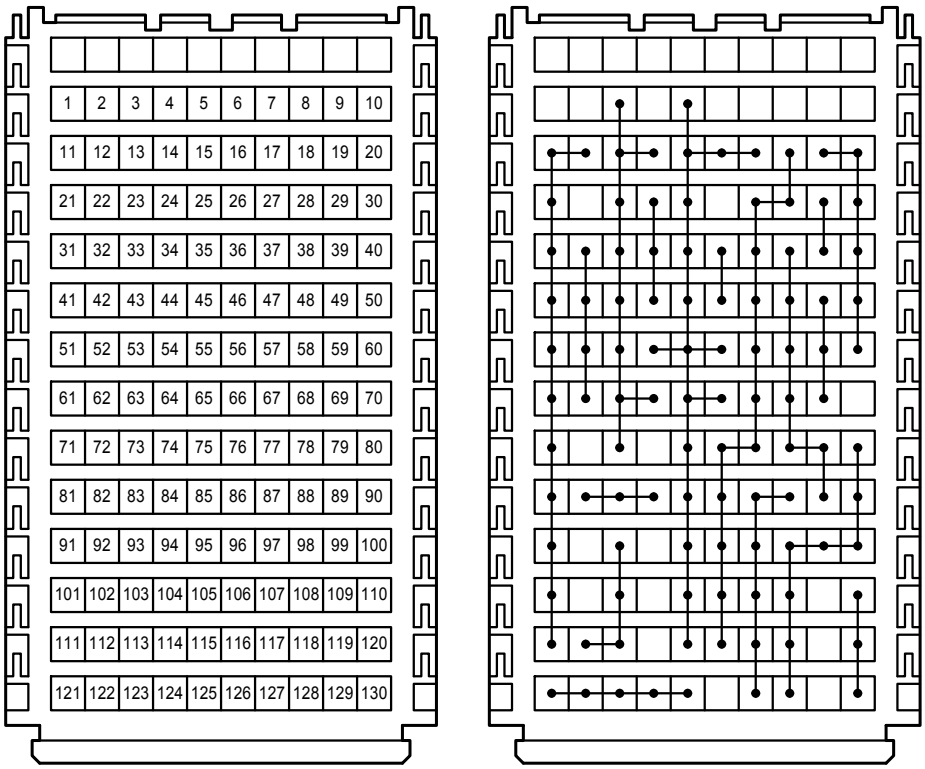


J 20
White

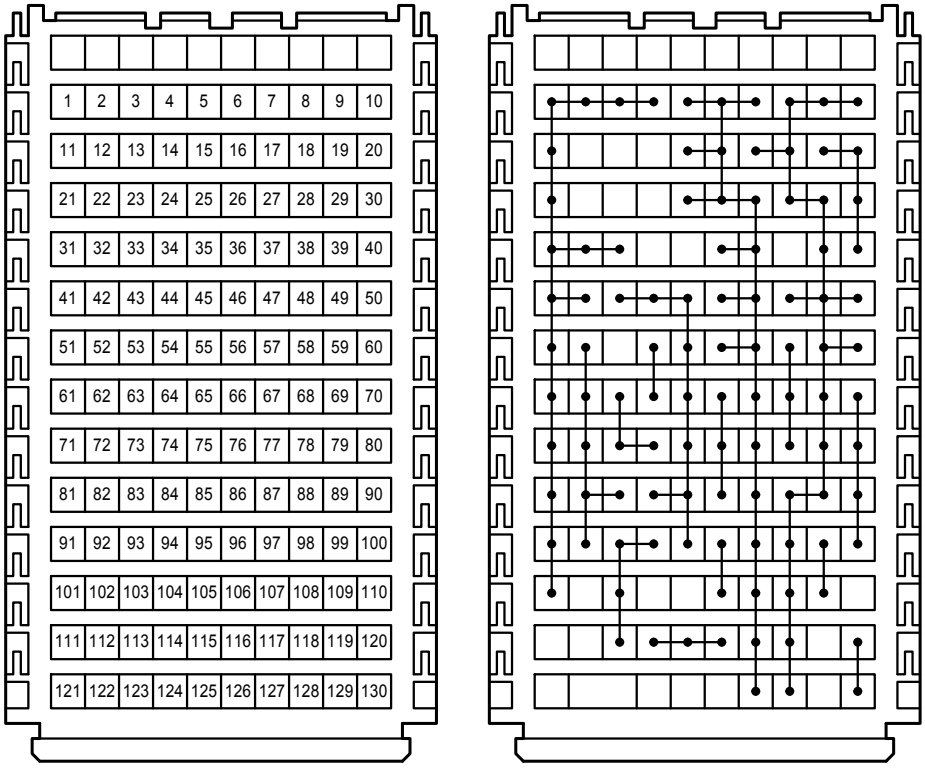


J 25
White

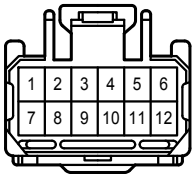


J 26
White

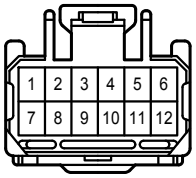


J 33
White

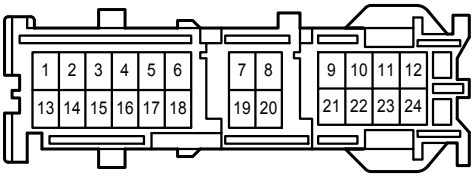


J 34
White

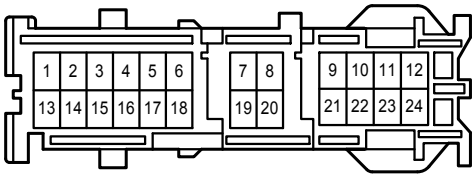


J 35
White

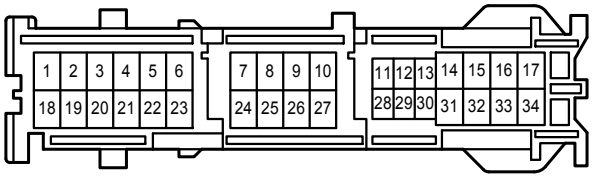


J 36
White

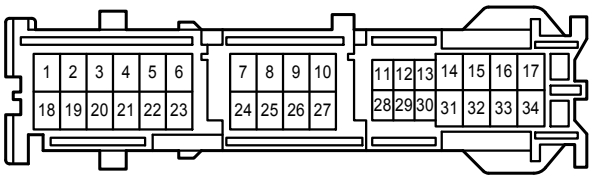


J 37
White

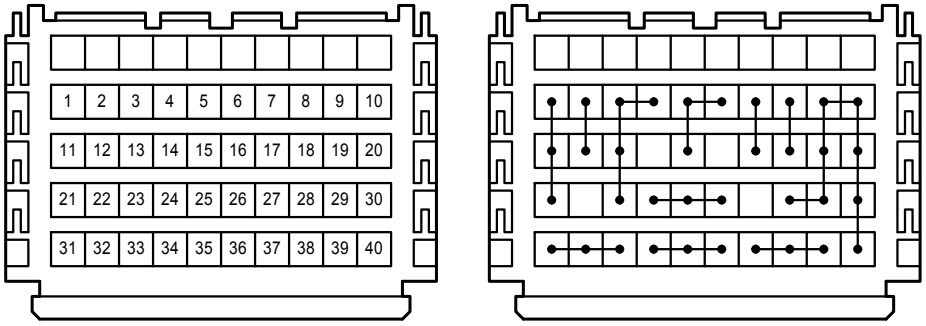


J 38
White




J 41
Gray

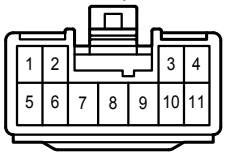


J 42
Black




J 47
Blue

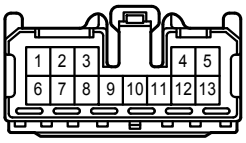


J 49
White

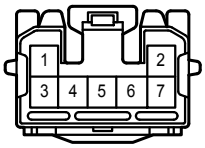


K 4
White



P 1
Gray

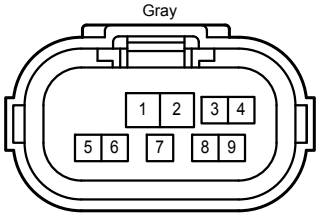

P 14
White

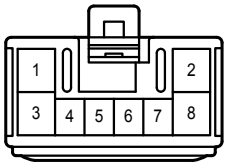

S 22
Black



S 25
Black




S 28
Black




S 29
Black




1C
White

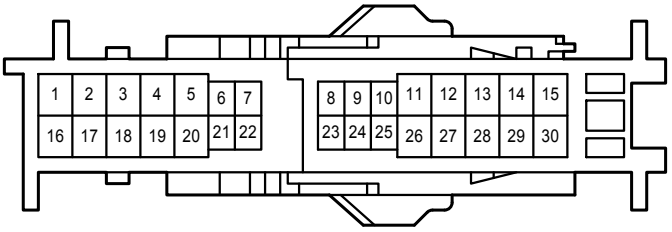


1E
Yellow

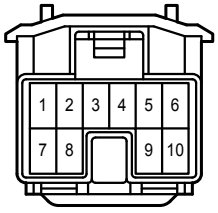


1H
White

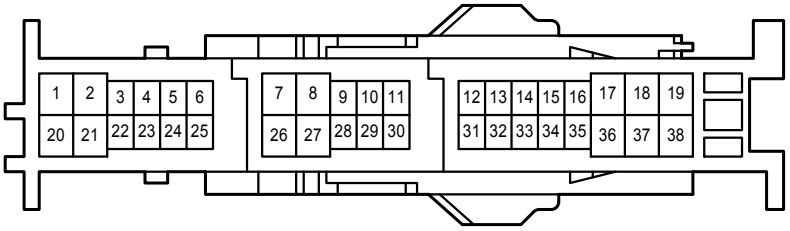



1J
White

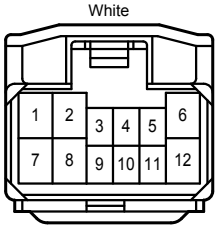



1K
White

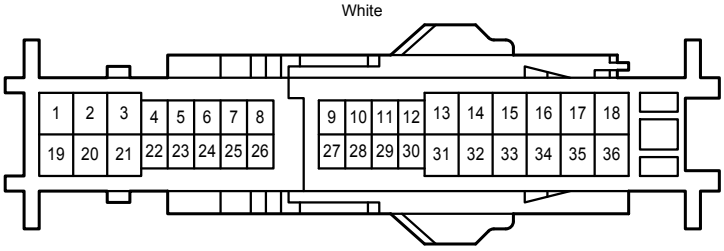


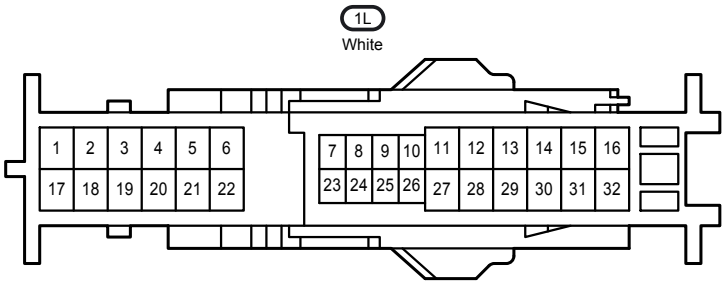

1L
White
1 2 3 4 5 6
17 18 19 20 21 22
7 8 9 10 11 12 13 14 15 16
23 24 25 26 27 28 29 30 31 32

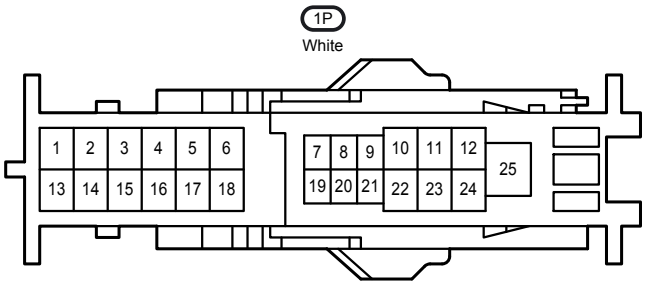

1P
White
1 2 3 4 5 6
13 14 15 16 17 18
7 8 9 10 11 12
19 20 21 22 23 24
25

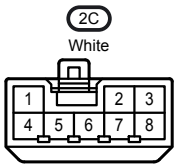
2C
White
1 2 3
4 5 6 7 8

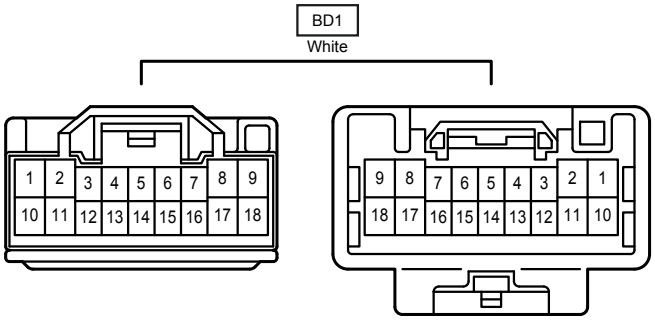

BD1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10

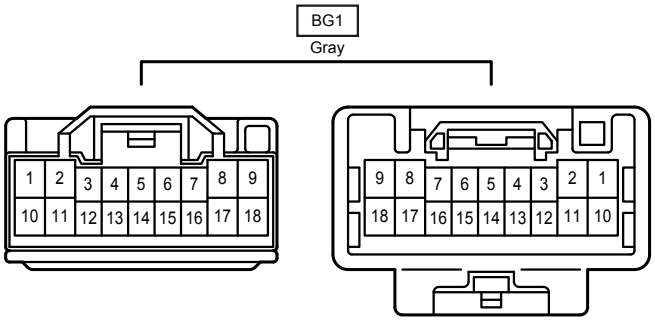
BG1
Gray
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10

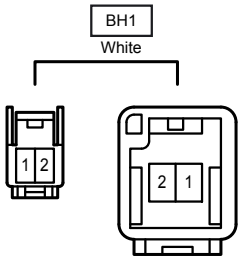

BH1
White
1 2
2 1

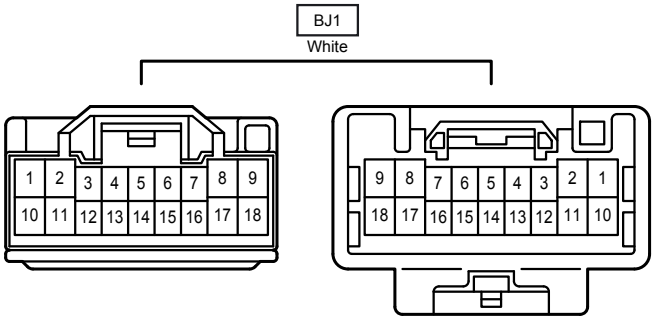
BJ1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10


IA1
White

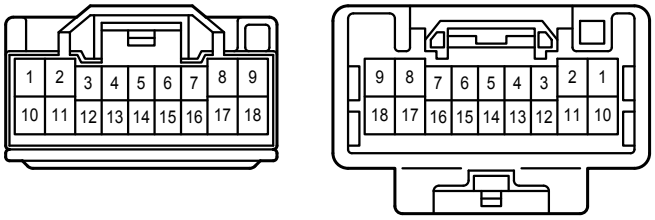


IA2
White

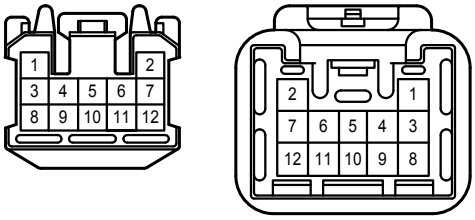

II3
White

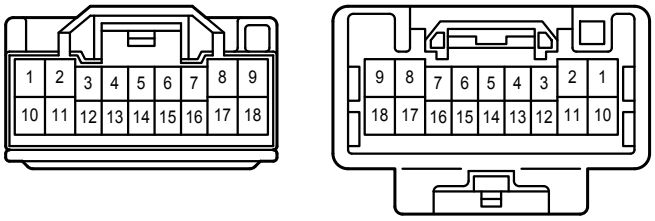

IM1
White

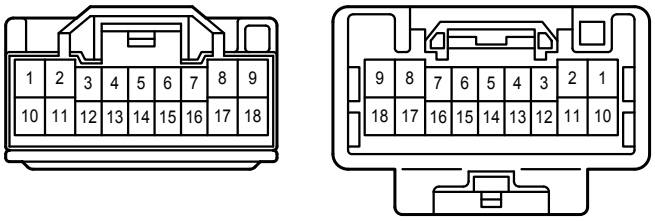

IM2
White

