



Power Seat for Driver's Seat with Memory

* 1 : w/ Driving Position Memory

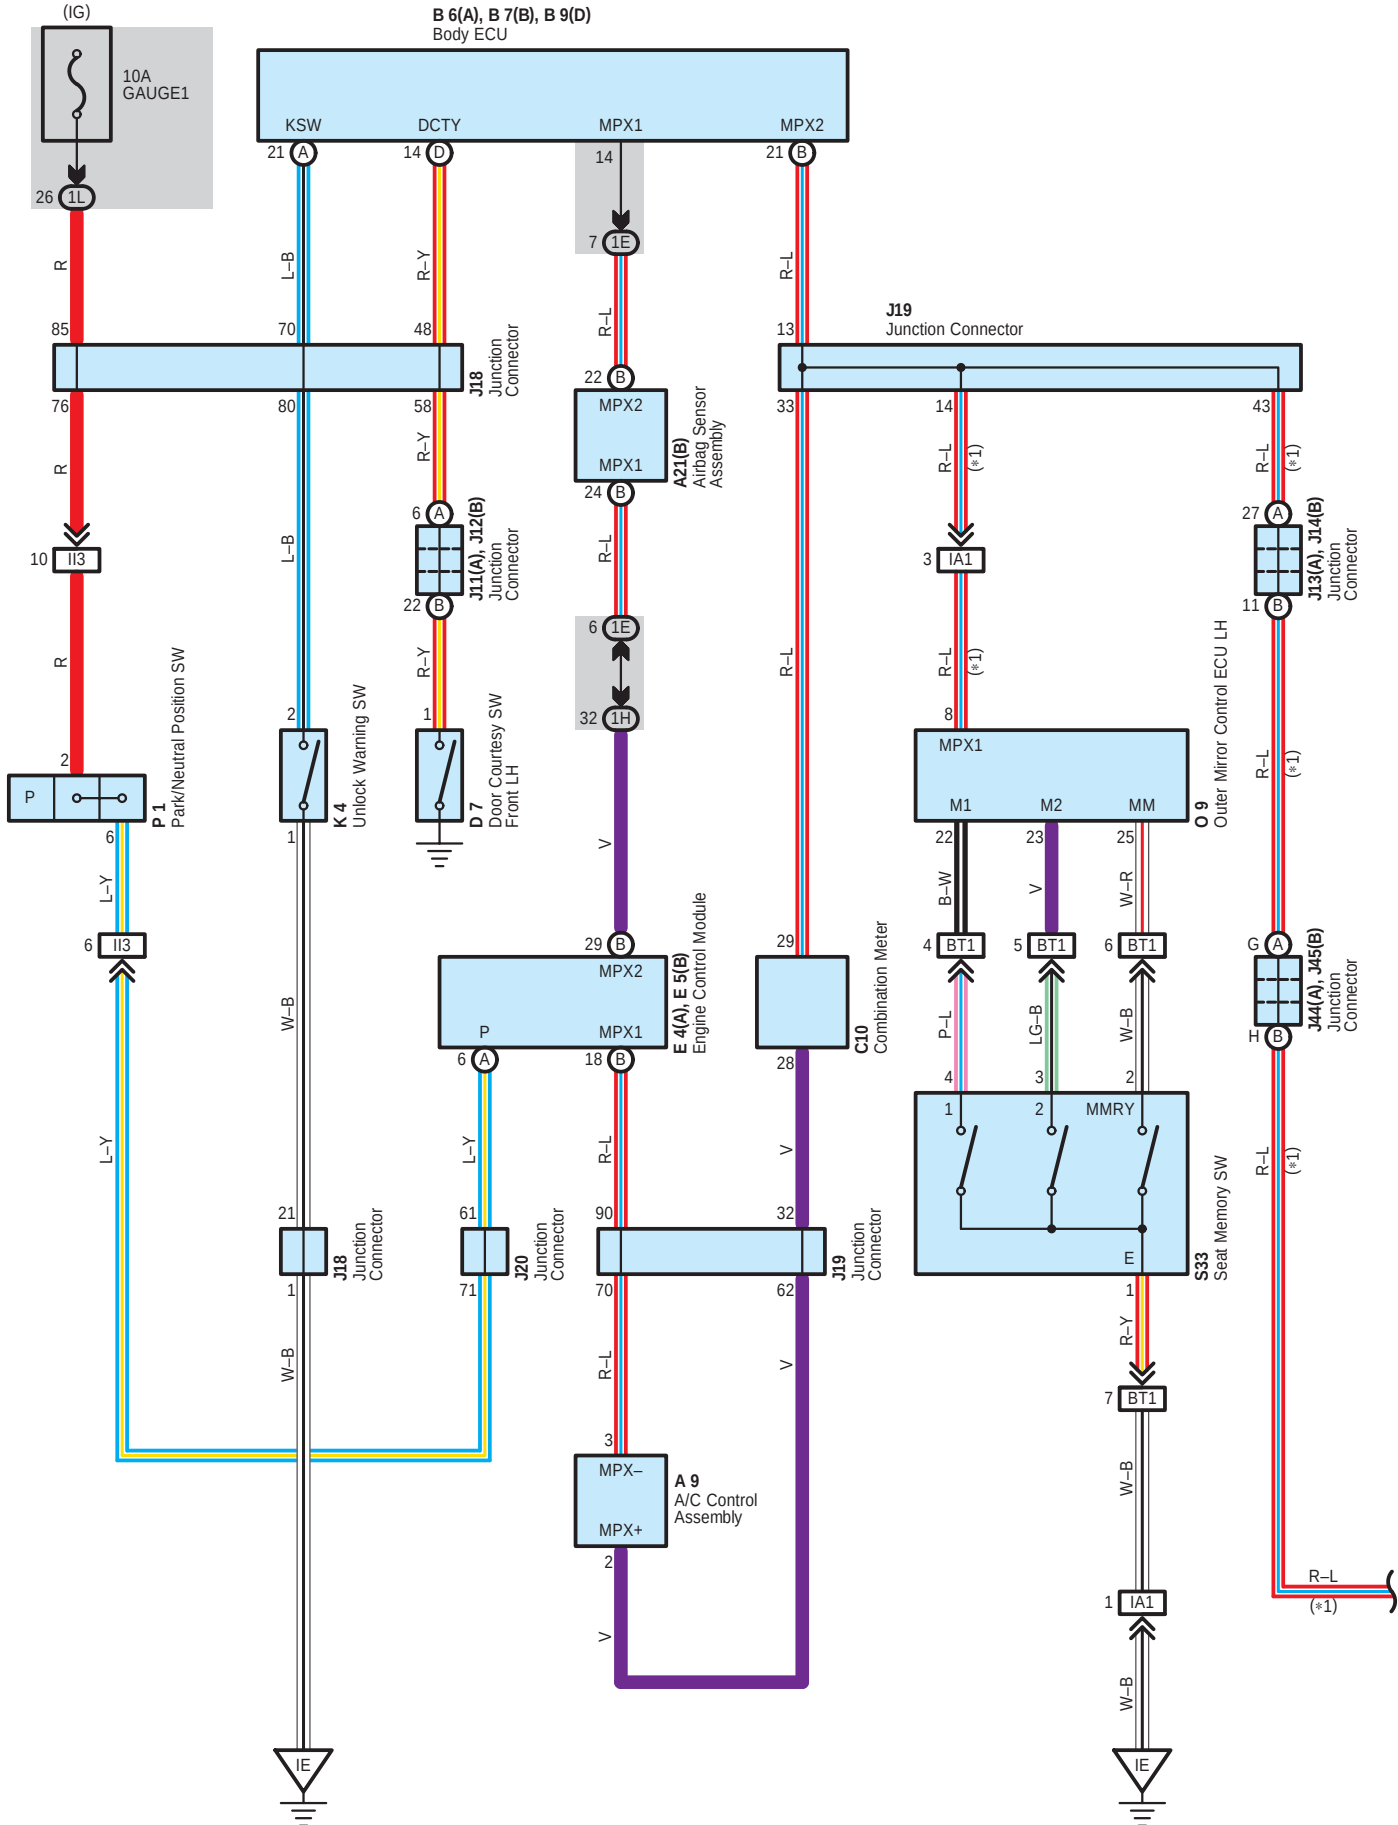

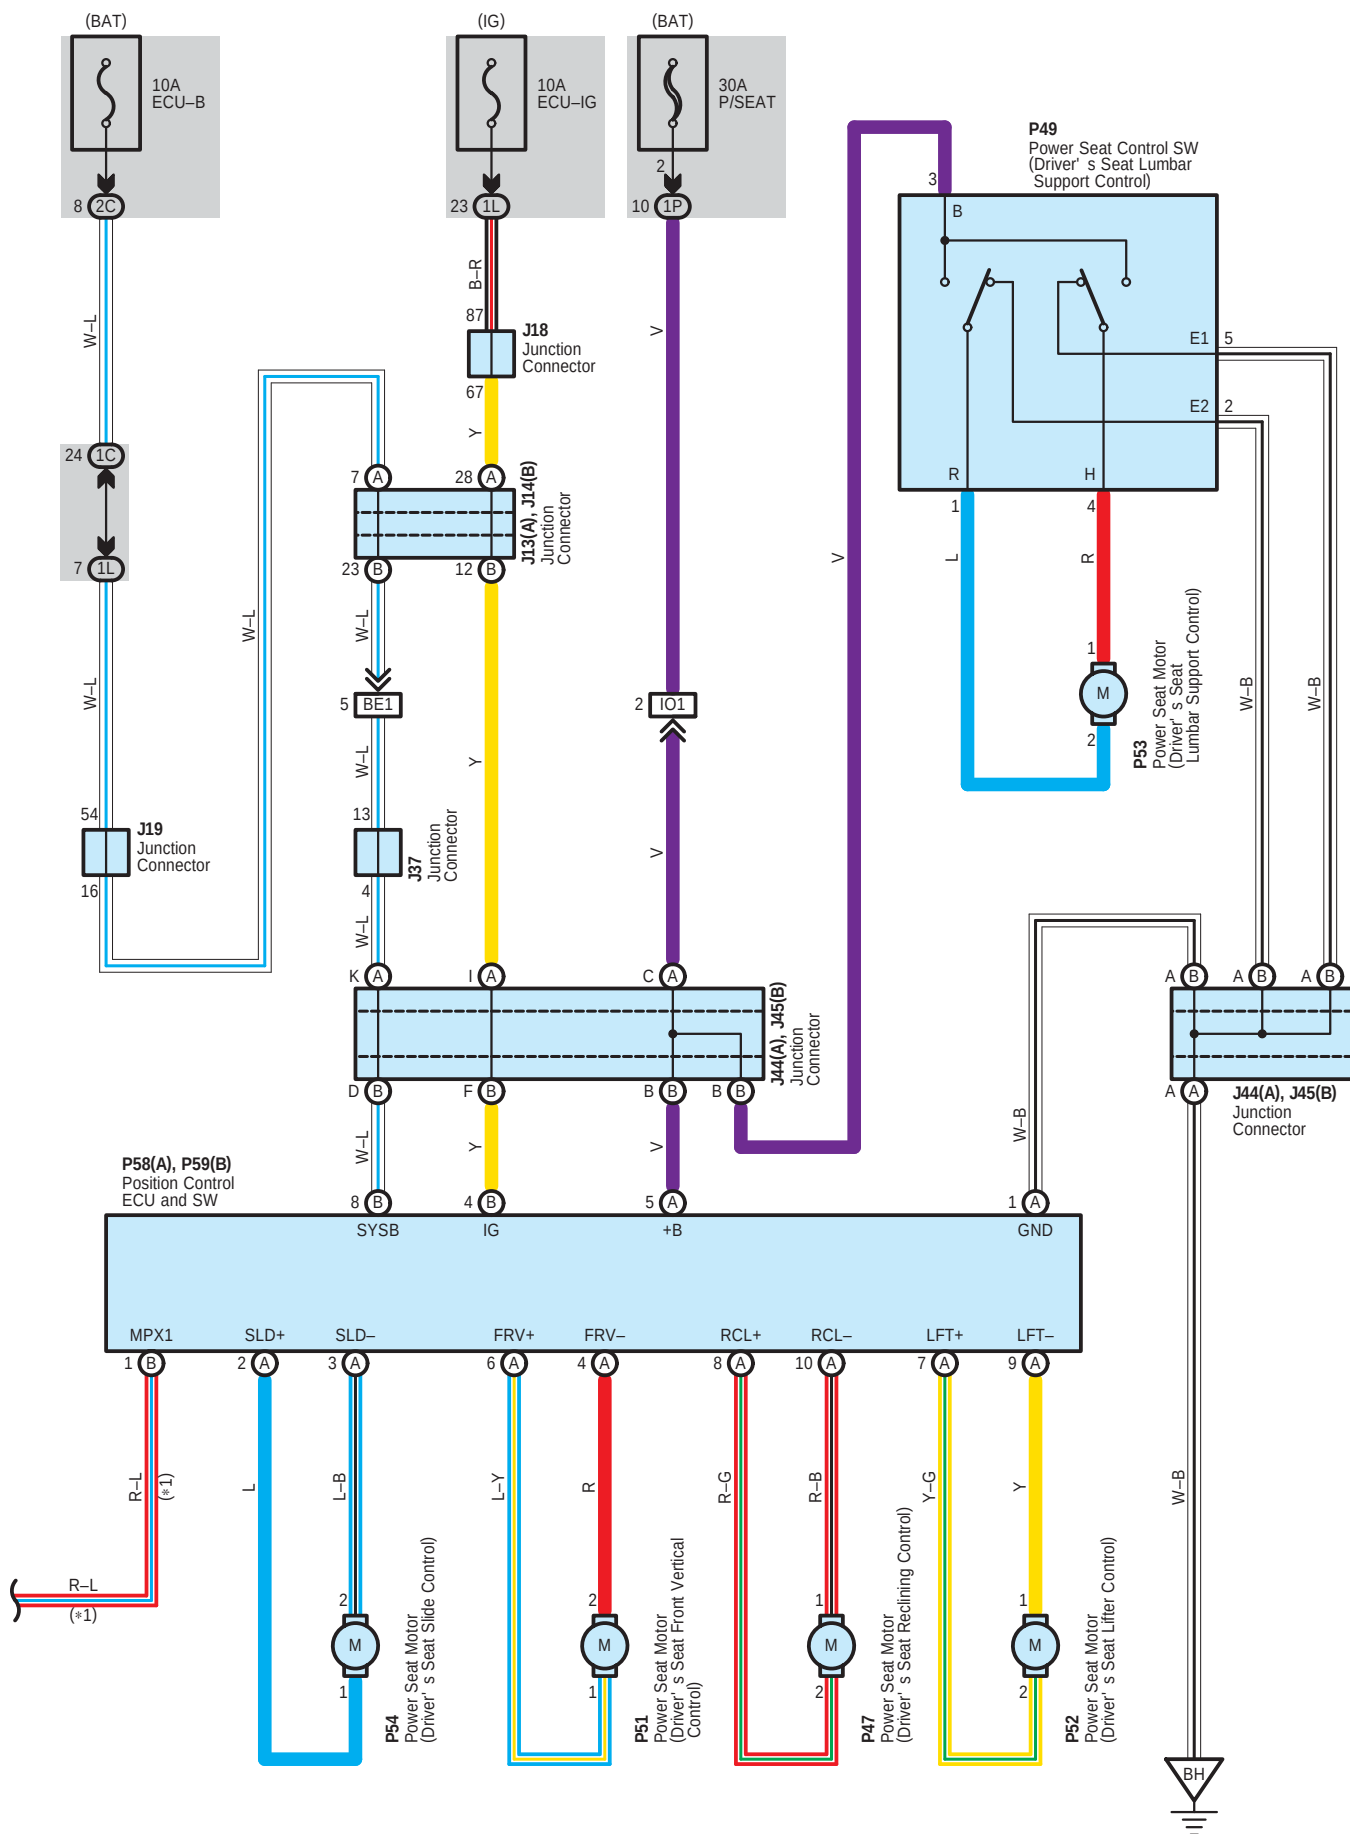

Power Seat for Driver's Seat with Memory

System Outline

- * In the power seat system, the position control ECU and SW receives the operation signal from the control switch via infrared communication to operate each power seat motor and adjust the seat position.
- * In the event that a malfunction occurs during infrared communication, this system has a fail-safe function to only slide or recline the seat.
- * This system has the following function:
 - * Manual slide operation
 - * Manual reclining control
 - * Manual front vertical control
 - * Manual lifter operation
 - * Driving position memory function

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A9	38	J13	A 40	P47	46 (*1)
A21	B 38	J14	B 40	P49	46 (*1)
B6	A 38	J18	40	P51	46 (*1)
B7	B 38	J19	40	P52	46 (*1)
B9	D 38	J20	40	P53	46 (*1)
C10	39	J37	43	P54	46 (*1)
D7	42	J44	A 46 (*1)	P58	A 46 (*1)
E4	A 39	J45	B 46 (*1)	P59	B 46 (*1)
E5	B 39	K4	40	S33	44
J11	A 40	O9	45		
J12	B 40	P1	37		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	31	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1E	31	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1H	30	
1L	31	
1P	31	
2C	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
II3	53	Engine Wire and Instrument Panel Wire (Right Kick Panel)
IO1	53	Floor No.1 Wire and Floor No.1 Wire (Left Kick Panel)
BE1	54	Floor No.1 Wire and Floor No.1 Wire (Left Rear Quarter Panel)
BT1	55	Front Door LH Wire and Courtesy Lamp Switch Wire Assembly (Inside Front Door Trim LH)

▽ : Ground Points

Code	See Page	Ground Points Location
IE	52	Left Kick Panel
BH	54	Under the Left Center Pillar

* 1 : Front Seat w/ Power Seat * 2 : Front Seat w/o Power Seat * 3 : Rear No.2 Seat

