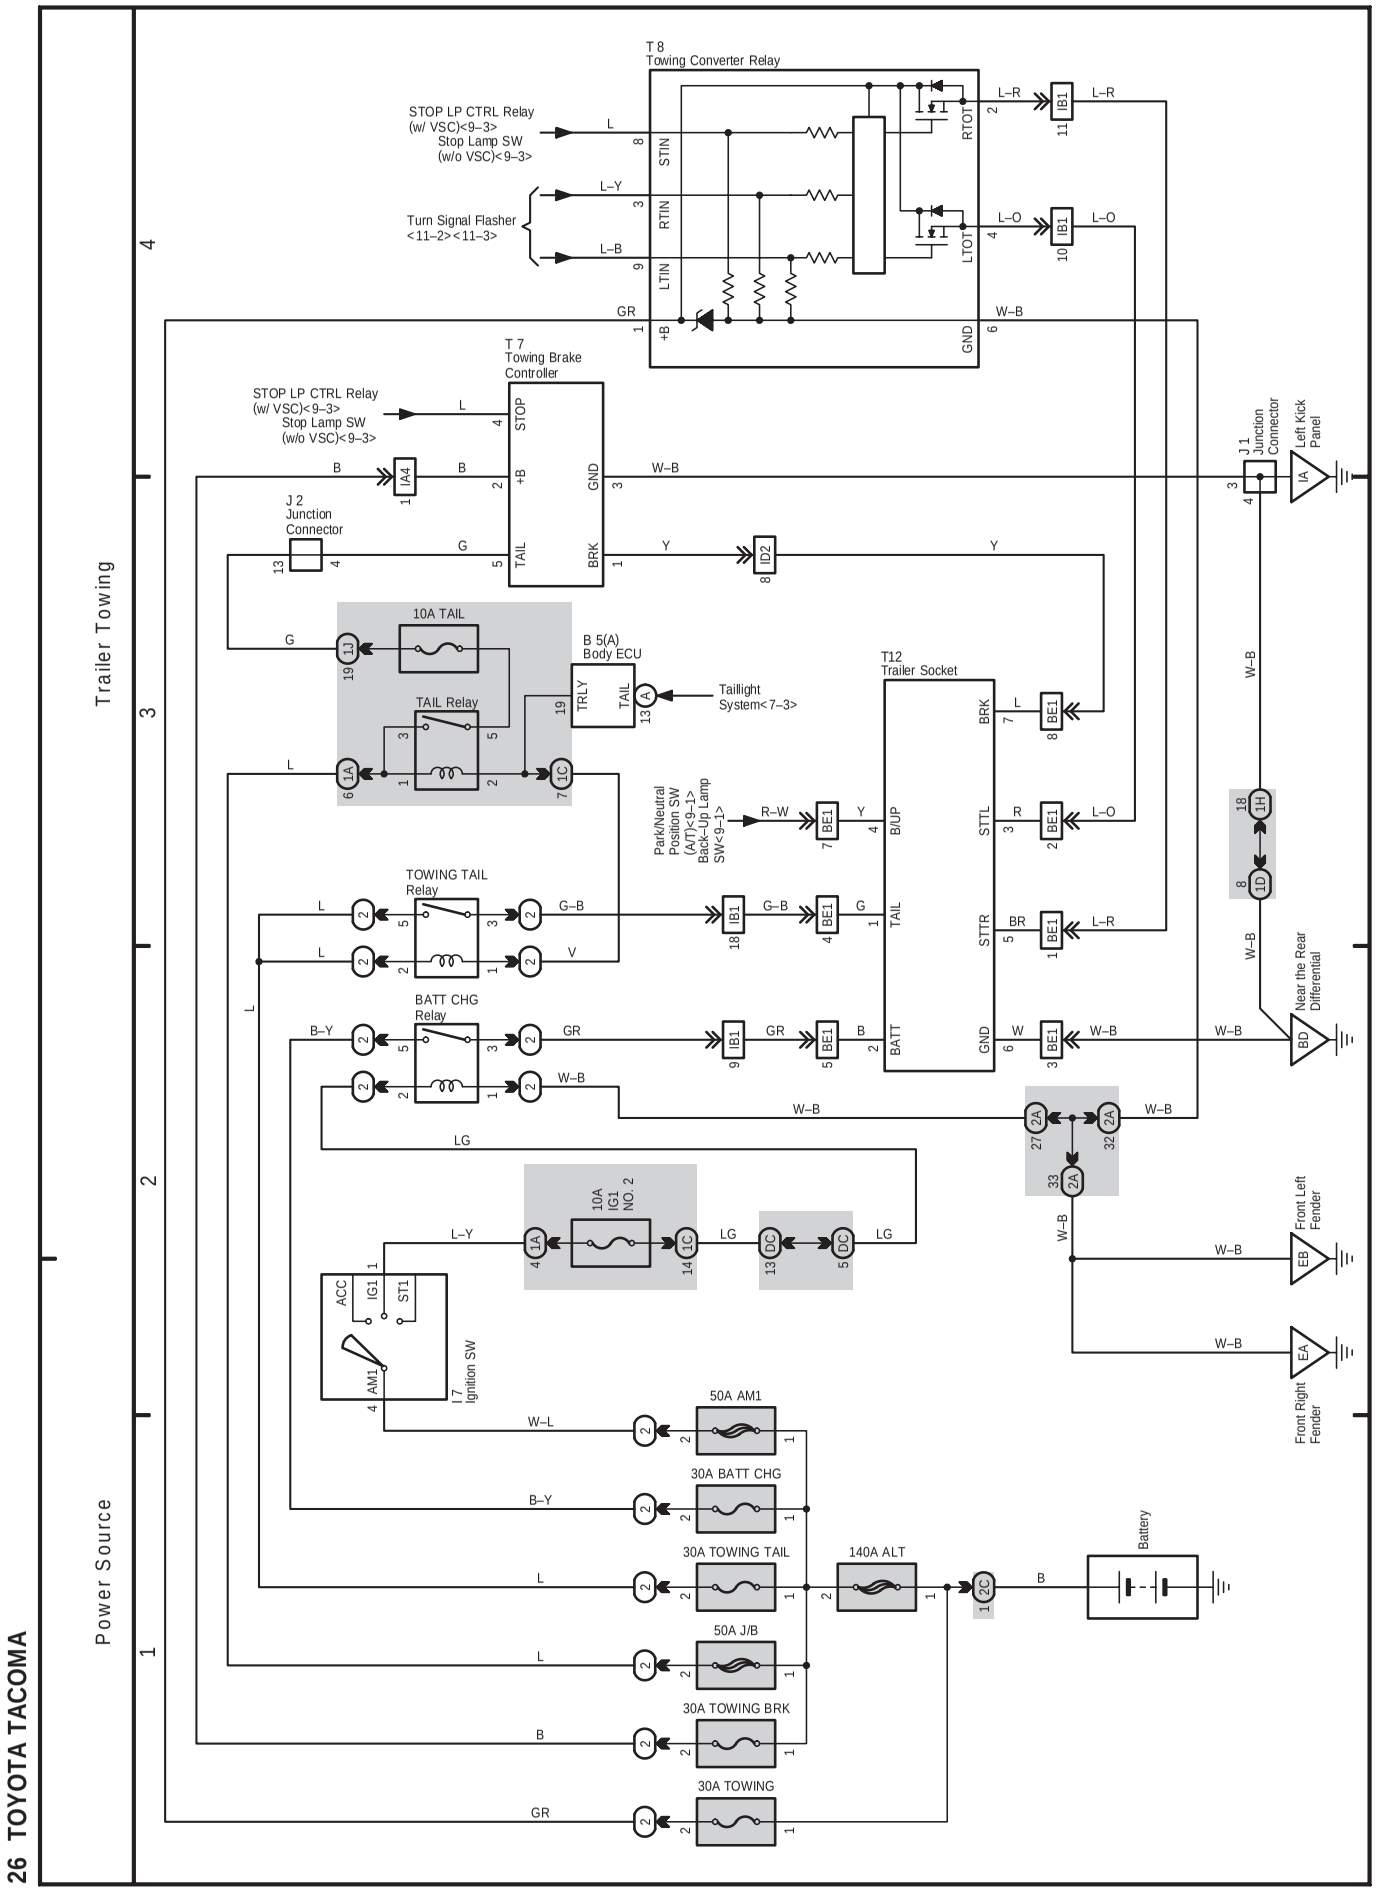

Trailer Towing
Power Source
T 8
Towing Converter Relay
STOP LP CTRL Relay
(w/ VSC)<9–3>
Stop Lamp SW
(w/o VSC)<9–3>
Turn Signal Flasher
<11–2><11–3>
STIN
RTIN
LTIN
+B
GND
RTOT
LTOT
T 7
Towing Brake
Controller
STOP
TAIL
BRK
J 2
Junction
Connector
J 1
Junction
Connector
Left Kick
Panel
10A TAIL
TAIL Relay
B 5(A)
Body ECU
TRLY
Taillight
System<7–3>
T12
Trailer Socket
BRK
STTL
STTR
B/UP
BATT
GND
Park/Neutral
Position SW
(A/T)<9–1>
Back–Up Lamp
SW<9–1>
TOWING TAIL
Relay
BATT CHG
Relay
Near the Rear
Differential
10A
IG1
NO. 2
ACC
IG1
ST1
AM1
I 7
Ignition SW
50A AM1
30A BATT CHG
30A TOWING TAIL
140A ALT
50A J/B
30A TOWING BRK
30A TOWING
Battery
Front Left
Fender
Front Right
Fender