
■INSIDE REAR VIEW MIRROR

1. General


- On X-Runner package models, the inside rear view mirror with EC mirror, of which the display unit (3.3-inch LCD) is integrated with a compass, outside temperature and rear view monitor display functions, has been provided as standard. For models other than regular cab models, it has been made available as an option.
- For models equipped with a garage door opener, the garage door opener switch has been provided on the inside rear view mirror.

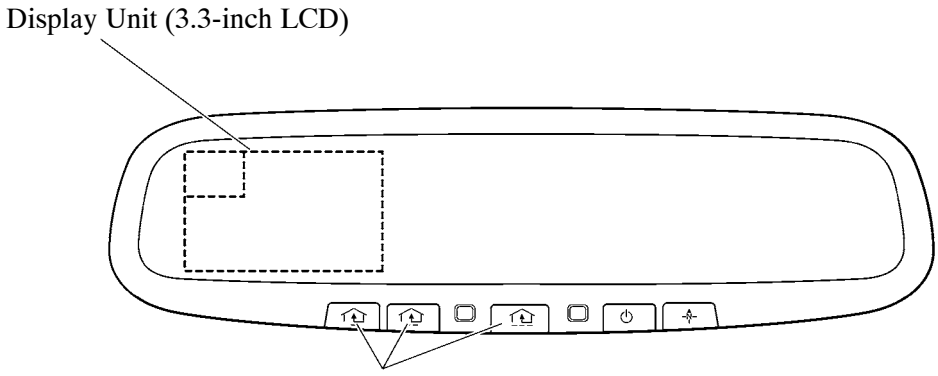

18RNF48Z

*: Only on models with the garage door opener

’12 TACOMA

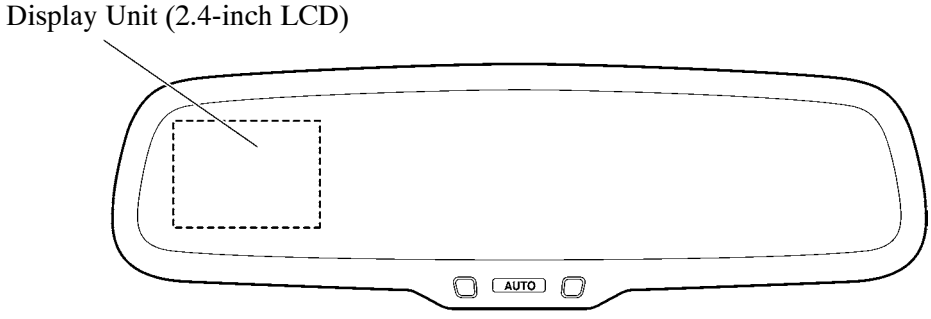

’11 TACOMA


18RNF49S

▶ Function List ◀

○: Available —: None


Function	’12 TACOMA	’11 TACOMA
Rear View Monitor	○ (3.3 inch)	○ (2.4 inch)
EC Mirror	○	○
Outside Temperature indicator	○ (Displayed on the display unit)	○ (Displayed on the accessory meter)
Compass	○ (Displayed on the display unit)	○ (Displayed on the accessory meter)
Garage Door Opener	○	—
Customization	○	—


2. System Diagram

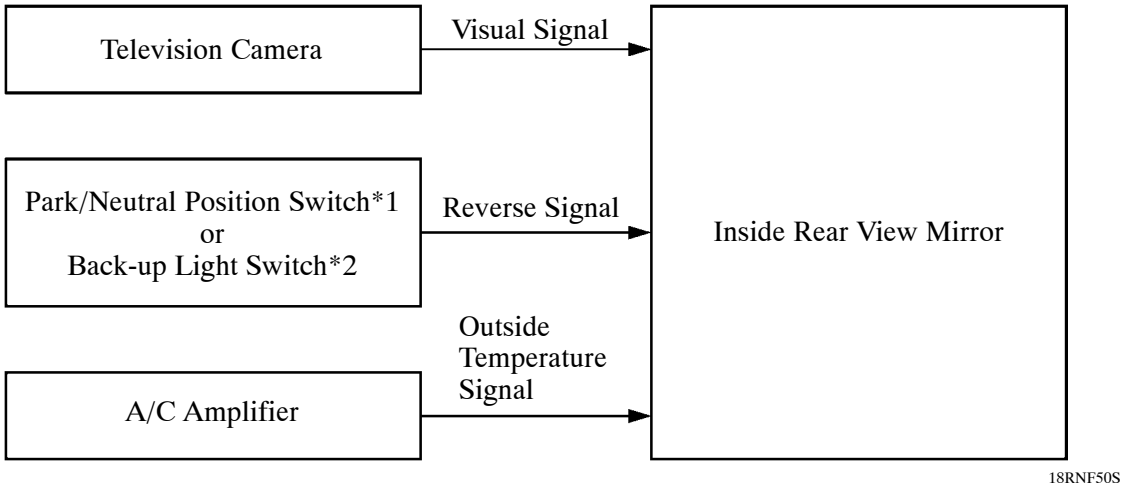


*1: Only for automatic transmission models
*2: Only for manual transmission models

3. Layout of Main Component

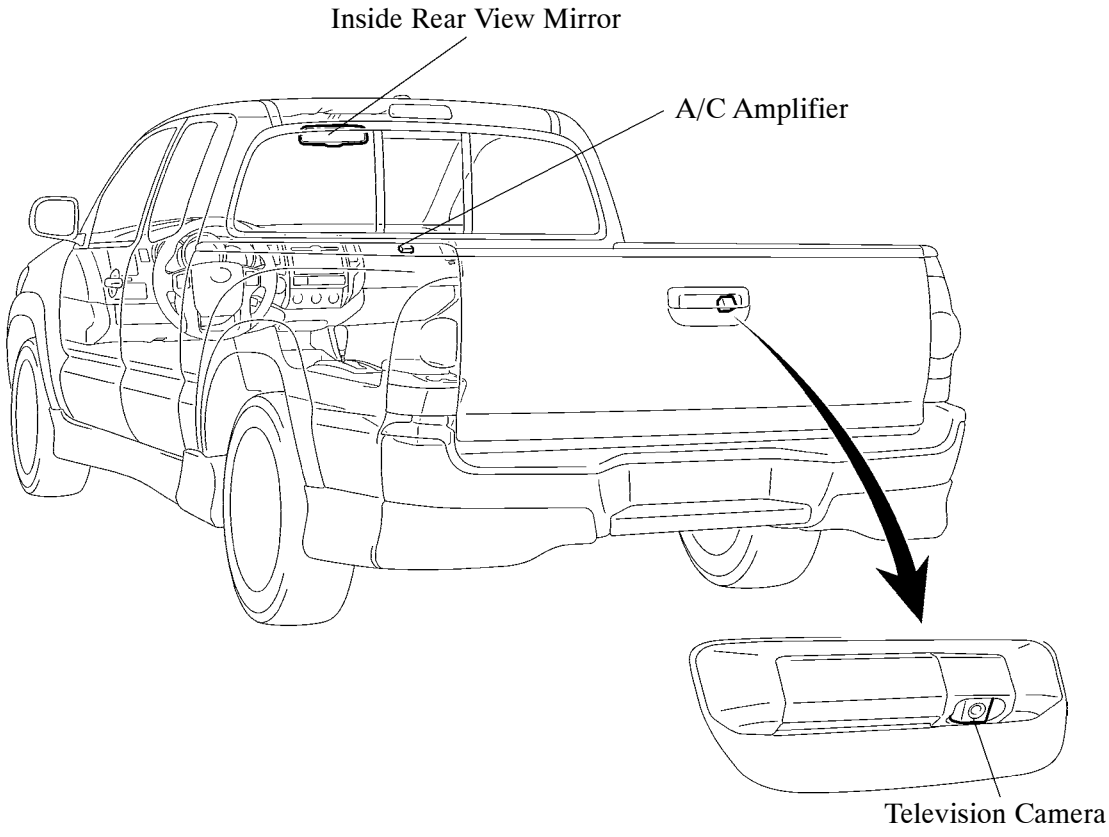

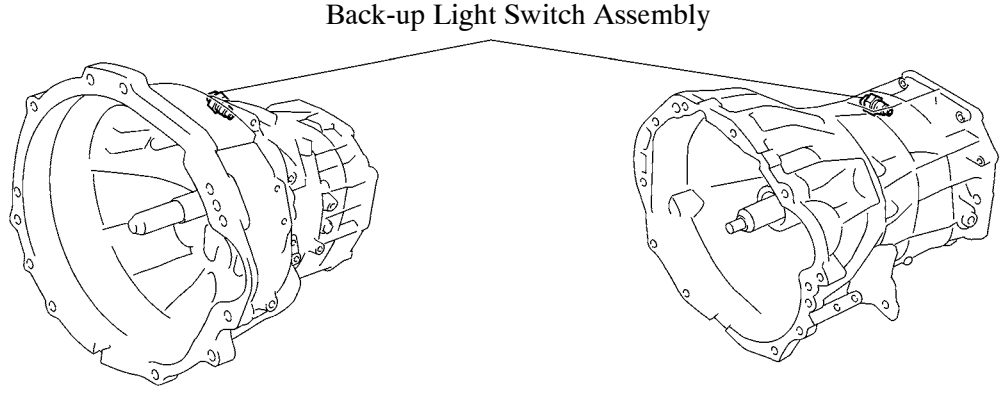

R155, R155F M/T **RA60, RA60F M/T**

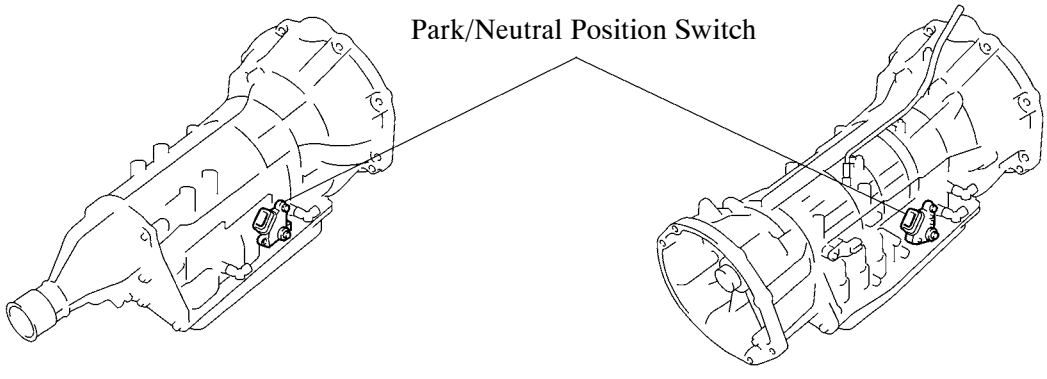


A340E, A340F A/T **A750E, A750F A/T**


18RNF51Y

4. Display Function

The display unit of the inside rear view mirror with EC mirror changes the screen display to the normal, rear view monitor, garage door opener registration, or menu screen in accordance with the shift lever position and selected mode.

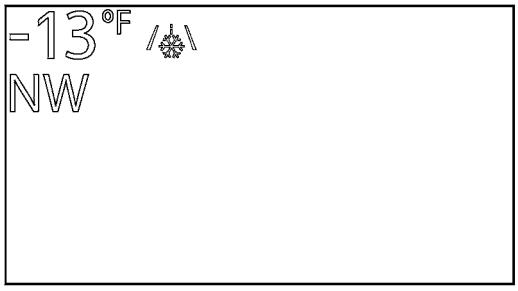


Normal display

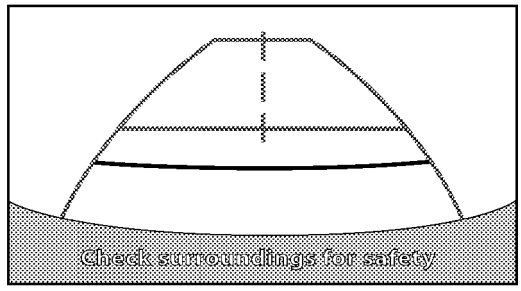

Rear view monitor display



Garage door opener registration guide display*

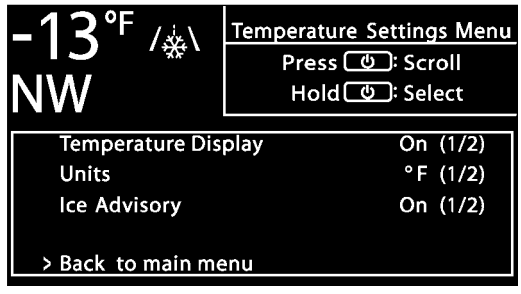

Menu screen display

18RNF52Y

*: Only on models with the garage door opener


▶ Display Function ◀

Function	Outline
Rear View Monitor	Displays the rear view behind the vehicle when the shift lever is in the R position. When this function becomes active, the EC mirror function will be canceled.
Compass	The compass indicates north as 0° and the forward direction of the vehicle by 8 azimuths (N, NE, E, SE, S, SW, W, and NW).
Outside Temperature Indicator	Displays the outside temperature. If the outside temperature is 3°C (37°F) or below, the ice advisory will come on.
Garage Door Opener	Displays guidance on how to register the garage door opener.
Customize	Displays the menu screen to customize the items listed below. – Outside temperature indicator – Compass – Layout – Ice advisory – Rear view monitor – Color (for compass and outside temperature indicator) – Language

5. Menu Display

General

- The information display settings can be customized through the menu screen displayed on the display unit.

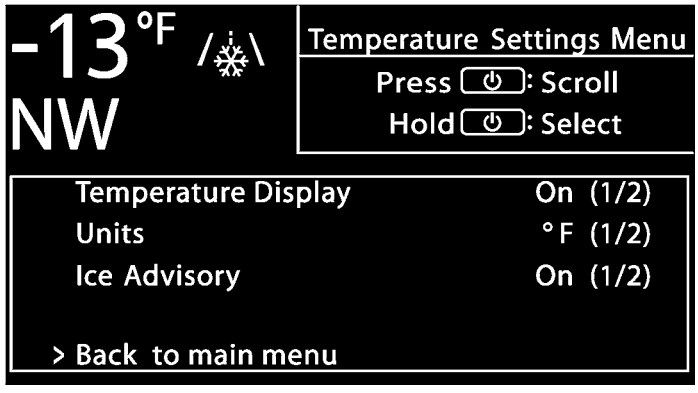

Menu Display


18RNF53Y

- The setting items that are customizable from the menu screen are as follows.

Customizable item	Customizable parameter
Outside Temperature Indicator	Display ON/OFF and temperature unit
Compass	Display ON/OFF, zone and calibration
Layout	Display positions of outside temperature and compass indications
Ice Advisory	Display ON/OFF
Rear View Monitor	Display ON/OFF
Color	Font color (for compass and outside temperature indicator)
Language	Interface language

Launching and operating the menu screen

By using the EC mirror function switch and/or the compass switch (provided on models with the garage door opener), the menu screen can be launched and a setting item can be selected.

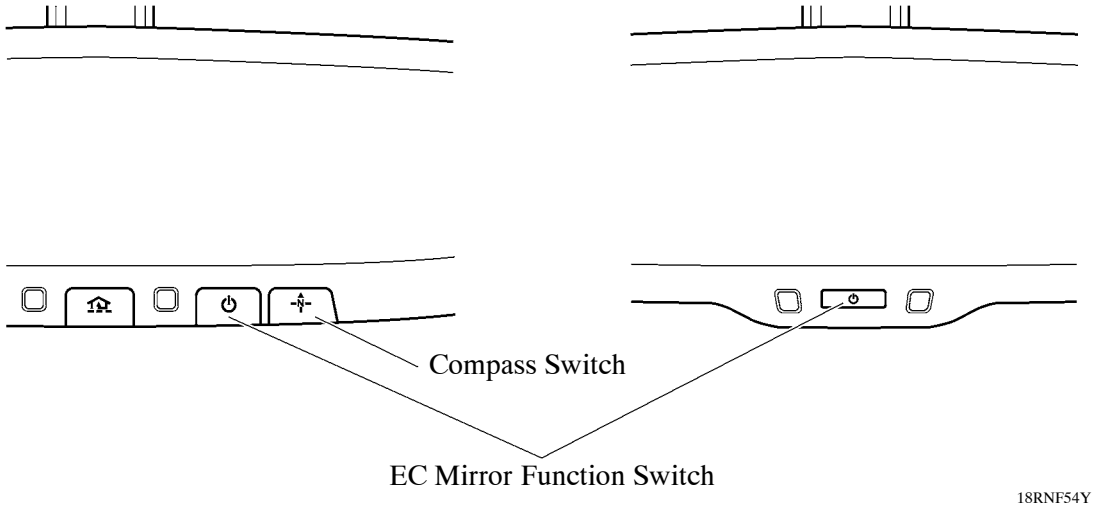

Models with Garage Door Opener **Models without Garage Door Opener**

▶ Switch Operations ◀

Function	Models with Garage Door Opener	Models without Garage Door Opener
Launching the menu	Press the compass switch	Press and hold the EC mirror function switch
Selecting a menu item	Press the compass switch	Press the EC mirror function switch
Entering a selected item	Press the EC function switch	Press and hold the EC mirror function switch