



(BAT)
(IG)
15A
STOP
7. 5A
ECU–IG
No. 1
17 DB
W
13 A
15 A
14 A
A42(A)
Junction
Connector
L
R
G
W
2
1
A4
Stop Light
Switch
5
1
4
BRK NO. 1 Relay
BRK NO. 2 Relay
3
2
BE
LG
W
BR
L
Y
12 A
10 A
2
35
7 B
A38(A)
Junction
Connector
STPO
BSW
A17
Skid Control ECU
with Actuator
11 A
A40(A), A41(B)
Junction Connector
10 A
SB
3 RA1
5 AP2
STP
Stop
Tail
E
6
W–B
R5
Rear Combination
Light LH
R4
Rear Combination
Light RH
B
High Mounted
Stop Light
P8
Cargo Light
High Mounted Stop Light
R1
P2


A 4
Blue

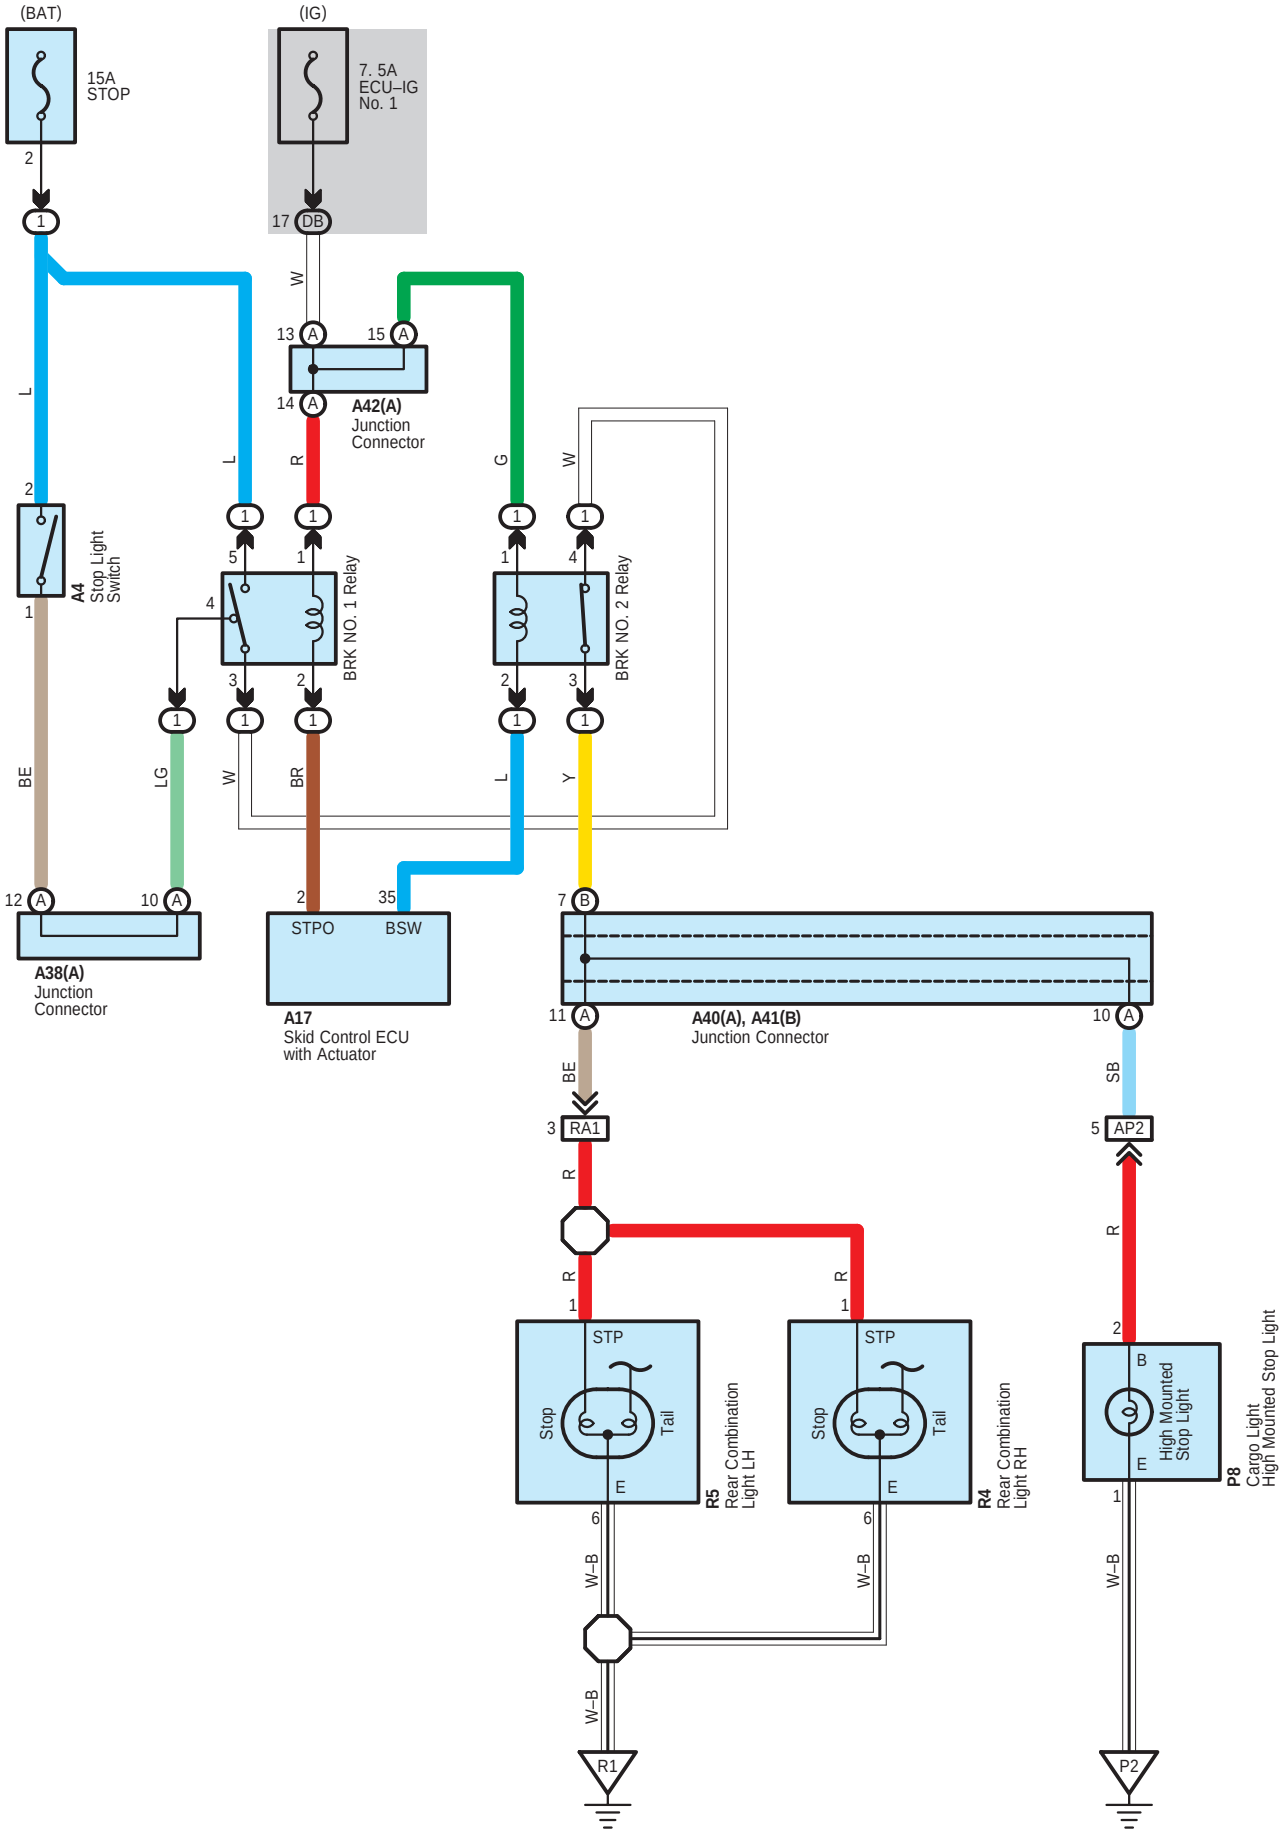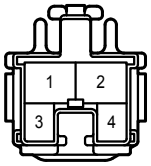


A 17
Black

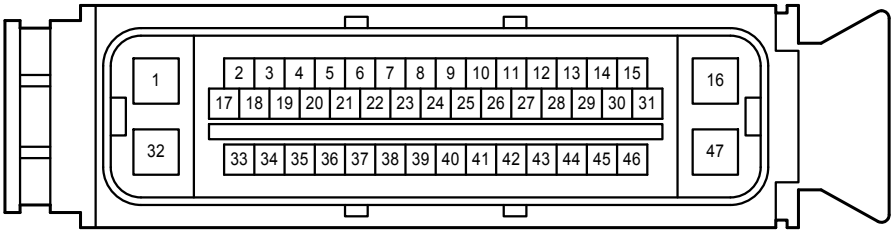


A 38
Black

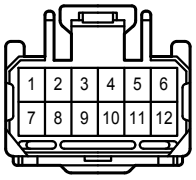


A 40
Black

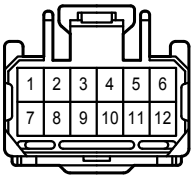


A 41
Black

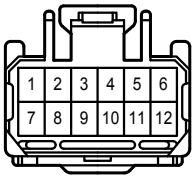

A 42
Black

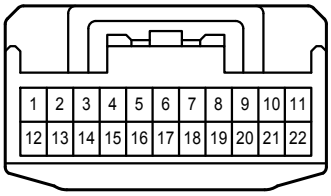

P 8
White

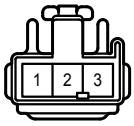


R 4
Gray




R 5
Gray



DB
White

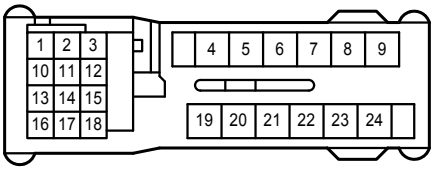

AP2
White

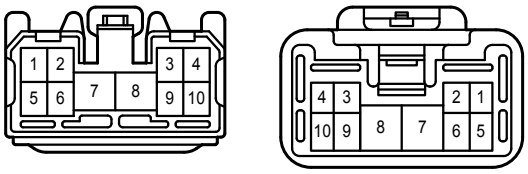

RA1
White

