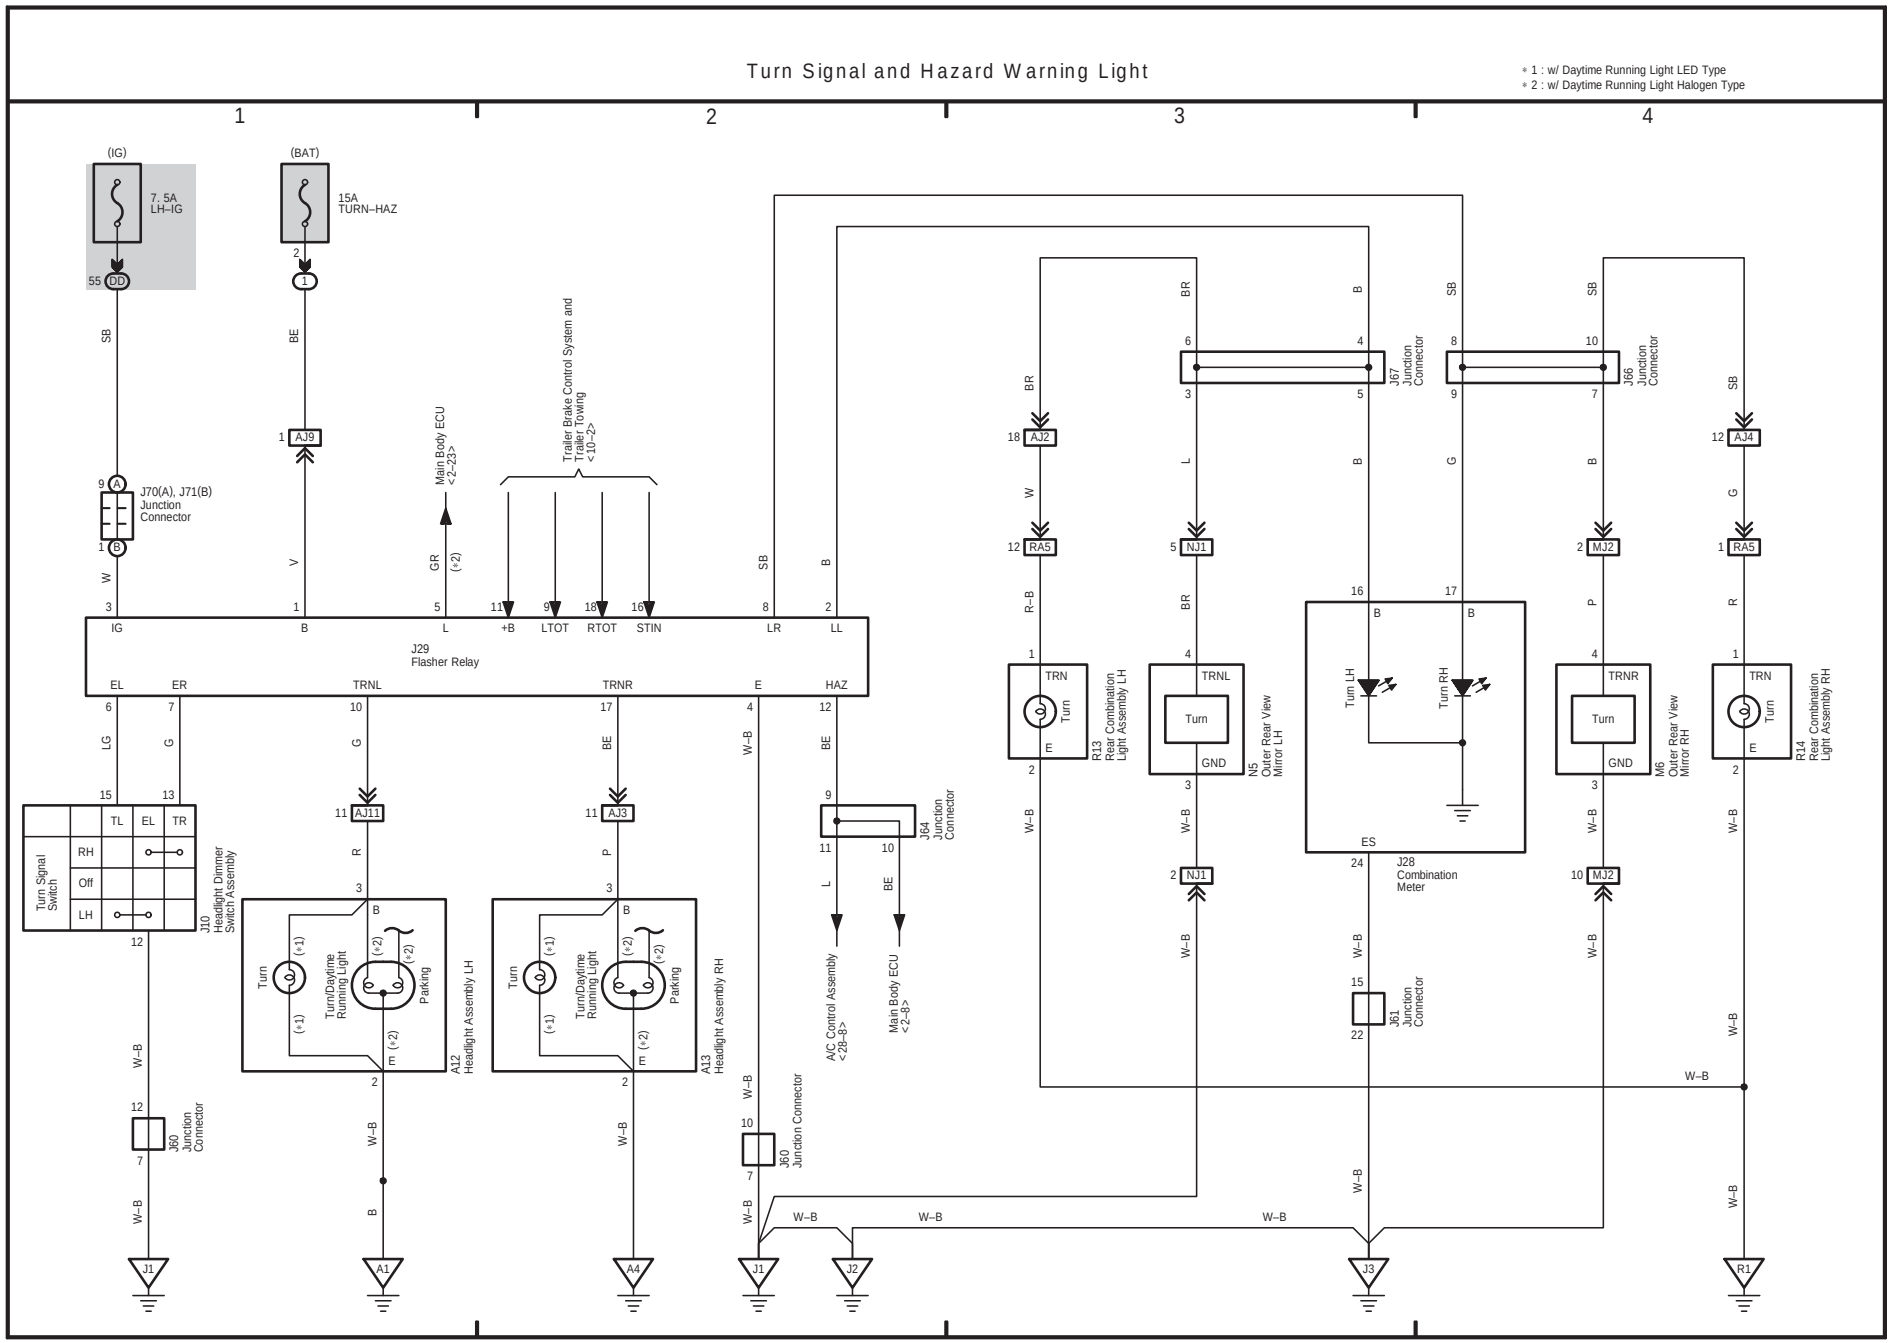

Turn Signal and Hazard Warning Light
* 1 : w/ Daytime Running Light LED Type
* 2 : w/ Daytime Running Light Halogen Type
1
2
3
4
(IG)
(BAT)
7. 5A
LH–IG
15A
TURN–HAZ
J70(A), J71(B)
Junction
Connector
Main Body ECU
<2–23>
Trailer Brake Control System and
Trailer Towing
<10–2>
J29
Flasher Relay
IG
B
L
+B
LTOT
RTOT
STIN
LR
LL
EL
ER
TRNL
TRNR
E
HAZ
Turn Signal
Switch
TL
EL
TR
RH
Off
LH
J10
Headlight Dimmer
Switch Assembly
A12
Headlight Assembly LH
A13
Headlight Assembly RH
Turn
Turn/Daytime
Running Light
Parking
J60
Junction
Connector
J64
Junction
Connector
A/C Control Assembly
<28–8>
Main Body ECU
<2–8>
J67
Junction
Connector
J66
Junction
Connector
J61
Junction
Connector
J28
Combination
Meter
Turn LH
Turn RH
R13
Rear Combination
Light Assembly LH
R14
Rear Combination
Light Assembly RH
N5
Outer Rear View
Mirror LH
M6
Outer Rear View
Mirror RH
TRN
TRNL
TRNR
GND
ES
W–B