




(ACC)
(IG)
(BAT)
J2(B), J3(C), J4(D)
Main Body ECU
7. 5A
ACC
7. 5A
ECU–IG
No. 2
25A
DR/LCK
ALTB
IG
ACC
GND1
GND2
6
15
22
5
4
21
DB
B
A1



J2(B), J3(C), J4(D)
Main Body ECU
CGLP
CGSW
DCTY
PCTY
LCTY
RRCY
14 B
9 C
24 D
21 C
17
25 C
2 DC
(BAT)
7. 5A
CARGO LP
CARGO Relay
LG
BR
GR
W
B
L
9
10
CGON
CGLP
ON
DOOR
OFF
CCTY
E
J50
Cargo Light Switch
13 DC
46 DD
5
7
V
W–B
BR
13
J64
Junction Connector
14
16 PJ2
3 QJ1
10 QJ1
SB
BE
G
7 DE
21 DB
DL
Cargo Light LH
Cargo Light RH
E
P8
Cargo Light
High Mounted Stop Light
P5
Front Door Courtesy
Switch LH
Q5
Front Door Courtesy
Switch RH
P6
Rear Door Courtesy
Switch LH
Q6
Rear Door Courtesy
Switch RH
P2
P1
A1

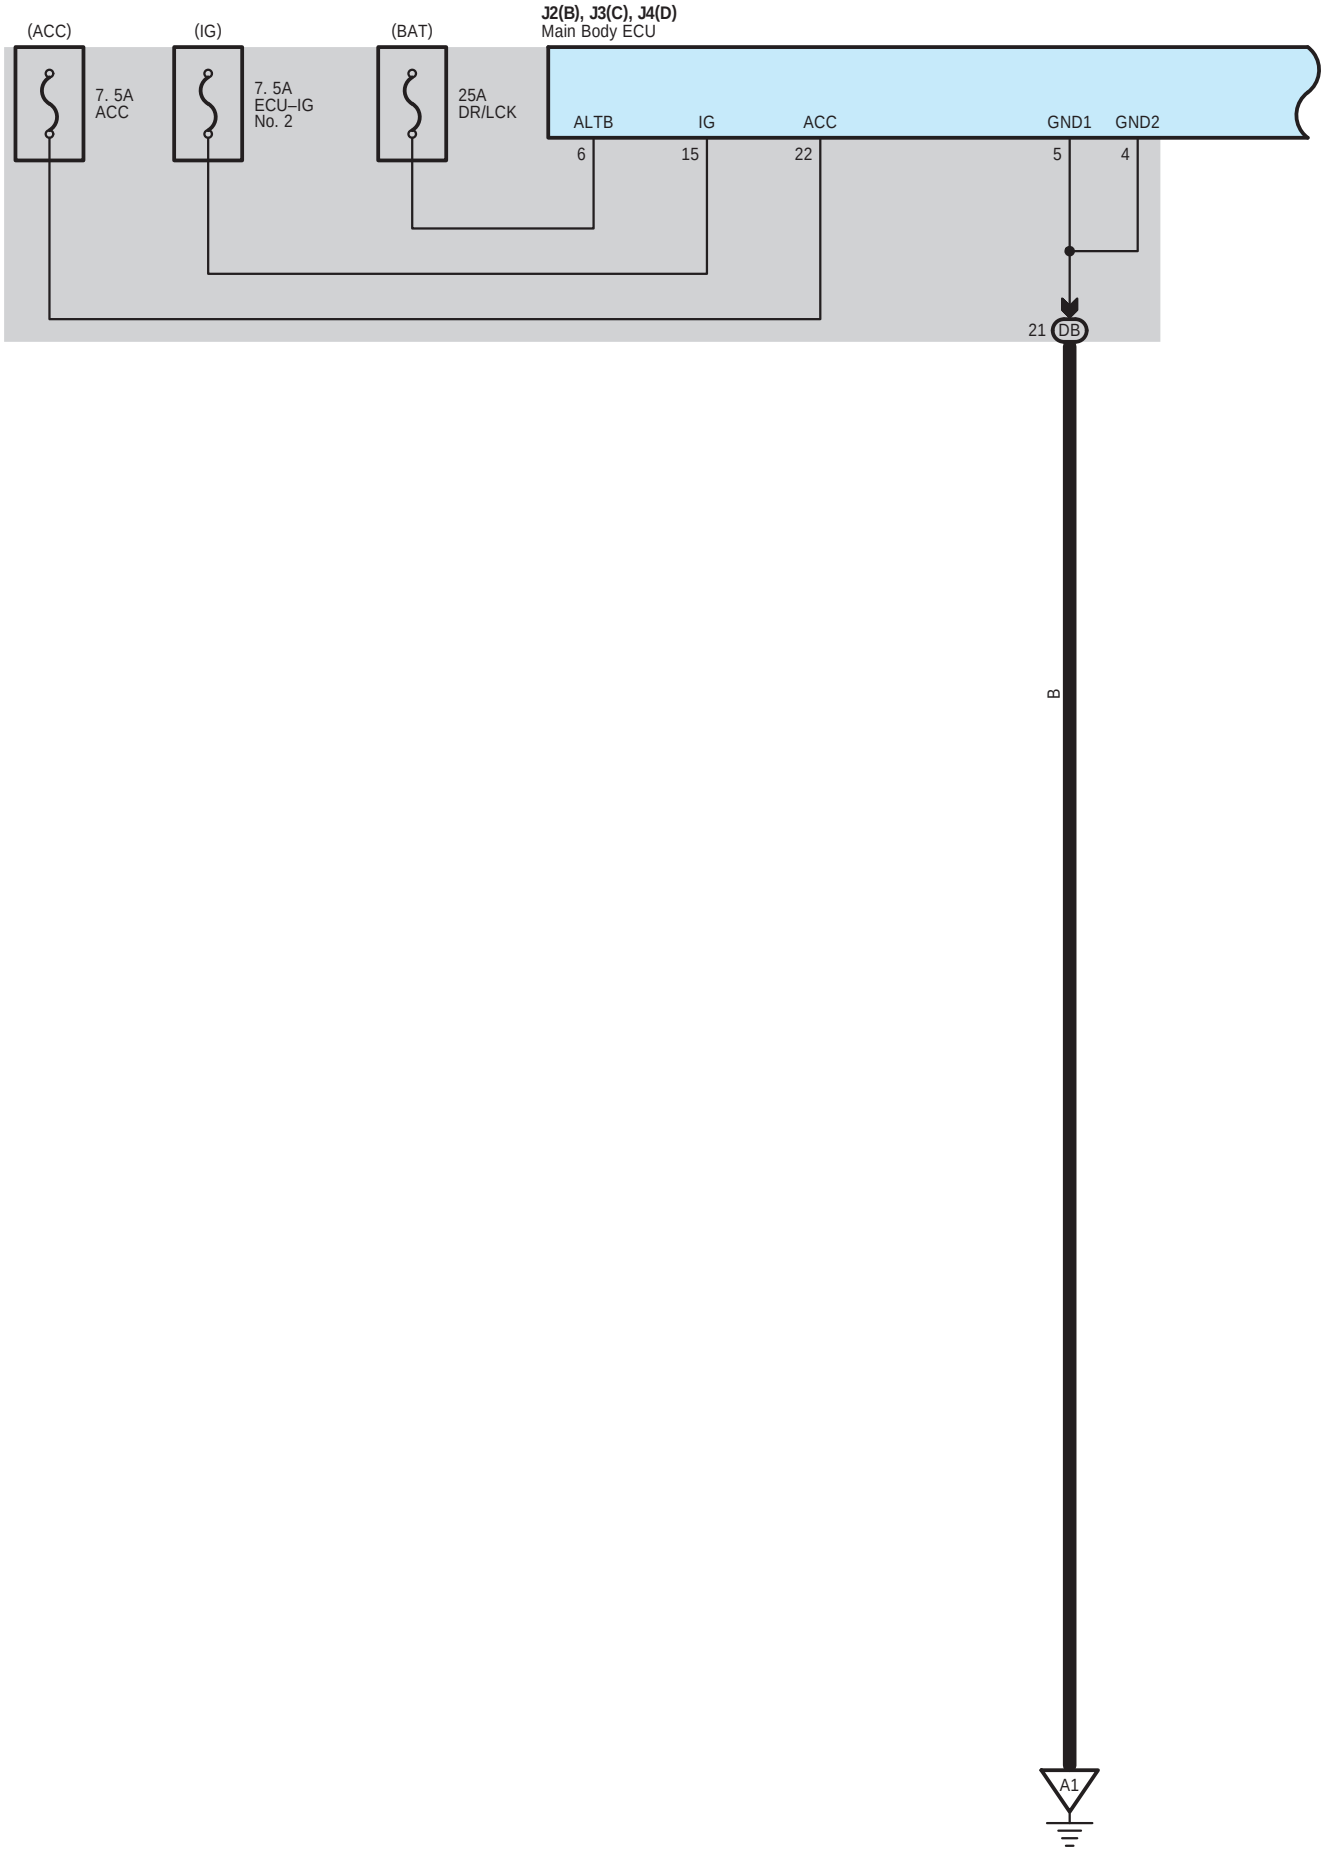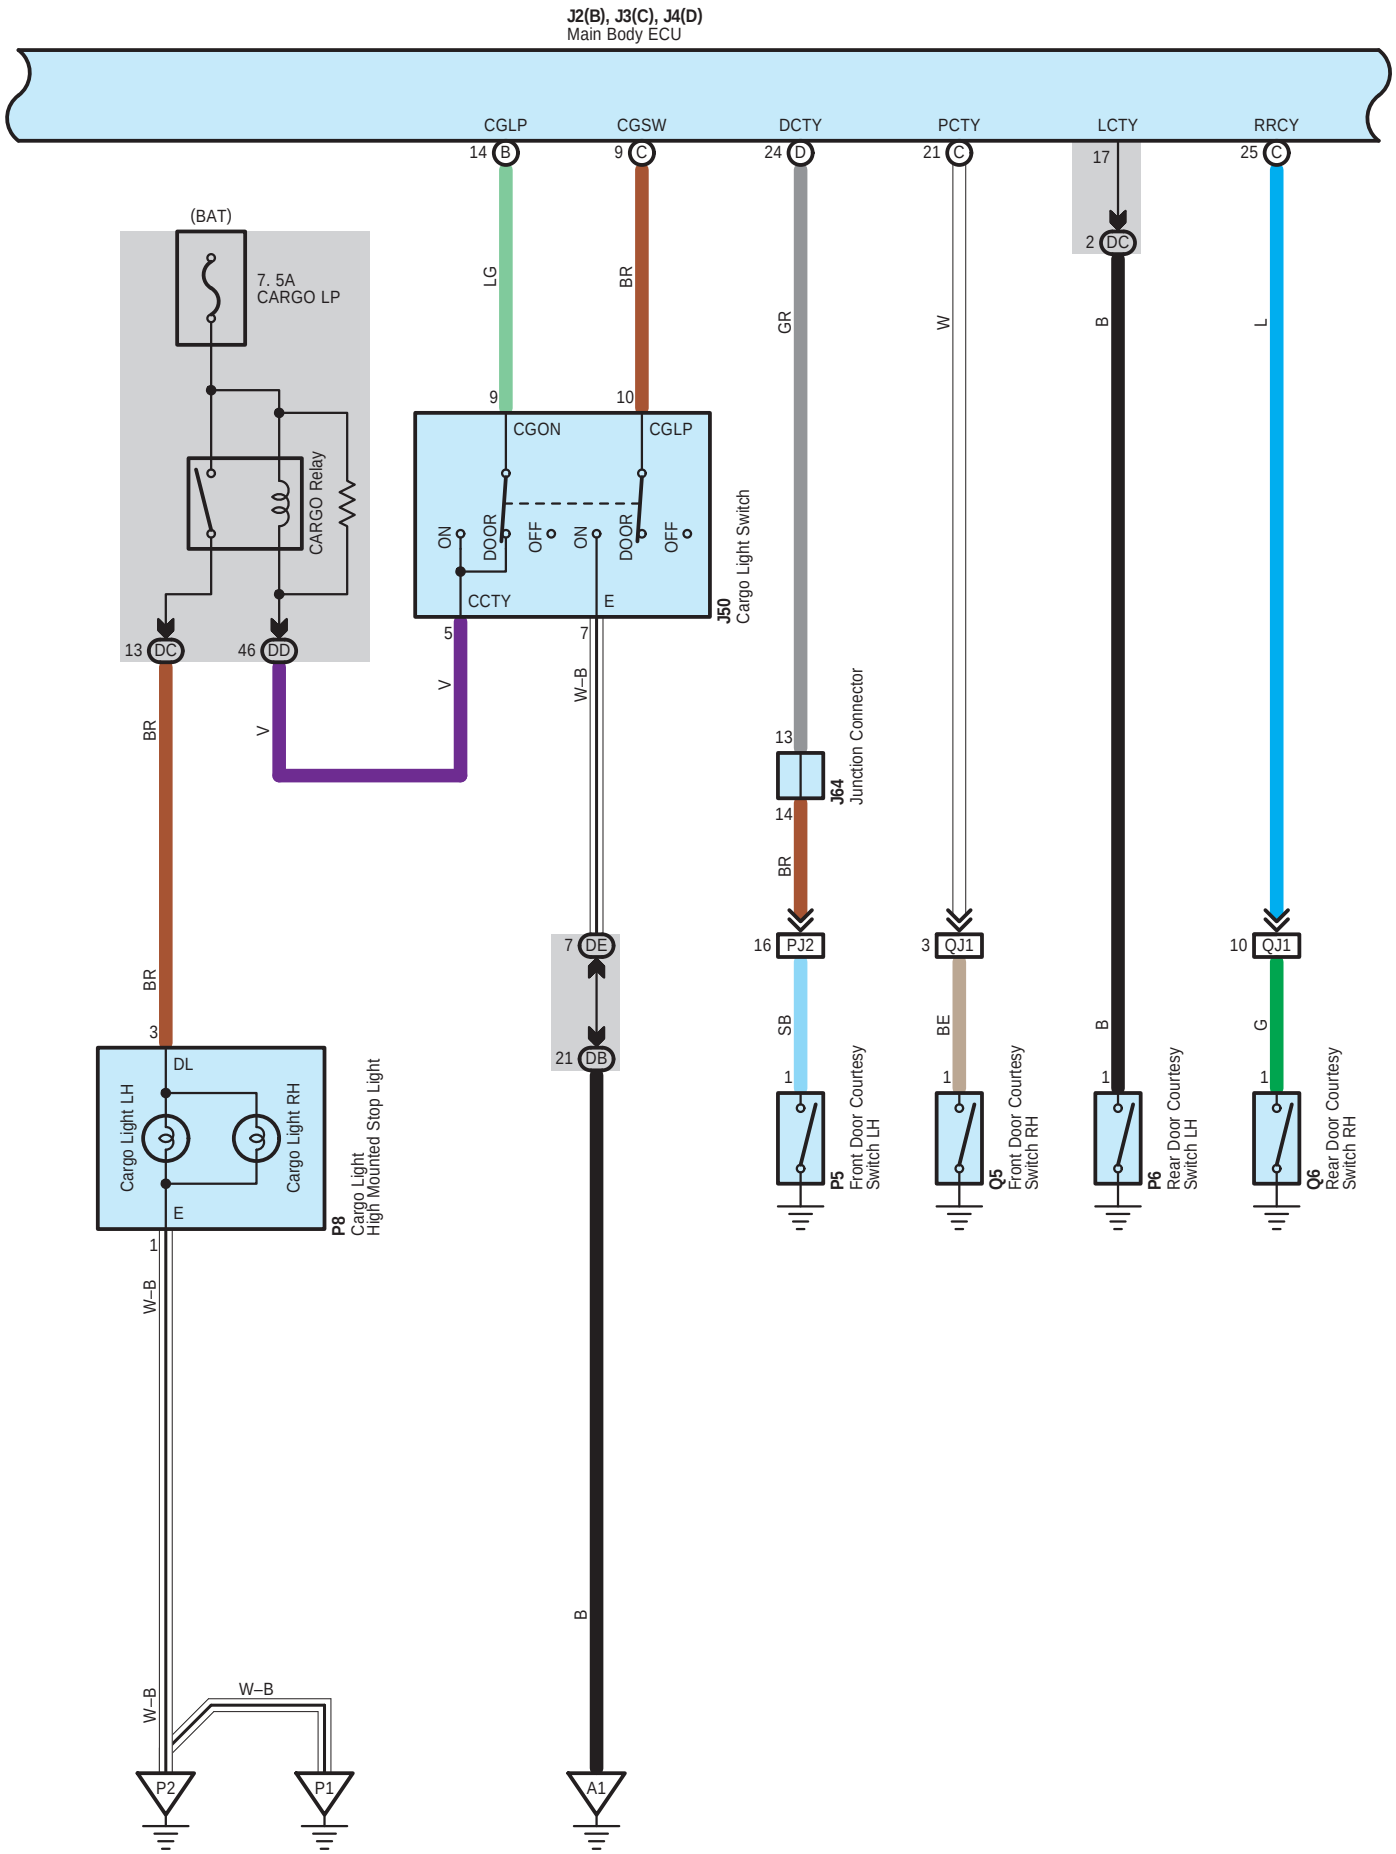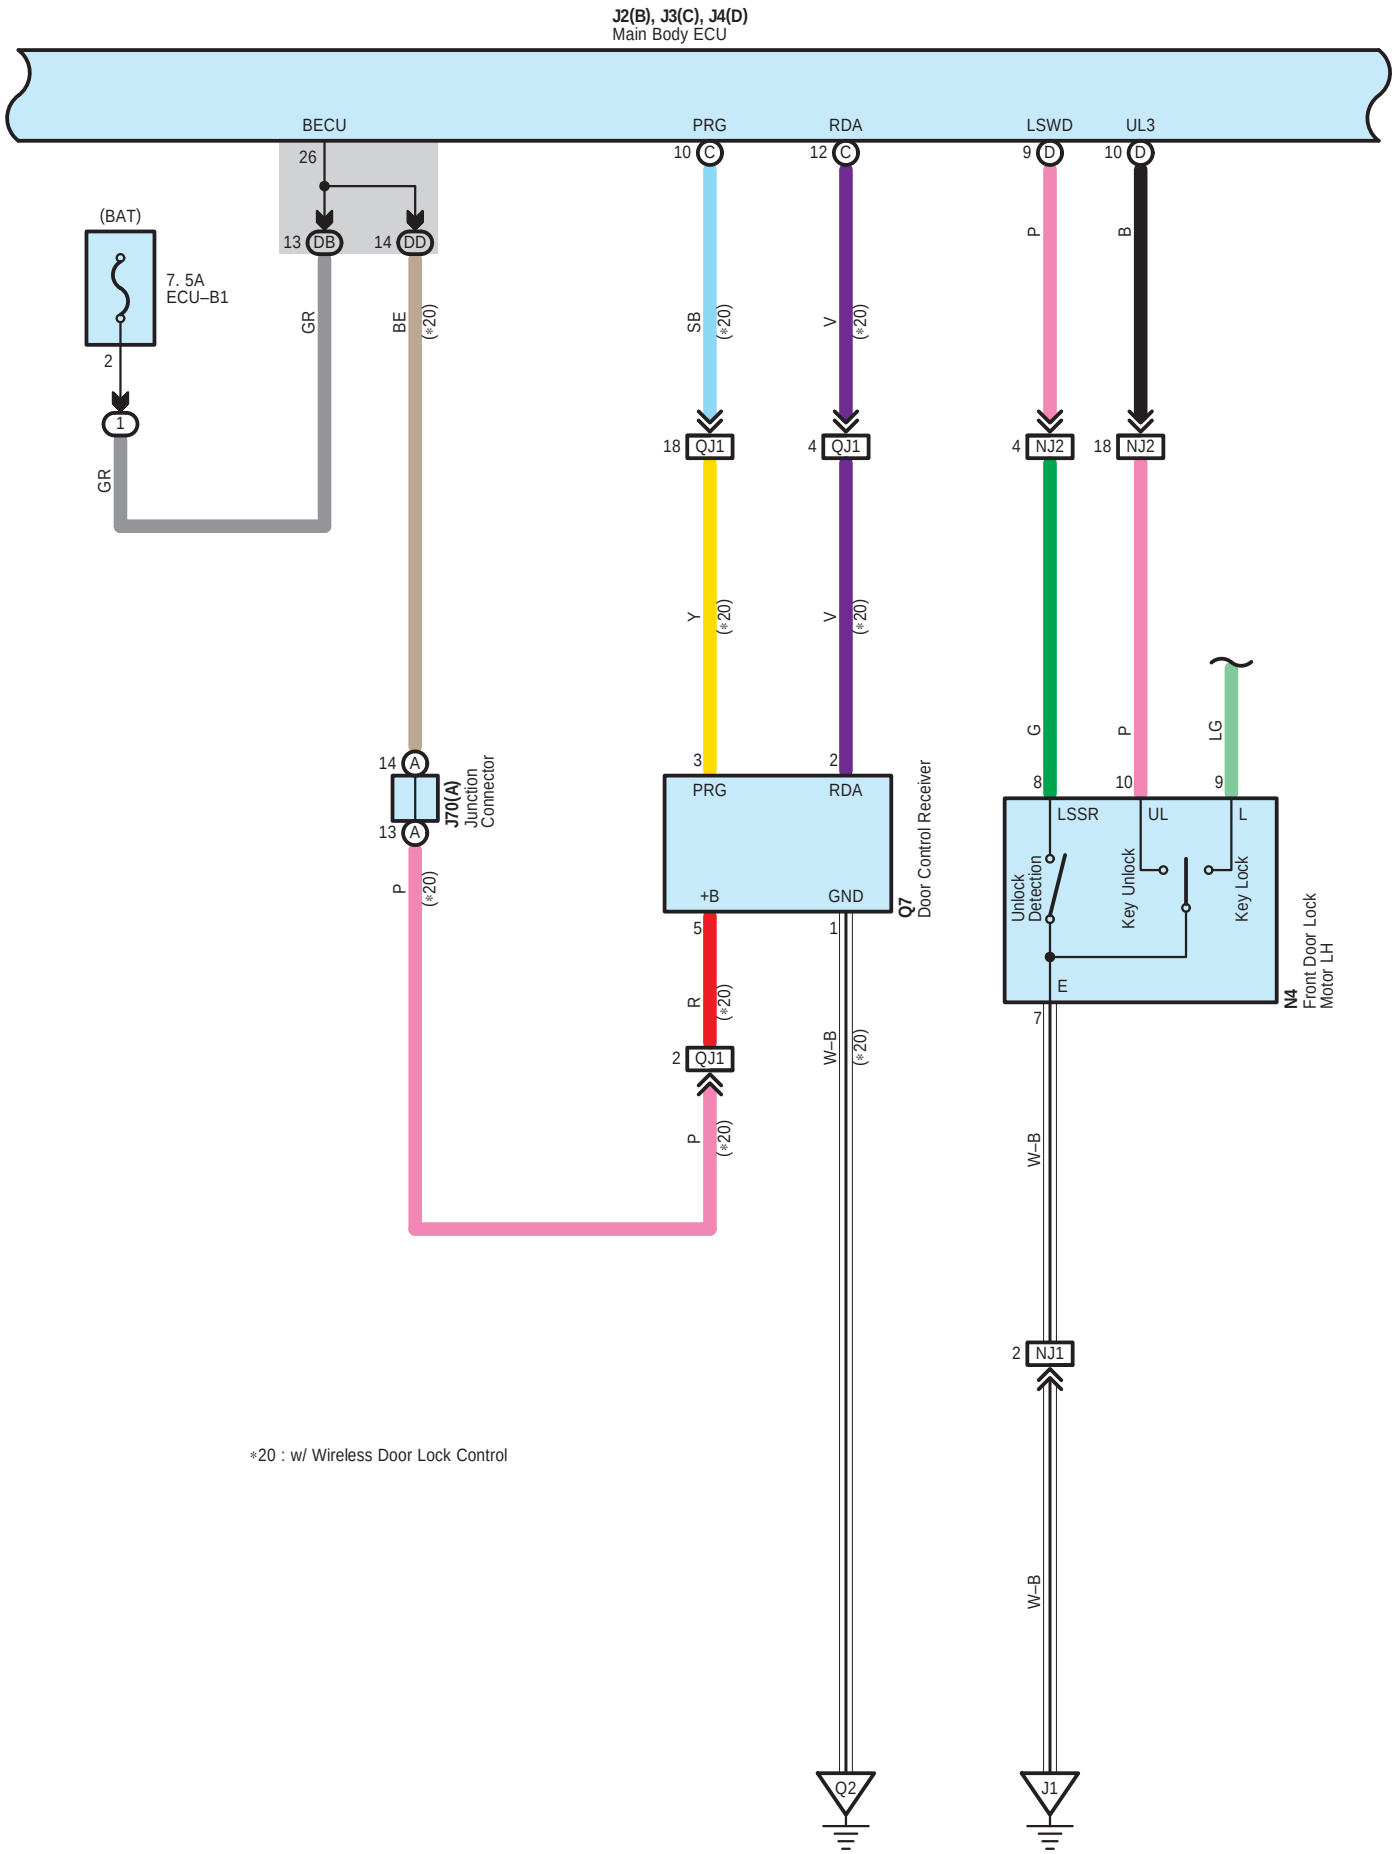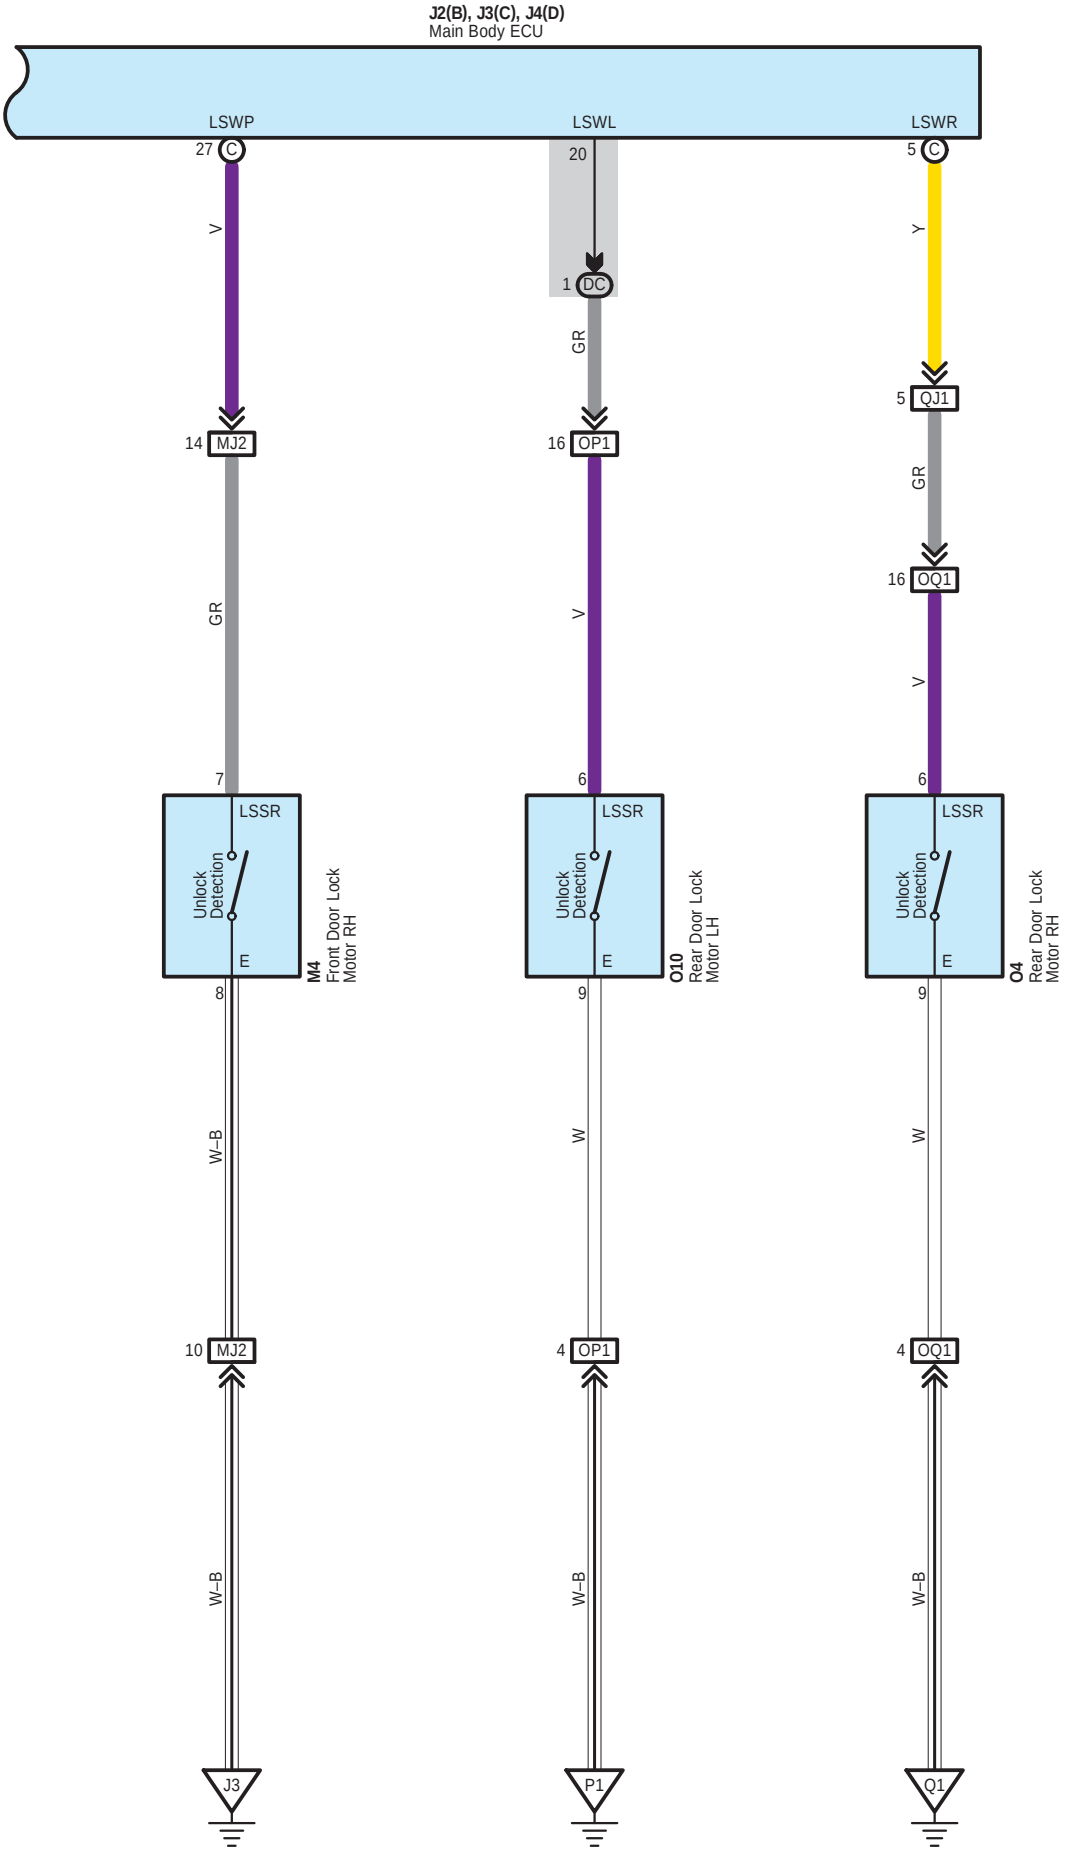


*20 : w/ Wireless Door Lock Control


J2(B), J3(C), J4(D)
Main Body ECU
LSWP
LSWL
LSWR
27 C
20
5 C
V
1 DC
Y
GR
5 QJ1
14 MJ2
16 OP1
GR
16 OQ1
V
V
7
6
6
LSSR
LSSR
LSSR
Unlock Detection
Unlock Detection
Unlock Detection
E
E
E
M4
Front Door Lock Motor RH
O10
Rear Door Lock Motor LH
O4
Rear Door Lock Motor RH
8
9
9
W-B
W
W
10 MJ2
4 OP1
4 OQ1
W-B
W-B
J3
P1
Q1


J 2
White

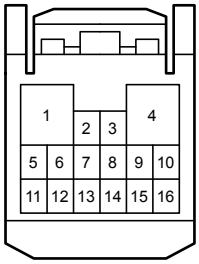


J 3
White

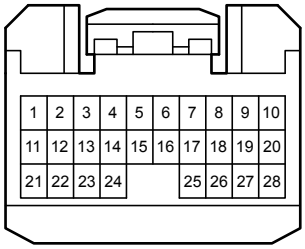


J 4
White

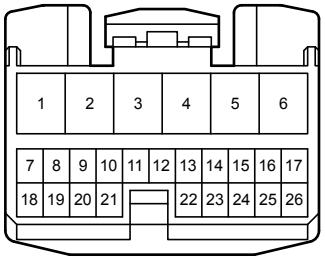


J 50
Black

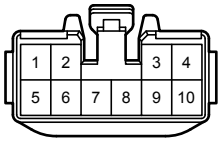


J 64
White

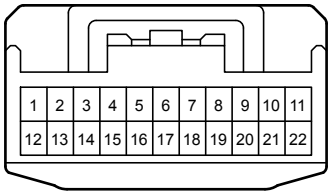


J 70
Blue

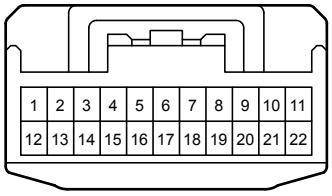


M 4
White

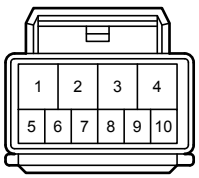


N 4
White

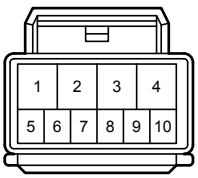

O 4
White

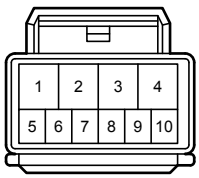

O 10
White

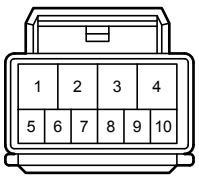


P 5
White



P 6
White



P 8
White

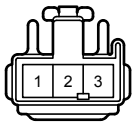


Q 5
White




Q 6
White




Q 7
White

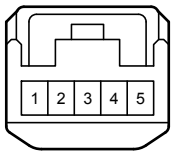


DB
White

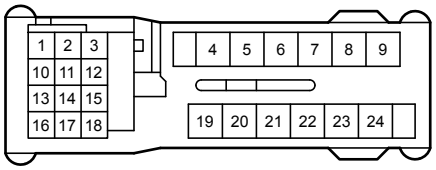


DC
White

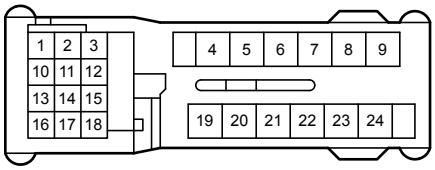


DD
White

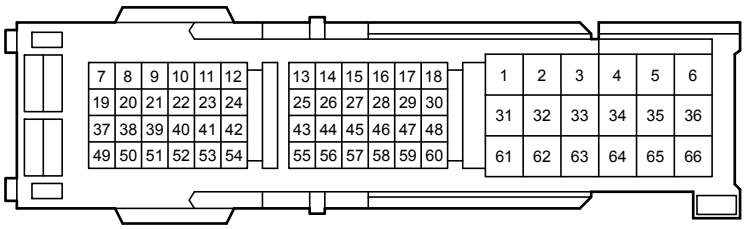


DE
White

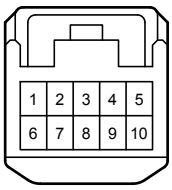


MJ2
Blue

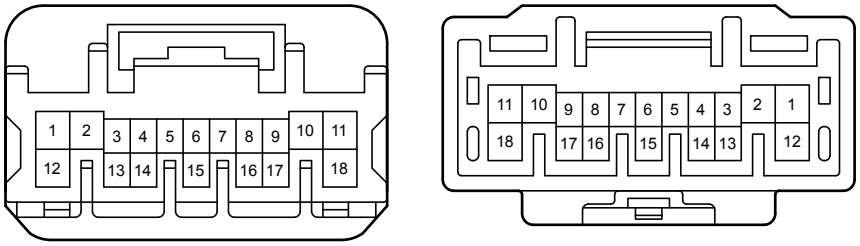


NJ1
Blue

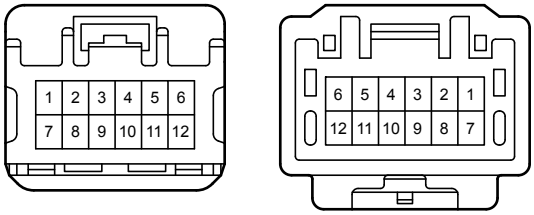


NJ2
White

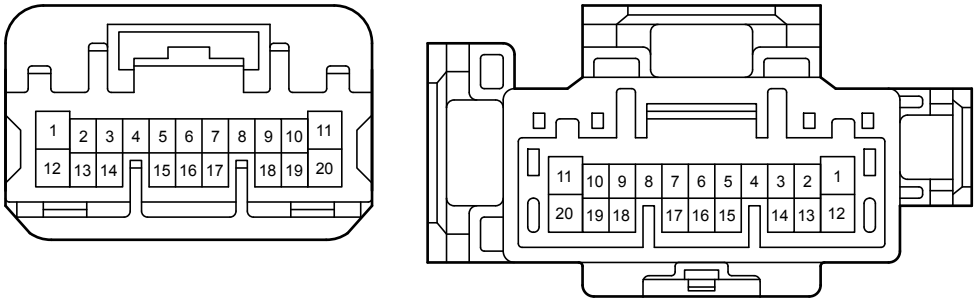


OP1
White

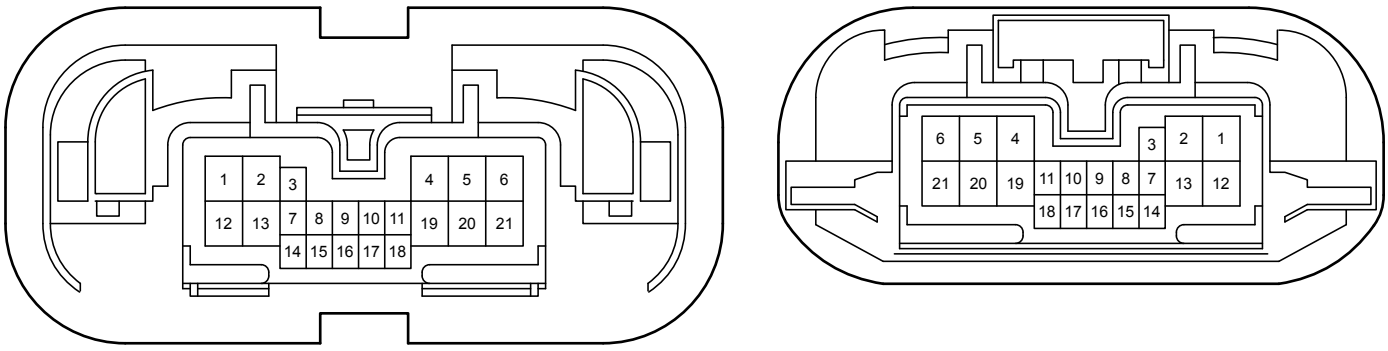

OQ1
White

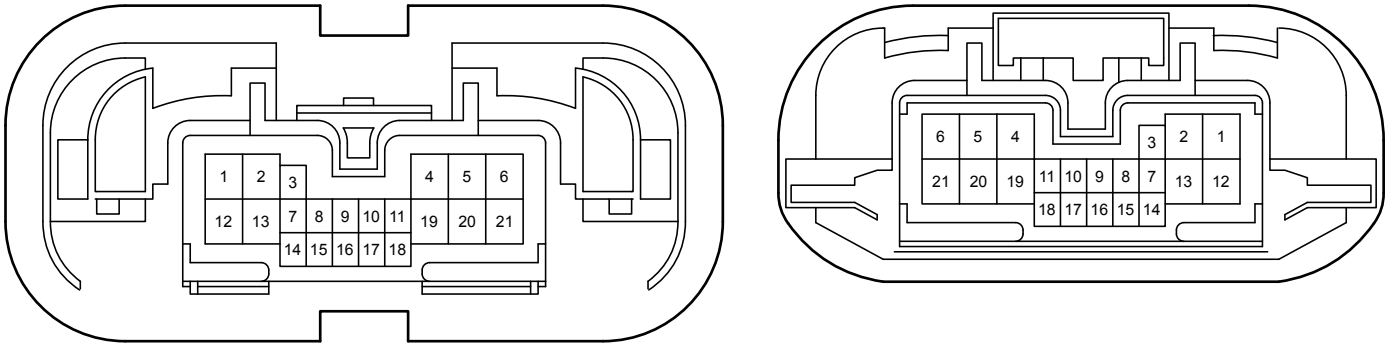

PJ2
White

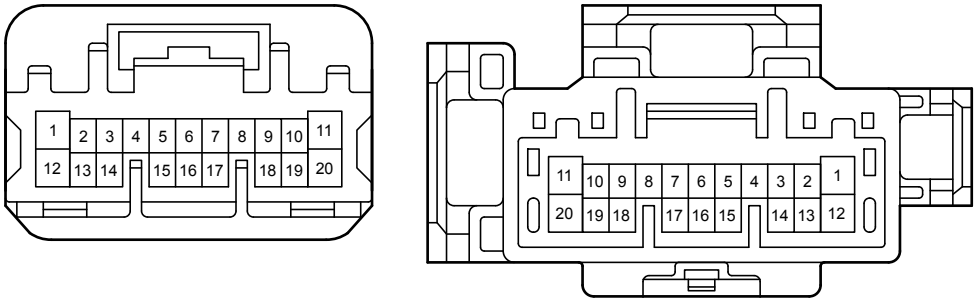

QJ1
White

