





(BAT)
7. 5A
ECU–B1
2
1
GR
(ACC)
7. 5A
ACC
(IG)
7. 5A
ECU–IG
No. 2
(BAT)
25A
DR/LCK
J2(B), J4(D)
Main Body ECU
ALTB
IG
ACC
BECU
GND1
GND2
6
15
22
26
5
4
13 DB
21 DB
GR
B
A1



J2(B), J4(D)
Main Body ECU
CANH
CANL
5 B
6 B
L
W
(BAT)
(IG)
5A
MET–B
7. 5A
MET
2
1
G
BE
9 AJ10
8 AJ10
LG
P
1
2
5
16
4
15
J75
Junction Connector
SB
W
J28
Combination Meter
B
IG+
5V IC
5V+B
Telltale
Rheostat/
Trip Reset
LED
Driver
CPU
CAN I/F
I/F
ES
CANL
CANH
ILL–
EP
24
40
39
22
23
W–B
15
22
J61
Junction
Connector
W
SB
W
7 DE
21 DB
B
W
W–B
J3
A1



J2(B), J4(D)
Main Body ECU
∗ 2 : Floor Shift
∗14 : w/ Blind Spot Monitor System
∗25 : w/ Steering Pad Switch
J62
Junction Connector
10
W
(∗25)
W–B
(∗25)
J45(A), z3(C)
Spiral Cable
10 A
12 A
–DP
IL+2
3 C
5 C
B
R
Steering Switch LH
Steering Switch RH
z3(C)
Steering Pad Switch
W–B
(∗25)
12
J60
Junction Connector
7
W–B
(∗25)
W
W
J1



J2(B), J4(D)
Main Body ECU
J62
Junction Connector
4
9
8
2
1
3
GR
LG
BE
(*2)
G
(*2)
L
SB
(*14)
5
8
4
3
3
10
ILL+
ILL–
J125
Back Sonar or Clearance
Sonar Switch Assembly
J8
Power Window Regulator Switch
(for Back Window)
J24
Transmission Control Switch
J23
Tow/Haul Pattern Select Switch
J104
Headlight Leveling Switch
J124
Blind Spot Monitor Main Switch
(Warning Canceling Switch Assembly)
4
1
8
2
4
9
BR
Y
P
(*2)
R
(*2)
W
BE
(*14)
16
21
19
13
12
15
J62
Junction Connector
17
W
W
W
W

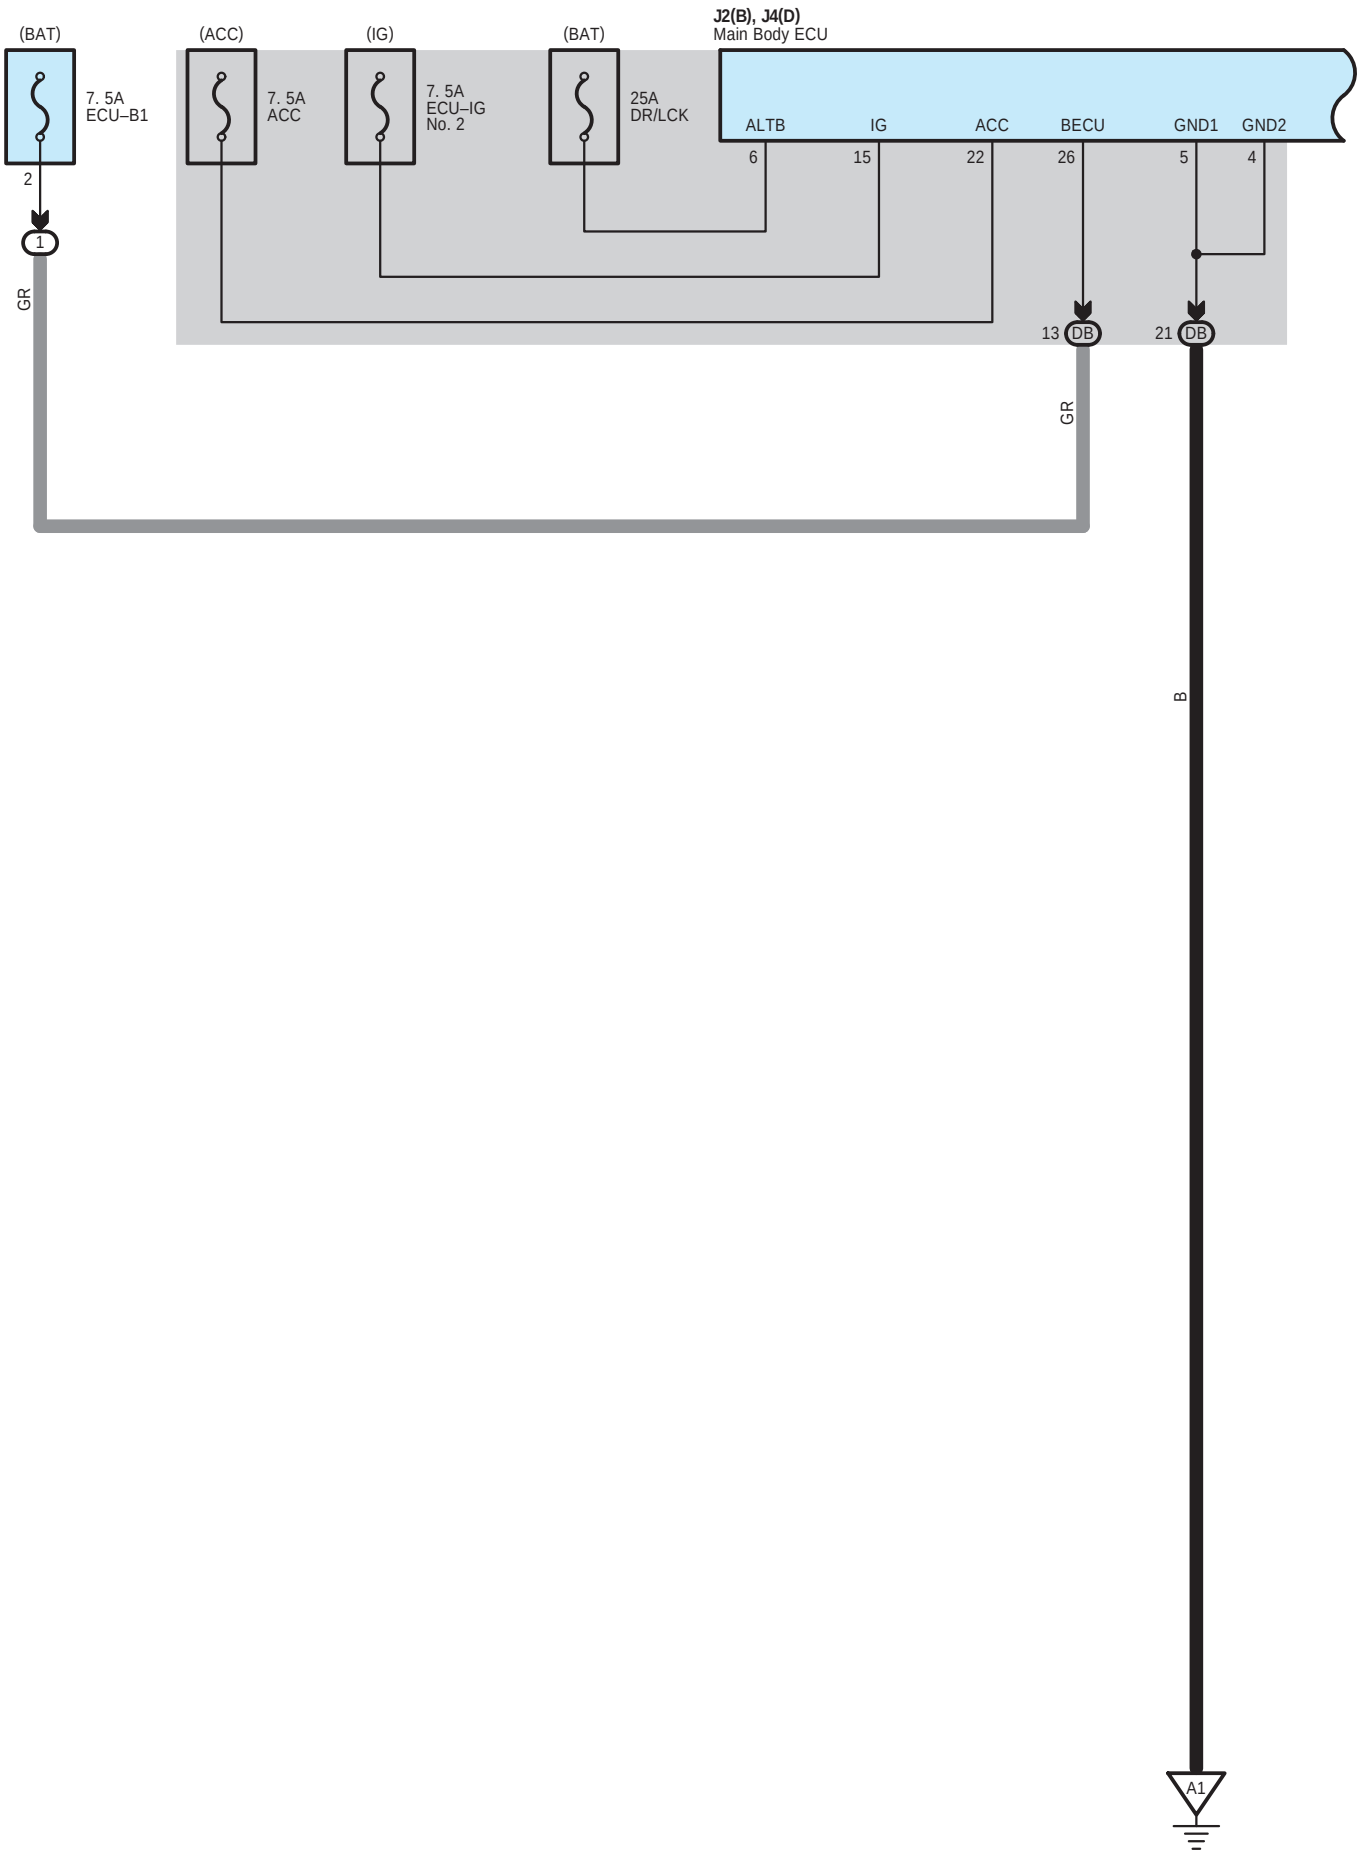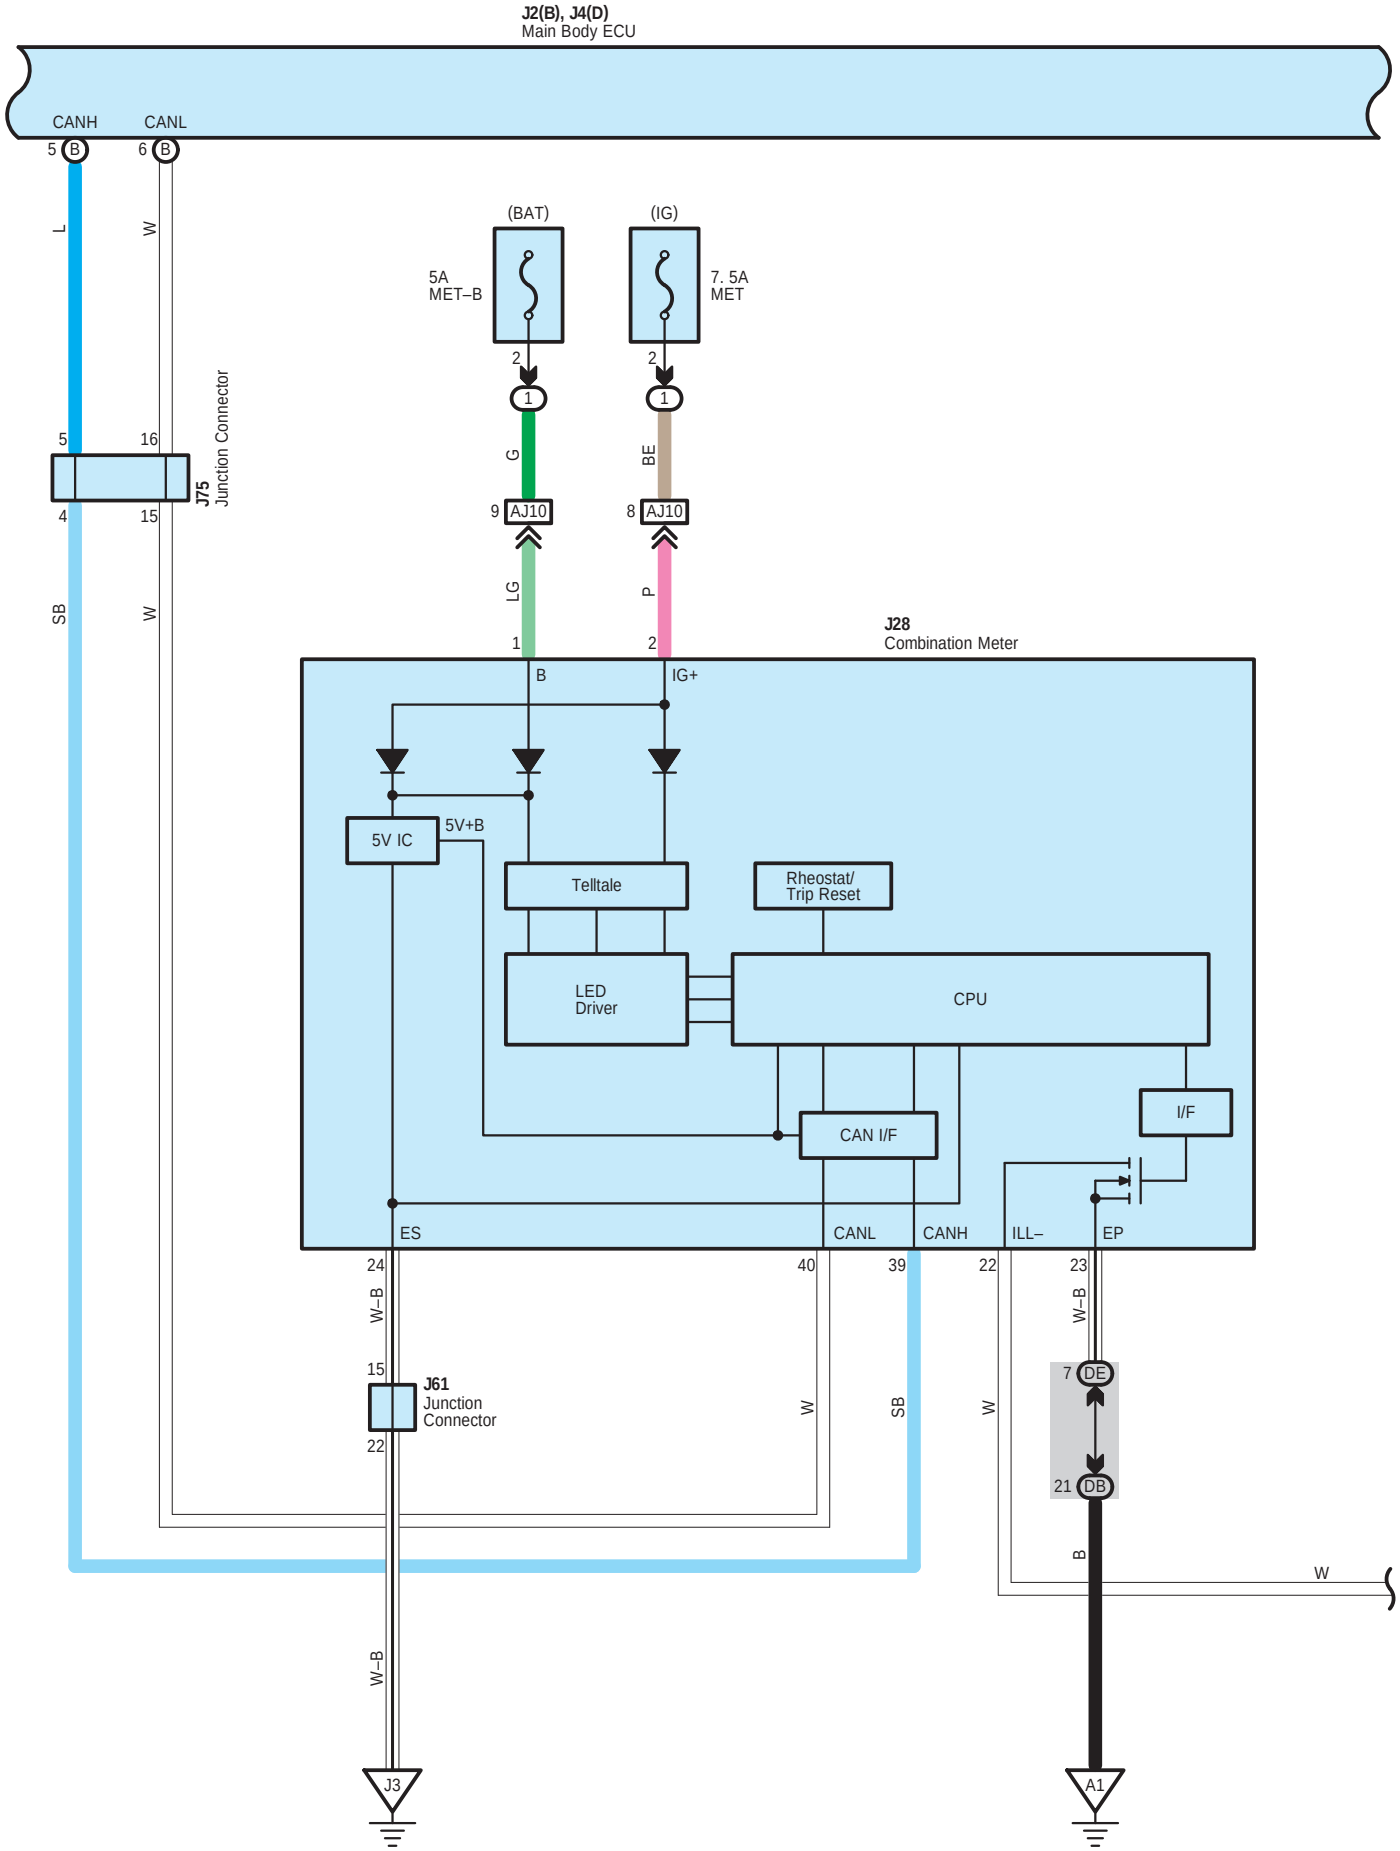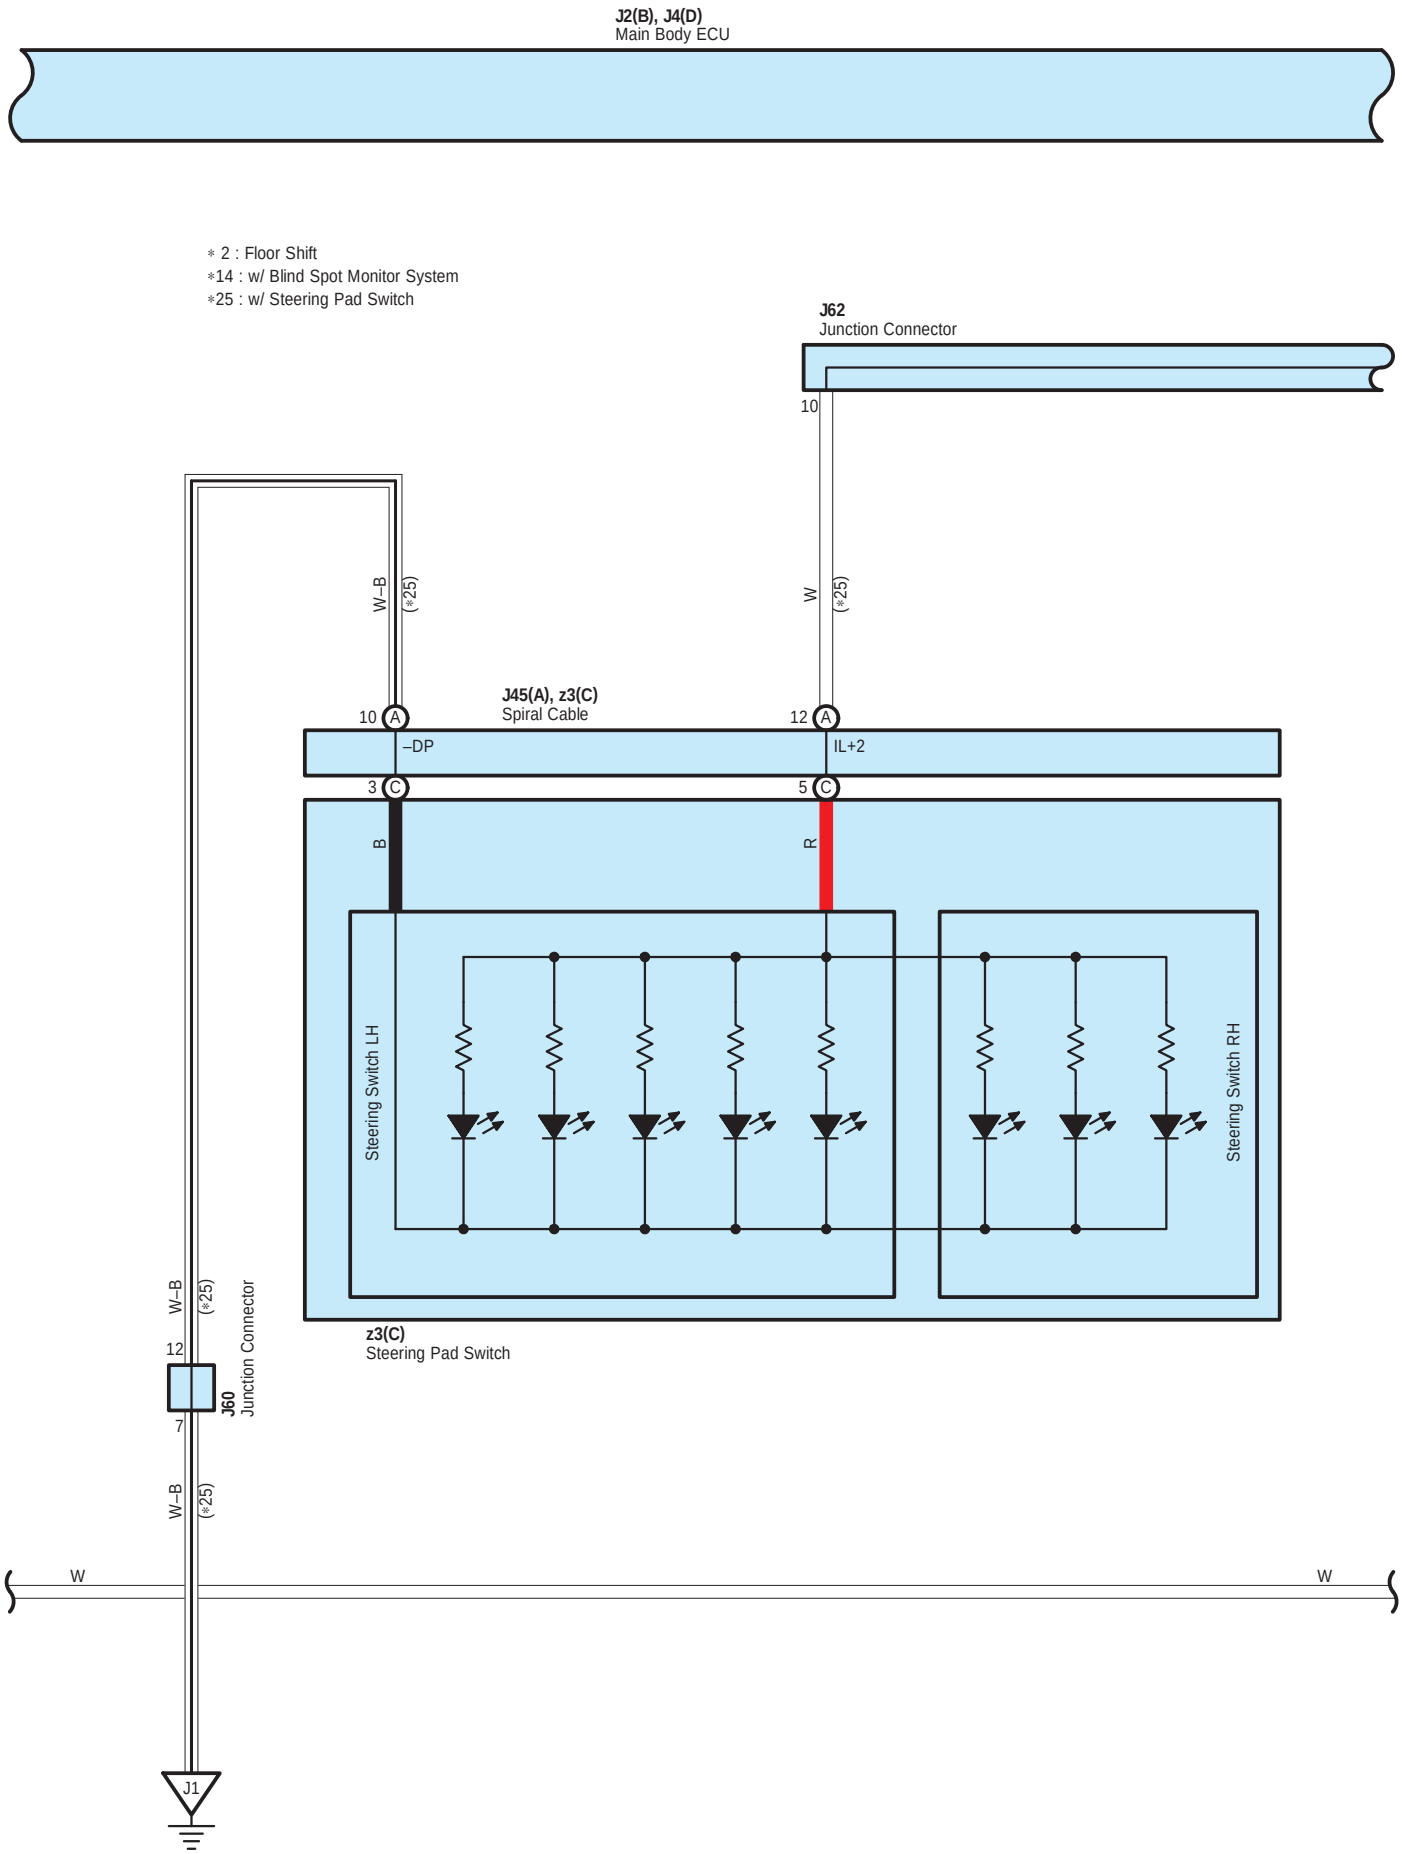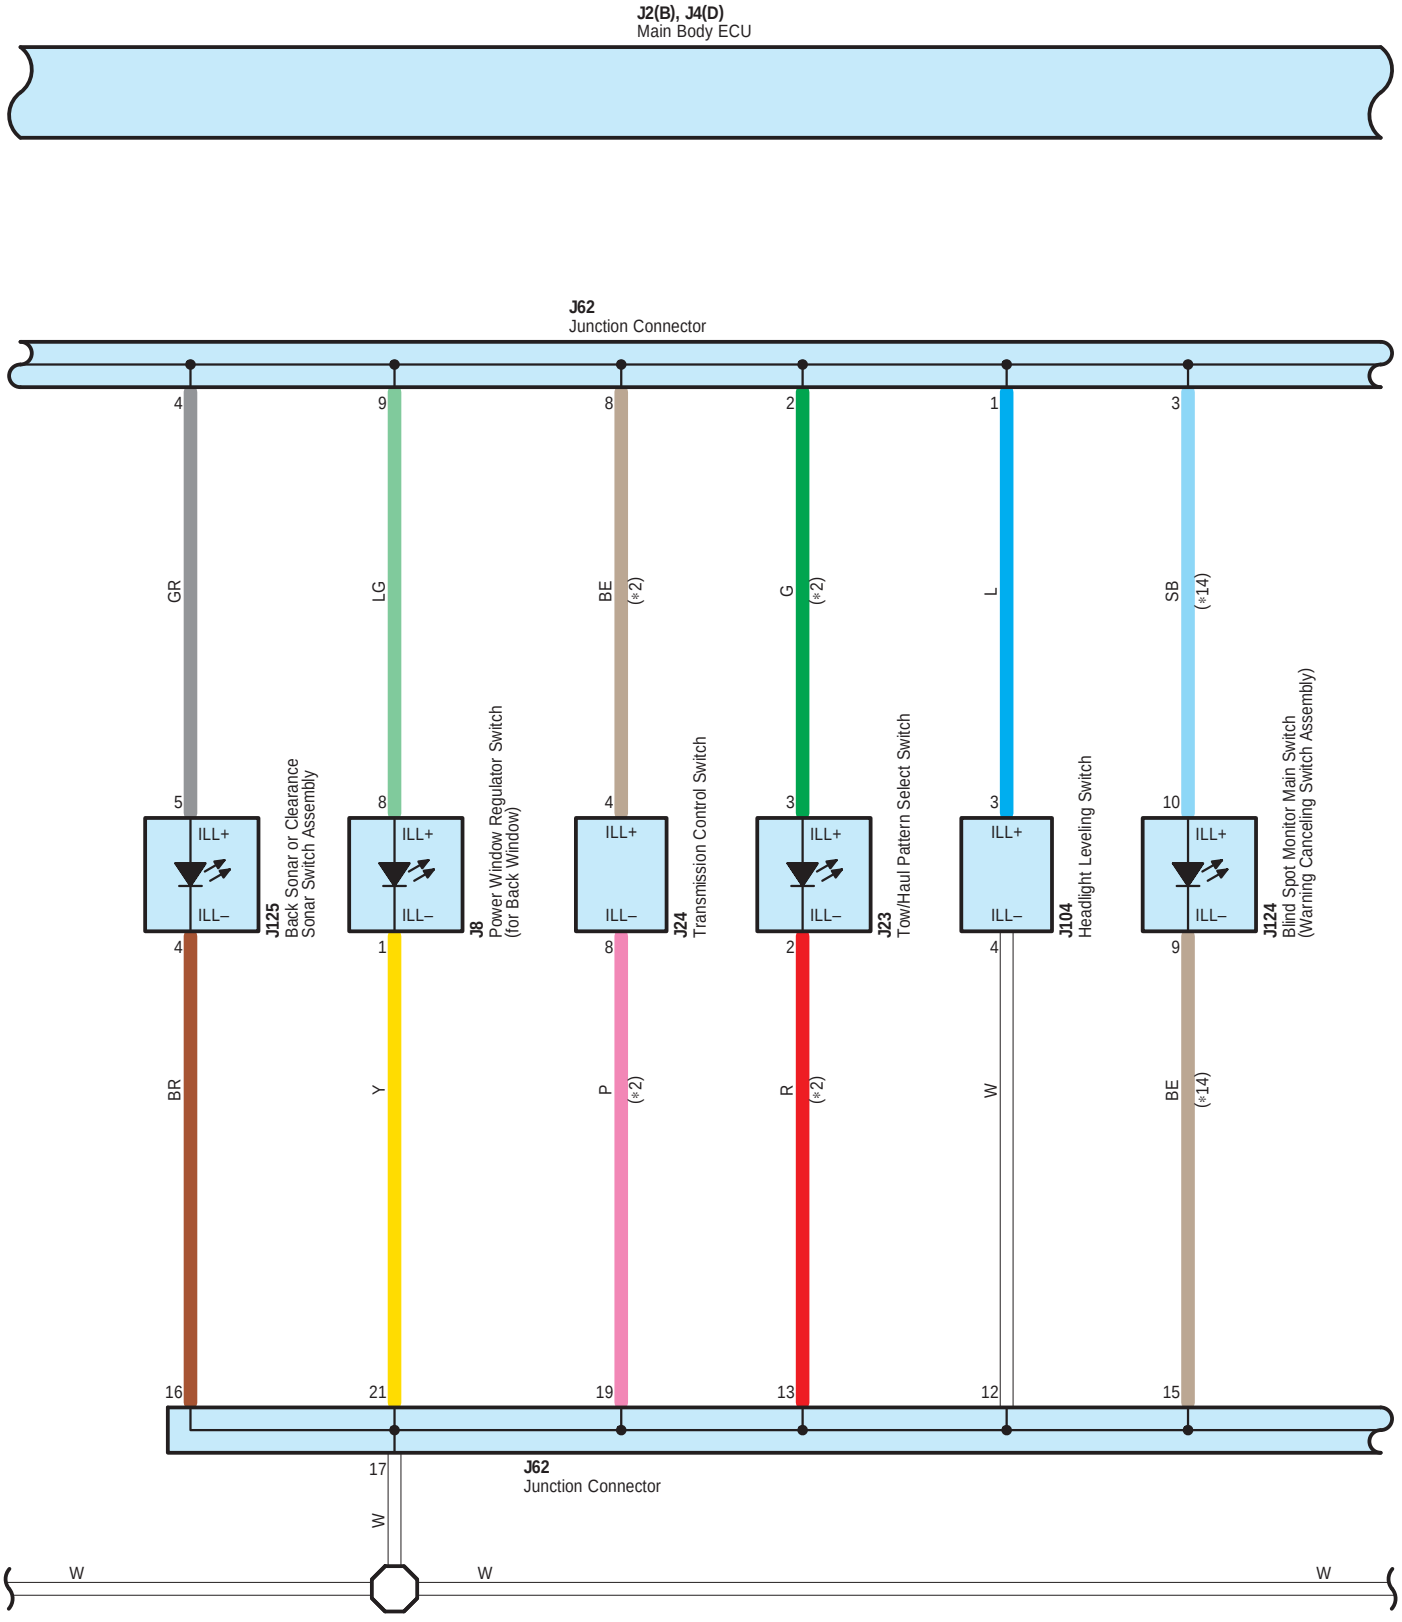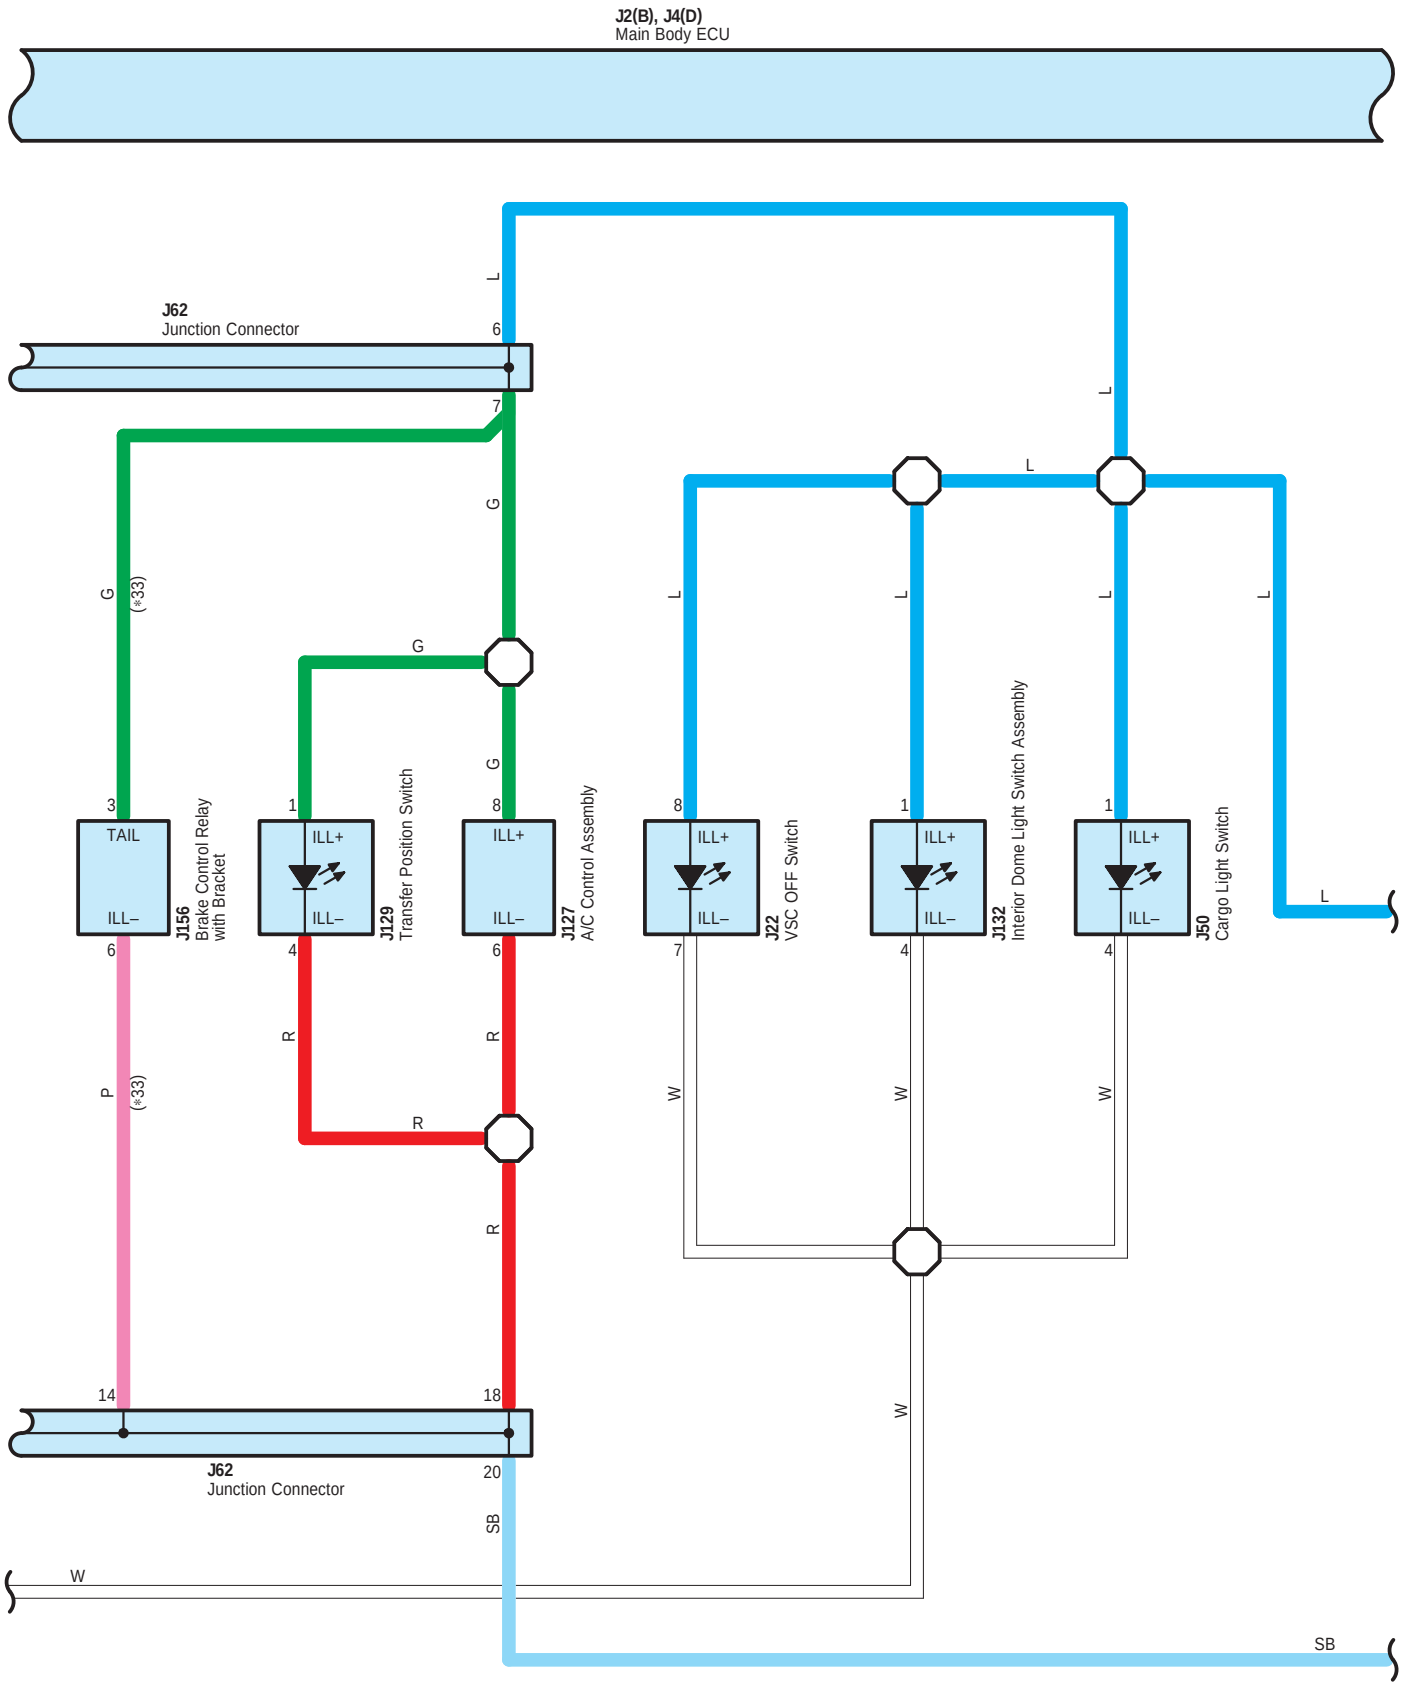


* 8 : w/ Remote Control Mirror (w/o Seat Position Memory)
*12 : w/ Navigation System
*13 : w/o Navigation System
*33 : w/ Trailer Brake Control System

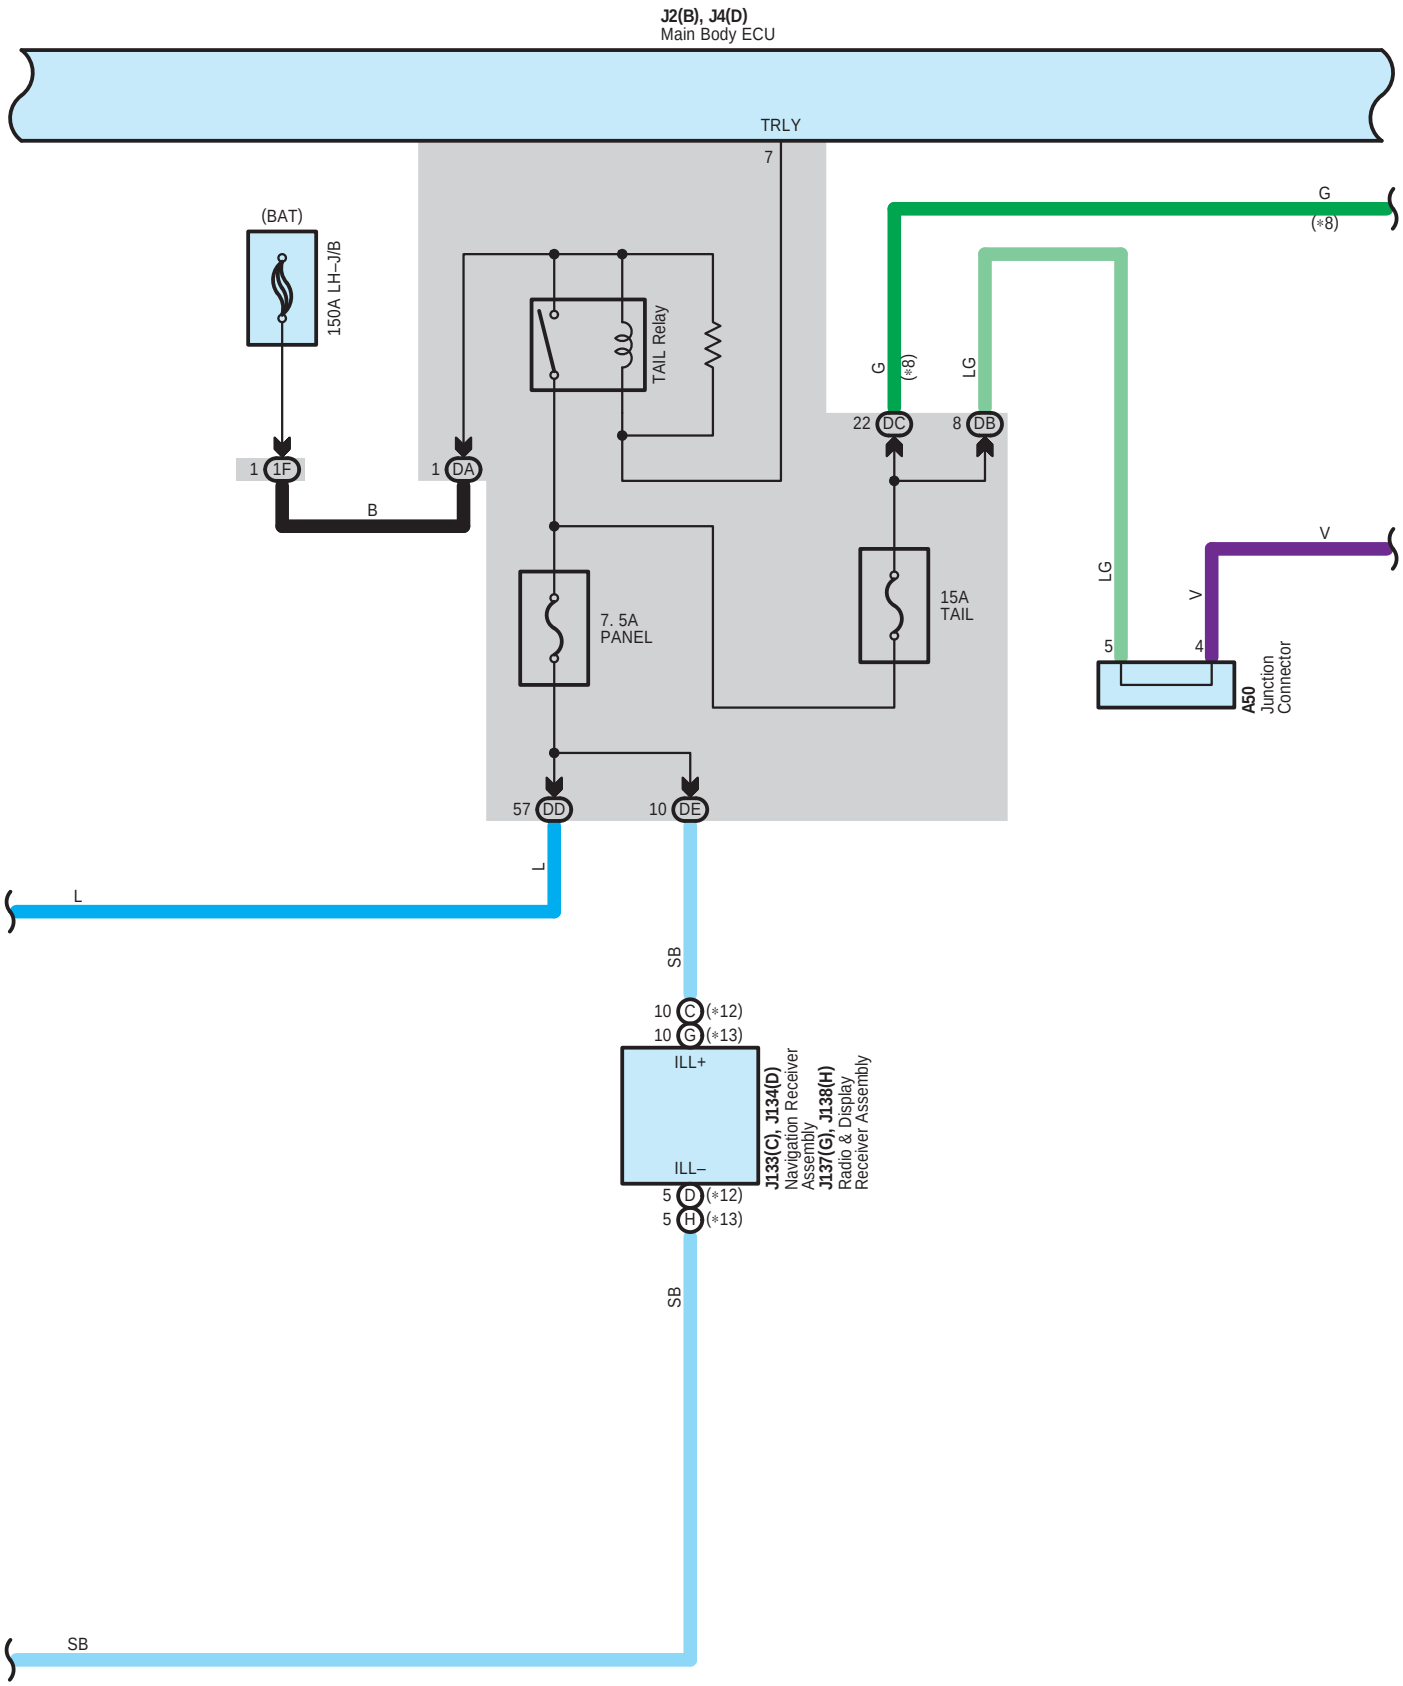
J2(B), J4(D)
Main Body ECU
TRLY
7
(BAT)
150A LH–J/B
TAIL Relay
1 1F
1 DA
B
G
(*8)
LG
22 DC
8 DB
7. 5A
PANEL
15A
TAIL
LG
V
V
5
4
A50
Junction
Connector
57 DD
10 DE
L
L
SB
10 C (*12)
10 G (*13)
ILL+
ILL–
5 D (*12)
5 H (*13)
J133(C), J134(D)
Navigation Receiver
Assembly
J137(G), J138(H)
Radio & Display
Receiver Assembly
SB
SB

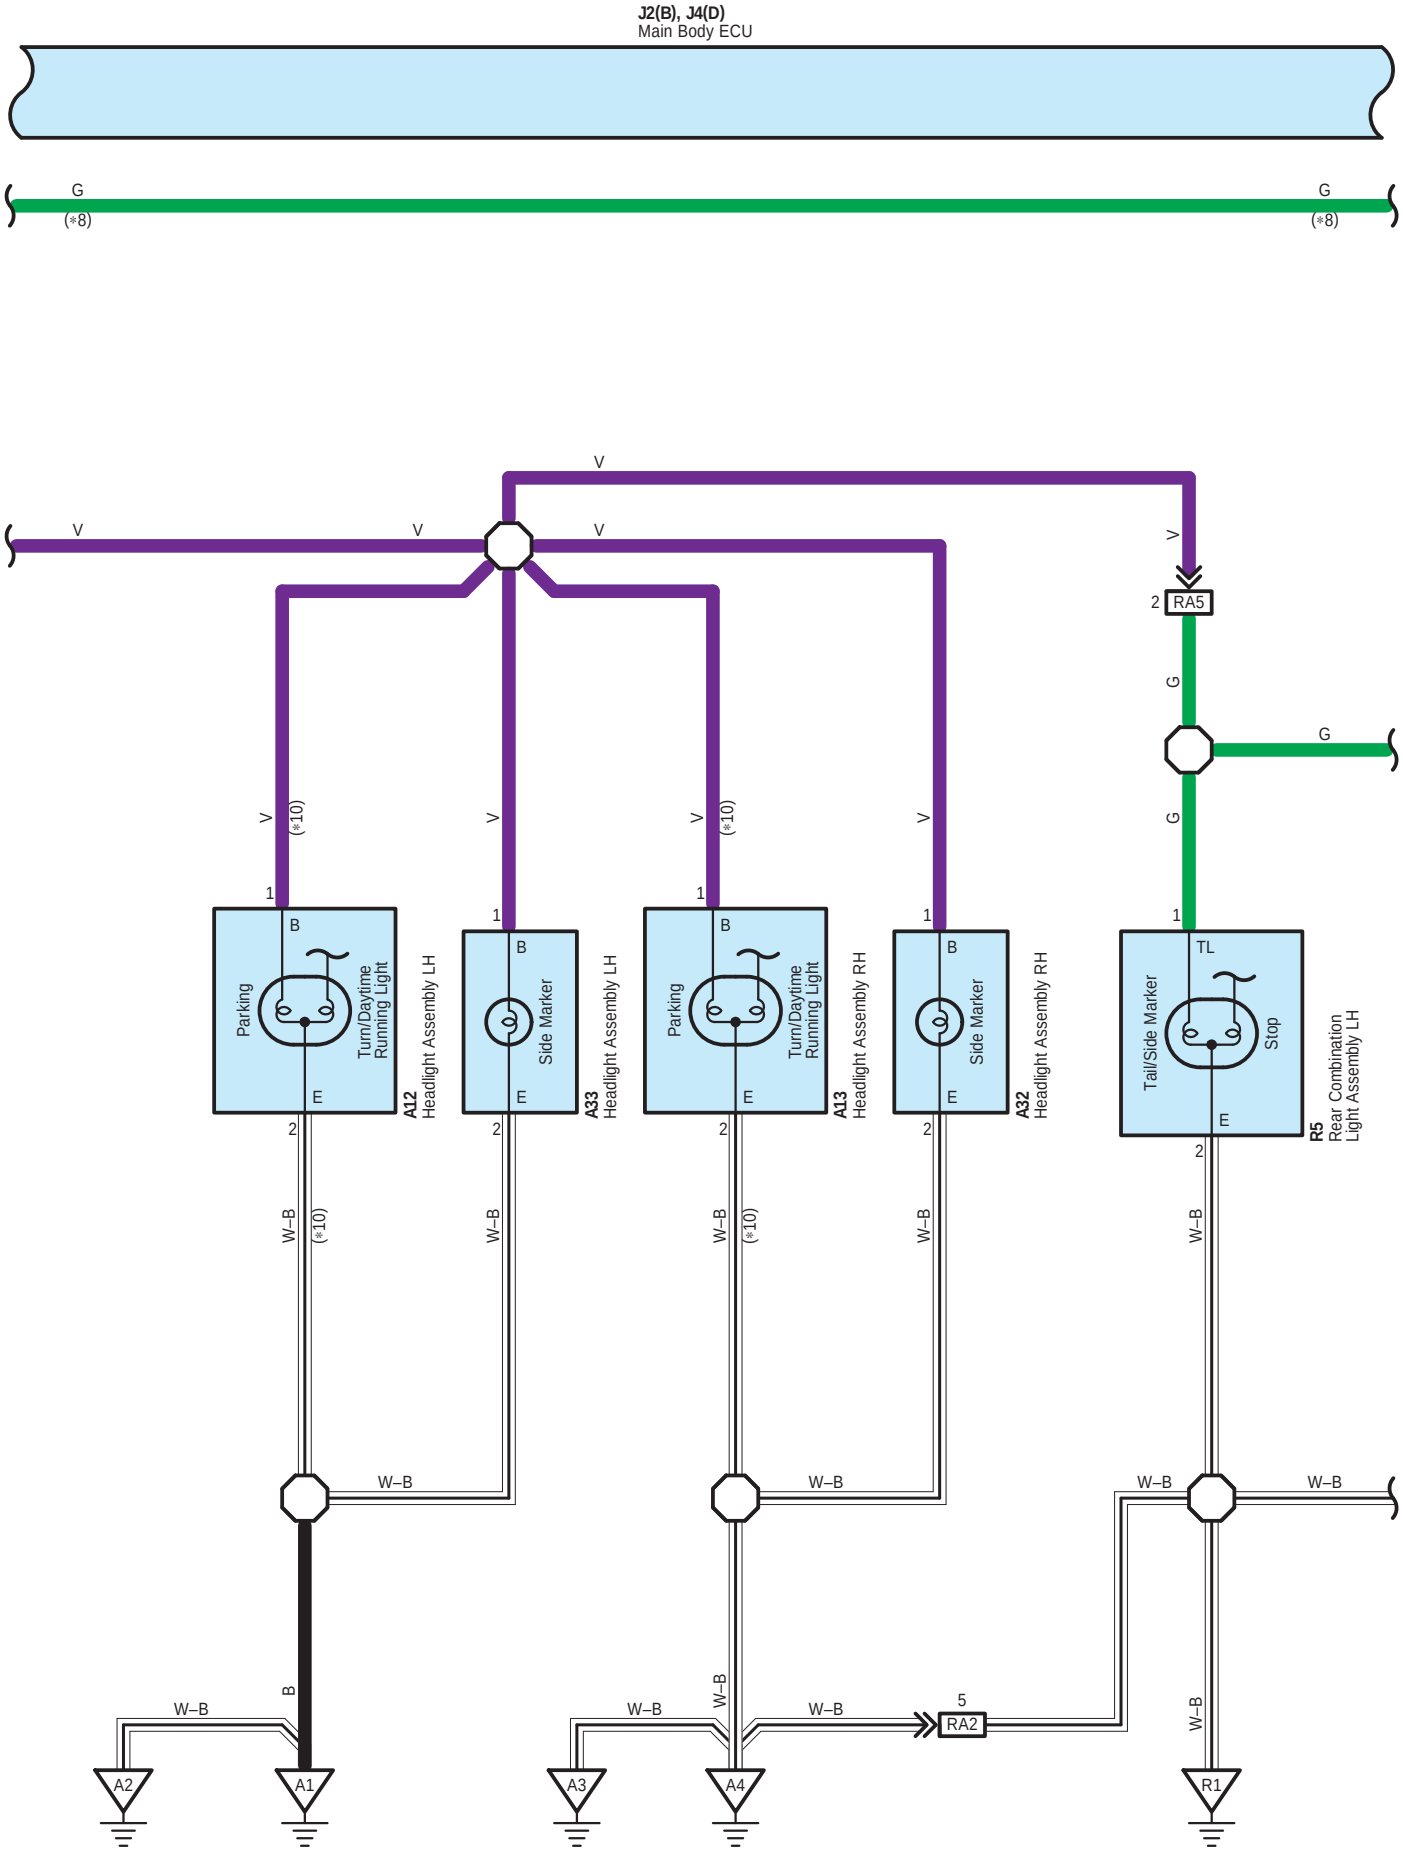
J2(B), J4(D)
Main Body ECU
G
(*8)
G
(*8)
V
V
V
V
V
2
RA5
G
G
G
V
(*10)
V
V
(*10)
V
1
1
1
1
1
B
B
B
TL
Parking
Turn/Daytime Running Light
Side Marker
Parking
Turn/Daytime Running Light
Side Marker
Tail/Side Marker
Stop
E
E
E
E
E
A12
Headlight Assembly LH
A33
Headlight Assembly LH
A13
Headlight Assembly RH
A32
Headlight Assembly RH
R5
Rear Combination Light Assembly LH
2
2
2
2
2
W–B
(*10)
W–B
W–B
(*10)
W–B
W–B
W–B
W–B
W–B
W–B
W–B
B
W–B
W–B
W–B
5
RA2
W–B
A2
A1
A3
A4
R1

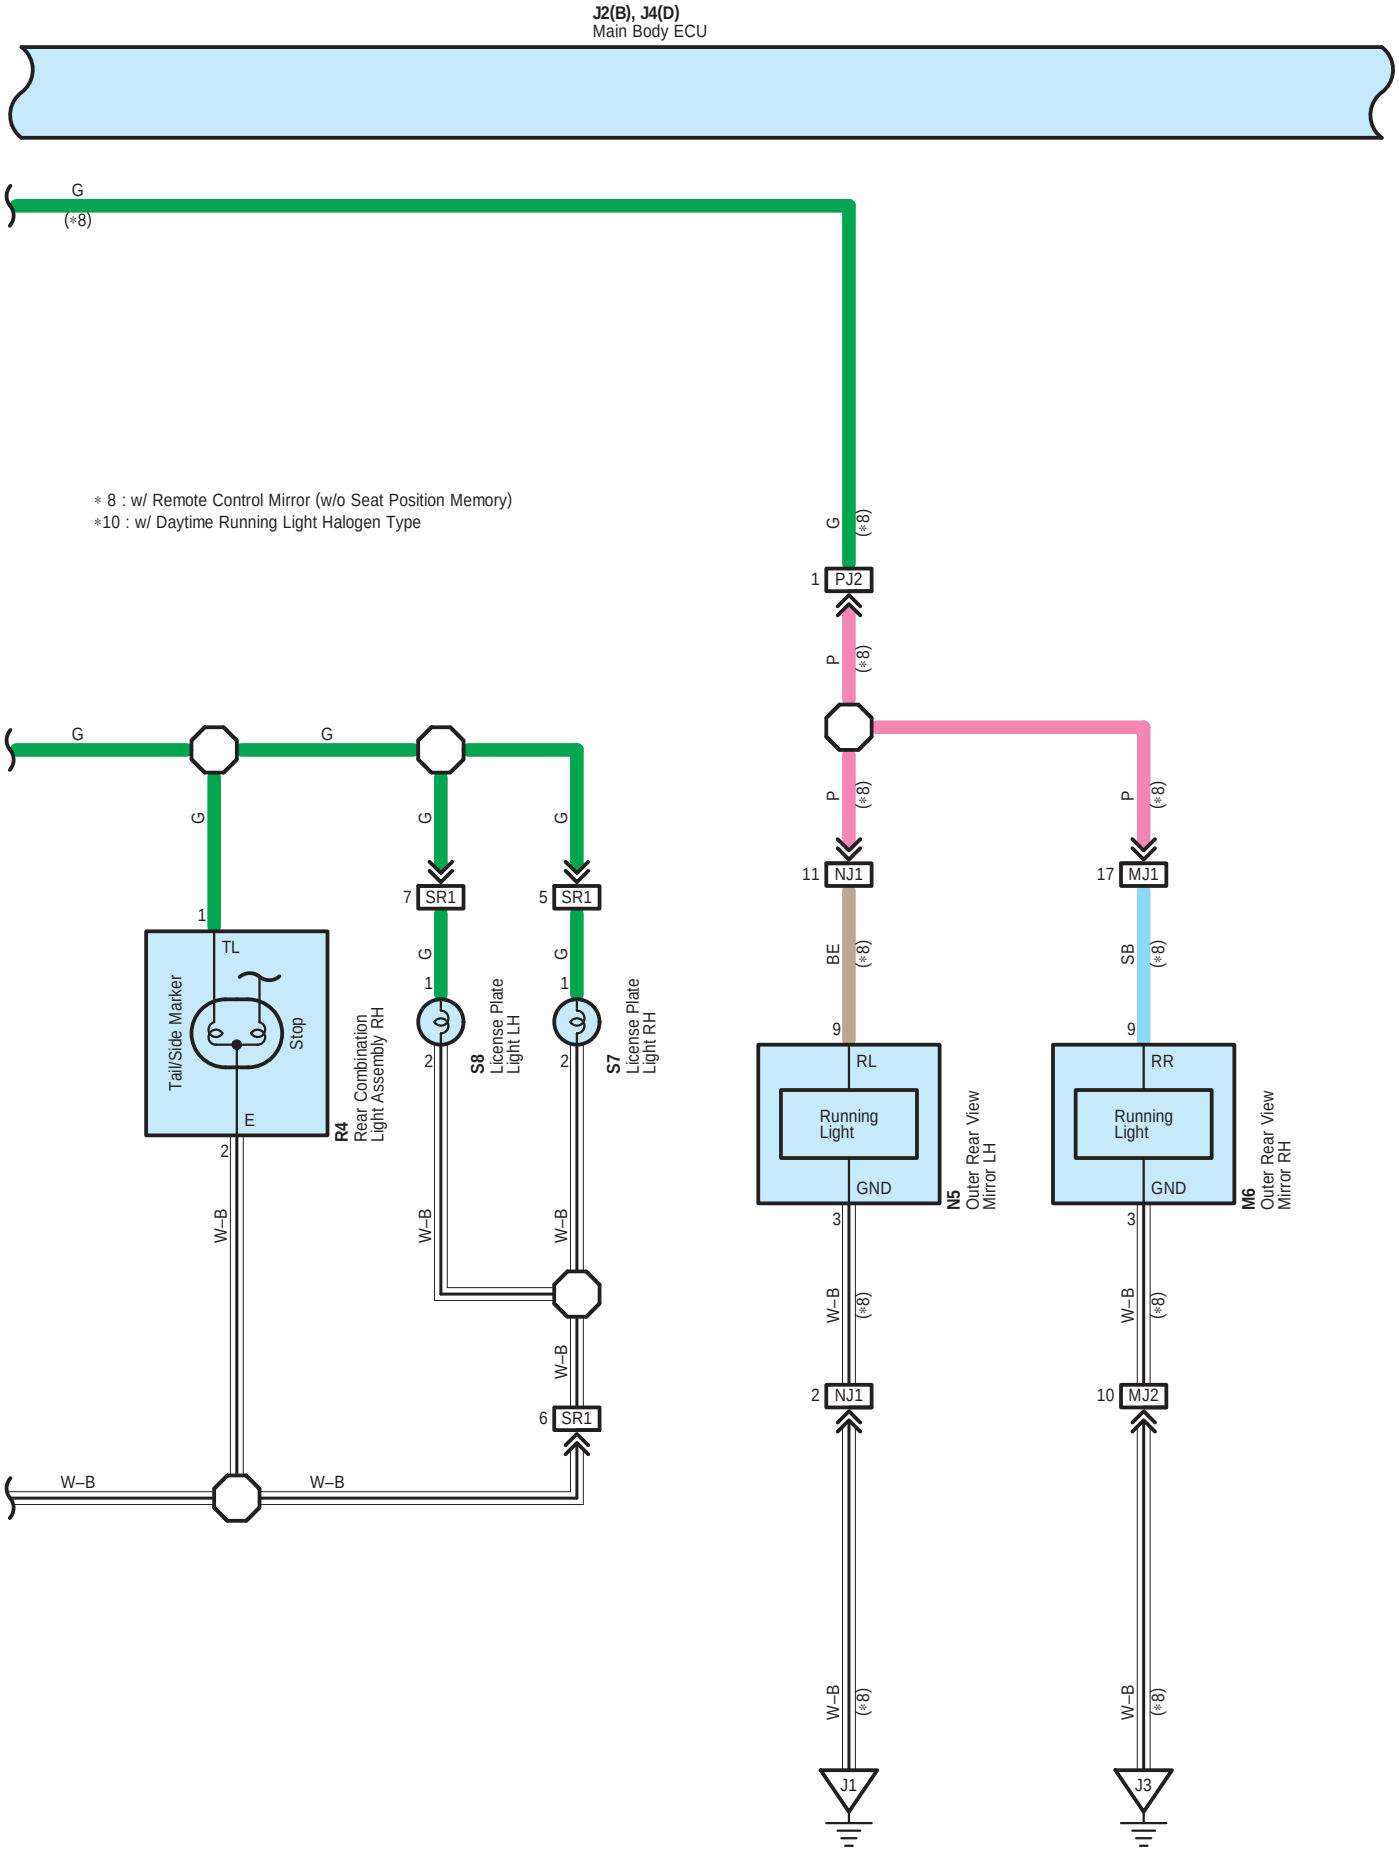
J2(B), J4(D)
Main Body ECU
G
(*8)
* 8 : w/ Remote Control Mirror (w/o Seat Position Memory)
*10 : w/ Daytime Running Light Halogen Type
G
(*8)
1
PJ2
P
(*8)
G
G
G
G
G
7
SR1
5
SR1
1
TL
Tail/Side Marker
Stop
E
2
R4
Rear Combination
Light Assembly RH
G
1
2
S8
License Plate
Light LH
G
1
2
S7
License Plate
Light RH
W–B
W–B
W–B
6
SR1
W–B
W–B
P
(*8)
P
(*8)
11
NJ1
17
MJ1
BE
(*8)
SB
(*8)
9
9
RL
Running
Light
GND
RR
Running
Light
GND
N5
Outer Rear View
Mirror LH
M6
Outer Rear View
Mirror RH
3
3
W–B
(*8)
W–B
(*8)
2
NJ1
10
MJ2
W–B
(*8)
W–B
(*8)
J1
J3

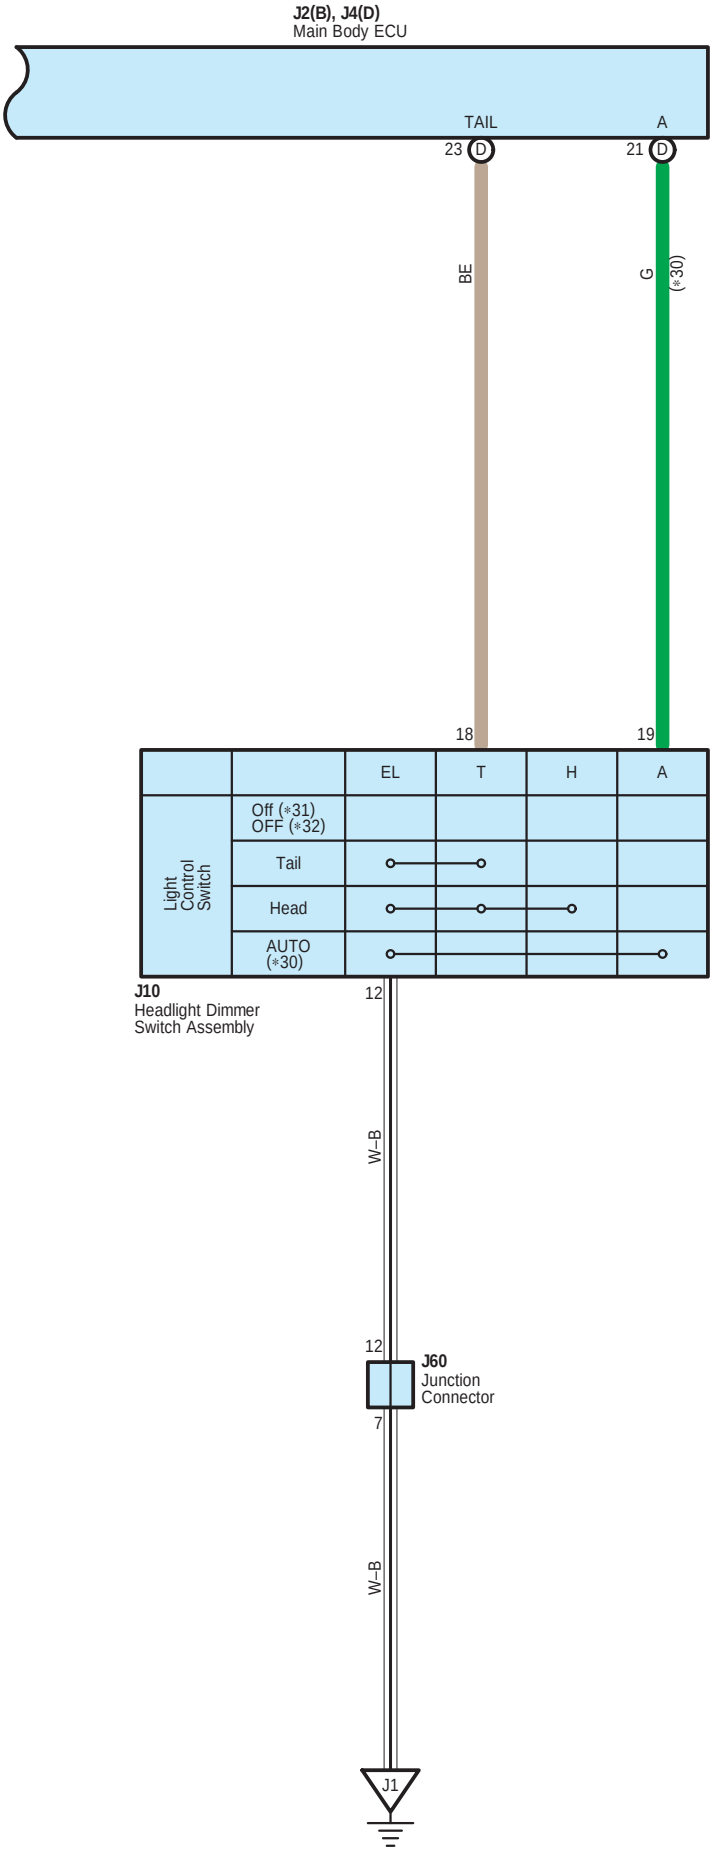

*30 : w/ Automatic Light Control
*31 : Canada, South America
*32 : Except *31

A 12
Gray



(Parking Halogen Type, Daytime Running Light Halogen Type and Turn Signal Light)

A 13
Gray



(Parking Halogen Type, Daytime Running Light Halogen Type and Turn Signal Light)

A 32
Gray




(Front Side Marker Light)

A 33
Gray




(Front Side Marker Light)


A 50
White

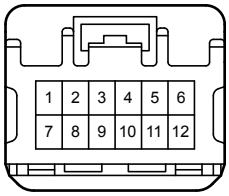


J 2
White

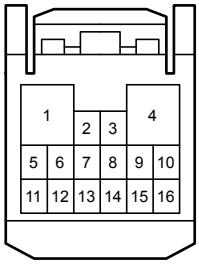


J 4
White

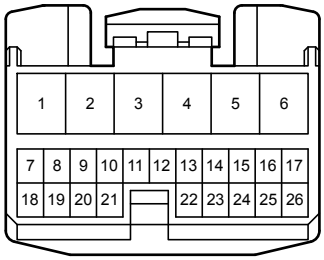


J 8
White

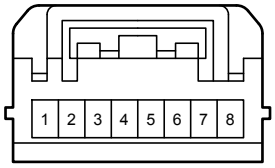


J 10
White

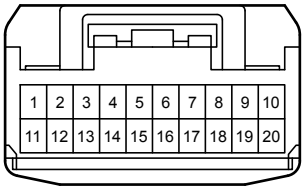


J 22
Black

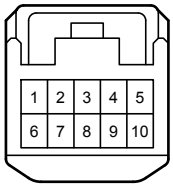


J 23
Black

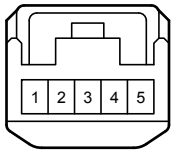


J 24
White

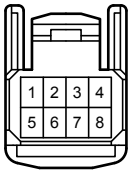


J 28
Black

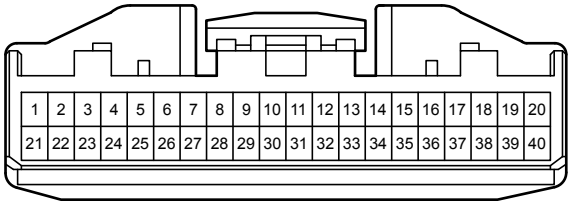


J 45
Black

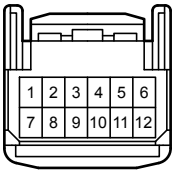


J 50
Black

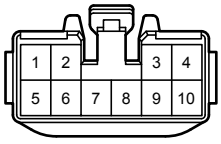


J 60
White

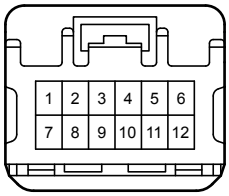


J 61
Gray

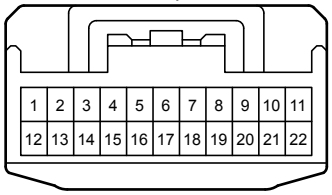


J 62
Gray

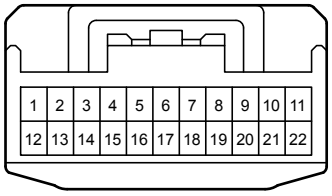


J 75
Gray

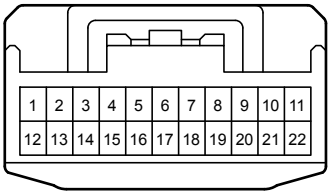


J104
Black

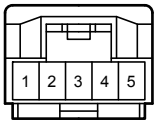


J124
Black

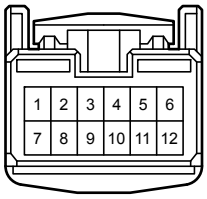


J125
Black

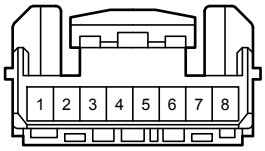


J127
Black

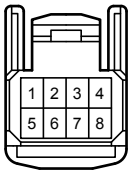


J129
Black

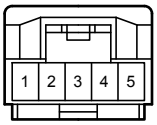

J132
Black




J133
White

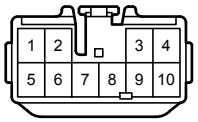

J134
White




J137
White

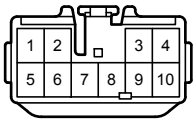


J138
White




J156
White

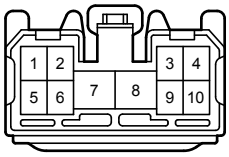


M 6
White

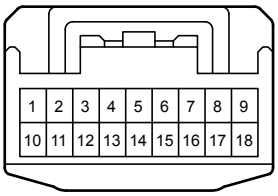


N 5
White

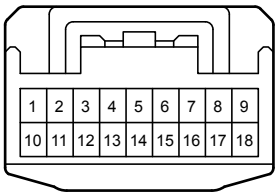

R 4
Gray

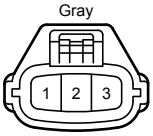

R 5
Gray

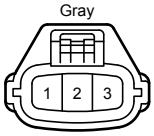


S 7
Gray




S 8
Gray




z 3
White

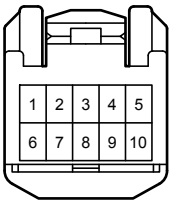


1F




DA
White




DB
White

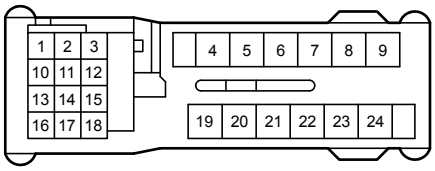


DC
White

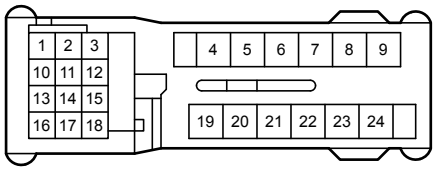


DD
White

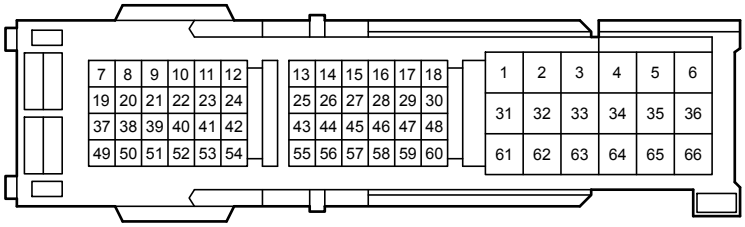


DE
White

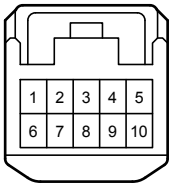


AJ10
Gray

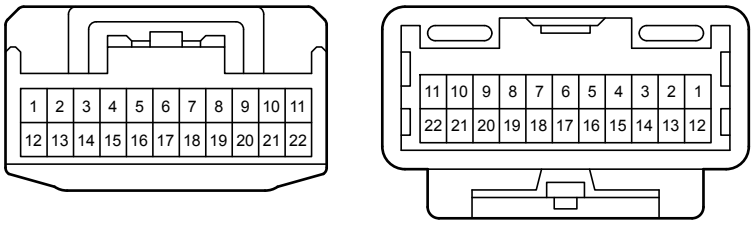


MJ1
Blue

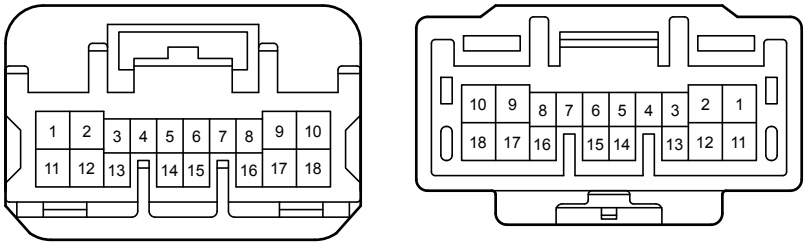


MJ2
Blue

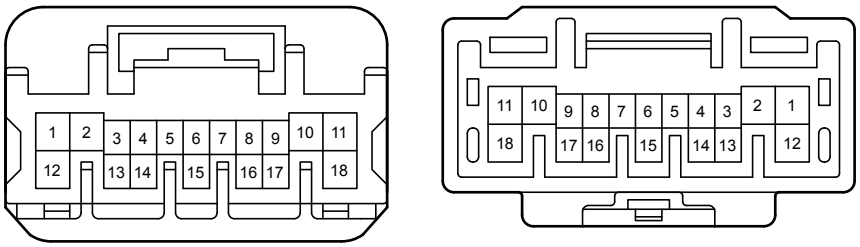

NJ1
Blue

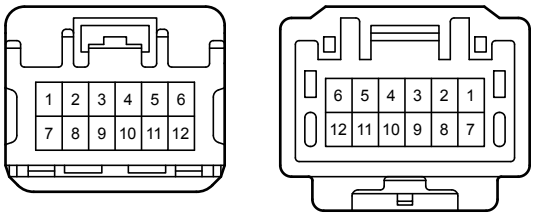

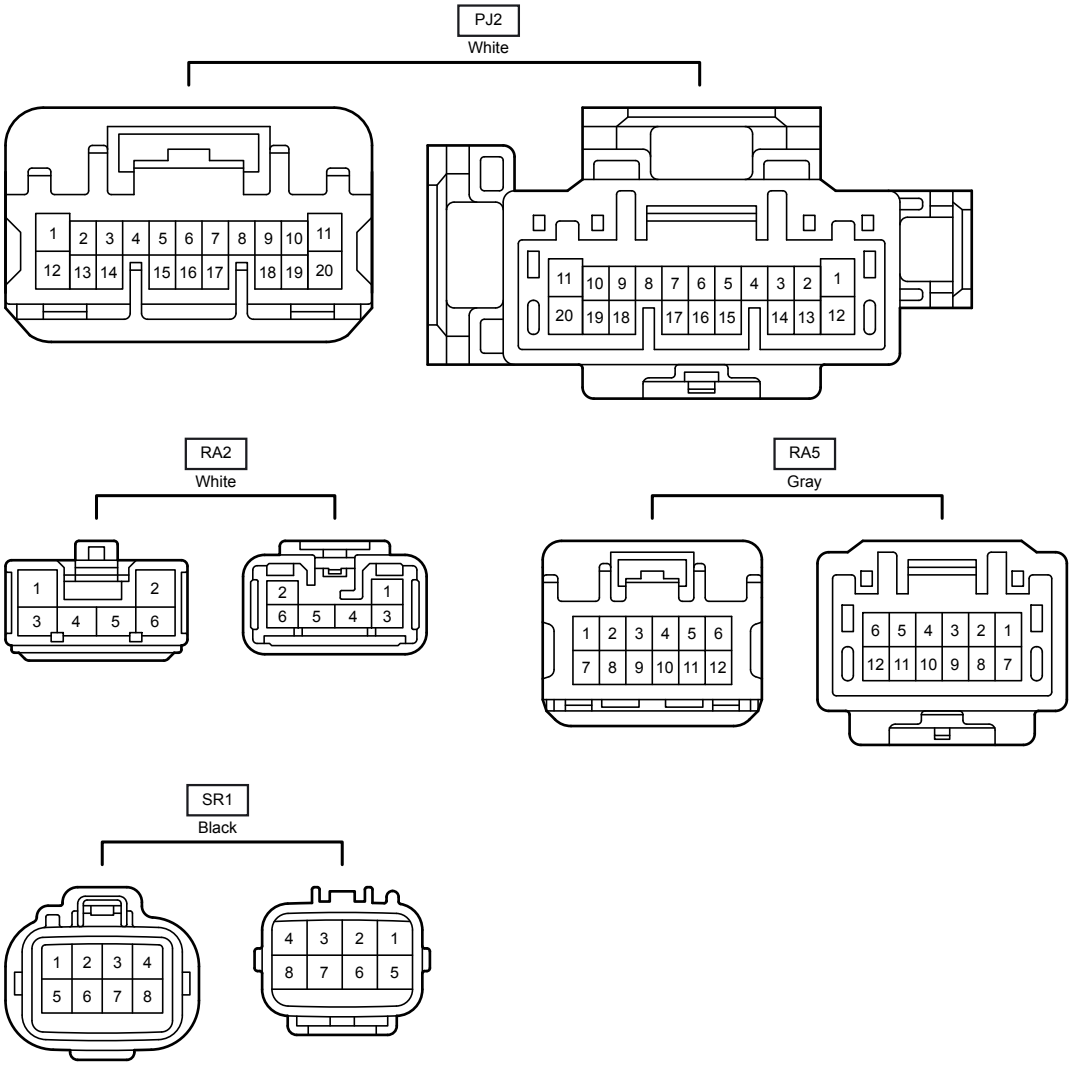
PJ2
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12
RA2
White
1 2
3 4 5 6
2 1
6 5 4 3
RA5
Gray
1 2 3 4 5 6
7 8 9 10 11 12
6 5 4 3 2 1
12 11 10 9 8 7
SR1
Black
1 2 3 4
5 6 7 8
4 3 2 1
8 7 6 5