




LG
LG
5
7
B
B1
Hold
Release
H
R
E
E1
E
3
1
2
12
11
Z2
Front Power Seat Switch LH
(Lumbar Support Control)
Z1
Front Power
Seat Switch LH
W–B
4 ZZ1
5 ZZ1
1
2
M
Z7
Front Lumbar Support Motor LH
5 PZ1
W–B
W–B
P1


(BAT)
30A
FR P/SEAT
LH
4 DC
LG
1 PZ1
W
8
Z1
Front Power Seat Switch LH
B
Front
Rear
Up
Down
Front
Rear
Up
Down
Slide
Front
Vertical
Reclining
Lifter
SLDF
SLDR
FUP
FDWN
RCLF
RCLR
LUP
LDWN
5
2
1
6
10
9
3
4
L
GR
B
R
LG
P
V
Y
2 ZZ1
1 ZZ1
3
1
1
2
M
M
M
M
4
2
2
1
Z3
Front Power Seat Position Motor LH
(Slide Position)
Z5
Front Power Seat Position Motor LH
(Vertical Position)
Z6
Front Power Seat Position Motor LH
(Reclining Position)
Z4
Front Power Seat Position Motor LH
(Lift Position)


Z 1
Black

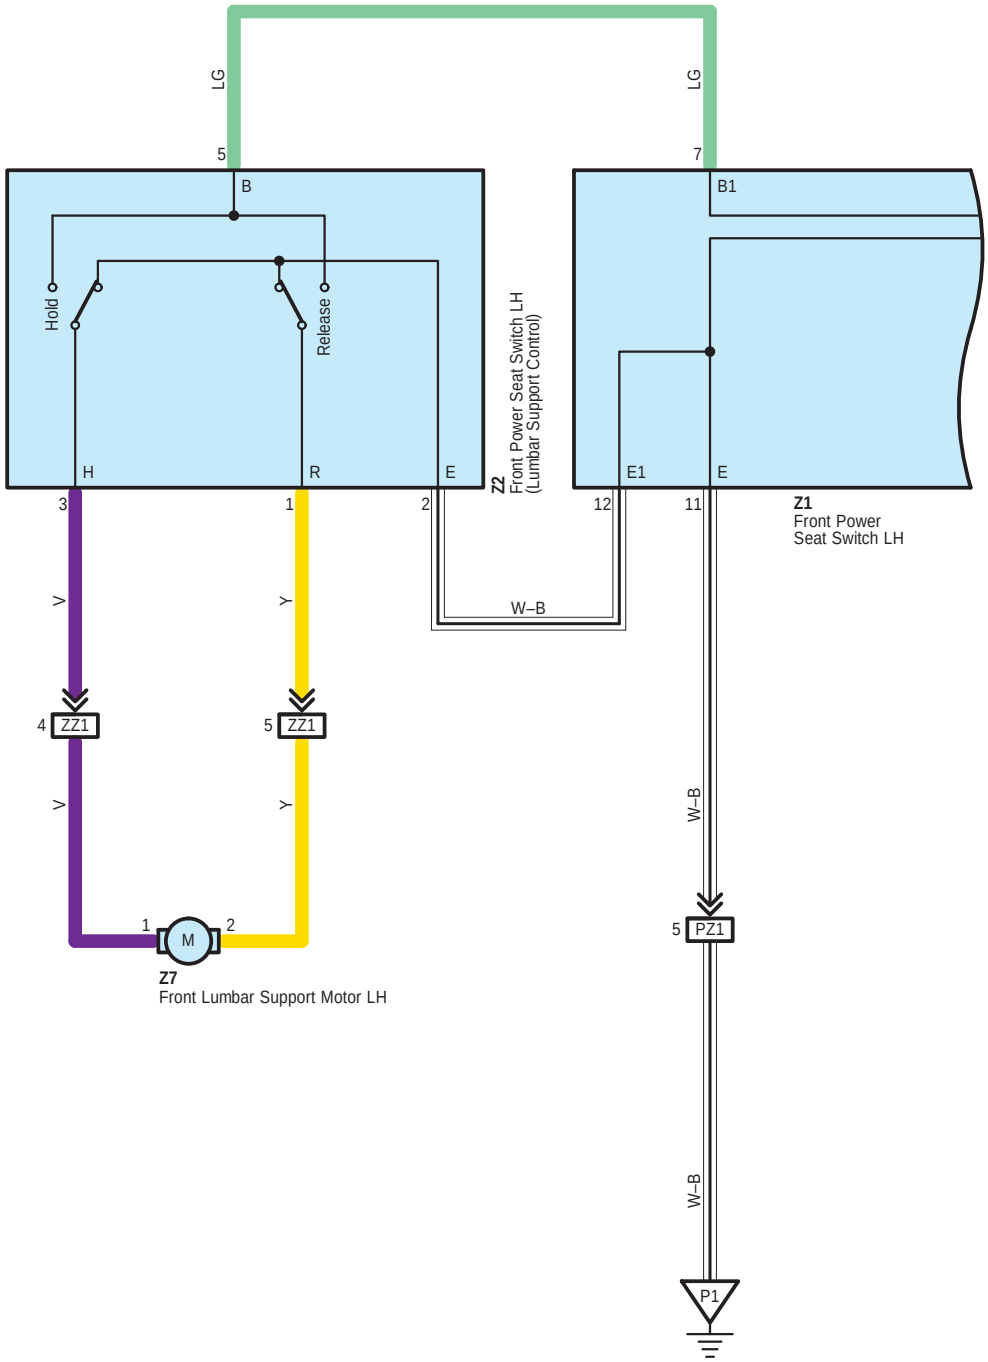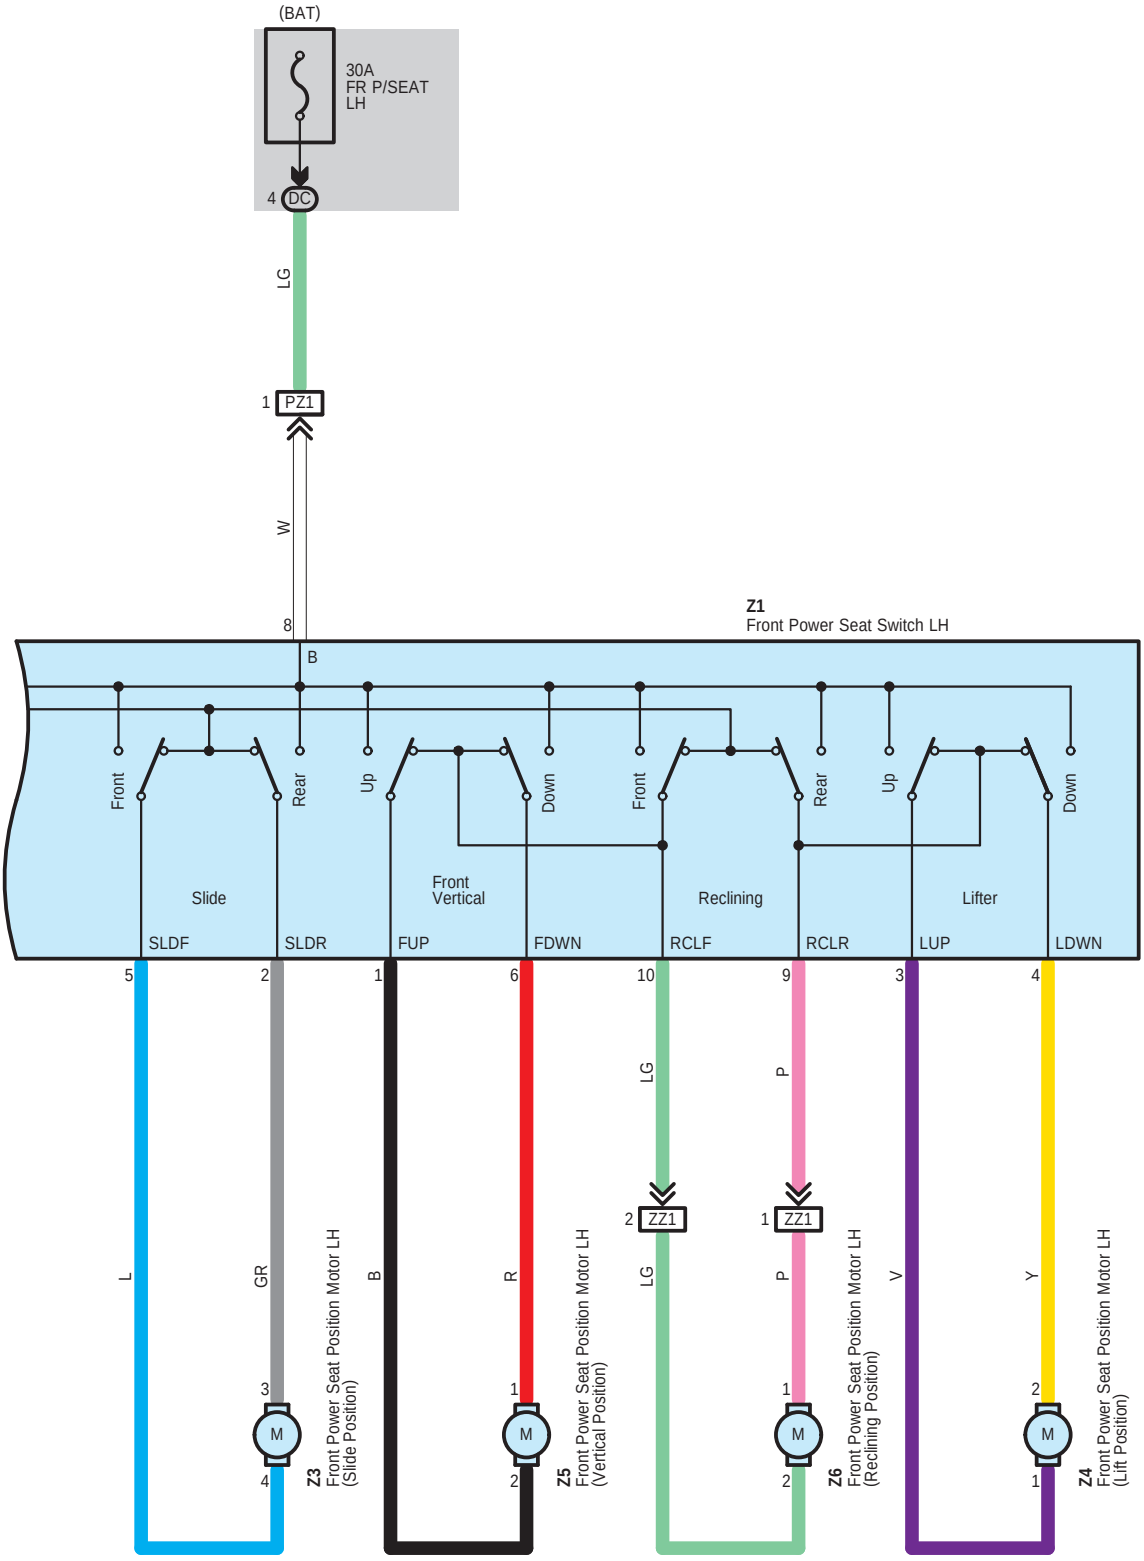


Z 2
White




Z 3
Black

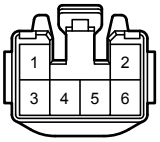


Z 4
Gray

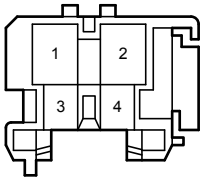


Z 5
Black




Z 6
Gray

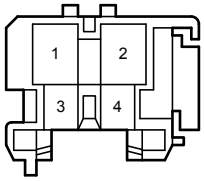


Z 7
Black



DC
White

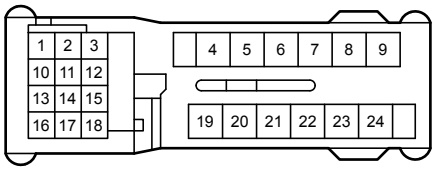

PZ1
White

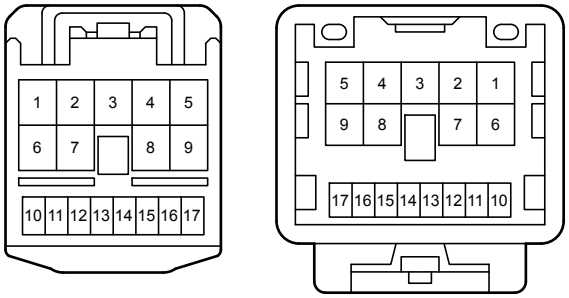

ZZ1
White

