



(IG)
7. 5A
ECU–IG
No. 2
7
DD
L
19
J64
Junction Connector
20
SB
4
J127
A/C Control Assembly
IG+
Rear Window
Defogger Switch
GND
STX
5
7
W–B
SB
37
A
LIN1
RDEF
38
A
J19(A)
A/C Amplifier
W
W–B
J2
(IG)
7. 5A
ECU–IG
No. 1
17
DB
W
18
A49
Junction
Connector
17
LG
(BAT)
40A
DEFOG
2
1
W
A24(A)
Engine Control
Module
ELS2
33
A
B
2
5
4
DEFOG
Relay
1
3
2
5A
DEF
I/UP
1
G
18
AJ10
W
B
W–B
B
B
B
W
B
3
NOISE
FILTER
4
2
NOISE
FILTER
W–B
W–B
W–B
7
PA1
B
1
A
B
E
1
B
P9(A), P10(B)
Rear Window
Defogger
W–B
A44
Junction
Connector
9
5
W–B
W–B
A2
P2


A 24
Black

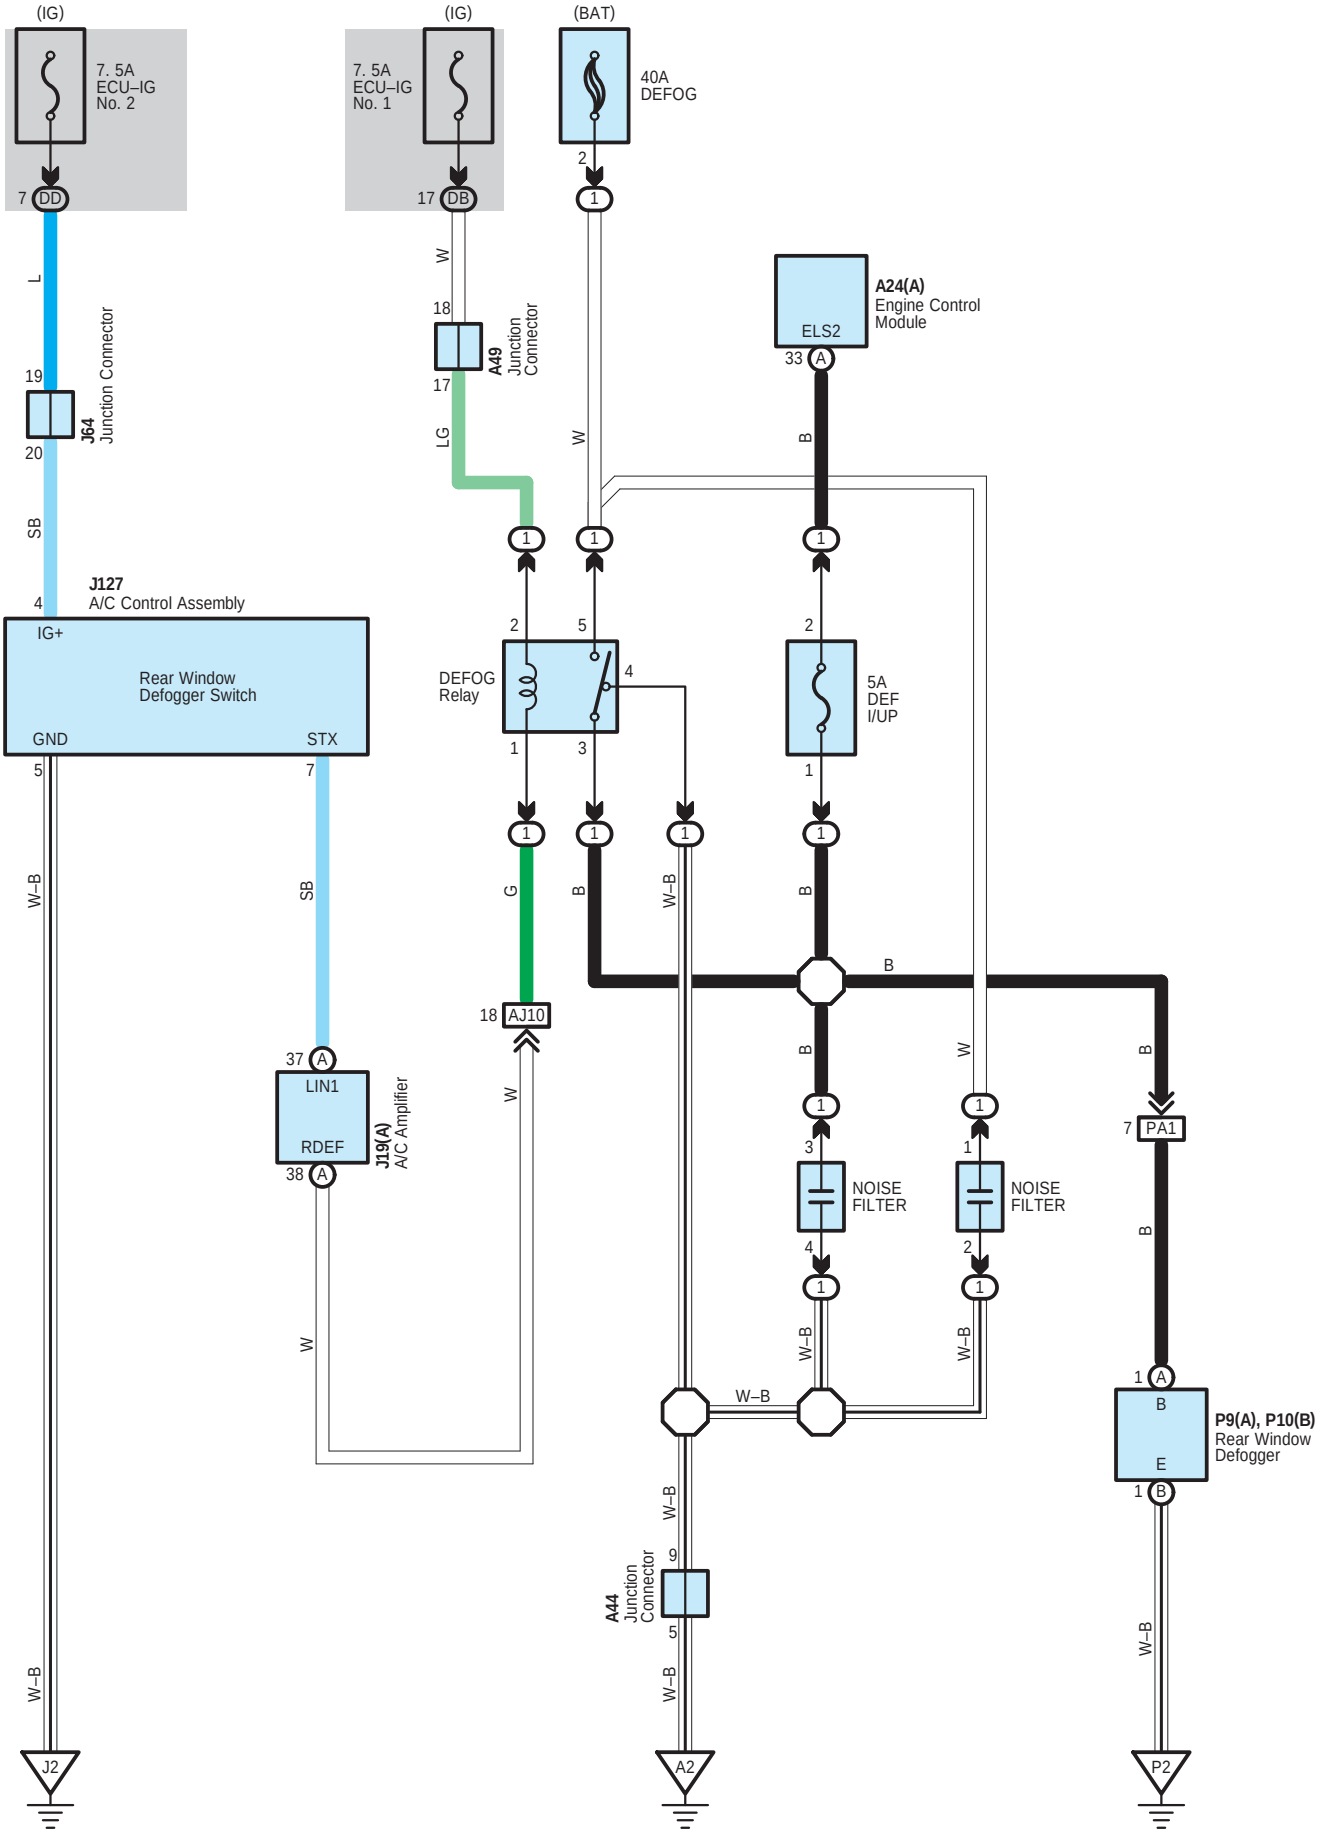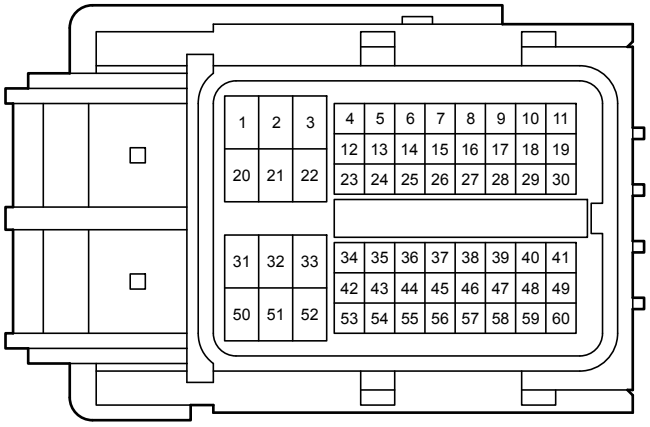


A 44
White

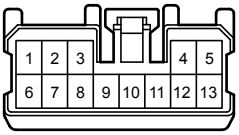


A 49
White

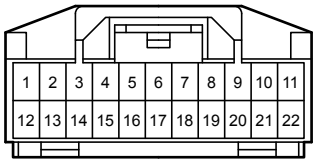


J 19
White

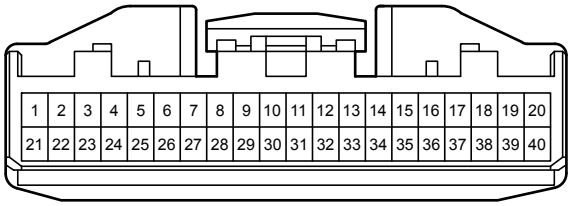

J 64
White

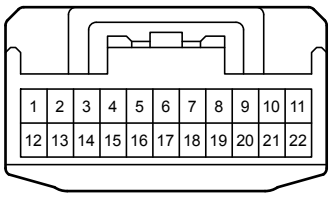

J127
Black

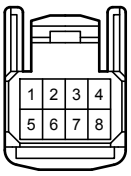


P 9
Black




P 10
Black




DB
White

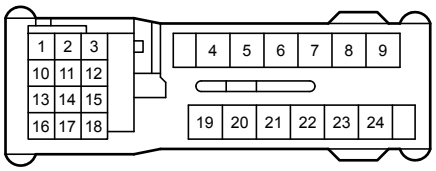


DD
White

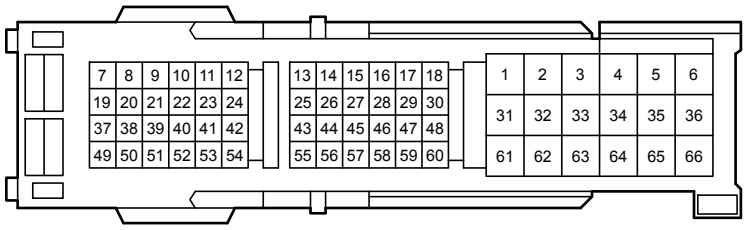

AJ10
Gray

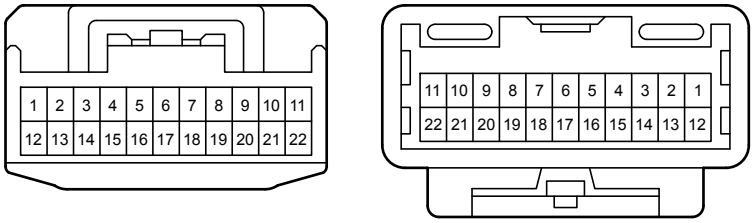

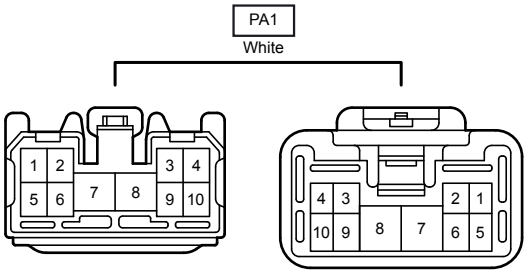
PA1
White
1
2
3
4
5
6
7
8
9
10
4
3
2
1
10
9
8
7
6
5