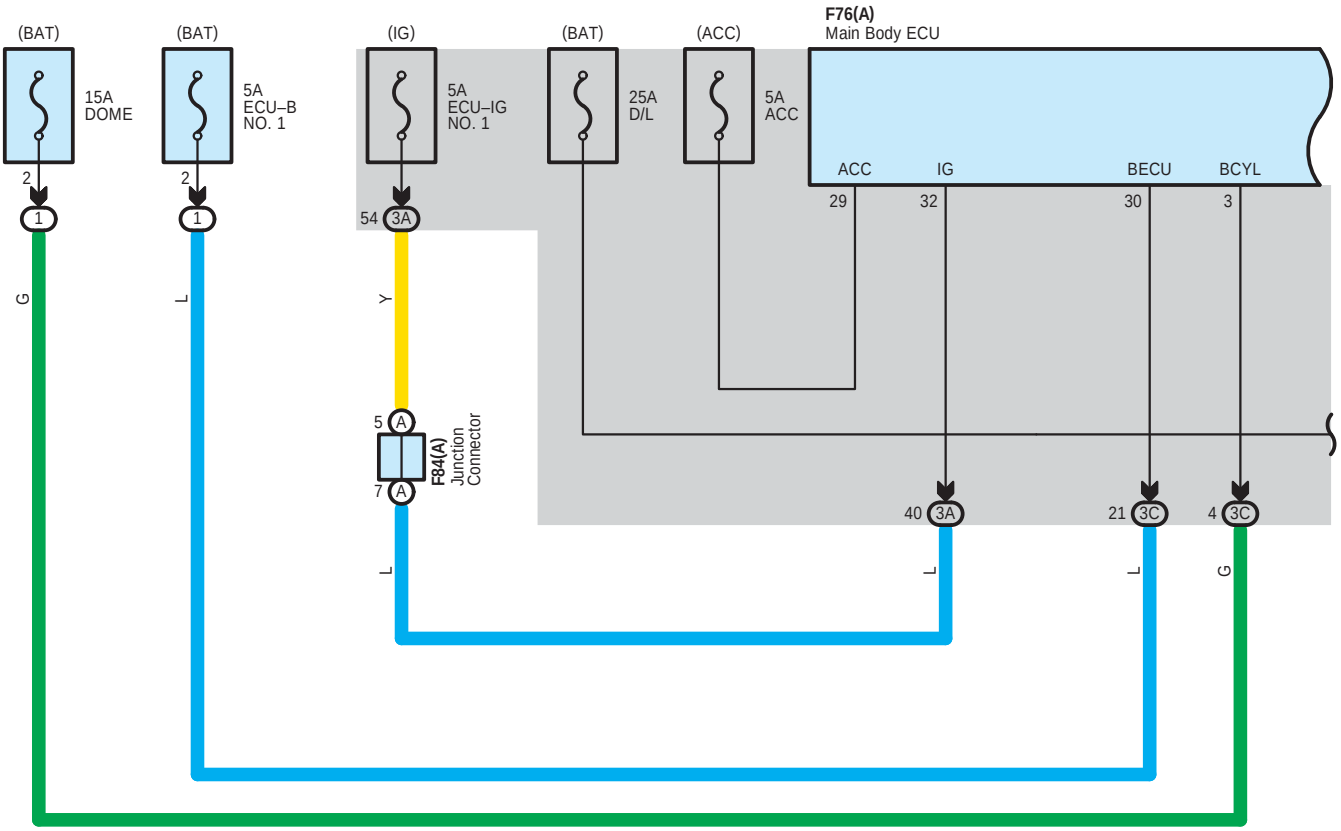
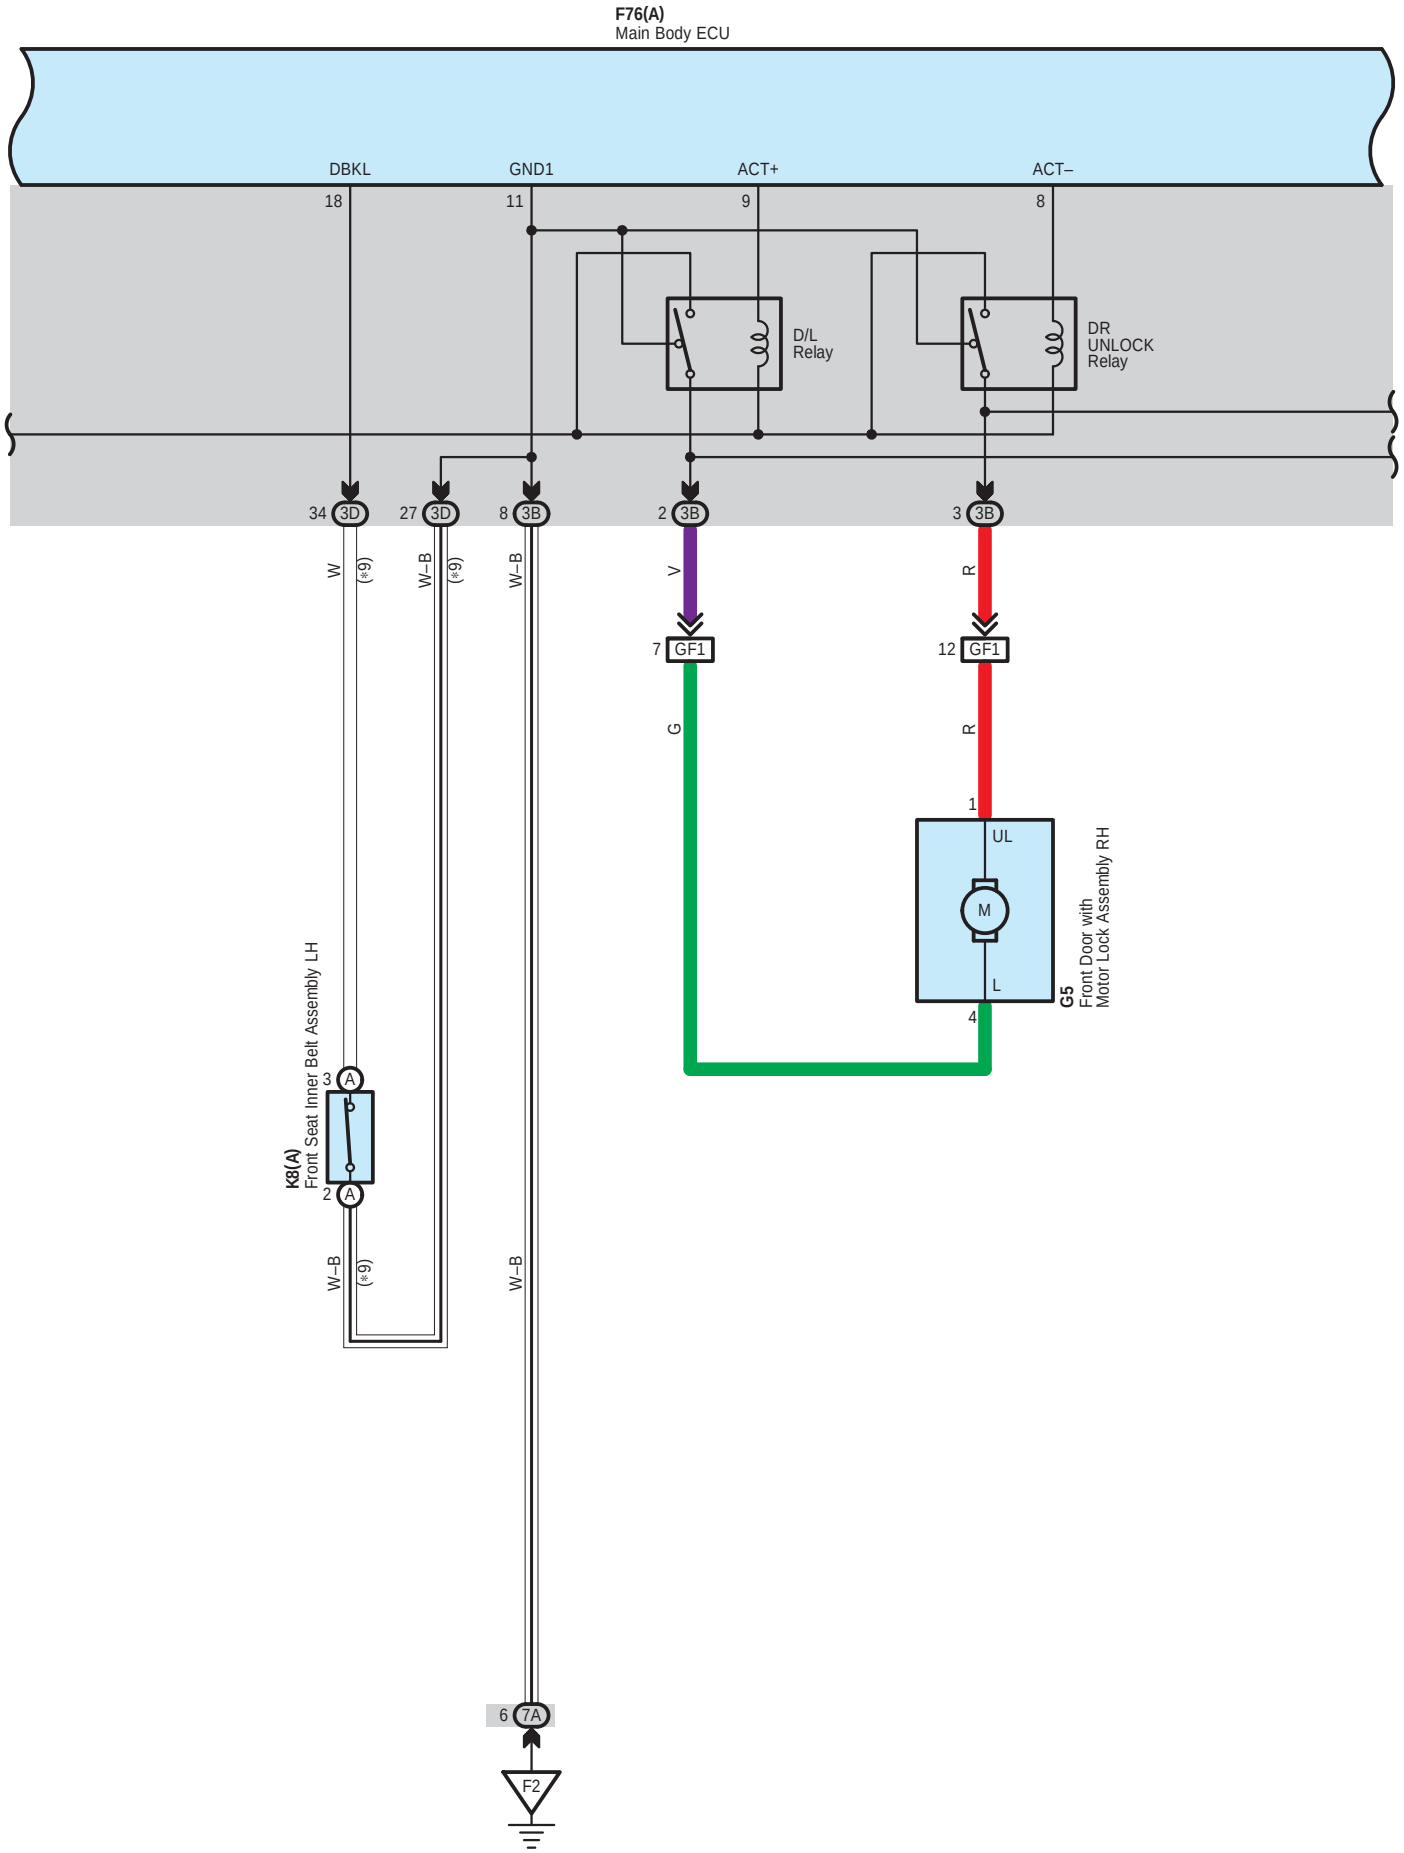
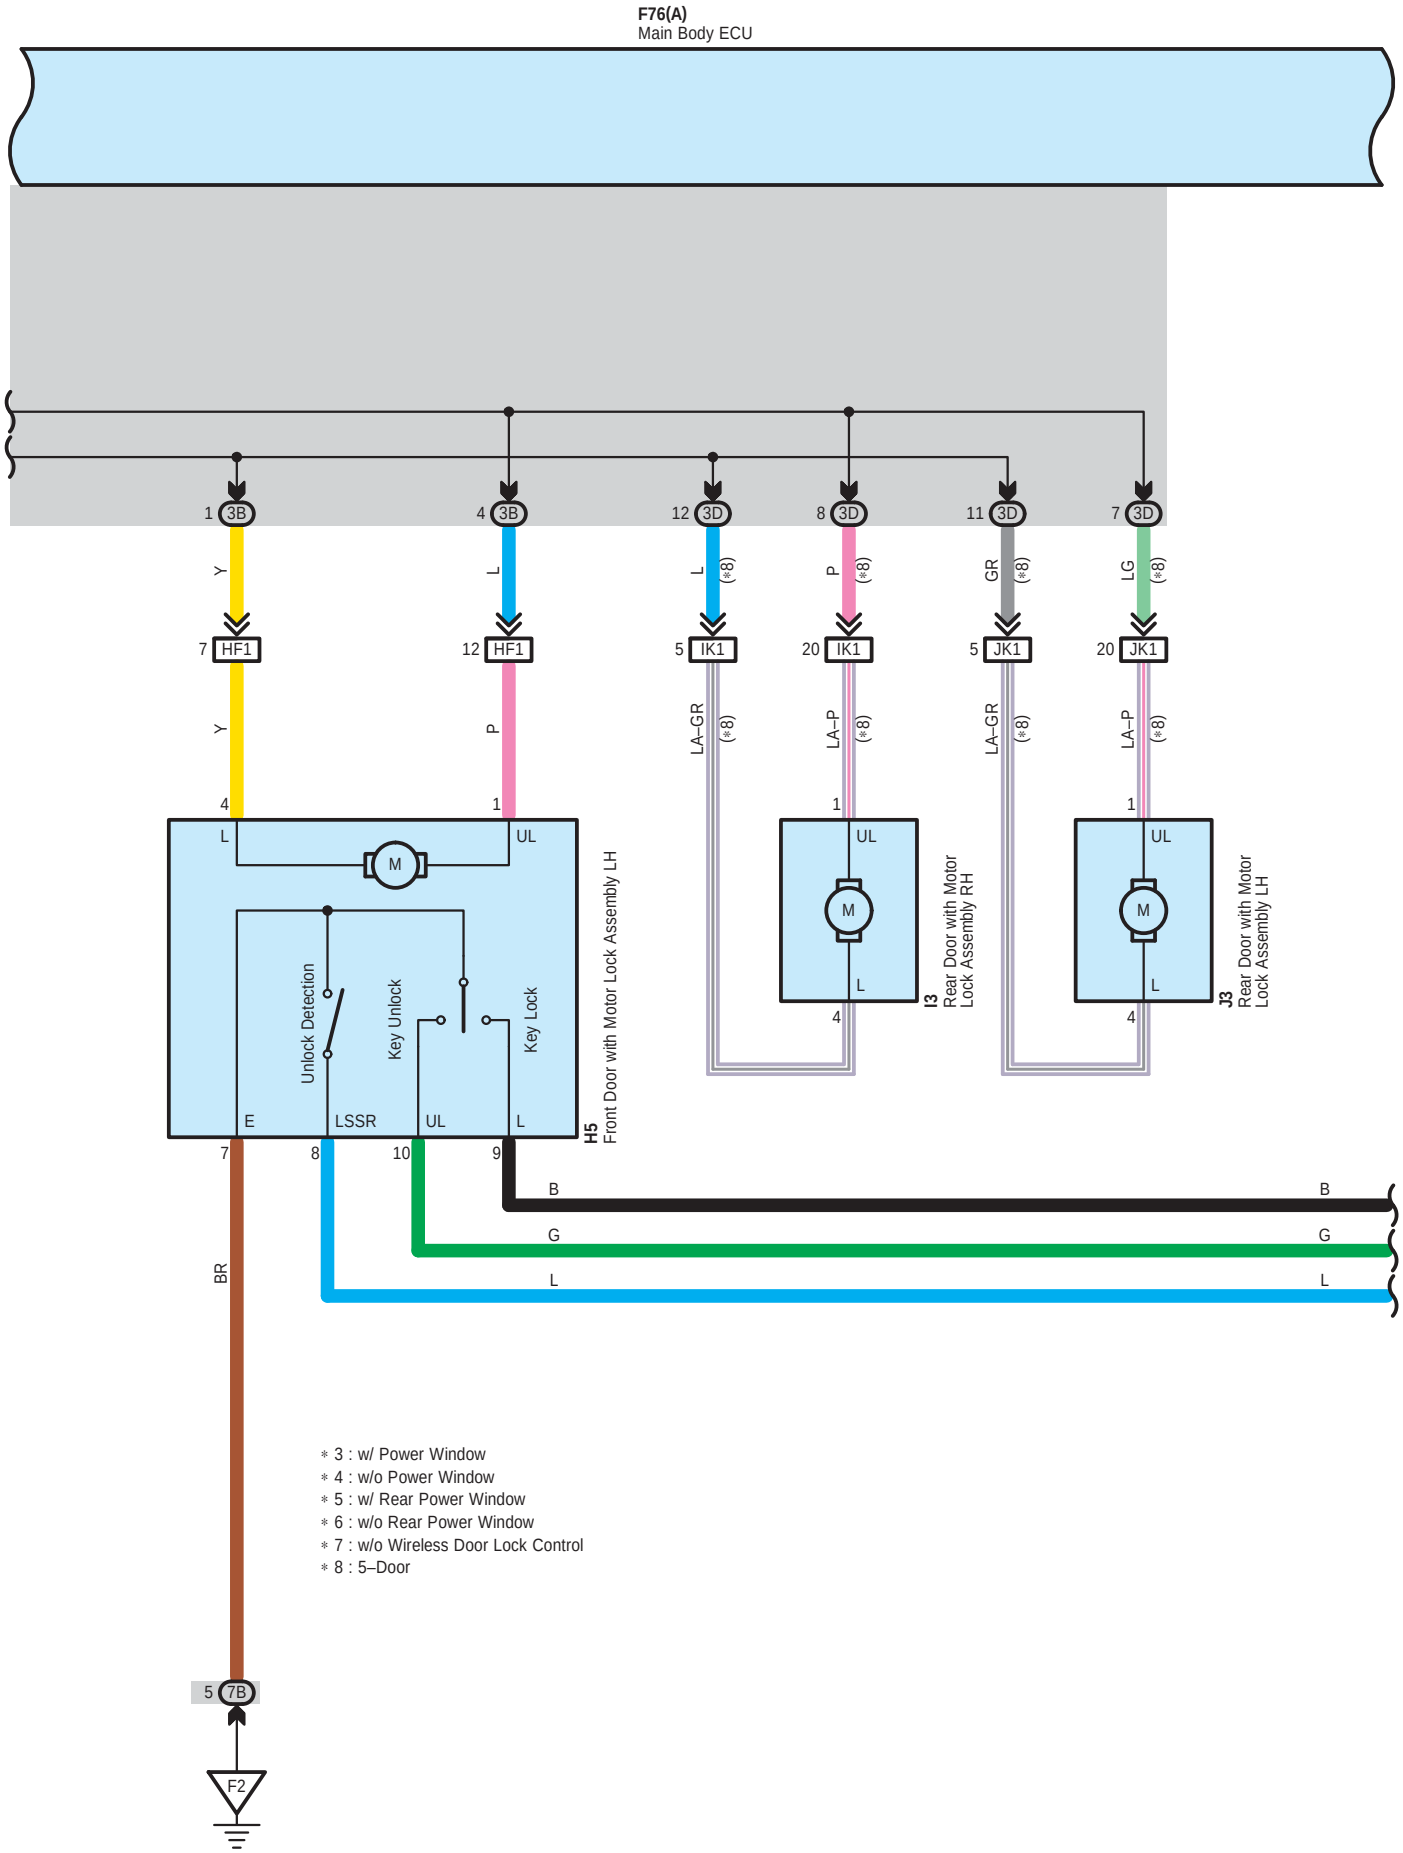
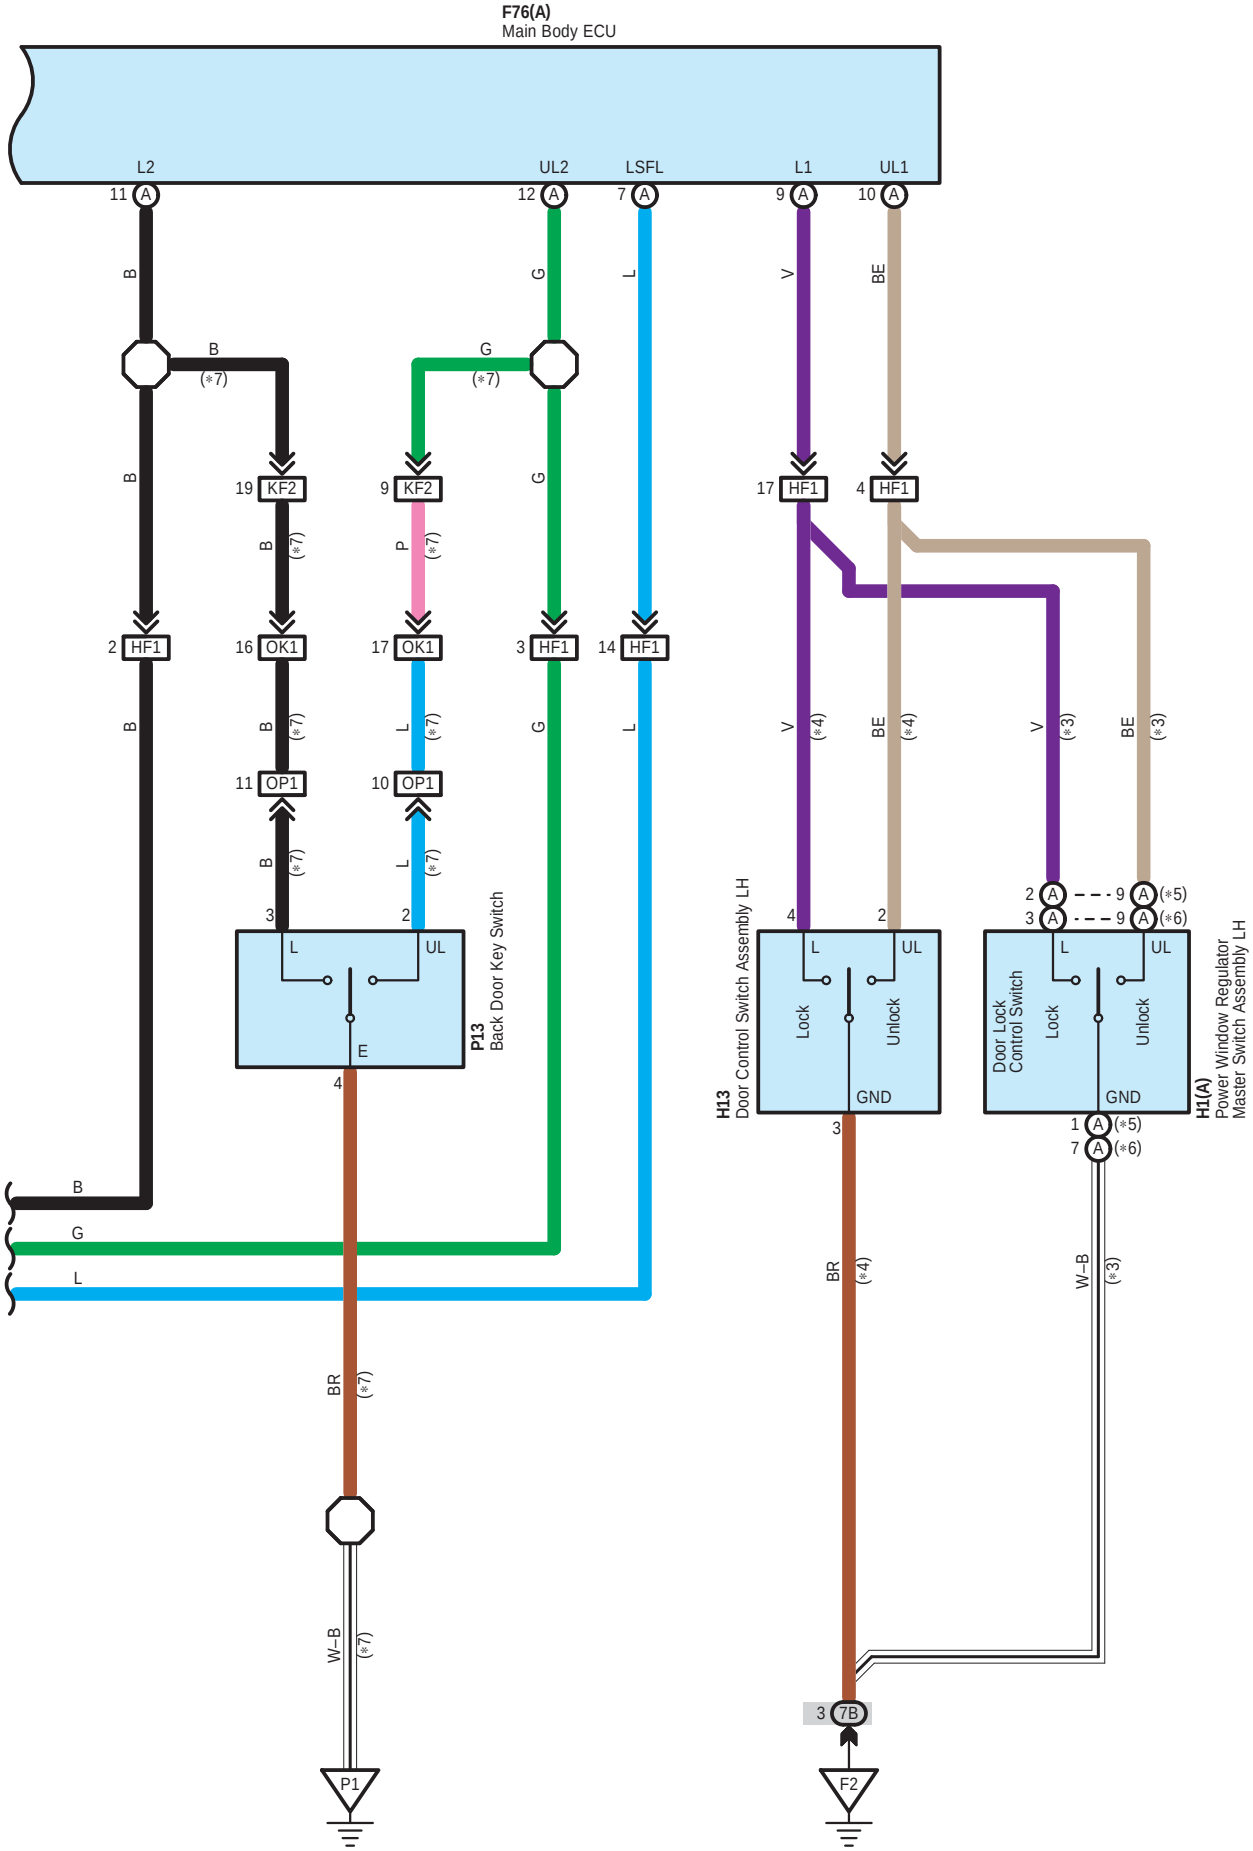



∗ 9 : w/ Seat Belt Warning


F76(A)
Main Body ECU
DBKL
GND1
ACT+
ACT–
18
11
9
8
D/L
Relay
DR
UNLOCK
Relay
34 3D
27 3D
8 3B
2 3B
3 3B
W
(*9)
W–B
(*9)
W–B
V
R
7 GF1
12 GF1
G
R
1
UL
M
L
4
G5
Front Door with
Motor Lock Assembly RH
K8(A)
Front Seat Inner Belt Assembly LH
3 A
2 A
W–B
(*9)
W–B
6 7A
F2



F76(A)
Main Body ECU
1 3B
4 3B
12 3D
8 3D
11 3D
7 3D
Y
L
L (*8)
P (*8)
GR (*8)
LG (*8)
7 HF1
12 HF1
5 IK1
20 IK1
5 JK1
20 JK1
Y
P
LA–GR (*8)
LA–P (*8)
LA–GR (*8)
LA–P (*8)
4
1
1
1
1
L
UL
M
Unlock Detection
Key Unlock
Key Lock
E
LSSR
UL
L
H5
Front Door with Motor Lock Assembly LH
I3
Rear Door with Motor Lock Assembly RH
J3
Rear Door with Motor Lock Assembly LH
7
8
10
9
4
4
B
G
L
BR
5 7B
F2
* 3 : w/ Power Window
* 4 : w/o Power Window
* 5 : w/ Rear Power Window
* 6 : w/o Rear Power Window
* 7 : w/o Wireless Door Lock Control
* 8 : 5–Door


F76(A)
Main Body ECU
L2
UL2
LSFL
L1
UL1
11 A
12 A
7 A
9 A
10 A
B
G
L
V
BE
(*7)
19 KF2
9 KF2
17 HF1
4 HF1
P
2 HF1
16 OK1
17 OK1
3 HF1
14 HF1
11 OP1
10 OP1
(*4)
(*3)
3
2
L
UL
E
P13
Back Door Key Switch
4
H13
Door Control Switch Assembly LH
Lock
Unlock
GND
Door Lock
Control Switch
H1(A)
Power Window Regulator
Master Switch Assembly LH
(*5)
(*6)
1 A
7 A
BR
W–B
3 7B
P1
F2


F 76
White

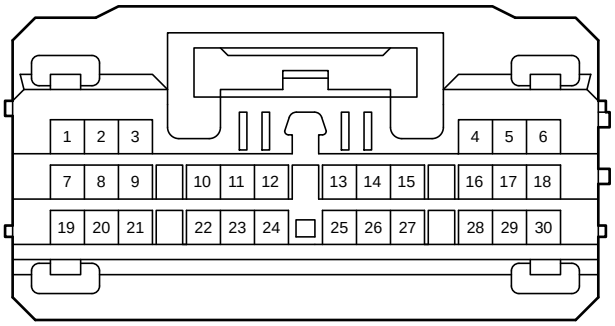


F 84
Black

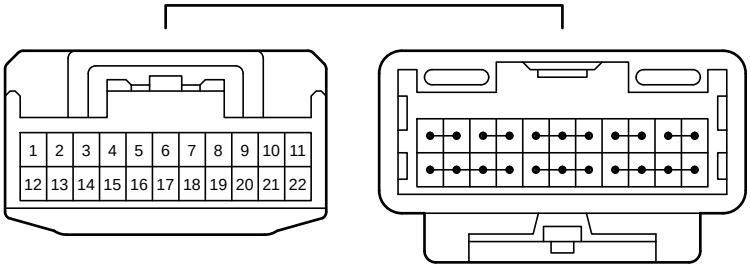


G 5
White

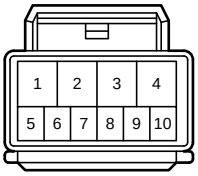


H 1
White

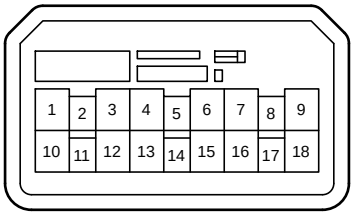


H 5
White

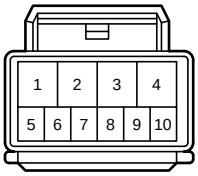


H 13
White




I 3
White

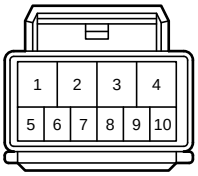


J 3
White

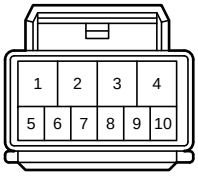


K 8
White

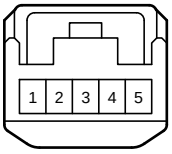


P 13
White

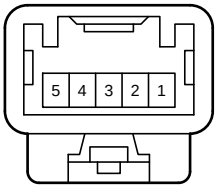


3A
White

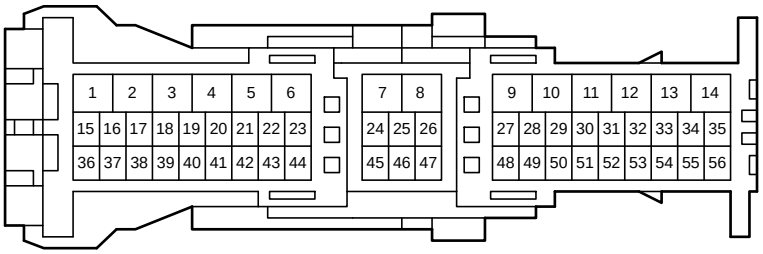


3B
White

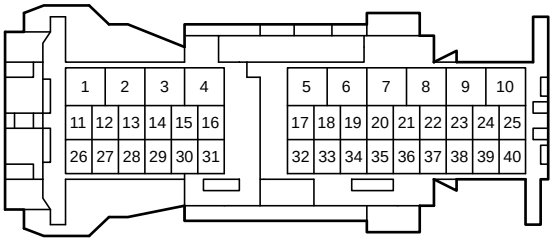


3C
White

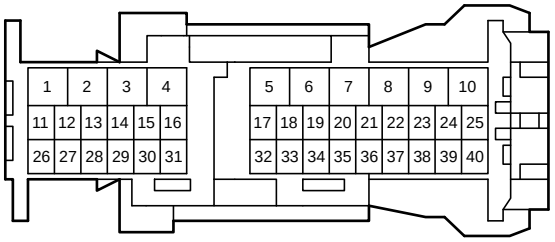


3D
White

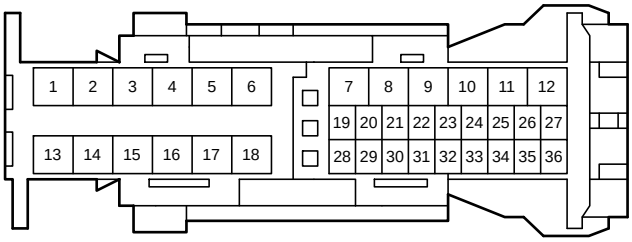


7A
White

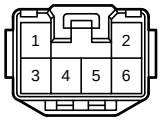


7B
White

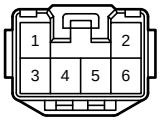

GF1
White

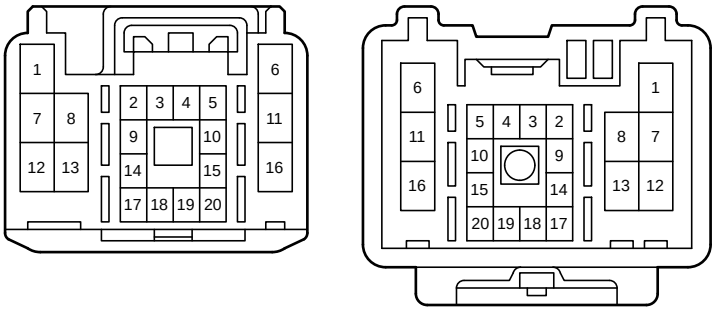


HF1
White

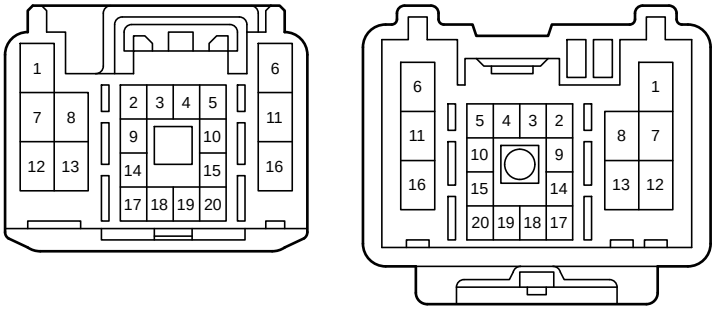


IK1

White

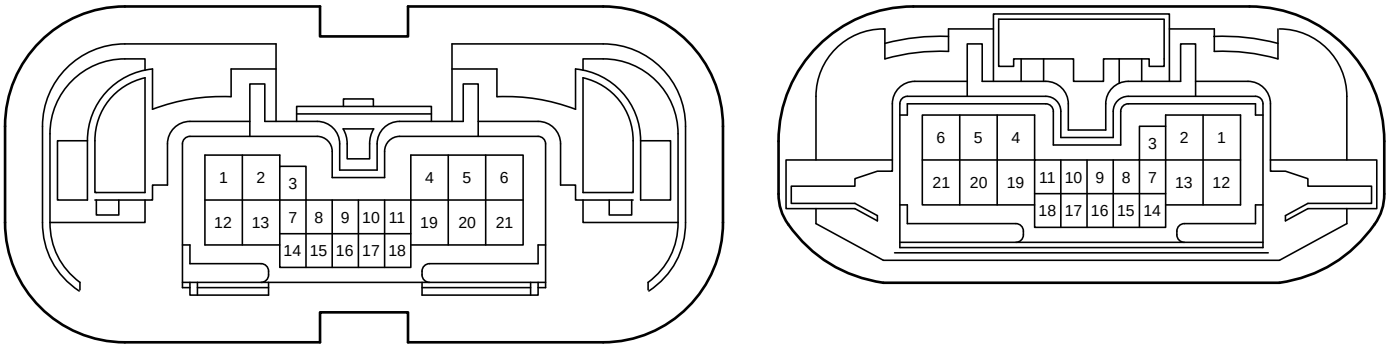


JK1


White

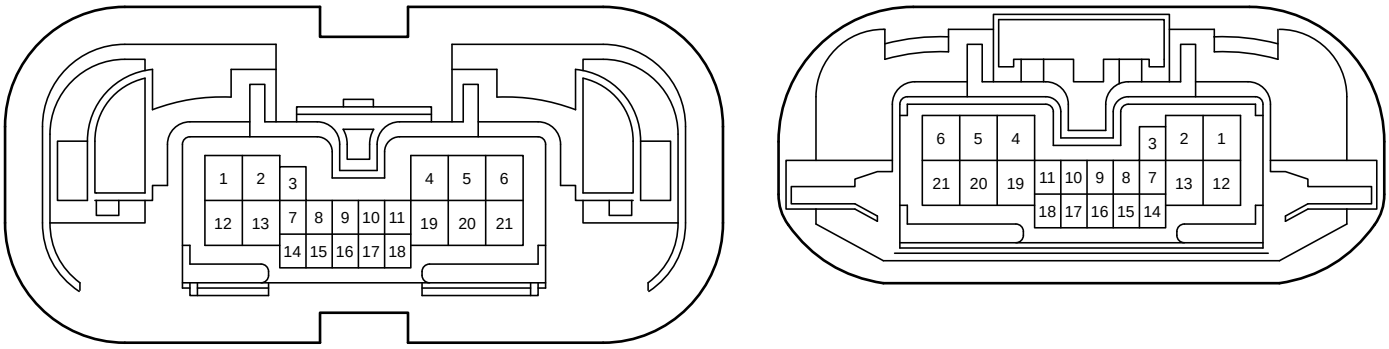

KF2

White

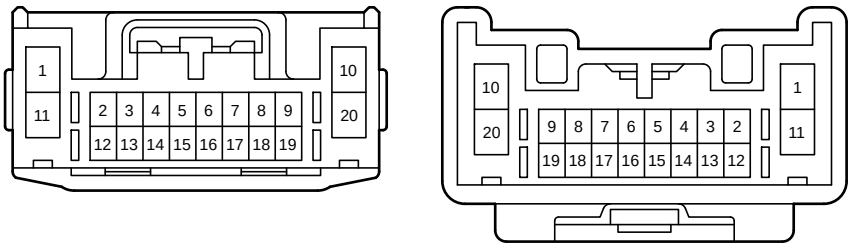

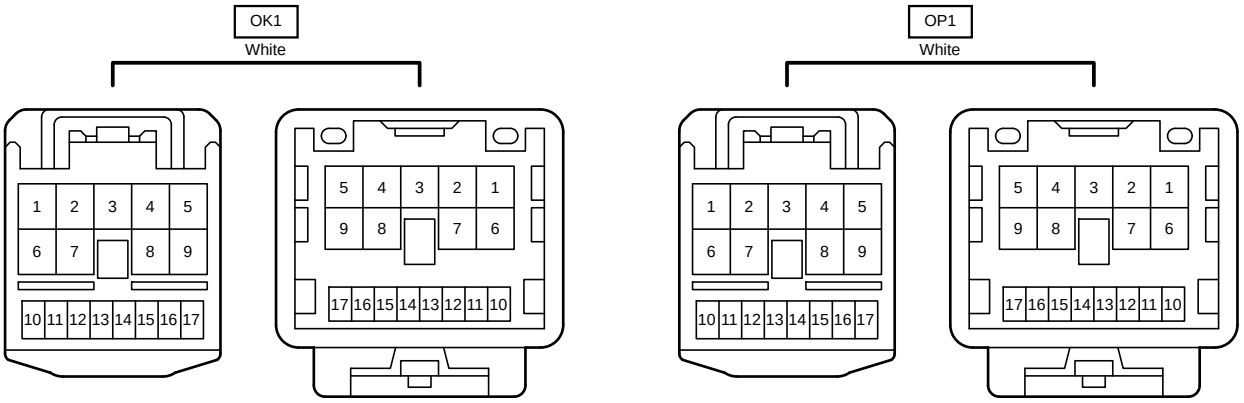
OK1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10
OP1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10