

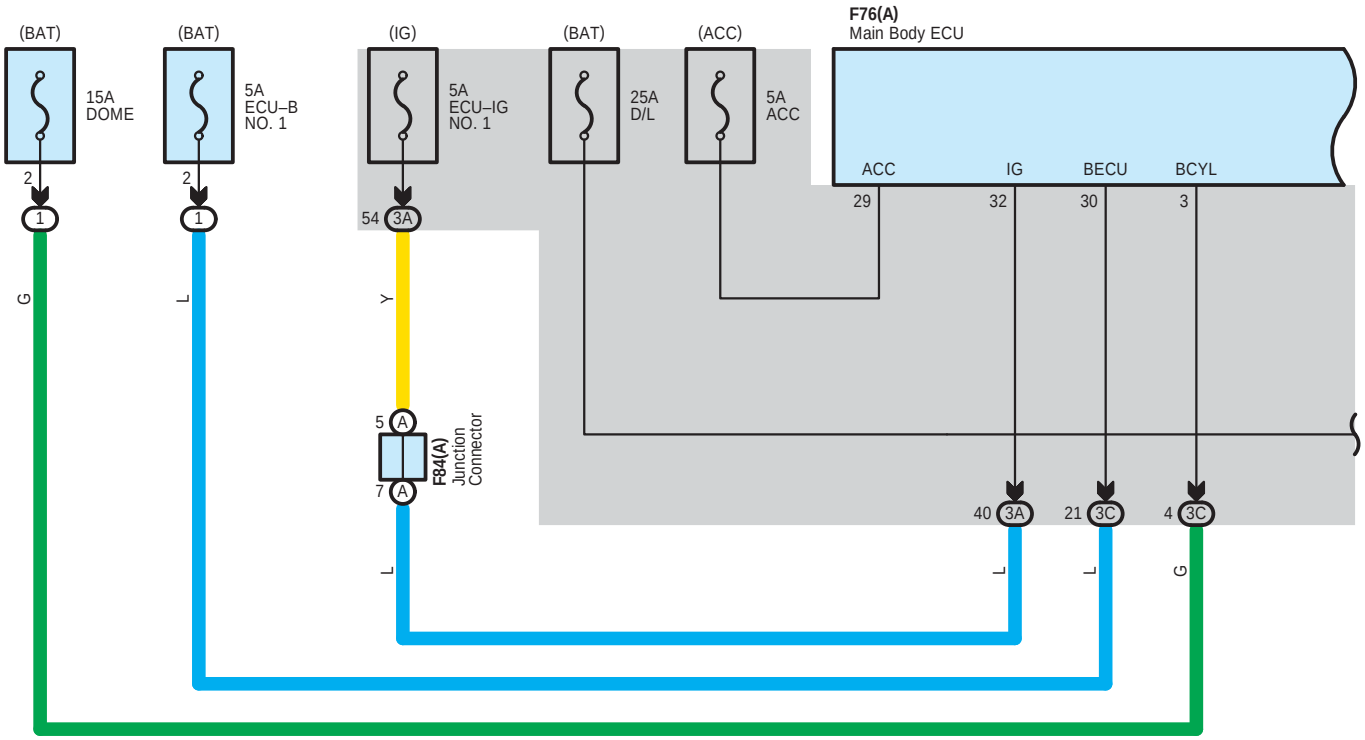



∗ 9 : w/ Seat Belt Warning


F76(A)
Main Body ECU
DBKL
GND1
ACT+
ACT–
18
11
9
8
D/L
Relay
DR
UNLOCK
Relay
34 3D
27 3D
8 3B
2 3B
3 3B
W
(*9)
W–B
(*9)
W–B
V
R
7 GF1
12 GF1
G
R
4
1
L
UL
M
K9(B)
Front Seat Inner Belt Assembly RH
3 B
2 B
W–B
(*9)
Unlock Detection
Key Unlock
Key Lock
E
LSSR
UL
L
G5
Front Door with Motor Lock Assembly RH
8
7
5
6
L
G
B
BR
W–B
B
G
L
6 7A
5 6B
F2
F1

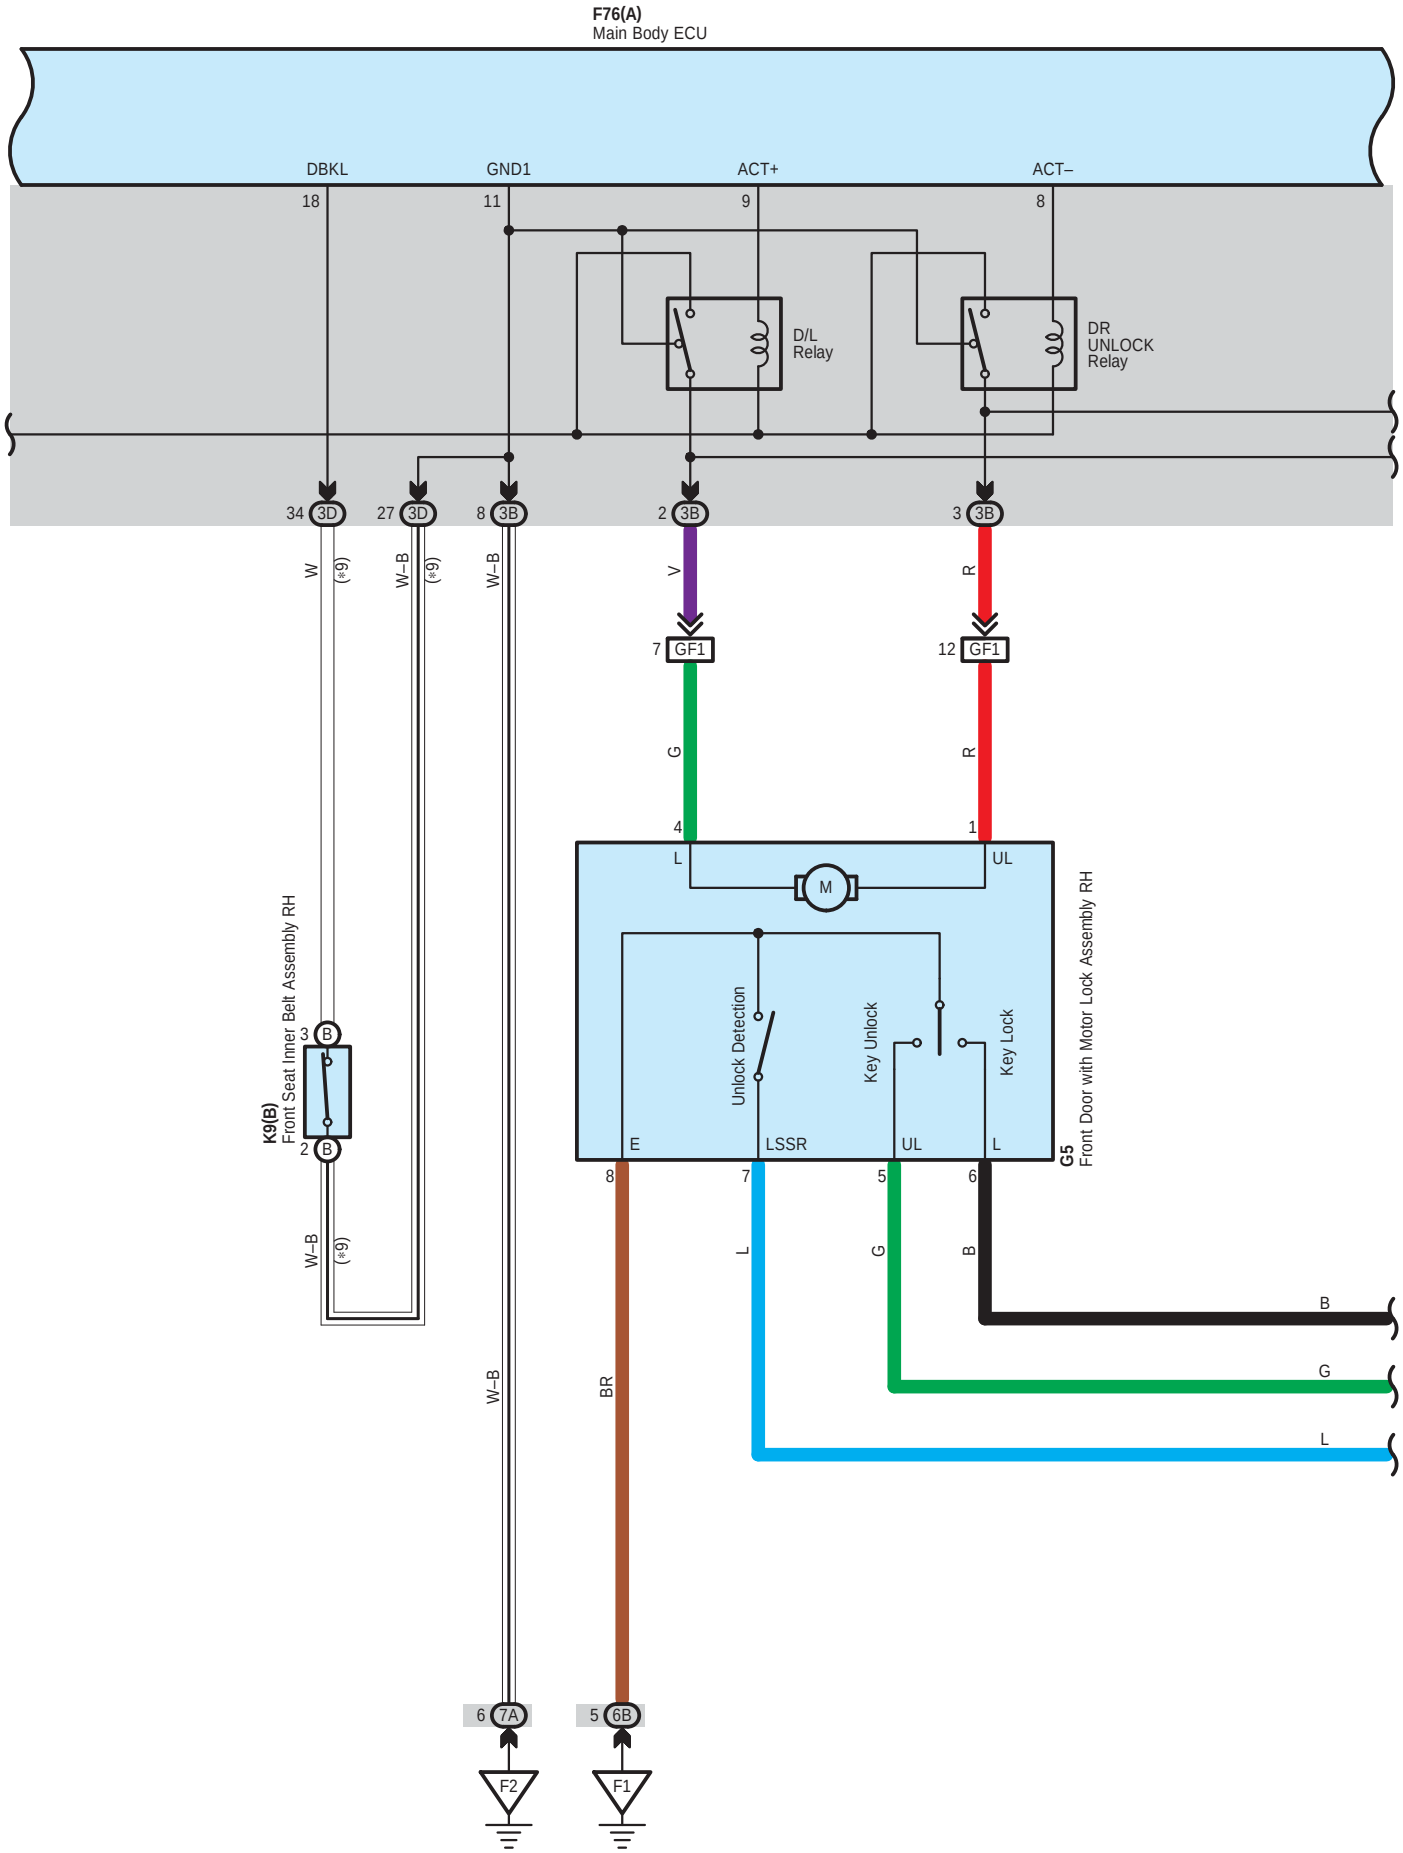


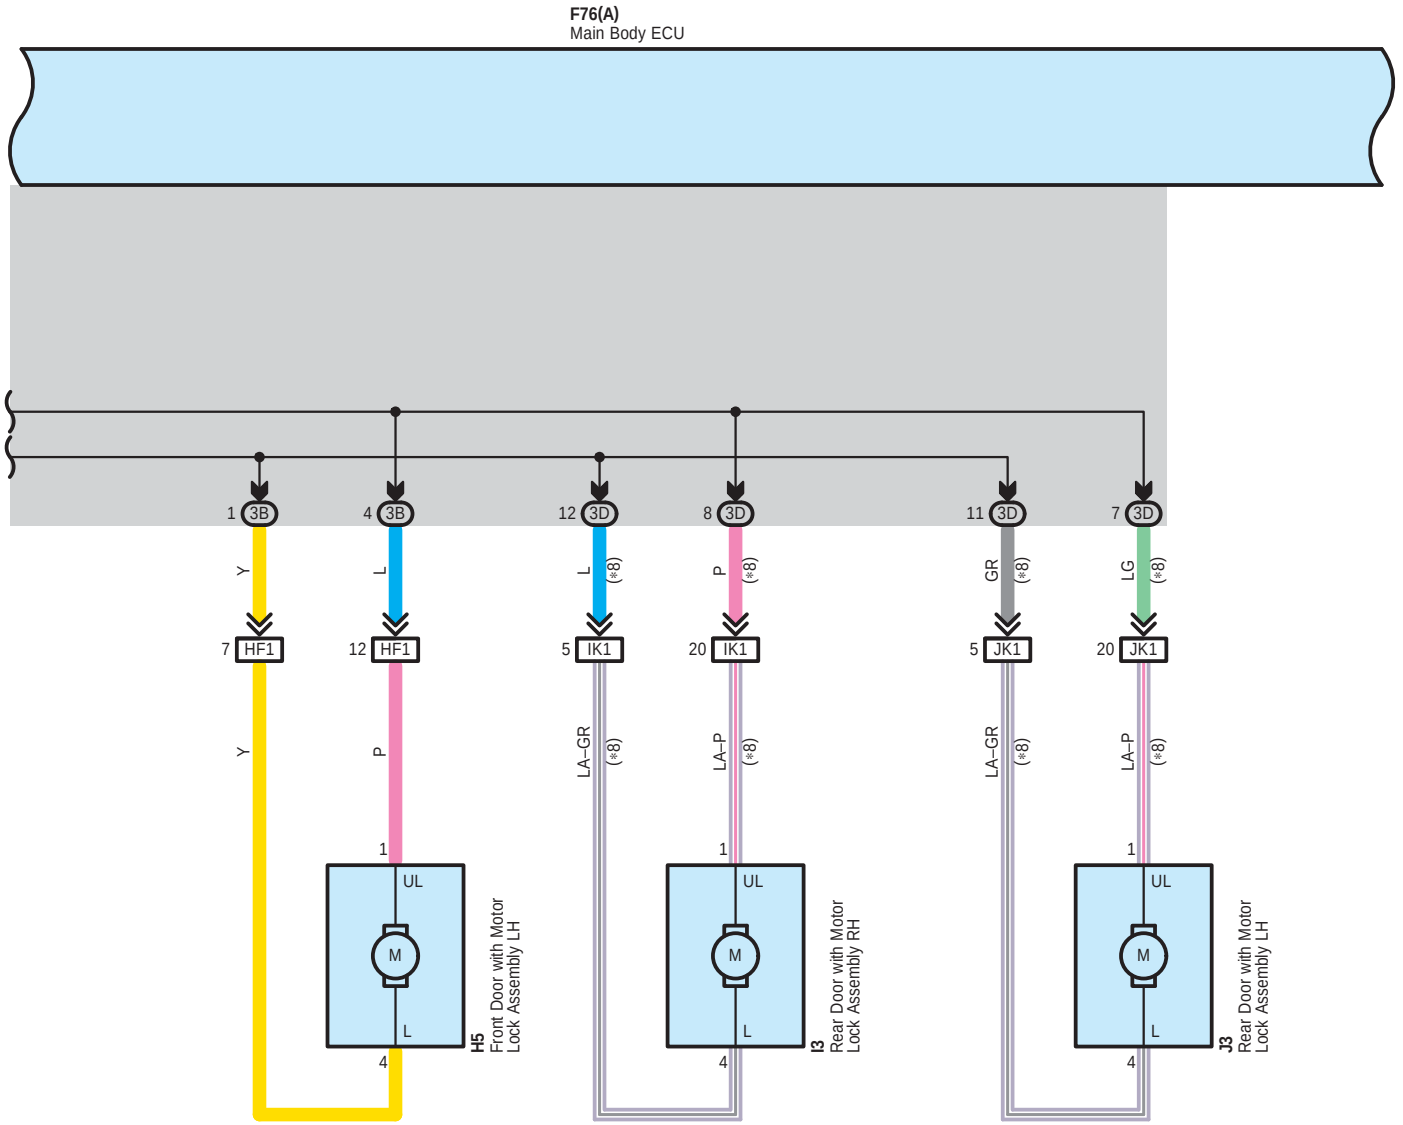


* 3 : w/ Power Window
* 5 : w/ Rear Power Window
* 6 : w/o Rear Power Window
* 7 : w/o Wireless Door Lock Control
* 8 : 5–Door

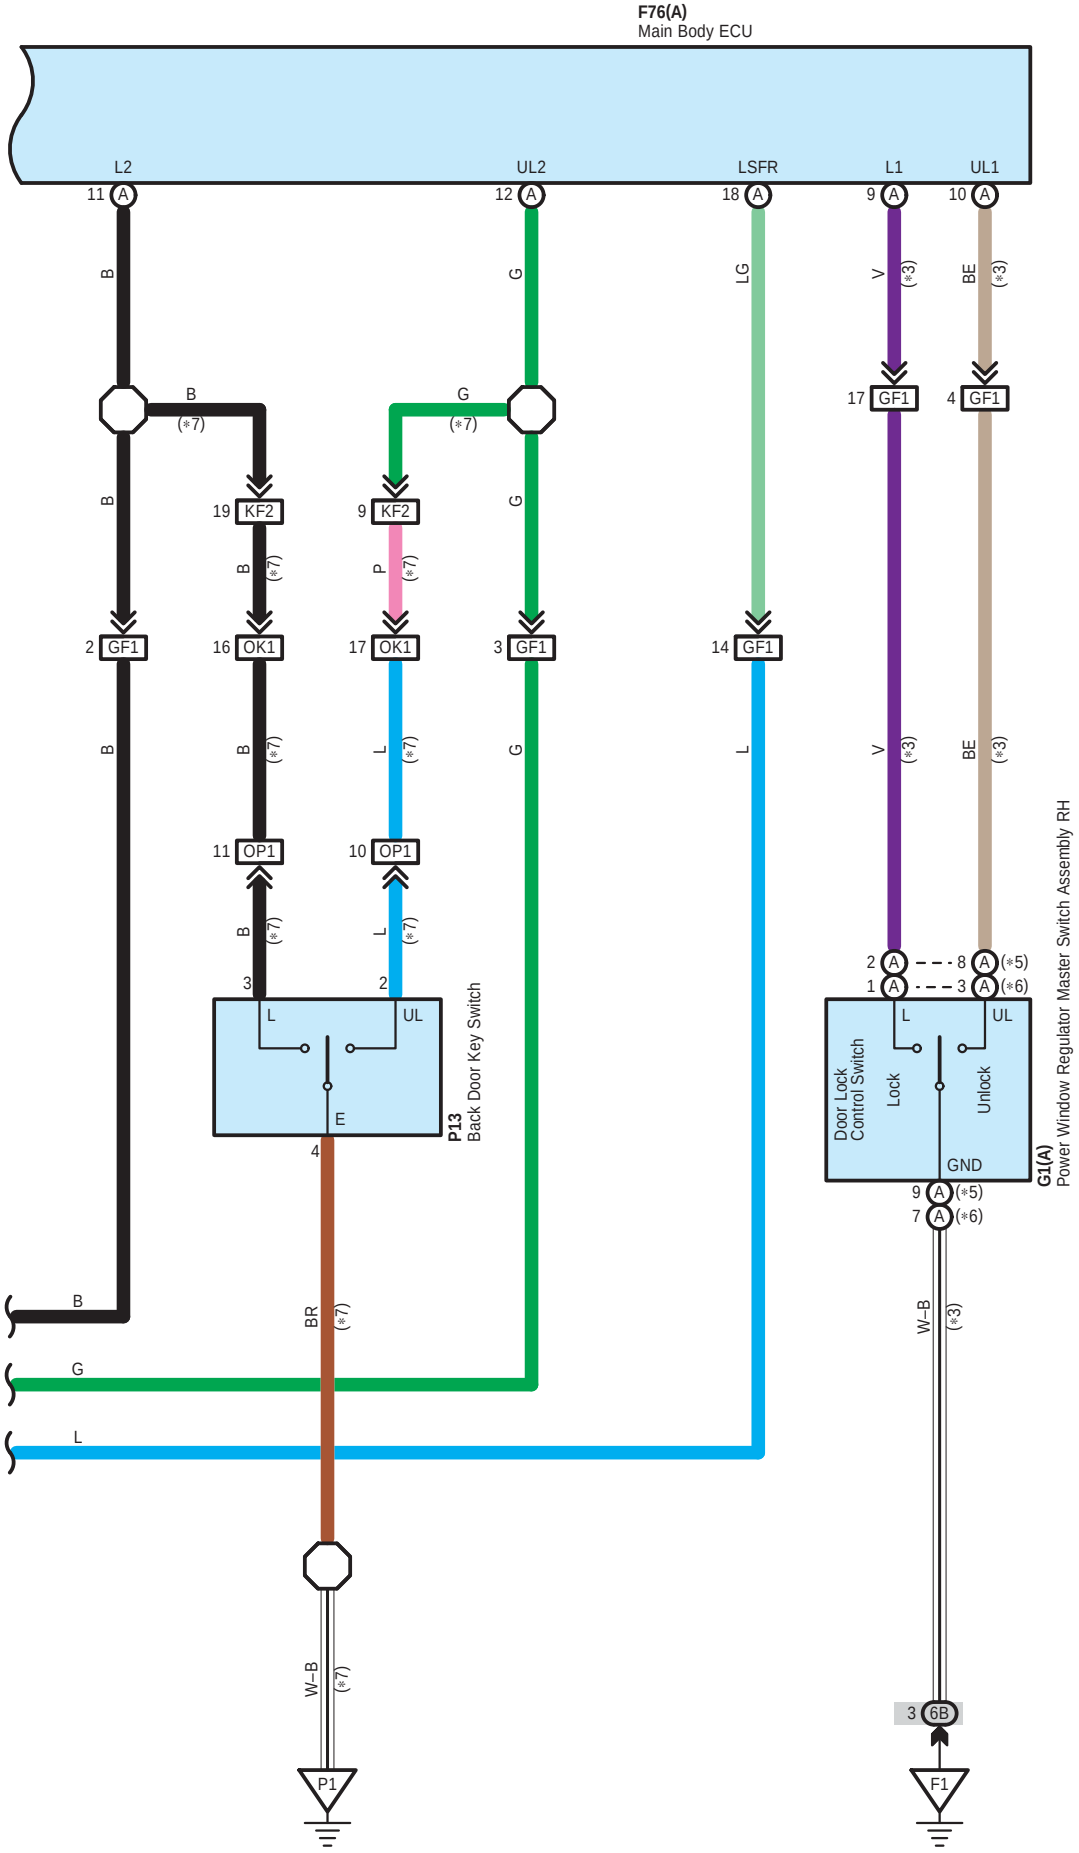
F76(A)
Main Body ECU
L2
UL2
LSFR
L1
UL1
11 A
12 A
18 A
9 A
10 A
B
G
LG
V (*3)
BE (*3)
B (*7)
G (*7)
19 KF2
9 KF2
17 GF1
4 GF1
B (*7)
P (*7)
G
2 GF1
16 OK1
17 OK1
3 GF1
14 GF1
B (*7)
L (*7)
G
L
V (*3)
BE (*3)
11 OP1
10 OP1
B (*7)
L (*7)
3
2
L
UL
E
P13
Back Door Key Switch
4
2 A 8 A (*5)
1 A 3 A (*6)
L
UL
Door Lock Control Switch
Lock
Unlock
GND
G1(A)
Power Window Regulator Master Switch Assembly RH
9 A (*5)
7 A (*6)
B
BR (*7)
G
L
W–B (*3)
W–B (*7)
3 6B
P1
F1


F 76
White

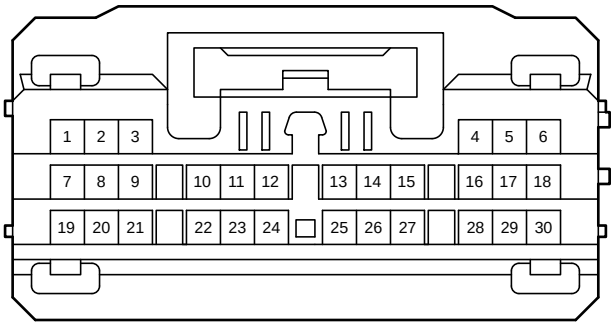


F 84
Black

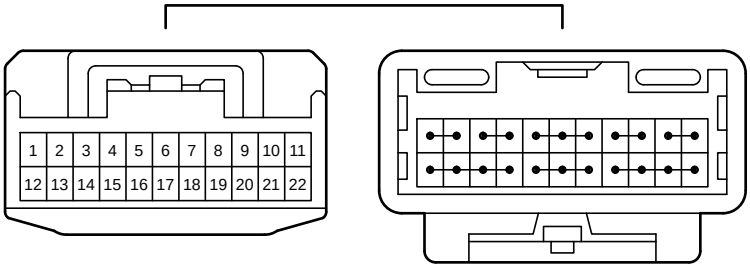


G 1
White

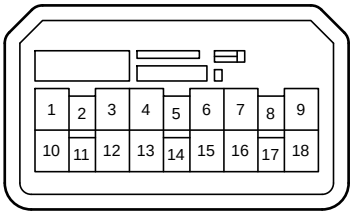


G 5
White

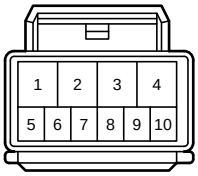


H 5
White

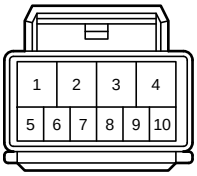


I 3
White

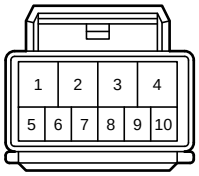


J 3
White

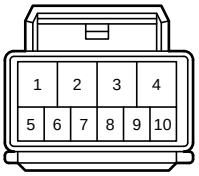


K 9
White

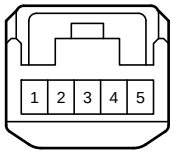


P 13
White

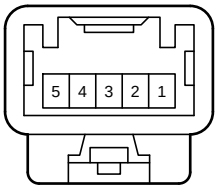


3A
White

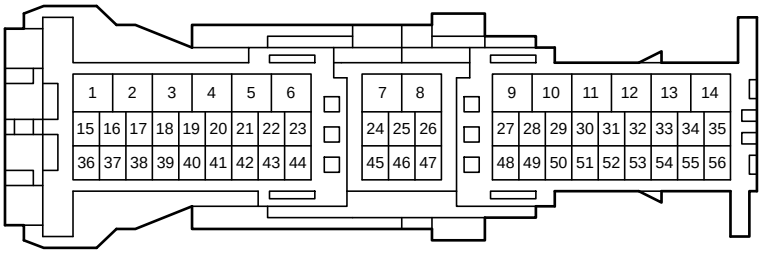



3B
White

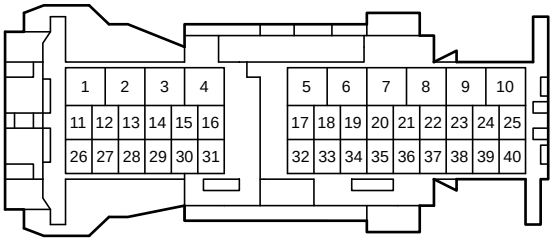



3C
White

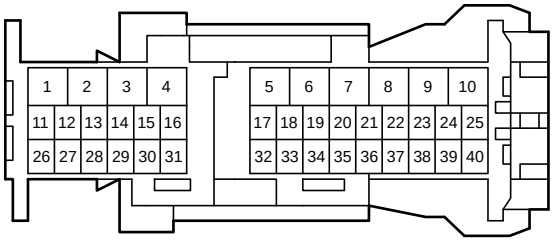


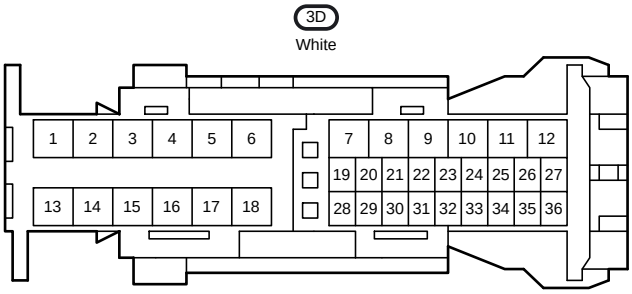

3D
White
1 2 3 4 5 6
7 8 9 10 11 12
19 20 21 22 23 24 25 26 27
13 14 15 16 17 18
28 29 30 31 32 33 34 35 36

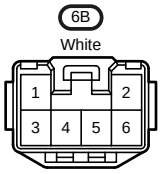
6B
White
1 2
3 4 5 6

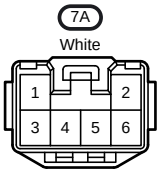

7A
White
1 2
3 4 5 6

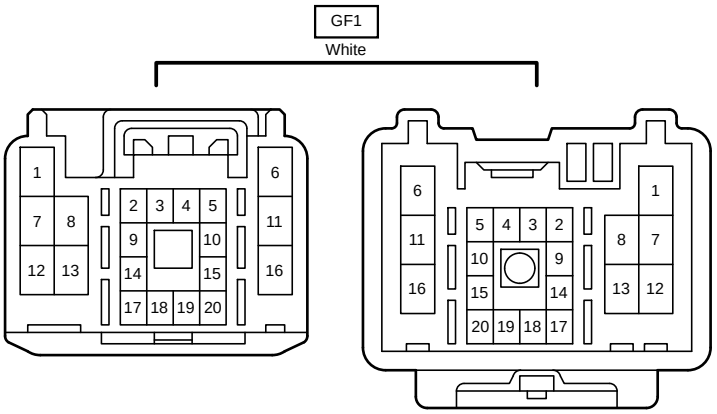
GF1
White
1 6
7 8 2 3 4 5 11
9 10 12 13
14 15 16
17 18 19 20
6 1
11 5 4 3 2 8 7
10 9 13 12
16 15 14
20 19 18 17

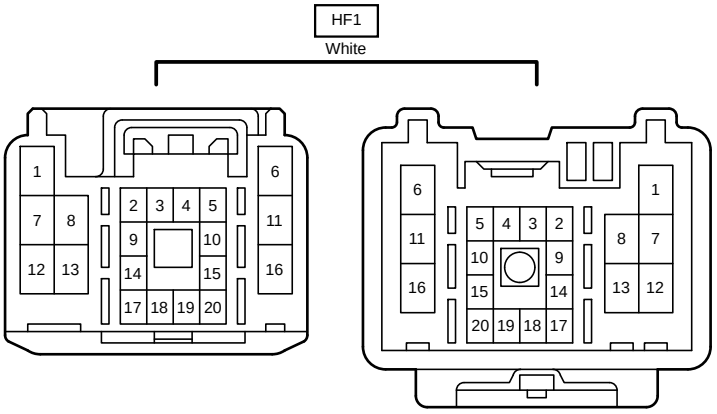

HF1
White
1 6
7 8 2 3 4 5 11
9 10 12 13
14 15 16
17 18 19 20
6 1
11 5 4 3 2 8 7
10 9 13 12
16 15 14
20 19 18 17

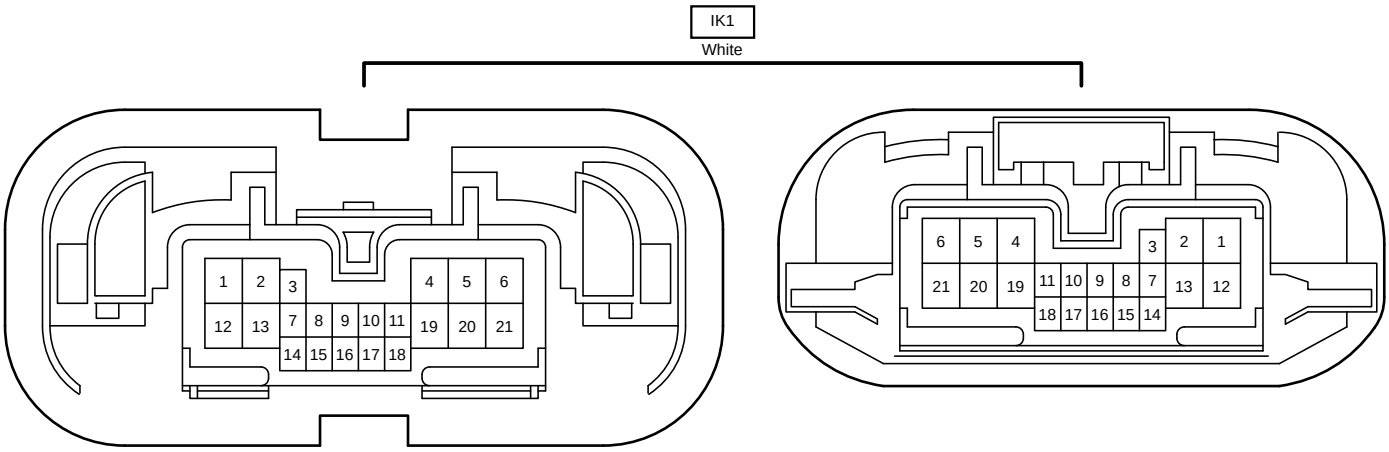
IK1
White
1 2 3 4 5 6
12 13 7 8 9 10 11 19 20 21
14 15 16 17 18
6 5 4 3 2 1
21 20 19 11 10 9 8 7 13 12
18 17 16 15 14


JK1
White

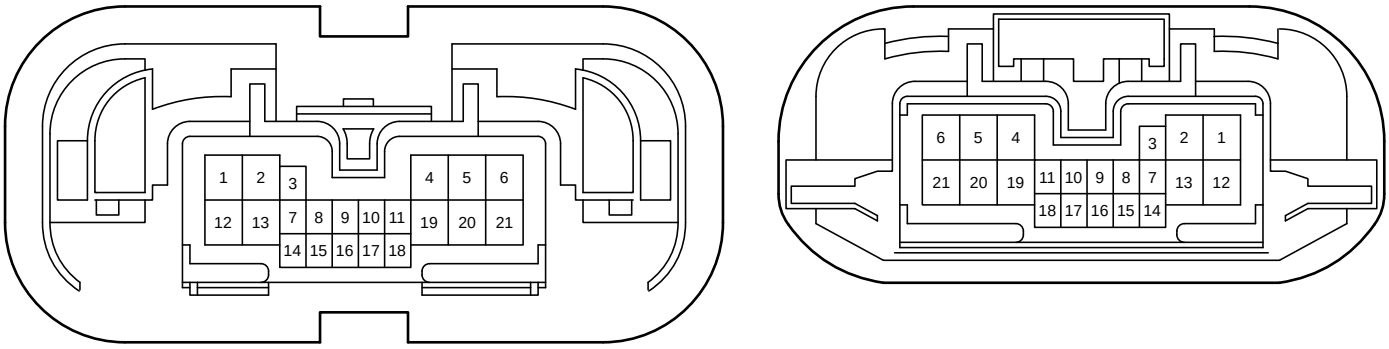

KF2
White

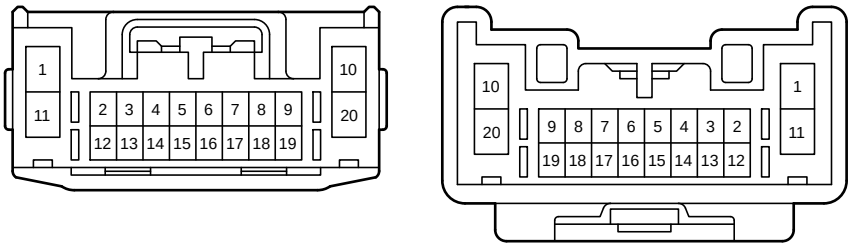

OK1
White

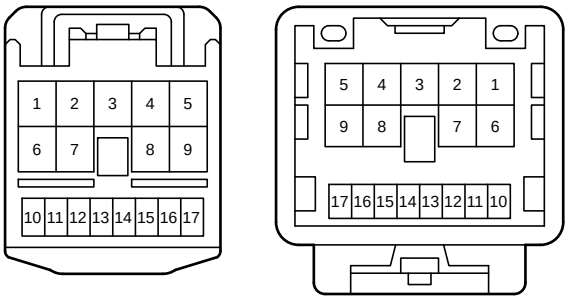

OP1
White

