





B84
ECM
(ME01)
(E01)
(E03)
BR
(*37)
BR
(*37)
W–B
(*37)
BR
(*38)
BR
(*38)
W–B
(*38)
(ME01)
(E01)
(E04)
B89
ECM
B2
A82
Headlight Leveling ECU Assembly
(E1)
A76
Headlight Unit LH
(E)
A87
Headlight Unit LH
(E)
A85
Headlight Unit LH
(E)
A2
Headlight Unit LH
(E)
A6
Headlight Unit LH
(E)
A94
Headlight Unit LH
(E)
A73
Side Turn Signal Light Assembly LH
(E)
A8
Headlight Unit LH
(E)
A80
Headlight Unit LH
(E)
(E)
A9
Fog Light Assembly RH
(E)
A10
Fog Light Assembly LH
(E)
A15
Windshield Wiper Motor Assembly
(E)
A22
Cooling Fan Resistor
(–)
FAN NO. 2 Relay
(E)
1
W–B
(*34)
W–B
(*34 *42)
W–B
(*34 *43)
W–B
(*43 *34)
W–B
(*35)
W–B
(*42)
W–B
(*43 *35)
W–B
(*43 *39)
W–B
(*43 *40)
W–B
(*34)
W–B
(*34)
W–B
(*43 *34)
W–B
(*35)
W–B
(*43 *35)
W–B
(*42)
W–B
(*34 *43)
W–B
(*35)
W–B
(*34 *42)
W–B
(*31)
W–B
(*30)
W–B
W–B(*31)
W–B
A3
(PGND)
A42
Power Steering ECU Assembly
(GND)
A92
Stop Light Switch Assembly
(GND)
A91
Stop Light Switch Assembly
(E)
A79
Headlight Unit RH
(E)
(E)
A72
Side Turn Signal Light Assembly RH
(E)
A84
Headlight Unit RH
(B)
A1
Headlight Unit RH
(E)
A93
Headlight Unit RH
(E)
A5
Headlight Unit RH
(E)
A86
Headlight Unit RH
(E)
A7
Headlight Unit RH
(E)
A75
Headlight Unit RH
A1
A5
A4


F4
DLC3
(SG)
SB
34
3A
13
3C
W–B
F5
Spiral with Sensor
Cable Sub–Assembly
(ECC)
BR
(∗26)
33
3A
22
BA1
BR
(Shielded)(∗37)
(Shielded)(∗37)
(Shielded)(∗38)
(Shielded)
(Shielded)
(Shielded)
BR
B84
ECM
(E1)
(E02)
W–B
(∗37)
BR
(∗37)
B1
W–B
(∗38)
(E1)
B89
ECM
BR
(∗38)
(E02)
W–B
(GND)
B13
Ignition
Coil No. 1
W–B
(GND)
B15
Ignition
Coil No. 2
W–B
(GND)
B17
Ignition
Coil No. 3
W–B
(GND)
B19
Ignition
Coil No. 4
∗ 3 : w/o VSC
∗ 4 : w/ VSC
∗25 : w/o ABS
∗26 : w/ Cruise Control
∗30 : Before Jul. 2014 Production
∗31 : From Jul. 2014 Production
∗34 : LED Type Headlight
∗35 : Halogen Type Headlight
∗37 : Before Sep. 2016 Production
∗38 : From Sep. 2016 Production
∗39 : w/ Pre–Crash Safety System
∗40 : w/o Pre–Crash Safety System
∗42 : Before Jan. 2017 Production
∗43 : From Jan. 2017 Production
W–B
(∗38)
(EC)
A83
ECM
A25
Brake Fluid Level
Warning Switch
(Brake Master
Cylinder Reservoir
Sub–Assembly)
(E)
W–B
W–B
(∗25)
6
BA1
W–B
(∗25)
(SE)
B85
Speedometer
Sensor
W–B
(∗37)
(EC)
A74
ECM
A54
Brake Actuator
Assembly
(GND1)
W–B
(∗4)
(GND2)
W–B
(∗4)
W–B
1
(–S)
ST Relay
A55
Brake Actuator
Assembly
(GND1)
W–B
(∗3)
(GND2)
W–B
(∗3)
W–B
10
1E
EFI MAIN
Relay
IG2 Relay
B77
With Pulley
Compressor
Assembly
(SOL–)
W–B
10
BA1
W–B
(∗30)
W–B(∗31)
W–B
A2
W–B

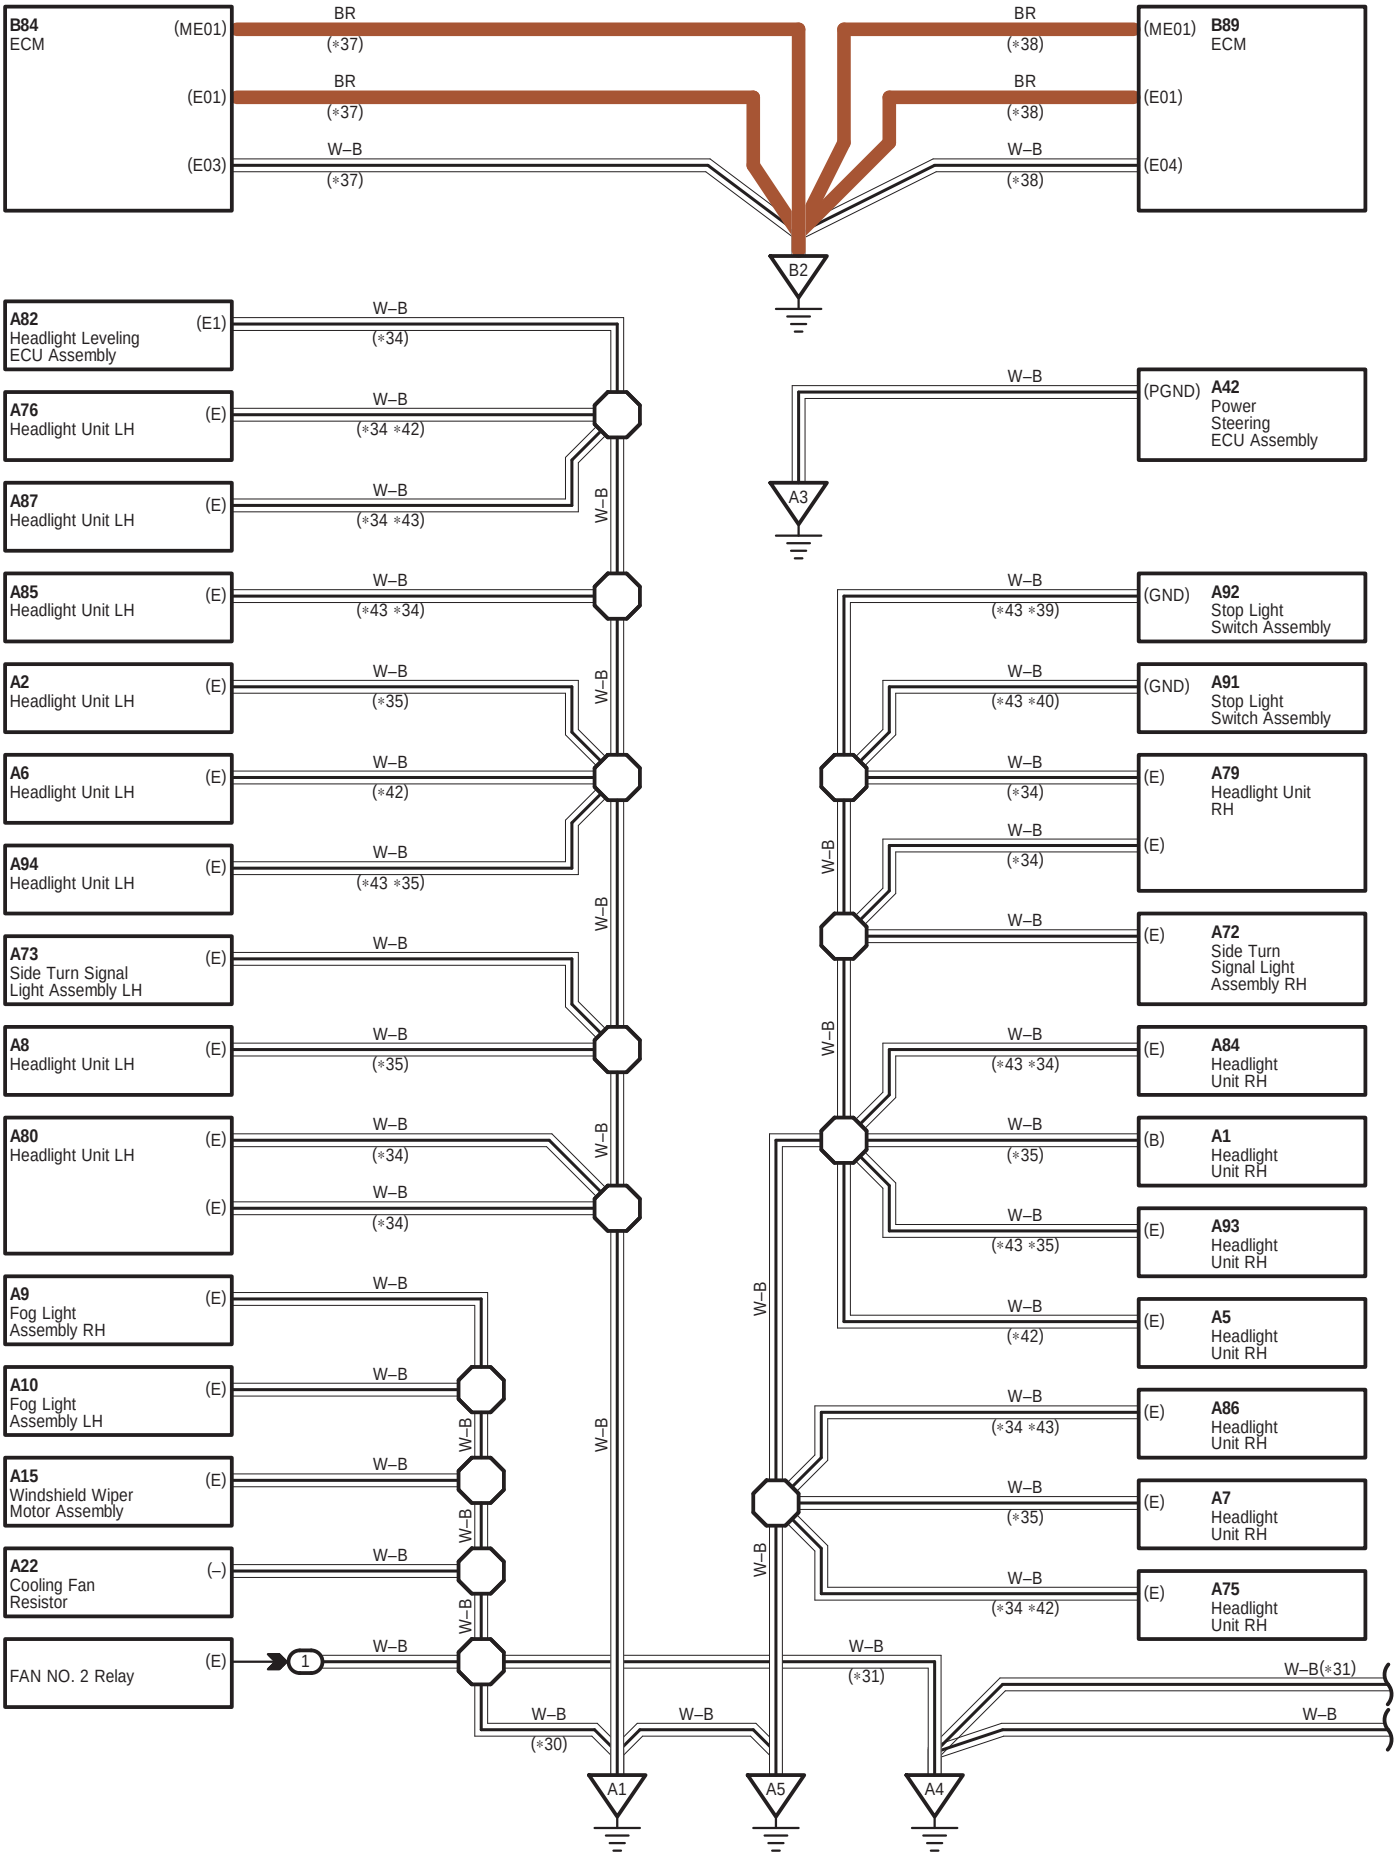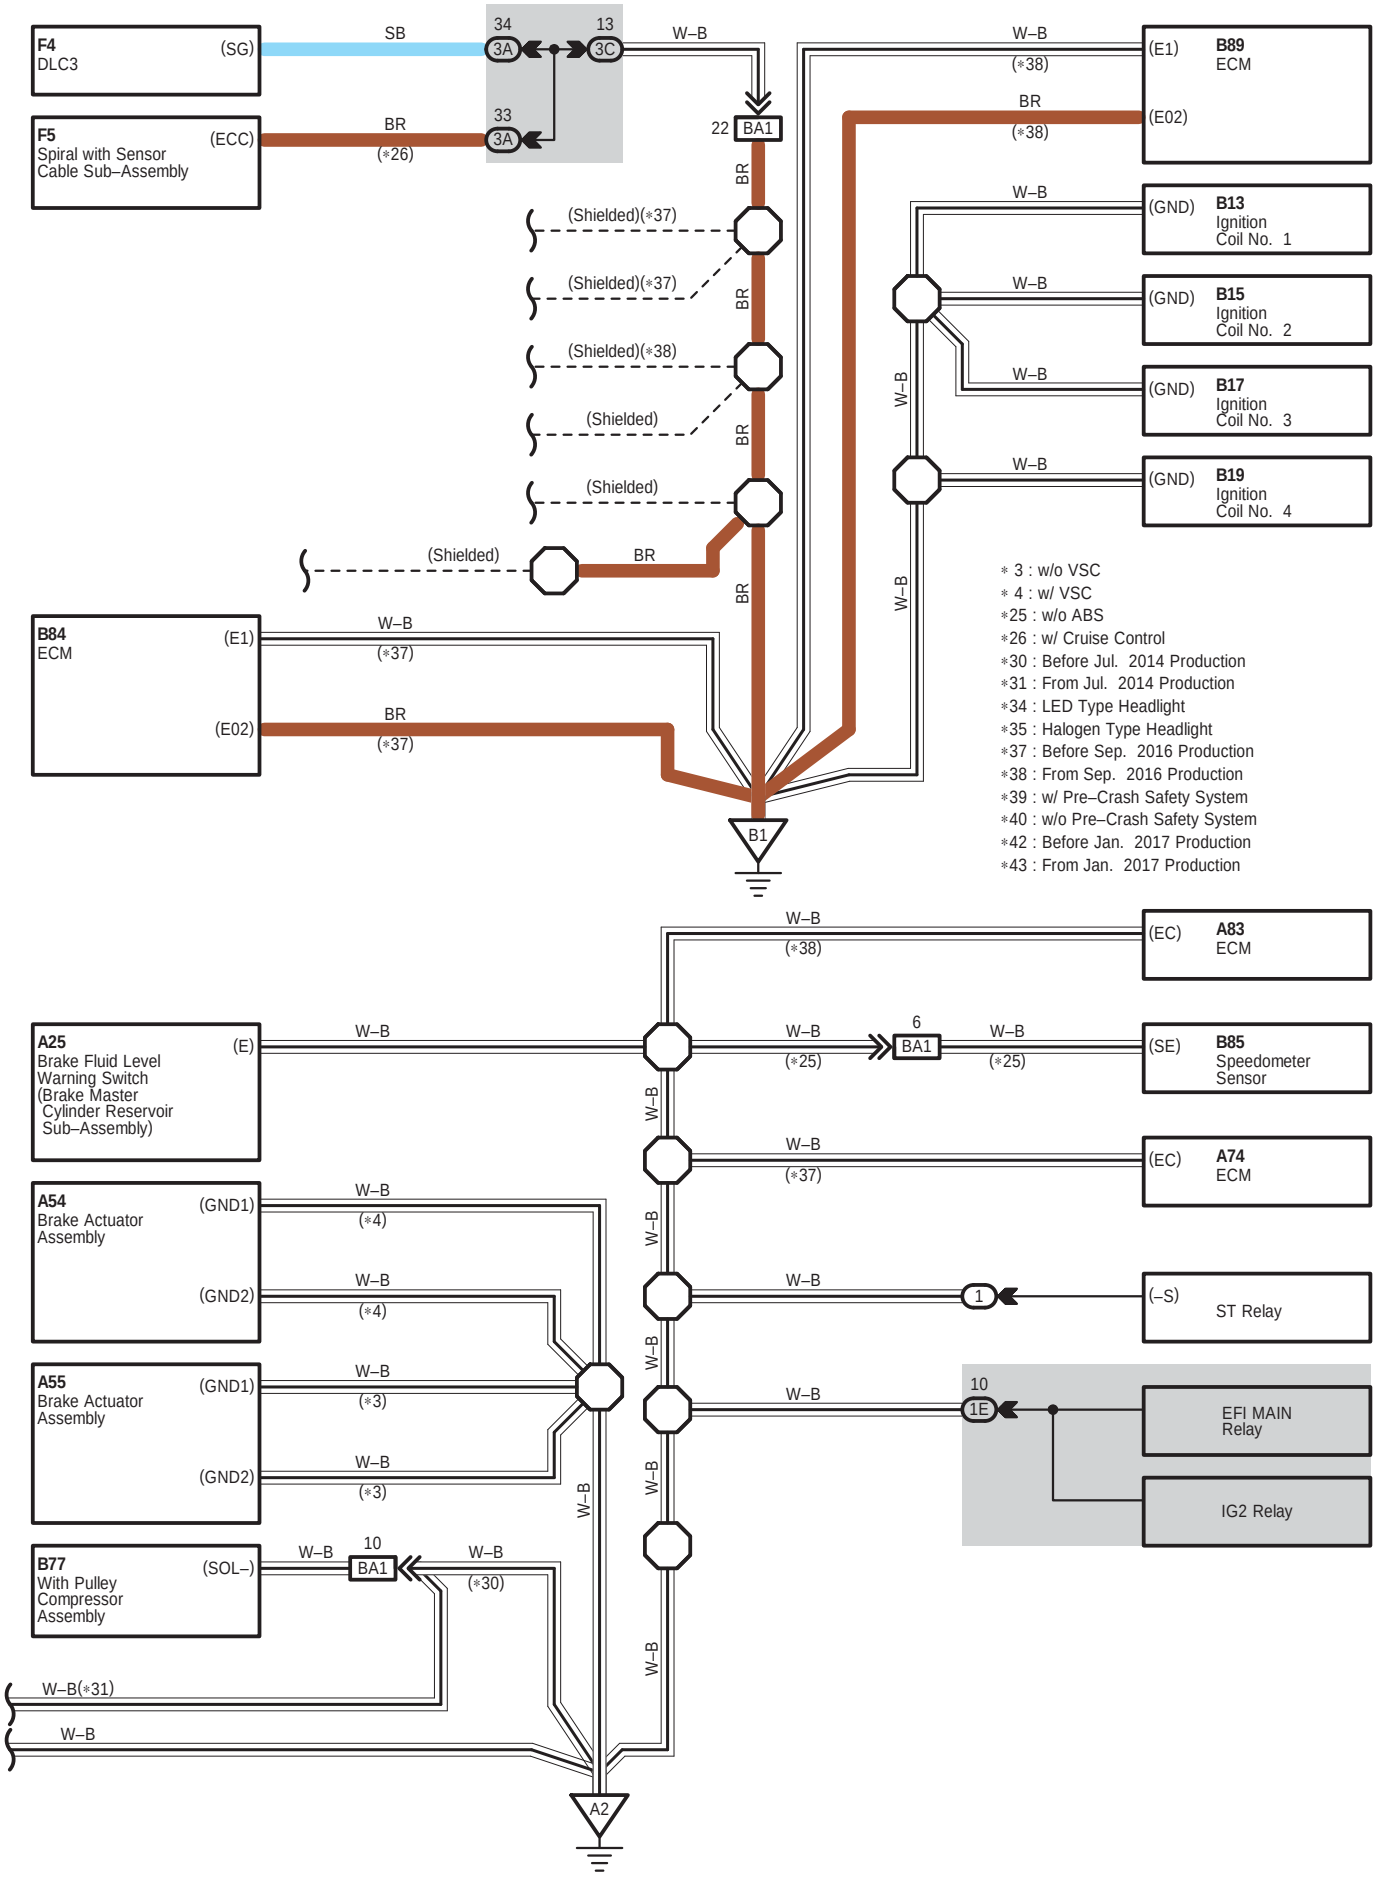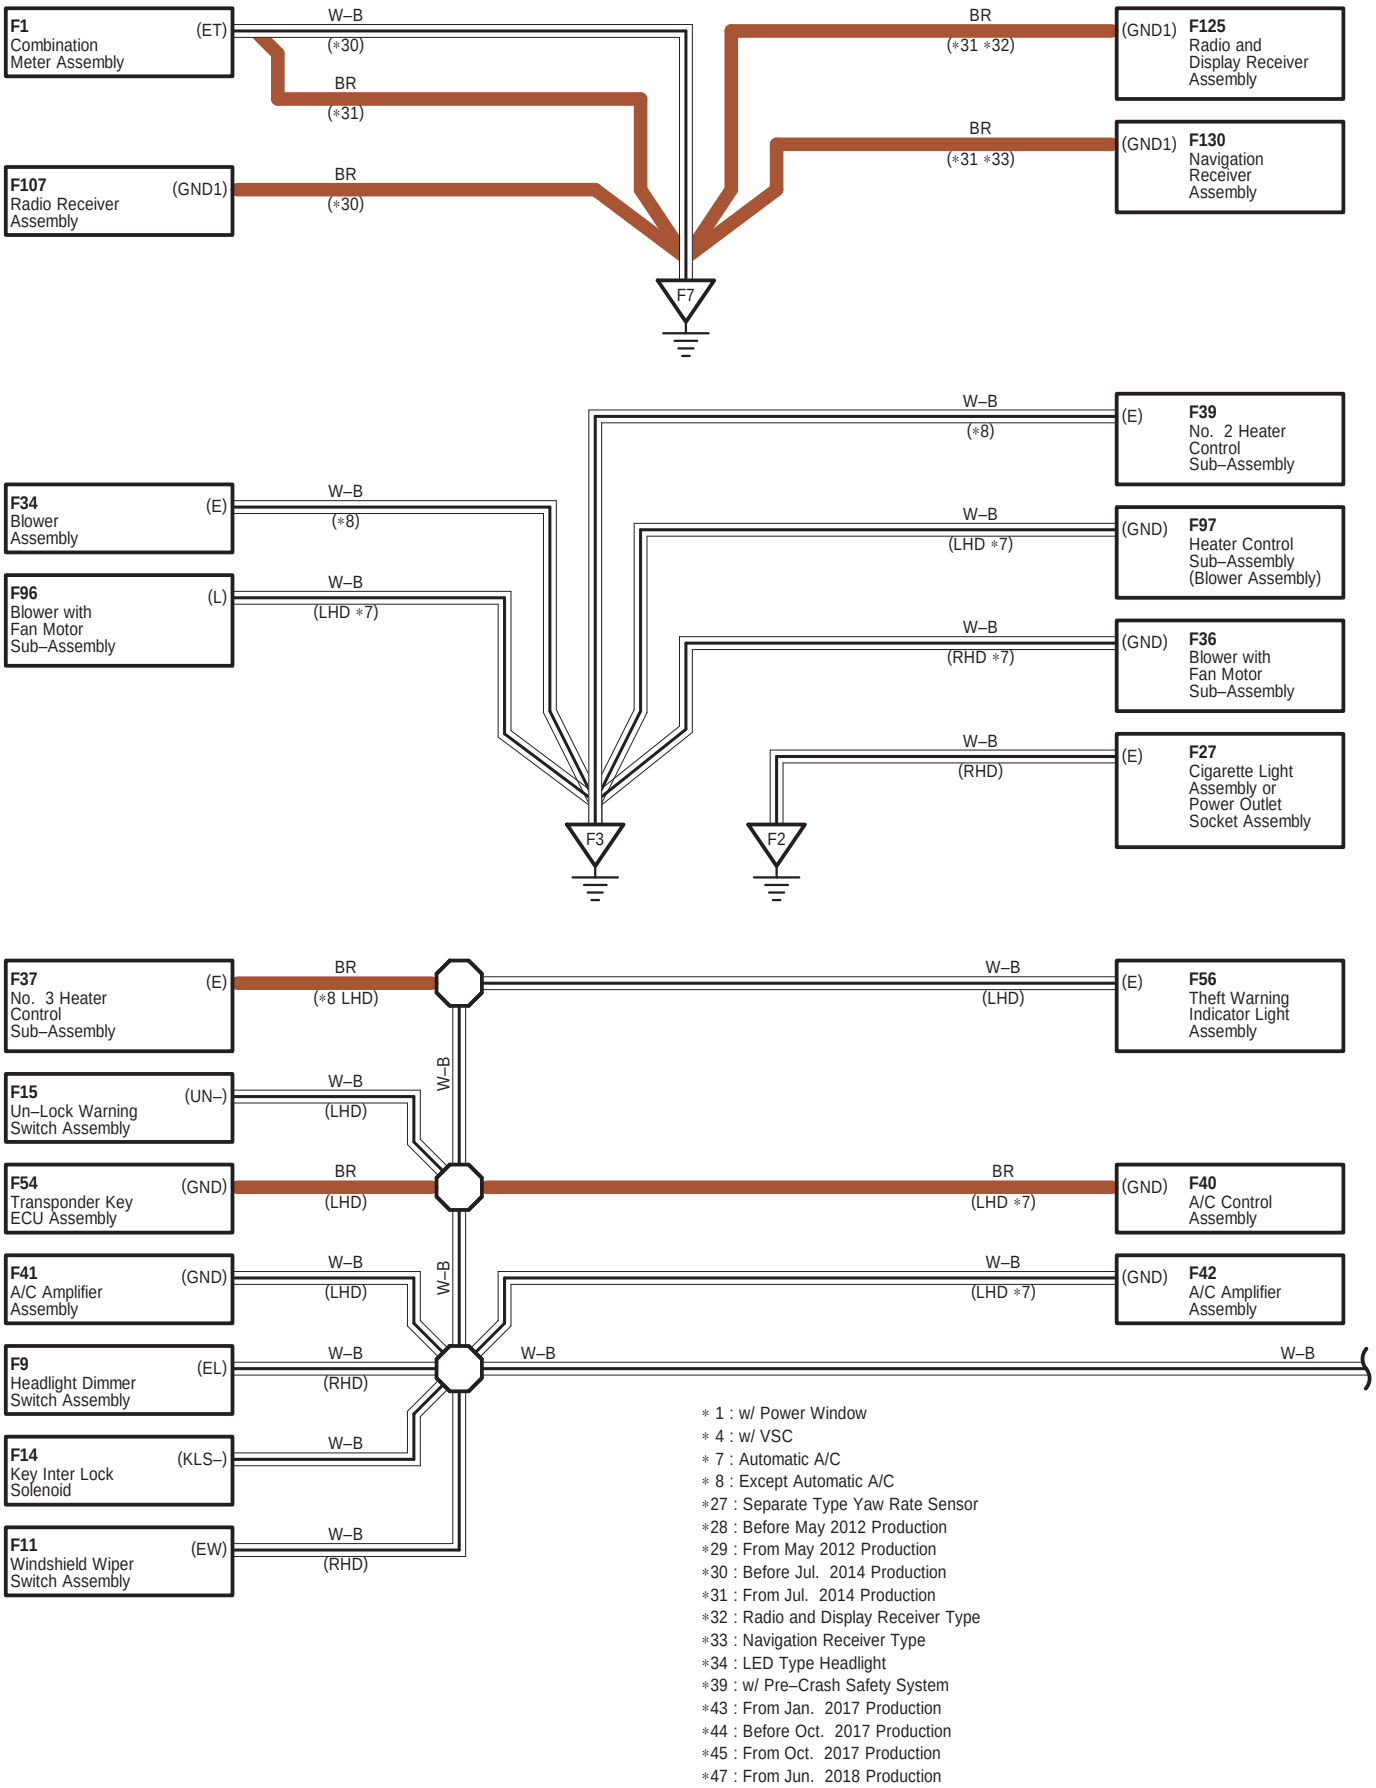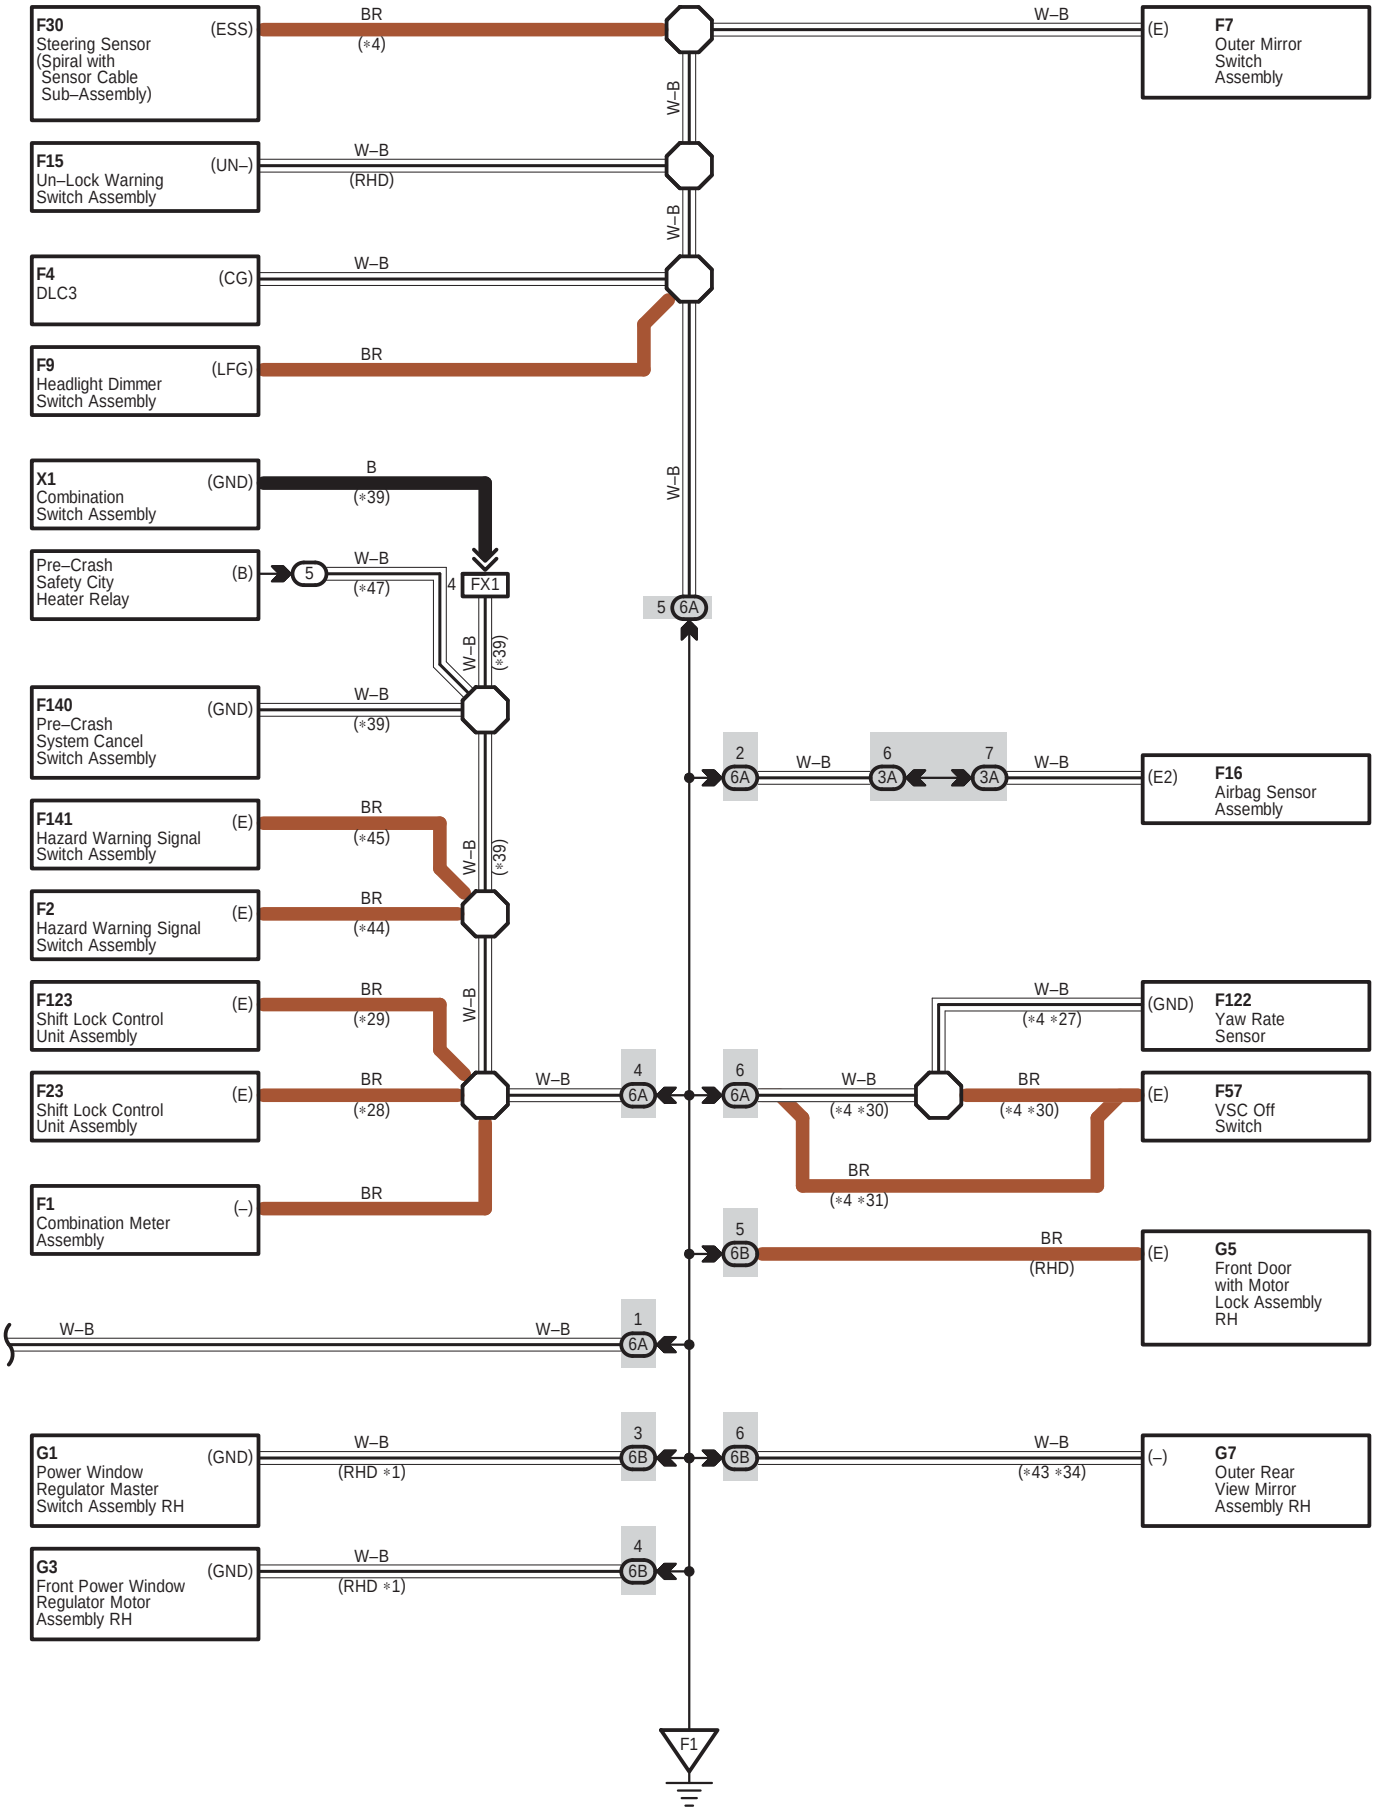



∗ 1 : w/ Power Window
∗ 4 : w/ VSC
∗ 7 : Automatic A/C
∗ 8 : Except Automatic A/C
∗27 : Separate Type Yaw Rate Sensor
∗28 : Before May 2012 Production
∗29 : From May 2012 Production
∗30 : Before Jul. 2014 Production
∗31 : From Jul. 2014 Production
∗32 : Radio and Display Receiver Type
∗33 : Navigation Receiver Type
∗34 : LED Type Headlight
∗39 : w/ Pre–Crash Safety System
∗43 : From Jan. 2017 Production
∗44 : Before Oct. 2017 Production
∗45 : From Oct. 2017 Production
∗47 : From Jun. 2018 Production


F30 Steering Sensor (Spiral with Sensor Cable Sub–Assembly) (ESS)
BR (*4)
W–B
(E) F7 Outer Mirror Switch Assembly
F15 Un–Lock Warning Switch Assembly (UN–)
W–B (RHD)
F4 DLC3 (CG)
W–B
F9 Headlight Dimmer Switch Assembly (LFG)
BR
X1 Combination Switch Assembly (GND)
B (*39)
Pre–Crash Safety City Heater Relay (B)
5
W–B (*47)
4 FX1
5 6A
F140 Pre–Crash System Cancel Switch Assembly (GND)
W–B (*39)
2 6A
6 3A
7 3A
(E2) F16 Airbag Sensor Assembly
F141 Hazard Warning Signal Switch Assembly (E)
BR (*45)
F2 Hazard Warning Signal Switch Assembly (E)
BR (*44)
F123 Shift Lock Control Unit Assembly (E)
BR (*29)
F23 Shift Lock Control Unit Assembly (E)
BR (*28)
F1 Combination Meter Assembly (–)
BR
4 6A
6 6A
(GND) F122 Yaw Rate Sensor
W–B (*4 *27)
(E) F57 VSC Off Switch
BR (*4 *30)
BR (*4 *31)
5 6B
(E) G5 Front Door with Motor Lock Assembly RH
BR (RHD)
1 6A
G1 Power Window Regulator Master Switch Assembly RH (GND)
W–B (RHD *1)
3 6B
6 6B
(–) G7 Outer Rear View Mirror Assembly RH
W–B (*43 *34)
G3 Front Power Window Regulator Motor Assembly RH (GND)
W–B (RHD *1)
4 6B
F1

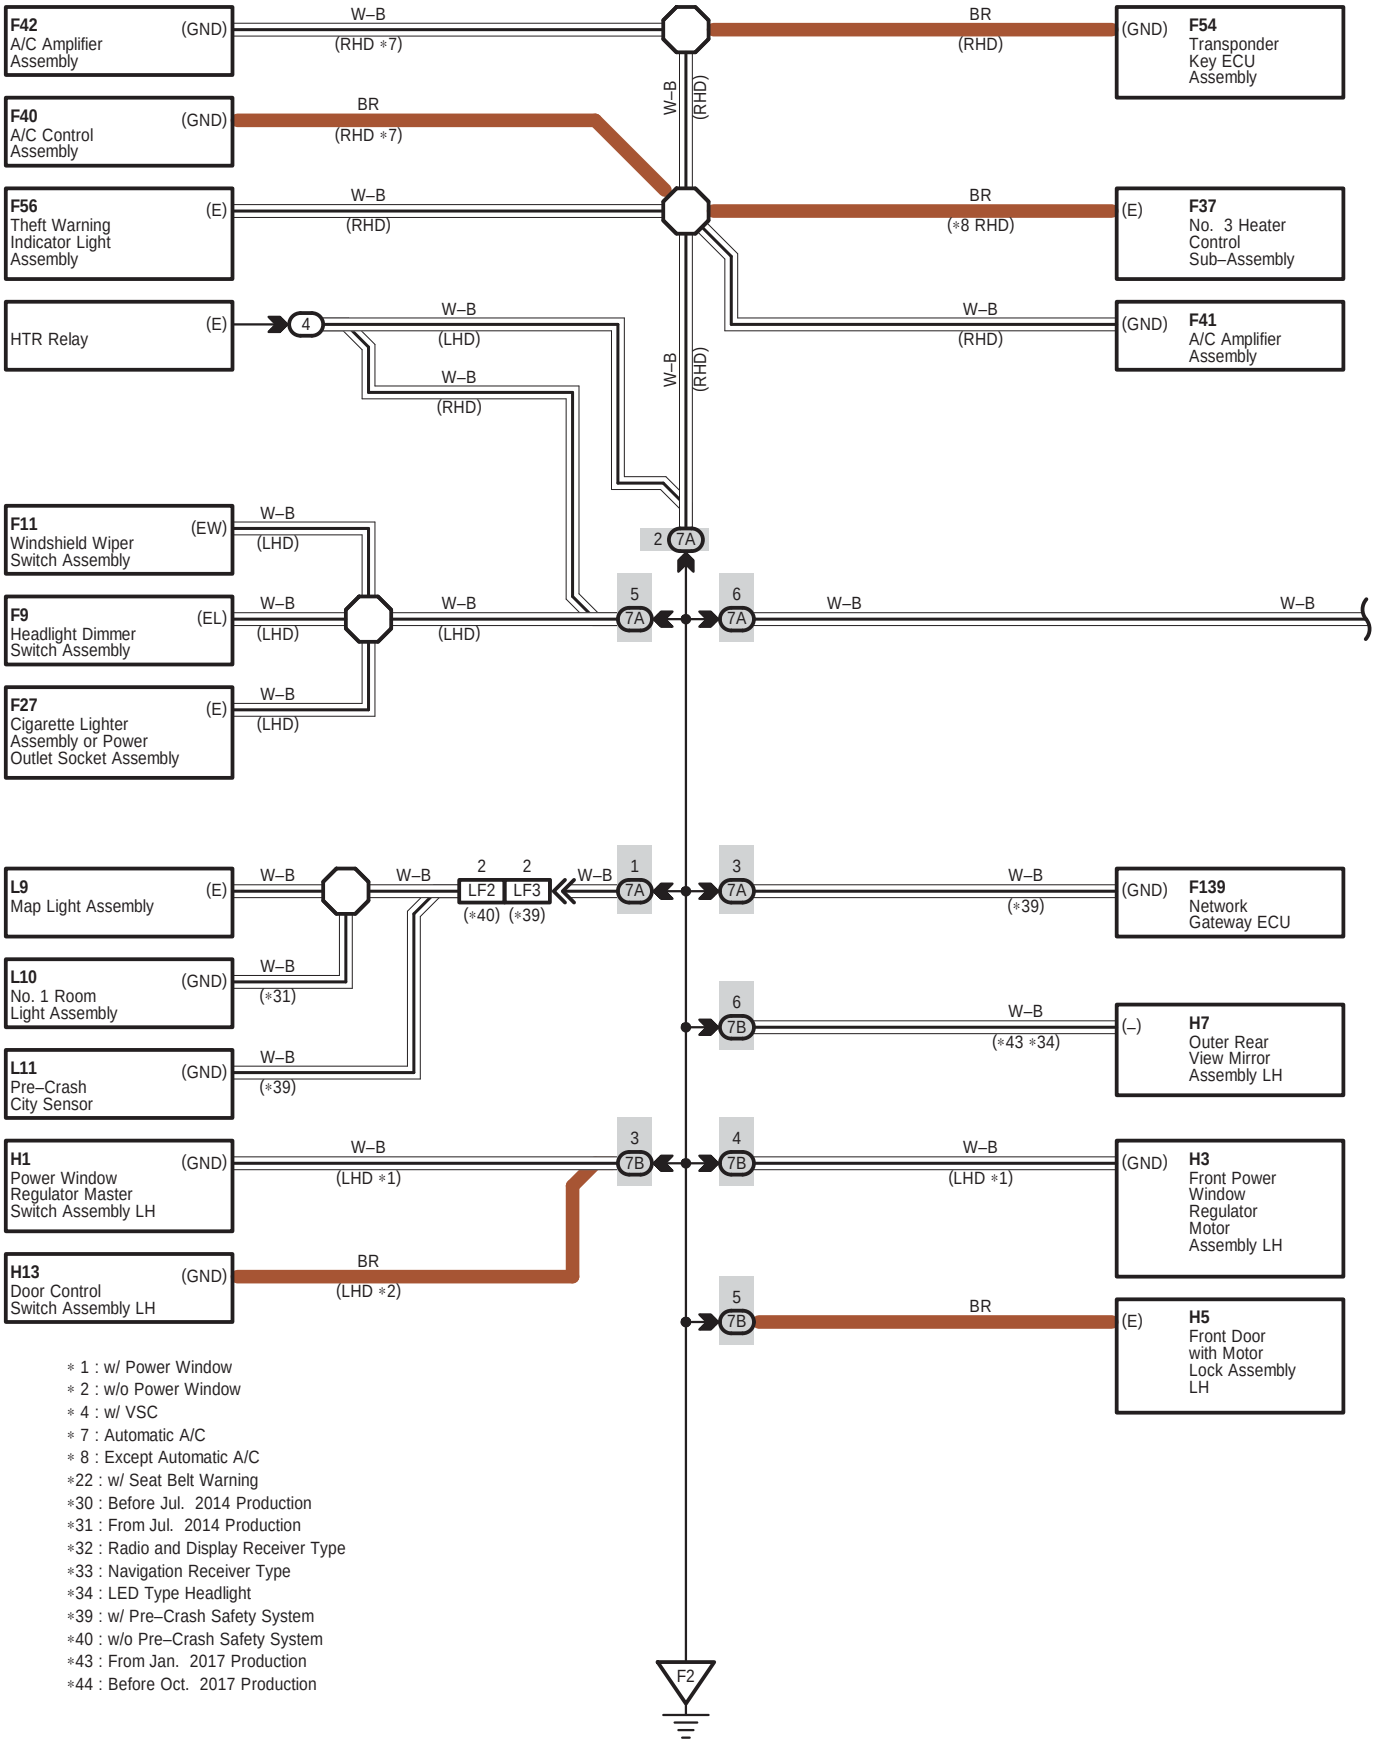


∗ 1 : w/ Power Window
∗ 2 : w/o Power Window
∗ 4 : w/ VSC
∗ 7 : Automatic A/C
∗ 8 : Except Automatic A/C
∗22 : w/ Seat Belt Warning
∗30 : Before Jul. 2014 Production
∗31 : From Jul. 2014 Production
∗32 : Radio and Display Receiver Type
∗33 : Navigation Receiver Type
∗34 : LED Type Headlight
∗39 : w/ Pre–Crash Safety System
∗40 : w/o Pre–Crash Safety System
∗43 : From Jan. 2017 Production
∗44 : Before Oct. 2017 Production

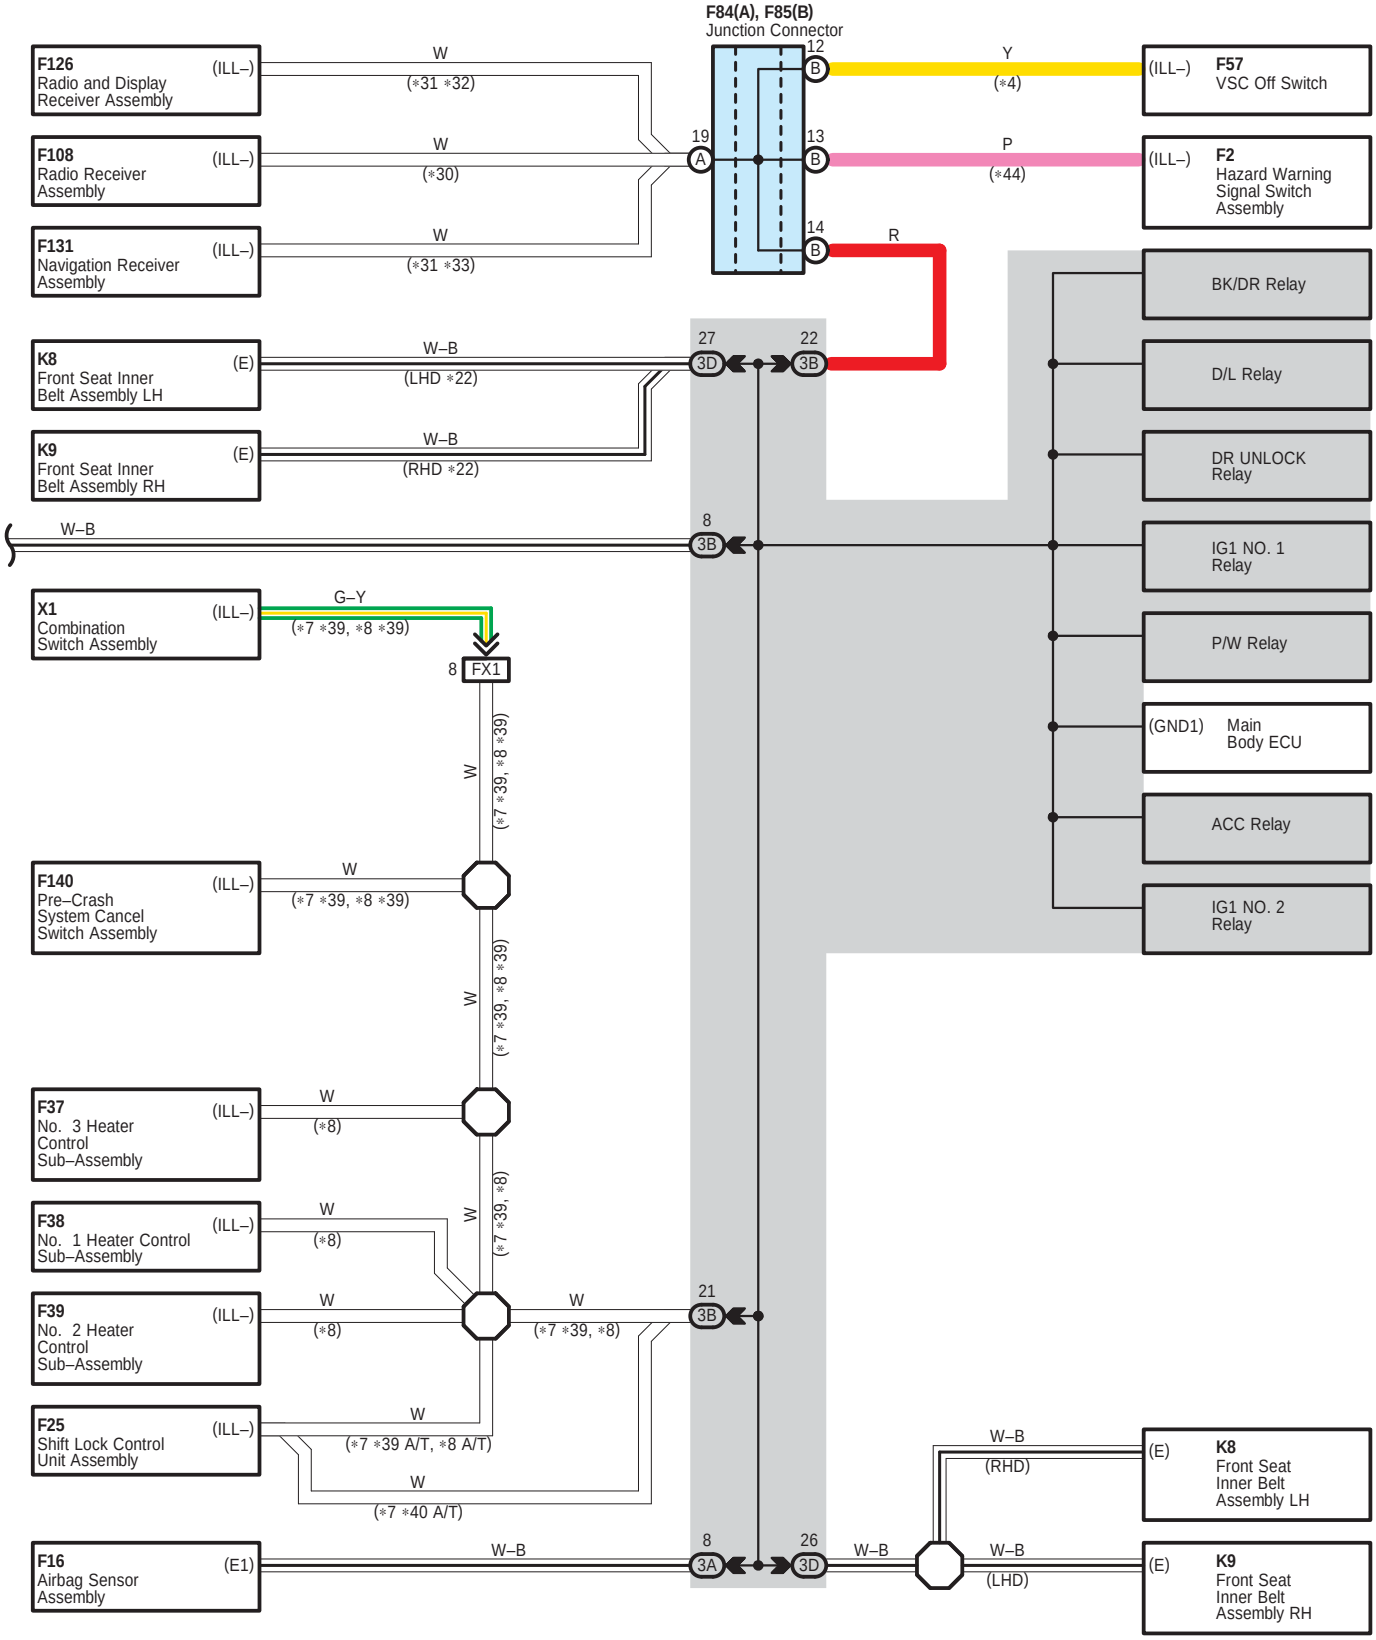

F84(A), F85(B)
Junction Connector
F126
Radio and Display
Receiver Assembly
(ILL–)
W
(∗31 ∗32)
F108
Radio Receiver
Assembly
(ILL–)
W
(∗30)
F131
Navigation Receiver
Assembly
(ILL–)
W
(∗31 ∗33)
19
A
12
B
13
B
14
B
Y
(∗4)
P
(∗44)
R
(ILL–)
F57
VSC Off Switch
(ILL–)
F2
Hazard Warning
Signal Switch
Assembly
BK/DR Relay
D/L Relay
DR UNLOCK
Relay
IG1 NO. 1
Relay
P/W Relay
(GND1)
Main
Body ECU
ACC Relay
IG1 NO. 2
Relay
K8
Front Seat Inner
Belt Assembly LH
(E)
W–B
(LHD ∗22)
K9
Front Seat Inner
Belt Assembly RH
(E)
W–B
(RHD ∗22)
27
3D
22
3B
W–B
8
3B
X1
Combination
Switch Assembly
(ILL–)
G–Y
(∗7 ∗39, ∗8 ∗39)
8
FX1
W
(∗7 ∗39, ∗8 ∗39)
F140
Pre–Crash
System Cancel
Switch Assembly
(ILL–)
W
(∗7 ∗39, ∗8 ∗39)
W
(∗7 ∗39, ∗8 ∗39)
F37
No. 3 Heater
Control
Sub–Assembly
(ILL–)
W
(∗8)
F38
No. 1 Heater Control
Sub–Assembly
(ILL–)
W
(∗8)
W
(∗7 ∗39, ∗8)
F39
No. 2 Heater
Control
Sub–Assembly
(ILL–)
W
(∗8)
W
(∗7 ∗39, ∗8)
21
3B
F25
Shift Lock Control
Unit Assembly
(ILL–)
W
(∗7 ∗39 A/T, ∗8 A/T)
W
(∗7 ∗40 A/T)
W–B
(RHD)
(E)
K8
Front Seat
Inner Belt
Assembly LH
F16
Airbag Sensor
Assembly
(E1)
W–B
8
3A
26
3D
W–B
W–B
(LHD)
(E)
K9
Front Seat
Inner Belt
Assembly RH

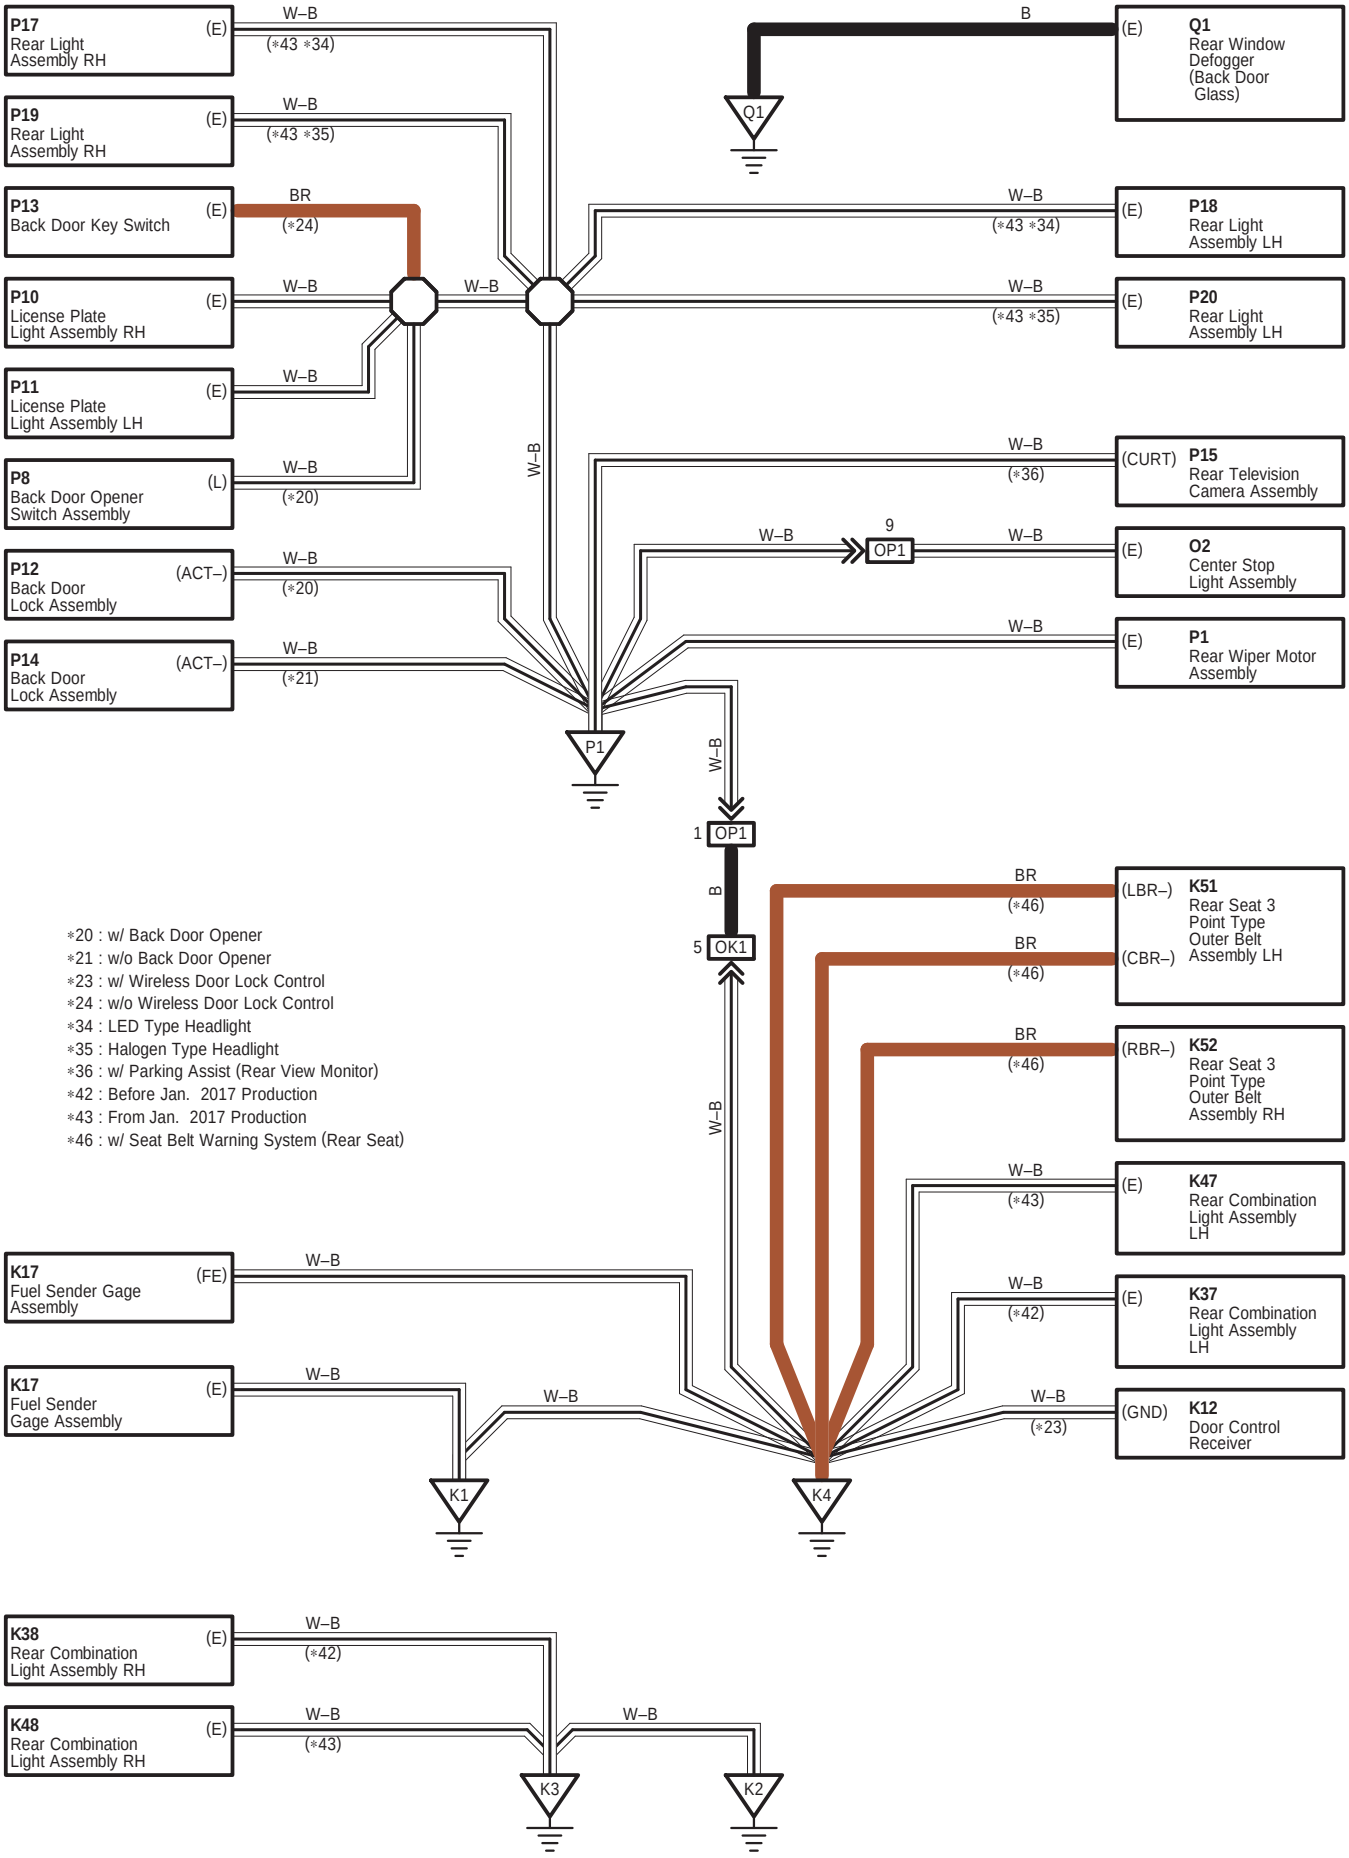
P17 Rear Light Assembly RH (E) W–B (∗43 ∗34)
P19 Rear Light Assembly RH (E) W–B (∗43 ∗35)
P13 Back Door Key Switch (E) BR (∗24)
P10 License Plate Light Assembly RH (E) W–B
P11 License Plate Light Assembly LH (E) W–B
P8 Back Door Opener Switch Assembly (L) W–B (∗20)
P12 Back Door Lock Assembly (ACT–) W–B (∗20)
P14 Back Door Lock Assembly (ACT–) W–B (∗21)
W–B
P1
B
Q1
(E) Q1 Rear Window Defogger (Back Door Glass)
W–B (∗43 ∗34) (E) P18 Rear Light Assembly LH
W–B (∗43 ∗35) (E) P20 Rear Light Assembly LH
W–B (∗36) (CURT) P15 Rear Television Camera Assembly
W–B 9 OP1 W–B (E) O2 Center Stop Light Assembly
W–B (E) P1 Rear Wiper Motor Assembly
1 OP1
B
5 OK1
BR (∗46) (LBR–) K51 Rear Seat 3 Point Type Outer Belt Assembly LH
BR (∗46) (CBR–)
BR (∗46) (RBR–) K52 Rear Seat 3 Point Type Outer Belt Assembly RH
W–B (∗43) (E) K47 Rear Combination Light Assembly LH
W–B (∗42) (E) K37 Rear Combination Light Assembly LH
W–B (∗23) (GND) K12 Door Control Receiver
∗20 : w/ Back Door Opener
∗21 : w/o Back Door Opener
∗23 : w/ Wireless Door Lock Control
∗24 : w/o Wireless Door Lock Control
∗34 : LED Type Headlight
∗35 : Halogen Type Headlight
∗36 : w/ Parking Assist (Rear View Monitor)
∗42 : Before Jan. 2017 Production
∗43 : From Jan. 2017 Production
∗46 : w/ Seat Belt Warning System (Rear Seat)
K17 Fuel Sender Gage Assembly (FE) W–B
K17 Fuel Sender Gage Assembly (E) W–B
K1
K4
K38 Rear Combination Light Assembly RH (E) W–B (∗42)
K48 Rear Combination Light Assembly RH (E) W–B (∗43)
K3
K2


F 84
Black

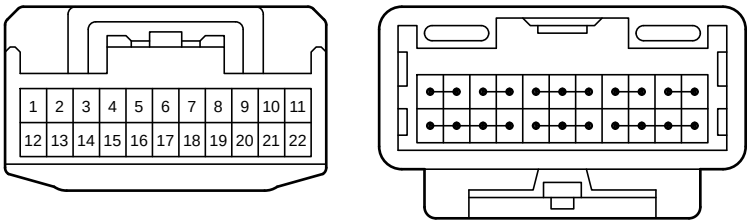


F 85
Black

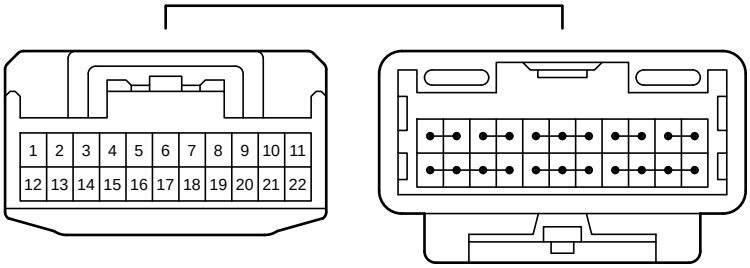


1E
White




3A
White

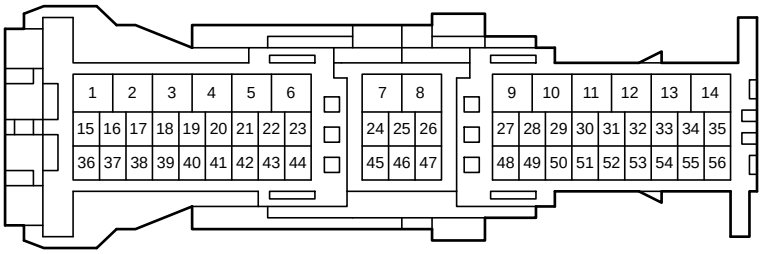


3B
White

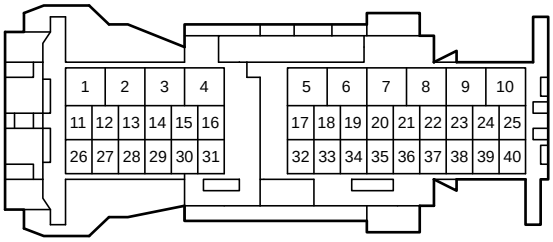


3C
White

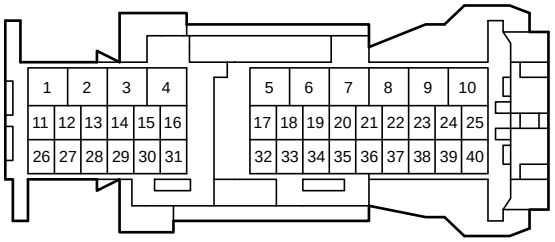


3D
White

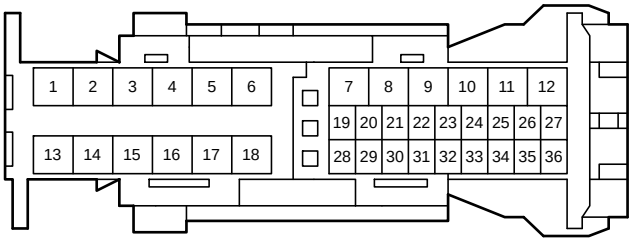


6A
White

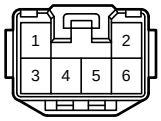


6B
White

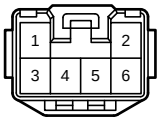


7A
White

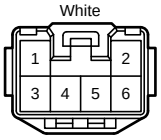


7B
White

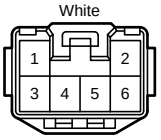


BA1
White

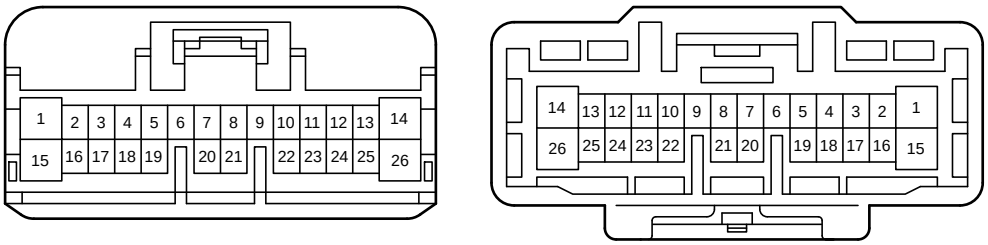


FX1
White

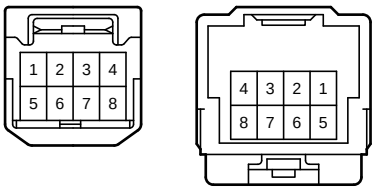


LF2
White

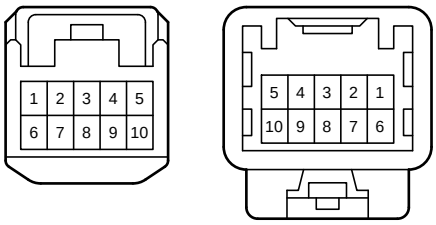


LF3
White

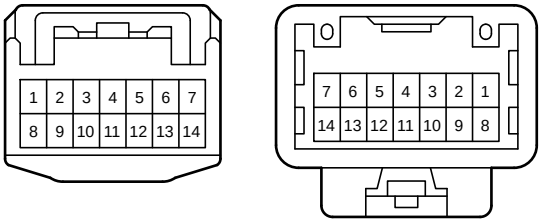

OK1
White

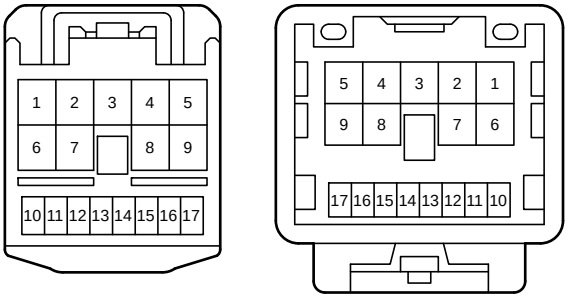

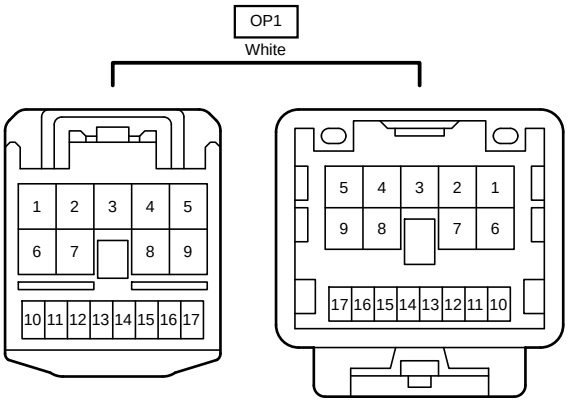
OP1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10