





(IG)
10A
GAUGE
14 3C
SB
(M/T *3, A/T)
25 BA1
B
(M/T *3)
B
(A/T)
B86
Back–Up Light
Switch Assembly
2
1
R
(M/T *3)
2 B
RB
RL
R
1 B
B88(B)
Park/Neutral Position
Switch Assembly
R
(A/T)
(IG)
7. 5A
A/C
51 3A
V
(*4)
V
(*4)
4 LF3
LG
(*4)
1
R
IG
W–B
GND
2
L12
Pre–Crash
Safety City
Heater
GR
(*4)
(IG)
5A
ECU–IG
NO. 1
54 3A
Y
5 A
5 B
F84(A), F85(B)
Junction Connector
L11
Pre–Crash City Sensor
IG1
SPR
GND
PCSW
7
G
7 LF3
G
1
GR
(*4)
GR
(*3)
5 LF3
GR
(*3)
42 3A
33 3C
R
(*3)
10
W–B
2 LF3
W–B
9
V
13 LF3
V
4
ECU
GND
1
F140
Pre–Crash System
Cancel Switch Assembly
W–B
GR
(*4)
R(A/T)
14 LF3
P
(*4)
R(A/T)
R
(A/T *3)
19 BA1
R
(*3)
W–B
(*4)
W–B
P
(*4)
1 7A
4 6A
F2
F1


＊1 : Before Oct. 2017 Production
＊2 : From Oct. 2017 Production
＊3 : Before Jun. 2018 Production
＊4 : From Jun. 2018 Production
＊5 : From Oct. 2017 Production until Jun. 2018 Production
L11
Pre–Crash City Sensor
CA1N
CA1P
BUZ
(IG)
10A GAUGE
49 3A
A36
Accelerator Pedal Sensor Assembly
VCPA
VPA
EPA
VCP2
VPA2
EPA2
A83(H), B89(I)
ECM
R
GE01
M–
M+
VTA2
VTA1
VCTA
ETA
LF3
BZ
IG1
F138
Pre–Crash City Buzzer
(Shielded)
B29
Throttle With Motor Body Assembly
M–
M+
VTA2
VTA
VC
E2
R(A/T)
W–B
Pre–Crash Safety City Heater Relay
F143
Diode (No. 2 Pre–Crash Safety City Heater)
F142
Diode (No. 1 Pre–Crash Safety City Heater)
LG
W



Speed Sensors
R
G
P
V
Y
B
LG
L
19 A FL+
18 A FL–
7 A FR+
6 A FR–
5 A RL+
4 A RL–
17 A RR+
16 A RR–
CANH
CANL
CSW
STPO
STP
STP2
25 A
14 A
30 A
31 A
2 A
22 A
A54(A)
Brake Actuator Assembly
A83(H), B89(I)
ECM
CANH
CANL
13 H
26 H
R
LG
V
G
W
B
13 AF4
F16(A)
Airbag Sensor
Assembly
Yaw Rate
Sensor
CANL
CANH
22 A
13 A
F30
Steering Sensor
(Spiral with Sensor
Cable Sub–Assembly)
CANL
CANH
3
4
L
W
9 A
20 A
10 A
21 A
A61(A), F82(B)
Junction Connector
6
F57
VSC Off Switch
15
4
12
1
F83
Junction Connector
2 B
13 B
12 B
1 B
4 B
15 B
3
21
10
18
7
LG
W
R
SB
BR
G
13 A
14 A
CANL
CANH
F76(A)
Main Body ECU
6 6A
F1


(BAT)
7. 5A
STOP
12 3C
B
7 D
B
L
OUT
ACC
GND
3 D
1 D
4 D
2 D
A92(D)
Stop Light Switch
Assembly
G
P
V
W–B
7
1
A62
Junction
Connector
10
A64
Junction
Connector
2
R
LG
V
(BAT)
5A
ECU–B
NO. 2
2
1
LG
36 3C
14 3B
L
40 A
(IG)
7. 5A
MET
2
6 1D
LG
1 AF3
P
39 A
B
IG+
5V IC
PCS
PCS OFF
LED Driver
CPU
CAN Controller
5V+B
CAN I/F
I/F
Buzzer
CANH
CANL
ET
32 A
31 A
21 A
F1(A)
Combination Meter Assembly
G
W
BR
G
W
A5
F7


A 36
Black

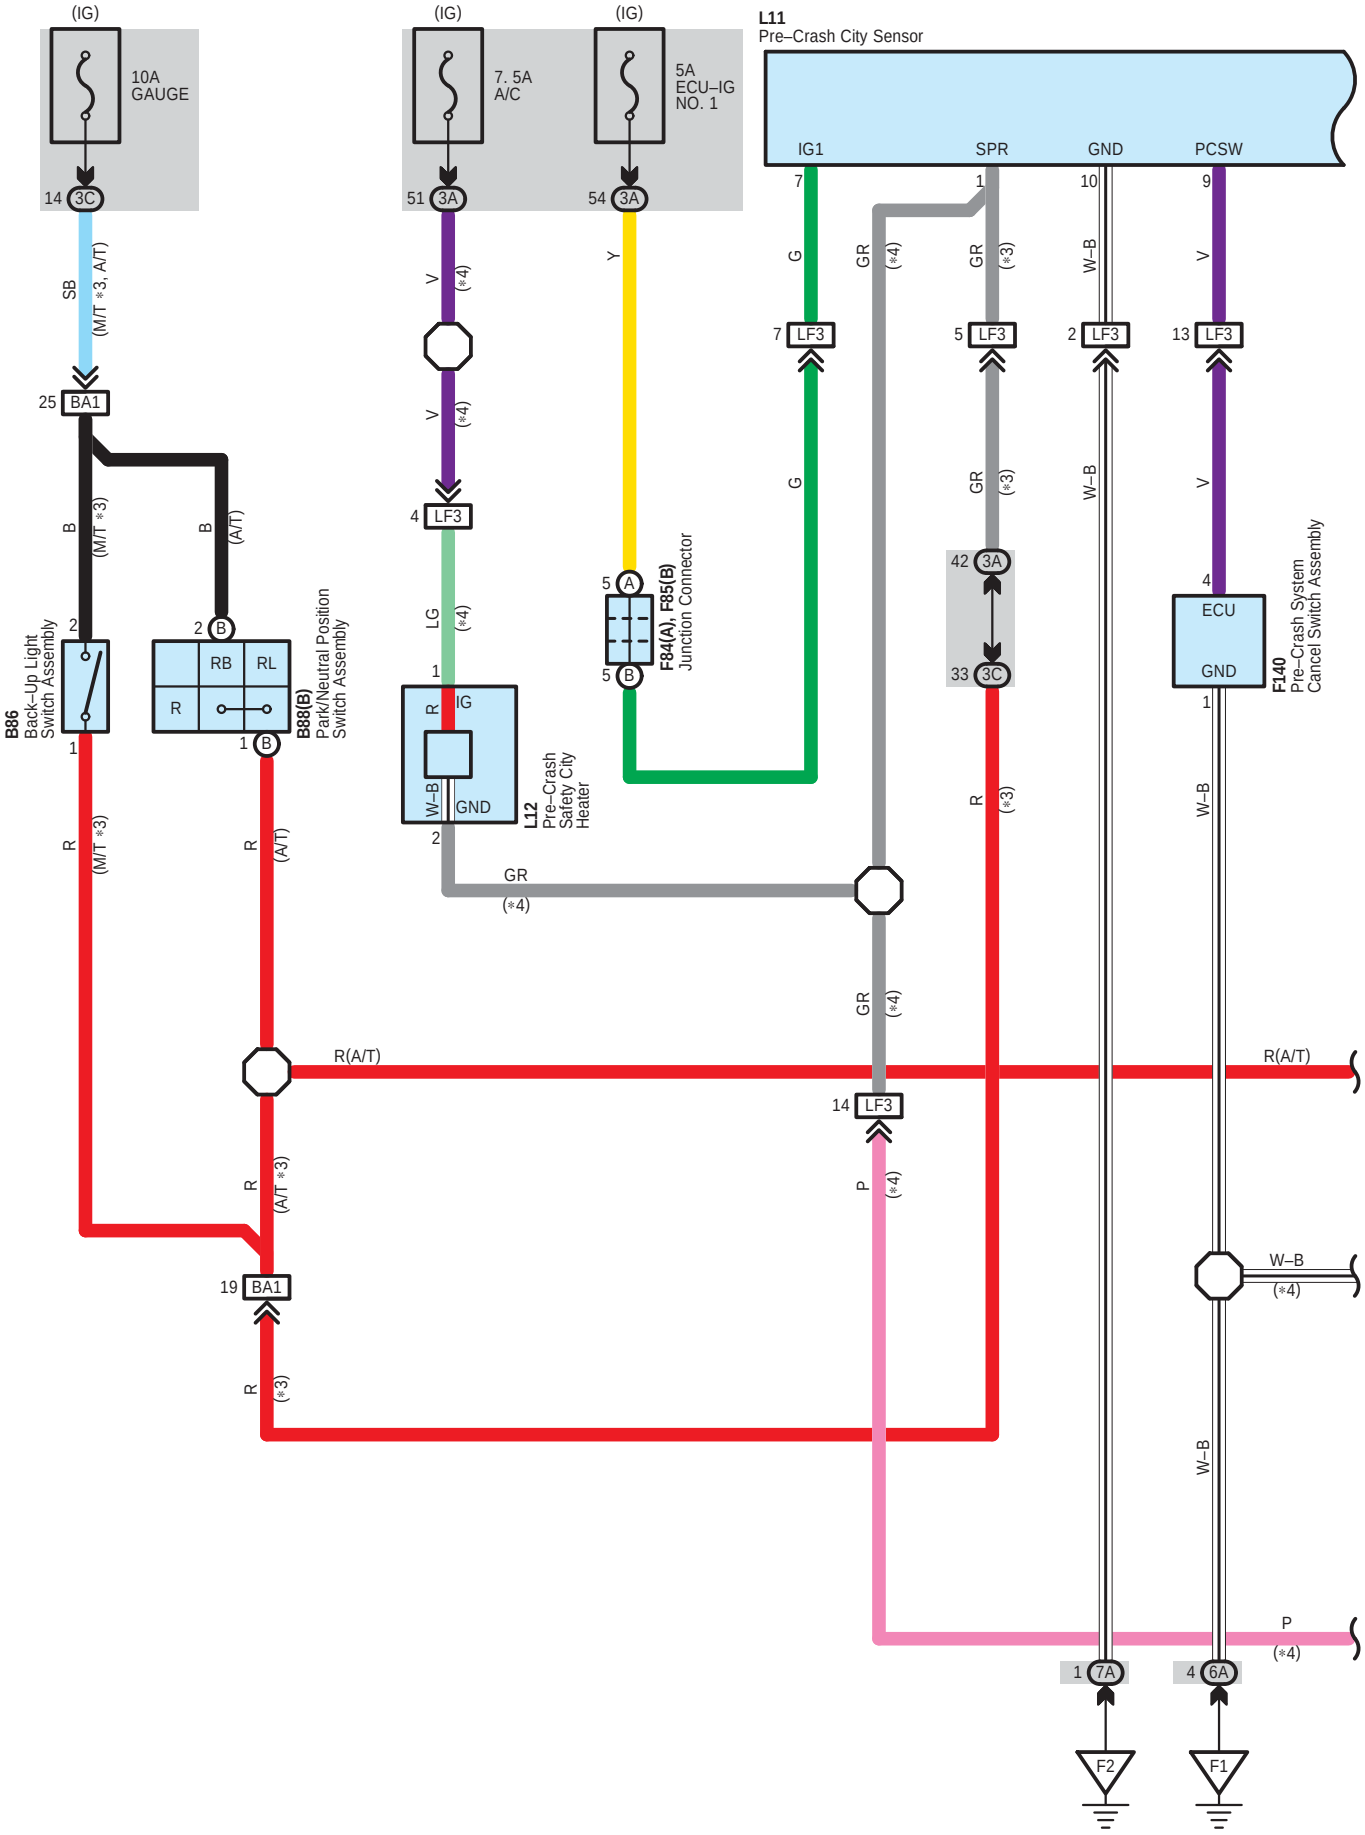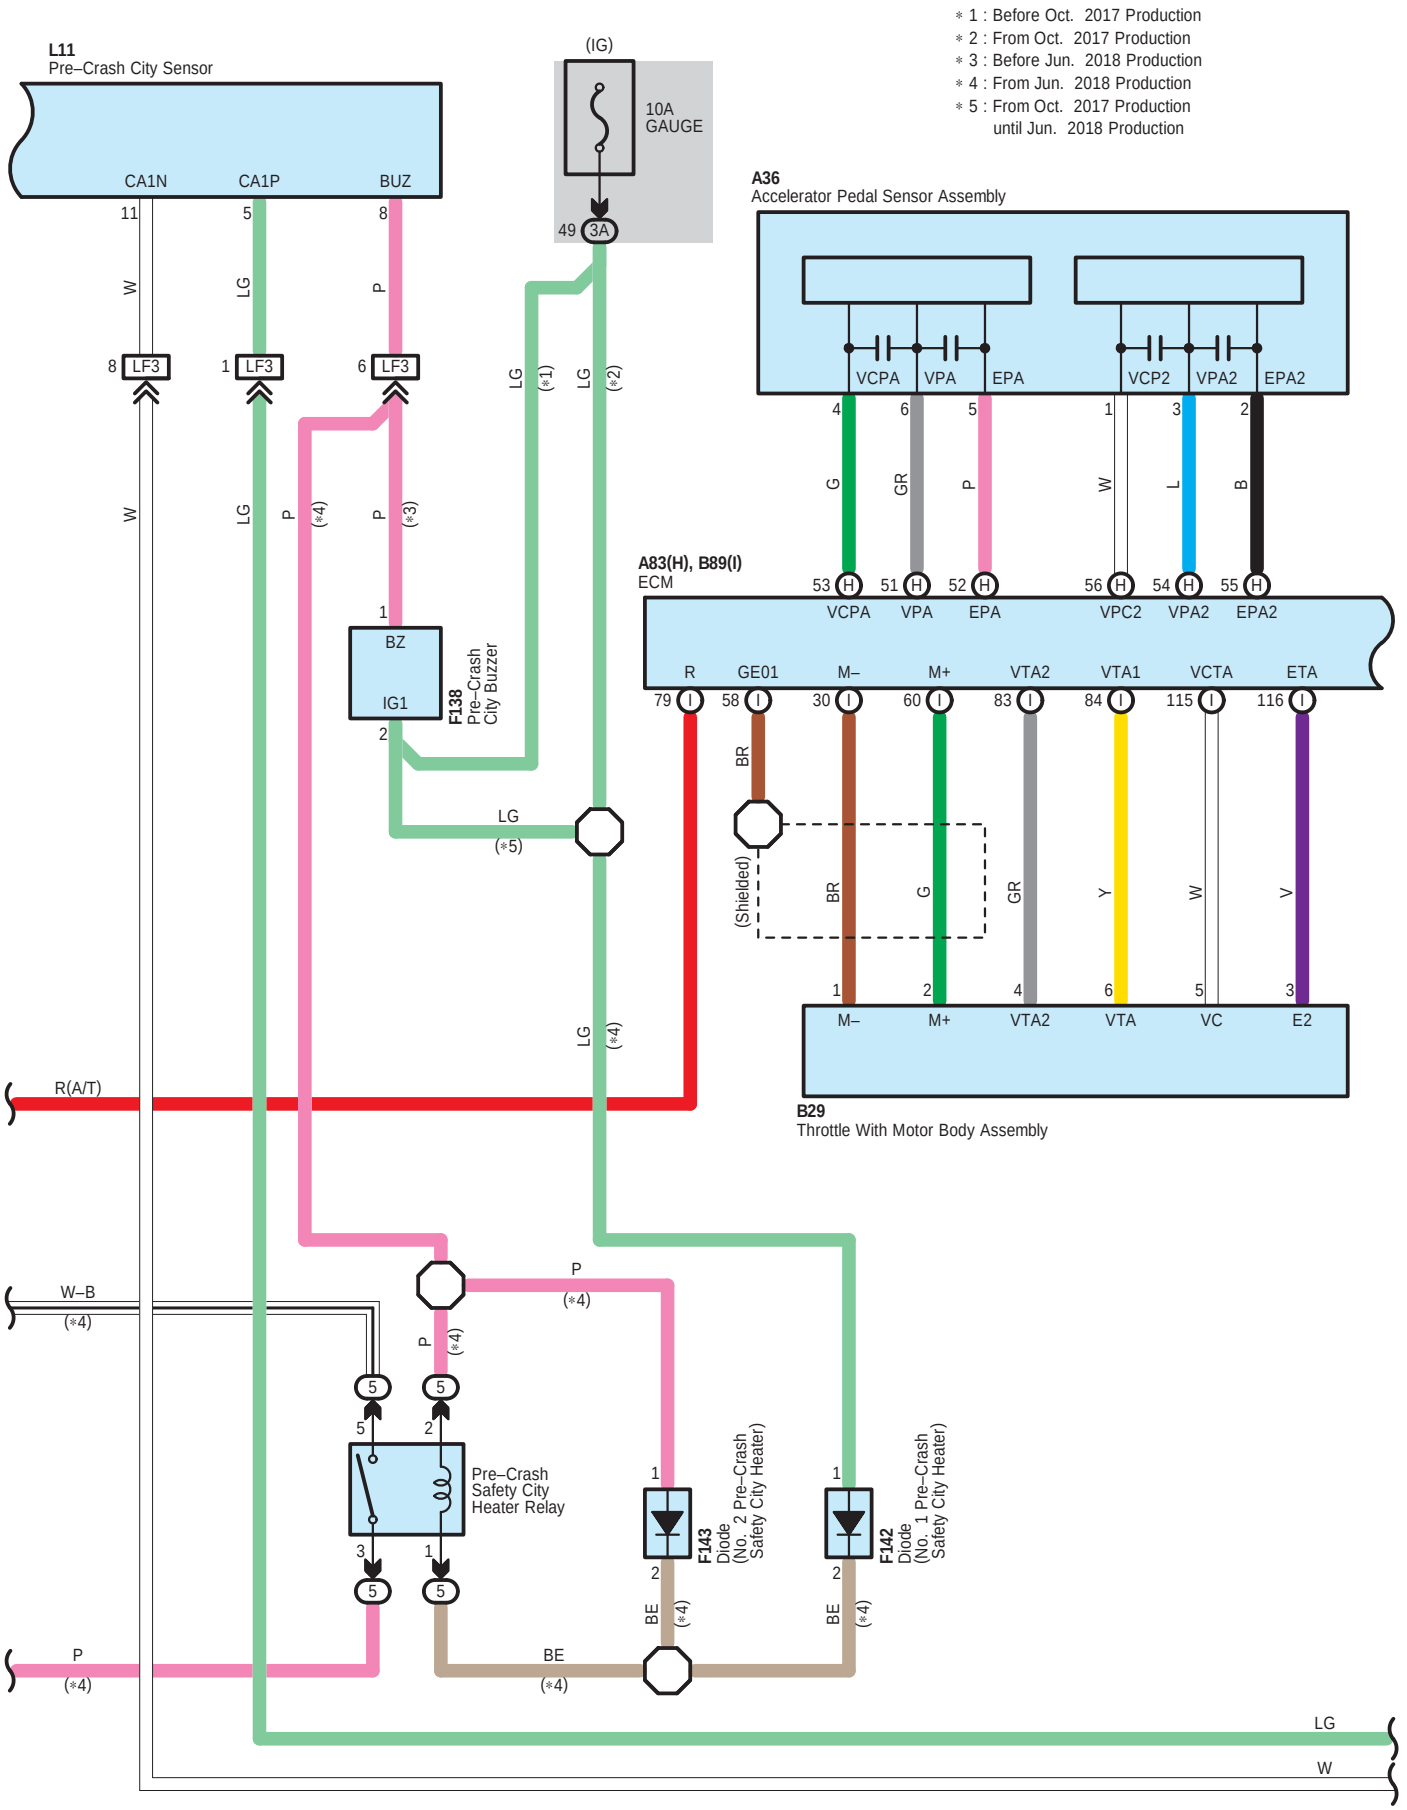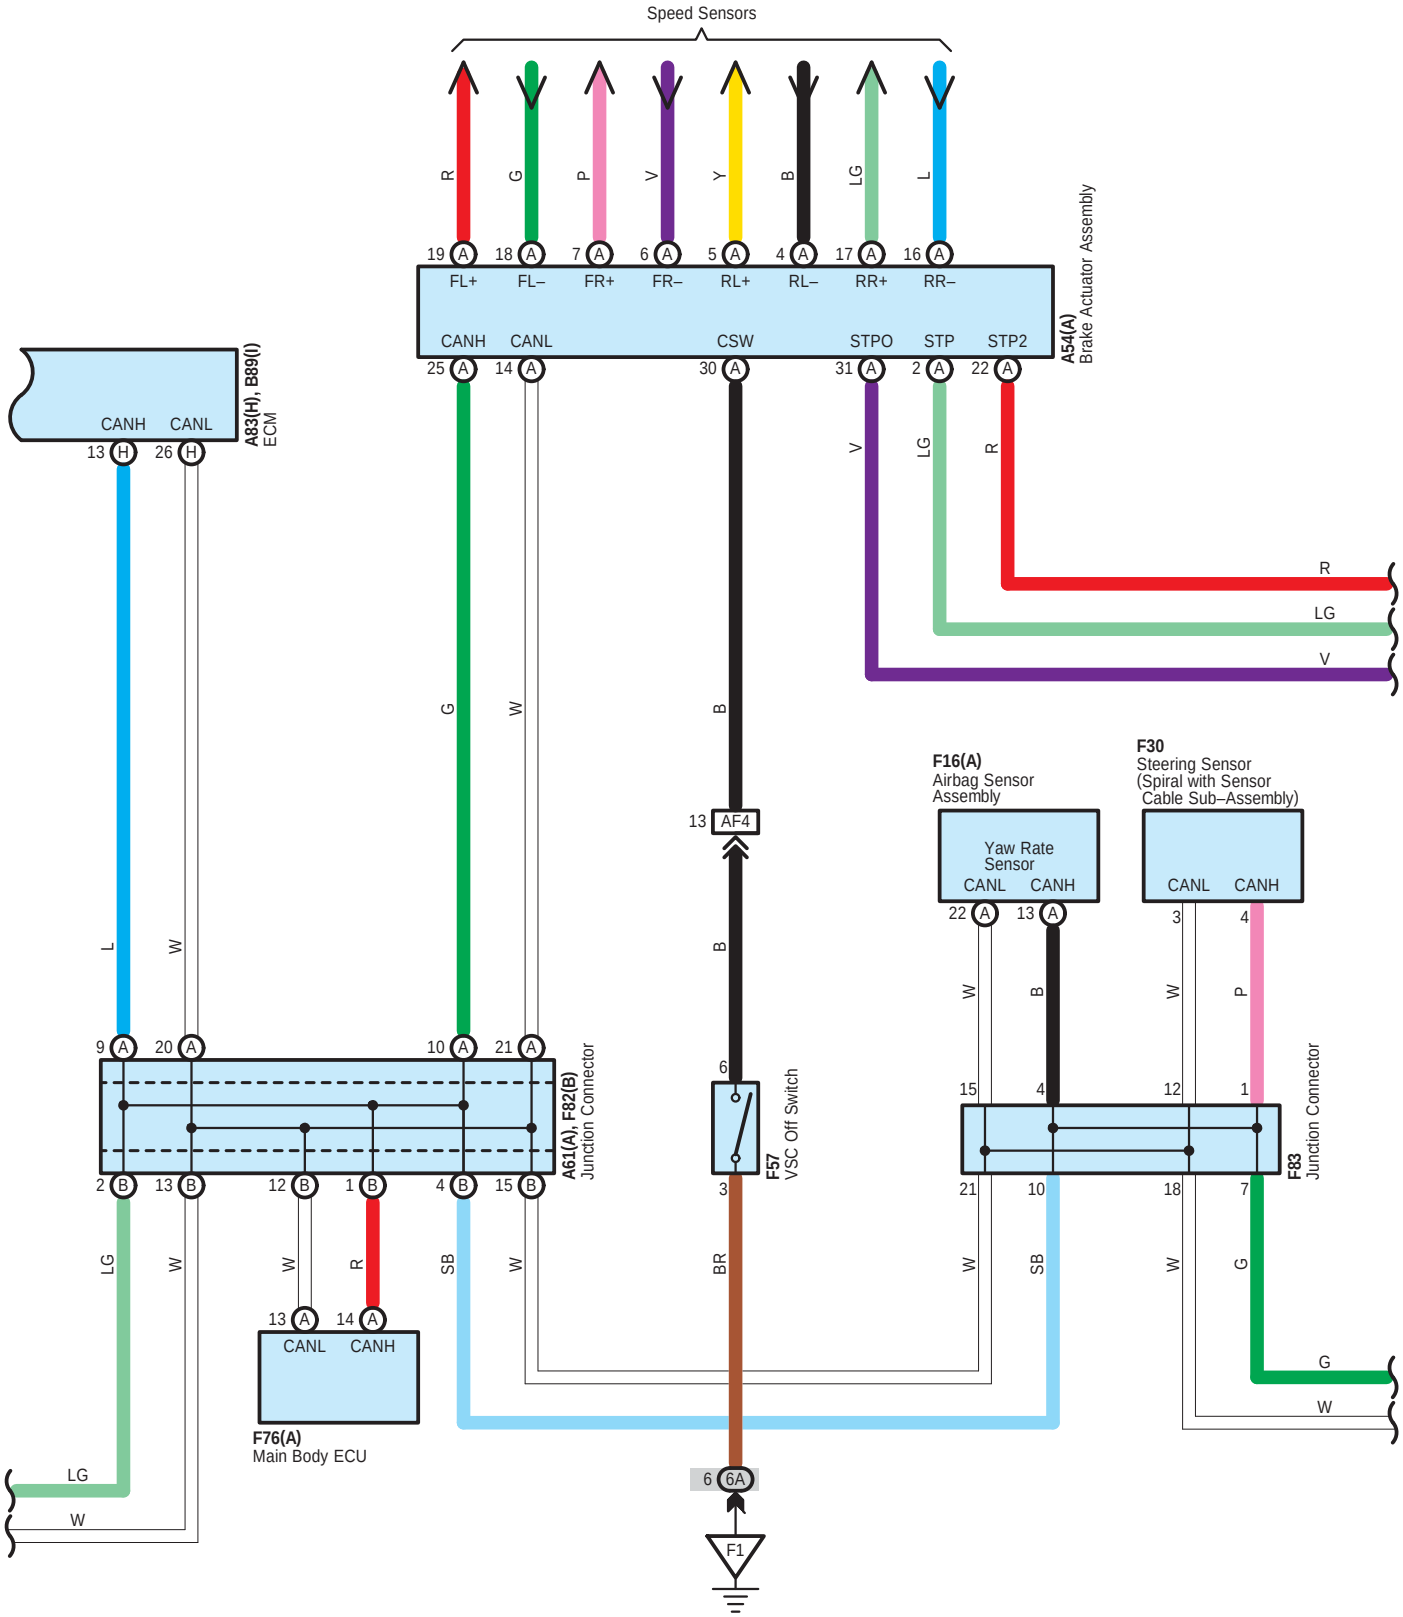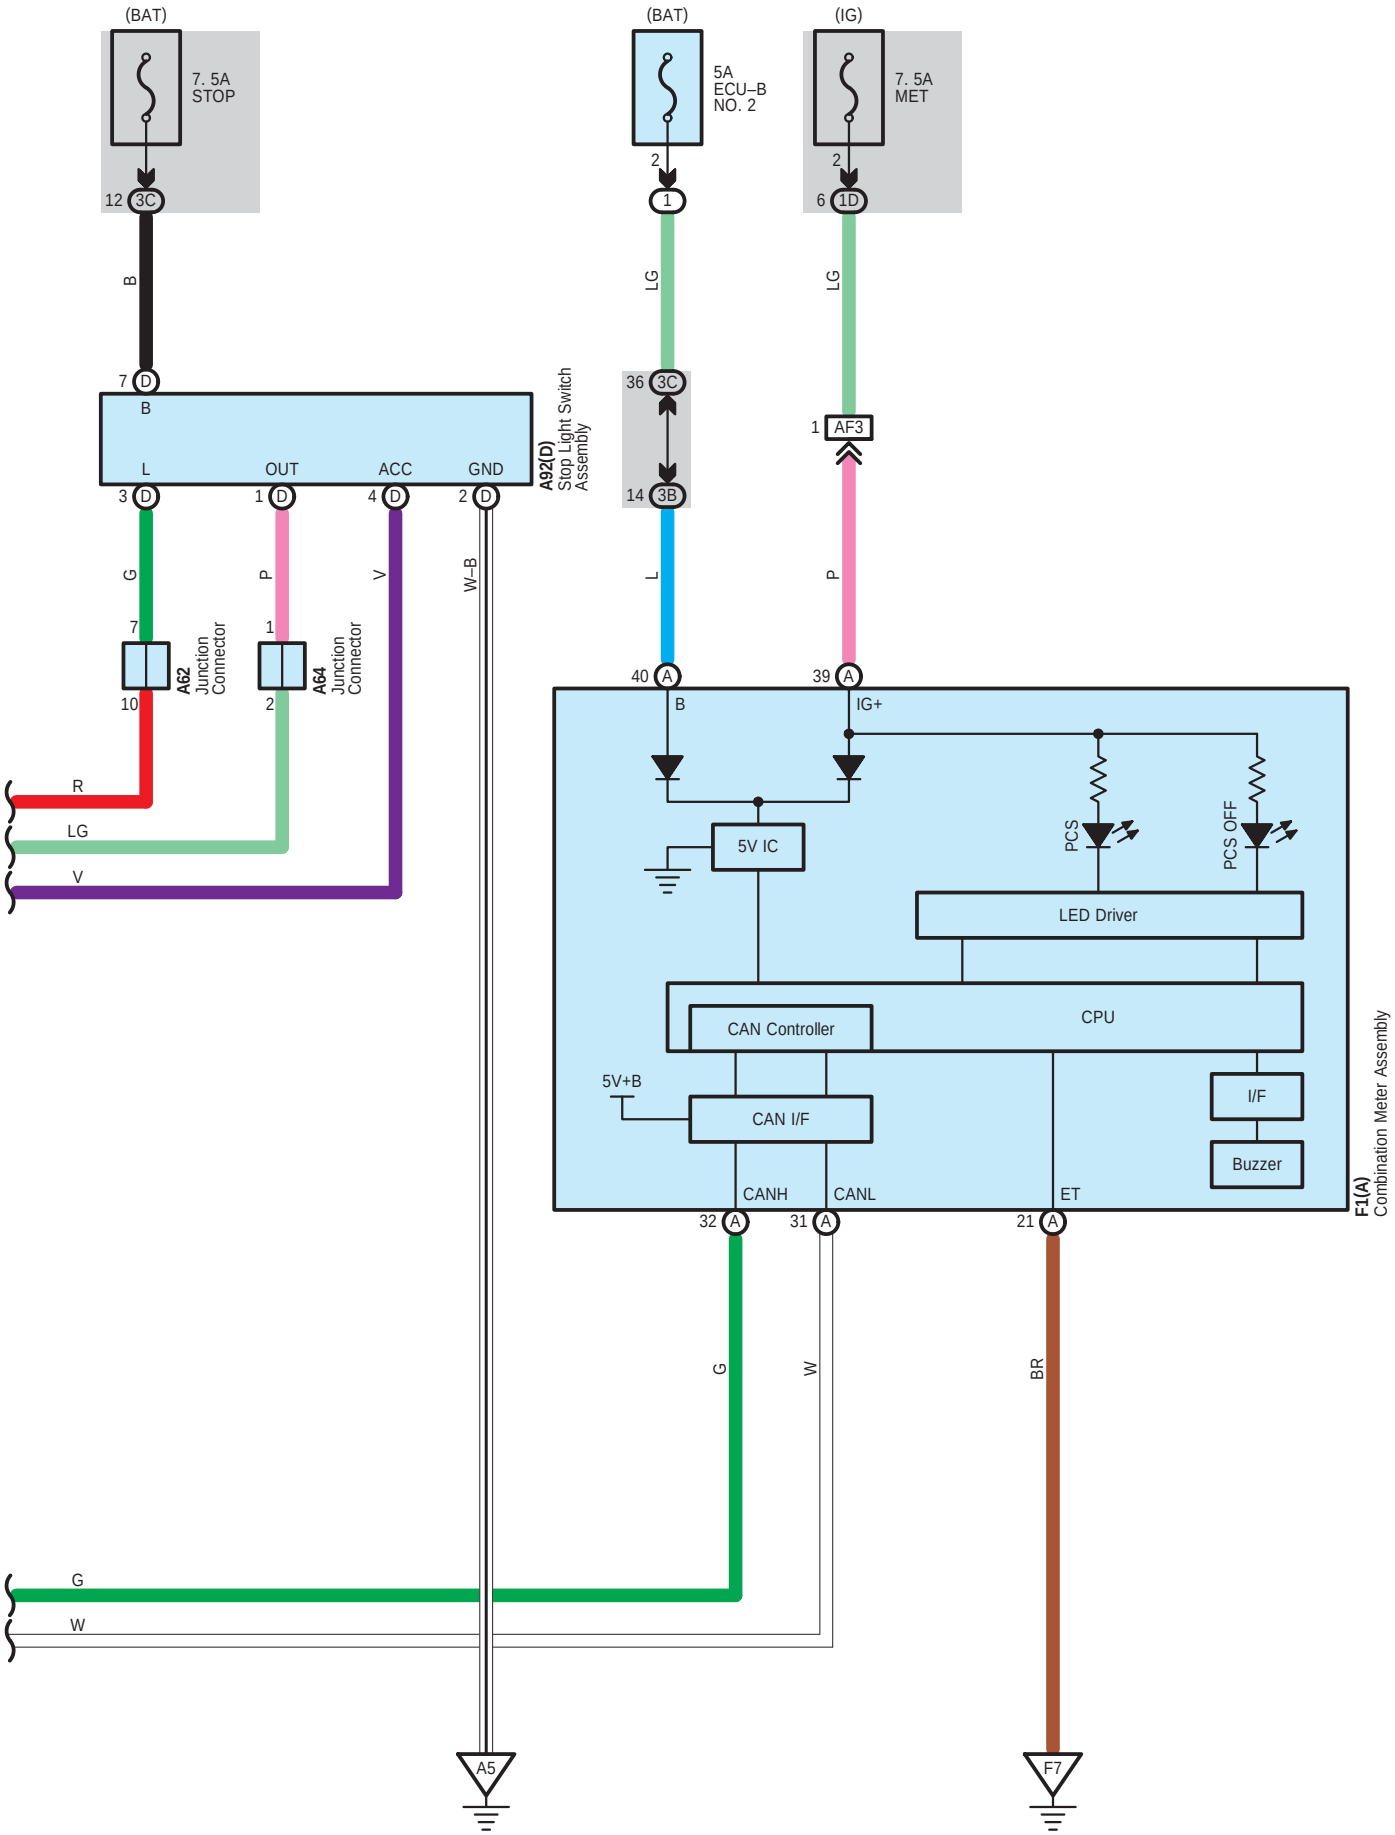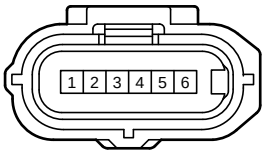


A 54
Black

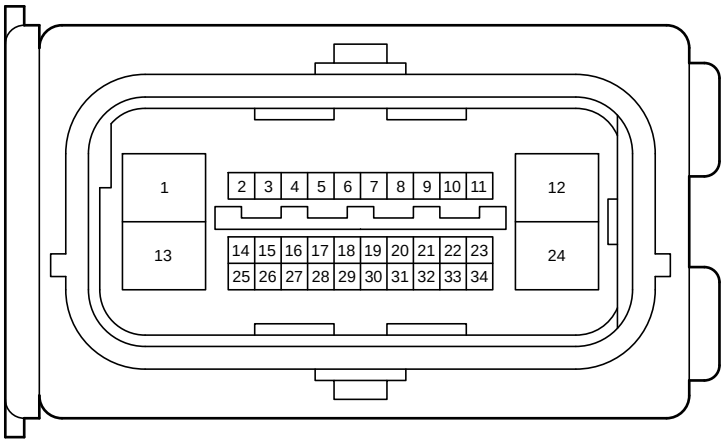


A 61
Blue

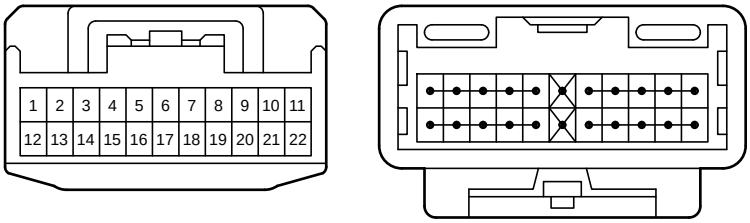


A 62
White

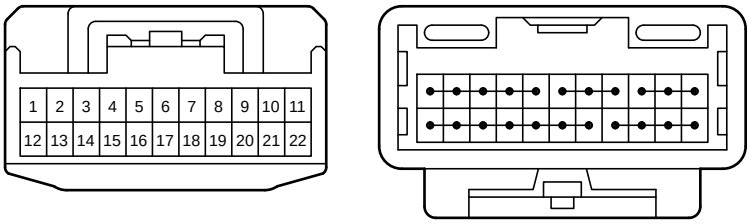


A 64
White

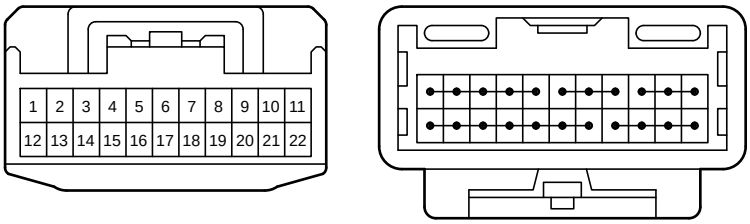


A 83
Black

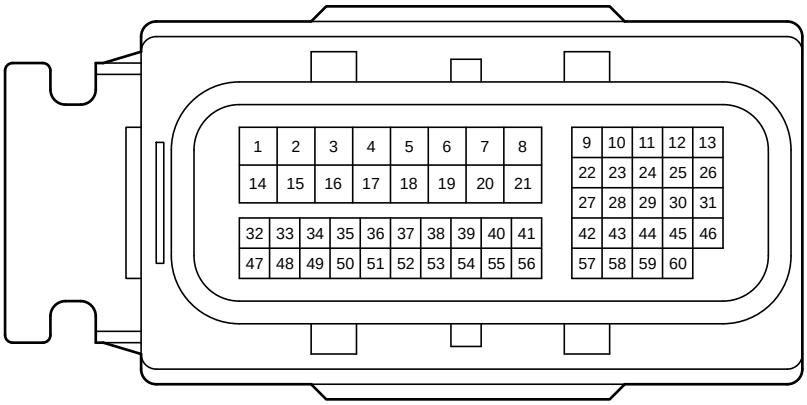


A 92
Black

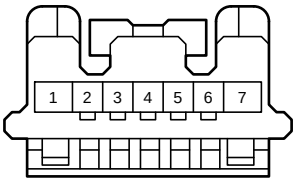


B 29
Black

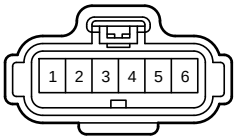


B 86
Gray

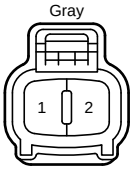


B 88
Gray

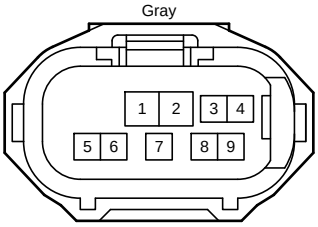


B 89
Black

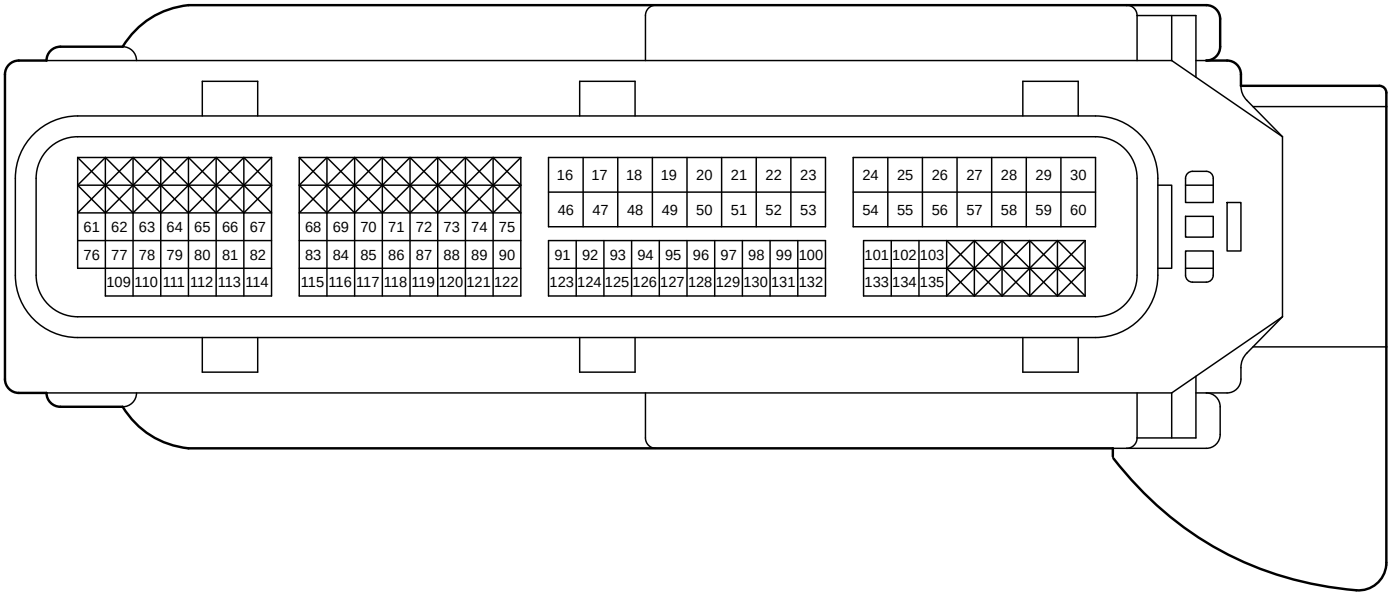


F 1
Black

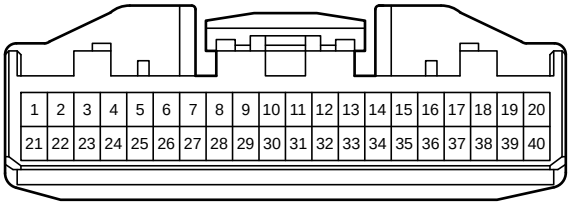


F 16
Yellow

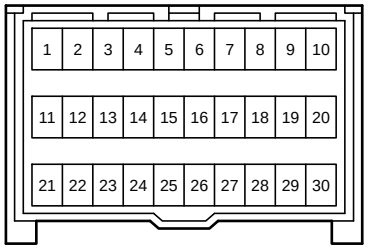


F 30
White

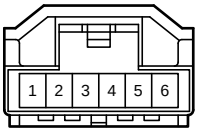


F 57
Gray

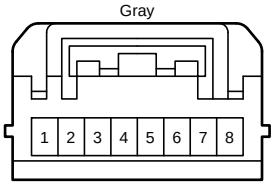


F 76
White

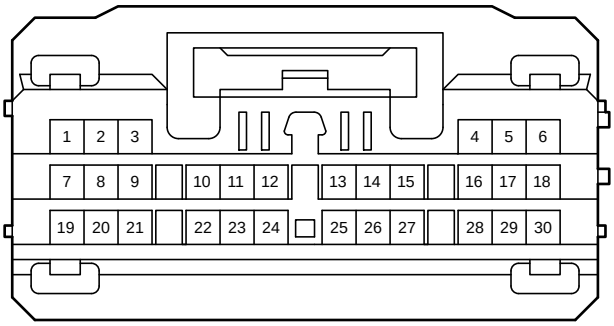


F 82
Blue

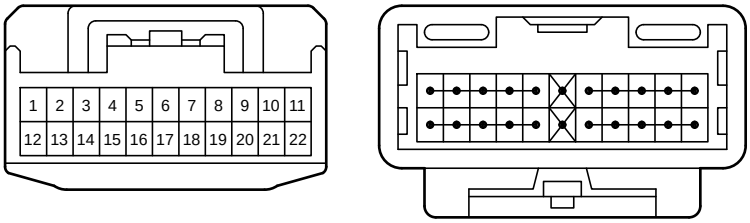


F 83
Gray

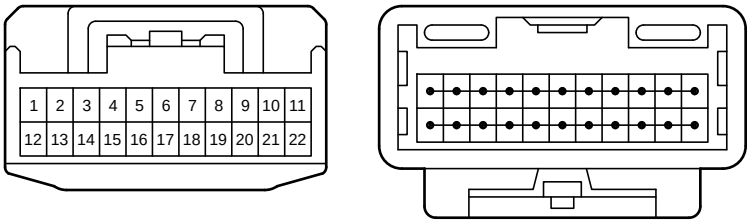


F 84
Black

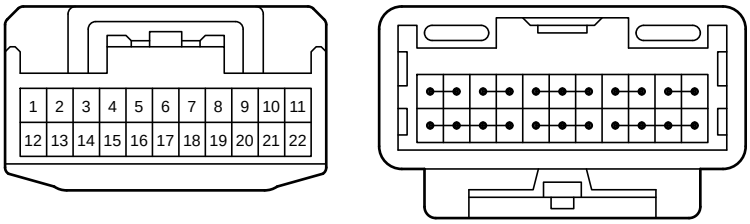


F 85
Black

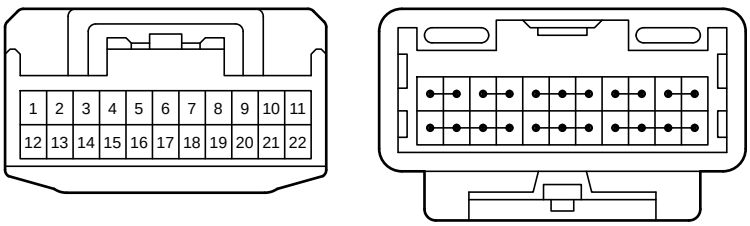

F138
Blue



F140
Gray

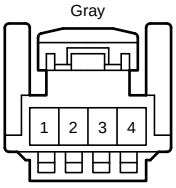


F142
White




F143
Black




L 11
Gray

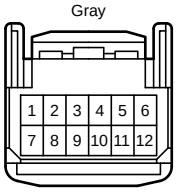


L 12
Black

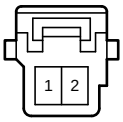


1D
White

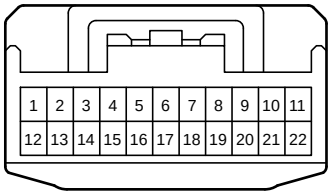


3A
White

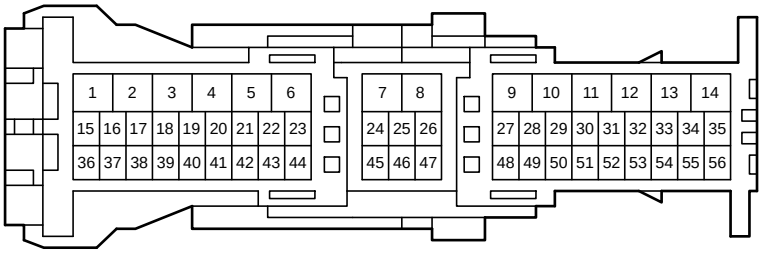


3B
White

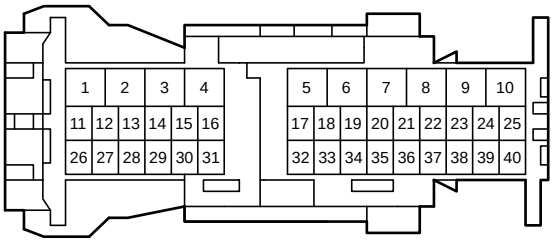


3C
White

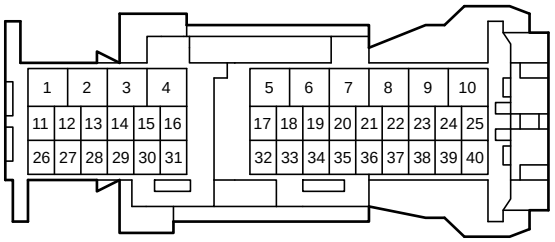


6A
White

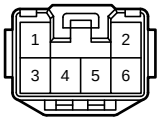


7A
White

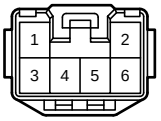



AF3
Black

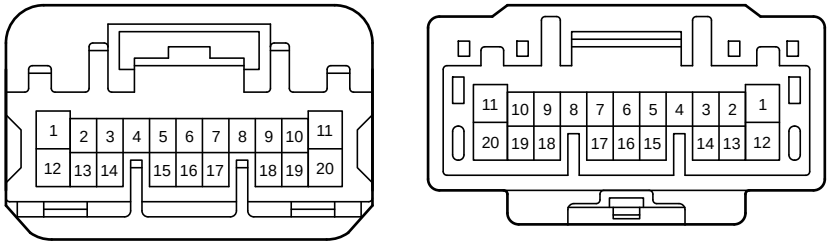

AF4
Gray

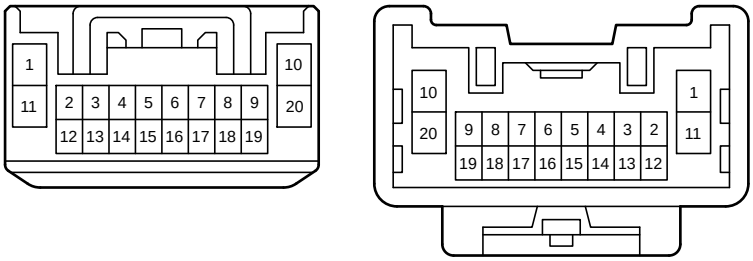

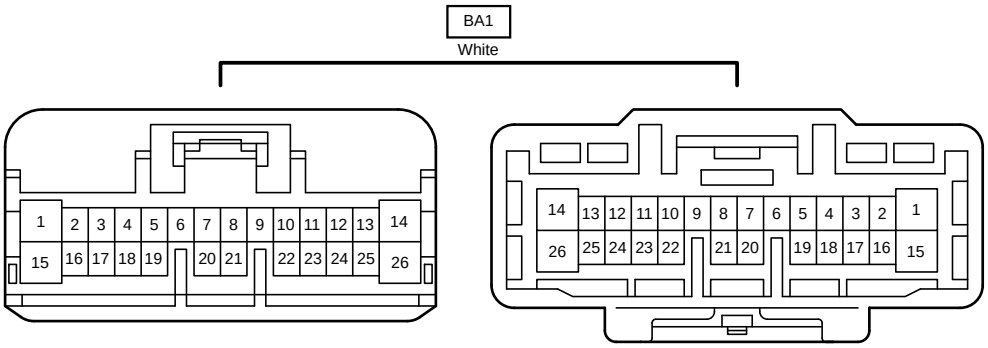
BA1
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14
15 16 17 18 19 20 21 22 23 24 25 26
14 13 12 11 10 9 8 7 6 5 4 3 2 1
26 25 24 23 22 21 20 19 18 17 16 15

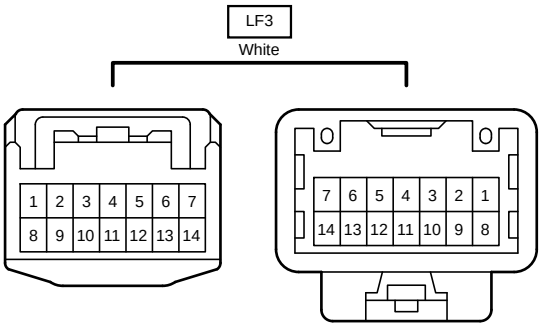
LF3
White
1 2 3 4 5 6 7
8 9 10 11 12 13 14
7 6 5 4 3 2 1
14 13 12 11 10 9 8