




(BAT)
120A ALT
A66(B)
Fusible Link
Block Assembly
1 B
B
1 3E
∗ 1 : w/ Rear Power Window
∗ 2 : w/o Rear Power Window
P/W
Relay
20A
DOOR
R/R
20A
DOOR
R/L
20A
DOOR P
20A
DOOR
30A
P/W
1
2
31 3A
8 3B
2 3D
1 3D
13 3A
12 3A
14 3A
L
W–B
SB
(∗1)
P
(∗1)
V
G
GR
1 IK1
1 JK1
1 GF1
LA–SB
(∗1)
LA–SB
(∗1)
L
GR
G
L
LA–SB
(∗1)
LA–SB
(∗1)
L
W–B



H1(A)
Power Window Regulator Master Switch Assembly LH
B
LED
AUTO
DOWN
UP
GND
D
U
(*1)
(*2)
GR
W
R
G
R
W–B
P
W
HF1
GF1
H3
Front Power Window Regulator Motor Assembly LH
M
IC
Hall IC
LIN2
G2
Front Power Window Regulator Switch Assembly RH
SD
SU
Down
Up
G4
Front Power Window Regulator Motor Assembly RH
LA–G
LA–R
L
LA–SB
W
W–B
7A
7B
F2


H1(A)
Power Window Regulator Master Switch Assembly LH
D
U
13
12
18
10
(*1)
B
Y
G
R
4
2
3
1
HK1
L
R
V
13
2
JK1
IK1
LA–G
LA–R
5
SD
SU
Down
Up
J1
Rear Power Window Regulator Switch Assembly LH
I1
Rear Power Window Regulator Switch Assembly RH
LA–B
LA–Y
LA–SB
J2
Rear Power Window Regulator Motor Assembly LH
I2
Rear Power Window Regulator Motor Assembly RH
M
W
L

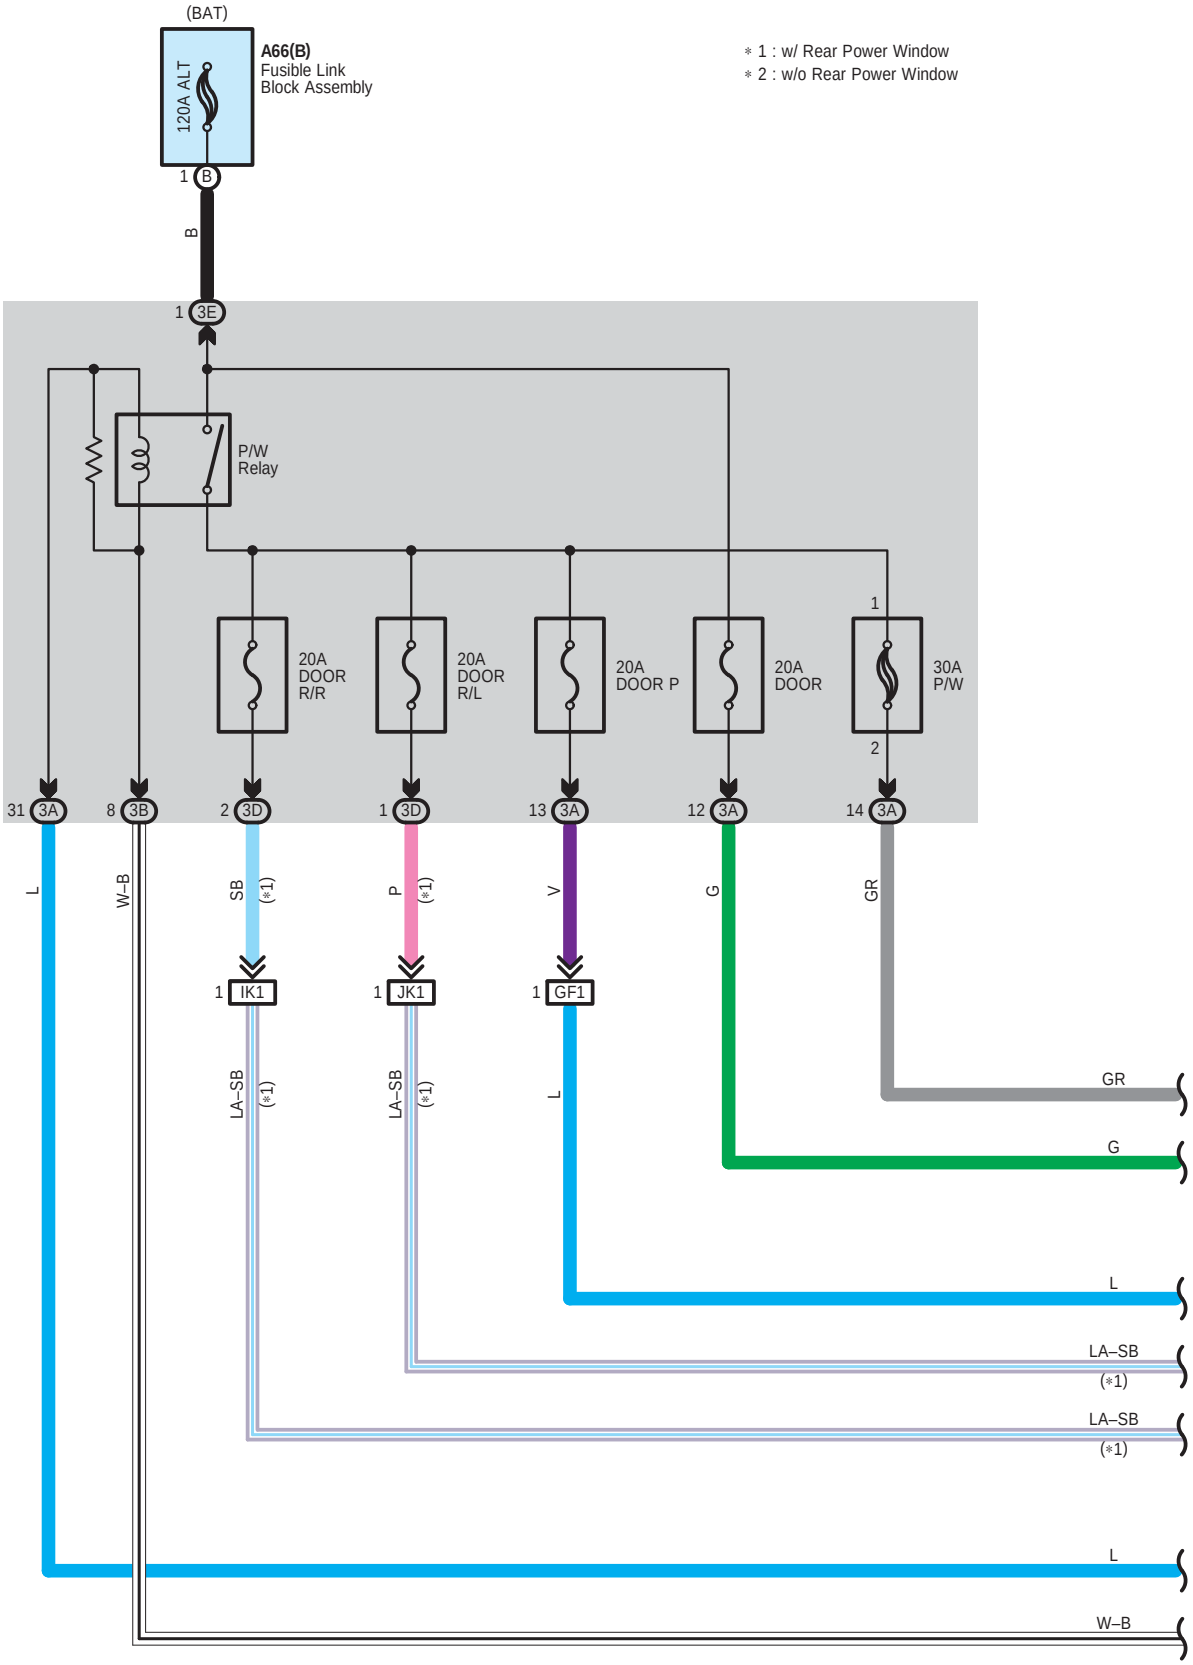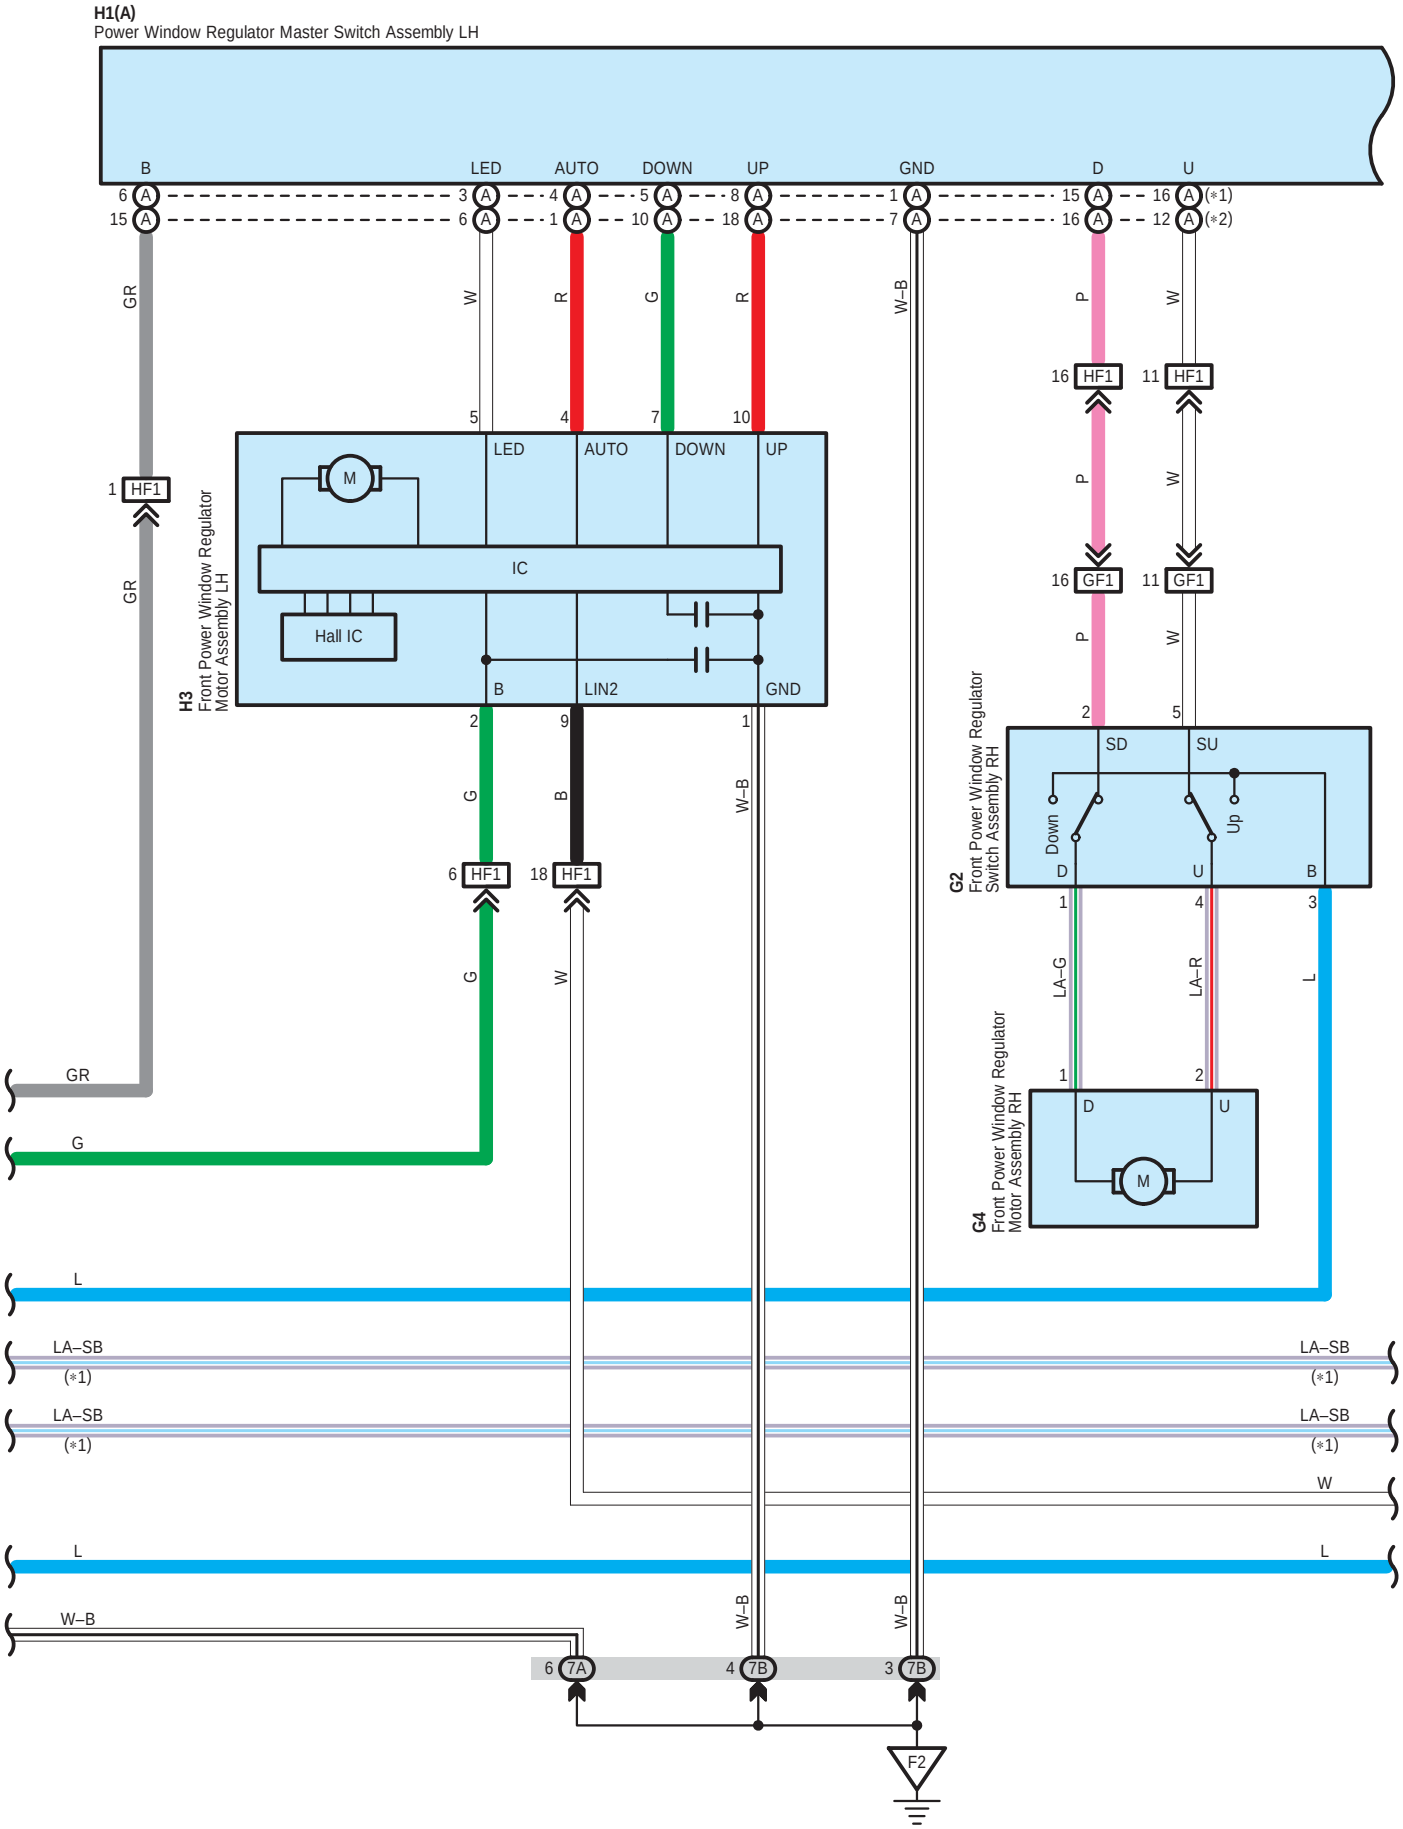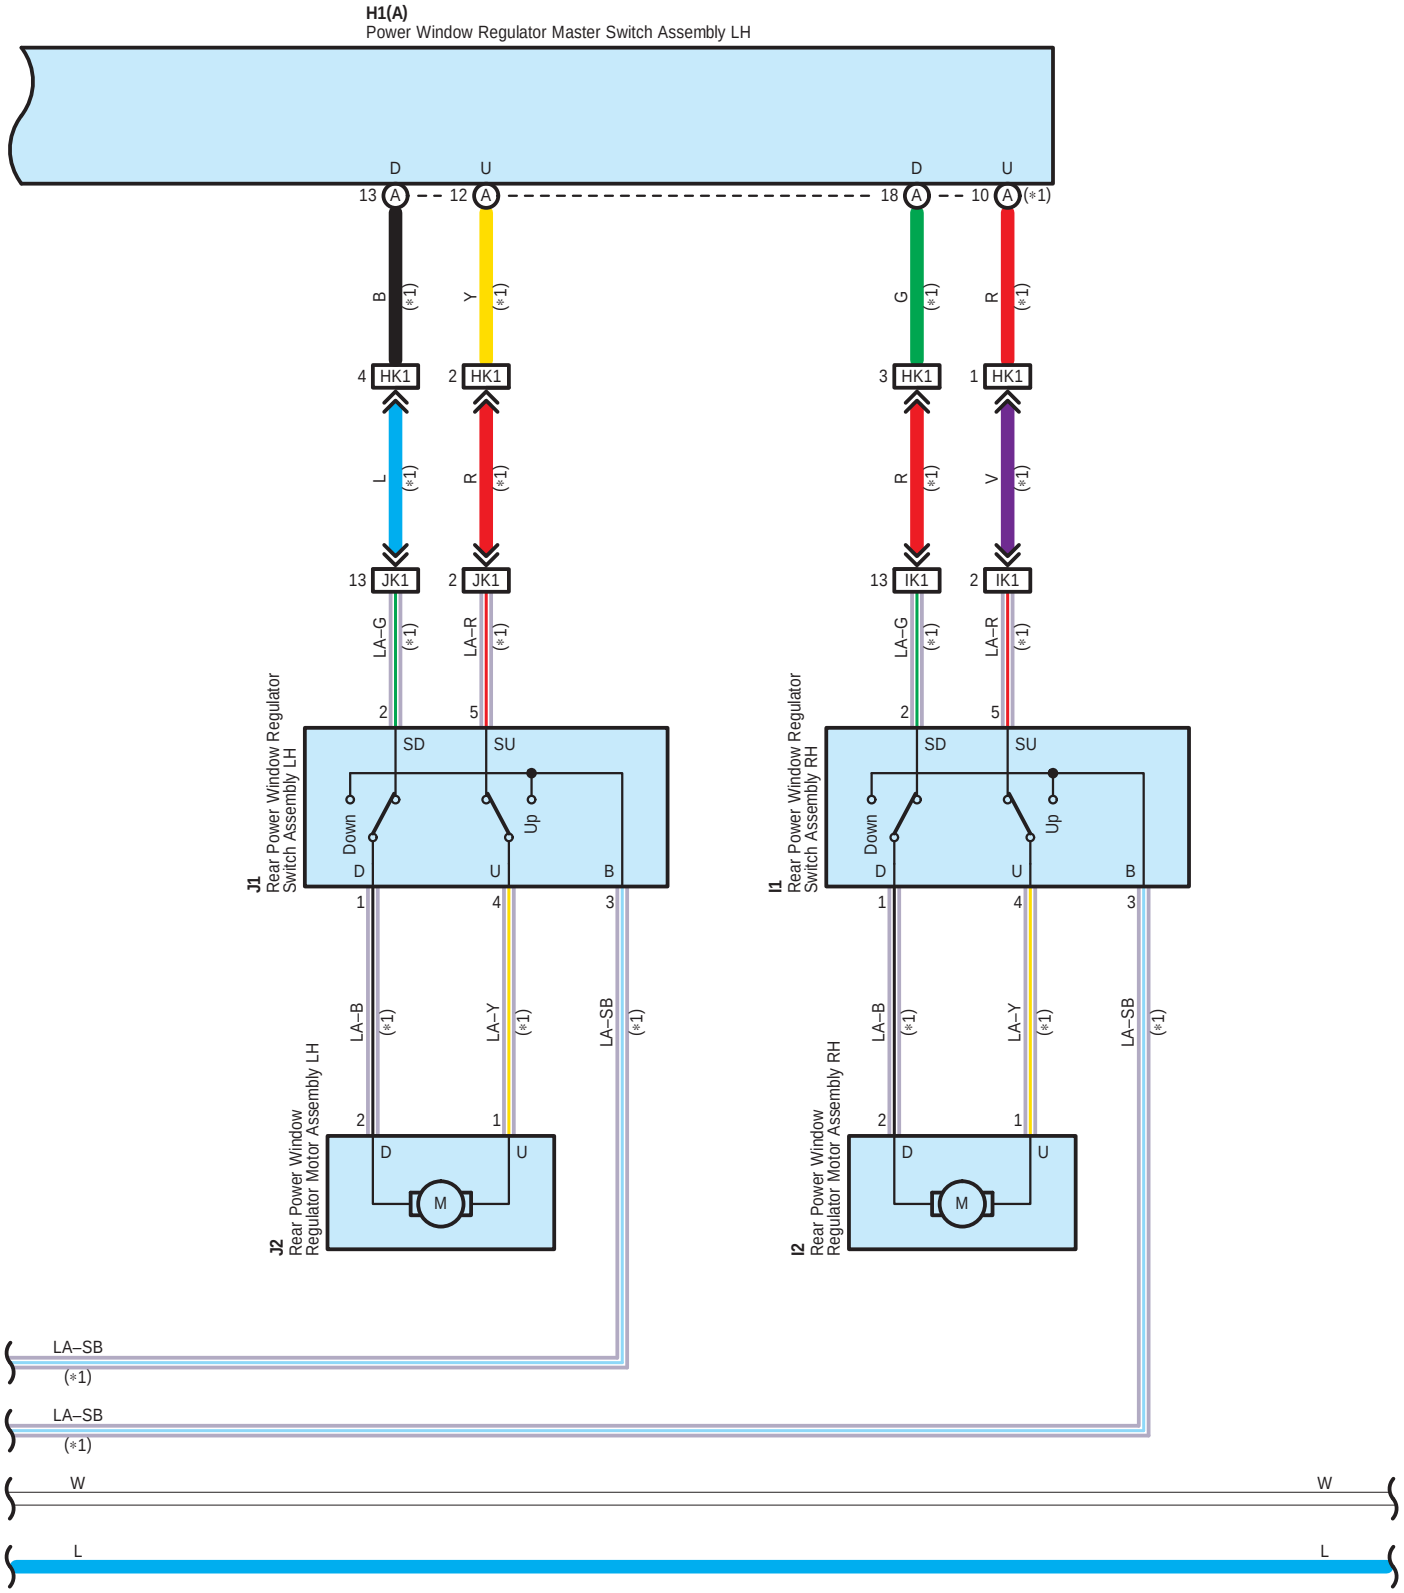


∗ 1 : w/ Rear Power Window

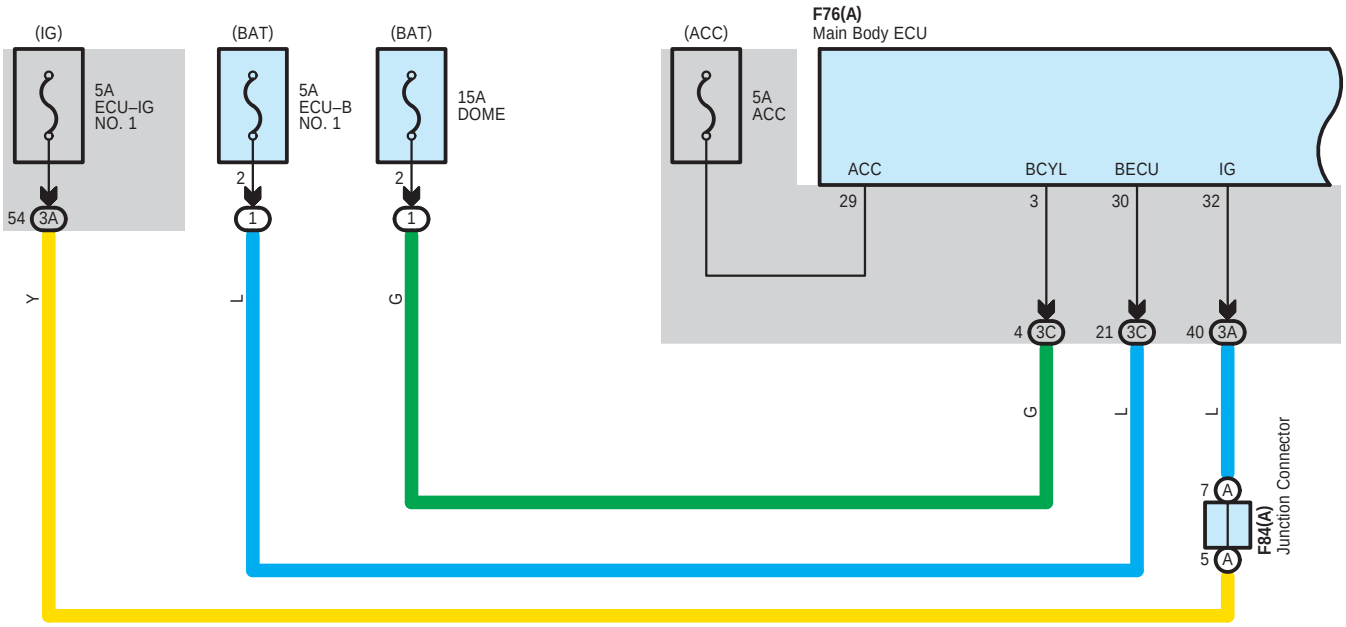


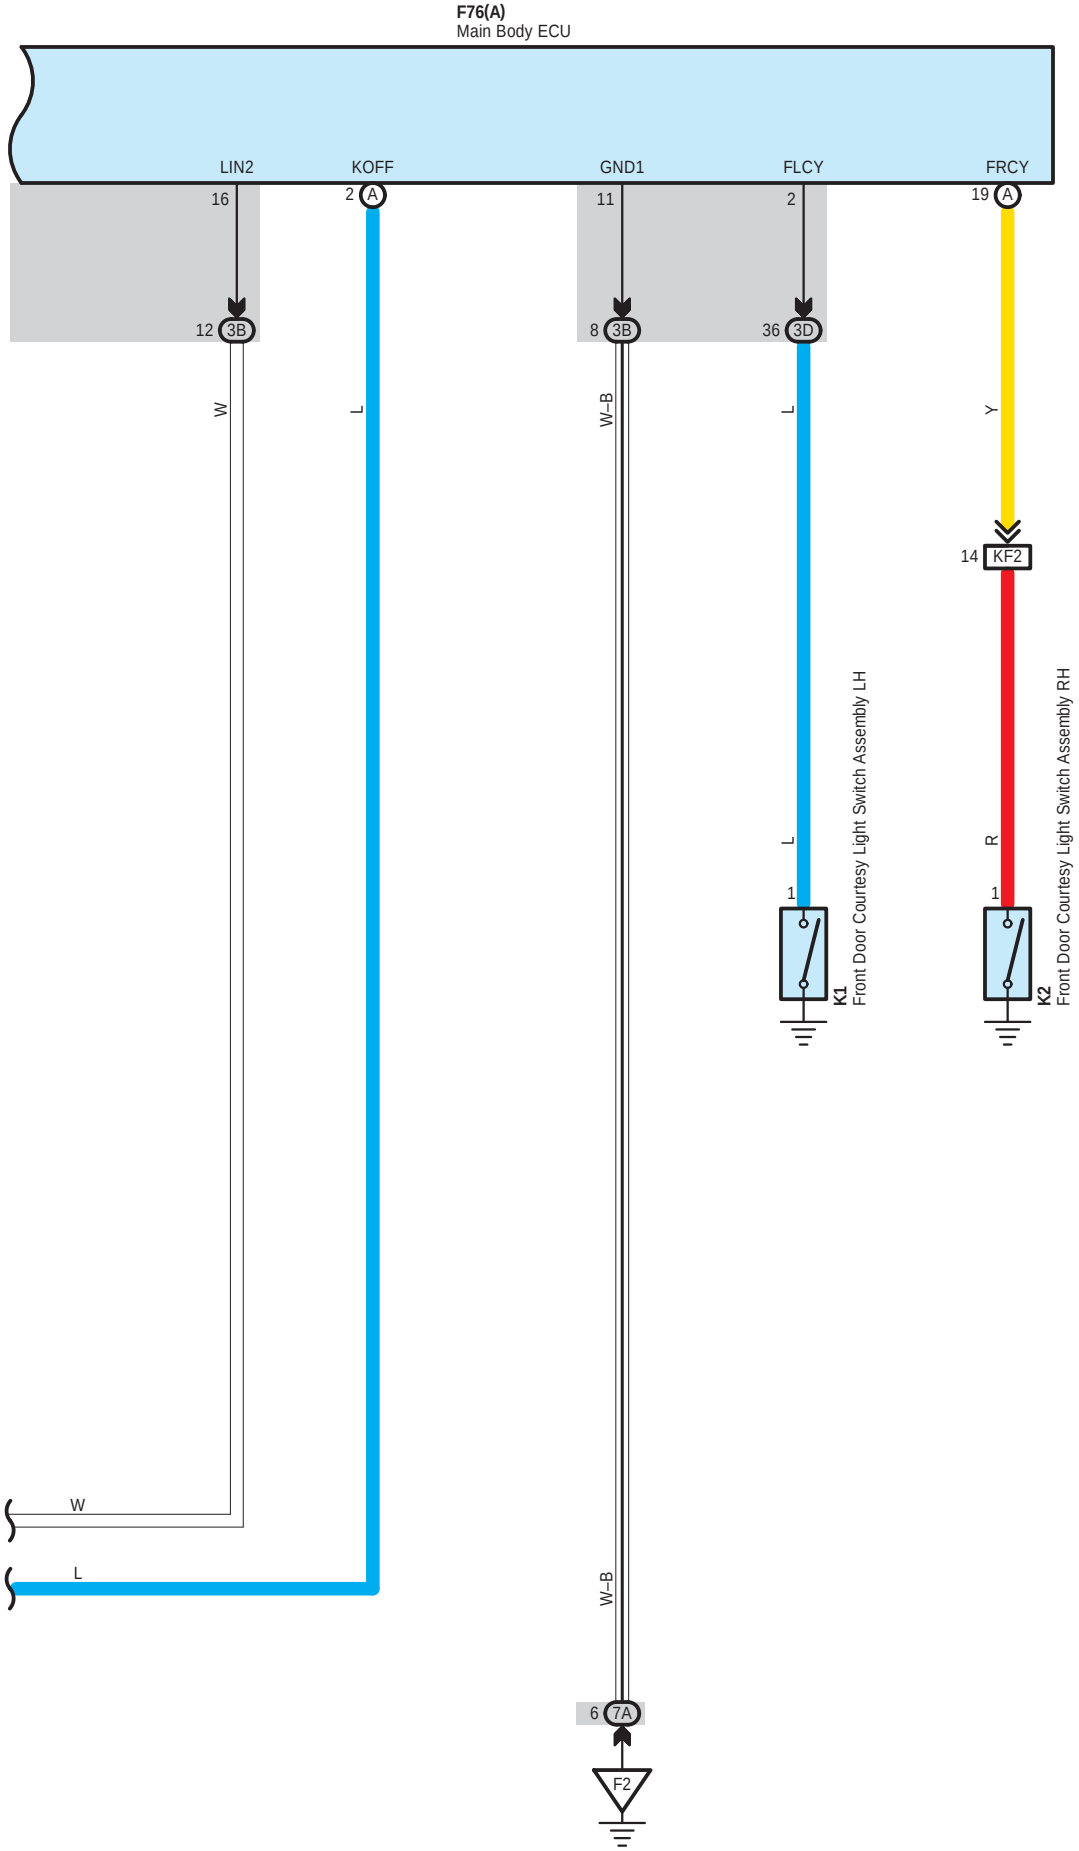
F76(A)
Main Body ECU
LIN2
KOFF
GND1
FLCY
FRCY
16
2 A
11
2
19 A
12 3B
8 3B
36 3D
W
L
W–B
L
Y
14 KF2
L
R
1
1
K1
Front Door Courtesy Light Switch Assembly LH
K2
Front Door Courtesy Light Switch Assembly RH
W
L
W–B
6 7A
F2


A 66
White




F 76
White

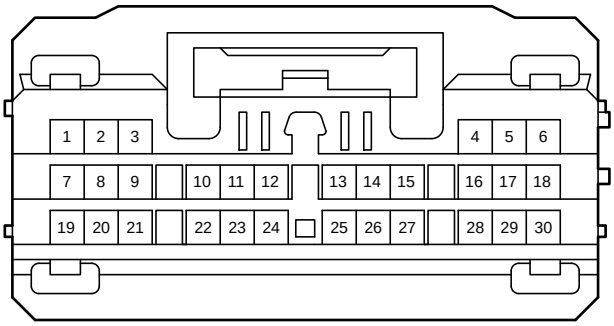


F 84
Black

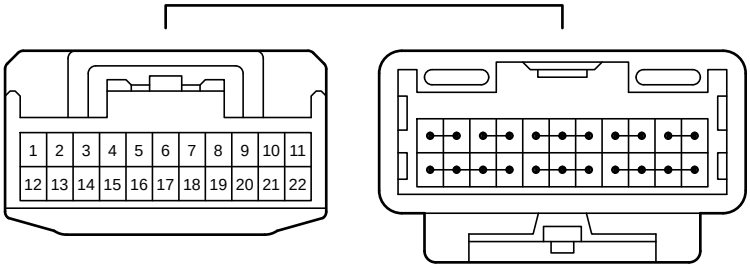


G 2
White

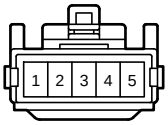


G 4
Black

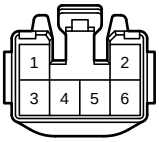


H 1
White

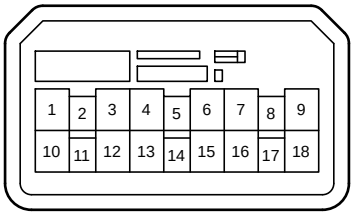


H 3
White

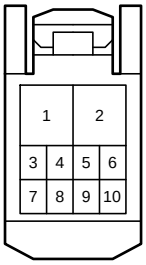


I 1
White

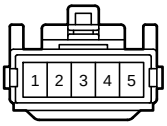


I 2
Black

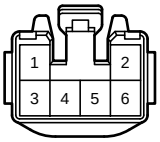

J 1
White

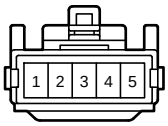

J 2
Black

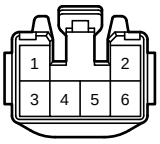


K 1
White




K 2
White




3A
White

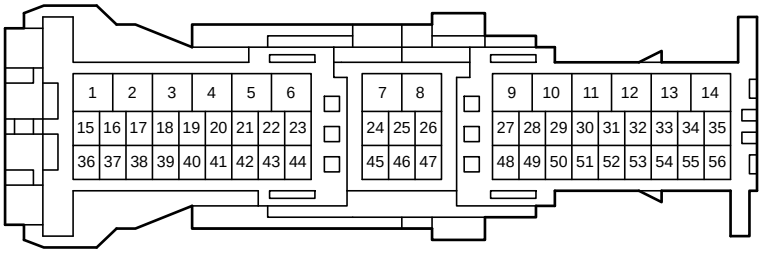


3B
White

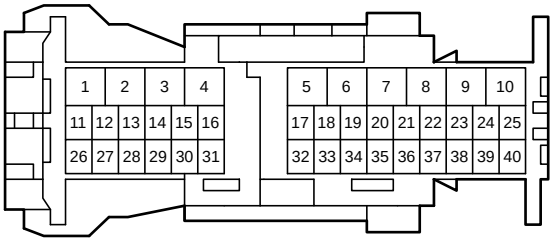


3C
White

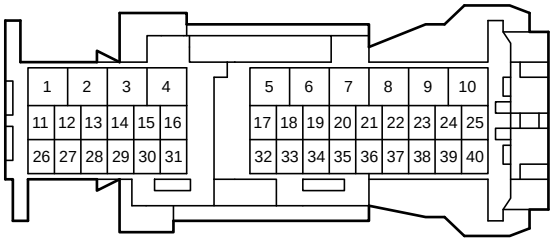


3D
White

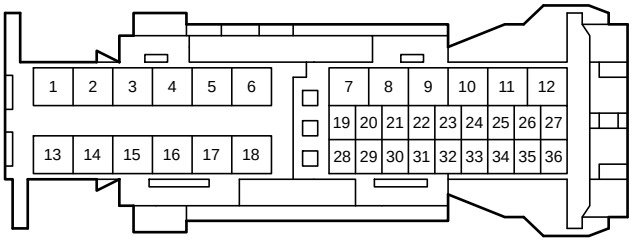


3E
White

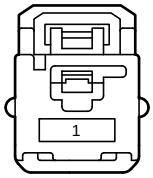


7A
White

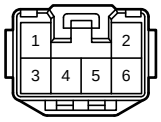


7B
White

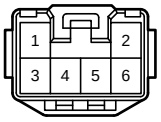


GF1
White

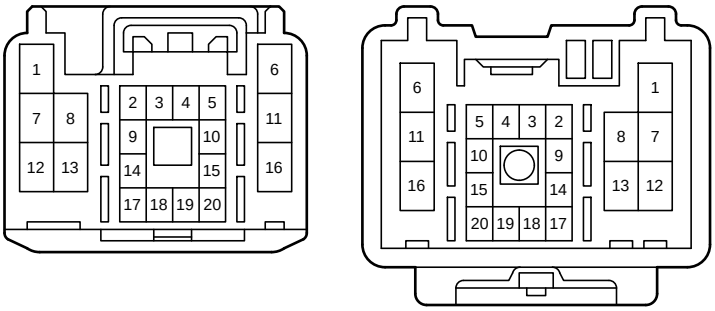

HF1
White

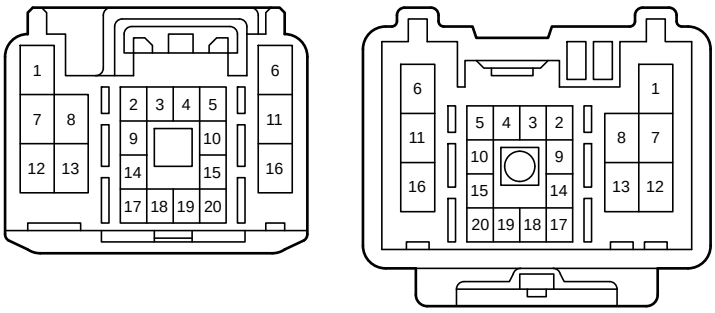


HK1
White

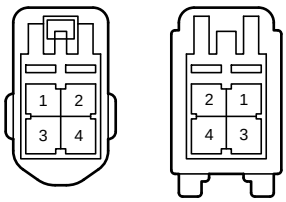


IK1

White

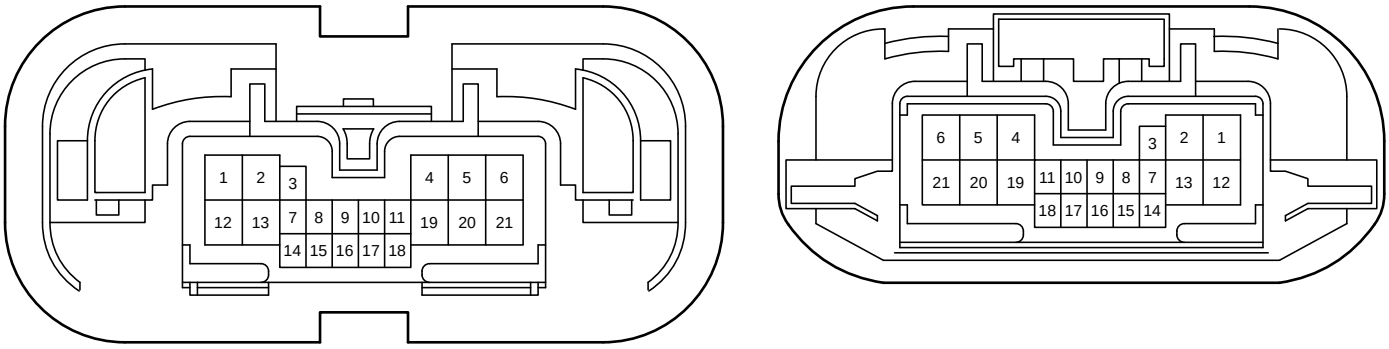

JK1

White

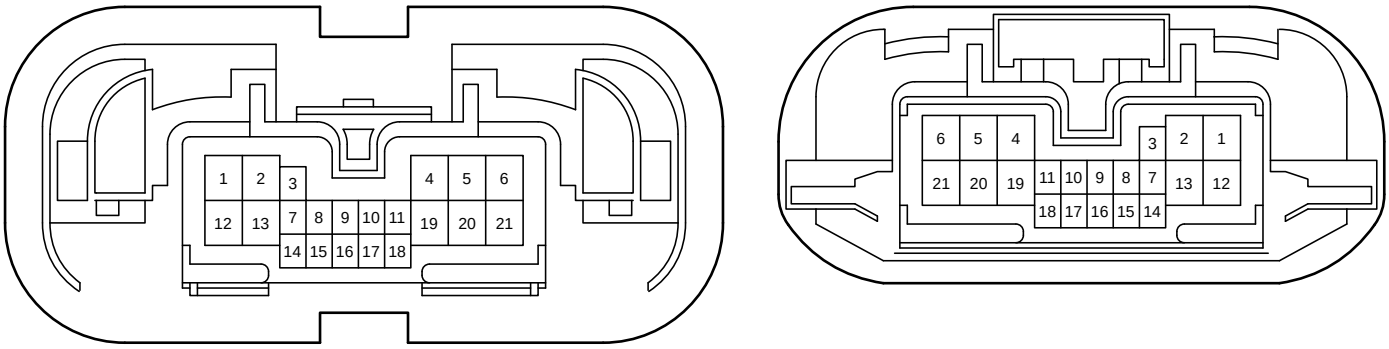

KF2

White

