





∗ 1 : w/ Curtain Shield Airbag
∗ 3 : w/ Knee Airbag
∗ 4 : w/ VSC
∗ 5 : w/o VSC
∗ 6 : 3–Door
∗ 7 : 5–Door
∗ 8 : Built–in Type Yaw Rate Sensor
∗ 9 : Separate Type Yaw Rate Sensor
∗16 : Before Jan. 2017 Production
∗17 : From Jan. 2017 Production
(IG)
10A
IG2
2
8 1D
B
31 3C
45 3A
B
21 A
IG2
F19
Lower No. 1 Instrument
Panel Airbag Assembly
DK+
DK–
1
2
Y–B
(∗3)
B
(∗3)
9 A
DK+
10 A
DK–
F16(A), K31(B), K32(C), K33(D), K34(E), K49(F), K50(G)
Airbag Sensor Assembly
E1
E2
D+
D–
P+
P–
25 A
26 A
5 A
6 A
4 A
3 A
W–B
W–B
Y–B
Y
Y–B
Y
8 3A
7 3A
8 3B
6 3A
1 FS1
2 FS1
W–B
W–B
Y–R
Y–G
1 A
2 A
D+
D–
2 C
1 C
F17(A), z1(C)
Spiral with Sensor
Cable Sub–Assembly
2
1
P+
P–
z1(C)
Driver Side Squib Circuit
(Horn Button Assembly)
S1
Instrument Panel Passenger
without Door Airbag Assembly
6 7A
2 6A
F2
F1


F16(A), K31(B), K32(C), K33(D), K34(E), K49(F), K50(G)
Airbag Sensor Assembly
+SL
–SL
BBR+
BBR–
30 A
28 A
17 C
18 C
(*4 *8 *16)
8 E
11 E
(*4 *9, *5)
8 G
11 G
(*4 *8 *17)
W
B
R
(*1 *6)
G
(*1 *6)
G
(*1 *7)
R
(*1 *7)
1 AF1
2 AF1
4
3
4 A
3 A
BCR+
BCR–
BDR+
BDR–
K46
No. 2 Side Airbag Sensor Assembly RH
K22(A)
No. 2 Side Airbag Sensor Assembly RH
1
2
1 A
2 A
Y–B
(*1 *6)
Y
(*1 *6)
R
(*1 *7)
G
(*1 *7)
1 GK2
2 GK2
2
1
2
1
A20
Front Airbag Sensor
G16
Door Side Airbag Sensor Assembly RH
K24
No. 2 Side Airbag Sensor Assembly RH



K28
Curtain Shield Airbag
Assembly RH
ICR+
ICR–
K27
Curtain Shield Airbag
Assembly LH
ICL+
ICL–
K30
Front Seat Airbag
Assembly RH
SFR+
SFR–
K29
Front Seat Airbag
Assembly LH
SFL+
SFL–
F16(A), K31(B), K32(C), K33(D), K34(E), K49(F), K50(G)
Airbag Sensor Assembly
BBL+
BBL–
PR+
PR–
PL+
PL–
K45
No. 2 Side Airbag Sensor
Assembly LH
BCL+
BCL–
BDL+
BDL–
HK2
H16
Door Side Airbag
Sensor Assembly LH
K21(A)
No. 2 Side Airbag Sensor
Assembly LH
K23
No. 2 Side Airbag Sensor
Assembly LH
K26
Front Seat Outer Belt
Assembly RH
R+
R–
Pretensioner
K25
Front Seat Outer Belt
Assembly LH
L+
L–
Pretensioner


A54(A), A55(B)
Brake Actuator
Assembly
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
CANH
CANL
19 A
19 B
18 A
18 B
7 A
7 B
6 A
6 B
5 A
5 B
4 A
4 B
17 A
17 B
16 A
16 B
25 A
25 B
14 A (*4)
14 B (*5)
R
G
P
V
Y
B
LG
L
Speed Sensors
A74(F), A83(H)
ECM
CANH
CANL
41 F
13 H
49 F (*13)
26 H (*14)
G
W
L
W
F16(A), K31(B), K32(C), K33(D),
K34(E), K49(F), K50(G)
Airbag Sensor Assembly
CANL
CANH
22 A
13 A
10 A
21 A
9 A
20 A
4 B
15 B
A61(A), F82(B)
Junction Connector
W
B
SB
W
15
4
10
21
F83
Junction
Connector
7
18
G
W
W
G
* 1 : w/ Curtain Shield Airbag
* 2 : w/ Side Airbag
* 4 : w/ VSC
* 5 : w/o VSC
* 6 : 3–Door
* 7 : 5–Door
* 8 : Built–in Type Yaw Rate Sensor
* 9 : Separate Type Yaw Rate Sensor
*13 : Before Sep. 2016 Production
*14 : From Sep. 2016 Production
*16 : Before Jan. 2017 Production
*17 : From Jan. 2017 Production

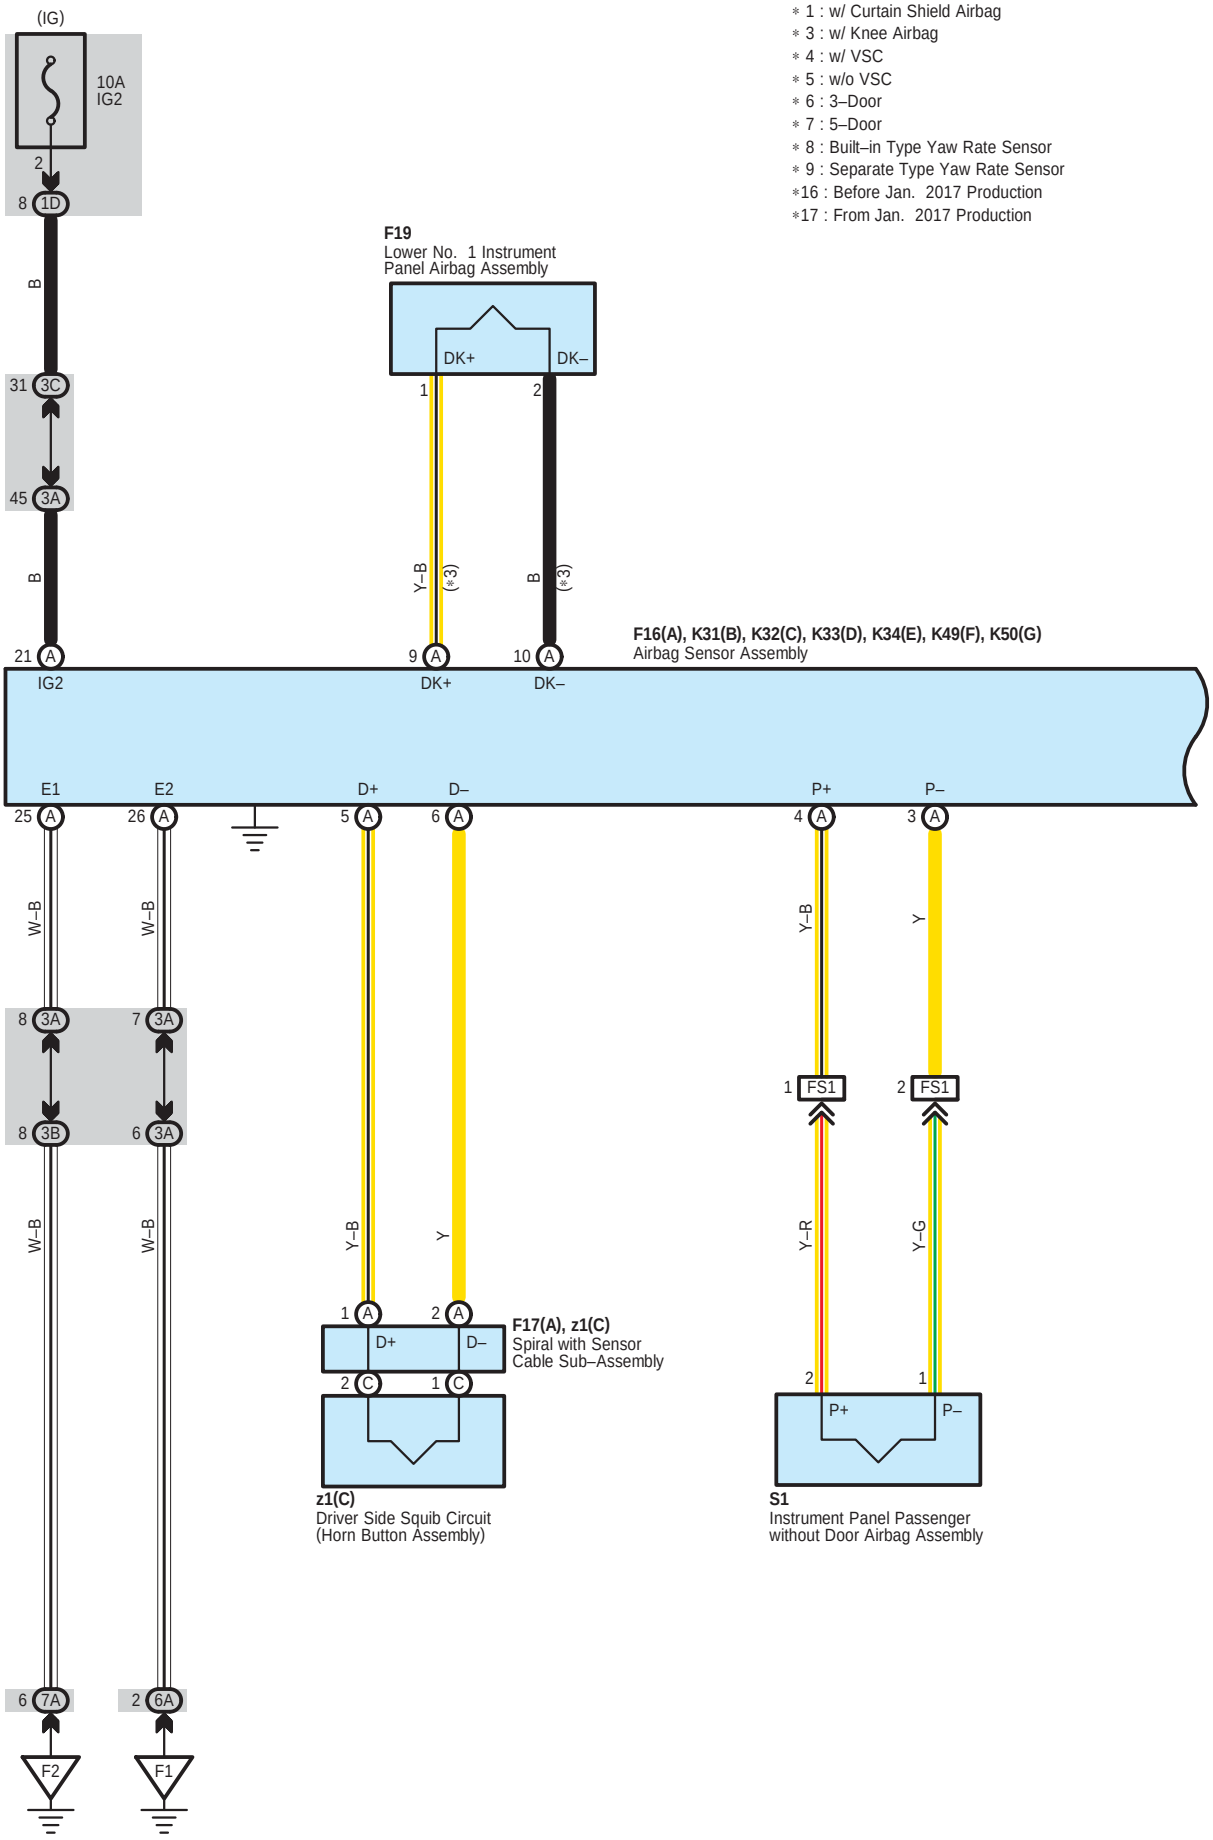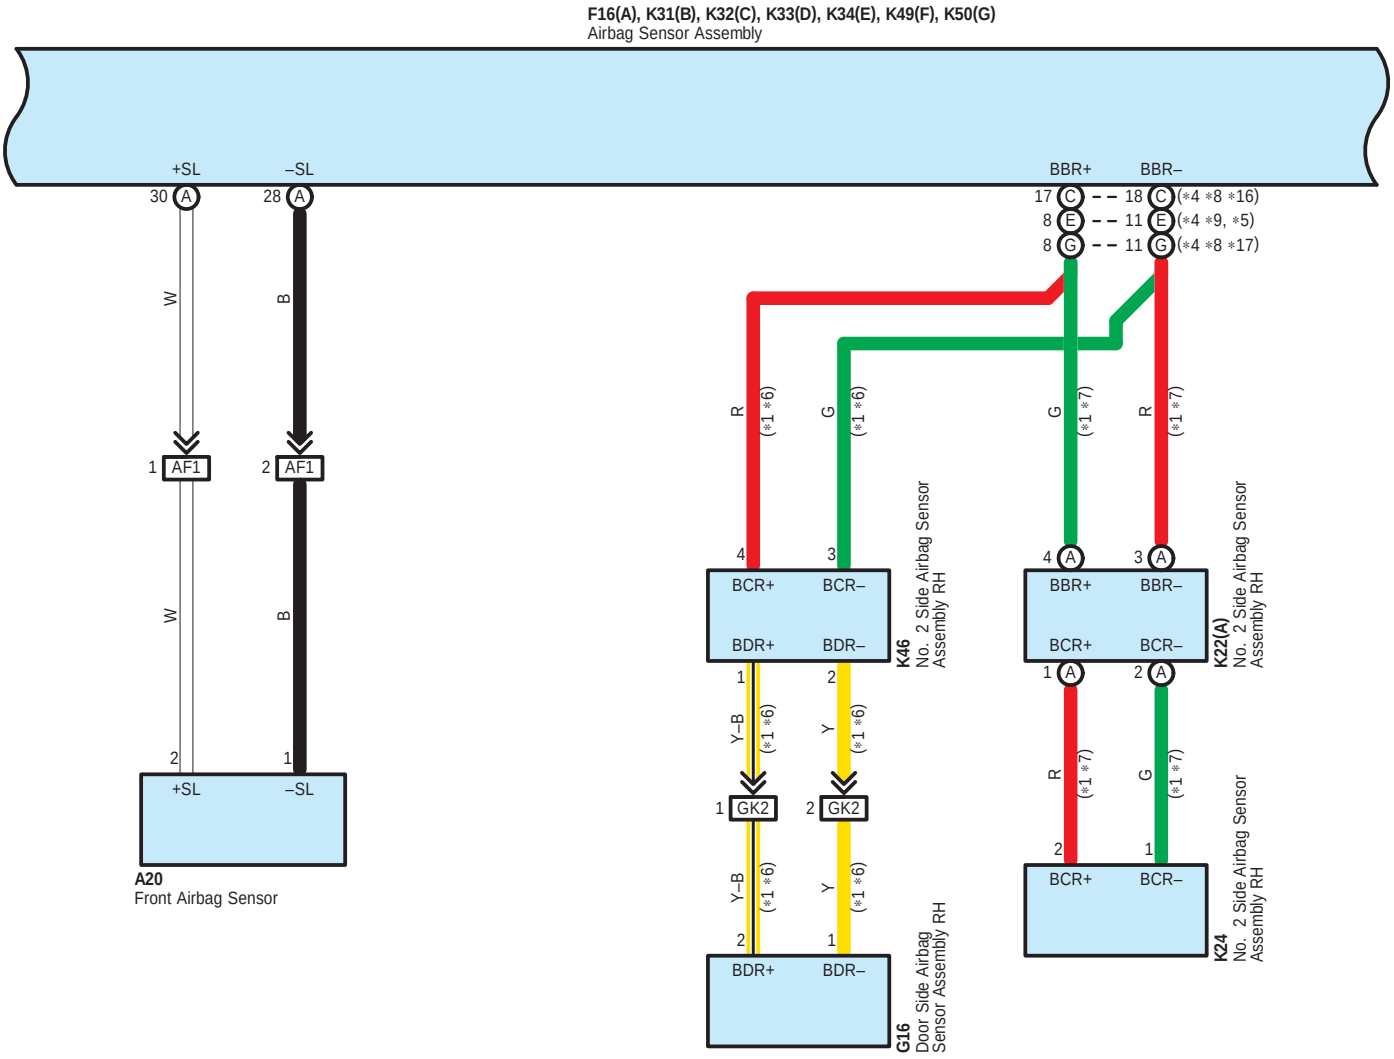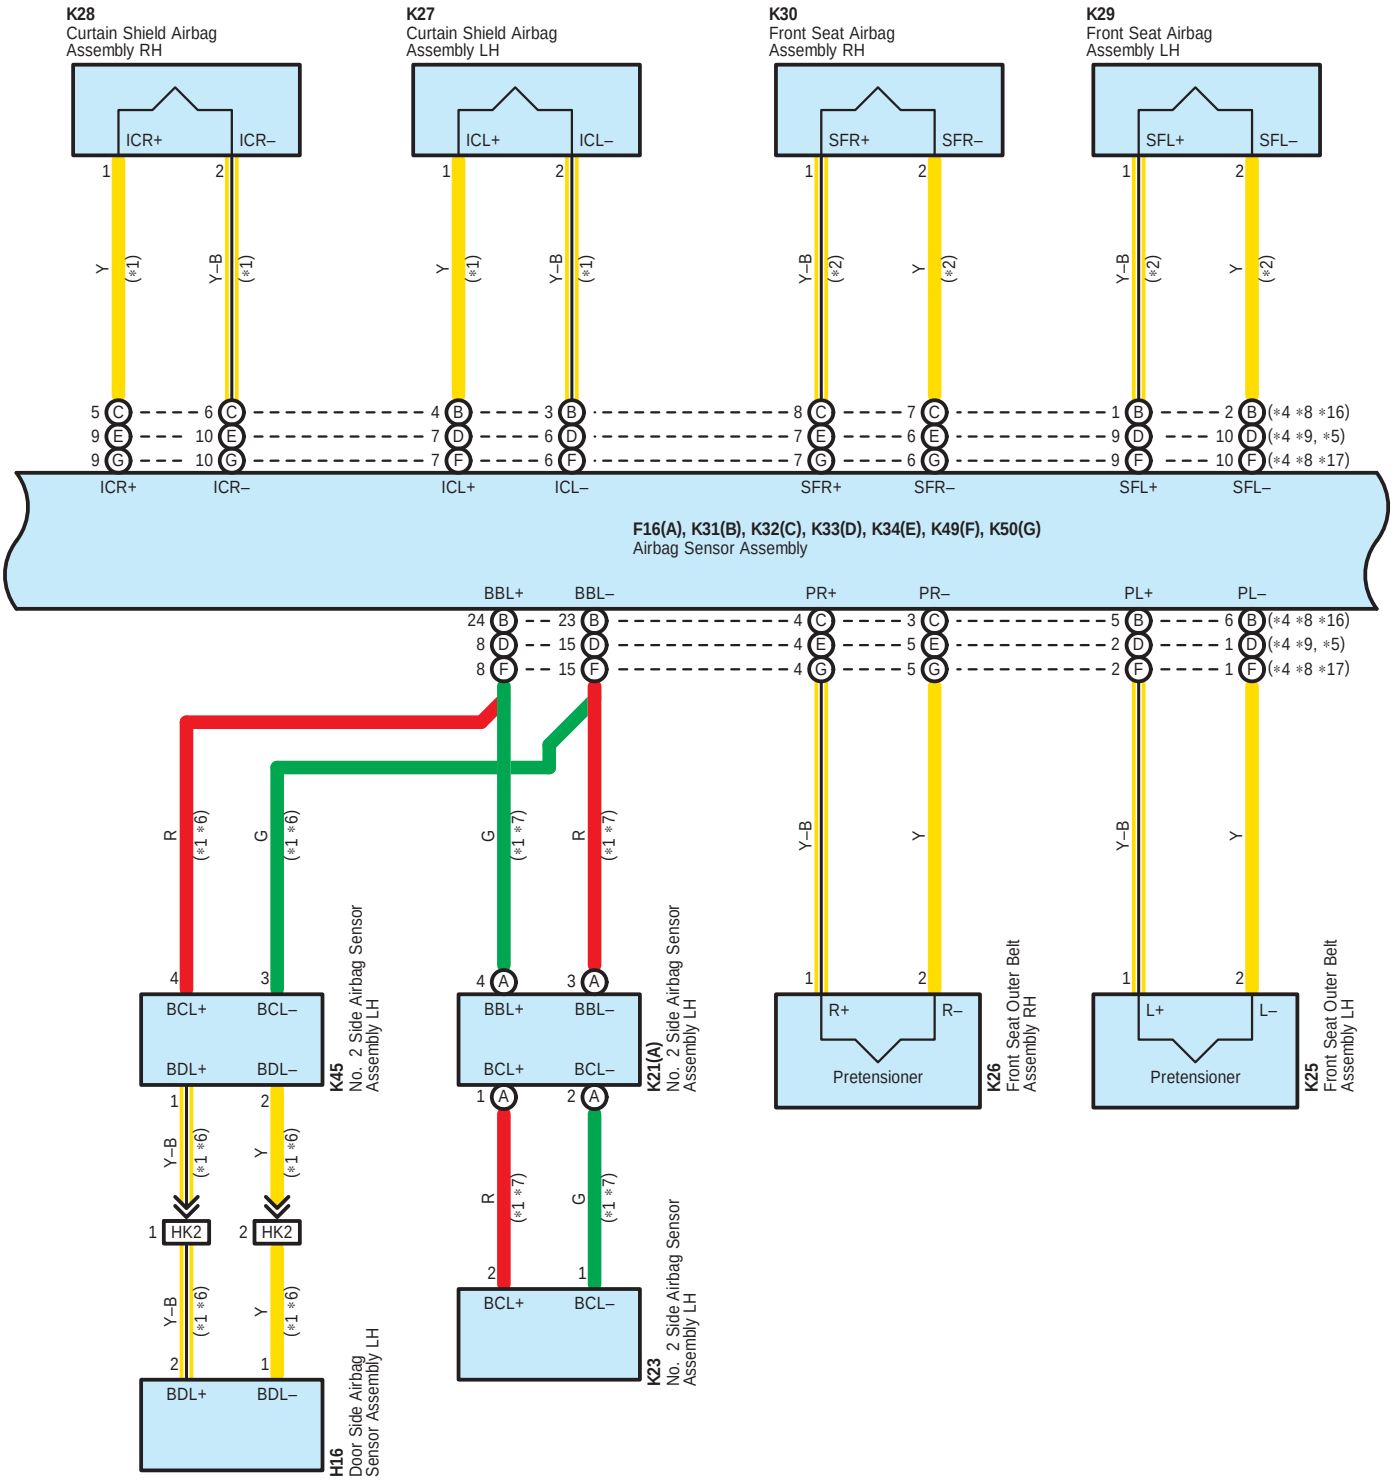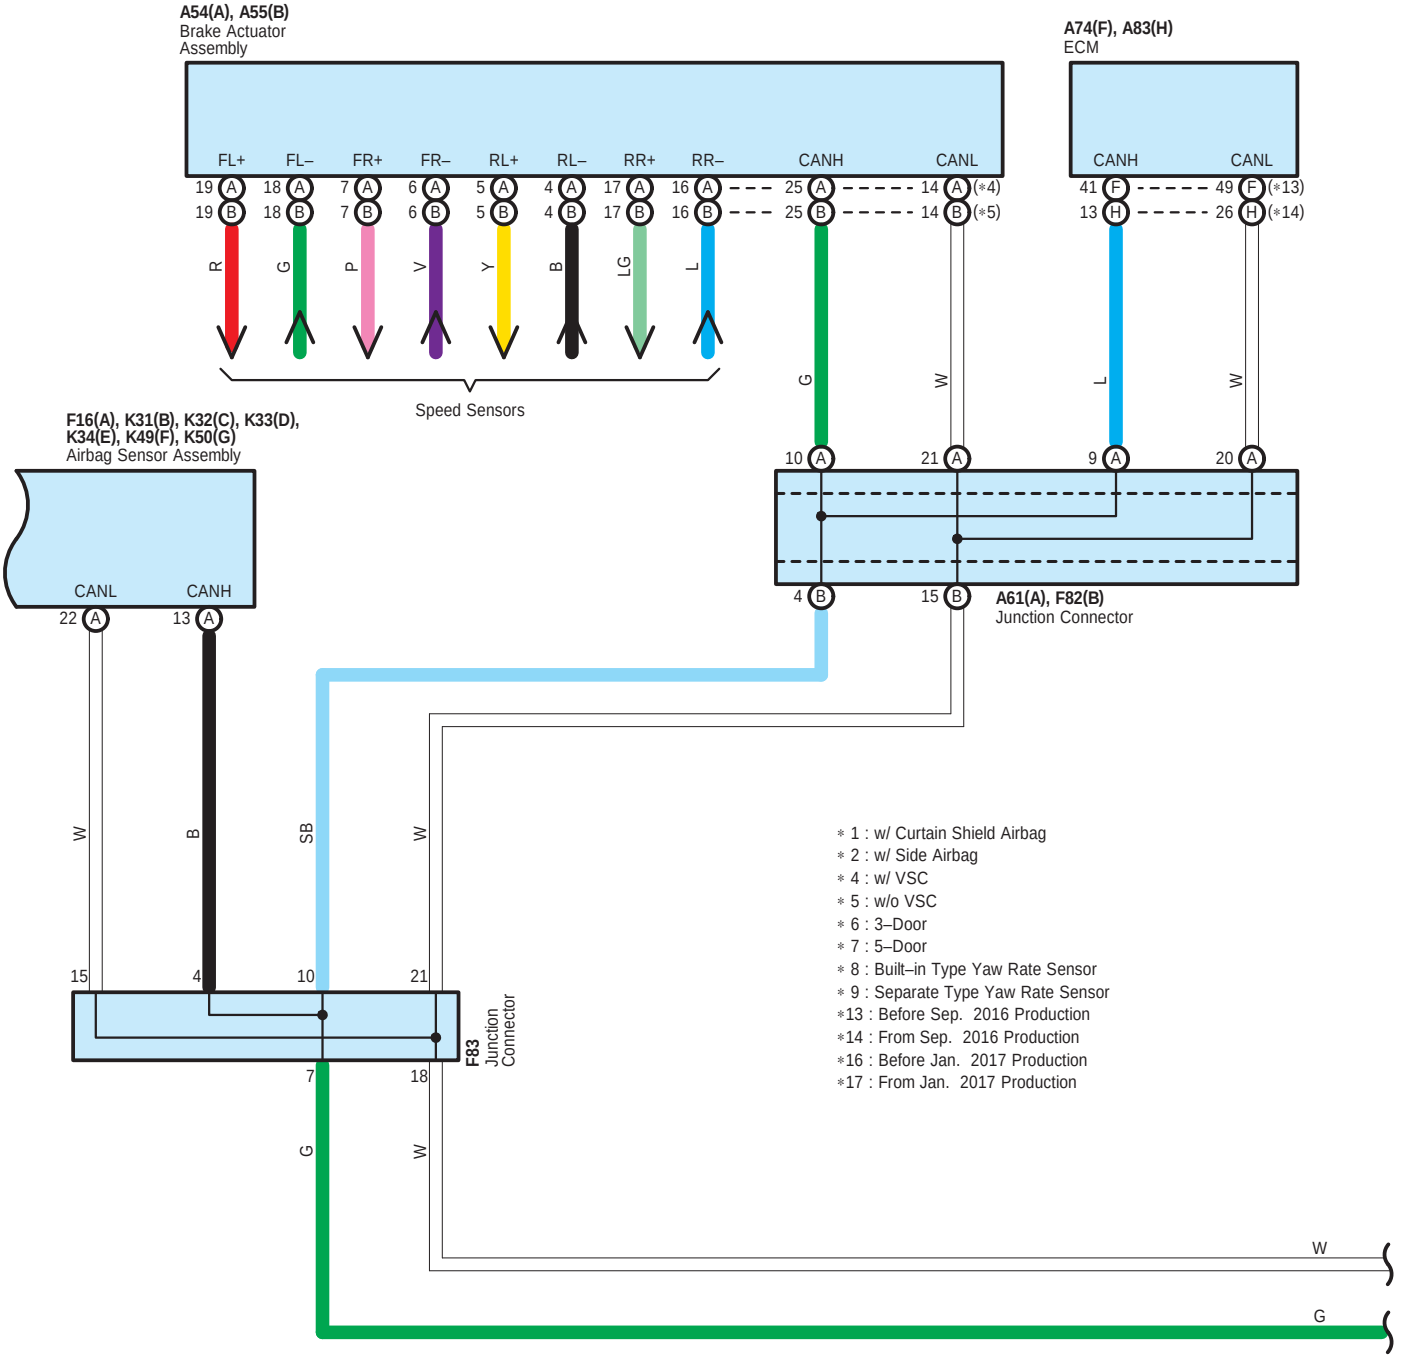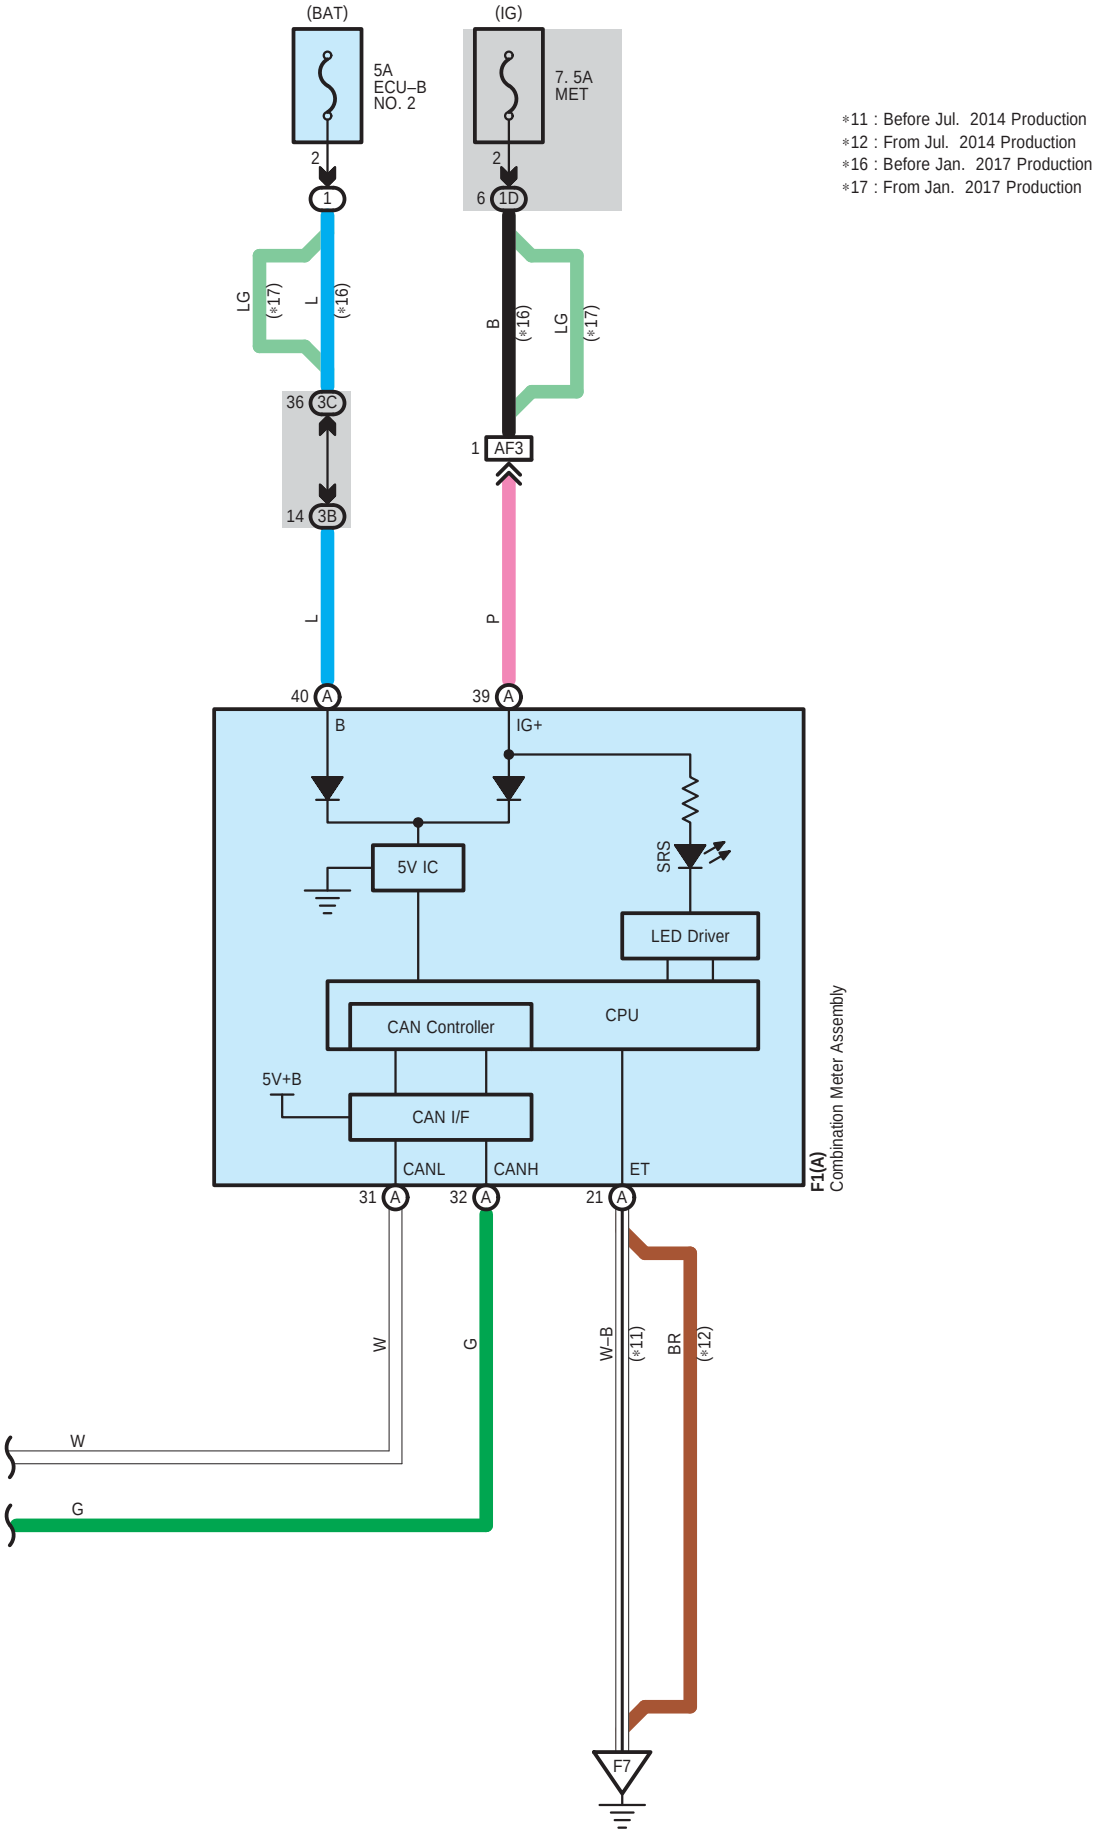


*11 : Before Jul. 2014 Production
*12 : From Jul. 2014 Production
*16 : Before Jan. 2017 Production
*17 : From Jan. 2017 Production


A 20
Yellow

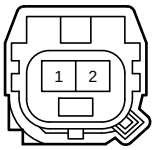


A 54
Black

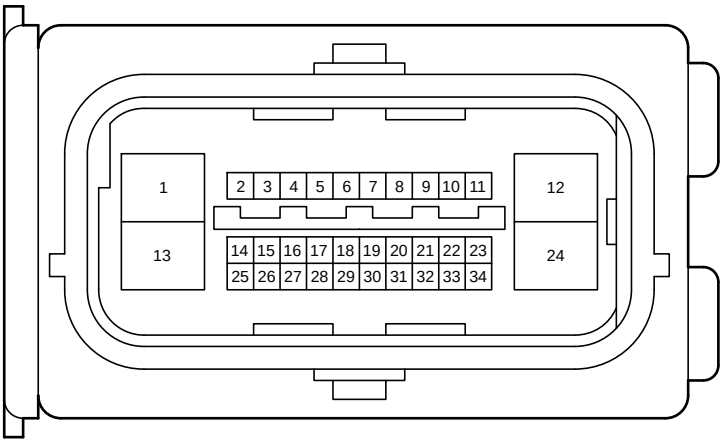


A 55
Black

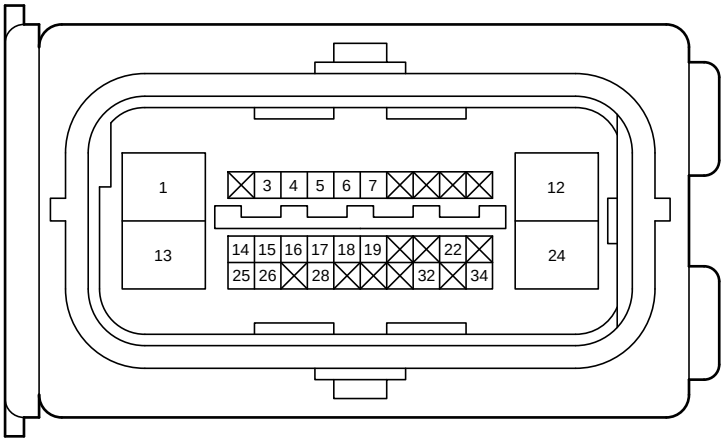


A 61
Blue

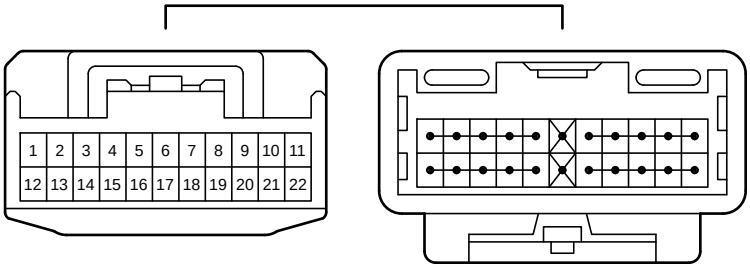


A 74
Black

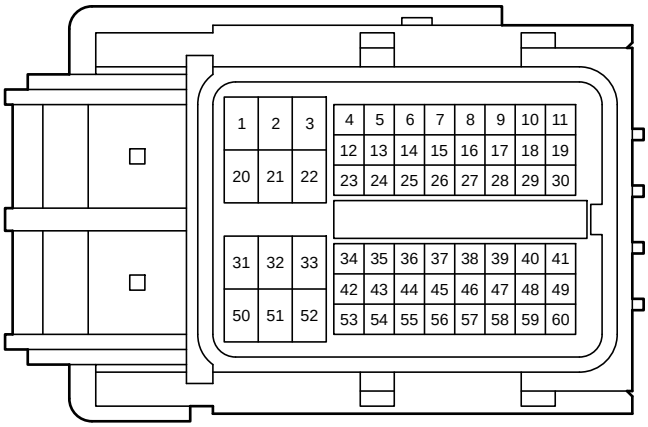


A 83
Black

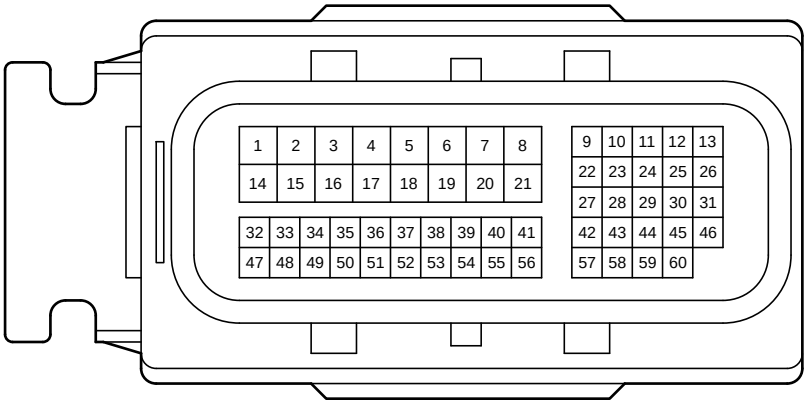


F 1
Black

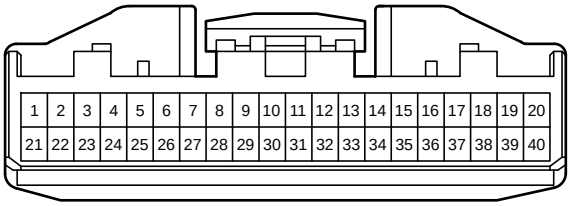


F 16
Yellow

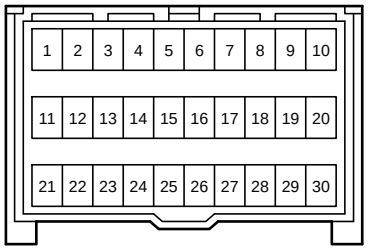


F 17
Yellow

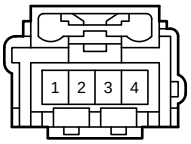


F 19
Black




F 82
Blue

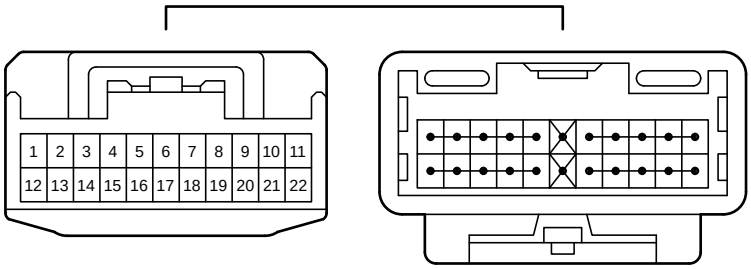


F 83
Gray

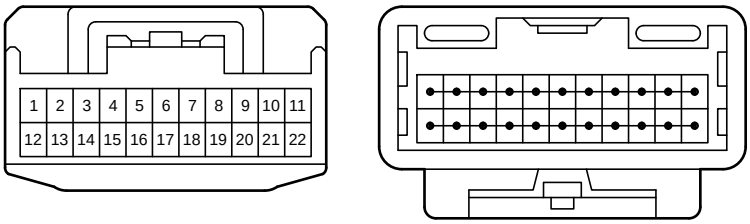


G 16
Yellow

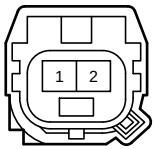


H 16
Yellow

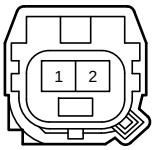


K 21
Yellow

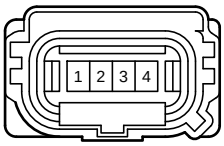


K 22
Yellow

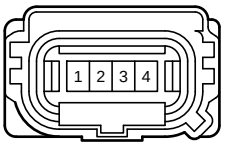


K 23
Yellow

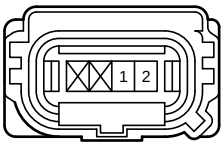


K 24
Yellow

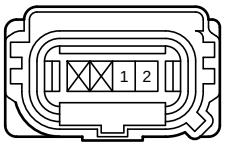


K 25
Black




K 26
Black




K 27
Black

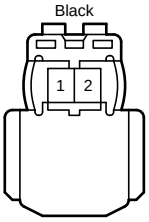


K 28
Black

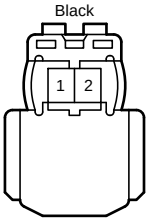


K 29
Yellow

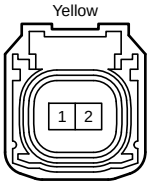


K 30
Yellow

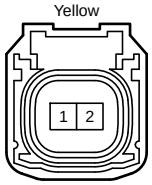


K 31
Yellow

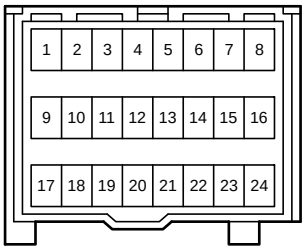


K 32
Yellow

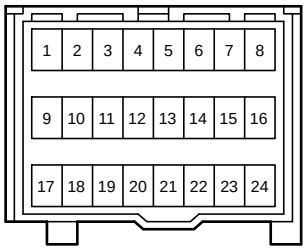


K 33
Yellow

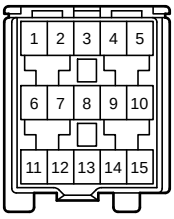


K 34
Yellow

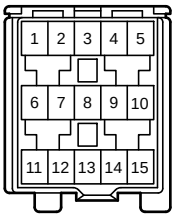


K 45
Yellow

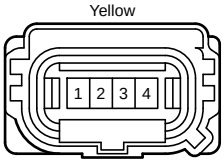


K 46
Yellow

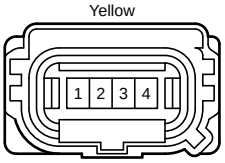


K 49
Yellow

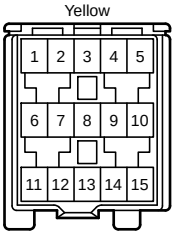


K 50
Yellow

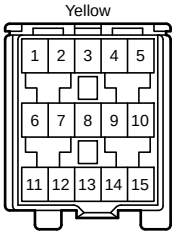


S 1
Orange

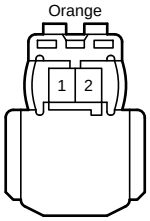


z 1
Orange




1D
White

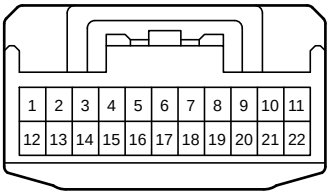


3A
White

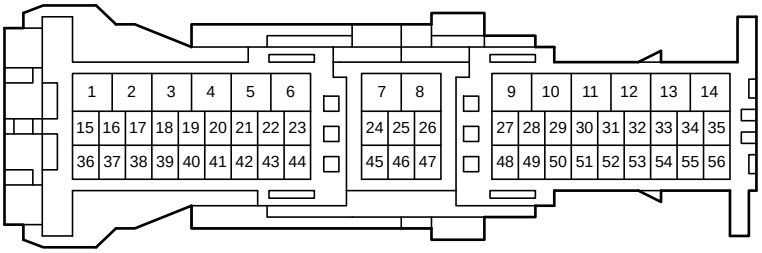


3B
White

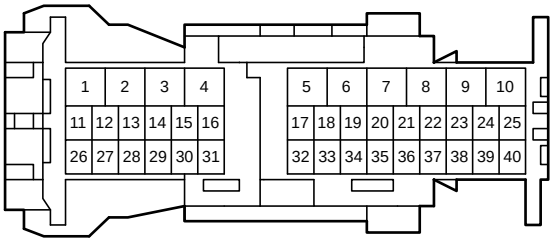


3C
White

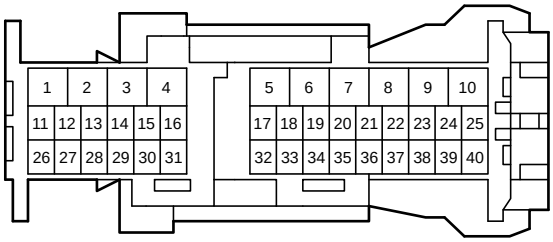


6A
White

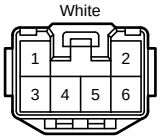


7A
White

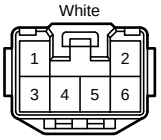


AF1
Yellow

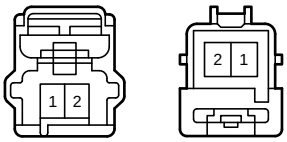


AF3
Black

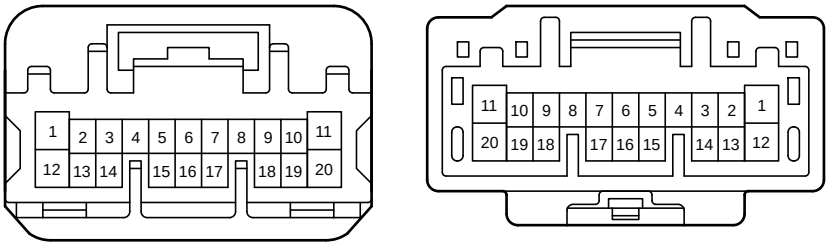

FS1
Yellow

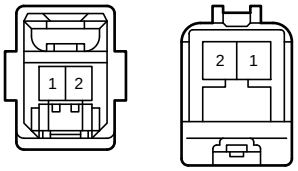

GK2
Yellow

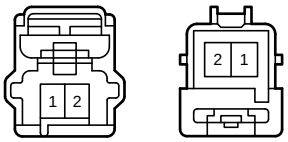

HK2
Yellow

