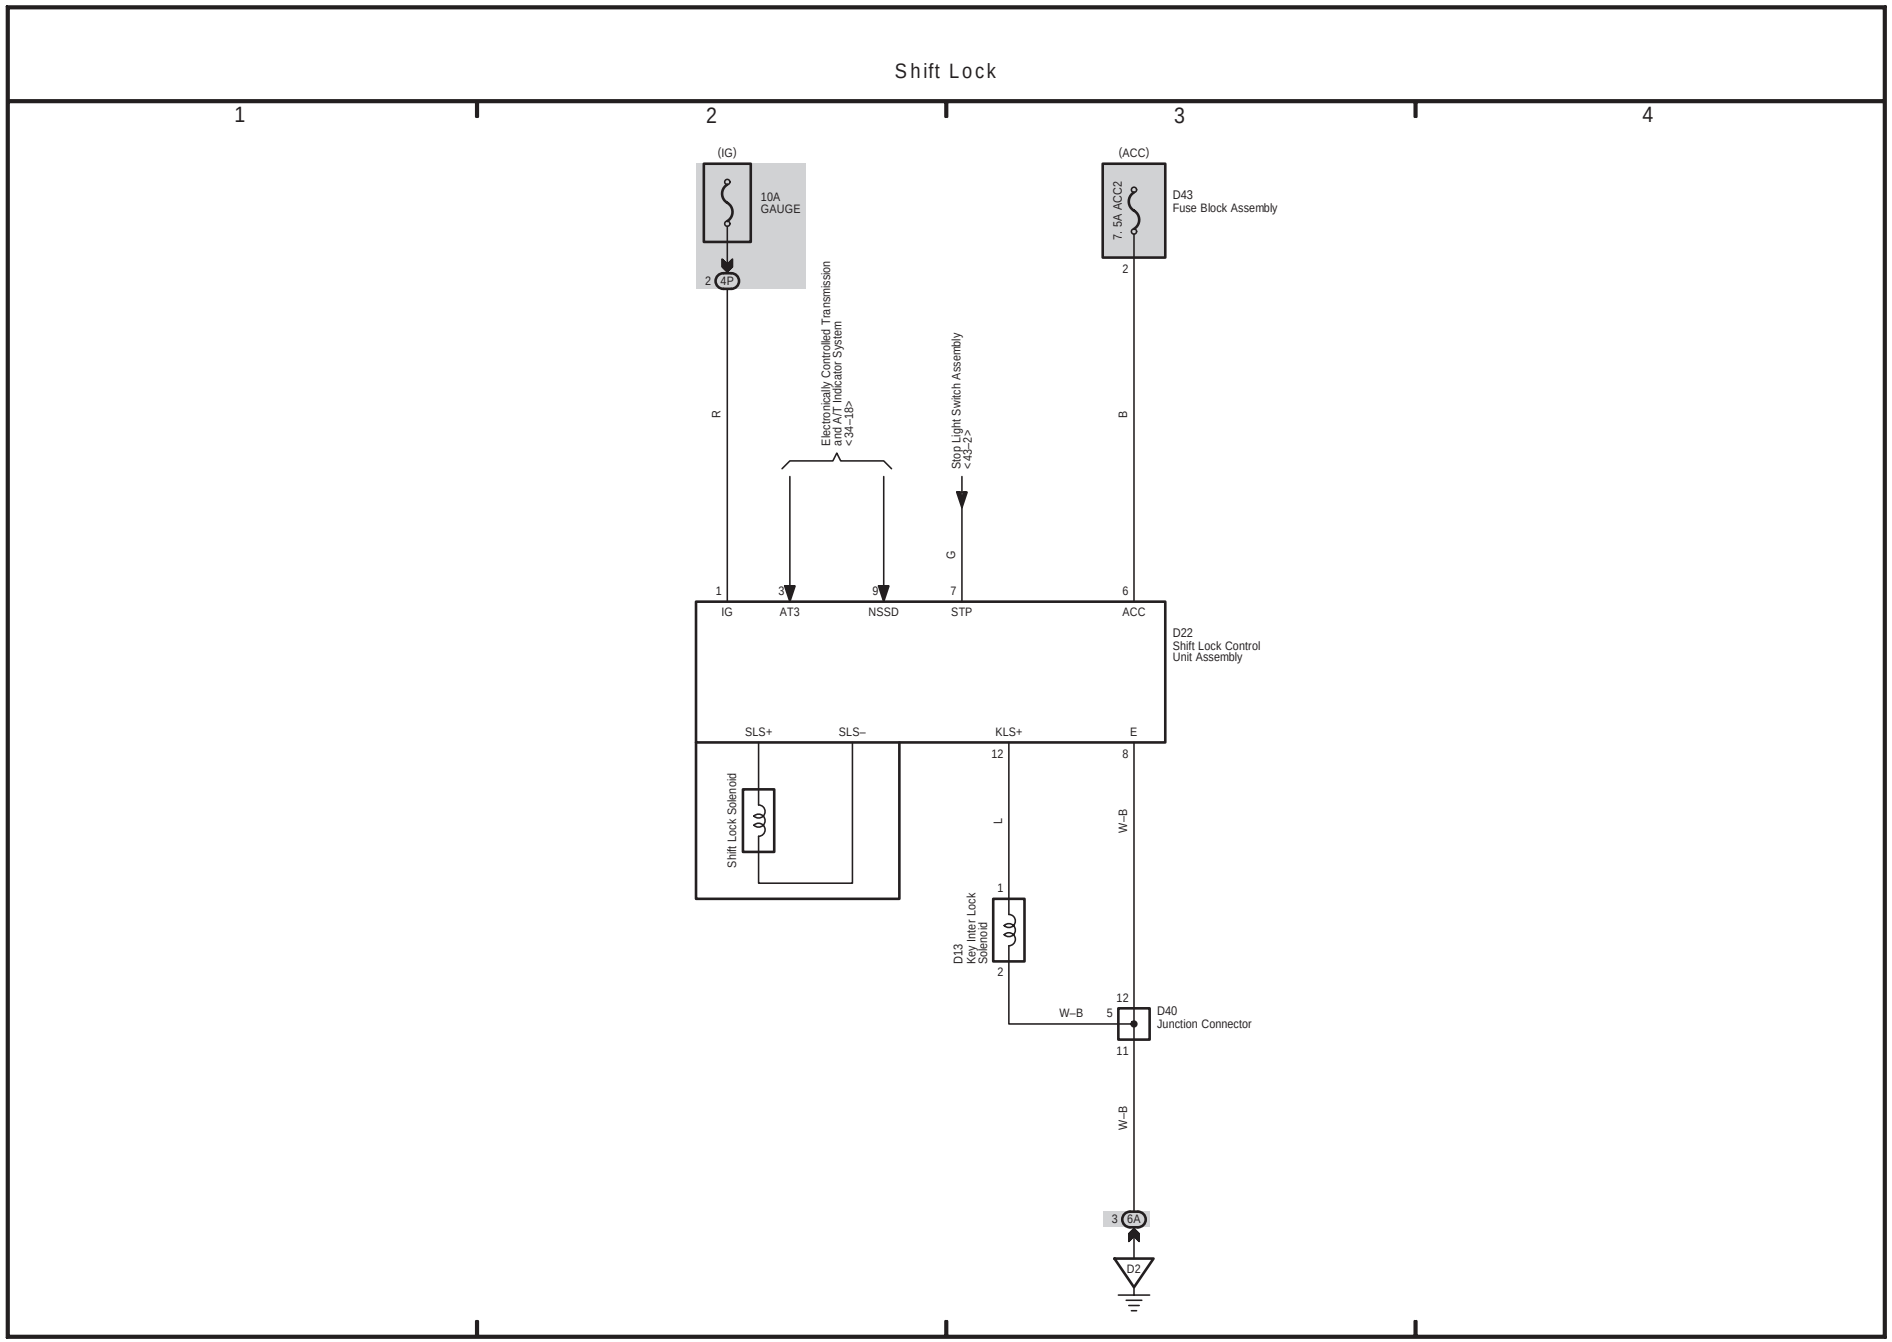

Shift Lock
1
2
3
4
(IG)
10A
GAUGE
2
4P
(ACC)
7. 5A ACC2
D43
Fuse Block Assembly
2
R
Electronically Controlled Transmission and A/T Indicator System
<34-19>
Stop Light Switch Assembly
<43-2>
B
G
1
3
9
7
6
IG
AT3
NSSD
STP
ACC
D22
Shift Lock Control
Unit Assembly
SLS+
SLS–
KLS+
E
12
8
Shift Lock Solenoid
L
W–B
1
D13
Key Inter Lock
Solenoid
2
12
W–B
5
D40
Junction Connector
11
W–B
3
6A
D2