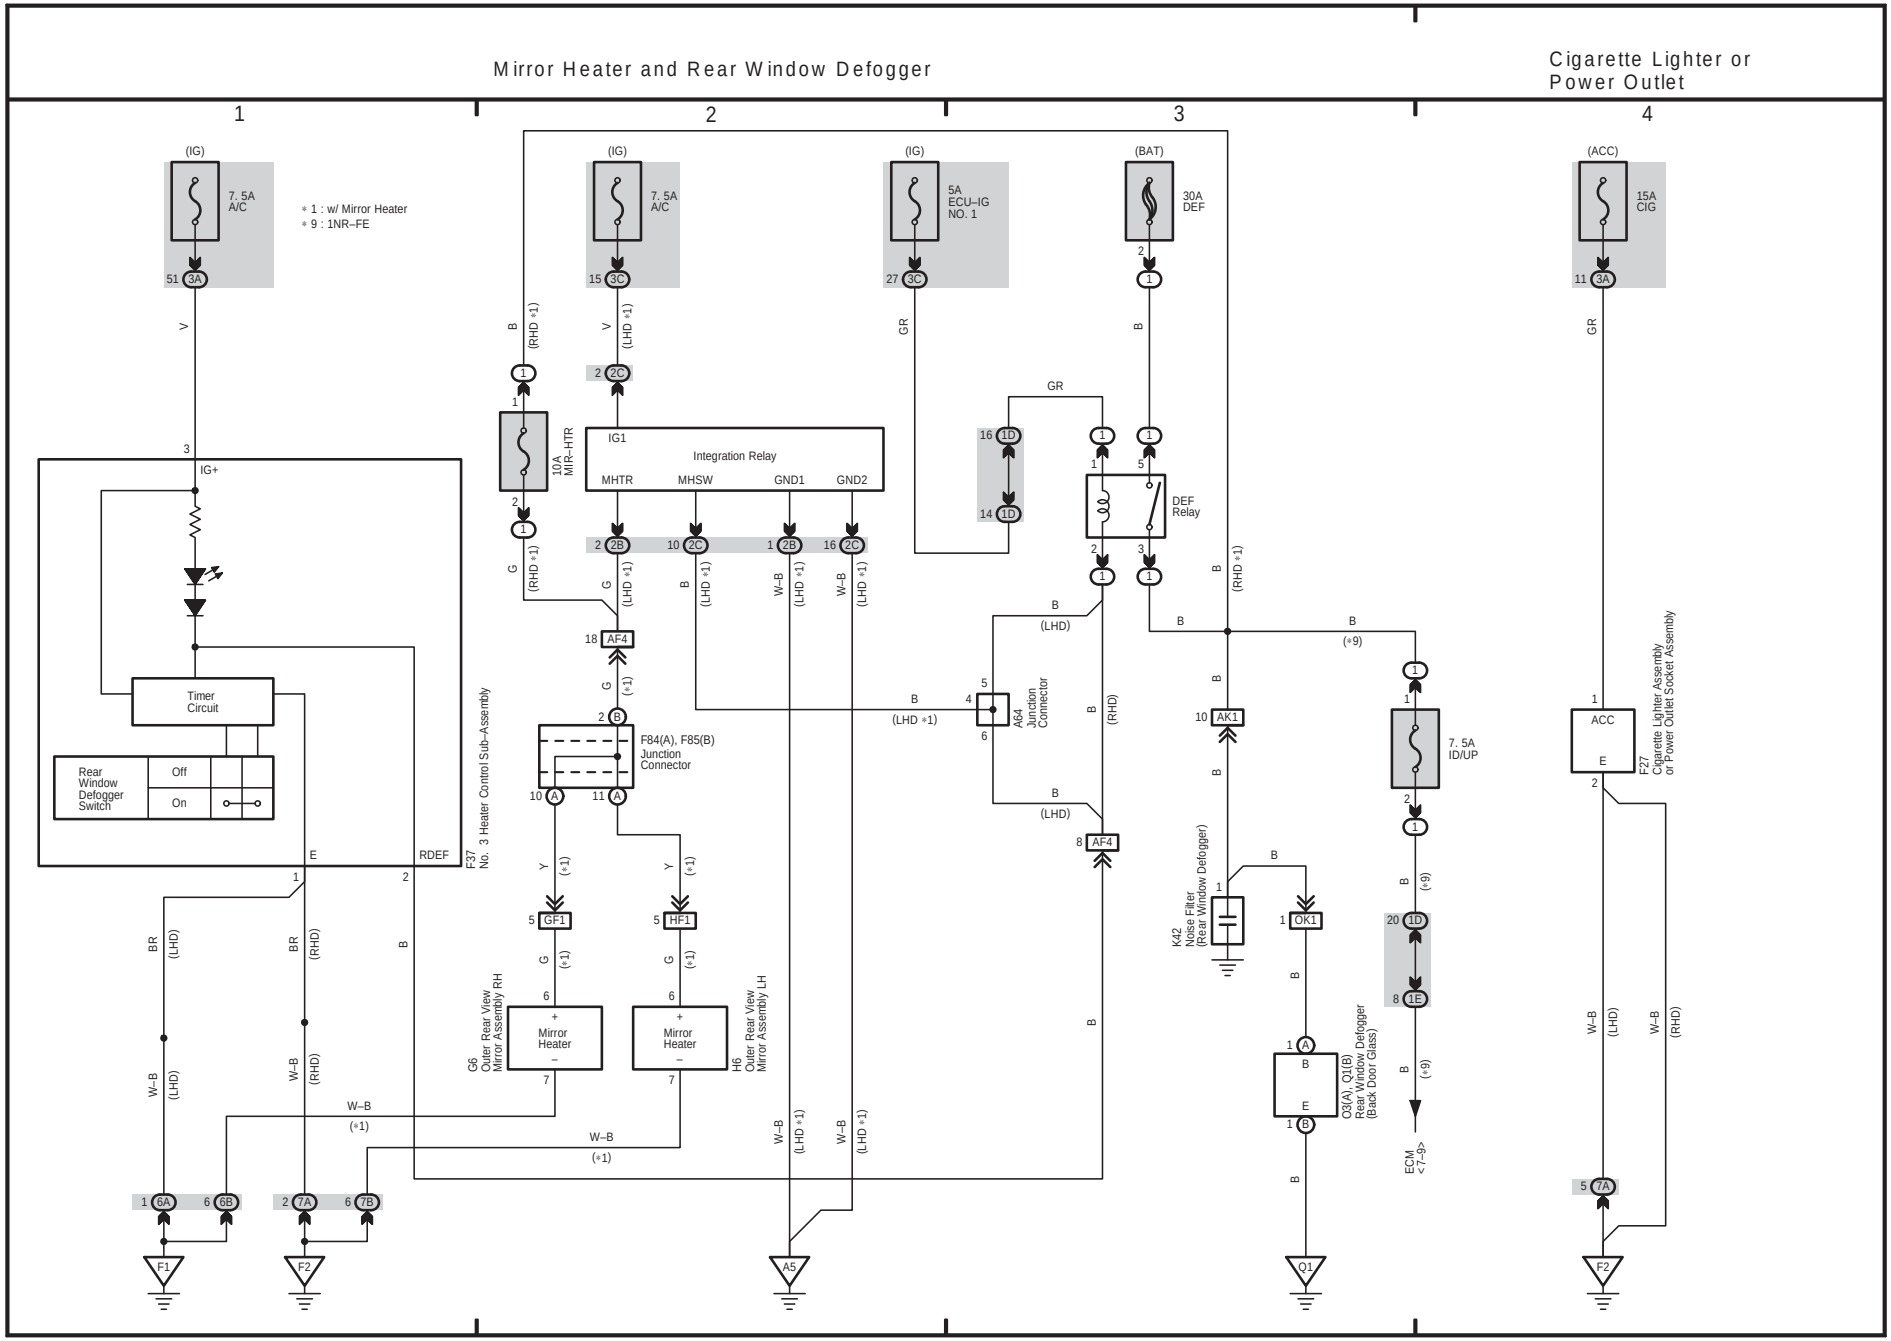

Mirror Heater and Rear Window Defogger
Cigarette Lighter or Power Outlet
1
2
3
4
(IG)
7. 5A A/C
* 1 : w/ Mirror Heater
* 9 : 1NR–FE
51 3A
V
3
IG+
Timer Circuit
Rear Window Defogger Switch
Off
On
E
RDEF
F37 No. 3 Heater Control Sub–Assembly
1
2
B/R (LHD)
B/R (RHD)
B
W–B (LHD)
W–B (RHD)
W–B (*1)
1 6A
6 6B
2 7A
6 7B
F1
F2
(IG)
7. 5A A/C
15 3C
V (LHD *1)
B (RHD *1)
2 2C
1
10A MIR–HTR
IG1
Integration Relay
MHTR
MHSW
GND1
GND2
2 2B
10 2C
1 2B
16 2C
G (RHD *1)
G (LHD *1)
B (LHD *1)
W–B (LHD *1)
18 AF4
G (*1)
2 B
F84(A), F85(B) Junction Connector
10 A
11 A
Y (*1)
5 GF1
5 HF1
G (*1)
6
7
G6 Outer Rear View Mirror Assembly RH
H6 Outer Rear View Mirror Assembly LH
Mirror Heater
(IG)
5A ECU–IG NO. 1
27 3C
GR
16 1D
14 1D
(BAT)
30A DEF
2
1
B
DEF Relay
5
3
B (LHD)
B (RHD)
B (RHD *1)
4
5
6
A64 Junction Connector
8 AF4
B (LHD *1)
B (*9)
10 AK1
K42 Noise Filter (Rear Window Defogger)
1 OK1
1 A
1 B
E
Q3(A), Q1(B) Rear Window Defogger (Back Door Glass)
7. 5A ID/UP
20 1D
8 1E
ECM <7–9>
(ACC)
15A CIG
11 3A
GR
ACC
E
F27 Cigarette Lighter Assembly or Power Outlet Socket Assembly
5 7A
A5
Q1