

ROCKER OUTER PANEL (CUT-H): Hatchback 5 Door


F22843A

REPLACEMENT

REMOVAL

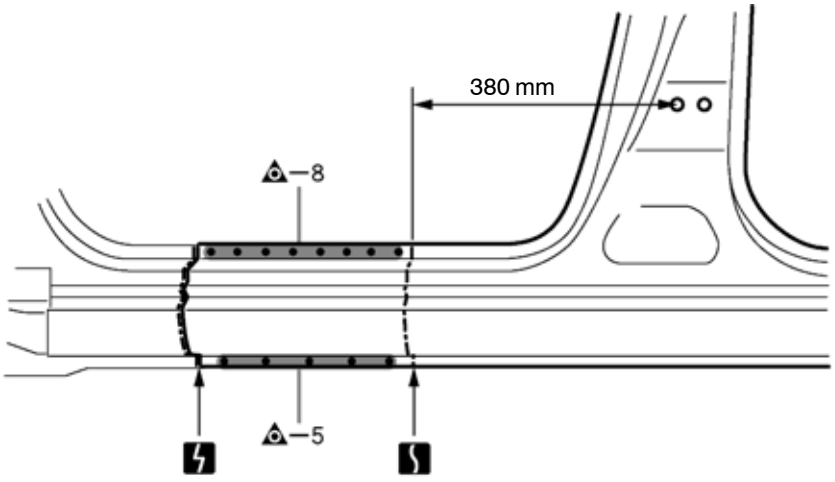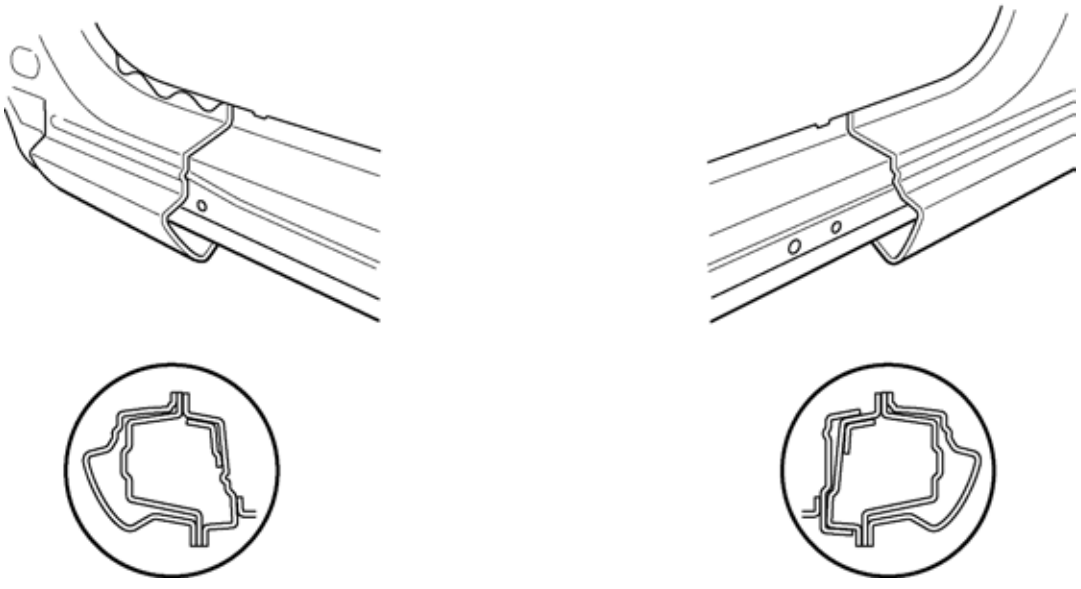



F22843

380 mm (14.96 in.)

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

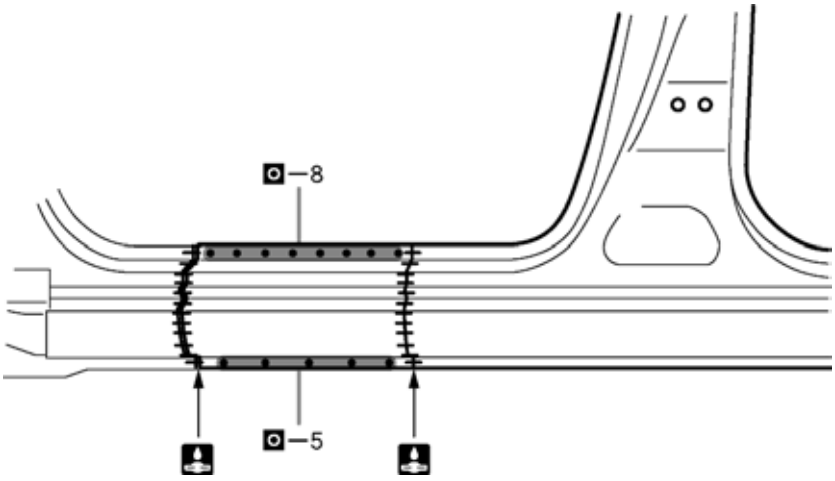


F22844

POINT


1 Inspect the fitting of the front door and other related parts before welding as this affects the appearance of the finish.

ROCKER OUTER PANEL (CUT-H): Sedan

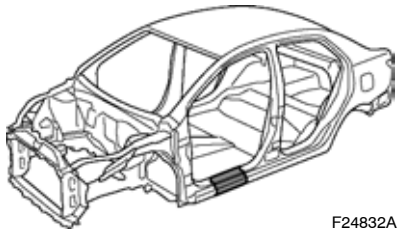
F24832A

REPLACEMENT

REMOVAL

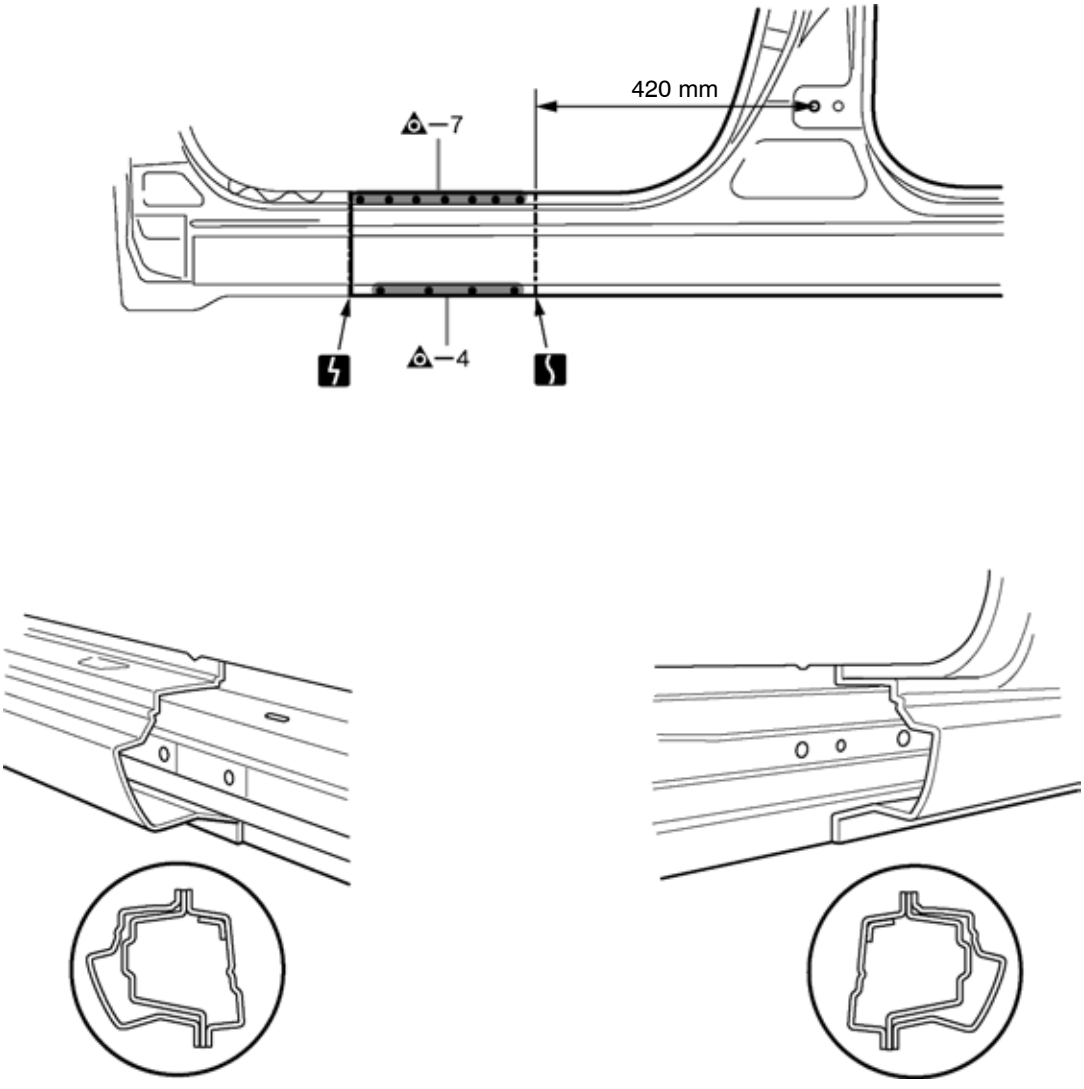


F24832-1

420 mm (16.54 in.)

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply polyurethane foam to the corresponding parts.
- After welding, apply body sealer and undercoating to the corresponding parts.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

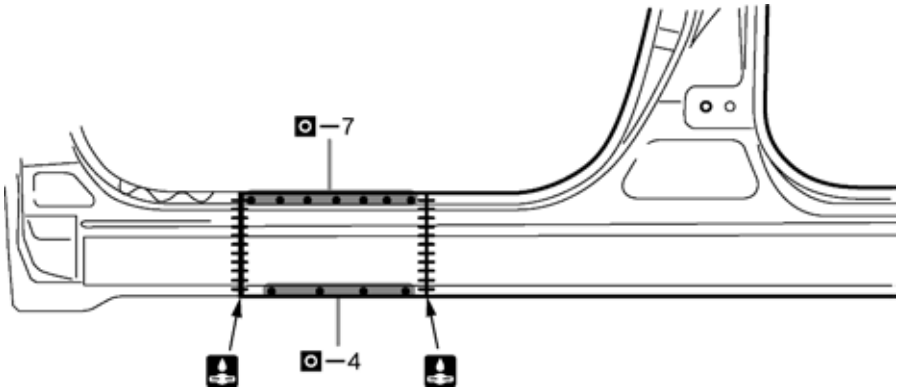

F24832-2

POINT

1 Inspect the fitting of the front door and other related parts before welding as this affects the appearance of the finish.