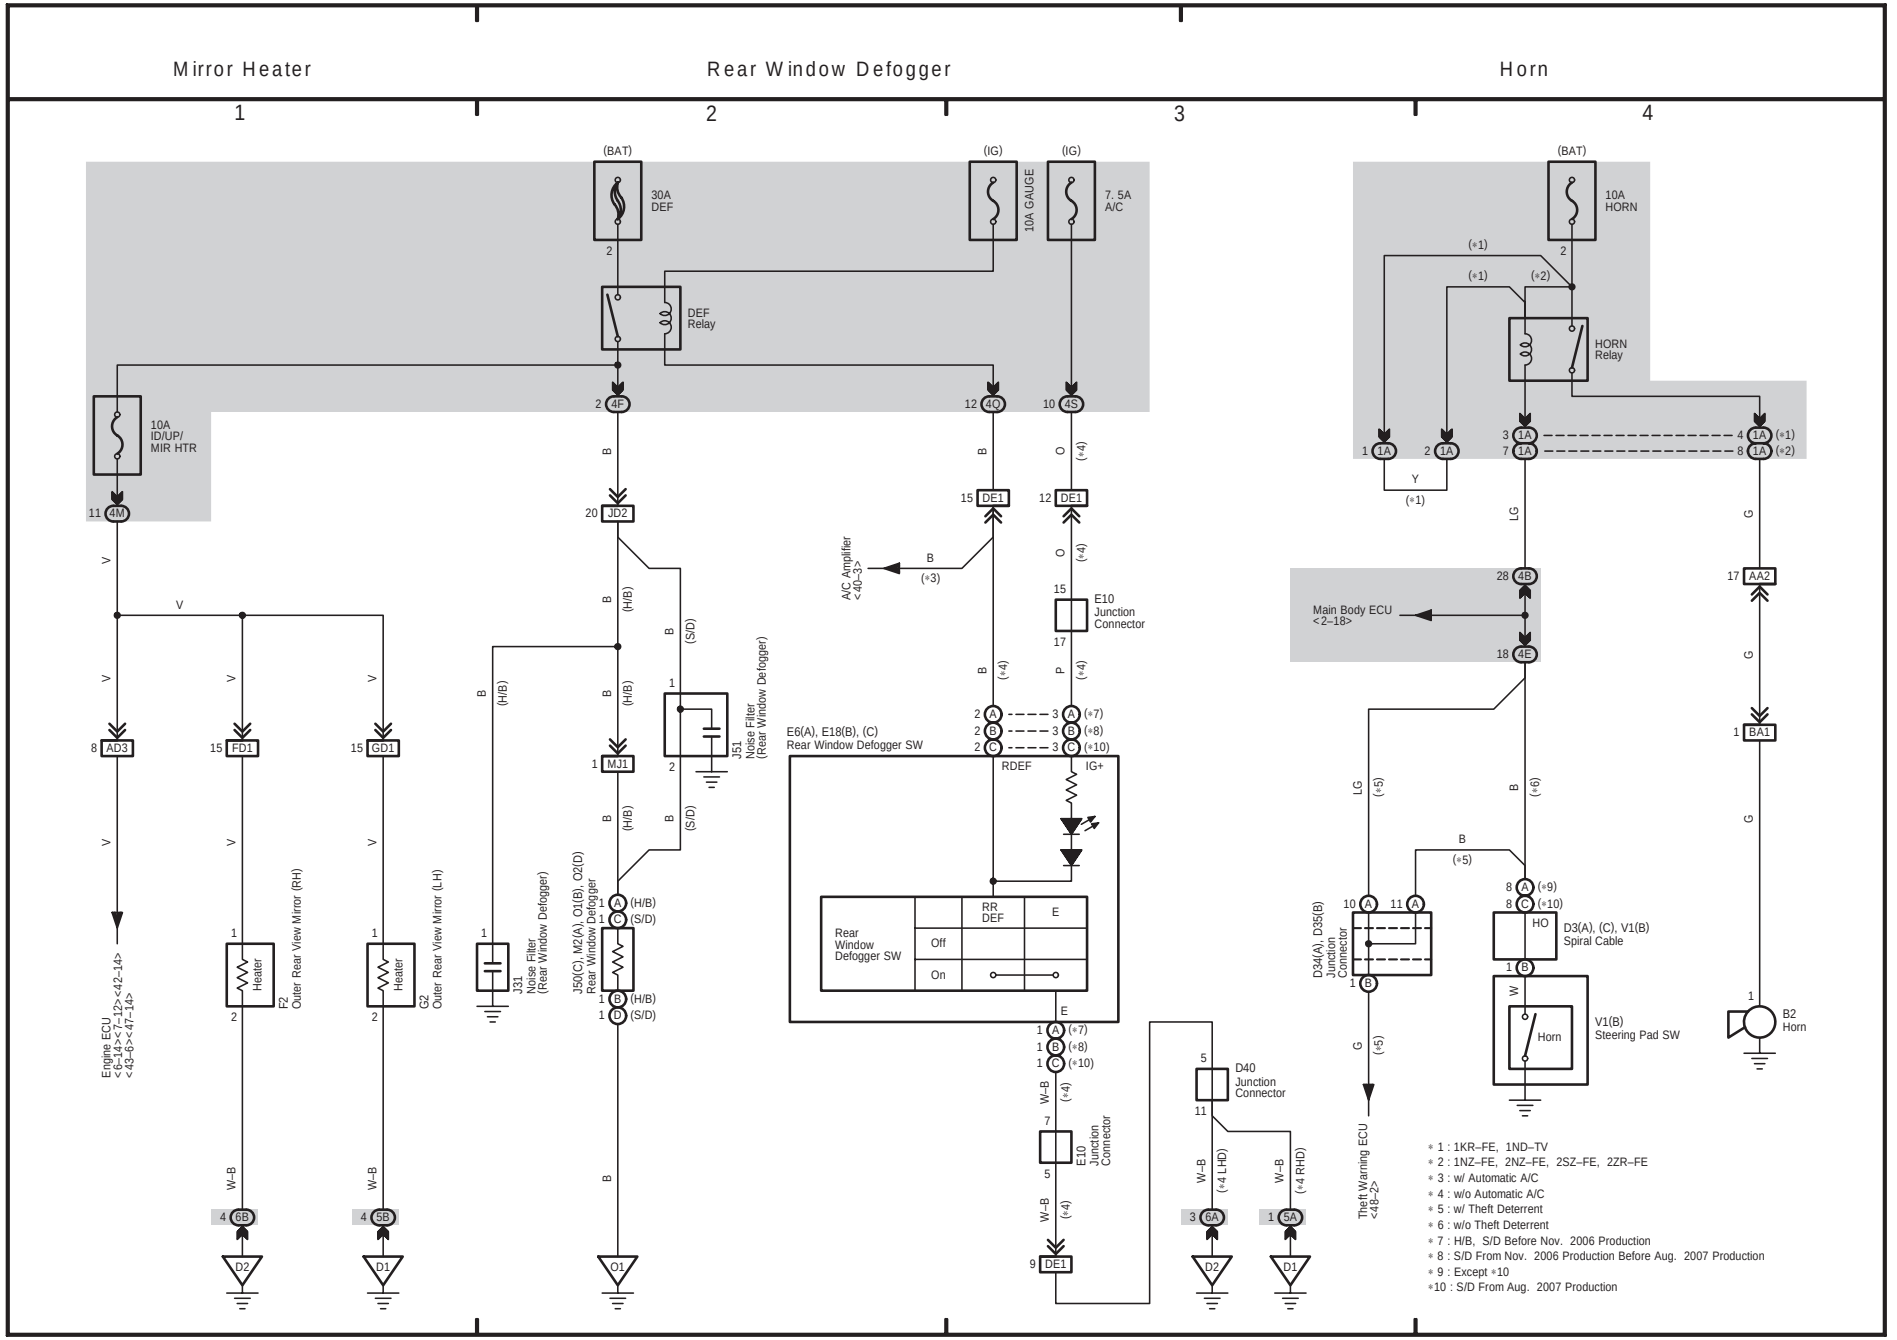

Mirror Heater
Rear Window Defogger
Horn
1
2
3
4
(BAT)
30A DEF
10A GAUGE
7. 5A A/C
DEF Relay
10A ID/UP/ MIR HTR
10A HORN
HORN Relay
A/C Amplifier <40–3>
E10 Junction Connector
E6(A), E18(B), (C) Rear Window Defogger SW
RDEF
IG+
Rear Window Defogger SW
RR DEF
E
Off
On
Main Body ECU <2–18>
Engine ECU <6–14><7–12><42–14> <43–6><47–14>
F2 Outer Rear View Mirror (RH) Heater
G2 Outer Rear View Mirror (LH) Heater
J31 Noise Filter (Rear Window Defogger)
J50(C), M2(A), O1(B), O2(D) Rear Window Defogger
J51 Noise Filter (Rear Window Defogger)
D40 Junction Connector
D34(A), D35(B) Junction Connector
D3(A), (C), V1(B) Spiral Cable
V1(B) Steering Pad SW
Horn
B2 Horn
Theft Warning ECU <48–2>
∗1 : 1KR–FE, 1ND–TV
∗2 : 1NZ–FE, 2NZ–FE, 2SZ–FE, 2ZR–FE
∗3 : w/ Automatic A/C
∗4 : w/o Automatic A/C
∗5 : w/ Theft Deterrent
∗6 : w/o Theft Deterrent
∗7 : H/B, S/D Before Nov. 2006 Production
∗8 : S/D From Nov. 2006 Production Before Aug. 2007 Production
∗9 : Except ∗10
∗10 : S/D From Aug. 2007 Production