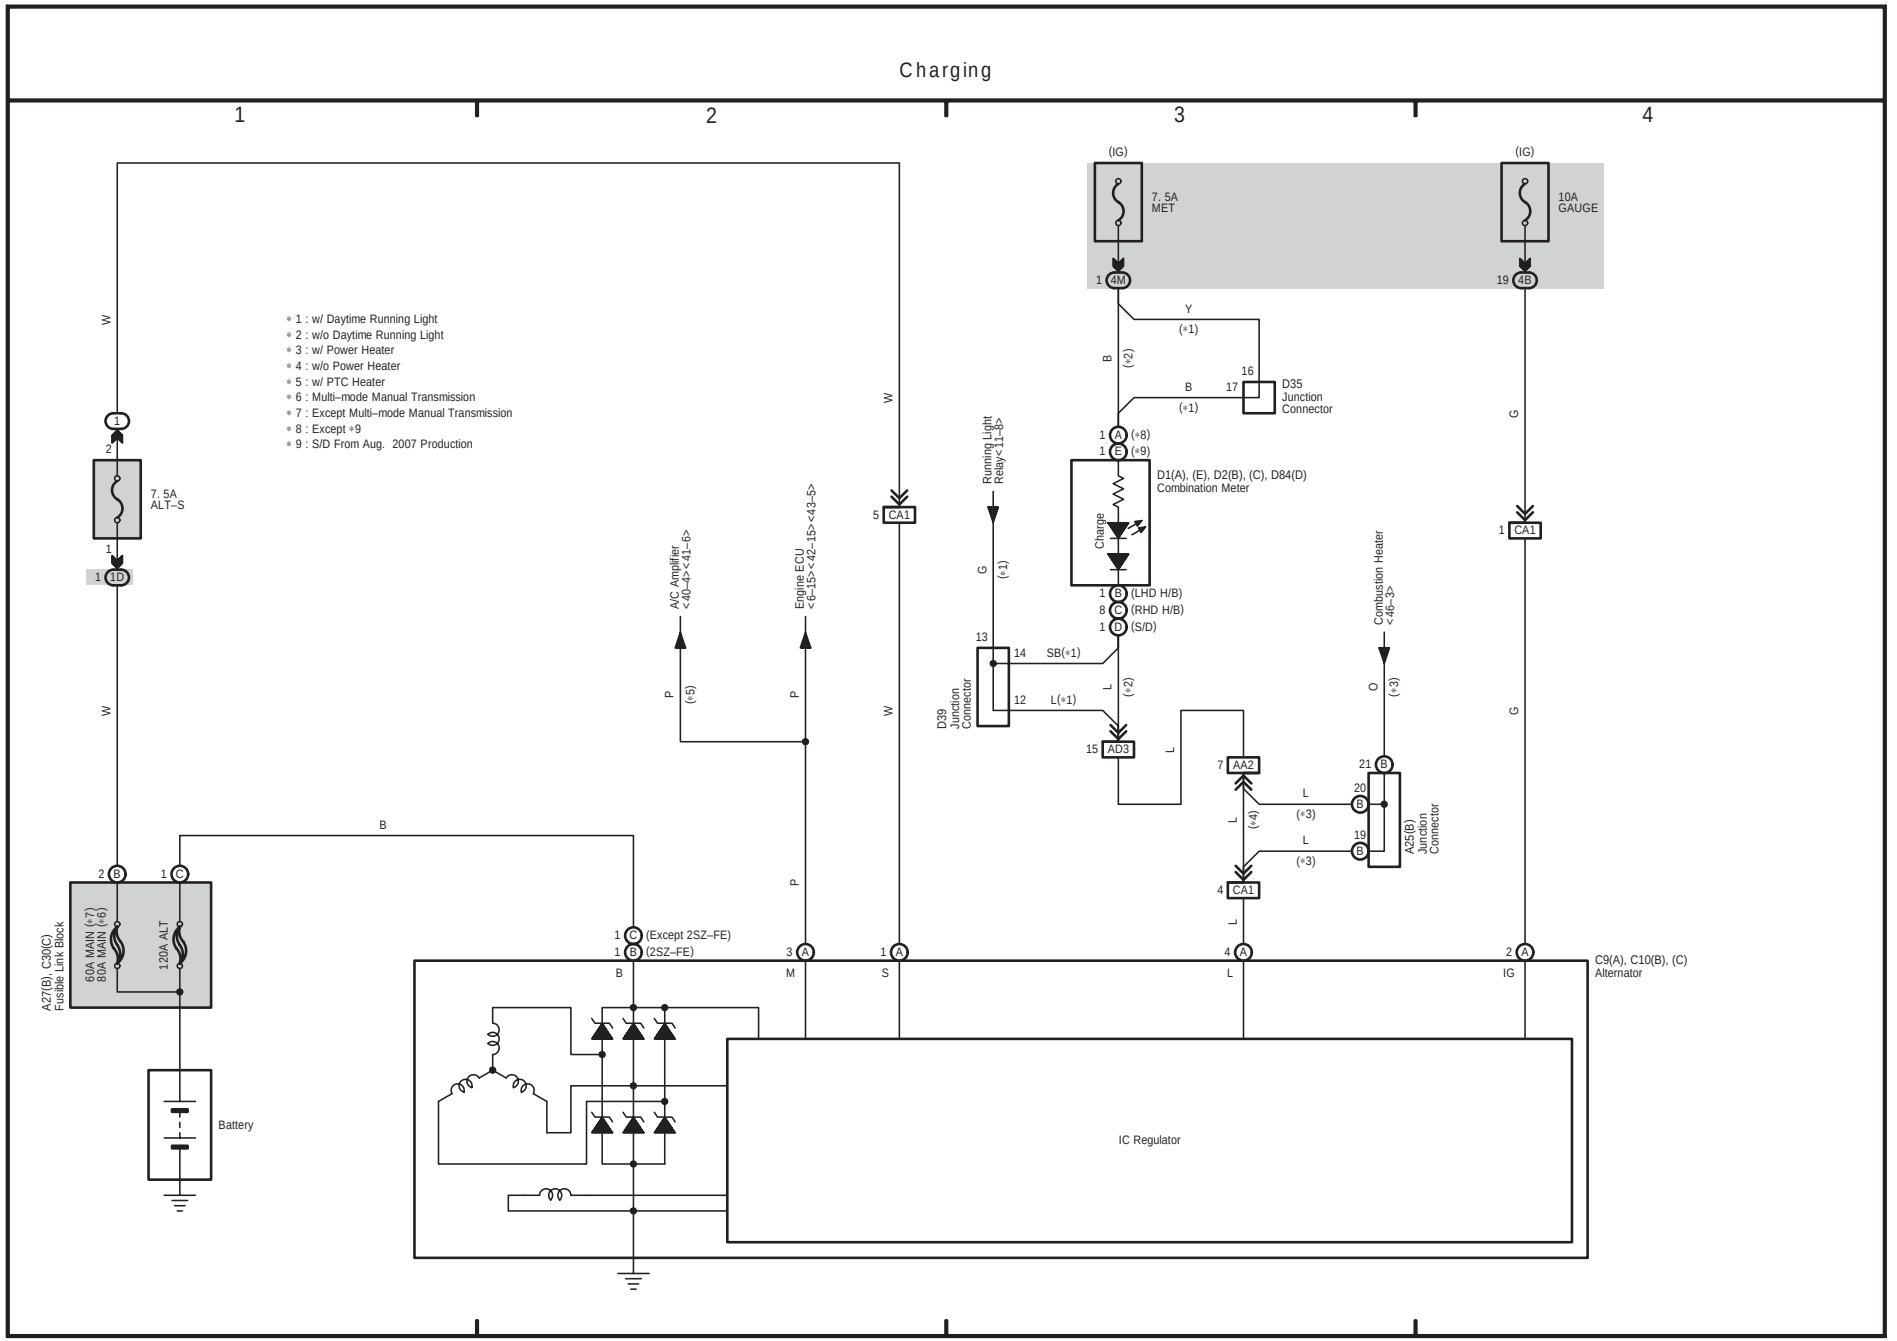

Charging
1
2
3
4
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : w/ Power Heater
* 4 : w/o Power Heater
* 5 : w/ PTC Heater
* 6 : Multi–mode Manual Transmission
* 7 : Except Multi–mode Manual Transmission
* 8 : Except *9
* 9 : S/D From Aug. 2007 Production
(IG)
7. 5A MET
10A GAUGE
7. 5A ALT–S
A27(B), C30(C) Fusible Link Block
60A MAIN (*7)
80A MAIN (*6)
120A ALT
Battery
A/C Amplifier <40–45><41–6>
Engine ECU <6–15><42–15><43–5>
Running Light Relay<11–6>
D1(A), (E), D2(B), (C), D84(D) Combination Meter
Charge
(LHD H/B)
(RHD H/B)
(S/D)
D35 Junction Connector
D39 Junction Connector
Combustion Heater <46–3>
A25(B) Junction Connector
(Except 2SZ–FE)
(2SZ–FE)
B
M
S
L
IG
C9(A), C10(B), (C) Alternator
IC Regulator