




D33(A), (E), D66(D)
Main Body ECU
CANL
CANH
22 A -- 23 A (*2 *9)
16 D -- 15 D (*1)
22 E -- 23 E (*2 *10)
D31(B), (F)
Power Steering ECU
CANH
CANL
1 B --- 7 B (*9)
1 F --- 7 F (*10)
SB
(RHD)
W
(RHD)
Y
W
W
R
SB
W
16
5
4
15
1
12
11
22
D42
Junction Connector
13
2
6
17
7
18
3
14
W
O
GR
W
G
W
V
(RHD)
W
(RHD)
W
(RHD)
V
(RHD)
20 A -- 21 A (*9)
20 E -- 21 E (*10)
2
3
27
28
CANL
CANH
CANH
CANL
CANH
CANL
D63
Yaw Rate Sensor
D60
Certification ECU
D1(A), (E)
Combination Meter


∗ 1 : w/ Entry & Start System
∗ 2 : w/o Entry & Start System
∗ 3 : Automatic A/C
∗ 4 : Manual A/C
∗ 5 : 1NZ–FE, 2NZ–FE, 2SZ–FE, 2ZR–FE
∗ 6 : TMC Made
∗ 7 : TMMF Made
∗ 8 : Multi–mode Manual Transmission
∗ 9 : Except ∗10
∗10 : S/D From Aug. 2007 Production
D62
Steering Sensor
CANH
CANL
D16
Airbag Sensor
Assembly Center
SB (RHD)
W (RHD)
Y
W
SB (LHD)
W (LHD)
B
W
D41
Junction Connector
W (RHD)
V (RHD)
W
L
V (LHD)
W (LHD)
V
W
G
W
AD4
DE1
A38
Multi–mode Manual
Transmission ECU
CAN+
CAN–
V (RHD)
W (RHD)
(∗8)
(1ND–TV)
(1KR–FE)
(∗5)
(∗4 ∗9)
(∗3)
(∗4 ∗10)
(∗7)
(∗6 w/ VSC)
(∗6 w/o VSC)
TX+
TX–
A21(A), A32(C), A49(B)
Engine ECU
D15
DLC3
E8(A), (C), E11(B)
A/C Amplifier
A15(A), A31(B), A39(C)
Skid Control ECU
with Actuator


A 15
Black

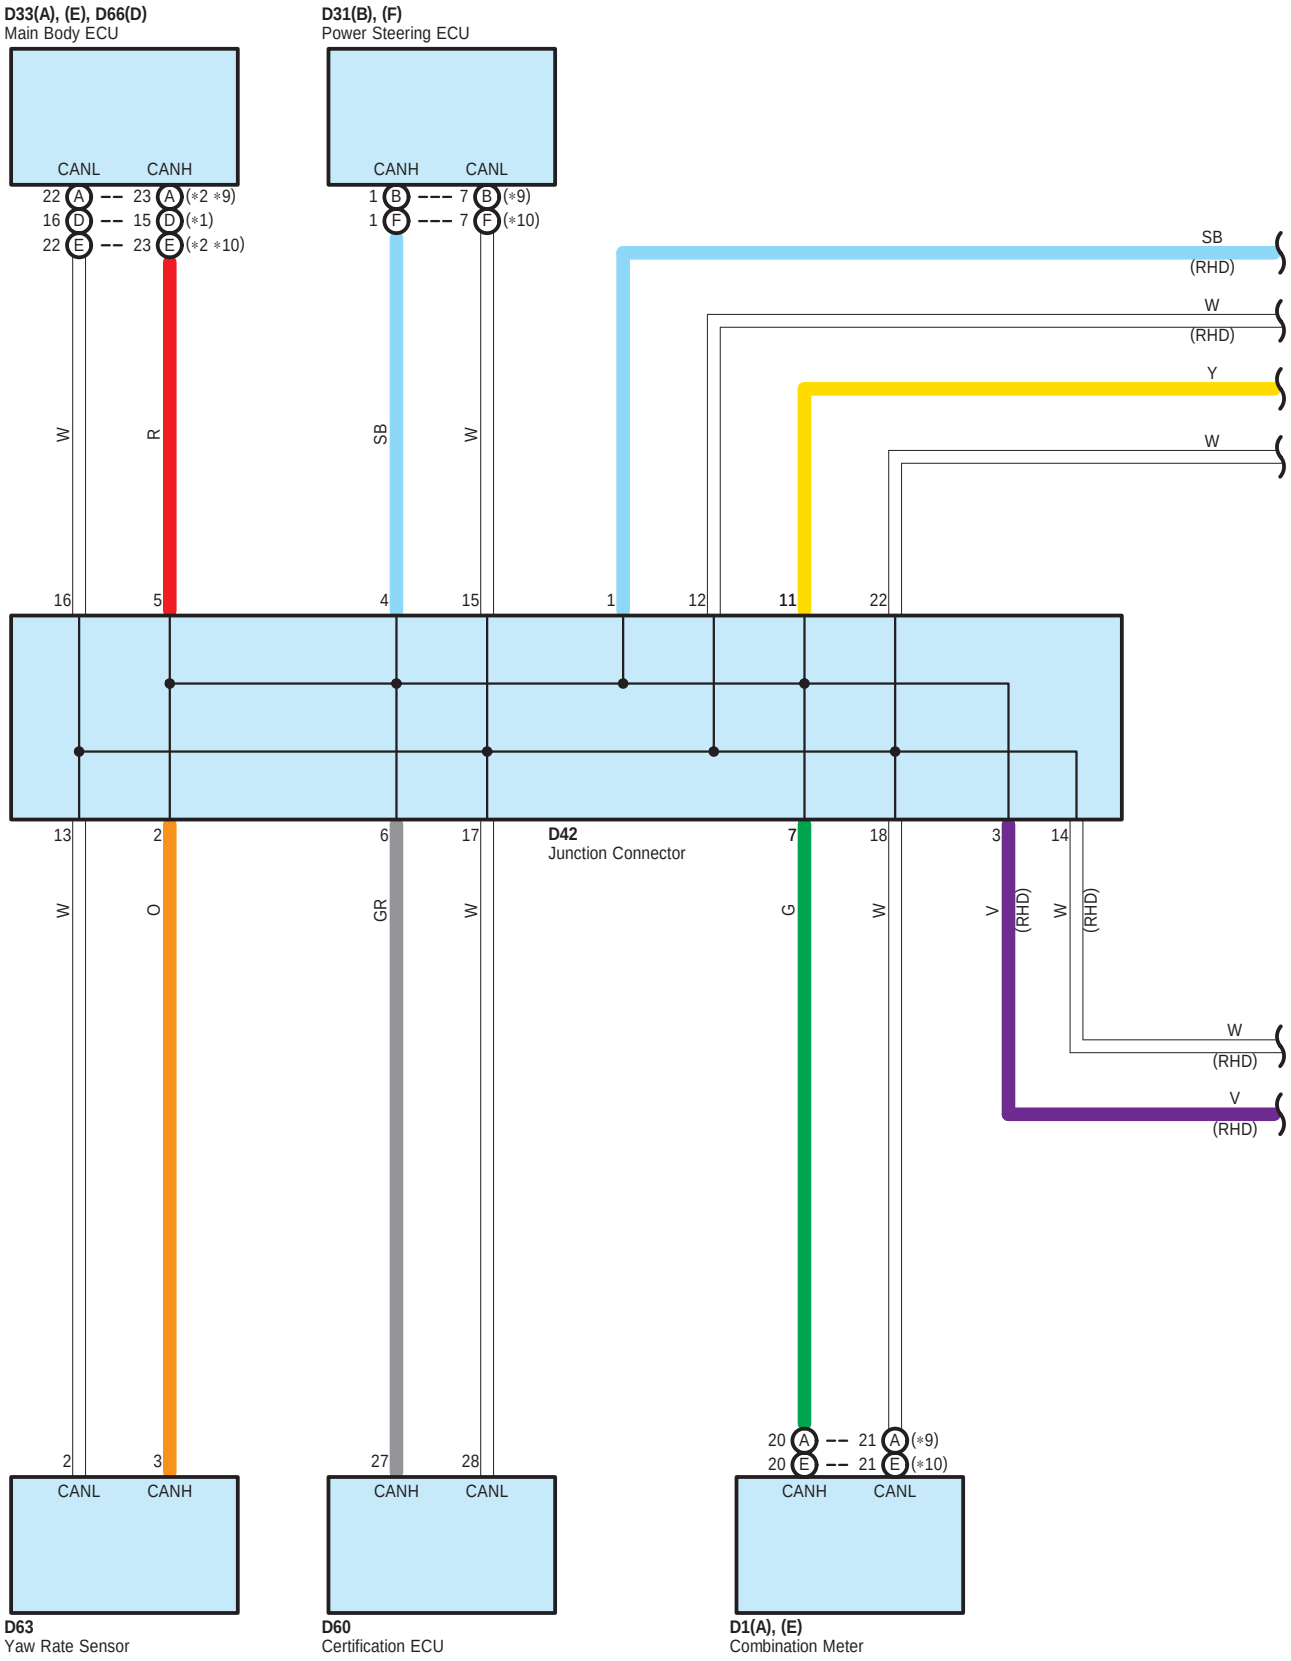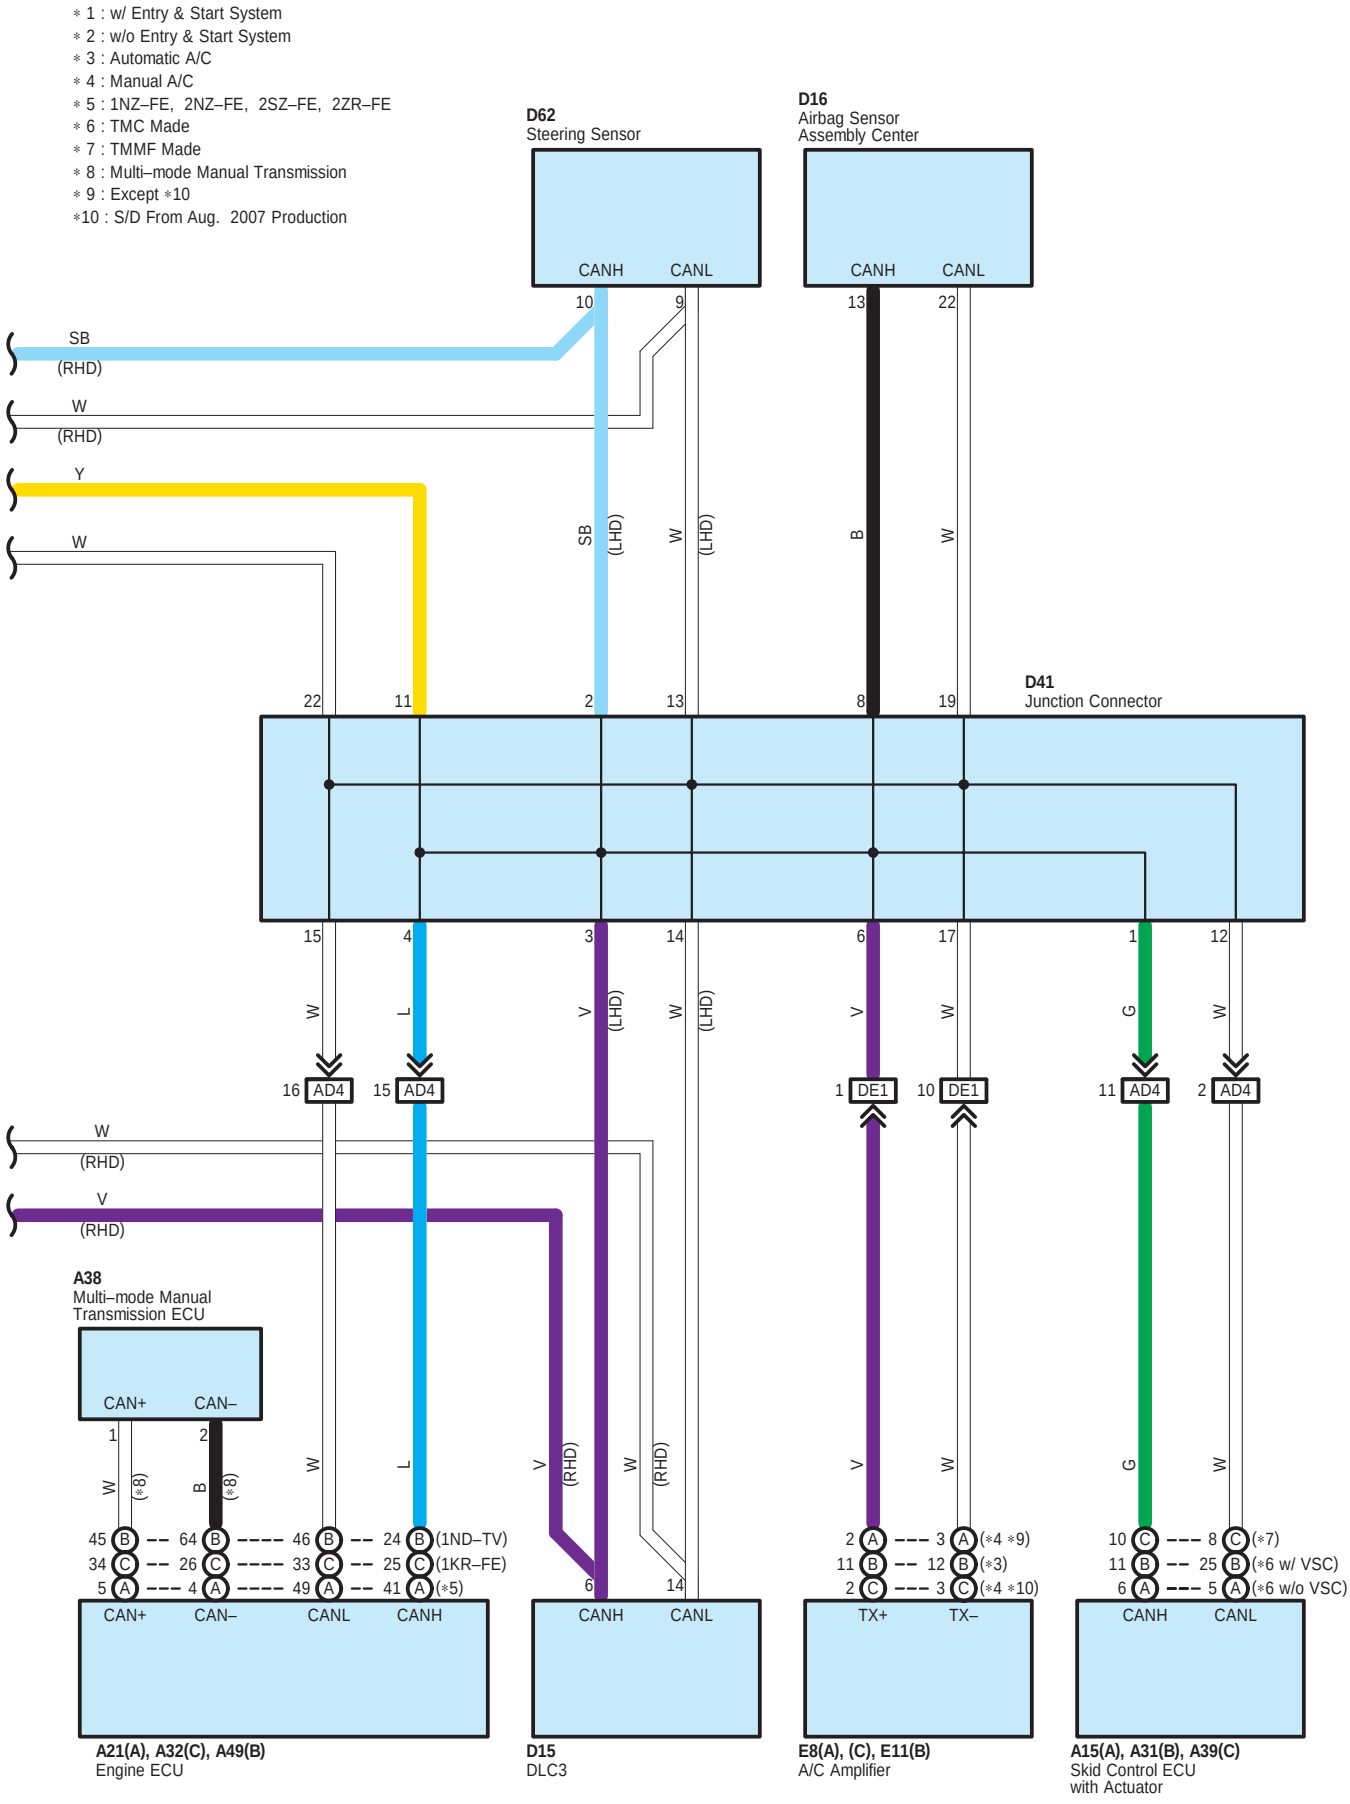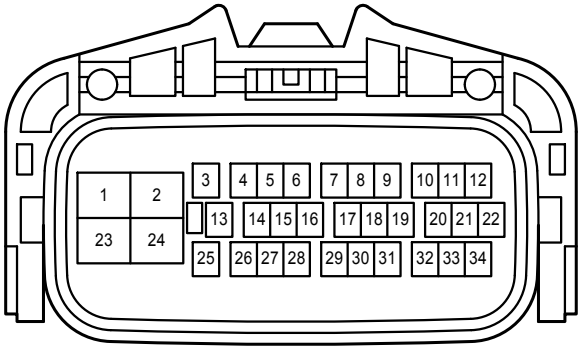


A 21
Black

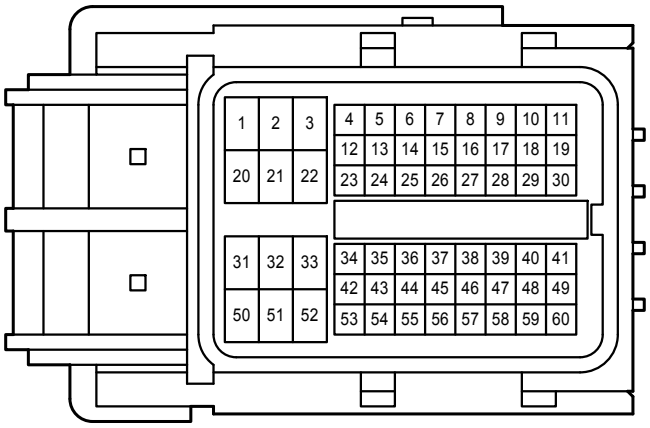


A 31
Black

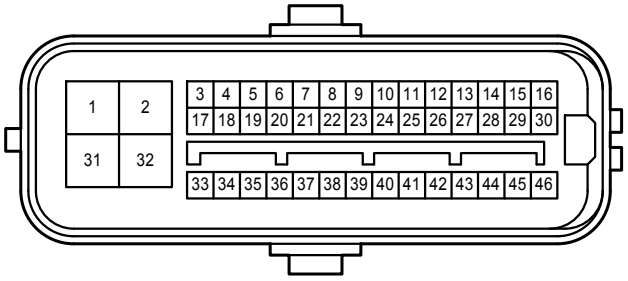


A 32
Black

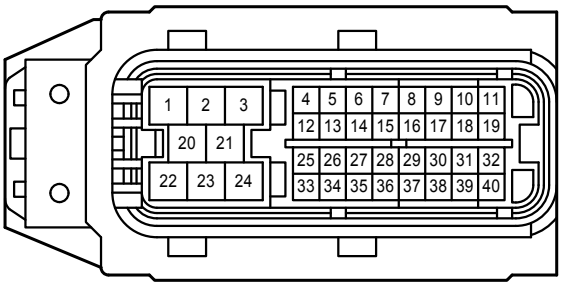


A 38
White

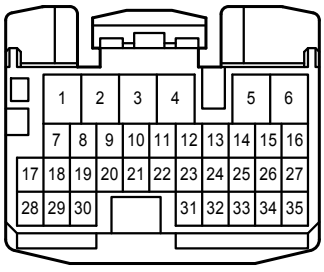


A 39
Black

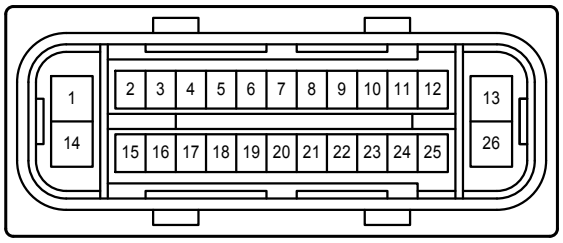

A 49
Black

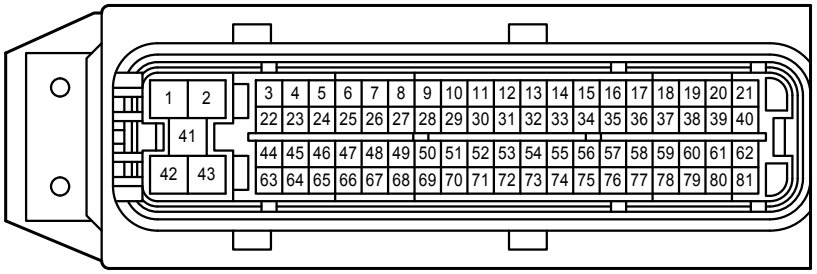


D 1
White

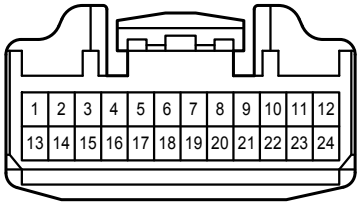


(S/D From Aug. 2007 Production)

D 1
White

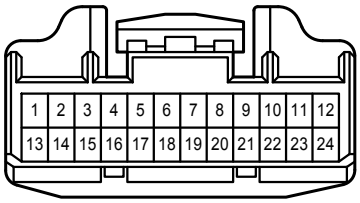


(H/B, S/D Before Aug. 2007 Production)


D 15
White

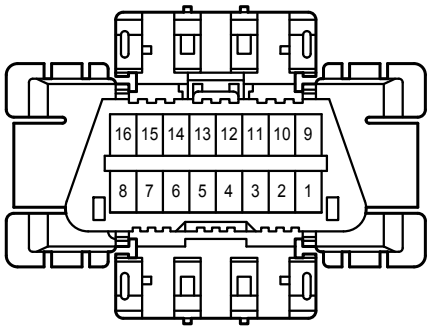

D 16
Yellow

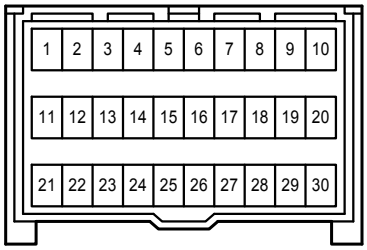


D 31
White

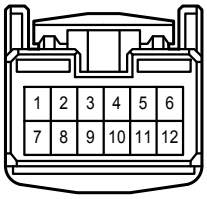


(S/D From Aug. 2007 Production)

D 31
White

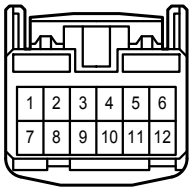


(H/B, S/D Before Aug. 2007 Production)

D 33
White

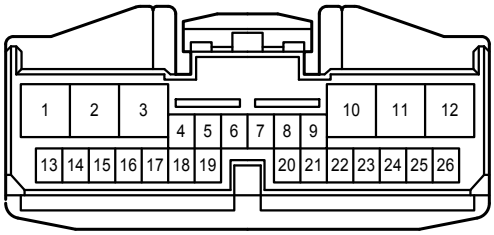


(S/D From Aug. 2007 Production)

D 33
White

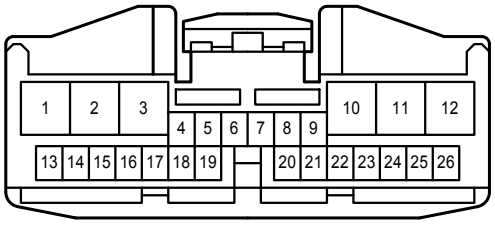


(H/B, S/D Before Aug. 2007 Production)


D 41
White

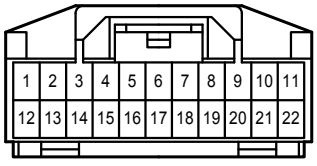


D 42
White

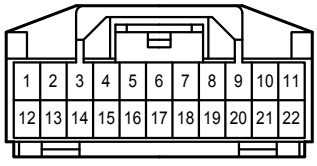


D 60
White

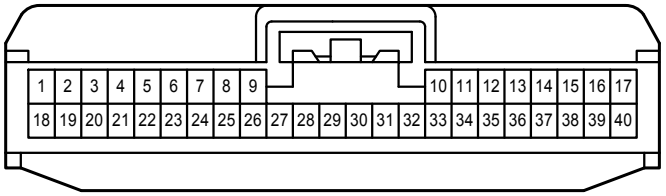


D 62
Black

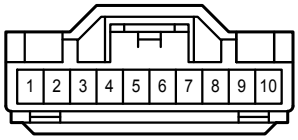


D 63
Black

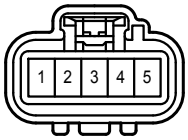

D 66
White

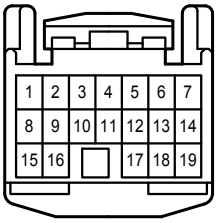


E 8
White

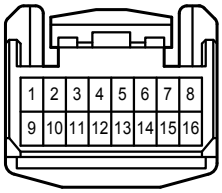


(S/D From Aug. 2007 Production)

E 8
White

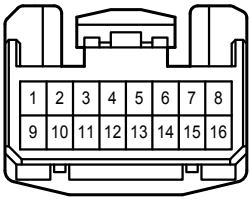


(H/B, S/D Before Aug. 2007 Production)

E 11
White

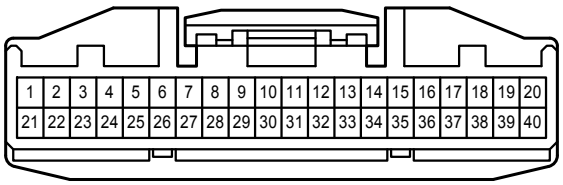

AD4
Gray

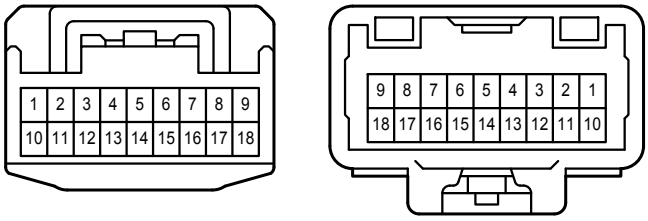

DE1
White

