




I. GENERAL VIEW

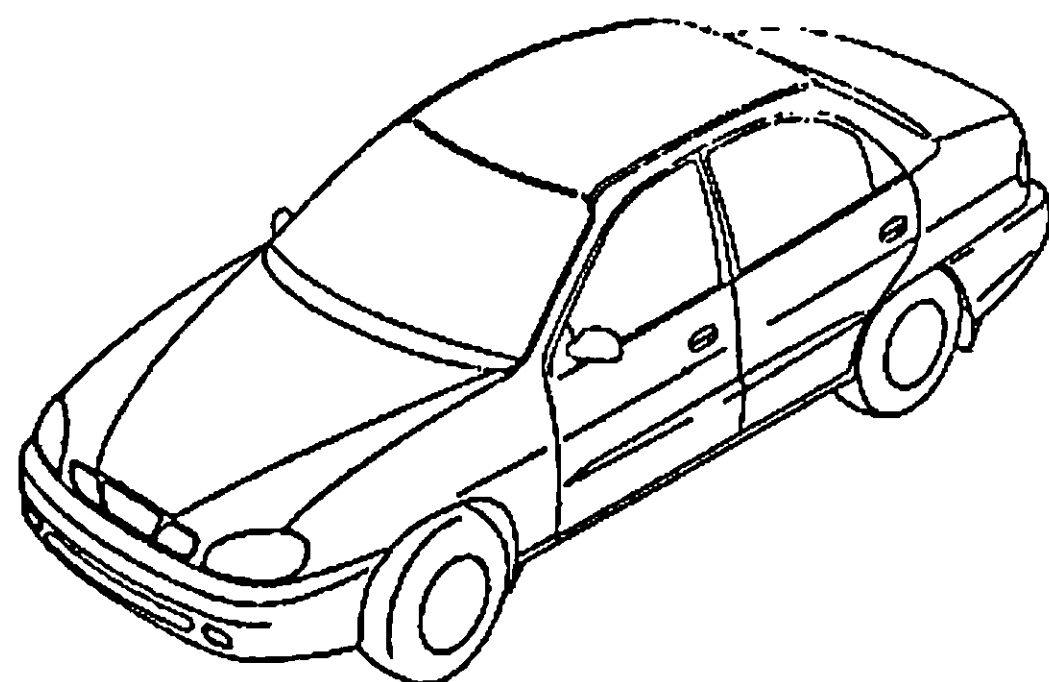

4-DOOR NOTCH BACK

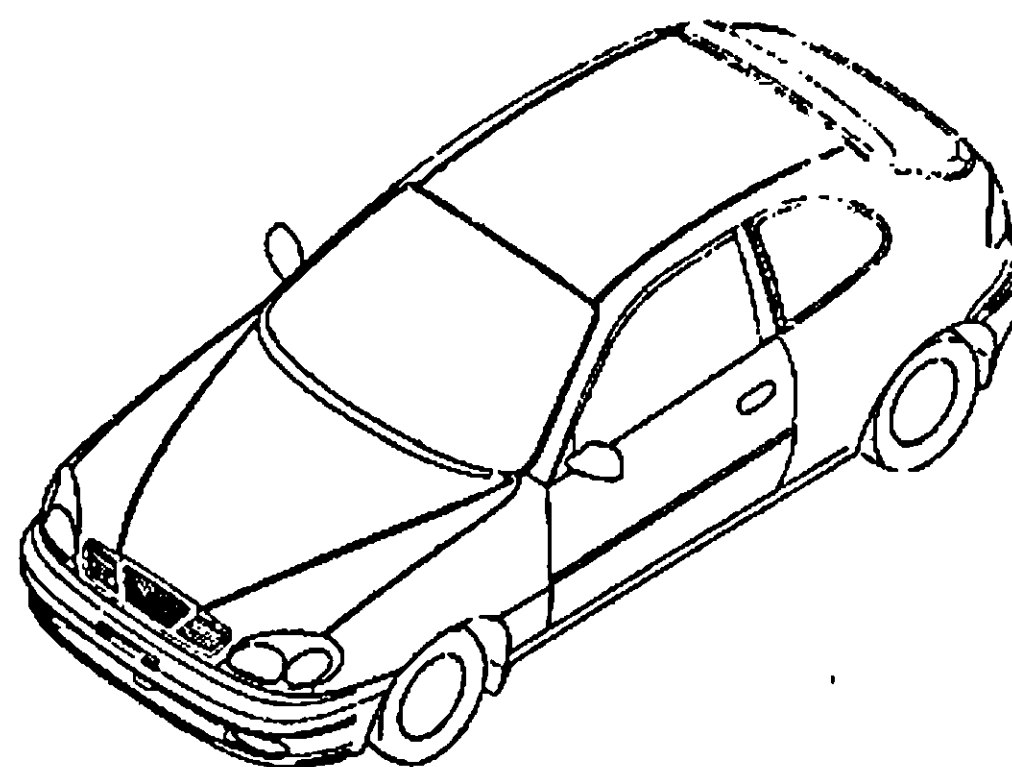

3-DOOR HATCH BACK

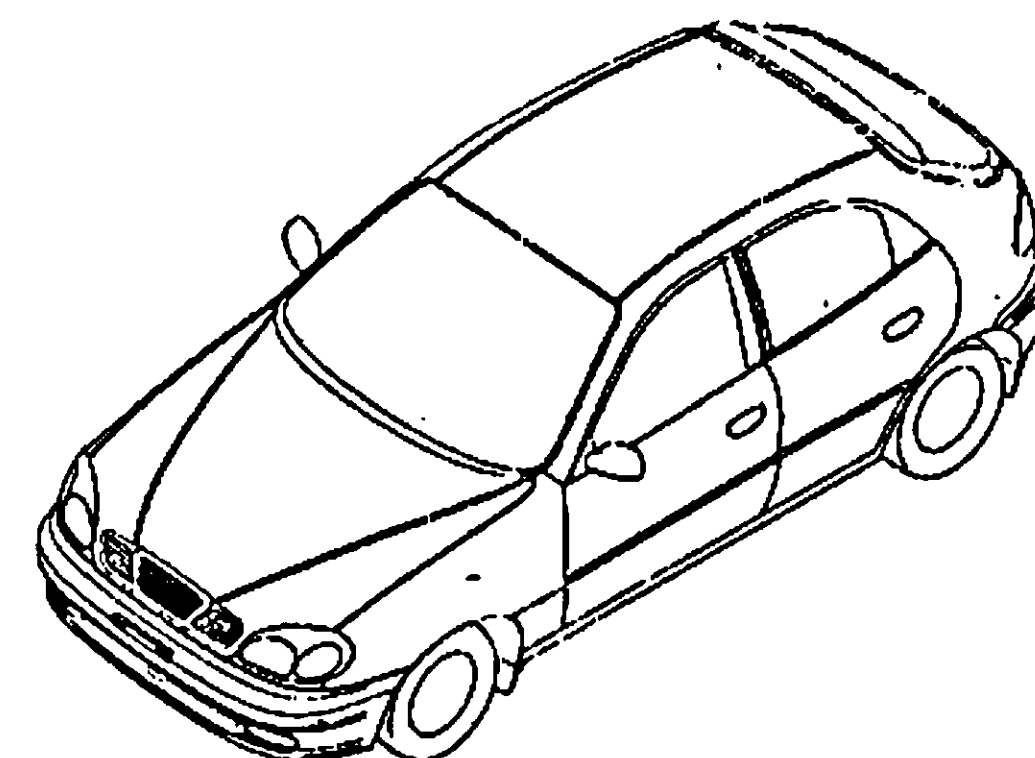

5-DOOR HATCH BACK

II. MODEL & OPTION

1. MODEL

ENGINE	T/A	BODY	LEVEL
Y / 6	M / A	4N / 3H / 5H	S / SE / SX

■ ENGINE TYPE

- Y : 1.5L SOHC
- 6 : 1.6L DOHC
- . : Common

■ T/A(TRANSAXLE)TYPE

- M : Manual T/A
- A : Automatic T/A
- . : Common

■ BODY TYPE

- 4N : 4 Door Notchback
- 3H : 3 Door Hatchback
- 5H : 5 Door Hatchback

NOTE : Please be sure to read "the EXPLANATION OF CATALOG COMPOSITION" to find out the details on "the MODEL COLUMN".

2. OPTION

CODE	DESCRIPTION	BODY			LEVEL		
		4 N	3 H	5 H	S	S E	S X
A31	Window-power,front&rear	B	.	B	.	O	O
A32	Window-power,front	B	B	B	O	O	B
ABF	Air bag-dual	B	B	B	.	O	O
AJ3	Air bag-driver side only	B	B	B	.	O	O
AU3	Central door lock	B	B	B	O	O	B
C59	Uncompleted Air conditioner	B	B	B	O	O	O
C60	Air conditioner	B	B	B	O	O	O
CF6	Sun roof,power	B	B	B	O	O	O
JL9	Antilock brake system	B	B	B	.	O	O
ML4	4 speed automatic T/A	B	B	B	O	O	O
N40	Power steering	B	B	B	O	O	B
PG4	Alloy wheel,5.5JX14	B	B	B	.	.	O
T45	Rear spoiler	.	B	B	.	.	O
U83	Speaker-coaxial 2 way	B	B	B	.	O	O
UNA	Cassette(mech), 7wX2ch(AKF-4331)	B	B	B	O	O	O
UN1	Cassette(mech),25wX2ch(AKF-4036)	B	B	B	O	O	O
UN6	Cassette(logic) ,25wX4ch(AKF-0816)	B	B	B	.	O	O
W8V	CD player	B	B	B	.	O	O

- O : OPTION
- B : BASE
- . : NOT APPLICABLE

III. COLOR CODE TABLE

When order the color parts, the color code should be quoted.

EXTERIOR COLOR		INTERIOR COLOR
CODE	DESCRIPTION	
11U	GALAXY WHITE	GREY
21U	AZURITE BLUE	GREY
27U	VIOLET BLUE	GREY
42U	DEEP BLUISH GREEN	GREY
43U	LIGHT EVERGREEN	GREY
73L	SUPER RED	GREY
74U	SPINEL RED	GREY
81U	STREAMLINE GREY	GREY
83L	GRANADA BLACK	GREY
92U	POLY SILVER	GREY

⑧ MODEL

This column indicates Engine type, Transaxle type, Body type, Trim level.

■ ENG(ENGINE) TYPE

- Y : 1.5L SOHC
- 6 : 1.5L DOHC
- . : COMMON

■ T/A(TRANSAXLE)TYPE

- M : Manual T/A
- A : Automatic T/A
- . : Common

■ BODY TYPE

- 4N : 4 Door Notchback
- 3H : 3 Door Hatchback
- 5H : 5 Door Hatchback

"BODY" column indicates the expression of applicable body type.

- B : Applicable
- . : Not applicable

■ TRIM LEVEL

- S
- SE
- SX


"LEVEL" column indicates the expression of applicable trim level.

- S : Standard equipment.
- O : Option equipment.
- A : Available equipment for the special package according to the area regulation

⑨ OPTION

This column indicates option code.
Refer to "VI.OPTION CODE TABLE"

ex) O O O O

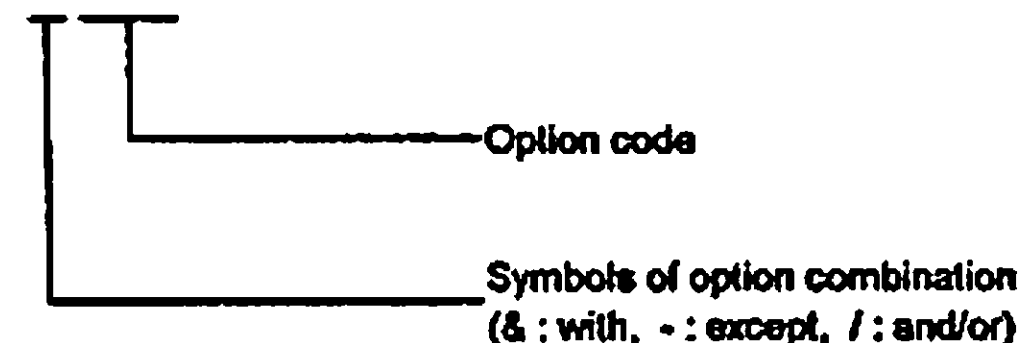

⑩ L/R

This column indicates the mounting position of a part.

- LH : Left hand side
- RH : Right hand side

⑪ QTY

This column indicates the quantity required per sub-group.
The quantity is normally shown by number or symbol as below.
A : As required quantity.

⑫ EFFECTIVE DATE

This column indicates effective "date in production".
It is shown by the year, month and date or start of production(S.O.P).


⑬ REMARKS

Supplementary or reference information is given in this column.
(examples)
Specification, Use, Type, Applicable country etc.

⑭ PART IDENTIFICATION CODE


This column indicates part identification code that is marked with two characters.
Part identification code will help you in discriminating a part easily.
But, all parts will not always carry the part identification code.

V. CONSTRUCTION OF VEHICLE IDENTIFICATION NUMBER

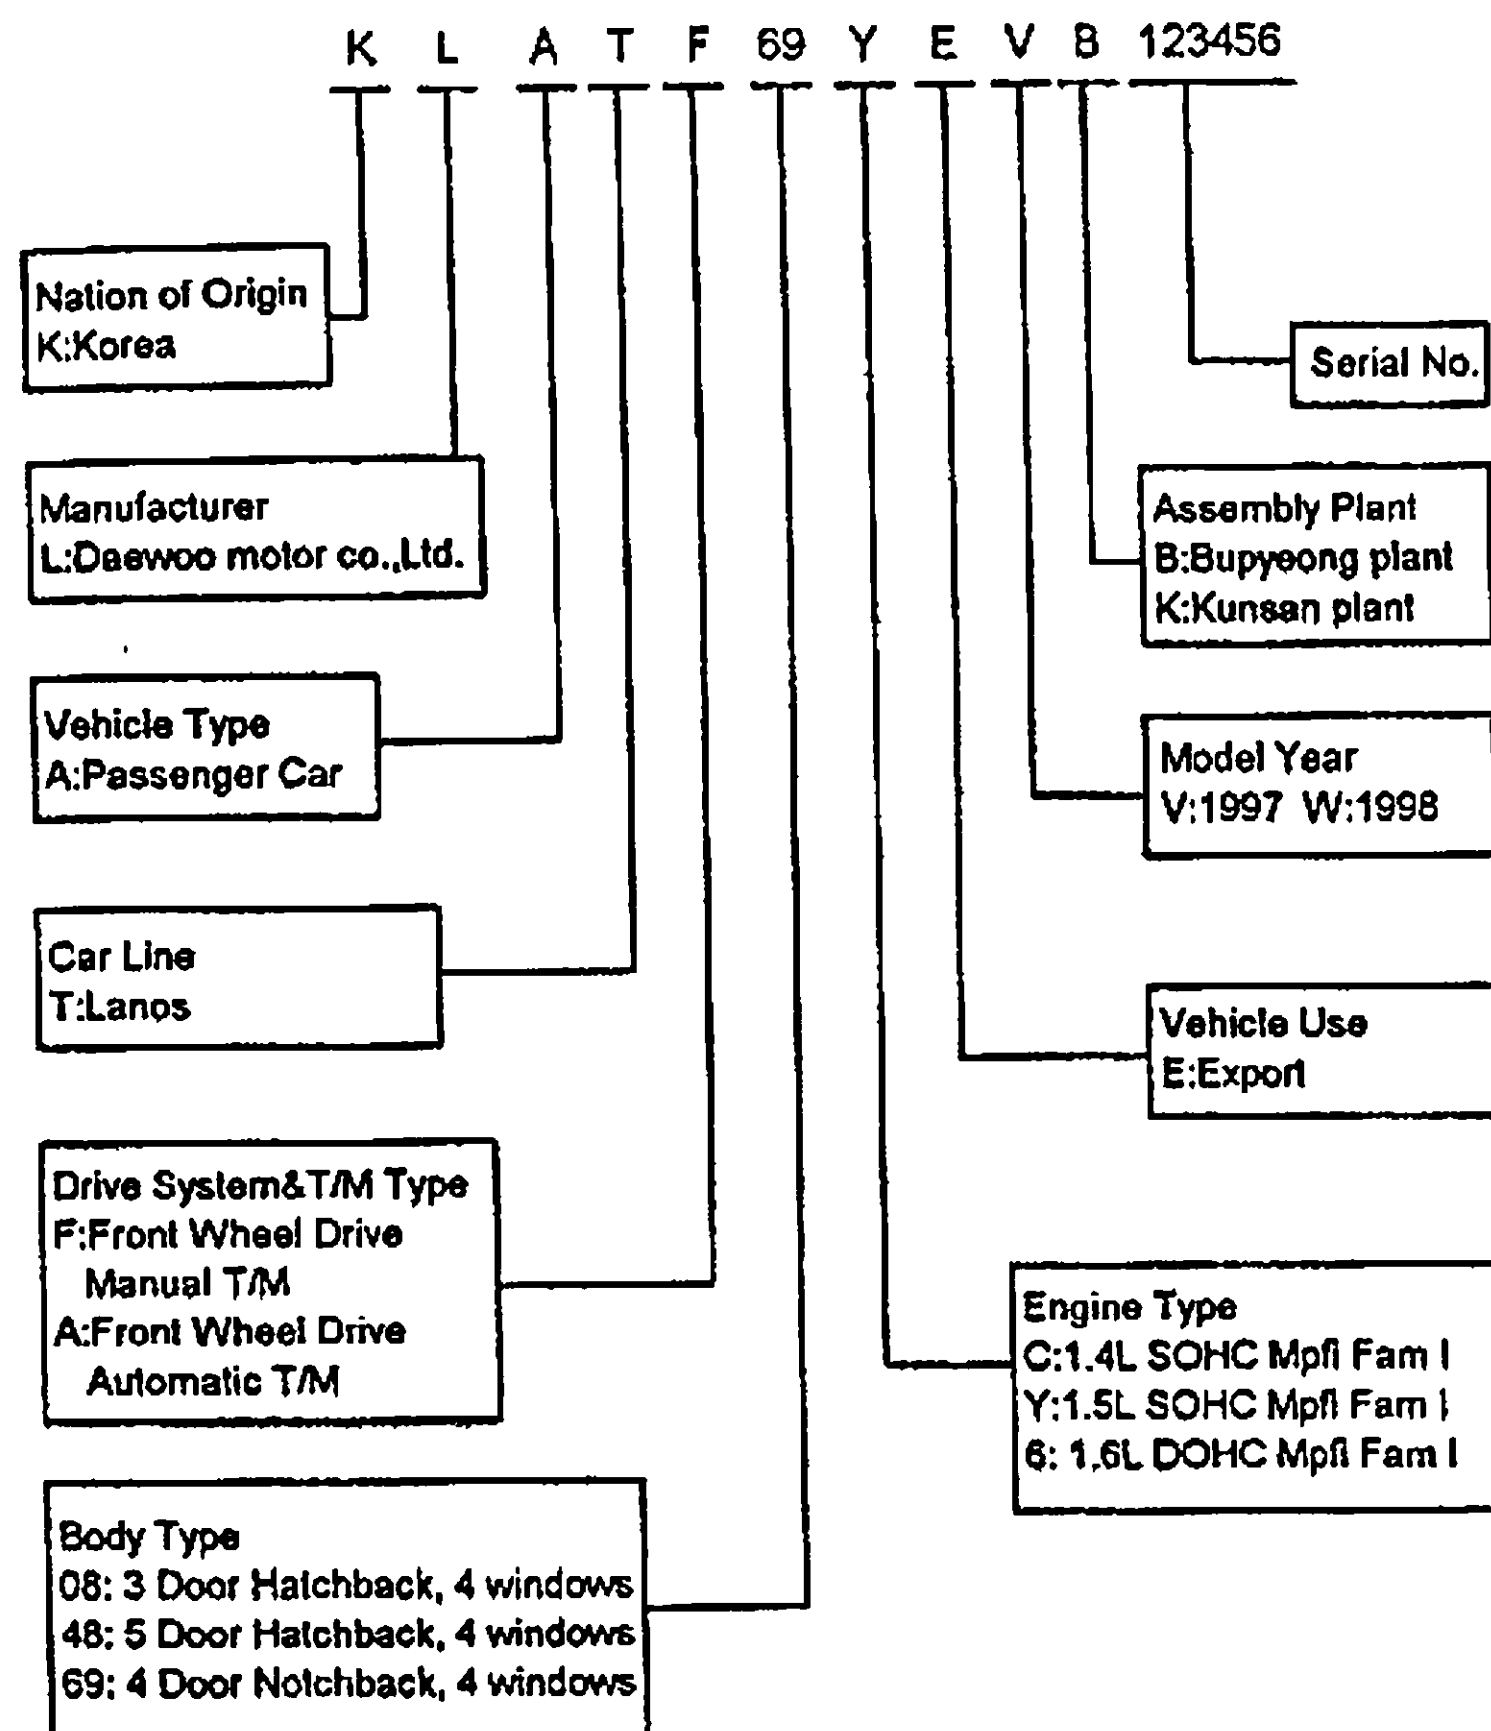


LOCATION OF VEHICLE IDENTIFICATION NUMBER

DAEWOO MOTOR CO., LTD	
VIN	APPROVAL NO.
K L A T F 69 Y E V B 123456	
CROSS VEHICLE WEIGHT	kg
CROSS COMBINATION VEHICLE WEIGHT	kg
MAXIMUM PERMISSIBLE AXLE FRONT	kg
MAXIMUM PERMISSIBLE AXLE REAR	kg

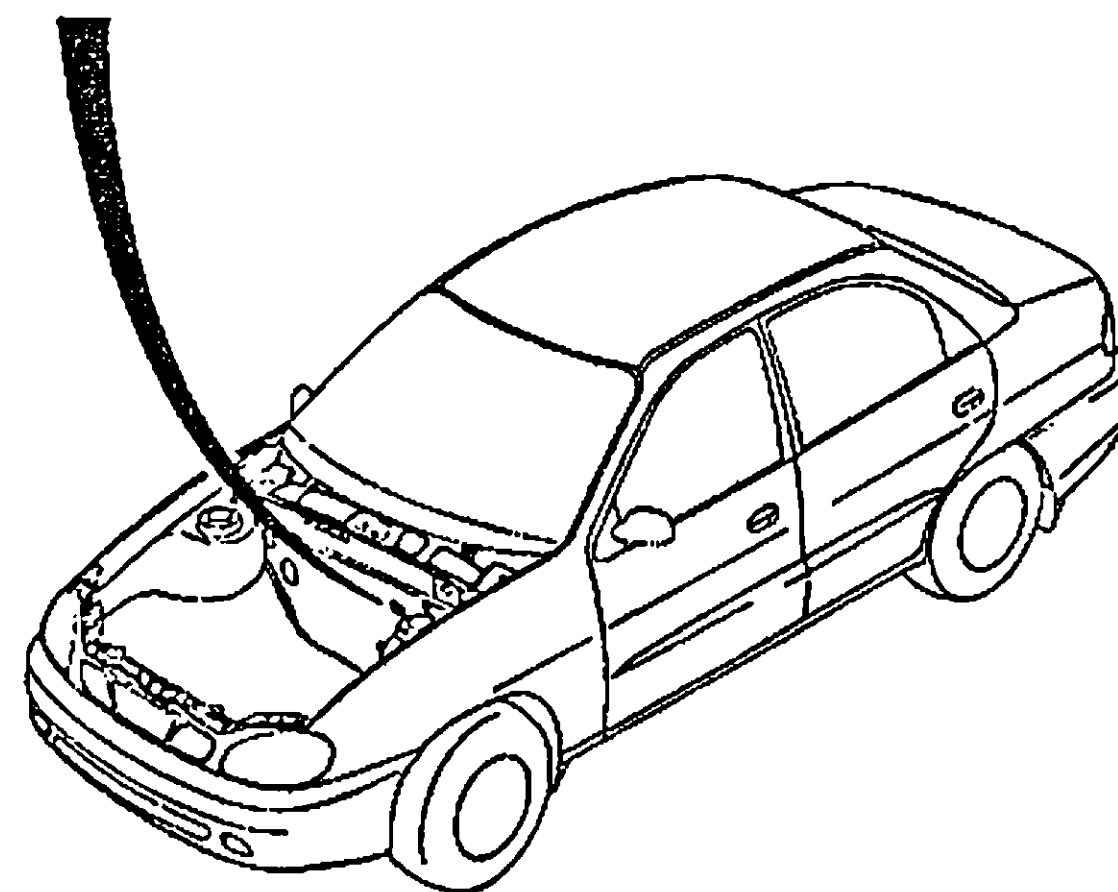


1**ENGINE**

1110	ENGINE UNIT(SOHC)	1650	RADIATOR HOSE&PIPE(SOHC)
1111	ENGINE UNIT(DOHC)	1651	RADIATOR HOSE&PIPE(DOHC)
1120	SHORT ENGINE	1680	THERMOSTAT(SOHC)
1130	BELT SYSTEM	1681	THERMOSTAT(DOHC)
1140	REPAIR KIT(SOHC)	1690	OIL COOLER PIPE(A/T)
1141	REPAIR KIT(DOHC)	1710	IGNITION CABLE(SOHC)
1210	ENGINE BLOCK	1711	IGNITION CABLE(DOHC)
1220	CRANKSHAFT&PISTON	1740	ALTERNATOR UNIT(12V,85A)
1230	OIL PAN&PUMP	1741	ALTERNATOR UNIT(12V,95A)
1240	ENGINE OIL VENTILATION	1750	ALTERNATOR MOUNT(SOHC)
1310	CYLINDER HEAD(SOHC)	1751	ALTERNATOR MOUNT(DOHC)
1311	CYLINDER HEAD(DOHC)	1760	STARTER(0.8KW)
1320	CAM SUPPORT&SHAFT(SOHC)	1761	STARTER(1.4KW)
1321	CAM SUPPORT&SHAFT(DOHC)	1910	ENGINE MOUNT
1330	TIMING COVER(SOHC)		
1331	TIMING COVER(DOHC)		
1610	RADIATOR		
1630	COOLING FAN		

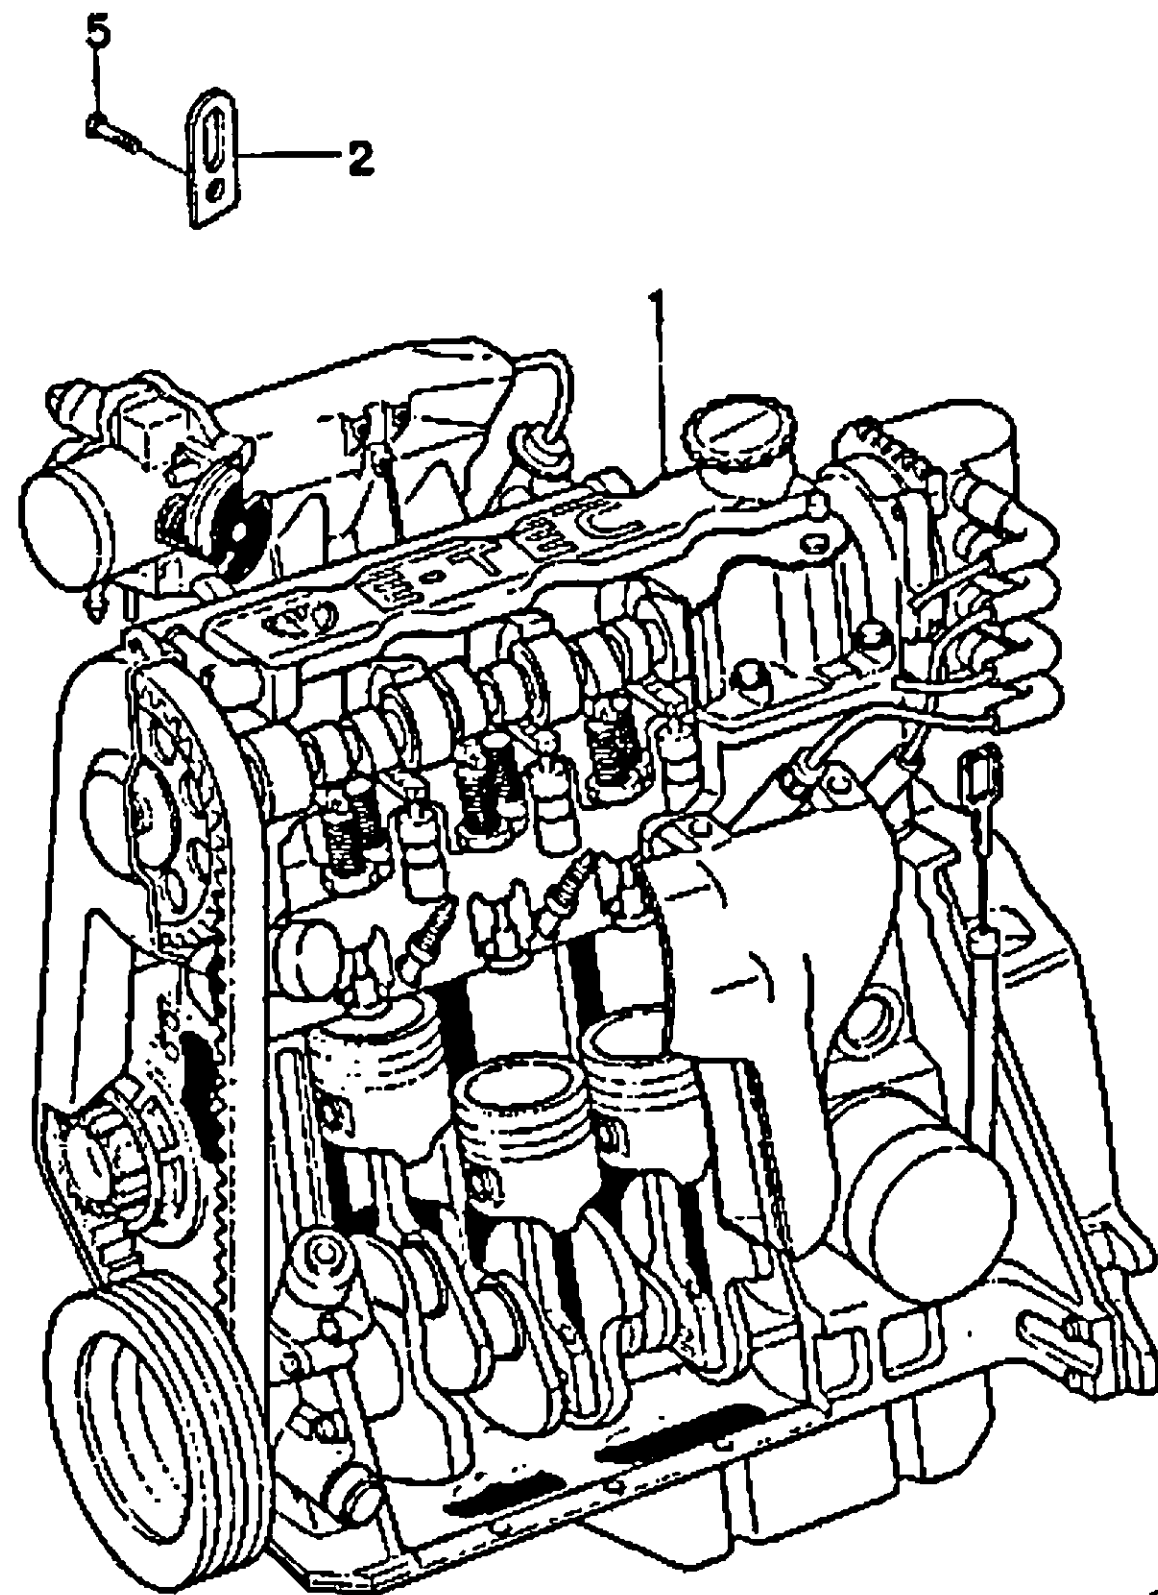


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S								S S	S S
	[01]	(E)ENGINE A (D)MOTOR								(F)MOTEUR (S)MOTOR						
	96184293	Y M B B B S S S						&NN4-XCA		1				HF		
	96352333	Y M B B B A A A						&NN4&XCA		1				H2		
	96184301	Y M B B B A A A						&NN6-XCA		1				H8		
	96352331	Y M B B B A A A						&NN6&XCA		1				H8		
	96350294	Y M B B B A A A						&NN7-XCA		1				HJ		
	96352335	Y M B B B A A A						&NN7&XCA		1				H6		
	96184297	Y A B B B O O O						&NN4-XCA		1				HH		
	96352334	Y A B B B A A A						&NN4&XCA		1				H3		
	96184305	Y A B B B A A A						&NN6-XCA		1				HD		
	96352332	Y A B B B A A A						&NN6&XCA		1				H9		
	96350292	Y A B B B A A A						&NN7-XCA		1				HL		
	96352336	Y A B B B A A A						&NN7&XCA		1				H7		
	[02]	(E)SHACKLE-ENGINE TRANSPORT (D)HALTER,MOTOR TRANSPORT								(F)BRIDES-TRANSPORT (S)GRILLETE-TRANSPORTE						
	90076951	Y . B B B S S S								2						
	[05]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO						
	02865536	Y . B B B S S S								1		M8X22				

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

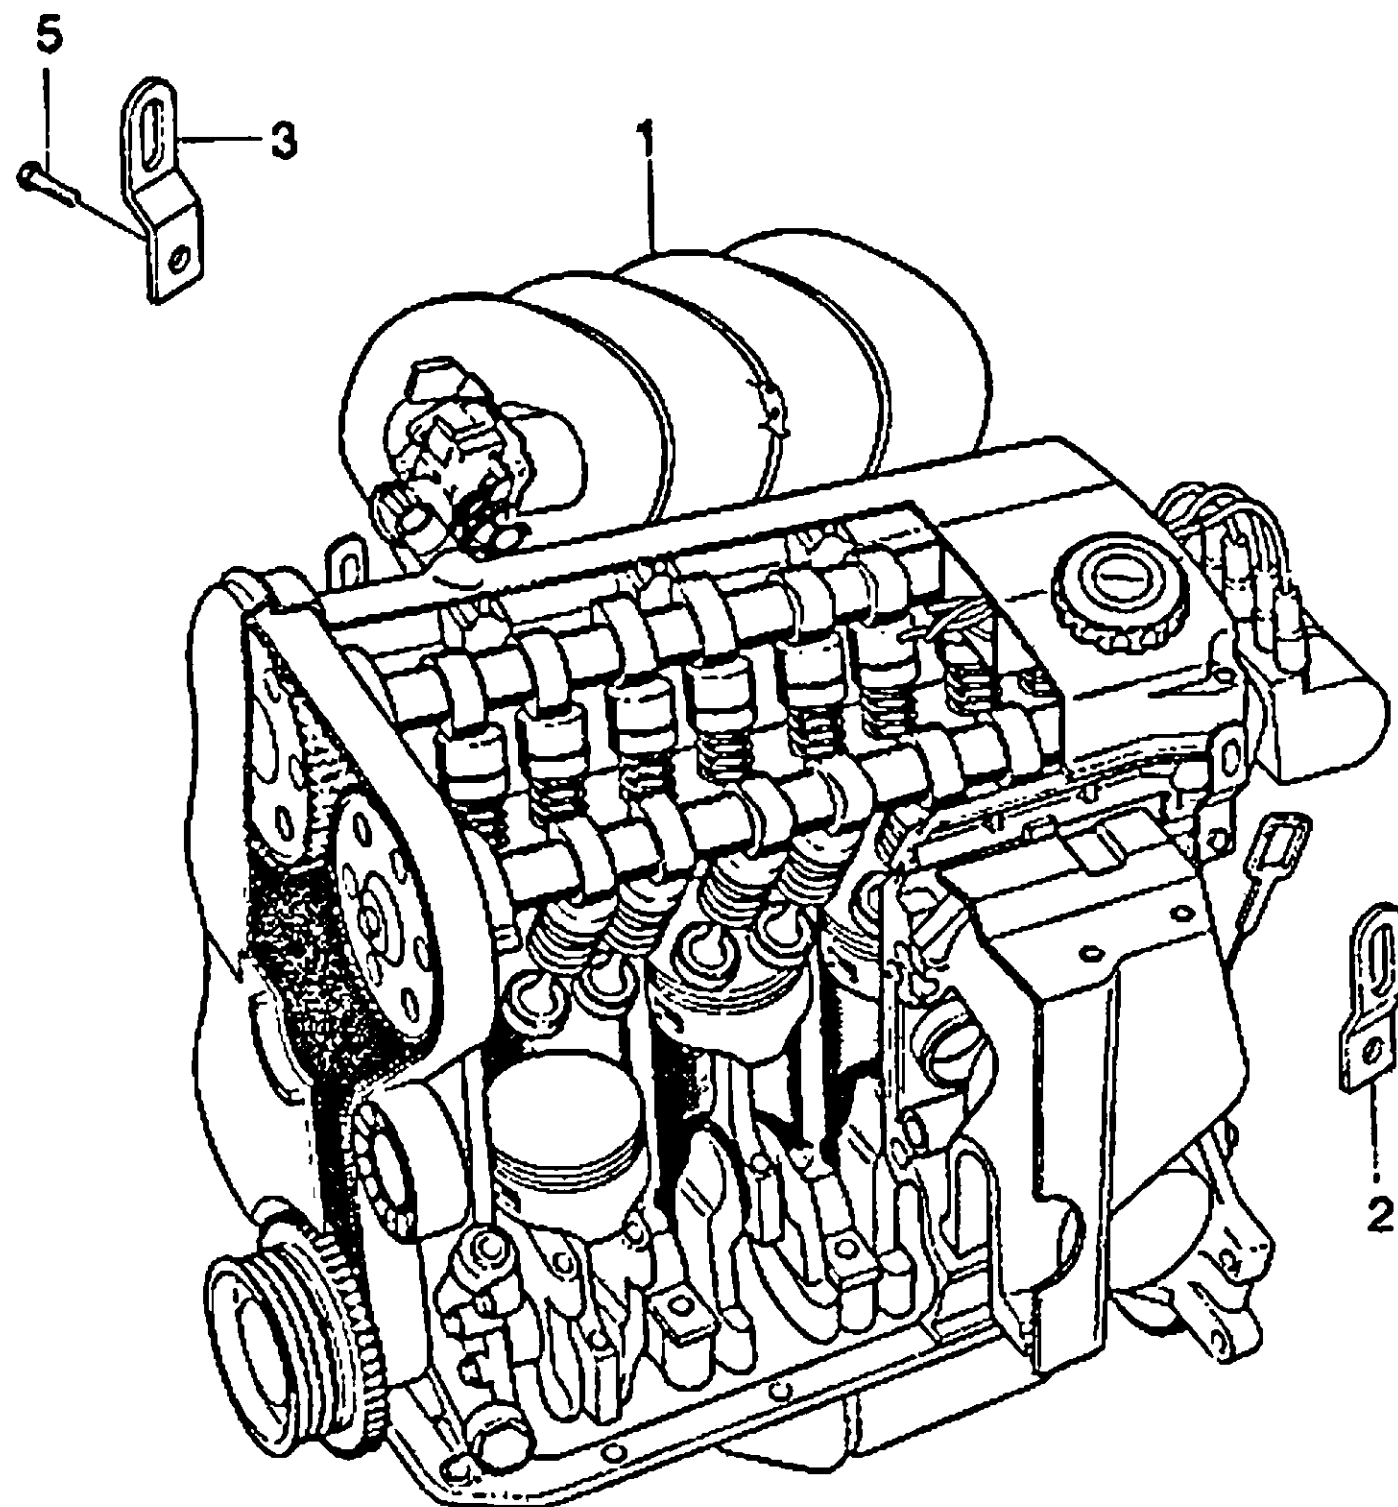


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL								
				4 N	3 H	5 H	S	S E				X			
	[01]	(E)ENGINE A (D)MOTOR								(F)MOTEUR (S)MOTOR					
	96350534	6 M	B	B	B	.	.	O	&NN4-XHA	1				UB	
	96352343	6 M	B	B	B	.	.	A	&NN4&XHA	1				U2	
	96352351												NOT APPLIED		
	96352339												NOT APPLIED		
	96184154	6 M	B	B	B	.	.	A	&NN7-XHA	1				UJ	
	96352347	6 M	B	B	B	.	.	A	&NN7&XHA	1				U6	
	96352477												NOT APPLIED		
	96352761	6 M	B	B	B	.	.	A	&KL9	1			FOR BRAZIL	G2	
	96350538	6 A	B	B	B	.	.	O	&NN4-XHA	1				UF	
	96352345	6 A	B	B	B	.	.	A	&NN4&XHA	1				U3	
	96352353												NOT APPLIED		
	96352341												NOT APPLIED		
	96184157	6 A	B	B	B	.	.	A	&NN7-XHA	1				UN	
	96352349	6 A	B	B	B	.	.	A	&NN7&XHA	1				U7	
	96352479												NOT APPLIED		
	96352763	6 A	B	B	B	.	.	A	&KL9	1			FOR BRAZIL	G3	
	[02]	(E)SHACKLE-ENGINE (D)HALTER,MOTOR	TRANSPORT							(F)BRIDES-TRANSPORT (S)GRILLETE-TRANSPORTE					
	5094021004	6 .	B	B	B	.	.	O		1					
	[03]	(E)SHACKLE-ENGINE (D)HALTER,MOTOR	TRANSPORT							(F)BRIDES-TRANSPORT (S)GRILLETE-TRANSPORTE					
	96130851	6 .	B	B	B	.	.	O		1					
	[05]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO					
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

3D05

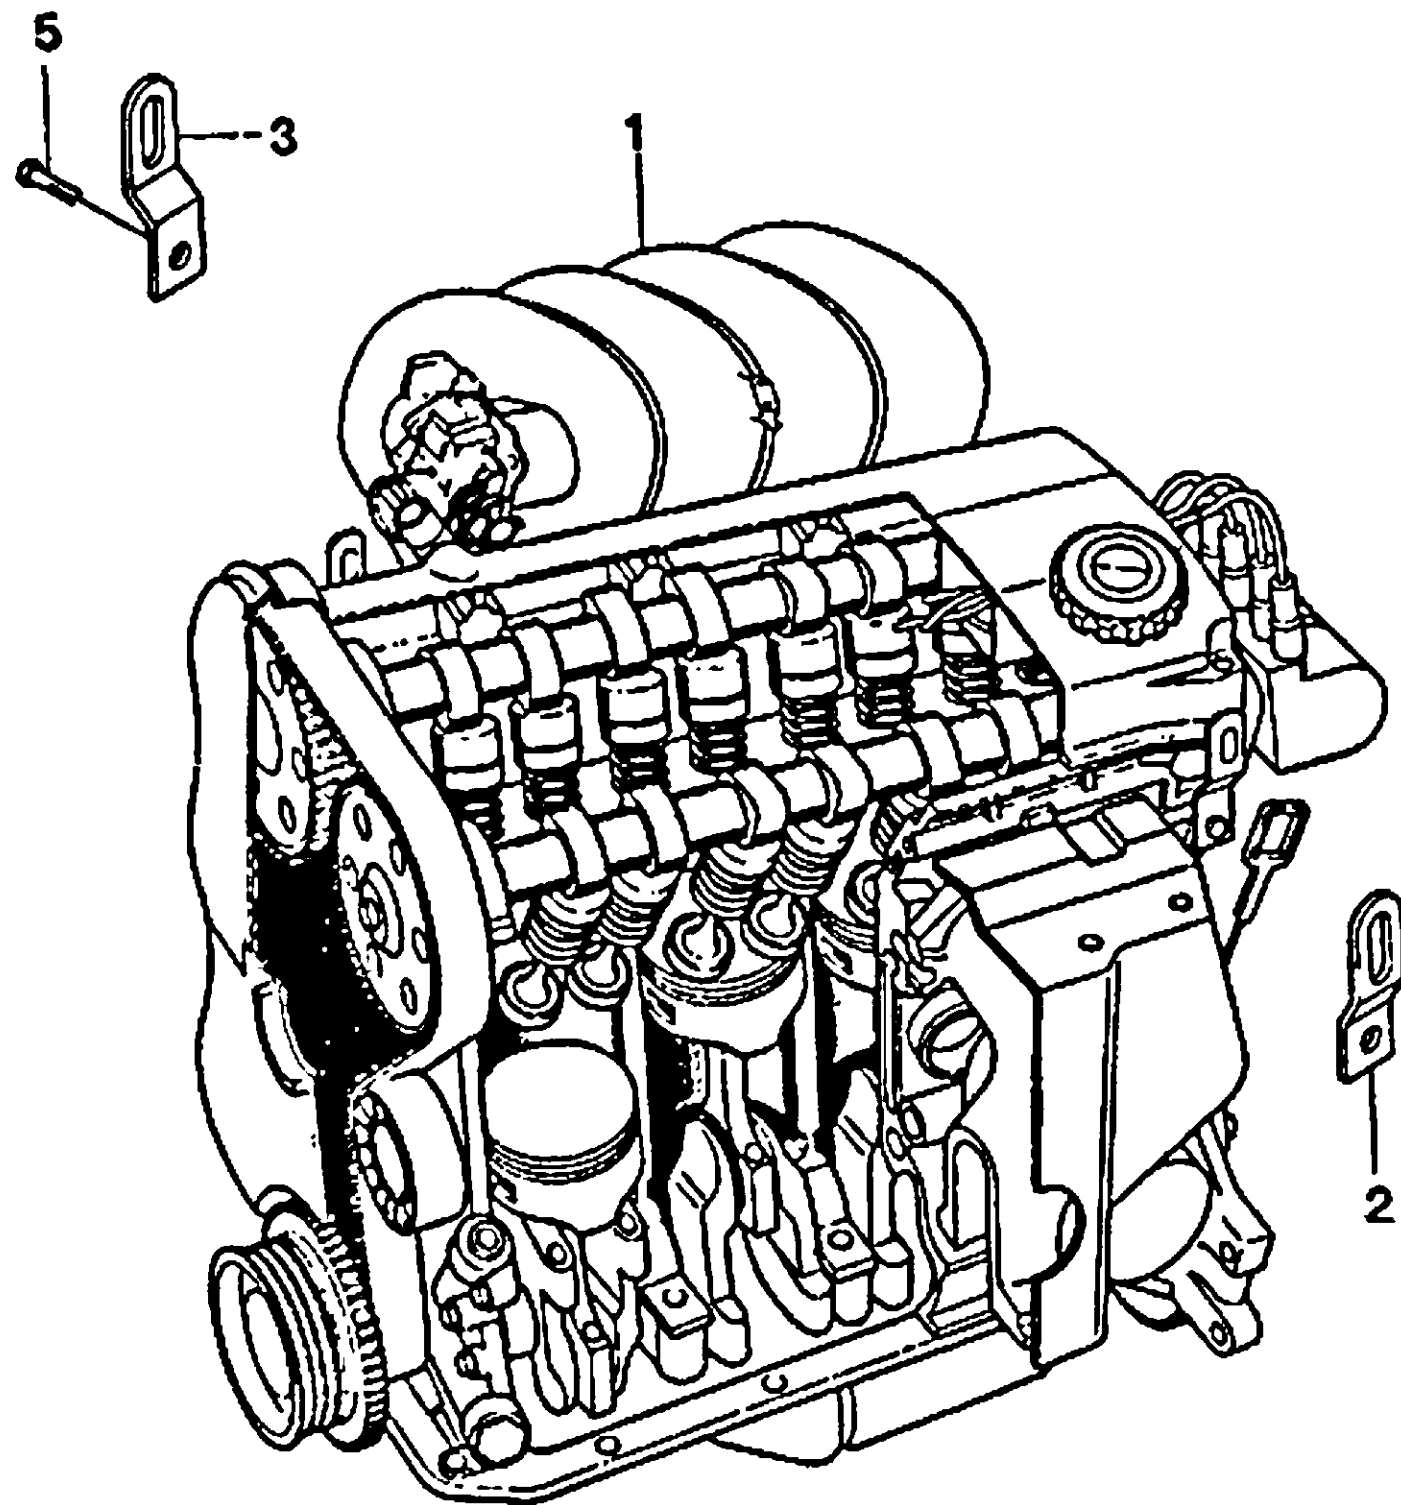


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S E
	09117-08011	6	.	B	B	B	.	.	O		1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

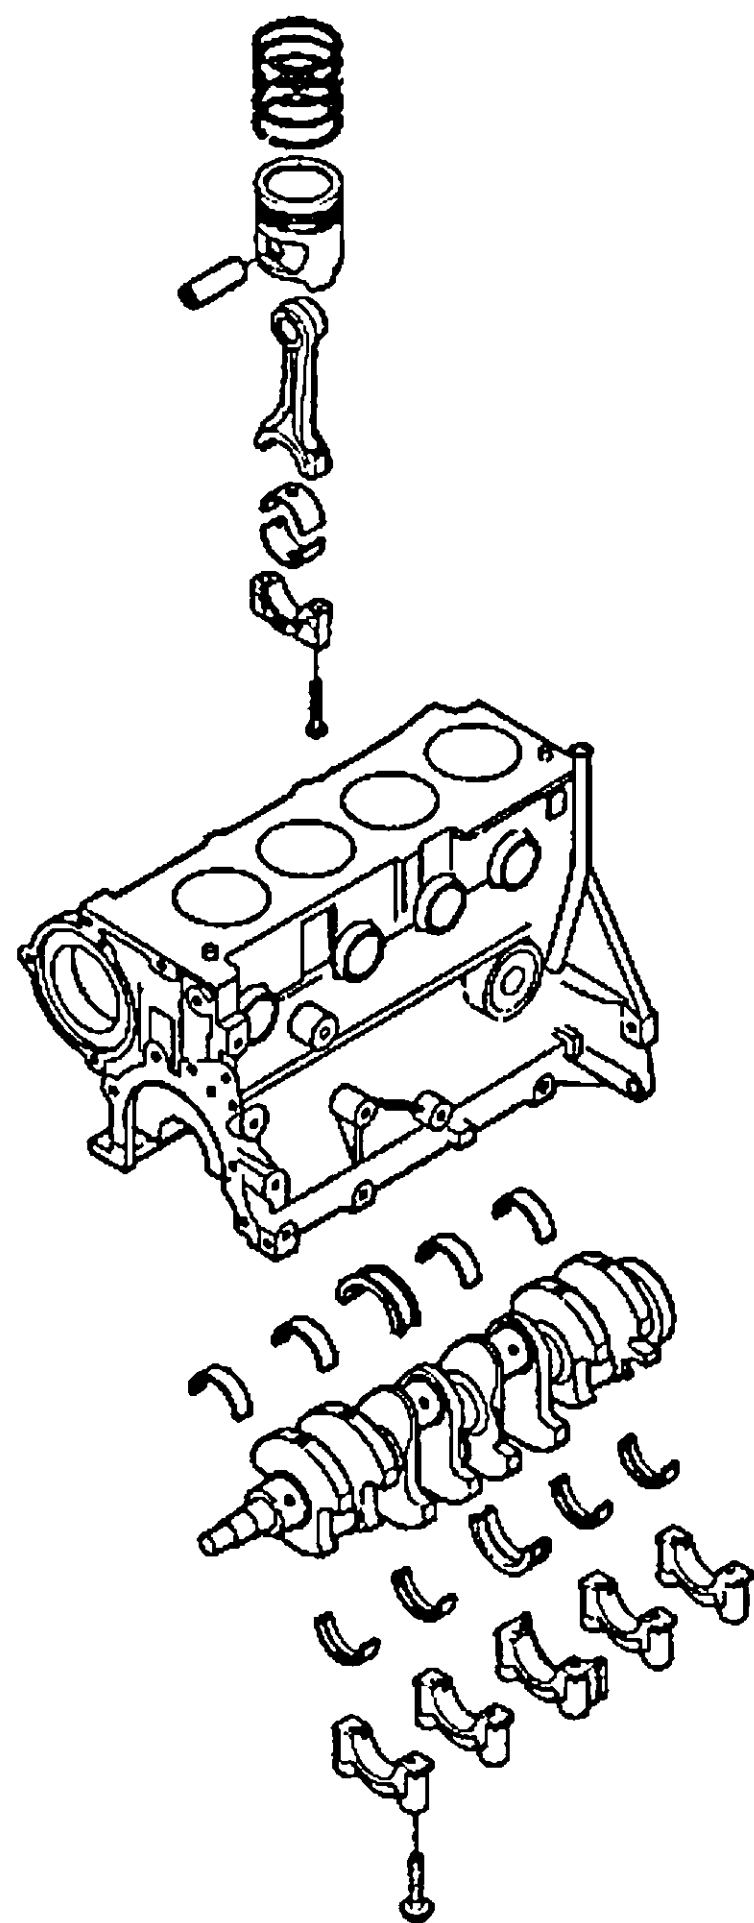


1


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S E								S X
	[01]	(E)SHORT BLOCK A (D)KURZ BLOCK									(F)BLOC COURT (S)BLOQUE CORTO					
	A96184803Y	Y M	B	B	B	S	S	S			1					
	A96184804Y	Y A	B	B	B	O	O	O			1					
	A96184805W	6 M	B	B	B	.	.	O			1					
	A96184806W	6 A	B	B	B	.	.	O			1					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

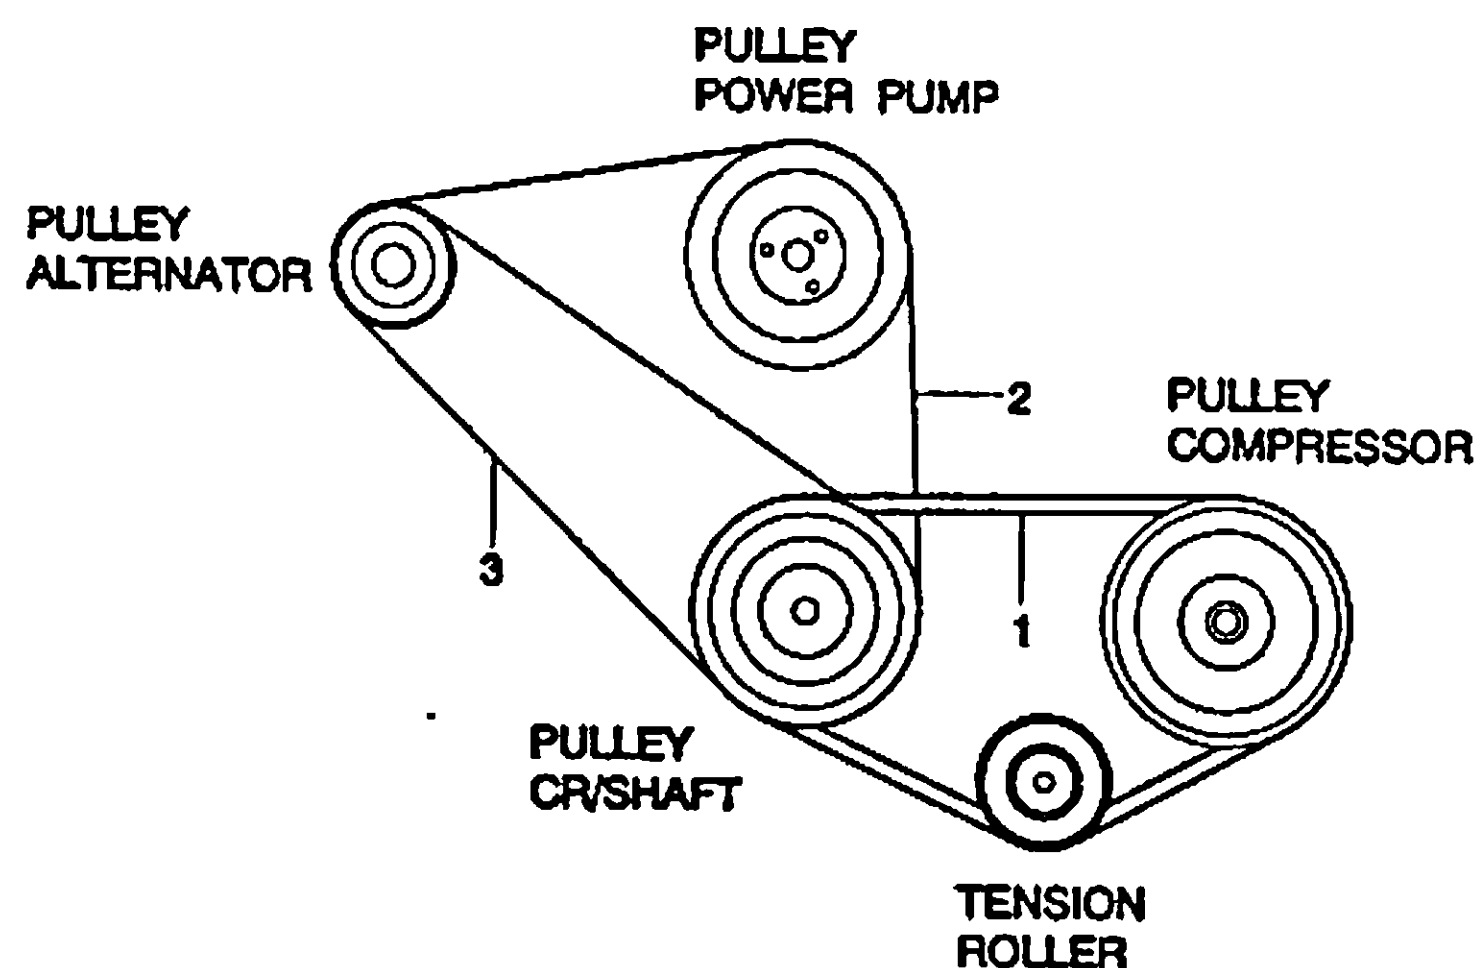


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S E								S X
	[01] 96350467	(E)V BELT (D)V GURT . .	B B B	O O O	&C60			(F)COURROIE EN V (S)CORREA V 1	840mm							
	[02] 96144933 96352454 96144934 96352455	(E)V BELT (D)V GURT Y . Y . 6 . 6 .	B B B B B B B B B B B B	O O S A A A . . O . . A	&N40-XHA &N40&XHA &N40-XHA &N40&XHA			(F)COURROIE EN V (S)CORREA V 1 1 1 1	970mm 1008mm							
	[03] 96144932 96352456	(E)V BELT (D)V GURT	B B B B B B	S S . A A .	&N51-XHA &N51&XHA			(F)COURROIE EN V (S)CORREA V 1 1	925mm							
ENG(ENGINE)		T/A(TRANSAXLE)					BODY TYPE									
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK									

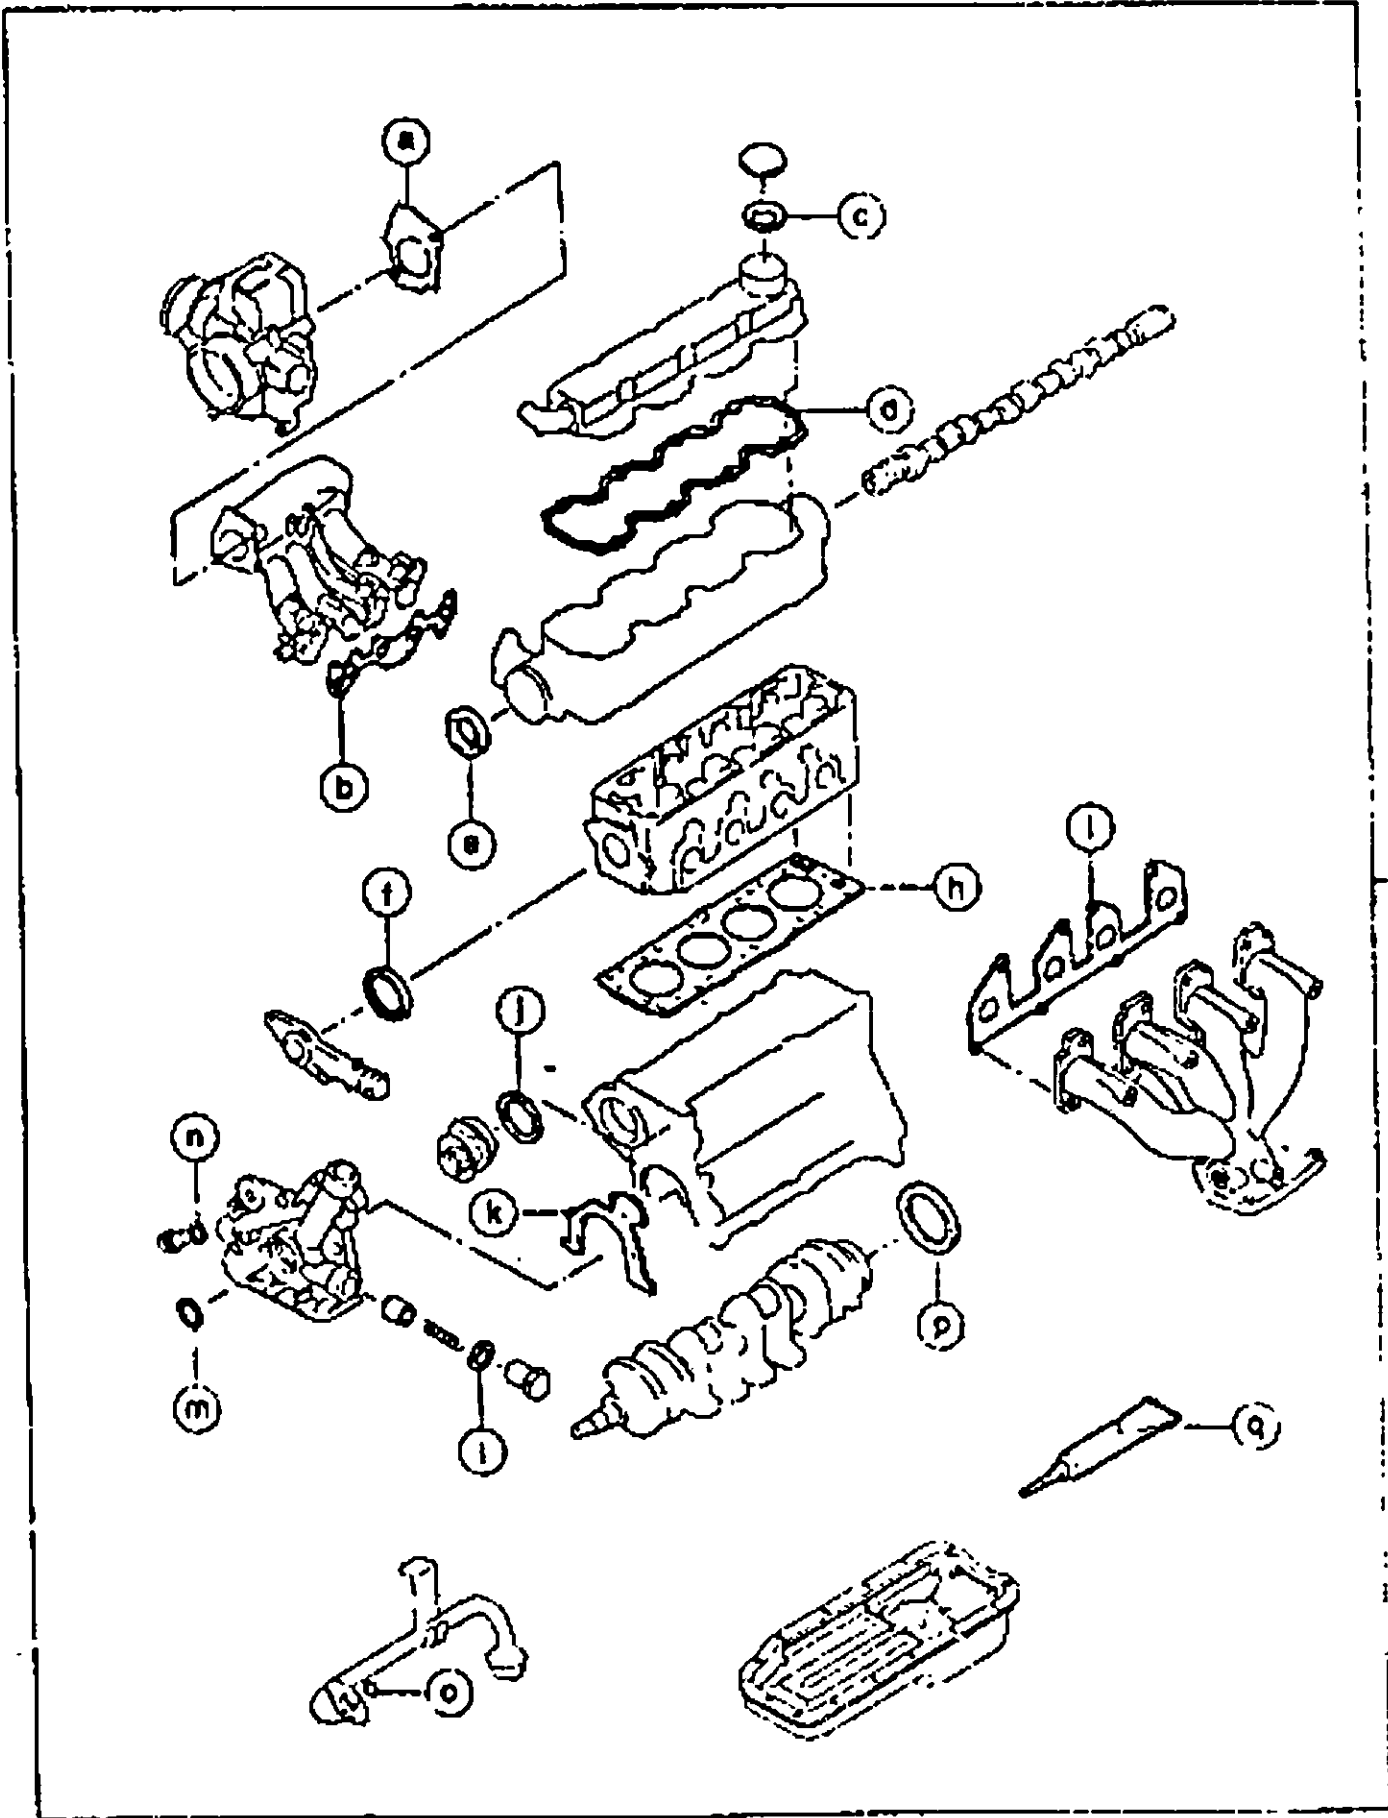


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N	3 H	5 H								
	[01] S1140005	(E)GASKET KIT-ENG OVERHAUL (D)DICHTUNGS-SATZ ÜBERHOLUNG	Y	.	B	B	B	S	S	S		(F)JEU DE JOINTS (S)JUEGO DE JUNTA		
		- CONSIST OF -								1				
		Ⓐ : GASKET-THROTTLE BODY								1			REFER TO	
		Ⓑ : GASKET-INTAKE MANIFOLD								1			BELOW	
		Ⓒ : SEAL-BAYONET CAP								1			2210-02	
		Ⓓ : GASKET- CAMSHAFT SUPT CVR								1			2430-02	
		Ⓔ : RING-CAMSHAFT SEAL								1			1320-02	
		⓫ : RING-THER. HOUSING SEAL								1			1320-05	
		⓬ : GASKET-CYLINDER HEAD								1			1320-11	
		⓭ : GASKET-EXH. MANIFOLD								1			1680-02	
		⓮ : RING-CYL BLOCK SEAL								1			1310-22	
		⓯ : GASKET-OIL PUMP BODY								1			2440-02	
		⓰ : RING-OIL PUMP SEAL								1			1330-02	
		⓱ : RING-CRANKSHAFT SEAL								1			1230-11	
		⓲ : WASHER-PLAIN								1			1230-05	
		⓳ : RING-SEAL								1			1230-02	
		⓴ : RING-CRANKSHAFT SEAL								1			1230-15	
		⓵ : GASKET-OIL PAN								1			1230-20	
													1220-09	
													9120-13	
													GROUP NO KEY NO	
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

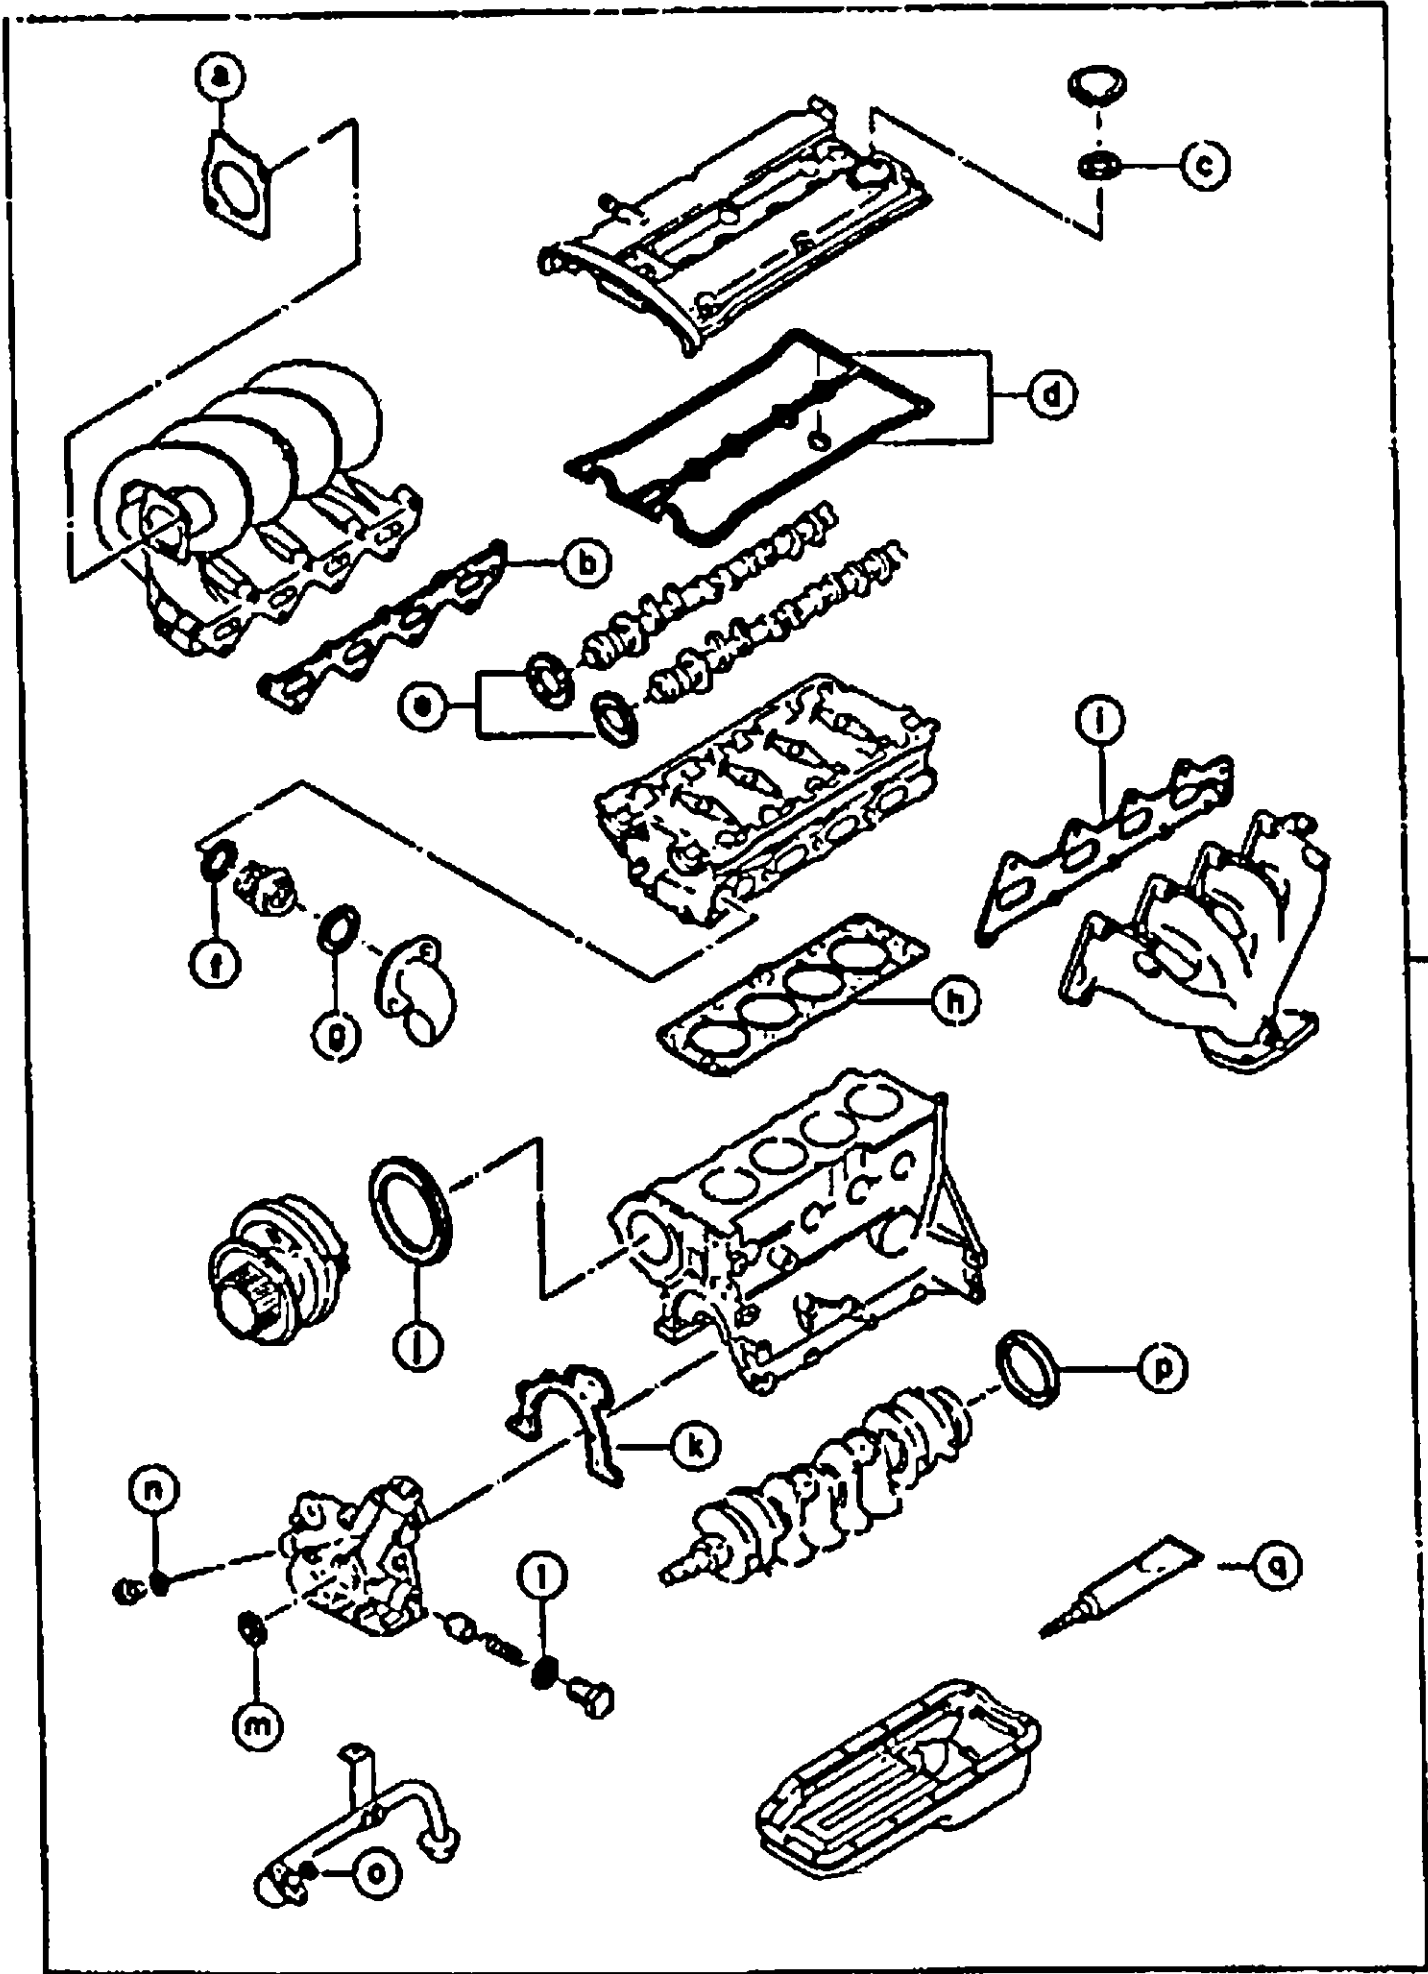

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01] S1141024	(E)GASKET KIT-ENG OVERHAUL (D)DICHTUNGS-SATZ ÜBERHOLUNG 6 . B B B . . O									(F)JEU DE JOINTS (S)JUEGO DE JUNTA					
										1						
										1			REFER TO BELOW			
		-CONSIST OF-														
		Ⓐ : GASKET-THROTTLE BODY								1			2211-02			
		Ⓑ : GASKET-INTAKE MANIFOLD								1			2431-02			
		Ⓒ : SEAL-BAYONET CAP								1			1321-02			
		Ⓓ : GASKET- CAMSHAFT SUPT CVR								1			1321-09			
		Ⓔ : RING-CAM SHAFT SEAL								2			1321-11			
		⓫ : RING-THER. COVER SEAL								1			1681-01			
		⓬ : RING-THER. HOUSING SEAL								1			1681-04			
		⓭ : GASKET-CYLINDER HEAD								1			1311-25			
		⓮ : GASKET-EXH. MANIFOLD								1			2441-02			
		⓯ : RING-CYL. BLOCK SEAL								1			1331-02			
		⓰ : GASKET-OIL PUMP BODY								1			1230-11			
		⓱ : RING-OIL PUMP SEAL								1			1230-05			
		⓲ : RING-CRANKSHAFT SEAL								1			1230-02			
		⓳ : WASHER-PLAIN								1			1230-15			
		⓴ : RING-SEAL								1			1230-20			
		⓵ : RING-CRANKSHAFT SEAL								1			1220-09			
		⓶ : GASKET-OIL PAN								1			9120-13			
GROUP NOKEY NO																
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								


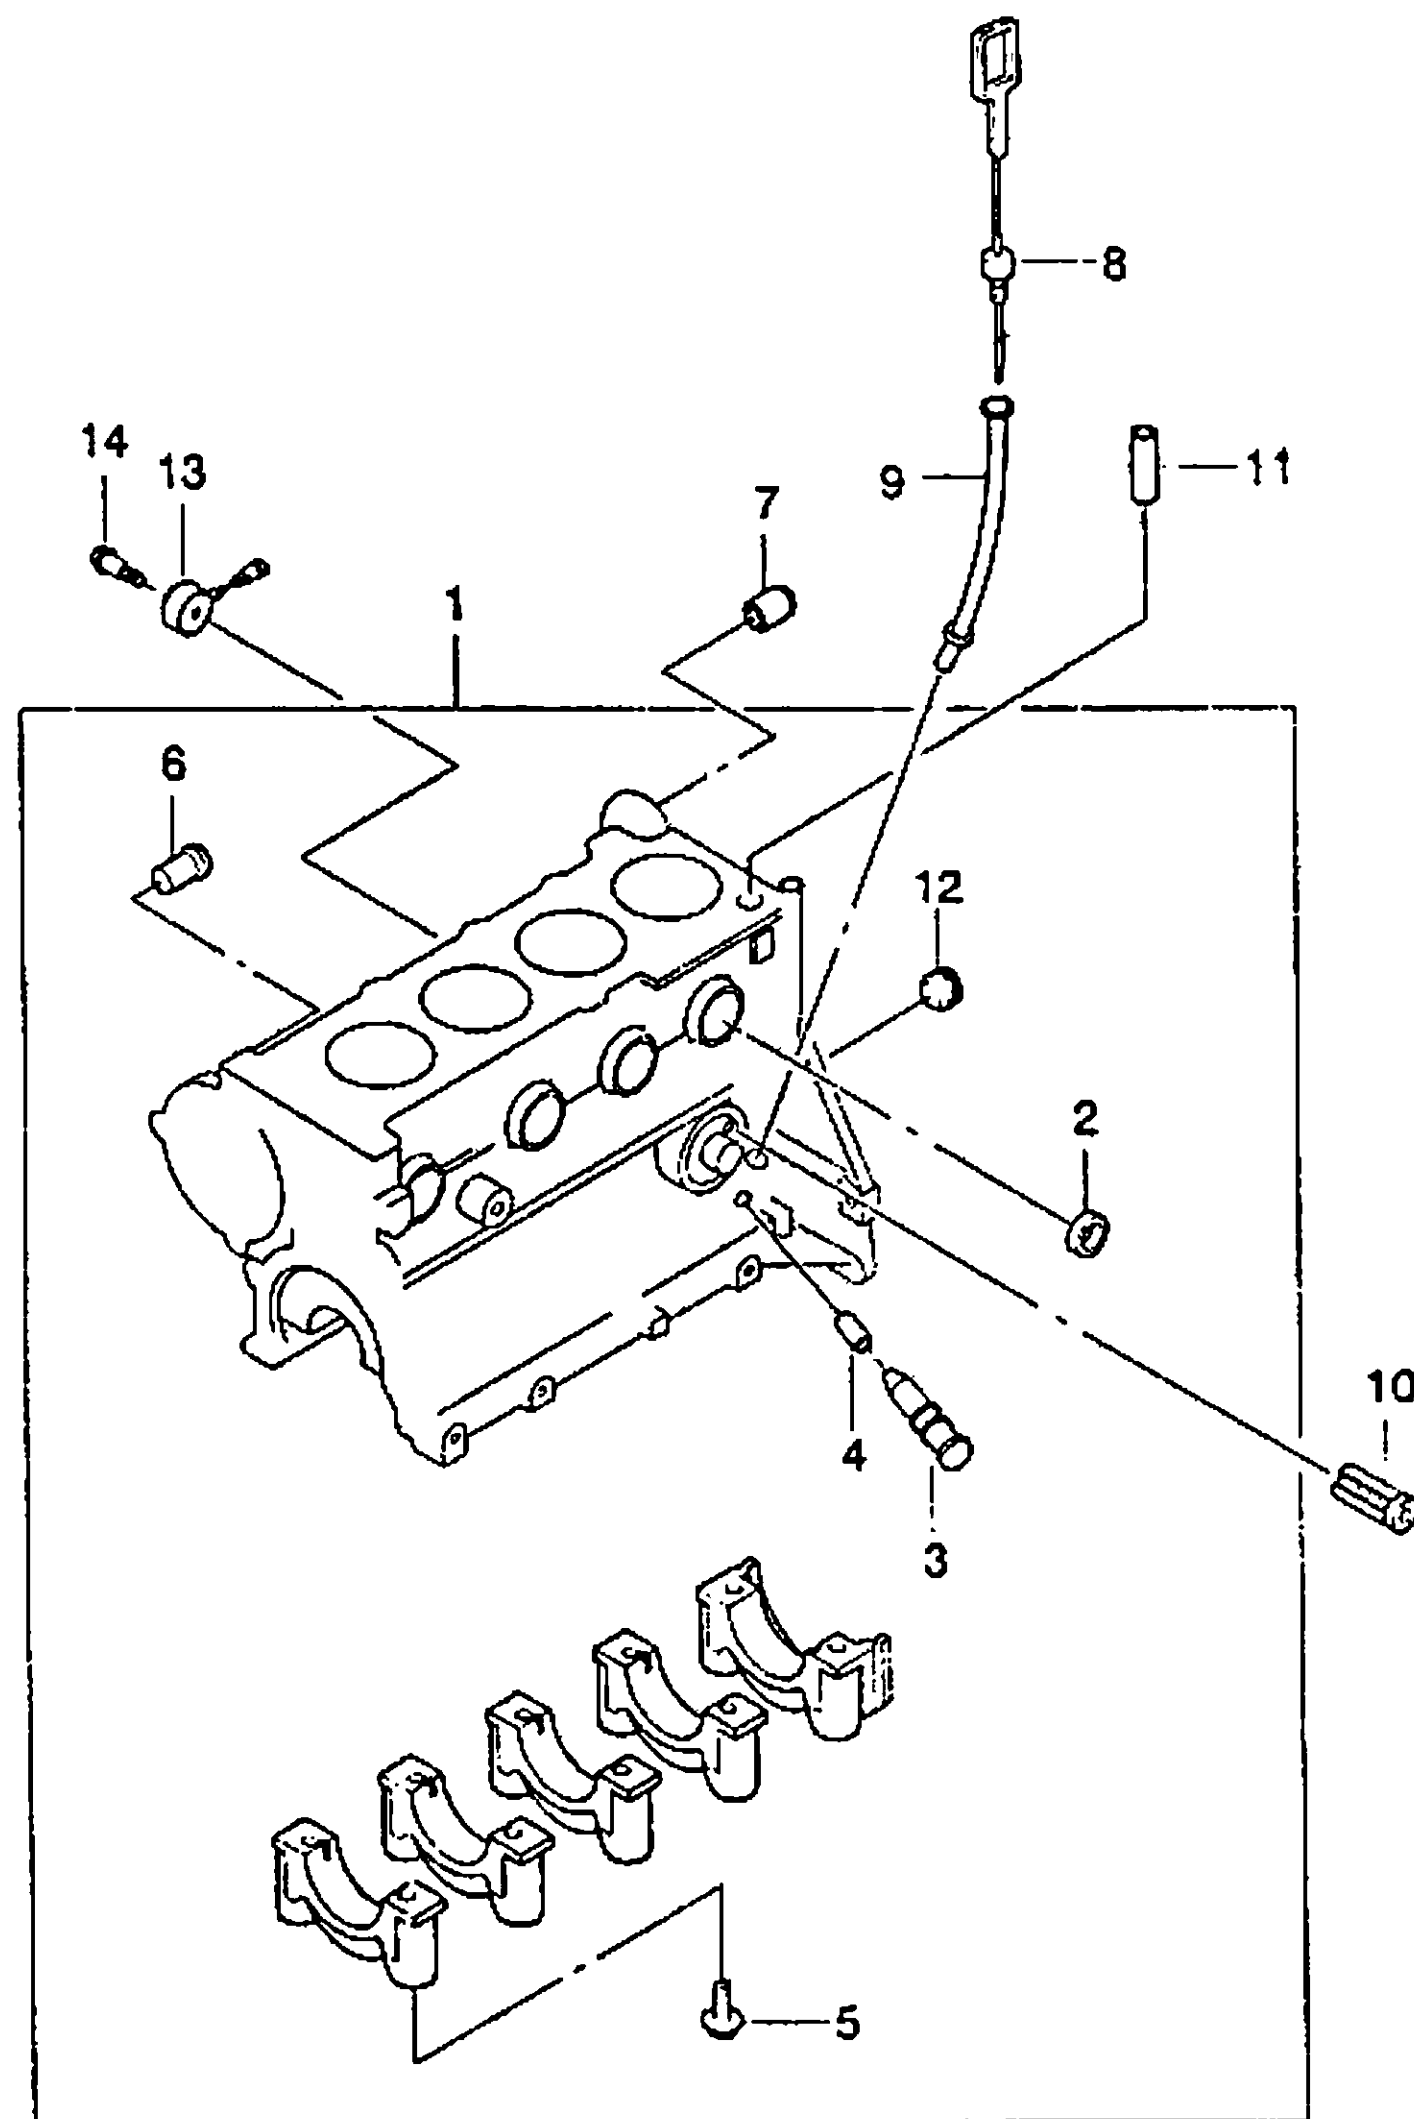


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N H	3 H	5 H	S S				S S	S S		
											FROM	TO		
	[01]	(E)BLOCK A-CYLINDER (D)BLOCK,ZYLINDER (S)BLOQUE-CILINDRO												
	A96184803	Y M B B B S S S								1				
	A96184804	Y A B B B O O O								1				
	A96184805	6 M B B B . . O								1				
	A96184806	6 A B B B . . O								1				
	[02]	(E)CAP (D)DECKEL (S)TAPA												
	96180730	. . B B B S S S								6			34-STD	
	11070803	. . B B B S S S								6			36-O/S	
	[03]	(E)PLUG-IGNITION TIMING (D)STÖPSEL (S)TAPON-TIEMPO DE IGNICION												
	90091048	. . B B B S S S								1	971001			
	[04]	(E)BUSHING-IGNITION TIMING (D)LAGERFUTTER (S)BUJE-TIEMPO DE IGNICION												
	90091049	. . B B B S S S								1				
	[05]	(E)BOLT-HEXAGON (D)SCHRAUBE (S)PERNO												
	09100-10008	. . B B B S S S								10				
	[06]	(E)NECK-WATER INLET (D)HALS,WASSERLEITUNG (S)CUELLO-ENTRADA DE AGUA												
	96351207	. . B B B S S S								1				
	[07]	(E)SLEEVE (D)HÜLSE,KUPPLUNG GEHÄUSE (S)MANGA-CARTER DE EMBRAGUE												
	90108591	. . B B B S S S								2				
	[08]	(E)STICK A-OIL LEVEL GAUGE (D)MEßSTAB,ÖL PEGEL (S)VARILLA-MEDIDOR												
	96352131	. M B B B S S S								1				
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

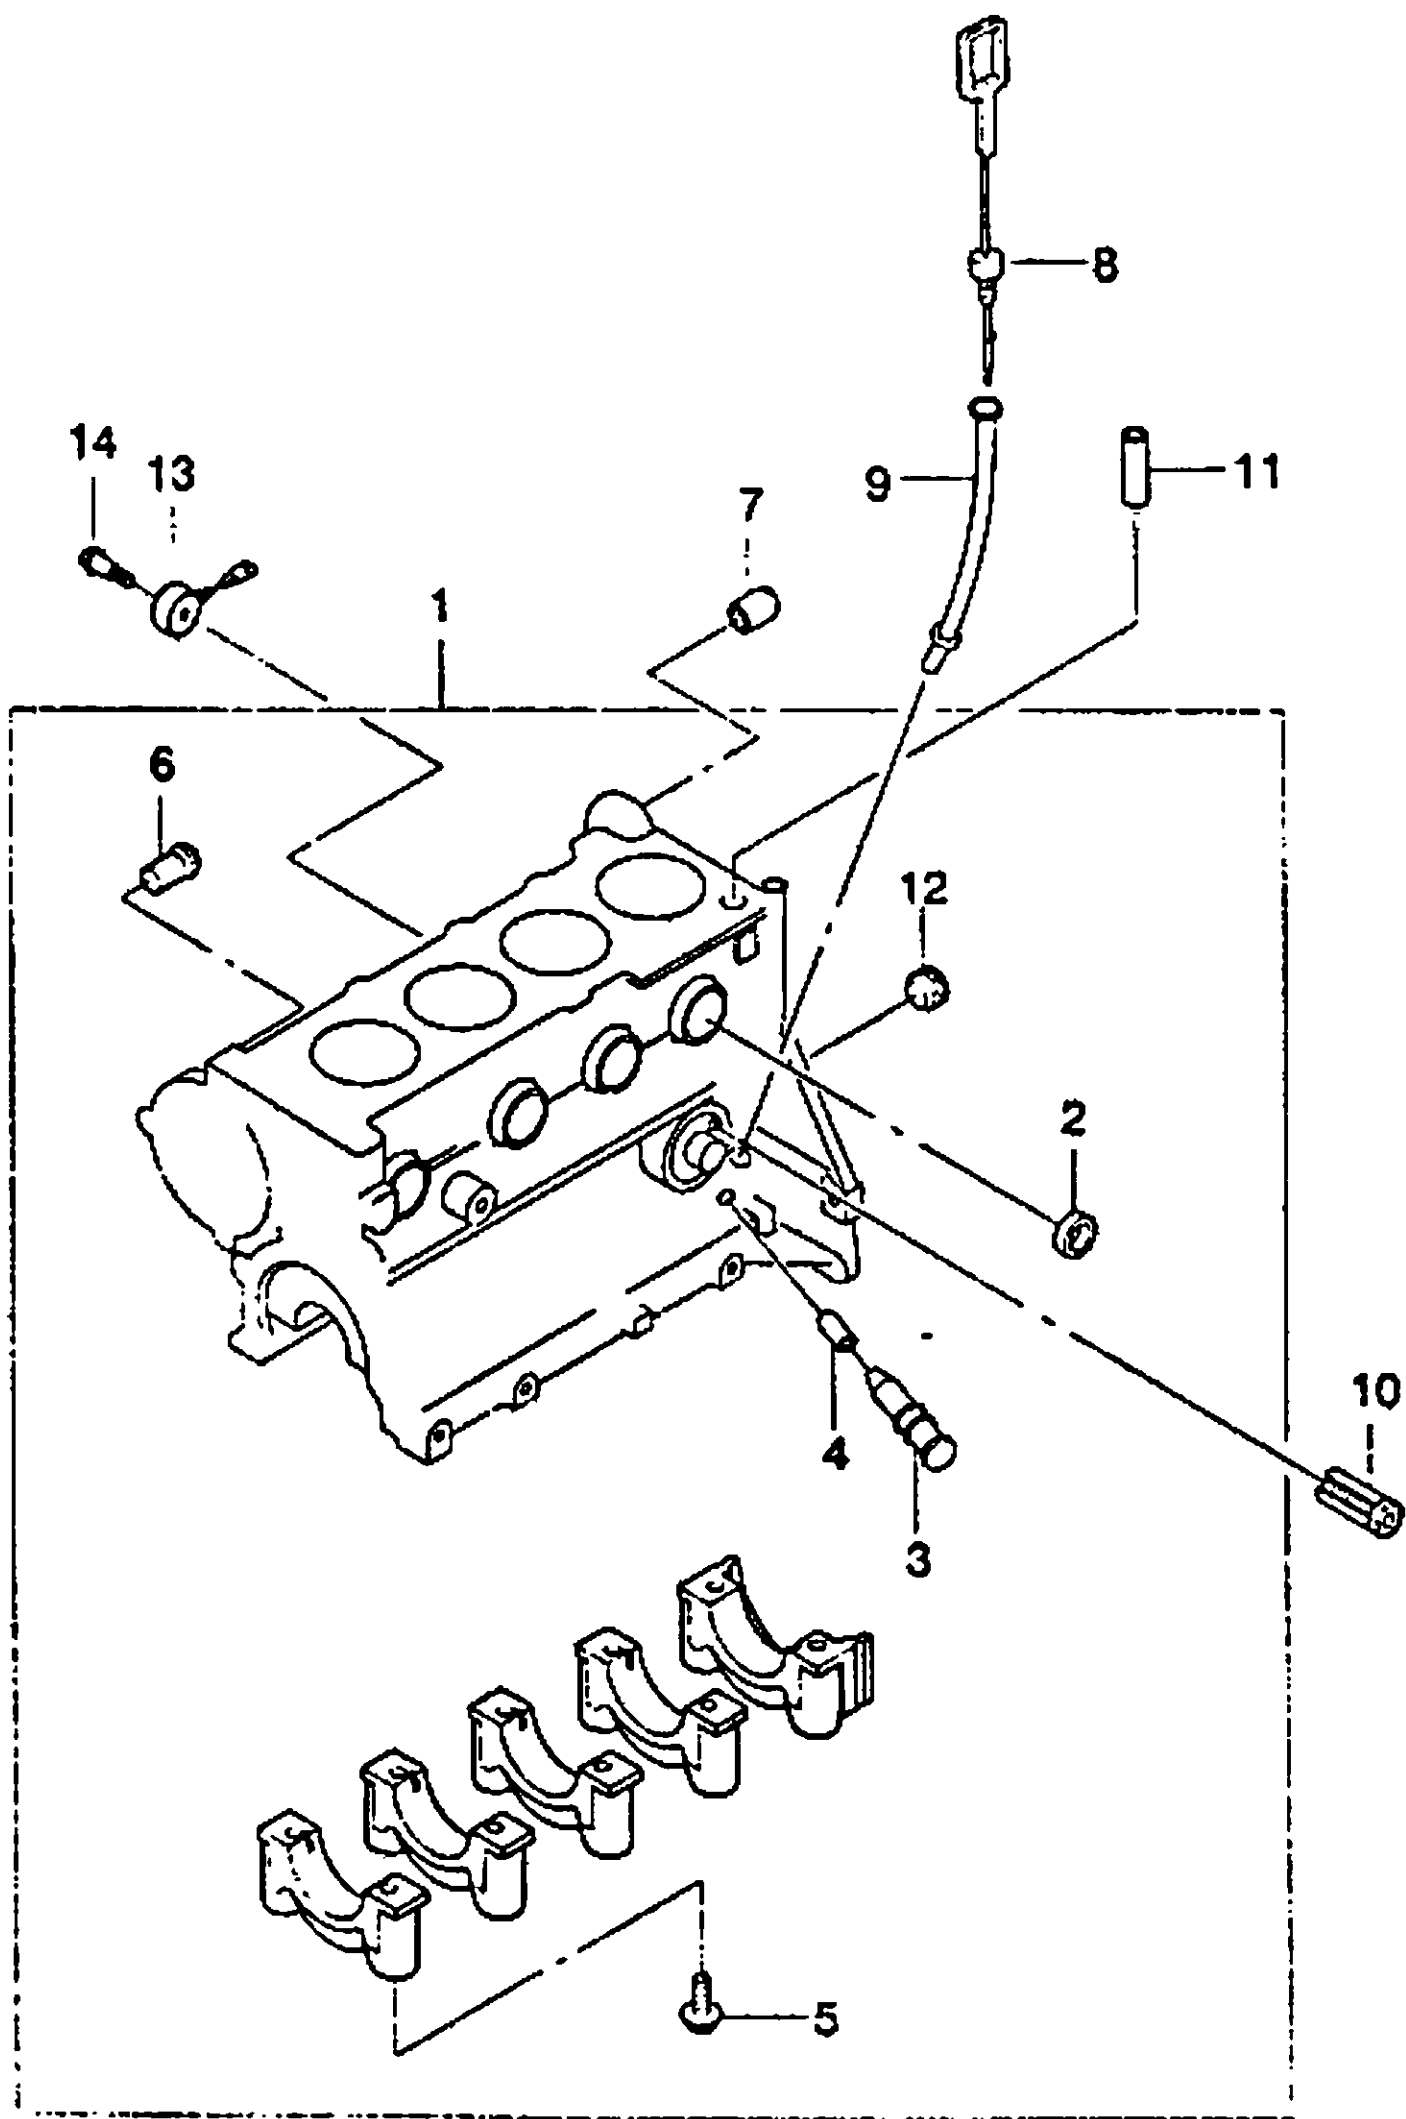


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	96352132	.	A	B	B	B	O	O	O		1					
	[09]												(F) TUYAU-JAUGE EN BATON (S) TUBO-VARILLA DE MEDIDOR			
	96352134	.	.	B	B	B	S	S	S		1					
	[10]												(F) SOUPAPE-DERIVATION (S) VALVULA-BY PASS			
	90136113	.	.	B	B	B	S	S	S		1					
	[11]												(F) CHEMISE (S) MANGA			
	90091779	.	.	B	B	B	S	S	S		2					
	[12]												(F) BOUCHON (S) TAPON			
	09246-14001	.	.	B	B	B	S	S	S		2					
	[13]												(F) DETECTEUR (S) SENSOR			
	10456240	6	.	B	B	B	.	.	O		1					
	[14]												(F) BOULON (S) PERNO			
	09111-08002	6	.	B	B	B	.	.	O		1					


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

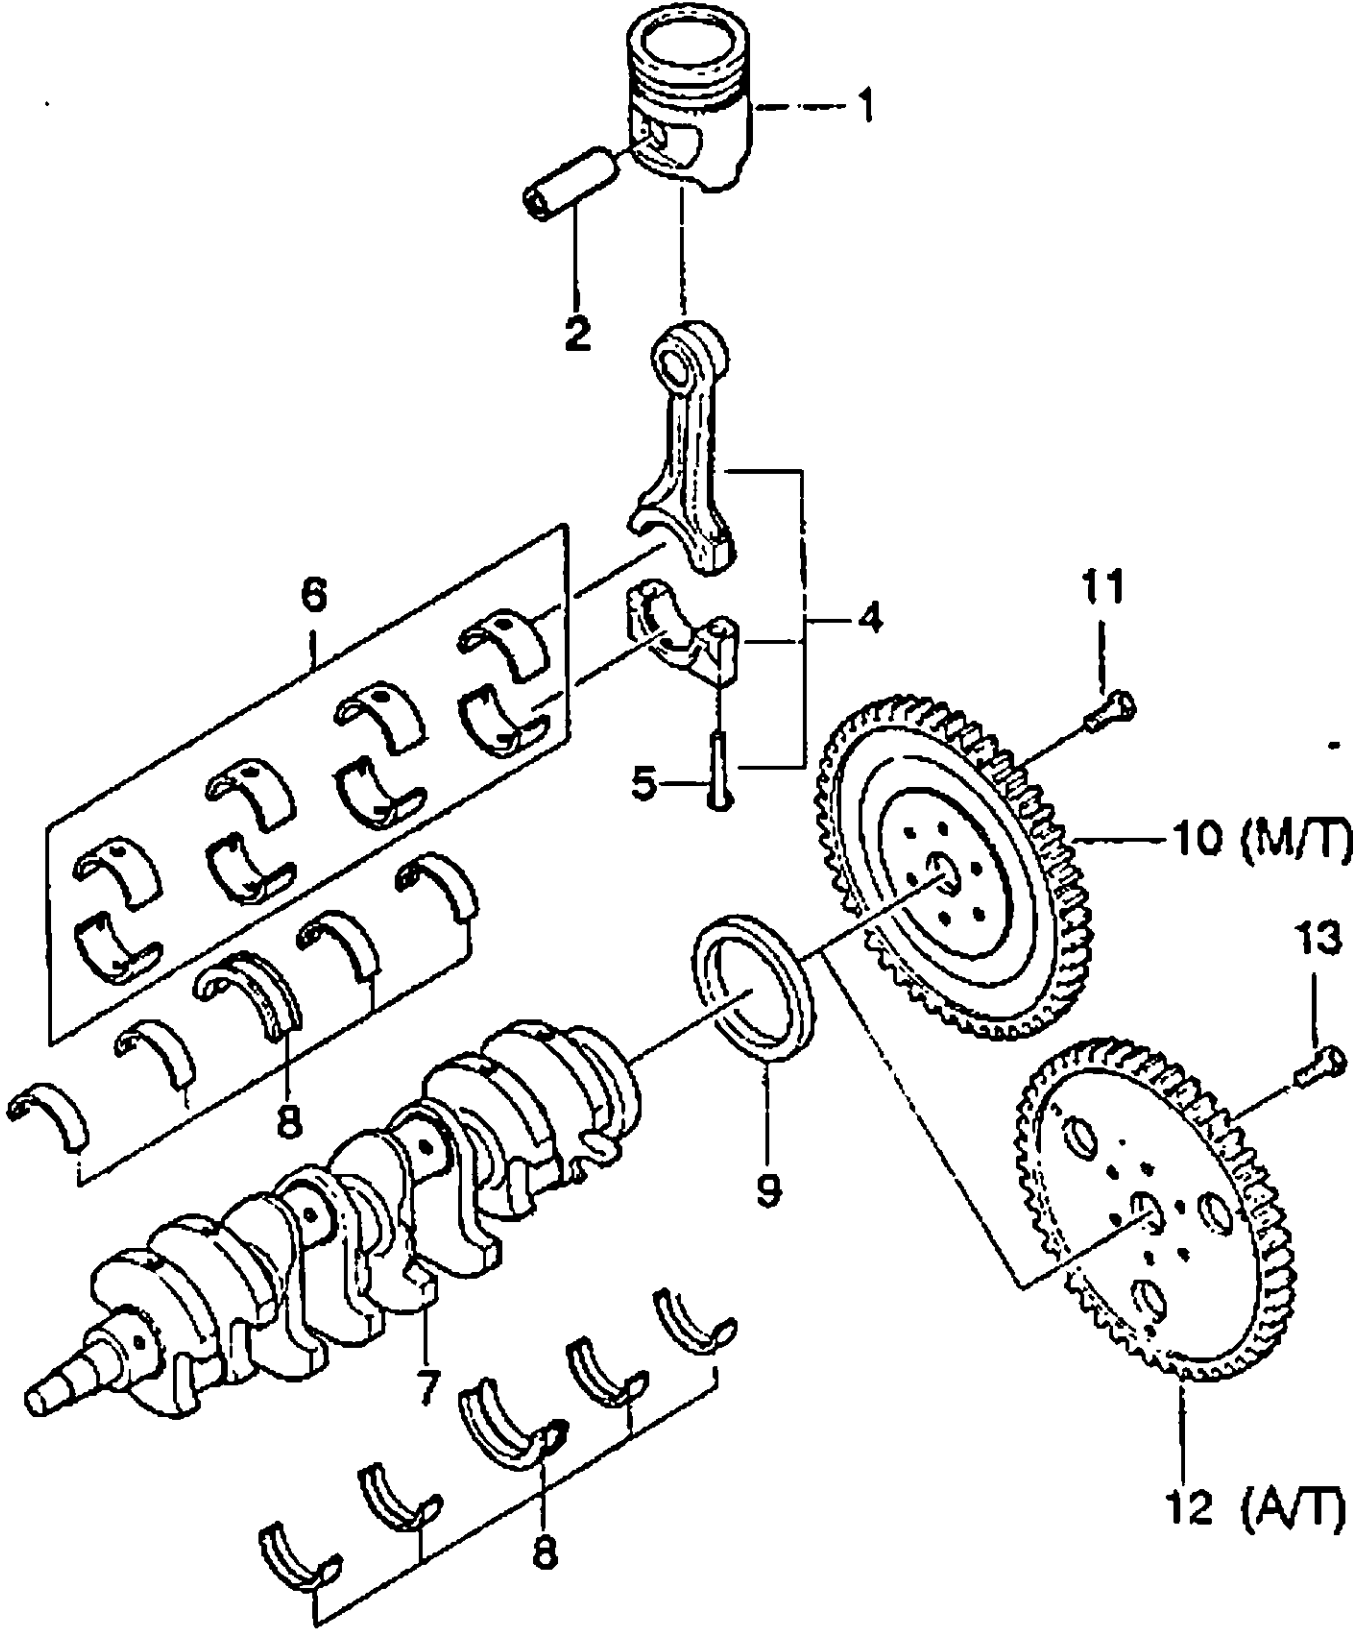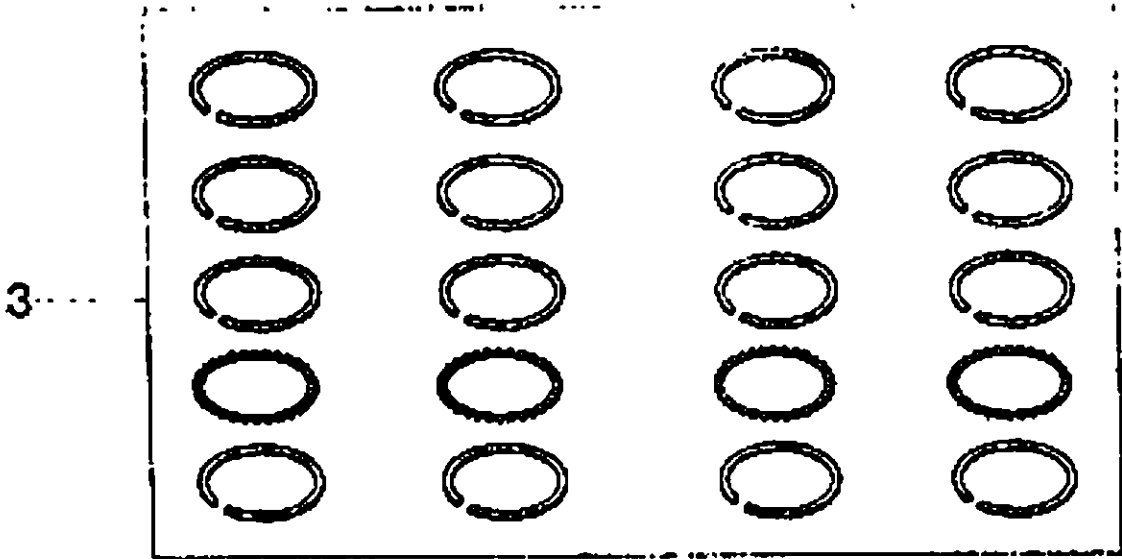


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E T N / G A	BODY			LEVEL					FROM	TO		
			4 N	3 H	5 H	S S	S S							
	[01]	(E)PISTON (D)KOLBEN								(F)PISTON (S)PISTON				
	96350120	Y .	B	B	B	S	S	S		4			STD	
	S1220008	Y .	B	B	B	S	S	S		4			O/S 0.25	
	S1220009	Y .	B	B	B	S	S	S		4			O/S 0.5	
	96182846	6 .	B	B	B	.	.	O		4			STD	
	S1220019	6 .	B	B	B	.	.	O		4			O/S 0.25	
	S1220020	6 .	B	B	B	.	.	O		4			O/S 0.5	
	[02]	(E)PIN-PISTON (D)STIFT,KOLBEN								(F)BROCHE-PISTON (S)PASADOR-PISTON				
	96110730	Y .	B	B	B	S	S	S		4				
	96350355	6 .	B	B	B	.	.	O		4				
	[03]	(E)RING SET-PISTON (D)RING SATZ,KOLBEN								(F)JEU DE SEGMENTS-PISTON (S)JUEGO DE ANILLOS-PISTON				
	NP960	Y .	B	B	B	S	S	S		1			STD	
	NP1015	Y .	B	B	B	S	S	S		1			O/S 0.25	
	NP1016	Y .	B	B	B	S	S	S		1			O/S 0.5	
	S1220014	6 .	B	B	B	.	.	O		1			STD	
	S1220015	6 .	B	B	B	.	.	O		1			O/S 0.25	
	S1220016	6 .	B	B	B	.	.	O		1			O/S 0.5	
	[04]	(E)ROD A-CONNECTING (D)STAB,VERBINDUNGS								(F)BIELLE-BIELLE (S)VARILLA-CONECTANDO				
	A90281724	. .	B	B	B	S	S	S		4				
	[05]	(E)BOLT-HEXAGON (D)SCHRAUBE								(F)BOULON (S)PERNO				
	09100-08004	. .	B	B	B	S	S	S		8				
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

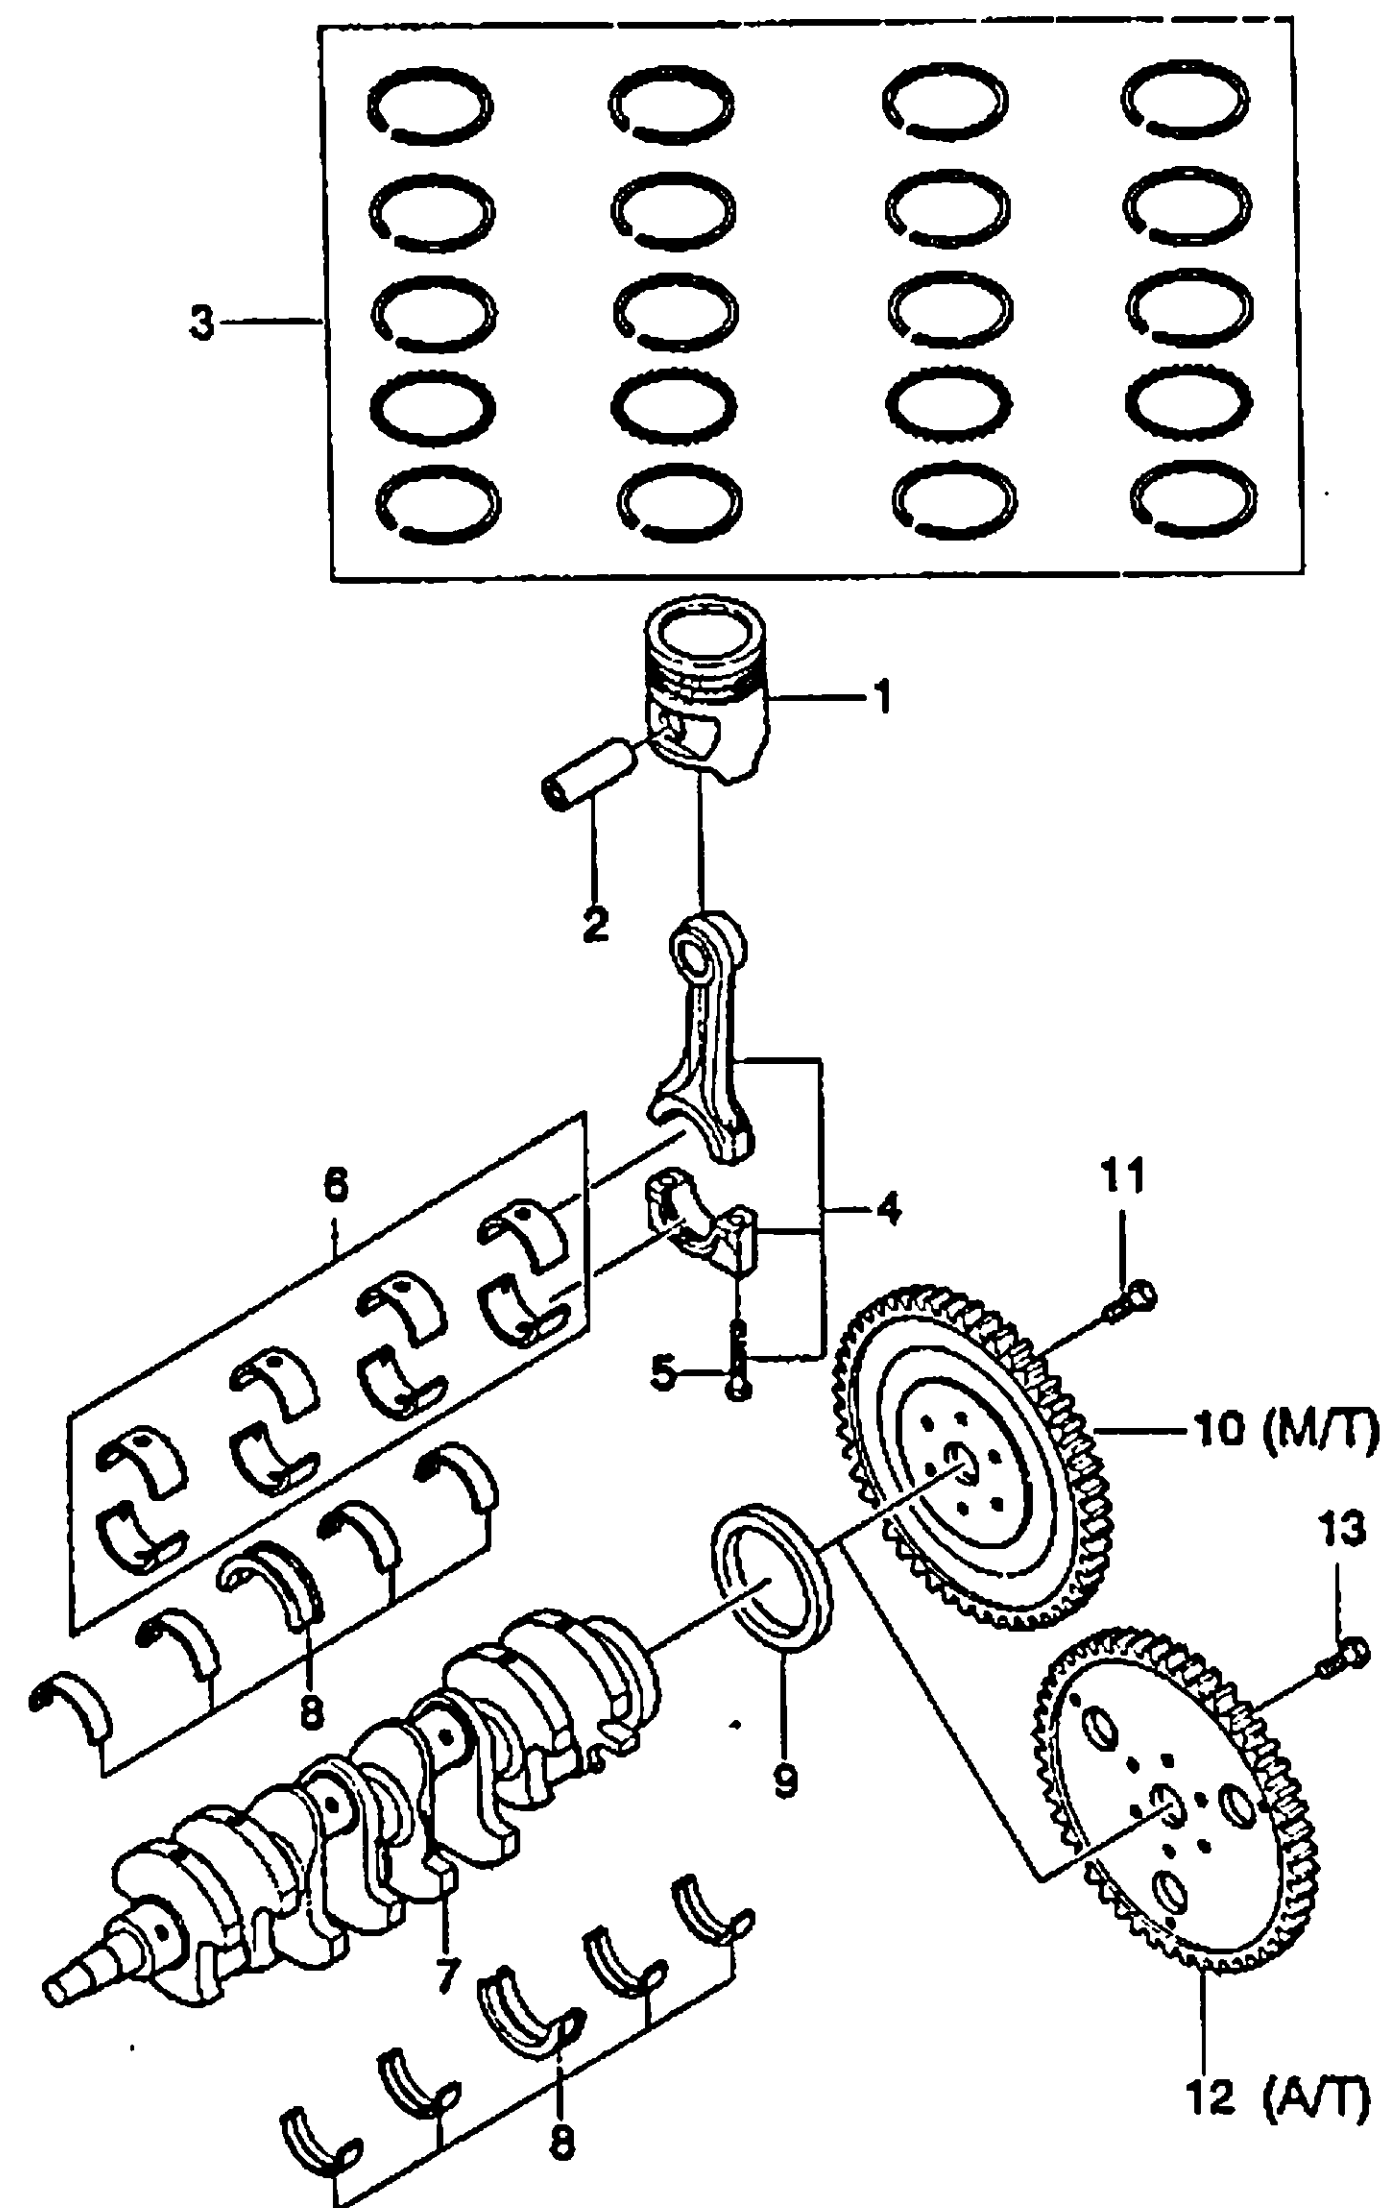


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S S E X								
	[06]	(E)BEARING SET-CONNECTING ROD (D)KUGELLAGER									(F)ROULEMENT-BIELLE (S)COJINETE-VARA DE CONEXION				
	96351662S	. . B B B S S S								1					
	96351663S	. . B B B S S S								1					
	[07]	(E)CRANKSHAFT A (D)KURBELWELLE									(F)VILEBREQUIN (S)CIGUEÑAL				
	A96350171	. . B B B S S S								1					
	[08]	(E)BEARING SET-CRANKSHAFT (D)KUGELLAGER STELLUNG									(F)JEU DE ROULEMENT (S)JUEGO DE COJINETE				
	S1220012	. . B B B S S S								1		STD			
	S1220013	. . B B B S S S								1		U/S 0.25			
	[09]	(E)RING-SHAFT SEAL (D)RING,STAB DICHTUNG									(F)ANNEAU-JOINT D'ARBRE (S)ANILLO-BROCHE DE EJE				
	96101489	. . B B B S S S								1		80X98X10			
	[10]	(E)FLYWHEEL A (D)SCHWUNGRAD									(F)VOLANT D'ENTRAINEMENT (S)VOLANTE				
	96184979	Y M B B B S S S								1					
	96184353	6 M B B B . . O								1		POT			
	[11]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09100-09001	Y M B B B S S S								6					
	09100-09003	6 M B B B . . O								6					
	[12]	(E)PLATE A-FLEXIBLE (D)PLATTE,FLEXIBEL									(F)PLAQUE-FLEXIBLE (S)PLACA-FLEXIBLE				
	90236309	. A B B B O O O								1					
	[13]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09100-09004	. A B B B O O O								6					
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

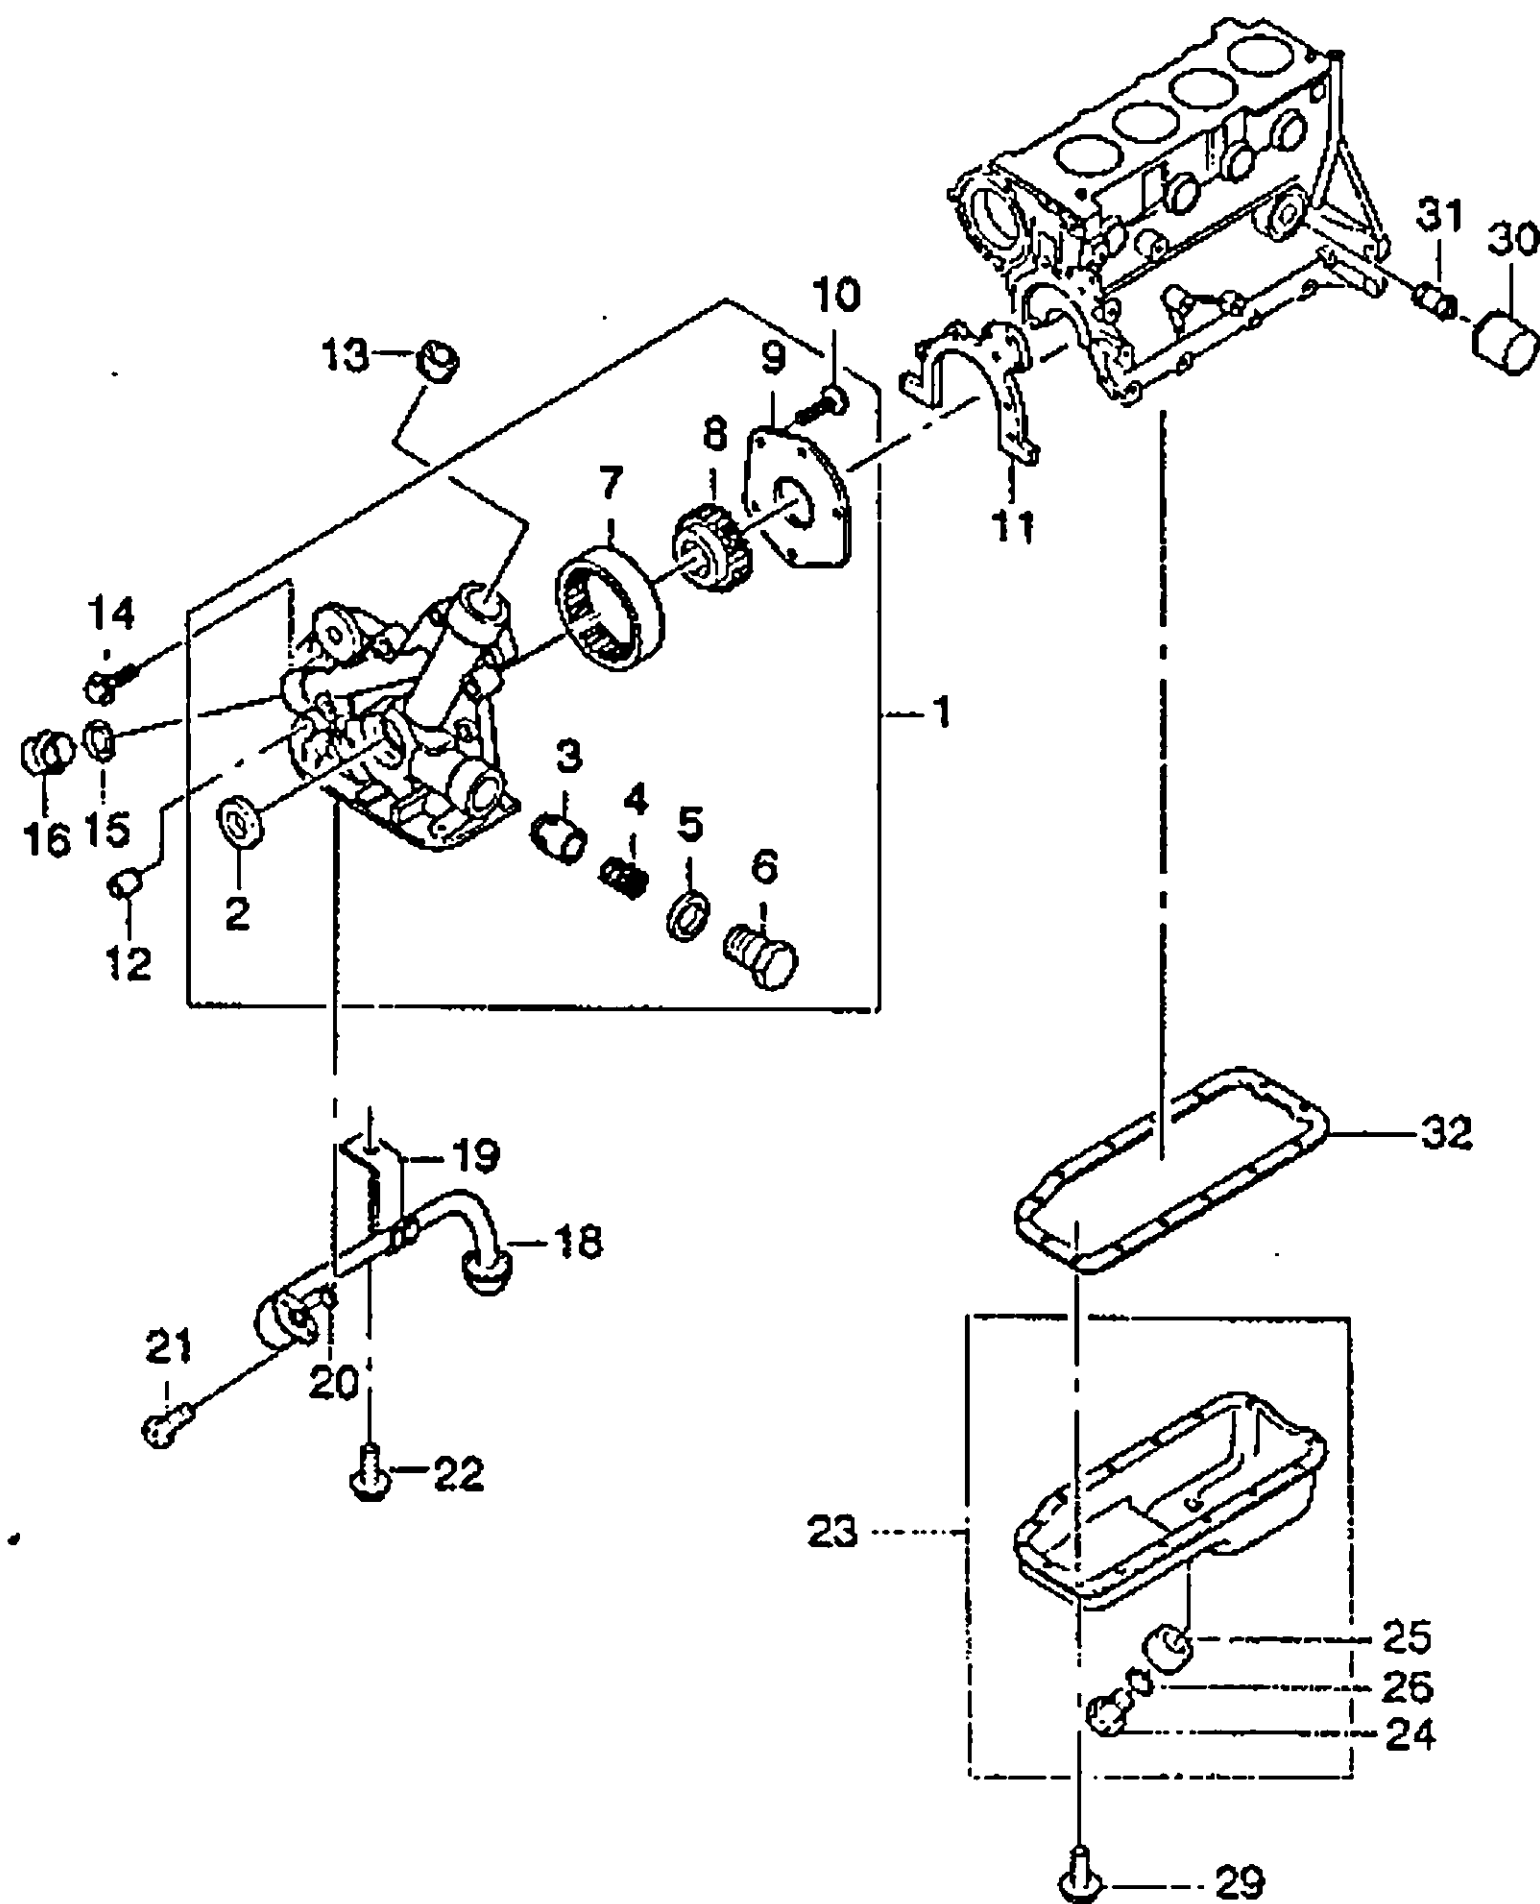

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / Q T Y R	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL			FROM	TO			
				4 N	3 H	5 H	S S							S S
	[01]	(E)PUMP A-OIL (D)PUMPE,ÖL								(F)POMPE-HUILE (S)BOMBA-ACEITE				
	96350159	. . B B B S S S								1				
	[02]	(E)RING-SHAFT SEAL (D)RING,KURBELWELLE DICHTUNG								(F)ANNEAU-JOINT VLEBREQUIN (S)ANILLO-SELLO DE CIGUEÑAL				
	96350161	. . B B B S S S								1		30X42X8		
	[03]	(E)PLUNGER-PRESS VALVE (D)TAUCHER								(F)PISTON PLONGEUR (S)EMBOLO				
	03448846	. . B B B S S S								1				
	[04]	(E)SPRING (D)FEDERUNG								(F)RESSORT (S)RESORTE				
	03448847	. . B B B S S S								1				
	[05]	(E)RING-SEAL (D)RING,ÖLPUMPE DICHTUNG								(F)ANNEAU (S)ANILLO-SELLO				
	11093042	. . B B B S S S								1				
	[06]	(E)PLUG-SCREW (D)STÖPSEL,SCHRAUBEN								(F)BOUCHON-VIS (S)TAPON-TORNILLO				
	03448834	. . B B B S S S								1		M20X1.5		
	[07]	(E)ROTOR-OIL PUMP OUTER (D)DREHTEIL								(F)ROTOR (S)ROTOR				
	96350165	. . B B B S S S								1				
	[08]	(E)ROTOR-OIL PUMP INNER (D)DREHTEIL								(F)ROTOR (S)ROTOR				
	96350164	. . B B B S S S								1				
	[09]	(E)COVER-OIL PUMP (D)DECKEL,ÖLPUMPE								(F)CARTER-POMPE A HUILE (S)CUBIERTA-BOMBA DE ACEITE				
	96350166	. . B B B S S S								1				
	[10]	(E)SCREW (D)SCHRAUBE								(F)VIS (S)TORNILLO				
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

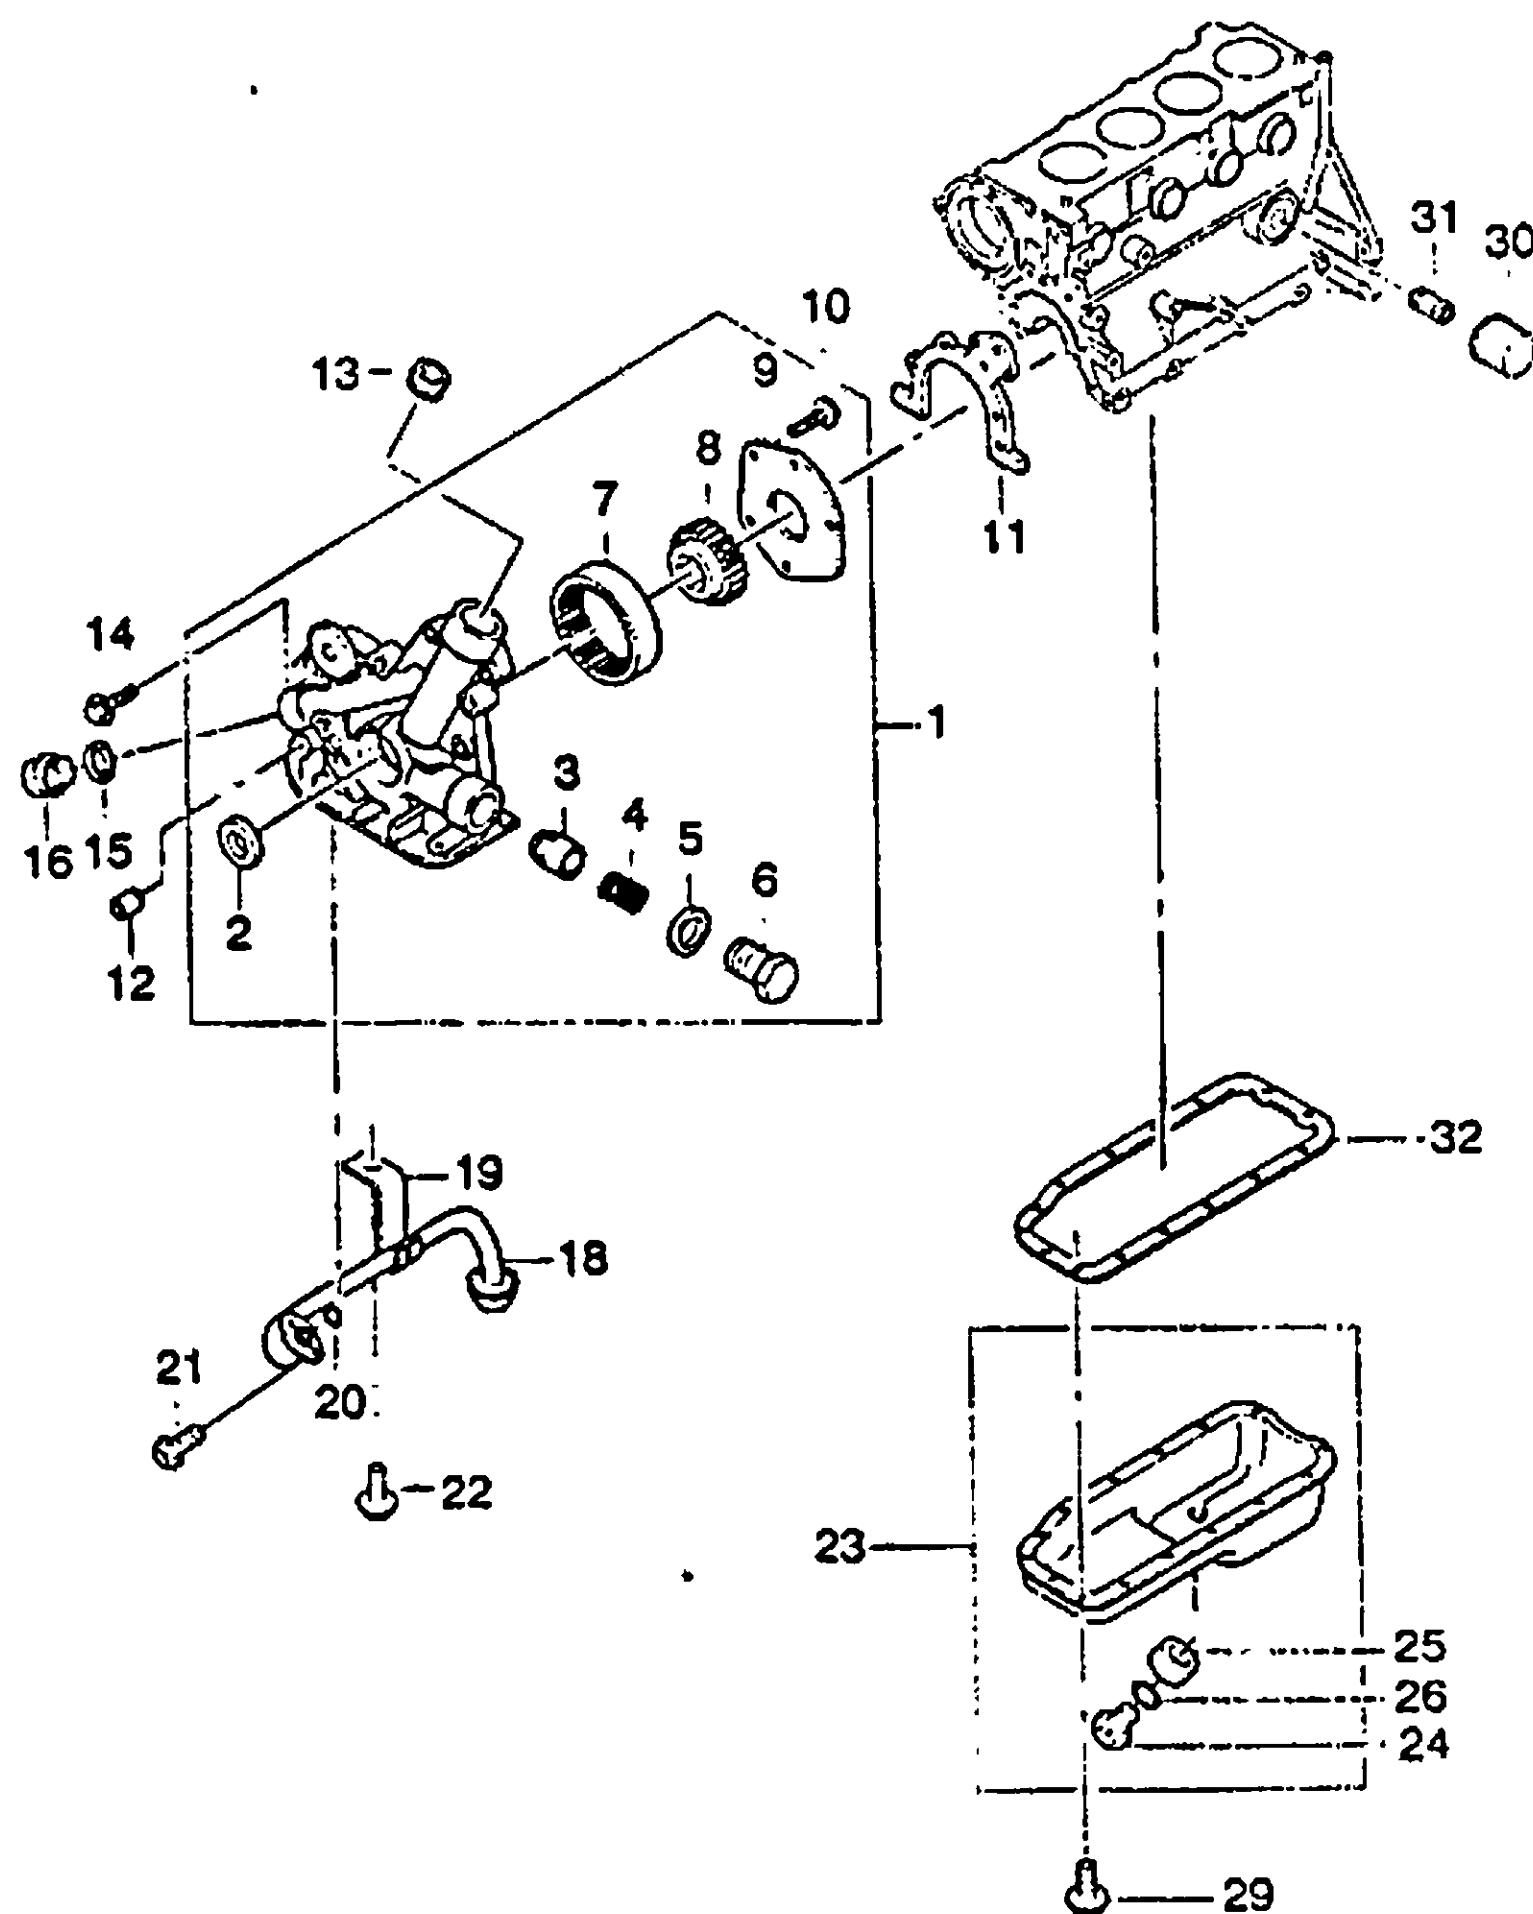


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E T N / G A	BODY			LEVEL					FROM	TO			
			4 N H	3 H	5 H	S S	S S								S S
	11085861	.	.	B	B	B	S	S	S		5		M6X14		
	[11]												(E)GASKET-OIL PUMP BODY (D)DICHTUNG,ÖL-PUMPE-KÖRPER	(F)JOINT-CORPS POMPE A HUILE (S)JUNTA-CUERPO DE BOMBA	
	96181208	.	.	B	B	B	S	S	S	&NN4	1				
	96100599	.	.	B	B	B	A	A	A	&NN5	1				
	90353564	.	.	B	B	B	A	A	A	&NN7	1	970608			
Y	96181208	.	.	B	B	B	A	A	A	&NN7	1	970608			
	[12]												(E)SLEEVE-OIL PUMP (D)HÜLSE,ÖLPUMPE	(F)CHEMISE-POMPE A HUILE (S)MANGA-BOMBA DE ACEITE	
	90096047	.	.	B	B	B	S	S	S		2				
	[13]												(E)PLUG-SCREW (D)STÖPSEL,SCHRAUBEN	(F)BOUCHON-VIS (S)TAPON-TORNILLO	
	09246-18002	.	.	B	B	B	S	S	S		1				
	[14]												(E)BOLT-HEXAGON (D)SCHRAUBE	(F)BOULON (S)PERNO	
	01130-06253													NOT APPLIED	
	09117-06008	.	.	B	B	B	S	S	S		6				
	[15]												(E)WASHER-PLAIN (D)DICHTUNGSRING	(F)RONDELLE (S)ARANDELA	
	09160-14003	.	.	B	B	B	S	S	S		1				
	[16]												(E)SWITCH A-OIL PRESSURE (D)SCHALTER,ÖL DRUCK	(F)COMMUTATEUR (S)INTERRUPTOR	
	90336039	.	.	B	B	B	S	S	S		1				
	[18]												(E)PIPE A-OIL SUCTION (D)ROHR,ÖL SAUG	(F)TUYAU-ASPIRATION HUILE (S)TUBERIA-SUCCION DE ACEITE	
	90410981	.	.	B	B	B	S	S	S		1				
	[19]												(E)BRACKET-OIL SUCTION PIPE (D)TRÄGER,ÖLLEITUNGSROHR	(F)SUPPORT (S)SOPORTE	
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

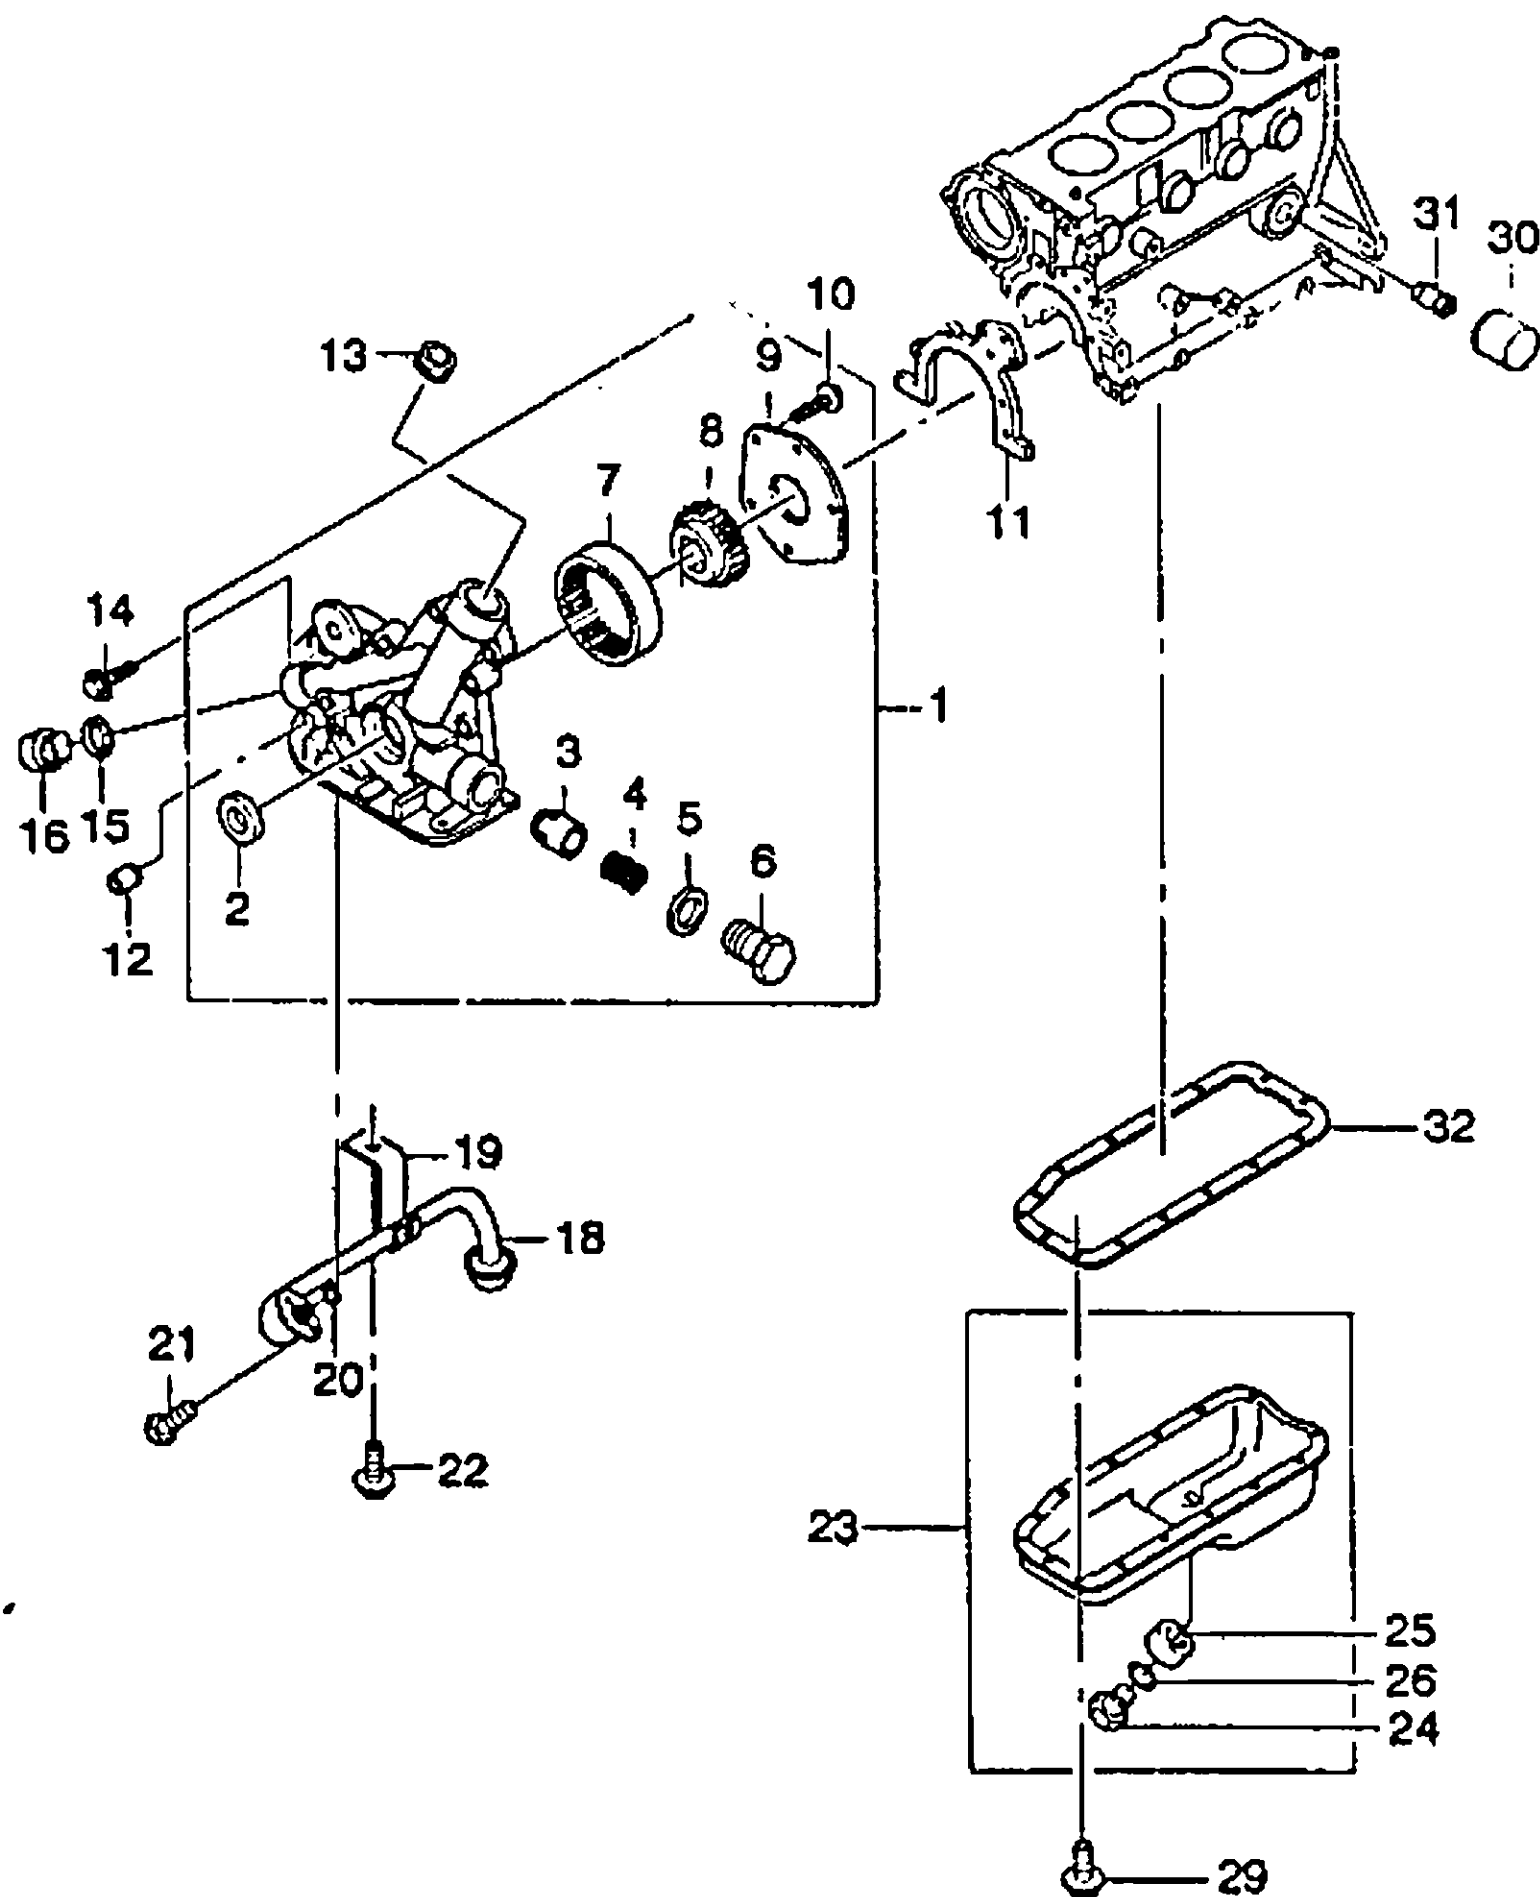


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	90076916	.	.	B	B	B	S	S	S		1				
	[20]			(E)RING-SEAL									(F)ANNEAU-JOINT		
				(D)RING,DICHTUNG									(S)ANILLO-SELLO		
	90190637	.	.	B	B	B	S	S	S		1				
	[21]			(E)BOLT									(F)BOULON		
				(D)SCHRAUBE									(S)PERNO		
	09117-06001	.	.	B	B	B	S	S	S		2				
	[22]			(E)BOLT									(F)BOULON		
				(D)SCHRAUBE									(S)PERNO		
	01130-06129	.	.	B	B	B	S	S	S		1				
	[23]			(E)PAN A-OIL									(F)CARTER-HUILE		
				(D)PFANNE,OL									(S)RECIPIENTE-ACEITE		
	96351480	.	.	B	B	B	S	S	S	-NN7	1	971001	STEEL		
	96350495	.	M	B	B	B	A	A	A	&NN7	1	970617	ALUMINUM		
O	96351600	.	M	B	B	B	A	A	A	&NN7	1	970617	971001	ALUMINUM	
	96351480	.	A	B	B	B	A	A	A	&NN7	1	971001	STEEL		
	96351480	Y	M	B	B	B	S	S	S	-NN4&XCA	1	971001	STEEL		
	96351480	Y	M	B	B	B	S	S	S	-NN7	1	971001	STEEL		
	96351600	Y	M	B	B	B	A	A	A	&NN4&XCA	1	971001	ALUMINUM		
	96351600	Y	M	B	B	B	A	A	A	&NN7	1	971001	ALUMINUM		
	96351480	Y	A	B	B	B	O	O	O		1	971001	STEEL		
	96351480	6	.	B	B	B	.	.	O	-NN7	1	971001	STEEL		
	96351600	6	M	B	B	B	.	.	A	&NN7	1	971001	ALUMINUM		
	96351480	6	A	B	B	B	.	.	A	&NN7	1	971001	STEEL		
	[24]			(E)BOLT									(F)BOULON		
				(D)SCHRAUBE									(S)PERNO		


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

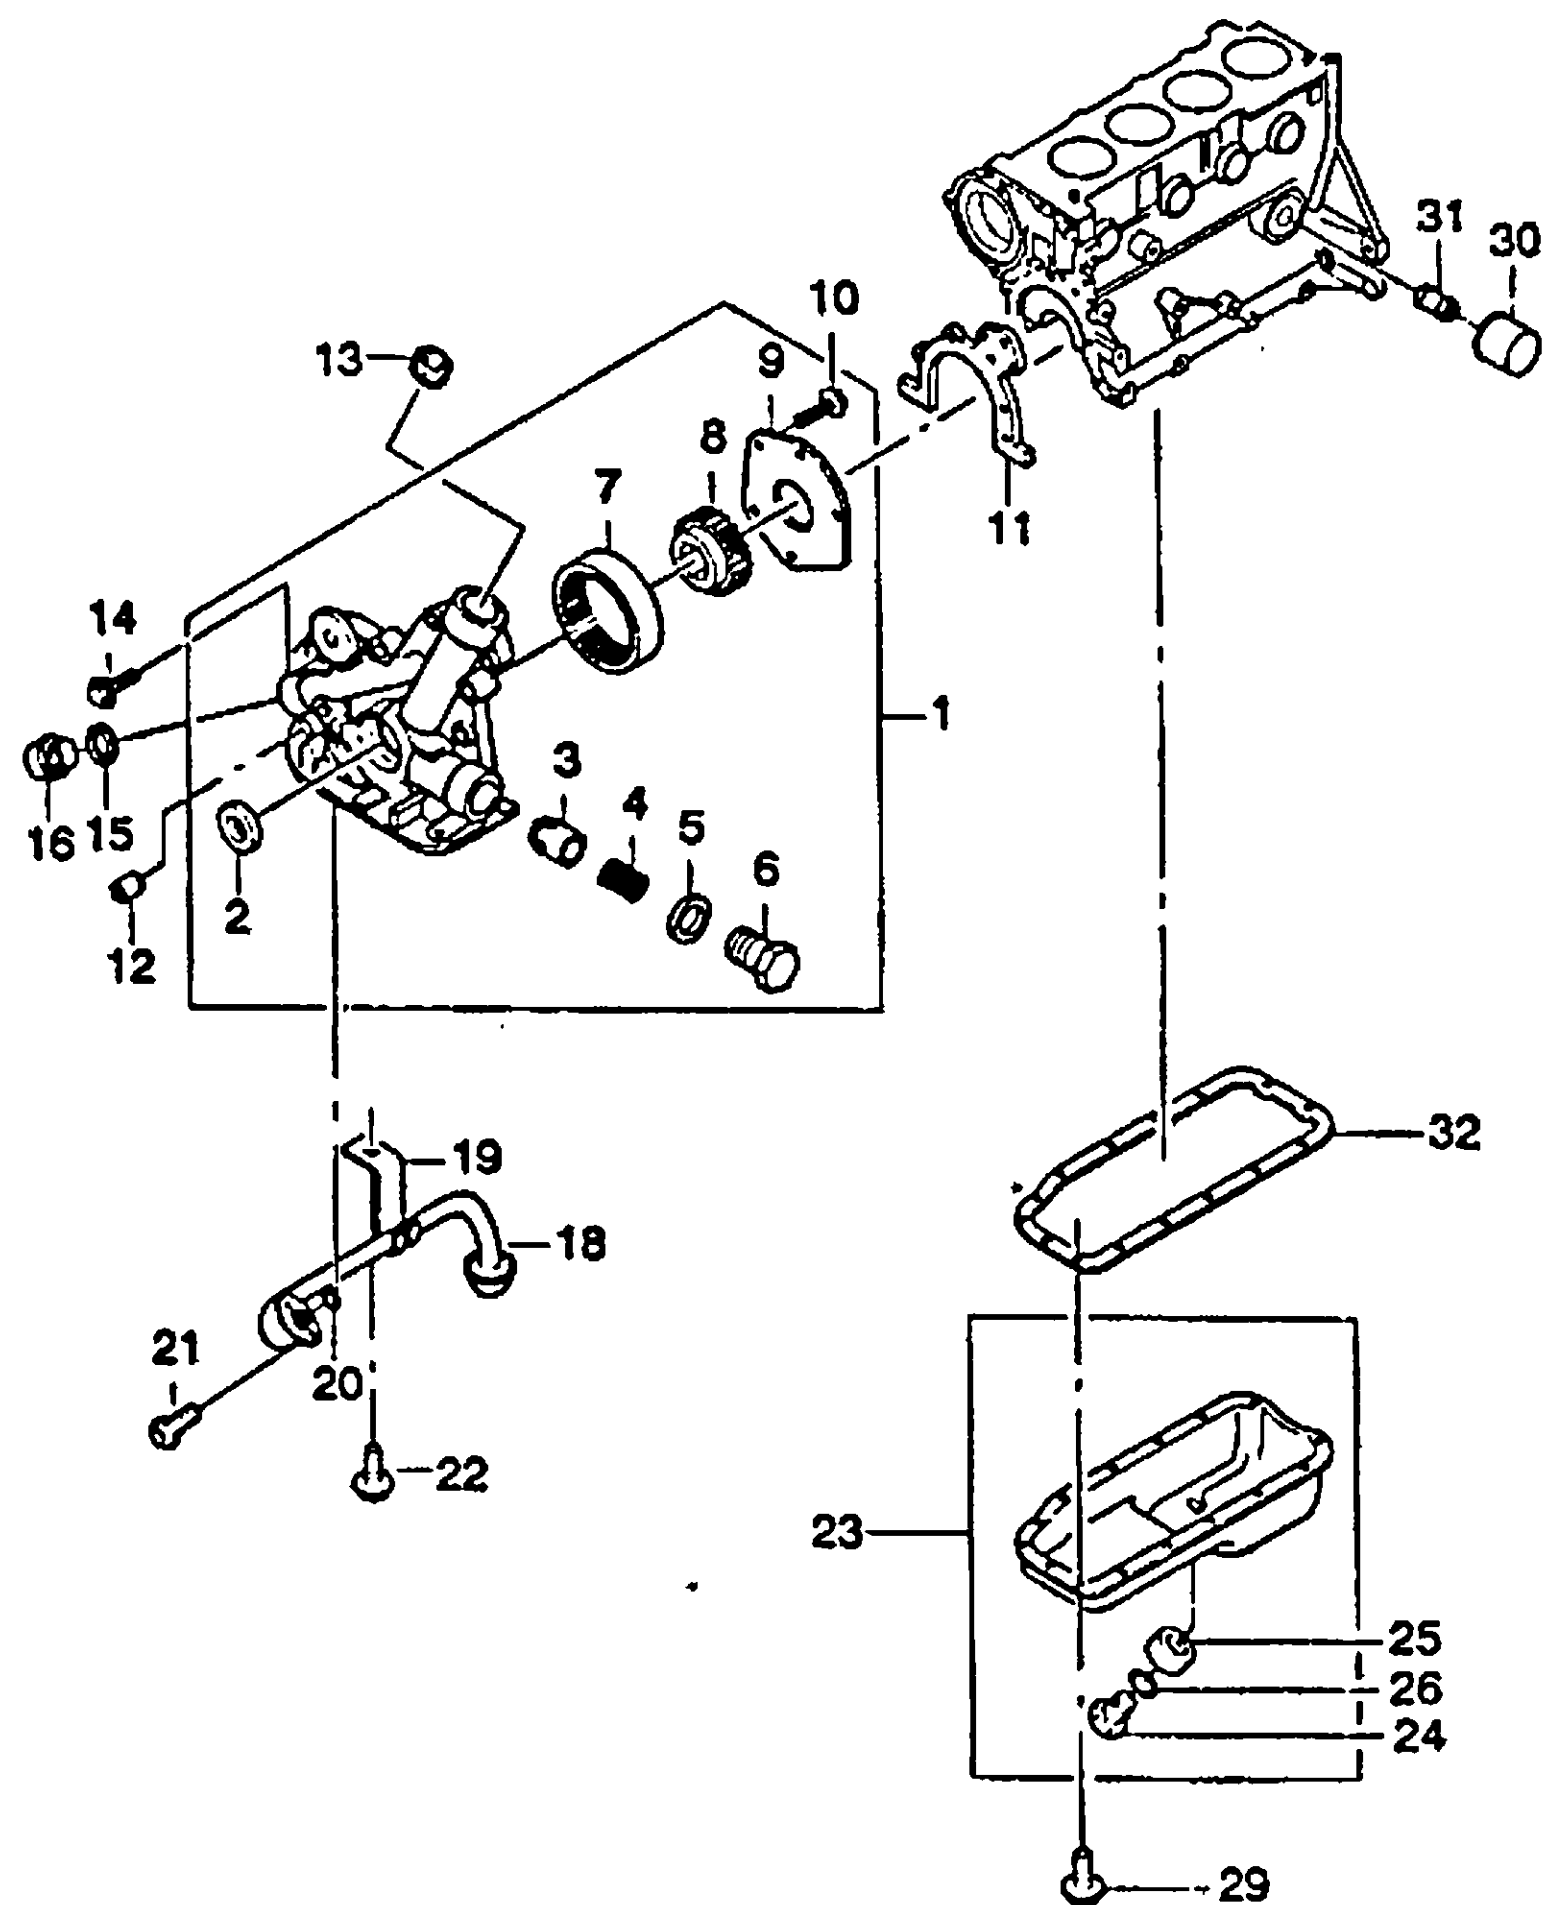


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S
	09100-14005	.	.	B	B	B	S	S	S		1			(E)RING-THREADED (D)RING,SCHRAUBENGWINDE	(F)ANNEAU-FILETE (S)ANILLO-CON ROSCA
	[25]														
	96351497	.	.	B	B	B	S	S	S		1			(E)WASHER-PLAIN (D)DICHTUNGSRING	(F)RONDELLE (S)ARANDELA
	[26]														
	09160-14003	.	.	B	B	B	S	S	S		1			(E)BOLT (D)SCHRAUBE	(F)BOULON (S)PERNO
	[29]														
	09117-06005	.	.	B	B	B	S	S	S	-NN7	15	970701			
Y	09103-06007	.	.	B	B	B	S	S	S	-NN7	15	970701	971001		
	09117-06006	.	M	B	B	B	A	A	A	&NN7	15	970701			
Y	09103-06006	.	M	B	B	B	A	A	A	&NN7	15	970701	971001		
	09117-06005	.	A	B	B	B	A	A	A	&NN7	15	970701			
Y	09103-06007	.	A	B	B	B	A	A	A	&NN7	15	970701	971001		
	09103-06007	.	.	B	B	B	S	S	S		15	971001		FOR STEEL OIL PAN	
	09103-06006	.	.	B	B	B	S	S	S		15	971001		FOR ALUMINUM OIL PAN	
	[30]													(E)FILTER A-OIL (D)FILTER,ÖL	(F)FILTRE-HUILE (S)FILTRO-ACEITE
	94797406	.	.	B	B	B	S	S	S		1			(E)PIECE-CONNECTING (D)TEIL,VERBINDUNGS	(F)PIECE-DE CONNEXION (S)PIEZA-CONEXION
	[31]														
	90144360	.	.	B	B	B	S	S	S		1			(E)GASKET-OIL PAN (D)DICHTUNG,ÖL-PFANNE	(F)JOINT-CARTER D'HUILE (S)JUNTA
	[32]														
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

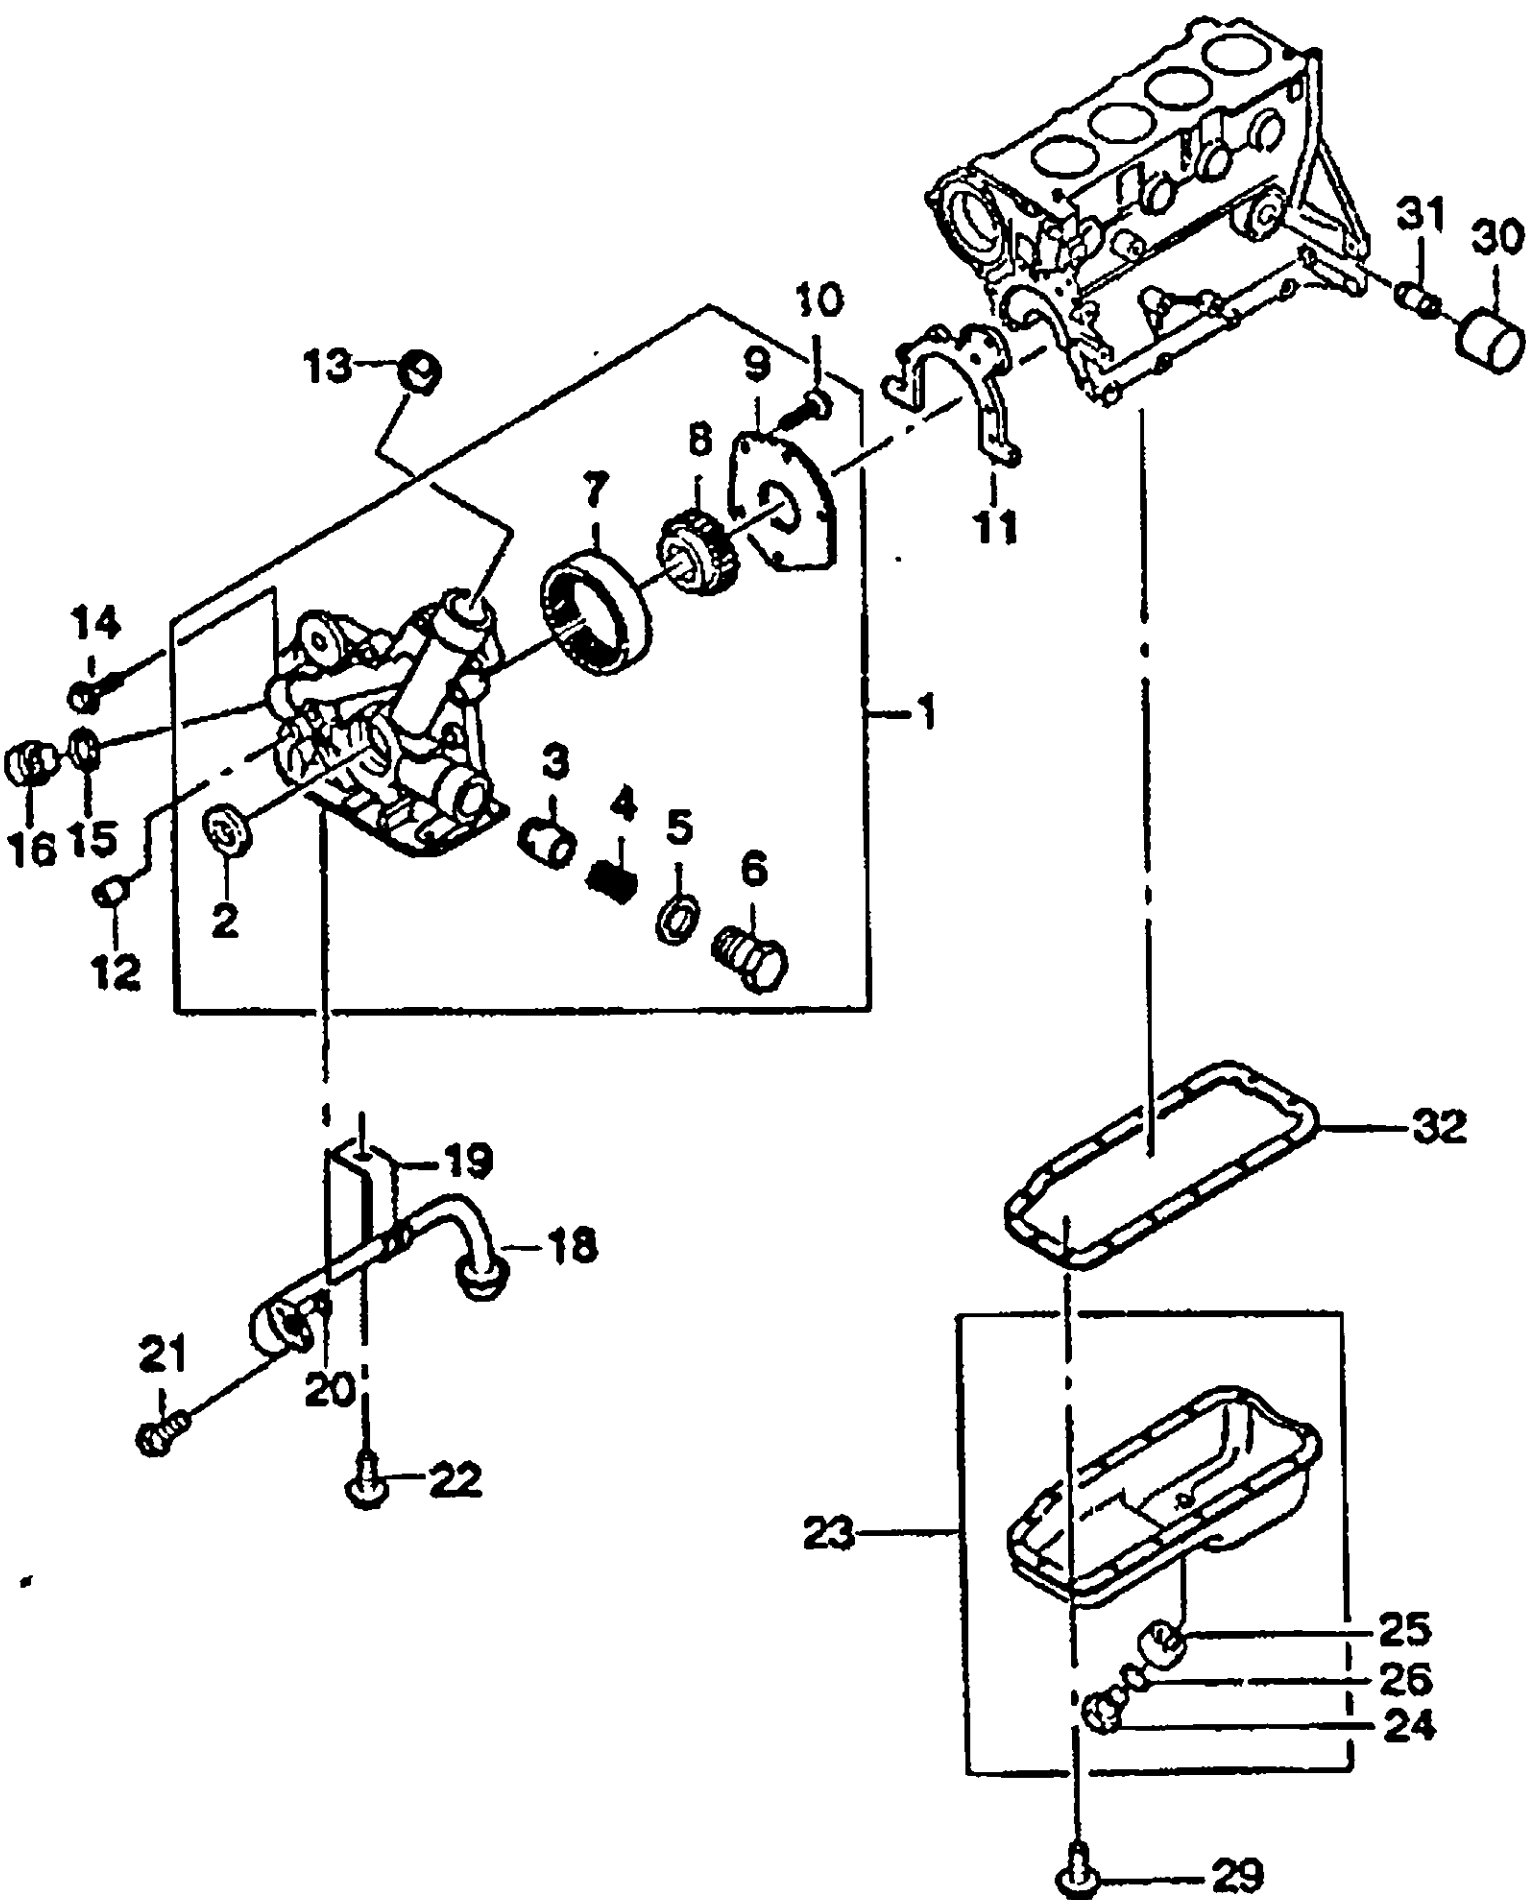


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S E
		REFER GROUP 9120 KEY NO. 13								1			SEALING		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

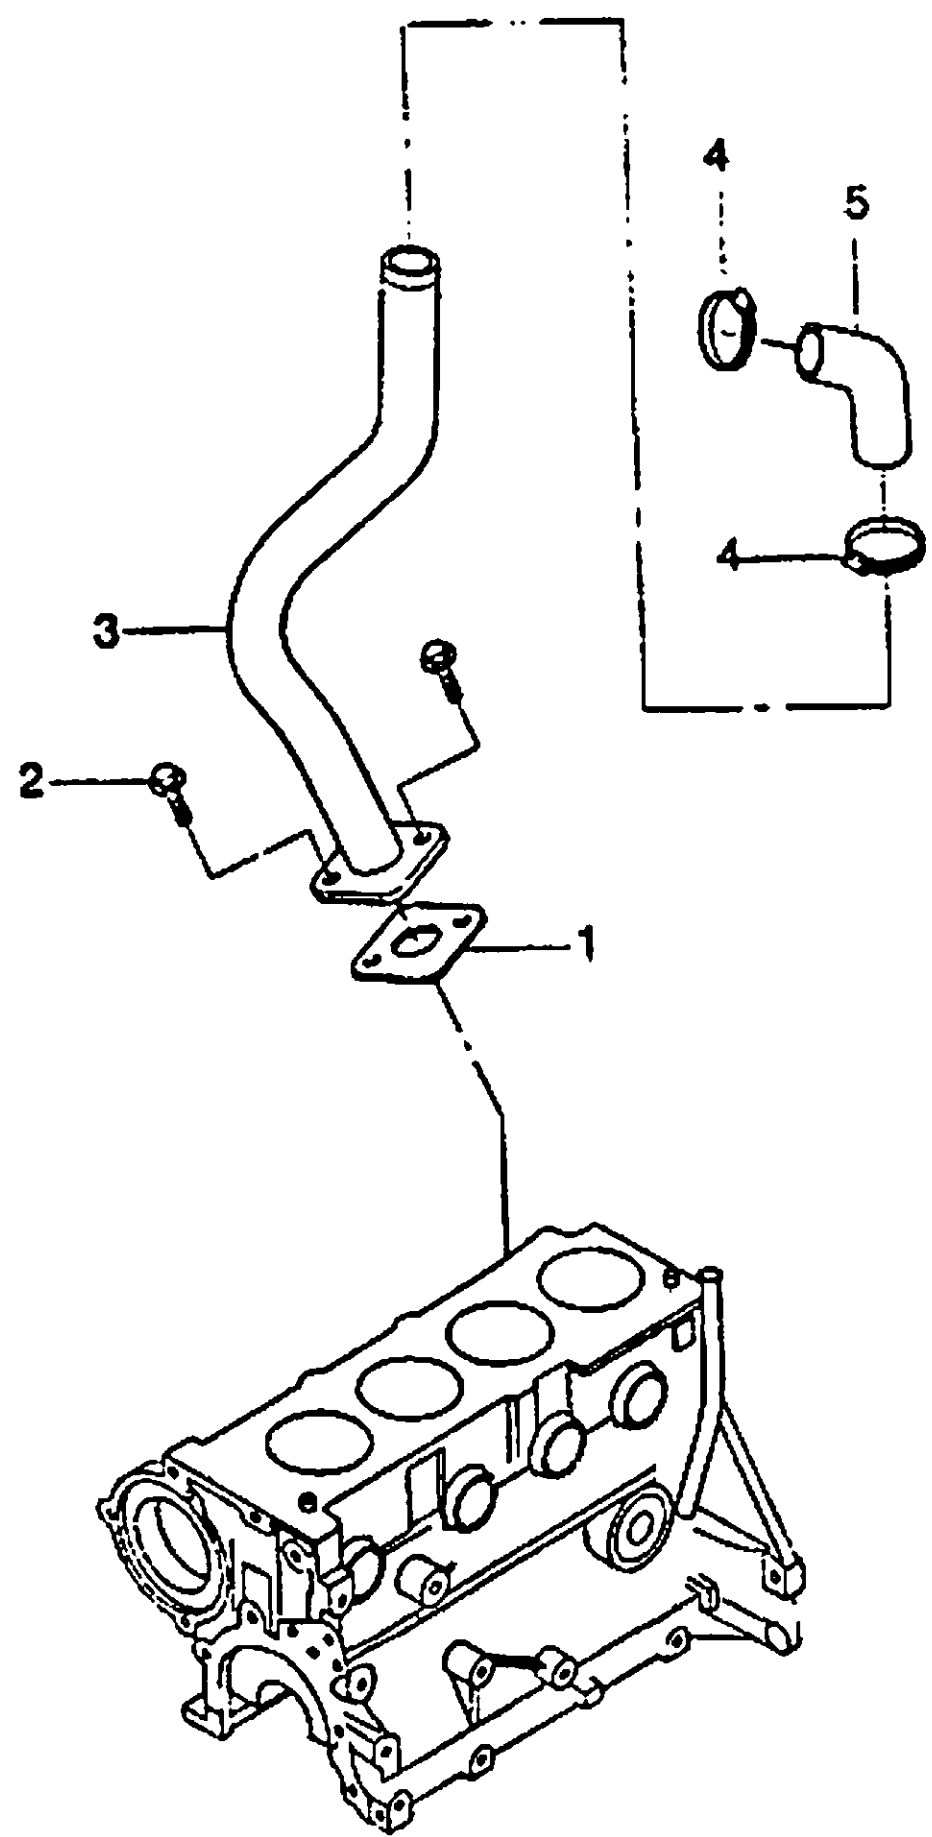

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q / T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01]	(E)GASKET-OIL SEPARATOR (D)DICHTUNG,ÖL TRENNUNG									(F)JOINT-SEPARATEUR D'HUILE (S)JUNTA-SEPARADOR DE ACEITE					
	96181209	.	.	B	B	B	S	S	S		1					
	[02]	(E)BOLT-HEX PILOT (D)SCHRAUBE									(F)BOULON (S)PERNO					
	02647-06165	.	.	B	B	B	S	S	S		2					
	[03]	(E)PIPE A-ENGINE VENTILATION (D)ROHR,MOTOR BELÜFTUNG									(F)TUYAU-VENTILATION MOTEUR (S)TUBERIA-VENTILACION					
	96143870	Y	.	B	B	B	S	S	S		1					
	96130215	6	.	B	B	B	.	.	O		1					
	[04]	(E)CLAMP-SPRING (D)KLAMMER									(F)PINCE (S)ABRAZADERA					
	09401-27403	Y	.	B	B	B	S	S	S		2					
	11085952	6	.	B	B	B	.	.	O		2		20-32			
	[05]	(E)HOSE-ENGINE VENTILATION (D)SCHLAUCH,MOTOR BELÜFTUNG									(F)TUYAU-VENTILATION MOTEUR (S)MANGUERA-VENTILACION					
	90409191	Y	.	B	B	B	S	S	S		1					
	6094405002	6	.	B	B	B	.	.	O		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

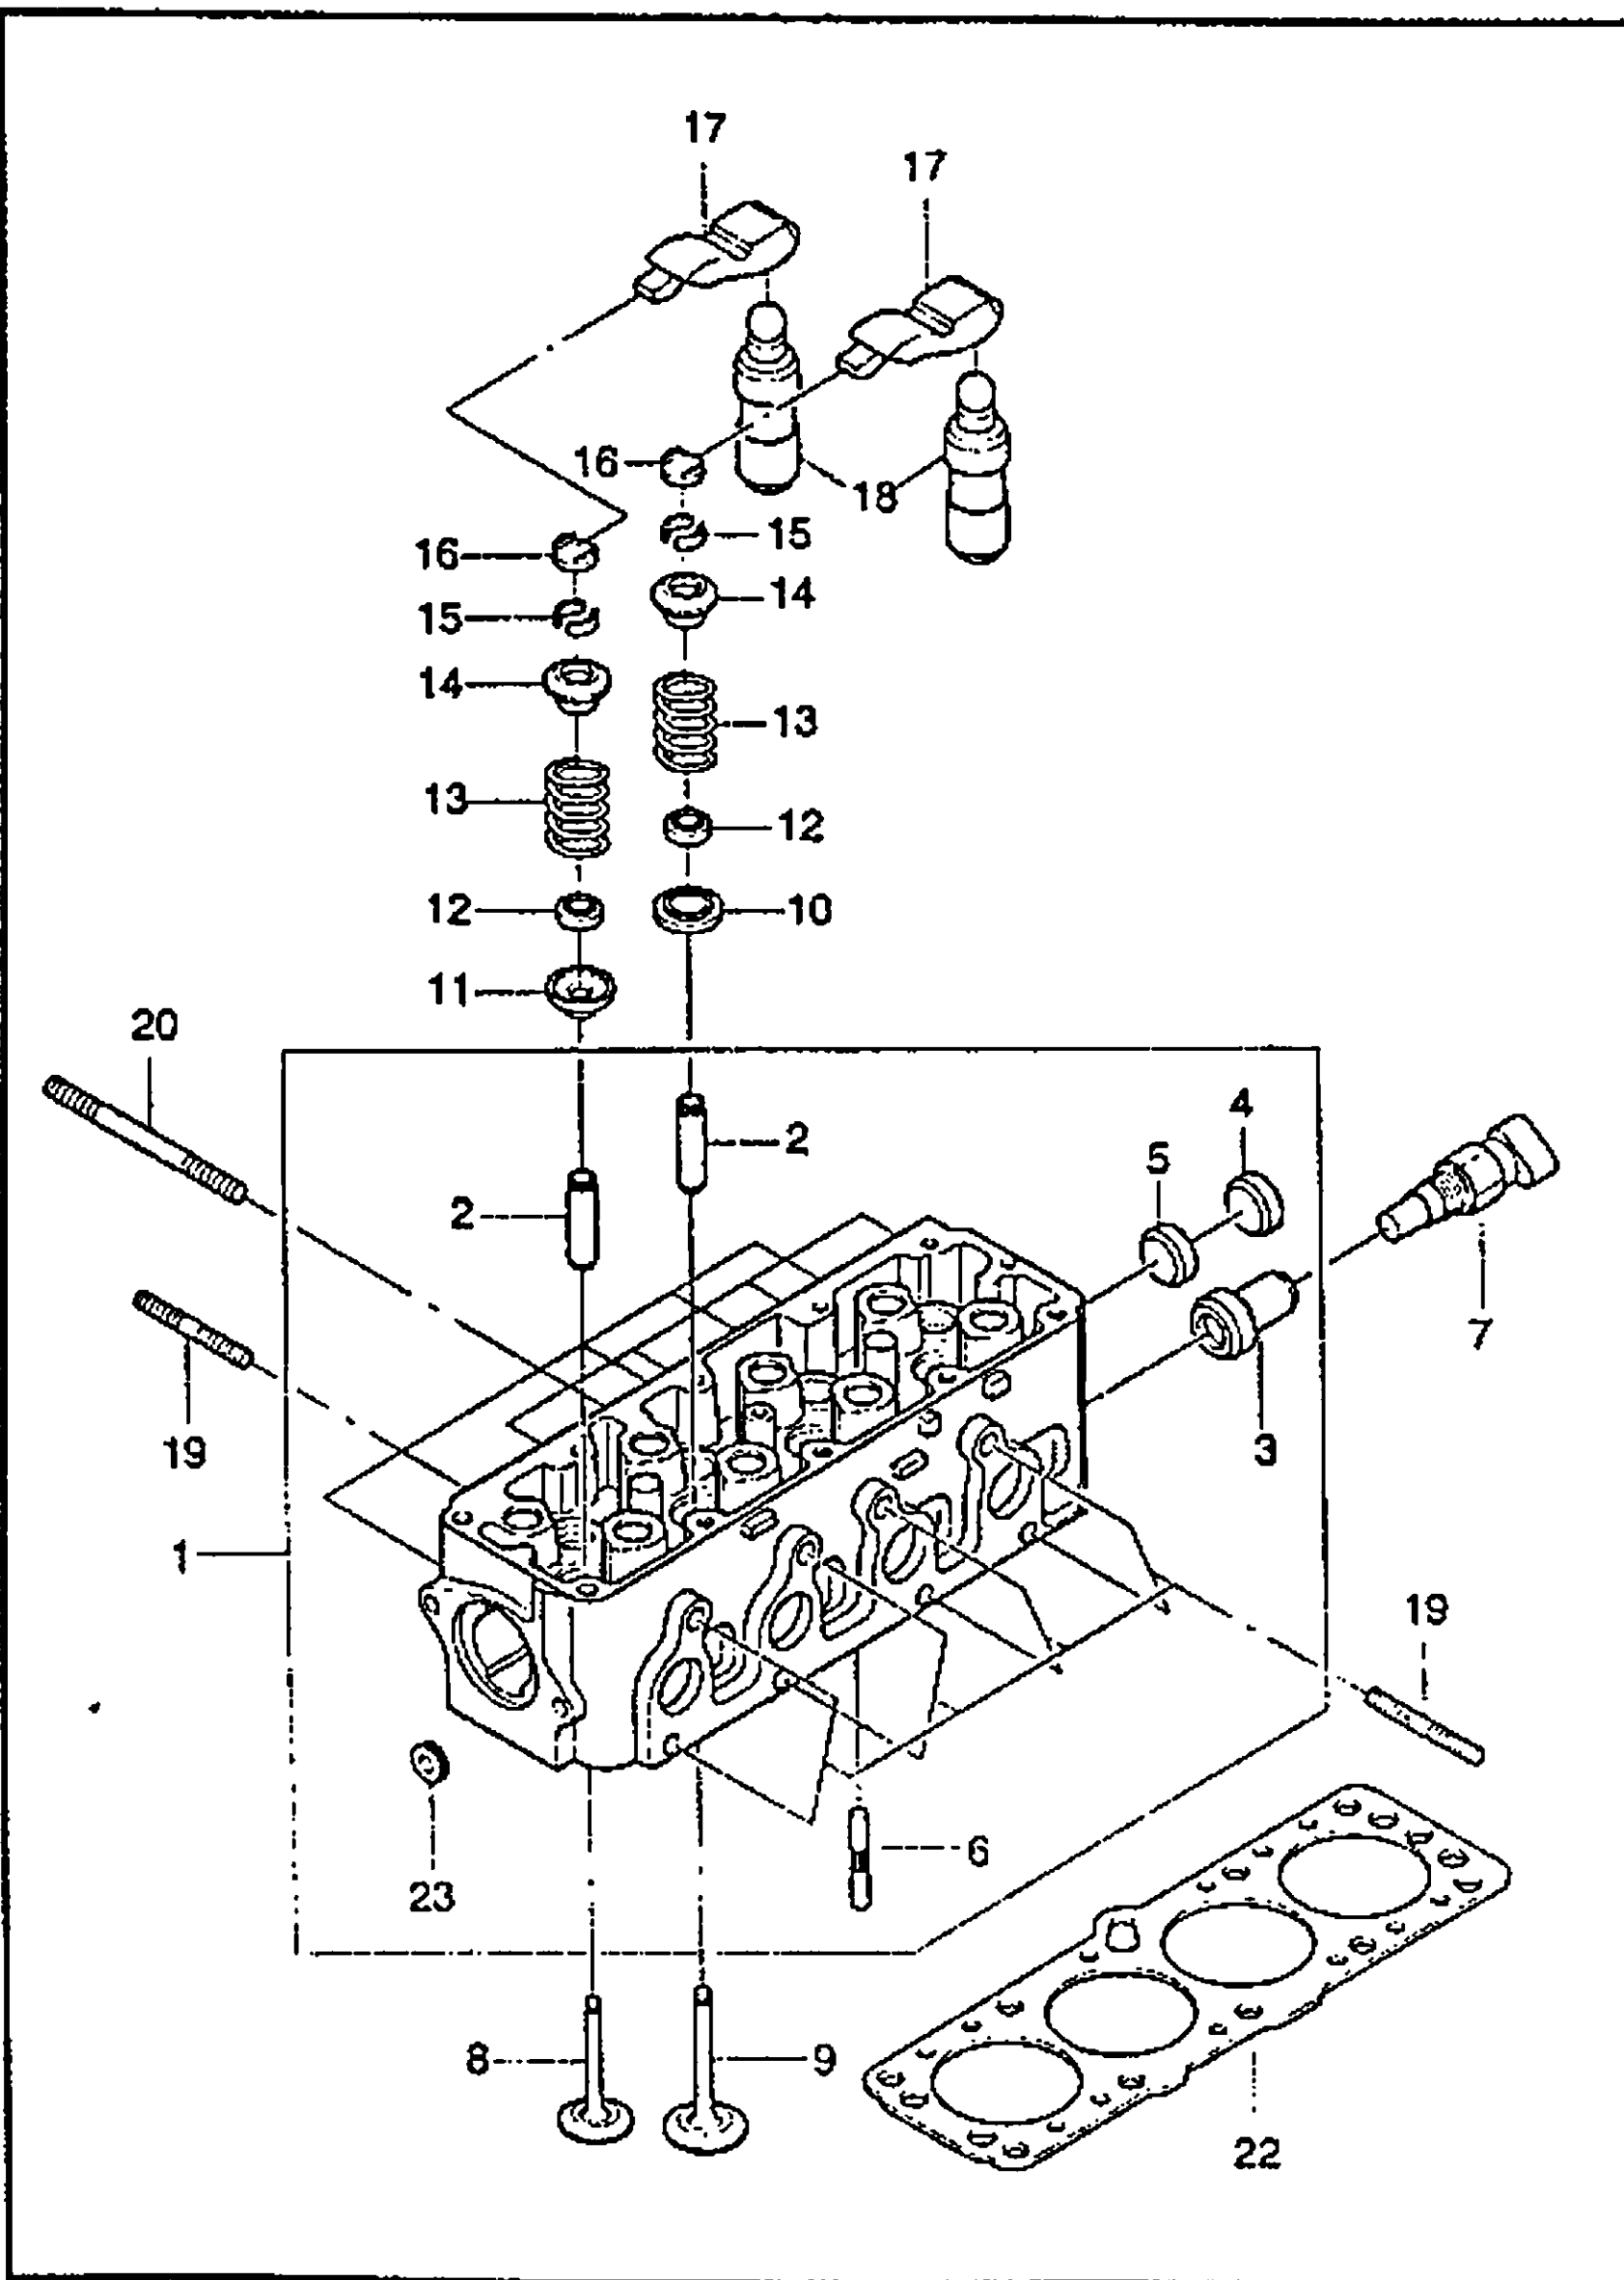


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S S				S S	S X		
	[01] A96182931	(E)HEAD A-CYLINDER (D)ZYLINDERKOPF	Y	.	B	B	B	S	S	S			(F)CULASSE-CYLINDRE (S)CABEZA-CILINDRO	
	[02]	(E)GUIDE-VALVE (D)FÜHRUNG, VENTIL	Y	.	B	B	B	S	S	S			(F)GUIDE-SOUPAPE (S)GUIA-VALVULA	
	90108699		Y	.	B	B	B	S	S	S	4	970819	INTAKE,STD	
	90108700		Y	.	B	B	B	S	S	S	4	970819	INTAKE,O/S	
	96350912		Y	.	B	B	B	S	S	S	4	970819	EXHAUST,STD	
	96350913		Y	.	B	B	B	S	S	S	4	970819	EXHAUST,O/S	
	96350912		Y	.	B	B	B	S	S	S	B	970819	STD	
	96350913		Y	.	B	B	B	S	S	S	B	970819	O/S	
	[03]	(E)ADAPTER (D)ADAPTER	Y	.	B	B	B	S	S	S			(F)ADAPTATEUR (S)ADAPTADOR	
	90299068		Y	.	B	B	B	S	S	S	1			
	[04]	(E)CAP-OIL DUCT (D)DECKEL, ÖL-LEITUNG	Y	.	B	B	B	S	S	S			(F)CHAPEAU-CONDUIT HUILE (S)TAPA-CONDUCTO DE ACEITE	
	96180732		Y	.	B	B	B	S	S	S	1		Φ 20	
	[05]	(E)CAP-OIL DUCT (D)DECKEL, ÖL-LEITUNG	Y	.	B	B	B	S	S	S			(F)CHAPEAU-CONDUIT HUILE (S)TAPA-CONDUCTO DE ACEITE	
	11062401		Y	.	B	B	B	S	S	S	1		Φ 18	
	[06]	(E)SLEEVE (D)HÜLSE	Y	.	B	B	B	S	S	S			(F)CHEMISE (S)MANGA	
	90108642		Y	.	B	B	B	S	S	S	1			
	[07]	(E)SENSOR-TEMPERATURE (D)SENSOR, TEMPERATUR	Y	.	B	B	B	S	S	S			(F)DETECTEUR-TEMPERATURE (S)SENSOR-TEMPERATURA	
	96181508		Y	.	B	B	B	S	S	S	1			
	[08]	(E)VALVE-EXHAUST (D)VENTIL, ABGAS											(F)SOUPAPE-ECHAPPEMENT (S)VALVULA-ESCAPE	
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

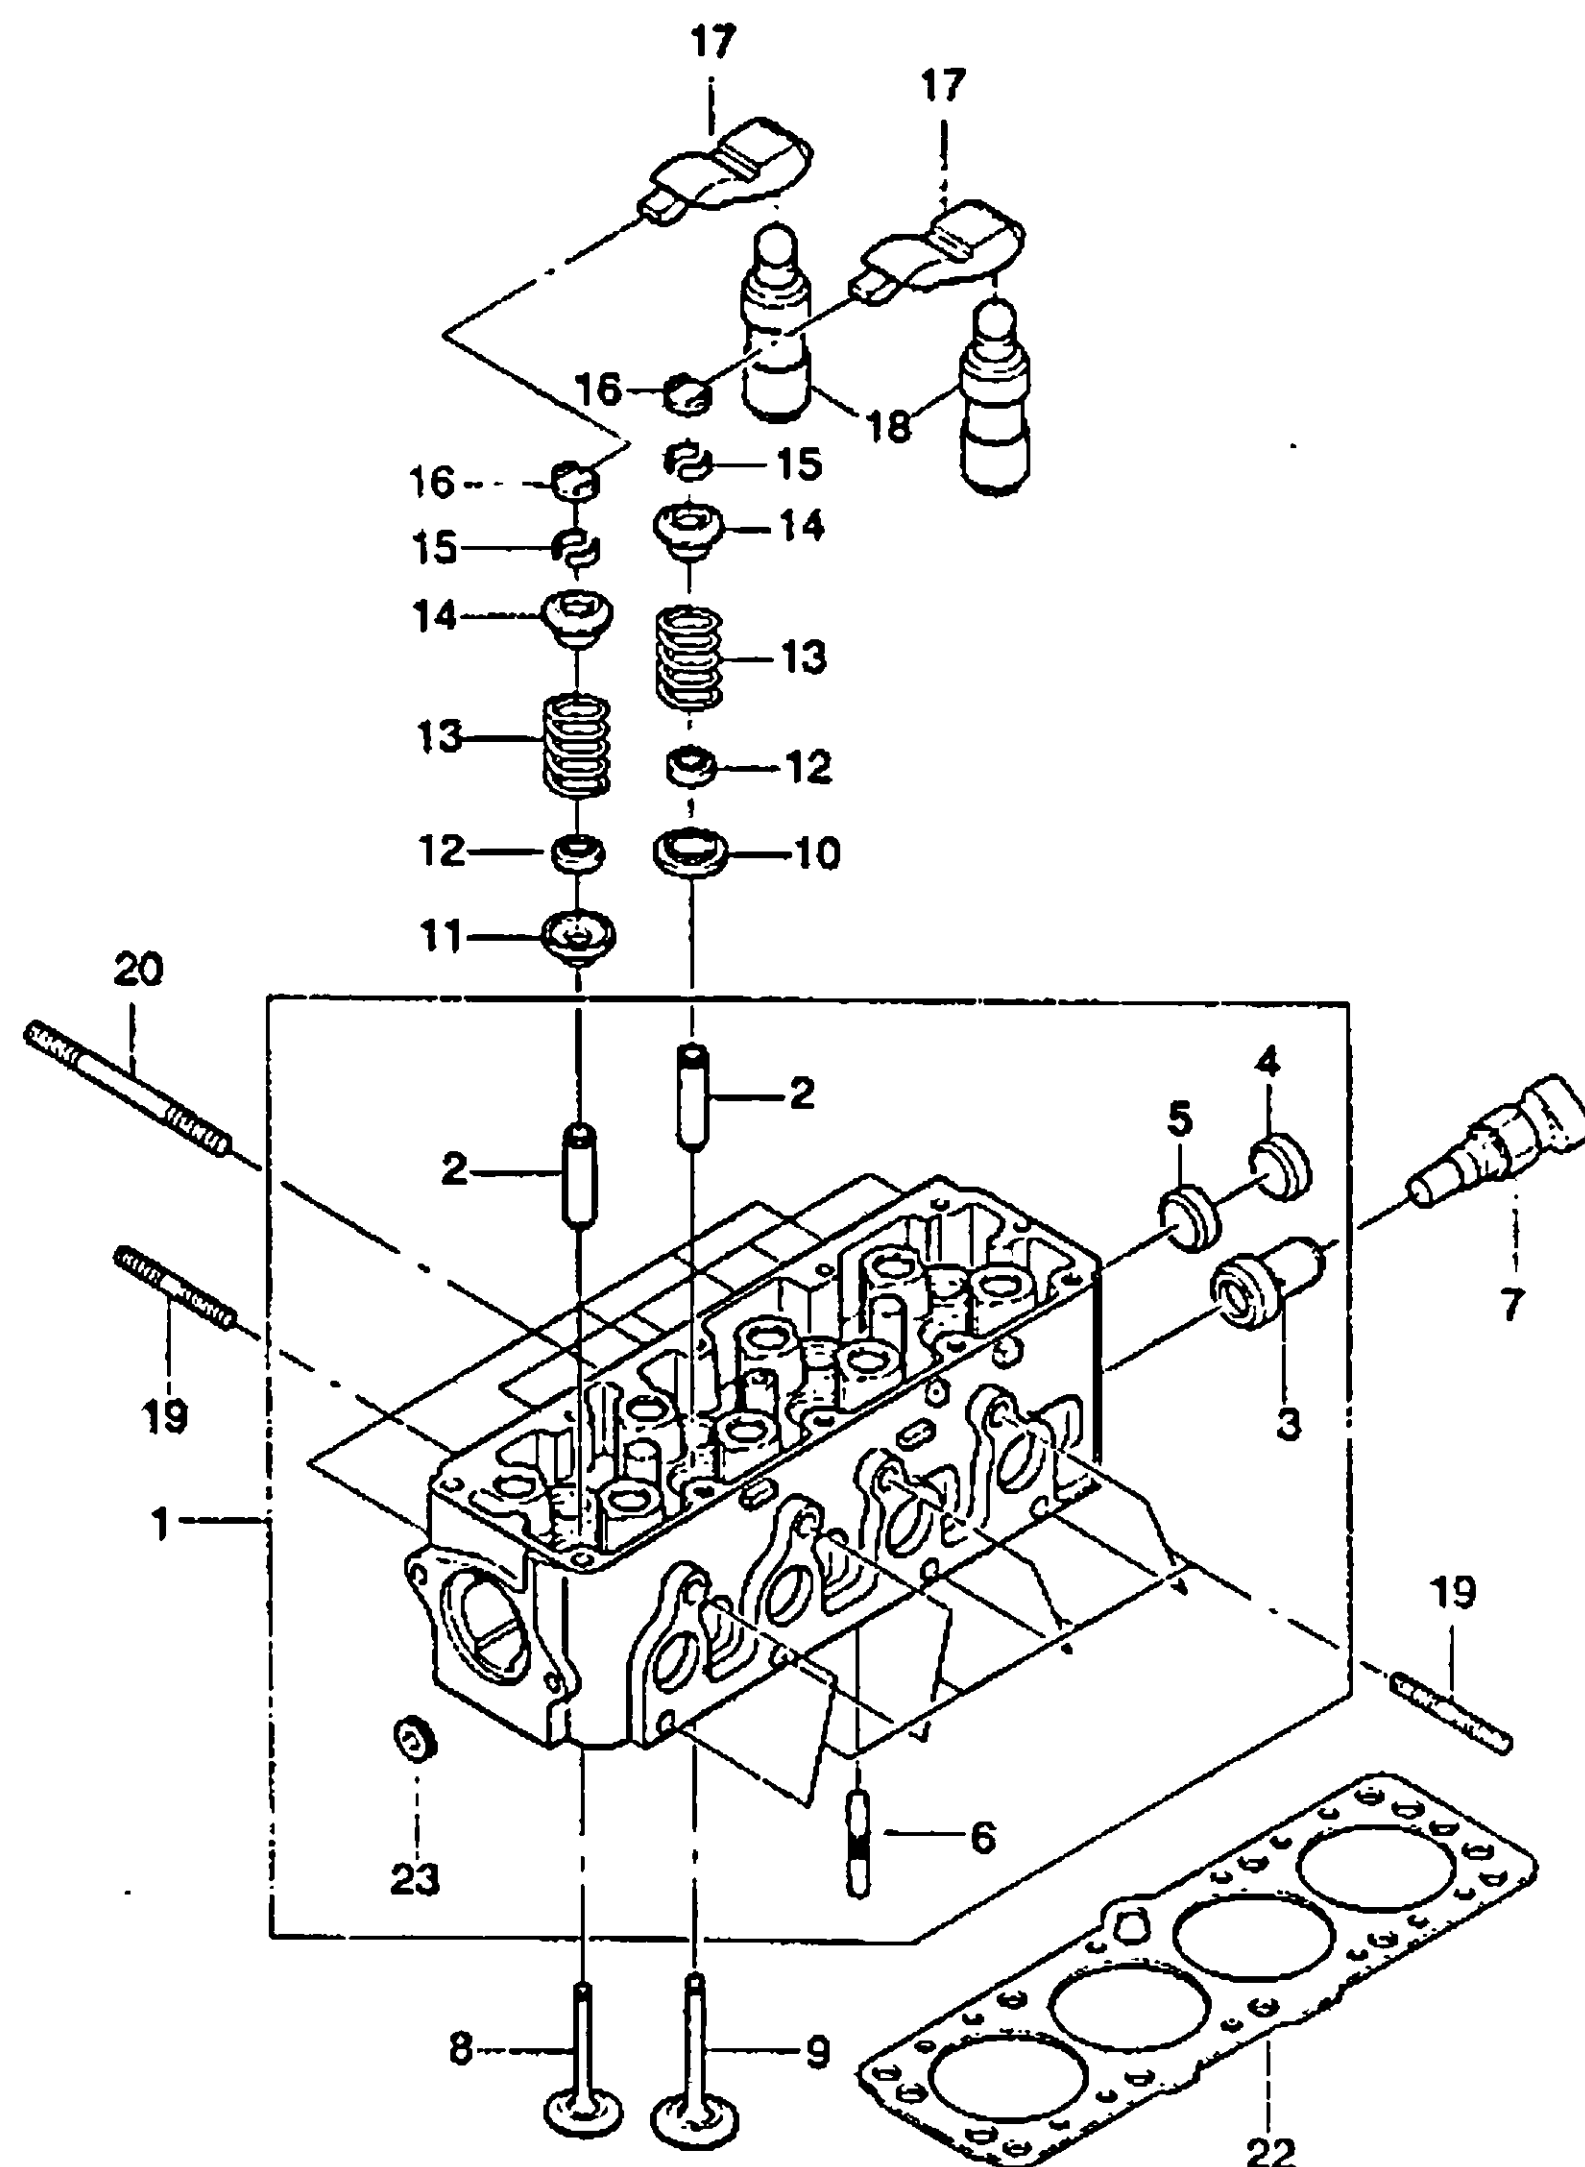


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S S								S S S	S S S
	96182933 [09]	Y	.	B	B	B	S	S	S		4		(F)SOUPAPE-ADMISSION (S)VALVULA-ENTRADA			
	96182934 [10]	Y	.	B	B	B	S	S	S		4		(F)SIEGE (S)ASIENTO-RESORTE			
	90128720 [11]	Y	.	B	B	B	S	S	S		4		(F)CHAPEAU (S)TAPA-ROTATORIO			
	90106266 [12]	Y	.	B	B	B	S	S	S		4		(F)JOINT-TIGE DE SOUPAPE (S)SELLO-TALLO DE VALVULA			
	90215296 [13]	Y	.	B	B	B	S	S	S		8		(F)RESSORT-SOUPAPE (S)RESORTE-VALVULA			
	90180310 [14]	Y	.	B	B	B	S	S	S		8		(F)PLAQUE-RESSORT DE SOUPAP (S)PLACA-RESORTE DE VALVUL			
	90280894 [15]	Y	.	B	B	B	S	S	S		8		(F)CLE-SOUPAPE (S)LLAVE-VALVULA			
	90076732 [16]	Y	.	B	B	B	S	S	S		16		(F)PIECE-BUTEE DE SOUPAPE (S)PIEZA-EMPUJE VALVULA			
	96144735 [17]	Y	.	B	B	B	S	S	S		8		(F)SATELLITE-CAME (S)SEGUIDOR-LEVA			
	96351051	Y	.	B	B	B	S	S	S		8					


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

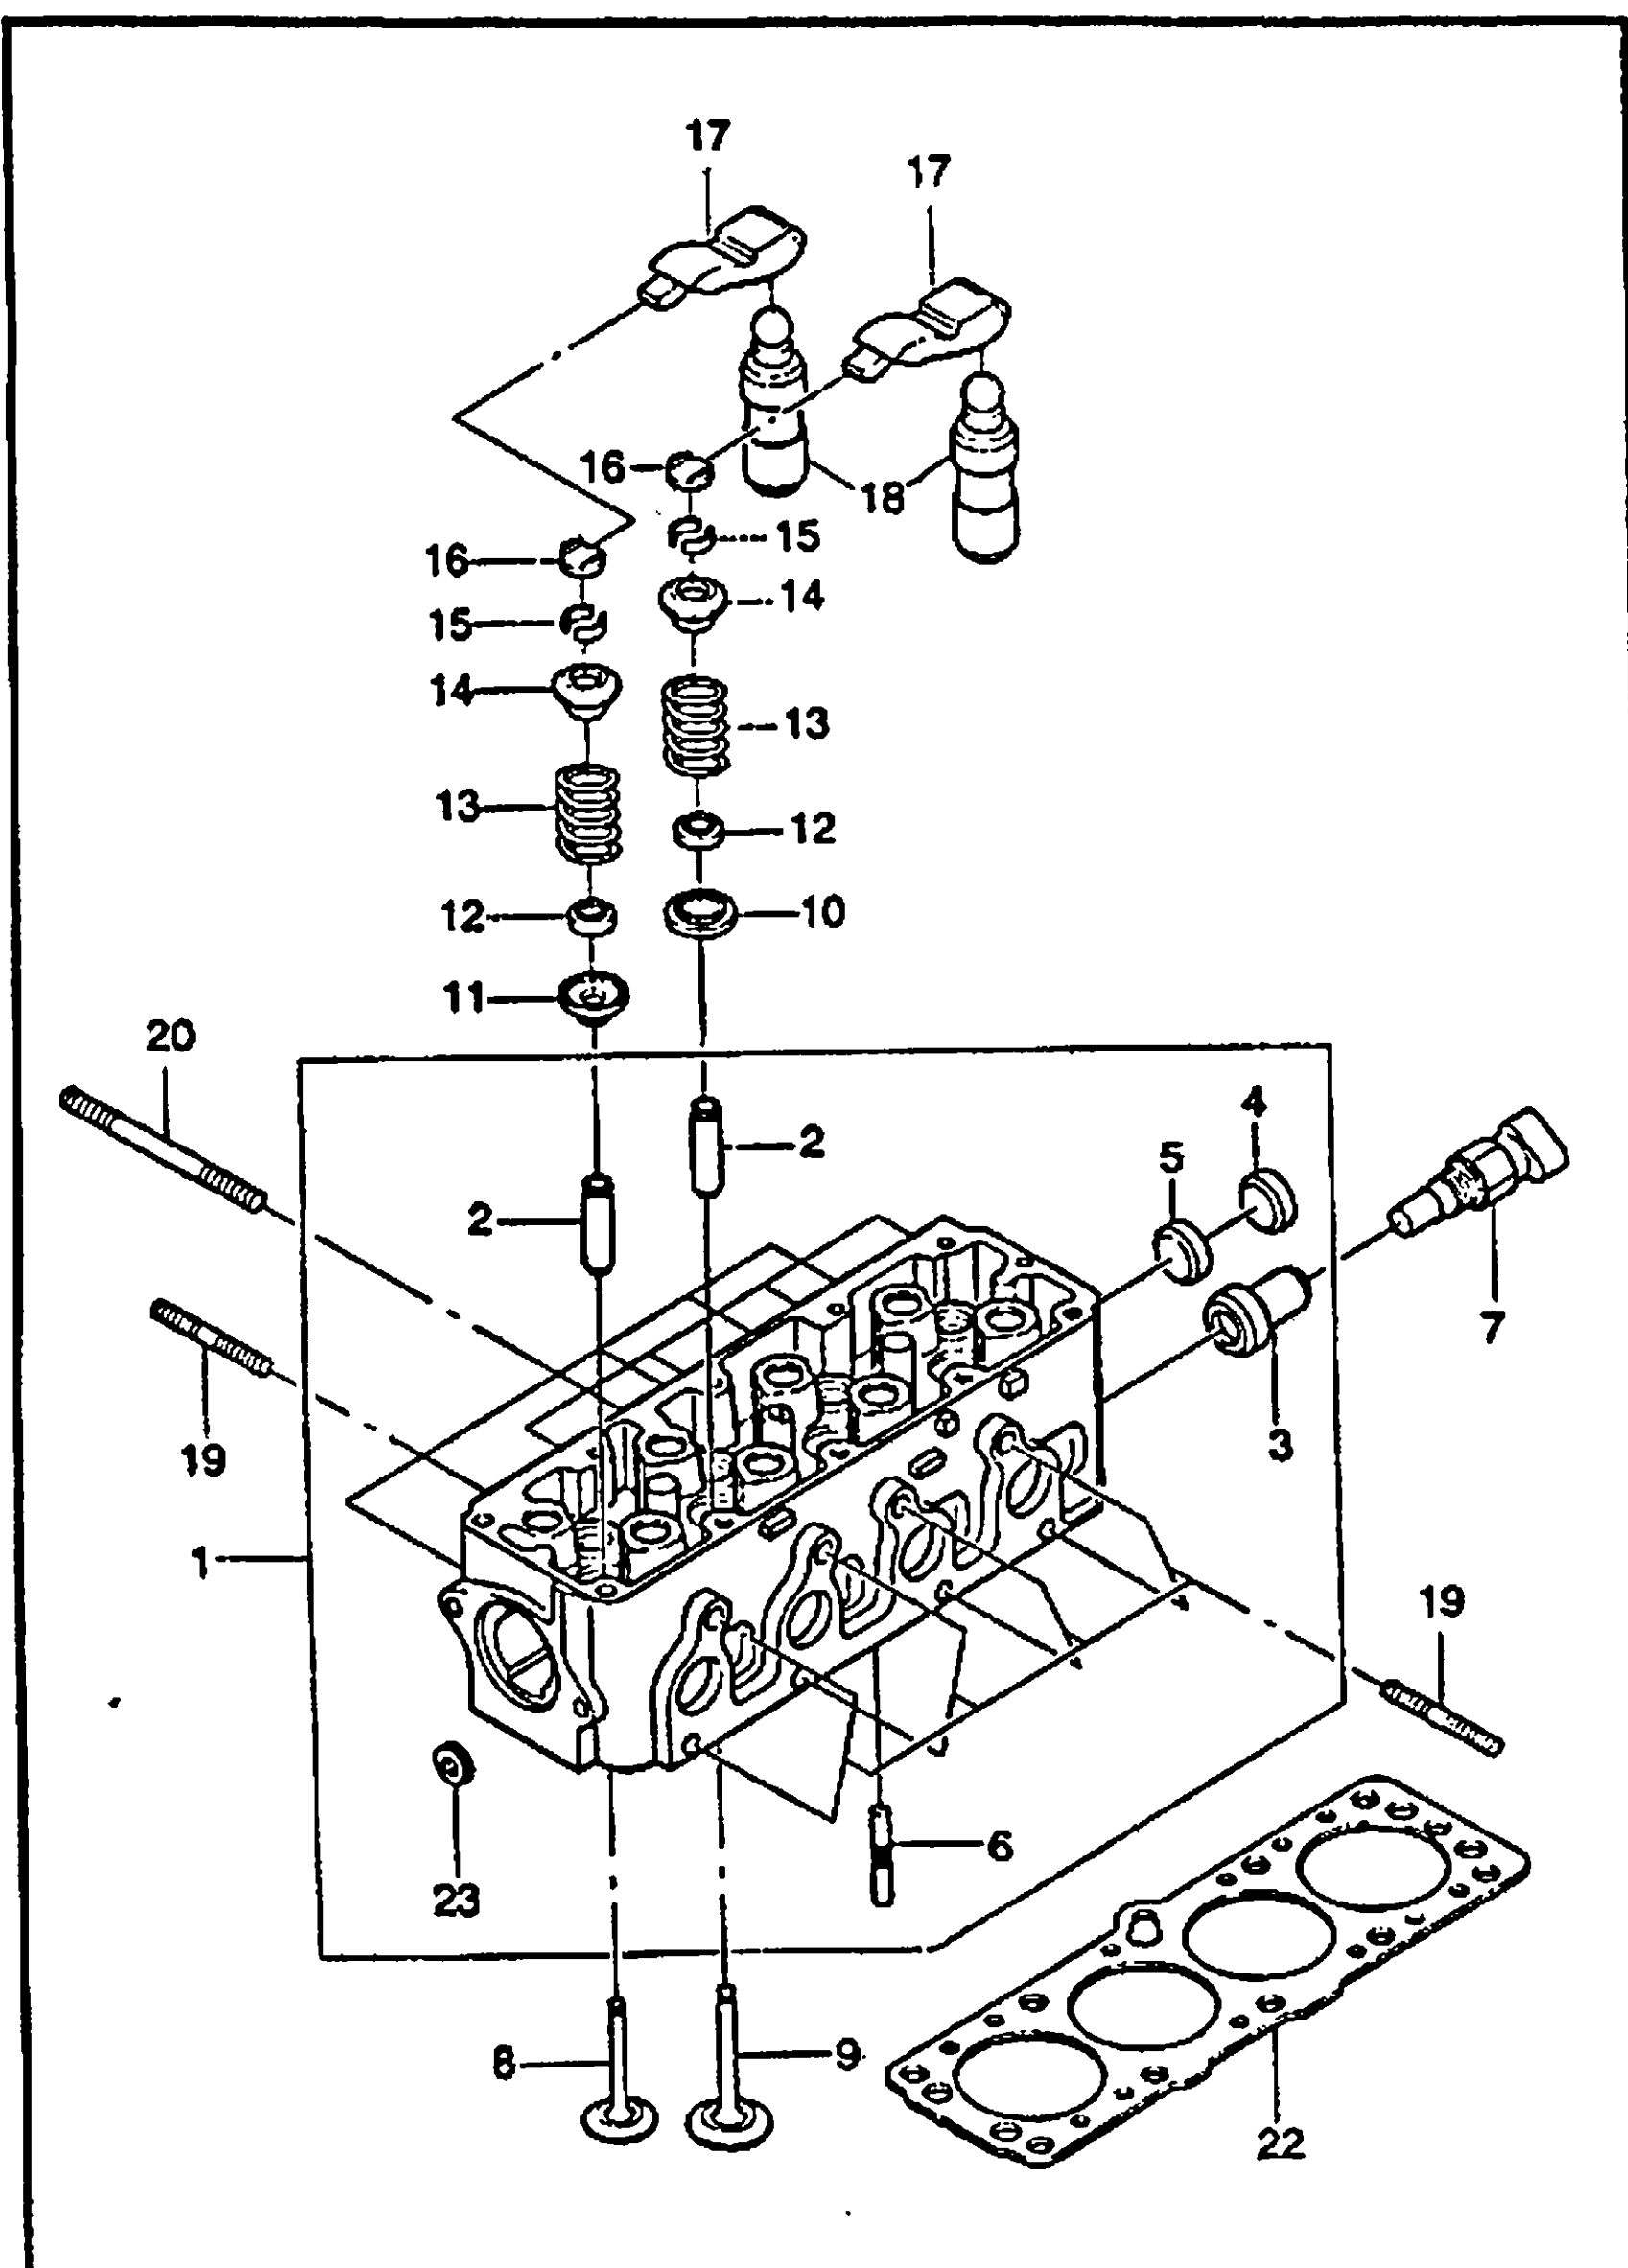

KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S X
	[18] 05233315	(E)LIFTER A-CAM FOLLOWER (D)HEBER,NÖCKEN ANHÄNGER	Y	.	B	B	B	S	S	S		(F)LEVIER-SATELLITE DE CAME (S)LEVANTADOR	8			
	[19] 09108-08002	(E)BOLT-STUD (D)STIFTSCHRAUBE	Y	.	B	B	B	S	S	S		(F)BOULON-TETON (S)PERNO-ESPIGA	13			
	[20] 09108-08003	(E)BOLT-STUD (D)STIFTSCHRAUBE	Y	.	B	B	B	S	S	S		(F)BOULON-TETON (S)PERNO-ESPIGA	4			
	[22] 96181216	(E)GASKET-CYLINDER HEAD (D)DICHTUNG,ZYLINDERKOPF	Y	.	B	B	B	S	S	S		(F)JOINT-CULASSE CYLINDRE (S)JUNTA	1			
	[23] 09246-10001	(E)PLUG-SCREW (D)STÖPSEL,SCHRAUBEN	Y	.	B	B	B	S	S	S		(F)BOUCHON-VIS (S)TAPON-TORNILLO	1			
ENG(ENGINE)		T/A(TRANSAXLE)					BODY TYPE									
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK									

3K06

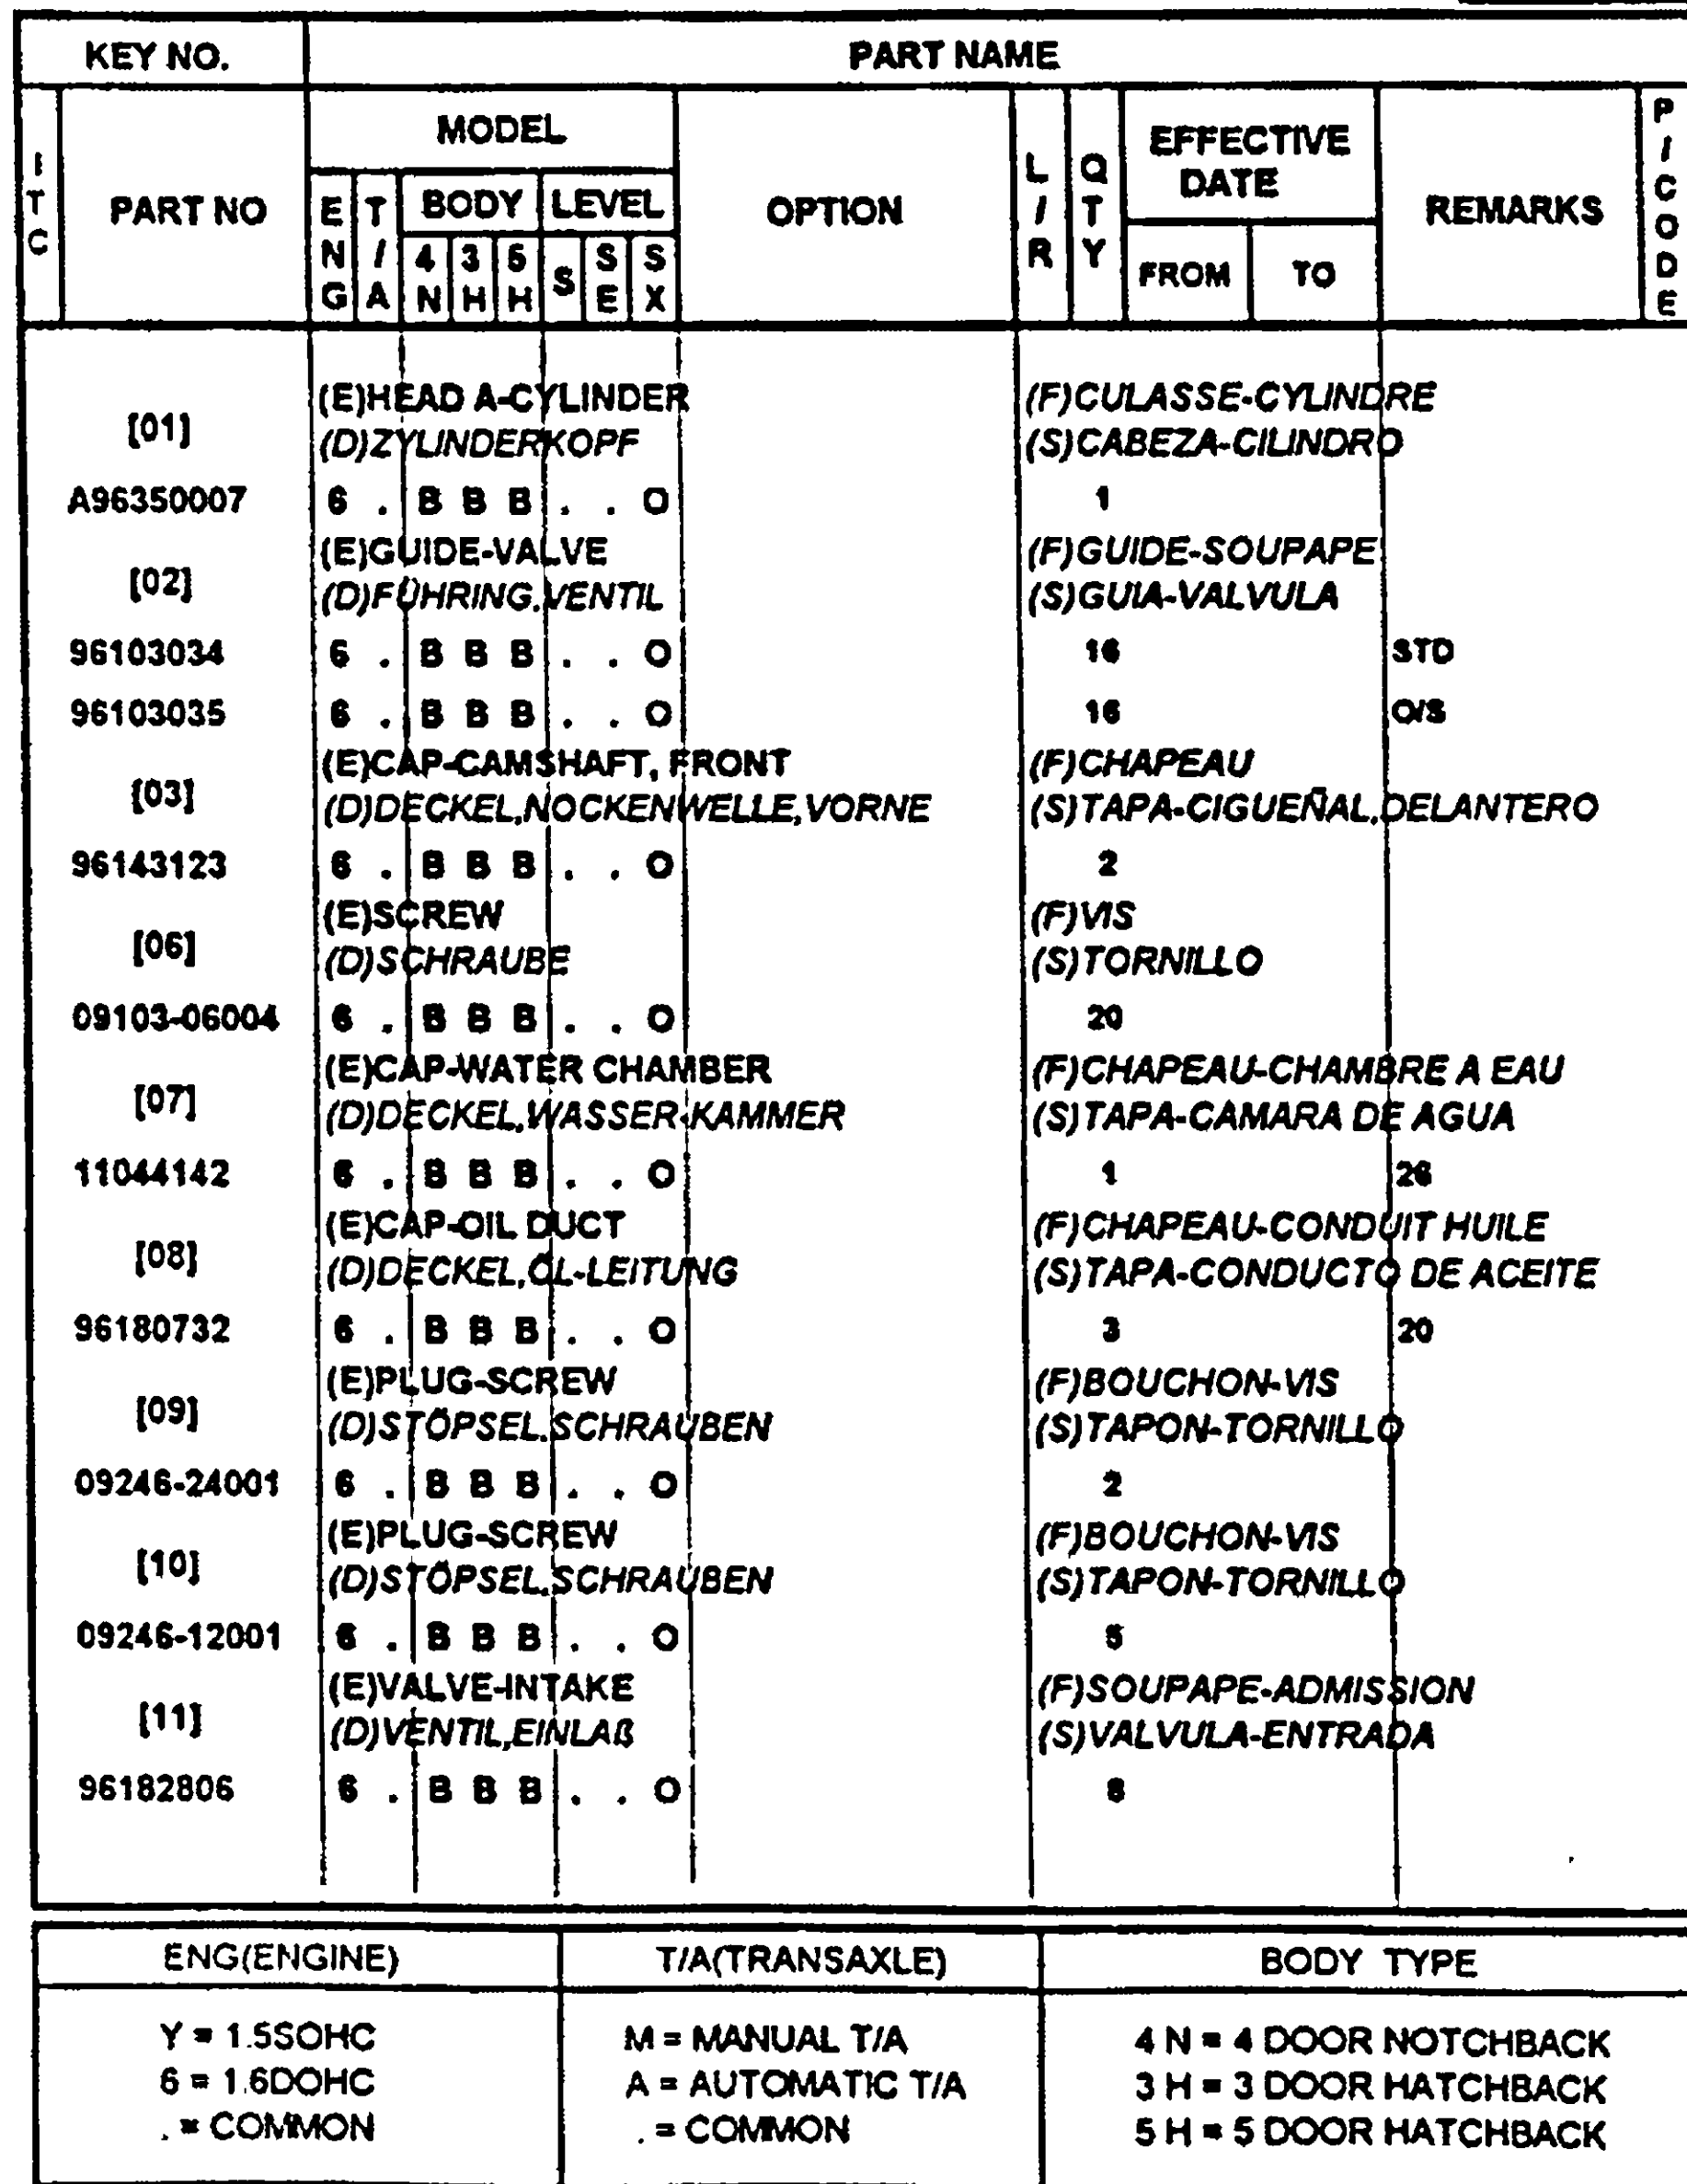


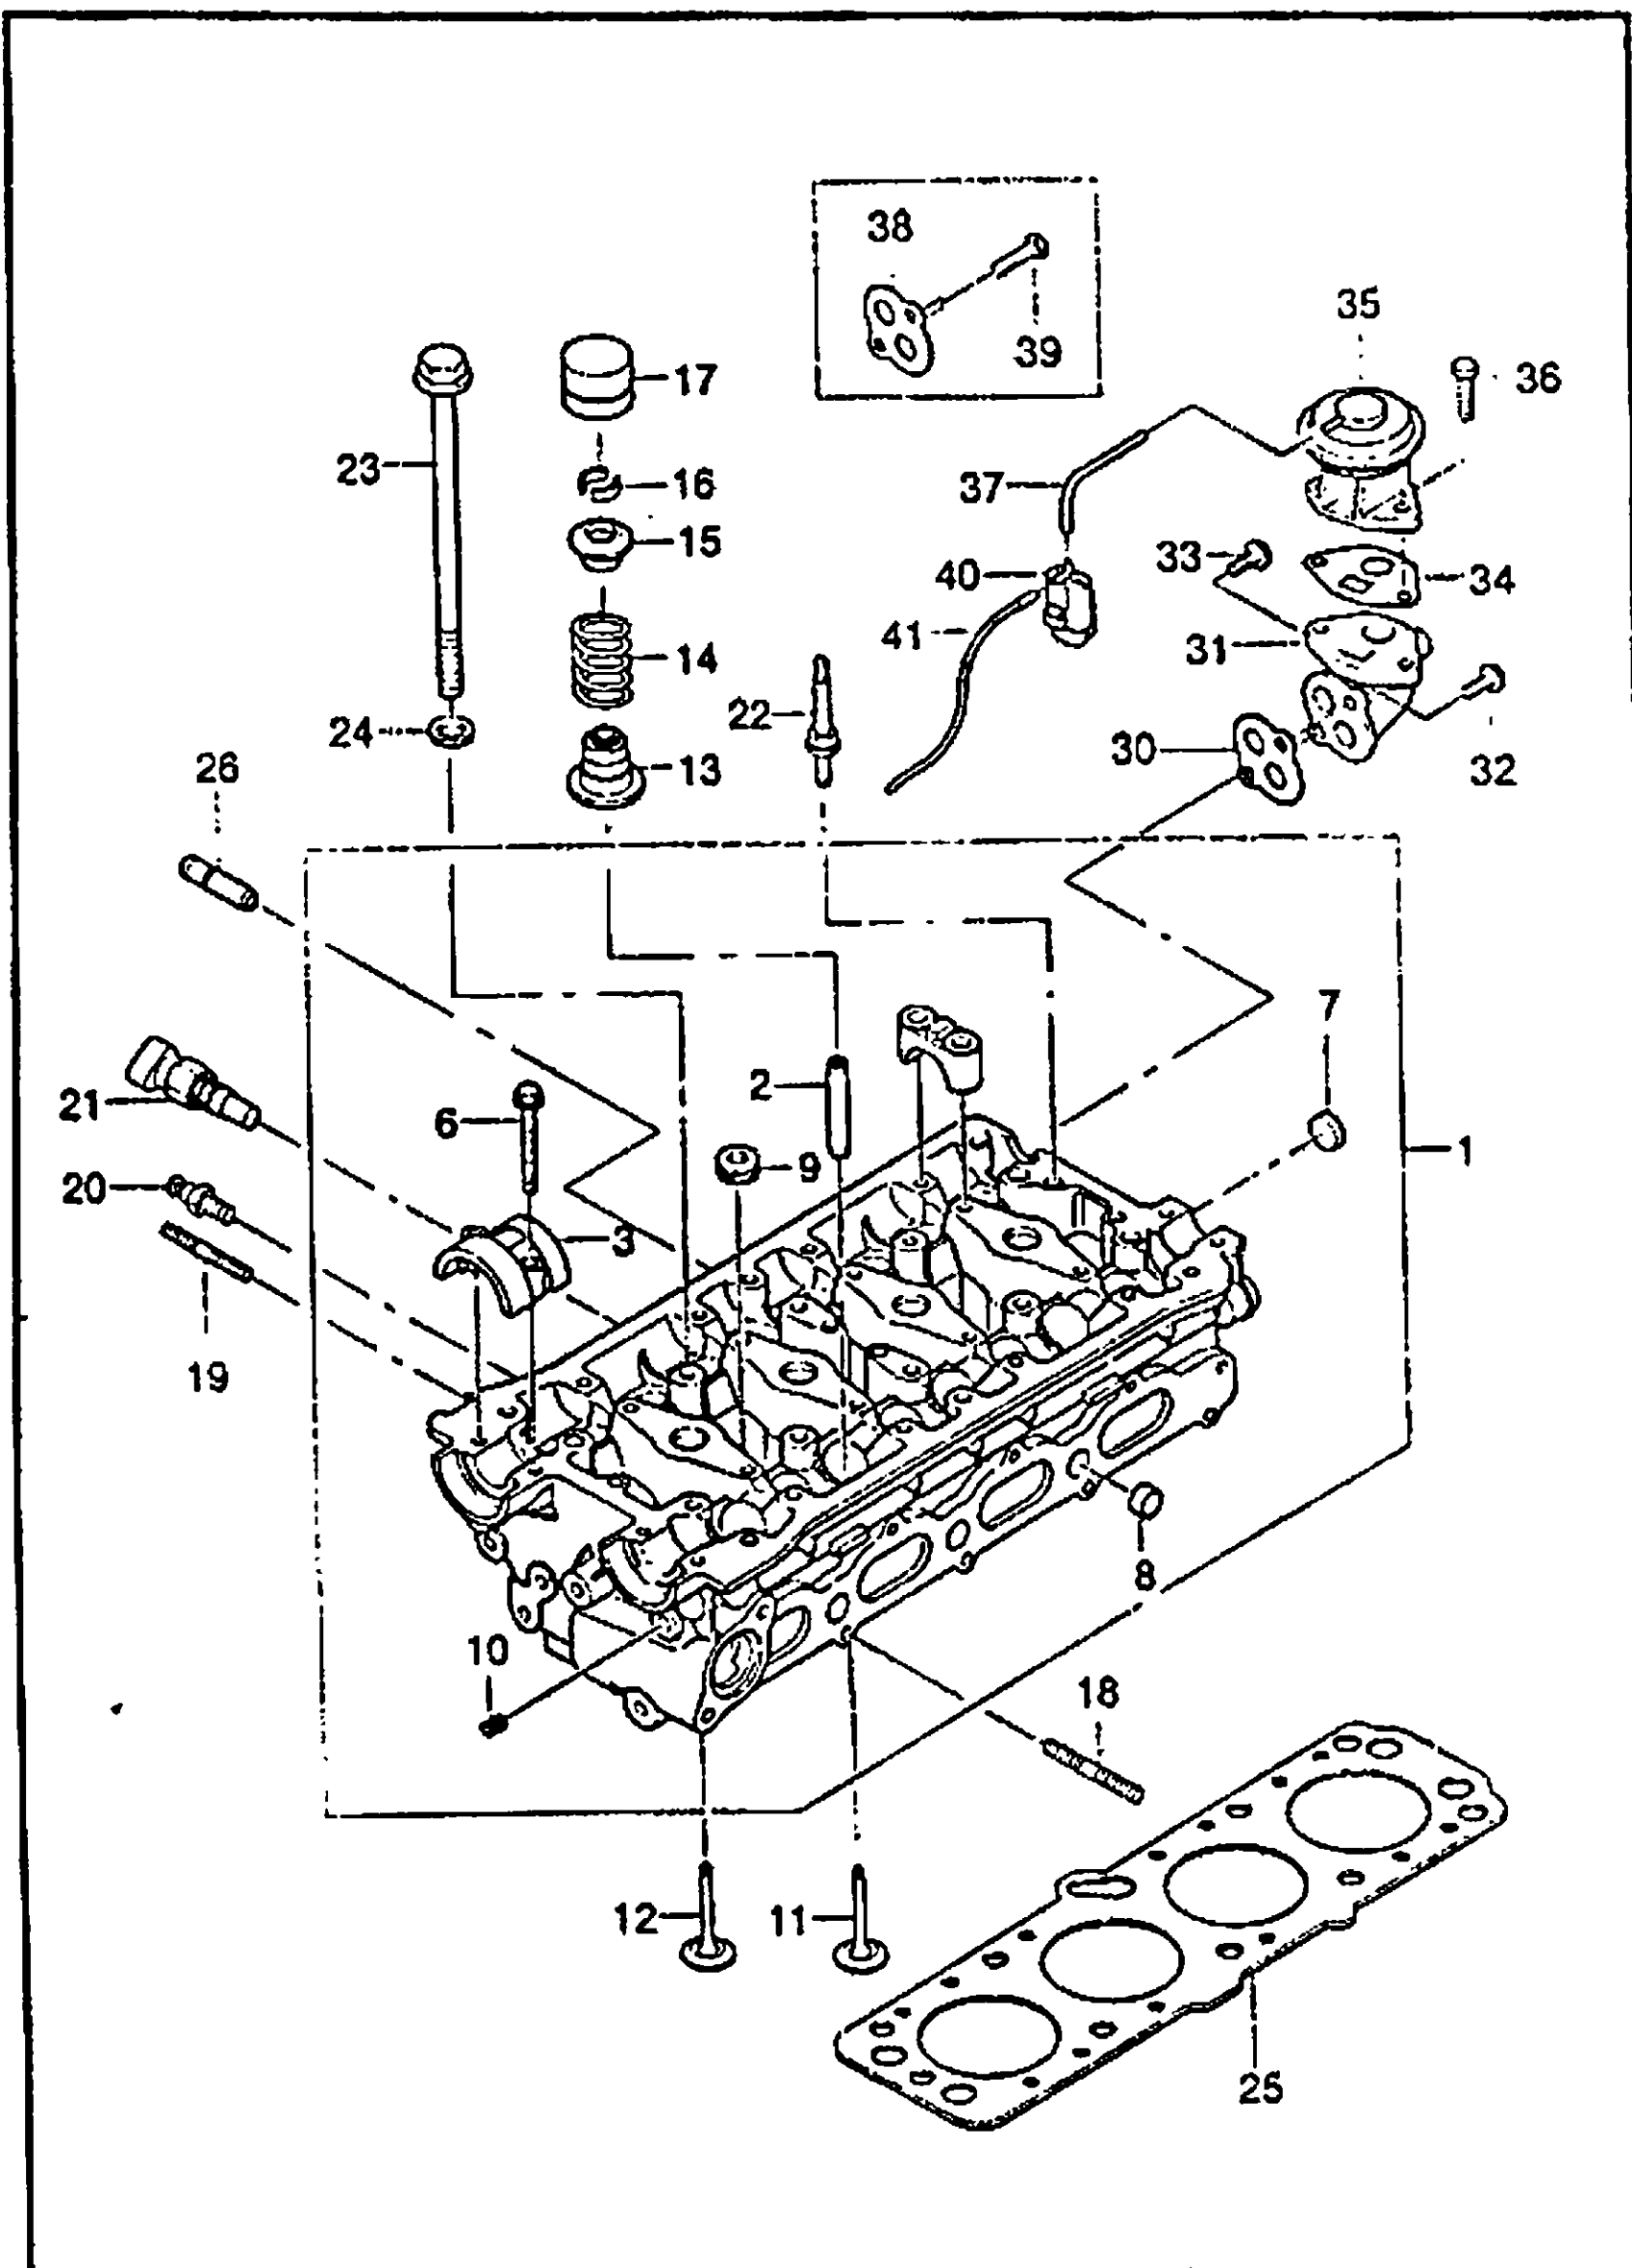

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N H	3 H	5 S								
	[12] 96182805	(E) VALVE-EXHAUST (D) VENTIL, ABGAS 6 . B B B . . O									(F) SOUPAPE-ECHAPPEMENT (S) VALVULA-ESCAPE 8			
	[13] 96103095	(E) SEAL-VALVE STEM (D) DICHTUNG, VENTIL STIEL 6 . B B B . . O									(F) JOINT-TIGE DE SOUPAPE (S) SELLO-TALLO DE VALVULA 16			
	[14] 96352140	(E) SPRING-VALVE (D) FEDERUNG, VENTIL									(F) RESSORT-SOUPAPE (S) RESORTE-VALVULA			
	96352139	6 . B B B . . O									16		NOT APPLIED	
	[15] 5094005026	(E) RETAINER-VALVE SPRING (D) HALTER, VENTIL FEDERUNG 6 . B B B . . O									(F) ARRETOIR (S) RETENEDOR 16			
	[16] 5094005601	(E) KEY-VALVE (D) SCHLÜßEL, VENTIL 6 . B B B . . O									(F) CLE-SOUPAPE (S) LLAVE--VLVULA 32			
	[17] 96134997	(E) TAPPET-HYDRAULIC (D) NOCKE, HYDRAULIK 6 . B B B . . O									(F) POUSSOIR-HYDRAULIQUE (S) GRIFO-HIDRAULICO 16			
	[18] 09108-08005	(E) BOLT-STUD (D) STIFTSCHRAUBE 6 . B B B . . O									(F) BOULON-TETON (S) PERNO-ESPIGA 10			
	[19] 09108-08004	(E) BOLT-STUD (D) STIFTSCHRAUBE 6 . B B B . . O									(F) BOULON-TETON (S) PERNO-ESPIGA 2			
	[20] 96177604	(E) SENSOR A-TEMPERATURE (D) SENSOR, TEMPERATUR 6 . B B B . . O									(F) DETECTEUR-TEMPERATURE (S) SENSOR-TEMPERATURA 1			
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

1311 CYLINDER HEAD(DOHC)

3M06

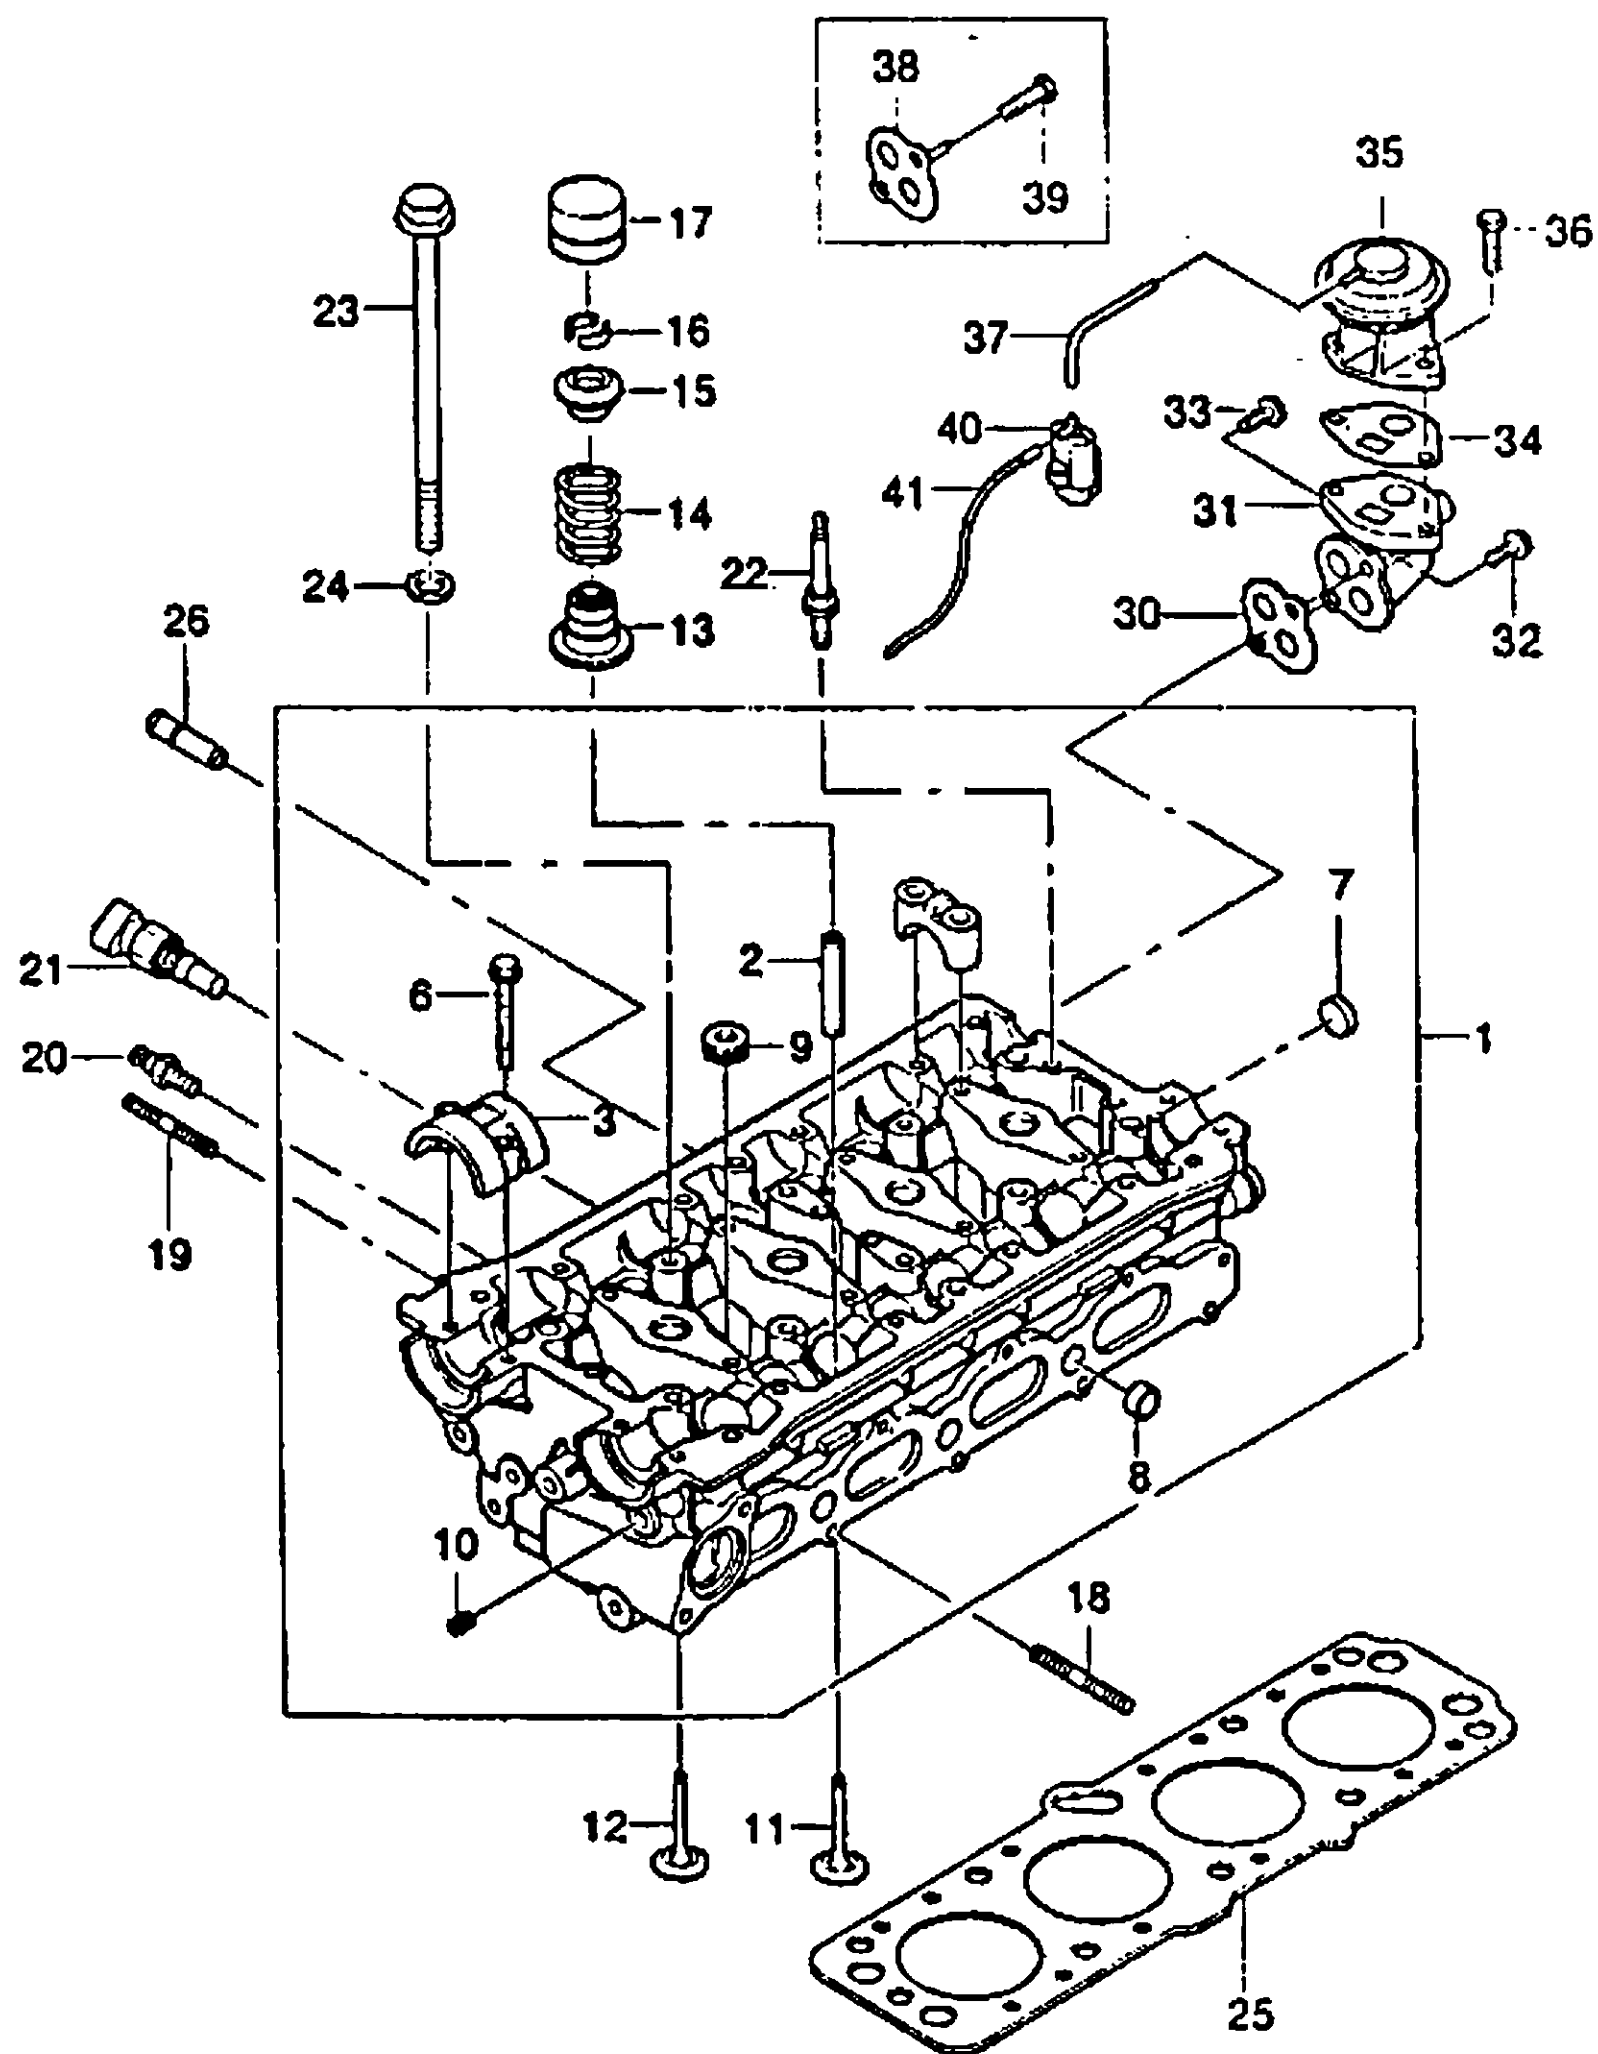


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S E	S X
	[21]	(E)SENSOR A-TEMPERATURE									(F)DETECTEUR-TEMPERATURE					
	96181508	(D)SENSOR,TEMPERATUR									(S)SENSOR-TEMPERATURA					
		6 . B B B . . O									1					
	[22]	(E)BOLT-STUD									(F)BOULON-TETON					
	96144431	(D)STIFTSCHRAUBE									(S)PERNO-ESPIGA					
		6 . B B B . . O									11					
	[23]	(E)BOLT-CYLINDER HEAD									(F)BOULON-CULASSE					
	09103-10056	(D)SCHRAUBE,ZYLINDERKOPF									(S)PERNO-TAPA DE CILINDRO					
		6 . B B B . . O									10					
	[24]	(E)WASHER-CYLINDER HEAD									(F)RONDELLE-CULASSE CYLINDRE					
	09160-10007	(D)DICHTUNGSRING,ZYLINDERKOPF									(S)ARANDELA					
		6 . B B B . . O									10					
	[25]	(E)GASKET-CYLINDER HEAD									(F)JOINT-CULASSE CYLINDRE					
	96103003	(D)DICHTUNG,ZYLINDERKOPF									(S)JUNTA					
		6 . B B B . . O									1					
	[26]	(E)PIPE-HEATER TAKE OFF									(F)TUYAU					
	96182808	(D)ROHR									(S)TUBERIA					
		6 . B B B . . O									1					
	[30]	(E)GASKET-EGR ADAPTER									(F)JOINT					
	96103076	(D)DICHTUNG									(S)JUNTA					
		6 . B B B . . O									1					
	[31]	(E)ADAPTER-EGR VALVE									(F)ADAPTATEUR					
	96103111	(D)ADAPTER									(S)ADAPTADOR					
		6 . B B B . . O									1					
	[32]	(E)BOLT-HEXAGON FLANGE									(F)BOULON					
	09103-08020	(D)SCHRAUBE									(S)PERNO					
		6 . B B B . . O									1					
	[33]	(E)BOLT-HEXAGON FLANGE									(F)BOULON					
		(D)SCHRAUBE									(S)PERNO					

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK


1311 CYLINDER HEAD(DOHC)

3N06

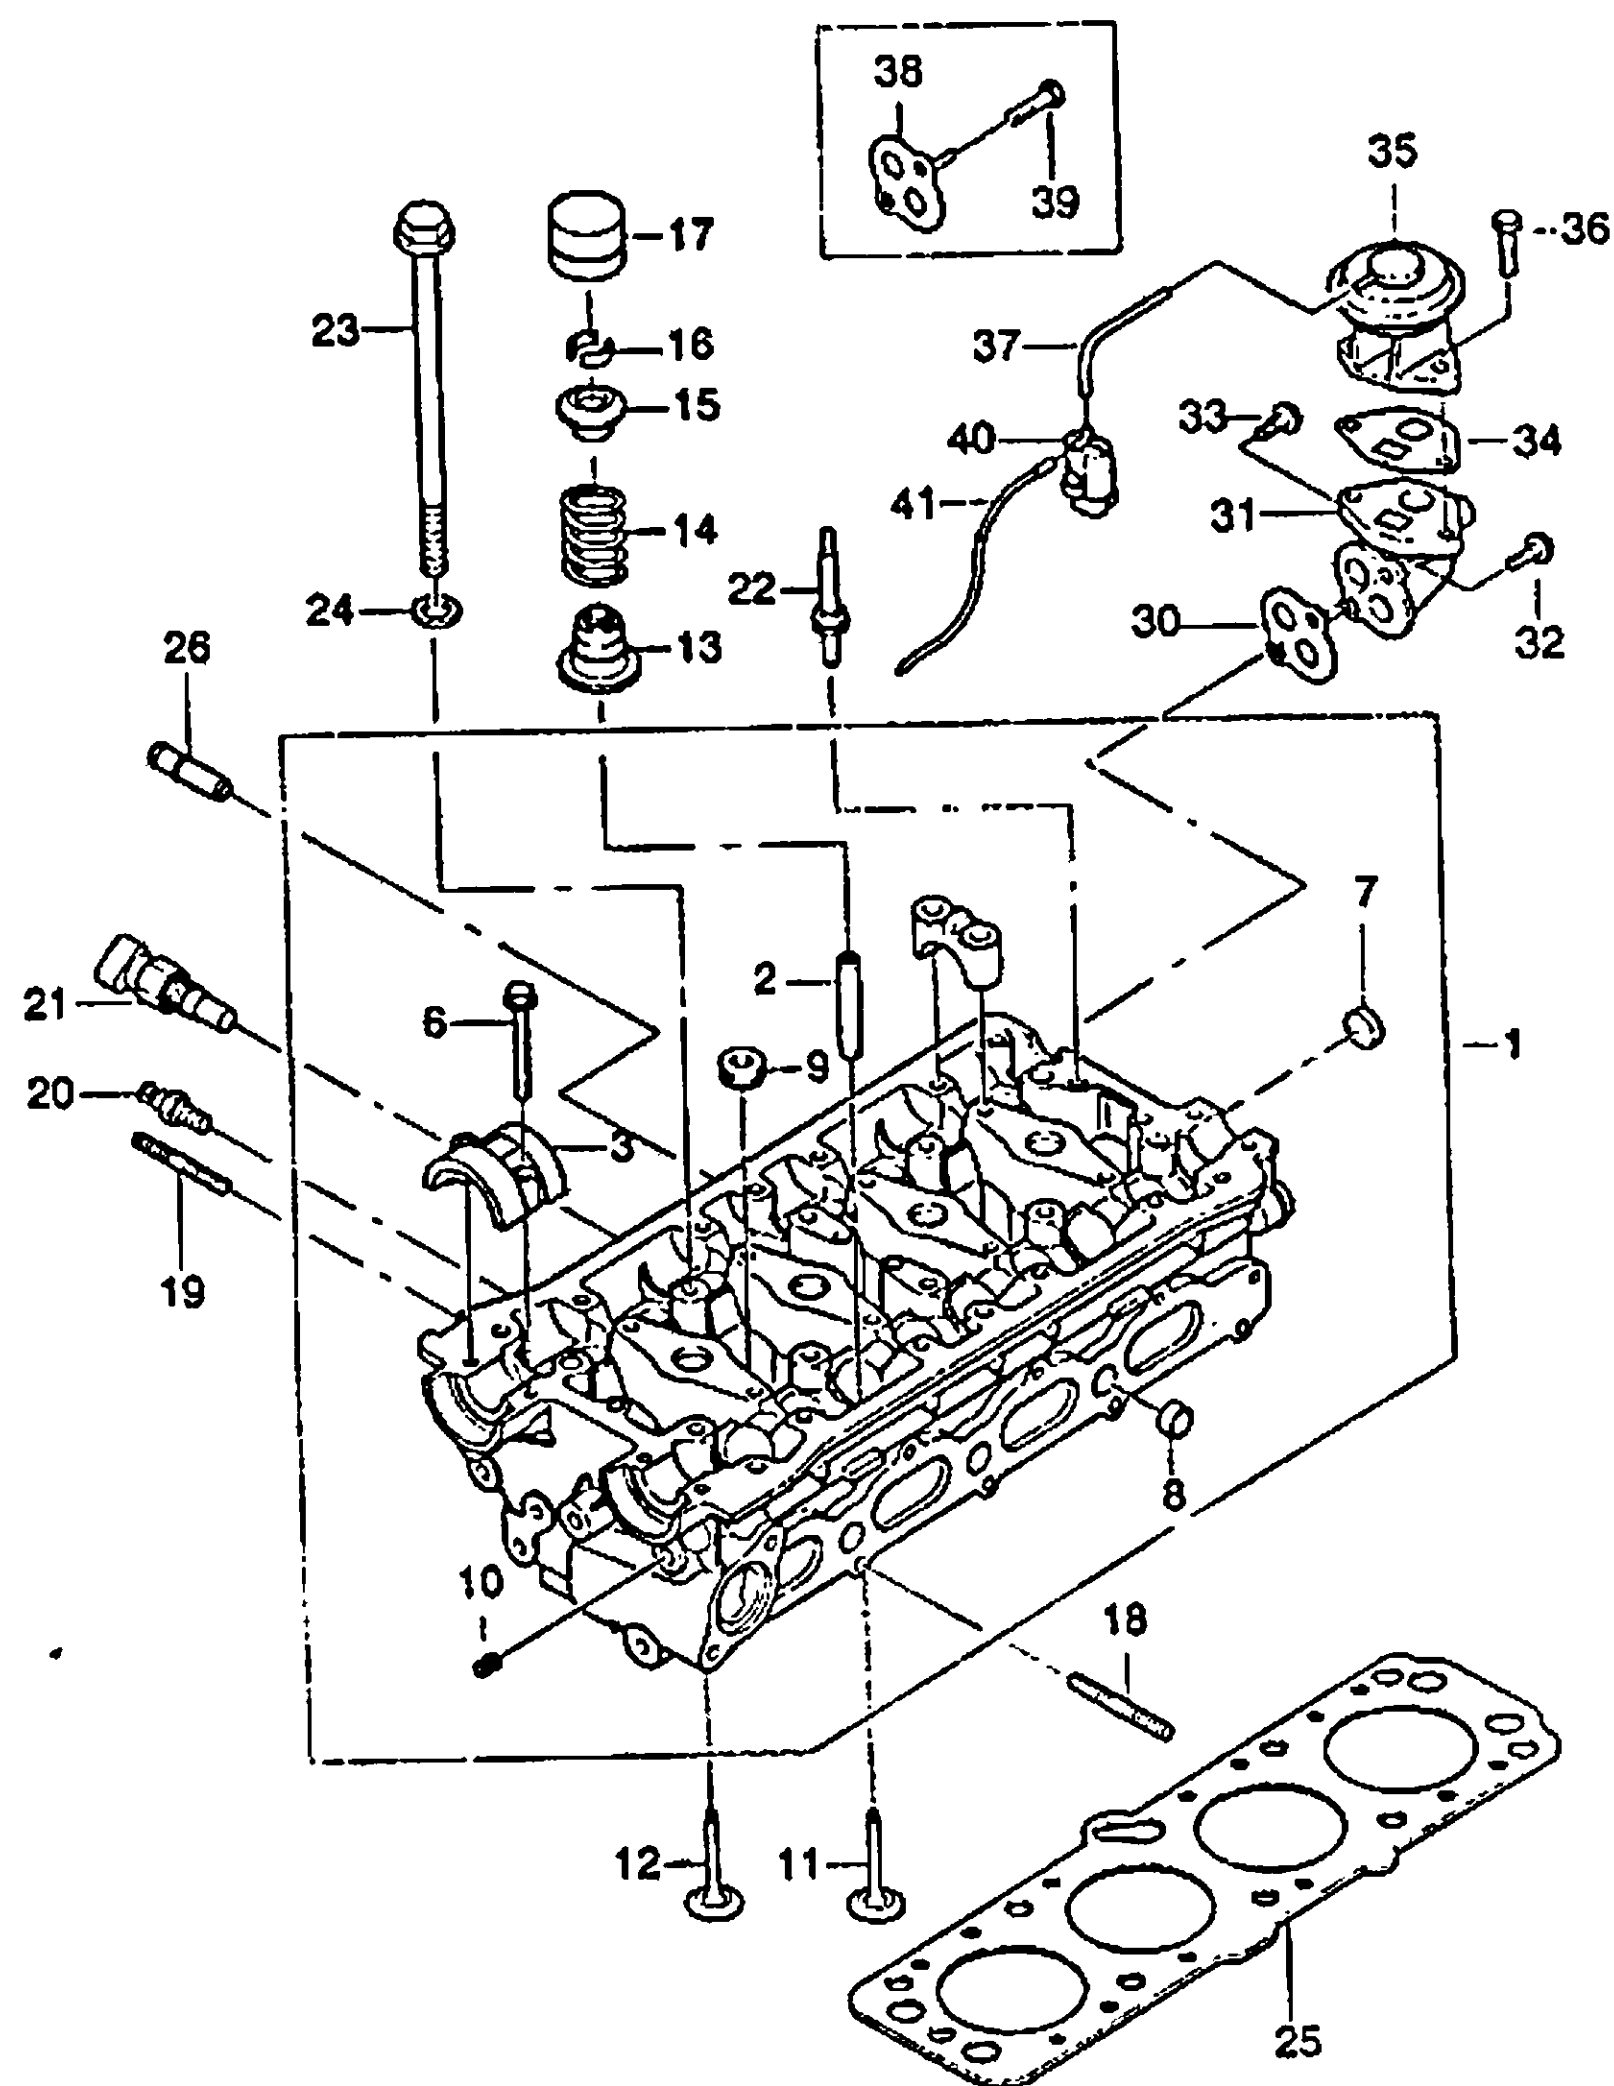


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	09103-08021 [34]	6	.	B	B	B	.	.	O		1				
		(E)GASKET-EGR VALVE (D)DICHTUNG											(F)JOINT (S)JUNTA		
	96103075 [35]	6	.	B	B	B	.	.	O		1				
		(E)VALVE A-EGR (D)VENTIL											(F)SOUPAPE (S)VALVULA		
	17092164 [36]	6	.	B	B	B	.	.	O		1				
		(E)BOLT-HEXAGON (D)SCHRAUBE											(F)BOULON (S)PERNO		
	11048333 [37]	6	.	B	B	B	.	.	O		2				
		(E)PIPE A-VACUUM (D)ROHR,VAKUUM											(F)TUYAU-DEPRESSION (S)TUBERIA-VACIO		
	96248445 [38]	6	.	B	B	B	.	.	O	-KL9	1				
		(E)PLATE-EGR CLOSING (D)PLATTE											(F)PLAQUE (S)PLACA		
	96181530 [39]													NOT APPLIED	
		(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE											(F)BOULON (S)PERNO		
	09103-08019 [40]													NOT APPLIED	
		(E)VALVE-SOLENOID (D)VENTIL											(F)SOUPAPE (S)VALVULA		
	96350594 [41]	6	.	B	B	B	.	.	O	-KL9	1				
		(E)PIPE A-VACUUM (D)ROHR,VAKUUM											(F)TUYAU-DEPRESSION (S)TUBERIA-VACIO		
	96242230	6	.	B	B	B	.	.	O	-KL9	1				


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

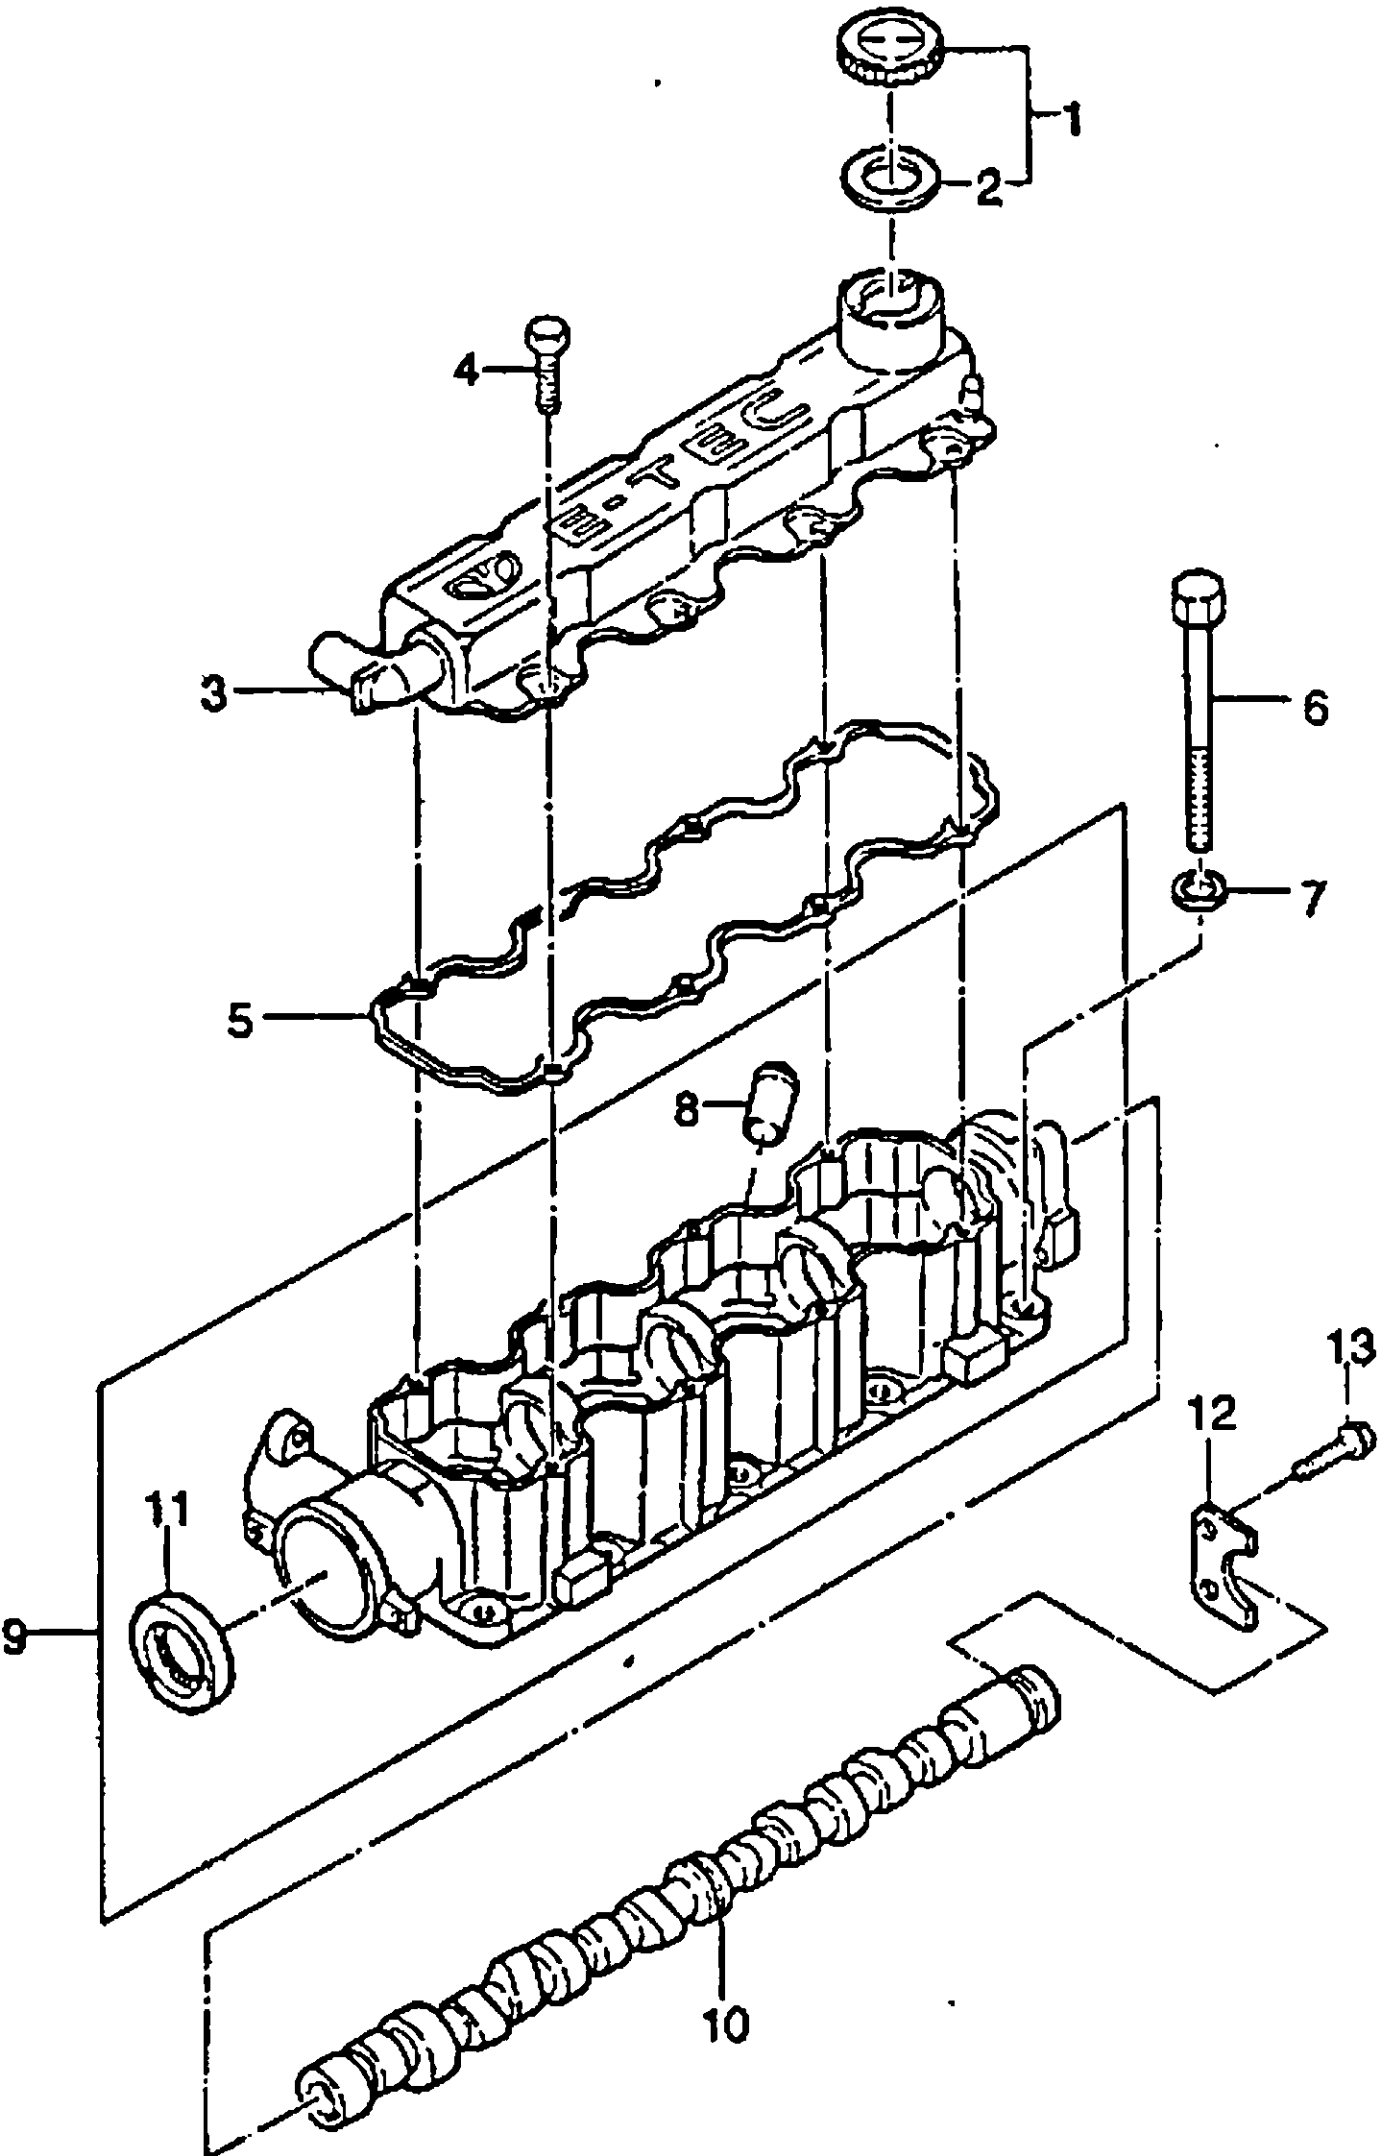

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
[01]	(E)CAP A-BAYONET JOINT (D)DECKEL,BAYONETTEN-GLIED								(F)CHAPEAU-JOINT BAYONETTE (S)TAPA-UNION DE BAYONETA							
96351602	Y . B B B S S S								1							
[02]	(E)SEAL-BAYONET CAP (D)DICHTUNG,BAYONNETTE KAPPE								(F)JOINT-CHAPEAU BAYONETTE (S)SELLO-TAPA DE BAYONETA							
N/S(1)									1							
[03]	(E)COVER A-CAMSHAFT SUPPORT (D)DECKEL,NOCKENWELLE-TRÄGER								(F)CARTER (S)CUBIERTA							
96181319	Y . B B B S S S								1			INCL #1,2,5				
[04]	(E)BOLT-HEXAGON (D)SCHRAUBE								(F)BOULON (S)PERNO							
09117-06007	Y . B B B S S S								8		971001	W/WASHER TYPE				
O 09103-06008	Y . B B B S S S								8		971001	FLANGE TYPE				
[05]	(E)GASKET-CAMSHAFT SUPT CVR (D)DICHTUNG								(F)JOINT-CARTER SUPPORT (S)JUNTA							
96181318	Y . B B B S S S								1							
[06]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE								(F)BOULON (S)PERNO							
09103-10024	Y . B B B S S S								10							
[07]	(E)WASHER (D)DICHTUNGSRING								(F)RONDELLE (S)ARANDELA							
96180642	Y . B B B S S S								10							
[08]	(E)TUBE (D)ROHRLEITUNG								(F)TUYAU OU TUBE (S)TUBO							
90220615	Y . B B B S S S								1							
[09]	(E)SUPPORT A-CAMSHAFT (D)TRÄGER,NOCKENWELLE								(F)SUPPORT-ARBRE A CAMES (S)SOPORTE-ARBOL DE LEVA							
A96182962	Y . B B B S S S								1							
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

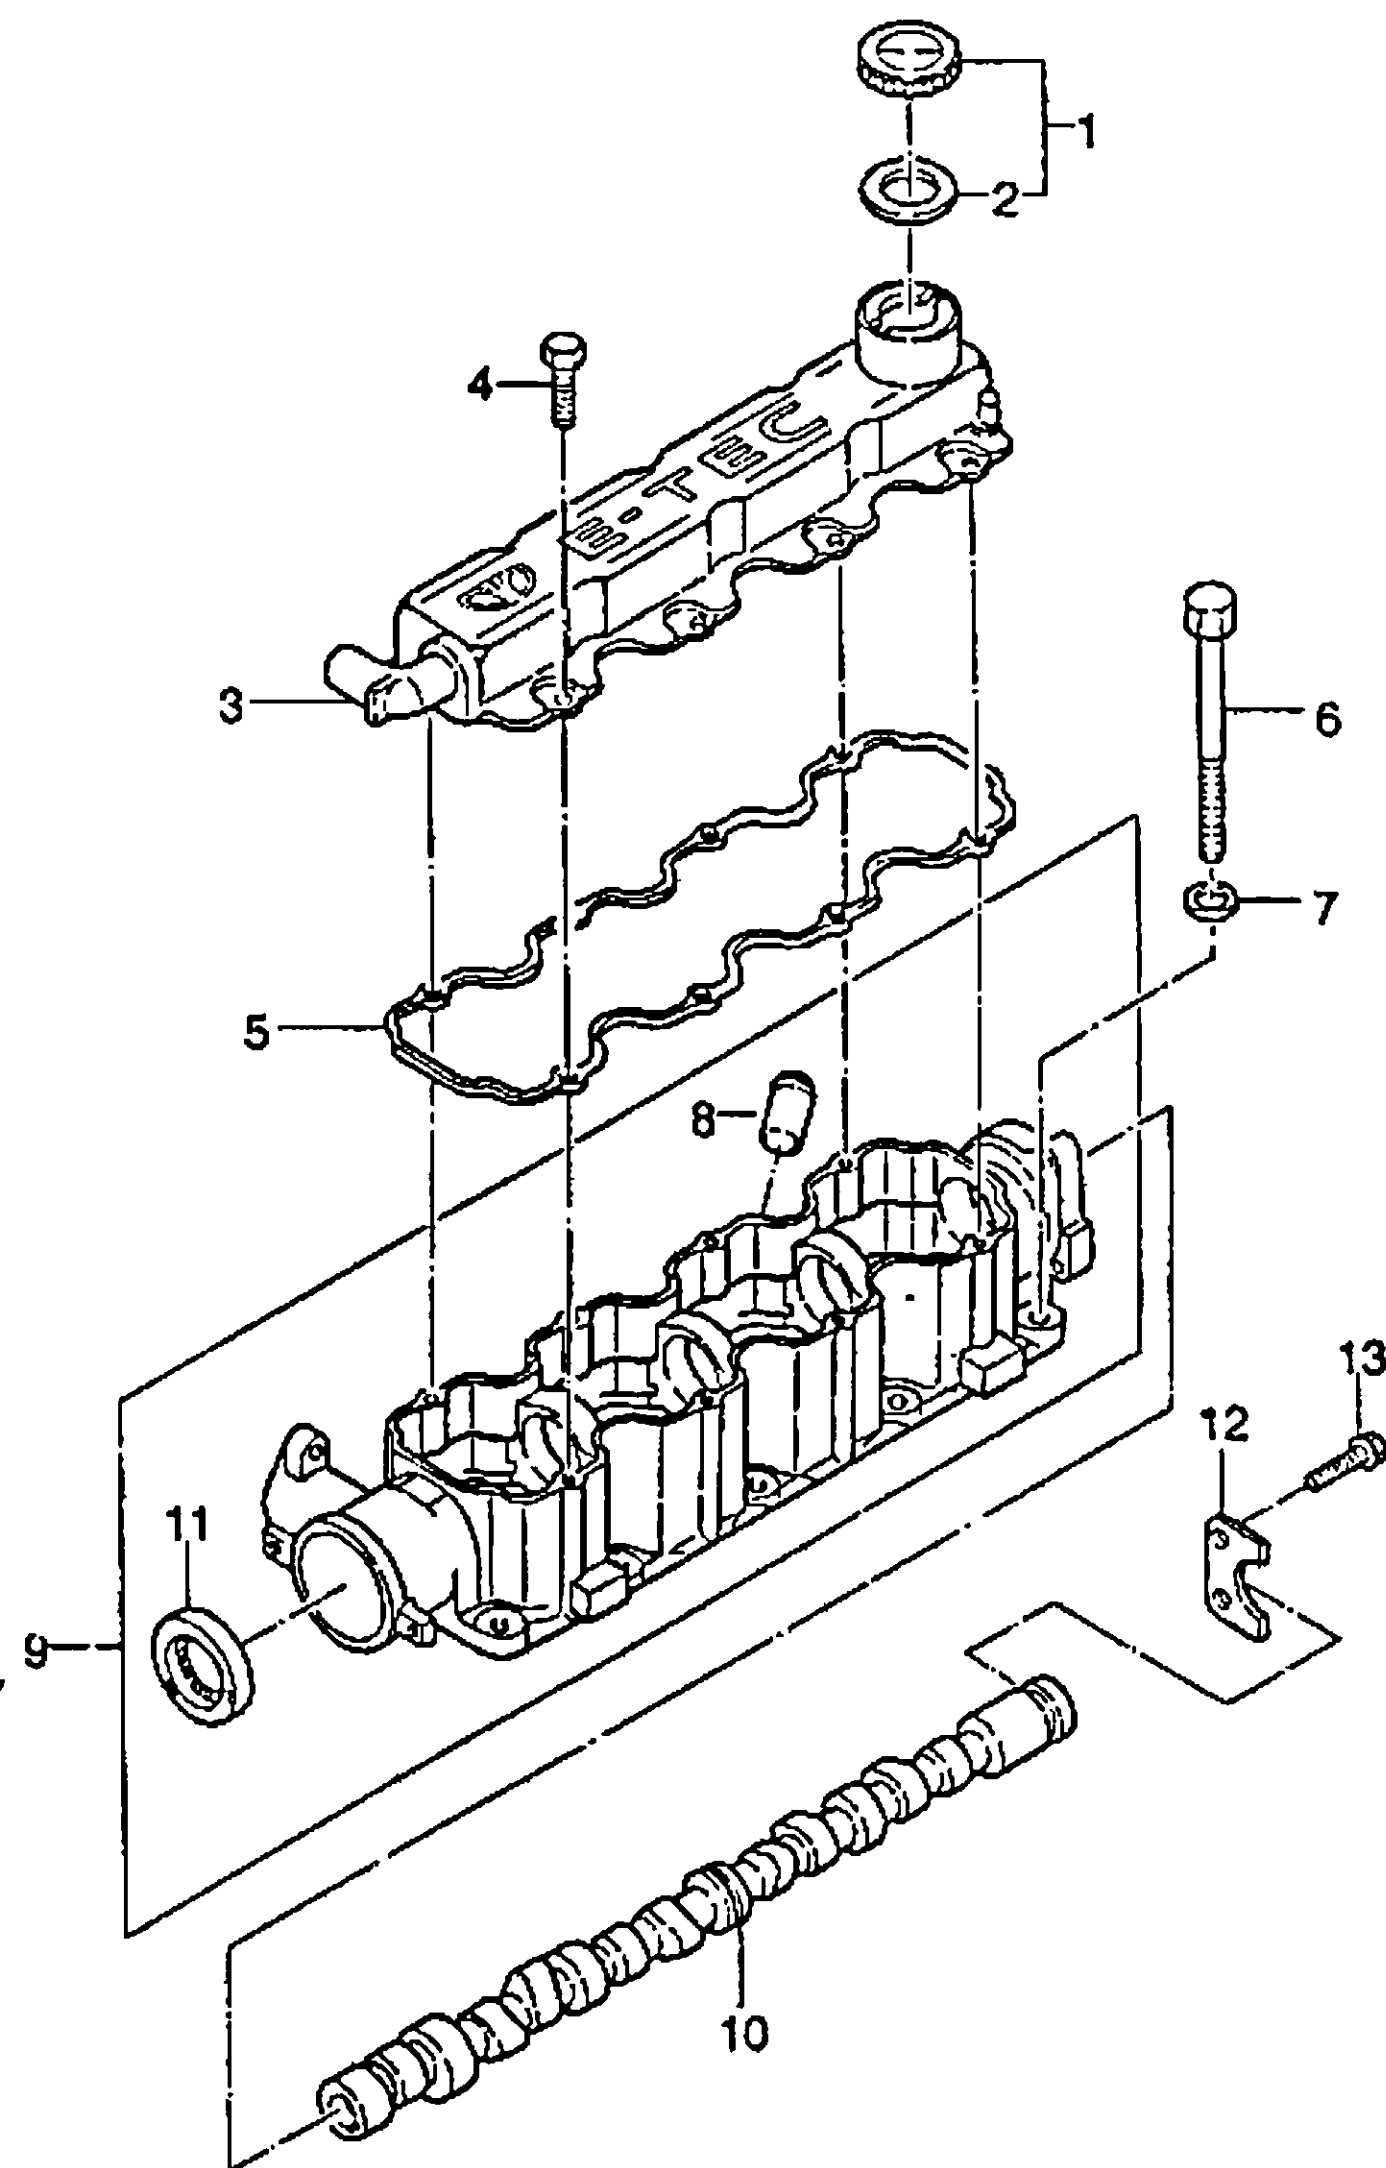


KEY NO.			PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								X
[10]	A96182964	(E)CAMSHAFT A (D)NOCKENWELLE	Y	.	B	B	B	S	S	S		(F)ARBRE A CAMES (S)CIGUEÑAL	1			
[11]	90122609	(E)RING-SHAFT SEAL (D)RING,STAB DICHTUNG	Y	.	B	B	B	S	S	S		(F)ANNEAU-JOINT D'ARBRE (S)ANILLO-BROCHE DE EJE	1	971001	35X48X 7	
	Y 90280463		Y	.	B	B	B	S	S	S			1	971001	35X48X 7	
[12]	90233647	(E)PLATE-CAMSHAFT PRESSURE (D)PLATTE,KURBELWELLE DRUCK	Y	.	B	B	B	S	S	S		(F)PLAQUE (S)PLACA	1			
[13]	07130-06169	(E)BOLT-HEXAGON SOCKET TYPE (D)SCHRAUBE	Y	.	B	B	B	S	S	S		(F)BOULON (S)PERNO	2			
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

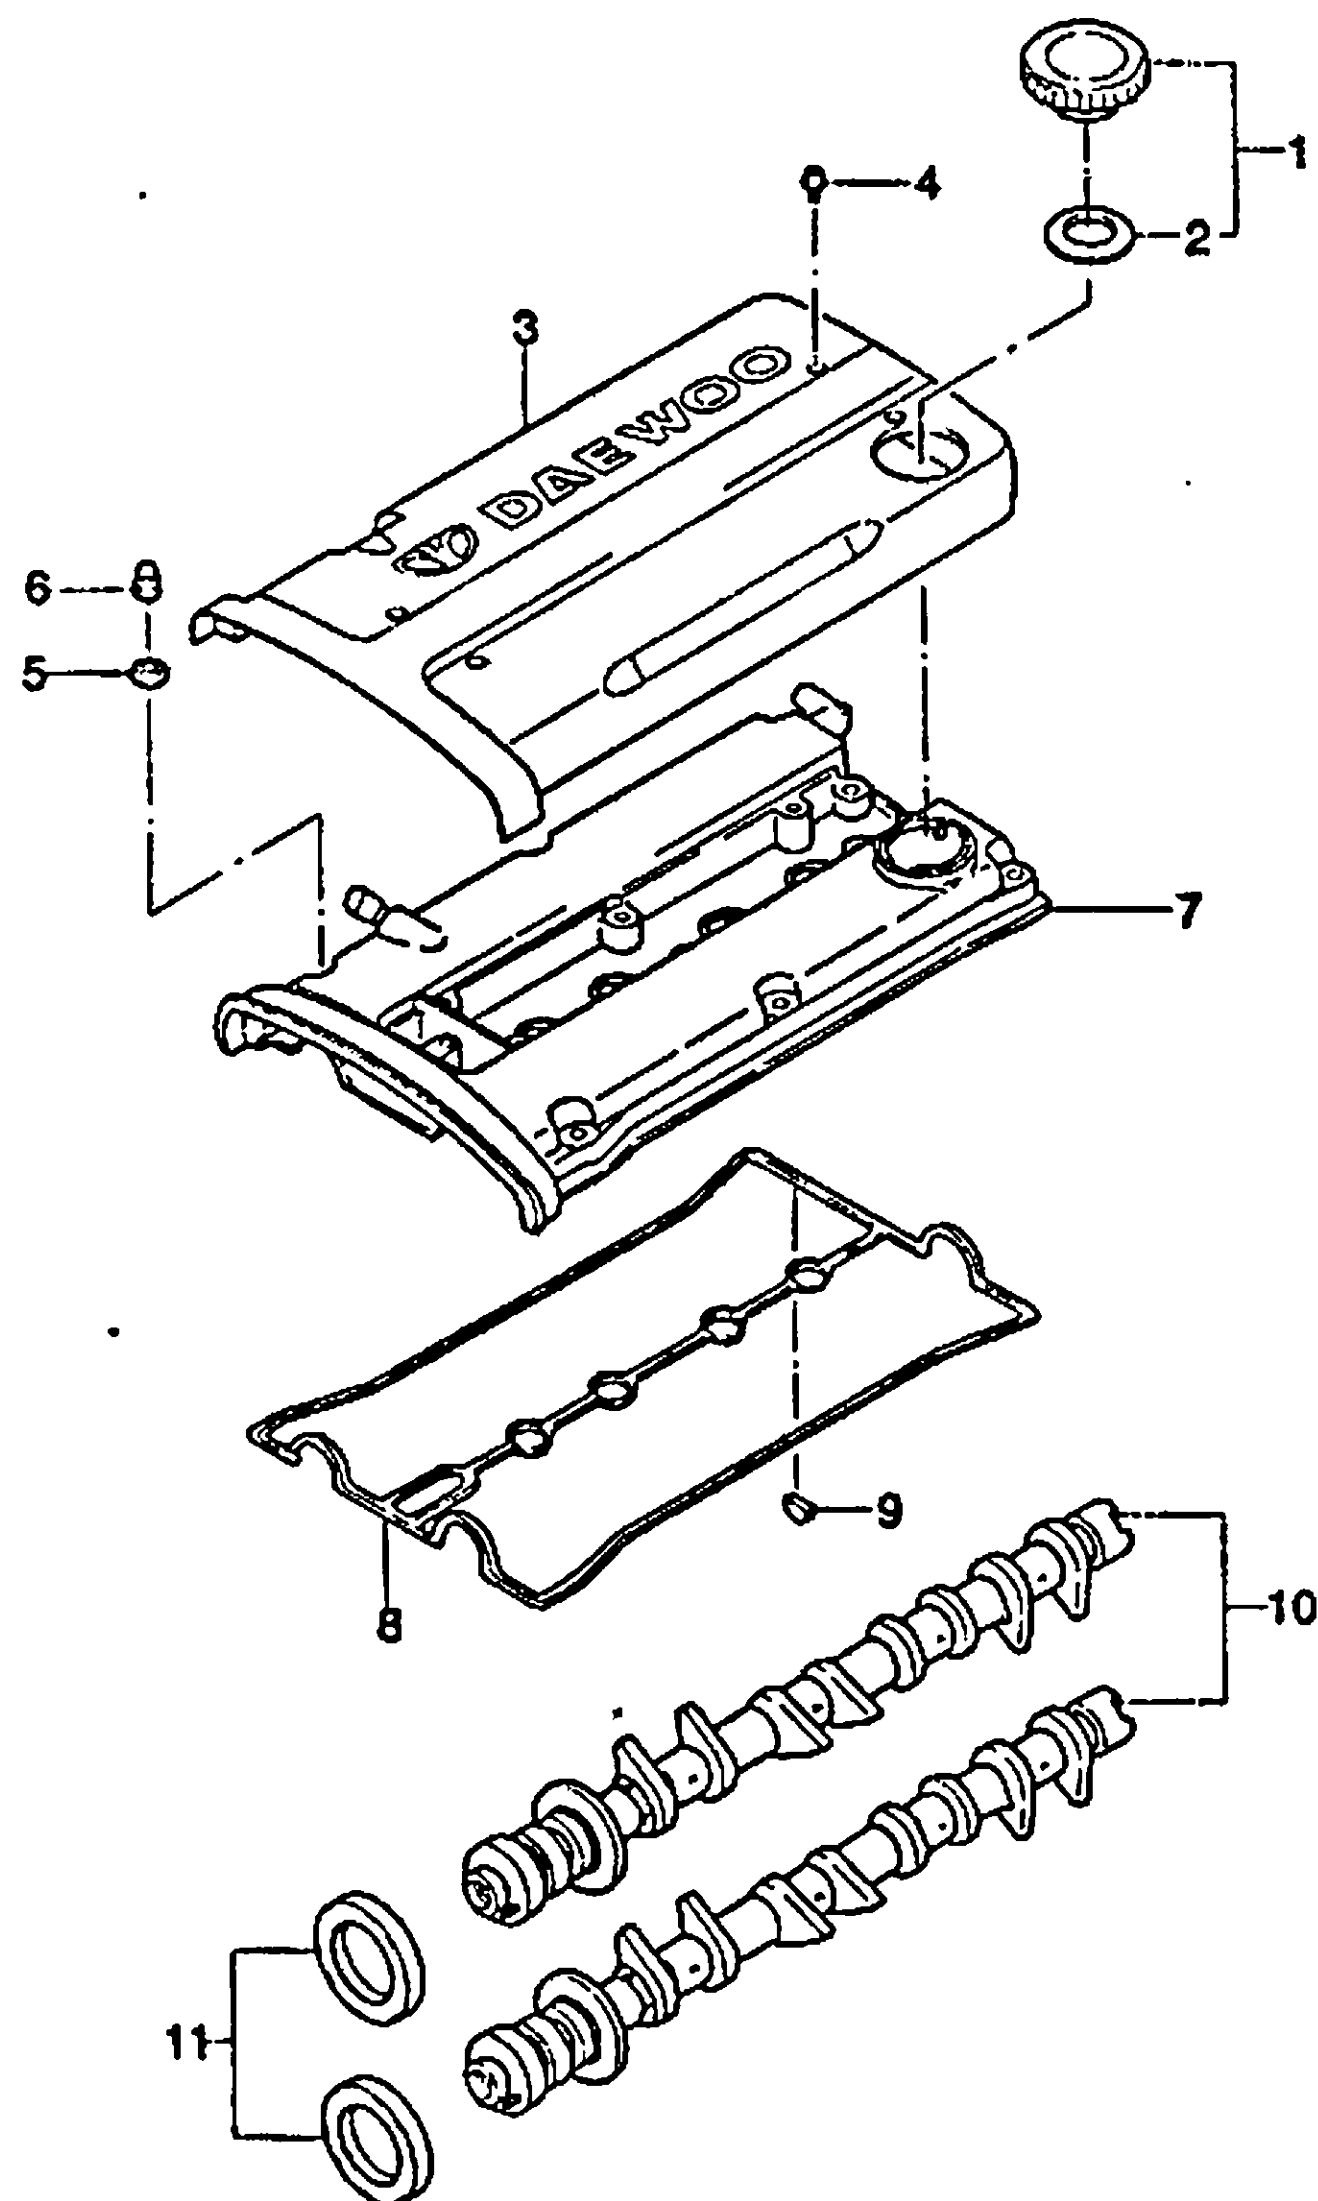


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)CAP A-BAYONET JOINT (D)DECKEL,BAYONETTEN-GLIED									(F)CHAPEAU-JOINT BAYONETTE (S)TAPA-UNION DE BAYONETA				
	96351472	6 . B B B . . O									1				
	[02]	(E)SEAL-BAYONET CAP (D)DICHTUNG,BAYONNETTE KAPPE									(F)JOINT-CHAPEAU BAYONETTE (S)SELLO-TAPA DE BAYONETA				
	96181851	6 . B B B . . O									1				
	[03]	(E)COVER A-CAMSHAFT,UPPER (D)DECKEL									(F)CARTER (S)CUBIERTA				
	96351473	6 . B B B . . O									1				
	[04]	(E)BOLT-HEXAGON SOCKET TYPE (D)SCHRAUBE									(F)BOULON (S)PERNO				
	07130-06125	6 . B B B . . O									4				
	[05]	(E)WASHER-SEALING (D)RING,DICHTUNG									(F)RONDELLE-ETANCHEITE (S)ARANDELA-SELLANTE				
	96144569	6 . B B B . . O									11	970625			
O	96352732	6 . B B B . . O									11	970625			
	[06]	(E)NUT-FLANGE CAP (D)MUTTER,GEFLANSCHTE KAPPE									(F)ECROU-CHAPEAU A FLASQUES (S)TUERCA-TAPO CON PESTAÑA				
	09145-06004	6 . B B B . . O									11				
	[07]	(E)COVER A-CAMSHAFT (D)DECKEL,NOCKENWELLE									(F)CARTER-ARBRE A CAMES (S)CUBIERTA-CIGUEÑAL				
	96351548	6 . B B B . . O									1				
	[08]	(E)GASKET-CAMSHAFT COVER (D)DICHTUNG									(F)JOINT-CARTER (S)JUNTA				
	96351213	6 . B B B . . O									1				
	[09]	(E)SEAL-'D' (D)DICHTUNG									(F)JOINT D'ETANCHEITE (S)SELLO				
	96144621	6 . B B B . . O									2				


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

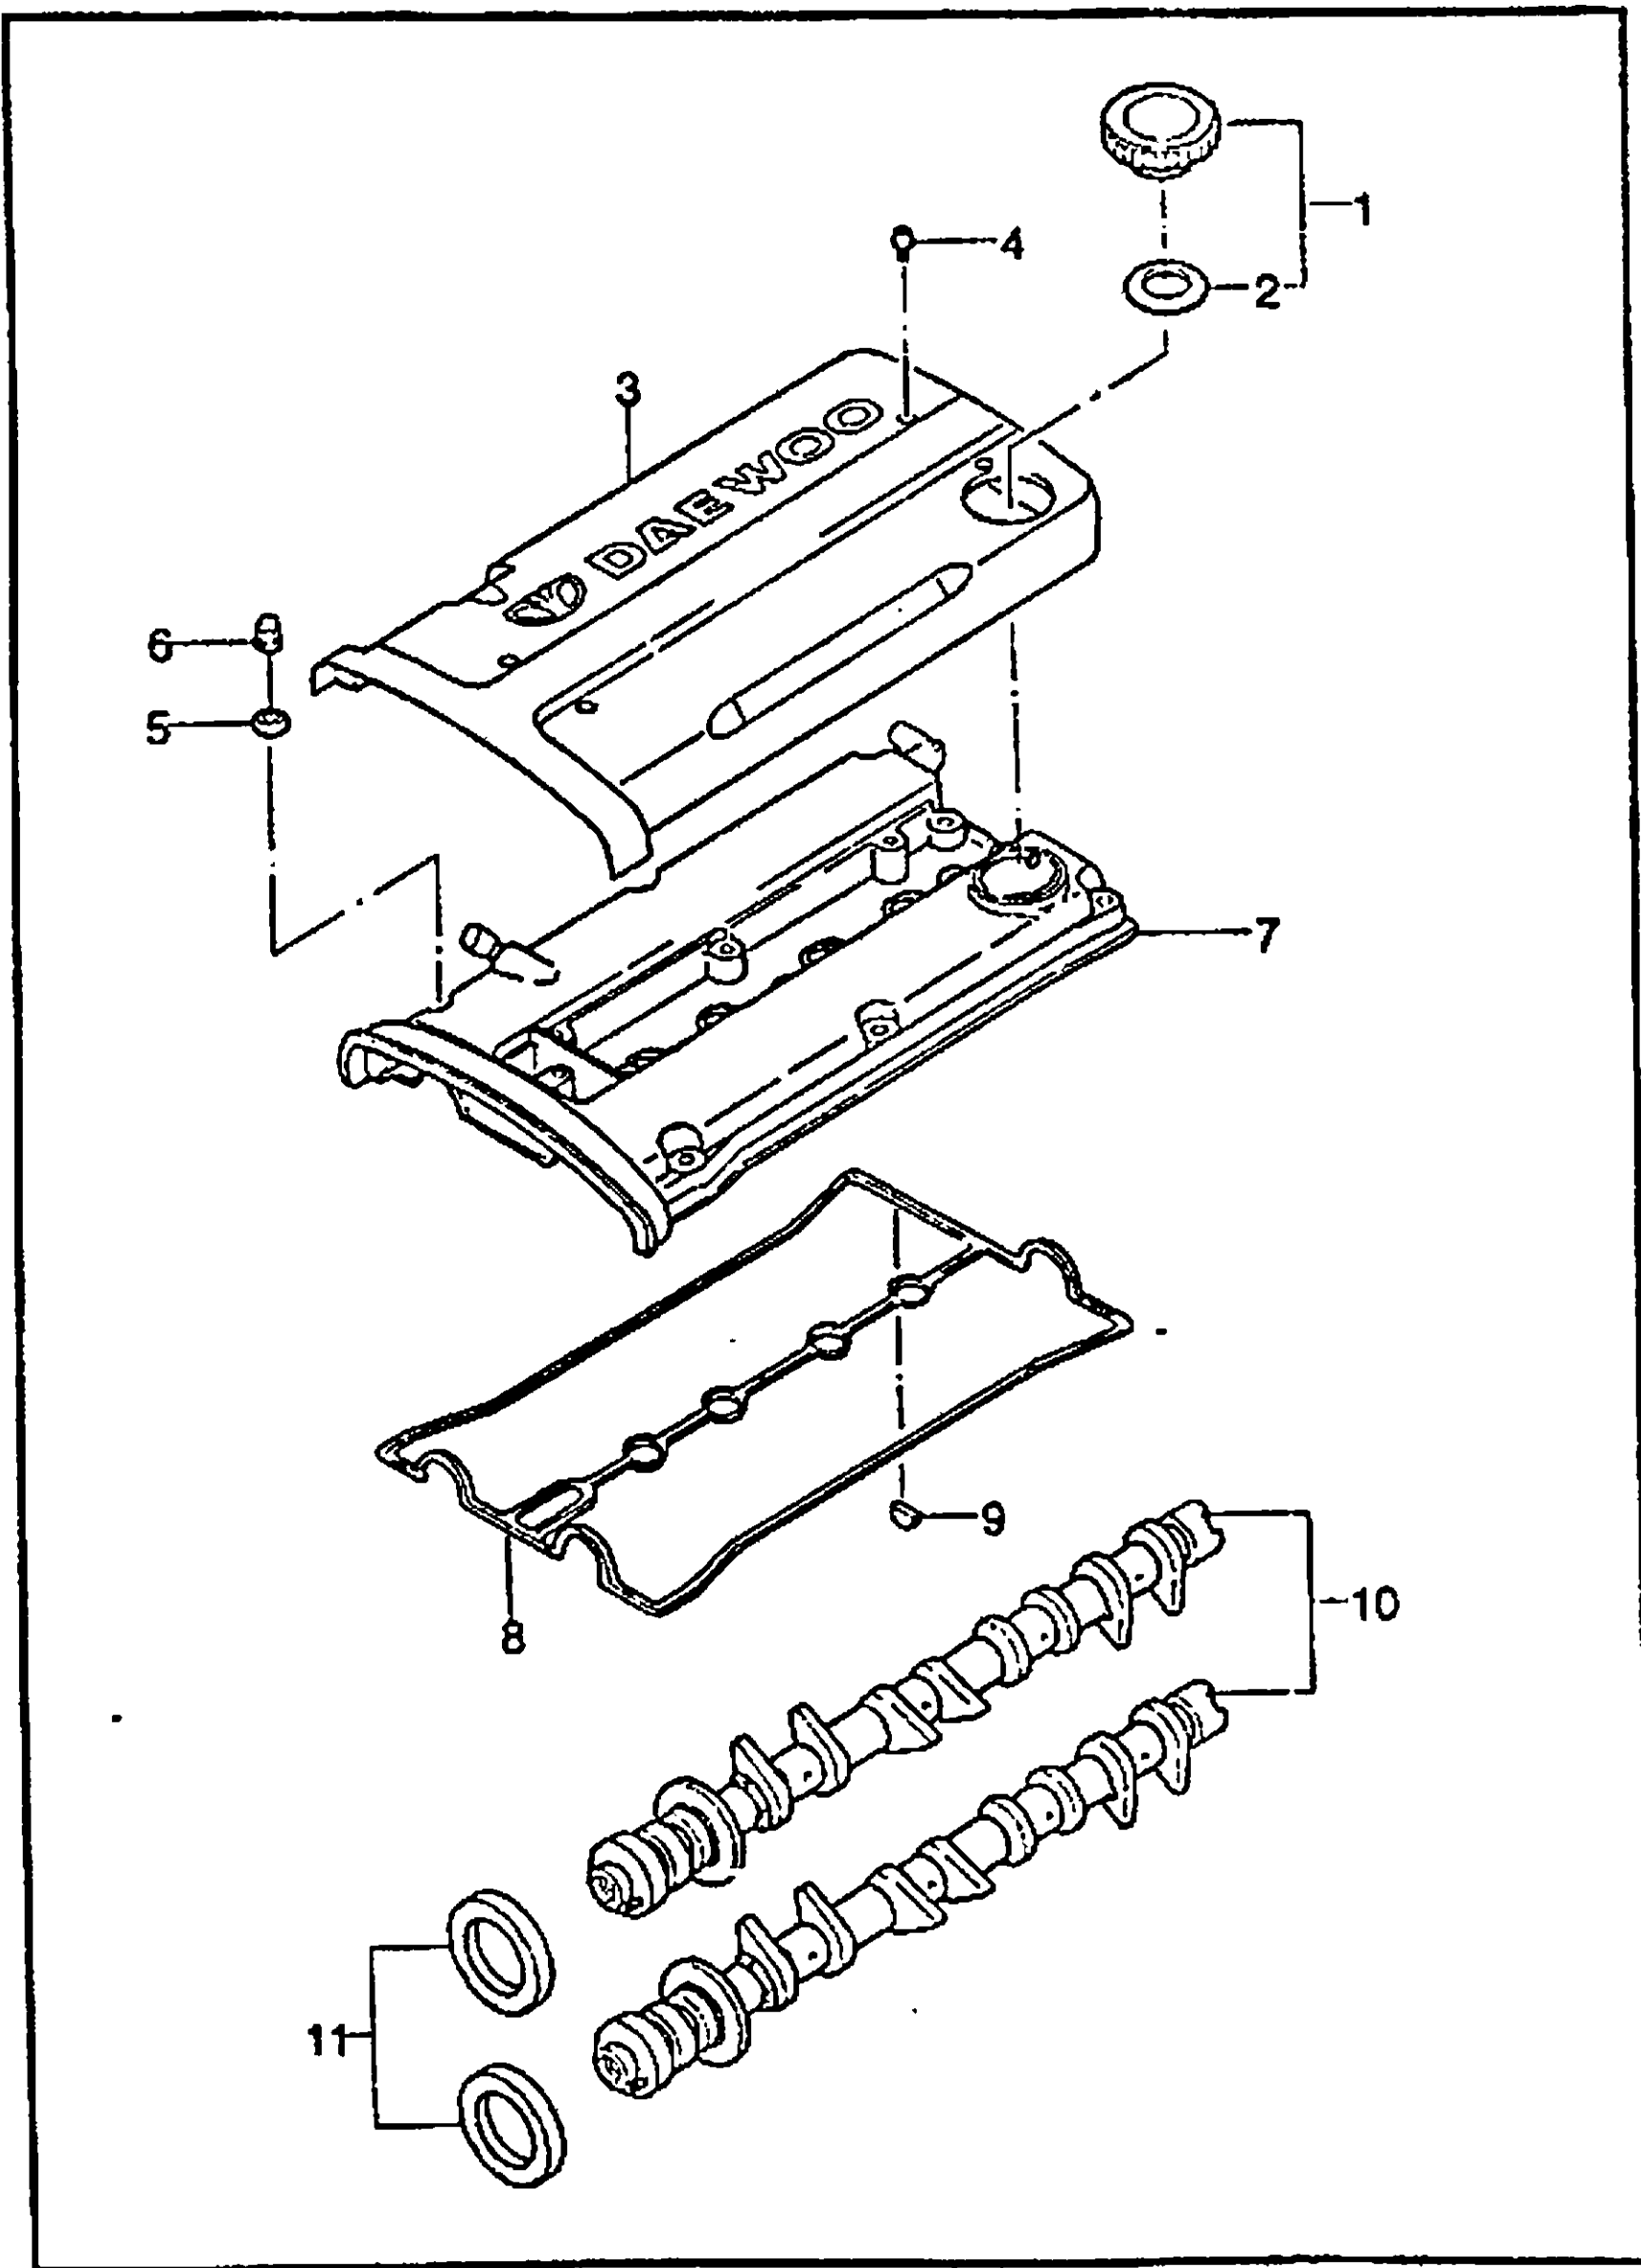


KEY NO.			PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					F R O M	T O			
				4 N	3 H	5 H	S S	S S								X
[10] A96182606		(E)CAMSHAFT A (D)NOCKENWELLE 6 . B B B . . O							(F)ARBRE A CAMES (S)CIGUEÑAL 2							
[11] 5094005604		(E)SEAL-CAMSHAFT,FRONT (D)DICHTUNG,NOCKENWELLE 6 . B B B . . O							(F)JOINT-ARBRE A CAMES,AVANT (S)SELLO-ARBOL DE LEVA 2							
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

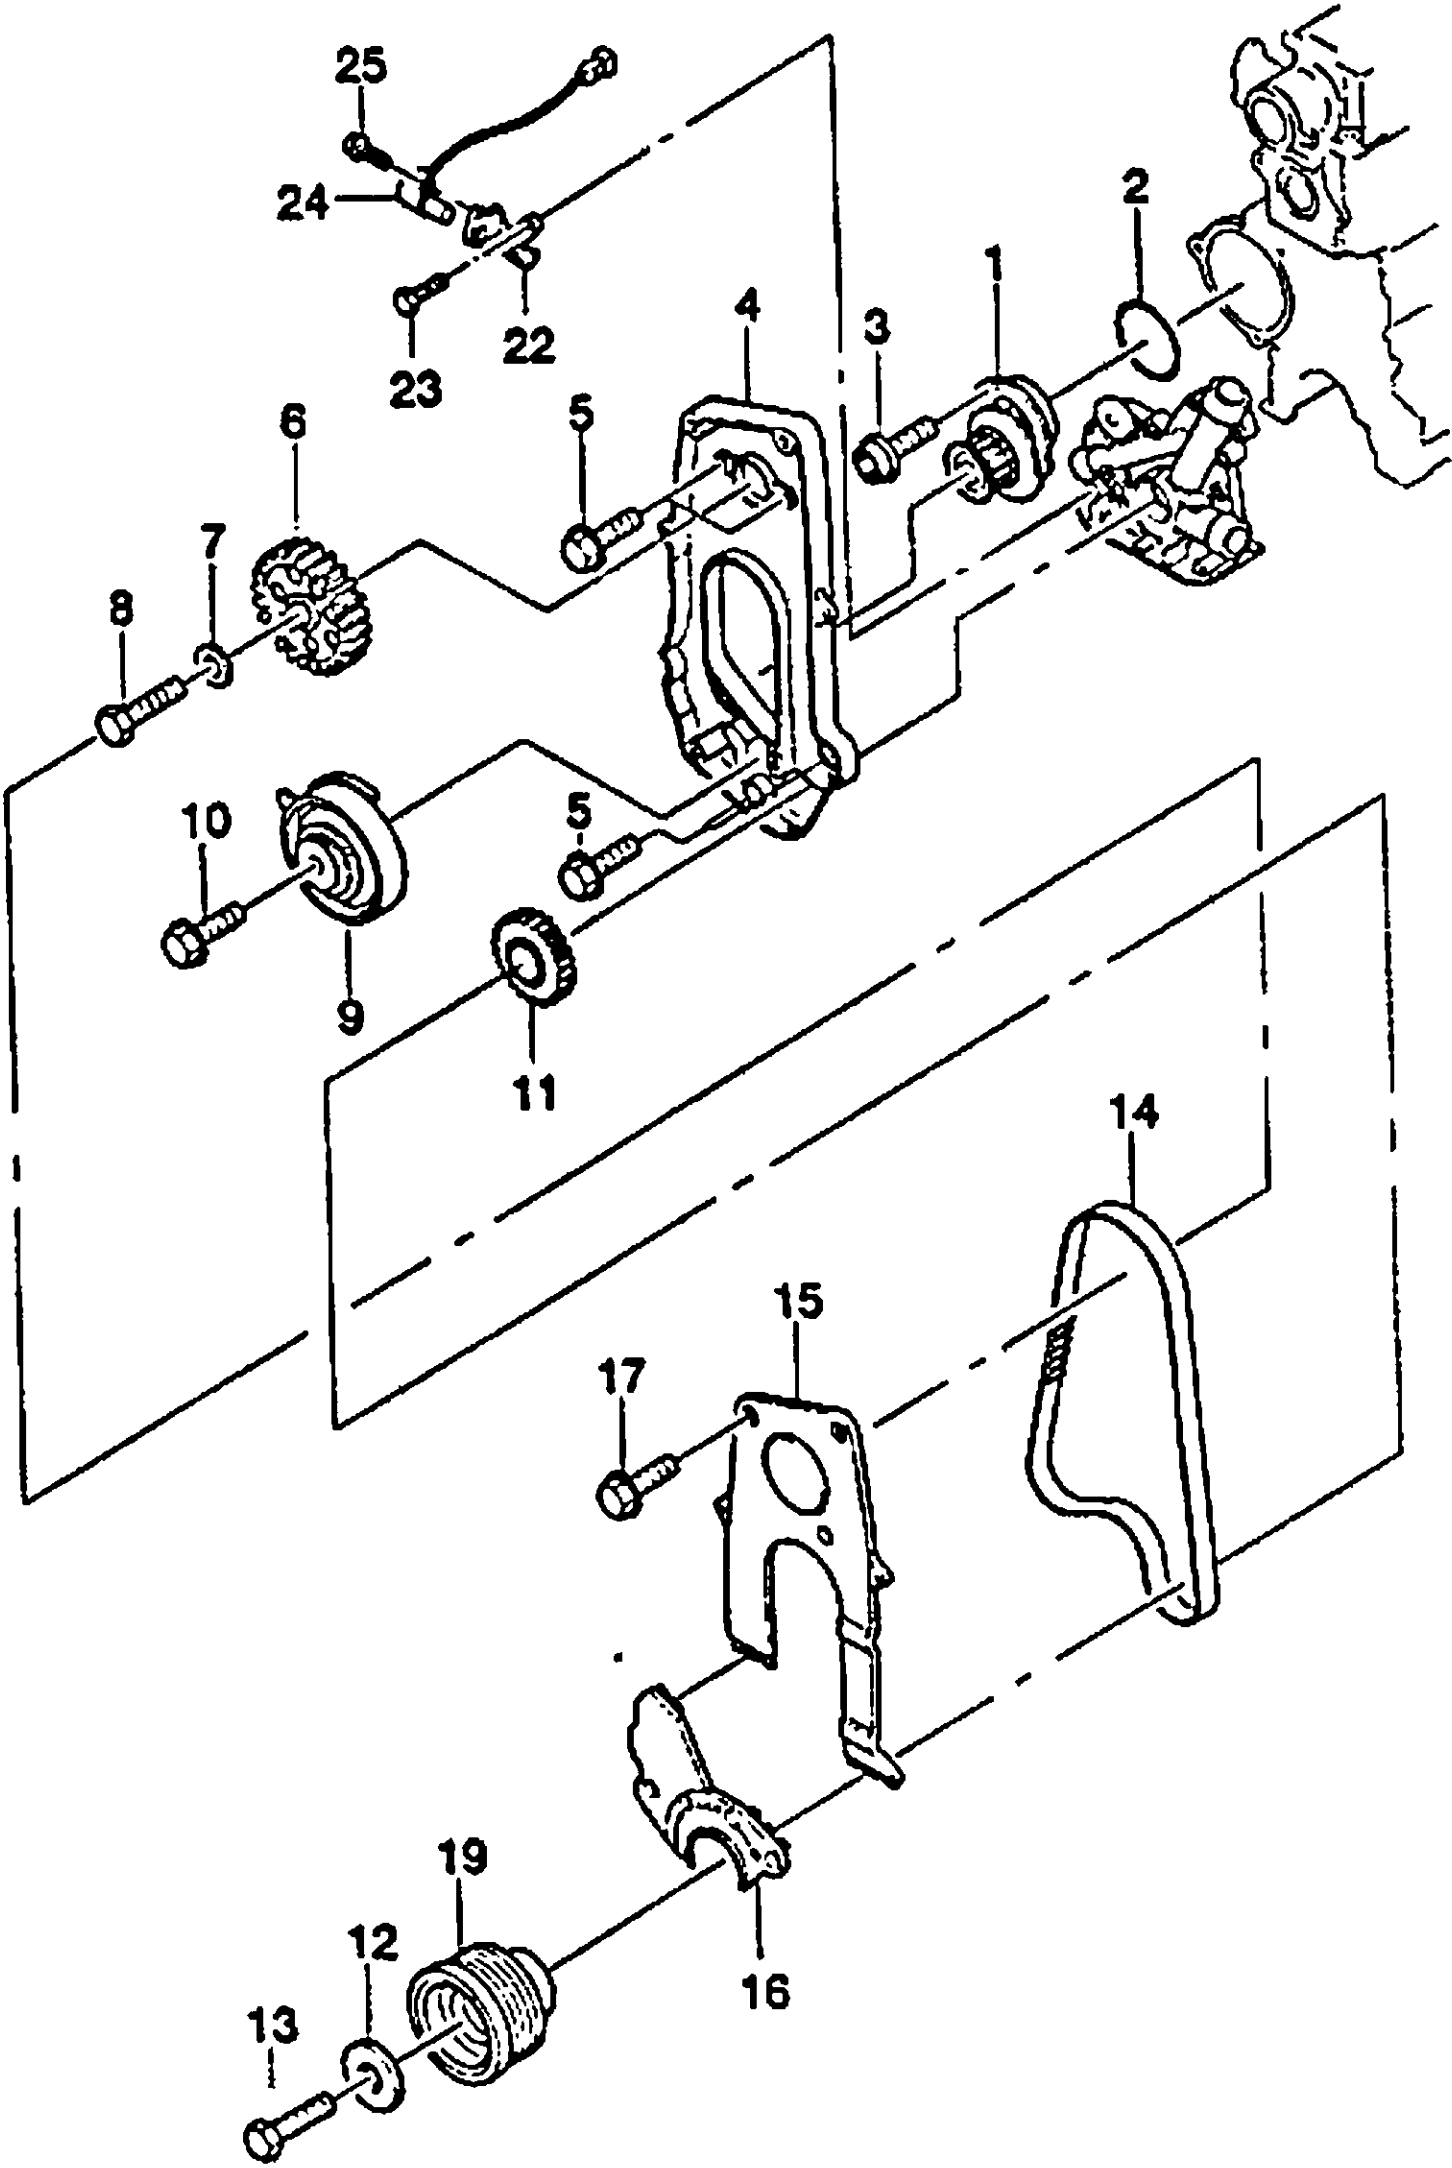

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01] 96350799	(E)PUMP A-WATER (D)PUMPE,WASSER Y . B B B S S S									(F)POMPE-EAU (S)BOMBA-AGUA 1					
	[02] 90076127	(E)RING-SEAL (D)RING,DICHTUNG Y . B B B S S S									(F)ANNEAU (S)ANILLO-SELLO 1					
	[03] 09106-06001	(E)BOLT (D)SCHRAUBE Y . B B B S S S									(F)BOULON (S)PERNO 3					
	[04] 96182950	(E)HOOD-TIMING BELT,REAR (D)HAUBE,ZÜNDFOLGEGURT Y . B B B S S S									(F)CAPOT (S)TAPA-CORREA DISTRIBUCION 1					
	[05] 09116-06016	(E)BOLT (D)SCHRAUBE Y . B B B S S S									(F)BOULON (S)PERNO 4					
	[06] 90231882	(E)GEAR-CAMSHAFT (D)GETRIEBE,NOCKENWELLE Y . B B B S S S									(F)ENGRENAGE-ARBRE A CAMES (S)ENGRANAJE-ARBOL DE LEVAS 1					
	[07] 96180642	(E)WASHER (D)DICHTUNGSRING Y . B B B S S S									(F)RONDELLE (S)ARANDELA 1					
	[08] 09100-10007	(E)BOLT-HEXAGON (D)SCHRAUBE Y . B B B S S S									(F)BOULON (S)PERNO 1					
	[09] 90499401	(E)TENSIONER A-TIMING BELT (D)SPANNUNG Y . B B B S S S									(F)TENDEUR (S)TENSOR 1					
	[10]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO.					
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

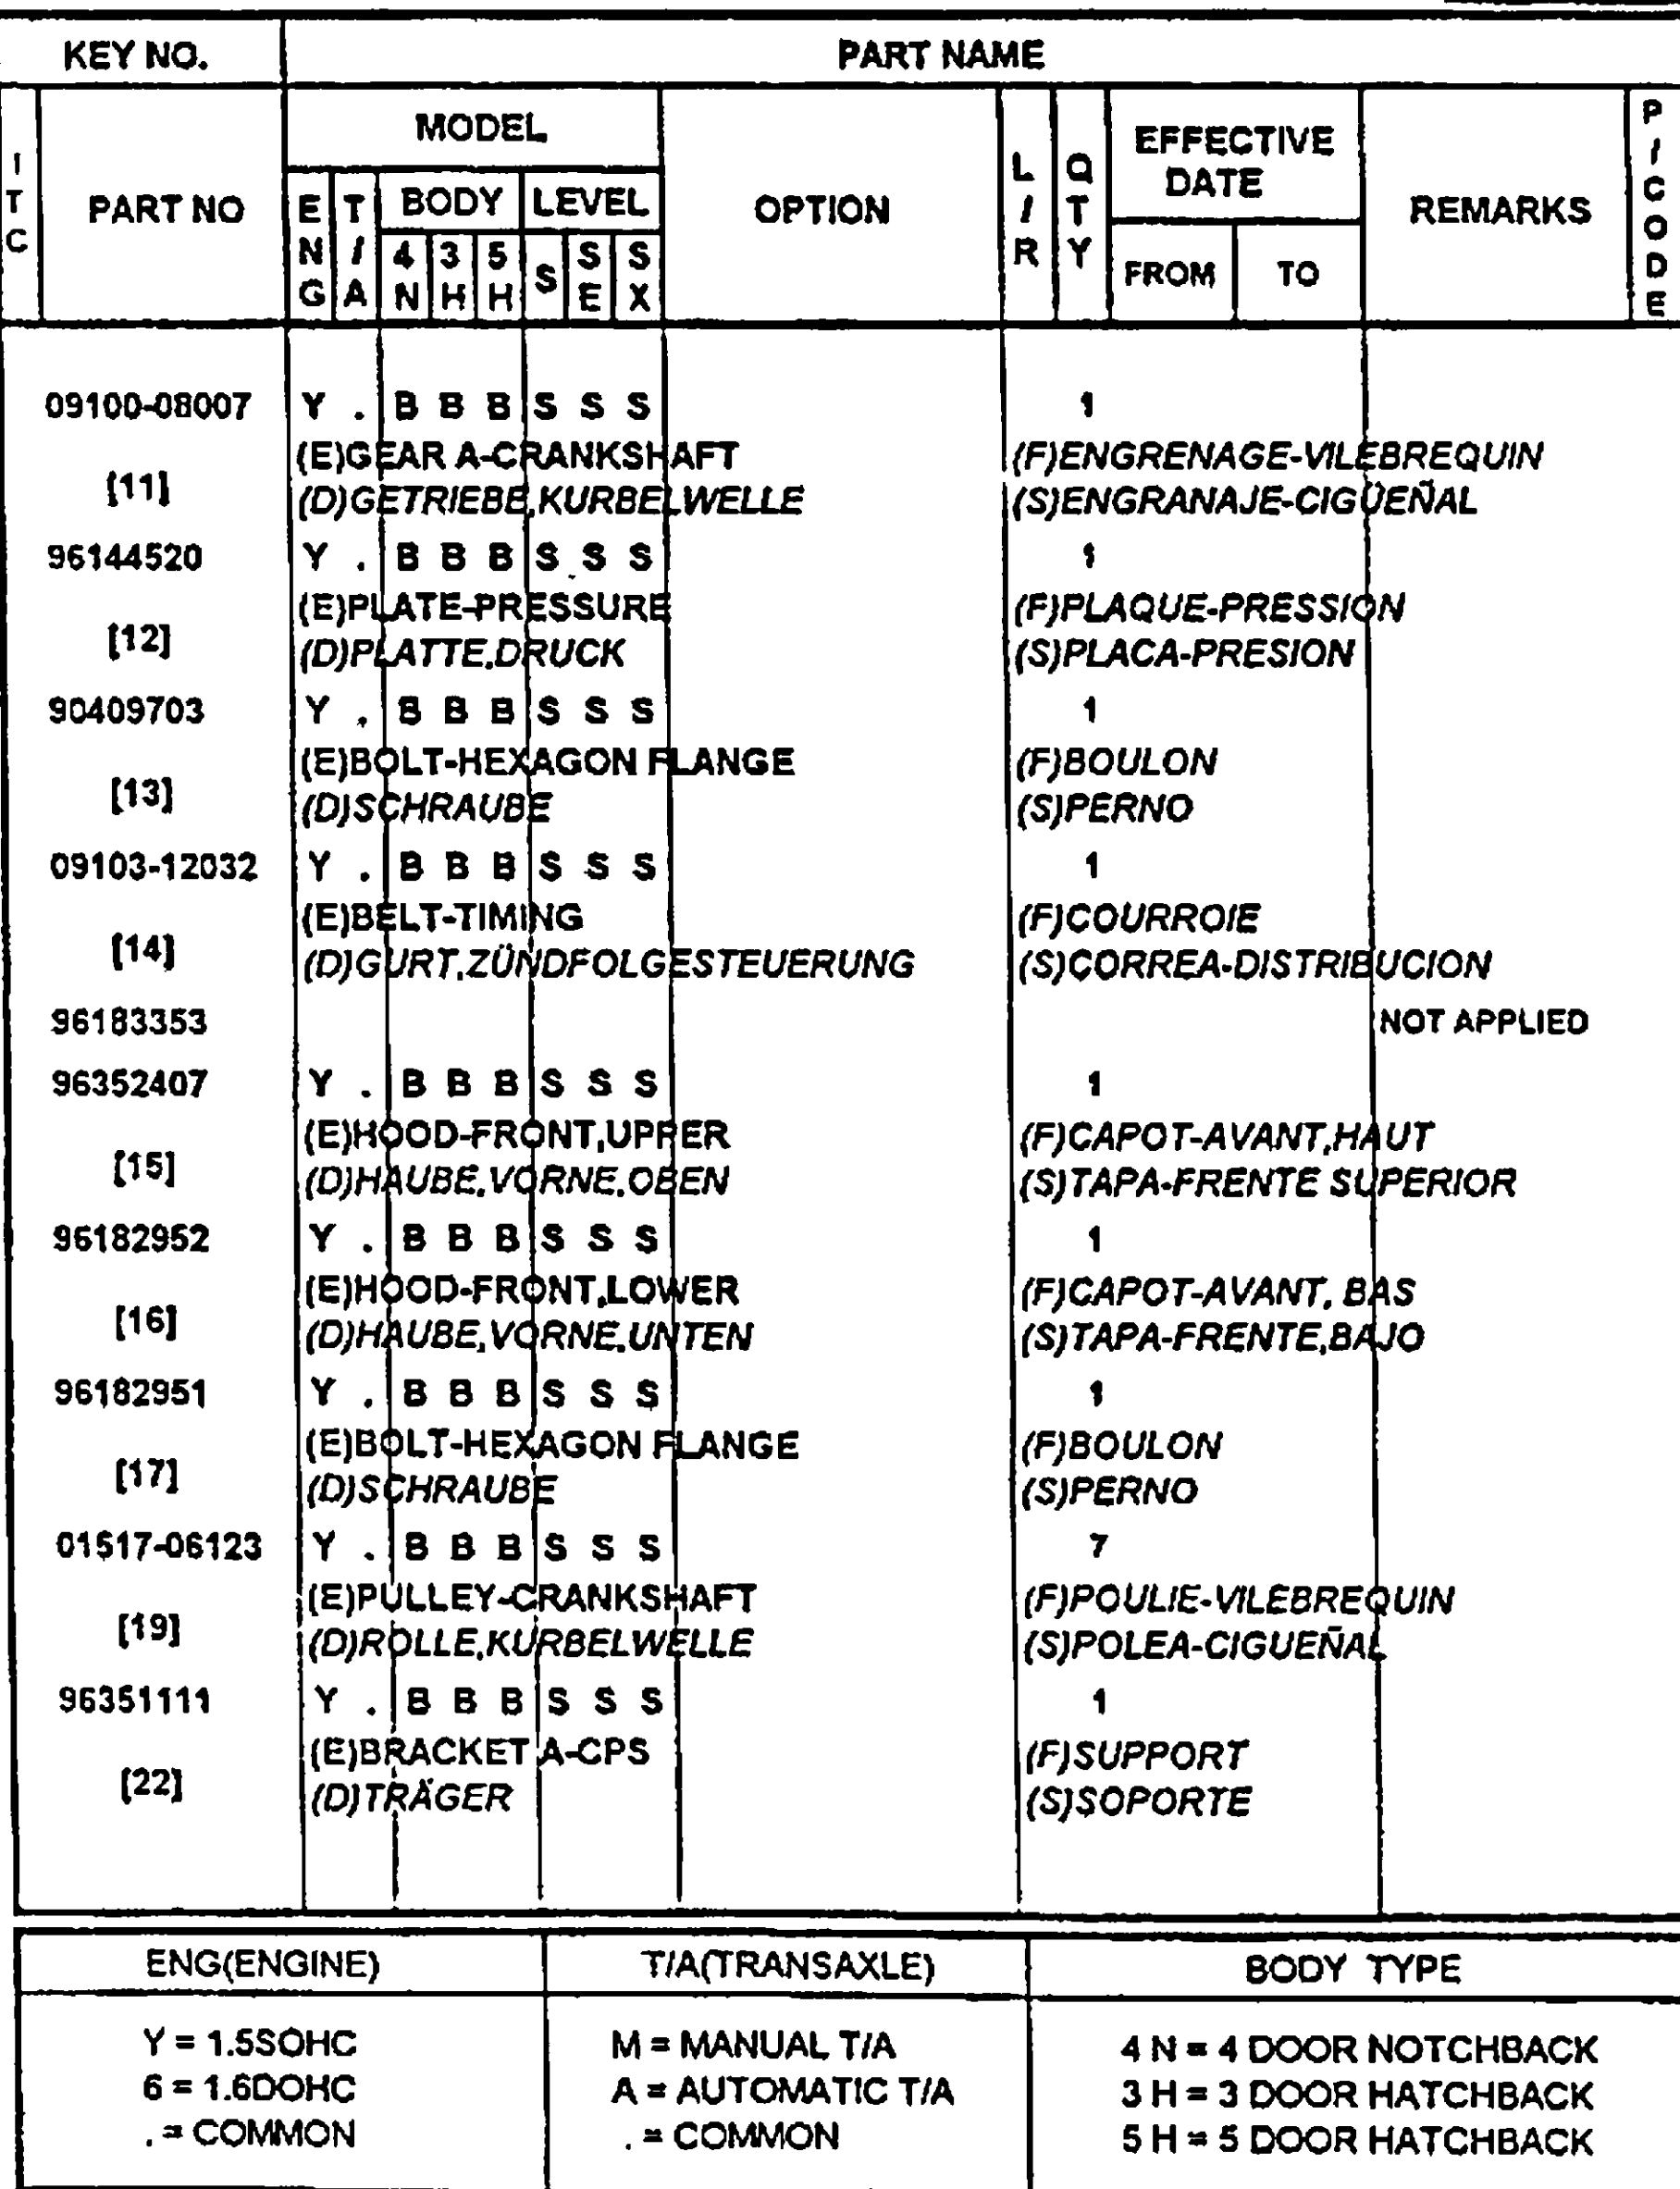


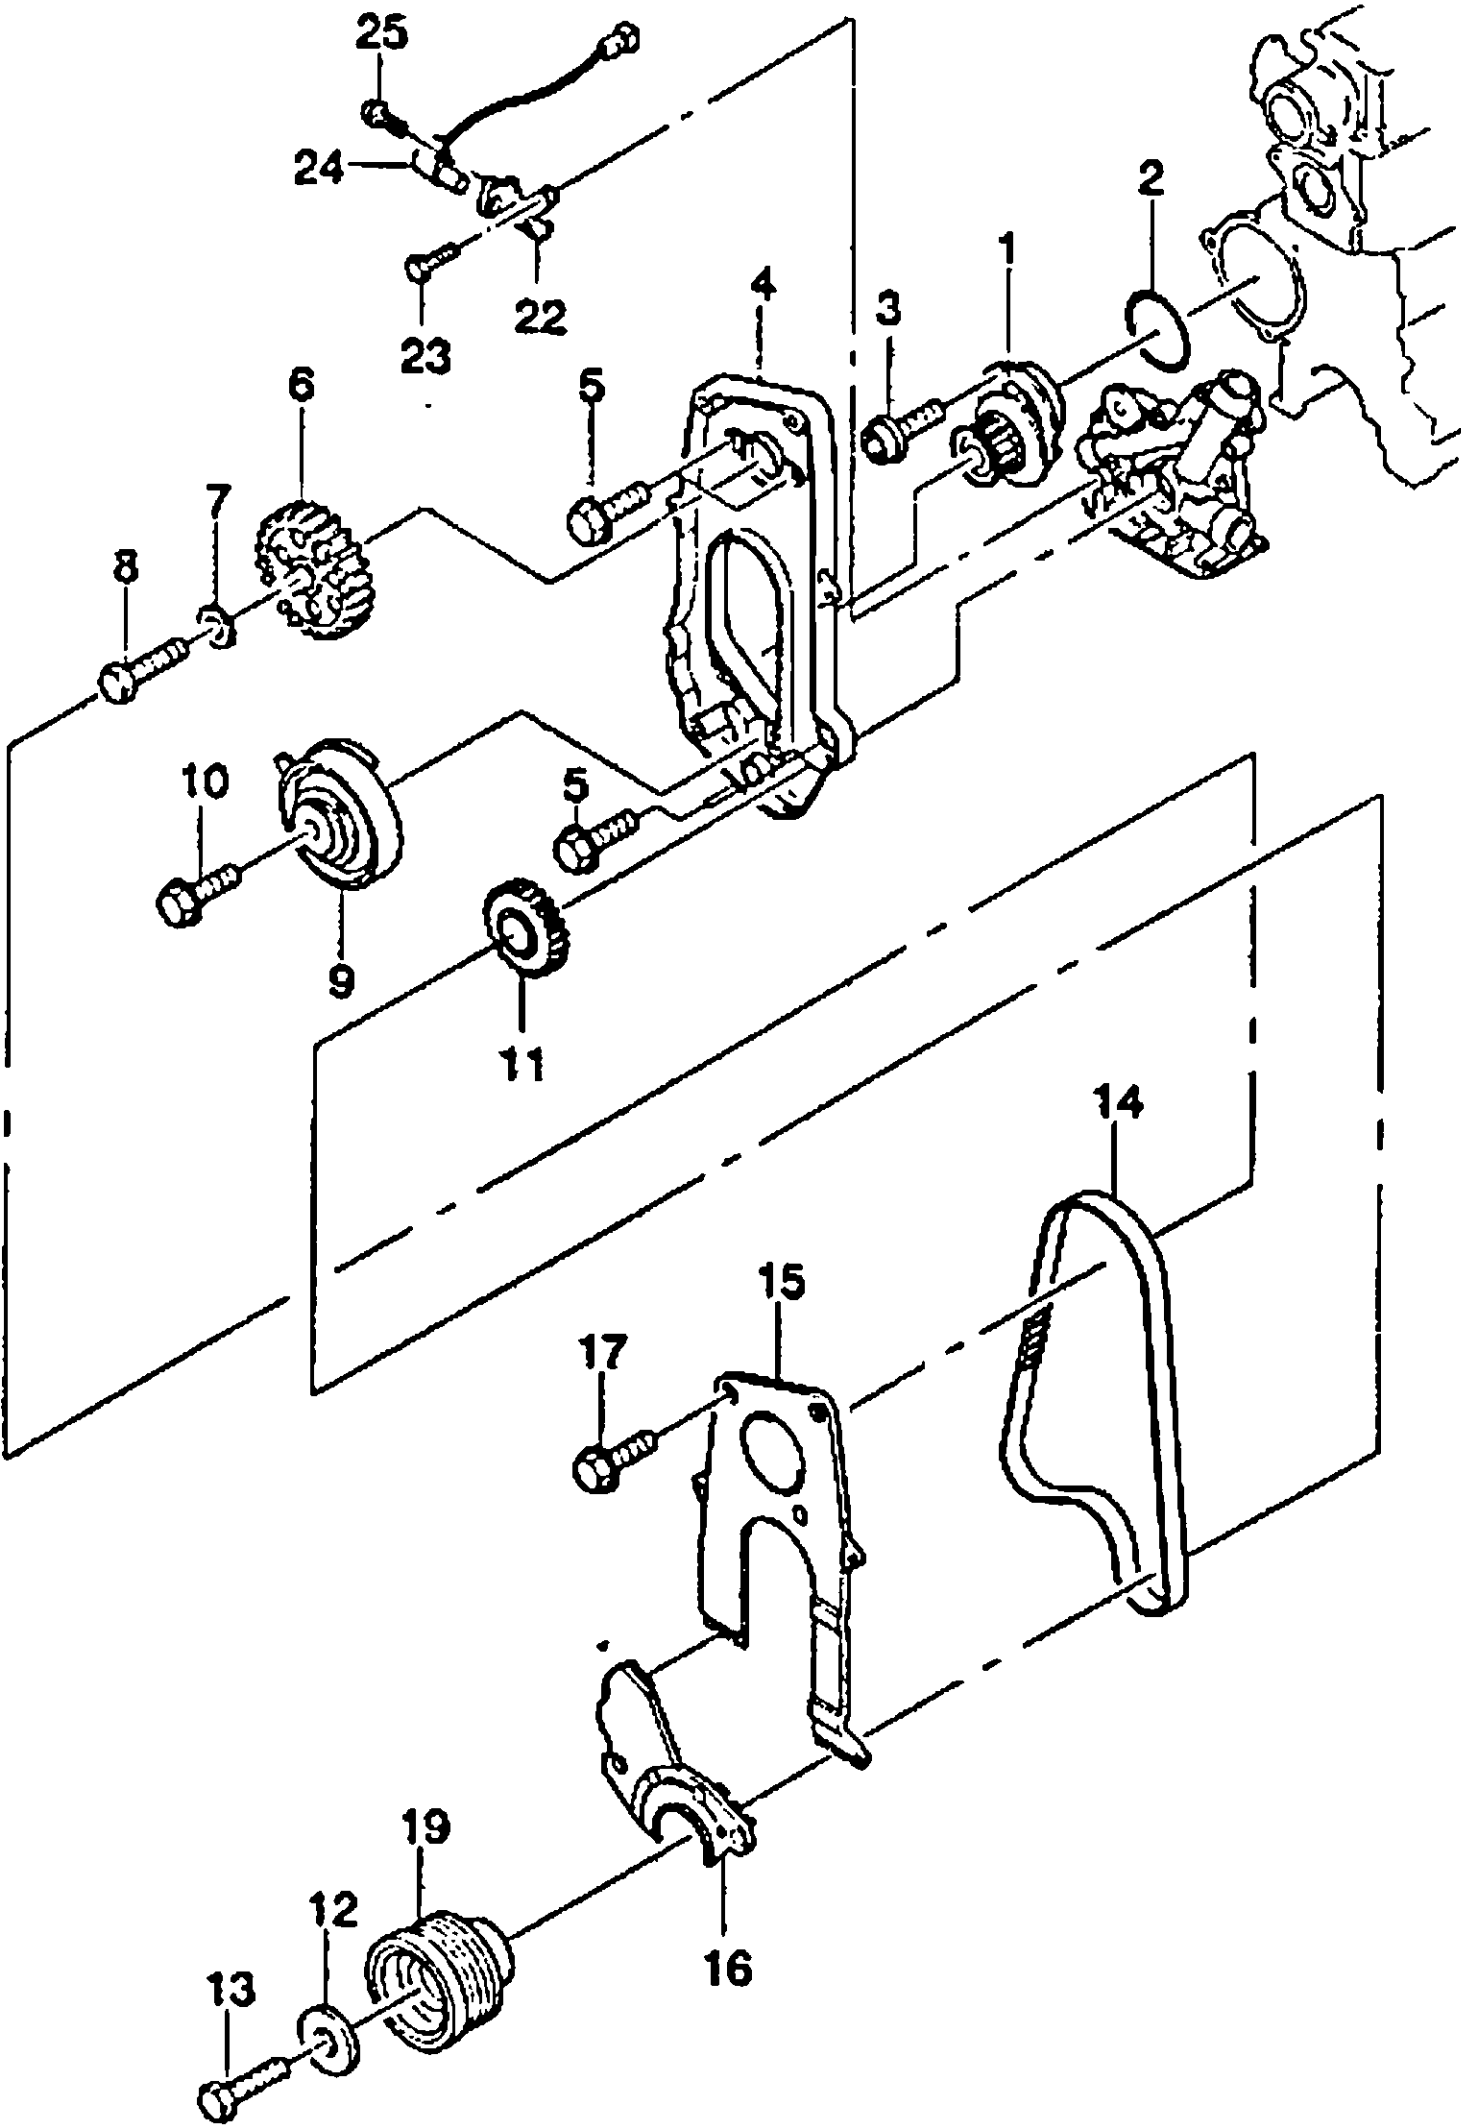

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	96351257	Y	.	B	B	B	S	S	S		1					
	[23]										(F)BOULON					
											(S)PERNO					
	01517-06353	Y	.	B	B	B	S	S	S		1					
	[24]										(F)DETECTEUR					
											(S)SENSOR					
	96183235	Y	.	B	B	B	S	S	S		1					
	[25]										(F)BOULON					
											(S)PERNO					
	07130-06165	Y	.	B	B	B	S	S	S		1					

1331 TIMING COVER(DOHC)

3J07

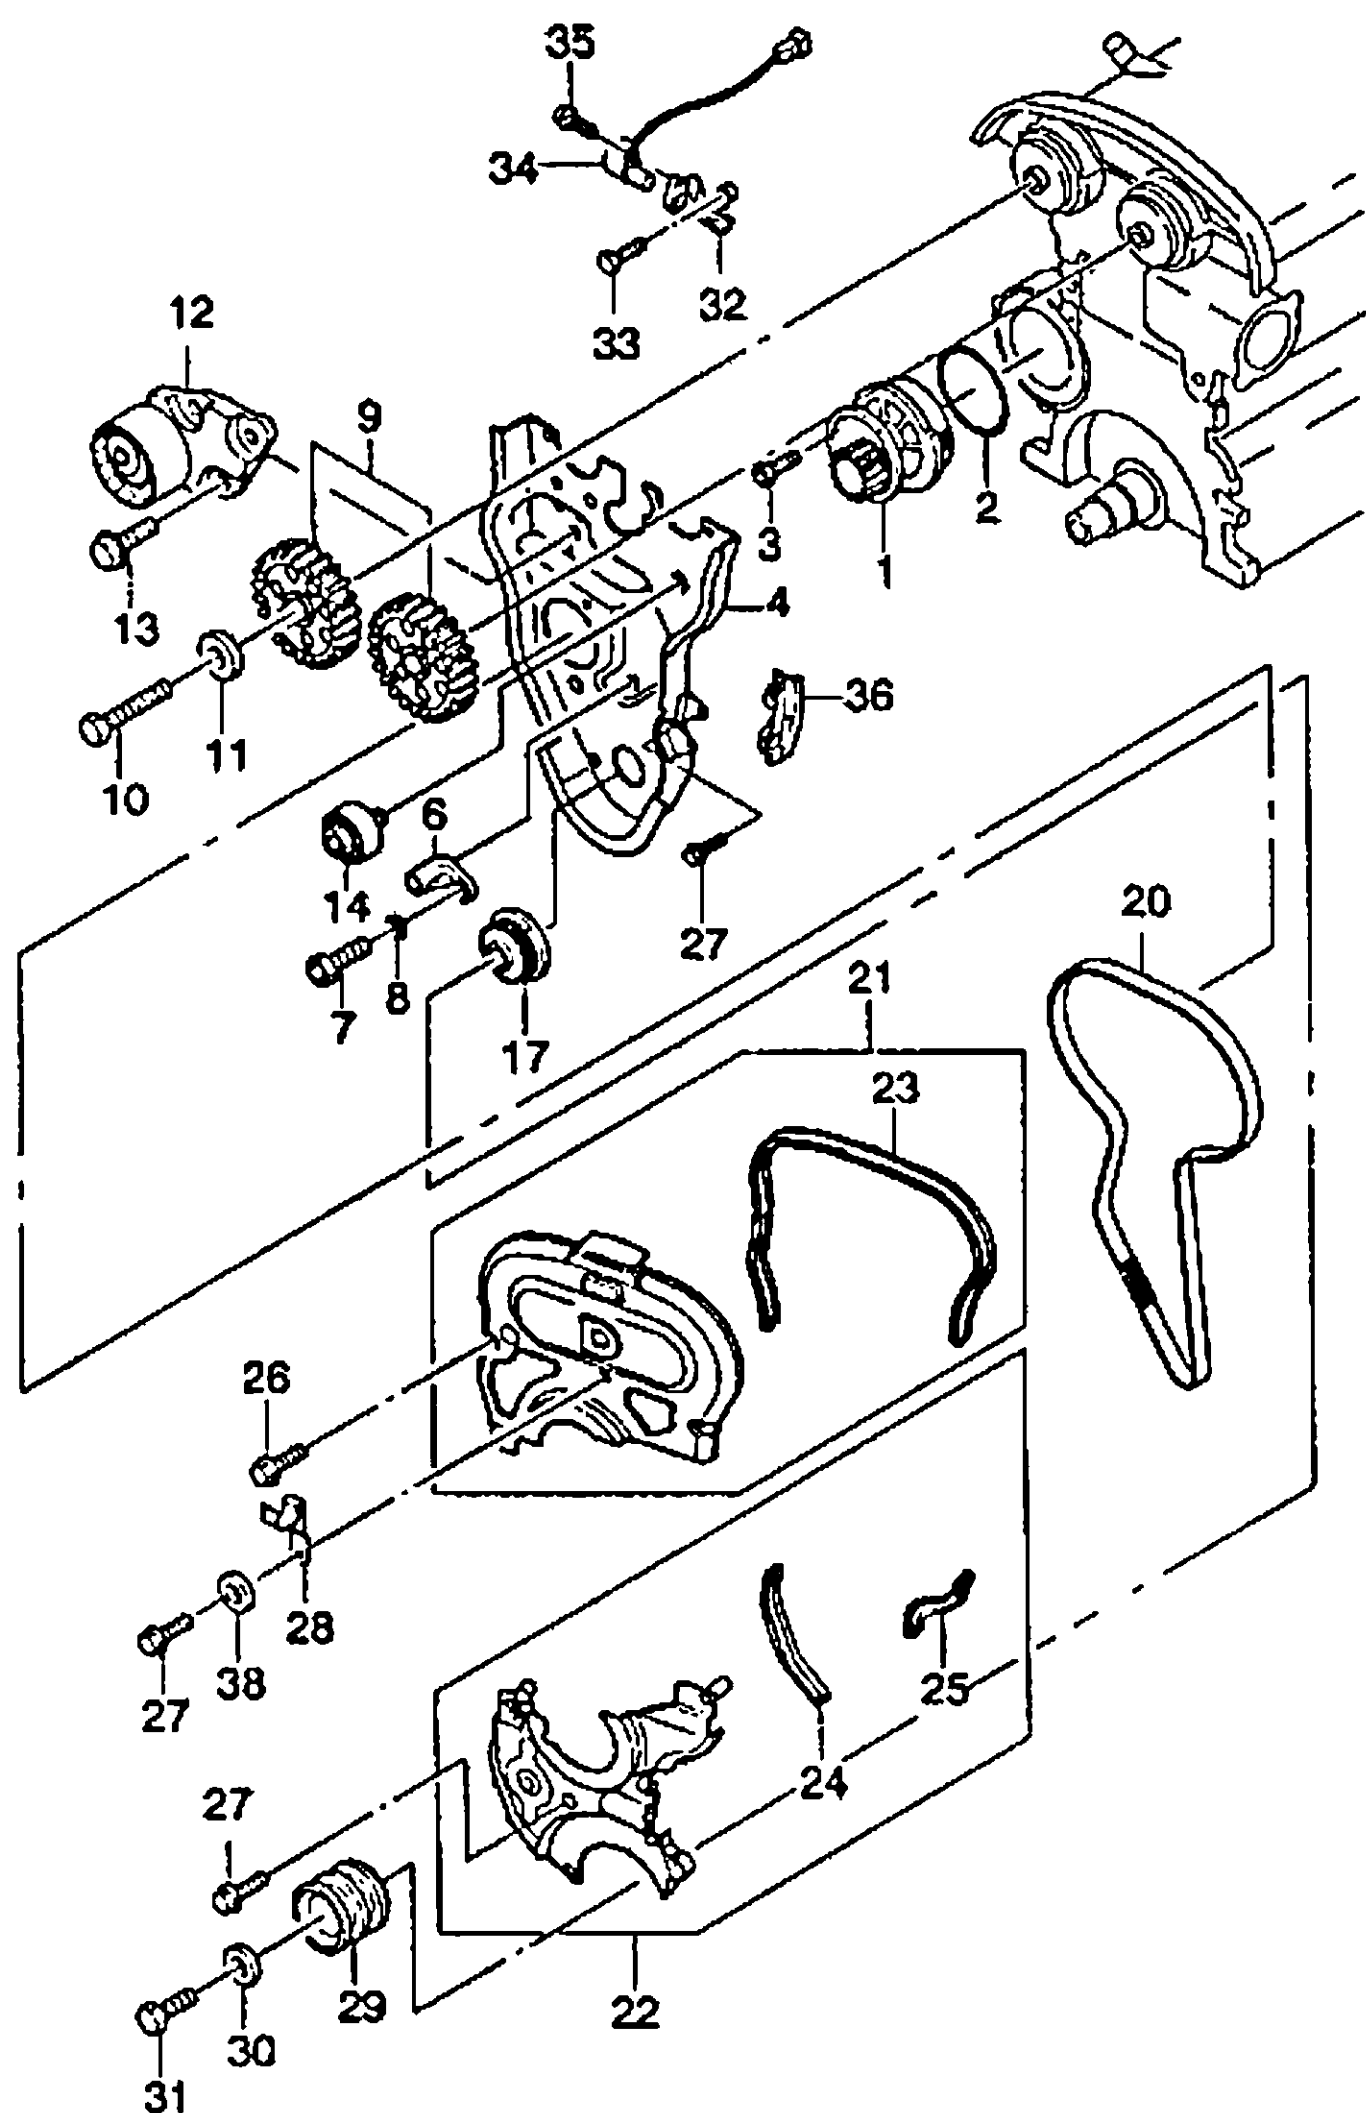


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S E							
	[01]	(E)PUMP A-WATER (D)PUMPE,WASSER									(F)POMPE-EAU (S)BOMBA-AGUA				
	96351284	6 . B B B . . O									1				
	[02]	(E)RING-SEAL (D)RING,DICHTUNG									(F)ANNEAU (S)ANILLO-SELLO				
	90076127	6 . B B B . . O									1				
	[03]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09106-06001	6 . B B B . . O									3				
	[04]	(E)PLATE A-TIMING BELT BACK (D)HINTERE TAFEL									(F)CONTRE-PLAQUE (S)PLACA TRASERA				
	96184800	6 . B B B . . O									1				
	[06]	(E)BRACKET-STEPPED MOUNTING (D)TRÄGER,STUFEN-MONTAGE									(F)SUPPORT-MONTAGE ETAGE (S)SOPORTE				
	96184861	6 . B B B . . O									1				
	[07]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09100-08019	6 . B B B . . O									1				
	[08]	(E)WASHER (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA				
	09160-08011	6 . B B B . . O									1				
	[09]	(E)GEAR-CAMSHAFT (D)GETRIEBE,NOCKENWELLE									(F)ENGRENAGE-ARBRE A CAMES (S)ENGRANAJE-ARBOL DE LEVAS				
	96182888	6 . B B B . . O									1		INTAKE		
	96184322	6 . B B B . . O									1		EXHAUST		
	[10]	(E)BOLT-CAMSHAFT GEAR (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09100-10018	6 . B B B . . O									2				

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

1331 TIMING COVER(DOHC)

3K07

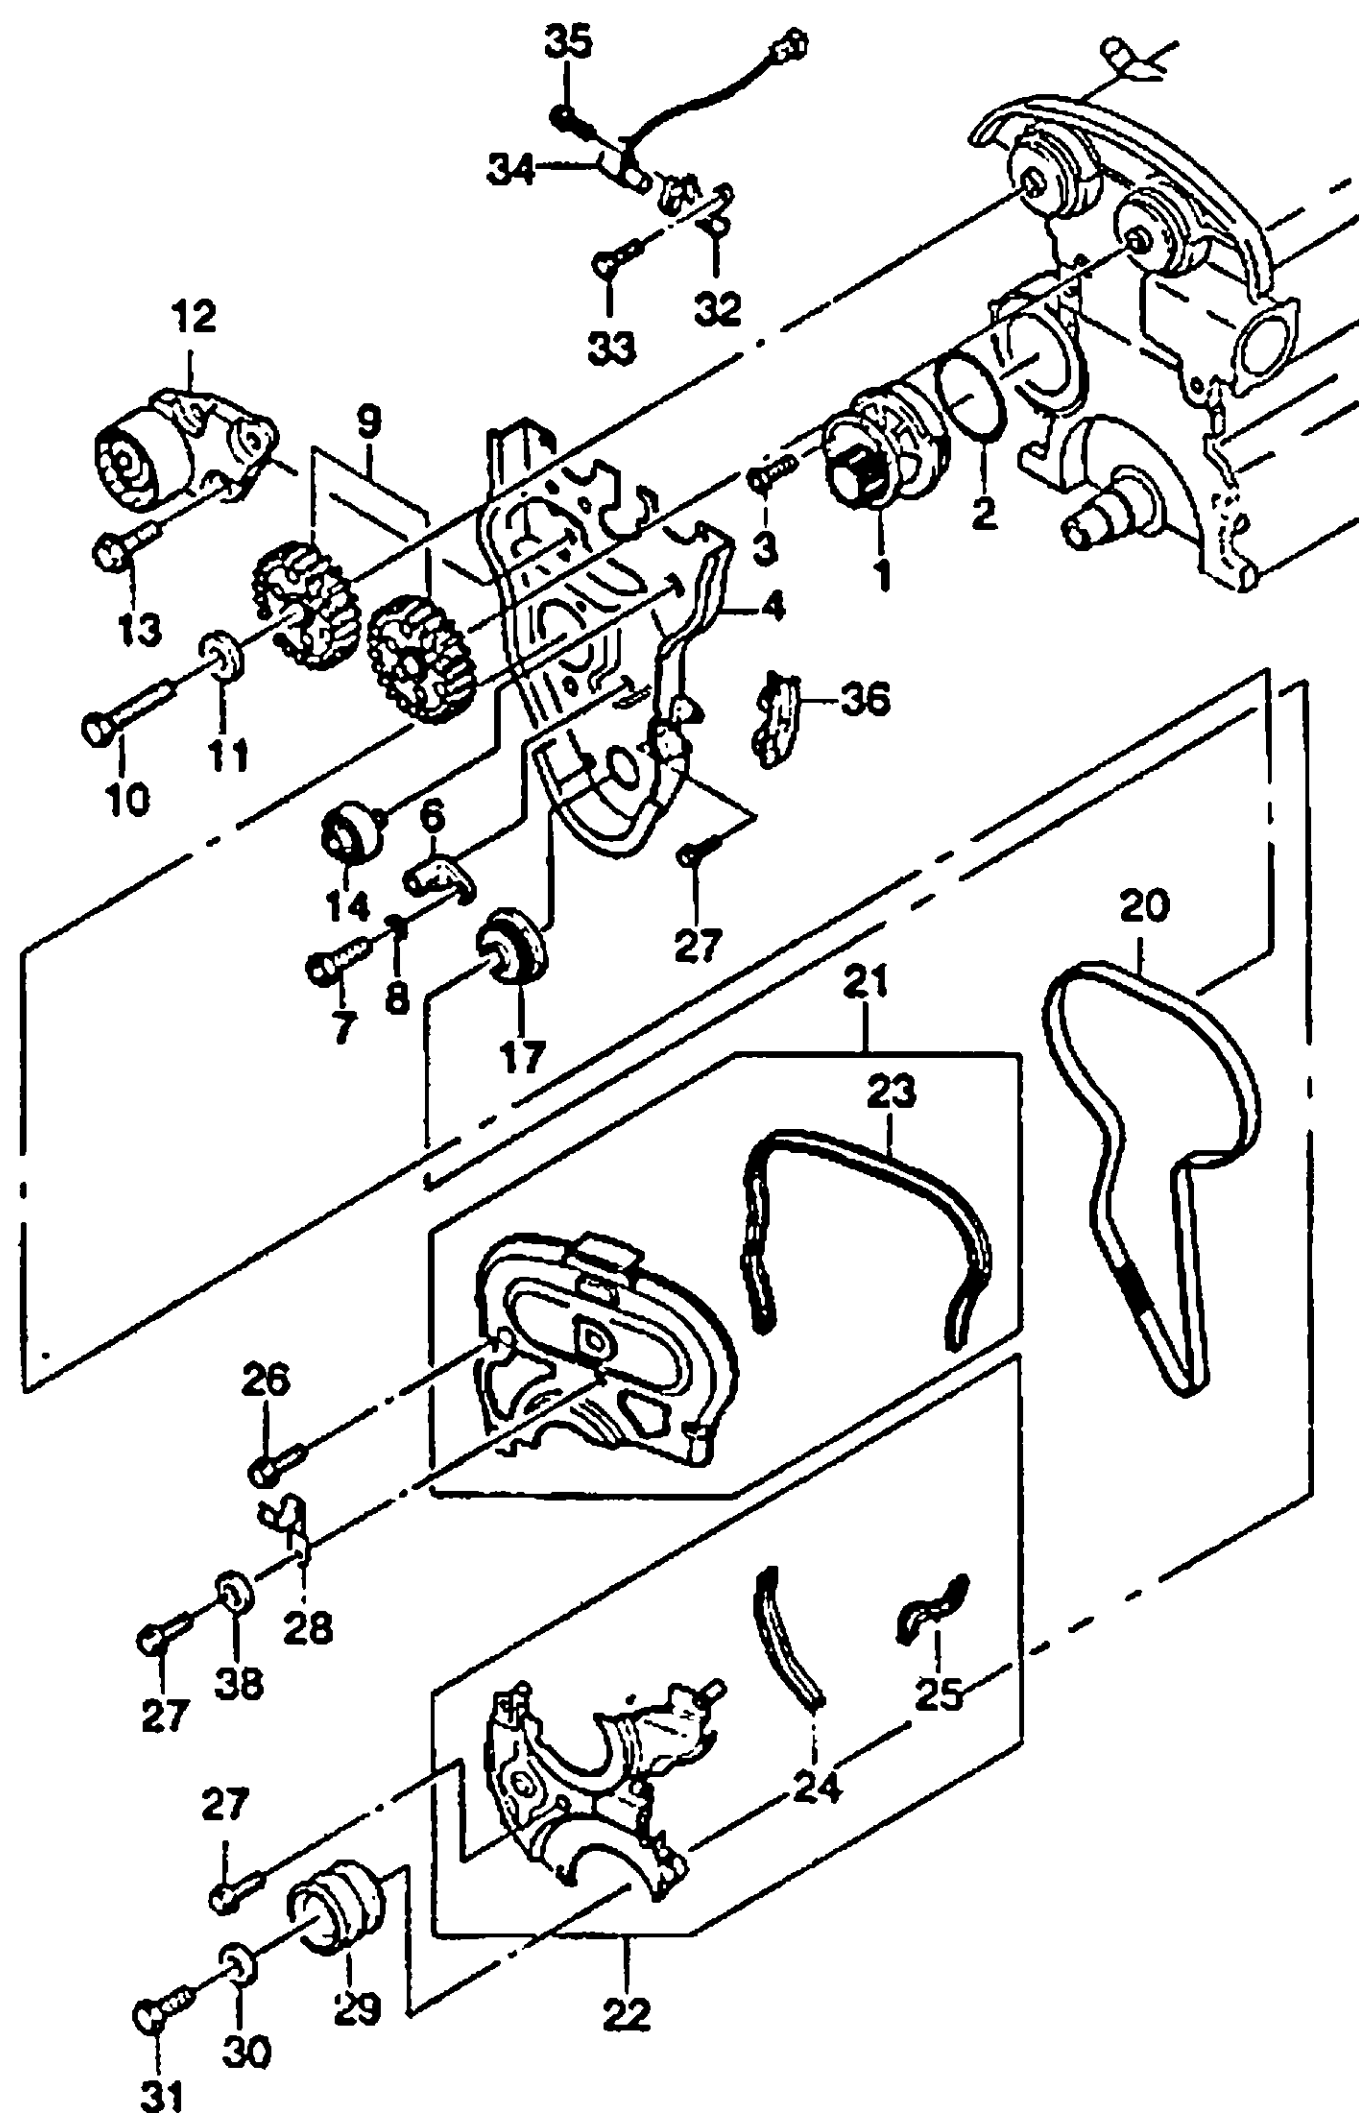

KEY NO.		PART NAME															
I T C	PART NO	MODEL									OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL			FROM				TO			
				4 N	3 H	5 H	S S	S S	X								
	[11] 5094008002	(E)WASHER-CAMSHAFT GEAR (D)DICHTUNGSRING	6	.	B	B	B	.	.	O		(F)RONDELLE (S)ARANDELA	2				
	[12] 96350550	(E)TENSIONER A-TIMING BELT (D)SPANNUNG	6	.	B	B	B	.	.	O		(F)TENDEUR (S)TENSOR	1				
	[13] 09117-0B010	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE	6	.	B	B	B	.	.	O		(F)BOULON (S)PERNO	3				
	[14] 96350526	(E)PULLEY-IDLER (D)ROLLE,LEERLAUF	6	.	B	B	B	.	.	O		(F)POULIE-LIBRE (S)POLEA-OCIOSA	1				
	[17] 96143232	(E)GEAR A-CRANKSHAFT (D)GETRIEBE,KURBELWELLE	6	.	B	B	B	.	.	O		(F)ENGRENAGE-VILEBREQUIN (S)ENGRANAJE-CIGÜENAL	1				
	[20] 96183352	(E)BELT-TIMING (D)GURT,ZÜNDFOLGESTEUERUNG	6	.	B	B	B	.	.	O		(F)COURROIE (S)CORREA-DISTRIBUCION	1				
	[21] 96351626	(E)COVER A-TIMING BELT,UPPER (D)DECKEL,ZÜNDFOLGE-GURT	6	.	B	B	B	.	.	O		(F)CARTER (S)CUBIERTA-CORREA DISTRIBUC	1				
	[22] 96351627	(E)COVER A-TIMING BELT,LOWER (D)DECKEL,ZÜNDFOLGE-GURT	6	.	B	B	B	.	.	O		(F)CARTER (S)CUBIERTA-CORREA DISTRIBUC	1				
	[23] 96351628	(E)SEAL-TIMING COVER,UPPER (D)DICHTUNG,VORDER-DECKEL	6	.	B	B	B	.	.	O		(F)JOINT-CARTER AVANT (S)SELLO-CUBIERTA DEL FRENTE	1				
	[24]	(E)SEAL-TIMING COVER,LOWER (D)DICHTUNG,VORDER-DECKEL	6	.	B	B	B	.	.	O		(F)JOINT-CARTER AVANT (S)SELLO-CUBIERTA DEL FRENTE	1				
ENG(ENGINE)			T/A(TRANSAXLE)									BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON									4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					


This technical diagram illustrates the exploded view of a mechanical assembly, likely a pump or engine component. The parts are numbered 1 through 38. The assembly is shown in a perspective view, with dashed lines indicating the alignment and fit of the components. The main body (1) is a cast part with various ports and mounting points. It is surrounded by a housing (20) and a cover (21). The cover is secured by a bolt (22) and a nut (23). The housing is secured by a bolt (24) and a nut (25). The assembly also includes a shaft (26) with a pulley (27) and a gear (28). The gear is mounted on a shaft (29) with a pulley (30) and a nut (31). The assembly is also shown with a bracket (32) and a bolt (33). The diagram is a black and white line drawing with clear labels for each part.

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S E	X
	96351629	6	.	B	B	B	.	.	O		1					
	[25]	(E)SEAL-TIMING COVER,LOWER (D)DICHTUNG,VORDER-DECKEL											(F)JOINT-CARTER AVANT (S)SELLO-CUBIERTA DEL FRENTE			
	96351630	6	.	B	B	B	.	.	O		1					
	[26]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE											(F)BOULON (S)PERNO			
	01517-06453	6	.	B	B	B	.	.	O		3					
	[27]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE											(F)BOULON (S)PERNO			
	01517-06103	6	.	B	B	B	.	.	O		6					
	[28]	(E)BRACKET-HOSE (D)TRÄGER,SCHLAUCH											(F)SUPPORT-TUYAU (S)SOPORTE-MANGUERA			
	96180354	6	.	B	B	B	.	.	O		1					
	[29]	(E)PULLEY-CRANKSHAFT (D)ROLLE,KURBELWELLE											(F)POULIE-VILEBREQUIN (S)POLEA-CIGUEÑAL			
	96351111	6	.	B	B	B	.	.	O		1					
	[30]	(E)PLATE-PRESSURE (D)PLATTE,DRUCK											(F)PLAQUE-PRESSION (S)PLACA-PRESION			
	90409703	6	.	B	B	B	.	.	O		1					
	[31]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE											(F)BOULON (S)PERNO			
	09103-12031	6	.	B	B	B	.	.	O		1		970804			
	09103-12045	6	.	B	B	B	.	.	O		1		970804			
	[32]	(E)BRACKET A-CPS (D)TRÄGER											(F)SUPPORT (S)SOPORTE			
	96351255	6	.	B	B	B	.	.	O		1					
	[33]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE											(F)BOULON (S)PERNO			


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

1331 TIMING COVER(DOHC)


3M07

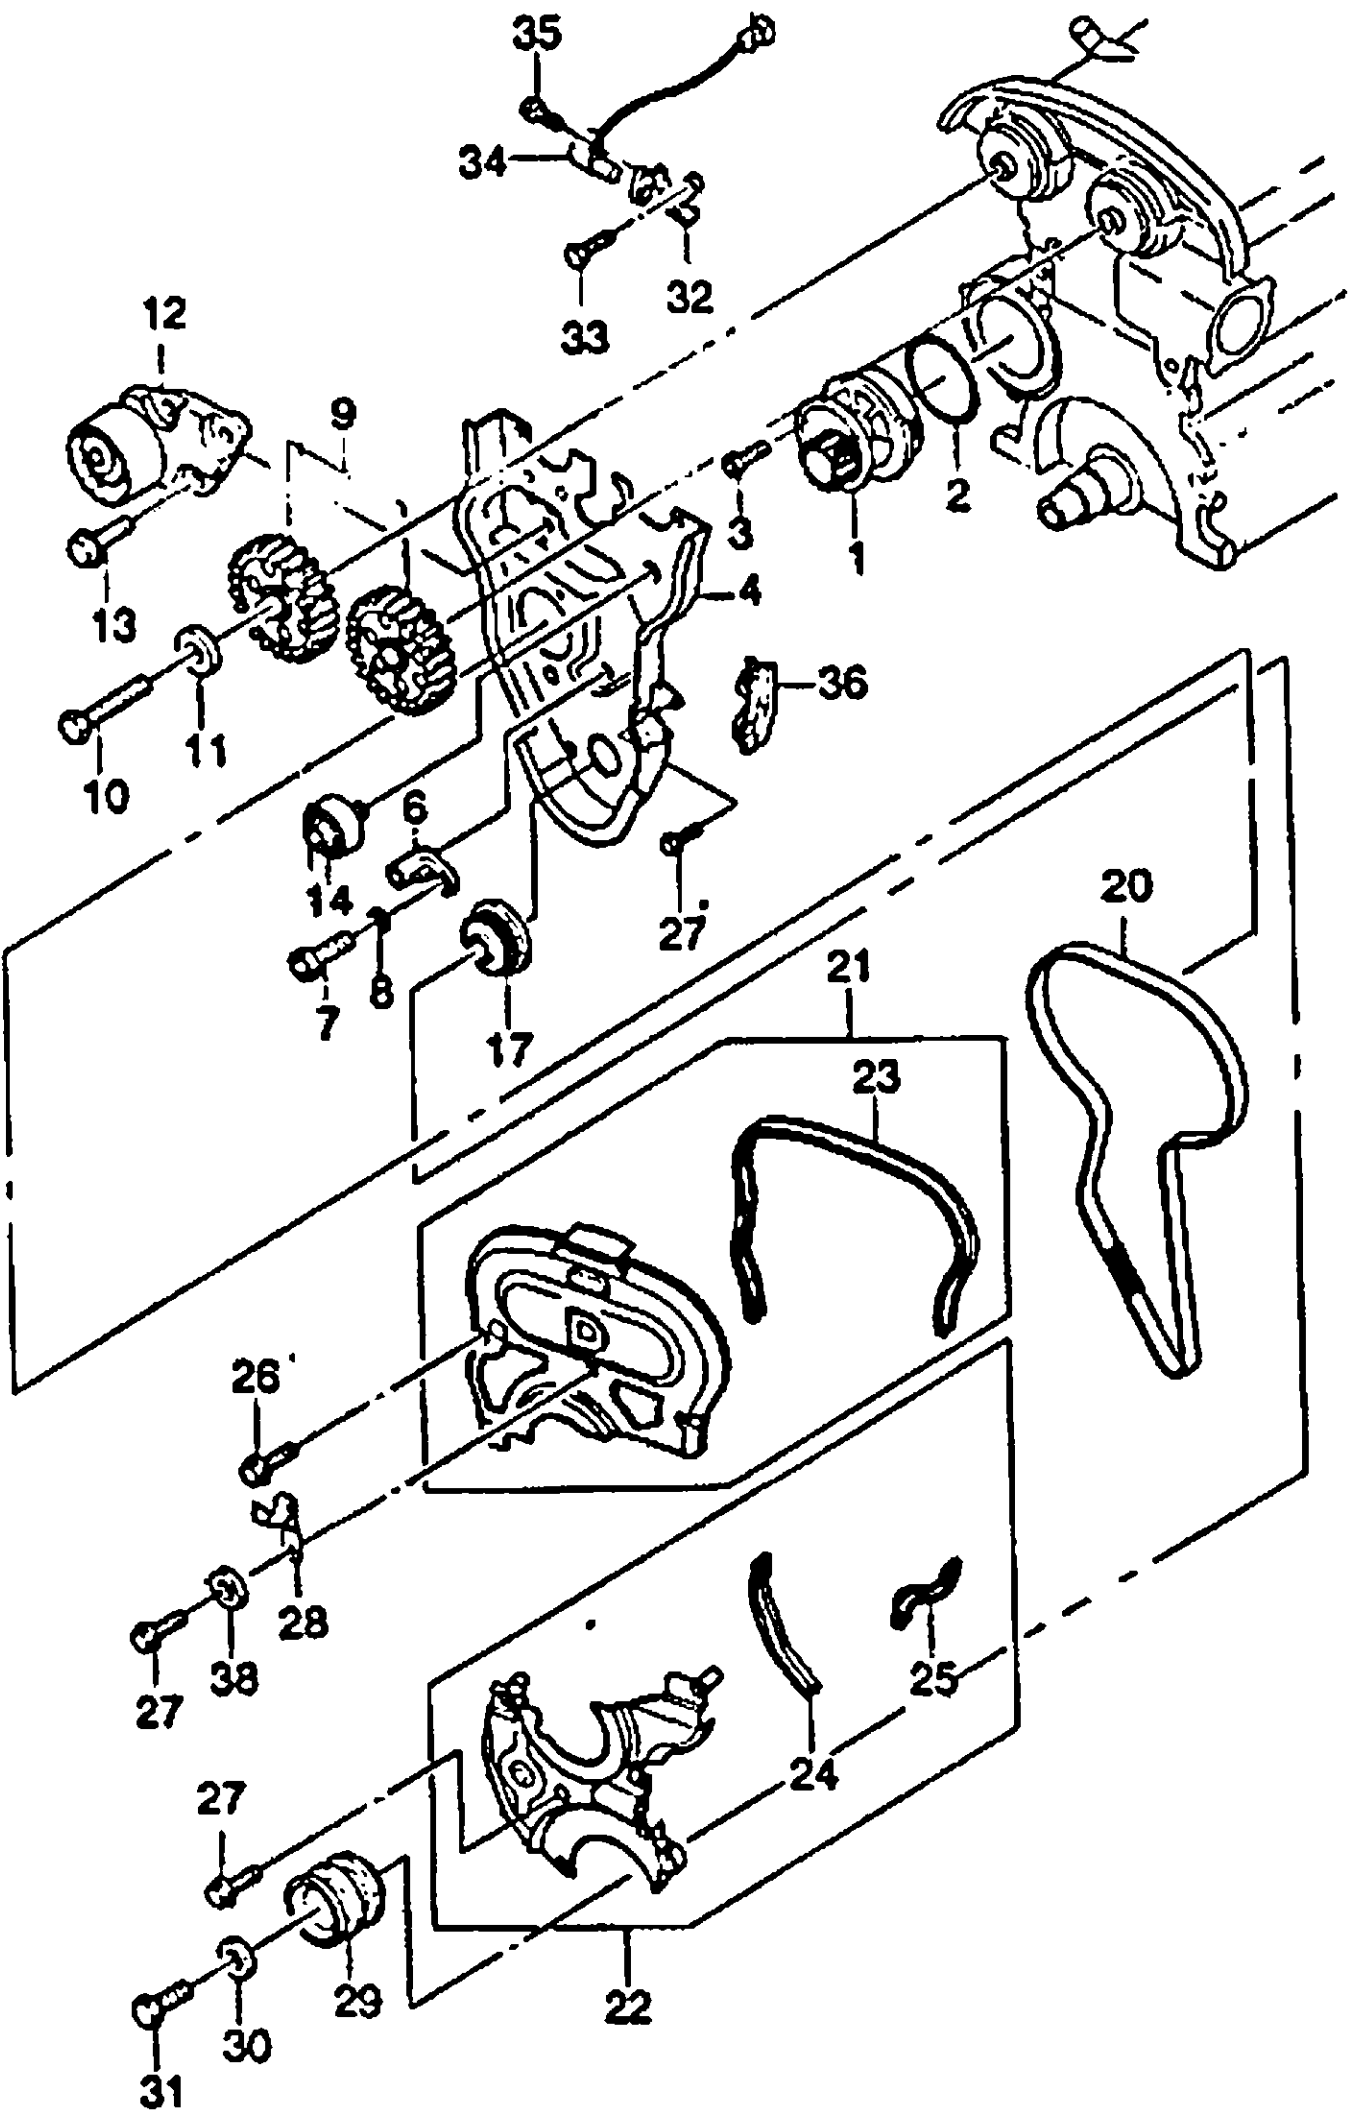


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N H	3 H	5 H								
	01517-06353 [34]	6	.	B	B	B	.	.	O	(E)SENSOR-CR/SHAFT POSITION (D)SENSOR	1 (F)DETECTEUR (S)SENSOR			
	96183235 [35]	6	.	B	B	B	.	.	O	(E)BOLT-HEXAGON SOCKET TYPE (D)SCHRAUBE	1 (F)BOULON (S)PERNO			
	07130-06165 [36]	6	.	B	B	B	.	.	O	(E)SEAL (D)DICHTUNG	1 (F)JOINT (S)SELLO			
	96350088 [38]	6	.	B	B	B	.	.	O	(E)WASHER (D)DICHTUNGSRING	1 (F)RONDELLE (S)ARANDELA			
	9091607060	6	.	B	B	B	.	.	O		2			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

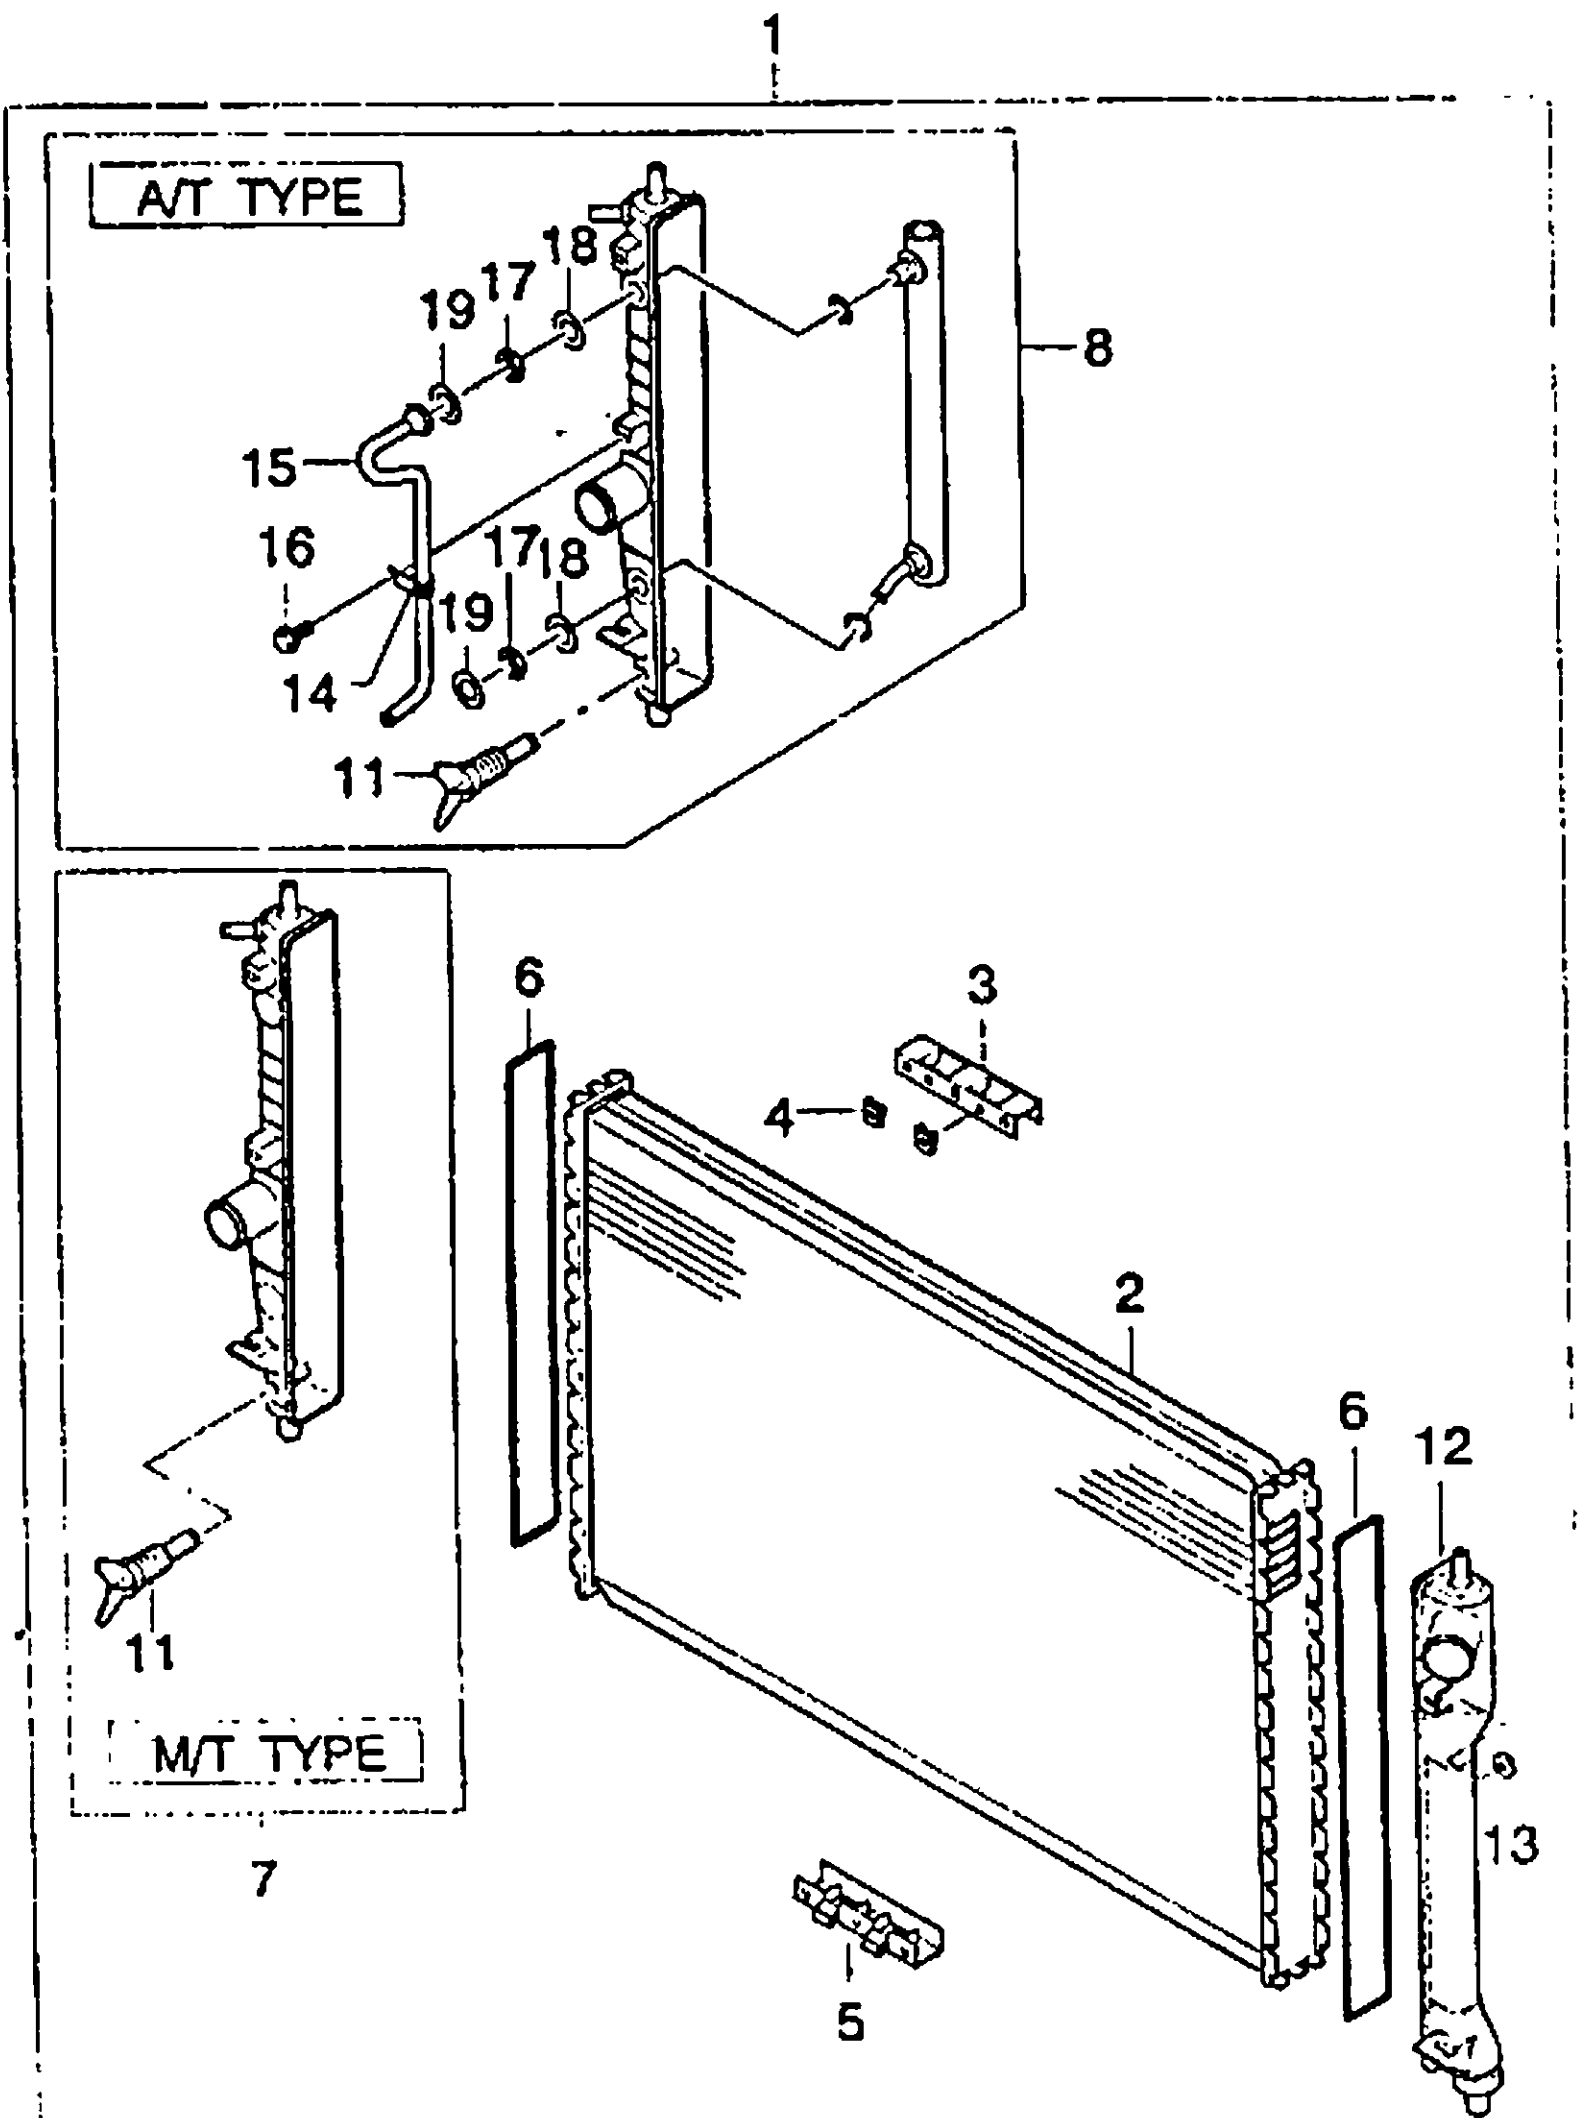


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)RADIATOR A (D)KÜHLER								(F)RADIATEUR (S)RADIADOR						
	96351263	. M	B	B	B	S	S	S	&C46	1				RF		
	96182261	. M	B	B	B	O	O	O	&C59/C60	1				RB		
	96182281												NOT APPLIED			
	96351262	. A	B	B	B	O	O	O	&C46	1				RE		
	96182260	. A	B	B	B	O	O	O	&C59/C60	1				RA		
	96182280												NOT APPLIED			
	[02]	(E)CORE (D)GEHÄUSE KÜHLER								(F)NOYAU-RADIATEUR (S)NUCLEO-RADIADOR						
	620730	. .	B	B	B	S	S	S	&C46	1			500X382.4X16			
	620741	. .	B	B	B	O	O	O	&C59/C60	1			635X382.4X16			
	620742												NOT APPLIED			
	[03]	(E)BRACKET-SHROUD MOUNT,UPPER (D)TRÄGER,HÜLLE-MONTAGE,OBEN								(F)SUPPORT (S)SOPORTE-MONTAJE DE TAPADO						
	620580	. .	B	B	B	S	S	S		1						
	[04]	(E)CLIP-SHROUD MOUNT (D)KLEMME								(F)ATTACHE (S)GRAPA						
	620579	. .	B	B	B	S	S	S		1						
	[05]	(E)BRACKET-SHROUD MOUNT,LOWER (D)TRÄGER,HÜLLE-MONTAGE								(F)SUPPORT (S)SOPORTE-MONTAJE DE TAPADO						
	620581	. .	B	B	B	S	S	S		1						
	[06]	(E)SEAL-GASKET (D)DICHTUNG								(F)JOINT (S)SELLO						
	620586	. .	B	B	B	S	S	S		2						
	[07]	(E)TANK A-OUTLET (D)GEHÄUSE AUSFUHR TANK								(F)ENVELOPPE (S)CAPARAZON-TANQUE						
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

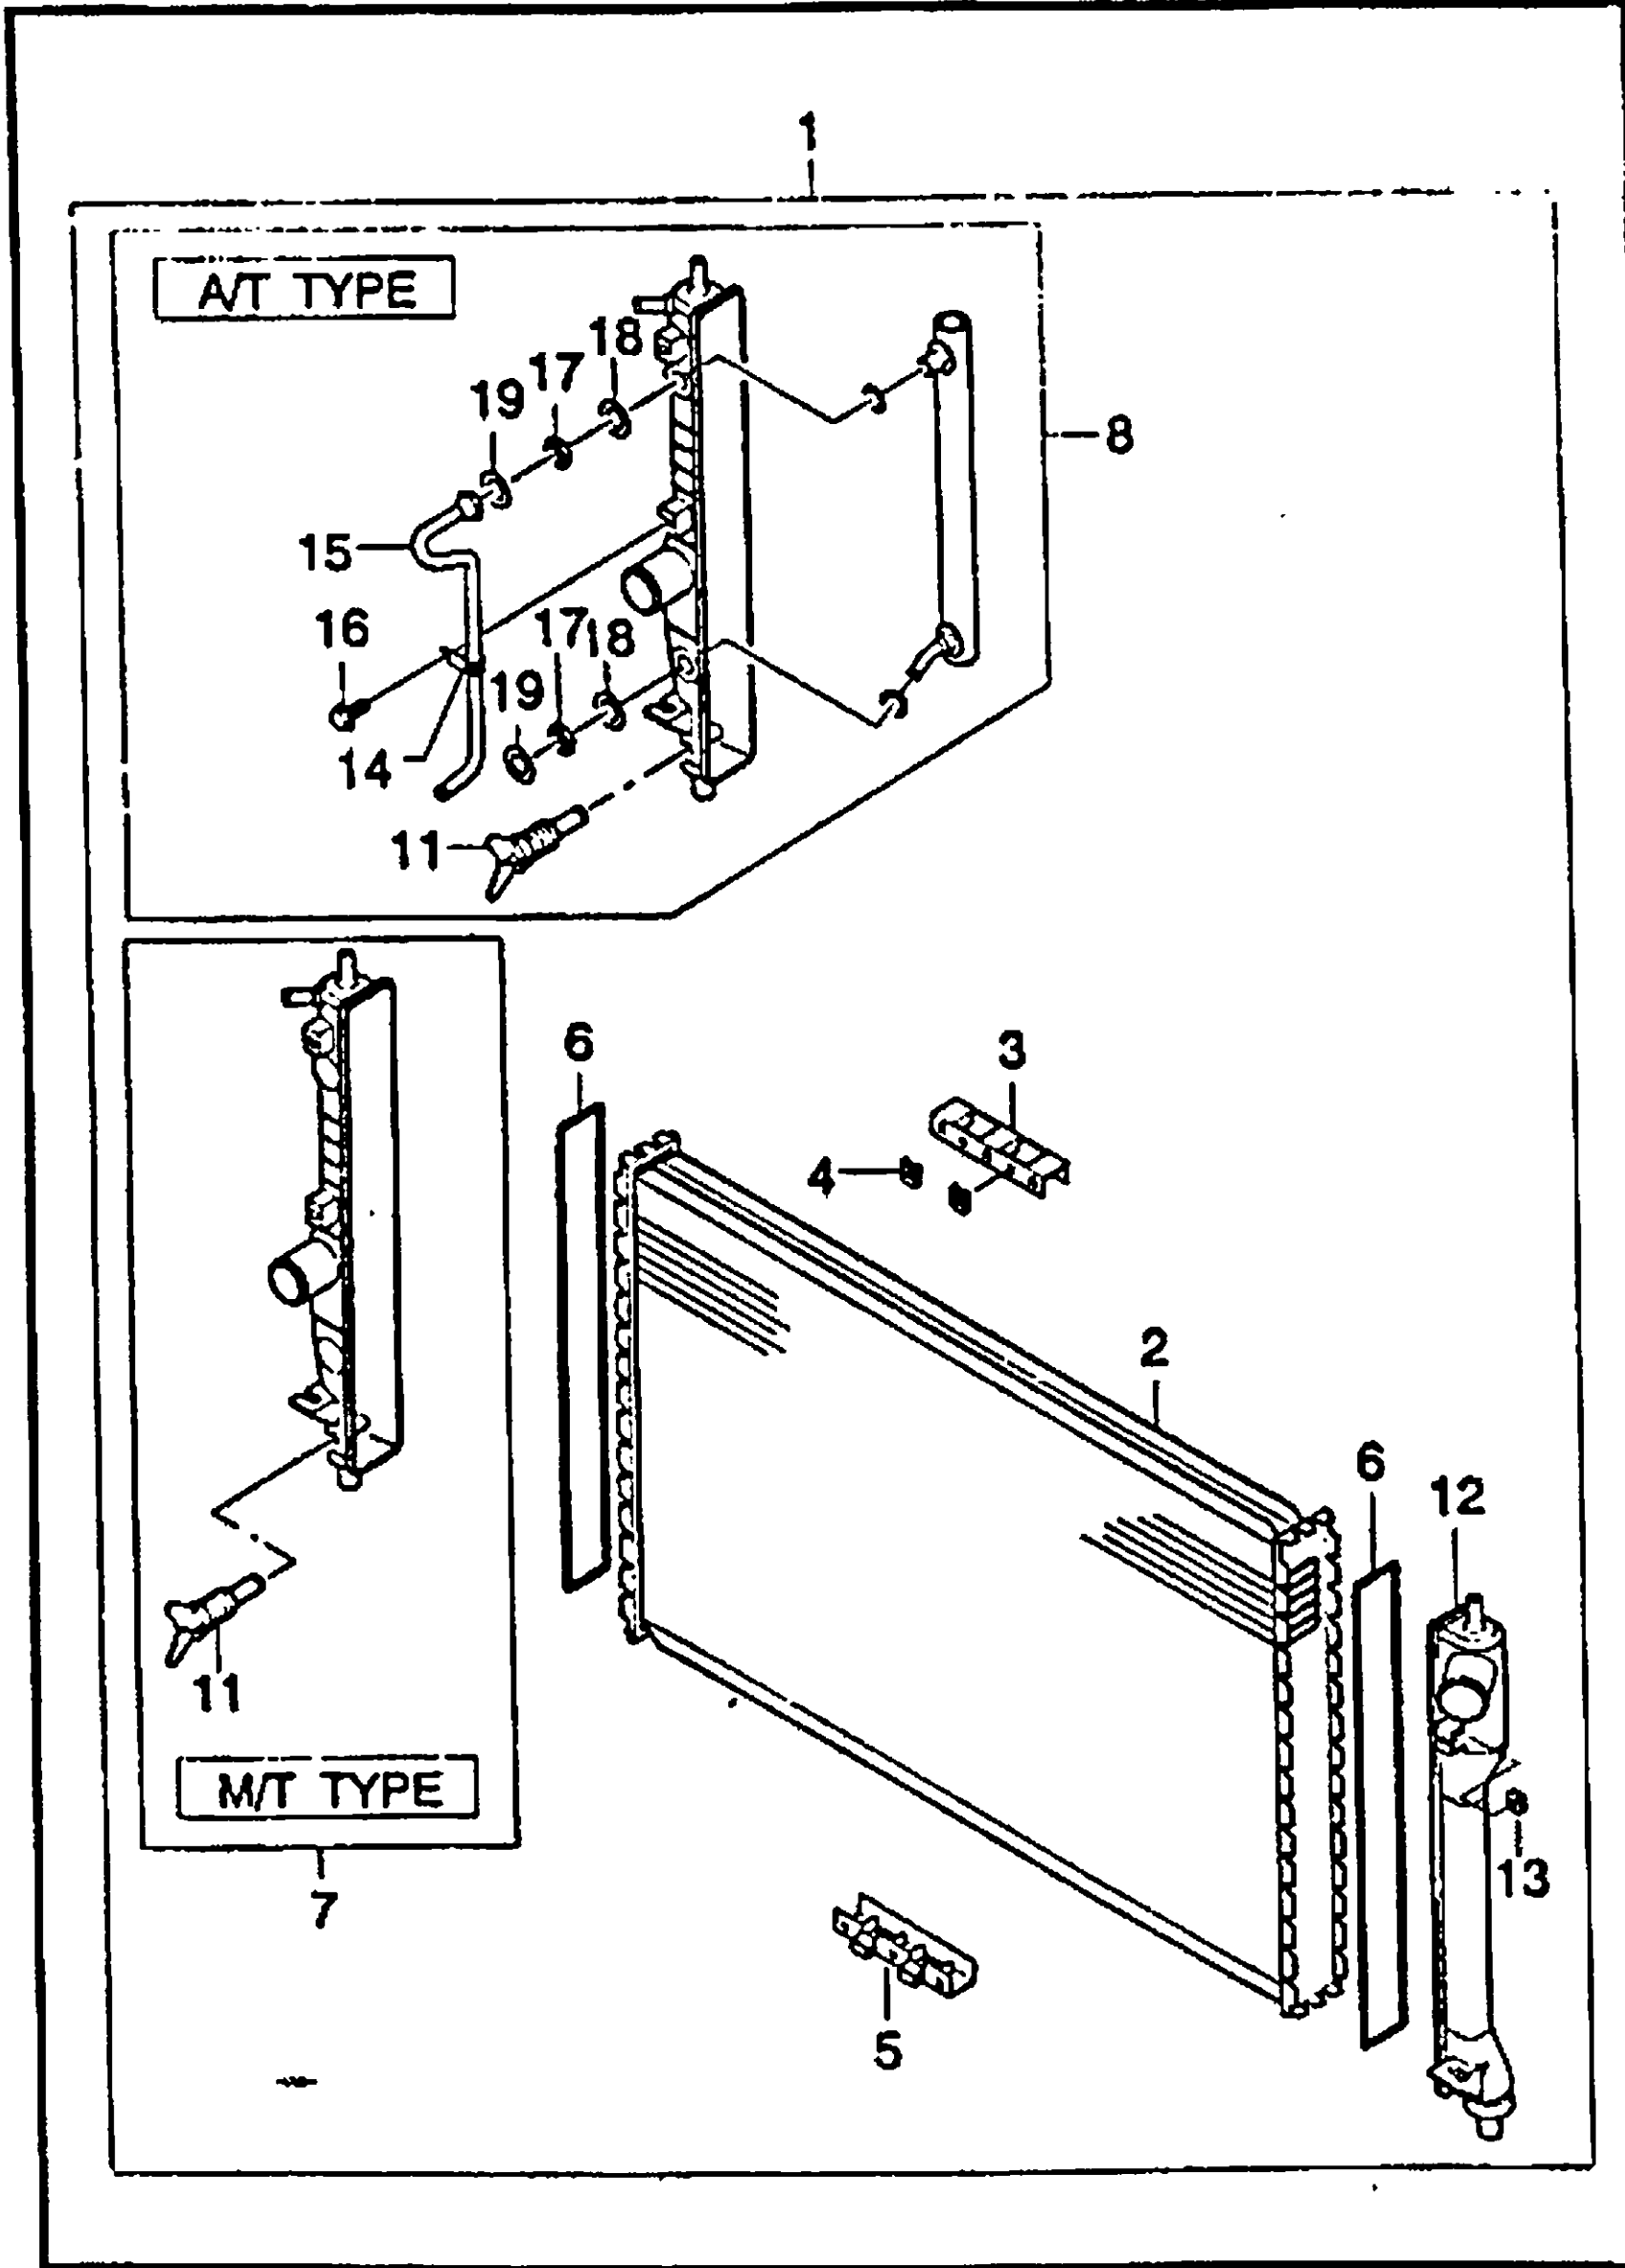

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	620834	.	M	B	B	B	S	S	S		1		(F)ENVELOPPE (S)CAPARAZON-TANQUE		
	[08]														
	620832	.	A	B	B	B	O	O	O		1		(F)ROBINET-VIDANGE (S)GRIFO-DRENAJE		
	[11]														
	620728	.	.	B	B	B	S	S	S		2		(F)ENVELOPPE (S)CAPARAZON-TANQUE		
	[12]														
	620827	.	.	B	B	B	S	S	S		4		(F)ECROU (S)TUERCA		
	[13]														
	620006	.	.	B	B	B	S	S	S		3		(F)MONTURE (S)RETNEDOR		
	[14]														
	620584	.	A	B	B	B	O	O	O		1		(F)TUYAU (S)TUBERIA		
	[15]														
	620727	.	A	B	B	B	O	O	O		1		(F)BOULON (S)PERNO		
	[16]														
	620585	.	A	B	B	B	O	O	O		1		(F)ECROU (S)TUERCA		
	[17]														
	620589	.	A	B	B	B	O	O	O		2		(F)RONDELLE (S)ARANDELA		
	[18]														
	620588	.	A	B	B	B	O	O	O		2				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

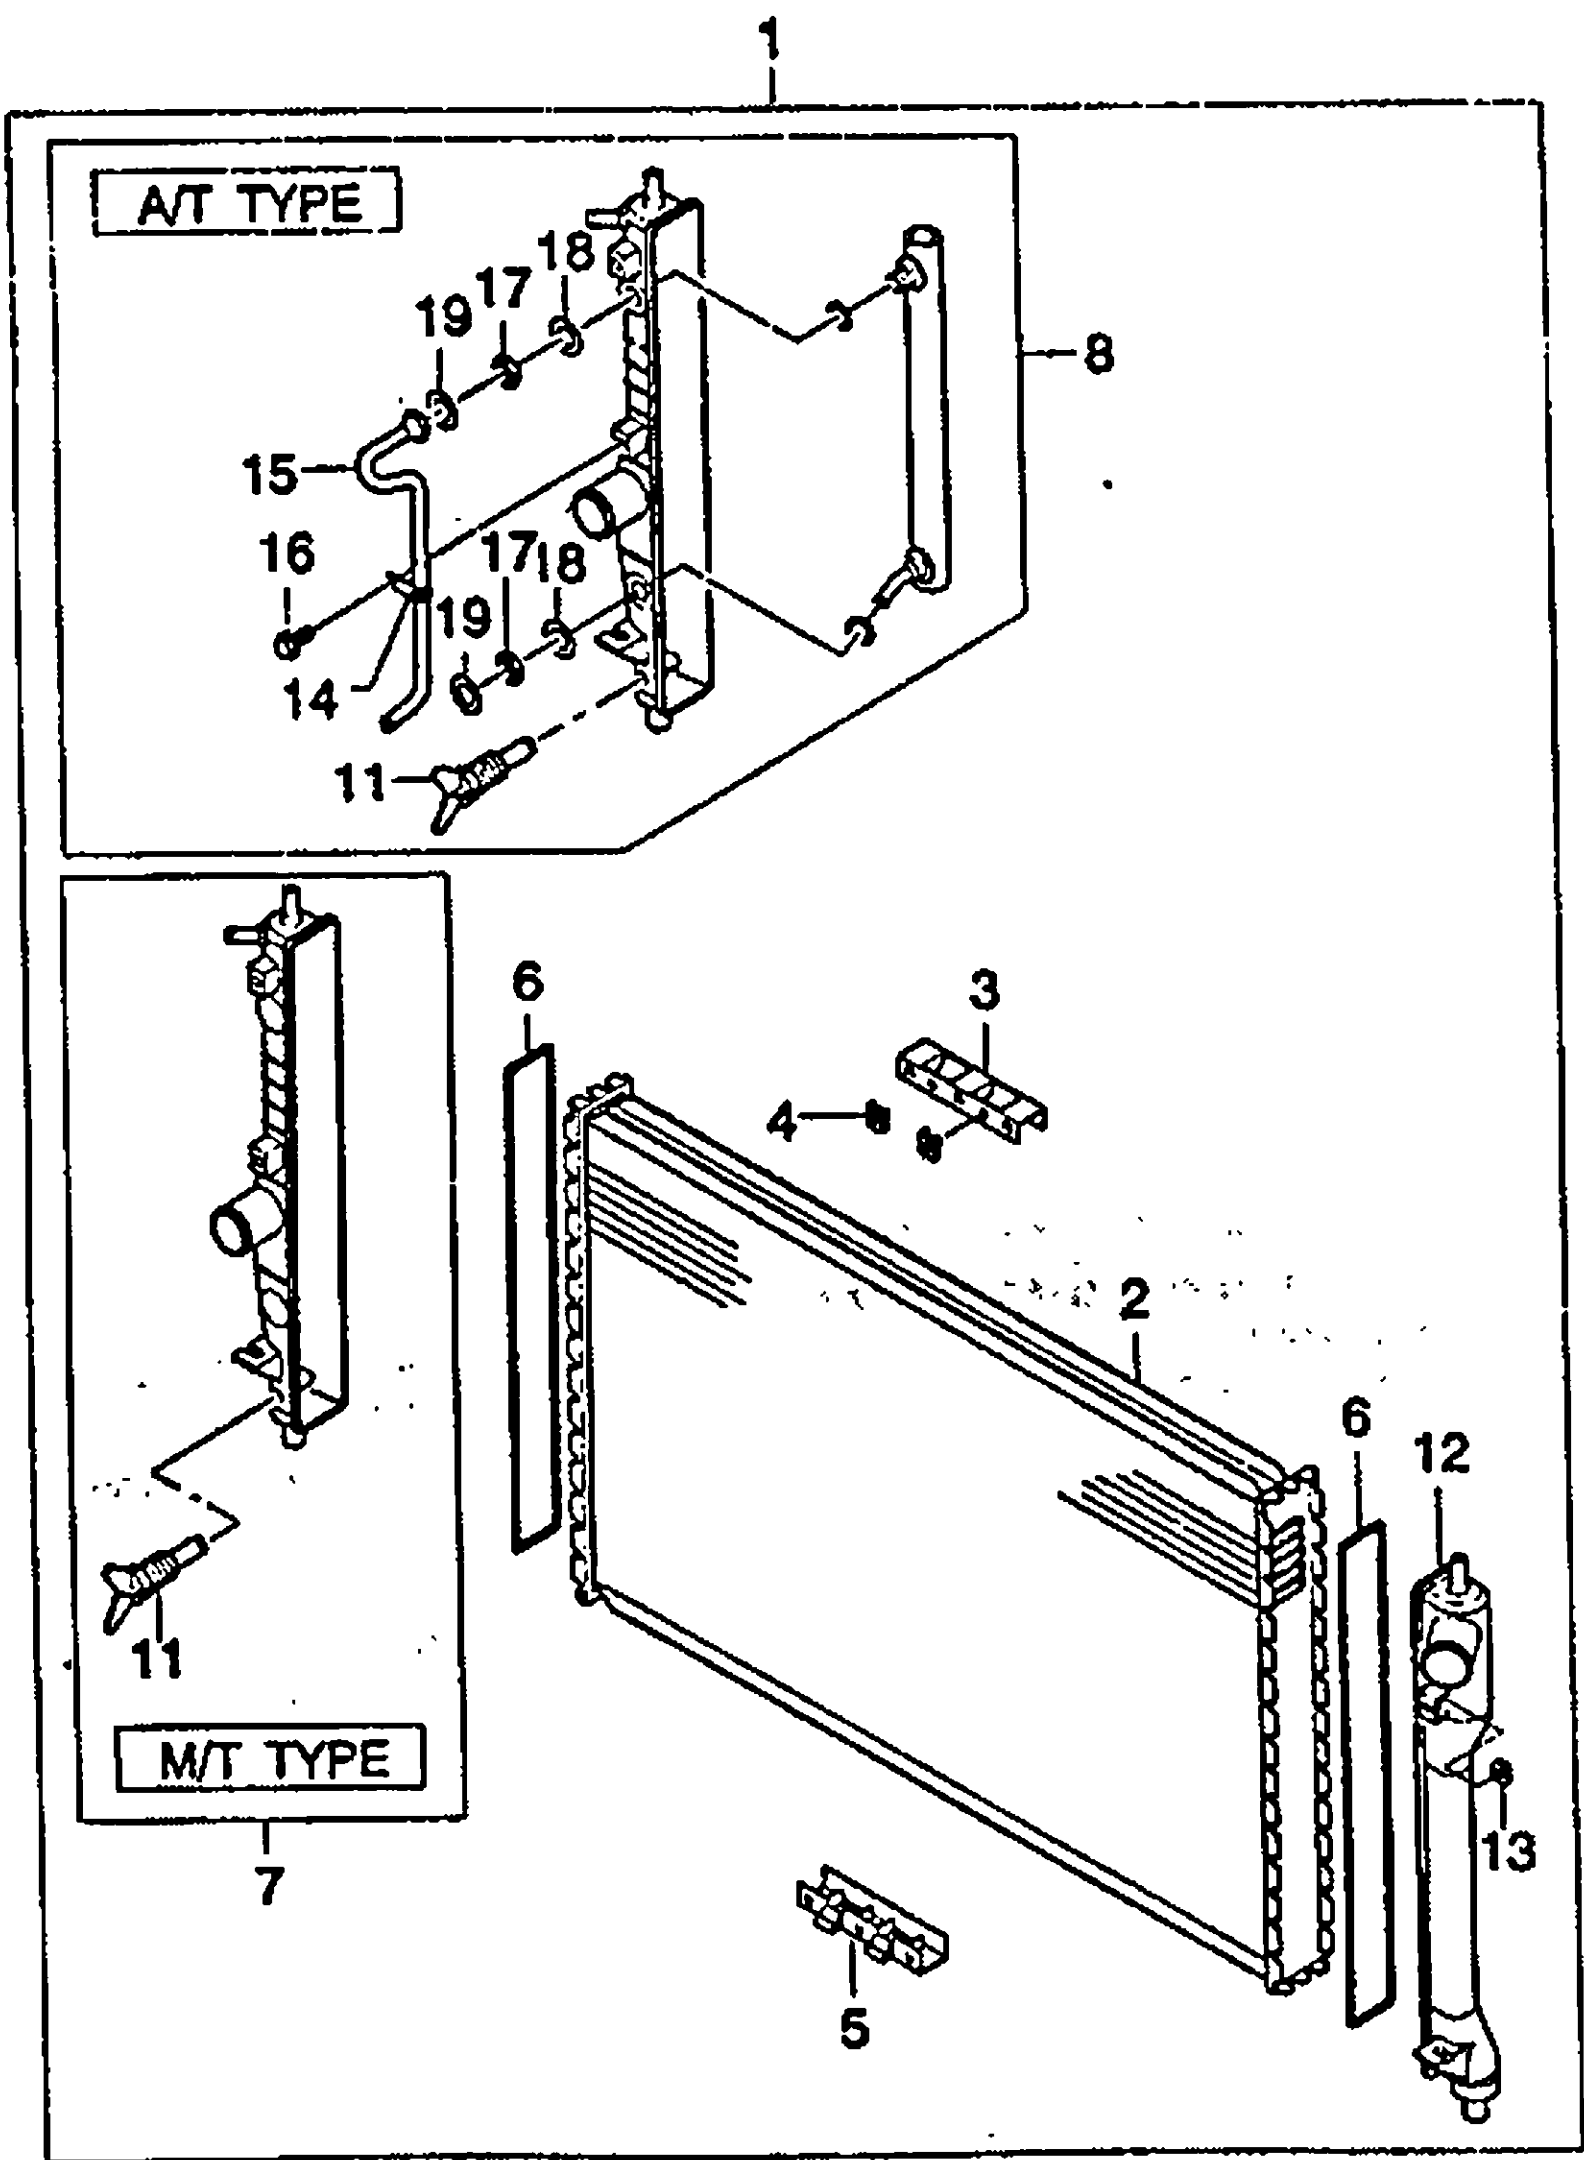


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[19] 620590	(E)WASHER (D)DICHTUNGSRING . A	B	B	B	B	O	O		(F)RONDELLE (S)ARANDELA 2						
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

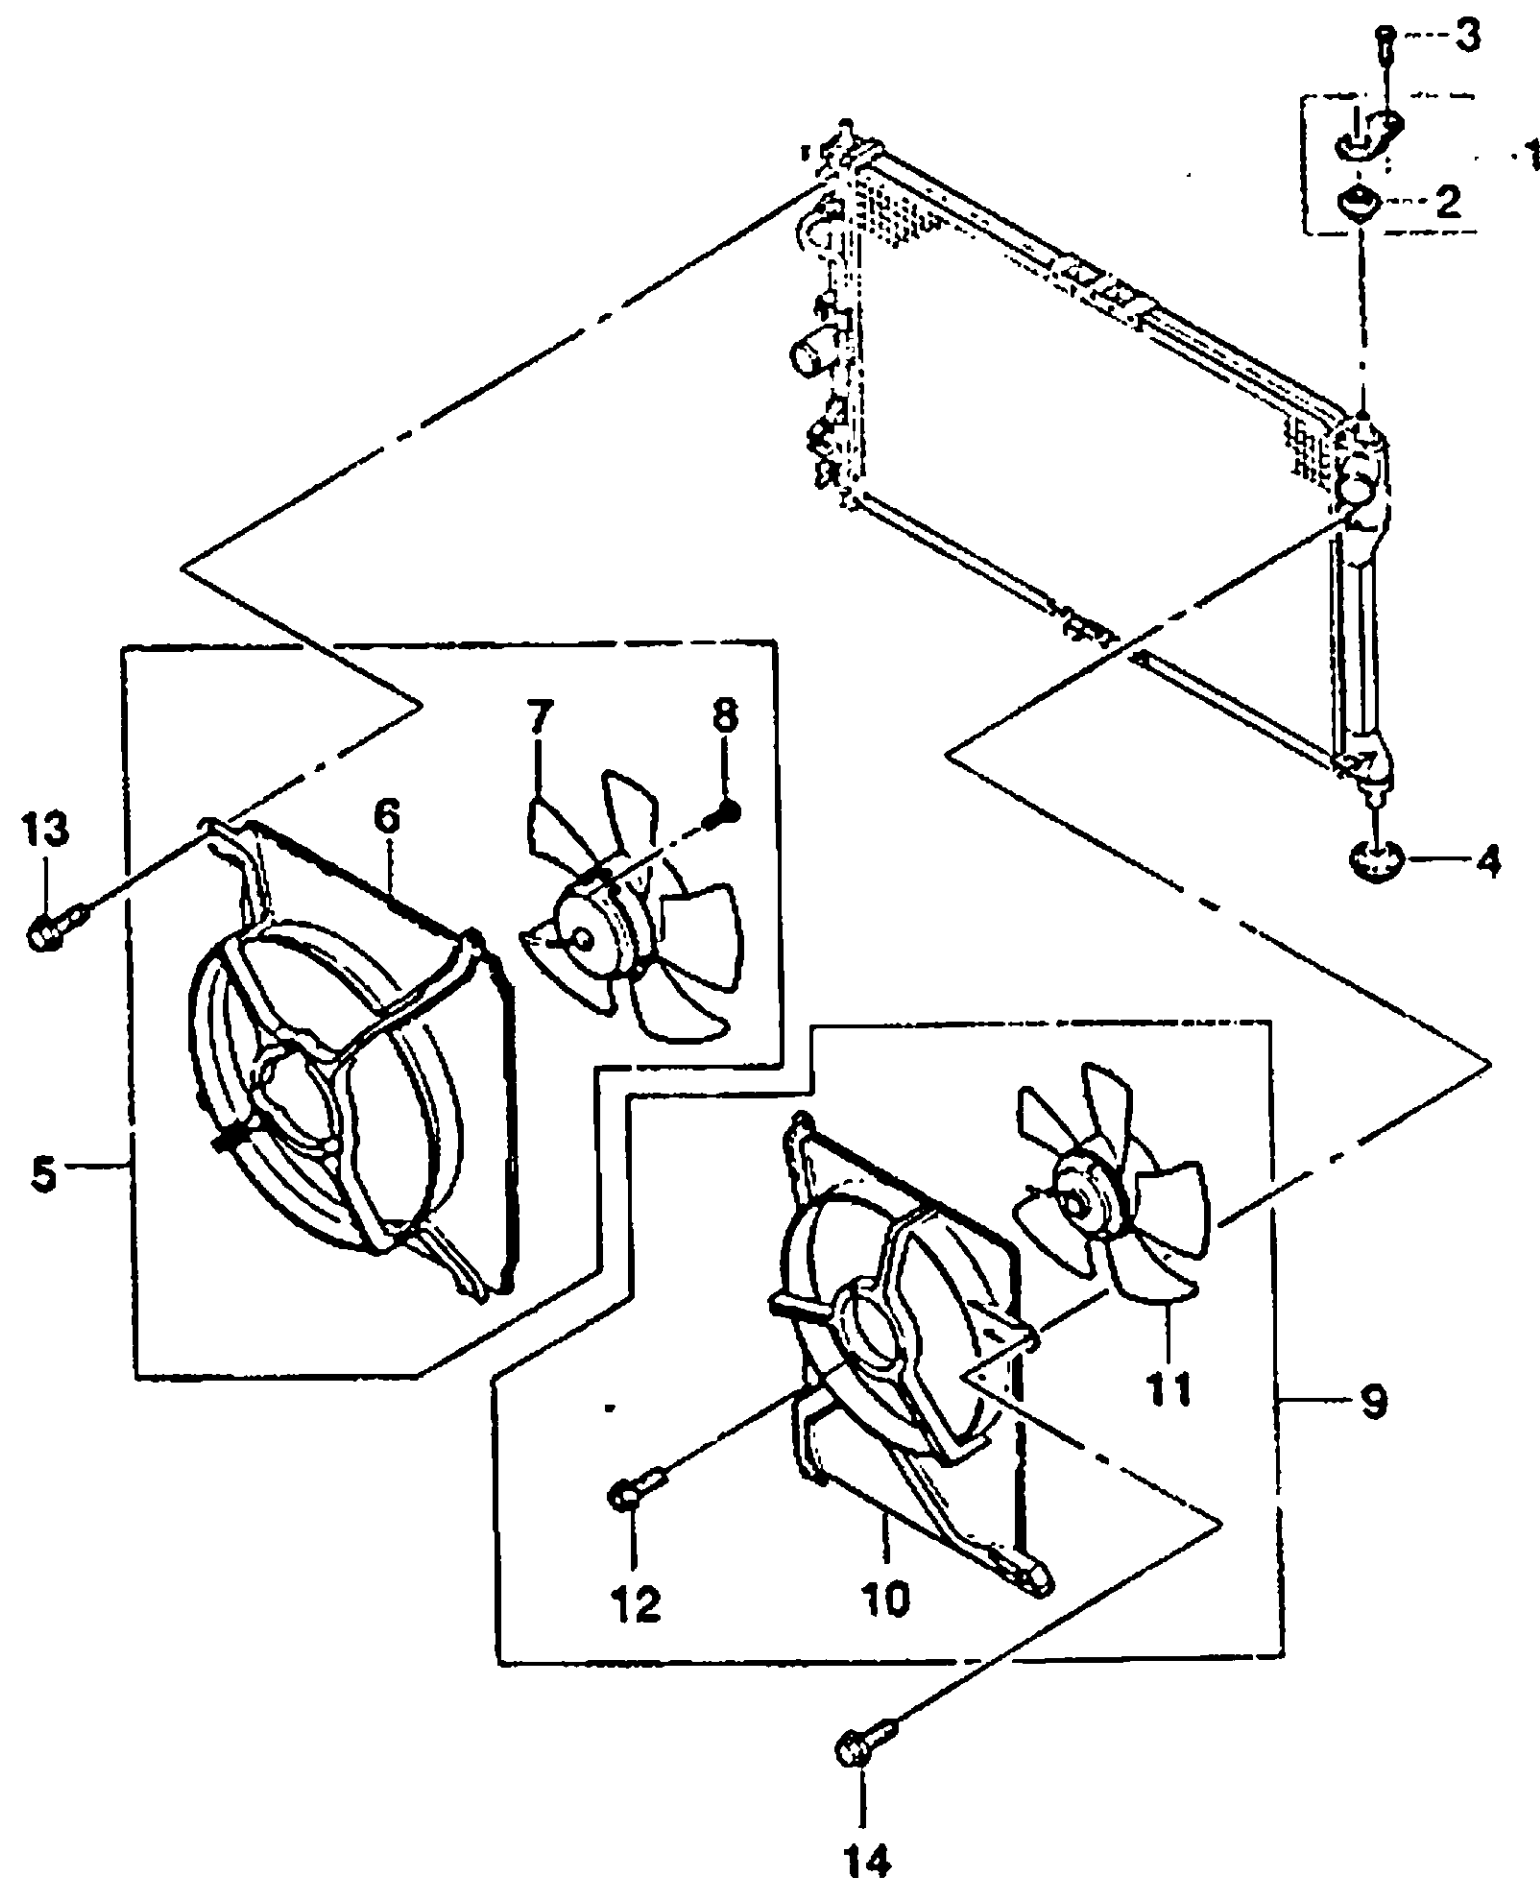


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L I T C	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01] 96351477	(E)BRACKET A-RADIATOR (D)TRÄGER,KÜHLER								(F)SUPPORT-RADIATEUR (S)SOPORTE-RADIADOR					
		. . . B B B S S S								2					
	[02] 96351101	(E)BUMPER-RADIATOR,UPPER (D)STOBSTANGE								(F)PARE-CHOC (S)PARACHOQUES					
		. . . B B B S S S								2					
	[03] 02647-06165	(E)BOLT-HEX FLANGE PILOT (D)SCHRAUBE								(F)BOULON (S)PERNO					
		. . . B B B S S S								2					
	[04] 96184140	(E)BUMPER-RADIATOR,LOWER (D)STOBSTANGE								(F)PARE-CHOC (S)PARACHOQUES					
		. . . B B B S S S								2					
	[05] 96183756	(E)BLOWER A-RADIATOR (D)BLÄSER,KÜHLER								(F)VENTILATEUR-RADIATEUR (S)VENTILADOR-RADIADOR					
		. . . B B B S S S -XHA								1					
	96183756	. . . B B B S S S &C46&XHA								1					
	96352580	. . . B B B O O O &C59/C60&XHA								1					
	[06] EU03050	(E)SHROUD (D)MANTEL,KÜHLER								(F)BOUCLIER-RADIATEUR (S)CUBIERTA-RADIADOR			NOT APPLIED		
	EU03005	. . . B B B S S S								1					
	[07] EU50002	(E)BLOWER (D)BLÄSER,KÜHLER								(F)VENTILATEUR-RADIATEUR (S)VENTILADOR-RADIADOR			NOT APPLIED		
	EU50001	. . . B B B S S S -XHA								1					
	EU50001	. . . B B B S S S &C46&XHA								1					
	GI50001	. . . B B B O O O &C59/C60&XHA								1					

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

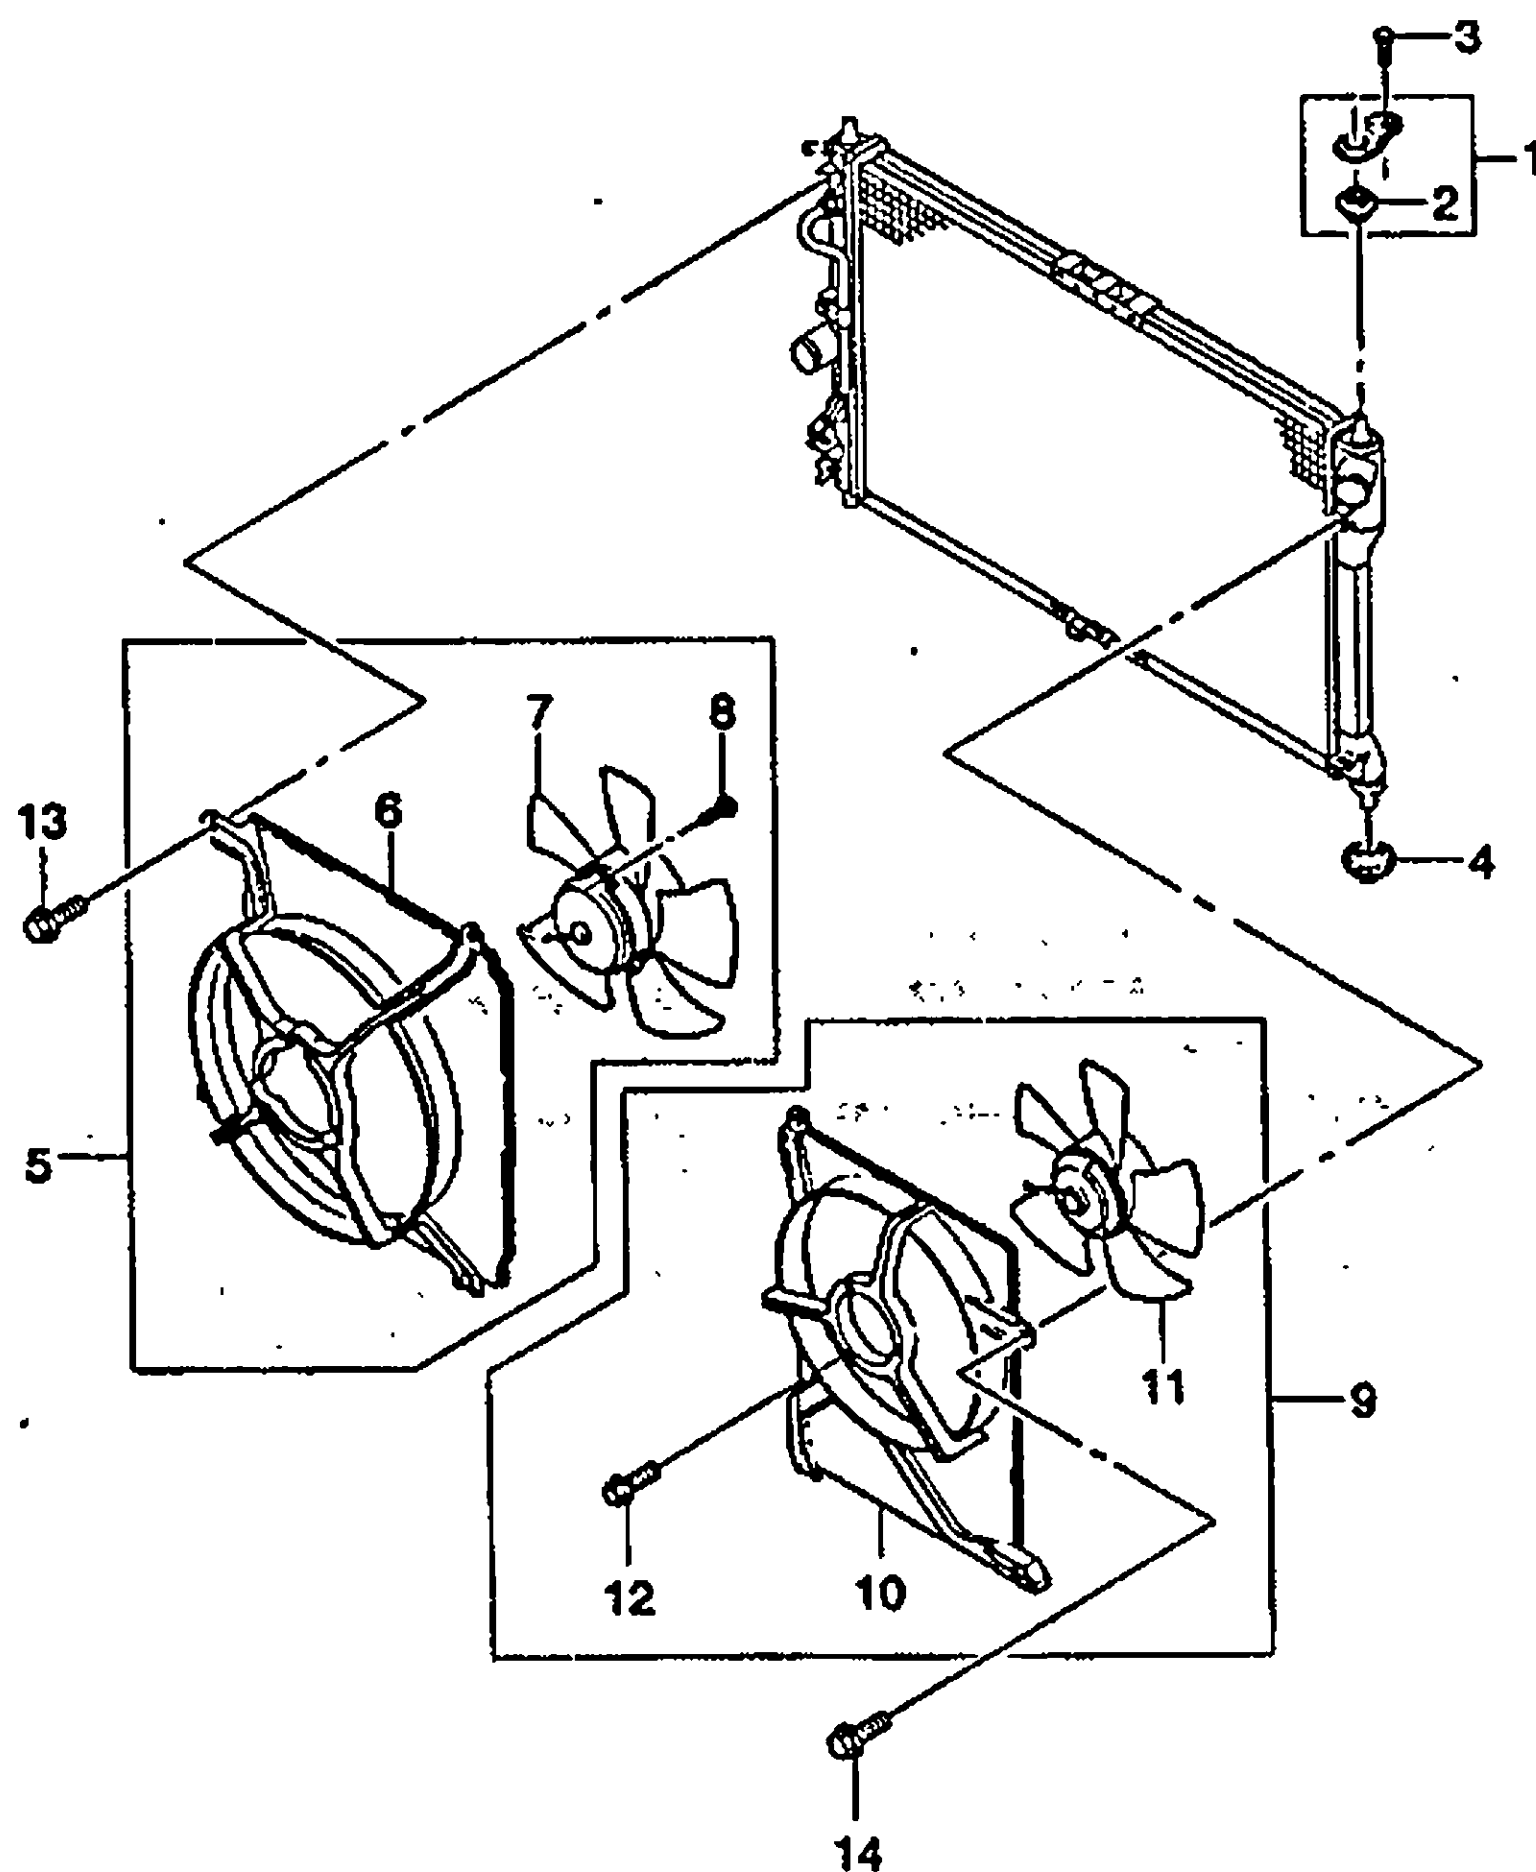


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	[08]	(E)SCREW (D)SCHRAUBE								(F)VIS (S)TORNILLO					
	EU01036													NOT APPLIED	
	EU10036	. . . B B B S S S								3					
	[09]	(E)BLOWER A-AUXILIARY (D)BLÄSER,ZUSATZ								(F)VENTILATEUR-AUXILIAIRE (S)VENTILADOR-AUXILIAR					
	96182264	. . . B B B O O O &C60								1					
	[10]	(E)SHROUD (D)MANTEL								(F)BOUCLIER (S)CUBIERTA					
	DA03050	. . . B B B O O O &C60								1					
	[11]	(E)BLOWER-AUXILIARY (D)BLÄSER,ZUSATZ								(F)VENTILATEUR-AUXILIAIRE (S)VENTILADOR-AUXILIAR					
	DA50002	. . . B B B O O O &C60								1					
	[12]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO					
	MC01017	. . . B B B O O O &C60								3					
	[13]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO					
	09116-06025	. . . B B B S S S								3					
	[14]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO					
	09116-06025	. . . B B B O O O &C60								3					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

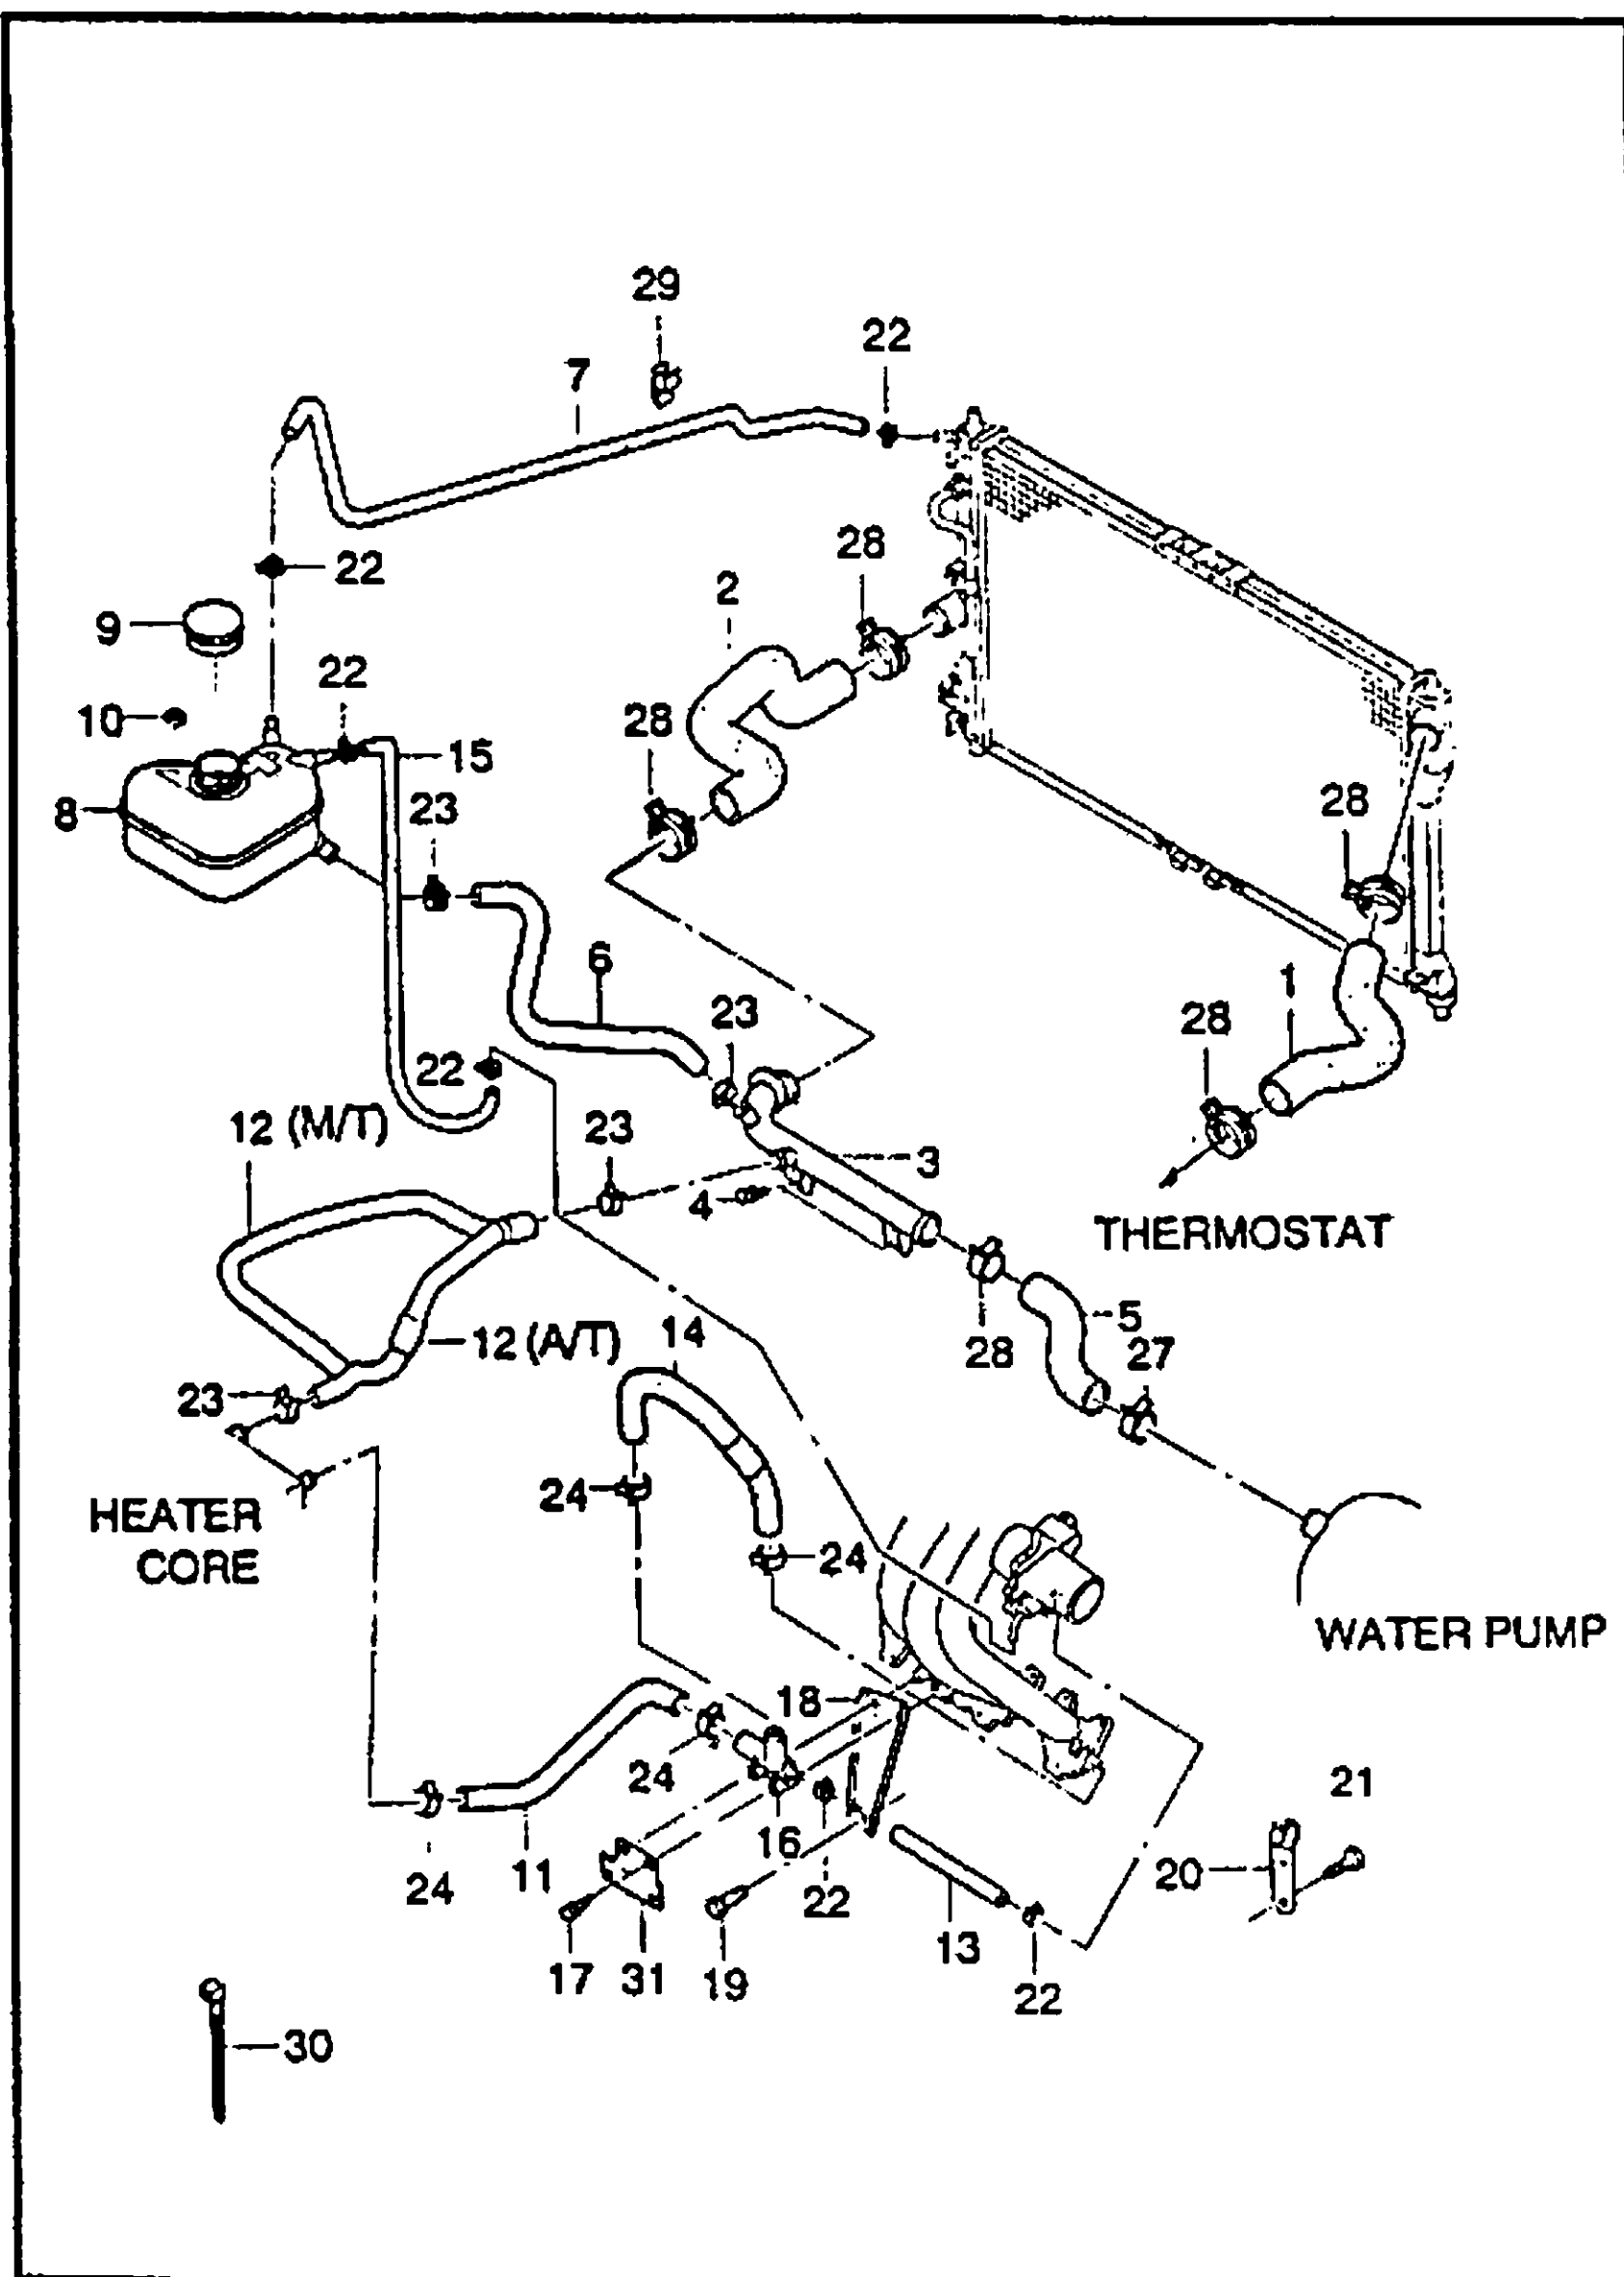


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N H	3 H	5 H	S S				S S	X		
											FROM	TO		
	[01]	(E)HOSE-RADIATOR,UPPER (D)SCHLAUCH,BOGEN,OBEN								(F)TUYAU-COUDE,HAUT (S)MANGUERA-CODO,SUPERIOR				
	96351259	Y . B B B S S S &C46								1				UC
	96182268	Y . B B B O O O &C59/C60								1				UA
	[02]	(E)HOSE-RADIATOR,LOWER (D)SCHLAUCH,BOGEN,UNTEN												
	96350692	Y . B B B S S S								1				
	[03]	(E)PIPE-RADIATOR & ENGINE (D)ROHR,KÜHLER&MOTOR												
	96180035	Y . B B B S S S								1				
	[04]	(E)BOLT-HEXAGON (D)SCHRAUBE												
	01137-08165	Y . B B B S S S								2				
	[05]	(E)HOSE-PIPE & WATER PUMP (D)SCHLAUCH,ROHR&WASSERPUMPE												
	96180071	Y . B B B S S S								1				
	[06]	(E)HOSE-SURGE TANK & PIPE (D)SCHLAUCH,ÜBERFLUßTANK												
	96351748	Y . B B B S S S								1				
	[07]	(E)HOSE-RADIATOR & SURGE TANK (D)SCHLAUCH												
	96351848	Y . B B B S S S								1				
	[08]	(E)TANK-SURGE (D)TANK,ÜBERFLUß												
	96182279	Y . B B B S S S								1				
	[09]	(E)CAP-SURGE TANK (D)DECKEL,ÜBERFLUßTANK												
	96351578	Y . B B B S S S								1				

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

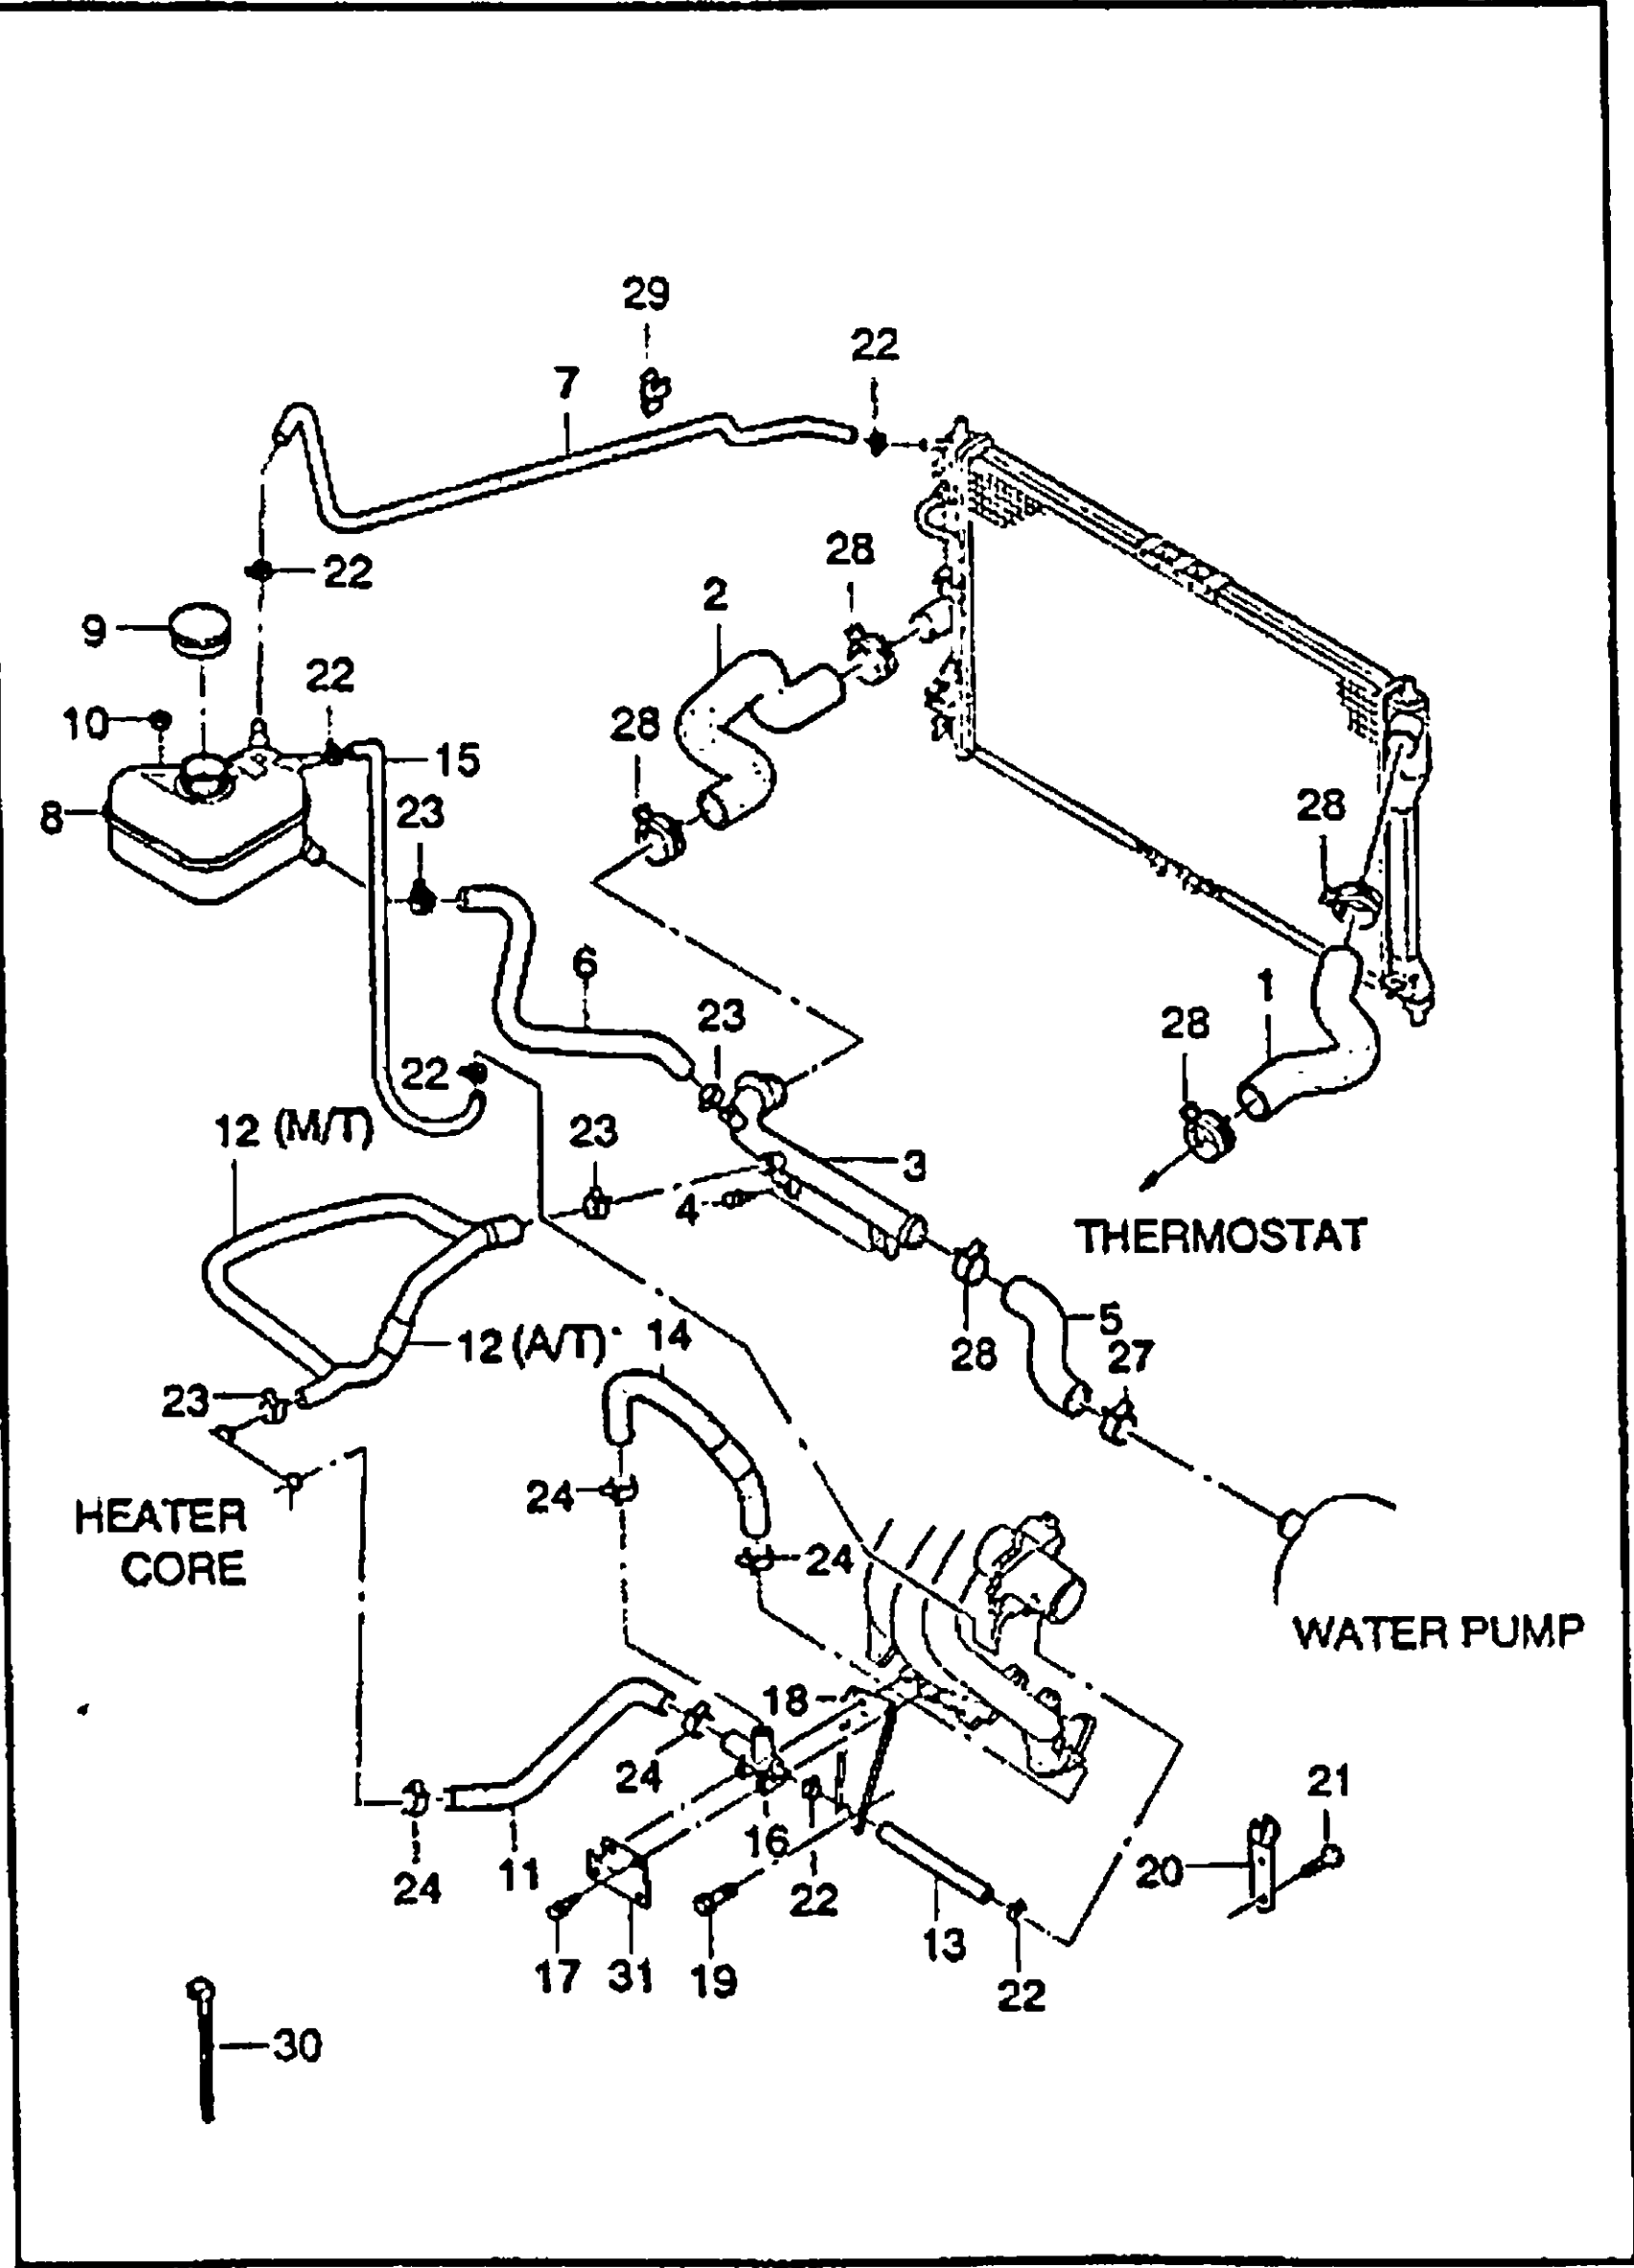


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[10] 09159-06011	(E)NUT (D)MUTTER	Y	.	B	B	B	S	S	S		(F)ECROU (S)TUERCA	2			
	[11] 96304312	(E)HOSE-HEATER FEEDING (D)SCHLAUCH,HEIZUNG ZUFUHR	Y	.	B	B	B	S	S	S		(F)TUYAU (S)MANGUERA-CALENTADOR	1			
	[12] 96304316	(E)HOSE-HEATER RETURN (D)RÜCK-SCHLAUCH,HEIZUNG	Y	M	B	B	B	S	S	S		(F)TUYAU-RETOUR CHAUFFAGE (S)MANGUERA-CALENTADOR	1			
	96304475		Y	A	B	B	B	O	O	O			1			
	[13] 96351770	(E)HOSE-THROTTLE BODY FEED'G (D)SCHLAUCH,DROSSEL KÖRPER	Y	.	B	B	B	S	S	S		(F)TUYAU (S)MANGUERA	1			
	[14] 96351772	(E)HOSE-MANIFOLD & DISTRIBUTOR (D)SCHLAUCH	Y	.	B	B	B	S	S	S		(F)TUYAU (S)MANGUERA	1			
	[15] 96351822	(E)HOSE-THROTTLE BODY RETURN (D)SCHLAUCH,DROSSEL KÖRPER	Y	.	B	B	B	S	S	S		(F)TUYAU (S)MANGUERA	1		SH	
	[16] 96143583	(E)DISTRIBUTOR-WATER (D)VERTEILER,WASSER	Y	.	B	B	B	S	S	S		(F)DISTRIBUTEUR-EAU (S)DISTRIBUIDOR-AGUA	1			
	[17] 01510-08503	(E)BOLT-HEXAGON (D)SCHRAUBE	Y	.	B	B	B	S	S	S		(F)BOULON (S)PERNO	2			
	[18] 96143951	(E)SUPPORT-INTAKE MANIFOLD (D)TRÄGER,SAMMELLEITUNG	Y	.	B	B	B	S	S	S		(F)SUPPORT (S)SOPORTE	1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

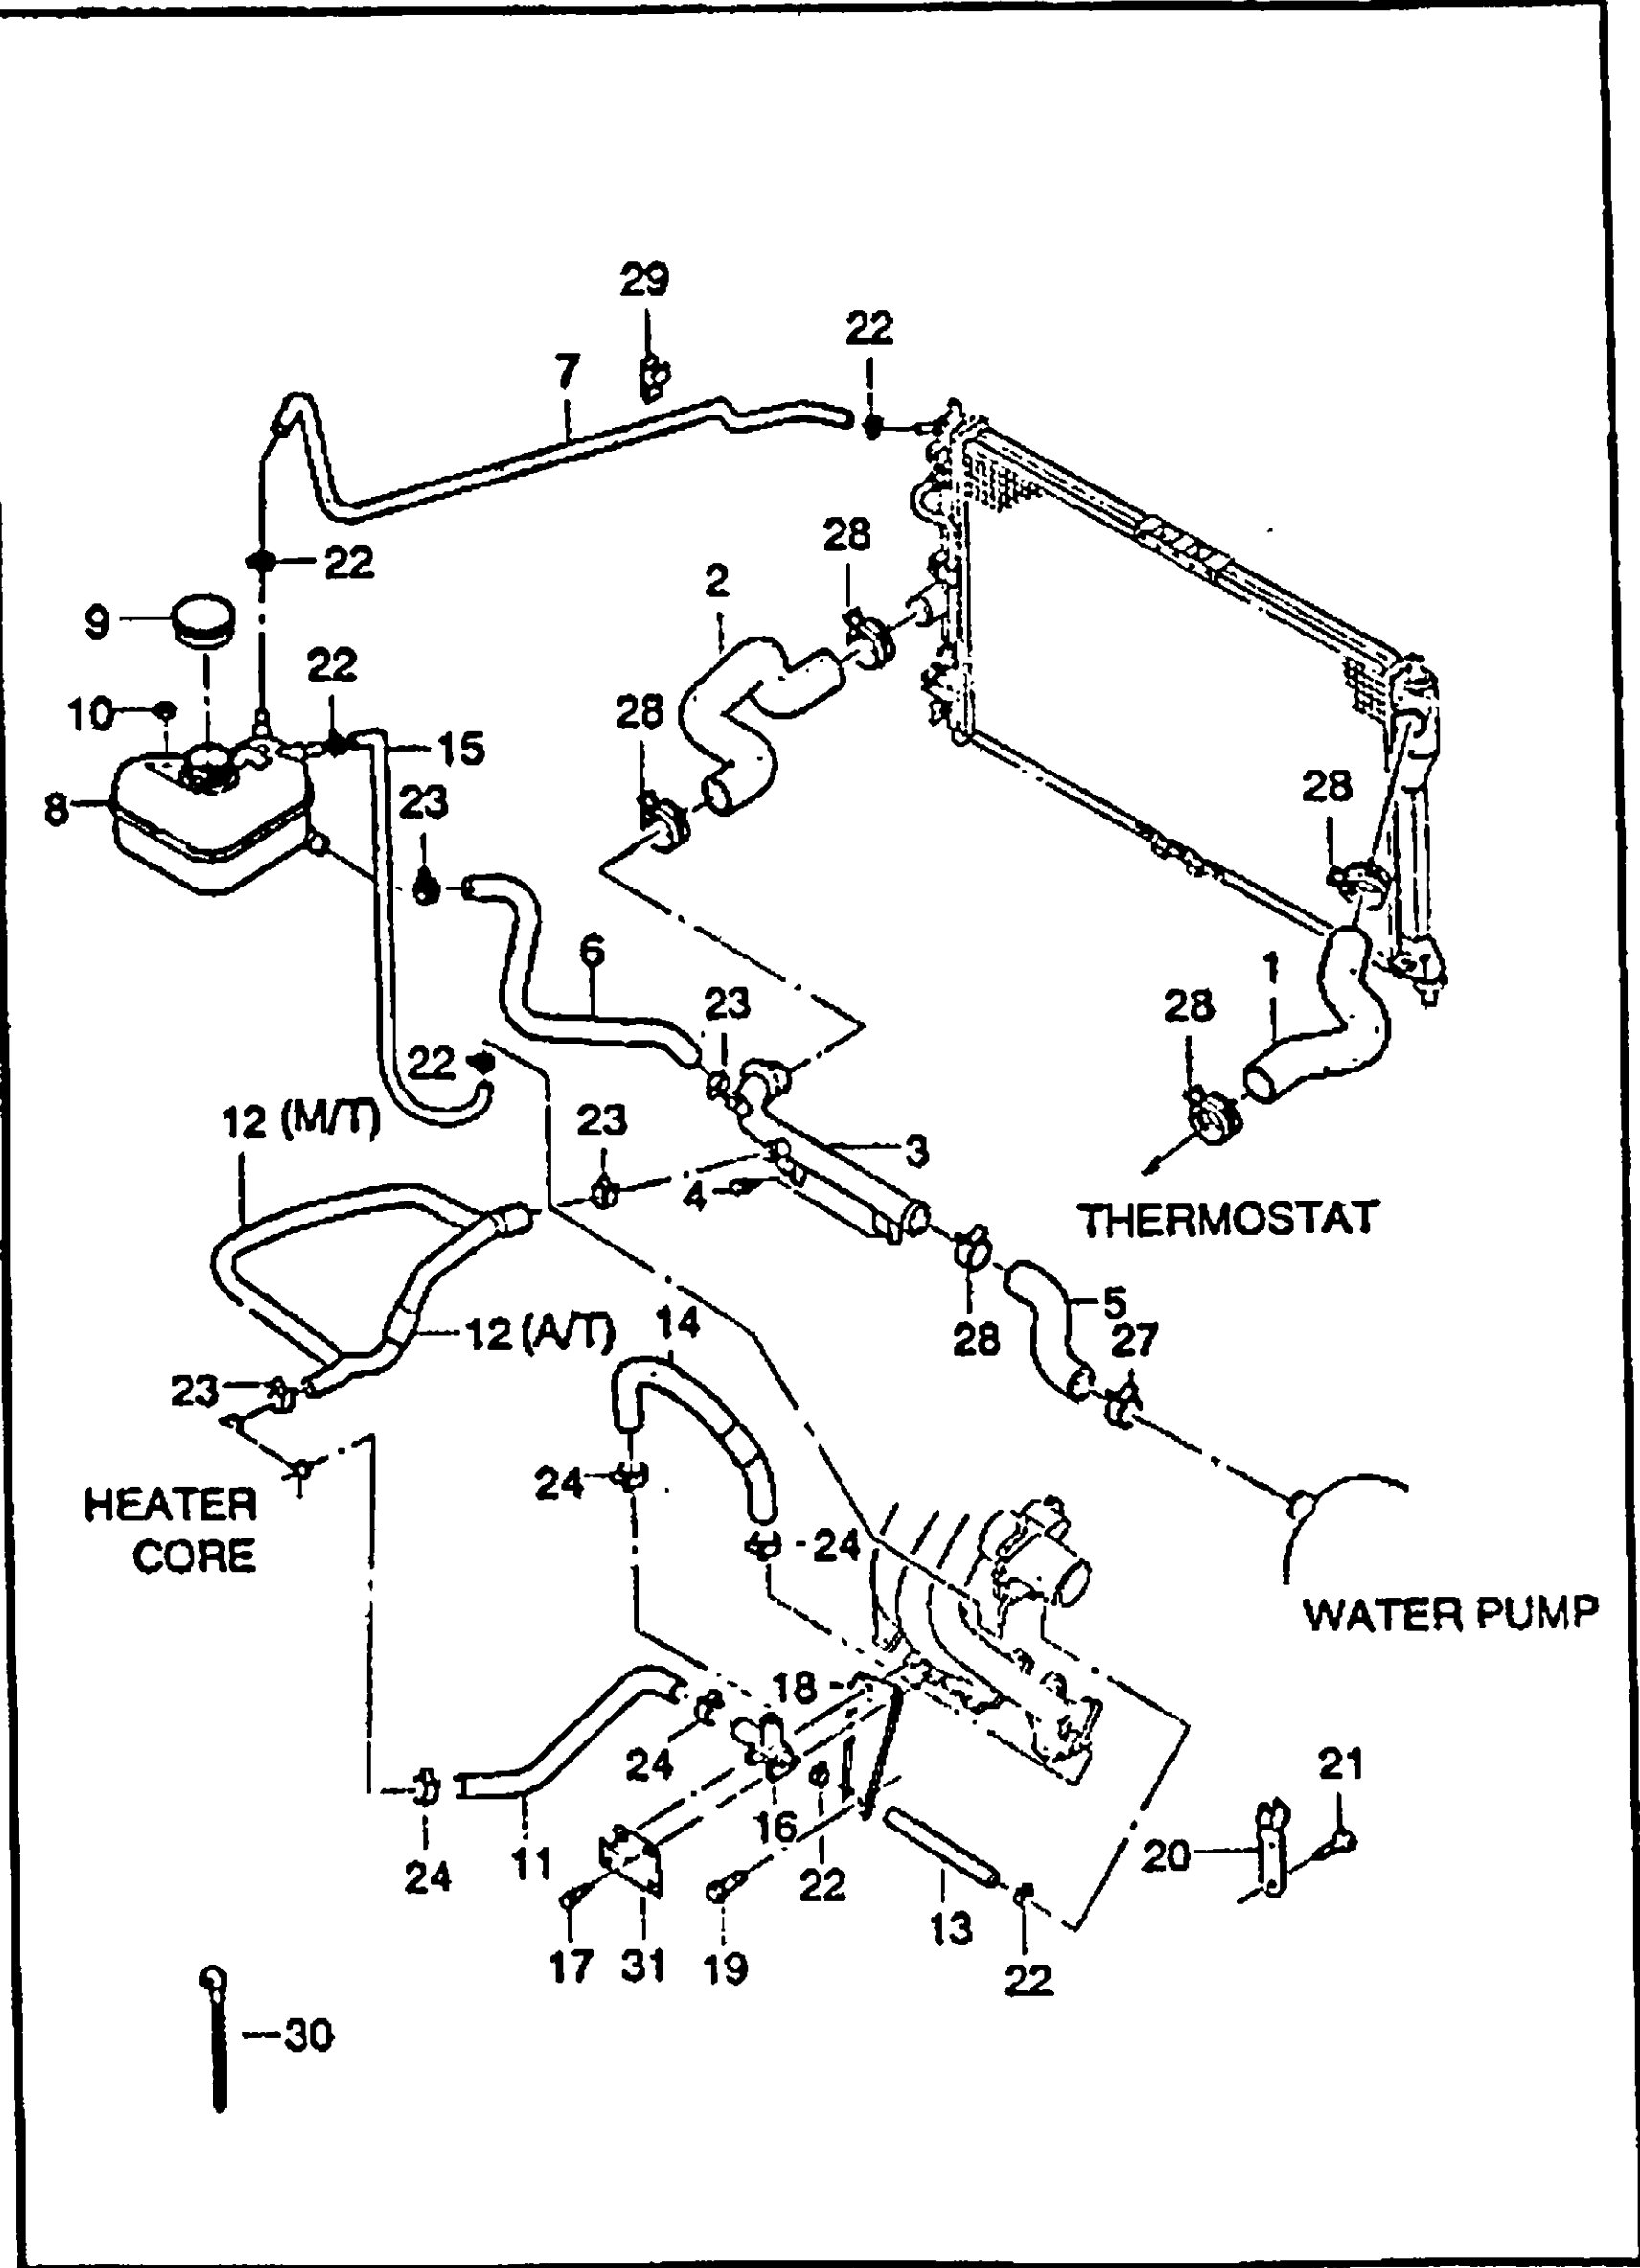

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[19] 09116-10001	(E)BOLT (D)SCHRAUBE	Y .	B	B	B	S	S	S		(F)BOULON (S)PERNO	1			
	[20] 96304320	(E)SUPPORT-HEATER HOSE (D)TRÄGER	Y M	B	B	B	S	S	S		(F)SUPPORT (S)SOPORTE	1			
	[21] 09100-10004	(E)BOLT-HEXAGON (D)SCHRAUBE	Y M	B	B	B	S	S	S		(F)BOULON (S)PERNO	1			
	[22] 09401-15401	(E)CLIP (D)KLEMME	Y .	B	B	B	S	S	S		(F)ATTACHE (S)GRAPA	6			
	[23] 09401-22401	(E)CLIP (D)KLEMME	Y .	B	B	B	S	S	S		(F)ATTACHE (S)GRAPA	4			
	[24] 09401-23402	(E)CLIP (D)KLEMME	Y .	B	B	B	S	S	S		(F)ATTACHE (S)GRAPA	4			
	[27] 09401-35401	(E)CLIP (D)KLEMME	Y .	B	B	B	S	S	S		(F)ATTACHE (S)GRAPA	1			
	[28] 09401-38401	(E)CLIP (D)KLEMME	Y .	B	B	B	S	S	S		(F)ATTACHE (S)GRAPA	5			
	[29] 09408-00074	(E)CLIP (D)KLEMME	Y .	B	B	B	S	S	S		(F)ATTACHE (S)GRAPA	1			
	[30]	(E)STRAP-MOUNTING (D)BAND,MONTAGE									(F)BRETELLE-MONTAGE (S)BRIDA-MONTAJE				


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

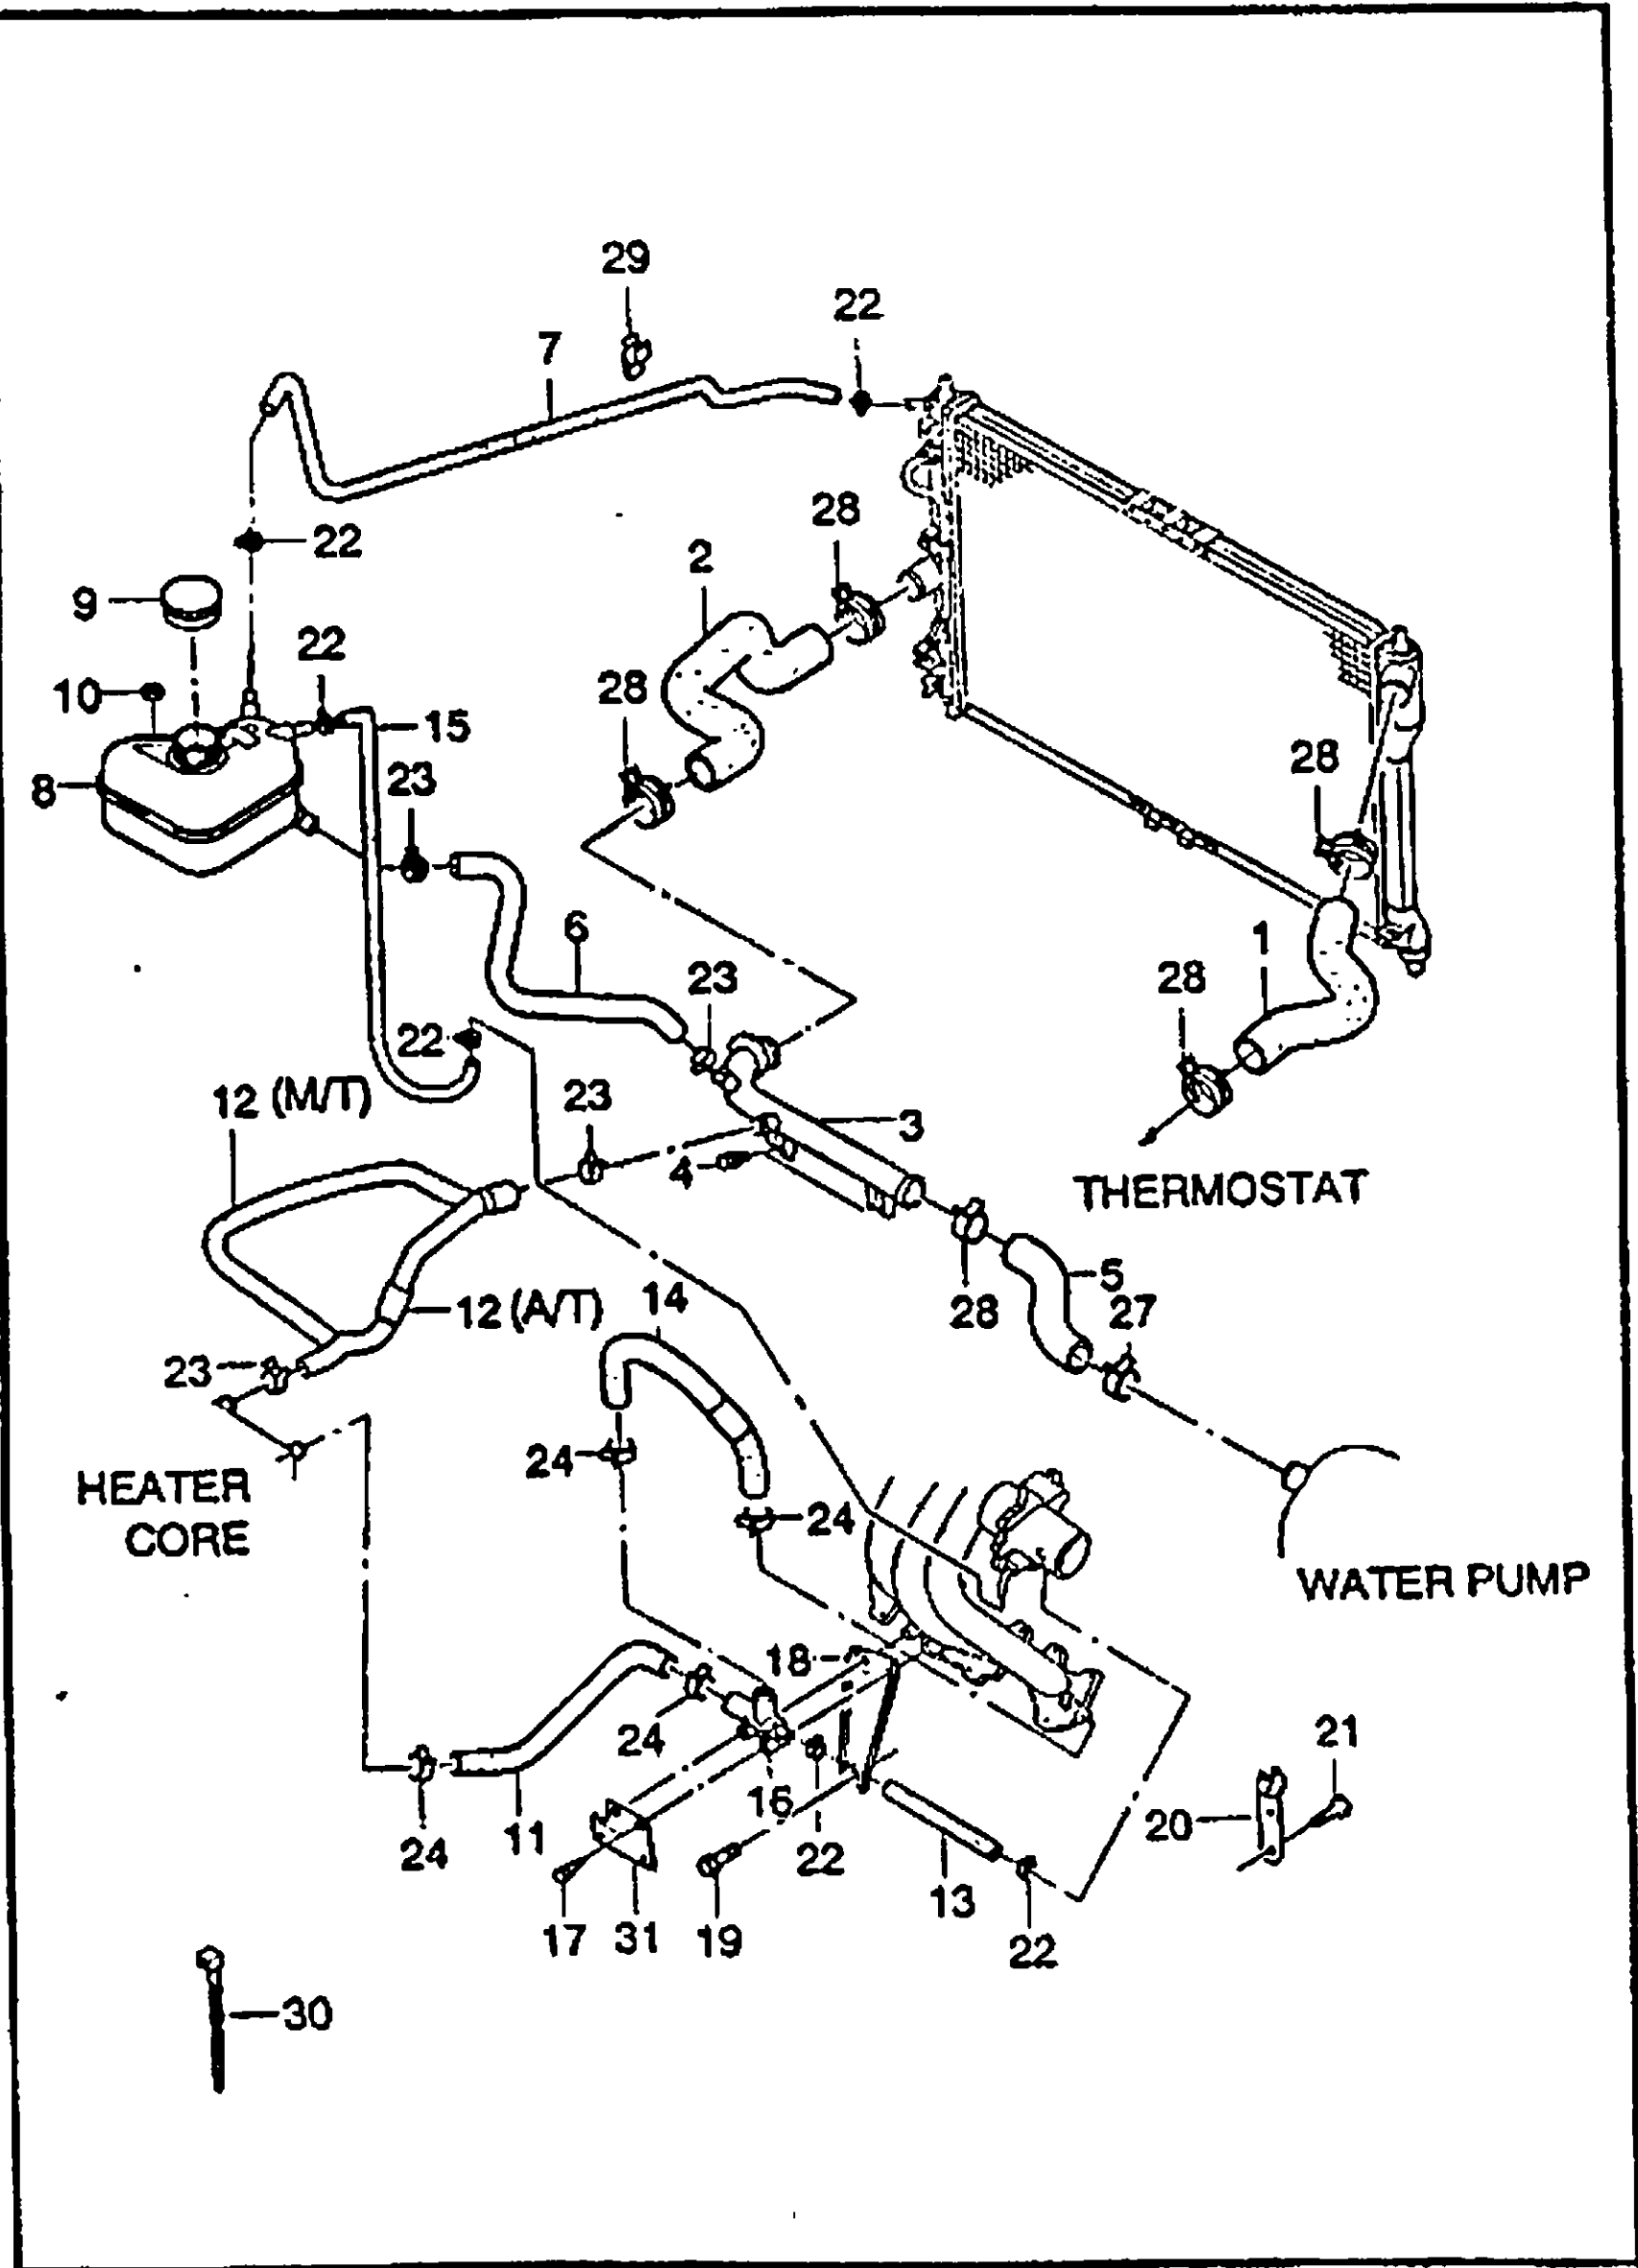


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S E								S X
	09286974 [31] 96234615	Y	.	B	B	B	S	S	S		2 (F)SUPPORT (S)SOPORTE 1					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

1651 RADIATOR HOSE&PIPE(DOHC)


3K08

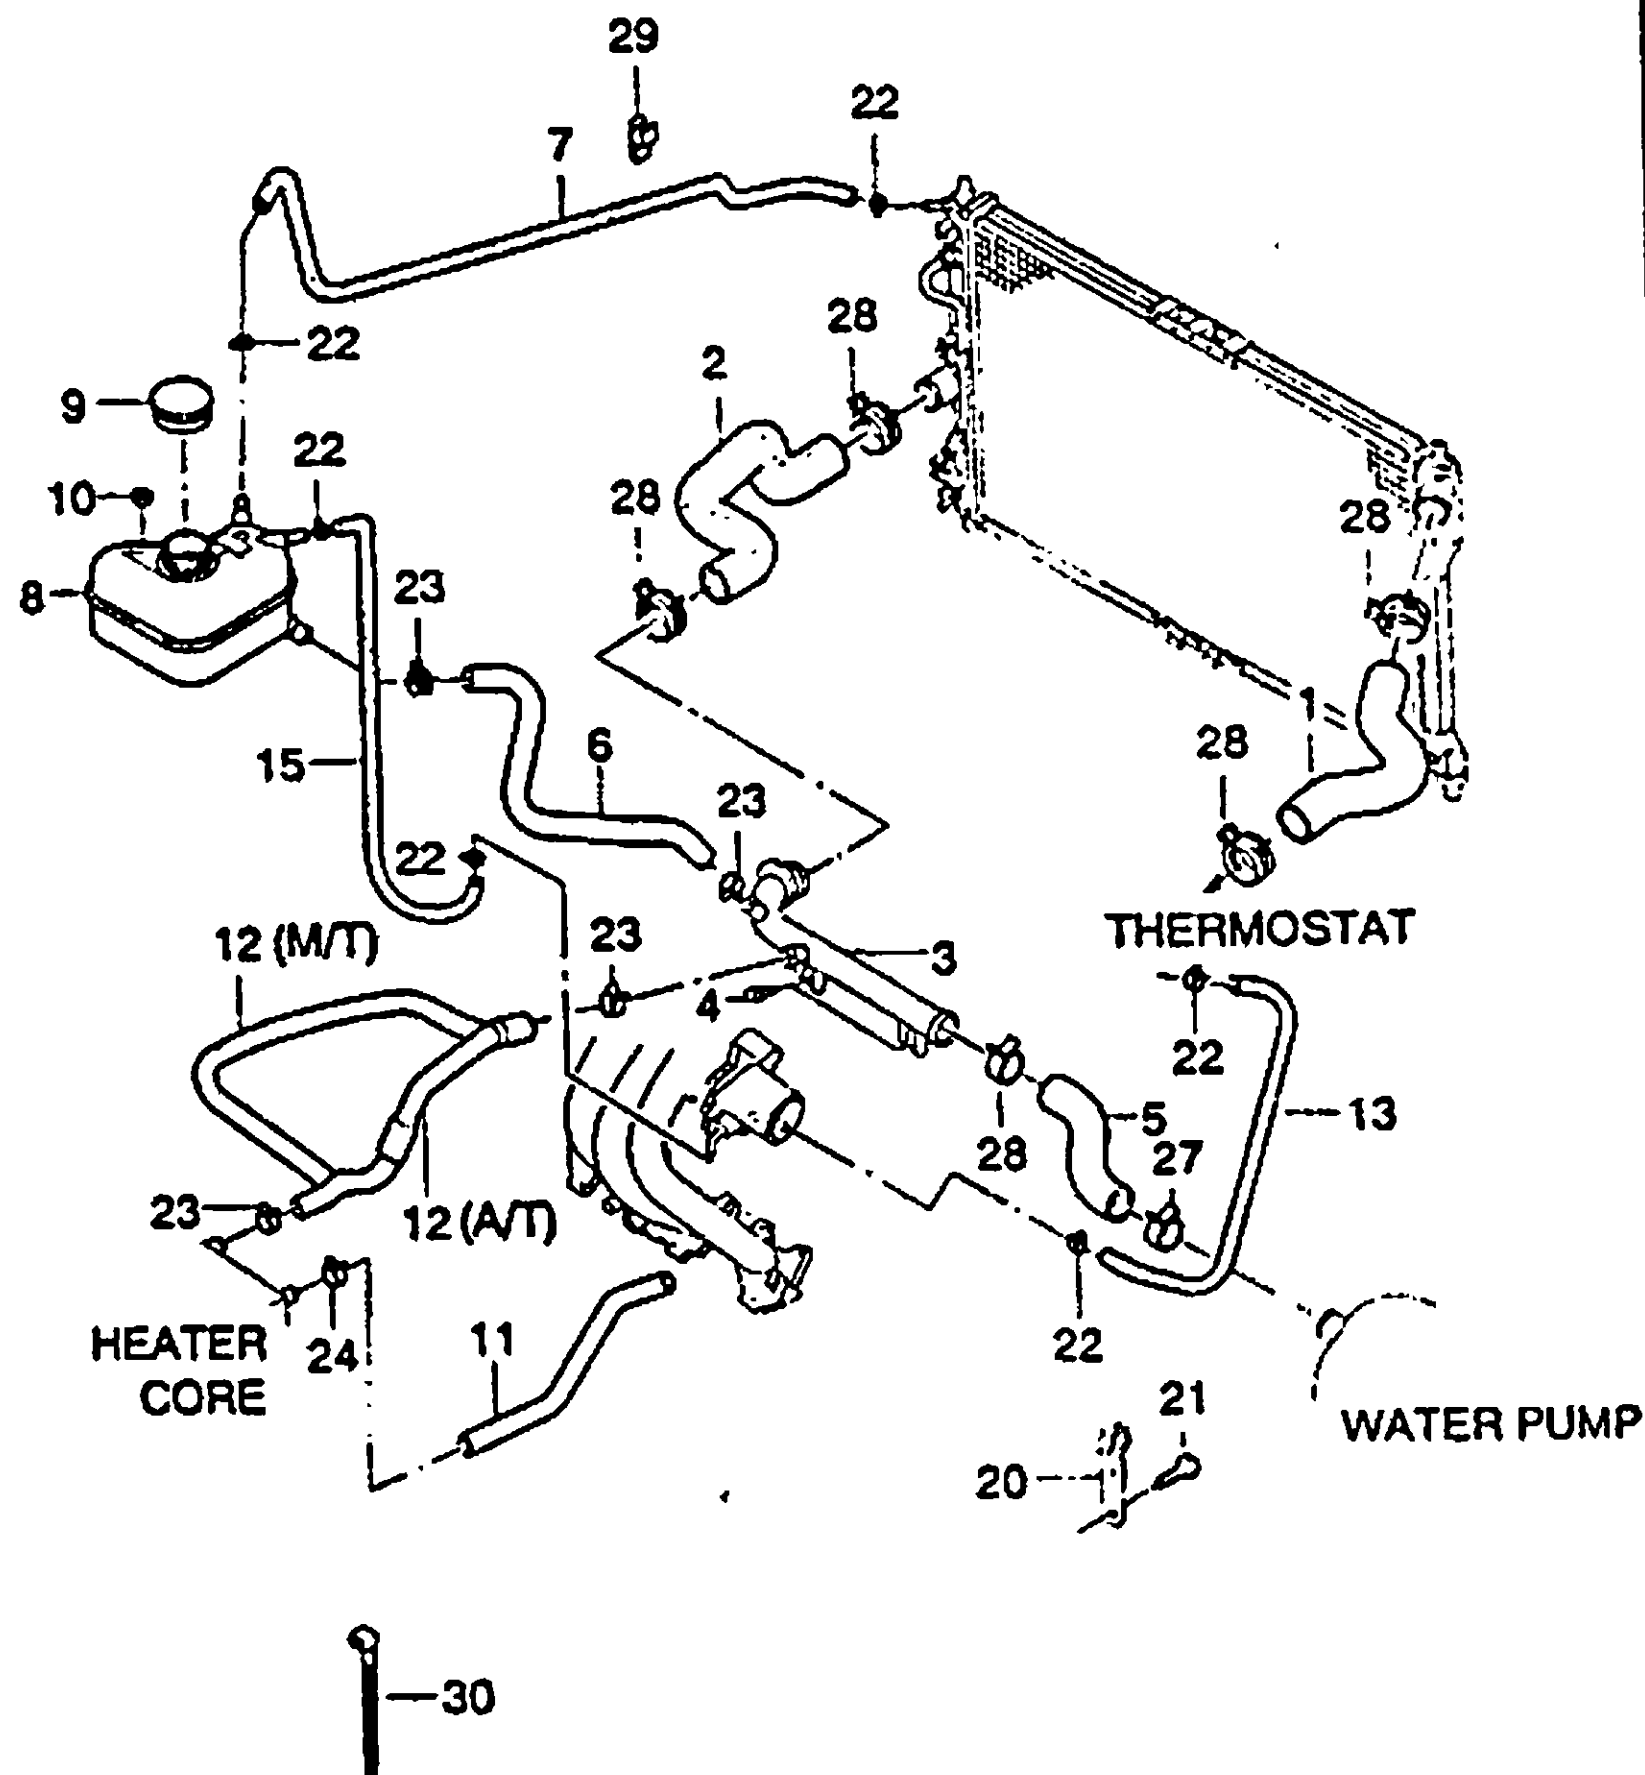


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	X
	[01]	(E)HOSE-RADIATOR,UPPER (D)SCHLAUCH,BOGEN,OBEN									(F)TUYAU-COUDE,HAUT (S)MANGUERA-CODO,SUPERIOR					
	96184393	6	.	B	B	B	.	.	O	&C46	1			UD		
	96182269	6	.	B	B	B	.	.	O	&C59/C60	1			UB		
	[02]	(E)HOSE-RADIATOR,LOWER (D)SCHLAUCH,BOGEN,UNTEN									(F)TUYAU-COUDE,BAS (S)MANGUERA-CODO,INFERIOR					
	96350692	6	.	B	B	B	.	.	O		1					
	[03]	(E)PIPE-RADIATOR & ENGINE (D)ROHR,KÜHLER&MOTOR									(F)TUYAU-RADIATEUR&MOTEUR (S)TUBERIA-RADIADOR Y MOTOR					
	96180035	6	.	B	B	B	.	.	O		1					
	[04]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO					
	01137-08165	6	.	B	B	B	.	.	O		2					
	[05]	(E)HOSE-PIPE & WATER PUMP (D)SCHLAUCH,ROHR&WASSERPUMPE									(F)TUYAU-TUYAU&POMPE A EAU (S)MANGUERA					
	96180071	6	.	B	B	B	.	.	O		1					
	[06]	(E)HOSE-SURGE TANK & PIPE (D)SCHLAUCH,ÜBERFLUßTANK									(F)TUYAU (S)MANGUERA					
	96351748	6	.	B	B	B	.	.	O		1					
	[07]	(E)HOSE-RADIATOR & SURGE TANK (D)SCHLAUCH									(F)TUYAU (S)MANGUERA					
	96351848	6	.	B	B	B	.	.	O		1					
	[08]	(E)TANK-SURGE (D)TANK,ÜBERFLUß									(F)RESERVOIR-TROP-PLEIN (S)TANQUE-SOBRE CARGA					
	96182279	6	.	B	B	B	.	.	O		1					
	[09]	(E)CAP-SURGE TANK (D)DECKEL,ÜBERFLUßTANK									(F)CHAPEAU (S)TAPA-TANQUE DE ARRANQUE					
	96351578	6	.	B	B	B	.	.	O		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

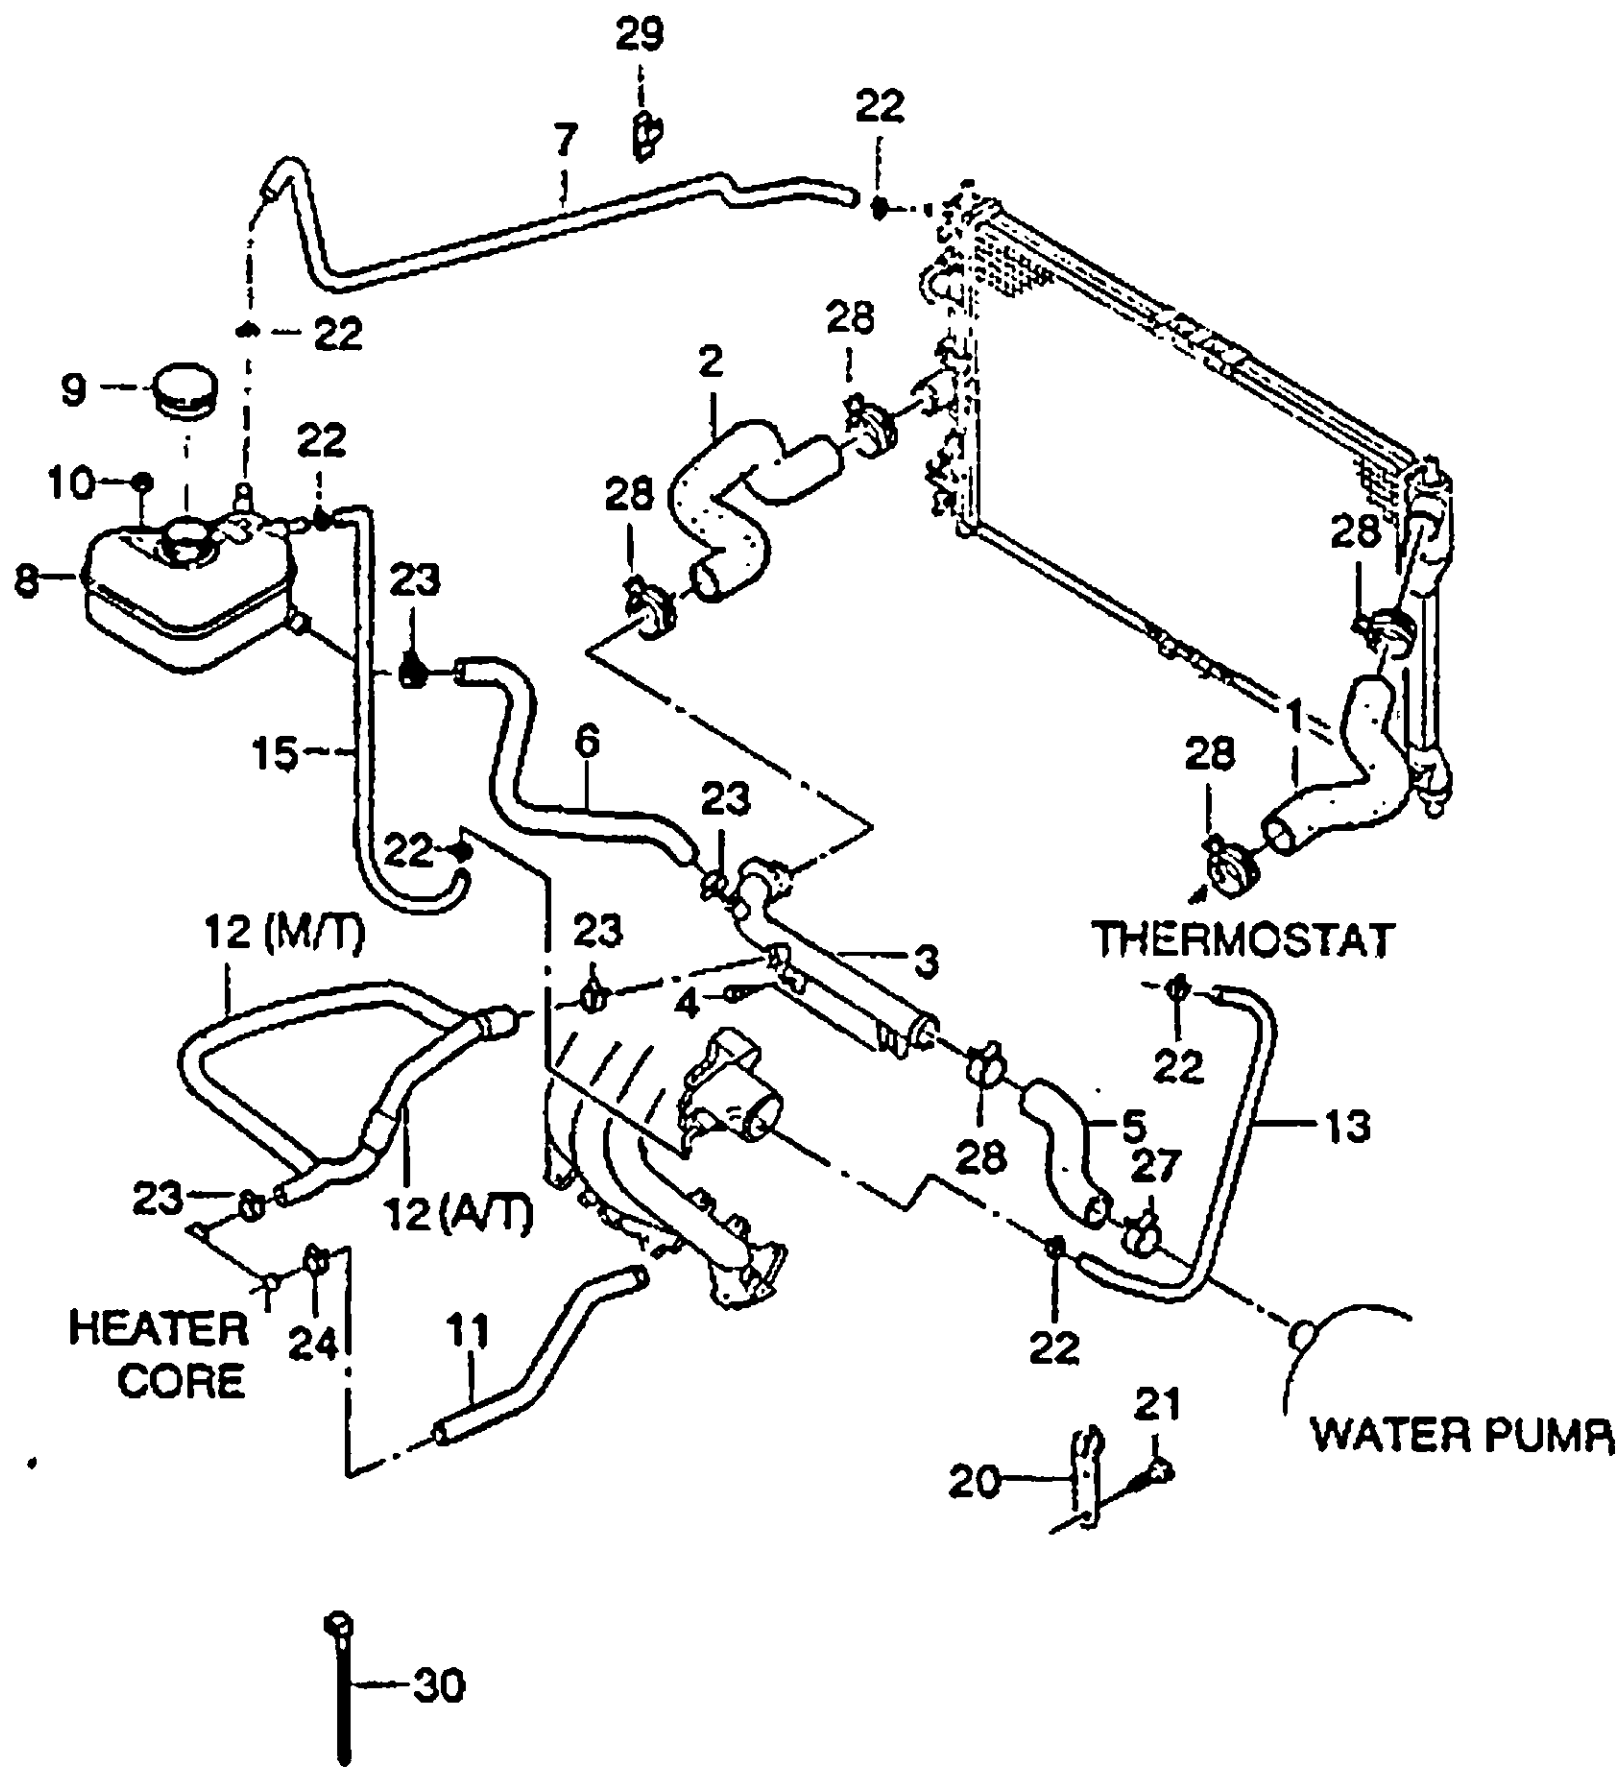


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S E	S X
	[10] 09159-06011	(E)NUT (D)MUTTER	6	.	B	B	B	.	.	O		(F)ECROU (S)TUERCA	2			
	[11] 96214619	(E)HOSE-HEATER FEEDING (D)SCHLAUCH,HEIZUNG ZUFUHR	6	.	B	B	B	.	.	O		(F)TUYAU (S)MANGUERA-CALENTADOR	1			
	[12] 96304316	(E)HOSE-HEATER RETURN (D)RÜCK-SCHLAUCH HEIZUNG	6	M	B	B	B	.	.	O		(F)TUYAU-RETOUR CHAUFFAGE (S)MANGUERA-CALENTADOR	1			
	96304475		6	A	B	B	B	.	.	O			1			
	[13] 96184864	(E)HOSE-THROTTLE BODY FEED'G (D)SCHLAUCH,DROSSEL KÖRPER	6	.	B	B	B	.	.	O		(F)TUYAU (S)MANGUERA	1			
	[15] 96351823	(E)HOSE-THROTTLE BODY RETURN (D)SCHLAUCH,DROSSEL KÖRPER	6	.	B	B	B	.	.	O		(F)TUYAU (S)MANGUERA	1		DH	
	[20] 96304320	(E)SUPPORT-HEATER HOSE (D)TRÄGER	6	M	B	B	B	.	.	O		(F)SUPPORT (S)SOPORTE	1			
	[21] 09100-10004	(E)BOLT-HEXAGON (D)SCHRAUBE	6	M	B	B	B	.	.	O		(F)BOULON (S)PERNO	1			
	[22] 09401-15401	(E)CLIP (D)KLEMME	6	.	B	B	B	.	.	O		(F)ATTACHE (S)GRAPA	6			
	[23] 09401-22401	(E)CLIP (D)KLEMME	6	.	B	B	B	.	.	O		(F)ATTACHE (S)GRAPA	4			
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

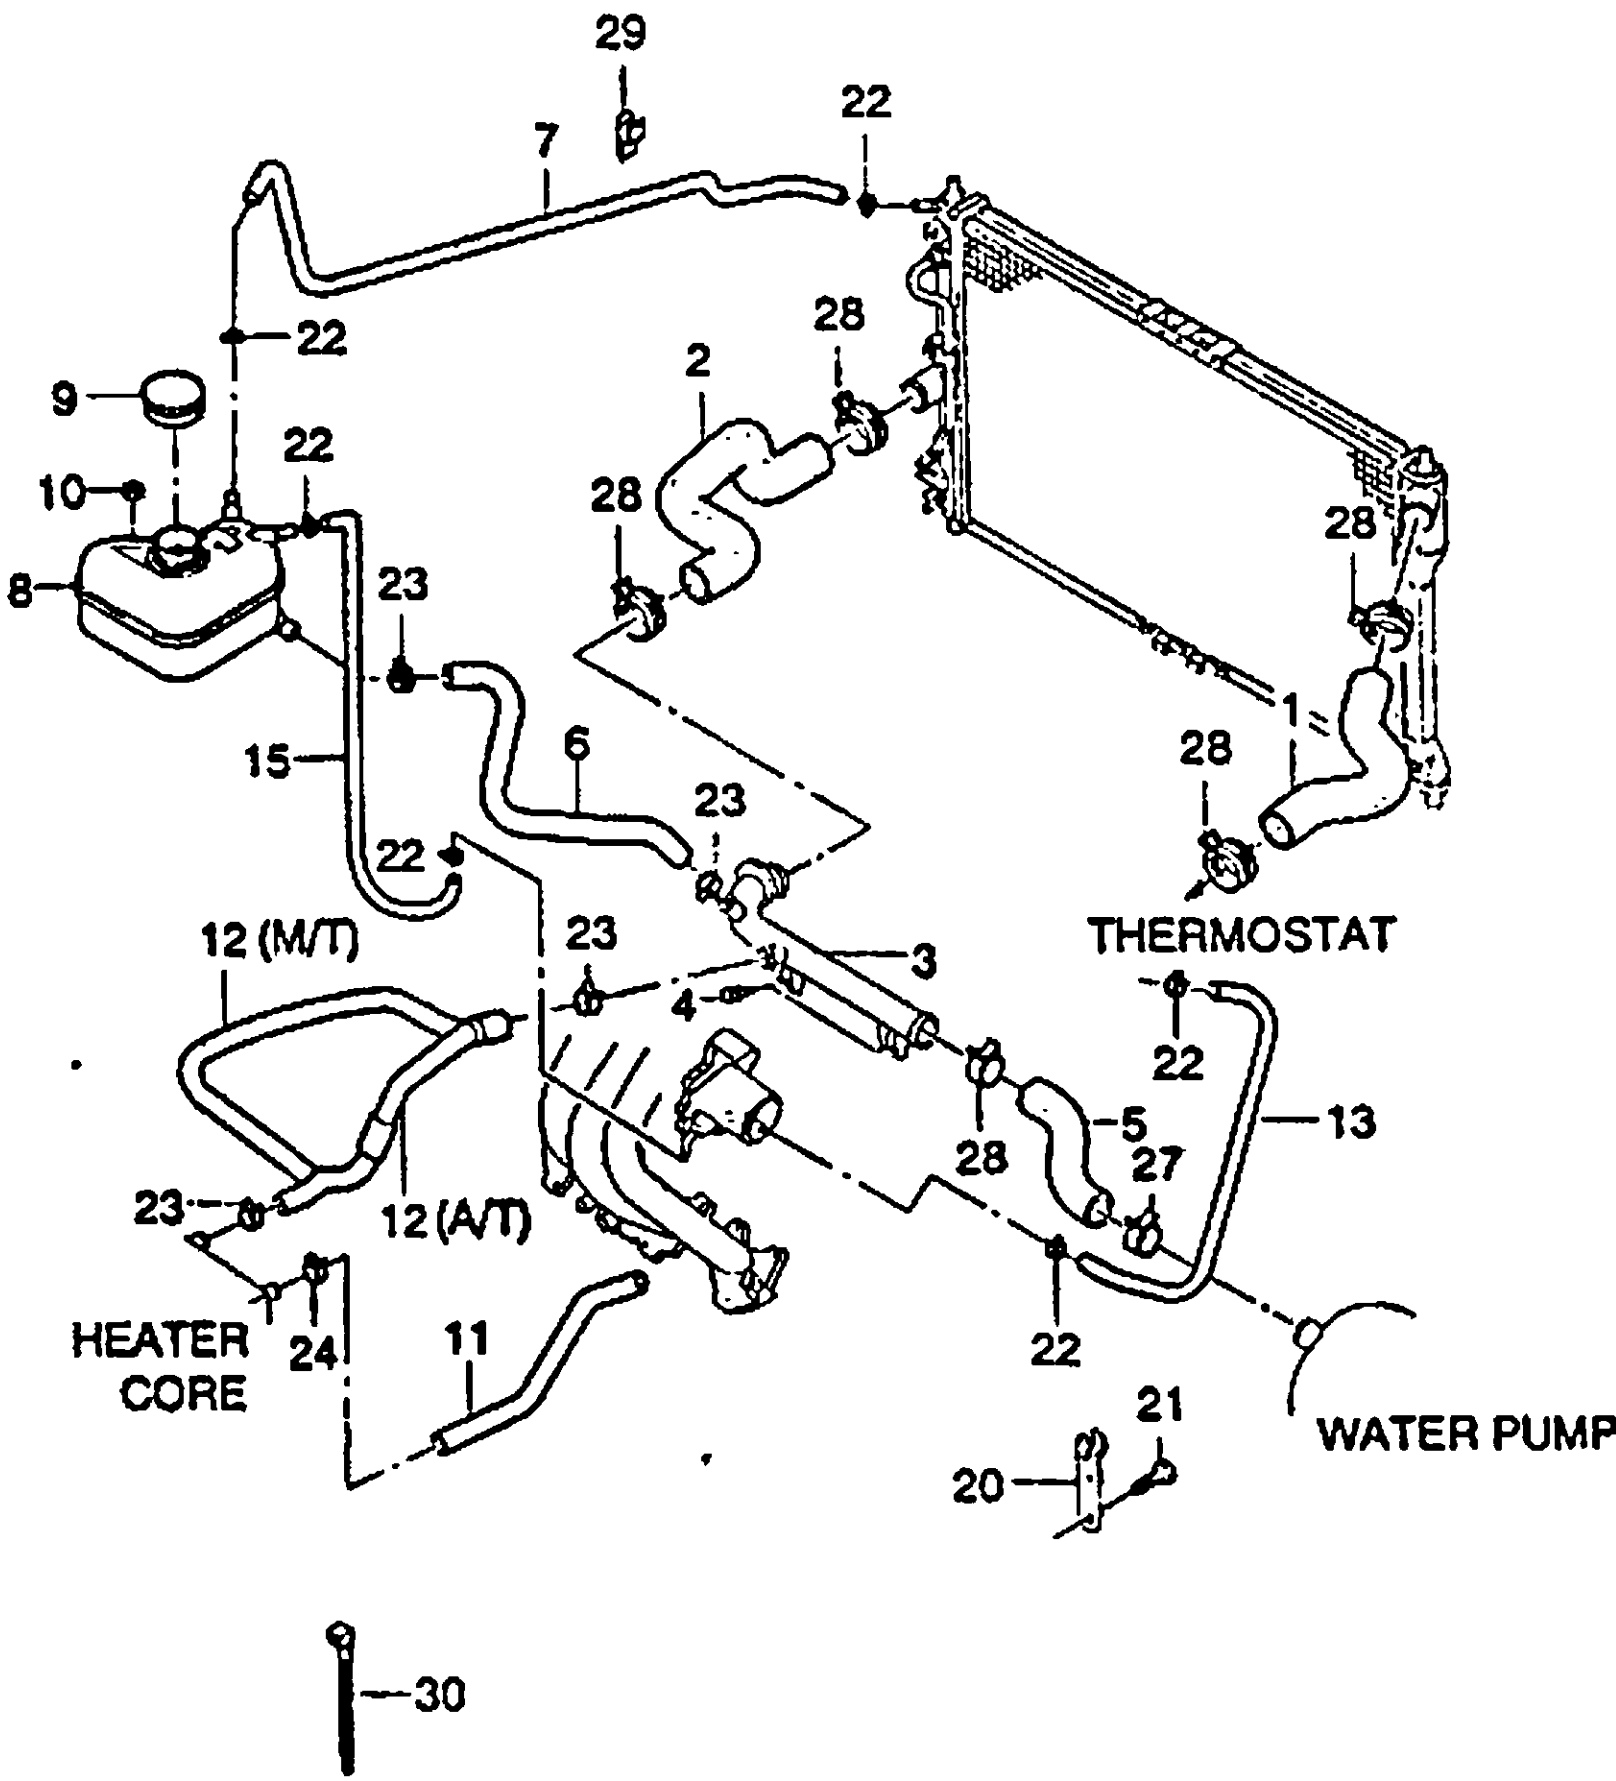


KEY NO.			PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[24] 09401-23402	(E)CLIP (D)KLEMME	6	.	B	B	B	.	.	.	O		(F)ATTACHE (S)GRAPA 2			
	[27] 09401-35401	(E)CLIP (D)KLEMME	6	.	B	B	B	.	.	.	O		(F)ATTACHE (S)GRAPA 1			
	[28] 09401-38401	(E)CLIP (D)KLEMME	6	.	B	B	B	.	.	.	O		(F)ATTACHE (S)GRAPA 5			
	[29] 09408-00074	(E)CLIP (D)KLEMME	6	.	B	B	B	.	.	.	O		(F)ATTACHE (S)GRAPA 1			
	[30] 09286974	(E)STRAP-MOUNTING (D)BAND,MONTAGE	6	.	B	B	B	.	.	.	O		(F)BRETELLE-MONTAGE (S)BRIDA-MONTAJE 1			
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

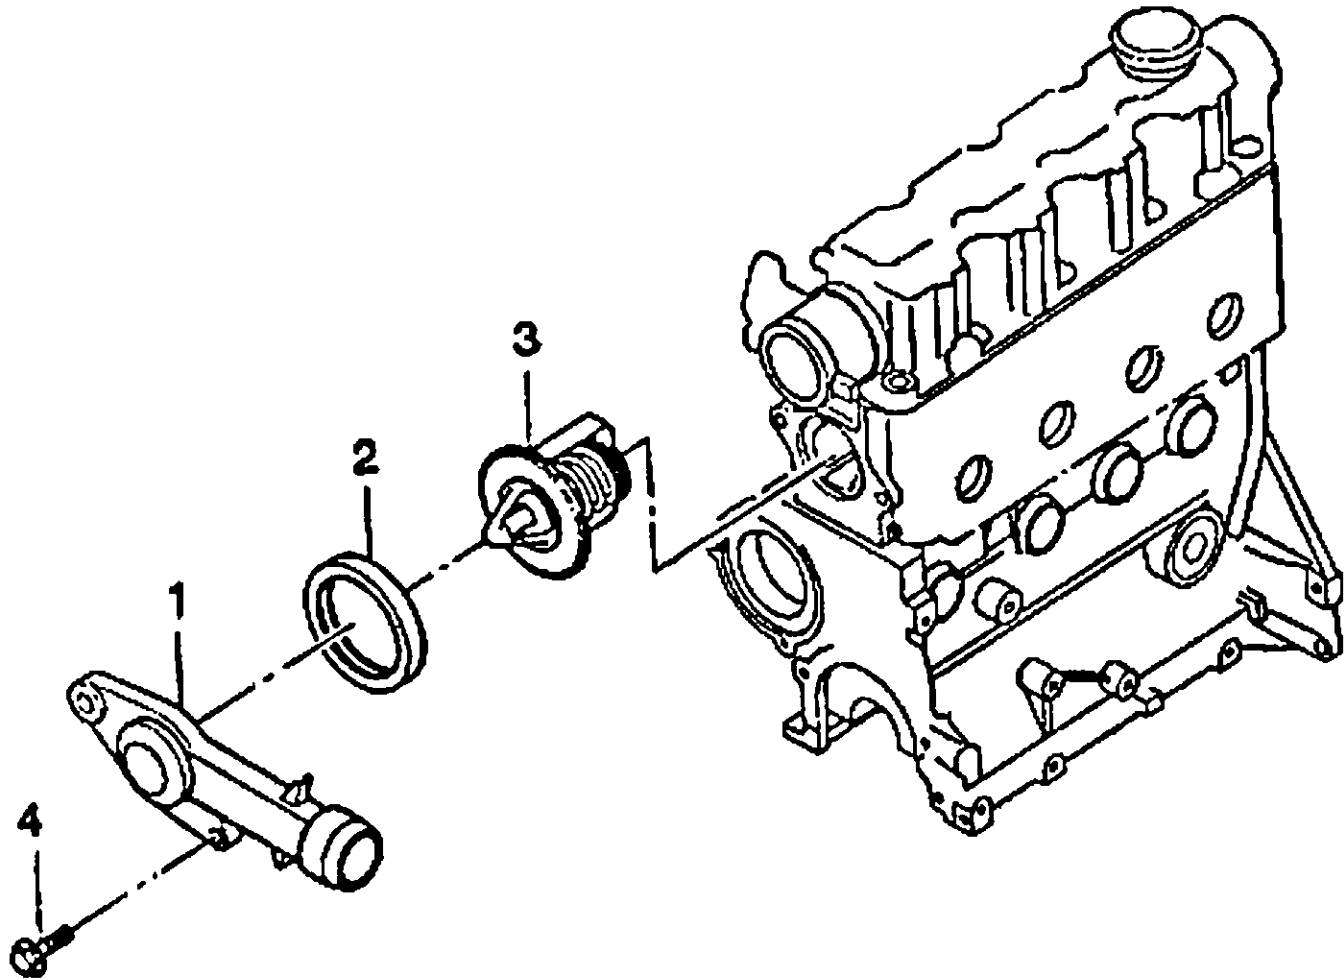


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01] 96180324	(E)HOUSING-THERMOSTAT (D)GEHÄUSE THERMOSTAT	Y	.	B	B	B	S	S	S		(F)LOGEMENT-THERMOSTAT (S)CARCASA-TERMOSTATO	1			
	[02] 90096383	(E)RING-THERMO.HOUSING SEAL (D)RING,DICHTUNG	Y	.	B	B	B	S	S	S		(F)ANNEAU (S)ANILLO-SELLO	1			
	[03] 96143939	(E)THERMOSTAT A (D)THERMOSTAT	Y	.	B	B	B	S	S	S		(F)THERMOSTAT (S)TERMOSTATO	1			
	[04] 09117-08009	(E)BOLT (D)SCHRAUBE	Y	.	B	B	B	S	S	S		(F)BOULON (S)PERNO	2			

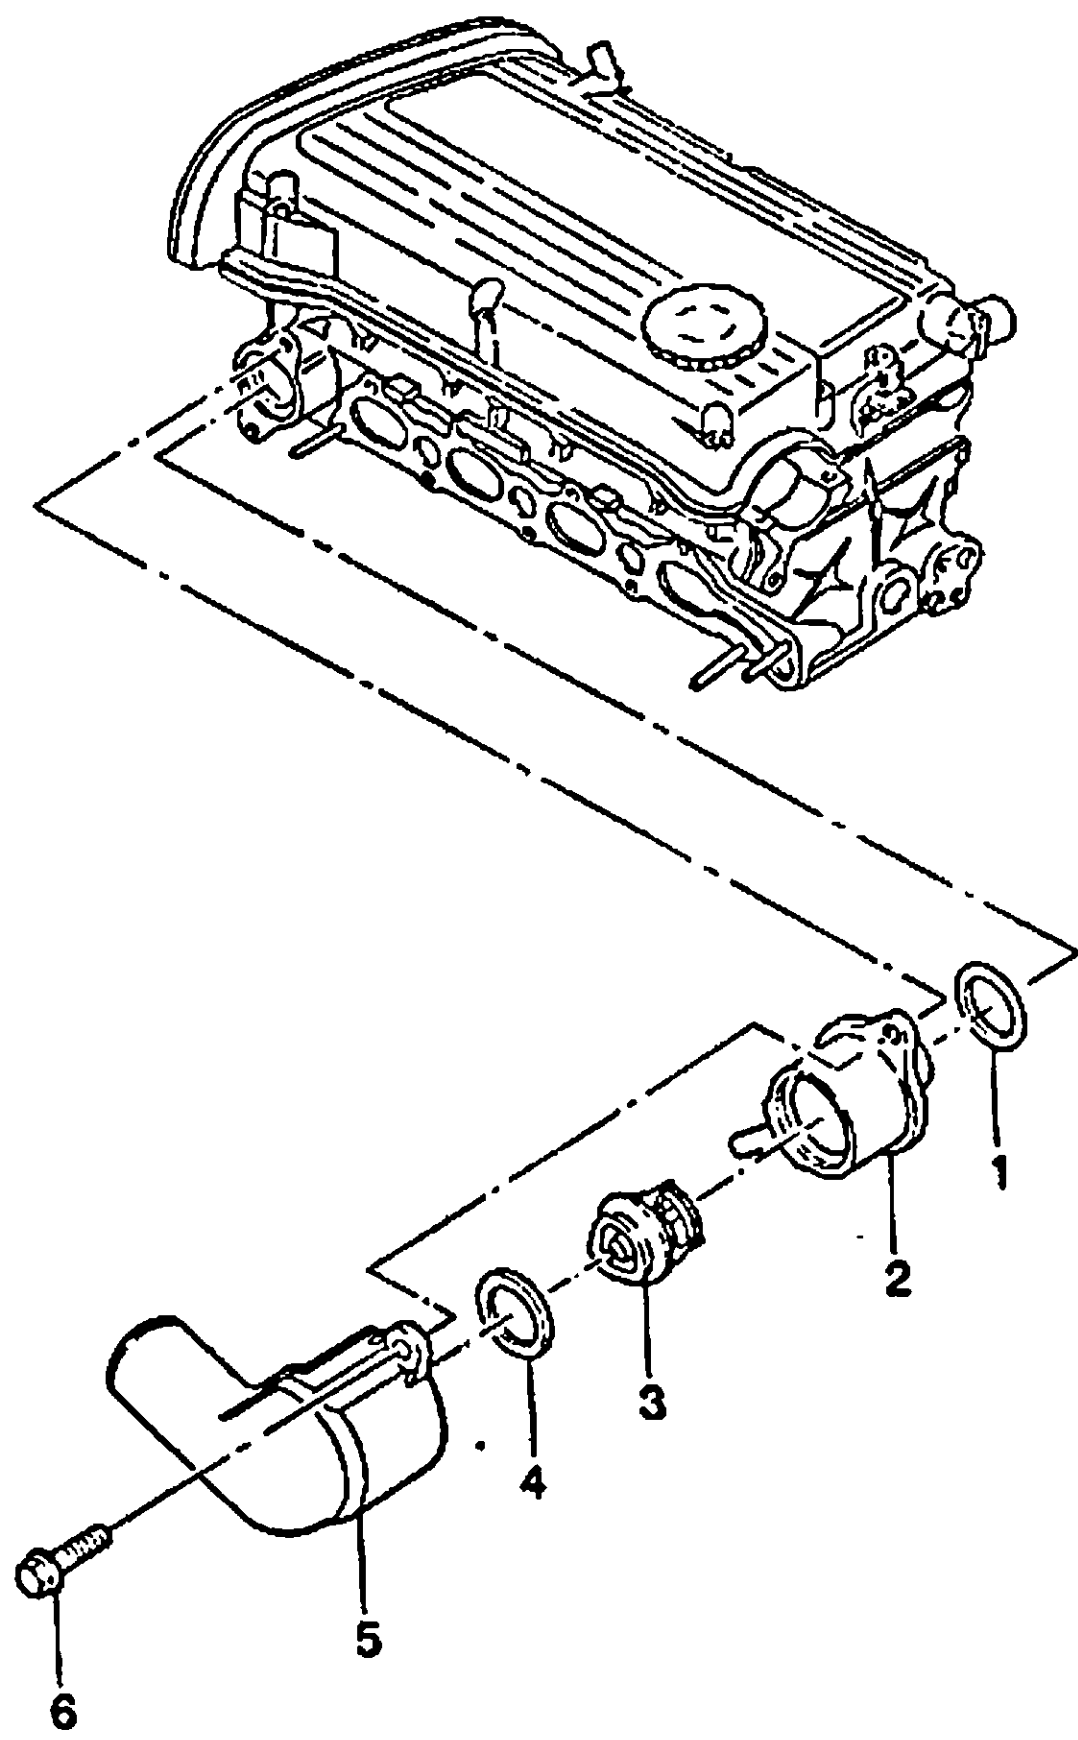


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S S	S S
	[01] 96143112	(E)RING-THERMO COVER SEAL (D)RING,DICHTUNG 6 . B B B . . O									(F)ANNEAU (S)ANILLO-SELLO 1					
	[02] 96180615	(E)ADAPTER-THERMOSTAT (D)ADAPTER,THERMOSTAT 6 . B B B . . O									(F)ADAPTATEUR-THERMOSTAT (S)ADAPTADOR-TERMOSTATO 1					
	[03] 96143939	(E)THERMOSTAT A (D)THERMOSTAT 6 . B B B . . O									(F)THERMOSTAT (S)TERMOSTATO 1					
	[04] 90096383	(E)RING-THERMO HOUSING SEAL (D)RING,DICHTUNG 6 . B B B . . O									(F)ANNEAU (S)ANILLO-SELLO 1					
	[05] 96130992	(E)COVER-THERMOSTAT (D)DECKEL,THERMOSTAT 6 . B B B . . O									(F)COUVERCLE-THERMOSTAT (S)CUBIERTA-TERMOSTATO 1					
	[06] 09117-08009	(E)BOLT (D)SCHRAUBE 6 . B B B . . O									(F)BOULON (S)PERNO 2					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

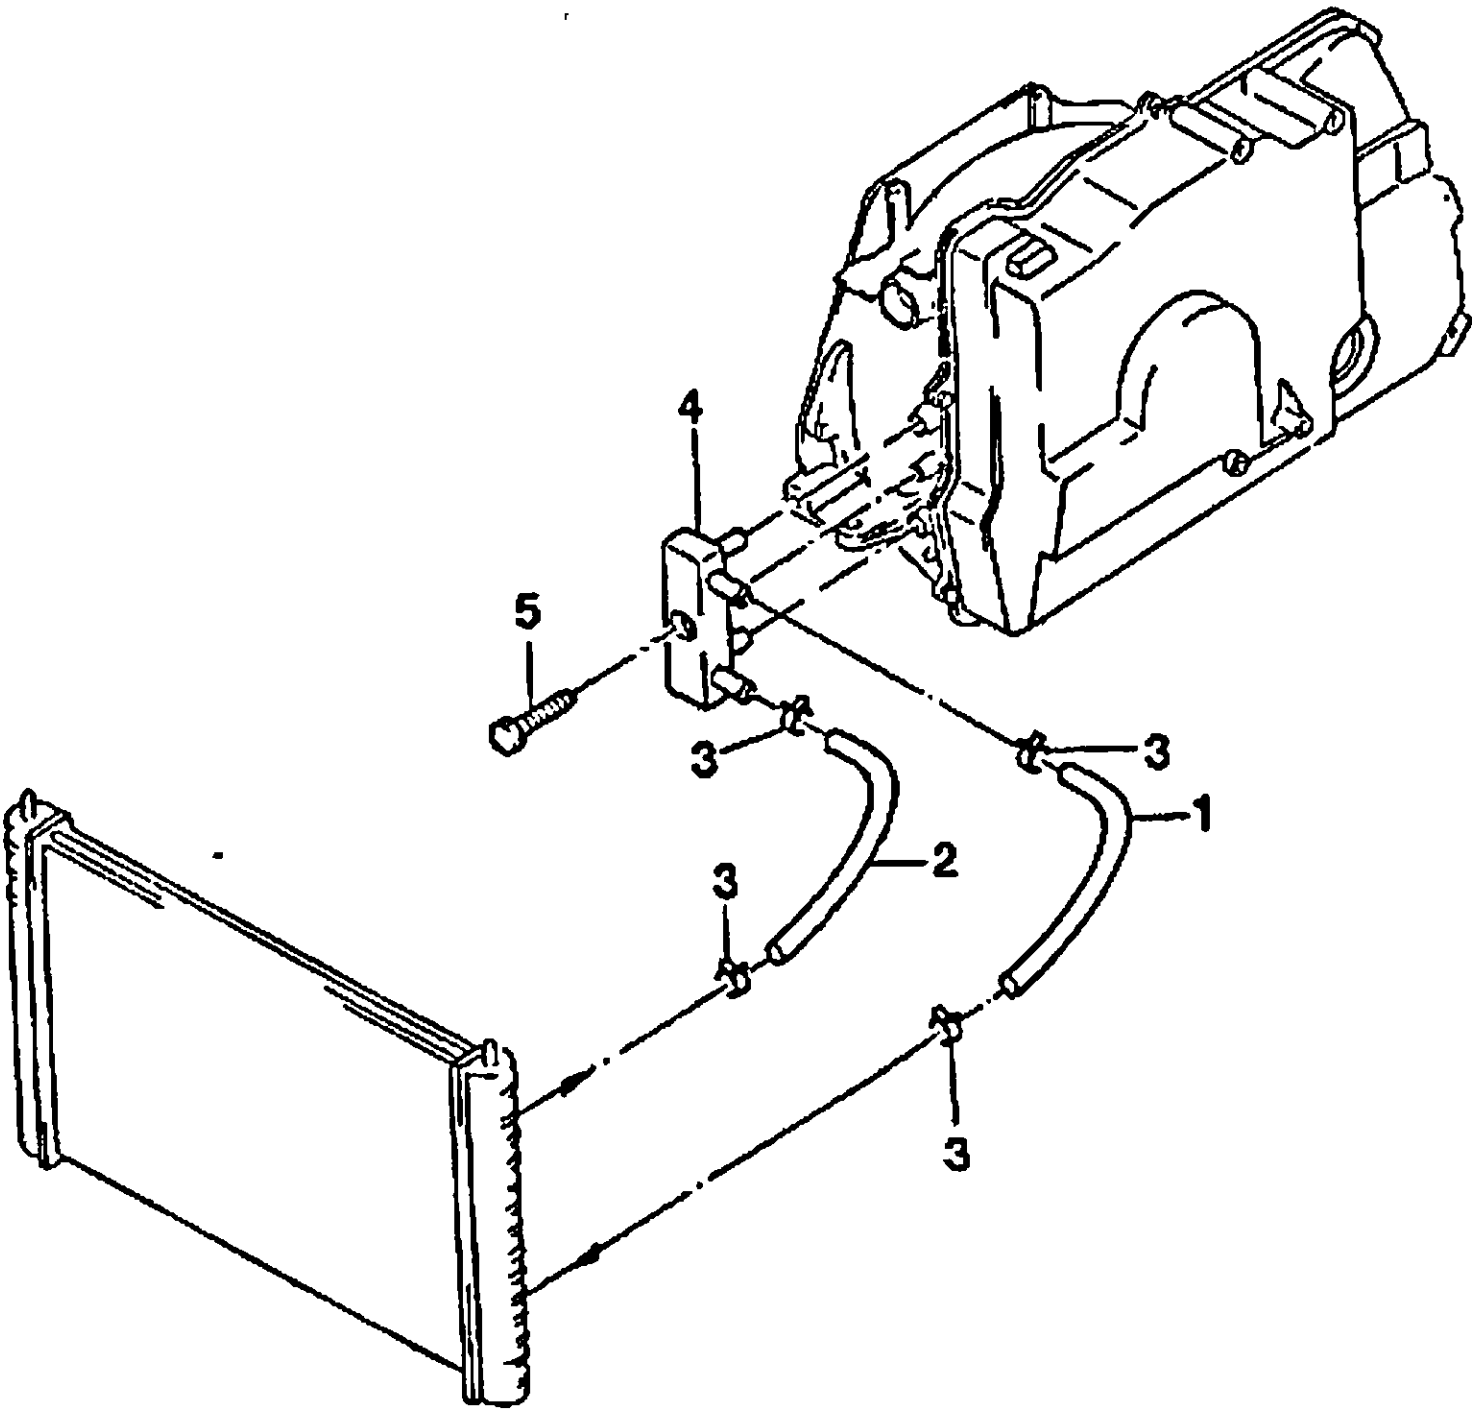


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S E								S X
	[01] 96246287	(E)HOSE-OIL COOLER,OUTLET (D)SCHLAUCH	.	A	B	B	B	O	O	O		(F)TUYAU (S)MANGUERA	1	260mm		
	[02] 96246293	(E)HOSE-OIL COOLER,INLET (D)SCHLAUCH	.	A	B	B	B	O	O	O		(F)TUYAU (S)MANGUERA	1	200mm		
	[03] 09402-16503	(E)CLAMP (D)KLAMMER										(F)PINCE (S)ABRAZADERA		NOT APPLIED		
	[04] 09402-16502	(E)BLOCK-OIL COOLER,REAR (D)BLOCK	.	A	B	B	B	O	O	O		(F)BLOC (S)BLOQUE	4			
	[05] 96245950	(E)BOLT-HEXAGON (D)SCHRAUBE	.	A	B	B	B	O	O	O		(F)BOULON (S)PERNO	1			
	01117-06203	.	A	B	B	B	O	O	O	O			1			
ENG(ENGINE)		T/A(TRANSAXLE)					BODY TYPE									
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK									

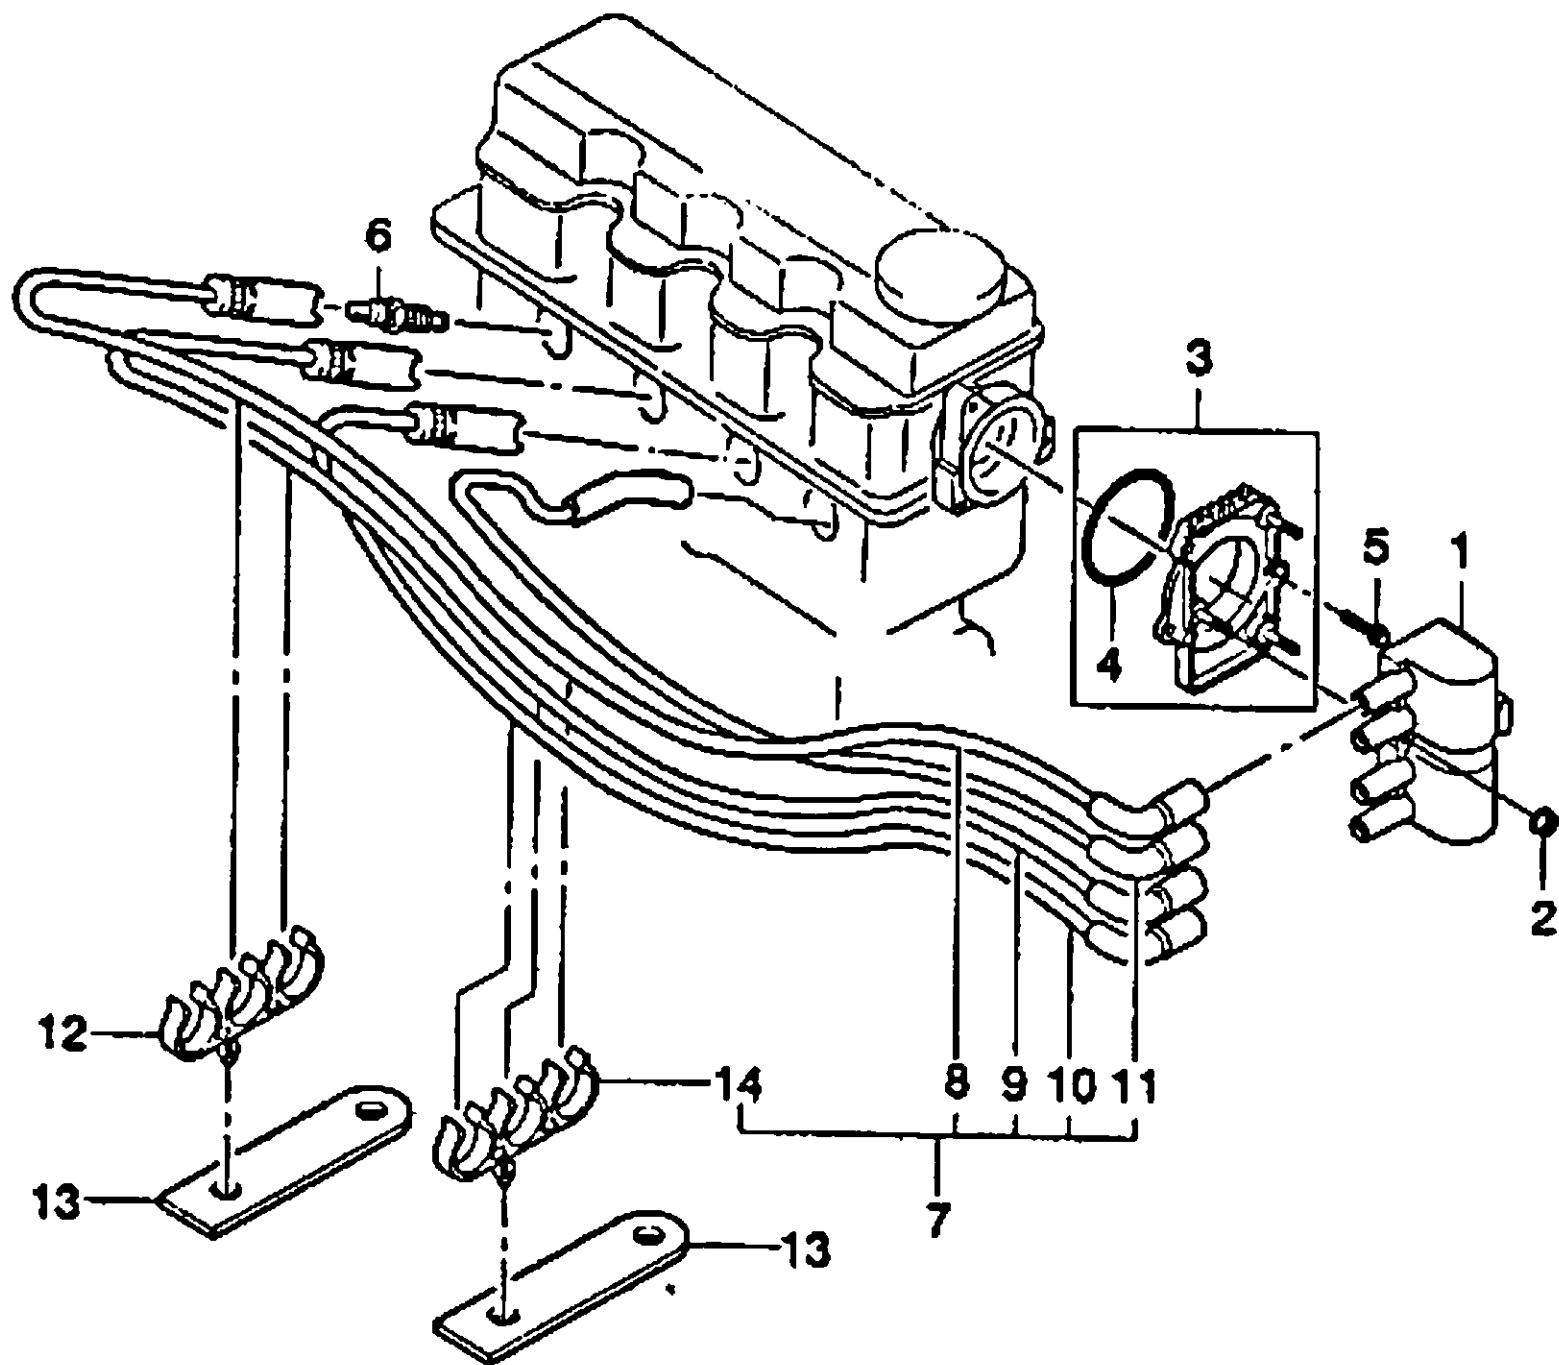

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E T N / G A	BODY			LEVEL					FROM	TO			
			4 N	3 H	6 H	S	S								S
	[01] 96350585	(E)COIL-DIS (D)WICKLUNG,ZÜNDUNG	Y	B	B	B	S	S	S		(F)BOBINE-ALLUMAGE (S)BOBINA-ARRANQUE	1			
	[02] 08316-25063	(E)NUT-HEXAGON FLANGE (D)MUTTER	Y	B	B	B	S	S	S		(F)ECROU (S)TUERCA	3			
	[03] 96351644	(E)BRACKET A-DIS (D)TRÄGER	Y	B	B	B	S	S	S		(F)SUPPORT (S)SOPORTE	1			
	[04] 96351738	(E)ORING (D)O RING	Y	B	B	B	S	S	S		(F)JOINT TORIQUE (S)ANILLO EN O	1			
	[05] 01517-06203	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE	Y	B	B	B	S	S	S		(F)BOULON (S)PERNO	3	970804		
O	01517-06163	(E)PLUG-SPARK (D)ZÜNDKERZE	Y	B	B	B	S	S	S		(F)BOUGIE (S)TAPON-BUJIA	3	970804		
	[06] 96110493	(E)CABLE SET- HIGH TENSION (D)VERDRAHTUNG,HOCHSPANNUNG	Y	B	B	B	S	S	S		(F)TROUSSE CABLES (S)JUEGO DE ALAMBRE	4			
	[07] 96305387	(E)CABLE- HIGH TENSION,#1 (D)VERDRAHTUNG	Y	B	B	B	S	S	S		(F)CABLES (S)ALAMBRE	1		SW	
	[08] 96233409	(E)CABLE- HIGH TENSION,#2 (D)VERDRAHTUNG	Y	B	B	B	S	S	S		(F)CABLES (S)ALAMBRE	1		NO. 1	
	[09] 96233410	(E)CABLE- HIGH TENSION,#2 (D)VERDRAHTUNG	Y	B	B	B	S	S	S		(F)CABLES (S)ALAMBRE	1		NO. 2	
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

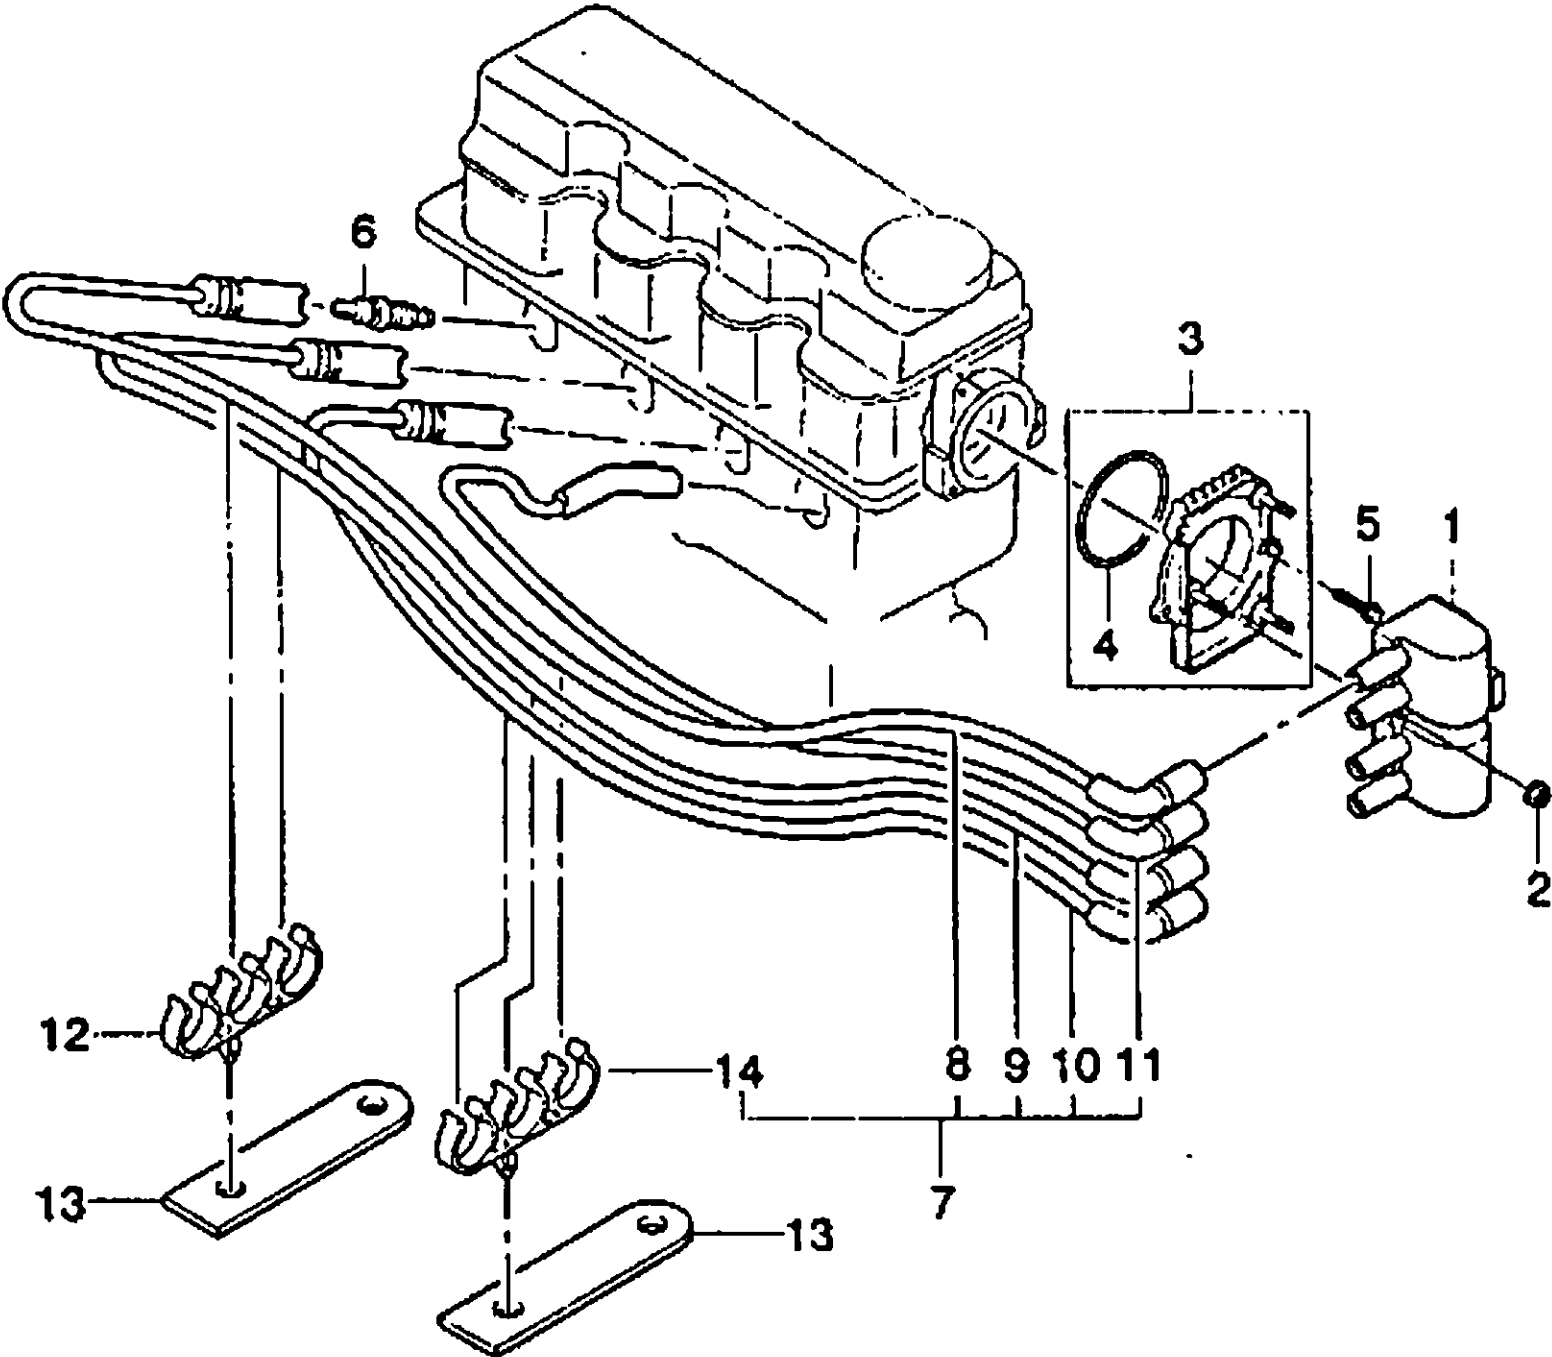


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S E
	[10] 96233411	(E)CABLE- HIGH TENSION,#3 (D)VERDRAHTUNG	Y	.	B	B	B	S	S	S			(F)CABLES (S)ALAMBRE 1	NO. 3	
	[11] 96233412	(E)CABLE- HIGH TENSION,#4 (D)VERDRAHTUNG	Y	.	B	B	B	S	S	S			(F)CABLES (S)ALAMBRE 1	NO. 4	
	[12] 90320345	(E)CLIP-CABLE (D)KLEMME	Y	.	B	B	B	S	S	S			(F)ATTACHE (S)GRAPA 1		
	[13] 90320342	(E)BRACKET-CABLE (D)TRÄGER	Y	.	B	B	B	S	S	S			(F)SUPPORT-CABLE (S)SOPORTE-ALAMBRE 2		
	[14] 09408-00076	(E)CLIP-CABLE (D)KLEMME,ANLASSER-KBEL	Y	.	B	B	B	S	S	S			(F)ATTACHE-CABLE D'ALLUMAGE (S)GRAPA 1		
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE									
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK									

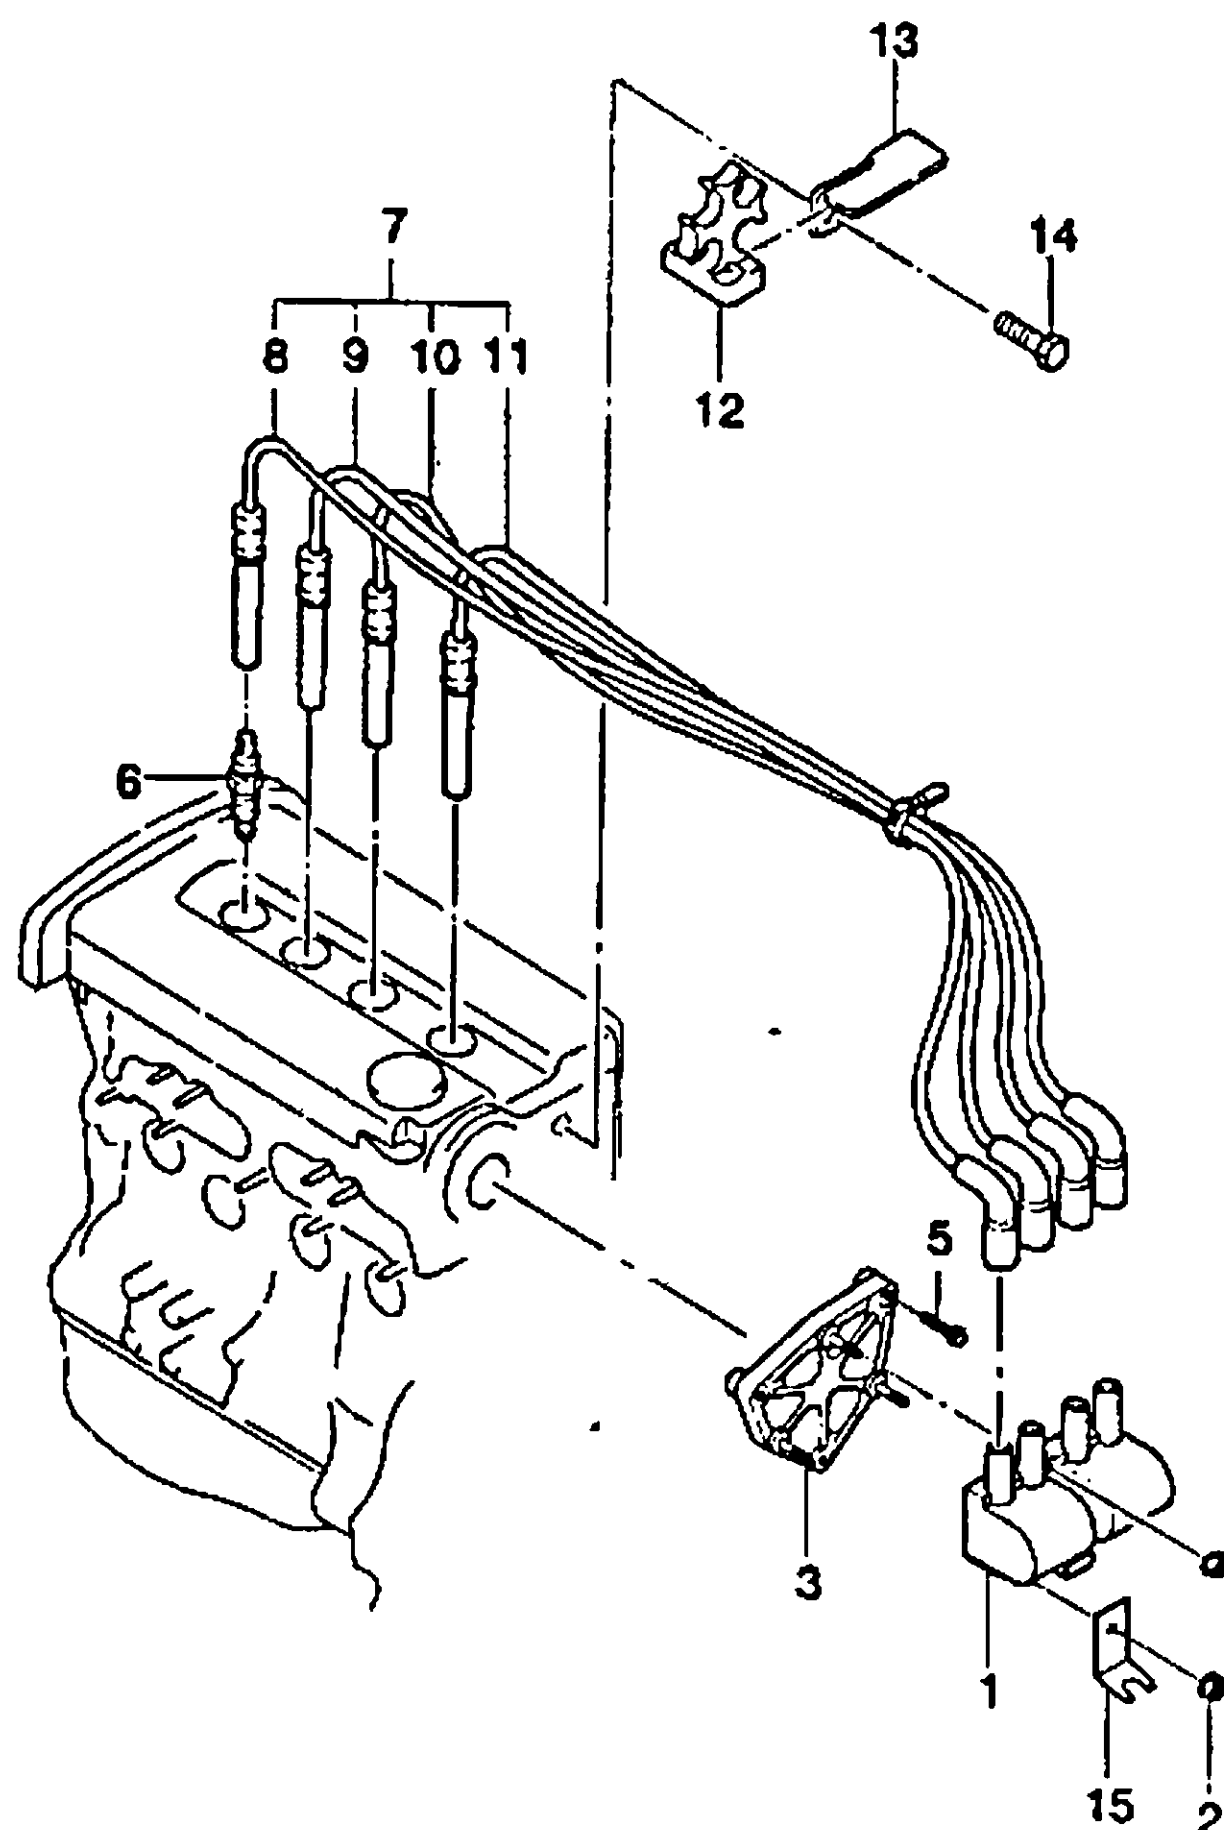


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)COIL-DIS									(F)BOBINE-ALLUMAGE				
	96350585	(D)WICKLUNG,ZÜNDUNG									(S)BOBINA-ARRANQUE				
	[02]	6 . B B B . . O									1				
		(E)NUT-HEXAGON FLANGE									(F)ECROU				
	08316-25063	(D)MUTTER									(S)TUERCA				
	[03]	6 . B B B . . O									3				
		(E)BRACKET A-DIS									(F)SUPPORT				
	96351676	(D)TRÄGER									(S)SOPORTE				
	[05]	6 . B B B . . O									1				
		(E)BOLT-HEXAGON FLANGE									(F)BOULON				
	01517-06303	(D)SCHRAUBE									(S)PERNO				
	[06]	6 . B B B . . O									3				
		(E)PLUG-SPARK									(F)BOUGIE				
	96130723	(D)ZÜNDKERZE									(S)TAPON-BUJIA				
	[07]	6 . B B B . . O									4				
		(E)CABLE SET- HIGH TENSION									(F)TROUSSE CABLES				
	96211948	(D)VERDRAHTUNG,HOCHSPANNUNG									(S)JUEGO DE ALAMBRE				
	[08]	6 . B B B . . O									1				
		(E)CABLE- HIGH TENSION,#1									(F)CABLES				
	96242624	(D)VERDRAHTUNG									(S)ALAMBRE				
	[09]	6 . B B B . . O									1		NO. 1		
		(E)CABLE- HIGH TENSION,#2									(F)CABLES				
	96233414	(D)VERDRAHTUNG									(S)ALAMBRE				
	[10]	6 . B B B . . O									1		NO. 2		
		(E)CABLE- HIGH TENSION,#3									(F)CABLES				
	96233415	(D)VERDRAHTUNG									(S)ALAMBRE				
	[11]	6 . B B B . . O									1		NO. 3		
		(E)CABLE- HIGH TENSION,#4									(F)CABLES				
		(D)VERDRAHTUNG									(S)ALAMBRE				


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC	M = MANUAL T/A	4 N = 4 DOOR NOTCHBACK
6 = 1.6DOHC	A = AUTOMATIC T/A	3 H = 3 DOOR HATCHBACK
. = COMMON	. = COMMON	5 H = 5 DOOR HATCHBACK

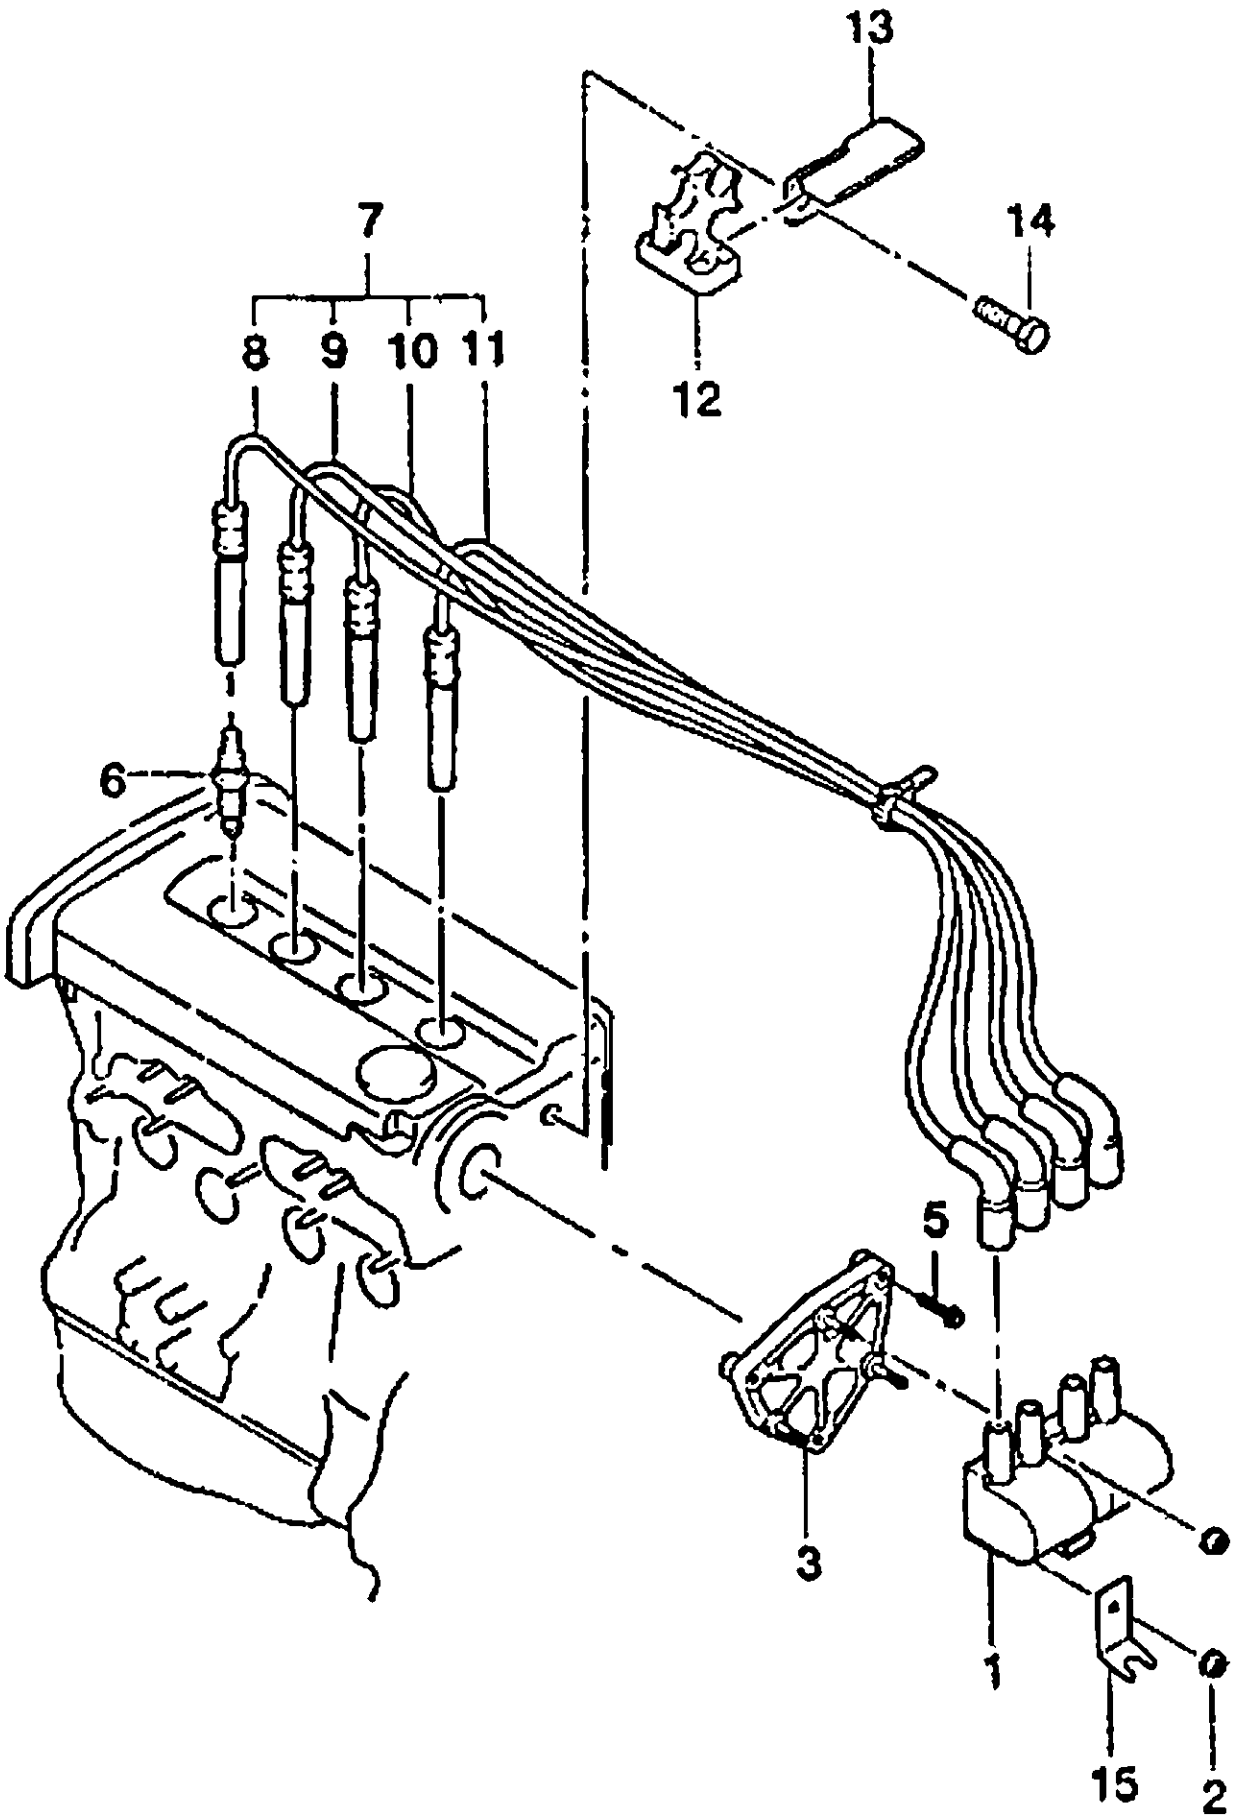


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L I R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S E	S X
	96233416 [12]	6	.	B	B	B	.	.	O		1		NO.4			
		(E)CLIP-STAR (D)KLEMME														
	12065767 [13]	6	.	B	B	B	.	.	O		1					
		(E)BRACKET-CABLE (D)TRÄGER														
	96132971 [14]	6	.	B	B	B	.	.	O		1					
		(E)BOLT-HEXAGON (D)SCHRAUBE														
	01107-06803 [15]	6	.	B	B	B	.	.	O		1					
		(E)BRACKET-OXYGEN SENSOR (D)TRÄGER														
	96239380	6	.	B	B	B	.	.	A	&NN6/NN7	1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

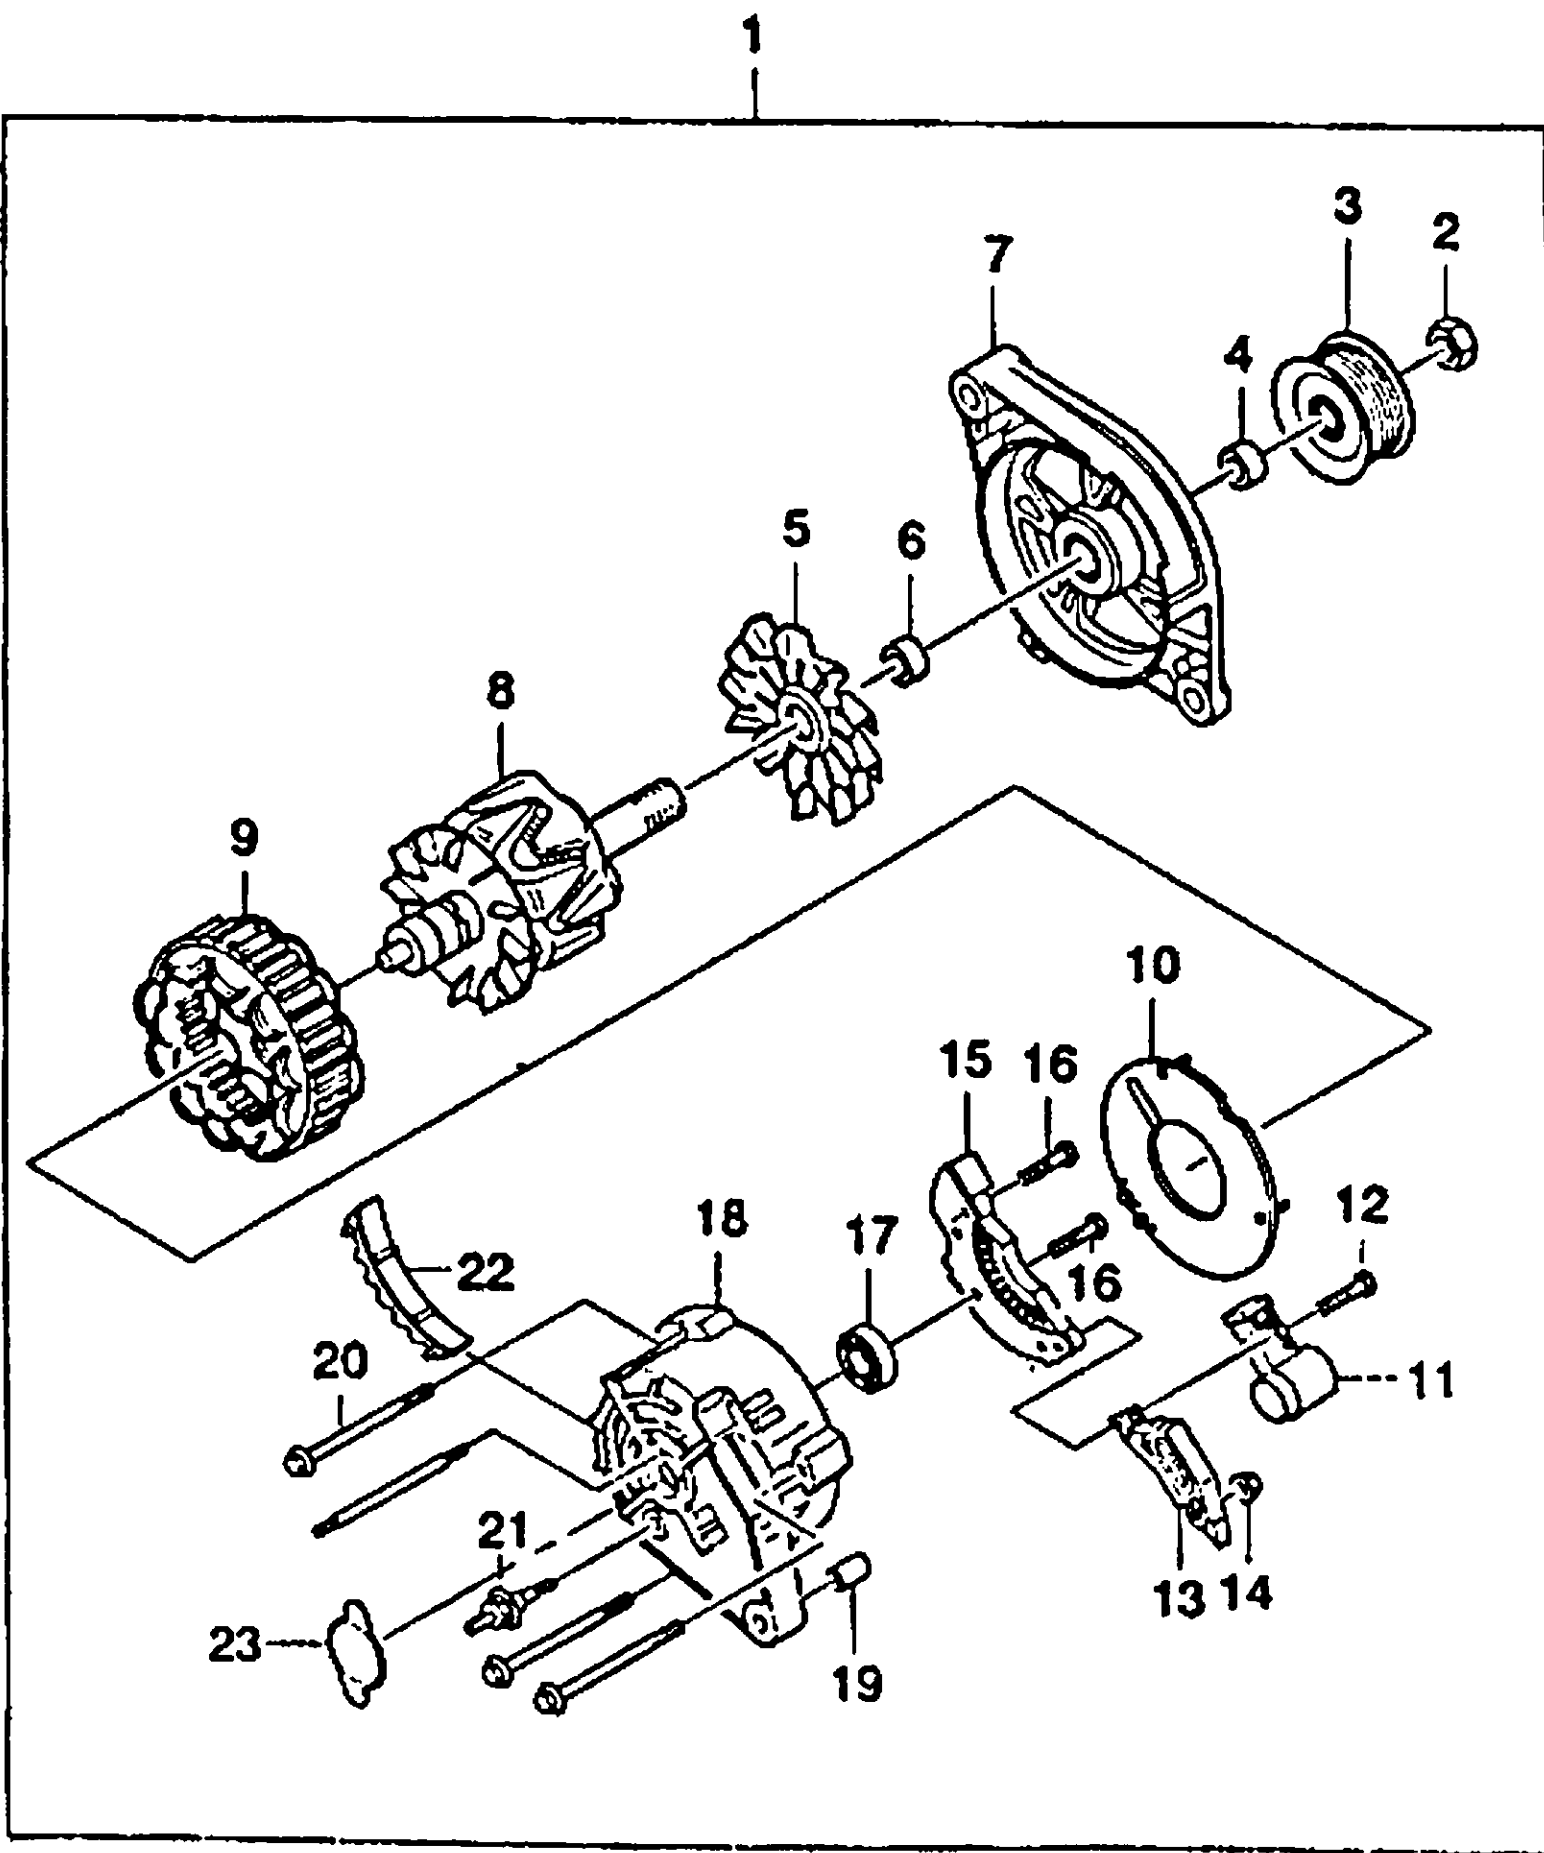


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S								S S	S X
[01]	96303556	(E)ALTERNATOR A (D)WECHSELSTROMGENERATOR	. .	B	B	B	S	S	S	-XHA	1	12V,85A	AW			
[02]	01911324	(E)NUT (D)MUTTER	. .	B	B	B	S	S	S	-XHA	1					
[03]	210811	(E)PULLEY (D)ROLLE	. .	B	B	B	S	S	S	-XHA	1					
[04]	210629	(E)COLLAR (D)KRAGEN(GROß)	. .	B	B	B	S	S	S	-XHA	1					
[05]	210020	(E)FAN (D)BLÄSER	. .	B	B	B	S	S	S	-XHA	1					
[06]	210629	(E)COLLAR (D)KRAGEN(KLEIN)	. .	B	B	B	S	S	S	-XHA	1					
[07]	210667	(E)FRAME&BEARING (D)RAHMEN&LAGER, ANTRIEB ENDE	. .	B	B	B	S	S	S	-XHA	1					
[08]	210933	(E)ROTOR (D)DREHTEIL	. .	B	B	B	S	S	S	-XHA	1					
[09]	210934	(E)STATOR (D)STATOR	. .	B	B	B	S	S	S	-XHA	1					
[10]		(E)BAFFLE (D)DÄMPFER														
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE										
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK										

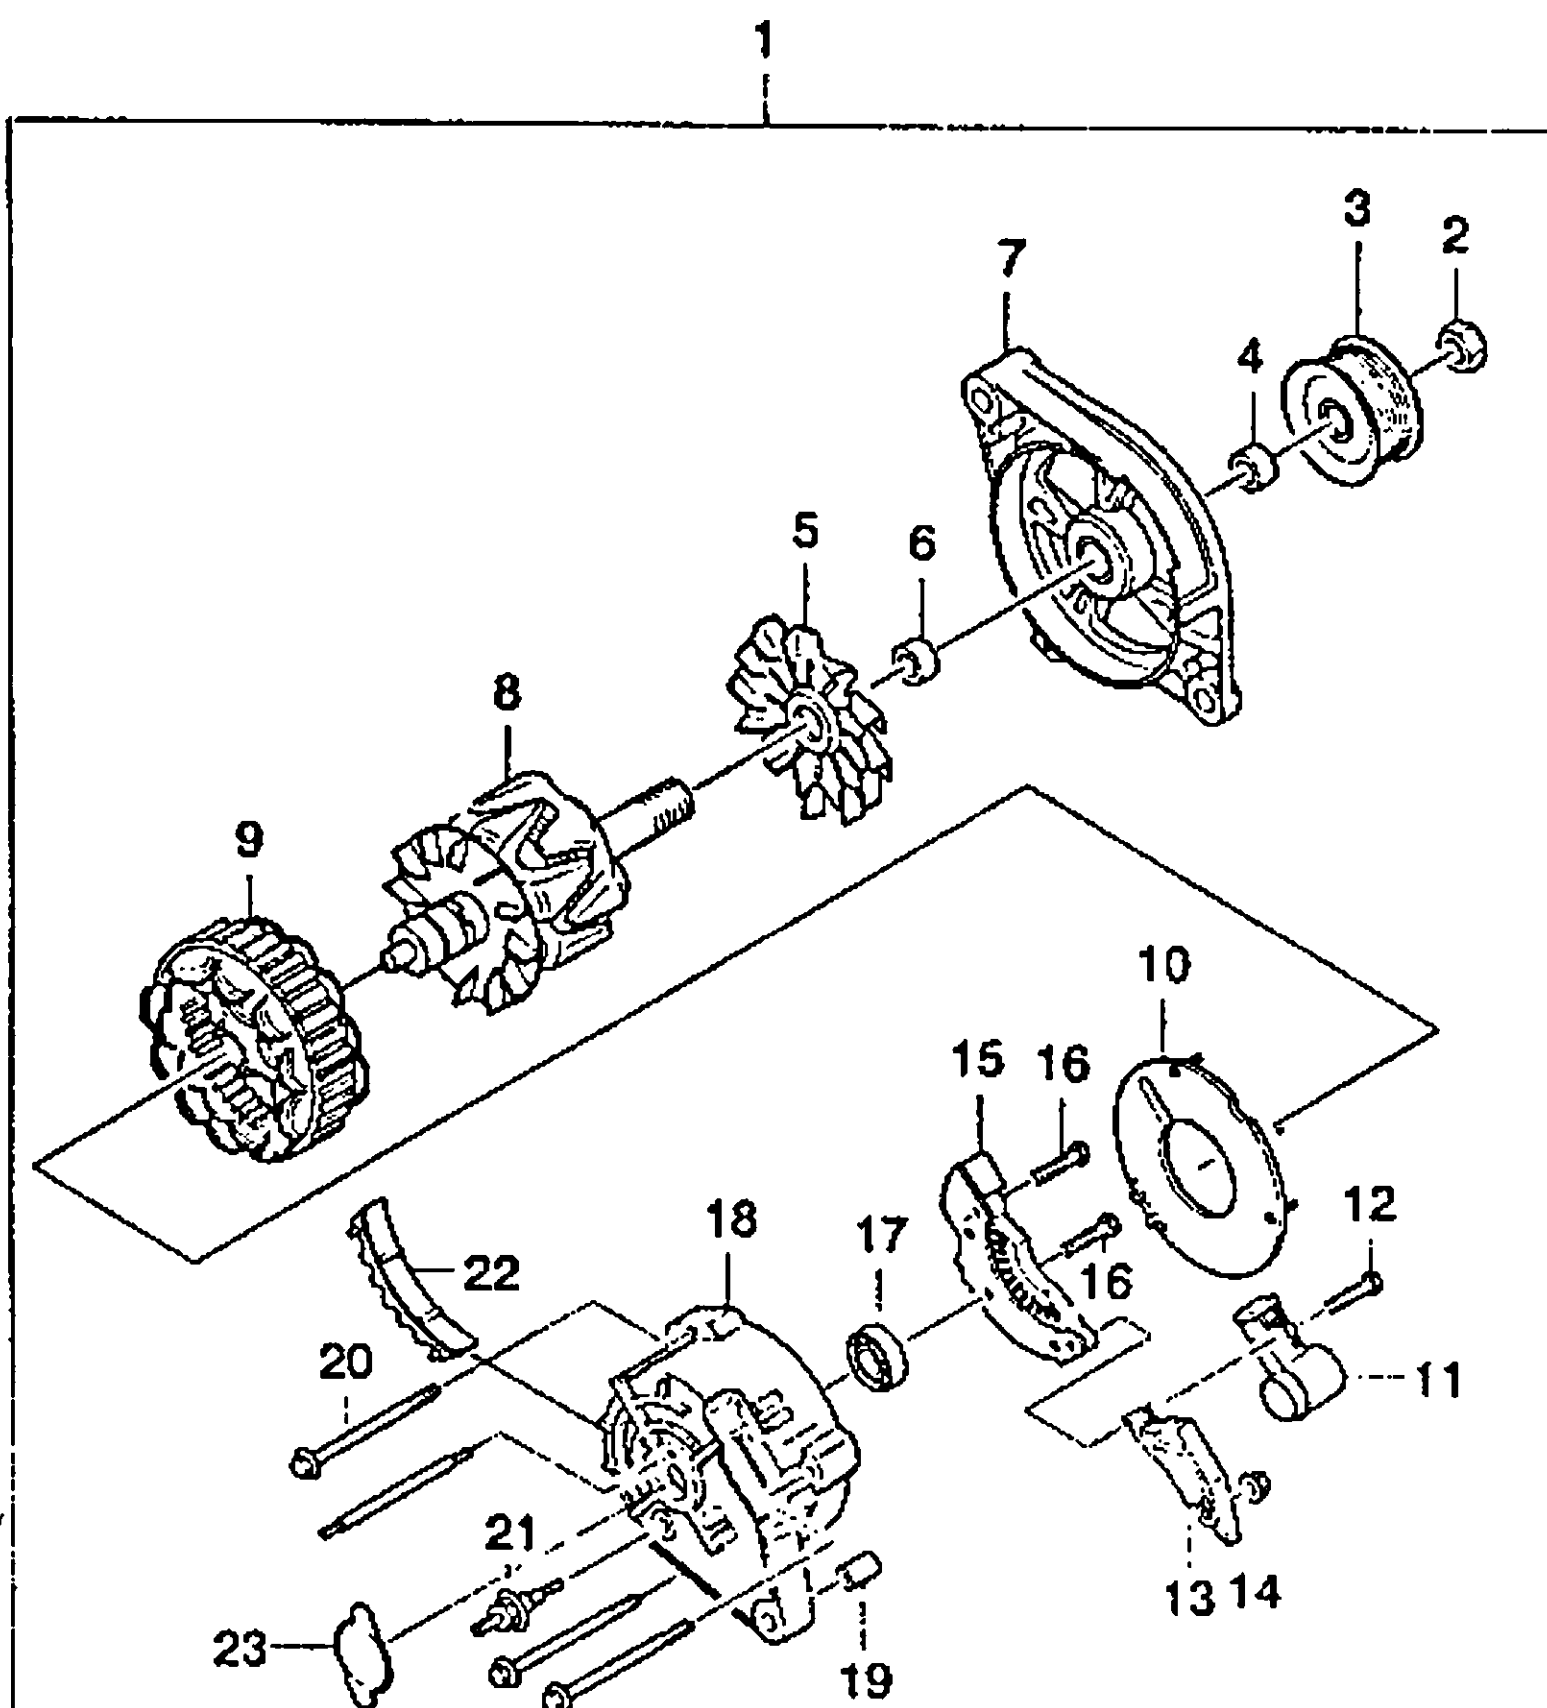

KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	210931	.	.	B	B	B	S	S	S	-XHA		1			
	[11]	(E)BRUSH SET (D)BÜRSTE										(F)BALAI (S)ESCOBILLA			
	210679	.	.	B	B	B	S	S	S	-XHA		1			
	[12]	(E)SCREW (D)SCHRAUBE										(F)VIS (S)TORNILLO			
	01989650	.	.	B	B	B	S	S	S	-XHA		1			
	[13]	(E)REGULATOR (D)REGULATOR										(F)REGULATEUR (S)REGULADOR			
	276010	.	.	B	B	B	S	S	S	-XHA		1			
	[14]	(E)NUT (D)MUTTER										(F)ECROU (S)TUERCA			
	01989649	.	.	B	B	B	S	S	S	-XHA		1			
	[15]	(E)RECTIFIER (D)RICHTER										(F)RECTIFICATEUR (S)RECTIFICADOR			
	267100	.	.	B	B	B	S	S	S	-XHA		1	970813		
O	267300	.	.	B	B	B	S	S	S	-XHA		1	970813		
	[16]	(E)SCREW (D)SCHRAUBE										(F)VIS (S)TORNILLO			
	01981681	.	.	B	B	B	S	S	S	-XHA		3			
	[17]	(E)BEARING-BALL (D)KUGELLAGER										(F)ROULEMENT-BILLE (S)COJINETE DE BOLAS			
	01989646	.	.	B	B	B	S	S	S	-XHA		2			
	[18]	(E)FRAME-SLIP RING END (D)RAHMEN,SCHLEIFRAD-ENDE										(F)CADRE (S)ARMADURA			
	210930	.	.	B	B	B	S	S	S	-XHA		1			
	[19]	(E)BUSHING (D)LAGERFUTTER										(F)MANCHON (S)BUJE DE BOQUILLA			
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

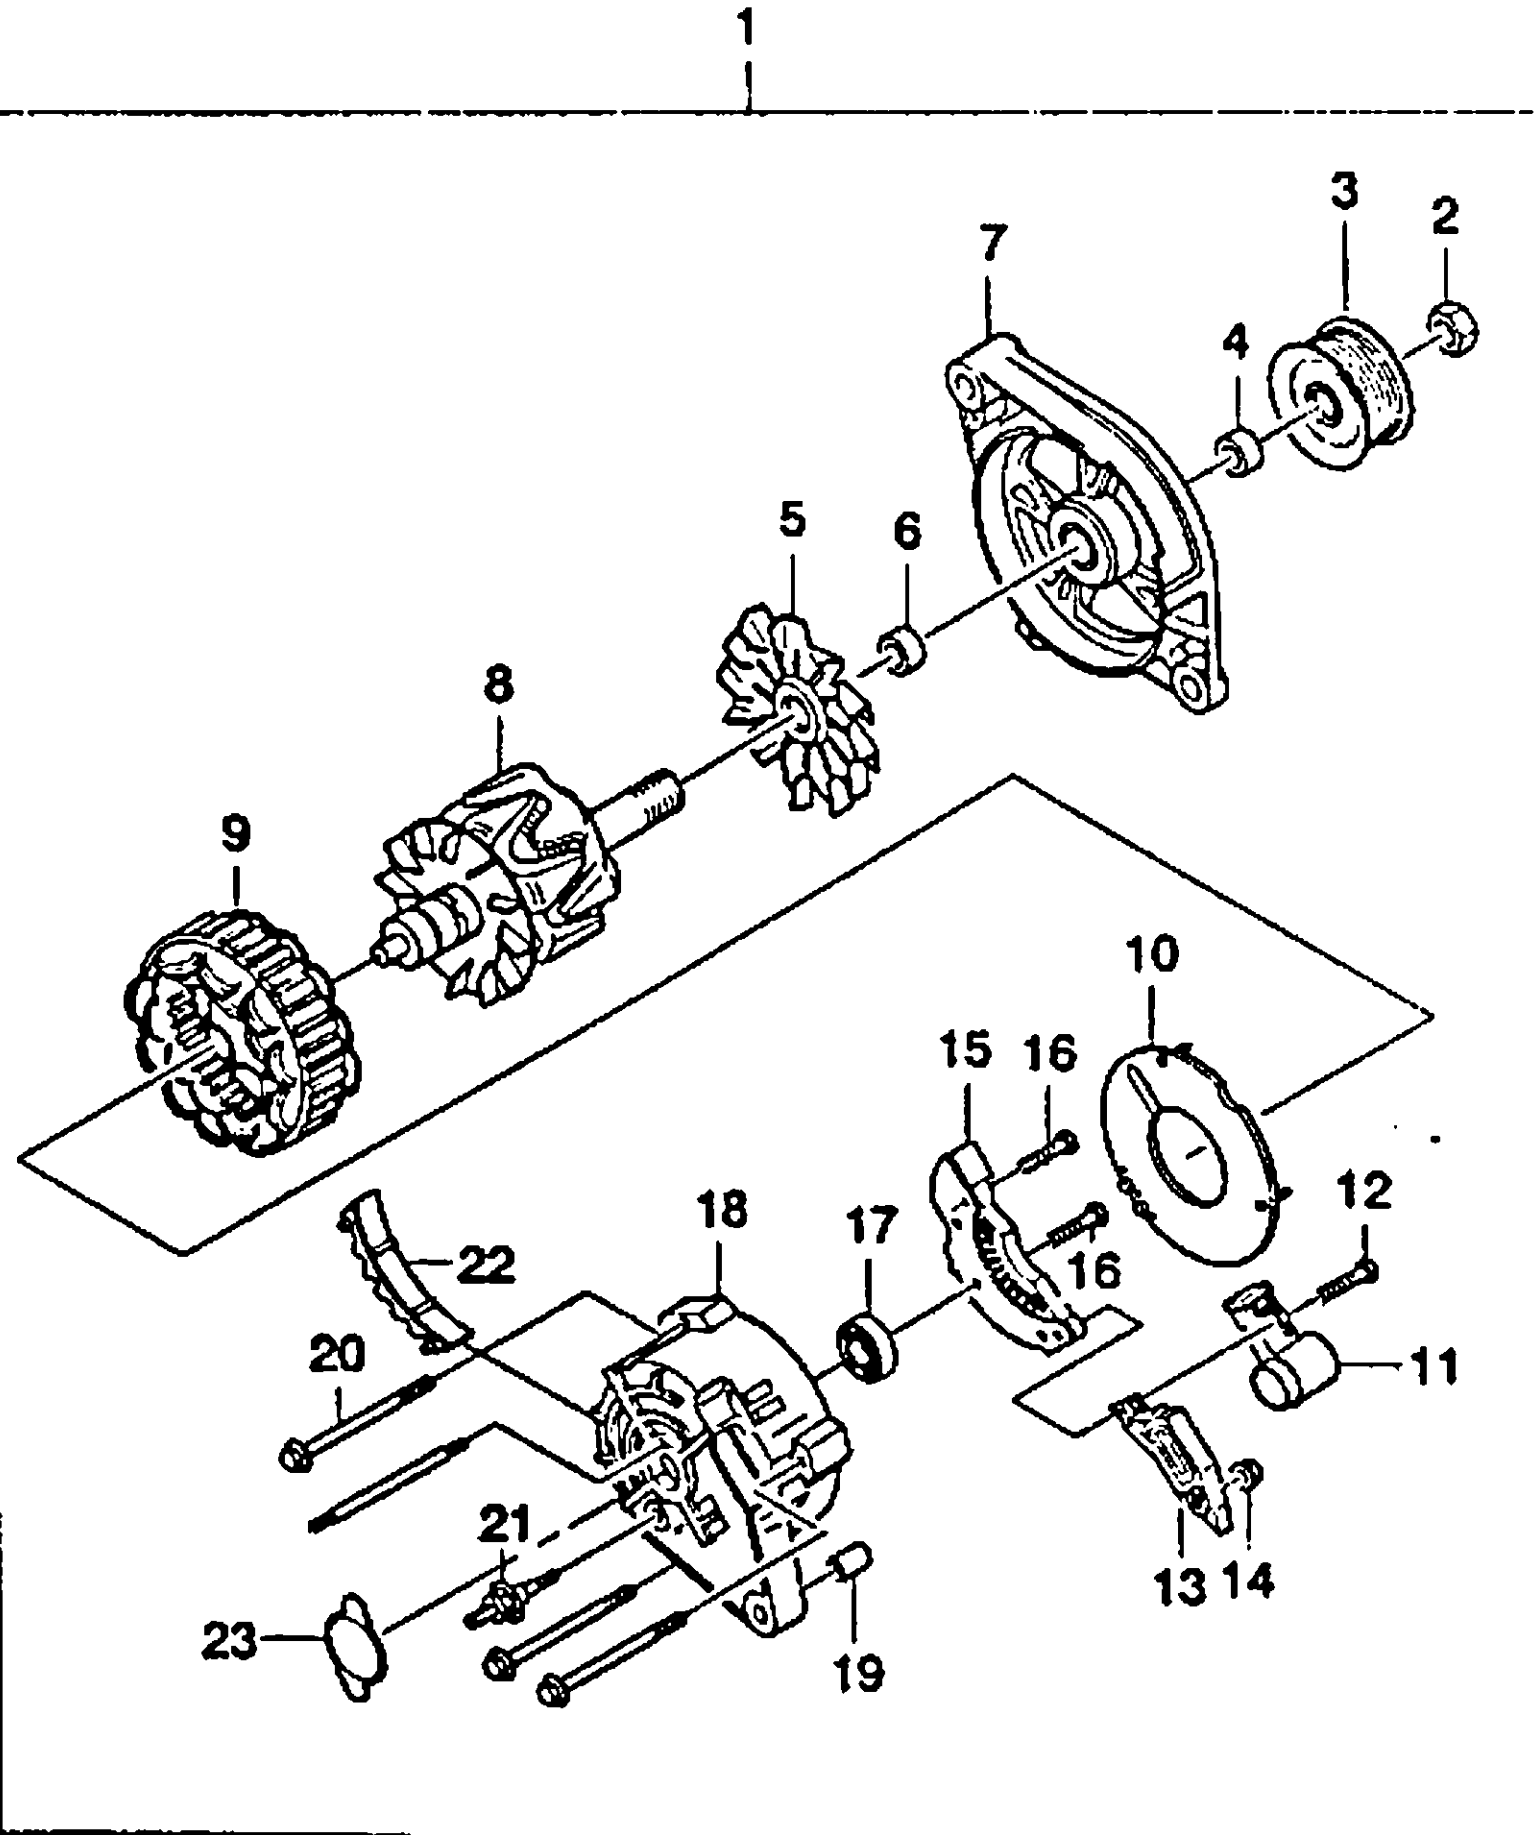

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L I R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S								S S	S S
	10495216	.	.	B	B	B	S	S	S	-XHA	1					
	[20]			(E)BOLT								(F)BOULON				
				(D)SCHRAUBE								(S)PERNO				
	10473999	.	.	B	B	B	S	S	S	-XHA	3					
	[21]			(E)STUD								(F)TOURILLON				
				(D)STEG								(S)TRAVESAÑO				
	211075	.	.	B	B	B	S	S	S	-XHA	1					
	[22]			(E)COVER								(F)CARTER				
				(D)DECKEL								(S)CUBIERTA				
	210932	.	.	B	B	B	S	S	S	-XHA	1					
	[23]			(E)COVER								(F)CARTER				
				(D)DECKEL								(S)CUBIERTA				
	10476121	.	.	B	B	B	S	S	S	-XHA	1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

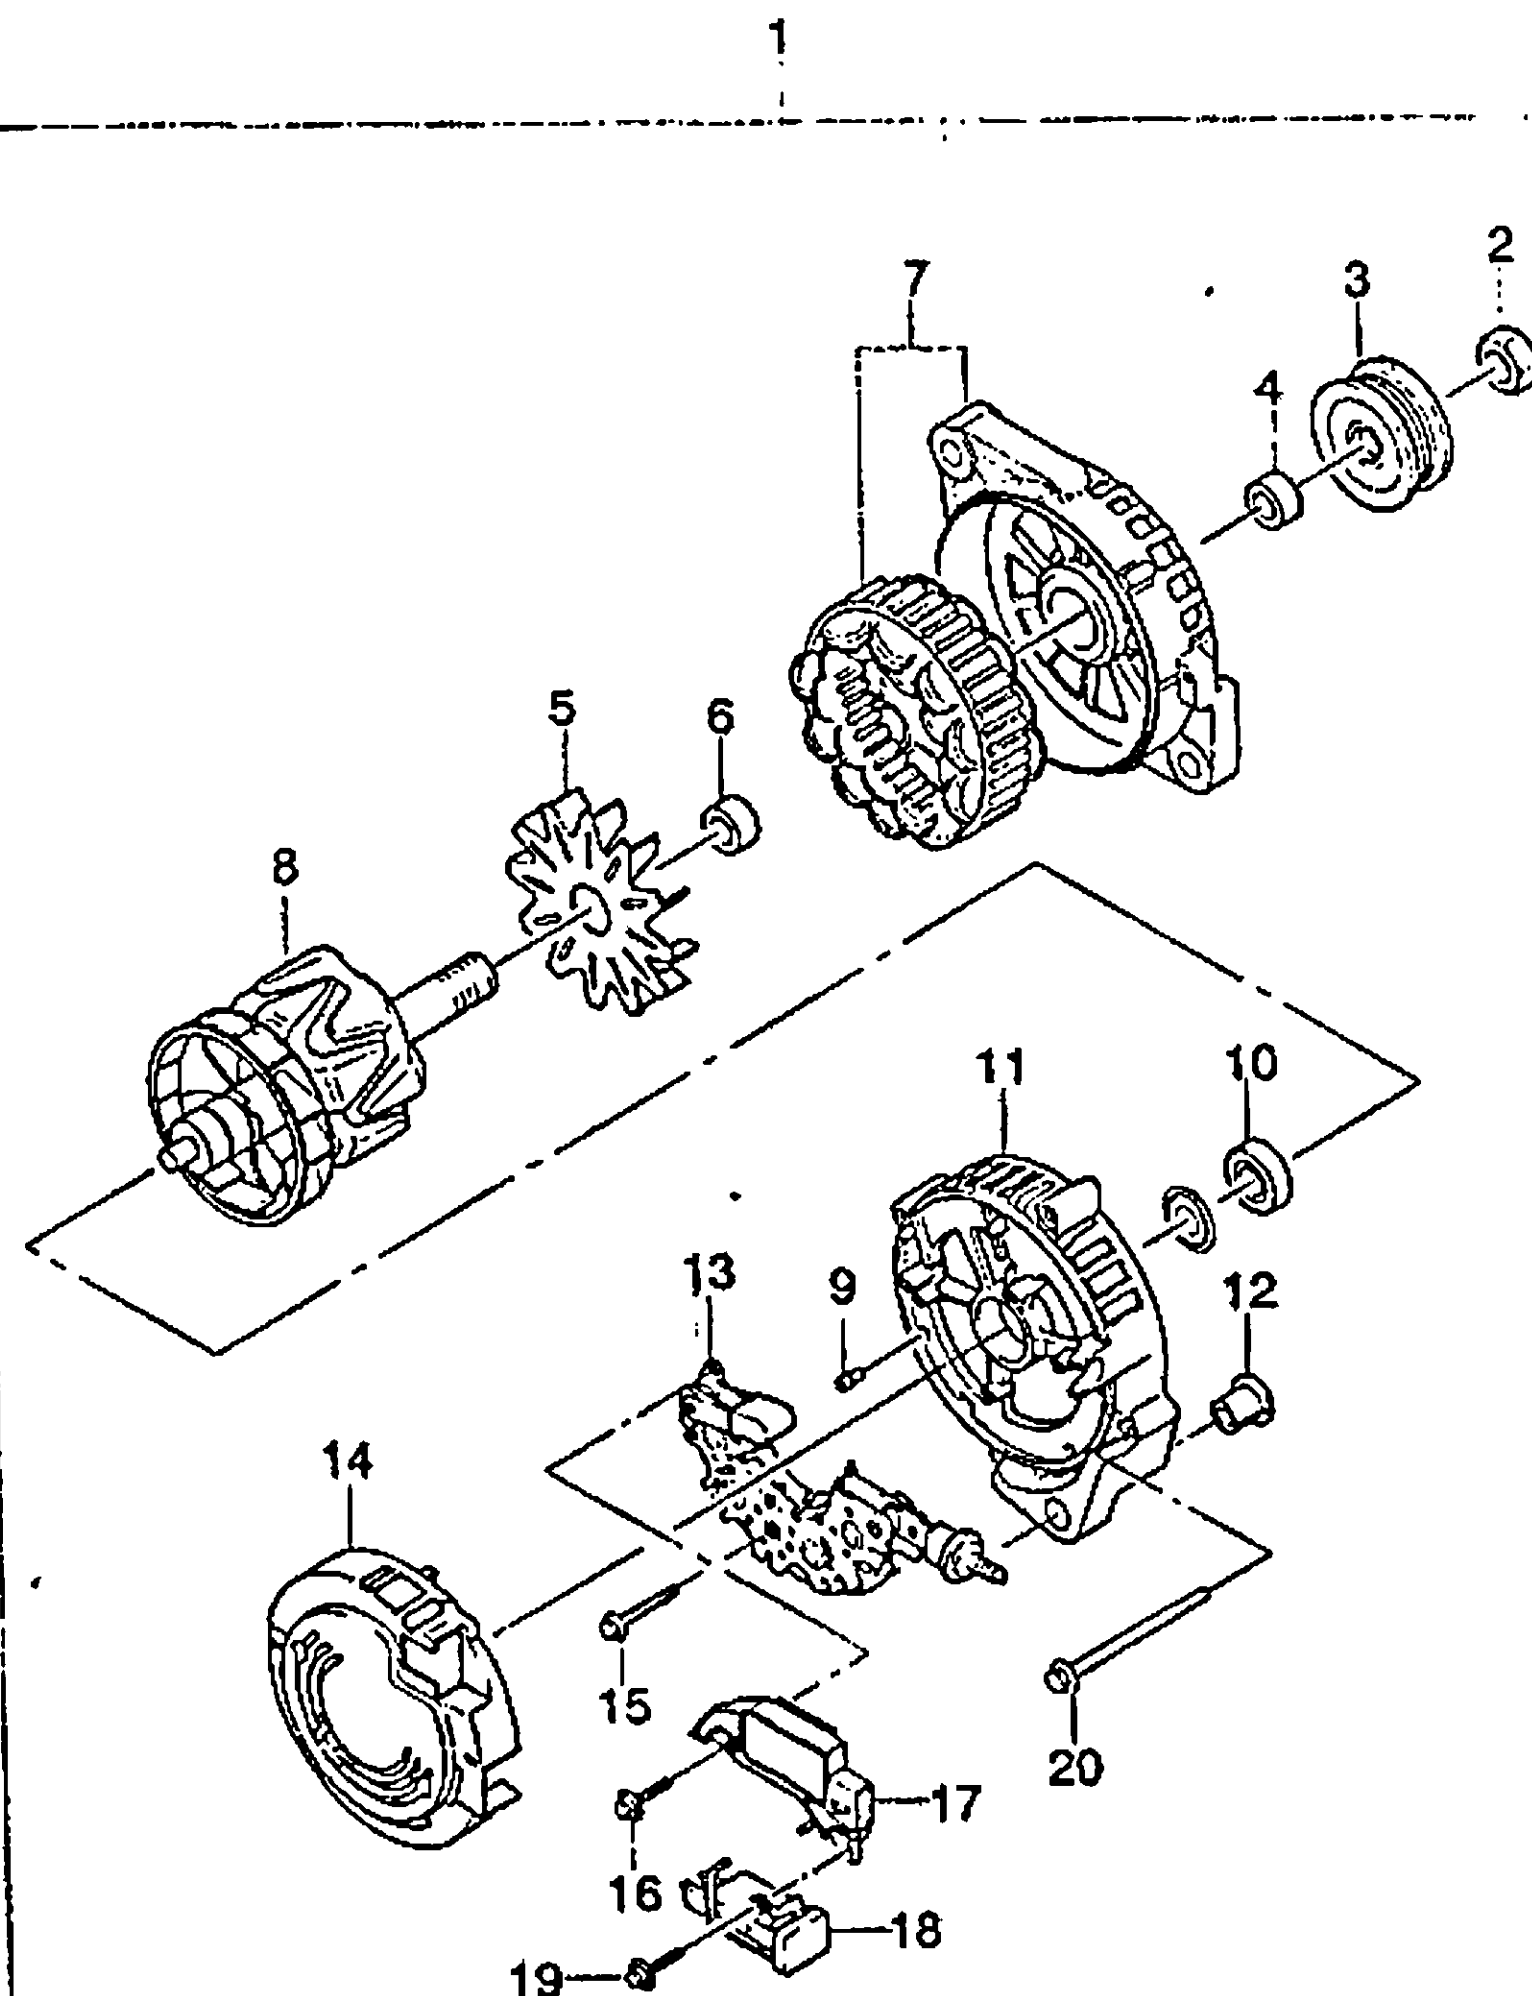


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S E								S X
	[01] 96239894	(E)ALTERNATOR A (D)WECHSELSTROMGENERATOR							&XHA			(F)ALTERNATEUR (S)ALTERNADOR	1	12V,95A	AH	
	[02] 01911324	(E)NUT (D)MUTTER							&XHA			(F)ECROU (S)TUERCA	1			
	[03] 211081	(E)PULLEY (D)ROLLE							&XHA			(F)POULIE (S)POLEA	1			
	[04] 210937	(E)COLLAR (D)KRAGEN(GROß)							&XHA			(F)COLLIER (GRAND) (S)CASQUILLO(GRANDE)	1	LARGE		
	[05] 211103	(E)FAN (D)BLÄSER							&XHA			(F)VENTILATEUR (S)VENTILADOR	1			
	[06] 210768	(E)COLLAR (D)KRAGEN(KLEIN)							&XHA			(F)COLLIER (PETIT) (S)CASQUILLO(PEQUEÑA)	1	SMALL		
	[07] 211147	(E)FRAME&STATOR A (D)RAHMEN & STATOR							&XHA			(F)CADRE&STATOR (S)ARMADURA Y ESTATOR	1			
	[08] 210755	(E)ROTOR (D)DREHTEIL							&XHA			(F)ROTOR (S)ROTOR	1			
	[09] 210921	(E)INSULATOR (D)ISOLATOR							&XHA			(F)ISOLATEUR (S)AISLADOR	3			
	[10]	(E)BEARING-BALL (D)KUGELLAGER							&XHA			(F)ROULEMENT-BILLE (S)COJINETE DE BOLAS				

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC = COMMON	M = MANUAL T/A A = AUTOMATIC T/A = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK




KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S E								X
	210938 [11]	. . .	B	B	B	A	A	A	&XHA		1		(F)CADRE (S)ARMADURA			
	211083 [12]	. . .	B	B	B	A	A	A	&XHA		1		(F)MANCHON (S)BUJE DE BOQUILLA			
	10495216 [13]	. . .	B	B	B	A	A	A	&XHA		1		(F)RECTIFICATEUR (S)RECTIFICADOR			
	268500 [14]	. . .	B	B	B	A	A	A	&XHA		1		(F)CARTER (S)CUBIERTA			
	210990 [15]	. . .	B	B	B	A	A	A	&XHA		1		(F)VIS (S)TORNILLO			
	210788 [16]	. . .	B	B	B	A	A	A	&XHA		3		(F)VIS (S)TORNILLO			
	01989650 [17]	. . .	B	B	B	A	A	A	&XHA		1		(F)REGULATEUR (S)REGULADOR			
	271520 [18]	. . .	B	B	B	A	A	A	&XHA		1		(F)BALAI (S)ESCOBILLA			
	210748 [19]	. . .	B	B	B	A	A	A	&XHA		1		(F)VIS (S)TORNILLO			
	01989681	. . .	B	B	B	A	A	A	&XHA		1					


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

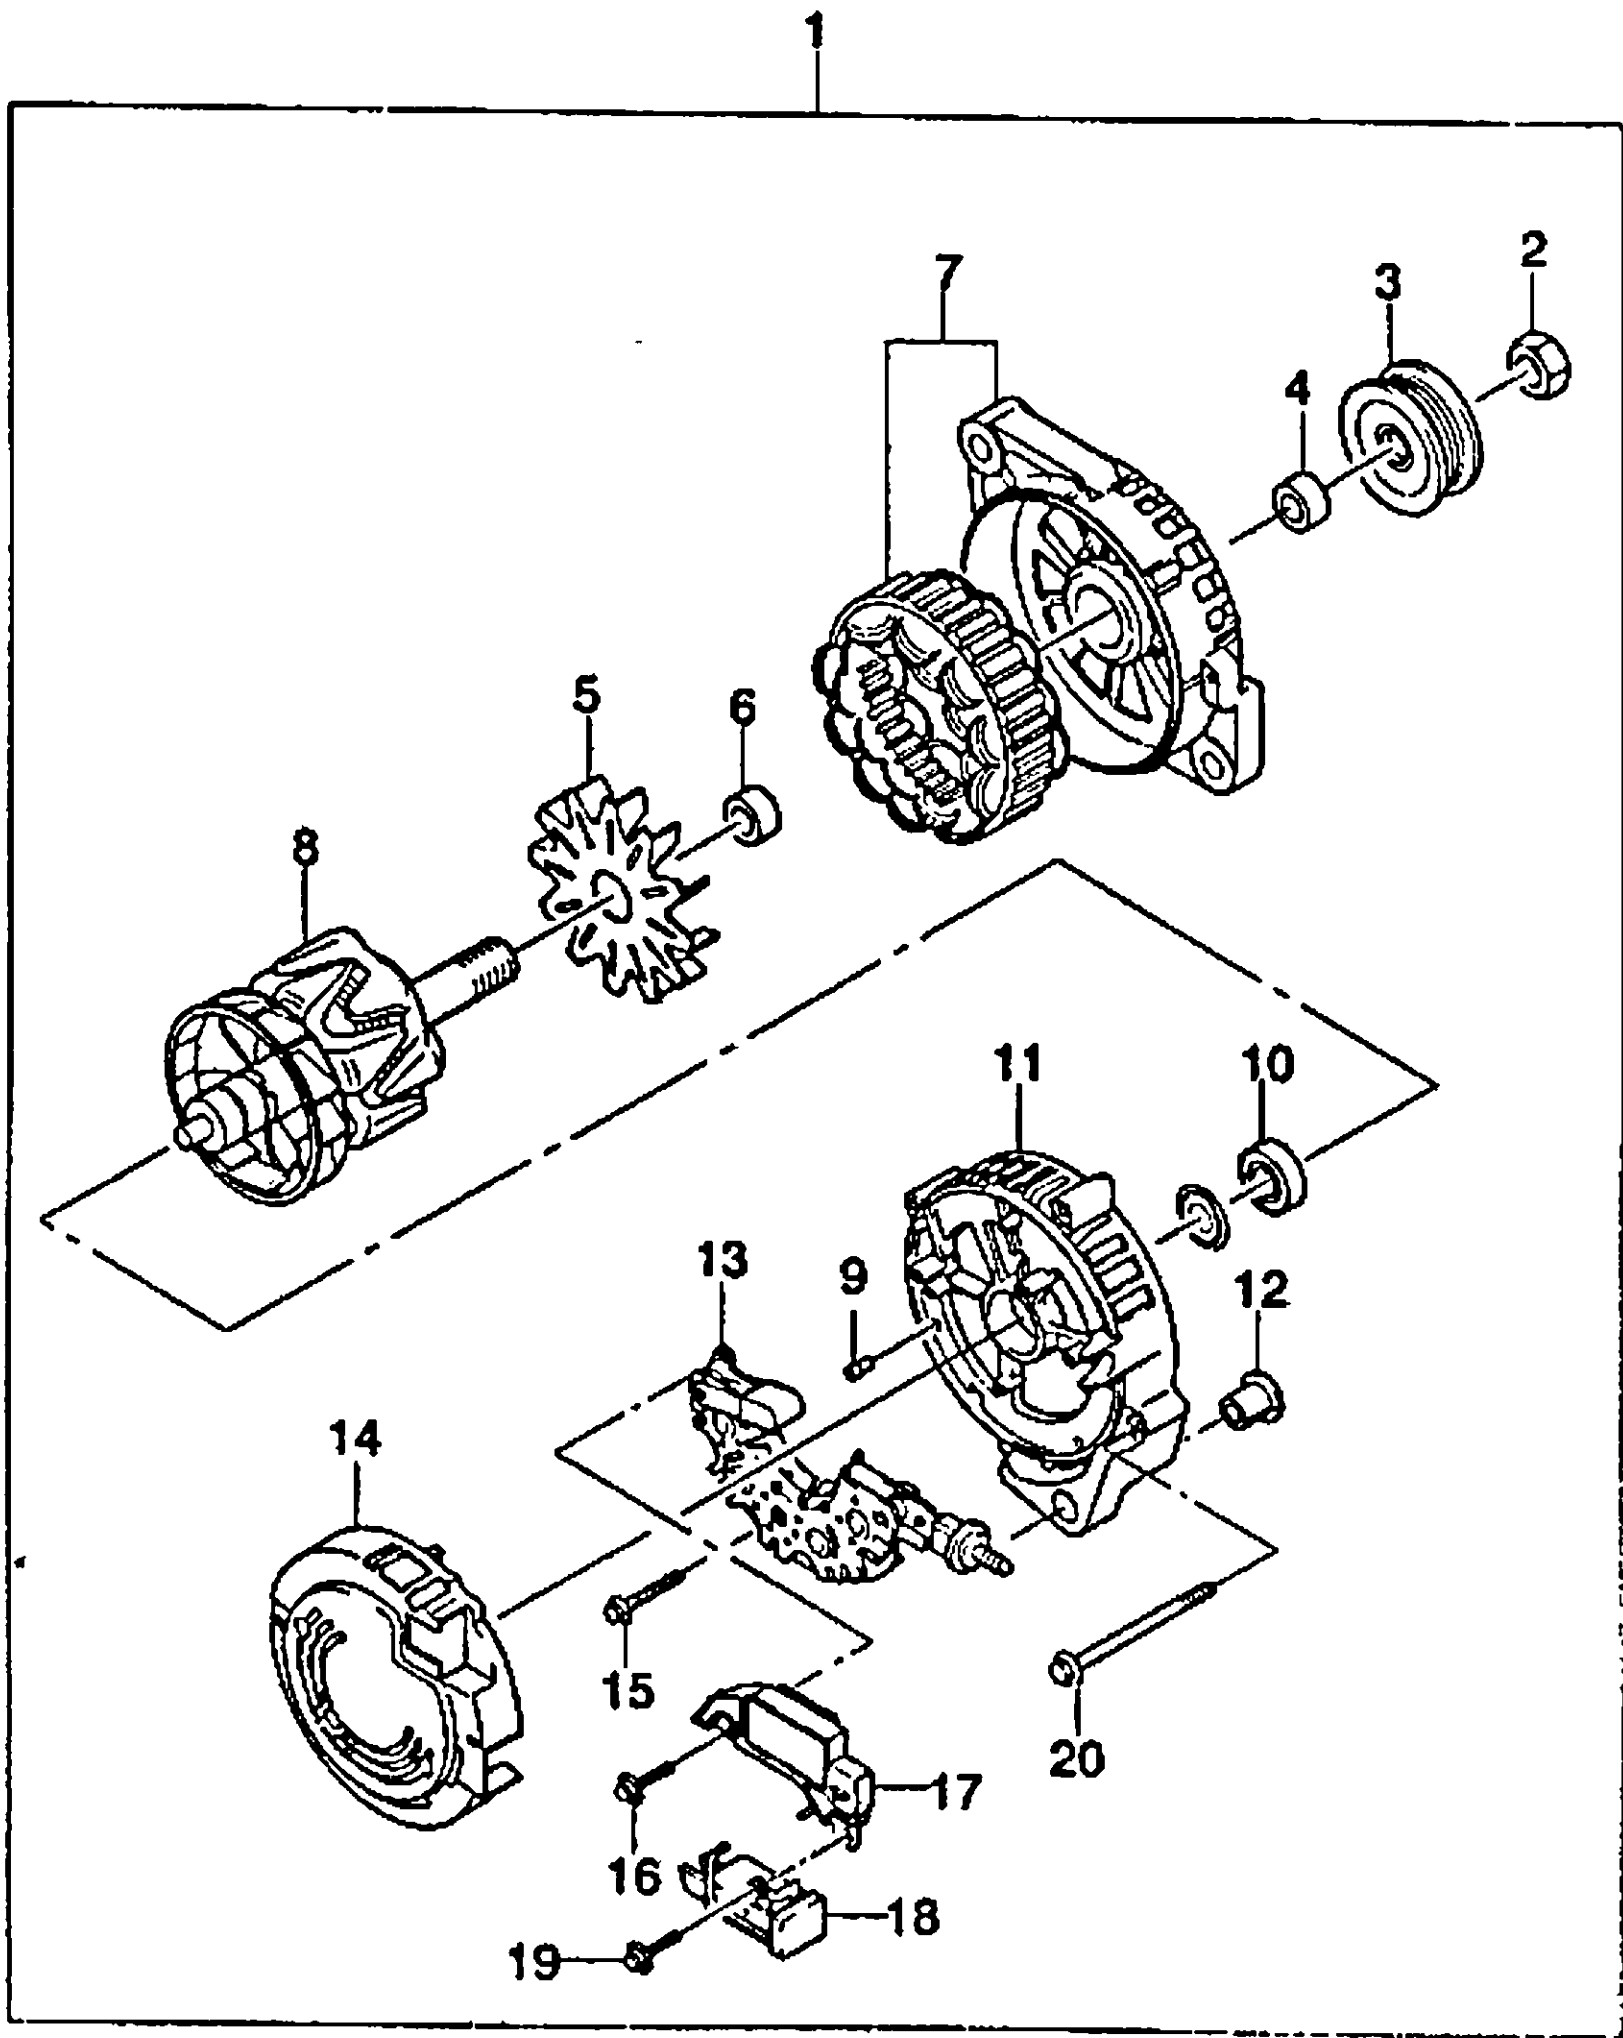


KEY NO.			PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[20] 10473999	(E)BOLT (D)SCHRAUBE . .	B	B	B	A	A	A	AXHA		(F)BOULON (S)PERNO 4					
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

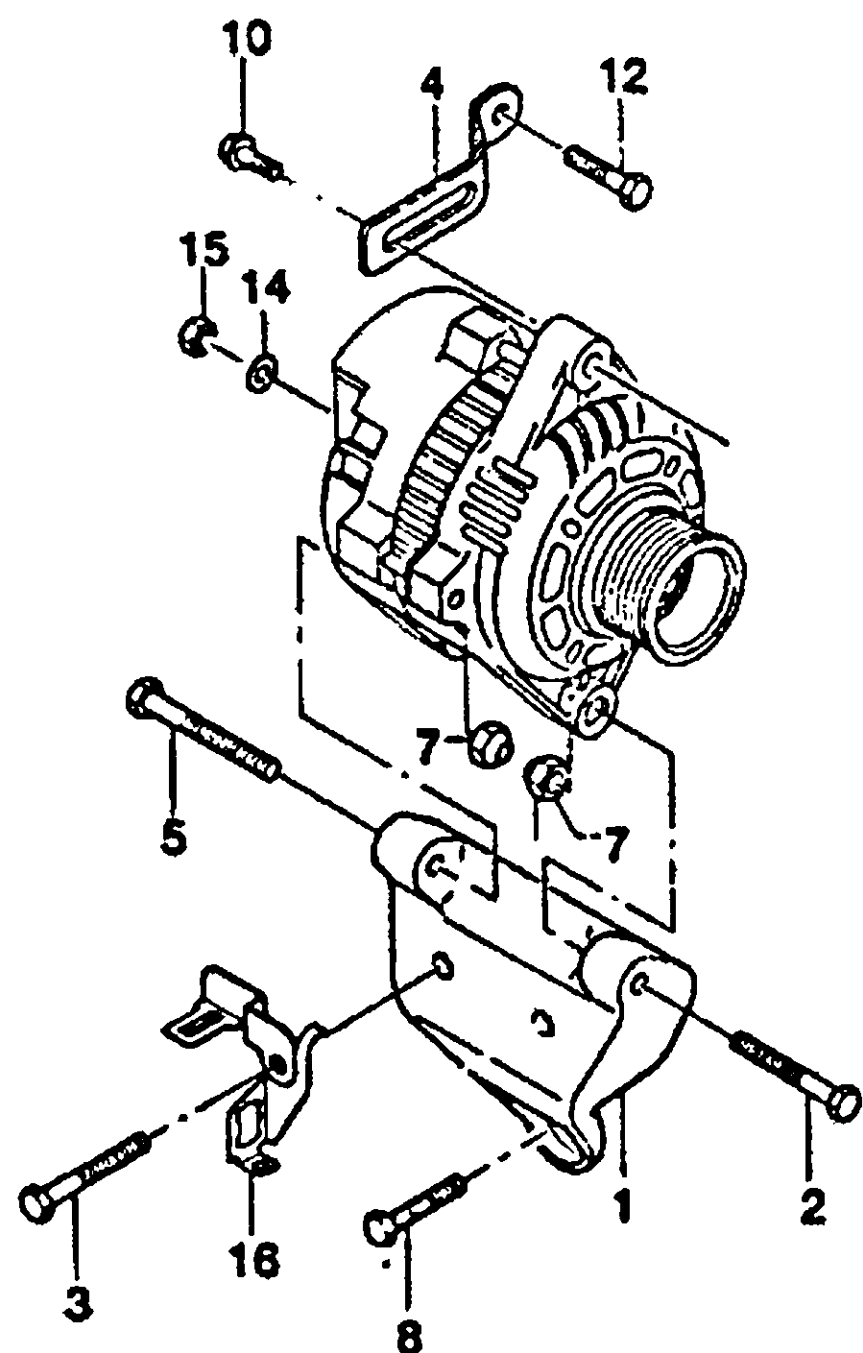

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E T N / G A	BODY			LEVEL					FROM	TO		
			4 N H	3 H	6 H	S S	S S							
	[01]	(E)BRACKET-ALTERNATOR (D)TRÄGER										(F)SUPPORT-ALTERNATEUR (S)SOPORTE-ALTERNADOR		
	96184726	Y	M	B	B	B	S	S	S		1	970423		
O	96352550	Y	M	B	B	B	S	S	S		1	970423		
	96184817	Y	A	B	B	B	O	O	O		1	970510		
O	96352551	Y	A	B	B	B	O	O	O		1	970510		
	[02]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE										(F)BOULON (S)PERNO		
	01513-08453	Y	.	B	B	B	S	S	S		1			
	[03]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE										(F)BOULON (S)PERNO		
	09103-10041	Y	.	B	B	B	S	S	S		2			
	[04]	(E)SHACKLE-ALTERNATOR (D)SCHIENE										(F)SUPPORT-ALTERNATEUR (S)REFUERZO-ALTERNADOR		
	96350678	Y	.	B	B	B	S	S	S		1	970610		
O	96352146	Y	.	B	B	B	S	S	S		1	970510		
	[05]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE										(F)BOULON (S)PERNO		
	01513-08553	Y	.	B	B	B	S	S	S		1			
	[07]	(E)NUT-HEXAGON LOCK (D)MUTTER										(F)ECROU (S)TUERCA		
	08311-38083	Y	.	B	B	B	S	S	S		2			
	[08]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE										(F)BOULON (S)PERNO		
	09103-10054	Y	M	B	B	B	S	S	S		1			
	09103-10042	Y	A	B	B	B	O	O	O		1			
	[10]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE										(F)BOULON (S)PERNO		
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

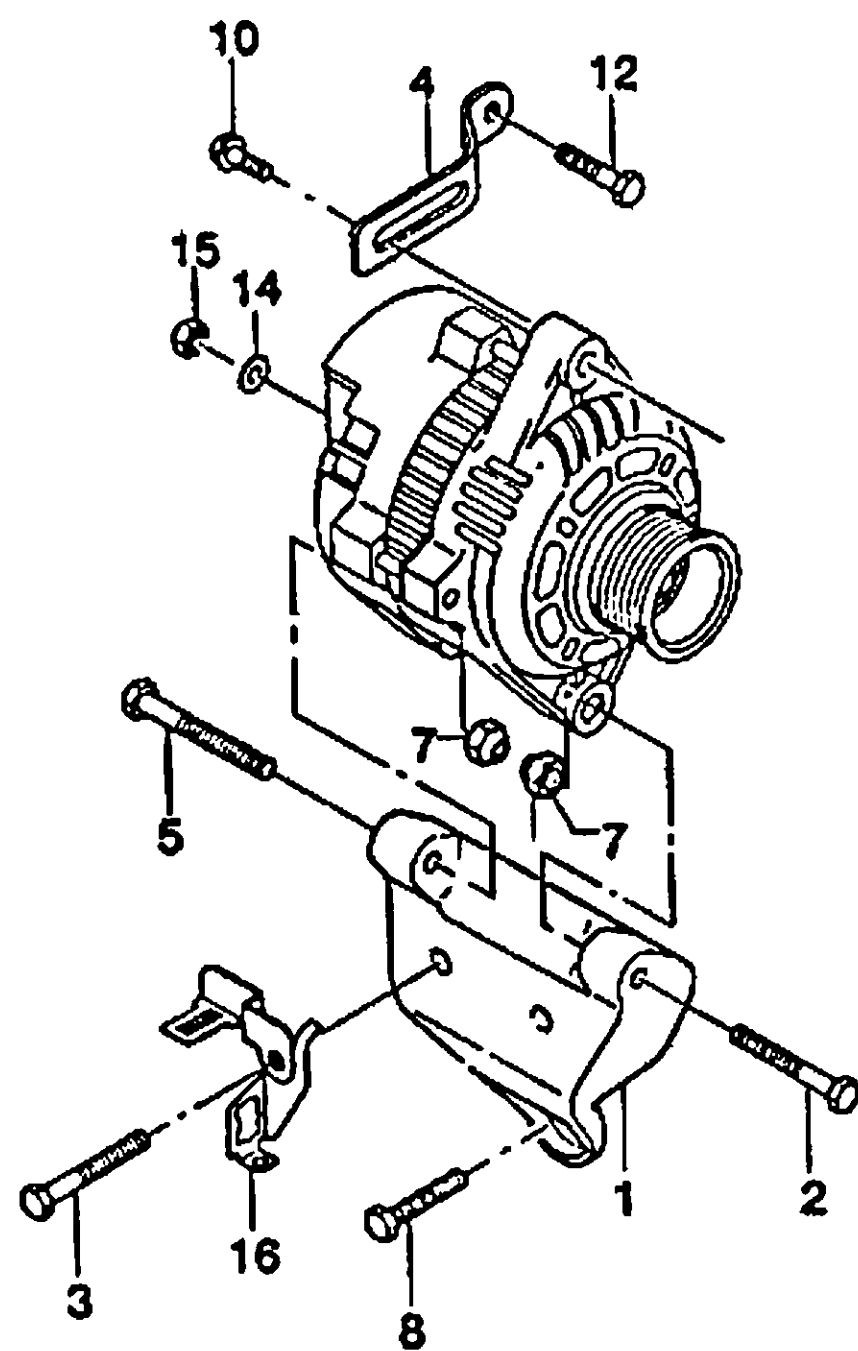




KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N H	3 H	5 H	S S				S S	FROM		
	01517-08253 [12]	Y	.	B	B	B	S	S	S		1	(F)BOULON (S)PERNO		
	09103-08019 [14]	Y	.	B	B	B	S	S	S		1	(F)RONDELLE (S)ARANDELA		
	08321-21083 [15]	Y	.	B	B	B	S	S	S		1	(F)ECROU (S)TUERCA		
	08310-11083 [16]	Y	.	B	B	B	S	S	S		1	(F)SUPPORT (S)SOPORTE		
	96242506	Y	.	B	B	B	S	S	S		1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

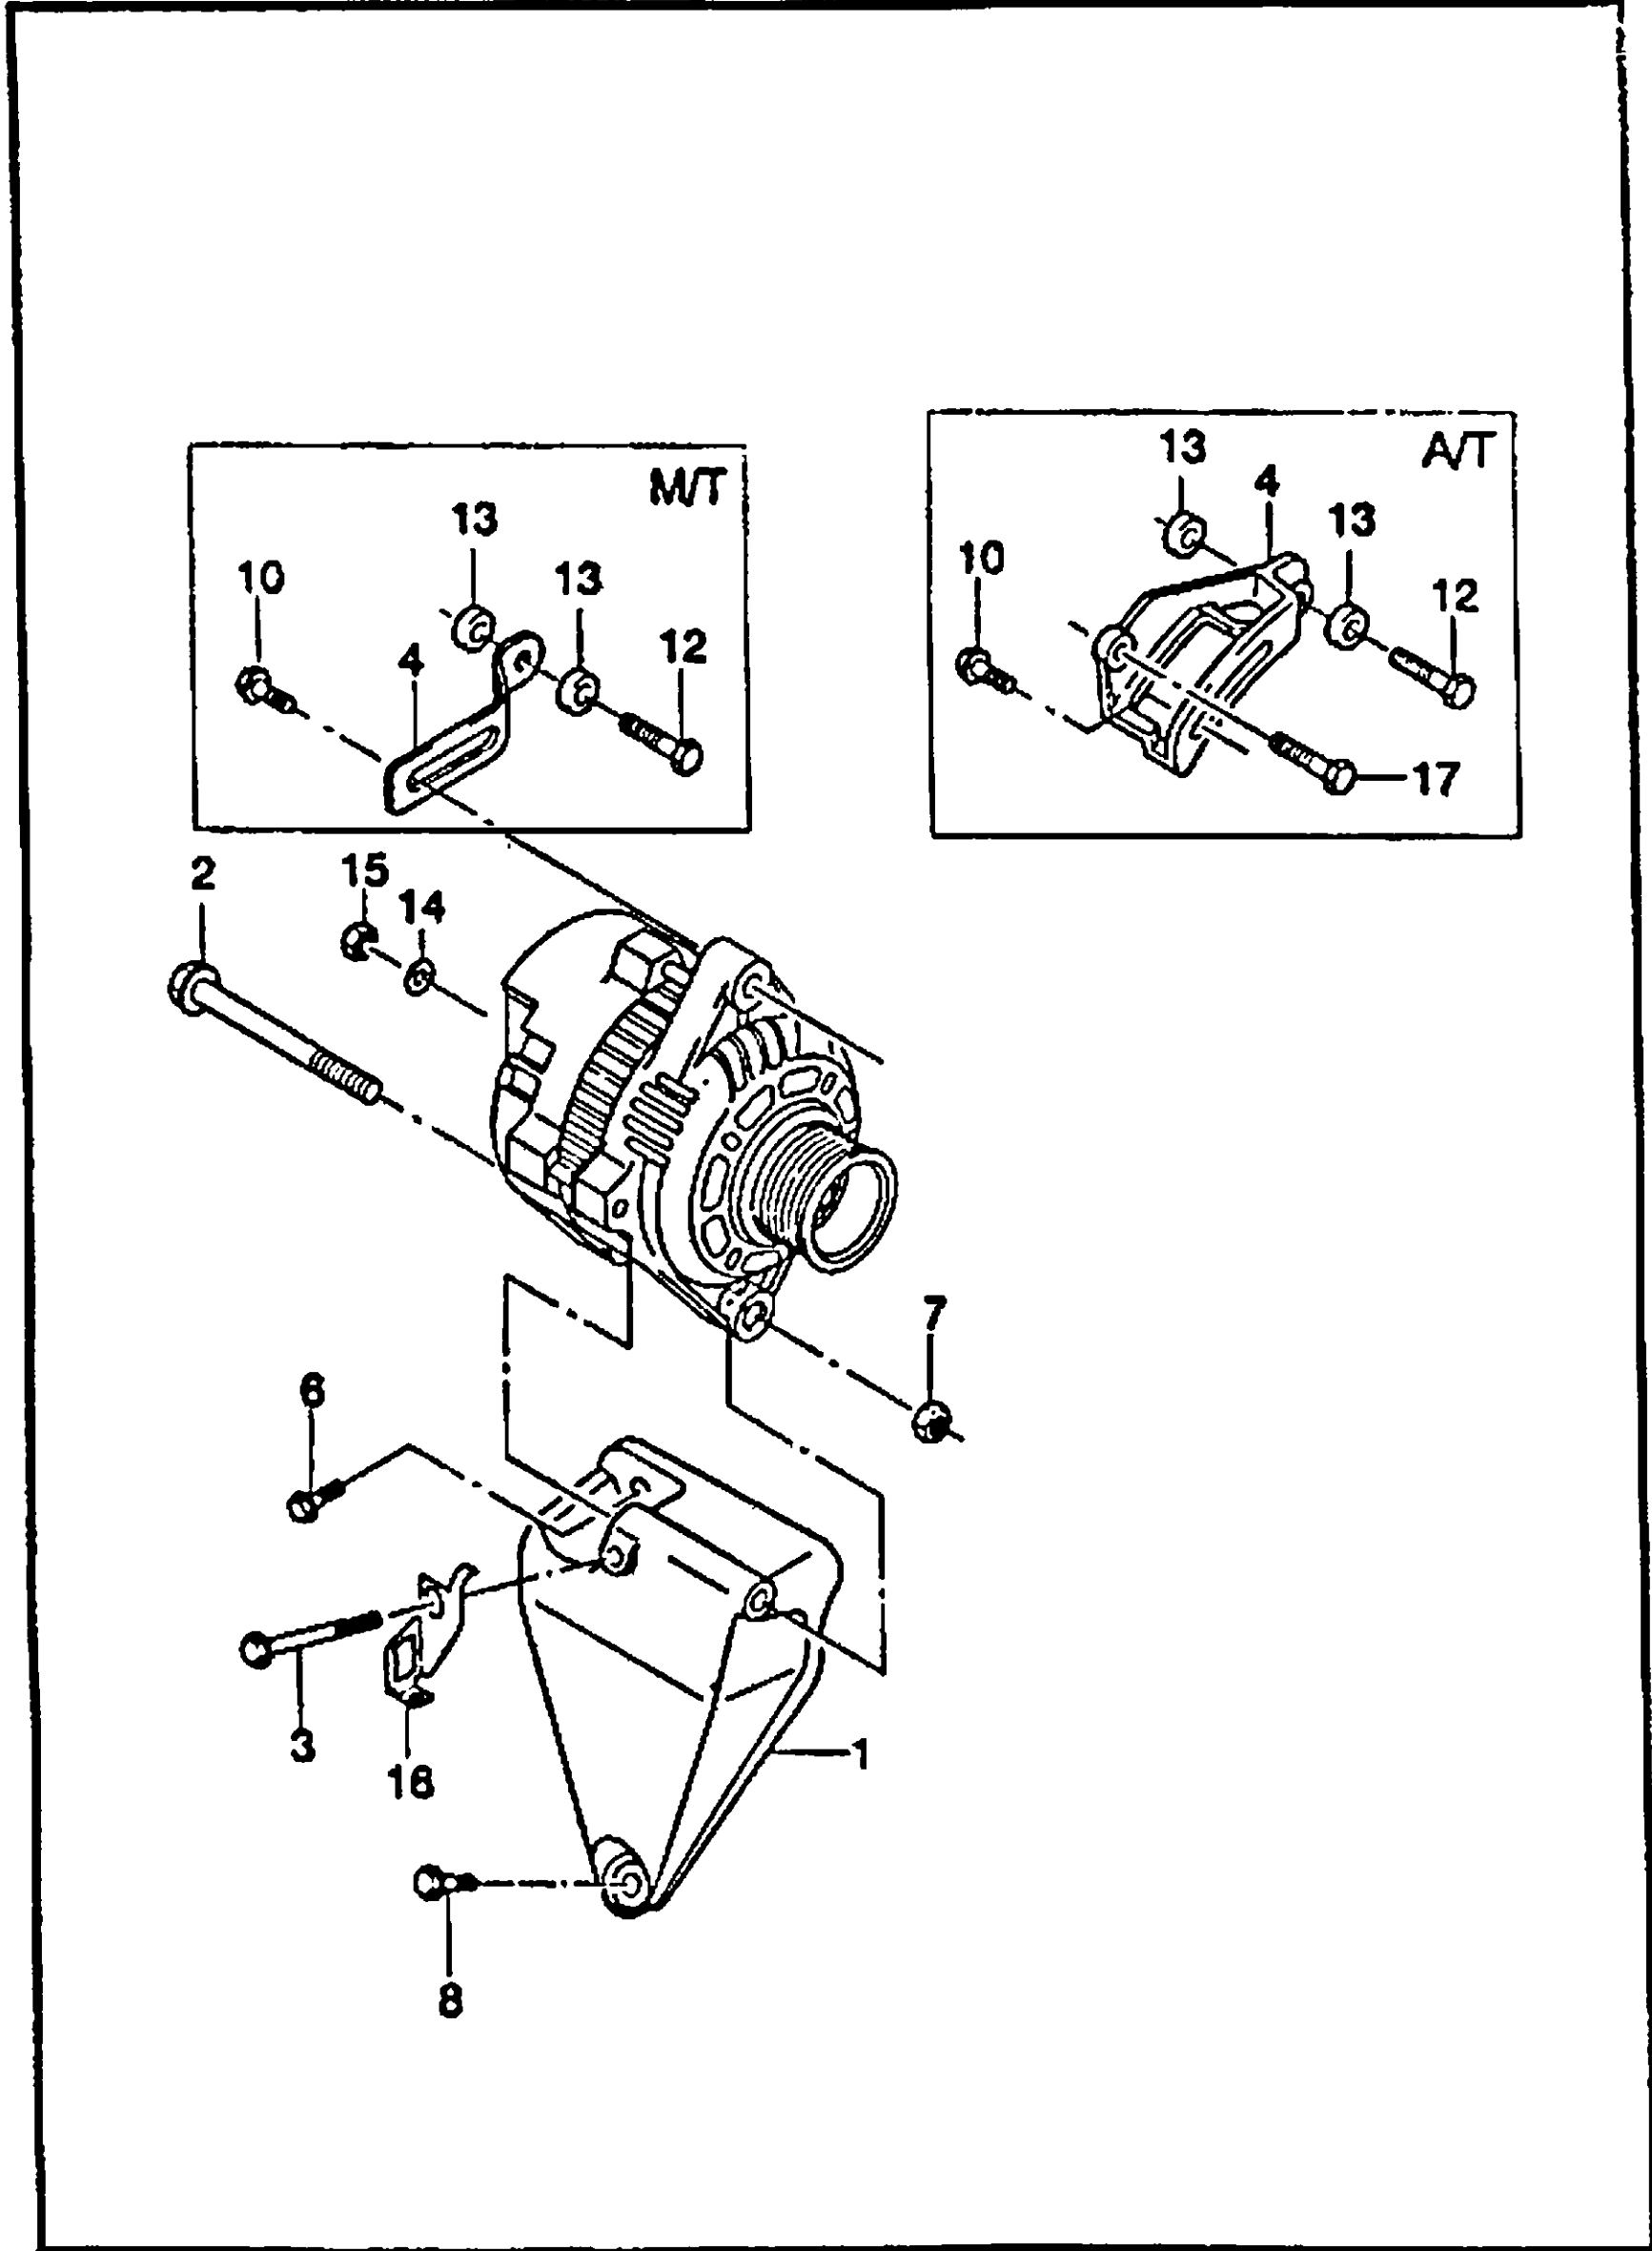

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)BRACKET-ALTERNATOR (D)TRÄGER									(F)SUPPORT-ALTERNATEUR (S)SOPORTE-ALTERNADOR				
	96184740	6	M	B	B	B	.	.	O		1	970324			
O	96352142	6	M	B	B	B	.	.	O		1	970324			
	96184741	6	A	B	B	B	.	.	O		1	970510			
O	96352143	6	A	B	B	B	.	.	O		1	970510			
	[02]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09103-08023	6	.	B	B	B	.	.	O		1				
	[03]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09103-10053	6	.	B	B	B	.	.	O		1				
	[04]	(E)SHACKLE-ALTERNATOR (D)SCHIENE									(F)SUPPORT-ALTERNATEUR (S)REFUERZO-ALTERNADOR				
	96350018	6	M	B	B	B	.	.	O		1	970509			
O	96352144	6	M	B	B	B	.	.	O		1	970509			
	96351643	6	A	B	B	B	.	.	O		1				
	[06]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09103-10054	6	.	B	B	B	.	.	O		1				
	[07]	(E)NUT-HEXAGON FLANGE (D)MUTTER									(F)ECROU (S)TUERCA				
	08311-38083	6	.	B	B	B	.	.	O		1				
	[08]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09103-10054	6	M	B	B	B	.	.	O		1				
	09103-10008	6	A	B	B	B	.	.	O		1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

1751 ALTERNATOR MOUNT(DOHC)


3E10

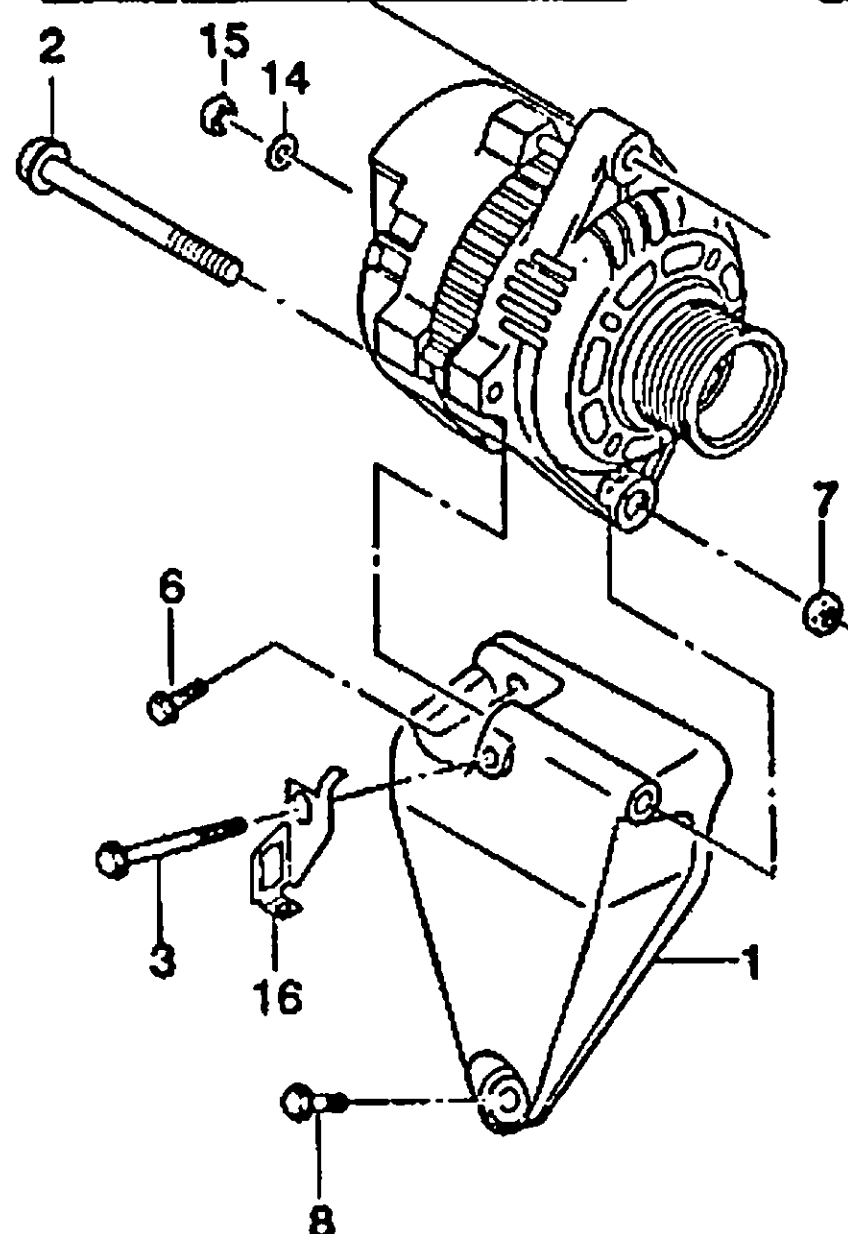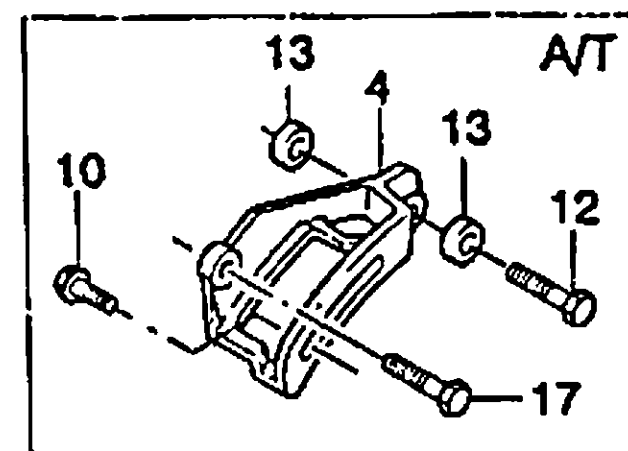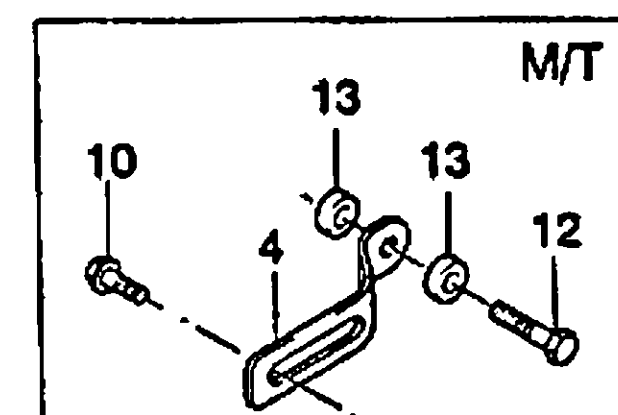


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[10] 01517-08253	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE	6	.	B	B	B	.	.	O		(F)BOULON (S)PERNO	1			
	[12] 01517-08353	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE	6	.	B	B	B	.	.	O		(F)BOULON (S)PERNO	1			
	[13] 90280842	(E)BUSHING (D)LAGERFUTTER	6	.	B	B	B	.	.	O		(F)MANCHON (S)BUJE DE BOQUILLA	2			
	[14] 08321-21083	(E)WASHER-SPRING (D)DICHTUNGSRING	6	.	B	B	B	.	.	O		(F)RONDELLE (S)ARANDELA	1			
	[15] 08310-11083	(E)NUT-HEXAGON (D)MUTTER	6	.	B	B	B	.	.	O		(F)ECROU (S)TUERCA	1			
	[16] 96242507	(E)BRACKET-C.P.S CONNECTOR (D)TRÄGER	6	.	B	B	B	.	.	O		(F)SUPPORT (S)SOPORTE	1			
	[17] 01517-08303	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE	6	A	B	B	B	.	.	O		(F)BOULON (S)PERNO	1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

1760 STARTER(0.8KW)


3F10

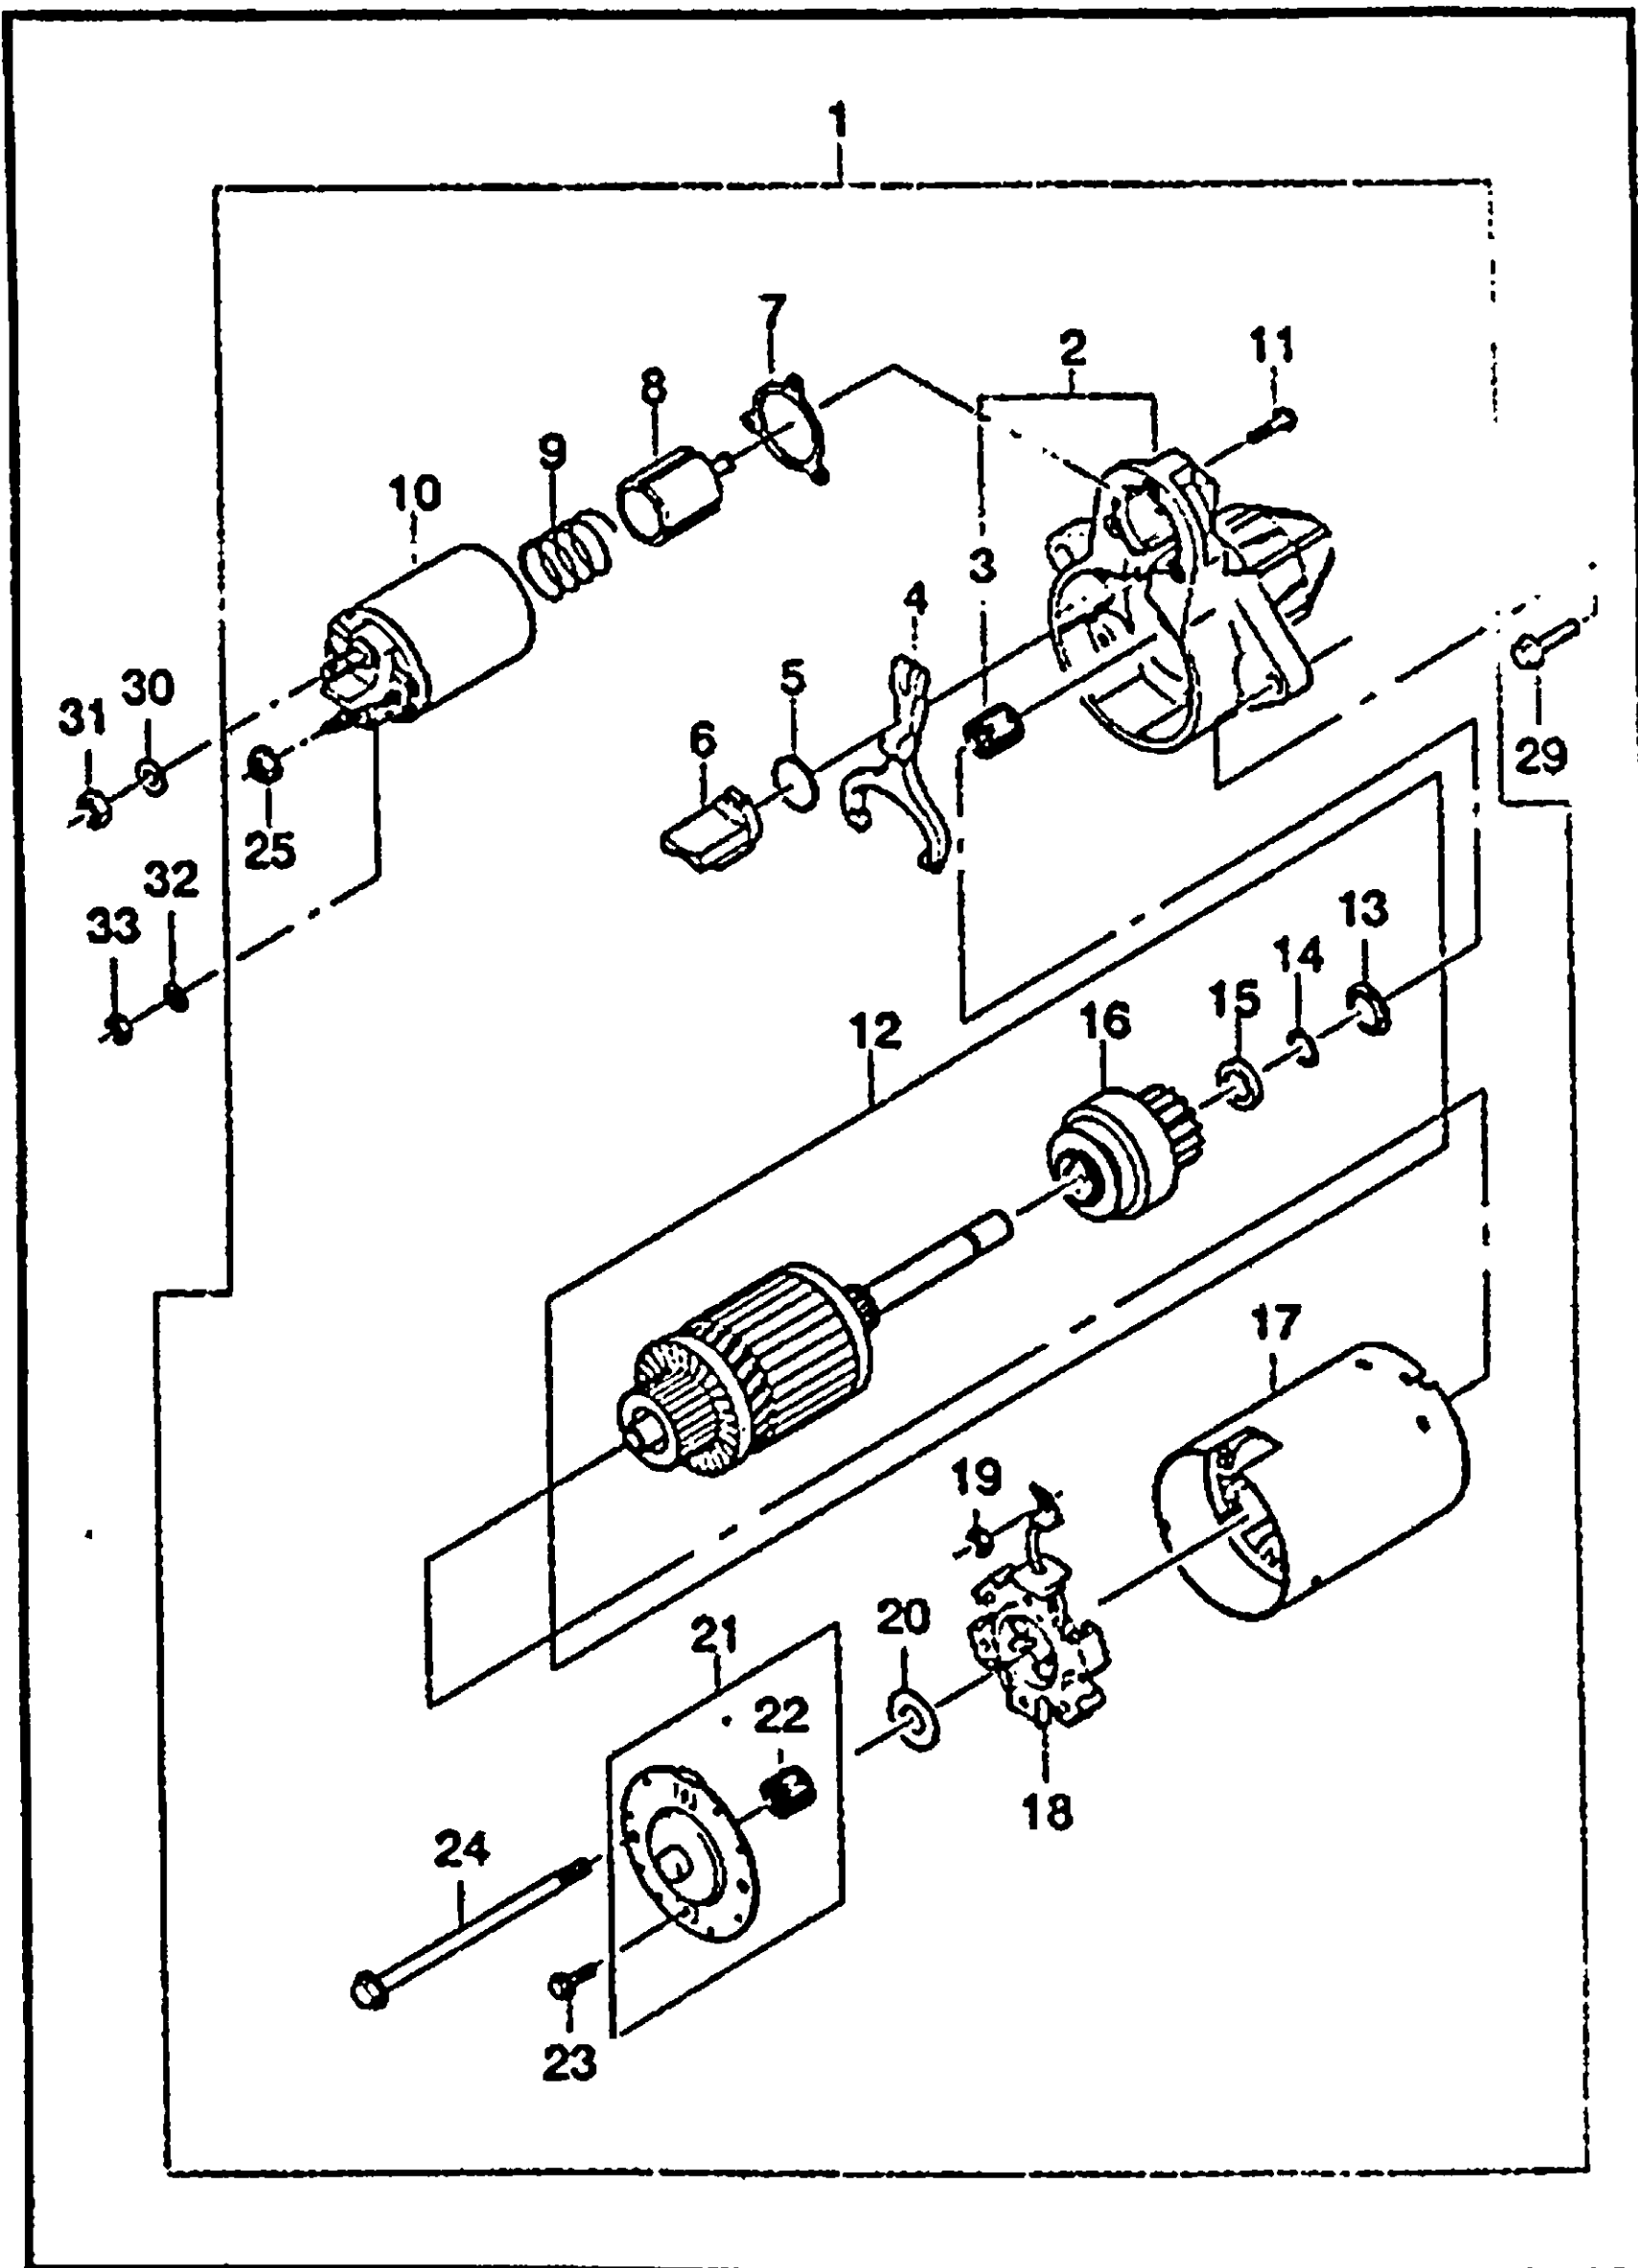


KEY NO.		PART NAME															
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E			
		E / G A	T / N H	BODY			LEVEL				F R O M	T O					
				4 N H	3 H	5 H									S S E X		
	[01]	(E)STATER A (D)ANLASSER						&NN4/NN6			(F)DEMARREUR (S)ARRANQUE		0.8KW	SQ			
96208781		Y M B B B S S S									1						
	[02]	(E)HOUSING (D)GEHAUSE									(F)LOGEMENT (S)CARCASA						
10476114		Y M B B B S S S									1						
	[03]	(E)BUSHING (D)LAGERFUTTER									(F)MANCHON (S)BUJE DE BOQUILLA						
110526		Y M B B B S S S									1						
	[04]	(E)LEVER (D)HEBEL									(F)LEVIER (S)PALANCA						
10475062		Y M B B B S S S									1						
	[05]	(E)PLATE (D)PLATTE									(F)PLAQUE (S)PLACA						
10475061		Y M B B B S S S									1						
	[06]	(E)PLUG (D)STOPSEL									(F)BOUCHON (S)TAPON						
110725		Y M B B B S S S									1						
	[07]	(E)GASKET (D)DICHTUNG									(F)JOINT (S)JUNTA						
110645		Y M B B B S S S									1						
	[08]	(E)PLUNGER (D)TAUCHER									(F)PISTON PLONGEUR (S)EMBOLO						
110974		Y M B B B S S S									1						
	[09]	(E)SPRING (D)FEDERUNG									(F)RESSORT (S)RESORTE						
100976		Y M B B B S S S									1						
	[10]	(E)SOLENOID (D)SOLENOID									(F)SOLENOIDE (S)SELENOIDE						
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE									
Y = 1.5SOHC 6 = 1.6DOHC = COMMON		M = MANUAL T/A A = AUTOMATIC T/A = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK									

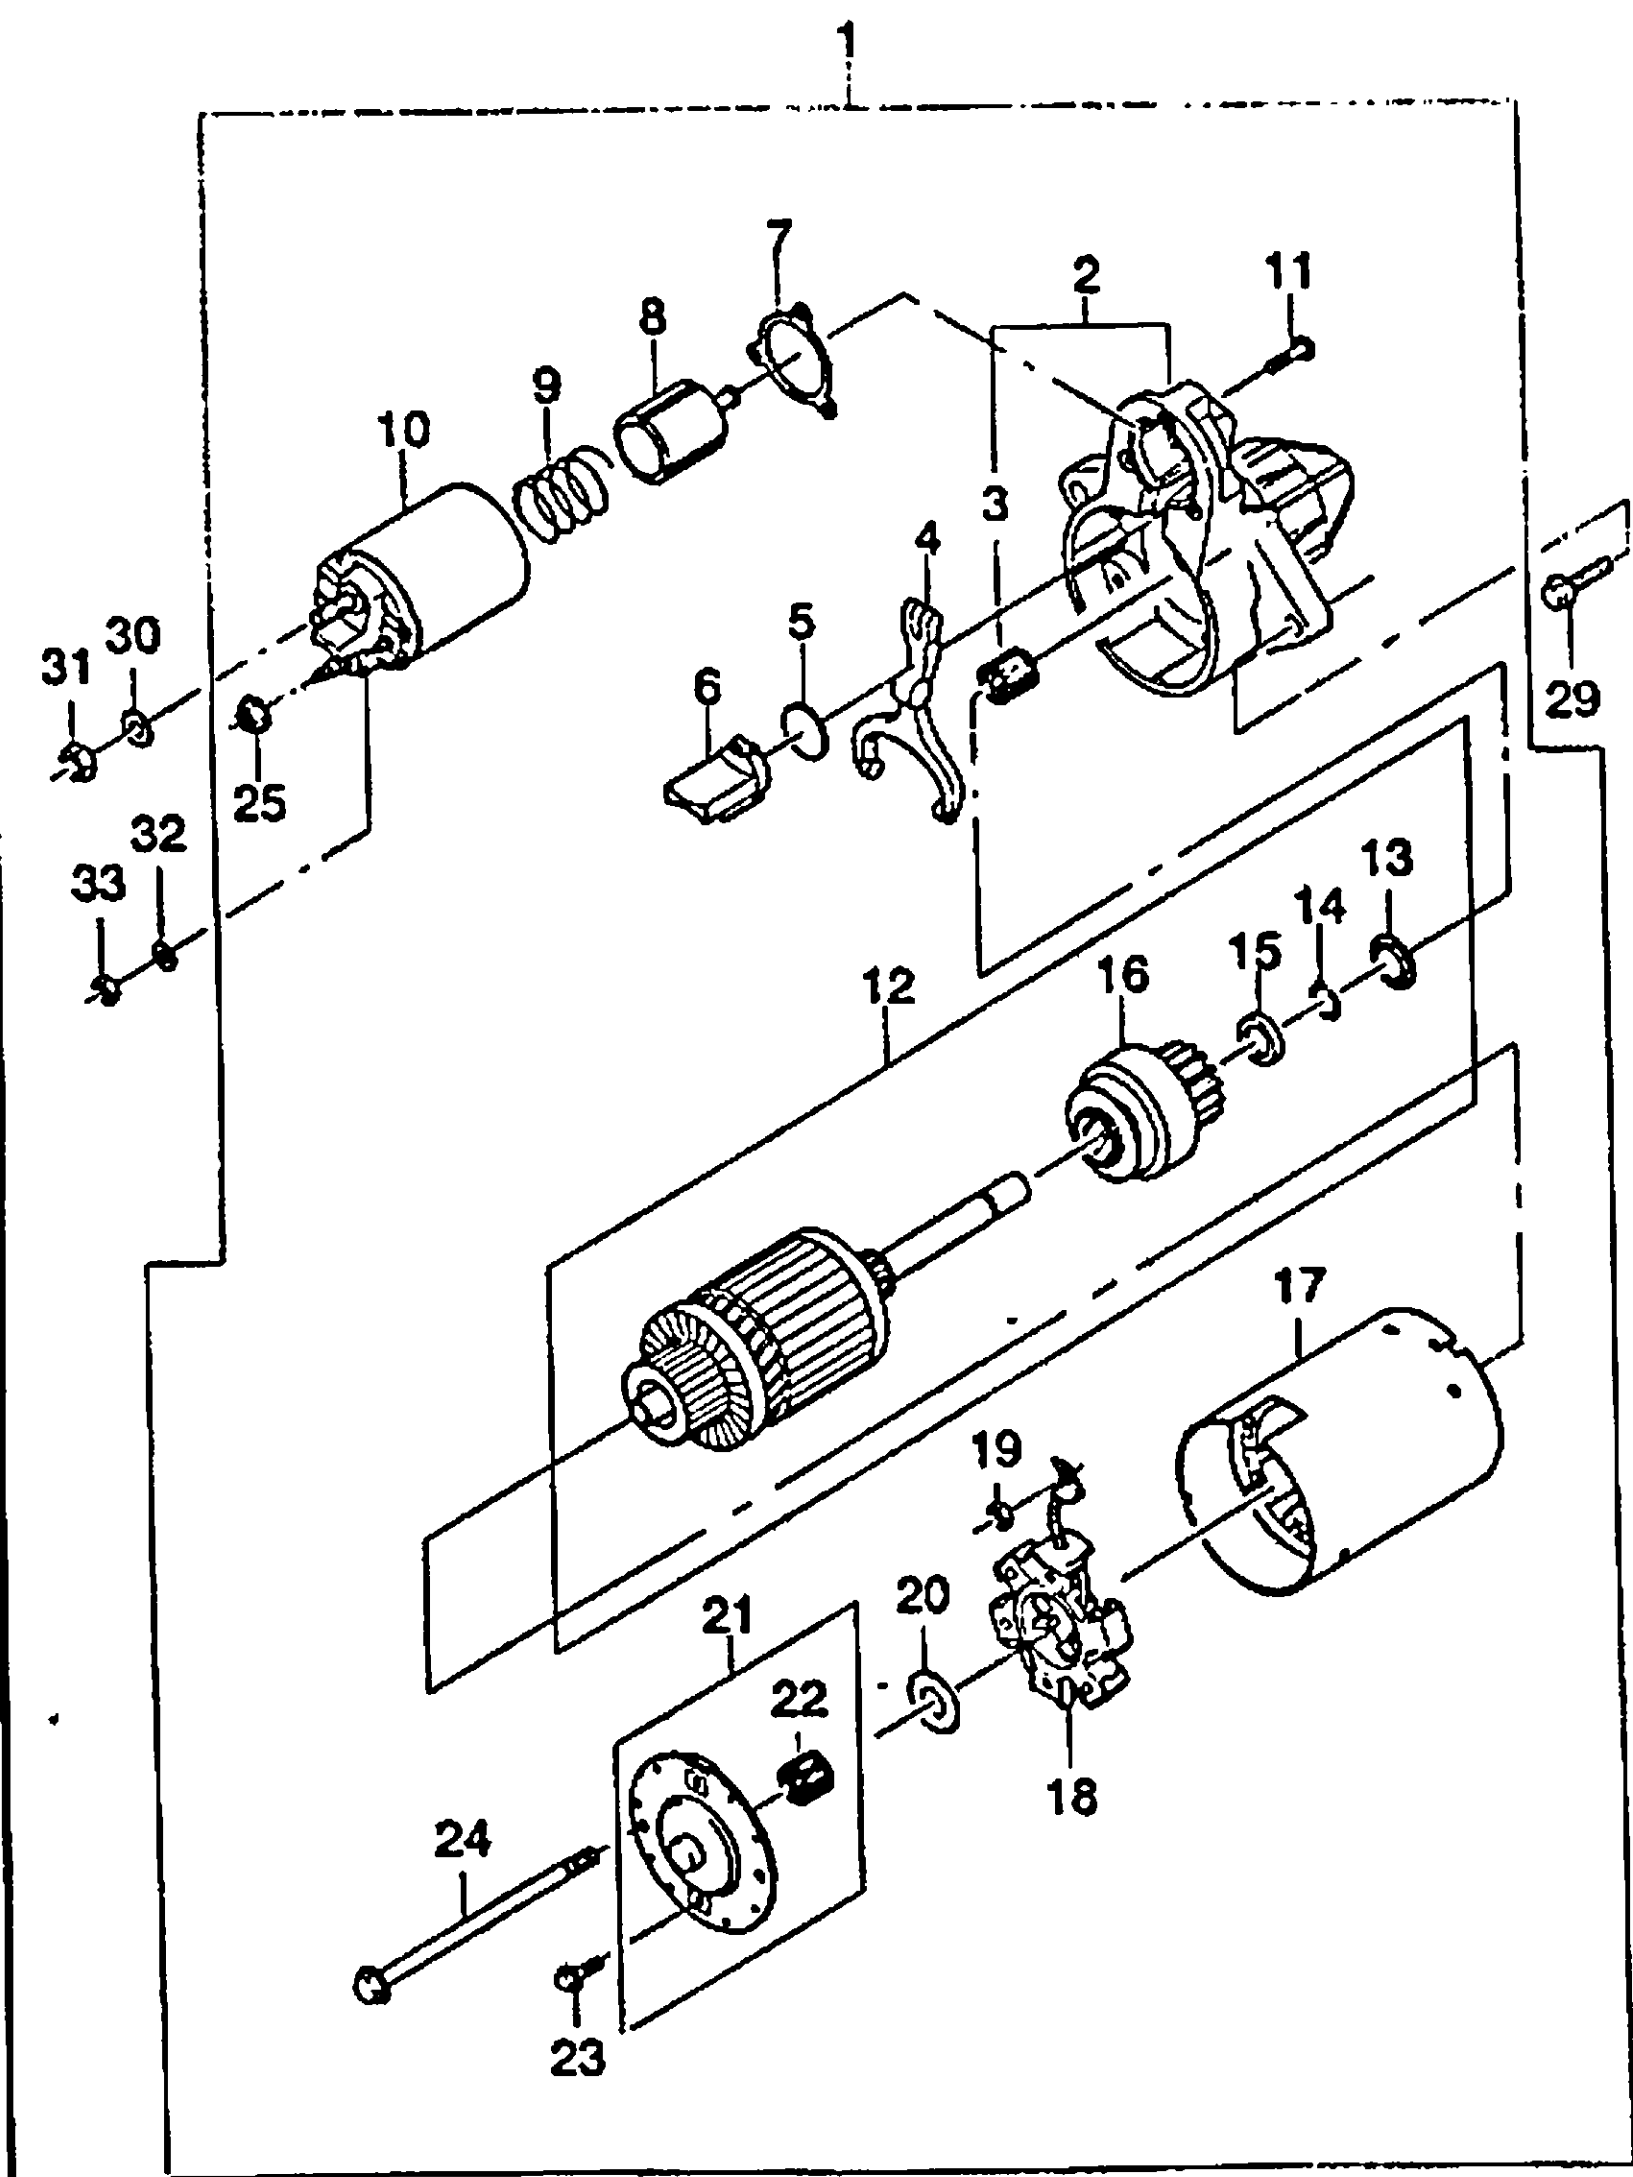


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	111350	Y	M	B	B	B	S	S	S		1					
	[11]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	10475056	Y	M	B	B	B	S	S	S		3					
	[12]	(E)ARMATURE (D)ARMATUR									(F)ARMATURE (S)ARMADURA					
	10475100	Y	M	B	B	B	S	S	S		1					
	[13]	(E)COLLAR (D)KRAGEN									(F)COLLIER (S)CASQUILLO					
	10477310	Y	M	B	B	B	S	S	S		1					
	[14]	(E)RING (D)RING									(F)ANNEAU (S)ANILLO					
	01927848	Y	M	B	B	B	S	S	S		1					
	[15]	(E)PINION STOP (D)RITZEL,STOPP									(F)PIGNON-ARRET (S)PIÑON-TOPE					
	01927849	Y	M	B	B	B	S	S	S		1					
	[16]	(E)DRIVE (D)ANTRIEB									(F)ENTRAINEMENT (S)IMPULSADOR					
	10475074	Y	M	B	B	B	S	S	S		1					
	[17]	(E)FRAME-FIELD (D)RAHMEN,FELD									(F)CADRE-CHAMP (S)ARMADURA-CAMPO					
	10475094	Y	M	B	B	B	S	S	S		1					
	[18]	(E)HOLDER-BRUSH (D)BEHÄLTER,BÜRSTE									(F)MONTURE-BALAI (S)RETENEDOR-CEPILLO					
	10475107	Y	M	B	B	B	S	S	S		1					
	[19]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA					
	110720	Y	M	B	B	B	S	S	S		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

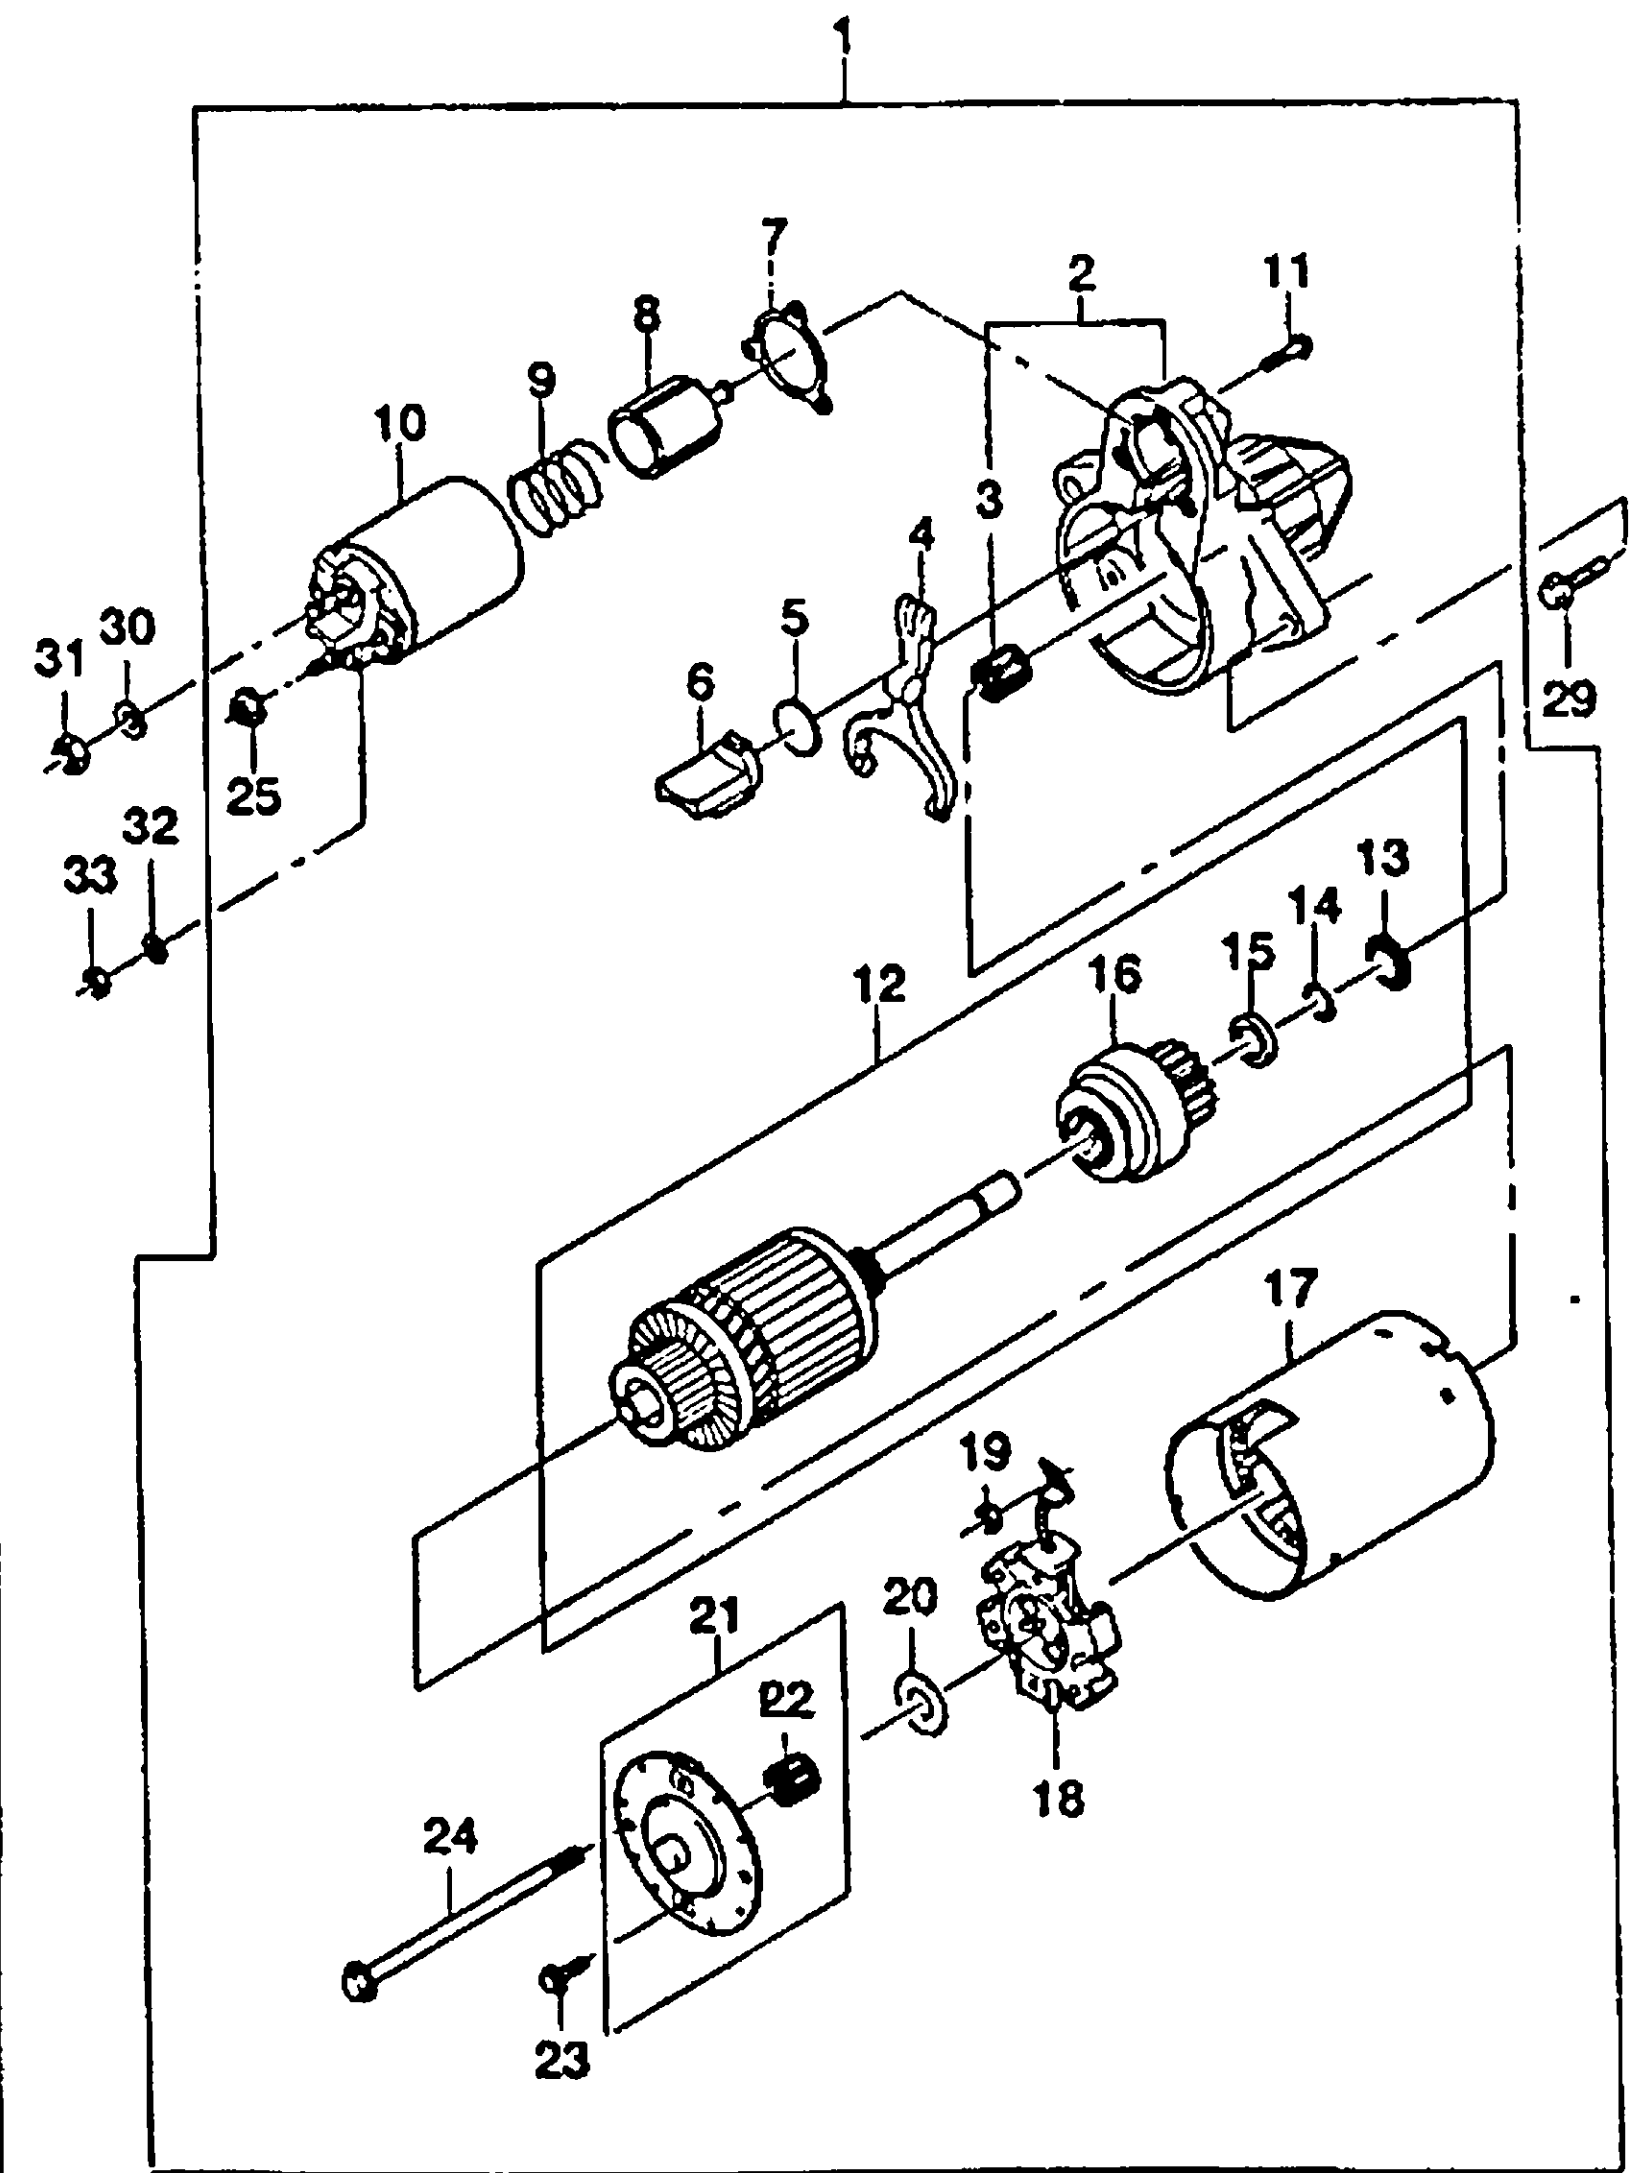


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[20] 10475058	(E)WASHER (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA	1				
	[21] 111361	(E)FRAME-COMMUTATOR (D)RAHMEN,KOMMUTATOR ENDE									(F)CADRE (S)ARMADURA	1				
	[22] 110295	(E)BUSHING (D)LAGERFUTTER									(F)MANCHON (S)BUJE DE BOQUILLA	1				
	[23] 10497256	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO	2				
	[24] 10475057	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO	2				
	[25] 110720	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA	1				
	[29] 08956812	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO	2	M8X1.25X25			
	[30] 08321-21083	(E)WASHER (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA	1				
	[31] 08310-11083	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA	1				
	[32]	(E)WASHER (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

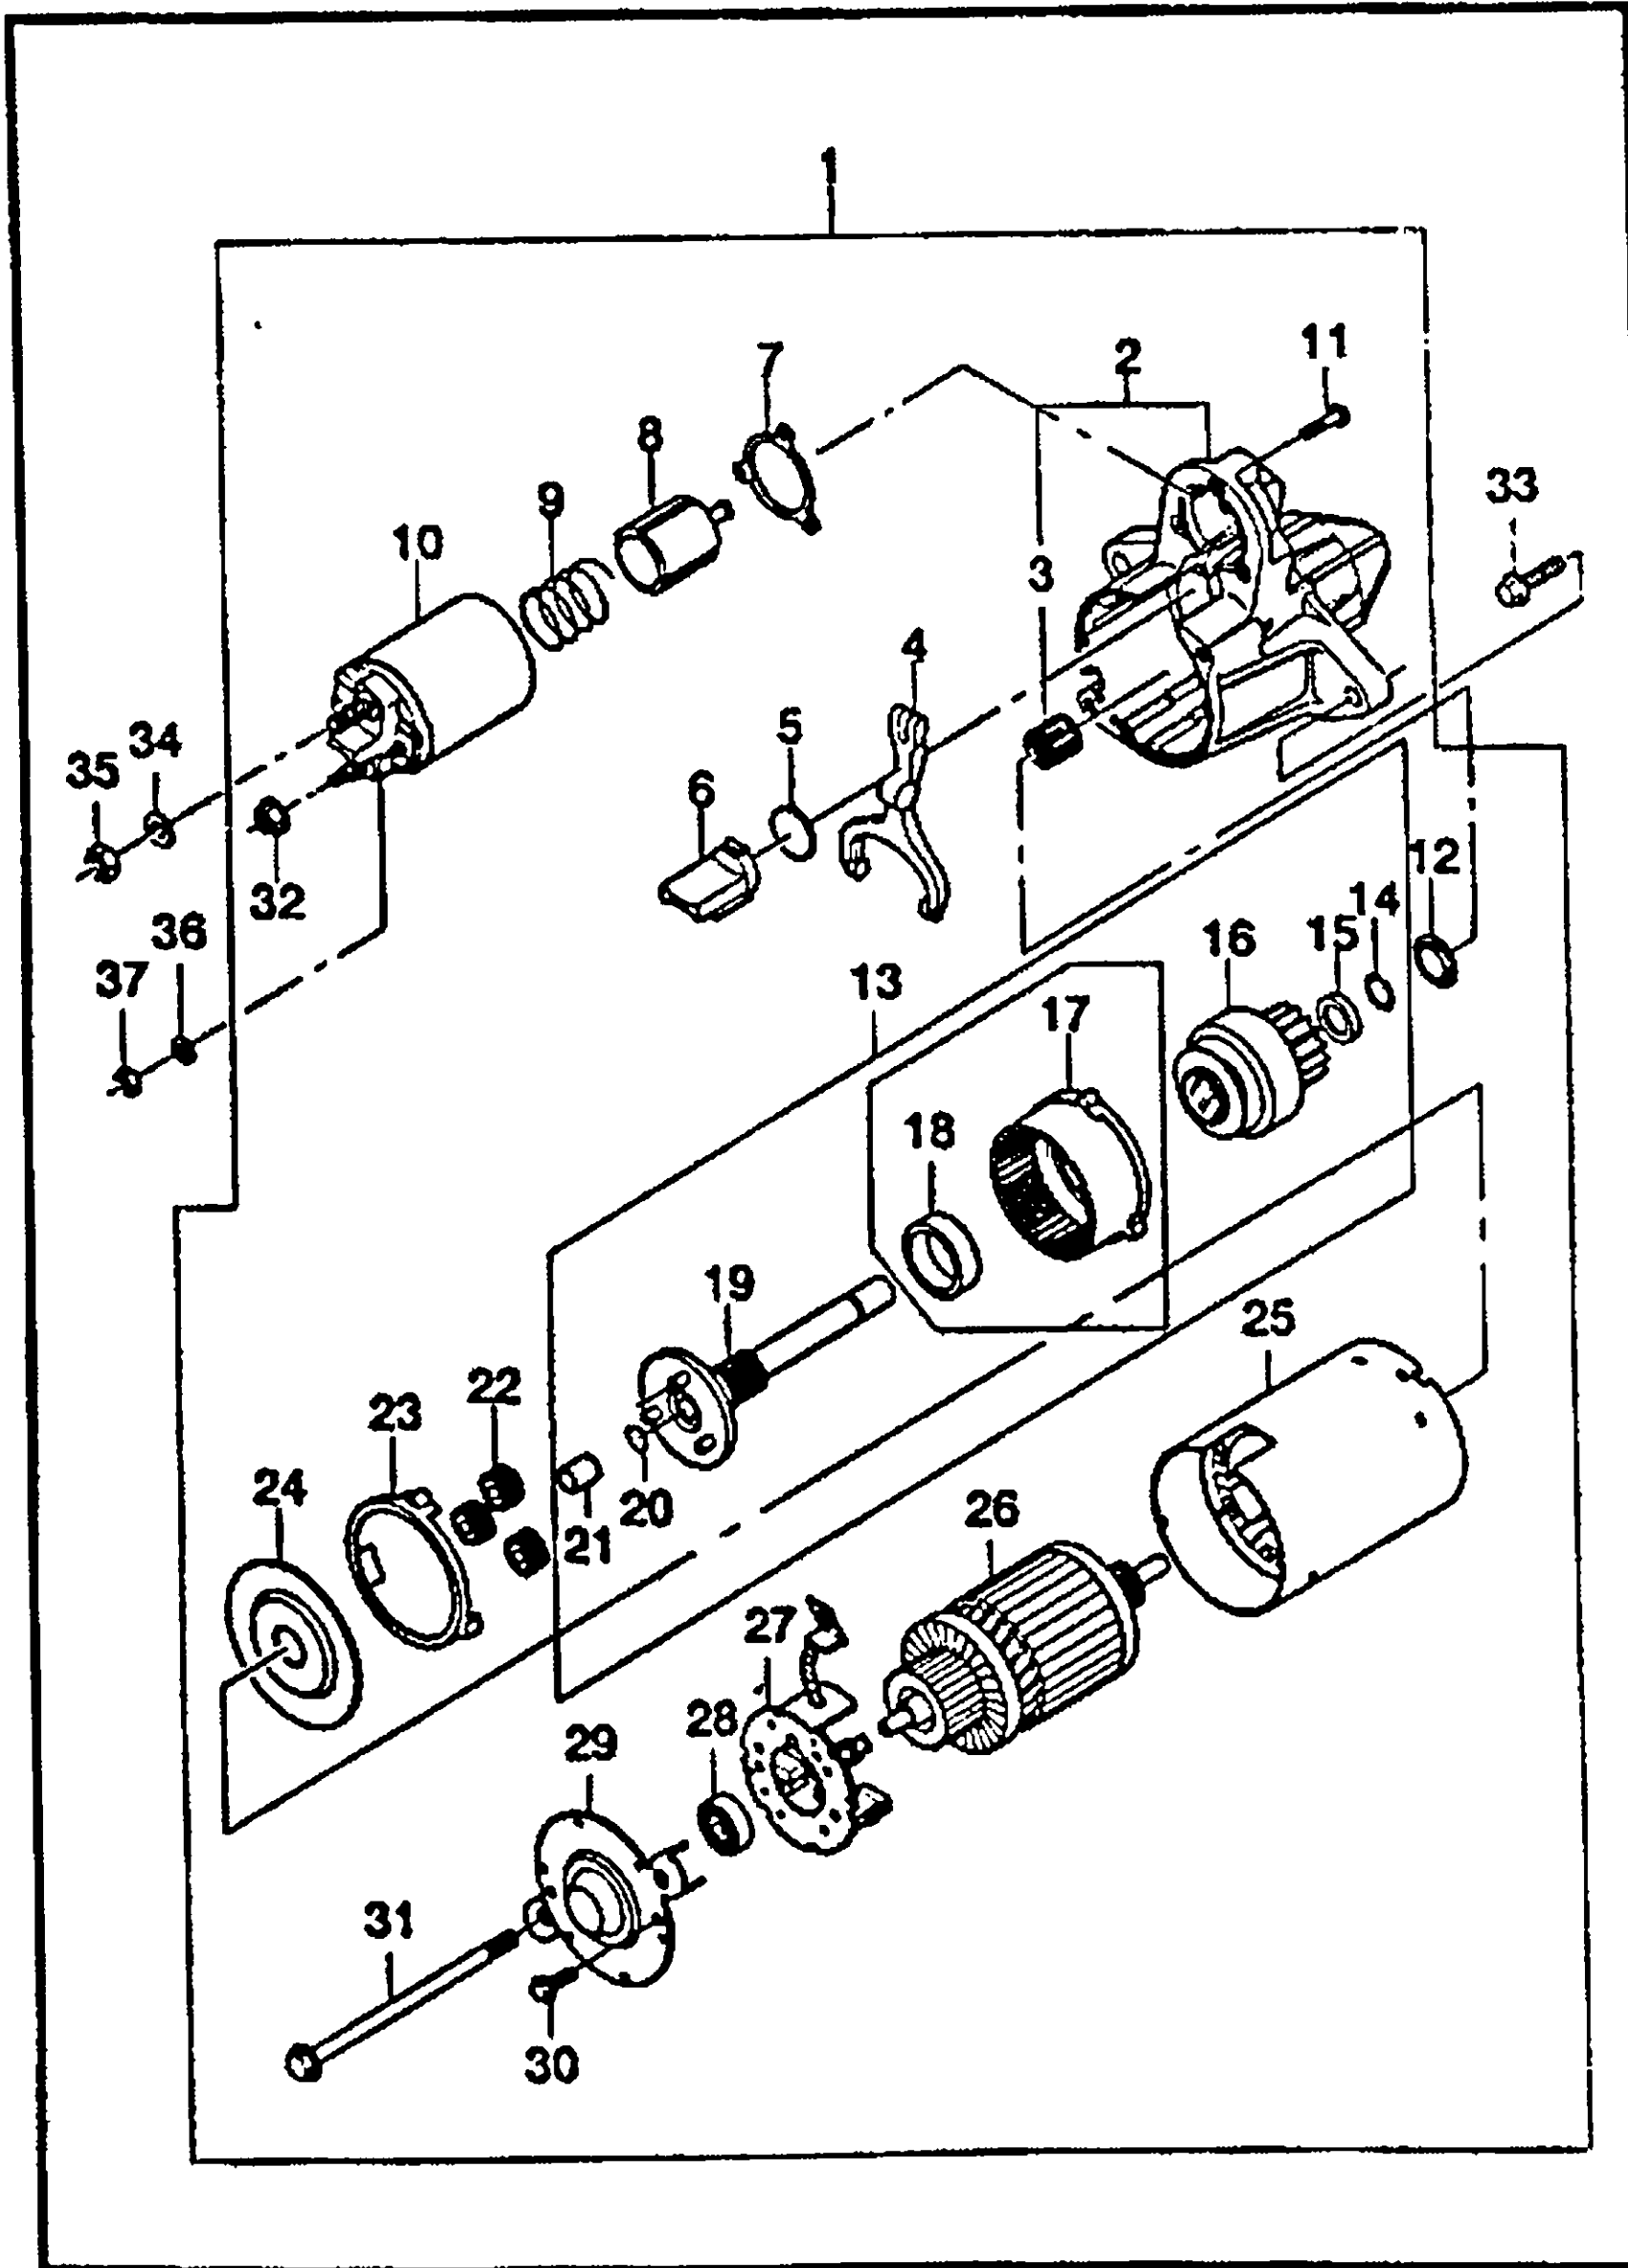


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N H	3 H H	5 S S								
	[01]	(E)STATER A (D)ANLASSER								(F)DEMARREUR (S)ARRANQUE				
	96208782	Y A B B B O O O					&NN6/NN4			1		1.4KW		SU
	96208782	Y . B B B A A A					&NN7/XCA			1		1.4KW		SU
	96208782	B . B B B . . O								1		1.4KW		SU
	[02]	(E)HOUSING (D)GEHÄUSE									(F)LOGEMENT (S)CARCASA			
	10476430	. . B B B O O O								1				
	[03]	(E)BUSHING (D)LAGERFUTTER									(F)MANCHON (S)BUJE DE BOQUILLA			
	110526	. . B B B O O O								1				
	[04]	(E)LEVER (D)HEBEL									(F)LEVIER (S)PALANCA			
	10476003	. . B B B O O O								1				
	[05]	(E)PLATE (D)PLATTE									(F)PLAQUE (S)PLACA			
	10475061	. . B B B O O O								1				
	[06]	(E)PLUG (D)STÖPSEL									(F)BOUCHON (S)TAPON			
	10475995	. . B B B O O O								1				
	[07]	(E)GASKET (D)DICHTUNG									(F)JOINT (S)JUNTA			
	110645	. . B B B O O O								1				
	[08]	(E)PLUNGER (D)TAUCHER									(F)PISTON PLONGEUR (S)EMBOLO			
	110974	. . B B B O O O								1				
	[09]	(E)SPRING (D)FEDERUNG									(F)RESSORT (S)RESORTE			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

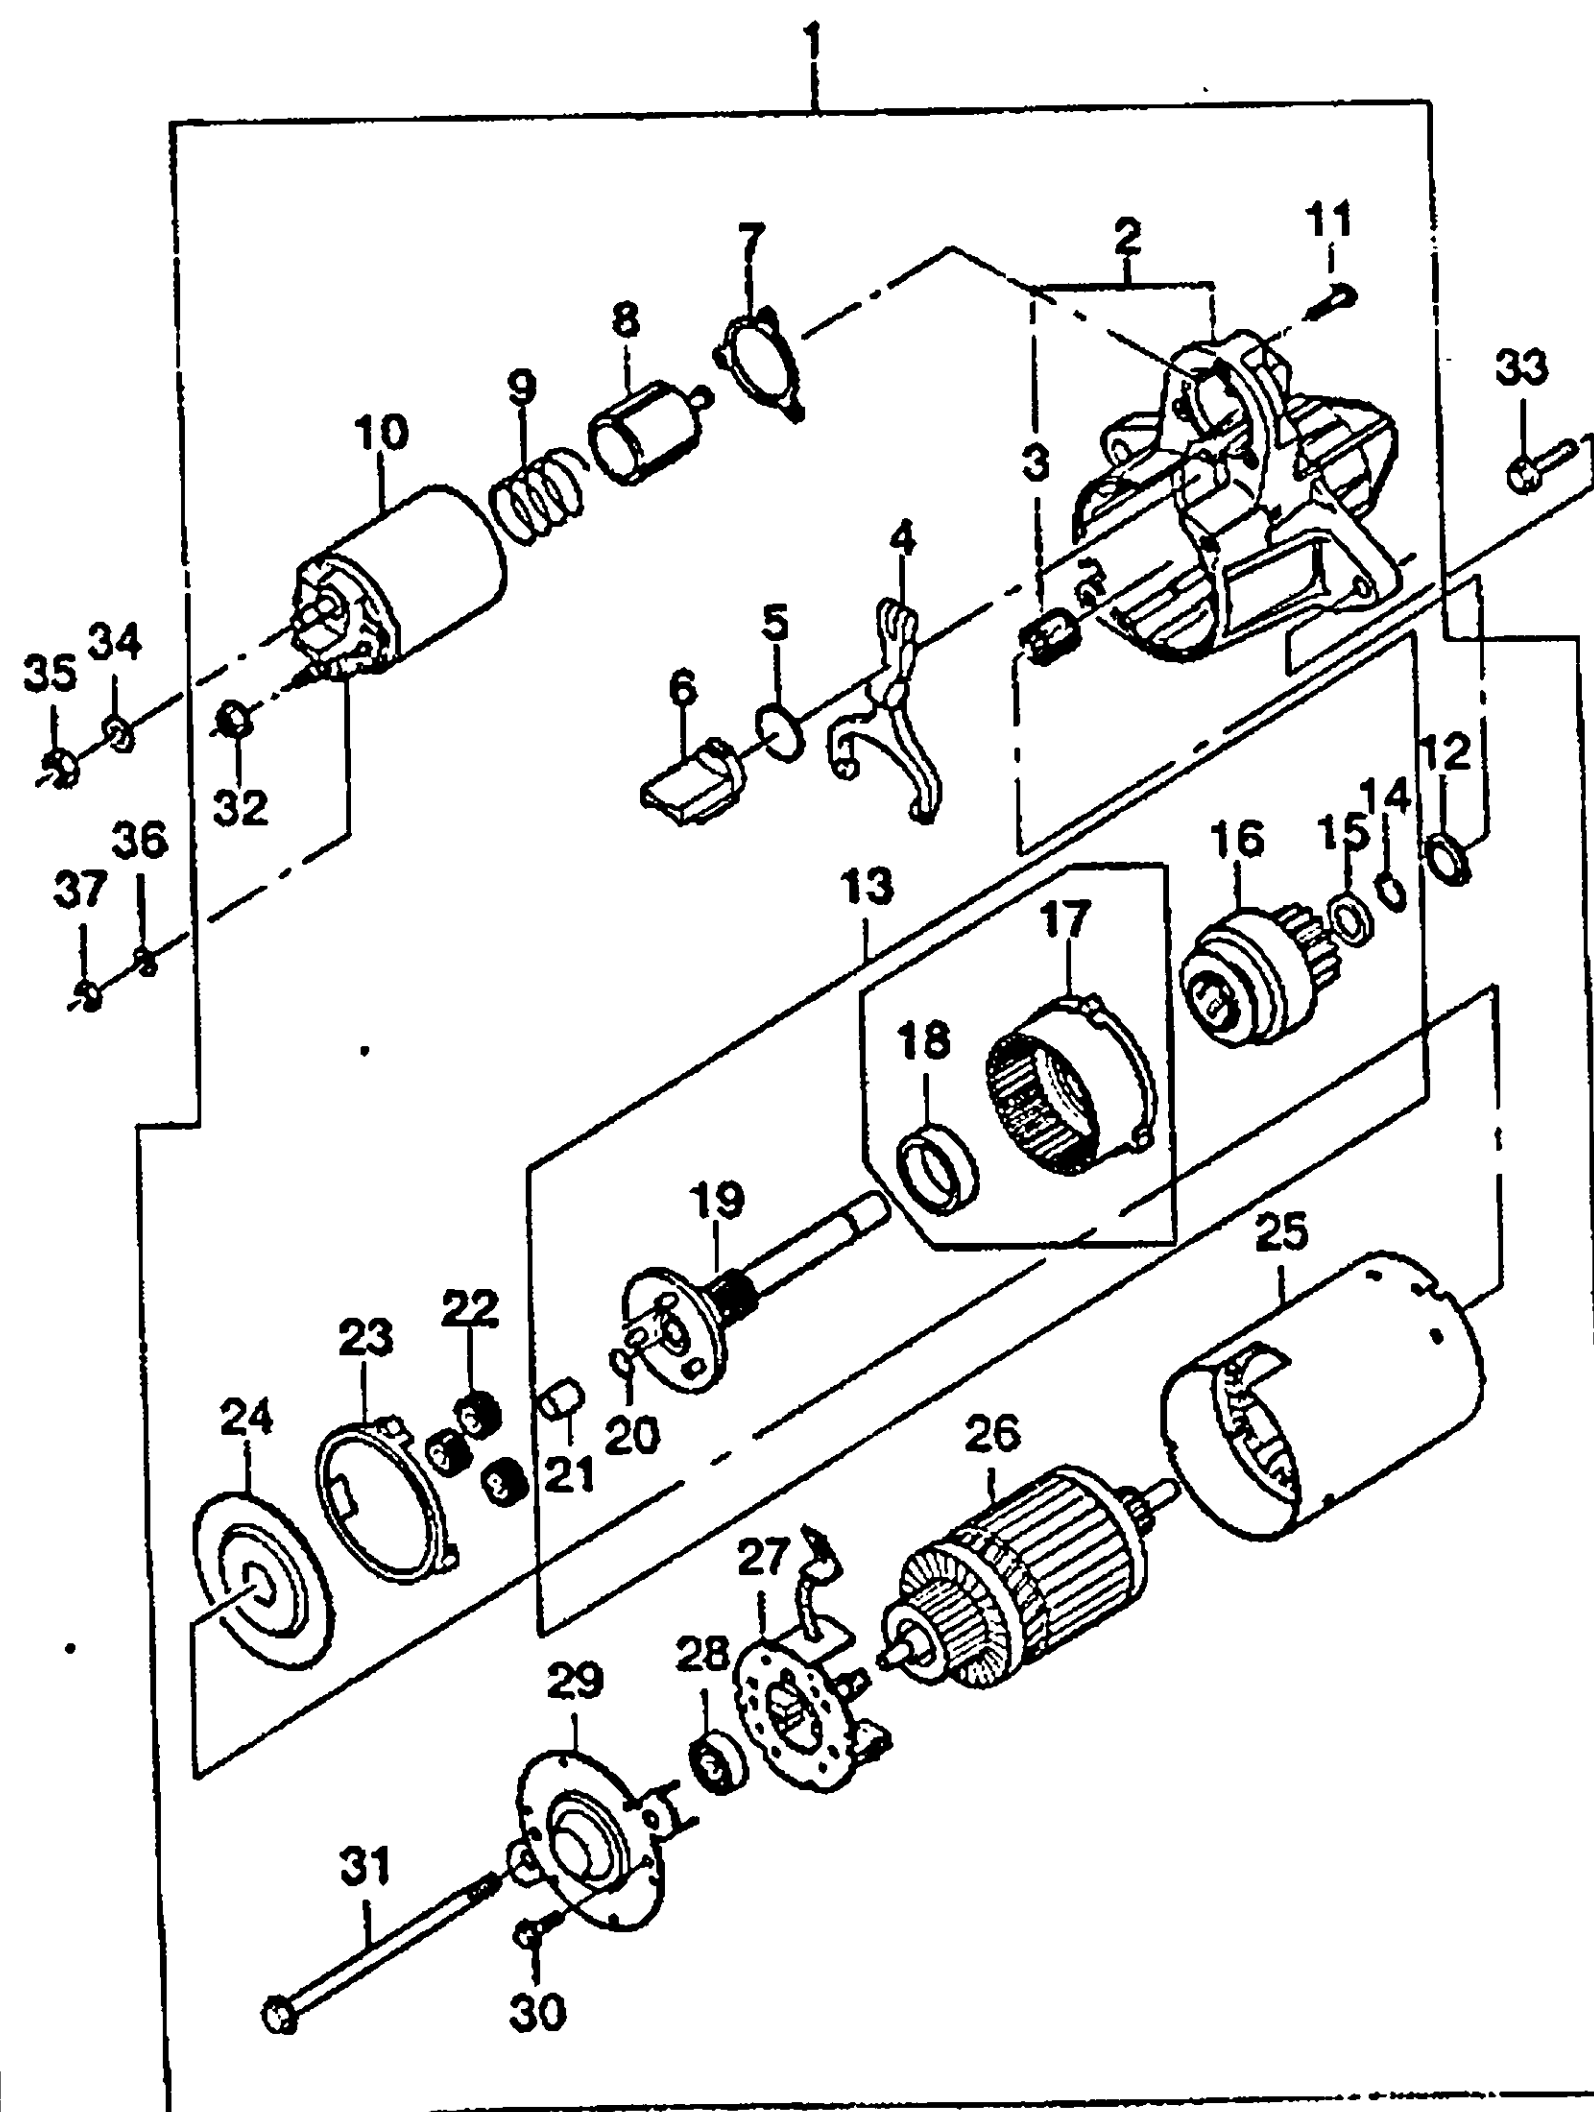


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S E
	110976	.	.	B	B	B	O	O	O		1				
	[10]	(E)SOLENOID									(F)SOLENOIDE				
		(D)SOLENOID									(S)SELENOIDE				
	110977	.	.	B	B	B	O	O	O		1				
	[11]	(E)SCREW									(F)VIS				
		(D)SCHRAUBE									(S)TORNILLO				
	10475056	.	.	B	B	B	O	O	O		3				
	[12]	(E)COLLAR									(F)COLLIER				
		(D)KRAGEN									(S)CASQUILLO				
	10477310	.	.	B	B	B	O	O	O		1				
	[13]	(E)DRIVE&SHAFT A									(F)ENTRAINEMENT&ARBRE				
		(D)ANTRIEB&SPINDEL									(S)IMPULSADOR&EJE				
	10475969	.	.	B	B	B	O	O	O		1				
	[14]	(E)RING									(F)ANNEAU				
		(D)RING									(S)ANILLO				
	01927848	.	.	B	B	B	O	O	O		1				
	[15]	(E)PINION-STOP									(F)PIGNON-ARRET				
		(D)RITZEL,STOPP									(S)PIÑON-TOPE				
	111058	.	.	B	B	B	O	O	O		1				
	[16]	(E)DRIVE									(F)ENTRAINEMENT				
		(D)ANTRIEB									(S)IMPULSADOR				
	10475974	.	.	B	B	B	O	O	O		1				
	[17]	(E)GEAR									(F)ENGRENAGE				
		(D)GETRIEBE									(S)ENGRANAJE				
	10476976	.	.	B	B	B	O	O	O		1				
	[18]	(E)BUSHING									(F)MANCHON				
		(D)LAGERFUTTER									(S)BUJE DE BOQUILLA				
	10476977	.	.	B	B	B	O	O	O		1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC		M = MANUAL T/A						4 N = 4 DOOR NOTCHBACK							
B = 1.6DOHC		A = AUTOMATIC T/A						3 H = 3 DOOR HATCHBACK							
. = COMMON		. = COMMON						5 H = 5 DOOR HATCHBACK							

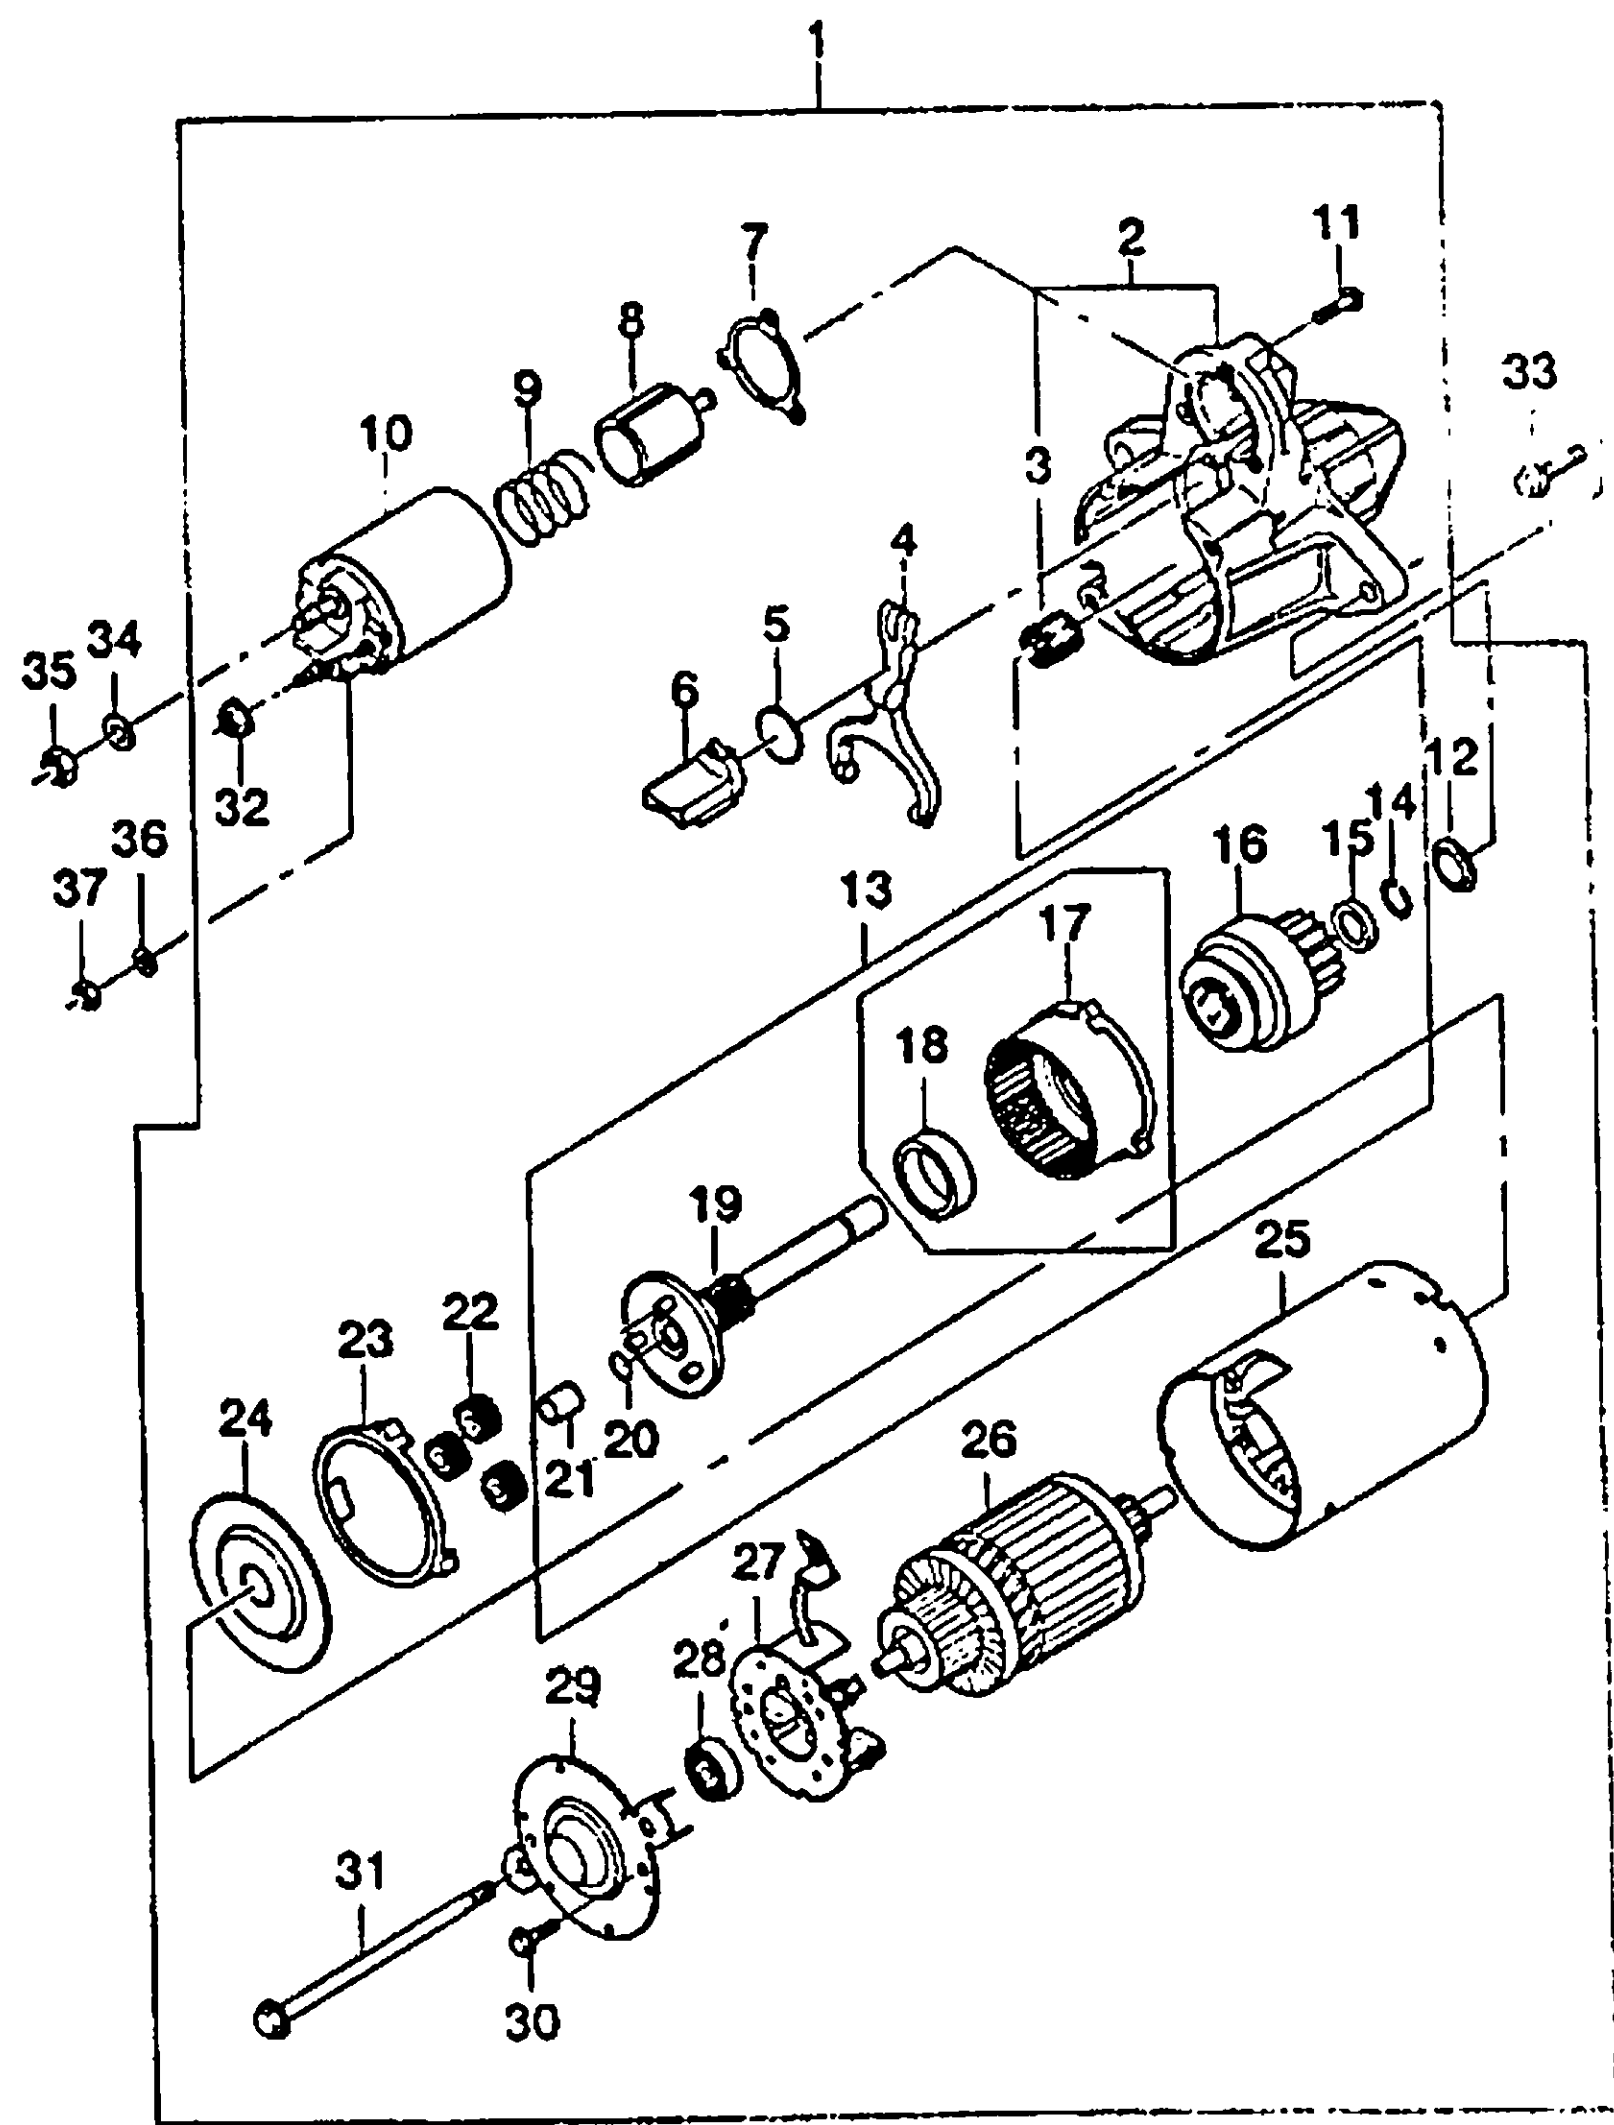


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[19]	(E)SHAFT	(D)SPINDEL								(F)ARBRE					
	10475970	.	.	B	B	B	O	O	O		1					
	[20]	(E)WASHER	(D)DICHTUNGSRING								(F)RONDELLE					
	01989917	.	.	B	B	B	O	O	O		1					
	[21]	(E)BUSHING	(D)LAGERFUTTER								(F)MANCHON					
	10475972	.	.	B	B	B	O	O	O		1					
	[22]	(E)GEAR	(D)GETRIEBE								(F)ENGRENAGE					
	10475979	.	.	B	B	B	O	O	O		3					
	[23]	(E)CUSHION	(D)POLSTER								(F)COUSSIN					
	10476005	.	.	B	B	B	O	O	O		1					
	[24]	(E)SHIELD	(D)KUGELLAGER								(F)ROULEMENT-BILLE					
	10476001	.	.	B	B	B	O	O	O		1					
	[25]	(E)FRAME-FIELD	(D)RAHMEN,FELD								(F)CADRE-CHAMP					
	10476433	.	.	B	B	B	O	O	O		1					
	[26]	(E)ARMATURE	(D)ARMATUR								(F)ARMATURE					
	10475990	.	.	B	B	B	O	O	O		1					
	[27]	(E)HOLDER BRUSH	(D)BEHÄLTER,BÜRSTE								(F)MONTURE-BALAI					
	10476006	.	.	B	B	B	O	O	O		1					
	[28]	(E)BEARING-BALL	(D)KUGELLAGER								(F)ROULEMENT-BILLE					
											(S)COJINETE DE BOLAS					
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

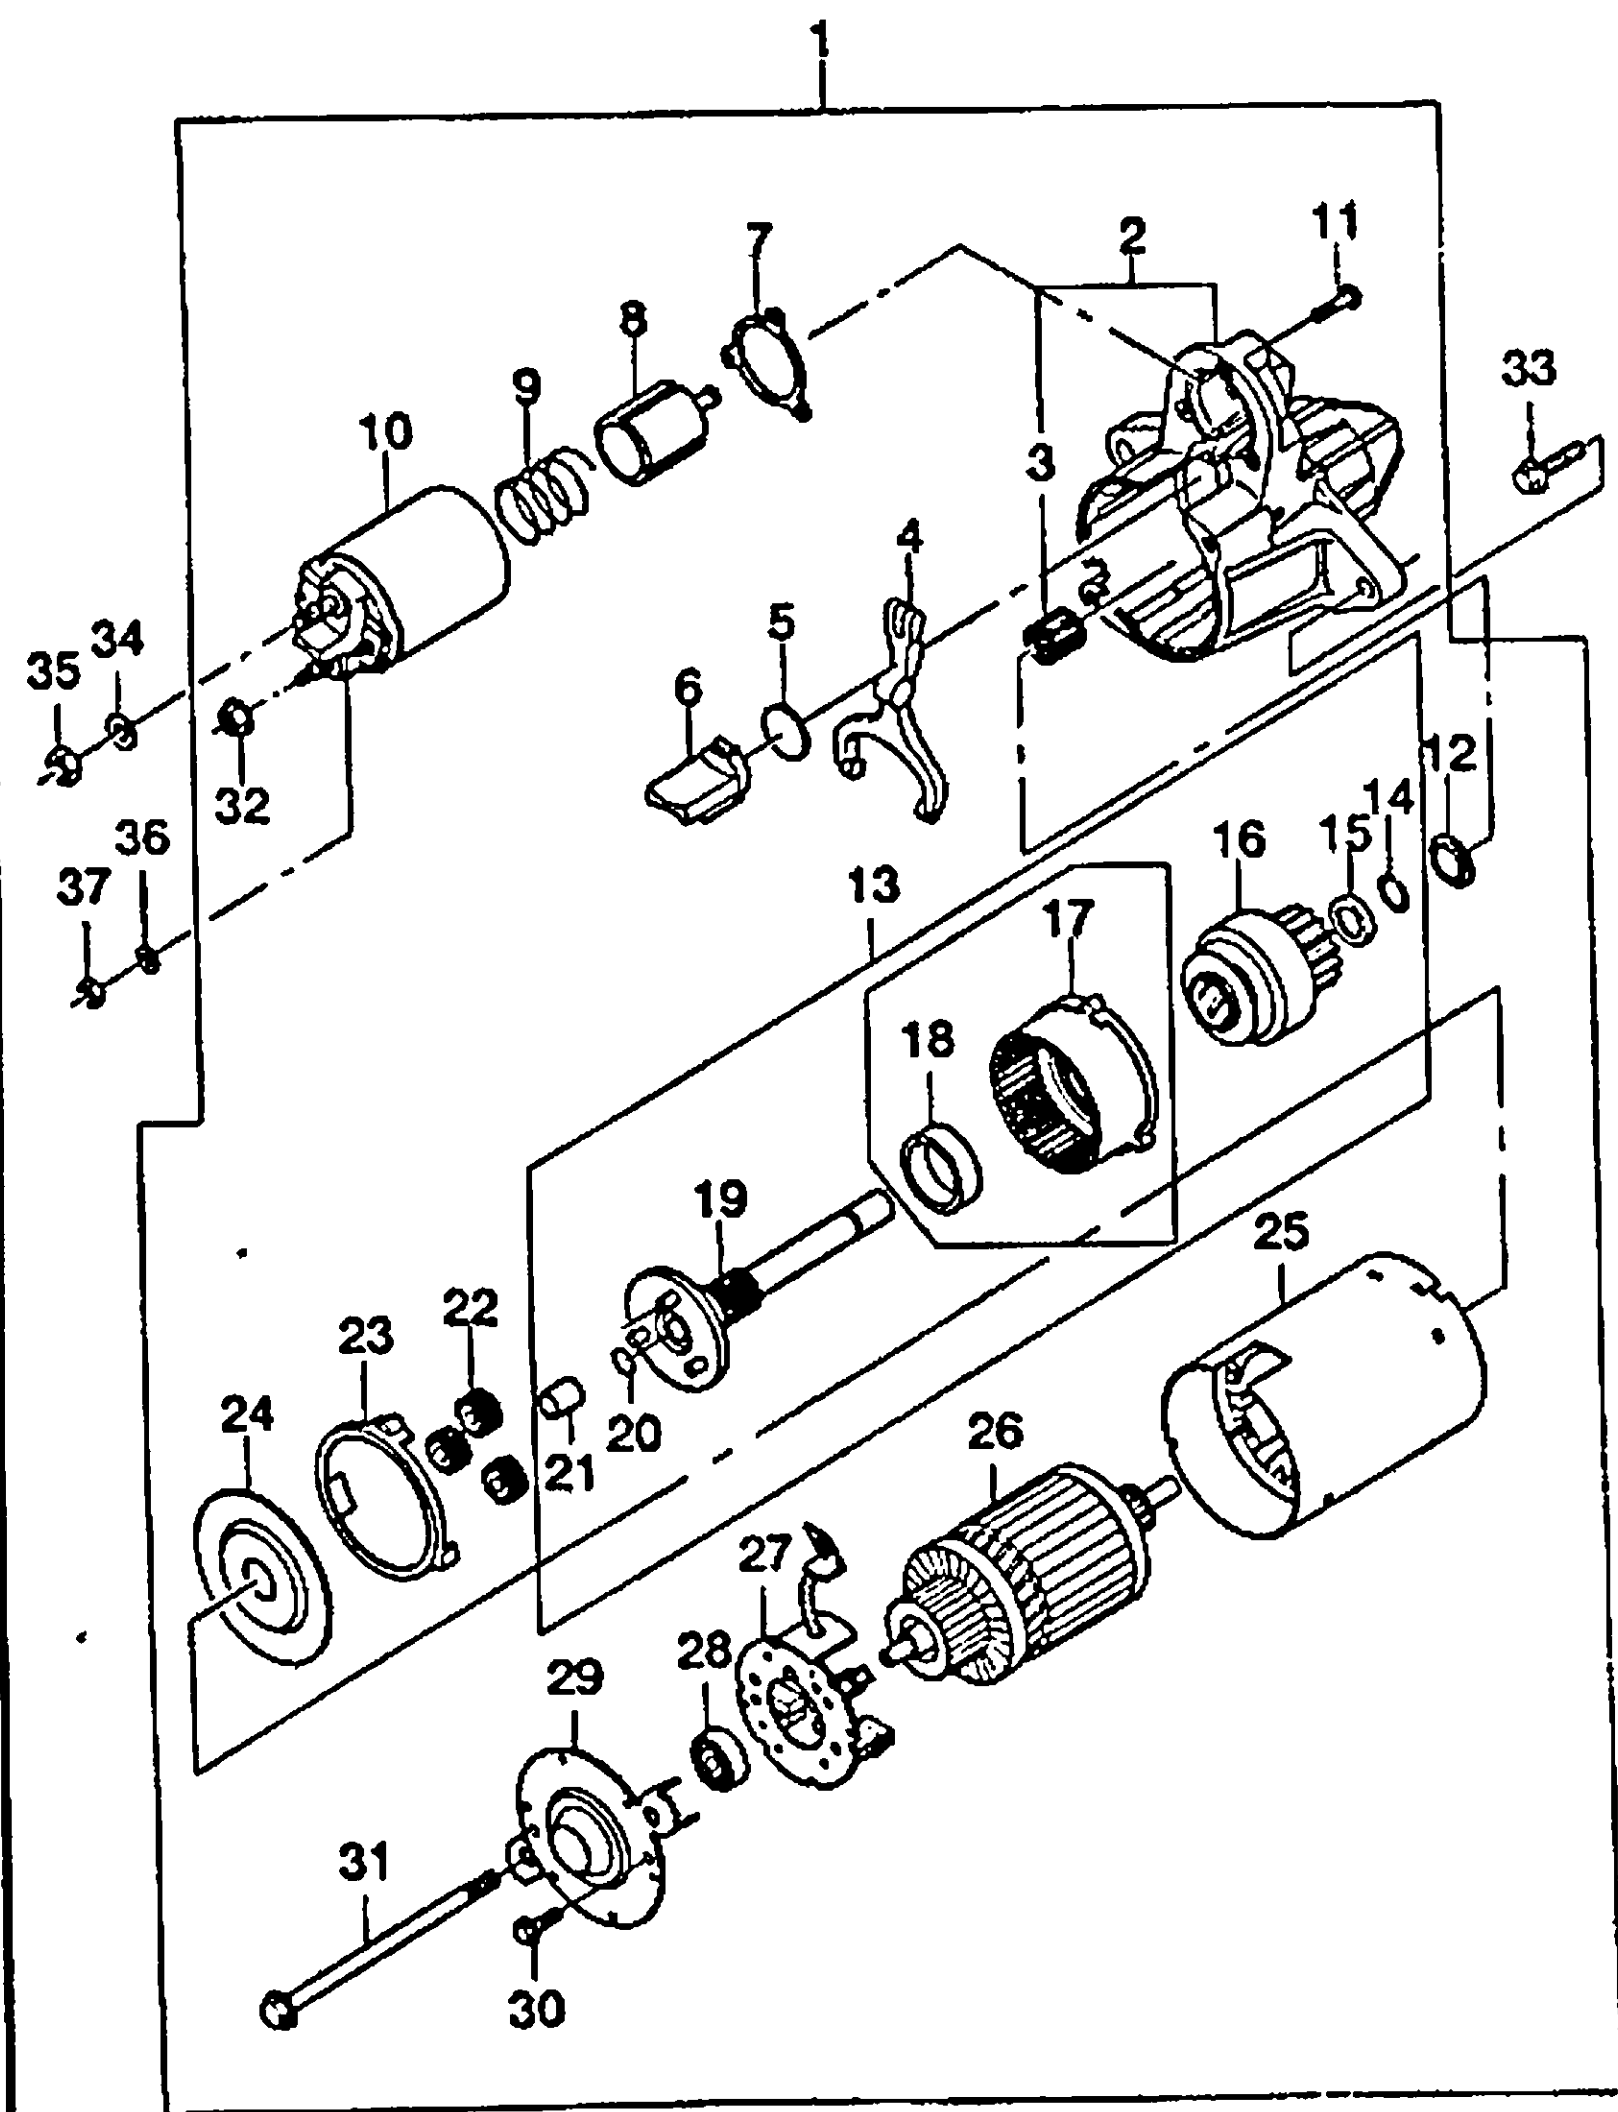


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N	3 H	5 H								
	09440924	.	.	B	B	B	O	O		1				
	[29]	(E)FRAME-COMMUTATOR END (D)RAHMEN,KOMMUTATOR ENDE									(F)CADRE (S)ARMADURA			
	10468555	.	.	B	B	B	O	O		1				
	[30]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO			
	10497256	.	.	B	B	B	O	O		2				
	[31]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO			
	10476002	.	.	B	B	B	O	O		1				
	[32]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA			
	110720	.	.	B	B	B	O	O		1				
	[33]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO			
	08956812	.	.	B	B	B	O	O		2			M8X1.25X25	
	[34]	(E)WASHER-SPRING (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA			
	08321-21083	.	.	B	B	B	O	O		1				
	[35]	(E)NUT-HEXAGON (D)MUTTER									(F)ECROU (S)TUERCA			
	08310-11083	.	.	B	B	B	O	O		1				
	[36]	(E)WASHER-SPRING (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA			
	08321-21063	.	.	B	B	B	O	O		1				
	[37]	(E)NUT-HEXAGON (D)MUTTER									(F)ECROU (S)TUERCA			
	08310-21063	.	.	B	B	B	O	O		1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

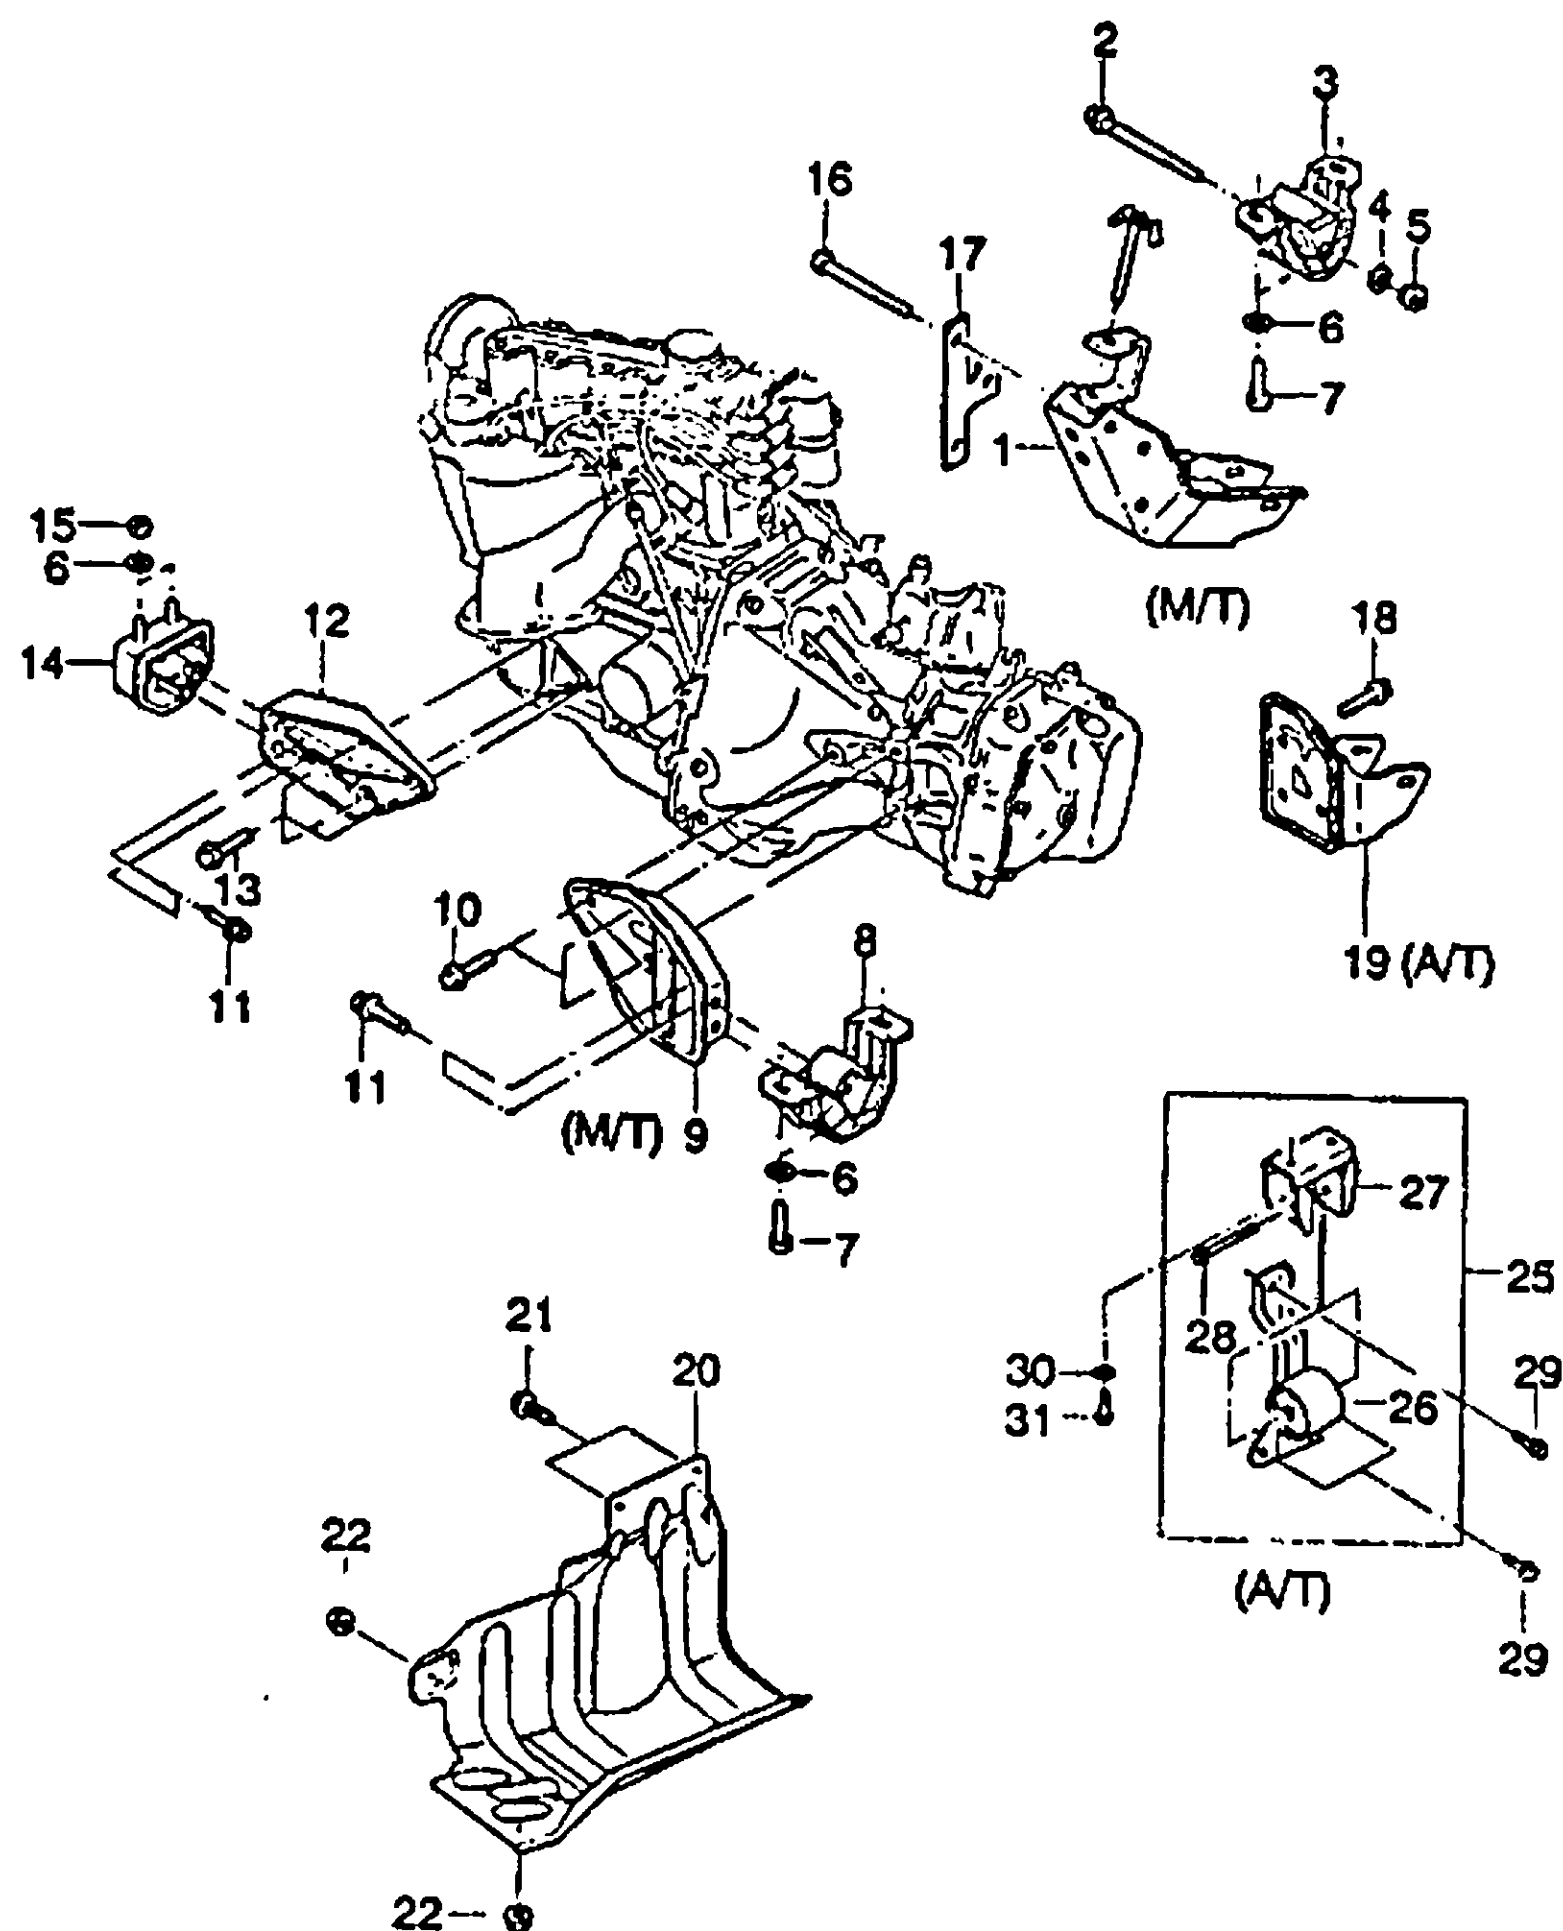

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S S				S S	S X		
	[01] 96221086	(E)BRACKET (D)TRÄGER	A-POWER UNIT MT,RR							(F)SUPPORT (S)SOPORTE-MONTAJE				MR
	[02] 09103-10033	. M B B B S S S (E)BOLT-HEXAGON FLANGE (D)SCHRAUBE								1 (F)BOULON (S)PERNO				
	[03] 90372462	. . B B B S S S (E)BLOCK-PWR UNIT DAMPING,RR (D)BLOCK-DÄMPFUNG								1 (F)BLOC-AMORTISSEUR (S)BLOQUE				TE
	96227422	. A B B B O O O (E)WASHER-PLAIN (D)DICHTUNGSRING								1 (F)RONDELLE (S)ARANDELA				XA
	[04] 09160-10001	. . B B B S S S (E)NUT (D)MUTTER								1 (F)ECROU (S)TUERCA				
	[05] 09159-10004	. . B B B S S S (E)WASHER-PLAIN (D)DICHTUNGSRING								1 (F)RONDELLE (S)ARANDELA				
	[06] 09160-10004	Y . B B B S S S								6				
	[07] 09160-10004	6 . B B B . . O (E)BOLT-HEXAGON (D)SCHRAUBE								4 (F)BOULON (S)PERNO				
	[08] 09100-10012	. . B B B S S S (E)BLOCK-PWR UNIT DAMPING,FRT (D)BLOCK-DÄMPFUNG								4 (F)BLOC-AMORTISSEUR (S)BLOQUE				
	[09] 90250437	. M B B B S S S (E)BRACKET A-POWER UNIT MT,FRT (D)TRÄGER								LH 1 (F)SUPPORT (S)SOPORTE-MONTAJE				
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

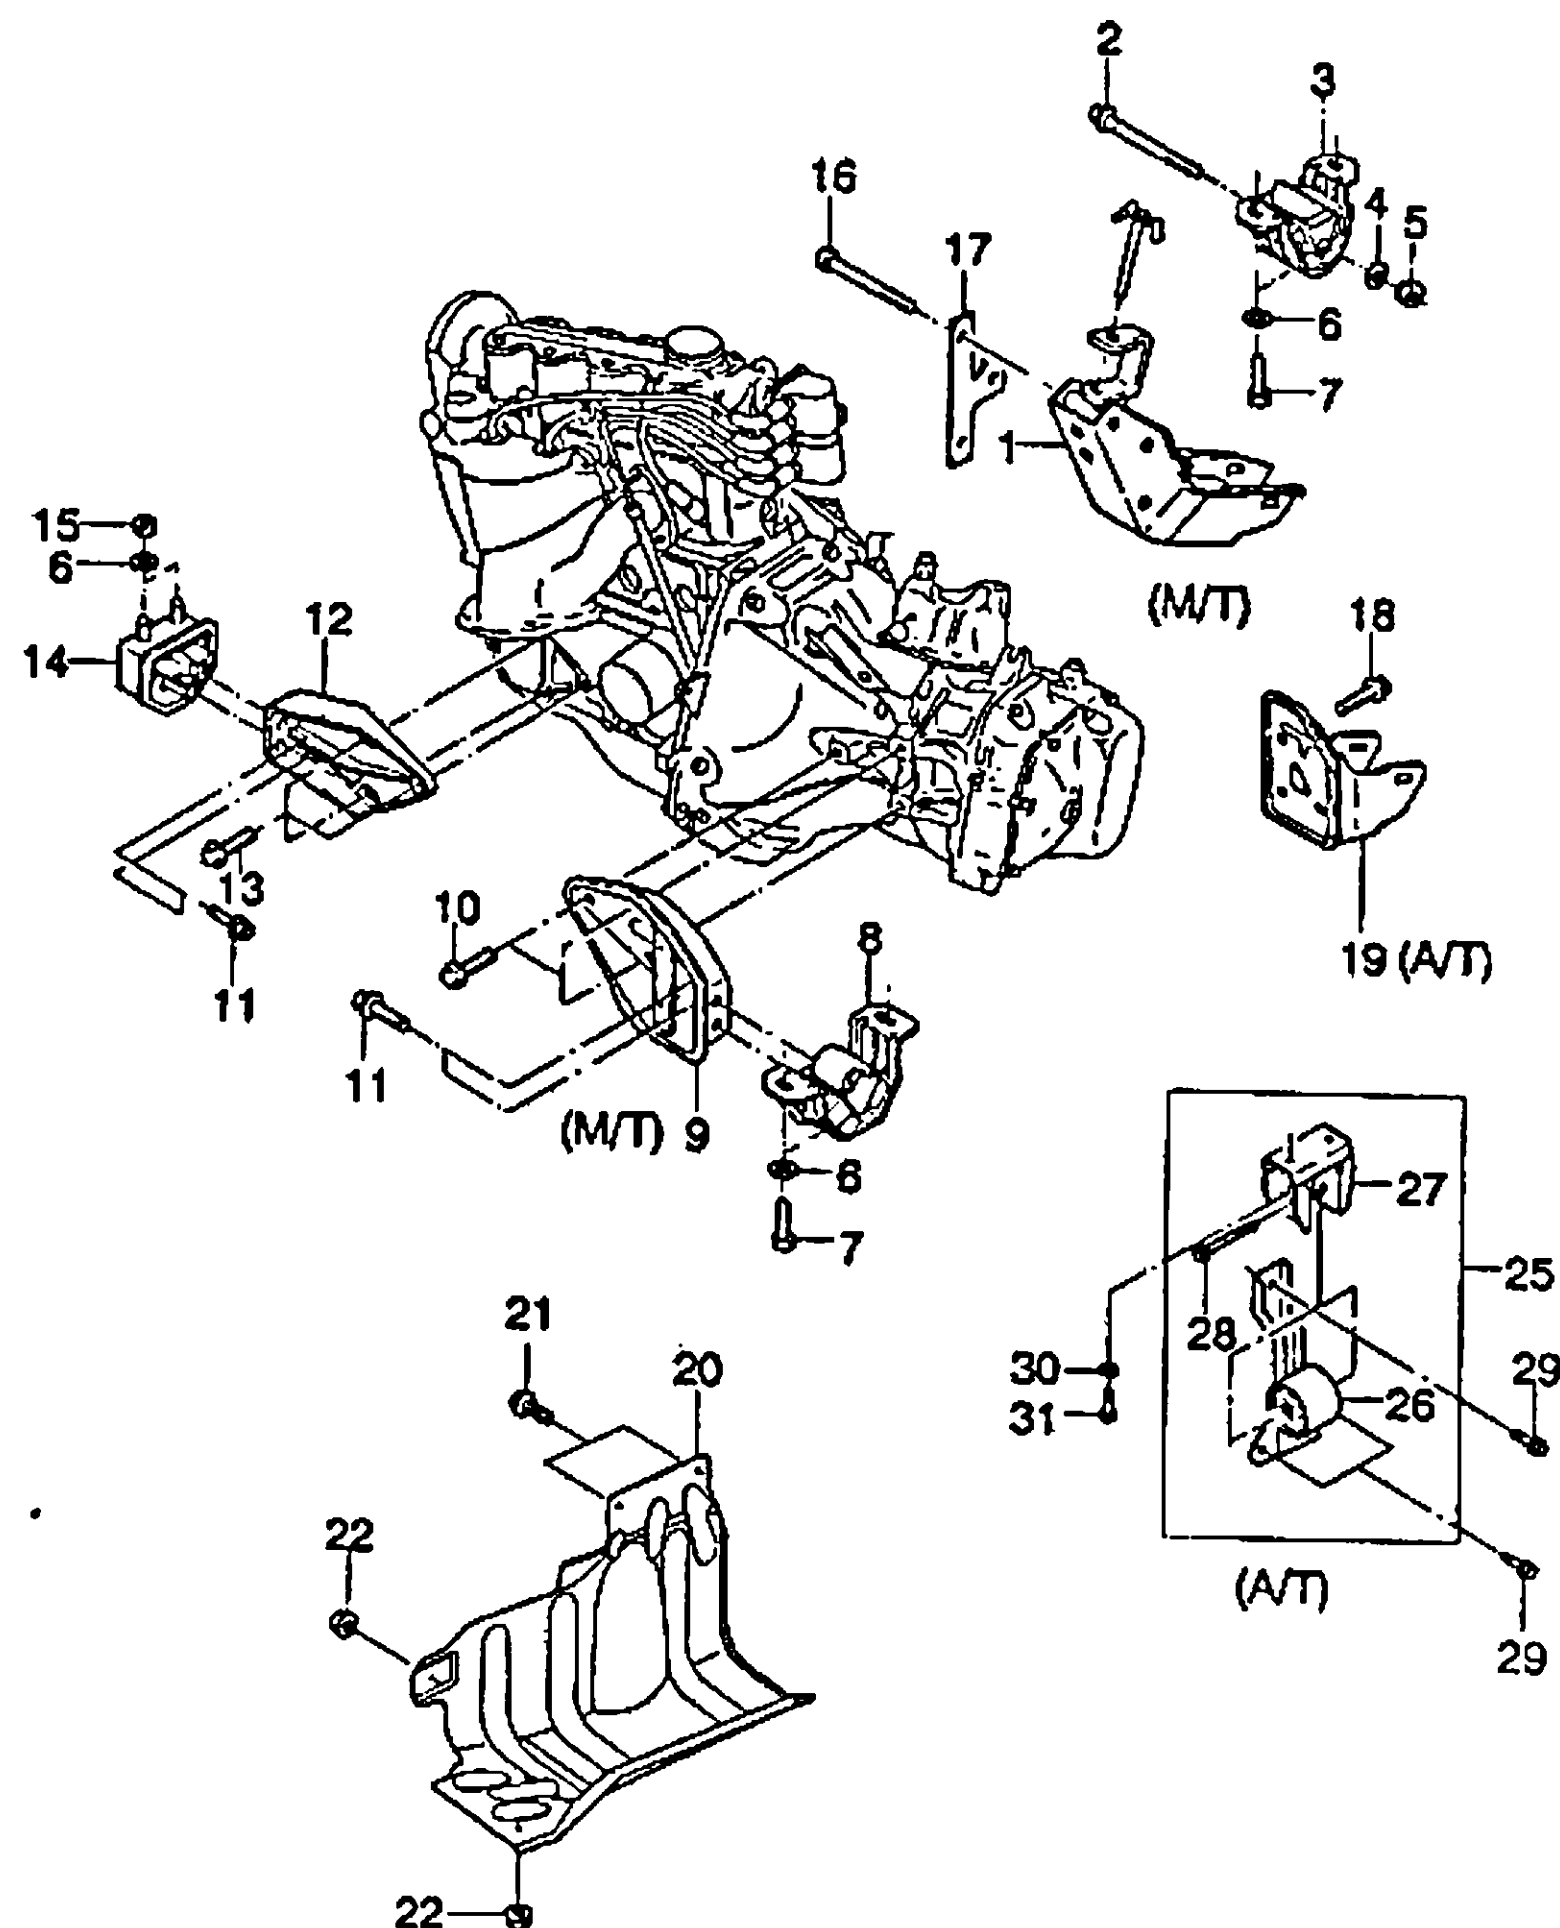


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S S S								S S S S
	96181254	.	M	B	B	B	S	S	S		LH 1			M5	
	[10]										(F)BOULON (S)PERNO				
	09103-10032	.	M	B	B	B	S	S	S		LH 3				
	[11]										(F)BOULON (S)PERNO				
	09103-10009	.	.	B	B	B	S	S	S		3				
	[12]										(F)SUPPORT (S)SOPORTE-MONTAJE				
	96078088	.	M	B	B	B	S	S	S		RH 1			FC	
	96181134	.	A	B	B	B	O	O	O		RH 1			A4	
	[13]										(F)BOULON (S)PERNO				
	09103-10011	.	.	B	B	B	S	S	S		RH 3				
	[14]										(F)BLOC-AMORTISSEUR (S)BLOQUE				
	90250348	.	M	B	B	B	S	S	S		RH 1				
	96227425	.	A	B	B	B	O	O	O		RH 1			XB	
	[15]										(F)ECROU (S)TUERCA				
	09140-10001	Y	.	B	B	B	S	S	S		2				
	09159-10006	6	.	B	B	B	.	.	O		2				
	[16]										(F)BOULON (S)PERNO				
	09100-12004	.	M	B	B	B	S	S	S		3				
	[17]										(F)PLAQUE-VERROUILLAGE (S)PLACA-CIERRE				
	96243426	.	M	B	B	B	S	S	S		1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

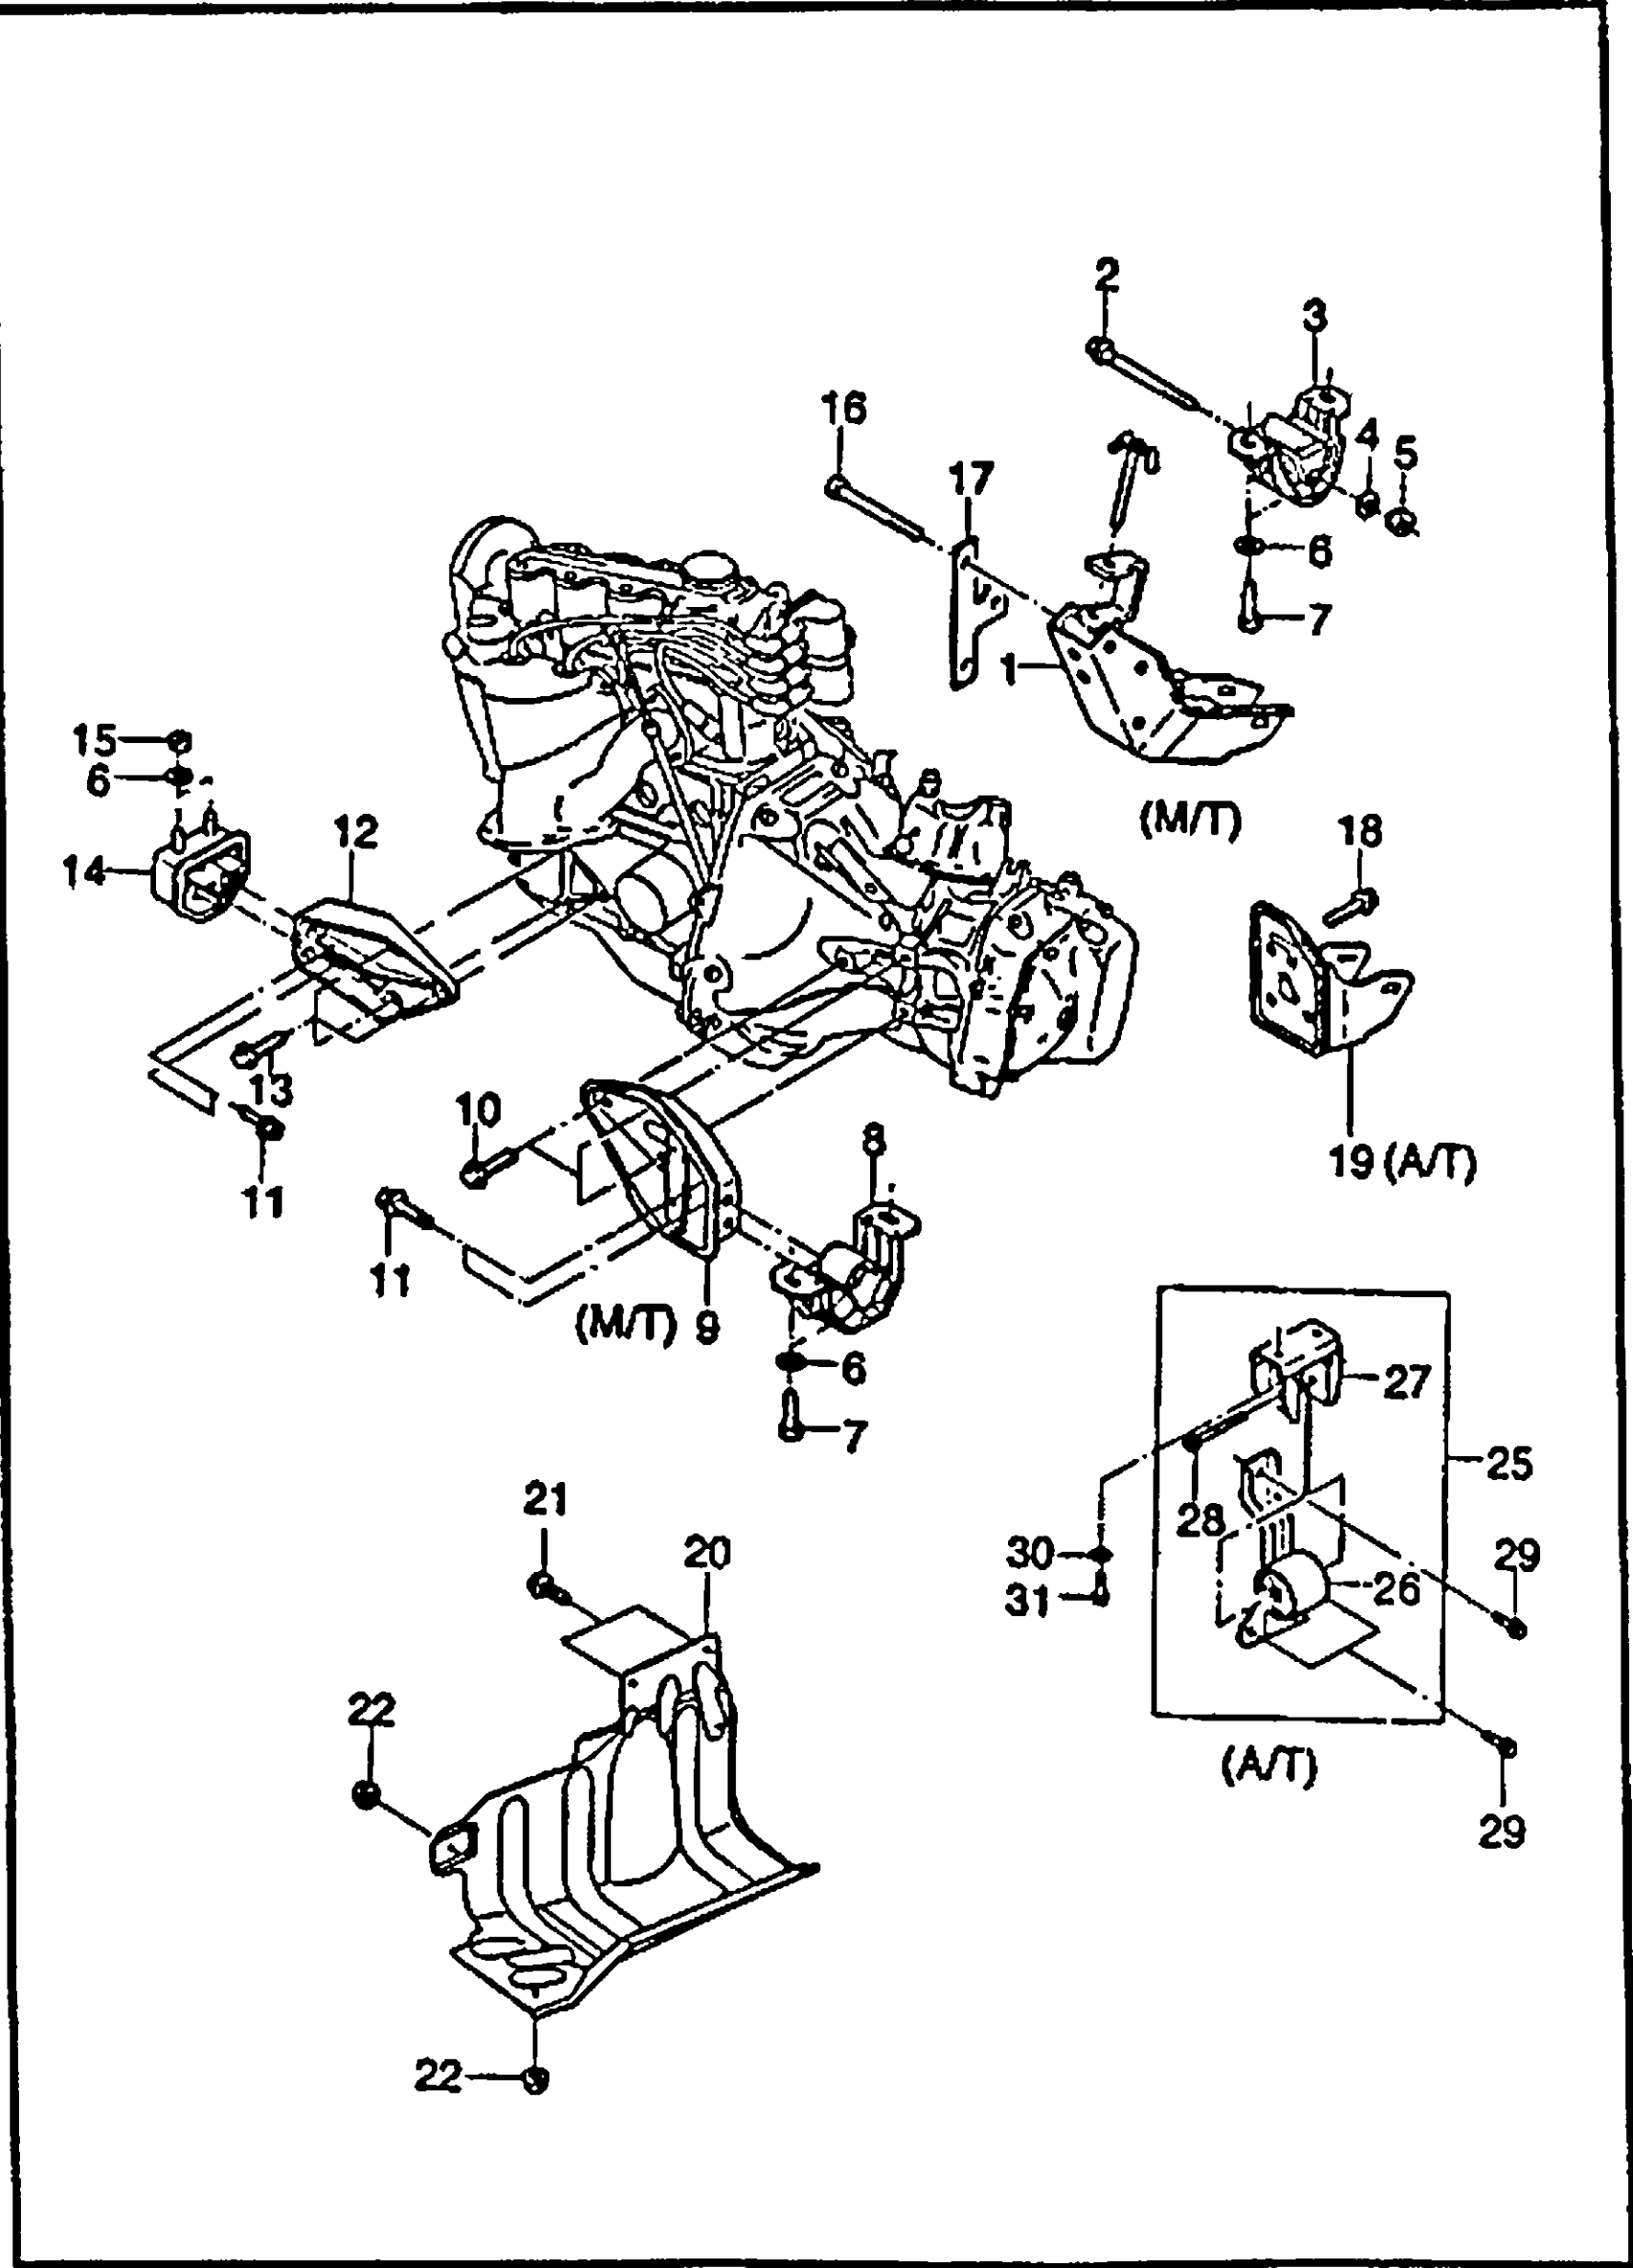

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E T N G A	BODY			LEVEL					FROM	TO			
			4 N	3 H	5 H	S	S								S
	[18] 09103-10011	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE . A B B B O O O									(F)BOULON (S)PERNO 3				
	[19] 96181137	(E)BRACKET A-POWER UNIT MT,RR (D)TRÄGER . A B B B O O O									(F)SUPPORT (S)SOPORTE-MONTAJE 1		L4		
	[20] 96251681	(E)DEFLECTOR-WATER (D)WASSERSCHUTZ-FLÜGEL . . B B B S S S									(F)DEFLECTEUR-EAU (S)DEFLECTOR-AGUA 1				
	[21] 09116-06011	(E)BOLT (D)SCHRAUBE . . B B B S S S									(F)BOULON (S)PERNO 2				
	[22] 08361-25063	(E)NUT-HEXAGON (D)MUTTER . . B B B S S S									(F)ECROU (S)TUERCA 2				
	[25] 96214804	(E)BRACKET A-POWER UNIT MOUNT (D)TRÄGER . A B B B O O O									(F)SUPPORT (S)SOPORTE LH 1		G4		
	[26] 96181132	(E)BRACKET-POWER UNIT MT,FRT (D)TRÄGER . A B B B O O O									(F)SUPPORT (S)SOPORTE LH 1				
	[27] 96181129	(E)SUPPORT A-POWER UNIT MT,FRT (D)TRÄGER . A B B B O O O									(F)SUPPORT (S)SOPORTE LH 1				
	[28] 09103-10034	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE . A B B B O O O									(F)BOULON (S)PERNO LH 1				
	[29]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE									(F)BOULON (S)PERNO				
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

1910 ENGINE MOUNT


3E11

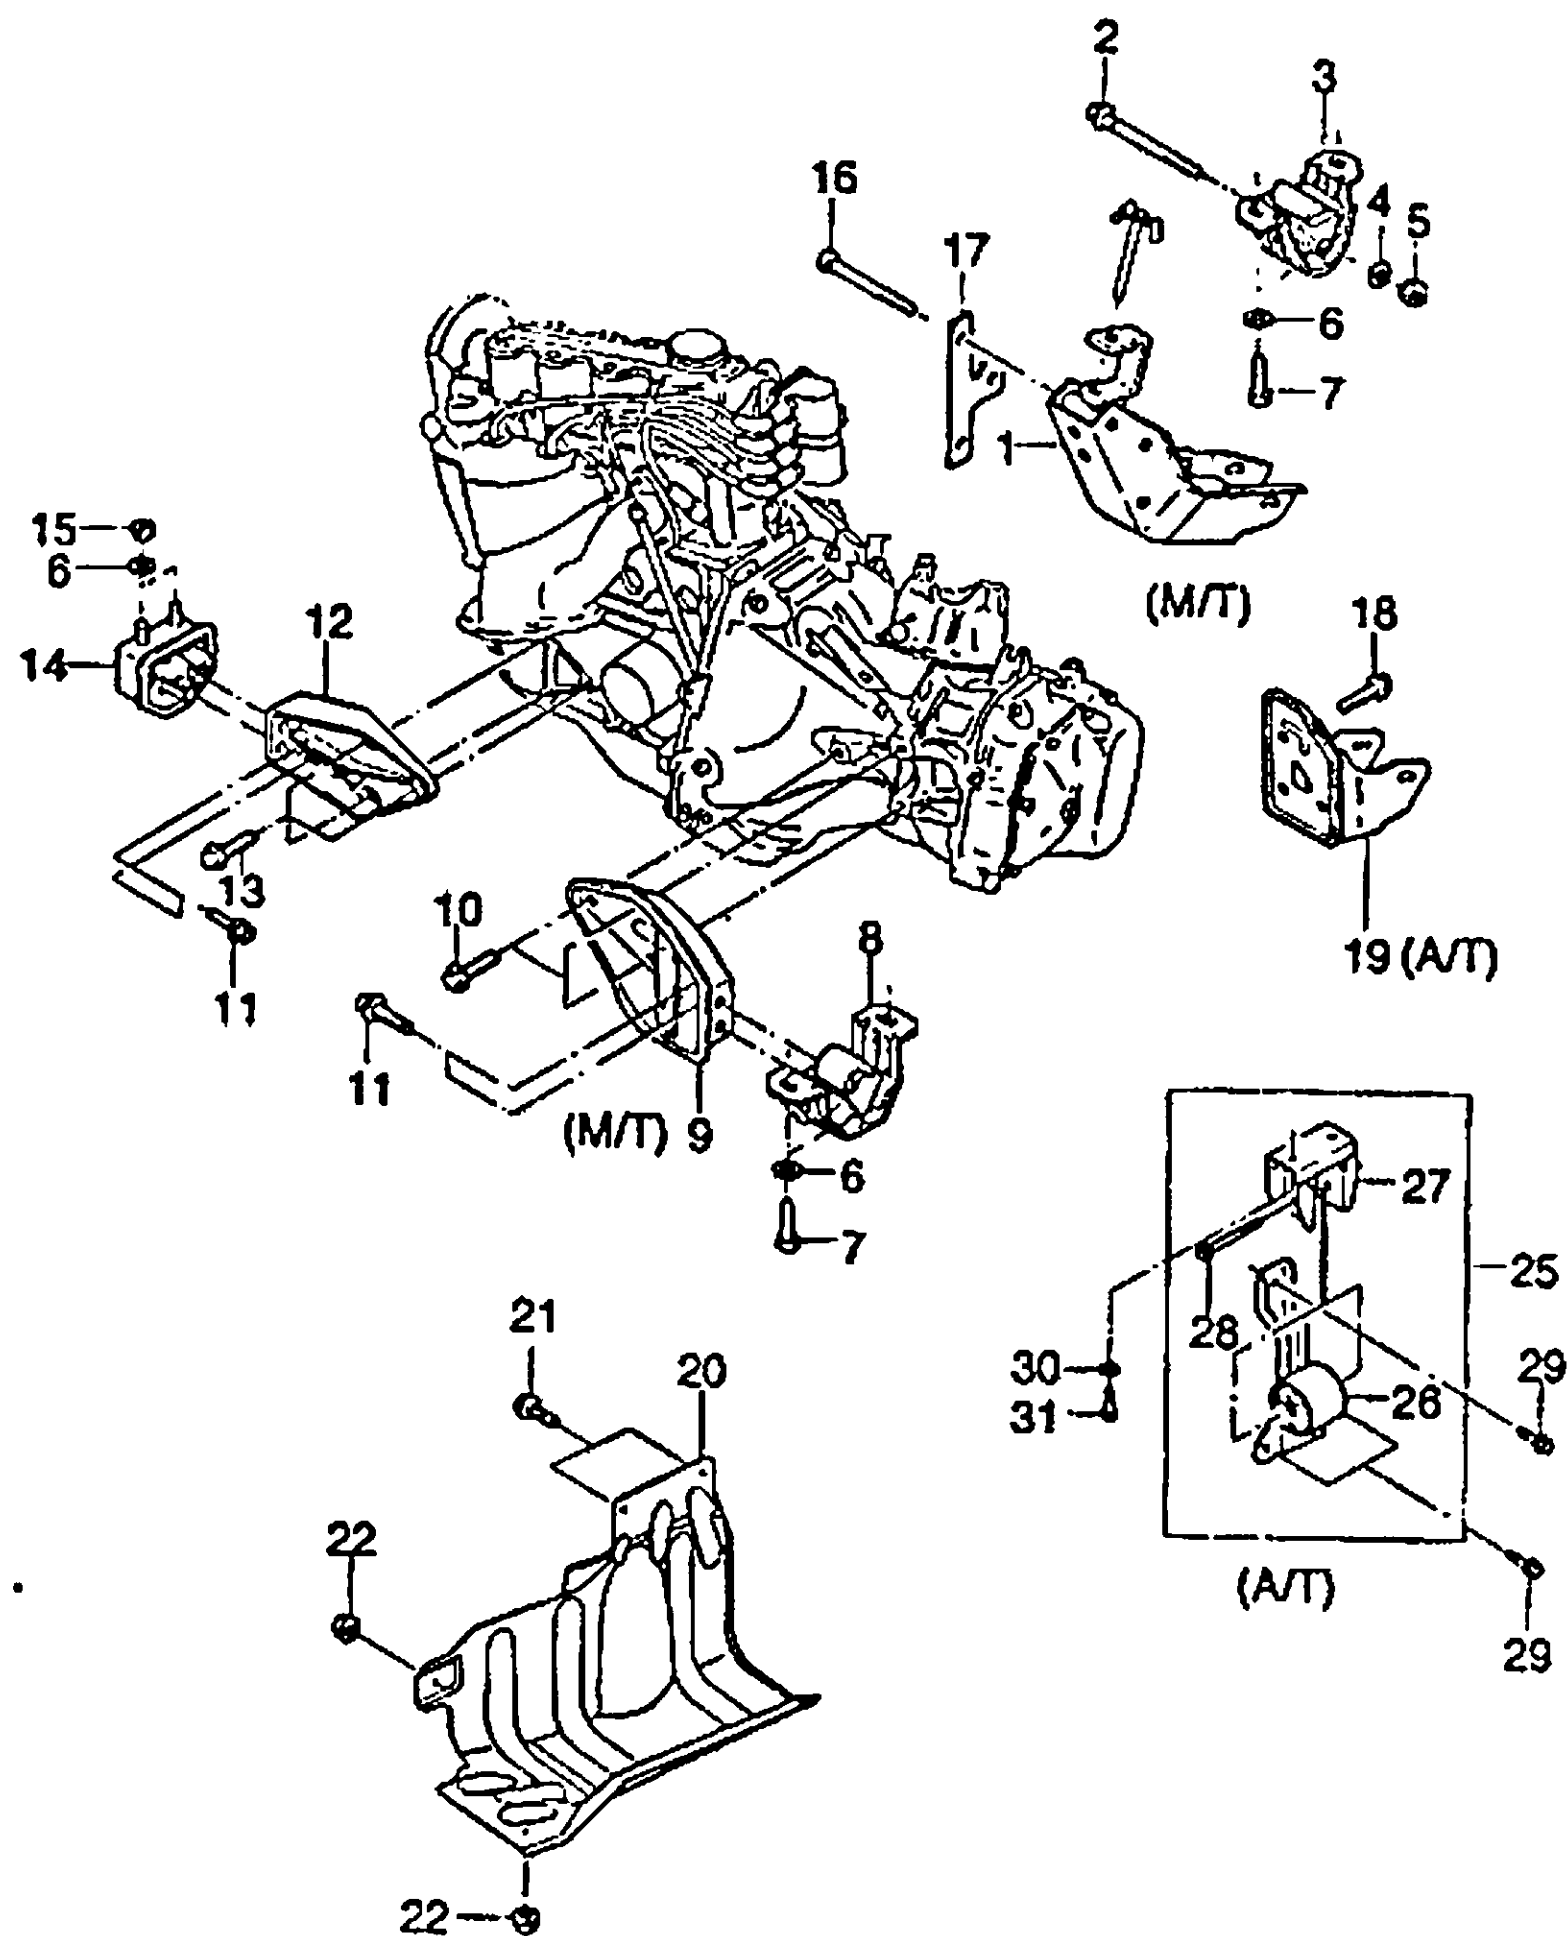


KEY NO.				PART NAME												
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S E								S X
	09103-12018 [30]	. A	B	B	B	O	O	O			LH 3					
		(E)WASHER-PLAIN									(F)RONDELLE					
		(D)DICHTUNGSRING									(S)ARANDELA					
	09160-10004 [31]	. A	B	B	B	O	O	O			LH 2					
		(E)BOLT-HEXAGON									(F)BOULON					
		(D)SCHRAUBE									(S)PERNO					
	09100-10012	. A	B	B	B	O	O	O			LH 2					
													</			

2**FUEL&ENGINE CONTROL**


- 2110 FUEL TANK
- 2120 FUEL LINE
- 2130 CANISTER&FUEL VACUUM
- 2210 FUEL INJECTION(SOHC)
- 2211 FUEL INJECTION(DOHC)
- 2212 FUEL INJECTION(ALCOHOL)
- 2220 ACCELERATOR CONTROL
- 2410 AIR INTAKE SYSTEM
- 2430 INTAKE MANIFOLD(SOHC)
- 2431 INTAKE MANIFOLD(DOHC)
- 2440 EXHAUST MANIFOLD(SOHC)
- 2441 EXHAUST MANIFOLD(DOHC)
- 2450 VACUUM HOSE(SOHC)
- 2451 VACUUM HOSE(DOHC)
- 2460 EXHAUST PIPE LINE
- 2510 EMISSION CONTROL
- 2520 EMISSION MODULE MOUNT

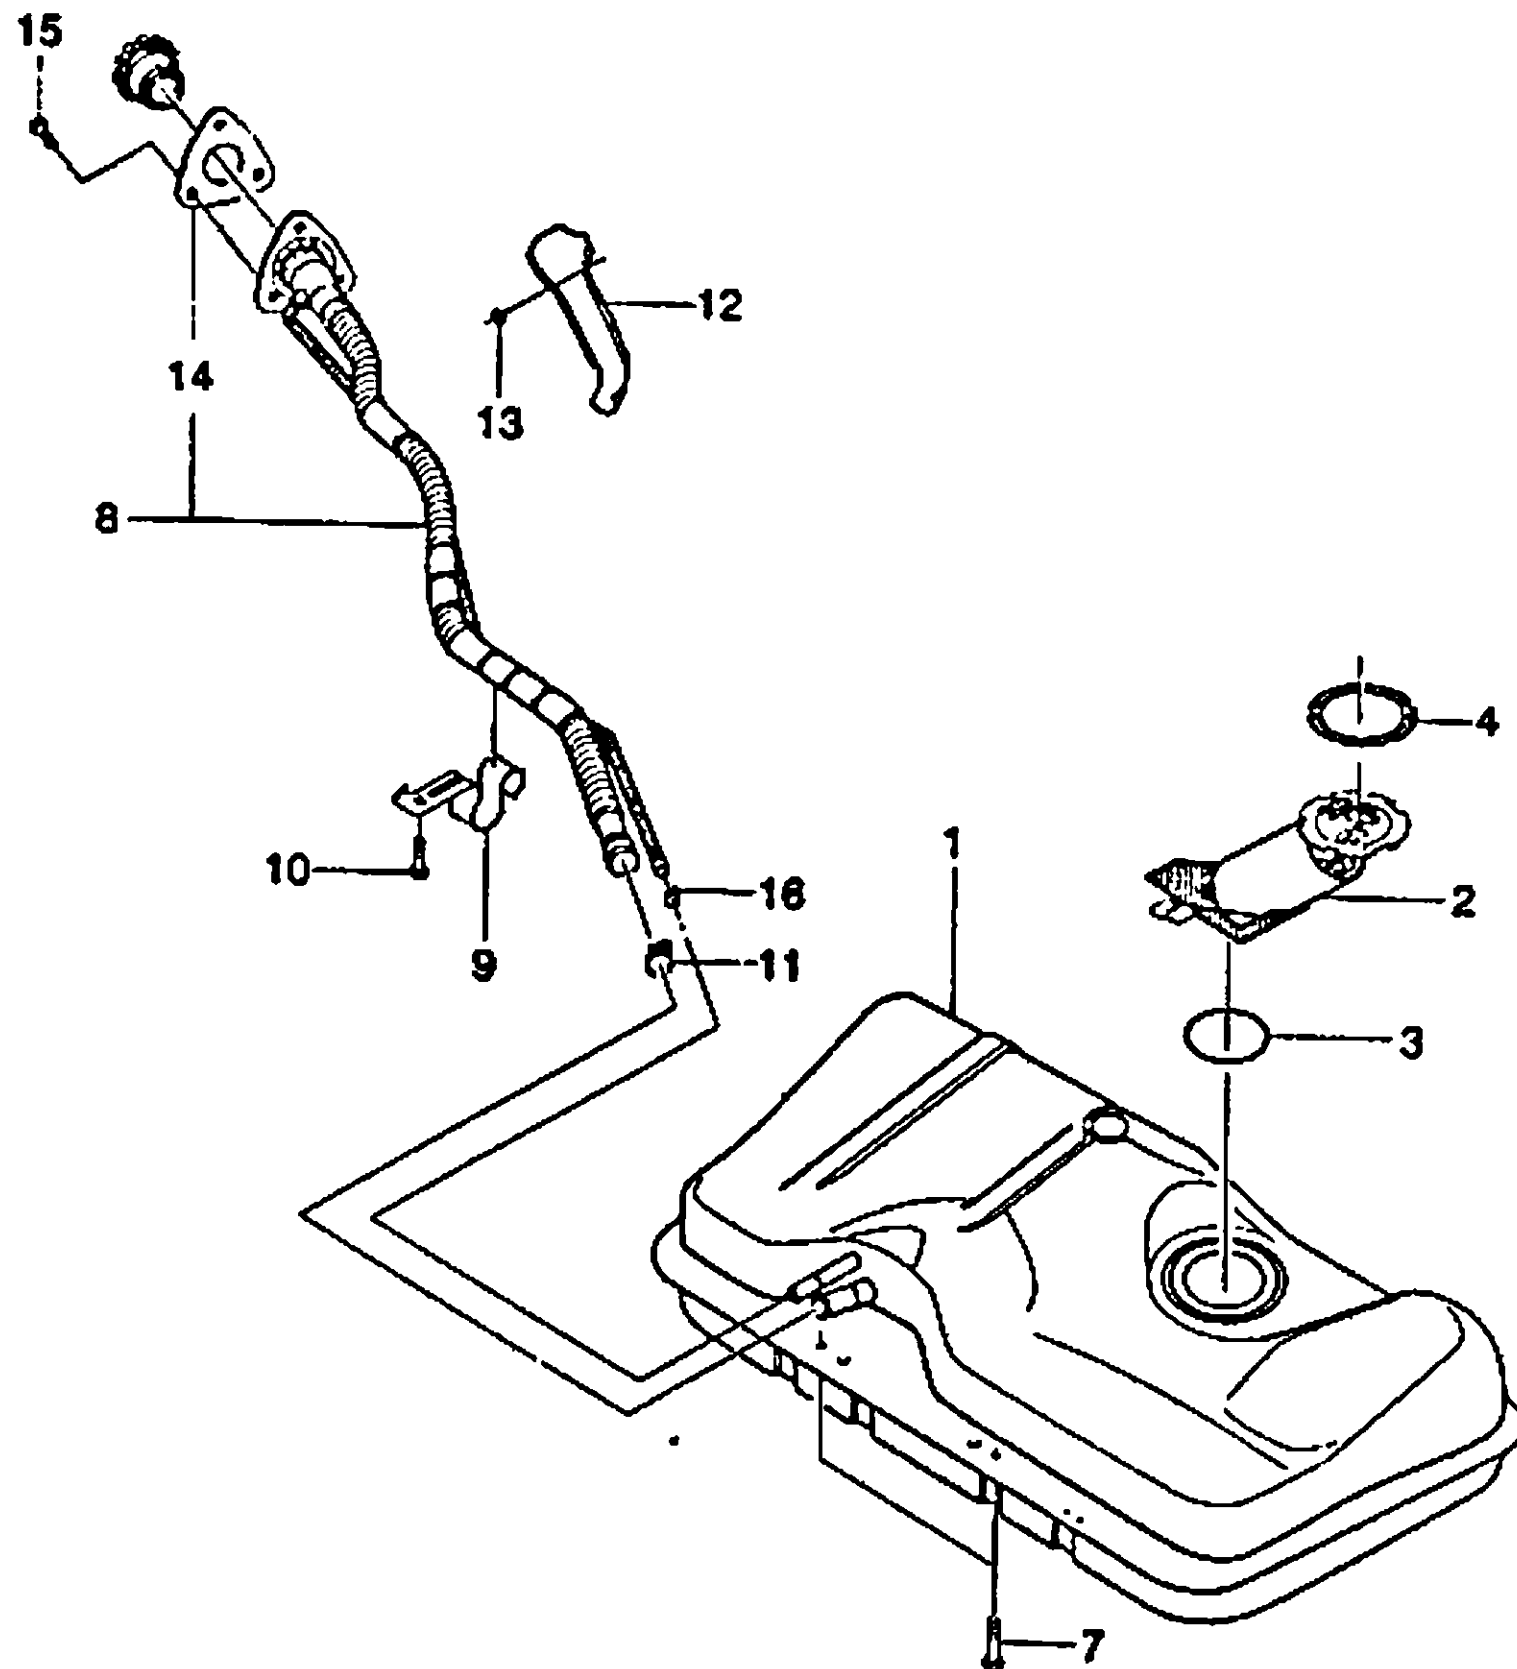


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S E
	[01]	(E)TANK A-FUEL (D)TANK,BENZIN									(F)RESERVOIR-CARBURANT (S)TANQUE-COMBUSTIBLE				
	S2110003	. . B B B S S S					-KL9			1					
	S2110006	6 . B B B . . A					&KL9			1					
	[02]	(E)MODULE A-FUEL PUMP (D)PUMPE,BENZIN									(F)POMPE-CARBURANT (S)BOMBA-COMBUSTIBLE				
	96350588	. . B B B S S S					-KL9			1			TA		
	96352018	6 . B B B . . A					&KL9			1			TC		
	[03]	(E)ORING-FUEL PUMP (D)O RING									(F)JOINT TORIQUE (S)ANILLO EN O				
	96183170	. . B B B S S S								1					
	[04]	(E)RING-FUEL PUMP LOCKING (D)RING,DICHTUNG									(F)ANNEAU-JOINT (S)ANILLO-SELLO				
	96183169	. . B B B S S S								1					
	[07]	(E)BOLT-WWASHER (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09116-08001	. . B B B S S S								4					
	[08]	(E)TUBE A-FUEL FILLER (D)ROHRLEITUNG,BENZIN TANKEN									(F)TUYAU (S)TUBO-LLENAR COMBUSTIBLE				
	96351641	. . B B B S S S					&NN4			1					
	96351342	. . B B B A A A					&NNG/NN7			1					
	[09]	(E)BRACKET-FUEL FILLER (D)TRÄGER									(F)SUPPORT (S)SOPORTE				
	96351522	. . B B B S S S								1					
	[10]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO				
	01127-08163	. . B B B S S S								1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

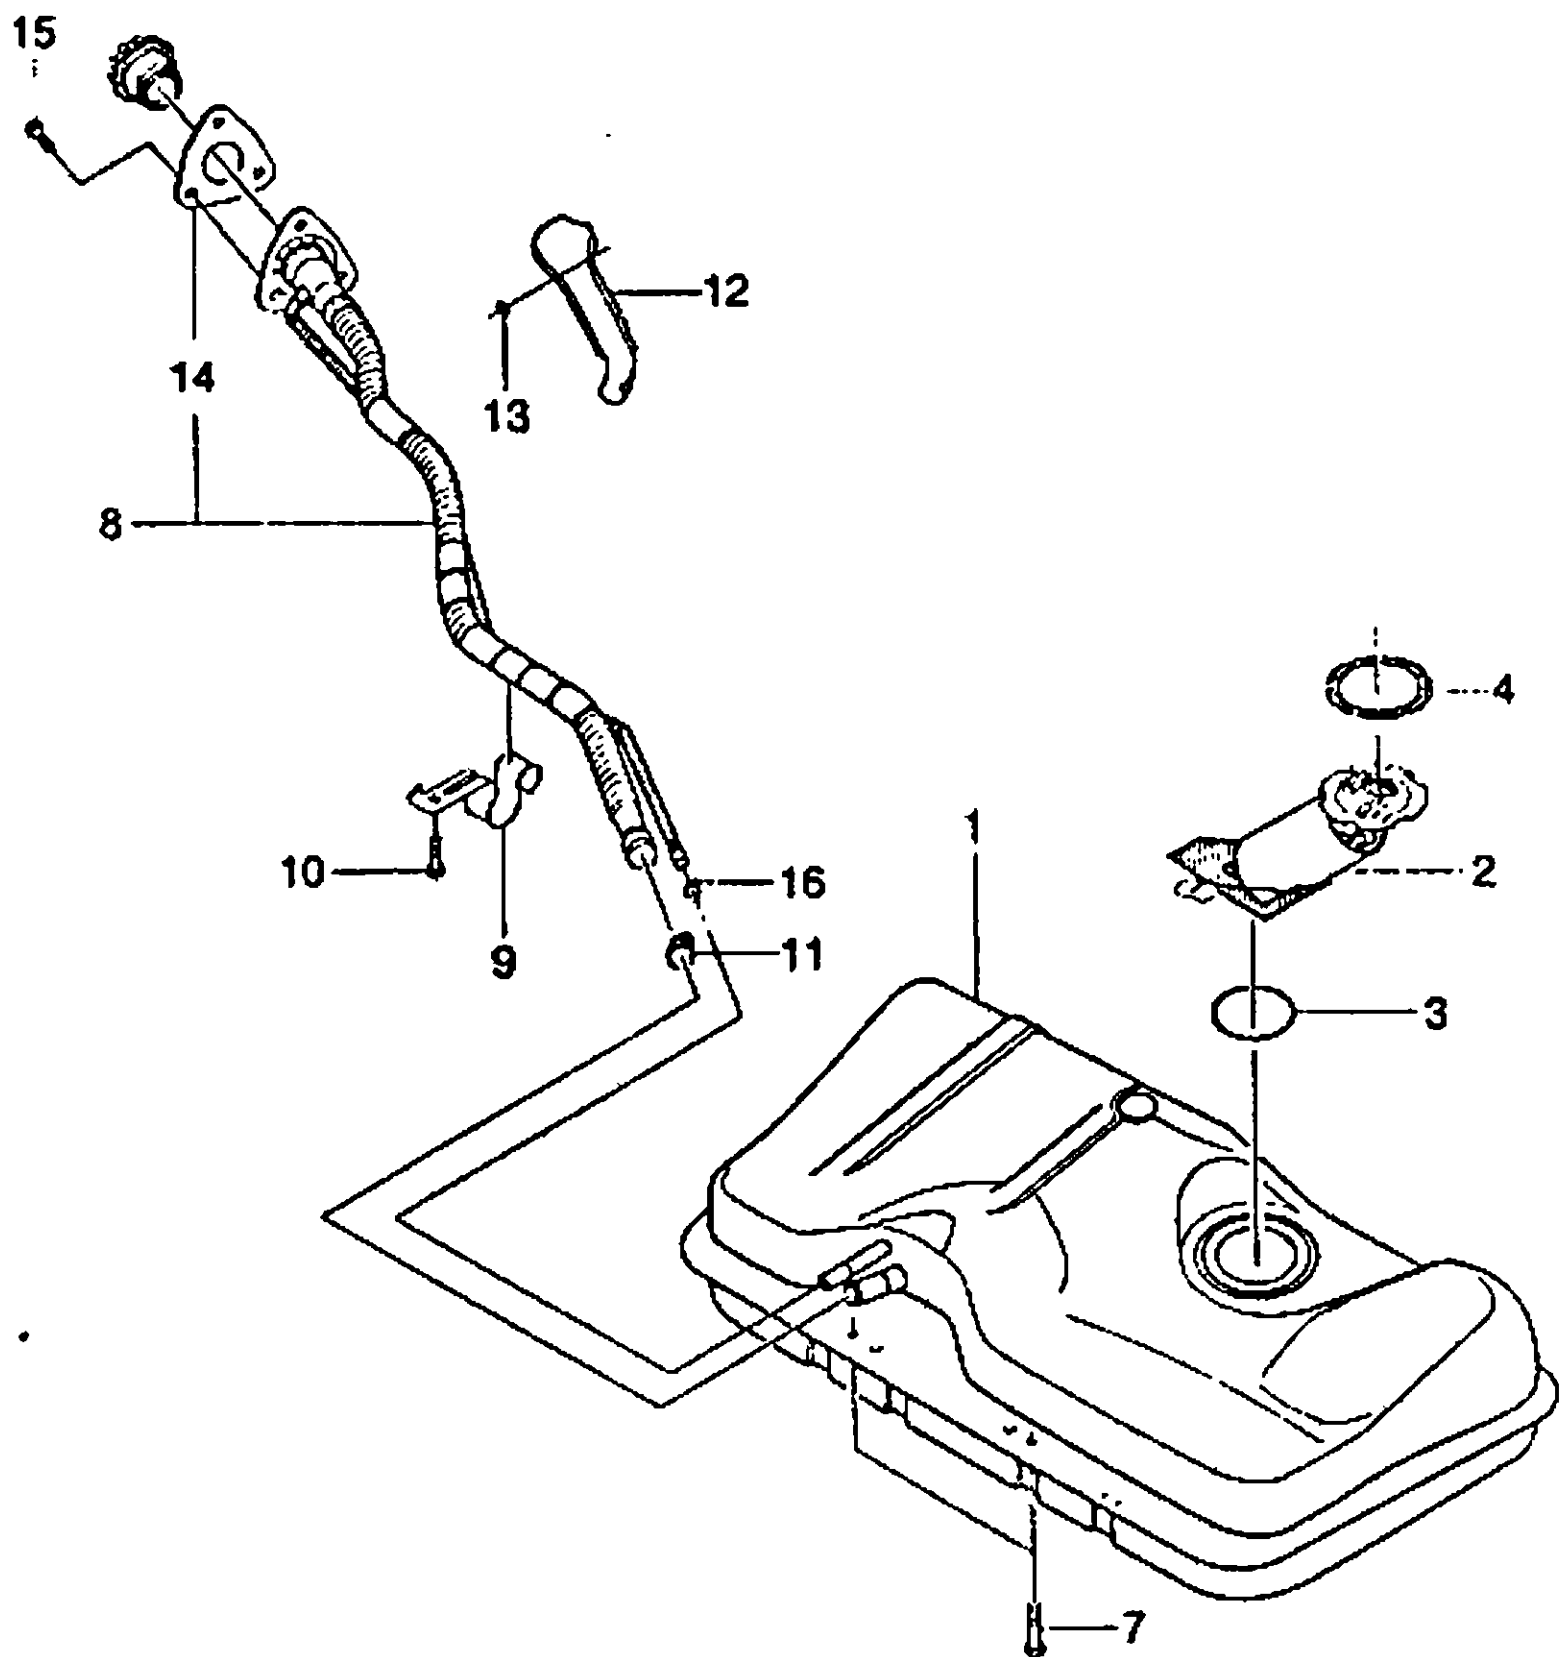


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[11] 96313240	(E)CLAMP-FUEL FILLER (D)KLAMMER	.	.	B	B	B	S	S	S		(F)PINCE (S)ABRAZADERA 1				
	[12] 96351534	(E)SHIELD-FUEL FILLER (D)SCHILD	.	.	B	B	B	S	S	S		(F)BOUCLIER (S)ESCUDO 1				
	[13] 09159-06003	(E)NUT (D)MUTTER	.	.	B	B	B	S	S	S		(F)ECROU (S)TUERCA 4				
	[14] 96184683	(E)SEAL-FUEL FILLER TUBE (D)DICHTUNG,BENZIN TANK ROHR	.	.	B	B	B	S	S	S		(F)JOINT (S)SELLO 1				
	[15] 03152-48192	(E)SCREW-TAPPING (D)SCHRAUBE	.	.	B	B	B	S	S	S		(F)VIS (S)TORNILLO 3				
	[16] 09402-25501	(E)CLAMP (D)KLAMMER	.	.	B	B	B	S	S	S		(F)PINCE (S)ABRAZADERA 1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

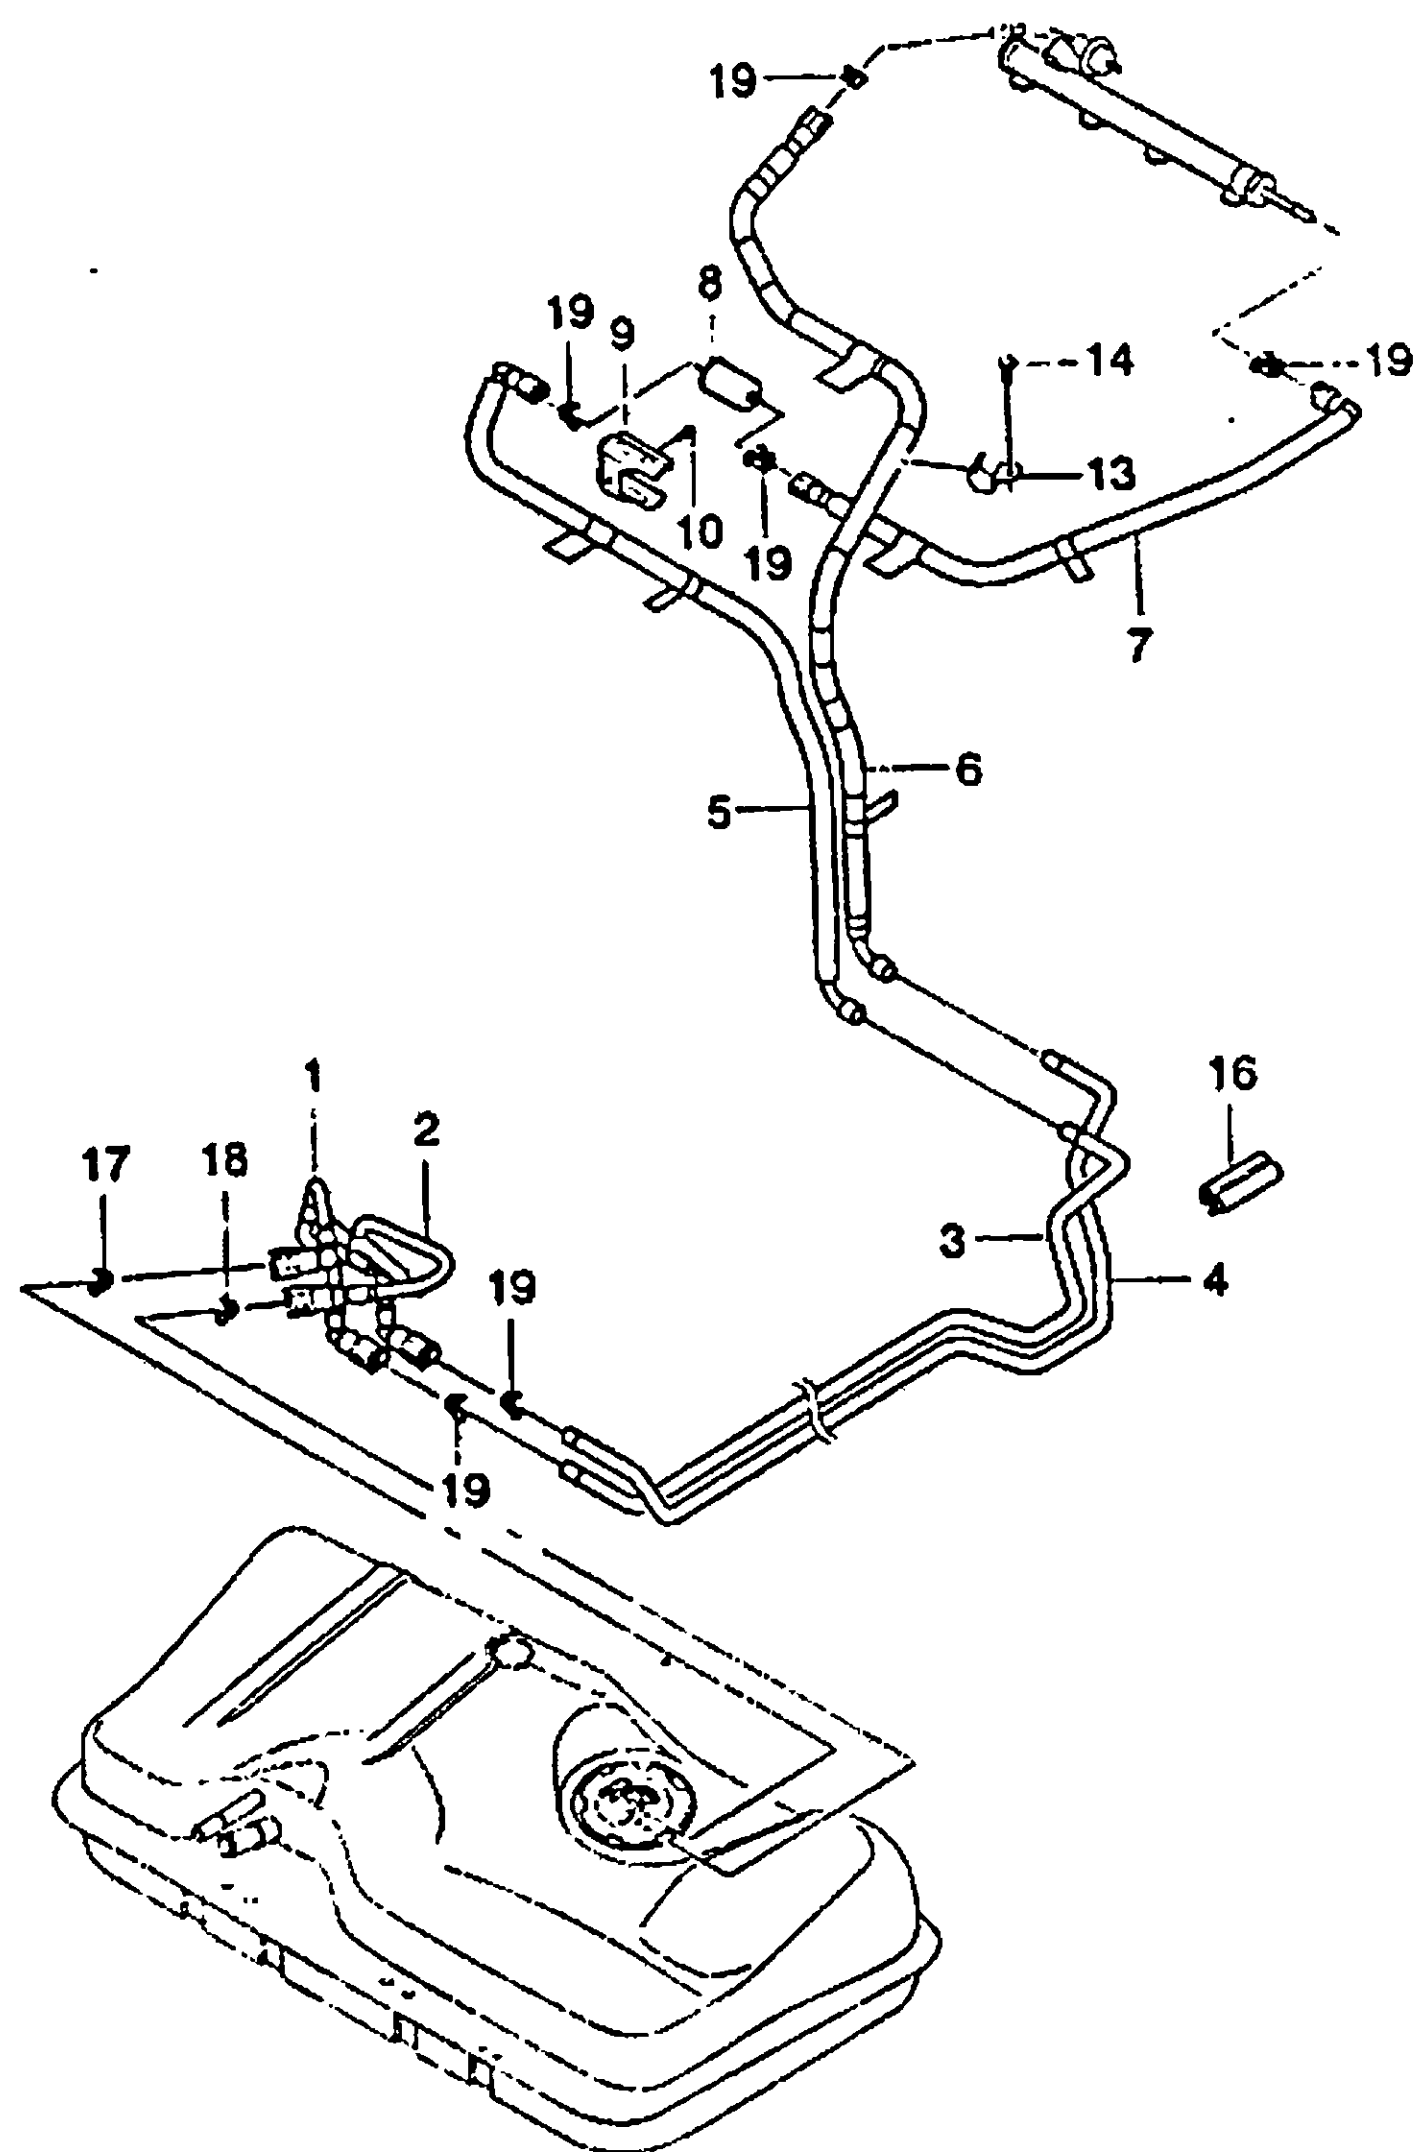


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N H	3 H	5 H	S S								S S
	[01]	(E)TUBE A-FUEL FEEDING,REAR (D)ROHRLEITUNG									(F)TUYAU OU TUBE (S)TUBO		NOT APPLIED		
	96352095										1		INCL. #17,19		
	96184396	. . B B B S S S													
	[02]	(E)TUBE A-FUEL RETURN,REAR (D)ROHRLEITUNG									(F)TUYAU OU TUBE (S)TUBO		NOT APPLIED		
	96352096										1		INCL. #18,19		
	96184397	. . B B B S S S													
	[03]	(E)PIPE-FUEL FEEDING,CENTER (D)ROHR									(F)TUYAU (S)TUBERIA				
	96250326	. . B B B S S S						-KL9			1				
	96352019	6 . B B B . . A						&KL9			1				
	[04]	(E)PIPE-FUEL RETURN,CENTER (D)ROHR									(F)TUYAU (S)TUBERIA				
	96182304	. . B B B S S S						-KL9			1				
	96352020	6 . B B B . . A						&KL9			1				
	[05]	(E)TUBE A-FUEL FILTER,REAR (D)ROHRLEITUNG									(F)TUYAU OU TUBE (S)TUBO				
	96352099	. . B B B S S S									1		INCL. #19		
	[06]	(E)TUBE A-FUEL RETURN,FRONT (D)ROHRLEITUNG									(F)TUYAU OU TUBE (S)TUBO				
	96352100	Y . B B B S S S									1		INCL. #19		
	96352101	6 . B B B . . O						-KL9			1		INCL. #19		
	96352022	6 . B B B . . A						&KL9			1		HOSE TYPE		
	[07]	(E)TUBE A-FUEL FILTER,FRT (D)ROHRLEITUNG									(F)TUYAU OU TUBE (S)TUBO				
	96352102	Y . B B B S S S									1		INCL. #19		
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

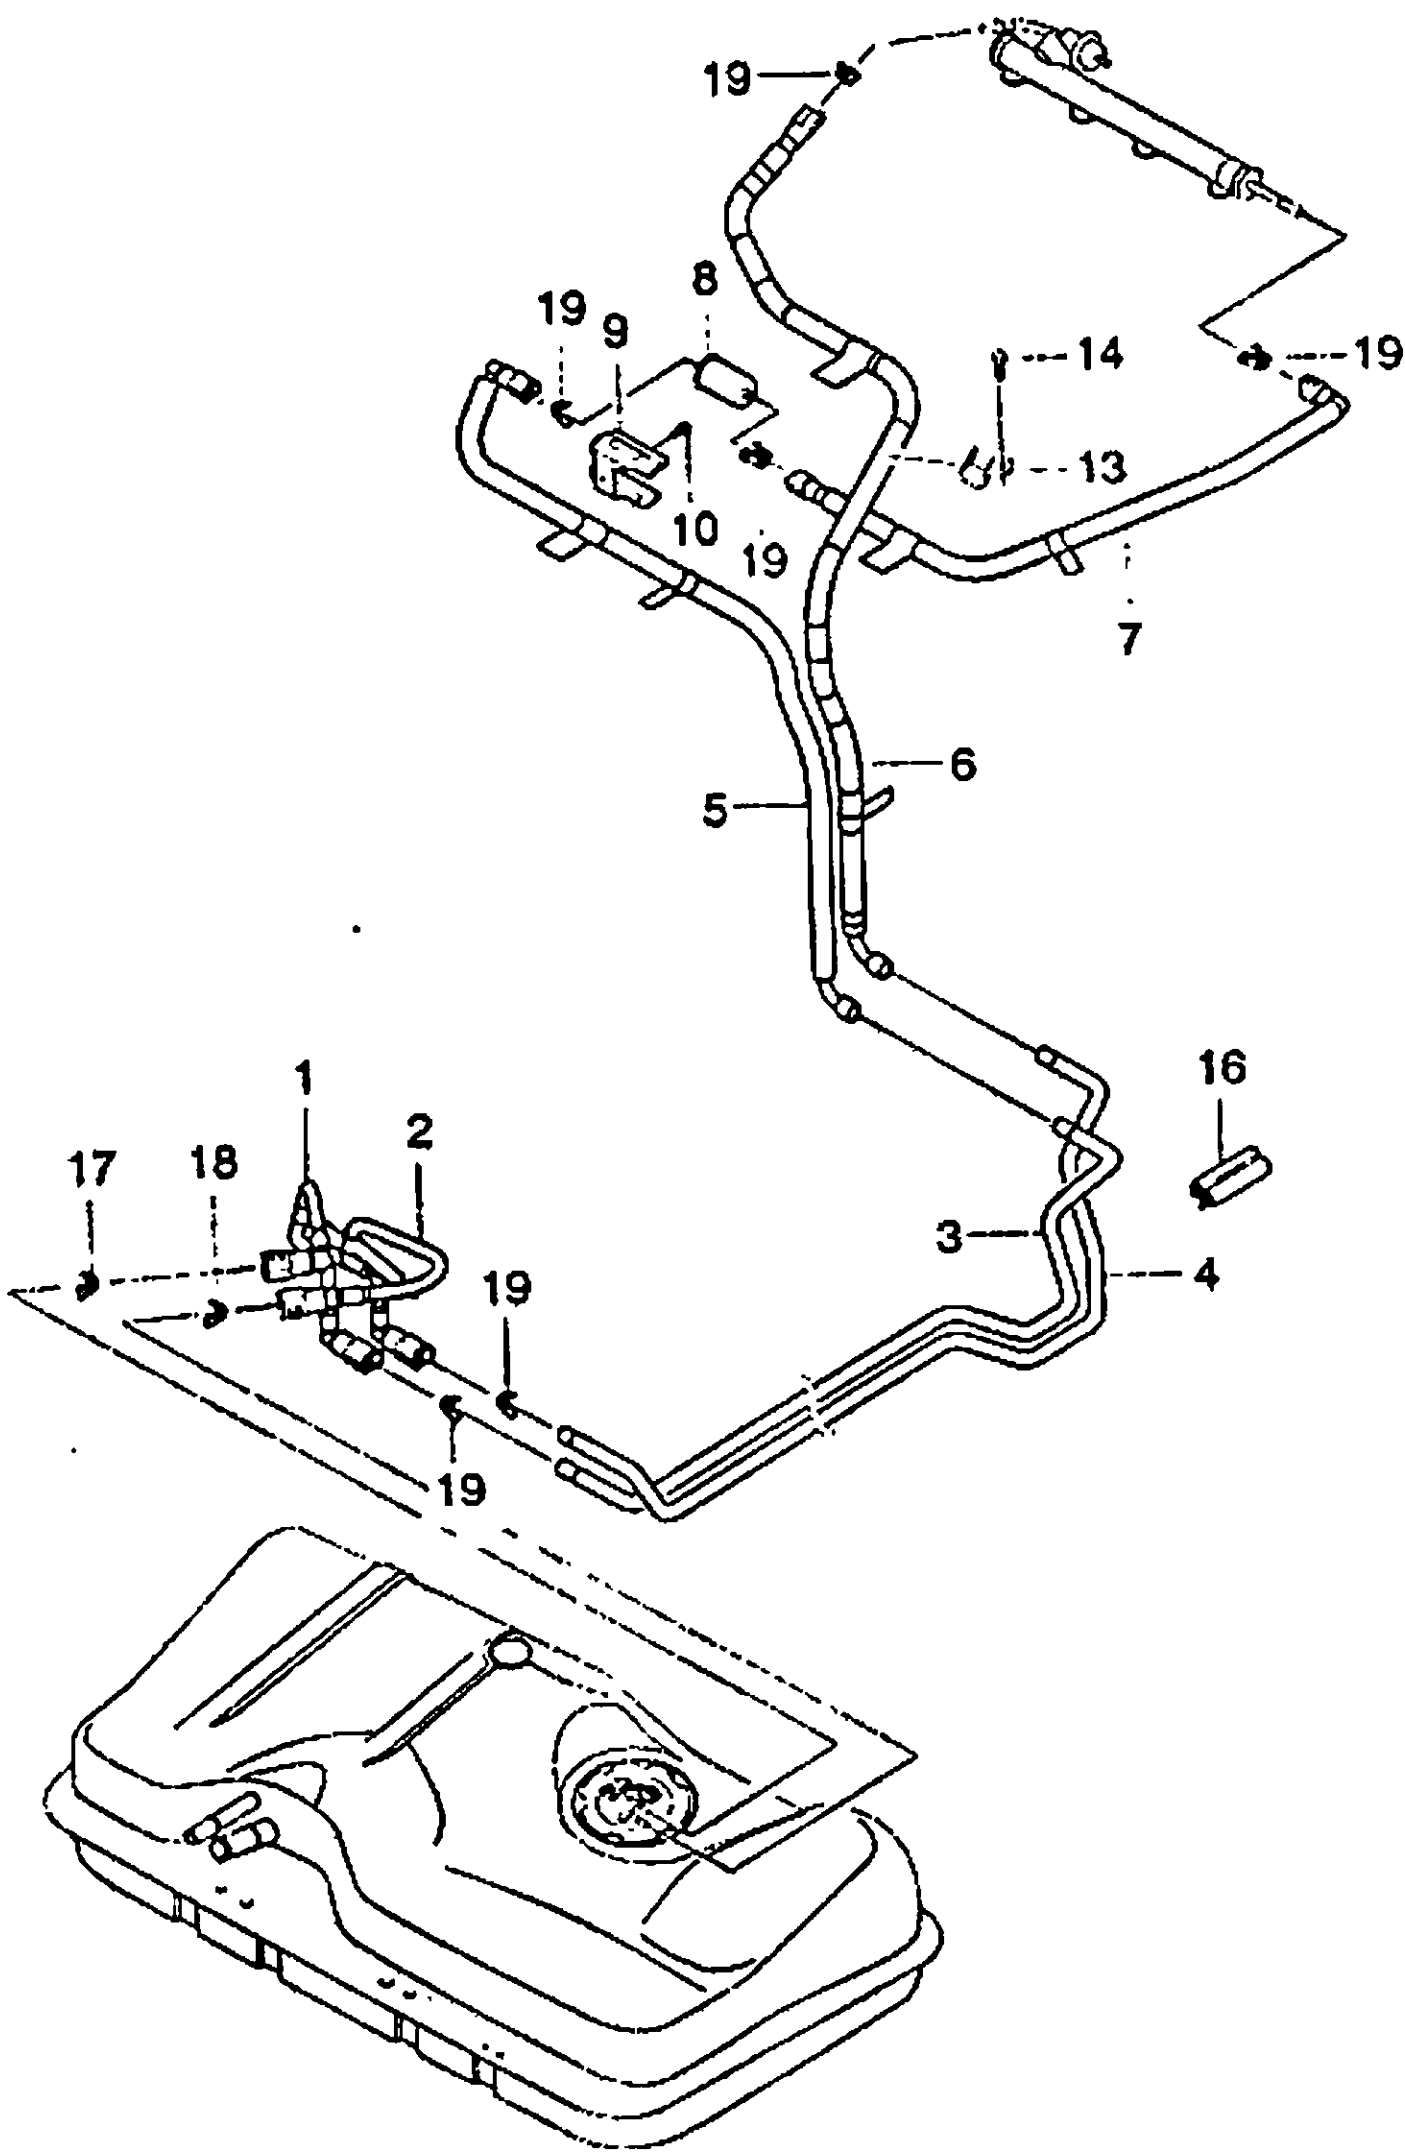


KEY NO.		PART NAME													
PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
	E N G	T / A	BODY			LEVEL					FROM	TO			
			4 N	3 H	5 H	S S	S S								S X
96350574	6 . B B B . . O									1			INCL. #19		
[08]	(E)FILTER-FUEL									(F)FILTRE-CARBURANT					
	(D)FILTER,BENZIN									(S)FILTRO-COMBUSTIBLE					
25121074	. . B B B S S S									1					
[09]	(E)BRACKET-FUEL FILTER									(F)SUPPORT					
	(D)TRÄGER,BENZINFILTER									(S)SOPORTE					
96351817	. . B B B S S S									1					
[10]	(E)BOLT-HEXAGON									(F)BOULON					
	(D)SCHRAUBE									(S)PERNO					
01114-06125	. . B B B S S S									1					
[13]	(E)CLIP-FUEL RETURN TUBE									(F)ATTACHE					
	(D)KLEMME									(S)GRAPA					
96352125	Y . B B B S S S									1					
[14]	(E)BOLT-HEXAGON									(F)BOULON					
	(D)SCHRAUBE									(S)PERNO					
03151-63163	Y . B B B S S S									1					
[16]	(E)COVER A-FLANGE									(F)COUVERTURE					
	(D)DECKEL									(S)CUBIERTA					
96352078	. . B B B S S S									1					
[17]	(E)RETAINER									(F)ARRETOIR					
	(D)HALTER									(S)RETENEDOR					
HP-9P-86019	. . B B B S S S									1			Ø 9.5mm		
[18]	(E)RETAINER									(F)ARRETOIR					
	(D)HALTER									(S)RETENEDOR					
HP-9P-87012	. . B B B S S S									1			Ø 6.5mm		
[19]	(E)RETAINER									(F)ARRETOIR					
	(D)HALTER									(S)RETENEDOR					
HP-9P-86020	Y . B B B S S S									6			Ø 8mm		
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

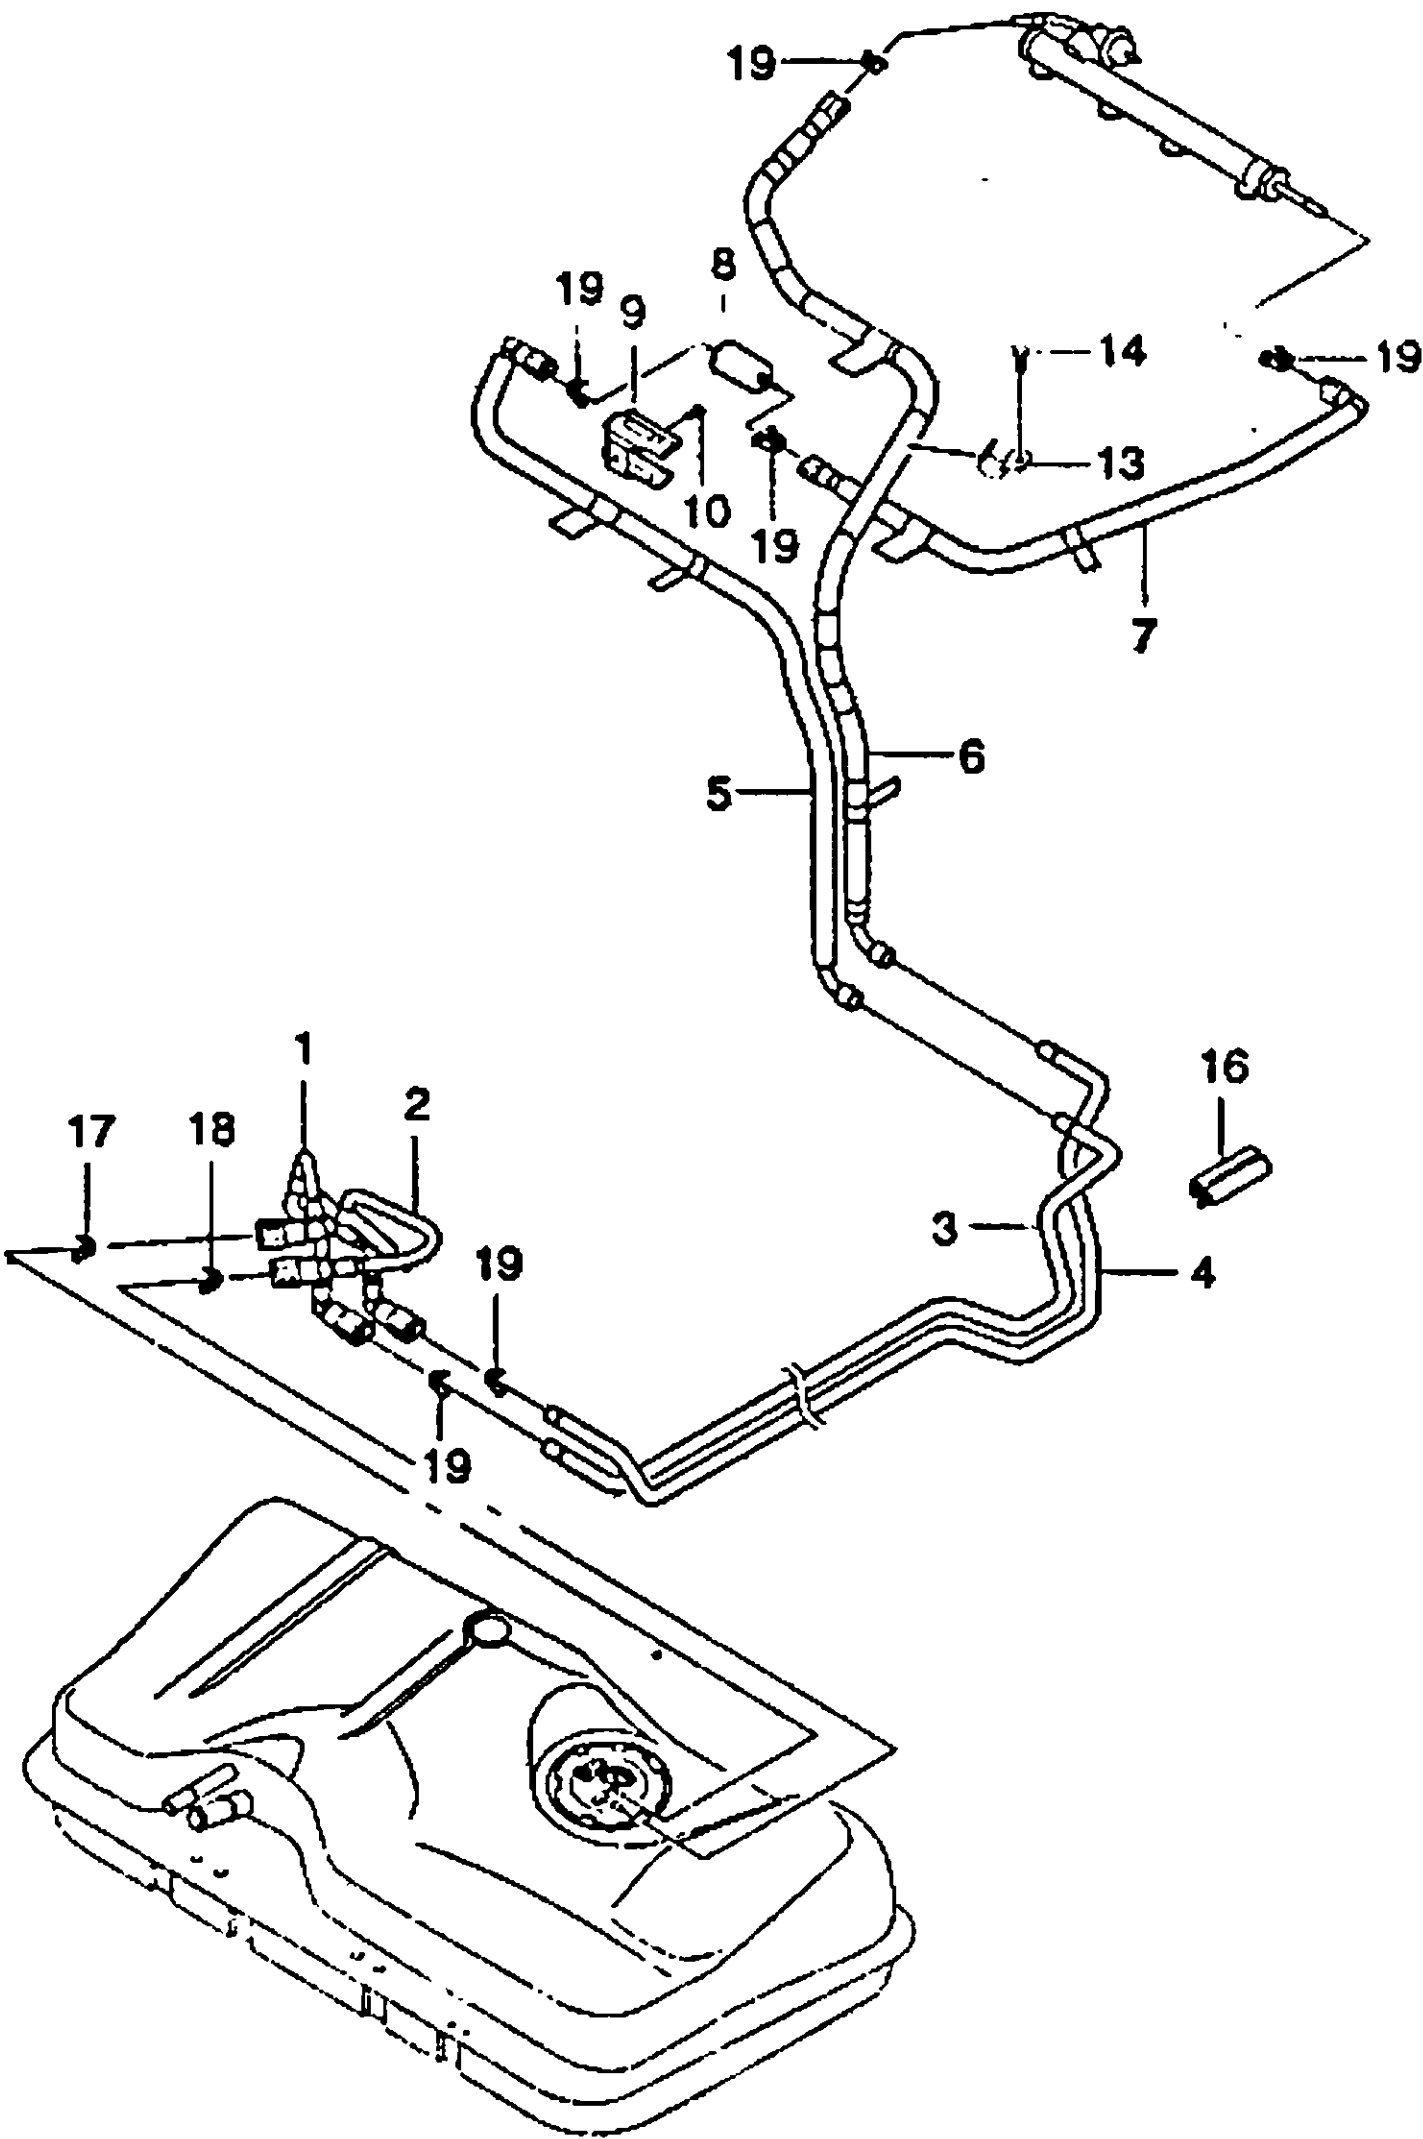


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	HP-9P-86020	6	.	B	B	B	.	.	O		5			φ 8mm		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

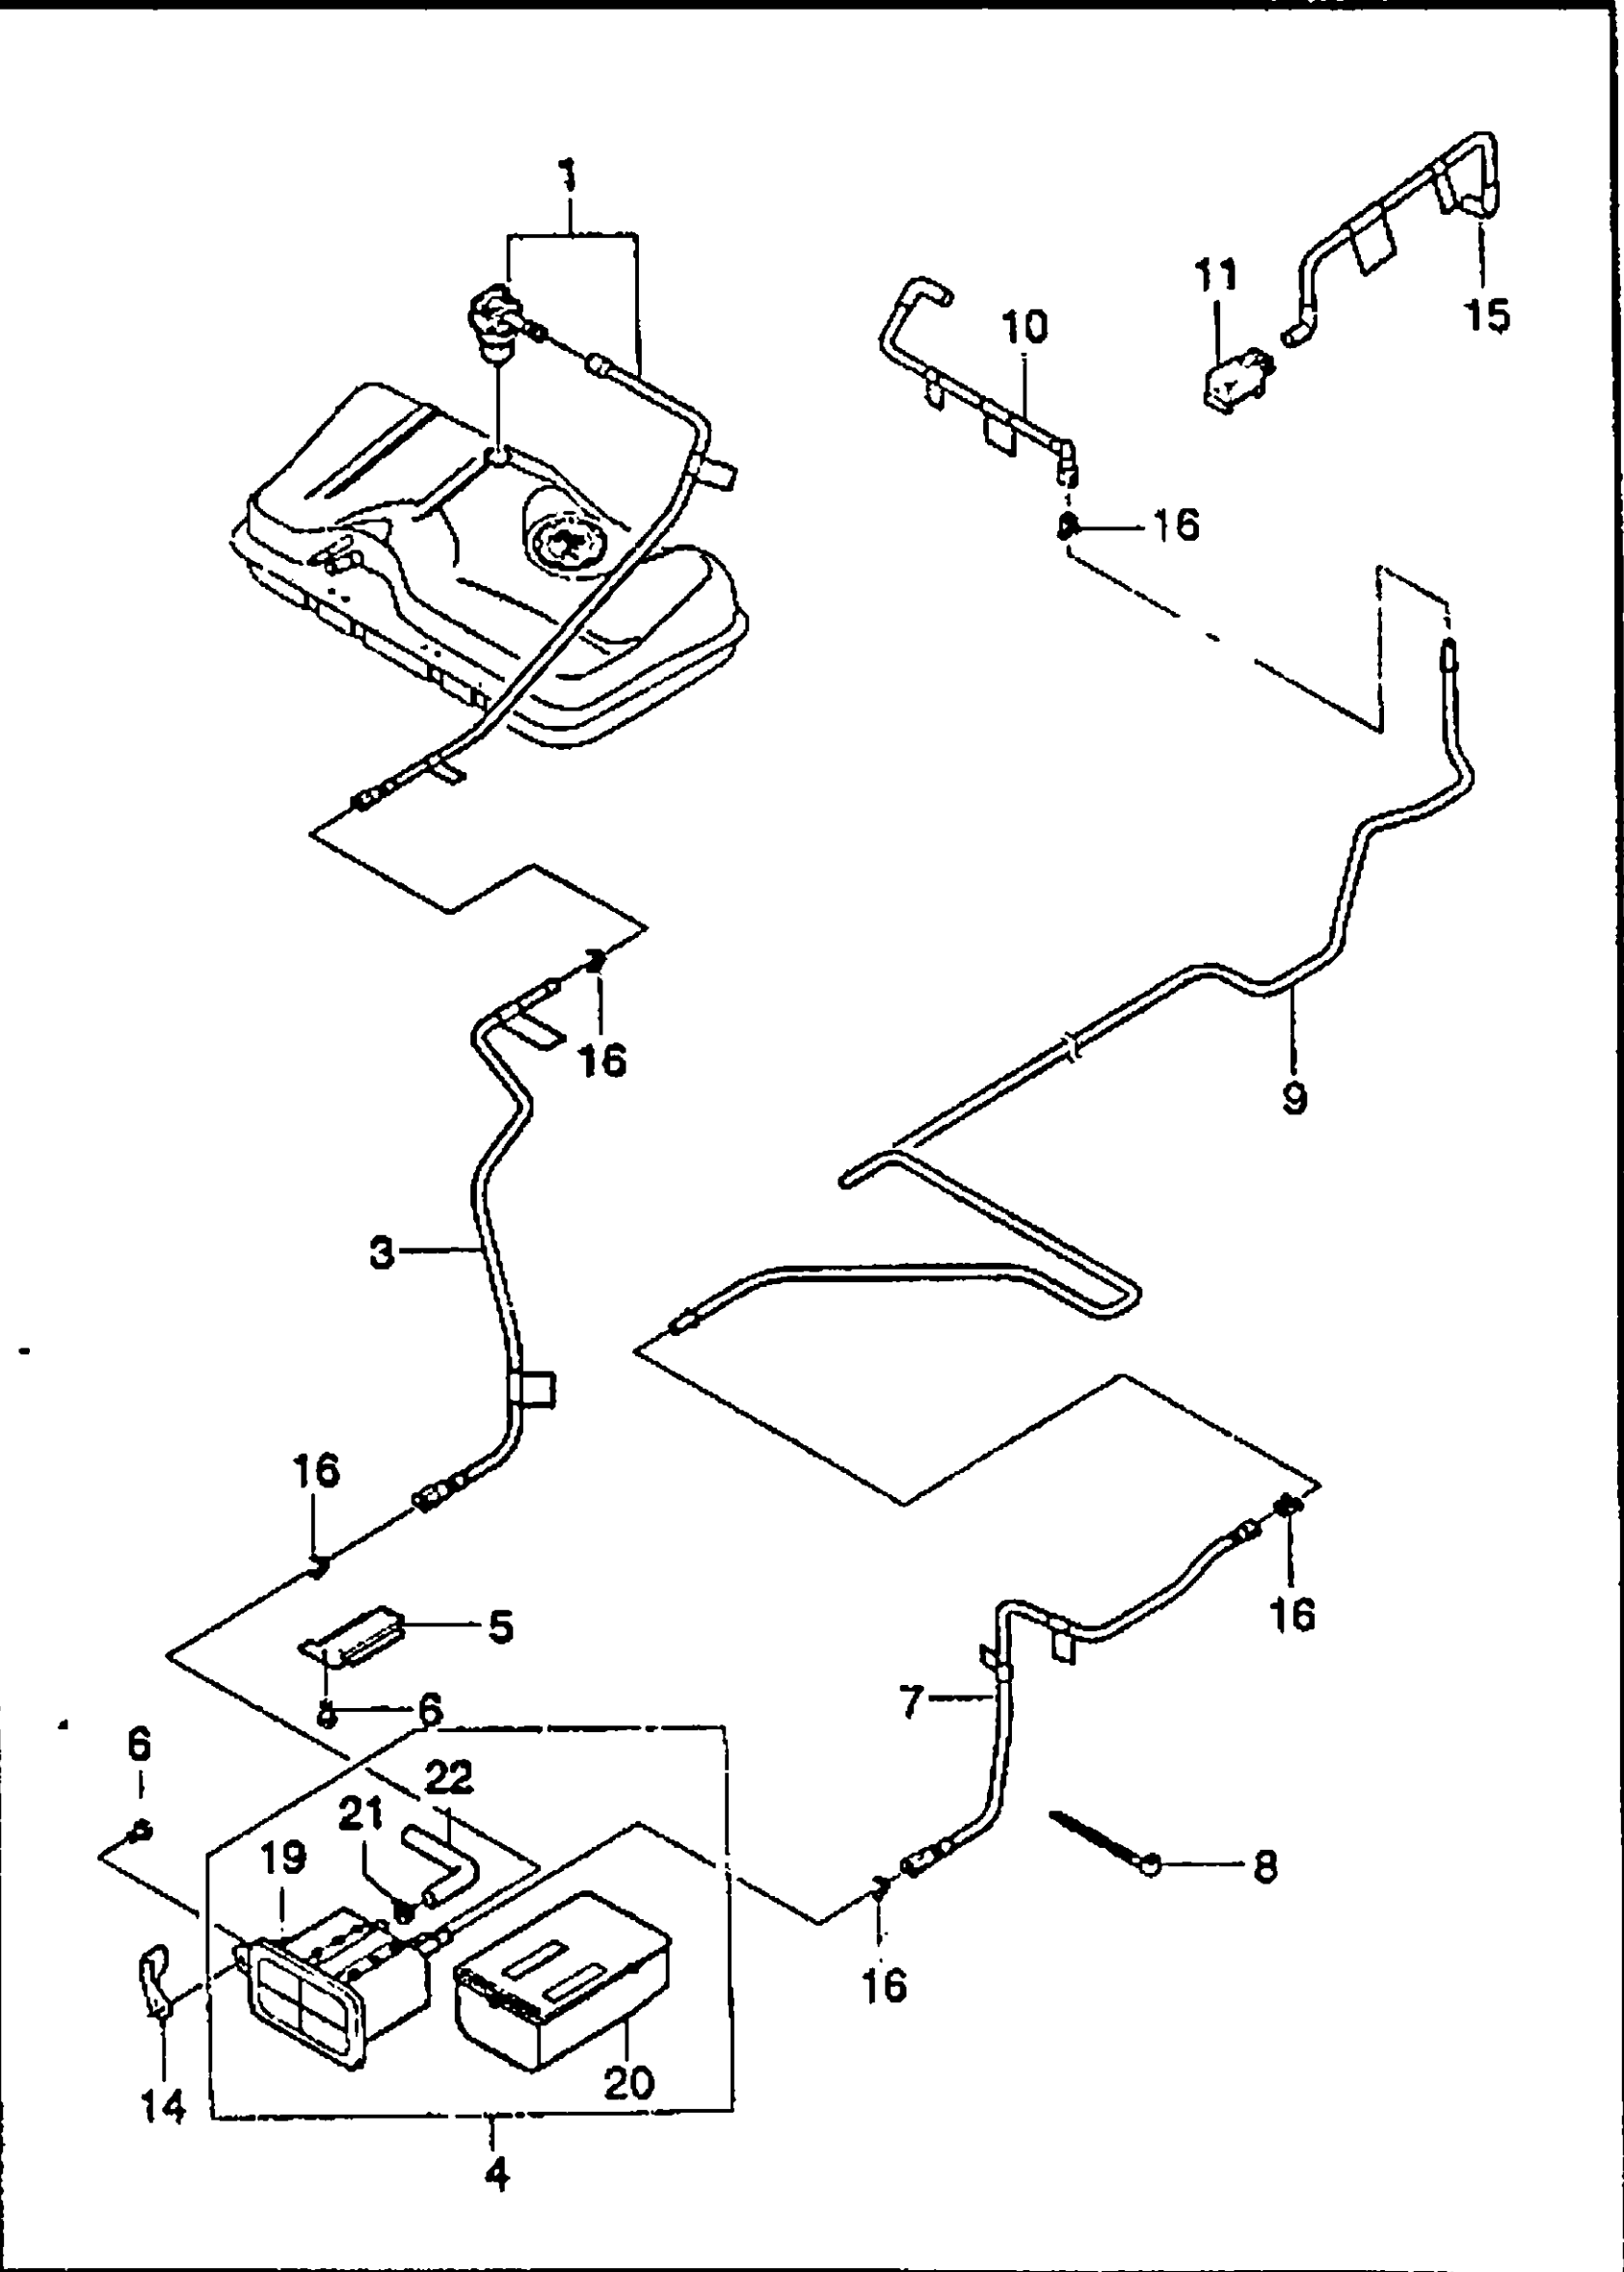

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S								S S	S X
	[01]	(E)TUBE A-FUEL VAPOR ROLLOVER (D)ROHRLEITUNG									(F)TUYAU OU TUBE (S)TUBO					
	96182328	.	.	B	B	B	S	S	S			1				
	96352264	6	.	B	B	B	.	.	A	&KL9		1				
	[03]	(E)TUBE A-CANISTER VAPOR (D)ROHRLEITUNG									(F)TUYAU OU TUBE (S)TUBO					
	96184843	.	.	B	B	B	A	A	A	&NN4&VB4		1		INCL. #16		
	96184843	.	.	B	B	B	A	A	A	&NN6/NN7		1		INCL. #16		
	96352265	6	.	B	B	B	.	.	A	&KL9		1		INCL. #16		
	[04]	(E)CANISTER A (D)KANISTER BENZIN-DAMPF									(F)BOITE-VAPEURS CARBURANT (S)BOTE-COMBUSTIBLE Y VAPOR					
	96351827	.	.	B	B	B	A	A	A	&NN4&VB4		1		0.85L		
	96351827	.	.	B	B	B	A	A	A	&NN6/NN7		1		0.85L		
	96351827	6	.	B	B	B	.	.	A	&KL9		1		0.85L		
	[05]	(E)BRACKET-CANISTER GUIDE (D)TRÄGER,KANISTER									(F)SUPPORT-BOITE METALLIQUE (S)SOPORTE-BOTE					
	96184721	.	.	B	B	B	A	A	A	&NN4&VB4		1				
	96184721	.	.	B	B	B	A	A	A	&NN6/NN7		1				
	96184721	6	.	B	B	B	.	.	A	&KL9		1				
	[06]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO					
	09116-06024	.	.	B	B	B	A	A	A	&NN4&VB4		3				
	09116-06024	.	.	B	B	B	A	A	A	&NN6/NN7		3				
	09116-06024	6	.	B	B	B	.	.	A	&KL9		3				
	[07]	(E)TUBE A-PURGE,REAR (D)ROHRLEITUNG									(F)TUYAU OU TUBE (S)TUBO					
	96184842	.	.	B	B	B	A	A	A	&NN4&VB4		1		INCL. #16		
ENG(ENGINE)		T/A(TRANSAXLE)					BODY TYPE									
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK									

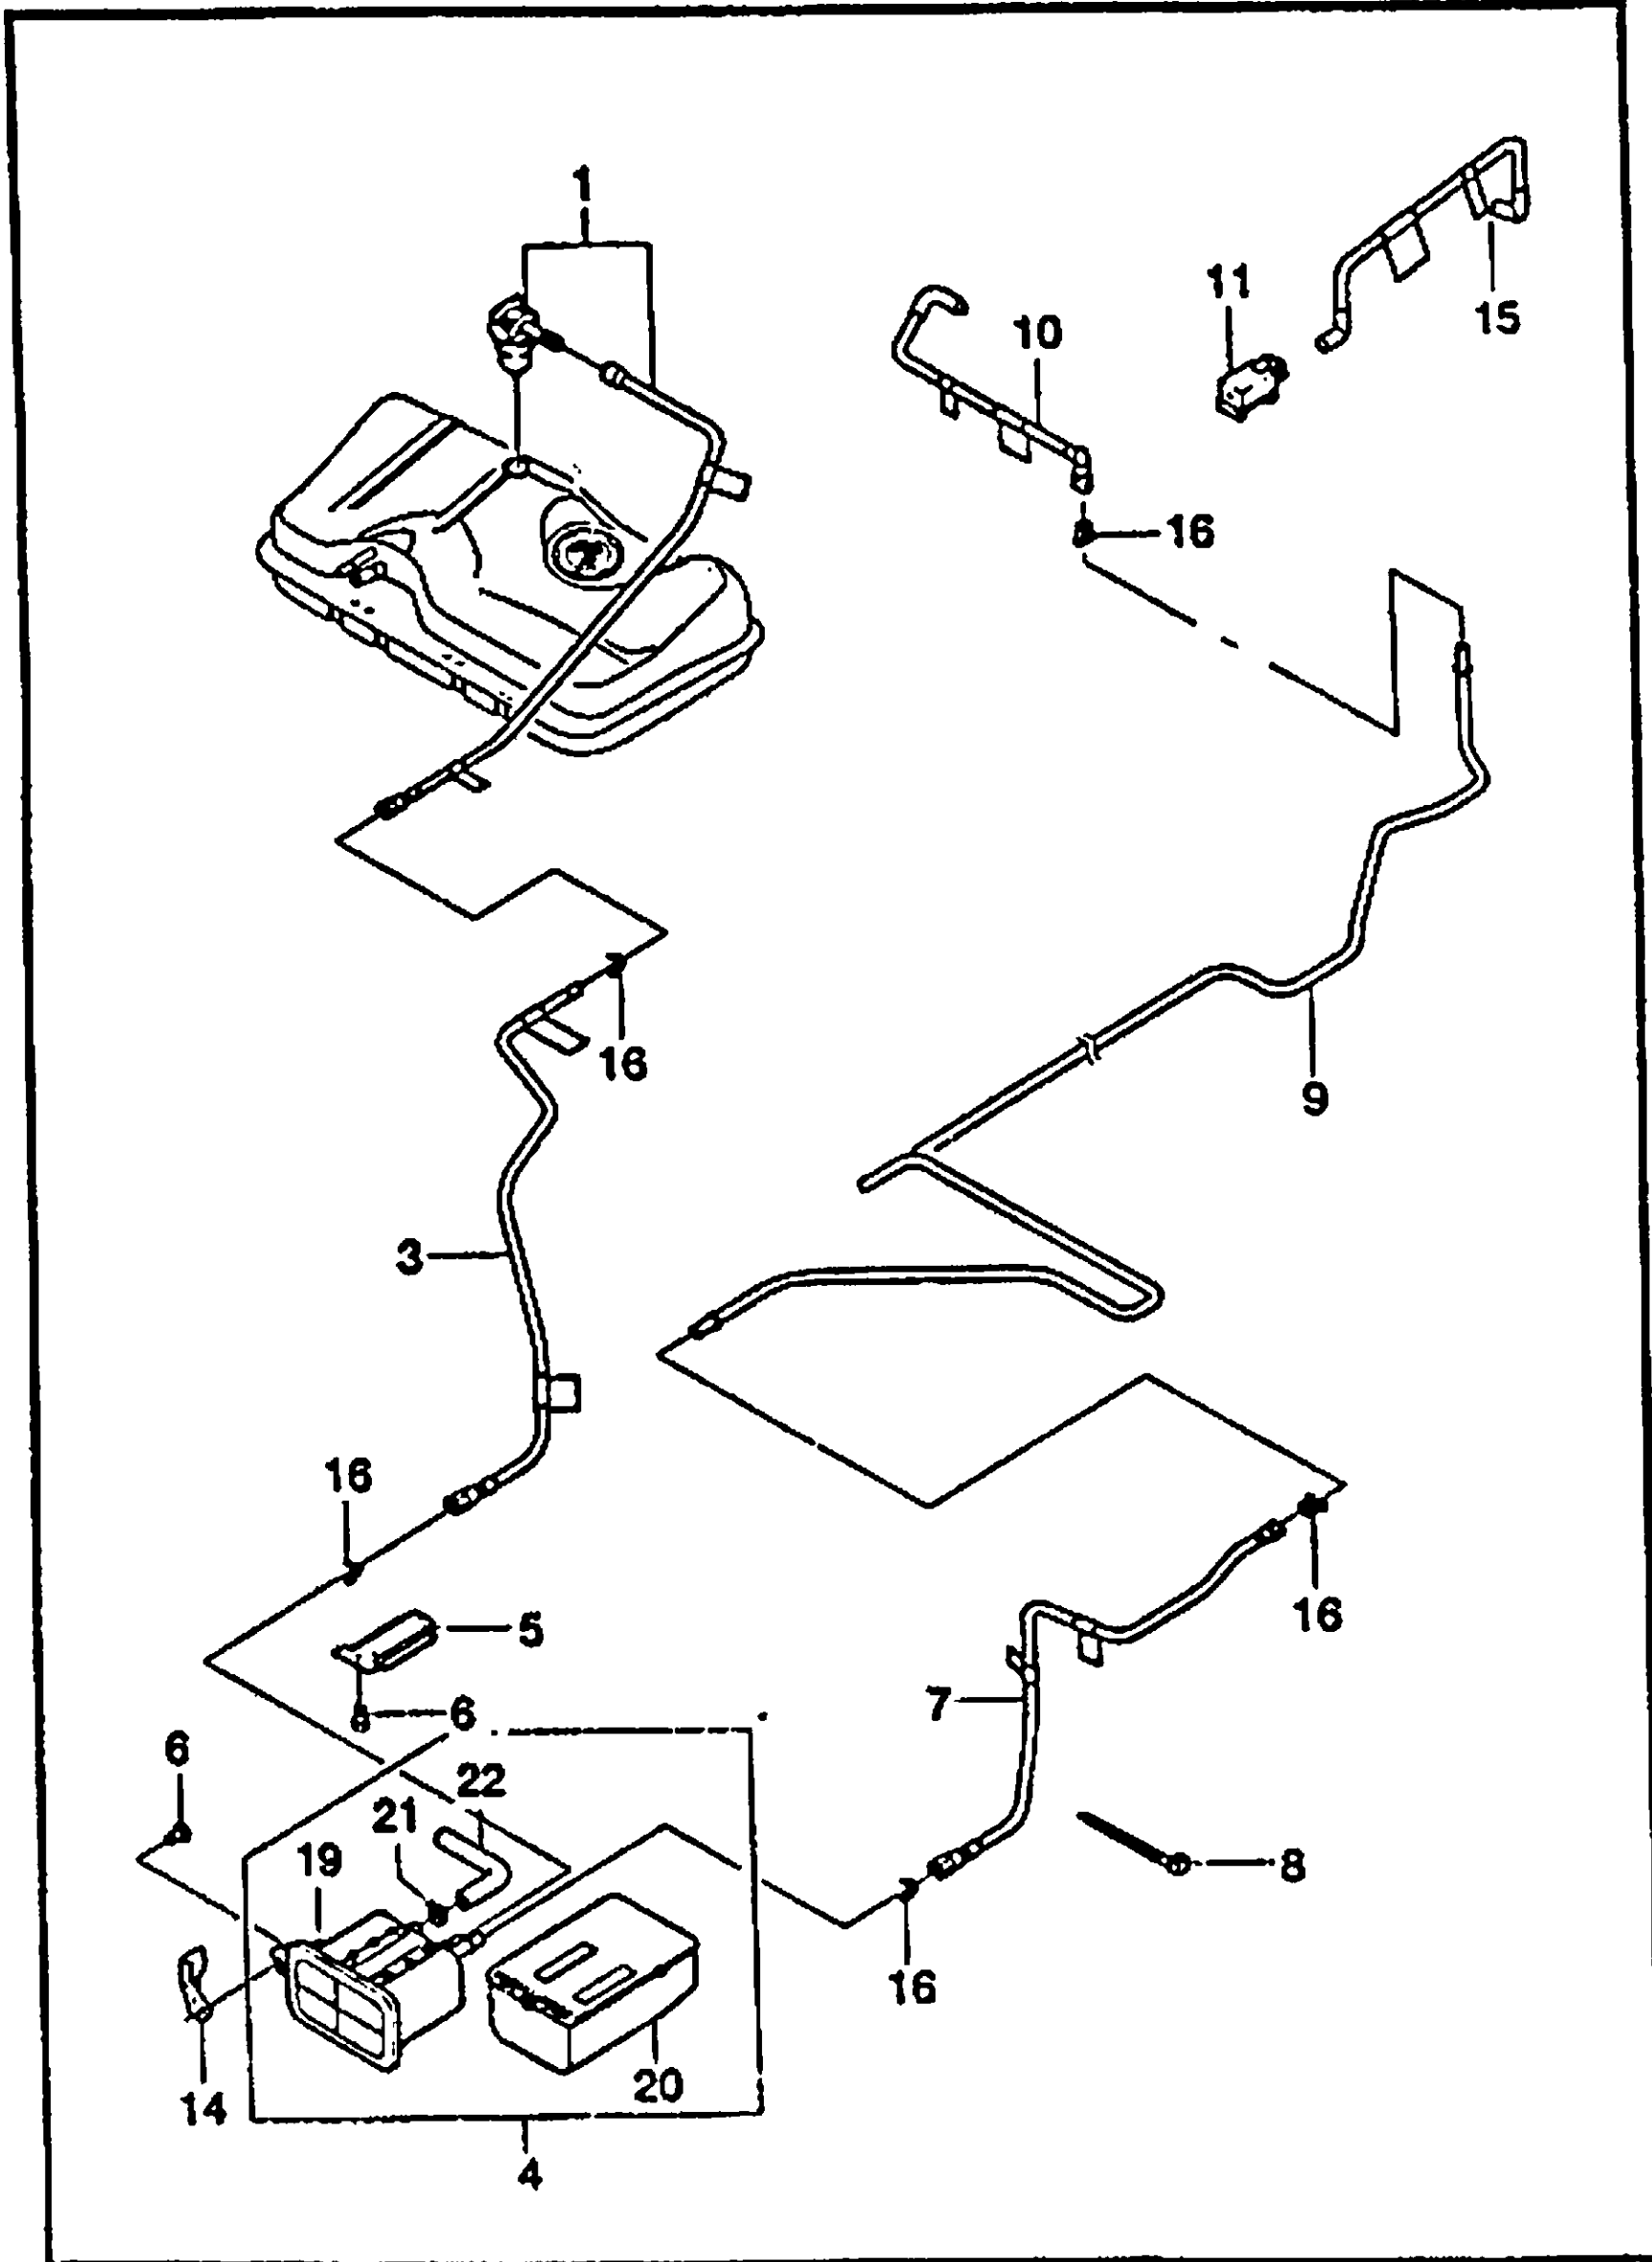


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S								S S	S X
	96184842	.	.	B	B	B	A	A	A	&NN6/NN7	1			INCL #16		
	96184842	6	.	B	B	B	.	.	A	&KL9	1			INCL #16		
	[08]			(E)CLAMP (D)KLAMMER								(F)PINCE (S)ABRAZADERA				
	09407-25401	.	.	B	B	B	A	A	A	&NN4&VB4	1					
	09407-25401	.	.	B	B	B	A	A	A	&NN6/NN7	1					
	09407-25401	6	.	B	B	B	.	.	A	&KL9	1					
	[09]			(E)PIPE-PURGE,CENTER (D)ROHR								(F)TUYAU (S)TUBERIA				
	96182327	.	.	B	B	B	A	A	A	&NN4&VB4	1					
	96182327	.	.	B	B	B	A	A	A	&NN6/NN7	1					
	96182327	6	.	B	B	B	.	.	A	&KL9	1					
	[10]			(E)TUBE A-PURGE,FRONT (D)ROHRLEITUNG								(F)TUYAU OU TUBE (S)TUBO				
	96351536	Y	.	B	B	B	A	A	A	&NN4&VB4	1			INCL #16		
	96351536	Y	.	B	B	B	A	A	A	&NN6/NN7	1			INCL #16		
	96351537	6	.	B	B	B	.	.	A	&NN4&VB4	1			INCL #16		
	96351537	6	.	B	B	B	.	.	A	&NN6/NN7	1			INCL #16		
	96351537	6	.	B	B	B	.	.	A	&KL9	1			INCL #16		
	[11]			(E)VALVE-PCV (D)VENTIL								(F)SOUPAPE (S)VALVULA				
	96311368	Y	.	B	B	B	A	A	A	&NN4&VB4	1					
	96311368	Y	.	B	B	B	A	A	A	&NN6/NN7	1					
	1997210	6	.	B	B	B	.	.	A	&NN4&VB4	1					
	1997210	6	.	B	B	B	.	.	A	&NN6/NN7	1					
	96311368	6	.	B	B	B	.	.	A	&KL9	1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

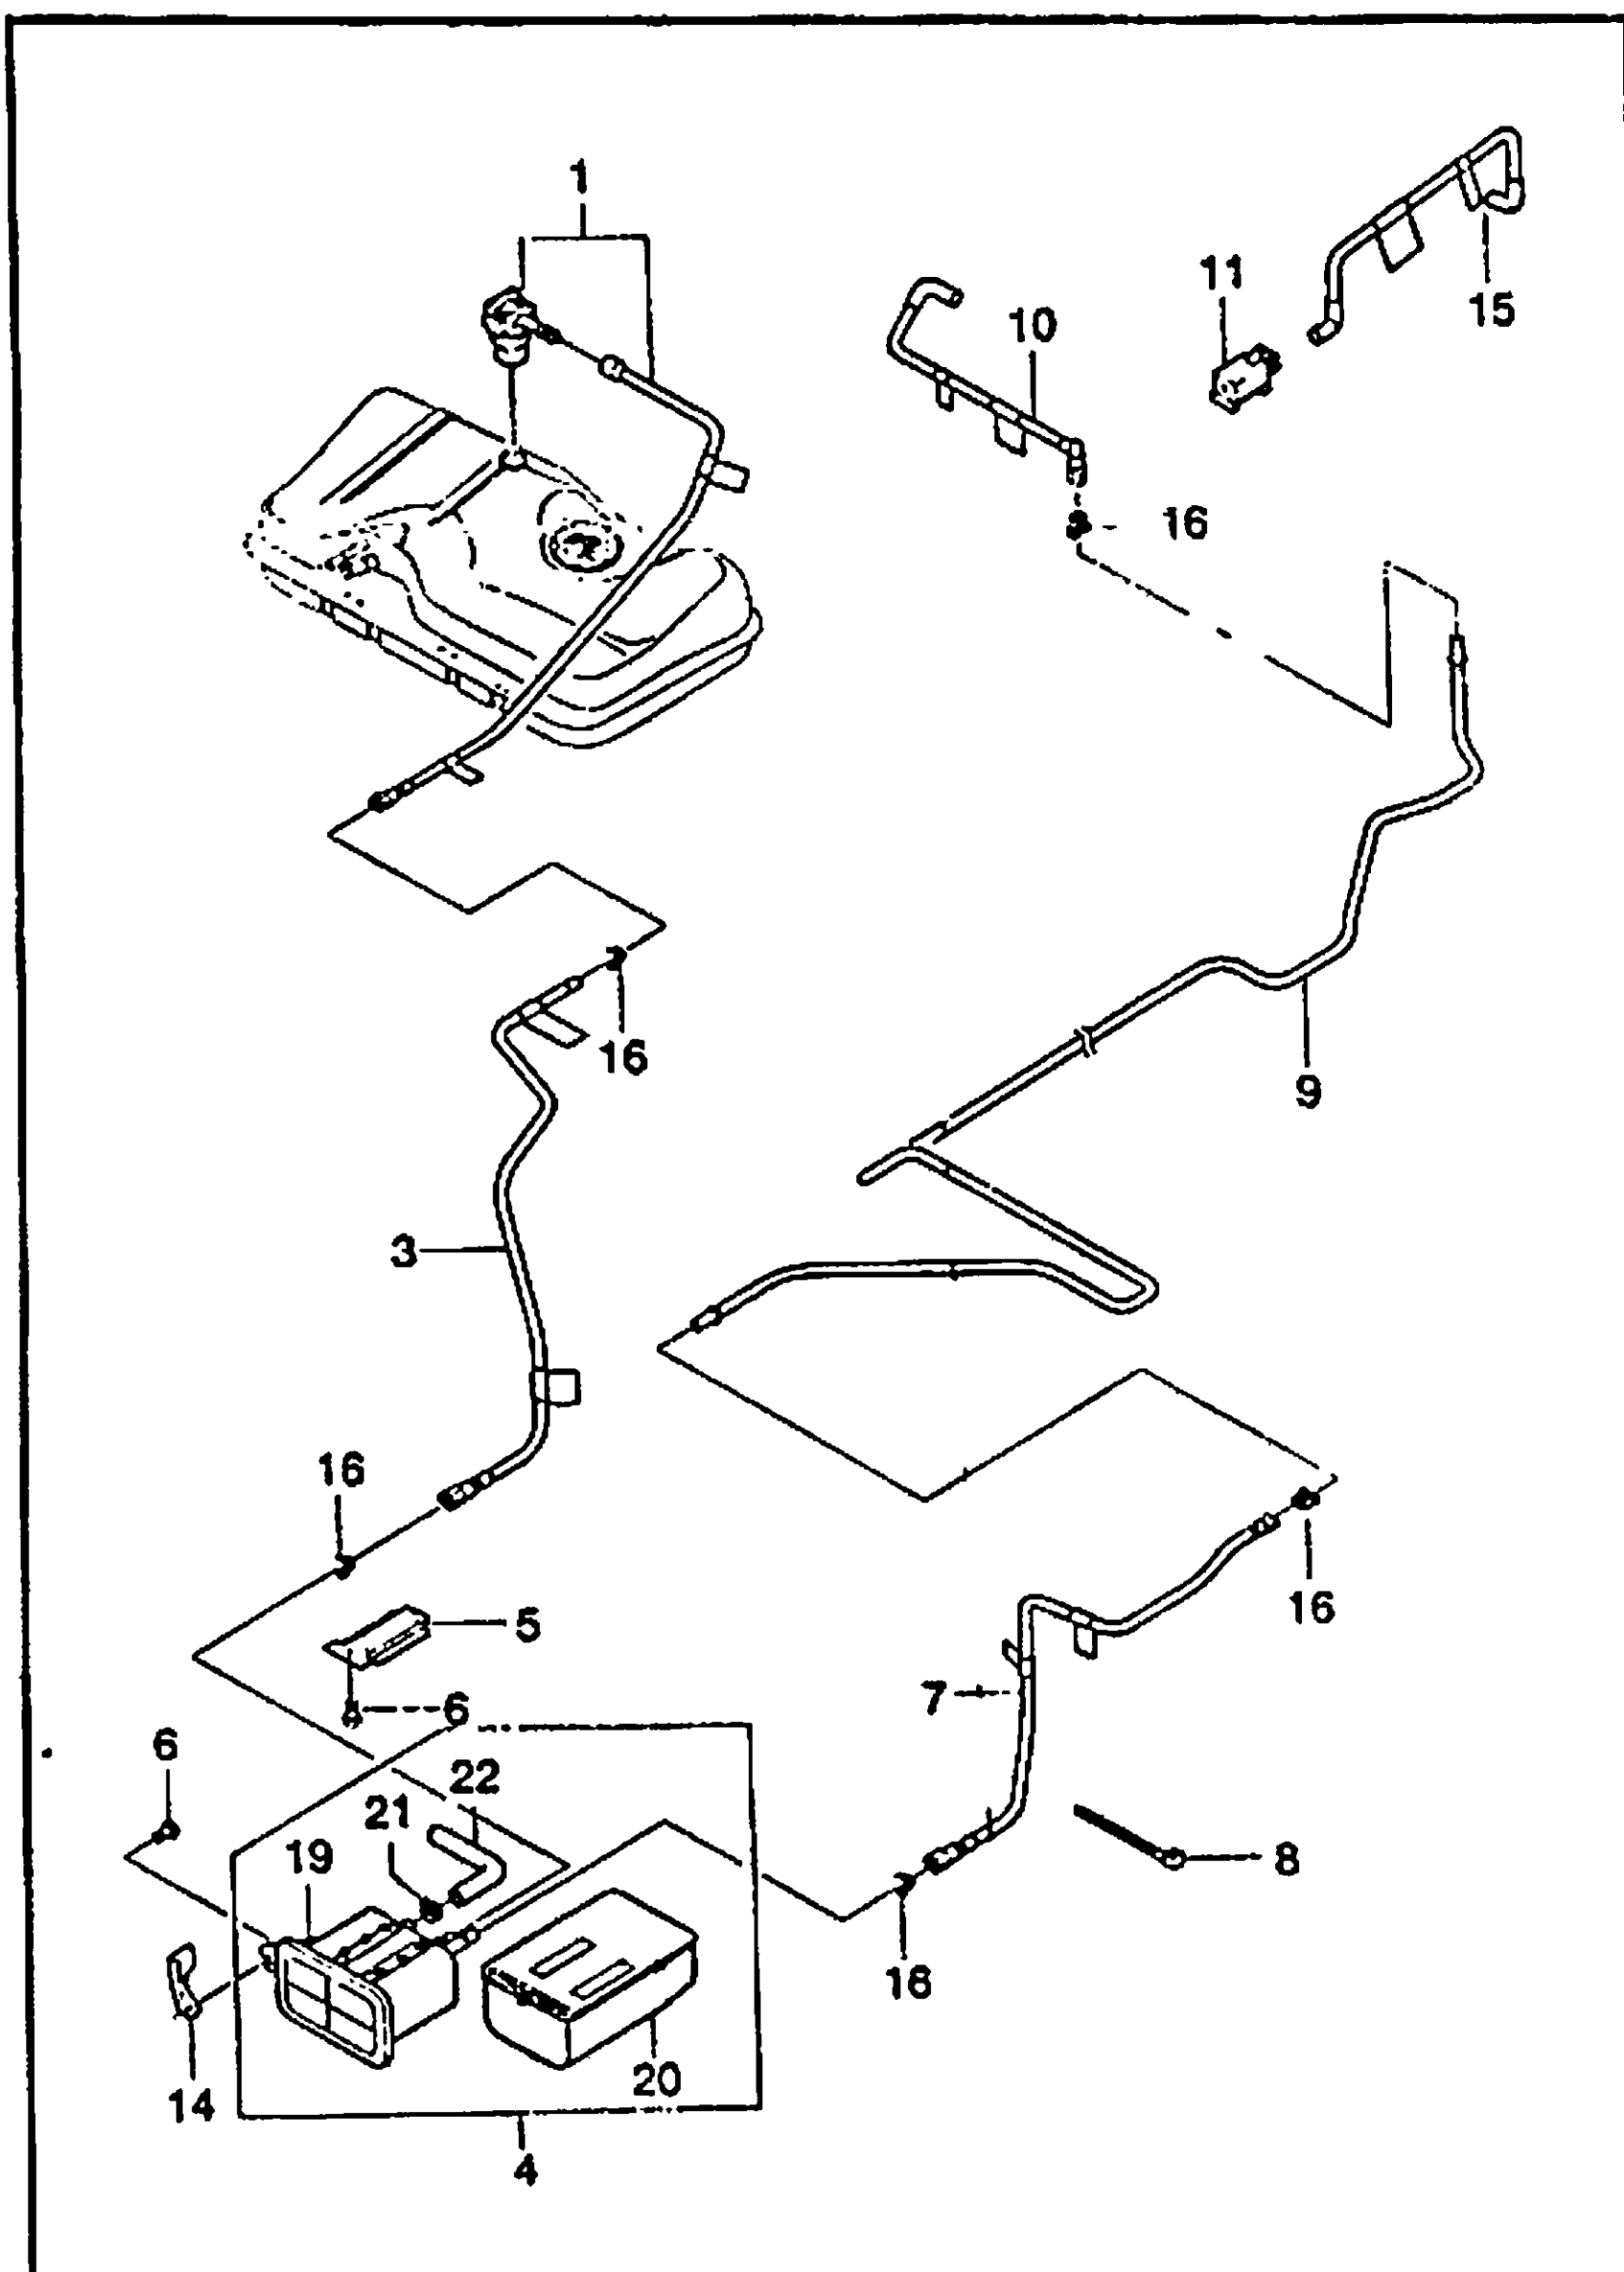


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S S				S S	S X		
	[14]	(E)BRACKET	A	CANISTER						(F)SUPPORT-BOITE	METALLIQUE			
	96216728	(D)TRÄGER,KANISTER								(S)SOPORTE-BOTE				
		. . . B B B	S S S							1				
	[15]	(E)TUBE A-PURGE,ENGINE								(F)TUYAU OU TUBE				
	96351540	(D)ROHRLEITUNG								(S)TUBO				
		Y . . B B B	A A A					&NN4&VB4		1				
	96351540	Y . . B B B	A A A					&NN6/NN7		1				
	96351889	6 . . B B B	. . A					&NN4&VB4		1				
	96351889	6 . . B B B	. . A					&NN6/NN7		1				
	96351889	6 . . B B B	. . A					&KL9		1				
	[16]	(E)RETAINER								(F)ARRETOIR				
	HP-9P-86020	(D)HALTER								(S)RETENEDOR				
		. . . B B B	A A A					&NN4&VB4		5		Φ 8mm		
	HP-9P-86020	. . . B B B	A A A					&NN6/NN7		5		Φ 8mm		
	HP-9P-86020	6 . . B B B	. . A					&KL9		5		Φ 8mm		
	[19]	(E)CANISTER								(F)BOITE-VAPEURS	CARBURANT			
	96181415	(D)KANISTER,BENZIN-DAMPF								(S)BOTE-COMBUSTIBLE	Y VAPOR			
		. . . B B B	A A A					&NN4&VB4		1				
	96181415	. . . B B B	A A A					&NN6/NN7		1				
	96181415	6 . . B B B	. . A					&KL9		1				
	[20]	(E)SHIELD-CANISTER								(F)BOUCLIER				
	96351820	(D)SCHILD								(S)ESCUDO				
		. . . B B B	A A A					&NN4&VB4		1				
	96351820	. . . B B B	A A A					&NN6/NN7		1				
	96351820	6 . . B B B	. . A					&KL9		1				
	[21]	(E)CLIP								(F)ATTACHE				
		(D)KLEMME								(S)GRAPA				


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

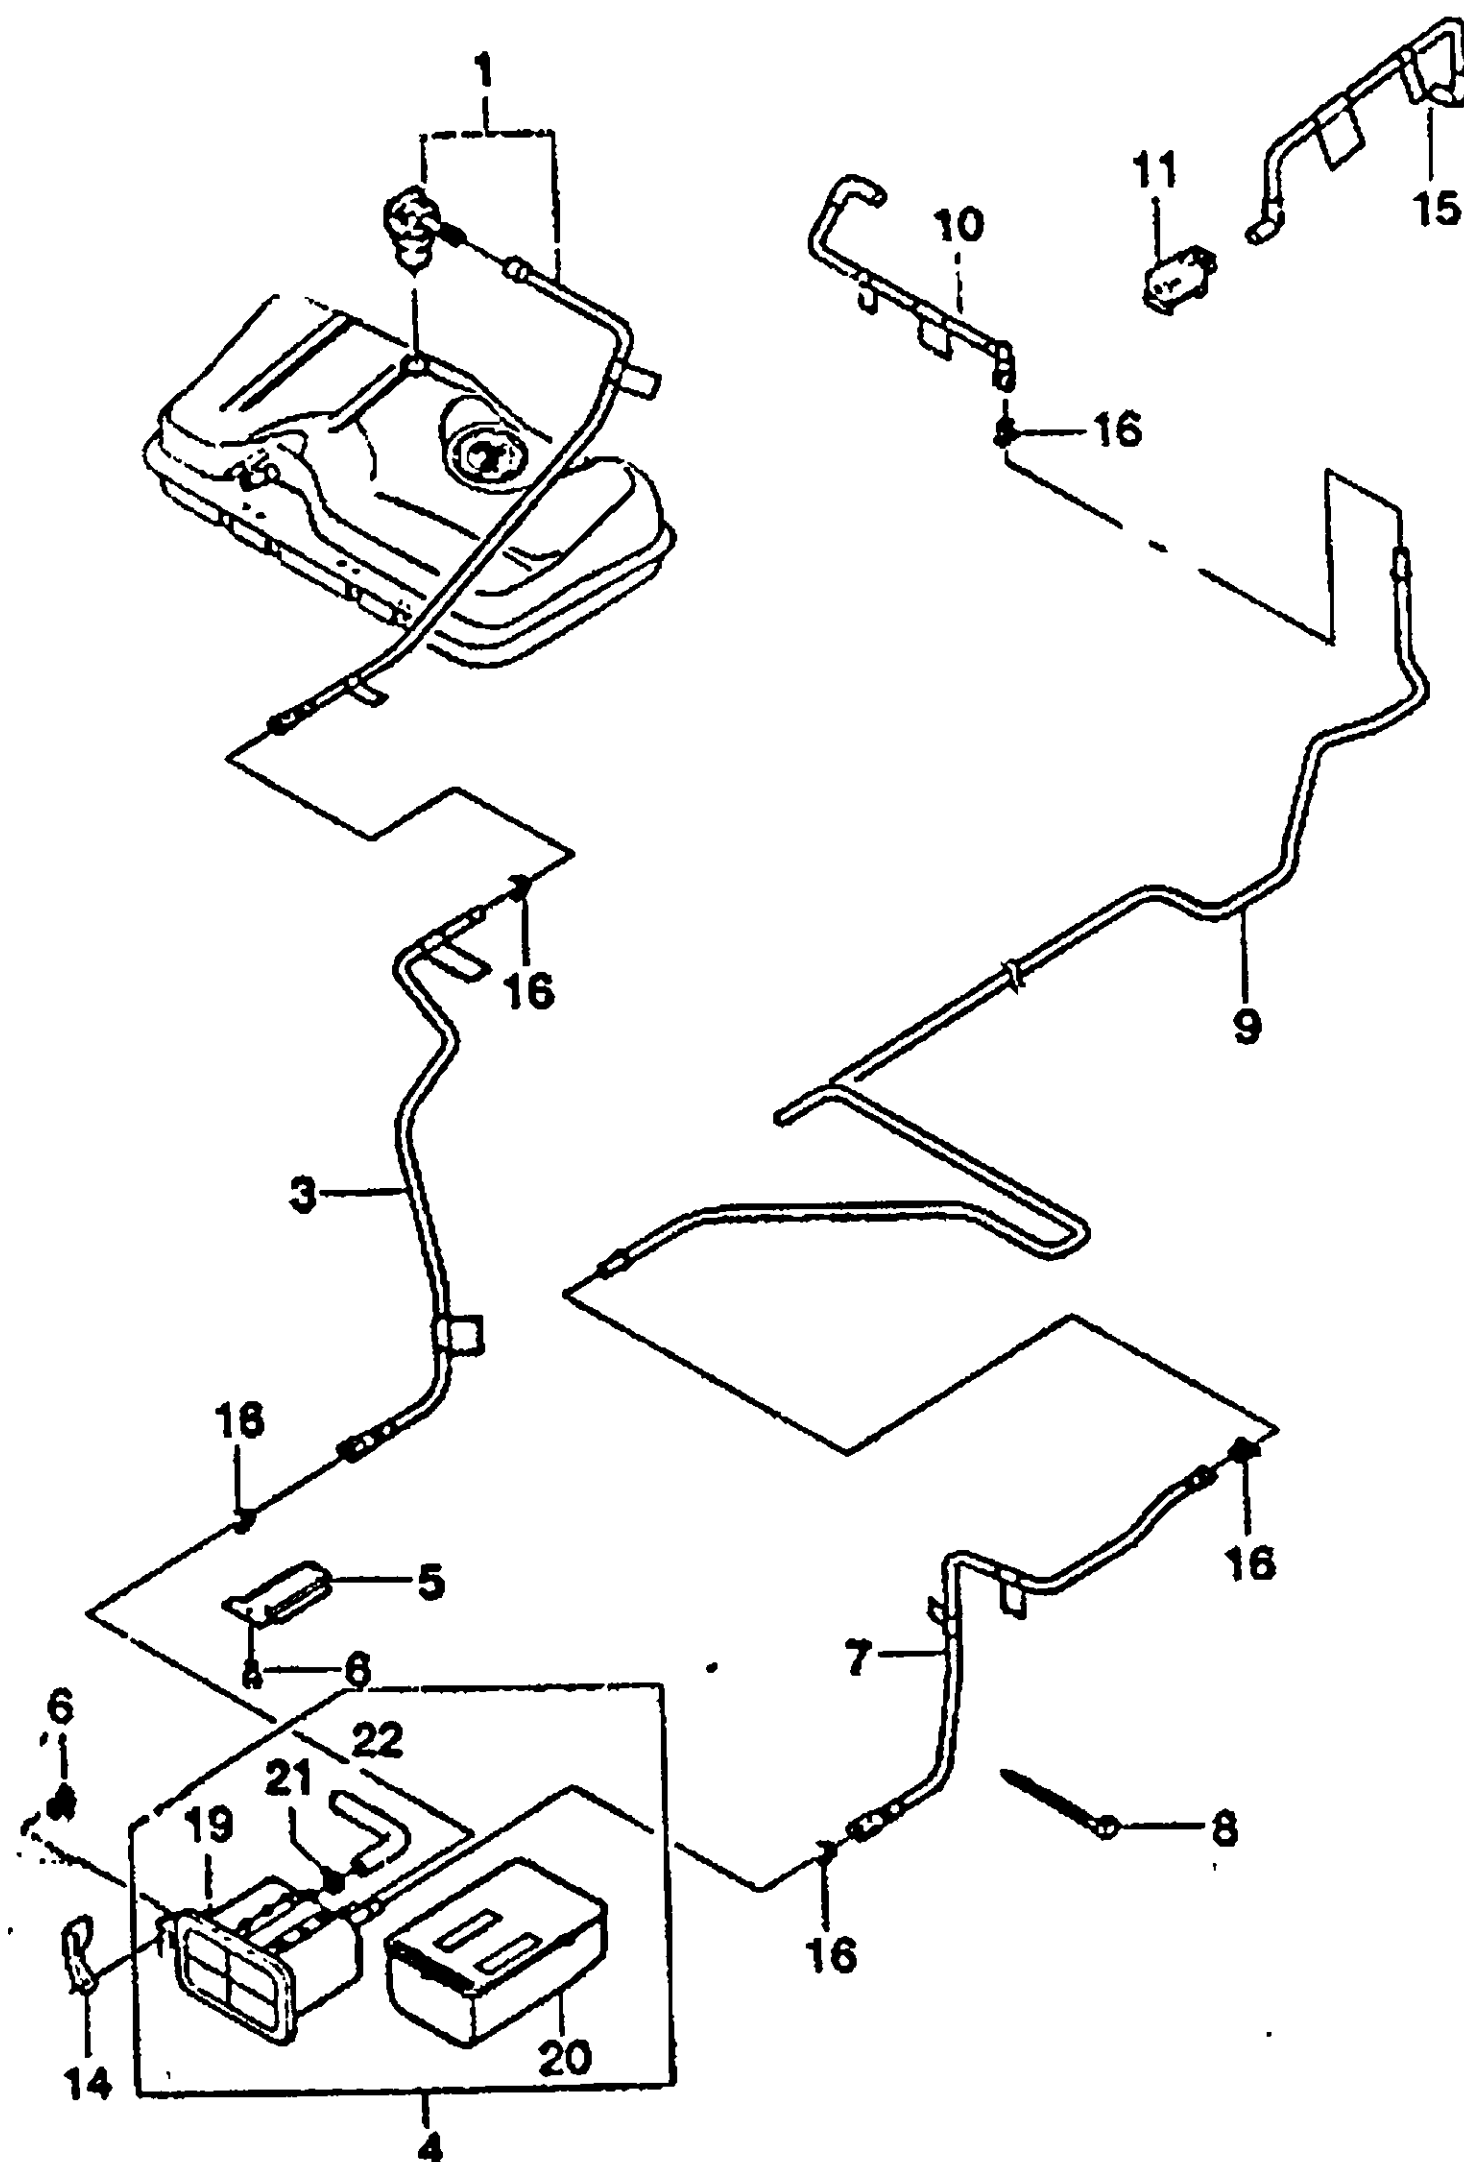


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	X
	09401-15403	.	.	B	B	B	A	A	A	&NN4&VB4		1				
	09401-15403	.	.	B	B	B	A	A	A	&NN6/NN7		1				
	09401-15403	6	.	B	B	B	.	.	A	&KL9		1				
	[22]	(E)HOSE-AIR VENT,CANISTER (D)SCHLAUCH											(F)TUYAU (S)MANGUERA			
	96351958	.	.	B	B	B	A	A	A	&NN4&VB4		1				
	96351958	.	.	B	B	B	A	A	A	&NN6/NN7		1				
	96351958	6	.	B	B	B	.	.	A	&KL9		1				

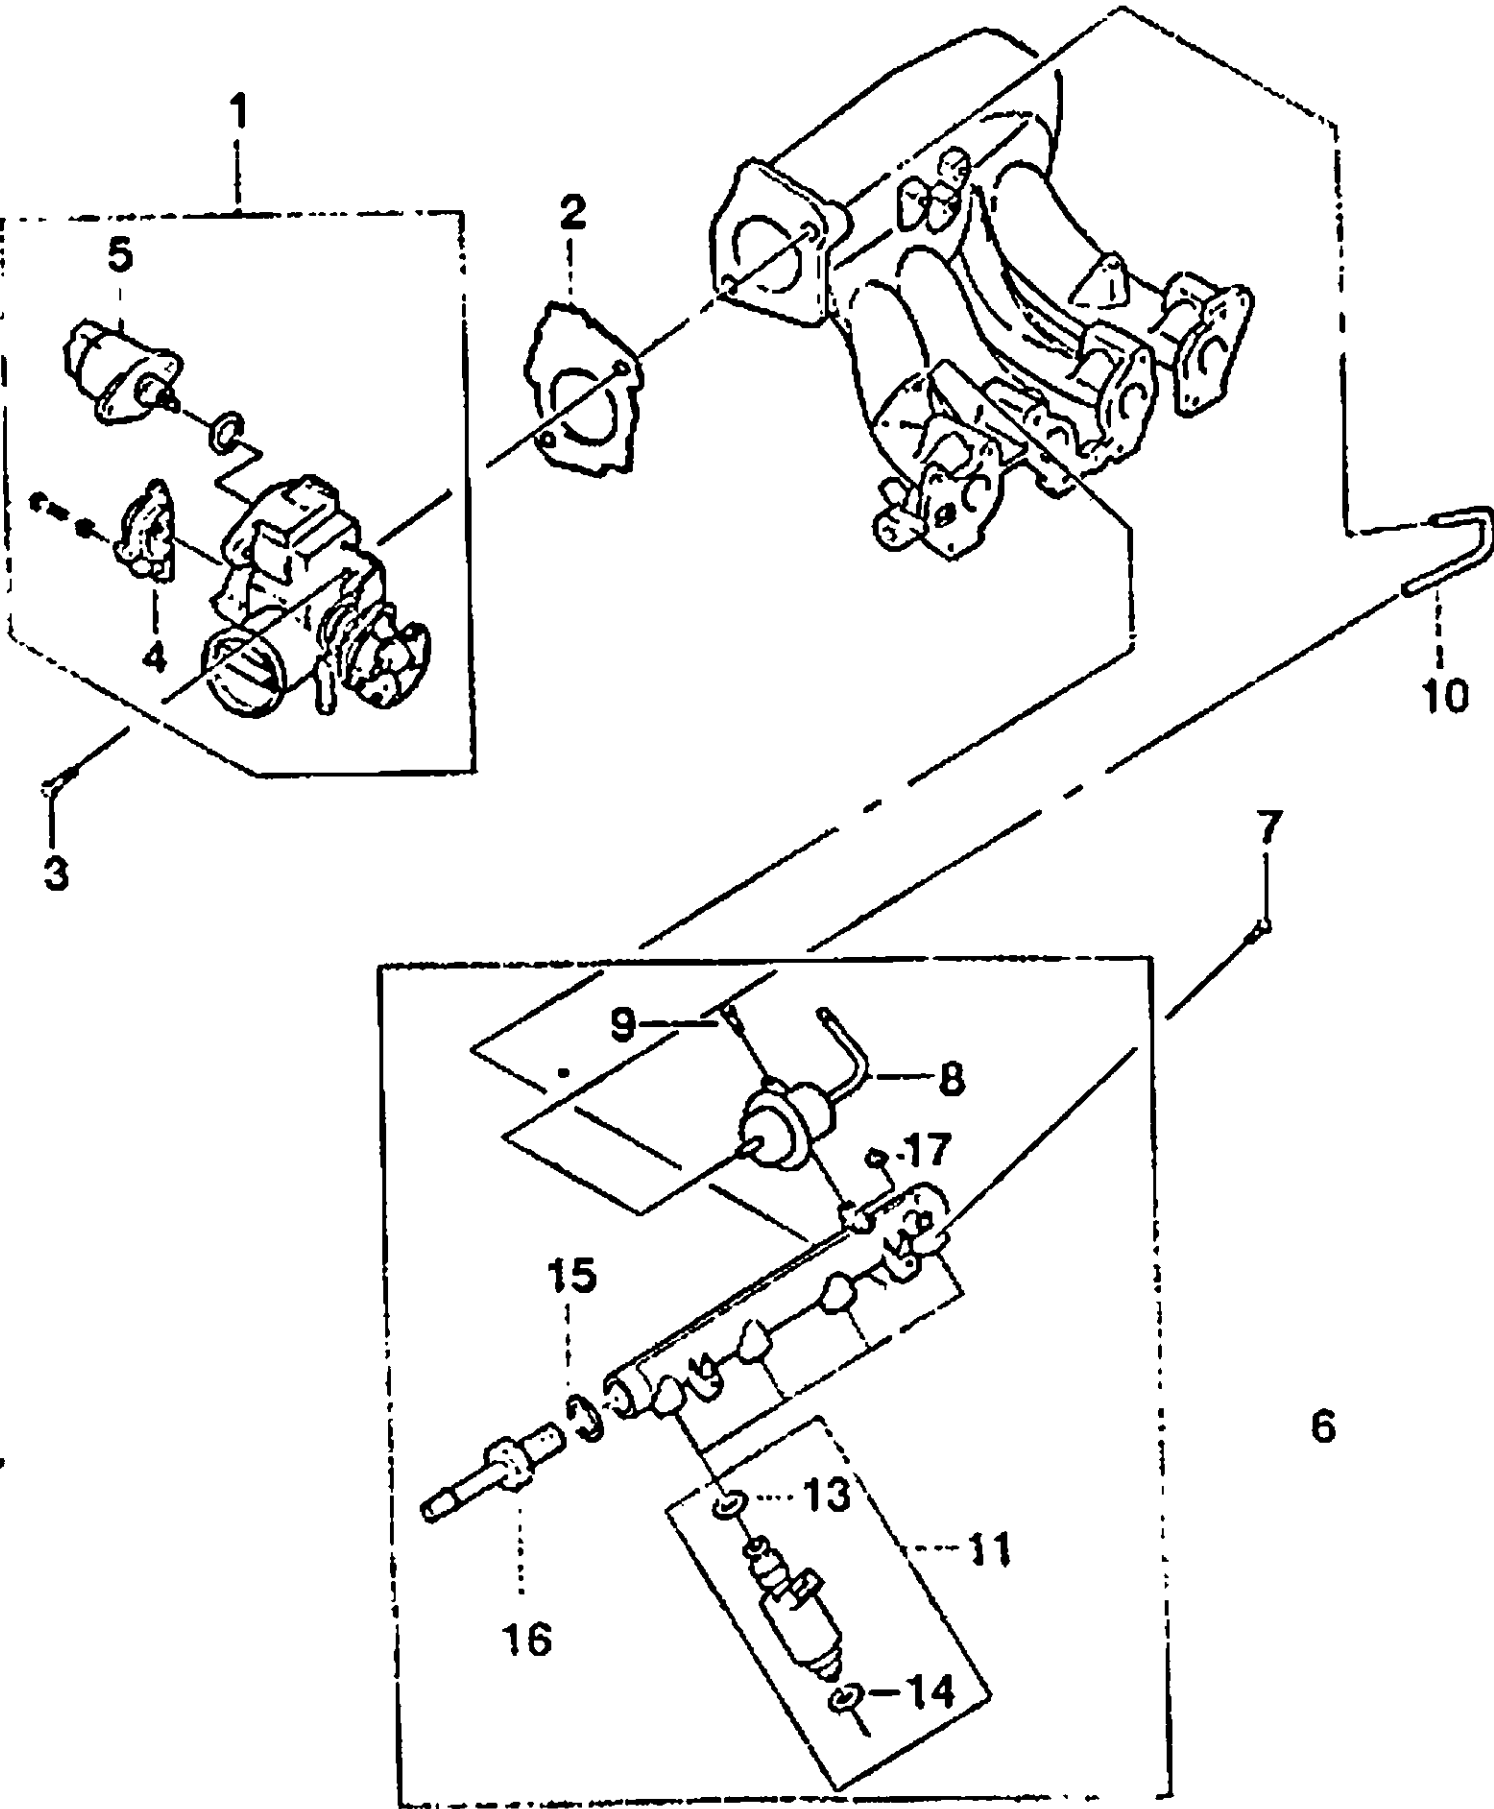


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S								S S	S S
	[01]	(E)BODY A-THROTTLE										(F)CORPS-COMMANDE DES GAZ				
	96184569	(D)KAROSSERIE,GASHEBEL										(S)CARROCERIA-ESTRANGULADOR				
	[02]	Y . B B B S S S										1				
		(E)GASKET-THROTTLE BODY										(F)JOINT				
	[02]	(D)DICHTUNG,DROSSEL KÖRPER										(S)JUNTA				
	96352111	Y . B B B S S S										1				
	[03]	(E)BOLT										(F)BOULON				
		(D)SCHRAUBE										(S)PERNO				
	09117-08010	Y . B B B S S S										2				
	[04]	(E)SENSOR A-THROTTLE PSTN										(F)DETECTEUR				
		(D)SENSOR,DROSSEL STELLUNG										(S)SENSOR				
	17106681	Y . B B B S S S										1				
	[05]	(E)VALVE-IDLING CONTROL										(F)SOUPAPE				
		(D)VENTIL										(S)VALVULA				
	17059602	Y . B B B S S S										1				
	[06]	(E)RAIL A-FUEL										(F)RAIL-CARBURANT				
		(D)SCHIENE,BENZIN										(S)RIEL-COMBUSTIBLE				
	96184729	Y . B B B S S S										1				
	[07]	(E)BOLT-HEXAGON										(F)BOULON				
		(D)SCHRAUBE										(S)PERNO				
	01127-08353	Y . B B B S S S										2				
	[08]	(E)REGULATOR A-FUEL PRESSURE										(F)REGULATEUR				
		(D)REGULATOR,BENZIN DRUCK										(S)REGULADOR				
	96184228	Y . B B B S S S										1				
	[09]	(E)SCREW-PAN										(F)VIS				
		(D)SCHRAUBE										(S)TORNILLO				
	9034906100	Y . B B B S S S										1				
	[10]	(E)HOSE-VACUUM										(F)TUYAU-DEPRESSION				
		(D)SCHLAUCH,VAKUUM										(S)MANGUERA-VACIO				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

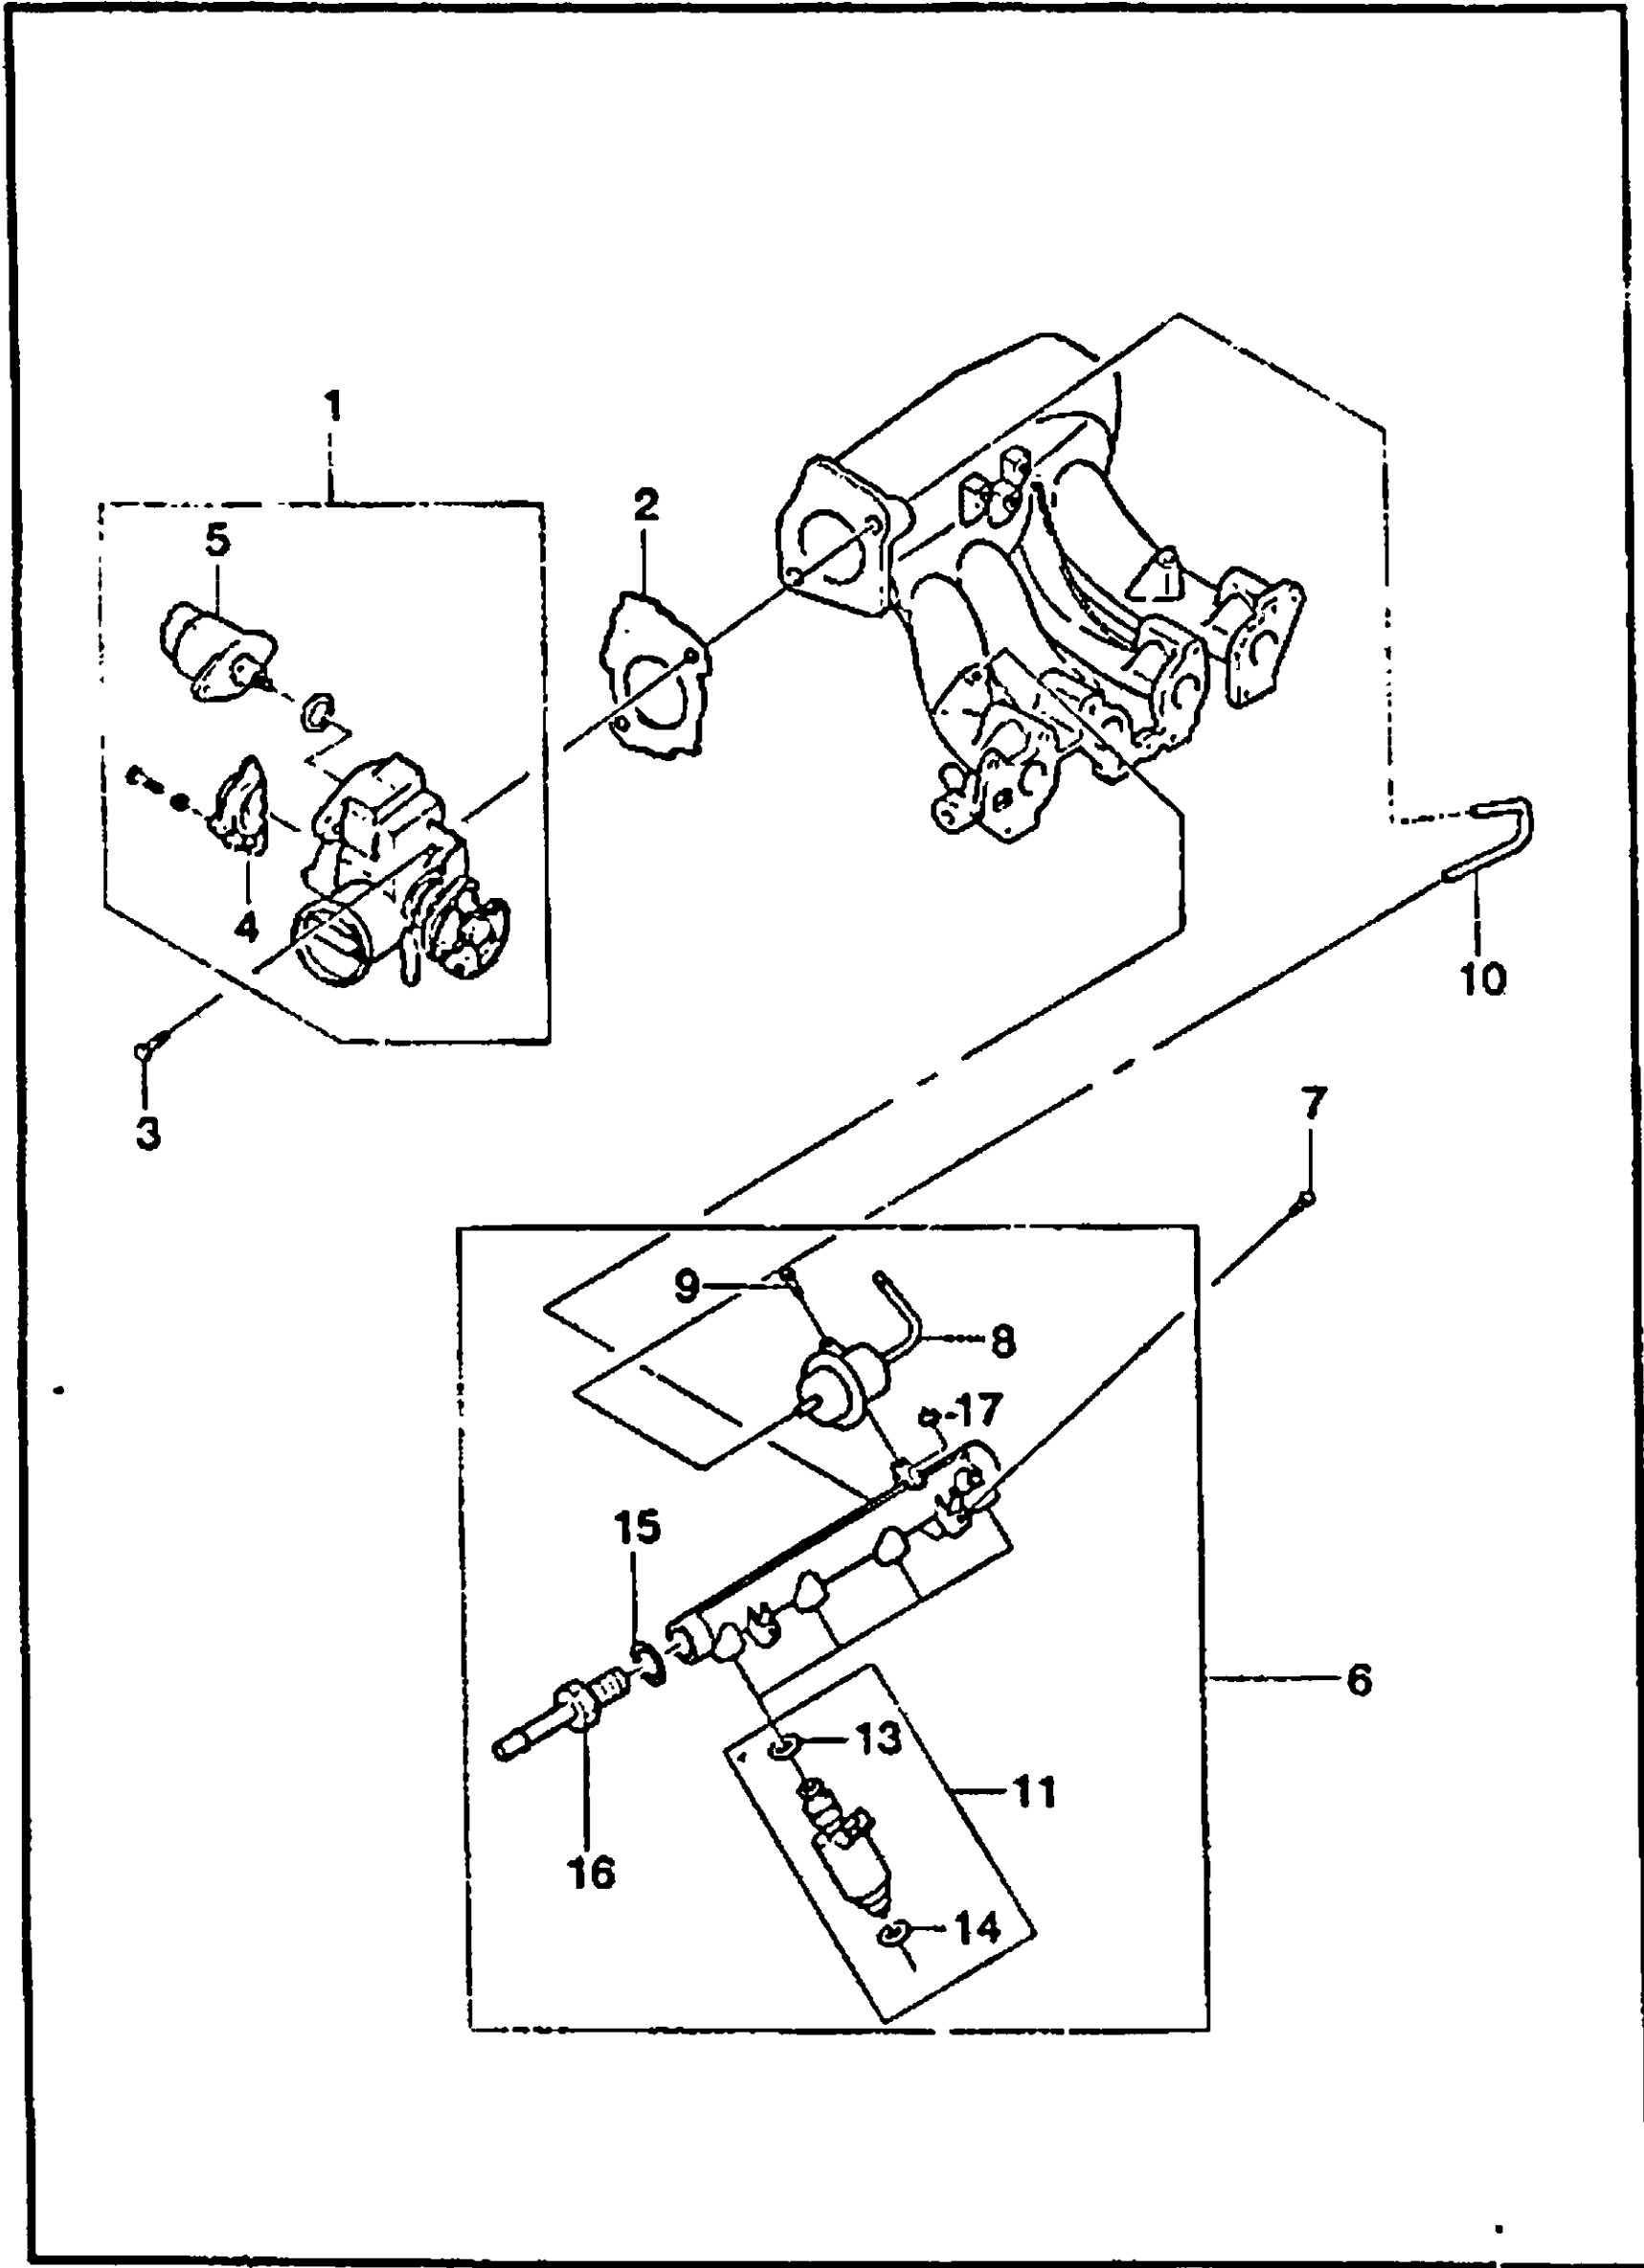


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	96351089	Y	.	B	B	B	S	S	S		1		195mm			
	[11]	(E)									(F)		INJECTEUR-CARBURANT			
		(D)									(S)		INJECTOR-COMBUSTIBLE			
	25171743	Y	.	B	B	B	S	S	S		4					
	[13]	(E)									(F)		JOINT TORIQUE-INJECTEUR			
		(D)									(S)		ANILLO EN O-INJECTOR			
	05235032	Y	.	B	B	B	S	S	S		4					
	[14]	(E)									(F)		JOINT TORIQUE-INJECTEUR			
		(D)									(S)		ANILLO EN O-INJECTOR			
	17108225	Y	.	B	B	B	S	S	S		4					
	[15]	(E)									(F)		RONDELLE			
		(D)									(S)		ARANDELA			
	96143641	Y	.	B	B	B	S	S	S		1					
	[16]	(E)									(F)		CONNECTEUR			
		(D)									(S)		CONECTOR			
	96184471	Y	.	B	B	B	S	S	S		1					
	[17]	(E)									(F)		ANNEAU-JOINT			
		(D)									(S)		ANILLO-SELLO			
	17081434	Y	.	B	B	B	S	S	S		1					
ENG(ENGINE)		T/A(TRANSAXLE)		BODY TYPE												
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON		4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK												

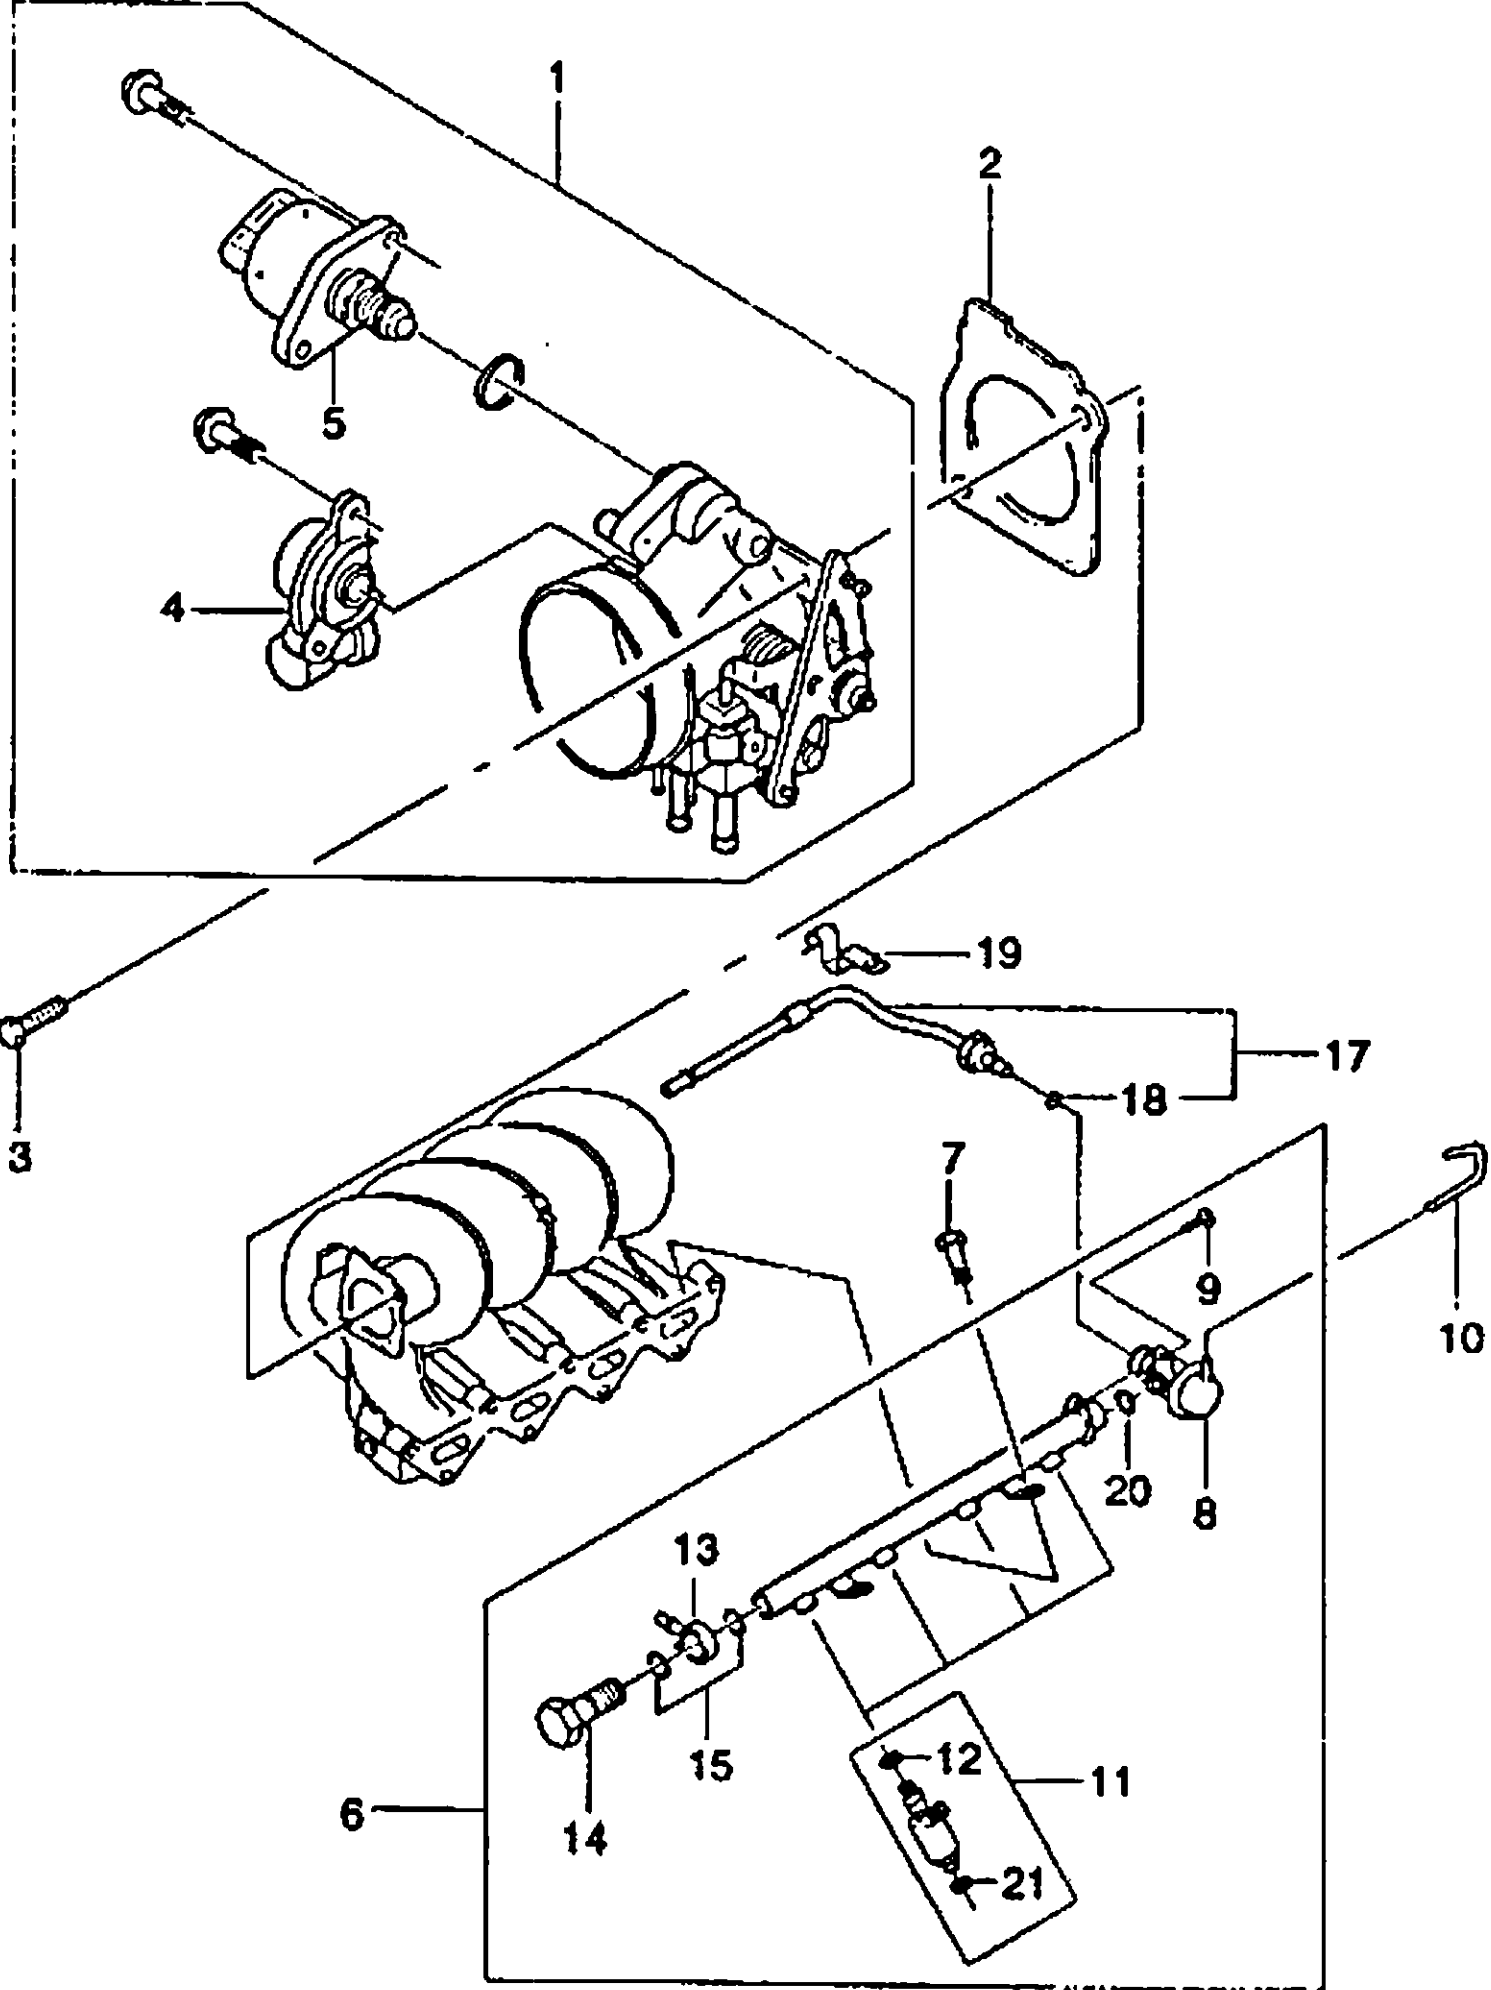


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S X
	[01]	(E)BODY A-THROTTLE (D)KAROSSERIE,GASHEBEL										(F)CORPS-COMMANDE DES GAZ (S)CARROCERIA-ESTRANGULADOR				
	96184572	6	.	B	B	B	.	.	O		1					
	[02]	(E)GASKET-THROTTLE BODY (D)DICHTUNG,DROSSEL KÖRPER										(F)JOINT (S)JUNTA				
	96352111	6	.	B	B	B	.	.	O		1					
	[03]	(E)BOLT (D)SCHRAUBE										(F)BOULON (S)PERNO				
	09117-08010	6	.	B	B	B	.	.	O		2					
	[04]	(E)SENSOR A-THROTTLE PSTN (D)SENSOR,DROSSEL STELLUNG										(F)DETECTEUR (S)SENSOR				
	17106681	6	.	B	B	B	.	.	O		1					
	[05]	(E)VALVE-IDLING CONTROL (D)VENTIL										(F)SOUPAPE (S)VALVULA				
	17059602	6	.	B	B	B	.	.	O		1					
	[06]	(E)RAIL A-FUEL (D)SCHIENE,BENZIN										(F)RAIL-CARBURANT (S)RIEL-COMBUSTIBLE				
	96183232	6	.	B	B	B	.	.	O		1					
	[07]	(E)BOLT-HEXAGON (D)SCHRAUBE										(F)BOULON (S)PERNO				
	01137-08163	6	.	B	B	B	.	.	O		2					
	[08]	(E)REGULATOR A-FUEL PRESSURE (D)REGULATOR,BENZIN DRUCK										(F)REGULATEUR (S)REGULADOR				
	96184759	6	.	B	B	B	.	.	O		1					
	[09]	(E)SCREW (D)SCHRAUBE										(F)VIS (S)TORNILLO				
	09360-16001													NOT APPLIED		
	96143390	6	.	B	B	B	.	.	O		1					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

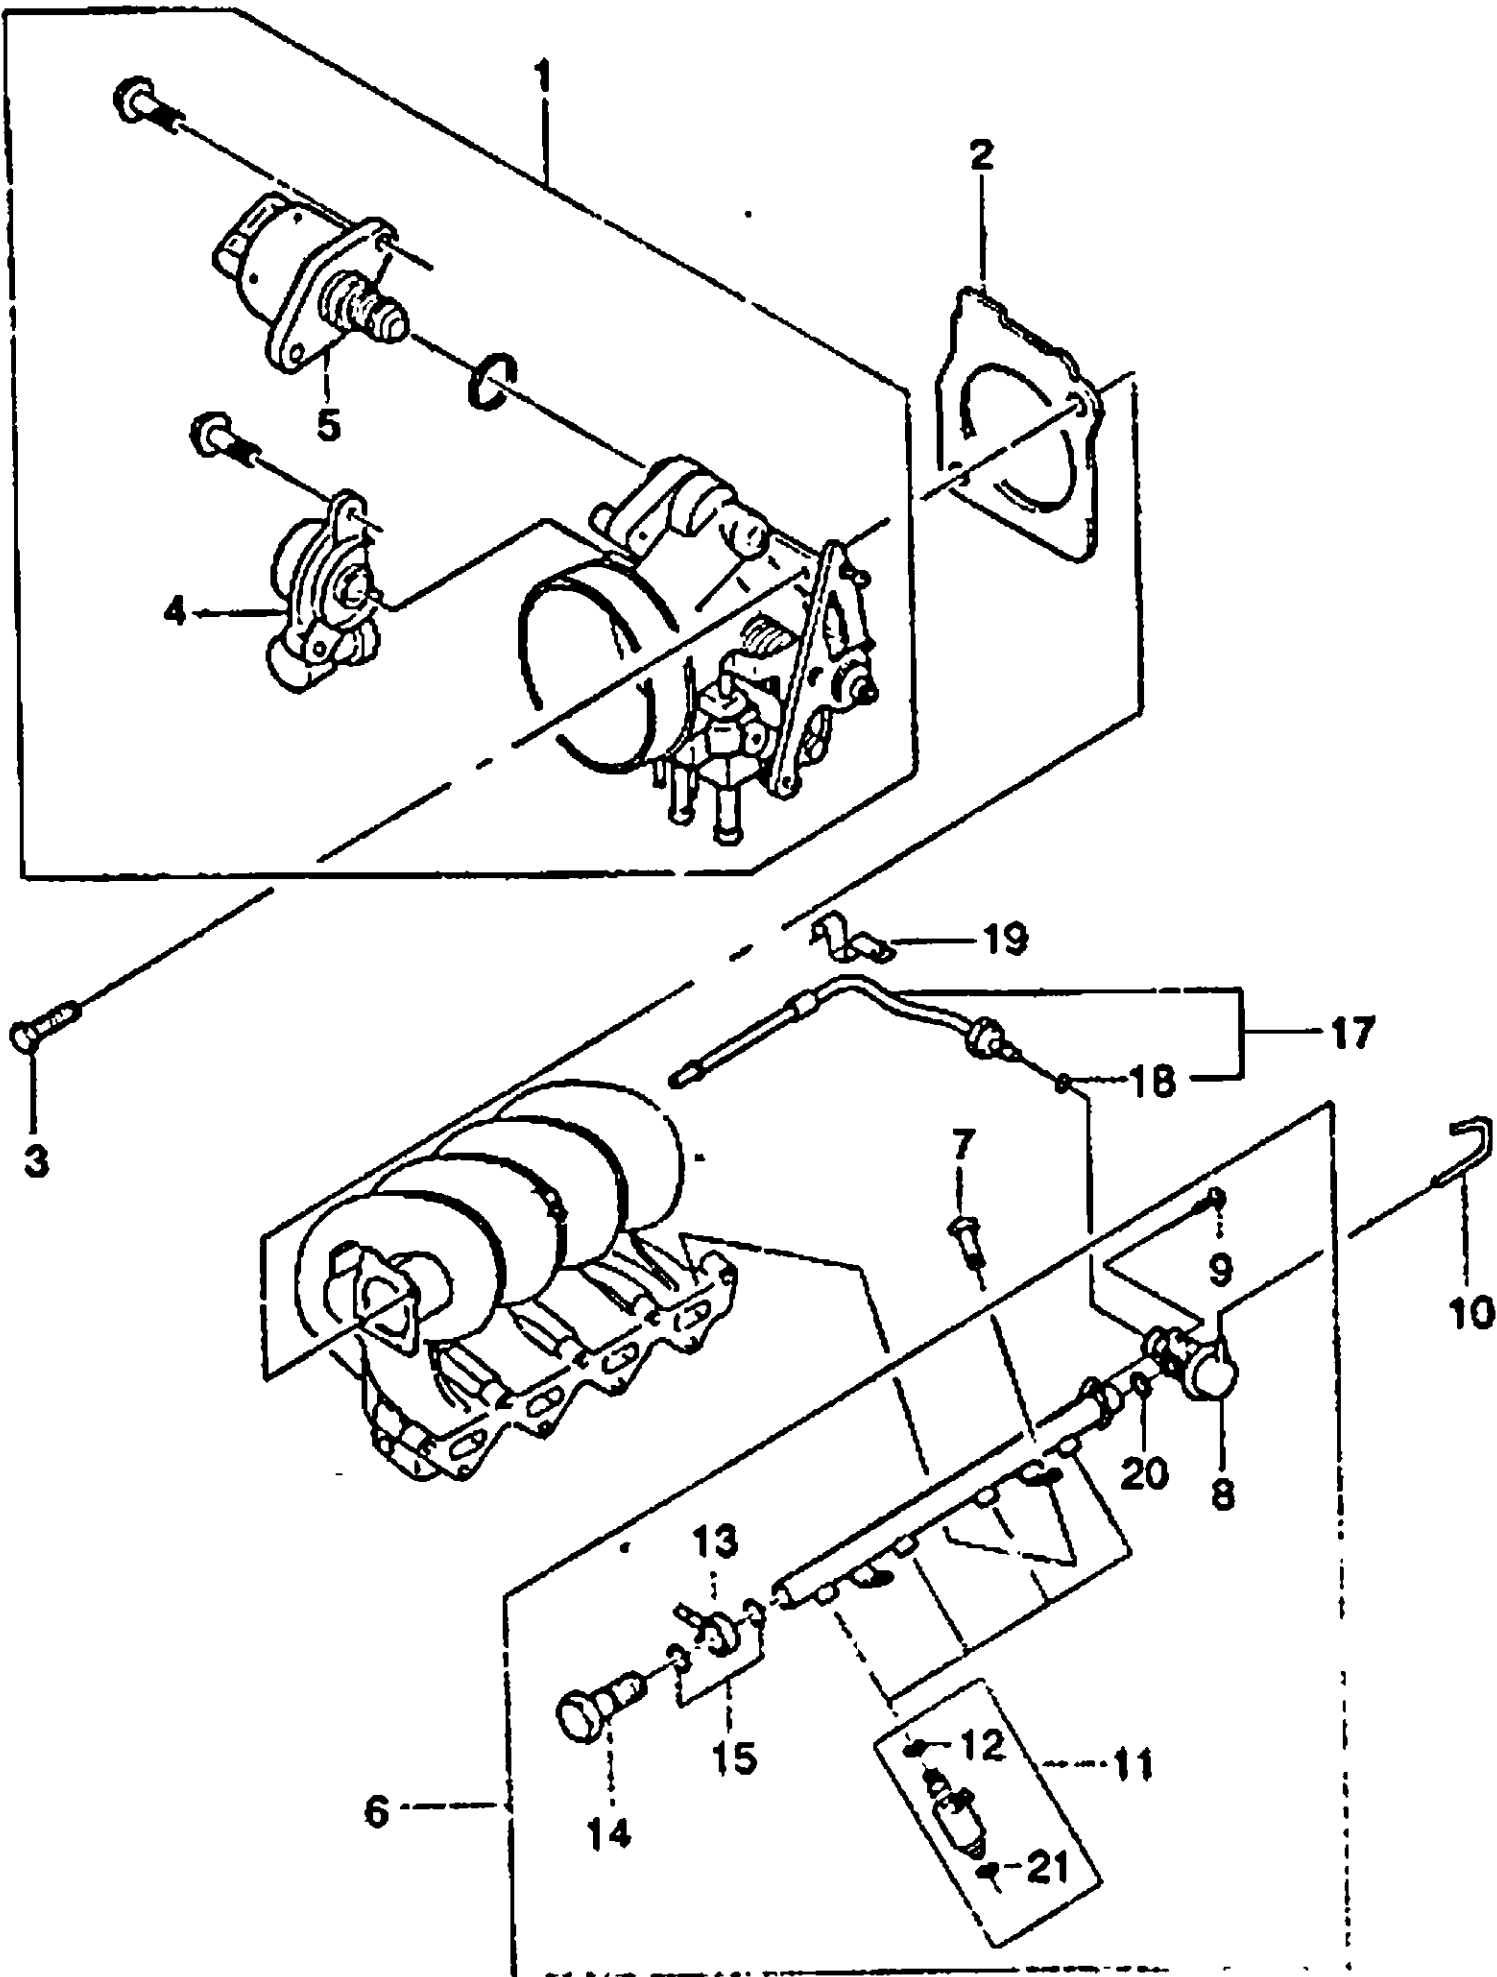


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[10]	(E)HOSE-VACUUM (D)SCHLAUCH,VAKUUM									(F)TUYAU-DEPRESSION (S)MANGUERA-VACIO					
	96351089	6	.	B	B	B	.	.	O		1	970401	195mm			
Y	96248446	6	.	B	B	B	.	.	O		1	970401	165mm			
	[11]	(E)INJECTOR A-FUEL (D)EINSPRITZE,BENZIN										(F)INJECTEUR-CARBURANT (S)INYECTOR-COMBUSTIBLE				
	25174024	6	.	B	B	B	.	.	O		4					
	[12]	(E)RING-INJECTOR,UPPER (D)O RING,EINSPRITZER										(F)JOINT TORIQUE-INJECTEUR (S)ANILLO EN O-INYECTOR				
	05235032	6	.	B	B	B	.	.	O		4					
	[13]	(E)CONNECTOR-FUEL RAIL (D)VERBINDUNG										(F)CONNECTEUR (S)CONECTOR				
	96183364	6	.	B	B	B	.	.	O		1					
	[14]	(E)BOLT-UNION (D)SCHRAUBE										(F)BOULON (S)PERNO				
	09360-16001	6	.	B	B	B	.	.	O		1					
	[15]	(E)GASKET-CONNECTOR (D)DICHTUNG										(F)JOINT (S)JUNTA				
	96183365	6	.	B	B	B	.	.	O		2					
	[17]	(E)PIPE A-ADAPTOR RETURN (D)ROHR										(F)TUYAU (S)TUBERIA				
	96183068	6	.	B	B	B	.	.	O		1					
	[18]	(E)O RING (D)O RING										(F)JOINT TORIQUE (S)ANILLO EN O				
	96114707	6	.	B	B	B	.	.	O		1					
	[19]	(E)BRACKET-PIPE ADAPTOR RTN (D)TRÄGER										(F)SUPPORT (S)SOPORTE				
	96183070	6	.	B	B	B	.	.	O		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

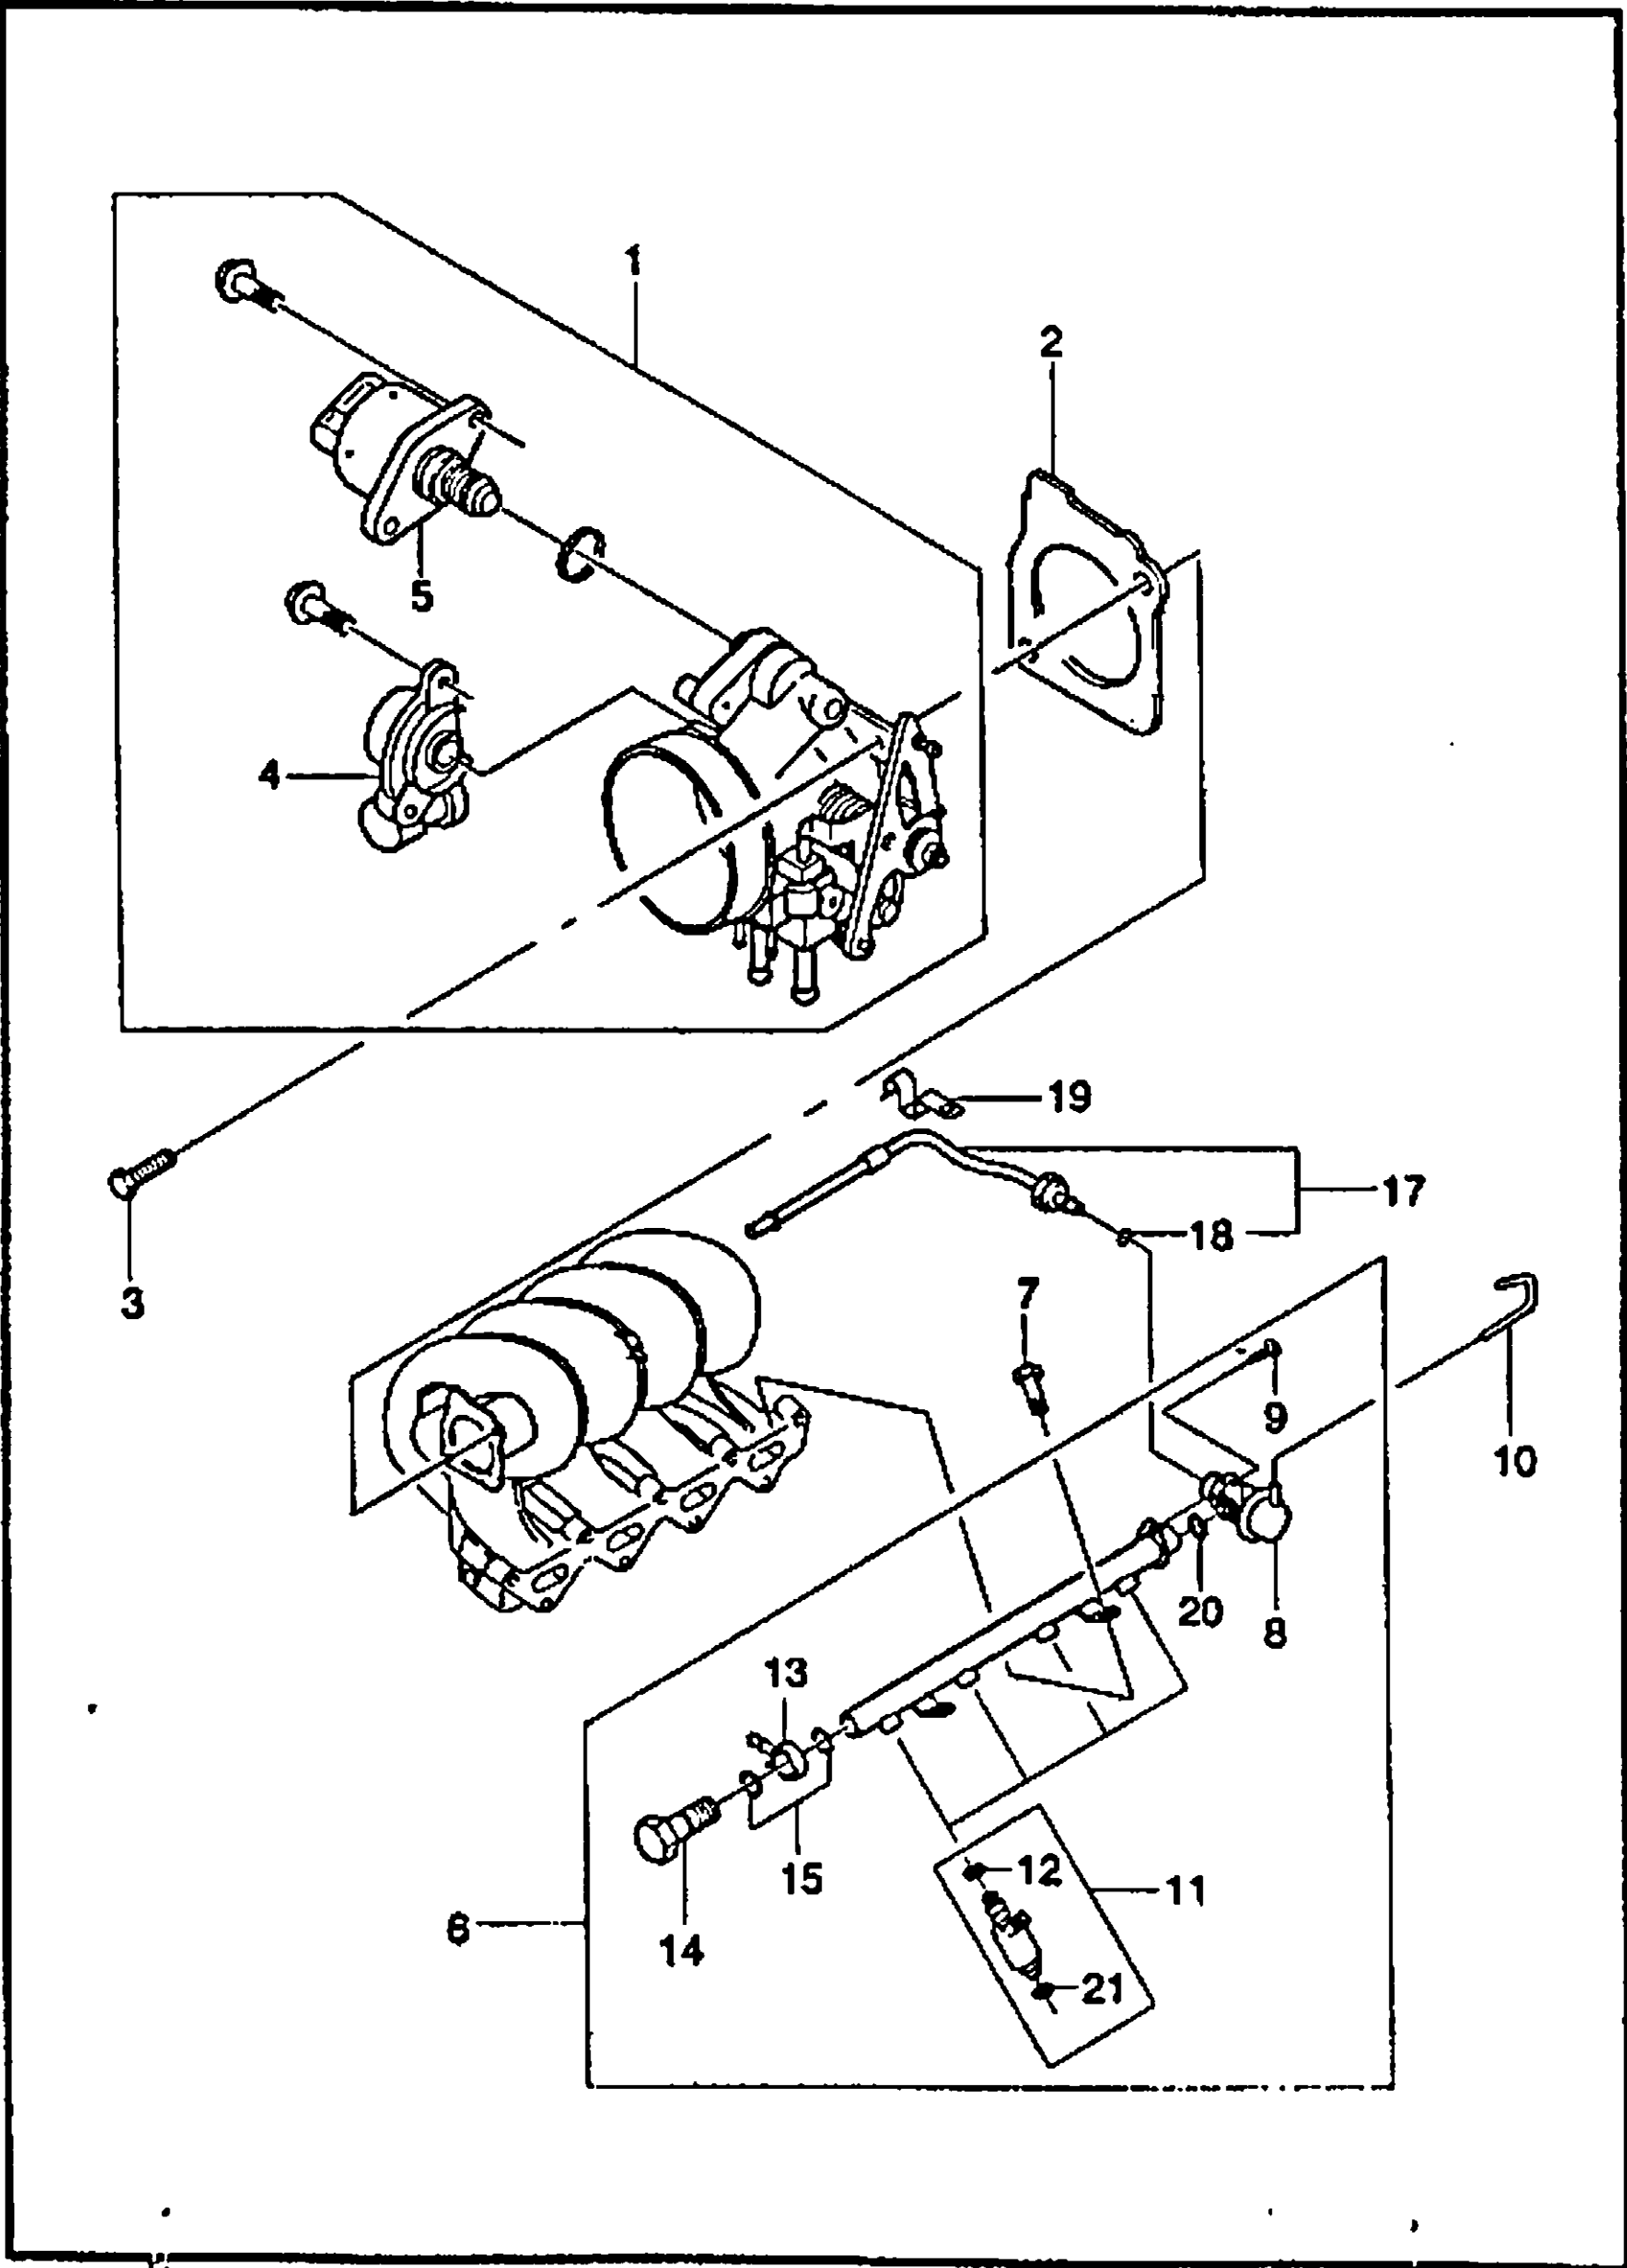


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[20] 17081434	(E)RING-SEAL (D)RING,DICHTUNG 6 . B B B . . O									(F)ANNEAU-JOINT (S)ANILLO-SELLO 1					
	[21] 17108225	(E)RING-INJECTOR,LOWER (D)O RING,EINSPRITZER 6 . B B B . . O									(F)JOINT TORIQUE-INJECTEUR (S)ANILLO EN O-INJECTOR 4					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

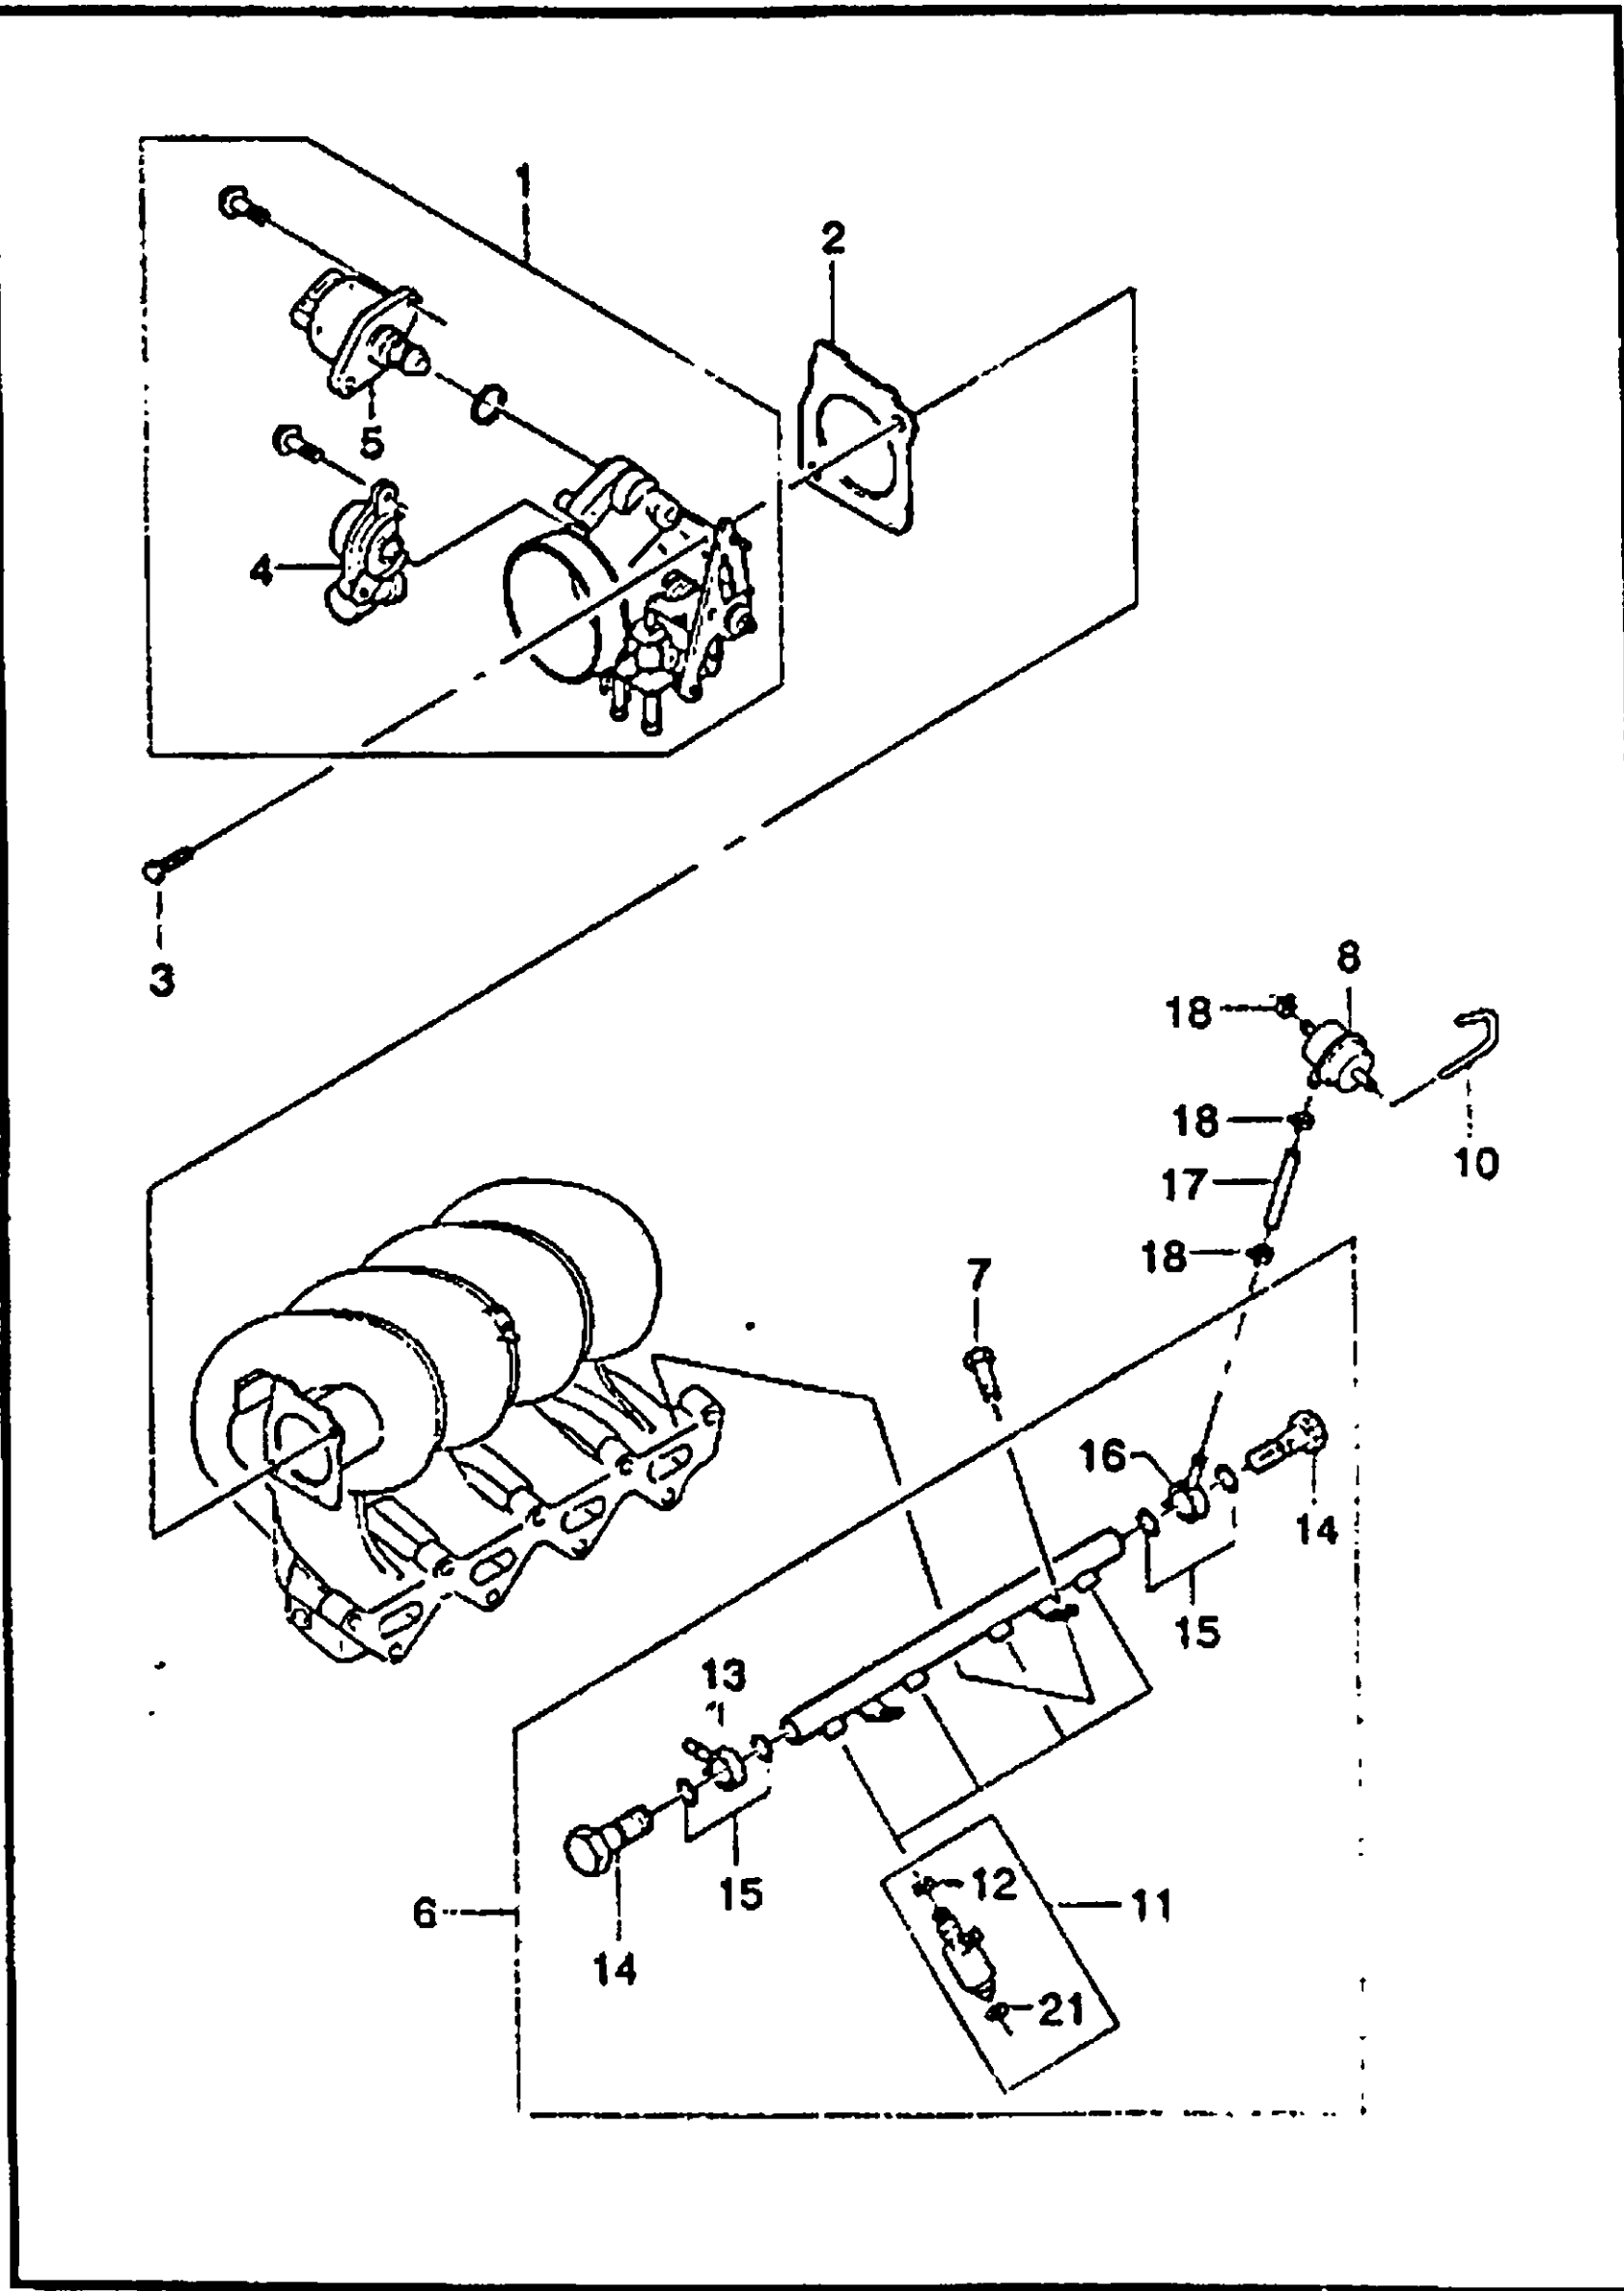


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N H	3 H	5 H								
	[01] 96184572	(E)BODY A-THROTTLE (D)KAROSSERIE,GASHEBEL 6 . B B B . . A &KL9									(F)CORPS-COMMANDE DES GAZ (S)CARROCERIA-ESTRANGULADOR 1			
	[02] 96352111	(E)GASKET-THROTTLE BODY (D)DICHTUNG,DROSSEL KÖRPER 6 . B B B . . A &KL9									(F)JOINT (S)JUNTA 1			
	[03] 09117-08010	(E)BOLT (D)SCHRAUBE 6 . B B B . . A &KL9									(F)BOULON (S)PERNO 2			
	[04] 17106681	(E)SENSOR A-THROTTLE PSTN (D)SENSOR,DROSSEL STELLUNG 6 . B B B . . A &KL9									(F)DETECTEUR (S)SENSOR 1			
	[05] 17059602	(E)VALVE-IDLING CONTROL (D)VENTIL 6 . B B B . . A &KL9									(F)SOUPAPE (S)VALVULA 1			
	[06] 96242764	(E)RAIL A-FUEL (D)SCHIENE,BENZIN 6 . B B B . . A &KL9									(F)RAIL-CARBURANT (S)RIEL-COMBUSTIBLE 1			
	[07] 01137-08163	(E)BOLT-HEXAGON (D)SCHRAUBE 6 . B B B . . A &KL9									(F)BOULON (S)PERNO 2			
	[08] 0280150716	(E)REGULATOR A-FUEL PRESSURE (D)REGULATOR,BENZIN DRUCK 6 . B B B . . A &KL9									(F)REGULATEUR (S)REGULADOR 1			
	[10] 96242772	(E)HOSE-VACUUM (D)SCHLAUCH,VAKUUM 6 . B B B . . A &KL9									(F)TUYAU-DEPRESSION (S)MANGUERA-VACIO 1			
	[11]	(E)INJECTOR A-FUEL (D)ENSPRITZE,BENZIN									(F)INJECTEUR-CARBURANT (S)INYEctor-COMBUSTIBLE			
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

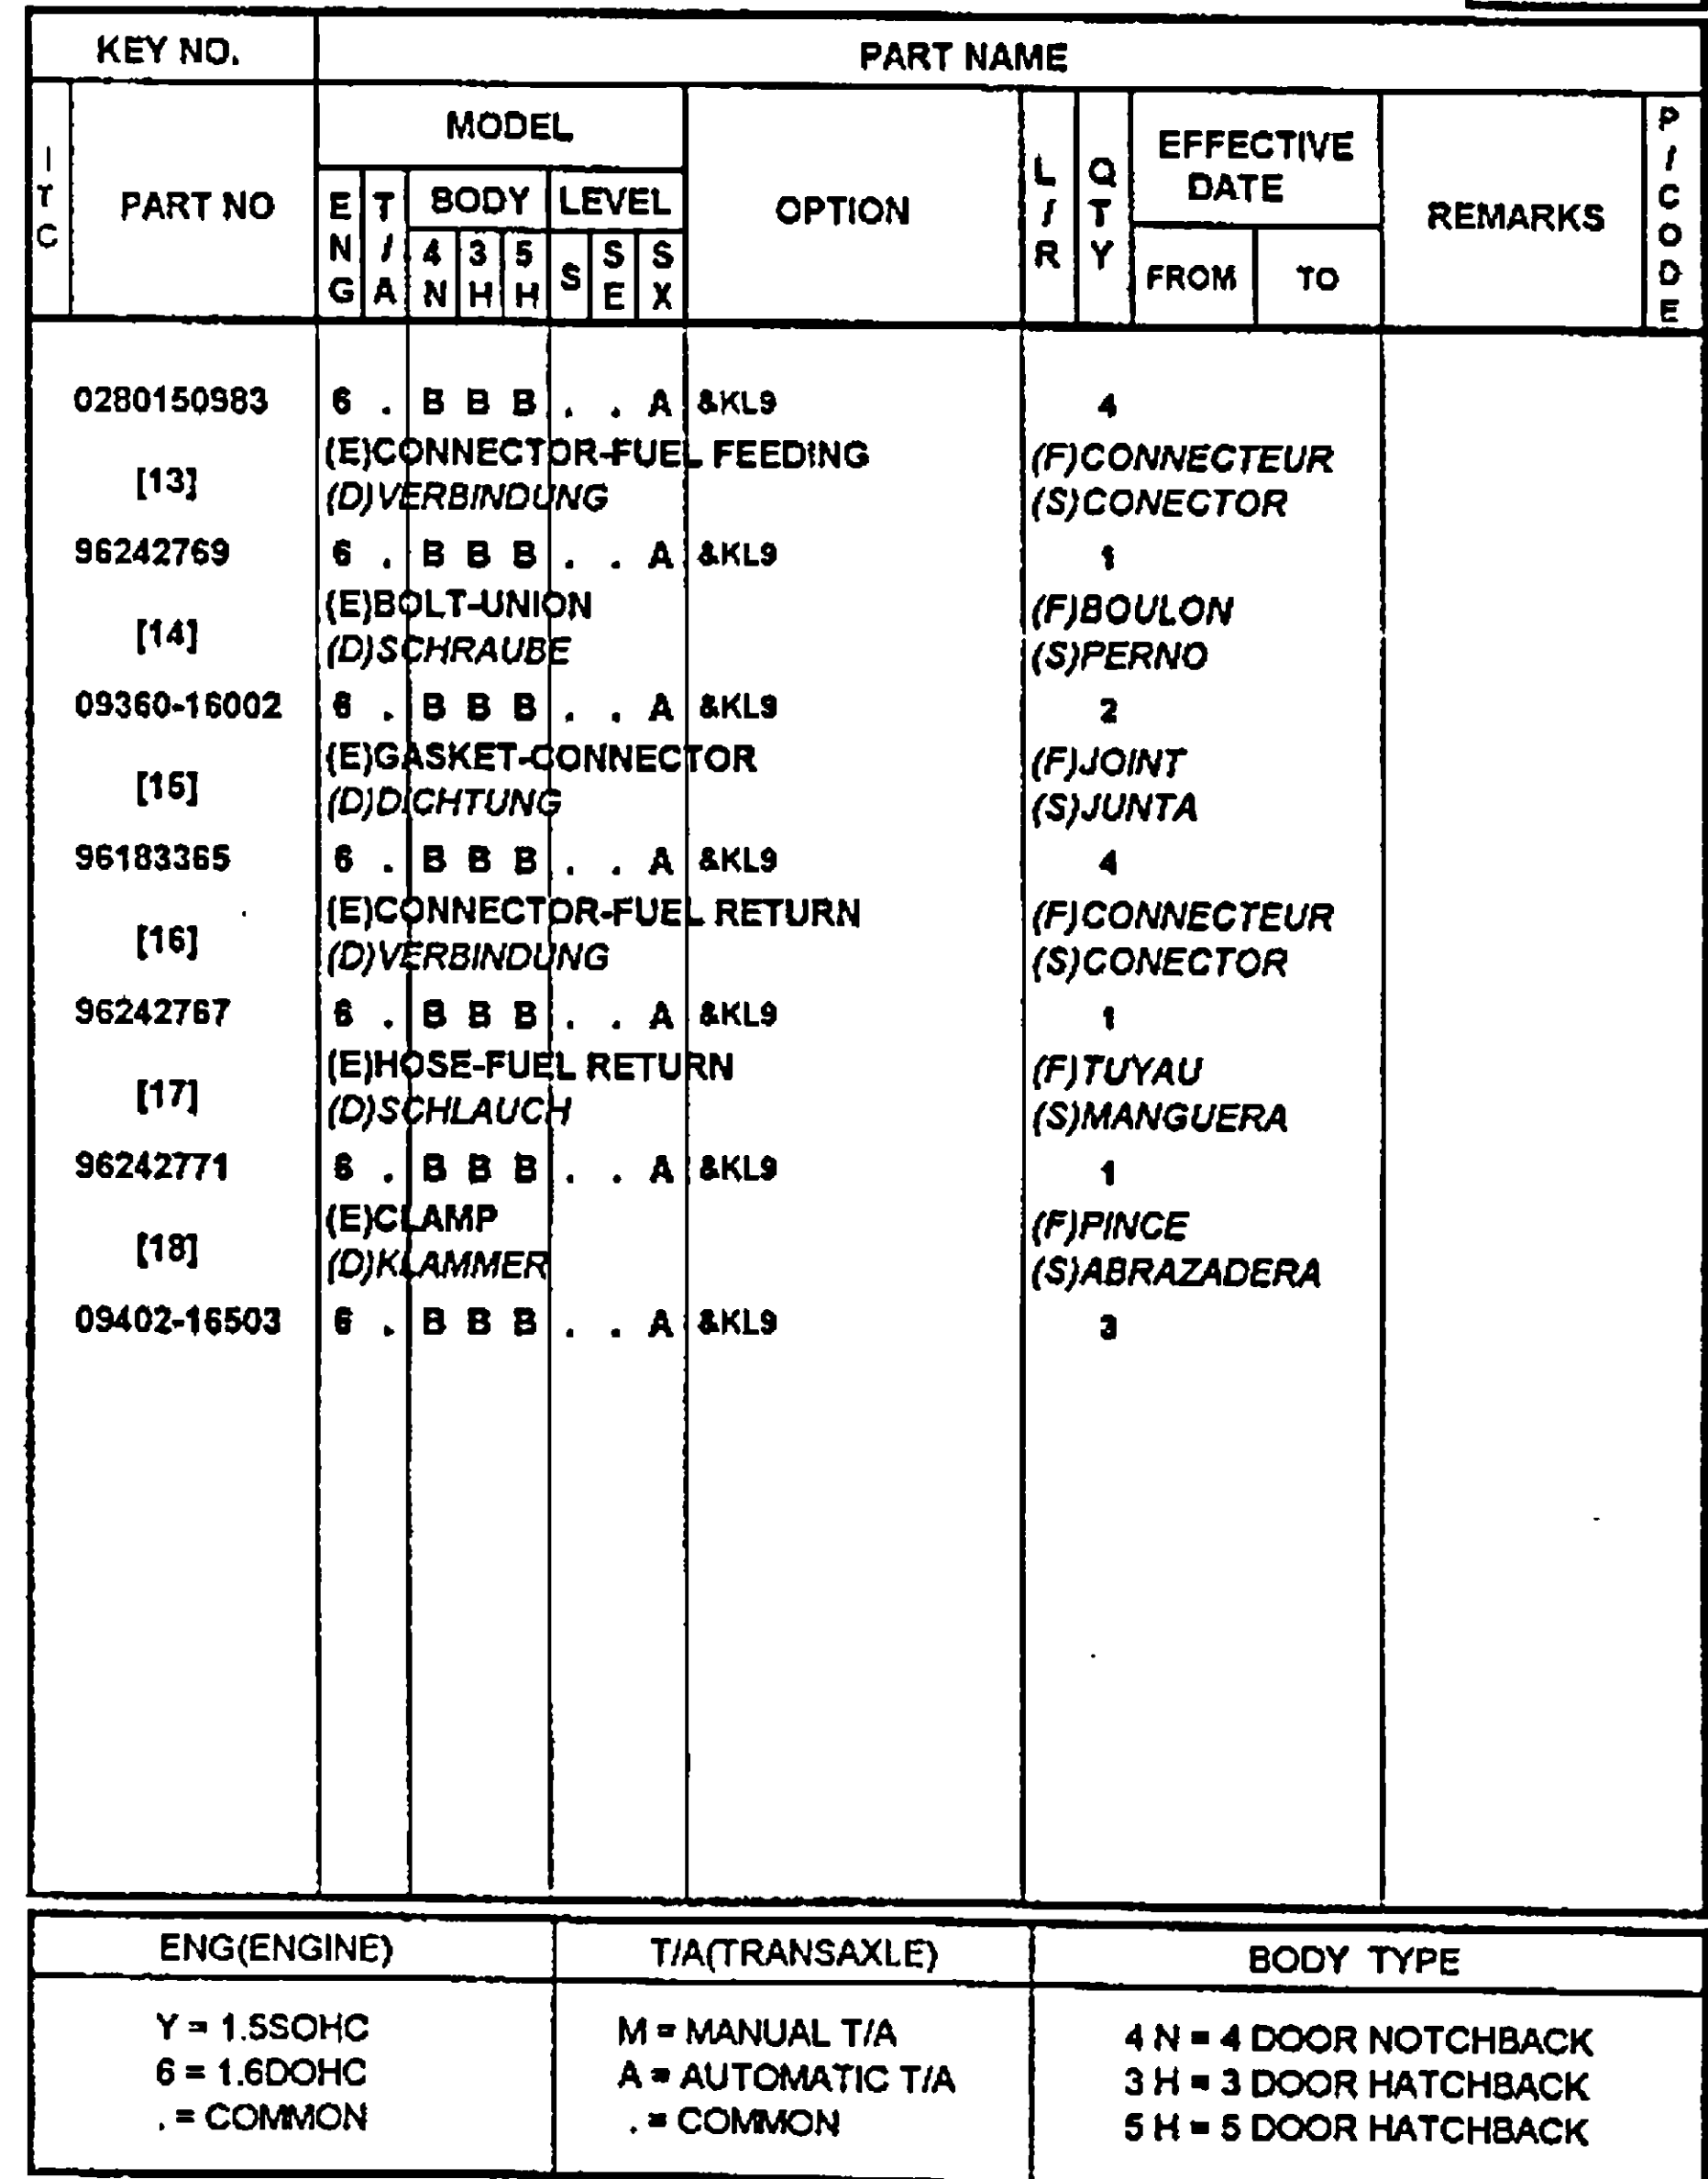


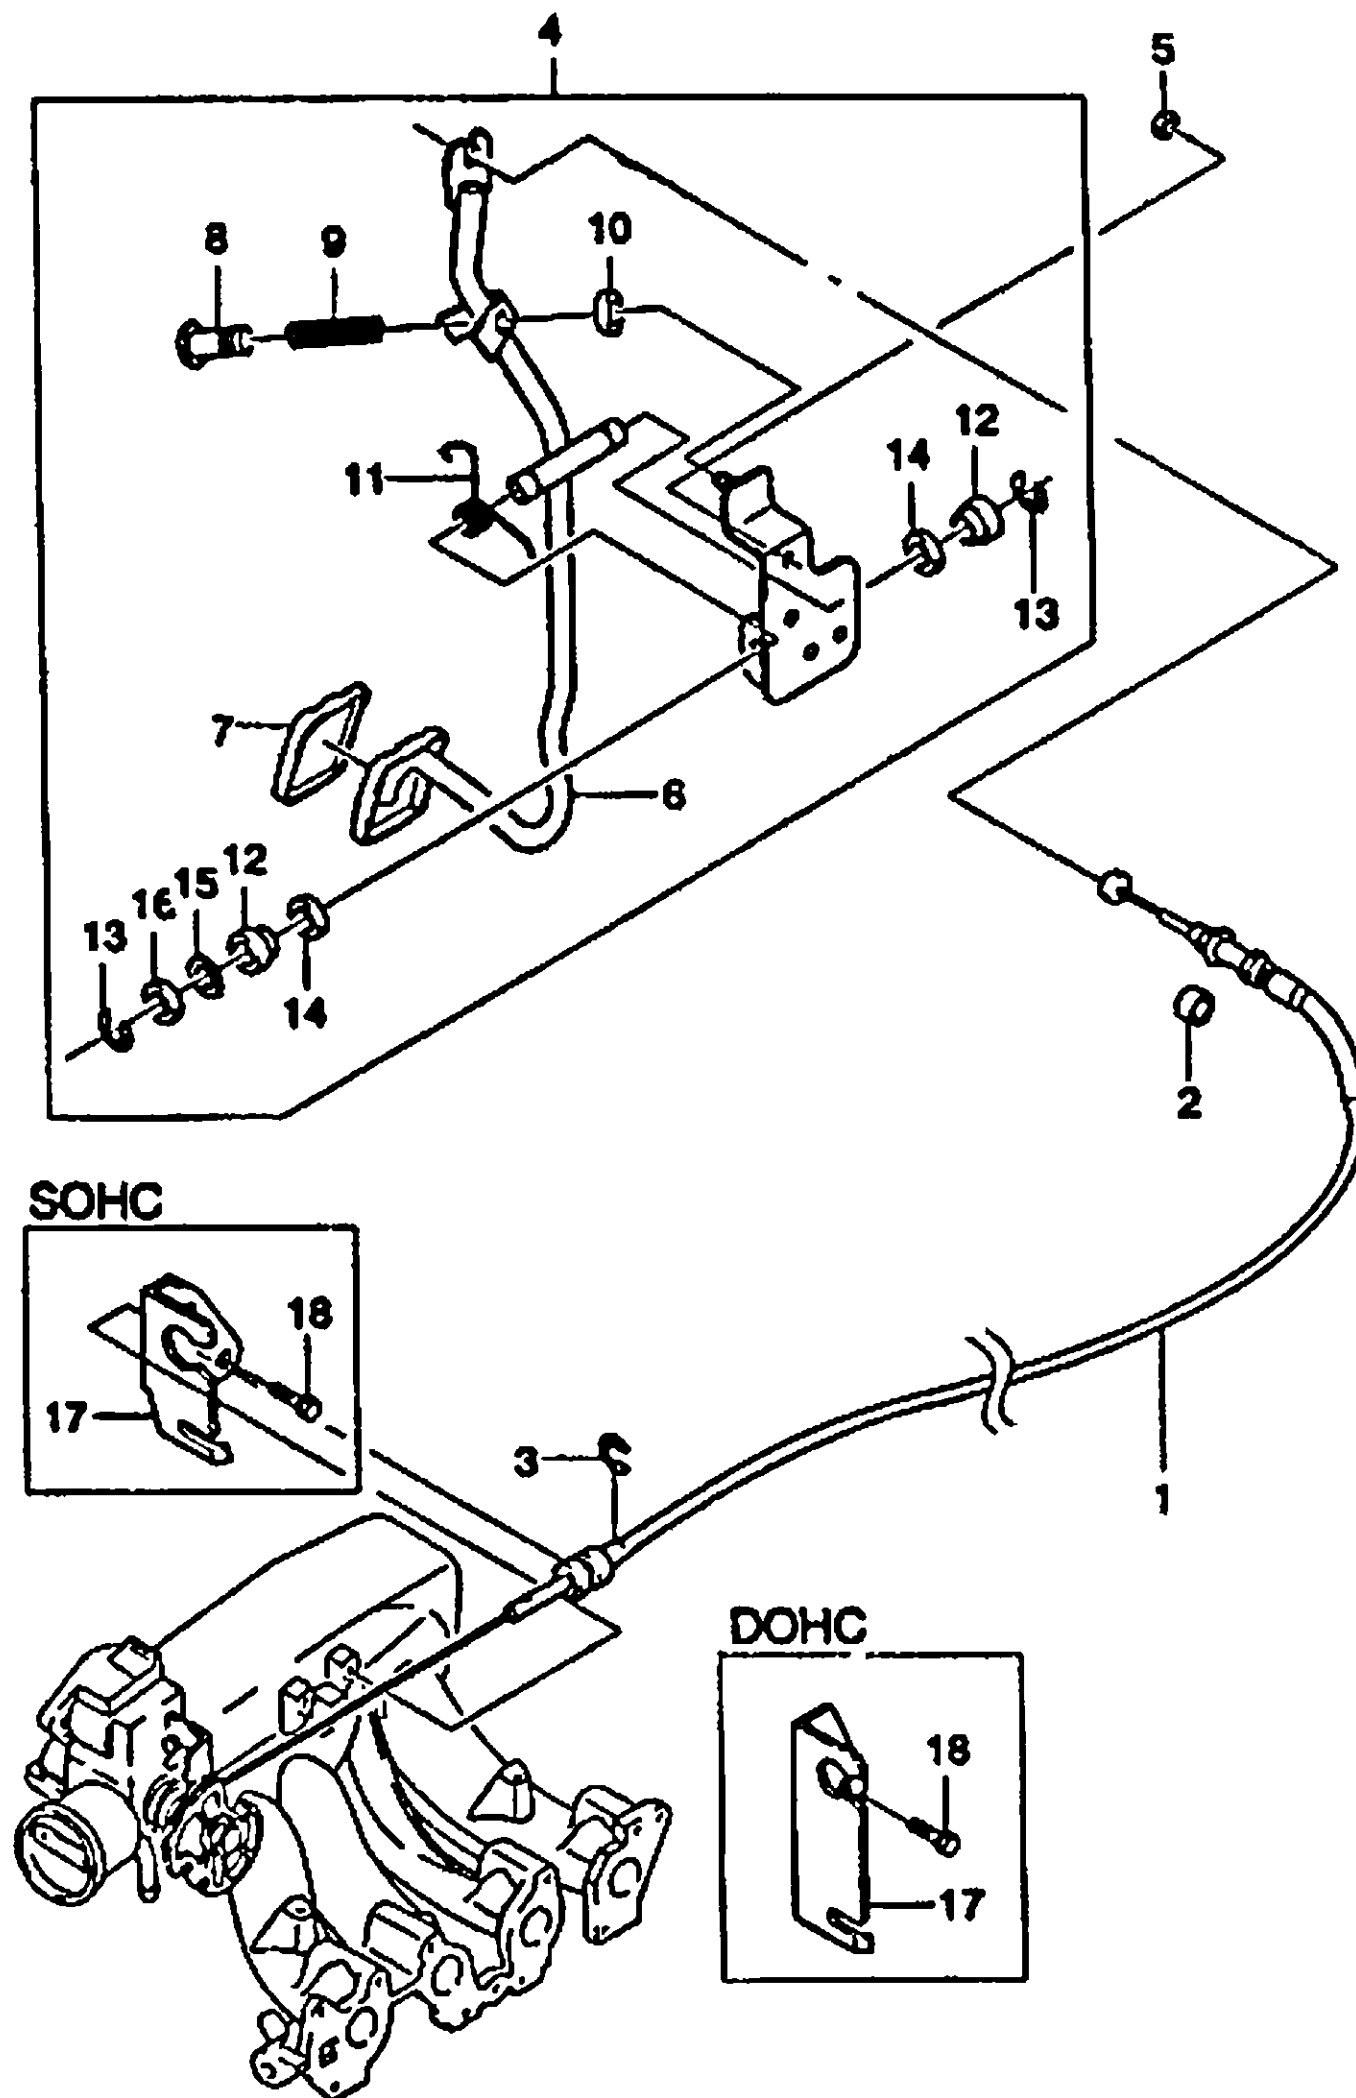


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q / T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G I N E	T R A N S A X L E	BODY			LEVEL							
				4 N H	3 H	5 H	S S				S S	S S		
		G A									FROM	TO		
	[01]	(E)CABLE A-ACCEL. CONT. BOWDEN (D)KABEL,GAS-STEUERUNG									(F)CABLE- ACCELERATEUR (S)CABLE			
	96351836	Y	.	B	B	B	S	S	S		1			ML
	96182338	6	.	B	B	B	.	.	O		1			DL
	[02]	(E)GROMMET (D)ÖSE									(F)VIROLE (S)AISLANTE			
	09308-17002	.	.	B	B	B	S	S	S		1			
	[03]	(E)RING-RETAINING E TYPE (D)RING,HALTER									(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR			
	08332-21089	.	.	B	B	B	S	S	S		1			
	[04]	(E)LEVER A-ACCELERATOR PEDAL (D)HEBEL,GASPEDAL									(F)LEVIER (S)PALANCA			
	96182335	.	.	B	B	B	S	S	S		1			AL
	[05]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA			
	09159-08003	.	.	B	B	B	S	S	S		2			
	- [06]	(E)LEVER-ACCELERATOR PEDAL (D)HEBEL,GASPEDAL									(F)LEVIER (S)PALANCA			
	96184217	.	.	B	B	B	S	S	S		1			
	[07]	(E)PAD-ACCELERATOR PEDAL (D)UNTERLAGE,GASPEDAL									(F)PATIN (S)COJIN-PEDAL			
	96184690	.	.	B	B	B	S	S	S		1			
	[08]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO			
	02116-66309	.	.	B	B	B	S	S	S		1			
	[09]	(E)SPRING (D)FEDERUNG									(F)RESSORT (S)RESORTE			
	09440-09003	.	.	B	B	B	S	S	S		1			
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

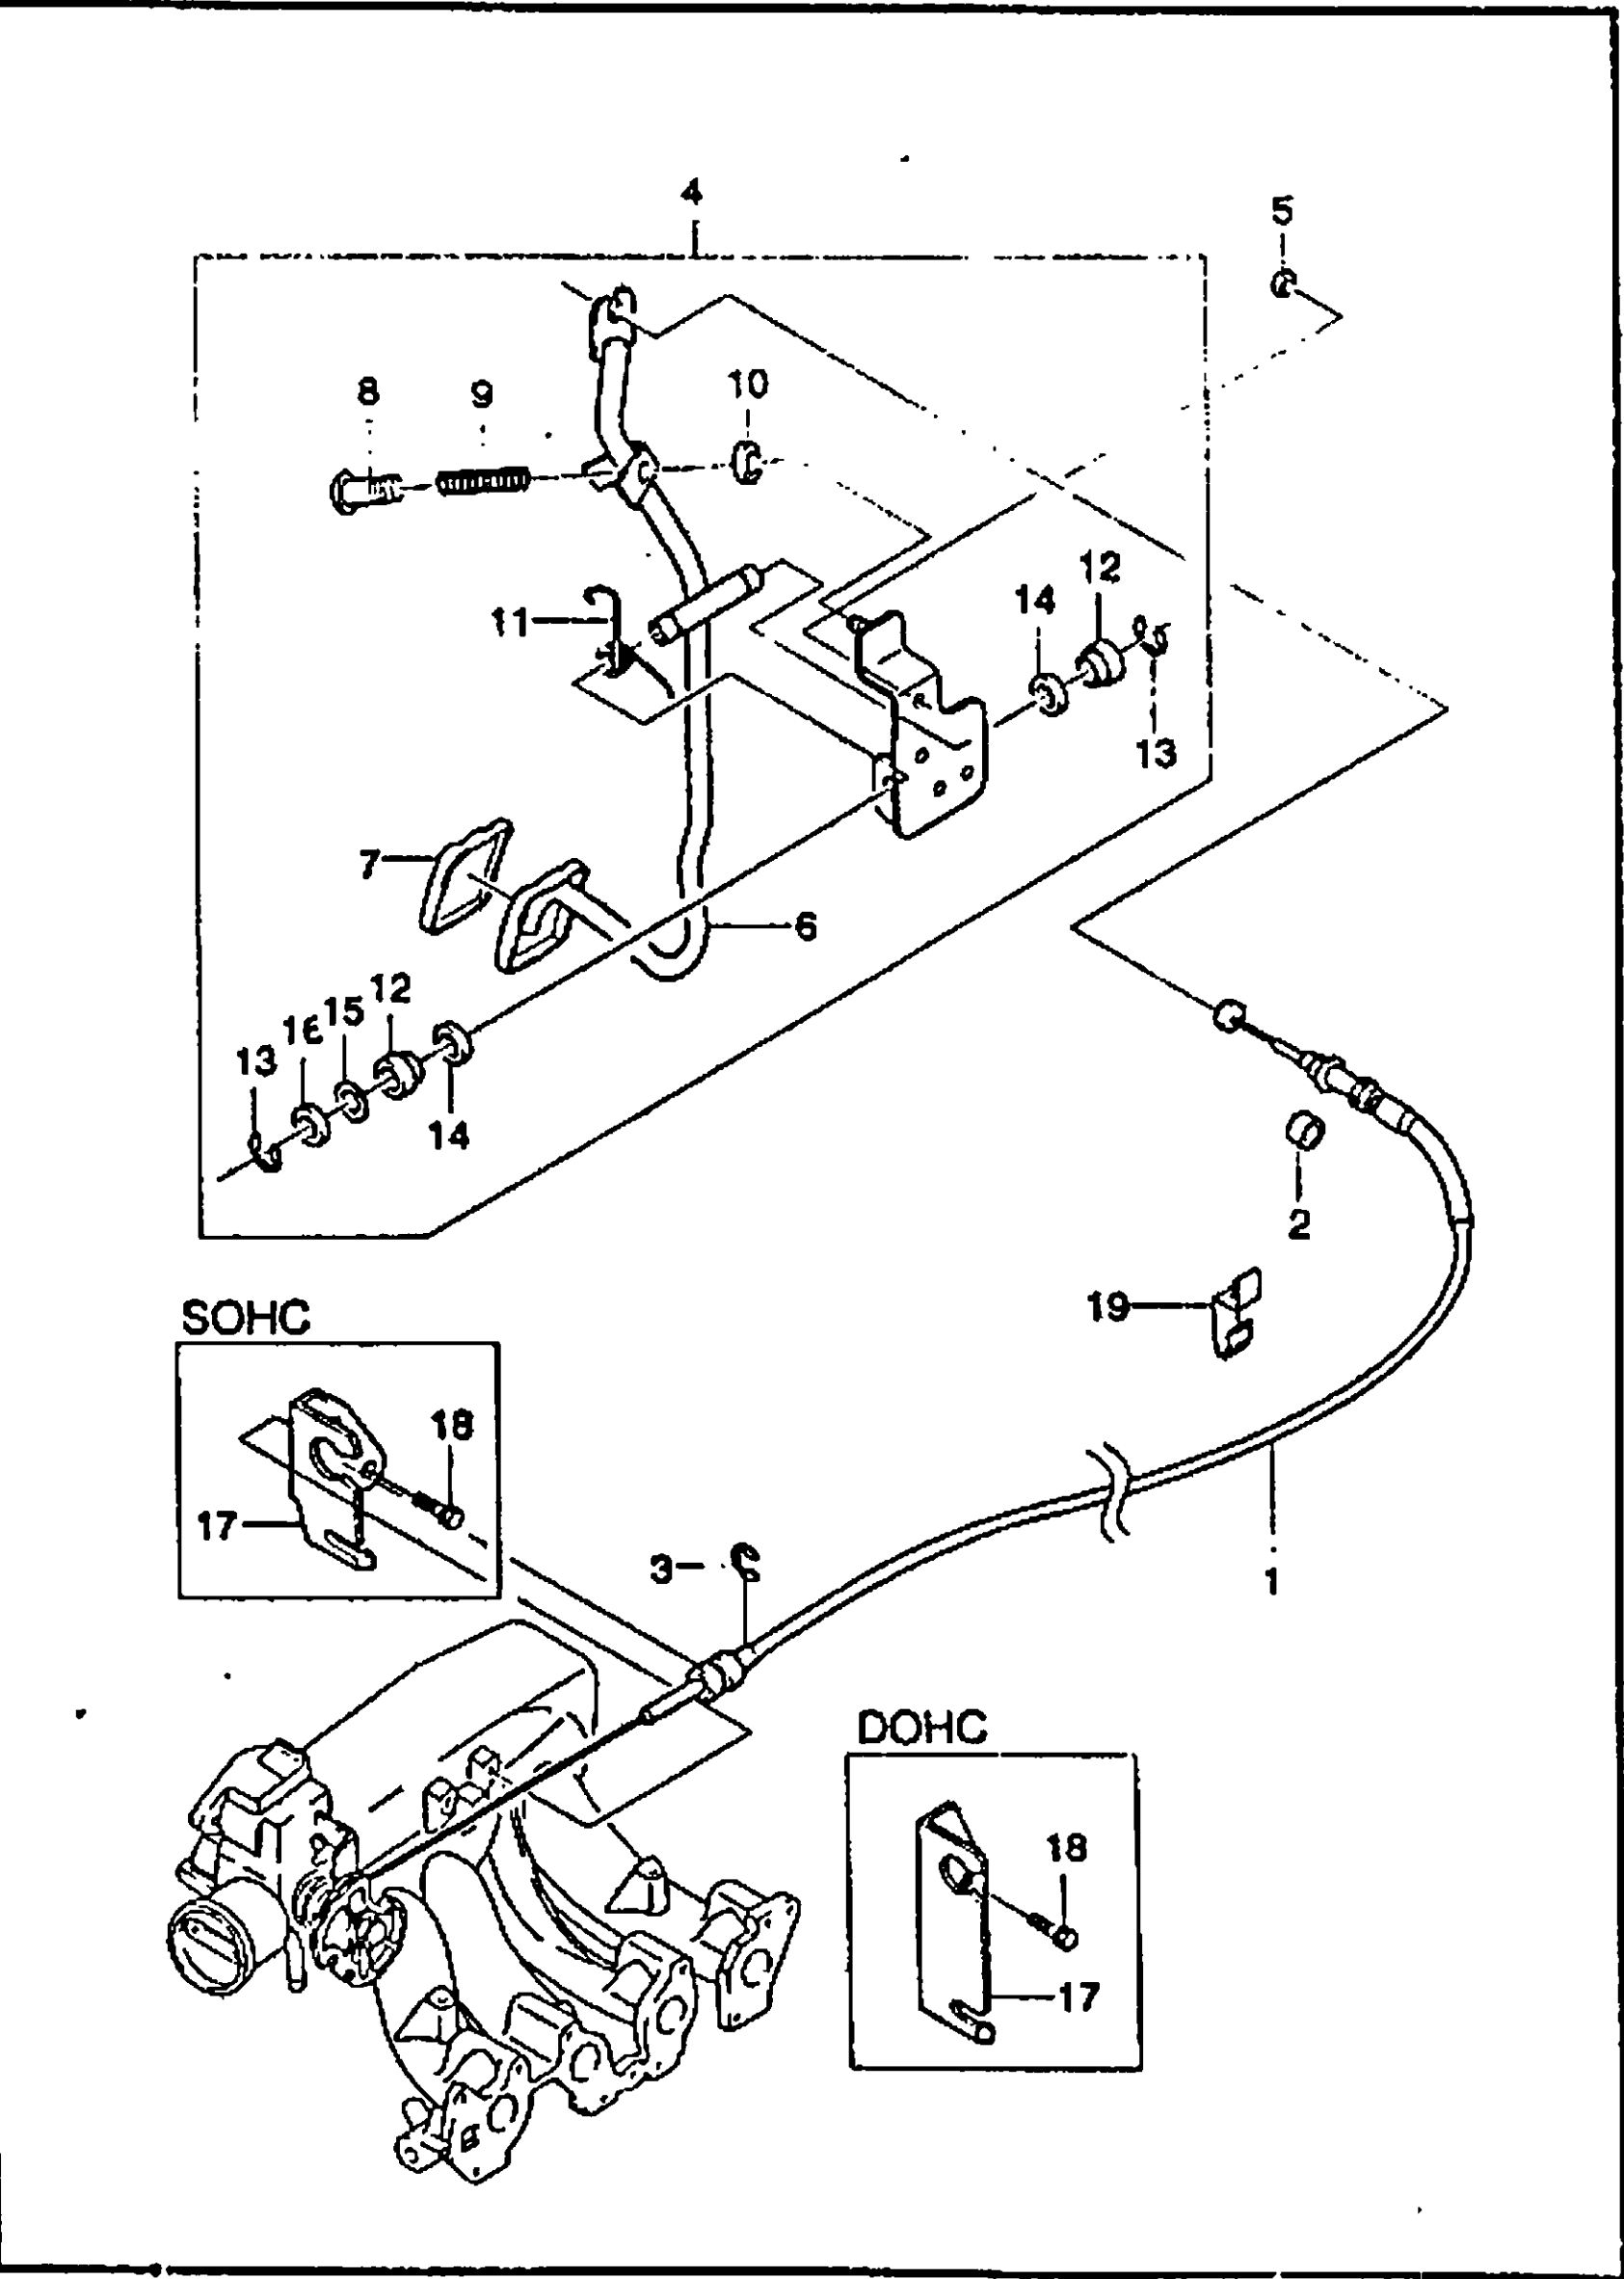

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N H	3 H H	5 S S								
	[10]	(E)BUMPER-ADJUSTING SCREW (D)STOßSCHEIBE						E TYPE			(F)PARE-CHOC-VIS DE REGLAGE (S)PARACHOQUES-TORNILLO			
09292075		.	.	B	B	B	S		S	S	1			
[11]		(E)SPRING-LEG (D)FEDERUNG,BEIN									(F)RESSORT-JAMBE (S)RESORTE-PIERNA			
90183525		.	.	B	B	B	S		S	S	1			
[12]		(E)BUSHING (D)LAGERFUTTER									(F)MANCHON (S)BUJE DE BOQUILLA			
09306-10005		.	.	B	B	B	S		S	S	2			
[13]		(E)RING-RETAINING E TYPE (D)RING,HALTER									(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR			
08332-11089		.	.	B	B	B	S		S	S	2			
[14]		(E)WASHER-PLAIN (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA			
09160-18003		.	.	B	B	B	S		S	S	2			
[15]		(E)WASHER-SPRING (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA			
09162-10001		.	.	B	B	B	S		S	S	1			
[16]		(E)WASHER-PLAIN (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA			
09160-10003		.	.	B	B	B	S		S	S	1			
[17]		(E)BRACKET-ACCEL CONTROL (D)TRÄGER,GASPEDAL									(F)SUPPORT-ACCELERATEUR (S)SOPORTE			
96184602		Y	.	B	B	B	S		S	S	1			
96351517		6	.	B	B	B	.		.	O	1			
[18]		(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO			
01107-06123		.	.	B	B	B	S	S	S	2				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

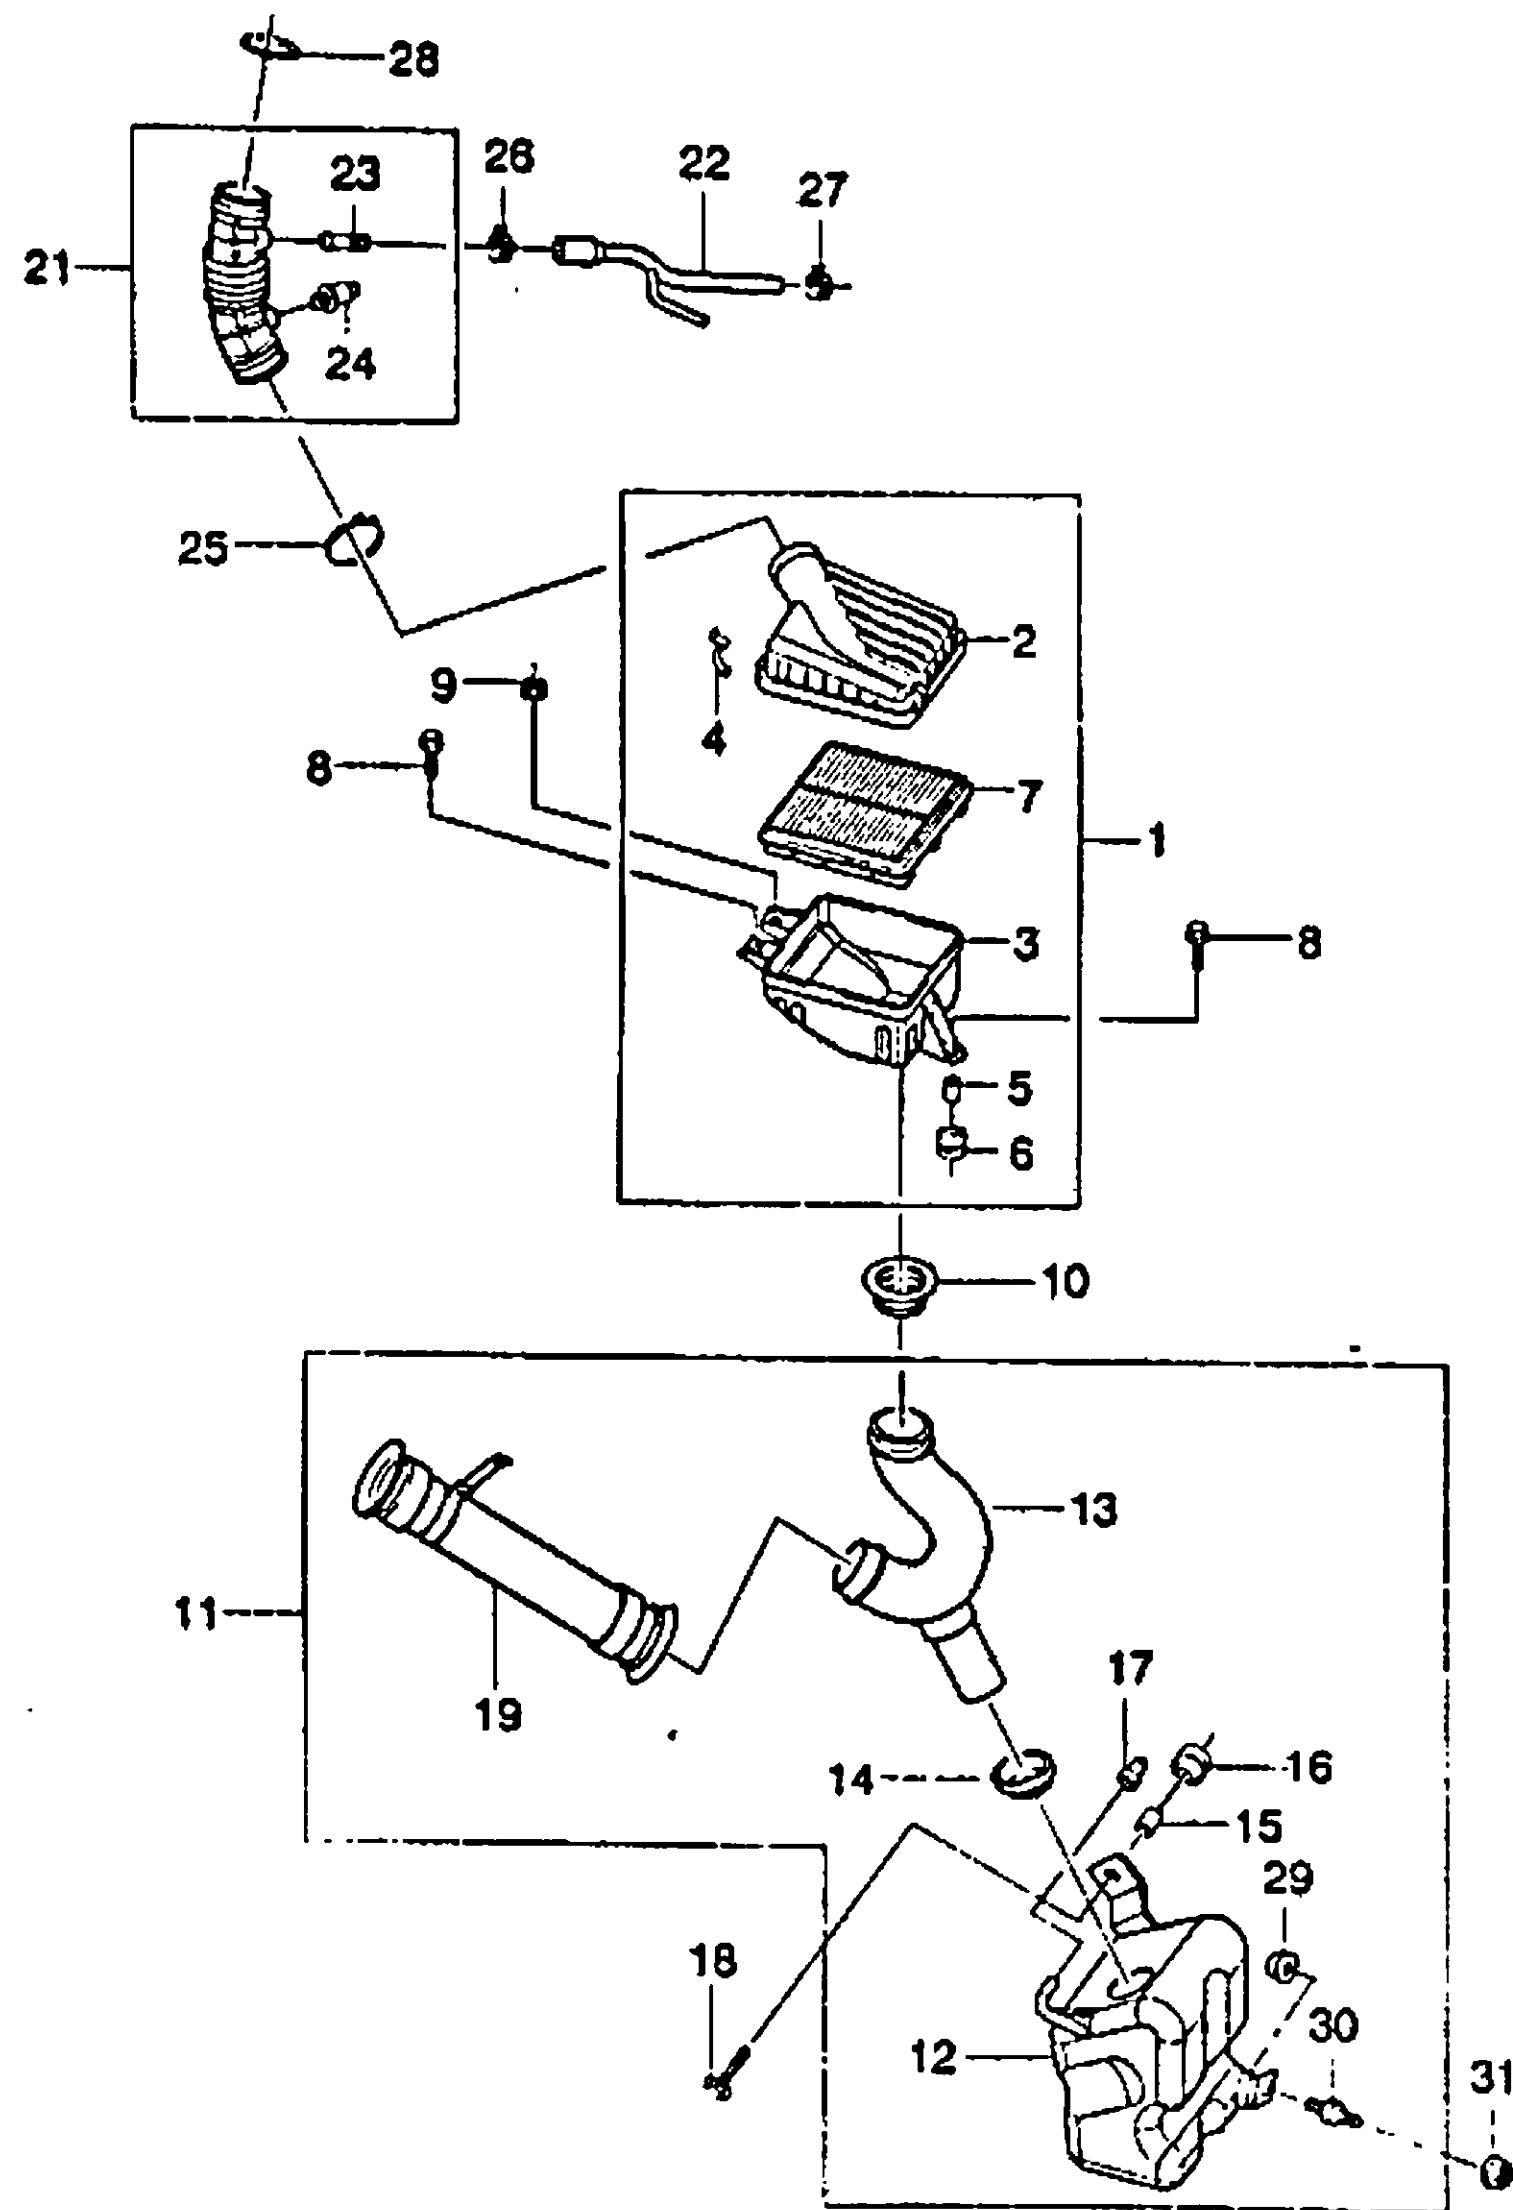


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L I T C	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S				S E	S X		
	[01] 96182219	(E)AIR CLEANER A (D)LUFTREINUGUNG	.	.	B	B	B	S	S	S		(F)PURIFICATEUR D'AIR (S)FILTRO DEL AIRE	1	
	[02] 96182231	(E)AIR CLEANER-UPPER (D)LUFTREINUGUNG OBER	.	.	B	B	B	S	S	S		(F)PURIFICATEUR D'AIR,HAUT (S)FILTRO DEL AIRE SUPERIOR	1	
	[03] 96182232	(E)AIR CLEANER-LOWER (D)LUFTREINUGUNG UNTEN	.	.	B	B	B	S	S	S		(F)PURIFICATEUR D'AIR,BAS (S)FILTRO DEL AIRE BAJO	1	
	[04] 96300903	(E)CLIP-AIR CLEANER (D)KLEMME	.	.	B	B	B	S	S	S		(F)ATTACHE (S)GRAPA	4	
	[05] 96300905	(E)SPACER-ISOLATOR (D)DistanzSTÖCK,ISOLATOR	.	.	B	B	B	S	S	S		(F)ENTRETOISE-ISOLATEUR (S)ESPACIADOR-AISLADOR	3	
	[06] 96303067	(E)ISOLATOR-AIR CLEANER (D)ISOLATOR,LUFTREINIGUNG	.	.	B	B	B	S	S	S		(F)ISOLATEUR-FILTRE A AIR (S)AISLADOR-FILTRO DEL AIRE	1	
	[07] 96182220	(E)ELEMENT A-AIR CLEANER (D)ELEMENT,LUFTREINUGUNG	.	.	B	B	B	S	S	S		(F)ELEMENT-FILTRE A AIR (S)ELEMENTO-FILTRO DEL AIRE	1	
	[08] 09116-06014	(E)BOLT (D)SCHRAUBE	.	.	B	B	B	S	S	S		(F)BOULON (S)PERNO	2	
	[09] 08361-25063	(E)NUT-HEXAGON (D)MUTTER	.	.	B	B	B	S	S	S		(F)ECROU (S)TUERCA	1	
	[10]	(E)TUBE-AIR CLEANER CONNECT (D)ROHRLEITUNG										(F)TUYAU OU TUBE (S)TUBO		
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

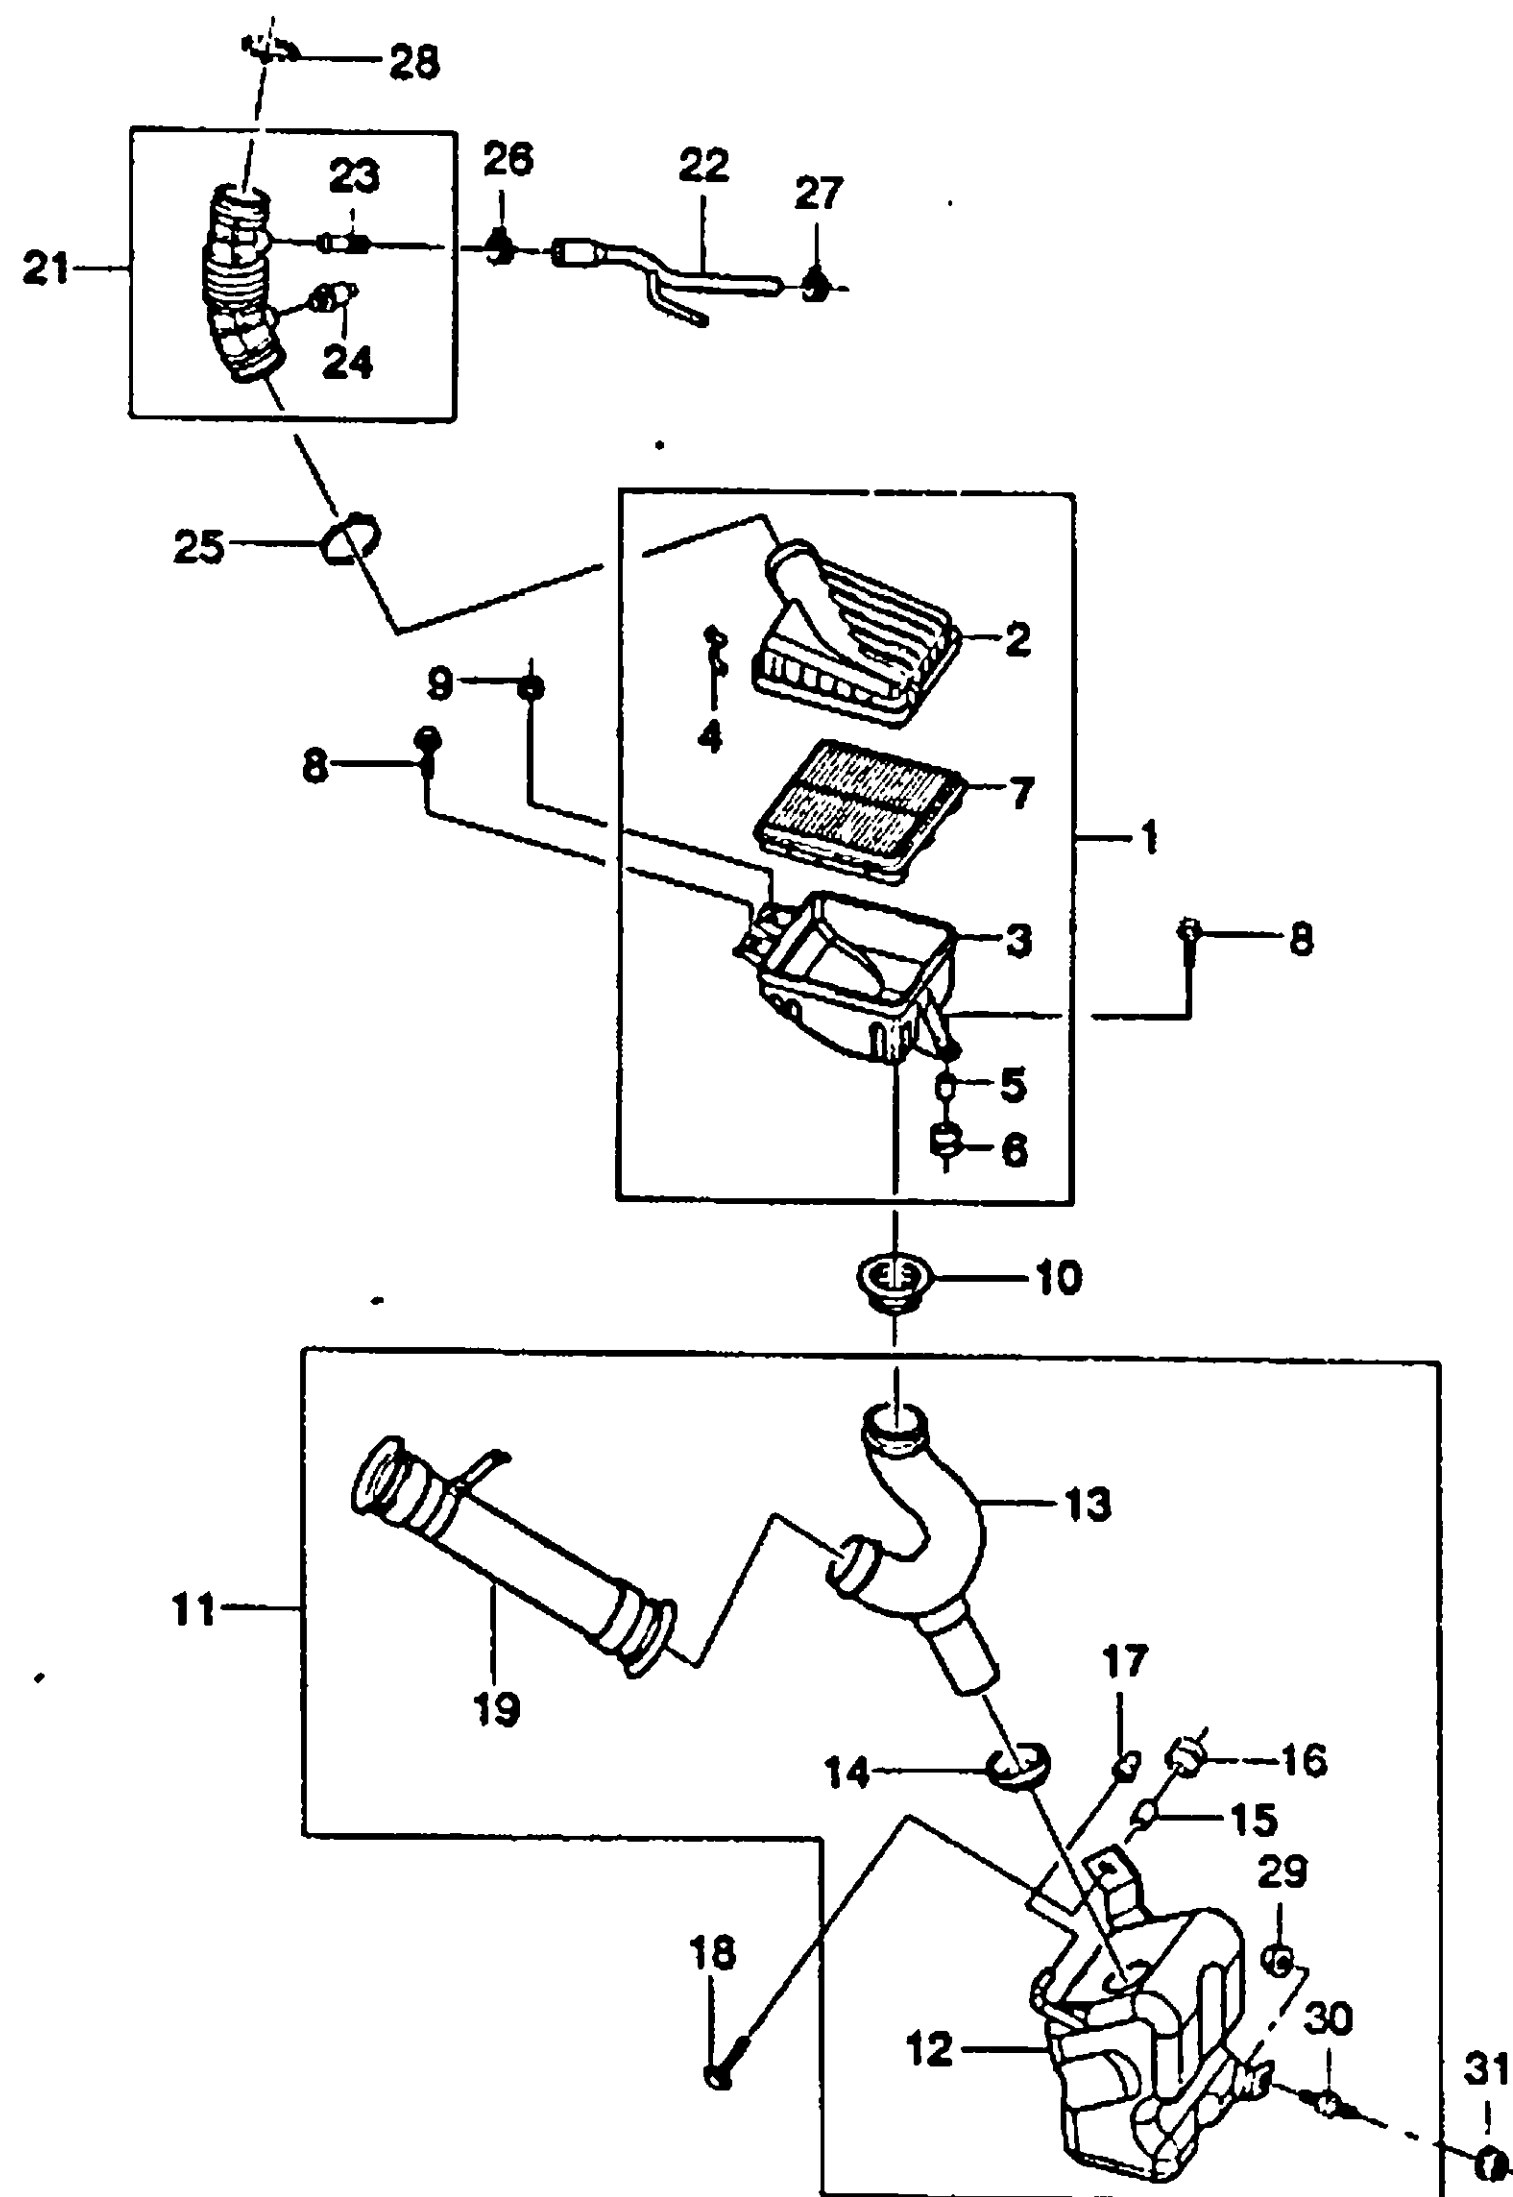

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T A	BODY			LEVEL							
				4 N	3 H	6 H	S S				S S	S X		
	96182223	.	.	B	B	B	S	S	S		1			
	[11]	(E)RESONATOR A								(F)RESONATEUR				
		(D)RESONATOR								(S)RESONADOR				
	96352224	.	.	B	B	B	S	S	S		1	970520		
N	96352243	.	.	B	B	B	S	S	S		1	970520		
	[12]	(E)RESONATOR								(F)RESONATEUR				
		(D)RESONATOR								(S)RESONADOR				
	96352026	.	.	B	B	B	S	S	S		1			
	[13]	(E)DUCT-AIR INLET								(F)CONDUIT-ENTREE D'AIR				
		(D)SCHACHT LUFTEINLAß								(S)CONDUCTO-ENTRADA DE AIRE				
	96182233	.	.	B	B	B	S	S	S		1			
	[14]	(E)SEAL-RESONATOR								(F)JOINT D'ETANCHEITE				
		(D)DICHTUNG								(S)SELLO				
	96181265	.	.	B	B	B	S	S	S		1			
	[15]	(E)SPACER-ISOLATOR								(F)ENTRETOISE-ISOLATEUR				
		(D)DISTANZSTÜCK,ISOLATOR								(S)ESPACIADOR-AISLADOR				
	96300905	.	.	B	B	B	S	S	S		1			
	[16]	(E)ISOLATOR-AIR CLEANER								(F)ISOLATEUR-FILTRE A AIR				
		(D)ISOLATOR,LUFTREINIGUNG								(S)AISLADOR-FILTRO DEL AIRE				
	96300904	.	.	B	B	B	S	S	S		1			
	[17]	(E)ISOLATOR-INTAKE								(F)ISOLATEUR				
		(D)ISOLATOR								(S)AISLADOR				
	96351744	.	.	B	B	B	S	S	S		1			
	[18]	(E)BOLT								(F)BOULON				
		(D)SCHRAUBE								(S)PERNO				
	09116-06014	.	.	B	B	B	S	S	S		1			
	[19]	(E)HOSE A-AIR INLET								(F)TUYAU-ENTREE D'AIR				
		(D)SCHACHT LUFTEINLAß								(S)MANGUERA-ENTRADA DE AIRE				
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

2410 AIR INTAKE SYSTEM


3K13

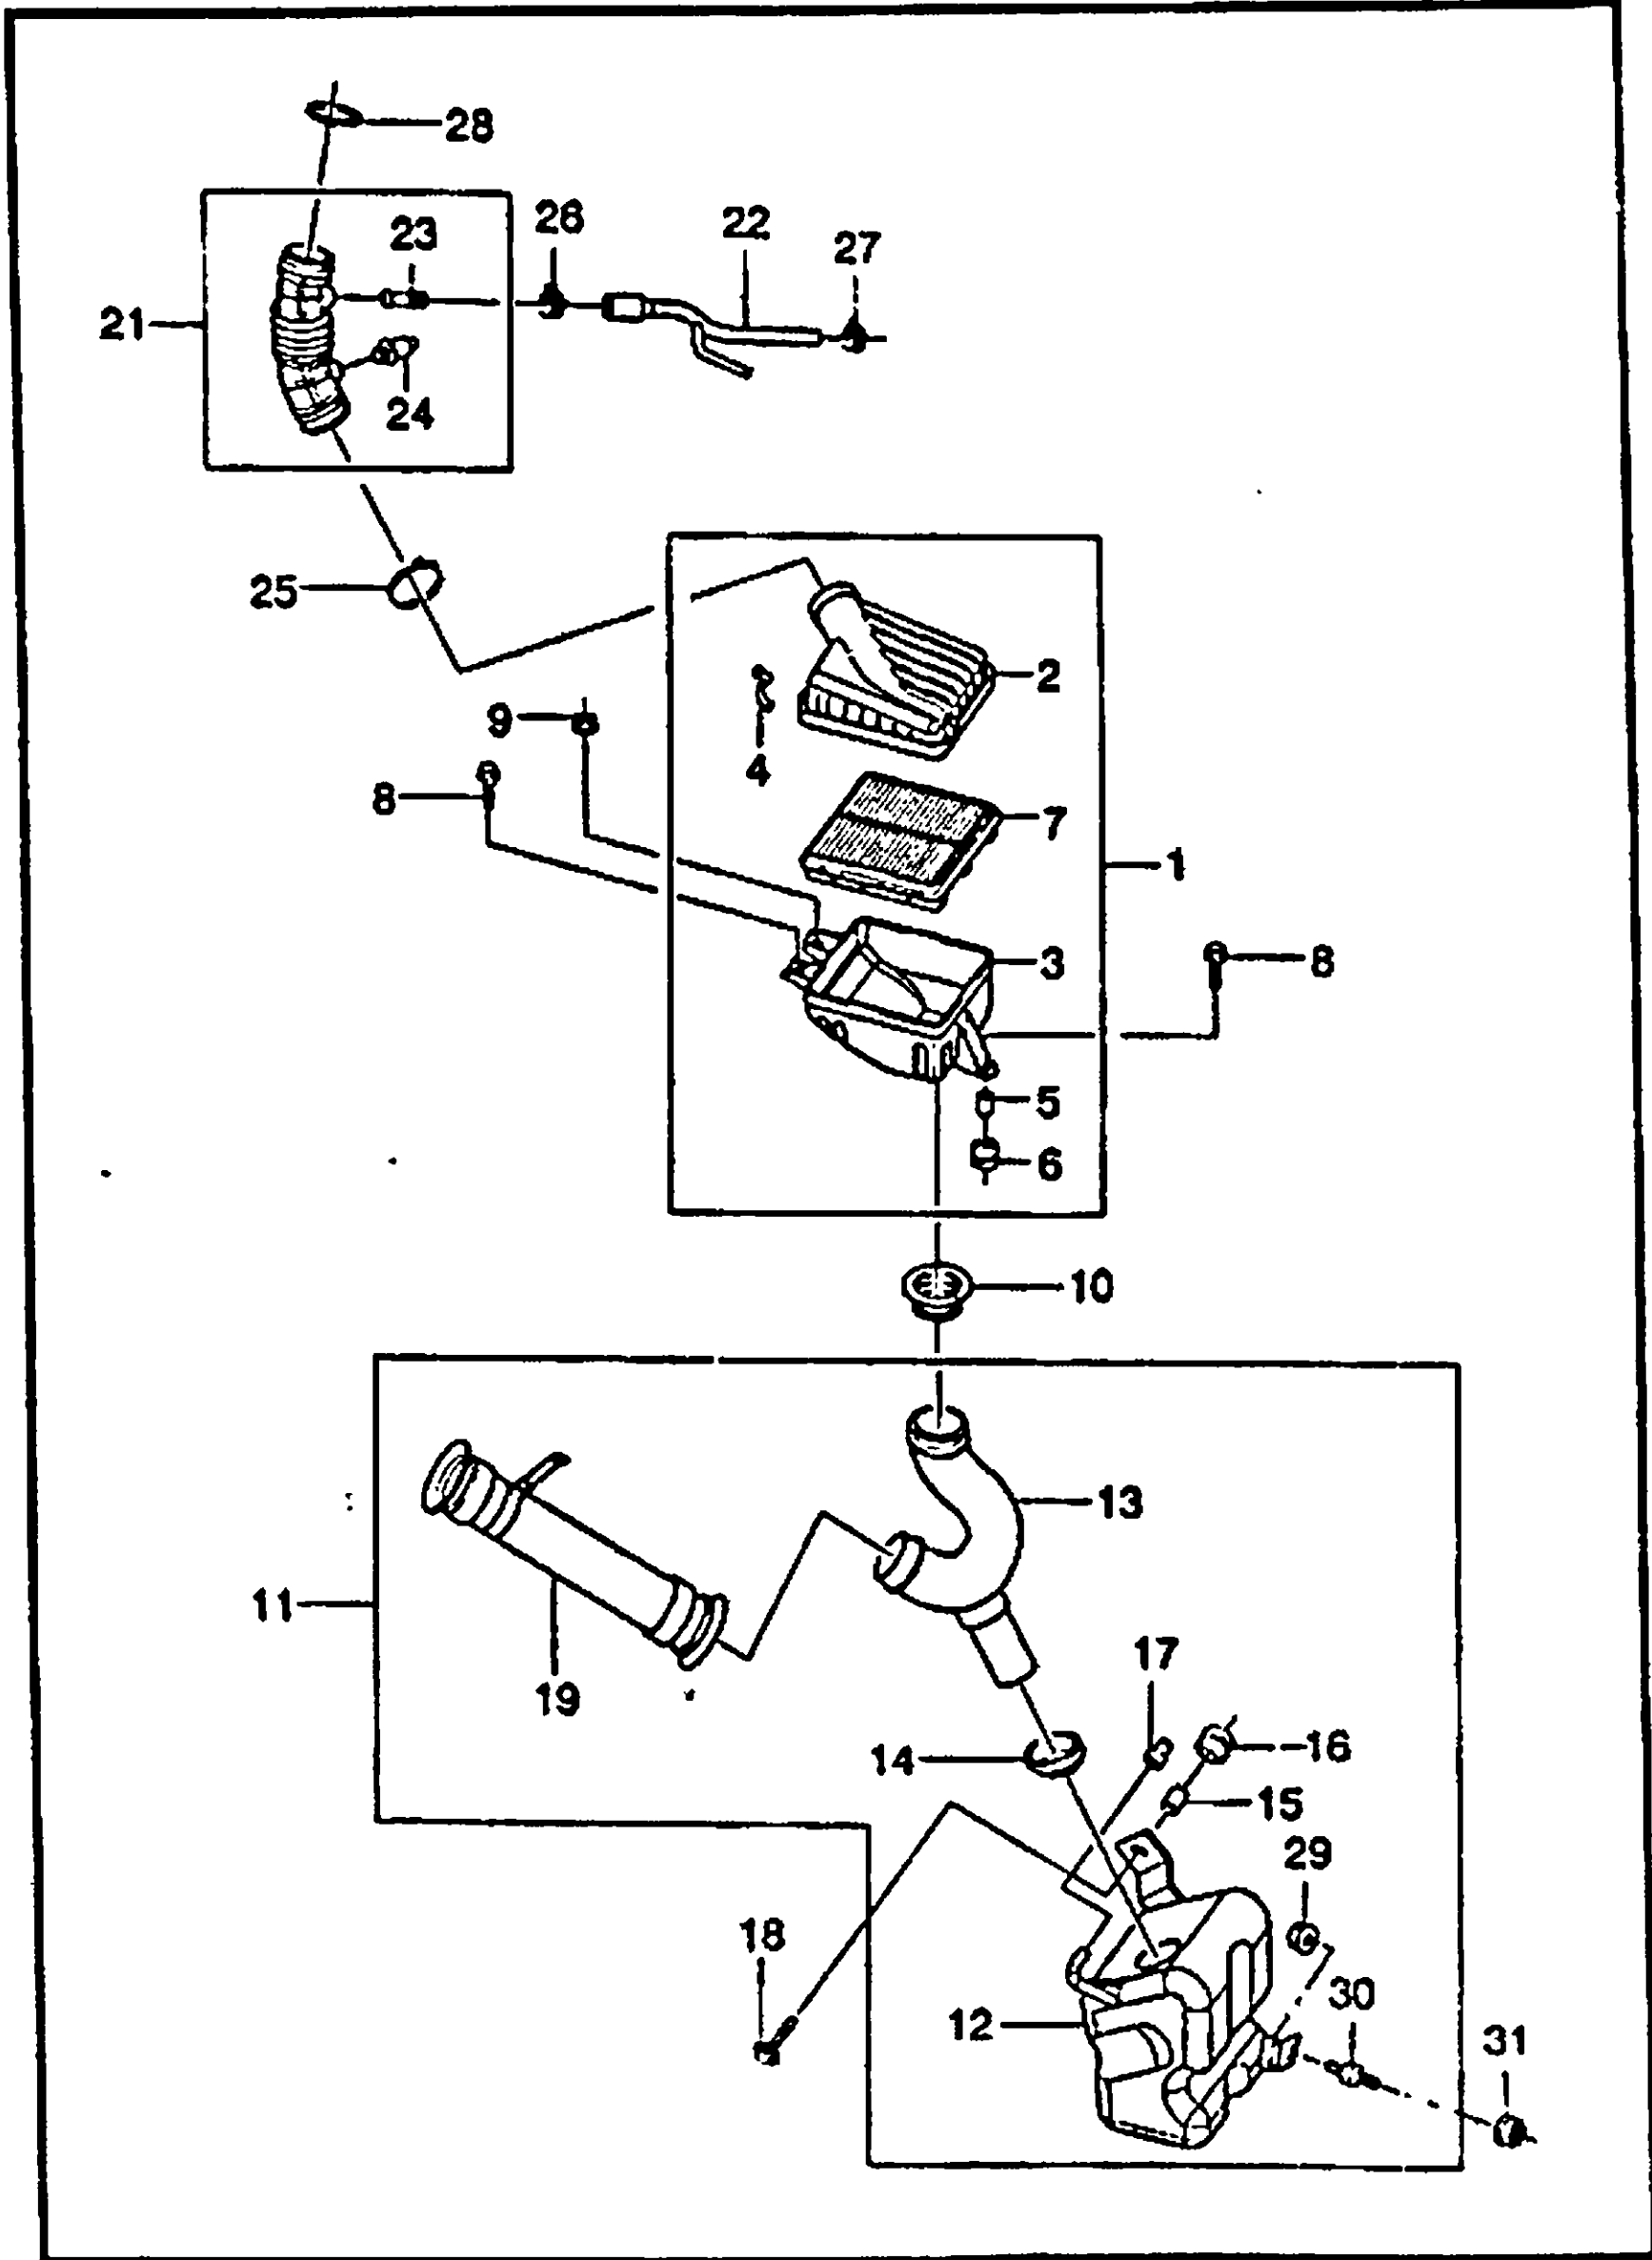

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / Q T Y R	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G A	T / N G	BODY			LEVEL			FROM	TO				
				4 N H	3 H	5 H	S S							S S	S S
	96352183	.	.	B	B	B	S	S	S	1	970520				
N	96352225	.	.	B	B	B	S	S	S	1	970520				
	[21]	(E)HOSE A-AIR OUTLET (D)SCHLAUCH								(F)TUYAU (S)MANGUERA					
	96182227	Y	.	B	B	B	S	S	S	1					
	96182228	6	.	B	B	B	.	.	O	1					
	[22]	(E)HOSE-ENGINE VENTILATION (D)SCHLAUCH, VENTILATOR								(F)TUYAU-VENTILATION (S)MANGUERA-VENTILACION					
	96351640	Y	.	B	B	B	S	S	S	1					
	96351636	6	.	B	B	B	.	.	O	1					
	[23]	(E)CONNECTOR-P.C.V HOSE (D)VERBINDUNG								(F)CONNECTEUR (S)CONECTOR					
	96184450	Y	.	B	B	B	S	S	S	1					
	96351115	6	.	B	B	B	.	.	O	1					
	[24]	(E)SENSOR A-AIR TEMPERATURE (D)SENSOR, TEMPERATUR								(F)DETECTEUR-TEMPERATURE (S)SENSOR-TEMPERATURA					
	96183228	.	.	B	B	B	S	S	S	1					
	[25]	(E)CLAMP (D)KLAMMER								(F)PINCE (S)ABRAZADERA					
	09402-80501	.	.	B	B	B	S	S	S	1					
	[26]	(E)CLIP (D)KLEMME								(F)ATTACHE (S)GRAPA					
	09401-20401	Y	.	B	B	B	S	S	S	1					
	09401-22401	6	.	B	B	B	.	.	O	1					
	[27]	(E)CLIP (D)KLEMME								(F)ATTACHE (S)GRAPA					
	09401-27403	Y	.	B	B	B	S	S	S	1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							


2410 AIR INTAKE SYSTEM

3L13

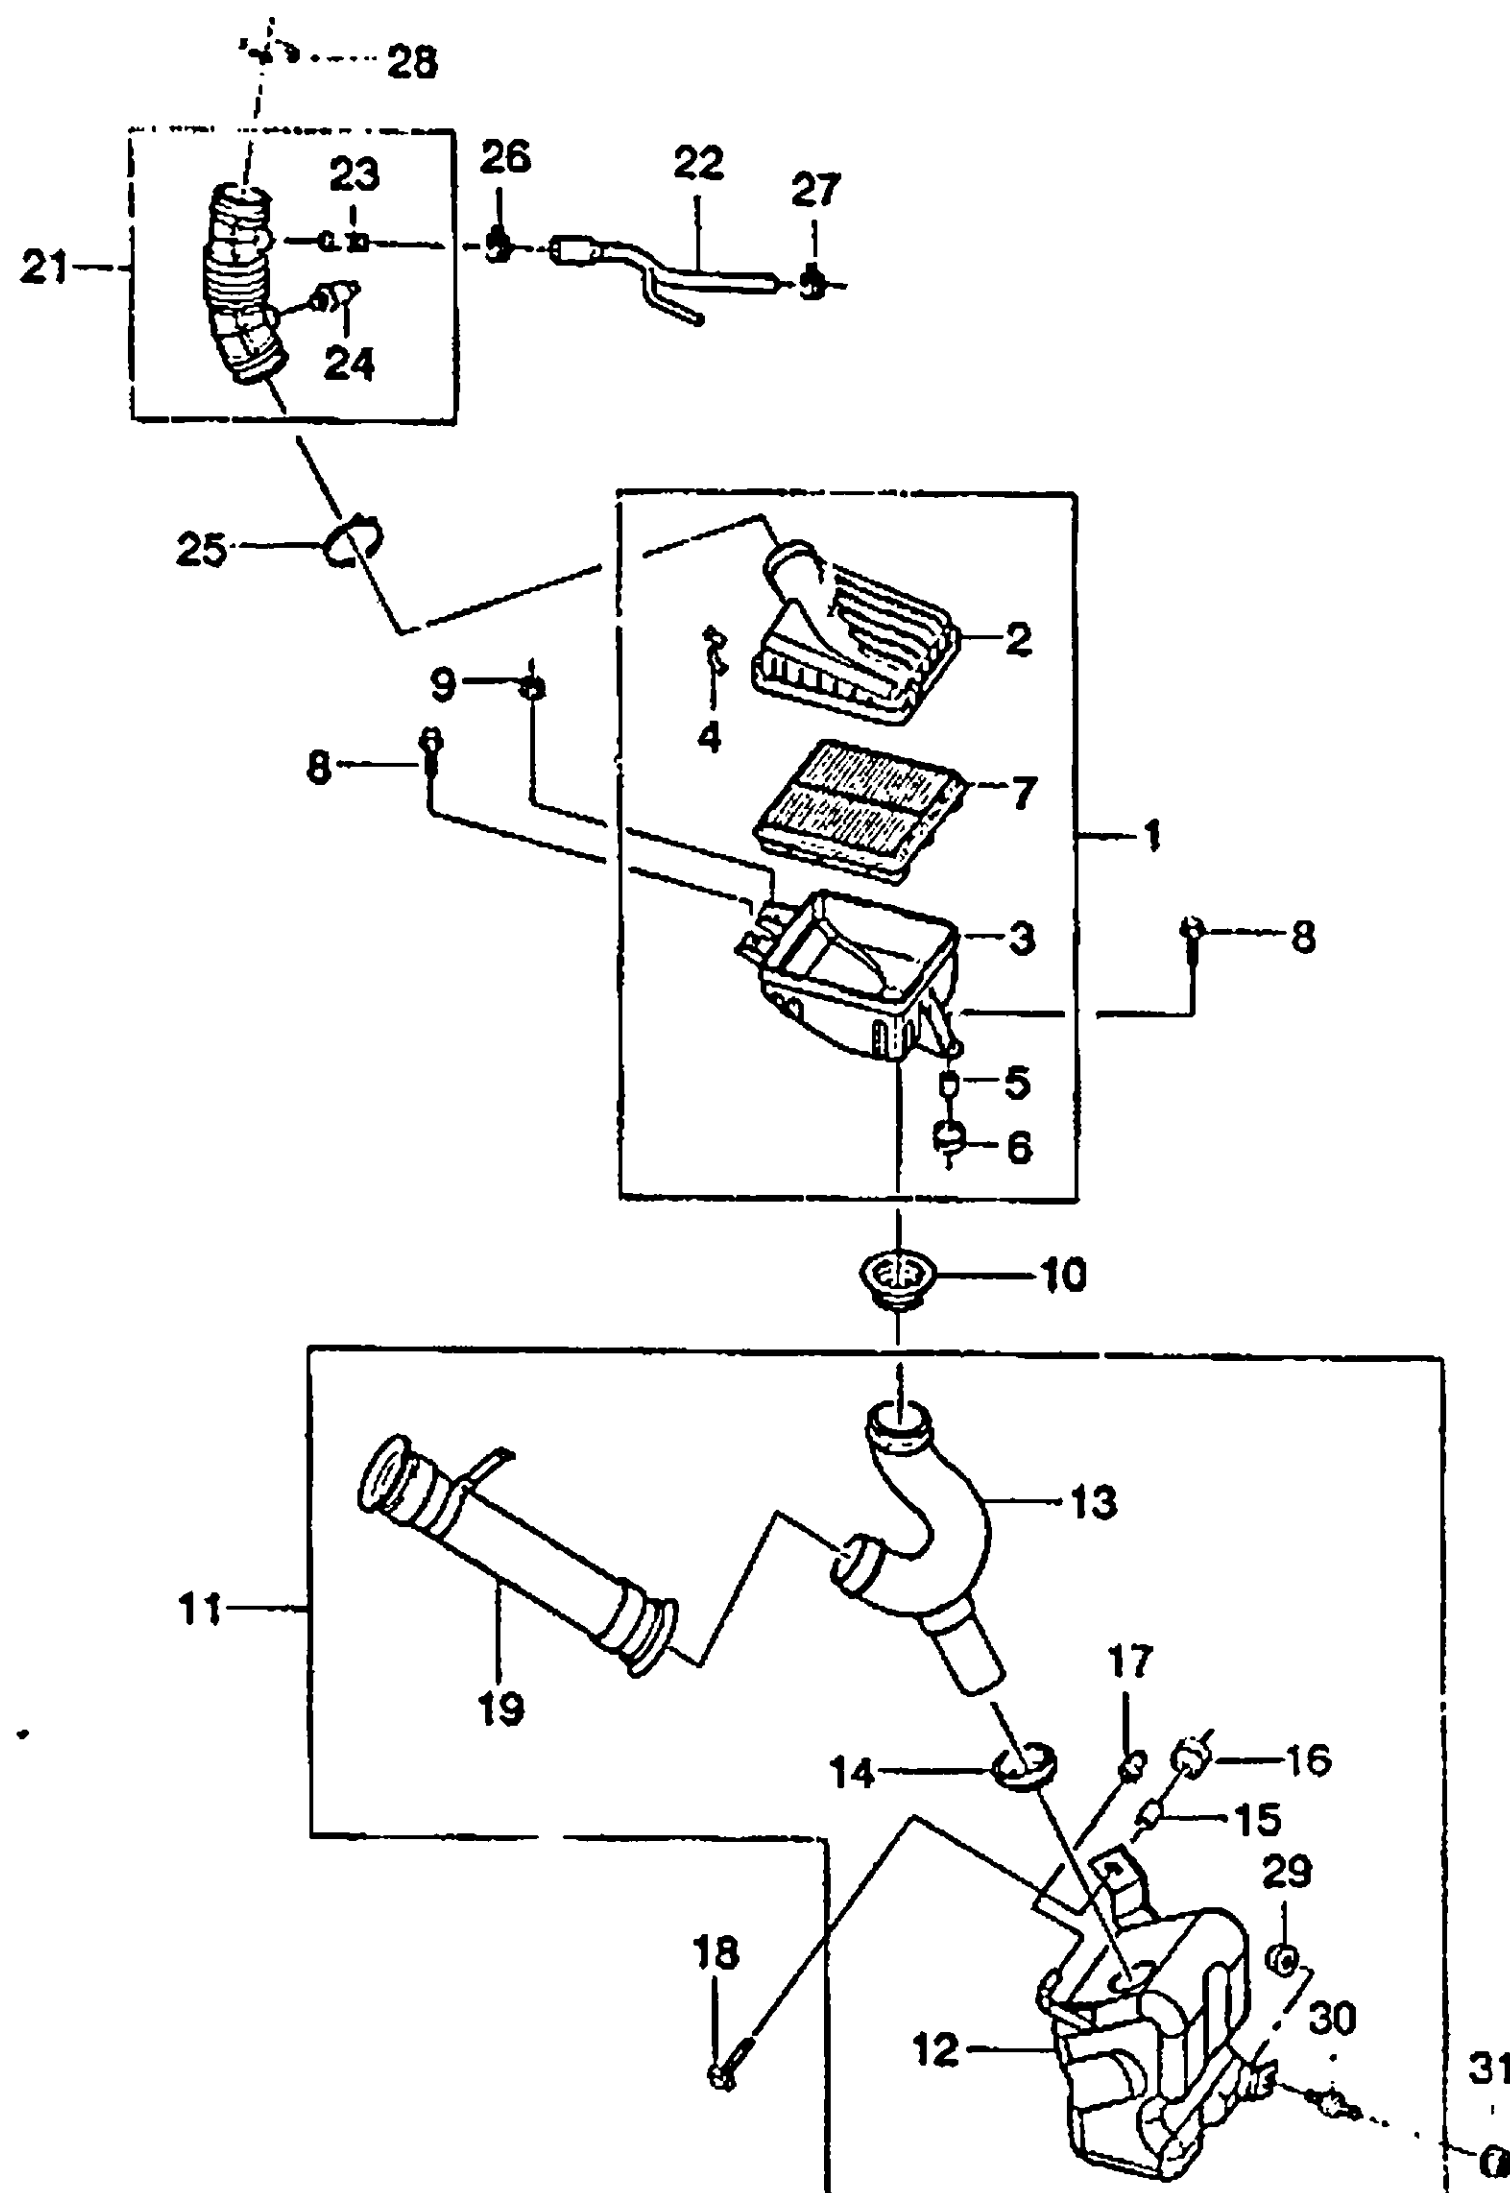


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	09401-22401 [28]	6	.	B	B	B	.	.	O		1				
		(E)CLAMP									(F)PINÇE				
		(D)KLAMMER									(S)ABRAZADERA				
	09412-70501 [29]	.	.	B	B	B	S	S	S		1				
		(E)NUT									(F)ECROU				
		(D)MUTTER									(S)TUERCA				
	09159-06001	.	.	B	B	B	S	S	S		1	970901			
	O 09159-06011 [30]	.	.	B	B	B	S	S	S		1	970901			
		(E)BUMPER									(F)PARE-CHOC				
		(D)STOßSTANGE									(S)PARACHOQUES				
	96144011 [31]	.	.	B	B	B	S	S	S		1				
		(E)NUT									(F)ECROU				
		(D)MUTTER									(S)TUERCA				
	09159-06001	.	.	B	B	B	S	S	S		1	970901			
	O 09159-06011	.	.	B	B	B	S	S	S		1	970901			


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

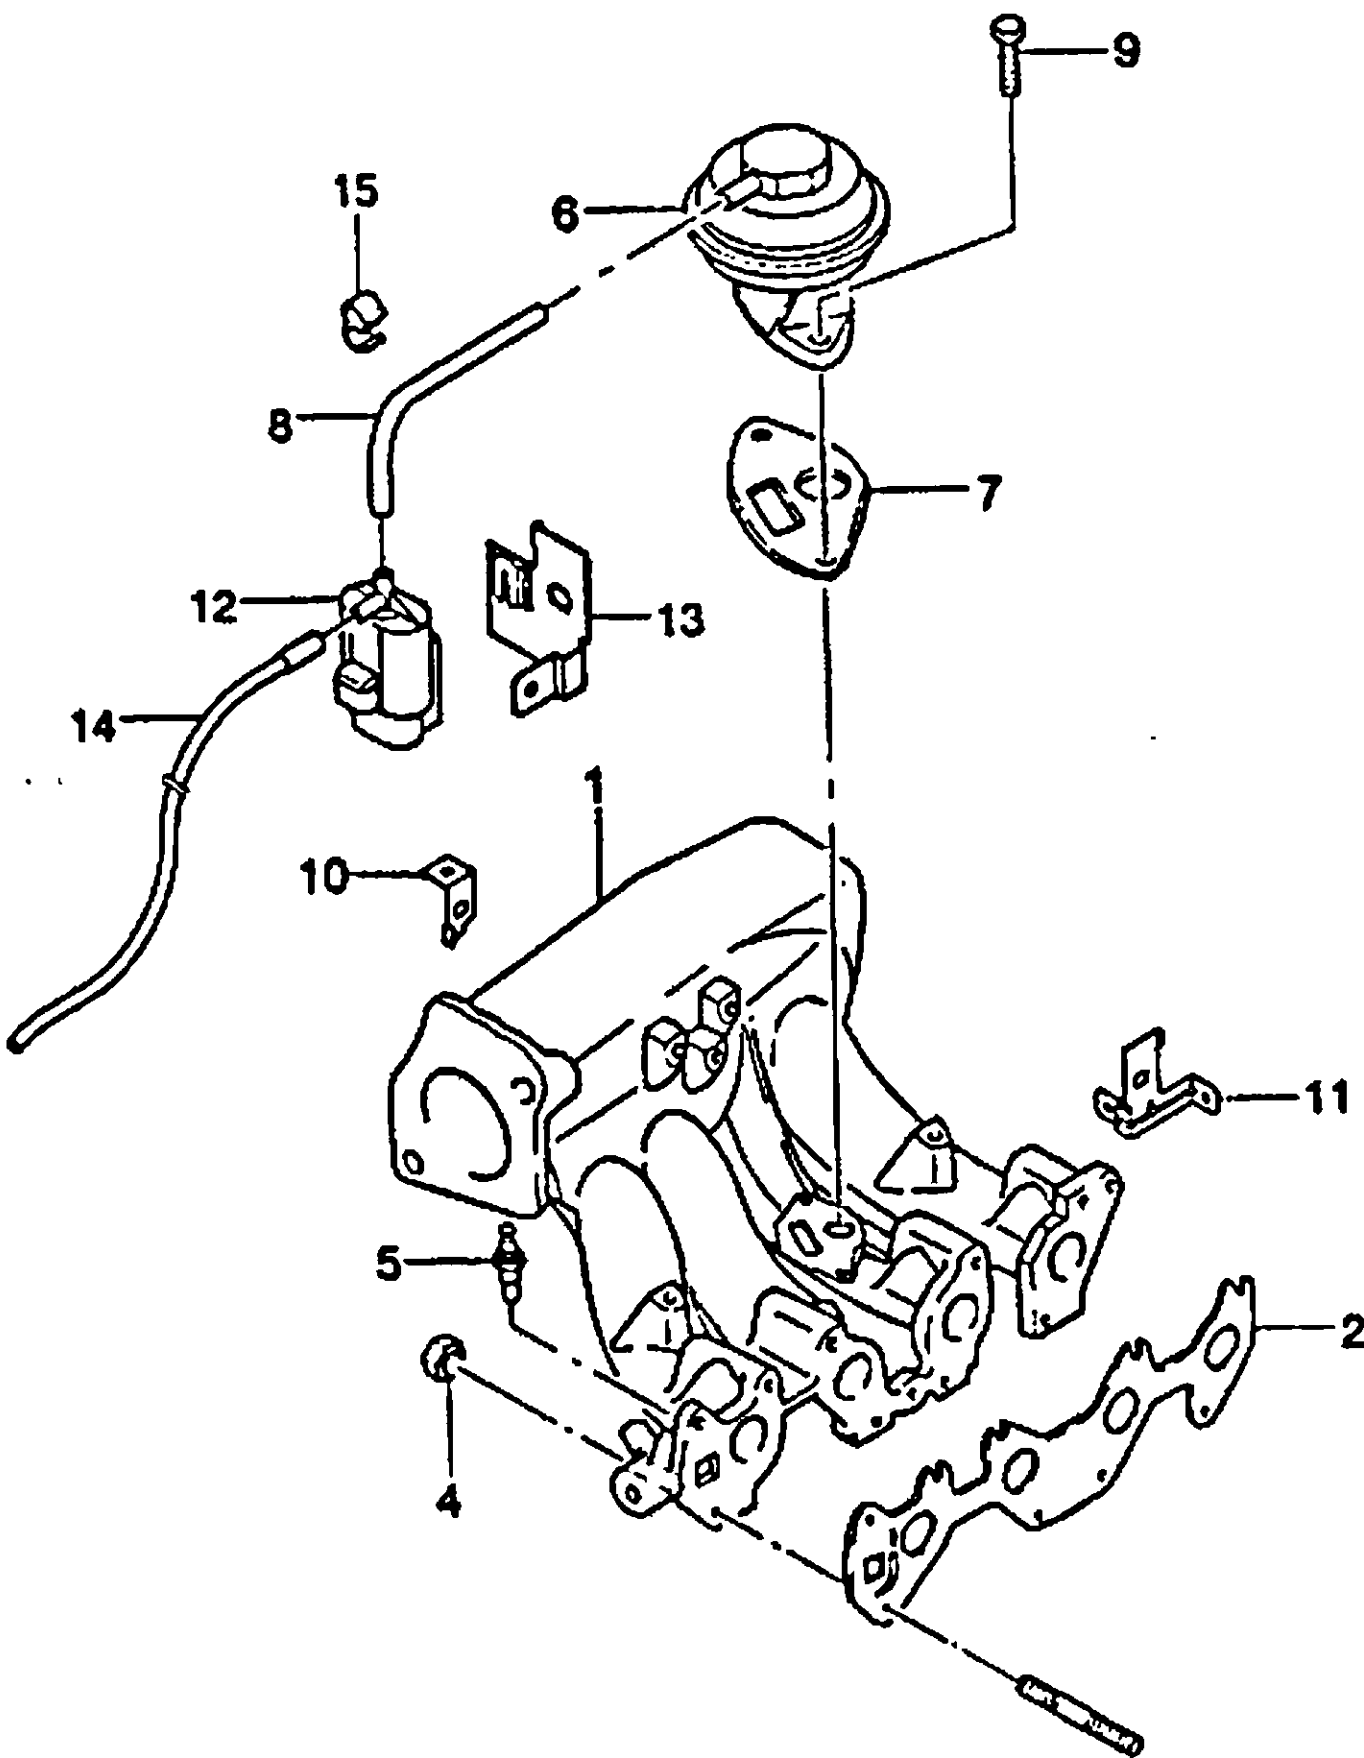


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q / T / Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E / N / G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S S								S S S	S S S
	[01]	(E)MANIFOLD -INTAKE (D)SAMMELLEITUNG,EINLAß									(F)COLLECTEUR-ADMISSION (S)COLECTOR-ENTRADA					
	96184771	Y	M	B	B	B	S	S	S	&NN4/NN6		1				
	96182953	Y	A	B	B	B	O	O	O	&NN4/NN6		1				
	96182953	Y	.	B	B	B	A	A	A	&NN7		1				
	[02]	(E)GASKET-INTAKE MANIFOLD (D)DICHTUNG,SAMMELLEITUNG									(F)JOINT (S)JUNTA-COLECTOR DE ENTRADA					
	96183118	Y	.	B	B	B	S	S	S			1				
	[04]	(E)NUT-HEXAGON LOCK (D)MUTTER									(F)ECROU (S)TUERCA					
	08311-38083	Y	.	B	B	B	S	S	S			9				
	[05]	(E)SENSOR A-TEMPERATURE (D)SENSOR,TEMPERATUR									(F)DETECTEUR-TEMPERATURE (S)SENSOR-TEMPERATURA					
	96177604	Y	.	B	B	B	S	S	S			1				
	[06]	(E)VALVE-EGR (D)VENTIL									(F)SOUPAPE (S)VALVULA					
	17089050	Y	A	B	B	B	O	O	O	&NN4/NN6		1				
	17089050	Y	.	B	B	B	A	A	A	&NN7		1				
	[07]	(E)GASKET-EGR (D)DICHTUNG									(F)JOINT (S)JUNTA					
	96184987	Y	A	B	B	B	O	O	O	&NN4/NN6		1				
	96184987	Y	.	B	B	B	A	A	A	&NN7		1				
	[08]	(E)PIPE A-VACUUM (D)ROHR,VAKUUM									(F)TUYAU-DEPRESSION (S)TUBERIA-VACIO					
	96242226	Y	A	B	B	B	O	O	O	&NN4/NN6		1				
	96242228	Y	.	B	B	B	A	A	A	&NN7		1				
	[09]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

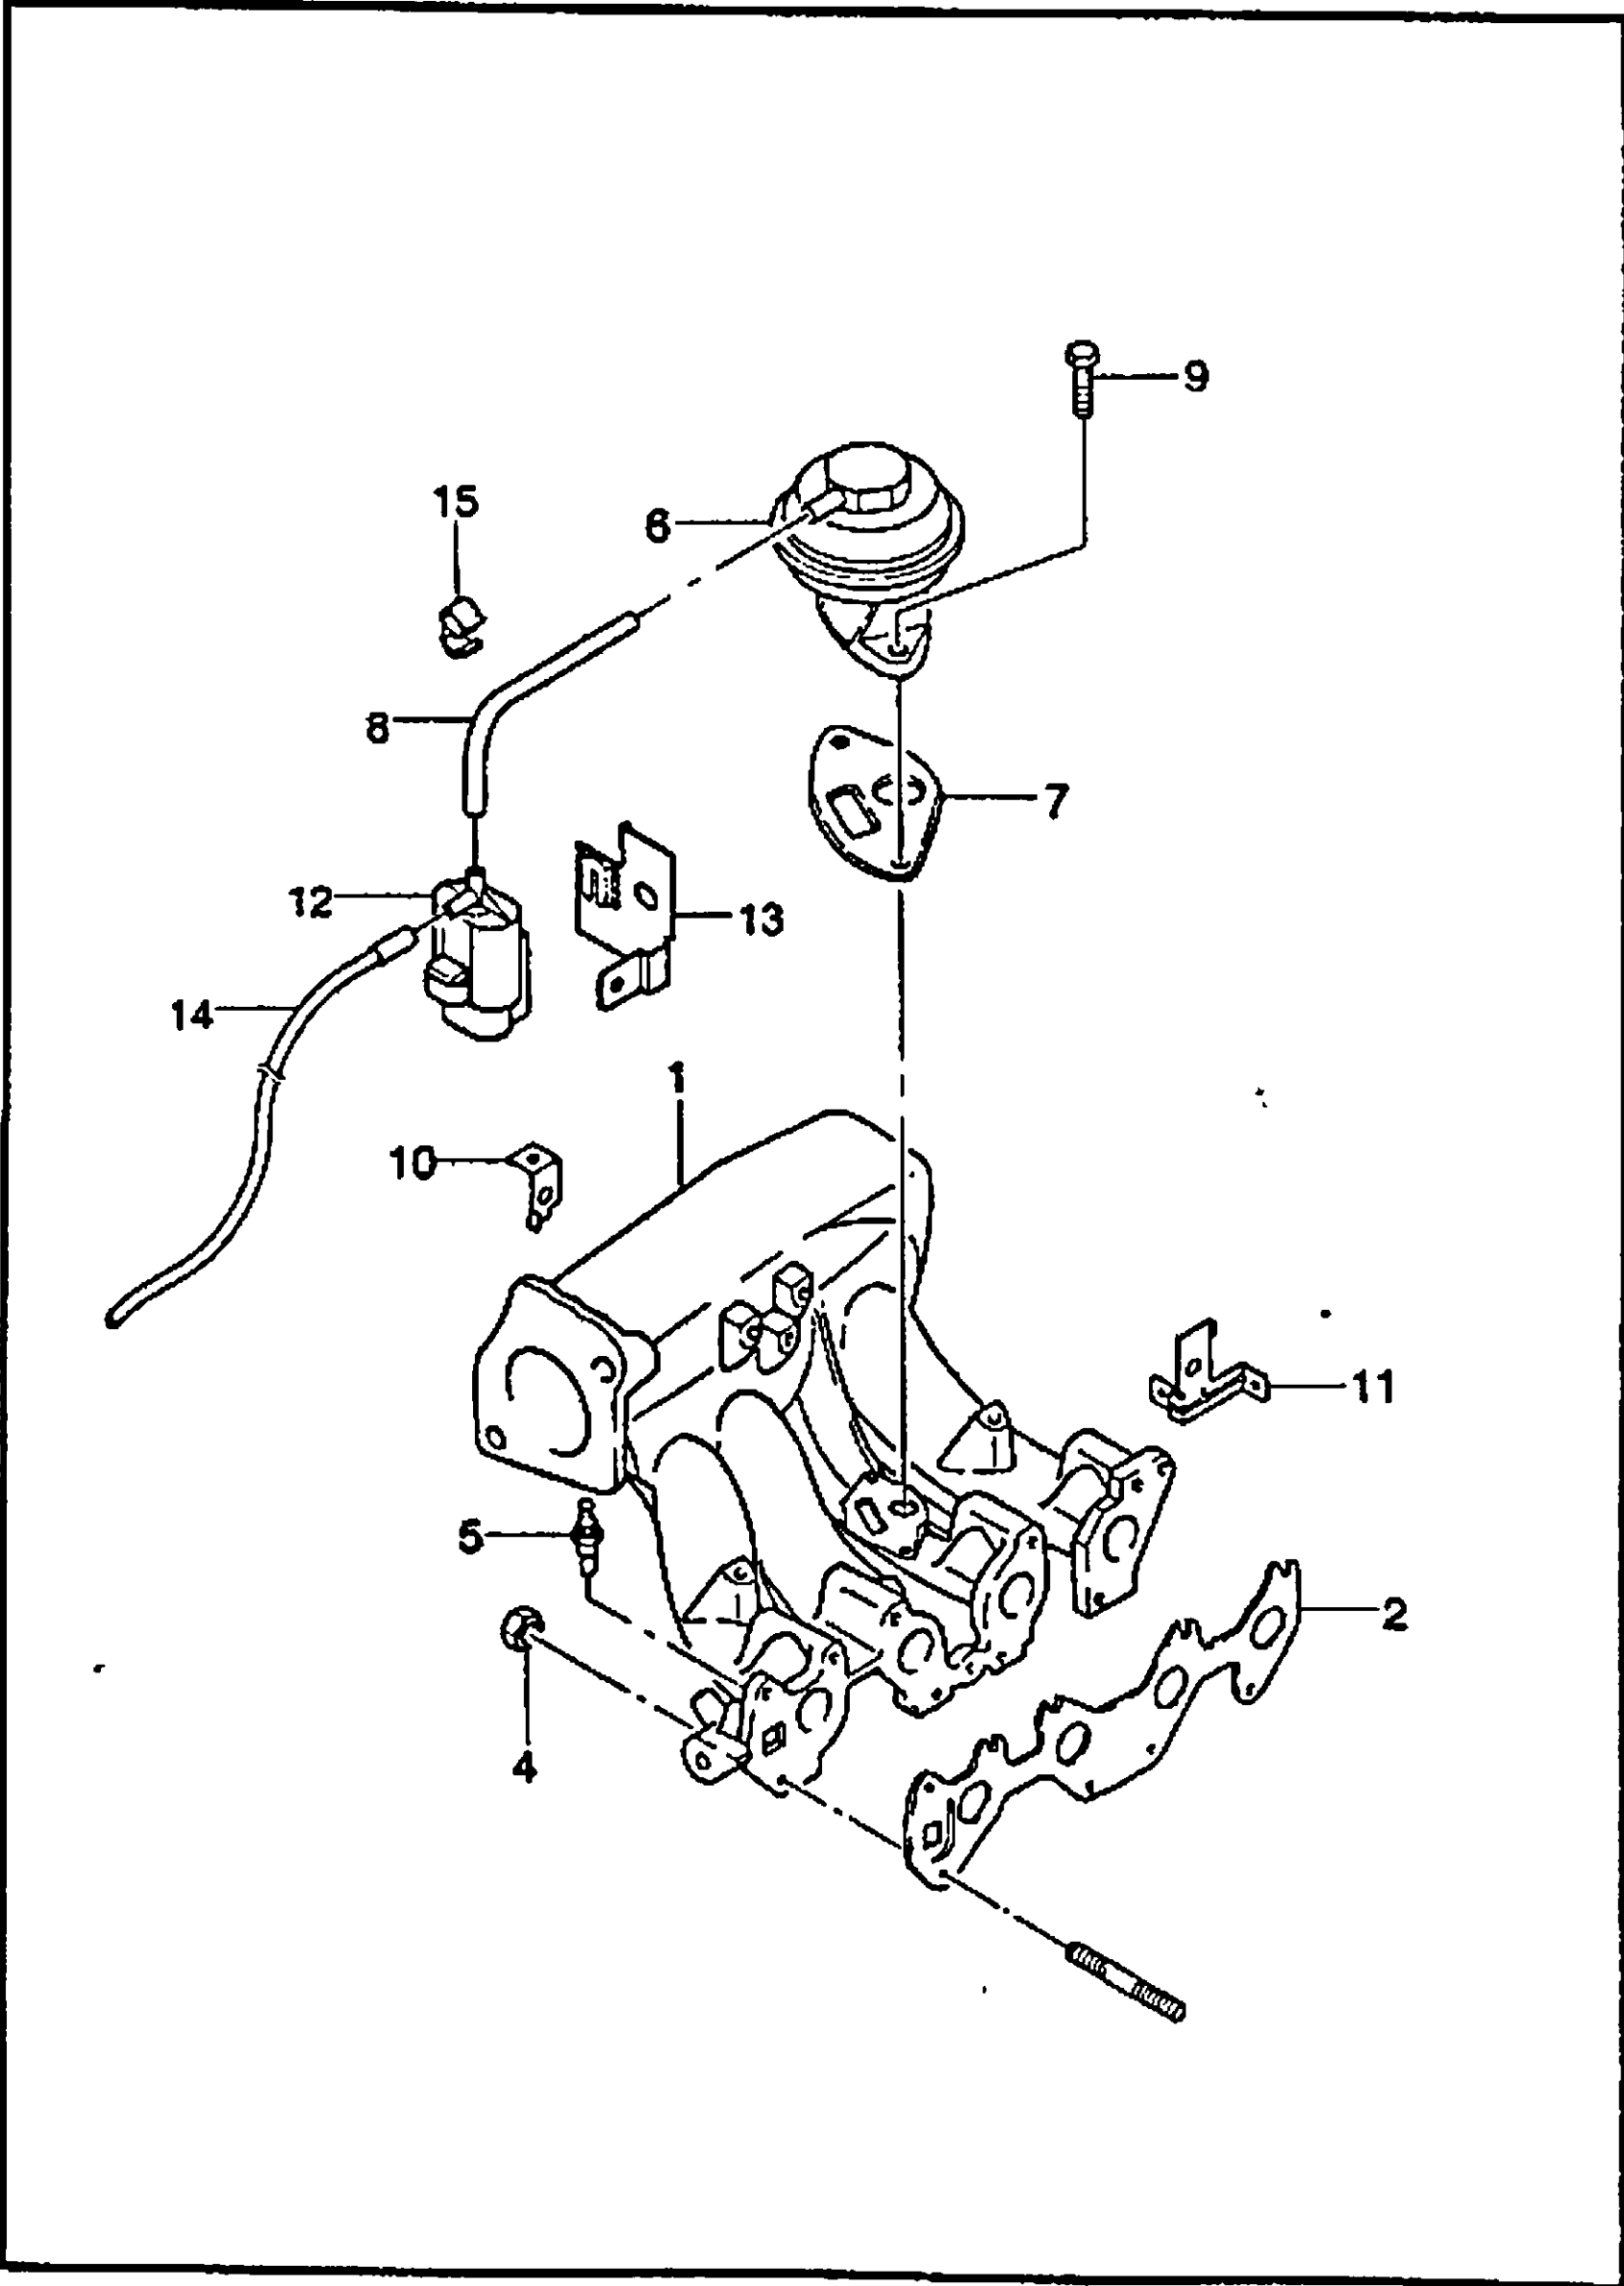

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S S								S E X
	11048333	Y	A	B	B	B	O	O	O	&NN4/NN6	2				
	11048333	Y	.	B	B	B	A	A	A	&NN7	2				
	[10]	(E)BRACKET-ENGINE CONT.HARNESS (D)TRÄGER										(F)SUPPORT (S)SOPORTE			
	96234616	Y	.	B	B	B	S	S	S		1				
	[11]	(E)BRACKET-ENGINE CONT.HARNESS (D)TRÄGER										(F)SUPPORT (S)SOPORTE			
	96234617	Y	.	B	B	B	S	S	S		1				
	[12]	(E)VALVE-SOLENOID (D)VENTIL										(F)SOUPAPE (S)VALVULA			
	96350594	Y	.	B	B	B	A	A	A	&NN7	1				
	[13]	(E)BRACKET-EGR (D)TRÄGER										(F)SUPPORT (S)SOPORTE			
	96350602	Y	.	B	B	B	A	A	A	&NN7	1				
	[14]	(E)PIPE A-VACUUM (D)ROHR,VAKUUM										(F)TUYAU-DEPRESSION (S)TUBERIA-VACIO			
	96242229	Y	.	B	B	B	A	A	A	&NN7	1				
	[15]	(E)CLIP (D)KLEMME										(F)ATTACHE (S)GRAPA			
	09408-00030	Y	.	B	B	B	A	A	A	&NN7	1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

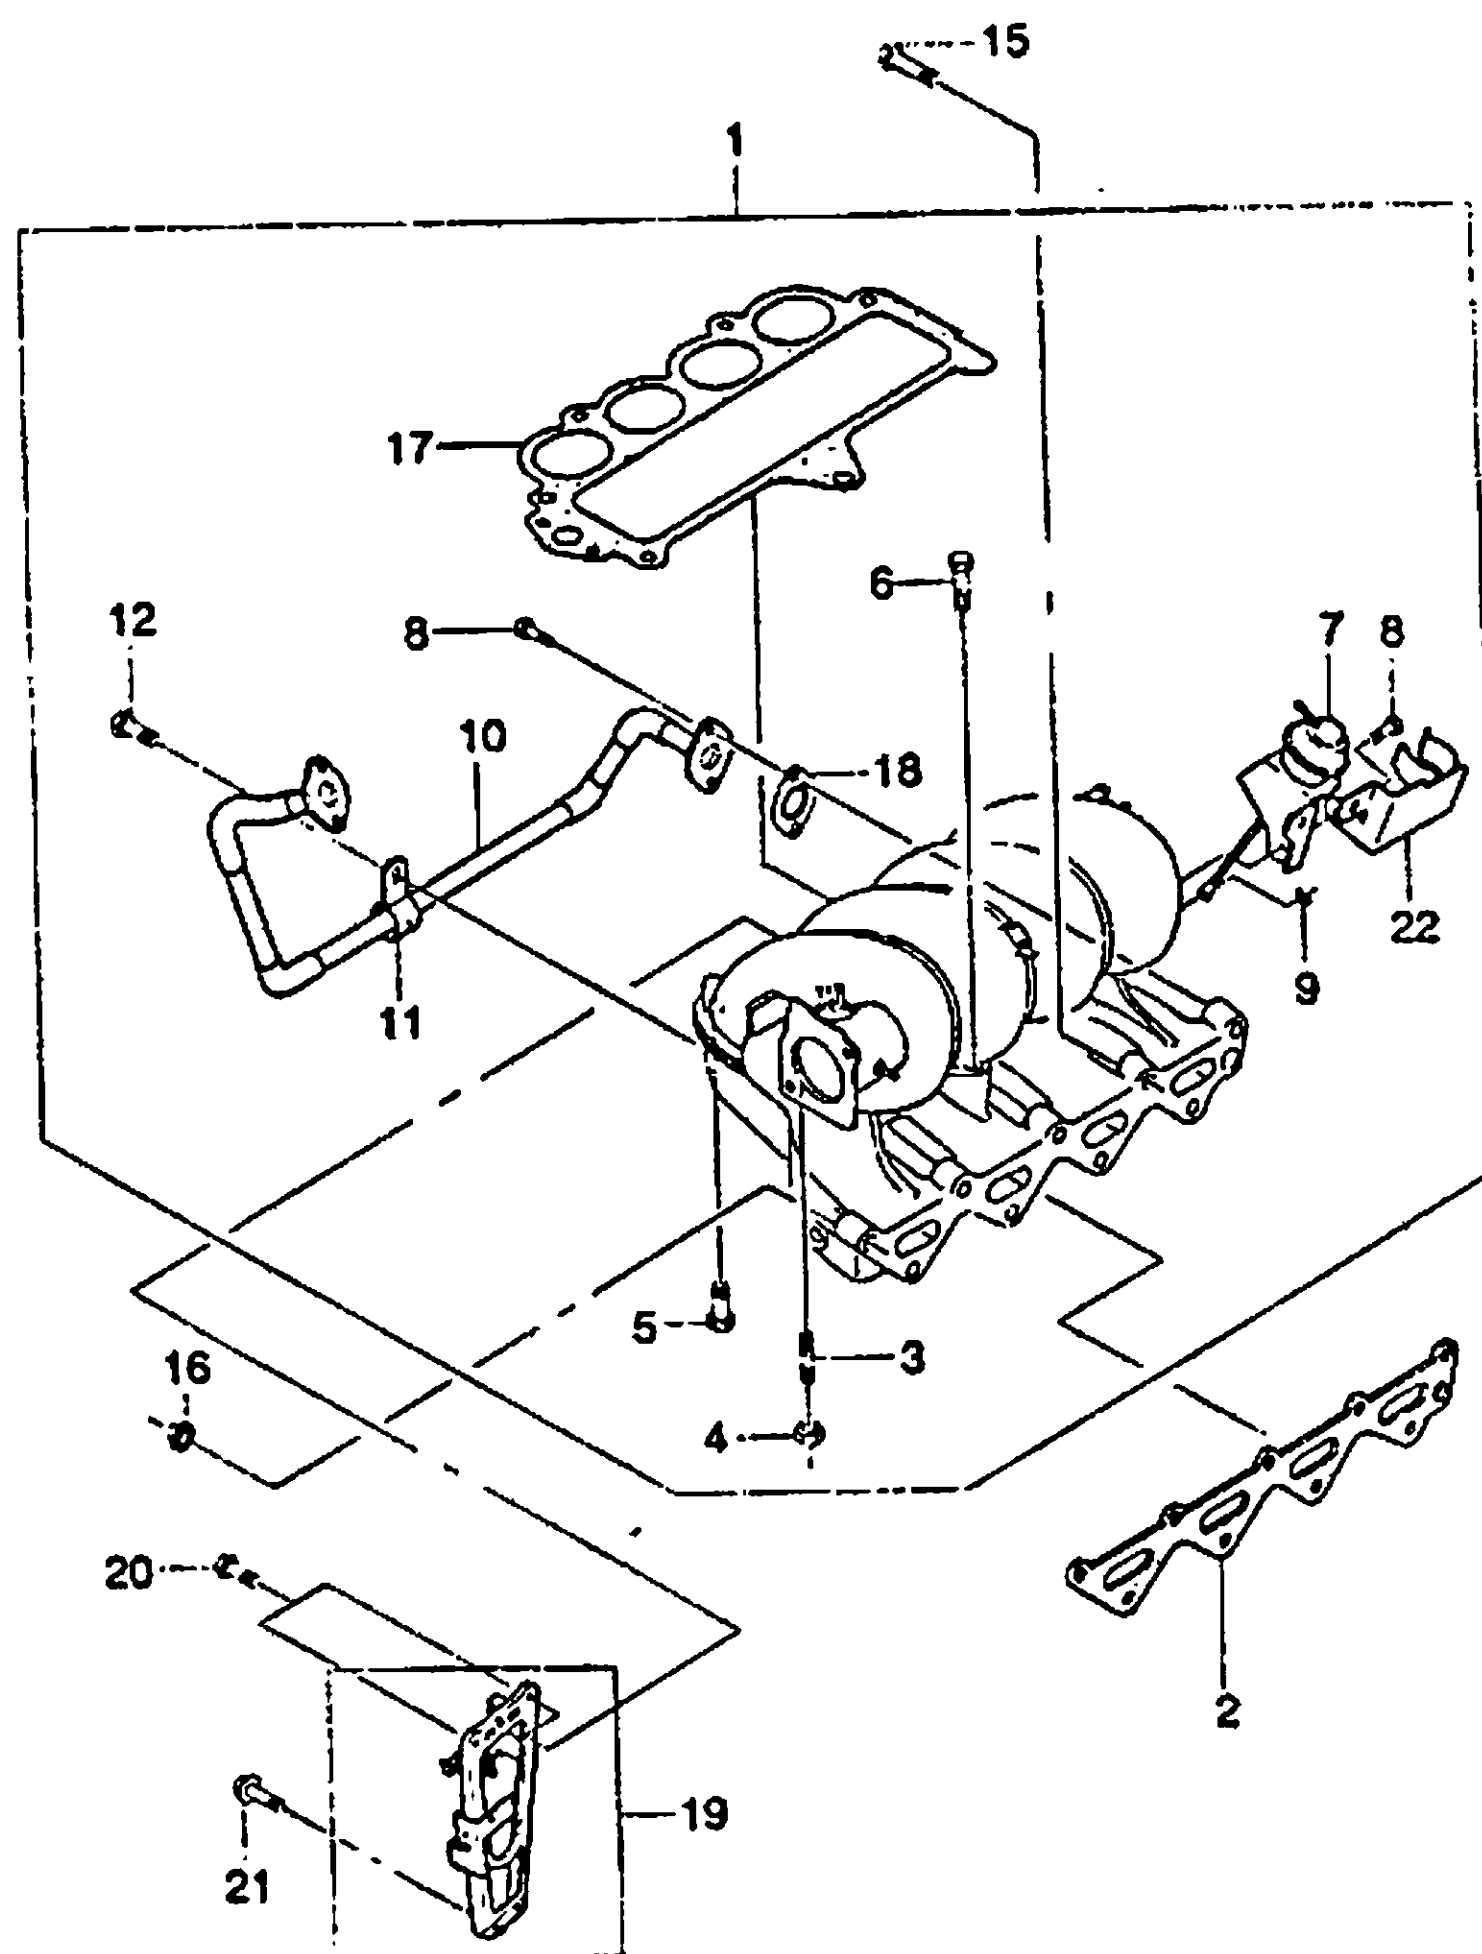


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	[01]	(E)MANIFOLD A-INTAKE,VGIS (D)SAMMELLEITUNG,EINLAß									(F)COLLECTEUR-ADMISSION (S)COLECTOR-ENTRADA				
	96182872	6 . B B B . . O						&NN4/NN7			1	970522			
	96351815	6 M B B B . . A						&NN6			1	970522			
	96182872	6 A B B B . . A						&NN6			1	970522			
	96182872	6 . B B B . . O						-KL9			1	970522			
	96352535	6 . B B B . . A						&KL9			1		FOR BRAZIL		
	[02]	(E)GASKET-INTAKE MANIFOLD (D)DICHTUNG,SAMMELLEITUNG									(F)JOINT (S)JUNTA-COLECTOR DE ENTRADA				
	5094207001	6 . B B B . . O									1				
	[03]	(E)BOLT-STUD (D)STIFTSCHRAUBE									(F)BOULON-TETON (S)PERNO-ESPIGA				
	01420-08253	6 . B B B . . O									2				
	[04]	(E)NUT-HEXAGON (D)MUTTER									(F)ECROU (S)TUERCA				
	08310-12083	6 . B B B . . O									2				
	[05]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO				
	01512-08253	6 . B B B . . O									4				
	[06]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO				
	01120-08753	6 . B B B . . O									1				
	[07]	(E)ACTUATOR A-VGIS (D)BETÄTIGUNG									(F)ACTIONNEUR (S)ACTUADOR				
	96184029	6 . B B B . . O									1				
	[08]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO				
	01110-06163	6 . B B B . . O						&NN4/NN7			6	970522			
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

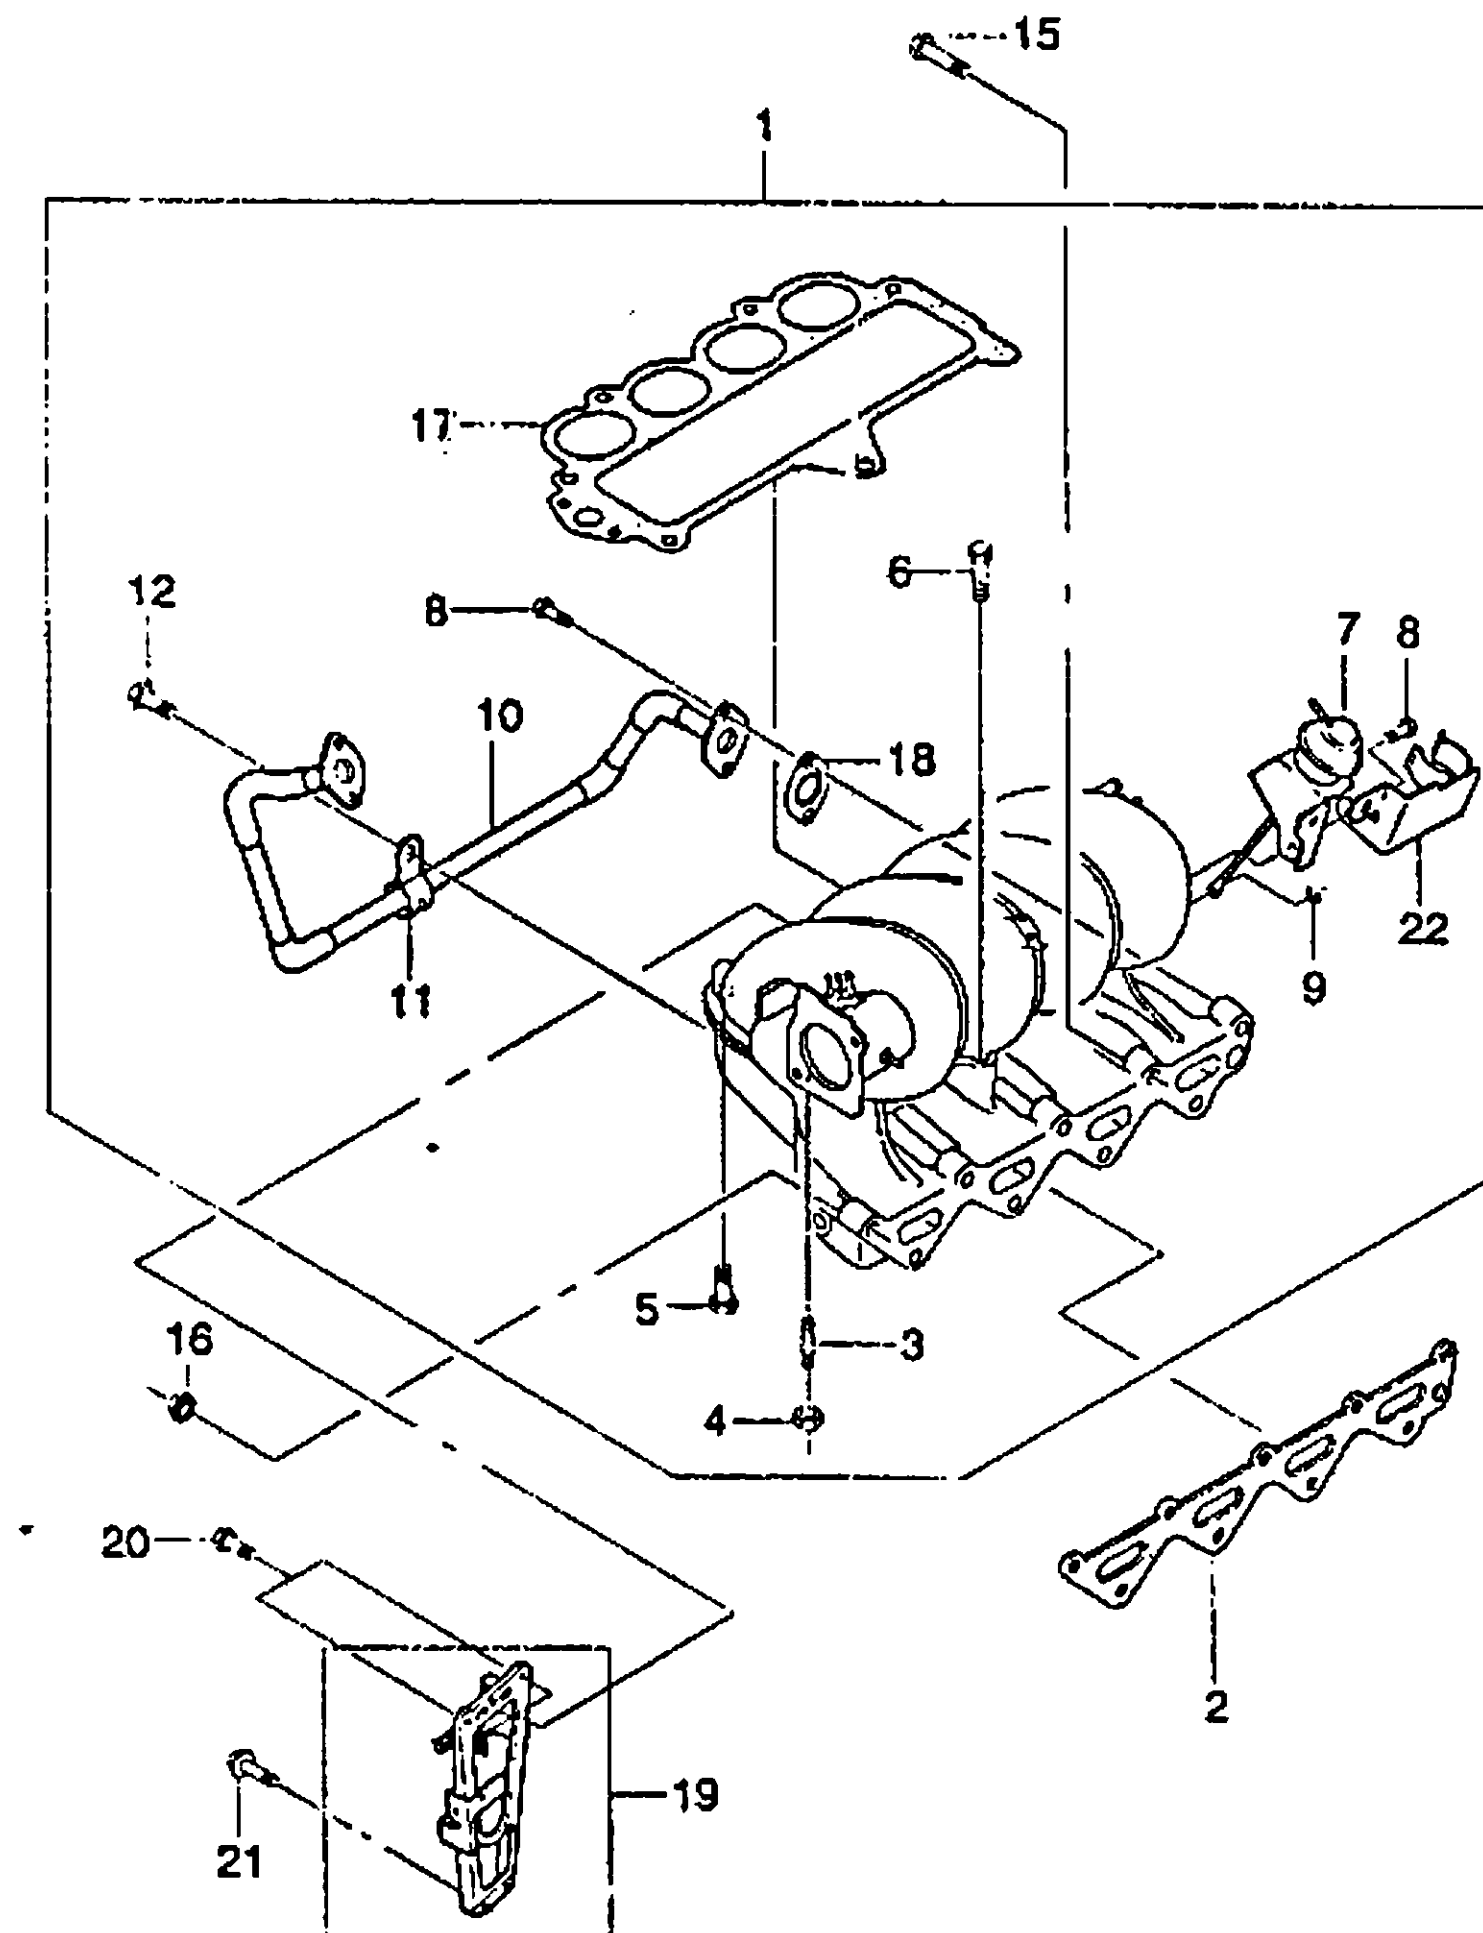


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S E							
	01110-06163	6	M	B	B	B	.	.	A	&NN6	2		970522		
	01110-06163	6	A	B	B	B	.	.	A	&NN6	6		970522		
	01110-06163	6	.	B	B	B	.	.	O		6		970522		
	[09]	(E)RING-RETAINING E TYPE (D)RING,HALTER									(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR				
	08332-11033	6	.	B	B	B	.	.	O		1				
	[10]	(E)PIPE-EGR PASSAGE,VGIS (D)ROHR									(F)TUYAU (S)TUBERIA				
	96184030	6	.	B	B	B	.	.	O	&NN4/NN7	1		970522		
	96184030	6	A	B	B	B	.	.	A	&NN6	1		970522		
	96184030	6	.	B	B	B	.	.	O		1		970522		
	[11]	(E)BRACKET-EGR,VGIS (D)TRÄGER									(F)SUPPORT (S)SOPORTE				
	96184111	6	.	B	B	B	.	.	O	&NN4/NN7	1		970522		
	96184111	6	A	B	B	B	.	.	A	&NN6	1		970522		
	96184111	6	.	B	B	B	.	.	O		1		970522		
	[12]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO				
	01117-06123	6	.	B	B	B	.	.	O	&NN4/NN7	1		970522		
	01117-06123	6	A	B	B	B	.	.	A	&NN6	1		970522		
	01117-06123	6	.	B	B	B	.	.	O		1		970522		
	[15]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO				
	01130-08353	6	.	B	B	B	.	.	O		7				
	[16]	(E)NUT-HEXAGON LOCK (D)MUTTER									(F)ECROU (S)TUERCA				
	08311-38083	6	.	B	B	B	.	.	O		2				


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

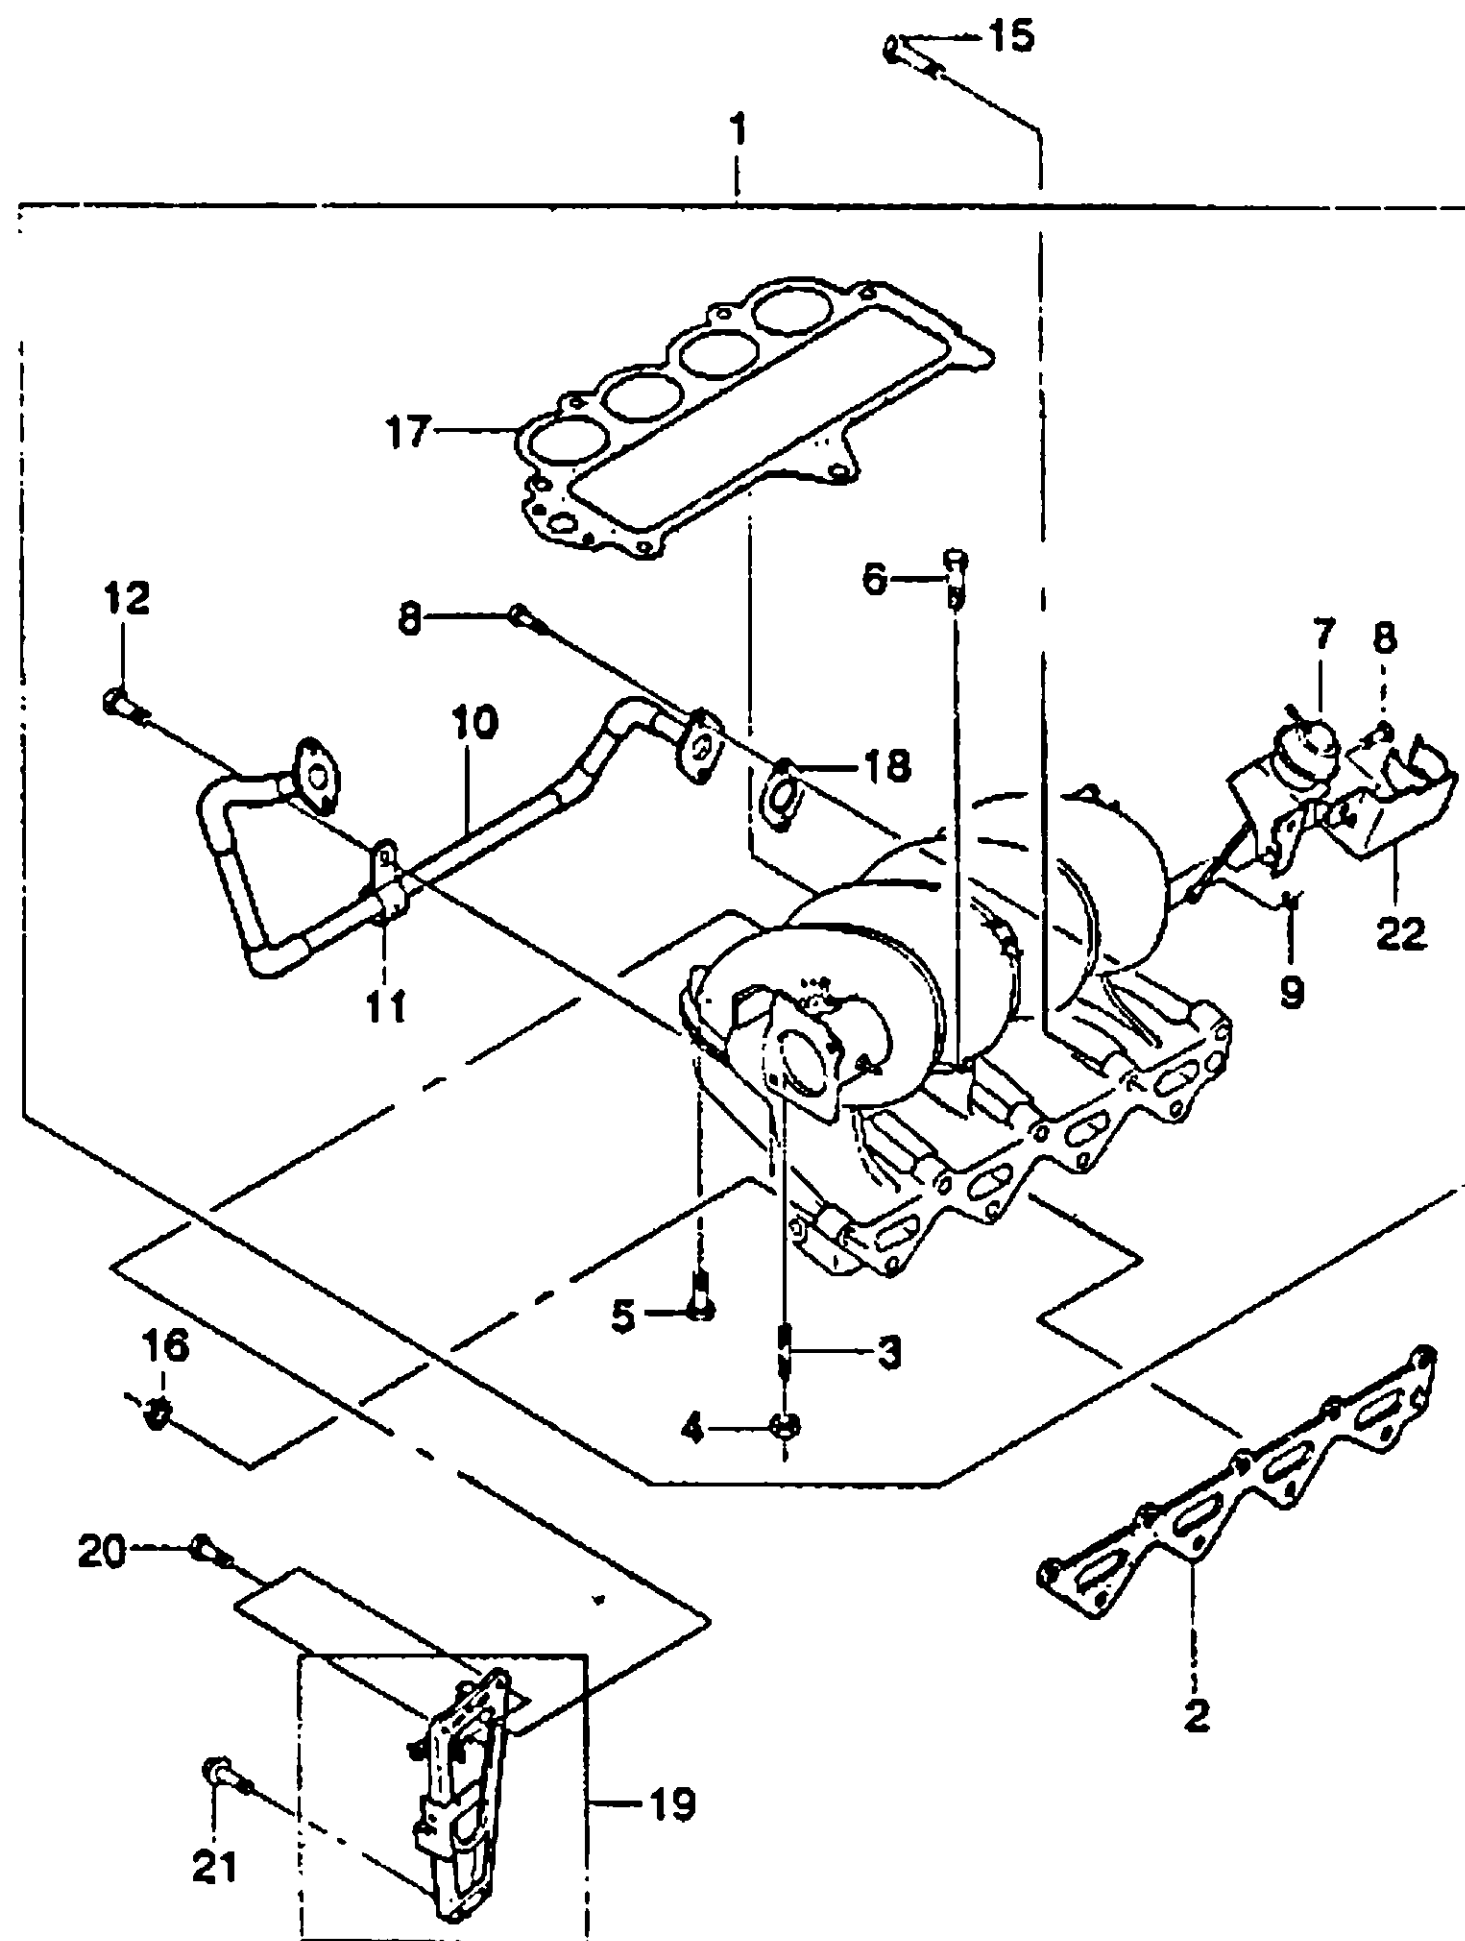


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[17]	(E)GASKET-MANIFOLD,VGIS (D)DICHTUNG								(F)JOINT (S)JUNTA					
	96184699	6 . B B B . . O								1					
	[18]	(E)GASKET-EGR PIPE,VGIS (D)DICHTUNG								(F)JOINT (S)JUNTA					
	96351344	6 . B B B . . O						&NN4/NN7		2	970522				
	96351344	6 A B B B . . A						&NN6		2	970622				
	96351344	6 . B B B . . O								2	970522				
	[19]	(E)BRACKET-MANIFOLD,VGIS (D)TRÄGER								(F)SUPPORT (S)SOPORTE					
	96352245	6 . B B B . . O								1					
	[20]	(E)BOLT-HEXAGON (D)SCHRAUBE								(F)BOULON (S)PERNO					
	01120-08163	6 . B B B . . O								2					
	[21]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO					
	09116-10001	6 . B B B . . O								2					
	[22]	(E)BRACKET-REGULATOR (D)TRÄGER								(F)SUPPORT (S)SOPORTE					
	96242770	6 . B B B . . A						&KL9		1		FOR BRAZIL			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

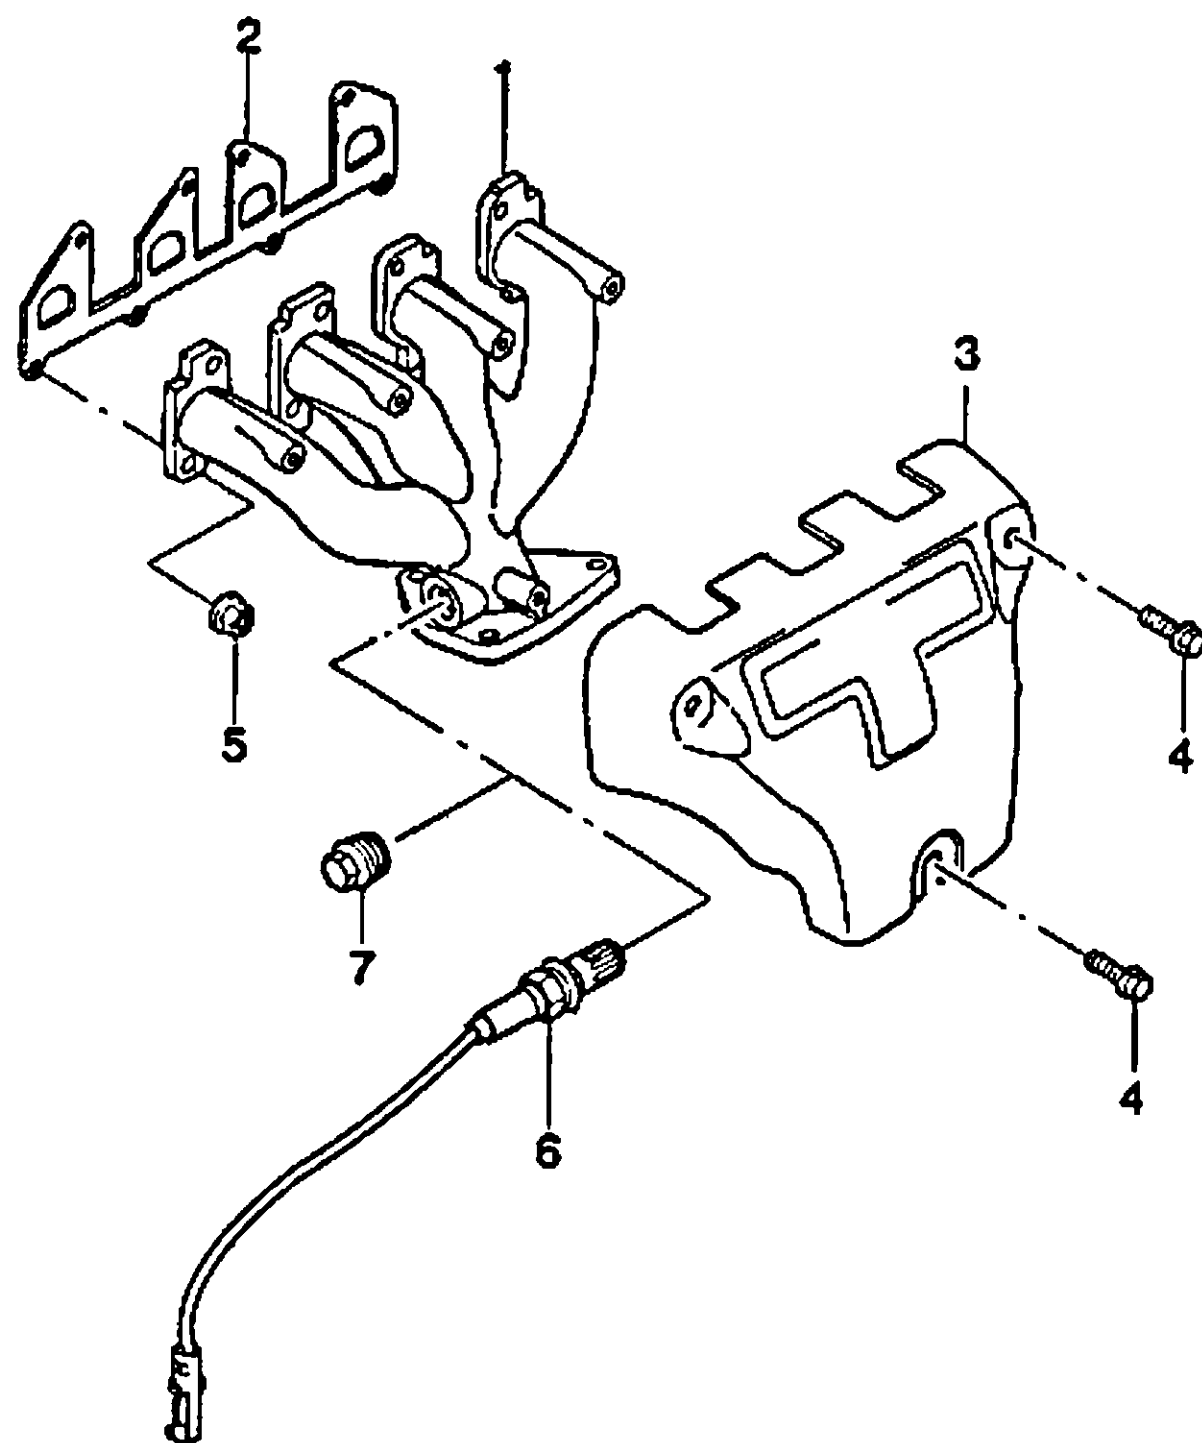


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01] 96184642	(E)MANIFOLD-EXHAUST (D)SAMMELLEITUNG,ABGAS	Y	.	B	B	B	S	S	S		(F)COLLECTEUR-ECHAPPEMENT (S)COLECTOR-ESCAPE	1			
	[02] 96181207	(E)GASKET-EXHAUST MANIFOLD (D)DICHTUNG,SAMMELLEITUNG	Y	.	B	B	B	S	S	S		(F)JOINT (S)JUNTA-COLECTOR DE ESCAPE	1			
	[03] 96182236	(E)SHIELD-EXH MANIFOLD HEAT (D)HEIZSCHUTZTEIL	Y	.	B	B	B	S	S	S		(F)BOUCLIER THERMIQUE (S)ESCUDO REFRACTARIO	1			
	[04] 01180-08162	(E)BOLT-HEXAGON (D)SCHRAUBE	Y	.	B	B	B	S	S	S		(F)BOULON (S)PERNO	3			
	[05] 09159-08012	(E)NUT (D)MUTTER	Y	.	B	B	B	S	S	S		(F)ECROU (S)TUERCA	8			
	[06] 25162753	(E)SENSOR A-EXHAUST GAS (D)SENSOR,ABGAS BELÜFTUNG	Y	.	B	B	B	A	A	A	&NN6/NN7	(F)DETECTEUR (S)SENSOR-OXIGENO DEL ESCAPE	1			
	[07] 96100183	(E)BOLT (D)SCHRAUBE	Y	.	B	B	B	S	S	S	&NN4	(F)BOULON (S)PERNO	1	971001		
	O 09247-18001		Y	.	B	B	B	S	S	S	&NN4		1	971001		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

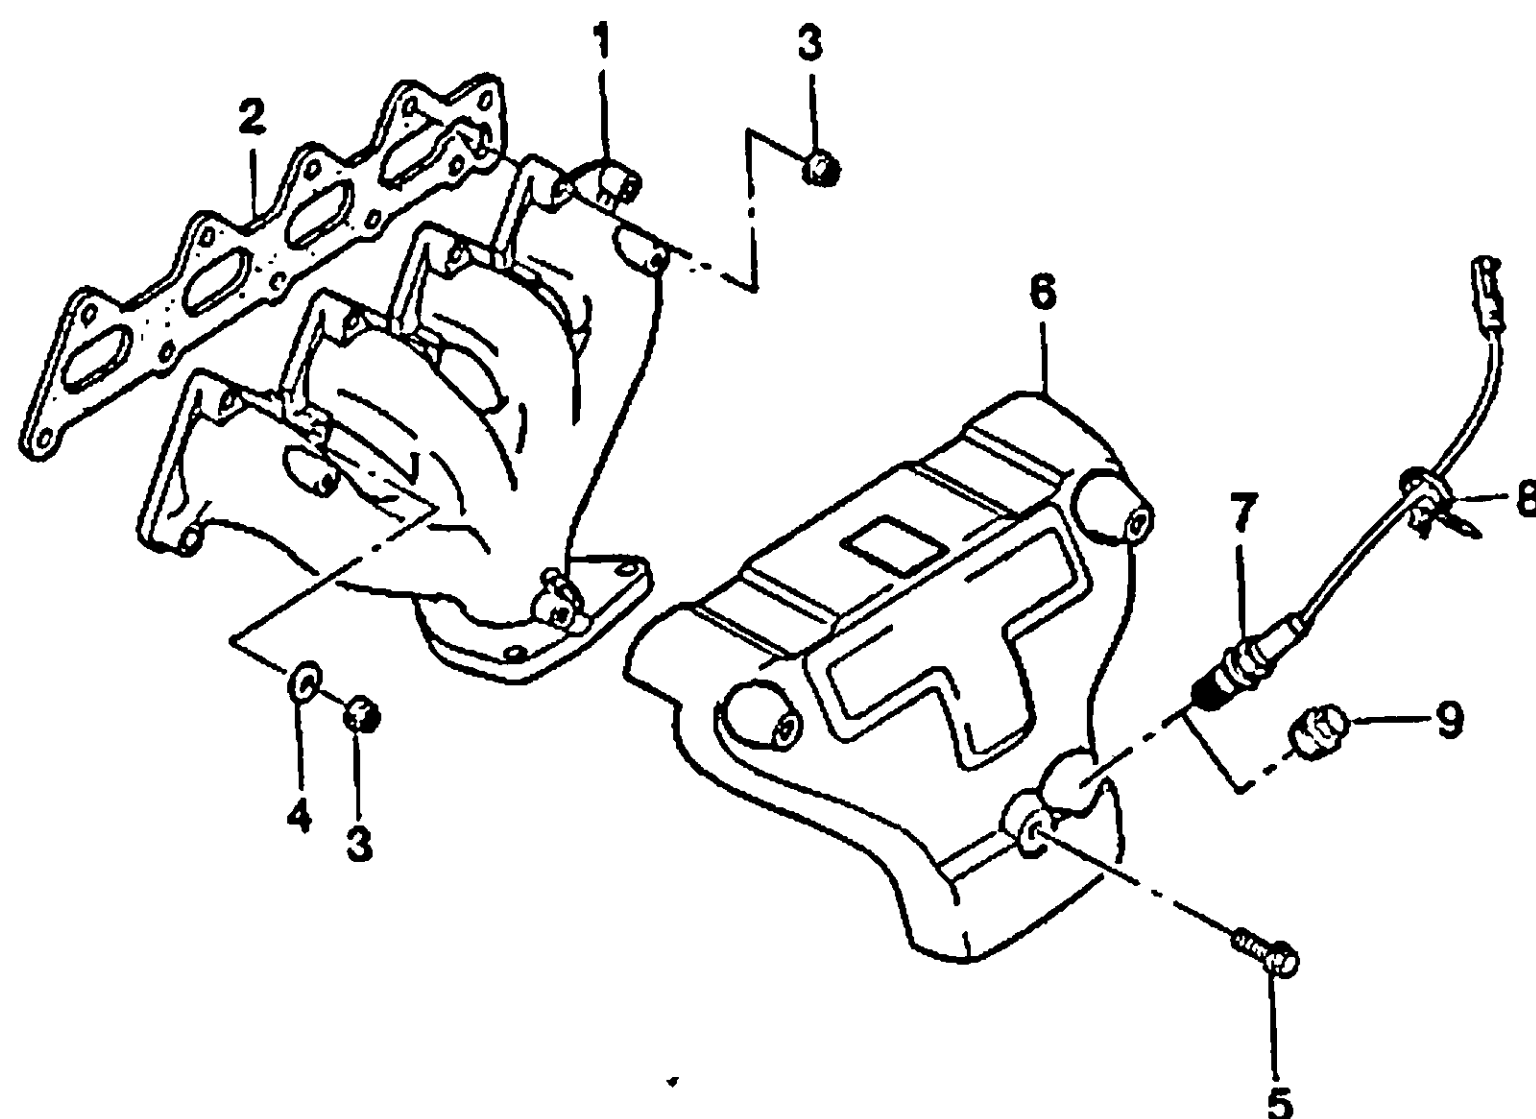


KEY NO.			PART NAME											
I T C	PART NO	MODEL						OPTION	L I T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL			FROM	TO			
				4 N	3 H	5 H	S S							S E
	[01]	(E)MANIFOLD-EXHAUST (D)SAMMELLEITUNG,ABGAS							(F)COLLECTEUR-ECHAPPEMENT (S)COLECTOR.ESCAPE					
	96350544	6 . B B B . . O							1					
	[02]	(E)GASKET-EXHAUST MANIFOLD (D)DICHTUNG,SAMMELLEITUNG							(F)JOINT (S)JUNTA-COLECTOR DE ESCAPE					
	5094021001	6 . B B B . . O							1	970507				
Y	96350469	6 . B B B . . O							1	970507				
	[03]	(E)NUT (D)MUTTER							(F)ECROU (S)TUERCA					
	09159-08012	6 . B B B . . O							10					
	[04]	(E)WASHER (D)DICHTUNGSRING							(F)RONDELLE (S)ARANDELA					
	96143555	6 . B B B . . O							3					
	[05]	(E)BOLT-HEXAGON (D)SCHRAUBE							(F)BOULON (S)PERNO					
	01180-08162	6 . B B B . . O							3					
	[06]	(E)SHIELD-EXH MANIFOLD HEAT (D)HEIZSCHUTZTEIL							(F)BOUCLIER THERMIQUE (S)ESCUDO REFRACTARIO					
	96350821	6 . B B B . . O							1				MD	
	[07]	(E)SENSOR A-EXHAUST GAS (D)SENSOR,ABGAS BELÜFTUNG							(F)DETECTEUR (S)SENSOR-OXIGENO DEL ESCAPE					
	25162753	6 . B B B . . A &NN6/NN7							1					
	[08]	(E)CLAMP (D)KLAMMER							(F)PINCE (S)ABRAZADERA					
	09407-16401	6 . B B B . . O							1					
	[09]	(E)BOLT (D)SCHRAUBE							(F)BOULON (S)PERNO					
	96100183	6 . B B B . . O &NN4							1					
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

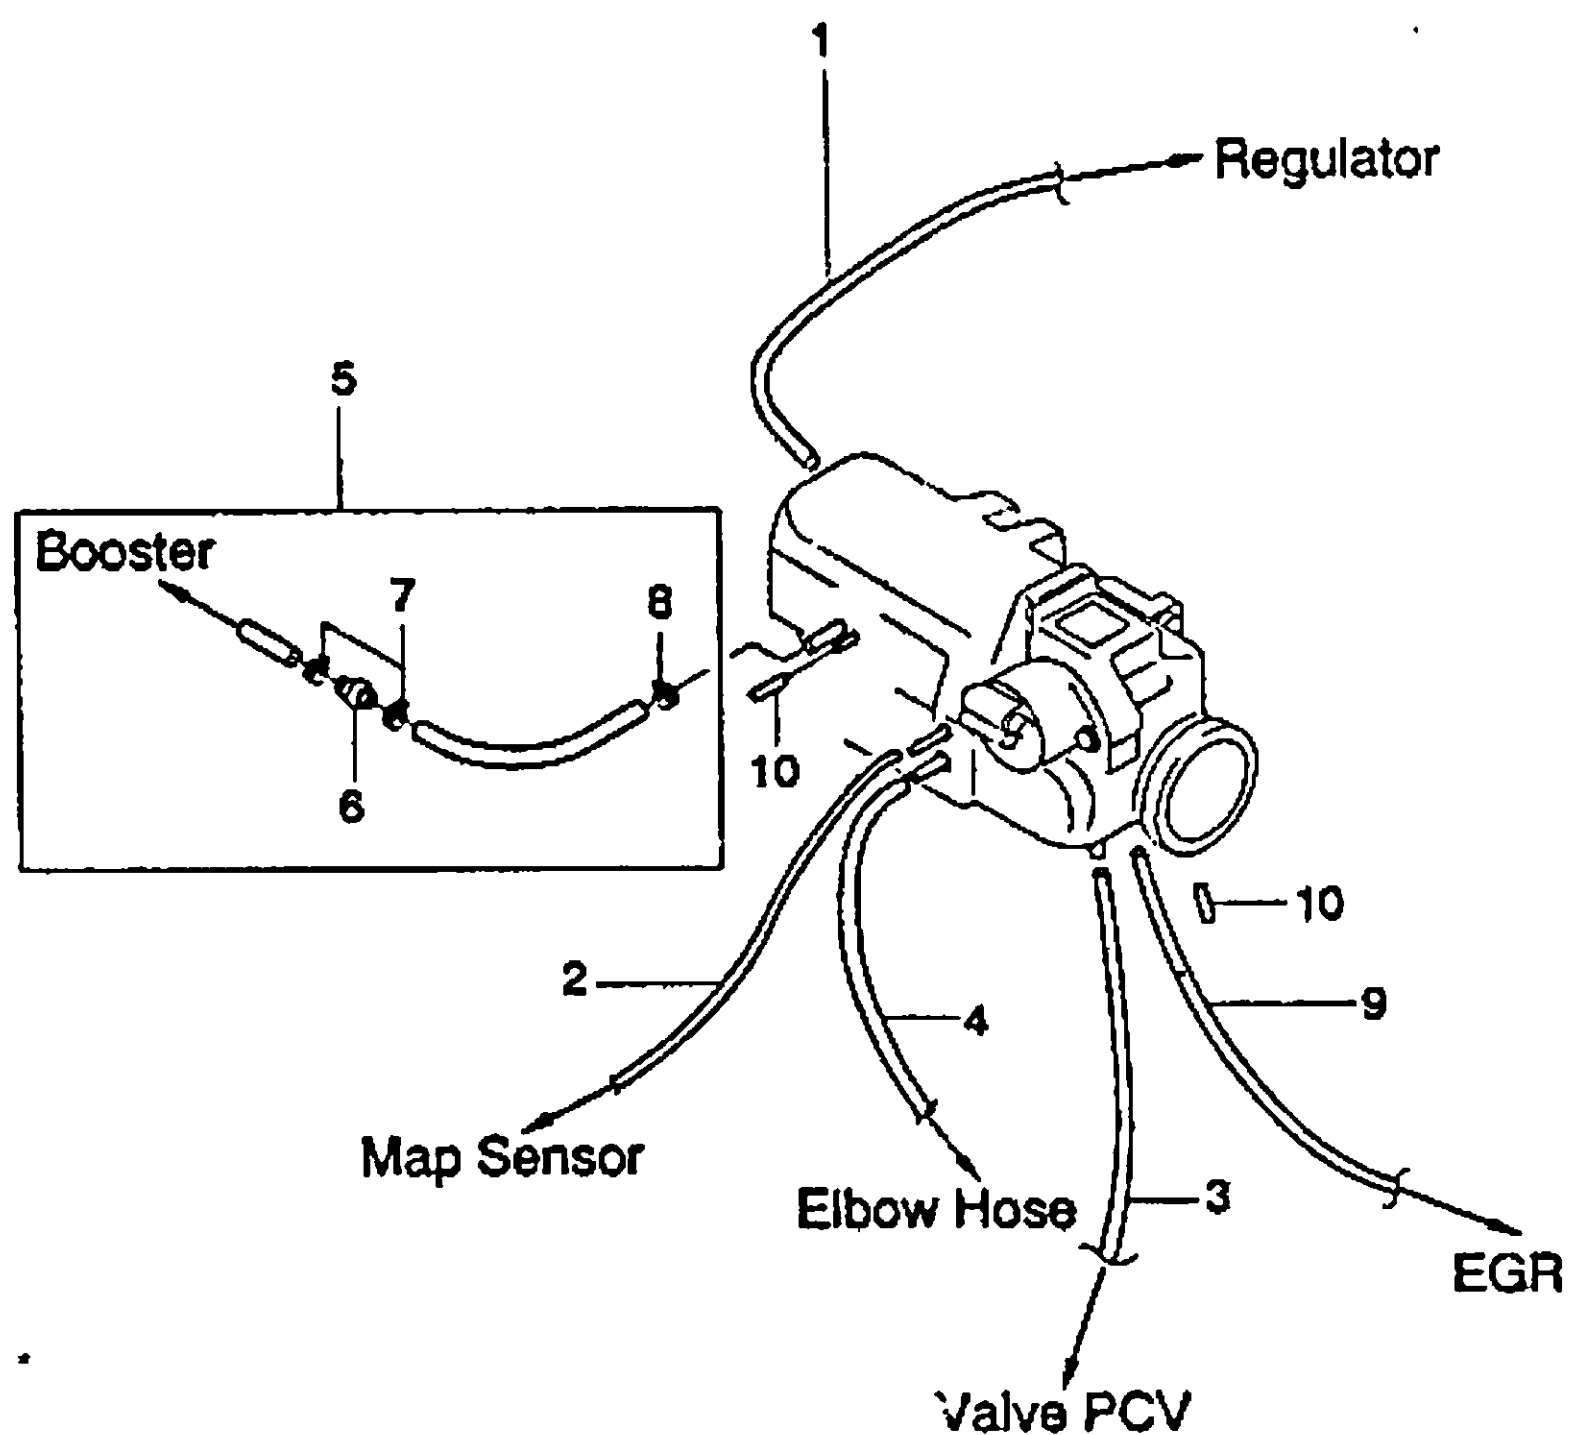


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)HOSE-VACUUM (D)SCHLAUCH,VAKUUM REFER GROUP 2210 KEY NO. 10									(F)TUYAU-DEPRESSION (S)MANGUERA-VACIO				
	[02]	(E)PIPE A-VACUUM (D)ROHR,VAKUUM 96239375	Y	.	B	B	B	S	S	S		(F)TUYAU-DEPRESSION (S)TUBERIA-VACIO 1			
	[03]	(E)TUBE A-PURGE,ENGINE (D)ROHRLEITUNG REFER GROUP 2130 KEY NO. 15									(F)TUYAU OU TUBE (S)TUBO				
	[04]	(E)HOSE-ENGINE VENTILATION (D)SCHLAUCH,VENTILATOR REFER GROUP 2410 KEY NO. 22									(F)TUYAU-VENTILATION (S)MANGUERA-VENTILACION				
	[05]	(E)HOSE-VACUUM (D)SCHLAUCH,VAKUUM 96304432	Y	.	B	B	B	S	S	S		(F)TUYAU-DEPRESSION (S)MANGUERA-VACIO 1			
	[06]	(E)VALVE-CHECK (D)VENTIL,PRÜF 90193282	Y	.	B	B	B	S	S	S		(F)SOUPAPE-SECURITE (S)VALVULA-PARADA 1			
	[07]	(E)CLIP (D)KLEMME 09401-17402	Y	.	B	B	B	S	S	S		(F)ATTACHE (S)GRAPA 2			
	[08]	(E)CLIP (D)KLEMME 09401-15402	Y	.	B	B	B	S	S	S		(F)ATTACHE (S)GRAPA 2			
	[09]	(E)PIPE A-VACUUM (D)ROHR,VAKUUM REFER GROUP 2430 KEY NO. 08									(F)TUYAU-DEPRESSION (S)TUBERIA-VACIO				
	[10]	(E)CAP (D)DECKEL									(F)CHAPEAU (S)TAPA				
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

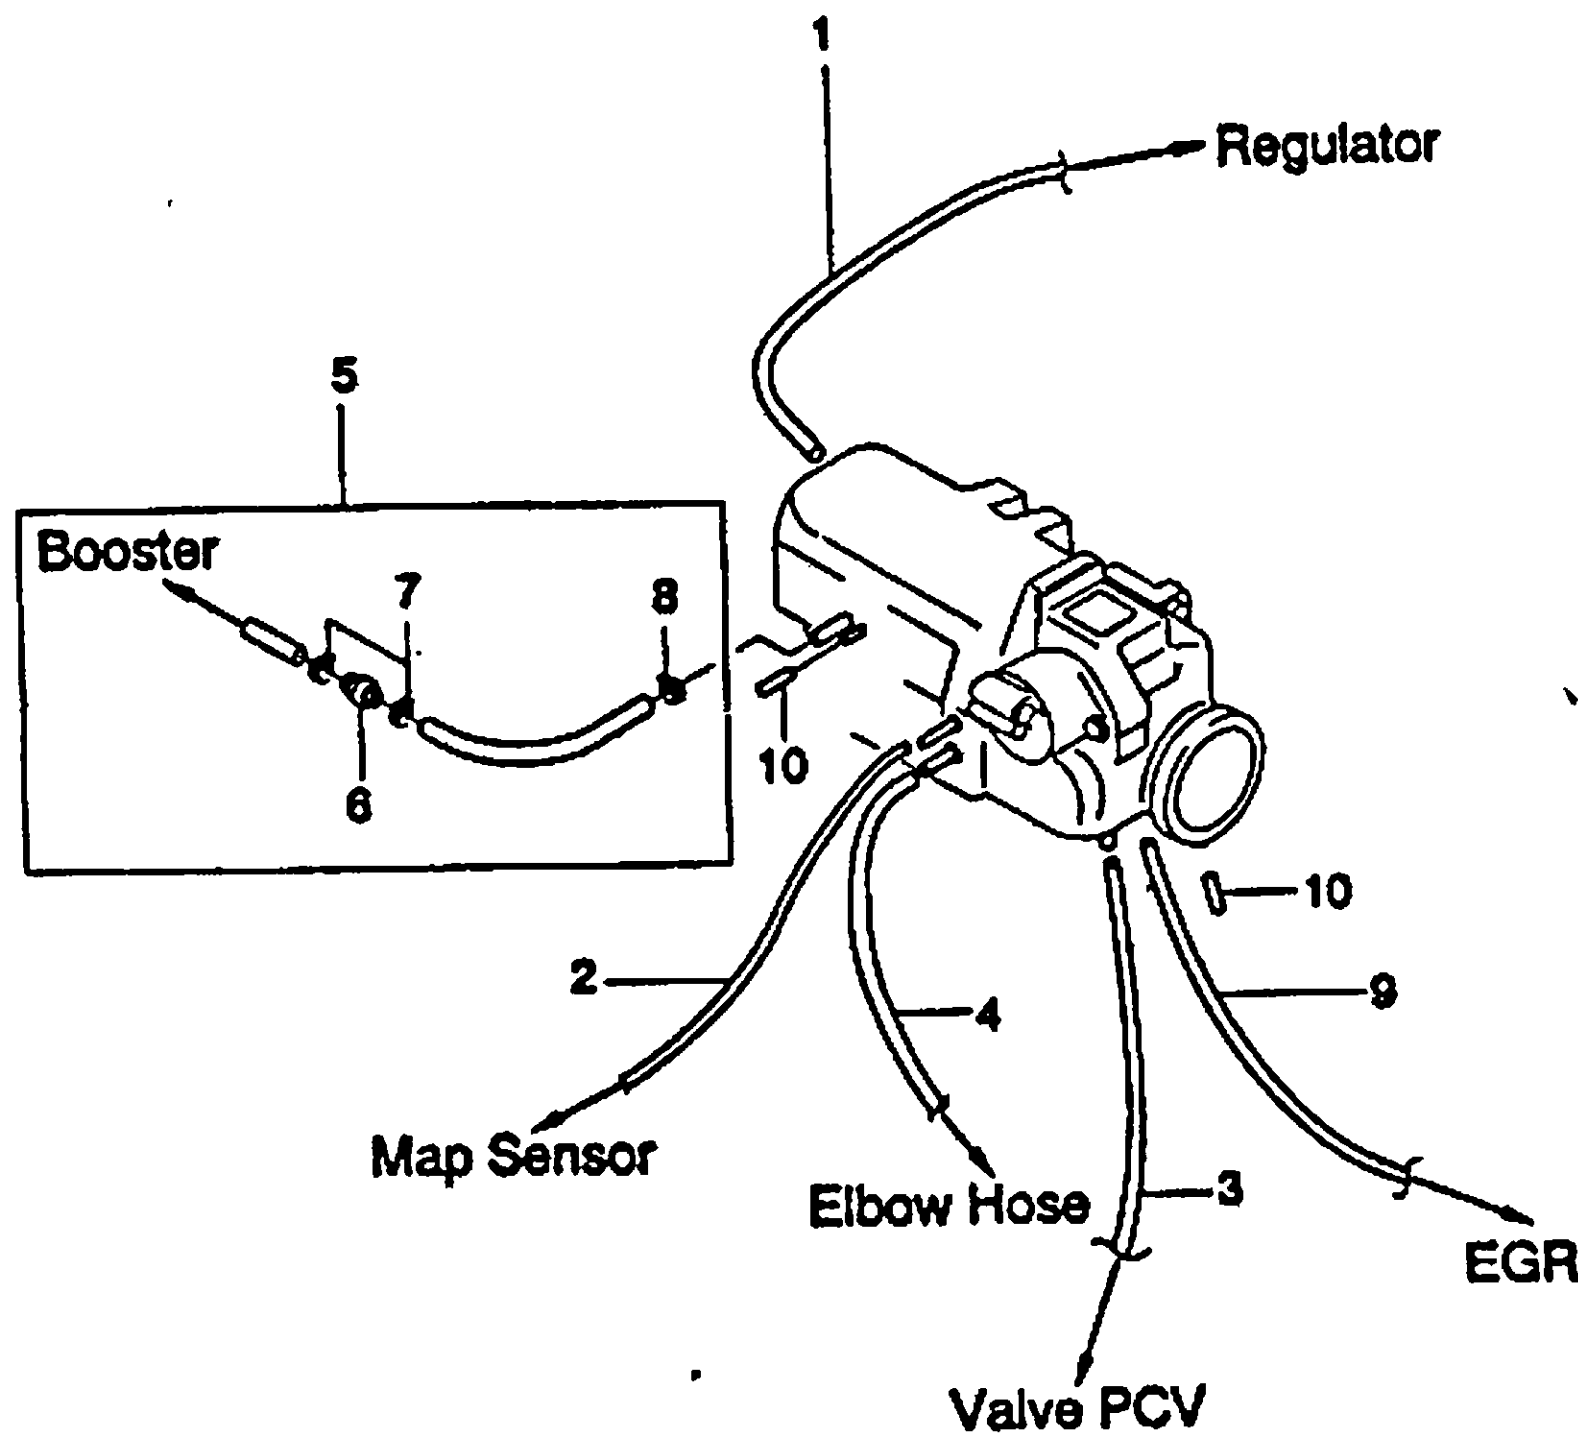


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	08981899	Y	.	B	B	B	S	S	S							
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

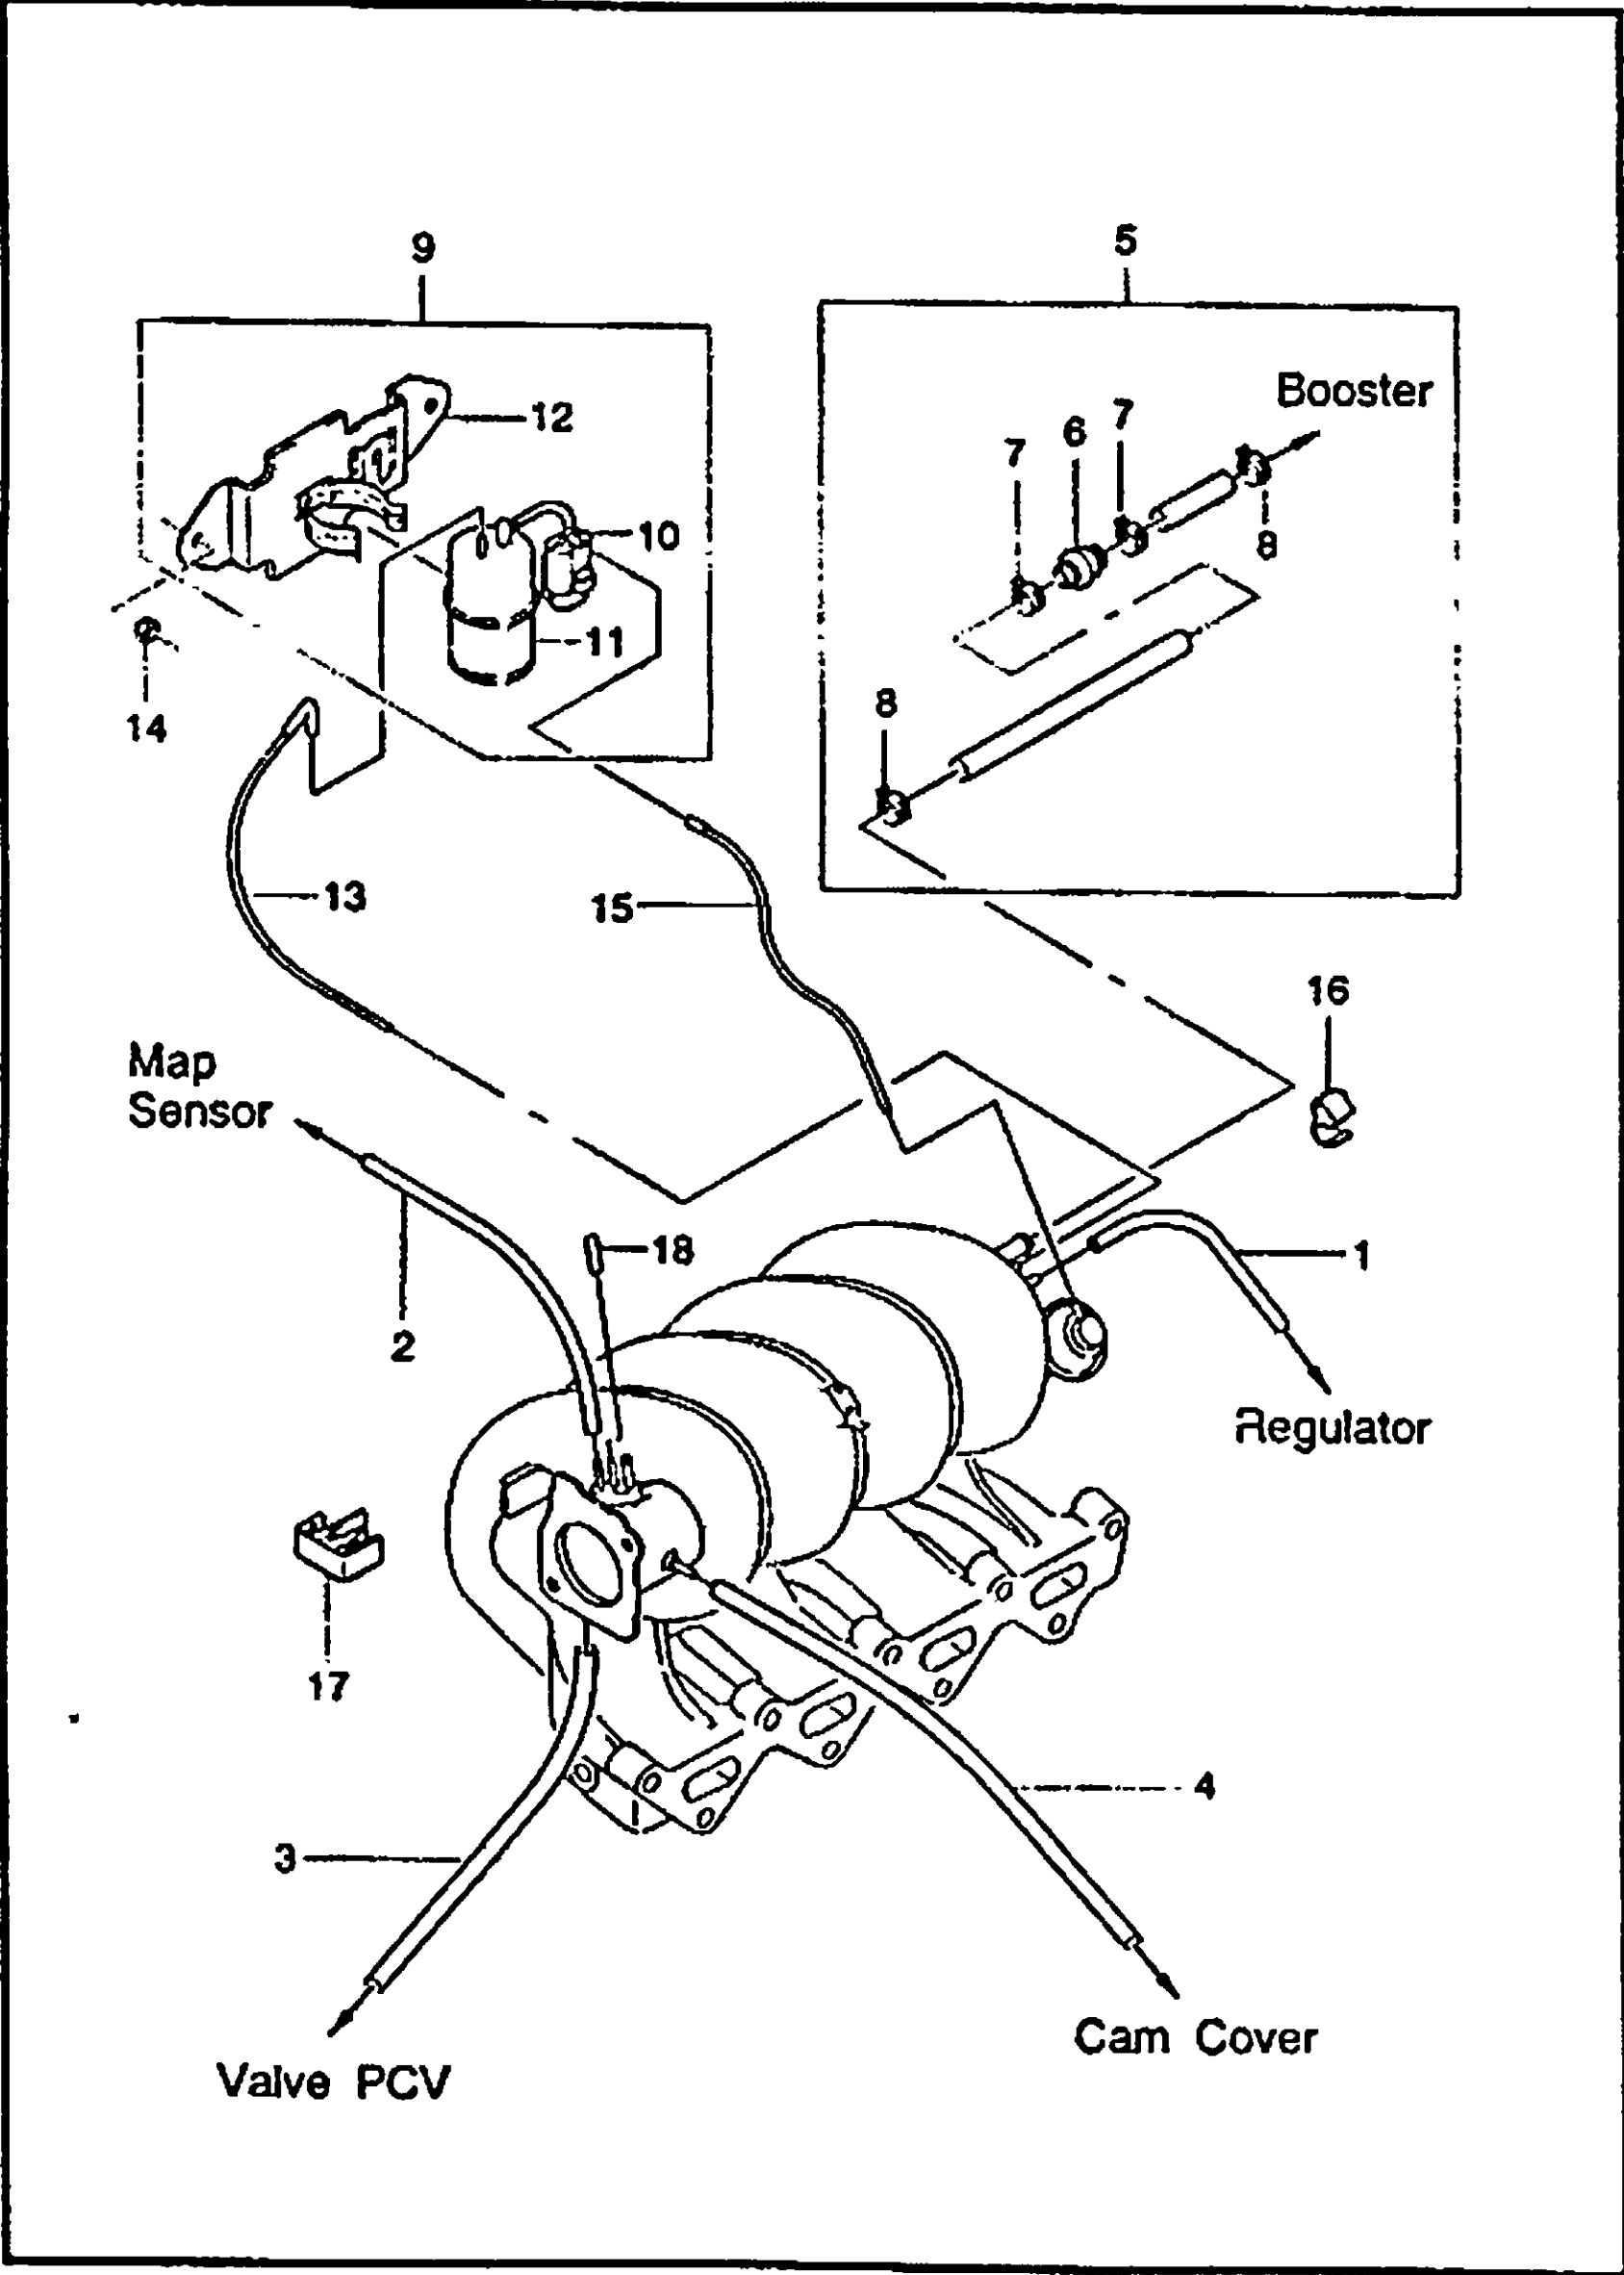


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)HOSE-VACUUM (D)SCHLAUCH,VAKUUM REFER GROUP 2211 KEY NO. 10									(F)TUYAU-DEPRESSION (S)MANGUERA-VACIO				
	[02]	(E)PIPE A-VACUUM (D)ROHR,VAKUUM									(F)TUYAU-DEPRESSION (S)TUBERIA-VACIO				
96239374		6 . B B B . . O									1				
	[03]	(E)TUBE-PURGE,ENGINE (D)ROHRLEITUNG REFER GROUP 2130 KEY NO. 15									(F)TUYAU OU TUBE (S)TUBO				
	[04]	(E)HOSE-INTAKE,BREATHER (D)SCHLAUCH									(F)TUYAU (S)MANGUERA				
96184788		6 . B B B . . O									1				
	[05]	(E)HOSE A-VACUUM (D)SCHLAUCH,VAKUUM									(F)TUYAU-DEPRESSION (S)MANGUERA-VACIO				
96306170		6 . B B B . . O									1 971001				
96306170		6 . B B B . . O						-KL9			1 971001				
O 96257689		6 . B B B . . O						&KL9			1 971001				
	[06]	(E)VALVE-CHECK (D)VENTIL,PROF									(F)SOUPAPE-SECURITE (S)VALVULA-PARADA				
90193282		6 . B B B . . O									1				
	[07]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA				
09401-17402		6 . B B B . . O									2				
	[08]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA				
09401-15402		6 . B B B . . O									2				
	[09]	(E)SOLENOID A-VGIS (D)SOLENOID									(F)SOLENOIDE (S)SELENOIDE				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

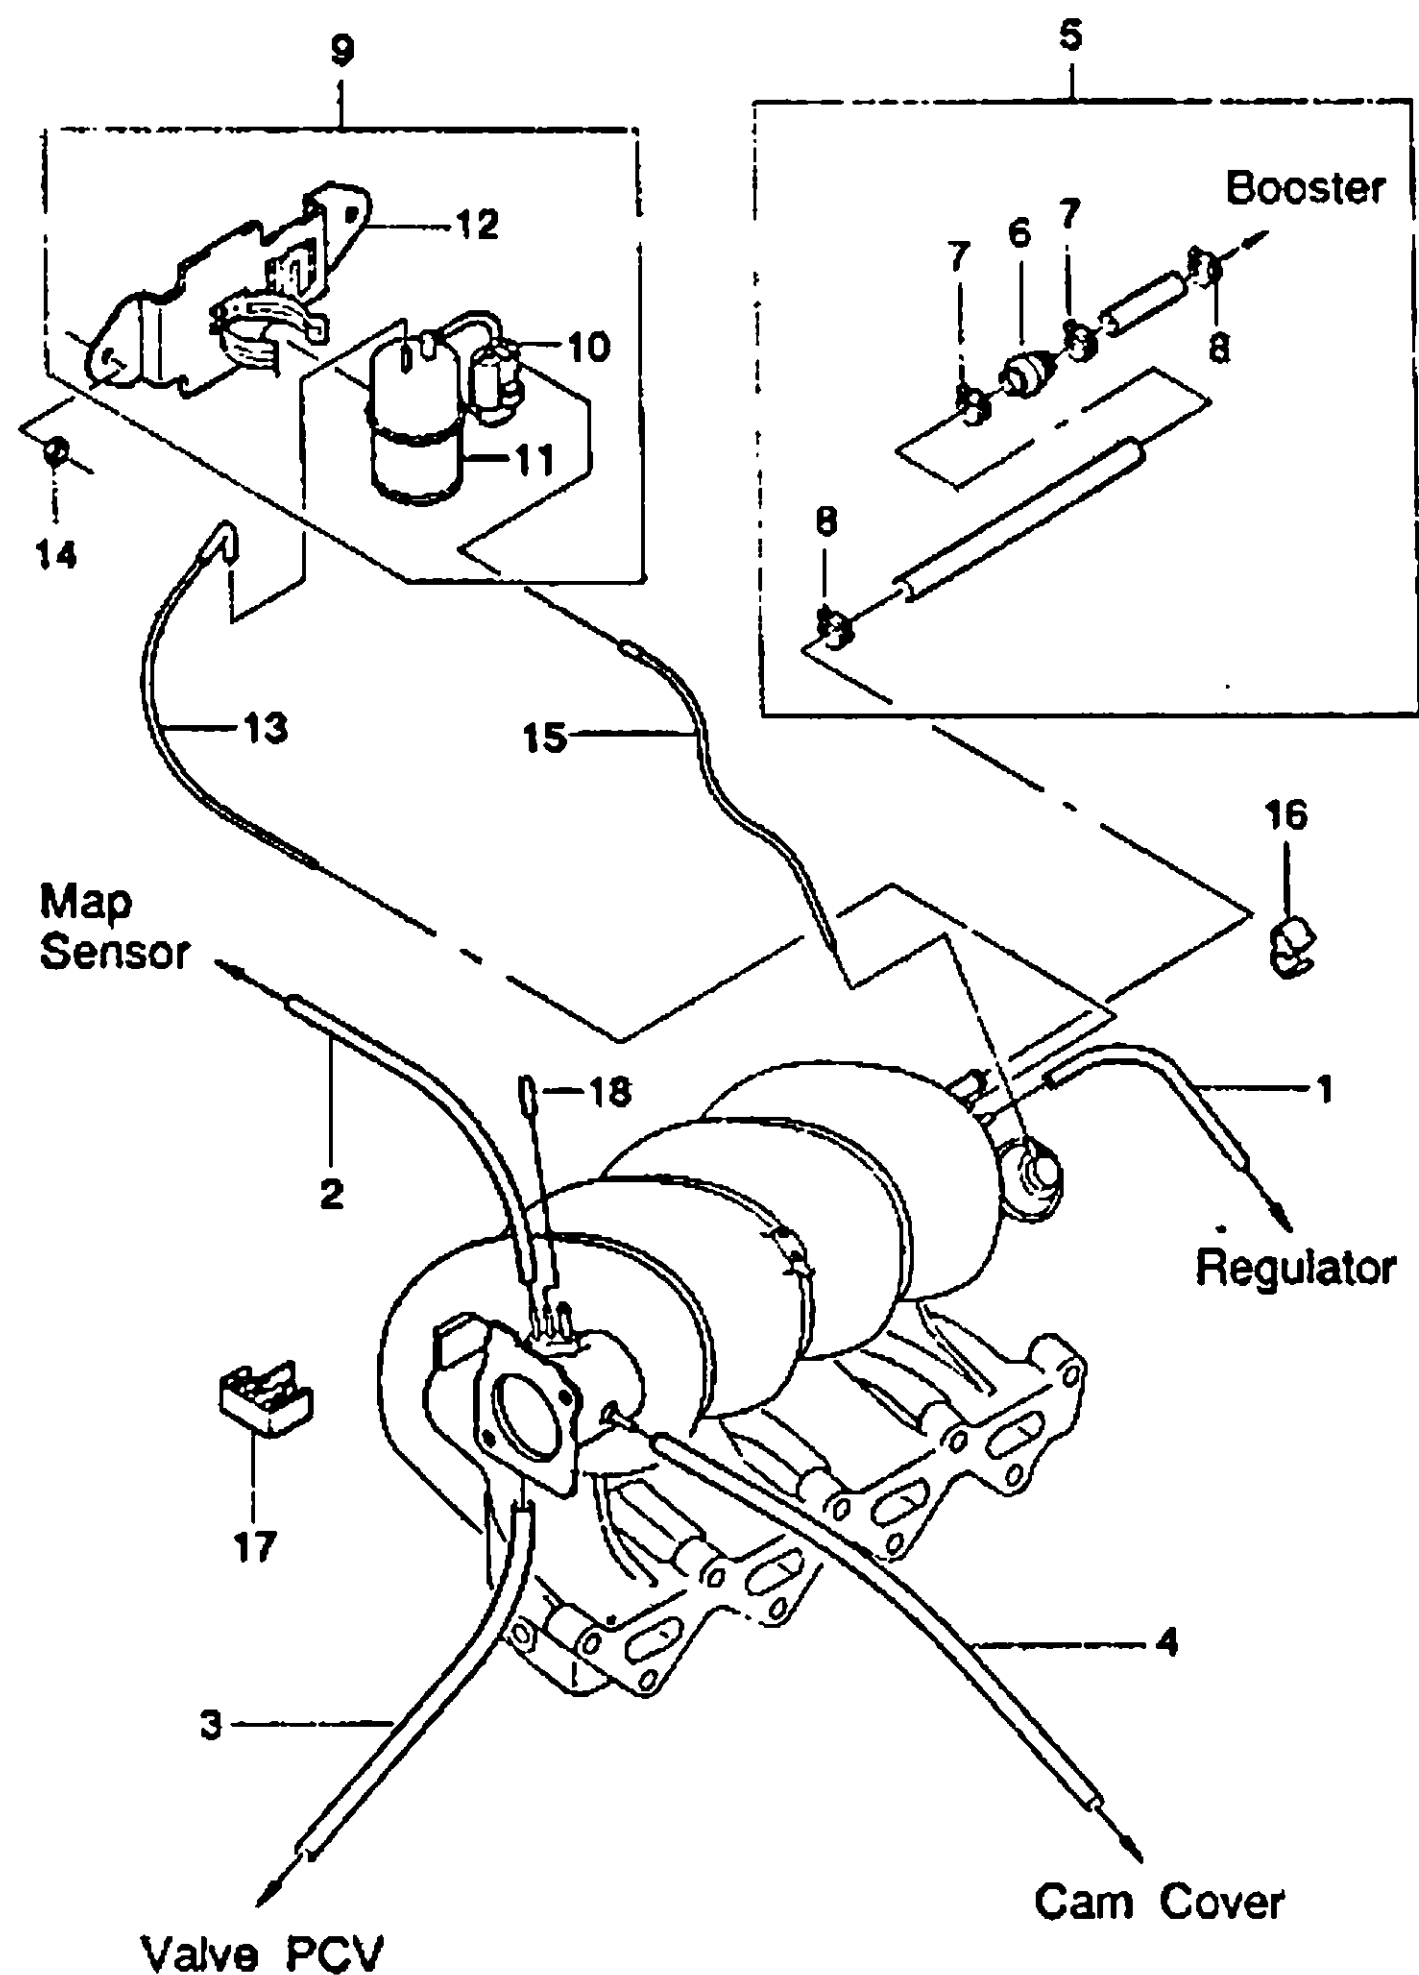


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N H	3 H	5 H	S S S								S E X
	96184584	6	.	B	B	B	.	.	O		1		(F)SOUPAPE (S)VALVULA		
	[10]														
	96350594	6	.	B	B	B	.	.	O		1		(F)RESERVOIR-DEPRESSION (S)TANQUE-VACIO		
	[11]														
	96350595	6	.	B	B	B	.	.	O		1		(F)SUPPORT (S)SOPORTE		
	[12]														
	96350597	6	.	B	B	B	.	.	O		1		(F)TUYAU-DEPRESSION (S)TUBERIA-VACIO		
	[13]														
	96244912	6	.	B	B	B	.	.	O		1		(F)ECROU (S)TUERCA		
	[14]														
	08316-25063	6	.	B	B	B	.	.	O		2		(F)TUYAU-DEPRESSION (S)TUBERIA-VACIO		
	[15]														
	96239379	6	.	B	B	B	.	.	O		1		(F)ATTACHE (S)GRAPA		
	[16]														
	09408-00030	6	.	B	B	B	.	.	O		1		(F)ATTACHE (S)GRAPA		
	[17]														
	09408-00081	6	.	B	B	B	.	.	O		2		(F)CHAPEAU (S)TAPA		
	[18]														
	90190478	6	.	B	B	B	.	.	O		1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

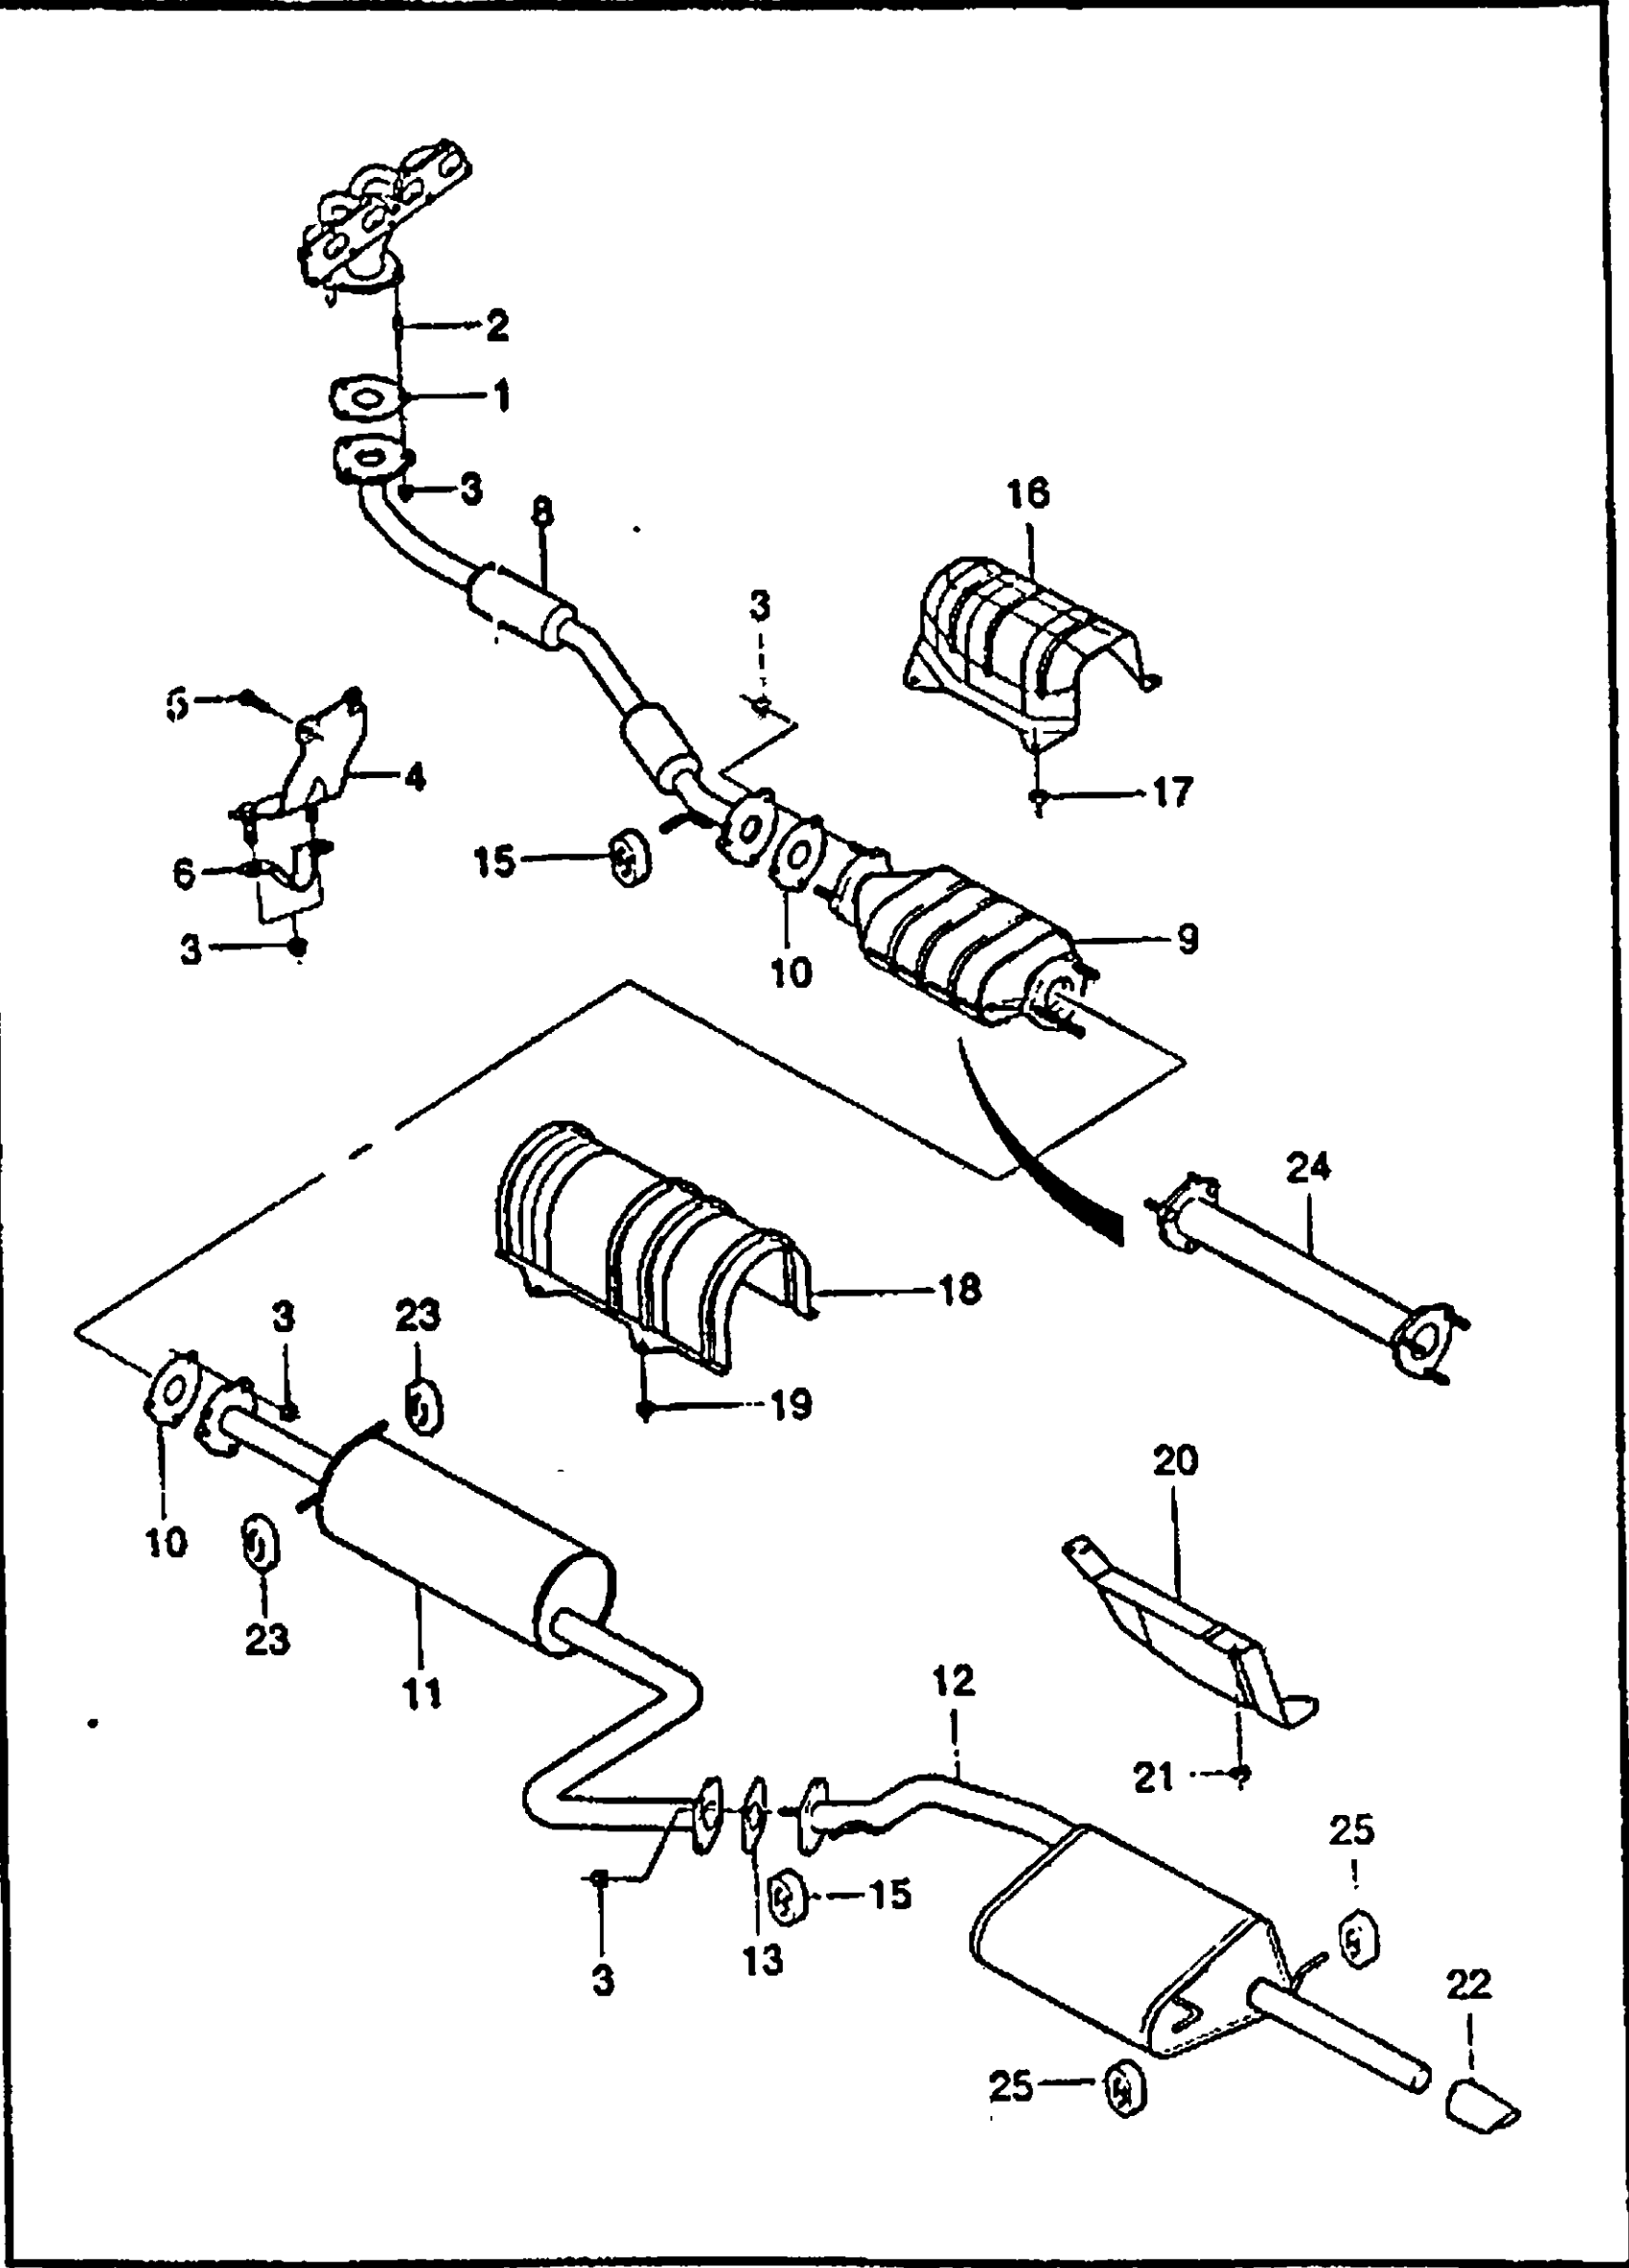


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	[01]	(E)GASKET-FRT EXHAUST PIPE (D)DICHTUNG									(F)JOINT (S)JUNTA-TUBERIA DE ESCAPE					
	96184840	.	.	B	B	B	S	S	S	1						
	[02]	(E)BOLT-STUD (D)STIFTSCHRAUBE									(F)BOULON-TETON (S)PERNO-ESPIGA					
	09108-10003	.	.	B	B	B	S	S	S	3						
	[03]	(E)NUT-HEXAGON LOCK (D)MUTTER									(F)ECROU (S)TUERCA					
	08311-38102	.	.	B	B	B	S	S	S	13						
	[04]	(E)BRACKET A-UPPER (D)TRÄGER									(F)SUPPORT (S)SOPORTE					
	96351913	.	.	B	B	B	S	S	S	1						
	[05]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE									(F)BOULON (S)PERNO					
	09103-10050	.	.	B	B	B	S	S	S	2						
	[06]	(E)BRACKET-LOWER (D)TRÄGER									(F)SUPPORT (S)SOPORTE					
	96351914	.	.	B	B	B	S	S	S	1						
	[08]	(E)PIPE A-EXHAUST, FRONT (D)ROHR									(F)TUYAU (S)TUBERIA					
	96182250	Y	M	B	B	B	S	S	S	1				TF		
	96352186	Y	A	B	B	B	O	O	O	1				TE		
	96352213	6	M	B	B	B	.	.	O	1				TG		
	96352215	6	A	B	B	B	.	.	O	1				TK		
	[09]	(E)CONVERTER A-CATALYTIC (D)KATALYSATOR									(F)CONVERTISSEUR-CATALYTIQUE (S)CONVERTIDOR-CATALITICO					
	96350081	Y	.	B	B	B	A	A	A	&NN6	1			KO		
	96351364	6	.	B	B	B	.	.	A	&NN6	1			KH		
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE										
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK										

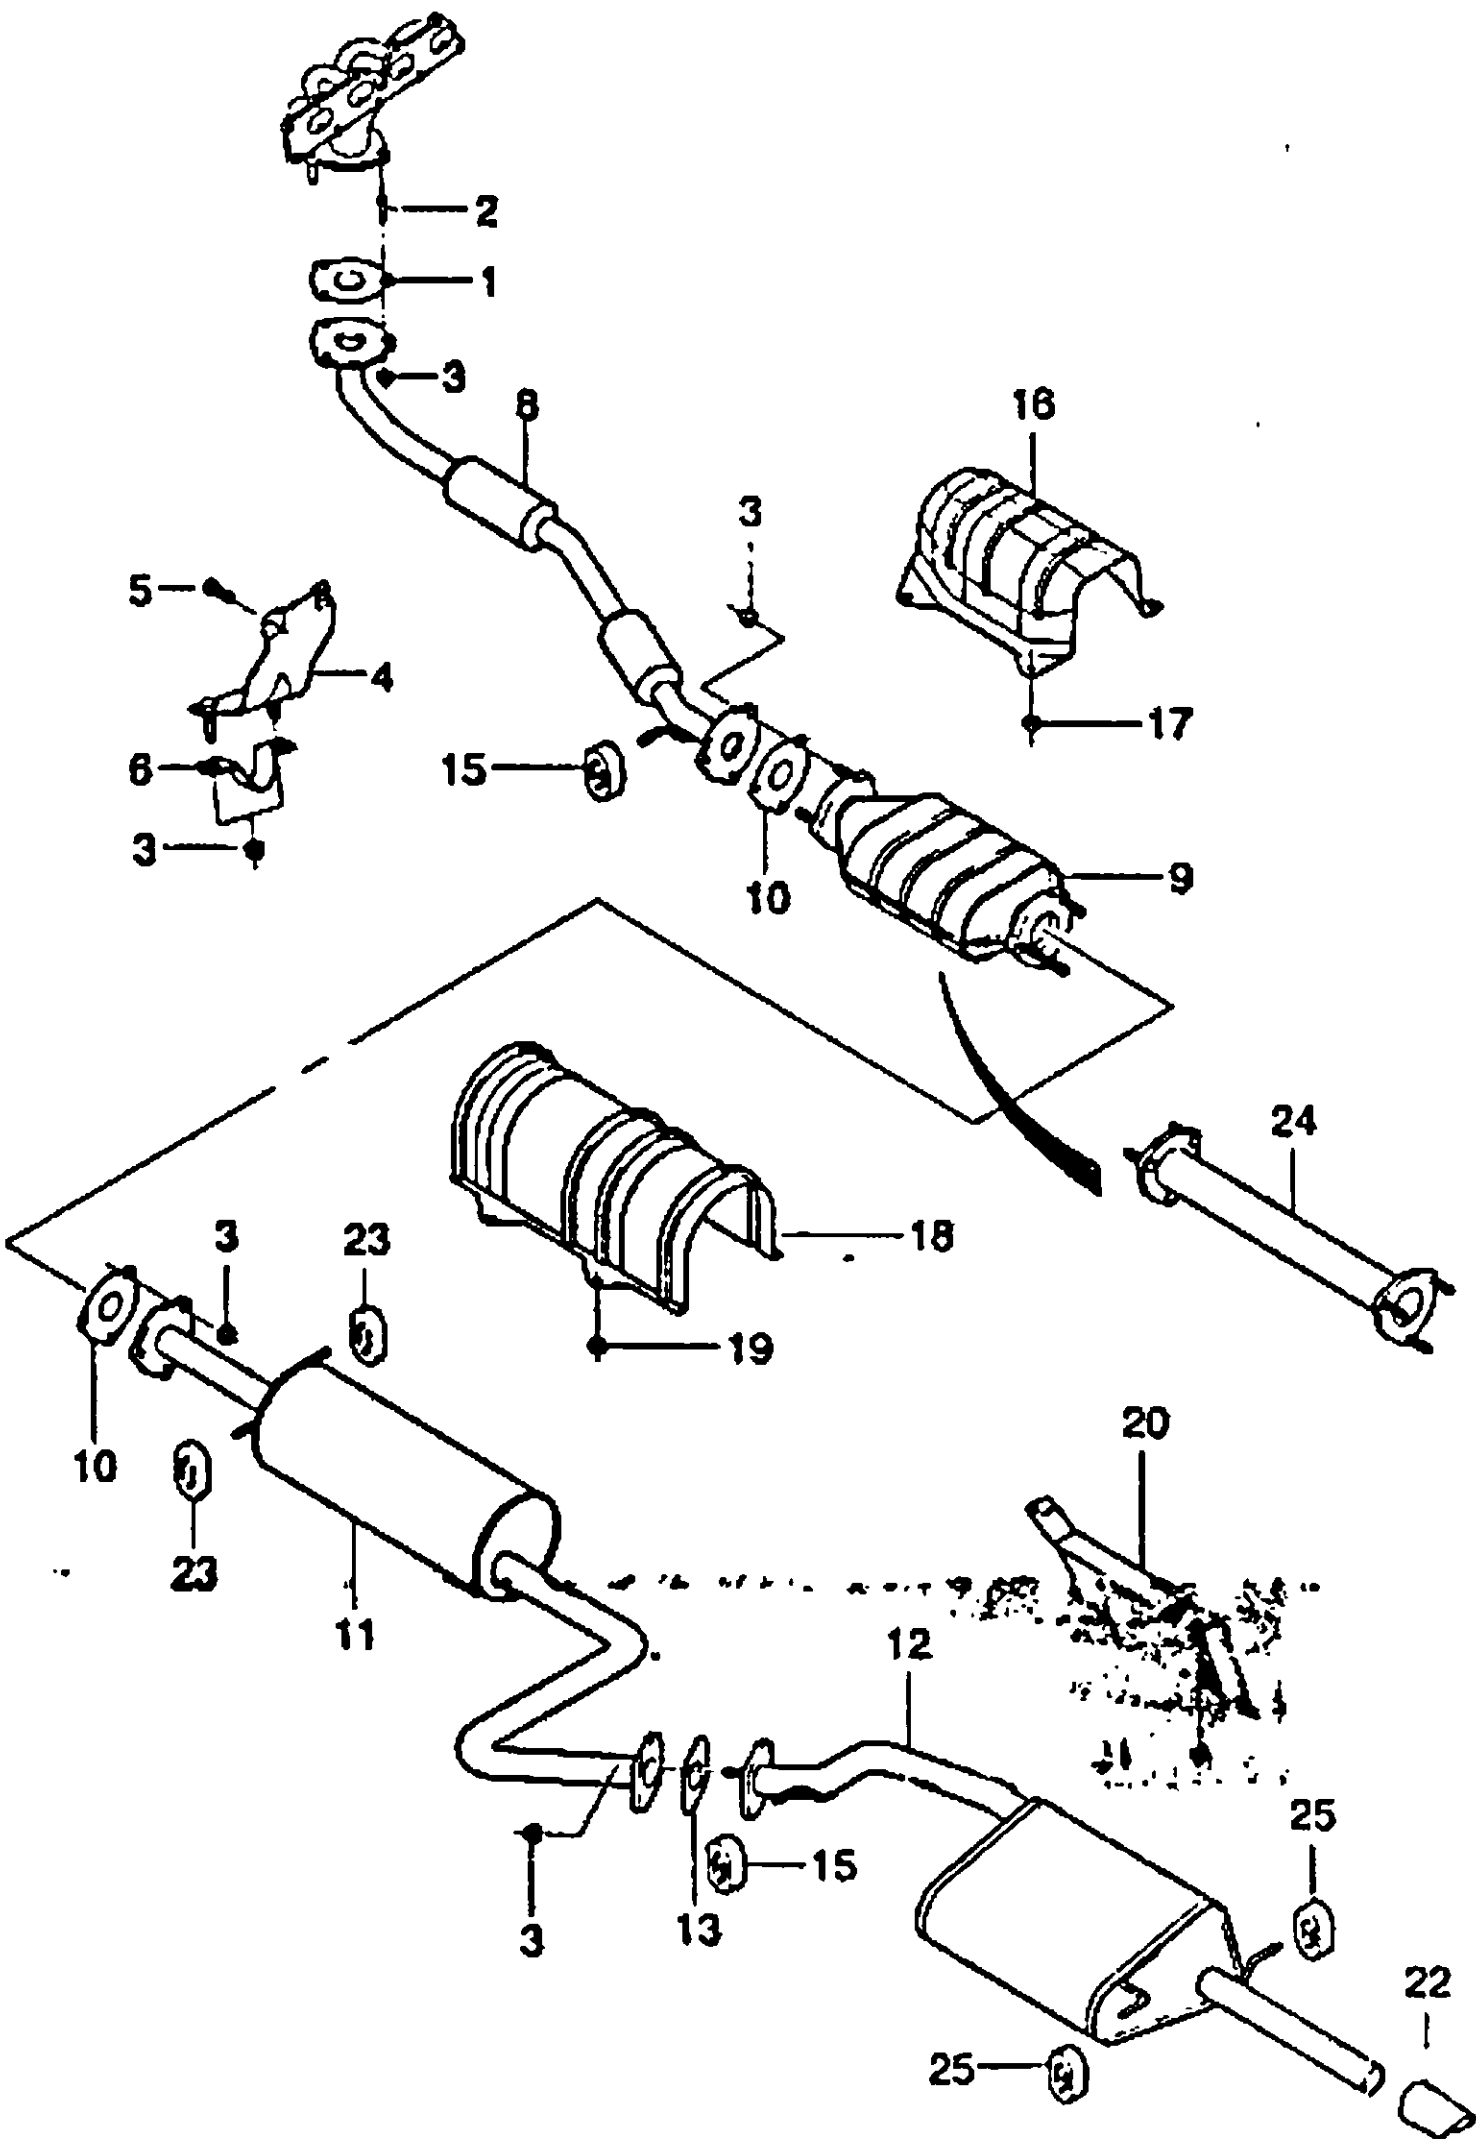

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	6 H	S								S	S
	96350080	.	.	B	B	B	A	A	A	8NN7		1			EO	
	[10]	(E)								GASKET-CATALYTIC CONVERTER	(F)			JOINT-CONVERTISSEUR VATAL		
		(D)								DICHTUNG	(S)			JUNTA-CONVERTIDOR VATAL		
	96350814	.	.	B	B	B	S	S	S			2				
	[11]	(E)								MUFFLER A-EXHAUST,FRONT	(F)			POT D'ECHAPPEMENT		
		(D)								AUSPUFFTOPF,VORNE	(S)			SILENCIADOR-ESCAPE-DELAN		
	96350723	.	.	B	B	B	S	S	S			1			TV	
	[12]	(E)								MUFFLER A-EXHAUST,REAR	(F)			POT D'ECHAPPEMENT		
		(D)								AUSPUFFTOPF,HINTEN	(S)			SILENCIADOR-ESCAPE		
	96350734	.	.	B	.	.	S	S	S			1			TX	
	96350703	.	.	.	B	B	S	.	S			1			TW	
	[13]	(E)								GASKET-REAR MUFFLER	(F)			JOINT		
		(D)								DICHTUNG	(S)			JUNTA		
	96181581	.	.	B	B	B	S	S	S			1				
	[15]	(E)								RUBBER-HANGER	(F)			CAOUTCHOUC		
		(D)								GUMMI	(S)			GOMA		
	96351529	.	.	B	B	B	S	S	S			2			NO. 1,3	
	[16]	(E)								SHIELD-CATALYTIC CONV.PRO	(F)			BOUCLIER-PROTECTION		
		(D)								SCHILD,KATALYSATOR	(S)			ESCUDO-PROTECTOR		
	96184956	.	.	B	B	B	S	S	S			1			OC	
	[17]	(E)								NUT-LOCK	(F)			ECROU		
		(D)								MUTTER	(S)			TUERCA		
	96351831	.	.	B	B	B	S	S	S			4				
	[18]	(E)								SHIELD-FRT MUFFLER PROTV.	(F)			BOUCLIER-PROTECTION		
		(D)								SCHILD,SCHALLDAMPFER	(S)			ESCUDO-PROTECTOR		
	96184957	.	.	B	B	B	S	S	S			1			OF	
	[19]	(E)								NUT-LOCK	(F)			ECROU		
		(D)								MUTTER	(S)			TUERCA		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

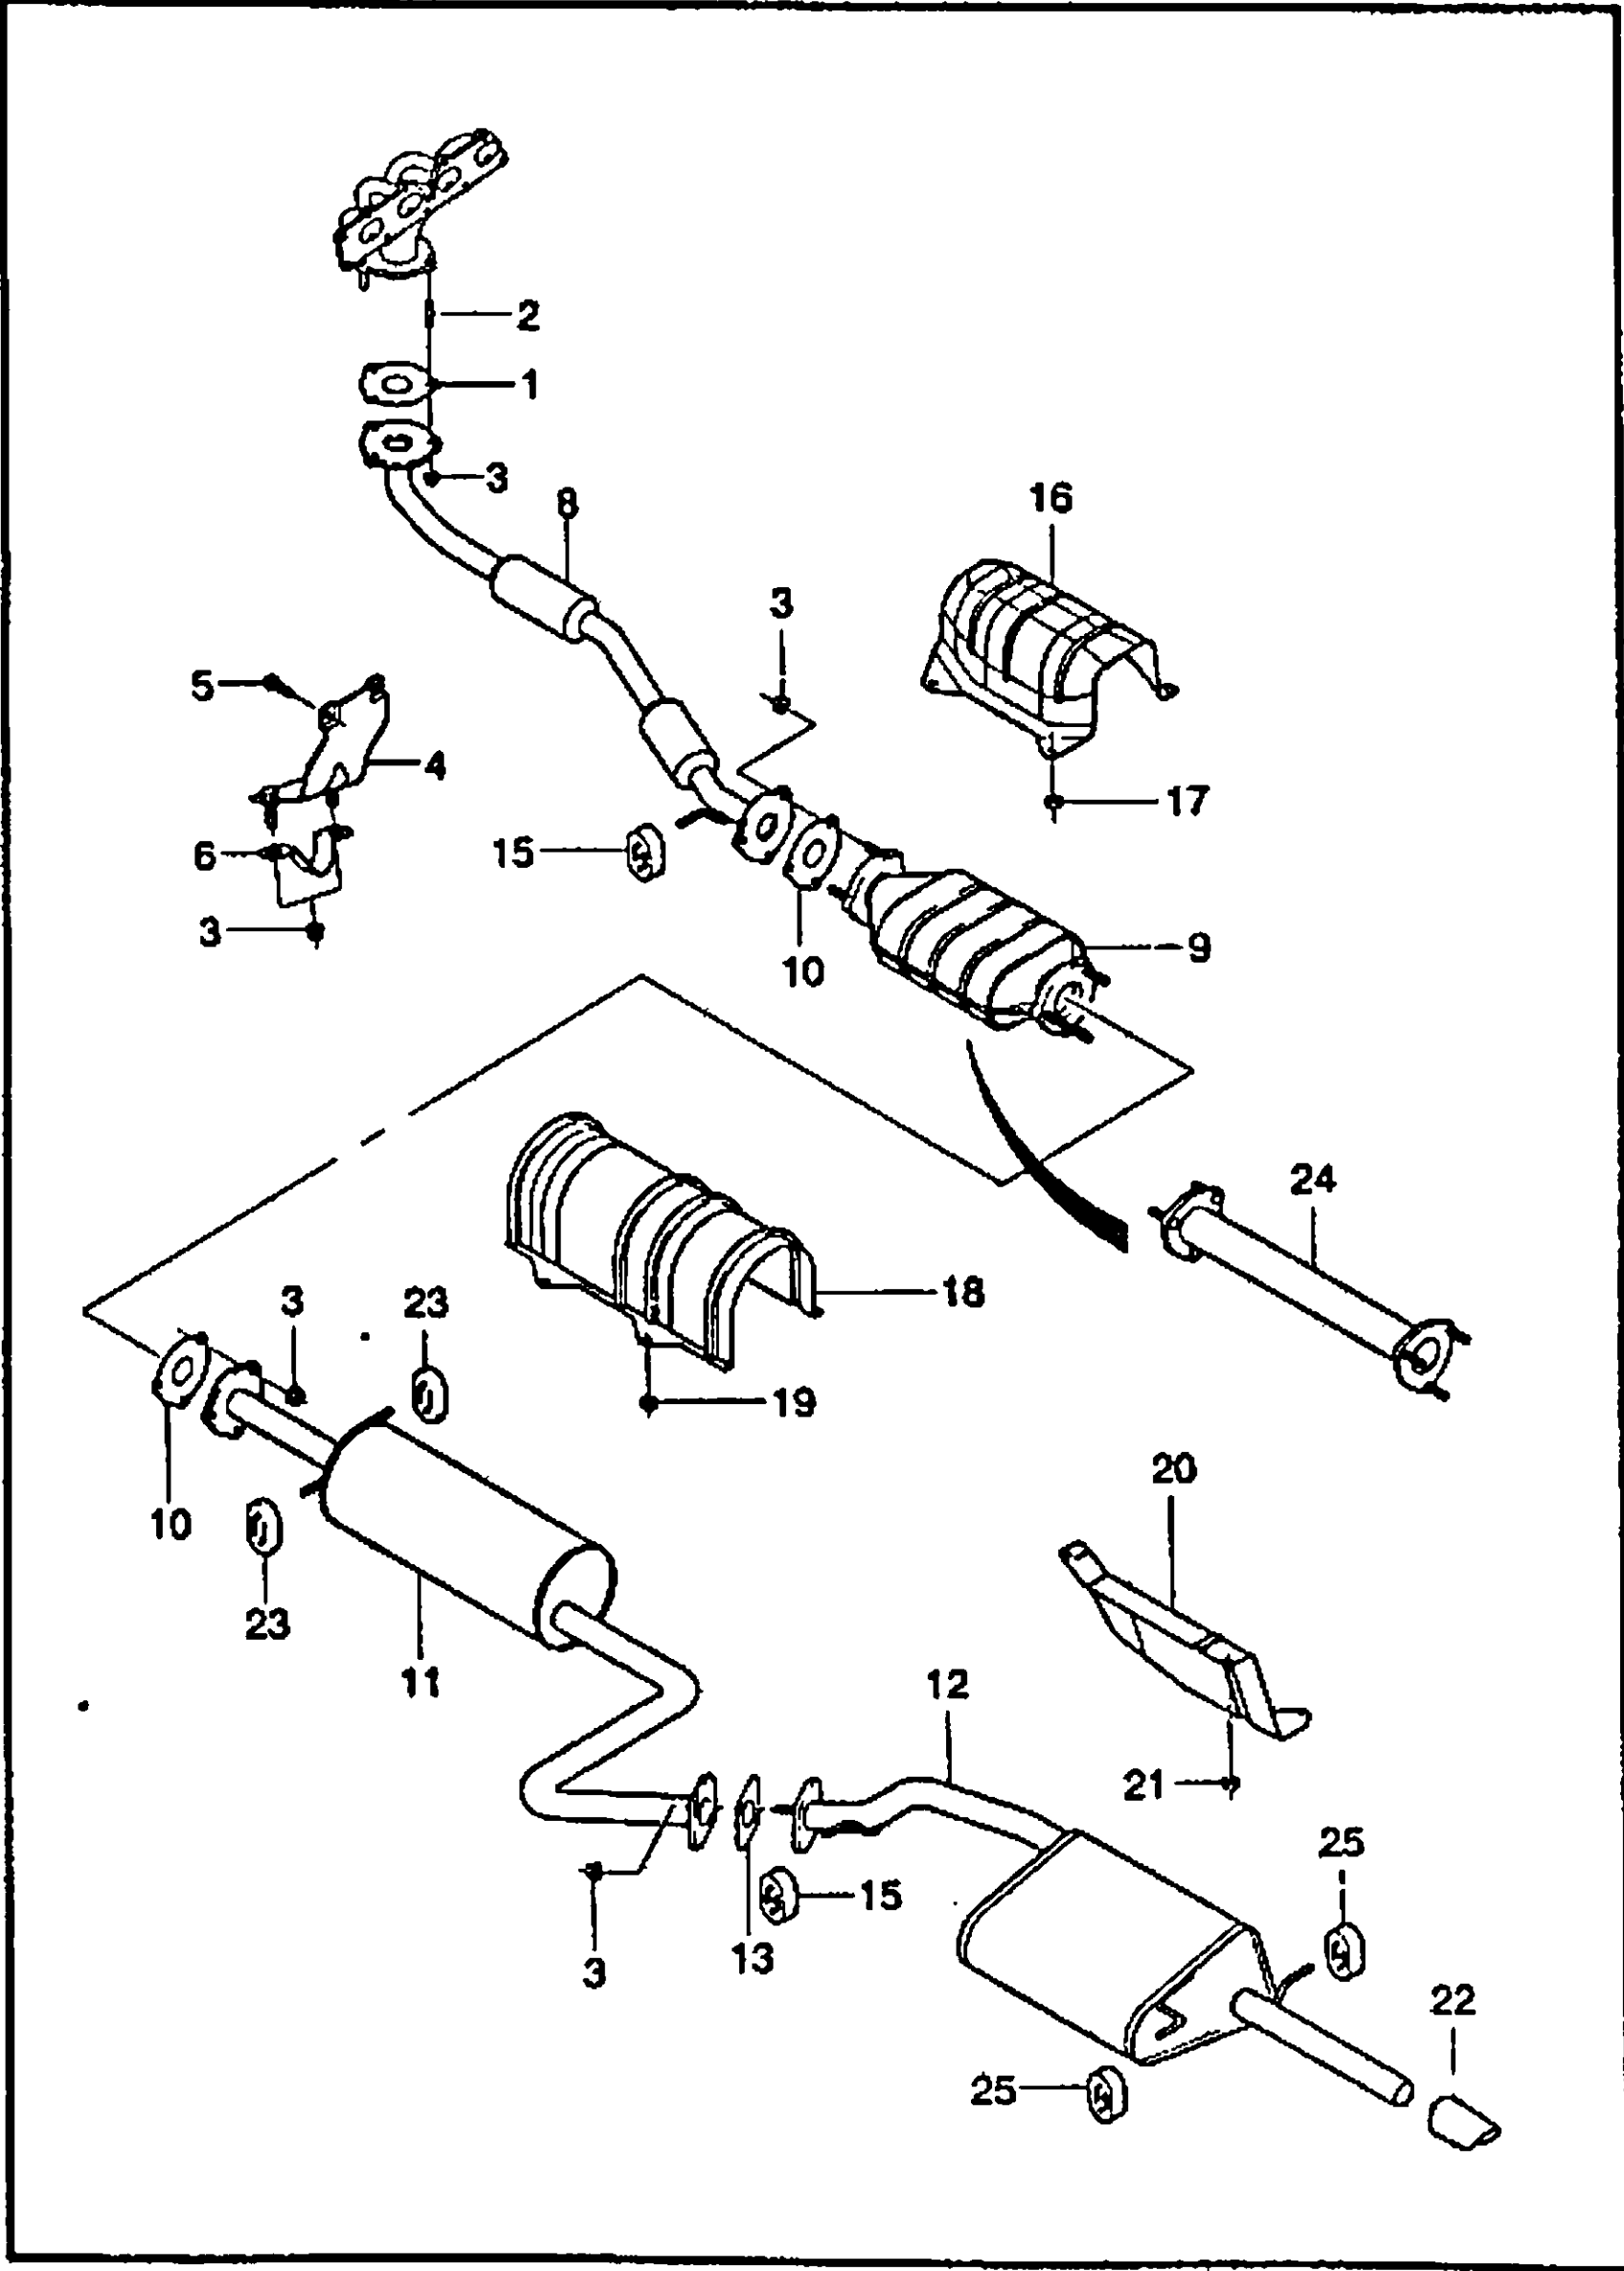


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	96351831	.	.	B	B	B	S	S	S		4					
	[20]	(E)SHIELD-RR MUFFLER PROTV. (D)SCHILD,SCHALLDÄMPFER										(F)BOUCLIER-PROTECTION (S)ESCUDO-PROTECTOR				
	96350492	.	.	B	B	B	S	S	S		1				GR	
	[21]	(E)NUT-LOCK (D)MUTTER										(F)ECROU (S)TUERCA				
	96351831	.	.	B	B	B	S	S	S		4					
	[22]	(E)RING-TRIM,EXHAUST (D)RING,AUSPUFF-VERZIERUNG										(F)ANNEAU (S)ANILLO-ADORNO				
	96180147	.	.	B	B	B	S	S	S		1					
	[23]	(E)RUBBER-HANGER (D)GUMMI										(F)CAOUTCHOUC (S)GOMA				
	96351183	.	.	B	B	B	S	S	S		2			NO. 2		
	[24]	(E)PIPE A-EXHAUST,CONNECTOR (D)ROHR										(F)TUYAU (S)TUBERIA				
	96351601	.	.	B	B	B	S	S	S	8NN4	1					
	[25]	(E)RUBBER-HANGER (D)GUMMI										(F)CAOUTCHOUC (S)GOMA				
	96181437	.	.	B	B	B	S	S	S		2			NO. 4,5		
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE										
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK										

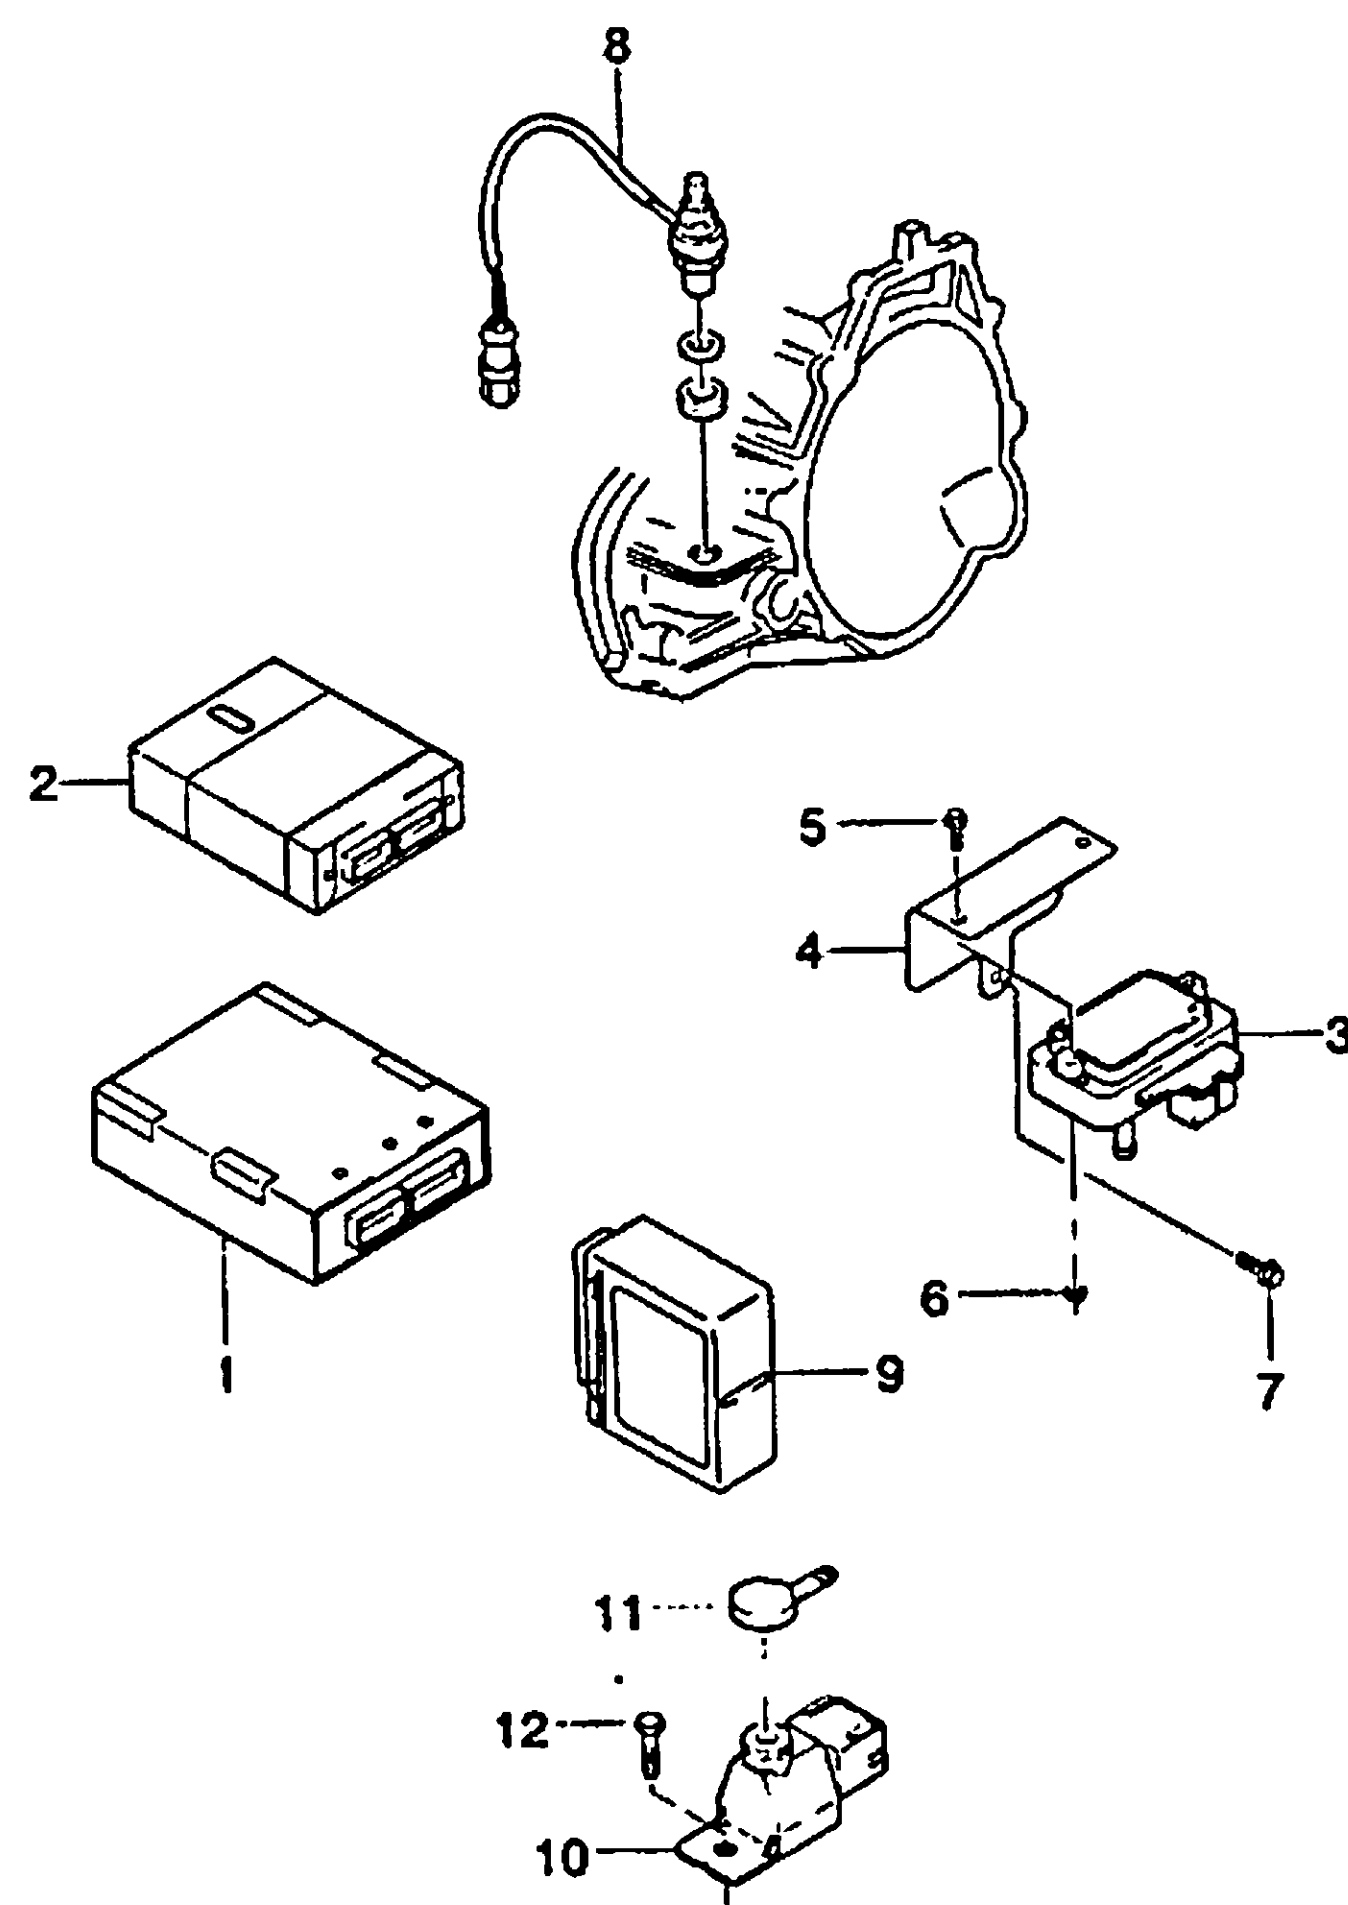


NOTE : @1-GENERAL AREA
 @3-LOW VOLATILITY AREA
 @4-HOT AREA
 @2-HIGH ALITUDE AREA
 @5-COLD AREA

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S S								S S S	S S S
	[01]	(E)MODULE-ENGINE CONTROL (D)STEUERUNGS-EINHEIT									(F)UNITE DE CONTROLE (S)UNIDAD DE CONTROL					
	16245849	Y	M	B	B	B	S	S	S	&NN4-UM1	1		@1	JJ		
	16249619	Y	M	B	B	B	A	A	A	&NN4&UM1	1		@1	JX		
	16240269	Y	M	B	B	B	A	A	A	&NN6-UM1	1		@1	BB		
	16269529	Y	M	B	B	B	A	A	A	&NN6&UM1	1		@1	PP		
	16247139	Y	M	B	B	B	A	A	A	&NN7-UM1	1		@1	GC		
	16247149	Y	M	B	B	B	A	A	A	&NN7&UM1	1		@1	CA		
	16245859	Y	A	B	B	B	O	O	O	&NN4-UM1	1		@1	JL		
	16249639	Y	A	B	B	B	A	A	A	&NN4&UM1	1		@1	JY		
	16240279	Y	A	B	B	B	A	A	A	&NN6-UM1	1		@1	BD		
	16269539	Y	A	B	B	B	A	A	A	&NN6&UM1	1		@1	PV		
	16247159	Y	A	B	B	B	A	A	A	&NN7-UM1	1		@1	GD		
	16247169	Y	A	B	B	B	A	A	A	&NN7&UM1	1		@1	CN		
	16247079	Y	M	B	B	B	A	A	A	&NN4-UM1/VB4	1		@2	KD		
	96257285	Y	M	B	B	B	A	A	A	&NN4&VB4-UM1	1		@2	GA		
	16247089	Y	M	B	B	B	A	A	A	&NN4&UM1	1		@2	KL		
	16245839	Y	M	B	B	B	A	A	A	&NN6-UM1	1		@2	HJ		
	16247099	Y	A	B	B	B	A	A	A	&NN4-UM1/VB4	1		@2	KF		
	96257286	Y	A	B	B	B	A	A	A	&NN4&VB4-UM1	1		@2	GB		
	16247109	Y	A	B	B	B	A	A	A	&NN4&UM1	1		@2	KM		
	16246579	Y	A	B	B	B	A	A	A	&NN6-UM1	1		@2	HN		
	16245869	Y	M	B	B	B	A	A	A	&NN6-UM1	1		@3	HY		
	16245879	Y	A	B	B	B	A	A	A	&NN6-UM1	1		@3	HZ		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC = COMMON		M = MANUAL T/A A = AUTOMATIC T/A = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

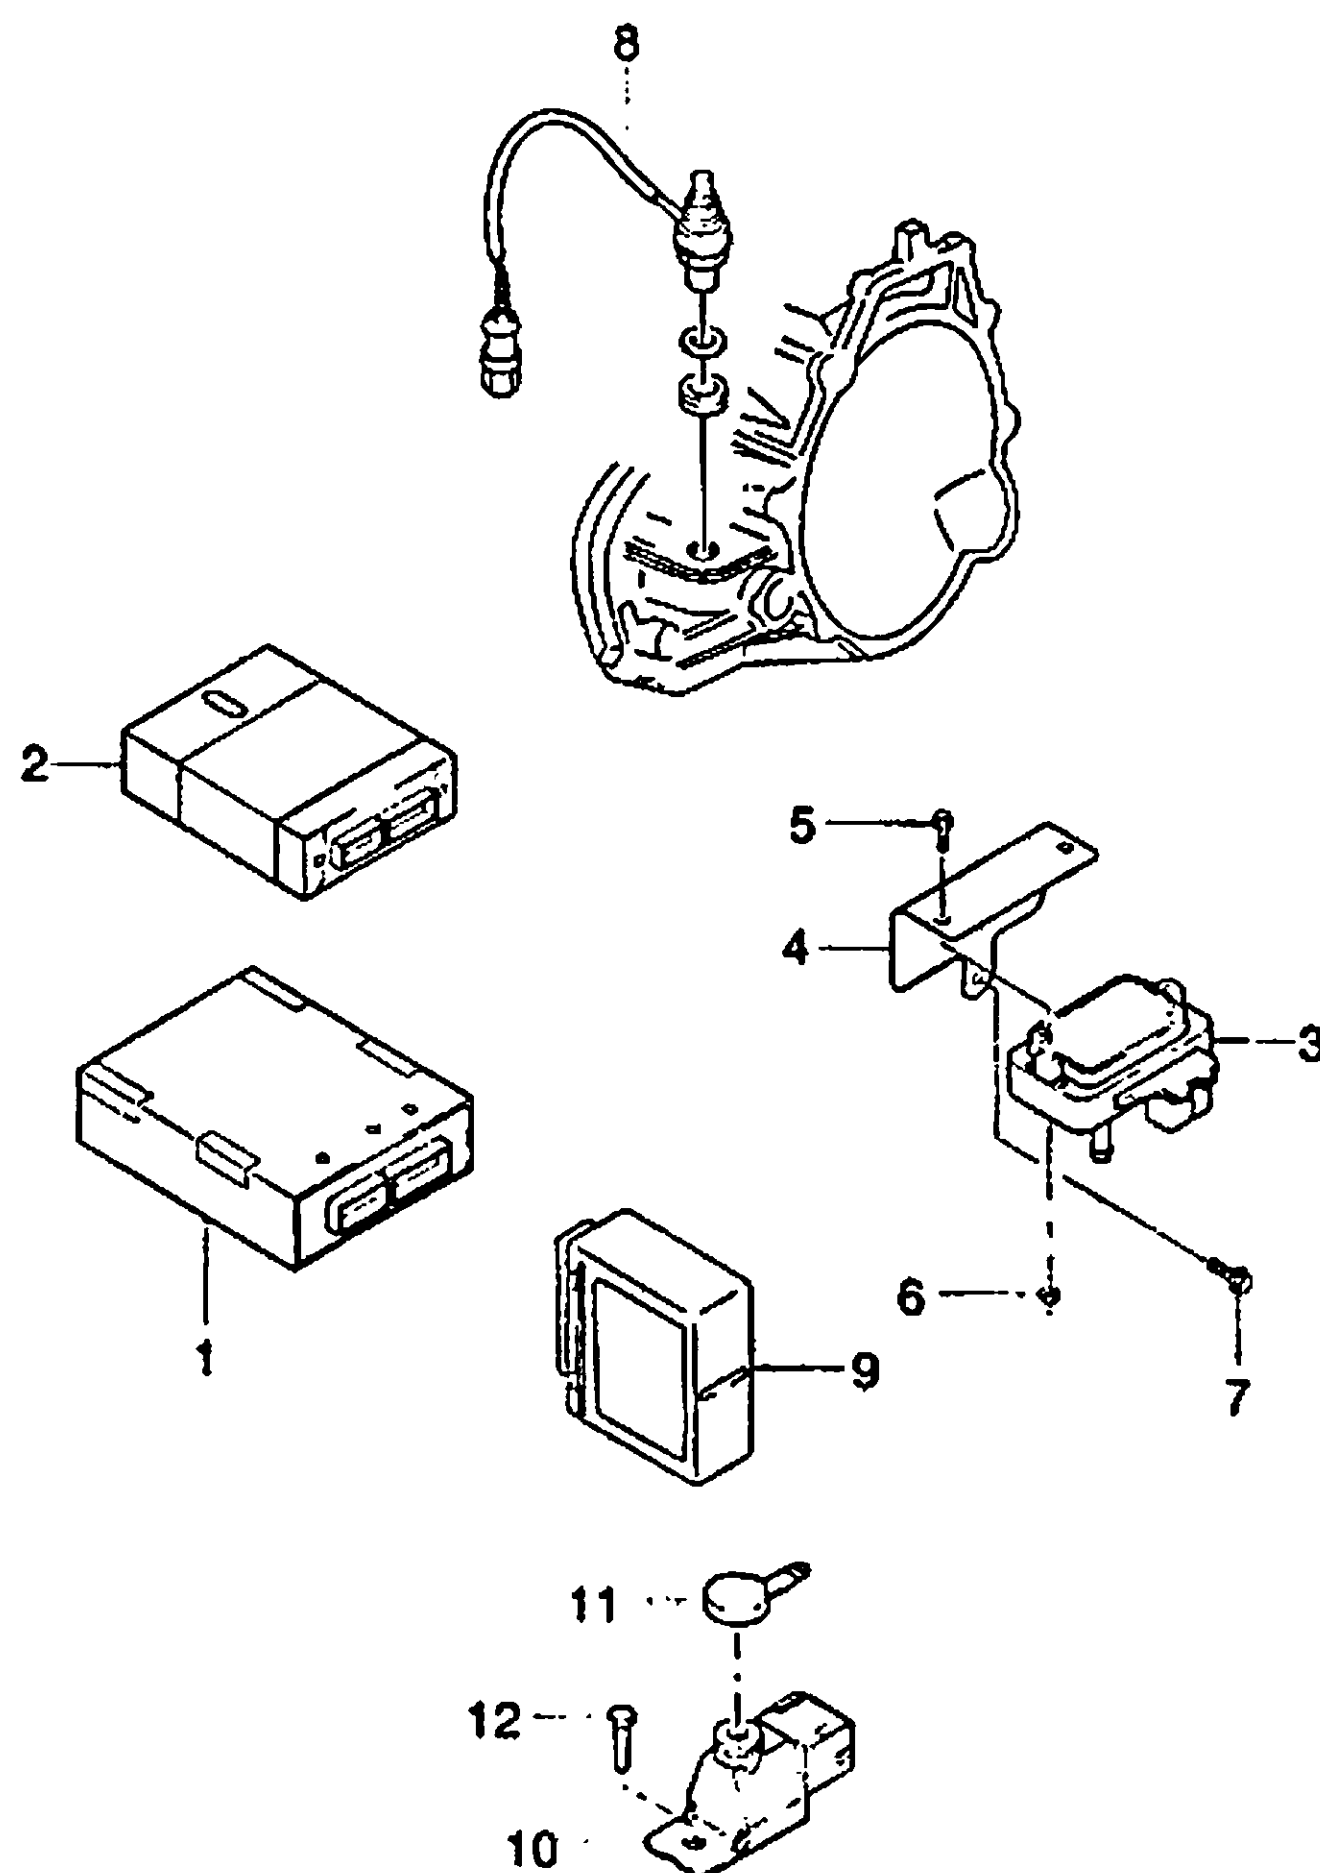


NOTE : @1-GENERAL AREA @2-HIGH ALITUDE AREA
 @3-LOW VOLATILITY AREA @4-HOT AREA
 @5-COLD AREA

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S E X
	16247119	Y M	B B B	A A A			&NN4-UM1/VB4		1			@4	KV		
	96257287	Y M	B B B	A A A			&NN4&VB4-UM1		1			@4	GG		
	16247179	Y M	B B B	A A A			&NN7-UM1		1			@4	JC		
	16269499	Y M	B B B	A A A			&NN7&EC2&UM1		1			@4	PW		
	16247129	Y A	B B B	A A A			&NN4-UM1/VB4		1			@4	KW		
	96257288	Y A	B B B	A A A			&NN4&VB4-UM1		1			@4	GH		
	16247199	Y A	B B B	A A A			&NN7-UM1		1			@4	JD		
	16269509	Y A	B B B	A A A			&NN7&EC2&UM1		1			@4	PX		
	16247059	Y M	B B B	A A A			&NN4-UM1		1			@5	JZ		
	16247069	Y A	B B B	A A A			&NN4-UM1		1			@5	KC		
	16246179	6 M	B B B	.	.	O	&NN4-UM1		1			@1	MV		
	16249689	6 M	B B B	.	.	A	&NN4&UM1		1			@1	MX		
	16246159	6 M	B B B	.	.	A	&NN6-UM1		1			@1	GF		
	16246159	6 M	B B B	.	.	A	&NN7-UM1		1			@1	GF		
	16246939	6 M	B B B	.	.	A	&NN7&UM1		1			@1	CQ		
	16246189	6 A	B B B	.	.	O	&NN4-UM1		1			@1	MW		
	16249699	6 A	B B B	.	.	A	&NN4&UM1		1			@1	MY		
	16246169	6 A	B B B	.	.	A	&NN6-UM1		1			@1	GJ		
	16246169	6 A	B B B	.	.	A	&NN7-UM1		1			@1	GJ		
	16246899	6 A	B B B	.	.	A	&NN7&UM1		1			@1	CS		
	16249729	6 M	B B B	.	.	A	&NN4-UM1/VB4		1			@2	NH		
	16269989	6 M	B B B	.	.	A	&NN4VB4-UM1		1			@2	GM		
	16249749	6 M	B B B	.	.	A	&NN4&UM1		1			@2	NZ		
	16249649	6 M	B B B	.	.	A	&NN7-UM1		1			@2	KX		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

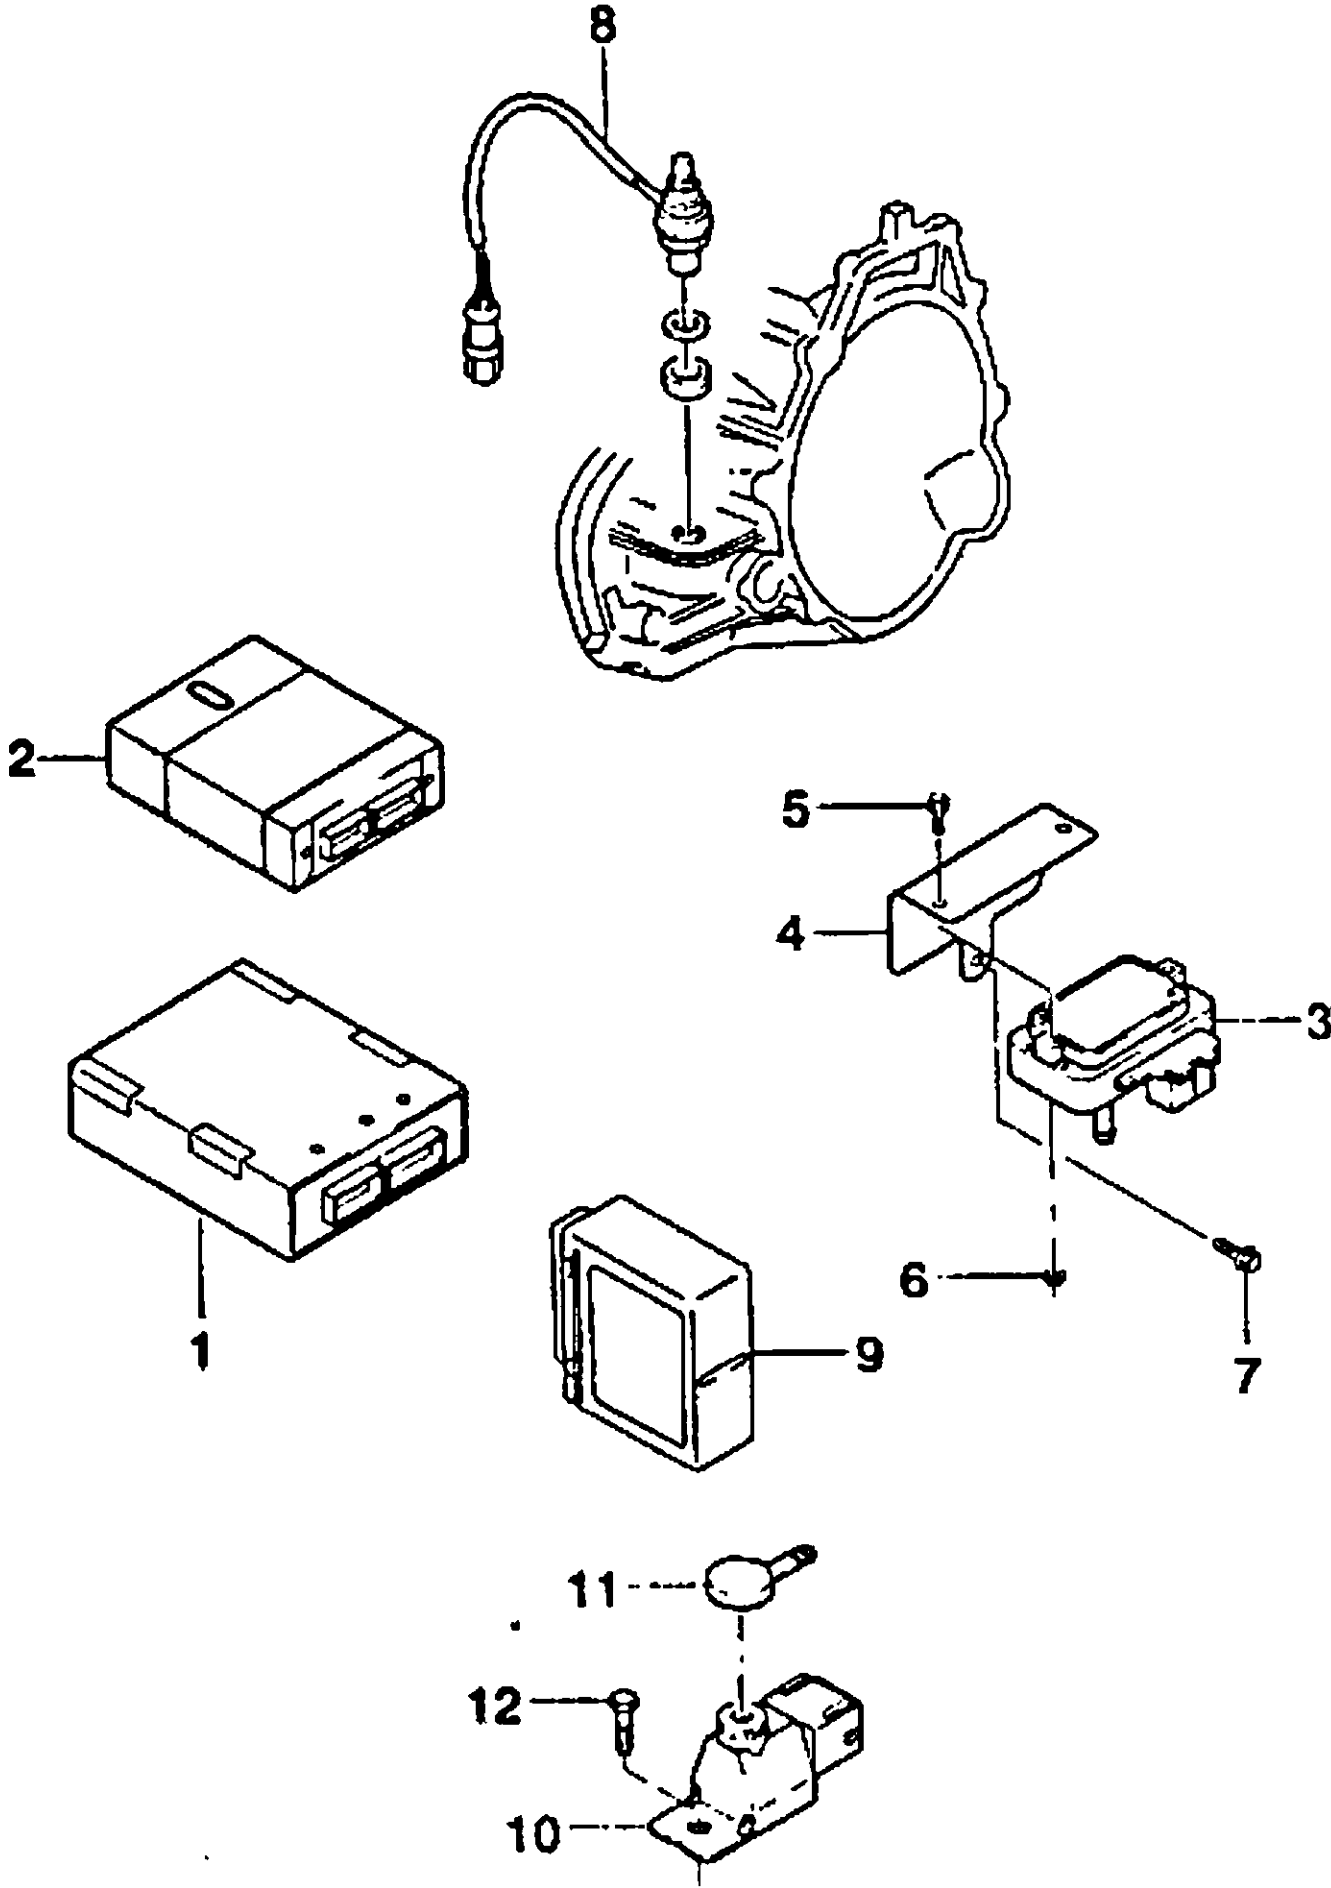

NOTE : @1-GENERAL AREA @2-HIGH ALITUDE AREA
 @3-LOW VOLATILITY AREA @4-HOT AREA
 @5-COLD AREA


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S S								S E X	
	16249739	6	A	B	B	B	.	A	&NN4-UM1/VB4		1		@2	NN		
	16269999	6	A	B	B	B	.	A	&NN4VB4-UM1		1		@2	GP		
	16249759	6	A	B	B	B	.	A	&NN4&UM1		1		@2	PC		
	16249659	6	A	B	B	B	.	A	&NN7-UM1		1		@2	KY		
	16249669	6	M	B	B	B	.	A	&NN7-UM1		1		@3	KZ		
	16249679	6	A	B	B	B	.	A	&NN7-UM1		1		@3	MM		
	16249769	6	M	B	B	B	.	A	&NN4-UM1/VB4		1		@4	PD		
	09350009	6	M	B	B	B	.	A	&NN4&VB4-UM1		1		@4	GQ		
	16269549	6	M	B	B	B	.	A	&NN4&UM1		1		@4	QA		
	16246199	6	M	B	B	B	.	A	&NN7-UM1		1		@4	MN		
	16269599	6	M	B	B	B	.	A	&NN7&EC2&UM1		1		@4	PY		
	16249779	6	A	B	B	B	.	A	&NN4-UM1/VB4		1		@4	PE		
	09350019	6	A	B	B	B	.	A	&NN4&VB4-UM1		1		@4	GR		
	16269559	6	A	B	B	B	.	A	&NN4&UM1		1		@4	QD		
	16246209	6	A	B	B	B	.	A	&NN7-UM1		1		@4	MR		
	16269609	6	A	B	B	B	.	A	&NN7&EC2&UM1		1		@4	PZ		
	16249709	6	M	B	B	B	.	A	&NN4-UM1		1		@5	MZ		
	16249719	6	A	B	B	B	.	A	&NN4-UM1		1		@5	NF		
	16269579	6	M	B	B	B	.	A	&KL9		1		FOR BRAZIL	MS		
	16269589	6	A	B	B	B	.	A	&KL9		1		FOR BRAZIL	MT		
	[02]	(E)MODULE-TRANSAXLE CONTROL (D)MODUL								(F)MODULE (S)MODULO						
	16245799	Y	A	B	B	B	O	O	O		1	970714		WK		
	O 16265669	Y	A	B	B	B	O	O	O		1	970714		XY		
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

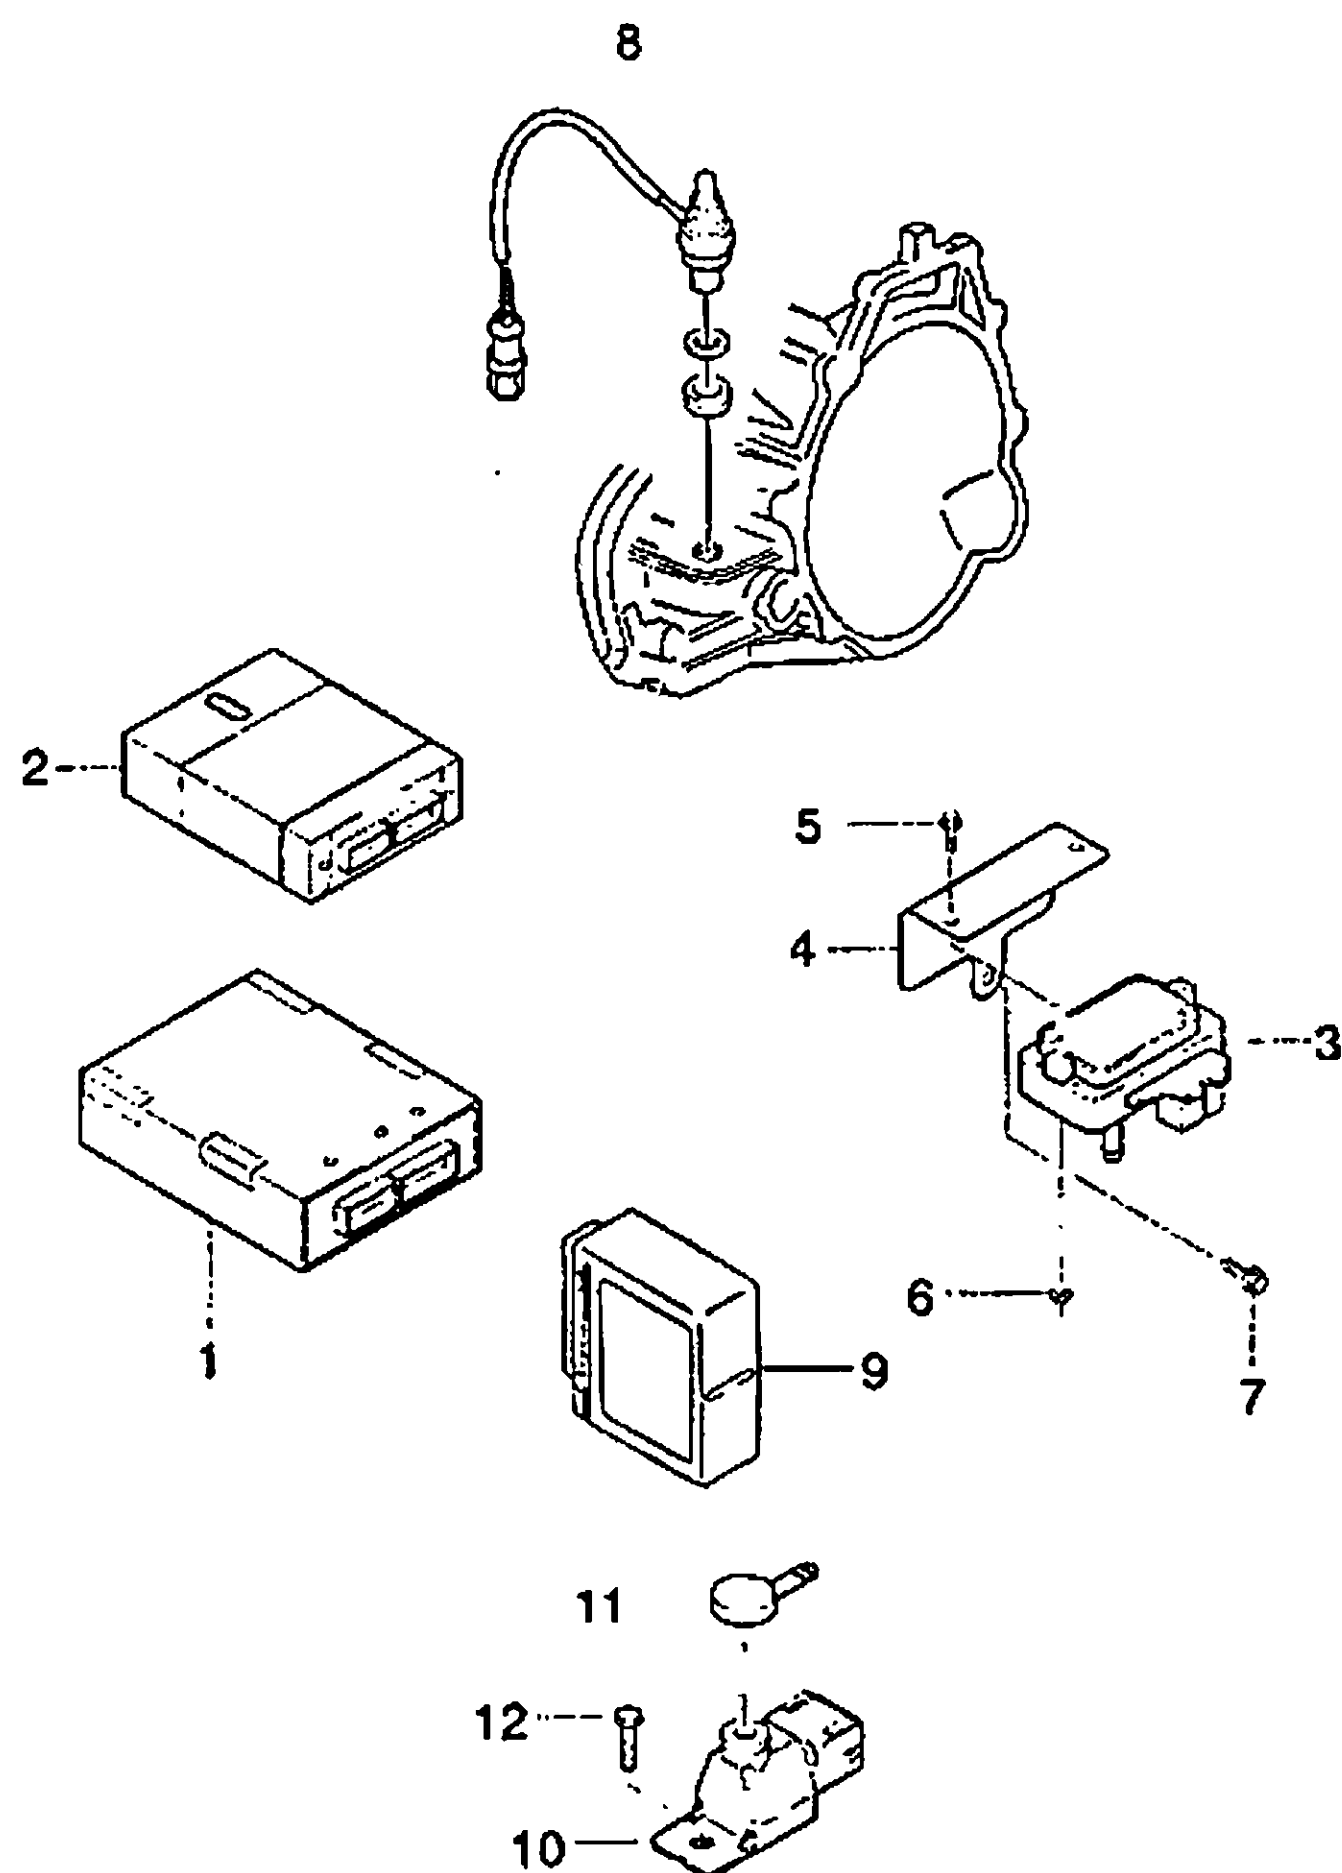

NOTE: @1-GENERAL AREA @2-HIGH ALTITUDE AREA
 @3-LOW VOLATILITY AREA
 @4-HOT AREA @5-COLD AREA



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	16245779	6	A	B	B	B	.	.	O		1				WM	
	[13]	(E)SENSOR A-M.A.P.	(D)SENSOR,VAKUUM								(F)DETECTEUR-DEPRESSION	(S)SENSOR-VACIO				
	1613/039	.	.	B	B	B	S	S	S		1					
	[04]	(E)BRACKET M.A.P. SENSOR	(D)TRÄGER,VAKUUM								(F)SUPPORT-DEPRESSION	(S)SOPORTE-VACIO				
	96351294	.	.	B	B	B	S	S	S		1					
	[05]	(E)BOLT-HEXAGON FLANGE	(D)SCHRAUBE								(F)BOULON	(S)PERNO				
	01517-06305	.	.	B	B	B	S	S	S		2					
	[06]	(E)NUT-HEXAGON FLANGE	(D)MUTTER								(F)ECROU	(S)TUERCA				
	08316-25065	.	.	B	B	B	S	S	S		2					
	[07]	(E)BOLT-HEXAGON FLANGE	(D)SCHRAUBE								(F)BOULON	(S)PERNO				
	01114-06125	.	.	B	B	B	S	S	S		1					
	[08]	(E)SENSOR A-DISTANCE	(D)SENSOR,ENTFERNUNG								(F)DETECTEUR-DISTANCE	(S)SENSOR-DISTANCIA				
	96190708	.	M	B	B	B	S	S	S		1				TS	
	[09]	(E)CONTROL UNIT-IMMOBILIZER	(D)STEUERUNGS-EINHEIT								(F)UNITE DE CONTROLE	(S)UNIDAD DE CONTROL				
	96303500	.	.	B	B	B	A	A	A	&UM1	1					
	[10]	(E)POTENTIOMETER CO	(D)POTENTIOMETER								(F)COMPTEUR DE POTENTIEL	(S)CONDATOR DE POTENCIAL				
	90306761	.	.	B	B	B	S	S	S	&NN4	1					
	[11]	(E)CAP-ANTI TAMPER	(D)DECKEL								(F)CHAPEAU	(S)TAPA				
	90243777	.	.	B	B	B	S	S	S	&NN4	1					

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

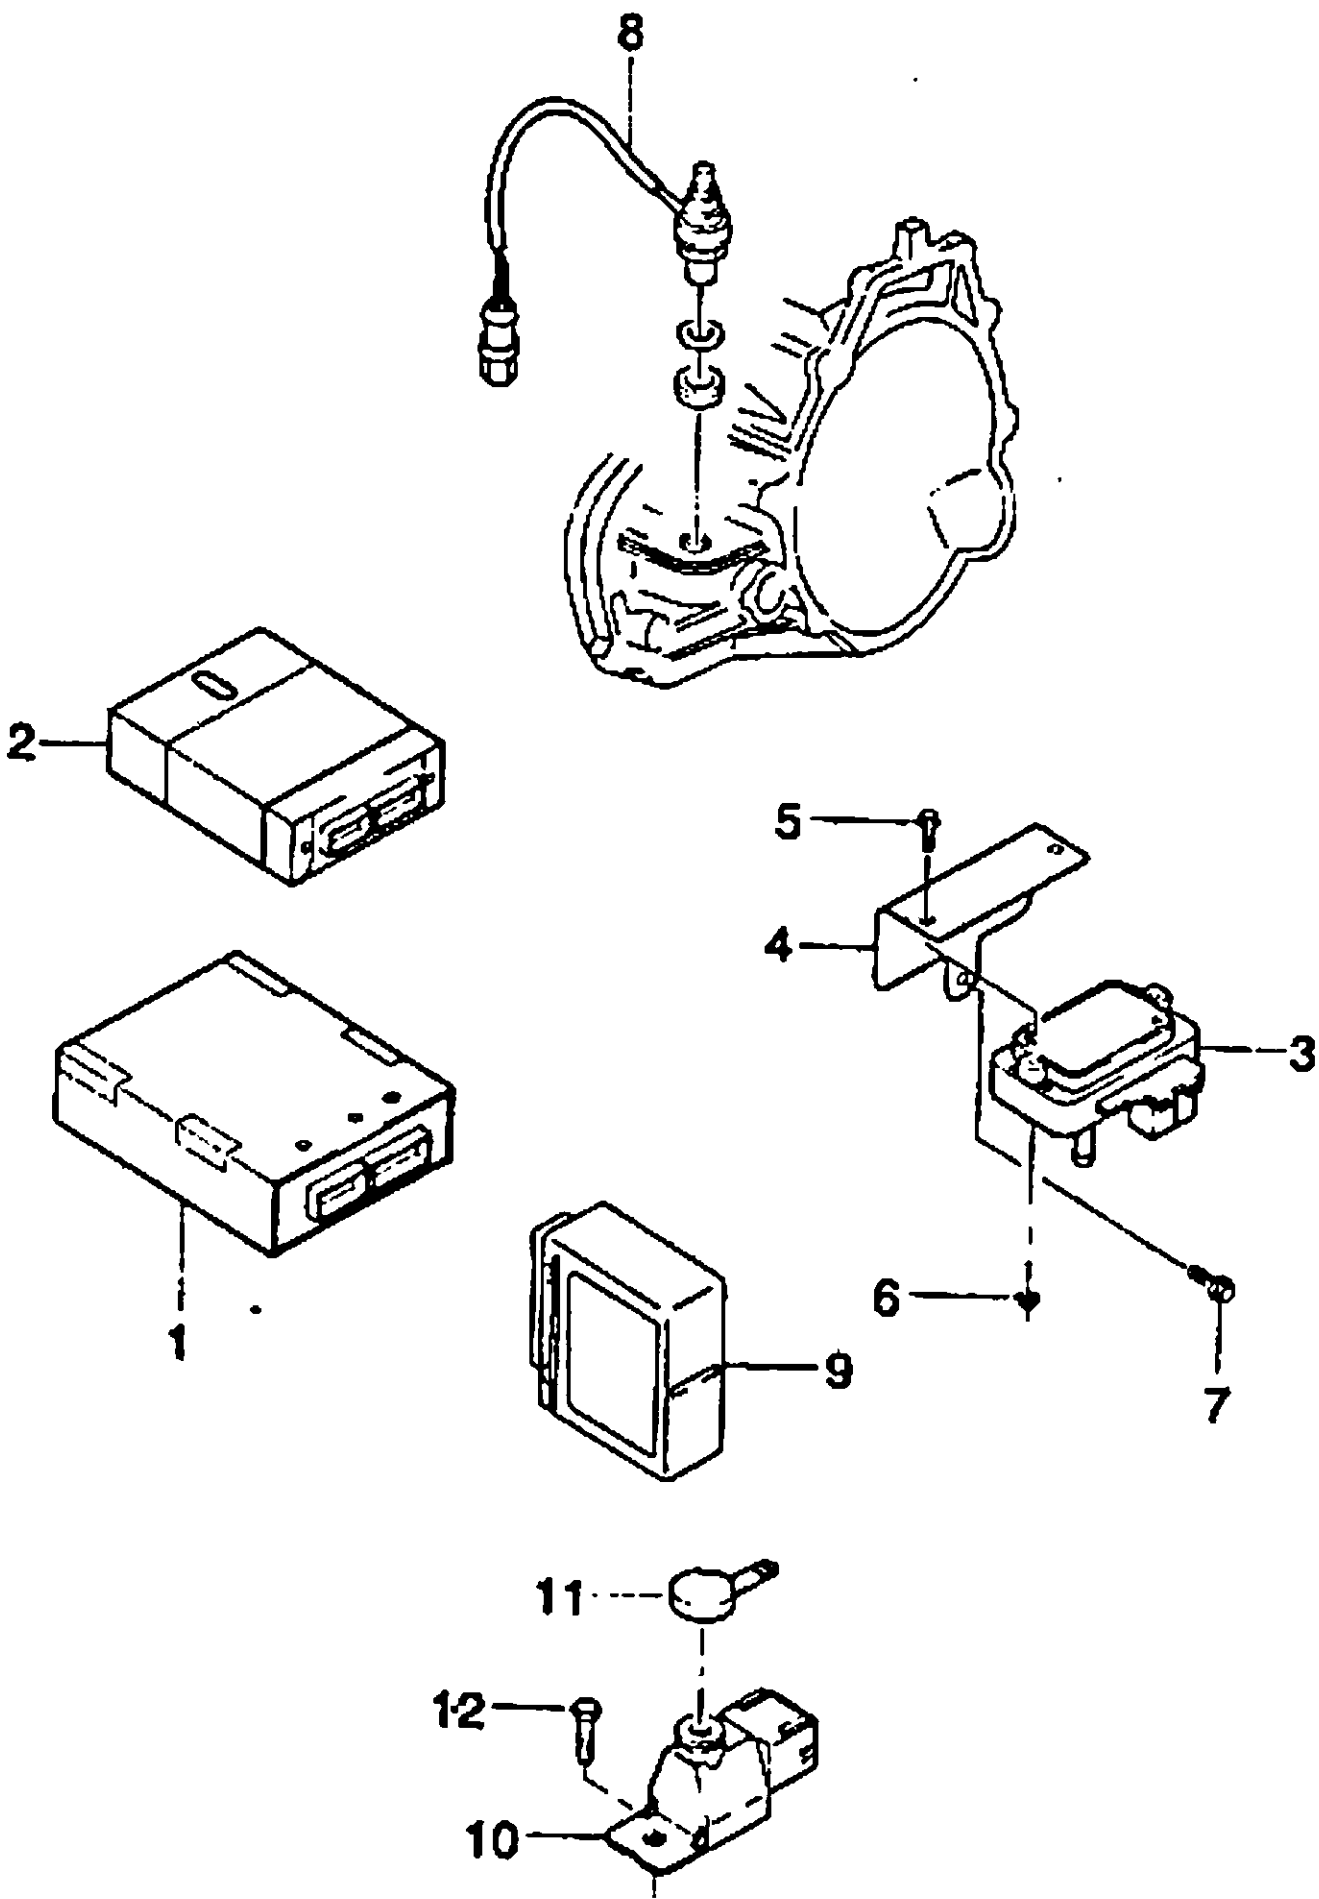

NOTE : @1-GENERAL AREA
 @3-LOW VOLATILITY AREA
 @4-HOT AREA
 @2-HIGH ALITUDE AREA
 @5-COLD AREA


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S								S E	S X
	[12] 03152-63163	(E)SCREW-TAPPING (D)SCHRAUBE	.	.	B	B	B	S	S	S	&NN4	(F)VIS (S)TORNILLO 1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

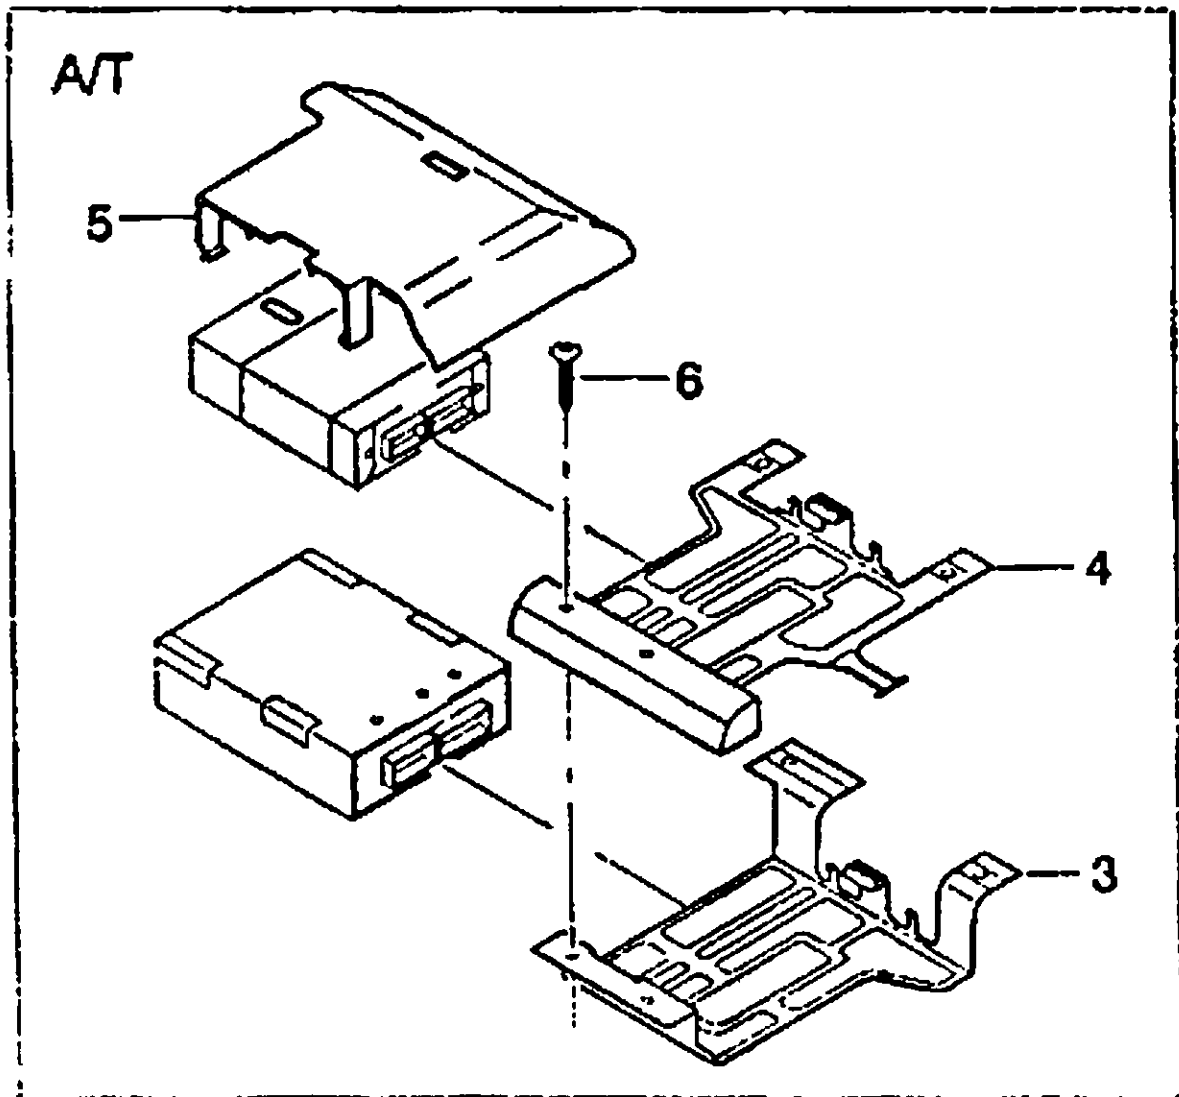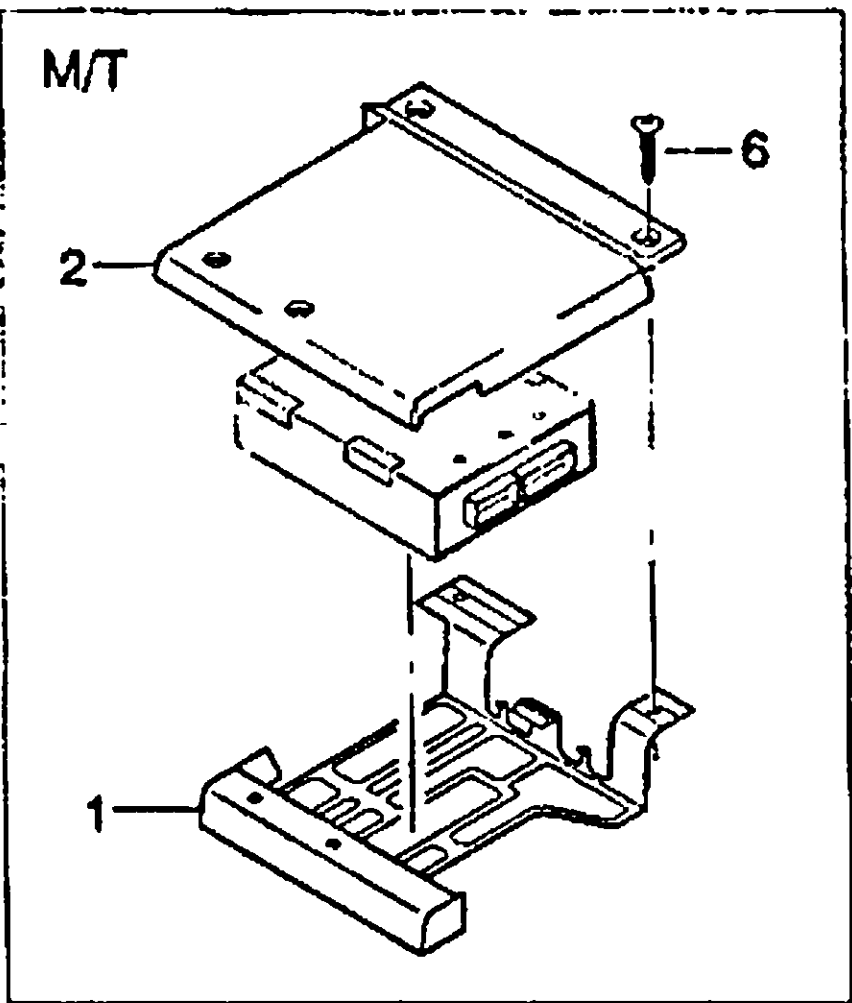

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N H	3 H	5 H	S S				S S	S S		
											FROM	TO		
	[01]	(E)BRACKET	(E)ENG&T/M CONT.								(F)SUPPORT-UNITE	DE CONTROLE		
	96231066	(D)TRÄGER	(D)STEUERUNGSEINHEIT								(S)SOPORTE-UNIDA	DE CONTROL		BA
		. M	B	B	B	S	S	S			1			
	[02]	(E)COVER-ECM&TCM									(F)CARTER			
	96242607	(D)DECKEL									(S)CUBIERTA			CE
		. M	B	B	B	S	S	S			1			
	[03]	(E)BRACKET-ENGINE	CONT.MODULE								(F)SUPPORT-UNITE	DE CONTROLE		
	96232067	(D)TRÄGER	(D)STEUERUNGSEINHEIT								(S)SOPORTE-UNIDA	DE CONTROL		BB
		. A	B	B	B	O	O	O			1			
	[04]	(E)BRACKET-TCM									(F)SUPPORT			
	96304683	(D)TRÄGER									(S)SOPORTE			BM
		. A	B	B	B	O	O	O			1			
	[05]	(E)COVER-TCM									(F)CARTER			
	96242608	(D)DECKEL									(S)CUBIERTA			
		. A	B	B	B	O	O	O			1			CT
	[06]	(E)SCREW									(F)VIS			
	09136-06002	(D)SCHRAUBE									(S)TORNILLO			
		. .	B	B	B	S	S	S			4			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						


3**CLUTCH&TRANSAXLE**

- | | |
|---|---------------------------------|
| 3110 CLUTCH COVER&DISK | 3570 PARK LOCK AND DETENT LEVER |
| 3120 HYDRAULIC CLUTCH | 3910 SHIFT CONTROL(M/T) |
| 3130 CLUTCH PEDAL | 3920 SHIFT CONTROL(A/T) |
| 3210 MANUAL TRANSAXLE | |
| 3220 TRANSAXLE RELATED PARTS | |
| 3230 TRANSAXLE GEAR | |
| 3240 REVERSE&COUNTER GEAR | |
| 3250 BEARING PLATE | |
| 3260 GEAR SHIFT COVER&FORK | |
| 3270 DIFFERENTIAL GEAR | |
| 3510 AUTOMATIC TRANSAXLE | |
| 3520 CASE AND RELATED PARTS | |
| 3521 INTERNAL POWER TRAIN PARTS | |
| 3530 REVERSE INPUT CLUTCH ASSEMBLY | |
| 3531 DIRECT AND COAST CLUTCH ASSEMBLIES | |
| 3533 FORWARD CLUTCH ASSEMBLY | |
| 3535 FORWARD CLUTCH SUPPORT ASSEMBLY | |
| 3550 DRIVEN SPROCKET SUPPORT ASSEMBLY | |

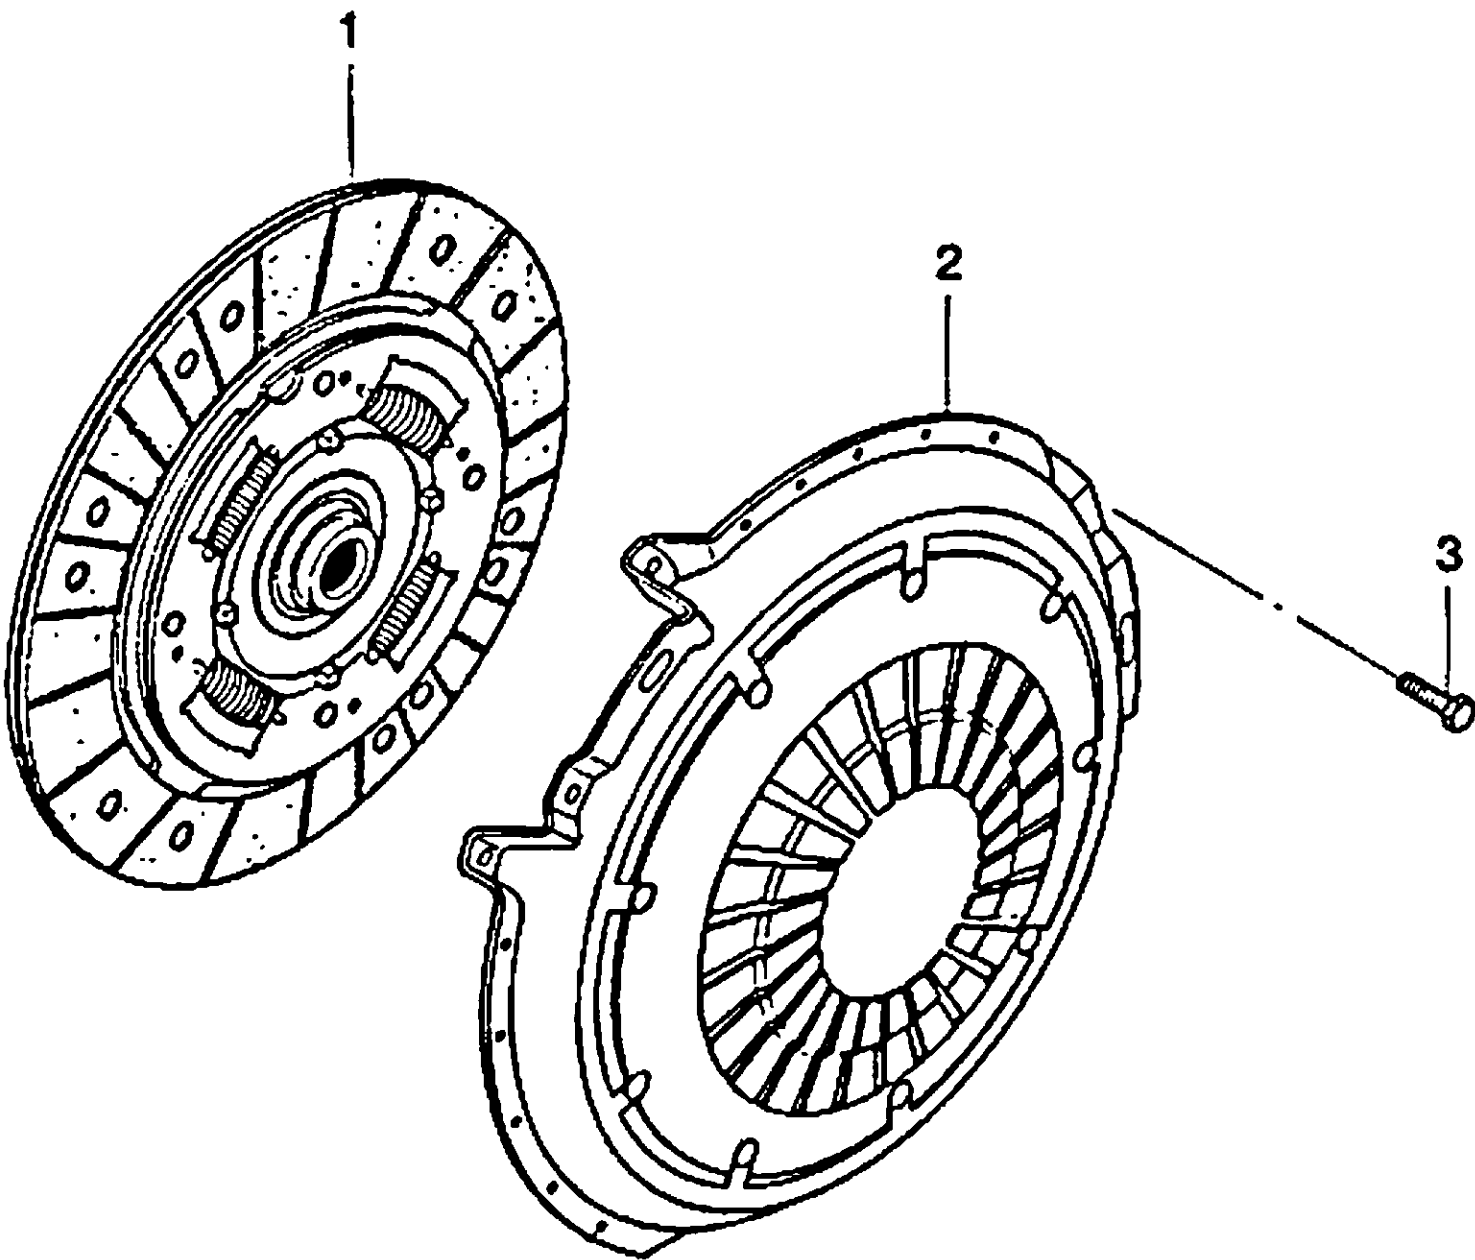


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q / T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E / N / G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	6 H	S S	S S								S X
	[01]	(E)DISK-CLUTCH (D)SCHEIBE,KUPPLUNG										(F)DISQUE-EMBAYAGE (S)DISCO-EMBAGUE			F1	
	96232994	Y	M	B	B	B	S	S	S		1					
	96232995	6	M	B	B	B	.	.	O		1					
	[02]	(E)COVER-CLUTCH (D)DECKEL,KUPPLUNG										(F)CARTER-EMBAYAGE (S)CUBIERTA-EMBAGUE			CL	
	96183980	Y	M	B	B	B	S	S	S		1					
	96184505	6	M	B	B	B	.	.	O		1		POT			
	[03]	(E)BOLT (D)SCHRAUBE										(F)BOULON (S)PERNO				
	09100-07001	.	M	B	B	B	S	S	S		6					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

BRAKE RESERVOIR

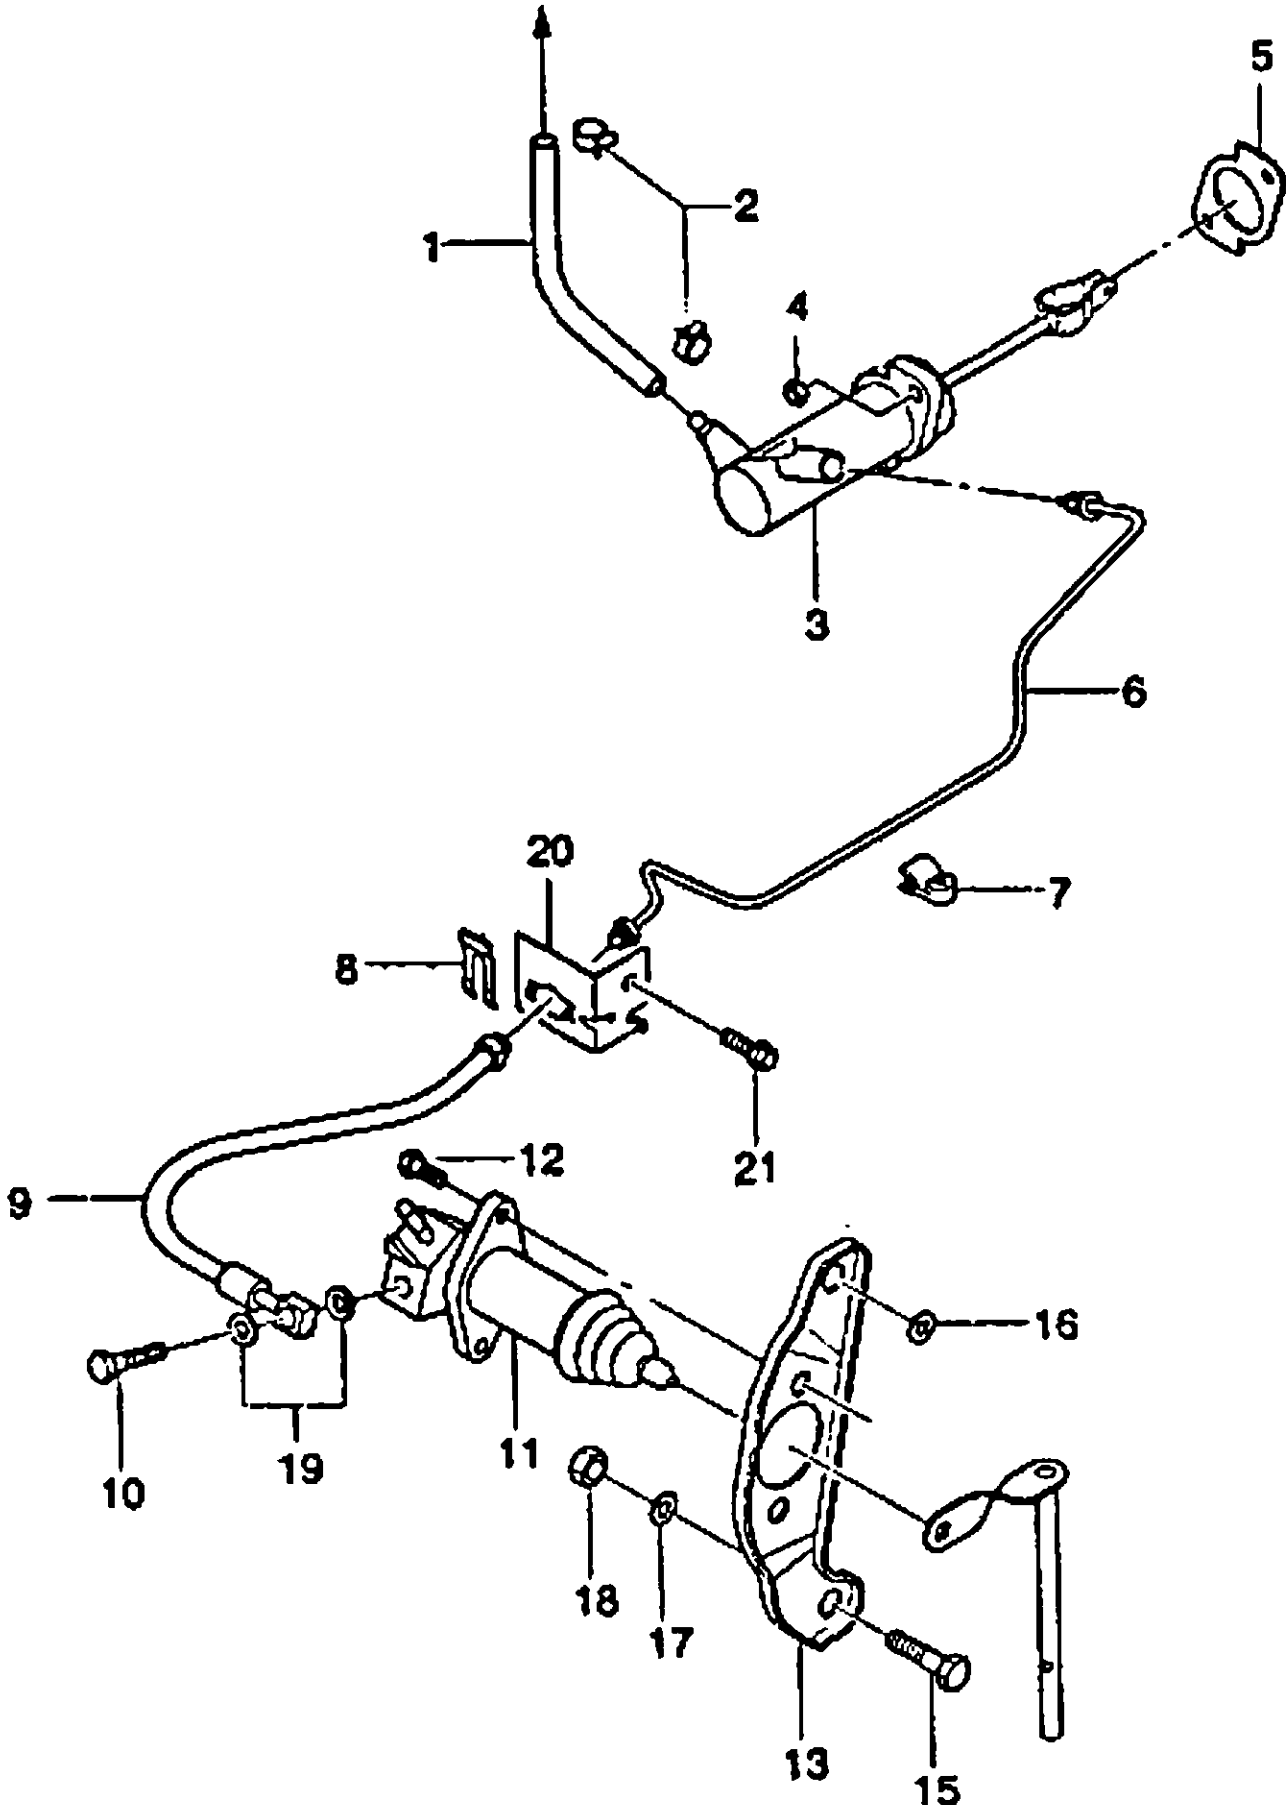


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L I T Y	Q U A N T I T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	[01]	(E)HOSE A-RESERVOIR TANK (D)SCHLAUCH,BEHÄLTER									(F)TUYAU-RESERVOIR (S)MANGUERA-RESERVA		INCL #2			
	96184064	.	M	B	B	B	S	S	S	1						
	[02]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	09401-13401	.	M	B	B	B	S	S	S	2						
	[03]	(E)CYLINDER A-CLUTCH MASTER (D)ZYLINDER HAUPT									(F)CYLINDRE-MAITRE (S)CILINDRO-MAESTRO					
	96184062	.	M	B	B	B	S	S	S	1						
	[04]	(E)NUT-HEXAGON LOCK (D)MUTTER									(F)ECROU (S)TUERCA					
	08311-18083	.	M	B	B	B	S	S	S	2						
	[05]	(E)GASKET (D)DICHTUNG									(F)JOINT (S)JUNTA					
	96184061	.	M	B	B	B	S	S	S	1						
	[06]	(E)PIPE A-CLUTCH MASTER CYL (D)ROHR,HYDRAULIK KUPPLUNG									(F)TUYAU (S)TUBERIA					
	96233023	.	M	B	B	B	S	S	S	1						
	[07]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	96180752	.	M	B	B	B	S	S	S	1						
	[08]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	96144733	.	M	B	B	B	S	S	S	1						
	[09]	(E)HOSE A-HYDRAULIC CLUTCH (D)SCHLAUCH									(F)TUYAU (S)MANGUERA					
	96184536	.	M	B	B	B	S	S	S	1						
	[10]	(E)BOLT-UNION (D)SCHRAUBE									(F)BOULON (S)PERNO					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

BRAKE RESERVOIR

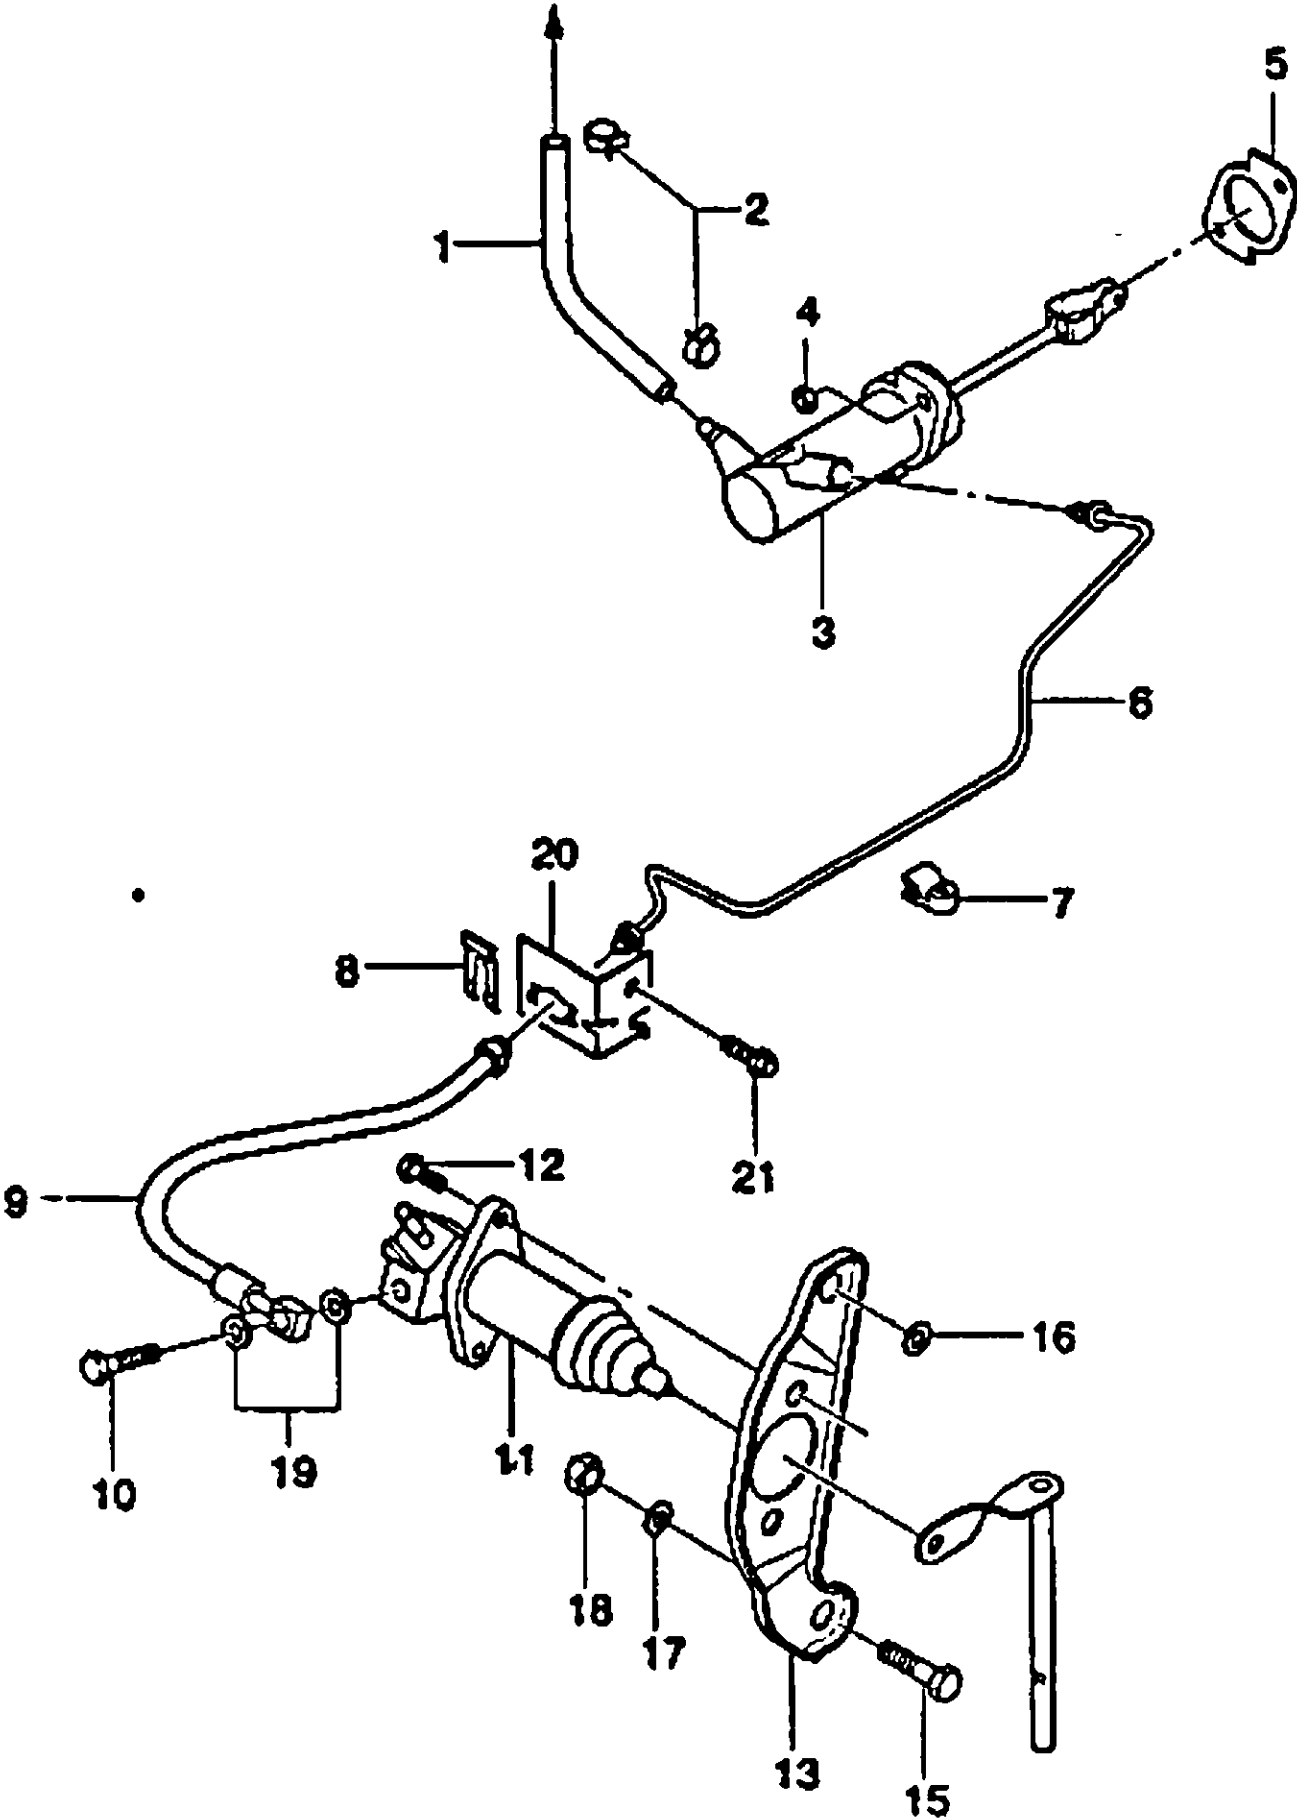


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	09360-10001	.	M	B	B	B	S	S	S		1					
	[11]												(E)CYLINDER A-CLUTCH RELEASE (D)ZYLINDER LÖSUNG	(F)CYLINDRE-RELACHE (S)CILINDRO-LIBERAR		
	96159109	.	M	B	B	B	S	S	S		1	970701				
Y	9614047	.	M	B	B	B	S	S	S		1	970701				
	[12]												(E)BOLT (D)SCHRAUBE	(F)BOULON (S)PERNO		
	09106-08001	.	M	B	B	B	S	S	S		2					
	[13]												(E)BRACKET-RELEASE CYLINDER (D)TRÄGER	(F)SUPPORT (S)SOPORTE		
	96243477	.	M	B	B	B	S	S	S		1					
	[15]												(E)BOLT-HEXAGON (D)SCHRAUBE	(F)BOULON (S)PERNO		
	09100-12001	.	M	B	B	B	S	S	S		1					
	[16]												(E)WASHER-SPRING (D)DICHTUNGSRING	(F)RONDELLE (S)ARANDELA		
	08321-31123	.	M	B	B	B	S	S	S		1					
	[17]												(E)WASHER-PLAIN (D)DICHTUNGSRING	(F)RONDELLE (S)ARANDELA		
	08322-11123	.	M	B	B	B	S	S	S		1					
	[18]												(E)NUT-HEXAGON LOCK (D)MUTTER	(F)ECROU (S)TUERCA		
	08311-18123	.	M	B	B	B	S	S	S		1					
	[19]												(E)WASHER-PLAIN (D)DICHTUNGSRING	(F)RONDELLE (S)ARANDELA		
	09160-10002	.	M	B	B	B	S	S	S		2					
	[20]												(E)CLAMP-CLUTCH HOSE (D)KLAMMER	(F)PINCE (S)ABRAZADERA		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

BRAKE RESERVOIR

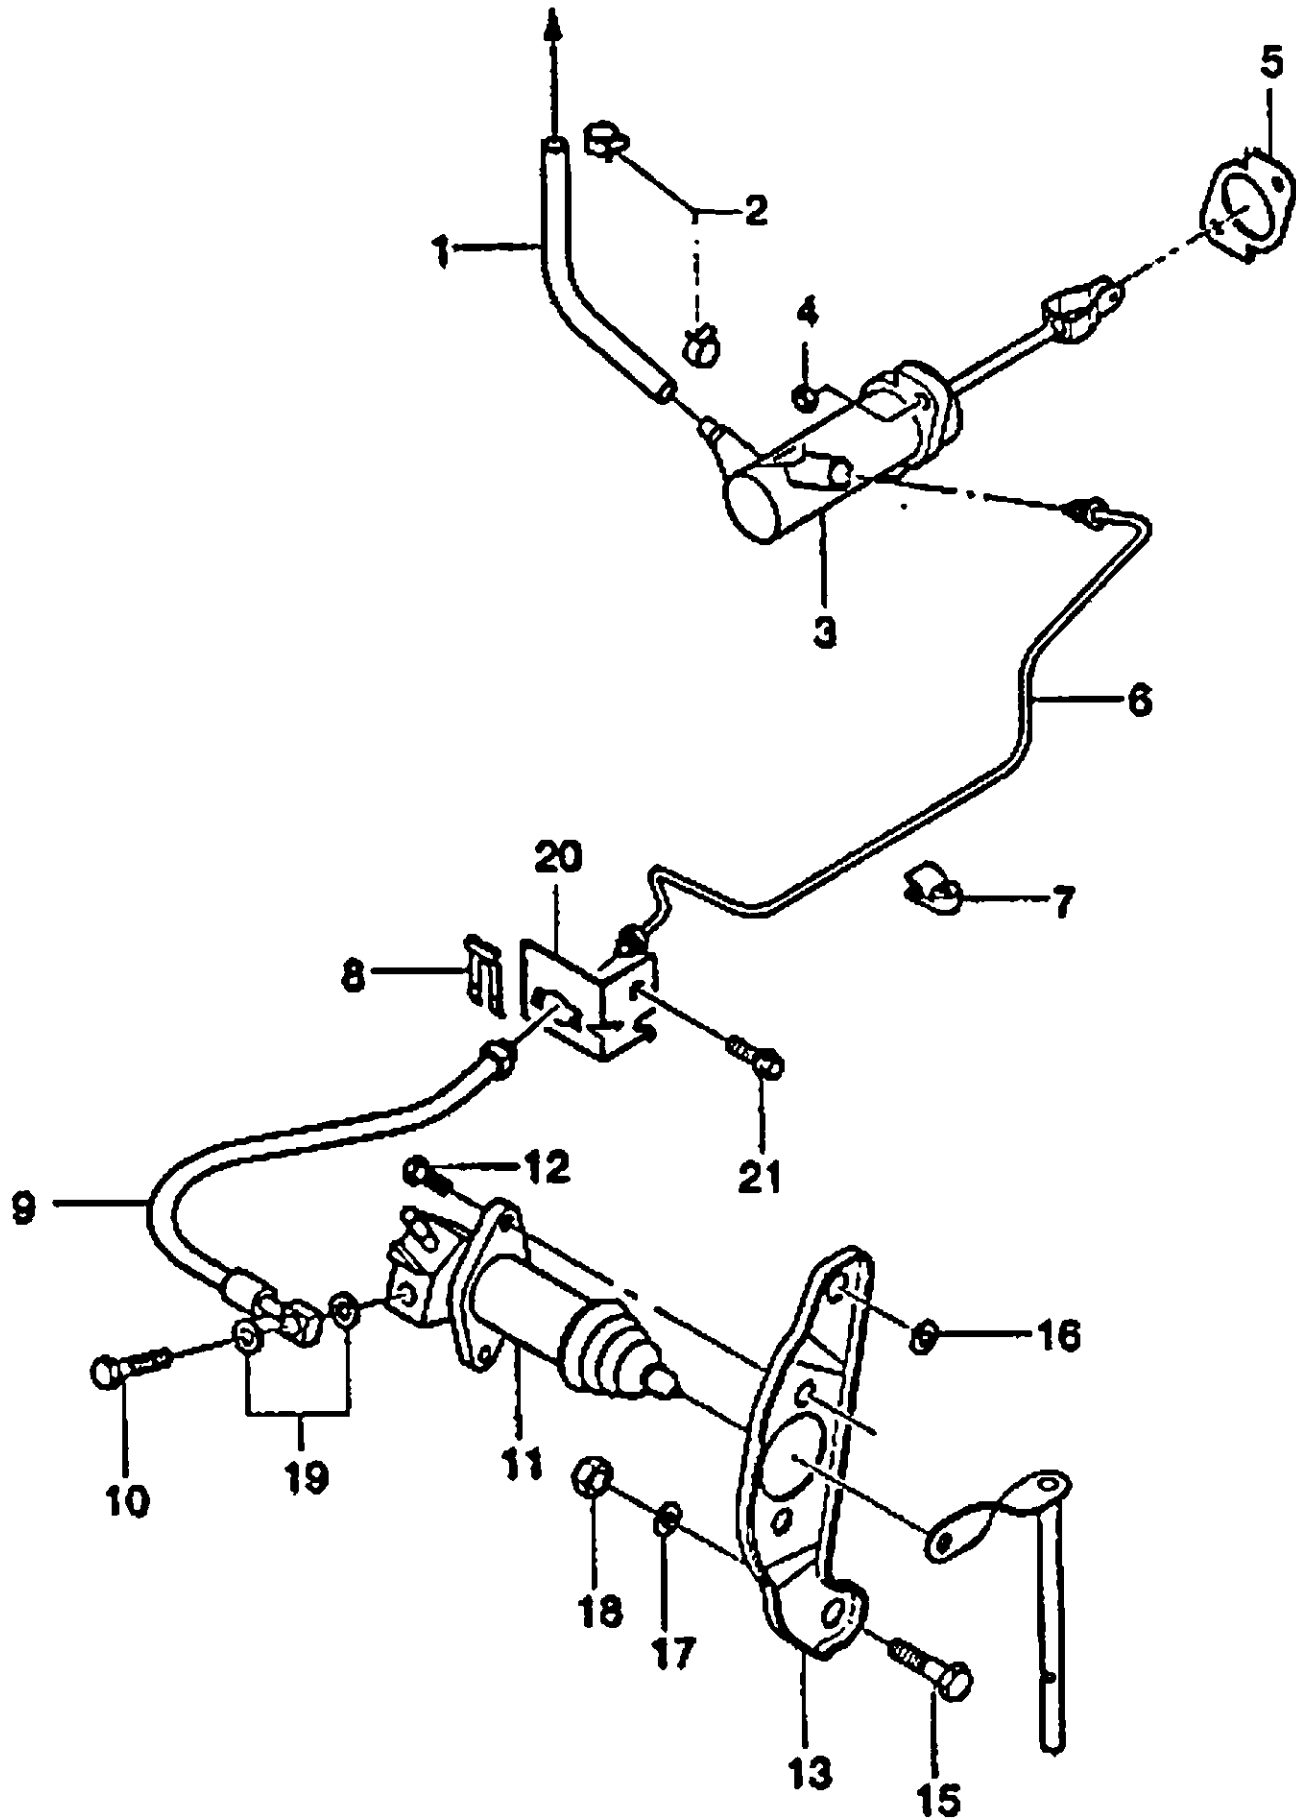


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	961845,9 [21] 01514-06123	.	M	B	B	B	S	S	S		1	(F)BOULON (S)PERNO				
		.	M	B	B	B	S	S	S		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

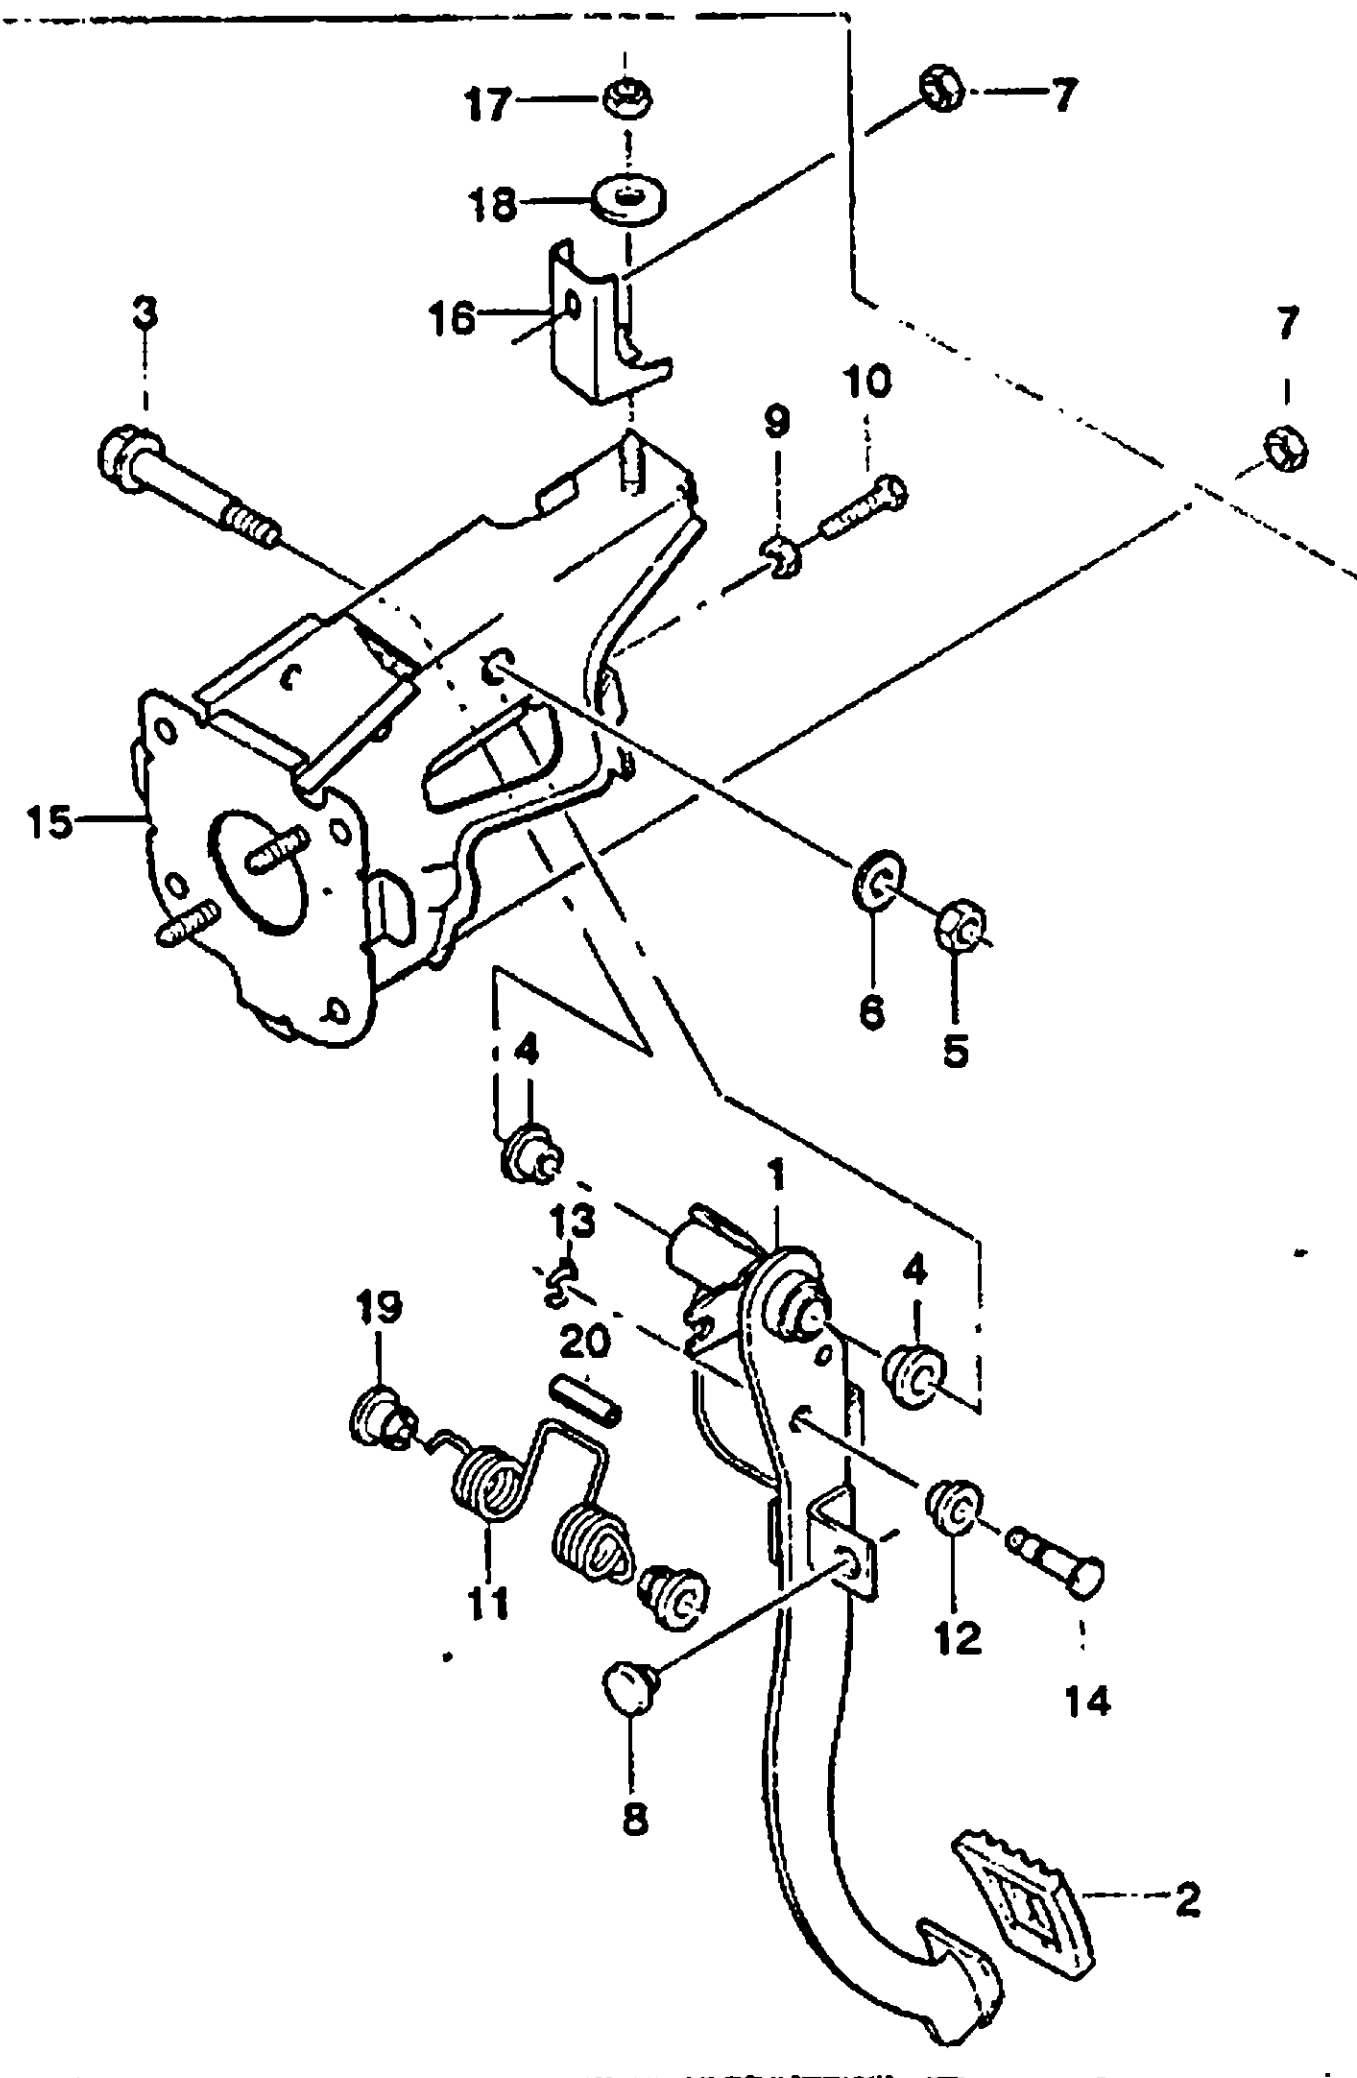

21


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N H	3 H H	5 S S								
	[01]	(E)PEDAL A-CLUTCH (D)PEDAL,KUPPLUNG									(F)PEDALE-EMBRAYAGE (S)PEDAL-EMBRAGUE			
	96183919	. M B B B S S S									1			
	[02]	(E)COVER-PEDAL PLATE (D)UNTERLAGE									(F)PATIN (S)COJIN			
	90105172	. M B B B S S S									1			
	[03]	(E)SHAFT-CLUTCH PEDAL (D)SPINDEL,PEDAL MONTAGE									(F)ARBRE-MONTAGE PEDALE (S)EJE-MONTAJE DE PEDAL			
	96183932	. M B B B S S S									1			
	[04]	(E)BUSHING (D)LAGERFUTTER									(F)MANCHON (S)BUJE-PEDAL DEL EMBRAGUE			
	09306-14001	. M B B B S S S									2			
	[05]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA			
	09159-10002	. M B B B S S S									1			
	[06]	(E)WASHER-SPRING (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA			
	08321-31103	. M B B B S S S									1			
	[07]	(E)NUT-HEXAGON LOCK (D)MUTTER									(F)ECROU (S)TUERCA			
	09159-08003	. M B B B S S S									5			
	[08]	(E)BUFFER-CLUTCH PEDAL (D)STOSSSCHEIBE									(F)TAMPON-PEDALE D'EMBRAYAGE (S)AMORTIGUADOR			
	96157634	. M B B B S S S									2			
	[09]	(E)NUT-HEXAGON (D)MUTTER									(F)ECROU (S)TUERCA			
	08310-22083	. M B B B S S S									1			
	[10]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

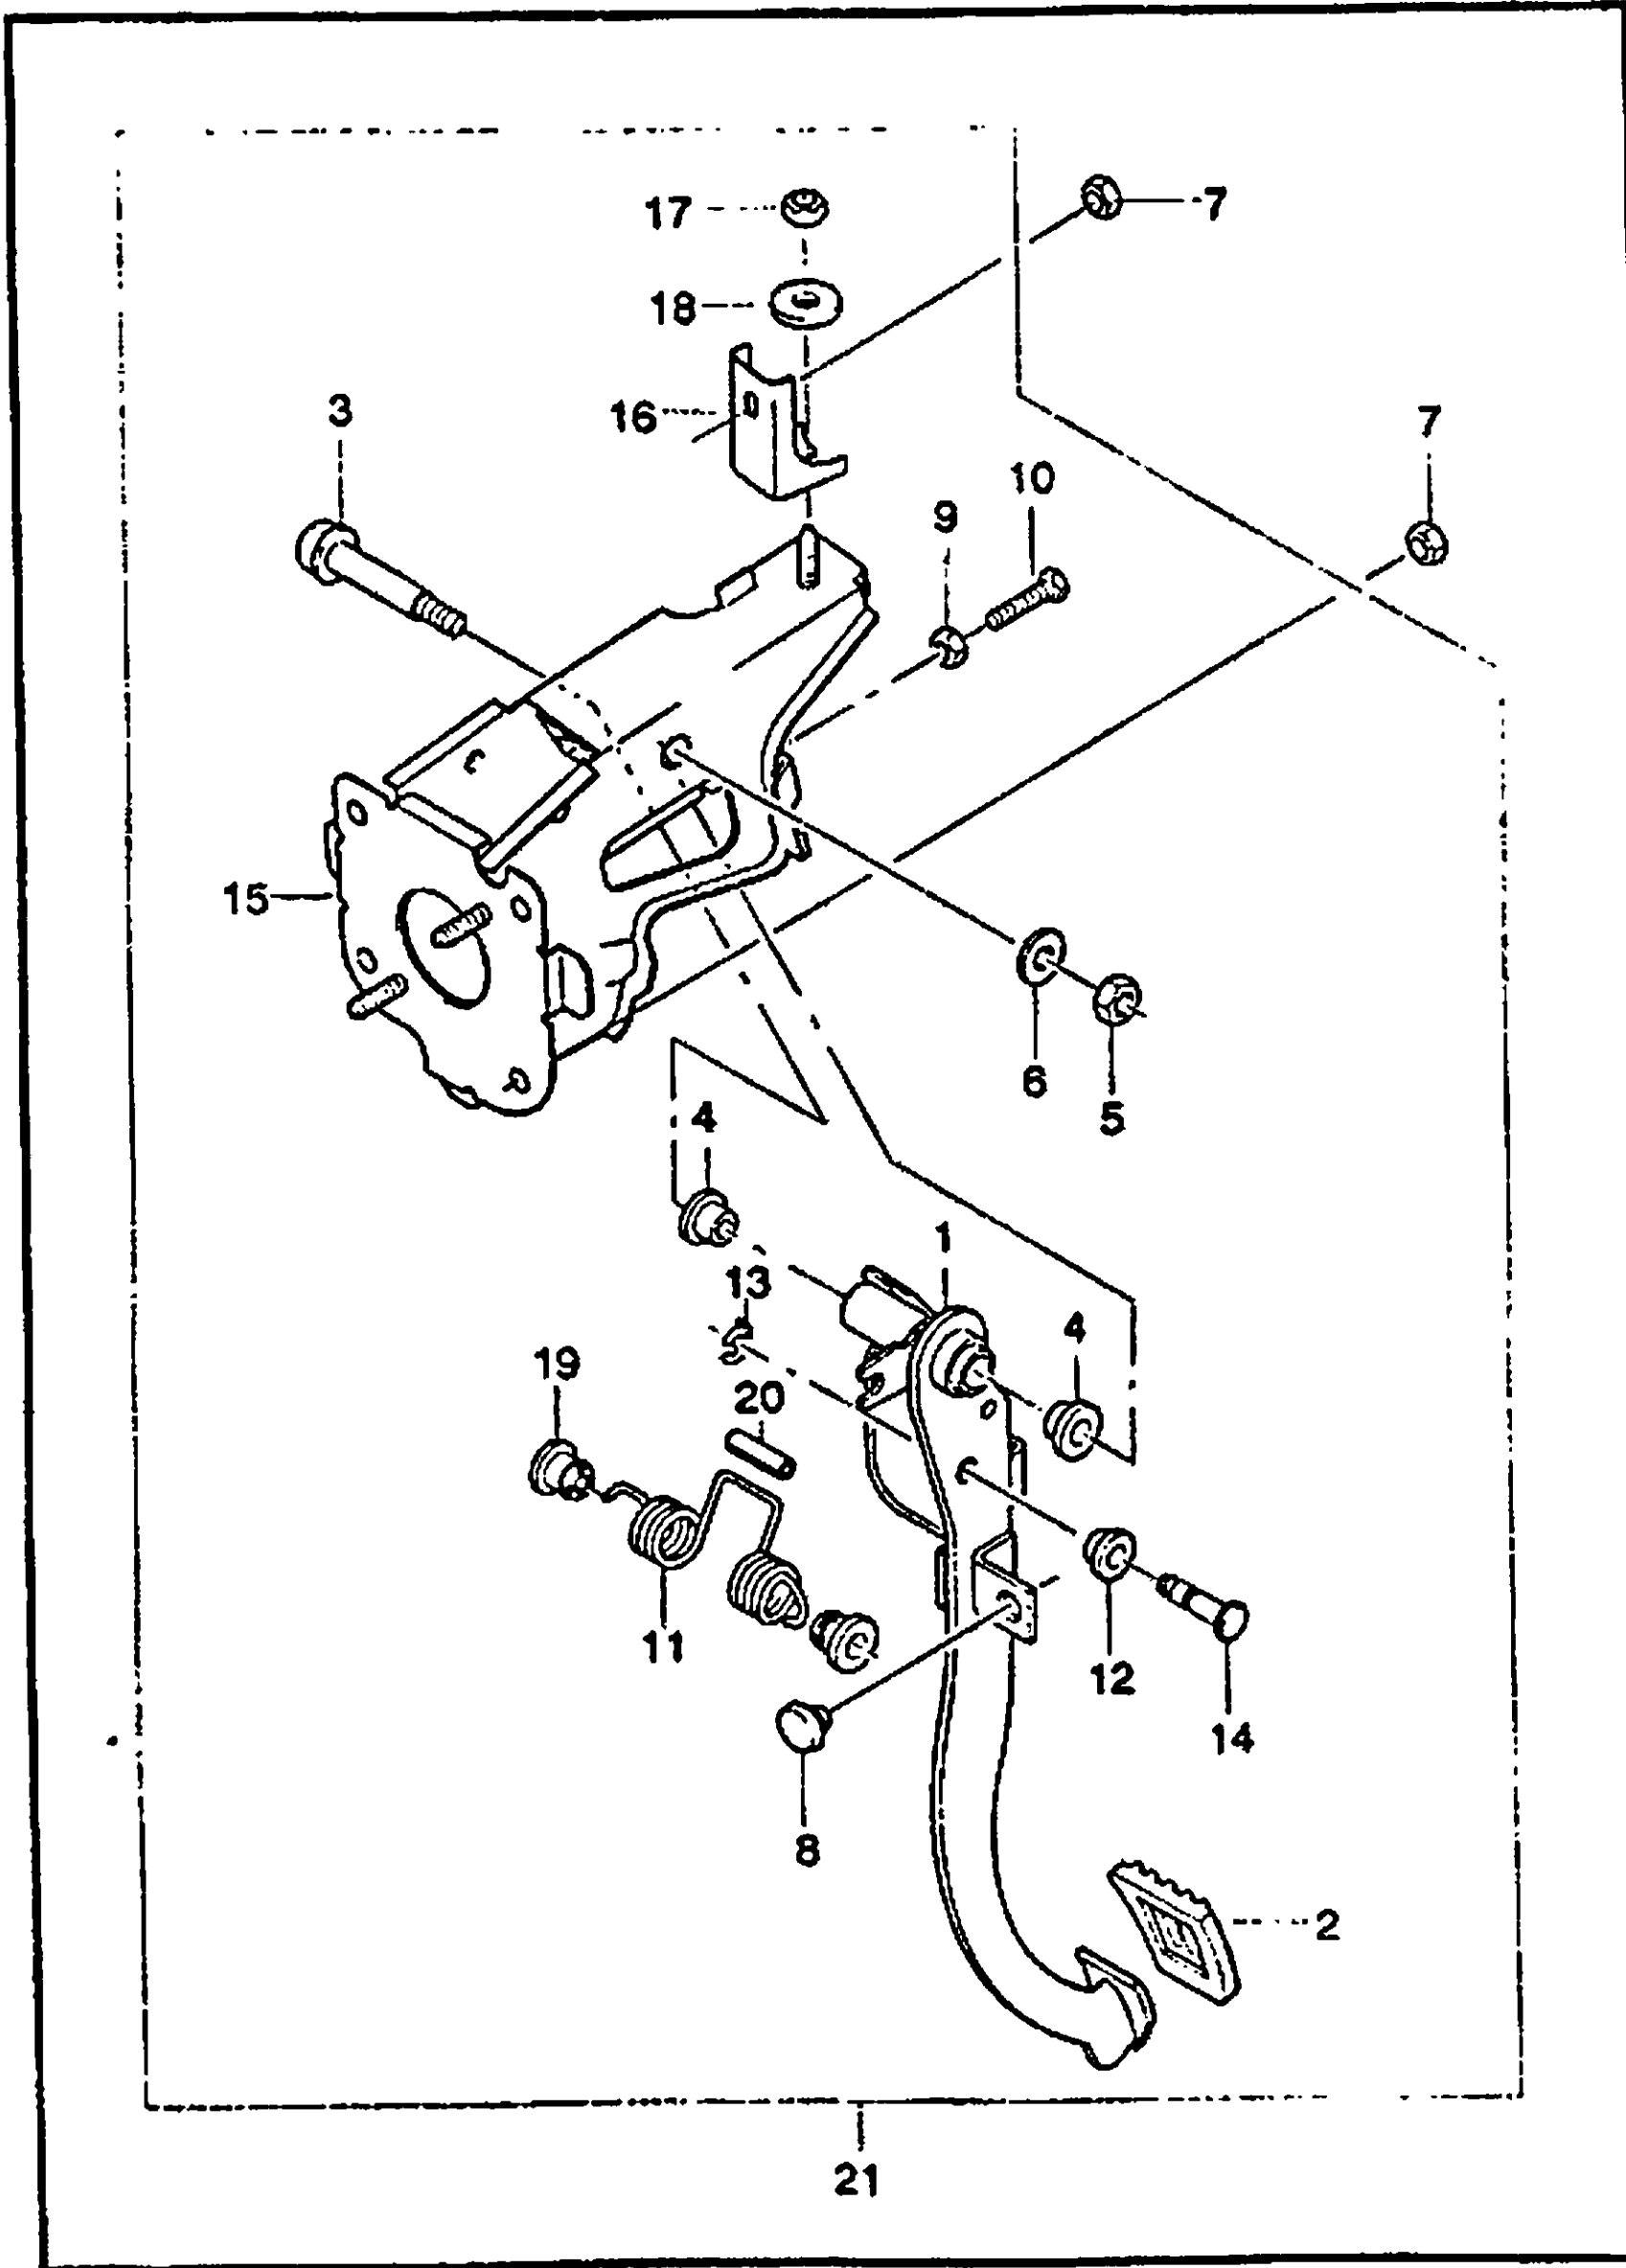


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N H	3 H	5 H	S S	S S								S S
	01107-08303 [11]	.	M	B	B	B	S	S	S		1			(F)RESSORT-RETOUR (S)RESORTE-REGRESO		
	96184060	.	M	B	B	B	S	S	S		1					
	96305924													NOT APPLIED		
	[12]	(E)BUSHING (D)LAGERFUTTER								(F)MANCHON (S)BUJE-PEDAL DELEMBRAGUE						
	09306-10003	.	M	B	B	B	S	S	S		1					
	[13]	(E)RING-RETAINING, E TYPE (D)RING, HALTER								(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR						
	08332-21089	.	M	B	B	B	S	S	S		1					
	[14]	(E)PIN (D)STIFT								(F)BROCHE (S)PASADOR						
	09208-10001	.	M	B	B	B	S	S	S		1					
	[15]	(E)BRACE A-CLUTCH PEDAL (D)SCHIENE, KUPPLUNGSPEDAL								(F)SUPPORT-MONTAGE PEDALE (S)REFUERZO						
	96183927	.	M	B	B	B	S	S	S		1					
	[16]	(E)BRACKET-CLUTCH PEDAL BRACE (D)TRÄGER								(F)SUPPORT (S)SOPORTE						
	96183935	.	M	B	B	B	S	S	S		1					
	[17]	(E)NUT-HEXAGON LOCK (D)MUTTER								(F)ECROU (S)TUERCA						
	08311-18083	.	M	B	B	B	S	S	S		1					
	[18]	(E)WASHER-PLAIN (D)DICHTUNGSRING								(F)RONDELLE (S)ARANDELA						
	09160-08004	.	M	B	B	B	S	S	S		1					
	[19]	(E)BUSHING (D)LAGERFUTTER								(F)MANCHON (S)BUJE DE BOQUILLA						
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

3130 CLUTCH PEDAL


3H16

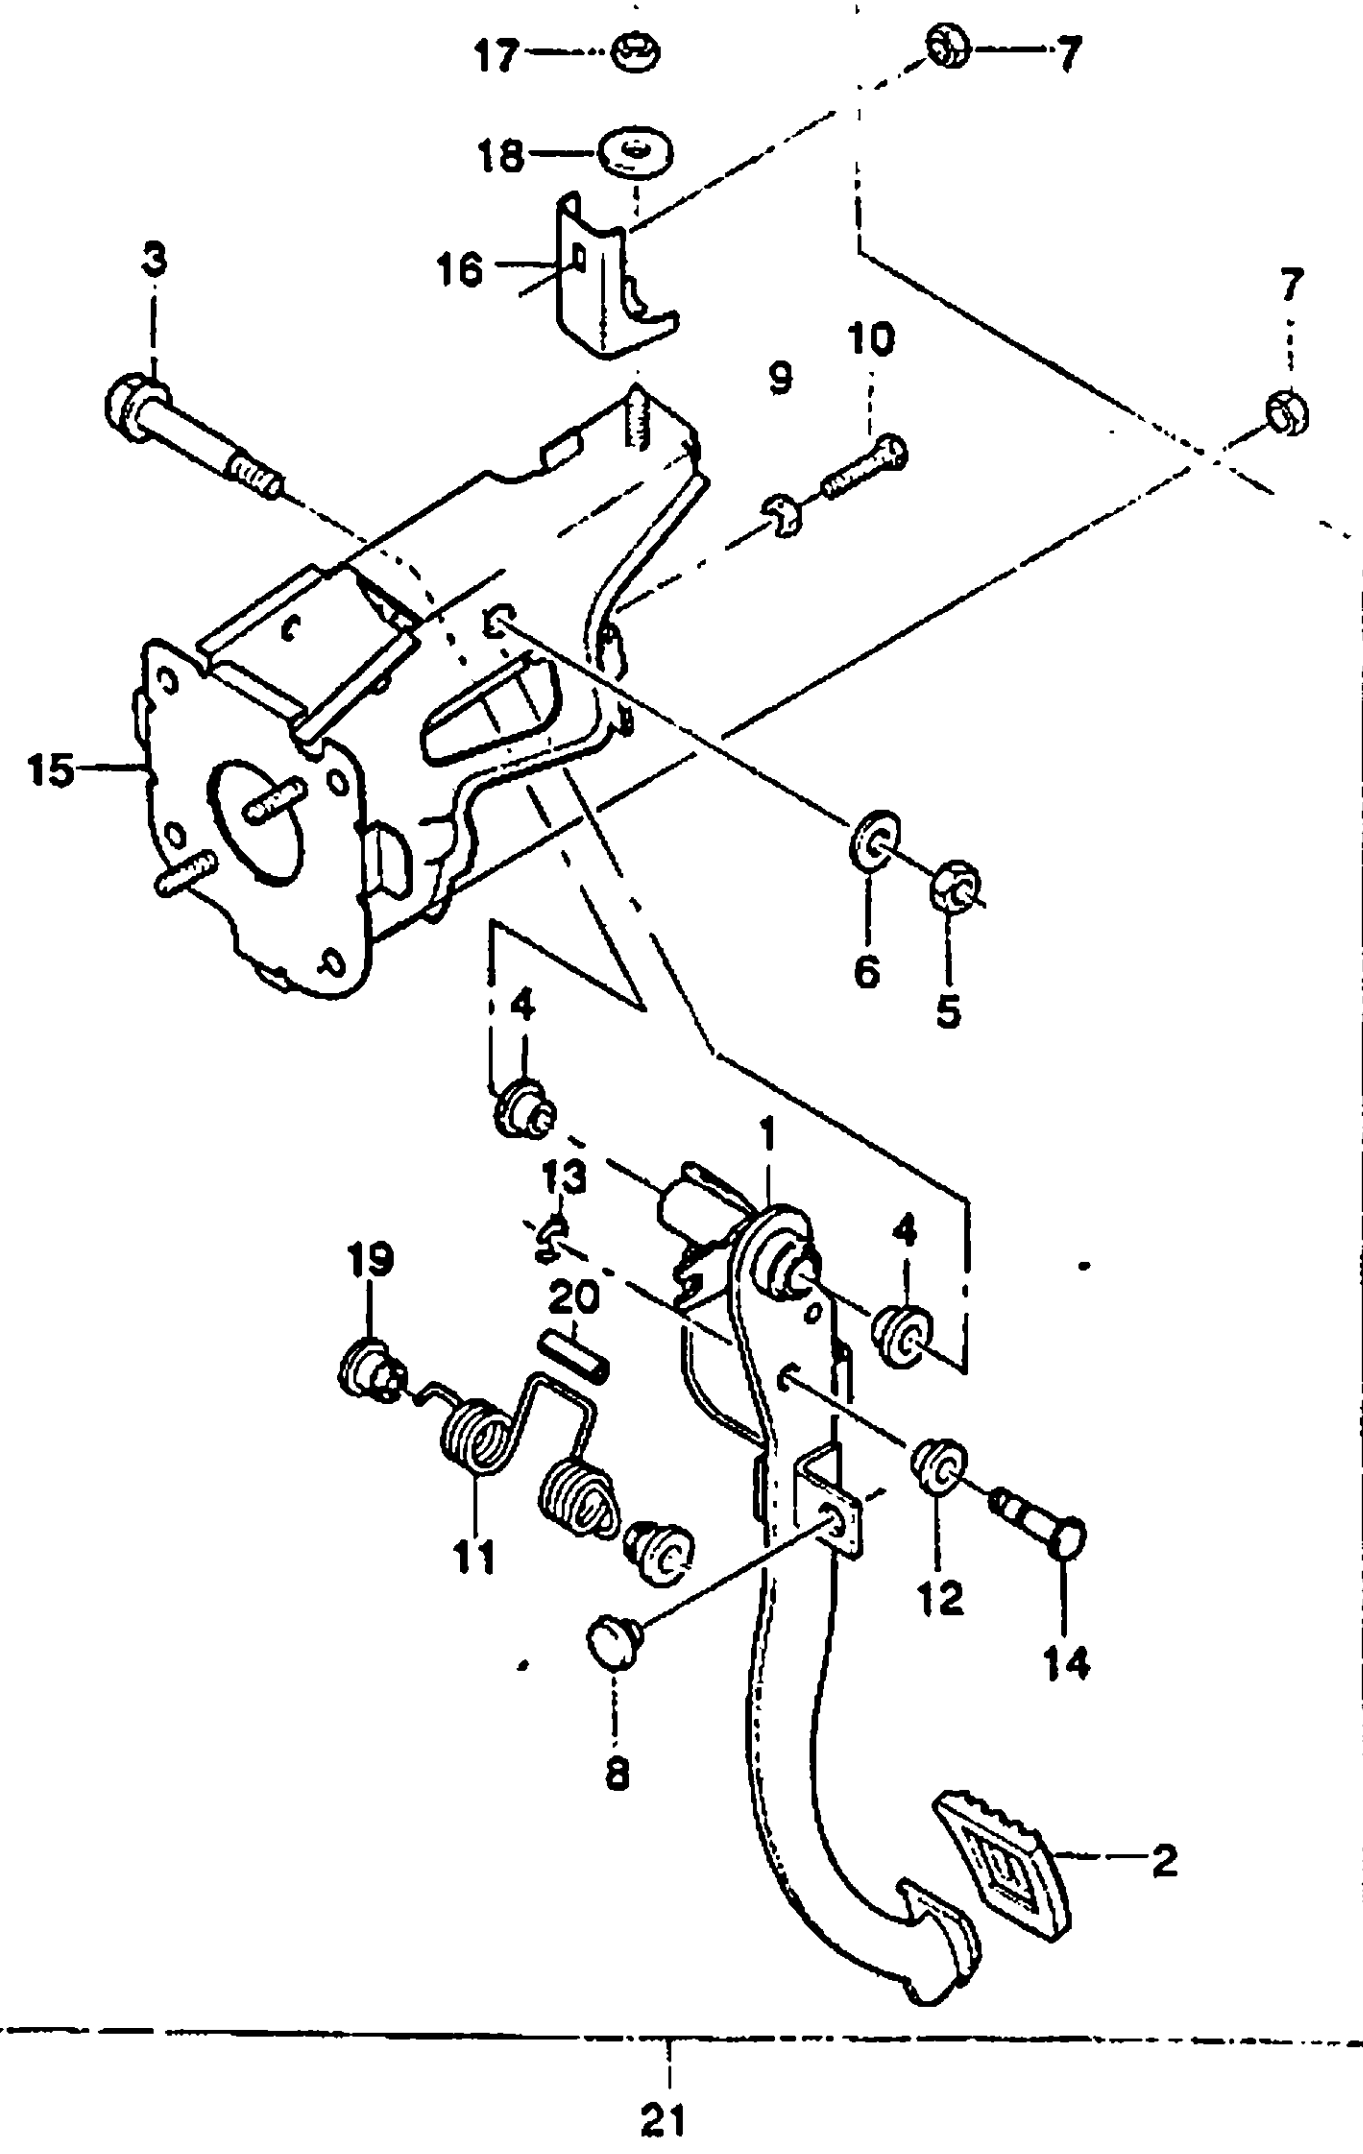

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	6 H	S								S E	S X
96184537	. M B B B S S S								2							
[20]	(E)BUSHING								(F)MANCHON							
96184050	. M B B B S S S								1							
[21]	(E)PEDAL UNIT-CLUTCH								(F)UNITE PEDALE-EMBRAYAGE							
	(D)PEDAL,KUPPLUNG								(S)PEDAL UNIDAD -EMBRAGUE							
96184054	. M B B B S S S								1							

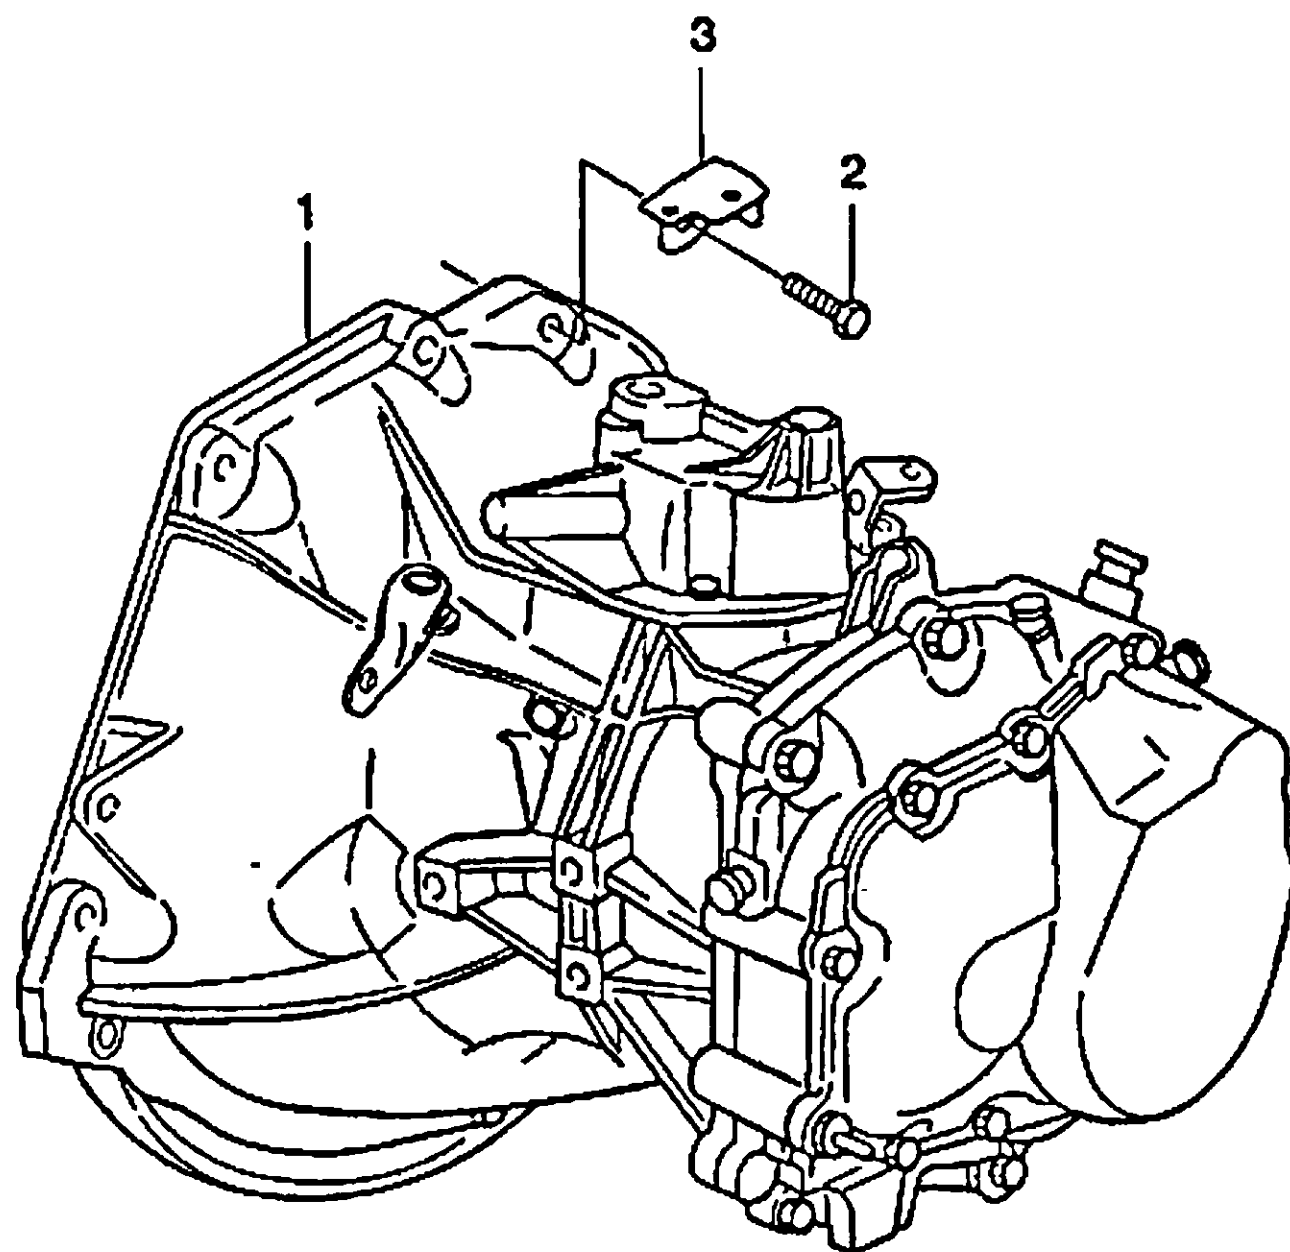

KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S	S							
	[01]	(E)TRANSAXLE A-GEARSHIFT (D)ANTRIEB, GANGSCHALTUNG								(F)TRANSMISSION (S)EJE TRANSVERSAL					
	96243097	Y M B B B S S S &M85								1			RATIO : 4.176	MA	
	96225023	6 M B B B . . O &MG4-KL9/EC1								1			RATIO : 3.722	BS	
	96243097	6 M B B B . . A &M85&KL9/EC1								1				MA	
	[02]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO					
	09100-12002	. M B B B S S S								8					
	[03]	(E)BRACKET-ENGINE CONT.HARNESS (D)TRÄGER								(F)SUPPORT (S)SOPORTE					
	96234614	. M B B B S S S								1					
							</								

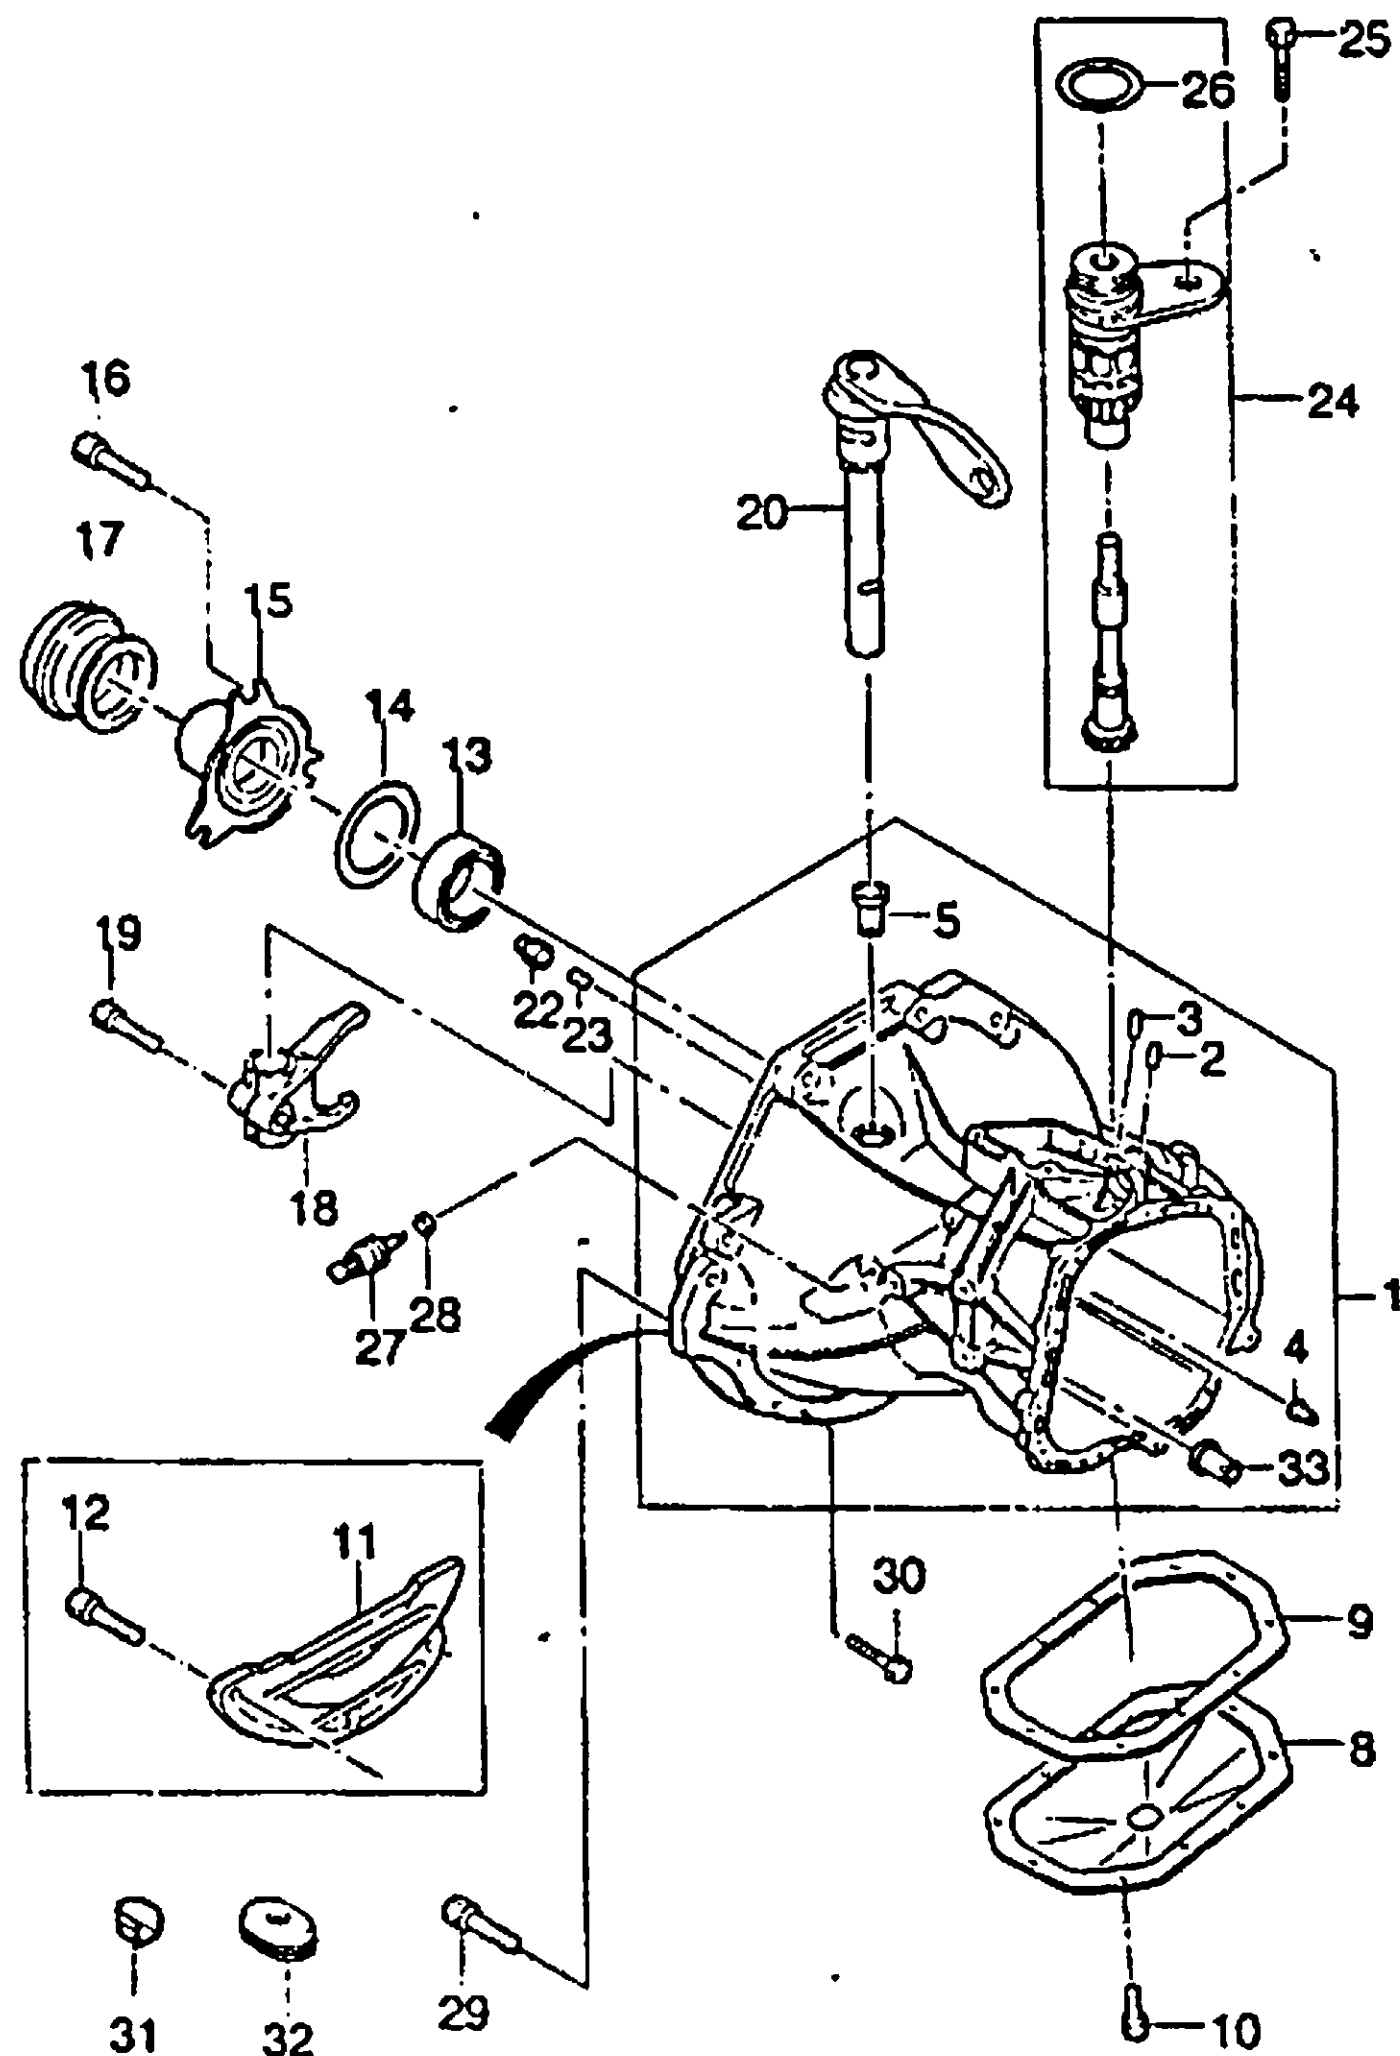


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01] A96216453	(E)CASE A-TRANSAXLE (D)KASTEN,ANTRIEB . M B B B S S S									(F)CARTER-TRANSMISSION (S)CAJA-EJE TRANSVERSAL 1					
	[02] 90147339	(E)PIN-DOWEL (D)STIFT,DÜBEL . M B B B S S S									(F)BROCHE-GOUJON (S)PASADOR-CLAVIJA 1					
	[03] 90065583	(E)PIN-DOWEL (D)STIFT,DÜBEL . M B B B S S S									(F)BROCHE-GOUJON (S)PASADOR-CLAVIJA 2					
	[04] 90121130	(E)SLEEVE-MAINSHAFT OIL DUCT (D)HÜLSE . M B B B S S S									(F)CHEMISE (S)MANGA 1					
	[05] 90305912	(E)BUSHING-CLUTCH SHAFT (D)LAGERFÜTTER . M B B B S S S									(F)MANCHON-ARBRE D'EMBRAYAGE (S)BUJE-EJE DEL EMBRAGUE 2					
	[08] 90305635	(E)COVER-DIFFERENTIAL GEAR (D)DECKEL . M B B B S S S									(F)CARTER (S)CUBIERTA 1					
	[09] 96179241	(E)GASKET-DIFF GEAR COVER (D)DICHTUNG . M B B B S S S									(F)JOINT (S)JUNTA 1					
	[10] 09103-08028	(E)BOLT (D)SCHRAUBE . M B B B S S S									(F)BOULON (S)PERNO 10					
	[11] 96224697	(E)COVER-TRANSMISSION CASE (D)DECKEL . M B B B S S S									(F)CARTER (S)CUBIERTA 1	970701				
	O 96242579	. M B B B S S S									1	970701	FOR STEEL OIL PAN			
		. M B B B S S S									1	970701				


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

3220 TRANSAXLE RELATED PARTS


3L16

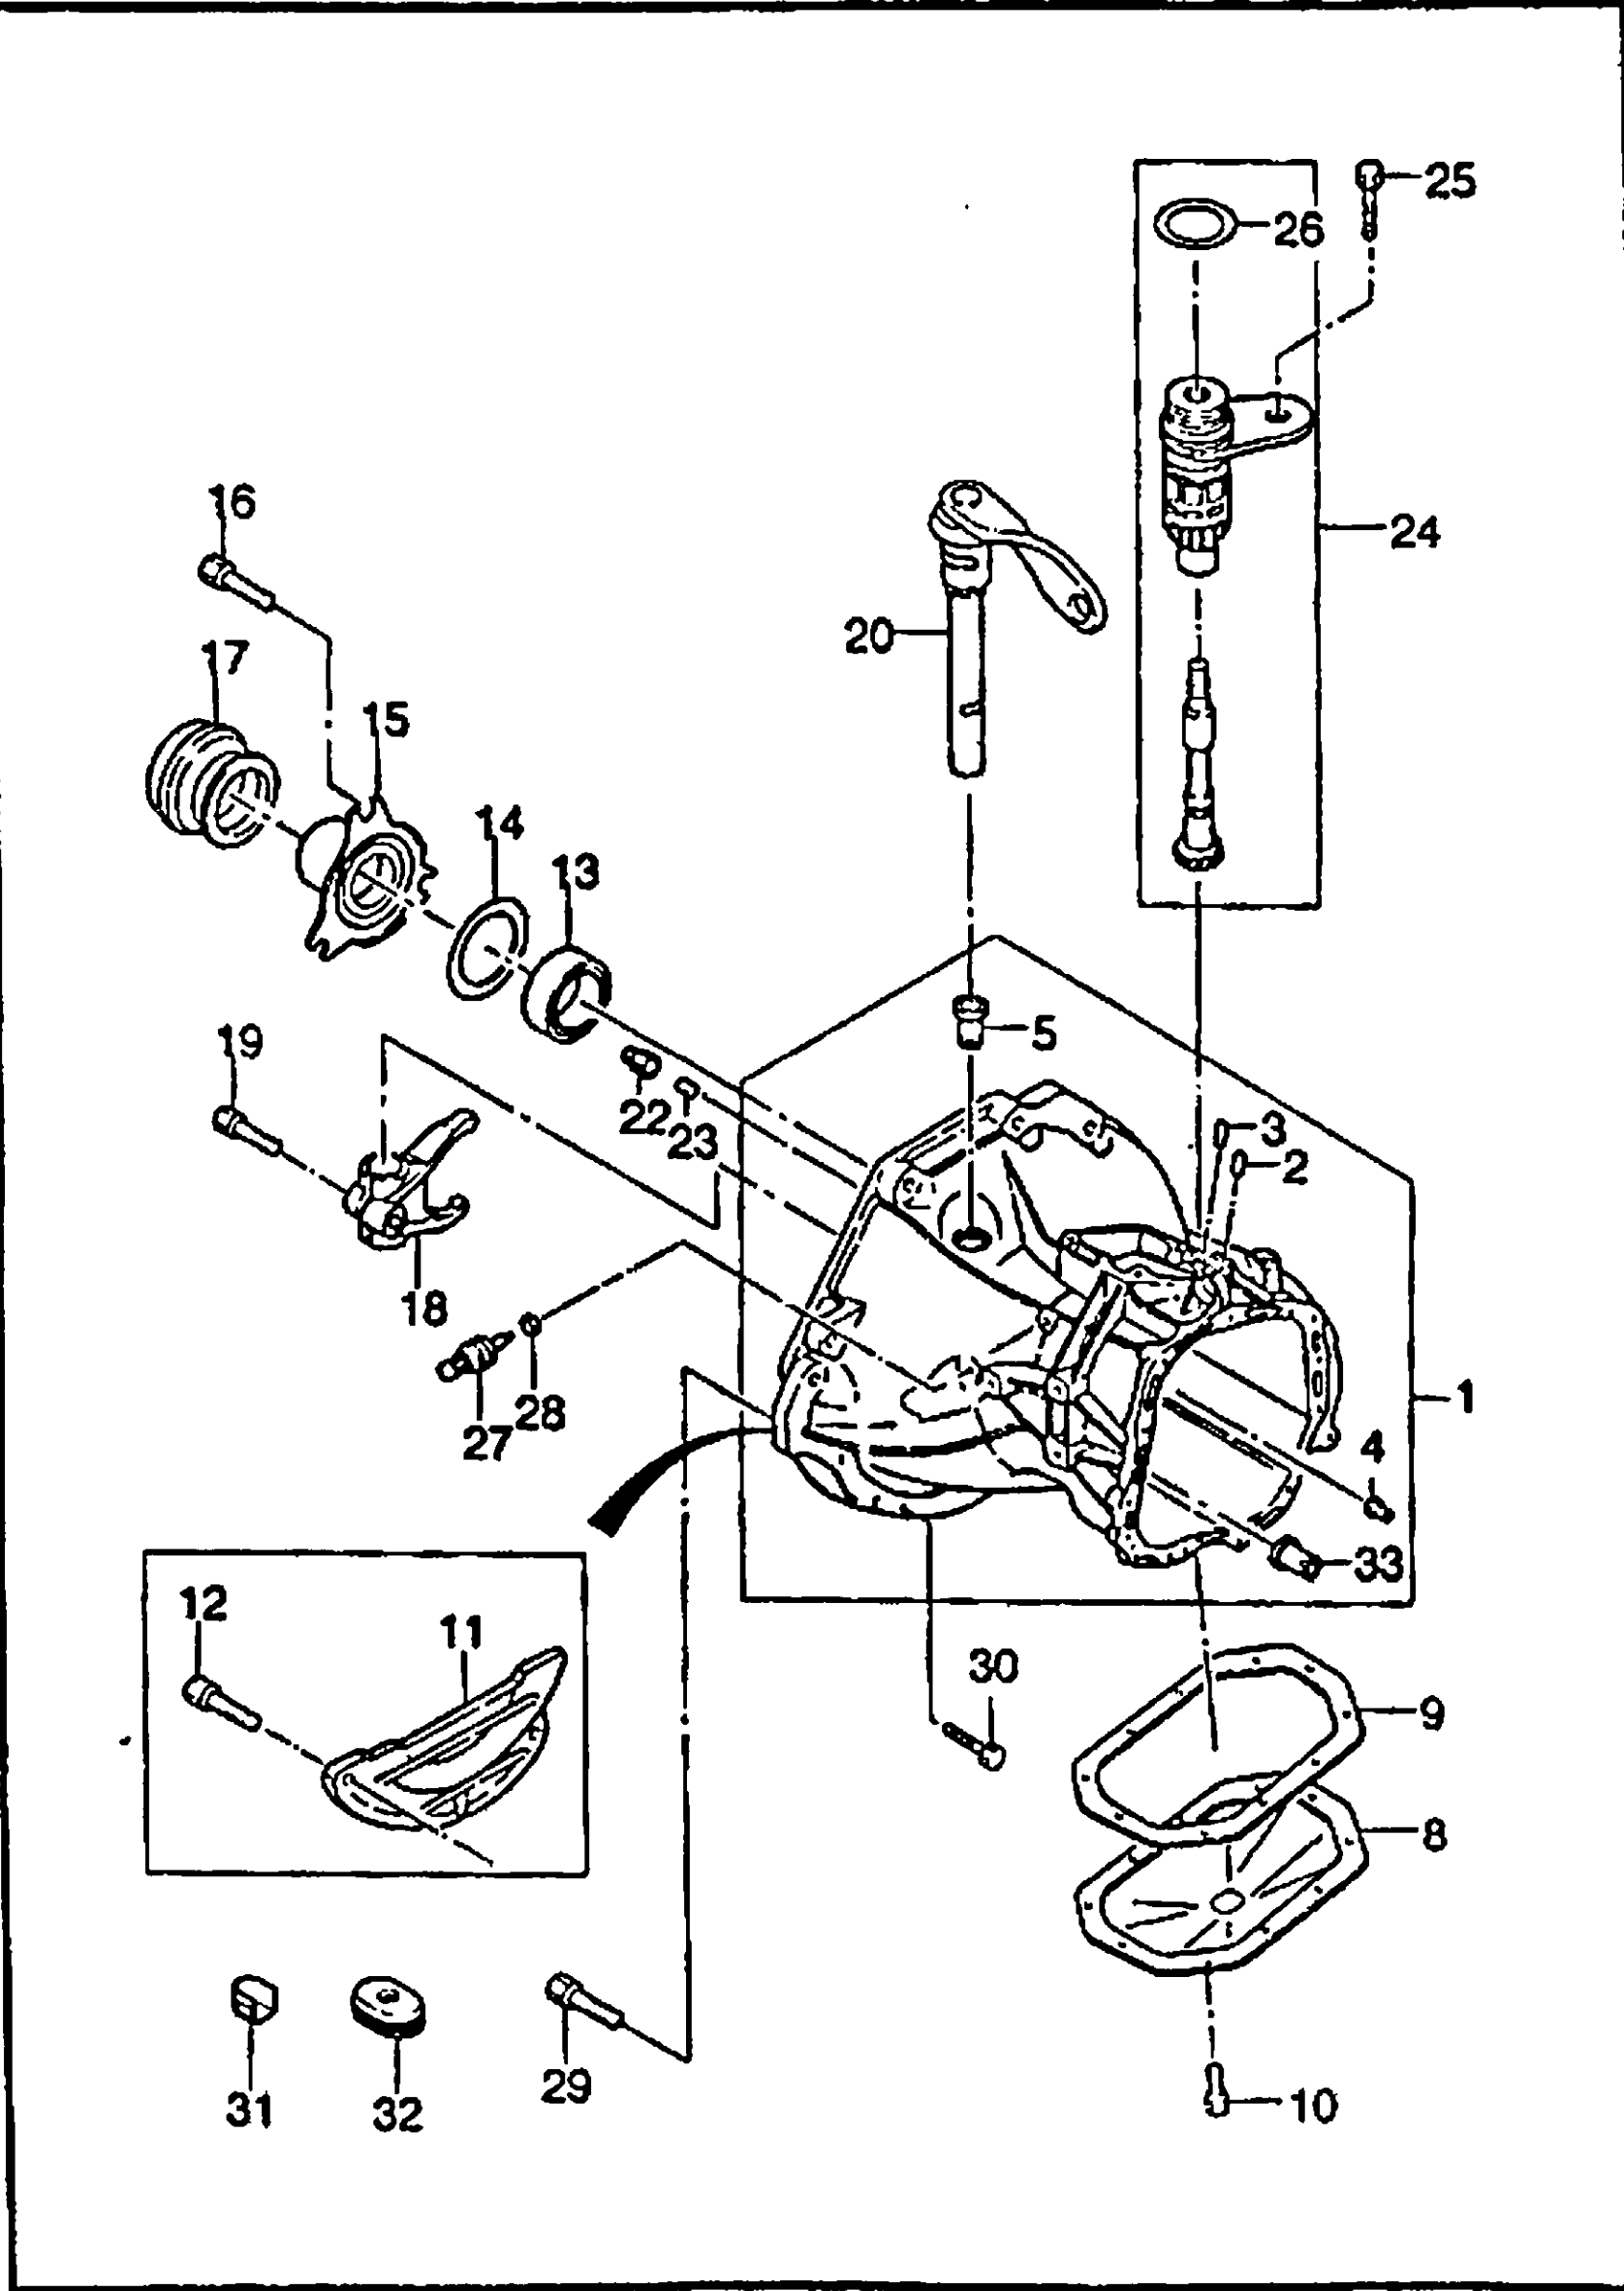


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L I T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL			FROM	TO				
				4 N	3 H	5 H	S S							S S	S S
	[12] 09103-10046	(E)BOLT (D)SCHRAUBE		M	B	B	B	S	S	S	&NN4/NN6	(F)BOULON (S)PERNO	3	FOR STEEL OIL PAN	
	[13] 90182168	(E)RING-SHAFT SEAL (D)RING,STAB DICHTUNG		M	B	B	B	S	S	S		(F)ANNEAU-JOINT D'ARBRE (S)ANILLO-BROCHE DE EJE	1	23X35X8	
	[14] 90112258	(E)ORING (D)ORING		M	B	B	B	S	S	S		(F)JOINT TORIQUE (S)ANILLO EN O	1	60.5X2.2	
	[15] 90112325	(E)GUIDE-THRUST BEARING (D)FÜHRING,STOß LAGER		M	B	B	B	S	S	S		(F)GUIDE-ROULEMENT DE BUTEE (S)GUIA-COJINETE DE EMPUJE	1		
	[16] 09100-06004	(E)BOLT (D)SCHRAUBE		M	B	B	B	S	S	S		(F)BOULON (S)PERNO	3		
	[17] 90251210	(E)BEARING-CLUTCH THRUST (D)KUGELLAGER,KUPPLUNG SCHUB		M	B	B	B	S	S	S		(F)ROULEMENT (S)COJINETE-EMPUJAR EMBRAGUE	1		
	[18] 90372766	(E)FORK-CLUTCH RELEASE (D)GABEL,KUPPLUNG LÖSUNG		M	B	B	B	S	S	S		(F)FOURCHETTE (S)HORQUILLA-LIBERACION	1		
	[19] 09100-08020	(E)BOLT (D)SCHRAUBE		M	B	B	B	S	S	S		(F)BOULON (S)PERNO	1		
	[20] 96144874	(E)LEVER-RELEASE (D)HEBEL,LÖSUNG		M	B	B	B	S	S	S		(F)LEVIER-RELACHE (S)PALANCA-SOLTAR (LIBERAR)	1		
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

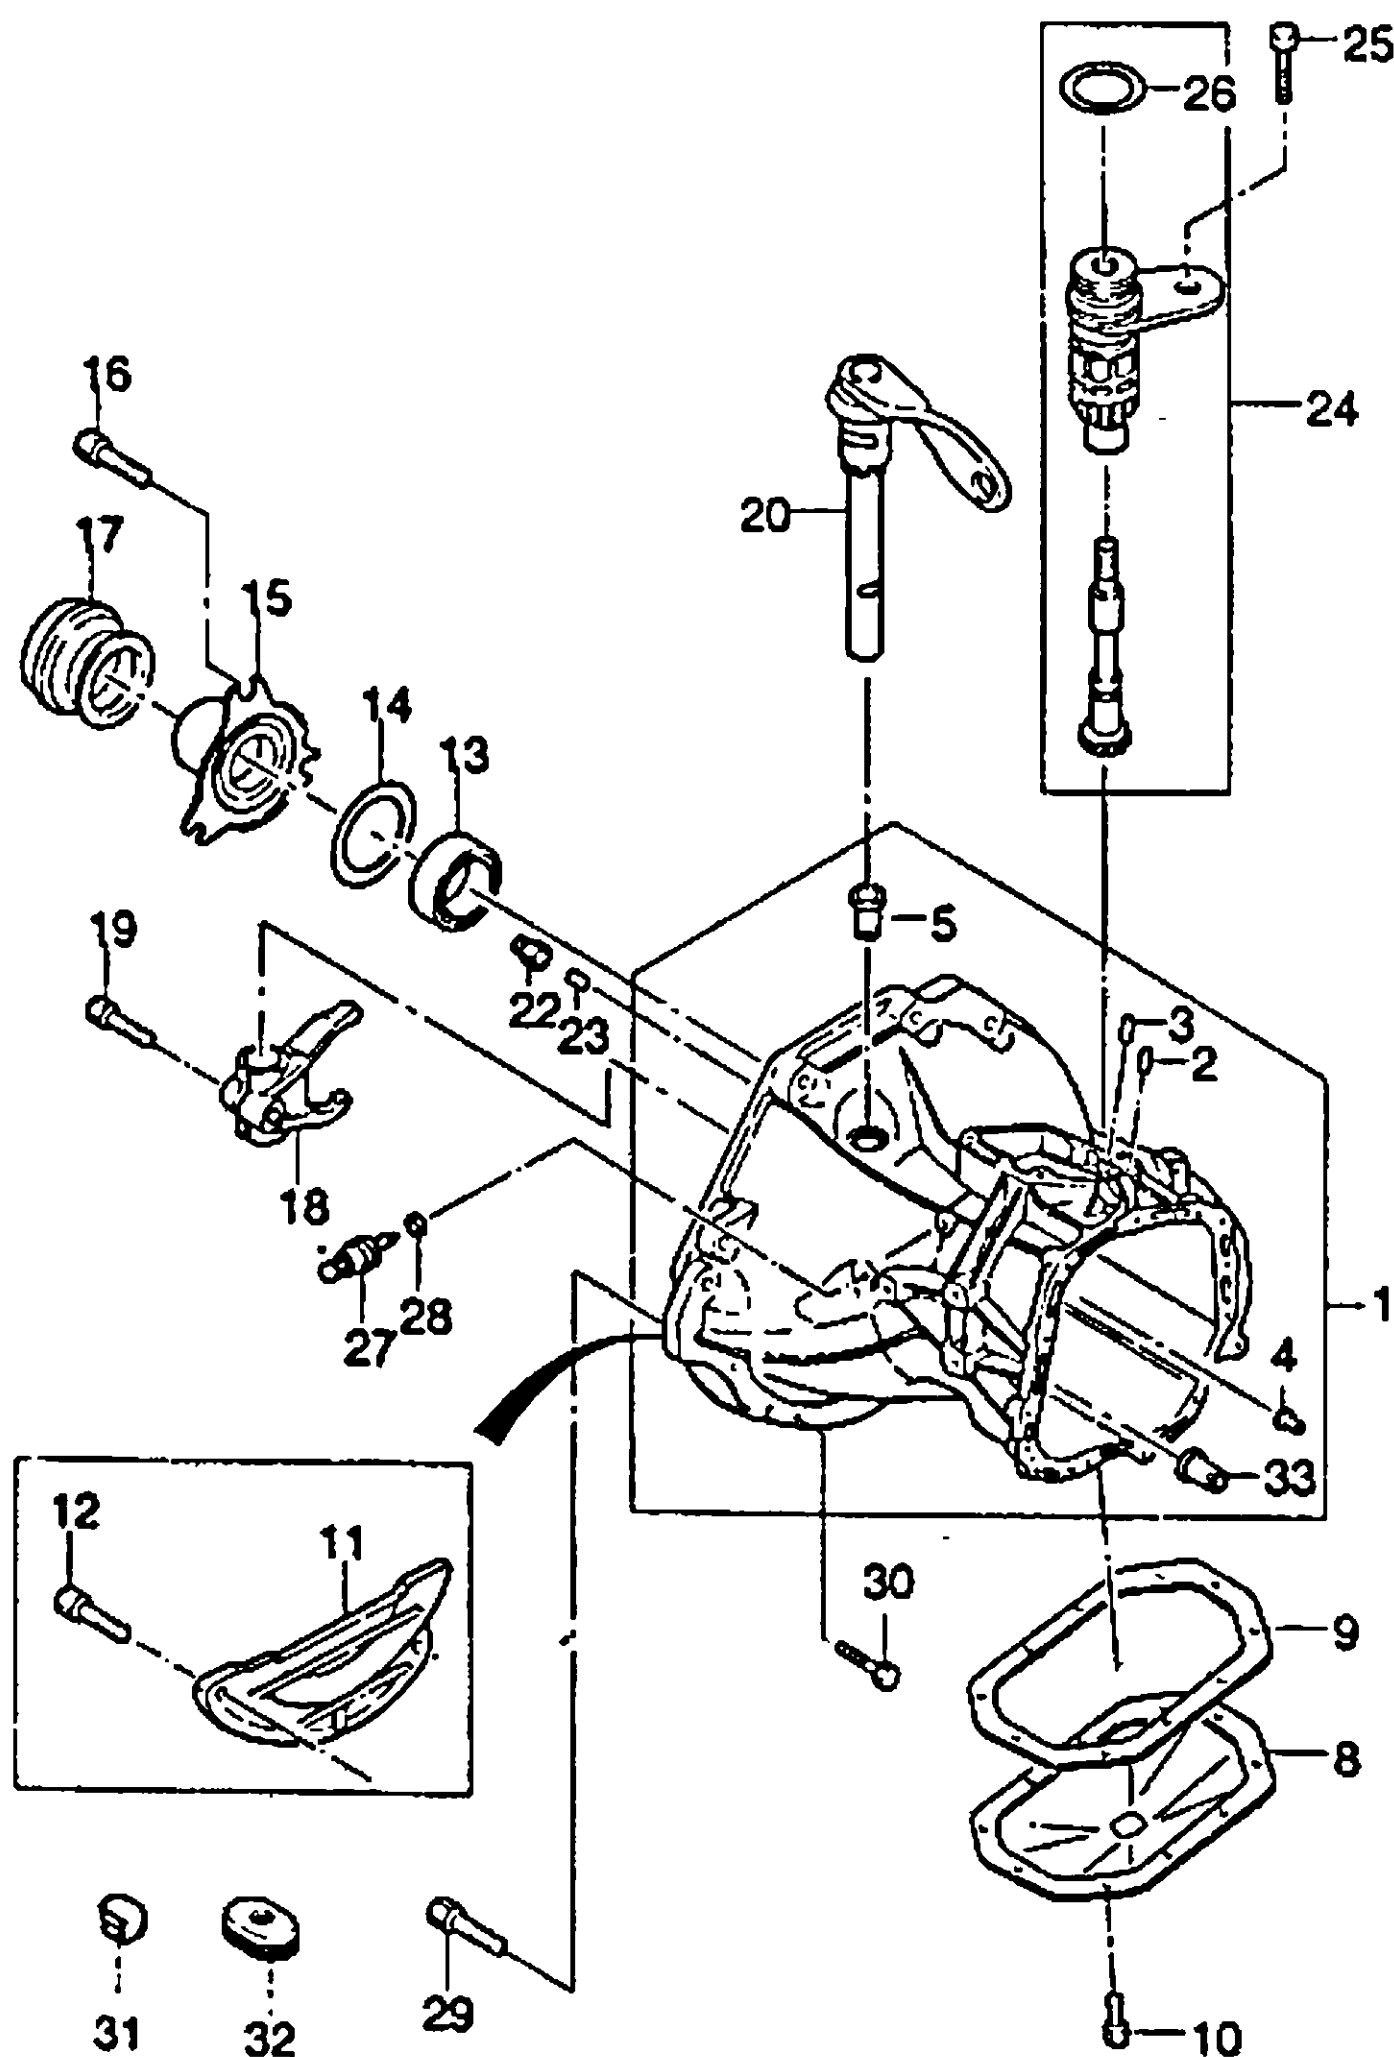

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / Q T Y R	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL			FROM	TO				
				4 N H	3 H	5 H	S S S X							S S S X	S S S X
[22]	09246-18003	(E)PLUG-SCREW (D)STÖPSEL, SCHRAUBEN							(F)BOUCHON-VIS (S)TAPON-TORNILLO						
[23]	03449250	(E)MAGNET (D)MAGNET							(F)AIMANT (S)IMAN						
[24]	90375764	(E)GEAR A-DRIVEN WORM (D)GETRIEBE							(F)ENGRENAGE (S)ENGRANAJE-SINFIN						
[25]	09100-06003	(E)BOLT (D)SCHRAUBE							(F)BOULON (S)PERNO						
[26]	09280-17001	(E)ORING (D)O RING							(F)JOINT TORIQUE (S)ANILLO EN O						
[27]	96192077	(E)SWITCH A-BACK UP LIGHT (D)SCHALTER, RÜCKGANGS-LAMPE							(F)COMMUTATEUR (S)INTERRUPTOR						
[28]	09160-12003	(E)WASHER-PLAIN (D)DICHTUNGSRING							(F)RONDELLE (S)ARANDELA						
[29]	09103-10009	(E)BOLT (D)SCHRAUBE							(F)BOULON (S)PERNO						
[30]	09103-10032	(E)BOLT (D)SCHRAUBE							(F)BOULON (S)PERNO						
[31]		(E)GROMMET-OIL PAN, BOLT (D)ÖSE							(F)VIROLE (S)AISLANTE						
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

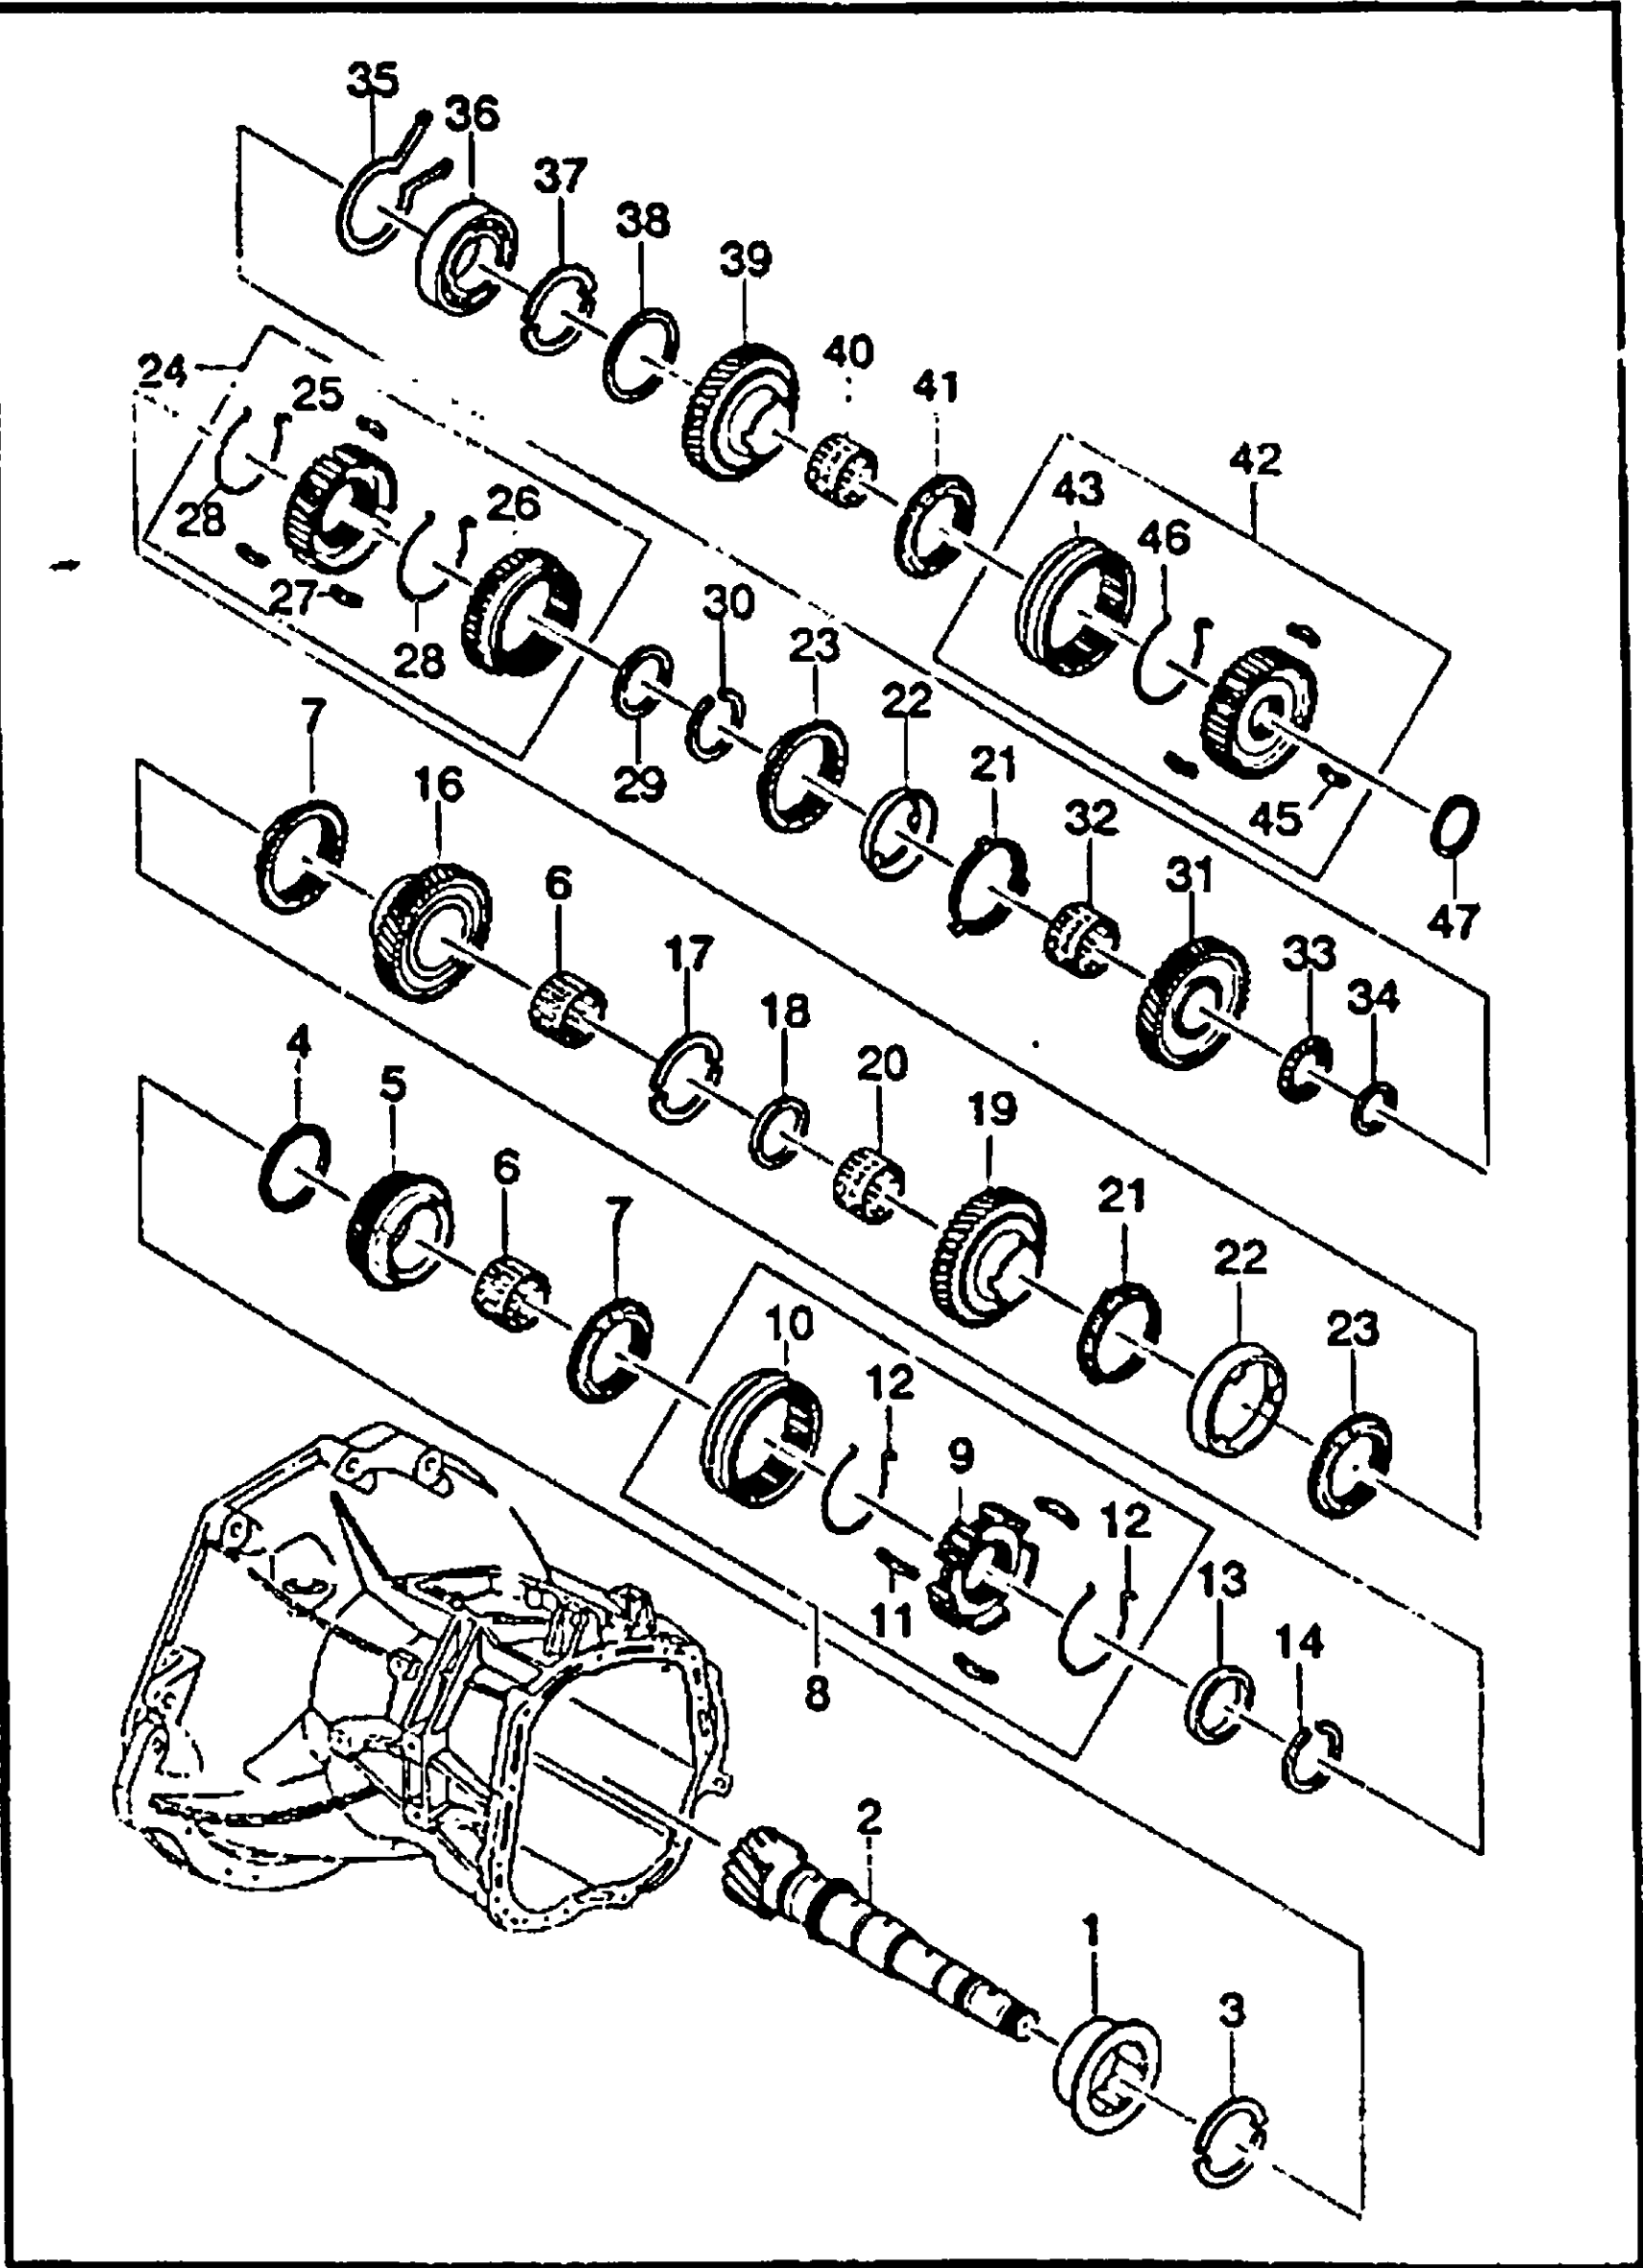


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
[01]	90373802	(E)BEARING-ROLLER (D)ROLLENLAGER									(F)ROULEMENT-ROULEAU (S)COJINETE-RUEDECILLA					
		. M B B B S S S									1		42X72X18			
[02]	A96242687	(E)SHAFT A-TRANSAXLE MAIN (D)SPINDEL,HAUPT,ANTRIEB						&M85			(F)ARBRE-PRINCIPAL (S)EJE-PRINCIPAL					
		Y M B B B S S S									1		RATIO : 4.176			
	A90373002	6 M B B B . . O						&MG4-KL9/EC1			1		RATIO : 3.722			
	A96242687	6 M B B B . . A						&M85&KL9/EC1			1					
[03]	90199104	(E)WASHER-MAIN SHAFT THRUST (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA					
		. M B B B S S S									2					
[04]	90112228	(E)RING-WASHER RETAINING (D)RING,DICHTUNG HALTER									(F)ANNEAU (S)ANILLO					
		. M B B B S S S									1					
[05]	A96237744	(E)GEAR A-4TH SPEED (D)GETRIEBE,4.GANG									(F)ENGRENAGE-4EME VITESSE (S)ENGRANAJE-4TA VELOCIDAD					
		Y M B B B S S S						&M85			1					
	A96180759	6 M B B B . . O						&MG4-KL9/EC1			1					
	A96237744	6 M B B B . . A						&M85&KL9/EC1			1					
[06]	90147685	(E)CAGE-NEEDLE (D)KÄFIG NADEL									(F)CAGE-AIGUILLE (S)JAULA-AGUJA					
		. M B B B S S S									2		38X42X24			
[07]	90304685	(E)RING-SYNCHRONIZING (D)RING,SYNCHRONISIERUNGS									(F)ANNEAU-SYNCHRONISATION (S)ANILLO-SINCROIZADOR					
		. M B B B S S S									2					
[08]	A90236634	(E)SLEEVE A-SHIFT (D)HÖLSE,5.GANG-SCHALTUNG									(F)CHEMISE-CHANGEMENT (S)MANGA-CAMBIO					
		. M B B B S S S									1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

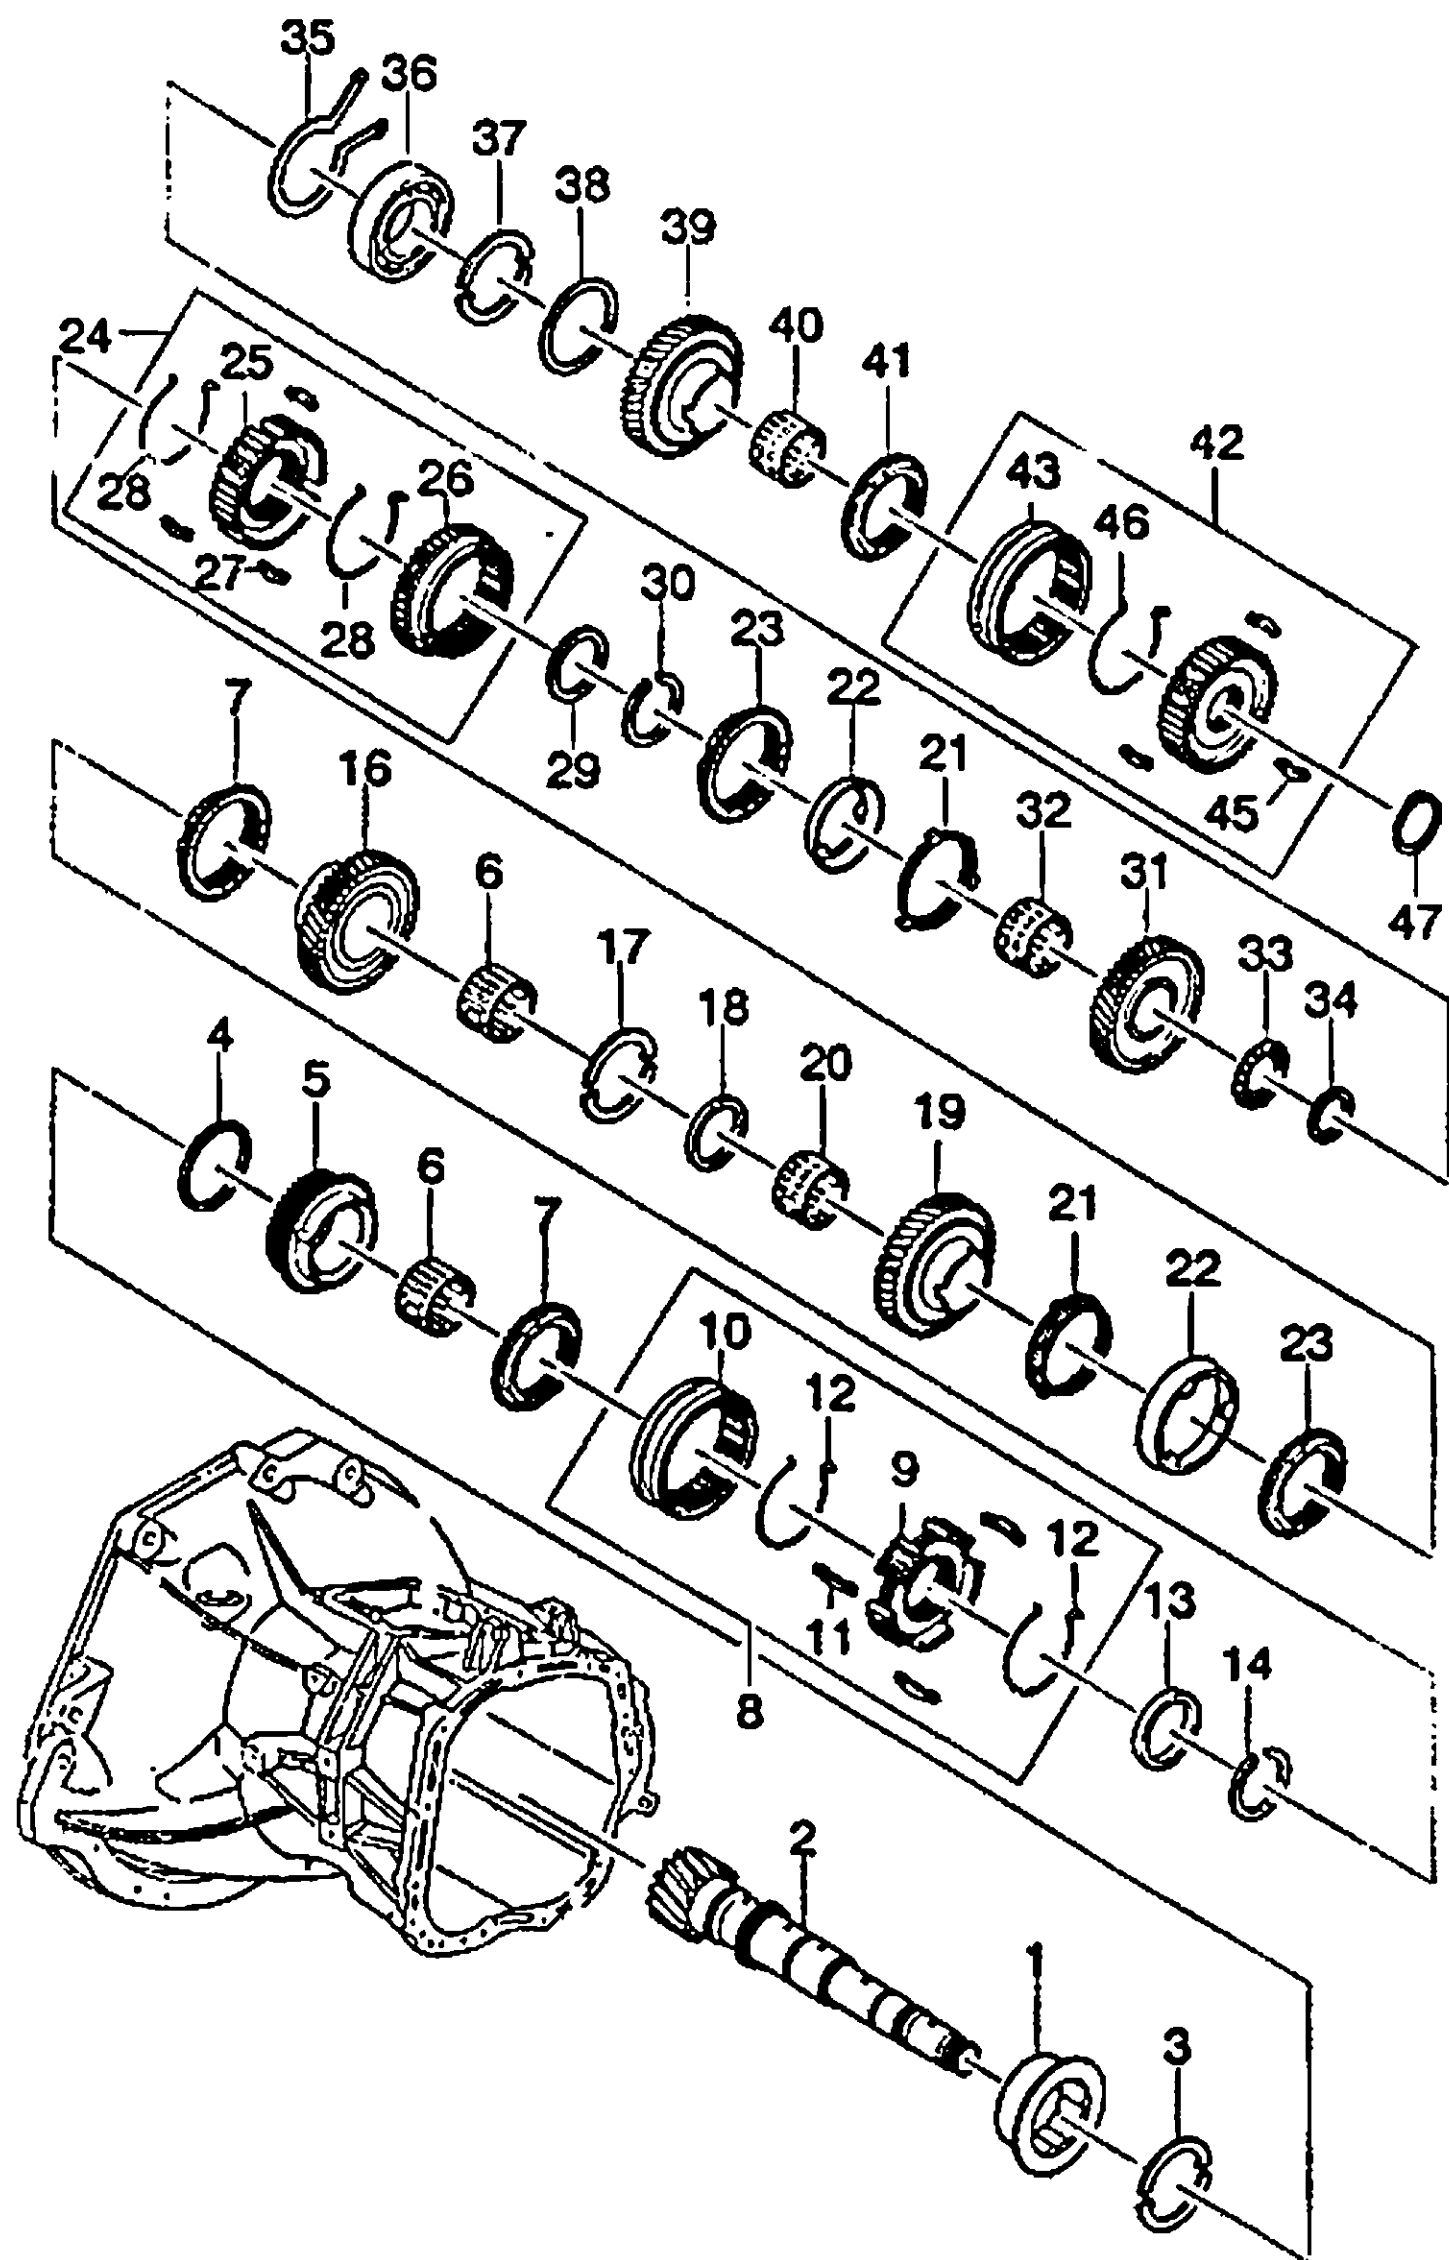


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[09]	(E)GEAR-CLUTCH (D)GETRIEBE,KUPPLUNG									(F)ENGRENAGE-EMBRAYAGE (S)ENGRANAJE-EMBRAGUE					
	N/S(8)															
	[10]	(E)RING-RETAINING (D)RING,HALTER									(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR					
	N/S(8)															
	[11]	(E)KEY-SYNCHRONIZER (D)SCHLÜßEL,SYNCHRONISATOR									(F)CLE-SYNCHRONISATEUR (S)LLAVE-SINCROIZADOR					
	90199973	. M B B B S S S									3					
	[12]	(E)SPRING-3&4TH SYNCHRONIZER (D)FEDERUNG,SYNCHRONISATOR									(F)RESSORT (S)RESORTE-SINCROIZADOR 3/4					
	90250023	. M B B B S S S									2					
	[13]	(E)WASHER-PLAIN (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA					
	09160-38001	. M B B B S S S									1					
	[14]	(E)CIRCLIP (D)RUND-KLEMMME									(F)CIRCLIP (S)GRAPA CIRCULAR					
	90373021	. M B B B S S S									1					
	[16]	(E)GEAR A-3RD SPEED (D)GETRIEBE,3.GANG									(F)ENGRENAGE-3EME VITESSE (S)ENGRANAJE-3RA VELOCIDAD					
	A96237742	Y M B B B S S S &M85									1					
	A96180757	6 M B B B . . O &MG4-KL9/EC1									1					
	A96237742	6 M B B B . . A &M85&KL9/EC1									1					
	[17]	(E)WASHER-MAIN SHAFT THRUST (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA					
	90199644	. M B B B S S S									2					
	[18]	(E)RING-WASHER RETAINING (D)RING,DICHTUNG HALTER									(F)ANNEAU (S)ANILLO					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

3230 TRANSAXLE GEAR

4D05

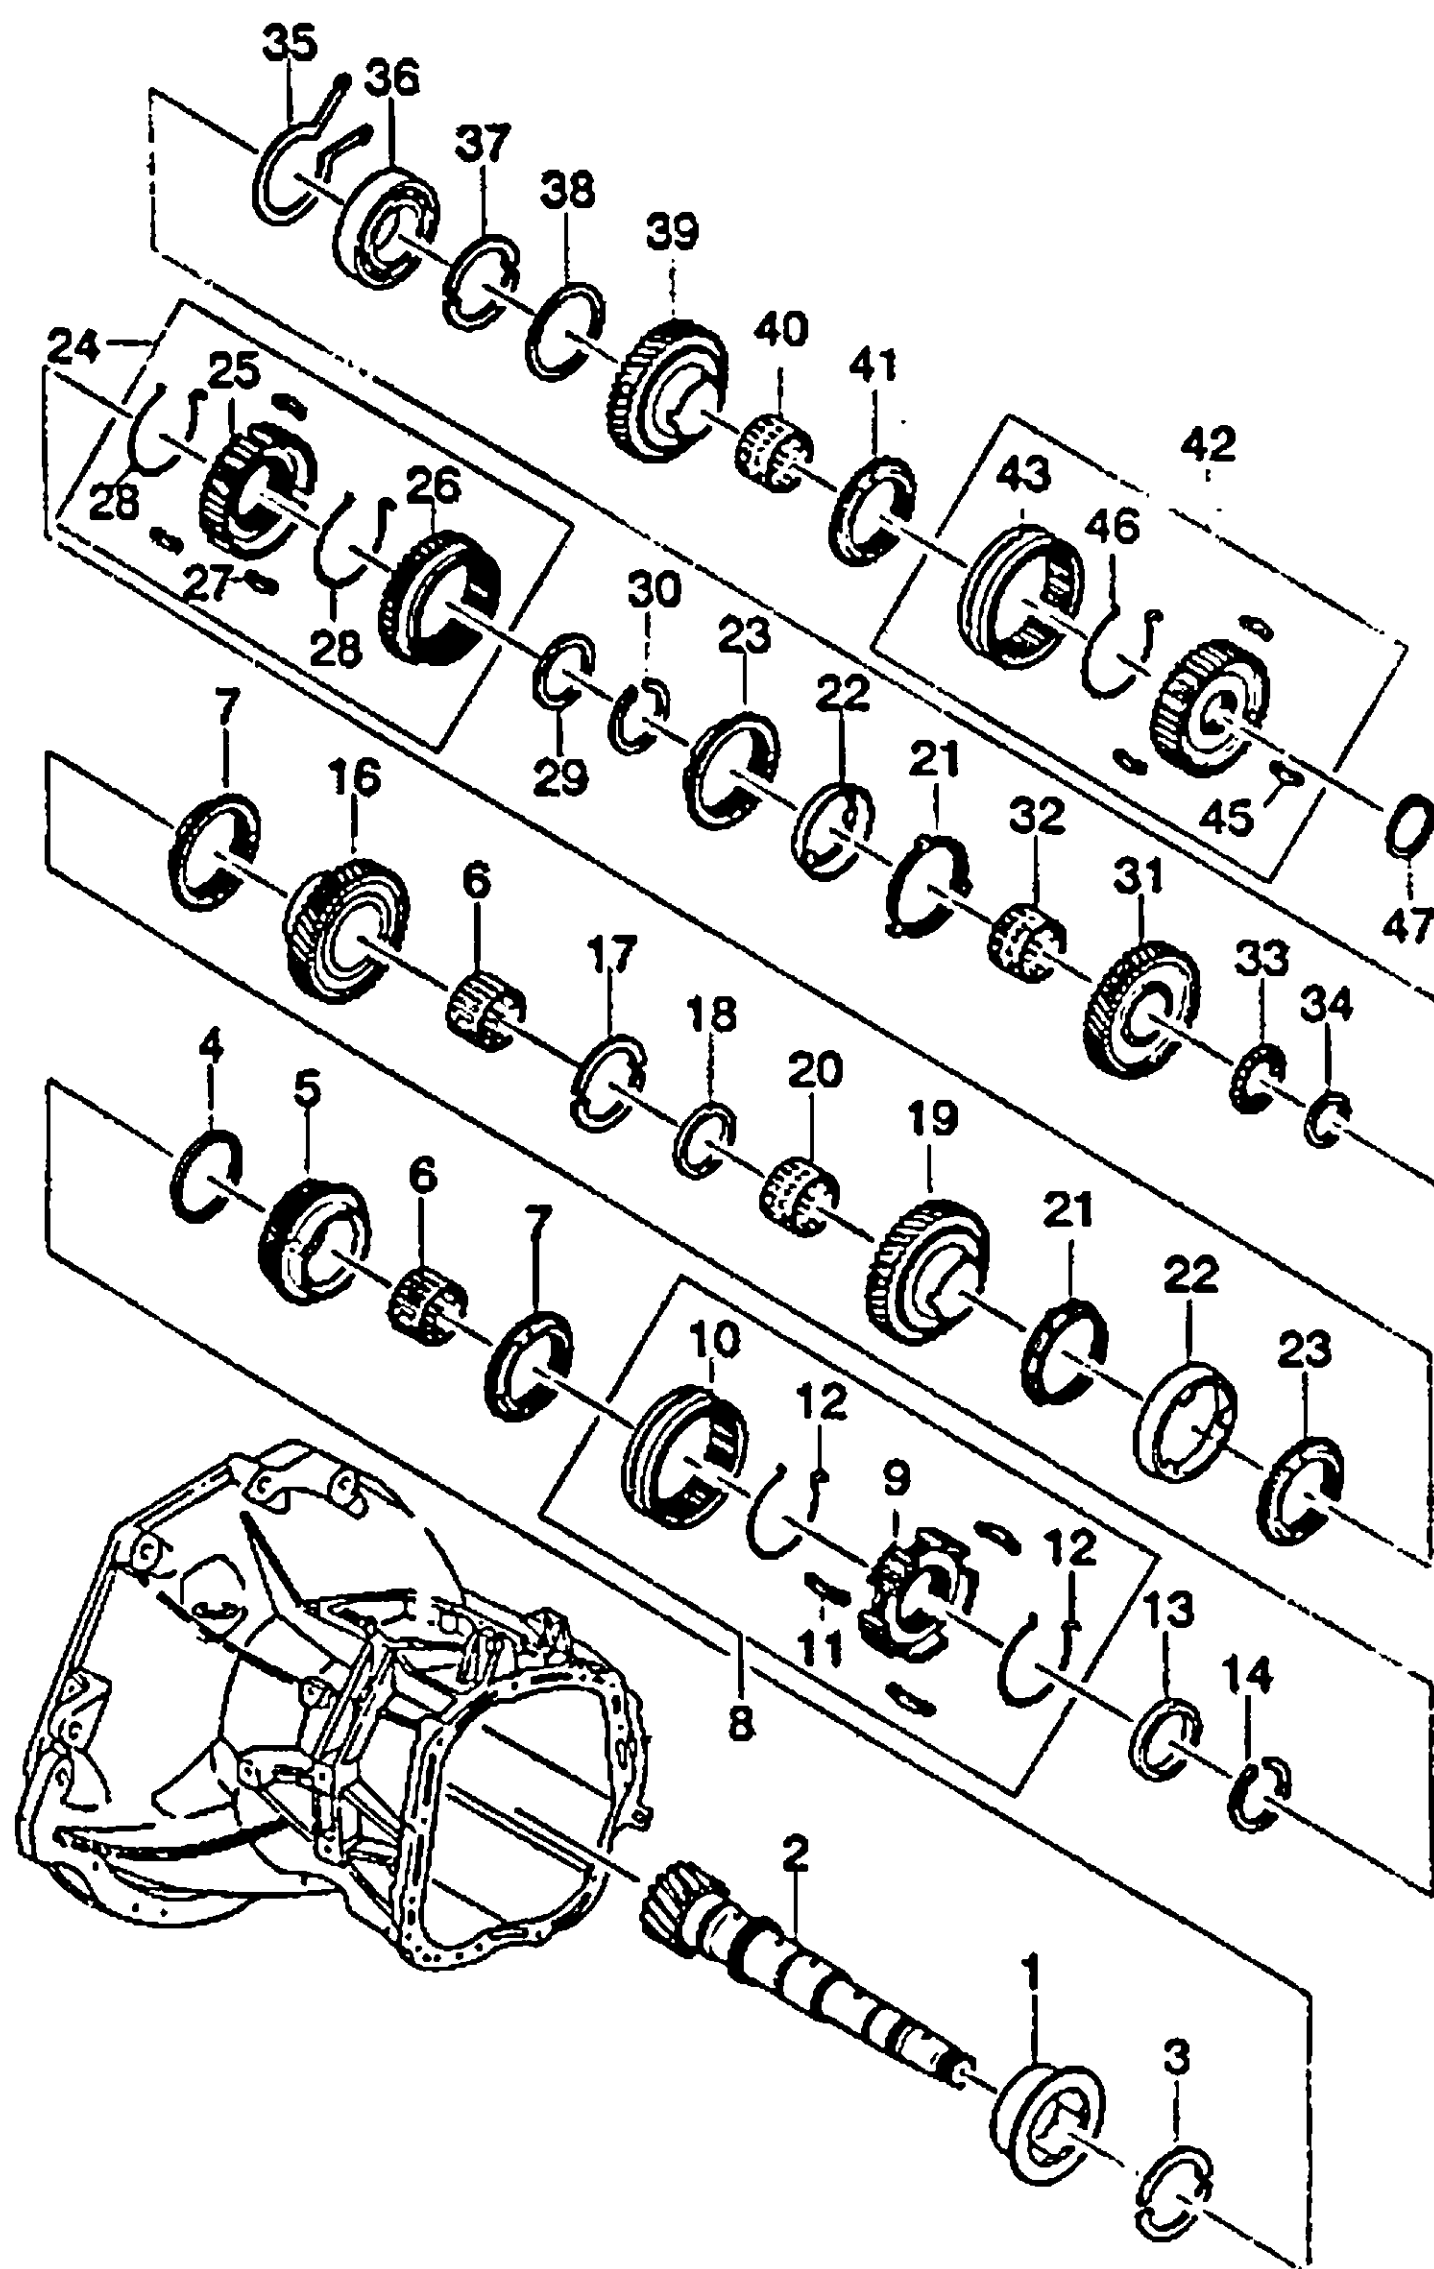


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N	3 H	5 H								
	90112228	.	M	B	B	B	S	S	S		1			
	[19]	(E)GEAR A-2ND SPEED (D)GETRIEBE, 2. GANG									(F)ENGRENAGE-2EME VITESSE (S)ENGRANAJE-2DA VELOCIDAD			
	A96237740	Y	M	B	B	B	S	S	S	&M85	1			
	A90236632	6	M	B	B	B	.	.	O	&MG4-KL9/EC1	1			
	A96237740	6	M	B	B	B	.	.	A	&M85&KL9/EC1	1			
	[20]	(E)CAGE-NEEDLE (D)KAFIG NADEL									(F)CAGE-AIGUILLE (S)JAULA-AGUJA			
	90373750	.	M	B	B	B	S	S	S		1		38X42X28	
	[21]	(E)RING-INSIDE SYNCHRONIZER (D)RING, 3 KEGEL ZWISCHEN									(F)ANNEAU (S)ANILLO-INTERMEDIO			
	90305938	.	M	B	B	B	S	S	S		2			
	[22]	(E)RING-3 CONE INTERMEDIATE (D)RING, 3 KEGEL ZWISCHEN									(F)ANNEAU (S)ANILLO-INTERMEDIO			
	90250034	.	M	B	B	B	S	S	S		2			
	[23]	(E)RING-OUTSIDE SYNCHRONIZER (D)RING, SYNCHRONISATOR									(F)ANNEAU (S)ANILLO-SINCROZADOR			
	90305939	.	M	B	B	B	S	S	S		2			
	[24]	(E)GEAR A-SLIDING (D)GETRIEBE									(F)ENGRENAGE-GLISSANT (S)ENGRANAJE-DESLIZADO			
	A90236633	.	M	B	B	B	S	S	S		1			
	[25]	(E)PIECE-GUIDE 1ST&2ND SPEED (D)TEIL, FÜHRUNGS									(F)PIECE-GUIDE (S)PIEZA-GUIA			
	N/S(24)	(E)GEAR-SLIDING TO REVERSE (D)GLEITGETRIEBE, RÜCKWÄRTS									(F)ENGRENAGE (S)ENGRANAJE			
	[26]													
	N/S(24)													
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

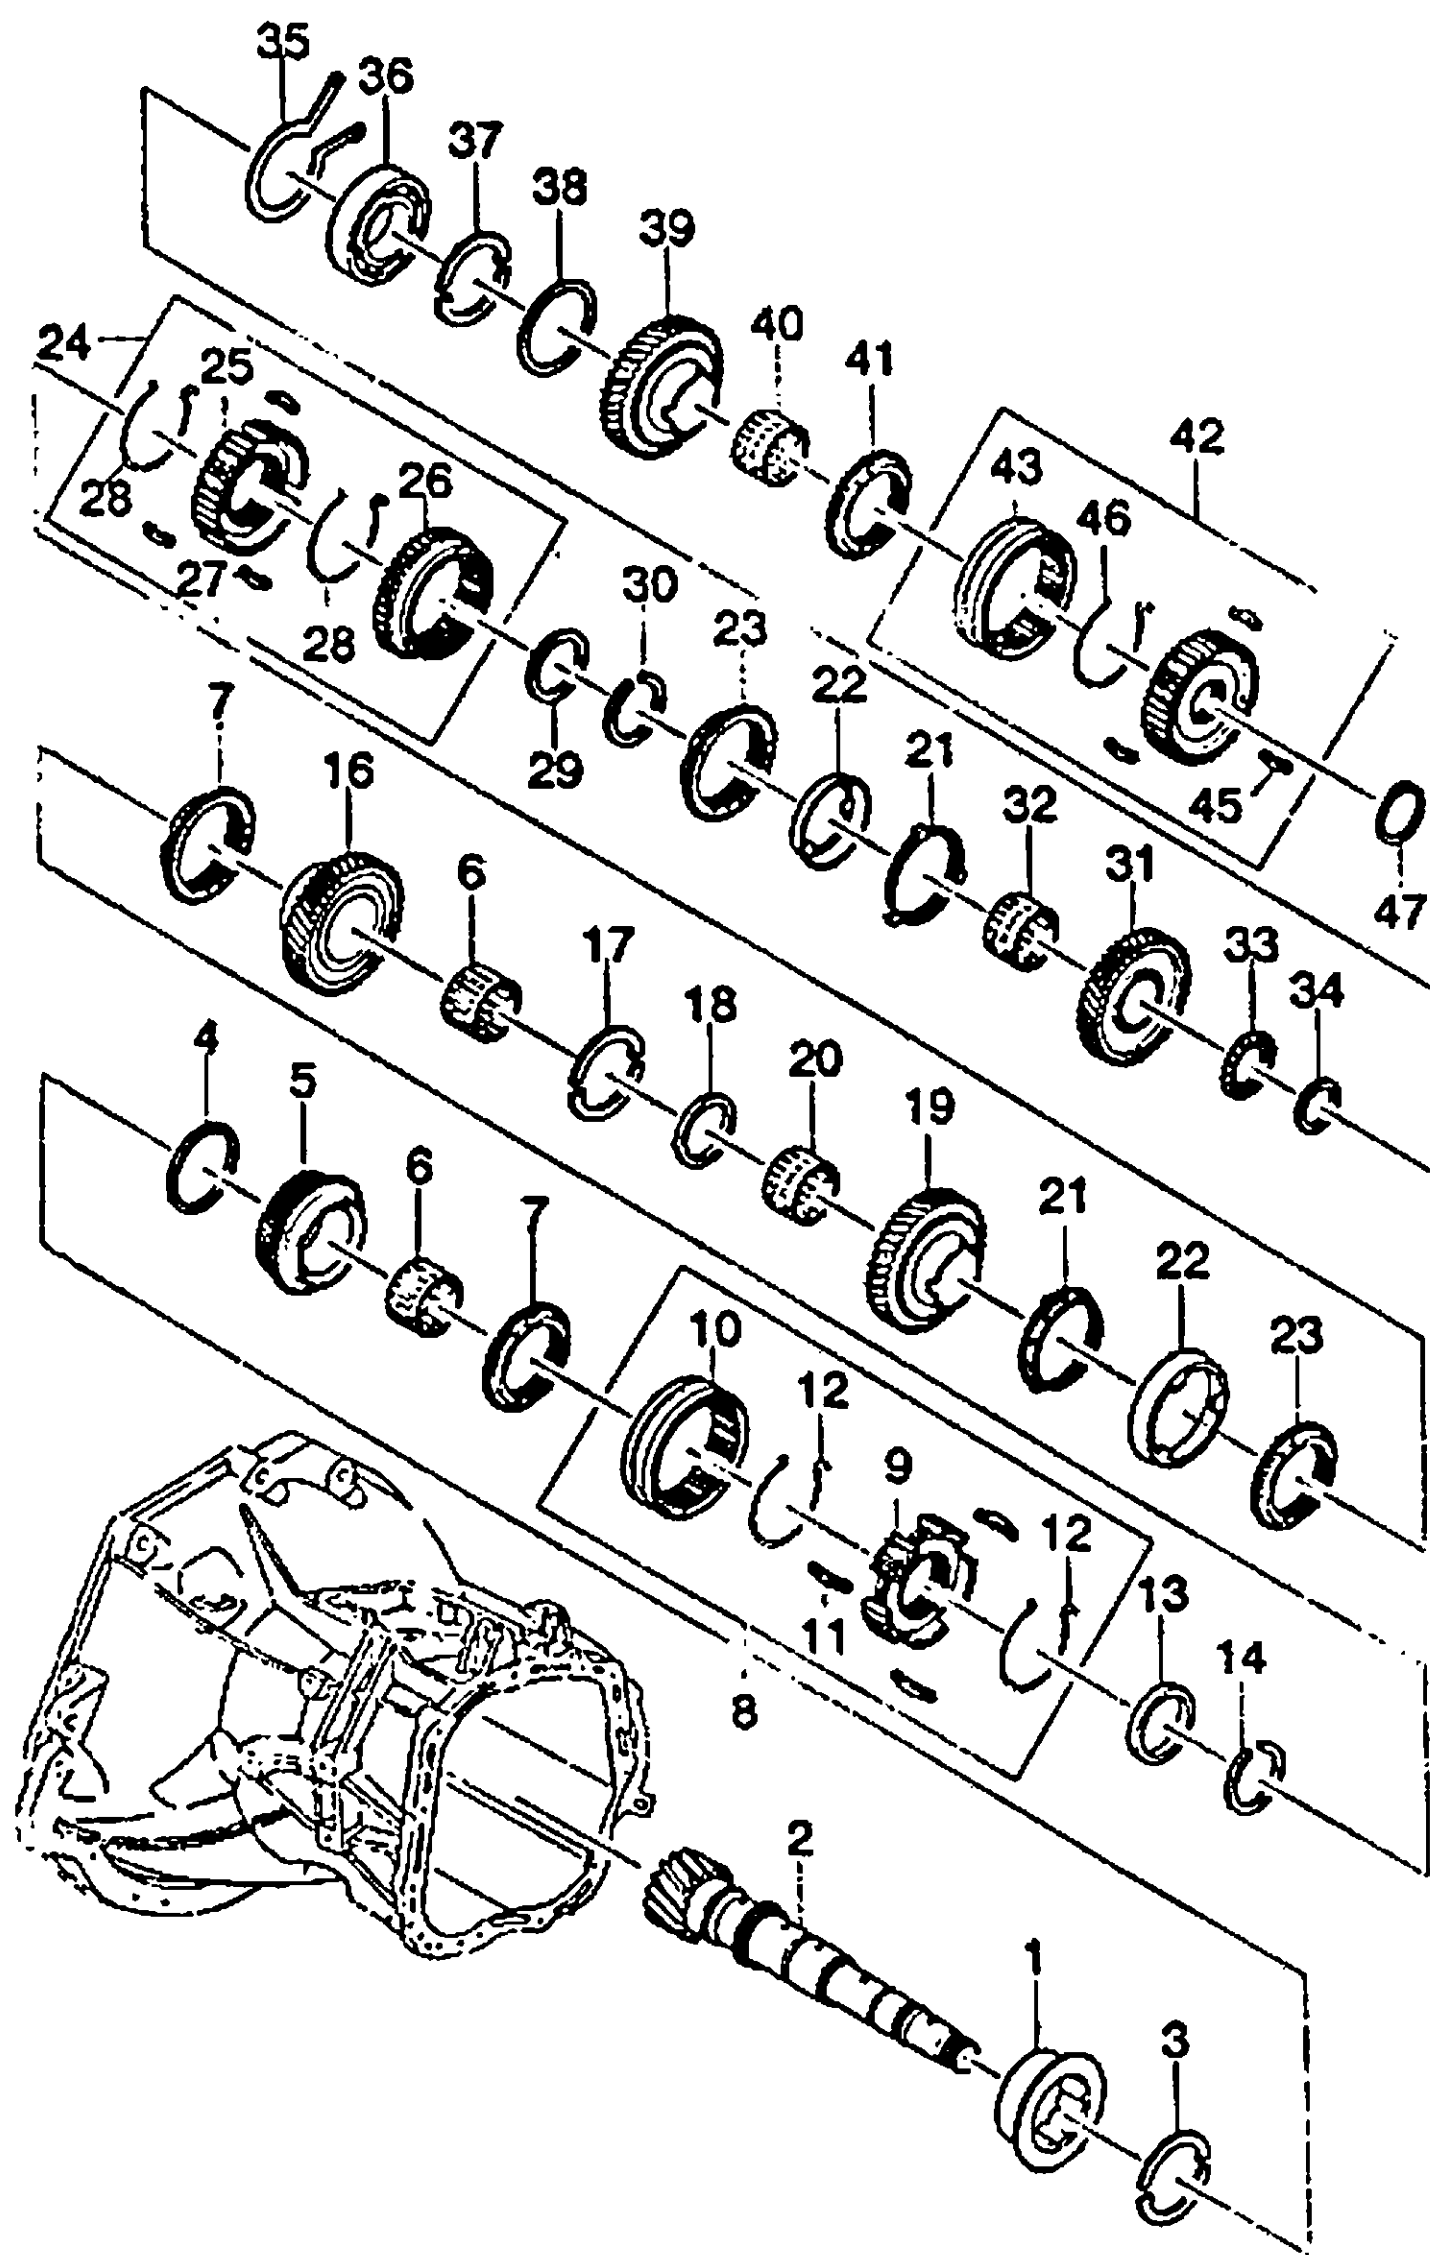


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q / Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E / N / G	T / A	BODY			LEVEL								
				4 N	3 H	5 H	S S	S S				X			
	[27]	(E)KEY-1ST&2ND SYNCHRONIZER	(D)SCHLÜßEL, SYNCHRONISATOR							(F)CLE-SYNCHRONISATEUR	(S)LLAVE-SINCROIZADOR				
	90199019	. M	B	B	B	S	S	S		3					
	[28]	(E)SPRING-1ST&2ND SYNCHRON	(D)FEDERUNG, SYNCHRONISATOR							(F)RESSORT	(S)RESORTE				
	90250029	. M	B	B	B	S	S	S		2					
	[29]	(E)WASHER-PLAIN	(D)DICHTUNGSRING							(F)RONDELLE	(S)ARANDELA				
	09160-33007	. M	B	B	B	S	S	S		1					
	[30]	(E)CIRCLIP	(D)RUND-KLEMME							(F)CIRCLIP	(S)GRAPA CIRCULAR				
	90142582	. M	B	B	B	S	S	S		1					
	[31]	(E)GEAR A-1ST SPEED	(D)GETRIEBE, 1. GANG							(F)ENGRENAGE-1ERE VITESSE	(S)ENGRANAJE-1RA VELOCIDAD				
	90334381	. M	B	B	B	S	S	S		1					
	[32]	(E)CAGE-NEEDLE	(D)KÄFIG NADEL							(F)CAGE-AIGUILLE	(S)JAULA-AGUJA				
	90373752	. M	B	B	B	S	S	S		1			33X37X28		
	[33]	(E)CAGE-NEEDLE	(D)KÄFIG NADEL							(F)CAGE-AIGUILLE	(S)JAULA-AGUJA				
	90373751	. M	B	B	B	S	S	S		1			33X52X2		
	[34]	(E)DISK-MAINSHAFT	(D)SCHEIBE, HAUPTSTANGE							(F)DISQUE	(S)DISCO-EJE PRINCIPAL				
	90142561	. M	B	B	B	S	S	S		1					
	[35]	(E)RING-RETAINING	(D)RING, HALTER							(F)ANNEAU-DE RETENTION	(S)ANILLO-RETENEDOR				
	90373019	. M	B	B	B	S	S	S		1					
	[36]	(E)BEARING-GROOVE BALL	(D)KUGELLAGER							(F)ROULEMENT-BILLE A SILLONS	(S)COJINETE-BOLA DE RANURA				
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC , = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

3230 TRANSAXLE GEAR


4G05

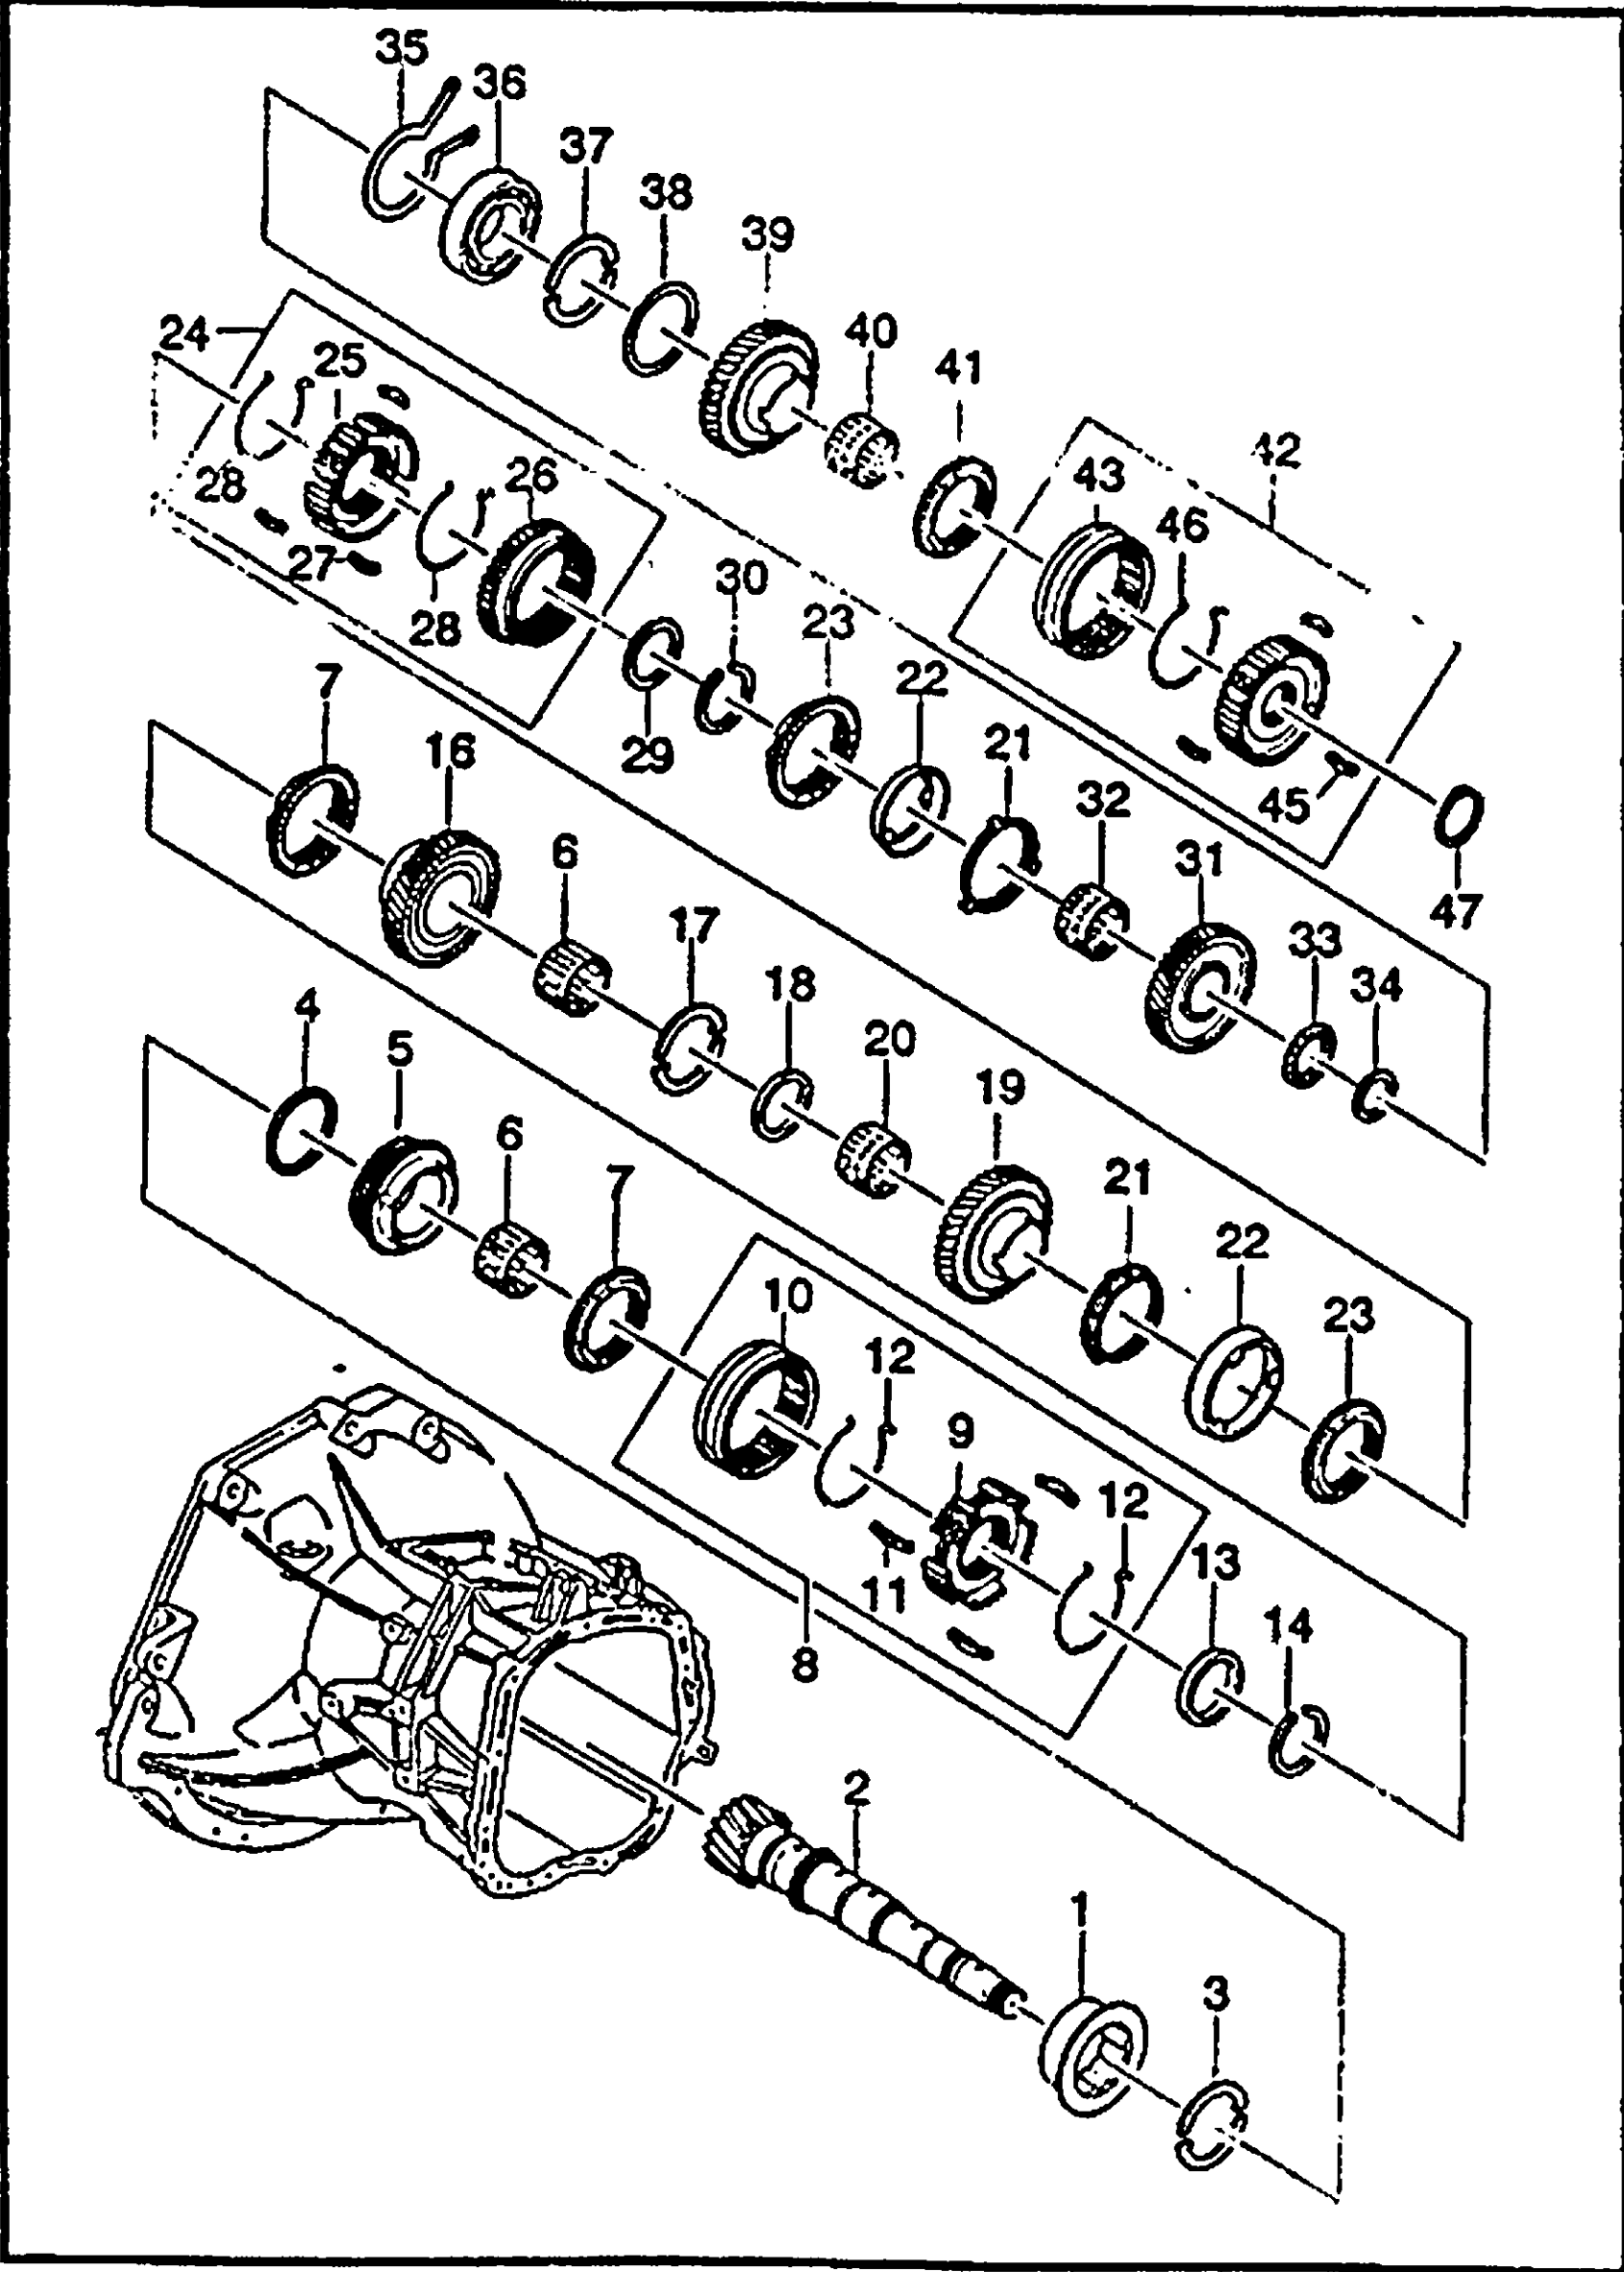

KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N H	3 H	5 H	S S	S S								S X
	{46} 90157546	(E)SPRING-5TH SPD SYNCHRONIZ (D)FEDERUNG,5.GANG SYNCHRO . M B B B S S S									(F)RESSORT-5EME VIT SYNCHRO (S)RESORTE 1					
	{47} 90373017	(E)RING-RETAINING (D)RING,HALTER . M B B B S S S									(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR 1					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

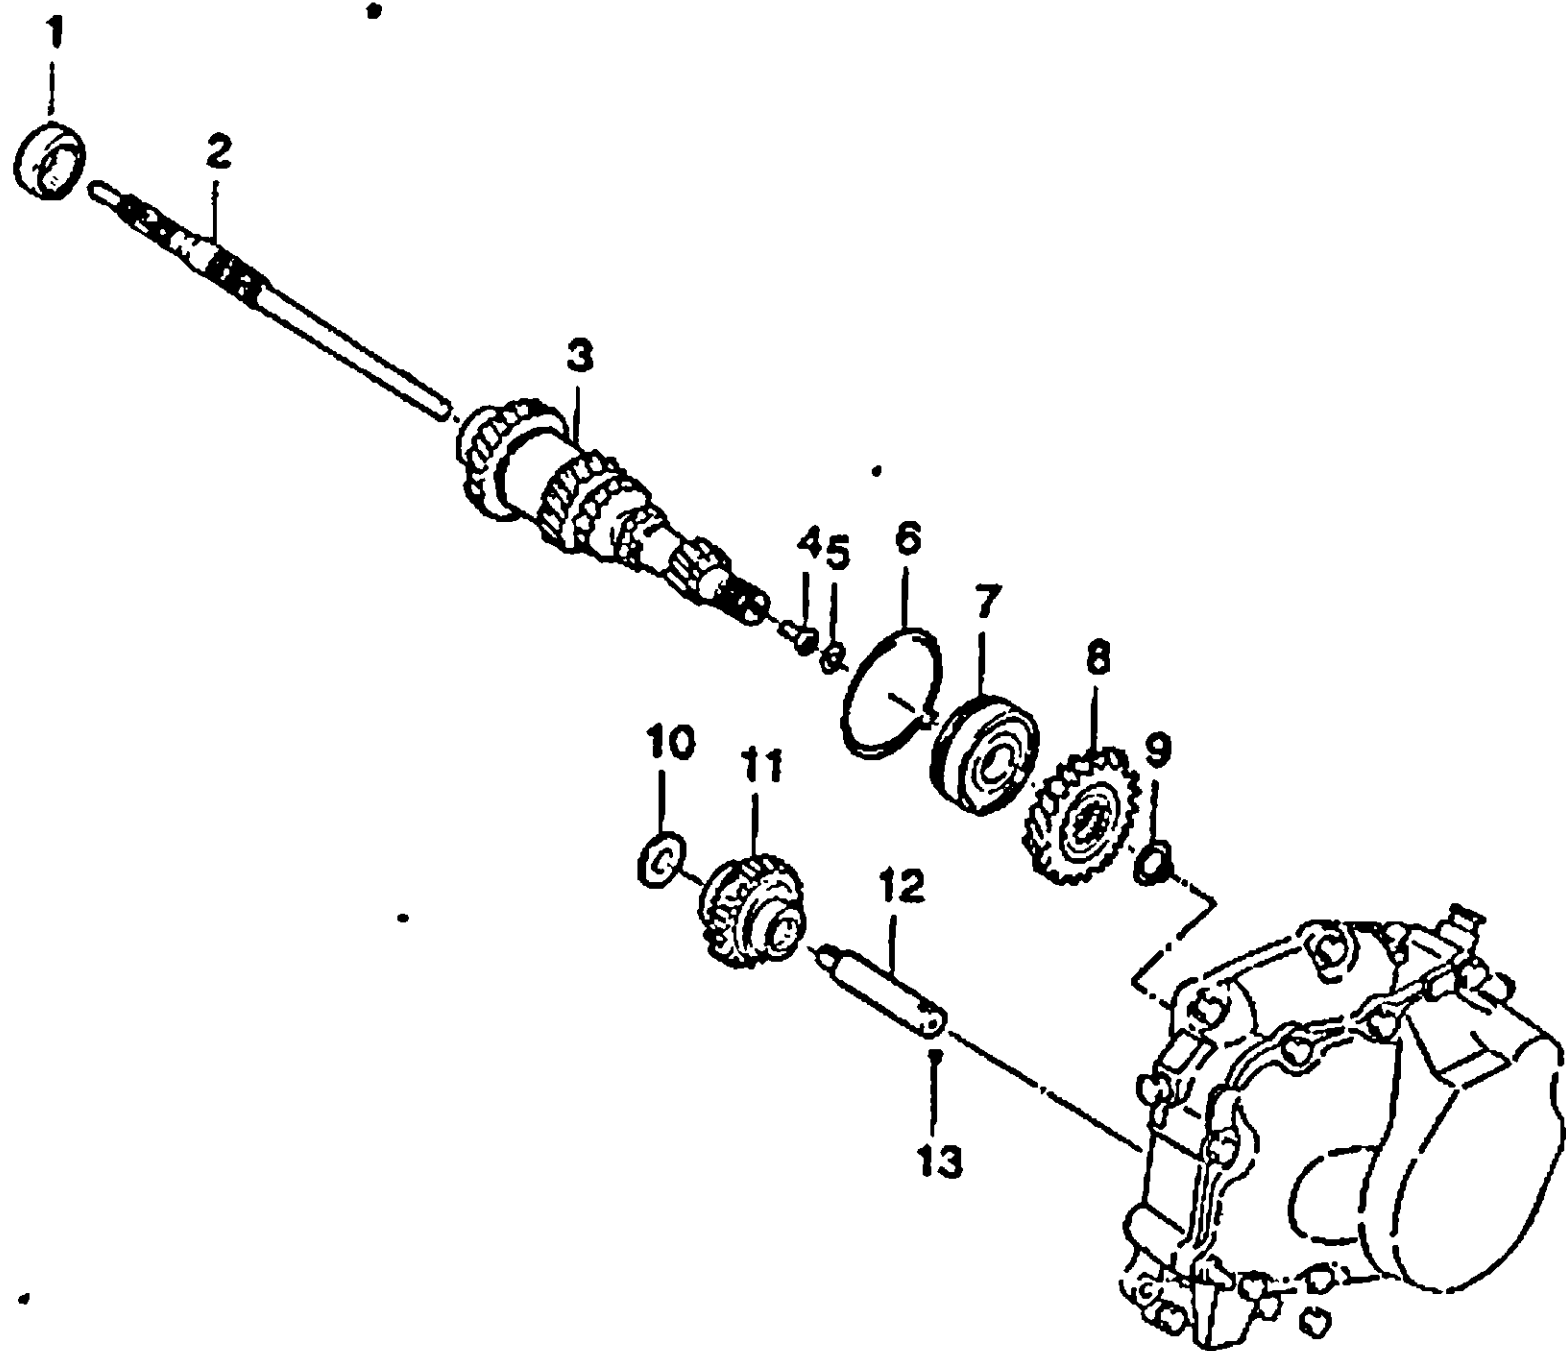


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S X
	[09] 90373018	(E)RING-RETAINING (D)RING,HALTER	.	M	B	B	B	S	S	S		(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR	1			
	[10] 09160-16002	(E)WASHER-PLAIN (D)DICHTUNGSRING	.	M	B	B	B	S	S	S		(F)RONDELLE (S)ARANDELA	1			
	[11] A96161880	(E)GEAR A-REVERSE IDLER (D)GETRIEBE,LEERLAUF	.	M	B	B	B	S	S	S		(F)ENGRENAGE (S)ENGRANAJE-OCIOSO	1			
	[12] 90182850	(E)SHAFT-REVERSE GEAR (D)SPINDEL	.	M	B	B	B	S	S	S		(F)ARBRE (S)EJE	1			
	[13] 06111-05004	(E)BALL (D)KUGEL	.	M	B	B	B	S	S	S		(F)BOULE (S)BOLA	1			
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

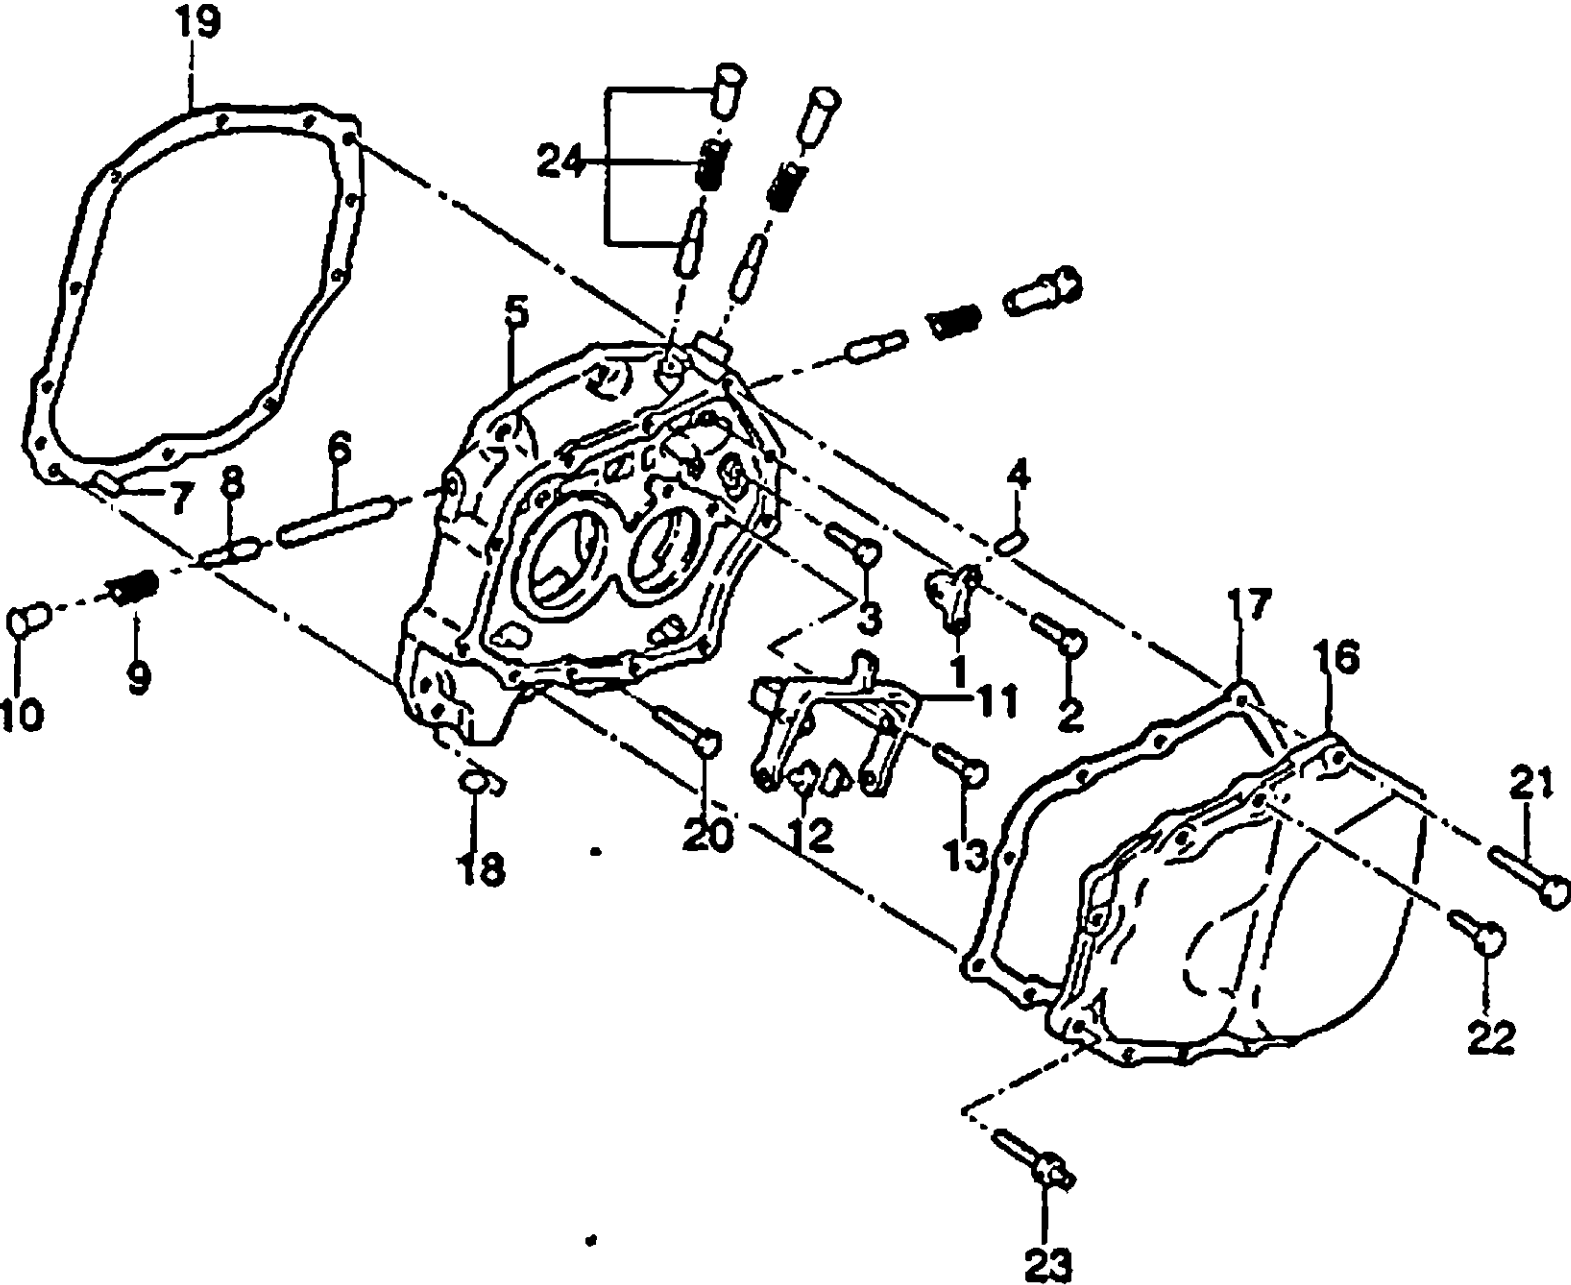

KEY NO.		PART NAME											
I T C	PART NO	MODEL						OPTION	L / Q / R Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E / N / G	T / A	BODY			LEVEL						
				4 N H	3 H	5 H	S S			S S	S S		
										FROM	TO		
	[01]	(E)BRIDGE-STRAIN BOLT								(F)PONT-BOULON DE TAMIS			
	90147084	(D)BRÜCKEN-SPANNUNGSSCHRAUBE								(S)PUENTE-PERNO DE TENSION			
		. M B B B S S S								1			
	[02]	(E)BOLT								(F)BOULON			
	09106-06003	(D)SCHRAUBE								(S)PERNO			
		. M B B B S S S								2			
	[03]	(E)BOLT								(F)BOULON			
	09106-06004	(D)SCHRAUBE								(S)PERNO			
		. M B B B S S S								2			
	[04]	(E)BOLT-GEARSHIFT						STRAIN ROD		(F)BOULON			
	90086156	(D)SCHRAUBE								(S)PERNO			
		. M B B B S S S								1			
	[05]	(E)PLATE-BEARING								(F)PLAQUE-ROULEMENT			
	96180859	(D)PLATTE,LAGER								(S)PLACA-COJINETE			
		. M B B B S S S								1			
	[06]	(E)BOLT-GEARSHIFT						STRAIN ROD		(F)BOULON			
	90032052	(D)SCHRAUBE								(S)PERNO			
		. M B B B S S S								1			
	[07]	(E)PIN-DOWEL								(F)BROCHE-GOUJON			
	11053109	(D)STIFT,DÜBEL								(S)PASADOR-CLAVIJA			
		. M B B B S S S								2			
	[08]	(E)PIN-BLOCKING								(F)BROCHE-DE BLOCAGE			
	90189977	(D)STIFT,BLOCKIER								(S)PASADOR-BLOQUEADOR			
		. M B B B S S S								1			
	[09]	(E)SPRING-COMPRESSION								(F)RESSORT-COMPRESSION			
	90125326	(D)FEDERUNG,VERDICHTUNG								(S)RESORTE-COMPRESION			
		. M B B B S S S								1			
	[10]	(E)PLUG								(F)BOUCHON			
		(D)STÖPSEL								(S)TAPON			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

3250 BEARING PLATE


4L05

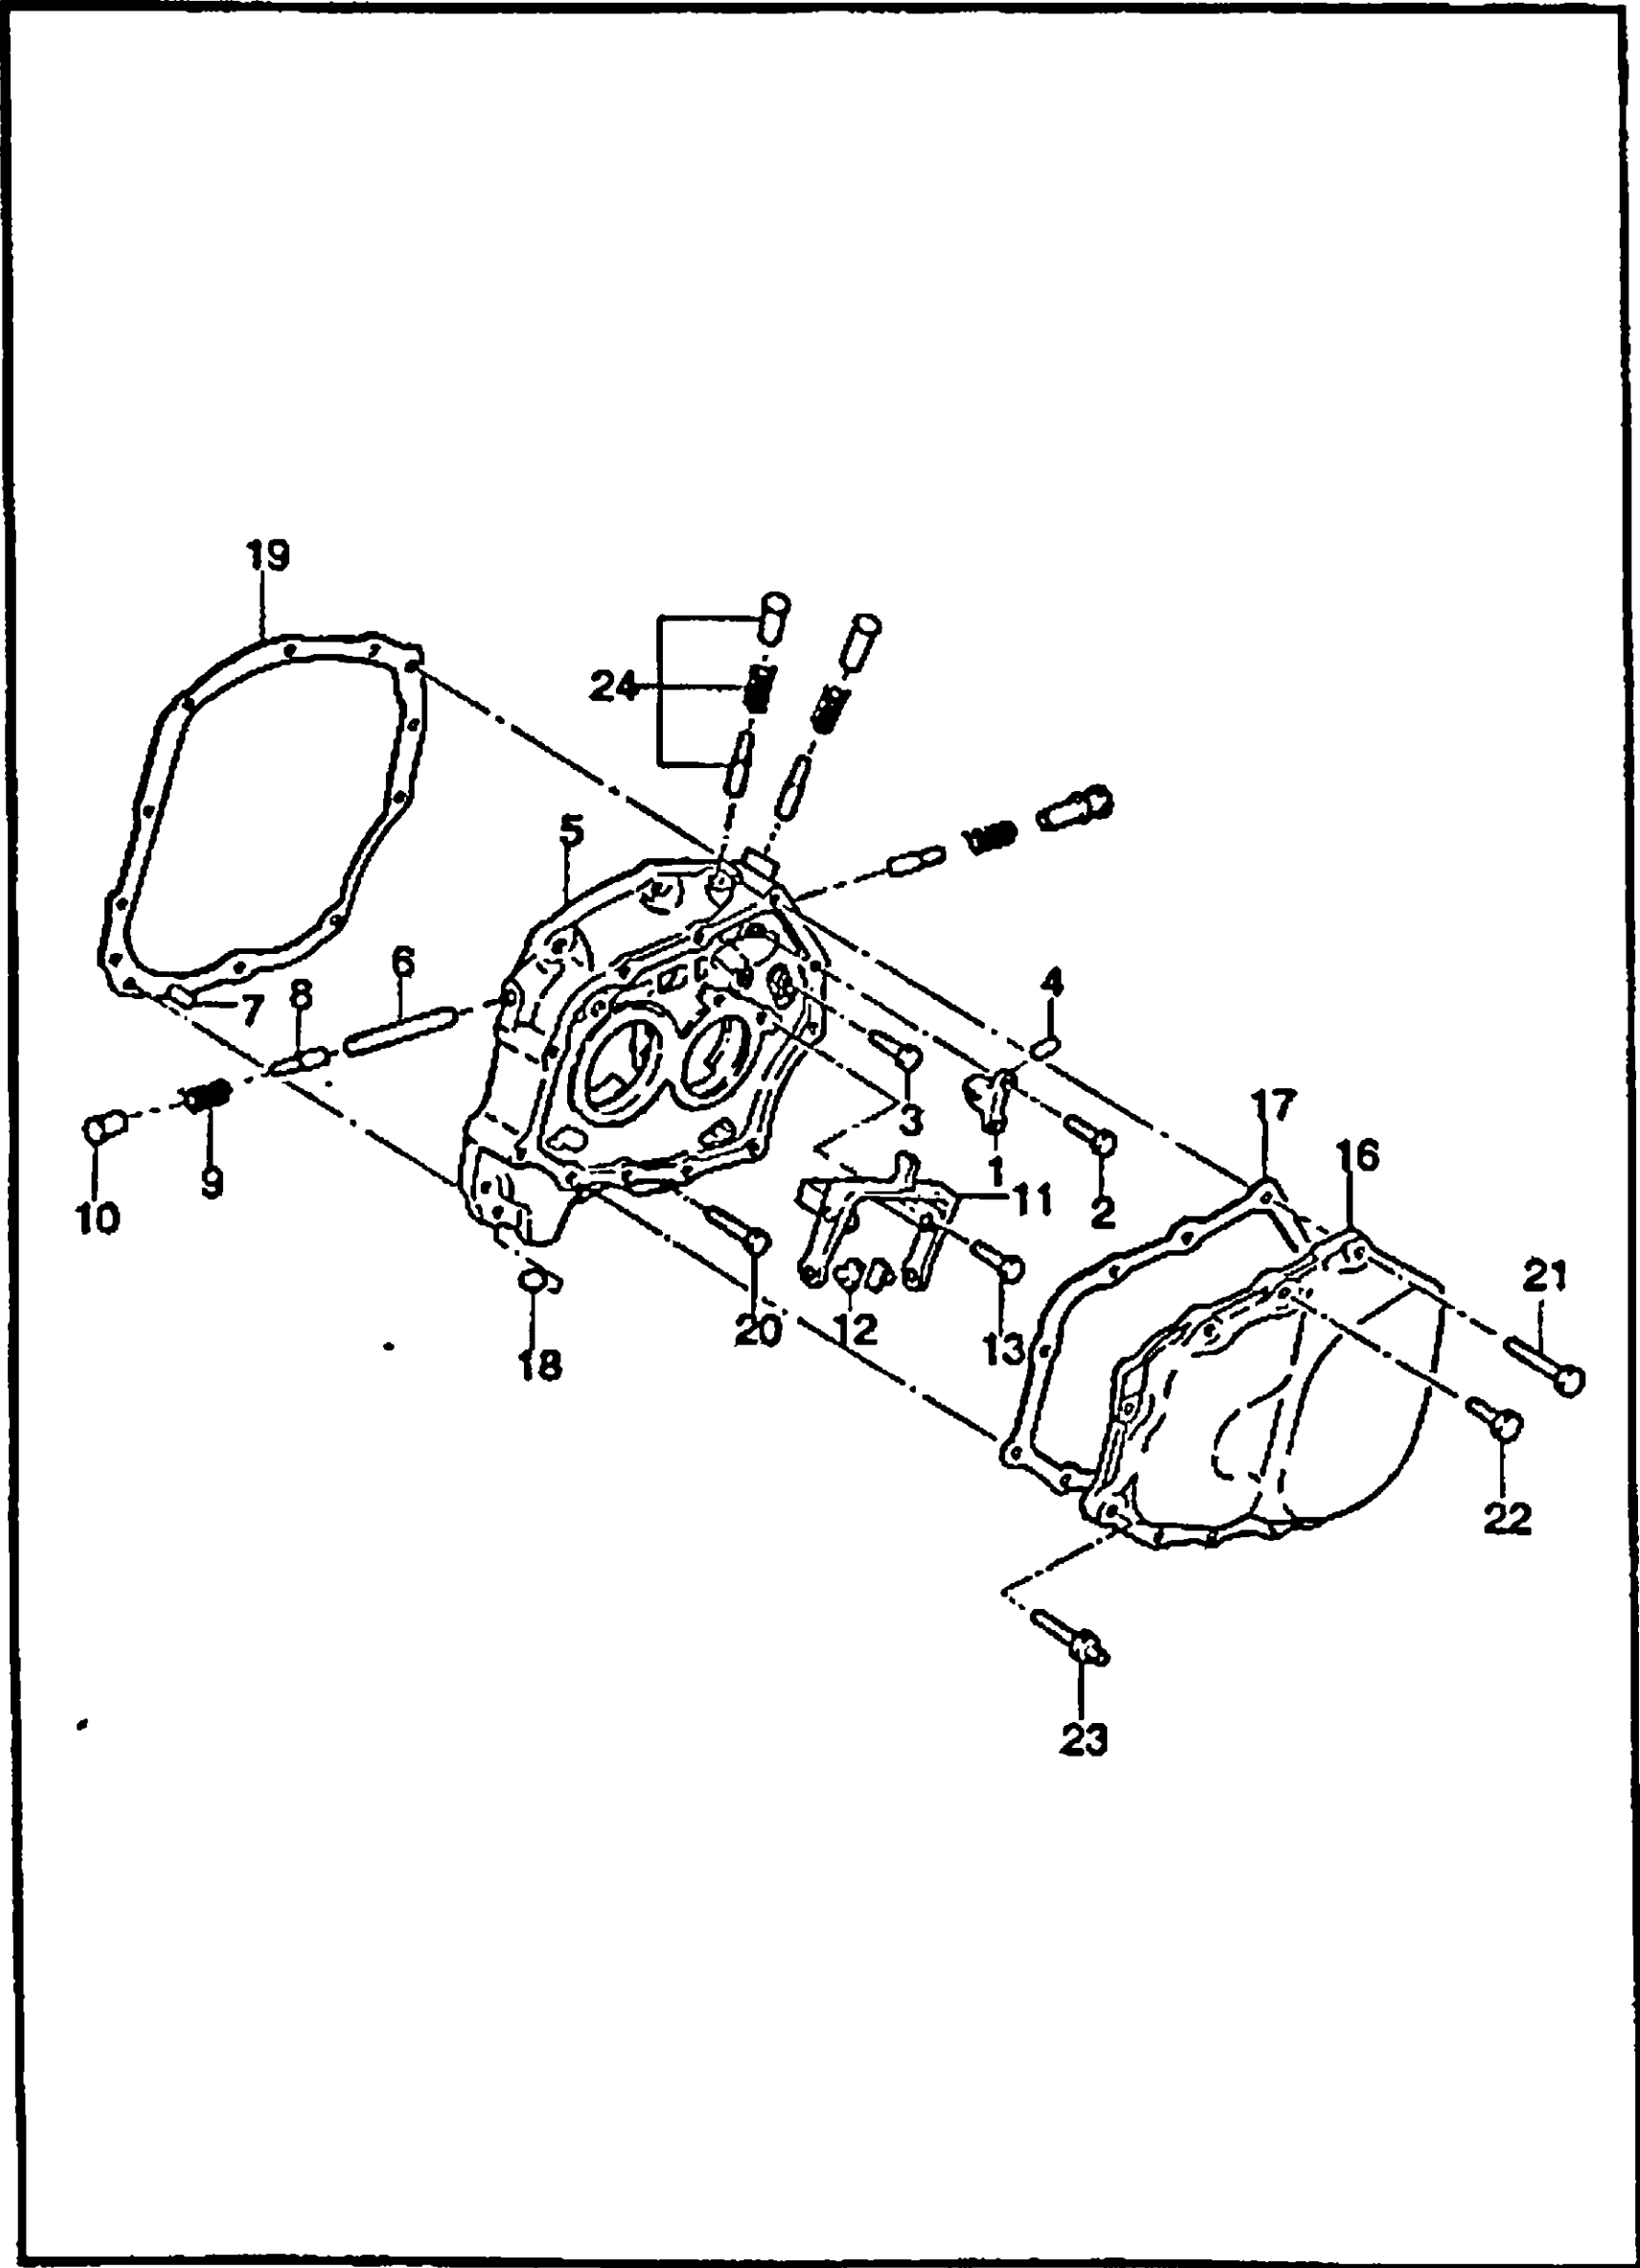

KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E T N G	M A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S X
	90092564	.	M	B	B	B	S	S	S		1					
	[11]										(F)FOURCHETTE					
											(S)HORQUILLA-DESLIZADOR					
	90342057	.	M	B	B	B	S	S	S		1					
	[12]										(F)SABOT-CHANGEMENT					
											(S)ZAPATA-PALANCA DE CAMBIOS					
	96305524	.	M	B	B	B	S	S	S		2					
	[13]										(F)BOULON					
											(S)PERNO					
	09106-08004	.	M	B	B	B	S	S	S		2					
	[16]										(F)CARTER-TRANSMISSION					
											(S)CUBIERTA-EJE TRANSVERSAL					
	96175844	.	M	B	B	B	S	S	S		1					
	[17]										(F)JOINT					
											(S)JUNTA					
	96179238	.	M	B	B	B	S	S	S		1					
	[18]										(F)AIMANT					
											(S)IMAN					
	08957605	.	M	B	B	B	S	S	S		1					
	[19]										(F)JOINT-PLAQUE DE ROULEMENT					
											(S)JUNTA-PLACA DE COJINETE					
	96179244	.	M	B	B	B	S	S	S		1					
	[20]										(F)BOULON					
											(S)PERNO					
	09100-08016	.	M	B	B	B	S	S	S		5					
	[21]										(F)BOULON					
											(S)PERNO					
	09100-08018	.	M	B	B	B	S	S	S		5					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC G = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

3250 BEARING PLATE


4M05

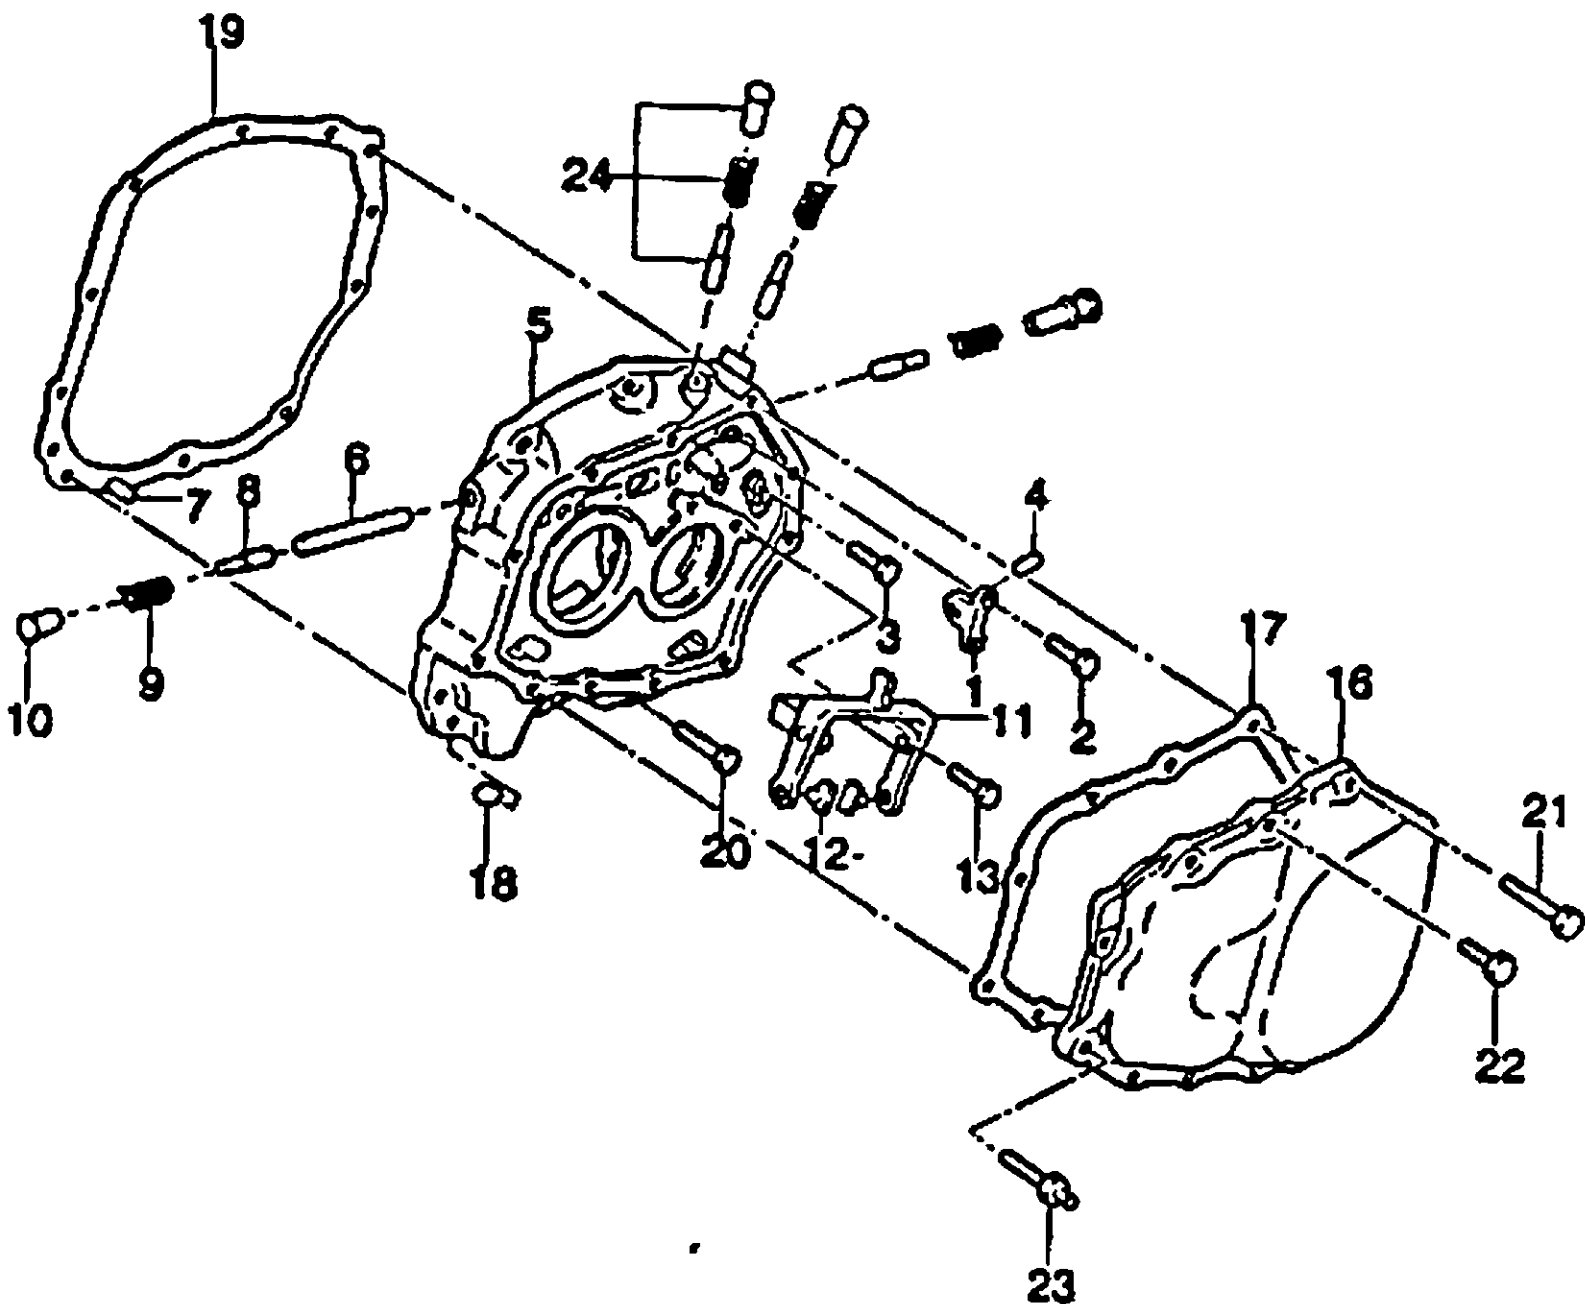


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	6 H	S	S								S
	[22] 09100-07002	(E)BOLT (D)SCHRAUBE	.	M	B	B	B	S	S	S		(F)BOULON (S)PERNO	5			
	[23] 90168610	(E)SCREW (D)SCHRAUBE	.	M	B	B	B	S	S	S		(F)VIS (S)TORNILLO	1			
	[24] 90375062	(E)SLEEVE-DETENT (D)HÜLSE,RÜCK-HALTER	.	M	B	B	B	S	S	S		(F)CHEMISE-DETENTE (S)MANGA-SEGURO	3			
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

3260 GEAR SHIFT COVER&FORK

4N05

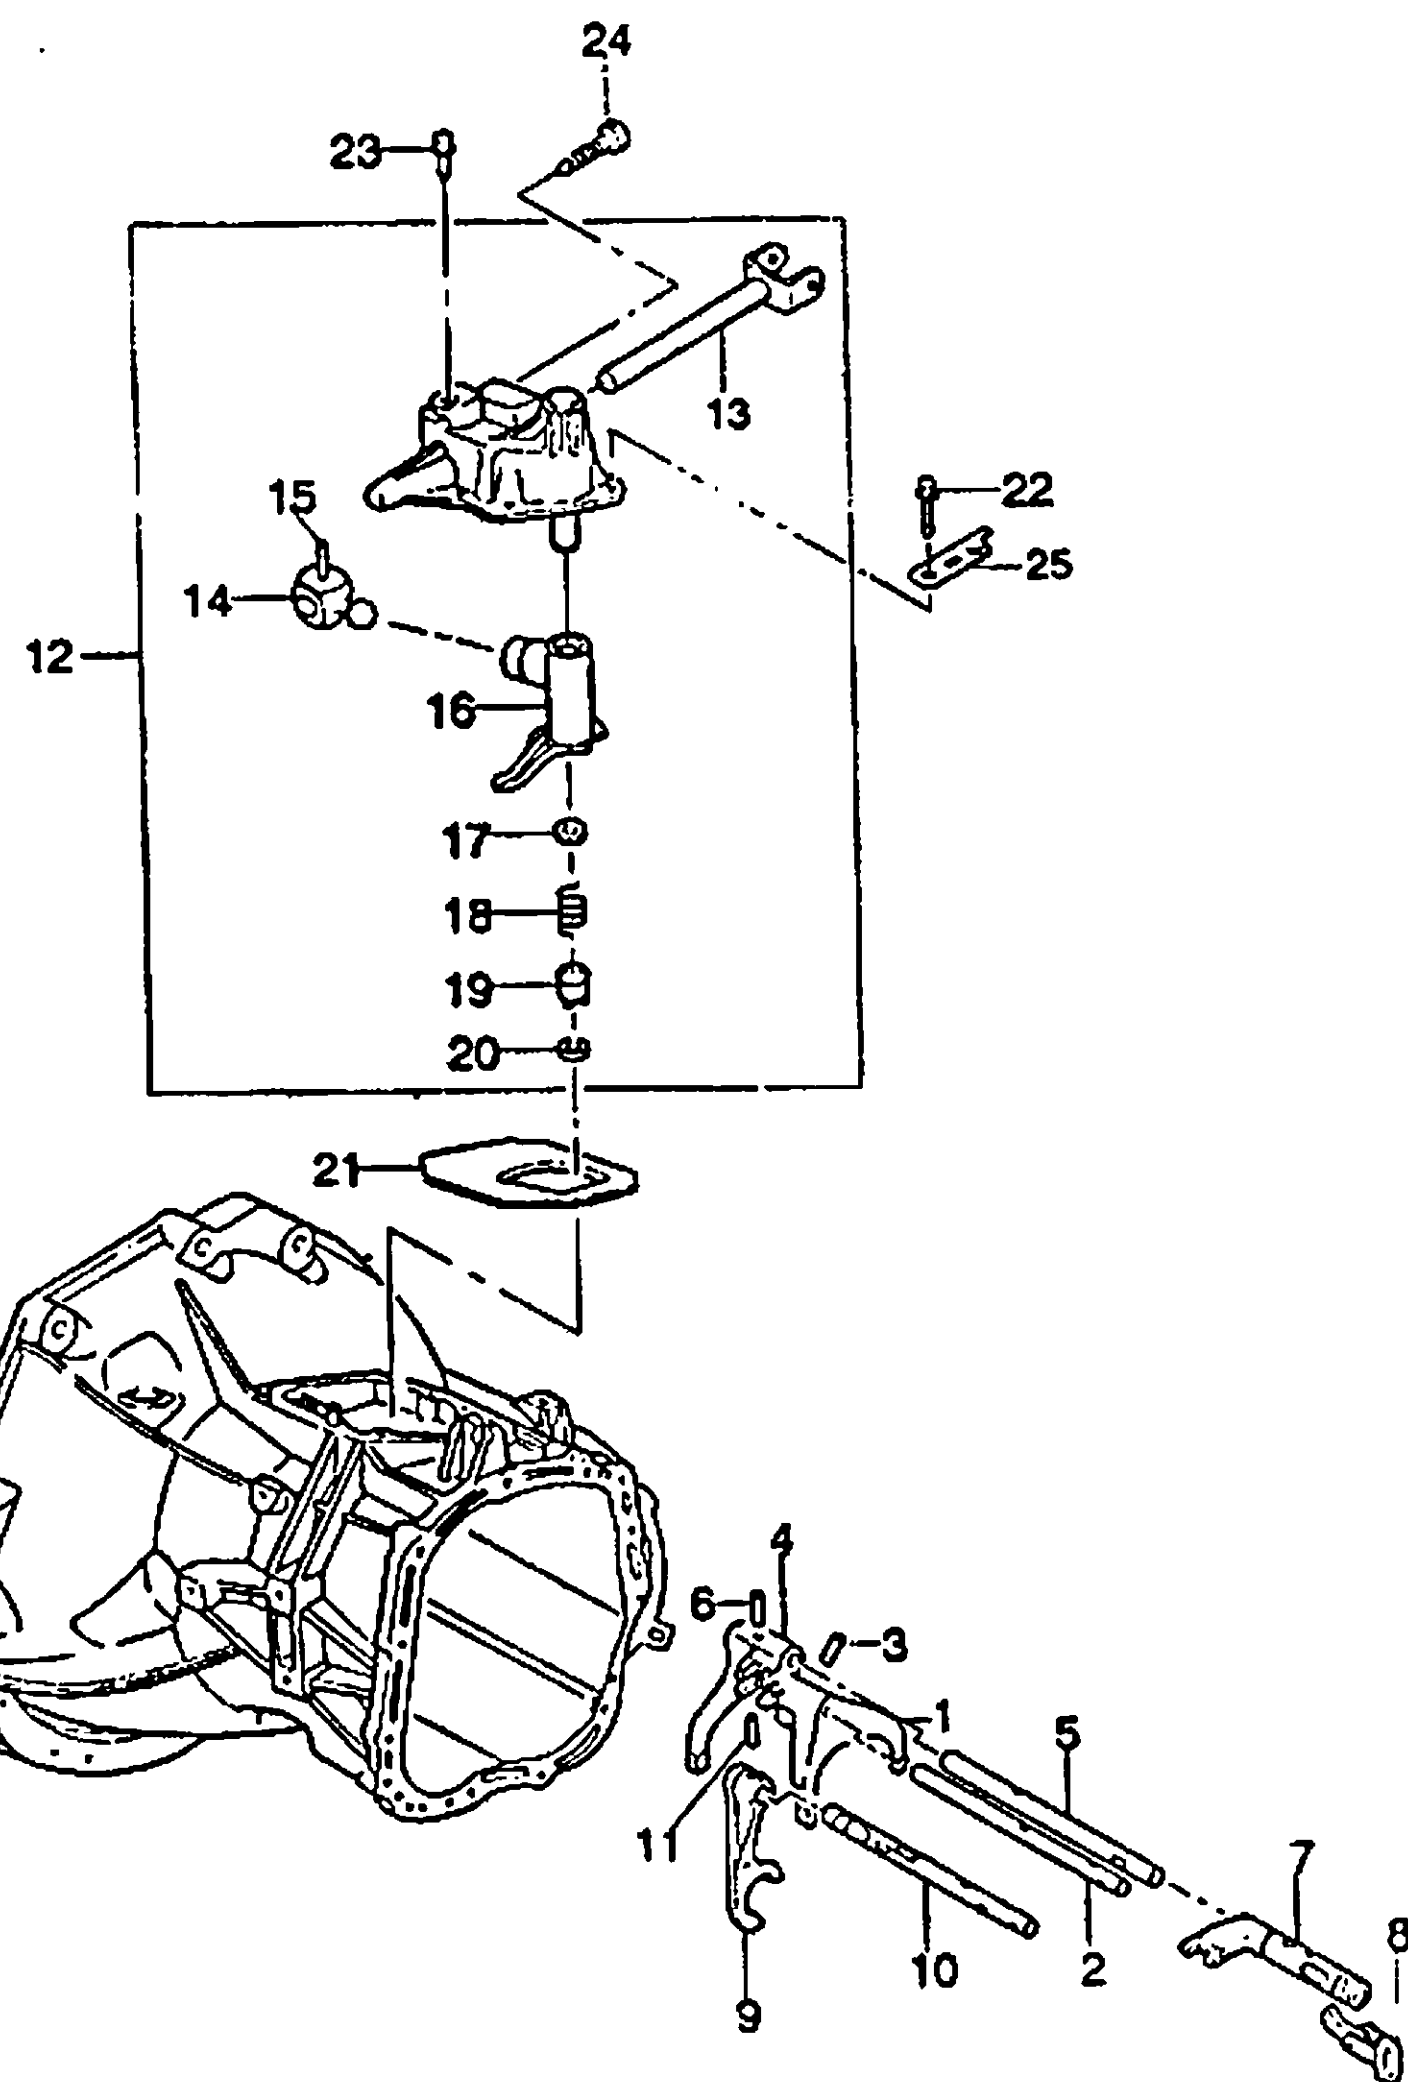


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L I T Y	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01]	(E)FORK-1ST&2ND GEARSHIFT	(D)GABEL,1.&2.GANGSCHALTUNG							(F)FOURCHETTE						
	90344077	. M	B	B	B	S	S	S		1			(S)HORQUILLA-CAMBIOS			
	[02]	(E)ROD-1ST&2ND GEARSHIFT	(D)STAB,1.&2.GANGSCHALTUNG										(F)TRINGLE			
	90375059	. M	B	B	B	S	S	S		1			(S)VARILLA-PALANCA DE CAMBIO			
	[03]	(E)PIN-COILED	(D)STIFT,GEWICKELT										(F)BROCHE-BOUDIN			
	11054212	. M	B	B	B	S	S	S		1			(S)PASADOR-ENROSCADO			
	[04]	(E)FORK-3RD&4TH GEARSHIFT	(D)GABEL,3.&4.GANGSCHALTUNG										(F)FOURCHETTE			
	90184831	. M	B	B	B	S	S	S		1			(S)HORQUILLA-CAMBIOS			
	[05]	(E)ROAD-3RD&4TH GEARSHIFT	(D)STRABE,3.&4.GANGSCHALTUNG										(F)ROUTE			
	90375060	. M	B	B	B	S	S	S		1			(S)VIA-PALANCA DE CAMBIOS			
	[06]	(E)PIN-COILED	(D)STIFT,GEWICKELT										(F)BROCHE-BOUDIN			
	11054212	. M	B	B	B	S	S	S		1			(S)PASADOR-ENROSCADO			
	[07]	(E)PIECE-5TH SPEED ENGAGING	(D)TEIL,BETATIGUNGS										(F)PIECE-ENGAGEMENT			
	90375041	. M	B	B	B	S	S	S		1			(S)PIEZA-ENGRANAR			
	[08]	(E)PAWL-GEARSHIFT ROD	(D)SPERRHACKEN										(F)CLIQUET			
	90142154	. M	B	B	B	S	S	S		1			(S)REten			
	[09]	(E)FORK-GEARSHIFT REVERSE	(D)GABEL										(F)FOURCHETTE-MARCHE ARRIERE			
	90199518	. M	B	B	B	S	S	S		1			(S)HORQUILLA-CAMBIO			
	[10]	(E)ROD-REVERSE GEARSHIFT	(D)STAB										(F)TRINGLE			
													(S)VARILLA-PALANCA DE CAMBIO			
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC				M = MANUAL T/A				4 N = 4 DOOR NOTCHBACK								
6 = 1.6DOHC				A = AUTOMATIC T/A				3 H = 3 DOOR HATCHBACK								
. = COMMON				. = COMMON				5 H = 5 DOOR HATCHBACK								

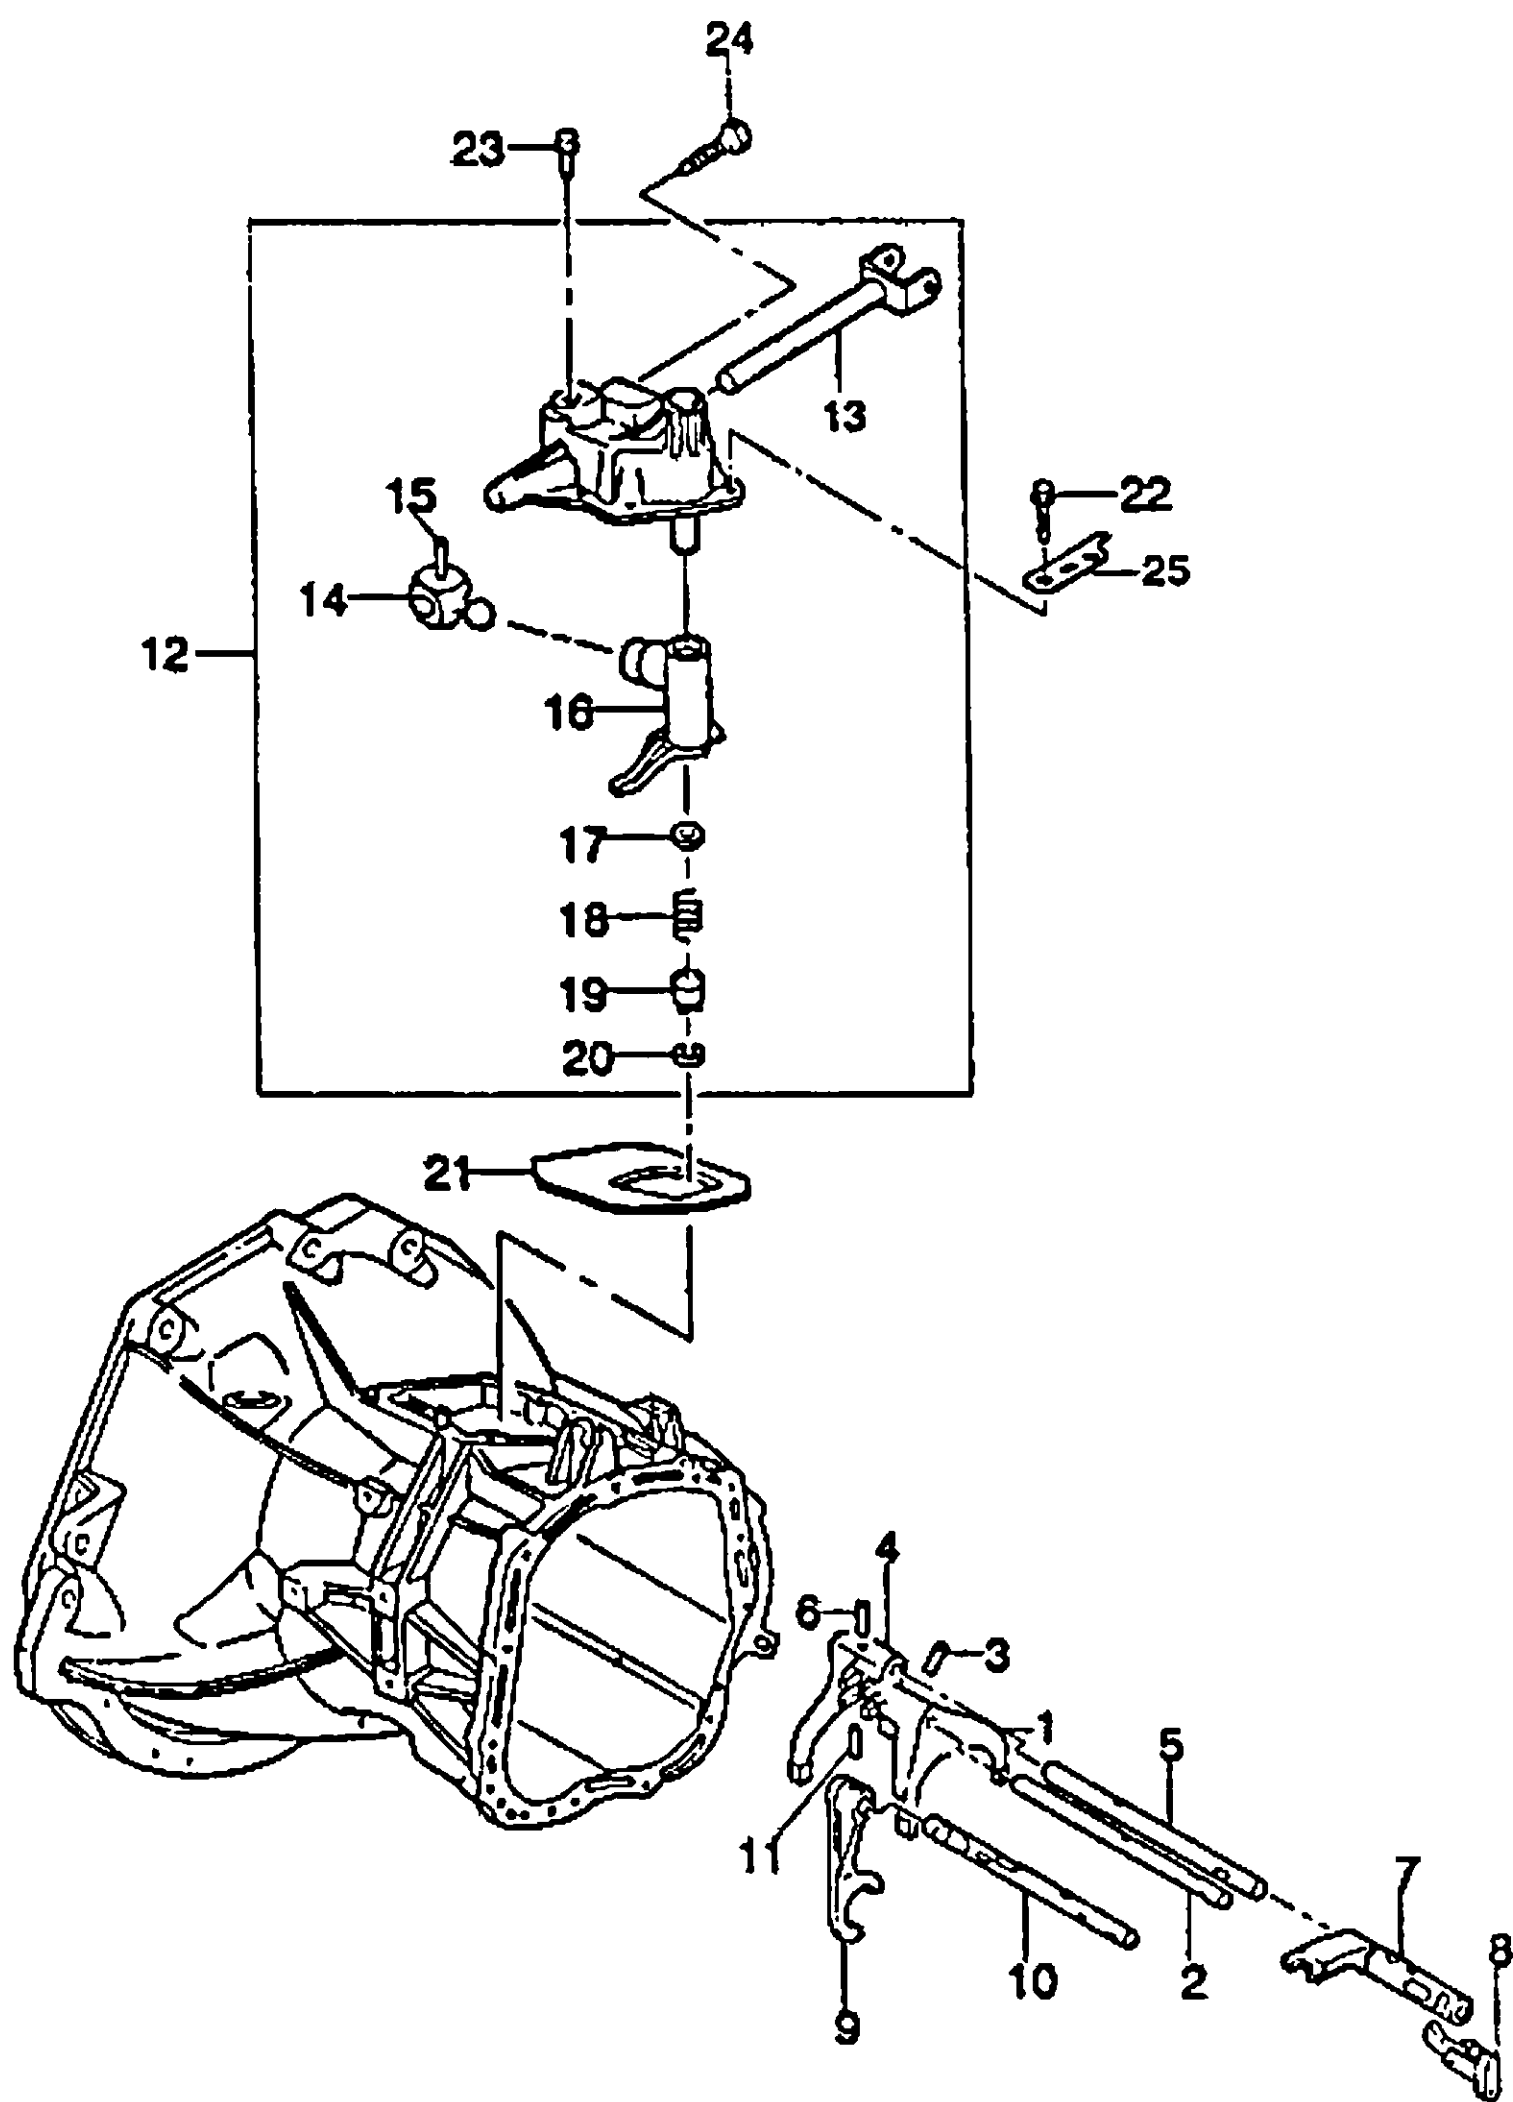


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	6 H	S S S								S S S	S S S
	90334195	.	M	B	B	B	S	S	S		1		(F)BROCHE-BOUDIN (S)PASADOR-ENROSCADO			
	[11]															
	11054212	.	M	B	B	B	S	S	S		1		(F)CARTER (S)CUBIERTA			
	[12]															
	90374229	.	M	B	B	B	S	S	S		1		(F)TRINGLE (S)VARILLA-PALANCA DE CAMBIO			
	[13]															
	90147931	.	M	B	B	B	S	S	S		1		(F)DOIGT-CHANGEMENT (S)DEDO-CAMBIOS			
	[14]															
	90157060	.	M	B	B	B	S	S	S		1		(F)BROCHE-BOUDIN (S)PASADOR-ENROSCADO			
	[15]															
	11054212	.	M	B	B	B	S	S	S		1		(F)LEVIER (S)PALANCA			
	[16]															
	96179218	.	M	B	B	B	S	S	S		1		(F)PLAQUE-GARDE (S)PLACA-GUARDIA			
	[17]															
	90142132	.	M	B	B	B	S	S	S		1		(F)RESSORT-COMPRESSION (S)RESORTE-COMPRESION			
	[18]															
	90170121	.	M	B	B	B	S	S	S		1		(F)MANCHON (S)BUJE			
	[19]															
	90223591	.	M	B	B	B	S	S	S		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

3260 GEAR SHIFT COVER&FORK

4C06

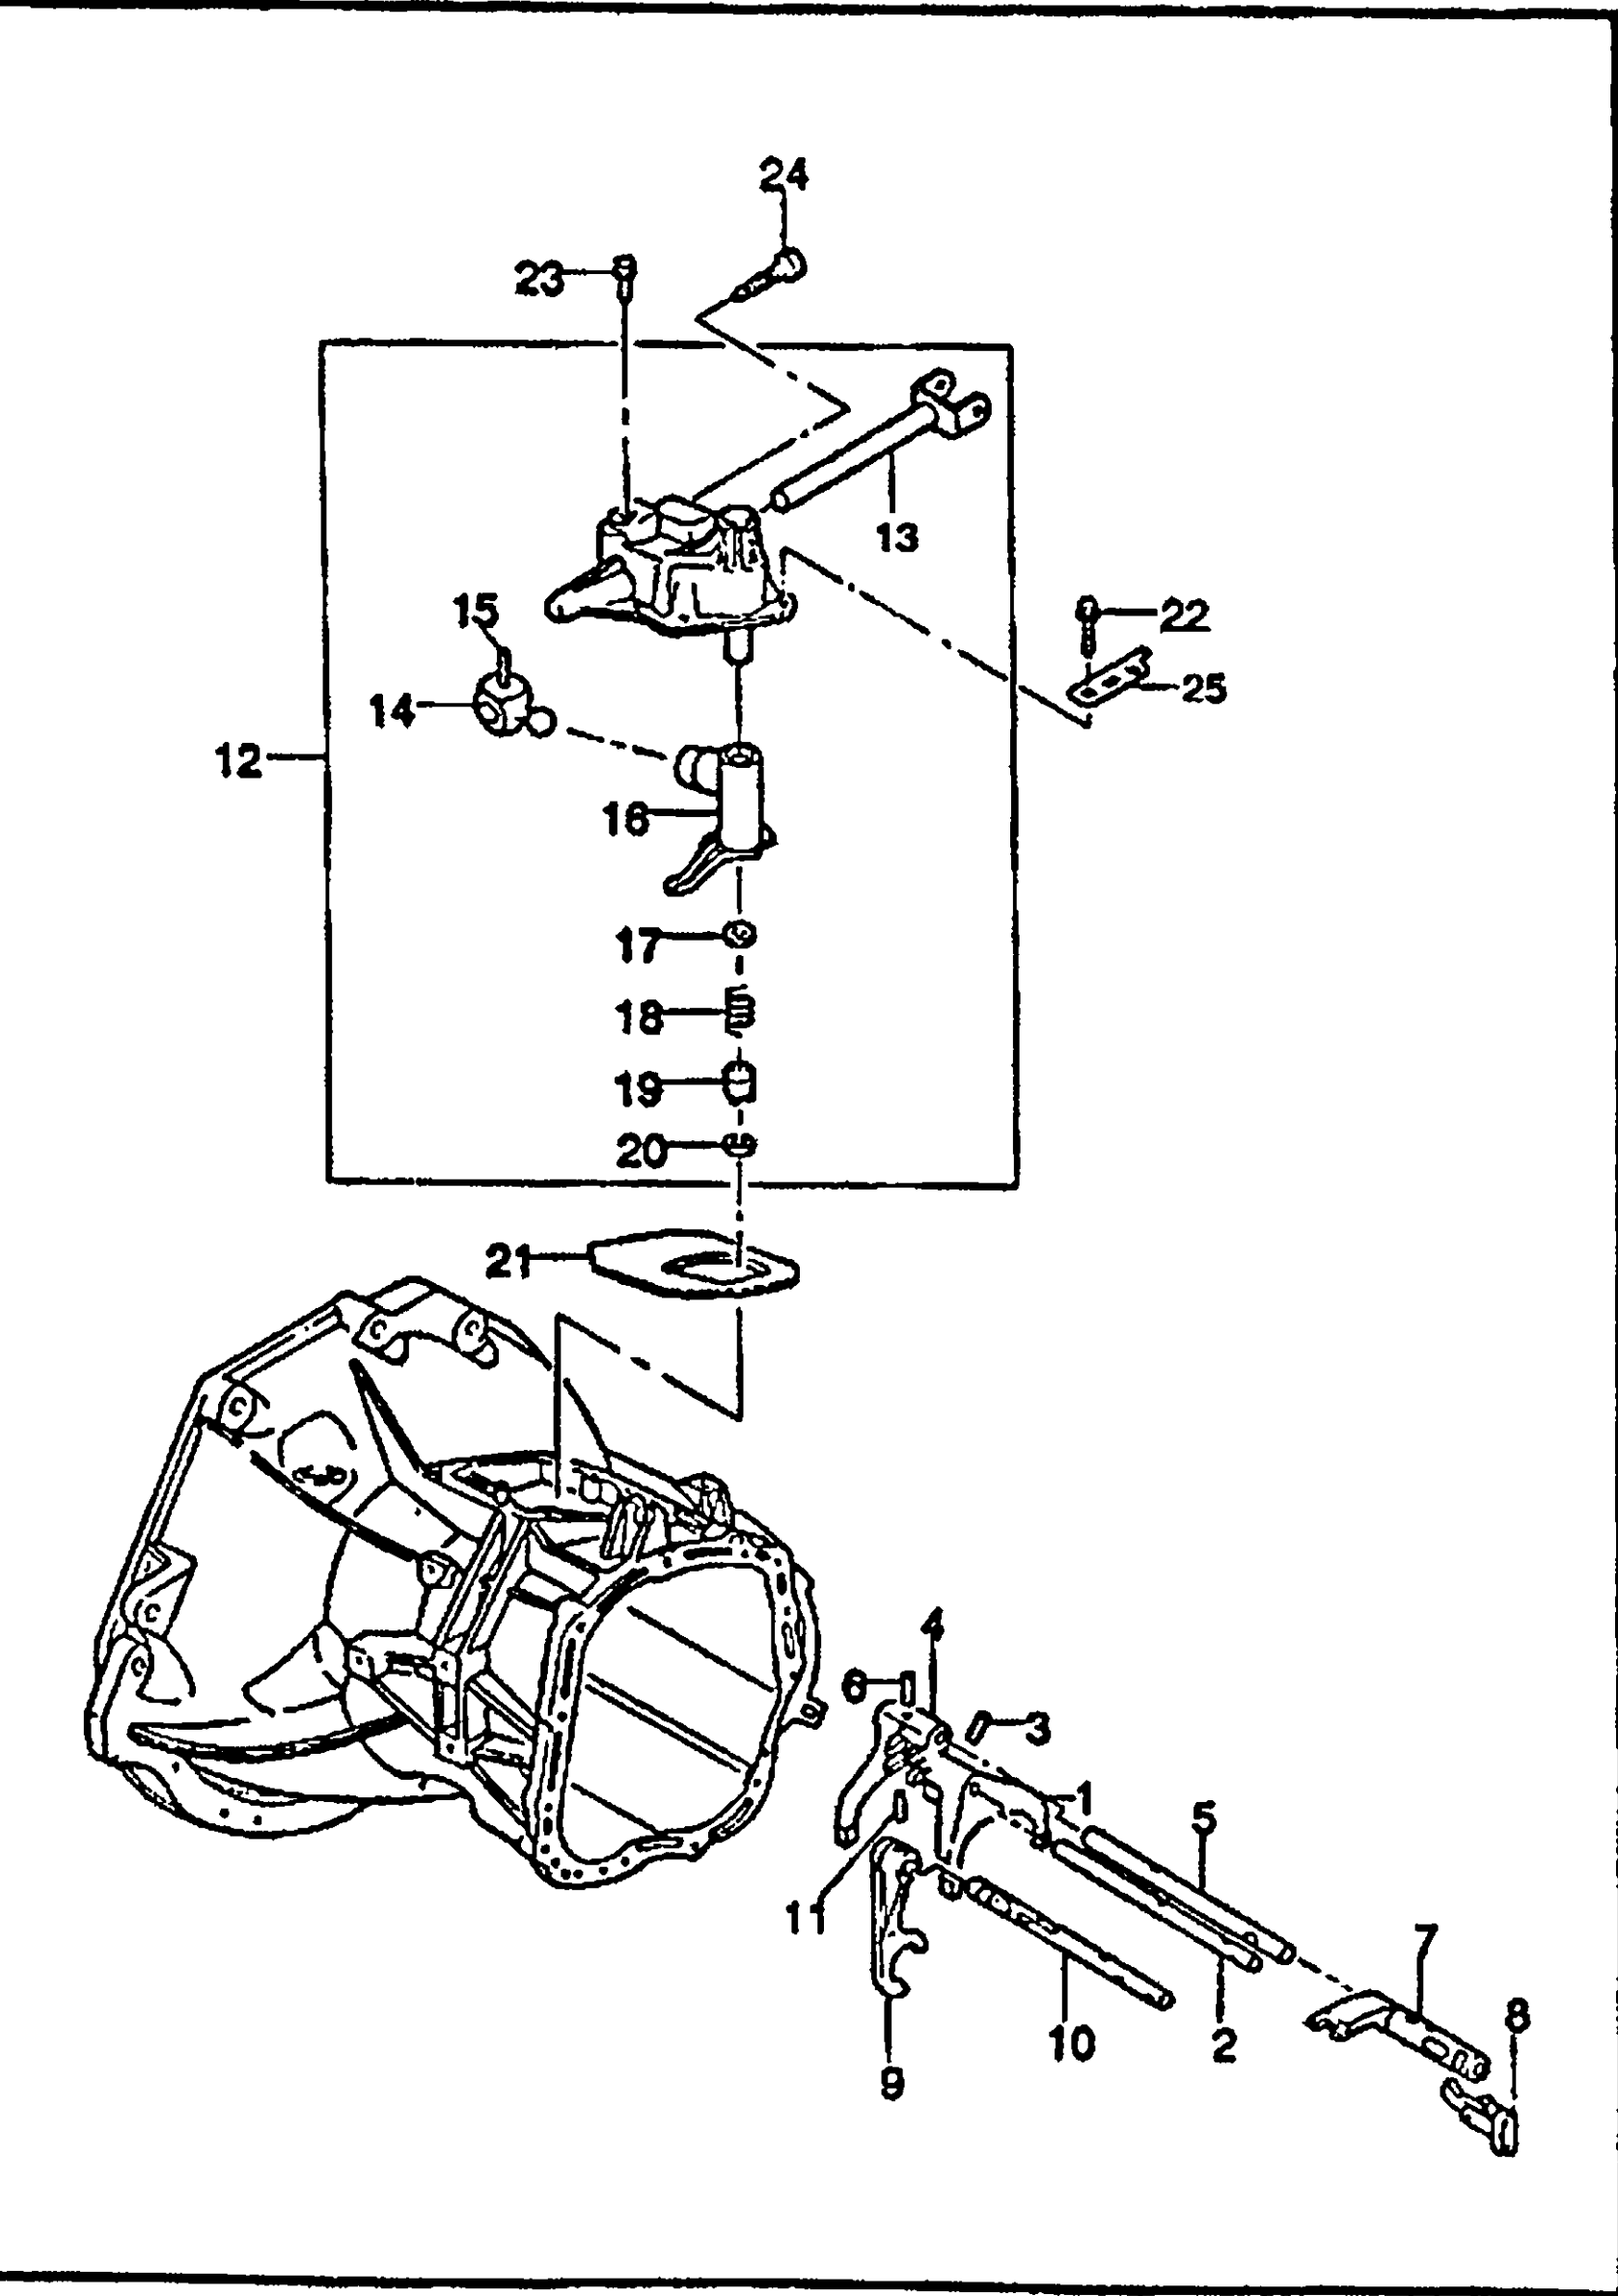


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H H	5 S S	S S S								S S S	S S S
	[20] 90223590	(E)RING-RETAINING (D)RING,HALTER									(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR	1				
	[21] 96179248	(E)GASKET-GEARSHIFT COVER (D)DICHTUNG									(F)JOINT (S)JUNTA	1				
	[22] 09100-07003	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO	4				
	[23] 90105651	(E)PLUG-GEARSHIFT COVER (D)STÖPSEL									(F)BOUCHON (S)TAPON	1				
	[24] 90086885	(E)PLUG-OIL FILLER (D)STÖPSEL,ÖL ZUFÜHR									(F)BOUCHON (S)TAPON-LLENAR ACEITE	1				
	[25] 96234618	(E)BRACKET-ENGINE CONT.HARNES (D)TRÄGER									(F)SUPPORT (S)SOPORTE	1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

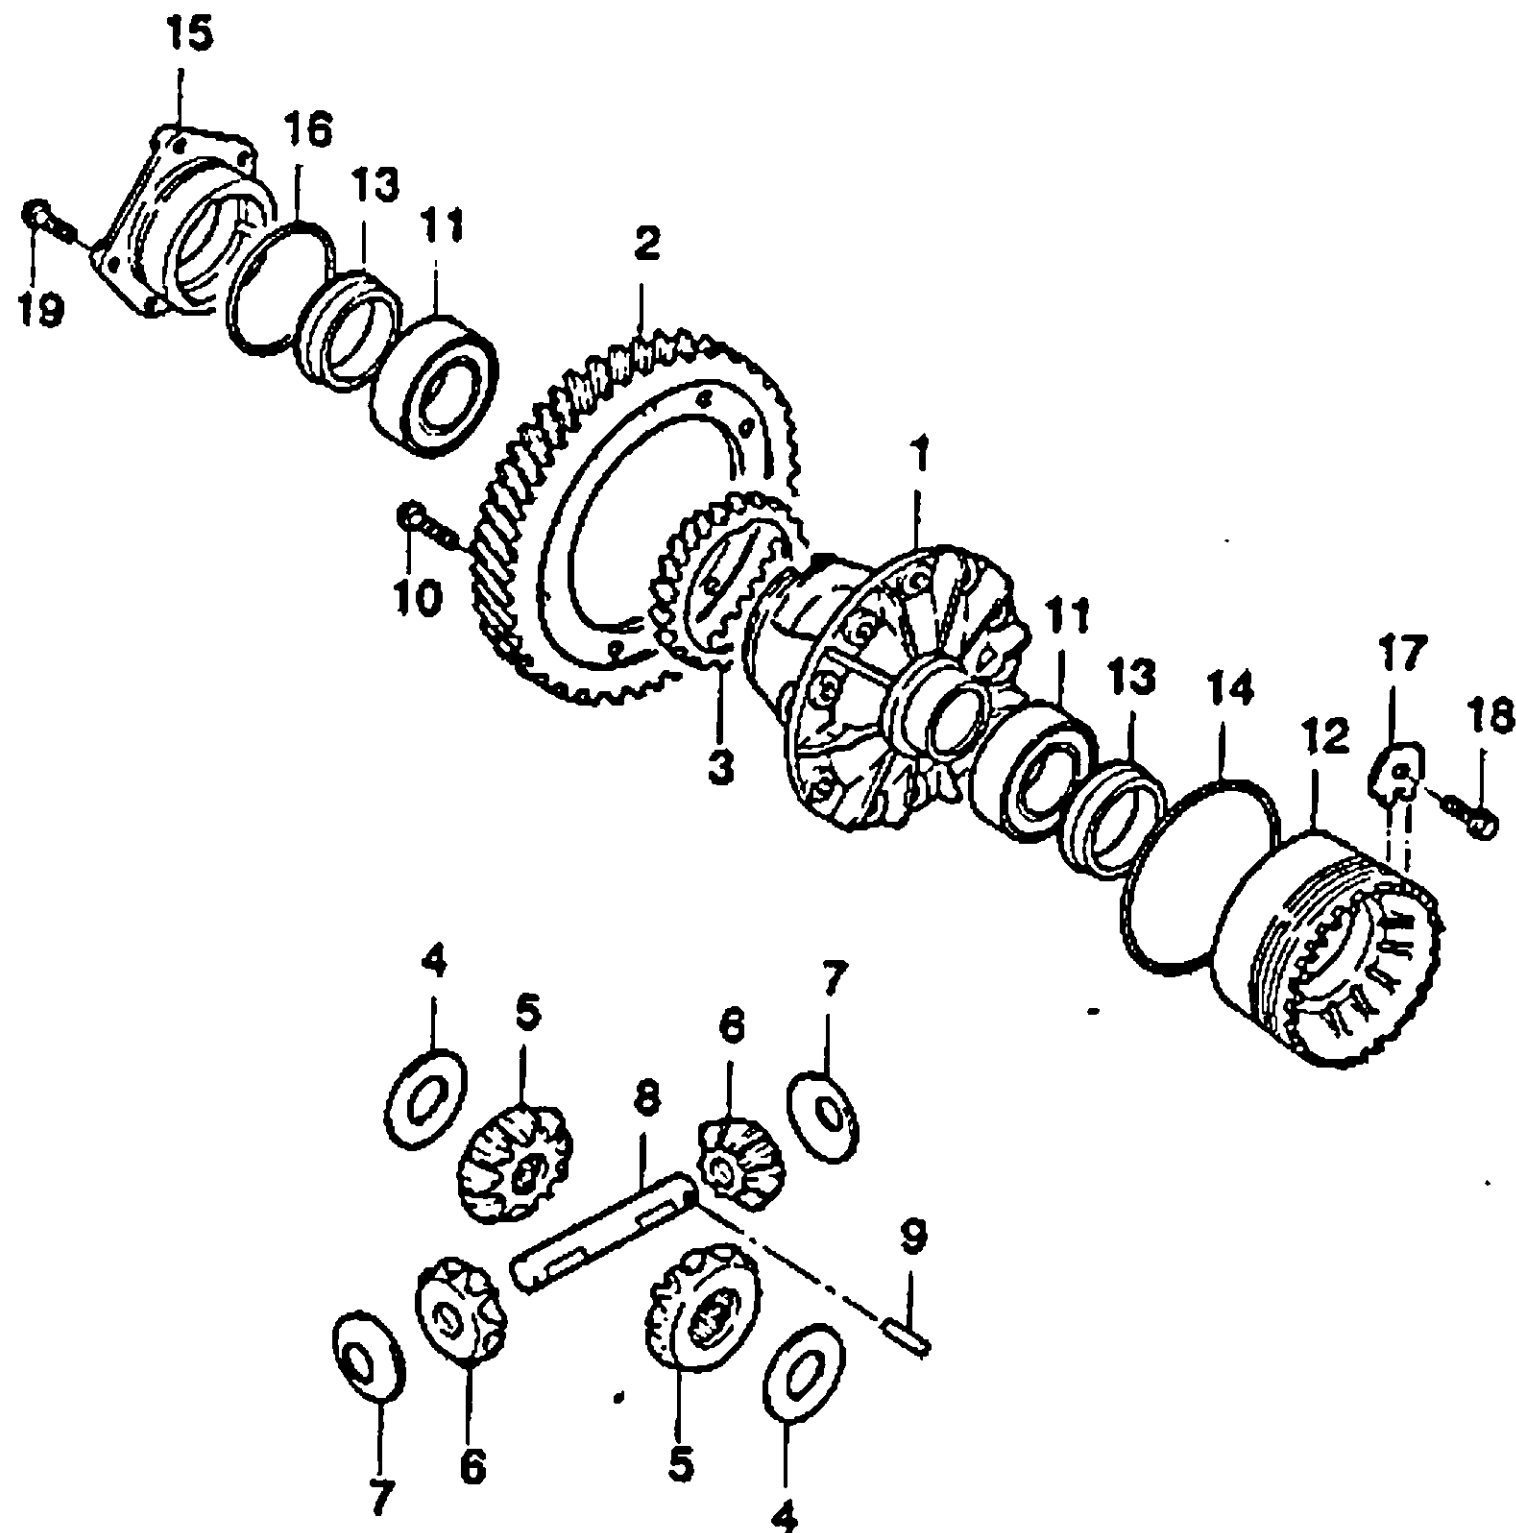


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01] 90372052	(E)HOUSING-DIFFERENTIAL GEAR (D)GEHAUSE									(F)LOGEMENT (S)CARCASA				
		. M B B B S S S									1				
	[02] 96242700	(E)GEAR-HELICAL DIFFERENTIAL (D)AUSGLEICHSGETRIEBE									(F)ENGRENAGE-HELICOIDAL (S)ENGRANAJE				
		Y M B B B S S S						&M85			1		RATIO : 4.176		
	90279879	6 M B B B . . O						&M04-KL9/EC1			1		RATIO : 3.722		
	96242700	6 M B B B . . A						&M85&KL9/EC1			1				
	[03] 90125064	(E)GEAR-DRIVEN WORM (D)GETRIEBE									(F)ENGRENAGE (S)ENGRANAJE				
		. M B B B S S S									1				
	[04] 14040531	(E)WASHER-SIDE GEAR THRUST (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA				
		. M B B B S S S									2				
	[05] 96183738	(E)GEAR-AXLE SHAFT BEVEL (D)GETRIEBE,ABSCHRA'GUNG									(F)ENGRENAGE (S)ENGRANAJE-BISEL				
		. M B B B S S S									2				
	[06] 96183739	(E)GEAR-BEVEL DIFFERENTIAL (D)GETRIEBE									(F)ENGRENAGE (S)ENGRANAJE				
		. M B B B S S S									2				
	[07] 00463061	(E)DISK-BEVEL GEAR (D)SCHEIBE,KEGELRADGETRIEBE									(F)DISQUE-ENGRENAGE BISEAUTE (S)DISCO-ENGRANAJE BISEL				
		. M B B B S S S									2				
	[08] 90372053	(E)SHAFT-DIFFERENTIAL GEAR (D)SPINDEL,AUSGLEICHSGETRIEB									(F)ARBRE (S)EJE-ENGRANAJE DIFERENCIAL				
		. M B B B S S S									1				
	[09]	(E)PIN-DIFFERENTIAL SPRING (D)STIFT,AUSGLEICHSGETRIEBE									(F)BROCHE (S)PASADOR				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

3270 DIFFERENTIAL GEAR


4E06

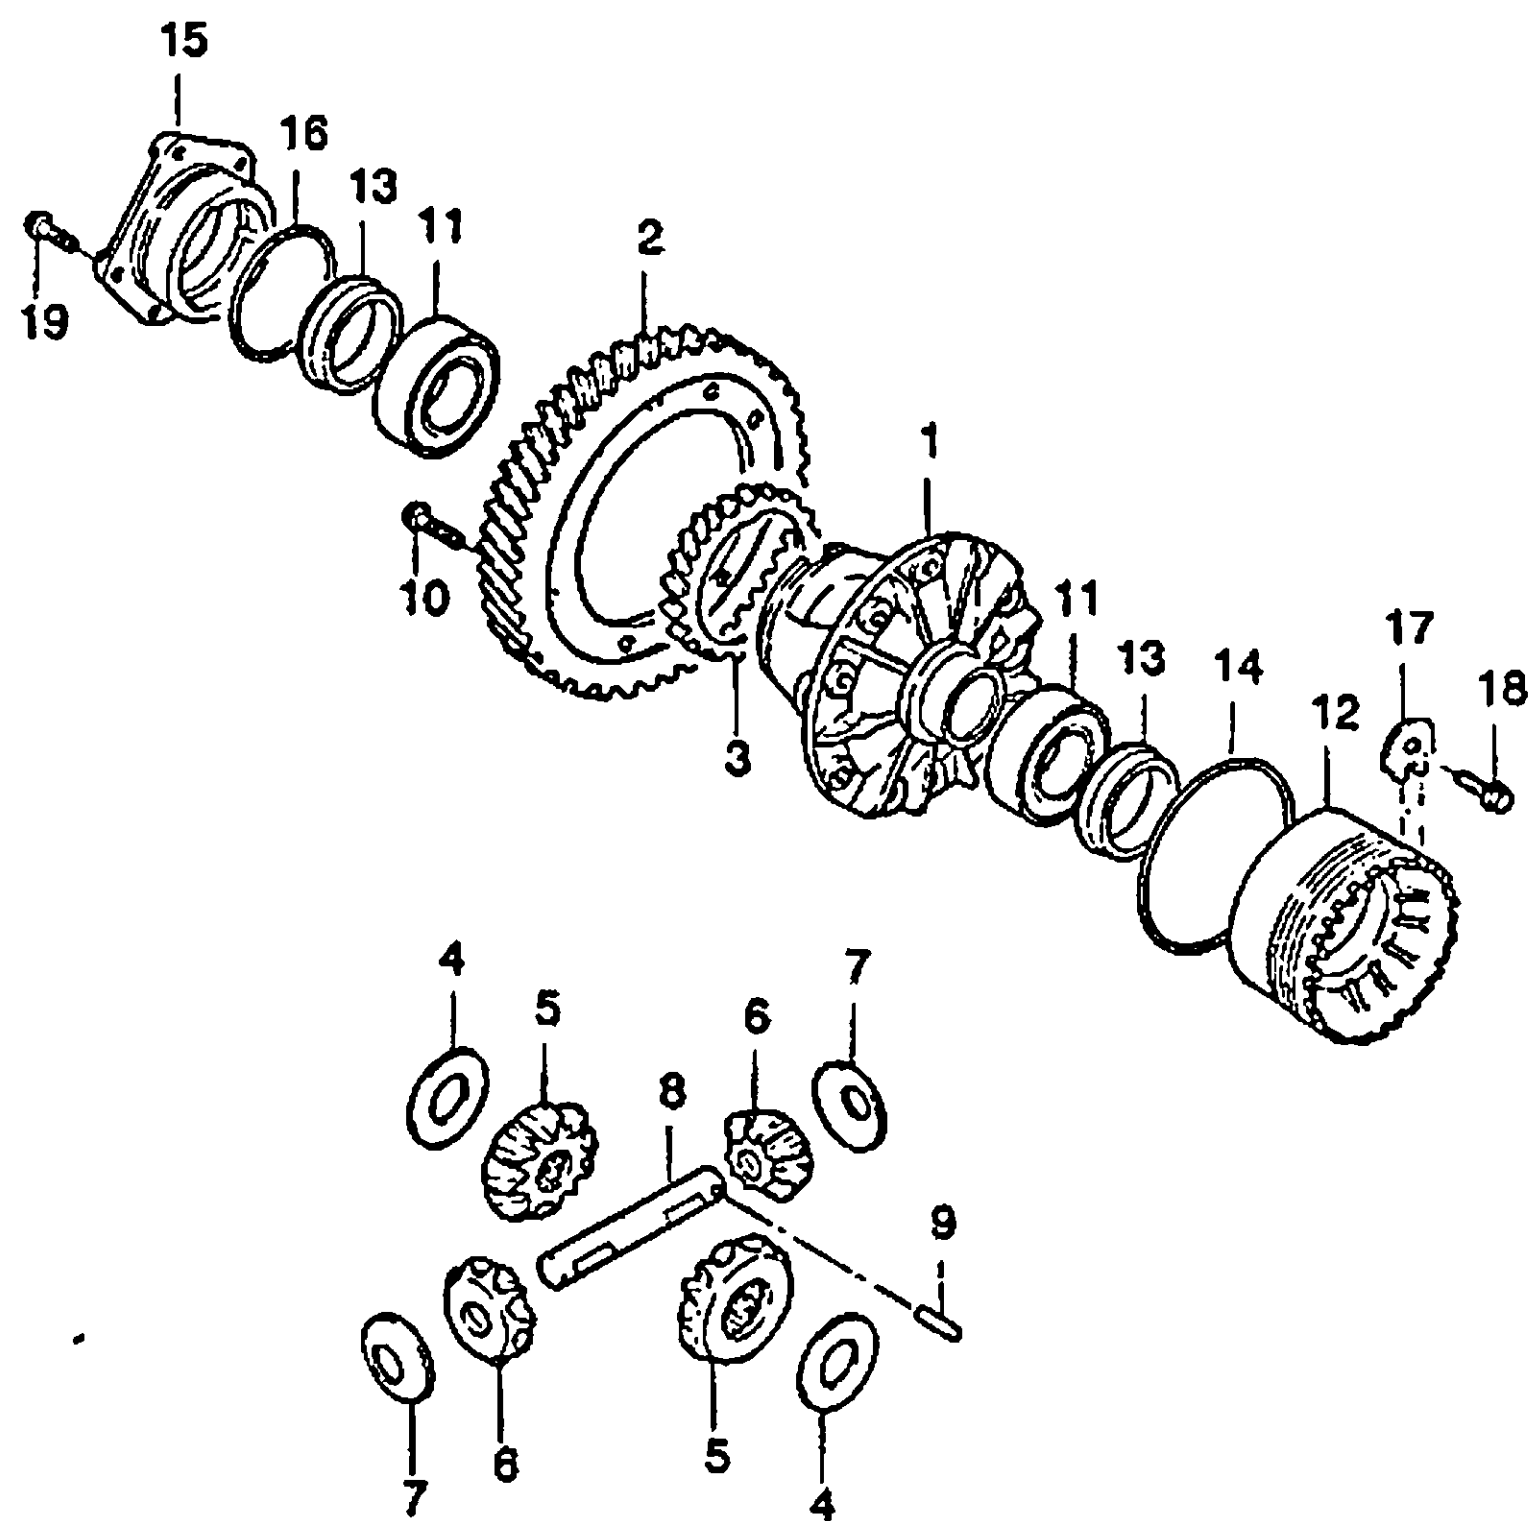


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E T N / G	A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	96169094	.	M	B	B	B	S	S	S		1				
	[10]	(E)	BOLT										(F)BOULON		
		(D)	SCHRAUBE										(S)PERNO		
	09103-10057	.	M	B	B	B	S	S	S		10				
	[11]	(E)	BEARING-TAPERED ROLLER										(F)ROULEMENT-ROULEAU FUSELE		
		(D)	ROLLENLAGER,ZUGESPITZT										(S)COJINETE-RODILLO REDUCIDO		
	96108125	.	M	B	B	B	S	S	S		2				
	[12]	(E)	RING-DIFFERENTIAL BEARING										(F)ANNEAU		
		(D)	RING,AUSGLEICHS-LAGER										(S)ANILLO		
	90121689	.	M	B	B	B	S	S	S		1				
	[13]	(E)	RING-SHAFT SEAL										(F)ANNEAU-JOINT D'ARBRE		
		(D)	RING,STAB DICHTUNG										(S)ANILLO-BROCHE DE EJE		
	90182166	.	M	B	B	B	S	S	S		2				
	[14]	(E)	O RING-DIFFERENTIAL										(F)JOINT TORIQUE		
		(D)	O RING,AUSGLEICHSGETRIEBE										(S)ANILLO EN O-DIFERENCIAL		
	90111402	.	M	B	B	B	S	S	S		1				
	[15]	(E)	FLANGE-DIFF GEAR BEARING										(F)FLASQUE		
		(D)	FLANSCH										(S)PESTAÑA		
	90121695	.	M	B	B	B	S	S	S		1				
	[16]	(E)	O RING										(F)JOINT TORIQUE		
		(D)	O RING										(S)ANILLO EN O		
	90129521	.	M	B	B	B	S	S	S		1				
	[17]	(E)	PLATE-LOCKING										(F)PLAQUE-VERROUILLAGE		
		(D)	PLATTE,VERRIEGELUNG										(S)PLACA-CIERRE		
	90079853	.	M	B	B	B	S	S	S		1				
	[18]	(E)	BOLT										(F)BOULON		
		(D)	SCHRAUBE										(S)PERNO		
	09116-06029	.	M	B	B	B	S	S	S		1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

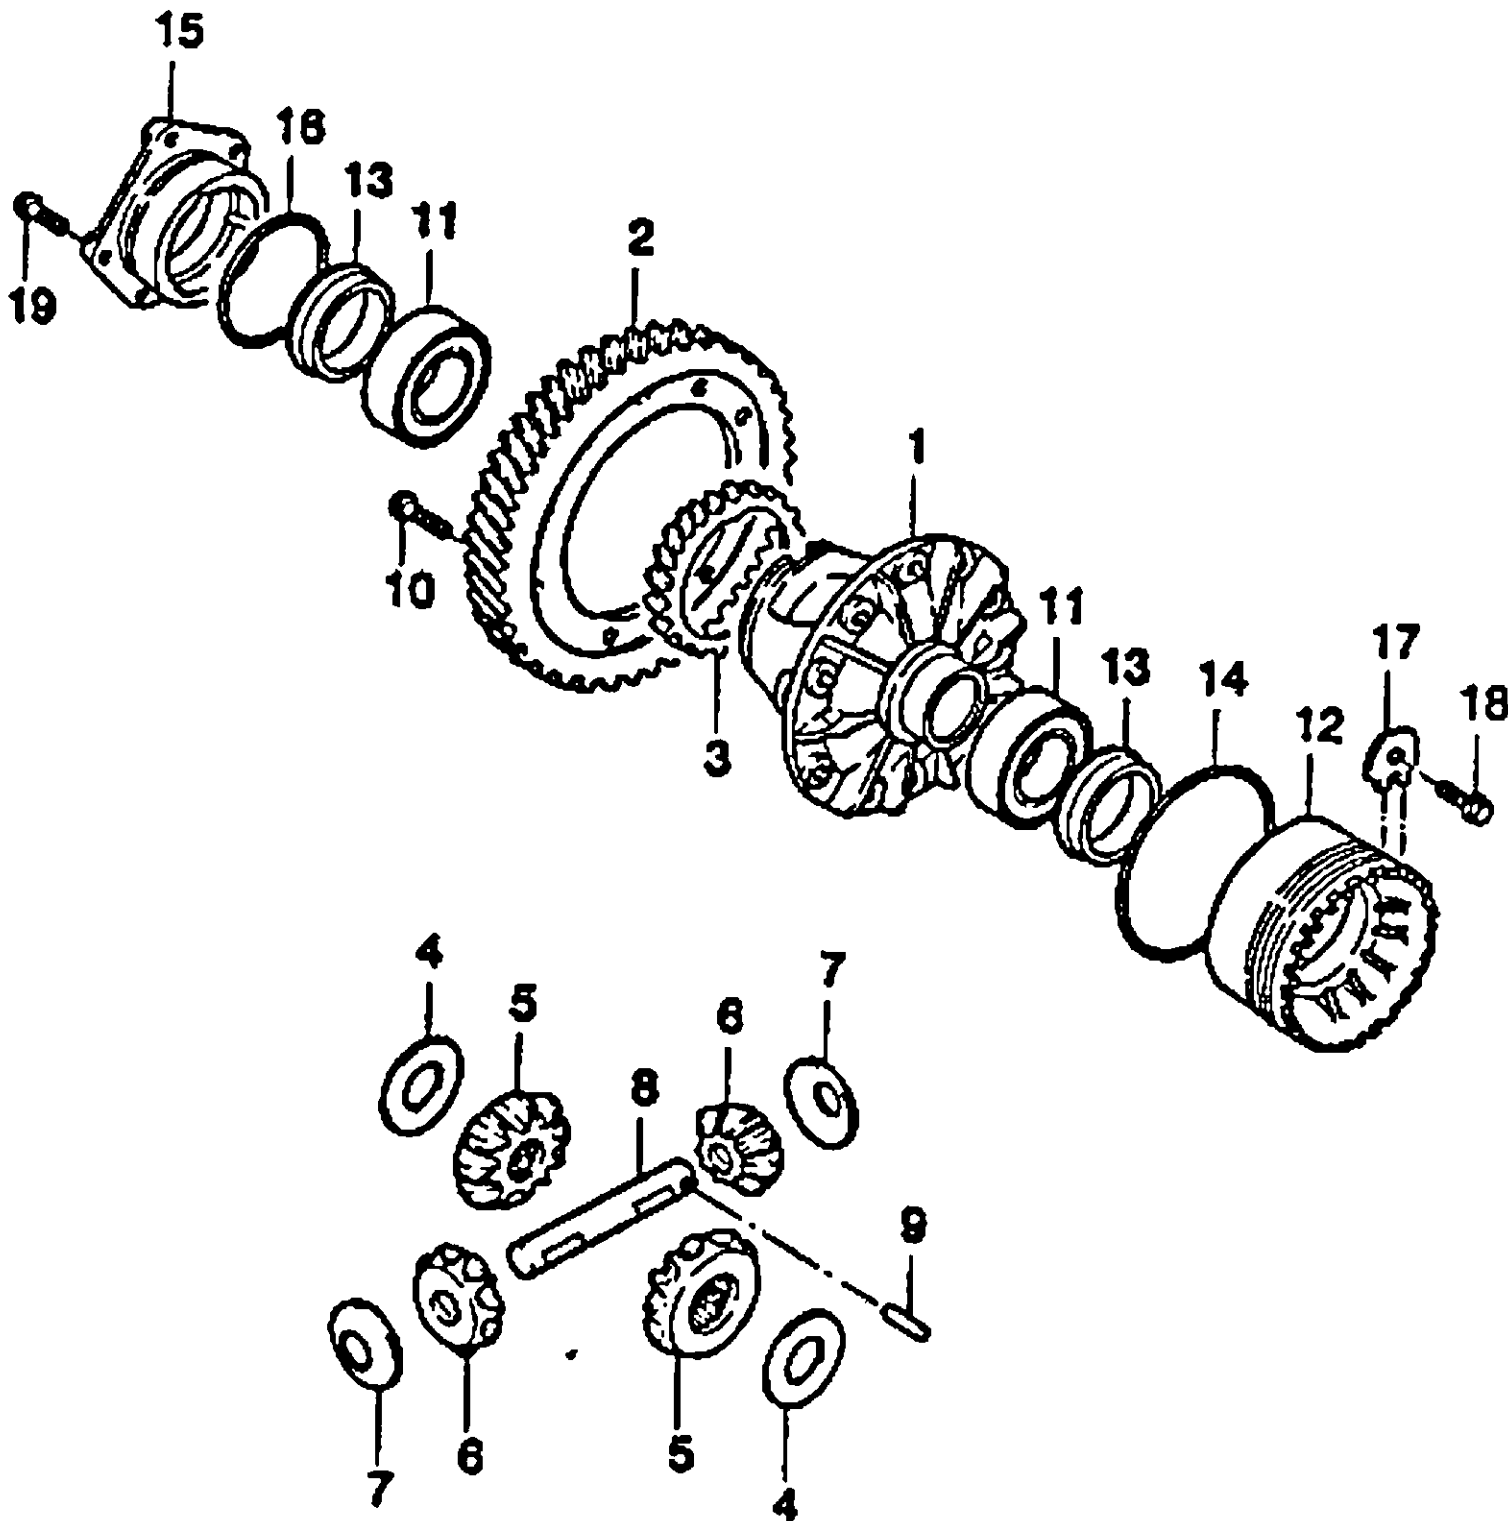


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S E								S X
	[19] 09103-08026	(E)BOLT (D)SCHRAUBE . M	B	B	B	S	S	S				(F)BOULON (S)PERNO 6				
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

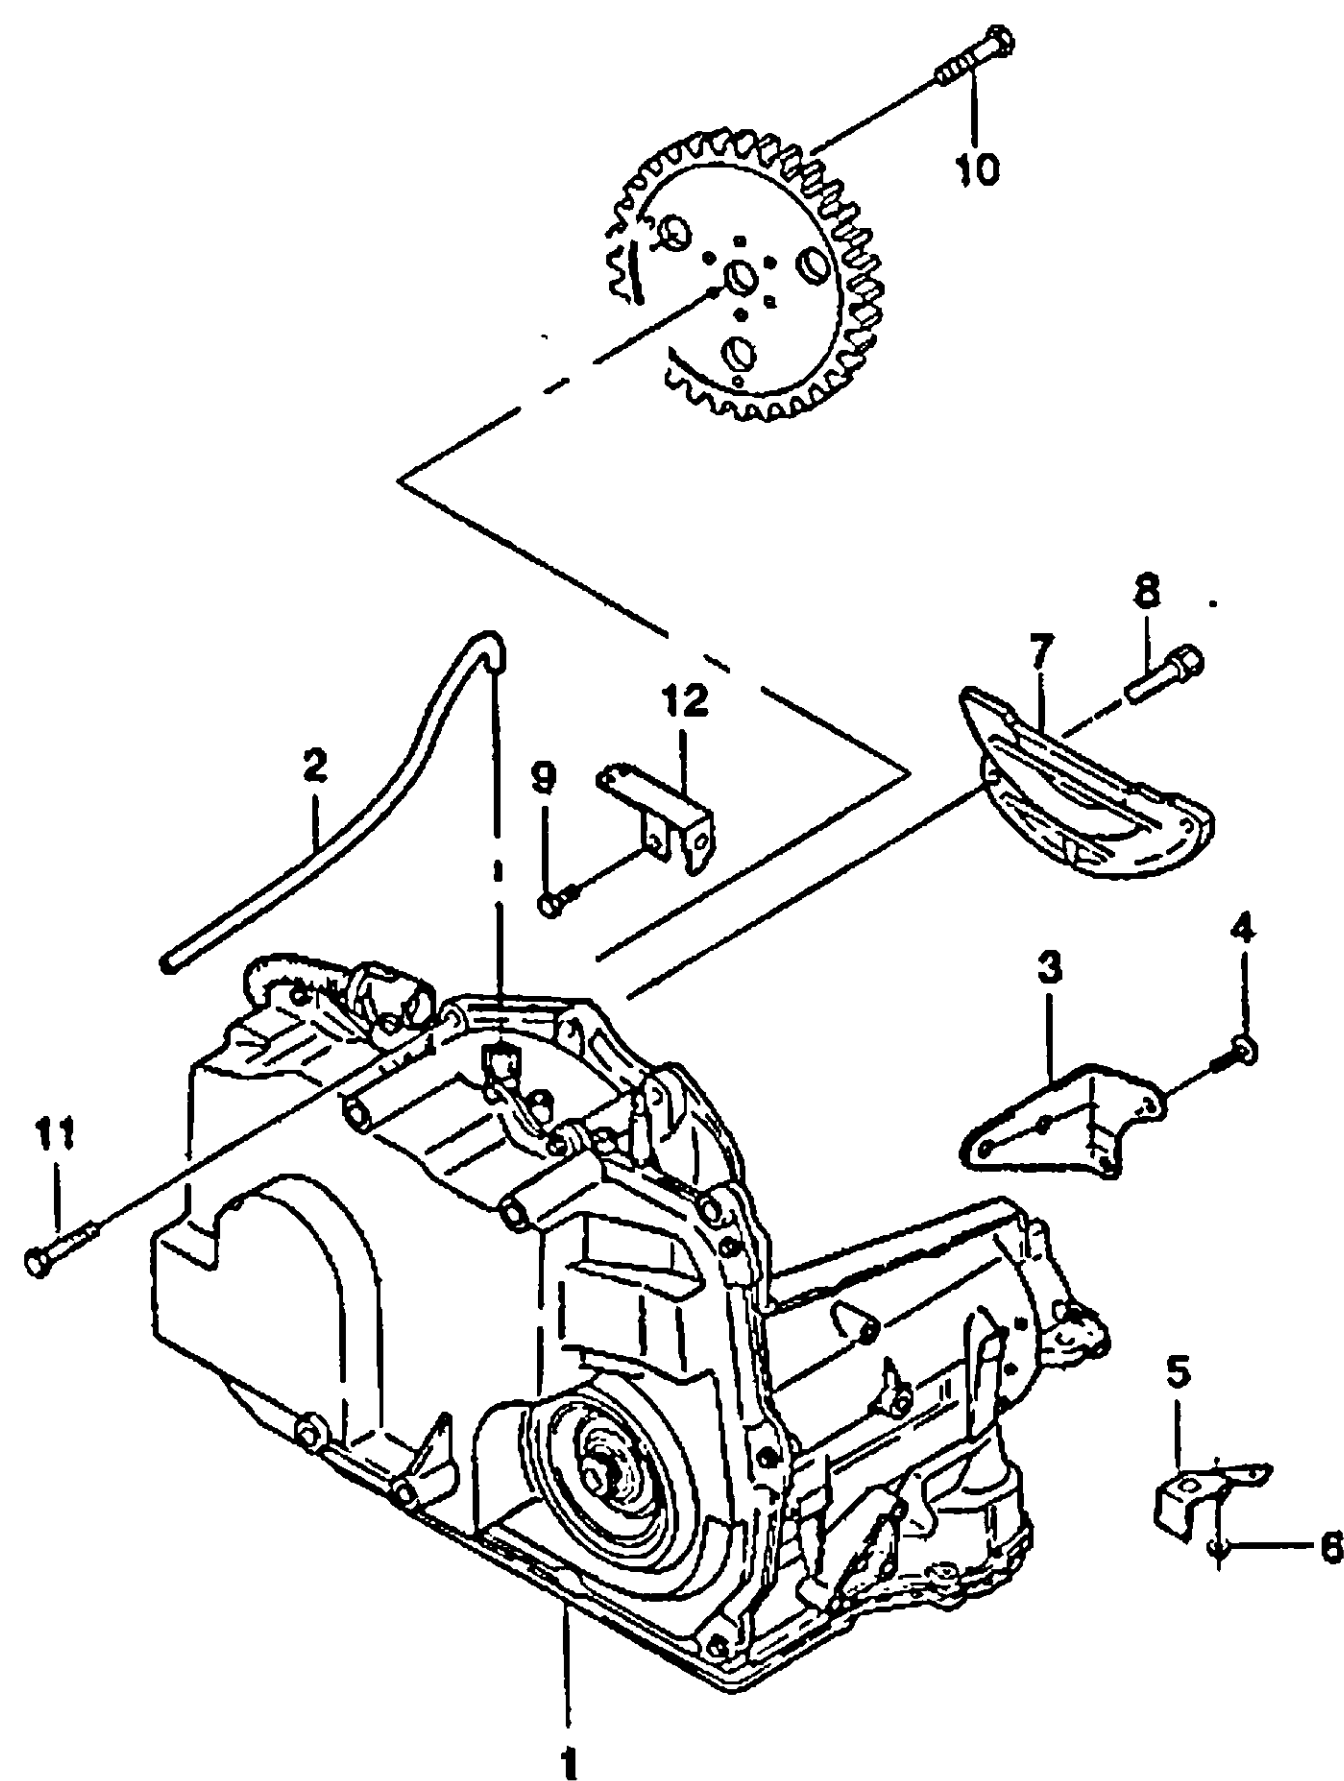


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				F R O M	T O			
				4 N	3 H	5 H	S								S S
	[01]	(E)TRANSAXLE A-AUTOMATIC (D)ANTRIEB,AUTOMATISCH									(F)TRANSMISSION-AUTOMATIQUE (S)EJE TRANSVERSAL				
	24210487	Y	A	B	B	B	O	O			1			7X	
	24210488	6	A	B	B	B	.	.	O		1			TY	
	[02]	(E)HOSE-VENTING (D)SCHLAUCH,BELÜFTUNG									(F)TUYAU-VENTILATION (S)MANGUERA-VENTILACION				
	96183828	.	A	B	B	B	O	O			1		900mm		
	[03]	(E)SUPPORT-TRANSMISSION (D)TRÄGER									(F)SUPPORT (S)SOPORTE				
	96179228	.	A	B	B	B	O	O			1				
	[04]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09103-10009	.	A	B	B	B	O	O			3				
	[05]	(E)BRACKET-SHIELD (D)TRÄGER									(F)SUPPORT (S)SOPORTE				
	96236245	.	A	B	B	B	O	O			1		970901		
	[06]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA				
	08316-25063	.	A	B	B	B	O	O			1		970901		
	[07]	(E)COVER-CONVERTER (D)DECKEL									(F)CARTER (S)CUBIERTA				
	96245952	.	A	B	B	B	O	O			1				
	[08]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03252-63168	.	A	B	B	B	O	O			3				
	[09]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09100-12008	.	A	B	B	B	O	O			1				
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

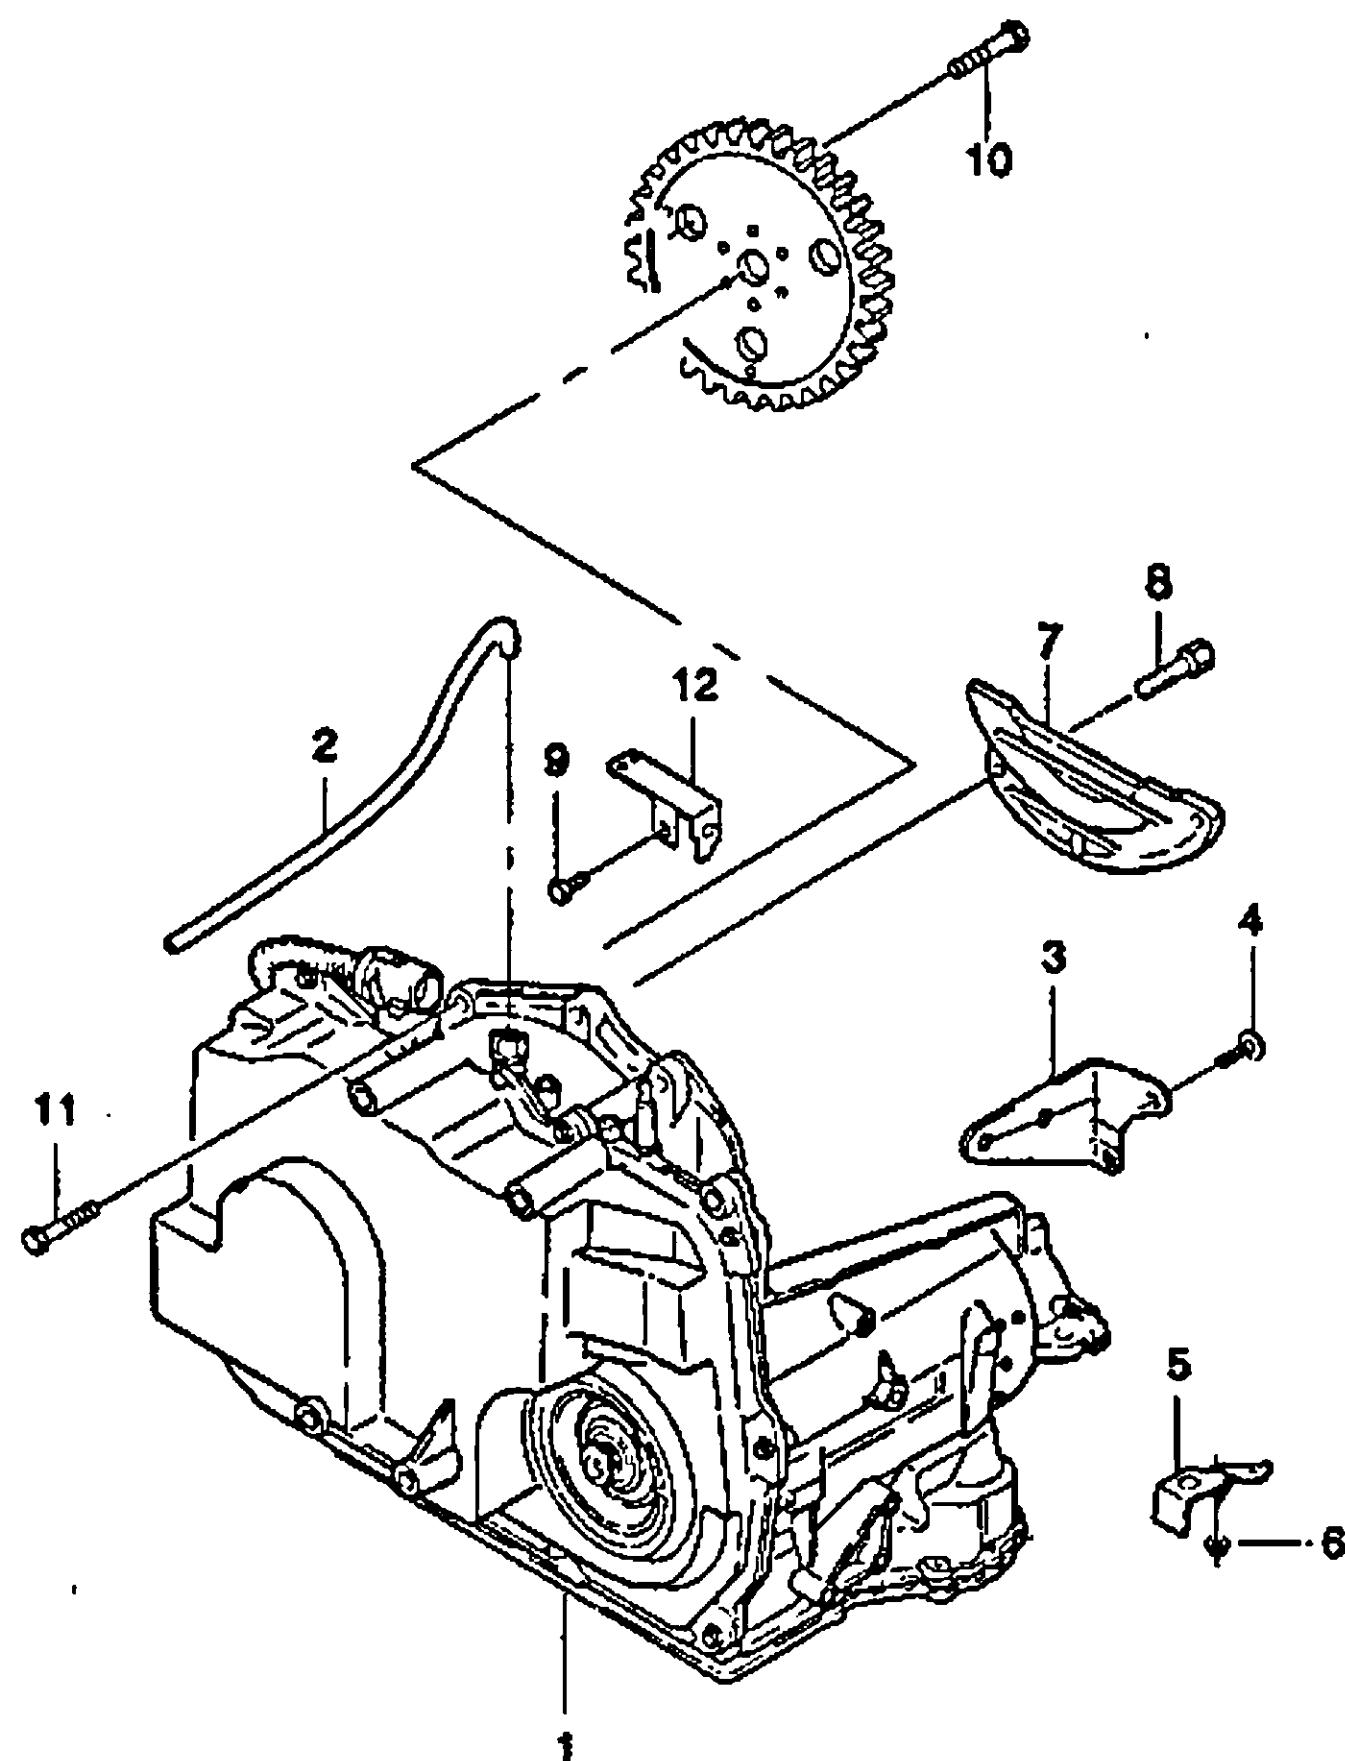


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[10] 09100-10006	(E)BOLT-HEXAGON (D)SCHRAUBE . A B B B O O O								(F)BOULON (S)PERNO 3						
	[11] 09100-12002	(E)BOLT-HEXAGON (D)SCHRAUBE . A B B B O O O								(F)BOULON (S)PERNO 5						
	[12] 96234606	(E)BRACKET-ENG CONT HARNESS (D)TRÄGER . A B B B O O O								(F)SUPPORT (S)SOPORTE 1						
	[A0] 24209093	(E)OVERHAUL KIT (D)WARTUNG SATZ . A B B B O O O - CONSIST OF - FIG. NO 3520 #2,5,6,14,16,17,18,28,29,34,35 39,40,42 FIG. NO 3521 #7,12,14,19,22,25,32,33,53 FIG. NO 3530 #2,8,9,14 FIG. NO 3531 #1,5,10,19,23,34, FIG. NO 3533 #3,10 FIG. NO 3535 #5 FIG. NO 3550 #5,6 FIG. NO 3570 #10,12								(F)TROUSSE DE REPARATIONS (S)JUEGO DE REPARACION 1						
	[A1] 24210577	(E)GASKET KIT (D)DICHTUNG SATZ . A B B B O O O - CONSIST OF -								(F)TROUSSE DE JOINT (S)JUEGO DE JUNTA 1						
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

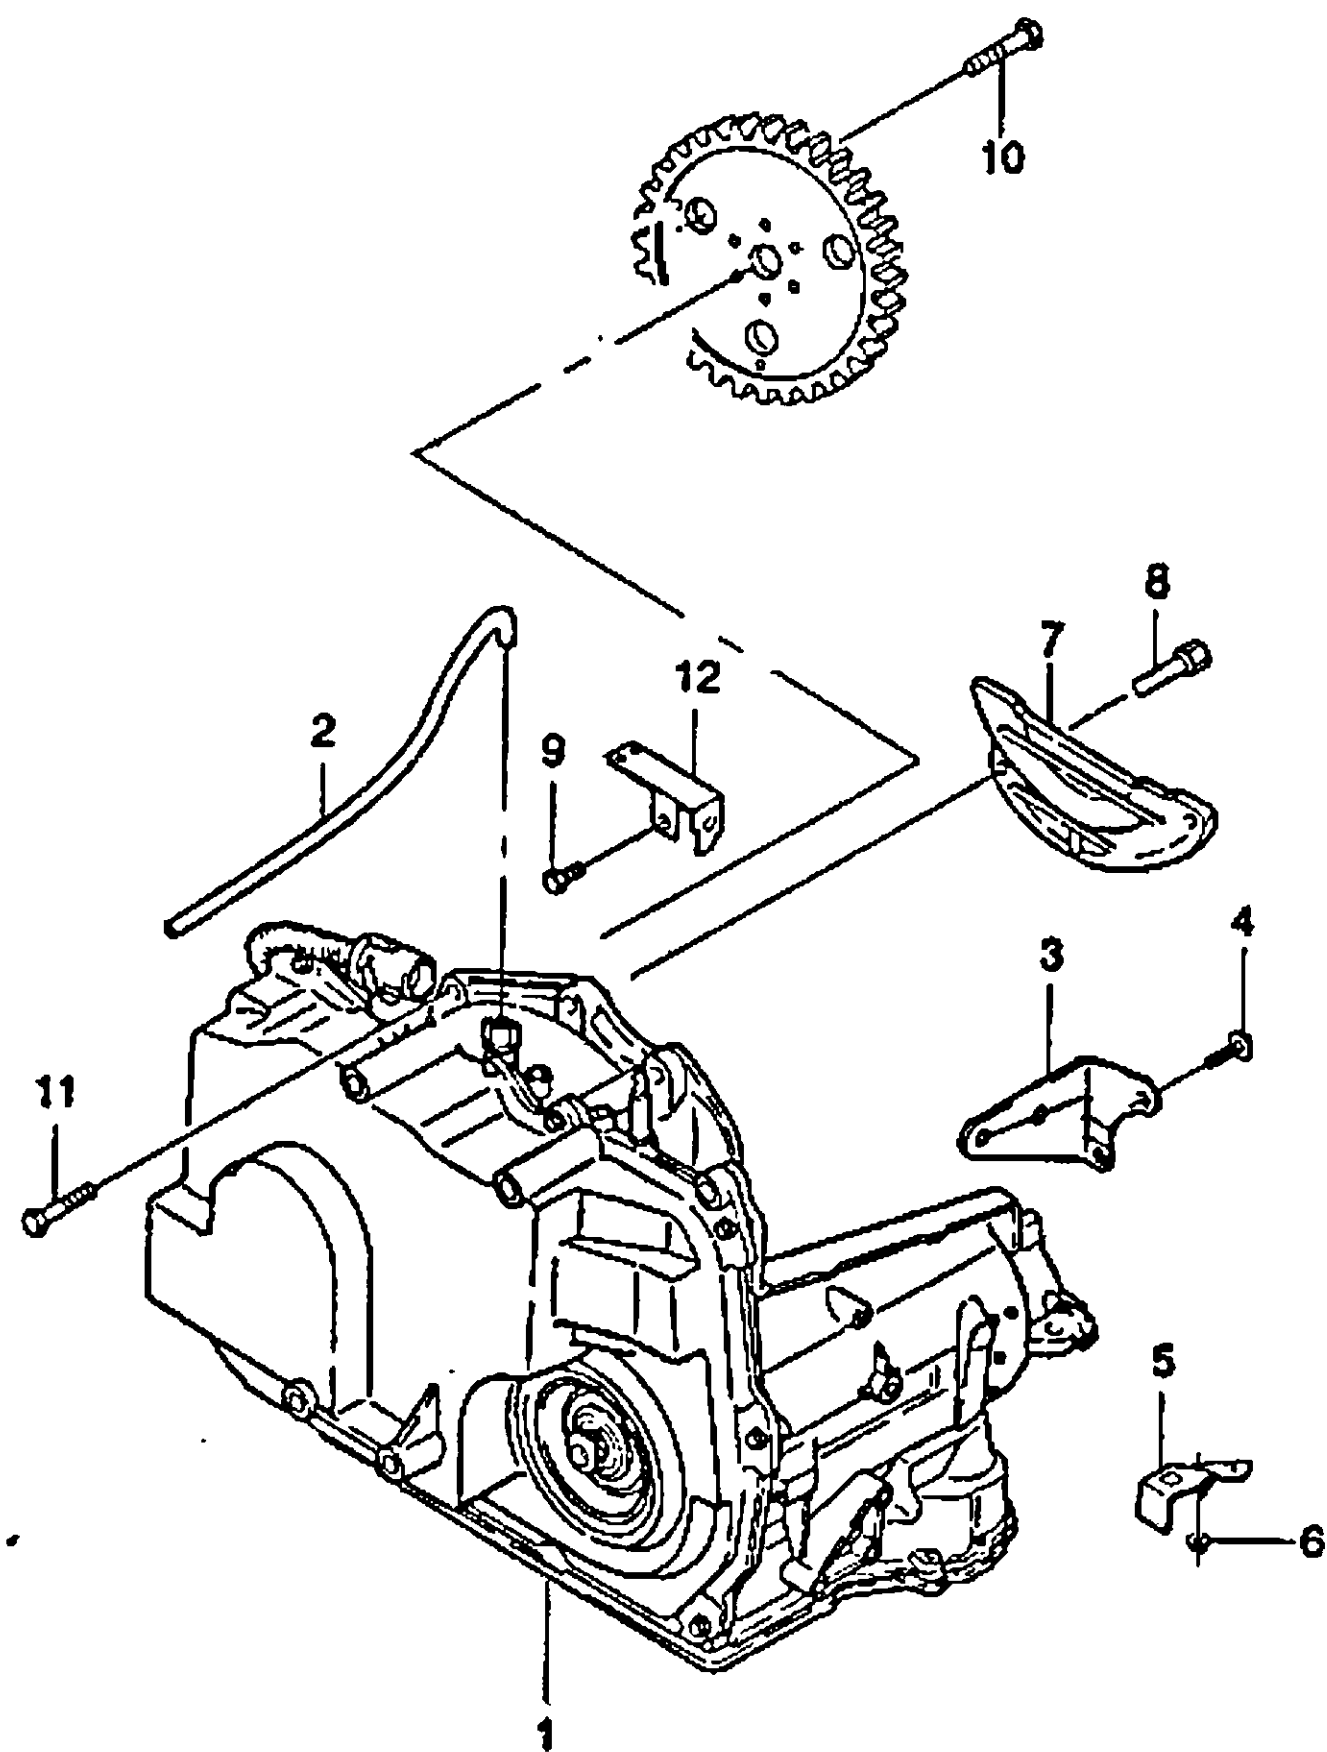


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
		FIG. NO 3520 #6,14,17,18														
		FIG. NO 3521 #12,14,19,33														
		FIG. NO 3570 #10														
								</								

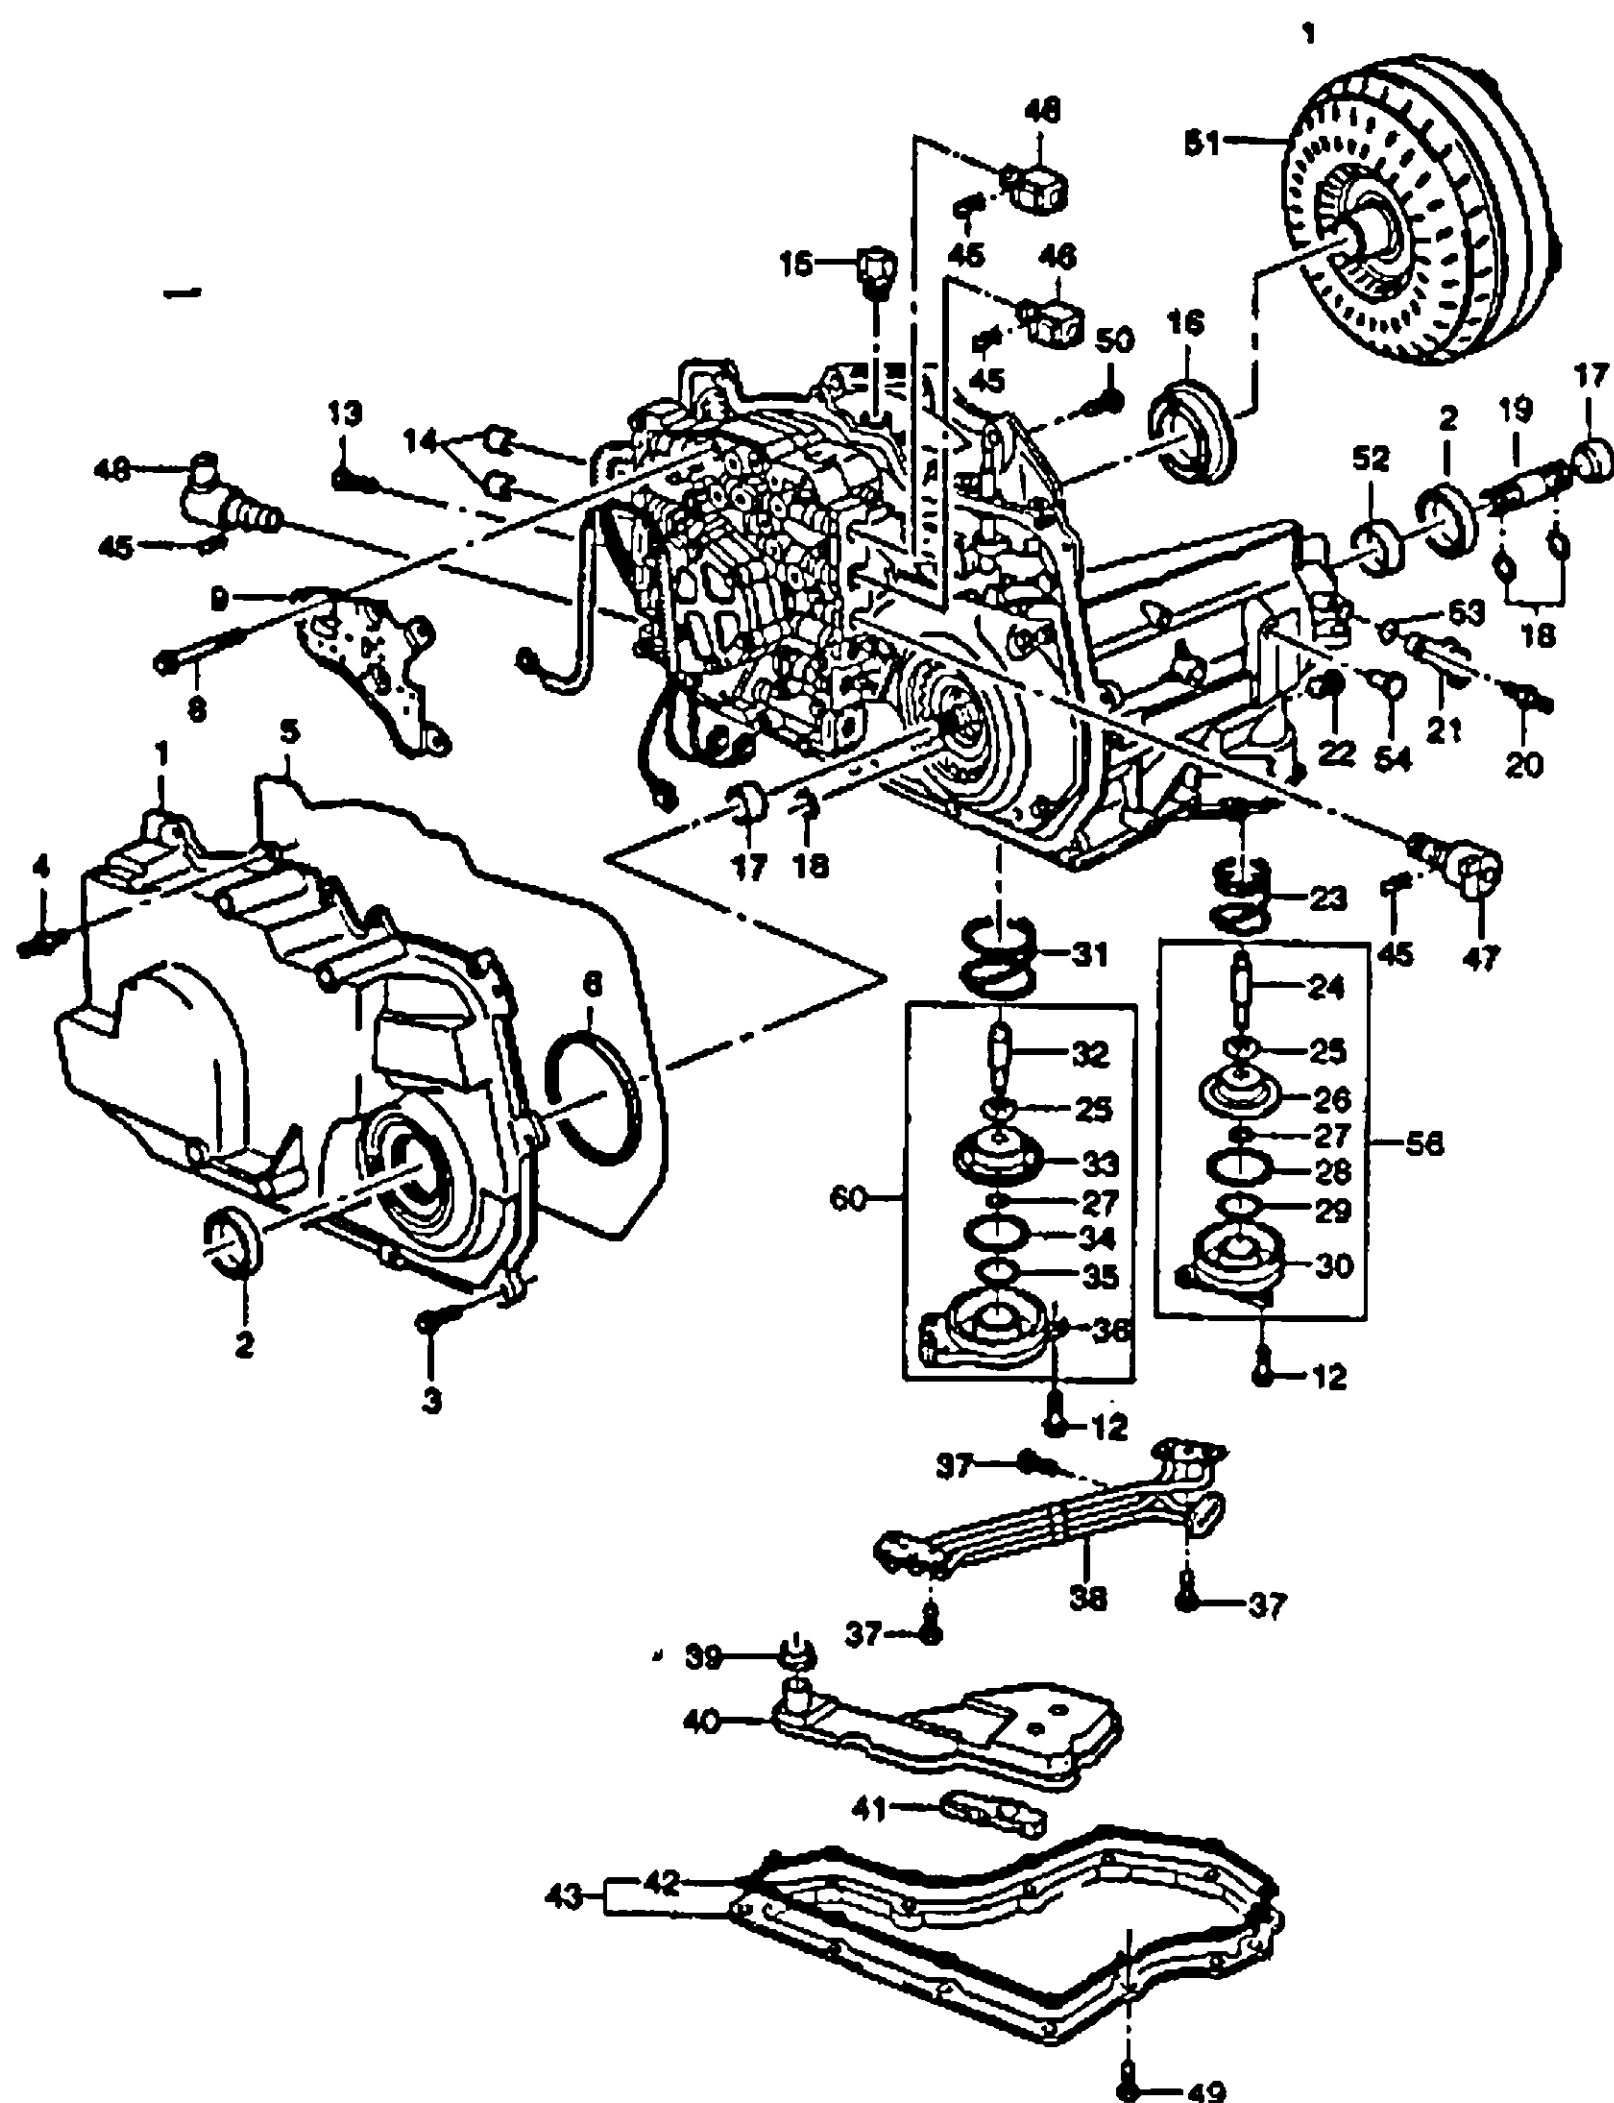


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL			FROM	TO			
				4 N H	3 H	5 H	S S							S S
	[01]	(E)COVER-SIDE (D)DECKEL,SEITE							(F)CARTER-COTE (S)CUBIERTA-LADO					
	24209574	. A B B B O O O							1			INCL.#2,5,6,41		
	[02]	(E)SEAL-OIL (D)DICHTUNG,ACHSE ÖL							(F)JOINT-HUILE DE PONT (S)SELLO-ACEITE DE EJE					
	24201936	. A B B B O O O							1					
	[03]	(E)BOLT-SIDE COVER (D)SCHRAUBE,SEITENDECKEL							(F)BOULON-COUCERCLE COTE (S)PERNO-CUBIERTA DE LADO					
	24203912	. A B B B O O O							1			M8X1.25X23mm		
	[04]	(E)STUD-SIDE COVER (D)STEG,SEITEN-DECKEL							(F)TOURILLON (S)TRAVESAÑO					
	24208309	. A B B B O O O							1			M8X1.25X20mm		
	[05]	(E)GASKET-SIDE COVER (D)DICHTUNG							(F)JOINT-CARTER DE COTE (S)JUNTA-CUBIERTA LATERAL					
	24200478	. A B B B O O O							1					
	[06]	(E)GASKET-SIDE CVR OIL LEVER (D)DICHTUNG							(F)JOINT (S)JUNTA					
	08685154	. A B B B O O O							1					
	[08]	(E)BOLT (D)SCHRAUBE							(F)BOULON (S)PERNO					
	24200206	. A B B B O O O							12			M6X1.0X86mm		
	[09]	(E)SWITCH-PRESSURE (D)SCHALTER,DRUCK							(F)COMMUTATEUR-PRESSION (S)INTERRUPTOR-PRESION					
	24200495	. A B B B O O O							1					
	[12]	(E)BOLT (D)SCHRAUBE							(F)BOULON (S)PERNO					
	24200207	. A B B B O O O							2			M6X1.0X24mm		
	[13]	(E)PLUG-LINE PRESS (D)STÖPSEL							(F)BOUCHON (S)TAPON					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

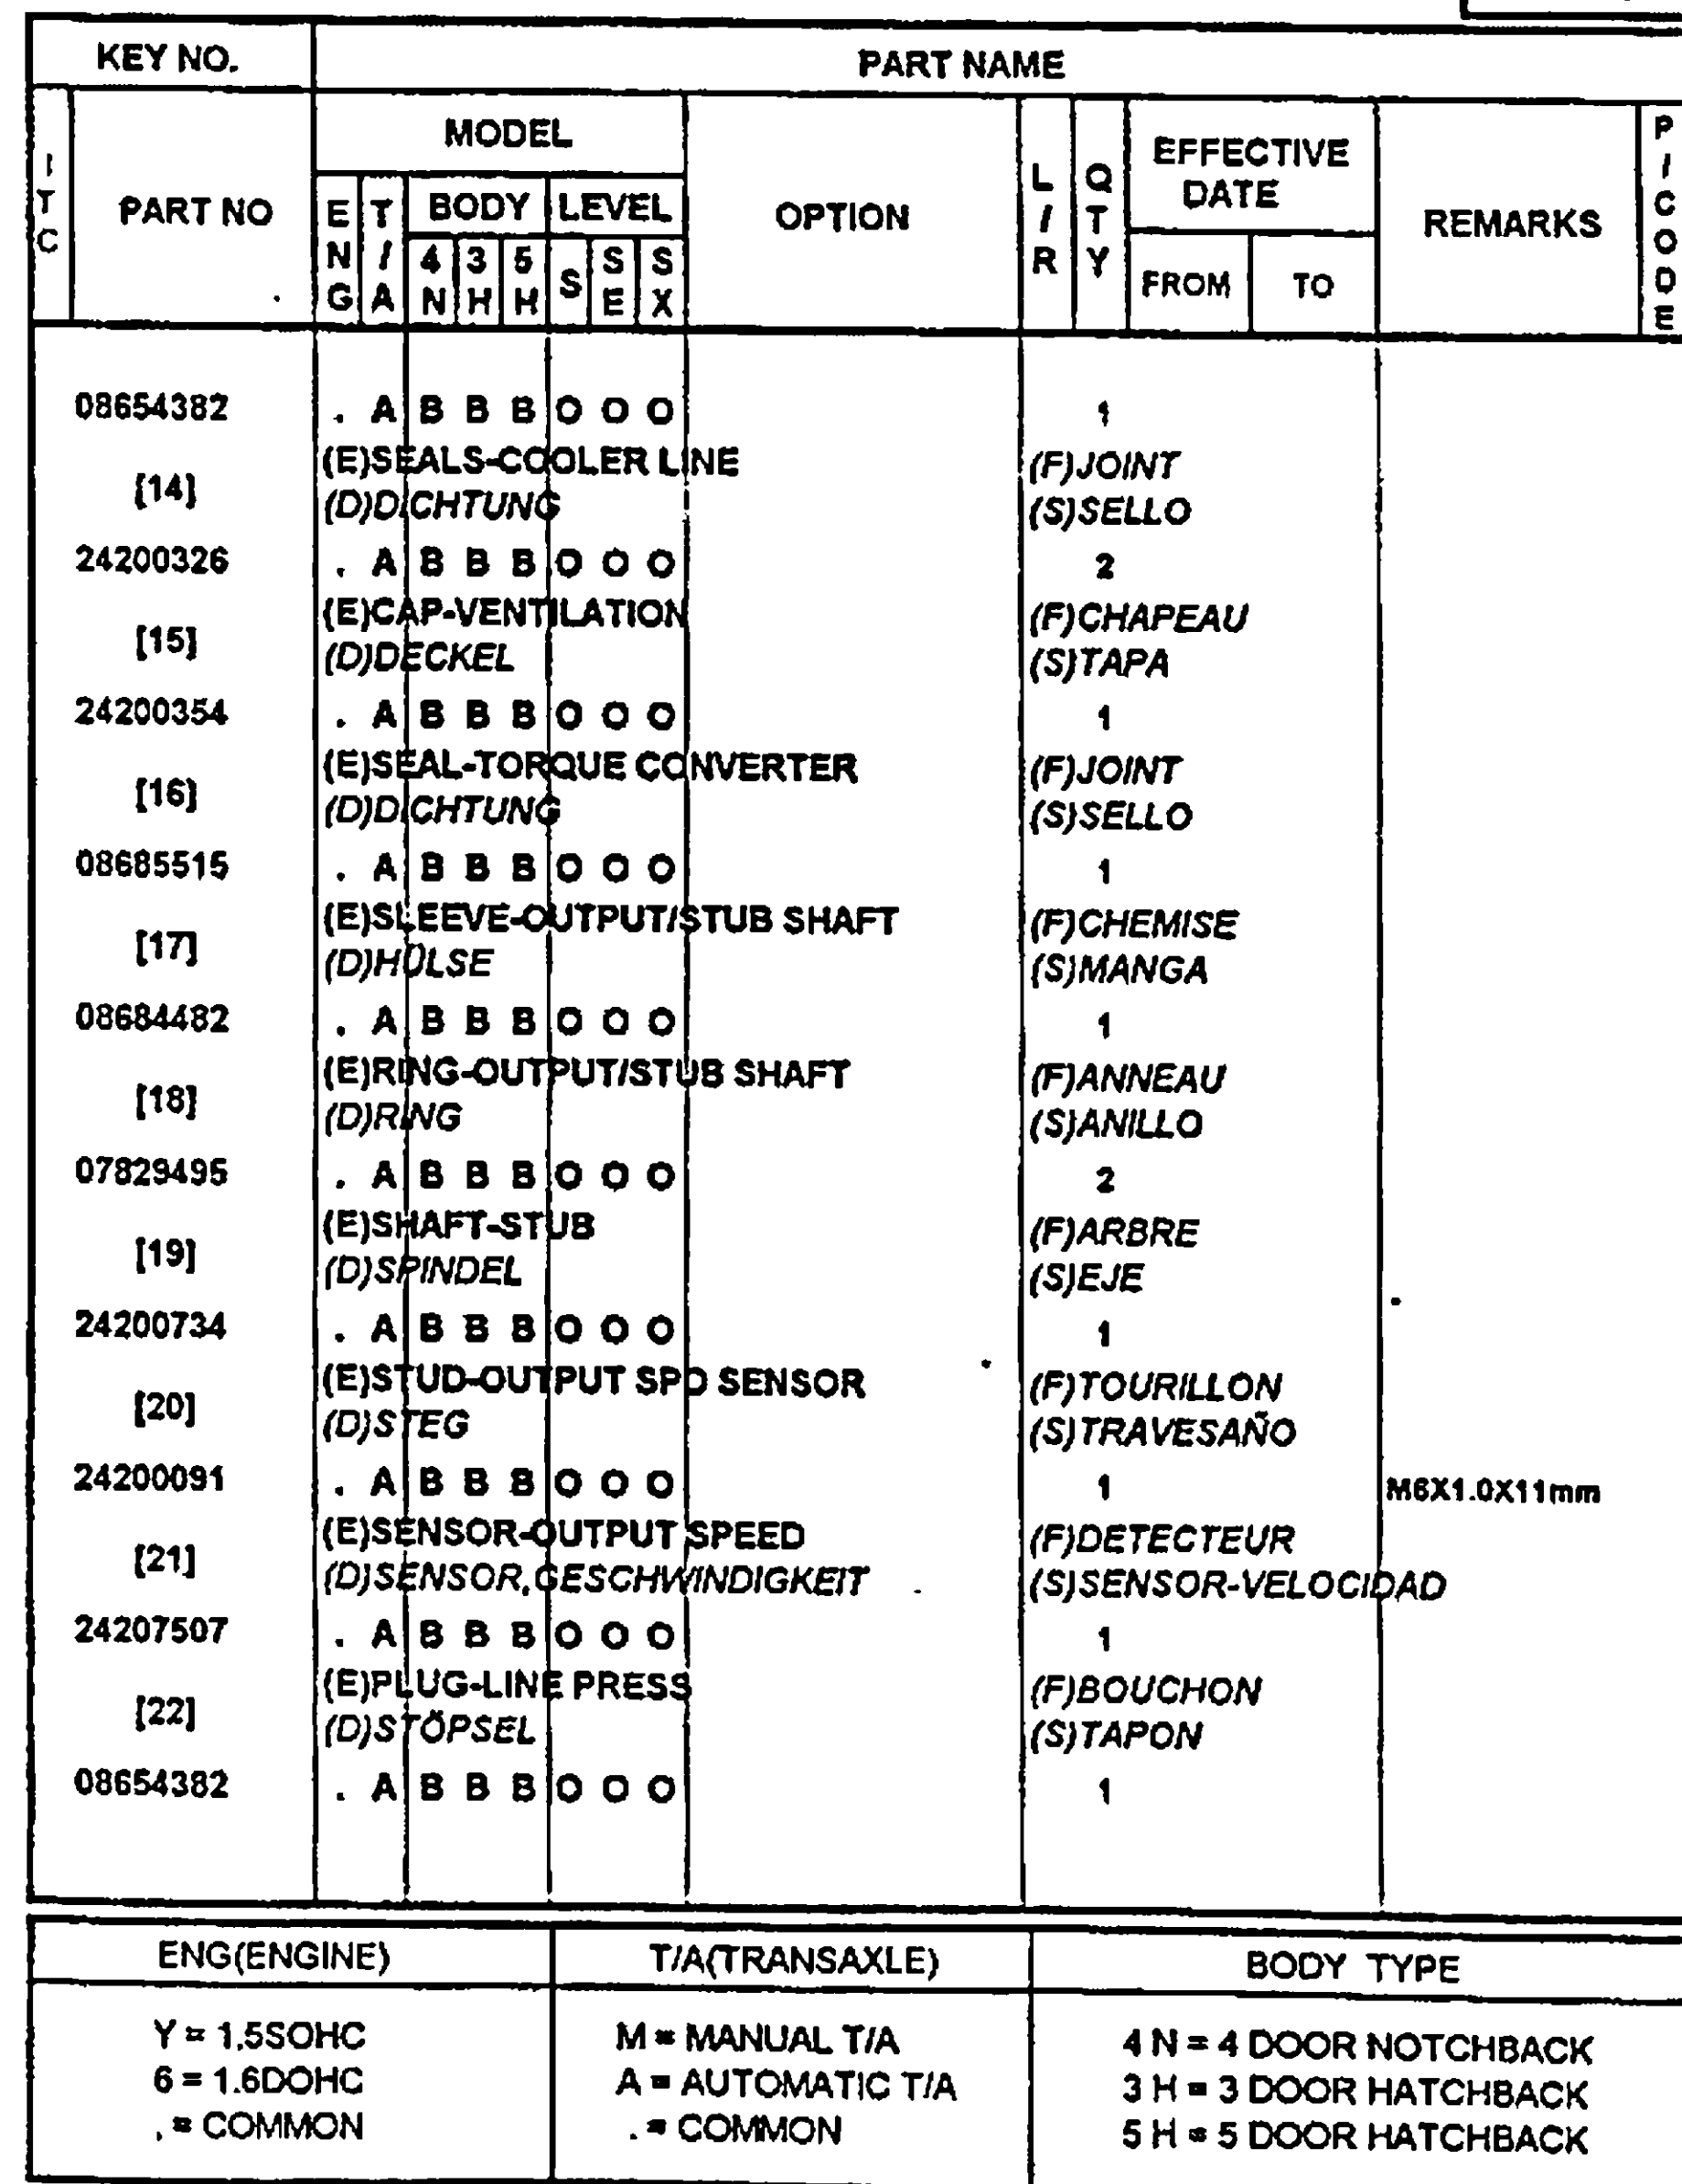


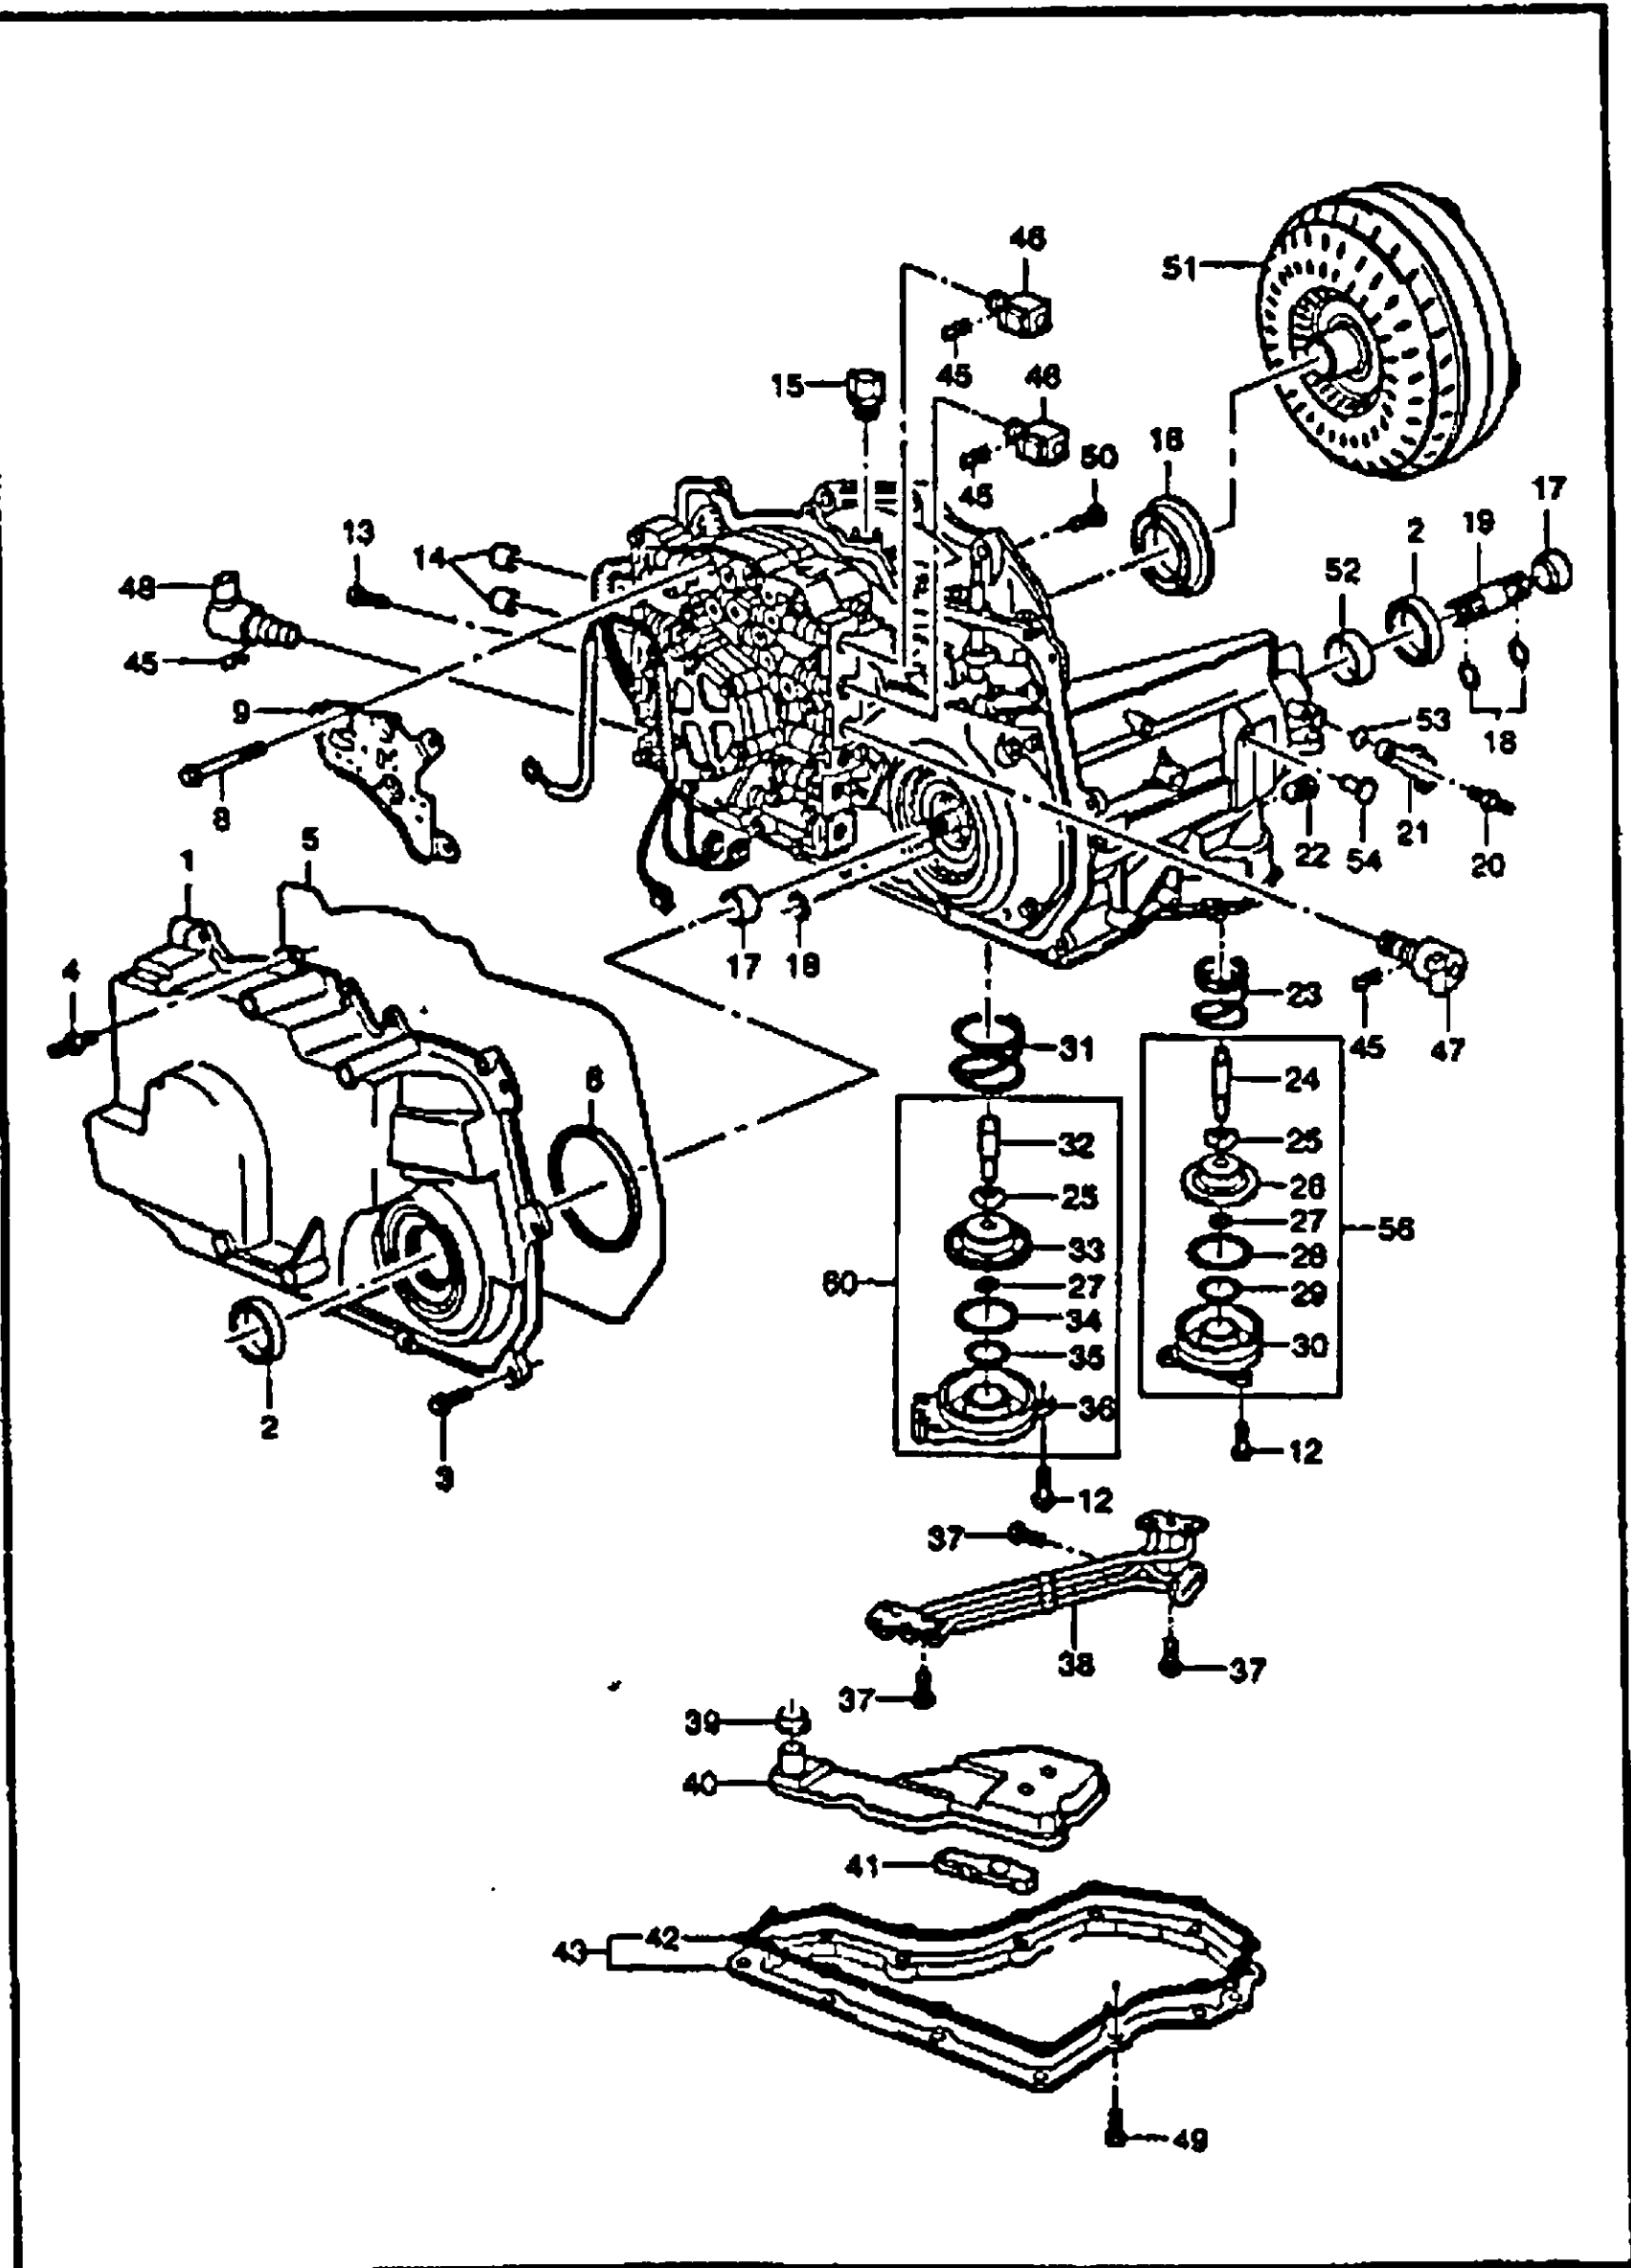


KEY NO.		PART NAME											
I T C	PART NO	MODEL						OPTION	L I T Y	EFFECTIVE DATE		REMARKS	P I C O D E
		E N G	T / A	BODY			LEVEL			FROM	TO		
				4 N	3 H	5 H							
	[23] 08684393	(E)SPRING-SERVO RETURN (D)FEDERUNG,SERVO RÜCK							(F)RESSORT-SERVO RETOUR (S)RESORTE-RETORNO DE SERVO				
	[24] 08684395	(E)PIN-SERVO APPLY (D)STIFT,SERVO ANWENDUNG							(F)BROCHE-APPLICATION SERVO (S)PASADOR-APPLY SERVO				
	[25] 24203610	(E)SPRING-SERVO CUSHION (D)FEDERUNG,SERVO POLSTER							(F)RESSORT-SERVO COUSSIN (S)RESORTE-COJIN DE SERVO				
	[26] 24201884	(E)PISTON-SERVO (D)KOLBEN,SERVO							(F)PISTON-SERVO (S)PISTON-SERVO				
	[27] 11505767	(E)RING-SERVO SNAP (D)RING,SERVO DRUCK							(F)ANNEAU-SERVO PRESSION (S)ANILLO-BROCHE DE SERVO				
	[28] 08684674	(E)SEAL-SERVO PISTON (D)DICHTUNG,SERVO KOLBEN							(F)JOINT-SERVO PISTON (S)SELLO-PISTON DE SERVO				
	[29] 08684394	(E)SEAL-SERVO COVER (D)DICHTUNG,SERVO DECKEL							(F)JOINT-SERVO COUVERCLE (S)SELLO-CUBIERTA DE SERVO				
	[30] 24201882	(E)COVER-SERVO(LO/REVERSE) (D)DECKEL							(F)COUVERTURE (S)CUBIERTA				
	[31] 08684350	(E)SPRING-SERVO RETURN (D)FEDERUNG,SERVO RÜCK							(F)RESSORT-SERVO RETOUR (S)RESORTE-RETORNO DE SERVO				
	[32]	(E)PIN-SERVO APPLY (D)STIFT,SERVO ANWENDUNG							(F)BROCHE-APPLICATION SERVO (S)PASADOR-APPLY SERVO				
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

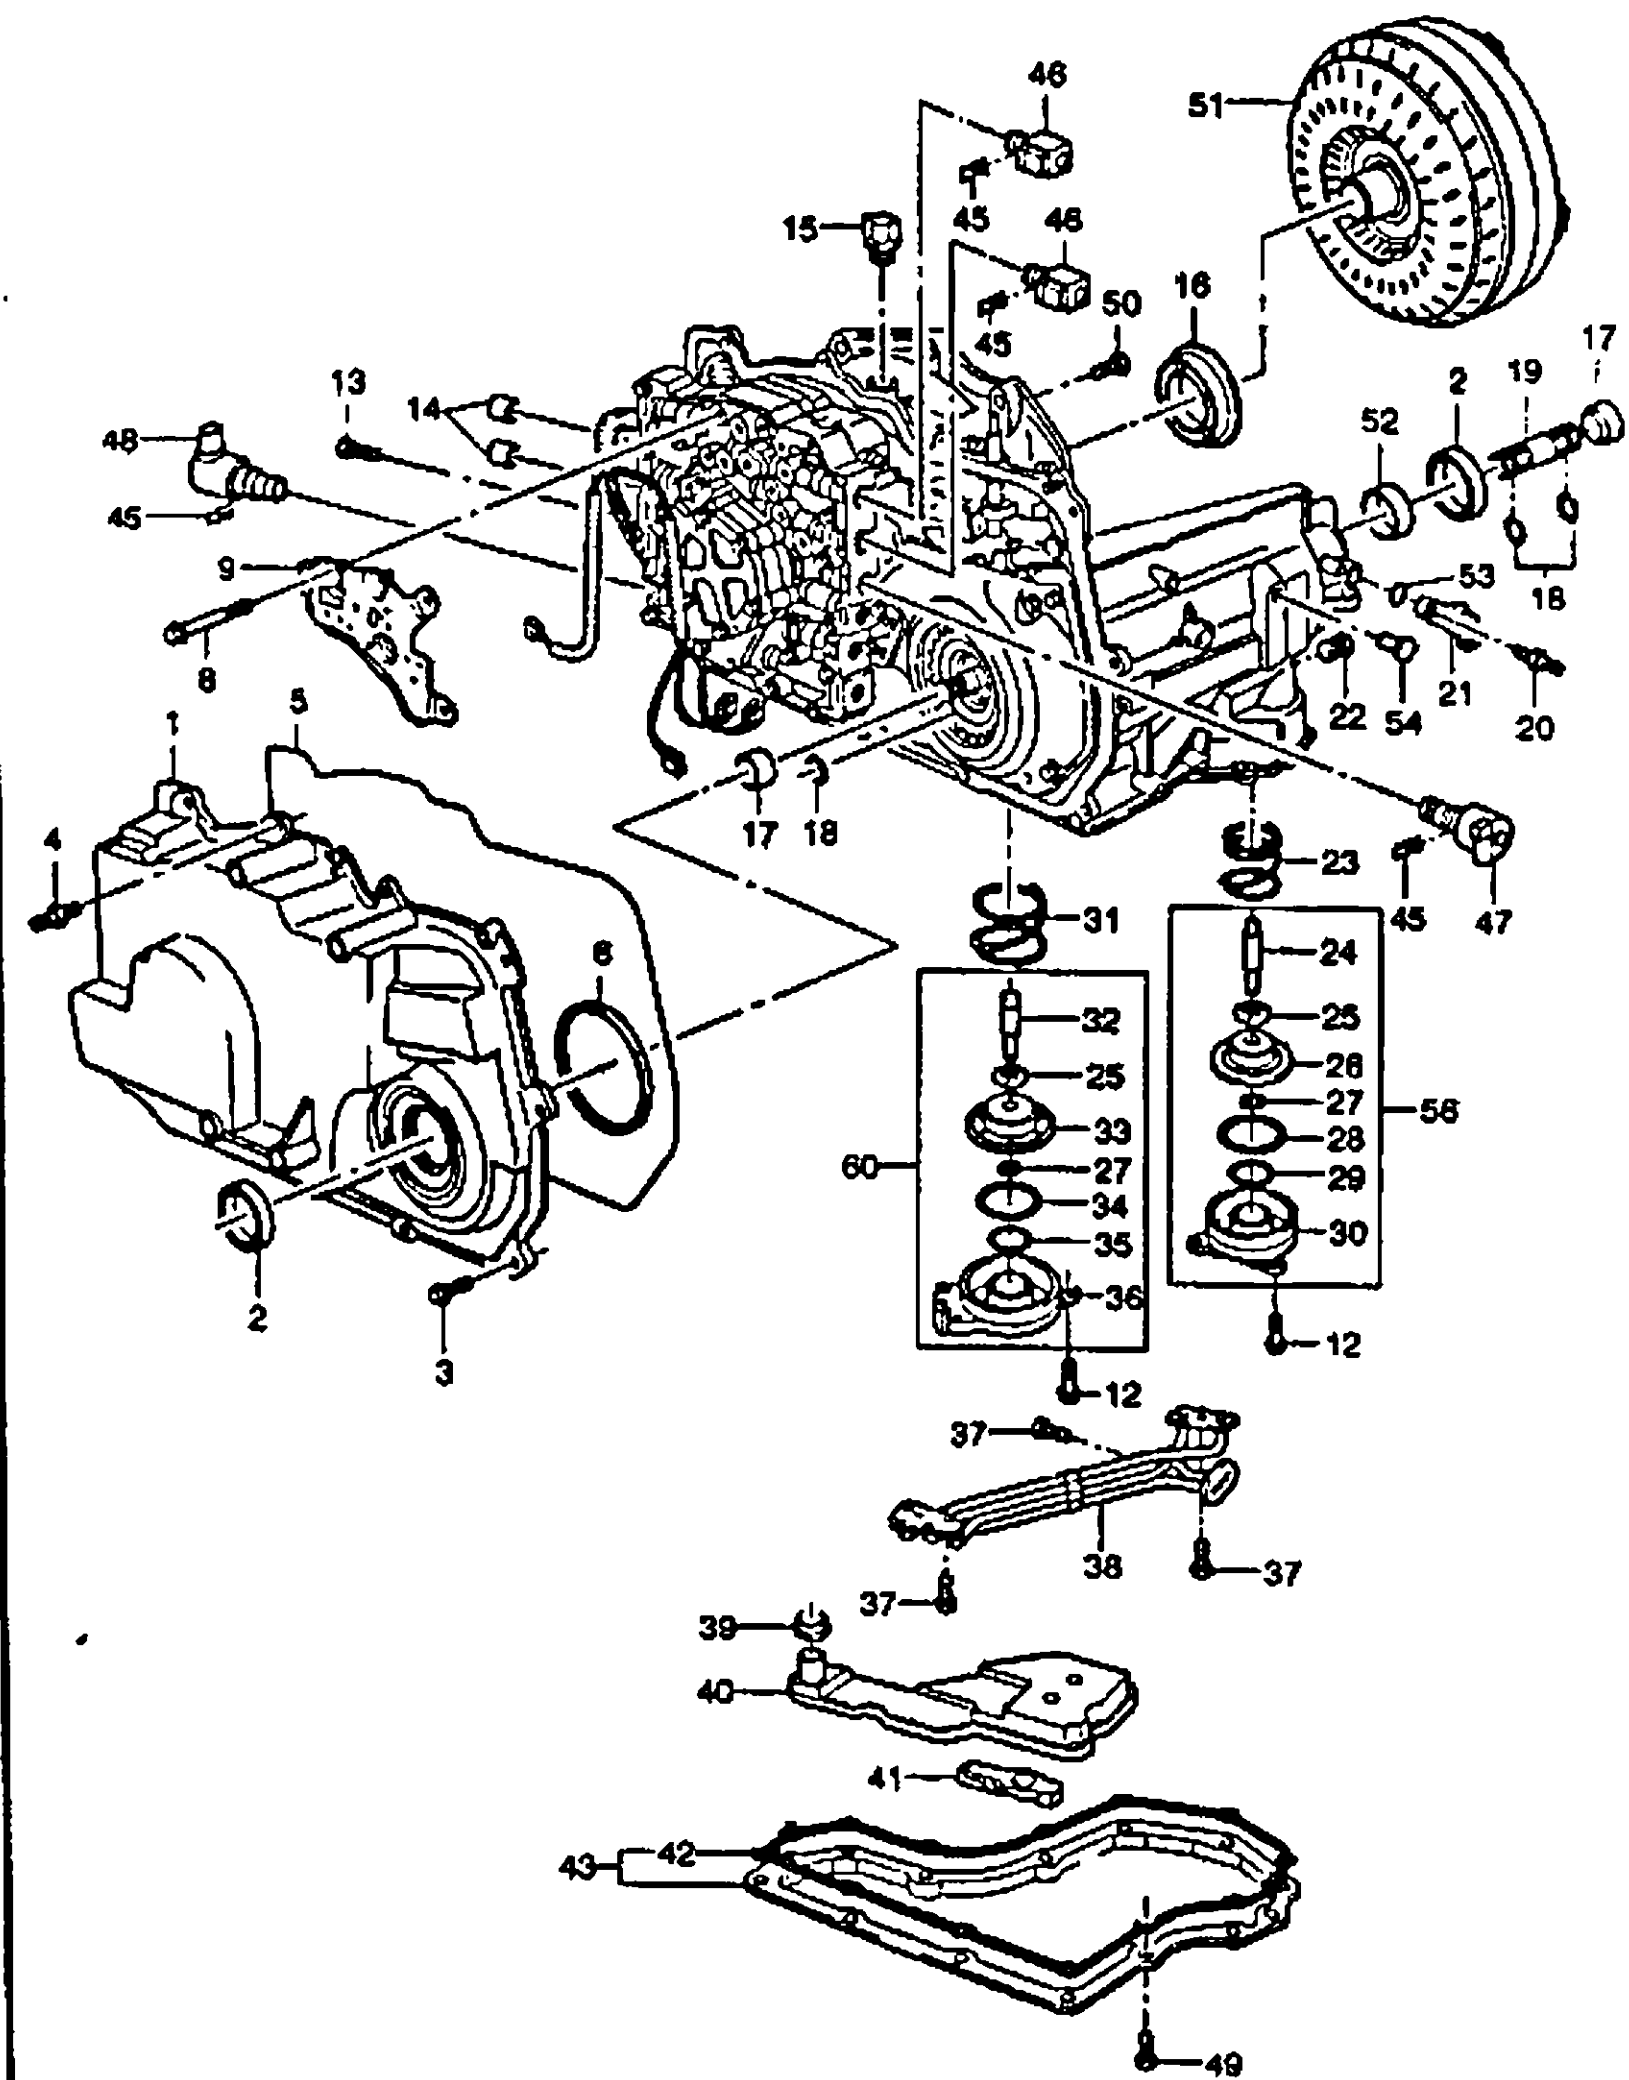


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S								S S	S X
	08684404	.	A	B	B	B	O	O	O		1					
	[33]										(F)PISTON-SERVO					
	N/S(60)	.	A	B	B	B	O	O	O		1					
	[34]										(F)JOINT-SERVO PISTON					
	08684673	.	A	B	B	B	O	O	O		1					
	[35]										(F)JOINT-SERVO COUVERCLE					
	08678473	.	A	B	B	B	O	O	O		1					
	[36]										(F)CARTER-SERVO					
	24201880	.	A	B	B	B	O	O	O		1					
	[37]										(F)BOULON					
	24200092	.	A	B	B	B	O	O	O		4	M6X1.0X13mm				
	[38]										(F)TUYAU-ALIMENTATION HUILE					
	24202349	.	A	B	B	B	O	O	O		1					
	[39]										(F)JOINT					
	08684467	.	A	B	B	B	O	O	O		1					
	[40]										(F)FILTRE					
	08685185	.	A	B	B	B	O	O	O		1					
	Y 24203770	.	A	B	B	B	O	O	O		1					
	[41]										(F)SOUPAPE					
											(S)VALVULA					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

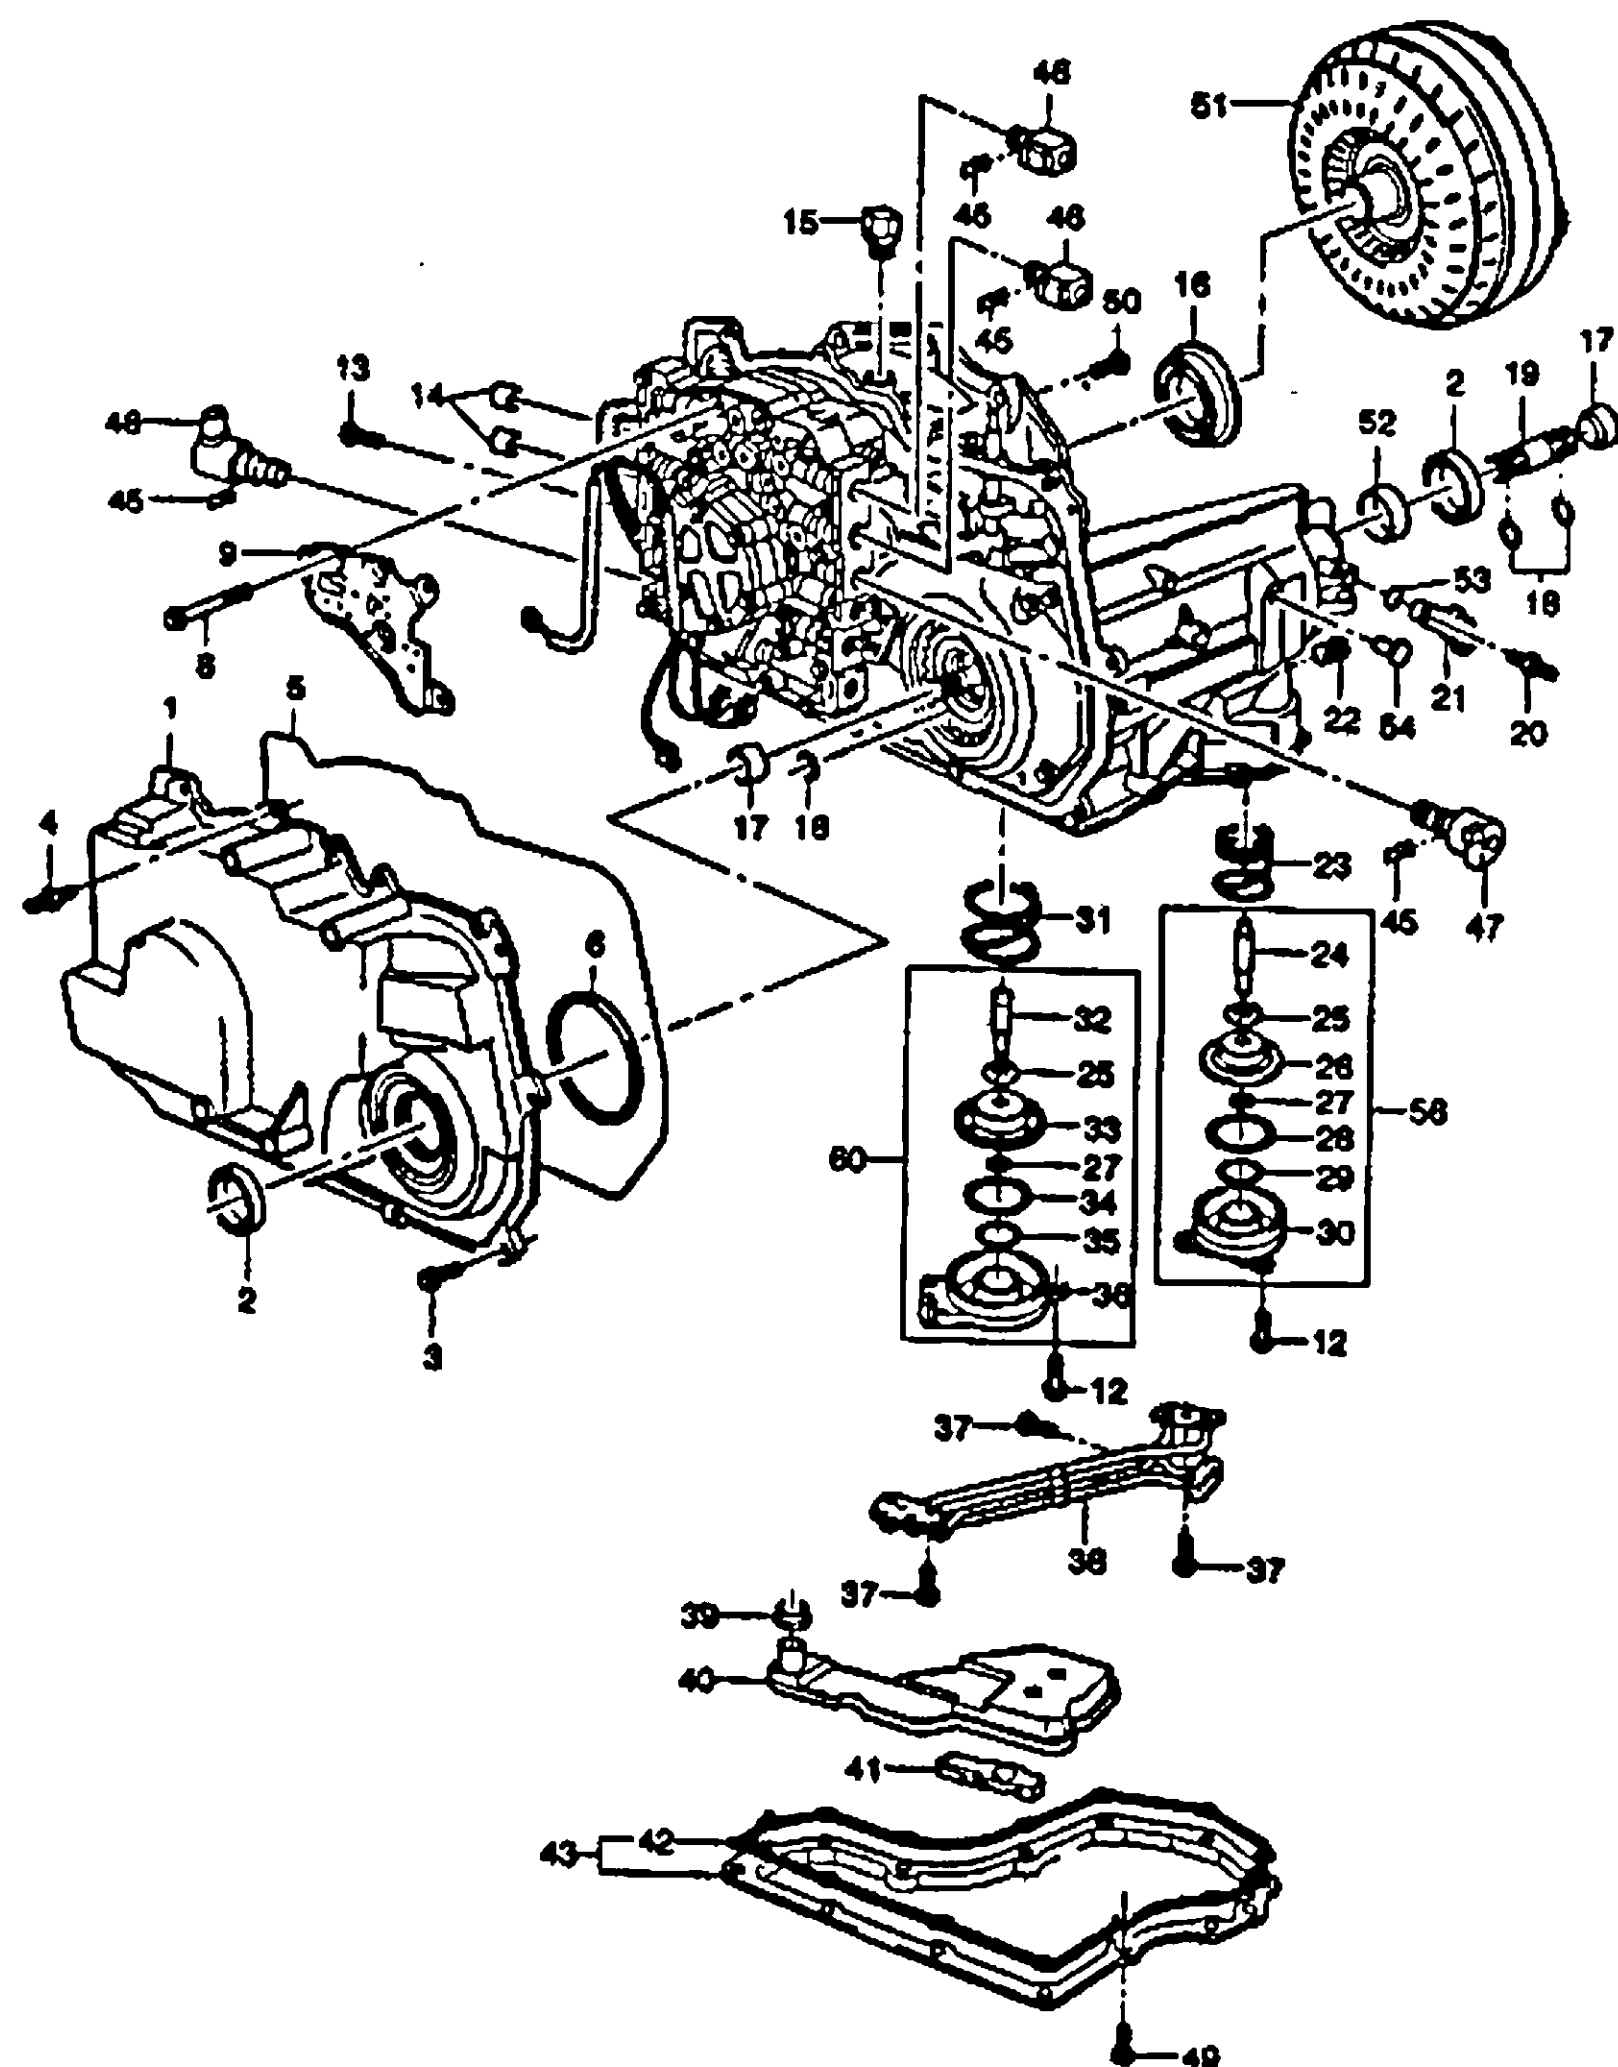


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	24207186 [42]	. A	B	B	B	O	O	O	OIL PAN	1	(F)JOINT (S)JUNTA					
	24203590 [43]	. A	B	B	B	O	O	O		1	(F)CARTER-HUILE (S)RECIPIENTE-ACEITE					
	24203769 [45]	. A	B	B	B	O	O	O		1	(F)ATTACHE-ARRETOIR (S)GRAPA-RETENEDOR	INCL.#42				
	08685781 [46]	. A	B	B	B	O	O	O		11	(F)SOLENOIDE (S)SELENOIDE					
	24207236 [47]	. A	B	B	B	O	O	O		2	(F)SOLENOIDE (S)SELENOIDE					
	10478117 [48]	. A	B	B	B	O	O	O		1	(F)SOLENOIDE (S)SELENOIDE-CONTROL TCC					
	24207054 [49]	. A	B	B	B	O	O	O		1	(F)BOULON (S)PERNO					
	24203911	. A	B	B	B	O	O	O		10						
	24210147 [50]	. A	B	B	B	O	O	O		2	(F)BOULON (S)PERNO					
	08685658 [51]	. A	B	B	B	O	O	O		6	(F)CONVERTISSEUR (S)CONVERTIDOR-CATALITICO	M8X1.25X16mm				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC = COMMON		M = MANUAL T/A A = AUTOMATIC T/A = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

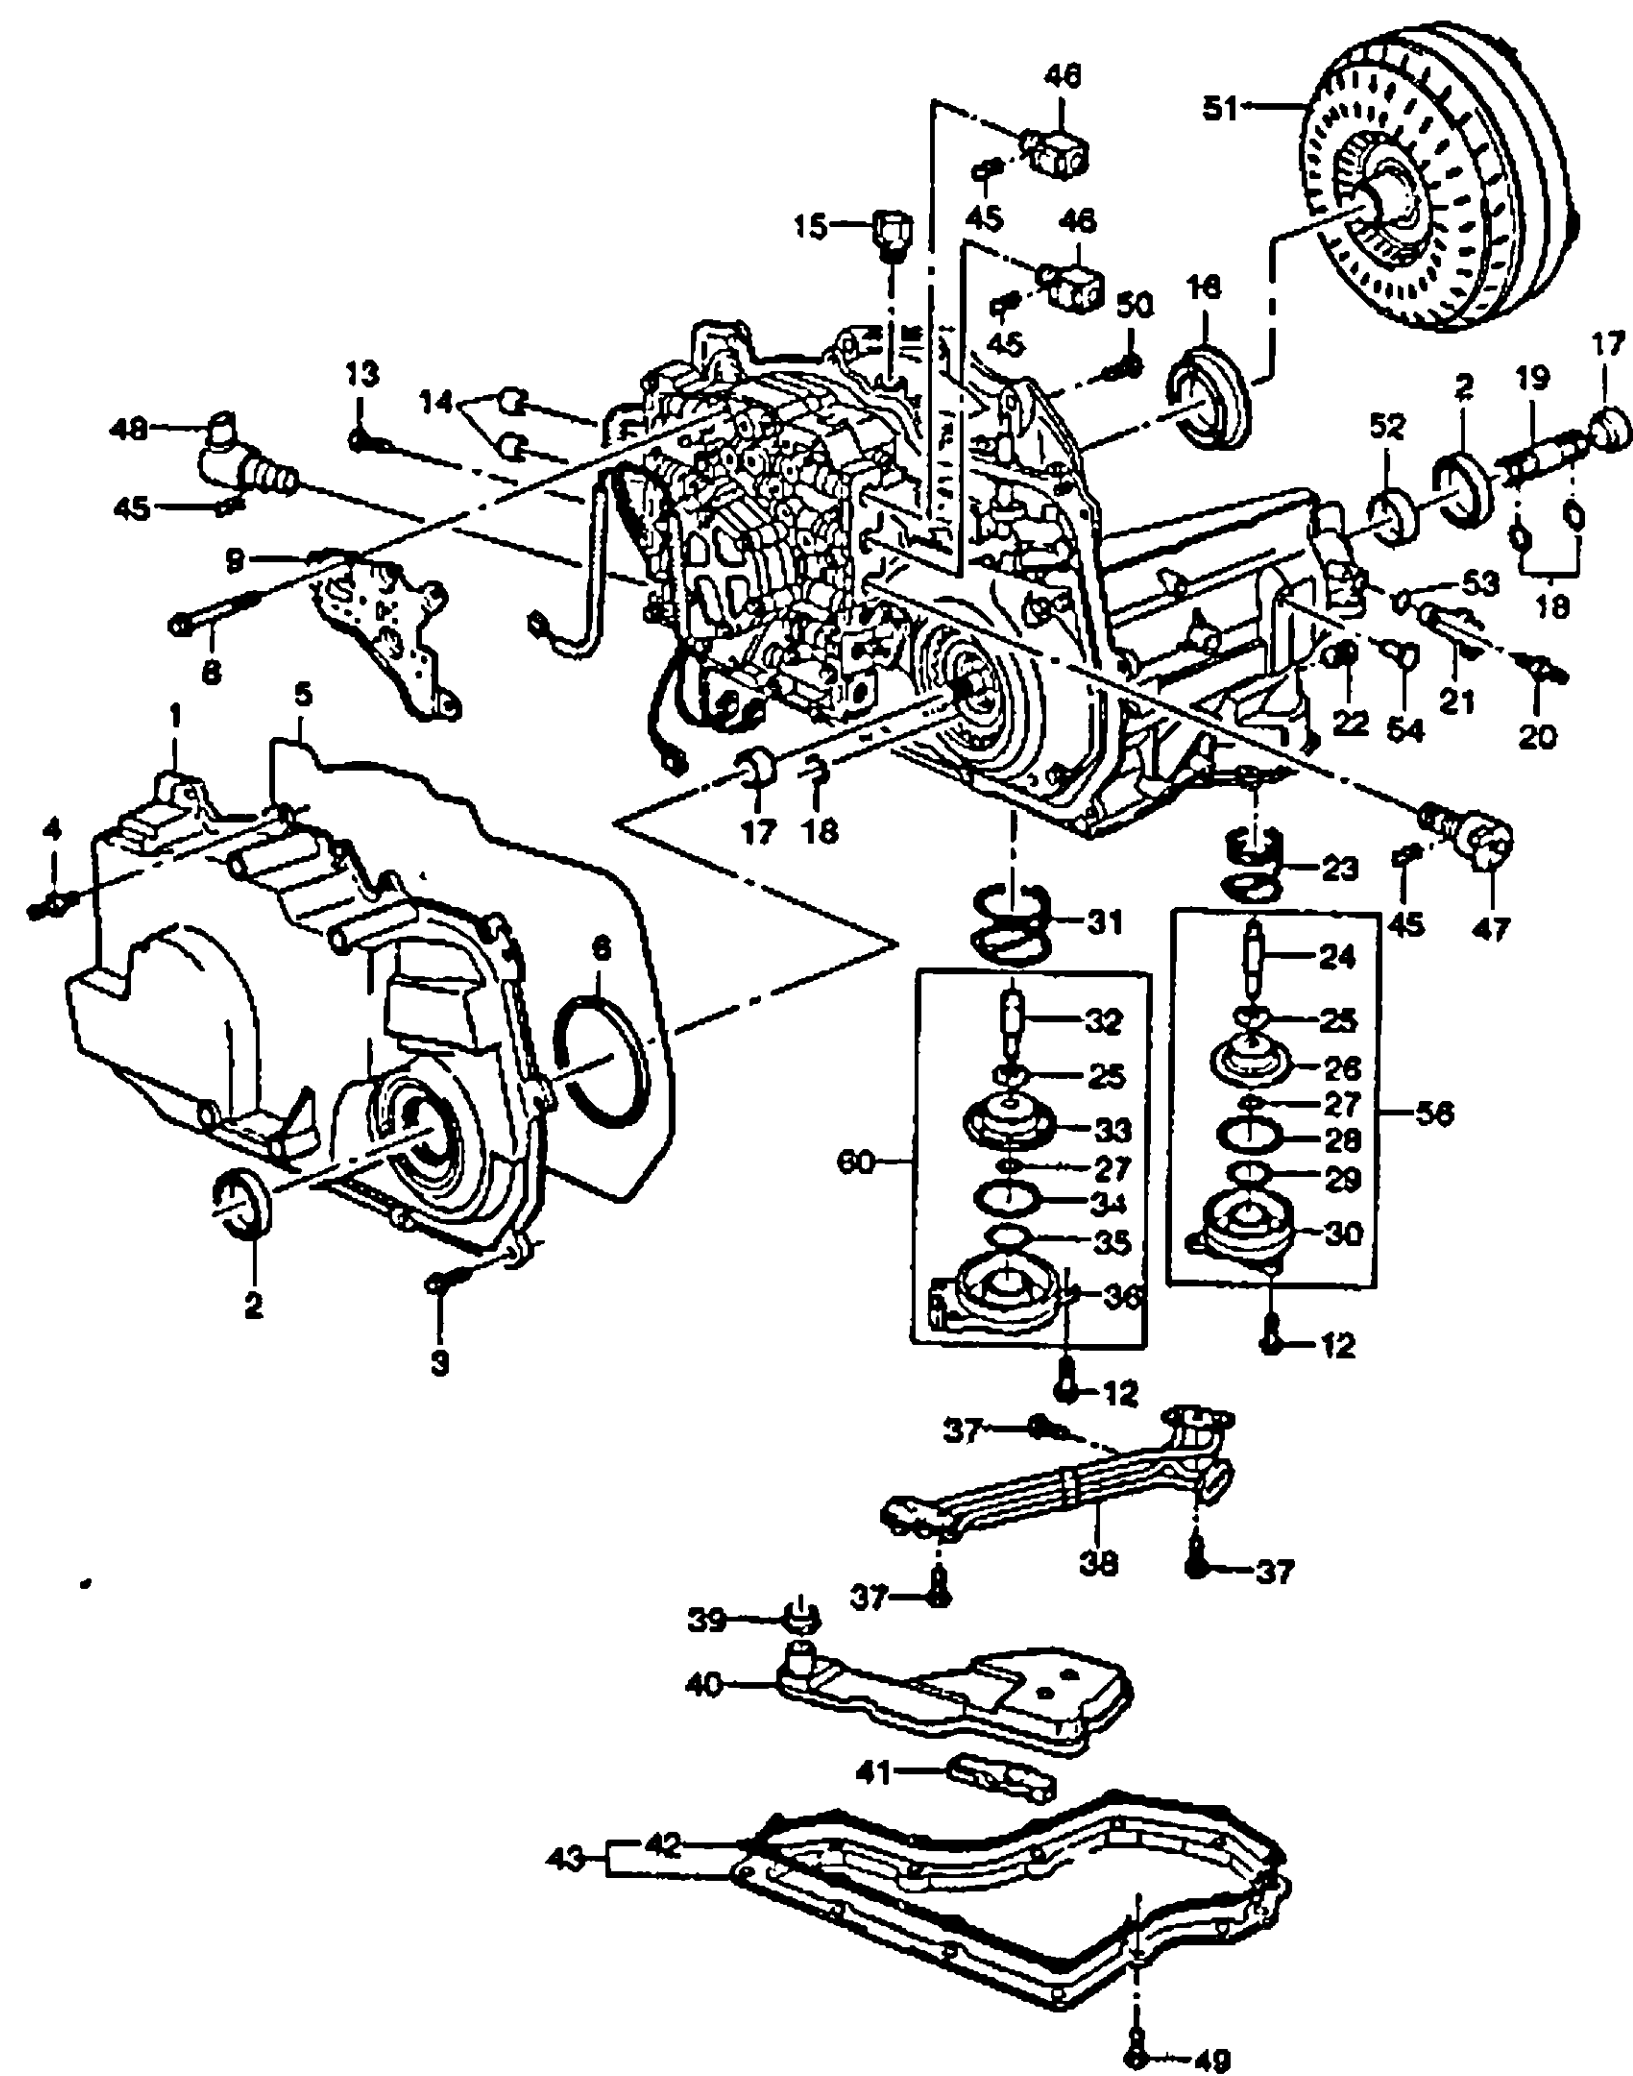


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L I R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								X
	24203821	Y	A	B	B	B	O	O	O		1			NOT APPLIED		
	24210147															
	24211286	6	A	B	B	B	.	.	O		1					
	[52]	(E)BUSHING-CASE TO FINAL DRV (D)LAGERFUTTER									(F)MANCHON (S)BUJE					
	08631119	.	A	B	B	B	O	O	O		1					
	[53]	(E)SEAL-OUTPUT SPD SENSOR (D)DICHTUNG									(F)JOINT (S)SELLO					
	10475299	.	A	B	B	B	O	O	O		1					
	[54]	(E)PIN-BAND ANCHOR,LO/REVERS (D)STIFT									(F)BROCHE (S)PASADOR					
	24202694	.	A	B	B	B	O	O	O		1					
	[56]	(E)COVER A-REV BAND SERVO (D)DECKEL									(F)CARTER (S)CUBIERTA					
	24203623	.	A	B	B	B	O	O	O		1					
	[60]	(E)COVER KIT-4TH BAND SERVO (D)DECKEL,SERVO									(F)CARTER-SERVO (S)CUBIERTA-SERVO					
	24203608	.	A	B	B	B	O	O	O		1					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

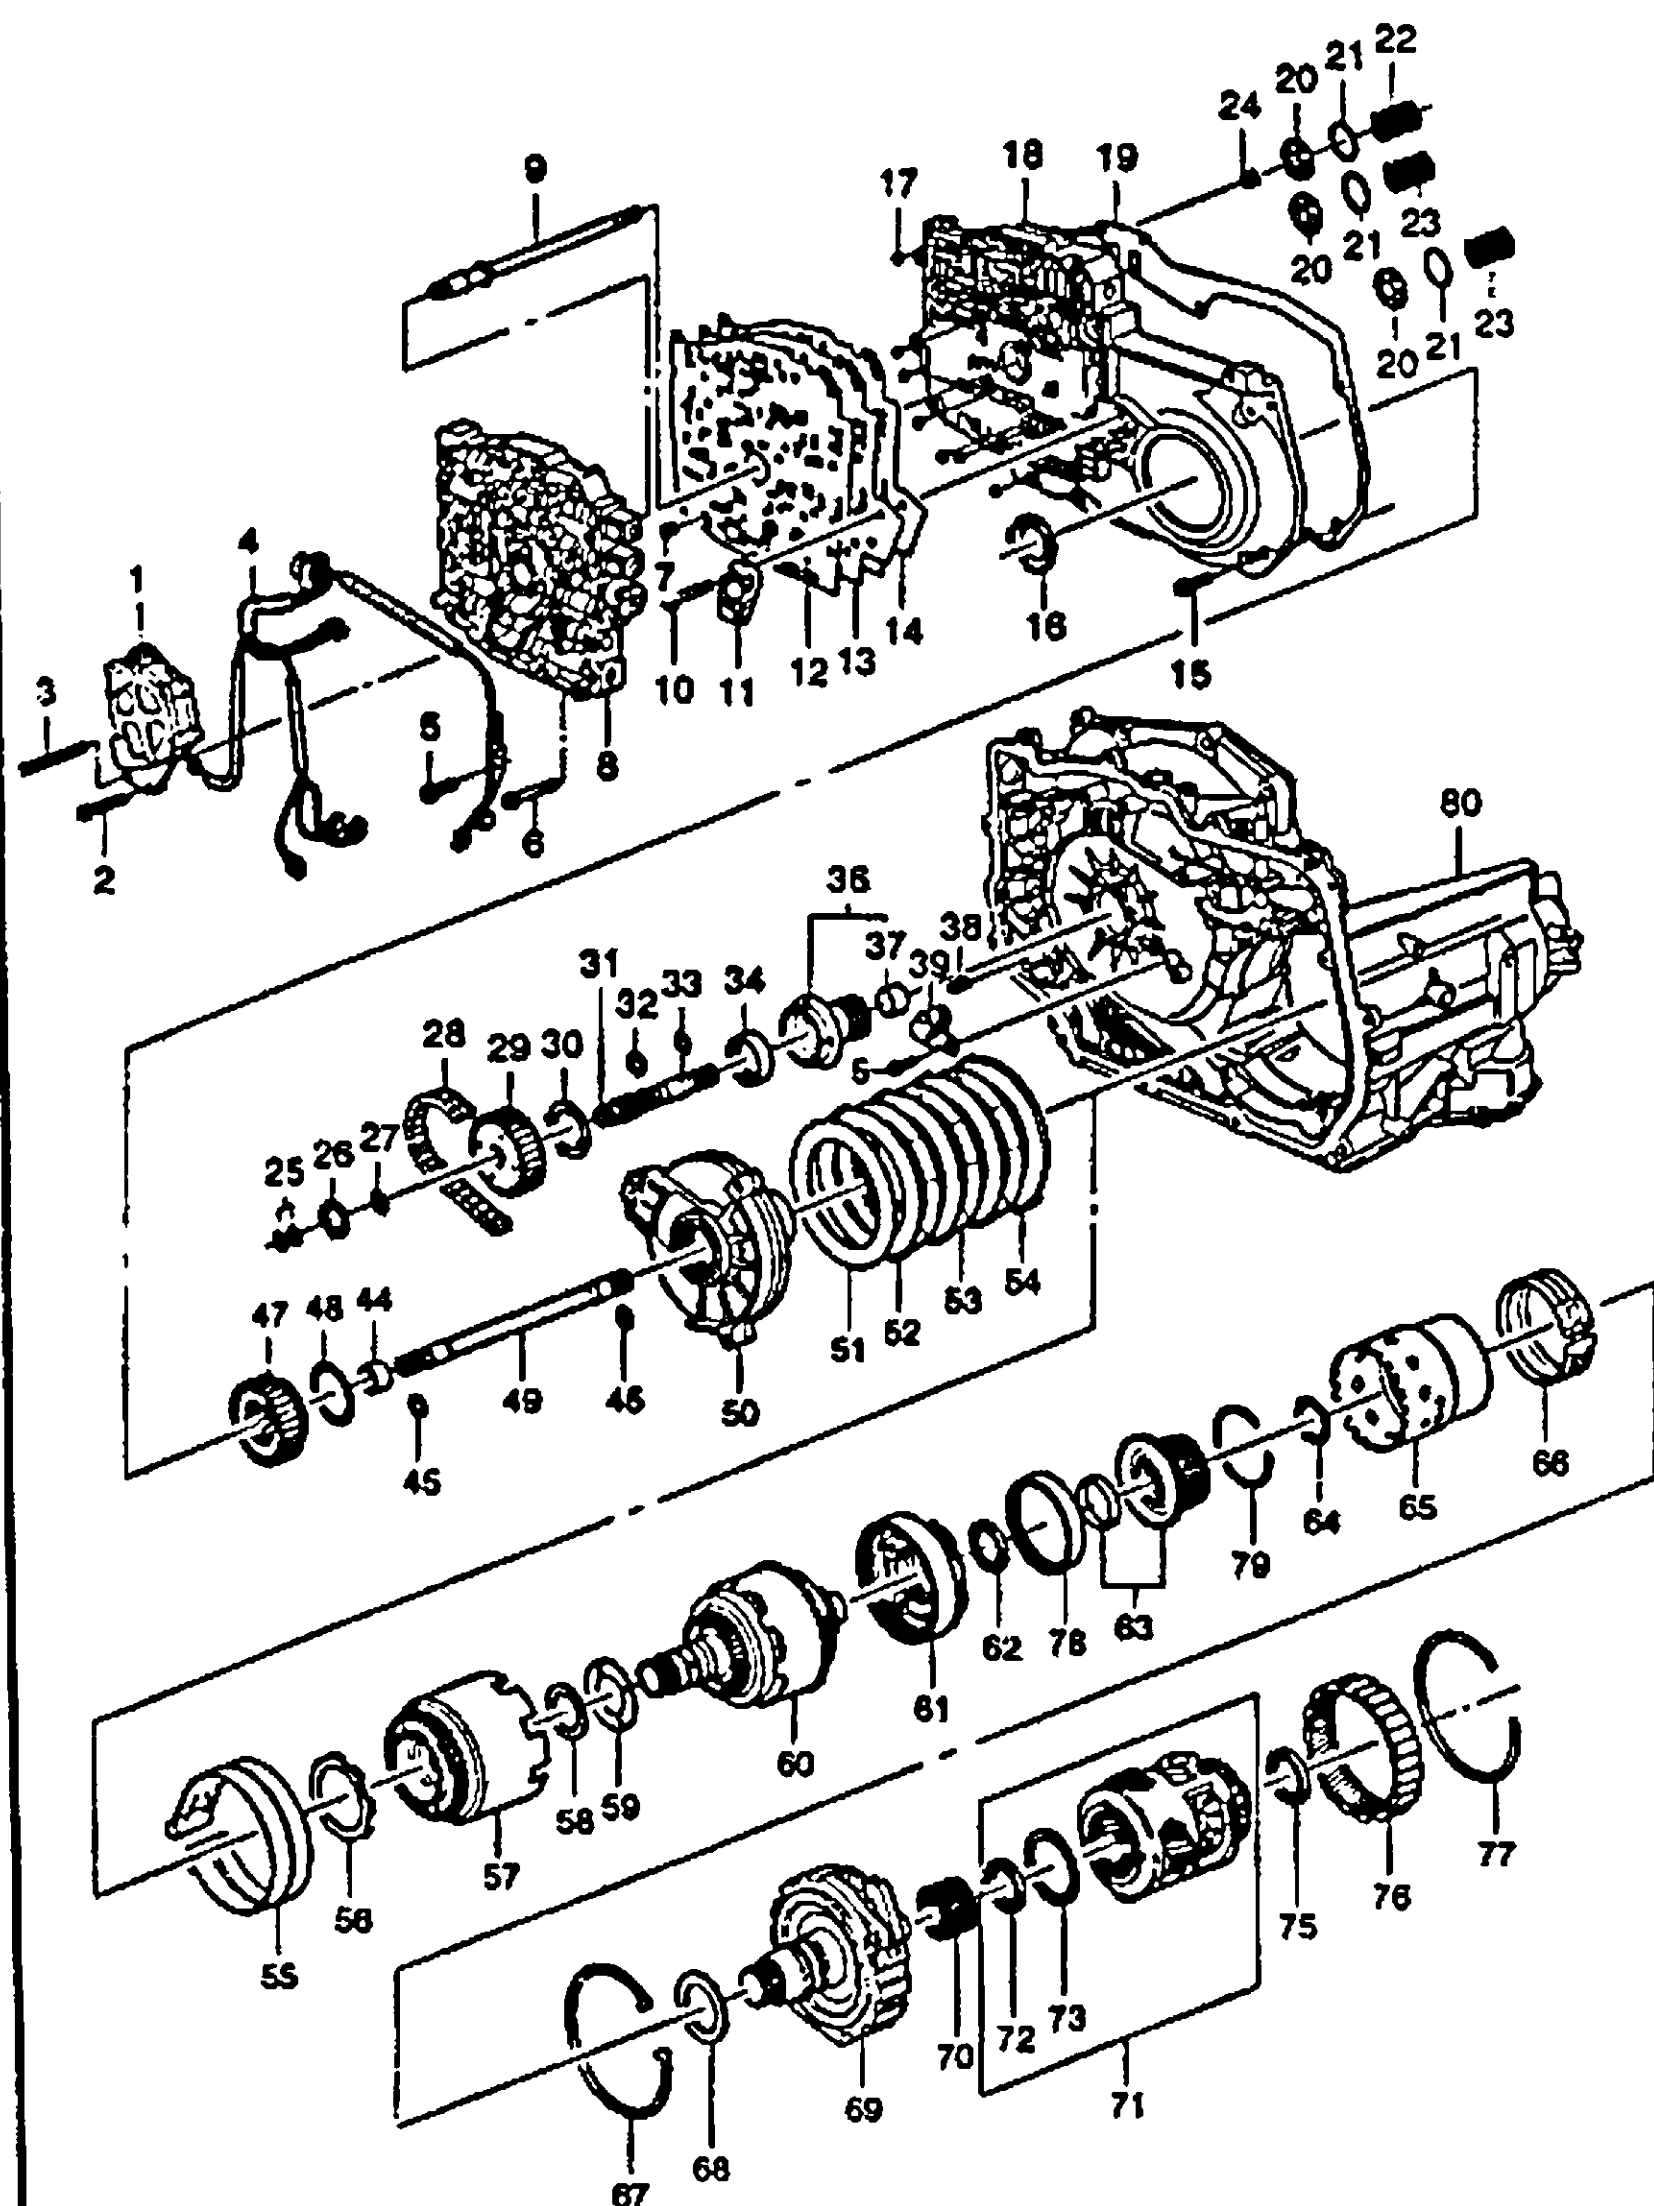


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S				S	S		
											FROM	TO		
	[01]	(E)PUMP-OIL (D)PUMPE,ÖL								(F)POMPE-HUILE (S)BOMBA-ACEITE				
	24208987	. A B B B O O O								1				
	[02]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO				
	24200209	. A B B B O O O								4			M8X1.25X58mm	
	[03]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO				
	24200208	. A B B B O O O								3			M6X1.0X99mm	
	[04]	(E)WIRING (D)VERDRAHTUNG								(F)CABLAGE (S)INSTALACION ELECTRICA				
	15302843	. A B B B O O O								1				
	[05]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO				
	24200093	. A B B B O O O								2			M8X1.0X11mm	
	[06]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO				
	24200206	. A B B B O O O								9			M6X1.0X47mm	
	[07]	(E)FILTER A-OIL (D)FILTER								(F)FILTRE (S)FILTRO				
	08683769	. A B B B O O O								1				
	[08]	(E)BODY A-CONTROL VALVE (D)KAROSSERIE								(F)CORPS-SOUPAPE (S)CARROCERIA-VALVULA				
	24209128	. A B B B O O O								1				
	[09]	(E)SHAFT-OIL PUMP DRIVE (D)SPINDEL								(F)ARBRE (S)EJE				
	08684255	. A B B B O O O								1				
	[10]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO				
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

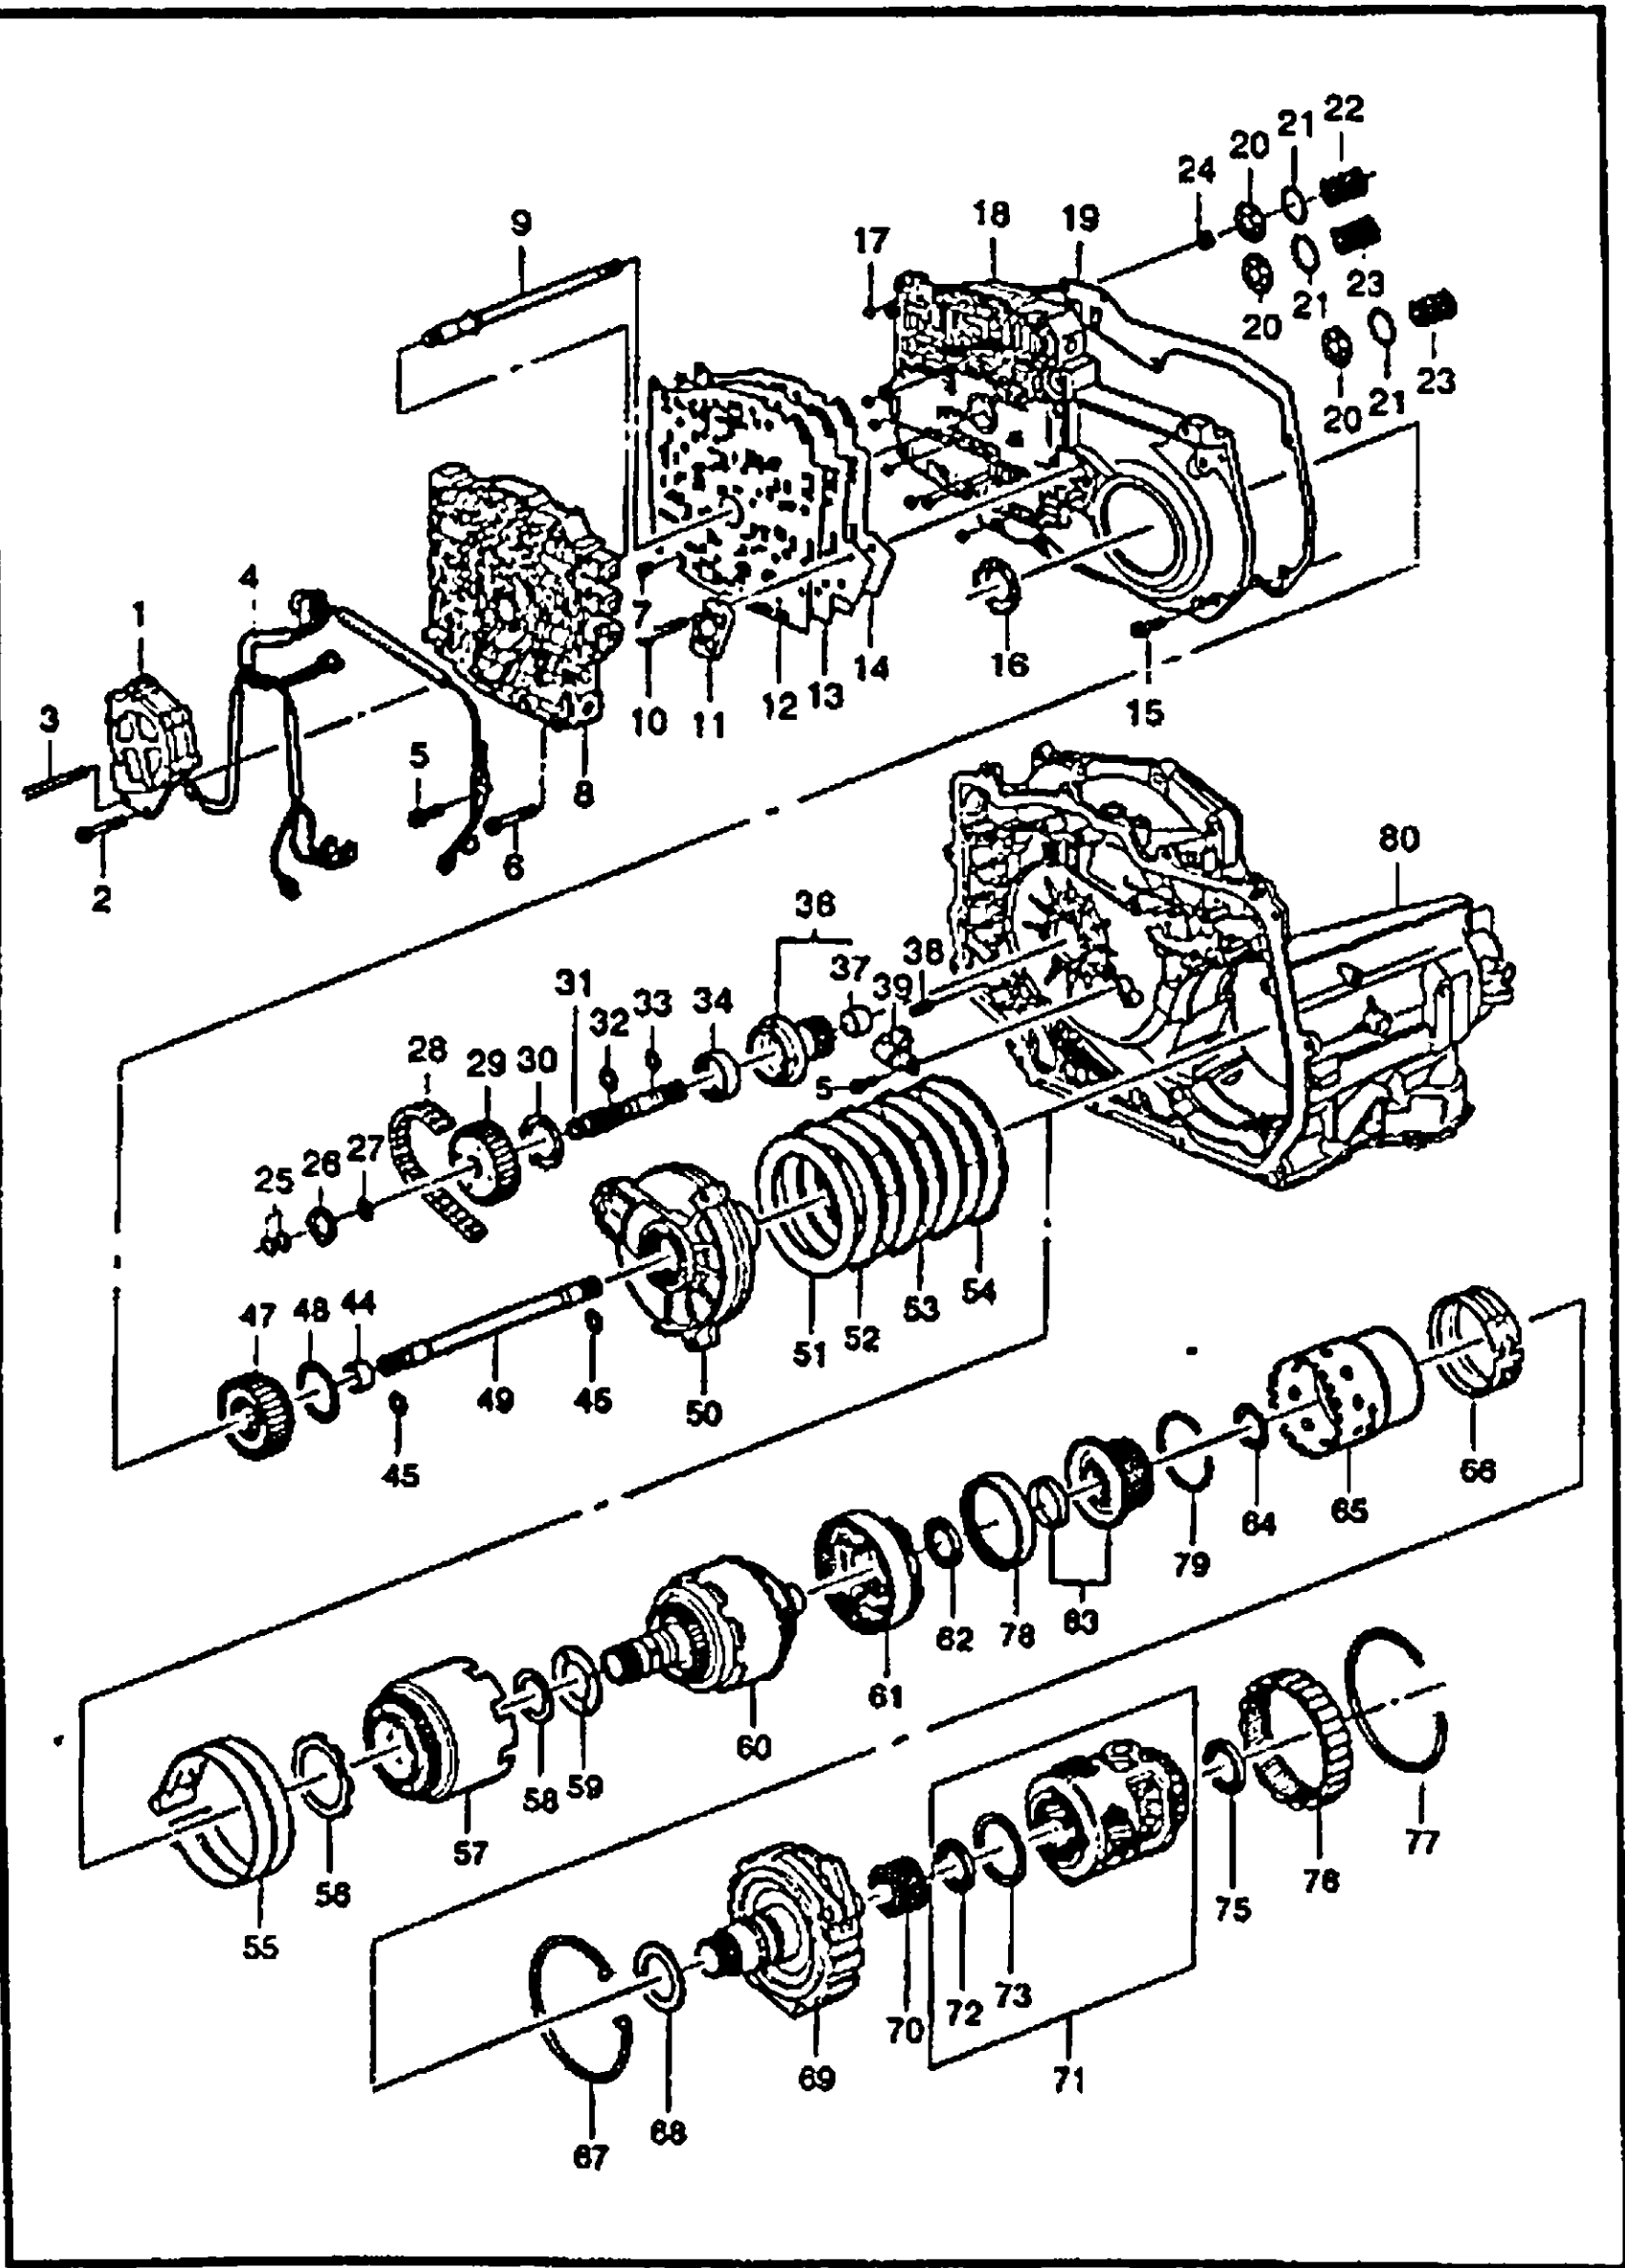


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N H	3 H	5 H	S								S S
	24200214	.	A	B	B	B	O	O	O		2		M6X1.0X64mm		
	[11]	(E)	SUPPORT	SPACER PLATE						(F)	SUPPORT				
		(D)	TRÄGER							(S)	SOPORTE				
	08685213	.	A	B	B	B	O	O	O		1				
	[12]	(E)	GASKET-VALVE BODY							(F)	JOINT				
		(D)	DICHTUNG							(S)	JUNTA				
	24207387	.	A	B	B	B	O	O	O		1				
	[13]	(E)	PLATE-VALVE BODY SPACER							(F)	PLAQUE				
		(D)	PLATTE							(S)	PLACA				
	24205050	.	A	B	B	B	O	O	O		1				
	[14]	(E)	GASKET-VALVE BODY							(F)	JOINT				
		(D)	DICHTUNG							(S)	JUNTA				
	24207386	.	A	B	B	B	O	O	O		1				
	[15]	(E)	BOLT							(F)	BOULON				
		(D)	SCHRAUBE							(S)	PERNO				
	24200207	.	A	B	B	B	O	O	O		14		M6X1.0X24mm		
	[16]	(E)	WASHER-DRIVEN SPROC.THRU.							(F)	RONDELLE				
		(D)	DICHTUNGSRING							(S)	ARANDELA				
	08684379	.	A	B	B	B	O	O	O		1				
	[17]	(E)	BALL-CHECK							(F)	BOULE				
		(D)	KUGEL							(S)	BOLA				
	00147485	.	A	B	B	B	O	O	O		7				
	[18]	(E)	PLATE-CHNNEL							(F)	PLAQUE				
		(D)	PLATTE							(S)	PLACA				
	24208110	.	A	B	B	B	O	O	O		1				
	[19]	(E)	GASKET-CHNNEL PLATE							(F)	JOINT				
		(D)	DICHTUNG							(S)	JUNTA				
	24201096	.	A	B	B	B	O	O	O		1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 8 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

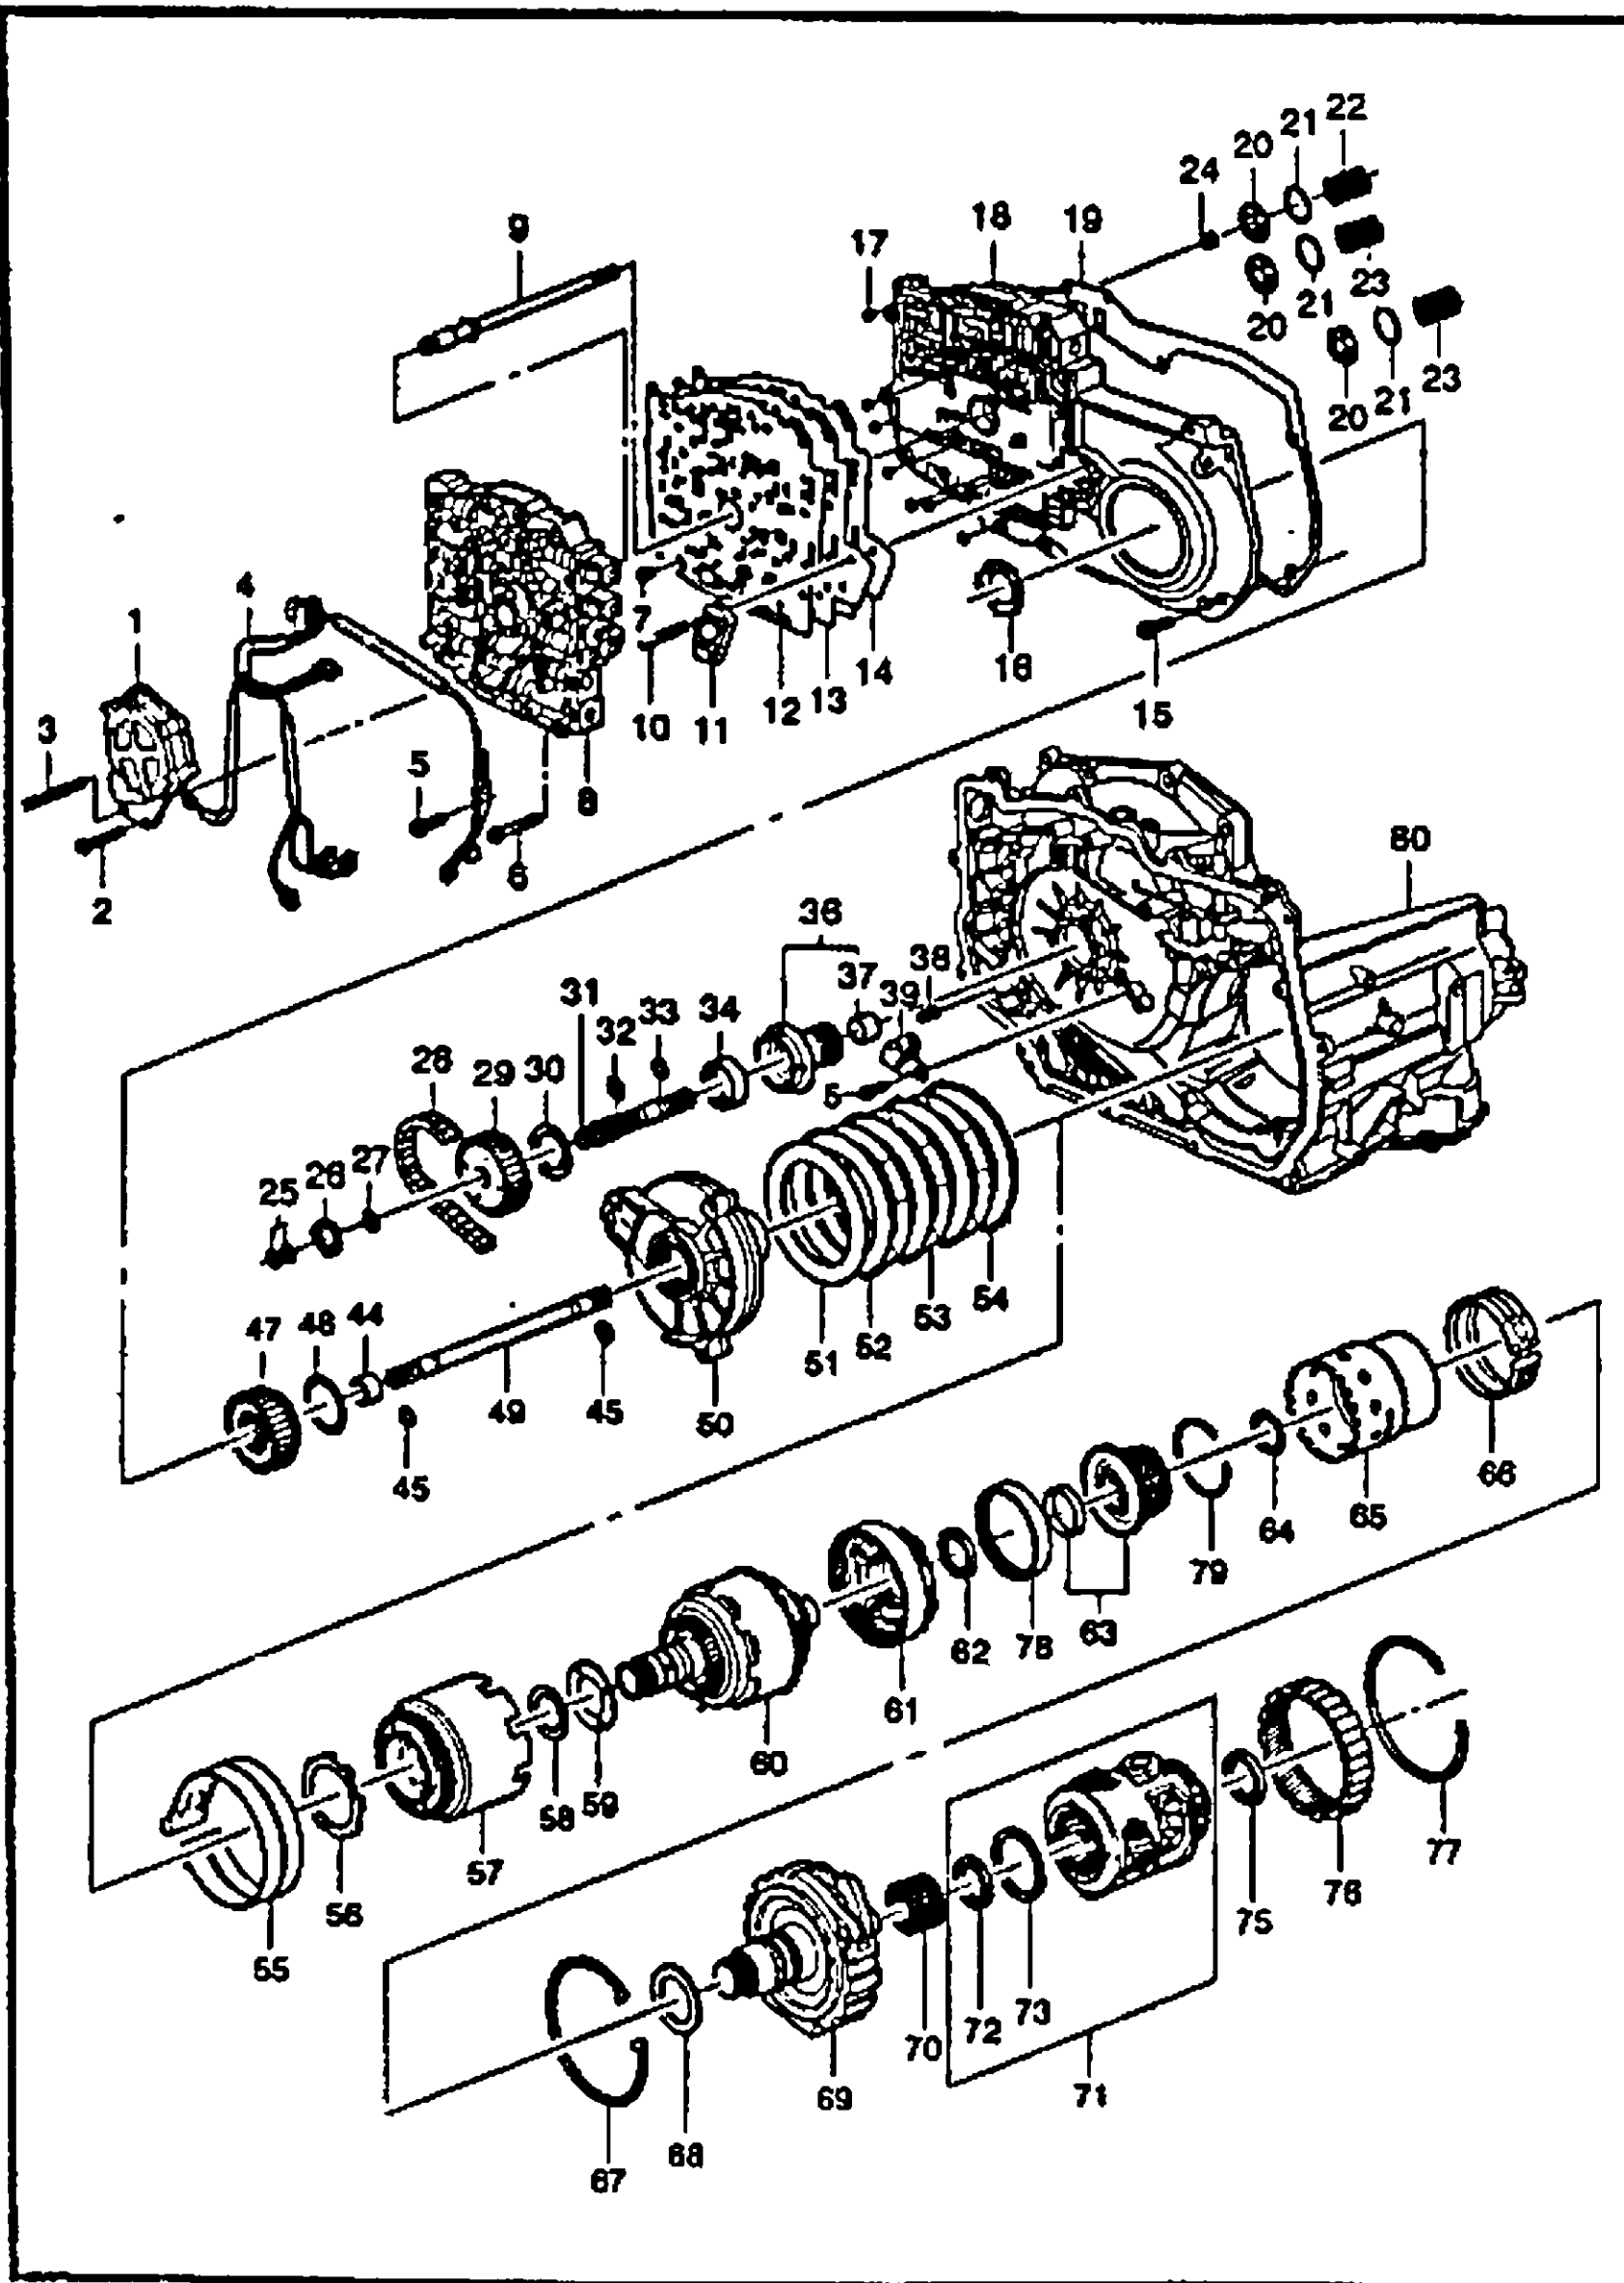

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[20]	(E)PISTON-ACCUMULATOR (D)KOLBEN								(F)PISTON (S)PISTON					
	24210508	. A B B B O O O								3					
	[21]	(E)SEAL-ACCUM PISTON (D)DICHTUNG								(F)JOINT (S)SELLO					
	24206623	. A B B B O O O								3					
	[22]	(E)SPRING (D)FEDERUNG								(F)RESSORT (S)RESORTE					
	08685241	. A B B B O O O								1					
	[23]	(E)SPRING (D)FEDERUNG								(F)RESSORT (S)RESORTE					
	08685240	. A B B B O O O								2					
	[24]	(E)SPRING (D)FEDERUNG								(F)RESSORT (S)RESORTE					
	24203557	. A B B B O O O								2					
	[25]	(E)SEAL (D)DICHTUNG								(F)JOINT (S)SELLO					
	08643068	. A B B B O O O								2					
	[26]	(E)WASHER-THRUST (D)DICHTUNGSRING								(F)RONDELLE (S)ARANDELA					
	08652868	. A B B B O O O								1					
	[27]	(E)RING-SNAP (D)RING								(F)ANNEAU (S)ANILLO					
	08631210	. A B B B O O O								1					
	[28]	(E)LINK A-DRIVE (D)KETTE								(F)CHAINE (S)CADENA					
	24200738	. A B B B O O O								1					
	[29]	(E)SPROCKET-DRIVE (D)ZAHNKETTENRAD								(F)ENGRENAGE (S)RUEDA DE ESPIGAS					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

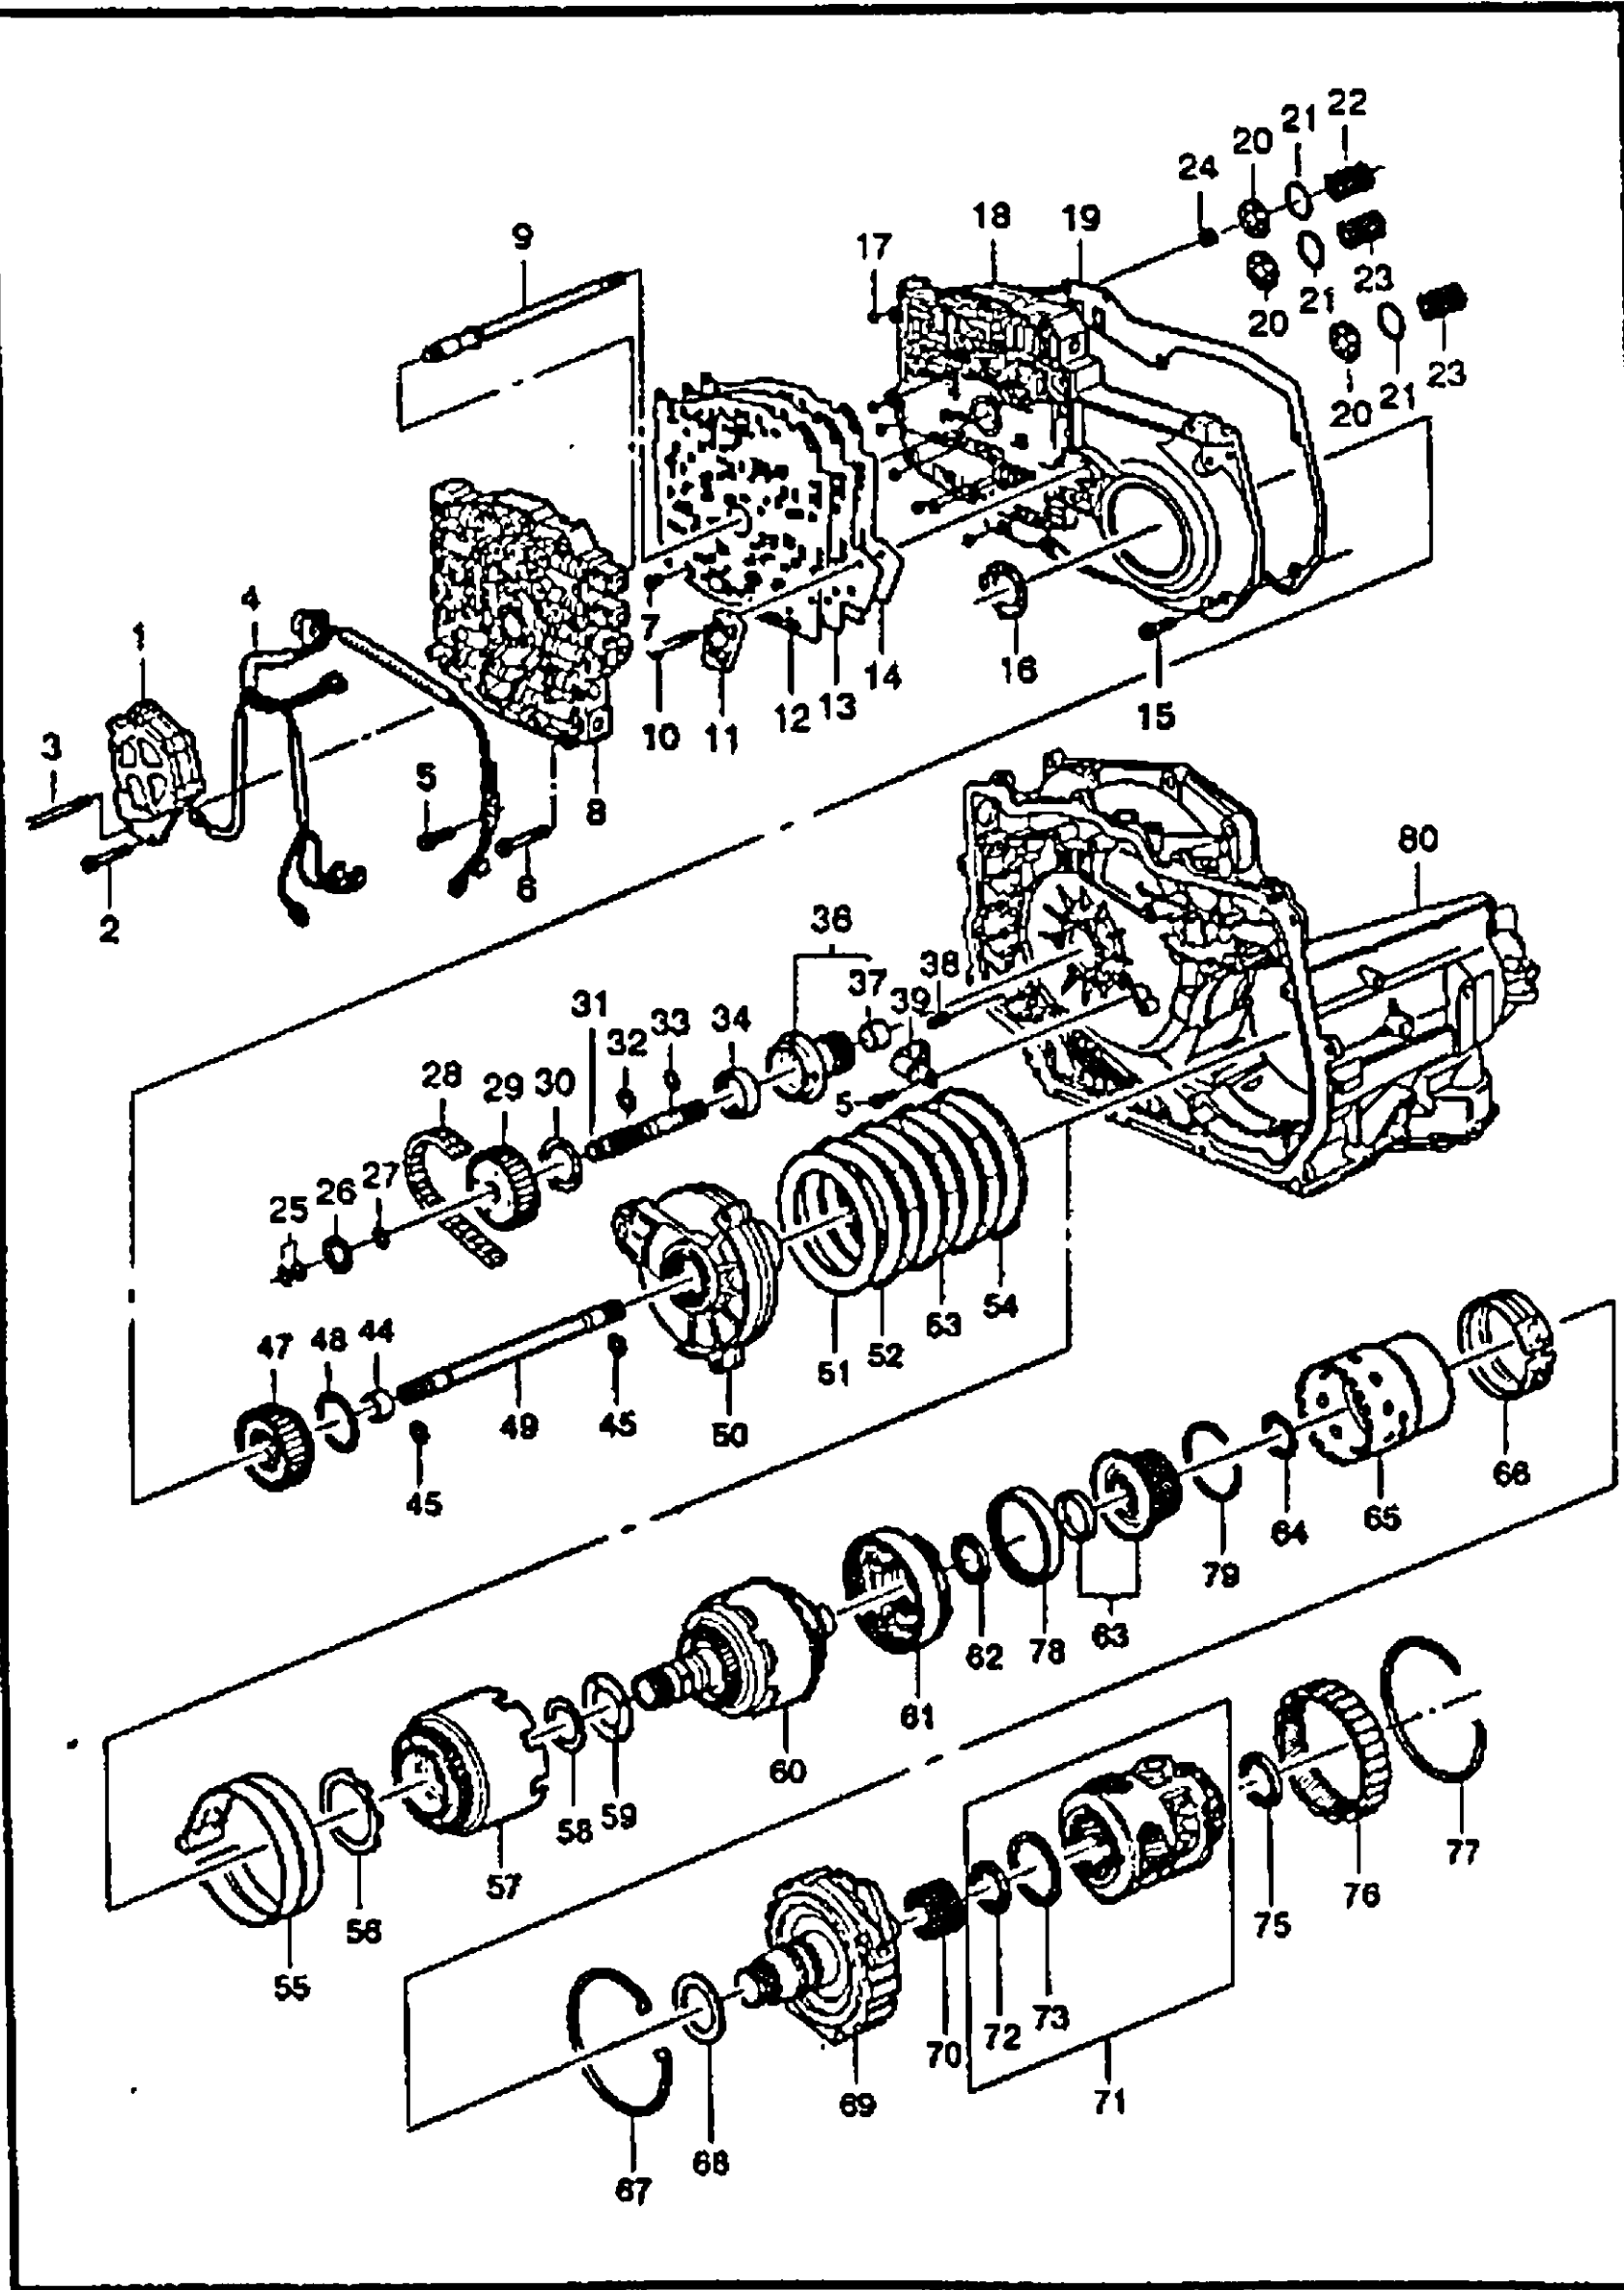


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	24204709	.	A	B	B	B	O	O	O		1					
	[30]										(F)RONDELLE (S)ARANDELA					
	08652841	.	A	B	B	B	O	O	O		1					
	[31]										(F)ARBRE (S)EJE					
	08652382	.	A	B	B	B	O	O	O		1					
	[32]										(F)JOINT (S)SELLO					
	08637170	.	A	B	B	B	O	O	O		1					
	[33]										(F)JOINT (S)SELLO					
	08677453	.	A	B	B	B	O	O	O		1					
	[34]										(F)ROULEMENT (S)COJINET					
	24205179	.	A	B	B	B	O	O	O		1					
	[36]										(F)SUPPORT (S)SOPORTE					
	08685660	.	A	B	B	B	O	O	O		1					
	[37]										(F)MANCHON (S)BUJE					
	08628047	.	A	B	B	B	O	O	O		1					
	[38]										(F)BROCHE (S)PASADOR					
	08685132	.	A	B	B	B	O	O	O		4					
	[39]										(F)DETECTEUR (S)SENSOR					
	10456545	.	A	B	B	B	O	O	O		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

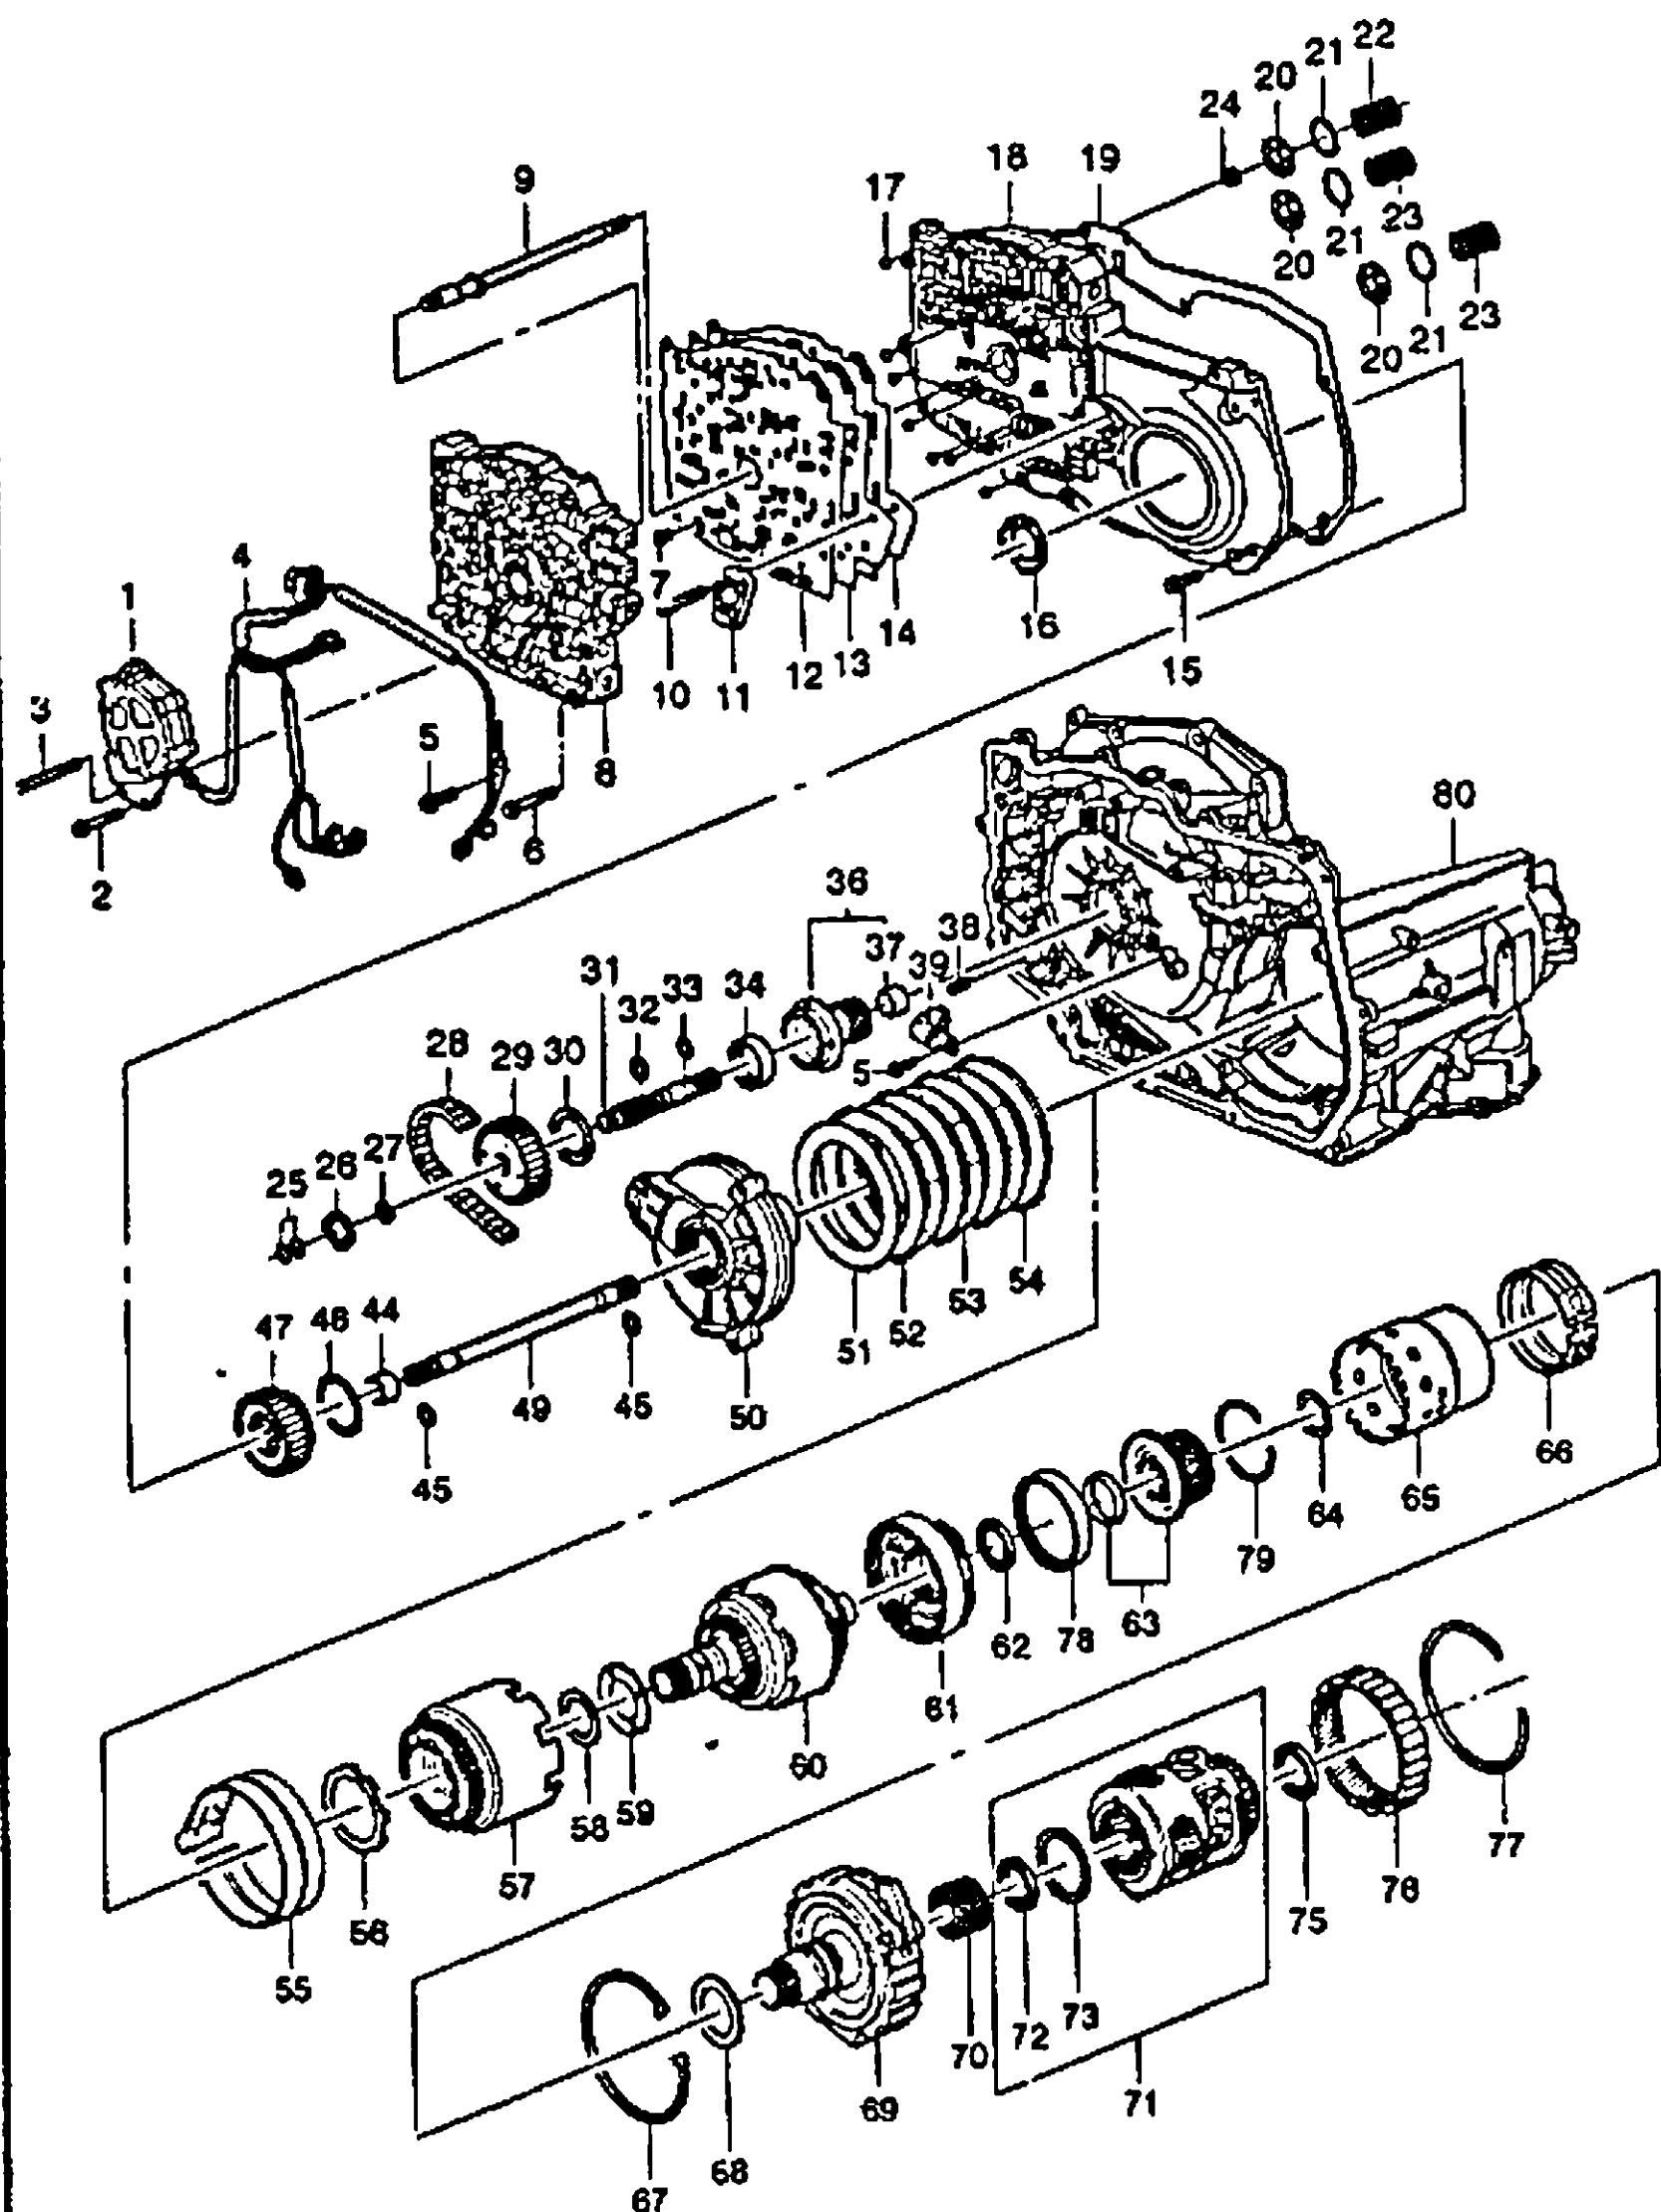


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S X
	[44] 08684482	(E)SLEEVE-OUTPUT/STUB SHAFT (D)HÖLSE . A B B B O O O							(F)CHEMISE (S)MANGA 1						
	[45] 07829495	(E)RING-OUTPUT/STUB SHAFT (D)RING . A B B B O O O							(F)ANNEAU (S)ANILLO 2						
	[47] 24204714	(E)SPROCKET-DRIVEN (D)ZAHNKETTENRAD . A B B B O O O							(F)ENGRENAGE (S)RUEDA DE ESPIGAS 1						
	[48] 08637227	(E)WASHER-THRUST (D)DICHTUNGSRING . A B B B O O O							(F)RONDELLE (S)ARANDELA 1						
	[49] 24200733	(E)SHAFT-OUTPUT (D)SPINDEL . A B B B O O O							(F)ARBRE (S)EJE 1						
	[50]	REFER GROUP #3550													
	[51] 24200298	(E)PLATE-DISC CLUTCH (D)PLATTE,SCHLEIBEN-KUPPLUNG . A B B B O O O							(F)PLAQUE-EMBRAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO 1						
	[52] 24200790	(E)PLATE-DISC CLUTCH (D)PLATTE,SCHLEIBEN-KUPPLUNG . A B B B O O O							(F)PLAQUE-EMBRAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO 3						
	[53] 08684322	(E)PLATE-DISC CLUTCH (D)PLATTE,SCHLEIBEN-KUPPLUNG . A B B B O O O							(F)PLAQUE-EMBRAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO 3						
	[54]	(E)PLATE-DISC CLUTCH (D)PLATTE,SCHLEIBEN-KUPPLUNG							(F)PLAQUE-EMBRAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO						
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

3521 INTERNAL POWER TRAIN PARTS


4J07

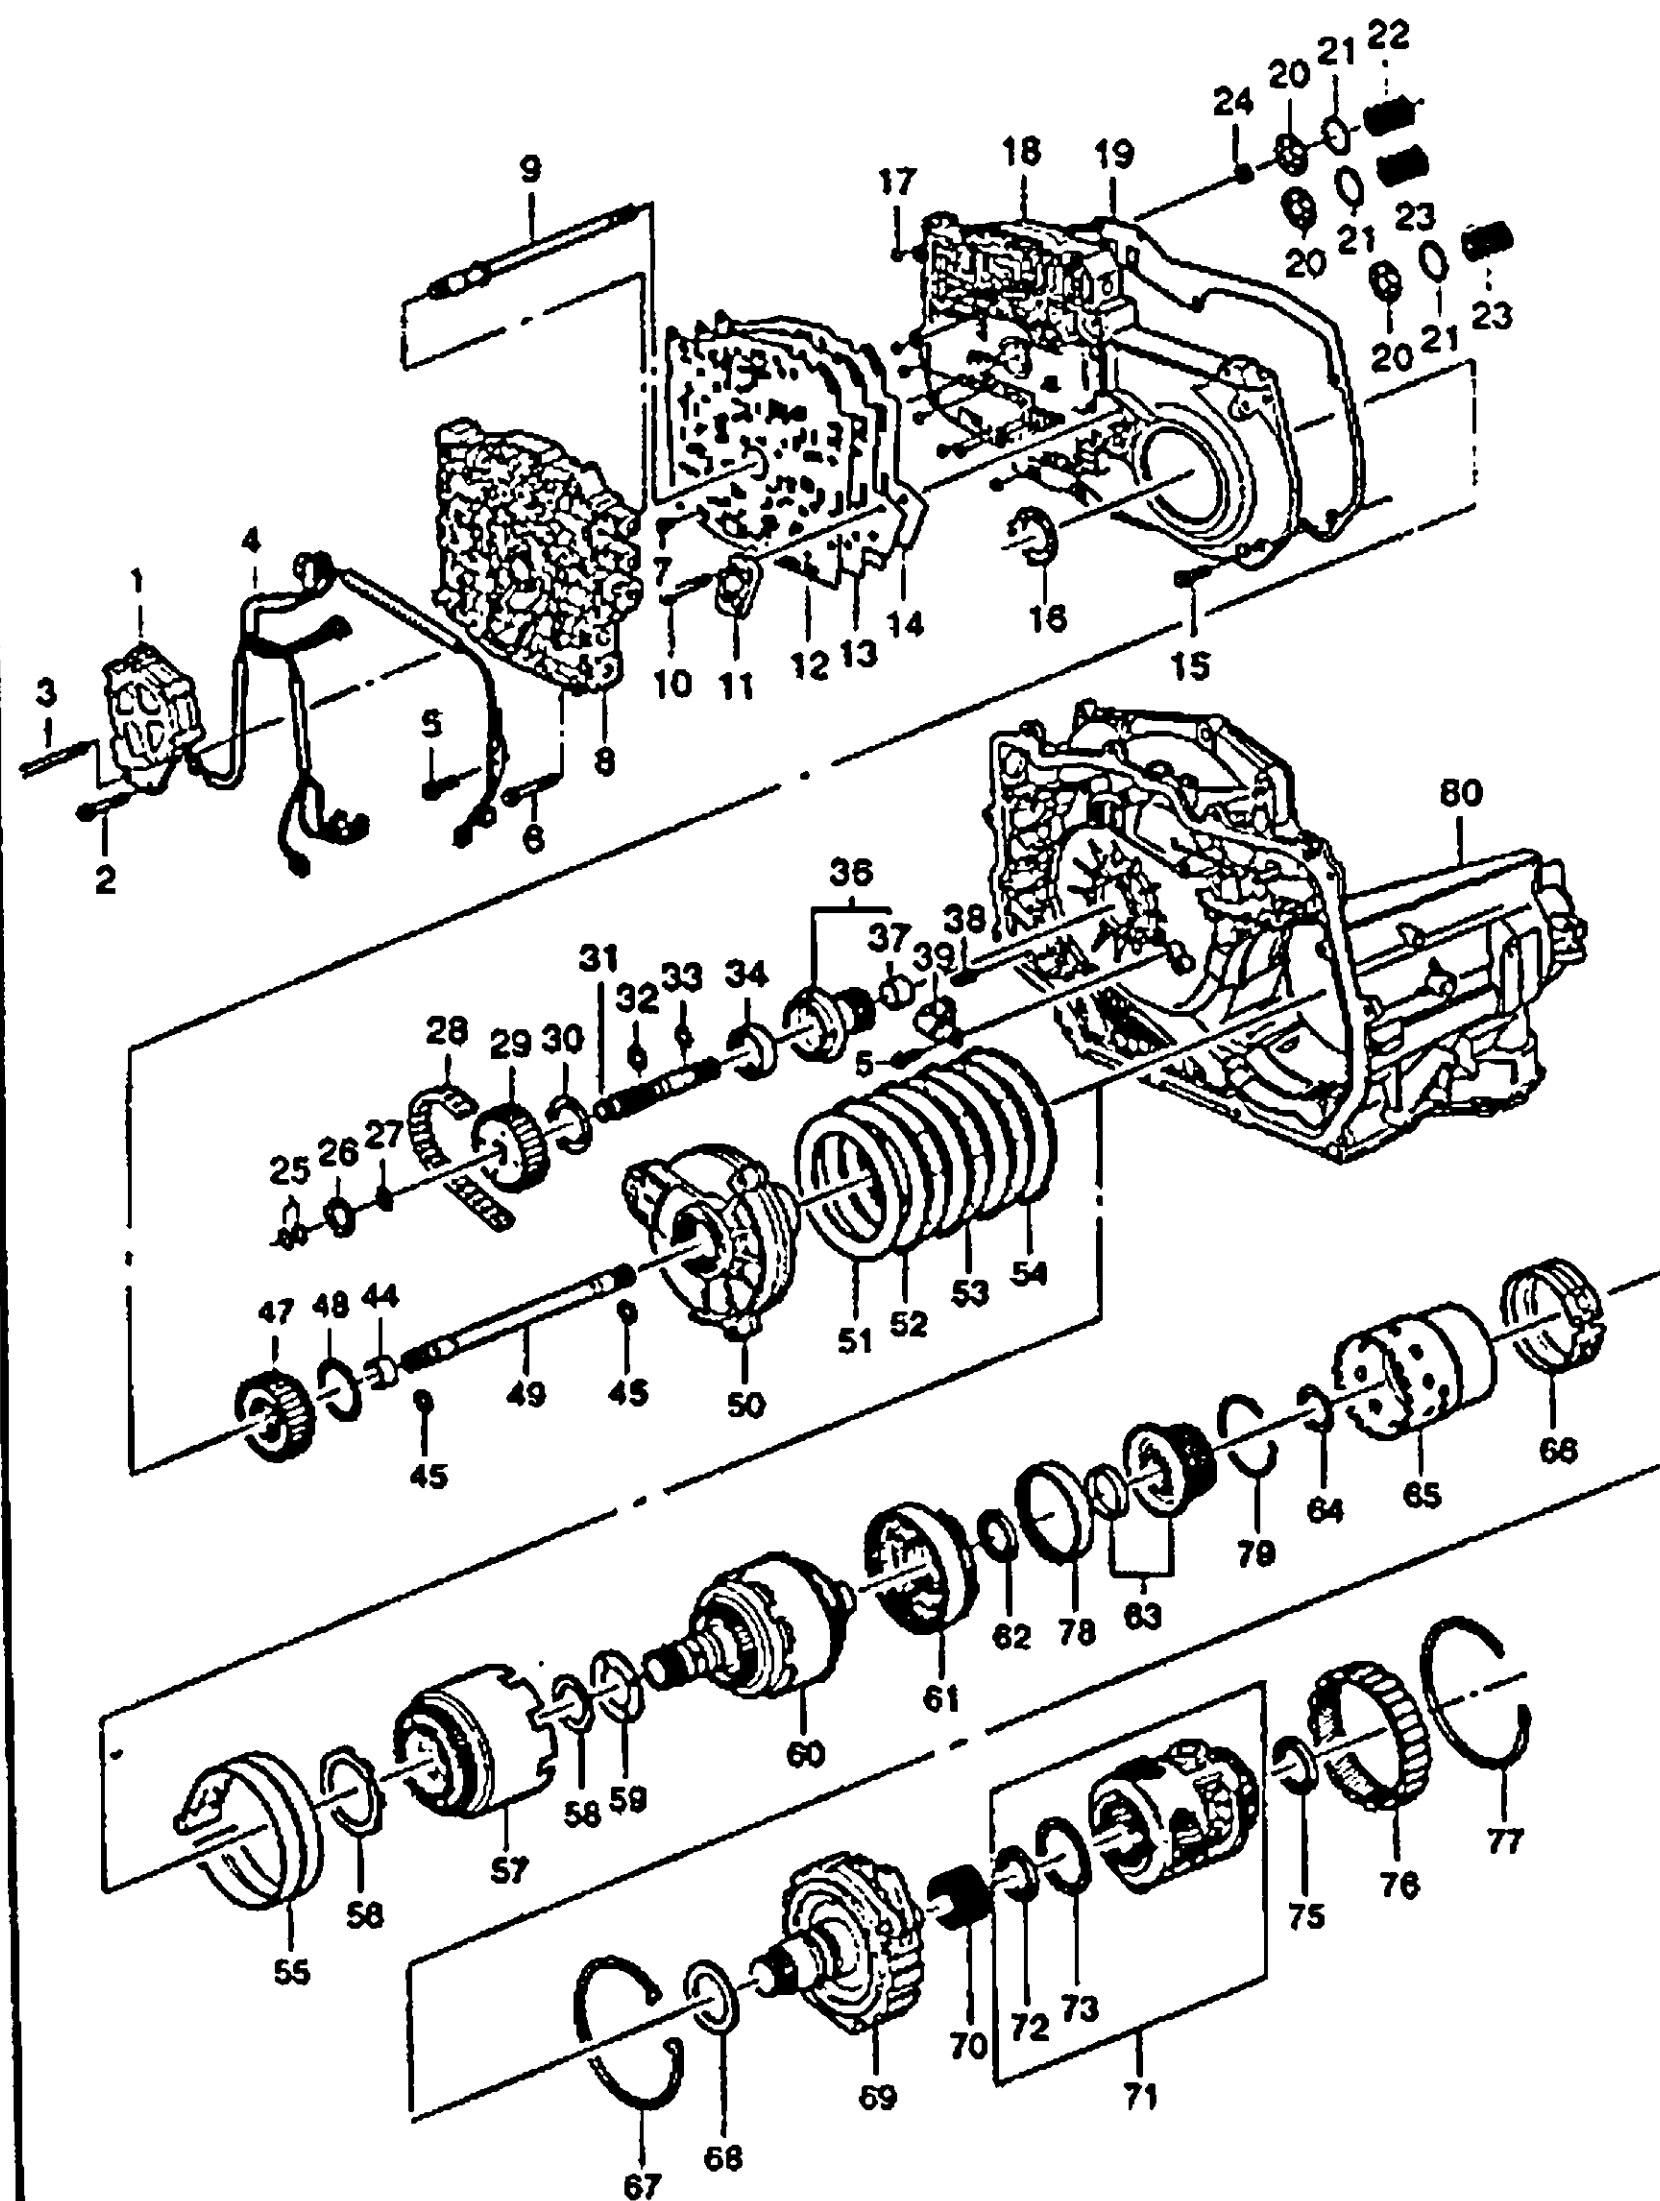


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	08684324	.	A	B	B	B	O	O	O		1				
	[55]		(E)BAND-INTERMEDIATE/4TH								(F)BANDE				
	08684403	.	A	B	B	B	O	O	O		1				
	[56]		(E)WASHER-THRUST								(F)RONDELLE				
	08684259	.	A	B	B	B	O	O	O		1				
	[57]														
			REFER GROUP #3530												
	[58]		(E)BEARING-THRUST								(F)ROULEMENT				
	24200249	.	A	B	B	B	O	O	O		1				
	[59]		(E)WASHER-THRUST (SELECTIVE)								(F)RONDELLE				
	08684469	.	A	B	B	B	O	O	O		1		BROWN		
		.	A	B	B	B	O	O	O				(SIZE1.50-1.60)		
	08684470	.	A	B	B	B	O	O	O		1		GRAY		
		.	A	B	B	B	O	O	O				(SIZE1.79-1.89)		
	08684471	.	A	B	B	B	O	O	O		1		NATURAL		
		.	A	B	B	B	O	O	O				(SIZE2.09-2.19)		
	08684472	.	A	B	B	B	O	O	O		1		BLACK		
		.	A	B	B	B	O	O	O				(SIZE2.39-2.49)		
	08684473	.	A	B	B	B	O	O	O		1		ORANGE		
		.	A	B	B	B	O	O	O				(SIZE2.68-2.78)		
	08684474	.	A	B	B	B	O	O	O		1		VIOLET		
		.	A	B	B	B	O	O	O						
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

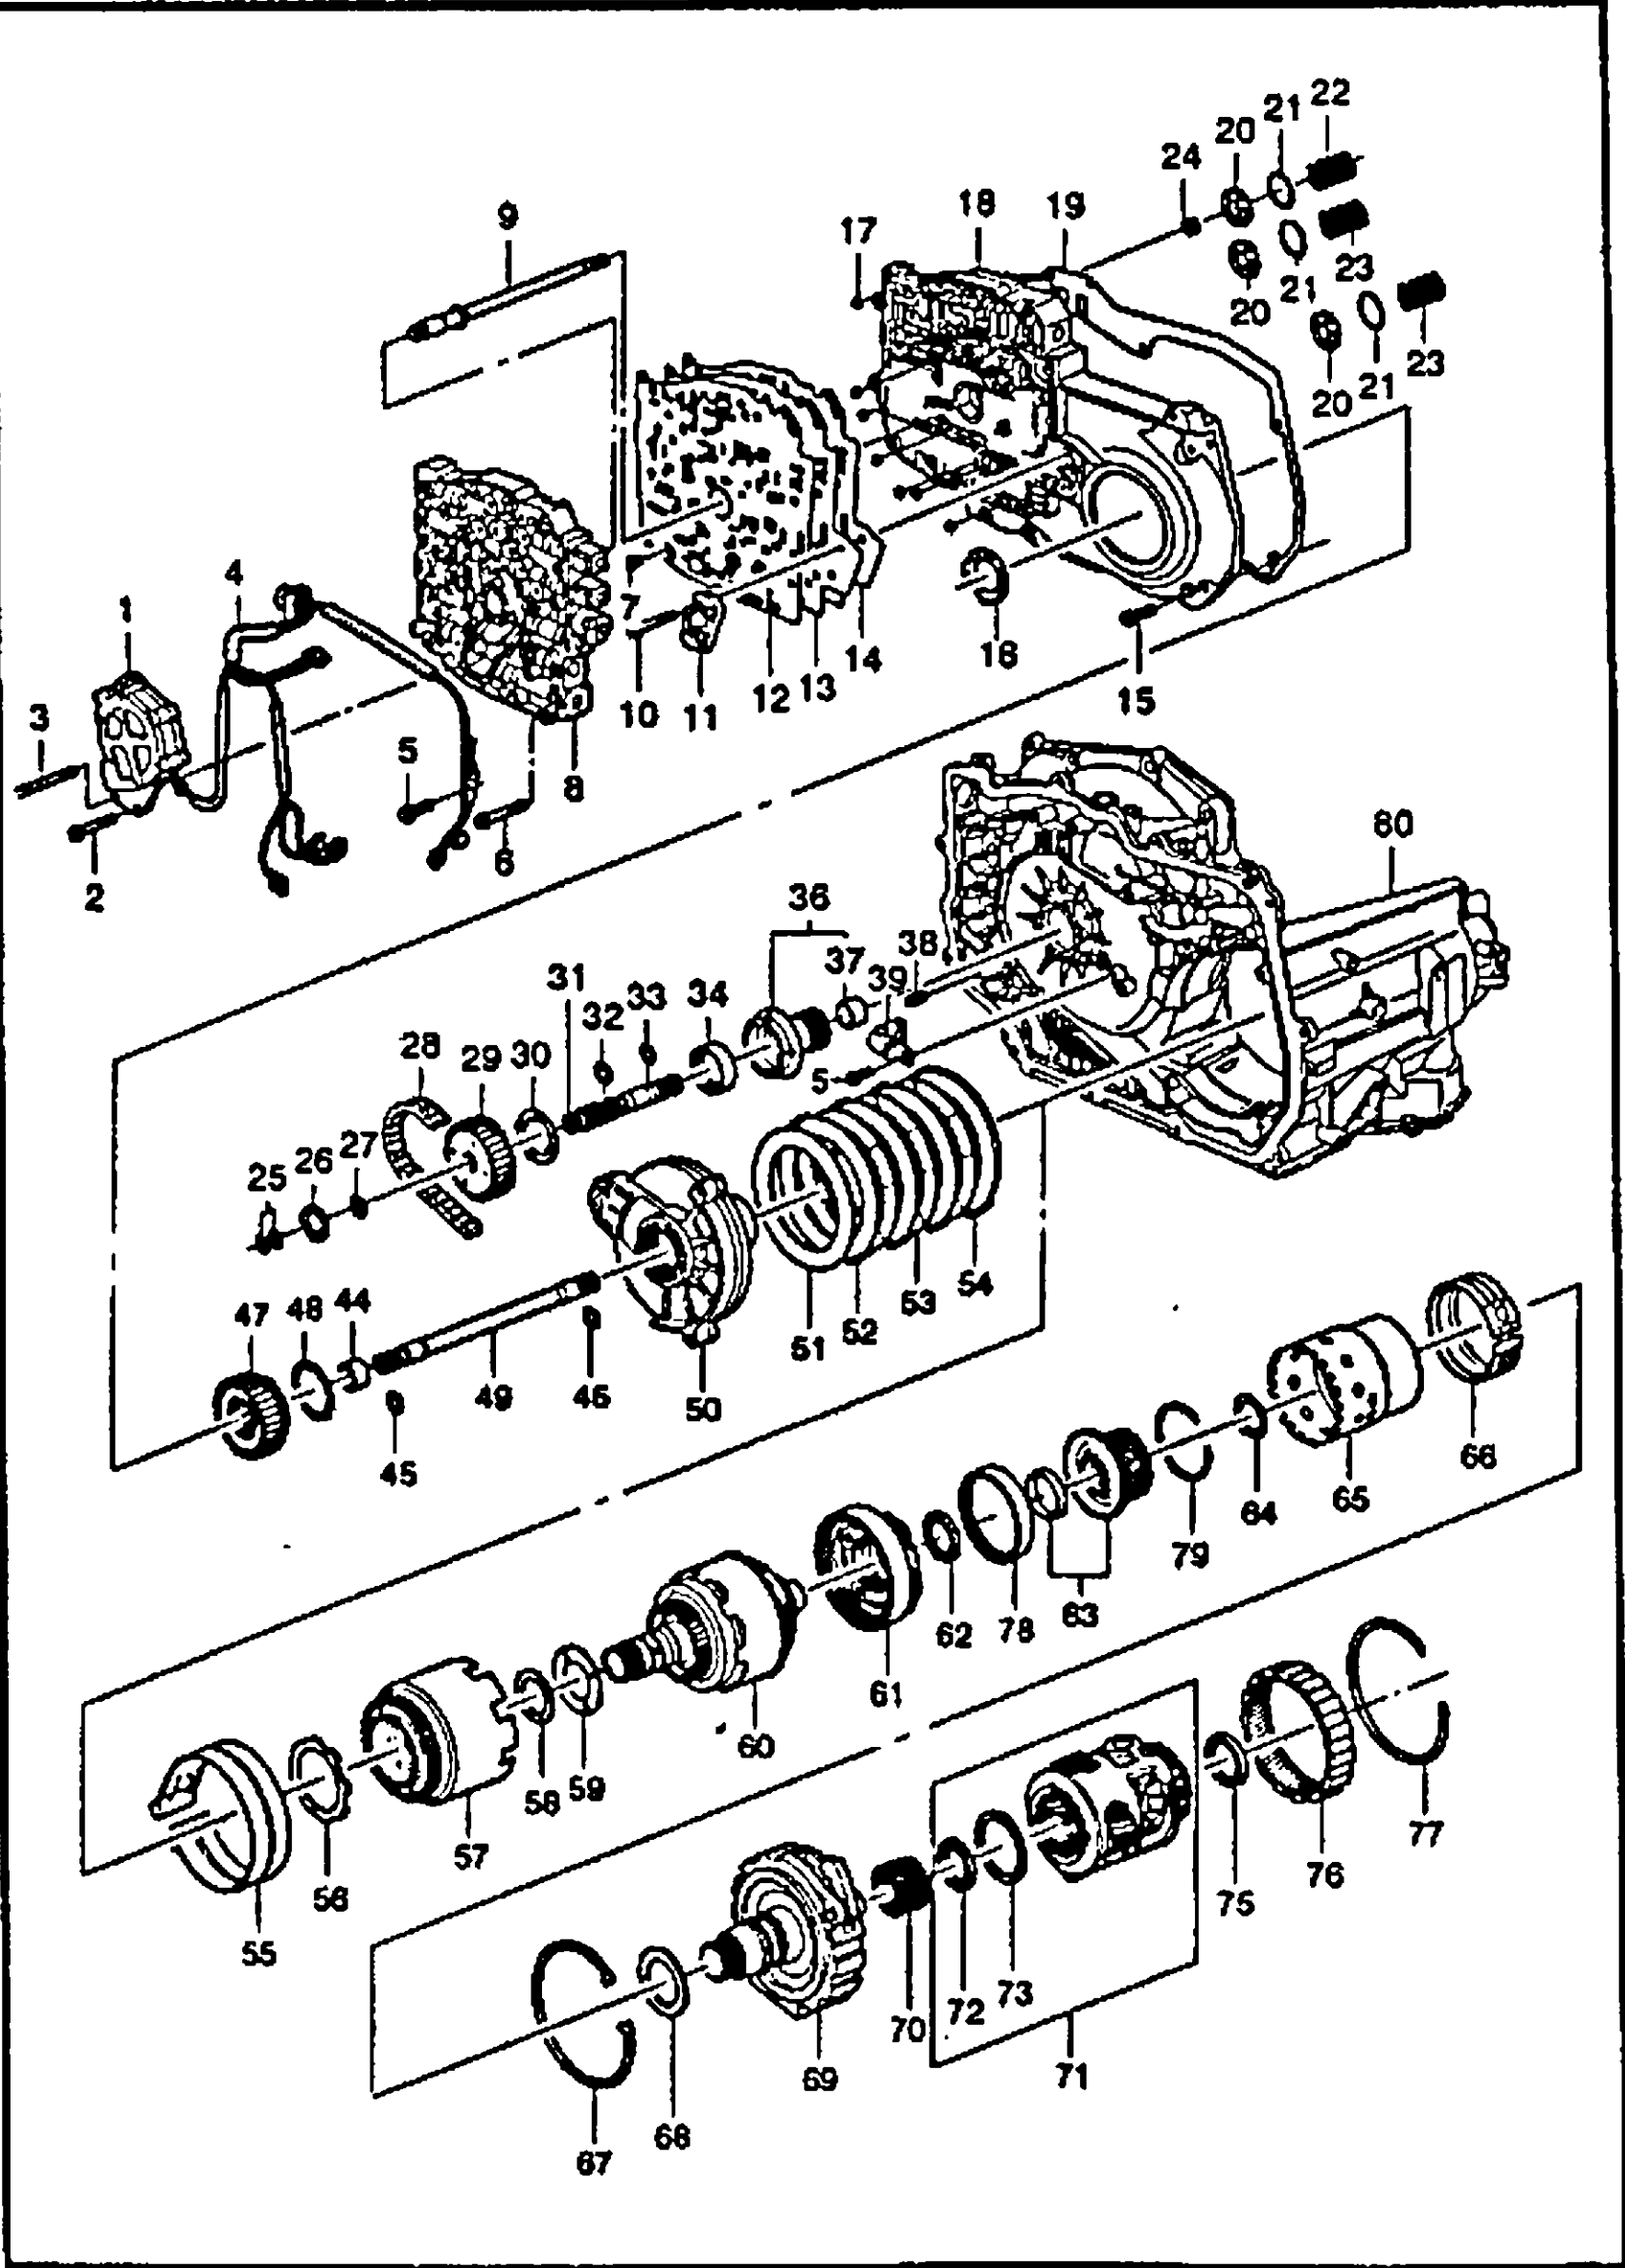

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	08684475	.	A	B	B	B	O	O	O		1		(SIZE2.98-3.08) YELLOW			
	08684476	.	A	B	B	B	O	O	O		1		(SIZE2.98-3.08) RED			
	08684477	.	A	B	B	B	O	O	O		1		(SIZE3.57-3.67) GREEN			
	[60]												(SIZE3.87-3.97)			
	[61]		REFER GROUP #3531 (E)CARRIER-INPUT(W/REACTION) (D)GETRIEBE									(F)ENGRENAGE (S)ENGRANAJE				
	24207008	.	A	B	B	B	O	O	O		1					
	[62]		(E)BEARING-THRUST (D)KUGELLAGER									(F)ROULEMENT (S)COJINET				
	08644206	.	A	B	B	B	O	O	O		1					
	[63]		(E)FLANGE-INPUT CARR (D)FLANSCH									(F)FLASQUE (S)PESTAÑA				
	24202220												NOT APPLIED			
	24202221	.	A	B	B	B	O	O	O		1					
	[64]		(E)WASHER-THRUST (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA				
	08685039	.	A	B	B	B	O	O	O		1					
	[65]		REFER GROUP #3533													
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

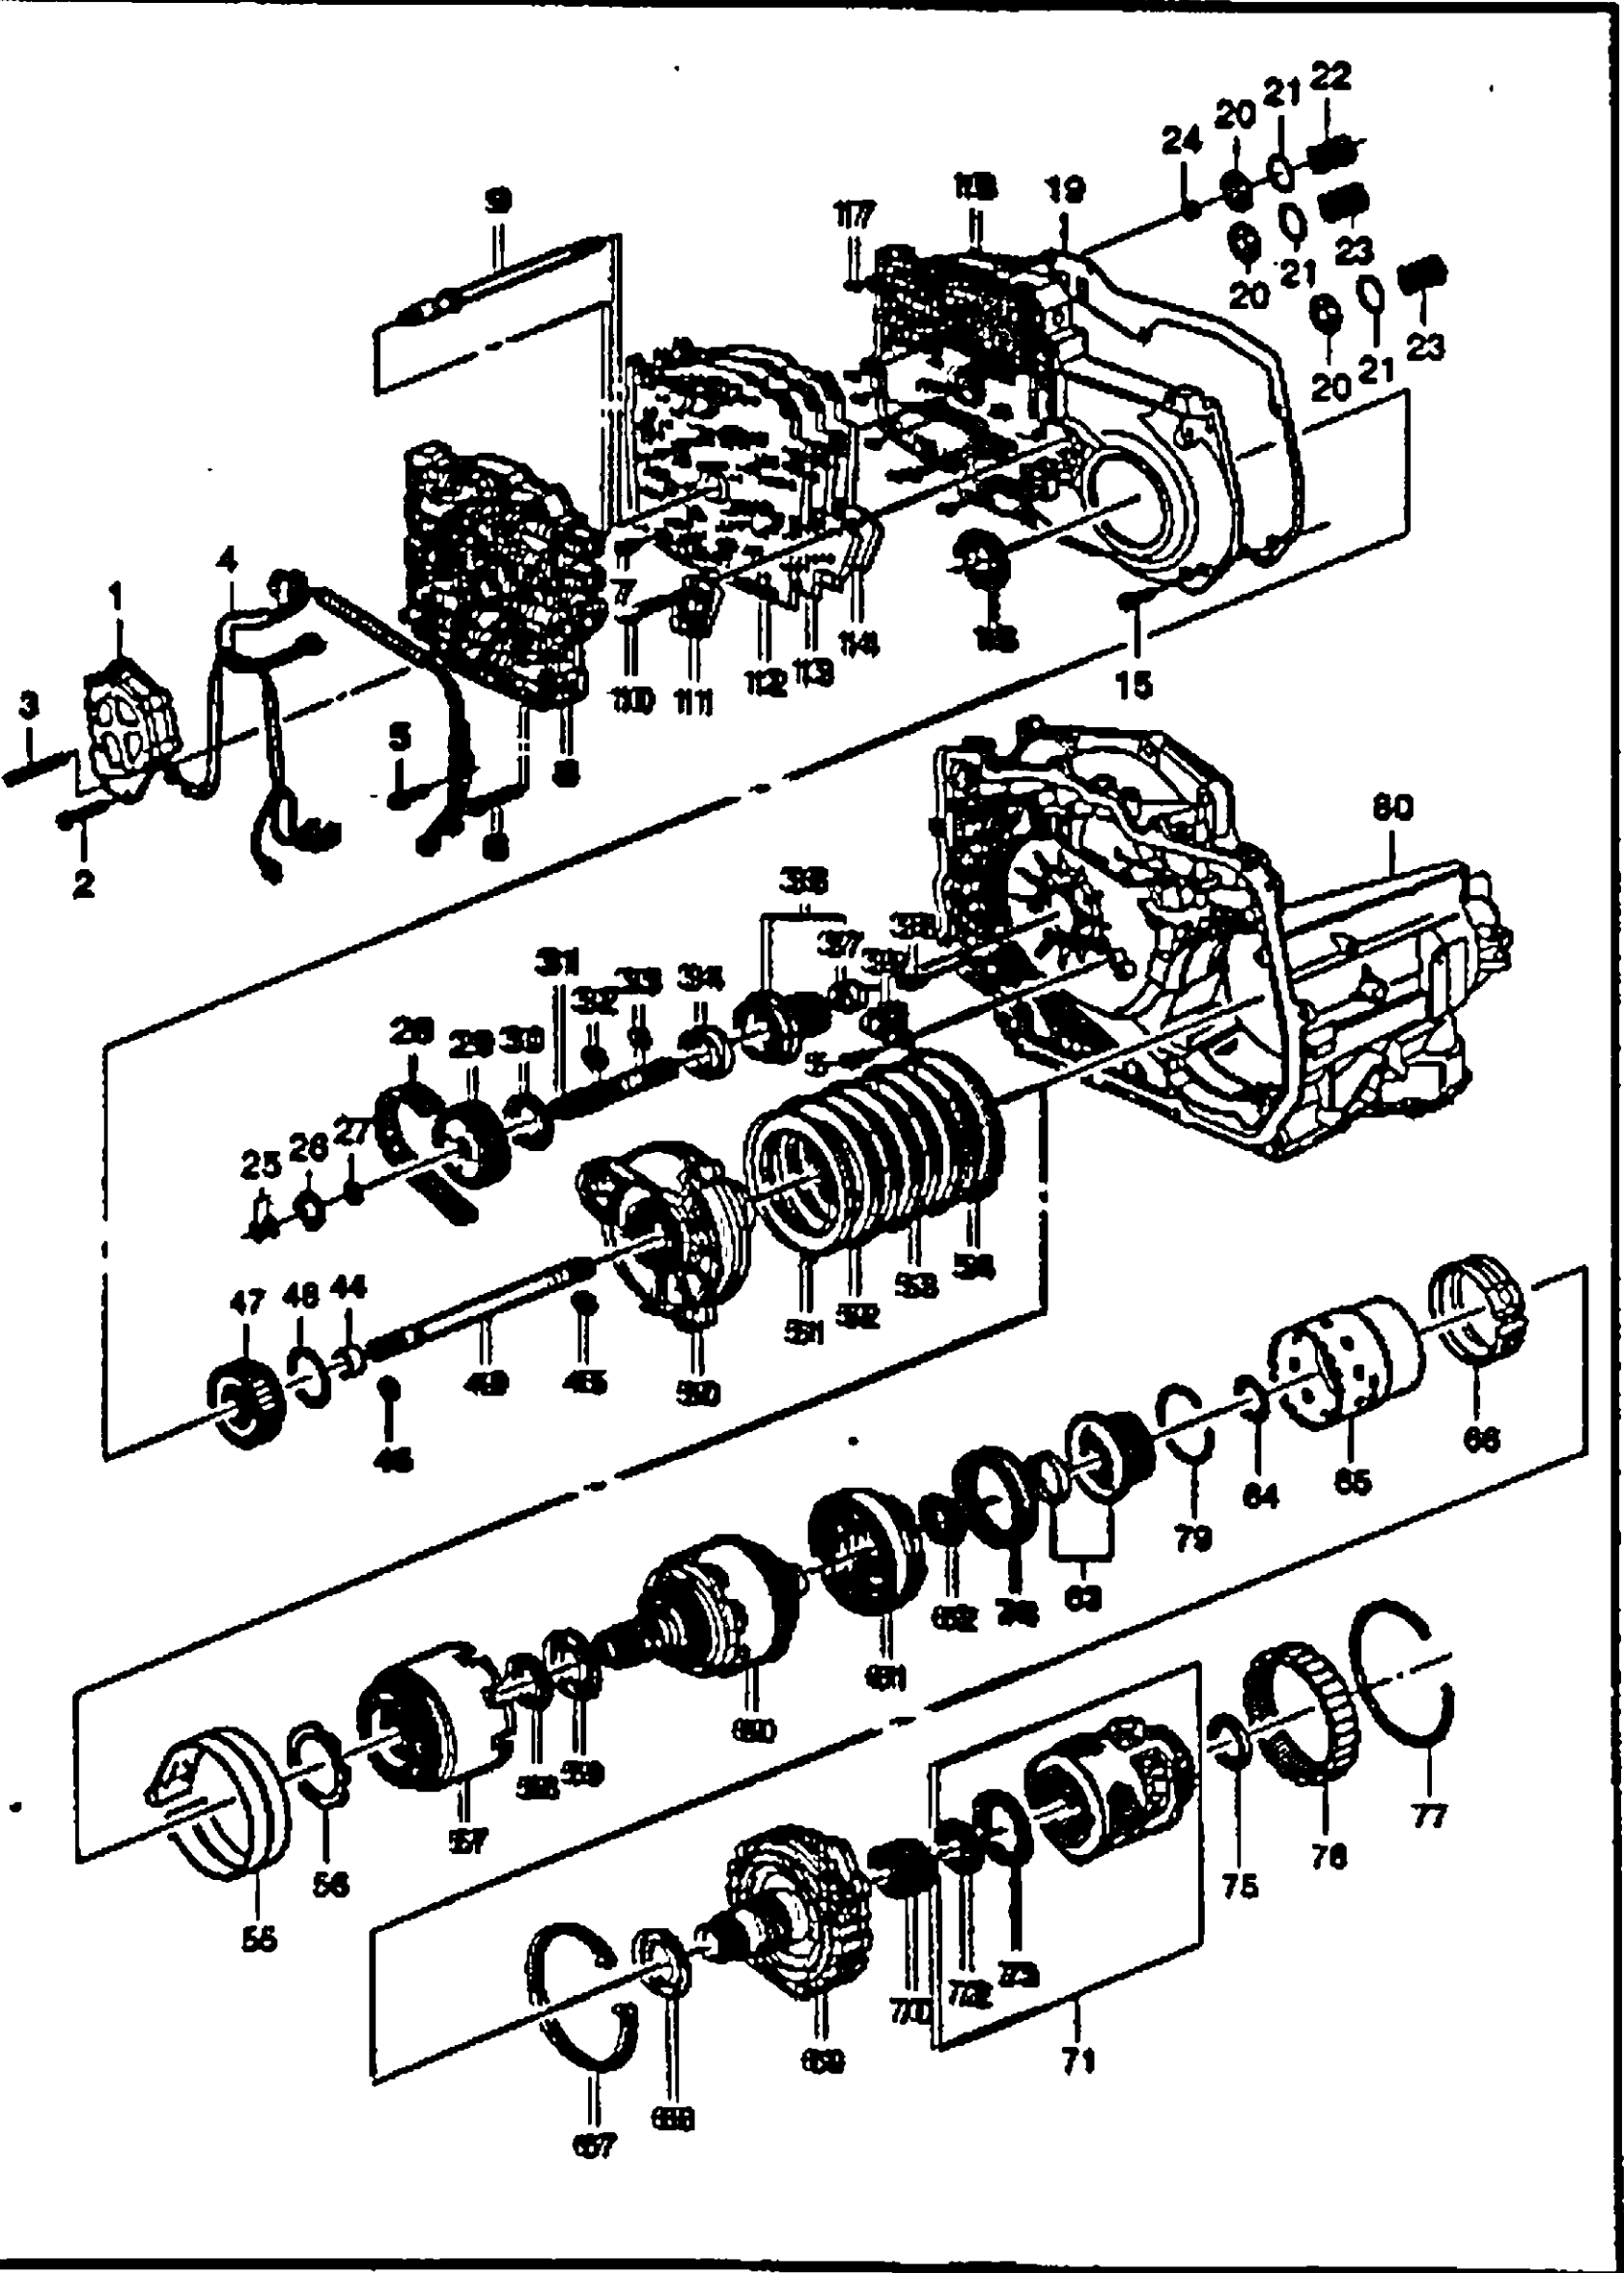


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E T / N G	A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S E X									
	[66] 08651614	(E)BAND-FORWARD CLUTCH (D)BAND . A B B B O O O									(F)BANDE (S)BRIDA 1					
	[67] 24201607	(E)RING-FWD CLUTCH SUPT (D)RING . A B B B O O O									(F)ANNEAU (S)ANILLO 1					
	[68] 24200260	(E)BEARING-THRUST (D)KUGELLAGER . A B B B O O O									(F)ROULEMENT (S)COJINET 1					
	[69]	REFER GROUP #3635														
	[70] 08684311	(E)GEAR-FRT DIFF CARR SUN (D)GETRIEBE . A B B B O O O									(F)ENGRENAGE (S)ENGRANAJE 1					
	[71] 24203709	(E)FINAL DRIVE & DIFFERENTIAL (D)GETRIEBE . A B B B O O O									(F)ENGRENAGE (S)ENGRANAJE 1					
	[72] 08646264	(E)BEARING-THRUST (D)KUGELLAGER . A B B B O O O									(F)ROULEMENT (S)COJINET 1					
	[73] 11501328	(E)RING (D)RING . A B B B O O O									(F)ANNEAU (S)ANILLO 1					
	[75] 08631362	(E)BEARING-THRUST (D)KUGELLAGER . A B B B O O O									(F)ROULEMENT (S)COJINET 1					
	[76]	(E)GEAR-FINAL DRIVE INTERNAL (D)GETRIEBE									(F)ENGRENAGE (S)ENGRANAJE					
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

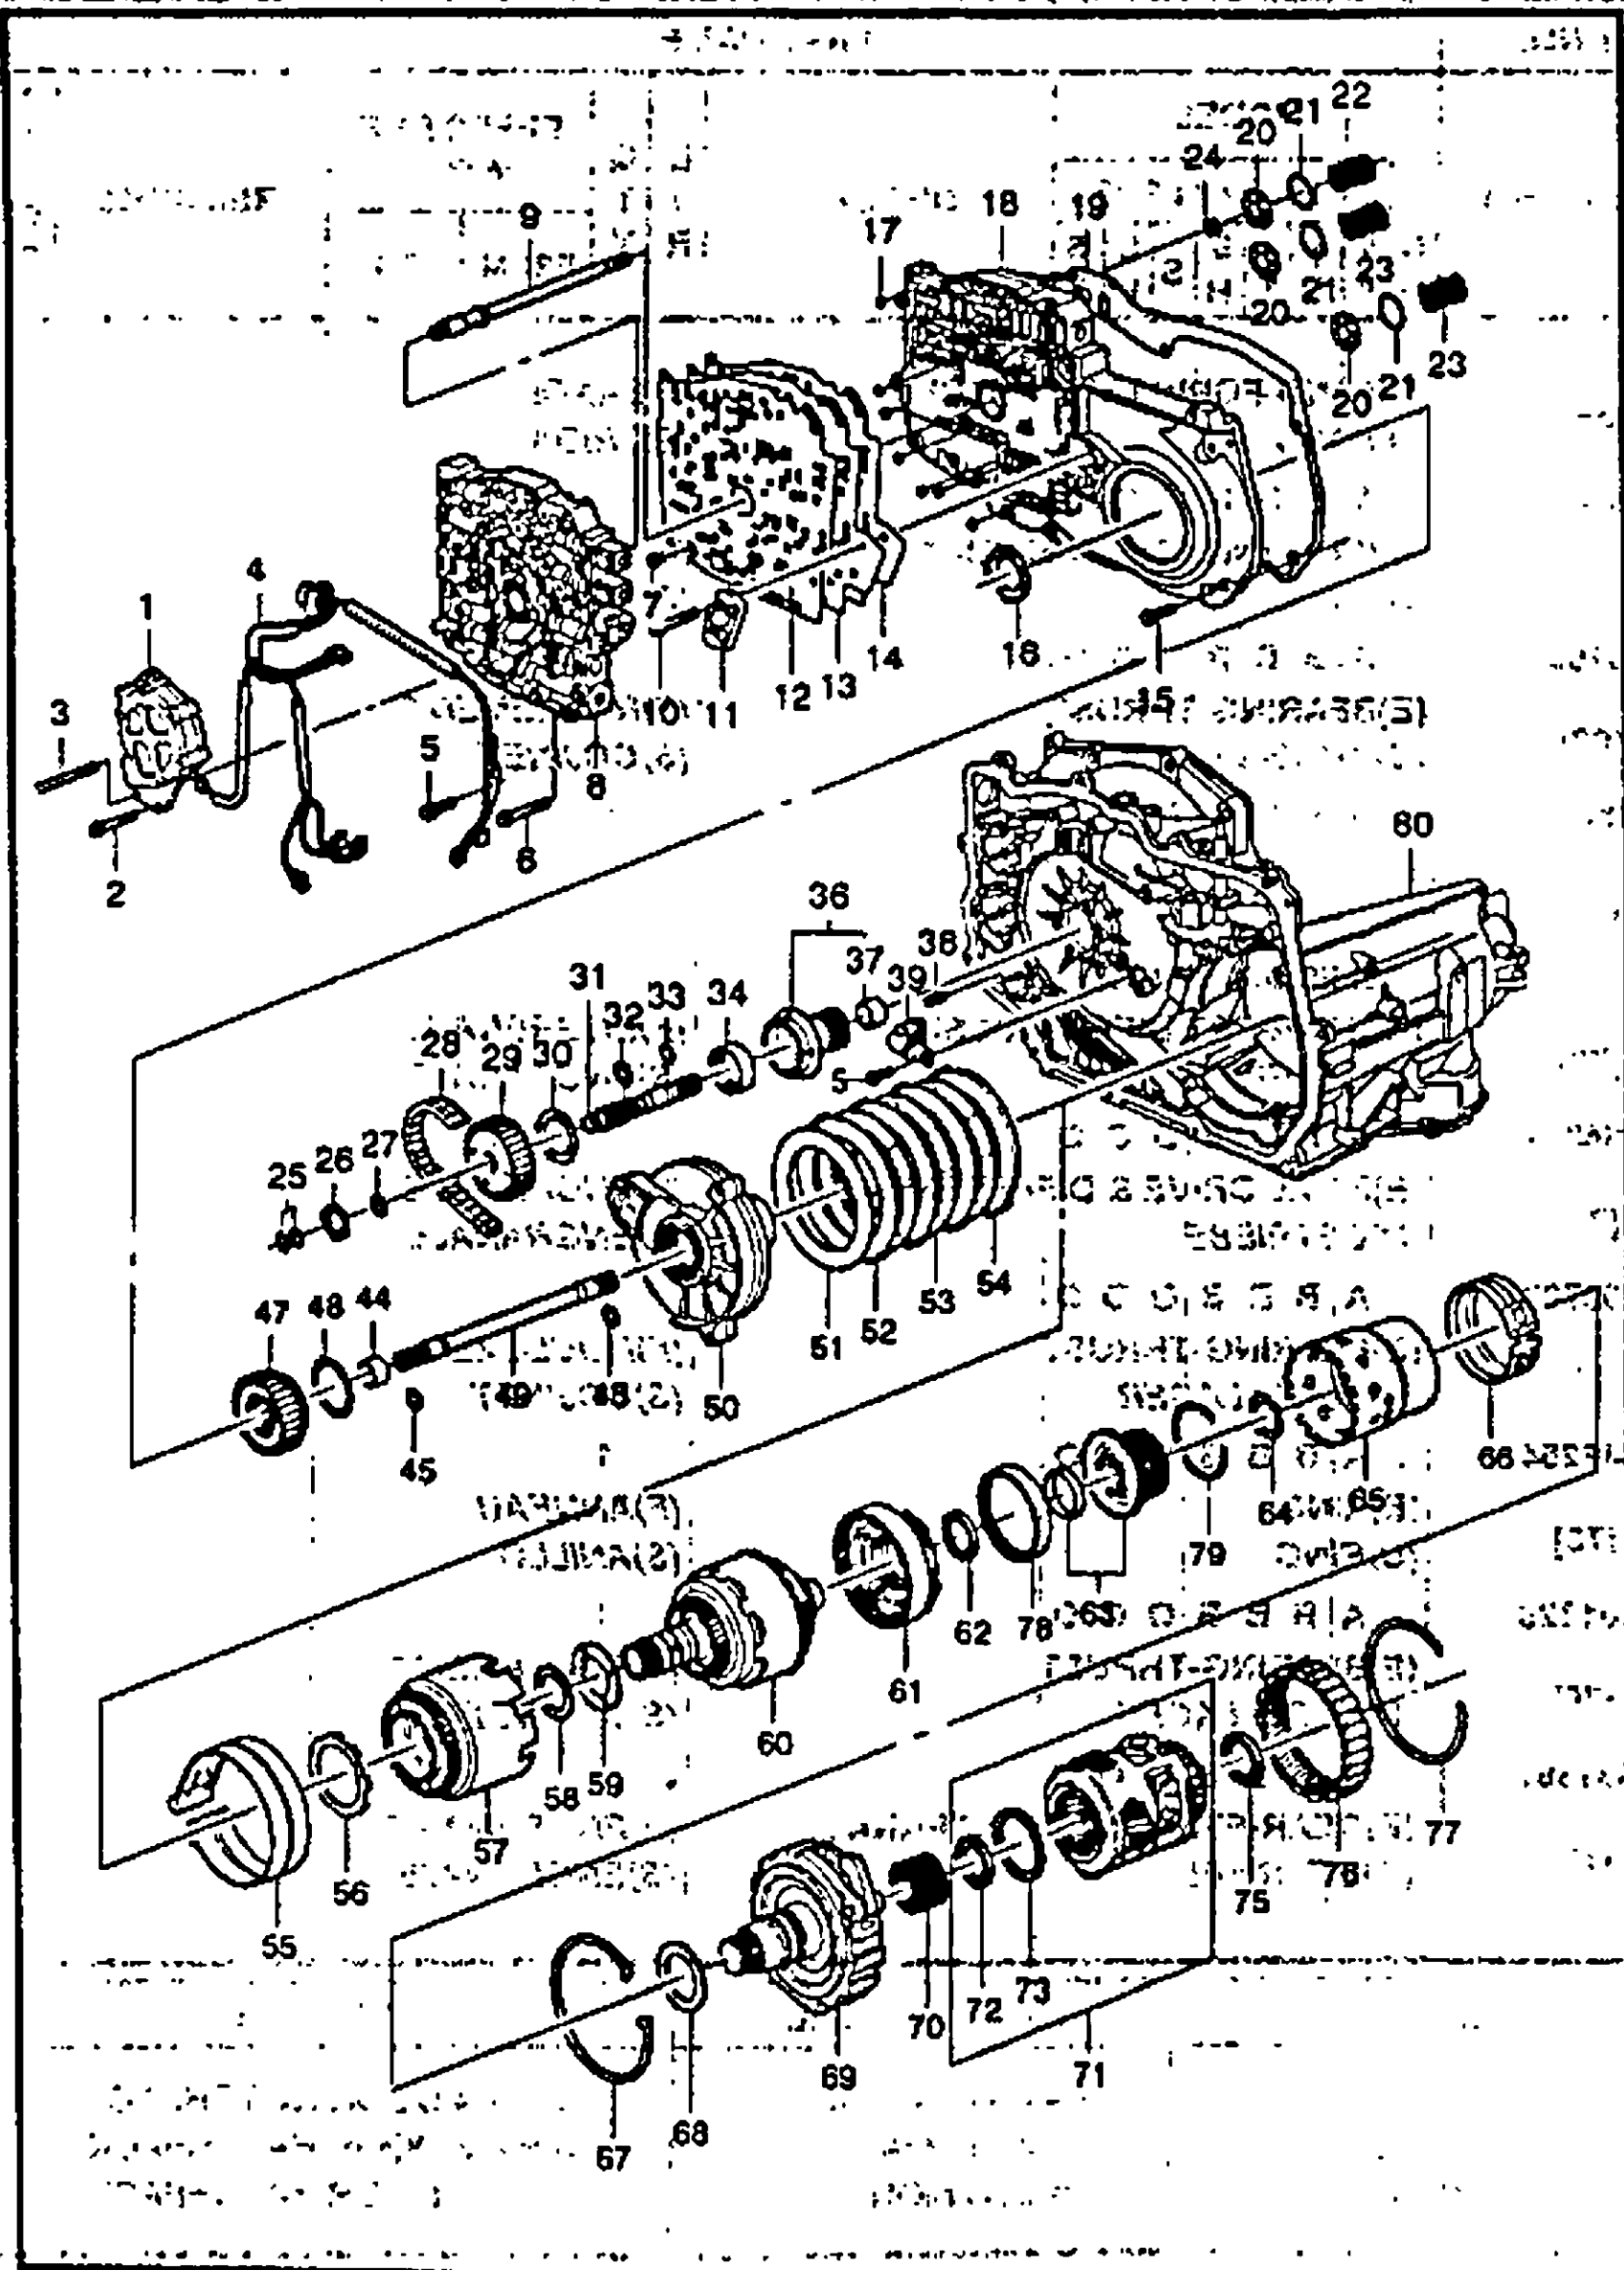


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L I T Y	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H									S S
	24201608	.	A	B	B	B	O	O	O		1				
	[77]												(F) ANNEAU (S) ANILLO		
	24201612	.	A	B	B	B	O	O	O						
	[78]												(F) ENGRENAGE (S) ENGRANAJE		
	08684574	.	A	B	B	B	O	O	O		1				
	[79]												(F) ANNEAU (S) ANILLO		
	24203619	.	A	B	B	B	O	O	O		1				
	[80]												(F) CARTER (S) CAJA		
	24208101	.	A	B	B	B	O	O	O		1				
	24210088	.	A	B	B	B	O	O	O		1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC = COMMON		M = MANUAL T/A A = AUTOMATIC T/A = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

3530 REVERSE INPUT CLUTCH ASSEMBLY


4N07

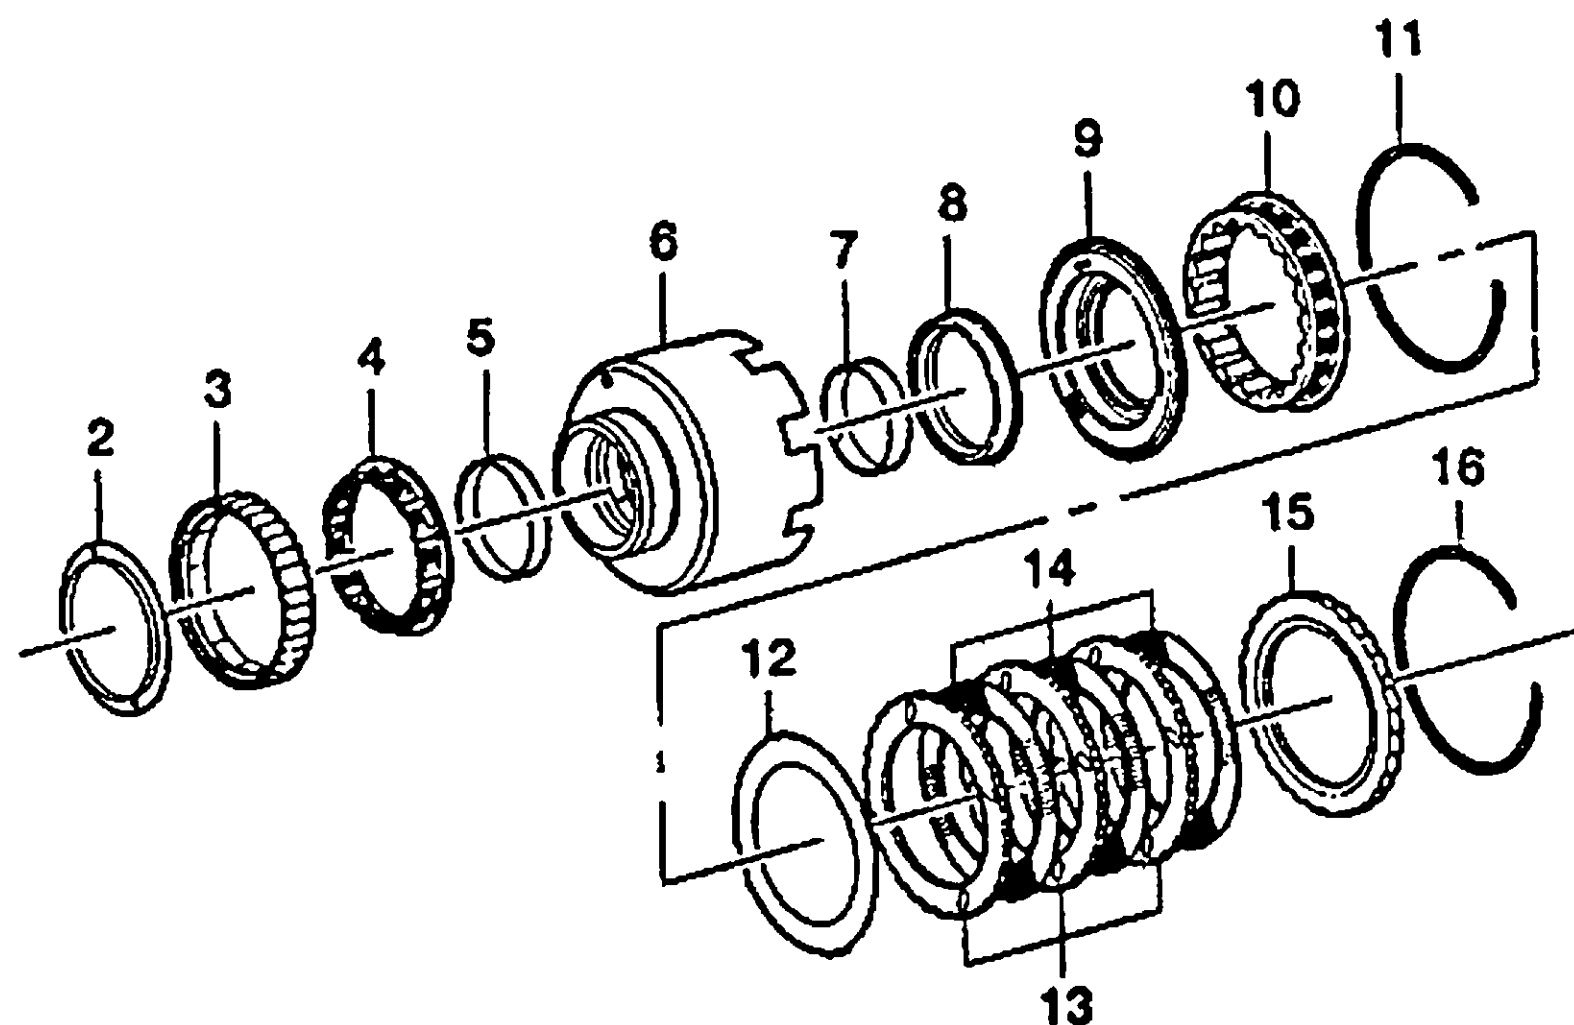


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S				S E	X		
	[02]	(E)RETAINER-2ND ROLLER CLUTC									(F)ATTACHE-ARRETOIR			
	24207224	(D)KLEMME,HALTERUNG									(S)GRAPA-RETENEDOR			
		. A B B B O O O									1			
	[03]	(E)CAM-2ND ROLLER CLUTCH									(F)CAME			
	08684671	(D)NOCKE									(S)LEVA			
		. A B B B O O O									1			
	[04]	(E)CLUTCH-2ND ROLLER									(F)EMBAYAGE			
	00930695	(D)KUPPLUNG									(S)EMBRAGUE			
		. A B B B O O O									1			
	[05]	(E)BUSHING-REVERSE CLUTCH									(F)MANCHON			
	08684268	(D)LAGERFUTTER									(S)BUJE			
		. A B B B O O O									1			
	[06]	(E)HOUSING-REVERSE CLUTCH									(F)LOGEMENT			
	24207313	(D)GEHÄUSE									(S)CARCASA			
												NOT APPLIED		
	24204545										1			
	[07]	(E)BUSHING-REVERSE CLUTCH									(F)MANCHON			
	08684269	(D)LAGERFUTTER									(S)BUJE			
		. A B B B O O O									1			
	[08]	(E)SEAL									(F)JOINT			
	24205041	(D)DICHTUNG									(S)SELLO			
		. A B B B O O O									1			
	[09]	(E)PISTON A-REVERSE CLUTCH									(F)PISTON			
	24205040	(D)KOLBEN									(S)PISTON			
		. A B B B O O O									1			
	[10]	(E)SPRING & RETAINER									(F)RESSORT			
	24200758	(D)FEDERUNG									(S)RESORTE			
		. A B B B O O O									1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

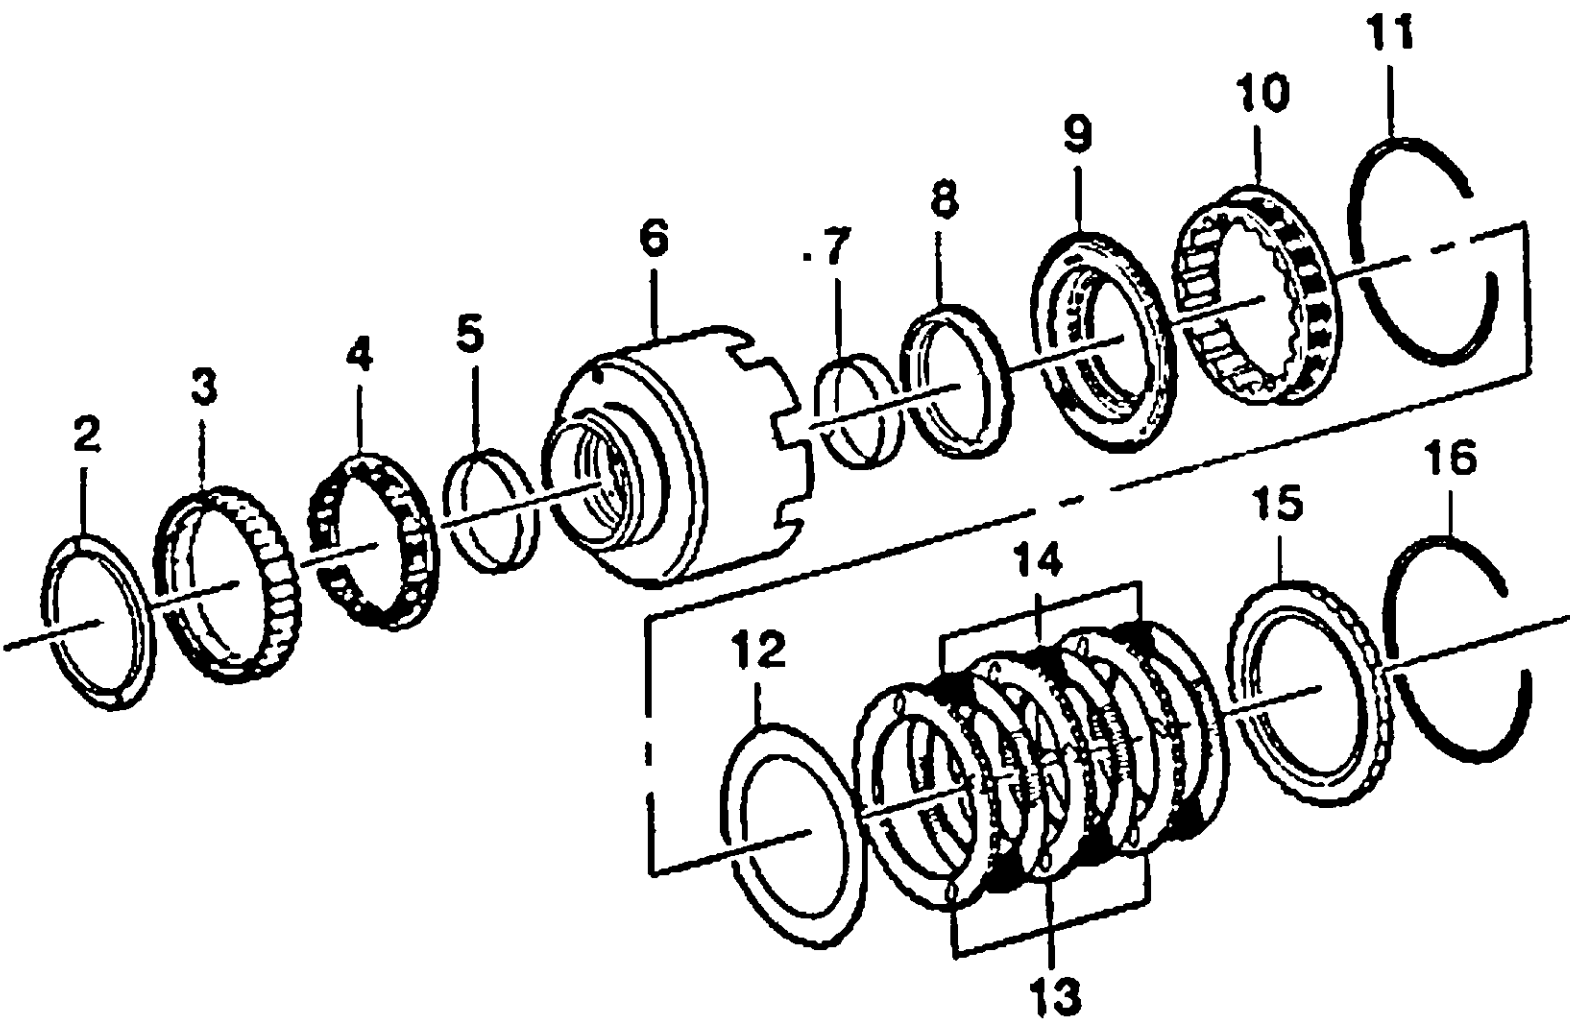


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E T N / G A	BODY			LEVEL					FROM	TO			
			4 N H	3 H	5 H	S	S								S
	[11]	(E)RING-SNAP (D)RING									(F)ANNEAU (S)ANILLO				
	08684283	. A B B B O O O									1				
	[12]	(E)PLATE-REVERSE CLUTCH(WAVE (D)PLATTE,SCHEIBEN-KUPPLUNG									(F)PLAQUE-EMBRAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO				
	24200466	. A B B B O O O									1				
	[13]	(E)PLATE-REV.CLUTCH (STEEL) (D)PLATTE,SCHEIBEN-KUPPLUNG									(F)PLAQUE-EMBRAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO				
	24207081	. A B B B O O O									3				
	[14]	(E)PLATE-REV.CLUTCH (FIBER) (D)PLATTE,SCHEIBEN-KUPPLUNG									(F)PLAQUE-EMBRAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO				
	08684266	. A B B B O O O									3				
	[15]	(E)PLATE-REV.CLUTCH(BACK'G.A (D)PLATTE,SCHEIBEN-KUPPLUNG									(F)PLAQUE-EMBRAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO				
	24200950	. A B B B O O O									1		SELECTIVE		
	24200756	. A B B B O O O									1		SELECTIVE		
	24200951	. A B B B O O O									1		SELECTIVE		
	[16]	(E)RING-SNAP (D)RING									(F)ANNEAU (S)ANILLO				
	24200754	. A B B B O O O									1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC G = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

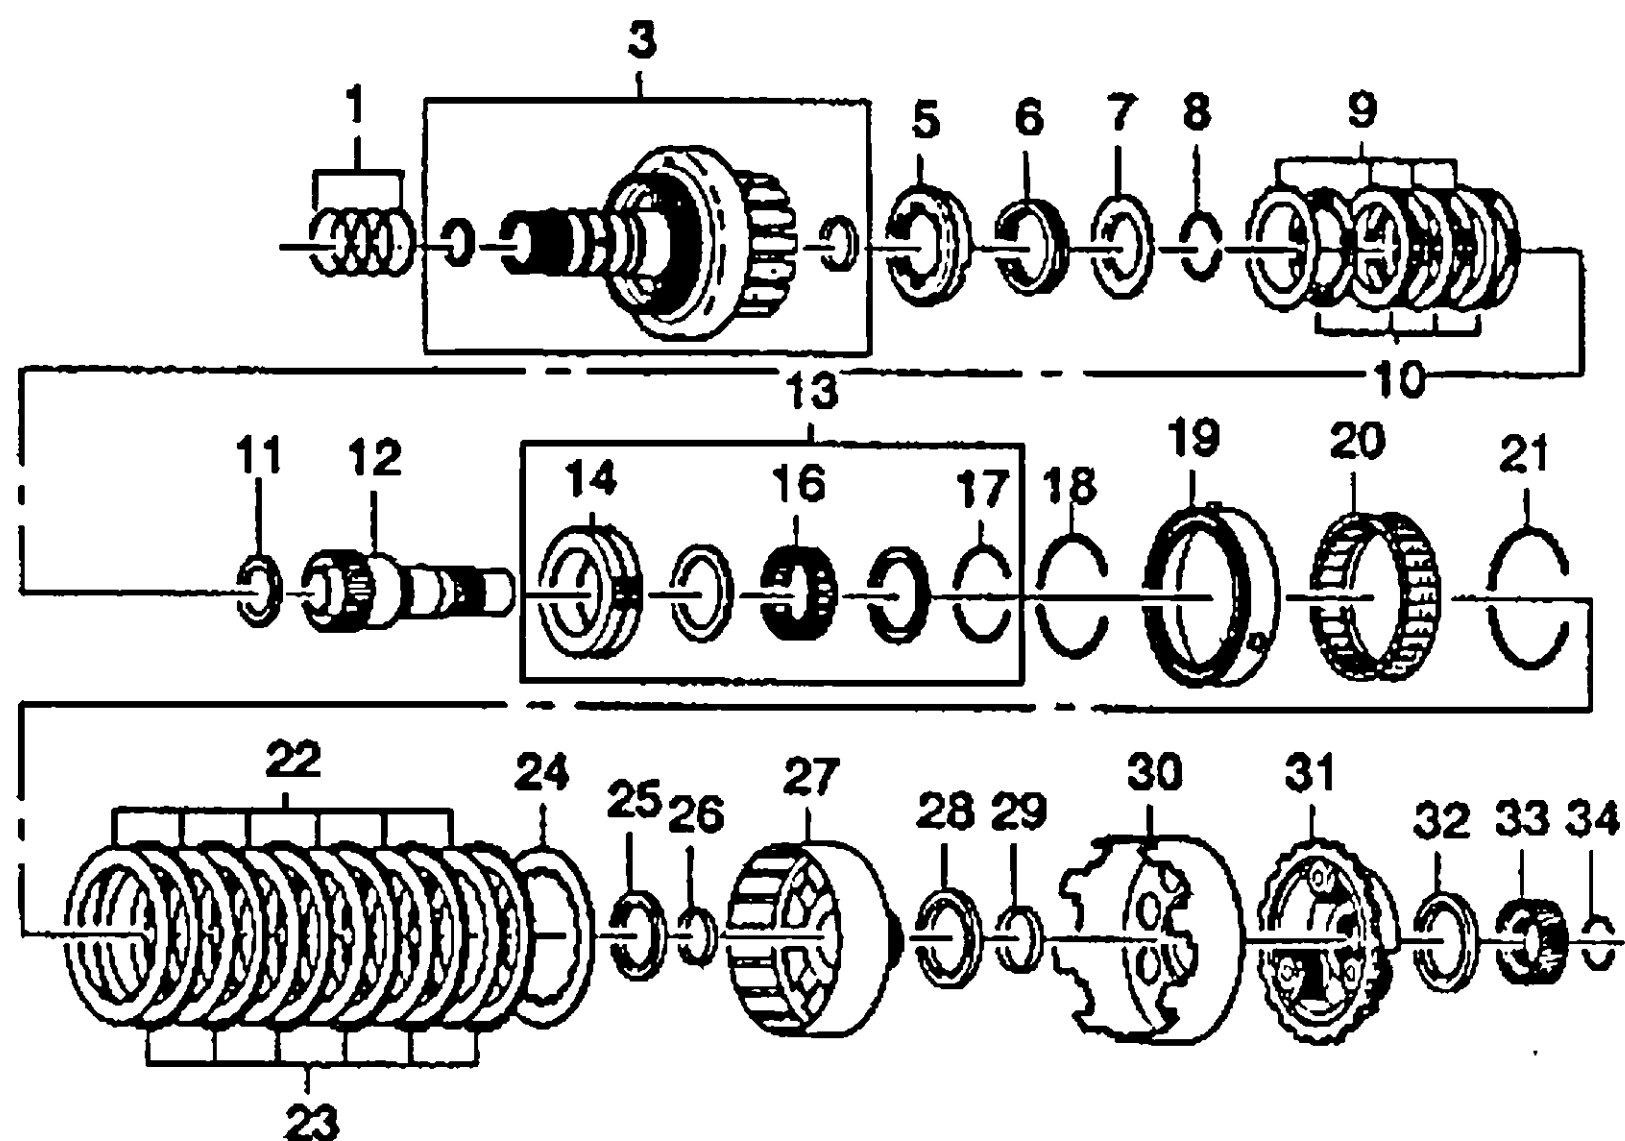


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S S								S S S
	[01]	(E)RING-SEAL									(F)ANNEAU-JOINT				
	08684272	(D)RING,DICHTUNG									(S)ANILLO-SELLO				
		. A B B B O O O									4				
	[03]	(E)HOUSING-DIRECT&COAST CLUT									(F)LOGEMENT				
	24209113	(D)GEHÄUSE									(S)CARCASA				
		. A B B B O O O									1				
	[05]	(E)PISTON-COAST CLUTCH									(F)PISTON				
	24205043	(D)KOLBEN									(S)PISTON				
		. A B B B O O O									1				
	[06]	(E)SPRING									(F)RESSORT				
	24204448	(D)FEDERUNG									(S)RESORTE				
		. A B B B O O O									1				
	[07]	(E)RETAINER									(F)ATTACHE-ARRETOIR				
	08684277	(D)KLEMME,HALTERUNG									(S)GRAPA-RETENEDOR				
		. A B B B O O O									1				
	[08]	(E)RING-COAST CLUTCH SPRING									(F)ANNEAU				
	08684278	(D)RING									(S)ANILLO				
		. A B B B O O O									1				
	[09]	(E)PLATE-COAST CLUTCH (STEEL									(F)PLAQUE-EMBAYAGE A DISQUE				
	08685874	(D)PLATTE,SCHEIBEN-KUPPLUNG									(S)PLACA-EMBRAGUE DISCO				
		. A B B B O O O									4				
	[10]	(E)PLATE-COAST CLUTCH (FIBER									(F)PLAQUE-EMBAYAGE A DISQUE				
	08684282	(D)PLATTE,SCHEIBEN-KUPPLUNG									(S)PLACA-EMBRAGUE DISCO				
		. A B B B O O O									4				
	[11]	(E)BEARING-THRUST									(F)ROULEMENT				
	24200249	(D)KUGELLAGER									(S)COJINET				
		. A B B B O O O									1				
	[12]	(E)SHAFT A-INPUT SUN GEAR									(F)ARBRE				
		(D)SPINDEL									(S)EJE				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

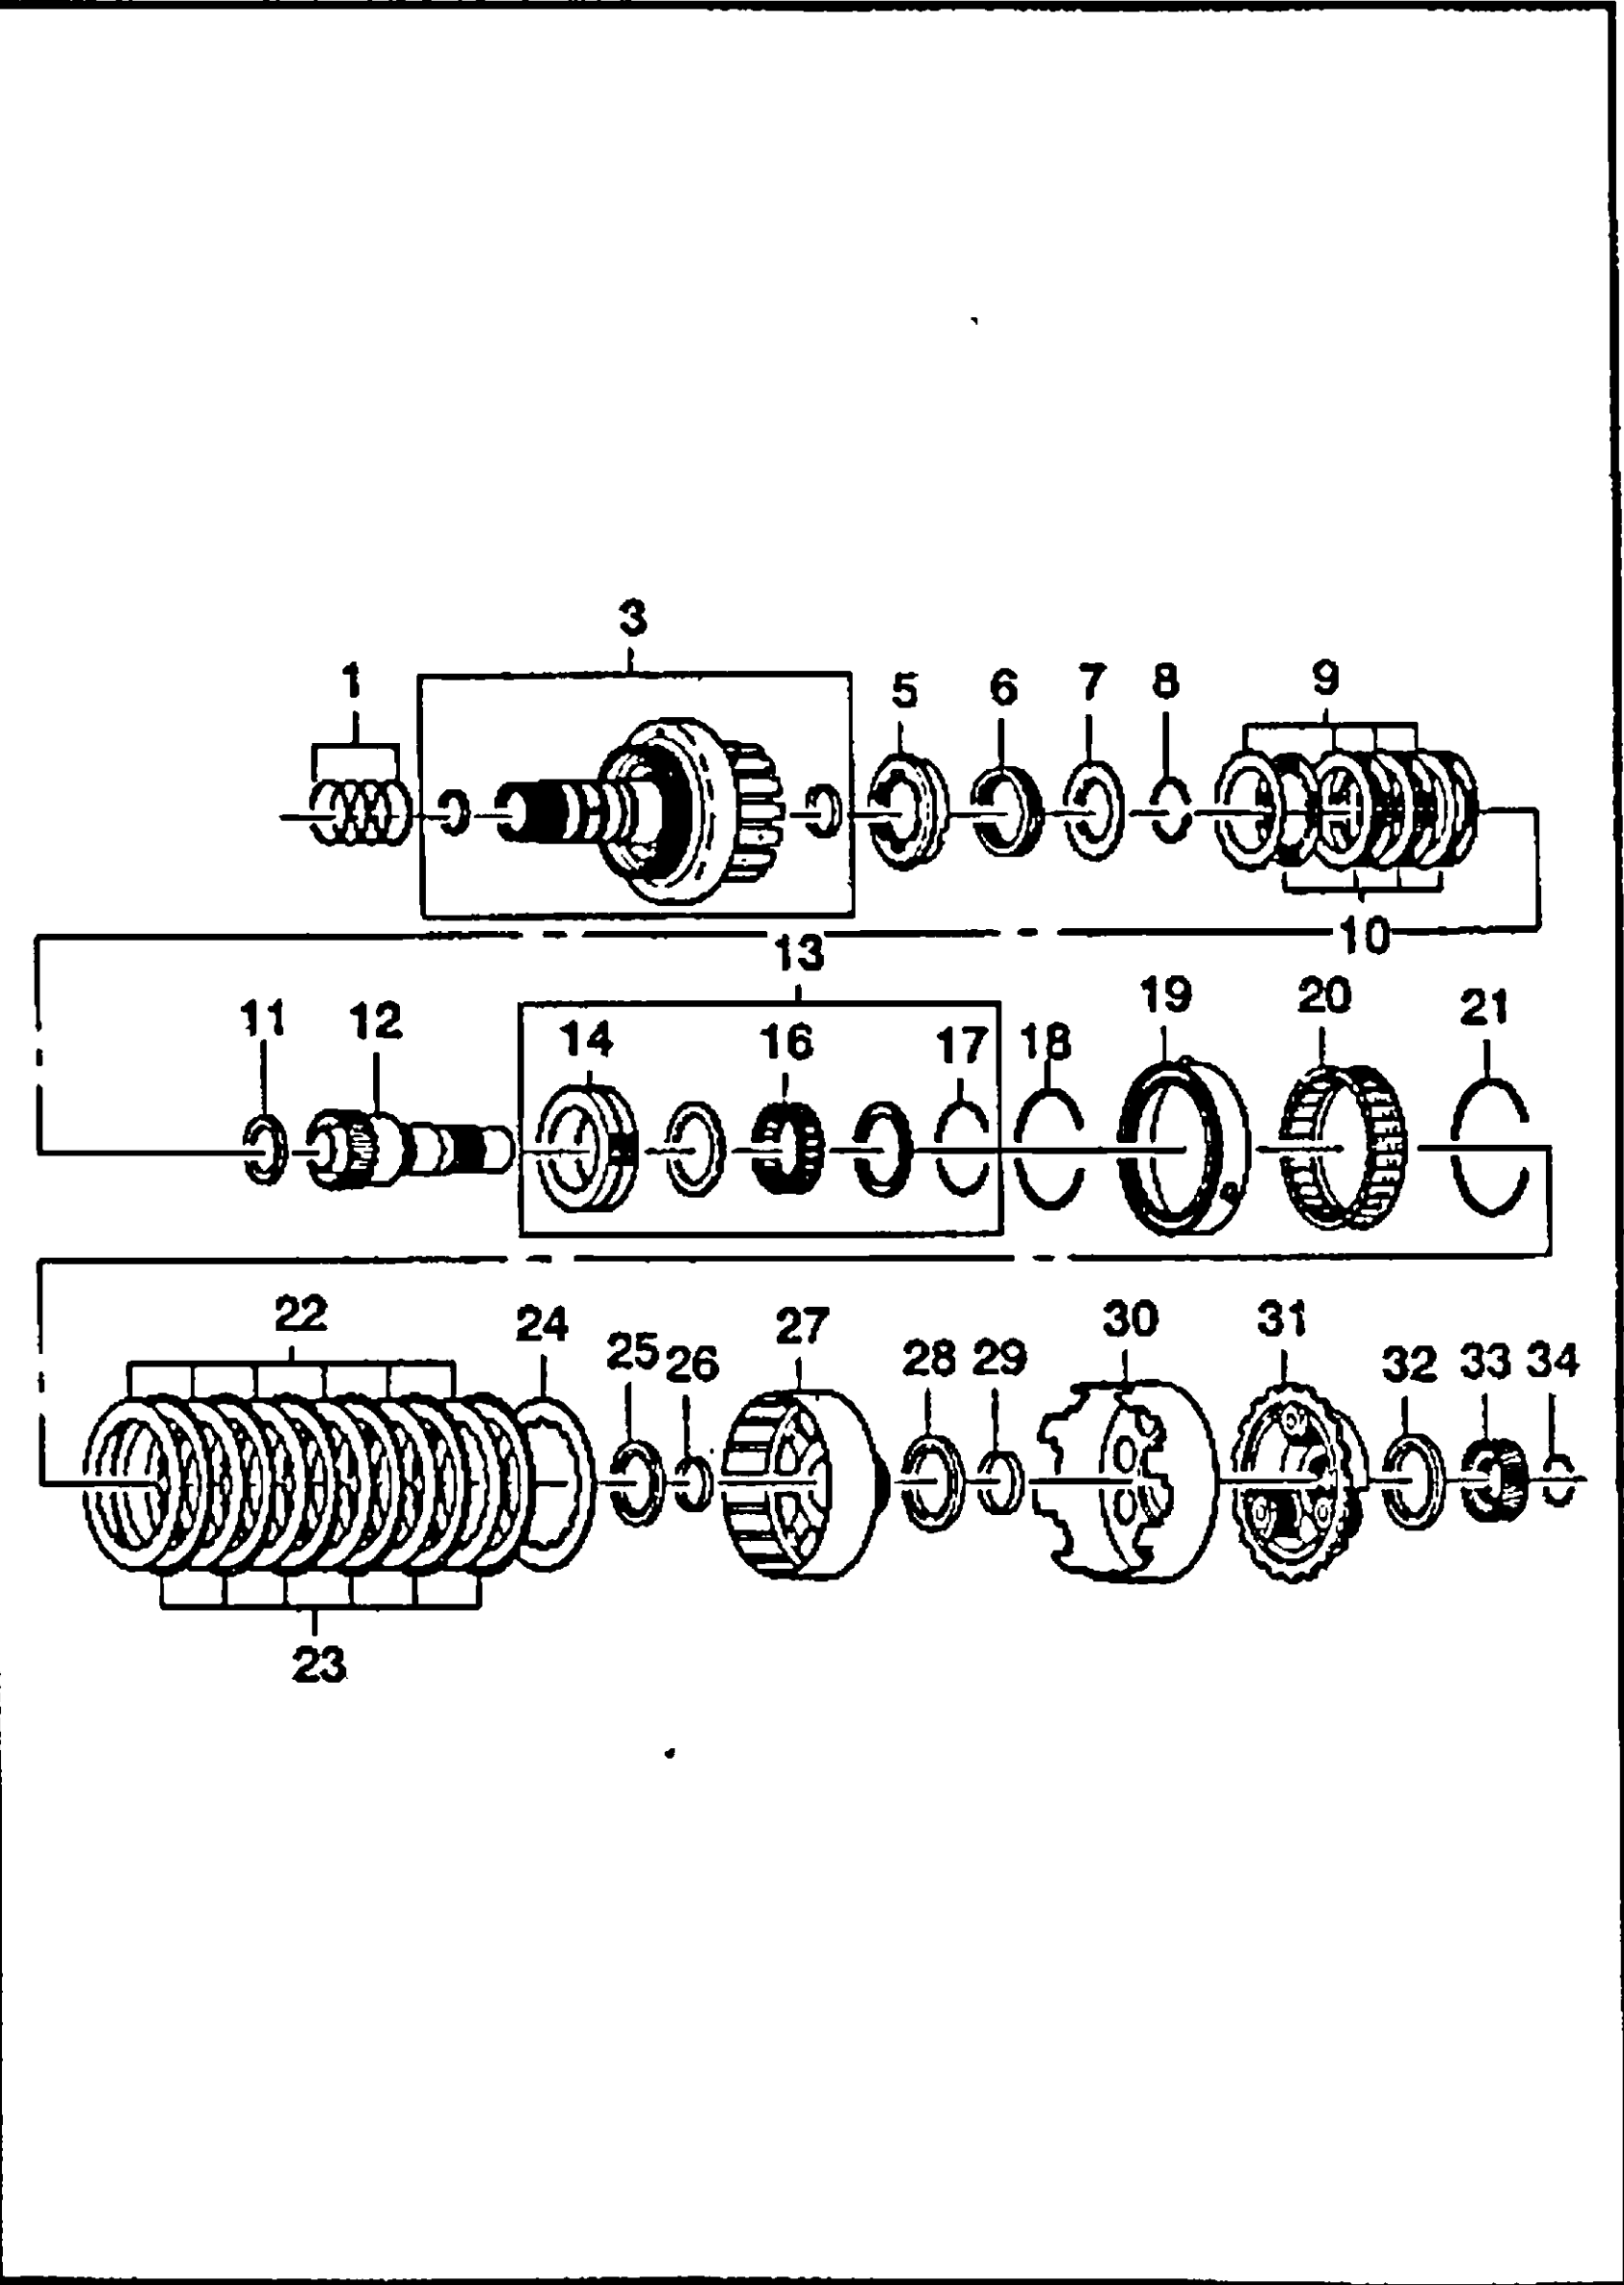


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	24203613	.	A	B	B	B	O	O	O		1				
	[13]	(E)	RACE A-OTR(INPUT SPRAG)									(F)	CAGE		
		(D)	GLEITBAHN									(S)	CARRERA		
	24203616	.	A	B	B	B	O	O	O		1				
	[14]	(E)	RACE-OTR(INPUT SPRAG)									(F)	CAGE		
		(D)	GLEITBAHN									(S)	CARRERA		
	24200497	.	A	B	B	B	O	O	O		1				
	[16]	(E)	SPRAG-INPUT CLUTCH									(F)	EMBRAYAGE-SENS UNIQUE		
		(D)	KUPPLUNG,EINWEG									(S)	EMBRAGUE-1 DIRECCION		
	24203617	.	A	B	B	B	O	O	O		1				
	[17]	(E)	RING-SNAP									(F)	ANNEAU		
		(D)	RING									(S)	ANILLO		
	08658889	.	A	B	B	B	O	O	O		1				
	[18]	(E)	RING-SNAP									(F)	ANNEAU		
		(D)	RING									(S)	ANILLO		
	08685878	.	A	B	B	B	O	O	O		1				
	[19]	(E)	PISTON A-DIRECT CLUTCH									(F)	PISTON		
		(D)	KOLBEN									(S)	PISTON		
	24205044	.	A	B	B	B	O	O	O		1				
	[20]	(E)	SPRING A-DIRECT CLUTCH									(F)	RESSORT		
		(D)	FEDERUNG									(S)	RESORTE		
	08684610	.	A	B	B	B	O	O	O		1				
	[21]	(E)	RING-DIRECT CLUTCH SPRING									(F)	ANNEAU		
		(D)	RING									(S)	ANILLO		
	08684280	.	A	B	B	B	O	O	O		1				
	[22]	(E)	PLATE-DIRECT CLUTCH(STEEL									(F)	PLAQUE-EMBRAYAGE A DISQUE		
		(D)	PLATTE,SCHEIBEN-KUPPLUNG									(S)	PLACA-EMBRAGUE DISCO		
	08685879	.	A	B	B	B	O	O	O		8				
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

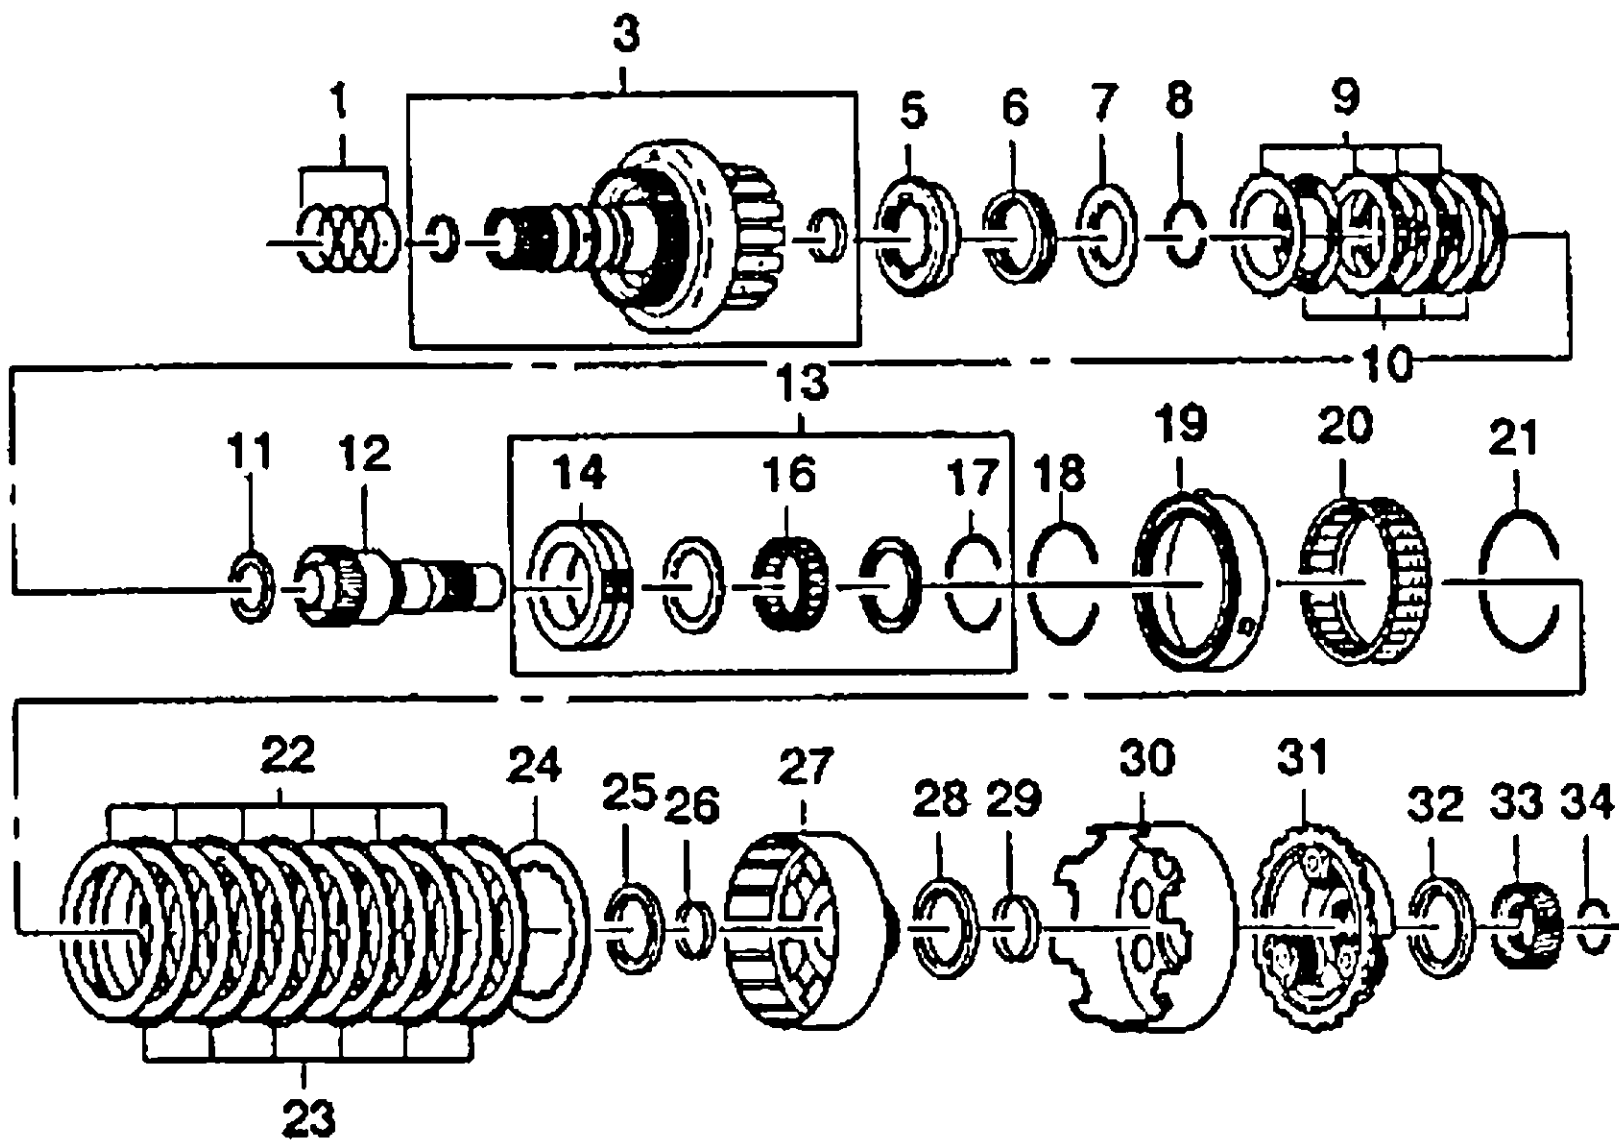

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL			FROM	TO				
				4 N	3 H	5 H	S S S S S S							S S S S S S	S S S S S S
	[23] 08684415	(E)PLATE-DIRECT CLUTCH(FIBER (D)PLATTE,SCHEIBEN-KUPPLUNG								(F)PLAQUE-EMBRAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO	4				
	[24] 08685875	(E)PLATE-DIRECT CLUTCH(BACK' (D)PLATTE,SCHEIBEN-KUPPLUNG								(F)PLAQUE-EMBRAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO	1				
	[25] 24200248	(E)BEARING-THRUST (D)KUGELLAGER								(F)ROULEMENT (S)COJINET	1				
	[26] 08684589	(E)BUSHING-REACTION CARR.SHF (D)LAGERFUTTER								(F)MANCHON (S)BUJE	1				
	[27] 24202267	(E)SHELL-REACTION CARR.SHAFT (D)GEHÄUSE								(F)ENVELOPPE (S)CAPARAZON	1				
	[28] 24200251	(E)BEARING-THRUST (D)KUGELLAGER								(F)ROULEMENT (S)COJINET	1				
	[29] 08684586	(E)BUSHING-REACTION SUN GEAR (D)LAGERFUTTER								(F)MANCHON (S)BUJE	1				
	[30] 24202271	(E)SHELL-REACTION SUN GEAR (D)GEHÄUSE								(F)ENVELOPPE (S)CAPARAZON	1				
	[31] 24208584	(E)CARRIER A-REACTION (D)GETRIEBE								(F)ENGRENAGE (S)ENGRANAJE	1				
	[32]	(E)BEARING-THRUST (D)KUGELLAGER								(F)ROULEMENT (S)COJINET					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

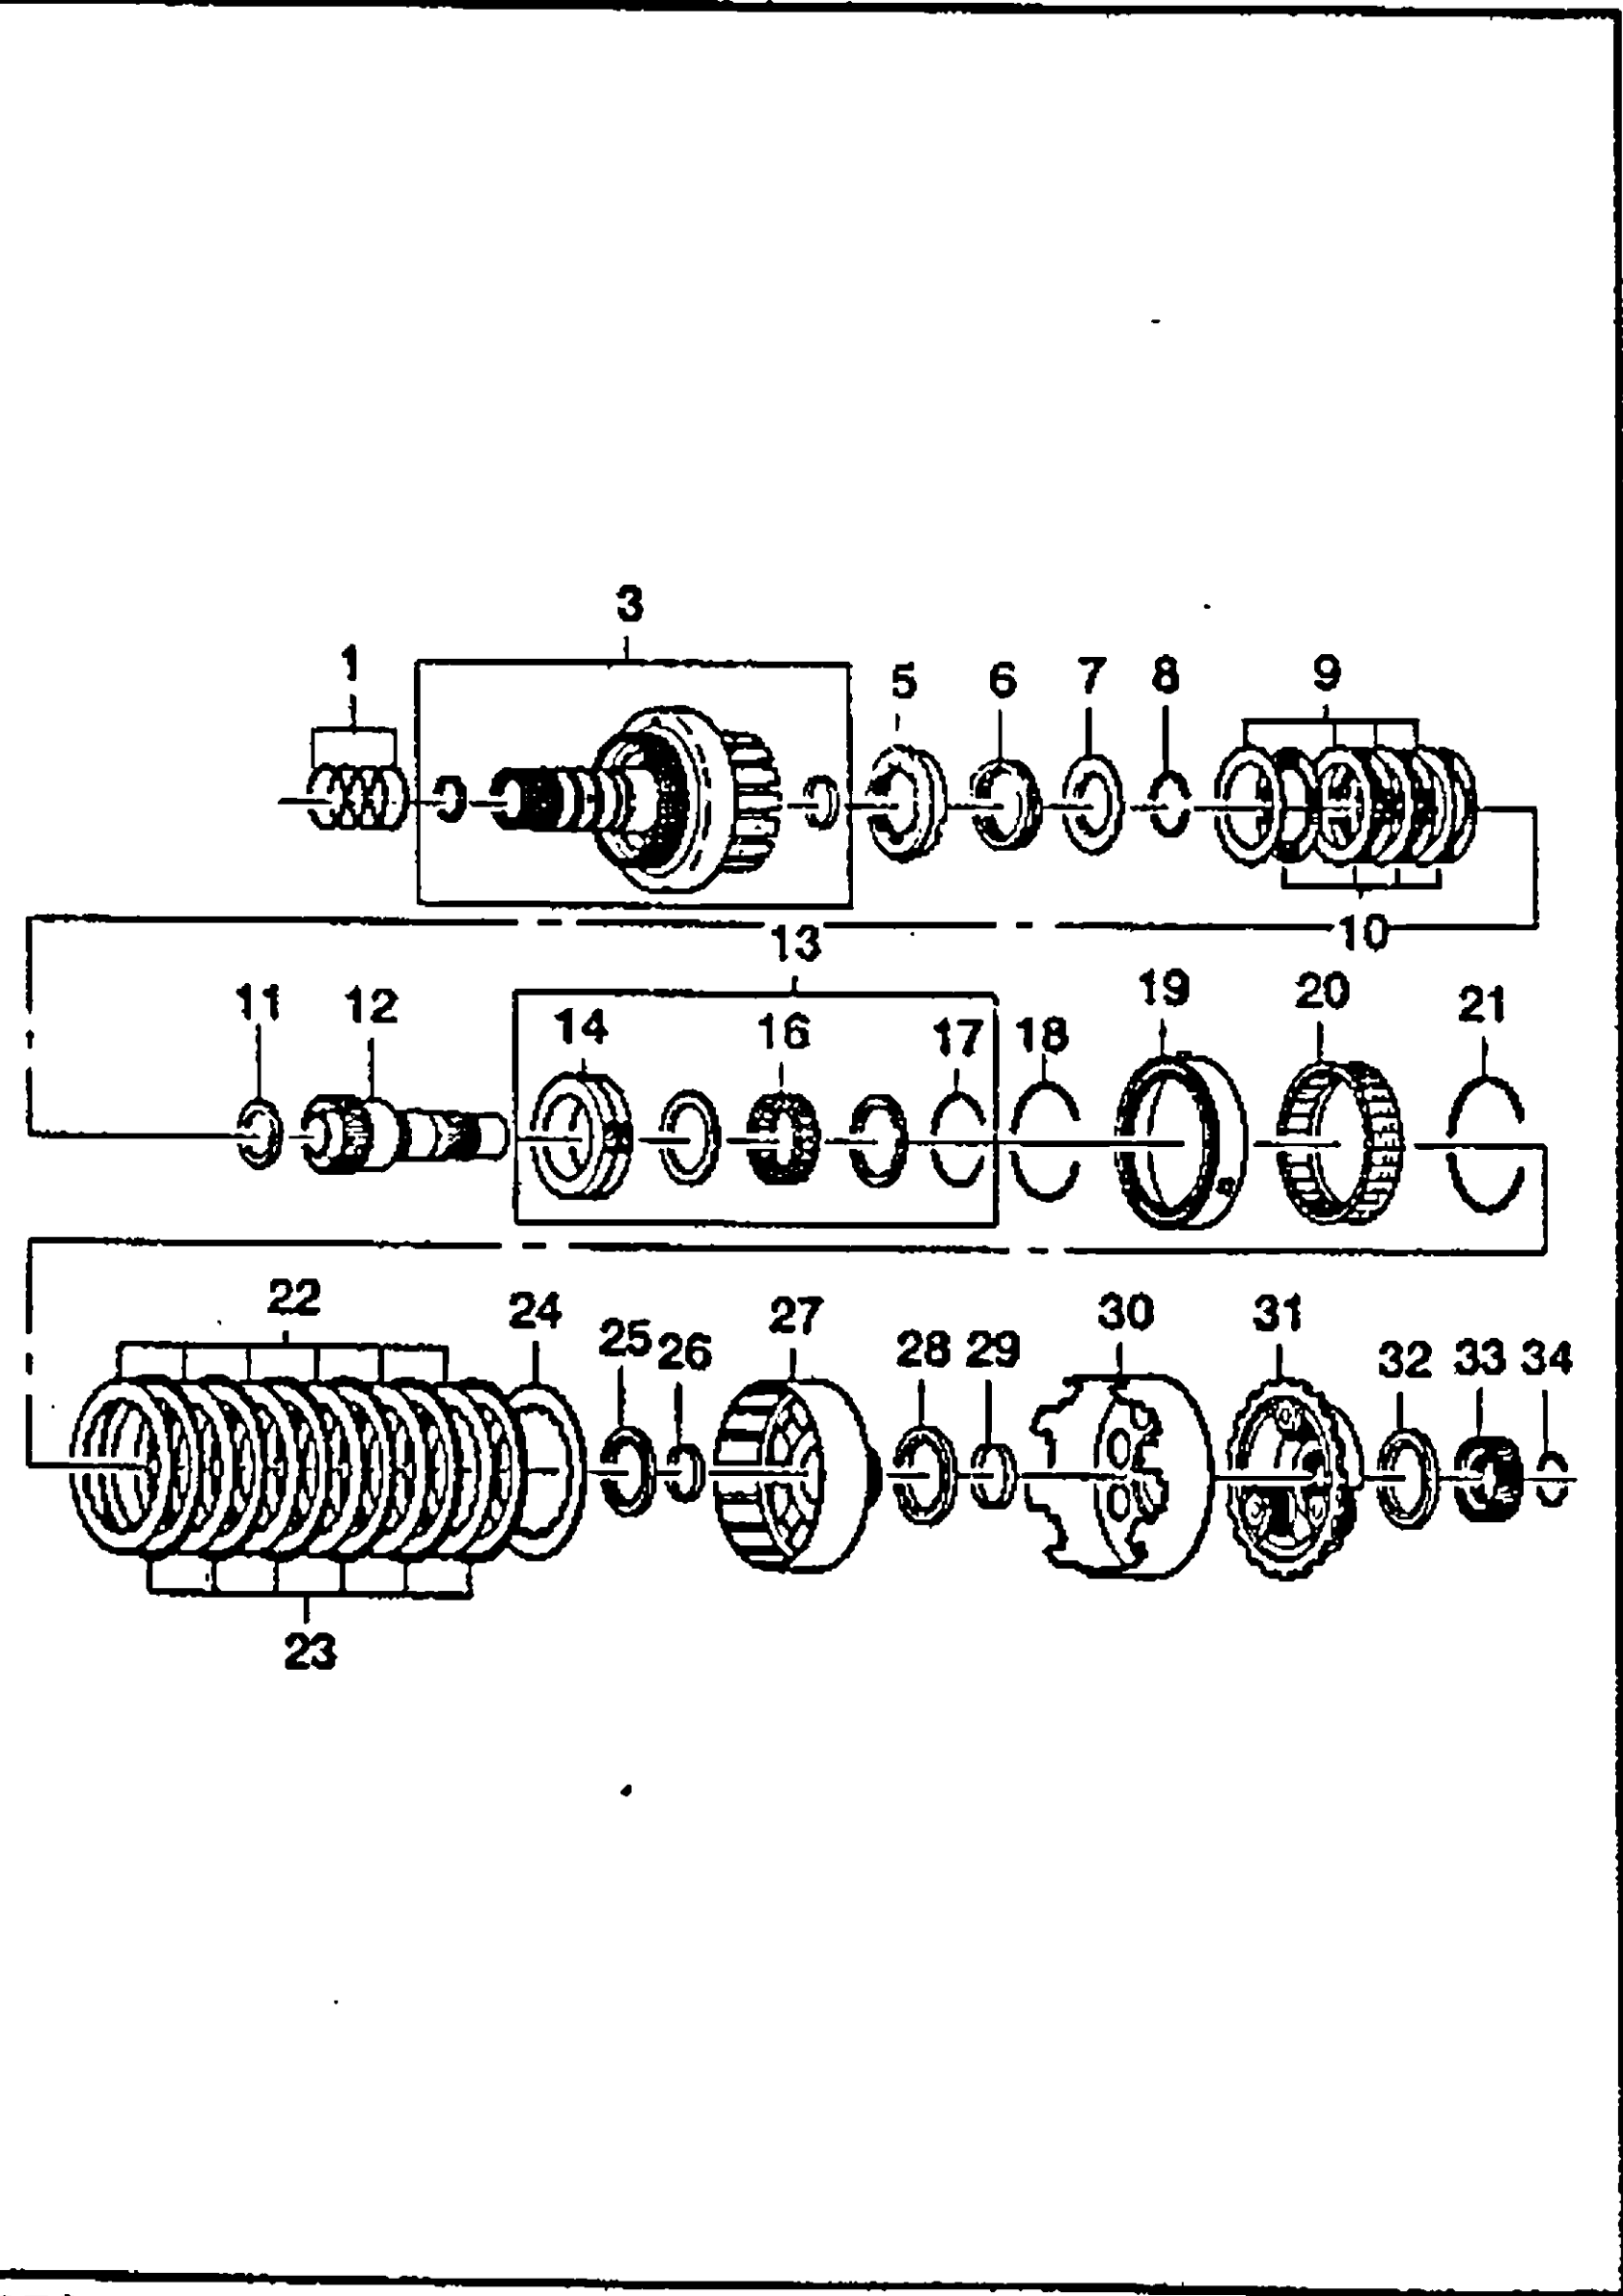


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	24200252	.	A	B	B	B	O	O	O		1				
	[33]										(F)ENGRENAGE				
	08684581	.	A	B	B	B	O	O	O		1				
	[34]										(F)ANNEAU				
	08684580	.	A	B	B	B	O	O	O		1				

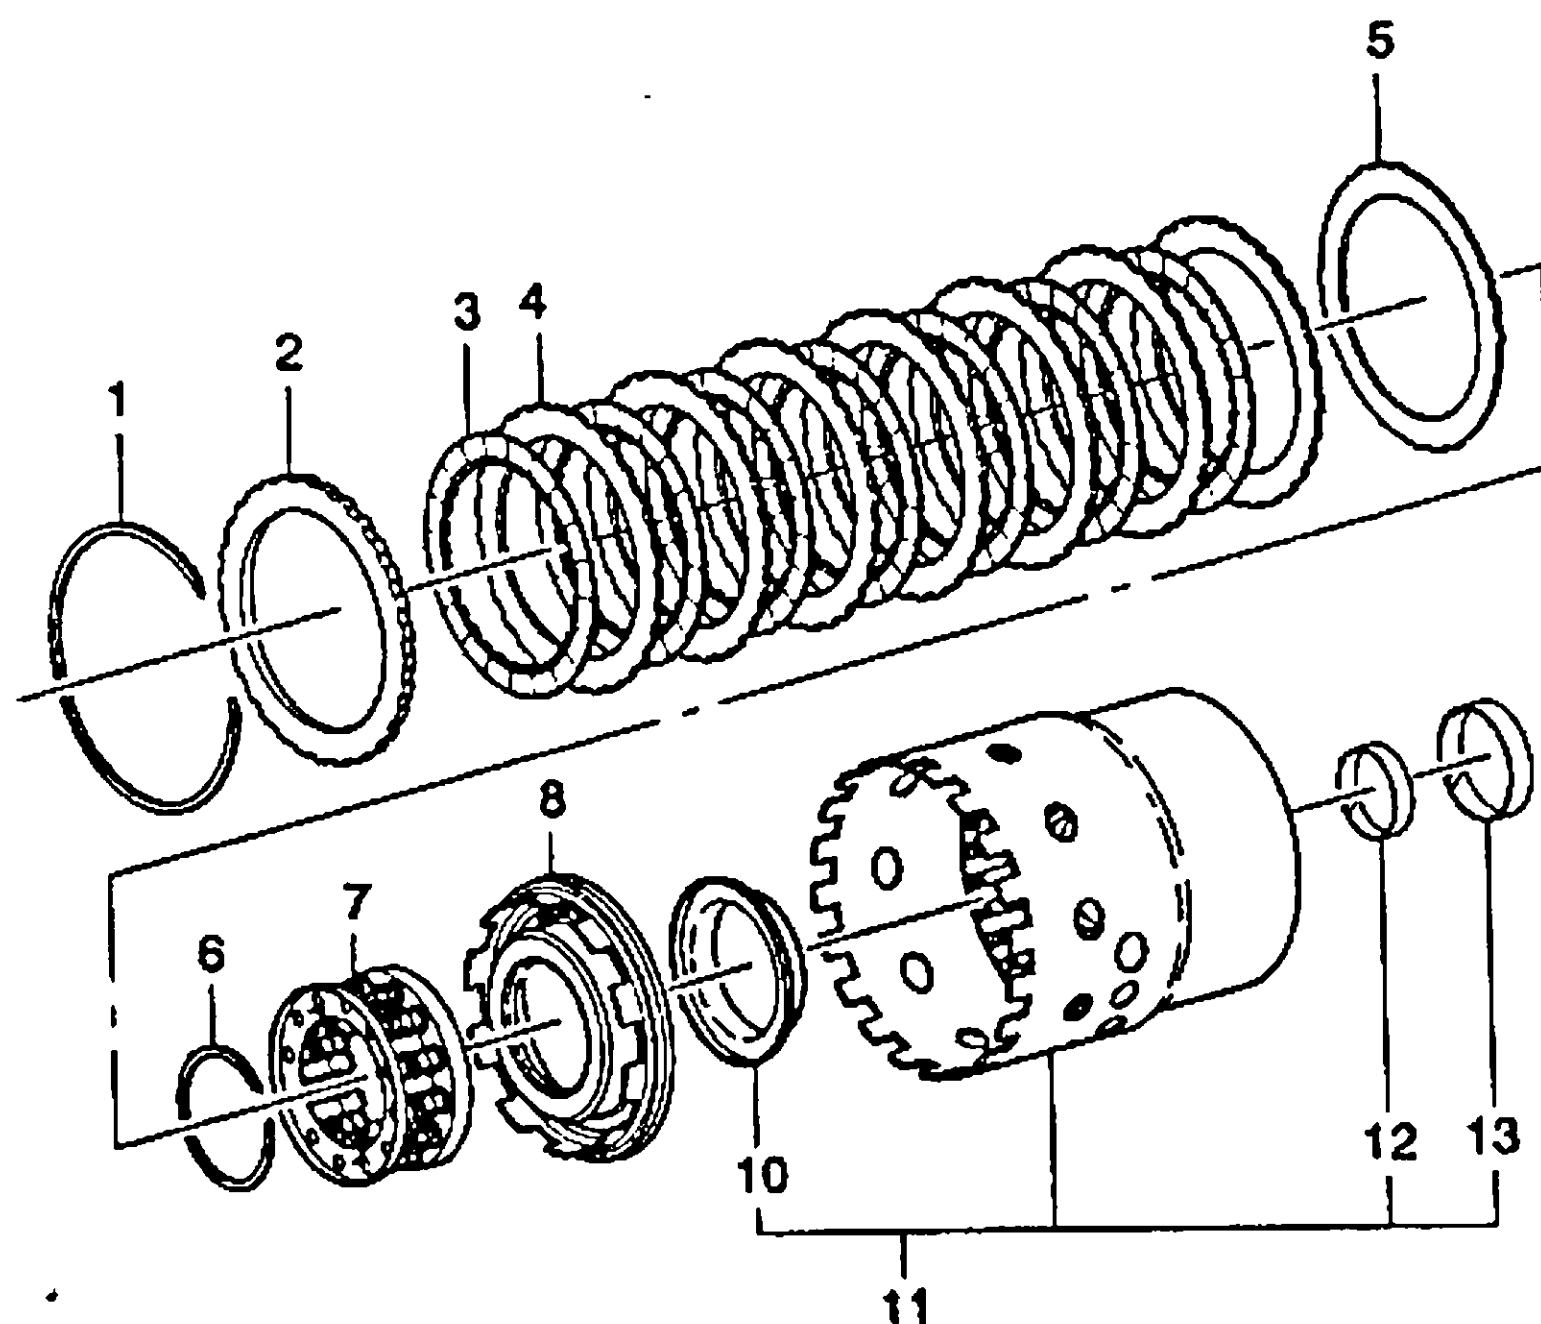

KEY NO.		PART NAME												P / CODE	
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS		
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)RING-SNAP (D)RING								(F)ANNEAU (S)ANILLO					
	08684893	. A B B B O O O								1					
	[02]	(E)PLATE-FWD CLUTCH(BACK'G) (D)PLATTE,SCHEIBEN-KUPPLUNG								(F)PLAQUE-EMBAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO					
	24200595	. A B B B O O O								1					
	[03]	(E)PLATE-FWD CLUTCH(FIBER) (D)PLATTE,SCHEIBEN-KUPPLUNG								(F)PLAQUE-EMBAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO					
	08684445	. A B B B O O O								7					
	[04]	(E)PLATE-FWD CLUTCH(STEEL) (D)PLATTE,SCHEIBEN-KUPPLUNG								(F)PLAQUE-EMBAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO					
	08684444	. A B B B O O O								7					
	[05]	(E)PLATE-FWD CLUTCH(WAVED) (D)PLATTE,SCHEIBEN-KUPPLUNG								(F)PLAQUE-EMBAYAGE A DISQUE (S)PLACA-EMBRAGUE DISCO					
	24200467	. A B B B O O O								1					
	[06]	(E)RING-SNAP (D)RING								(F)ANNEAU (S)ANILLO					
	08684443	. A B B B O O O								1					
	[07]	(E)SPRING (D)FEDERUNG								(F)RESSORT (S)RESORTE					
	08684712	. A B B B O O O								1					
Y	24208652	. A B B B O O O								1					
	[08]	(E)PISTON A-FWD CLUTCH (D)KOLBEN								(F)PISTON (S)PISTON					
	24208641	. A B B B O O O								1					
	[10]	(E)SEAL & SLEEVE A (D)DICHTUNG								(F)JOINT (S)SELLO					
	24208642	. A B B B O O O								1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

3533 FORWARD CLUTCH ASSEMBLY


4H08

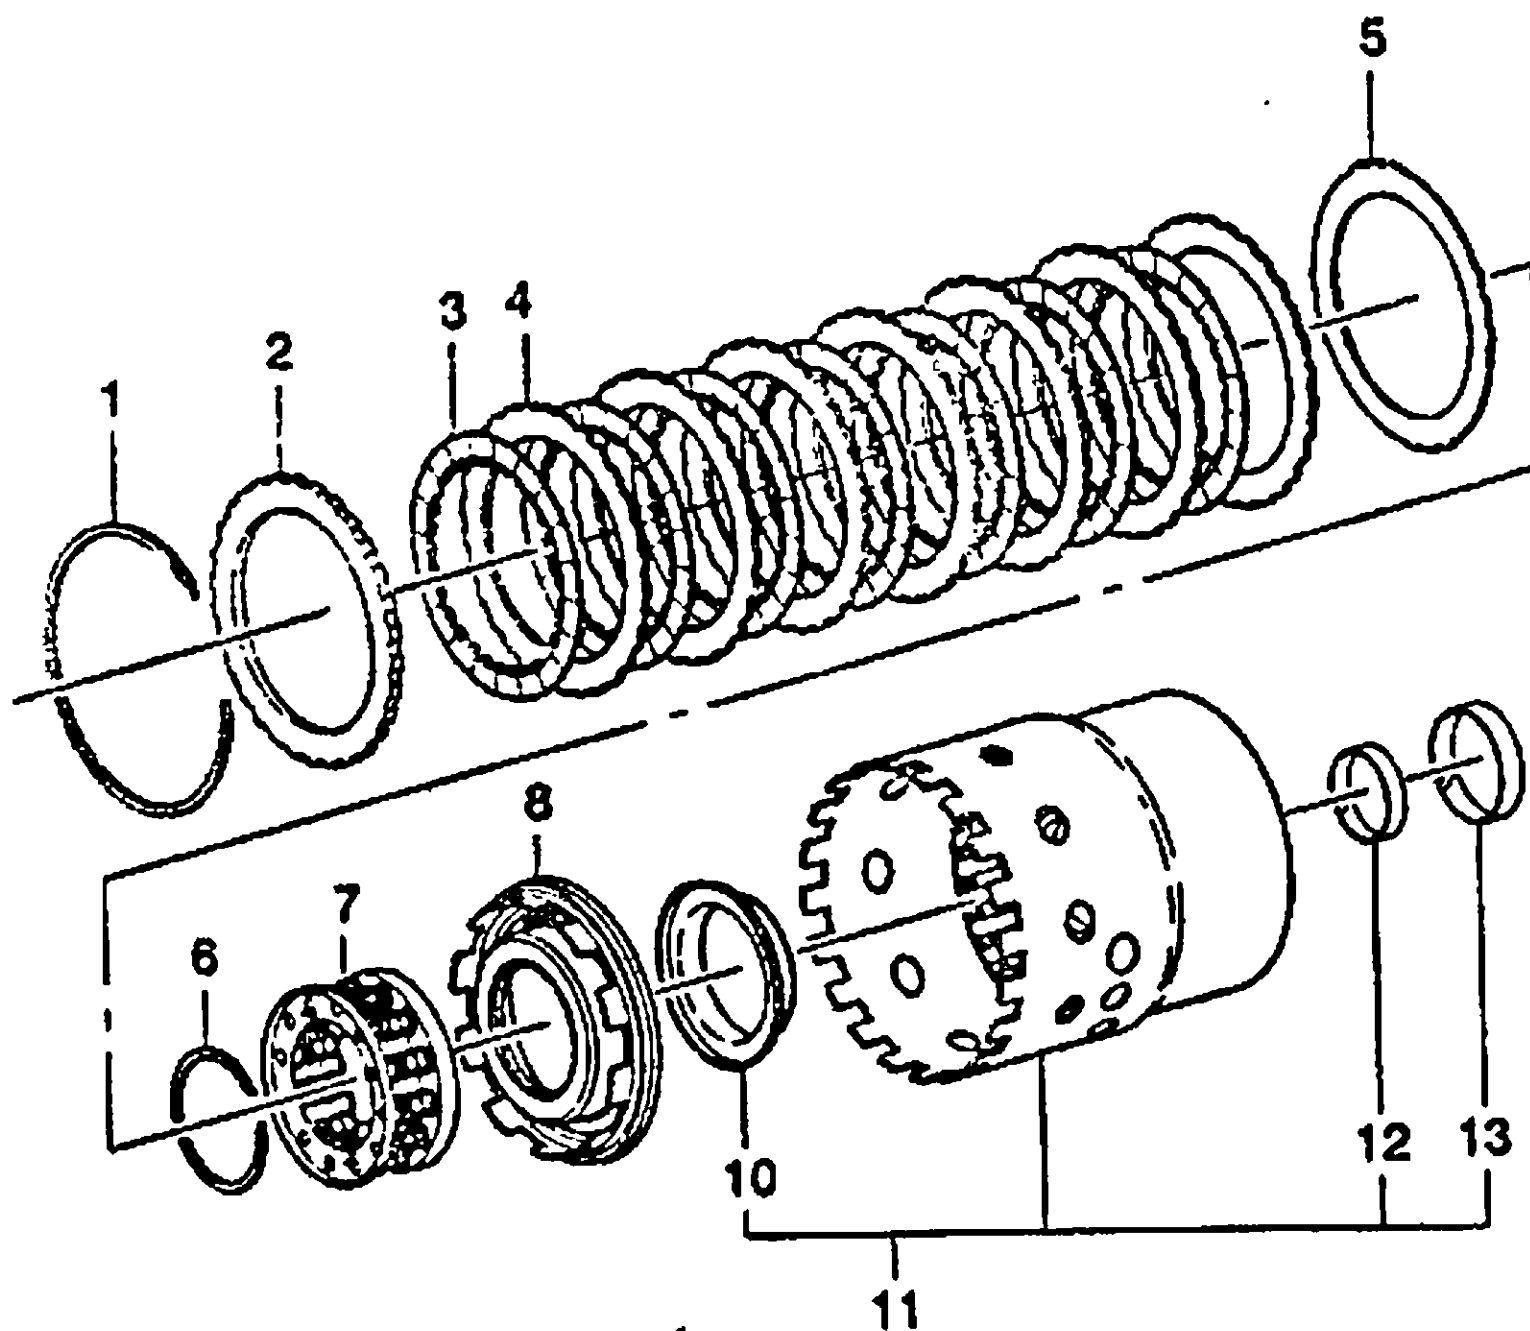

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N H	3 H	5 H	S S								S S
	[11]	(E)HOUSING-FWD CLUTCH (D)GEHÄUSE									(F)LOGEMENT (S)CARCASA				
	24208640	.	A	B	B	B	O	O	O			1			
	[12]	(E)BUSHING (D)LAGERFUTTER									(F)MANCHON (S)BUJE				
	08684390	.	A	B	B	B	O	O	O			1			
	[13]	(E)BUSHING (D)LAGERFUTTER									(F)MANCHON (S)BUJE				
	08684389	.	A	B	B	B	O	O	O			1			

3535 FORWARD CLUTCH SUPPORT ASSEMBLY


4J08

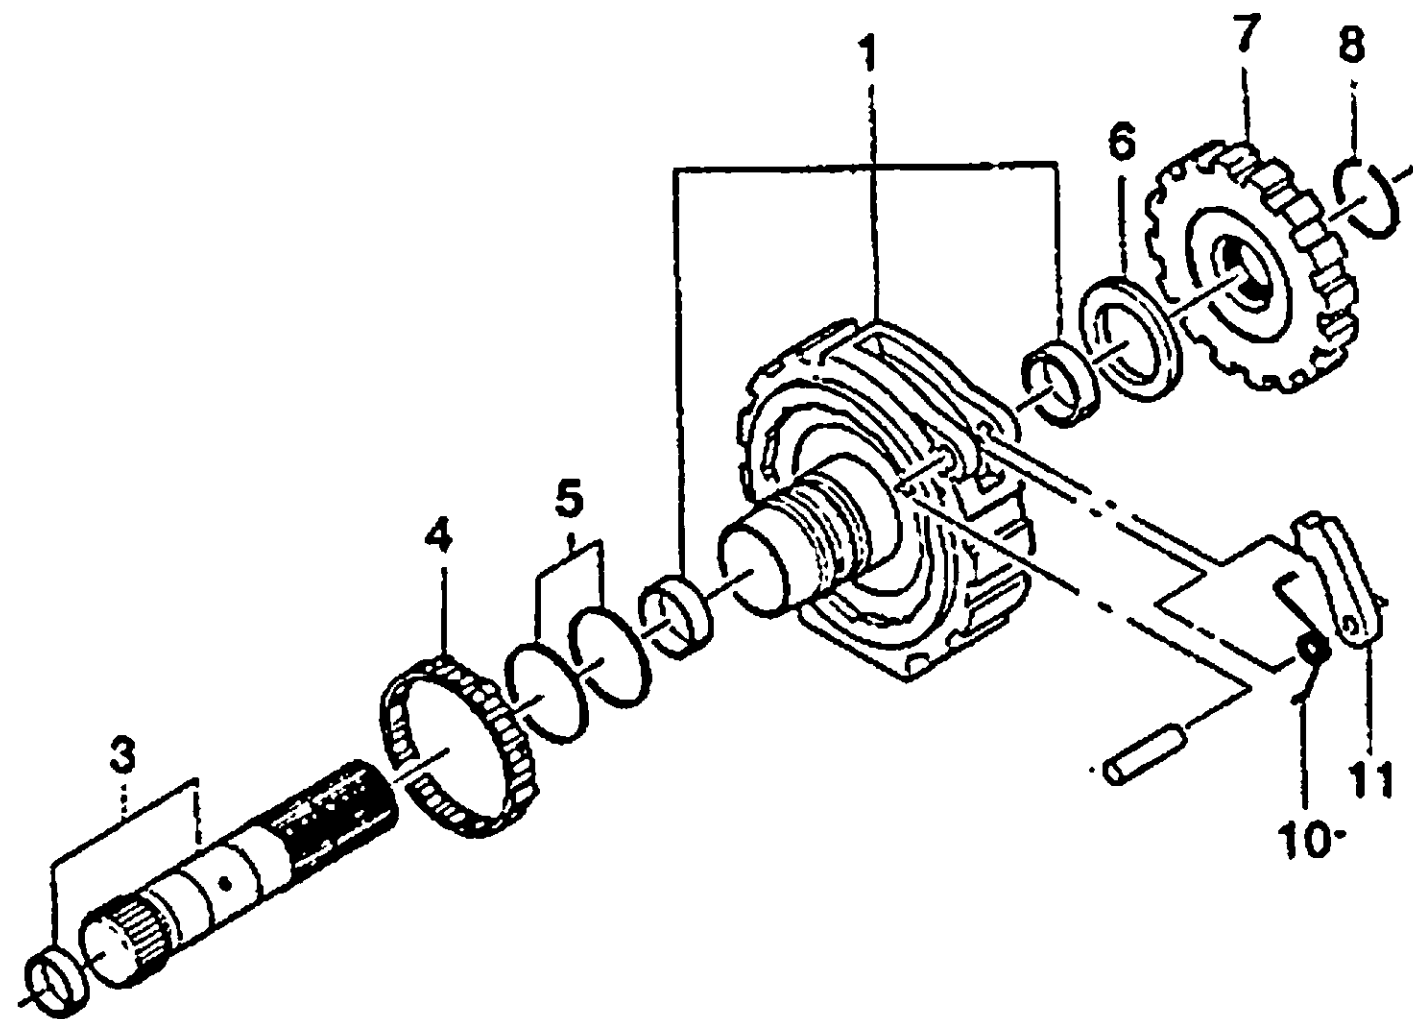

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L I T Y	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01] 24204222	(E)SUPPORT A-FORWARD CLUTCH (D)TRÄGER									(F)SUPPORT (S)SOPORTE		NOT APPLIED			
	24204810	. A B B B O O O								1						
	[03] 24201609	(E)SHAFT-FINAL DRIVE SUN (D)SPINDEL									(F)ARBRE (S)EJE					
	24201609	. A B B B O O O								1						
	[04] 00930694	(E)ROLLER-FWD CLUTCH (D)ROLLE									(F)ROULEAU (S)RODILLO					
	00930694	. A B B B O O O								1						
	[05] 24204223	(E)RING-OIL SEAL (D)RING									(F)ANNEAU (S)ANILLO					
	24204223	. A B B B O O O								2						
	[06] 24200246	(E)BEARING-THRUST (D)KUGELLAGER									(F)ROULEMENT (S)COJINET					
	24200246	. A B B B O O O								1						
	[07] 24204708	(E)GEAR-PARK LOCK (D)GETRIEBE									(F)ENGRENAGE (S)ENGRANAJE					
	24204708	. A B B B O O O								1						
	[08] 08684580	(E)RING-SNAP (D)RING									(F)ANNEAU (S)ANILLO					
	08684580	. A B B B O O O								1						
	[10] 24200129	(E)SPRING-PARK PAWL (D)FEDERUNG									(F)RESSORT (S)RESORTE					
	24200129	. A B B B O O O								1						
	[11] 24200797	(E)PAWL-PARK (D)SPERRHACKEN									(F)CLIQUET (S)RETEN					
	24200797	. A B B B O O O								1						
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

3550 DRIVEN SPROCKET SUPPORT ASSEMBLY


4K08

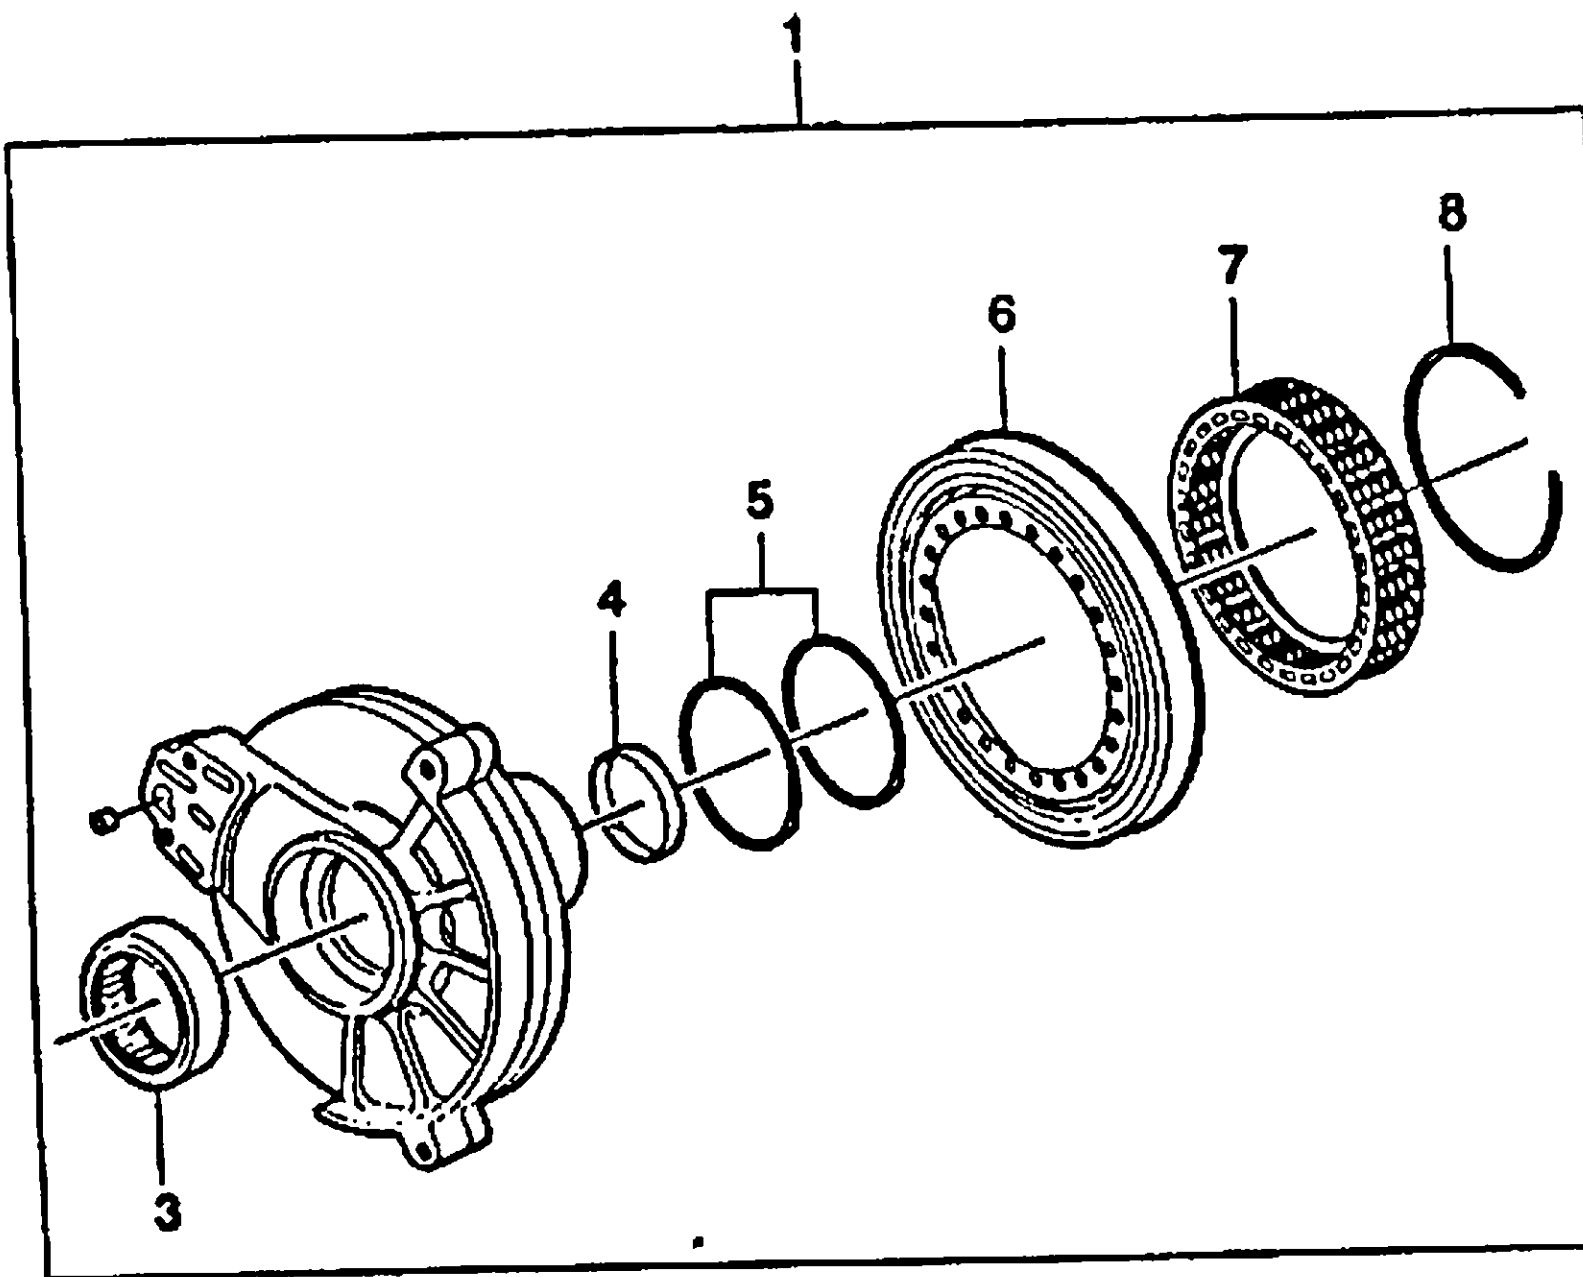


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N H	3 H	5 H	S S								S S
	[01] 24207143	(E)SUPPORT A-DRIVEN SPROCKET (D)TRÄGER	.	A	B	B	B	O	O	O	(F)SUPPORT (S)SOPORTE	1			
	[03] 08631190	(E)BEARING-THRUST (D)KUGELLAGER	.	A	B	B	B	O	O	O	(F)ROULEMENT (S)COJINET	1			
	[04] 08684330	(E)BUSHING-DRVN SPROCKET SUP (D)LAGERFUTTER	.	A	B	B	B	O	O	O	(F)MANCHON (S)BUJE	1			
	[05] 24201613	(E)SEAL (D)DICHTUNG	.	A	B	B	B	O	O	O	(F)JOINT (S)SELLO	2			
	[06] 24205042	(E)PISTON-2ND CLUTCH (D)KOLBEN	.	A	B	B	B	O	O	O	(F)PISTON (S)PISTON	1			
	[07] 08684327	(E)SPRING-2ND CLUTCH (D)FEDERUNG	.	A	B	B	B	O	O	O	(F)RESSORT (S)RESORTE	1			
	[08] 08684325	(E)RING-2ND CLUTCH SPRING RE (D)RING	.	A	B	B	B	O	O	O	(F)ANNEAU (S)ANILLO	1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 5 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

3570 PARK LOCK AND DETENT LEVER


4L08

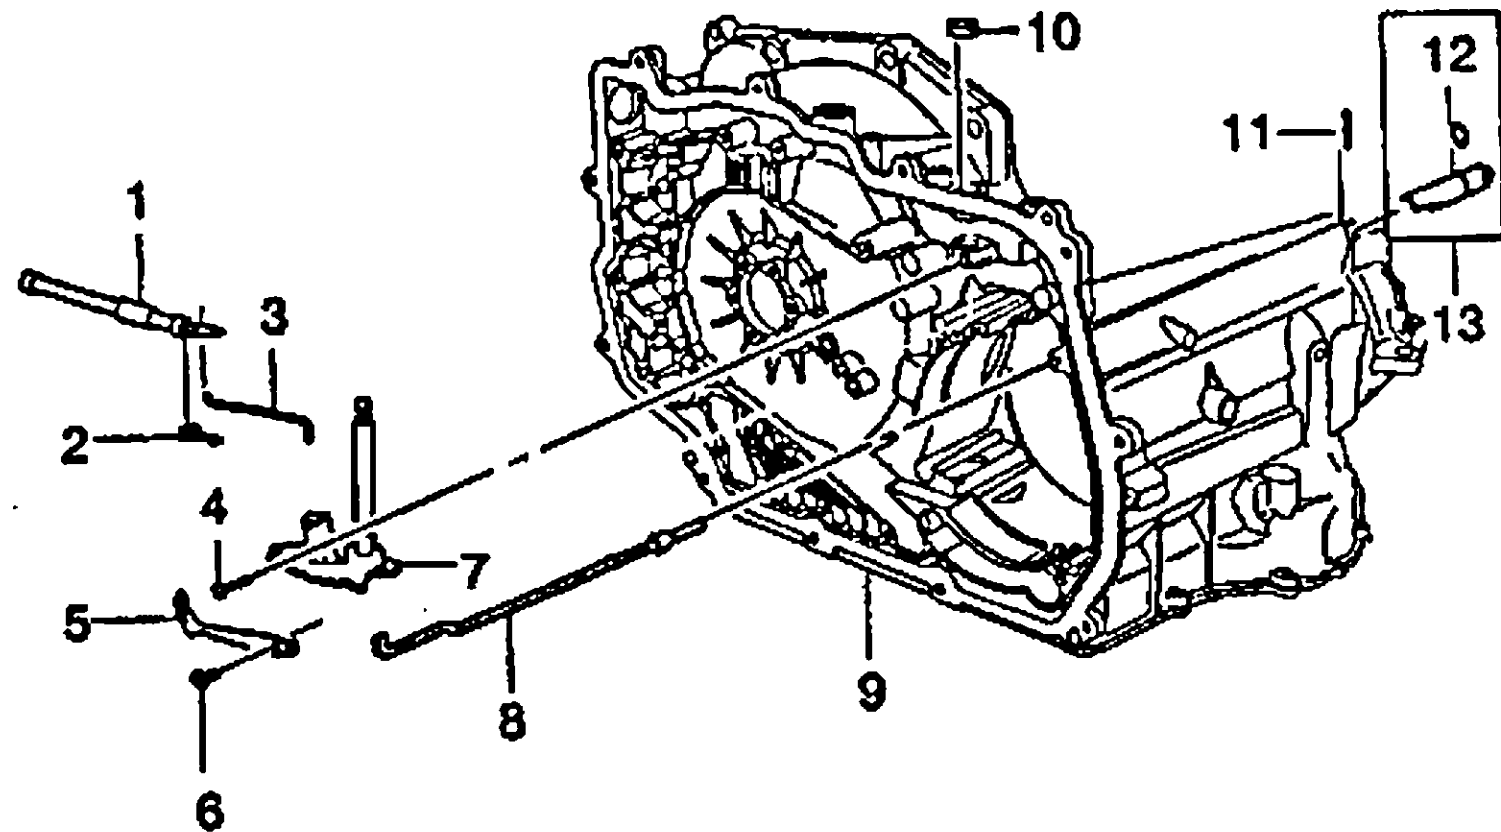


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL			FROM	TO				
				4 N	3 H	5 H	S S							S S	S X
	[01] 24201006	(E) VALVE-MAIN (D) VENTIL . A B B B O O O							(F) SOUPAPE (S) VALVULA 1						
	[02] 24207209	(E) RETAINER (D) KLEMME, HALTERUNG . A B B B O O O							(F) ATTACHE-ARRETOIR (S) GRAPA-RETENEDOR 1						
	[03] 08685147	(E) LINK-MANUAL VALVE (D) VERBINDUNG . A B B B O O O							(F) ACOUPLEMENT (S) ENLACE 1						
	[04] 08685700	(E) PIN-MANUAL SHAFT (D) STIFT . A B B B O O O							(F) BROCHE (S) PASADOR 1						
	[05] 24204221	(E) DETENT-MANUAL SHAFT (D) SPERRHACKEN . A B B B O O O							(F) CLIQUET (S) RETEN 1						
	[06] 24200092	(E) BOLT (D) SCHRAUBE . A B B B O O O							(F) BOULON (S) PERNO 1			M6X1,0X15mm			
	[07] 24203588	(E) LEVER&SHAFT A (D) HEBEL . A B B B O O O							(F) LEVIER (S) PALANCA 1						
	[08] 24202424	(E) ACTUATOR-PARKING LOCK (D) BETÄTIGUNG . A B B B O O O							(F) ACTIONNEUR (S) ACTUADOR 1						
	[10] 08644709	(E) SEAL-MANUAL SHAFT (D) DICHTUNG . A B B B O O O							(F) JOINT (S) SELLO 1						
	[11]	(E) PIN-ACTUATOR GUIDE SPRING (D) STIFT							(F) BROCHE (S) PASADOR						
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC = COMMON			M = MANUAL T/A A = AUTOMATIC T/A = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

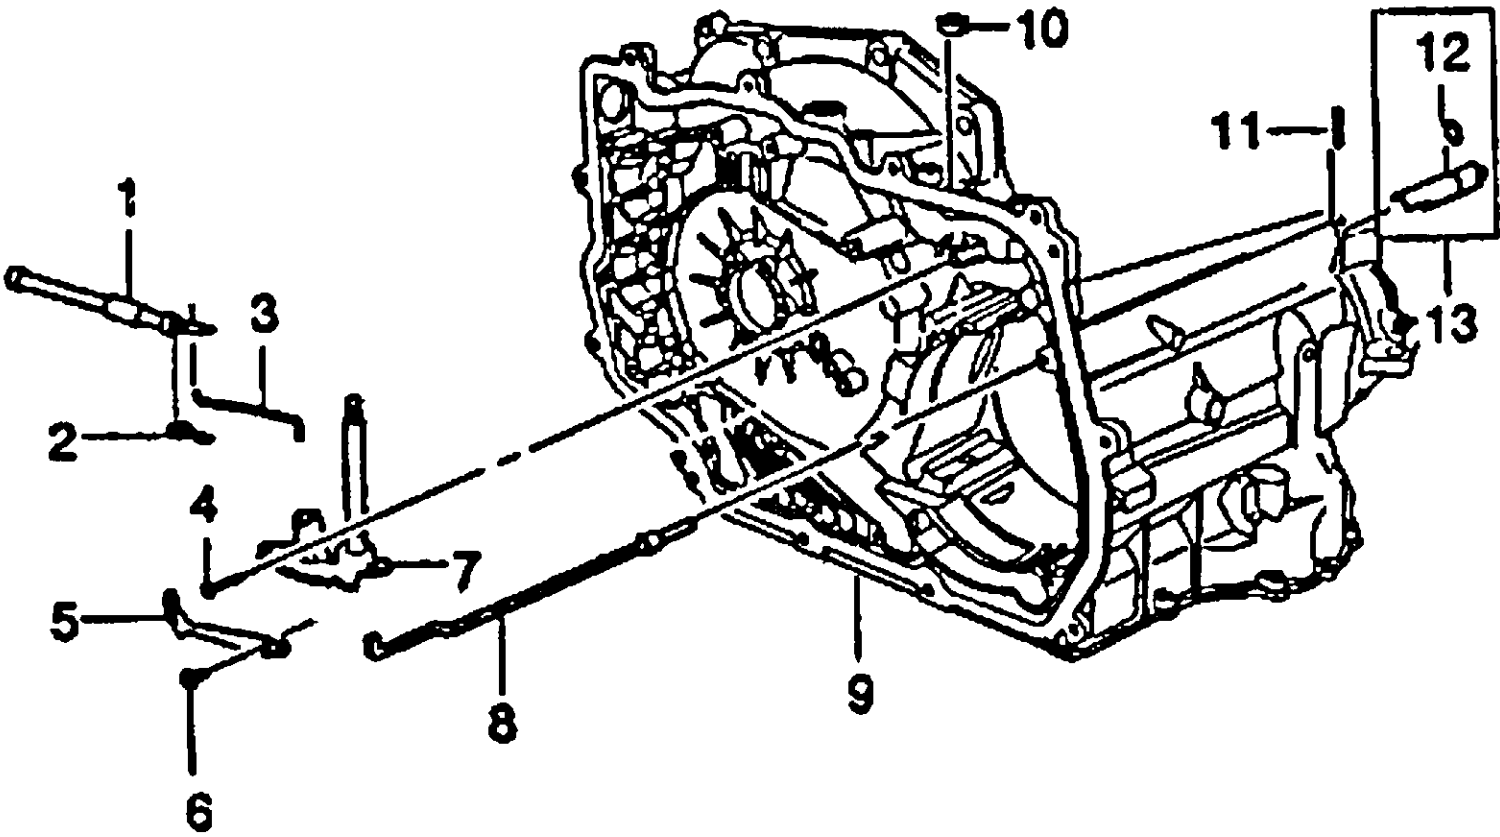

KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S E								S X
	09427406	.	A	B	B	B	O	O	O		1					
	[12]										(F)JOINT					
											(S)SELLO					
	08675086	.	A	B	B	B	O	O	O		1					
	[13]										(F)GUIDE					
											(S)GUIDE					
	08675325	.	A	B	B	B	O	O	O		1					

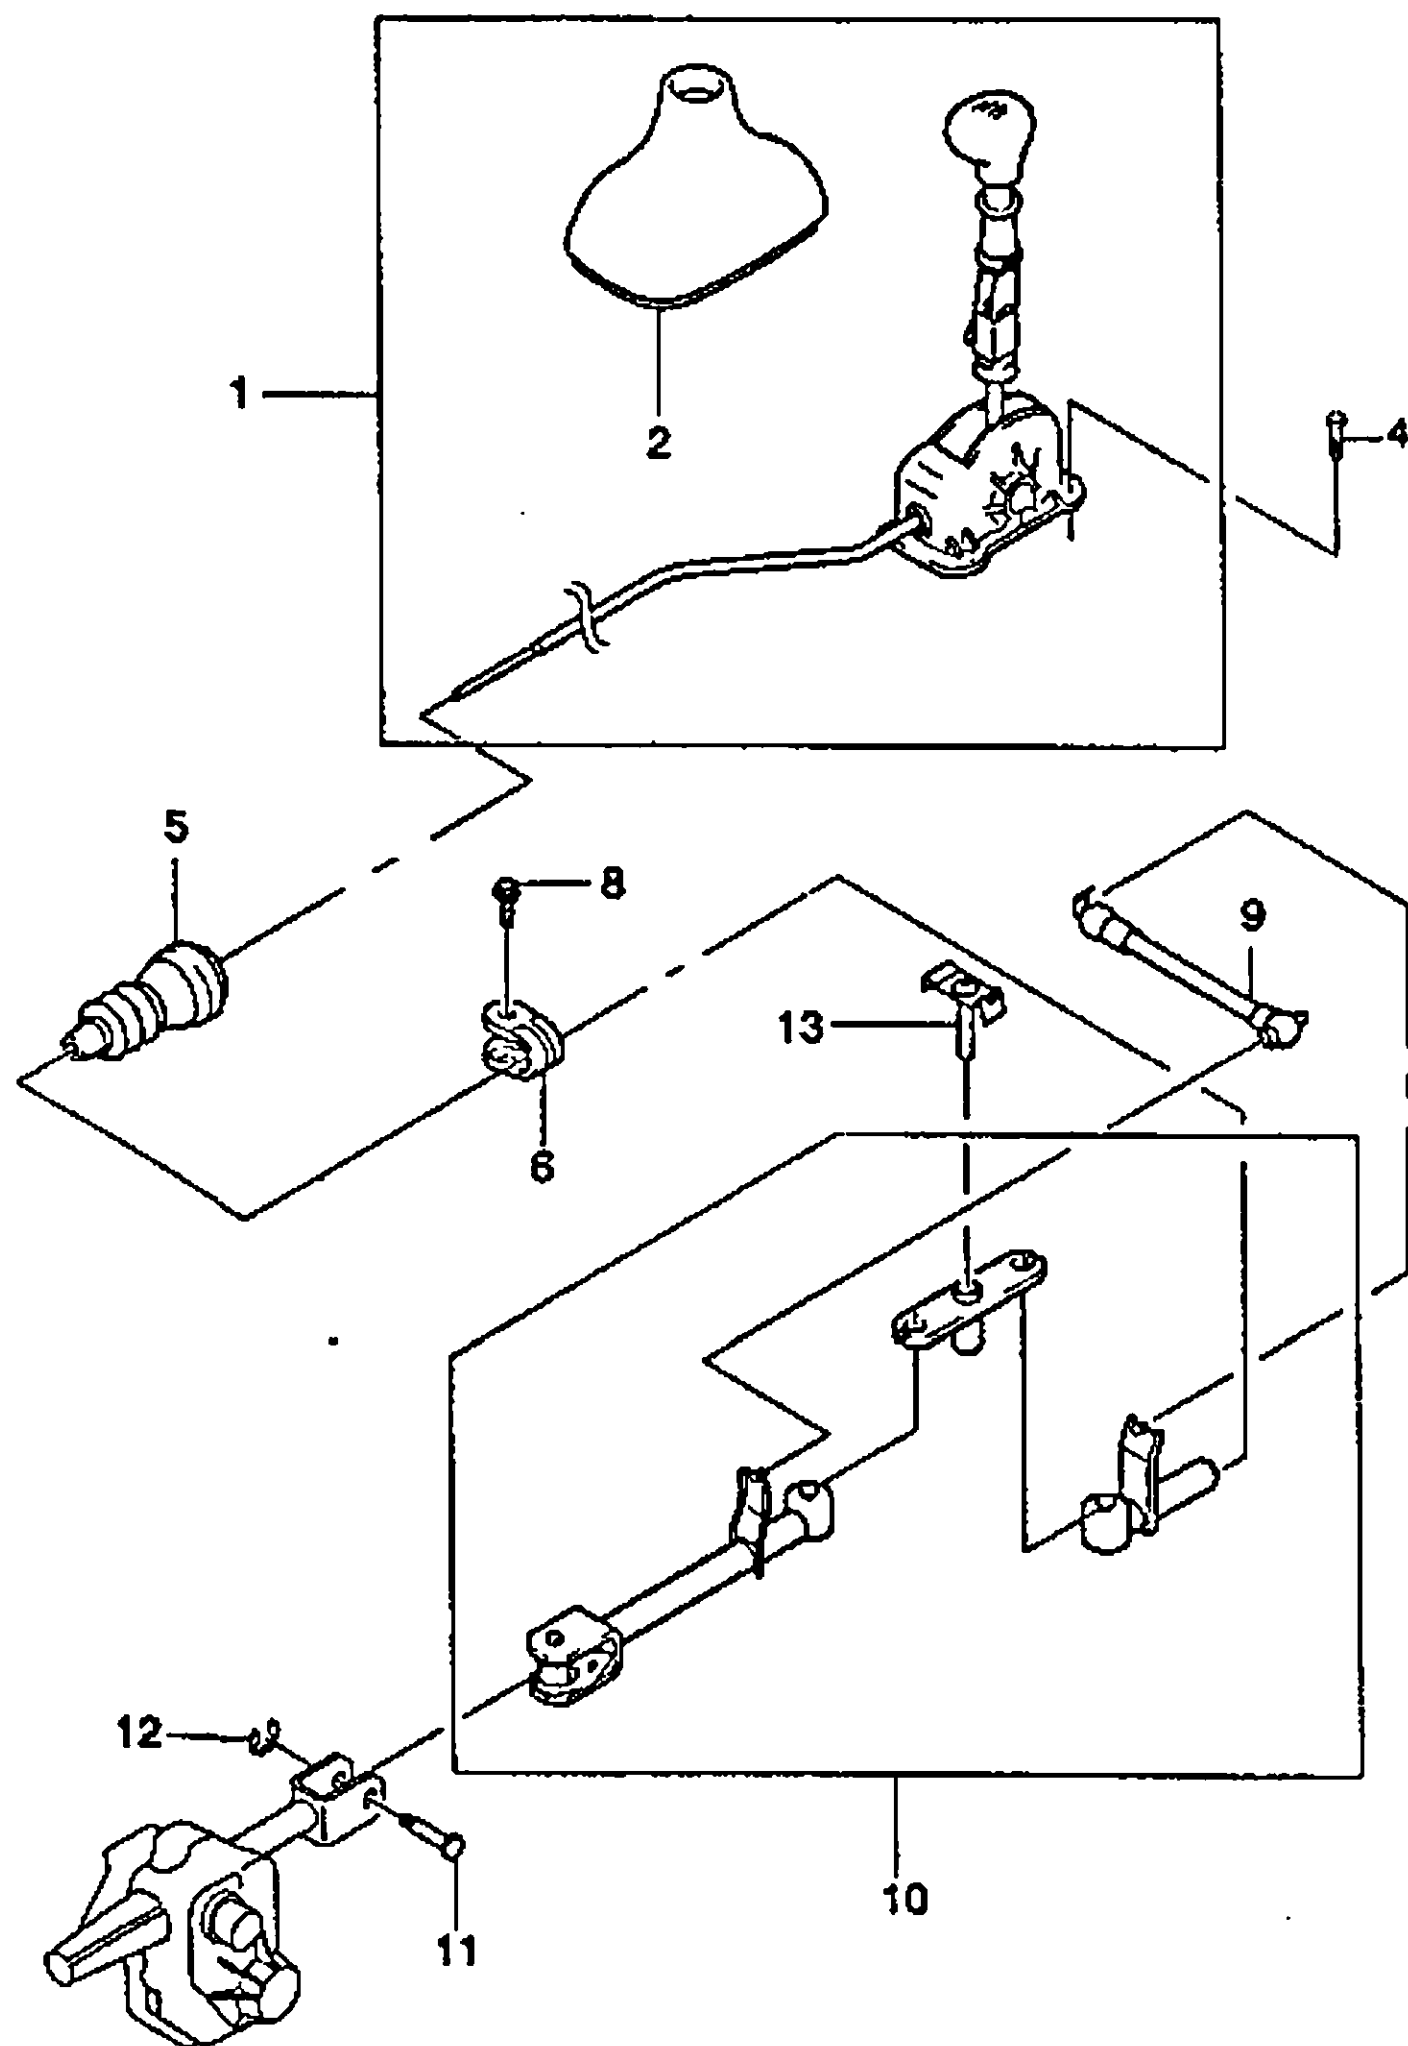


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					F R O M	T O			
				4 N	3 H	5 H	S S	S S								S X
[01]	96244989	(E)CONTROL	A-GEARSHIFT							(F)CONTROLE		(S)CONTROL-PALANCA DE CAMBIO				
		(D)STEUERUNG,	GANGSCHALTUNG													
		. M	B	B	B	S	S	S			1					
[02]	96303182	(E)BOOT A-CONSOLE								(F)GAINE-CONSOLE		(S)CAPUCHON-GABINETE				
		(D)KOFFERRAUM,KONSOLE														
		. M	B	B	B	S	S	S			1					
[04]	09119-06002	(E)BOLT								(F)BOULON		(S)PERNO				
		(D)SCHRAUBE														
		. M	B	B	B	S	S	S			4					
[05]	96133781	(E)BELLOWS A-GEARSHIFT TUBE								(F)SOUFFLET-TUBE		(S)FUELLE				
		(D)GEBLÄSE														
		. M	B	B	B	S	S	S			1					
[06]	90217840	(E)CLAMP								(F)PINCE		(S)ABRAZADERA				
		(D)KLAMMER														
		. M	B	B	B	S	S	S			1					
[08]	09117-08001	(E)BOLT								(F)BOULON		(S)PERNO				
		(D)SCHRAUBE														
		. M	B	B	B	S	S	S			1					
[09]	90250156	(E)ROD-GEARSHIFT CONTROL								(F)TRINGLE		(S)VARILLA-PALANCA DE CAMBIO				
		(D)STAB														
		. M	B	B	B	S	S	S			1					
[10]	90342949	(E)CONTROL A-GEARSHIFT GUIDE								(F)CONTROLE-GUIDE		(S)CONTROL-GUIA				
		(D)STEUERUNG,GANGSCHALTUNGS														
		. M	B	B	B	S	S	S			1					
[11]	09208-08001	(E)PIN								(F)BROCHE		(S)PASADOR				
		(D)STIFT														
		. M	B	B	B	S	S	S			1					
[12]		(E)CLIP-RETAINING								(F)ATTACHE		(S)GRAPA				
		(D)KLEMME														
		. M	B	B	B	S	S	S			1					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC		M = MANUAL T/A							4 N = 4 DOOR NOTCHBACK							
6 = 1.6DOHC		A = AUTOMATIC T/A							3 H = 3 DOOR HATCHBACK							
. = COMMON		. = COMMON							5 H = 5 DOOR HATCHBACK							

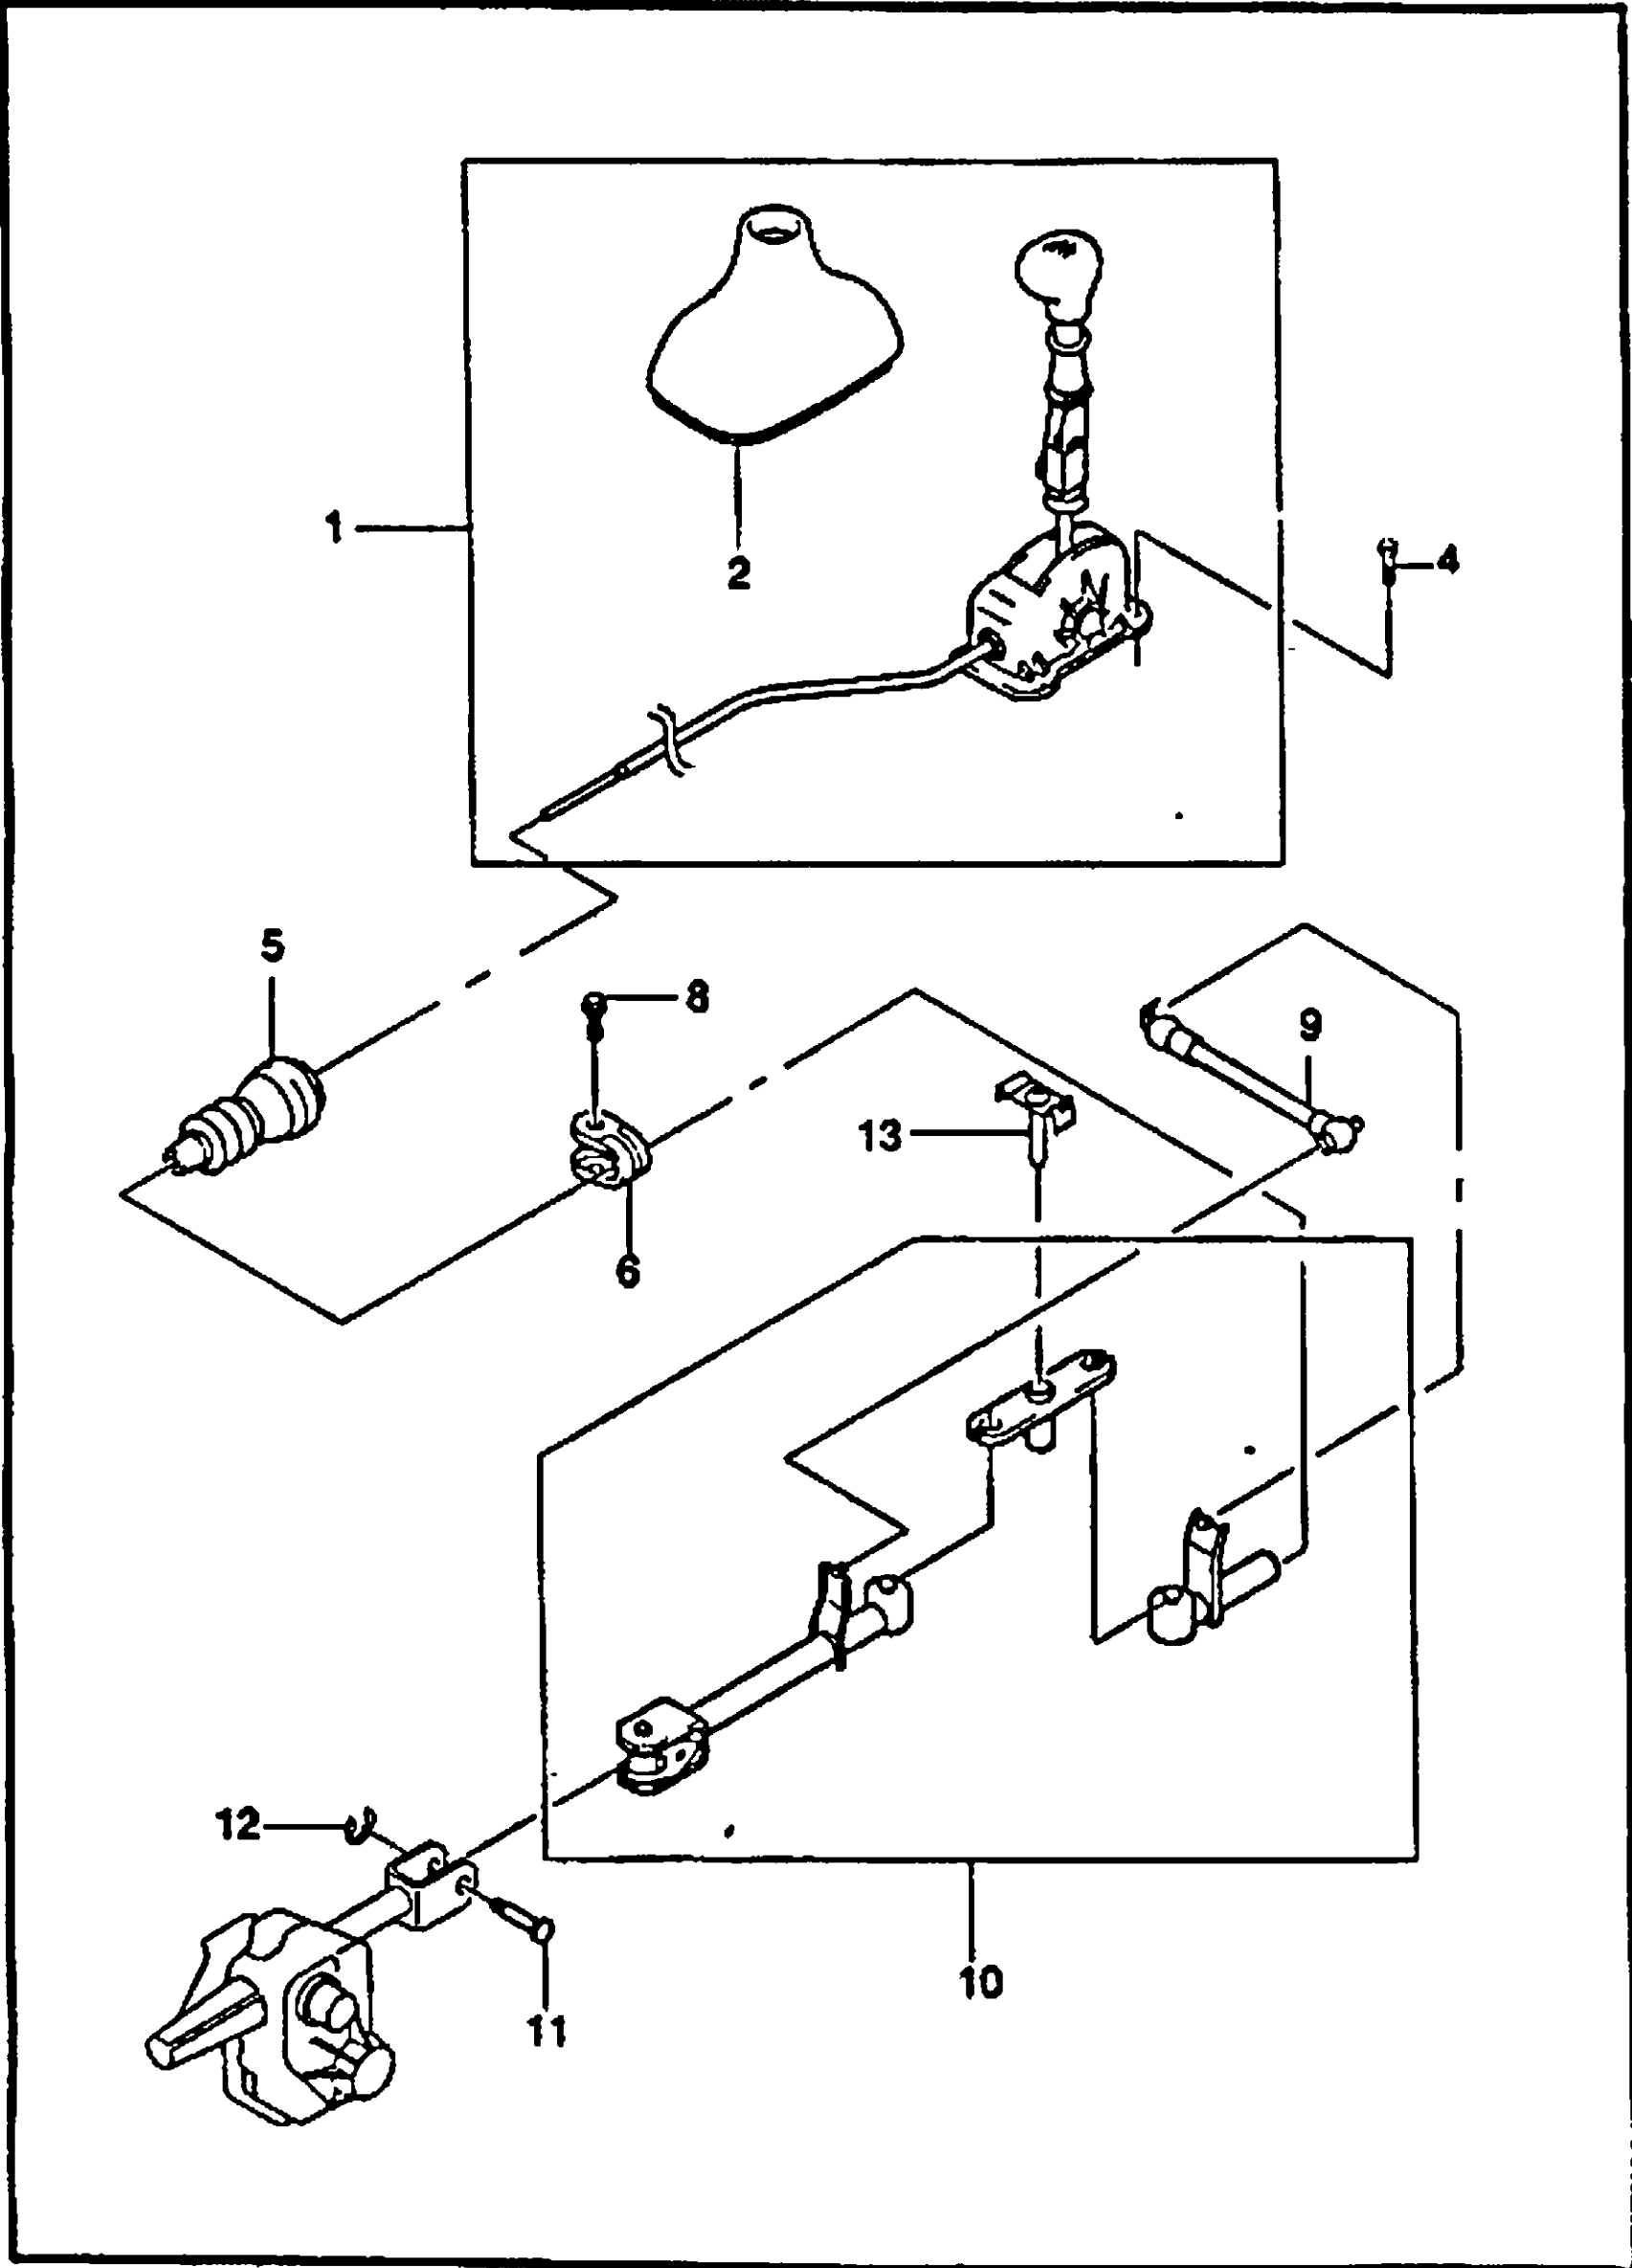


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S
	08335-11069 [13] 96182212	.	M	B	B	B	S	S	S			1 (F)BOULON (S)PERNO 1			


ENG(ENGINE)		T/A(TRANSAXLE)		BODY TYPE	
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON		4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK	

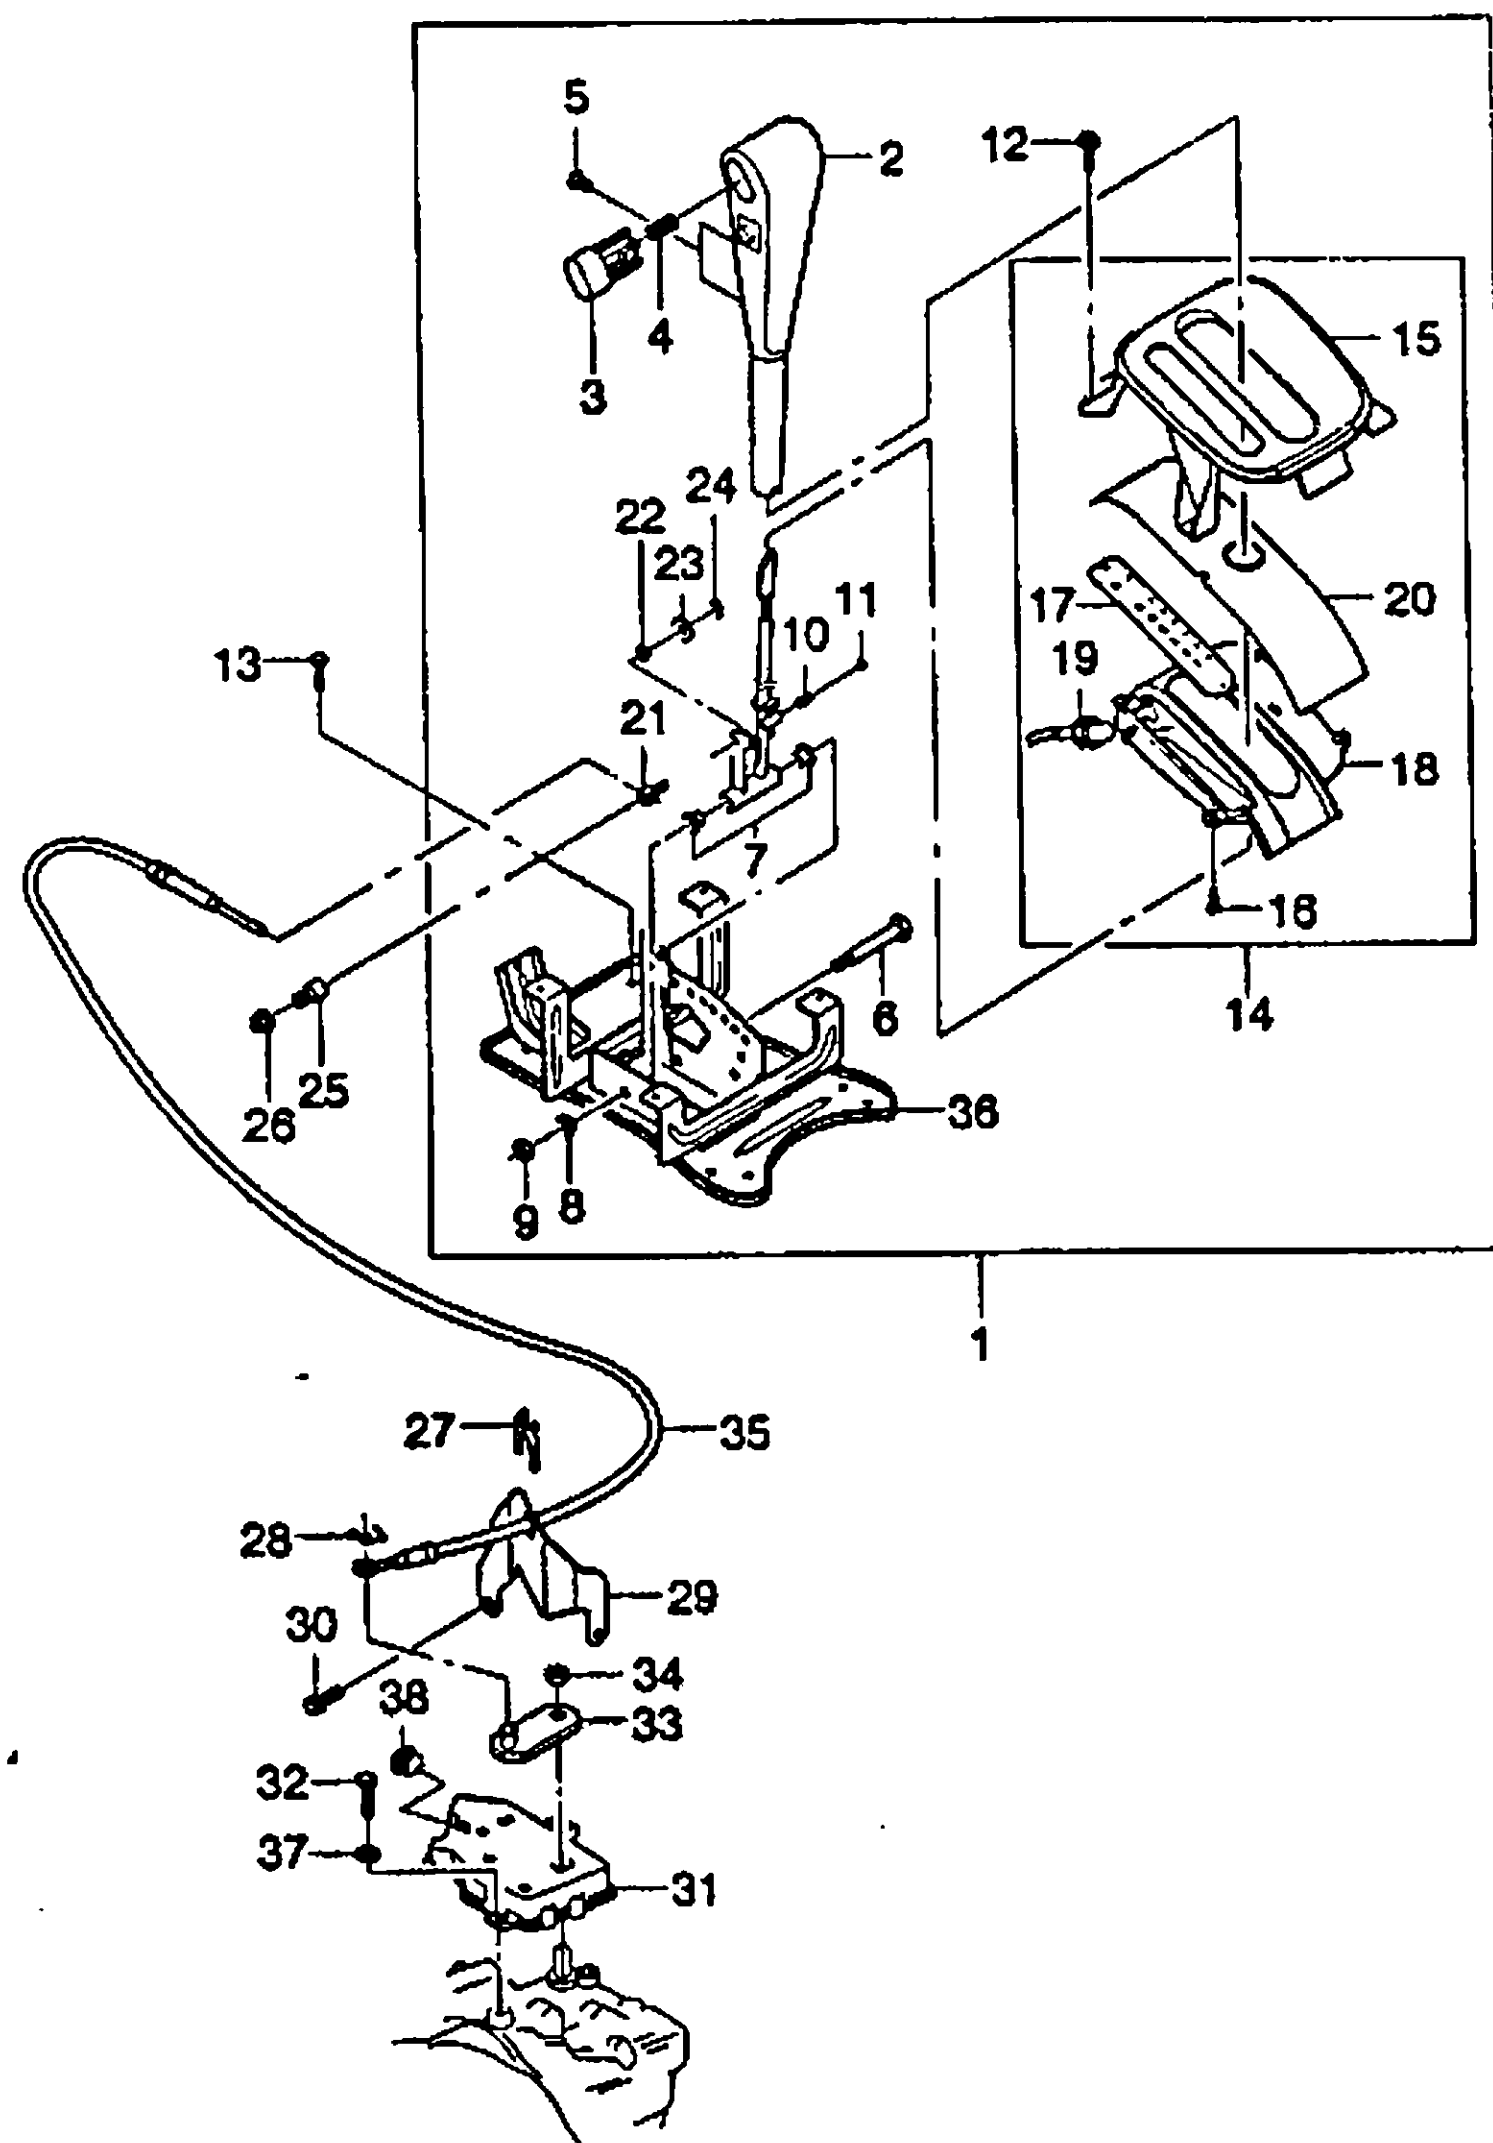


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01] 96228515	(E)CONTROL A-SELECTOR (D)STEUERUNG, WÄHLER . A B B B O O O									(F)CONTROLE-SELECTEUR (S)CONTROL-SELECTOR 1					
	[02] 96242557	(E)HANDLE A-SELECTOR CONTROL (D)HENKEL . A B B B O O O									(F)POIGNEE (S)MANIJA 1					
	[03] 96228514	(E)BUTTON A-SELECTOR CONTROL (D)KNOPF . A B B B O O O									(F)BOUTON (S)BOTON 1					
	[04] 09440-12001	(E)SPRING (D)FEDERUNG . A B B B O O O									(F)RESSORT (S)RESORTE 1					
	[05] 09127-04003	(E)SCREW (D)SCHRAUBE . A B B B O O O									(F)VIS (S)TORNILLO 2					
	[06] 96228503	(E)PIECE (D)TEIL . A B B B O O O									(F)PIECE (S)PIEZA 1					
	[07] 09306-10004	(E)BUSHING (D)LAGERFUTTER . A B B B O O O									(F)MANCHON (S)BUJE DE BOQUILLA 2					
	[08] 08321-31083	(E)WASHER-SPRING (D)DICHTUNGSRING . A B B B O O O									(F)RONDELLE (S)ARANDELA 1					
	[09] 08310-22083	(E)NUT-HEXAGON (D)MUTTER . A B B B O O O									(F)ECROU (S)TUERCA 1					
	[10]	(E)SPRING (D)FEDERUNG									(F)RESSORT (S)RESORTE					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

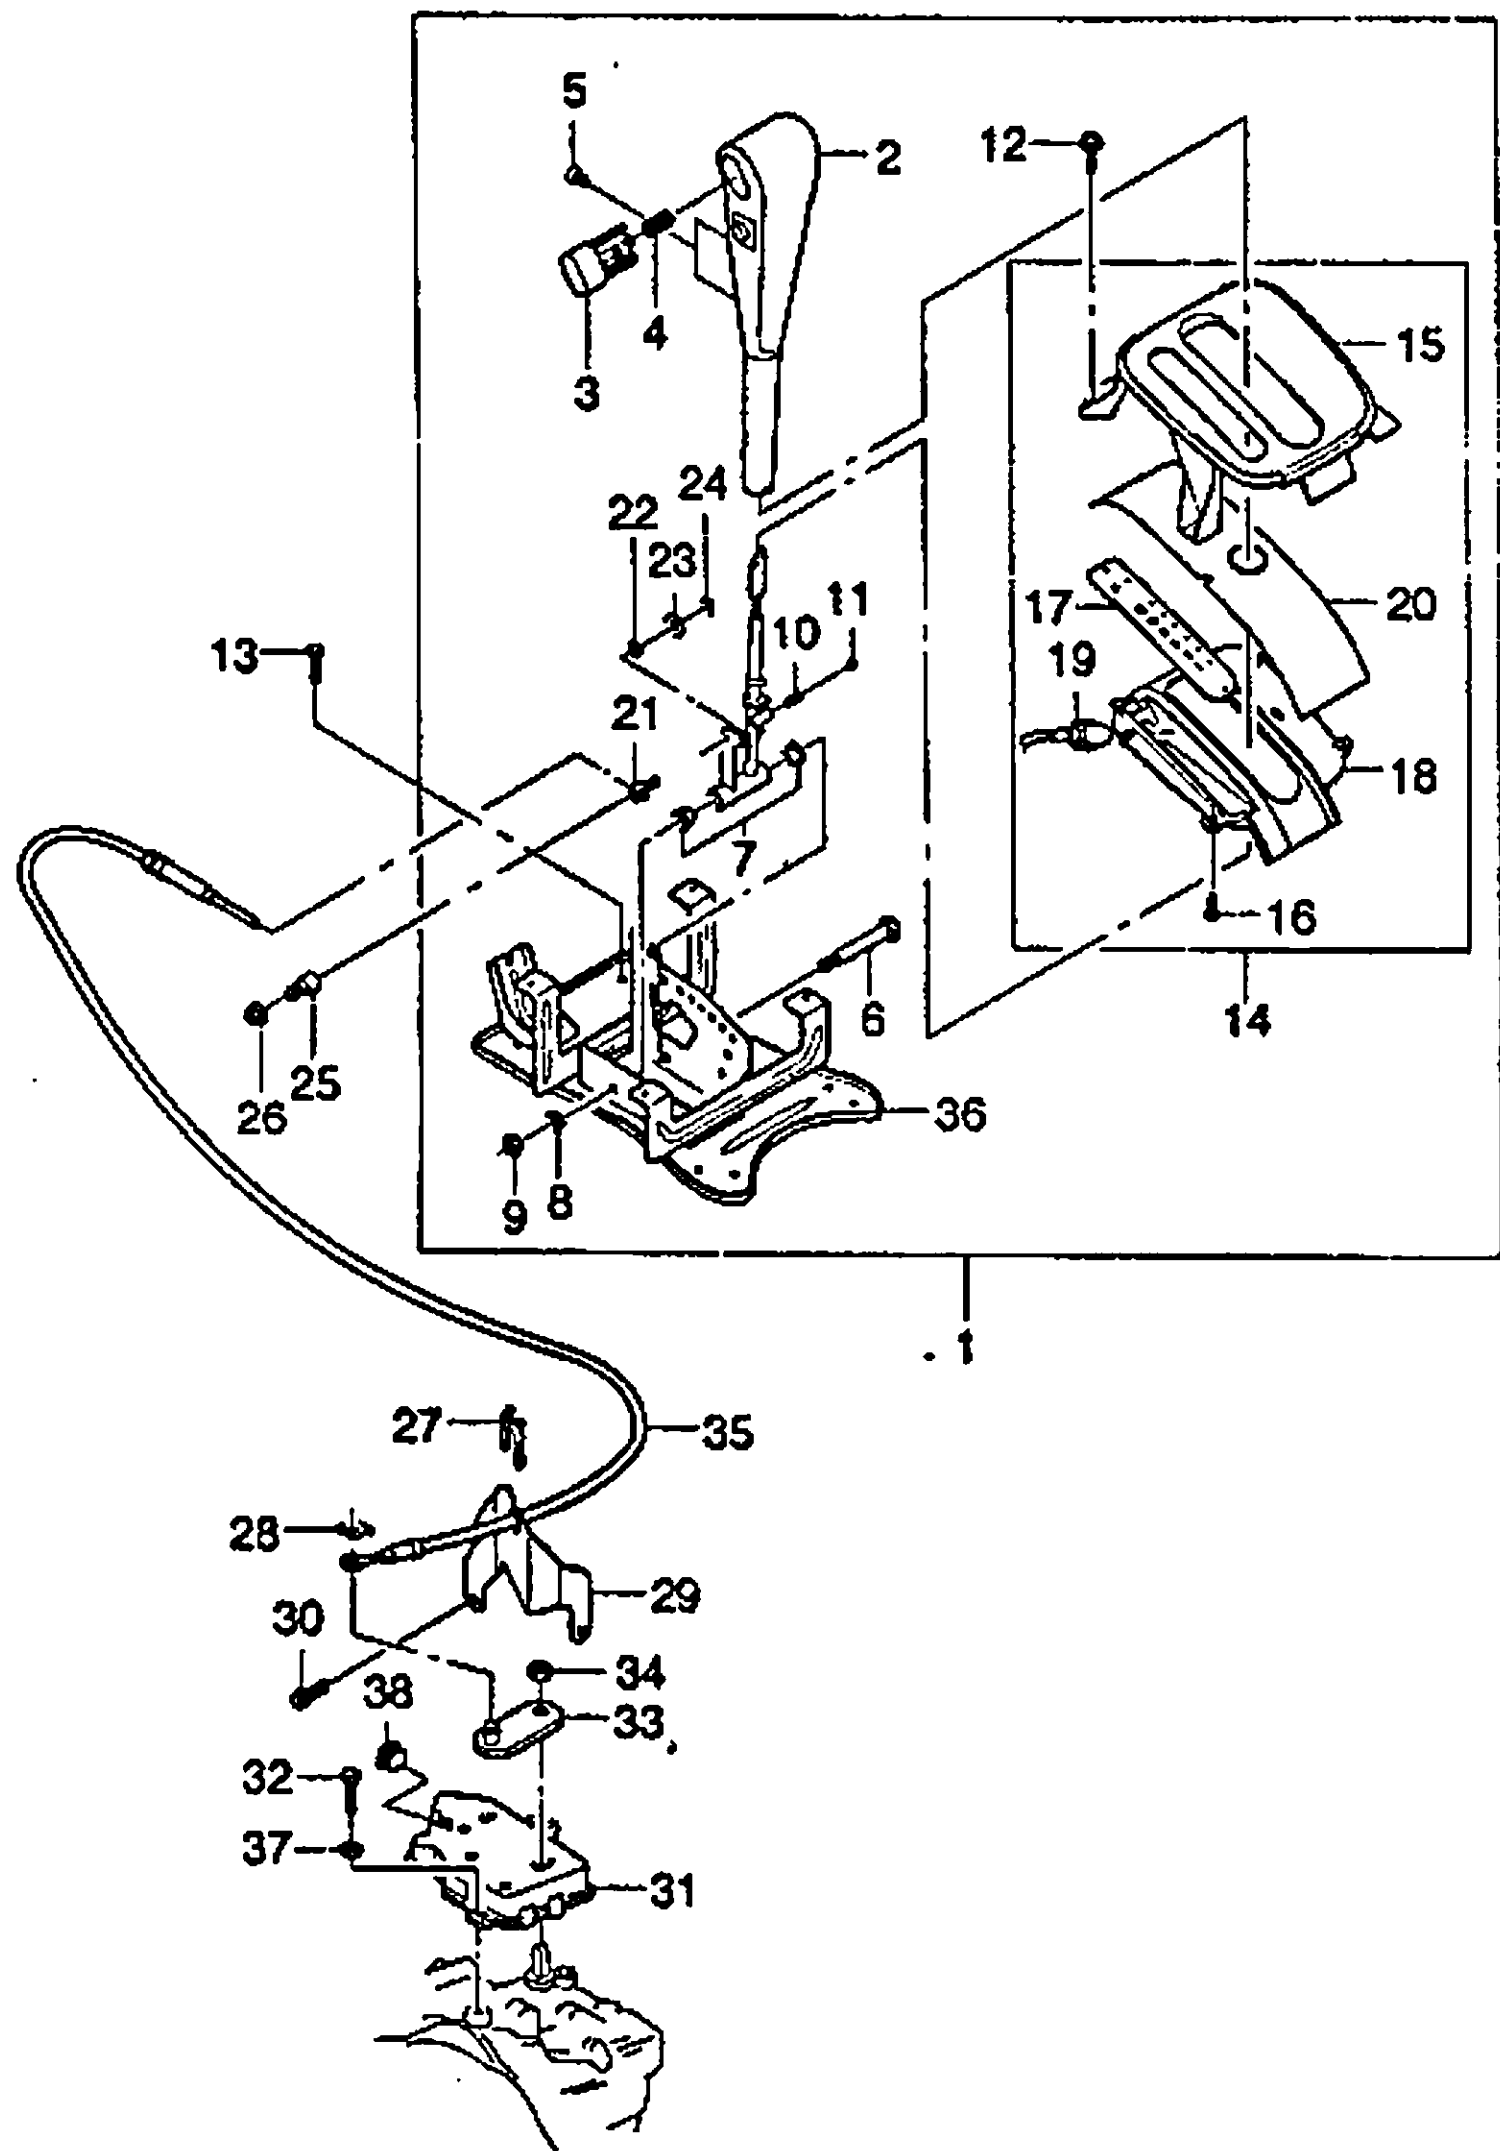


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	09440-07001	.	A	B	B	B	O	O		1					
	[11]									(F)BOULE (S)BOLA					
	06112-10004	.	A	B	B	B	O	O		1					
	[12]									(F)VIS (S)TORNILLO					
	02114-14108	.	A	B	B	B	O	O		4					
	[13]									(F)BOULON (S)PERNO					
	09119-06002	.	A	B	B	B	O	O		4					
	[14]									(F)CHAPEAU-CONSOLE,AUTO (S)TAPA-CONSOLA,AUTO					
	96236784	.	A	B	B	B	O	O		1					
	[15]									(F)CHAPEAU-CONSOLE,AUTO (S)TAPA-CONSOLA,AUTO					
	96236787	.	A	B	B	B	O	O		1					
	[16]									(F)VIS (S)TORNILLO					
	03140-42095	.	A	B	B	B	O	O		4					
	[17]									(F)BALANCE-CONSOLE (S)ESCALA-CONSOLA					
	96218104	.	A	B	B	B	O	O		1					
	[18]									(F)CHAPEAU-CONSOLE,AUTO (S)TAPA-CONSOLA,AUTO					
	96236790	.	A	B	B	B	O	O		1					
	[19]									(F)LAMPE-CONSOLE AVANT (S)LAMPARA					
	96169967	.	A	B	B	B	O	O		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

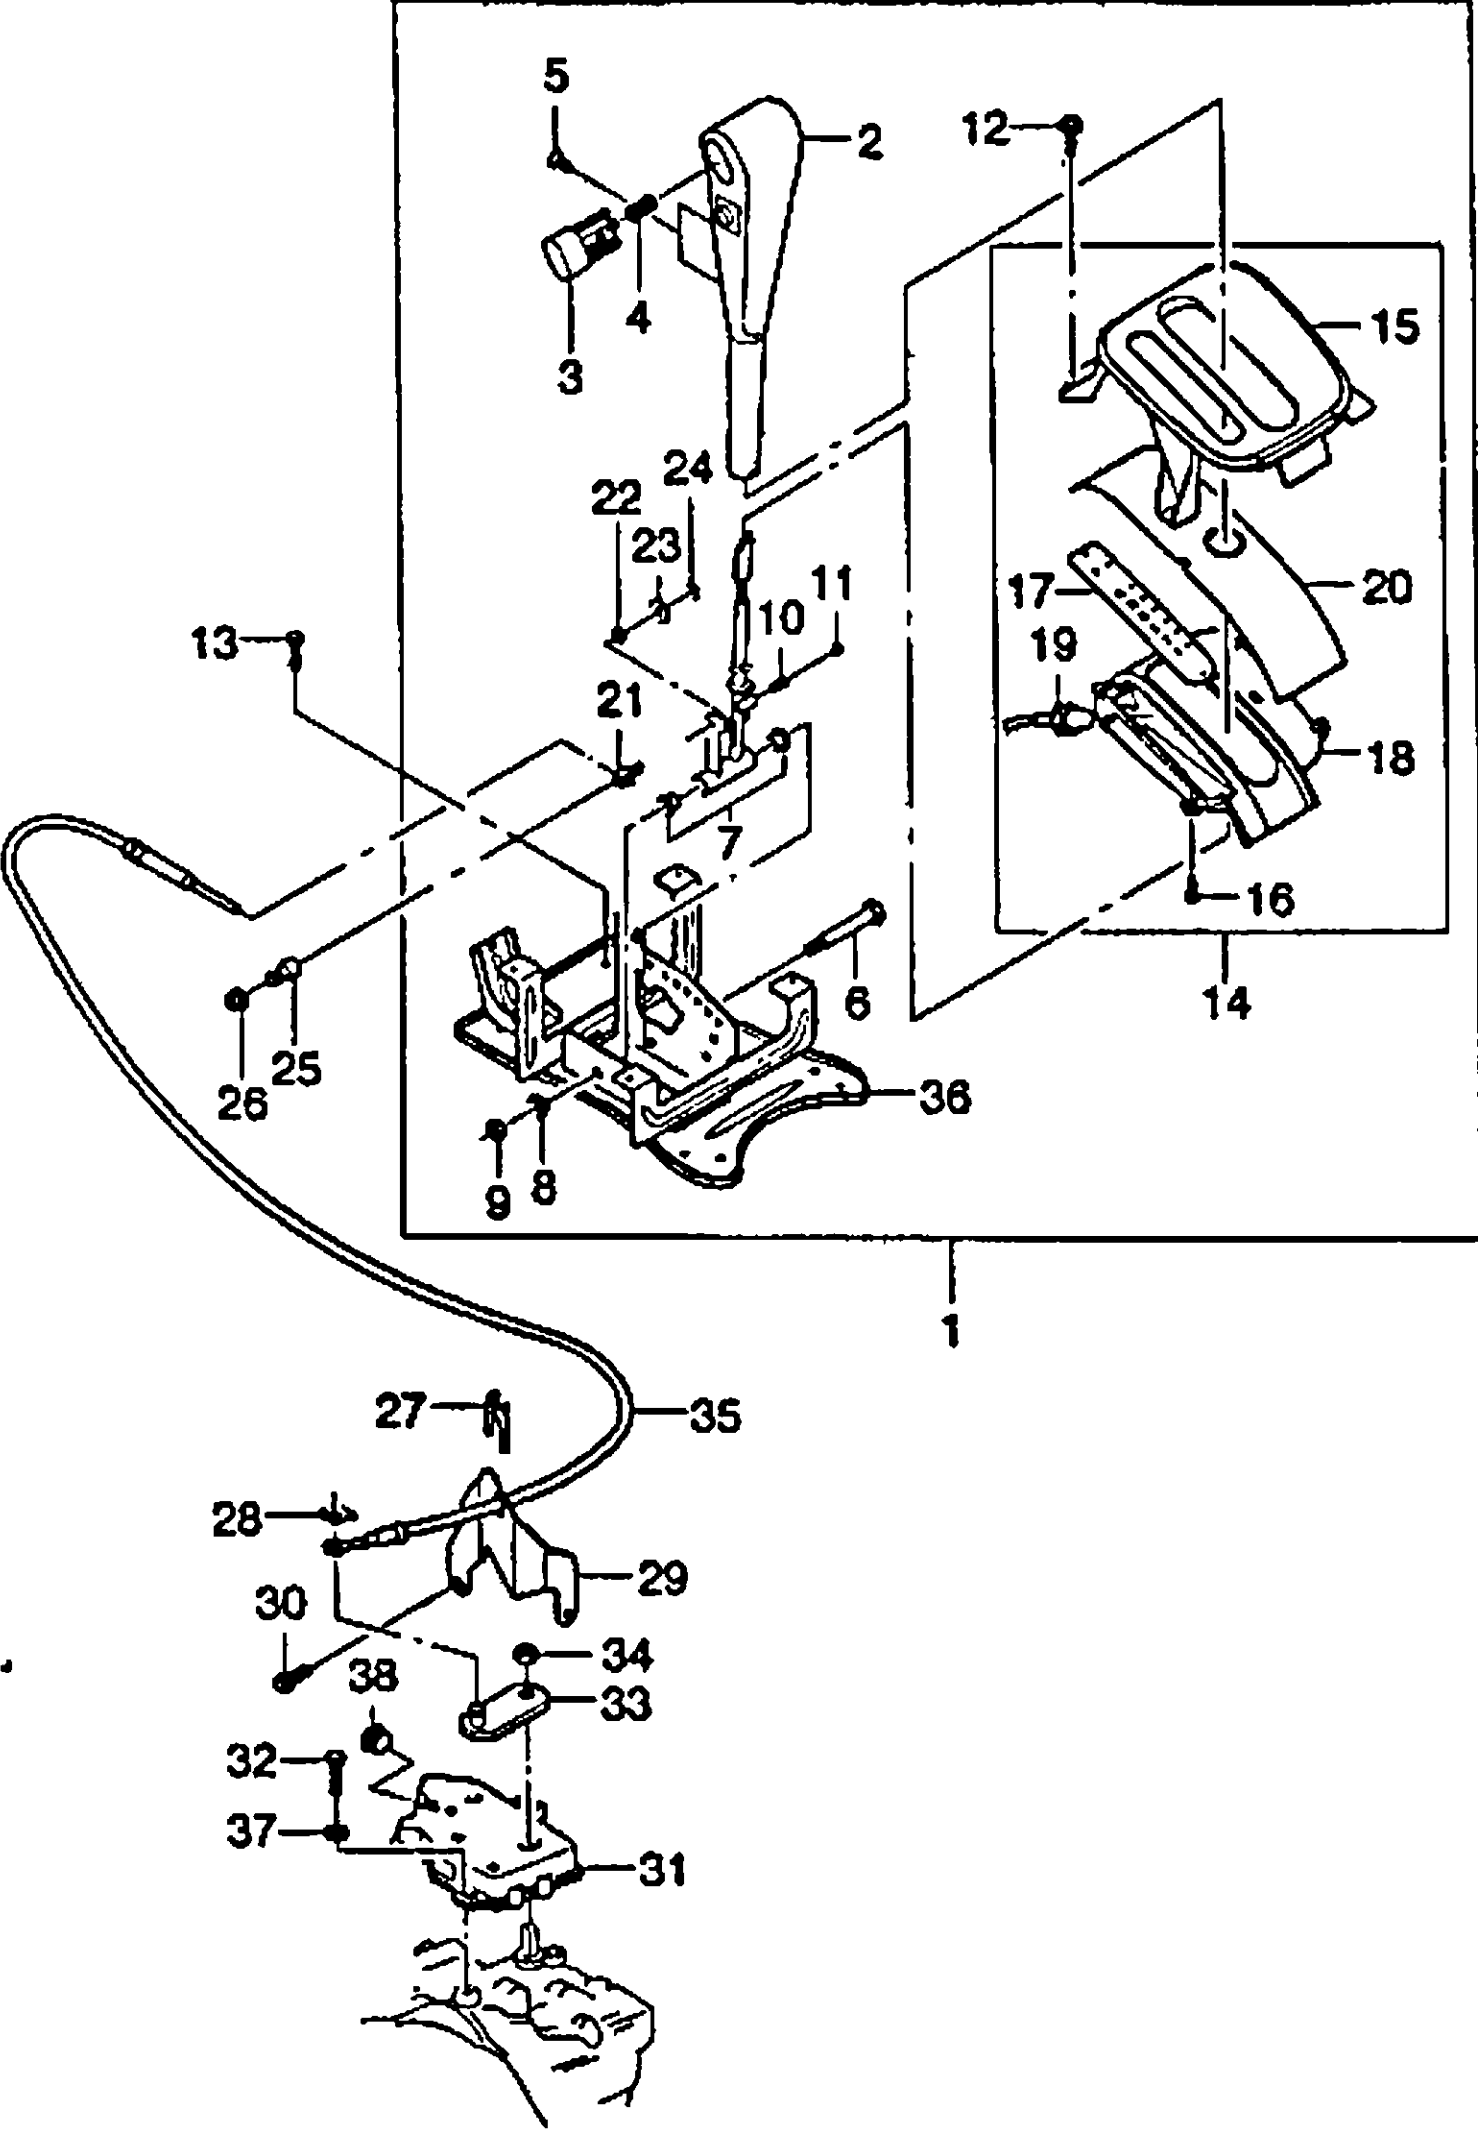

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E T N / G A	BODY			LEVEL	FROM				TO			
			4 N H	3 H	5 H							S S S S		
	[20]	(E)SLIDER-CONSOLE (D)GLEIT,KONSOLE									(F)GLISSIERE-CONSOLE (S)FRENILLO-CONSOLA			
	96218105	. A B B B O O O									1			
	[21]	(E)PIECE-SELECTOR CONT GUIDE (D)TEIL,FÜHRUNGS									(F)PIECE-GUIDE (S)PIEZA-GUIA			
	96155676	. A B B B O O O									1			
	[22]	(E)WASHER-CONICAL SPRING (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA			
	09164-08001	. A B B B O O O									1			
	[23]	(E)WASHER-PLAIN (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA			
	09160-08006	. A B B B O O O									1			
	[24]	(E)E RING (D)RING									(F)ANNEAU (S)ANILLO			
	09383-06002	. A B B B O O O									1			
	[25]	(E)PIECE-CLAMPING (D)TEIL									(F)PIECE (S)PIEZA			
	90121099	. A B B B O O O									1			
	[26]	(E)NUT-HEXAGON FLANGE (D)MUTTER									(F)ECROU (S)TUERCA			
	08316-28063	. A B B B O O O									1			
	[27]	(E)E RING (D)RING									(F)ANNEAU (S)ANILLO			
	09383-19005	. A B B B O O O									1			
	[28]	(E)E RING (D)RING									(F)ANNEAU (S)ANILLO			
	09383-06001	. A B B B O O O									1			
	[29]	(E)FASTENER-SELECTOR CABLE (D)BEFESTIGUNG,KABEL WAHL									(F)ATTACHE-CABLE SELECT (S)GRAPA			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

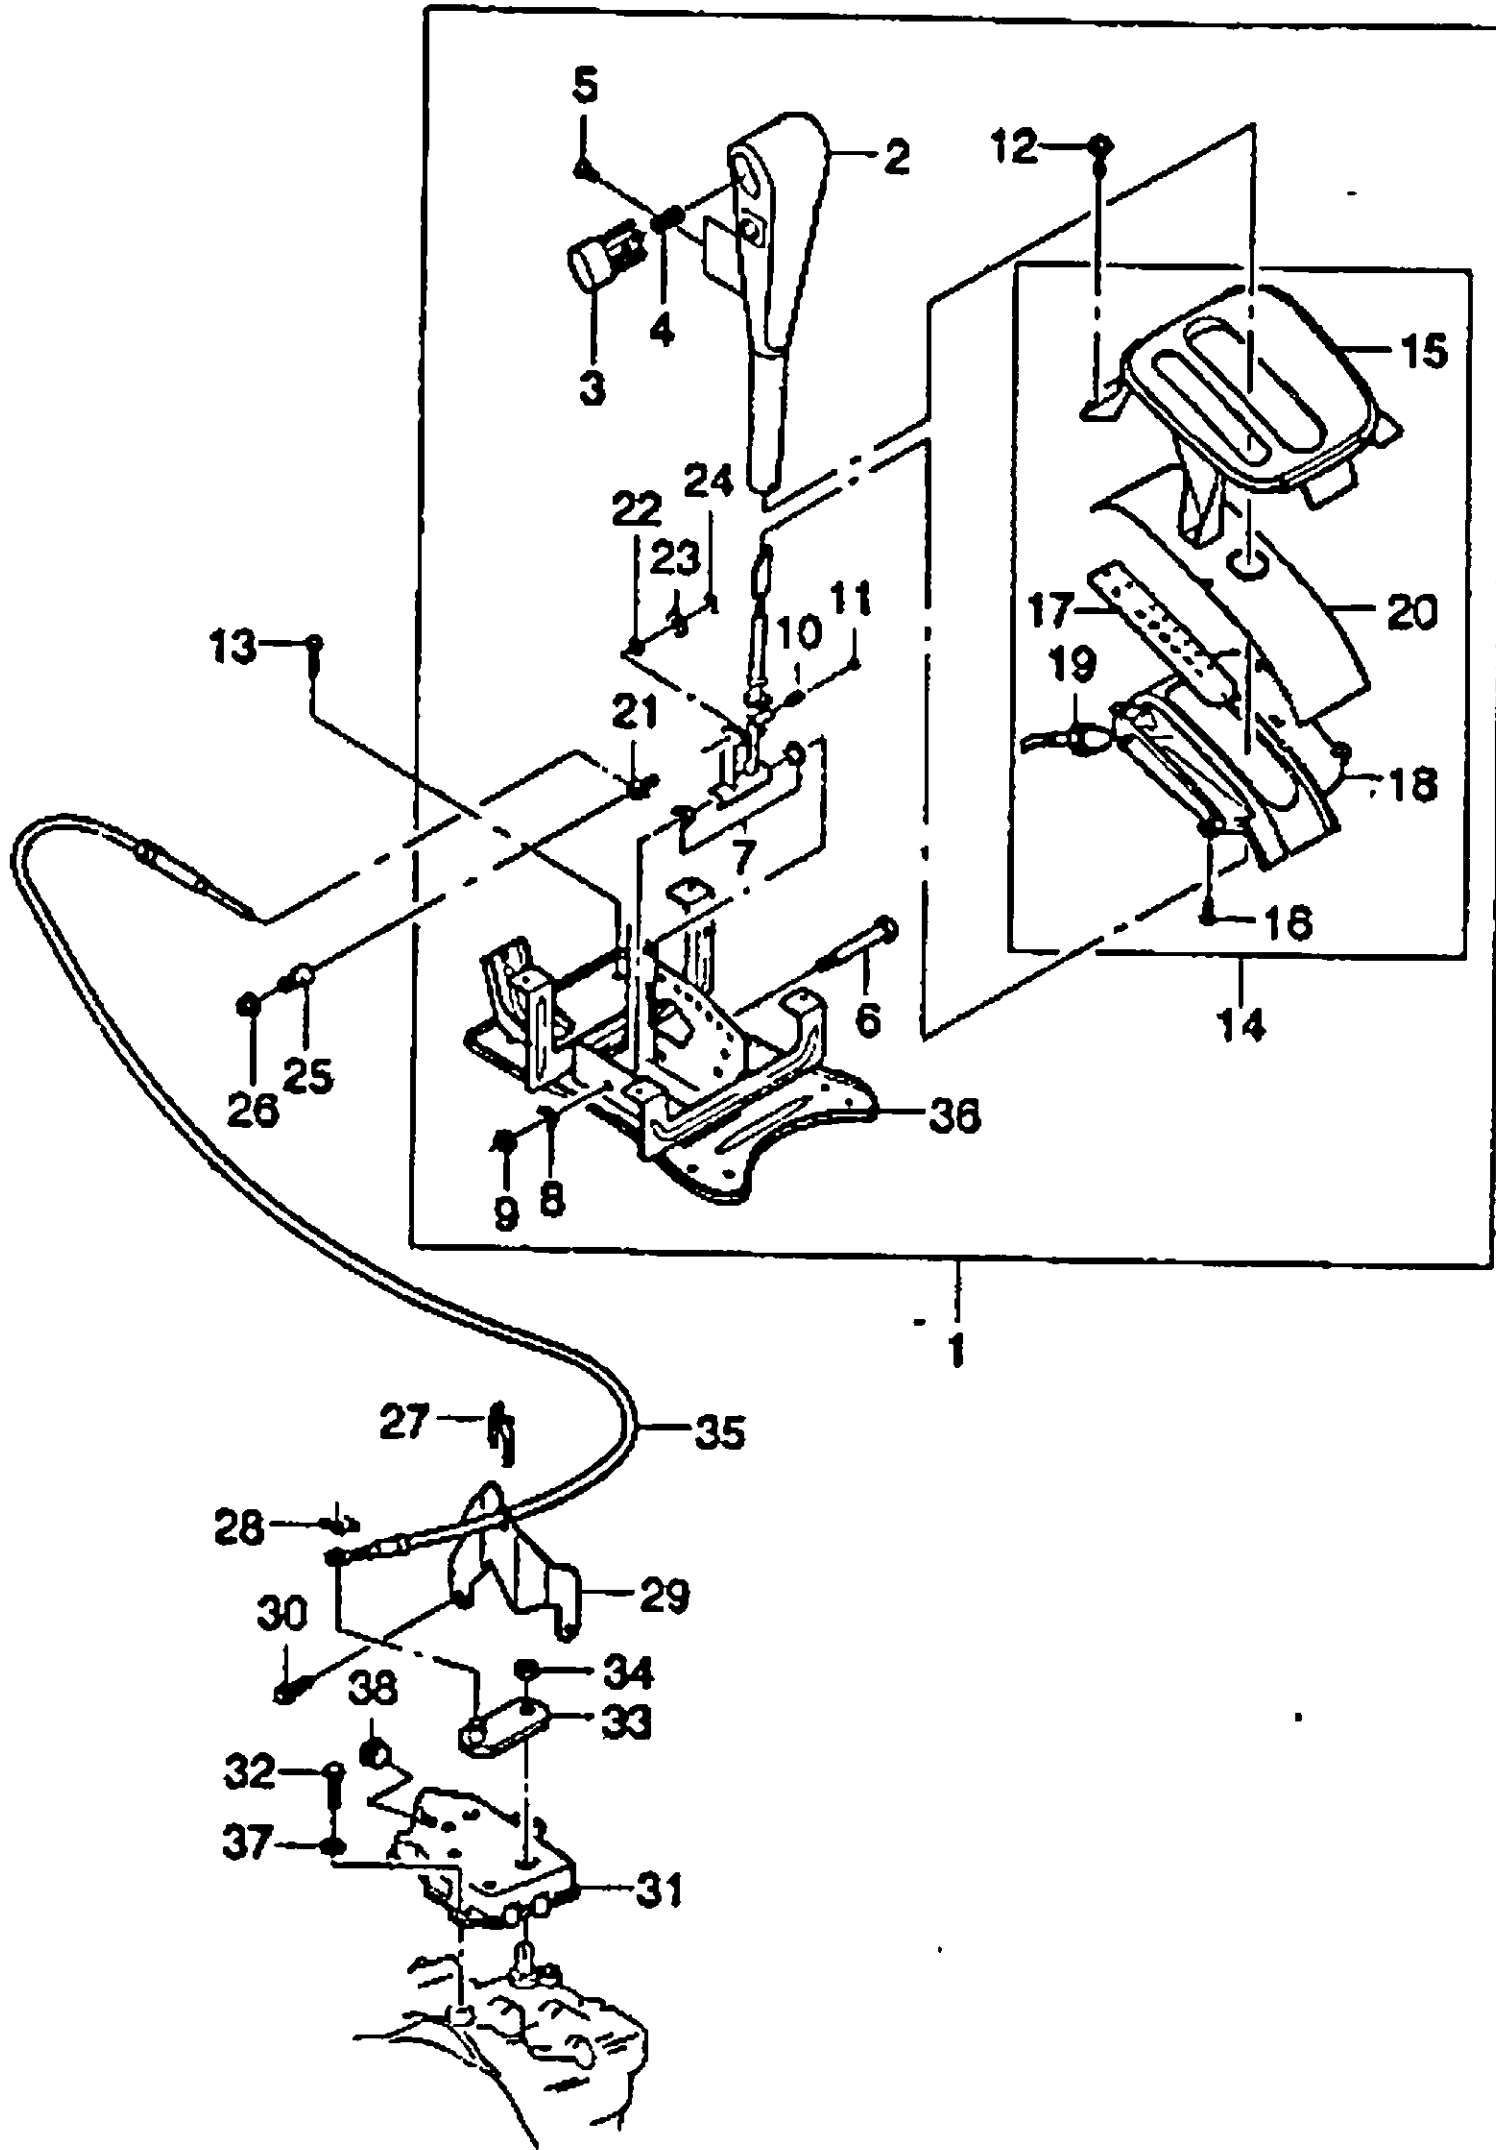


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	96226013	.	A	B	B	B	O	O		1						
	[30]									(F)BOULON						
										(S)PERNO						
	01130-08203	.	A	B	B	B	O	O		1						
	[31]									(F)COMMUTEUR						
										(S)INTERRUPTOR-NSBU SELLADO						
	11516166	.	A	B	B	B	O	O		1	970602					
Y	12450161	.	A	B	B	B	O	O		1	970602					
	[32]									(F)BOULON						
										(S)PERNO						
	01130-08203	.	A	B	B	B	O	O		1						
	[33]									(F)LEVIER-TRANSMISSION						
										(S)PALANCA-TRANSMISION						
	96182099	.	A	B	B	B	O	O		1						
	[34]									(F)ECROU						
										(S)TUERCA						
	09159-10003	.	A	B	B	B	O	O		1						
	[35]									(F)CABLE-CONTROLE SELECTEUR						
										(S)CABLE-CONTROL DE SELECTOR						
	96242556	.	A	B	B	B	O	O		1						
	[36]									(F)PLAQUE-BASE						
										(S)PLACA-BASE						
	96228658	.	A	B	B	B	O	O		1						
	[37]									(F)RONDELLE						
										(S)ARANDELA						
	09160-08004	.	A	B	B	B	O	O		1						
	[38]									(F)BOUCHON						
										(S)TAPON						
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

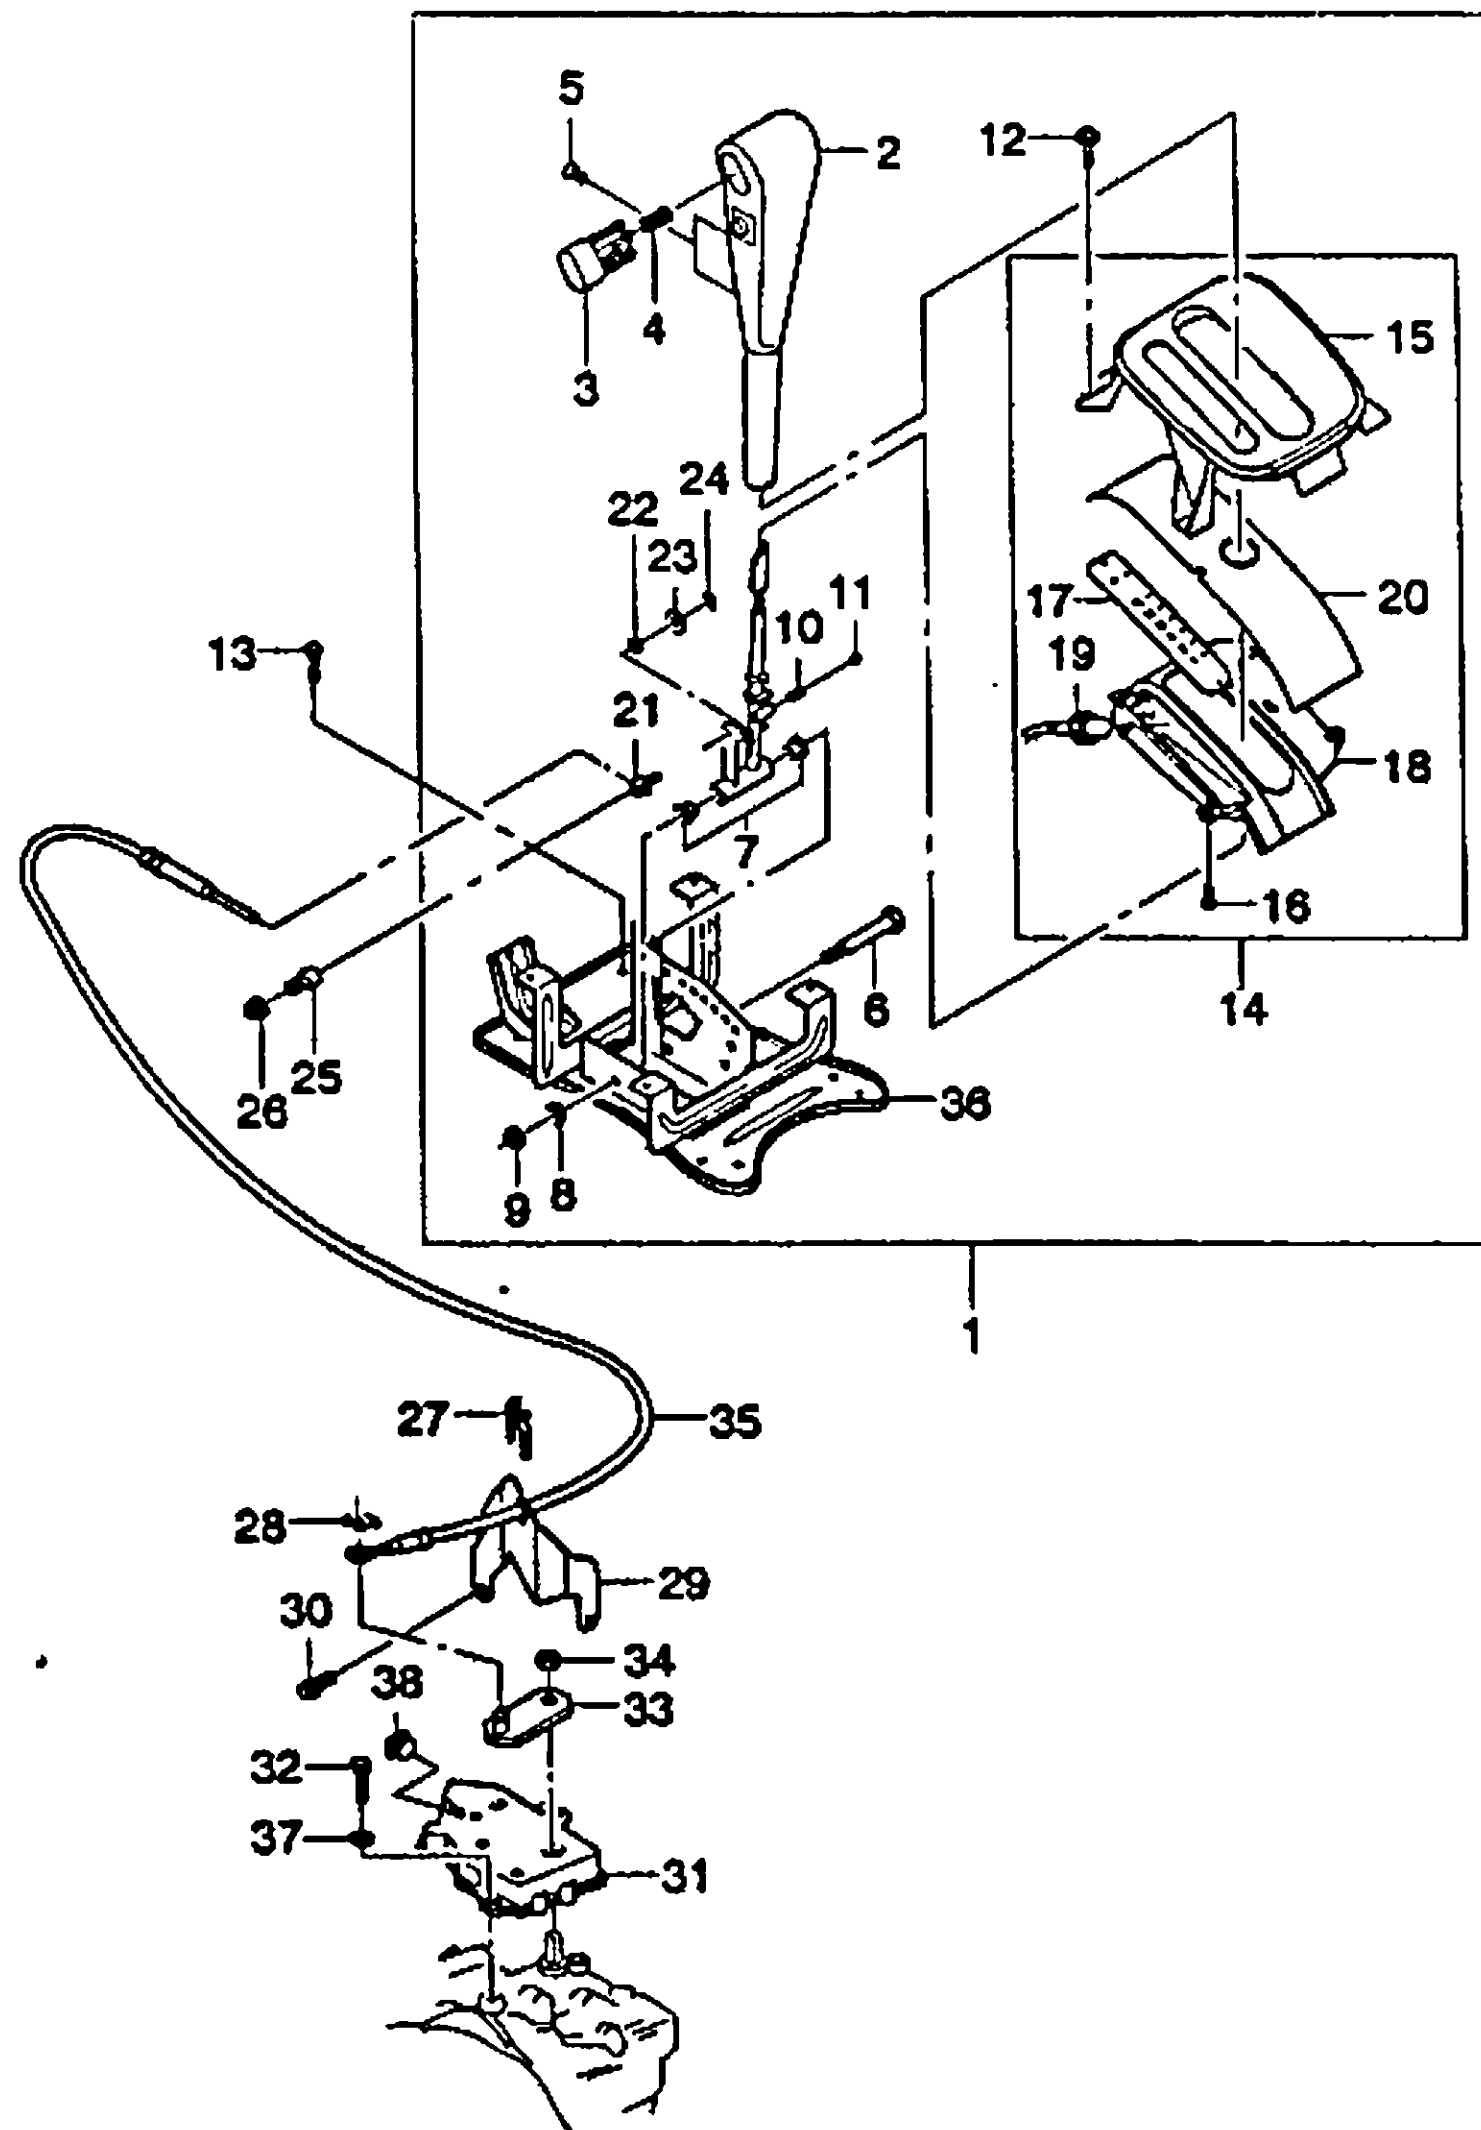


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	96245741	.	A	B	B	B	O	O	O		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

4**CHASSIS**


- | | |
|------------------------------|--------------------------------------|
| 4110 AXLE SHAFT UNIT | 4720 HYDRAULIC MODULATOR |
| 4120 AXLE SHAFT PARTS(M/T) | 4810 STEERING WHEEL |
| 4121 AXLE SHAFT PARTS(A/T) | 4820 STEERING COLUMN COVER |
| 4130 KNUCKLE&HUB | 4830 NON TILT STEERING COLUMN |
| 4140 FRONT SHOCK ABSORBER | 4831 TILTABLE STEERING COLUMN |
| 4150 CONTROL ARM | 4910 STEERING GEAR UNIT |
| 4310 REAR AXLE | 4920 MANUAL STEERING GEAR PARTS(LHD) |
| 4320 REAR SHOCK ABSORBER | 4930 POWER STEERING GEAR PARTS |
| 4510 FRONT BRAKE | 4940 TIE ROD |
| 4520 REAR BRAKE | 4950 POWER STEERING PIPE LINE |
| 4530 PARKING BRAKE | |
| 4610 MASTER BRAKE UNIT | |
| 4620 MASTER CYLINDER&BOOSTER | |
| 4630 MASTER BRAKE MOUNT | |
| 4640 BRAKE PEDAL(LHD) | |
| 4650 BRAKE PIPE(NON ABS) | |
| 4651 BRAKE PIPE(ABS) | |
| 4710 ANTI LOCK BRAKE SYSTEM | |

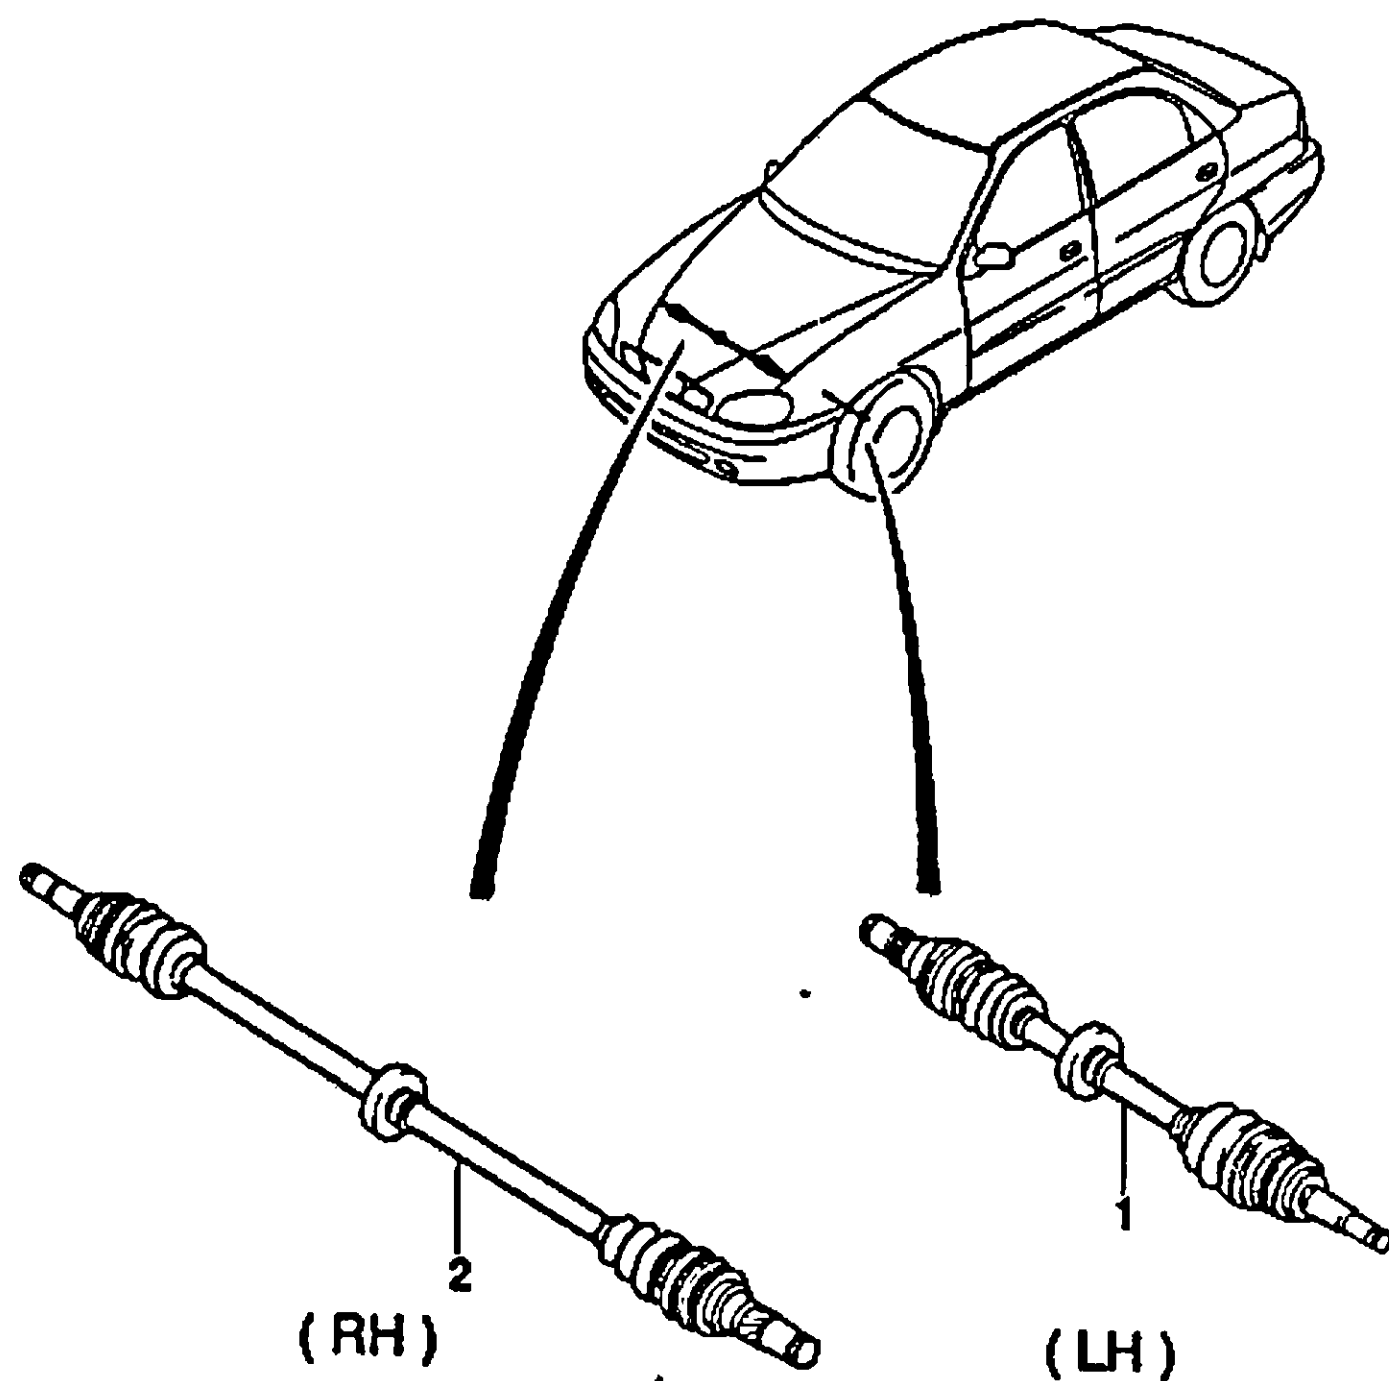


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)SHAFT A-FRT AXLE (D)SPINDEL,VORDER-ACHSE									(F)ARBRE-PONT AVANT (S)EJE-FRENTE				
	96229091	Y M	B	B	B	S	S	S	JL9	LH	1	970422		SM	
Y	96251135	Y M	B	B	B	S	S	S	JL9	LH	1	970422		BR	
	96183016	Y M	B	B	B	.	O	O	&JL9	LH	1	970422		UM	
Y	96251184	Y M	B	B	B	.	O	O	&JL9	LH	1	970422		AV	
	96238233	Y A	B	B	B	O	O	O	JL9	LH	1			LC	
	96225969	Y A	B	B	B	.	O	O	&JL9	LH	1			LQ	
	96229093	6 M	B	B	B	.	.	O	JL9	LH	1	970422		WM	
Y	96251183	6 M	B	B	B	.	.	O	JL9	LH	1	970422		AU	
	96229095	6 M	B	B	B	.	.	O	&JL9	LH	1	970422		YM	
Y	96241975	6 M	B	B	B	.	.	O	&JL9	LH	1	970422		GP	
	96238235	6 A	B	B	B	.	.	O	JL9	LH	1			CA	
	96238237	6 A	B	B	B	.	.	O	&JL9	LH	1			CB	
	[02]	(E)SHAFT A-FRT AXLE (D)SPINDEL,VORDER-ACHSE									(F)ARBRE-PONT AVANT (S)EJE-FRENTE				
	96229092	Y M	B	B	B	S	S	S	JL9	RH	1	970422		TM	
Y	96251136	Y M	B	B	B	S	S	S	JL9	RH	1	970422		CR	
	96183017	Y M	B	B	B	.	O	O	&JL9	RH	1	970422		VM	
Y	96251185	Y M	B	B	B	.	O	O	&JL9	RH	1	970422		AW	
	96238234	Y A	B	B	B	O	O	O	JL9	RH	1			RC	
	96225970	Y A	B	B	B	.	O	O	&JL9	RH	1			RC	
	96229094	6 M	B	B	B	.	.	O	JL9	RH	1	970422		XM	
Y	96241974	6 M	B	B	B	.	.	O	JL9	RH	1	970422		FP	
	96229096	6 M	B	B	B	.	.	O	&JL9	RH	1	970422		ZH	
ENG(ENGINE)						T/A(TRANSAXLE)				BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

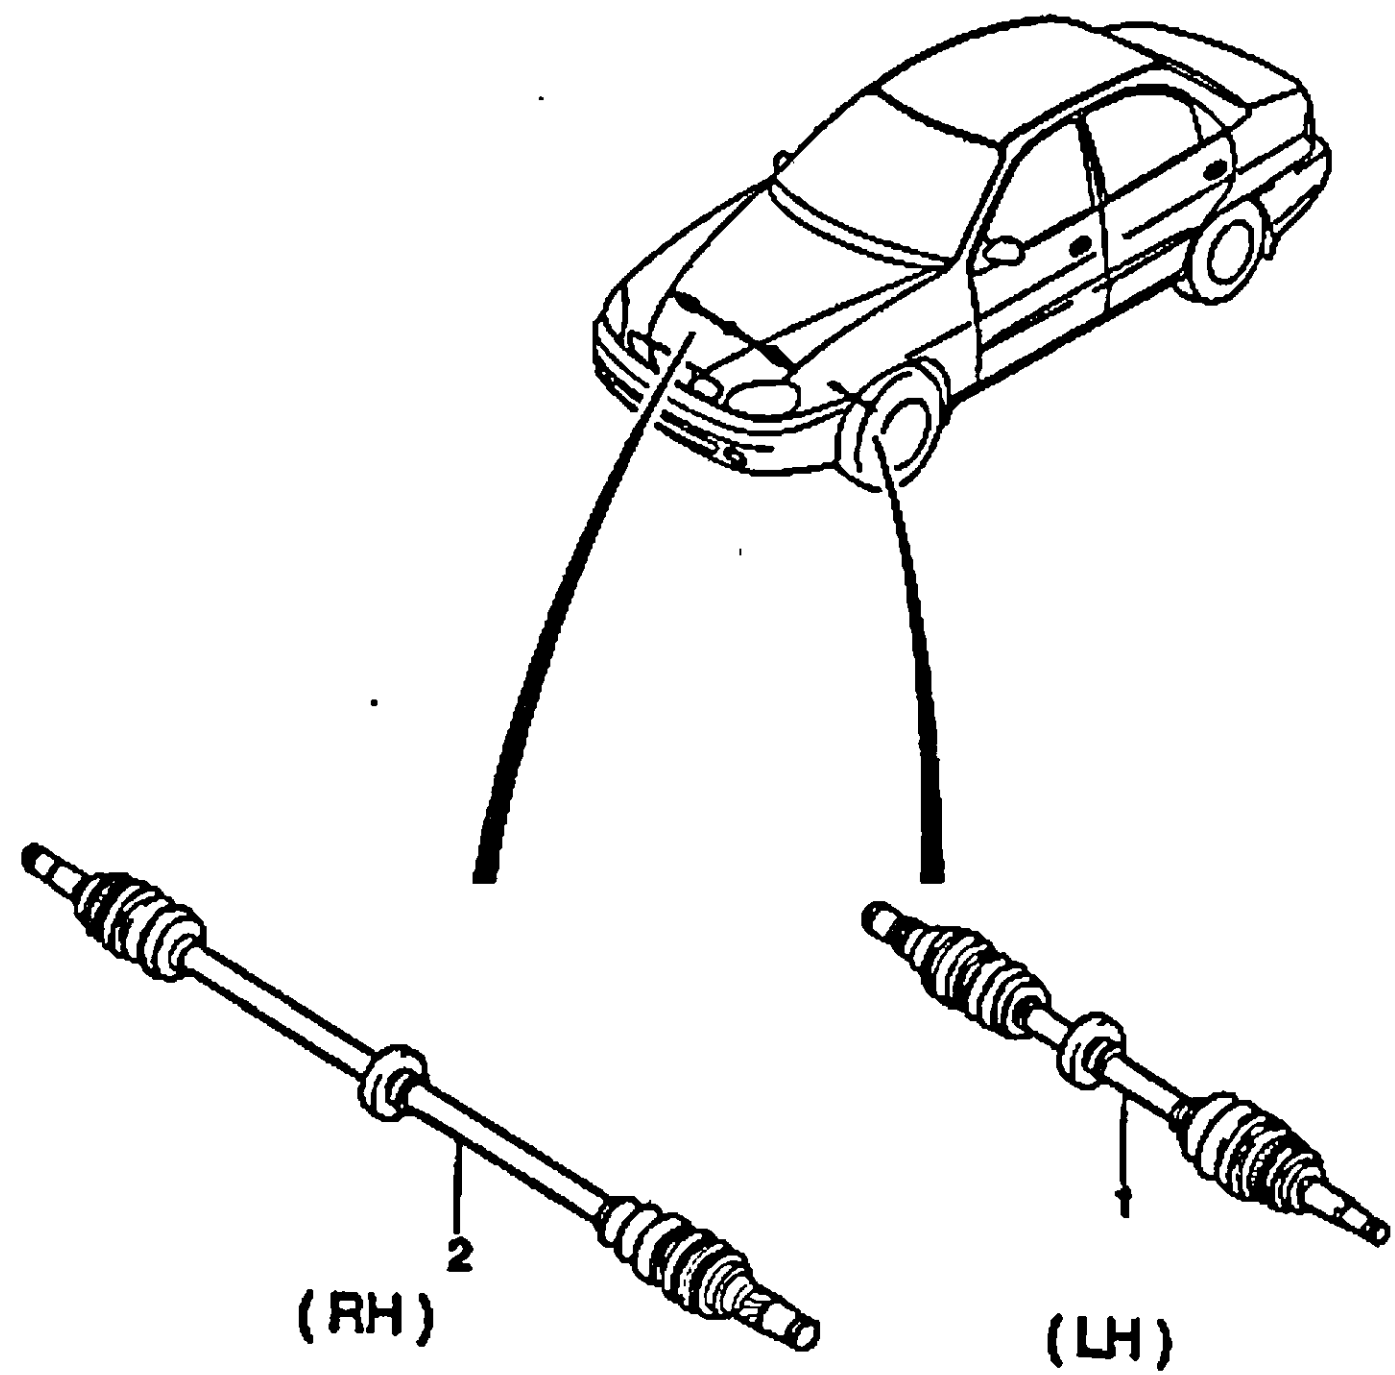

KEY NO.		PART NAME														
I T G	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S E								S X
	Y 96241977	6	M	B	B	B	.	.	O	&JL9	RH	1	970422		AQ	
	96238238	6	A	B	B	B	.	.	O	JL9	RH	1			RX	
	96238238	6	A	B	B	B	.	.	O	&JL9	RH	1			RY	

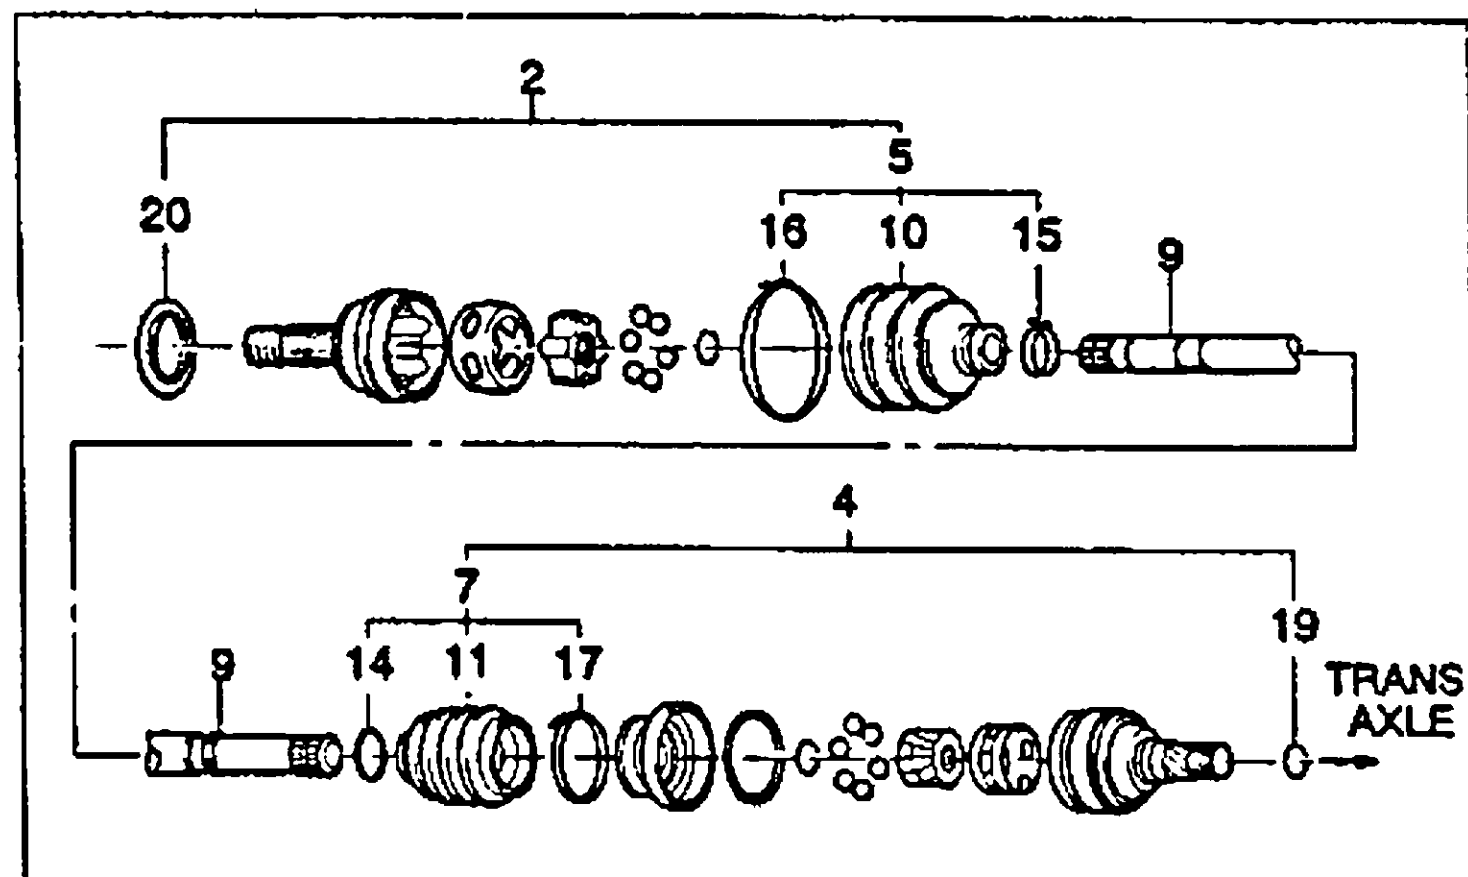


RH

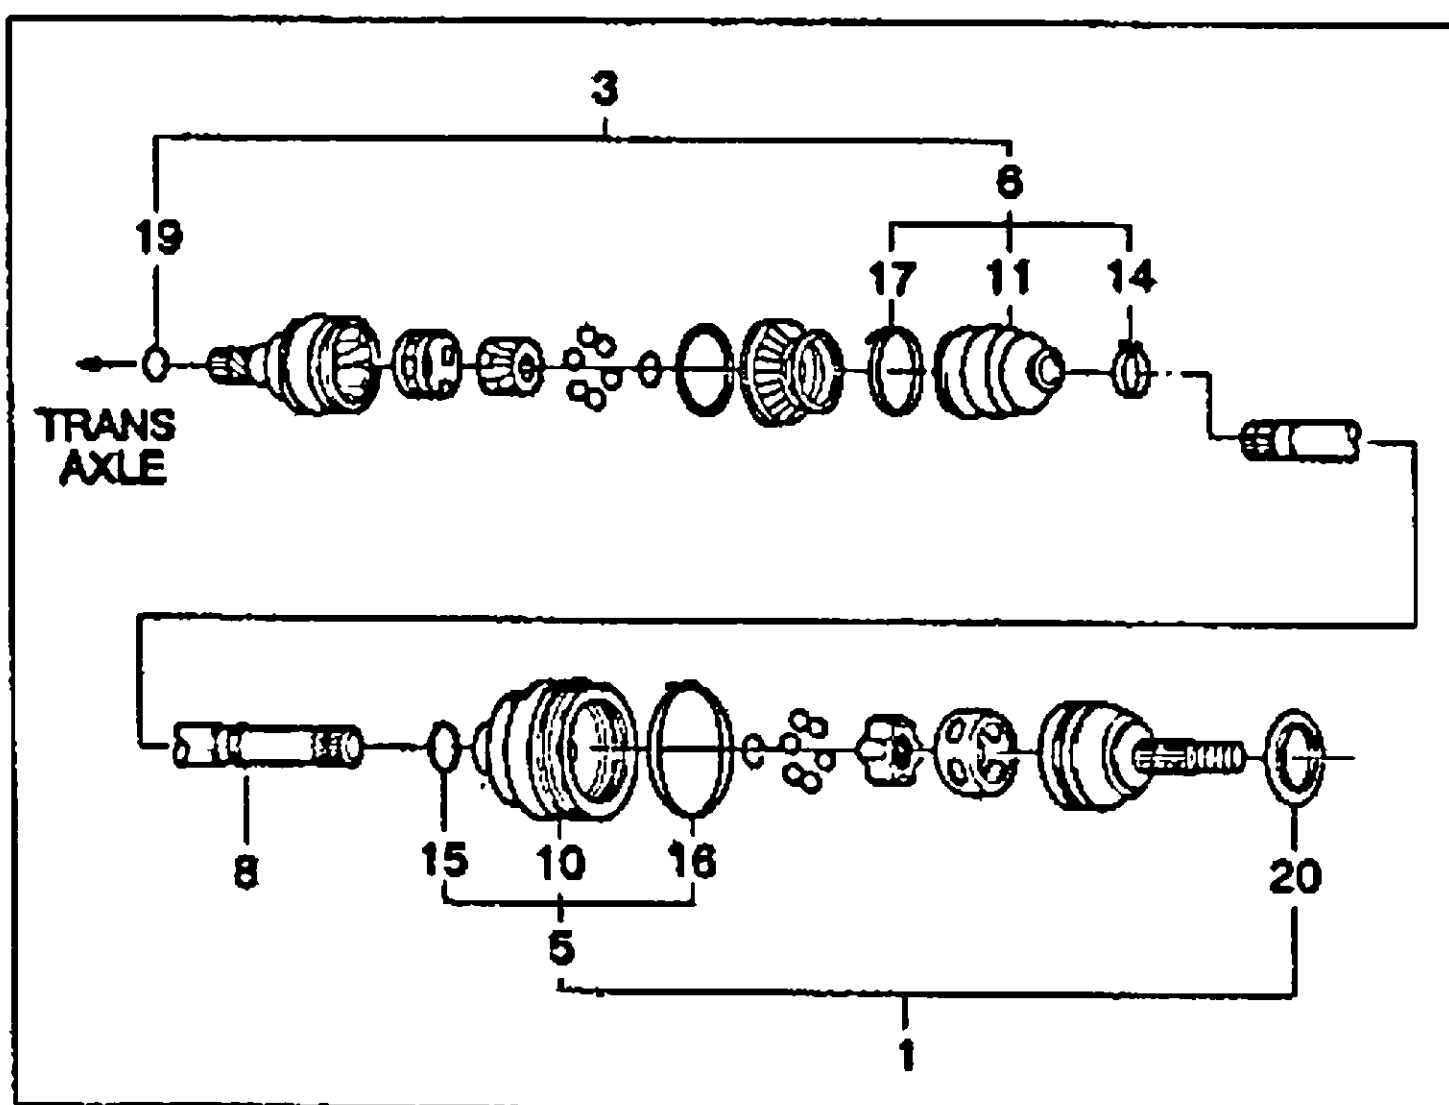


LH

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E T N / G A	BODY			LEVEL	FROM				TO				
			4 N	3 H	5 H							S S S E X			
	[01]	(E)JOINT A-SEAL&C/V (D)GLIED,ABDICHTUNG									(F)JOINT-JOINT D'ETANCHEITE (S)UNION-SELLO Y C/V				
	96243569	Y	M	B	B	B	S	S	S	JL9	LH	1	970422		
Y	96257804	Y	M	B	B	B	S	S	S	JL9	LH	1	970422		
	96243571	Y	M	B	B	B	.	O	O	&JL9	LH	1	970422		
Y	96237803	Y	M	B	B	B	.	O	O	&JL9	LH	1	970422		
	96243573	6	M	B	B	B	.	.	O	JL9	LH	1	970422		
Y	96257802	6	M	B	B	B	.	.	O	JL9	LH	1	970422		
	96243575	6	M	B	B	B	.	.	O	&JL9	LH	1	970422		
Y	96257801	6	M	B	B	B	.	.	O	&JL9	LH	1	970422		
	[02]	(E)JOINT A-SEAL&C/V (D)GLIED,ABDICHTUNG									(F)JOINT-JOINT D'ETANCHEITE (S)UNION-SELLO Y C/V				
	96243569	Y	M	B	B	B	S	S	S	JL9	RH	1	970422		
Y	96257804	Y	M	B	B	B	S	S	S	JL9	RH	1	970422		
	96243571	Y	M	B	B	B	.	O	O	&JL9	RH	1	970422		
Y	96257803	Y	M	B	B	B	.	O	O	&JL9	RH	1	970422		
	96243573	6	M	B	B	B	.	.	O	JL9	RH	1	970422		
Y	96257802	6	M	B	B	B	.	.	O	JL9	RH	1	970422		
	96243575	6	M	B	B	B	.	.	O	&JL9	RH	1	970422		
Y	96257801	6	M	B	B	B	.	.	O	&JL9	RH	1	970422		
	[03]	(E)JOINT A-SEAL&C/G (D)GLIED,ABDICHTUNG									(F)JOINT-JOINT D'ETANCHEITE (S)UNION-SELLO Y C/V				
	96243576	.	M	B	B	B	S	S	S		LH	1			
	[04]	(E)JOINT A-SEAL&C/G (D)GLIED,ABDICHTUNG									(F)JOINT-JOINT D'ETANCHEITE (S)UNION-SELLO Y C/V				
	96243576	.	M	B	B	B	S	S	S		RH	1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

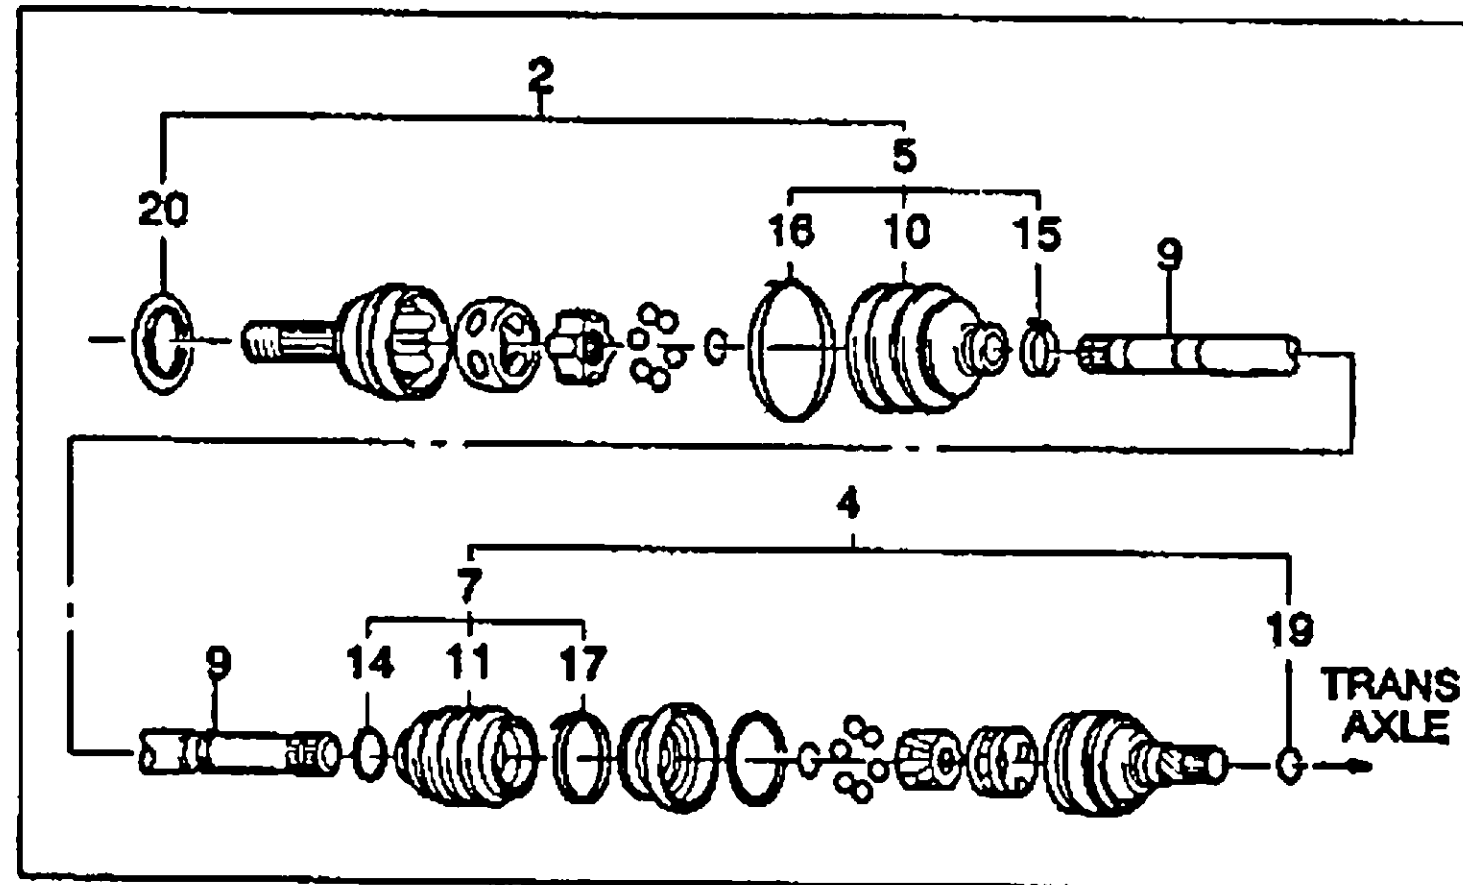


RH

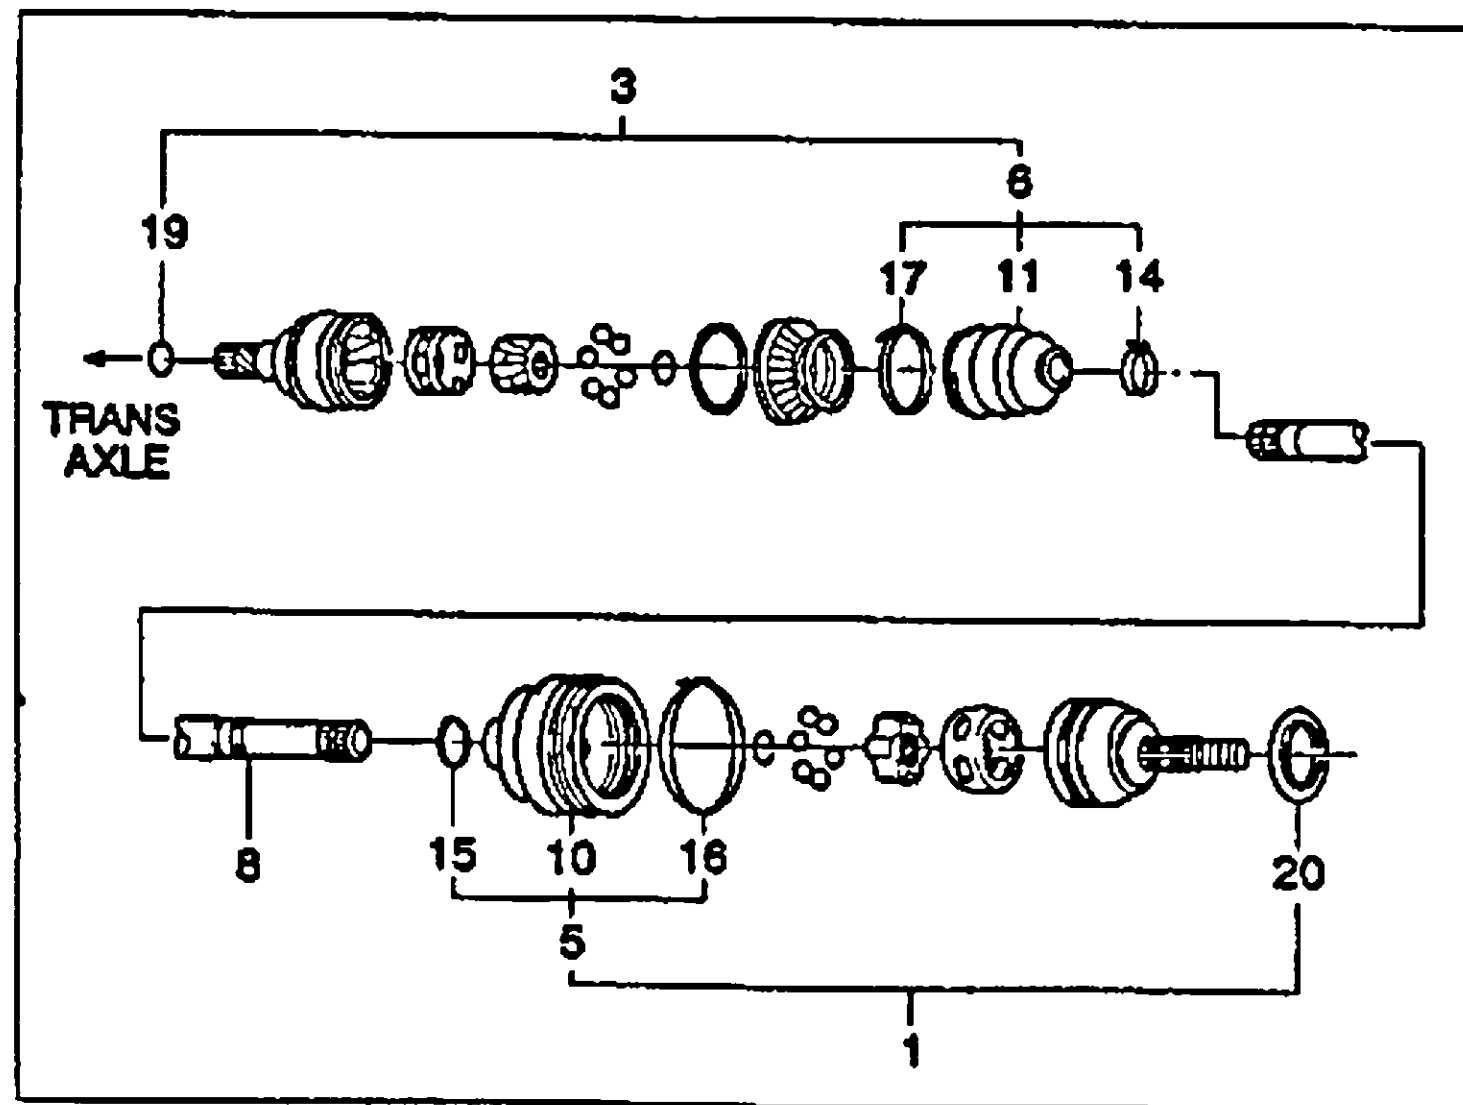


LH

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	6 H	S S								S S
	[05] 96243578	(E)SEAL KIT-CV JOINT (D)DICHTUNGS-SATZ GLIED									(F)TROUSSE DE JOINTS-JOINT (S)JUGO DE SELLOS-UNION				
	[06] 96243579	. M B B B S S S (E)SEAL KIT-C/G JOINT (D)DICHTUNGS-SATZ GLIED									2 (F)TROUSSE DE JOINTS-JOINT (S)JUGO DE SELLOS-UNION				
	[07] 96243579	. M B B B S S S (E)SEAL KIT-C/G JOINT (D)DICHTUNGS-SATZ GLIED									LH 1 (F)TROUSSE DE JOINTS-JOINT (S)JUGO DE SELLOS-UNION				
	[08] 510842	. M B B B S S S (E)SHAFT-AXLE (D)SPINDELACHSE									RH 1 (F)ARBRE-AXE OU PONT (S)EJE-EJE				
	[09] 510843	. M B B B S S S (E)SHAFT-AXLE (D)SPINDELACHSE									LH 1 (F)ARBRE-AXE OU PONT (S)EJE-EJE				
	[10] 510346	. M B B B S S S (E)SEAL-CV JOINT (D)DICHTUNG									RH 1 (F)JOINT (S)SELLO-UNION CV				
	[11] 510469	. M B B B S S S (E)SEAL-C/G JOINT (D)DICHTUNG, QUERRILLE GLIED									2 (F)JOINT (S)SELLO-UNION C/G				
	[14] 510429	. M B B B S S S (E)CLAMP (D)KLAMMER									2 (F)PINCE (S)ABRAZADERA				
	[15] 510464	. M B B B S S S (E)CLAMP (D)KLAMMER									2 (F)PINCE (S)ABRAZADERA		C/V JOINT		
	[16]	(E)CLAMP (D)KLAMMER									2 (F)PINCE (S)ABRAZADERA		C/G JOINT		
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

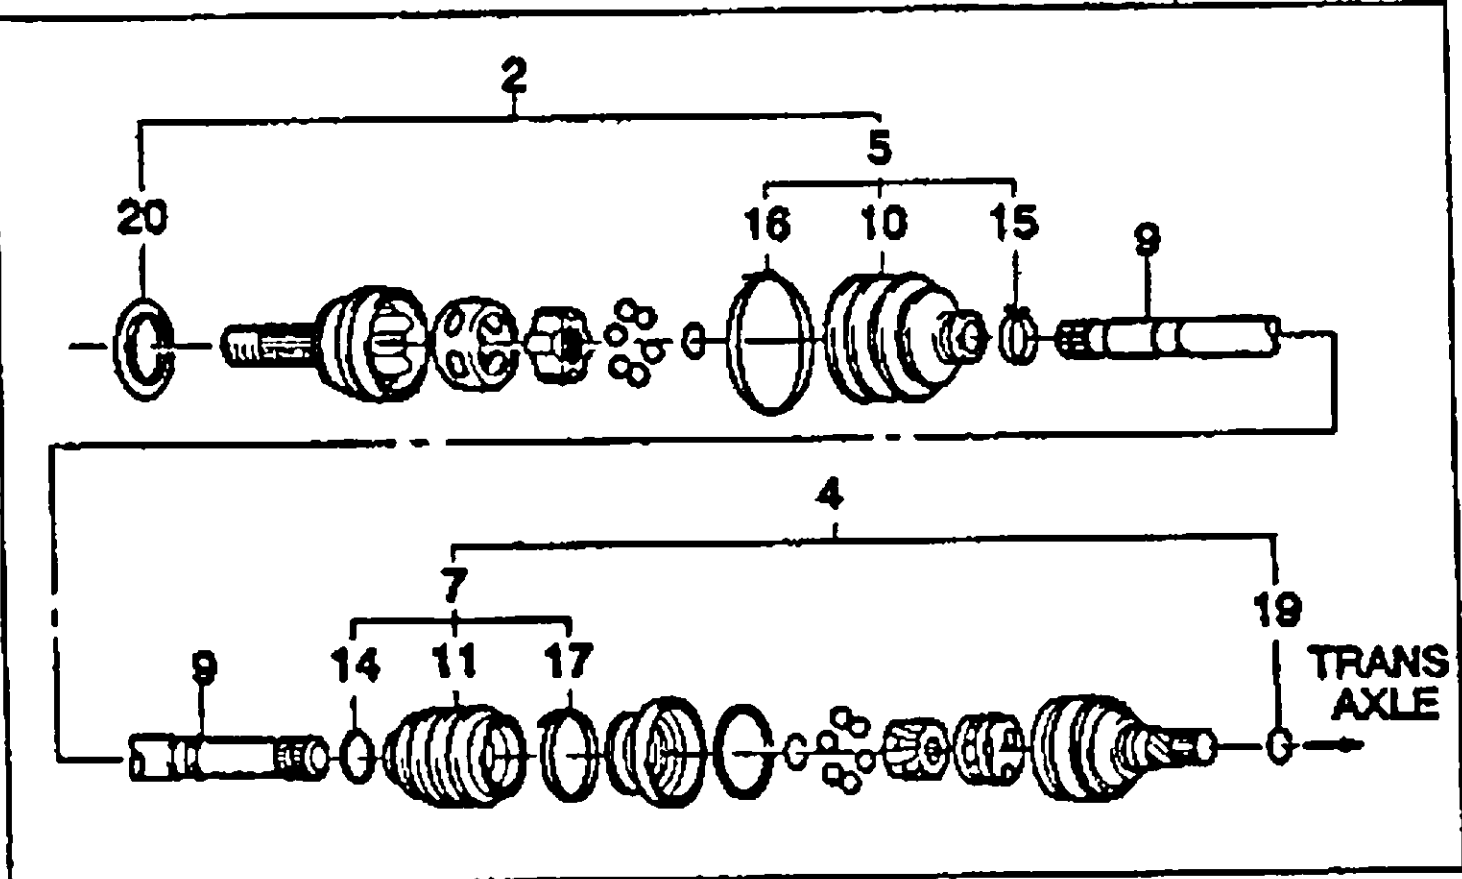


RH

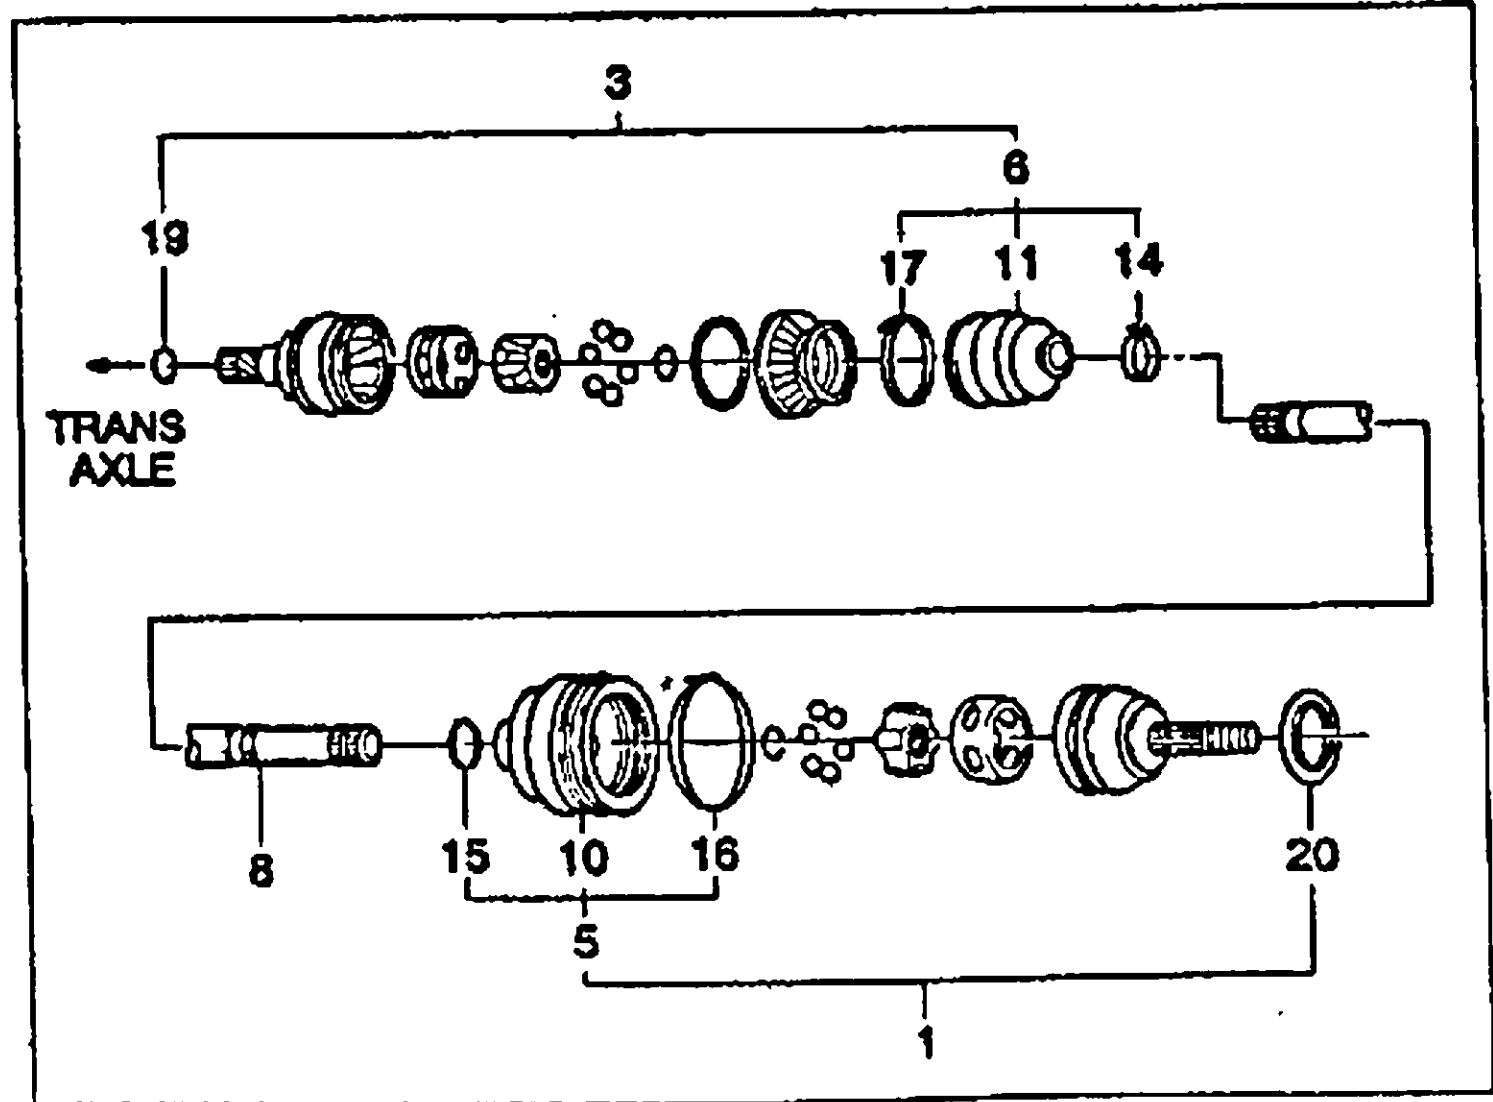


LH

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	6 H	S								S
	510430	.	M	B	B	B	S	S	S		2		CV JOINT		
	[17]	(E)CLAMP									(F)PINCE				
		(D)KLAMMER									(S)ABRAZADERA				
	510466	.	M	B	B	B	S	S	S		2				
	[19]	(E)RING-JOINT RETAINING									(F)ANNEAU-DE RETENTION				
		(D)RING,HALTER									(S)ANILLO-RETENEDOR				
	510470	.	M	B	B	B	S	S	S		2				
	[20]	(E)RING-DEFLECTING									(F)ANNEAU				
		(D)RING									(S)ANILLO				
	510449	.	M	B	B	B	S	S	S		2				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

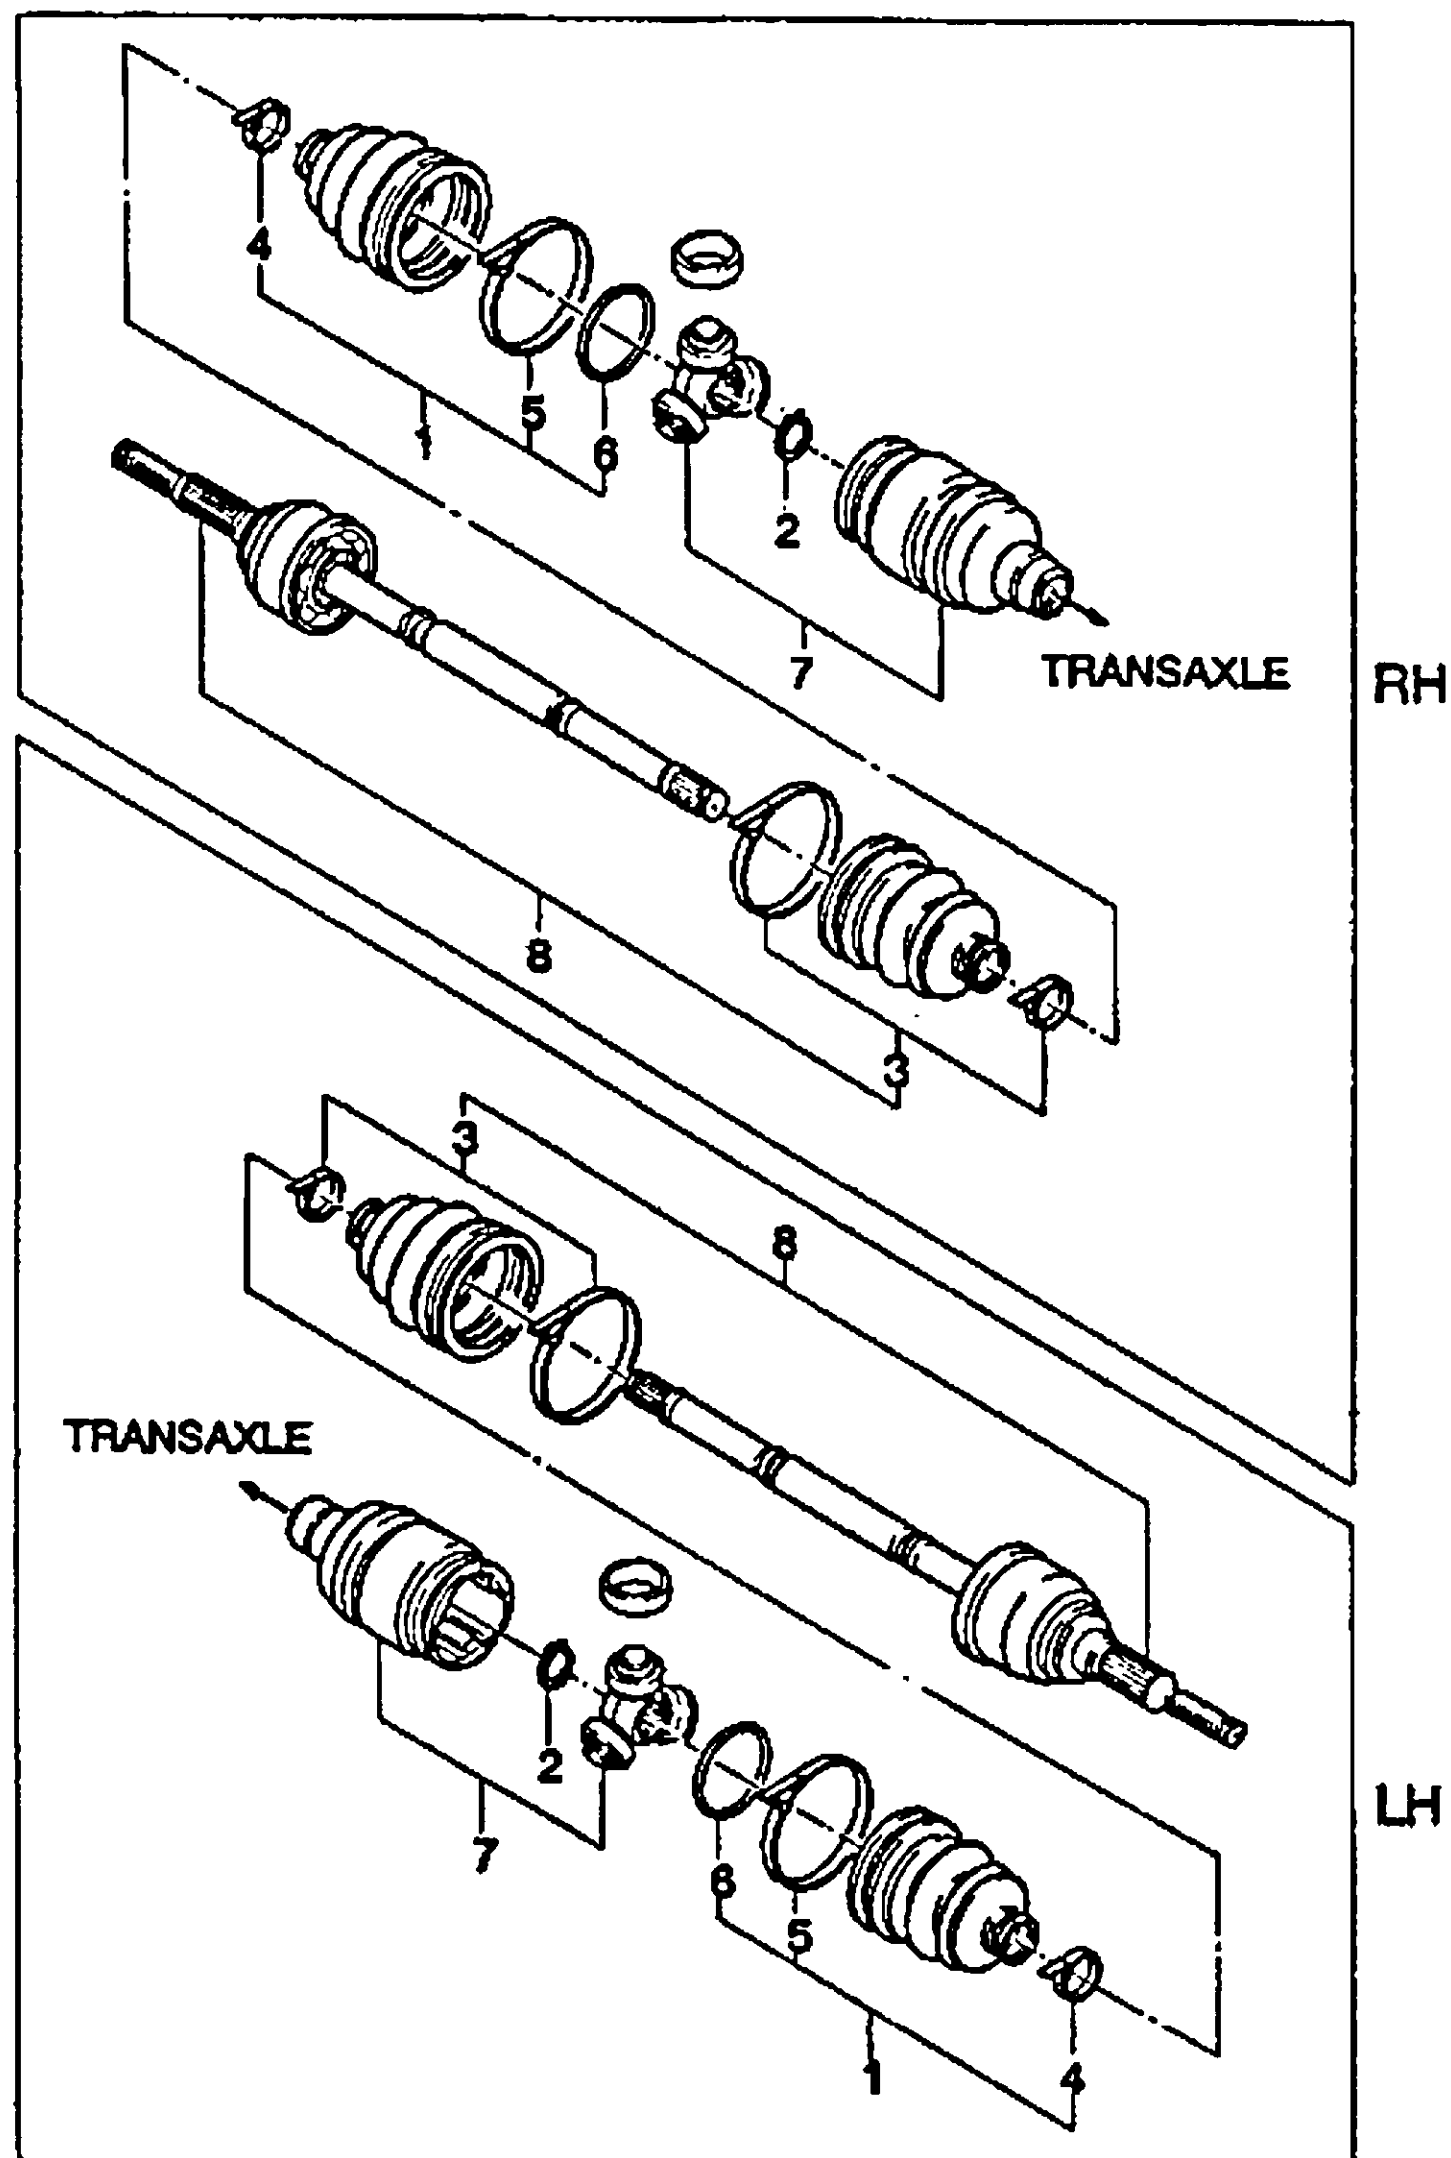


#2,4,5,6, IS SERVICED ONLY SET

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)BOOT SET-INNER (D)KOFFERRAUM-SATZ									(F)TROUSSE DE GAINÉ (S)JUEGO DE BOTA				
	96220401	. A B B B O O O								2		INCL. #2			
	[03]	(E)BOOT SET-OUTER (D)KOFFERRAUM-SATZ									(F)TROUSSE DE GAINÉ (S)JUEGO DE BOTA				
	96220402	. A B B B O O O								2		INCL. #2,4,5,6			
	[07]	(E)JOINT SET-INNER (D)GLIED SATZ									(F)JEU DE JOINTS (S)JUEGO DE UNION				
	96220403	. A B B B O O O								2		INCL. #2,4,5			
	[08]	(E)JOINT SET-OUTER (D)GLIED SATZ									(F)JEU DE JOINTS (S)JUEGO DE UNION				
	96250527	Y A B B B O O O						JL9		LH 1		INCL. #2,4,5,6			
	96250528	Y A B B B O O O						JL9		RH 1		INCL. #2,4,5,6			
	96250525	Y A B B B . O O						&JL9		LH 1		INCL. #2,4,5,6			
	96250526	Y A B B B . O O						&JL9		RH 1		INCL. #2,4,5,6			
	96250521	6 A B B B . . O						JL9		LH 1		INCL. #2,4,5,6			
	96250522	6 A B B B . . O						JL9		RH 1		INCL. #2,4,5,6			
	96250523	6 A B B B . . O						&JL9		LH 1		INCL. #2,4,5,6			
	96250524	6 A B B B . . O						&JL9		RH 1		INCL. #2,4,5,6			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

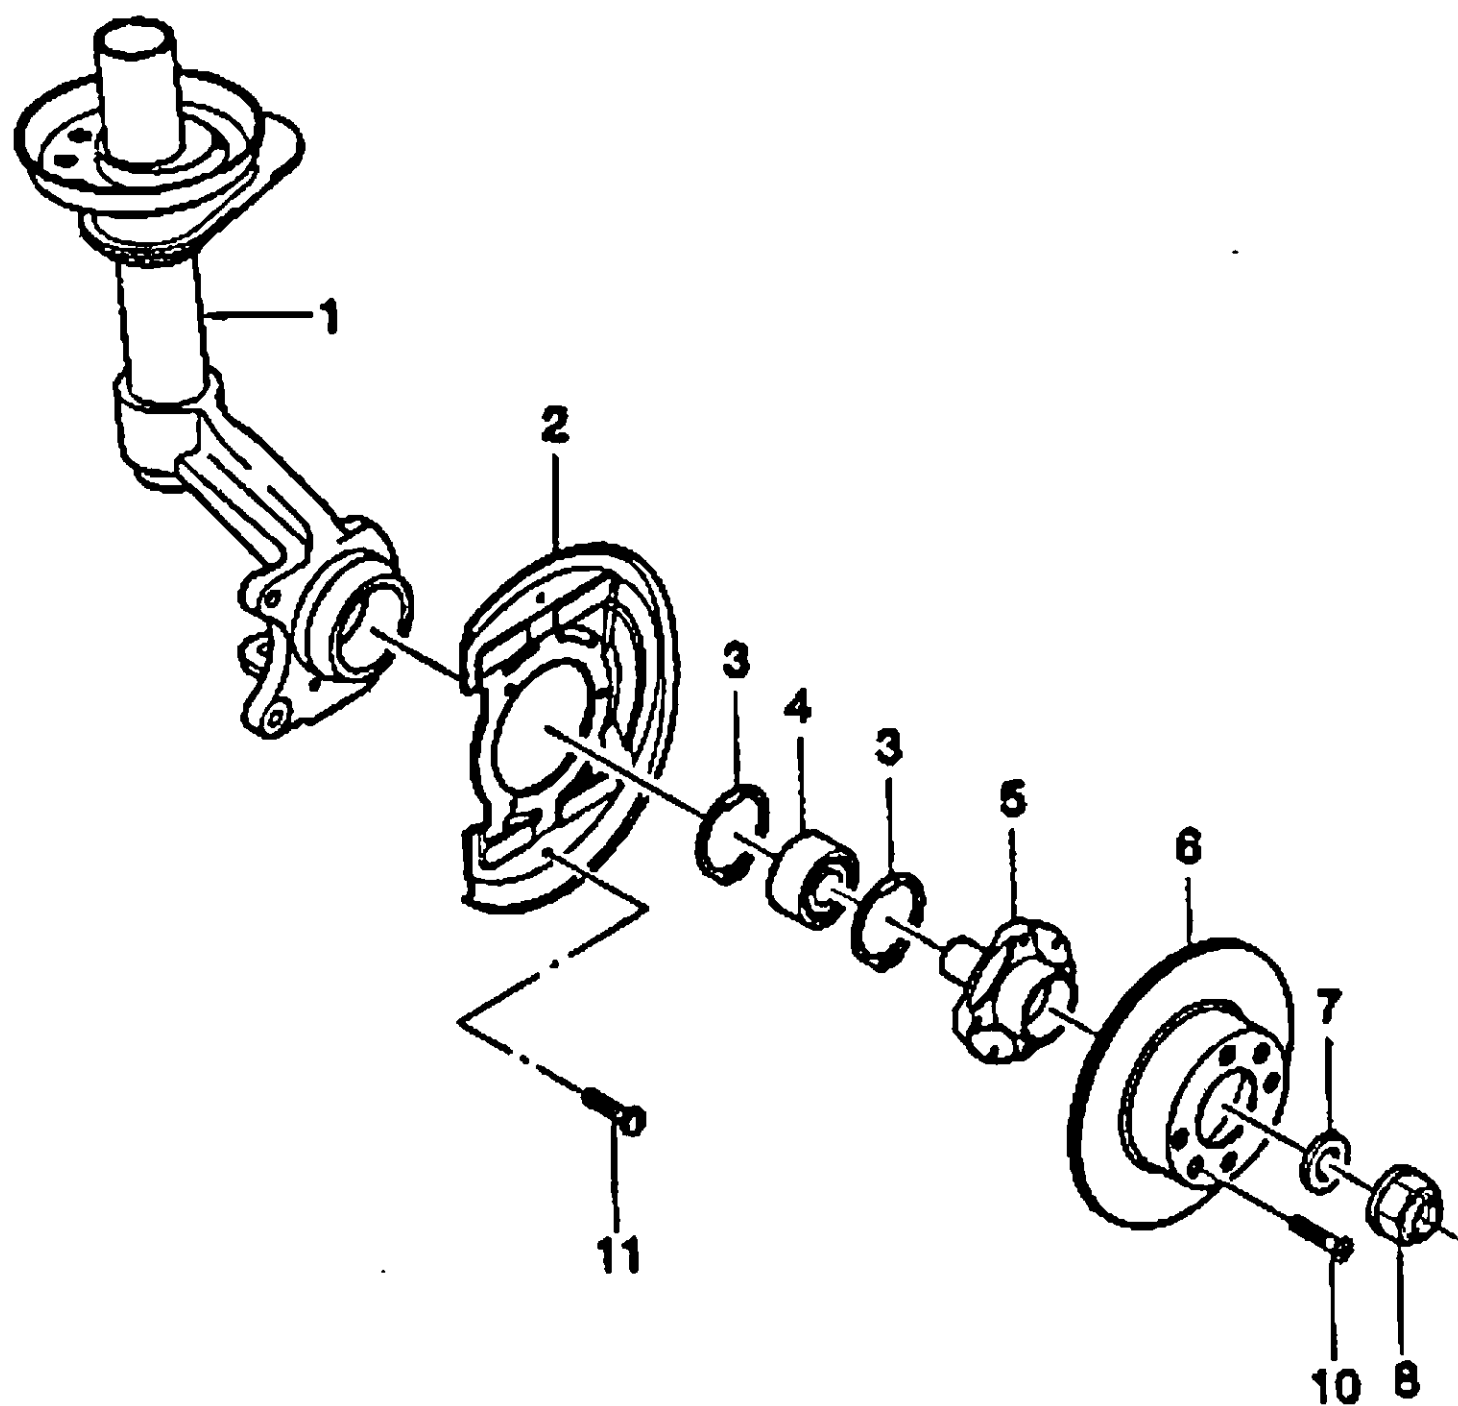


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)KNUCKLE A-STEERING (D)KNUCKLE LENKUNG									(F)ARTICULATION-DIRECTION (S)NUDILLO-VOLANTE					
	96219508	Y	.	B	B	B	S	S	S	JL9	LH	1				
	96219509	Y	.	B	B	B	S	S	S	JL9	RH	1				
	96219506	Y	.	B	B	B	.	O	O	&JL9	LH	1				
	96219507	Y	.	B	B	B	.	O	O	&JL9	RH	1				
	96219512	6	.	B	B	B	.	.	O	JL9	LH	1				
	96219513	6	.	B	B	B	.	.	O	JL9	RH	1				
	96219510	6	.	B	B	B	.	.	O	&JL9	LH	1				
	96219511	6	.	B	B	B	.	.	O	&JL9	RH	1				
	[02]	(E)COVER-SHEET (D)DECKEL LENKUNG NUCKLE									(F)COUVERCLE (S)CUBIERTA-LAMINA					
	96304481	Y	.	B	B	B	S	S	S	&JB3		2				
	96176932	6	.	B	B	B	.	.	O	&JB4		2				
	[03]	(E)RING-RETAINING (D)RING,HALTER									(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR					
	09381-67001	Y	.	B	B	B	S	S	S	&JB3		4				
	09381-75001	6	.	B	B	B	.	.	O	&JB4		4				
	[04]	(E)BEARING (D)KUGELLAGER									(F)ROULEMENT-BILLE INCLINEE (S)COJINETE-BOLA INCLINADA					
	09267-34001	Y	.	B	B	B	S	S	S	&JB3		2	970701			
Y	09267-34002	Y	.	B	B	B	S	S	S	&JB3		2	970701			
	09267-39001	6	.	B	B	B	.	.	O	&JB4		2	970701			
Y	09267-39005	6	.	B	B	B	.	.	O	&JB4		2	970701			
	[05]	(E)HUB-BRAKE DISK,FRONT (D)NABE,SCHEIBENBREMSE									(F)MOYEU-DISQUE DE FREIN (S)CUBO-FRENO DE DISCOS					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

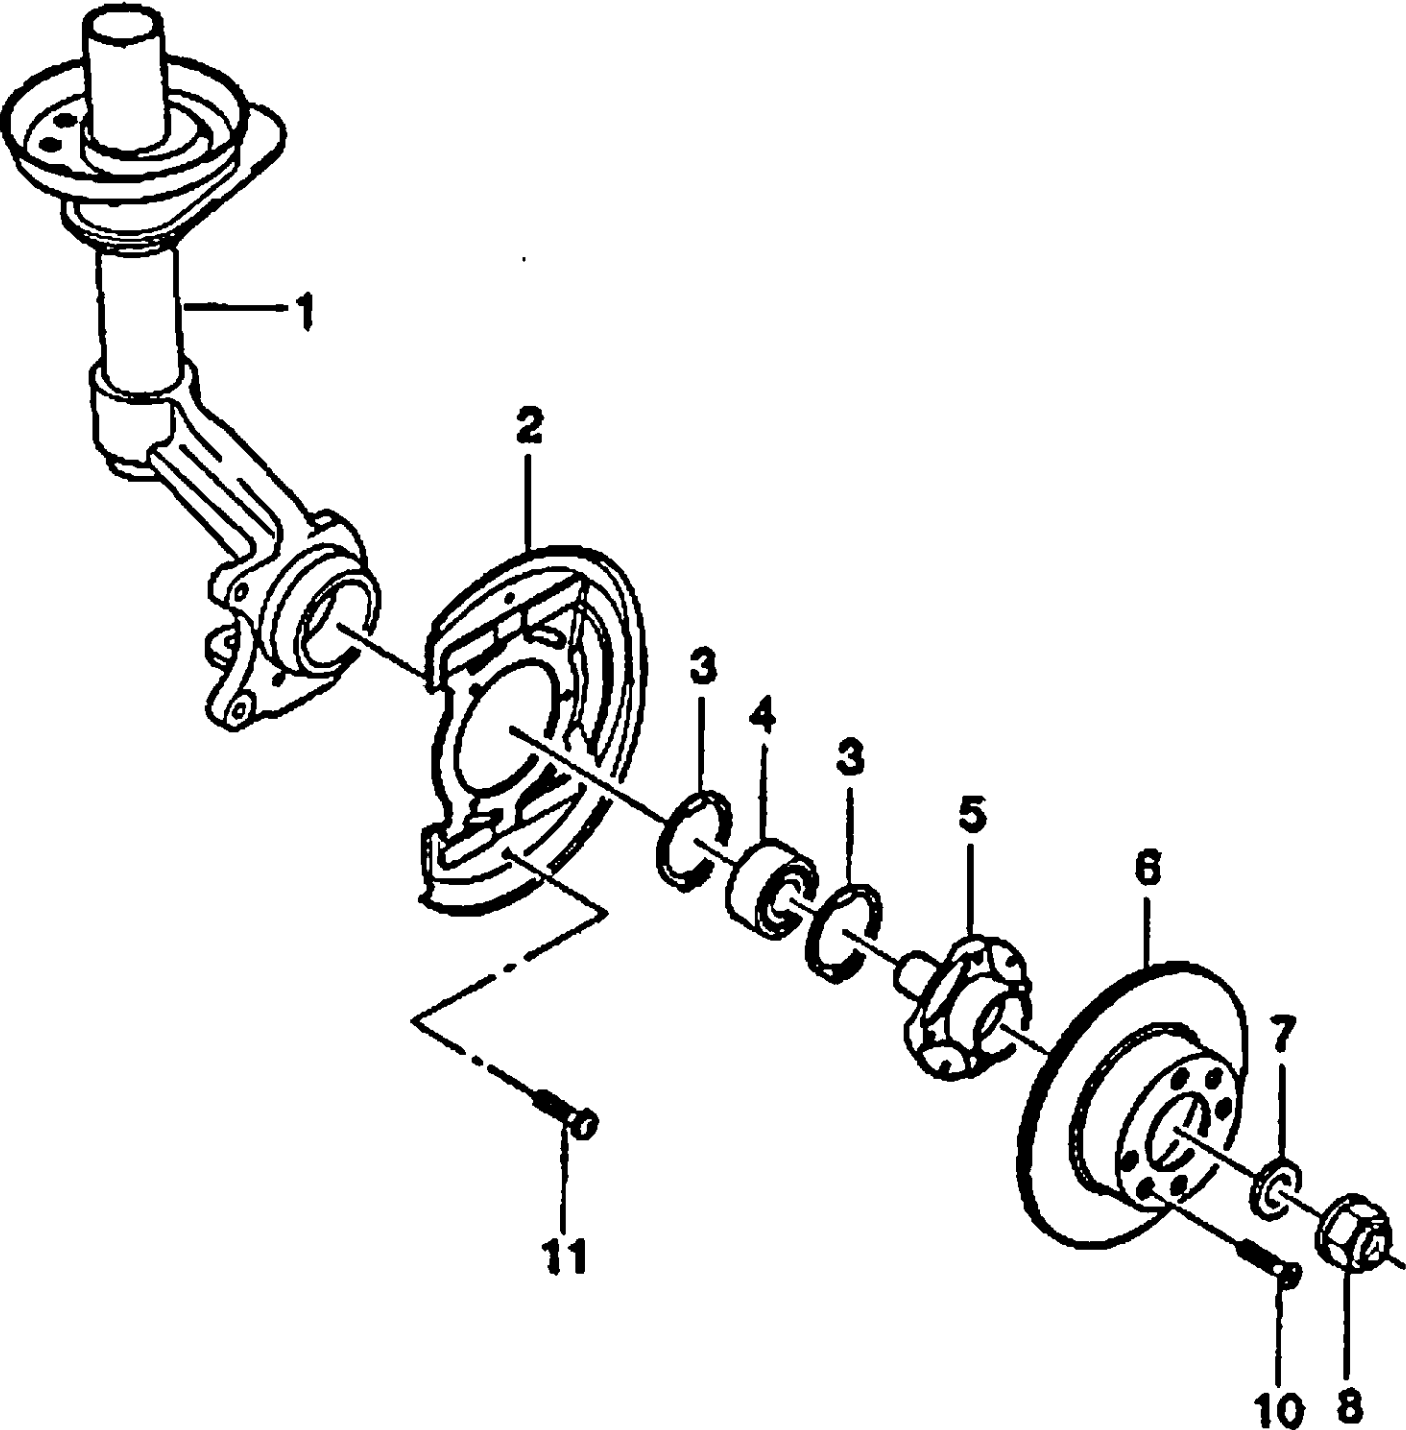

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	96176252	Y	.	B	B	B	S	S	S	&JB3		2				
	96162249	6	.	B	B	B	.	.	O	&JB4		2				
	[06]	(E)DISK-VENTILATED BRAKE (D)SCHEIBENBREMSE										(F)DISQUE-FREIN (S)DISCO-FRENO				
	90121445	Y	.	B	B	B	S	S	S	&JB3		2		DV		
	96179110	6	.	B	B	B	.	.	O	&JB4		2		DQ		
	[07]	(E)WASHER-PLAIN (D)DICHTUNGSRING										(F)RONDELLE (S)ARANDELA				
	09160-20001	.	.	B	B	B	S	S	S			2				
	[08]	(E)NUT (D)MUTTER										(F)ECROU (S)TUERCA				
	09169-20004	.	.	B	B	B	S	S	S			2				
	[10]	(E)SCREW (D)SCHRAUBE										(F)VIS (S)TORNILLO				
	02126-06103	.	.	B	B	B	S	S	S			2	970404			
Y	02126-06123	.	.	B	B	B	S	S	S			2	970404			
	[11]	(E)SCREW (D)SCHRAUBE										(F)VIS (S)TORNILLO				
	02116-36103	.	.	B	B	B	S	S	S			6				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								




KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01] 90079044	(E)CAP-STRUT MOUNT (D)DECKEL,SPREIZE-MONTAGE									(F)CHAPEAU-MONTAGE TENDEUR (S)TAPA-MONTAJE DE PUNTAL				
	[02] 09159-12003	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA				
	[03] 09160-12002	(E)WASHER-PLAIN (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA				
	[04] 08311-38082	(E)NUT-HEXAGON LOCK (D)MUTTER									(F)ECROU (S)TUERCA				
	[06] 96225638	(E)STRUT-SHOCK ABSOR MOUNT (D)STÜTZE									(F)TENDEUR (S)BRIDA-MONTAJE				
	[07] 90079042	(E)PLATE-BALL BEARING (D)PLATTE,KUGELLAGER									(F)PLAQUE-ROULEMENT A BILLES (S)PLACA-COJINETE DE BOLA				
	[08] 96133096	(E)SEAT A-SPRING,UPPER (D)SITZ,FEDERUNG,OBERE									(F)SIEGE-RESSORT,HAUT (S)ASIENTO-RESORTE,SUPERIOR				
	[09] 96133097	(E)SEAT A-SPRING,UPPER (D)SITZ,FEDERUNG,OBERE									(F)SIEGE-RESSORT,HAUT (S)ASIENTO-RESORTE,SUPERIOR				
	[10] 90305062	(E)LOCATOR-FRONT SPRING (D)FINDER,VORDERE FEDERUNG									(F)LOCALISATEUR (S)LOCALIZADOR				
	[11]	(E)RING-FR SPRING INSULATOR (D)RING									(F)ANNEAU (S)ANILLO-AISLADOR				
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC G = 1.6DOHC = COMMON			M = MANUAL T/A A = AUTOMATIC T/A = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

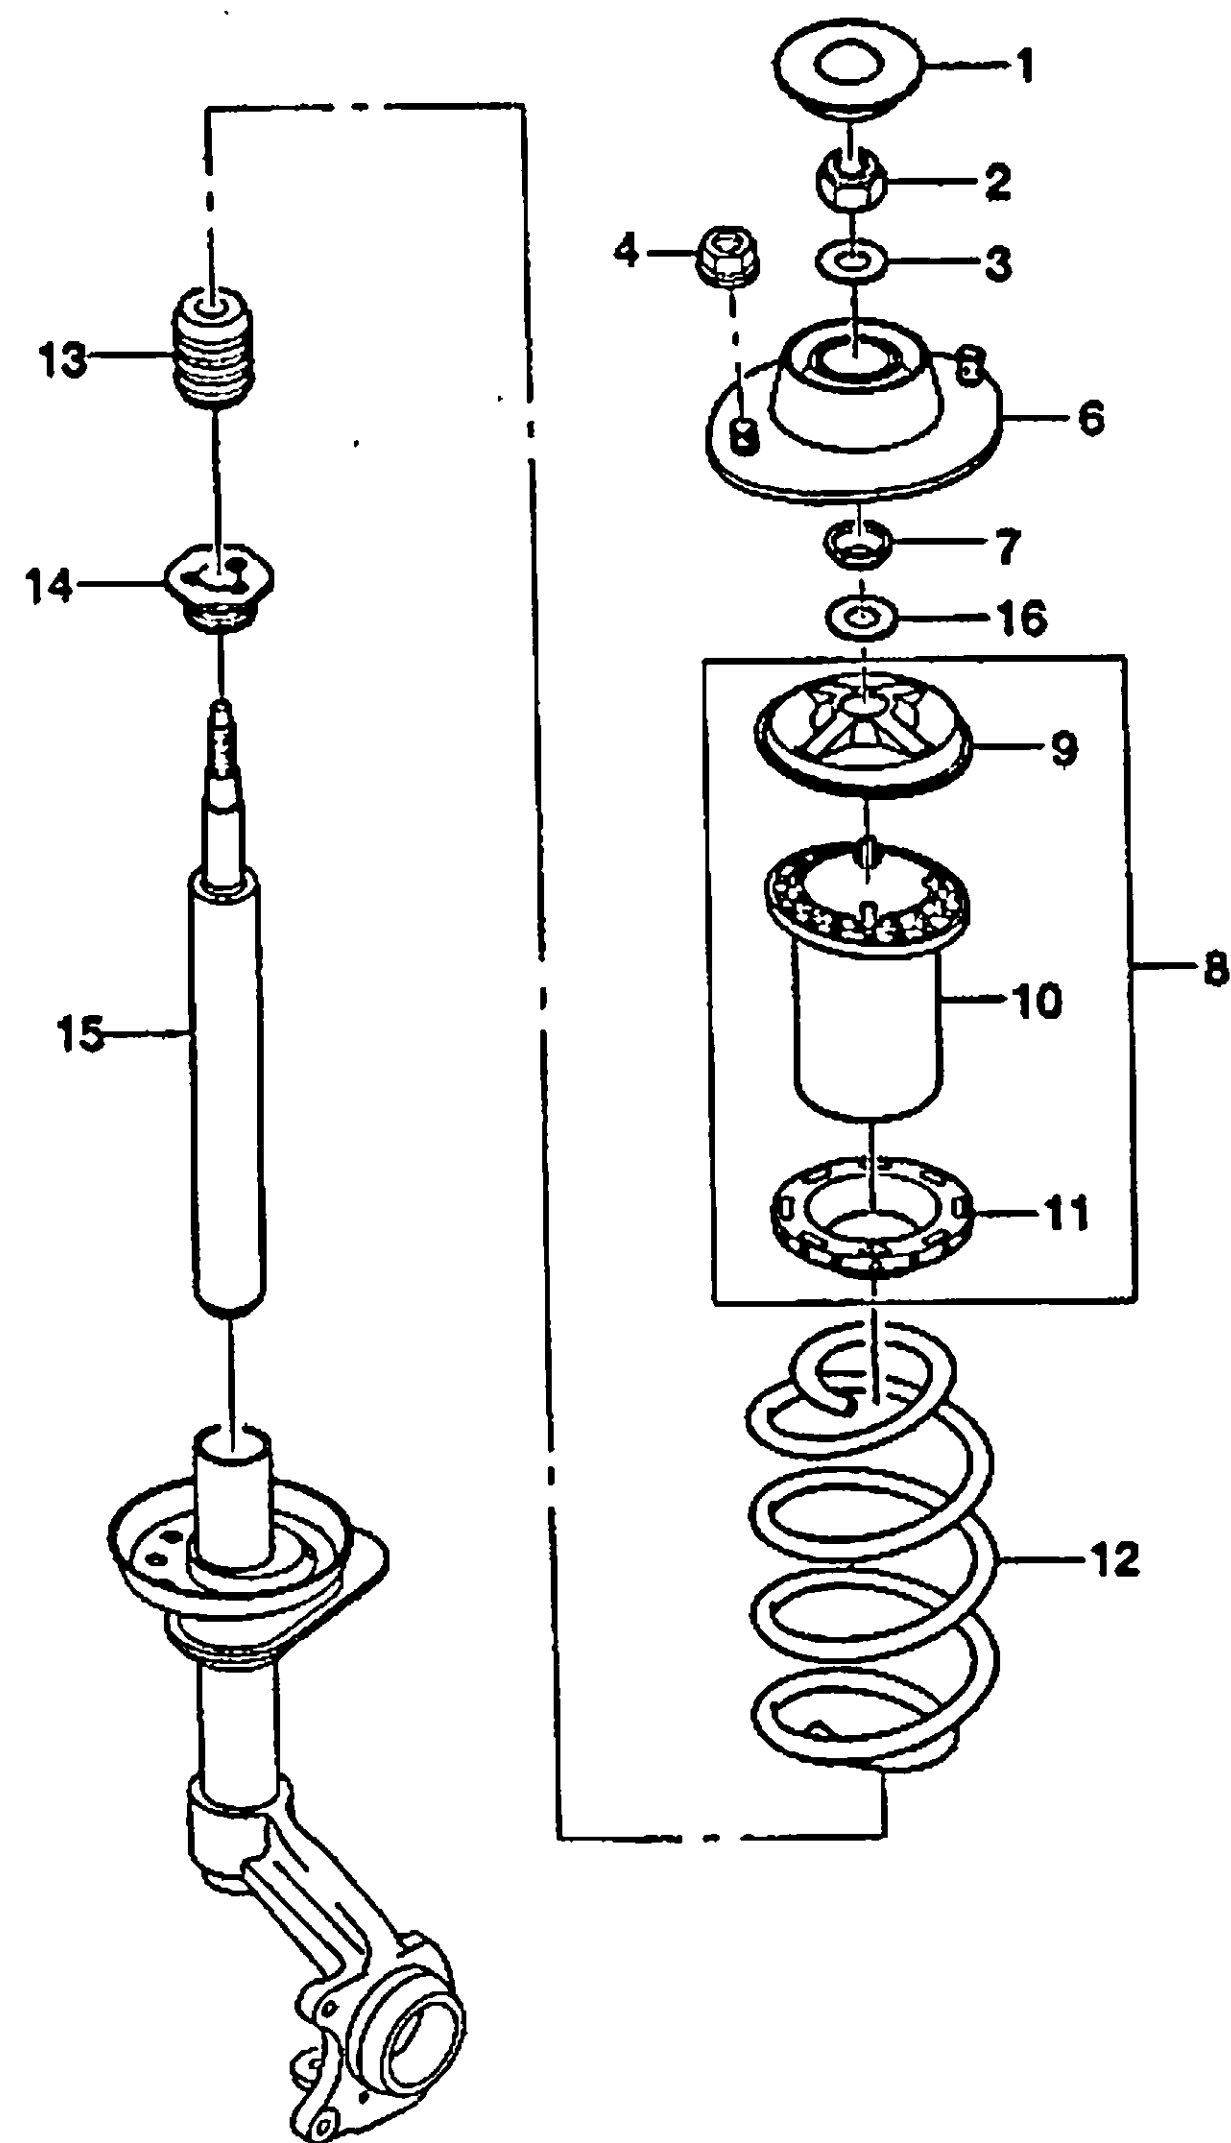


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E T N / G	A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	90216299	.	.	B	B	B	S	S	S		2					
	[12]	(E)SPRING-FRONT									(F)RESSORT-AVANT					
		(D)FEDERUNG,VORDERE									(S)RESORTE-FRENTE					
	96223500	Y	M	B	B	B	S	S	S	&C46&F39	2					
	96223501	Y	M	B	B	B	A	A	A	&C46&F40	2					
	96232695	Y	M	B	B	B	O	O	O	&C59/C60&F39	2					
	96223502	Y	M	B	B	B	A	A	A	&C59/C60&F40	2					
	96223501	Y	A	B	B	B	O	O	O	&C46&F39	2					
	96223508	Y	A	B	B	B	A	A	A	&C46&F40	2					
	96223502	Y	A	B	B	B	O	O	O	&C59/C60&F39	2					
	96246623	Y	A	B	B	B	A	A	A	&C59/C60&F40	2					
	96223501	6	M	B	B	B	.	.	O	&C46&F39	2					
	96223508	6	M	B	B	B	.	.	A	&C46&F40	2					
	96223502	6	M	B	B	B	.	.	O	&C59/C60&F39	2					
	96246623	6	M	B	B	B	.	.	A	&C59/C60&F40	2					
	96223502	6	A	B	B	B	.	.	O	&C46&F39	2					
	96246623	6	A	B	B	B	.	.	A	&C46&F40	2					
	96223508	6	A	B	B	B	.	.	O	&C59/C60&F39	2					
	96246624	6	A	B	B	B	.	.	A	&C59/C60&F40	2					
	[13]	(E)BUMPER-HOLLOW									(F)PARE-CHOC-EXCAVATION					
		(D)STOBSTANGE,HOHL									(S)TOPE-HUECO					
	90142884	Y	.	B	B	B	S	S	S		2					
	90125889	6	.	B	B	B	.	.	O		2					
	[14]	(E)RING-THREADED									(F)ANNEAU-FILETE					
		(D)RING,SCHRAUBENGWINDE									(S)ANILLO-CON ROSCA					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								


4M10

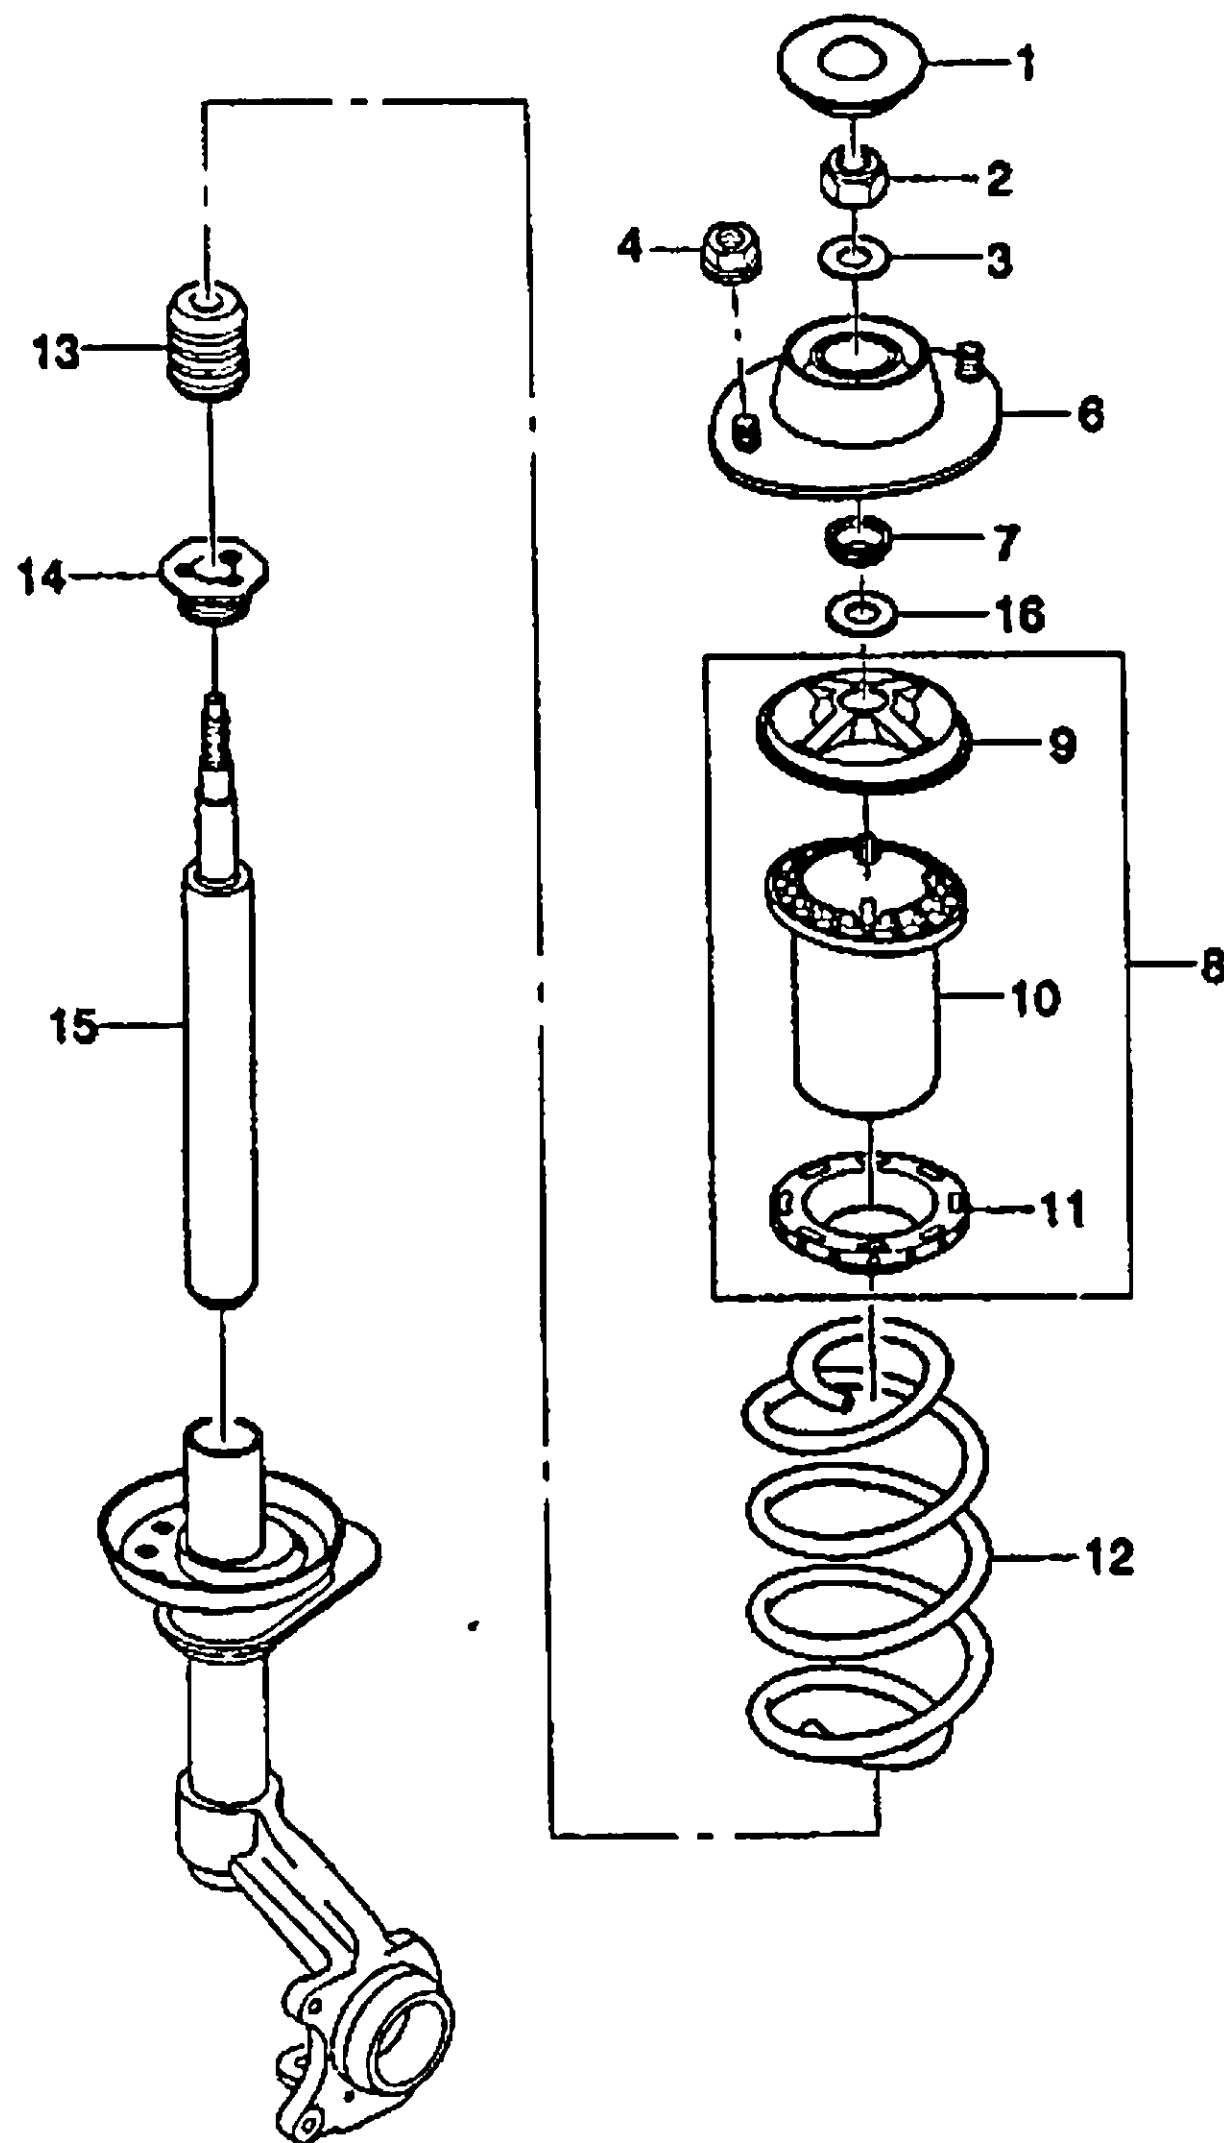


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S E
	90063897 [15]	.	.	B	B	B	S	S	S		2			(E)CARTRIDGE-SHOCK ABSORBER (D)KASSETTE,STOßDÄMPFER	(F)CARTOUCHE-AMORTISSEUR (S)CARTUCHO-AMORTIGUADOR
	96226992 [16]	.	.	B	B	B	S	S	S		2			(E)WASHER-PLAIN (D)DICHTUNGSRING	(F)RONDELLE (S)ARANDELA
	09160-14005	.	.	B	B	B	S	S	S		2				

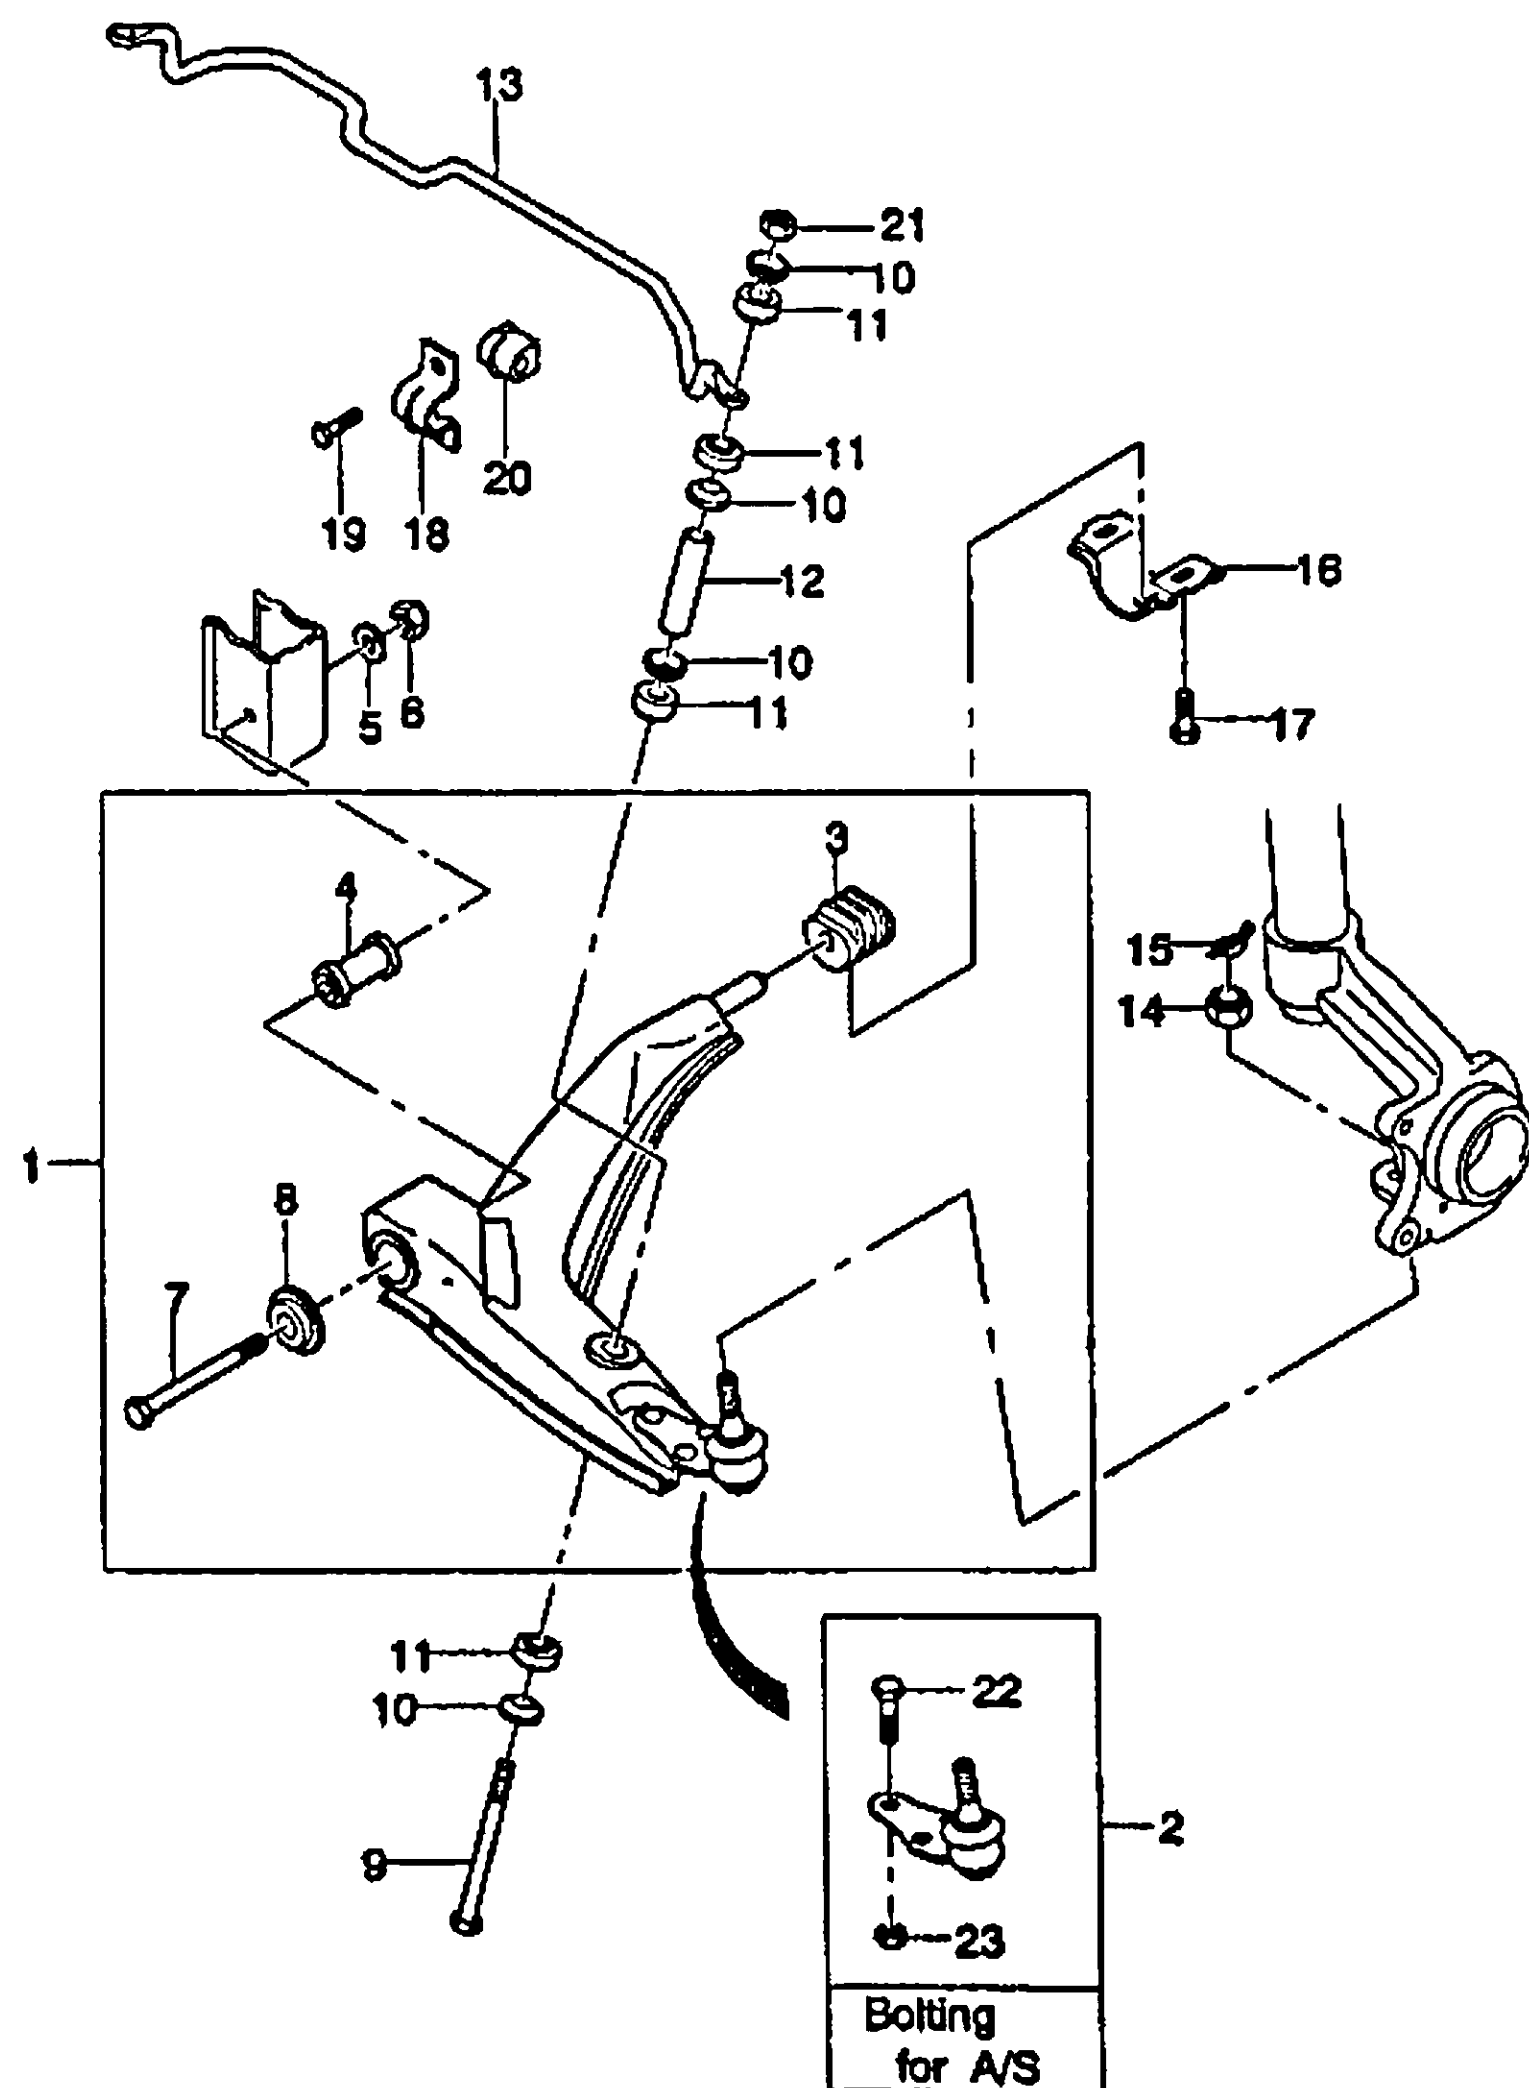


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	[01]	(E)ARM A-CONTROL (D)ARM,STEUERUNG									(F)BRAS-CONTROLE (S)BRAZO-CONTROL				
	96218397	. . B B B S S S						&F39			LH 1				
	96218398	. . B B B S S S						&F39			RH 1				
	96218399	. . B B B A A A						&F40			LH 1				
	96218400	. . B B B A A A						&F40			RH 1				
	[02]	(E)JOINT SET-CONTROL ARM BAL (D)GLIED SATZ,KONSTANT ARM									(F)JEU DE JOINTS (S)JUEGO DE UNION				
	94788122	. . B B B S S S									2				
	[03]	(E)BUSHING-RR CONT ARM DAMPING (D)LAGERFUTTER									(F)COUSSINET (S)BUJE-AMORTIGUADOR				
	90235040	. . B B B S S S									2				
	[04]	(E)BUSHING-FRT CONT ARM DAMPING (D)LAGERFUTTER									(F)MANCHON (S)BUJE-AMORTIGUADOR,FRENTE				
	96185973	. . B B B S S S									2				
	[05]	(E)WASHER-PLAIN (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA				
	09160-14007	. . B B B S S S									2				
	[06]	(E)NUT-HEXAGON LOCK (D)MUTTER									(F)ECROU (S)TUERCA				
	08311-28143	. . B B B S S S									2				
	[07]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09100-14004	. . B B B S S S									2				
	[08]	(E)PLATE (D)PLATTE									(F)PLAQUE (S)PLACA				
	90105063	. . B B B S S S									2				
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

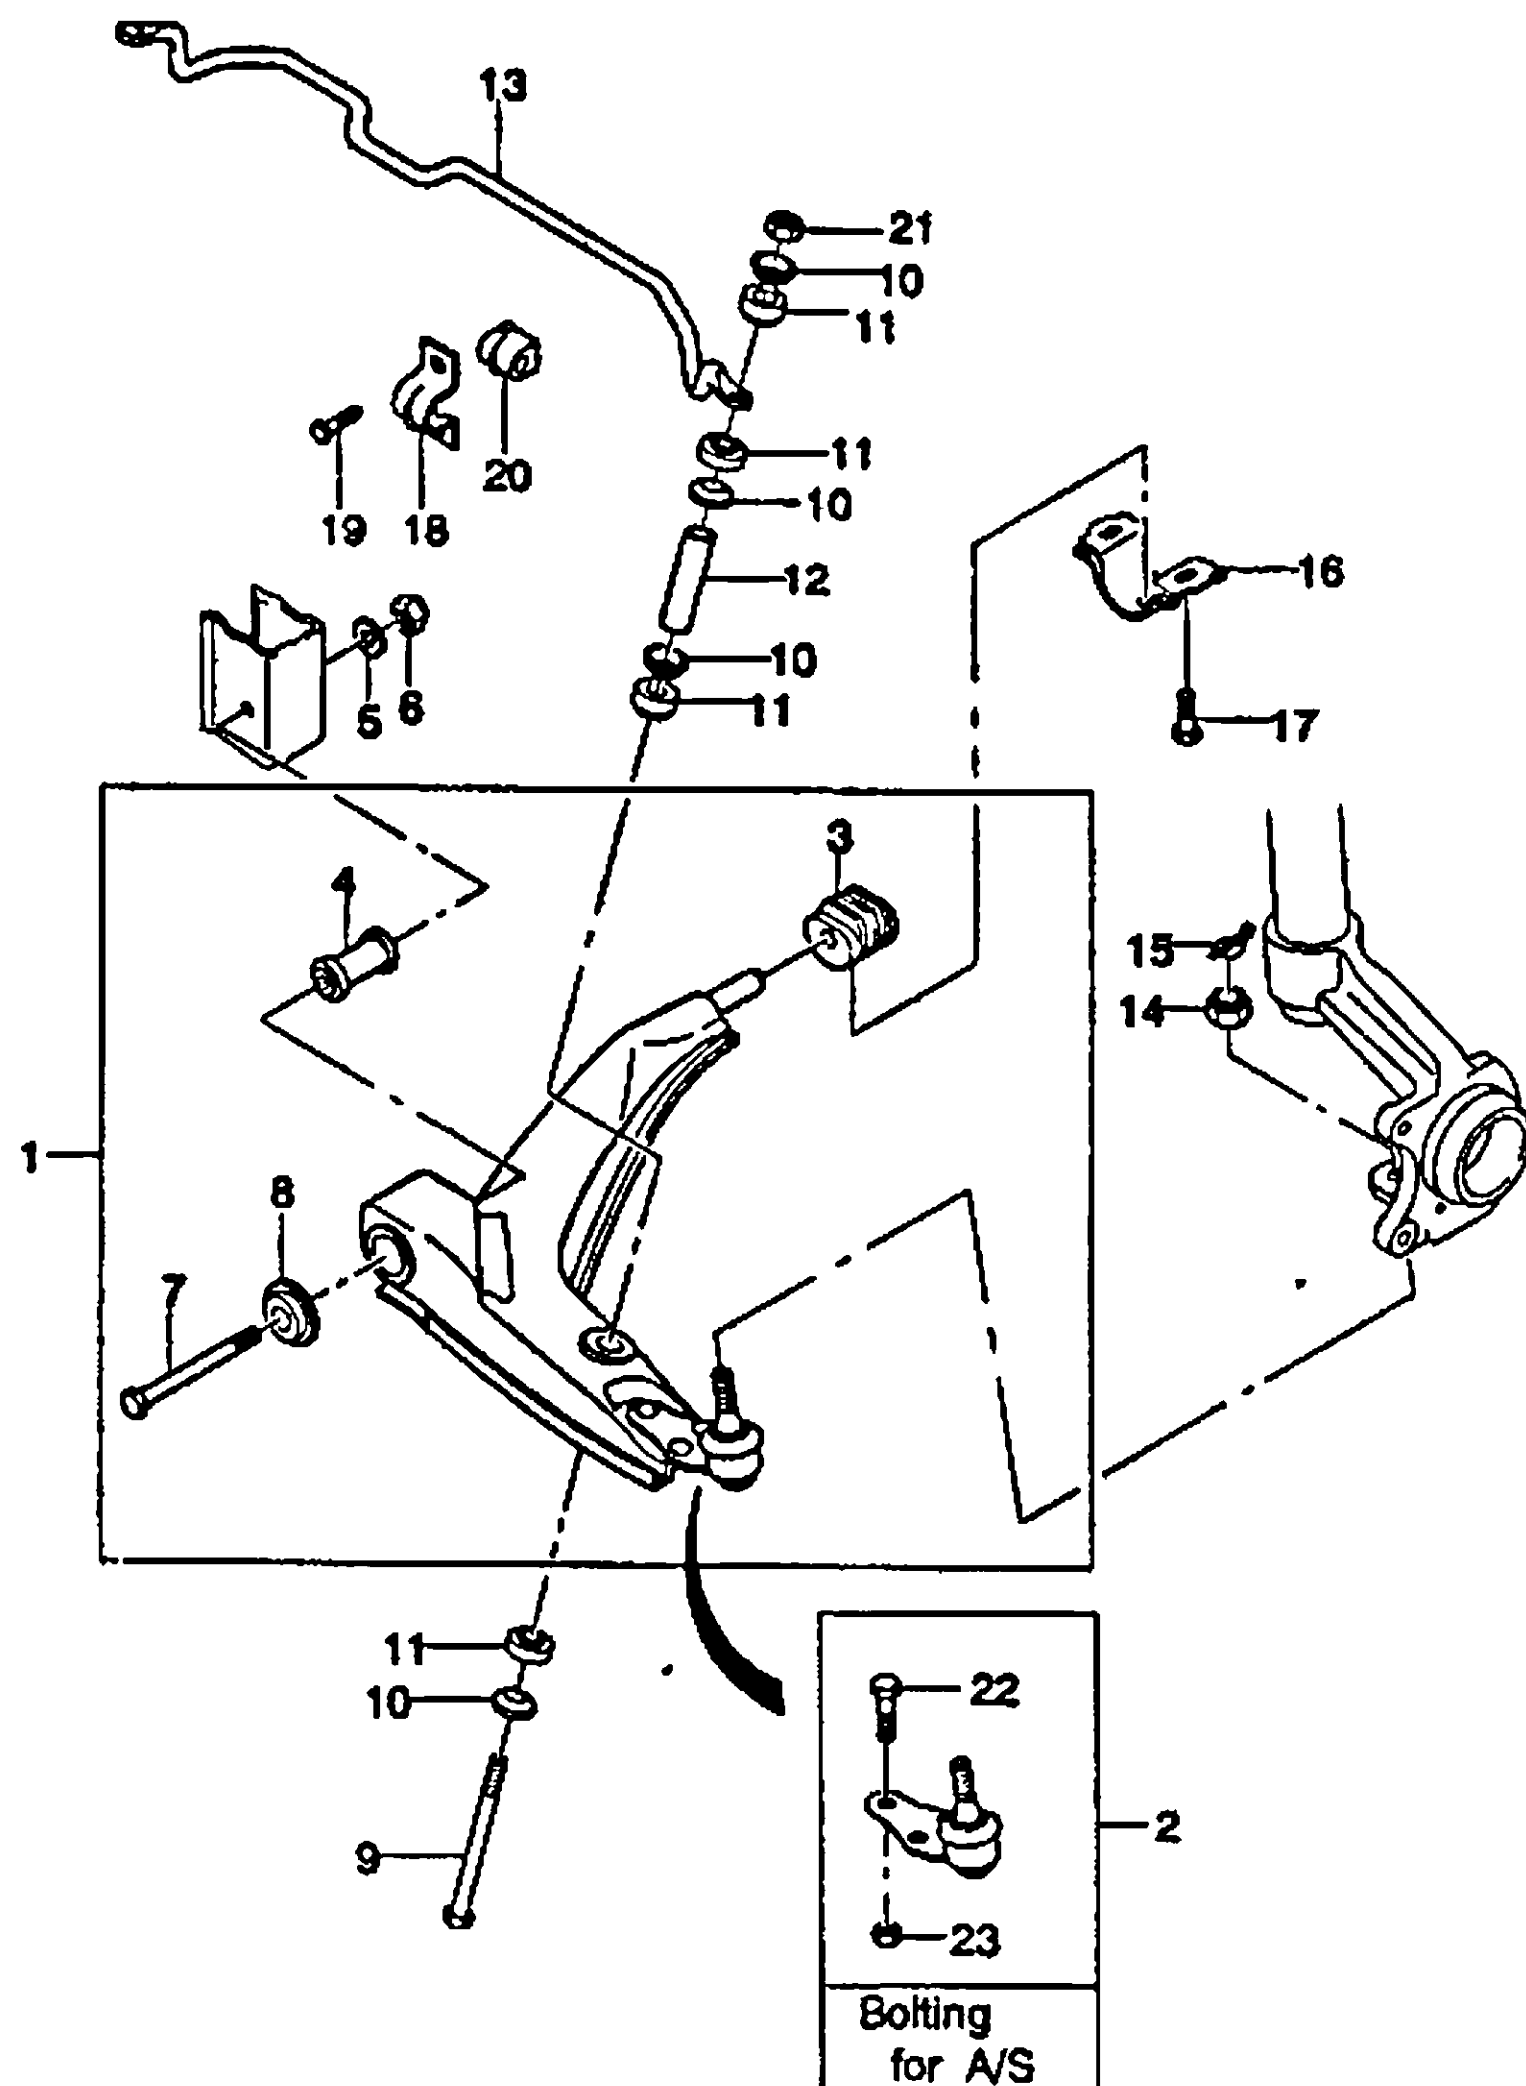


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N	3 H	5 H								
	[09]	(E)BOLT-HEXAGON (D)SCHRAUBE								(F)BOULON (S)PERNO				
	09100-08001	. . B B B S S S								2				
	[10]	(E)PLATE-BUMPER (D)PLATTE,STOßSTANGE								(F)PLAQUE-PARE-CHOC (S)PLACA-PARACHOQUES				
	90209277	. . B B B S S S								8				
	[11]	(E)BUMPER-STABILIZER (D)STOßSTANGE,STABILISATOR								(F)PARE-CHOC-STABILISATEUR (S)TOPE-ESTABILIZADOR				
	02875013	. . B B B S S S								8				
	[12]	(E)TUBE (D)ROHRLEITUNG								(F)TUYAU OU TUBE (S)TUBO				
	11087513	. . B B B S S S								2				
	[13]	(E)STABILIZER-FRONT (D)STABILISATOR,VORNE								(F)STABILISATEUR-AVANT (S)ESTABLIZADOR-FRENTE				
	96226986	. . B B B S S S								1				
	[14]	(E)NUT (D)MUTTER								(F)ECROU (S)TUERCA				
	09141-12001	. . B B B S S S								2				
	[15]	(E)SPRING-RETAINING (D)FEDERUNG,HALTER								(F)RESSORT-D'ARRET (S)RESORTE-REteniENDO				
	90095298	. . B B B S S S								2				
	[16]	(E)CAP-DAMPING BUSHING (D)DECKEL,DÄMPFUNGS-FUTTER								(F)CHAPEAU (S)TAPA-BUJE DE AMORTIGUADOR				
	90344190	. . B B B S S S								2				
	[17]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE								(F)BOULON (S)PERNO				
	09103-10010	. . B B B S S S								4				
	[18]	(E)CLAMP-STABILIZER BUSHING (D)KLAMMER								(F)PINCE (S)ABRAZADERA-BUJE				
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

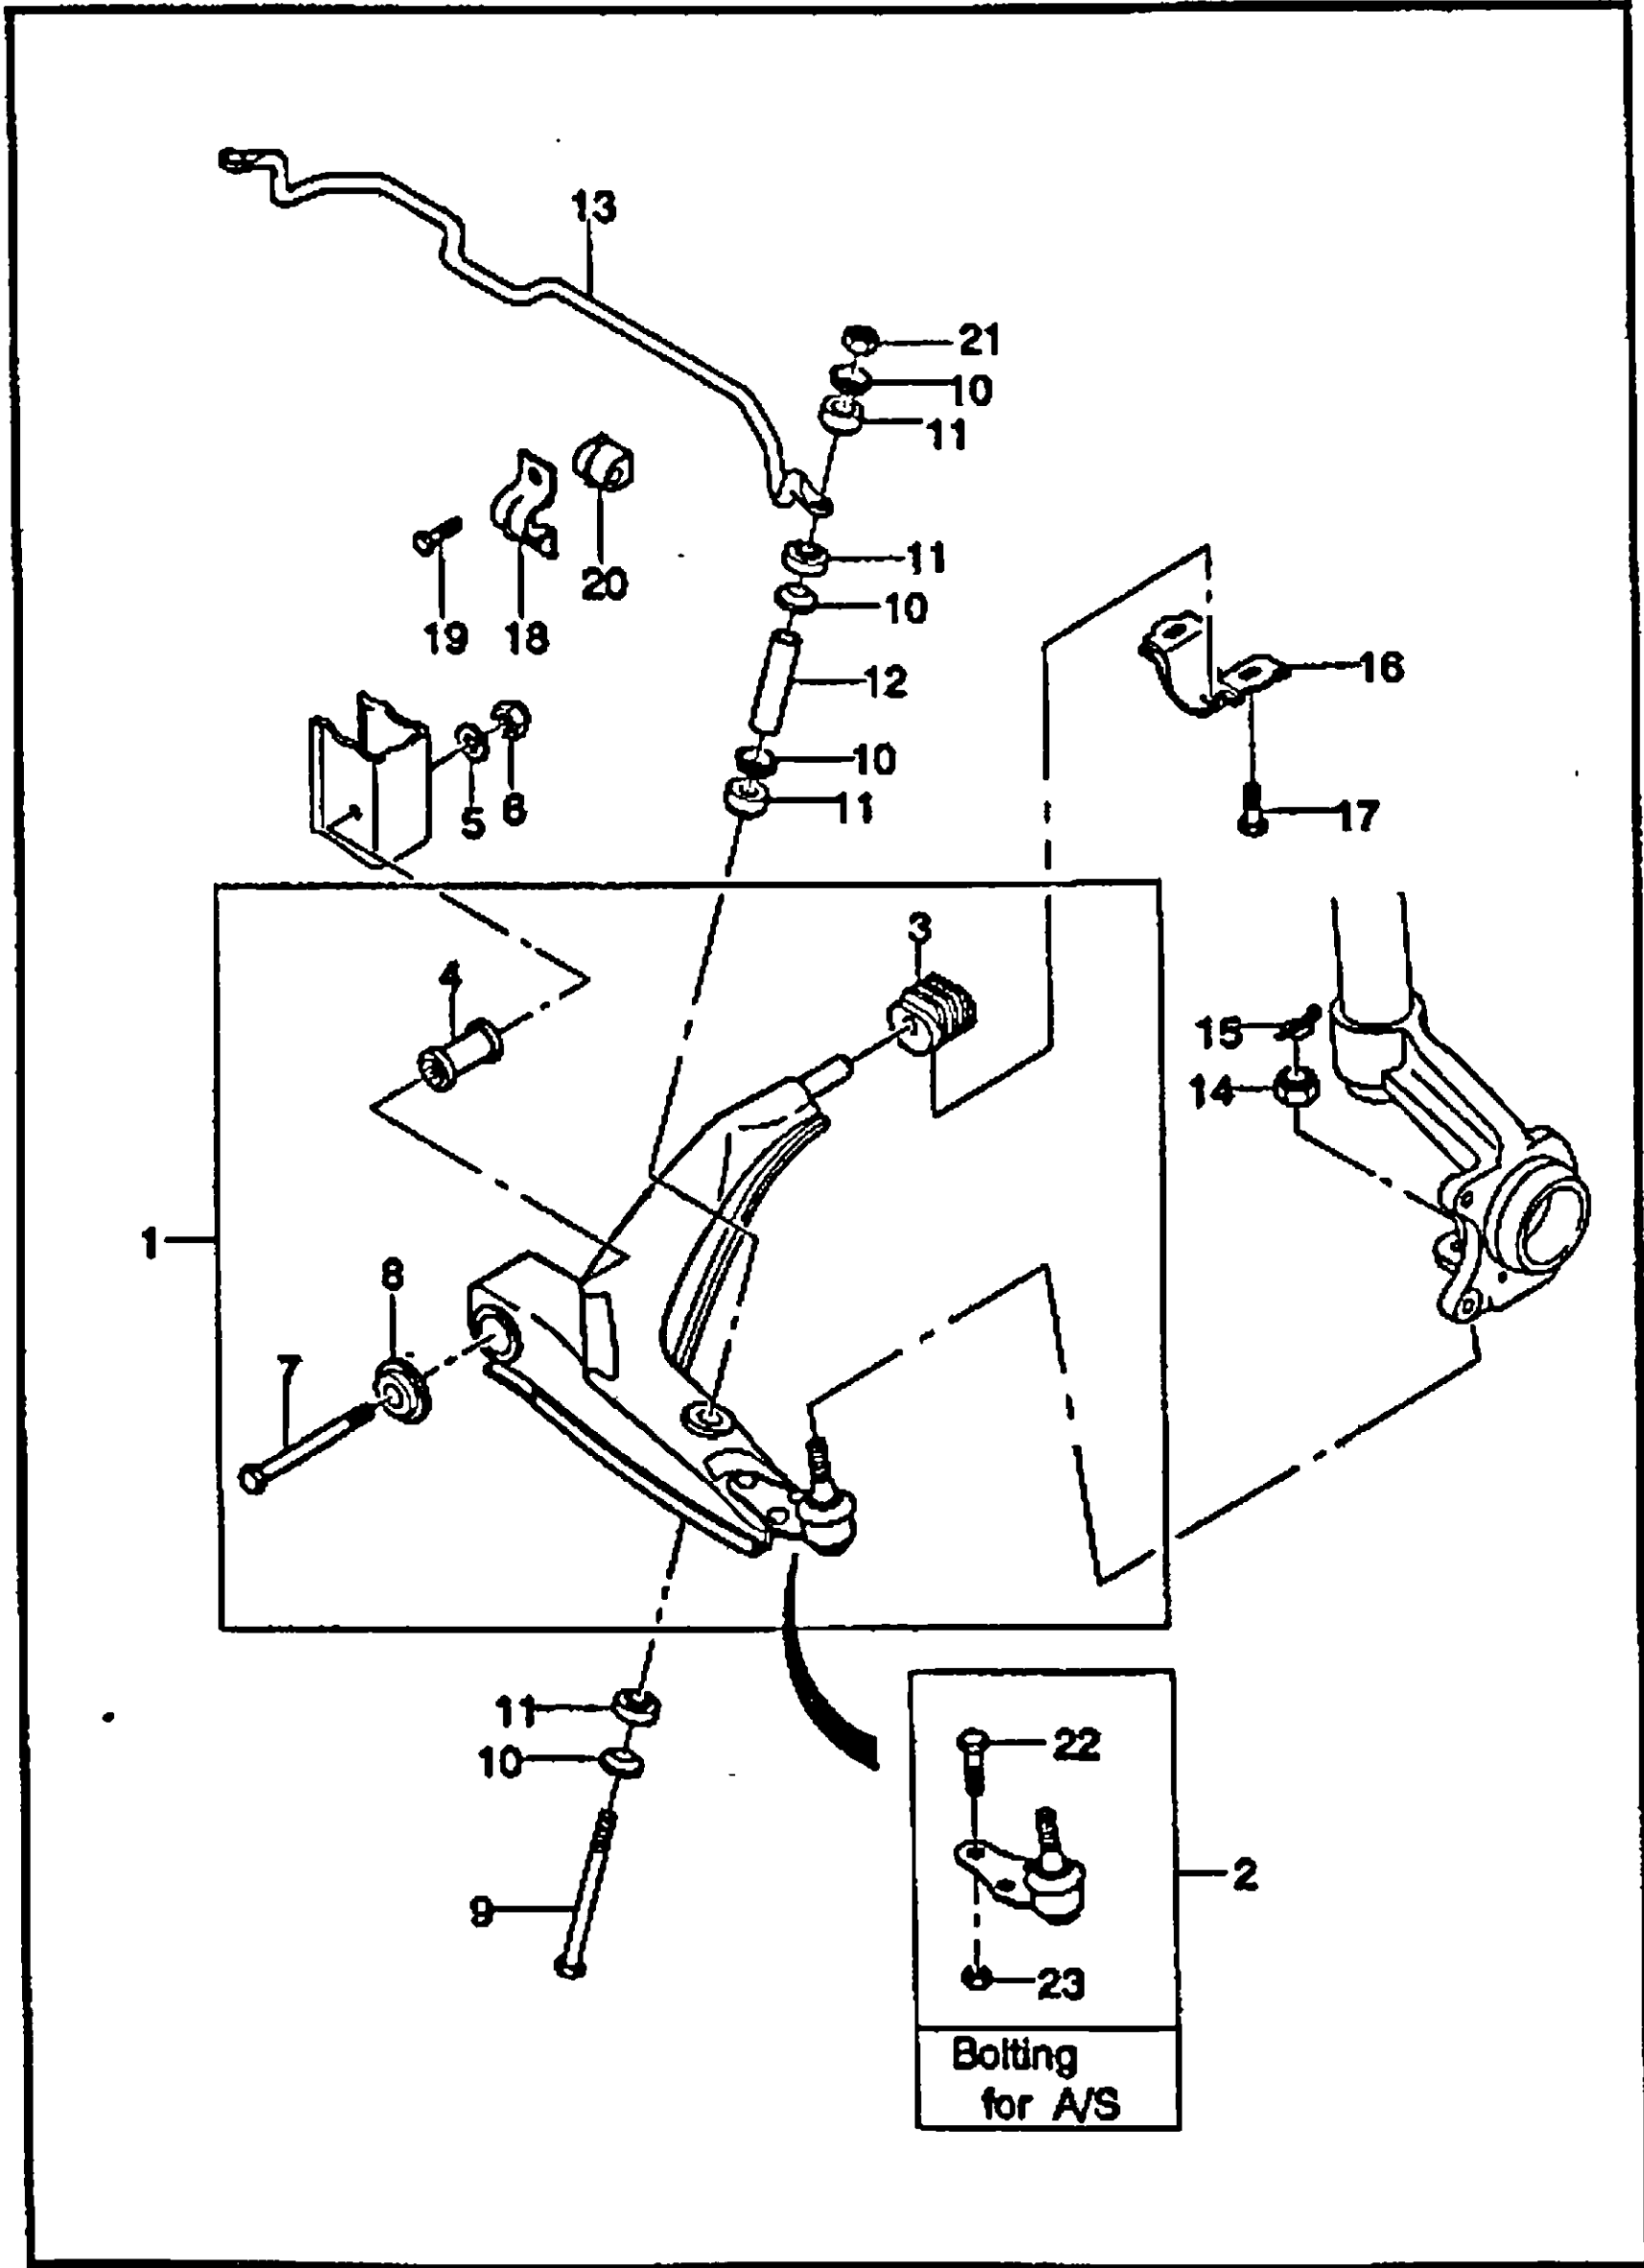


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	96230714	.	.	B	B	B	S	S	S		2					
	[19]			(E)	BOLT-HEXAGON							(F)BOULON				
				(D)	SCHRAUBE							(S)PERNO				
	09100-10003	.	.	B	B	B	S	S	S		4					
	[20]			(E)	BUSHING-STABILIZER BAR							(F)MANCHON-STABILISATEUR				
				(D)	LAGERFUTTER,STABILISATOR							(S)BUJE-ESTABILIZADOR				
	96227420	.	.	B	B	B	S	S	S		2	970701				
O	96246674	.	.	B	B	B	S	S	S		2	970701				
	[21]			(E)	NUT-HEXAGON LOCK							(F)ECROU				
				(D)	MUTTER							(S)TUERCA				
	08311-28082	.	.	B	B	B	S	S	S		2					
	[22]			(E)	BOLT-HEXAGON							(F)BOULON				
				(D)	SCHRAUBE							(S)PERNO				
	09100-10020	.	.	B	B	B	S	S	S		3					
	[23]			(E)	NUT-HEXAGON LOCK							(F)ECROU				
				(D)	MUTTER							(S)TUERCA				
	09159-10016	.	.	B	B	B	S	S	S		3					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

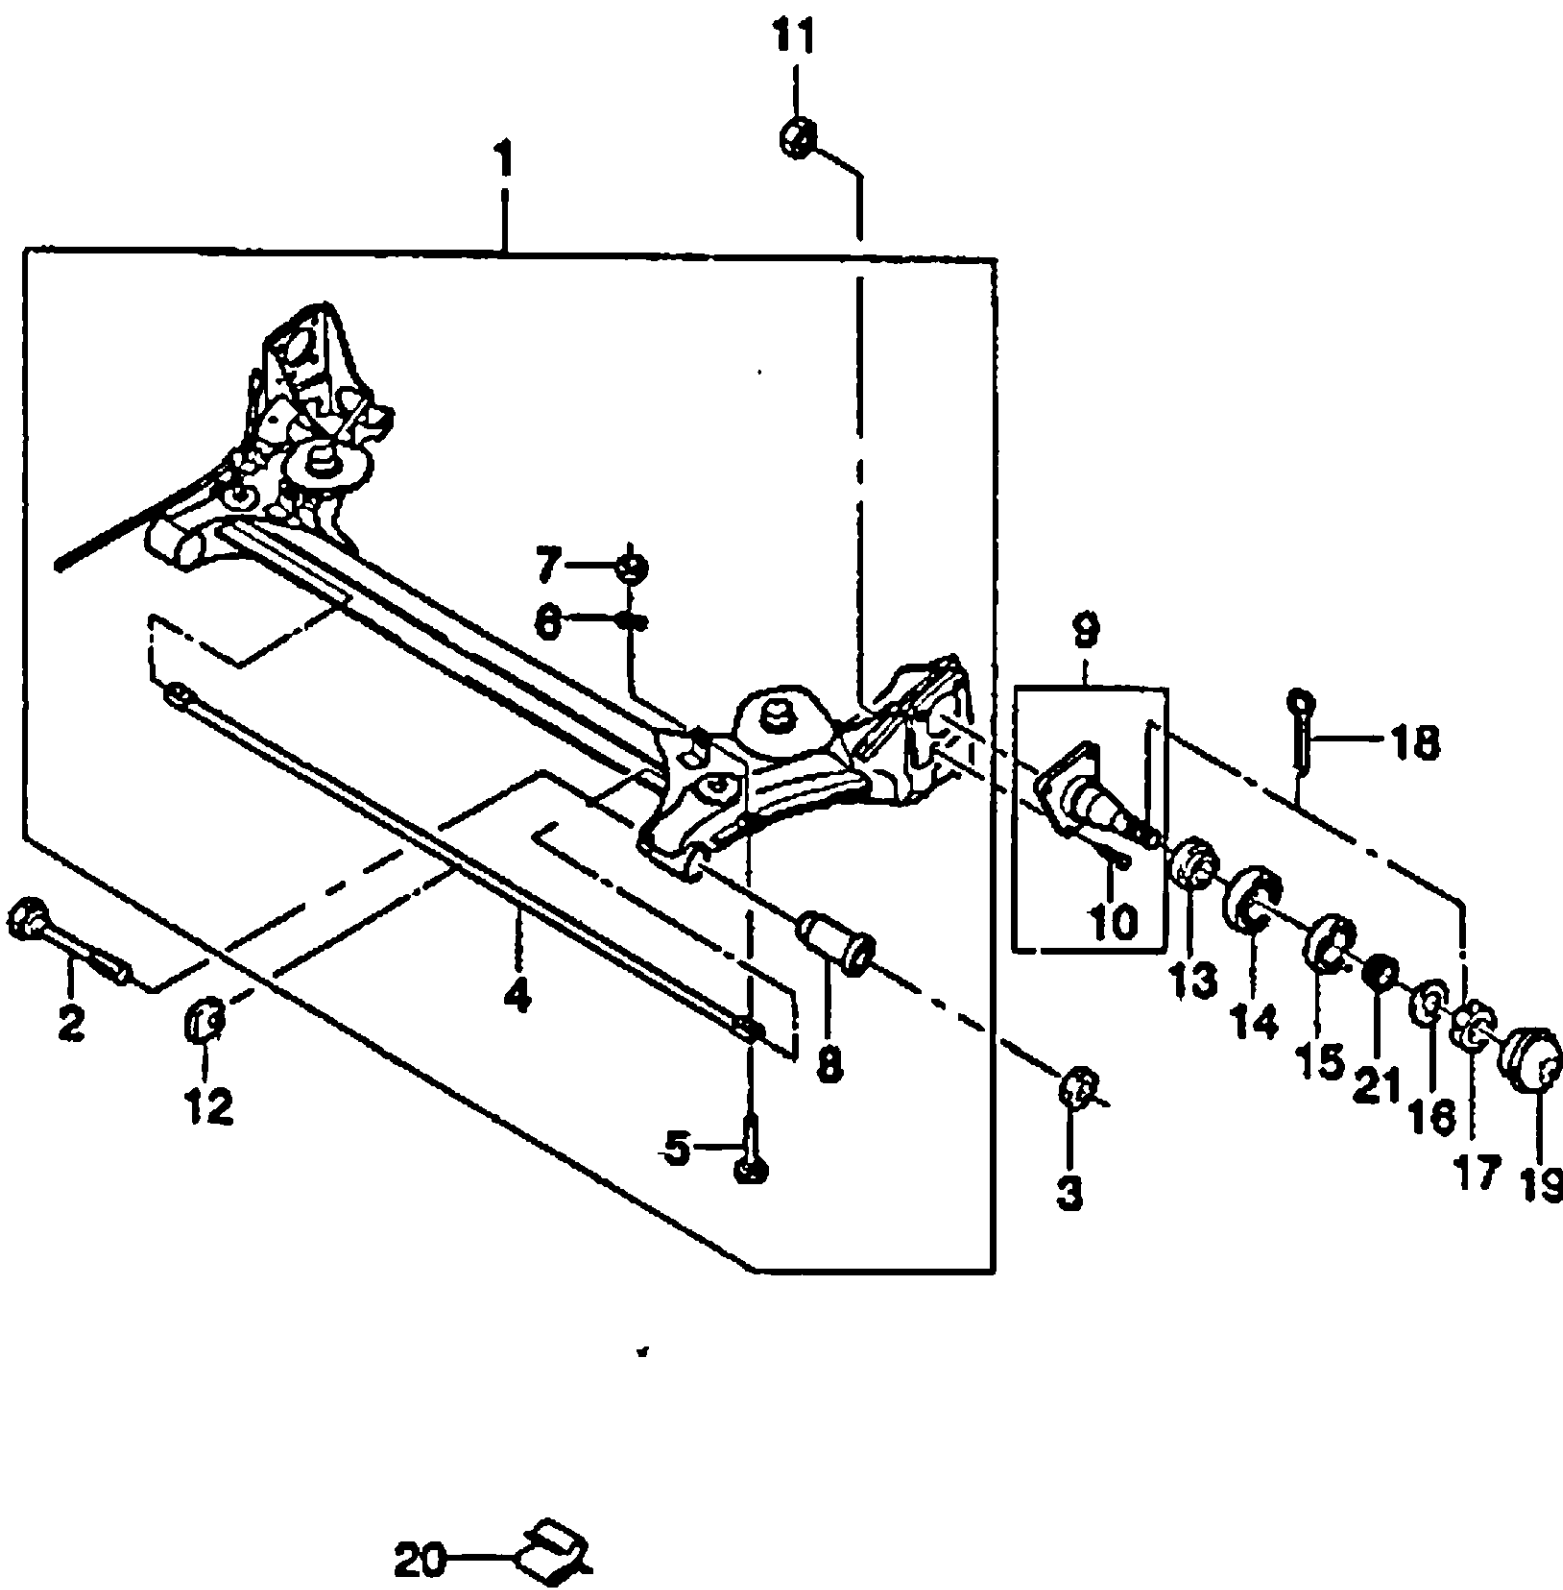


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	[01]	(E)AXLE A-REAR (D)ACHSE,HINTEN										(F)PONT-ARRIERE (S)EJE-TRASERO			
	96219577	.	.	B	B	B	S	S	S			1			
	[02]	(E)BOLT-HEXAGON (D)SCHRAUBE										(F)BOULON (S)PERNO			
	09100-12015	.	.	B	B	B	S	S	S			2			
	[03]	(E)NUT (D)MUTTER										(F)ECROU (S)TUERCA			
	09159-12011	.	.	B	B	B	S	S	S			2			
	[04]	(E)STABILIZER-REAR (D)STABILISATOR,HINTEN										(F)STABILISATEUR-ARRIERE (S)ESTABILIZADOR-TRASERO			
	96208559	.	.	B	B	B	S	S	S			1			EE
	[05]	(E)BOLT-HEXAGON (D)SCHRAUBE										(F)BOULON (S)PERNO			
	09100-10015	.	.	B	B	B	S	S	S			2			
	[06]	(E)WASHER-SPRING (D)DICHTUNGSRING										(F)RONDELLE (S)ARANDELA			
	09162-10002	.	.	B	B	B	S	S	S			2			
	[07]	(E)NUT (D)MUTTER										(F)ECROU (S)TUERCA			
	09159-10008	.	.	B	B	B	S	S	S			2			
	[08]	(E)BUSHING-REAR AXLE DAMPING (D)LAGERFUTTER										(F)COUSSINET (S)BUJE-AMORTIGUADOR			
	90139050	.	.	B	B	B	S	S	S			2			
	[09]	(E)SPINDLE A-WHEEL BEARING (D)SPINDEL										(F)ROULEMENT PALIER (S)EJE			
	96115666	.	.	B	B	B	S	S	S	JL9		2			
	[10]	(E)BOLT (D)SCHRAUBE										(F)BOULON (S)PERNO			
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

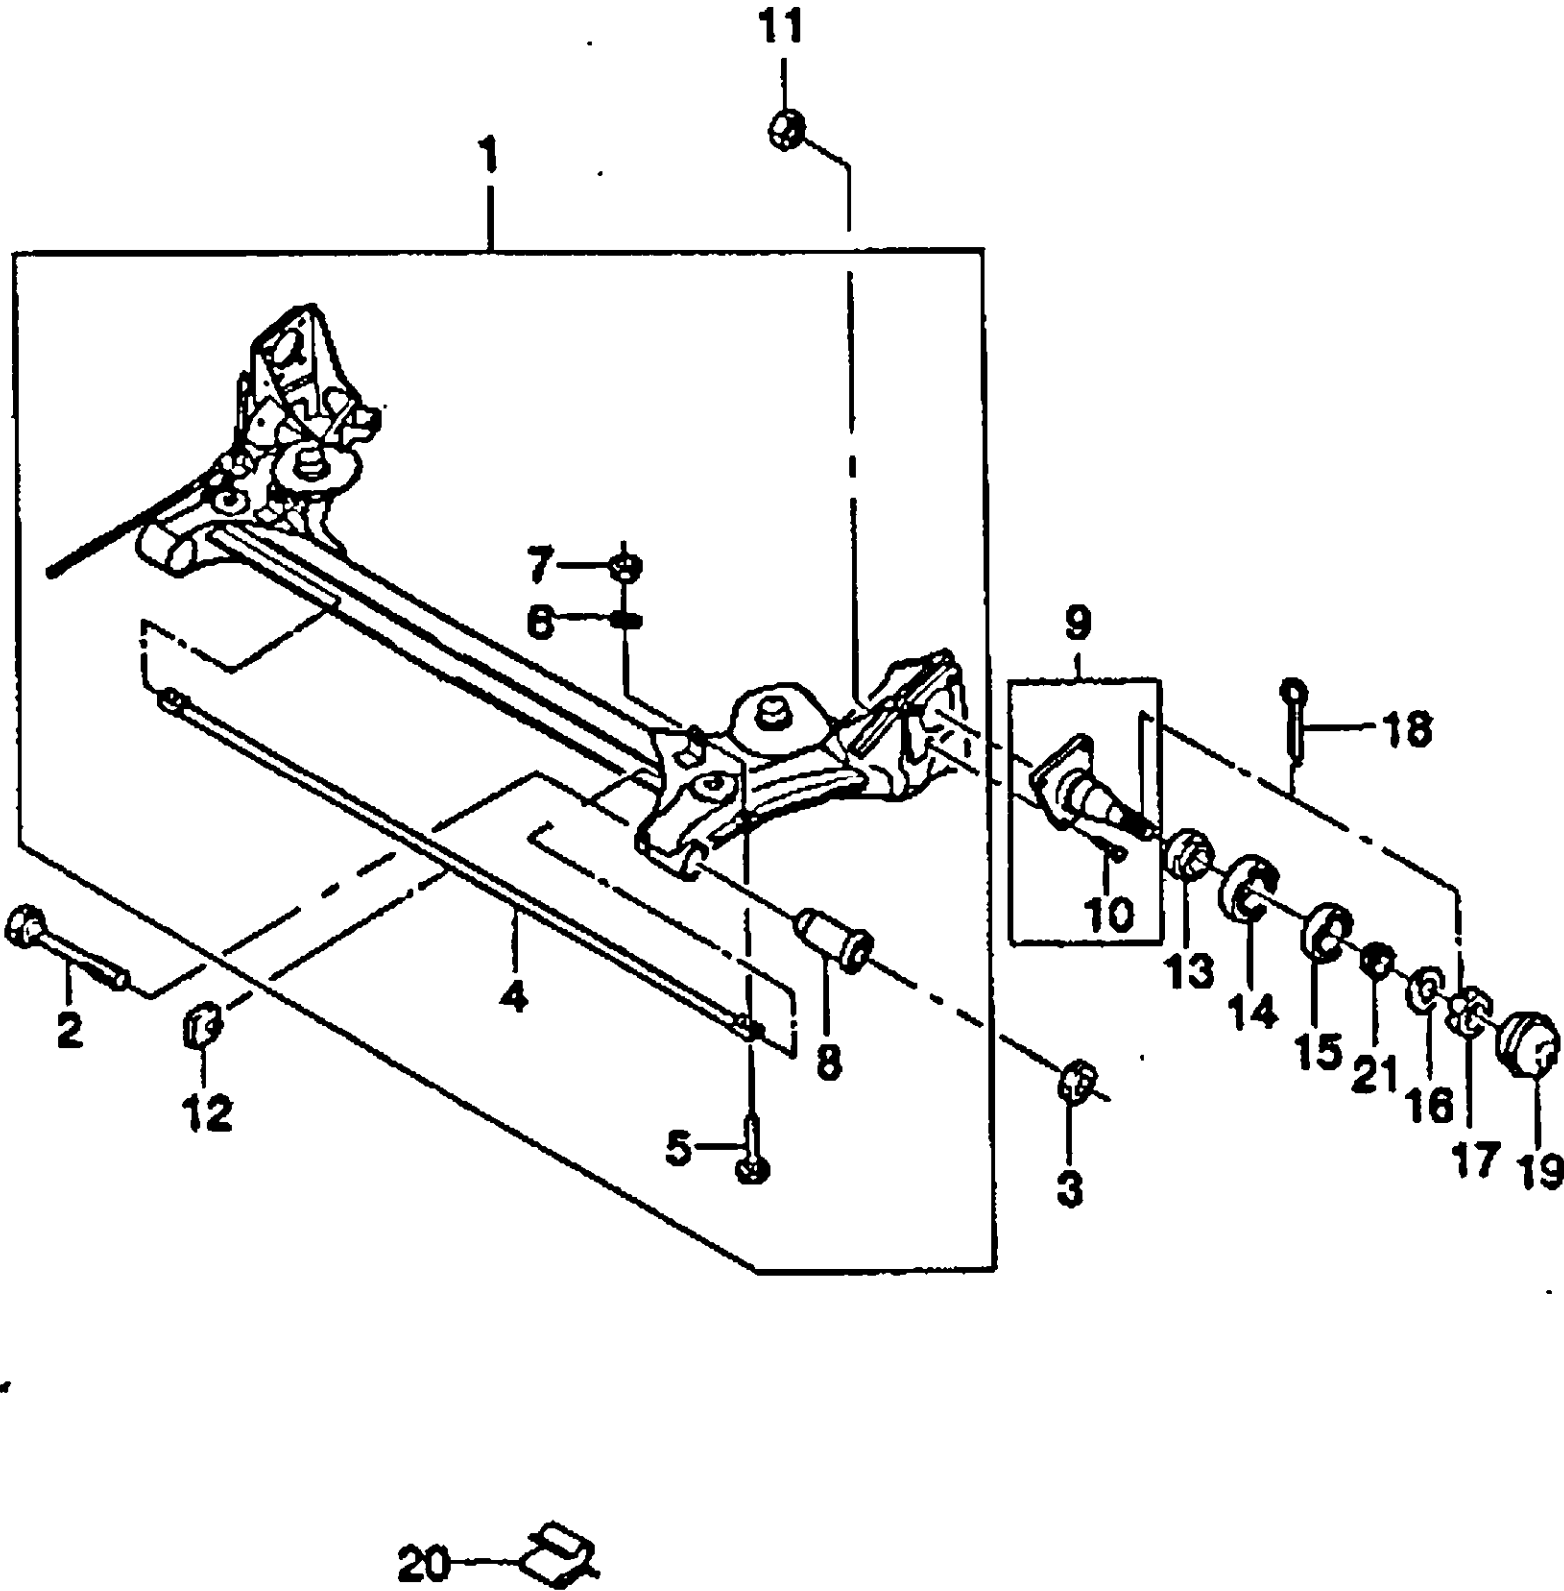

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	09119-10007	.	.	B	B	B	S	S	S	JL9		8				
	[11]											(F)ECROU (S)TUERCA				
	09159-10010	.	.	B	B	B	S	S	S	JL9		8				
	[12]											(F)AMORTISSEUR-STABILISATEUR (S)AMORTIGUADOR				
	96208560	.	.	B	B	B	S	S	S			1				
	[13]											(F)JOINT D'ETANCHEITE (S)SELLO				
	09283-40001	.	.	B	B	B	S	S	S	JL9		2				
	[14]											(F)ROULEMENT (S)COJINETE				
	09265-29001	.	.	B	B	B	S	S	S	JL9		2				
	[15]											(F)ROULEMENT,EXTERIEUR (S)COJINETE,EXTERIOR				
	09265-17201	.	.	B	B	B	S	S	S	JL9		2				
	[16]											(F)RONDELLE (S)ARANDELA				
	09166-16001	.	.	B	B	B	S	S	S	JL9		2				
	[17]											(F)ECROU (S)TUERCA				
	09141-16001	.	.	B	B	B	S	S	S	JL9		2				
	[18]											(F)BROCHE (S)PASADOR				
	09204-03001	.	.	B	B	B	S	S	S	JL9		2				
	[19]											(F)CHAPEAU-MOYEU (S)TAPA-CUBO				
	06696899	.	.	B	B	B	S	S	S	JL9		2				
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

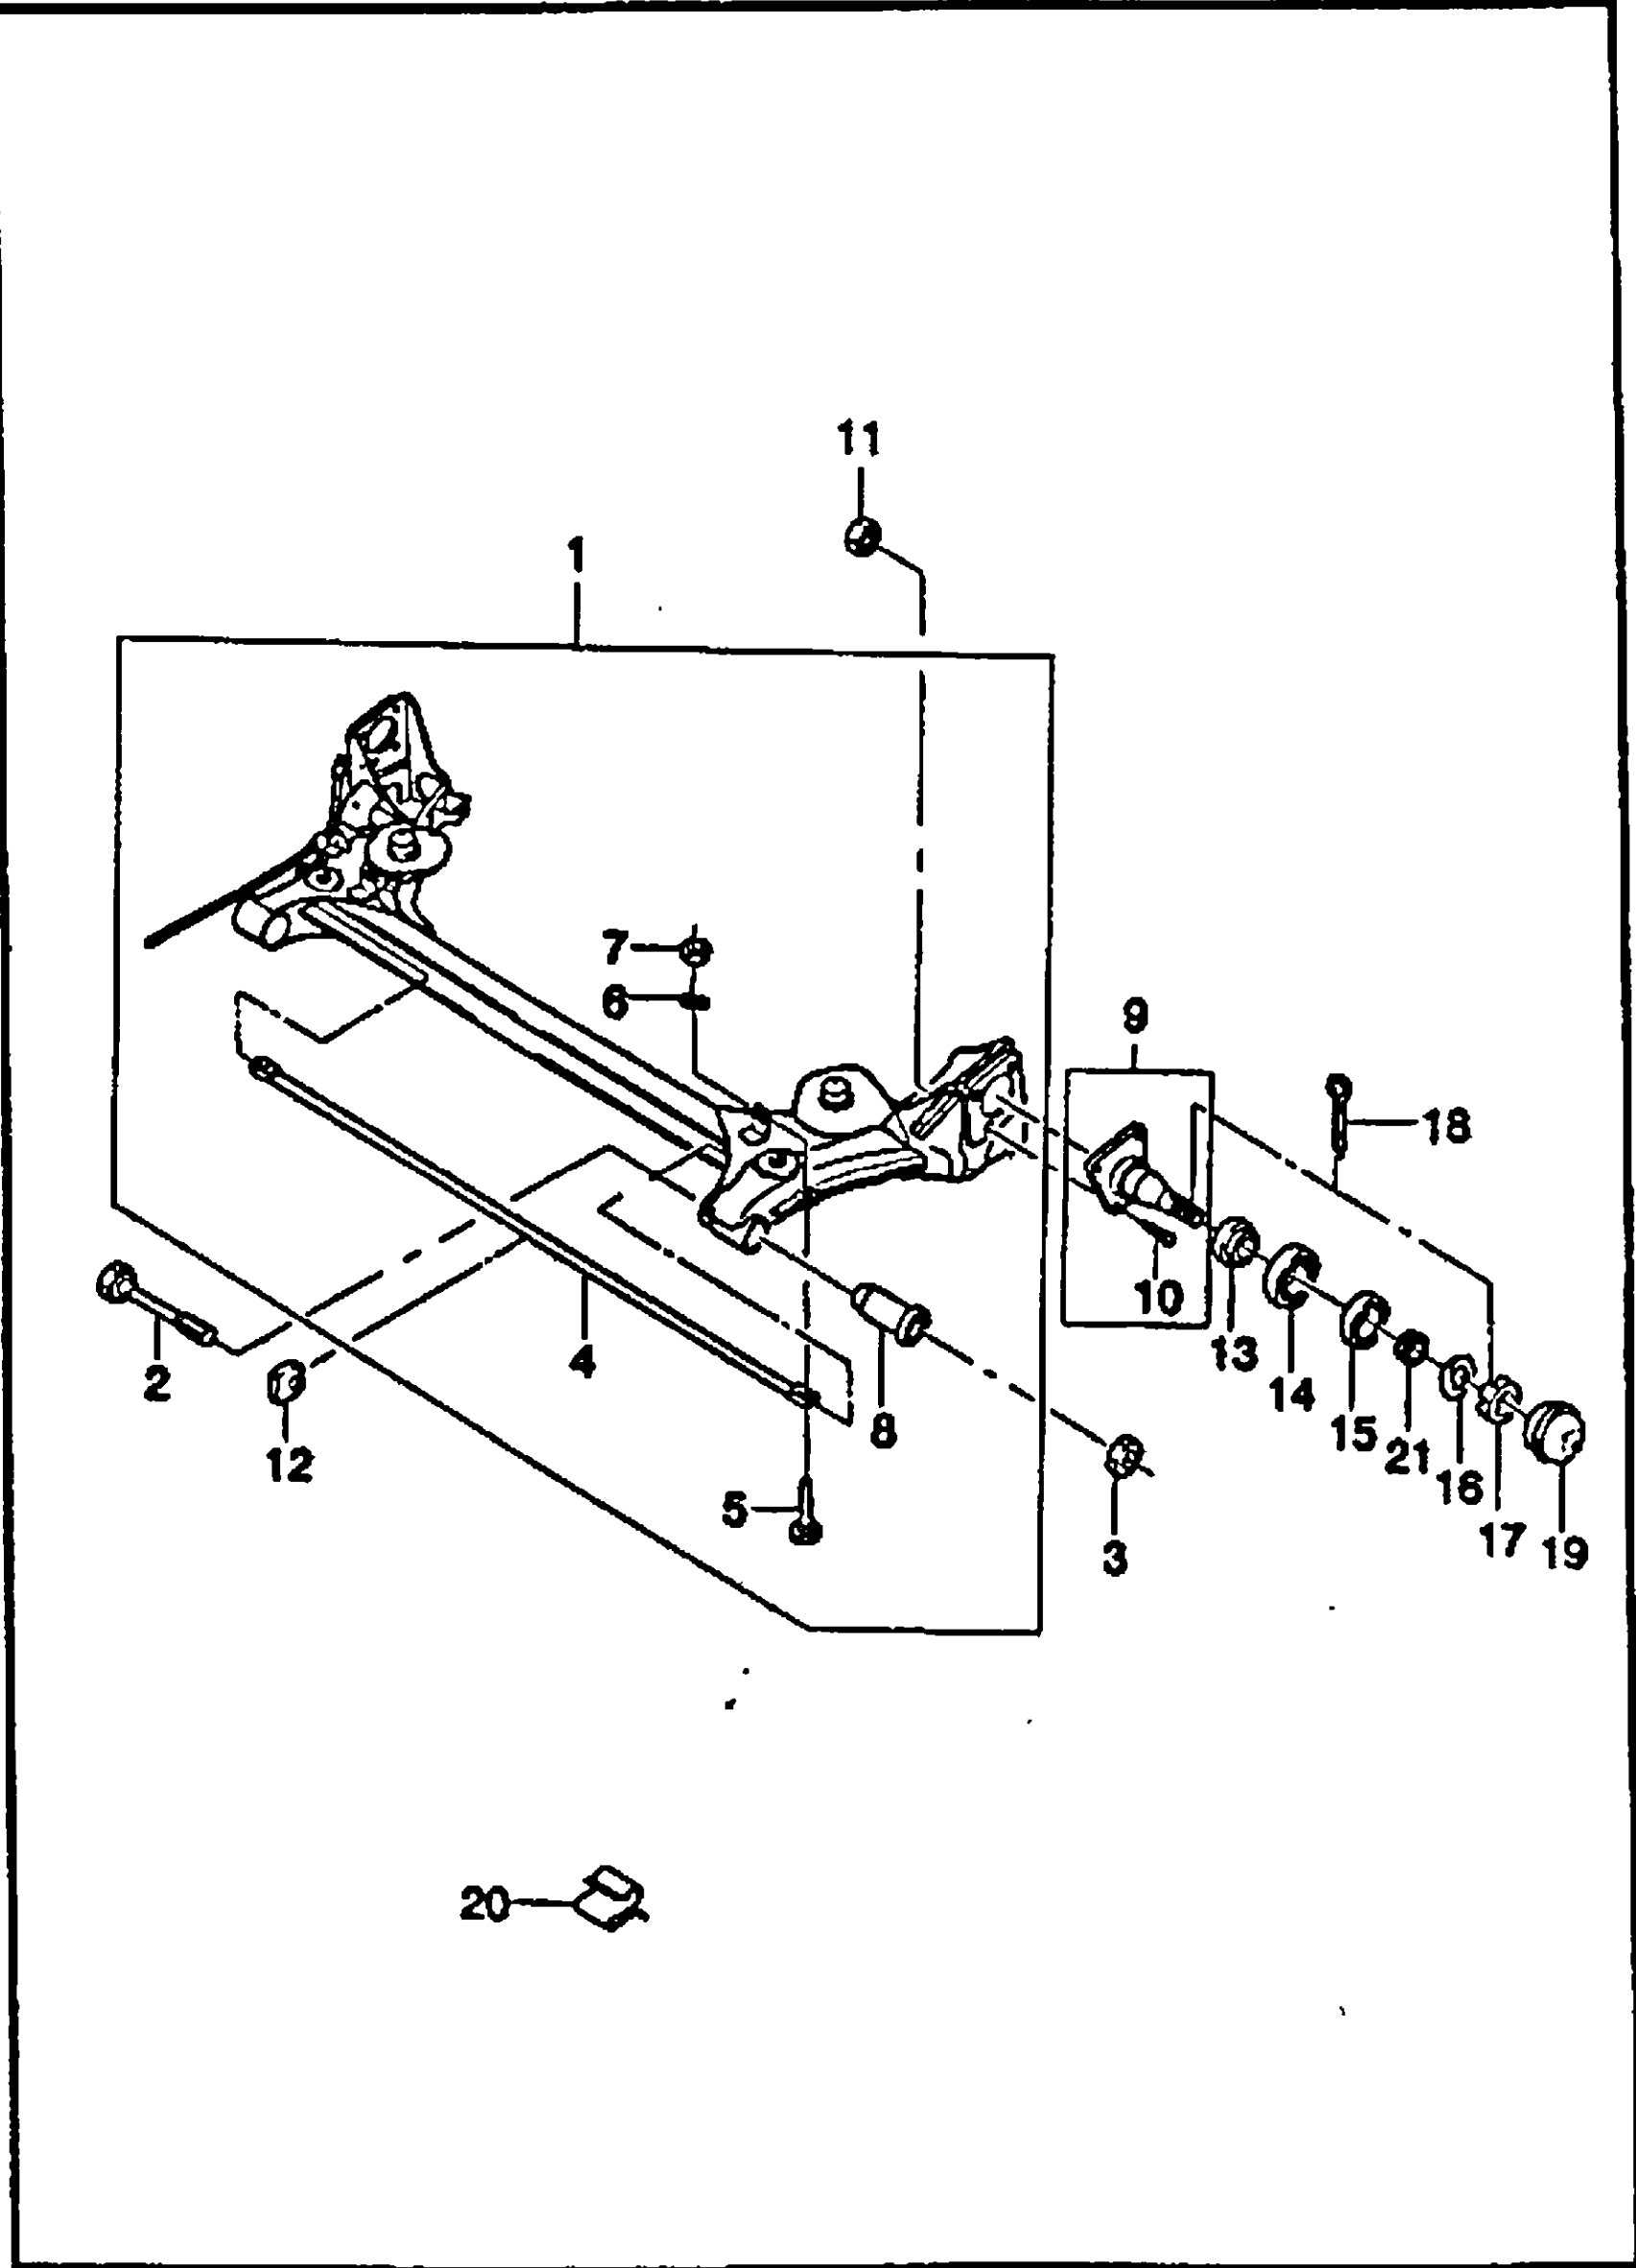


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S								S E	S X
	[20] 09408-00068	(E)CLIP (D)KLEMME	.	.	B	B	B	.	O	O	&JL9	(F)ATTACHE (S)GRAPA 3				
	[21] 09265-17101	(E)BEARING-INNER (D)KUGELLAGER,INNEN	.	.	B	B	B	S	S	S	JL9	(F)ROULEMENT,INTERNE (S)COJINETE-INTERNO 2				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

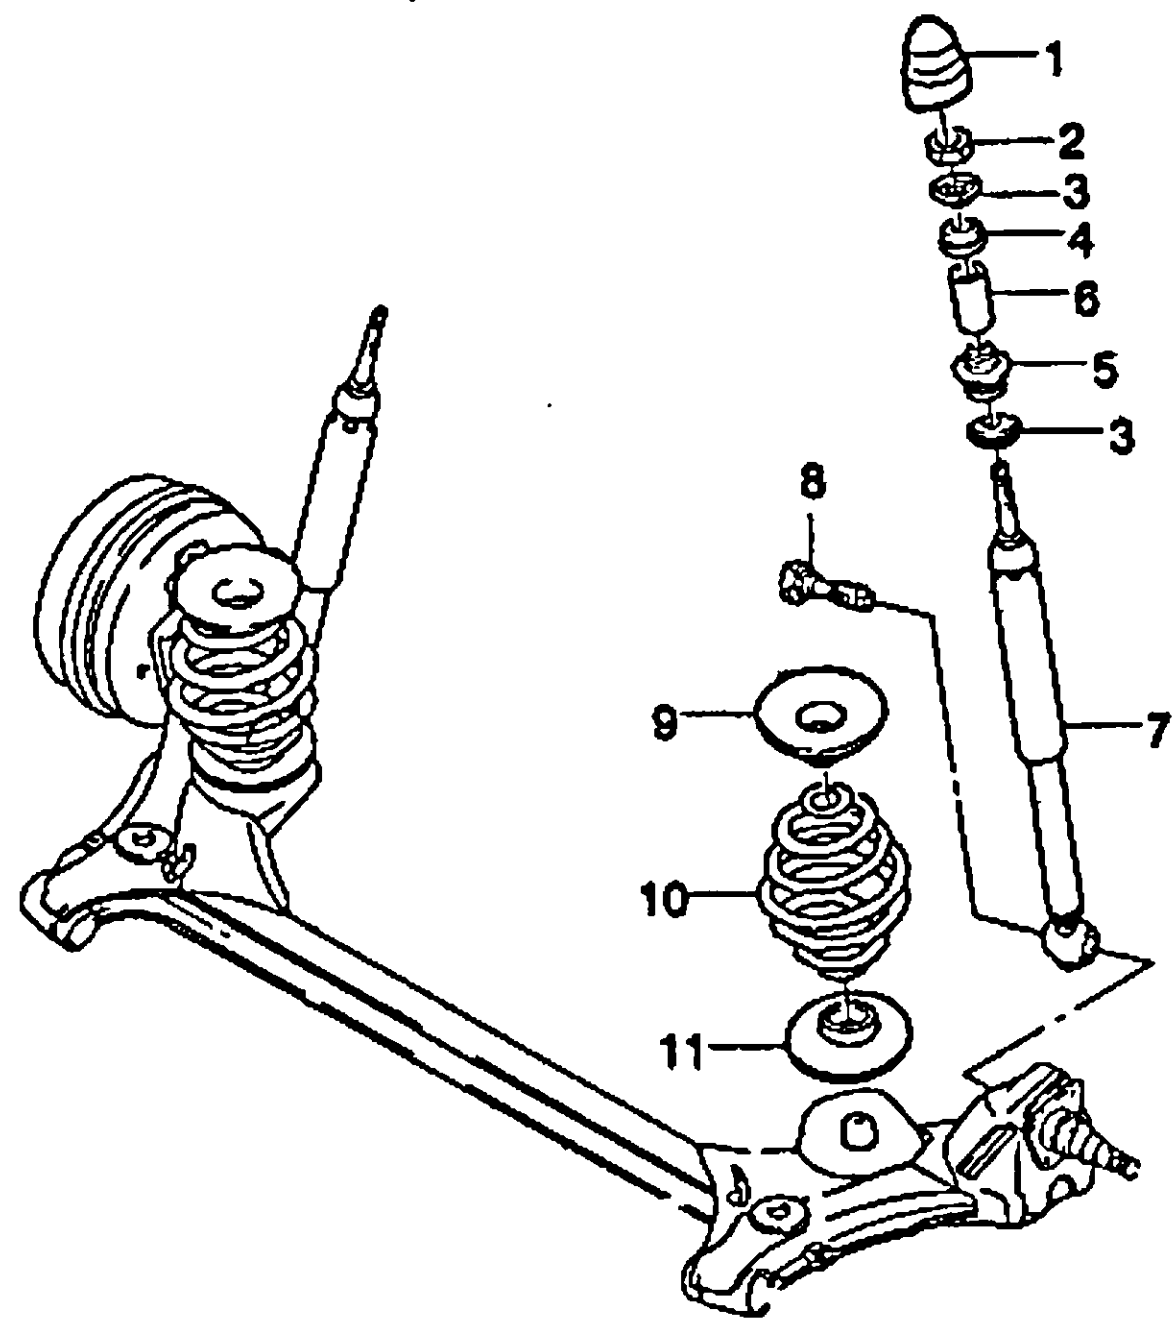


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)CAP-COVER (D)DECKEL								(F)CHAPEAU (S)TAPA- AMORTIGUADOR						
	96249401	. . . B B S . S								2						
	[02]	(E)NUT (D)MUTTER								(F)ECROU (S)TUERÇA						
	09159-10003	. . B B B S S S								2						
	[03]	(E)PLATE-BUMPER,UPPER&LOWER (D)PLATTE,STOßSTANGE								(F)PLAQUE (S)PLACA-PARACHOQUES						
	90343956	. . B B B S S S								4						
	[04]	(E)BUMPER-SHOCK ABS,UPPER (D)STOßSCHEIBE								(F)PARE-CHOC (S)TOPE-AMORTIGUADOR,INF						
	96231921	. . B B B S S S								2						
	[05]	(E)BUMPER-SHOCK ABS,LOWER (D)STOßSCHEIBE								(F)PARE-CHOC-AMORTISSEUR,BAS (S)TOPE-AMORTIGUADOR,SUP						
	96231922	. . B B B S S S								2	870807					
O	96246673	. . B B B S S S								2	970807					
	[06]	(E)SPACER (D)DISTANZSTÜCK								(F)ENTRETOISE (S)ESPACIADOR						
	96231920	. . B B B S S S								2						
	[07]	(E)ABSORBER A-SHOCK (D)STOßDÄMPFER								(F)AMORTISSEUR (S)AMORTIGUADOR-CHOQUE						
	96226990	. . B B B S S S						&F39		2				XA		
	96246626	. . B B B A A A						&F40		2				XB		
	[08]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO						
	09111-10003	. . . B B B S S S								2						
	[09]	(E)BUMPER-REAR AXLE (D)STOßSTANGE,HINTERE ACHSE								(F)PARE-CHOC-PONT ARRIERE (S)TOPE-EJE TRASERO						
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

4320 REAR SHOCK ABSORBER


4H11

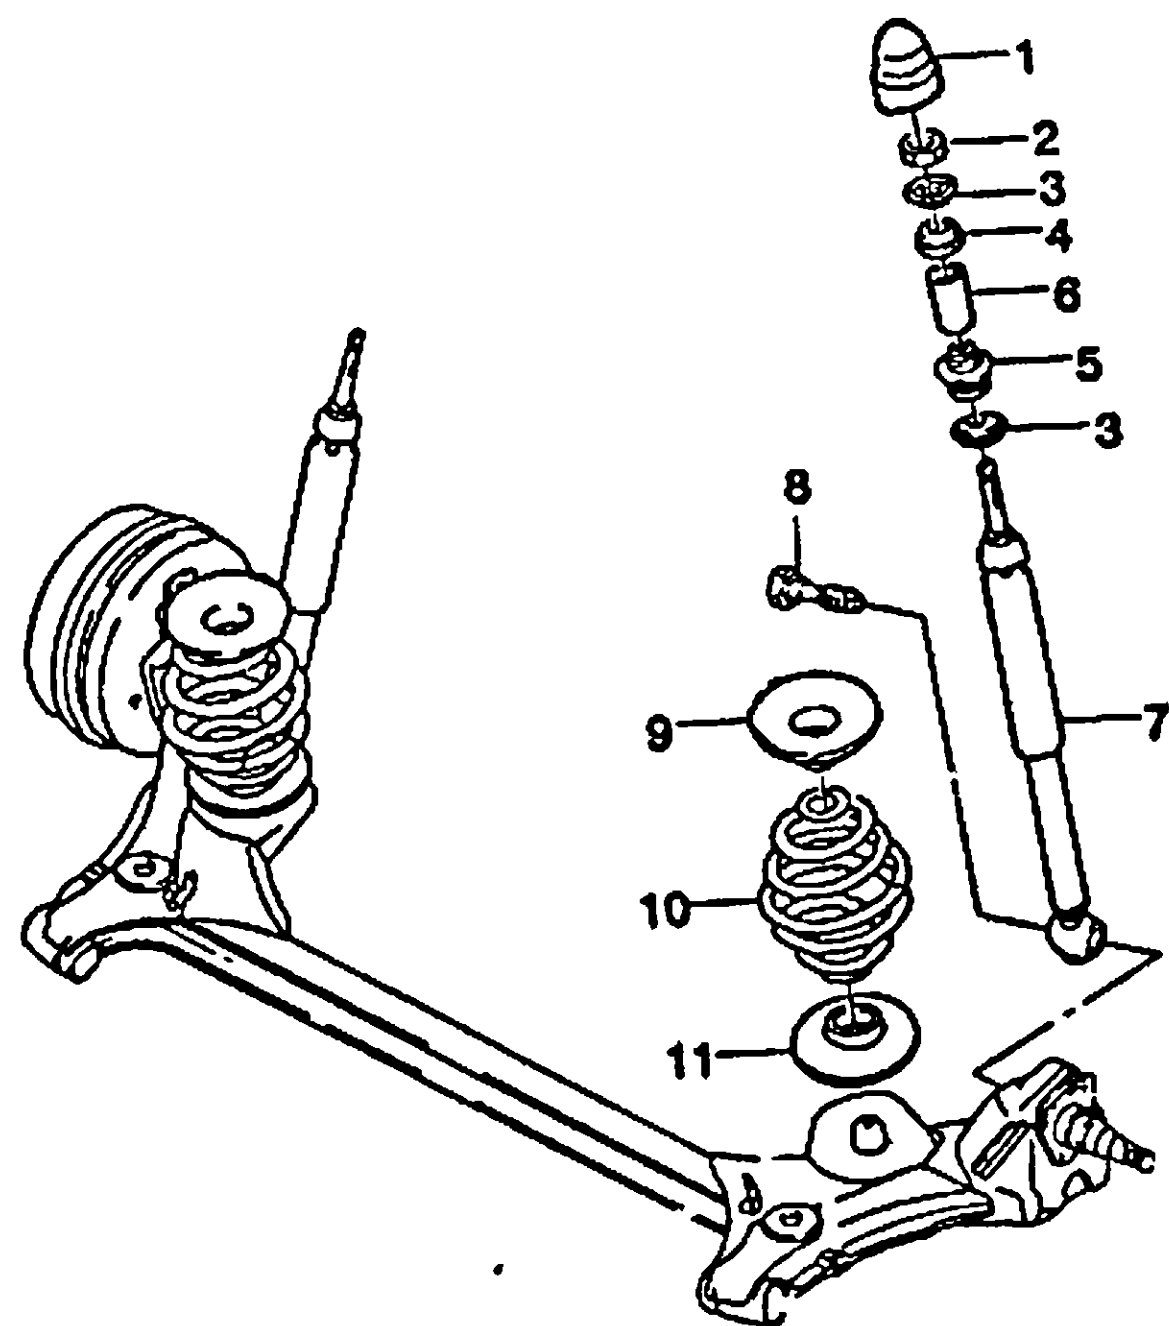

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S S								S S S	S S S
	96179844 [10]	.	.	B	B	B	S	S	S		2		(F)RESSORT-ARRIERE (S)RESORTE-TRASERO			
	96226988	.	.	B	B	B	S	S	S	&F39	2			GG		
	96099946 [11]	.	.	B	B	B	A	A	A	&F40	2		(F)ANNEAU (S)ANILLO-AISLAMIENTO	BO		
	90305263	.	.	B	B	B	S	S	S		2					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

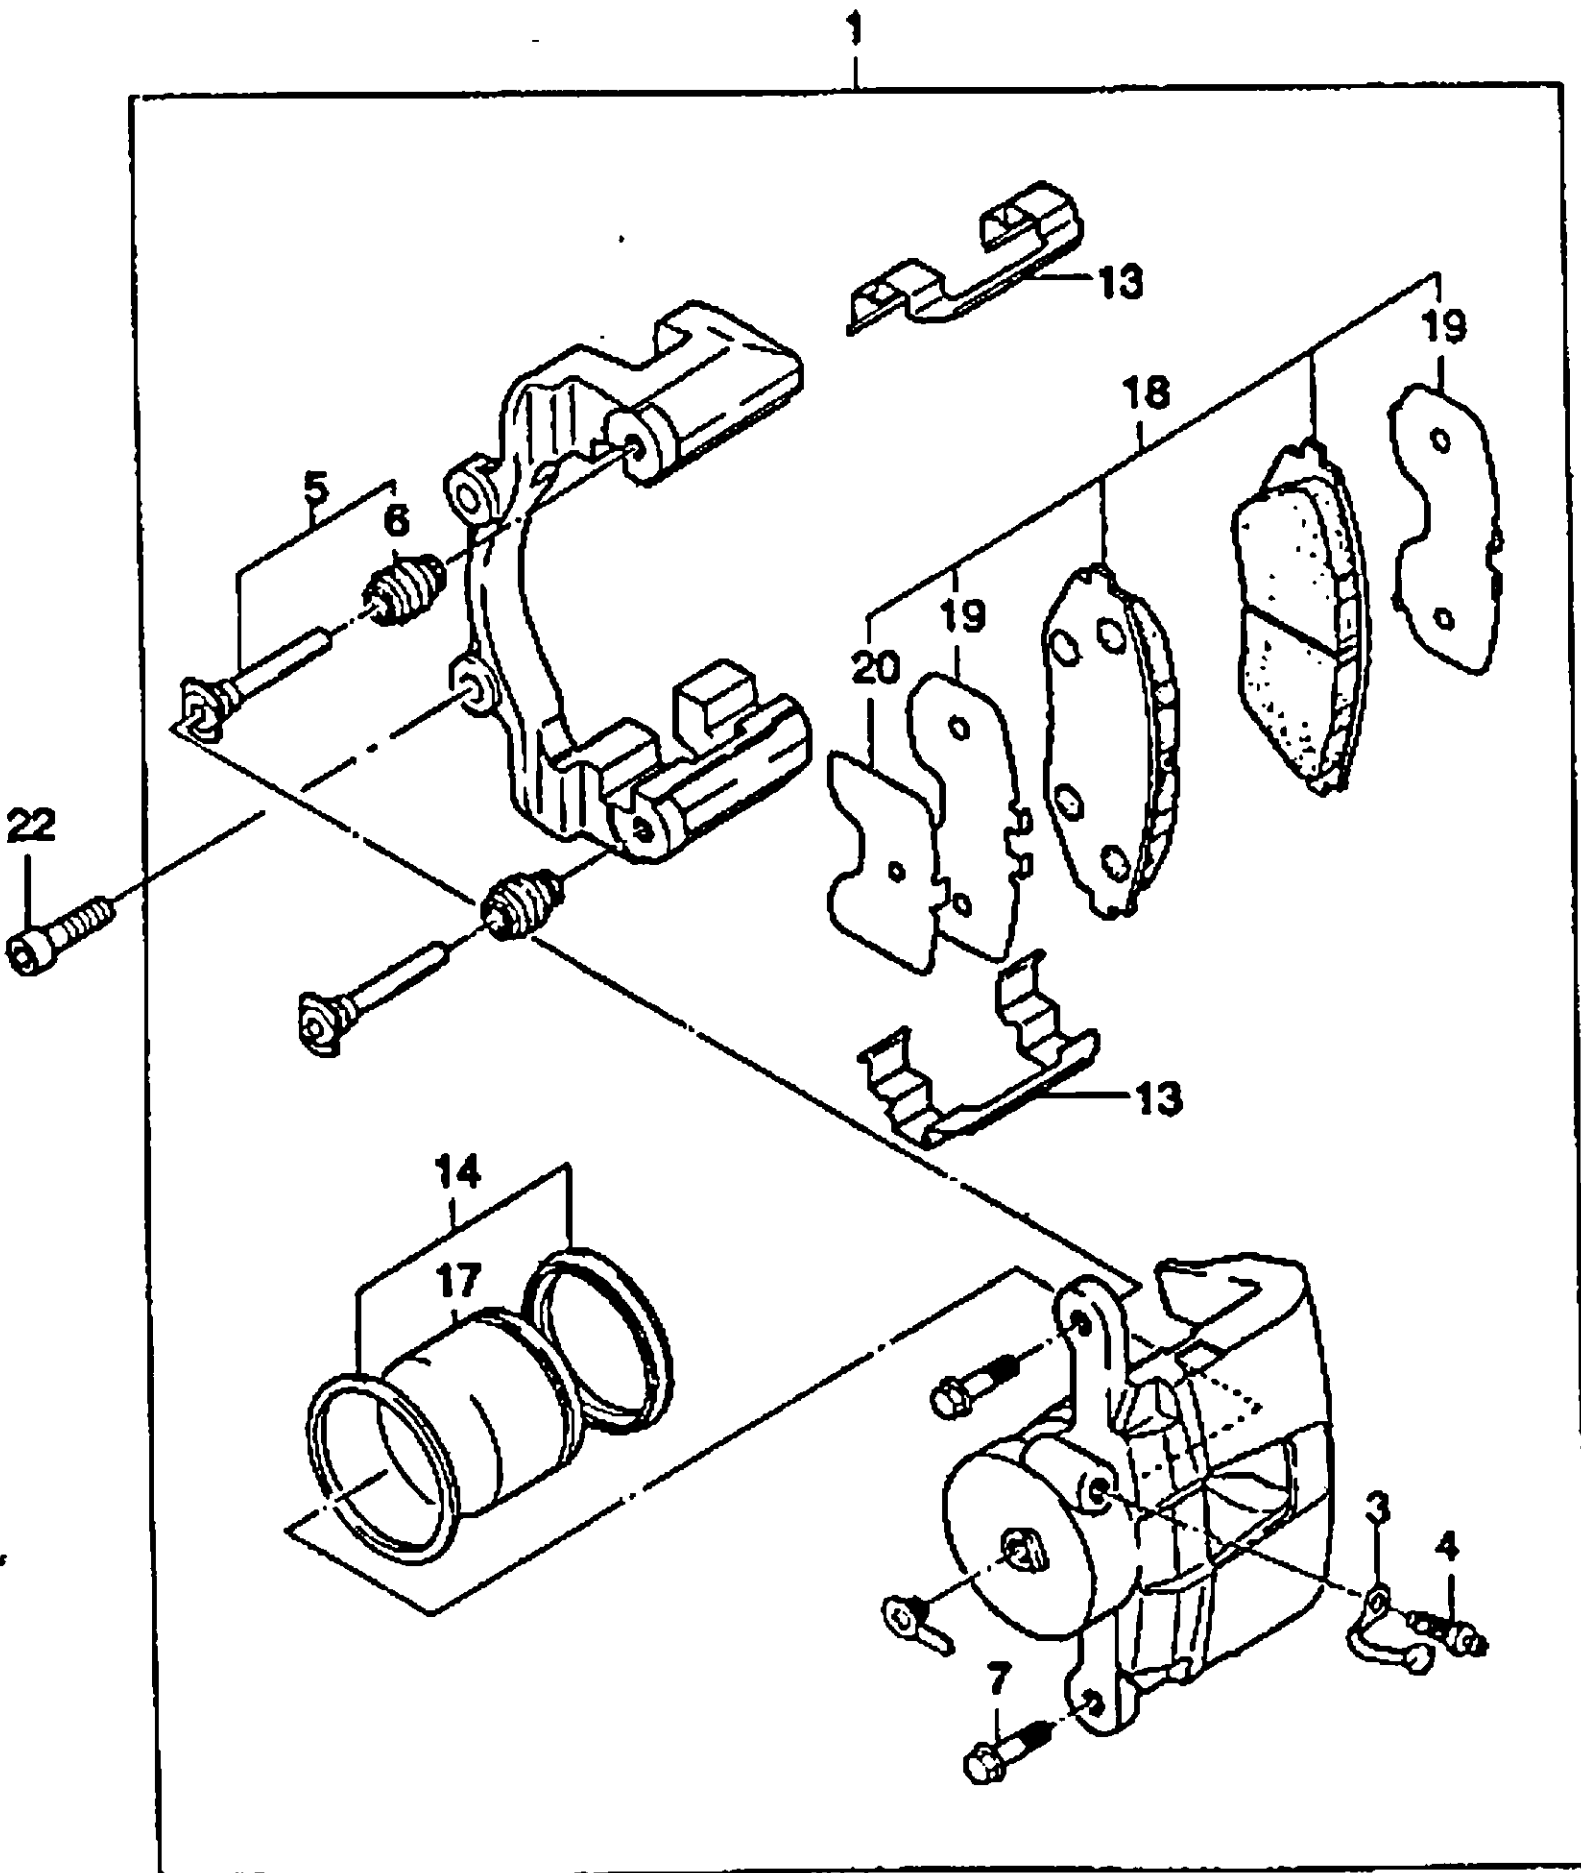


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T /	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)CALIPER A-BRAKE SLIDING (D)TASTER,BREMS-GLEIT									(F)CALIBRE-FREIN COULISSANT (S)CALIBRADOR-DESLIZADOR					
	96234339	Y	.	B	B	B	S	S	S	&JB3	LH	1	13INCH,VENT	VL		
	96234340	Y	.	B	B	B	S	S	S	&JB3	RH	1	13INCH,VENT	VR		
	96304482	6	.	B	B	B	.	.	O	&JB4	LH	1	14INCH,VENT	LD		
	96304433	6	.	B	B	B	.	.	O	&JB4	RH	1	14INCH,VENT	RO		
	[03]	(E)PROTECTOR-BLEEDER SCREW (D)SCHUTZTEIL									(F)PROTECTION (S)PROTECTOR					
	410350	.	.	B	B	B	S	S	S		2					
	[04]	(E)SCREW-BLEEDER (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	2007023	.	.	B	B	B	S	S	S		2					
	[05]	(E)PIN KIT (D)STIFT									(F)BROCHE (S)PASADOR					
	S4511003	.	.	B	B	B	S	S	S		1					
	[06]	(E)BOOT-PIN (D)KOFFERRAUM									(F)GAINE (S)CAPUCHON					
	410410	.	.	B	B	B	S	S	S		4					
	[07]	(E)BOLT-PIN (D)SCHRAUBE									(F)BOULON (S)PERNO					
	2006010	.	.	B	B	B	S	S	S		4					
	[13]	(E)SPRING-PAD (D)FEDERUNG									(F)RESSORT (S)RESORTE					
	410515	Y	.	B	B	B	S	S	S	&JB3	4					
	410416	6	.	B	B	B	.	.	O	&JB4	4					
	[14]	(E)SEAL KIT-PISTON (D)DICHTUNG									(F)JOINT D'ETANCHEITE (S)SELLO					
	S4510008	Y	.	B	B	B	S	S	S	&JB3	1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

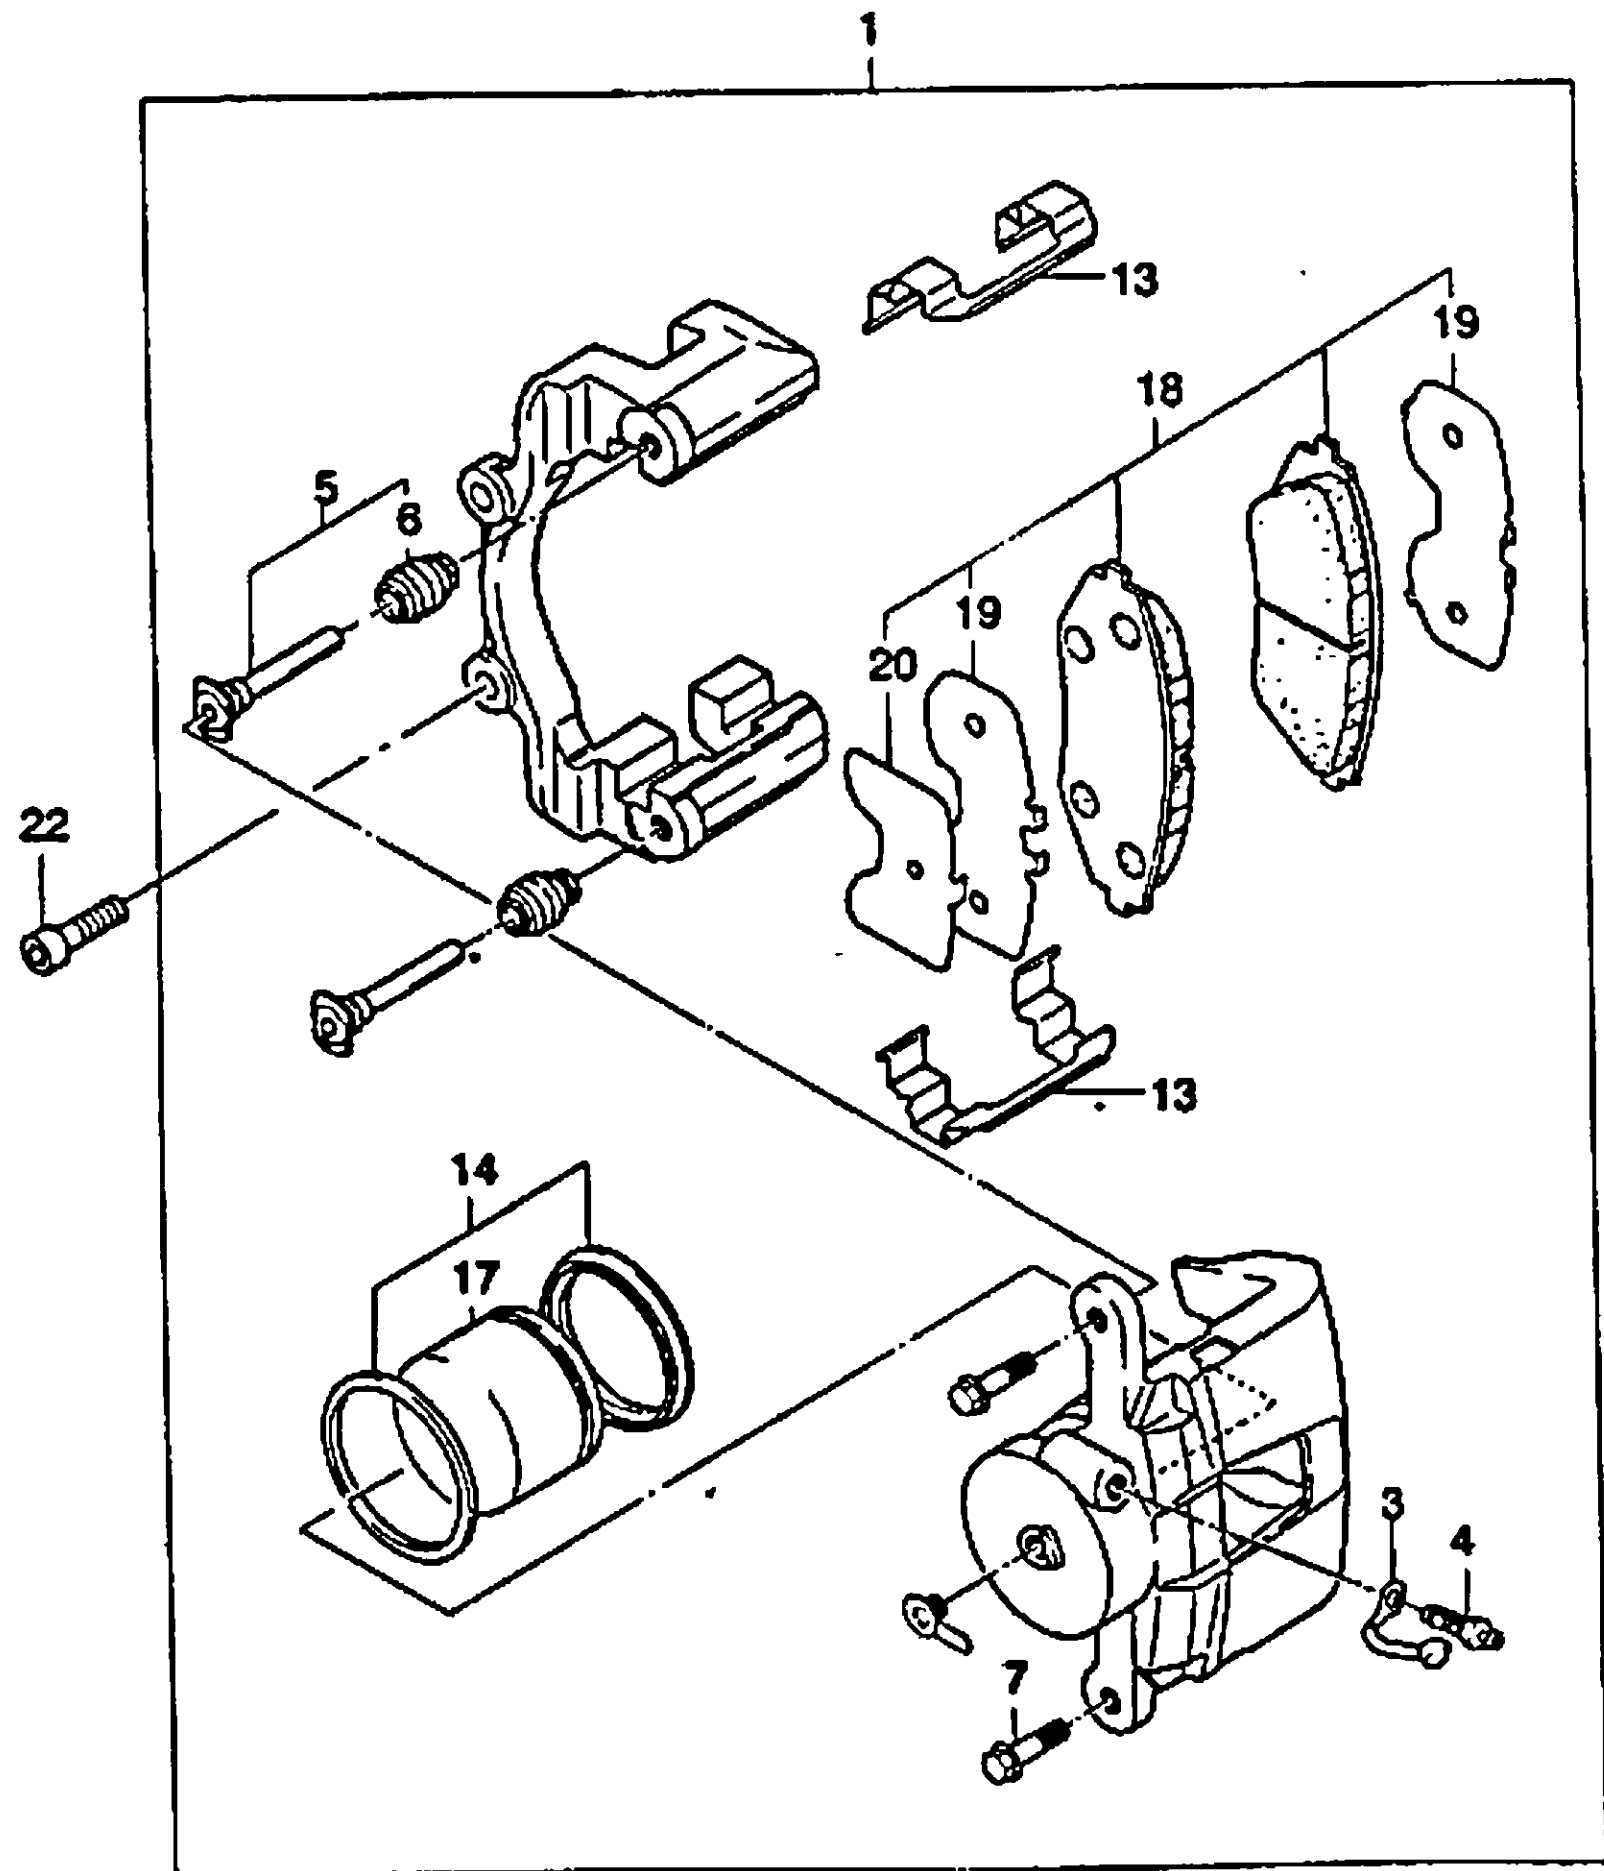


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S
	S4511005	6	.	B	B	B	.	.	O	&JB4	1				
	[17]	(E)PISTON									(F)PISTON				
		(D)KOLBEN									(S)PISTON				
	410507	Y	.	B	B	B	S	S	S	&JB3	2				
	410807	6	.	B	B	B	.	.	O	&JB4	2				
	[18]	(E)PAD SET-BRAKE									(F)JEU DE PATINS-FREIN AVANT				
		(D)UNTERLAGE-SATZ									(S)JUEGO DE COJIN-FRENOS				
	S4510004	Y	.	B	B	B	S	S	S	&JB3	1				
	S4510005	6	.	B	B	B	.	.	O	&JB4	1				
	[19]	(E)SHIM-ANTI NOISE									(F)CALE DE SUPPORT				
		(D)AUSGLEICHSSCHEIBE									(S)CUÑA				
	410513	Y	.	B	B	B	S	S	S	&JB3	4				
	410413	6	.	B	B	B	.	.	O	&JB4	4				
	[20]	(E)COVER-SHIM									(F)CARTER				
		(D)DECKEL									(S)CUBIERTA				
	410517	Y	.	B	B	B	S	S	S	&JB3	2				
	410417	6	.	B	B	B	.	.	O	&JB4	2				
	[22]	(E)BOLT									(F)BOULON				
		(D)SCHRAUBE									(S)PERNO				
	09106-12002	.	.	B	B	B	S	S	S		4				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

4520 REAR BRAKE


4L11

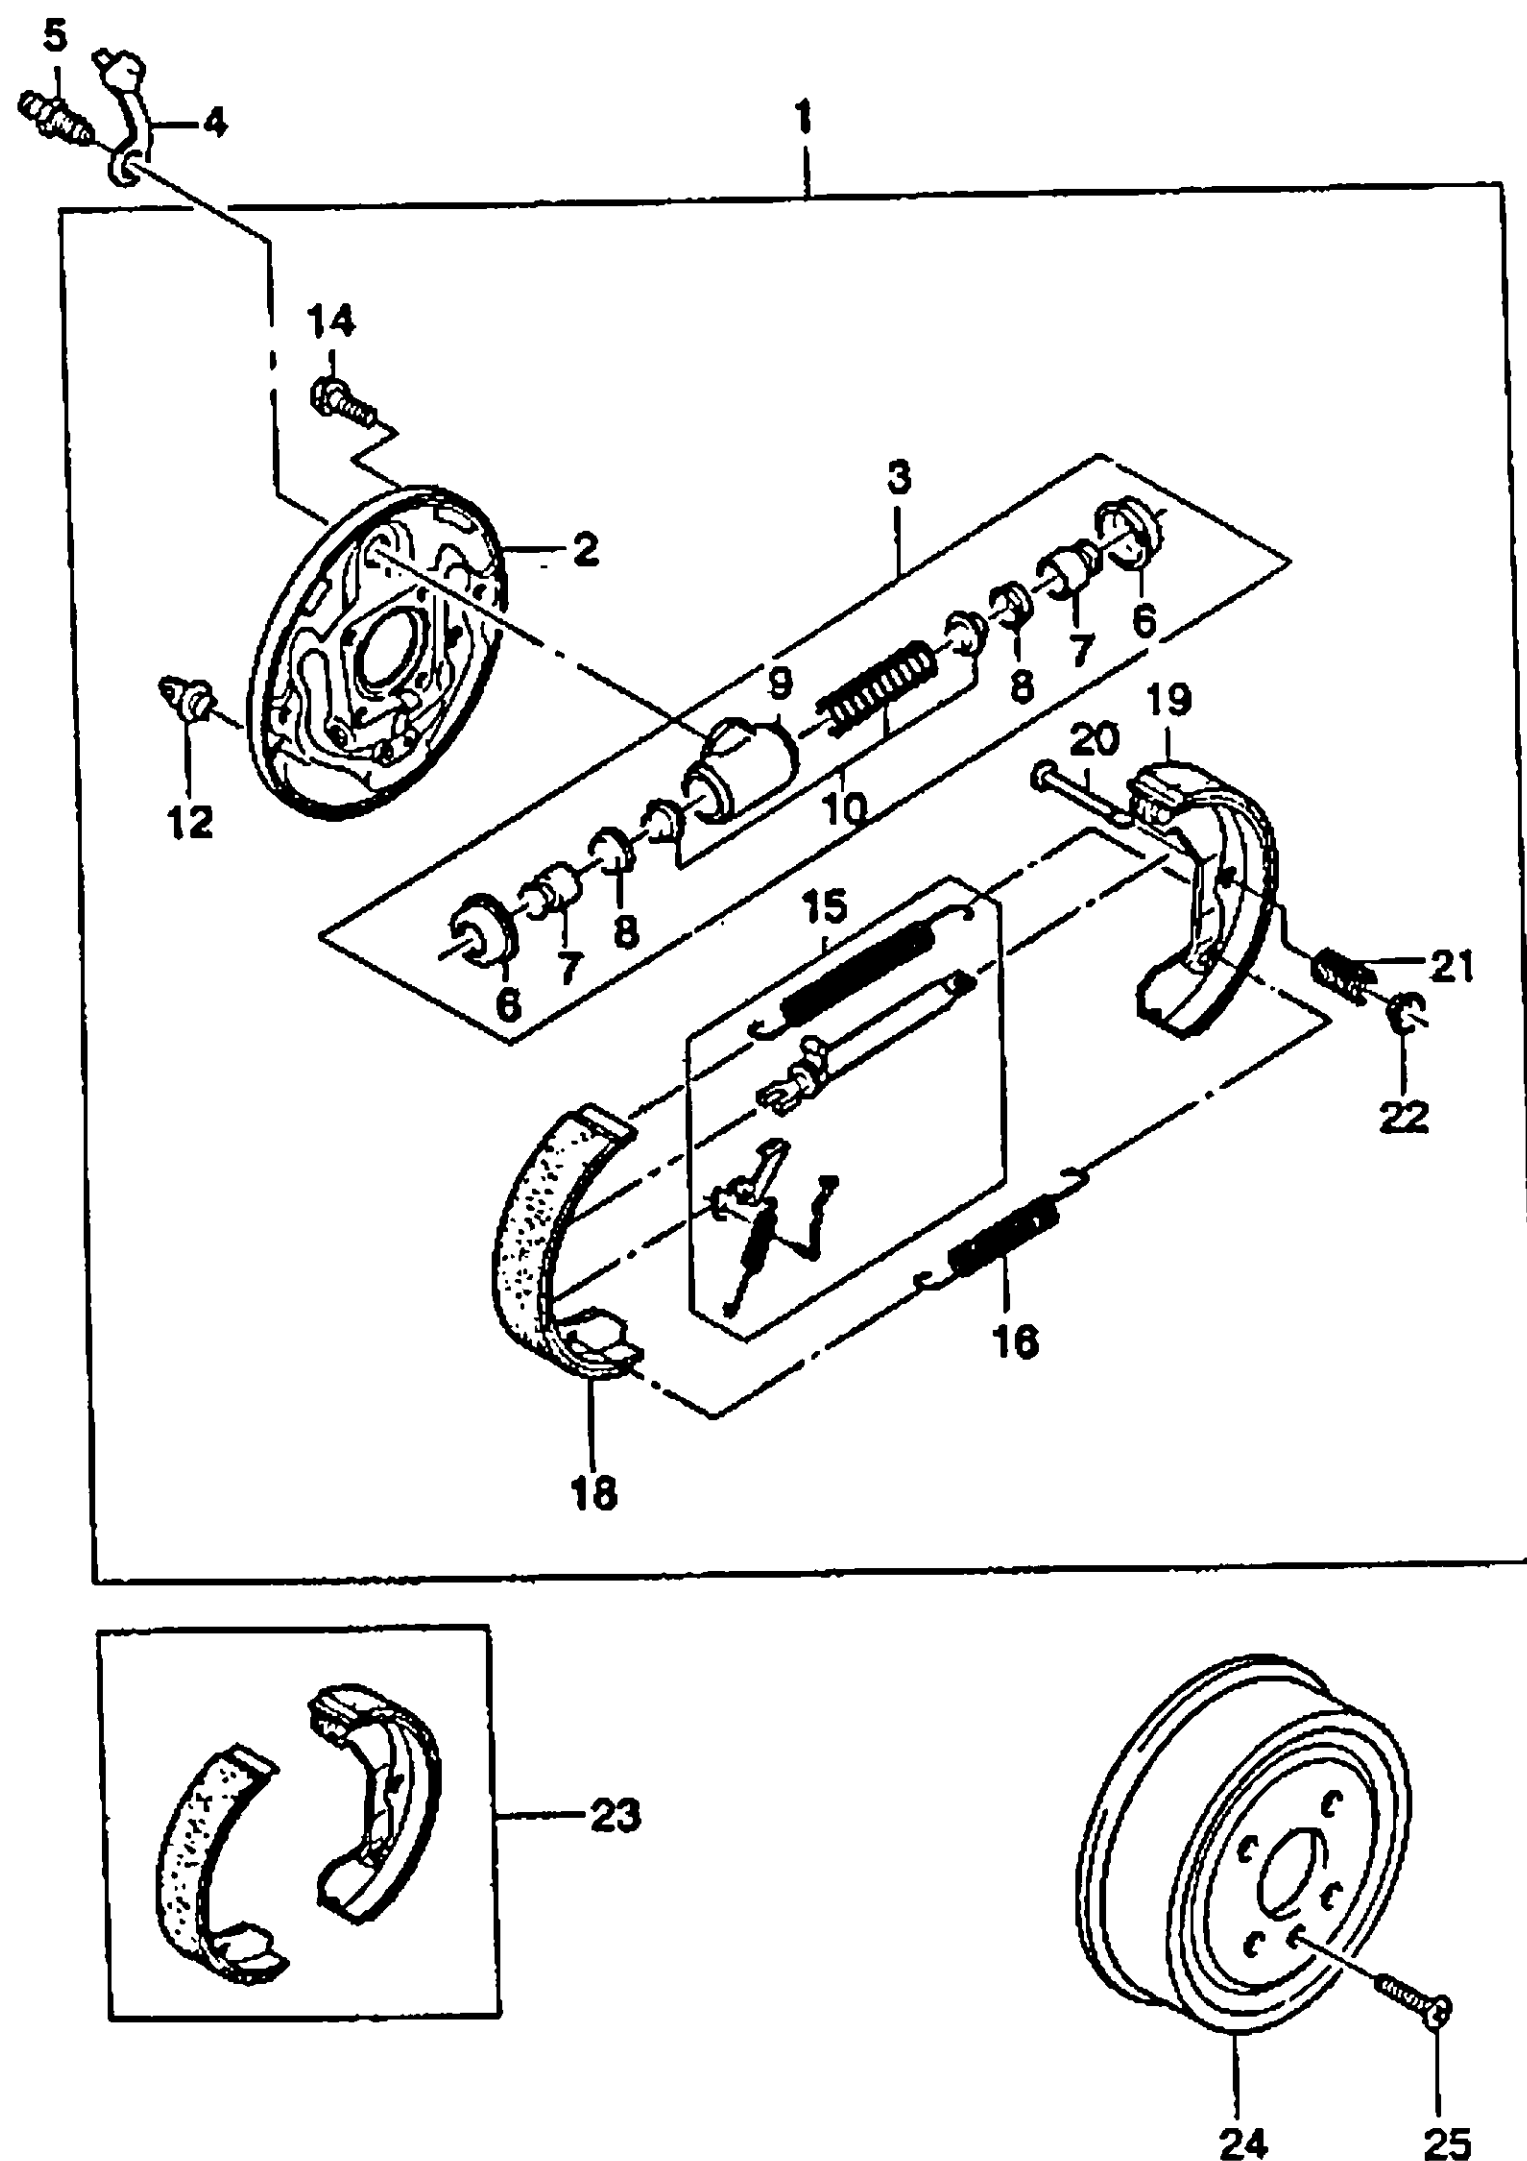

KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N H	3 H H	5 H H	S S	S S							
	[01]	(E)BRAKE A-REAR (D)BREMSE,HINTEN									(F)FREIN-ARRIERE (S)FRENO-TRASERO				
	96304439	Y . B B B S S S								LH 1		Φ 17.46		ML	
	96304440	Y . B B B S S S								RH 1		Φ 17.46		MR	
	96304443	6 . B B B . . O								LH 1		Φ 19.05		DL	
	96304444	6 . B B B . . O								RH 1		Φ 19.05		DR	
	[02]	(E)PLATE-BRAKE BACKING (D)PLATTE,BREMS RÜCKEN										(F)PLAQUE-FOND DE FREIN (S)PLACA-FRENO DE REVERSA			
	96233628	. . B B B S S S								LH 1					
	96233629	. . B B B S S S								RH 1					
	[03]	(E)CYLINDER-BRAKE WHEEL (D)ZYLINDER BREMSRAD										(F)CYLINDRE-FREIN ROUE (S)CILINDRO-RUEDA FRENO			
	90235420	Y . B B B S S S								2					
	90235422	6 . B B B . . O								2					
	[04]	(E)DUST CAP (D)STAUBDECKEL										(F)CHAPEAU-POUSSIÈRE (S)TAPA-POLVO			
	06620325	. . B B B S S S								2					
	[05]	(E)JET (D)DUESE										(F)JET (S)SURTIDOR			
	09493-02001	. . B B B S S S								2					
	[06]	(E)CAP-BRAKE WHEEL CYLINDER (D)DECKEL,BREMS-RAD-ZYLINDER										(F)CHAPEAU (S)TAPA-CILINDRO DE RUEDA			
	96179002	Y . B B B S S S								4					
	96179003	6 . B B B . . O								4					
	[07]	(E)PISTON-WHEEL CYLINDER (D)KOLBEN,RAD ZYLINDER										(F)PISTON (S)PISTON-CILINDRO DE FRENO			
	90168036	Y . B B B S S S								4					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

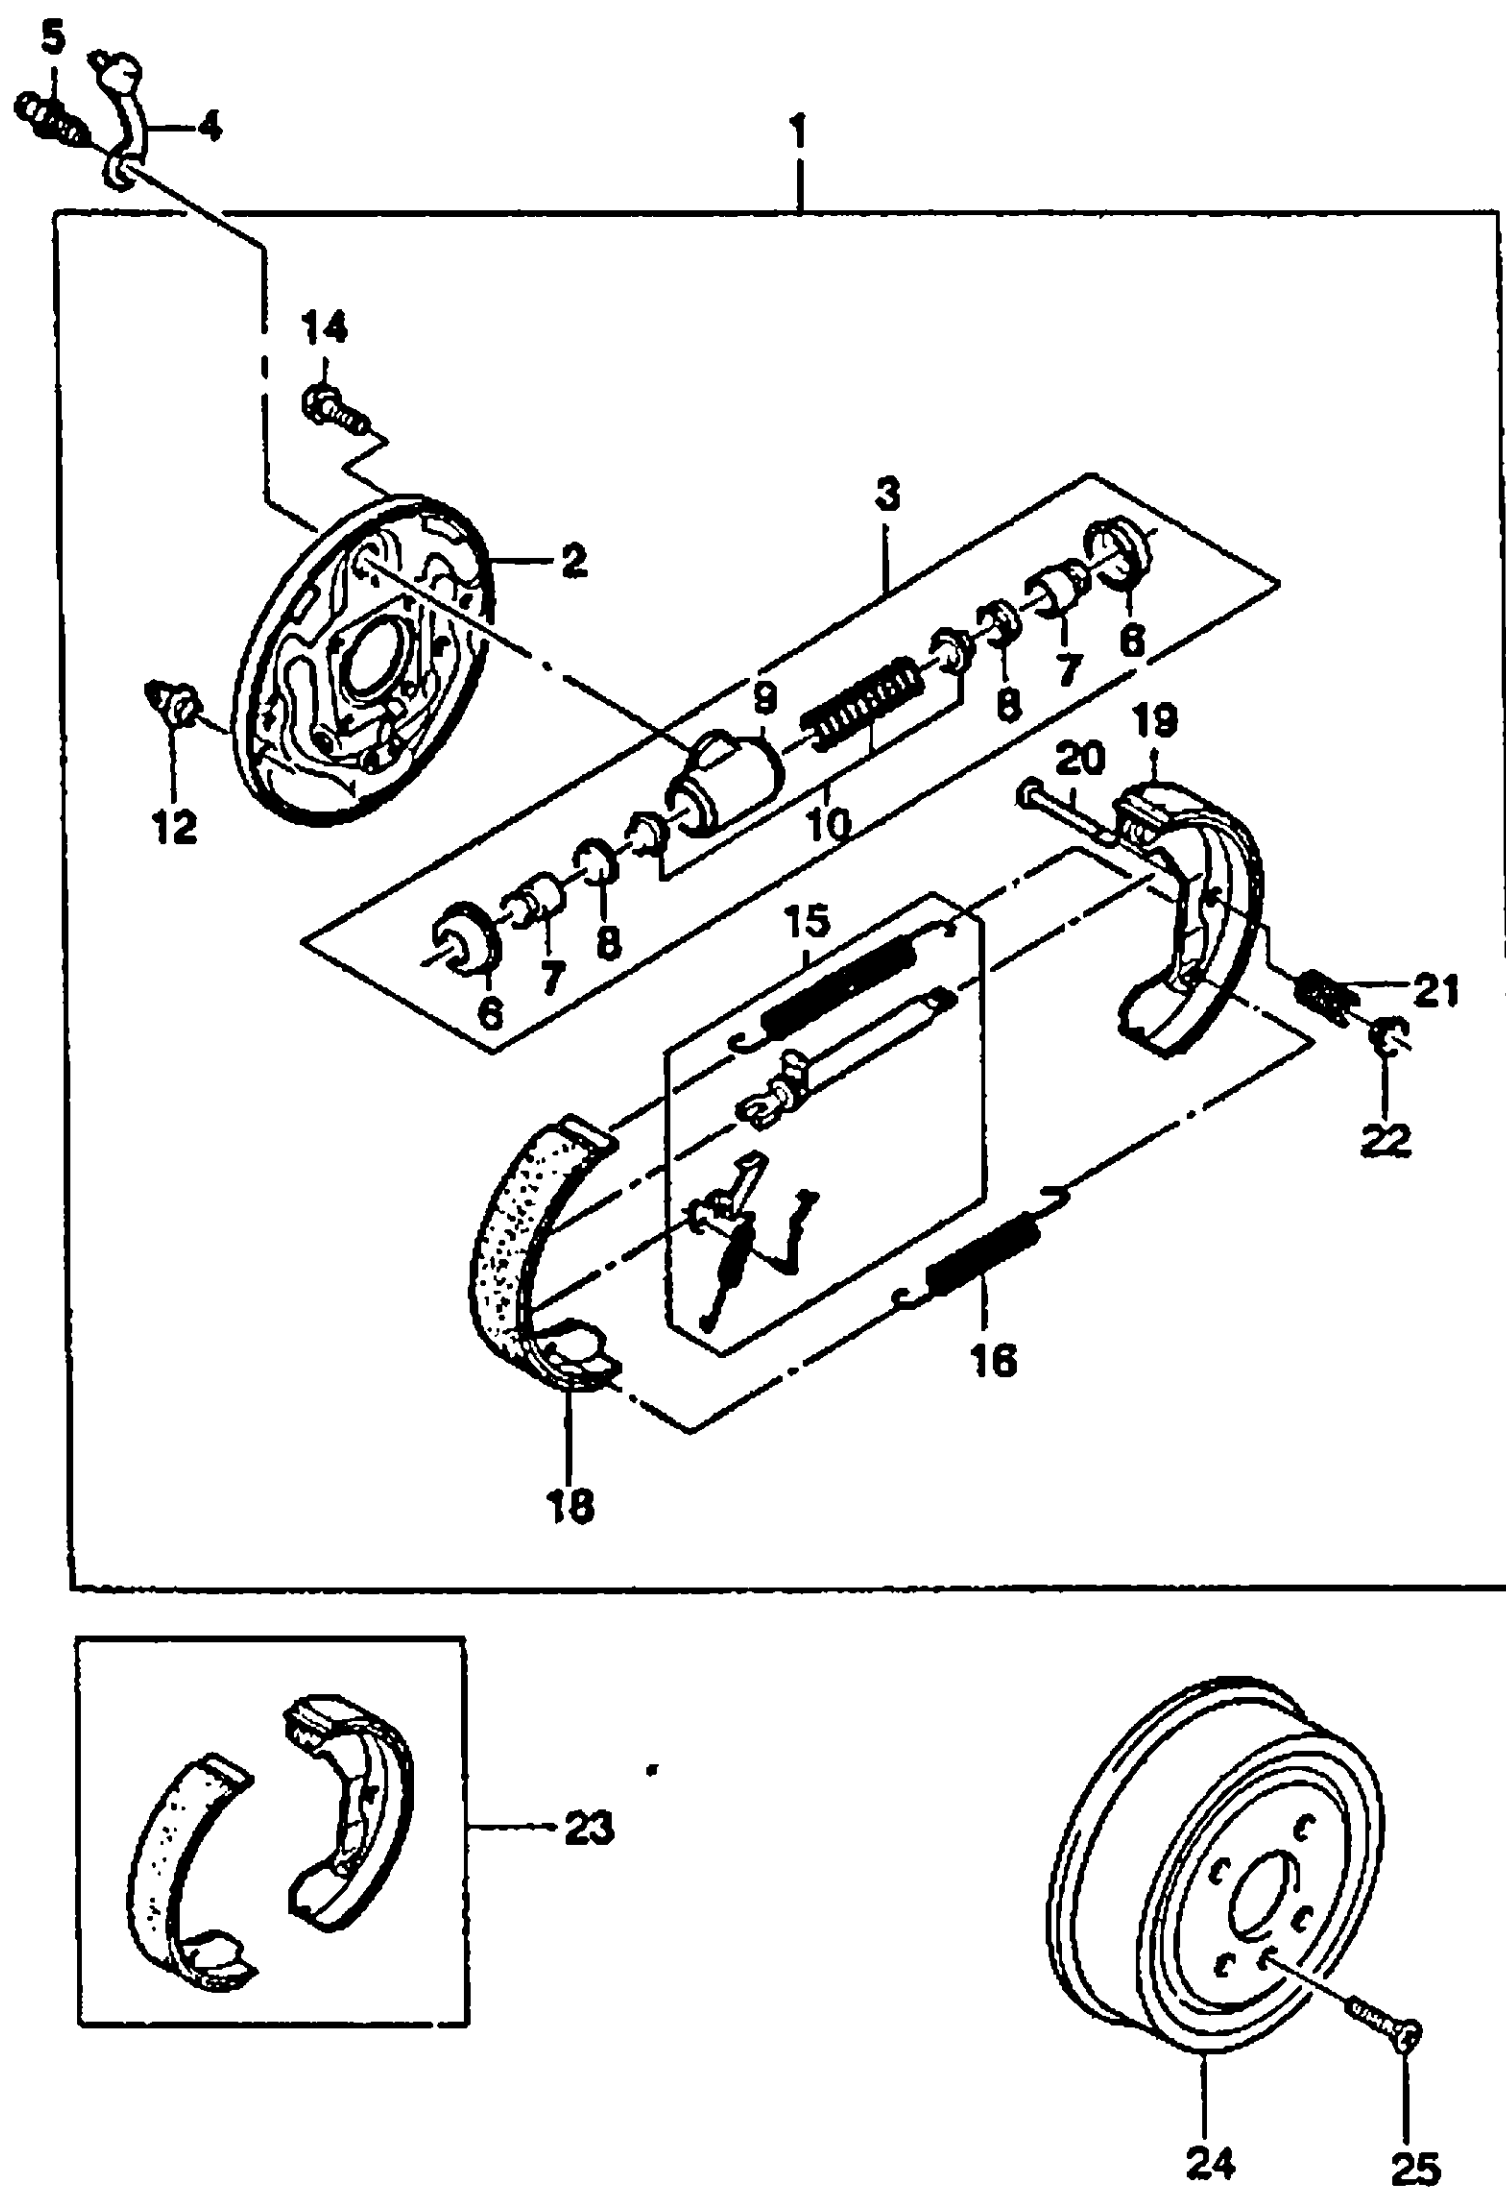


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	90168037	6	.	B	B	B	.	.	O			4			
	[08]	(E)CUFF-WHEEL CYLINDER										(F)MANCHETTE			
		(D)HÜLSEN, BREMSTROMMEL										(S)PUÑO-CILINDRO DE RUEDA			
	90168030	Y	.	B	B	B	S	S	S			4			
	90168031	6	.	B	B	B	.	.	O			4			
	[09]	(E)BODY-CYLINDER										(F)CYLINDRE-CORPS			
		(D)ZYLINDER, KÖRPER										(S)CILINDRO-CUERPO			
	N/S(3)														
	[10]	(E)SPRING-COMPRESSION										(F)RESSORT-COMPRESSION			
		(D)FEDERUNG, VERDICHUNG										(S)RESORTE-COMPRESION			
	90189461	Y	.	B	B	B	S	S	S			2			
	90189462	6	.	B	B	B	.	.	O			2			
	[12]	(E)PLUG										(F)BOUCHON			
		(D)STÖPSEL										(S)TAPON			
	90063579	.	.	B	B	B	S	S	S			4			
	[14]	(E)SCREW										(F)VIS			
		(D)SCHRAUBE										(S)TORNILLO			
	11045532	.	.	B	B	B	S	S	S			2			
	[15]	(E)READJUSTING UNIT										(F)UNITE DE REAJUSTEMENT			
		(D)NEU-EINSTELLUNG EINHEIT										(S)UNIDAD DE REAJUSTE			
	90199718	.	.	B	B	B	S	S	S			LH 1			
	90199719	.	.	B	B	B	S	S	S			RH 1			
	[16]	(E)SPRING-EXTENSION										(F)RESSORT-EXTENSION			
		(D)FEDERUNG, VERLÄNGERUNG										(S)RESORTE-EXTENSION			
	96179133	.	.	B	B	B	S	S	S			2			
	[18]	(E)SHOE A-BRAKE, FRONT										(F)SABOT-FREIN, AVANT			
		(D)SCHUH, BREMS-VORNE										(S)ZAPATA-FRENO, DELANTERO			
	96241681	Y	.	B	B	B	S	S	S			2			
ENG(ENGINE)		T/A(TRANSAXLE)								BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON								4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

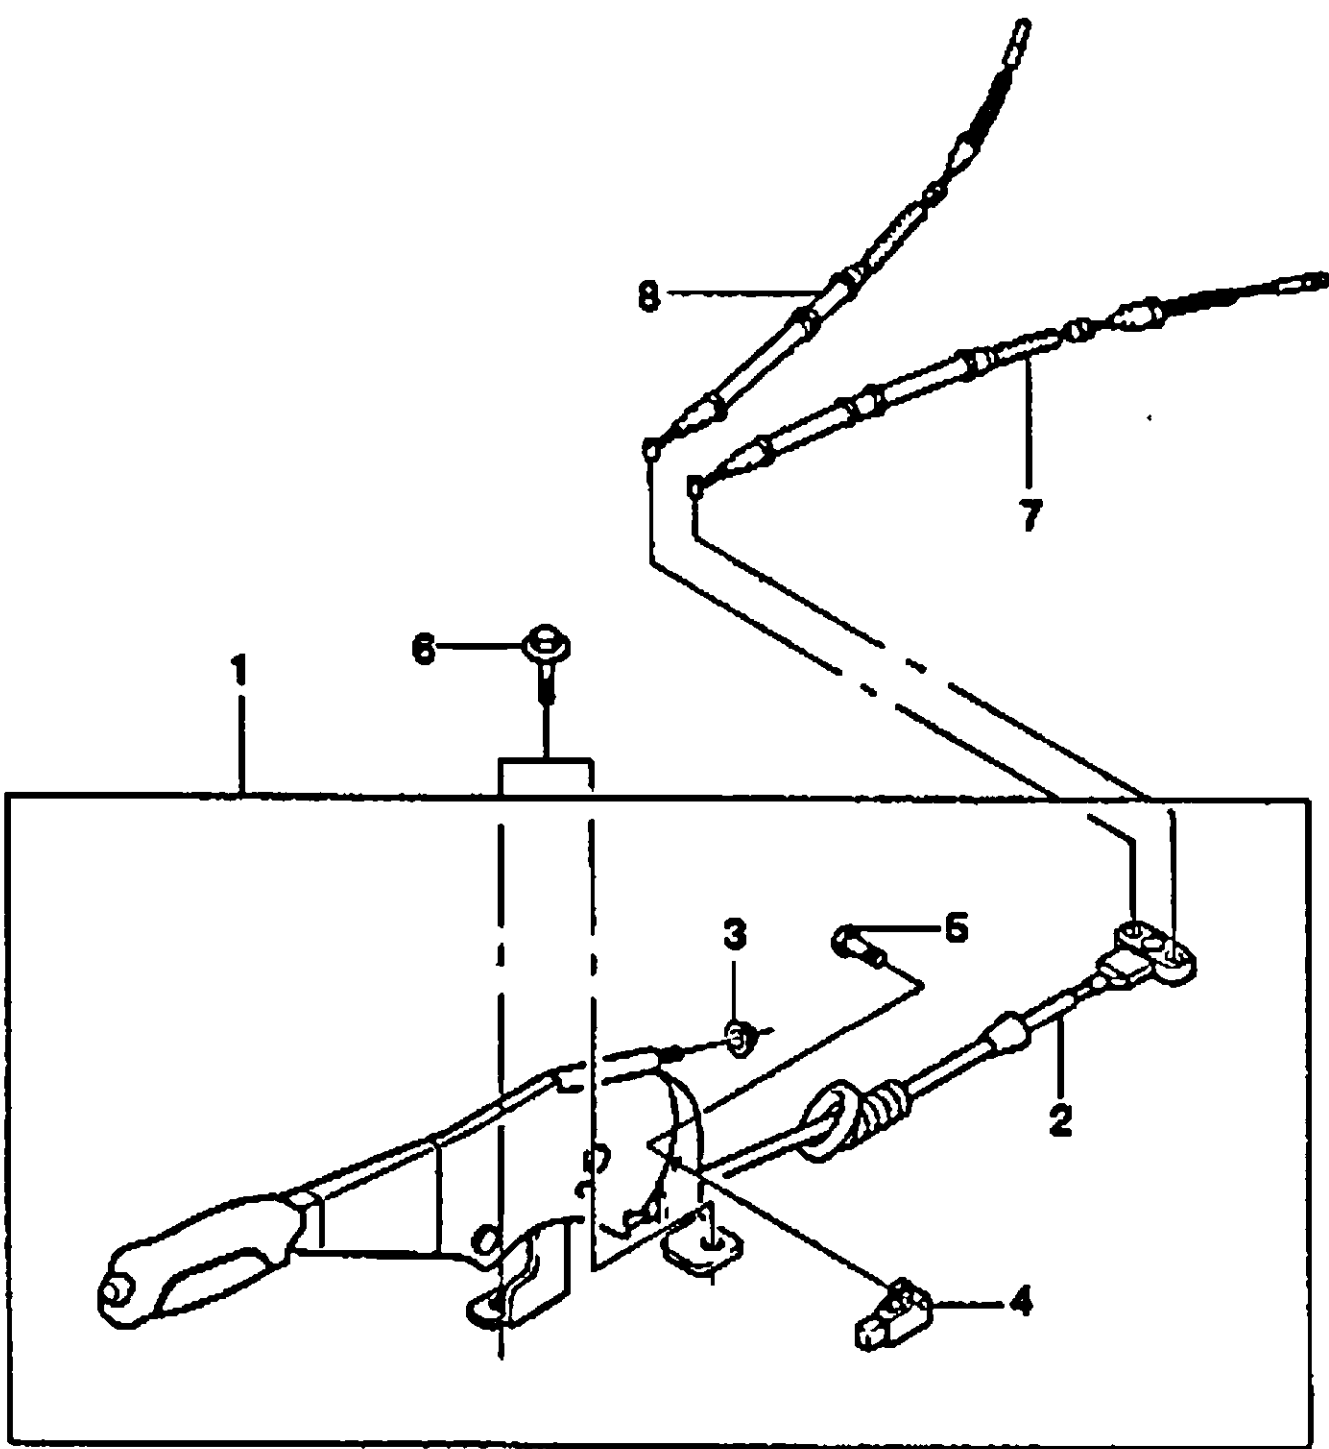


9	10	11



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E / N / G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)LEVER A-PARKING BRAKE (D)HEBEL,HANDBREMSE									(F)LEVIER-FREIN DE SECOURS (S)PALANCA					
	96304484	. . B B B S S S									1					
	[02]	(E)CABLE A-PARKING LEVER (D)KABEL									(F)CABLE (S)CABLE					
	96232674	. . B B B S S S									1					
	[03]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA					
	09159-06010	. . B B B S S S									1					
	[04]	(E)SWITCH A-P/BRAKE WARNING (D)SCHALTER									(F)COMMUTATEUR (S)INTERRUPTOR					
	90087504	. . B B B S S S									1					
	[05]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO					
	01137-05102	. . B B B S S S									1					
	[06]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE									(F)BOULON (S)PERNO					
	01517-08163	. . B B B S S S									2					
	[07]	(E)CABLE A-PARKING BRAKE (D)KABEL,HANDBREMSE									(F)FREIN DE SECOURS (S)CABLE					
	96230545	. . B B B S S S									LH 1					
	[08]	(E)CABLE A-PARKING BRAKE (D)KABEL,HANDBREMSE									(F)FREIN DE SECOURS (S)CABLE					
	96245829	. . B B B S S S									RH 1					
	[09]	(E)CLAMP-PRESSURE HOSE (D)KLAMMER									(F)PINCE (S)ABRAZADERA					
	90111423	. . B B B S S S									1					
	[10]	(E)NUT-HEXAGON (D)MUTTER									(F)ECROU (S)TUERCA					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

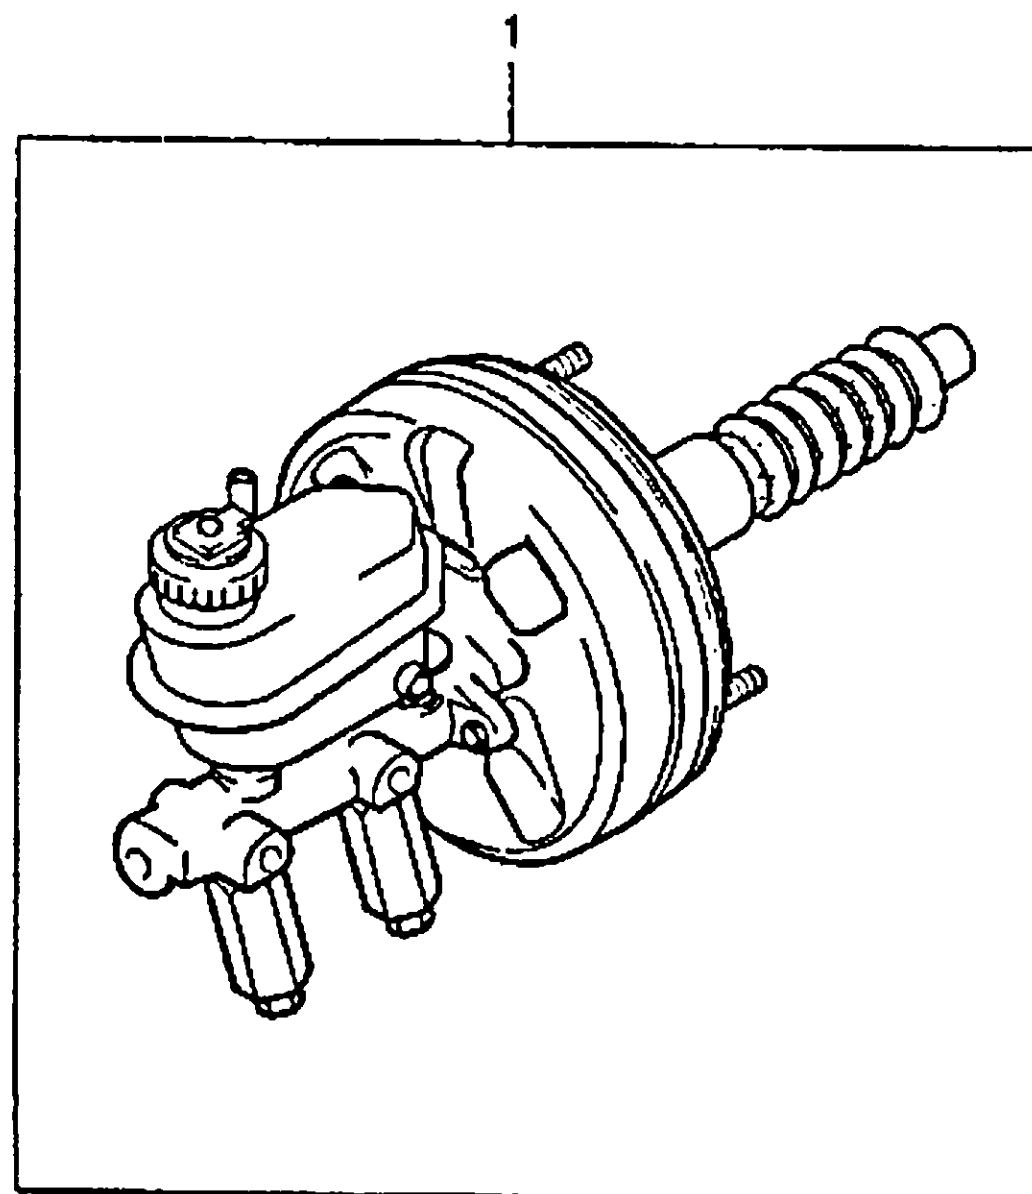



KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S S								S X
	[01]	(E)CYLINDER (D)ZYLINDER	A-BRAKE MASTER HAUPT								(F)CYLINDRE-MAITRE (S)CILINDRO-MAESTRO					
	96306181	Y M	B B B	S S S	JL9						1		Φ 20.64	TA		
	96306182	Y M	B B B	. O O	&JL9						1		Φ 20.64	TC		
	96228915	Y A	B B B	O O O	JL9						1		Φ 20.64	TB		
	96228918	Y A	B B B	. O O	&JL9						1		Φ 20.64	TD		
	96306184	6 M	B B B	. . O	JL9						1		Φ 22.22	TE		
	96306183	6 M	B B B	. . O	&JL9						1		Φ 22.22	TG		
	96228924	6 A	B B B	. . O	JL9						1		Φ 22.22	TF		
	96228921	6 A	B B B	. . O	&JL9						1		Φ 22.22	TH		
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE										
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK										

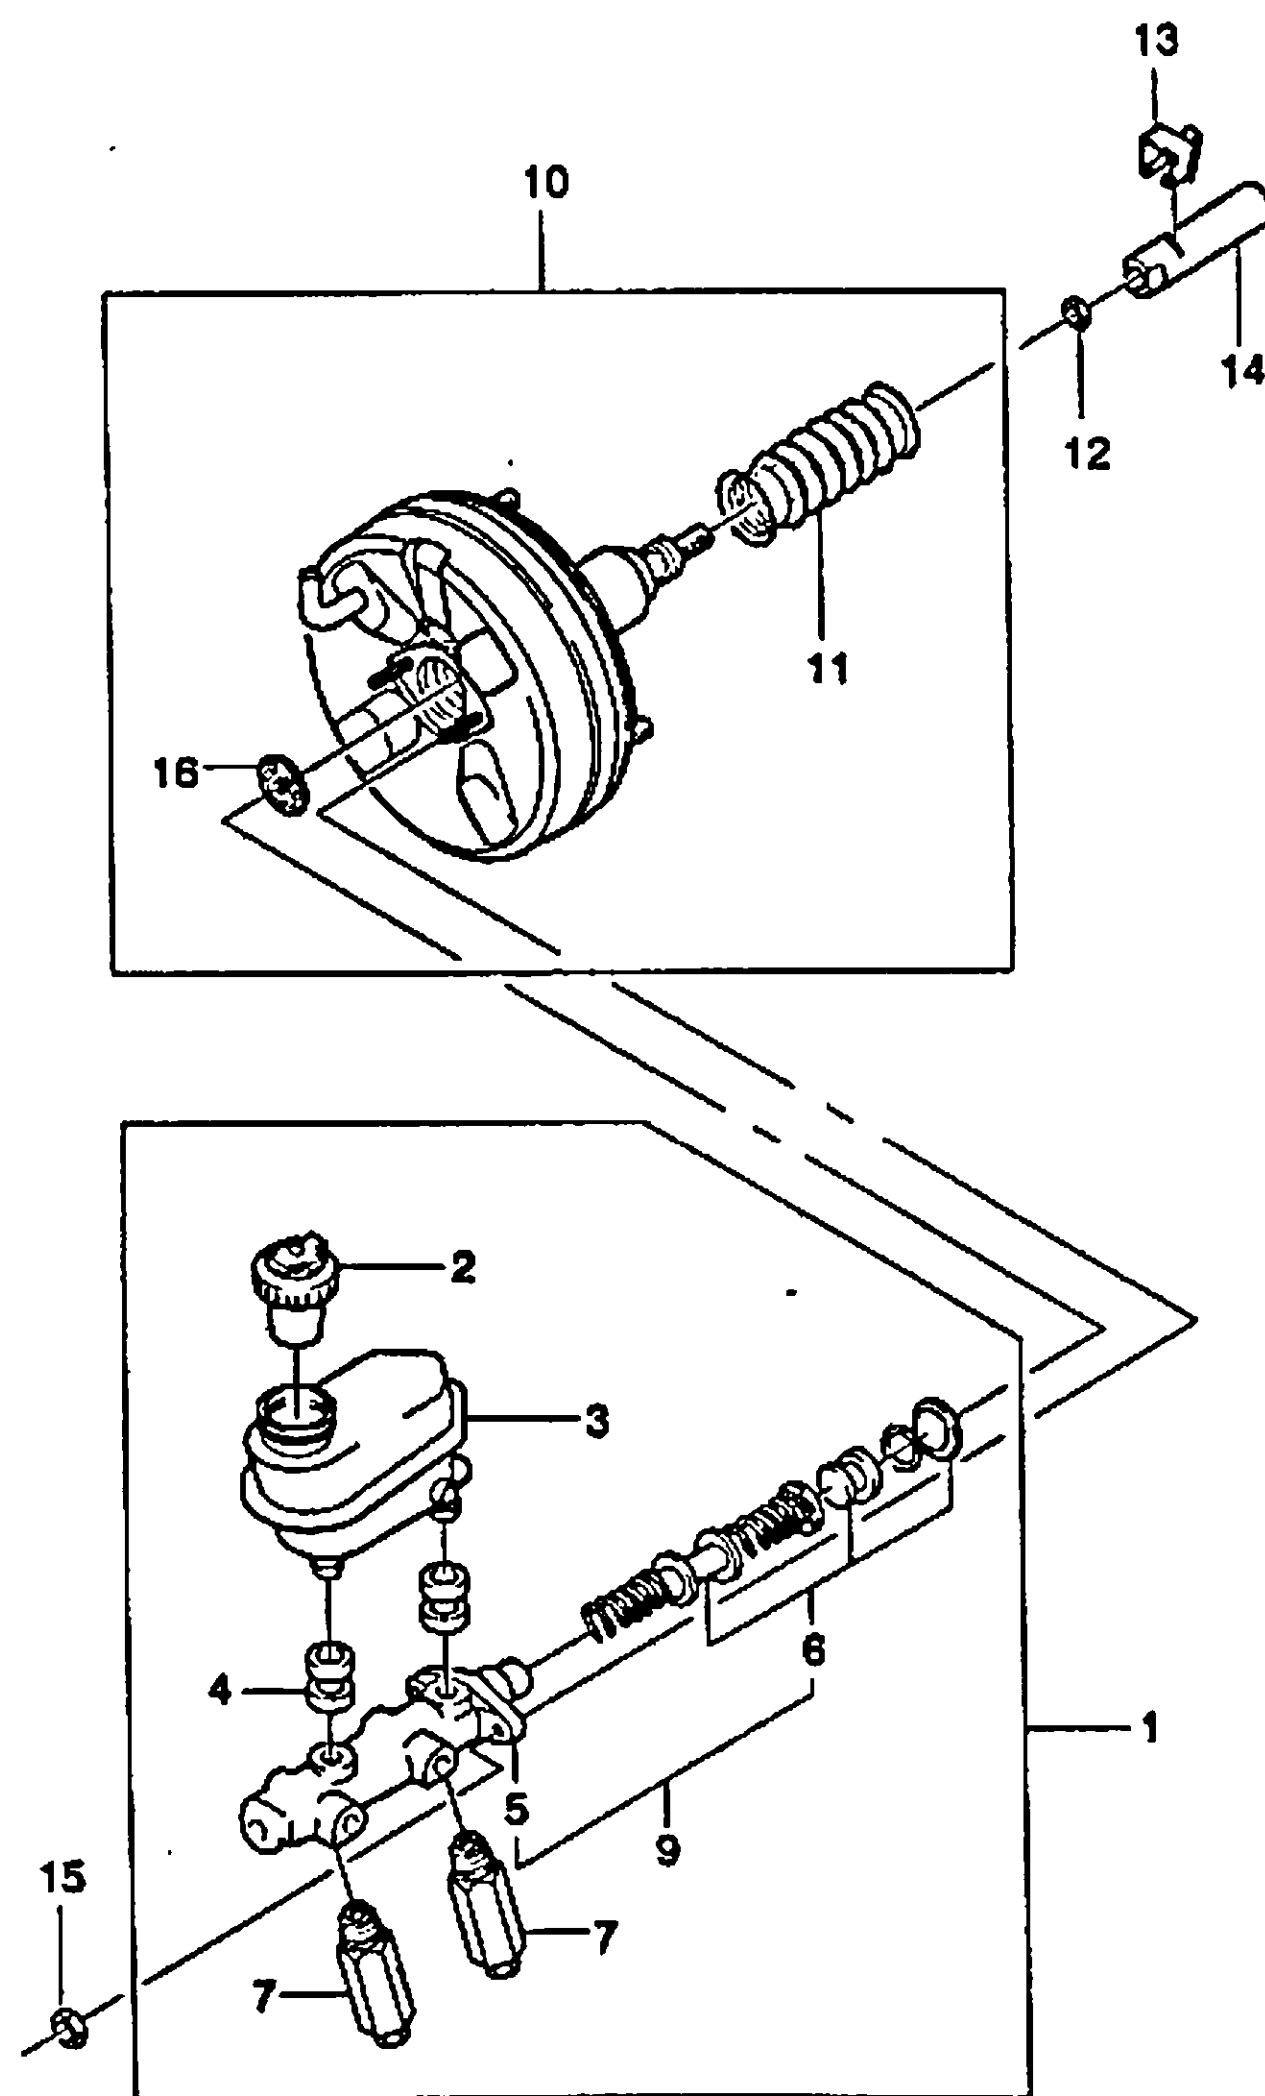


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S S
	[01]	(E)CYLINDER A - MASTER (D)ZYLINDER HAUPT										(F)CYLINDRE-MAITRE (S)CILINDRO-MAESTRO				
	426505	Y	M	B	B	B	S	S	S	JL9		1				
	426503	Y	M	B	B	B	.	O	O	&JL9		1				
	426506	Y	A	B	B	B	O	O	O	JL9		1				
	426504	Y	A	B	B	B	.	O	O	&JL9		1				
	426570	6	M	B	B	B	.	.	O	JL9		1				
	426507	6	M	B	B	B	.	.	O	&JL9		1				
	426571	6	A	B	B	B	.	.	O	JL9		1				
	426508	6	A	B	B	B	.	.	O	&JL9		1				
	[02]	(E)CAP-RESERVOIR (D)DECKEL,BEHÄLTER										(F)CHAPEAU-RESERVOIR (S)TAPA-RESERVA				
	426495	.	.	B	B	B	S	S	S			1				
	[03]	(E)BODY-RESERVOIR (D)KAROSSERIE,BEHÄLTER										(F)CORPS-RESERVOIR (S)CARROCERIA-EMBALSE				
	426475	.	M	B	B	B	S	S	S			1				
	426499	.	A	B	B	B	O	O	O			1				
	[04]	(E)SEAL-RESERVOIR (D)DICHTUNG,BEHÄLTER										(F)JOINT-RESERVOIR (S)SELLO-RESERVA				
	3492377	.	.	B	B	B	S	S	S			2				
	[05]	(E)BODY-MASTER CYLINDER (D)KAROSSERIE,HAUPTZYLINDER										(F)CORPS-CYLINDRE PRINCIPAL (S)CARROCERIA-CILINDRO				
	N/S(9)															
	[06]	(E)PISTON&SEAL KIT (D)KOLBEN&VERDICHTUNGS-SATZ										(F)PISTON&TROUSSE DE JOINT (S)JUEGO DE PISTON Y SELLO				
	3492436	Y	.	B	B	B	S	S	S			1				
	3492355	6	.	B	B	B	.	.	O			1				
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

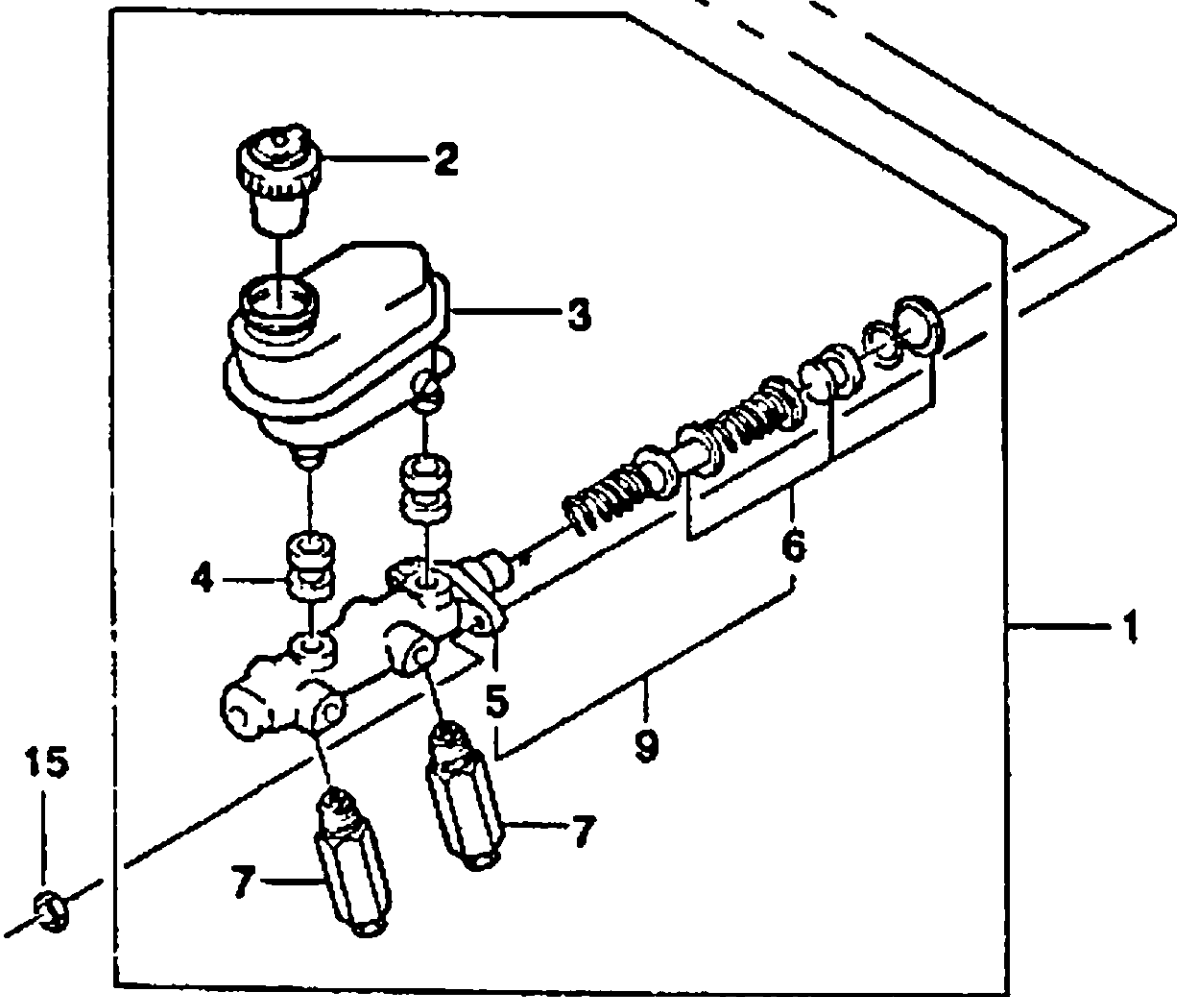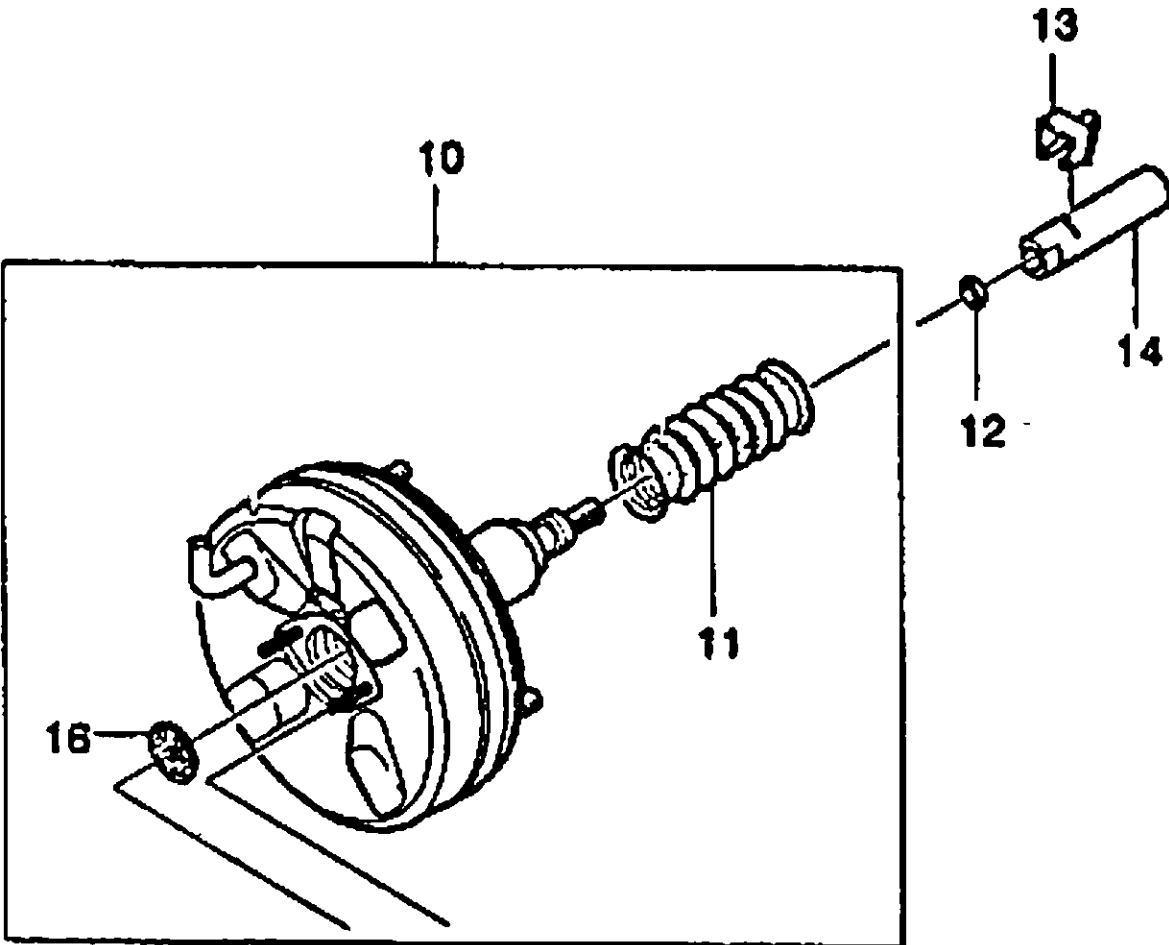


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S								S S	S X
	[07]	(E)PROPORTIONER-BRAKE (D)PROPORTIONIERUNG,BREMSE									(F)DOSEUR-FREIN (S)PROPORCIONADOR-FRENO					
	3488967	Y	.	B	B	B	S	S	S	JL9	2					
	426120	6	.	B	B	B	.	.	O	JL9	2					
	[09]	(E)CYLINDER SUB A-MASTER (D)UNTER-ZYLINDERHAUPT									(F)CYLINDRE SUB-MAITRE (S)CILINDRO SUB-MAESTRO					
	426382	Y	.	B	B	B	S	S	S	JL9	1					
	426383	Y	.	B	B	B	.	O	O	&JL9	1					
	426253	6	.	B	B	B	.	.	O	JL9	1					
	426299	6	.	B	B	B	.	.	O	&JL9	1					
	[10]	(E)BOOSTER-BRAKE (D)BREMSVERSTÄRKER									(F)SURPRESSEUR-FREIN (S)SERVO-FRENO					
	426589	.	.	B	B	B	S	S	S		1					
	[11]	(E)BOOT-BRAKE BOOSTER (D)KOFFERRAUM									(F)GAINE (S)CAPUCHON-SERVO DE FRENO					
	3492912A	.	.	B	B	B	S	S	S		1					
	[12]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA					
	09159-10002	.	.	B	B	B	S	S	S		1					
	[13]	(E)SPRING-RETAINING (D)FEDERUNG,HALTER									(F)RESSORT-D'ARRET (S)RESORTE-RETENIENDO					
	90184913	.	.	B	B	B	S	S	S		1					
	[14]	(E)ADJUSTER (D)EINSTELLVORRICHTUNG									(F)AJUSTEUR (S)AJUSTADOR					
	90184914	.	.	B	B	B	S	S	S		1					
	[15]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA					
	2909253	.	.	B	B	B	S	S	S		2					
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

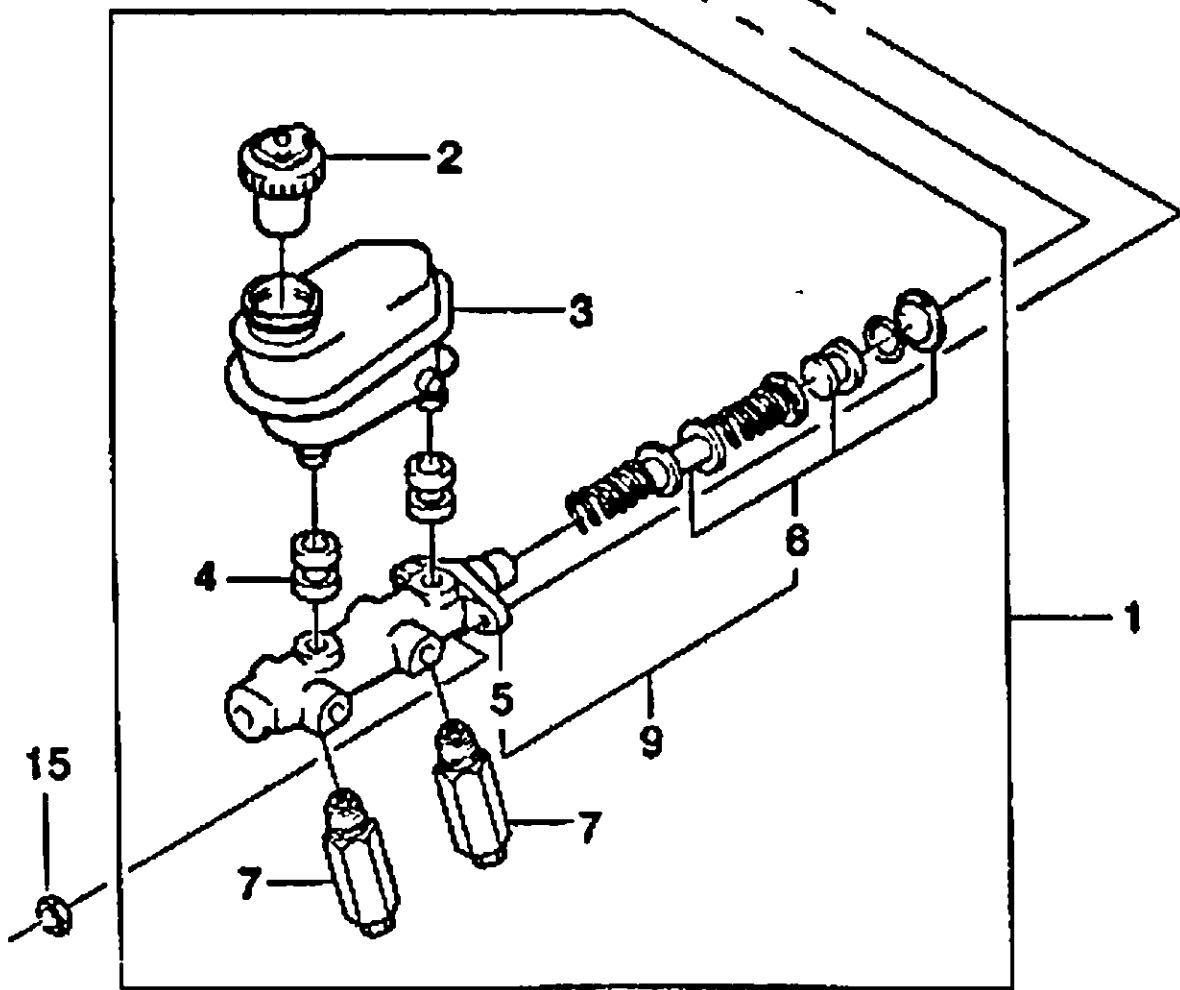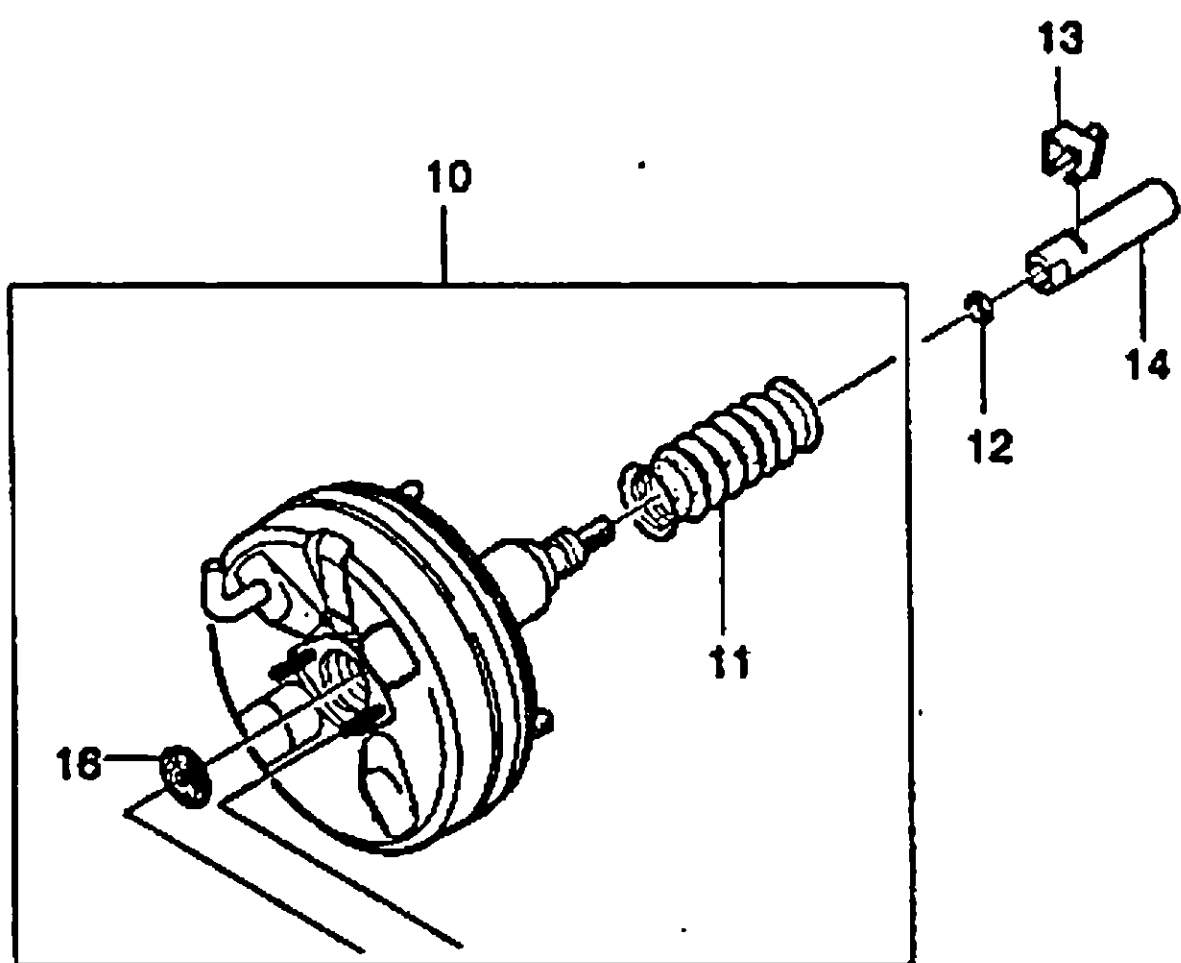


KEY NO.			PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S
	[16] 03488577	(E)SEAL-FRONT HOUSING (D)DICHTUNG,VORDER-GEHÄUSE . .	B	B	B	S	S	S			(F)JOINT-LOGEMENT AVANT (S)SELLO-CARTER DEL FRENTE 1				
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

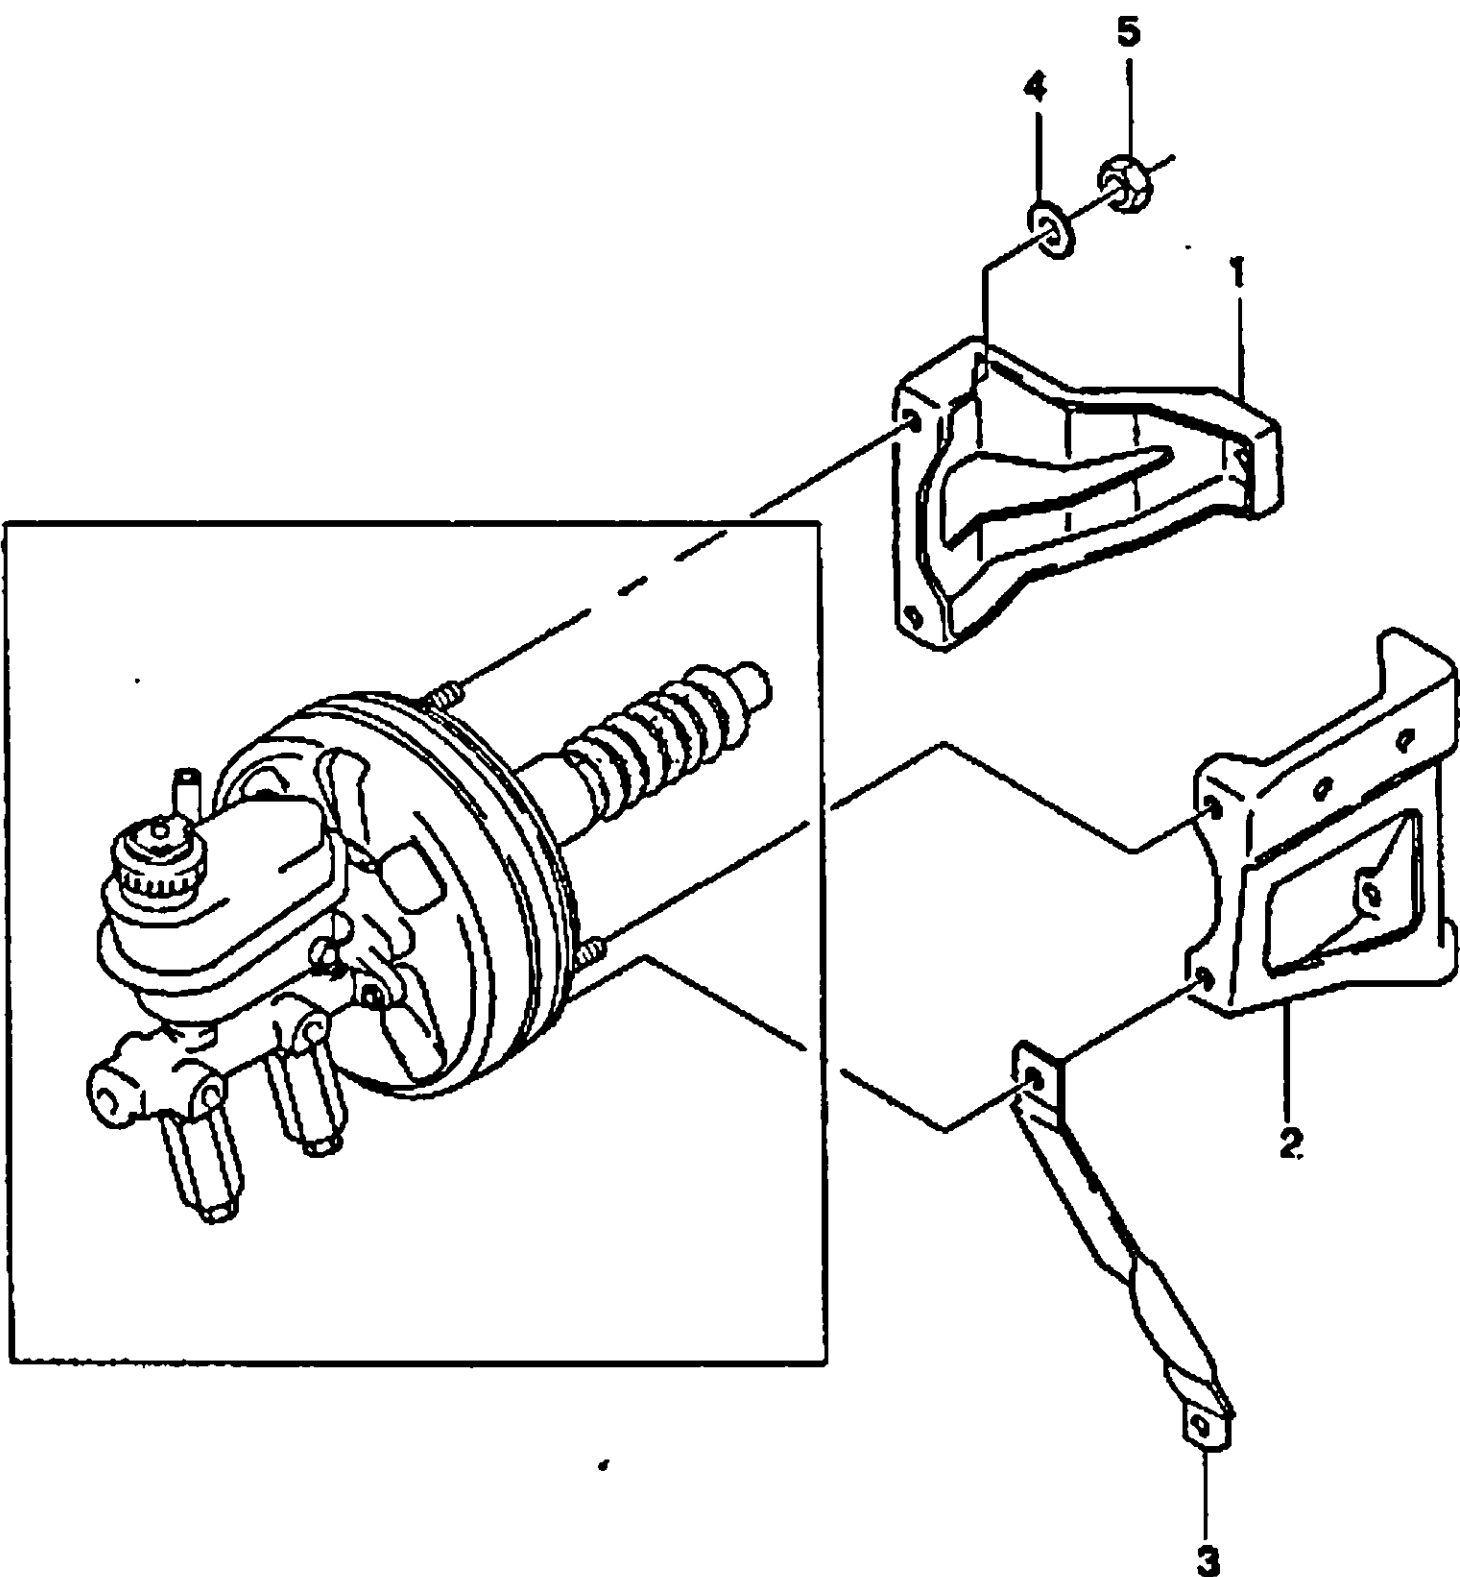


KEY NO.			PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01] 90184911	(E)BRACE-MASTER BRAKE UNIT (D)SCHIENE,HAUPTBREMSE	. .	B	B	B	S	S	S		(F)SUPPORT (S)REFUERZO	1				
	[02] 90184912	(E)BRACE-MASTER BRAKE UNIT (D)SCHIENE,HAUPTBREMSE	. .	B	B	B	S	S	S		(F)SUPPORT (S)REFUERZO	1				
	[03] 96243317	(E)STRUT-TENSION (D)STÖTZE,SPANNUNG	. .	B	B	B	S	S	S		(F)TENDEUR-TENSION (S)BRIDA-TENSION	1				
	[04] 08322-11083	(E)WASHER-PLAIN (D)DICHTUNGSRING	. .	B	B	B	S	S	S		(F)RONDELLE (S)ARANDELA	3				
	[05] 08310-11083	(E)NUT-HEXAGON (D)MUTTER	. .	B	B	B	S	S	S		(F)ECROU (S)TUERCA	4				
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE										
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK										

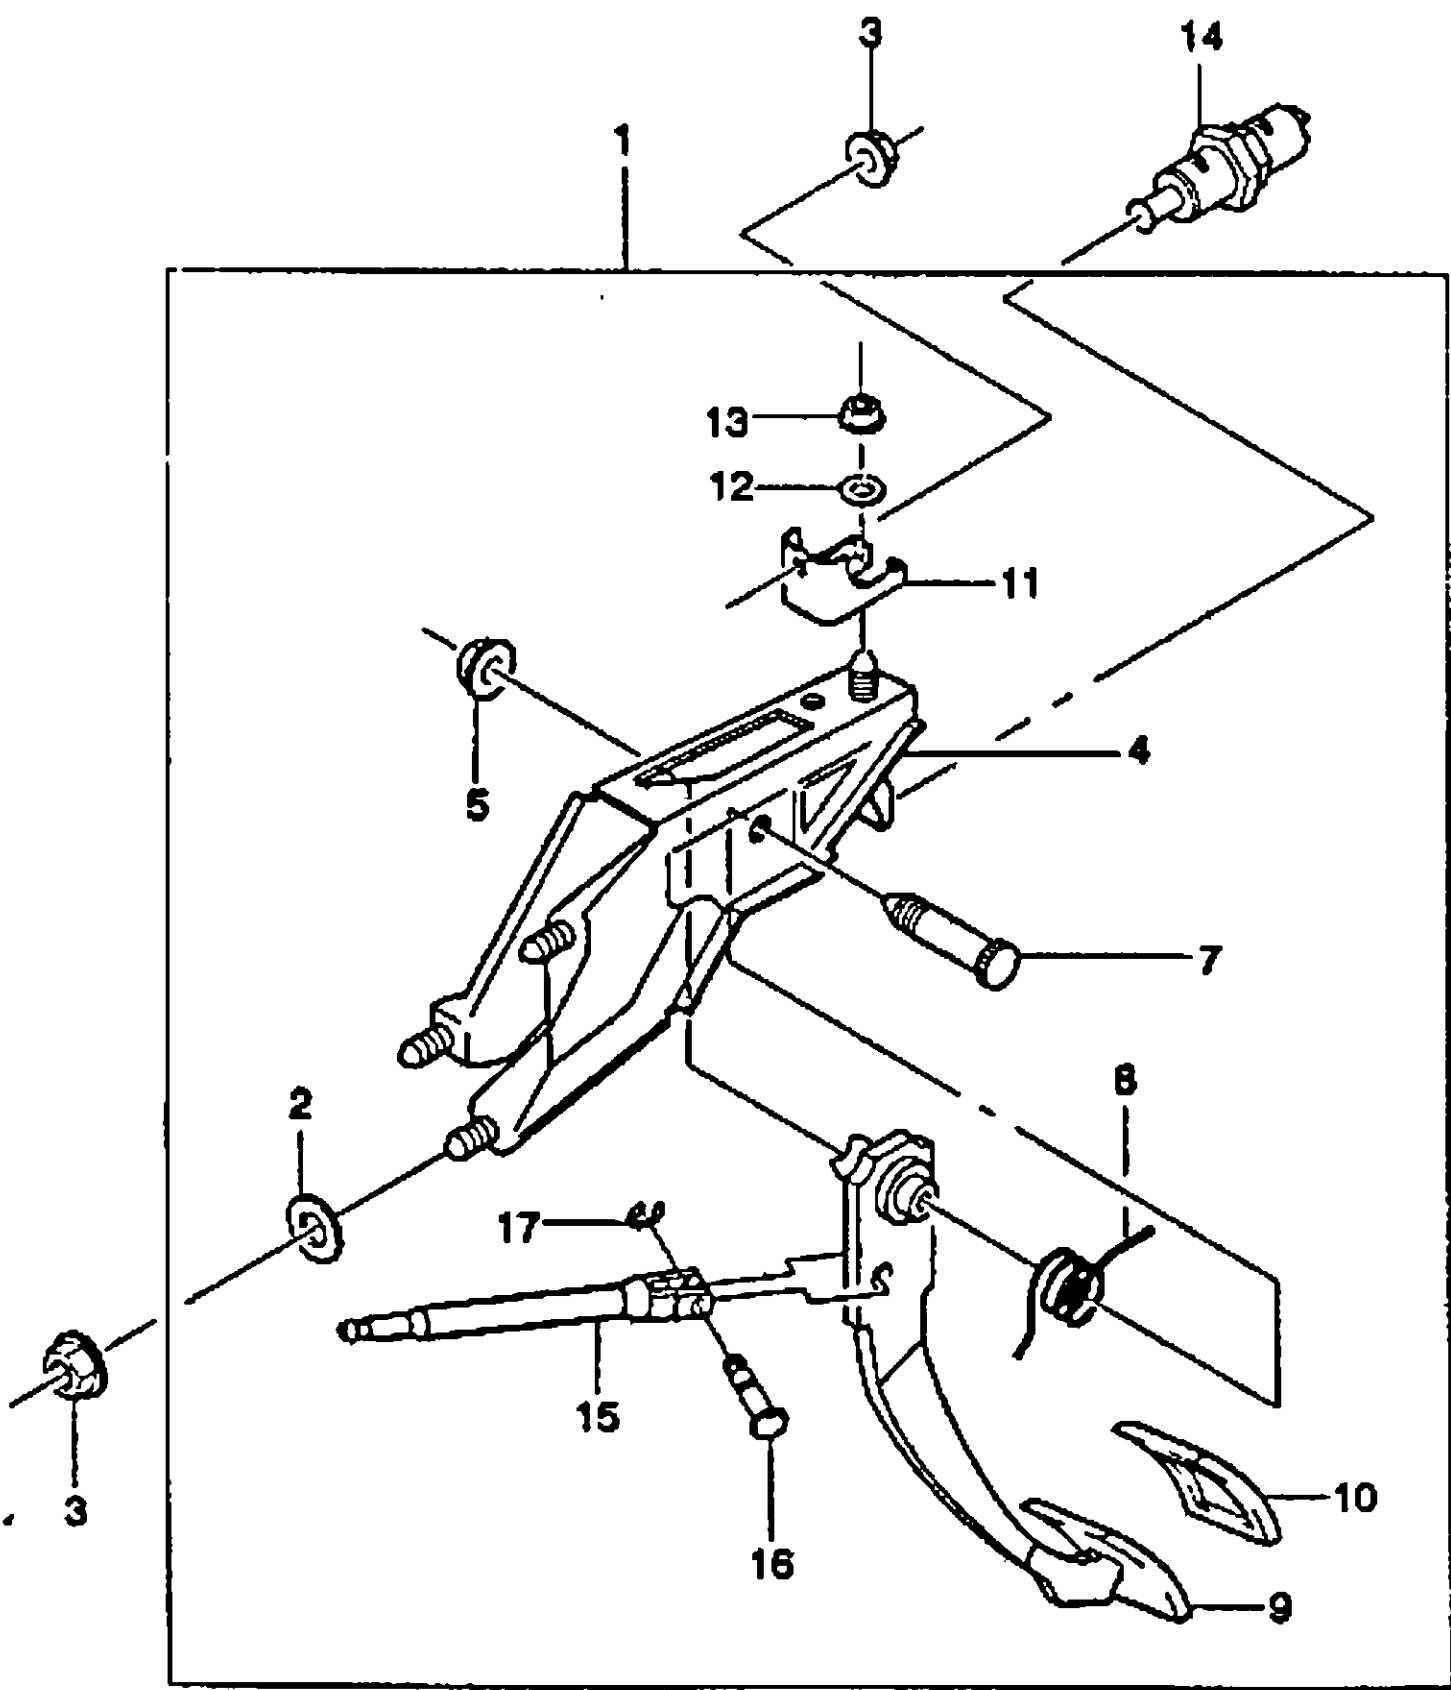


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S X
	[01]	(E)PEDAL A-BRAKE (D)PEDAL,BREMSE										(F)PEDALE-FREIN (S)PEDAL-FRENO				
	96306187	.	M	B	B	B	S	S	S	-EC1	1			PA		
	96250892	.	M	B	B	B	A	A	A	&EC1	1			PE		
	96306149	.	A	B	B	B	O	O	O	-EC1	1			PB		
	96250893	.	A	B	B	B	A	A	A	&EC1	1			PF		
	[02]	(E)DISK-INSULATION (D)SCHEIBE,ISOLIERUNG										(F)DISQUE-ISOLATION (S)DISCO-AISLAMIENTO				
	96156393	.	.	B	B	B	S	S	S		3					
	[03]	(E)NUT (D)MUTTER										(F)ECROU (S)TUERCA				
	09159-08003	.	.	B	B	B	S	S	S		6					
	[04]	(E)BRACE A-BRAKE PEDAL (D)SCHIENE,BREMSPEDAL										(F)SUPPORT-MONTAGE PEDALE (S)REFUERZO				
	96306185	.	.	B	B	B	S	S	S		1					
	[05]	(E)NUT (D)MUTTER										(F)ECROU (S)TUERCA				
	09159-10007	.	.	B	B	B	S	S	S		1					
	[07]	(E)SHAFT-PEDAL MOUNTING (D)SPINDEL,PEDAL MONTAGE										(F)ARBRE-MONTAGE PEDALE (S)EJE-MONTAJE DE PEDAL				
	96215326	.	.	B	B	B	S	S	S		1					
	[08]	(E)SPRING (D)FEDERUNG,PEDAL MONTAGE										(F)RESSORT (S)RESORTE				
	09448-24001	.	.	B	B	B	S	S	S		1					
	[09]	(E)PEDAL-BRAKE (D)PEDAL,BREMSE										(F)PEDALE-FREIN (S)PEDAL-FRENO				
	96192176													NOT APPLIED		
	96193094	.	M	B	B	B	S	S	S	-EC1	1					
ENG(ENGINE)				T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

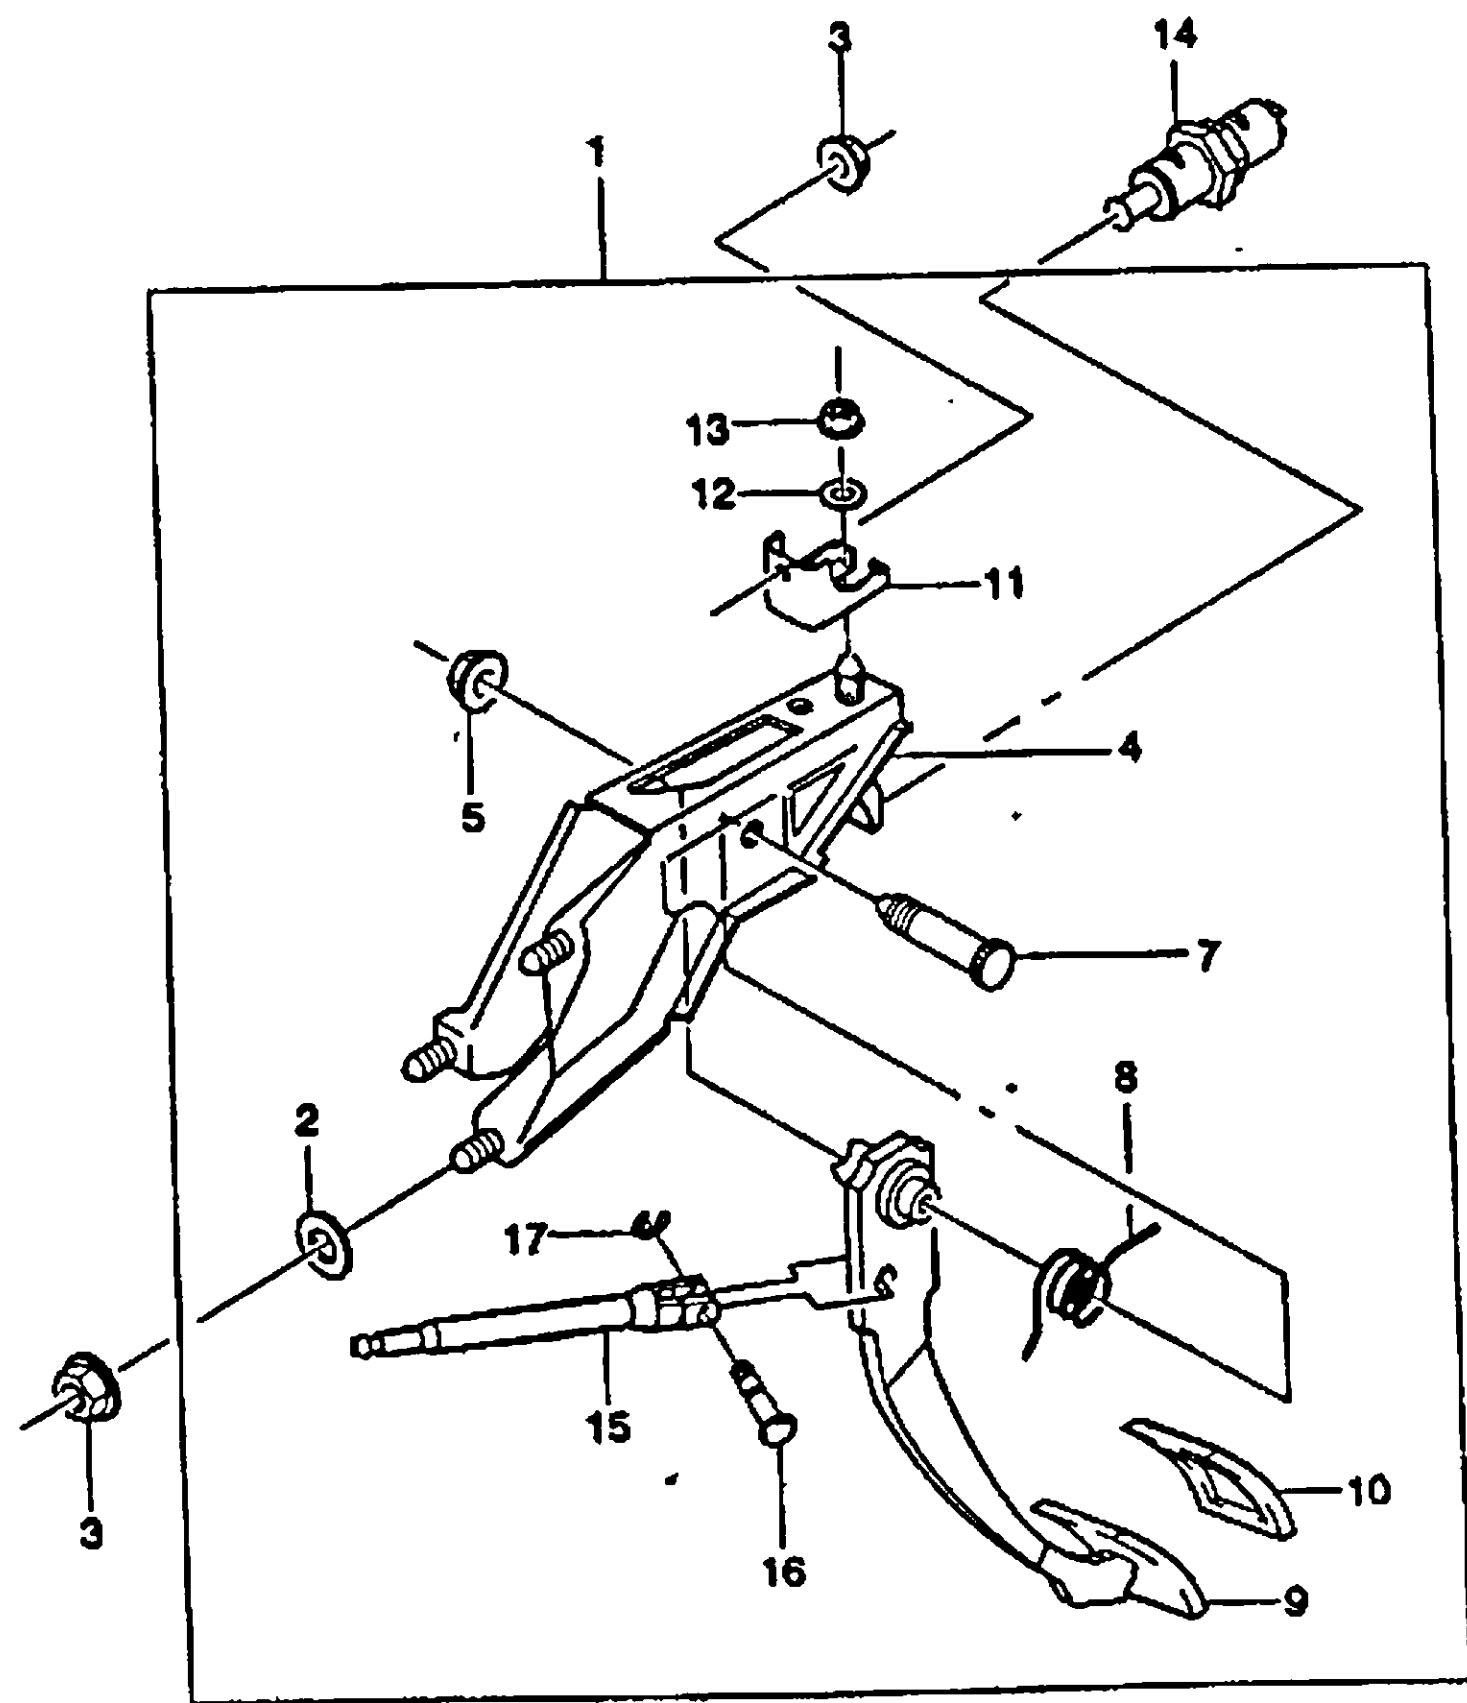

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	96289190	.	M	B	B	B	A	A	A	&EC1		1	NOT APPLIED		
	96192177											1			
	96193095	.	A	B	B	B	O	O	O	-EC1		1			
	96289191	.	A	B	B	B	A	A	A	&EC1		1			
	[10]									(E)COVER-PEDAL PLATE (D)UNTERLAGE,BERMSPEDAL		(F)PATIN-PEDALE DE FREIN (S)COJIN-PEDAL DE FRENO			
	90105172	.	M	B	B	B	S	S	S			1			
	90135701	.	A	B	B	B	O	O	O			1			
	[11]									(E)BRACKET-BRAKE PEDAL BRACE (D)TRÄGER		(F)SUPPORT (S)SOPORTE			
	96306186	.	.	B	B	B	S	S	S			1			
	[12]									(E)WASHER-PLAIN (D)DICHTUNGSRING		(F)RONDELLE (S)ARANDELA			
	09160-08002	.	.	B	B	B	S	S	S			1			
	[13]									(E)NUT-HEXAGON LOCK (D)MUTTER		(F)ECROU (S)TUERCA			
	08311-18083	.	.	B	B	B	S	S	S			1			
	[14]									(E)SWITCH A-STOP LAMP (D)SCHALTER,STOP-LAMPE		(F)COMMUTATEUR-LAMPE D'ARRET (S)INTERRUPTOR			
	96212027	.	.	B	B	B	S	S	S			1			
	[15]									(E)ROD A-PISTON (D)KOLBENSTANGE		(F)TRINGLE-PISTON (S)VARILLA-PISTON			
	90289187	.	.	B	B	B	S	S	S			1			
	[16]									(E)PIN (D)STIFT		(F)BROCHE (S)PASADOR			
	09208-10001	.	.	B	B	B	S	S	S			1			
	[17]									(E)RING-RETAINING E TYPE (D)RING,HALTER		(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							



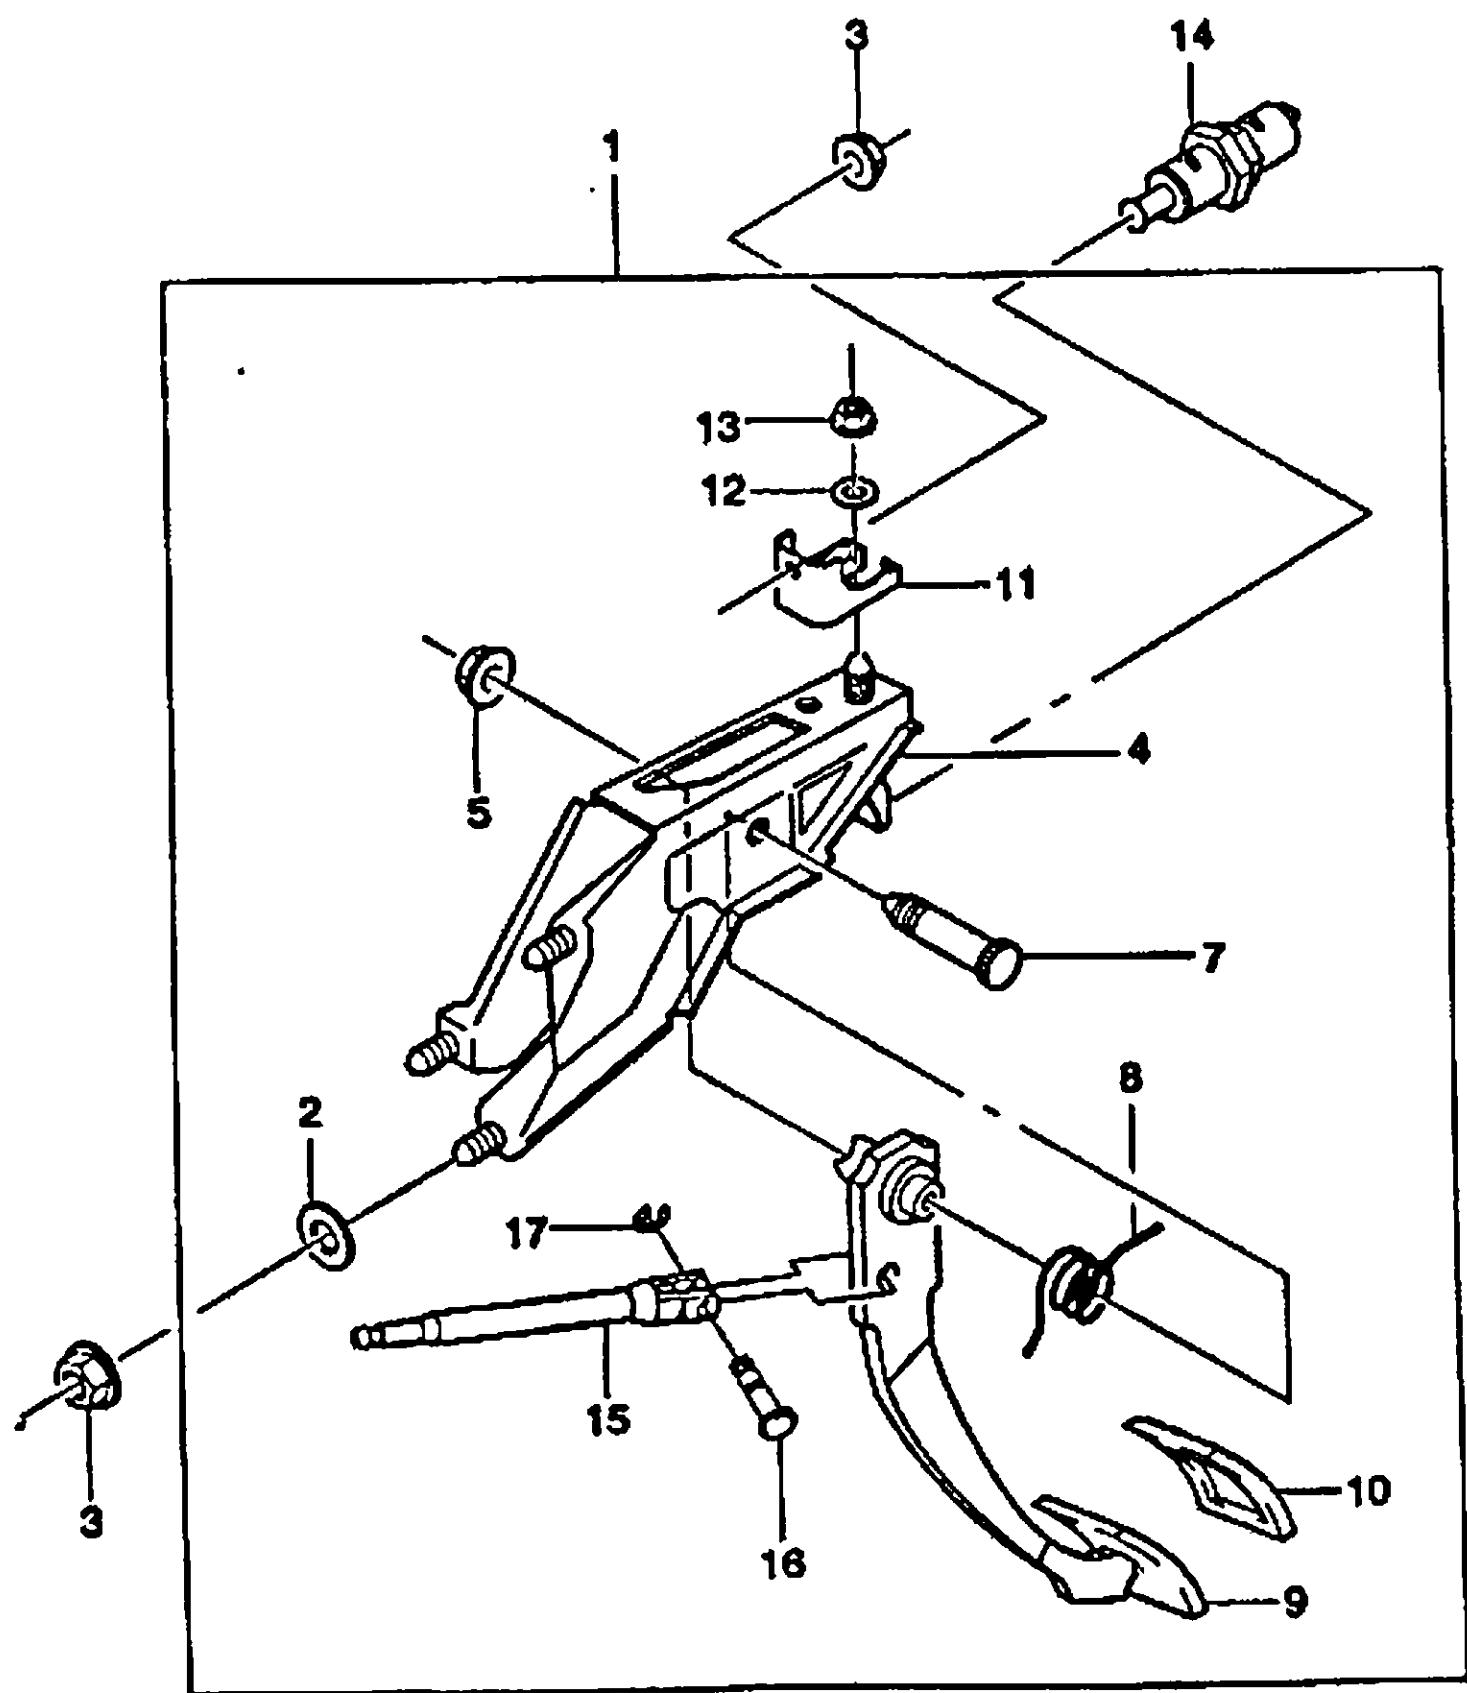


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	6 H	S								S	S
	08332-21089	.	.	B	B	B	S	S	S			1				
ENG(ENGINE)		T/A(TRANSAXLE)						- BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

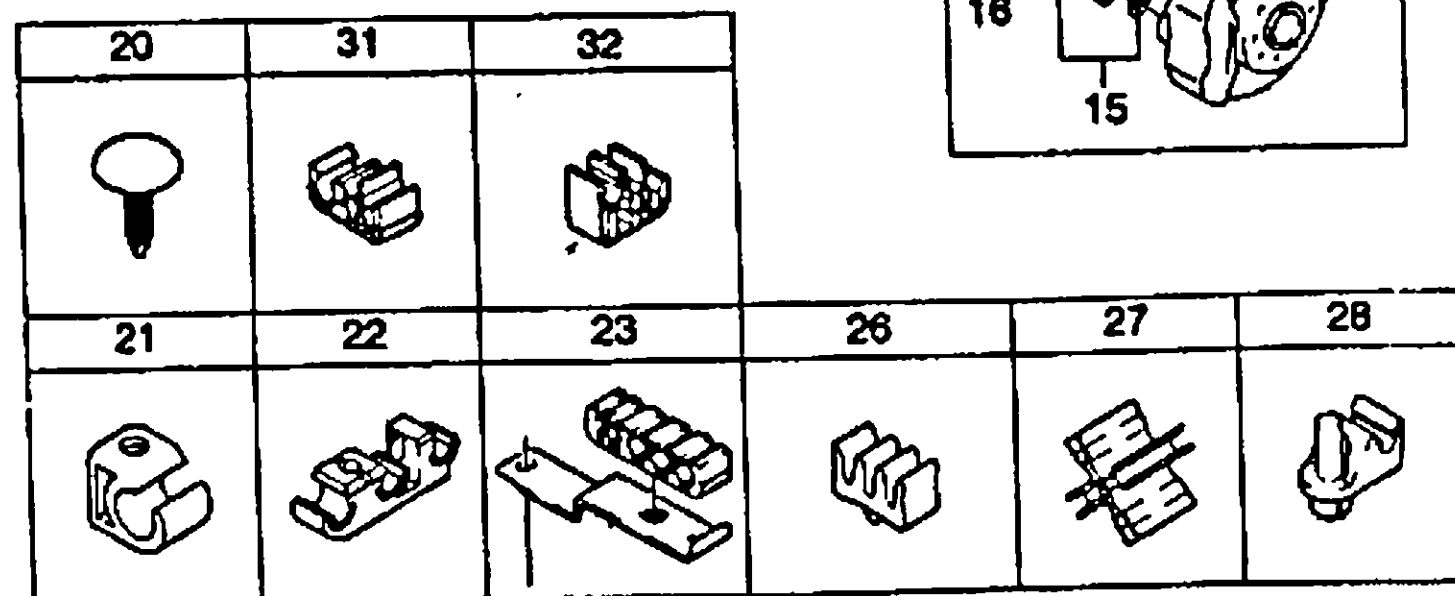

L-13


420

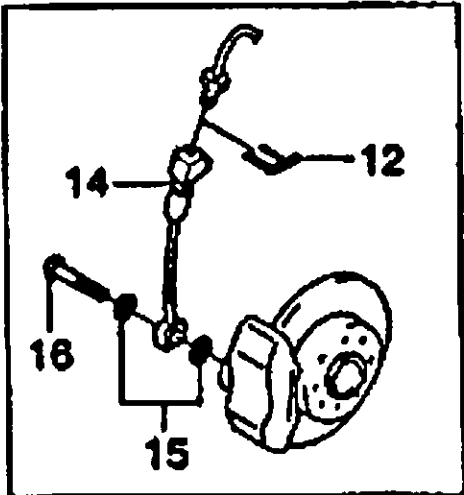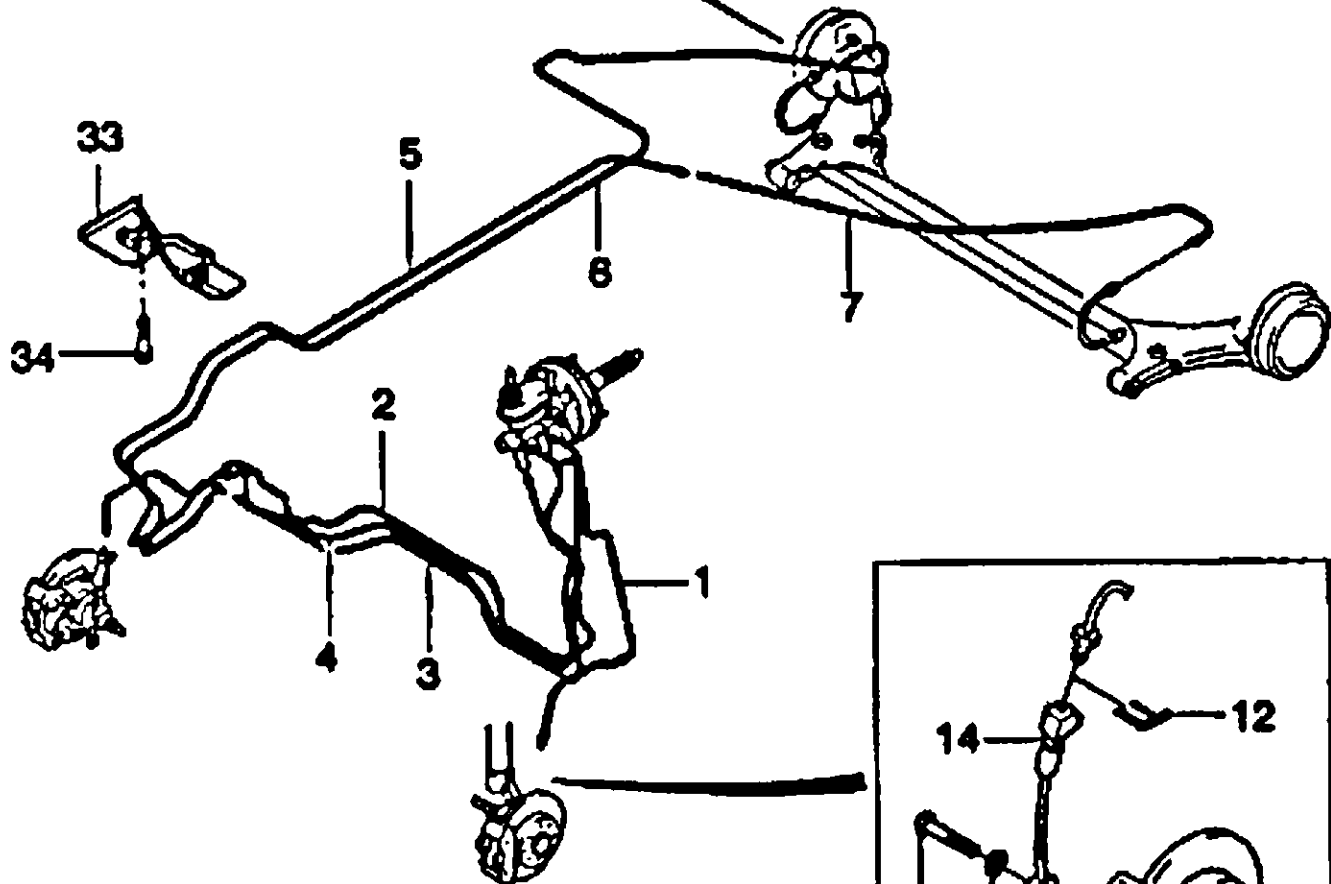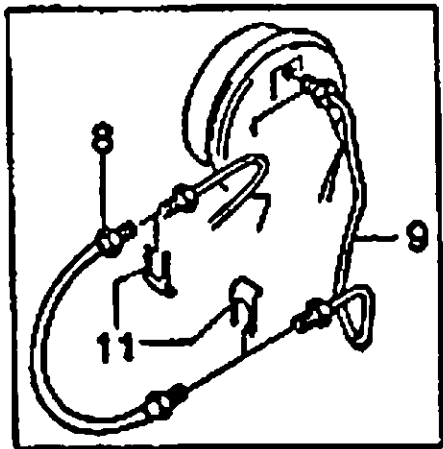

20	31	32			
21	22	23	26	27	28

13

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	96306664	.	.	B	B	B	S	S	S	JL9		LH	1			
	96306666	.	.	B	B	B	S	S	S	JL9		RH	1			
	[11]	(E)		RING								(F)	ANNEAU			
		(D)		RING								(S)	ANILLO			
	09383-12003	.	.	B	B	B	S	S	S	JL9			4			
	[12]	(E)		RING								(F)	ANNEAU			
		(D)		RING								(S)	ANILLO			
	09383-12003	.	.	B	B	B	S	S	S	JL9			2			
	[13]	(E)		BOLT-HEXAGON								(F)	BOULON			
		(D)		SCHRAUBE								(S)	PERNO			
	02714-06163	.	.	B	B	B	S	S	S	JL9			3			
	[14]	(E)		HOSE A-BRAKE,FRONT								(F)	TUYAU-FREIN,AVANT			
		(D)		SCHLAUCH,BREMSE,VORNE								(S)	MANGUERA-FRENO,FRENTE			
	96212323	.	.	B	B	B	S	S	S	JL9			2			
	[15]	(E)		WASHER-PLAIN								(F)	RONDELLE			
		(D)		DICHTUNGSRING								(S)	ARANDELA			
	09160-10002	.	.	B	B	B	S	S	S	JL9			4			
	[16]	(E)		BOLT-UNION								(F)	BOULON			
		(D)		SCHRAUBE								(S)	PERNO			
	09360-10002	.	.	B	B	B	S	S	S	JL9			2			
	[20]	(E)		CLIP								(F)	ATTACHE			
		(D)		KLEMME								(S)	GRAPA			
	09409-07328	.	.	B	B	B	S	S	S	JL9			2			
	[21]	(E)		CLIP								(F)	ATTACHE			
		(D)		KLEMME								(S)	GRAPA			
	09408-00082	.	.	B	B	B	S	S	S	JL9			5			
	[22]	(E)		CLIP								(F)	ATTACHE			
		(D)		KLEMME								(S)	GRAPA			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								



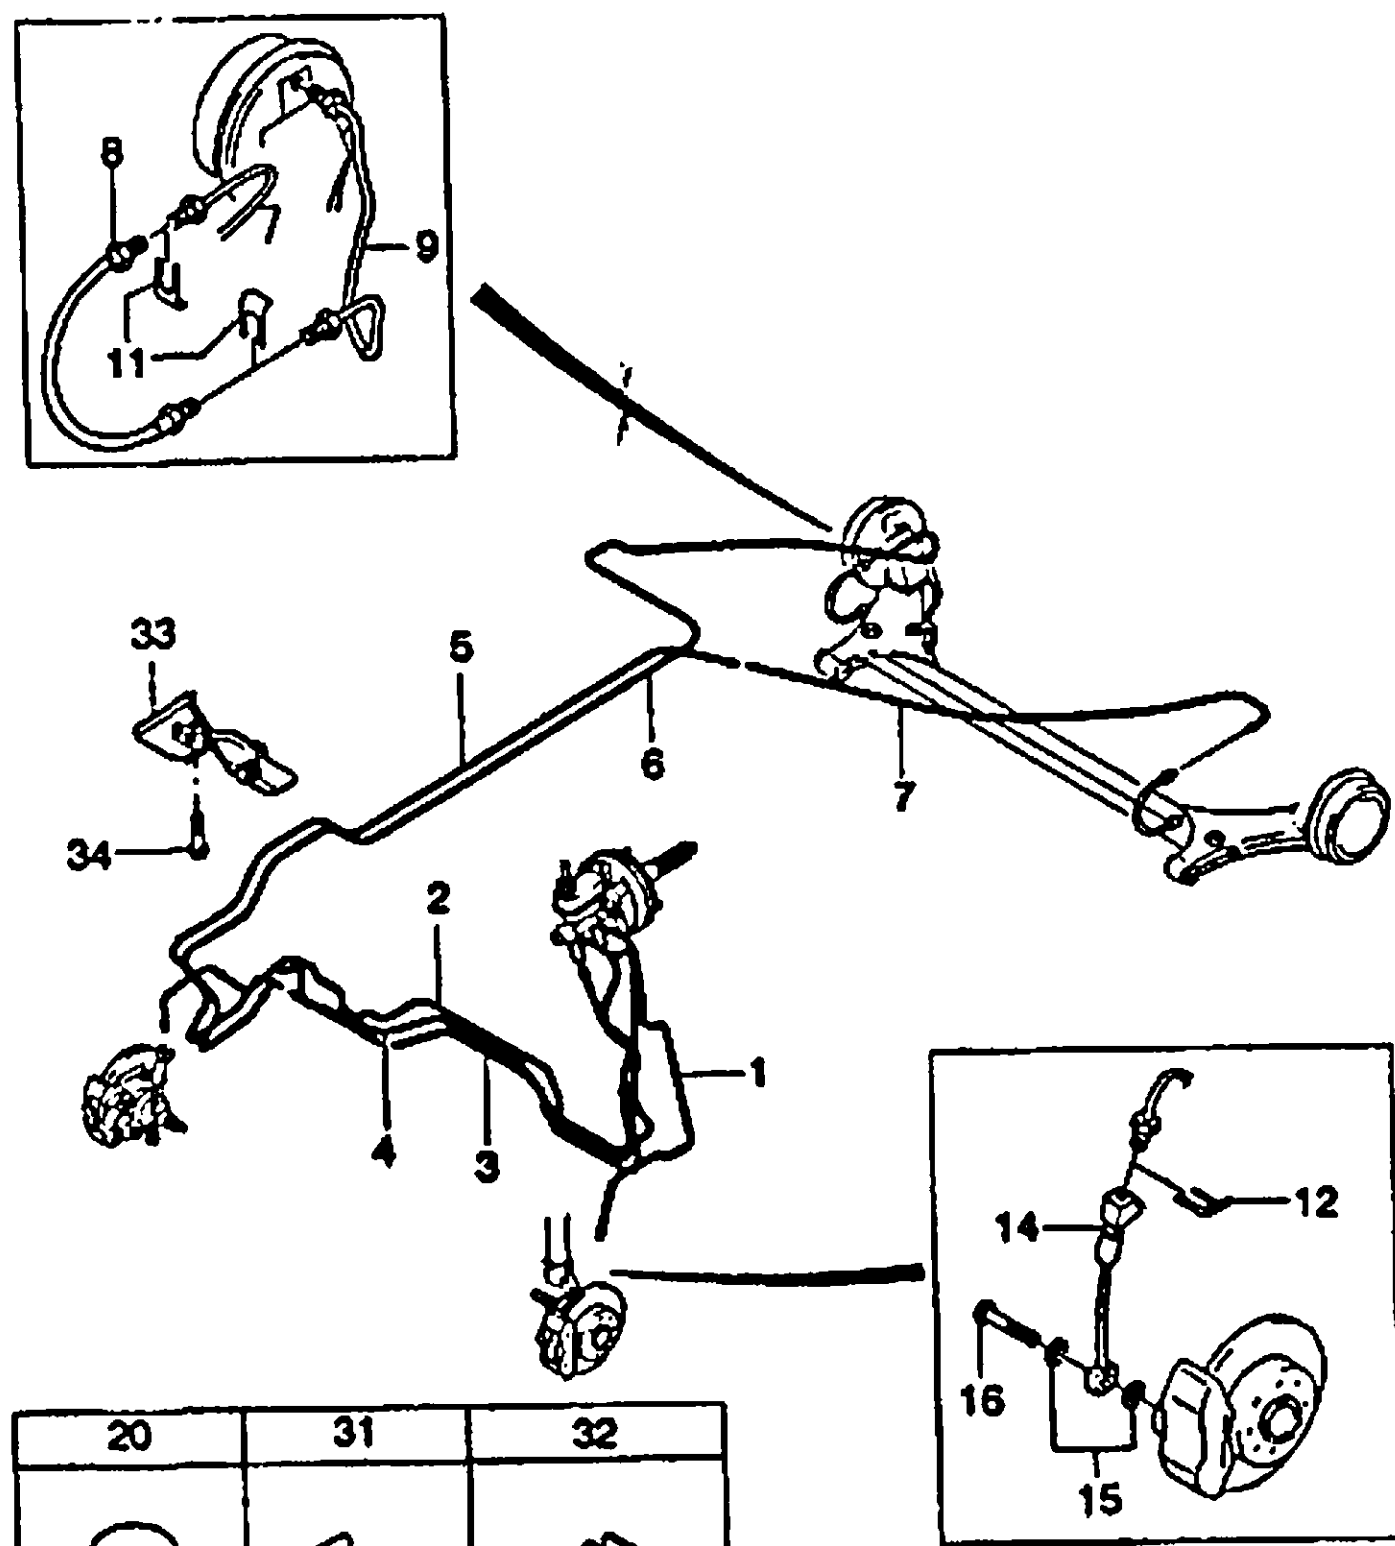


20	31	32			
					
21	22	23	26	27	28
					

13

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N H	3 H	5 H	S S S								S S S
	09408-00006	.	.	B	B	B	S	S	S	JL9	4				
	[23]	(E)CLIP A									(F)ATTACHE				
		(D)KLEMME									(S)GRAPA				
	96304429	.	.	B	B	B	S	S	S	JL9	3				
	[26]	(E)CLIP									(F)ATTACHE				
		(D)KLEMME									(S)GRAPA				
	09408-00007	.	.	B	B	B	S	S	S	JL9	2				
	[27]	(E)CLIP									(F)ATTACHE				
		(D)KLEMME									(S)GRAPA				
	09408-00008	.	.	B	B	B	S	S	S	JL9	1				
	[28]	(E)CLIP									(F)ATTACHE				
		(D)KLEMME									(S)GRAPA				
	09408-00009	.	.	B	B	B	S	S	S	JL9	1				
	[31]	(E)CLIP									(F)ATTACHE				
		(D)KLEMME									(S)GRAPA				
	09408-00079	.	.	B	B	B	S	S	S	JL9	1				
	[32]	(E)CLIP									(F)ATTACHE				
		(D)KLEMME									(S)GRAPA				
	09408-00080	.	.	B	B	B	S	S	S	JL9	1				
	[33]	(E)SHIELD A-BRAKE PROTV									(F)BOUCLIER				
		(D)SCHILD									(S)ESCUDO				
	96243676	.	.	B	B	B	S	S	S	JL9	1				
	[34]	(E)BOLT									(F)BOULON				
		(D)SCHRAUBE									(S)PERNO				
	09118-06010	.	.	B	B	B	S	S	S	JL9	1				
	[A0]	(E)PIPE A-BRAKE,FUEL									(F)TUYAU-FREIN				
		(D)ROHR,BREMSE									(S)TUBERIA-FRENO				
	96256674	.	.	B	B	B	S	S	S	&NN4-VB4/JL9/KL9	1				


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

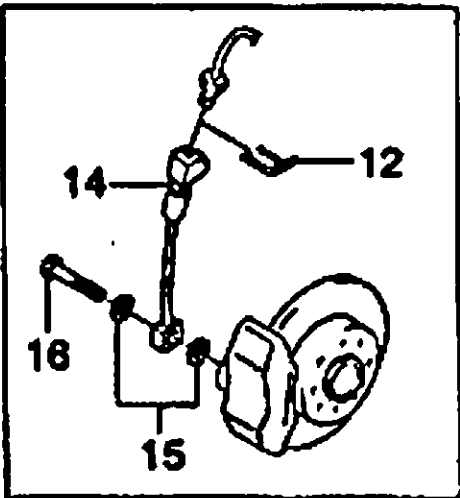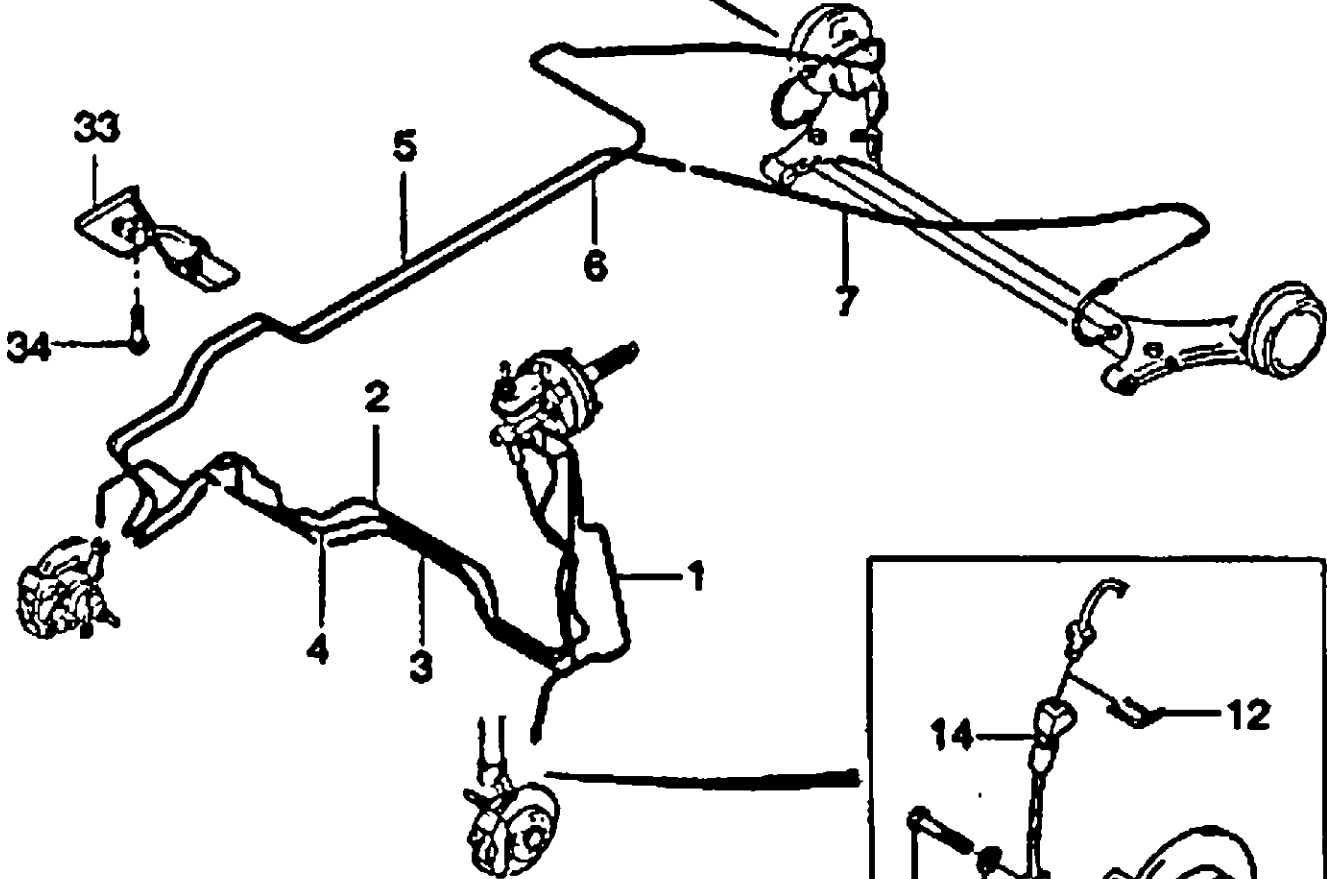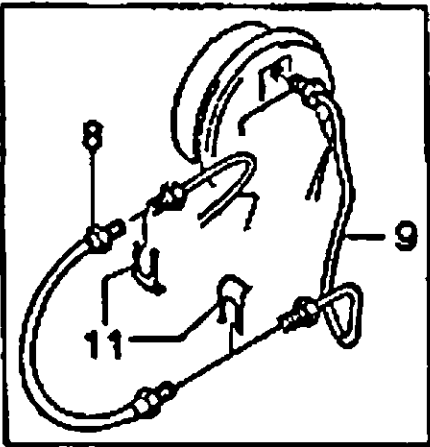




20	31	32			
21	22	23	26	27	28

13

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	96218173	.	.	B	B	B	A	A	A	&NN4&VB4-JL9/KL9	1	970609		NT		
N	96256673	.	.	B	B	B	A	A	A	&NN4&VB4-JL9/KL9	1	970609				
	96218173	.	.	B	B	B	A	A	A	&NN6/NN7-JL9/KL9	1	970609		NT		
N	96256673	.	.	B	B	B	A	A	A	&NN6/NN7-JL9/KL9	1	970609				
	96252759												NOT APPLIED			
	96256675	6	.	B	B	B	.	.	A	&KL9-JL9	1					
	-CONSIST OF-												REFER TO			
	PIPE-FUEL FEEDING,CENTER												BELOW			
	PIPE-FUEL RETURN,CENTER												2120-03			
	PIPE-PURGE,CENTER												2120-04			
	PIPE A-BRAKE REAR,2ND(LH)												2130-09			
	PIPE A-BRAKE REAR,2ND(RH)												4650-05			
	SHIELD A-PROTV,BRAKE,FUEL												4650-06			
													4650-33			
																
													GROUP NO	KEY NO		
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

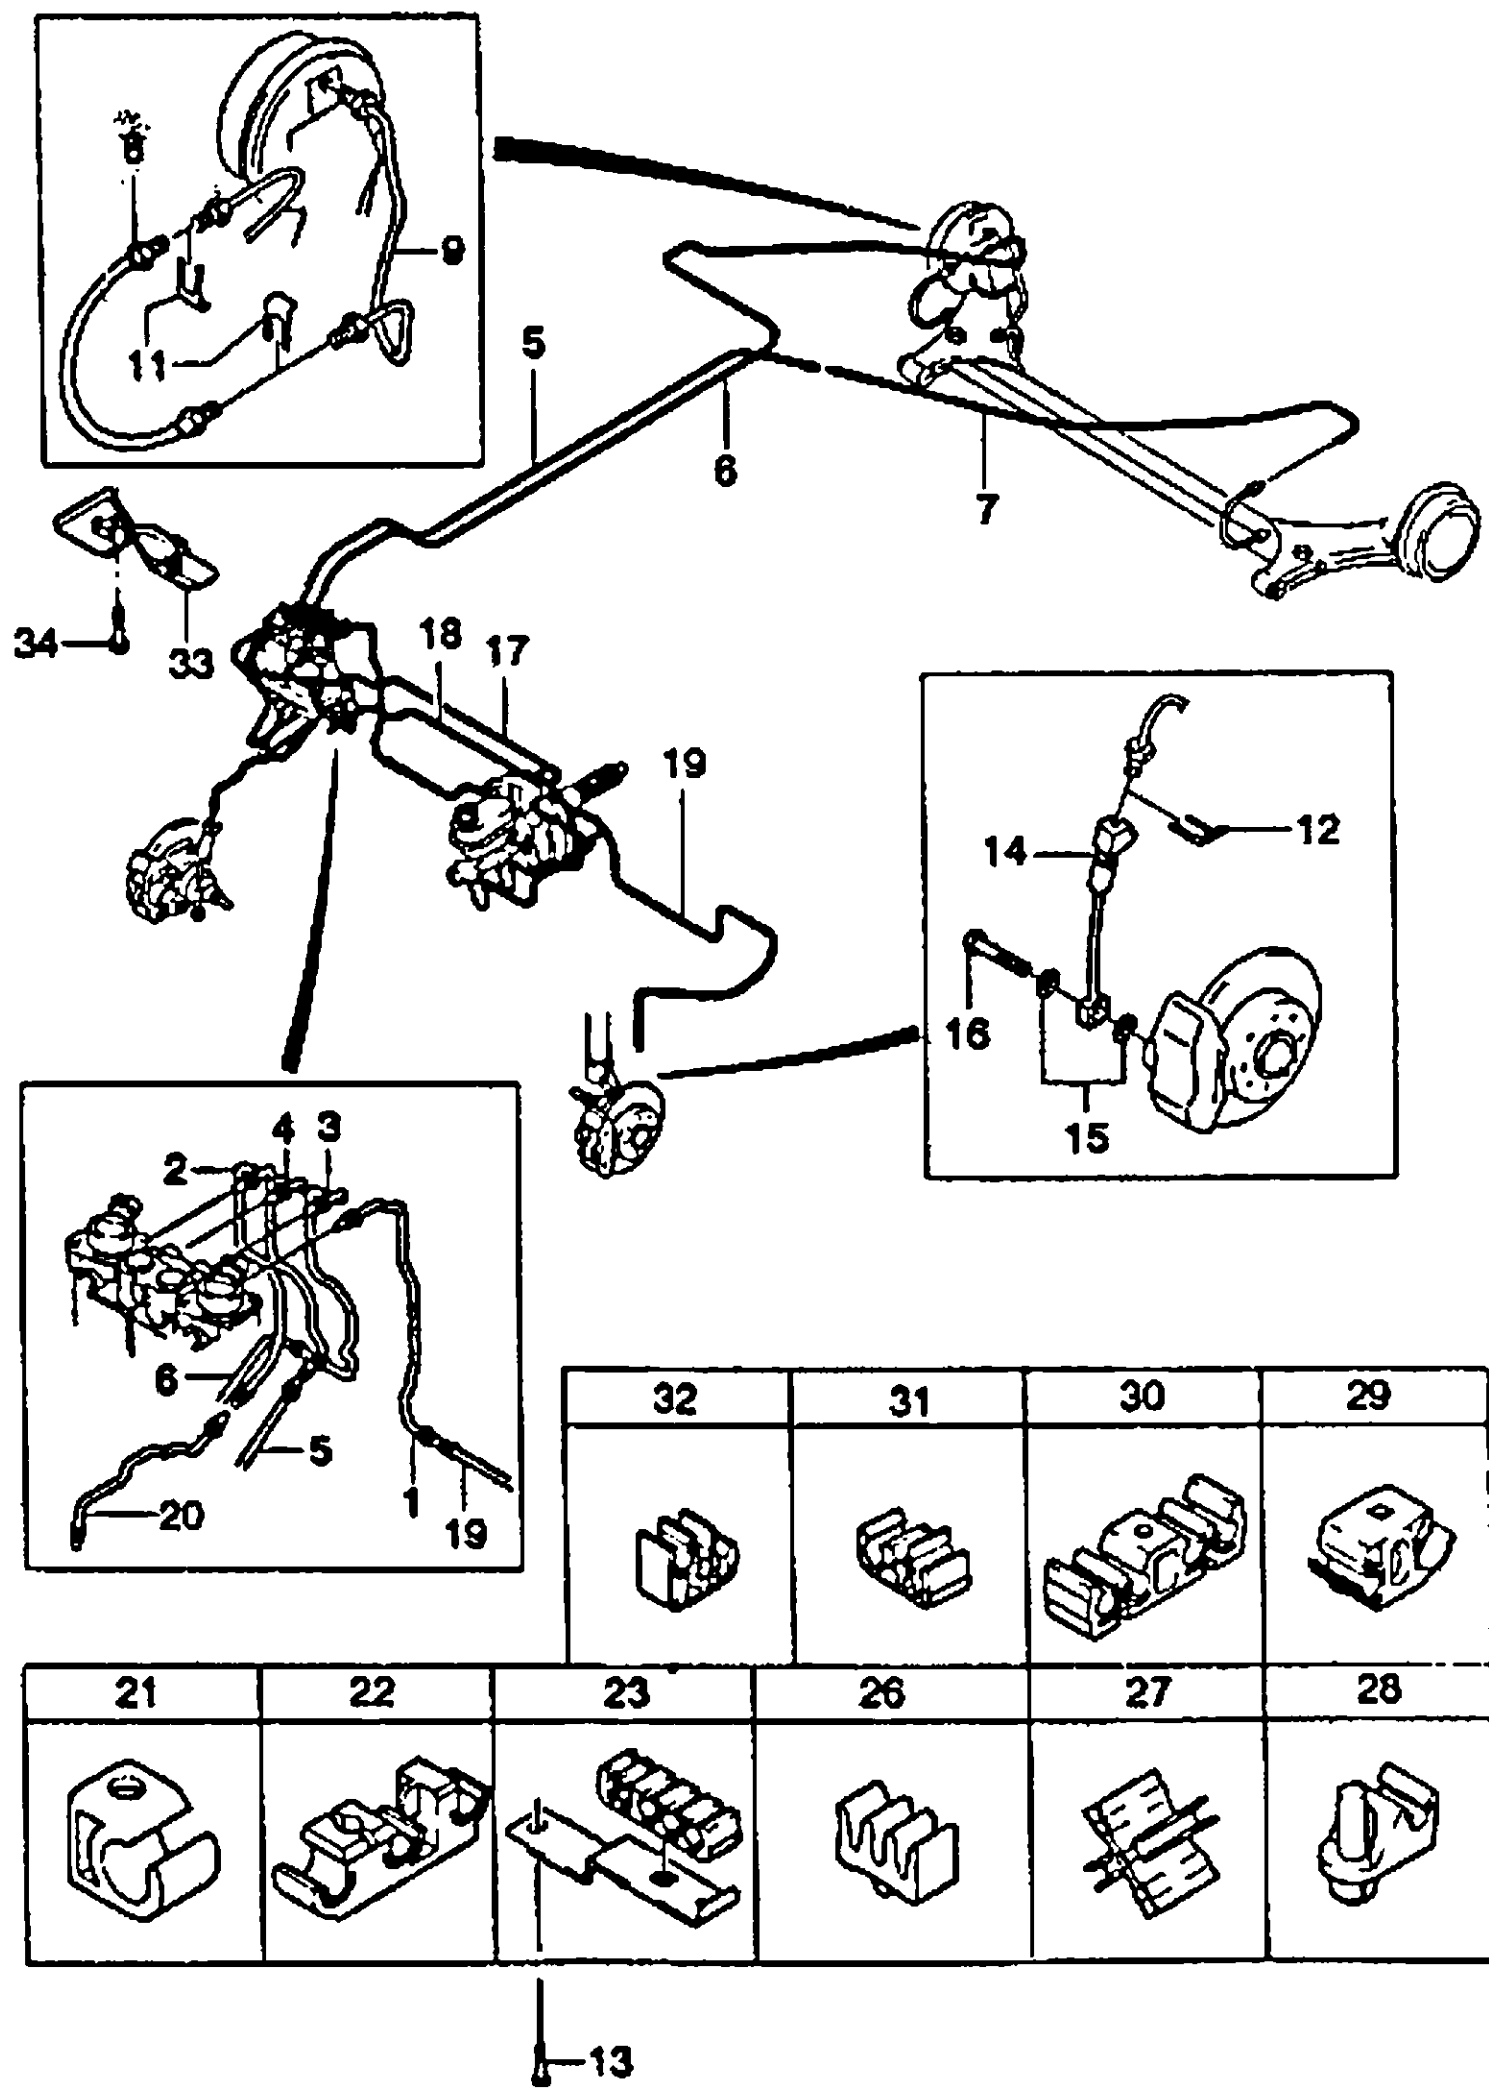


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E T N / G	A	BODY			LEVEL				FROM	TO			
				4 N H	3 H	5 H	S S								S S
	[01] 96304457	(E)PIPE A-BRAKE,FRONT,1ST (D)ROHR,BREMSE,VORDERE		B	B	B		O	O	&JL9		(F)TUYAU-FREIN,AVANT (S)TUBERIA-FRENO,DELANTERO LH 1			
	[02] 96304458	(E)PIPE A-BRAKE,FRONT,1ST (D)ROHR,BREMSE,VORDERE		B	B	B		O	O	&JL9		(F)TUYAU-FREIN,AVANT (S)TUBERIA-FRENO,DELANTERO RH 1			
	[03] 96304459	(E)PIPE A-BRAKE, REAR,1ST (D)ROHR,BREMSE,HINTERE		B	B	B		O	O	&JL9		(F)TUYAU-FREIN,ARRIERE (S)TUBERIA-FRENO,TRASERO LH 1			
	[04] 96304460	(E)PIPE A-BRAKE, REAR,1ST (D)ROHR,BREMSE,HINTERE		B	B	B		O	O	&JL9		(F)TUYAU-FREIN,ARRIERE (S)TUBERIA-FRENO,TRASERO RH 1	970609		
N	96256677	(E)PIPE A-BRAKE, REAR,2ND (D)ROHR,BREMSE,HINTERE		B	B	B		O	O	&JL9		(F)TUYAU-FREIN,ARRIERE (S)TUBERIA-FRENO,TRASERO RH 1	970609		
	[05] 96304479	(E)PIPE A-BRAKE, REAR,2ND (D)ROHR,BREMSE,HINTERE		B	B	B		O	O	&JL9		(F)TUYAU-FREIN,ARRIERE (S)TUBERIA-FRENO,TRASERO LH 1		NU	
	[06] 96306168	(E)PIPE A-BRAKE, REAR,2ND (D)ROHR,BREMSE,HINTERE		B	B	B		O	O	&JL9		(F)TUYAU-FREIN,ARRIERE (S)TUBERIA-FRENO,TRASERO RH 1	970609	NW	
N	96256676	(E)PIPE A-BRAKE, REAR,3RD (D)ROHR,BREMSE,HINTERE		B	B	B		O	O	&JL9		(F)TUYAU-FREIN,ARRIERE (S)TUBERIA-FRENO,TRASERO RH 1	970609		
	[07] 96237761	(E)HOSE A-BRAKE,REAR (D)SCHLAUCH,BREMSE,HINTEN		B	B	B		O	O	&JL9		(F)TUYAU-FREIN,ARRIERE (S)MANGUERA-FRENO,TRASERO LH 1		NV	
	[08] 96215570	(E)HOSE A-BRAKE,REAR (D)SCHLAUCH,BREMSE,HINTEN		B	B	B		O	O	&JL9		(F)TUYAU-FREIN,ARRIERE (S)MANGUERA-FRENO,TRASERO 2			
	[09]	(E)PIPE A-BRAKE,REAR (D)ROHR,BREMSE,HINTERE		B	B	B		O	O	&JL9		(F)TUYAU-FREIN,ARRIERE (S)TUBERIA-FRENO,TRASERO			
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

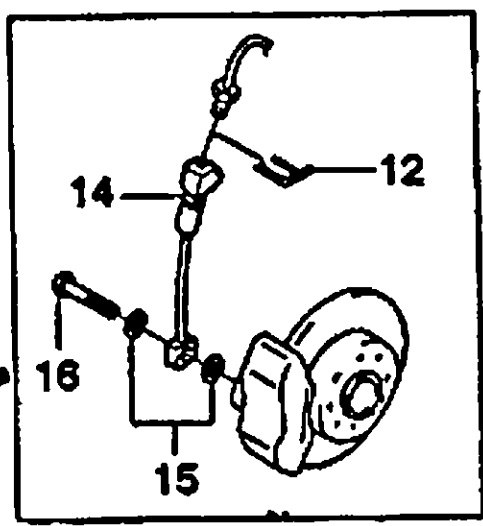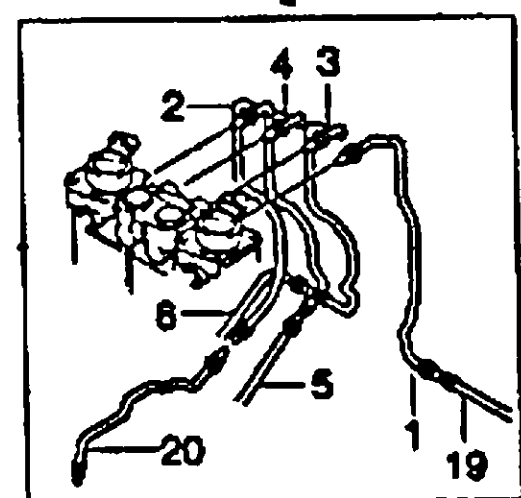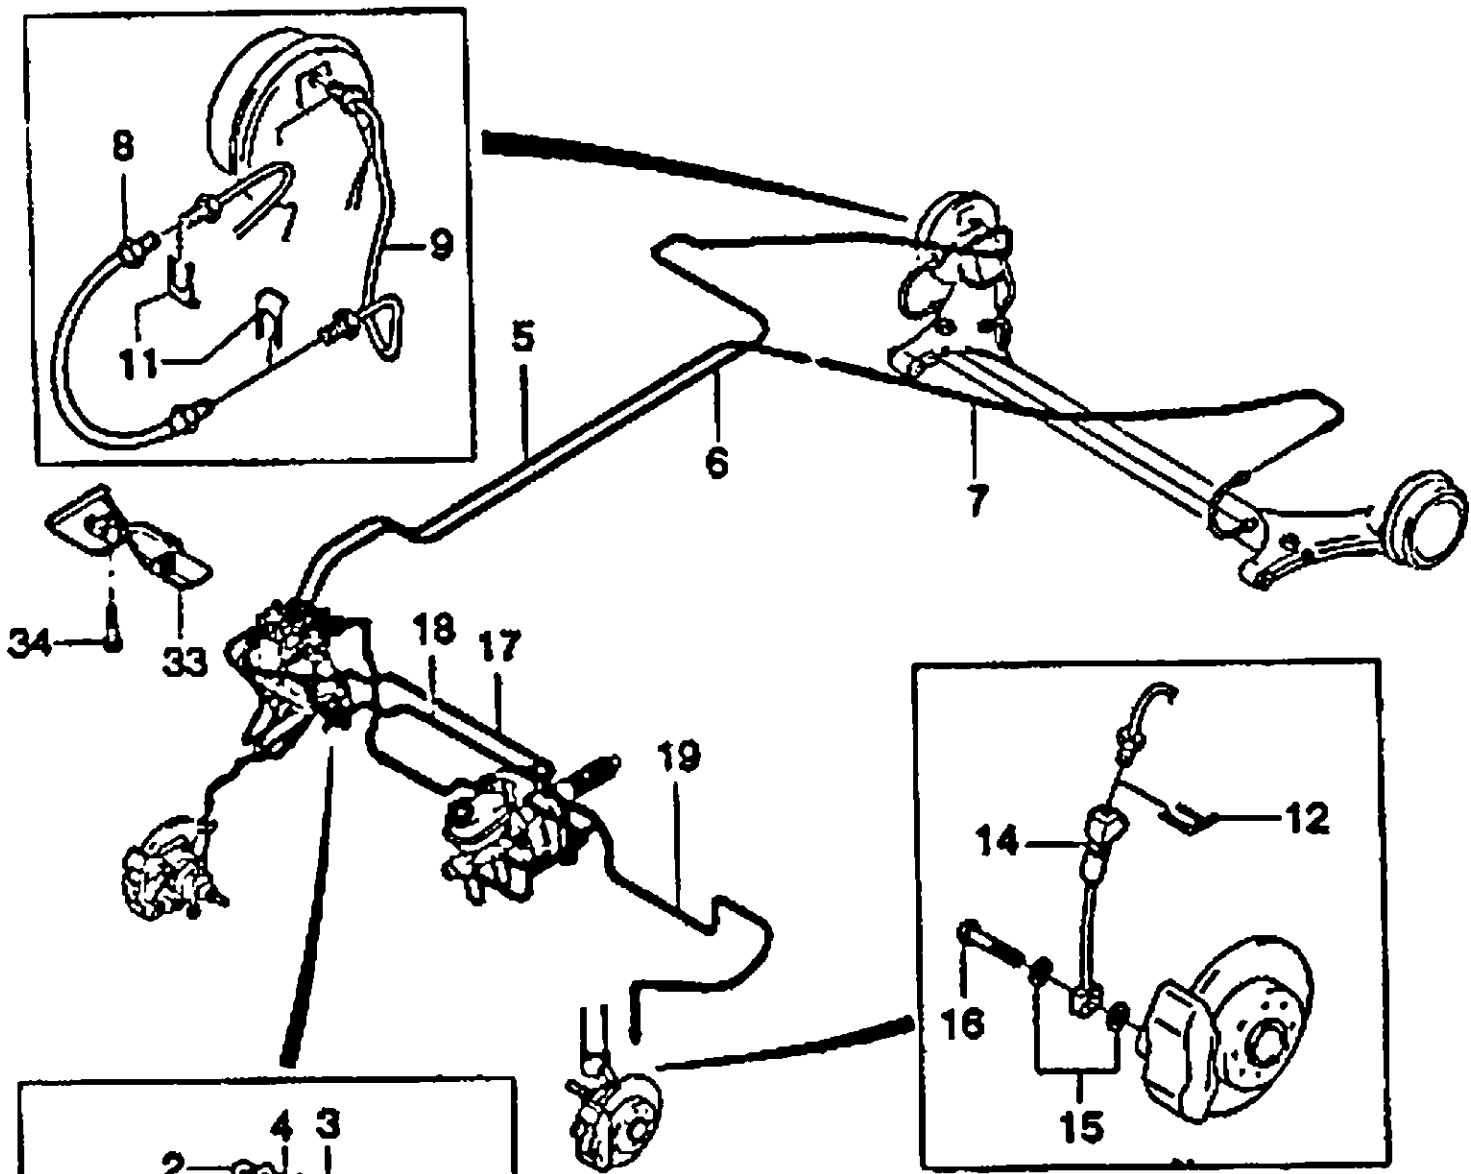




32		31		30		29	
21		22		23		28	
27		26		25		24	

13

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S E
	96306664	.	.	B	B	B	.	O	O	&JL9	LH	1			
	96306666	.	.	B	B	B	.	O	O	&JL9	RH	1			
	[11]	(E)		E	R	I	N	G			(F)	ANNEAU			
		(D)		R	I	N	G				(S)	ANILLO			
	09383-12003	.	.	B	B	B	.	O	O	&JL9		4			
	[12]	(E)		E	R	I	N	G			(F)	ANNEAU			
		(D)		R	I	N	G				(S)	ANILLO			
	09383-12003	.	.	B	B	B	.	O	O	&JL9		2			
	[13]	(E)		B	O	L	T	-	H	E	X	(F)	BOULON		
		(D)		S	C	H	R	A	U	B	E	(S)	PERNO		
	02714-06163	.	.	B	B	B	.	O	O	&JL9		3			
	[14]	(E)		H	O	S	E	-	A	-	B	R	A		
		(D)		S	C	H	L	A	U	C	H	-	B		
	96212323	.	.	B	B	B	.	O	O	&JL9		2			
	[15]	(E)		W	A	S	H	E	-	P	L	A	I		
		(D)		D	I	C	H	T	U	N	G	S	R		
	09160-10002	.	.	B	B	B	.	O	O	&JL9		4			
	[16]	(E)		B	O	L	T	-	U	N	I	O	N		
		(D)		S	C	H	R	A	U	B	E	(S)	PERNO		
	09360-10002	.	.	B	B	B	.	O	O	&JL9		2			
	[17]	(E)		P	I	P	E	-	A	-	B	R	A		
		(D)		R	O	H	R	-	B	R	E	M	S		
	96304462	.	.	B	B	B	.	O	O	&JL9		1			
	[18]	(E)		P	I	P	E	-	A	-	B	R	A		
		(D)		R	O	H	R	-	B	R	E	M	S		
	96304461	.	.	B	B	B	.	O	O	&JL9		1			
	[19]	(E)		P	I	P	E	-	A	-	B	R	A		
		(D)		R	O	H	R	-	B	R	E	M	S		
ENG(ENGINE)				T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC = COMMON				M = MANUAL T/A A = AUTOMATIC T/A = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

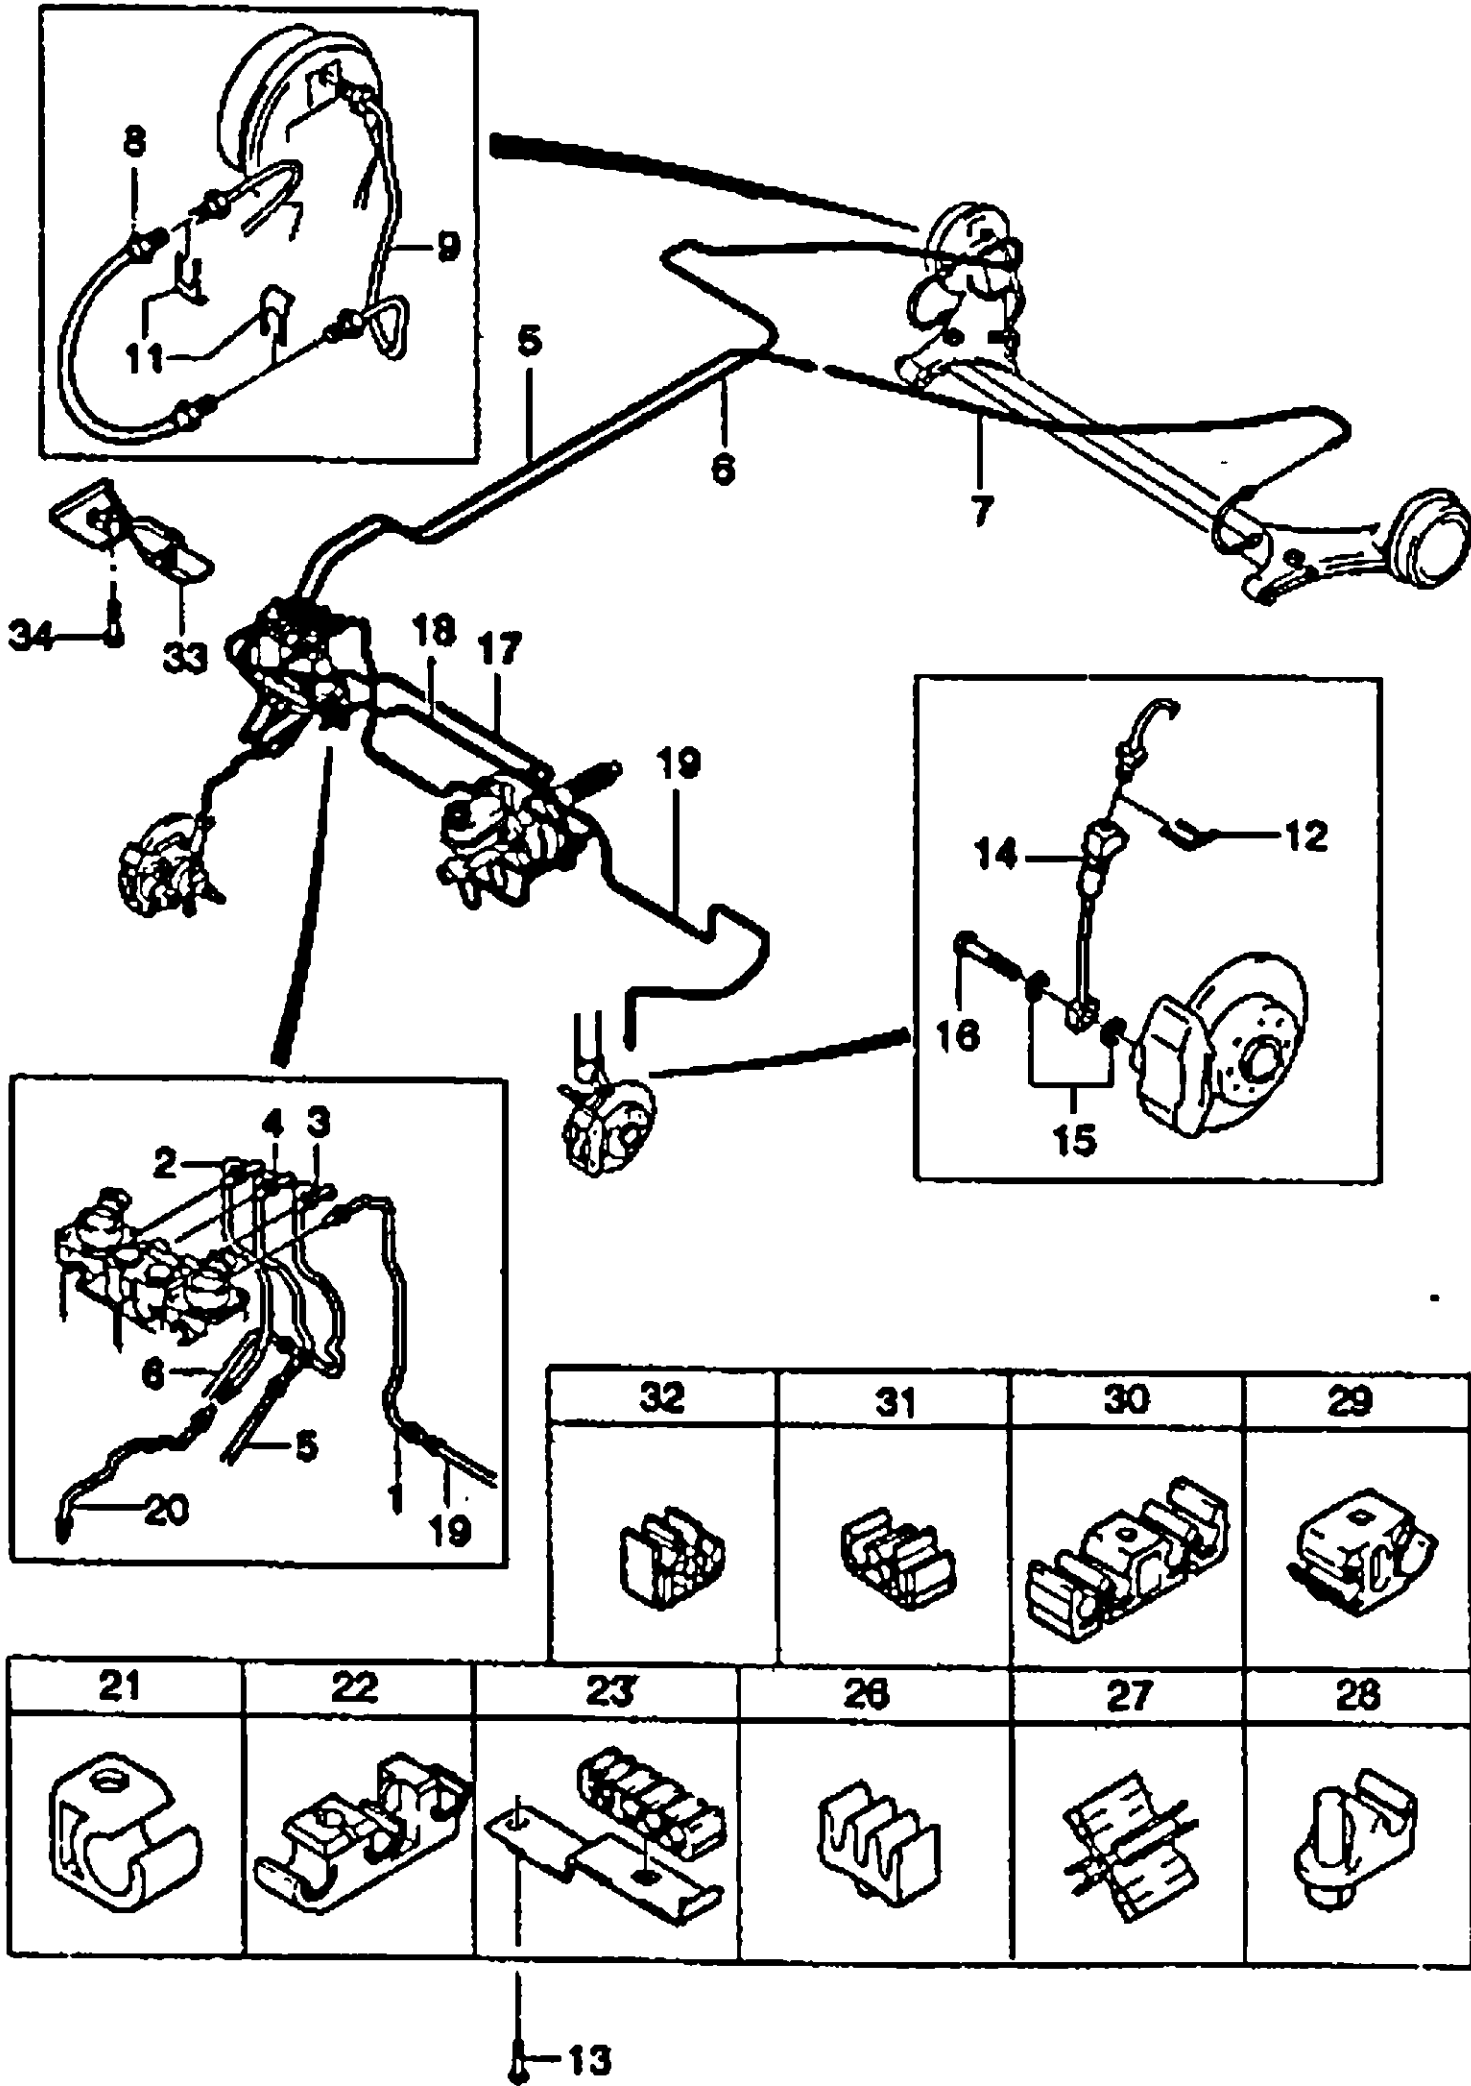


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S E	X
	96248675	.	.	B	B	B	.	O	O	&JL9	LH	1	(E)PIPE A-BRAKE,FRONT,2ND (D)ROHR,BREMSE,VORDERE	(F)TUYAU-FREIN,AVANT (S)TUBERIA-FRENO,DELANTERO		
	[20]															
	96304423	.	.	B	B	B	.	O	O	&JL9	RH	1	(E)CLIP (D)KLEMME	(F)ATTACHE (S)GRAPA		
	[21]															
	09408-00082	.	.	B	B	B	.	O	O	&JL9		3	(E)CLIP (D)KLEMME	(F)ATTACHE (S)GRAPA		
	[22]															
	09408-00006	.	.	B	B	B	.	O	O	&JL9		4	(E)CLIP A (D)KLEMME	(F)ATTACHE (S)GRAPA		
	[23]															
	96304429	.	.	B	B	B	.	O	O	&JL9		3	(E)CLIP (D)KLEMME	(F)ATTACHE (S)GRAPA		
	[26]															
	09408-00007	.	.	B	B	B	.	O	O	&JL9		2	(E)CLIP (D)KLEMME	(F)ATTACHE (S)GRAPA		
	[27]															
	09408-00008	.	.	B	B	B	.	O	O	&JL9		1	(E)CLIP (D)KLEMME	(F)ATTACHE (S)GRAPA		
	[28]															
	09408-00009	.	.	B	B	B	.	O	O	&JL9		1	(E)CLIP (D)KLEMME	(F)ATTACHE (S)GRAPA		
	[29]															
	09408-00004	.	.	B	B	B	.	O	O	&JL9		2	(E)CLIP (D)KLEMME	(F)ATTACHE (S)GRAPA		
	[30]															
	09408-00038	.	.	B	B	B	.	O	O	&JL9		1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

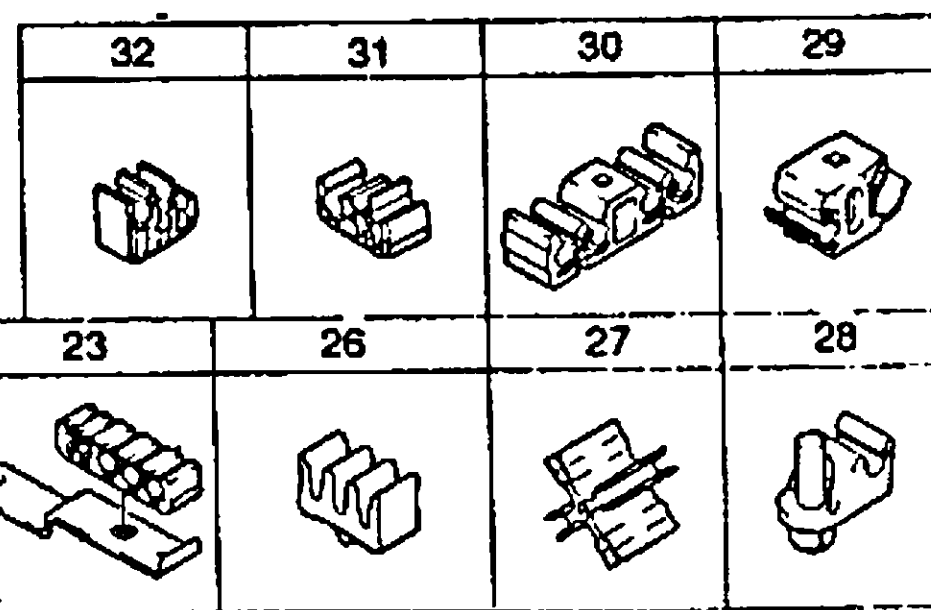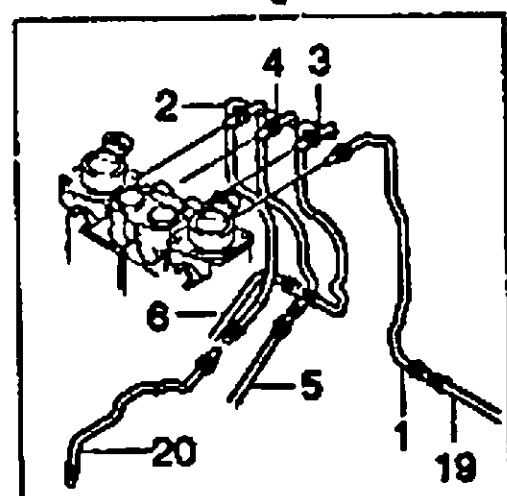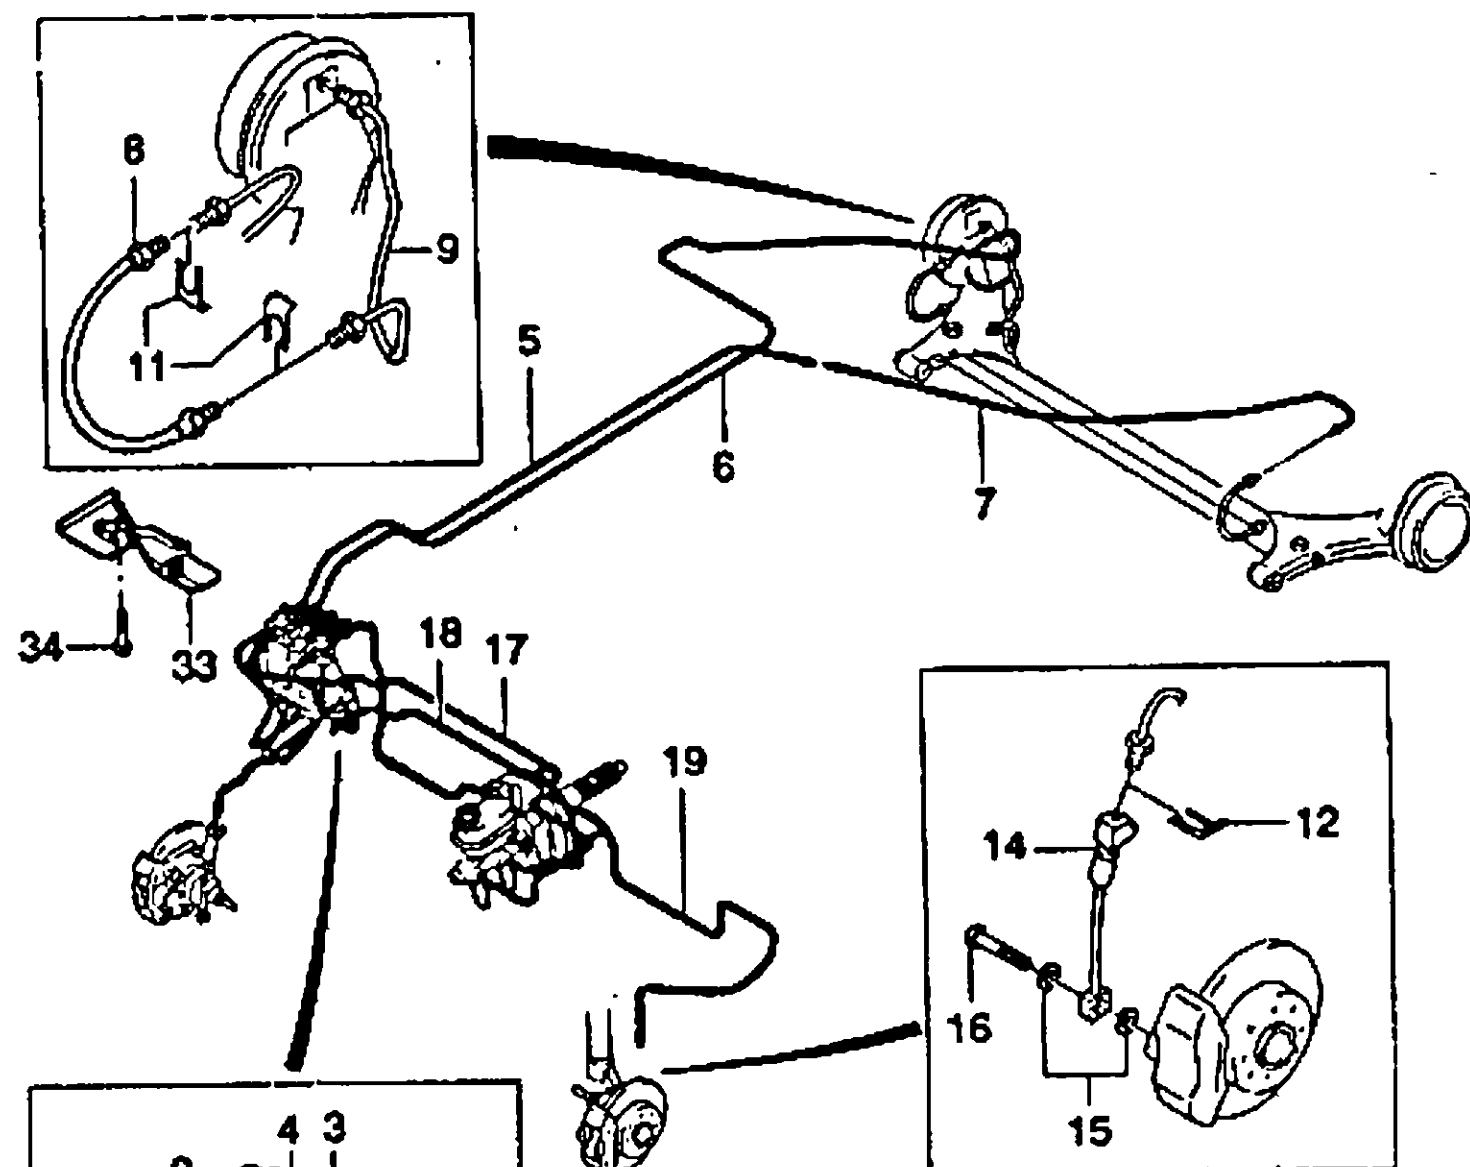


13


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[31]	(E)CLIP									(F)ATTACHE					
	09408-00079	(D)KLEMME			B	B	B		O	O	&JL9	1				
	[32]	(E)CLIP									(F)ATTACHE					
	09408-00080	(D)KLEMME			B	B	B		O	O	&JL9	1				
	[33]	(E)SHIELD A-BRAKE PROT									(F)BOUCLIER					
	96243676	(D)SCHILD			B	B	B		O	O	&JL9	1				
	[34]	(E)BOLT									(F)BOULON					
	09118-06010	(D)SCHRAUBE			B	B	B		O	O	&JL9	1				
	[A0]	(E)PIPE A-BRAKE,FUEL									(F)TUYAU-FREIN					
	96256674	(D)ROHR,BREMSE			B	B	B		O	O	&NN4&JL9-VB4&KL9	1				
	96218173				B	B	B		A	A	&NN4&VB4&JL9-KL9	1	970609	NT		
N	96256673				B	B	B		A	A	&NN4&VB4&JL9-KL9	1	970609			
	96218173				B	B	B		A	A	&NN6/NN7&JL9-KL9	1	970609	NT		
N	96256673				B	B	B		A	A	&NN6/NN7&JL9-KL9	1	970609			
	96252759													NOT APPLIED		
	96256675	6			B	B	B			A	&JL9&KL9	1				
		- CONSIST OF -														
		PIPE-FUEL FEEDING,CENTER												2120-03		
		PIPE-FUEL RETURN,CENTER												2120-04		
		PIPE-PURGE,CENTER												2130-09		
		PIPE A-BRAKE REAR,2ND(LH)												4651-05		
ENG(ENGINE)					T/A(TRANSAXLE)					BODY TYPE						
Y = 1.5SOHC					M = MANUAL T/A					4 N = 4 DOOR NOTCHBACK						
6 = 1.6DOHC					A = AUTOMATIC T/A					3 H = 3 DOOR HATCHBACK						
. = COMMON					. = COMMON					5 H = 5 DOOR HATCHBACK						

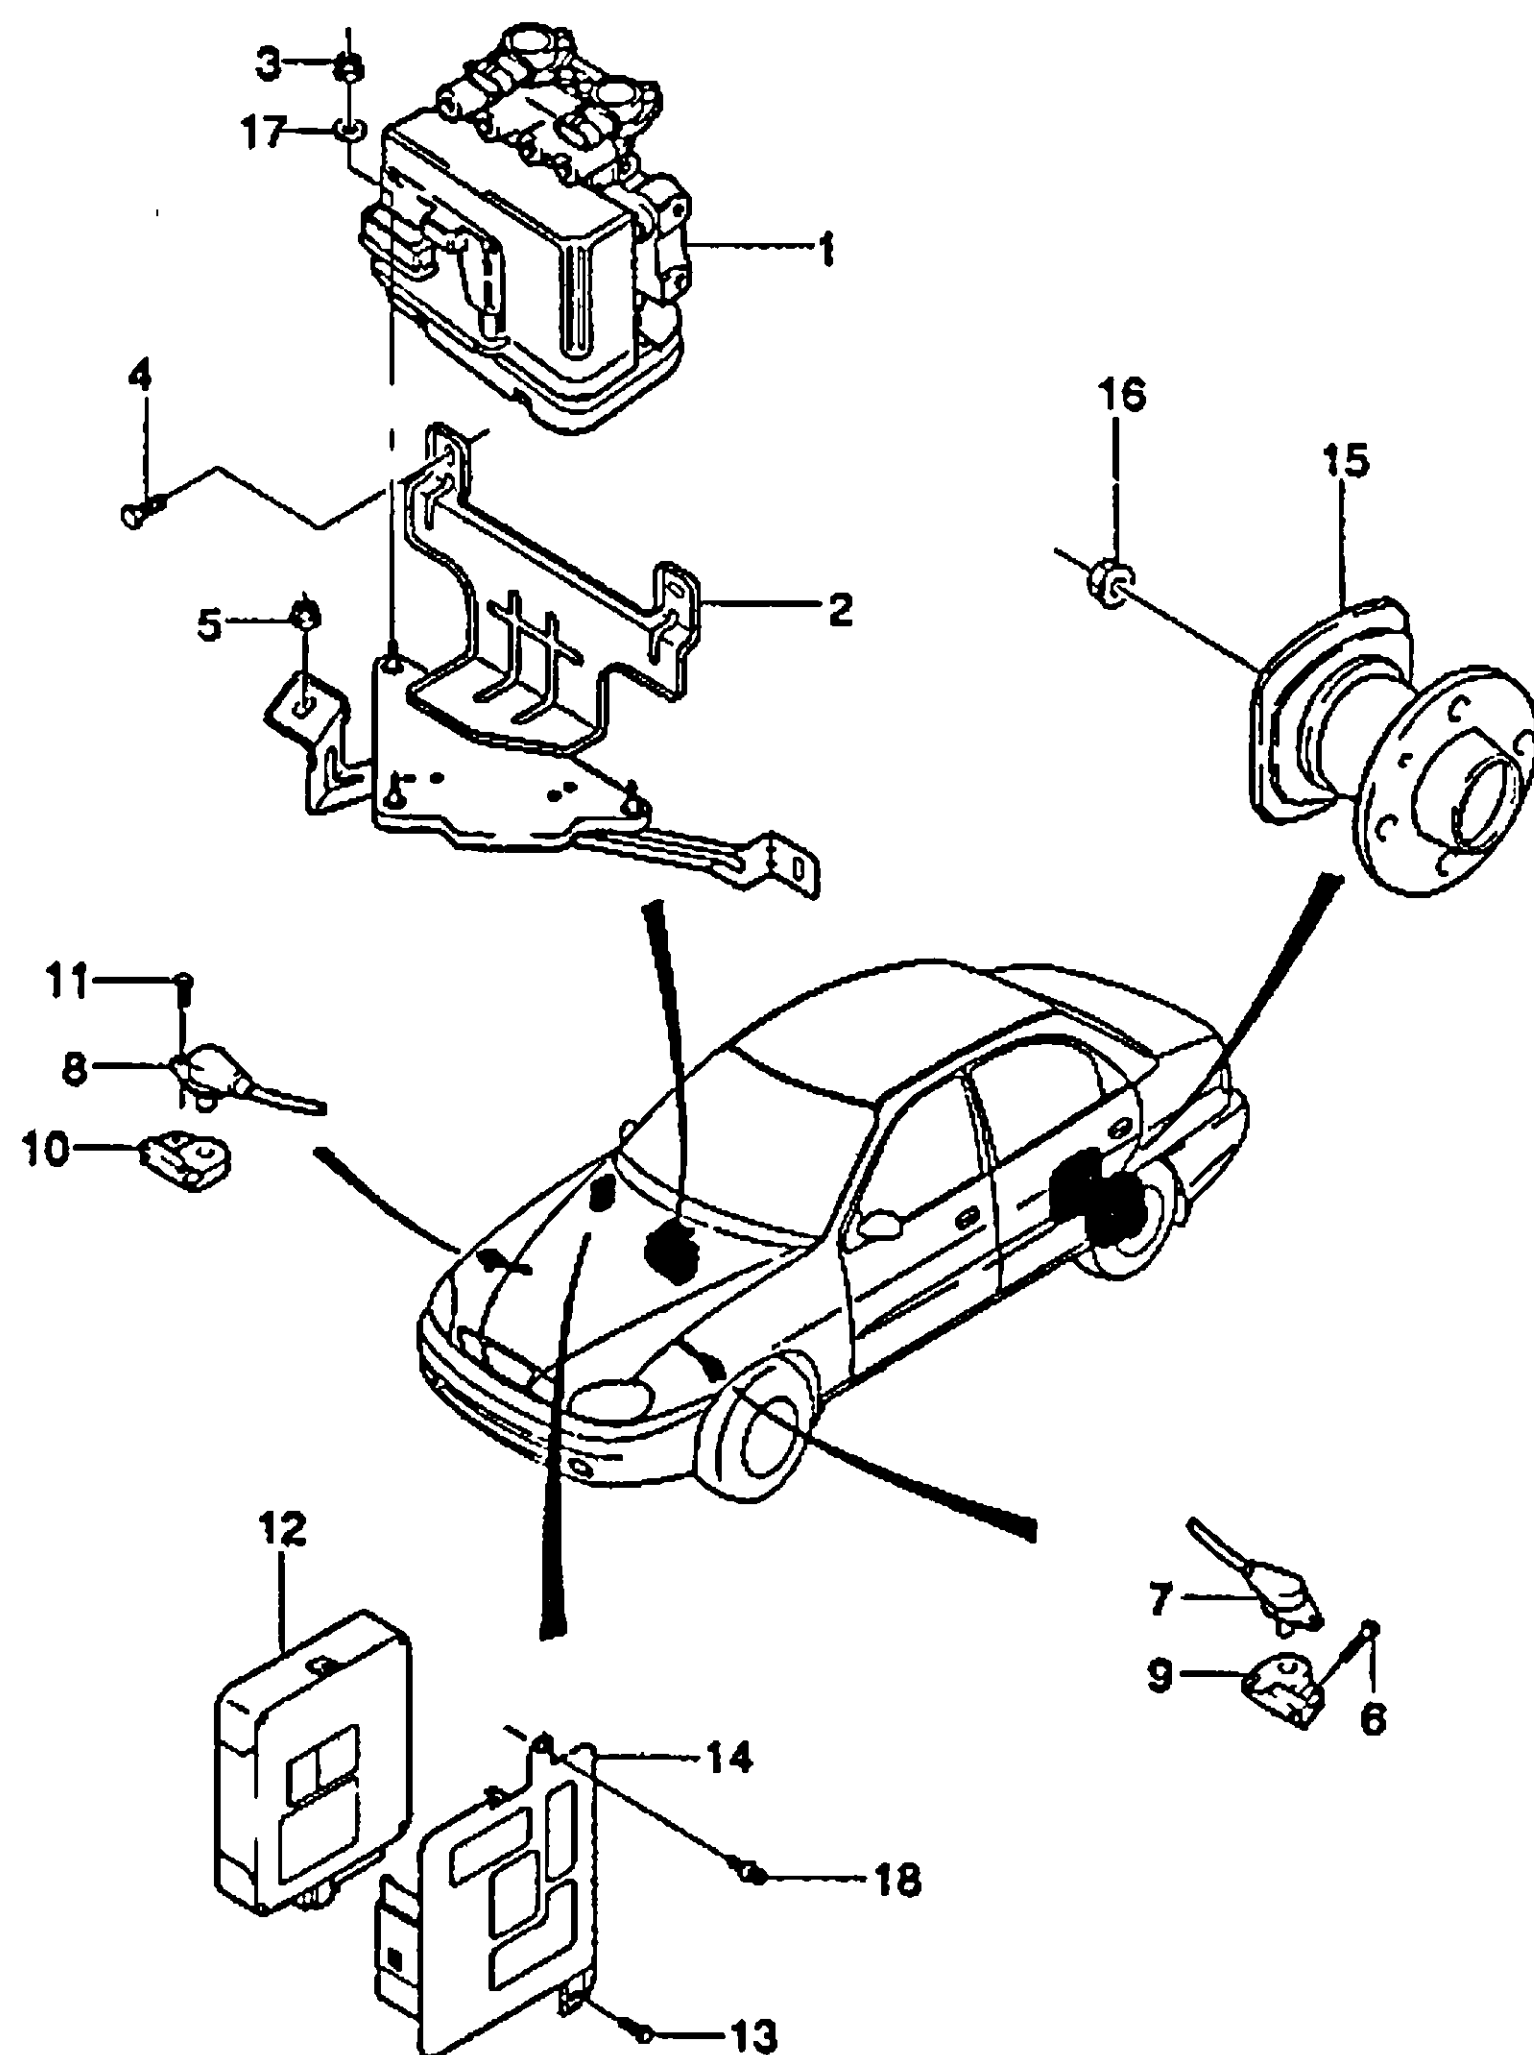

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S S				S S	S X		
											FROM	TO		
	[01]	(E)HYDRAULIC UNIT-BRAKE (D)HYDRAULIK EINHEIT,BREMSE								(F)UNITE HYDRAULIQUE-FREIN (S)UNIDAD HIDRAULICA-FRENO				
	96304464	Y . B B B . O O &JL9								1				MA
	96306147	6 . B B B . . O &JL9								1				MI
	[02]	(E)BRACKET A-HYDRAULIC UNIT (D)TRÄGER,STEUERUNGSEINHEIT								(F)SUPPORT-UNITE DE CONTROLE (S)SOPORTE-UNIDA DE CONTROL				
	96304465	. . B B B . O O &JL9								1				
	[03]	(E)NUT-HEXAGON FLANGE (D)MUTTER								(F)ECROU (S)TUERCA				
	08316-28063	. . B B B . O O &JL9								3				
	[04]	(E)BOLT-HEXAGON (D)SCHRAUBE								(F)BOULON (S)PERNO				
	01137-08165	. . B B B . O O &JL9								3				
	[05]	(E)NUT-HEXAGON FLANGE (D)MUTTER								(F)ECROU (S)TUERCA				
	08316-18083	. . B B B . O O &JL9								1				
	[06]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO				
	07130-06165	. . B B B . O O &JL9								2				
	[07]	(E)SENSOR-WHEEL SPEED (D)SENSOR,GESCHWINDIGKEIT								(F)DETECTEUR-VITESSE DE ROUE (S)SENSOR-VELOCIDAD DE RUEDA				
	10456154	. . B B B . O O &JL9								LH 1	970617			
	Y 10456266	. . B B B . O O &JL9								LH 1	970617			
	[08]	(E)SENSOR-WHEEL SPEED (D)SENSOR,GESCHWINDIGKEIT								(F)DETECTEUR-VITESSE DE ROUE (S)SENSOR-VELOCIDAD DE RUEDA				
	10456155	. . B B B . O O &JL9								RH 1	970617			
	Y 10456267	. . B B B . O O &JL9								RH 1	970617			
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

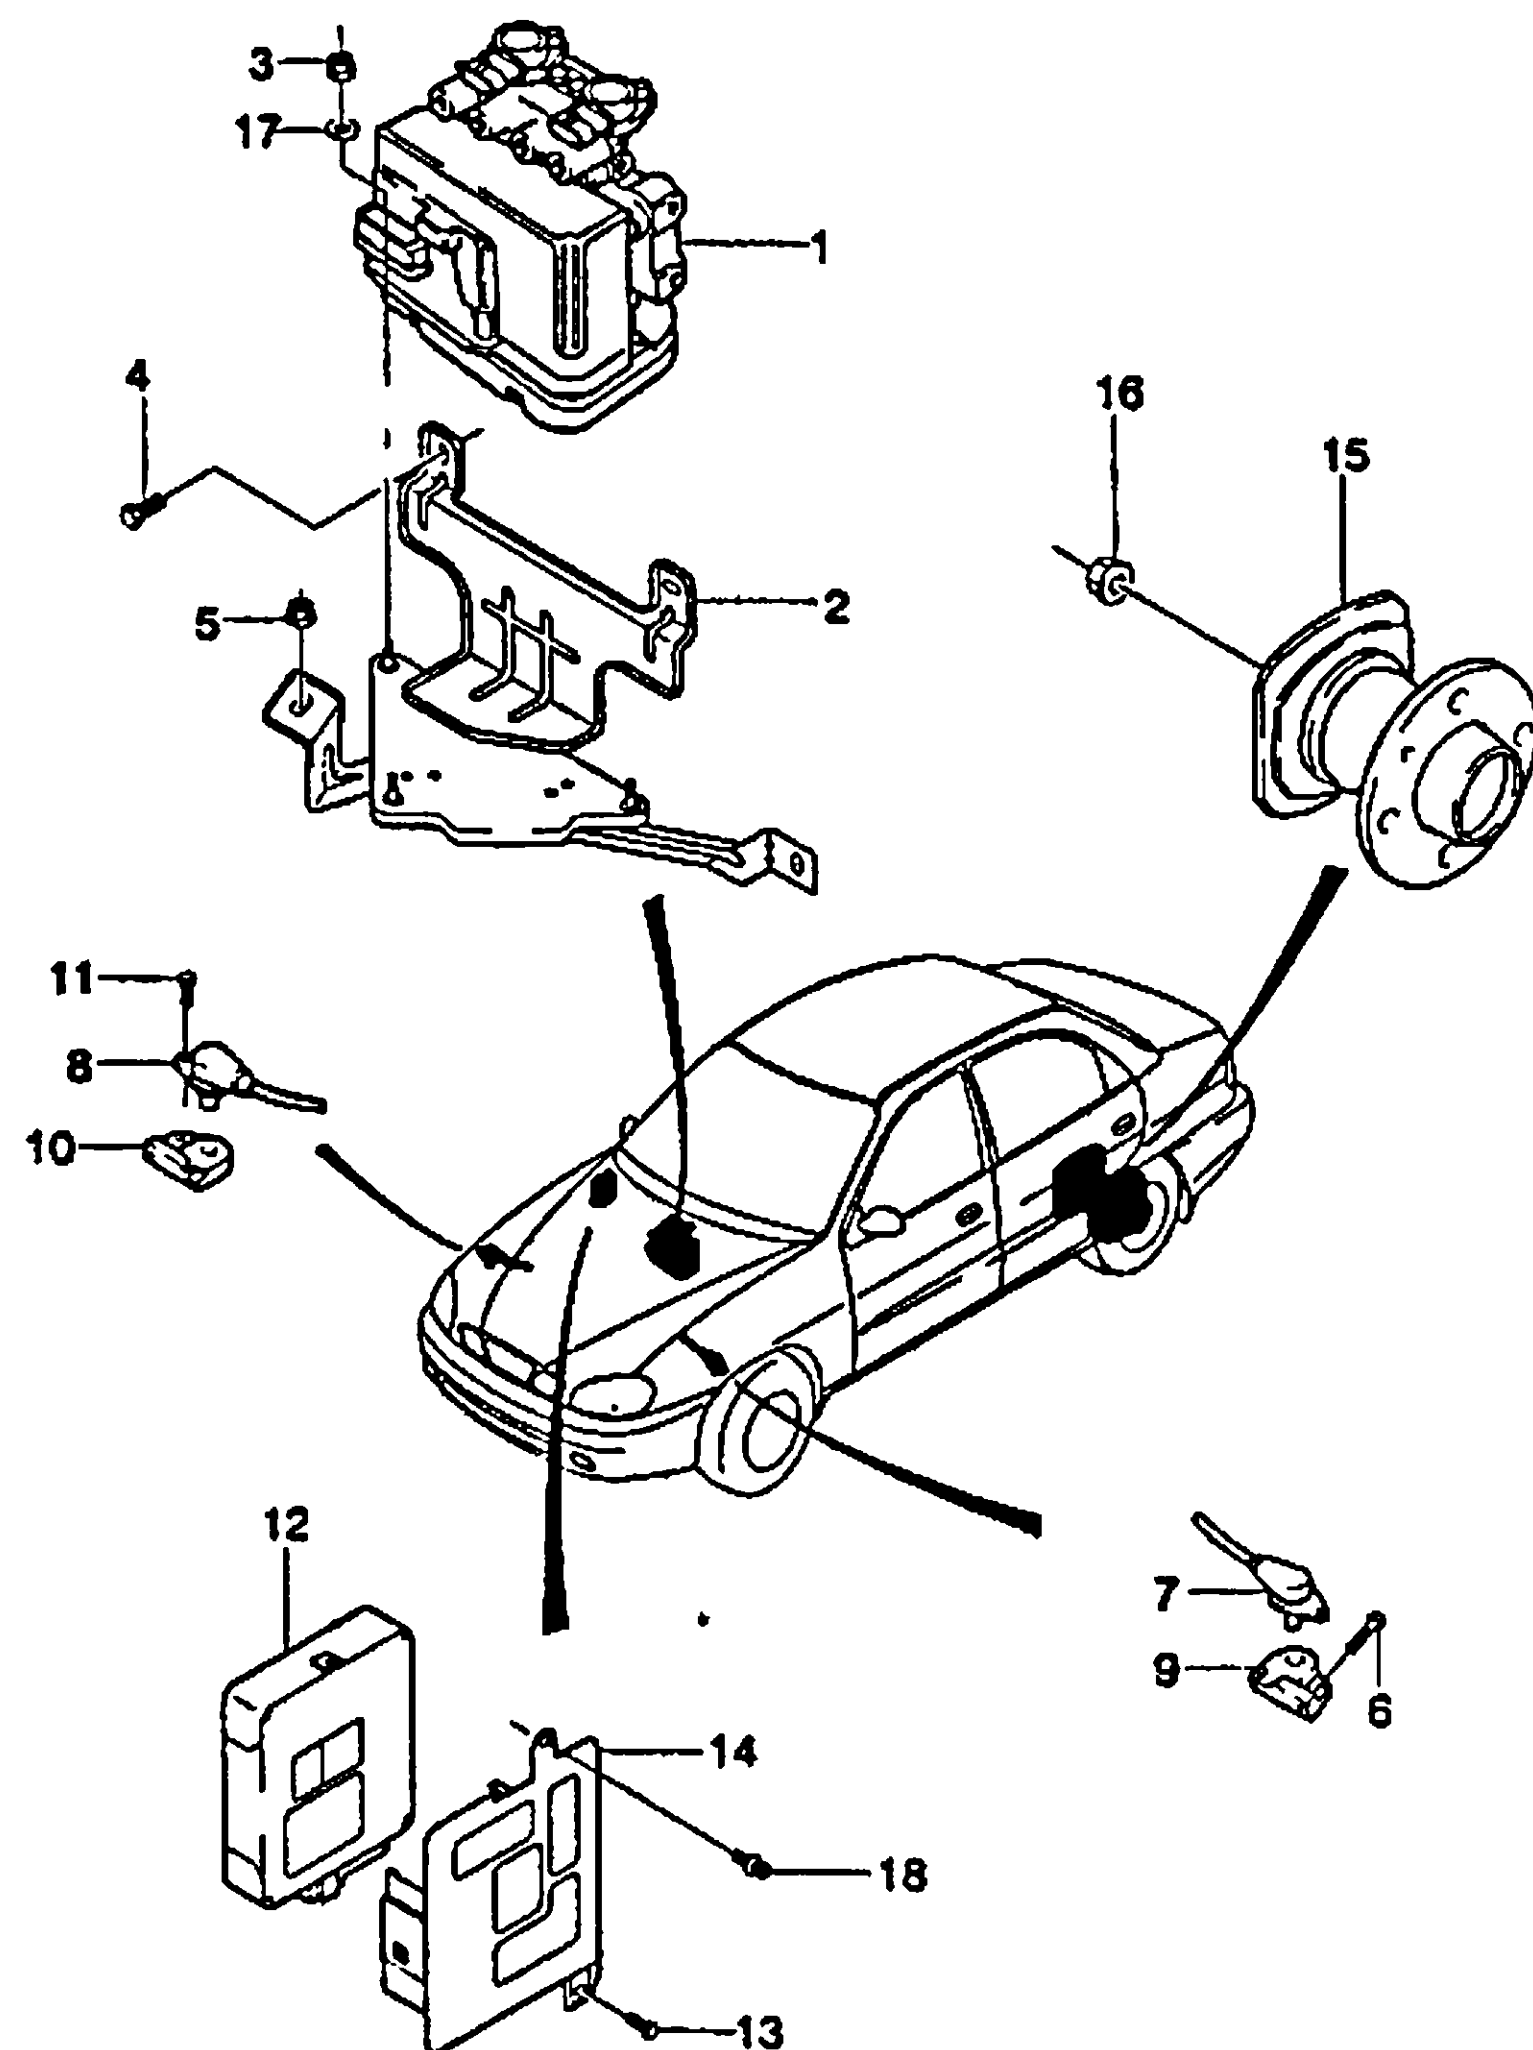


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N / G	T A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[09]	(E)BRACKET	A-SPEED SENSOR							(F)SUPPORT						
	96146791	(D)TRÄGER								(S)SOPORTE-SENSOR						
		. . . B B B . . .	OO &JL9							LH 1						
	[10]	(E)BRACKET	A-SPEED SENSOR							(F)SUPPORT						
	96146792	(D)TRÄGER								(S)SOPORTE-SENSOR						
		. . . B B B . . .	OO &JL9							RH 1						
	[11]	(E)BOLT								(F)BOULON						
	09106-06006	(D)SCHRAUBE								(S)PERNO						
		. . . B B B . . .	OO &JL9							2						
	[12]	(E)CONTROL UNIT-ABS								(F)UNITE DE CONTROLE ABS						
	96306176	(D)STEUERUNGS-EINHEIT,ABS								(S)UNIDAD DE CONTROL-ABS						
		. . . B B B . . .	OO &JL9							1				TB		
	[13]	(E)SCREW-TAPPING								(F)VIS						
	03160-48195	(D)SCHRAUBE								(S)TORNILLO						
		. . . B B B . . .	OO &JL9							3						
	[14]	(E)BRACKET-CONTROL UNIT								(F)SUPPORT-UNITE DE CONTROLE						
	96306212	(D)TRÄGER,STEUERUNGSEINHEIT								(S)SOPORTE-UNIDA DE CONTROL						
		. . . B B B . . .	OO &JL9							1	970521					
	N 96250304	. . . B B B . . .	OO &JL9							1	970521					
	[15]	(E)BEARING A-WHEEL								(F)ROULEMENT-ROUE						
	07466975	(D)KUGELLAGER,RAD								(S)COJINETE-RUEDA						
		. . . B B B . . .	OO &JL9							2						
	[16]	(E)NUT								(F)ECROU						
	09159-10010	(D)MUTTER								(S)TUERCA						
		. . . B B B . . .	OO &JL9							8						
	[17]	(E)WASHER-PLAIN								(F)RONDELLE						
	09160-06002	(D)DICHTUNGSRING								(S)ARANDELA						
		. . . B B B . . .	OO &JL9							2						
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC B = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

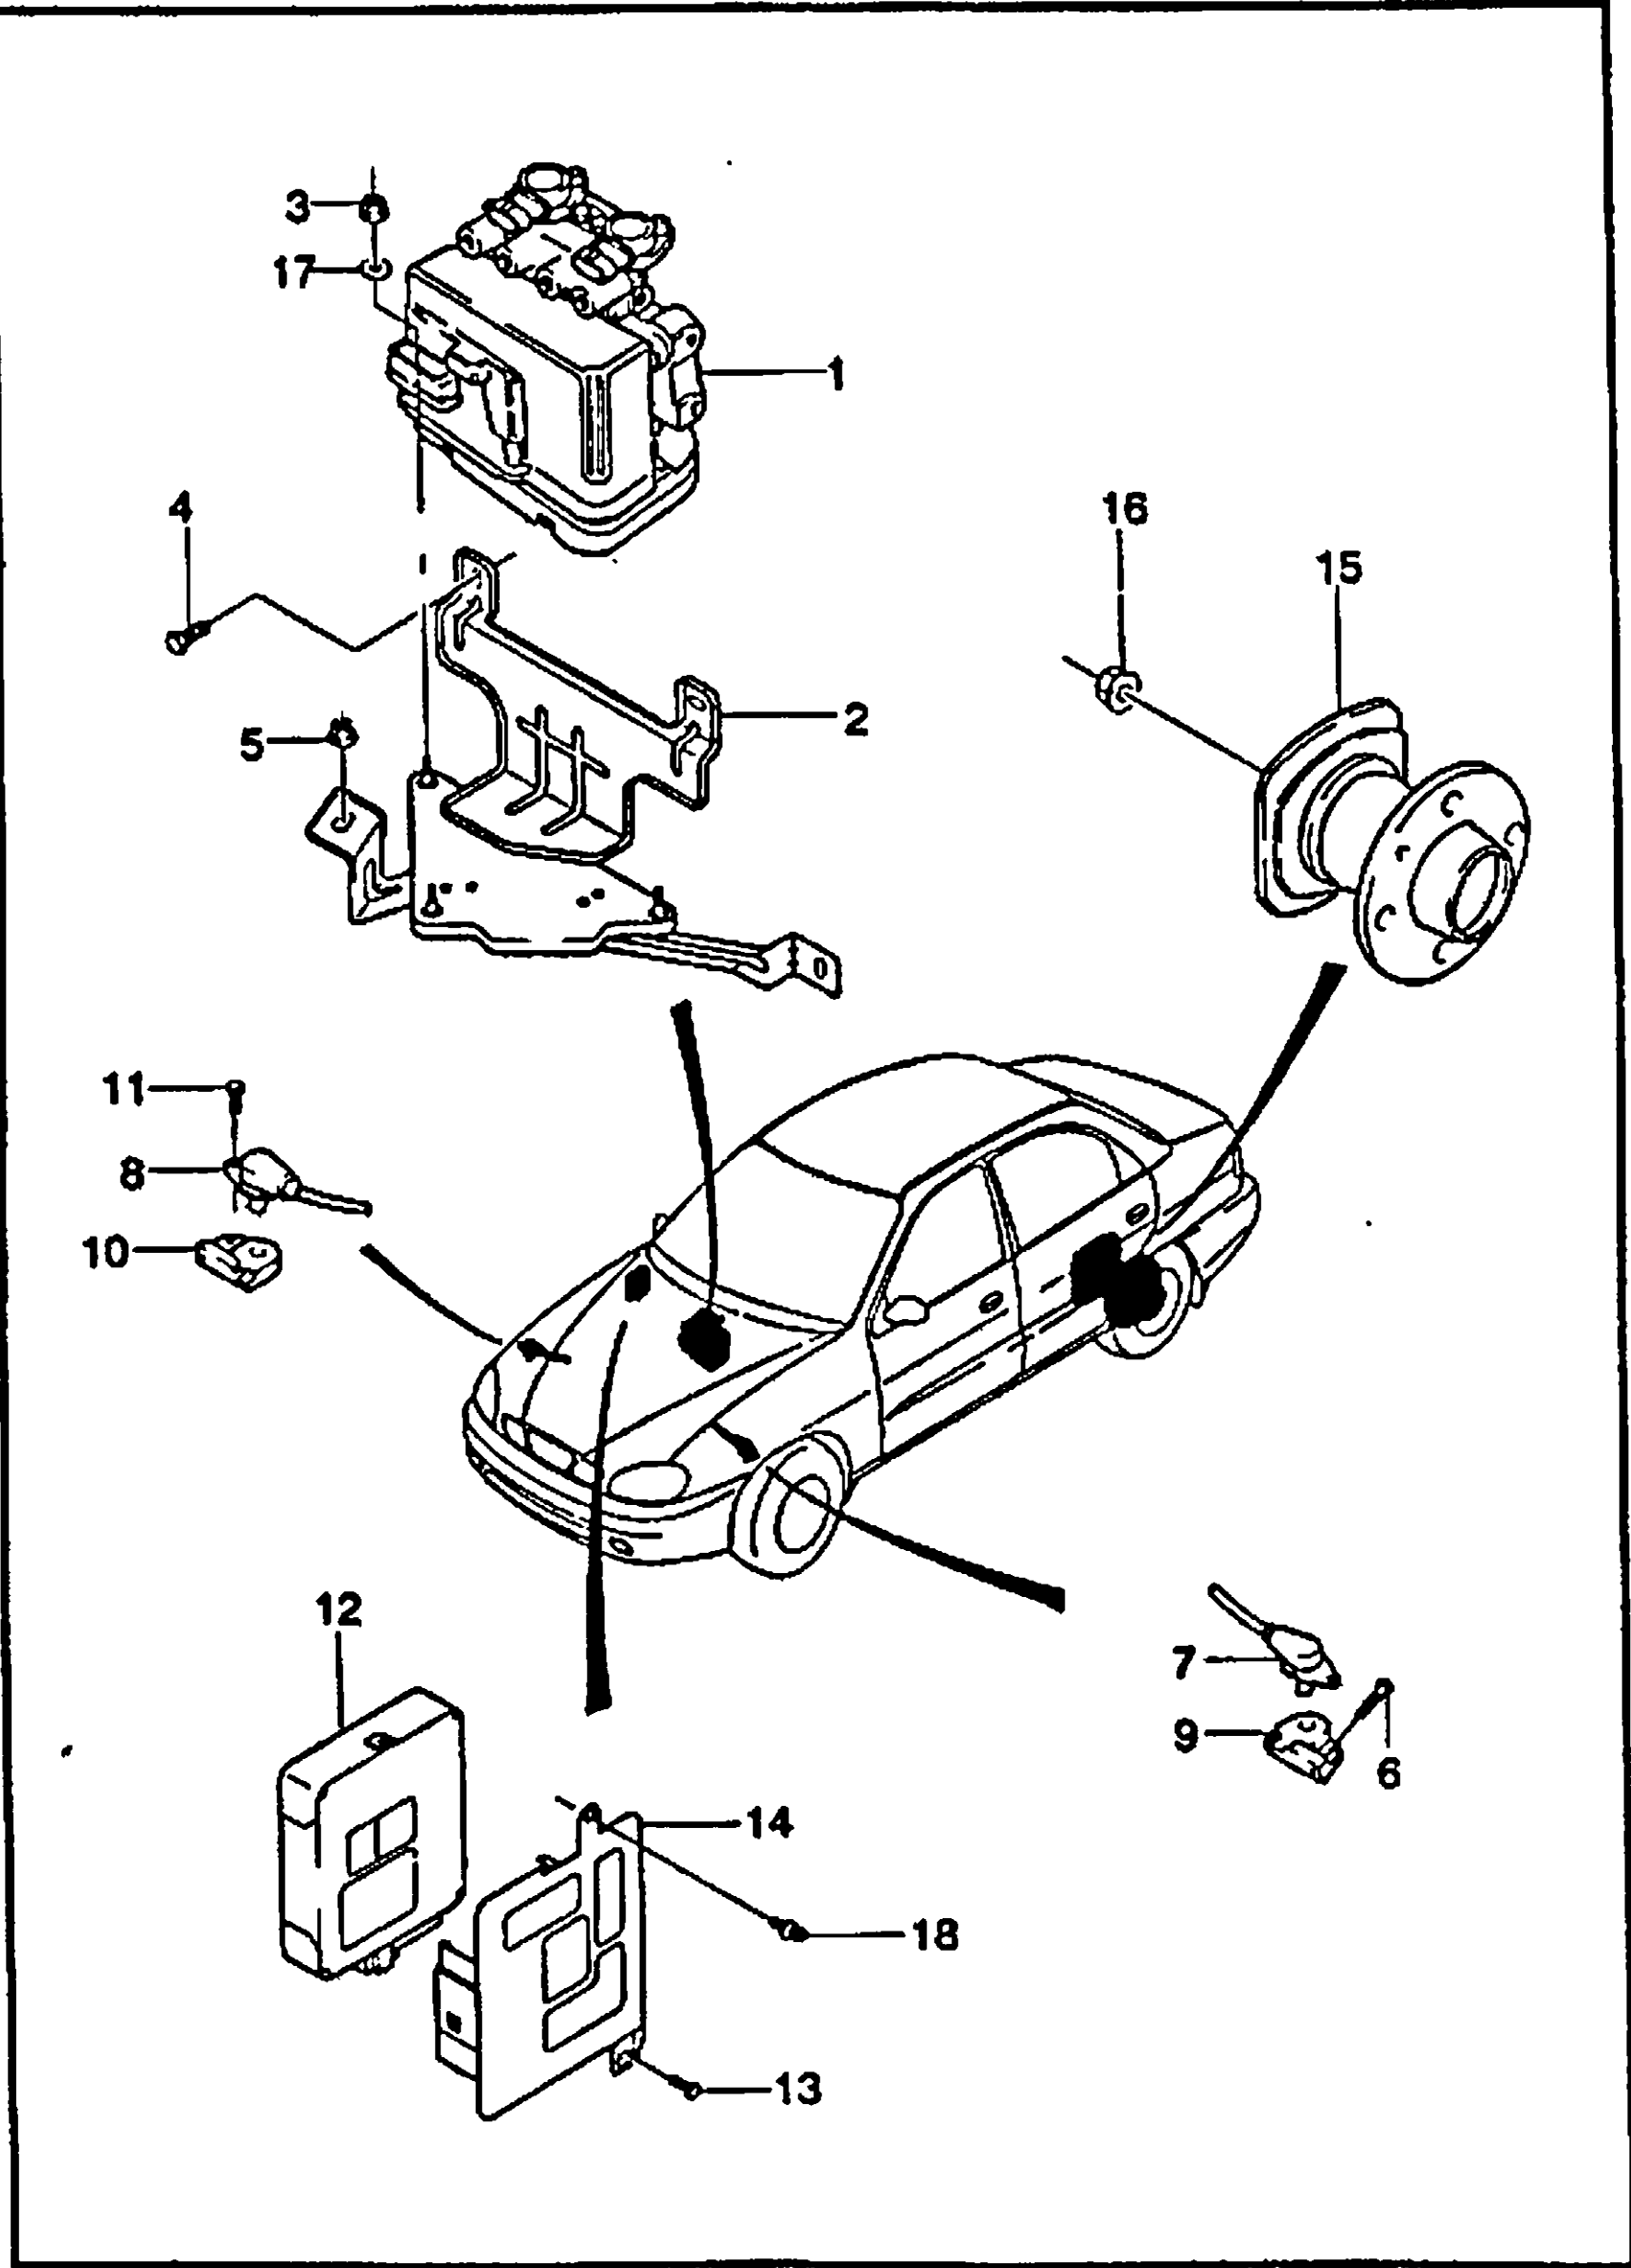


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S E
	[18] 09409-06327	(E)CLIP (D)KLEMME . .		B	B	B	.	O	O	&JL9	(F)ATTACHE (S)GRAPA 1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

4720 HYDRAULIC MODULATOR


4M13

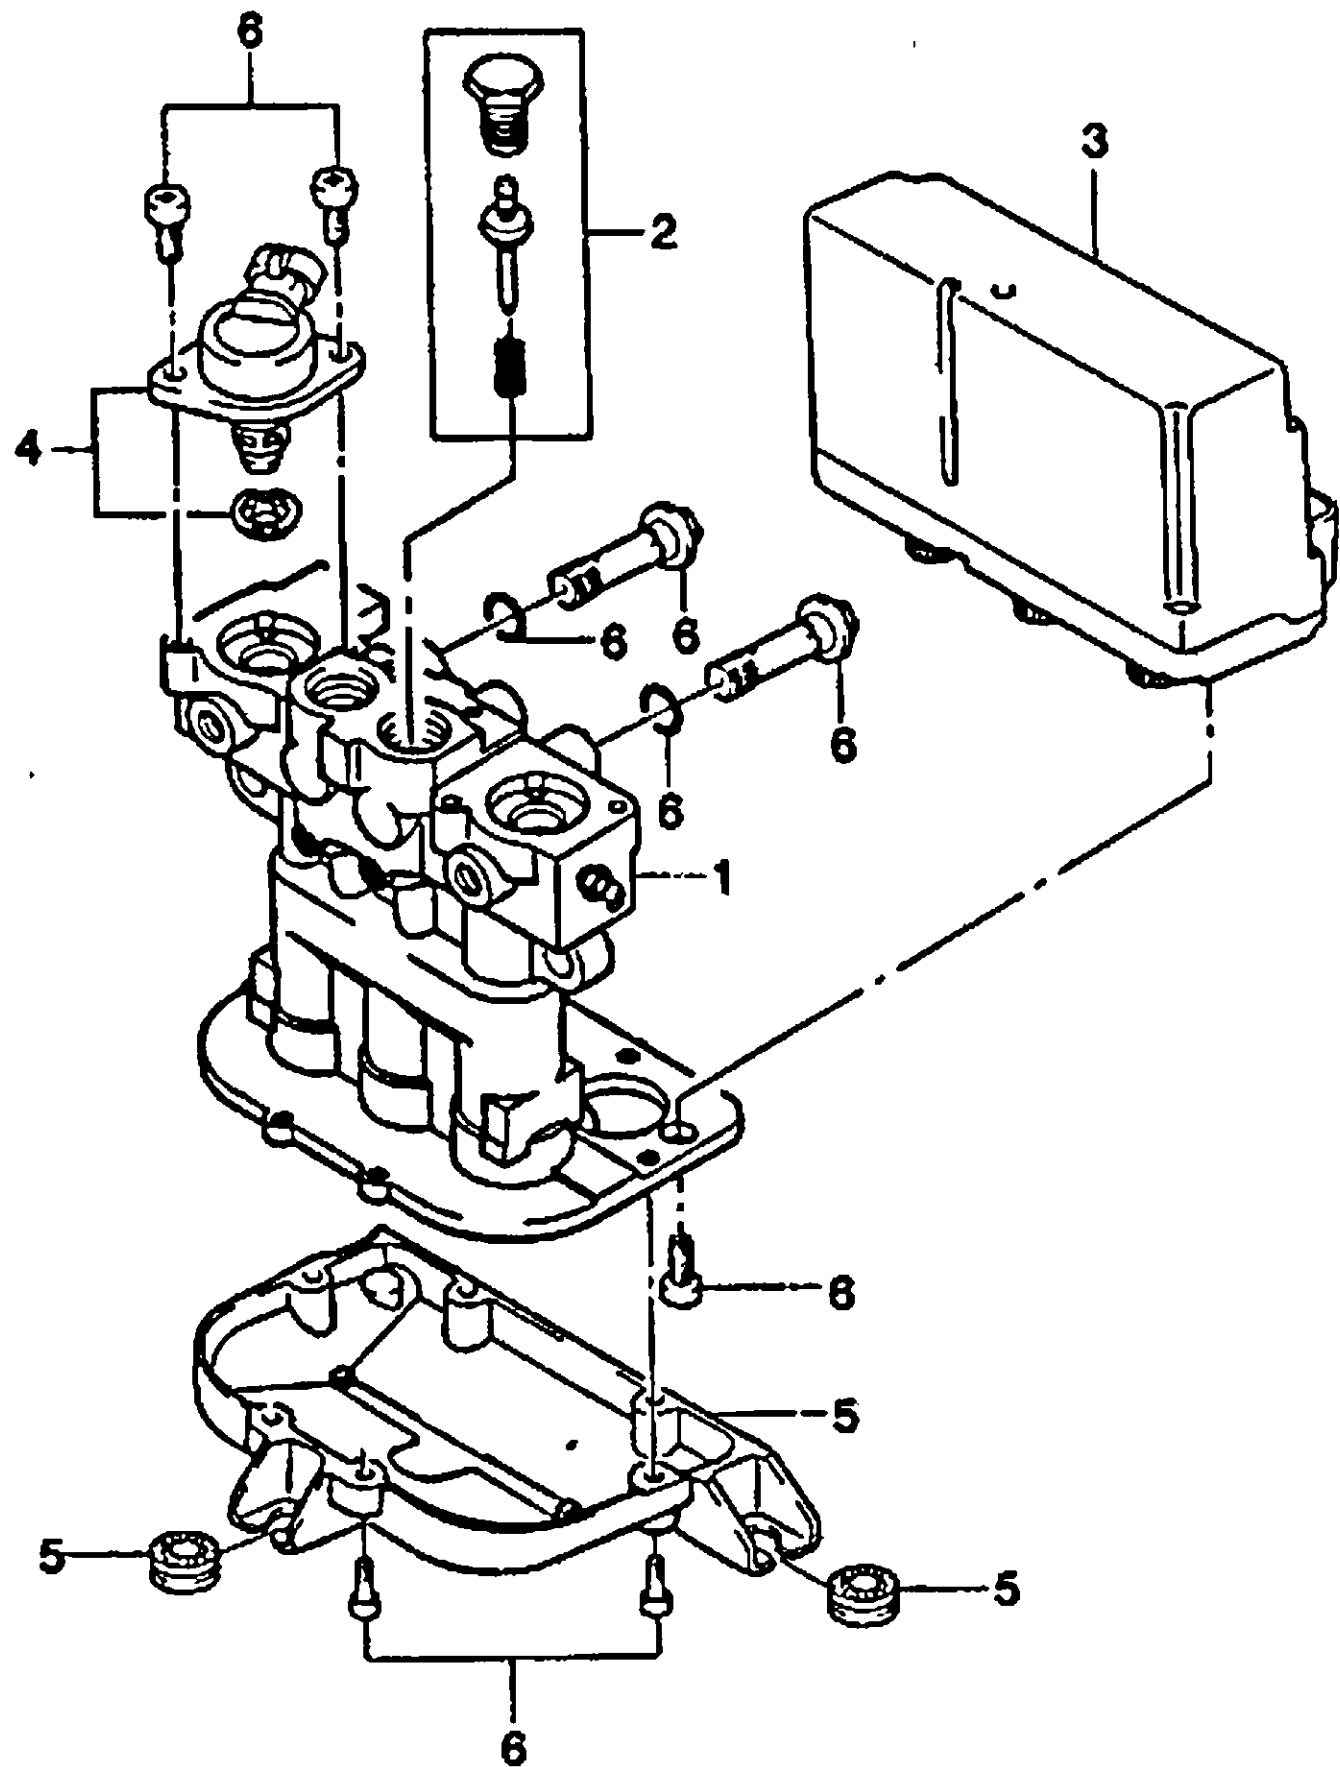


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[01]	(E)MODULATOR A-ABS (D)MODULATOR,ABS									(F)MODULATEUR-ABS (S)MODULADOR-ABS					
	18025579	Y	.	B	B	B	.	O	O	&JL9	1					
	18024772	6	.	B	B	B	.	.	O	&JL9	1					
	[02]	(E)VALVE A-PROPORTIONER (D)VENTIL,PROPORTIONS									(F)SOUPAPE-PROPORTION (S)VALVULA-PROPORCIONAL					
	18029786	.	.	B	B	B	.	O	O	&JL9	1					
		-CONSIST OF-														
		PISTON(1)														
		SEAL(1)														
		CAP A(1)														
	[03]	(E)PACK A-MOTOR (D)PACKET,MOTOR									(F)PAQUET-MOTEUR (S)PAQUETE-MOTOR					
	18029785	.	.	B	B	B	.	O	O	&JL9	1					
	[04]	(E)SOLENOID (D)SOLENOID									(F)SOLENOIDE (S)SELENOIDE					
	18029783	.	.	B	B	B	.	O	O	&JL9	1					
	[05]	(E)COVER-GEAR (D)DECKEL									(F)CARTER (S)CUBIERTA					
	18029891	.	.	B	B	B	.	O	O	&JL9	1					
	[06]	(E)HARDWARE KIT (D)METALLWAREN-SATZ									(F)TROUSSE FERRURES (S)JUEGO DE FERRETERIA					
	18029784	.	.	B	B	B	.	O	O	&JL9	1					
		-CONSIST OF-														
		SCREW M6X1 0(3)														
		SCREW M4X0.7(6)														
		SCREW M6X1 0(6)														
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

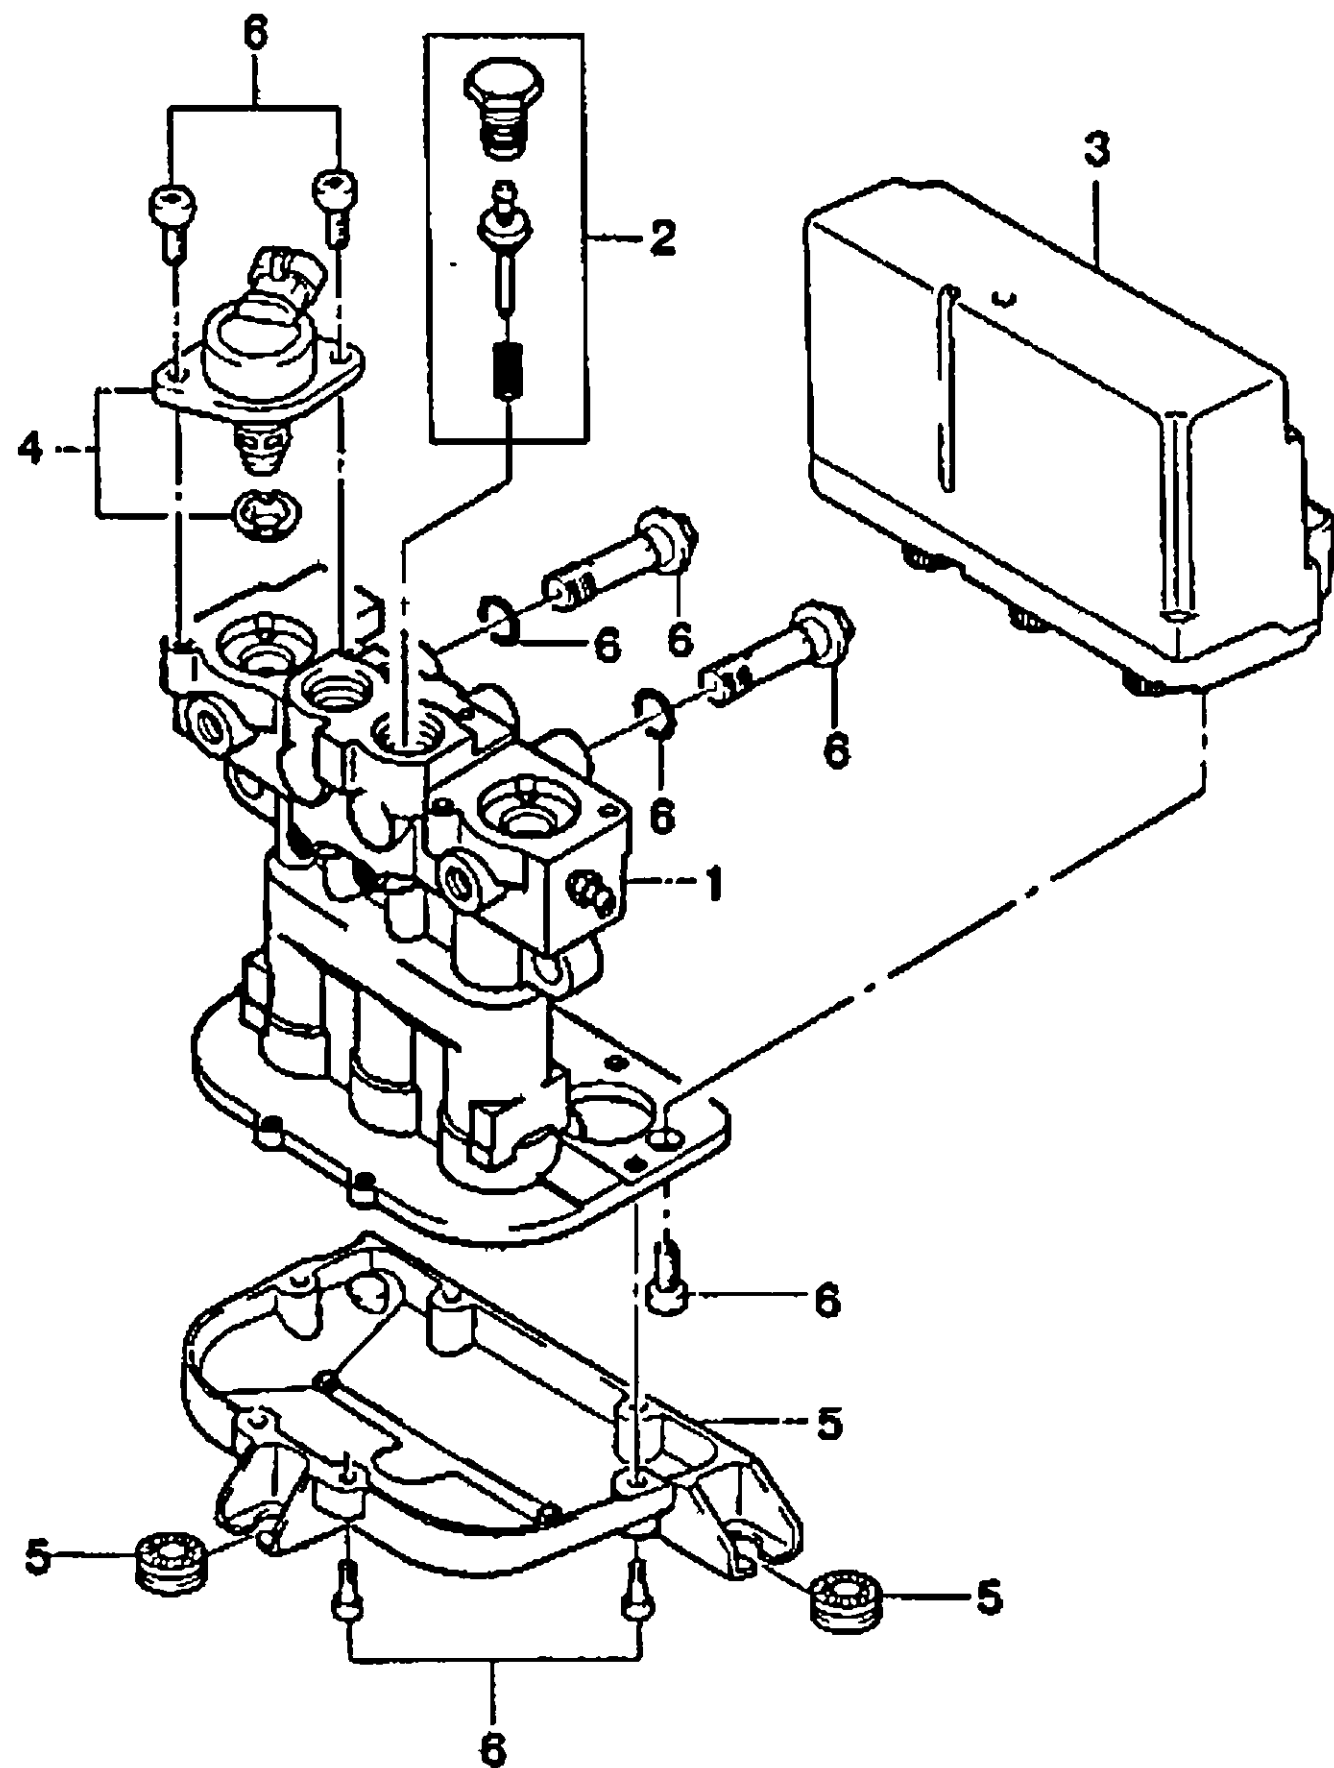


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
		SEA	(2)													
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

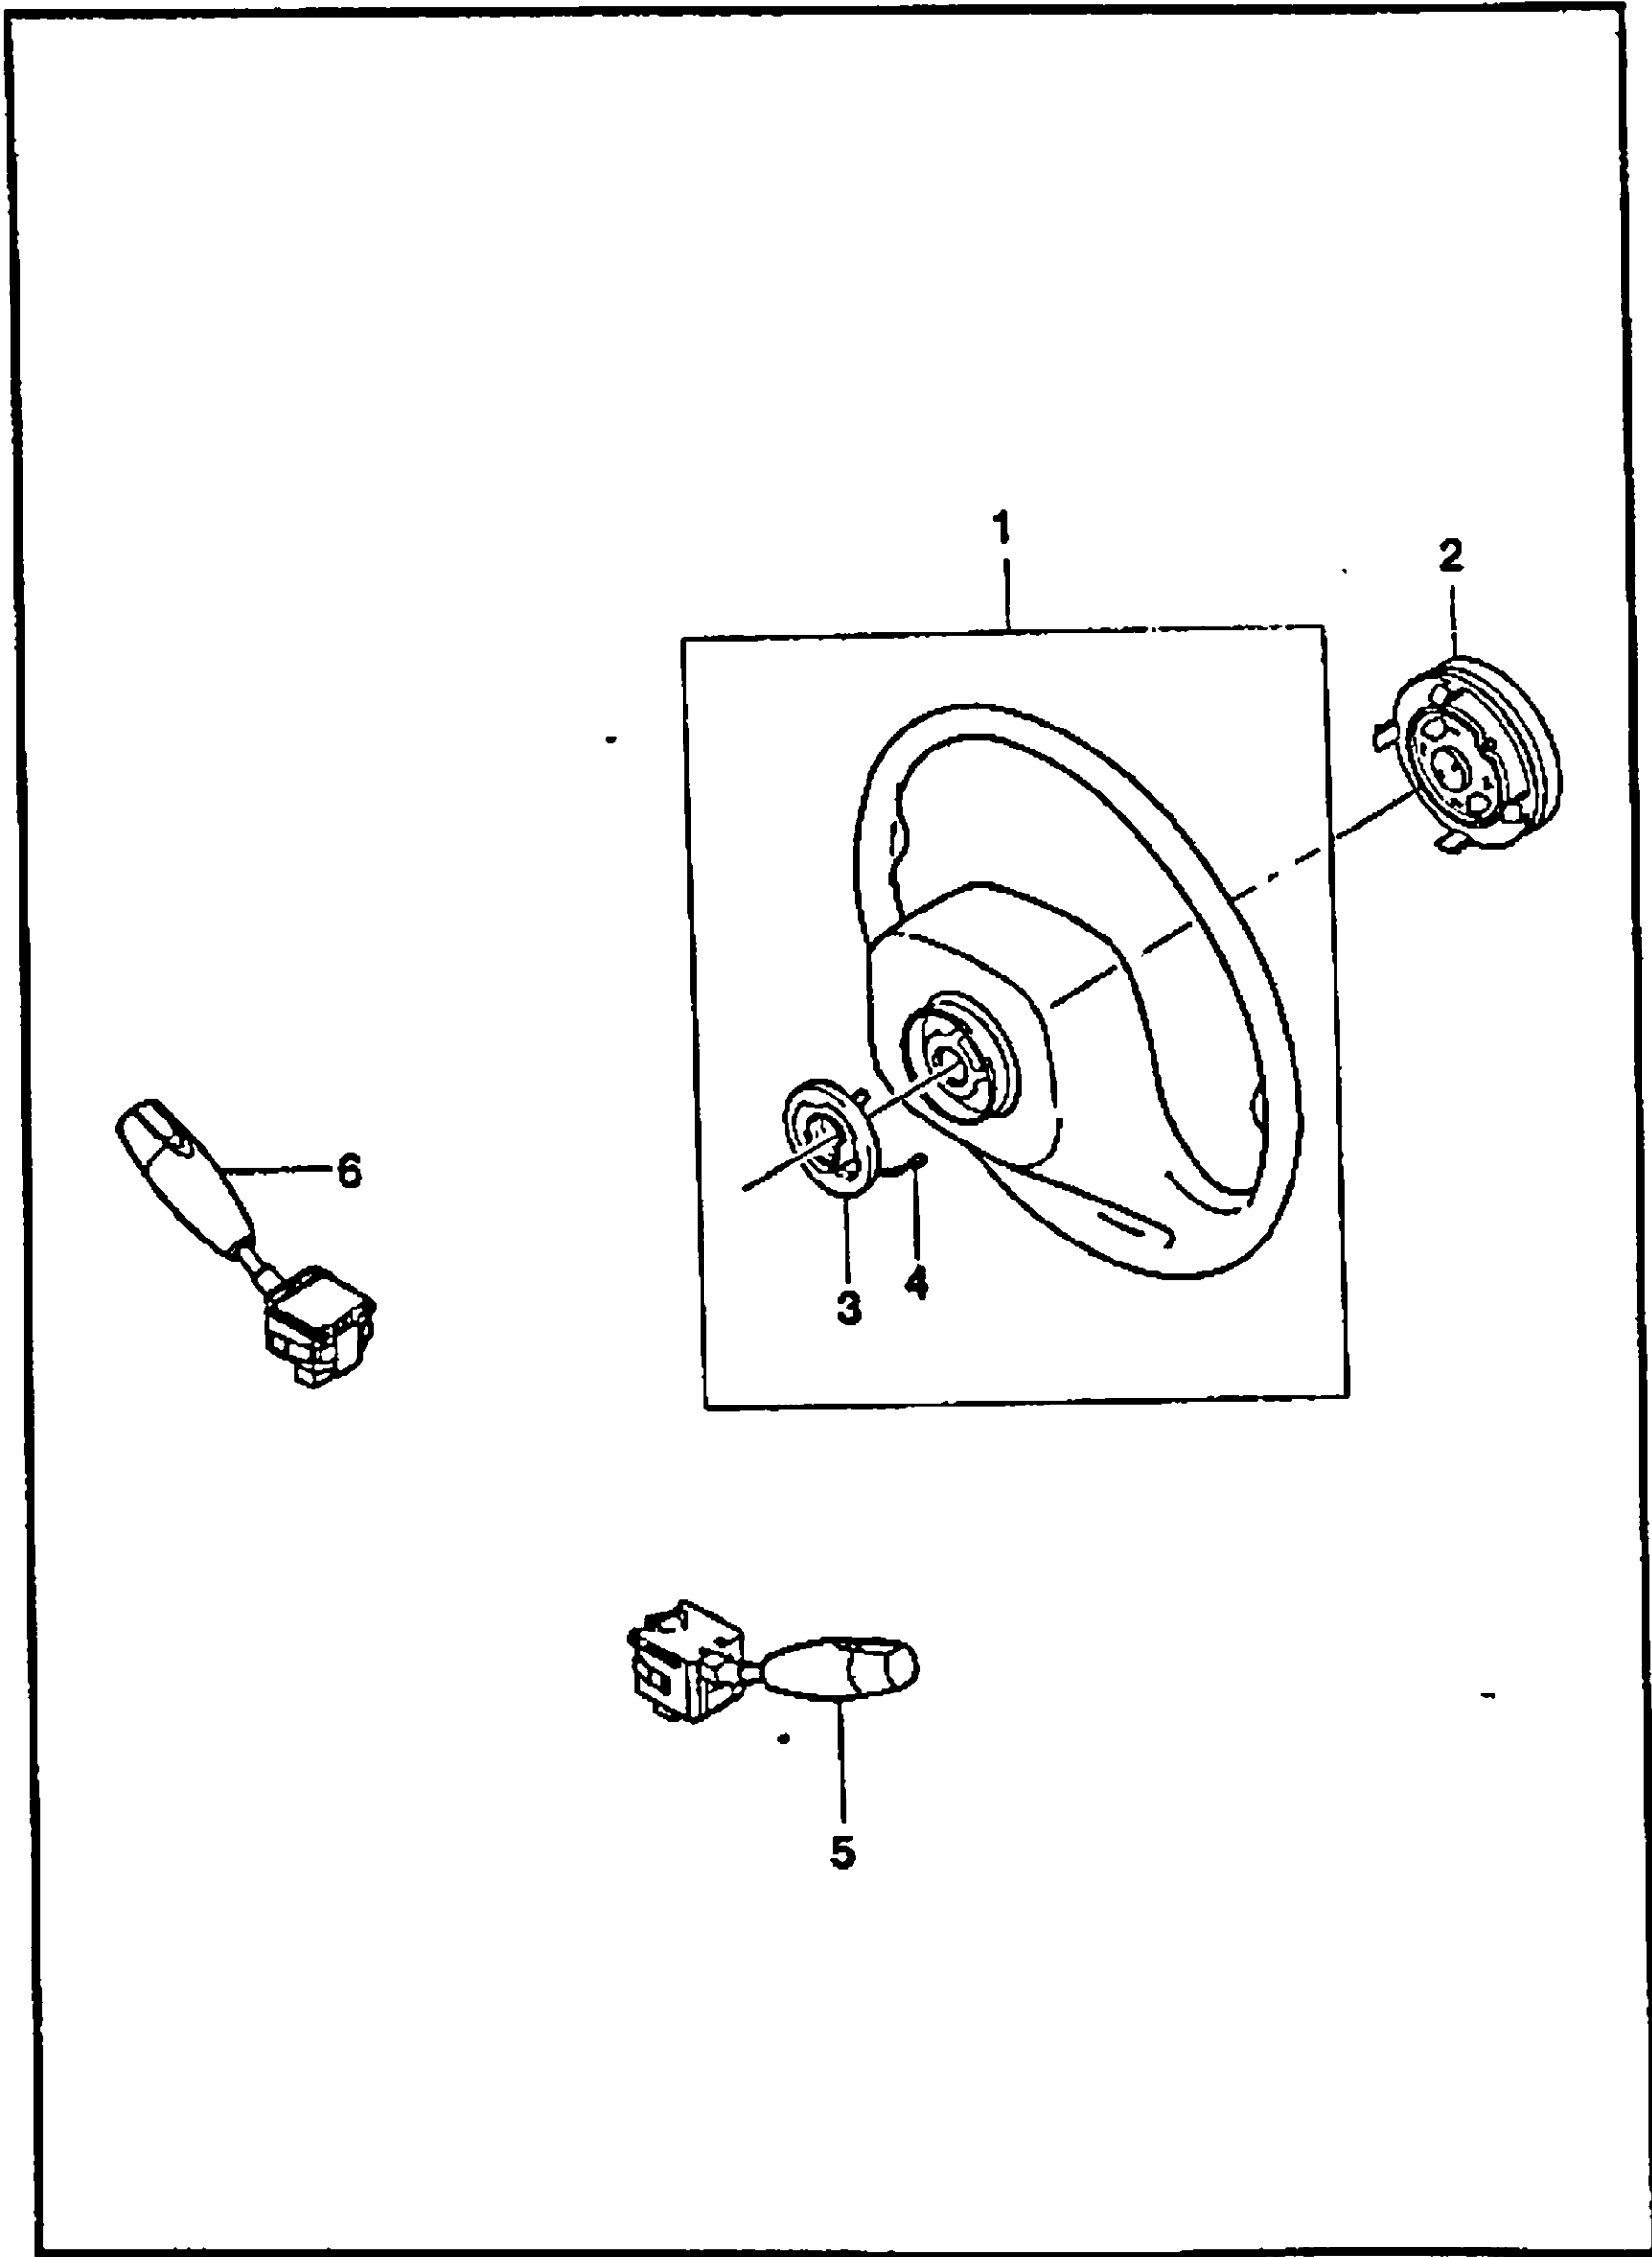


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E T N / G A	BODY			LEVEL					FROM	TO			
			4 N	3 H	5 H	S	S								S
	[01]	(E)WHEEL A-STEERING W/O SIR (D)RAD,LENK									(F)VOLANT DE DIRECTION (S)RUEDA-VOLANTE				
	96239024	. . B B B S S S									1			TW	
	[02]	(E)CAP A-HORN (D)DECKEL,LUPE										(F)CHAPEAU-AVERTISSEUR (S)TAPA-BOCINA			
	96239023	. . B B B S S S									1			TH	
	[03]	(E)CONTACT A-SLIDING (D)KONTAKT,GLEIT										(F)CONTACT-GLISSANT (S)CONTACTO-DESILIZANTE			
	96304414	. . B B B S S S									1				
	[04]	(E)CABLE A-GROUND (D)KABEL										(F)CABLE (S)CABLE			
	96304415	. . B B B S S S									1				
	[05]	(E)SWITCH A-SIGNAL (D)SCHALTER,SIGNAL										(F)COMMUTATEUR-SIGNAL (S)INTERRUPTOR-SEÑAL			
	96230794	. . B B B S S S									1			ZA	
	96242526	. . B B B . . A									1			ZE	
	[06]	(E)SWITCH A-WIPER (D)SCHALTER,SCHEIBENWISCHER										(F)COMMUTATEUR-ESSUIE-GLACE (S)INTERRUPTOR-LIMPIADOR			
	96230798	. . B . . S S S									1			CA	
	96230800	. . . B B S . S									1			CB	
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

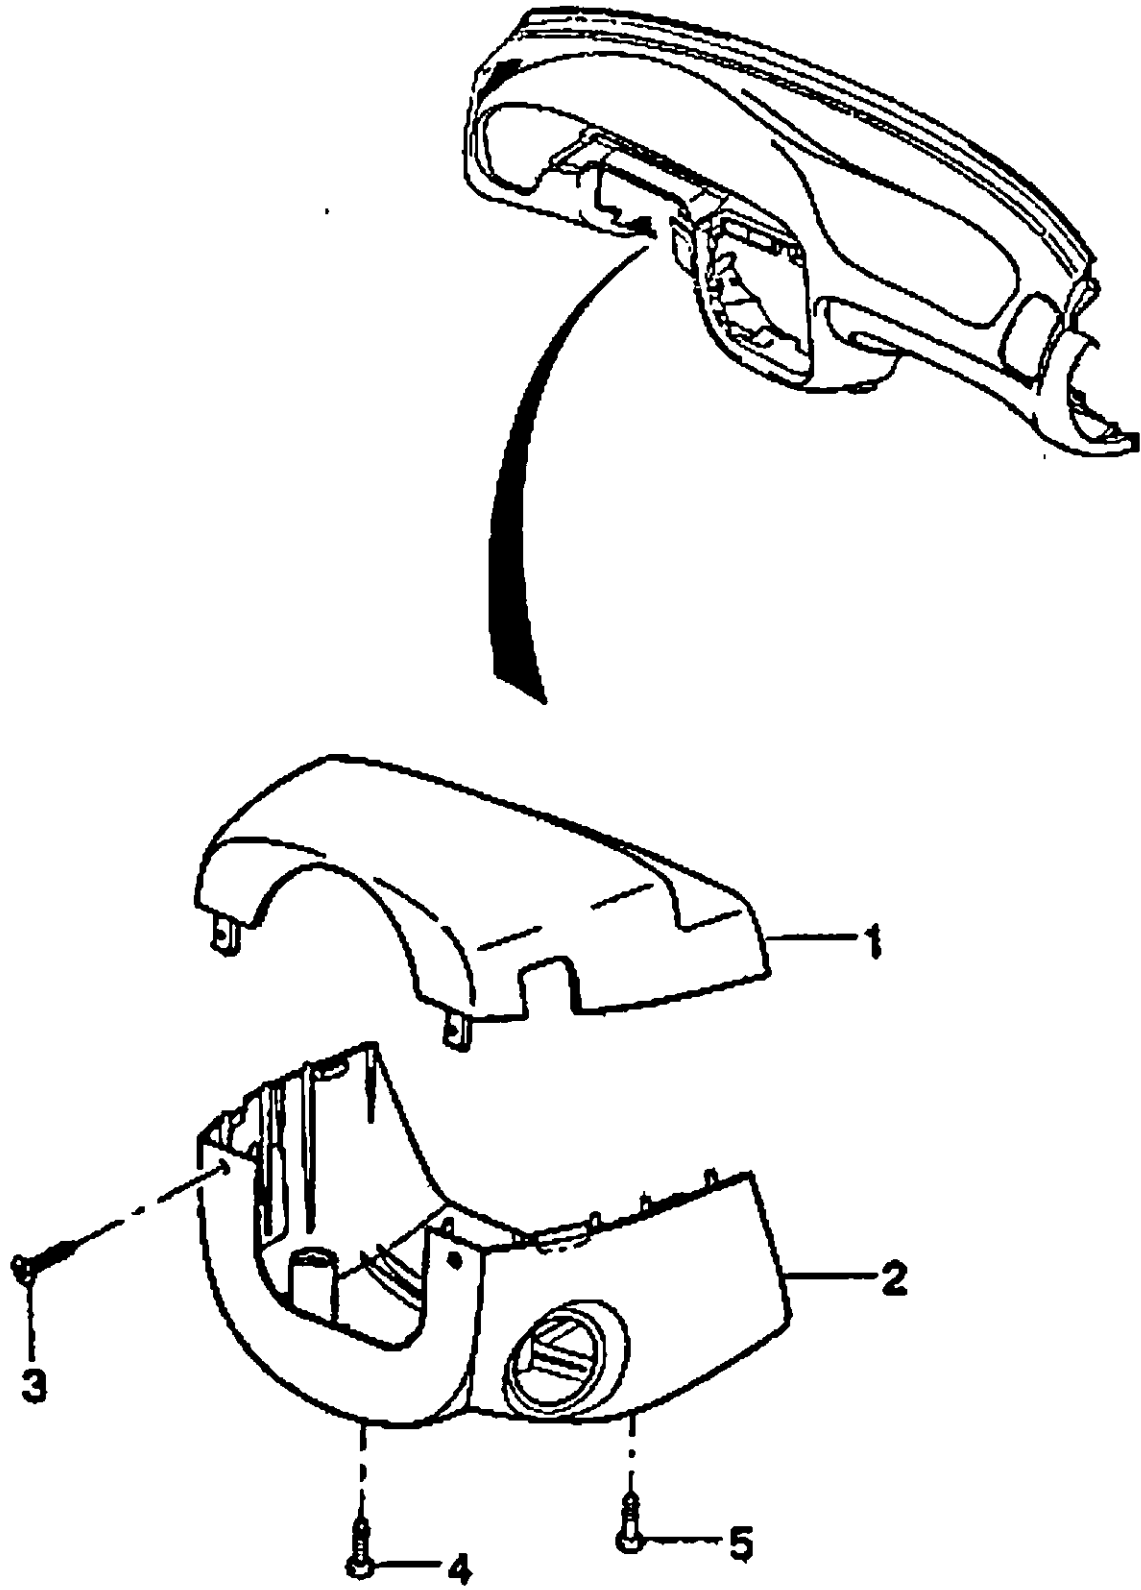


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)COVER-STEERING COLUMN,UPR (D)DECKEL,LENKSÄULE,OBERE									(F)COUVERCLE (S)CUBIERTA					
	96242958	.	.	B	B	B	S	S	S		1			T1		
	[02]	(E)COVER-STEERING COLUMN,LWR (D)DECKEL,LENKSÄULE,UNTERE									(F)COUVERCLE (S)CUBIERTA					
	96242964	.	.	B	B	B	S	S	S	-N33	1			T6		
	96242962	.	.	B	B	B	.	.	O	&N33	1			T4		
	[03]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	03220-42095	.	.	B	B	B	S	S	S		2					
	[04]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	03210-48095	.	.	B	B	B	S	S	S		2					
	[05]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	09136-04006	.	.	B	B	B	S	S	S		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

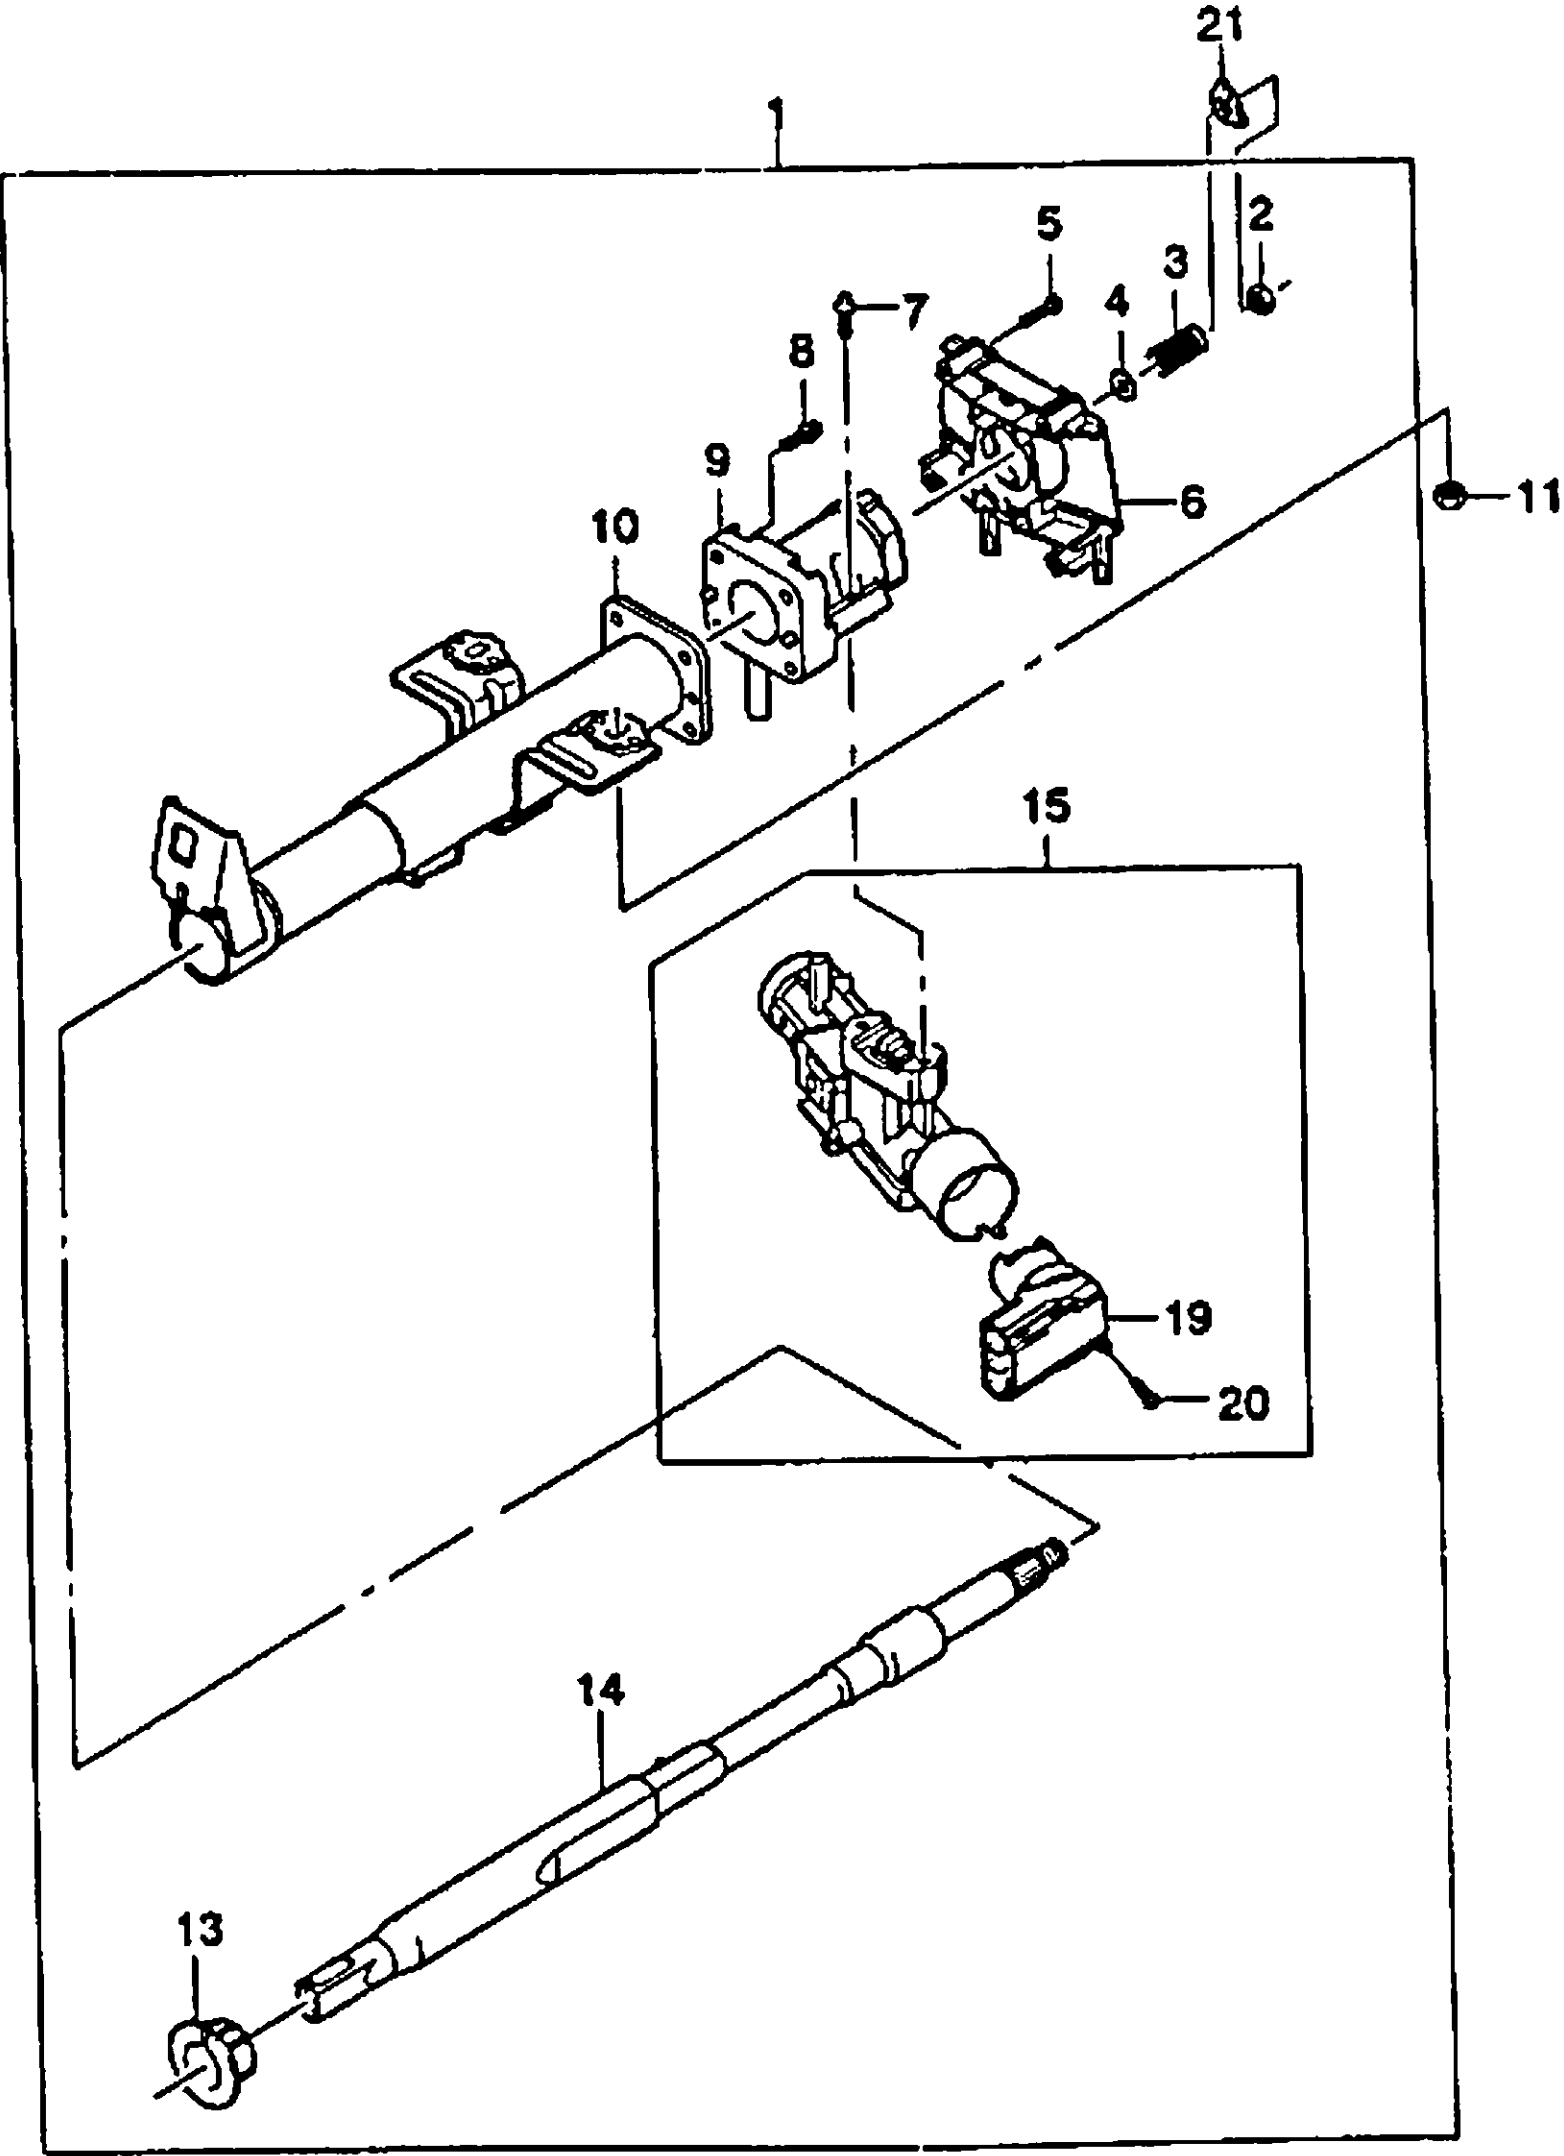

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	6 H	S S								S S
	[01]	(E) COLUMN A-STEERING (D) SAULE, LENKUNG									(F) COLONNE-DIRECTION (S) COLUMNA-CONDUCIR				
	96304406	.	.	B	B	B	S	S	S	&N55-N33	1			SS	
	96214477	.	.	B	B	B	.	O	O	&N58-N33	1			SF	
	[02]	(E) NUT (D) MUTTER									(F) EECROU (S) TUERCA				
	530952	.	.	B	B	B	S	S	S	-AJ3	1		M14X1.5		
	530545	.	.	B	B	B	.	O	O	&AJ3	1		M14X1.5		
	[03]	(E) SPRING (D) FEDERUNG									(F) RESSORT (S) RESORTE				
	530803	.	.	B	B	B	S	S	S		1				
	[04]	(E) WASHER (D) DICHTUNGSRING									(F) RONDELLE (S) ARANDELA				
	530546	.	.	B	B	B	S	S	S		1				
	[05]	(E) SCREW (D) SCHRAUBE									(F) VIS (S) TORNILLO				
	530590	.	.	B	B	B	S	S	S		2				
	[06]	(E) HOUSING A-SIGNAL SWITCH (D) GEHÄUSE SIGNAL SCHALTER									(F) LOGEMENT (S) CARCASA				
	530445	.	.	B	B	B	S	S	S	-AJ3	1				
	530923	.	.	B	B	B	.	O	O	&AJ3	1				
	530723	.	.	B	B	B	.	O	O	&AJ3	1				
	[07]	(E) BOLT-SHEAR (D) SCHRAUBE, SCHERE									(F) BOULON-CISAILLE (S) PERNO-CORTAR				
	530549	.	.	B	B	B	S	S	S		2		M6X1.0		
	[08]	(E) BOLT-SUPPORT (D) SCHRAUBE									(F) BOULON (S) PERNO				
	530600	.	.	B	B	B	S	S	S		4		M8X1.25		
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE									
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK									

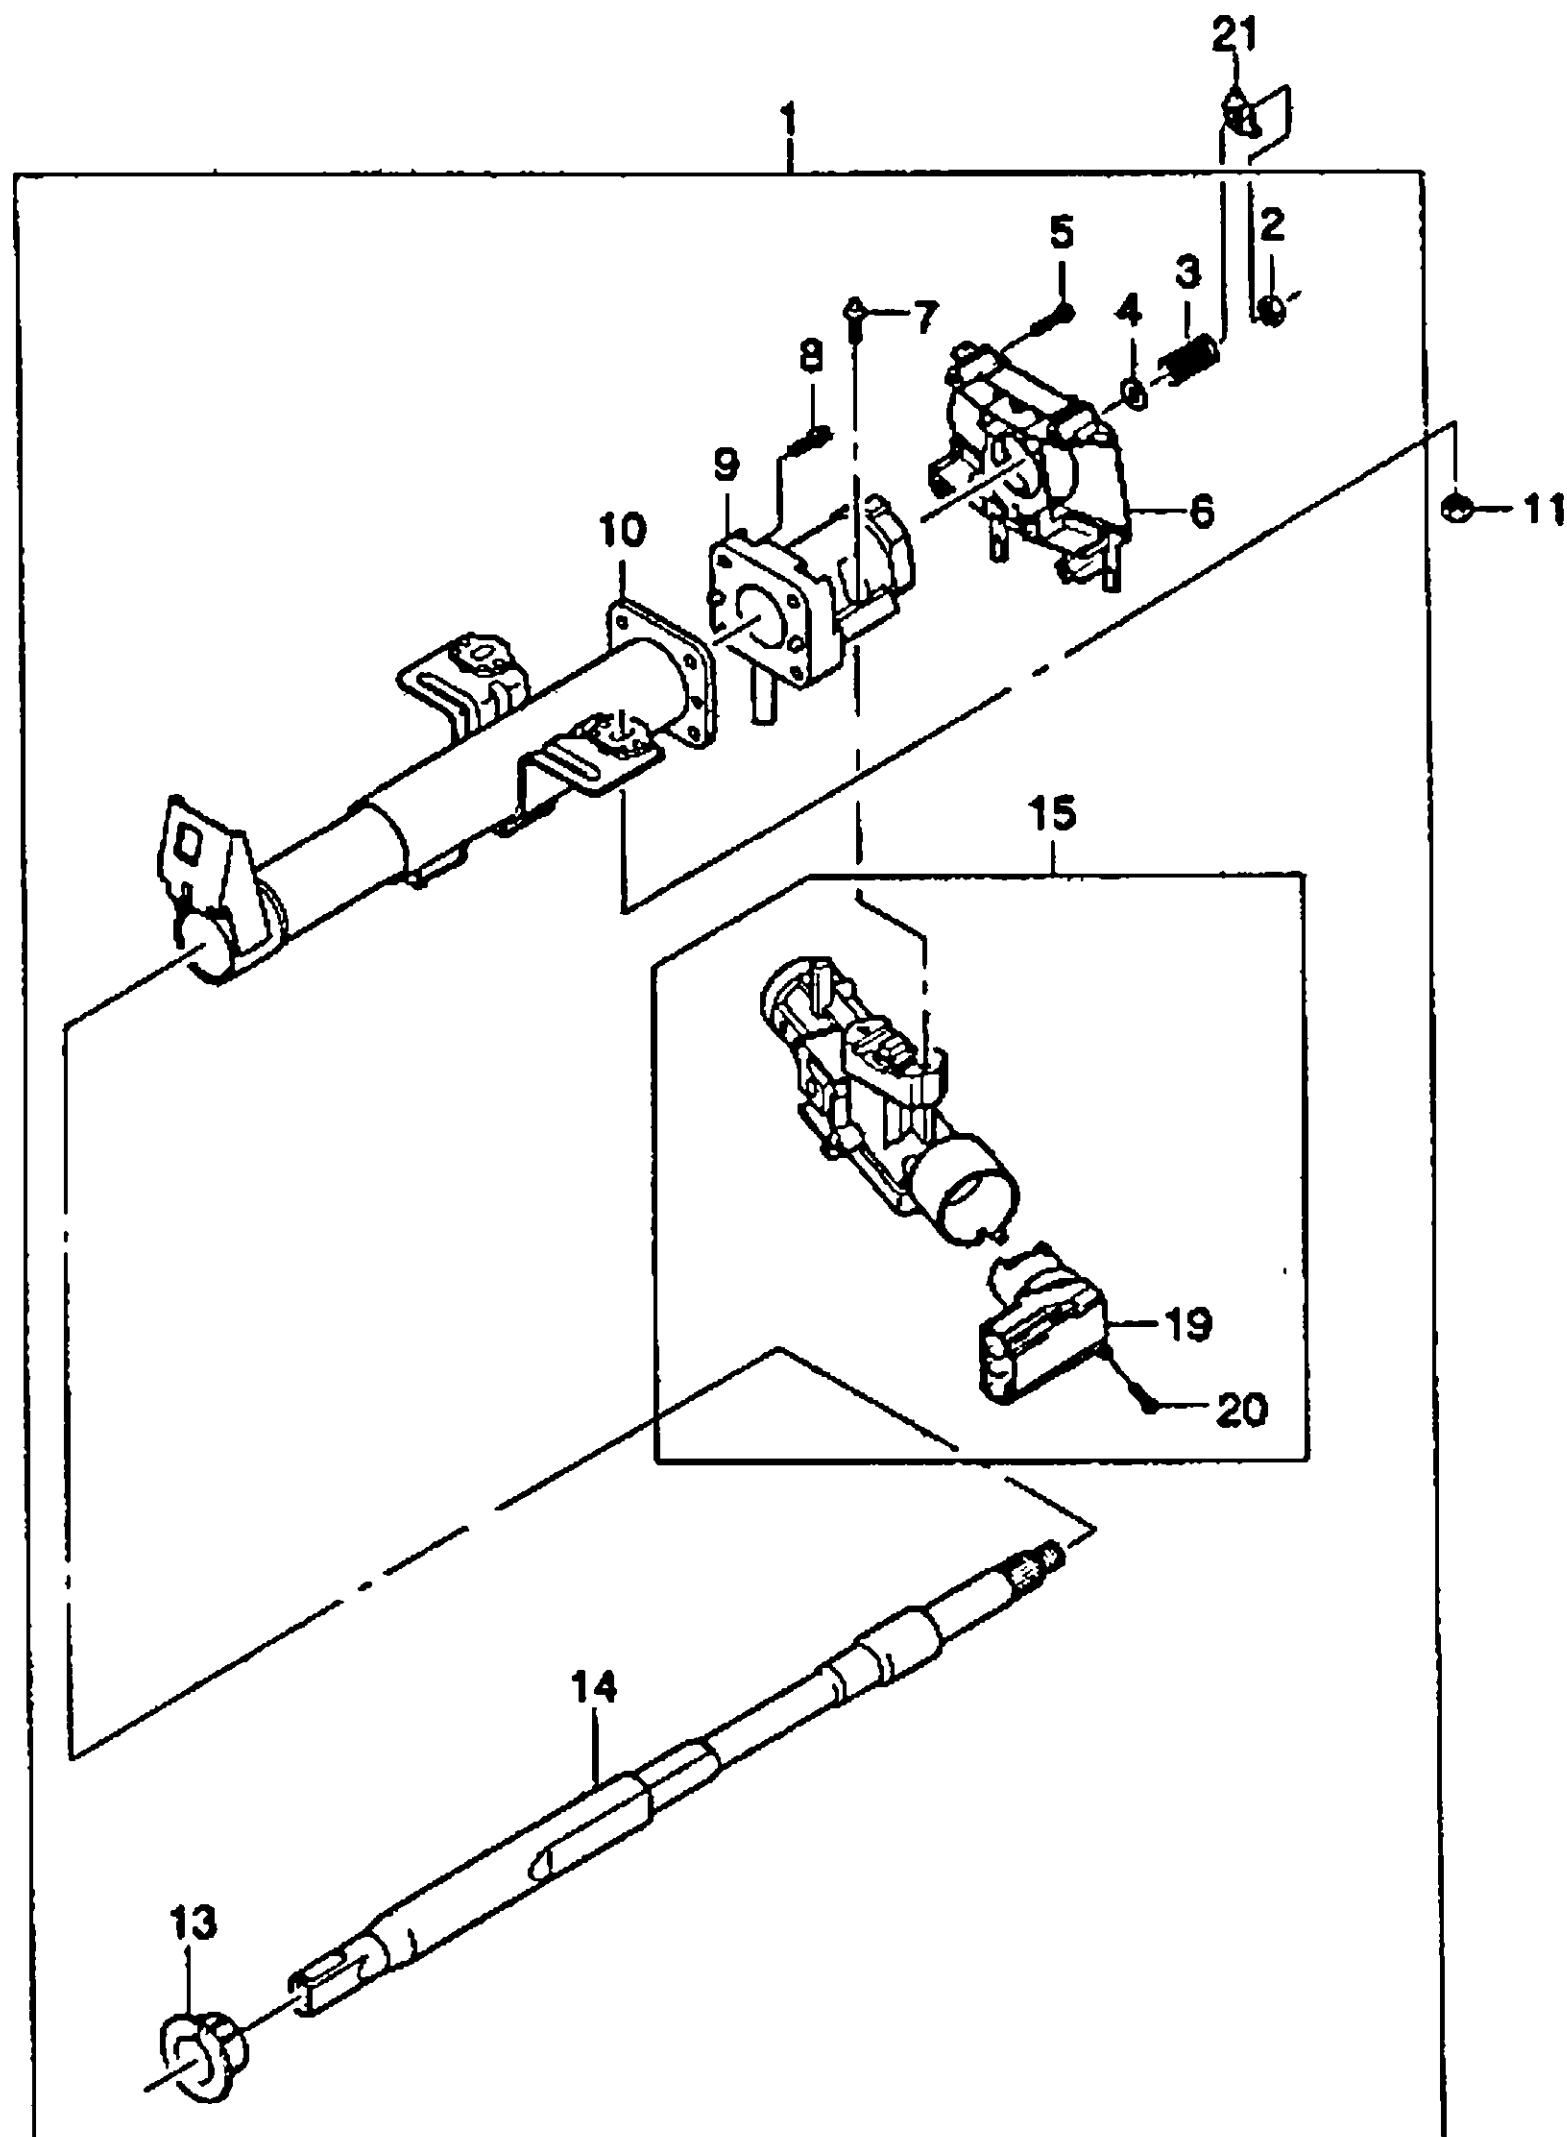


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[09]	(E)HOUSING A-STEERING COLUMN (D)GEHÄUSE LENKSÄULE								(F)LOGEMENT (S)CARCASA-COLUMNA DE VOLANT						
	530751	. . B B B S S S								1						
	[10]	(E)JACKET A-STEERING COLUMN (D)MANTEL LENKSÄULE								(F)JAQUETTE (S)CUBIERTA						
	530485	. . B B B S S S								1						
	[11]	(E)NUT (D)MUTTER								(F)ECROU (S)TUERCA						
	08361-28083	. . B B B S S S								3						
	[13]	(E)SPACER (D)Distanzstück								(F)ENTRETOISE (S)ESPACIADOR						
	530995	. . B B B S S S								1						
	530280	. . B B B S S S								1						
	[14]	(E)SHAFT A-STEERING COLUMN (D)SPINDEL LENKSÄULE								(F)ARBRE (S)EJE-COLUMNA DE VOLANTE						
	530486	. . B B B S S S								1						
	[15]	(E)HOUSING A-IGNITION SWITCH (D)GEHÄUSE ZÜNDUNGS-SCHALTER								(F)LOGEMENT (S)CARCASA						
	630825	. . B B B S S S								1						
	[19]	(E)SWITCH-IGNITION (D)SCHALTER, ZÜNDUNG								(F)COMMUTATEUR-CONTACT (S)INTERRUPTOR-IGNICION						
	96238726	. . B B B S S S								1						
	[20]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO						
	001711-4016	. . B B B S S S								1						
	[21]	(E)PLATE-LOCKING (D)PLATTE, VERRIEGELUNG								(F)PLAQUE-VERROUILLAGE (S)PLACA-CIERRE						
	03451666	. . B B B . O O &AJ3								1						
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

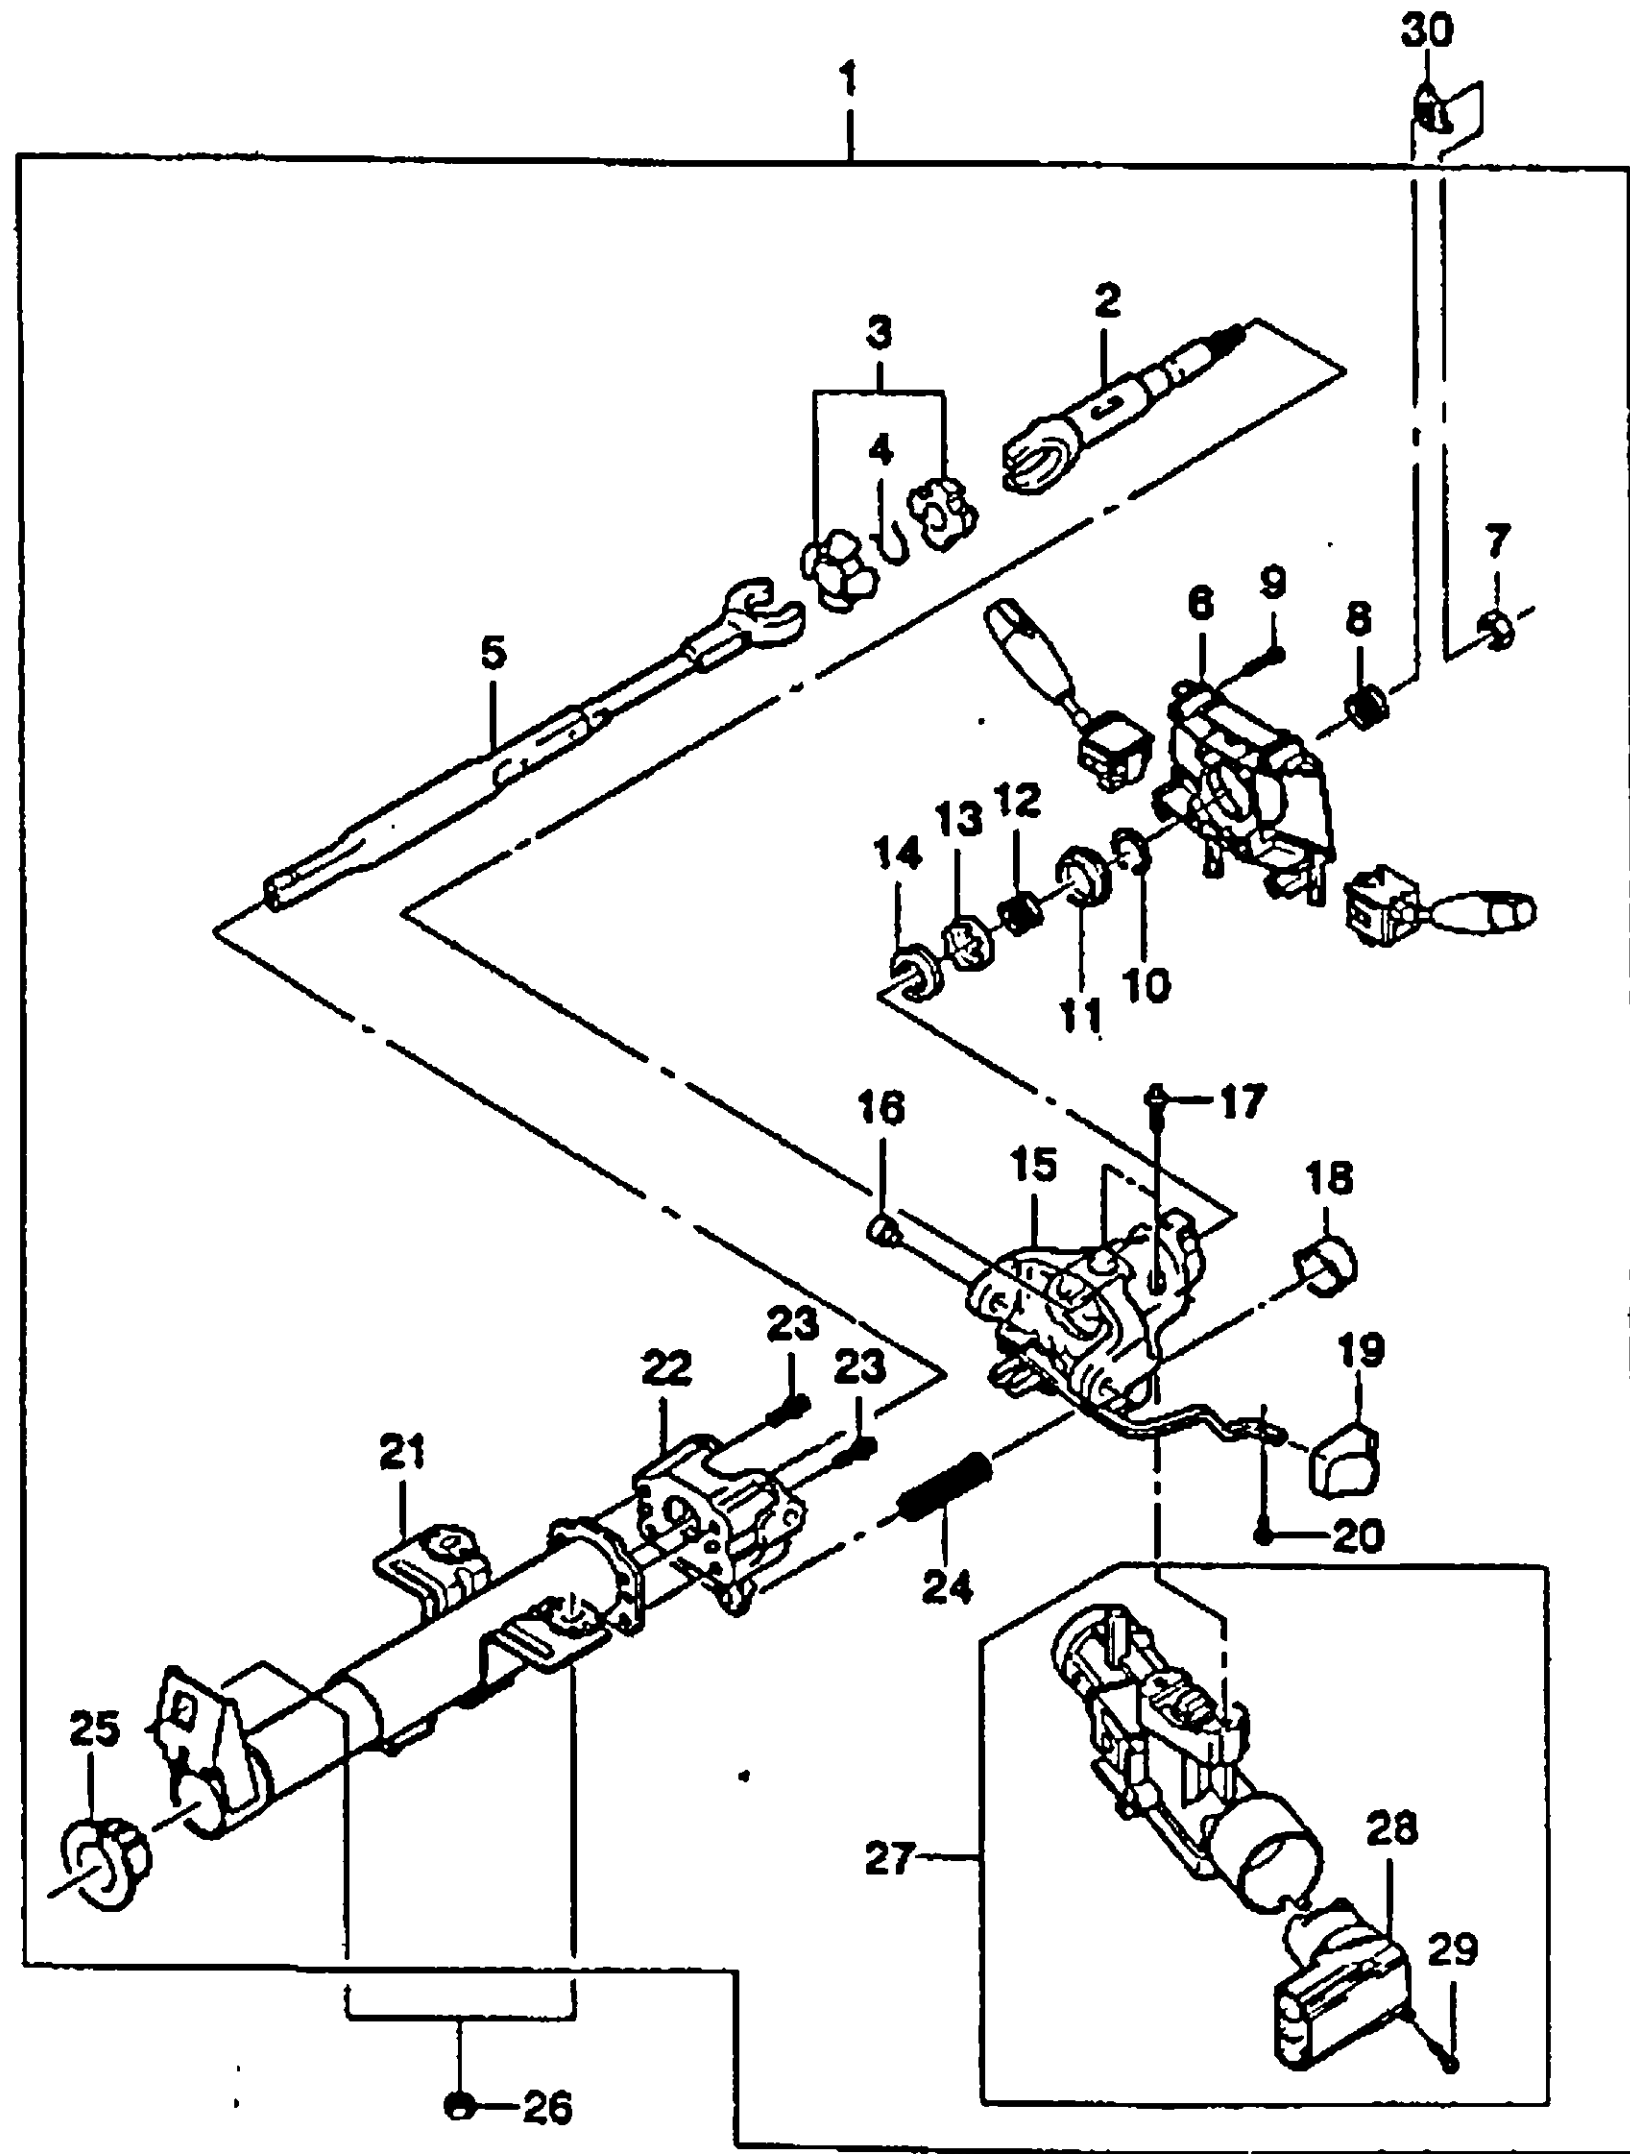


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S								S E	X
	[01]	(E) COLUMN A-TILT STEERING (D) SAULE, KIRPLENKUNG									(F) COLONNE-DIRECTION (S) COLUMNA-CONDUCIR					
	96230715	.	.	B	B	B	.	.	O	&N33&N55	1			TS		
	96230716	.	.	B	B	B	.	.	O	&N33&N58	1			TF		
	[02]	(E) SHAFT A-RACER&UPPER (D) SPINDEL									(F) ARBRE (S) EJE					
	530964	.	.	B	B	B	.	.	O		1					
	[03]	(E) SPHERE-CENTERING (D) KUGEL-CENTRE									(F) SPHERE-CENTRE (S) ESFERA					
	530625	.	.	B	B	B	.	.	O		2					
	[04]	(E) SPRING (D) FEDERUNG									(F) RESSORT (S) RESORTE					
	530626	.	.	B	B	B	.	.	O		1					
	[05]	(E) SHAFT A-LOWER STRG (D) SPINDEL									(F) ARBRE (S) EJE					
	530918	.	.	B	B	B	.	.	O		1					
	[06]	(E) HOUSING A-SIGNAL SWITCH (D) GEHAUSE									(F) LOGEMENT (S) CARCASA					
	530446	.	.	B	B	B	.	.	O	-AJ3	1					
	530923	.	.	B	B	B	.	.	O	&AJ3	1					
	530723	.	.	B	B	B	.	.	O	&AJ3	1					
	[07]	(E) NUT (D) MUTTER									(F) ECROU (S) TUERCA					
	530952	.	.	B	B	B	.	.	O	-AJ3	1		M14X1.5			
	530545	.	.	B	B	B	.	.	O	&AJ3	1		M14X1.5			
	[08]	(E) SPRING (D) FEDERUNG									(F) RESSORT (S) RESORTE					
	530561	.	.	B	B	B	.	.	O		1					
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE										
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK										

4831 TILTABLE STEERING COLUMN


4G14

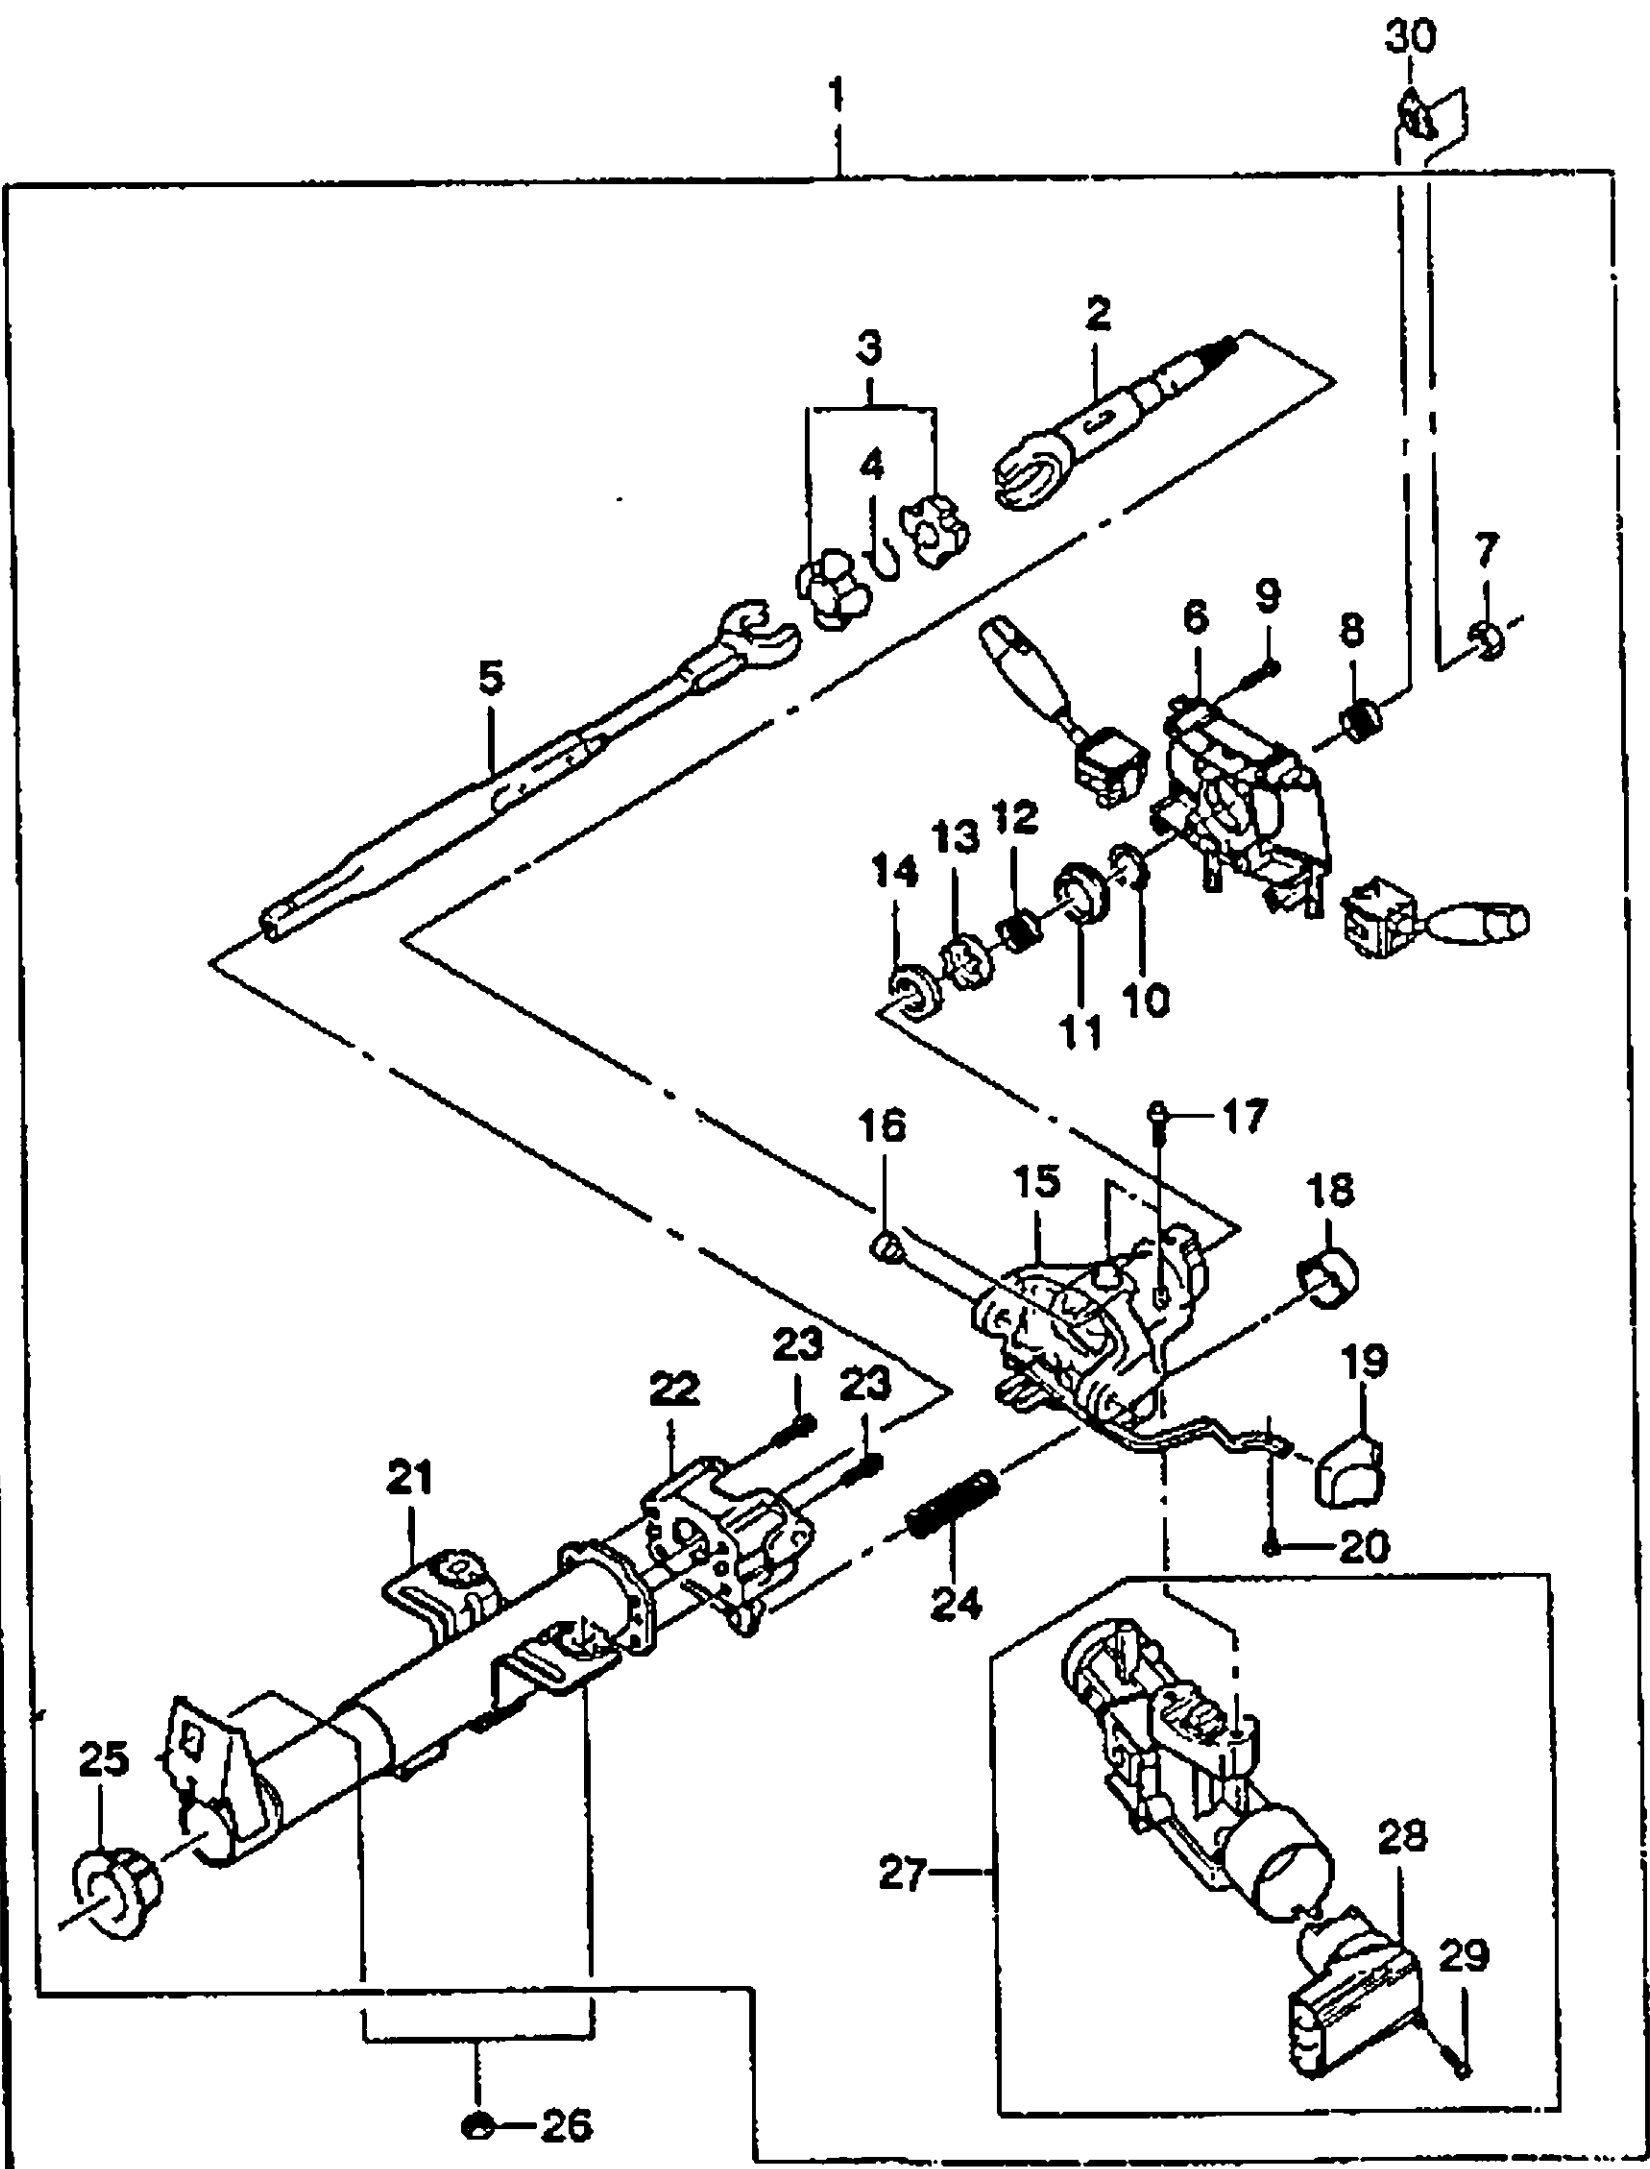


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[09]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	530590			B	B	B					2				
	[10]	(E)RING-RETAINING (D)RING,HALTER									(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR				
	530503			B	B	B					1				
	[11]	(E)RETAINER-SPRING (D)HALTER									(F)ARRETOIR (S)RETENEDOR				
	530553			B	B	B					1				
	[12]	(E)SPRING (D)FEDERUNG									(F)RESSORT (S)RESORTE				
	530552			B	B	B					1				
	[13]	(E)SEAT-UPR BEARING INR RACE (D)SITZ, OBERER LAGER									(F)SIEGE (S)ASIENTO				
	530524			B	B	B					1				
	[14]	(E)RACE-INNER (D)GLEITBAHN, INNEN									(F)CAGE-INTERNE (S)CARRERA-INTERNA				
	530502			B	B	B					1				
	[15]	(E)HOUSING A-STRG COLUMN (D)GEHÄUSE									(F)LOGEMENT (S)CARCASA				
	530913			B	B	B					1				
	[16]	(E)PIN-PIVOT (D)STIFT									(F)BROCHE (S)PASADOR				
	530515			B	B	B					2				
	[17]	(E)BOLT-SHEAR (D)SCHRAUBE, SCHERE									(F)BOULON-CISAILLE (S)PERNO-CORTAR				
	530549			B	B	B					2		M6X1.0		
	[18]	(E)RETAINER-SPRING (D)HALTER									(F)ARRETOIR (S)RETENEDOR				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

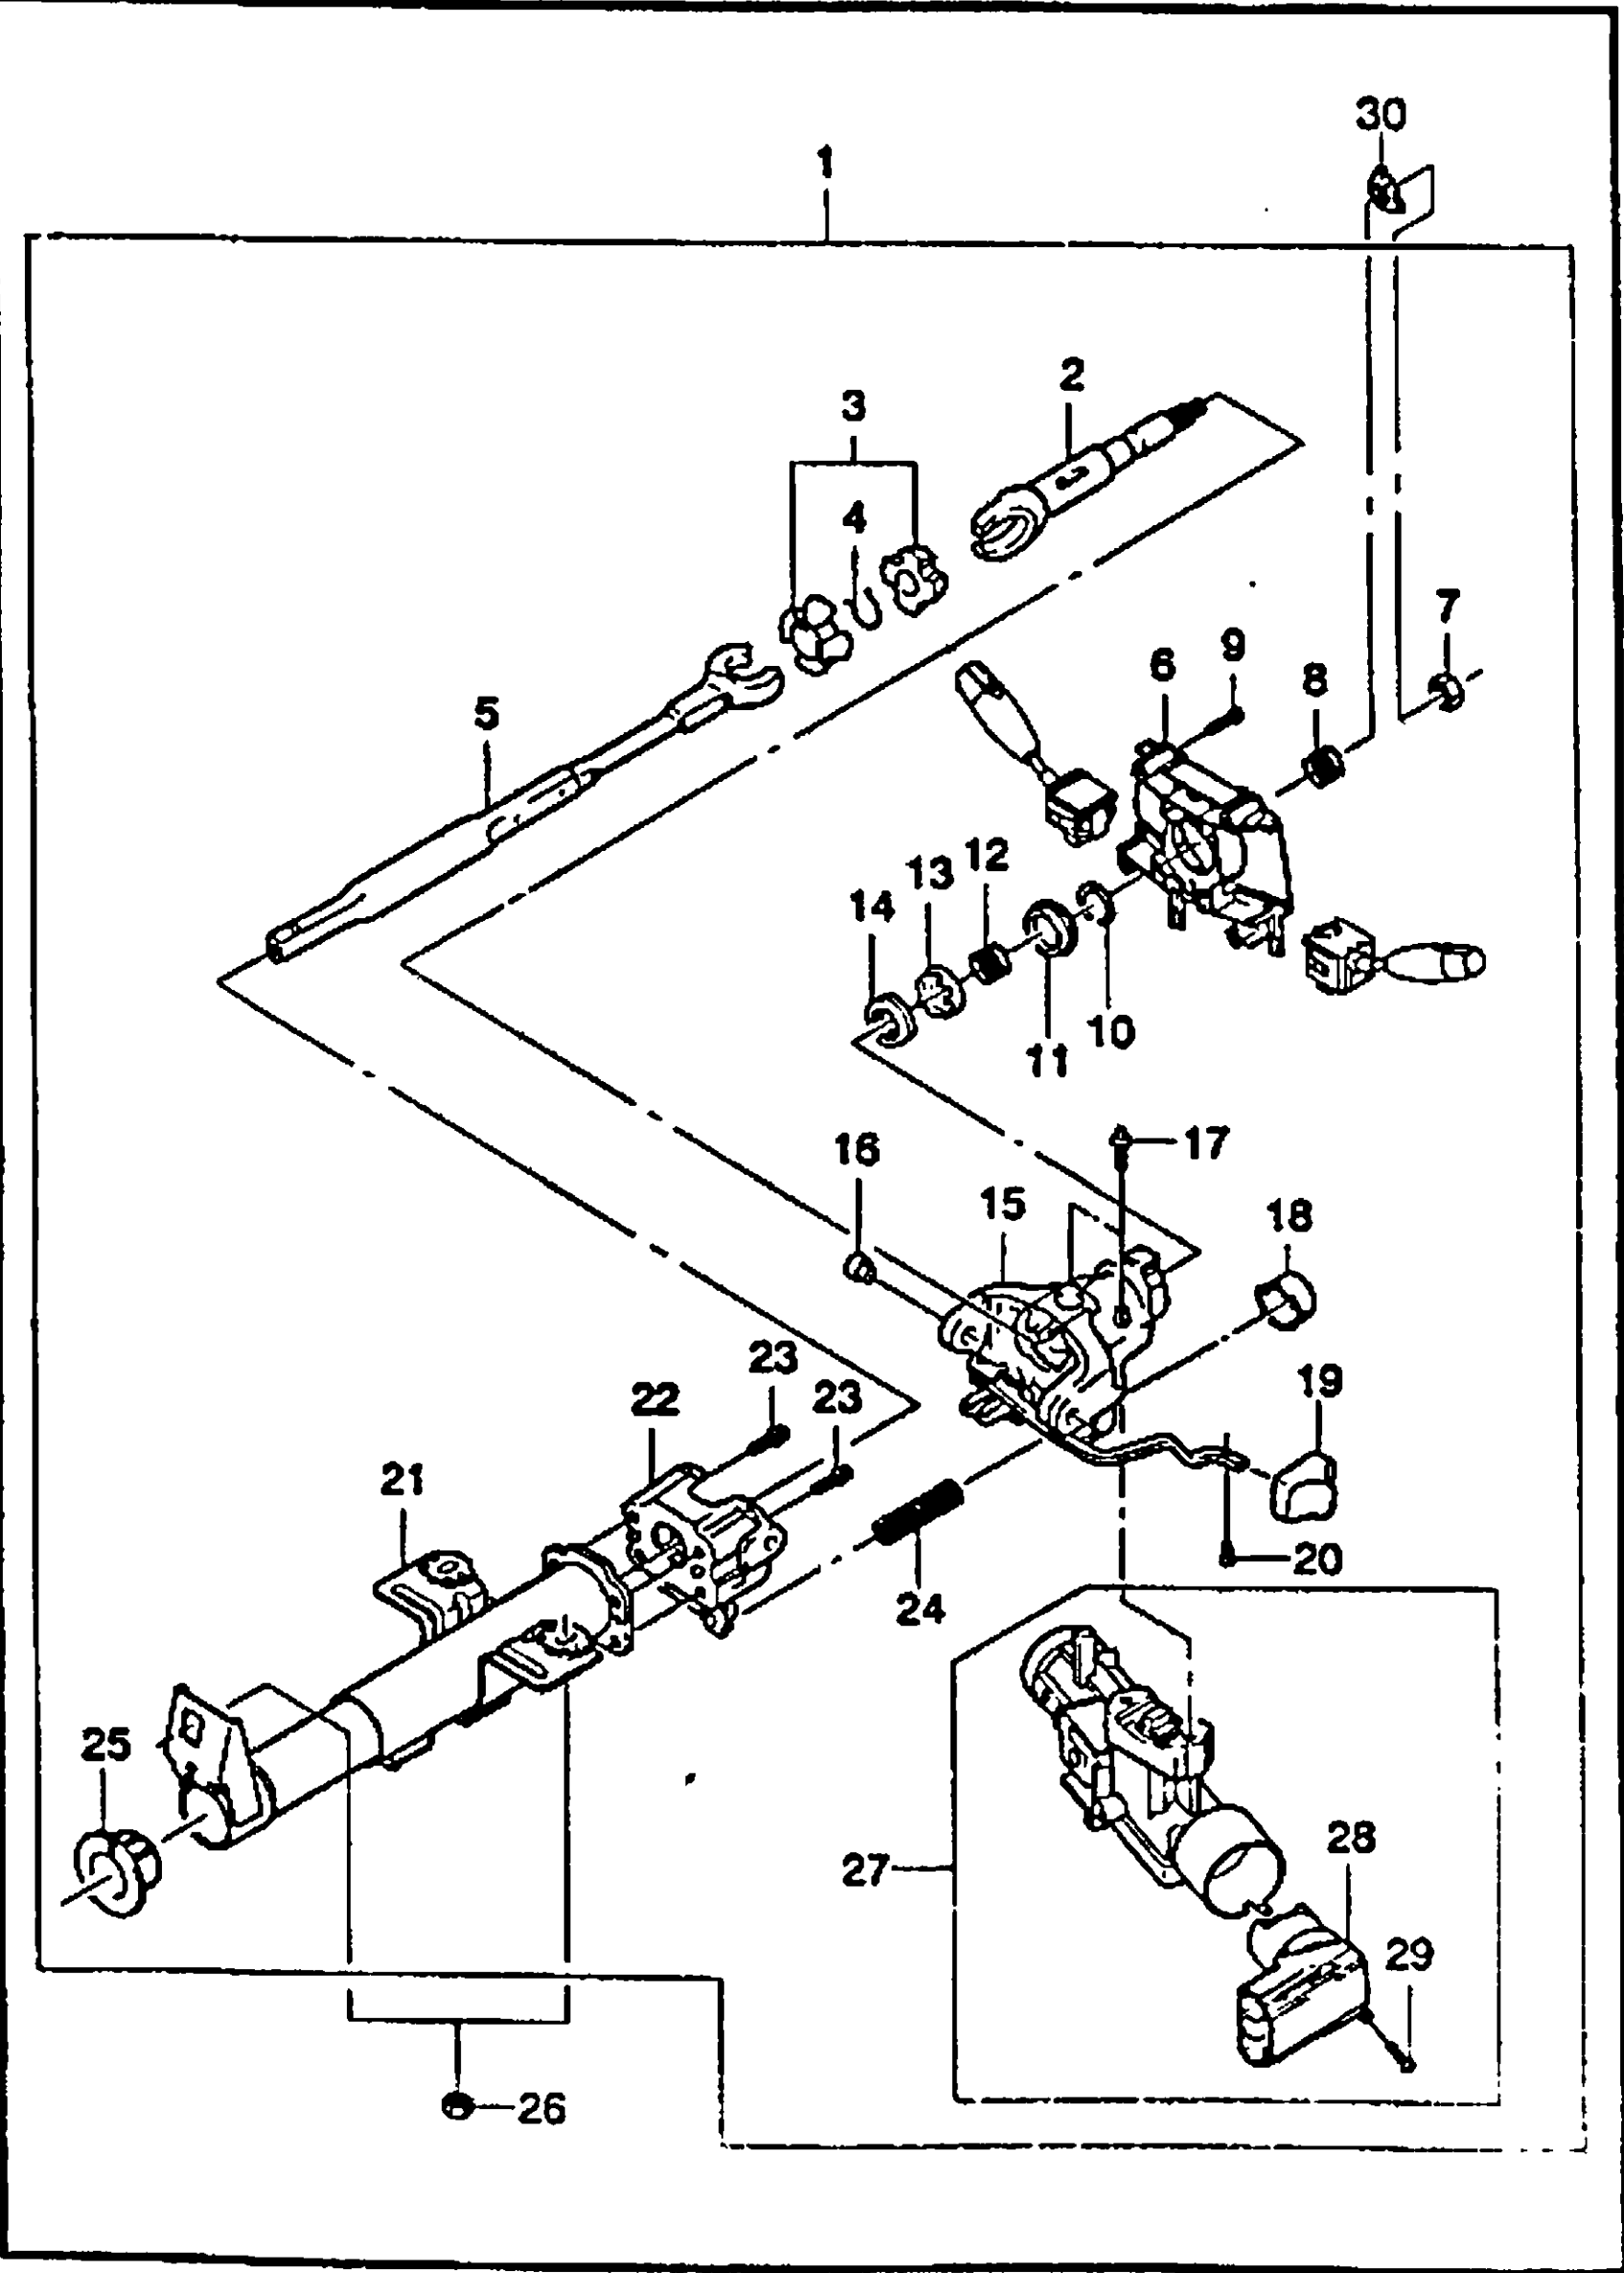


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S								S
	530509	.	.	B	B	B	.	.	O		1					
	[19]	(E)HANDLE-TILTLE LEVER (D)HENKEL									(F)POIGNEE (S)MANIJA					
	530953	.	.	B	B	B	.	.	O		1					
	[20]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	530848	.	.	B	B	B	.	.	O		1					
	[21]	(E)JACKET A-STEERING COLUMN (D)MANTEL,LENKSÄULE									(F)JAQUETTE (S)CUBIERTA					
	530914	.	.	B	B	B	.	.	O		1					
	[22]	(E)SUPPORT-STRG COLUMN HSG (D)TRÄGER,LENKSÄULE GEHÄUSE									(F)SUPPORT (S)SOPORTE					
	530494	.	.	B	B	B	.	.	O		1					
	[23]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	530600	.	.	B	B	B	.	.	O		4		M8X1.25			
	[24]	(E)SPRING (D)FEDERUNG									(F)RESSORT (S)RESORTE					
	530750	.	.	B	B	B	.	.	O		1					
	[25]	(E)SPACER (D)Distanzstück									(F)ENTRETOISE (S)ESPACIADOR					
	530995	.	.	B	B	B	.	.	O		1					
	530280	.	.	B	B	B	.	.	O		1					
	[26]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA					
	08361-28083	.	.	B	B	B	.	.	O		3					
	[27]	(E)HOUSING A-IGNITION SWITCH (D)GEHÄUSE ZÜNDUNGS-SCHALTER									(F)LOGEMENT (S)CARCASA					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

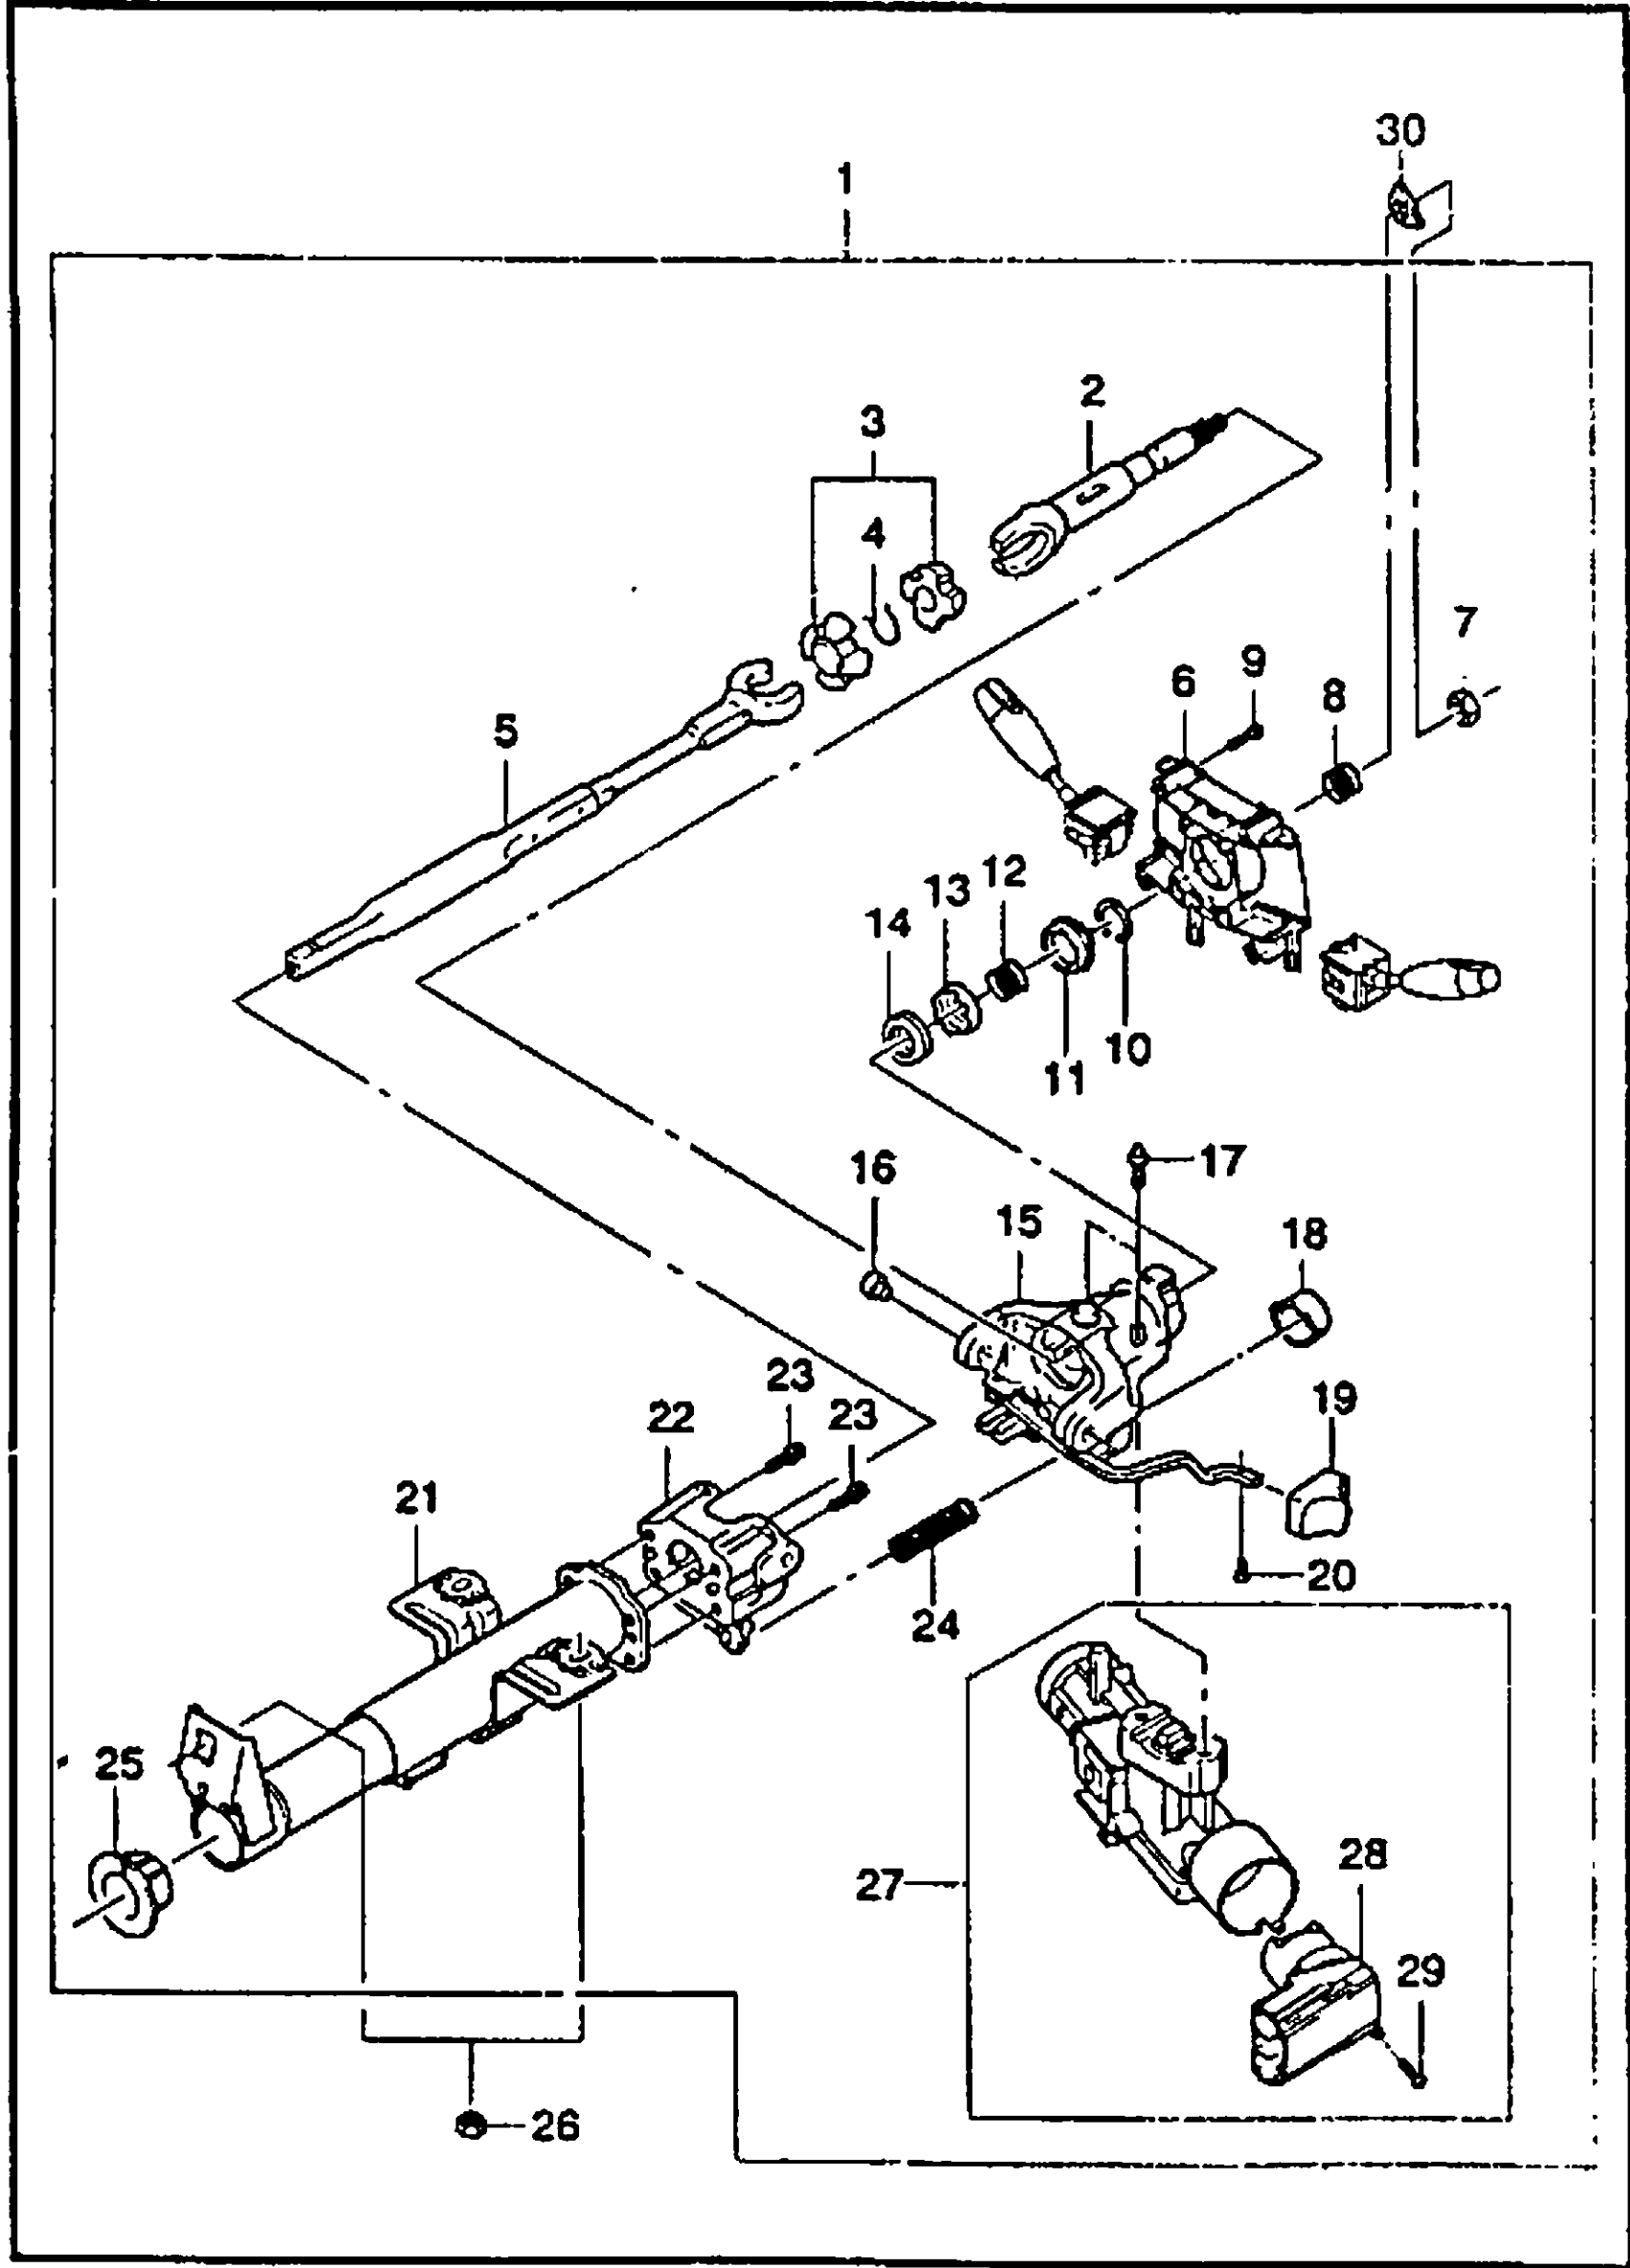

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				F R O M	T O			
				4 N	3 H	5 H	S S								S S
	530825	.	.	B	B	B	.	.	O		1				
	[28]	(E)SWITCH-IGNITION										(F)COMMUTATEUR-CONTACT			
		(D)SCHALTER,ZÜNDUNG										(S)INTERRUPTOR-IGNICION			
	96238726	.	.	B	B	B	.	.	O		1				
	[29]	(E)BOLT										(F)BOULON			
		(D)SCHRAUBE										(S)PERNO			
	001711-4016	.	.	B	B	B	.	.	O		1				
	[30]	(E)PLATE-LOCKING										(F)PLAQUE-VERROUILLAGE			
		(D)PLATTE,VERRIEGELUNG										(S)PLACA-CIERRE			
	03451666	.	.	B	B	B	.	.	O	8AJ3	1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

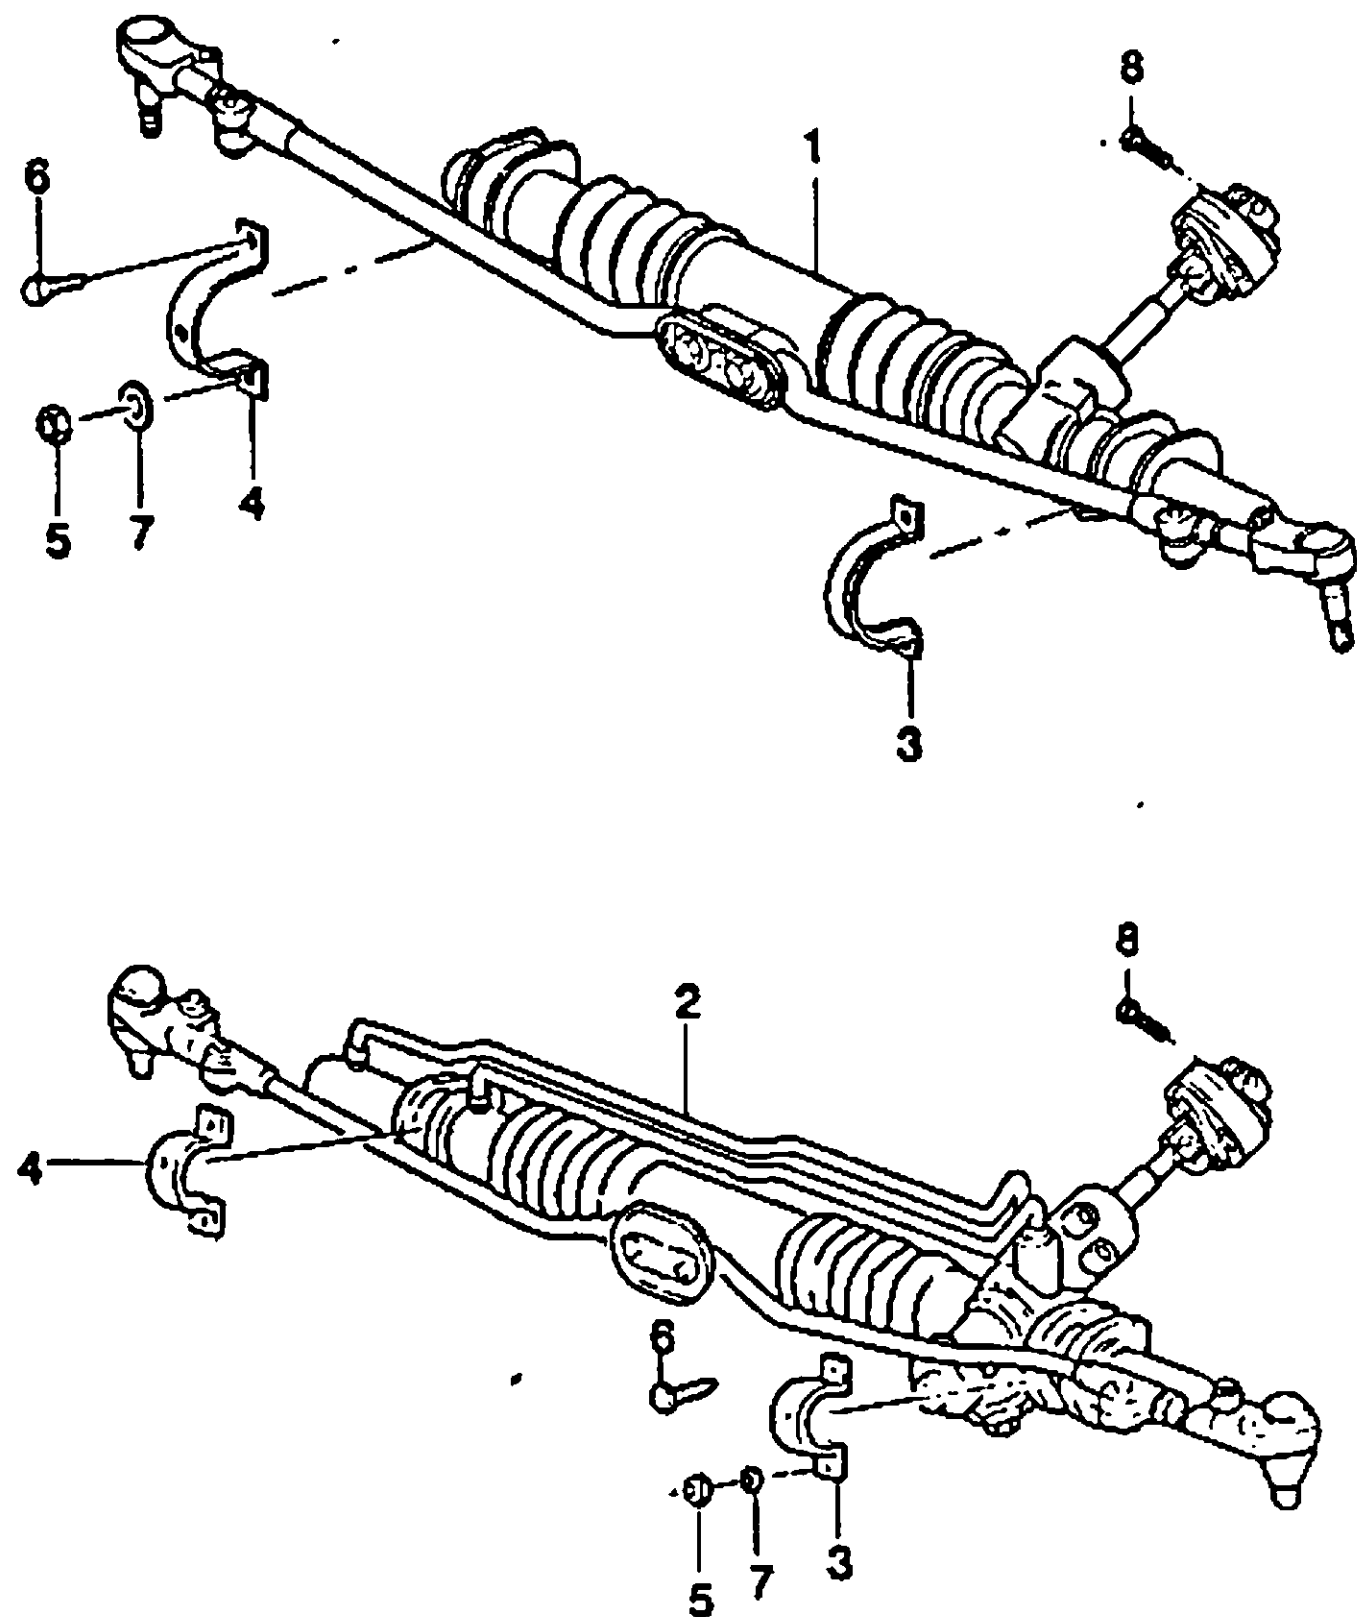


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	6 H	S S								S S	S S
	[01]	(E)GEAR A-STEERING (D)GETRIEBE,LENKUNG									(F)ENGRENAGE-DIRECTION (S)ENGRANAJE-VOLANTE					
	96304378	.	.	B	B	B	S	S	.	&N51	1	970716		AP		
	96304378	.	.	B	B	B	S	S	.	&N51-F40	1	970716		AP		
	96255507	.	.	B	B	B	A	A	.	&N51&F40	1	970716		MP		
	[02]	(E)GEAR A-POWER STEERING (D)GETRIEBE,KRAFTLENKUNG									(F)ENGRENAGE (S)ENGRANAJE-SERVODIRECCION					
	96216615	.	.	B	B	B	O	O	S	&N40	1	970716		SU		
	96216615	.	.	B	B	B	O	O	S	&N40-F40	1	970716		SU		
	96255506	.	.	B	B	B	A	A	A	&N40&F40	1	970716		PA		
	[03]	(E)BRACKET STEERING GEAR (D)TRÄGER,LENKGETRIEBE									(F)SUPPORT (S)SOPORTE-ENGRANAJE					
	90334562	.	.	B	B	B	S	S	S		LH 1					
	[04]	(E)BRACKET STEERING GEAR (D)TRÄGER,LENKUNG GETRIEBE									(F)SUPPORT (S)SOPORTE					
	90121248	.	.	B	B	B	S	S	S		RH 1					
	[05]	(E)NUT-HEXAGON LOCK (D)MUTTER									(F)ECROU (S)TUERCA					
	08311-18083	.	.	B	B	B	S	S	S		2					
	[06]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO					
	09100-08009	.	.	B	B	B	S	S	S		2					
	[07]	(E)WASHER-PLAIN (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA					
	09160-08005	.	.	B	B	B	S	S	S		2					
	[08]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO					
	09117-08003	.	.	B	B	B	S	S	S		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

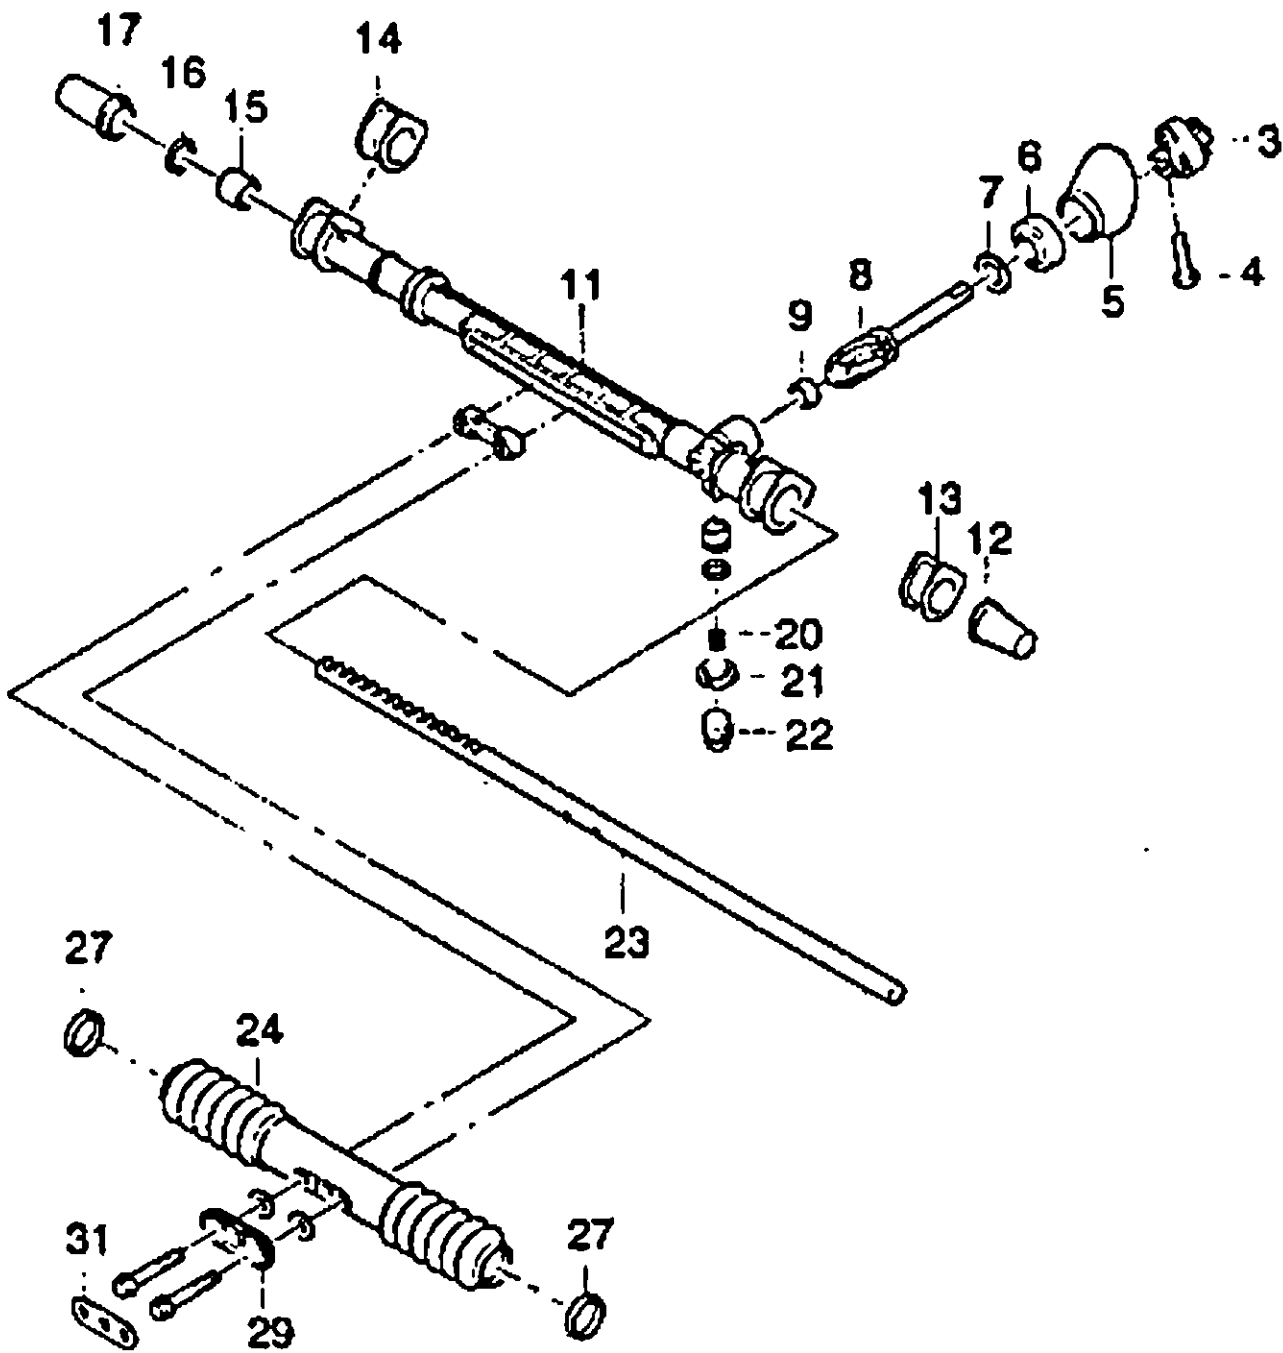


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)SHORT GEAR A (D)KURZ GETRIEBE									(F)ENGRENAGE COURT (S)ENGRANAJE CORTO				
	520558	. . B B B S S . &N51									1				
	[03]	(E)COUPLING A-FLANGE&STRG (D)KUPPLUNG,FLANSCH&LENKUNG									(F)ACCOUPLEMENT (S)ACOPLAMIENTO				
	520689	. . B B B S S . &N51									1				
	[04]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09117-08003	. . B B B S S . &N51									1				
	[05]	(E)SEAL-DASH RUBBER (D)DICHTUNG									(F)JOINT (S)SELLO-GOMA SALPICADERO				
	07848183	. . B B B S S . &N51									1				
	[06]	(E)SEAL-PINION (D)DICHTUNG,RITZEL									(F)JOINT-PIGNON (S)SELLO-PIÑON				
	07819410	. . B B B S S . &N51									1				
	[07]	(E)RING-RETAINING (D)RING,HALTER									(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR				
	05684948	. . B B B S S . &N51									1				
	[08]	(E)PINION-BEARING (D)RITZEL,LAGER									(F)PIGNON-ROULEMENT (S)PIÑON-COJINETE				
	520758	. . B B B S S . &N51									1				
	[09]	(E)BEARING-ROLLER (D)ROLLENLAGER									(F)ROULEMENT-ROULEAU (S)COJINETE-RUEDECILLA				
	07819358	. . B B B S S . &N51									1				
	[11]	(E)HOUSING-RACK&PINION (D)GEHÄUSE									(F)LOGEMENT (S)CARCASA				
	26026617	. . B B B S S . &N51									1				
	[12]	(E)COVER-HOUSING END (D)DECKEL,GEHÄUSE-ENDE									(F)COUVERCLE (S)CUBIERTA				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							



1

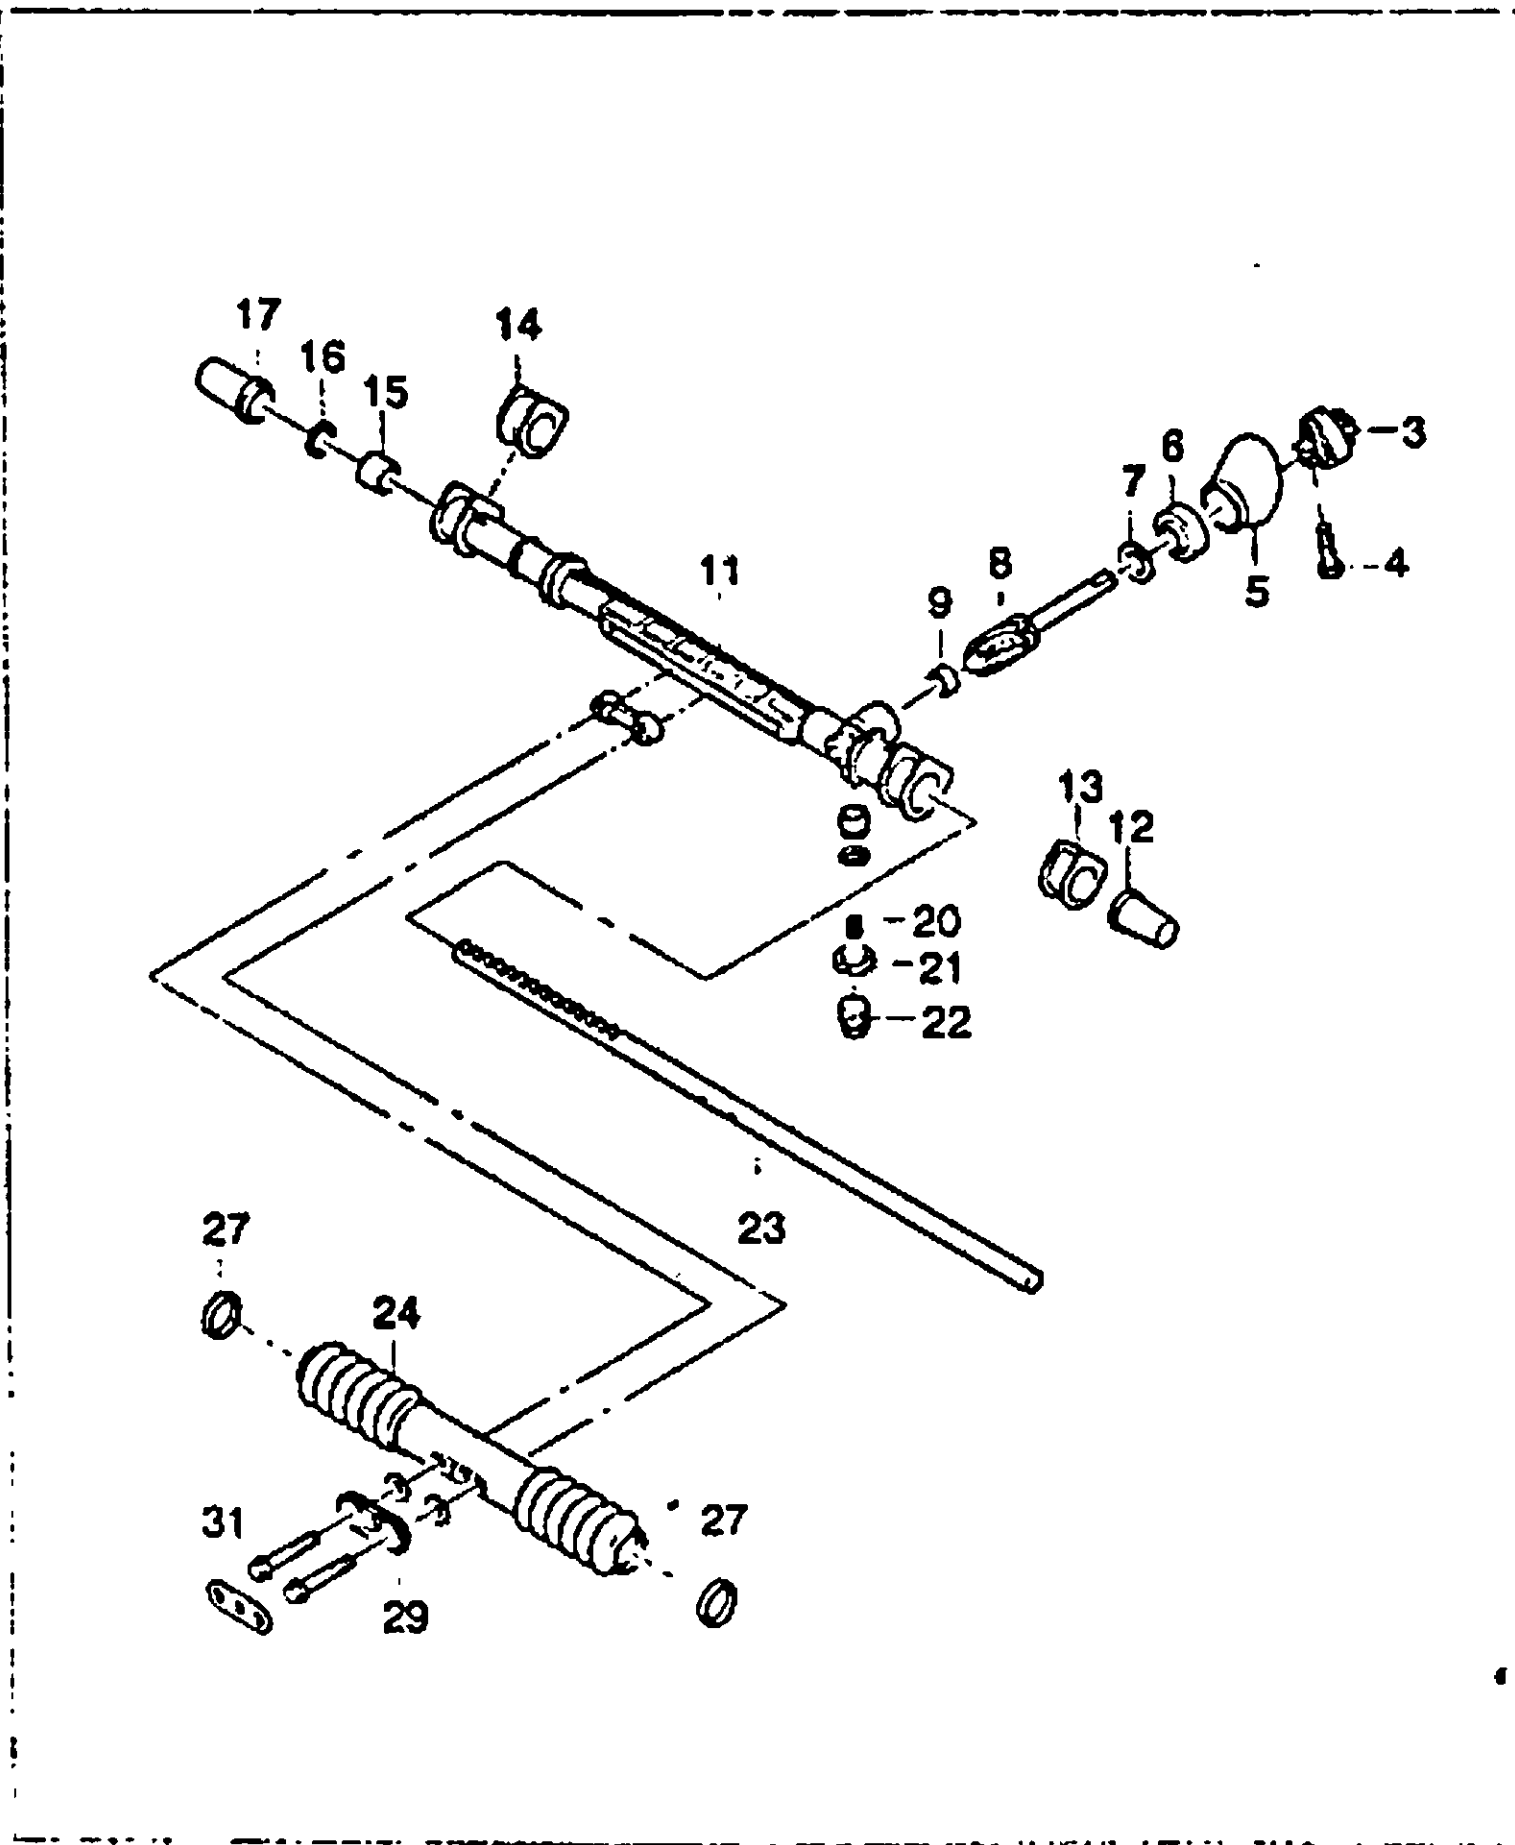



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	07849949	.	.	B	B	B	S	S	.	&N51	1					
	[13]	(E)GROMMET-MOUNTING								(F)VIROLE-MONTAGE						
		(D)ÖSE,MONTAGE								(S)AISLANTE-MONTAJE						
	26000626	.	.	B	B	B	S	S	.	&N51	1					
	[14]	(E)GROMMET-MOUNTING								(F)VIROLE-MONTAGE						
		(D)ÖSE,MONTAGE								(S)AISLANTE-MONTAJE						
	07848188	.	.	B	B	B	S	S	.	&N51	1					
	[15]	(E)BUSHING-RACK								(F)MANCHON-CREMAILLE						
		(D)LAGERFUTTER,ZAHNSTANGE								(S)BUJE						
	07834425	.	.	B	B	B	S	S	.	&N51	1					
	[16]	(E)RING-RETAINING								(F)ANNEAU-DE RETENTION						
		(D)RING,HALTER								(S)ANILLO-RETENEDOR						
	07834429	.	.	B	B	B	S	S	.	&N51	1					
	[17]	(E)COVER-HOUSING END								(F)COUVERCLE						
		(D)DECKEL,GEHÄUSE-ENDE								(S)CUBIERTA						
	07849987	.	.	B	B	B	S	S	.	&N51	1					
	[20]	(E)SPRING-ADJUSTER								(F)RESSORT-AJUSTEUR						
		(D)FEDERUNG,RICHTER								(S)RESORTE-AJUSTADOR						
	07819378	.	.	B	B	B	S	S	.	&N51	1					
	[21]	(E)NUT-ADJUSTER PLUG LOCK								(F)ECROU						
		(D)MUTTER								(S)TUERCA						
	07834434	.	.	B	B	B	S	S	.	&N51	1					
	[22]	(E)PLUG-ADJUSTER								(F)BOUCHON						
		(D)STÖPSEL								(S)TAPON						
	07834435	.	.	B	B	B	S	S	.	&N51	1					
	[23]	(E)RACK-STEERING								(F)CREMAILLE-DIRECTION						
		(D)GESTELL,LENKUNG								(S)ENGRANAJE DE CREMALLERA						
	07849959	.	.	B	B	B	S	S	.	&N51	1					
ENG(ENGINE)		T/A(TRANSAXLE)								BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON								4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

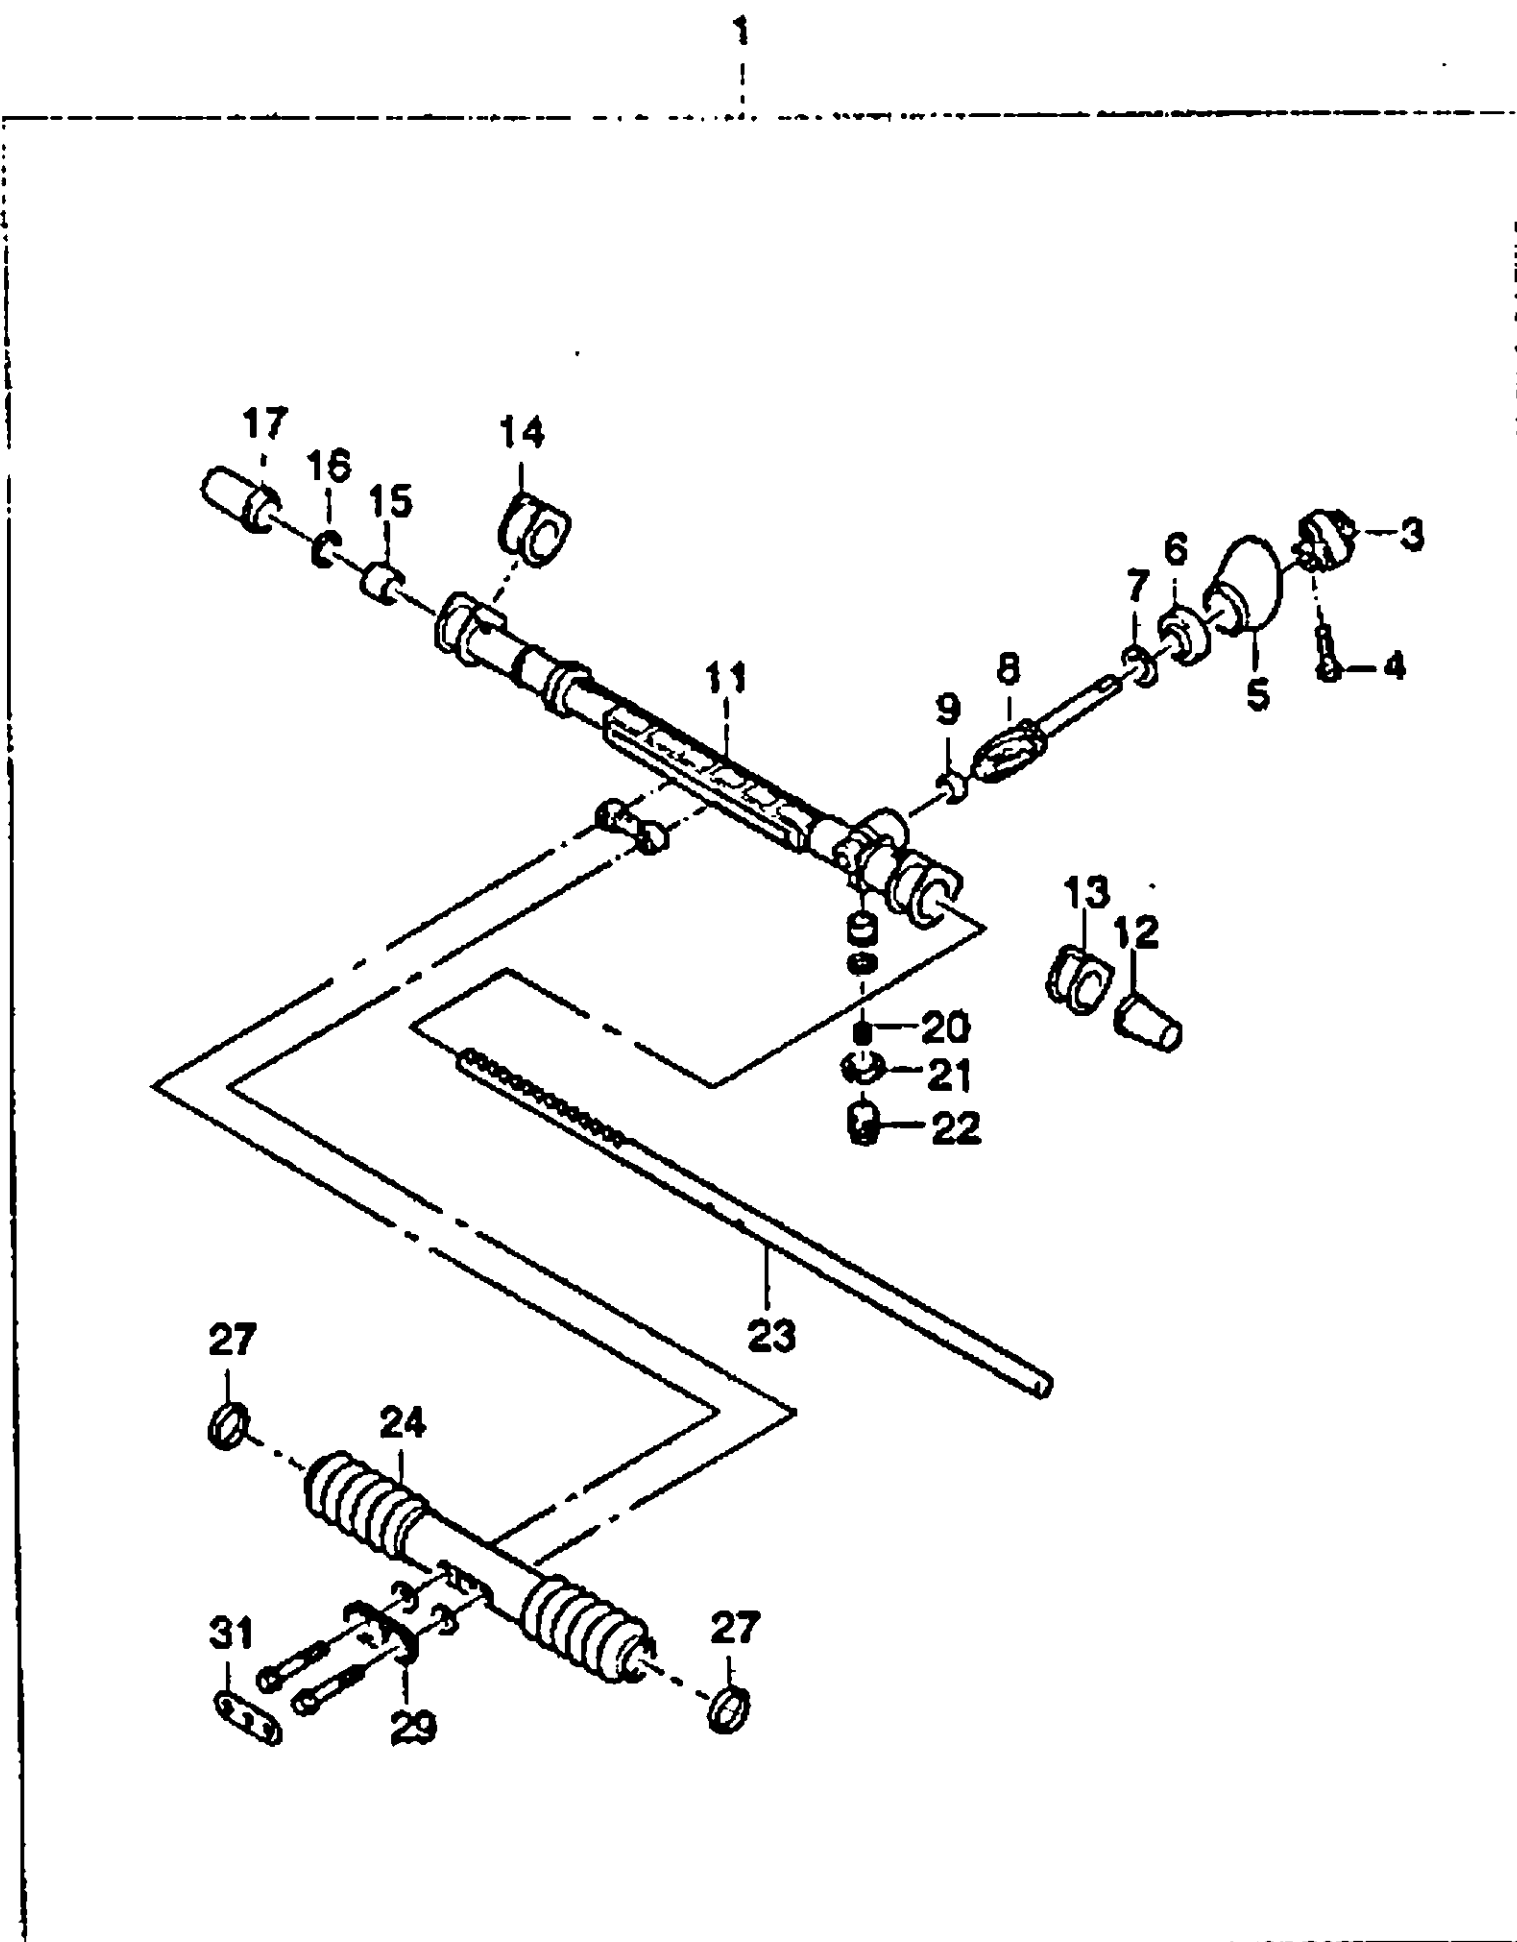


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[24] 26021070	(E)BOOT-RACK&PINION (D)KOFFERRAUM . . B B B S S . &N51									(F)GAINE (S)CAPUCHON 1					
	[27] 26021589	(E)CLAMP-SEAL RETAINING (D)KLAMMER . . B B B S S . &N51									(F)PINCE (S)ABRAZADERA 2					
	[29] 26001550	(E)PLATE-DISTANCE (D)PLATTE,ABSTAND . . B B B S S . &N51									(F)PLAQUE-DISTANCE (S)PLACA-DISTANCIA 1					
	[31] 26001761	(E)PLATE-LOCKING (D)PLATTE,VERRIEGELUNG . . B B B S S . &N51									(F)PLAQUE-VERROUILLAGE (S)PLACA-CIERRE 1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

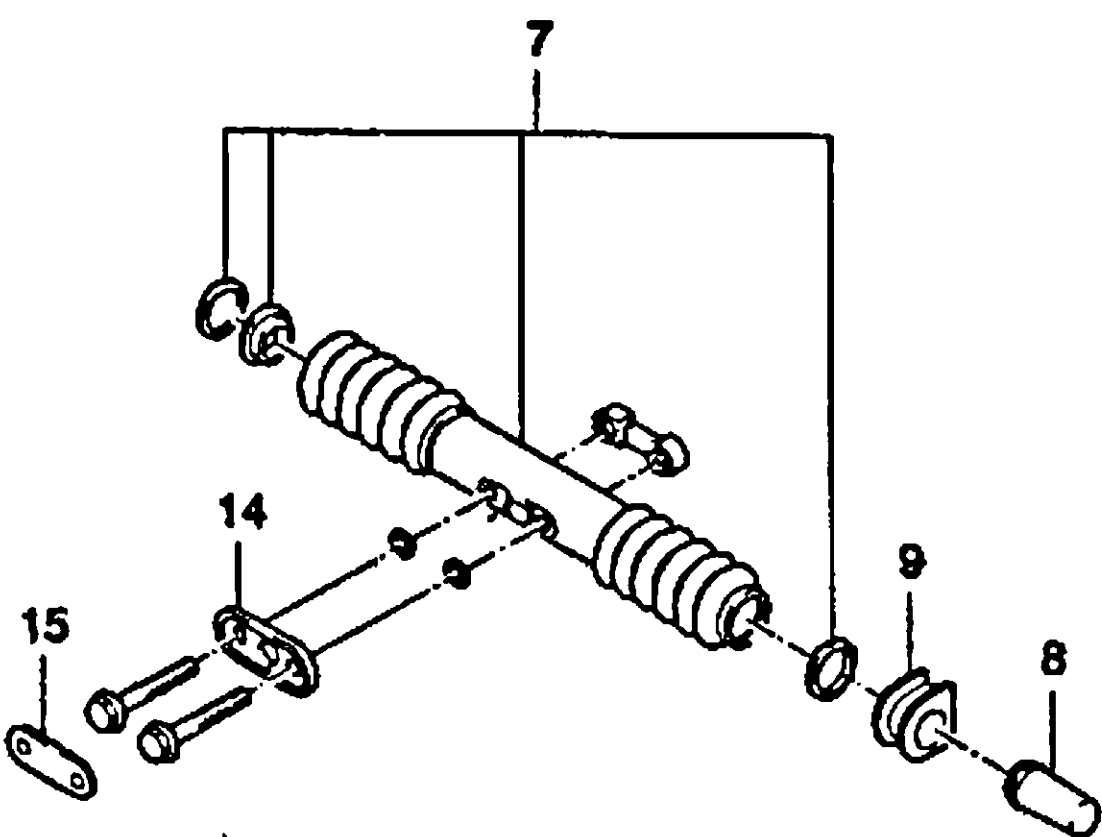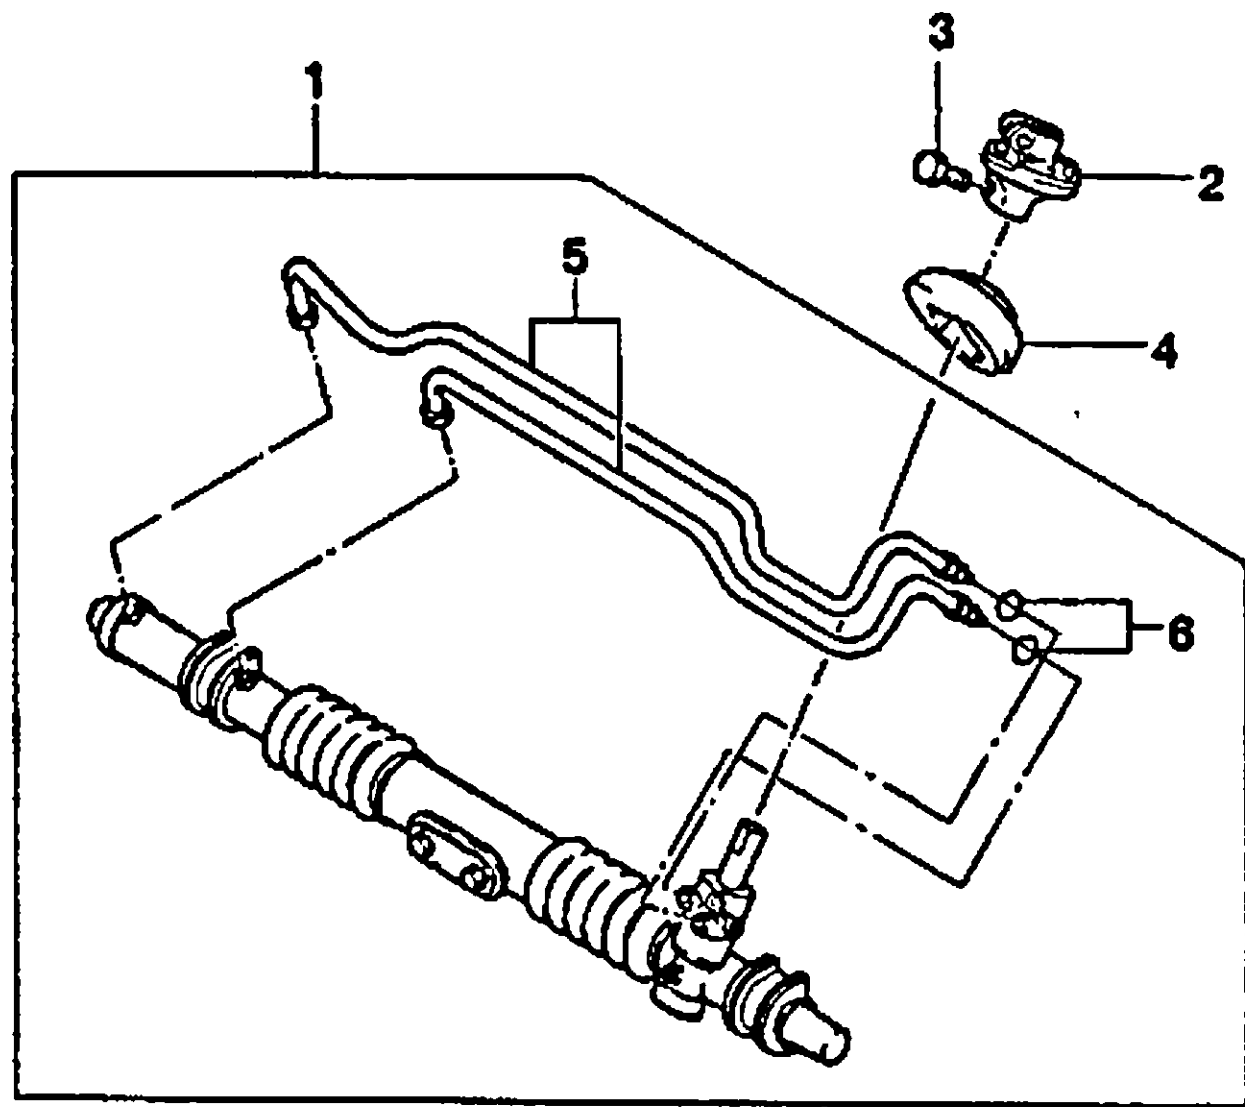


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E T N / G A	BODY			LEVEL					FROM	TO			
			4 N H	3 H	5 H	S S	S S								X
	[01]	(E)SHORT GEAR A (D)KURZ GETRIEBE									(F)ENGRENAGE COURT (S)ENGRANAJE CORTO				
	520533	. . B B B O O S &N40									1				
	[02]	(E)COUPLING-FLANGE&STEERING (D)KUPPLUNG,FLANSCH&LENKUNG									(F)ACCOUPLEMENT (S)ACOPLAMIENTO				
	520689	. . B B B O O S &N40									1				
	[03]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09117-08003	. . B B B O O S &N40									1				
	[04]	(E)SEAL-DASH RUBBER (D)DICHTUNG									(F)JOINT (S)SELLO-GOMA SALPICADERO				
	26013593	. . B B B O O S &N40									1				
	[05]	(E)LINE KIT-CYLINDER (D)AUSKLEIDUNGS,ZYLINDER									(F)TROUSSE DE LIGNE-CYLINDRE (S)JUEGO DE LINEA-CILINDRO				
	26020486	. . B B B O O S &N40									1				
	[06]	(E)O RING (D)O RING									(F)JOINT TORIQUE (S)ANILLO EN O				
	26005047	. . B B B O O S &N40									2				
	[07]	(E)BOOT KIT (D)KOFFERRAUM-SATZ									(F)TROUSSE DE GANE (S)JUEGO DE BOTA				
	26024585	. . B B B O O S &N40									1				
	[08]	(E)COVER-HOUSING END (D)DECKEL,GEHÄUSE-ENDE									(F)COUVERCLE (S)CUBIERTA				
	07849949	. . B B B O O S &N40									1				
	[09]	(E)GROMMET-MOUNTING (D)ÖSE,MONTAGE									(F)VIROLE-MONTAGE (S)AISLANTE-MONTAJE				
	26000626	. . B B B O O S &N40								LH	1				
	07848187	. . B B B O O S &N40								RH	1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

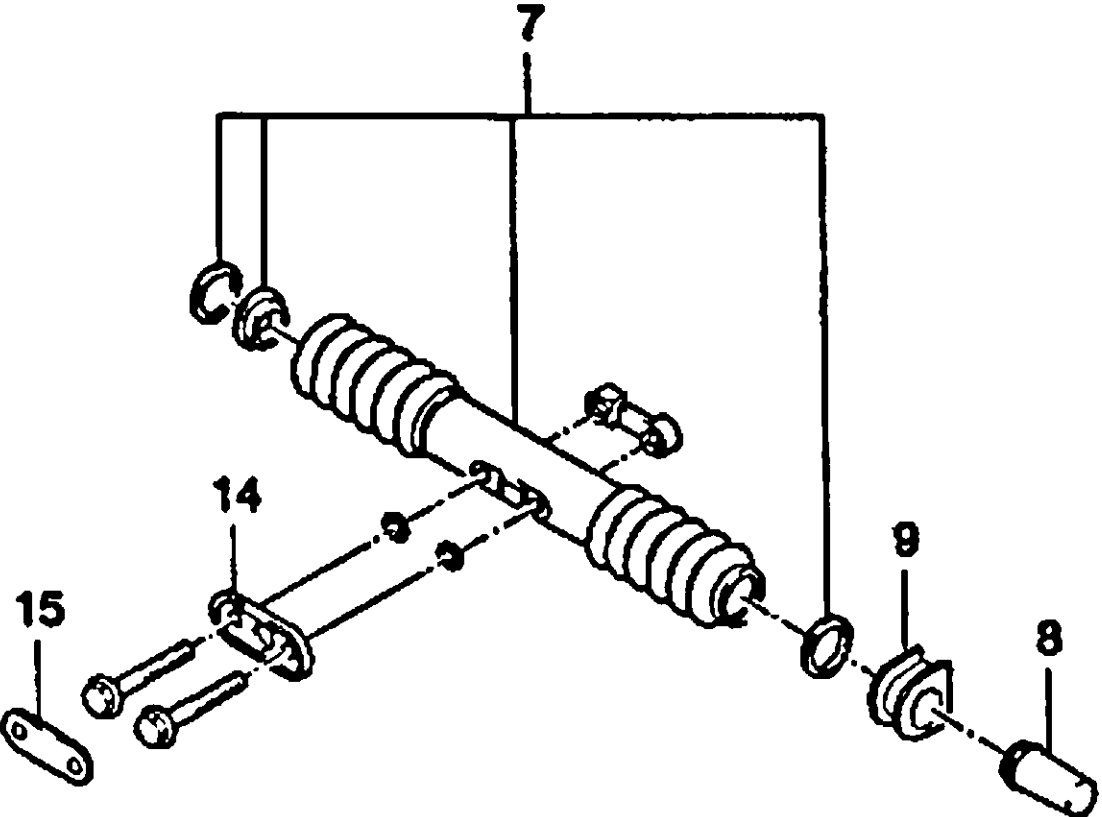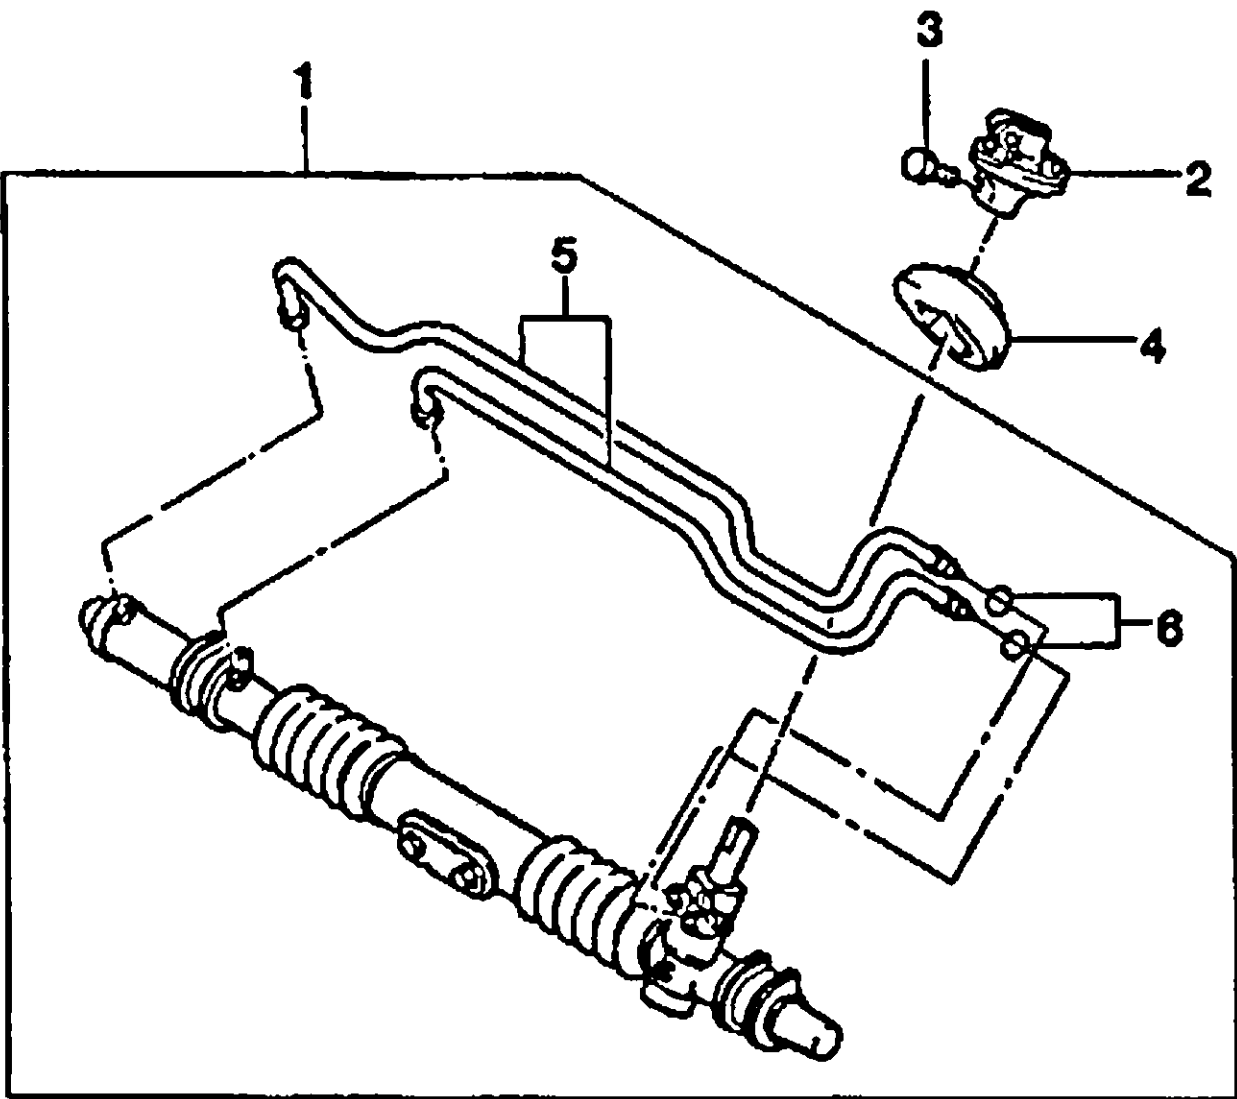


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	[14] 26001550	(E)PLATE-DISTANCE (D)PLATTE,ABSTAND . . B B B O O S	&N40					(F)PLAQUE-DISTANCE (S)PLACA-DISTANCIA 1							
	[15] 26001761	(E)PLATE-LOCKING (D)PLATTE,VERRIEGELUNG . . B B B O O S	&N40					(F)PLAQUE-VERROUILLAGE (S)PLACA-CIERRE 1							
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

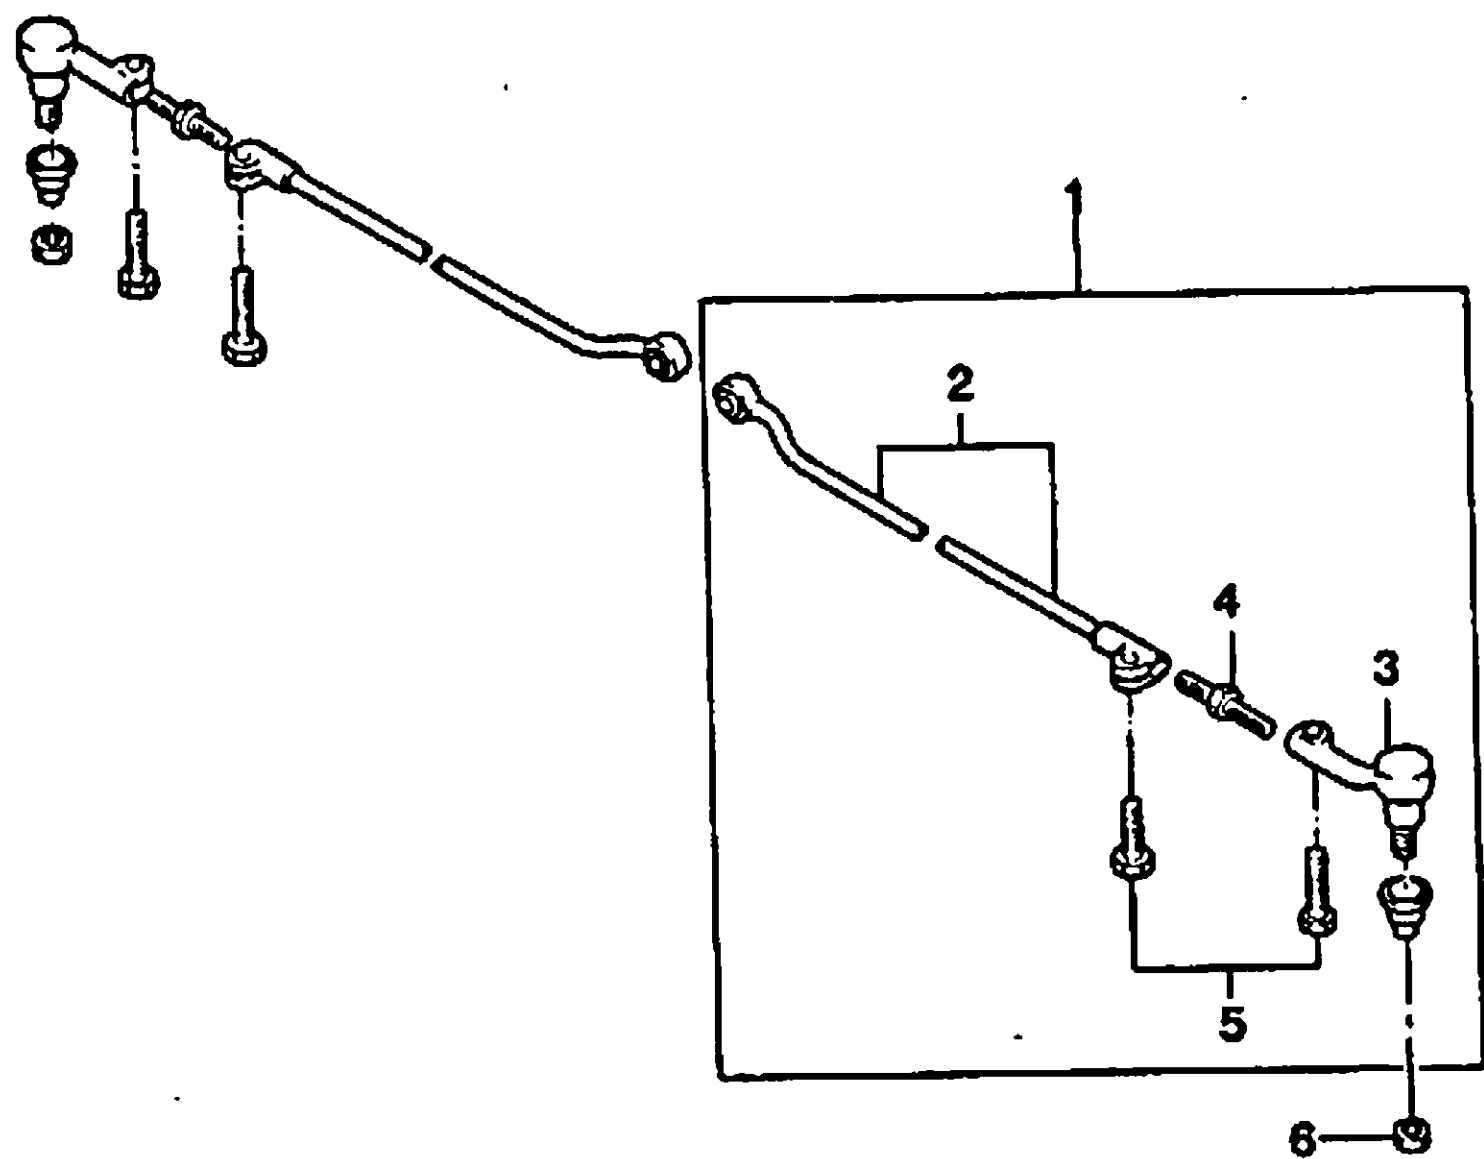


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N / G	T A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01]	(E)ROD A-TIE (D)VERBINDUNGSSTANGE									(F)TRINGLE-BARRE (S)VARILLA-AMARRE					
	07846481	.	.	B	B	B	S	S	.	&N51	LH	1	970716			
	07846481	.	.	B	B	B	S	S	.	&N51-F40	LH	1	970716			
	96255510	.	.	B	B	B	A	A	.	&N51&F40	LH	1	970716			
	07846480	.	.	B	B	B	S	S	.	&N51	RH	1	970716			
	07846480	.	.	B	B	B	S	S	.	&N51-F40	RH	1	970716			
	96255511	.	.	B	B	B	A	A	.	&N51&F40	RH	1	970716			
	96216616	.	.	B	B	B	O	O	S	&N40	LH	1	970716			
	96216616	.	.	B	B	B	O	O	S	&N40-F40	LH	1	970716			
	96255508	.	.	B	B	B	A	A	A	&N40&F40	LH	1	970716			
	96216620	.	.	B	B	B	O	O	S	&N40	RH	1	970716			
	96216620	.	.	B	B	B	O	O	S	&N40-F40	RH	1	970716			
	96255509	.	.	B	B	B	A	A	A	&N40&F40	RH	1	970716			
	[02]	(E)ROD-TIE (D)VERBINDUNGSSTANGE									(F)TRINGLE-BARRE (S)VARILLA-AMARRE					
	07848281	.	.	B	B	B	S	S	.	&N51	LH	1				
	07848282	.	.	B	B	B	S	S	.	&N51	RH	1				
	96216618	.	.	B	B	B	O	O	S	&N40	LH	1				
	96216622	.	.	B	B	B	O	O	S	&N40	RH	1				
	[03]	(E)HEAD END A-TIE ROD (D)SPURSTANGENKOPF									(F)BIELLETTTE DE DIRECTION (S)CABEZA DE RÓTULA					
	07846496	.	.	B	B	B	S	S	S		LH	1	970716			
	07846495	.	.	B	B	B	S	S	S	-F40	LH	1	970716			
	96255512	.	.	B	B	B	A	A	A	&F40	LH	1	970716			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

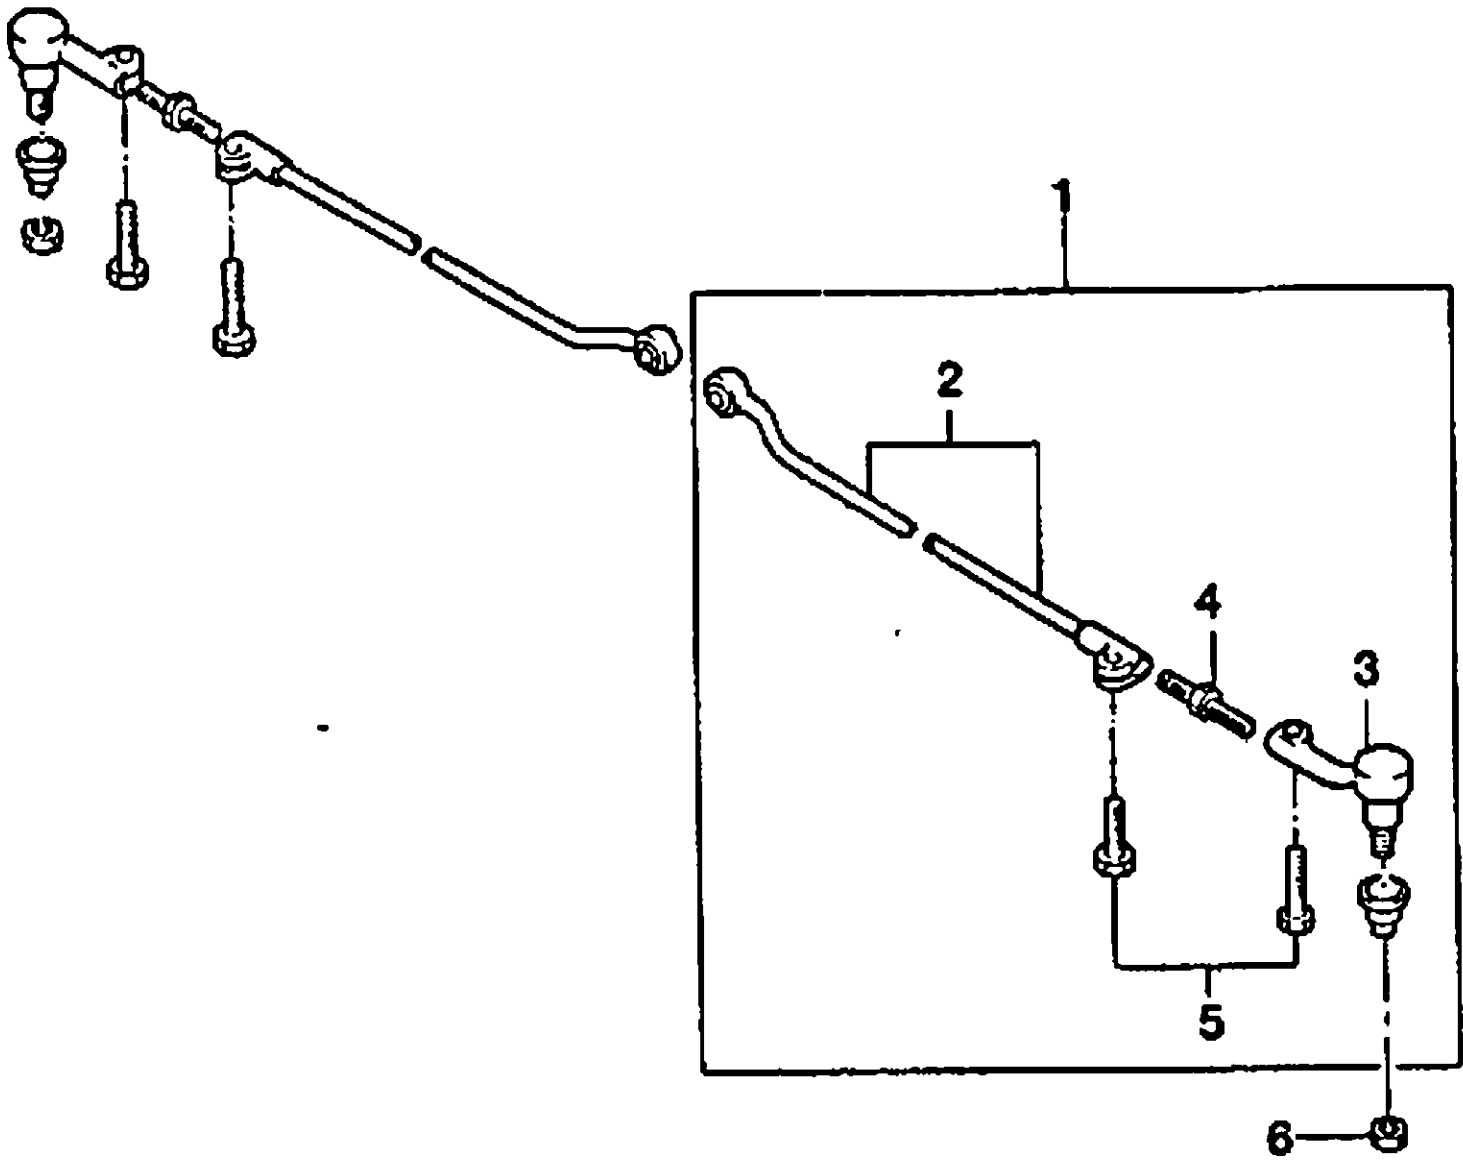

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N / G	T A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	07846485	.	.	B	B	B	S	S	S		RH 1	970716				
	07846485	.	.	B	B	B	S	S	S	-F40	RH 1	970716				
	96255513	.	.	B	B	B	S	S	S	&F40	RH 1	970716				
	[04]			(E)BOLT-ADJUSTER (D)SCHRAUBE								(F)BOULON (S)PERNO				
	07846696	.	.	B	B	B	S	S	S		1					
	[05]			(E)BOLT-HEXAGON (D)SCHRAUBE								(F)BOULON (S)PERNO				
	09100-08002	.	.	B	B	B	S	S	S		4					
	[06]			(E)NUT (D)MUTTER								(F)ECROU (S)TUERCA				
	09159-12010	.	.	B	B	B	S	S	S		2					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

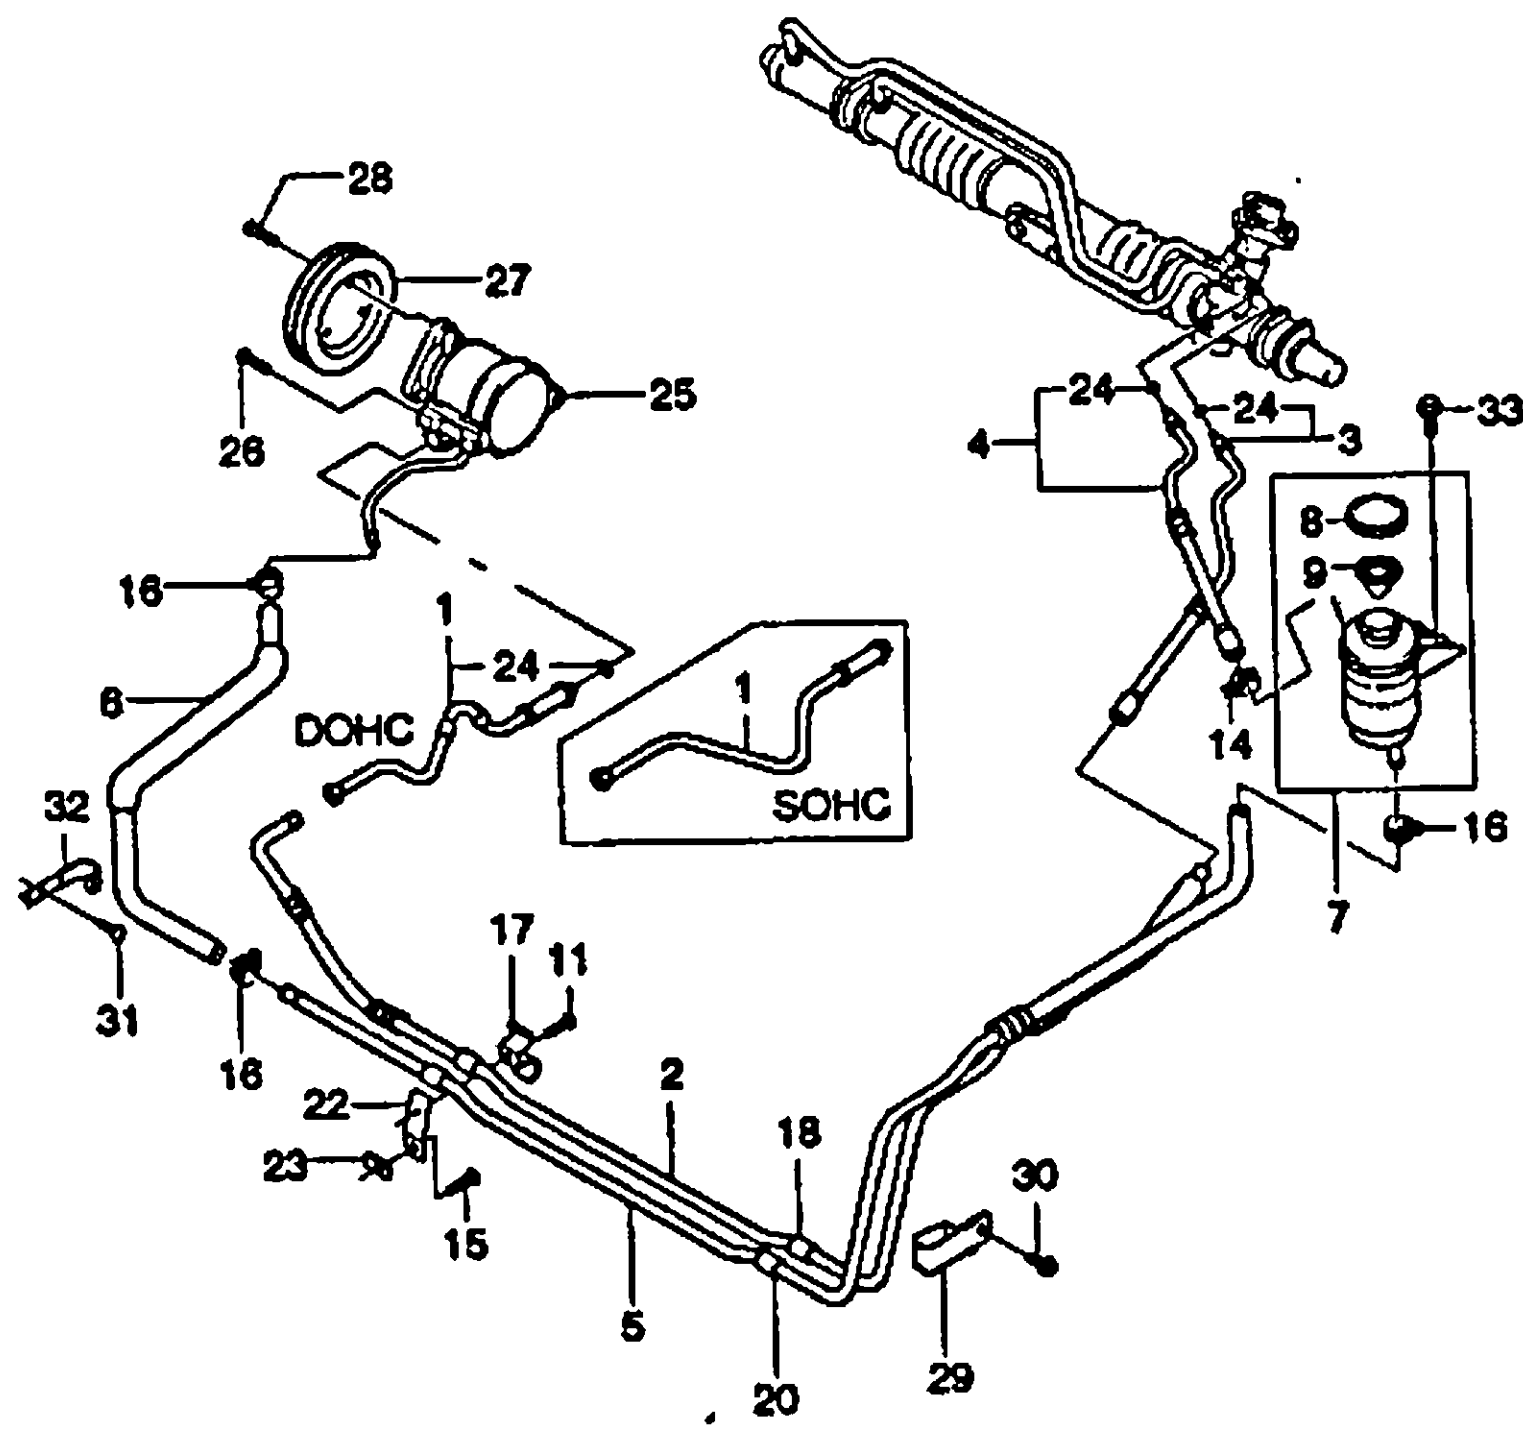


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E T N G	A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S E X									
	[01]	(E)PIPE A-HIGH PRESSURE,PUMP (D)ROHR								(F)TUYAU (S)TUBERIA						
	96304375	Y	.	B	B	B	O	O	S	&N40	1	970616				
O	96246614	Y	.	B	B	B	O	O	S	&N40	1	970616				
	96228670	6	.	B	B	B	.	.	O	&N40	1	970616				
O	96246615	6	.	B	B	B	.	.	O	&N40	1	970616				
	[02]	(E)HOSE A-ELASTIC,GEAR (D)SCHLAUCH,GUMMI,GETRIEBE								(F)TUYAU-ELASTIQUE,ENGRENAGE (S)MANGUERA-ELASTICA						
	96304383	.	.	B	B	B	O	O	S	&N40	1					
	[03]	(E)PIPE A-HIGH PRESSURE,GEAR (D)ROHR								(F)TUYAU (S)TUBERIA						
	96304381	.	.	B	B	B	O	O	S	&N40	1					
	[04]	(E)HOSE A-RETURN FLOW (D)SCHLAUCH,RÜCK-FLUß								(F)TUYAU-RETOUR ECOULEMENT (S)MANGUERA-FLUJO DE RETORNO						
	96304380	.	.	B	B	B	O	O	S	&N40	1					
	[05]	(E)HOSE A-SUCTION,RESERVOIR (D)SCHLAUCH,ANSAUGUNG								(F)TUYAU-ASPIRATION (S)MANGUERA-SUCCION						
	96232170	.	.	B	B	B	O	O	S	&N40	1	970901				
O	96264886	.	.	B	B	B	O	O	S	&N40	1	970901				
	[06]	(E)HOSE A-SUCTION LINE,PUMP (D)SCHLAUCH,SAUGLEITUNG								(F)TUYAU (S)MANGUERA-LINEA DE SUCCION						
	96304372	.	.	B	B	B	O	O	S	&N40	1					
	[07]	(E)RESERVOIR-POWER STRG OIL (D)BEHÄLTER,ÖL								(F)RESERVOIR-HUILE (S)RESERVA-ACEITE						
	96304394	.	.	B	B	B	O	O	S	&N40	1					
	[08]	(E)CAP-OIL RESERVOIR (D)DECKEL,ÖL-BEHÄLTER								(F)CHAPEAU-RESERVOIR D'HUILE (S)TAPA-RESERVA DE ACEITE						
	96304395	.	.	B	B	B	O	O	S	&N40	1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

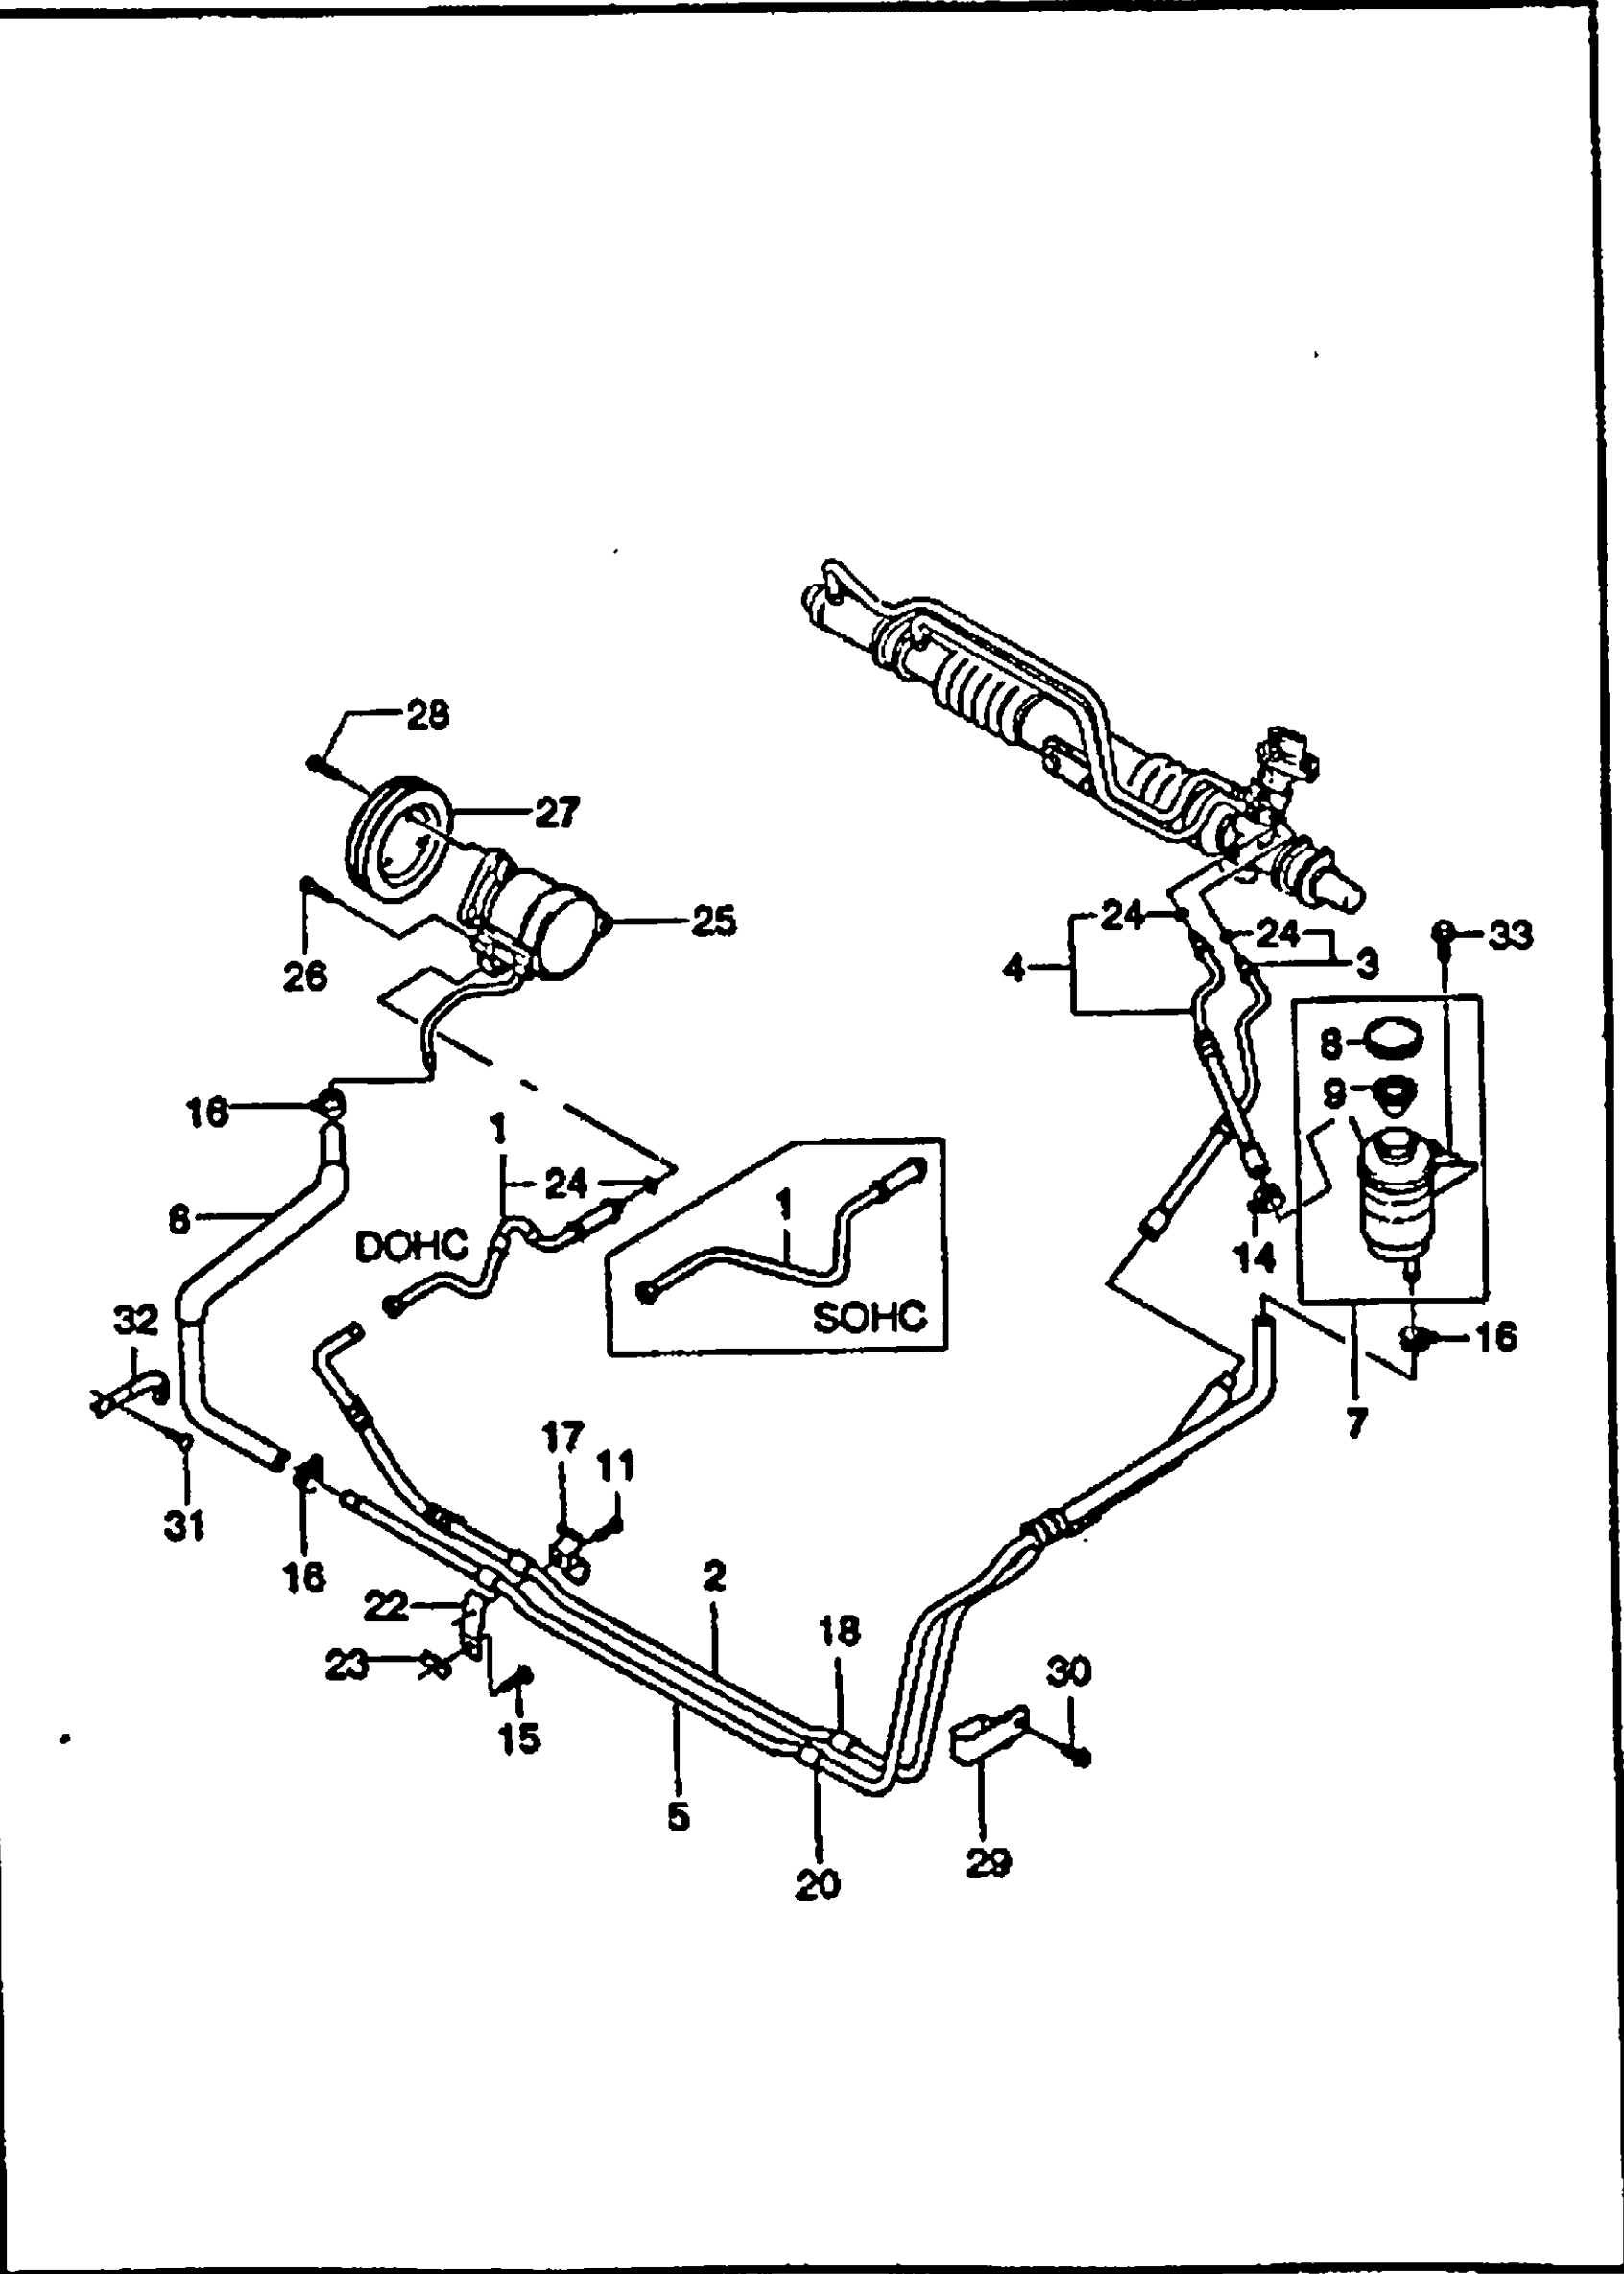


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E T N / G A	BODY			LEVEL					FROM	TO			
			4 N	3 H	5 H	S	S								S
	[09]	(E)SHIELD-OL RESERVOIR (D)SCHILD									(F)BOUCLIER (S)ESCUDO				
	96226875	.	.	B	B	B	O	O	S	&N40		1			
	[11]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03110-48133	.	.	B	B	B	O	O	S	&N40		2			
	[14]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA				
	09401-17401	.	.	B	B	B	O	O	S	&N40		1			
	[15]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	09139-06005	.	.	B	B	B	O	O	S	&N40		2			
	[16]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA				
	09401-21401	.	.	B	B	B	O	O	S	&N40		3			
	[17]	(E)CLAMP (D)KLAMMER									(F)PINCE (S)ABRAZADERA				
	90217449	.	.	B	B	B	O	O	S	&N40	.	2	970901		
O	96254889	.	.	B	B	B	O	O	S	&N40		2	970901		
	[18]	(E)GROMMET (D)ÖSE									(F)VIROLE (S)AISLANTE				
	09308-10006	.	.	B	B	B	O	O	S	&N40		3			
	[20]	(E)GROMMET (D)ÖSE									(F)VIROLE (S)AISLANTE				
	09308-16001	.	.	B	B	B	O	O	S	&N40		3			
	[22]	(E)BRACKET (D)TRÄGER									(F)SUPPORT (S)SOPORTE				
	96228671	.	.	B	B	B	O	O	S	&N40		2	970901		

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

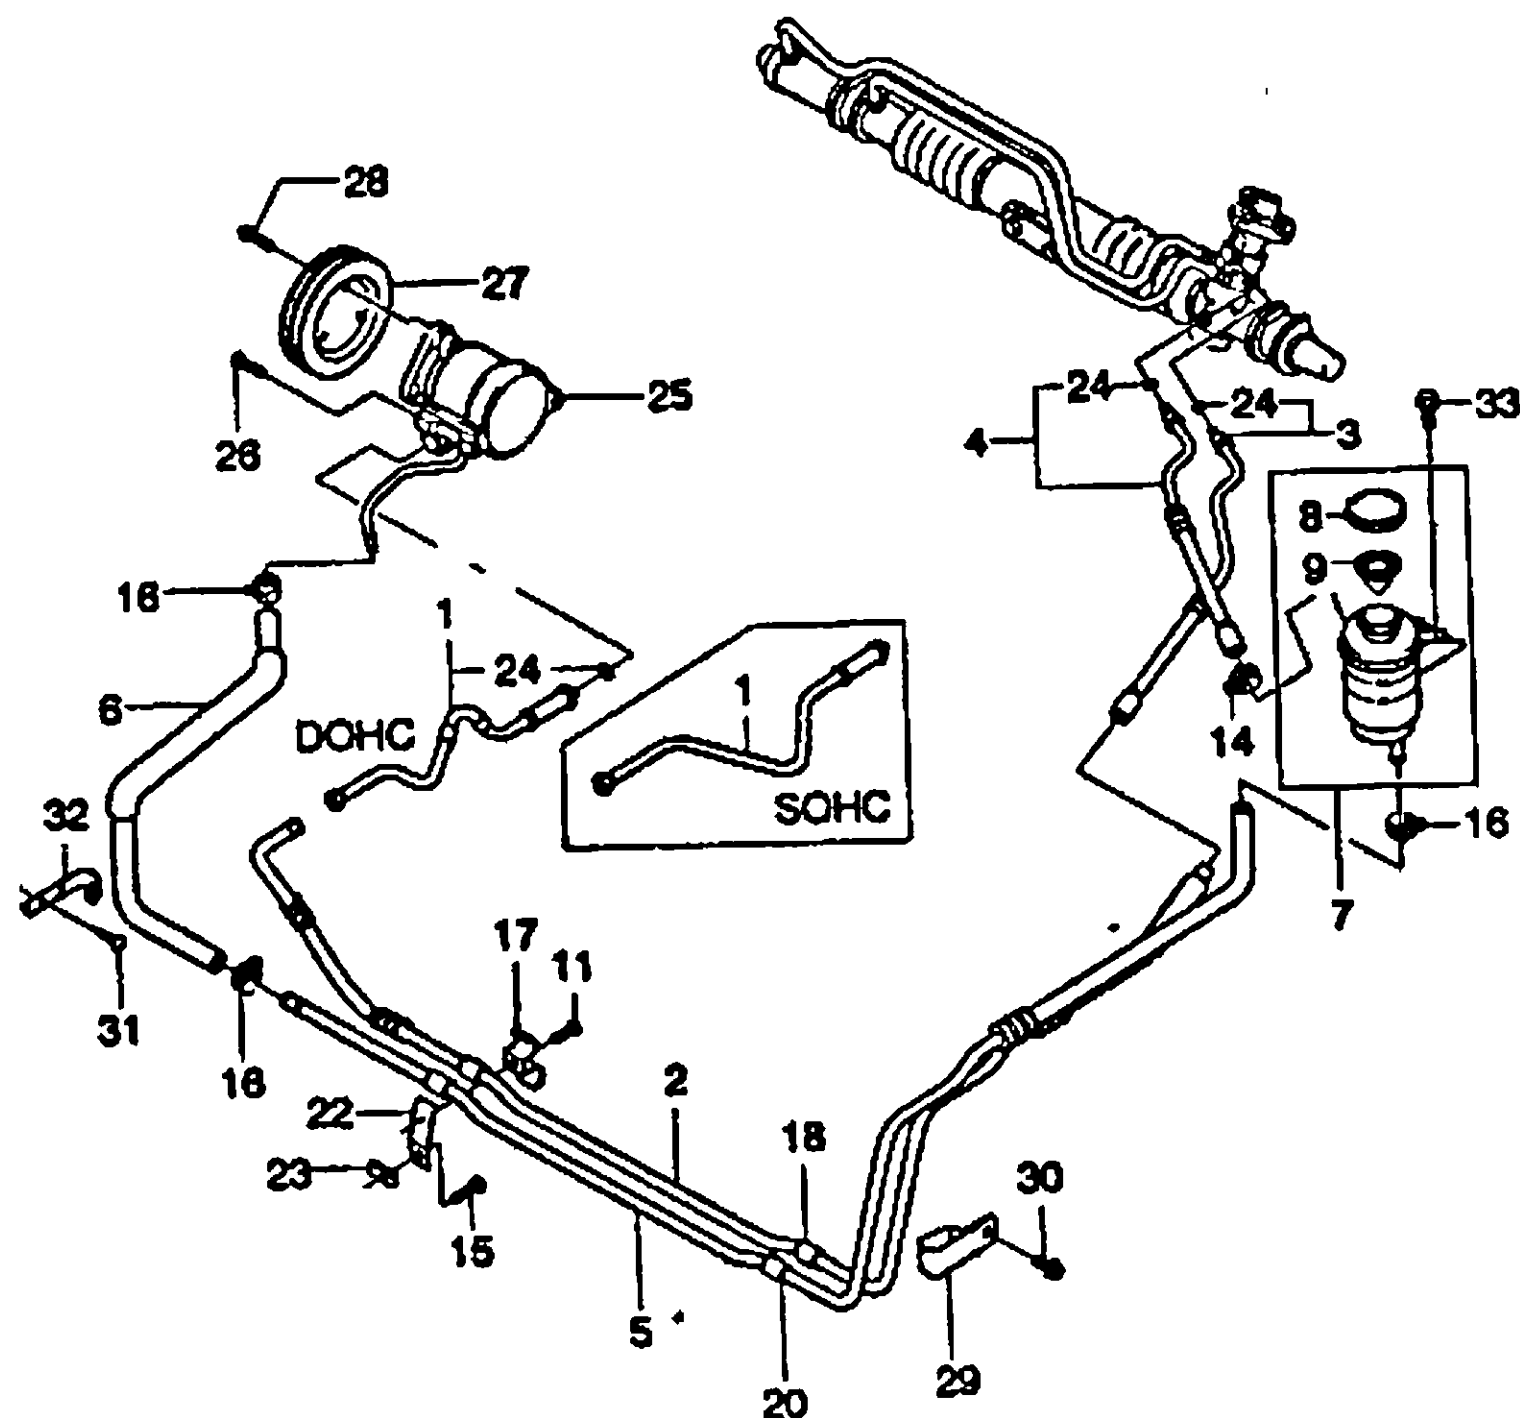


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N / G	T A	BODY			LEVEL				FROM	TO			
				4 N H	3 H	5 H	S S								S S
O	96254887	.	.	B	B	B	O	O	S	&N40	2	970901			
	[23]			(E)NUT-SPEED							(F)ECROU				
				(D)MUTTER							(S)TUERCA				
	09148-06012	.	.	B	B	B	O	O	S	&N40	2				
	[24]			(E)ORING							(F)JOINT TORIQUE				
				(D)ORING							(S)ANILLO EN O				
	09280-07001	.	.	B	B	B	O	O	S	&N40	3				
	[25]			(E)PUMP A-POWER STEERING							(F)POMPE-UNITE HYDRAULIQUE				
				(D)PUMPE, HYDRAULIK EINHEIT							(S)BOMBA-UNIDAD HIDRAULICA				
	96230842	.	.	B	B	B	O	O	S	&N40	1			TR	
	[26]			(E)BOLT-HEXAGON							(F)BOULON				
				(D)SCHRAUBE							(S)PERNO				
	01103-08703	.	.	B	B	B	O	O	S	&N40	2				
	[27]			(E)PULLEY-HYDRAULIC PUMP							(F)POULIE-POMPE HYDRAULIQUE				
				(D)ROLLE, HYDRAULIK PUMPE							(S)POLEA-BOMBA HIDRAULICA				
	90299071	.	.	B	B	B	O	O	S	&N40	1				
	[28]			(E)BOLT-HEXAGON							(F)BOULON				
				(D)SCHRAUBE							(S)PERNO				
	09100-08003	.	.	B	B	B	O	O	S	&N40	3				
	[29]			(E)CLAMP							(F)PINCE				
				(D)KLAMMER							(S)ABRAZADERA				
	96248572	.	.	B	B	B	O	O	S	&N40	1				
	[30]			(E)BOLT							(F)BOULON				
				(D)SCHRAUBE							(S)PERNO				
	09116-08008	.	.	B	B	B	O	O	S	&N40	1				
	[31]			(E)SCREW-TAPPING							(F)VIS				
				(D)SCHRAUBE							(S)TORNILLO				
	03110-48133	.	.	B	B	B	O	O	S	&N40	1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

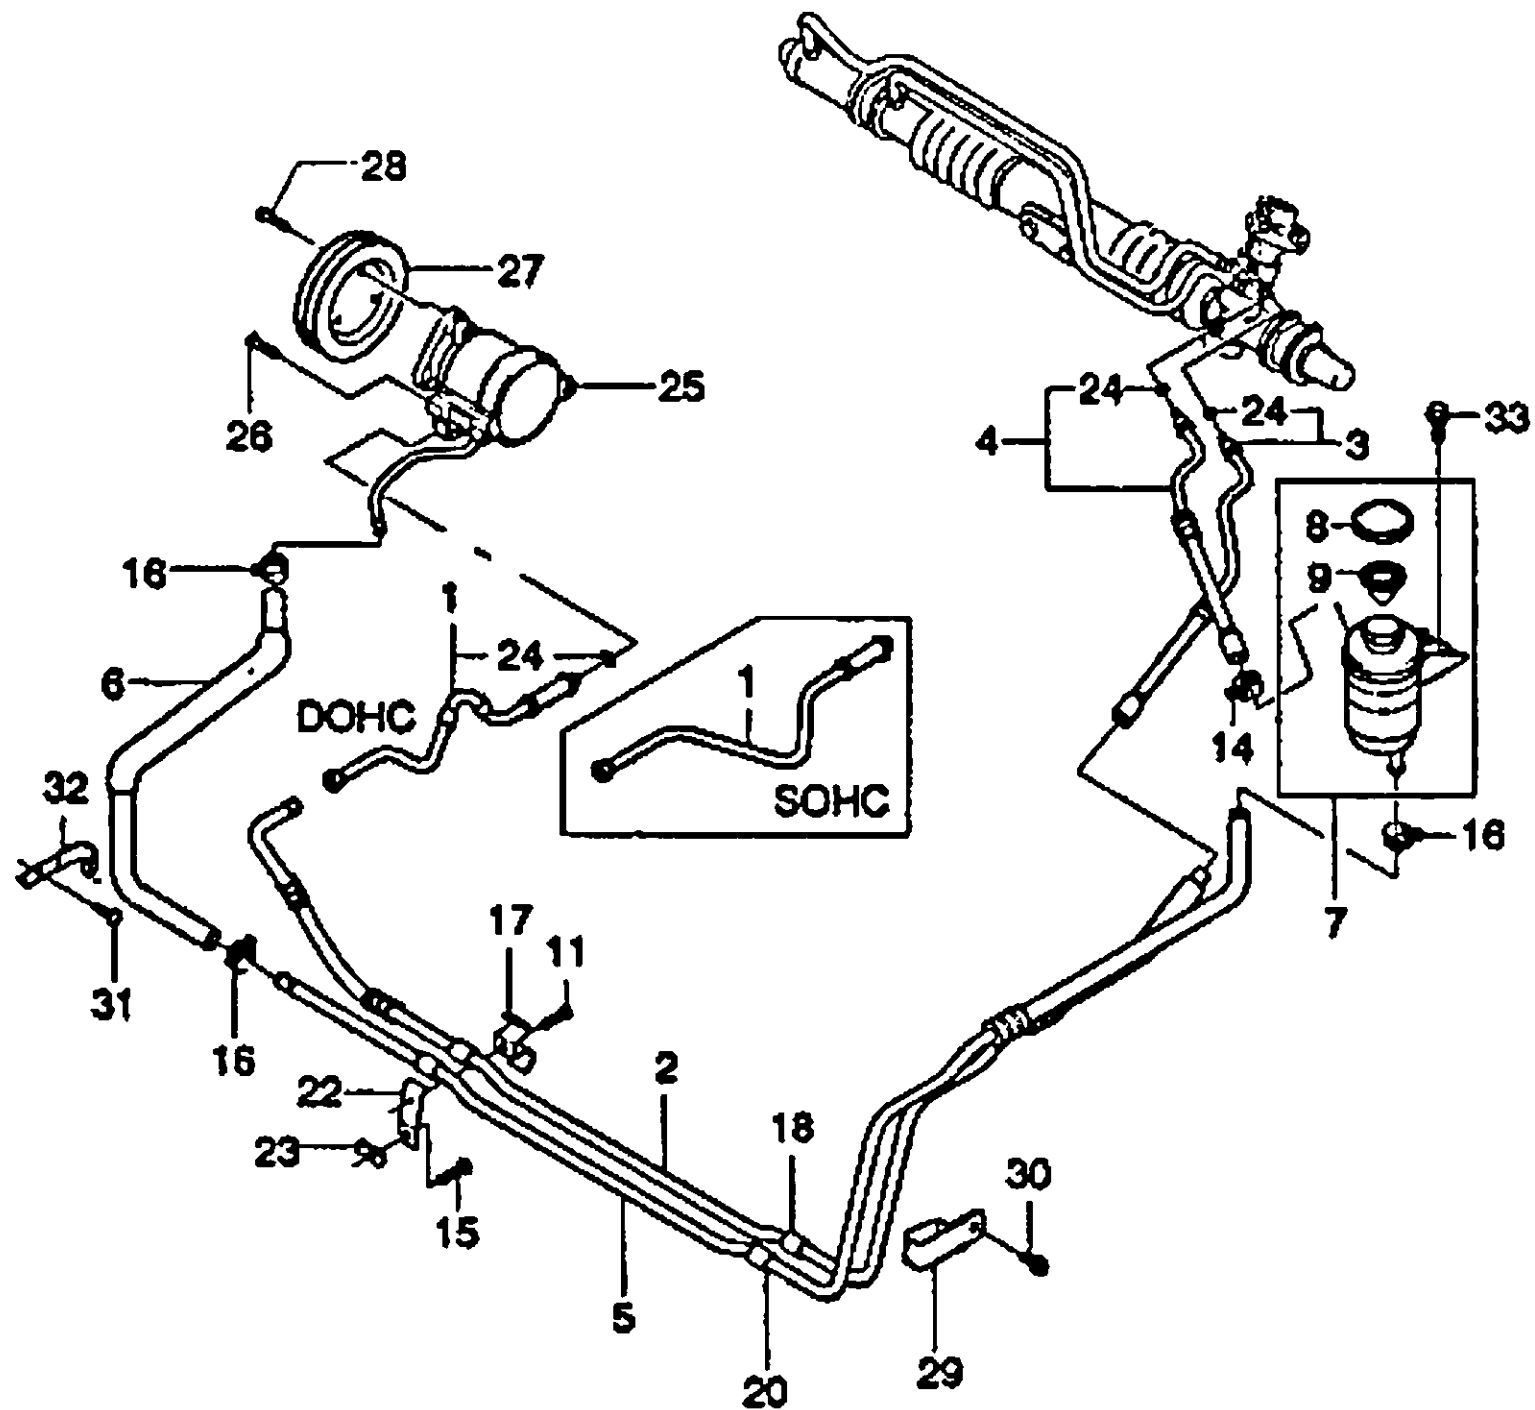

KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S E								S X
	[32] 09403-26301	(E)CLAMP (D)KLAMMER	.	.	B	B	B	O	O	S	&N40		(F)PINCE (S)ABRAZADERA 1			
	[33] 09116-06011	(E)BOLT (D)SCHRAUBE	.	.	B	B	B	O	O	S	&N40		(F)BOULON (S)PERNO 2			

5**ELECTRICAL EQUIPMENTS**


- 5110 FRONT LAMP
- 5140 REAR LAMP(N/B)
- 5141 REAR LAMP(H/B)
- 5220 INSTRUMENT CLUSTER
- 5310 WINDSHIELD WIPER
- 5320 BACK WINDOW WIPER
- 5330 WINDSHIELD WASHER
- 5410 ELECTRICAL PARTS
- 5420 ANTENNA
- 5430 AUDIO SYSTEM
- 5510 AIR BAG SYSTEM
- 5610 BATTERY
- 5620 FUSE & RELAY
- 5710 WIRING HARNESS

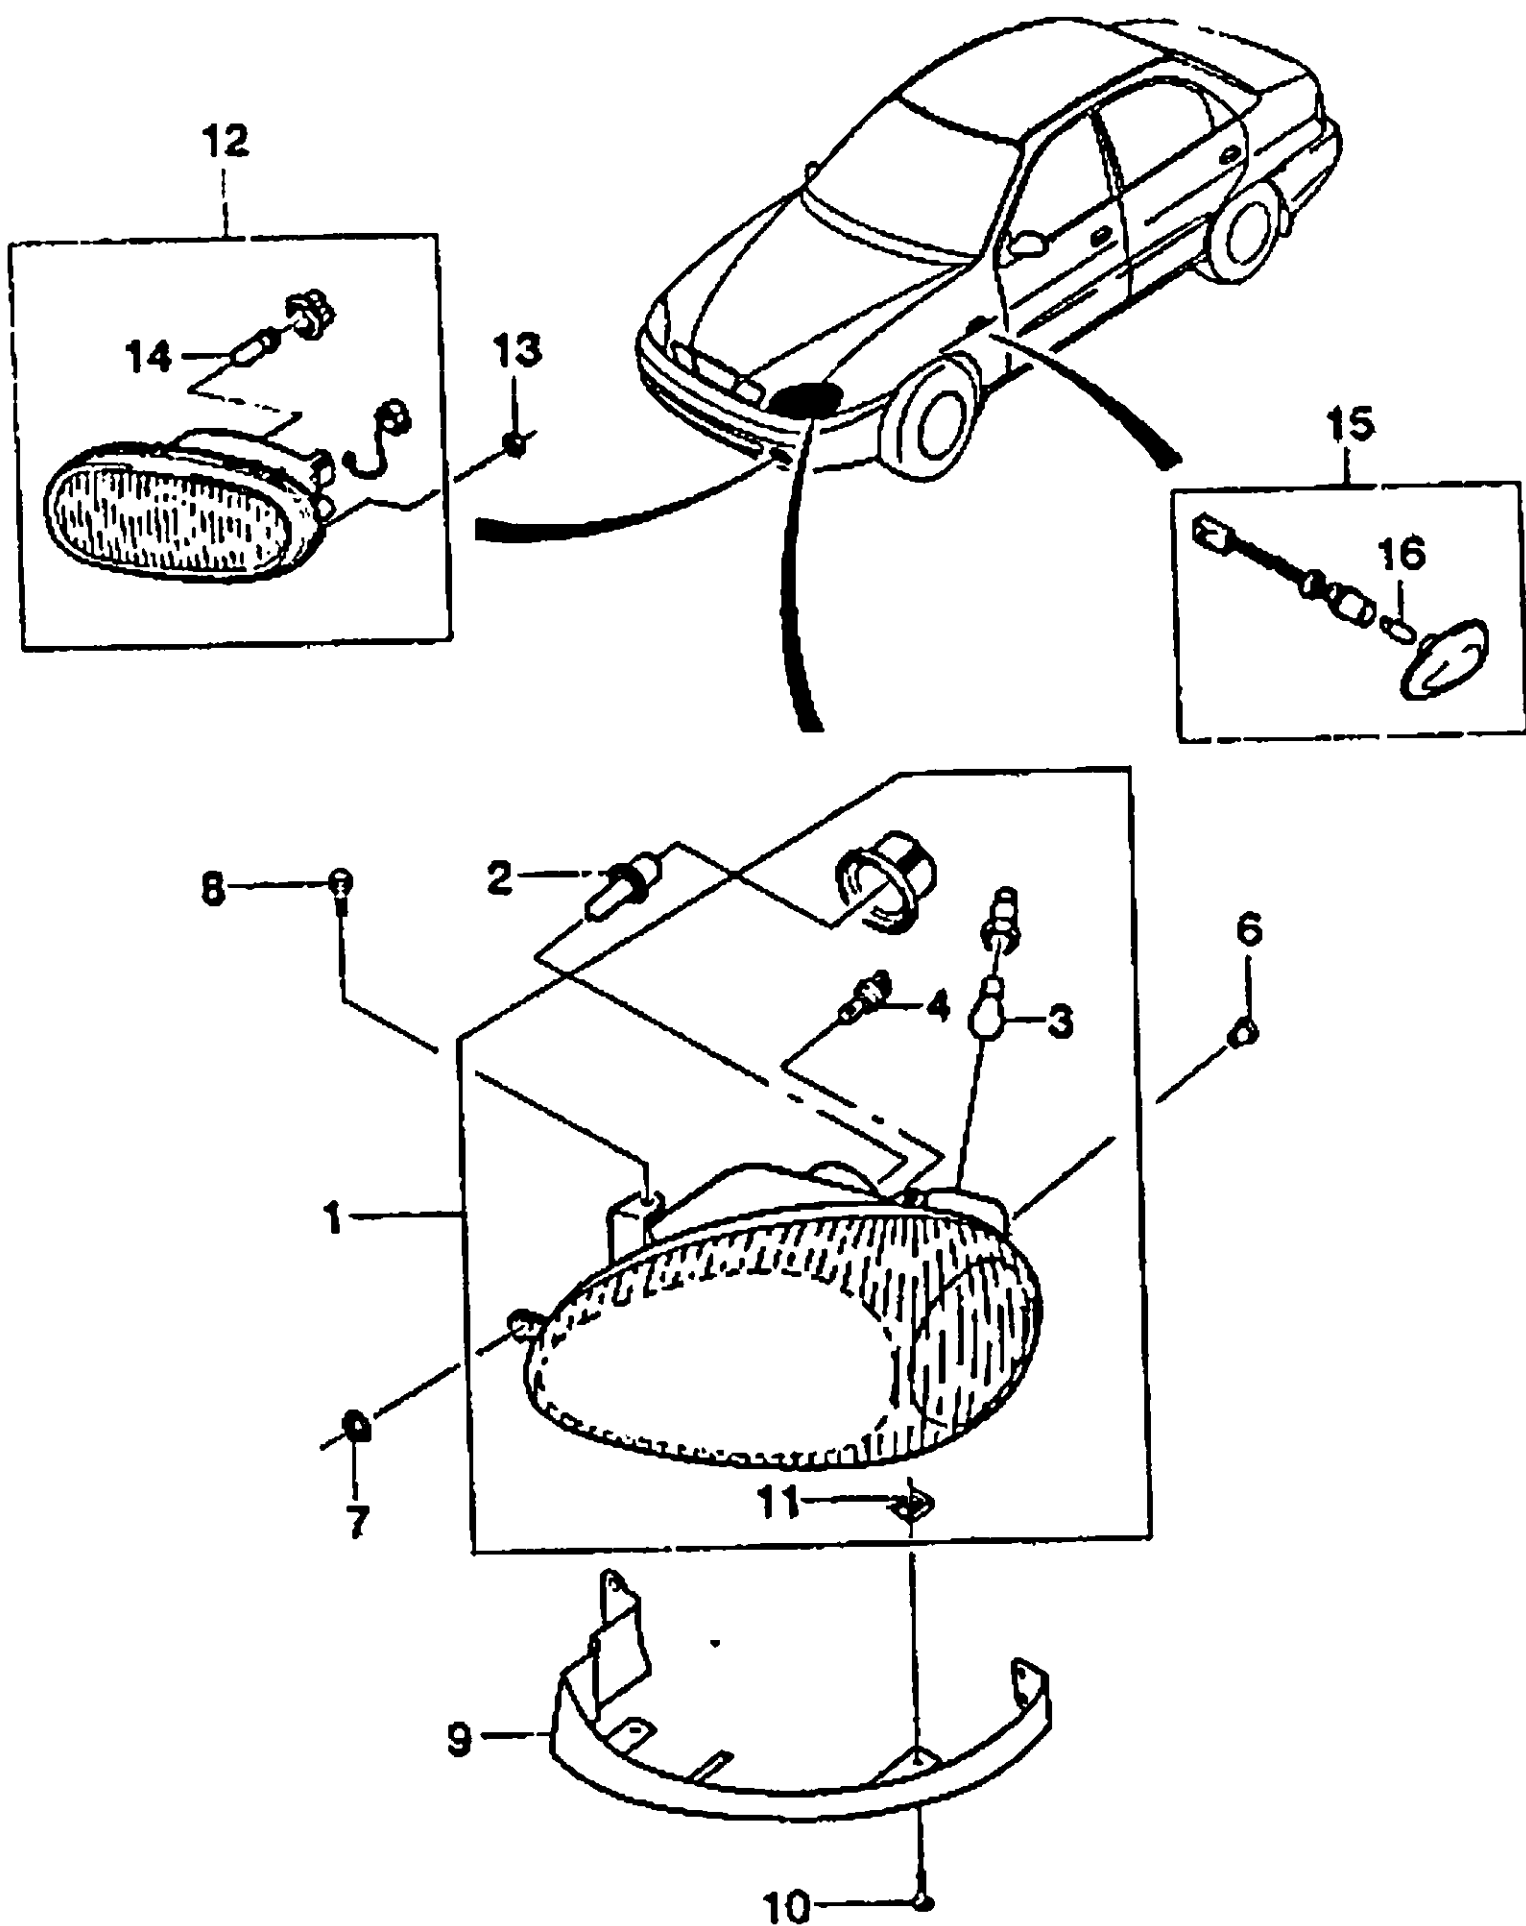


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / G	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)LAMP A-HEAD (D)LAMPE,SCHEINWERFER									(F)LAMPE-PHARE (S)LAMPARA-CABECERA					
	96304606	.	.	B	B	B	S	S	S	-HL4	LH	1		HL		
	96304607	.	.	B	B	B	S	S	S	-HL4	RH	1		HM		
	96304610	.	.	B	B	B	A	A	A	&HL4	LH	1		HP		
	96304611	.	.	B	B	B	A	A	A	&HL4	RH	1		HQ		
	[02]	(E)BULB-HEAD LAMP (D)BRNE									(F)AMPOULE (S)BOMBILLA					
	05104-60553	.	.	B	B	B	S	S	S		2		60/55W			
	[03]	(E)BULB-TURN SIGNAL (D)BRNE									(F)AMPOULE (S)BOMBILLA					
	05201-21004	.	.	B	B	B	S	S	S		2		21W			
	[04]	(E)BULB-POSITION (D)BRNE									(F)AMPOULE (S)BOMBILLA					
	05302-05003	.	.	B	B	B	S	S	S		2		5W			
	[06]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	09409-10305	.	.	B	B	B	S	S	S		2					
	[07]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA					
	09159-06011	.	.	B	B	B	S	S	S		2					
	[08]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO					
	09116-06026	.	.	B	B	B	S	S	S		4		W/WASHER			
	[09]	(E)SPACER-HEAD LAMP (D)DISTANZSTÜCK									(F)ENTRETOISE (S)ESPACIADOR					
	96304656	.	.	B	B	B	S	S	S		LH	1				
	96304657	.	.	B	B	B	S	S	S		RH	1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

5110 FRONT LAMP


4C16

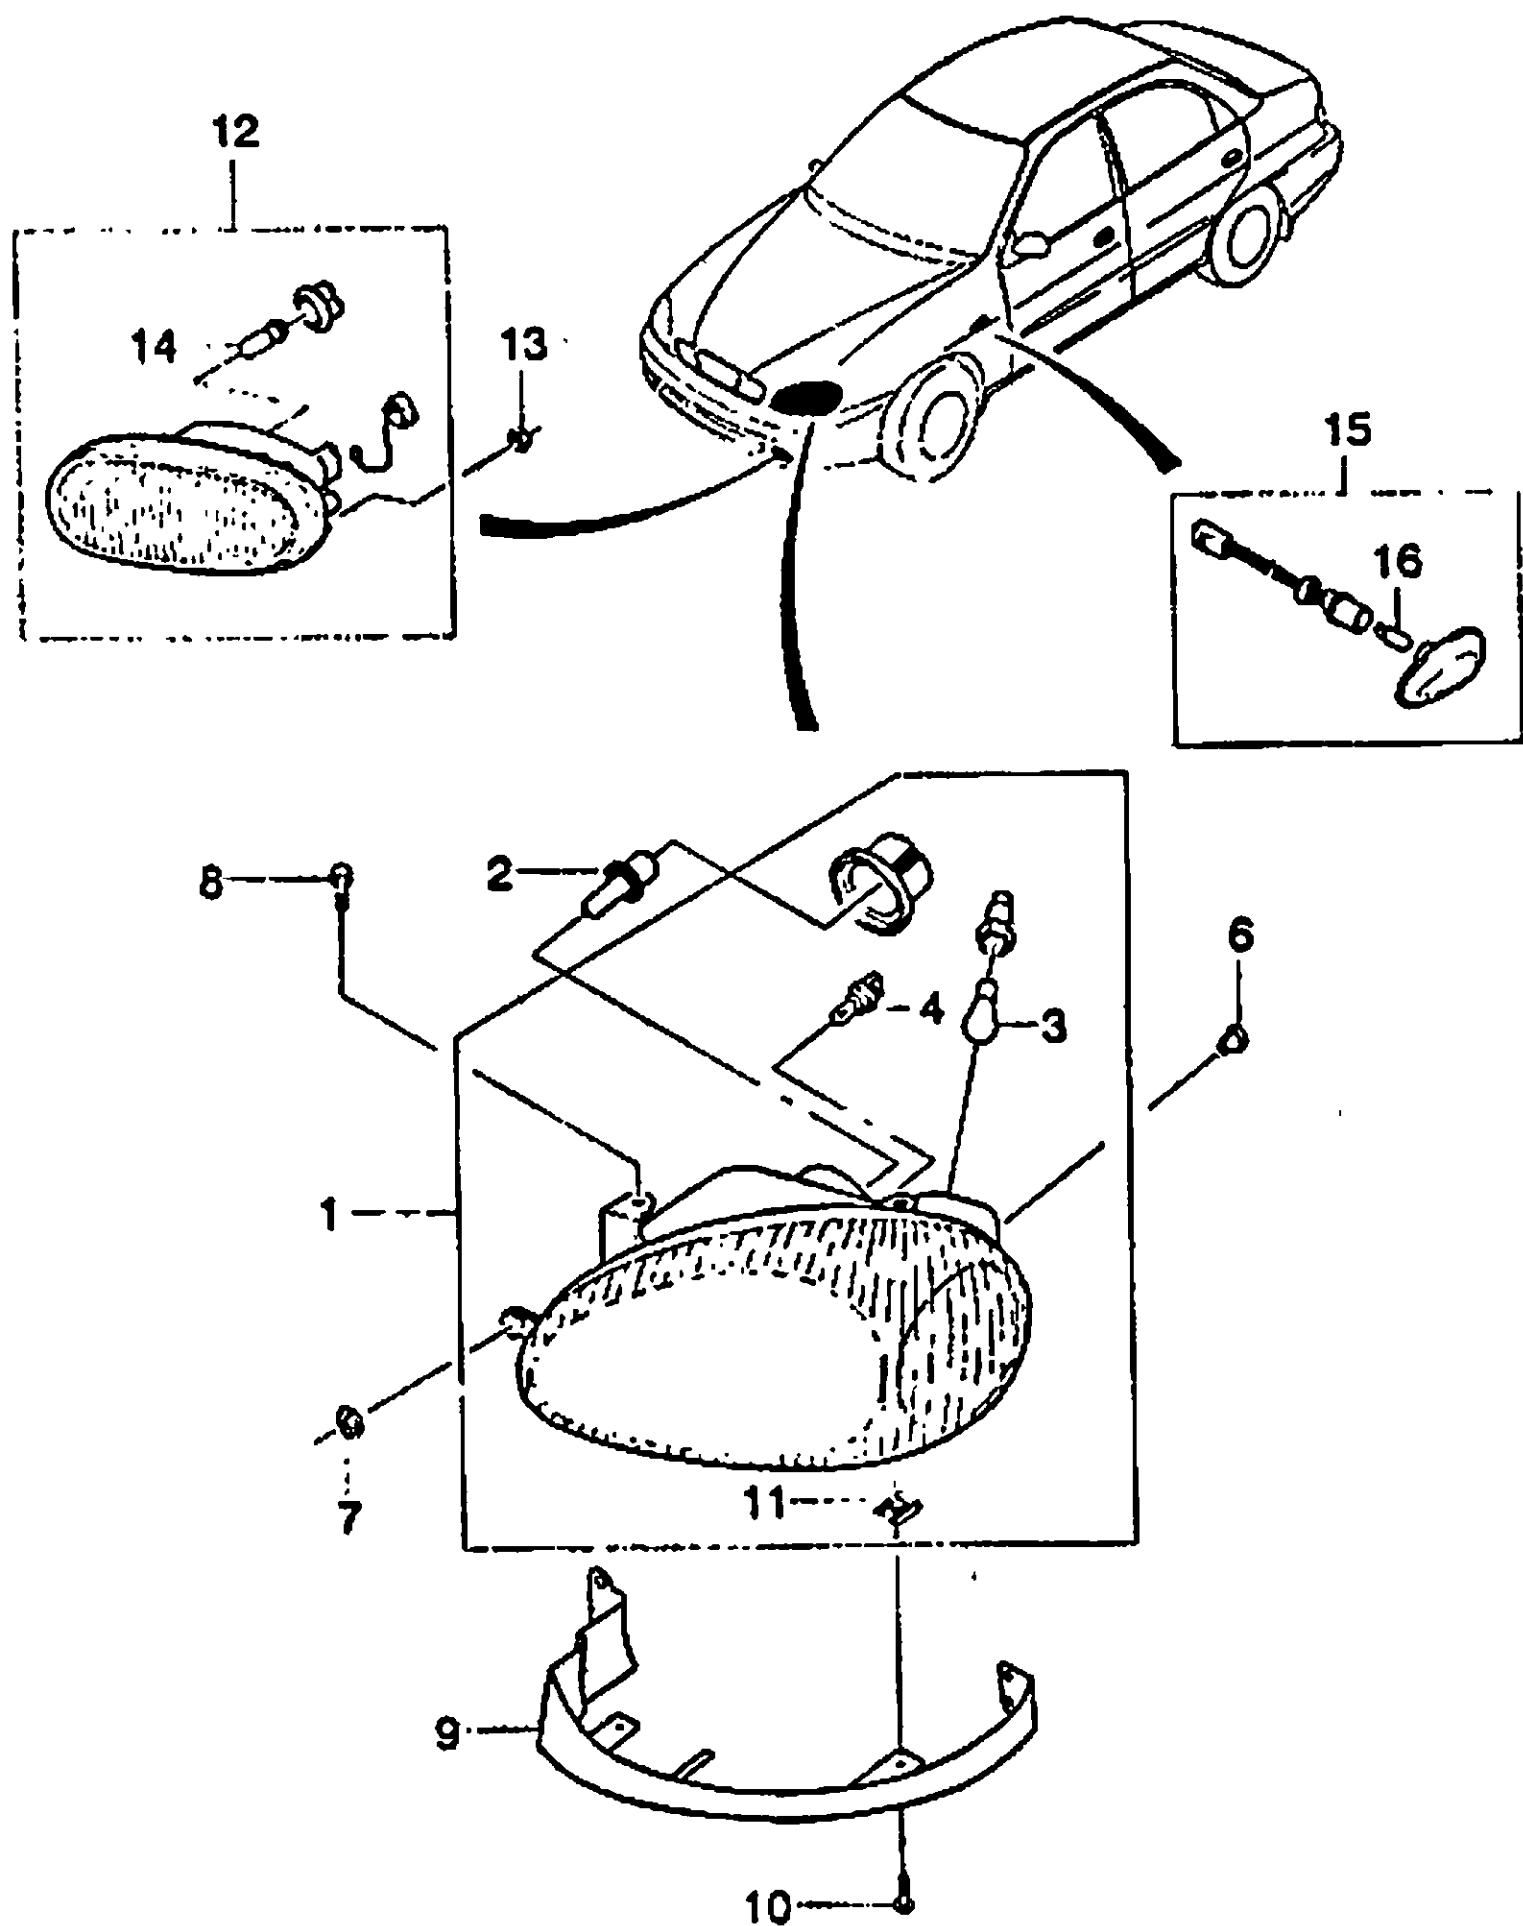

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	6 H	S S								S S
	[10]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03170-42133	.	.	B	B	B	S	S	S	4					
	[11]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA				
	09148-04004	.	.	B	B	B	S	S	S	4					
	[12]	(E)LAMP A-FOG,FRONT (D)LAMPE,NEBEL									(F)LAMPE (S)LAMPARA-NEBLINA				
	96303261	.	.	B	B	B	.	.	O	&T97	LH 1				
	96303262	.	.	B	B	B	.	.	O	&T97	RH 1				
	[13]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA				
	09159-05005	.	.	B	B	B	.	.	O	&T97	4				
	[14]	(E)BULB-FOG LAMP (D)BIRNE									(F)AMPOULE (S)BOMBILLA				
	05103-55003	.	.	B	B	B	.	.	O	&T97	2		35W		
	[15]	(E)LAMP A-TURN SIGNAL,SIDE (D)LAMPE									(F)LAMPE (S)LAMPARA.				
	96303241	.	.	B	B	B	A	A	A	&FL6	2				
	[16]	(E)BULB- TURN SIGNAL SIDE (D)BIRNE									(F)AMPOULE (S)BOMBILLA				
	05302-05003	.	.	B	B	B	A	A	A	&FL6	2		5W		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

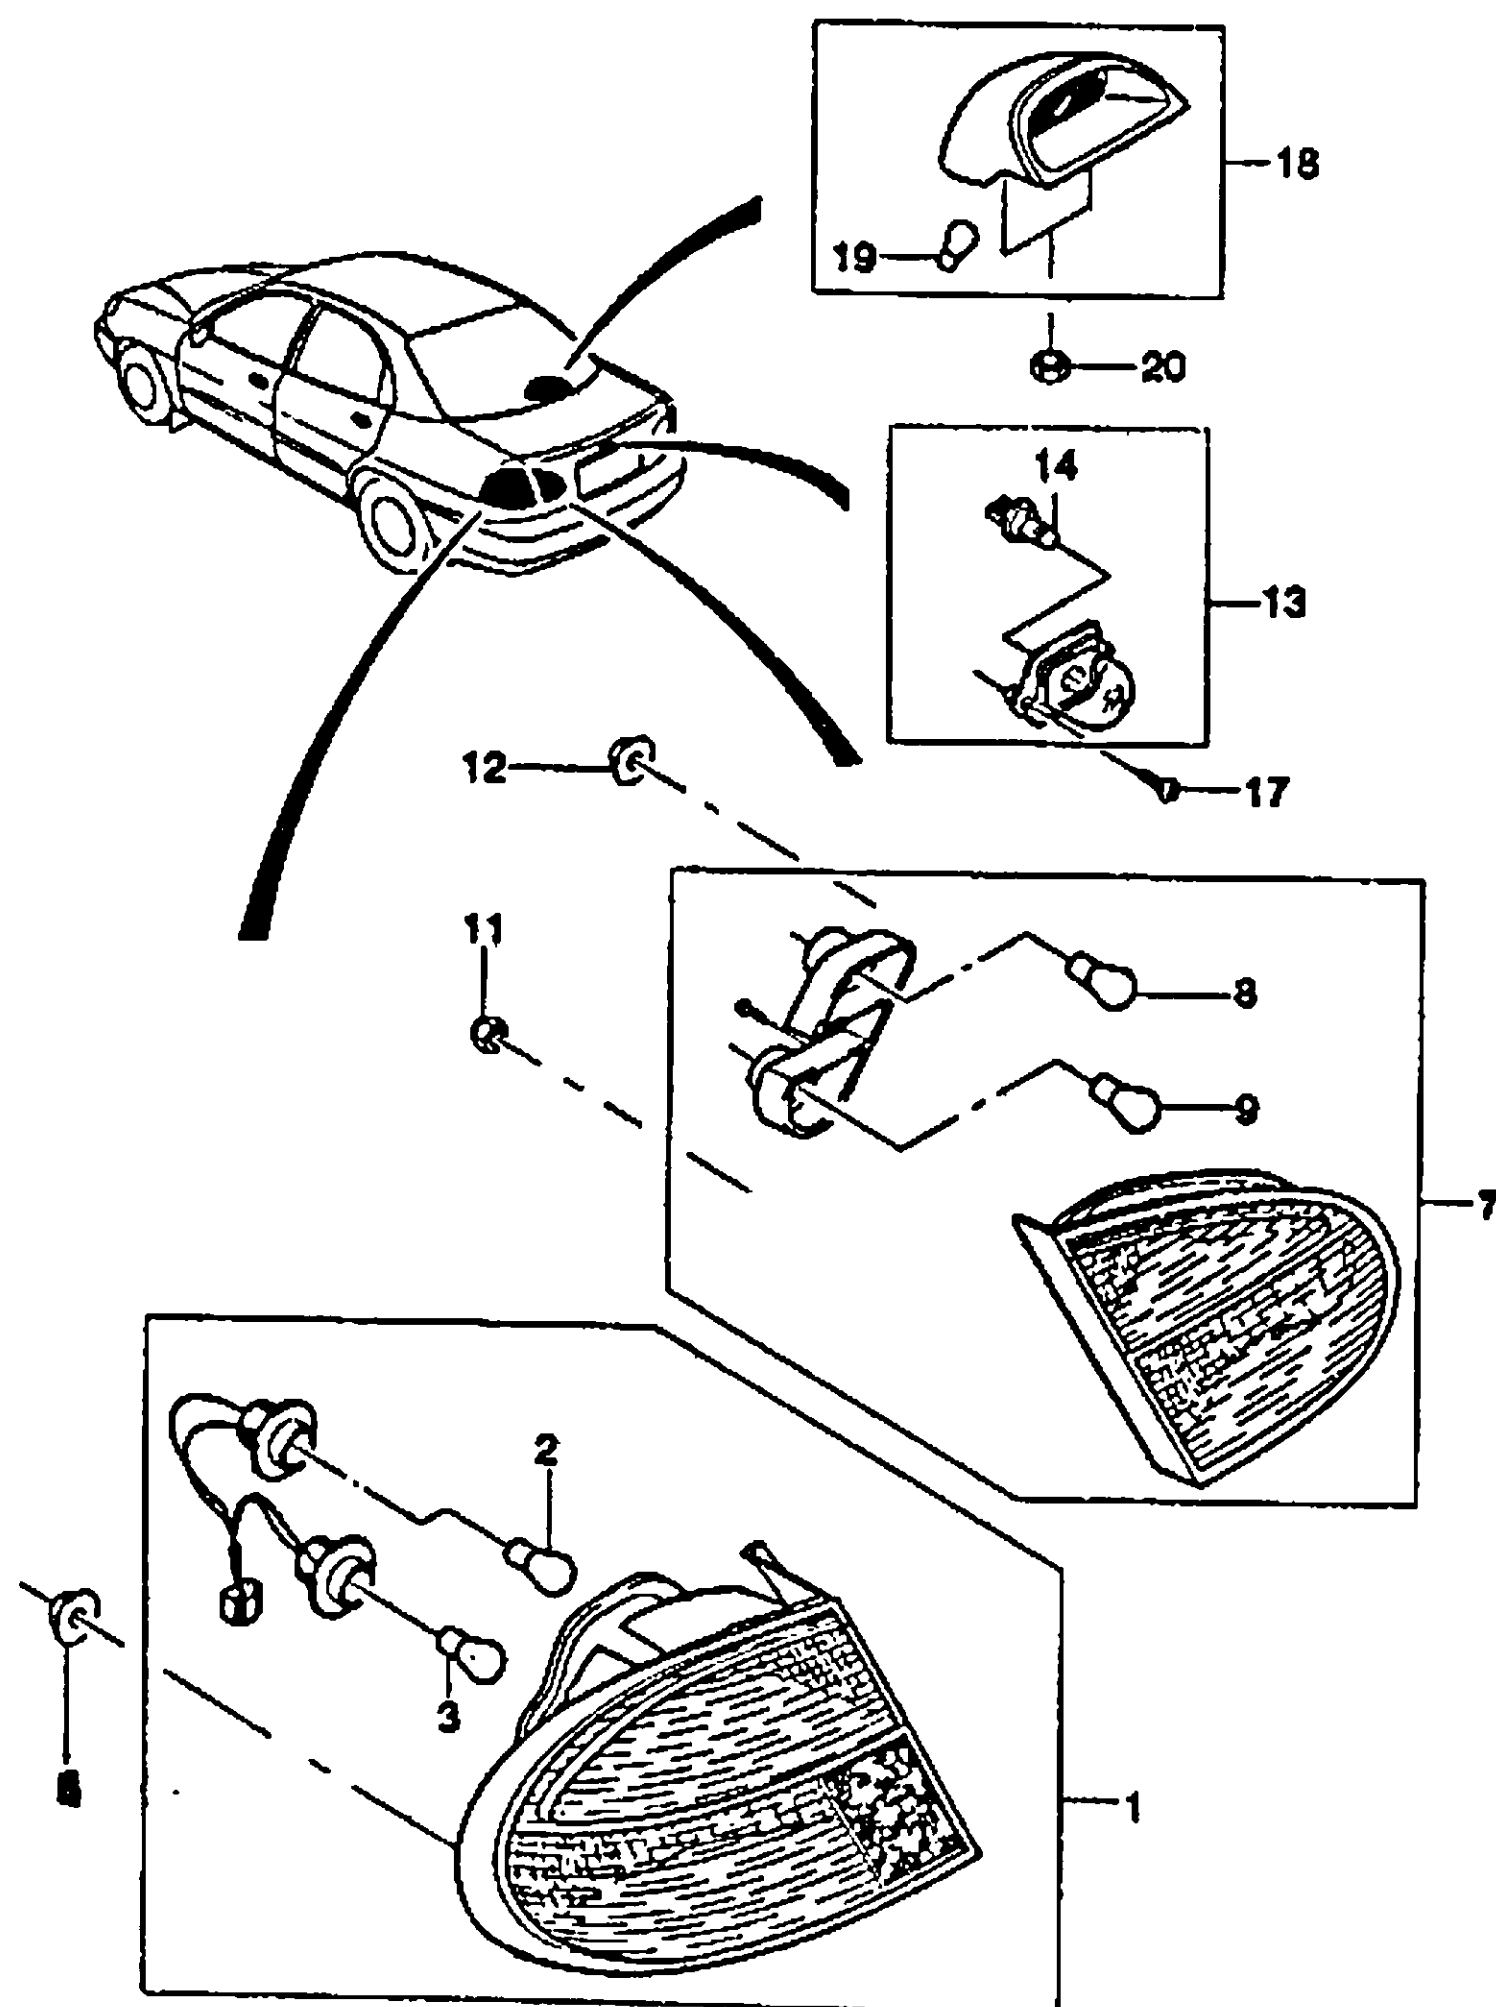


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N / G	T A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S S								S S S
	[01]	(E)LAMP A-TAIL (D)LAMPE,HINTERTEL									(F)LAMPE-EXTREMITÉ ARRIÈRE (S)LAMPARA-COLA				
	96304620	. . . B . . . S S S								LH 1				RJ	
	96304621	. . . B . . . S S S								RH 1				RK	
	[02]	(E)BULB-TURN SIGNAL (D)BRNE									(F)AMPOULE (S)BOMBILLA				
	06201-21004	. . . B . . . S S S								2		21W			
	[03]	(E)BULB-TAIL STOP (D)BRNE									(F)AMPOULE (S)BOMBILLA				
	05202-21053	. . . B . . . S S S								2		21/5W			
	[06]	(E)NUT-HEXAGON FLANGE (D)MUTTER									(F)ECROU (S)TUERCA				
	08316-25053	. . . B . . . S S S								8					
	[07]	(E)LAMP A-EXTENSION TAIL (D)LAMPE,VERLÄNGERUNG									(F)LAMPE-EXTENSION (S)LAMPARA-EXTENSION				
	96248143	. . . B . . . S S S -T98								LH 1		971001		EL	
Y	96239383	. . . B . . . S S S -T98								LH 1		971001		EQ	
	96248144	. . . B . . . S S S -T98								RH 1		971001		EM	
Y	96239384	. . . B . . . S S S -T98								RH 1		971001		ER	
	96304631	. . . B . . . A A A &T98								LH 1				EJ	
	96304632	. . . B . . . A A A &T98								RH 1				EK	
	[08]	(E)BULB-BACK UP (D)BRNE									(F)AMPOULE (S)BOMBILLA				
	05201-21003	. . . B . . . S S S								2		21W			
	[09]	(E)BULB-TAIL STOP (D)BRNE									(F)AMPOULE (S)BOMBILLA				
	05202-21053	. . . B . . . S S S -T98								2		971001 21/5W			
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

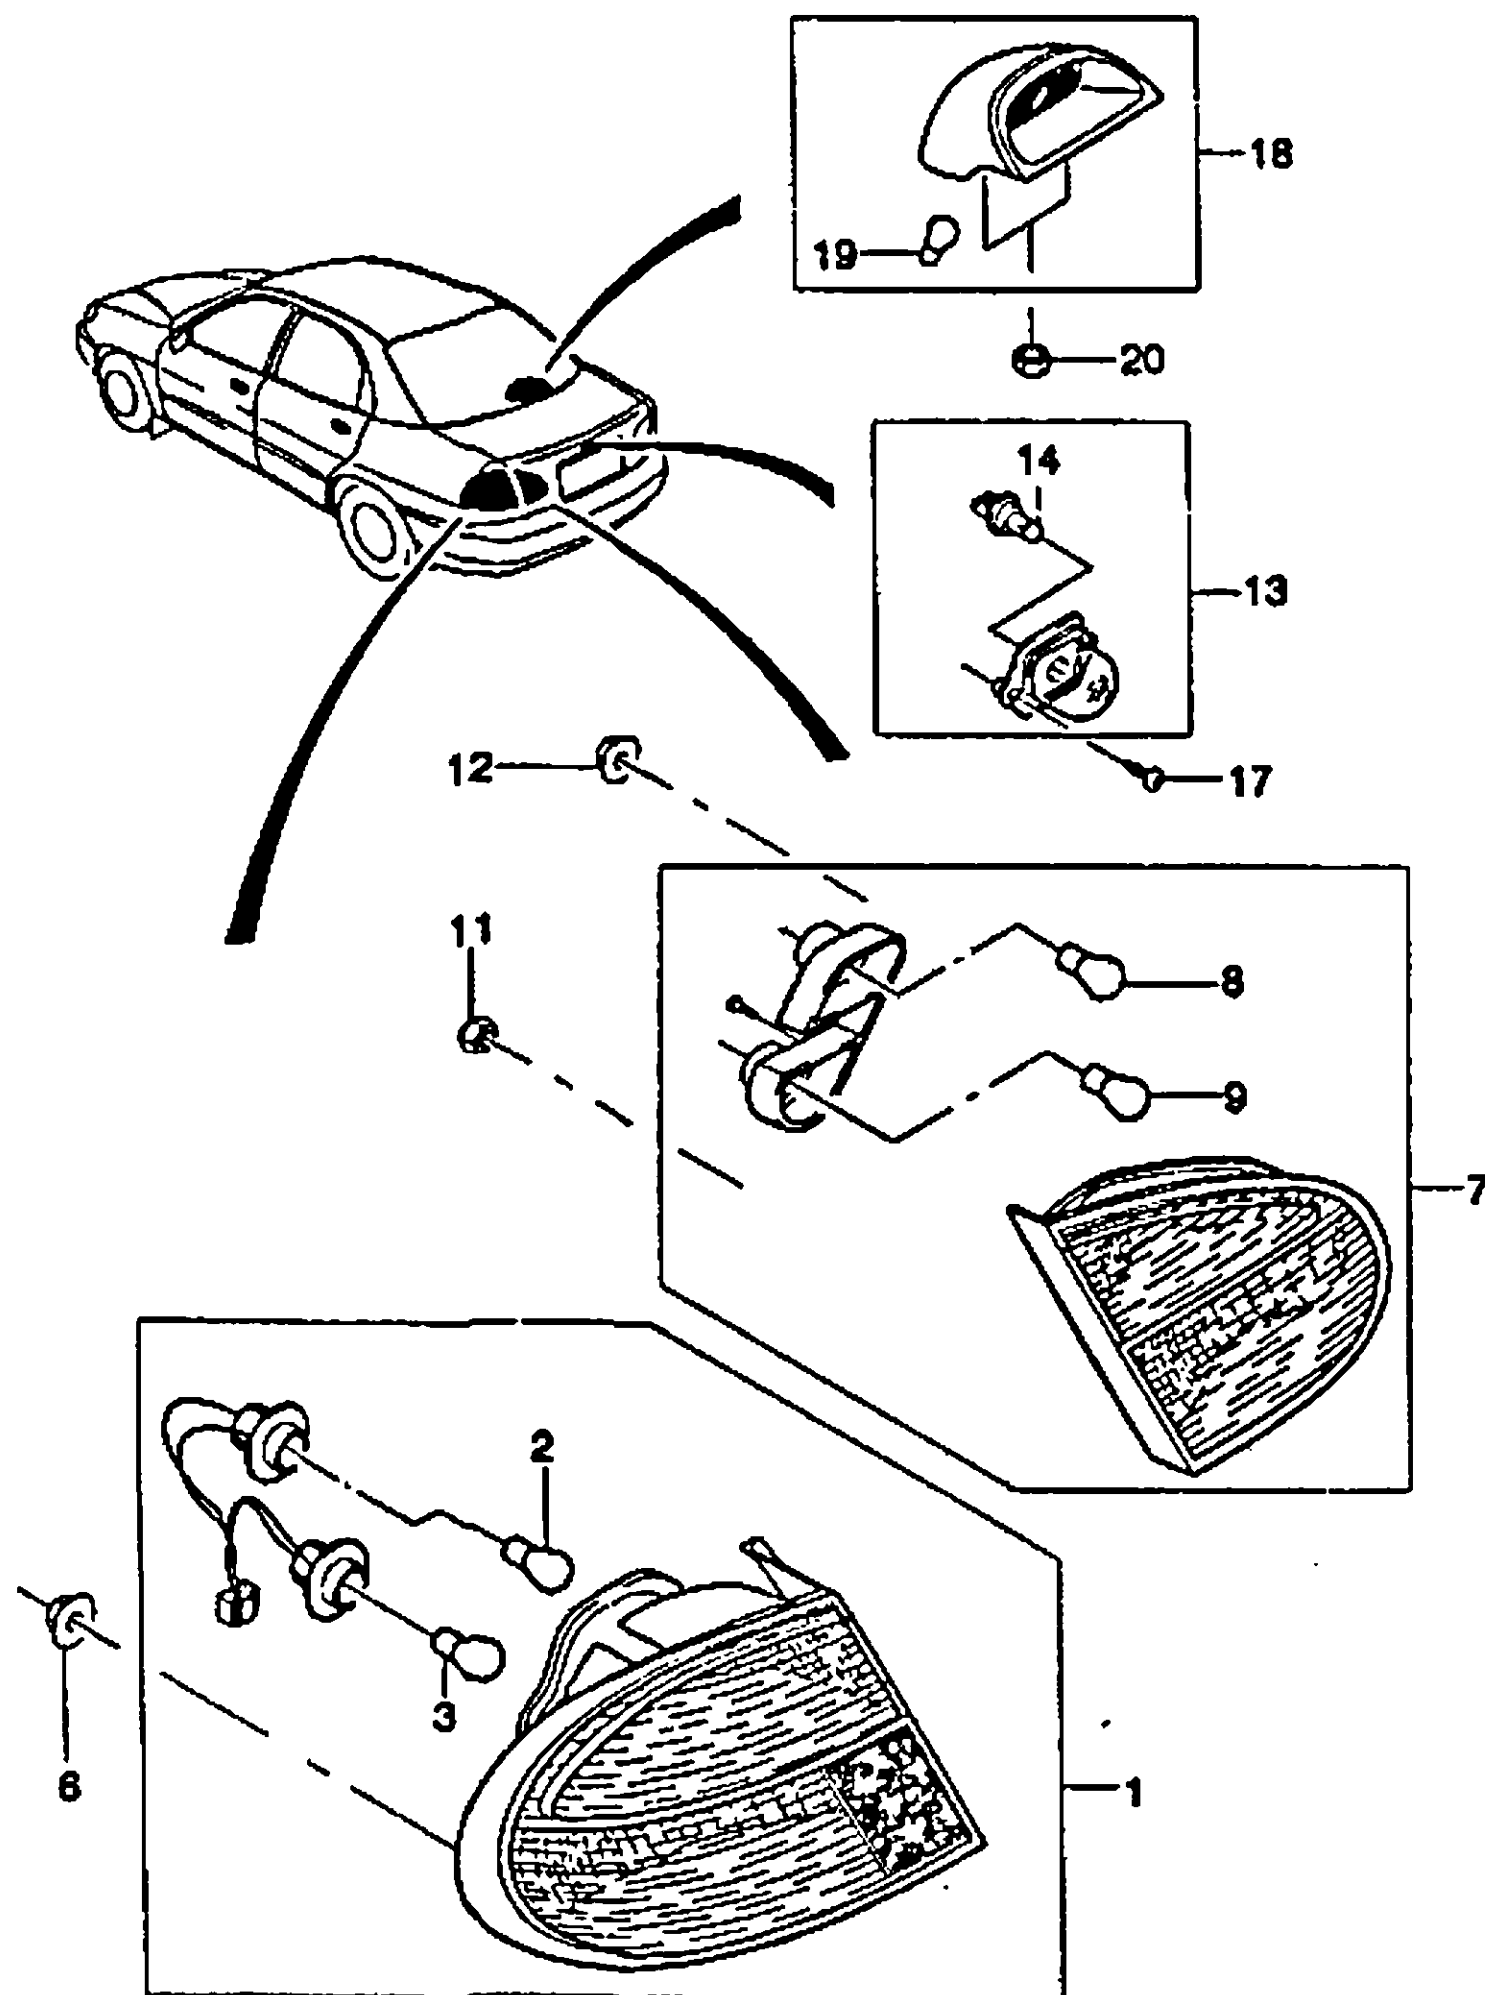

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S S				S S	S X		
Y 05232-27081		.	.	B	.	.	S	S	S	-T98	2	971001	27/8W	
05201-21003		.	.	B	.	.	A	A	A	&T98	2		21W	
[11]	(E)NUT-CAP (D)MUTTER										(F)ECROU (S)TUERCA			
09146-05001		.	.	B	.	.	S	S	S		4			
[12]	(E)NUT-HEXAGON FLANGE (D)MUTTER										(F)ECROU (S)TUERCA			
08316-25053		.	.	B	.	.	S	S	S		2			
[13]	(E)LAMP A-LICENSE (D)LAMPE,NUMMERSCHILD										(F)LAMPE (S)LAMPARA-PLACA DE LICENCIA			
96237708		.	.	B	.	.	S	S	S		2			LE
[14]	(E)BULB-LICENSE (D)BIRNE										(F)AMPOULE (S)BOMBILLA			
05302-05003		.	.	B	.	.	S	S	S		2		5W	
[17]	(E)SCREW-TAPPING (D)SCHRAUBE										(F)VIS (S)TORNILLO			
03110-42132		.	.	B	.	.	S	S	S		4			
[18]	(E)LAMP A-HIGH MOUNTED STOP (D)LAMPE										(F)LAMPE (S)LAMPARA			
96304677		.	.	B	.	.	A	A	A	&T93	1			CB
[19]	(E)BULB-HIGH MOUNTED STOP (D)BIRNE										(F)AMPOULE (S)BOMBILLA			
05201-21003		.	.	B	.	.	A	A	A	&T93	1		21W	
[20]	(E)NUT-HEXAGON (D)MUTTER										(F)ECROU (S)TUERCA			
08361-25053		.	.	B	.	.	A	A	A	&T93	2		WWASHER	
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						




EV
ES
EV

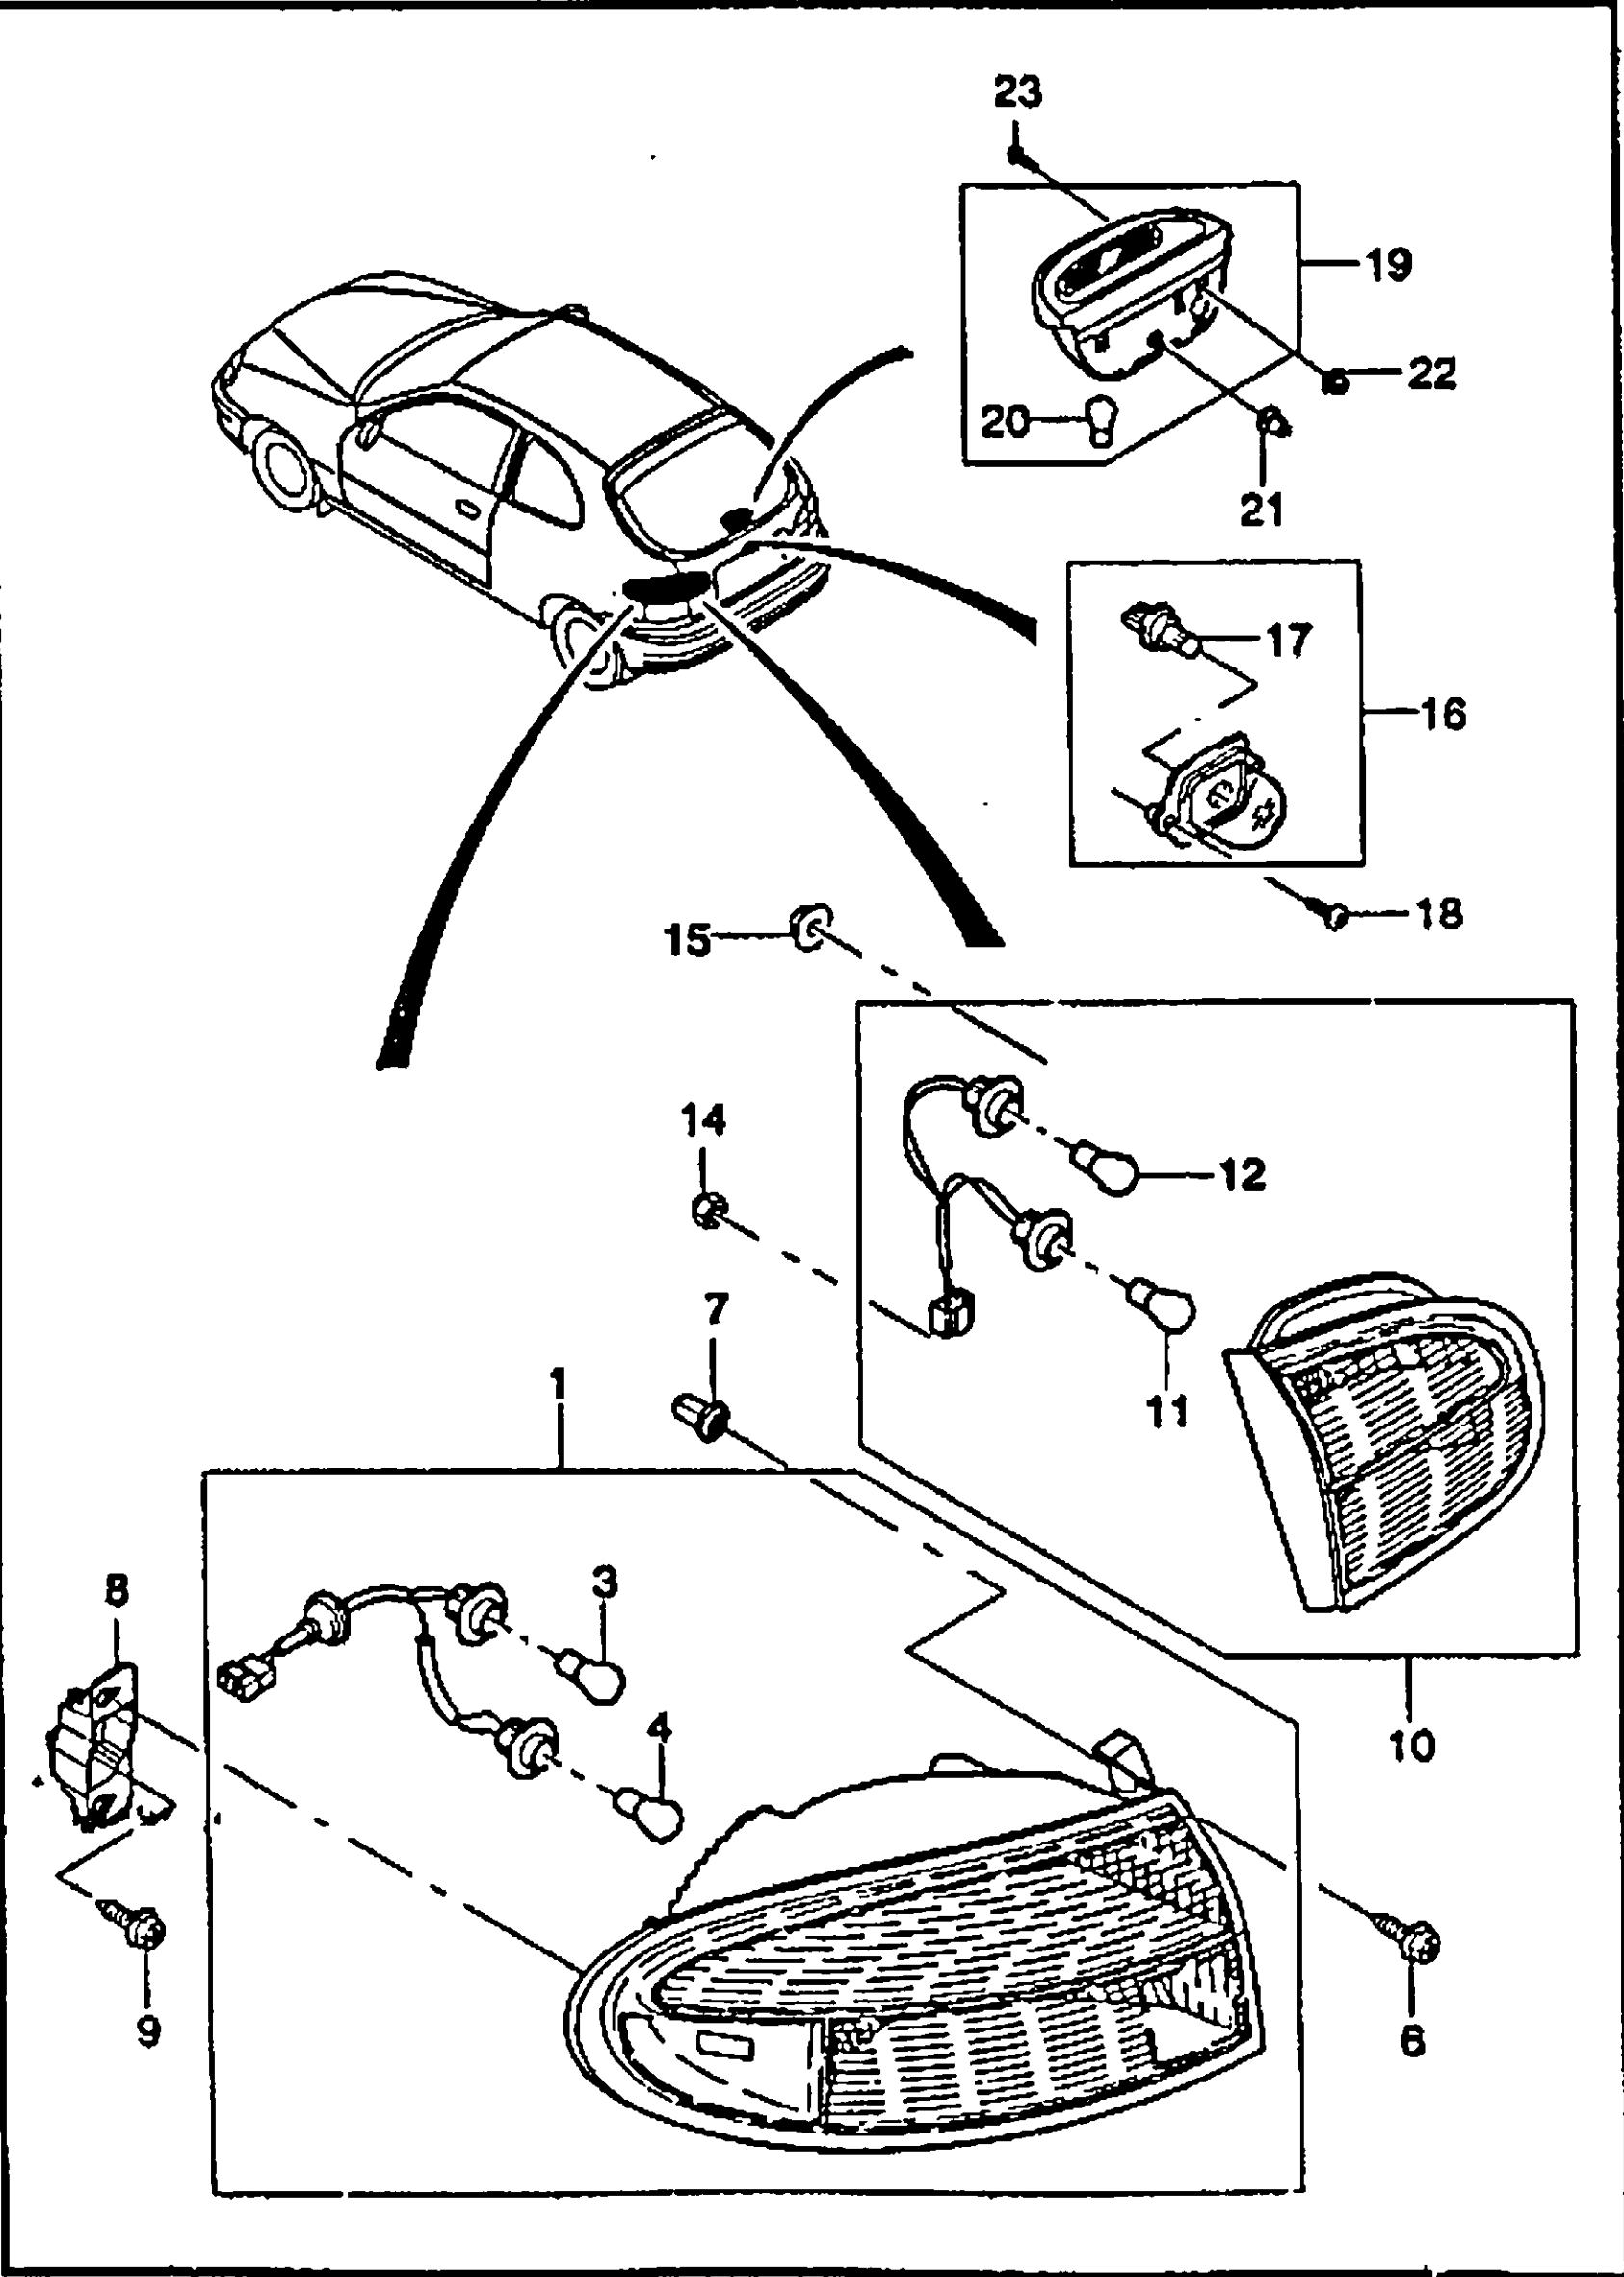


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
Y	96239382	.	.	.	B	B	S	.	S	-T98	RH	1	971001		ET	
	96304629	.	.	.	B	B	A	.	A	&T98	LH	1			EG	
	96304630	.	.	.	B	B	A	.	A	&T98	RH	1			EH	
	[11]	(E)BULB-TAIL STOP (D)BIRNE									(F)AMPOULE (S)BOMBILLA					
	05202-21053	.	.	.	B	B	S	.	S	-T98		2	971001	21/5W		
Y	05232-27081	.	.	.	B	B	S	.	S	-T98		2	971001	27/8W		
	05201-21003	.	.	.	B	B	A	.	A	&T98		2		21W		
	[12]	(E)BULB-BACK UP (D)BIRNE									(F)AMPOULE (S)BOMBILLA					
	05201-21003	.	.	.	B	B	S	.	S			2		21W		
	[14]	(E)NUT-CAP (D)MUTTER									(F)ECROU (S)TUERCA					
	09145-05001	.	.	.	B	B	S	.	S			4				
	[15]	(E)NUT-HEXAGON FLANGE (D)MUTTER									(F)ECROU (S)TUERCA					
	08316-25053	.	.	.	B	B	S	.	S			2				
	[16]	(E)LAMP A-LICENSE (D)LAMPE,NUMMERSCHILD									(F)LAMPE (S)LAMPARA-PLACA DE LICENCIA			LE		
	96237708	.	.	.	B	B	S	.	S			2				
	[17]	(E)BULB-LICENSE (D)BIRNE									(F)AMPOULE (S)BOMBILLA					
	05302-05003	.	.	.	B	B	S	.	S			2		5W		
	[18]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	03110-42132	.	.	.	B	B	S	.	S			4				
	[19]	(E)LAMP A-HIGH MOUNTED STOP (D)LAMPE									(F)LAMPE (S)LAMPARA					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

4H16

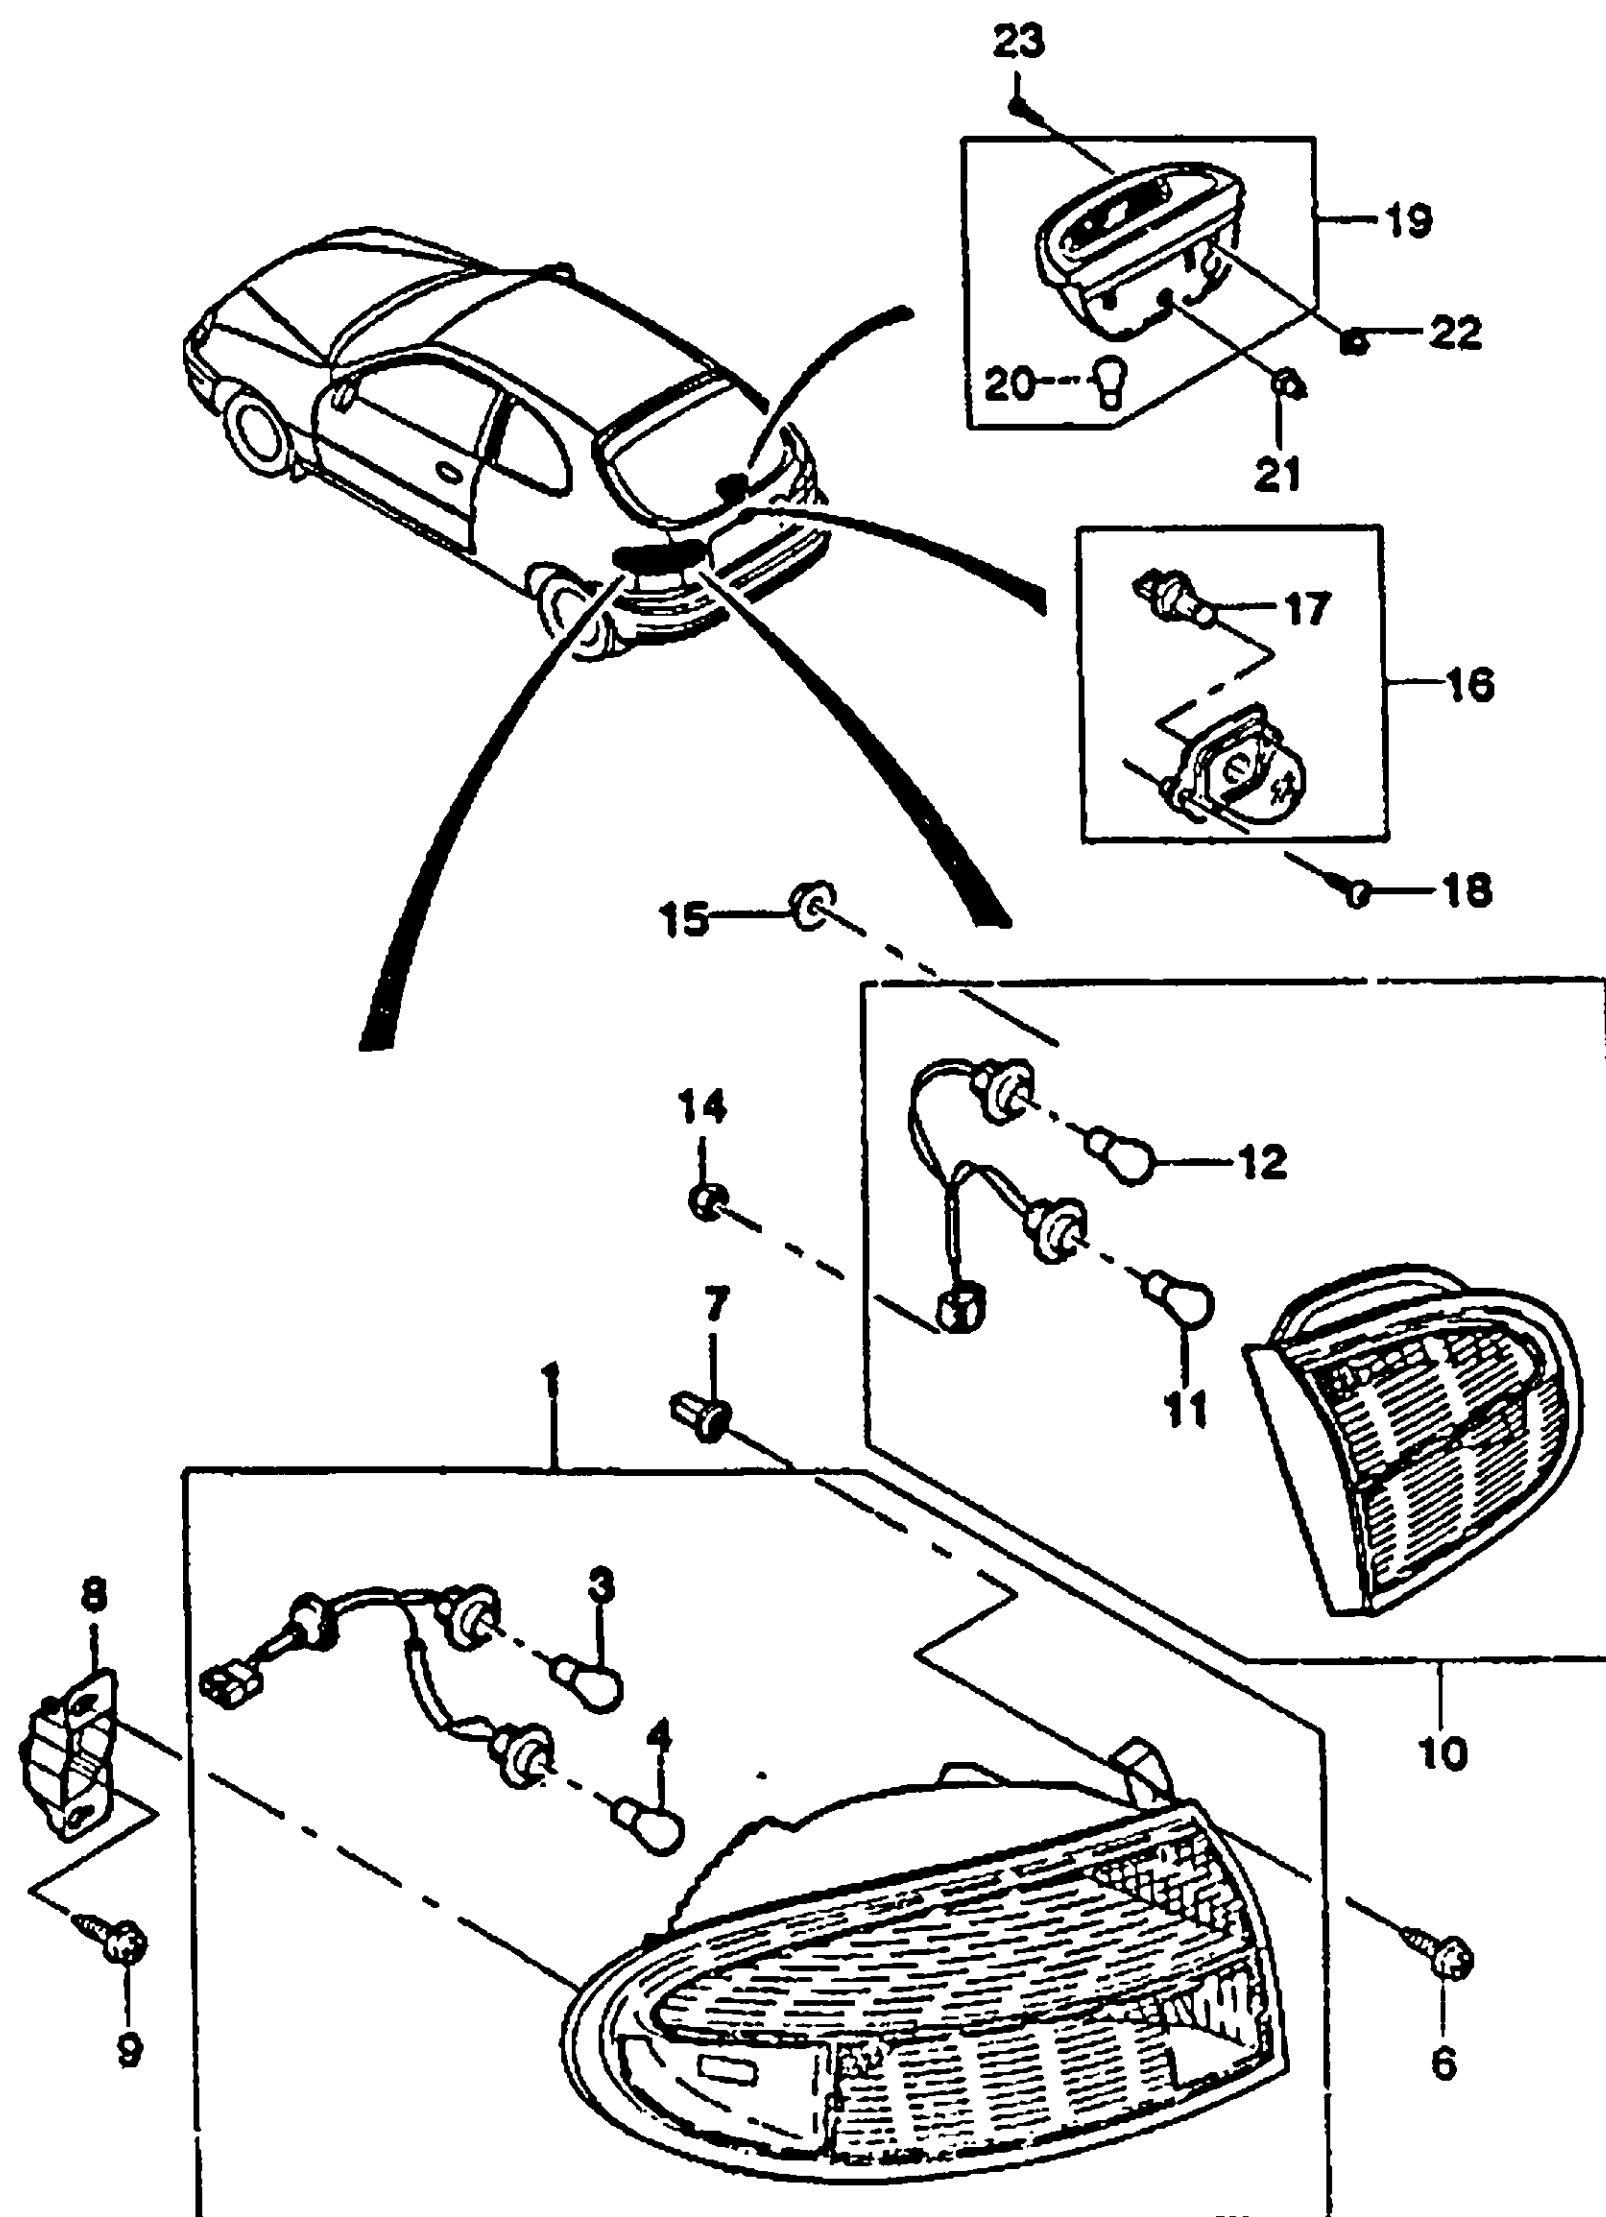


KEY NO.		PART NAME																
I T C	PART NO	MODEL									OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL			FROM				TO				
				4 N	3 H	6 H	S	S S	S X									
	96303244 [20]	. . .	B	B	A	.	A			&T93		1				CA		
		(E)BULB-HIGH MOUNTED STOP (D)BIRNE													1			
	05201-21003 [21]	. . .	B	B	A	.	A			&T93		1				21W		
		(E)CLIP (D)KLEMME													1			
	09409-10305 [22]	. . .	B	B	A	.	A			&T93		2						
		(E)NUT-SPEED (D)MUTTER													2			
	09148-04003 [23]	. . .	B	B	A	.	A			&T93		2						
		(E)SCREW-TAPPING (D)SCHRAUBE													2			
	03160-42165	. . .	B	B	A	.	A			&T93		2						
ENG(ENGINE)		T/A(TRANSAXLE)									BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON									4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

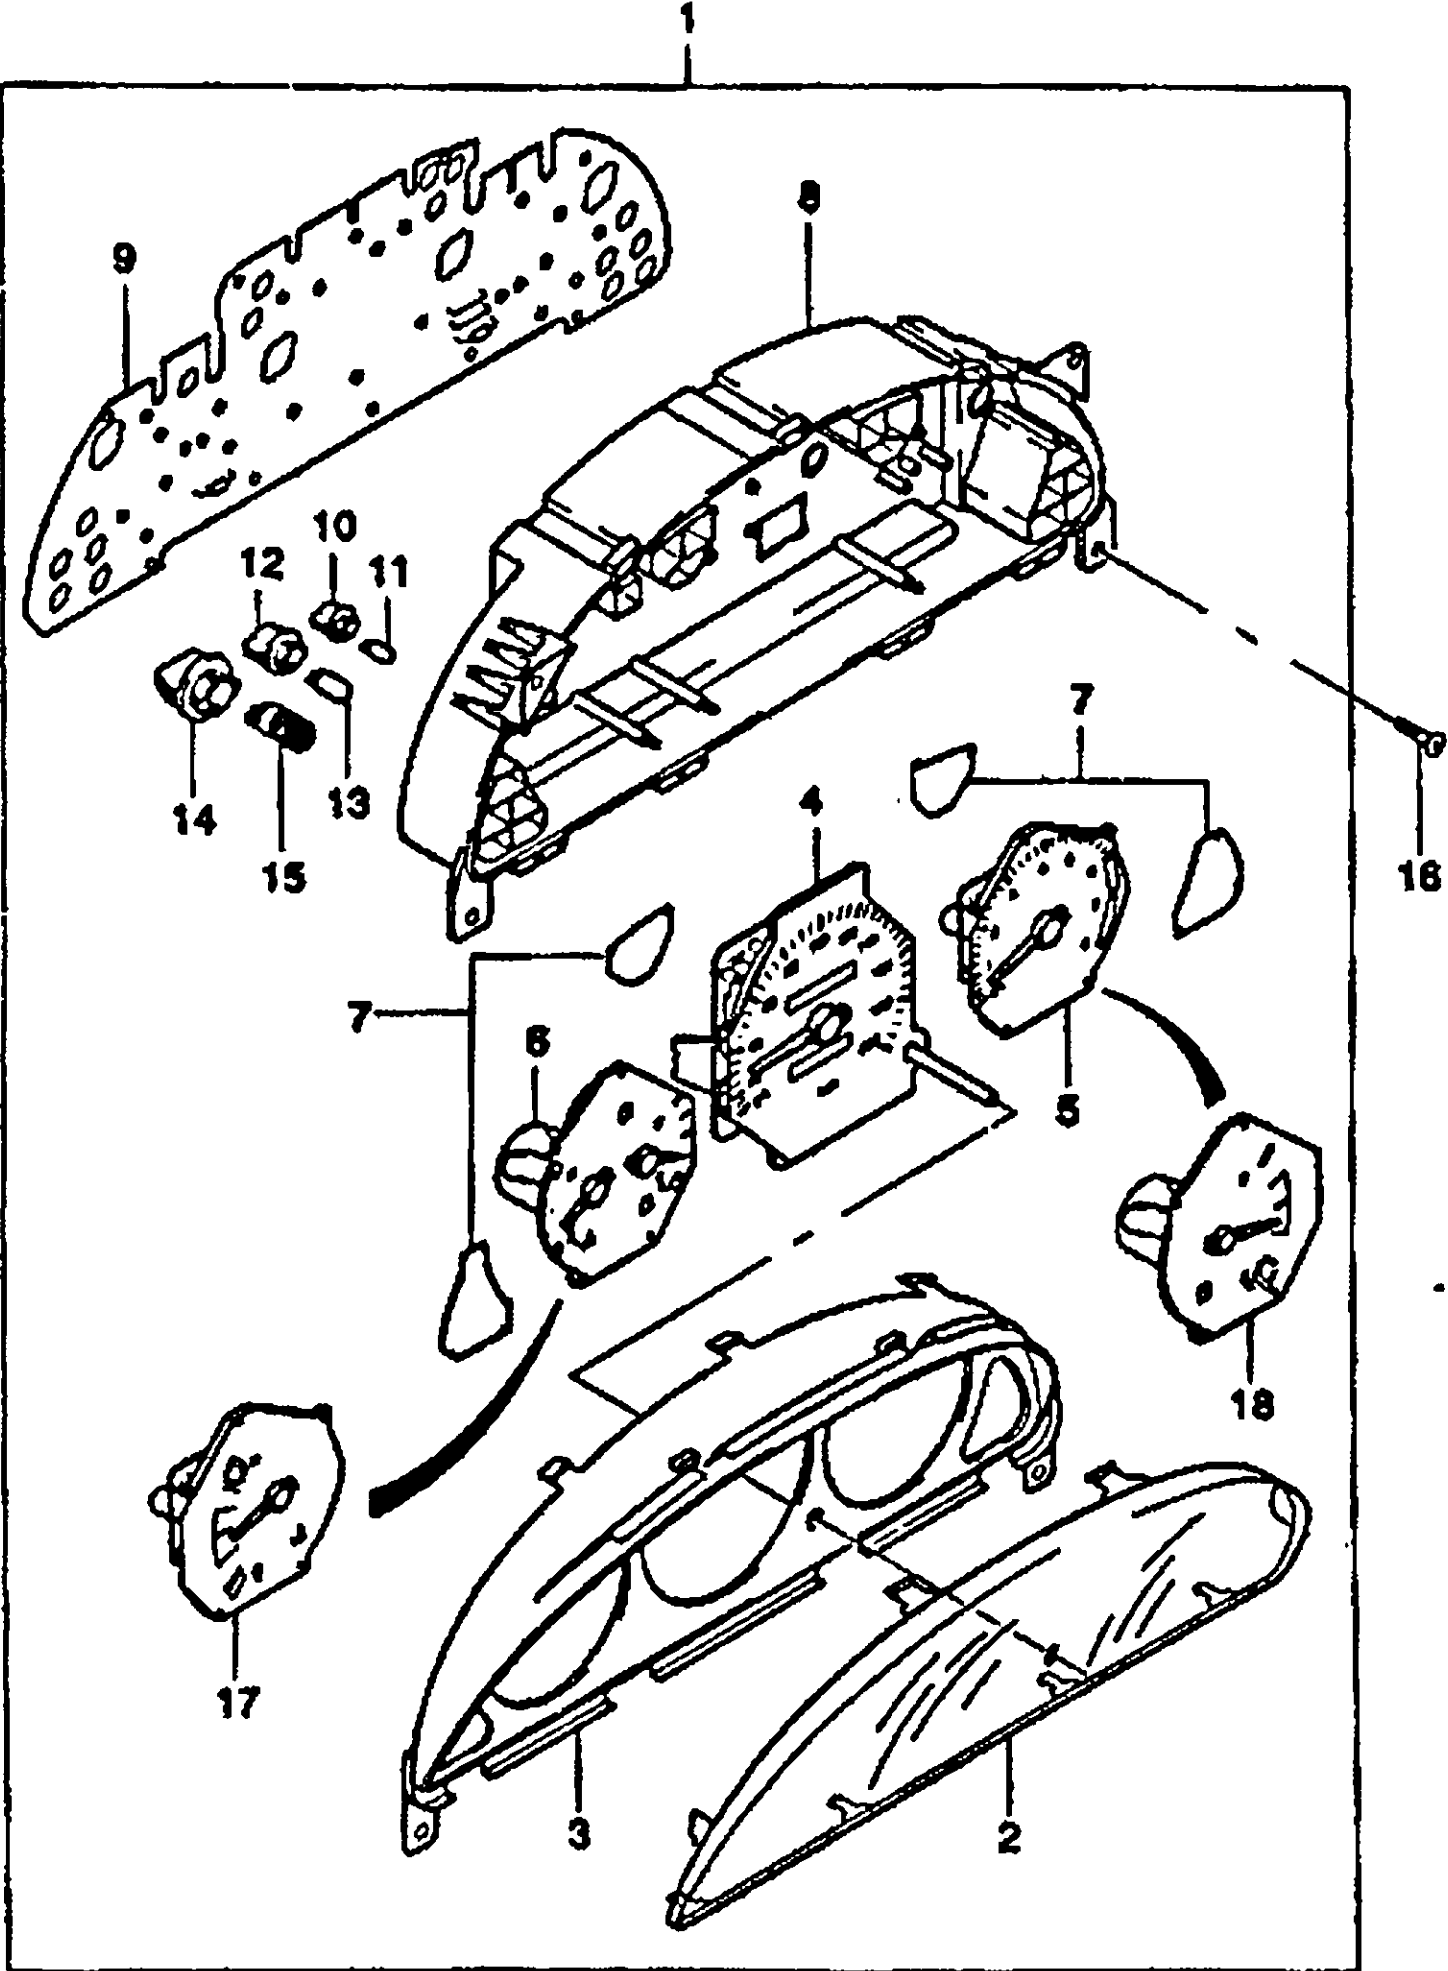

NOTE : @1 - KILOMETER TYPE.


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	[01]	(E)CLUSTER-INSTRUMENT (D)INSTRUMENT									(F)TABLEAU DE BORD (S)INSTRUMENTO					
	96304893	.	M	B	B	B	S	.	.	-U44	1		@1, WO/TACHO	RA		
	96304900	.	M	B	B	B	.	S	S	-ABF/AJ3/U44	1		@1, W/TACHO	RF		
	96304900	.	M	B	B	B	.	S	S	-JL9/T97/U44	1		@1, W/TACHO	RF		
	96304717	.	M	B	B	B	.	O	O	&ABF/AJ3-U44	1	970715	@1, W/TACHO	RG		
	96304717	.	M	B	B	B	.	O	O	&ABF/AJ3/T98-U44	1	970715	@1, W/TACHO	RG		
	96304717	.	M	B	B	B	.	O	O	&JL9/T97-U44	1	970715	@1, W/TACHO	RG		
	96304717	.	M	B	B	B	.	O	O	&JL9/T97/T98-U44	1	970715	@1, W/TACHO	RG		
	96304894	.	M	B	B	B	A	.	.	&U44-ABF/AJ3	1		@1, WO/TACHO	RB		
	96304894	.	M	B	B	B	A	.	.	&U44-JL9/T97	1		@1, WO/TACHO	RB		
	96304718	.	M	B	B	B	.	A	A	&U44	1		@1, W/TACHO	RH		
	96304896	.	A	B	B	B	O	.	.	-U44	1		@1, WO/TACHO	RD		
	96304720	.	A	B	B	B	.	O	O	-U44	1		@1, W/TACHO	RK		
	96304895	.	A	B	B	B	A	.	.	&U44	1		@1, WO/TACHO	RC		
	96304719	.	A	B	B	B	.	A	A	&U44	1		@1, W/TACHO	RJ		
	[02]	(E)LENS-INSTRUMENT (D)OBJEKTIV									(F)LENTILLE (S)LENTE					
	96218671	.	.	B	B	B	S	S	S		1					
	[03]	(E)PLATE-WINDOW (D)PLATTE									(F)PLAQUE (S)PLACA					
	96218670	.	.	B	B	B	S	S	S		1					
	[04]	(E)SPEEDOMETER A (D)GESCHWINDIGKEITSMESSER									(F)COMPTEUR DE VITESSE (S)VELOCIMETRO					
	96214624	.	.	B	B	B	S	S	S	-U44	1		@1			
	96218647	.	.	B	B	B	A	A	A	&U44	1		@1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

464

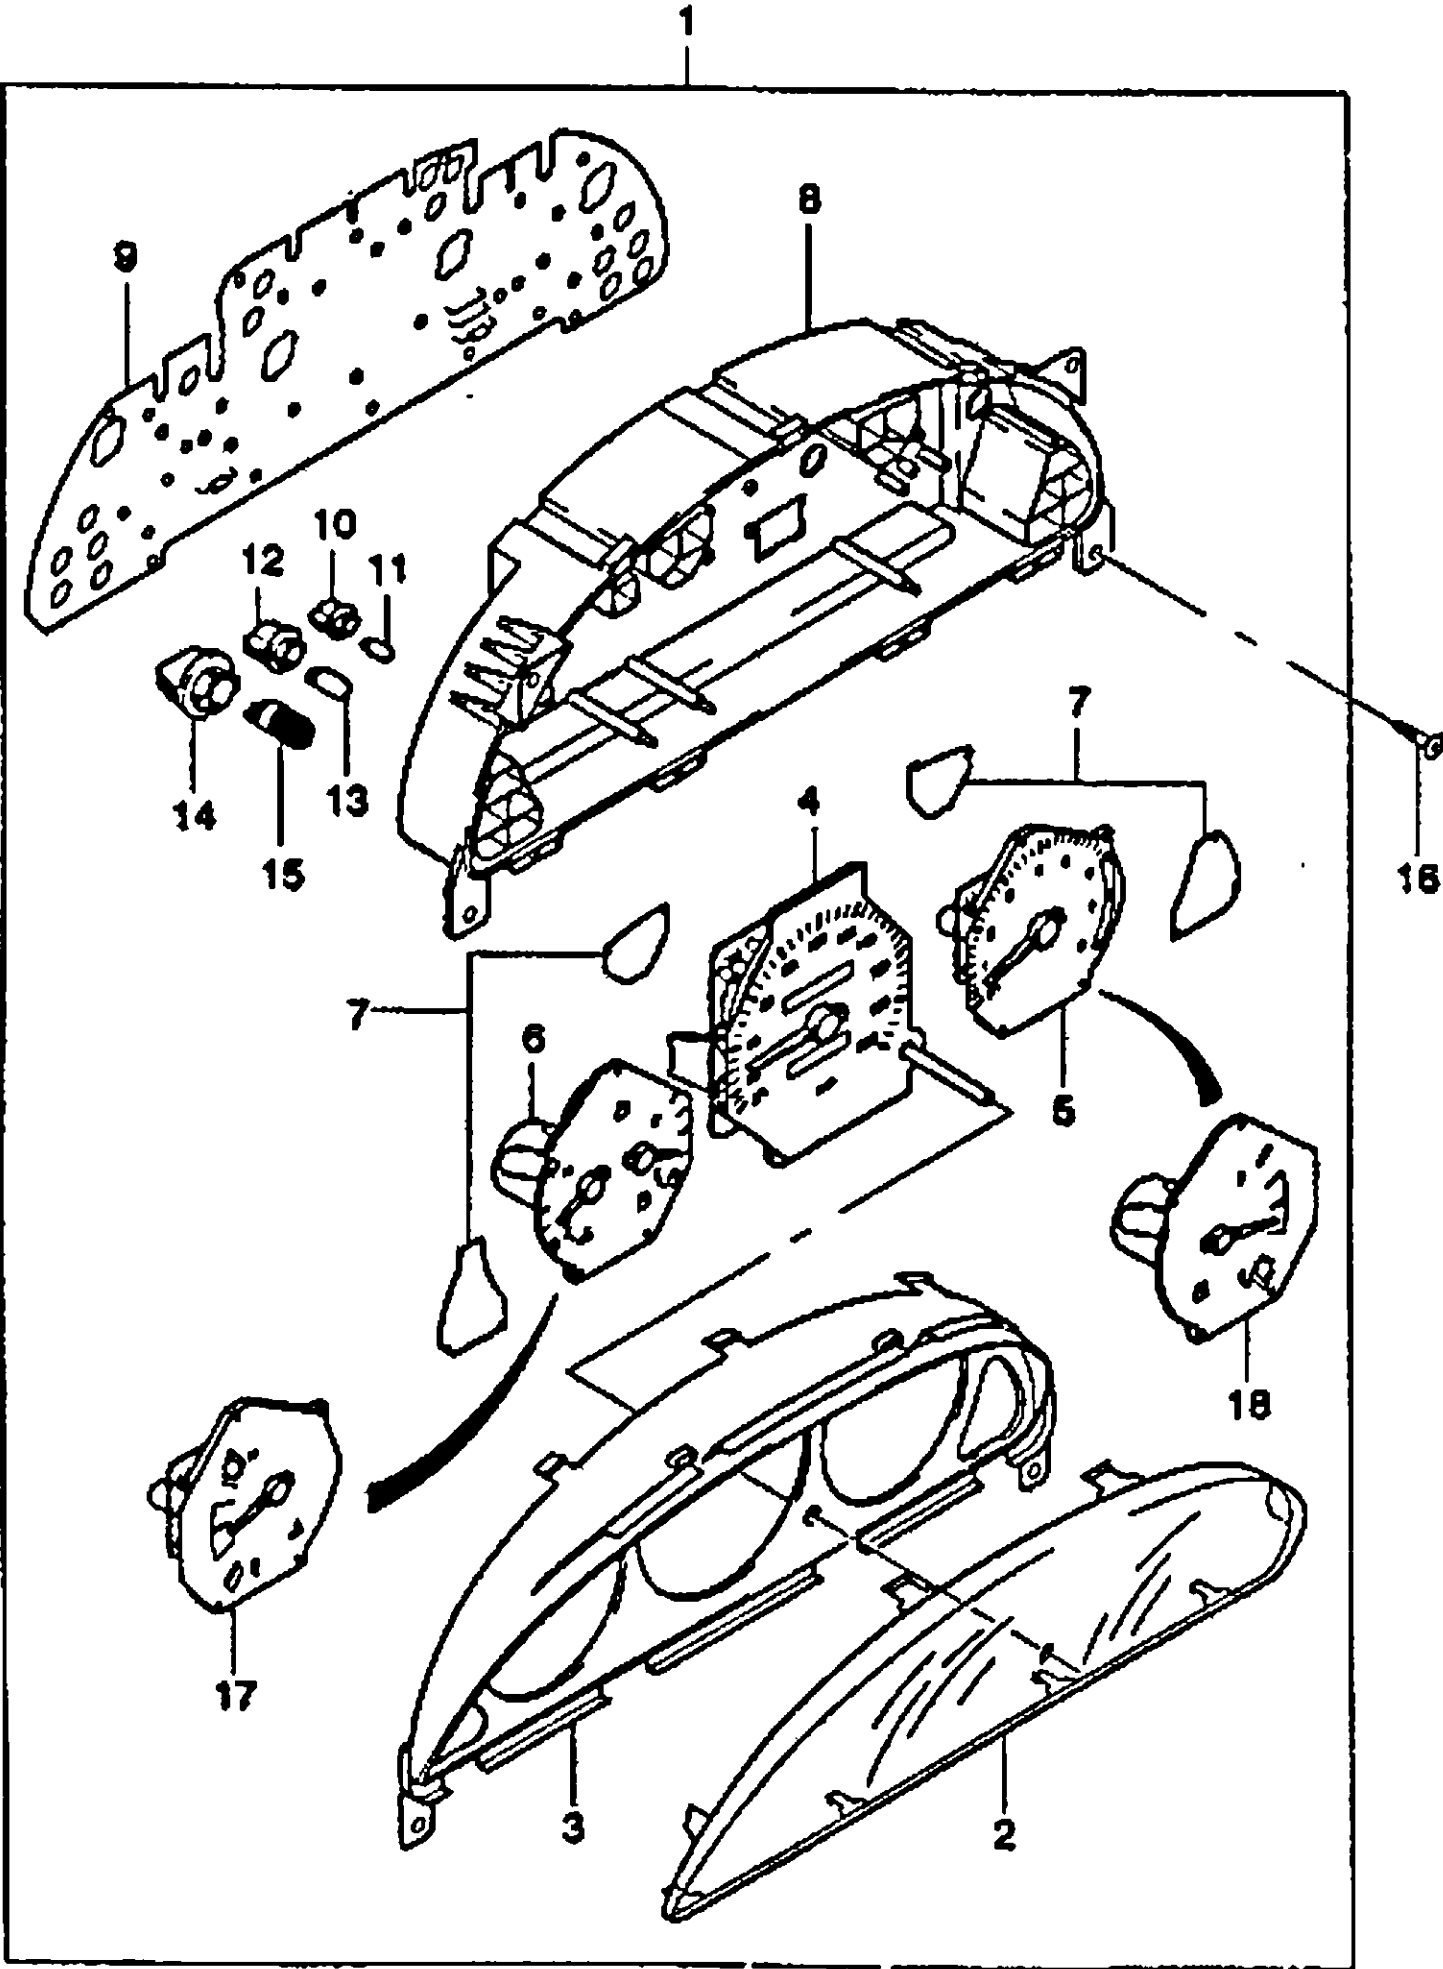

NOTE : @1 - KILOMETER TYPE.


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S X
	96077679	.	.	B	B	B	S	S	S		1			MEDIUM		
	[13]			(E)BULB-MEDIUM						(F)AMPOULE						
				(D)BIENE						(S)BOMBILLA						
	09471-12015	.	.	B	B	B	S	S	S		1			MEDIUM		
	[14]			(E)SOCKET						(F)CULOT-AMPOULE						
				(D)FASSUNG	BIRNE					(S)ENCHUFE-BOMBILLA						
	94797519	.	.	B	B	B	S	S	S		4			LARGE		
	[15]			(E)BULB-LARGE						(F)AMPOULE						
				(D)BIENE						(S)BOMBILLA						
	05301-03003	.	.	B	B	B	S	S	S		4			LARGE		
	[16]			(E)SCREW-TAPPING						(F)VIS						
				(D)SCHRAUBE						(S)TORNILLO						
	03160-48165	.	.	B	B	B	S	S	S		4					
	[17]			(E)GAUGE A-TEMPERATURE						(F)JAUGE-TEMPÉRATURE						
				(D)ANZEIGE, TEMPERATUR						(S)JUNTA-TEMPERATURA						
	96214631	.	.	B	B	B	S	.	.		1			WOTACHO		
	[18]			(E)GAUGE A-FUEL						(F)JAUGE-CARBURANT						
				(D)ANZEIGE, BENZIN						(S)JUNTA-COMBUSTIBLE						
	96214627	.	.	B	B	B	S	.	.		1			WOTACHO		
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

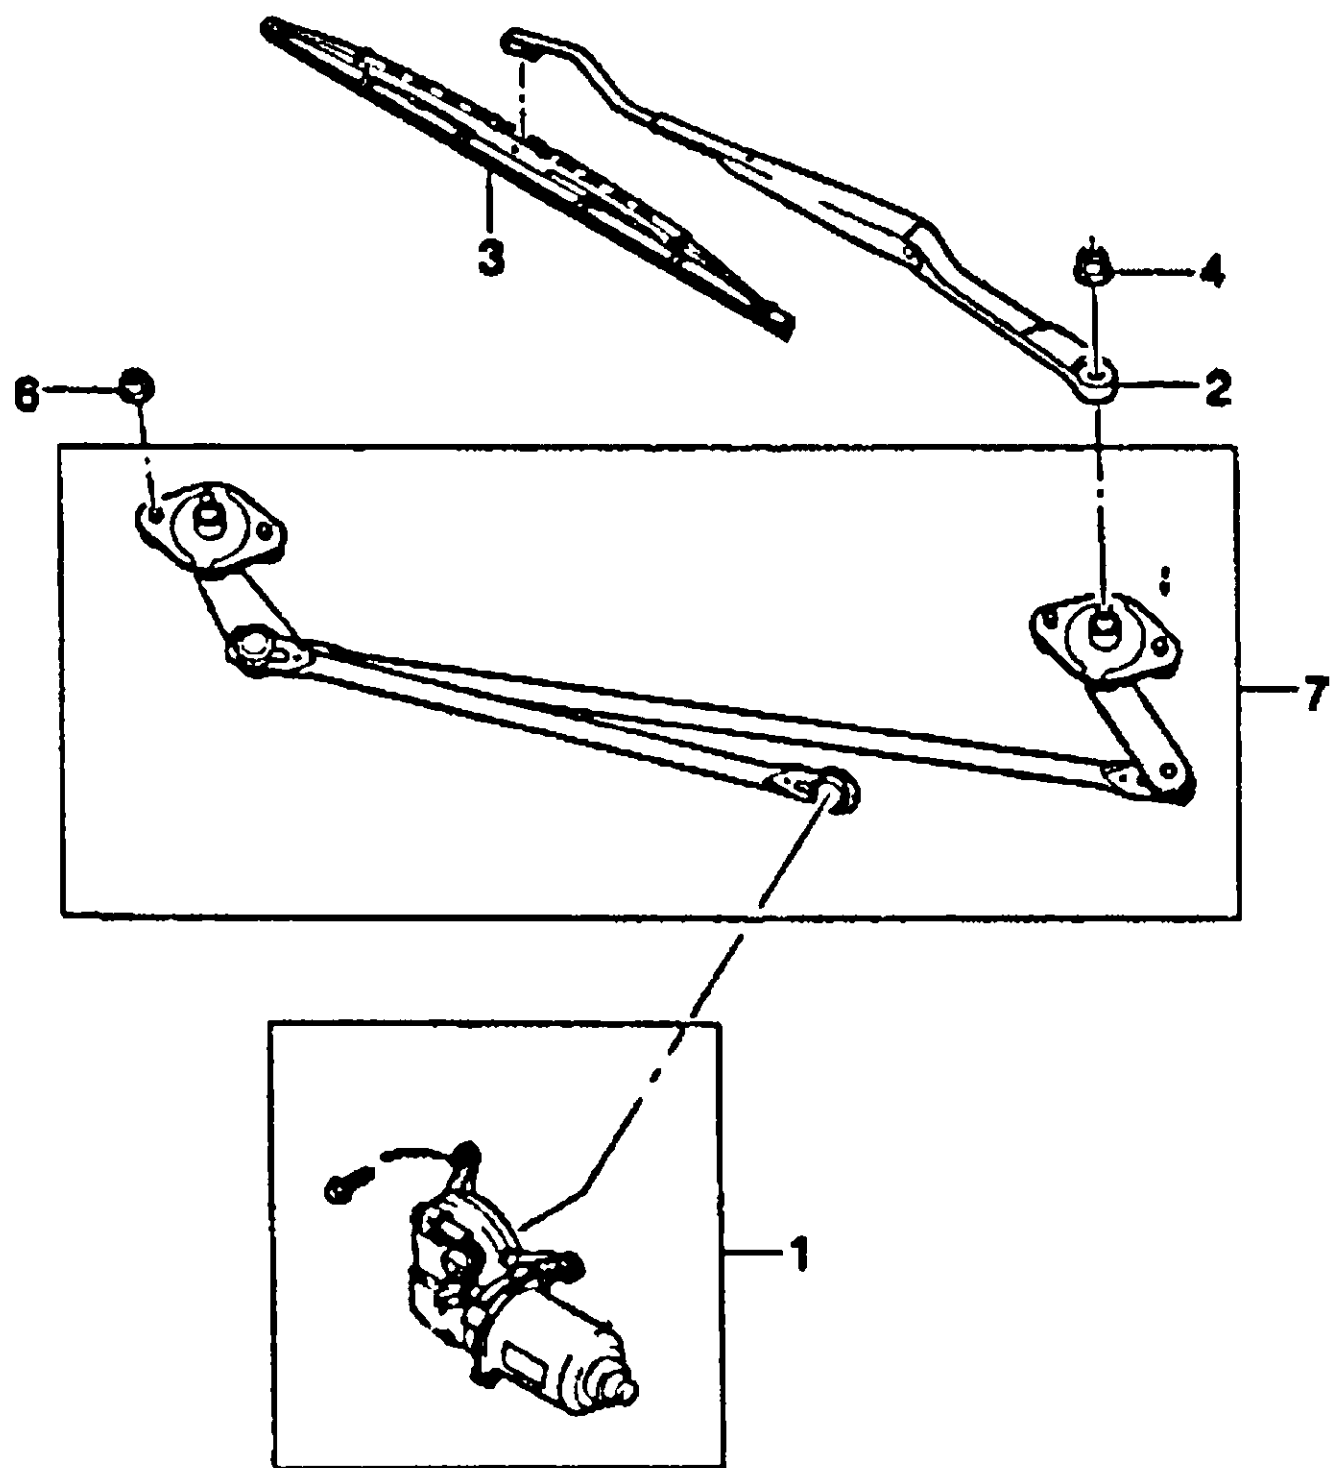


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	[01] 96303118	(E)MOTOR A-WINDSHIELD WIPER (D)MOTOR,SCHEIBENWISCHER			B	B	B	S	S	S			(F)ESSUIE-GLACE (S)MOTOR-LIMPIAPARABRISAS	1	LM	
	[02] 96306872	(E)ARM A-WIPER (D)ARM,SCHEIBENWISCHER			B	B	B	S	S	S			(F)BRAS-ESSUIE-GLACE (S)BRAZO-LIMPIAPARABRISAS	LH 1		
	96306103				B	B	B	S	S	S				RH 1		
	[03] 96132997	(E)BLADE A-WIPER (D)SCHEIBENWISCHERGUMMI			B	B	B	S	S	S			(F)BALAI D'ESSUIE-GLACE (S)ESCOBILLA-LIMPIAPARABRISA	2		
	[04] 09145-08001	(E)NUT-CAP (D)MUTTER			B	B	B	S	S	S			(F)ECROU (S)TUERCA	2		
	[06] 08316-25063	(E)NUT-HEXAGON FLANGE (D)MUTTER			B	B	B	S	S	S			(F)ECROU (S)TUERCA	4		
	[07] 96303360	(E)LINKAGE A-WIPER (D)VERBINDUNG			B	B	B	S	S	S			(F)ACOUPLEMENT (S)ENLACE	1	K5	
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC = COMMON		M = MANUAL T/A A = AUTOMATIC T/A = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

5320 BACK WINDOW WIPER


4N16

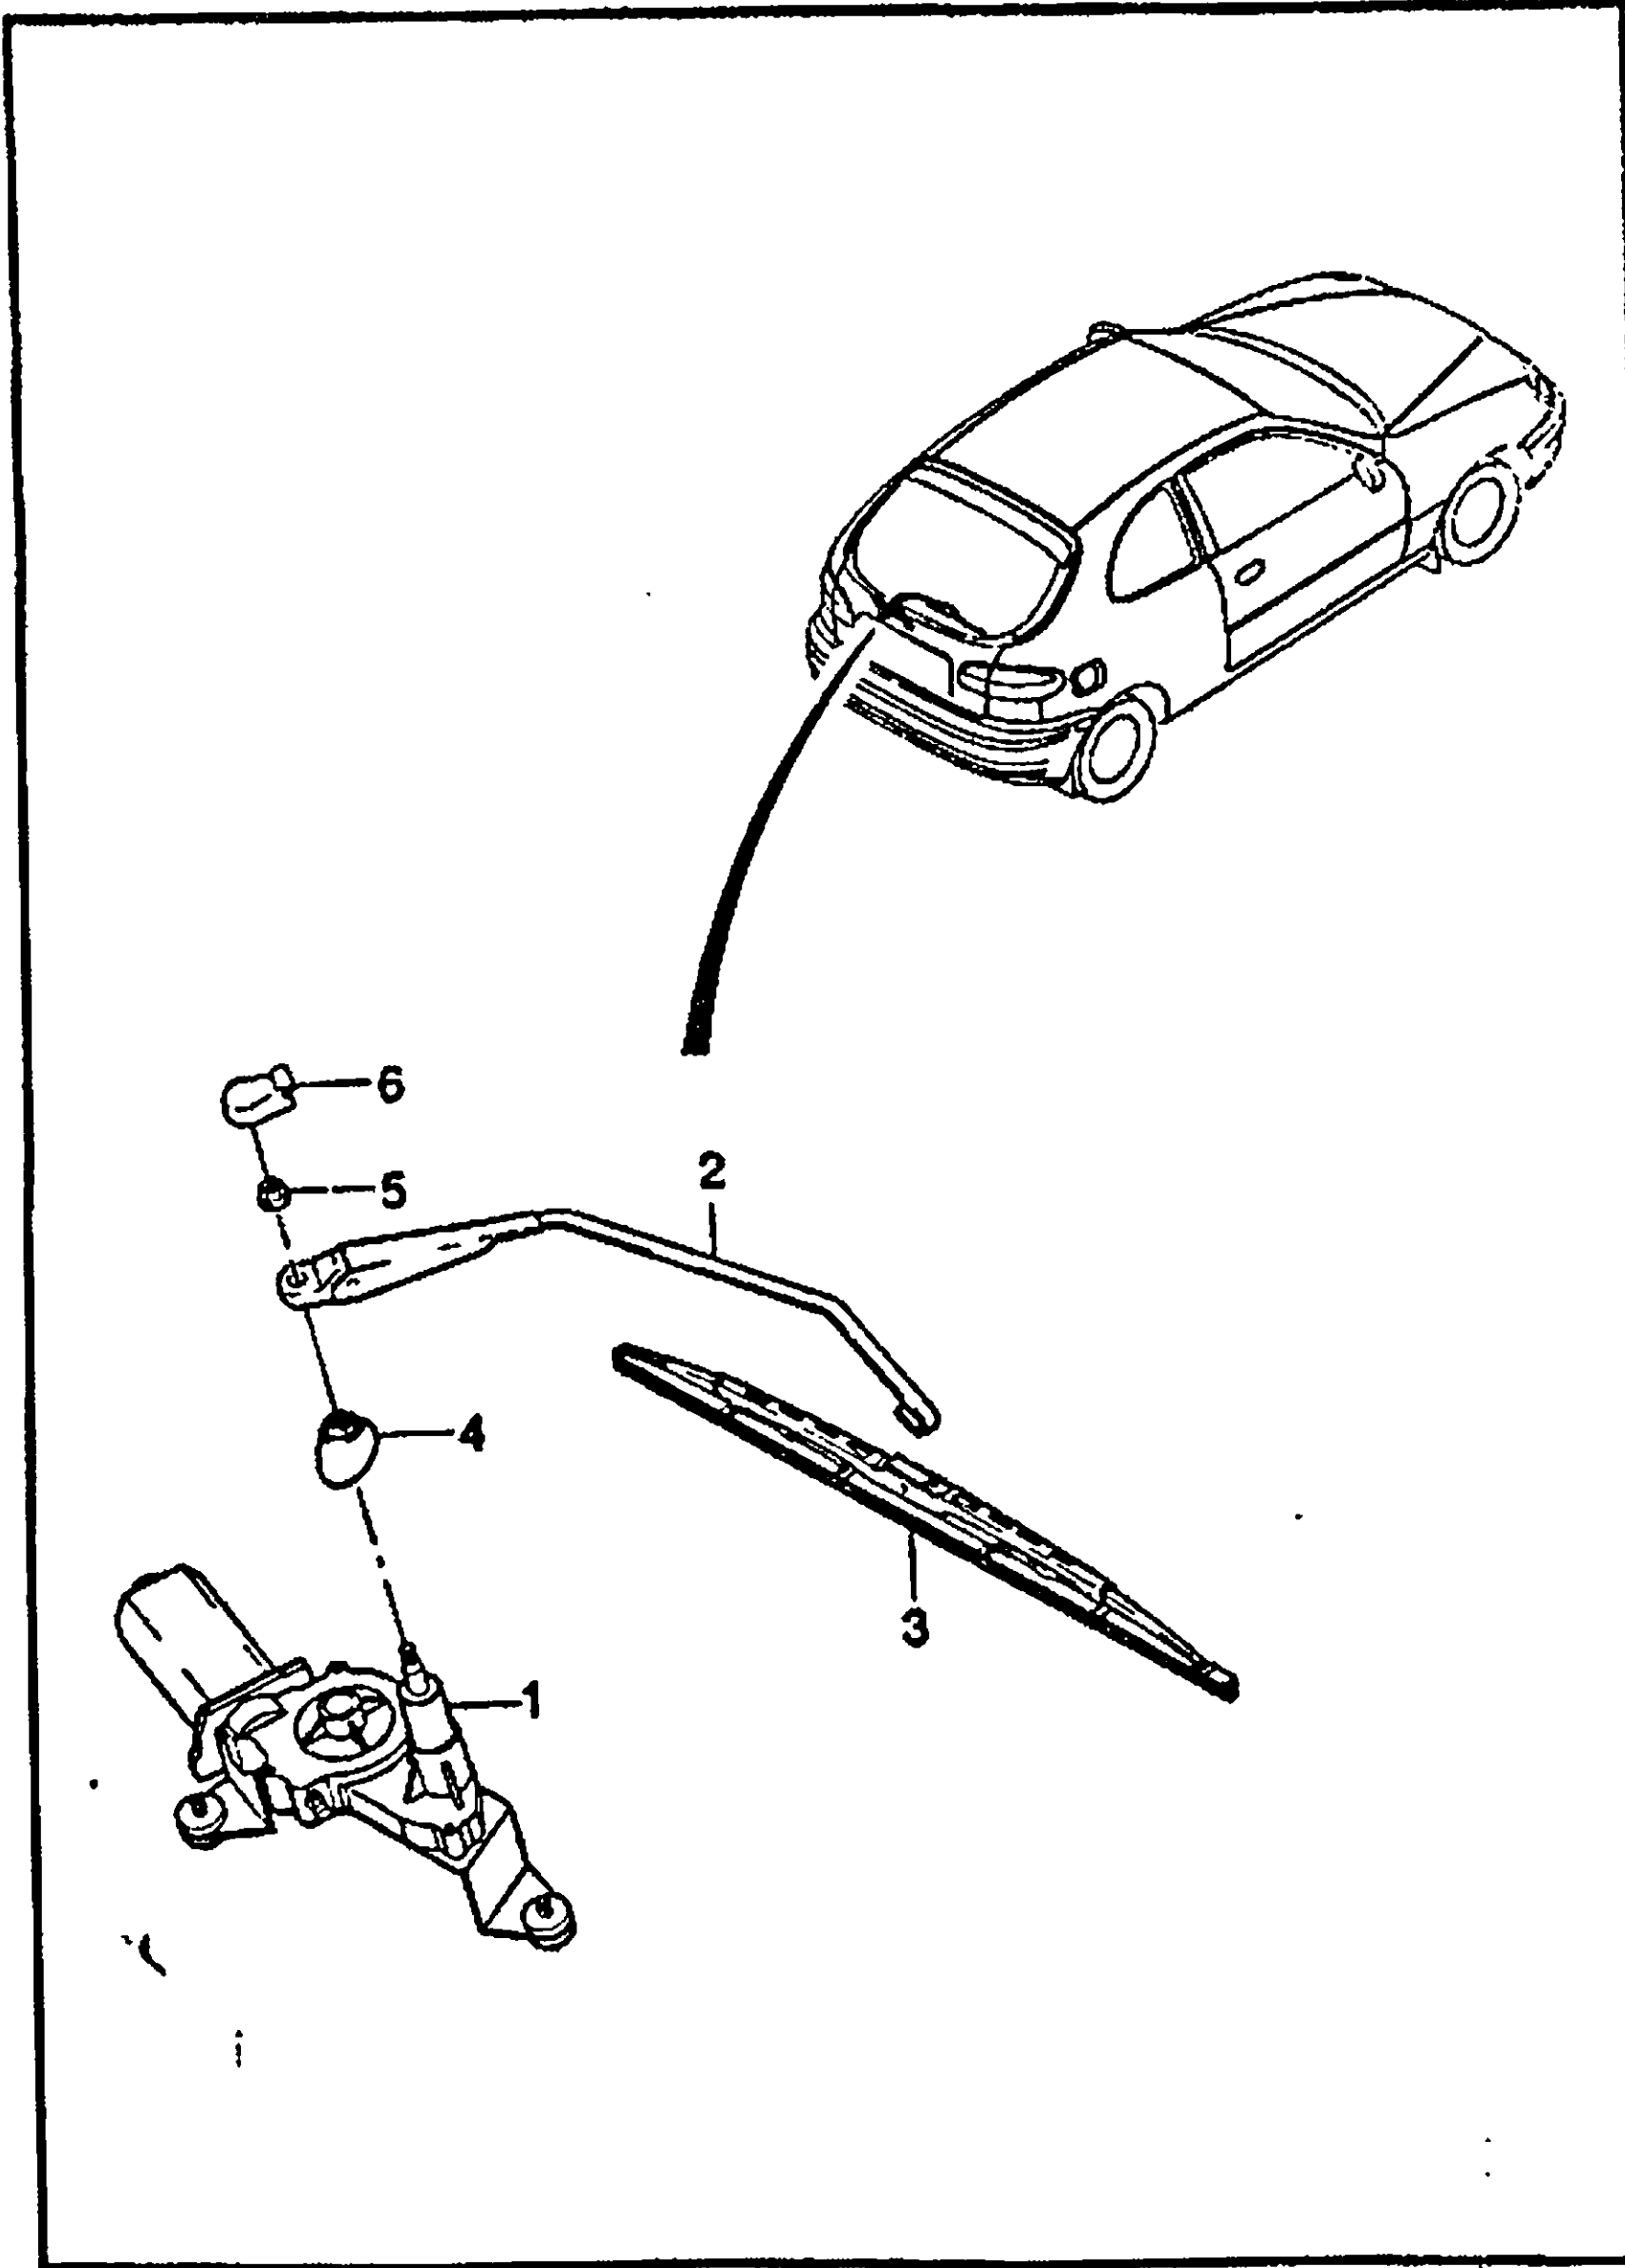


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L I T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL			FROM	TO				
				4 N	3 H	5 H	S S							S S	S S
	[01] 96303127	(E)MOTOR A-BACK WINDOW WIPER (D)MOTOR,SCHEIBENWISCHER								(F)MOTEUR-ESSUIE (S)MOTOR-LIMPIAPARABRISAS			BM		
	[02] 96303365	. . . B B S . S (E)ARM A-WIPER (D)ARM,SCHEIBENWISCHER								1 (F)BRAS-ESSUIE-GLACE (S)BRAZO-LIMPIAPARABRISAS					
	[03] 96132997	. . . B B S . S (E)BLADE A-WIPER (D)SCHEIBENWISCHERGUMMI								1 (F)BALAI D'ESSUIE-GLACE (S)ESCOBILLA-LIMPIAPARABRISA					
	[04] 96221124	. . . B B S . S (E)GROMMET-WIPER MOTOR (D)ÖSE								1 (F)VIROLE (S)AISLANTE					
	[05] 08316-25063	. . . B B S . S (E)NUT-HEXAGON FLANGE (D)MUTTER								1 (F)ECROU (S)TUERCA					
	[06] 96303372	. . . B B S . S (E)CAP-WIPER ARM (D)DECKEL,SCHEIBENWISCHER								1 (F)CHAPEAU (S)TAPA-LIMPIAPARABRISAS				E2	
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

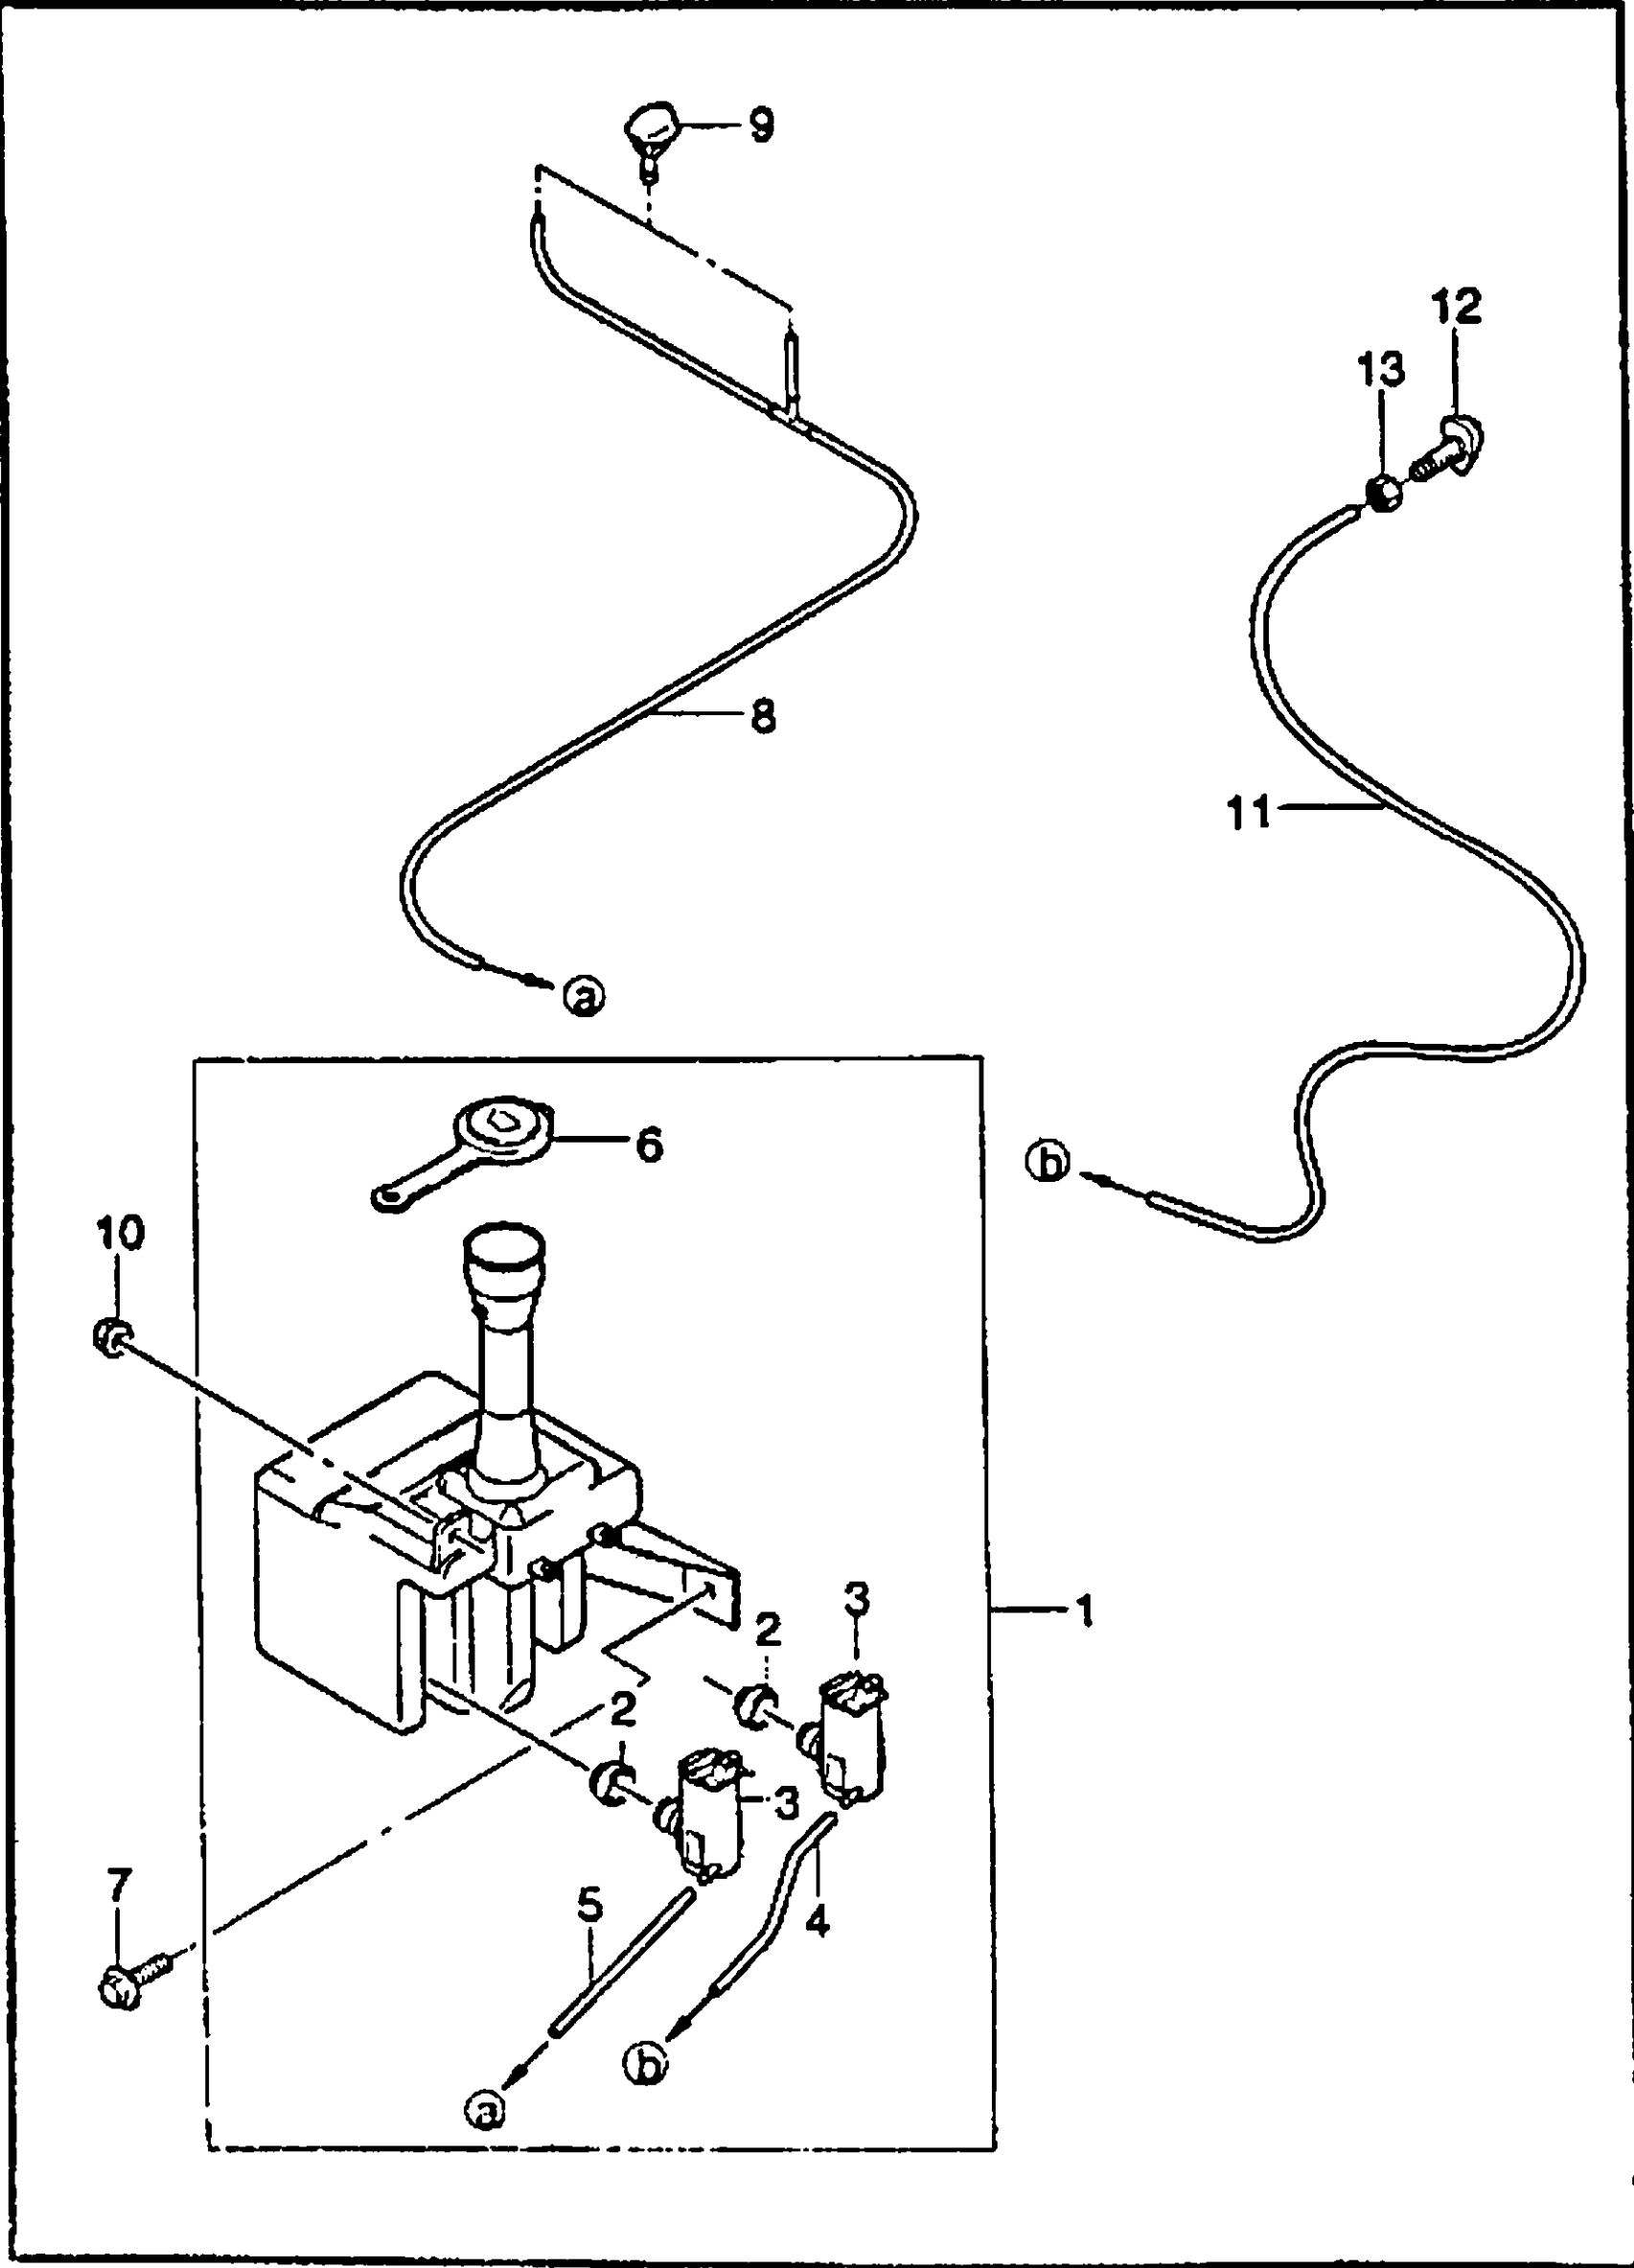


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)RESERVOIR A-WINDSHIELD (D)BEHÄLTER									(F)RESERVOIR (S)RESERVA					
	96303534	.	.	B	.	.	S	S	S	-C25	1			RN		
	96303535	.	.	.	B	B	S	.	S	&C25	1	970602		RB		
N	96255654	.	.	.	B	B	S	.	S	&C25	1	970602				
	[02]	(E)GROMMET-PUMP (D)ÖSE									(F)VIROLE (S)AISLANTE					
	96233400	.	.	B	.	.	S	S	S	-C25	1					
	96233400	.	.	.	B	B	S	.	S	&C25	2					
	[03]	(E)PUMP A (D)PUMPE,ELEKTRISCHE									(F)POMPE-LAVEUR ELECTRIQUE (S)BOMBA -LIMPIADOR					
	96190259	.	.	B	.	.	S	S	S	-C25	1					
	96190259	.	.	.	B	B	S	.	S	&C25	2					
	[04]	(E)HOSE A-RESERVOIR (D)SCHLAUCH,BEHÄLTER									(F)TUYAU-RESERVOIR (S)MANGUERA-RESERVA					
	96233398	.	.	.	B	B	S	.	S	&C25	1	970602	980mm			
N	T.B.D	.	.	.	B	B	S	.	S	&C25	1	970602	280mm			
	[05]	(E)HOSE A-RESERVOIR (D)SCHLAUCH,BEHÄLTER									(F)TUYAU-RESERVOIR (S)MANGUERA-RESERVA					
	96233397	.	.	B	B	B	S	S	S		1					
	[06]	(E)CAP-RESERVOIR (D)DECKEL,BEHÄLTER									(F)CHAPEAU-RESERVOIR (S)TAPA-RESERVA					
	96233396	.	.	B	B	B	S	S	S		1					
	[07]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO					
	09116-06024	.	.	B	B	B	S	S	S		1		WWASHER			
	[08]	(E)HOSE A-HOOD (D)SCHLAUCH,HAUBE									(F)TUYAU-CAPOT (S)MANGUERA-CAPO					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

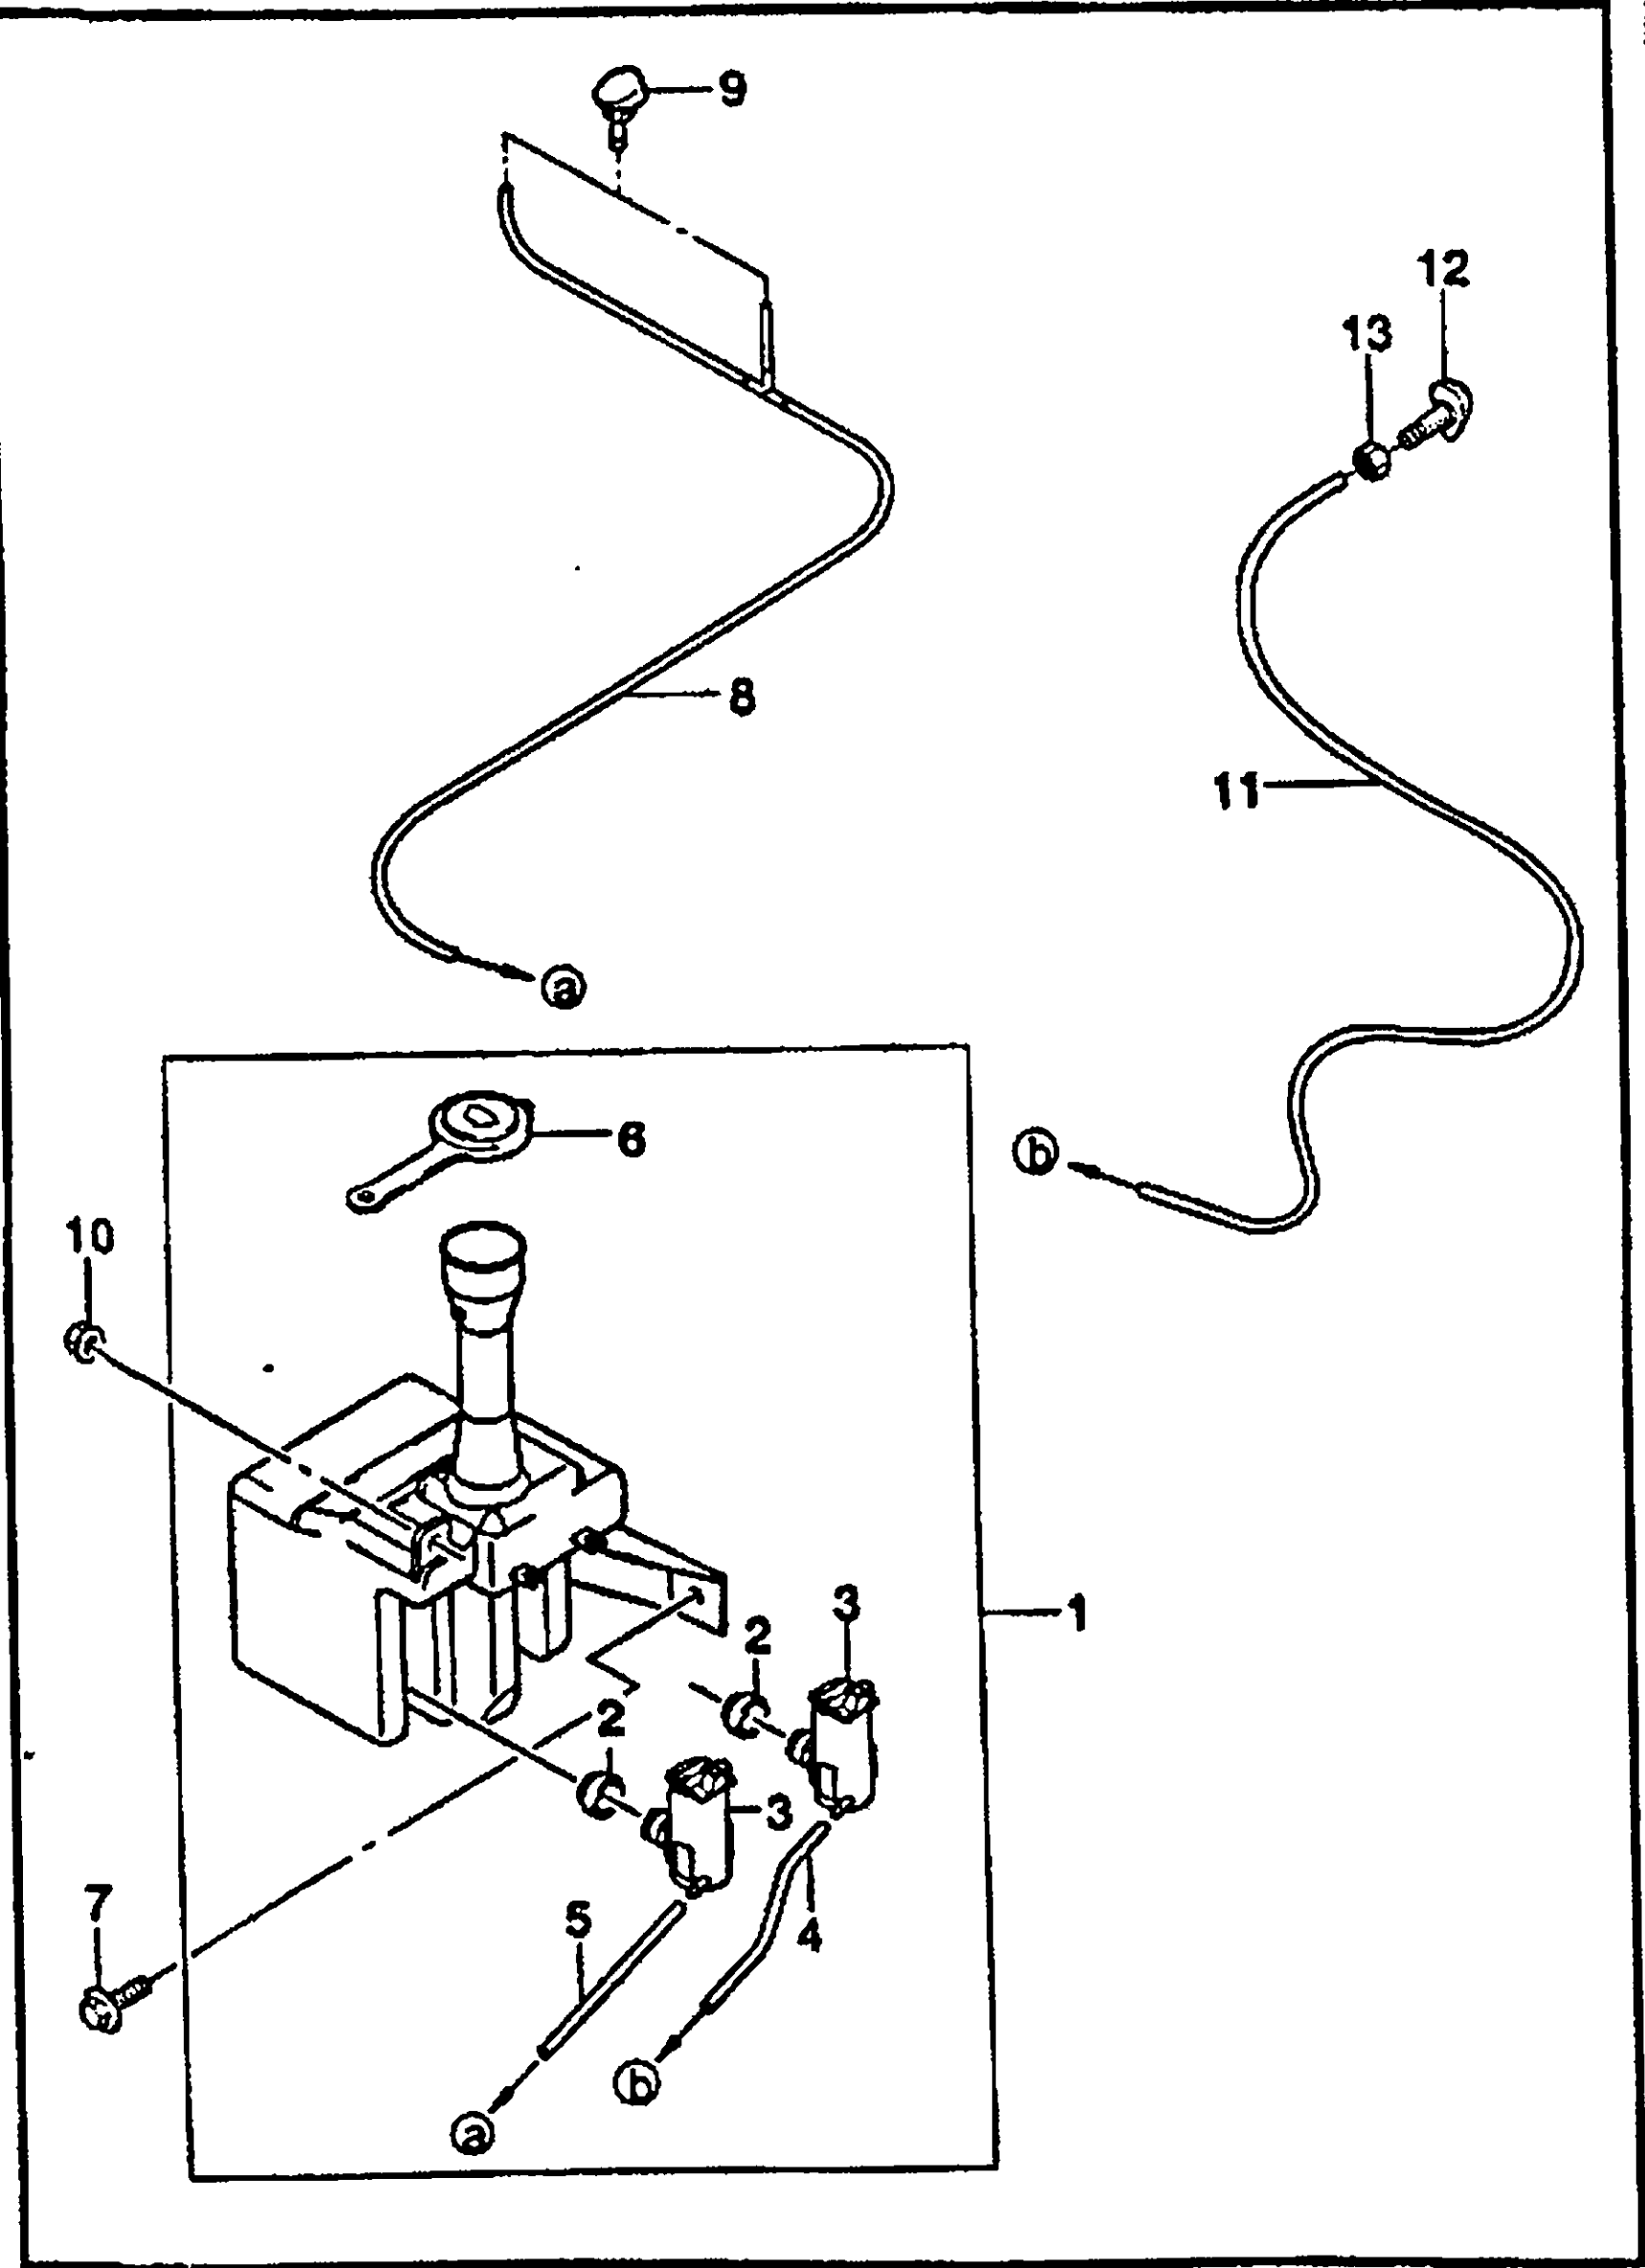


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S X
	96304915	.	.	B	B	B	S	S	S		1	970502				
O	96252906	.	.	B	B	B	S	S	S		1	970502				
	[09]	(E)NOZZLE A-WINDSHIELD WASHE (D)MÜNDUNG, WINDSCHUTZSCHEIBE										(F)BEC-LAVE (S)BOQUILLA-LIMPIA PARABRISAS				
	96231860	.	.	B	B	B	S	S	S		2					
	[10]	(E)NUT-HEXAGON (D)MUTTER										(F)ECROU (S)TUERCA				
	08361-25063	.	.	B	B	B	S	S	S		2			WASHER		
	[11]	(E)HOSE-REAR WASHER (D)SCHLAUCH										(F)TUYAU (S)MANGUERA				
	96242636	.	.	.	B	.	S	.	S	&C25	1					
	96242637	.	.	.	.	B	S	.	S	&C25	1					
	[12]	(E)NOZZLE A-REAR WASHER (D)MÜNDUNG, WASHANLAGE										(F)BEC-LAVE-GLACE ARRIERE (S)BOQUILLA-LIMPIADOR				
	96303637	.	.	.	B	B	S	.	S	&C25	1					
	[13]	(E)NUT (D)MUTTER										(F)ECROU (S)TUERCA				
	09159-08011	.	.	.	B	B	S	.	S	&C25	1					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC B = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

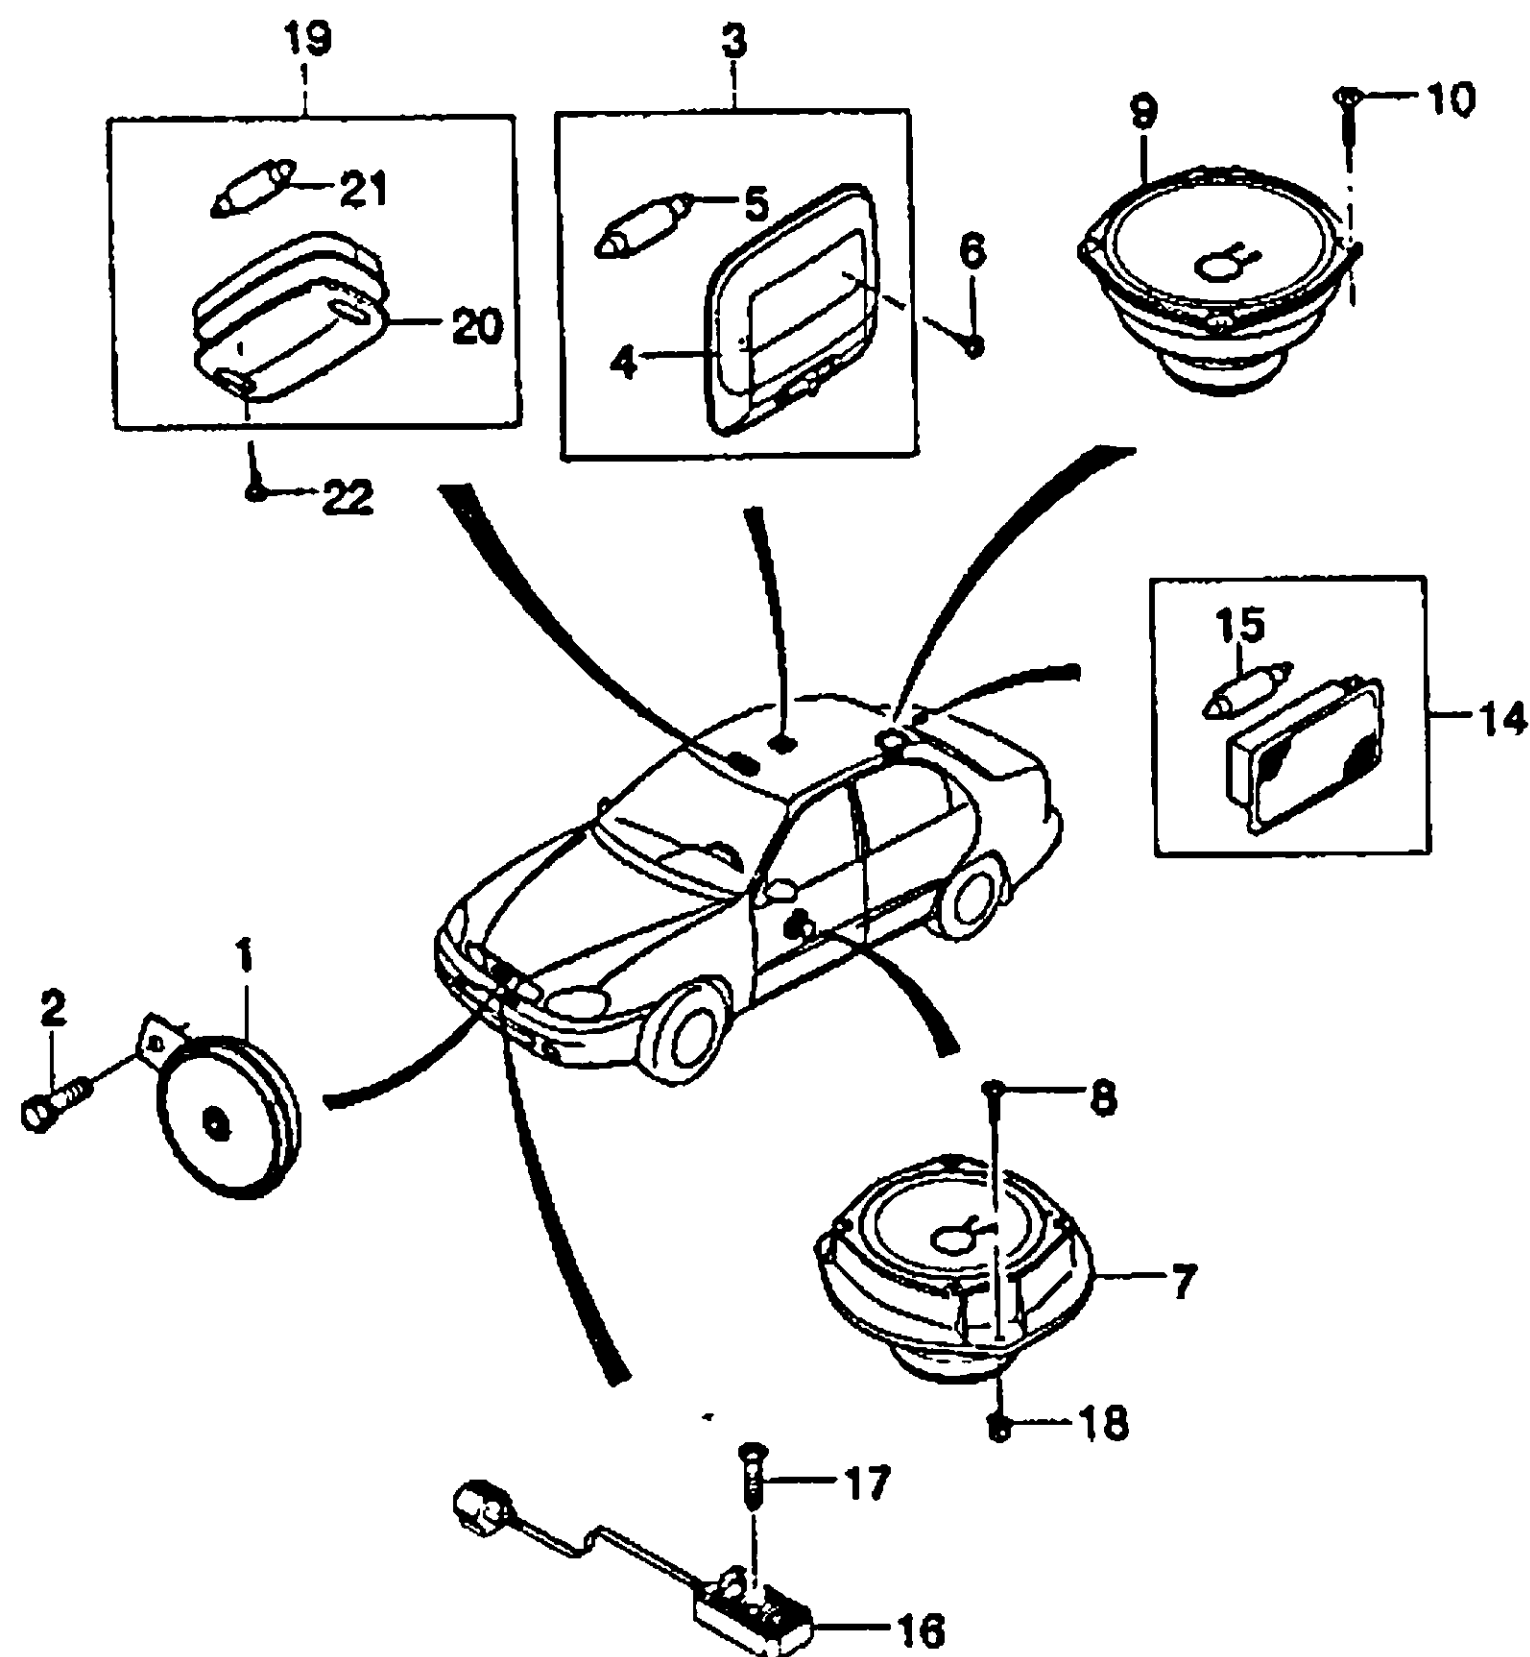


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL			FROM	TO			
				4 N	3 H	5 H	S S							S S
	[01]	(E)HORN A (D)HUPE							(F)AVERTISSEUR (S)BOCINA					
	96242524	. . . B B B S S S						-2G3-U05	1	970609		FL		
	96242619	. . . B B B A A A						&2G3-U05	1	970609		EL		
	96242524	. . . B B B S S S							1	970609		FL		
	96242525	. . . B B B A A A						&U05	1		NOT APPLIED	FH		
	[02]	(E)BOLT (D)SCHRAUBE							(F)BOULON (S)PERNO					
	09118-08003	. . . B B B S S S						-U05	1		W/WASHER			
	09118-08003	. . . B B B A A A						&U05	2		NOT APPLIED			
	[03]	(E)LAMP A-ROOM,CENTER (D)LAMPE,RAUM							(F)LAMPE-INTERIEUR (S)LAMPARA-CABINA					
	96236130	. . . B B B S S S						-CF6	1					
	[04]	(E)LENS-ROOM LAMP (D)OBJEKTIV							(F)LENTILLE (S)LENTE					
	96230743	. . . B B B S S S						-CF6	1					
	[05]	(E)BULB (D)B&RNE							(F)AMPOULE (S)BOMBILLA					
	05404-10001	. . . B B B S S S						-CF6	1		10W(34mm)			
	[06]	(E)SCREW-TAPPING (D)SCHRAUBE							(F)VIS (S)TORNILLO					
	03170-42138	. . . B B B S S S						-CF6	2					
	[07]	(E)SPEAKER A-FRONT (D)LAUTSPRECHER,VORNE							(F)HAUT-PARLEUR-AVANT (S)ALTAVOZ-FRENTE					
	96303513	. . . B B B S S S							2					
	[08]	(E)SCREW-TAPPING (D)SCHRAUBE							(F)VIS (S)TORNILLO					
	03160-48165	. . . B B B S S S							6					
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

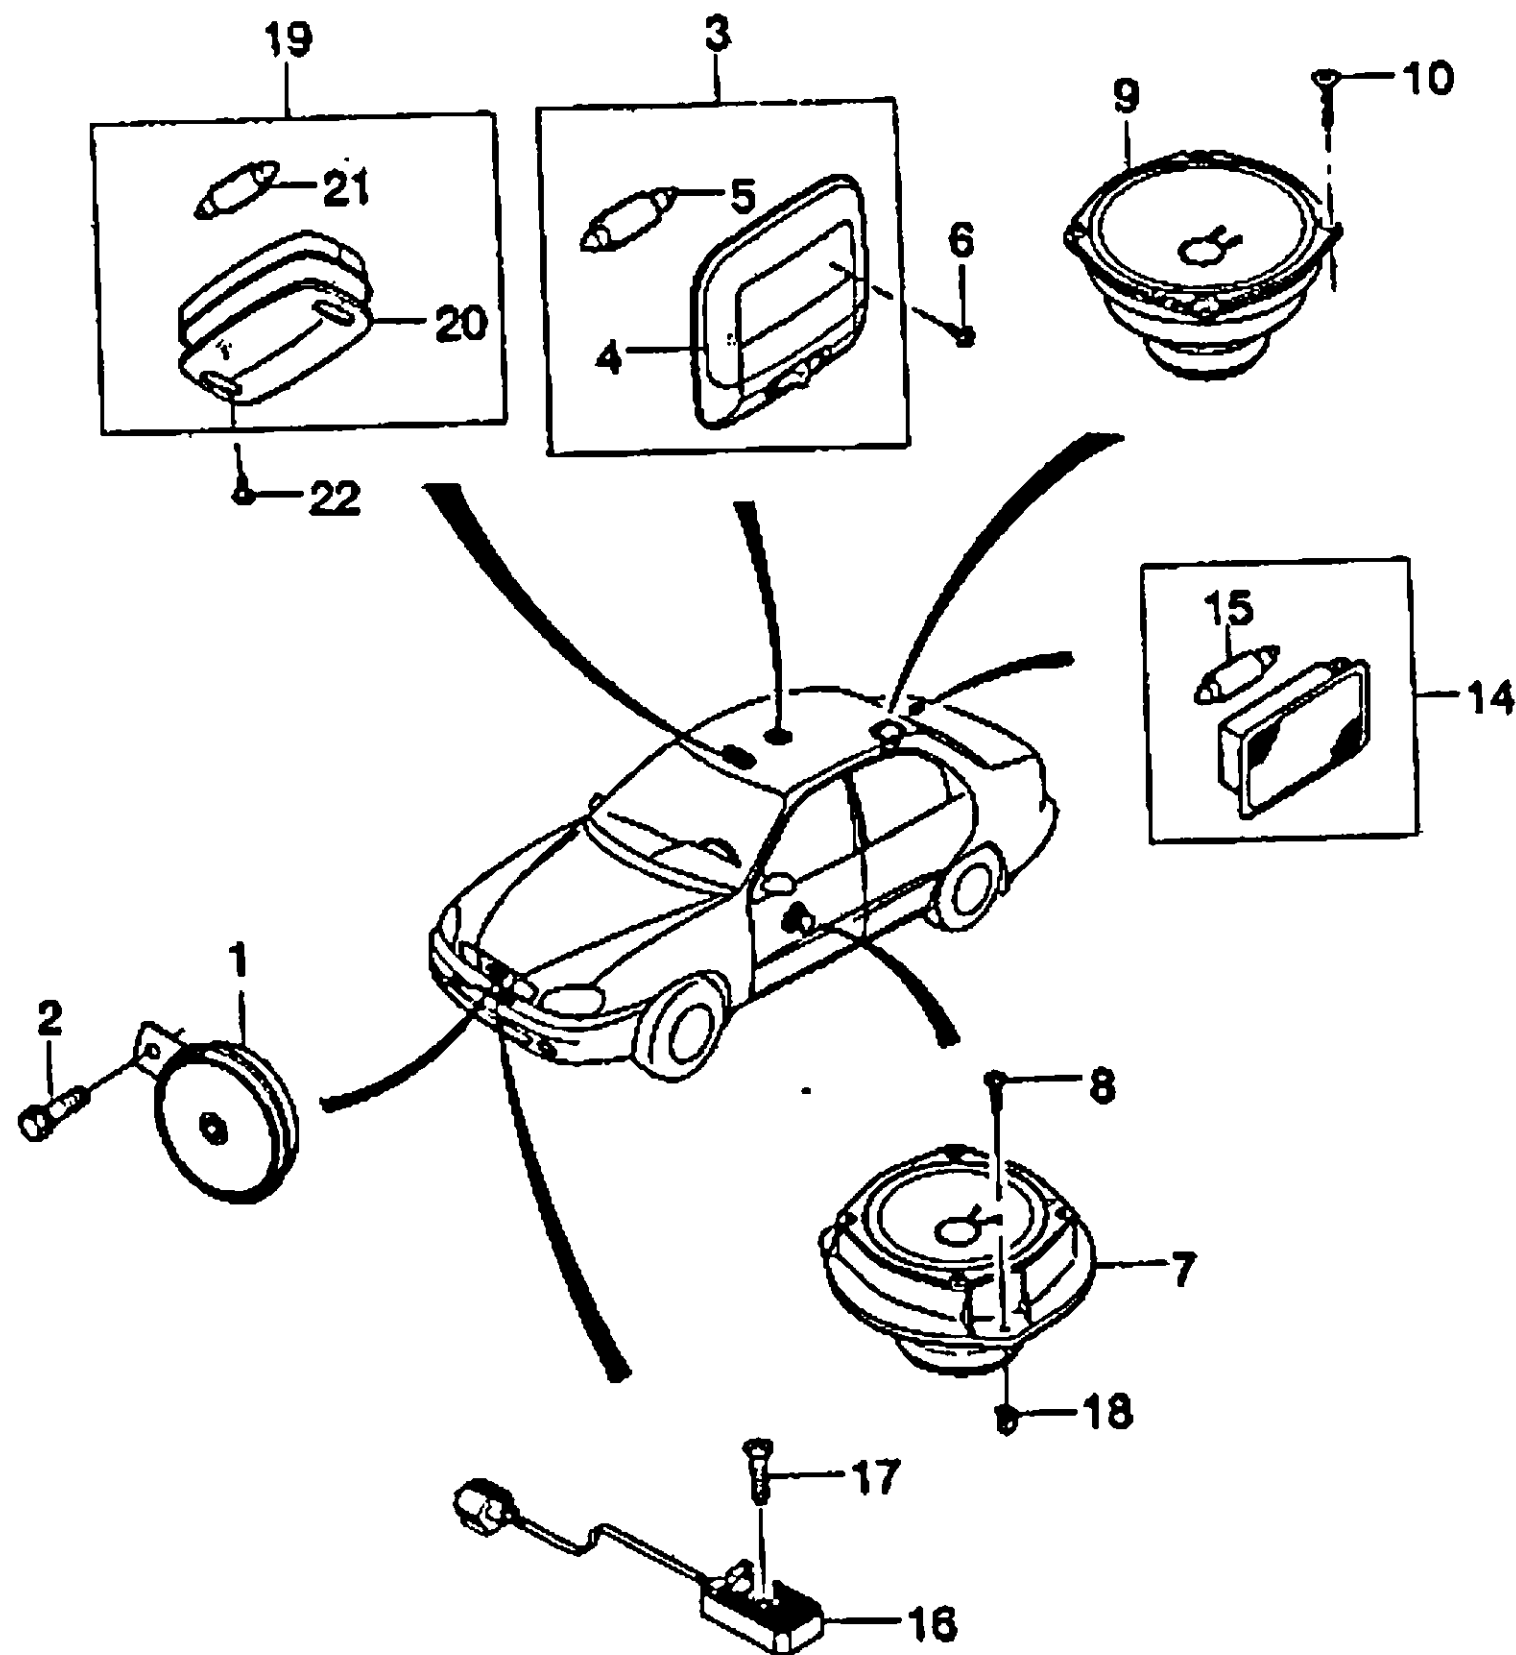

KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L I R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S S								S X
	[09]	(E)SPEAKER A-REAR (D)LAUTSPRECHER,HINTEN										(F)HAUT-PARLEUR-ARRIERE (S)ALTAVOZ-TRASERO				
	96303515	.	.	B	.	.	O	O	S	&US8	2		STANDARD	ST		
	96303516	.	.	B	.	.	.	O	O	&U83	2		DELUXE	DL		
	96216123	.	.	.	B	B	O	.	S	&US8	2		STANDARD	HS		
	96216124	.	.	.	B	B	.	.	O	&U83	2		DELUXE	HD		
	[10]	(E)SCREW-TAPPING (D)SCHRAUBE										(F)VIS (S)TORNILLO				
	03110-48095	.	.	B	B	B	O	O	S		8					
	[14]	(E)LAMP A-TRUNK (D)LAMPE										(F)LAMPE (S)LAMPARA				
	08972943	.	.	B	B	B	S	S	S		1	970602				
Y	96247398	.	.	B	B	B	S	S	S		1	970602				
	[15]	(E)BULB (D)BIRNE										(F)AMPOULE (S)BOMBILLA				
	05405-10001	.	.	B	B	B	S	S	S		1		10W(40mm)			
	[16]	(E)RESISTOR (D)WIDERSTAND										(F)RESISTANCE (S)RESISTOR				
	96190362	.	.	B	B	B	S	S	S	&C48	1					
	[17]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE										(F)BOULON (S)PERNO				
	01517-06353	.	.	B	B	B	S	S	S	&C48	1					
	[18]	(E)NUT-SPEED (D)MUTTER										(F)ECROU (S)TUERCA				
	09148-04005	.	.	B	B	B	S	S	S		6					
	[19]	(E)LAMP A-ROOM,FRONT (D)LAMPE,RAUM,VORNE										(F)LAMPE-INTERIEUR,AVANT (S)LAMPARA-CABINA,DELANTERO				
	96238283	.	.	B	B	B	O	O	O	&CF6	1					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							




M = MANUAL T/A	4 N = 4 DOOR NOTCH
A = AUTOMATIC T/A	3 H = 3 DOOR HATCH
. = COMMON	5 H = 5 DOOR HATCH

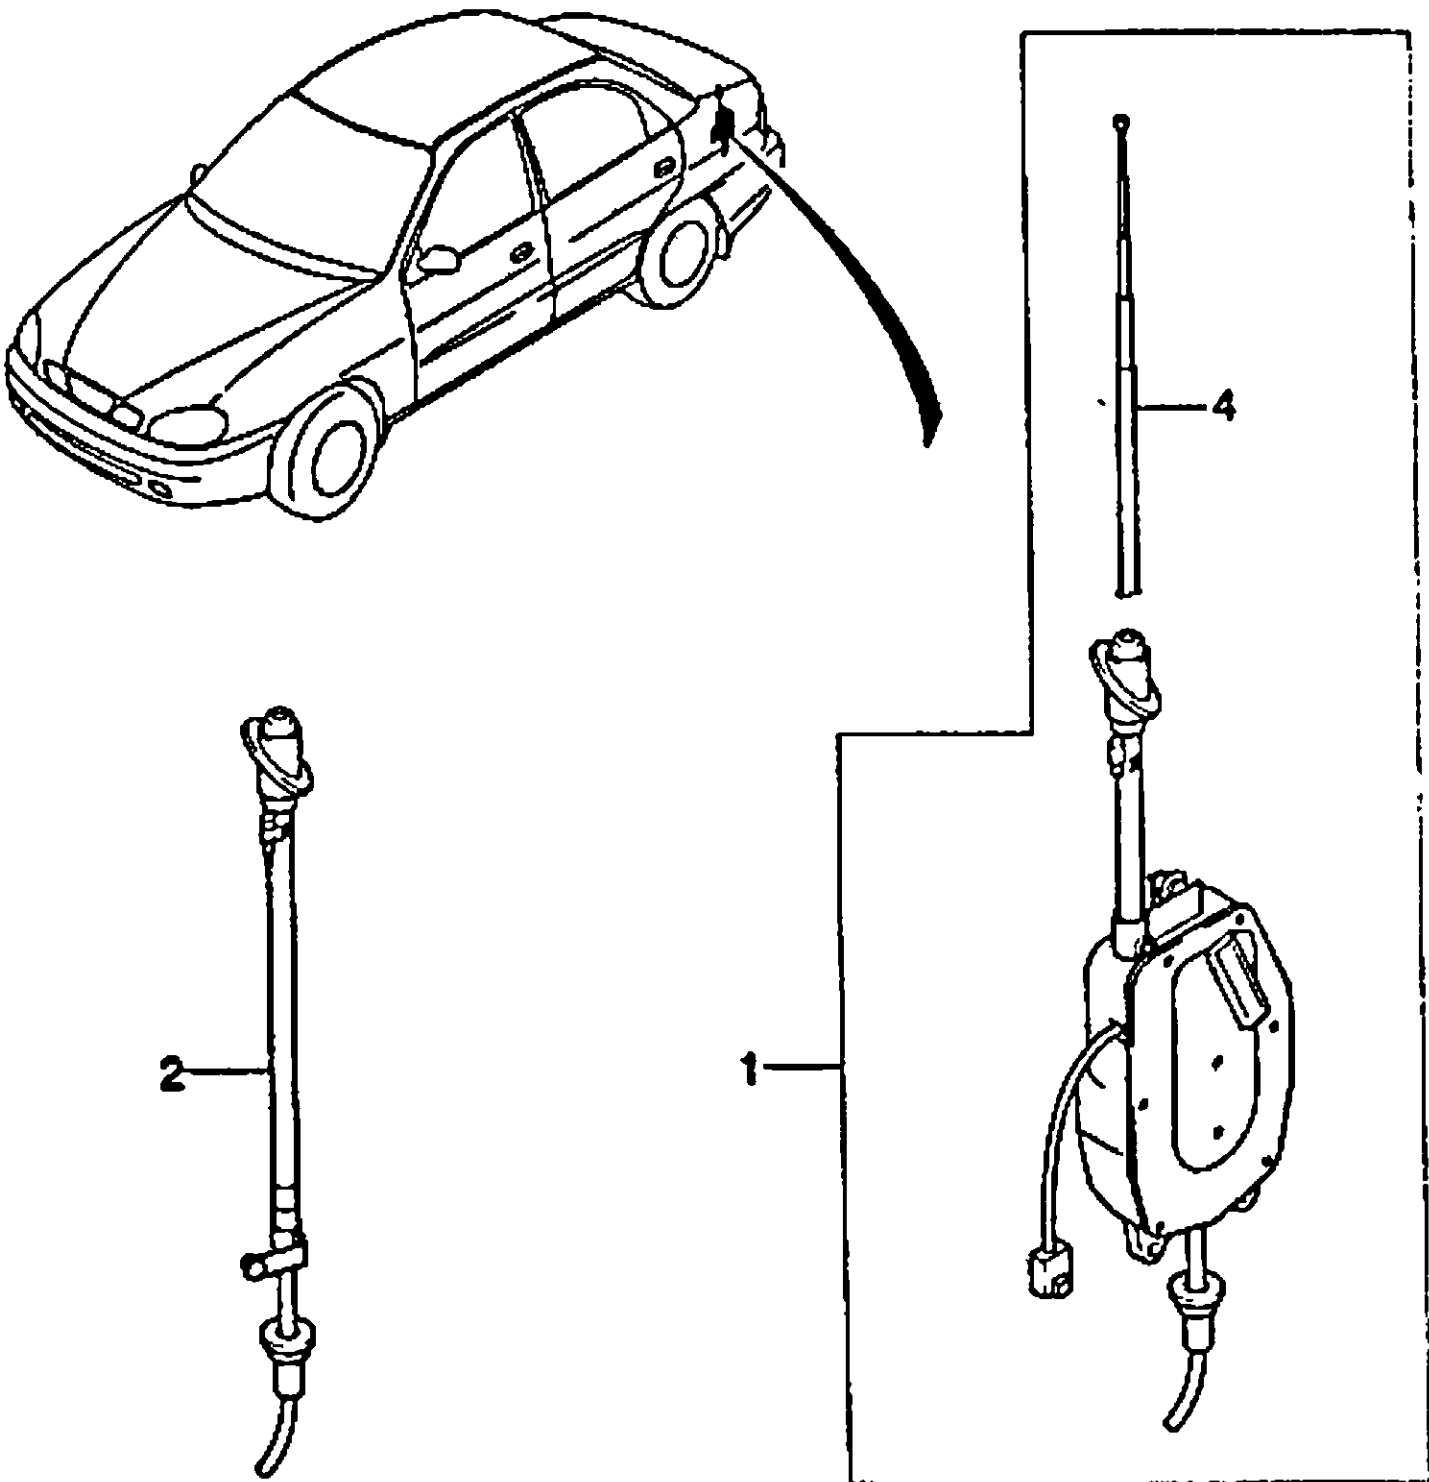



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S S	S X
	[01]	(E)ANTENNA A-AUTOMATIC (D)ANTENNE AUTOMATISCH									(F)ANTENNE-AUTOMATIQUE (S)ANTENA-AUTOMATICO					
	96303522	.	.	B	.	.	.	S	&U75		1			AN		
	96219197	.	.	.	B	.	.	S	&U75		1			AH		
	96242523	.	.	.	.	B	.	S	&U75		1			AS		
	[02]	(E)ANTENNA A-MANUAL (D)ANTENNE MANUELLE									(F)ANTENNE-MANUELLE (S)ANTENA-MANUAL					
	96303521	.	.	B	.	.	S	S	&U73		1	970407		MN		
O	96255031	.	.	B	.	.	S	S	&U73		1	970407		NM		
	96219195	.	.	.	B	.	S	.	&U73		1	970407		MH		
O	96255032	.	.	.	B	.	S	.	&U73		1	970407		3M		
	96242521	.	.	.	.	B	S	.	&U73		1	970407		M5		
O	96255033	.	.	.	.	B	S	.	&U73		1	970407		5M		
	[04]	(E)POLE-ANTENNA (D)STAB,ANTENNE									(F)HAMPE-ANTENNE (S)POSTE-ANTENA					
	S5420004	.	.	B	B	B	.	S	&U75		1					

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

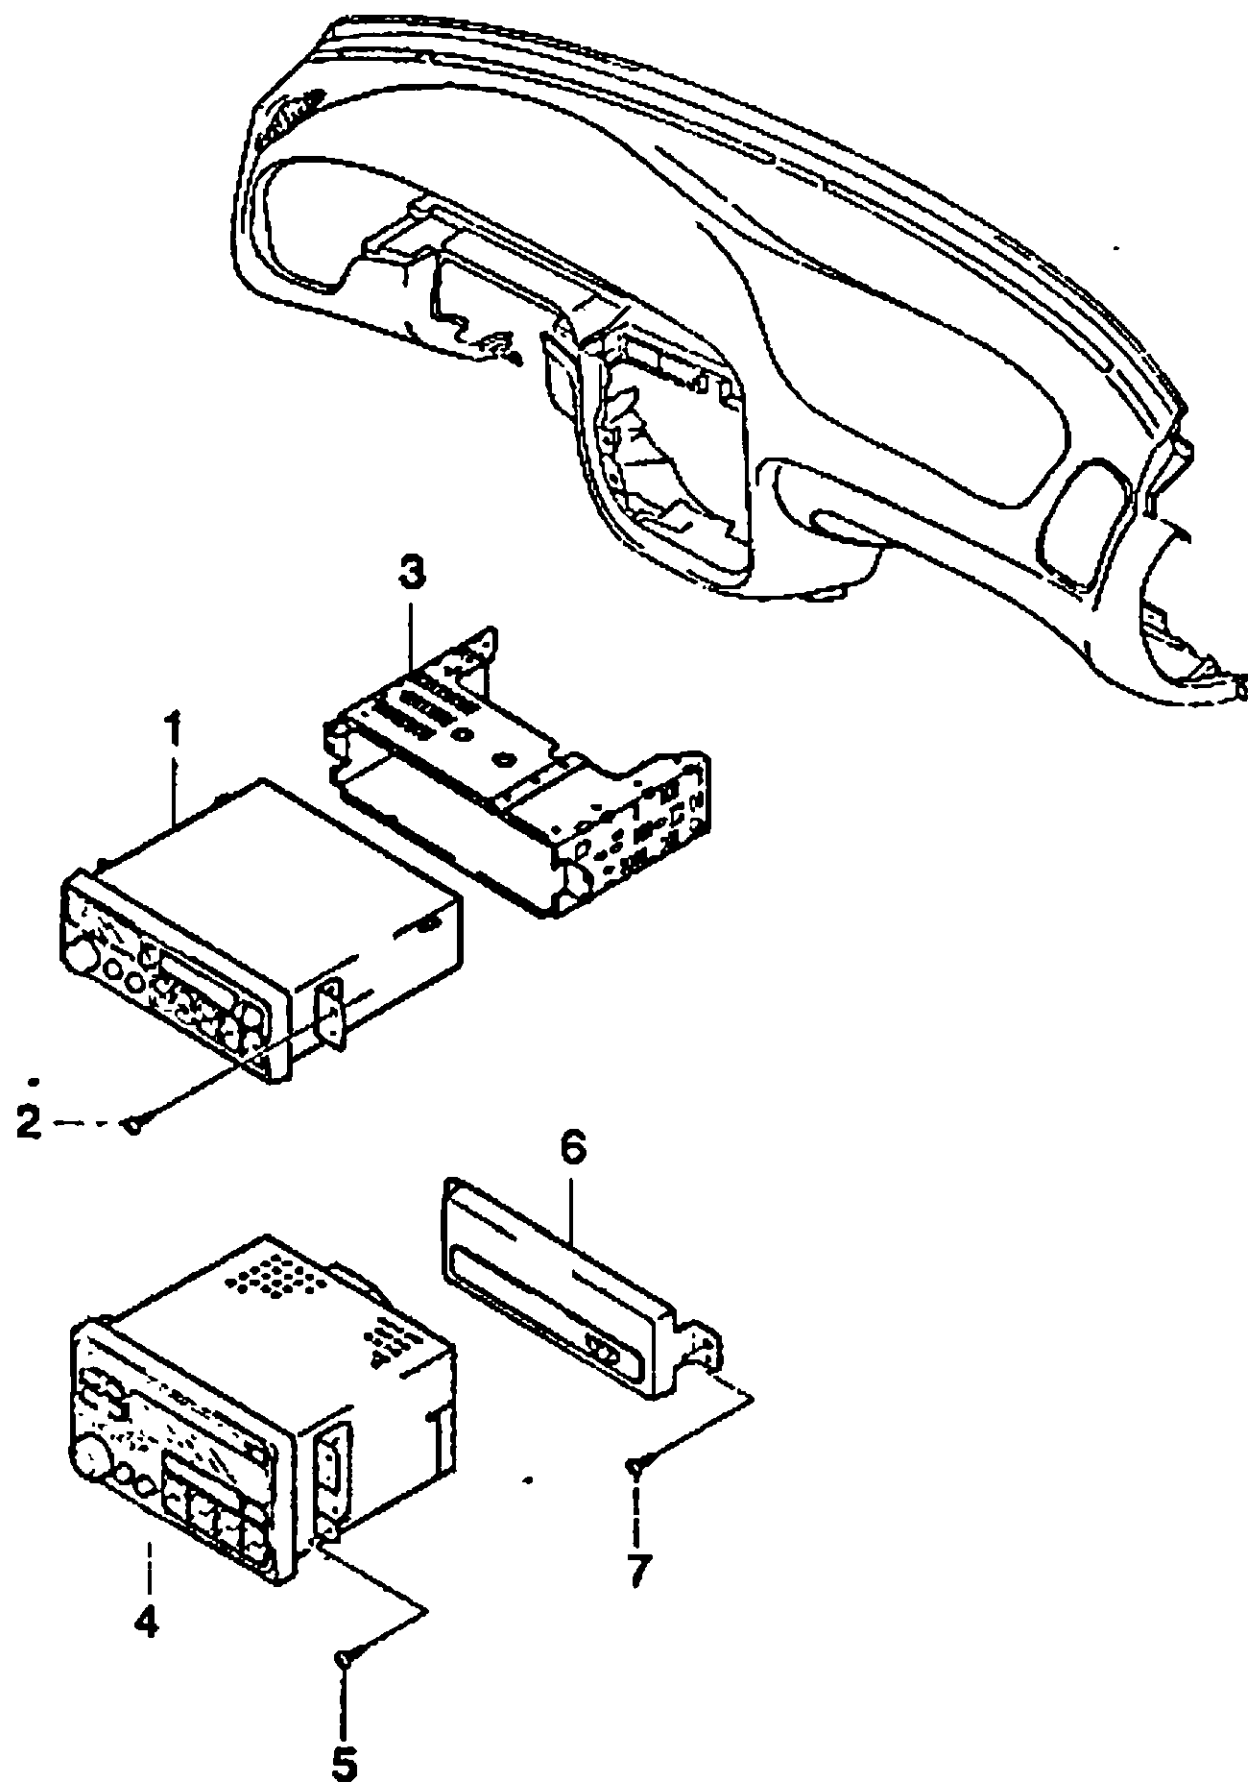


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S E
	[01]	(E)CASSETTE (D)KASSETTE									(F)CASSETTE (S)CASETE				
	96252563	.	.	B	B	B	O	O	O	&UNA-XLA/2G3	1			BA	
	96242627	.	.	B	B	B	A	A	A	&UNA&2G3	1			BE	
	96252737	.	.	B	B	B	A	A	A	&UNA&XLA	1			BL	
	96248434	.	.	B	B	B	O	O	O	&UN1-XLA/2G3	1			SA	
	96222377	.	.	B	B	B	A	A	A	&UN1&2G3	1			SE	
	96222379	.	.	B	B	B	A	A	A	&UN1&XLA	1			SL	
	96248432	.	.	B	B	B	.	O	O	&UN6-XLA/2G3	1			DD	
	96312715	.	.	B	B	B	.	A	A	&UN6&2G3	1			WF	
	96312721	.	.	B	B	B	.	A	A	&UN6&XLA	1			WK	
	[02]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	02116-05165	.	.	B	B	B	O	O	O	&UN1/UN6	2				
	[03]	(E)FRAME-CASSETTE (D)RAHMEN-KASSETTE									(F)CADRE-CASSETTE (S)ARMADURA-CASETE				
	96254652	.	.	B	B	B	S	S	S		1		A/S ONLY		
	[04]	(E)PLAYER-COMPACT DISK (D)SPIELER,CD									(F)MAGNETOPHONE (S)PLACA-CD				
	96252564	.	.	B	B	B	.	O	O	-XLA/2G3	1			CA	
	96229570	.	.	B	B	B	.	A	A	&2G3	1			CE	
	96229572	.	.	B	B	B	.	A	A	&XLA	1			CL	
	[05]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	02116-05165	.	.	B	B	B	.	O	O		4				
	[06]	(E)COVER-BLANK,RADIO (D)DECKEL									(F)COUVERCLE (S)CUBIERTA				
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

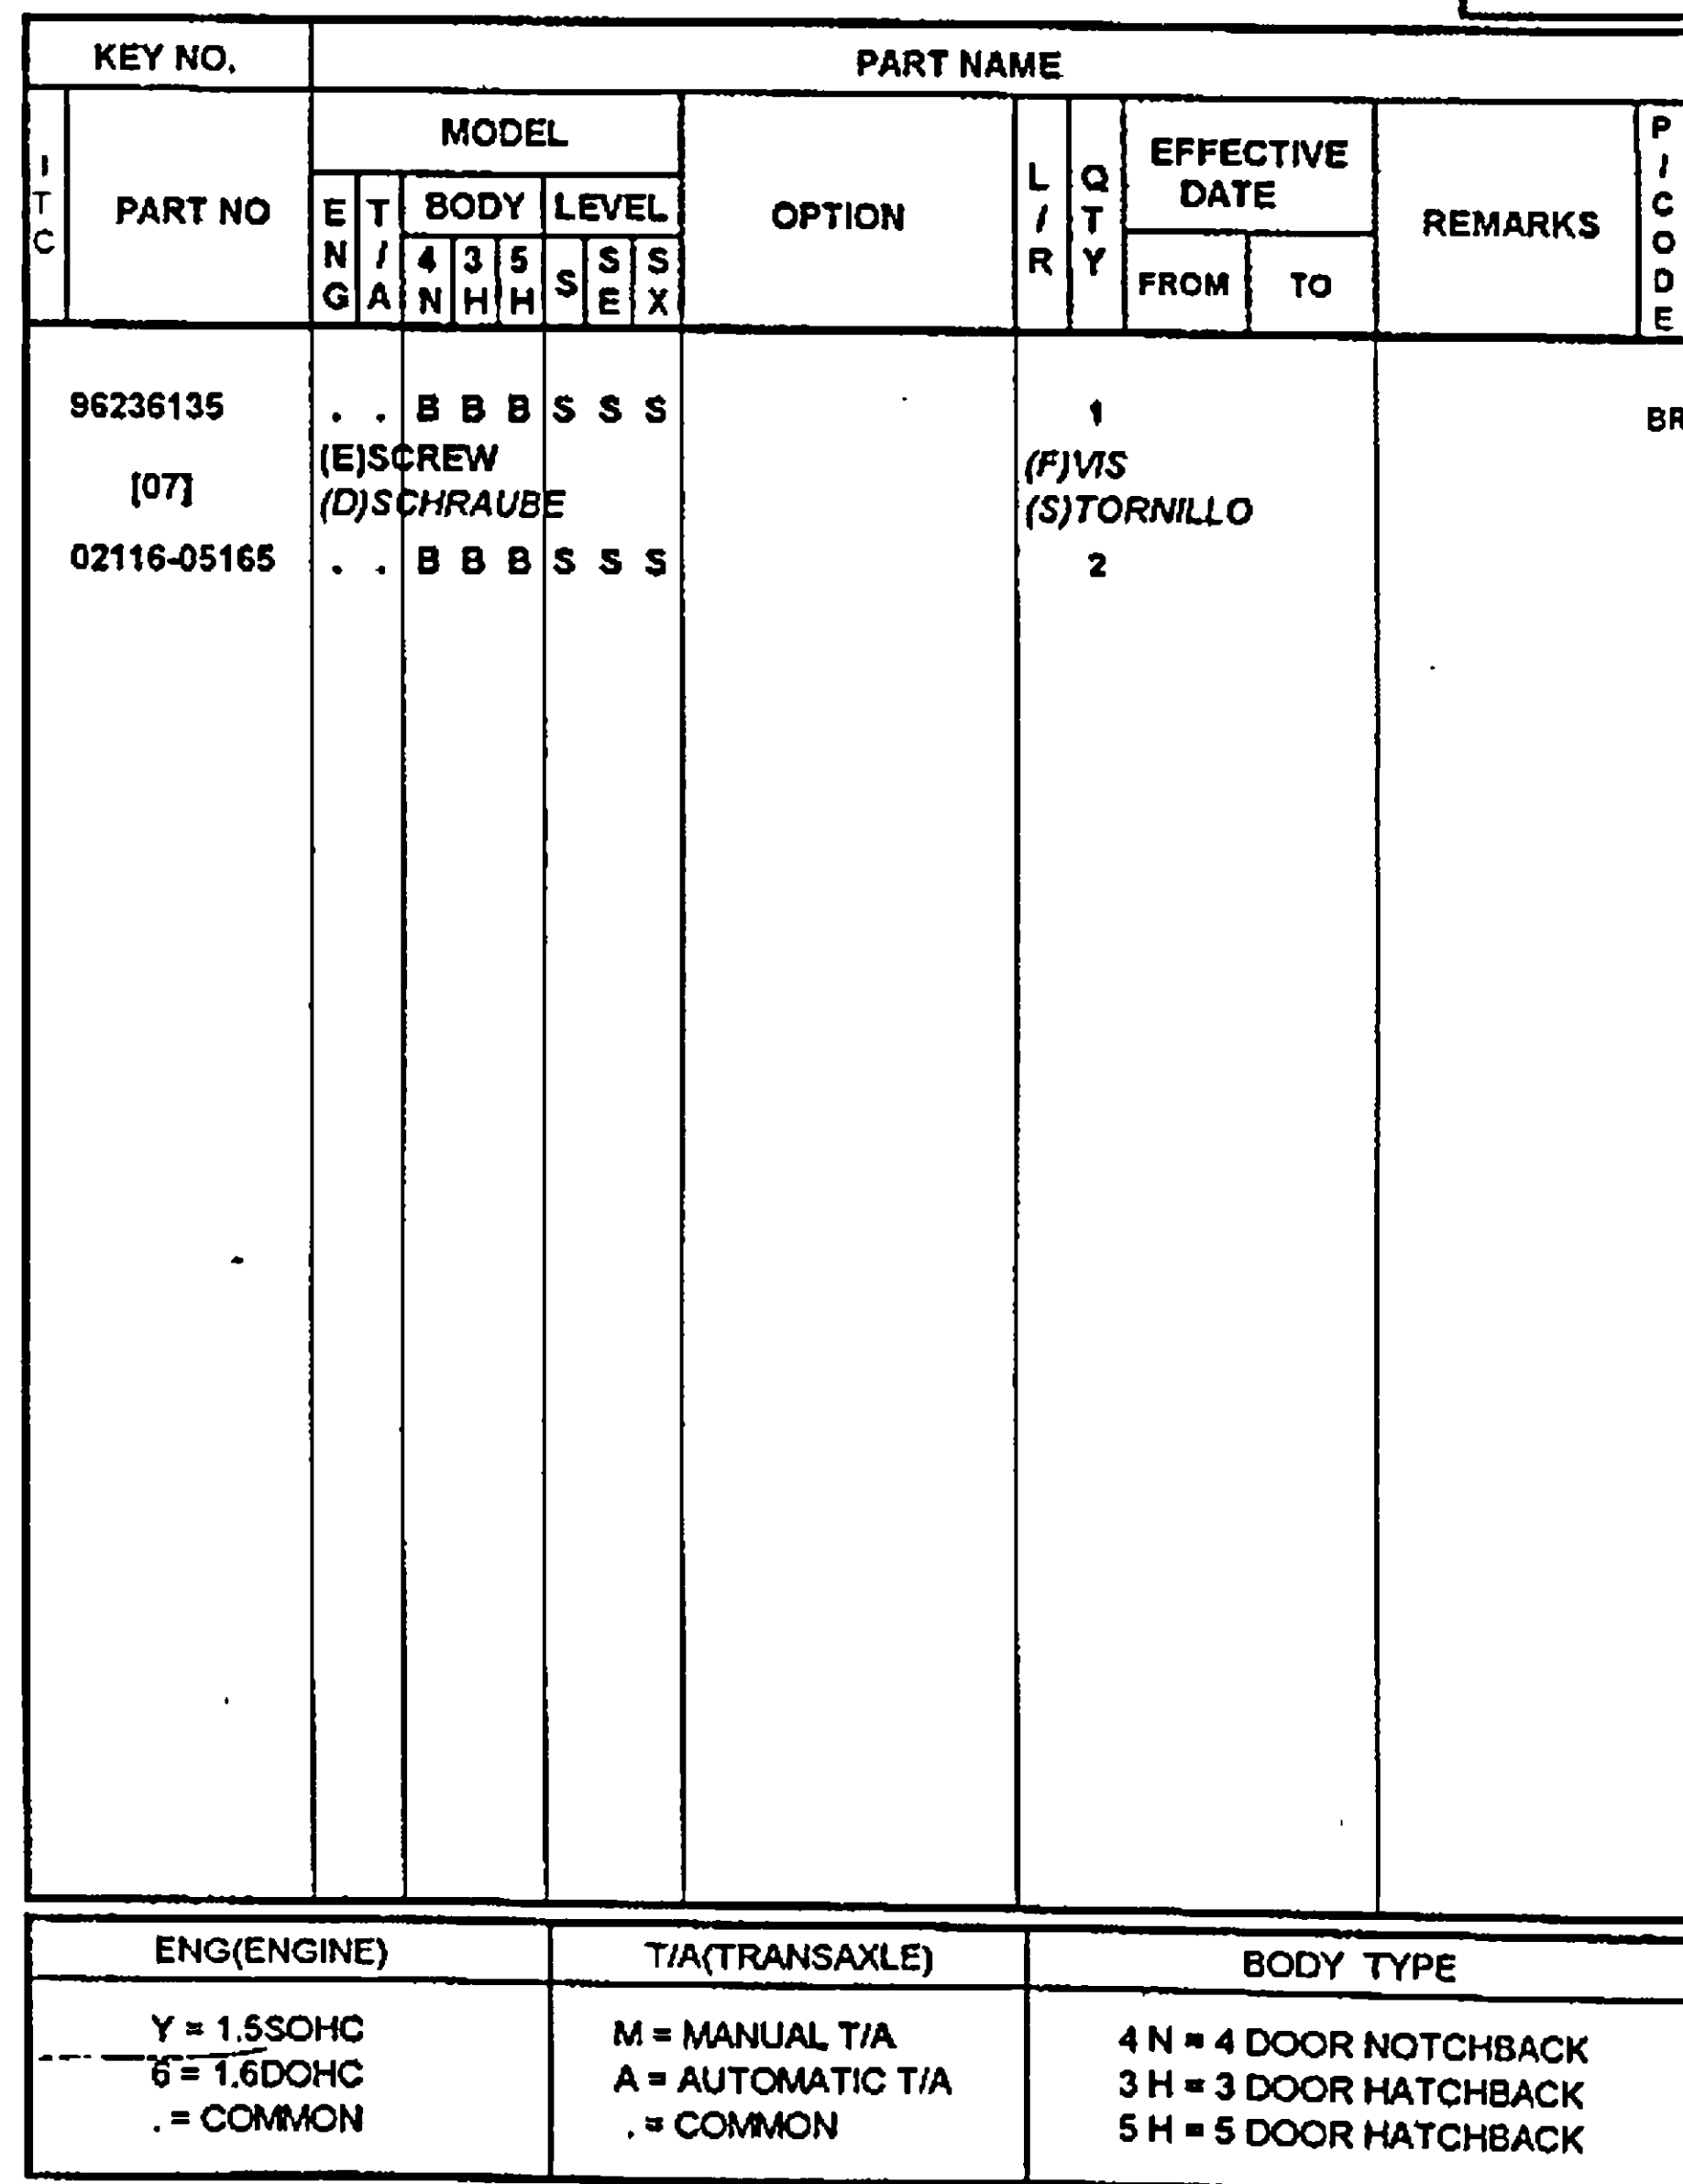


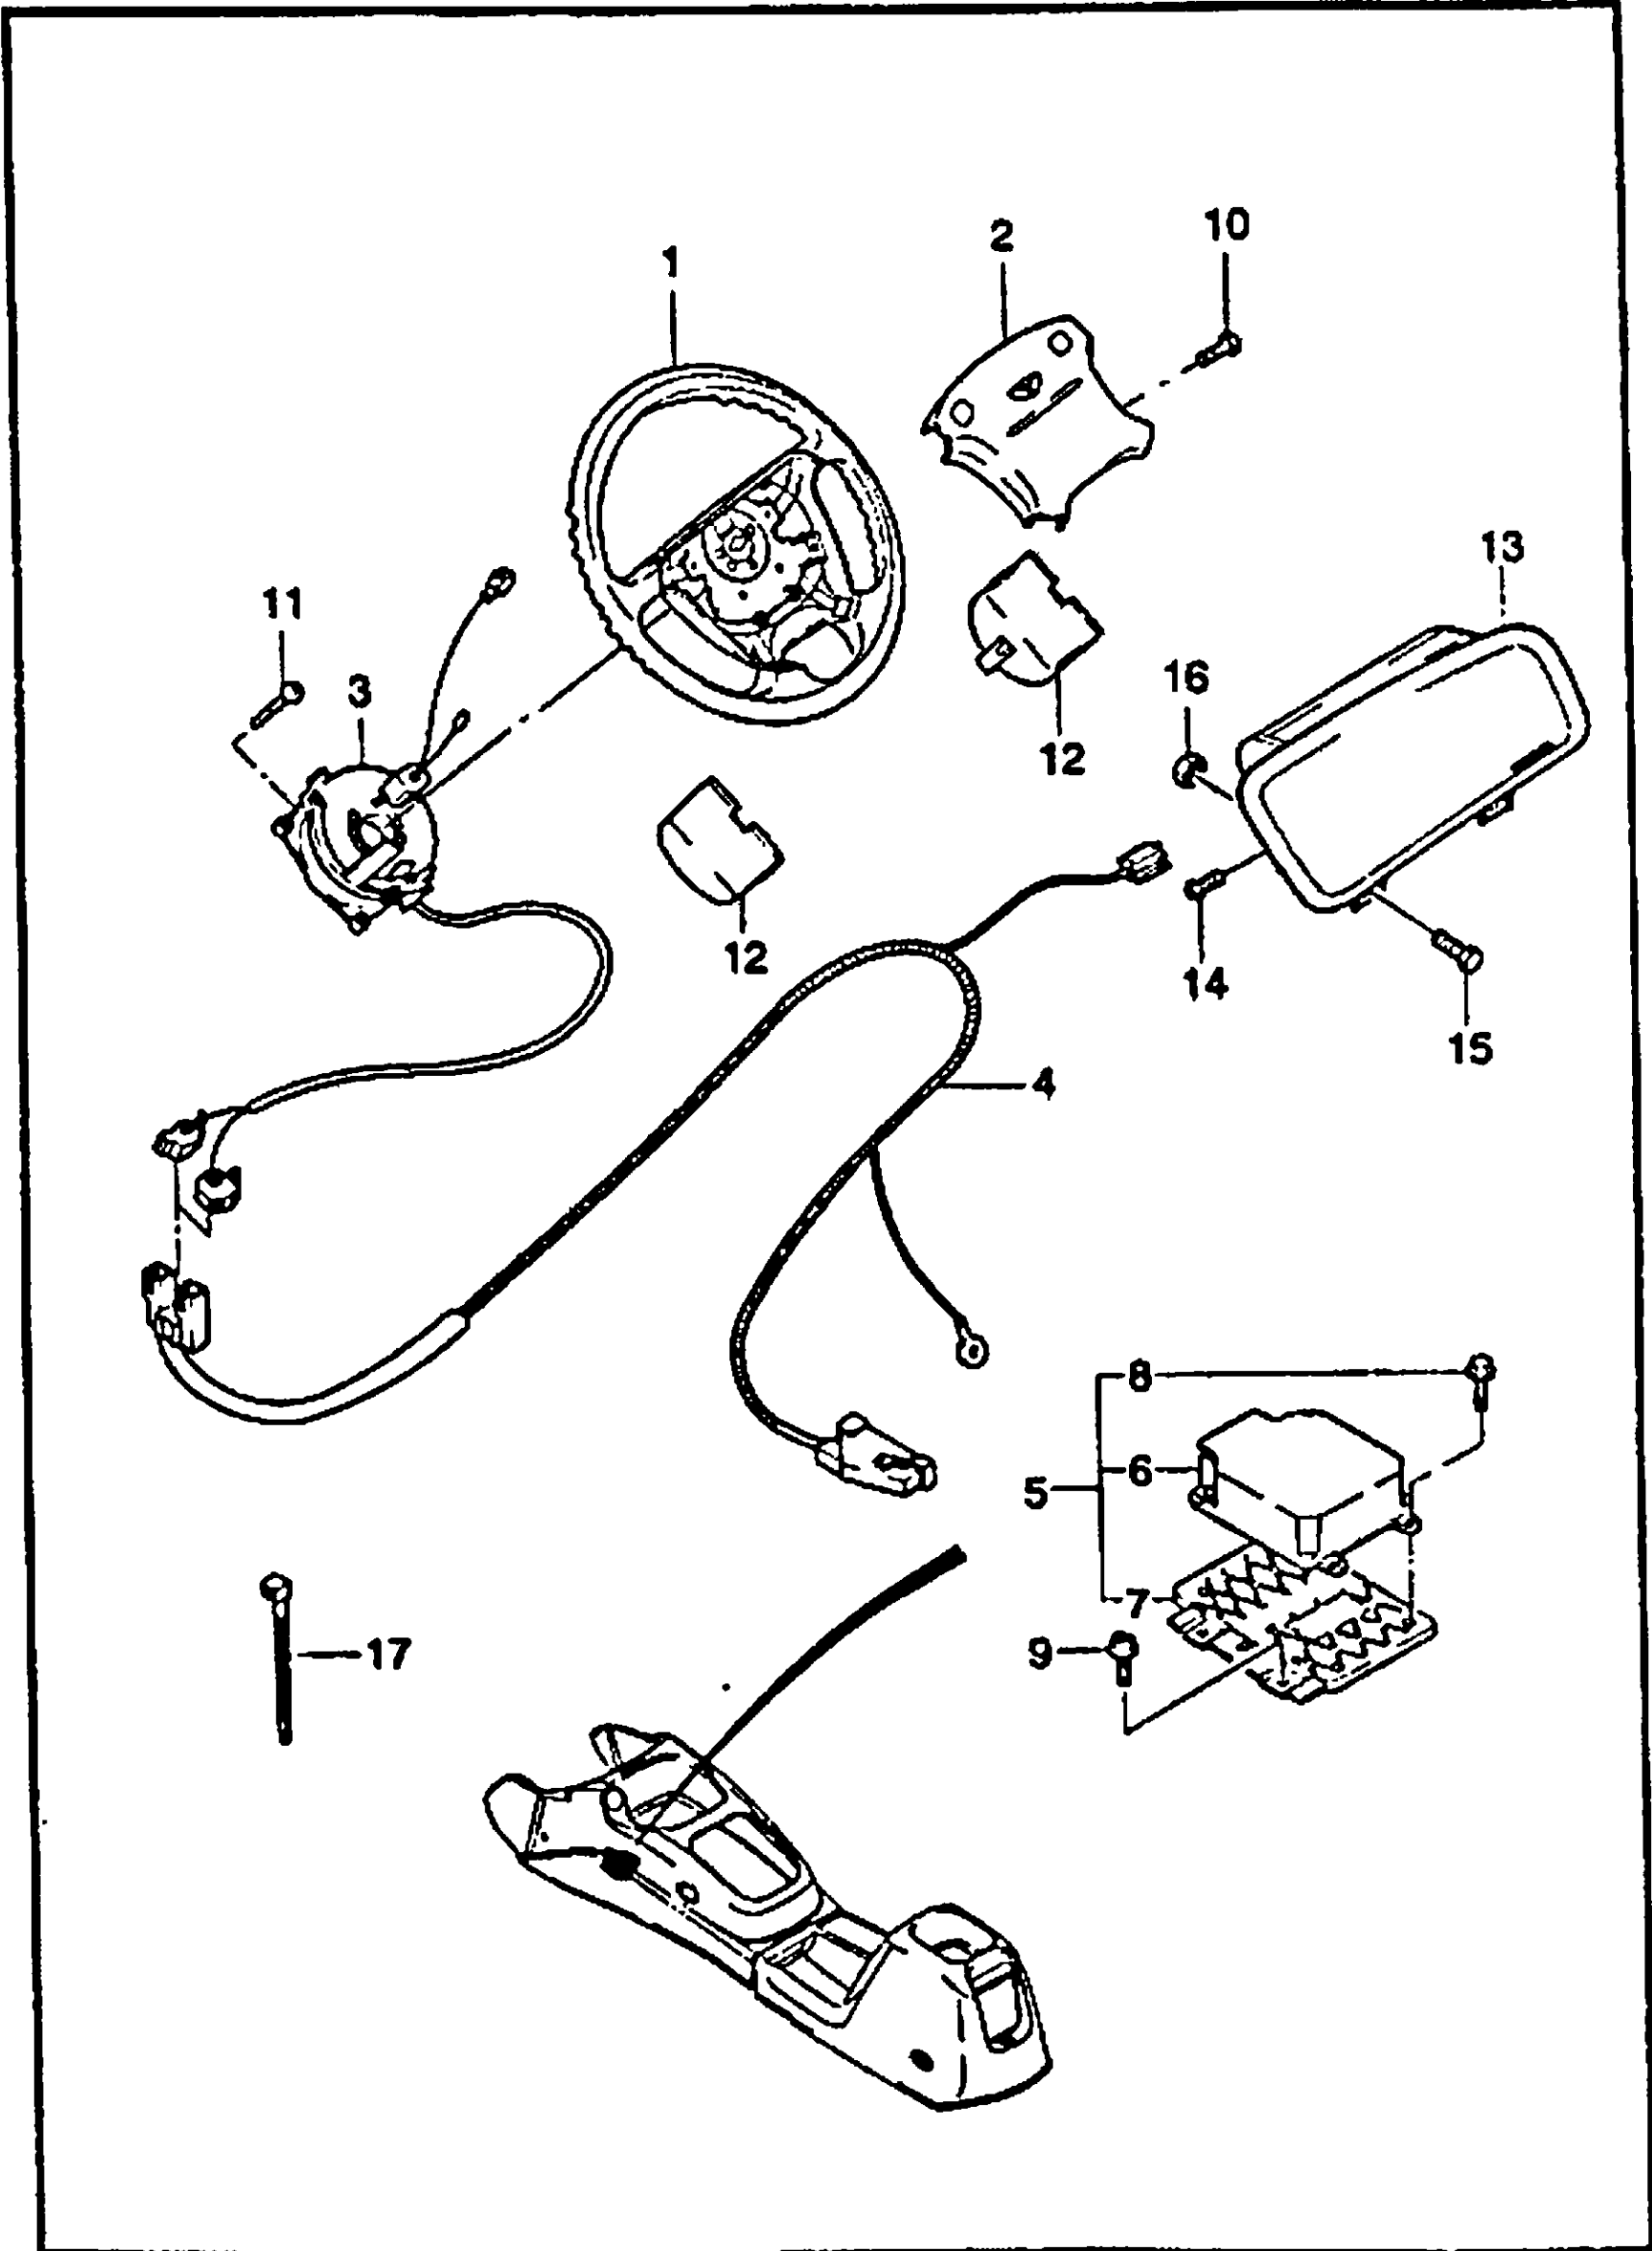


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)WHEEL A-STEERING,W/SIR (D)RAD,LENK									(F)VOLANT DE DIRECTION (S)RUEDA-VOLANTE			HP	
	96238765	. . B B B . O O									1				
	[02]	(E)MODULE-AIR BAG DRIVER (D)MODUL,AIR BAG									(F)MODULE-AIR BAG (S)MODULO-AIR BAG				
	96220427	. . B B B . O O									1				
	[03]	(E)SPRING A-AIR BAG CLOCK (D)FEDERUNG									(F)RESSORT (S)RESORTE				
	96230847	. . B B B . O O									1				
	[04]	(E)WIRING-AIR BAG (D)VERDRAHTUNG,AIR BAG									(F)CABLAG (S)INSTALACION ELECTRICA			WE WD	
	96304225	. . B B B . O O &AJ3									1				
	96217551	. . B B B . O O &ABF									1				
	[05]	(E)MODULE-SENSOR&DIAGNOSTIC (D)MODUL,SENSOR&DIAGNOSTIK									(F)MODULE (S)MODULO				
	96220438	. . B B B . O O &AJ3									1				
	96220425	. . B B B . O O &ABF									1				
	[06]	(E)MODULE-SENSOR&DIAGNOSTIC (D)MODUL,SENSOR&DIAGNOSTIK									(F)MODULE (S)MODULO				
	96220439	. . B B B . O O &AJ3									1				
	96217003	. . B B B . O O &ABF									1				
	[07]	(E)BRACKET-AIR BAG MODULE (D)TRÄGER,AIR BAG MODUL									(F)SUPPORT (S)SOPORTE				
	96217010	. . B B B . O O									1				
	[08]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09119-06011	. . B B B . O O									3				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

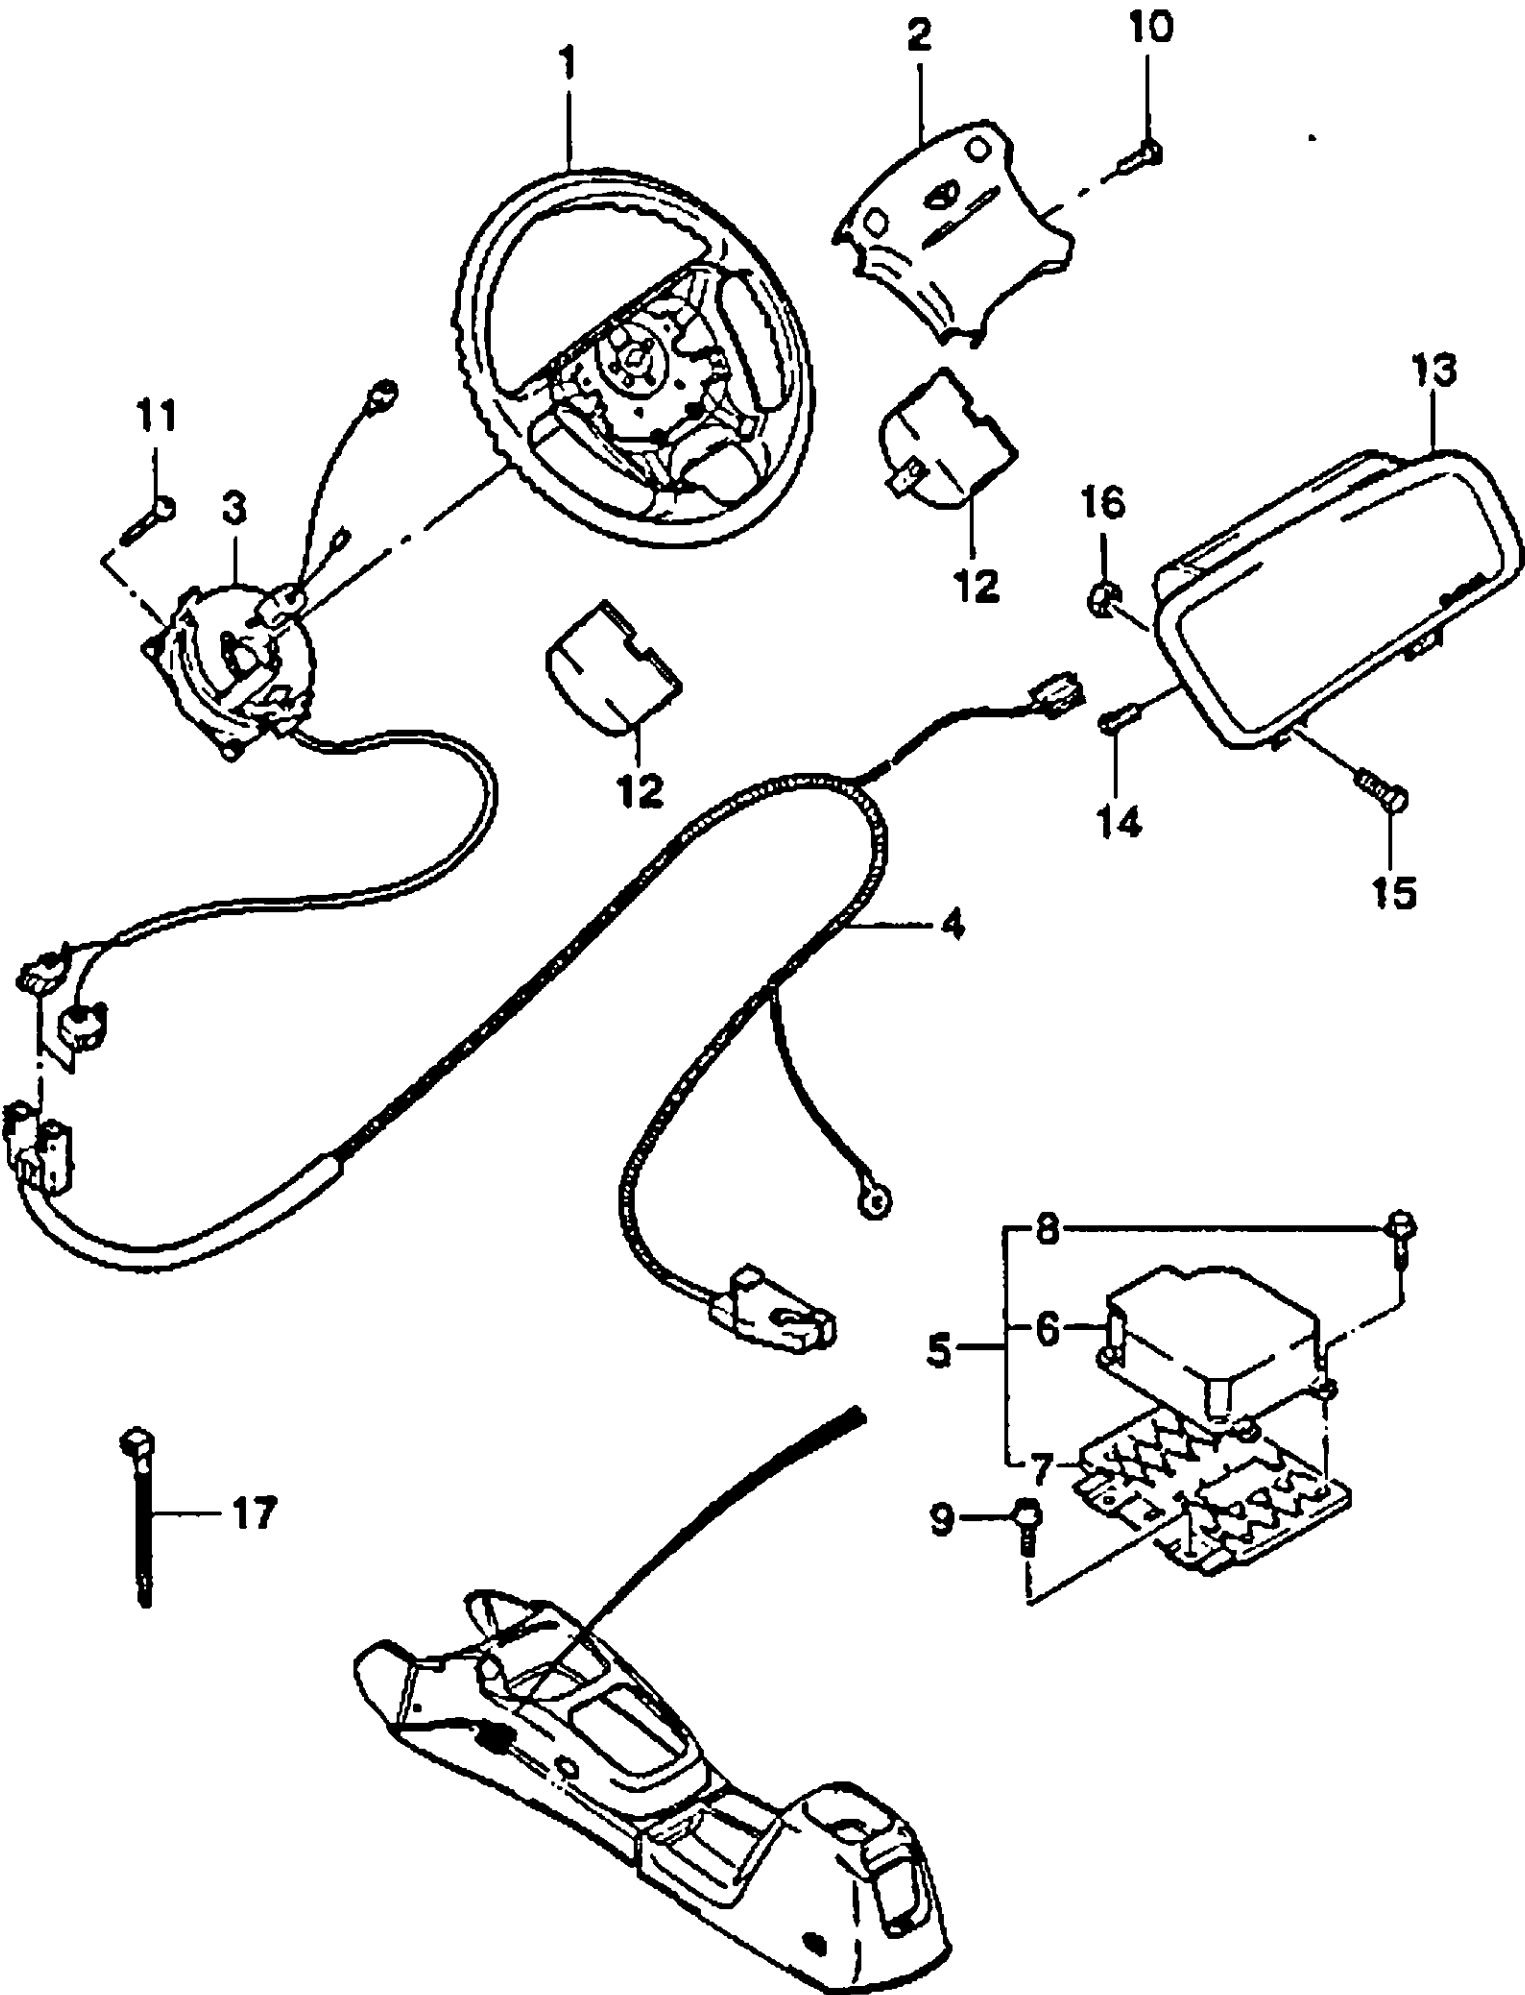


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[09]	(E)BOLT									(F)BOULON					
	09116-06027	(D)SCHRAUBE									(S)PERNO					
		. . .	B	B	B						4		W/WASHER			
	[10]	(E)BOLT									(F)BOULON					
	96179417	(D)SCHRAUBE									(S)PERNO					
		. . .	B	B	B						2		MB			
	[11]	(E)SCREW-TAPPING									(F)VIS					
	03110-48139	(D)SCHRAUBE									(S)TORNILLO					
		. . .	B	B	B						4					
	[12]	(E)CAP-STRG WHEEL						LWR COVER			(F)CHAPEAU					
	96238766	(D)DECKEL									(S)TAPA					
		. . .	B	B	B						LH 1					
	96238767	. . .	B	B	B						RH 1					
	[13]	(E)MODULE-AIR BAG						PASSENGER			(F)MODULE-AIR BAG					
	96220430	(D)MODUL,AIR BAG									(S)MODULO-AIR BAG					
		. . .	B	B	B			&ABF-2G3			1					
	96245086	. . .	B	B	B			&ABF&2G3			1					
	[14]	(E)BOLT									(F)BOULON					
	09119-06011	(D)SCHRAUBE									(S)PERNO					
		. . .	B	B	B			&ABF			4					
	[15]	(E)BOLT									(F)BOULON					
	09119-08013	(D)SCHRAUBE									(S)PERNO					
		. . .	B	B	B			&ABF			2					
	[16]	(E)NUT									(F)ECROU					
	09169-08003	(D)MUTTER									(S)TUERCA					
		. . .	B	B	B			&ABF			2					
	[17]	(E)STRAP-MOUNTING									(F)BRETTELLE-MONTAGE					
		(D)BAND,MONTAGE									(S)BRIDA-MONTAJE					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

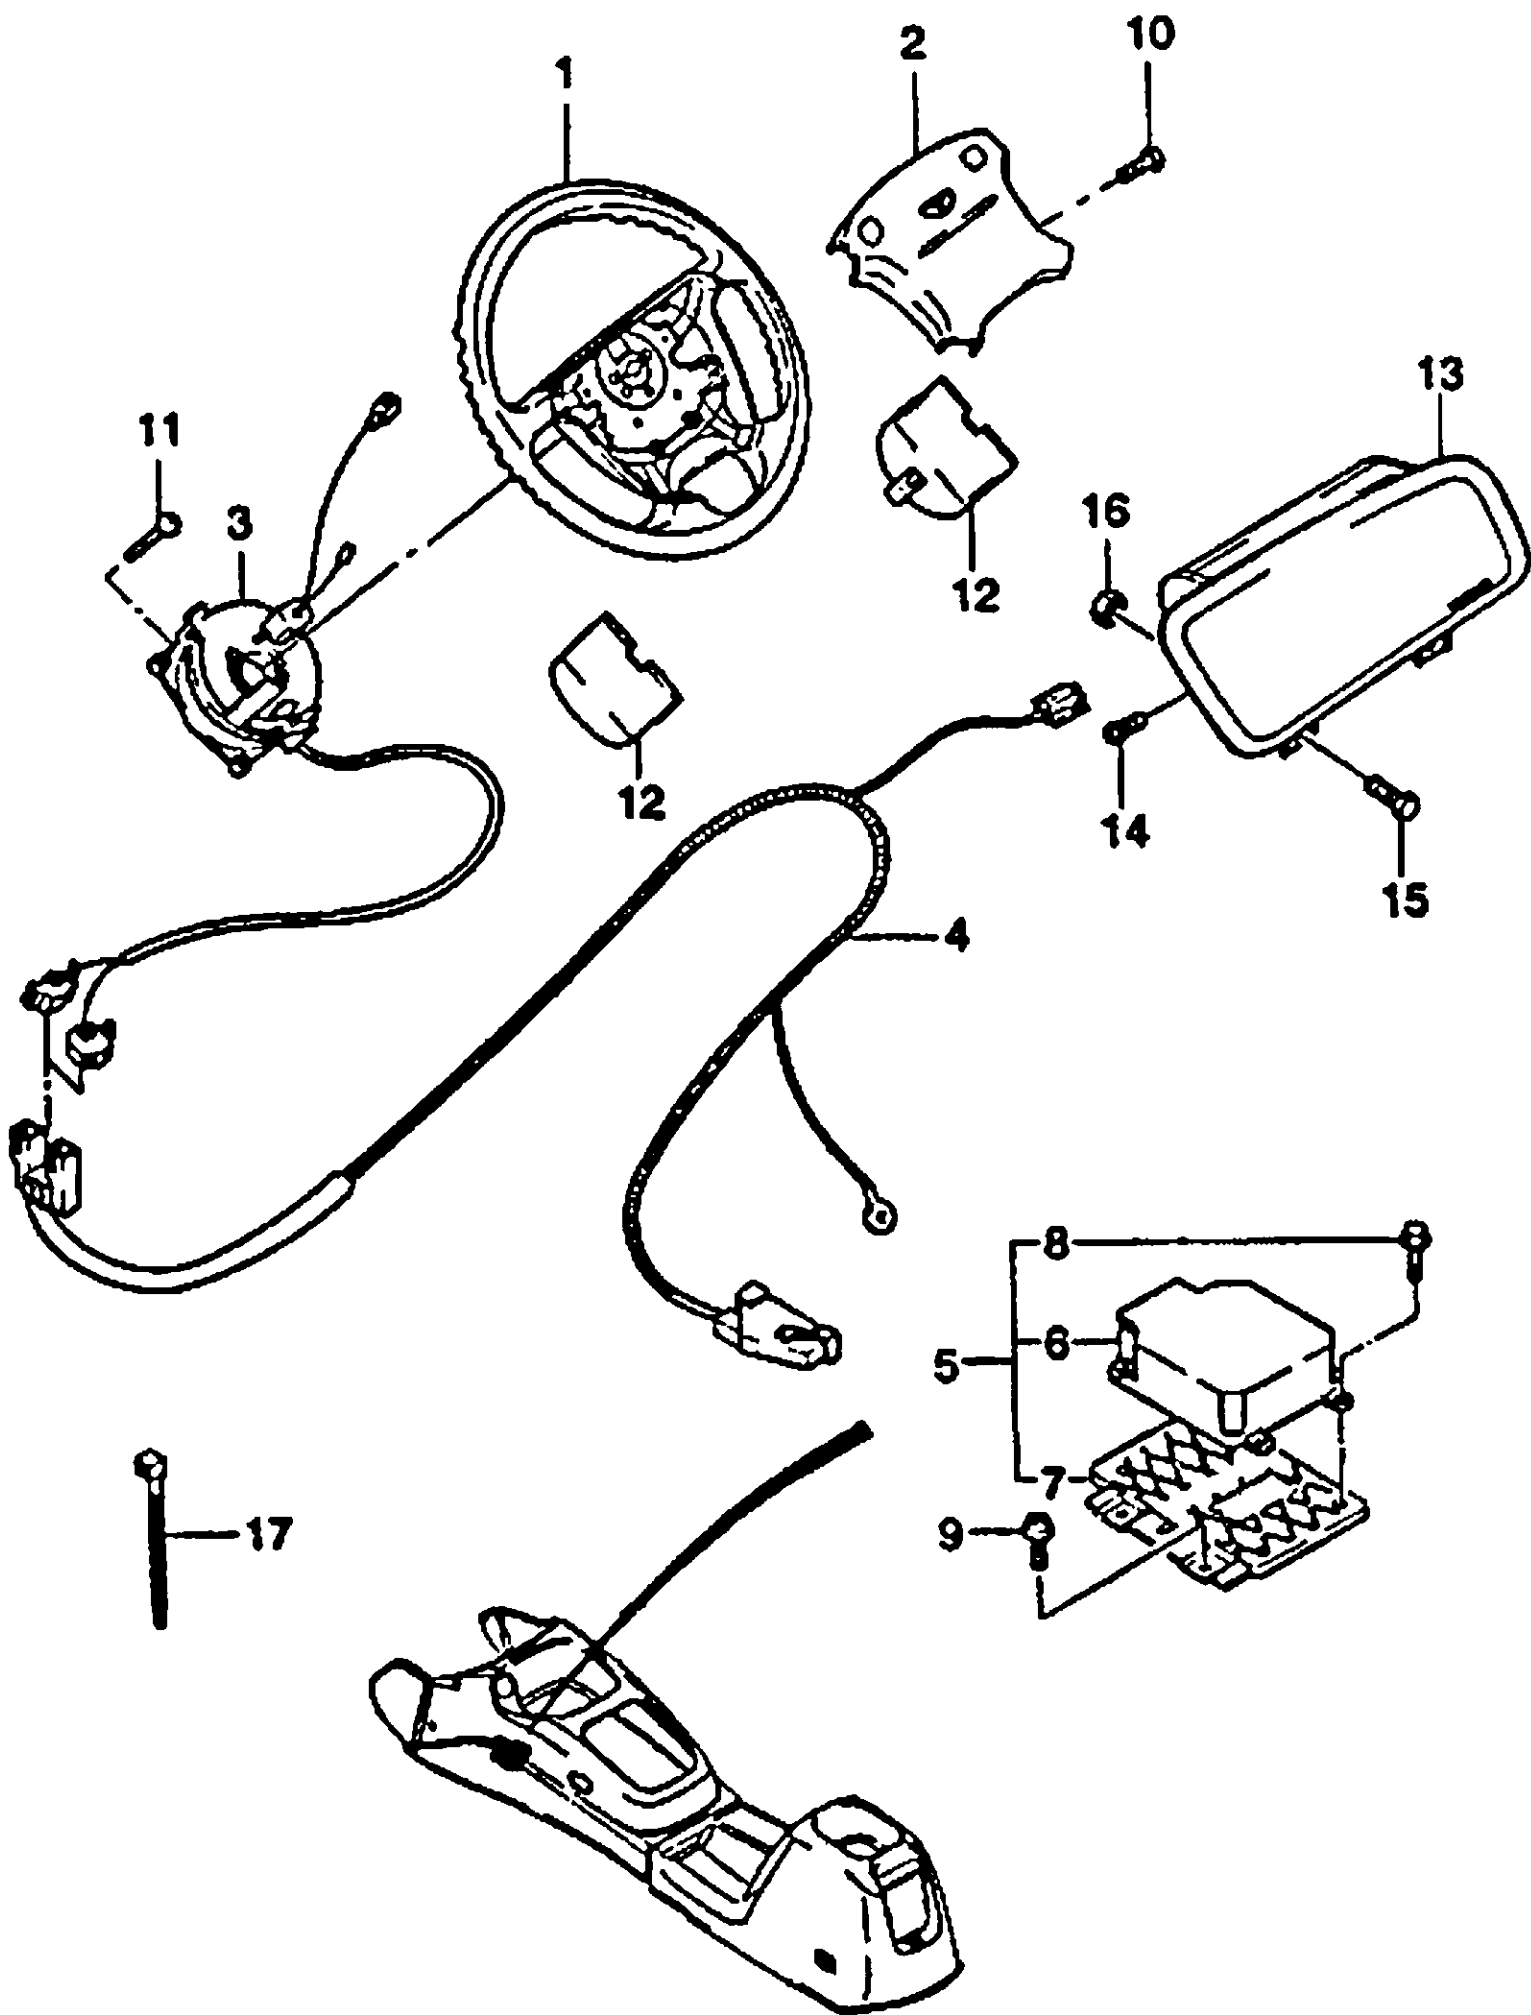


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	96224564	.	.	B	B	B	.	O	O	&ABF		1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

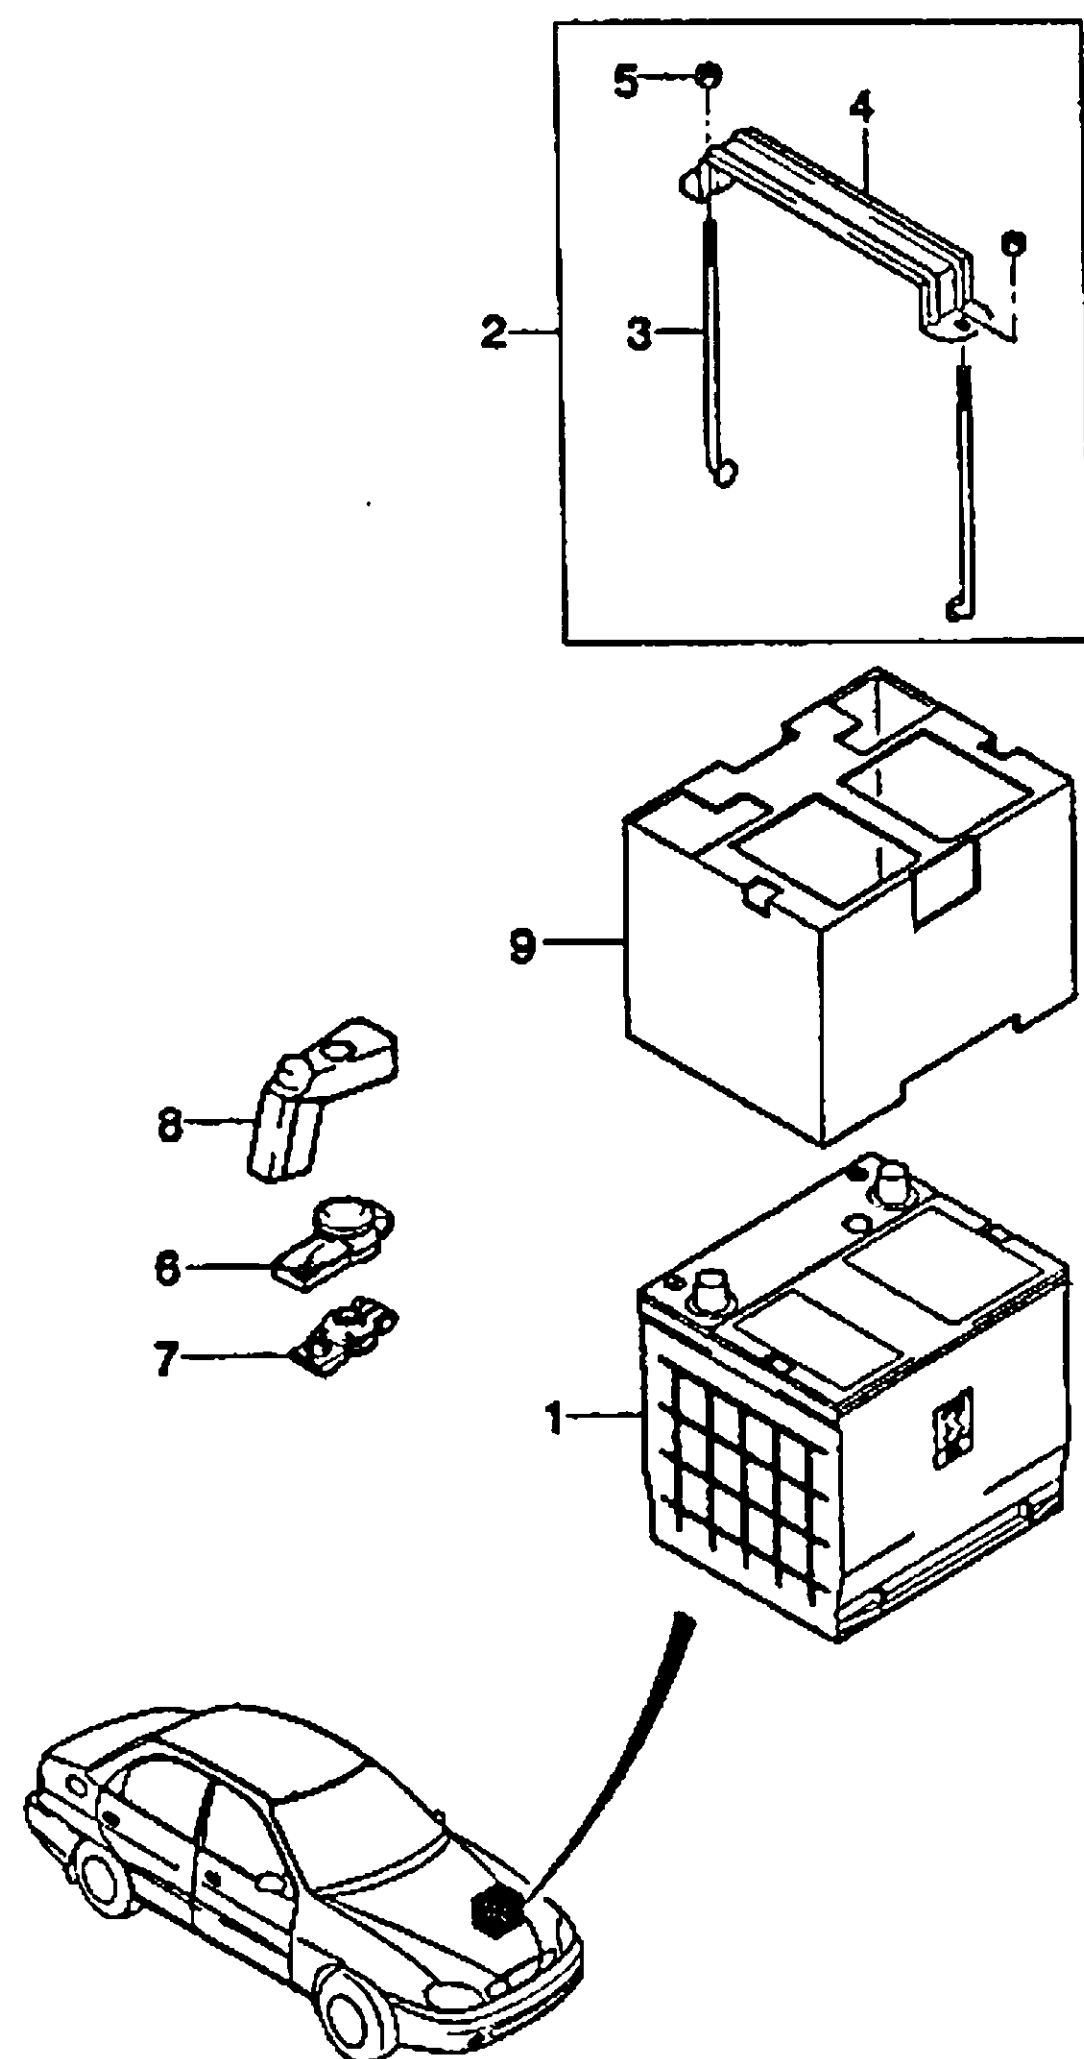


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)BATTERY A (D)BATTERIE								(F)BATTERIE (S)BATERIA					
	96230966	. . B B B S S S								1		35A		TB	
	96190267	. . B B B A A A &XPH								1		45A		TA	
	[02]	(E)HOLDER A-BATTERY (D)BEHÄLTER													
	96190269	. . B B B S S S								1				MS	
	[03]	(E)ROD-HOLDER (D)STAB,BATTERIE													
	96305846	. . B B B S S S								2					
	[04]	(E)BAR-HOLDER (D)STANGE													
	96305845	. . B B B S S S								1					
	[05]	(E)NUT-HEXAGON (D)MUTTER													
	08361-25063	. . B B B S S S								2		W	WASHER		
	[06]	(E)COVER-BATTERY TERMINAL (D)DECKEL,BATTERIE-PFOSTEN													
	96187088	. . B B B S S S								1		(-)	TERMINAL		
	96187087	. . B B B S S S								1		(+)	TERMINAL		
	[07]	(E)CONNECTOR A-BATTERY (D)VERBINDUNG,BATTERIE													
	96187092	. . B B B S S S								1		(-)	TERMINAL		
	96187093	. . B B B S S S								1		(+)	TERMINAL		
	[08]	(E)CAP-BATTERY (D)DECKEL,BATTERIE-PFOSTEN													
	96239892	. . B B B S S S								1		(-)	TERMINAL		
	96239891	. . B B B S S S								1		(+)	TERMINAL		
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

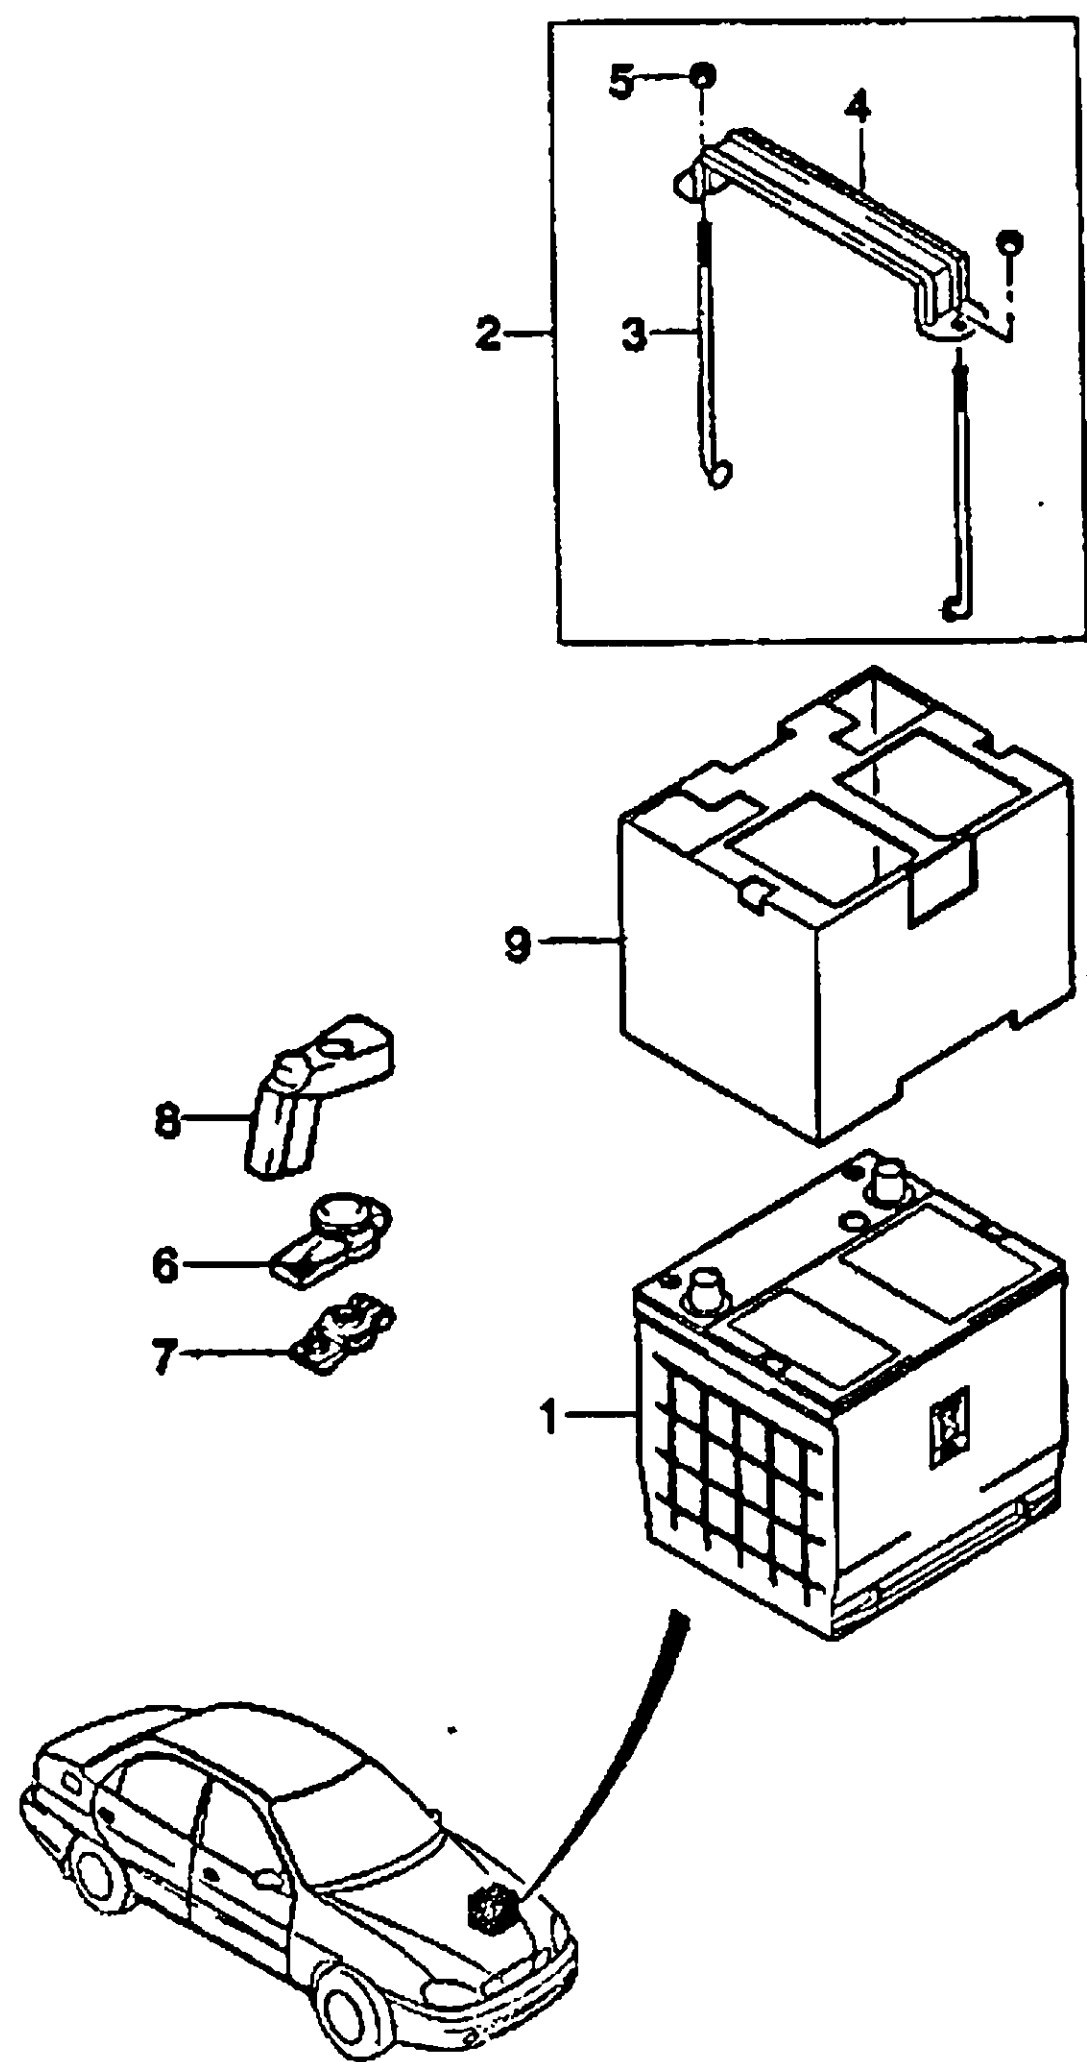



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[09] 96303981	(E)SHIELD A-HEAT, BATTERY (D)SCHILD	. .	B	B	B	A	A	A	&XHA	(F)BOUCLIER (S)ESCUDO	1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

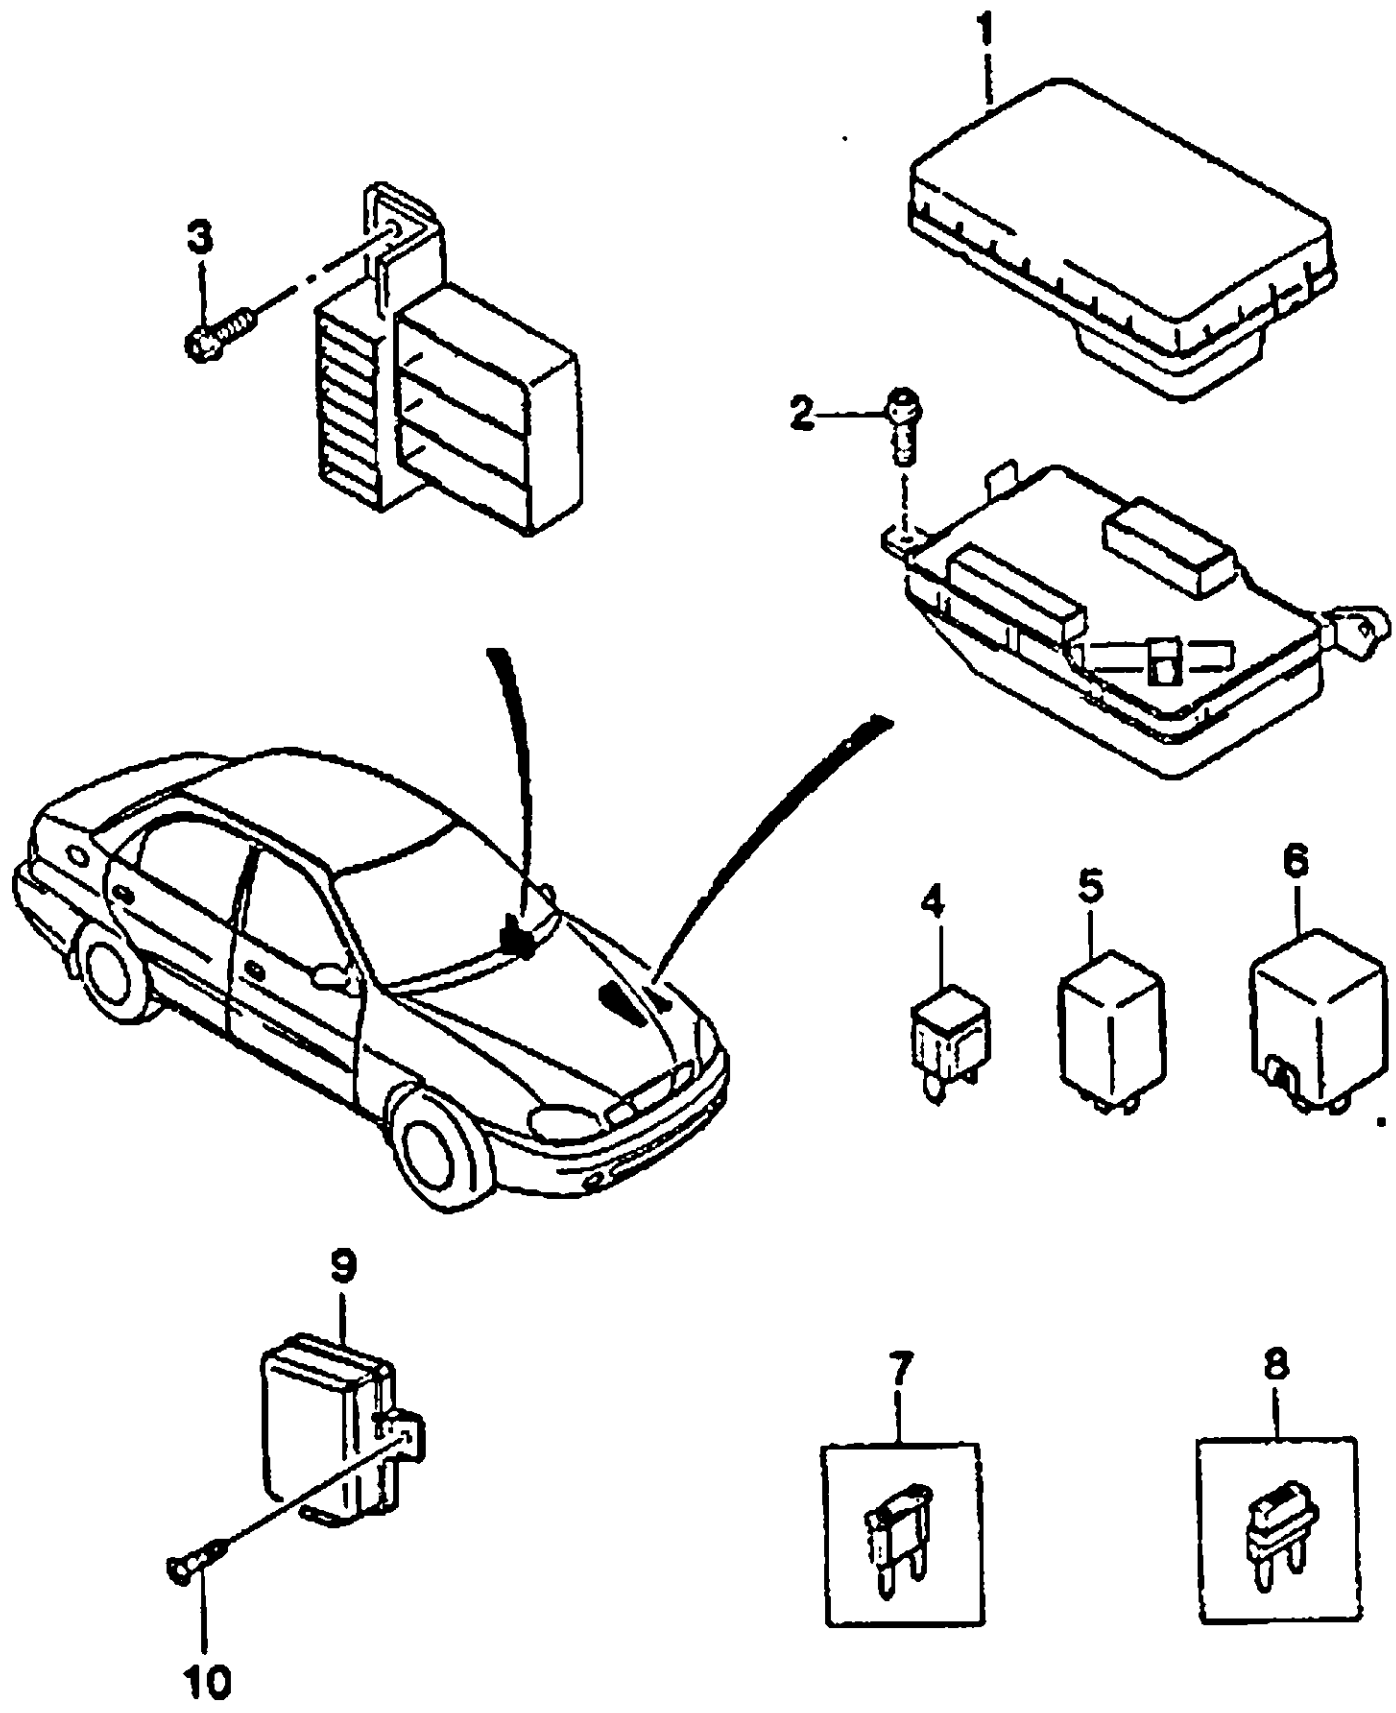



KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S
	[01]	(E)COVER-FUSE BOX,UPPER (D)DECKEL									(F)CARTER (S)CUBIERTA				
	96245532	.	.	B	B	B	S	S	S	1					
	[02]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE									(F)BOULON (S)PERNO				
	01514-06165	.	.	B	B	B	S	S	S	- 2					
	[03]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE									(F)BOULON (S)PERNO				
	01514-06203	.	.	B	B	B	S	S	S	3					
	[04]	(E)FUSE-SLOW (D)SICHERUNG									(F)FUSIBLE (S)FUSIBLE				
	61009	.	.	B	B	B	S	S	S	1			20A		
	61010	.	.	B	B	B	S	S	S	1			30A		
	61011	.	.	B	B	B	S	S	S	1			40A		
	61001	.	.	B	B	B	S	S	S	1			80A		
	[05]	(E)RELAY A (D)RELAIS									(F)RELA (S)RELEVADOR				
	90229206	.	.	B	B	B	S	S	S	1			CLG FAN LOW		
	90191753	.	.	B	B	B	S	S	S	1			FUEL PUMP		
	90244312	.	.	B	B	B	S	S	S	1			A/C BLOWER		
	96312300	.	.	B	B	B	S	S	S	1			INT. WIPER		
	90229206	.	.	B	B	B	S	S	S	1			HEAD LAMP		
	90229206	.	.	B	B	B	S	S	S	1			TAIL LAMP		
	90244312	.	.	B	B	B	S	S	S	1			RR DEFOGGER		
	90229206	.	.	B	B	B	S	S	S	1			HORN		
	90244312	.	.	B	B	B	O	O	S	1	&A32/A31		PWR WINDOW		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

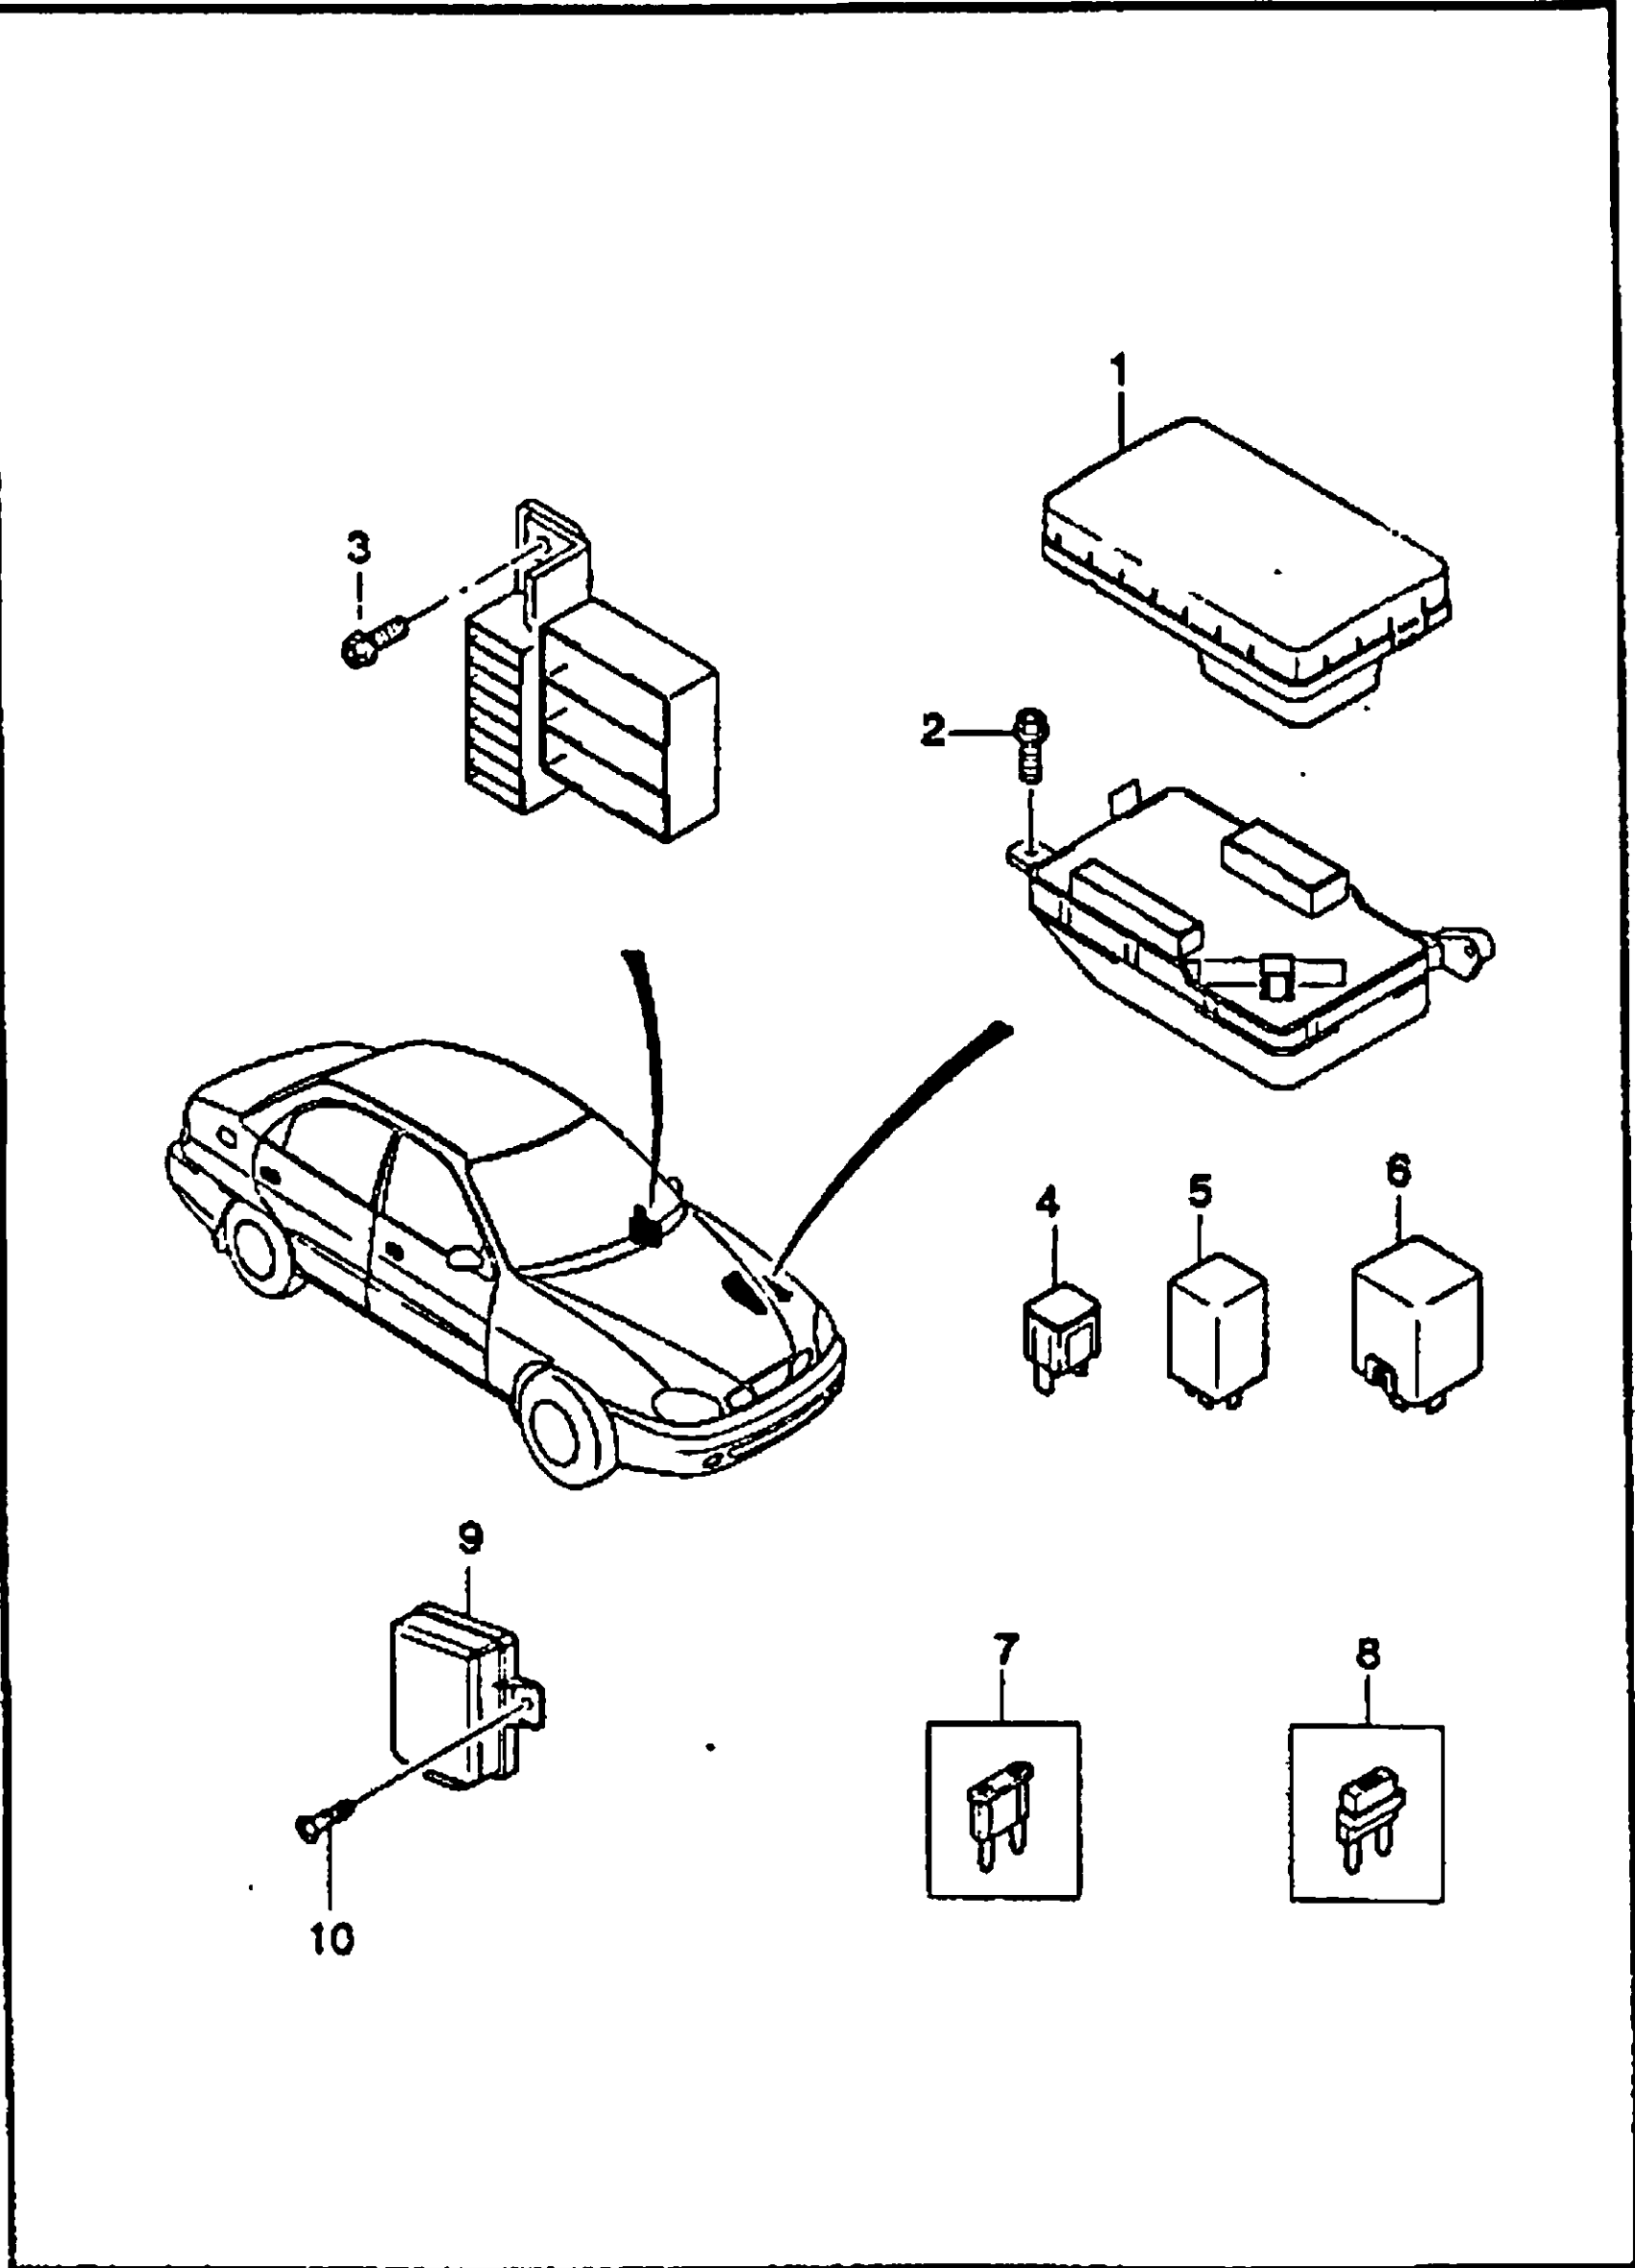



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	90229206	.	.	B	B	B	.	.	O	&T97		1		FR FOG LAMP		
	90191753	.	.	B	B	B	O	O	O	&C59/C60		1		CLG FAN		
	90244312	.	.	B	B	B	O	O	O	&C59/C60		1		CLG FAN HIGH		
	90229206	.	.	B	B	B	O	O	O	&C59/C60		1		COMPRESSOR		
	12088595	.	.	B	B	B	.	O	O	&JL9		1		ABS		
	96242630	.	.	B	B	B	A	A	A	&T98		1		RR FOG LAMP		
	[06]	(E)BLINKER UNIT (D)BLINKER									(F)UNITE CLIGNOTANTE (S)UNIDAD INTERMITENTE					
	96312545	.	.	B	B	B	S	S	S			1		2/4X21W		
	[07]	(E)FUSE-MIN (D)SICHERUNG									(F)FUSIBLE (S)FUSIBLE					
	96234924	.	.	B	B	B	S	S	S			1		10AMP		
	96234923	.	.	B	B	B	S	S	S			1		15AMP		
	96234922	.	.	B	B	B	S	S	S			1		20AMP		
	96234921	.	.	B	B	B	S	S	S			1		25AMP		
	[08]	(E)DIODE (D)DIODE									(F)DIODE (S)DIODE					
	96234932	.	.	B	B	B	S	S	S			1				
	[09]	(E)MODULE A-CHIME BELL (D)MODUL.GLOCKE									(F)MODULE-CARILLON (S)MODULO-CAMPANA DE REPIQUE					
	96219056	.	.	B	B	B	S	S	S	-U44		1			CN	
	96223528	.	.	B	B	B	A	A	A	&U44		1			CY	
	[10]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	03112-42133	.	.	B	B	B	S	S	S			2				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

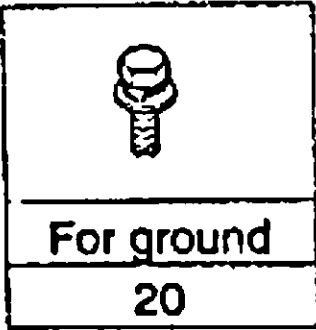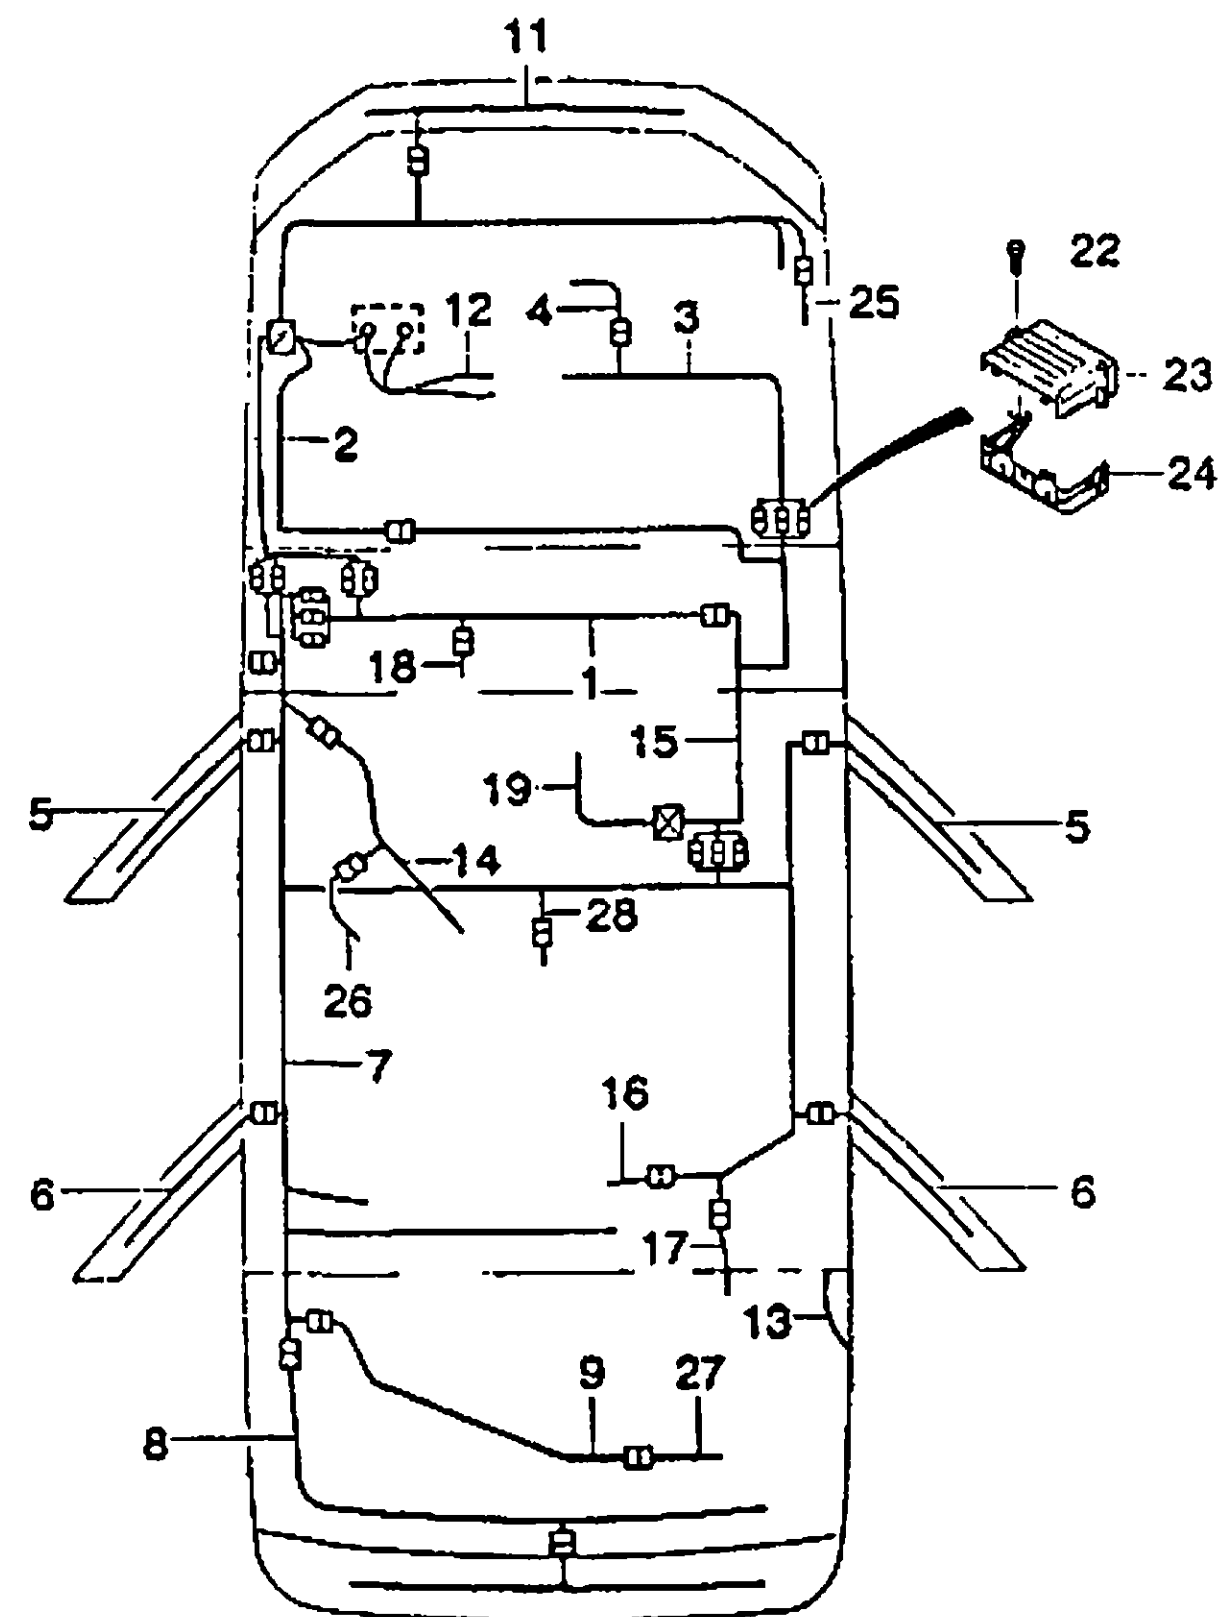



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[01]	(E)WIRING-INSTRUMENT PANEL (D)VERDRAHTUNG,INSTRUMENTENB									(F)CABLAGE-TABLEAU DE BORD (S)INSTALACION ELECTRICA					
	96254088	.	.	B	B	B	S	S	S	&D39	1	970907		NM		
N	96258719	.	.	B	B	B	S	S	S	&D39	1	970901		FU		
	96254084	.	.	B	B	B	A	A	A	&D39&T98-HL4/UM1	1	970901		NH		
N	96258715	.	.	B	B	B	A	A	A	&D39&T98-HL4/UM1	1	970901		FQ		
	96254081	.	.	B	B	B	A	A	A	&D39	1	970901	FOR LITHUANIA, NE POLAND			
N	96258712	.	.	B	B	B	A	A	A	&D39	1	970901	FOR LITHUANIA, FM POLAND			
	96254082	.	.	B	B	B	A	A	A	&D39	1	970901	FOR ISRAEL	NF		
N	96258713	.	.	B	B	B	A	A	A	&D39	1	970901	FOR ISRAEL	FN		
	96254083	.	.	B	B	B	A	A	A	&D39&HL4&T98-UM1	1	970901		NG		
N	96258714	.	.	B	B	B	A	A	A	&D39&HL4&T98-UM1	1	970901		FP		
	96254086	.	.	B	B	B	A	A	A	&D39&UM1-HL4/T98	1	970901		NK		
N	96258717	.	.	B	B	B	A	A	A	&D39&UM1-HL4/T98	1	970901		FS		
	96254078	.	.	B	B	B	.	.	A	&DD4&UM1-HL4/T98	1			NB		
	96254080	.	.	B	B	B	.	.	O	&DD4	1			ND		
	96252219	.	.	B	B	B	.	.	A	&DD4&T98-HL4/UM1	1			JJ		
	96252216	.	.	B	B	B	.	.	A	&DD4	1		FOR LITHUANIA, JF POLAND			
	96252217	.	.	B	B	B	.	.	A	&DD4	1		FOR ISRAEL	JG		
	96252218	.	.	B	B	B	.	.	A	&DD4&HL4&T98-UM1	1			JH		
	96254087	.	.	B	B	B	A	A	A	&D39&HL4-UM1/T98	1	970901	NOT APPLIED	NL		
N	96258718	.	.	B	B	B	A	A	A	&D39&HL4-UM1/T98	1	970901	NOT APPLIED	FT		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

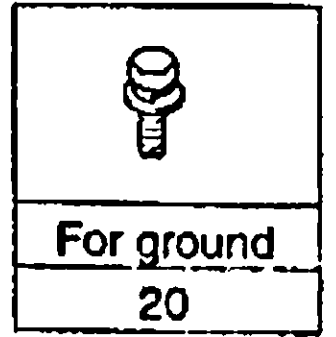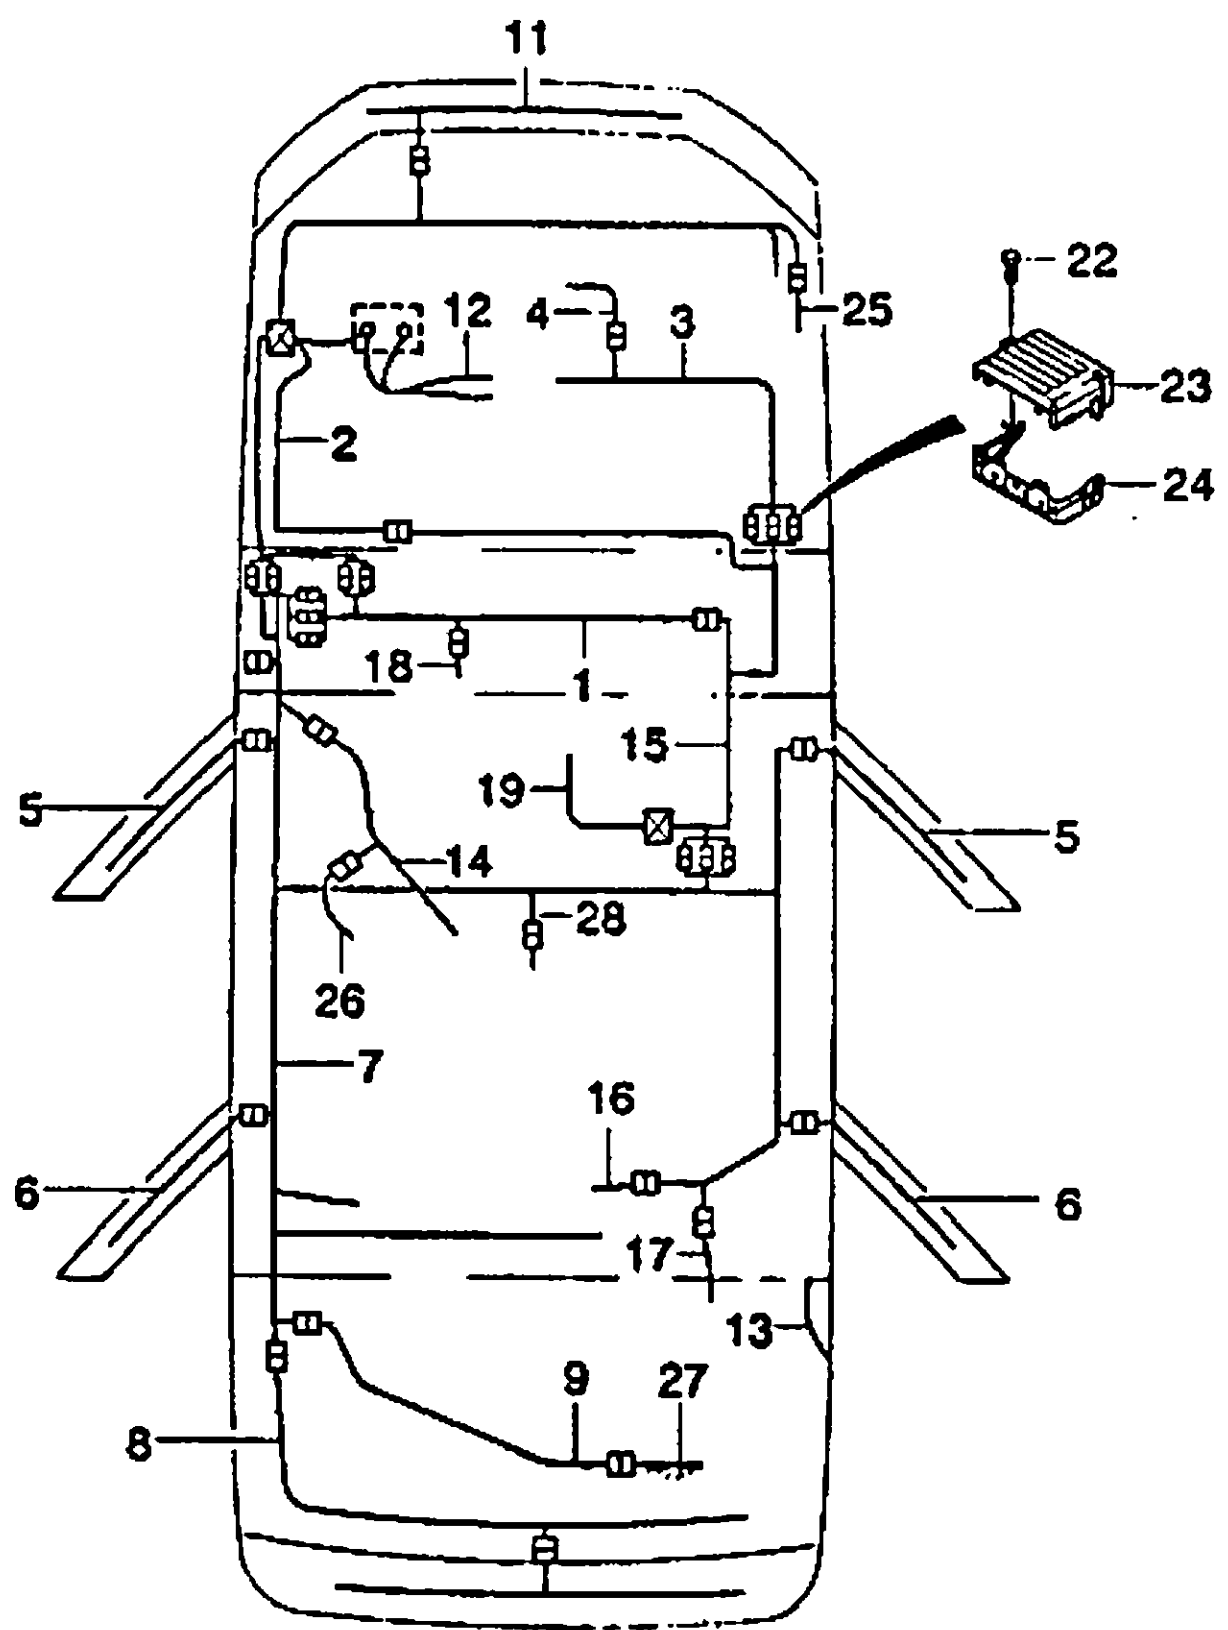


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	X
	96254077	.	.	B	B	B	.	A	&DD4&HL4&UM1-T98		1		NOT APPLIED	NA		
	96254079	.	.	B	B	B	.	A	&DD4&HL4-T98/UM1		1		NOT APPLIED	NC		
	[02]	(E)WIRING-FRONT (D)VERDRAHTUNG,VORNE							(F)CABLAGE-AVANT (S)INSTALACION ELECTRICA							
	96252265	.	.	B	B	B	S	S	S	&C46-JL9/T97		1	SINGLE HORN	XR		
	96252257	.	.	B	B	B	.	O	O	&C46&JL9-T97		1	SINGLE HORN	XH		
	96252263	.	.	B	B	B	.	.	O	&C46&T97-JL9		1	SINGLE HORN	XP		
	96252255	.	.	B	B	B	.	.	O	&C46&JL9&T97		1	SINGLE HORN	XF		
	96252261	.	.	B	B	B	O	O	O	&C59/C60-JL9/T97		1	SINGLE HORN	XM		
	96252253	.	.	B	B	B	.	O	O	&C59/C60&JL9-T97		1	SINGLE HORN	XD		
	96252259	.	.	B	B	B	.	.	O	&C59/C60&T97-JL9		1	SINGLE HORN	XK		
	96252251	.	.	B	B	B	.	.	O	&C59/C60&JL9&T97		1	SINGLE HORN	XB		
	96255192	.	.	B	B	B	.	.	A	&C46-JL9/T97		1	FOR BRAZIL	K9		
	96255187	.	.	B	B	B	.	.	A	&C46&JL9&T97		1	FOR BRAZIL	J7		
	96255188	.	.	B	B	B	.	.	A	&C46&JL9-T97		1	FOR BRAZIL	J9		
	96255191	.	.	B	B	B	.	.	A	&C46&T97-JL9		1	FOR BRAZIL	K7		
	96255190	.	.	B	B	B	.	.	A	&C59/C60-JL9/T97		1	FOR BRAZIL	K5		
	96255185	.	.	B	B	B	.	.	A	&C59/C60&JL9&T97		1	FOR BRAZIL	J3		
	96255186	.	.	B	B	B	.	.	A	&C59/C60&JL9-T97		1	FOR BRAZIL	J5		
	96255189	.	.	B	B	B	.	.	A	&C59/C60&T97-JL9		1	FOR BRAZIL	K3		
	96252264	.	.	B	B	B	A	A	A	&C46-JL9/T97		1	NOT APPLIED	XQ		
	96252256	.	.	B	B	B	.	A	A	&C46&JL9-T97		1	NOT APPLIED	XG		
	96252262	.	.	B	B	B	.	.	A	&C46&T97-JL9		1	NOT APPLIED	XN		
	96252254	.	.	B	B	B	.	.	A	&C46&JL9&T97		1	NOT APPLIED	XE		
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

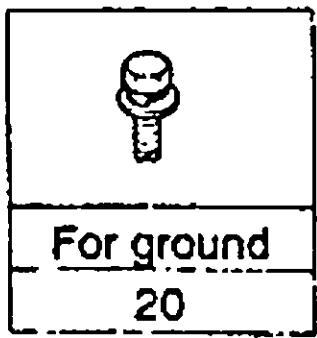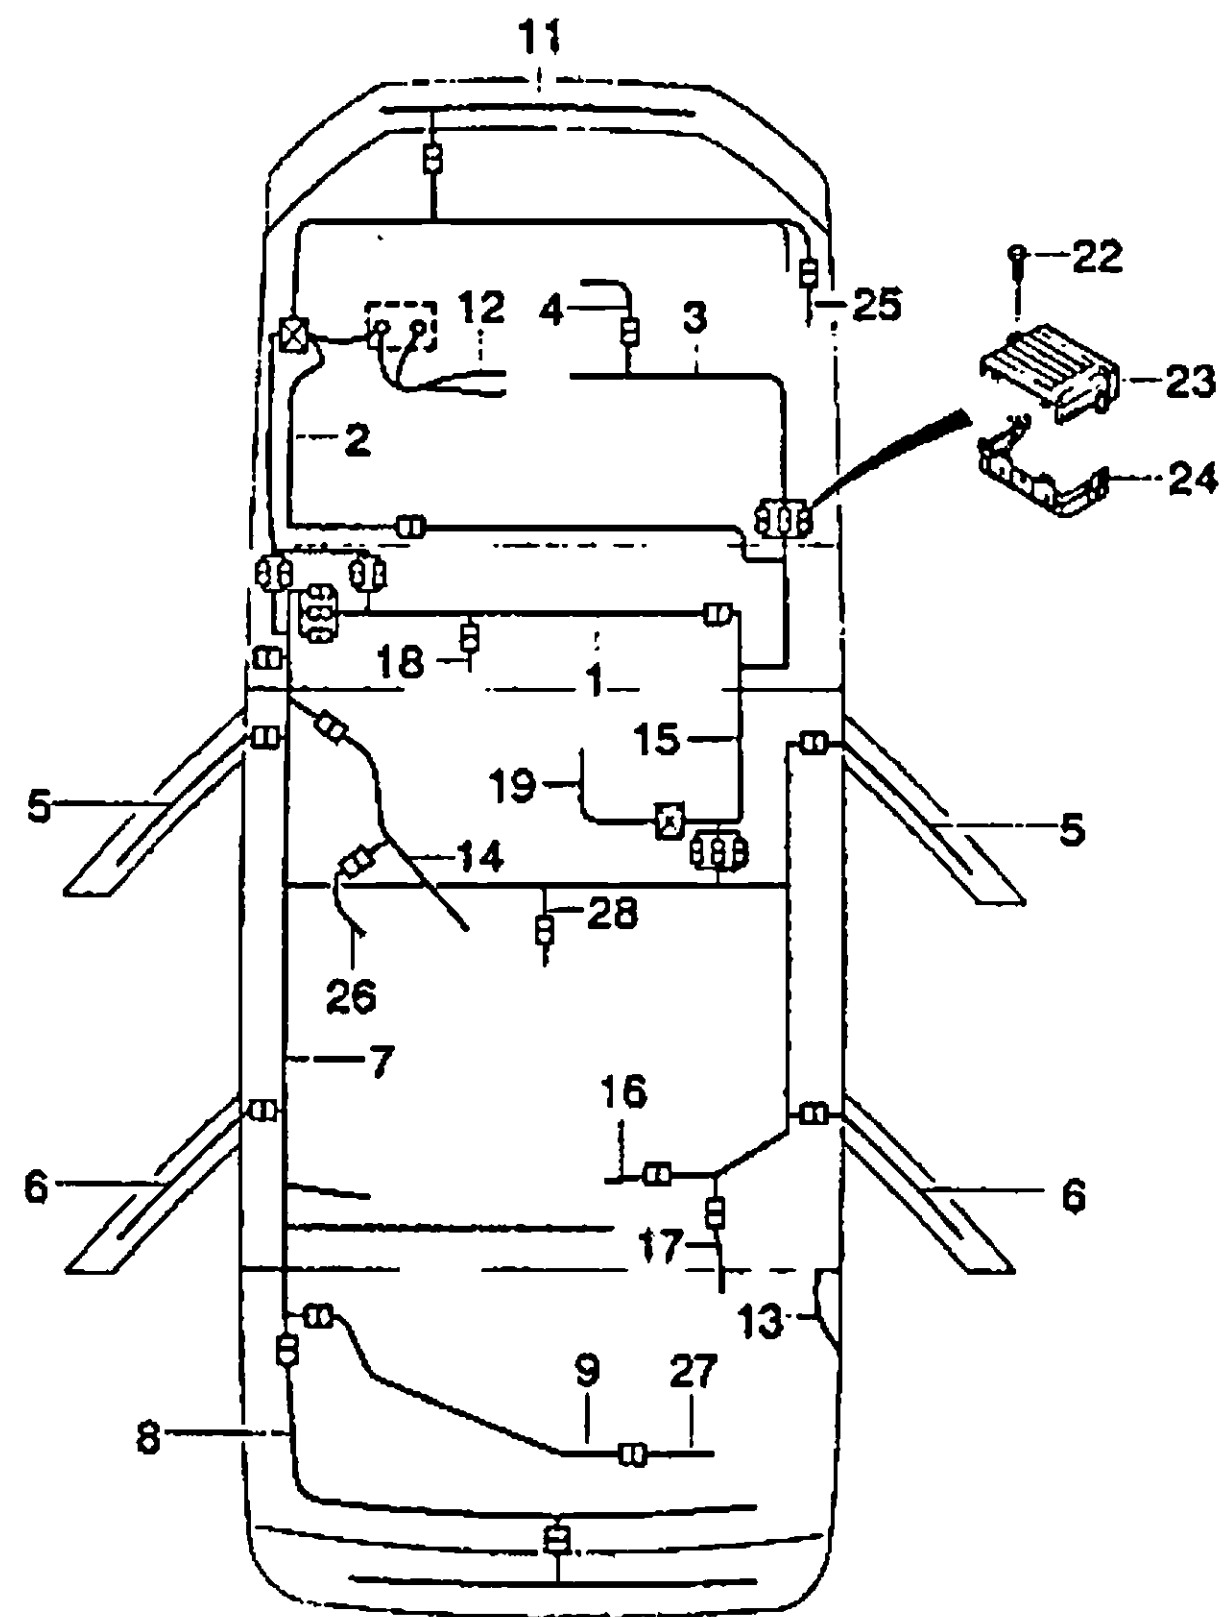

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	X
	96252260	.	.	B	B	B	A	A	A	&C59/C60-JL9/T97	1			NOT APPLIED	XL	
	96252252	.	.	B	B	B	.	A	A	&C59/C60&JL9-T97	1			NOT APPLIED	XC	
	96252258	.	.	B	B	B	.	.	A	&C59/C60&T97-JL9	1			NOT APPLIED	XJ	
	96252250	.	.	B	B	B	.	.	A	&C59/C60&JL9&T97	1			NOT APPLIED	XA	
	[03]	(E)WIRING-ENGINE (D)VERDRAHTUNG,MOTOR						(F)CABLAGE-MOTEUR (S)INSTALACION ELECTRICA								
	96254117	Y	M	B	B	B	S	S	S	&NN4-VB4	1				MG	
	96235335	Y	M	B	B	B	A	A	A	&NN7	1				HN	
	96243365	Y	M	B	B	B	A	A	A	&NN4&VB4	1				9D	
	96306006	Y	M	B	B	B	A	A	A	&NN6	1				HA	
	96254118	Y	A	B	B	B	O	O	O	&NN4-VB4	1				MH	
	96235336	Y	A	B	B	B	A	A	A	&NN7	1				HP	
	96243366	Y	A	B	B	B	A	A	A	&NN4&VB4	1				9E	
	96306007	Y	A	B	B	B	A	A	A	&NN6	1				HB	
	96254119	6	M	B	B	B	.	.	S		1		970610		MJ	
N	96255171	6	M	B	B	B	.	.	S	&NN4-VB4	1		970610		DP	
	96216498	6	M	B	B	B	.	.	A	&NN7	1				HF	
	96243367	6	M	B	B	B	.	.	A	&NN4&VB4	1				9F	
	96306008	6	M	B	B	B	.	.	A	&NN6	1				HC	
	96254120	6	A	B	B	B	.	.	O		1		970610		MK	
N	96255172	6	A	B	B	B	.	.	O	&NN4-VB4	1		970610		DQ	
	96216499	6	A	B	B	B	.	.	A	&NN7	1				HG	
	96243368	6	A	B	B	B	.	.	A	&NN4&VB4	1				9G	
	96306009	6	A	B	B	B	.	.	A	&NN6	1				HD	
ENG(ENGINE)							T/A(TRANSAXLE)				BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON							M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

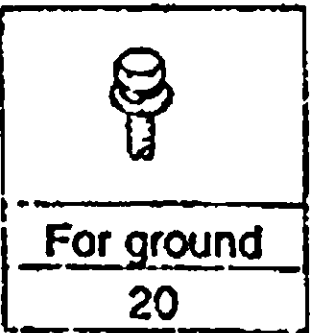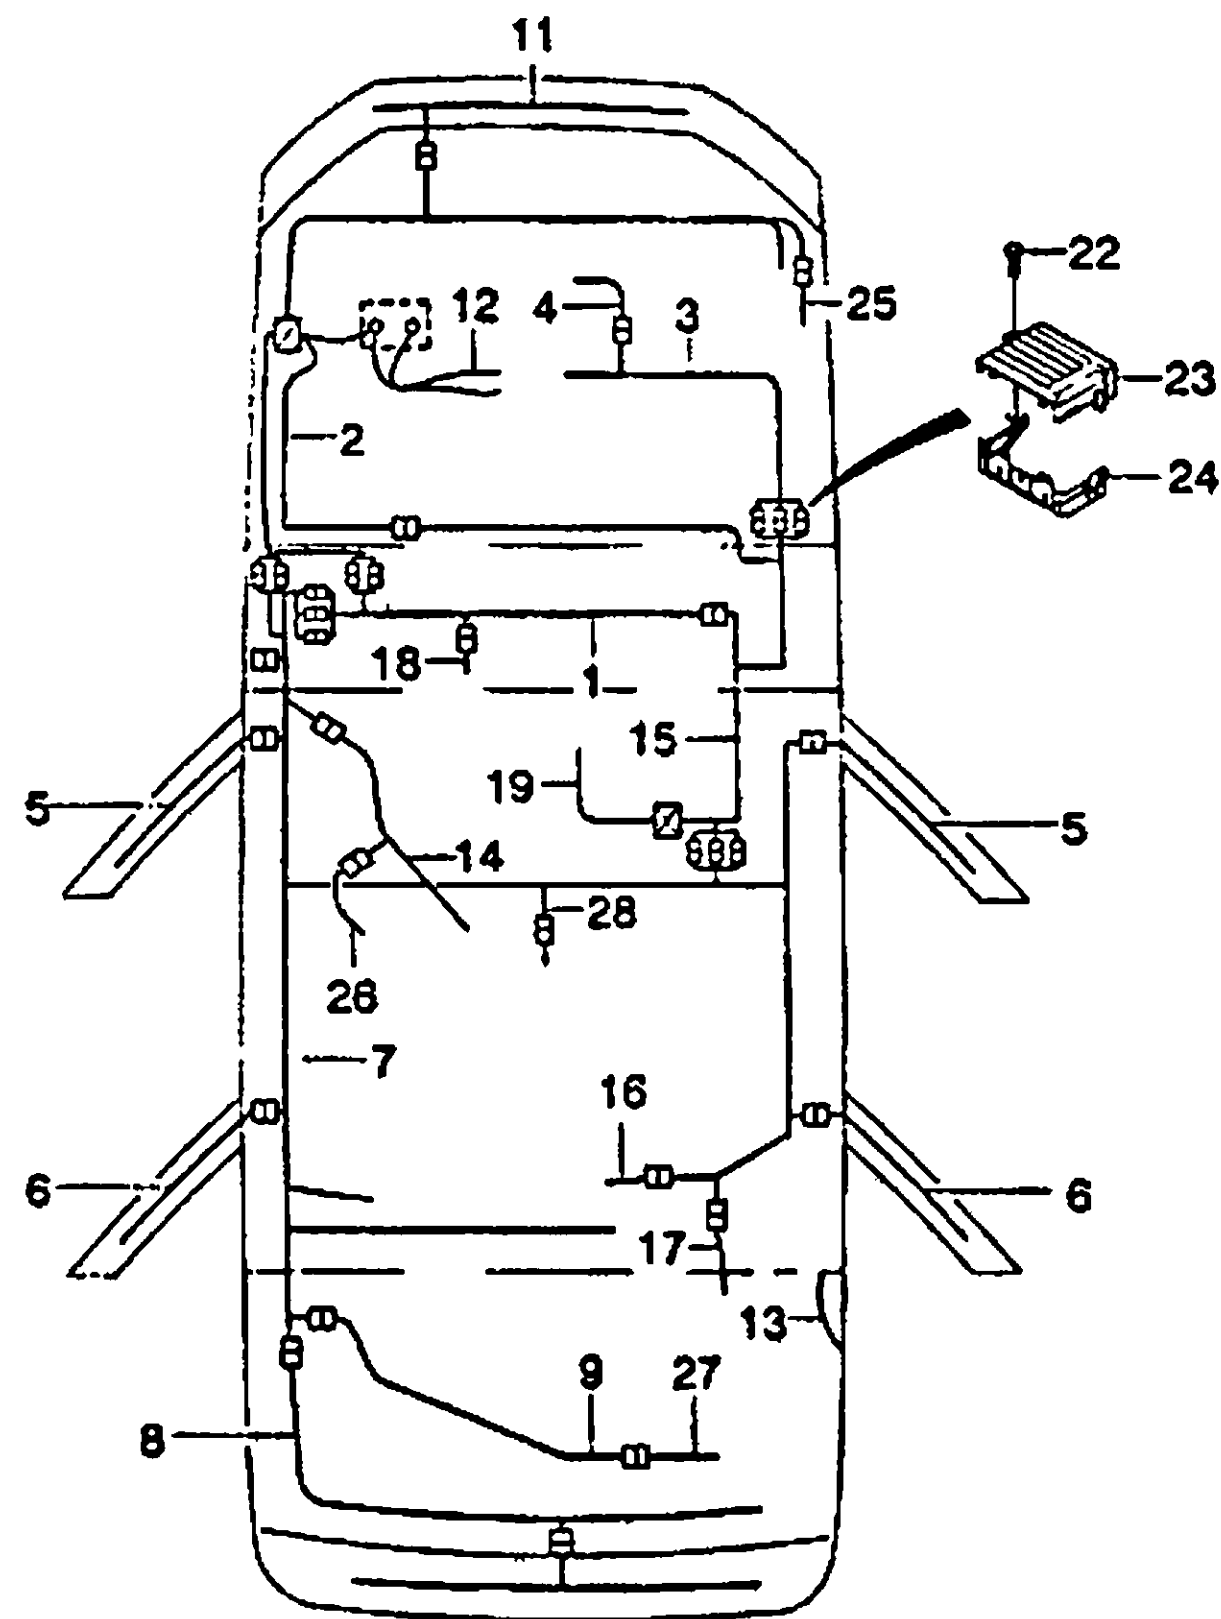

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N / G A	T N G	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[04]	(E)WIRING-FUEL INJECTION (D)VERDRAHTUNG,EINSPRITZ									(F)CABLAGE-INJECTION (S)INSTALACION ELECTRICA				
	96239890	6	.	B	B	B	.	.	O		1			WE	
	[05]	(E)WIRING-FRONT DOOR (D)VERDRAHTUNG,VORDERTÜR									(F)CABLAGE-PORTE AVANT (S)INSTALACION ELECTRICA				
	96306030	.	.	B	.	B	S	S	.	&A30&D39-AU3	2			TS	
	96306027	.	.	B	.	B	O	O	S	&AU3	LH 1			TN	
	96306032	.	.	B	.	B	O	O	S	&AU3&D39	RH 1			SB	
	96306029	.	.	B	.	B	O	O	.	&AU3&A30&D39	LH 1			TR	
	96306033	.	.	B	.	B	O	O	.	&AU3&A30&D39	RH 1			SC	
	96306031	.	.	B	.	B	.	.	O	&AU3&DD4	RH 1			SA	
	96227435	.	.	.	B	.	S	.	.	&A30&D39	2			SD	
	96227438	.	.	.	B	.	O	.	S	&AU3&A32	LH 1			SE	
	96227443	.	.	.	B	.	O	.	S	&AU3&A32&D39	RH 1			SF	
	96227445	.	.	.	B	.	.	.	O	&AU3&A32&DD4	RH 1			SG	
	[06]	(E)WIRING-REAR DOOR (D)VERDRAHTUNG,HINTERTÜR									(F)CABLAGE-PORTE ARRIERE (S)INSTALACION ELECTRICA				
	96304238			B	.	B	O	O	S	&AU3-A31	2			TC	
	96250935			B	.	B	.	.	O	&AU3&A31	2			VR	
	[07]	(E)WIRING-FLOOR (D)VERDRAHTUNG,BODEN									(F)CABLAGE-PLANCHER (S)INSTALACION ELECTRICA				
	96252308	.	.	B	.	.	S	S	.	&A30-AU3JL9	1			LS	
	96252299	.	.	B	.	.	.	.	O	&AU3&A32&JL9	1			LK	
	96252302	.	.	B	.	.	.	.	O	&A30&JL9-AU3	1			LN	
	96252303	.	.	B	.	.	.	.	O	&AU3&A32-JL9	1			LP	
	96258765	.	.	B	.	.	.	.	O	&AU3&A31&JL9	1			EB	
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							


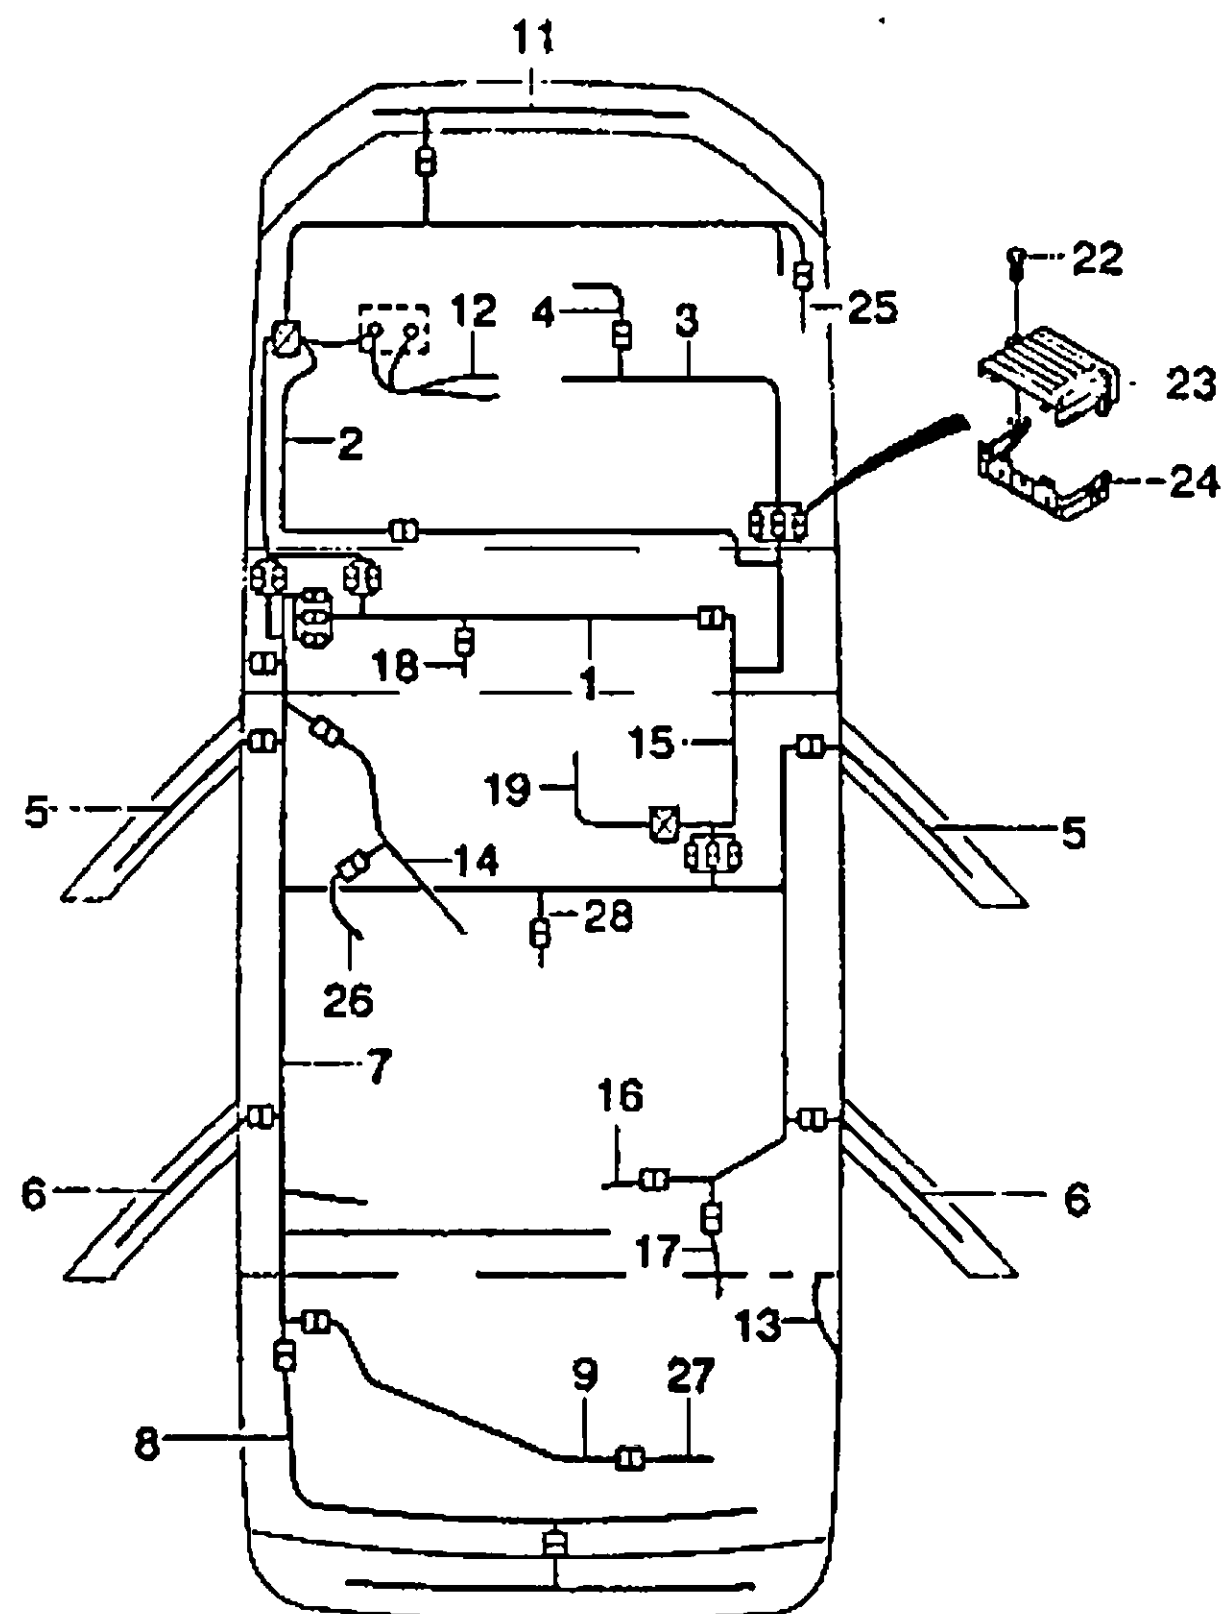


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S E
	96258766	.	.	B	.	.	.	O	.	&AU3&A31-JL9	1			EC	
	96252310	.	.	B	.	.	.	.	S	&AU3&A32-JL9	1			LW	
	96252307	.	.	B	.	.	.	.	O	&AU3&A31&JL9	1			LT	
	96252308	.	.	B	.	.	.	.	O	&AU3&A32&JL9	1			LU	
	96252309	.	.	B	.	.	.	.	O	&AU3&A31-JL9	1			LV	
	96255126	.	.	B	.	.	.	.	A	&KL9&A32-JL9	1		FOR BRAZIL	3K	
	96255124	.	.	B	.	.	.	.	A	&KL9&A32&JL9	1		FOR BRAZIL	3H	
	96255125	.	.	B	.	.	.	.	A	&KL9&A31-JL9	1		FOR BRAZIL	3J	
	96255123	.	.	B	.	.	.	.	A	&KL9&A31&JL9	1		FOR BRAZIL	3G	
	96252348	.	.	.	B	.	S	.	.	&A30-AU3/JL9	1			4W	
	96252350	.	.	.	B	.	O	.	.	&AU3&A32-JL9	1			4Y	
	96252351	.	.	.	B	.	.	.	S	&AU3&A32-JL9	1			4Z	
	96252353	.	.	.	B	.	.	.	O	&AU3&A32&JL9	1			F2	
	96255100	.	.	.	B	.	.	.	A	&KL9&A32-JL9	1		FOR BRAZIL	FD	
	96255102	.	.	.	B	.	.	.	A	&KL9&A32&JL9	1		FOR BRAZIL	FF	
	96252355	.	.	.	.	B	S	.	.	&A30-AU3/JL9	1			F4	
	96252354	.	.	.	.	B	O	.	.	&AU3&A32-JL9	1			F3	
	96252357	.	.	.	.	B	.	.	S	&AU3&A32-JL9	1	970602		F6	
N	96255092	.	.	.	.	B	.	.	S	&AU3&A32-JL9	1	970602		FY	
	96252361	.	.	.	.	B	.	.	O	&AU3&A31&JL9	1	970602		G1	
N	96255095	.	.	.	.	B	.	.	O	&AU3&A31&JL9	1	970602		3B	
	96252360	.	.	.	.	B	.	.	O	&AU3&A31-JL9	1	970602		F9	
N	96255094	.	.	.	.	B	.	.	O	&AU3&A31-JL9	1	970602		3A	
	96252359	.	.	.	.	B	.	.	O	&AU3&A32&JL9	1	970602		F8	

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

5710 WIRING HARNESS


5K06

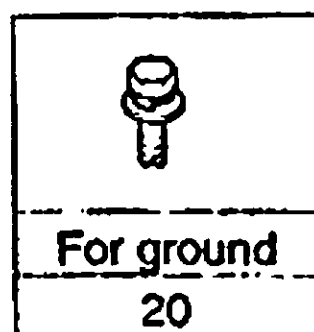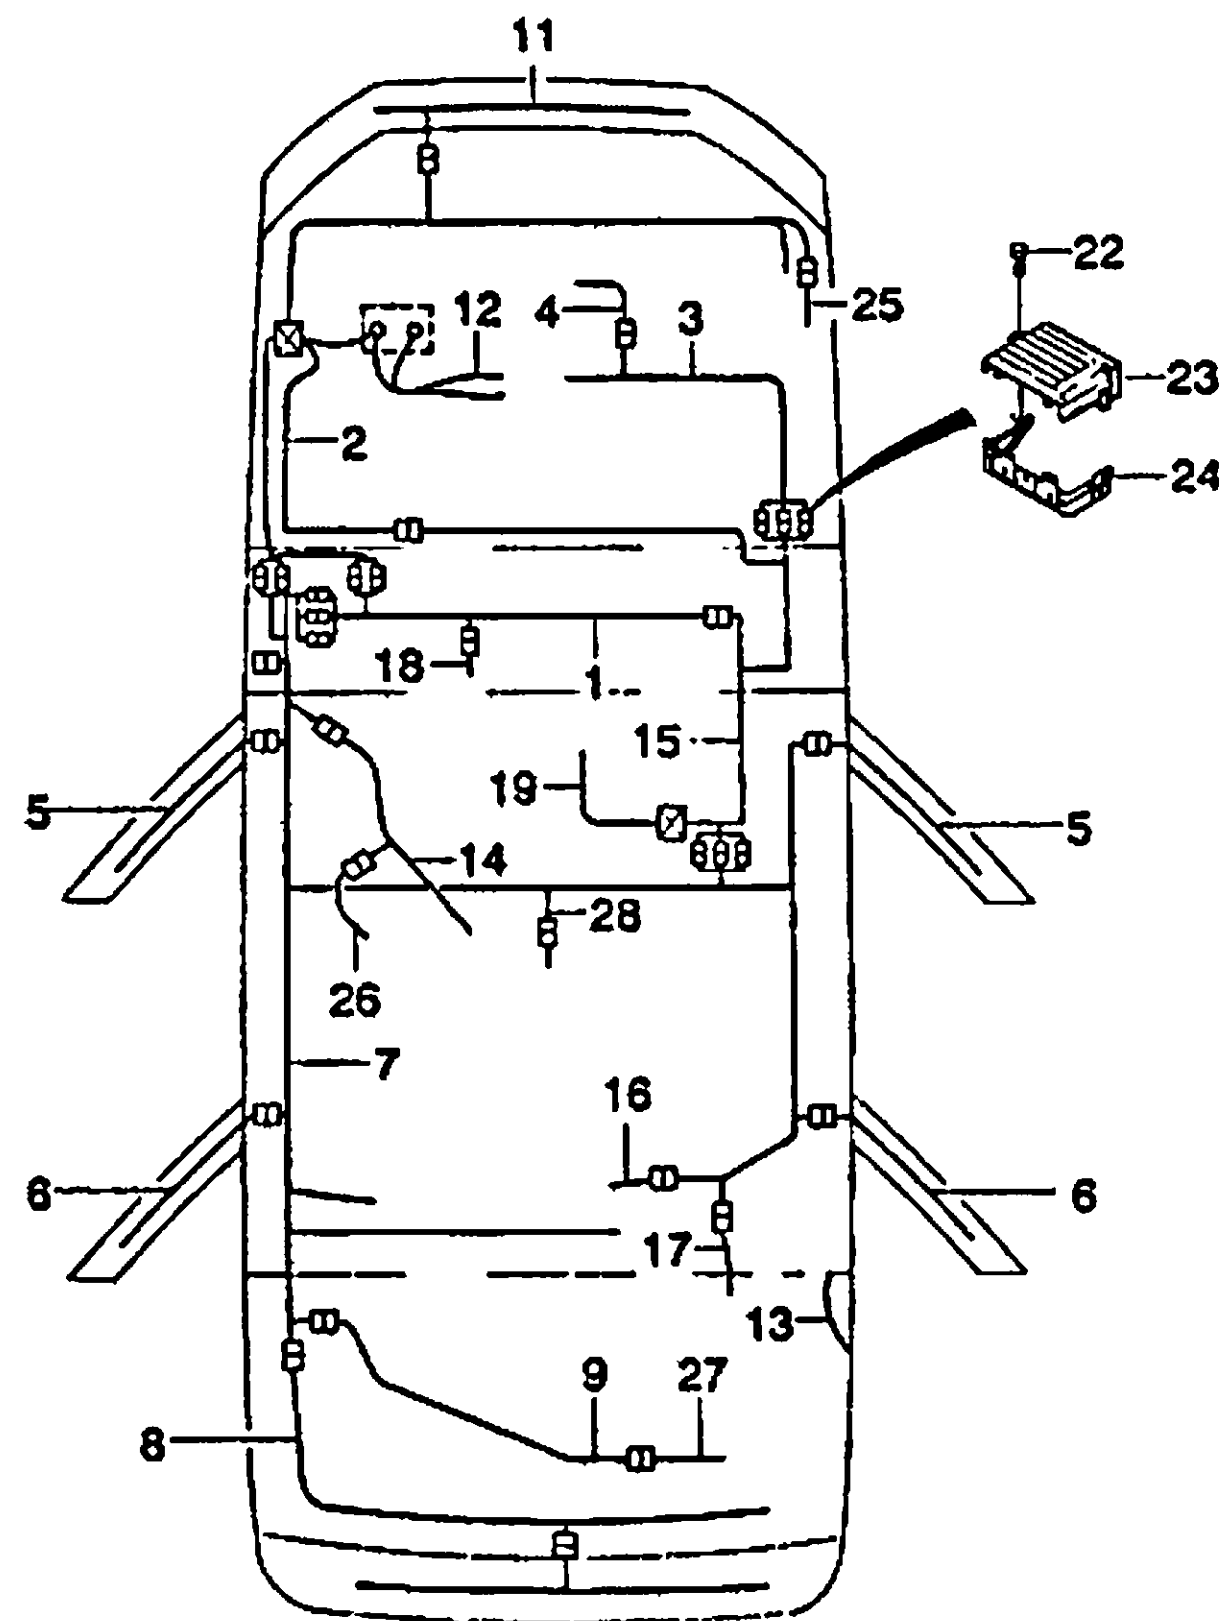

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S E	S X
N	96255093	.	.	.	.	B	.	.	O	&AU3&A32&JL9	1	970602		FZ		
	96255106	.	.	.	.	B	.	.	A	&KL9&A32-JL9	1		FOR BRAZIL	FK		
	96255108	.	.	.	.	B	.	.	A	&KL9&A32&JL9	1		FOR BRAZIL	FM		
	96255109	.	.	.	.	B	.	.	A	&KL9&A31-JL9	1		FOR BRAZIL	FN		
	96255110	.	.	.	.	B	.	.	A	&KL9&A31&JL9	1		FOR BRAZIL	FP		
	96258767	.	.	B	.	.	.	.	O	&A31&JL9-AU3	1		NOT APPLIED	ED		
	96258768	.	.	B	.	.	.	.	O	&A31-AU3JL9	1		NOT APPLIED	EE		
	[08]	(E)WIRING-TRUNK (D)VERDRAHTUNG								(F)CABLAGE-COFFRE (S)INSTALACION ELECTRICA						
	96306014	.	.	B	.	.	S	S	S		1			TD		
	96243390	.	.	.	B	B	S	.	.	-JUS8/U83	1			7S		
	96242515	.	.	.	B	B	O	.	S	&JUS8/U83	1			7N		
	[09]	(E)WIRING-TRUNK LID&TAILGATE (D)VERDRAHTUNG								(F)CABLAGE (S)INSTALACION ELECTRICA						
	96306016	.	.	B	.	.	S	S	S	-T98	1		FOR TRUNK	TT		
	96217030	.	.	B	.	.	A	A	A	&T98	1		FOR TRUNK	TU		
	96217032	.	.	.	B	B	S	.	.	-AU3/T93.	1		FOR TAILGATE	7B		
	96217034	.	.	.	B	B	A	.	.	&T93-AU3.	1		FOR TAILGATE	7D		
	96217035	.	.	.	B	B	A	.	A	&AU3&T93.	1		FOR TAILGATE	7E		
	96217036	.	.	.	B	B	O	.	S	&AU3-T93.	1		FOR TAILGATE	7F		
	[11]	(E)WIRING-FRONT BUMPER (D)VERDRAHTUNG								(F)CABLAGE (S)INSTALACION ELECTRICA						
	96236220	.	.	B	B	B	.	.	O	&VT1&T97	1			TK		
	96236223	.	.	B	B	B	.	.	O	&VT2&T97	1			TJ		
	[12]	(E)WIRING-BATTERY CABLE (D)VERDRAHTUNG								(F)CABLAGE (S)INSTALACION ELECTRICA						
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE										
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK										



5710 WIRING HARNESS

5L06

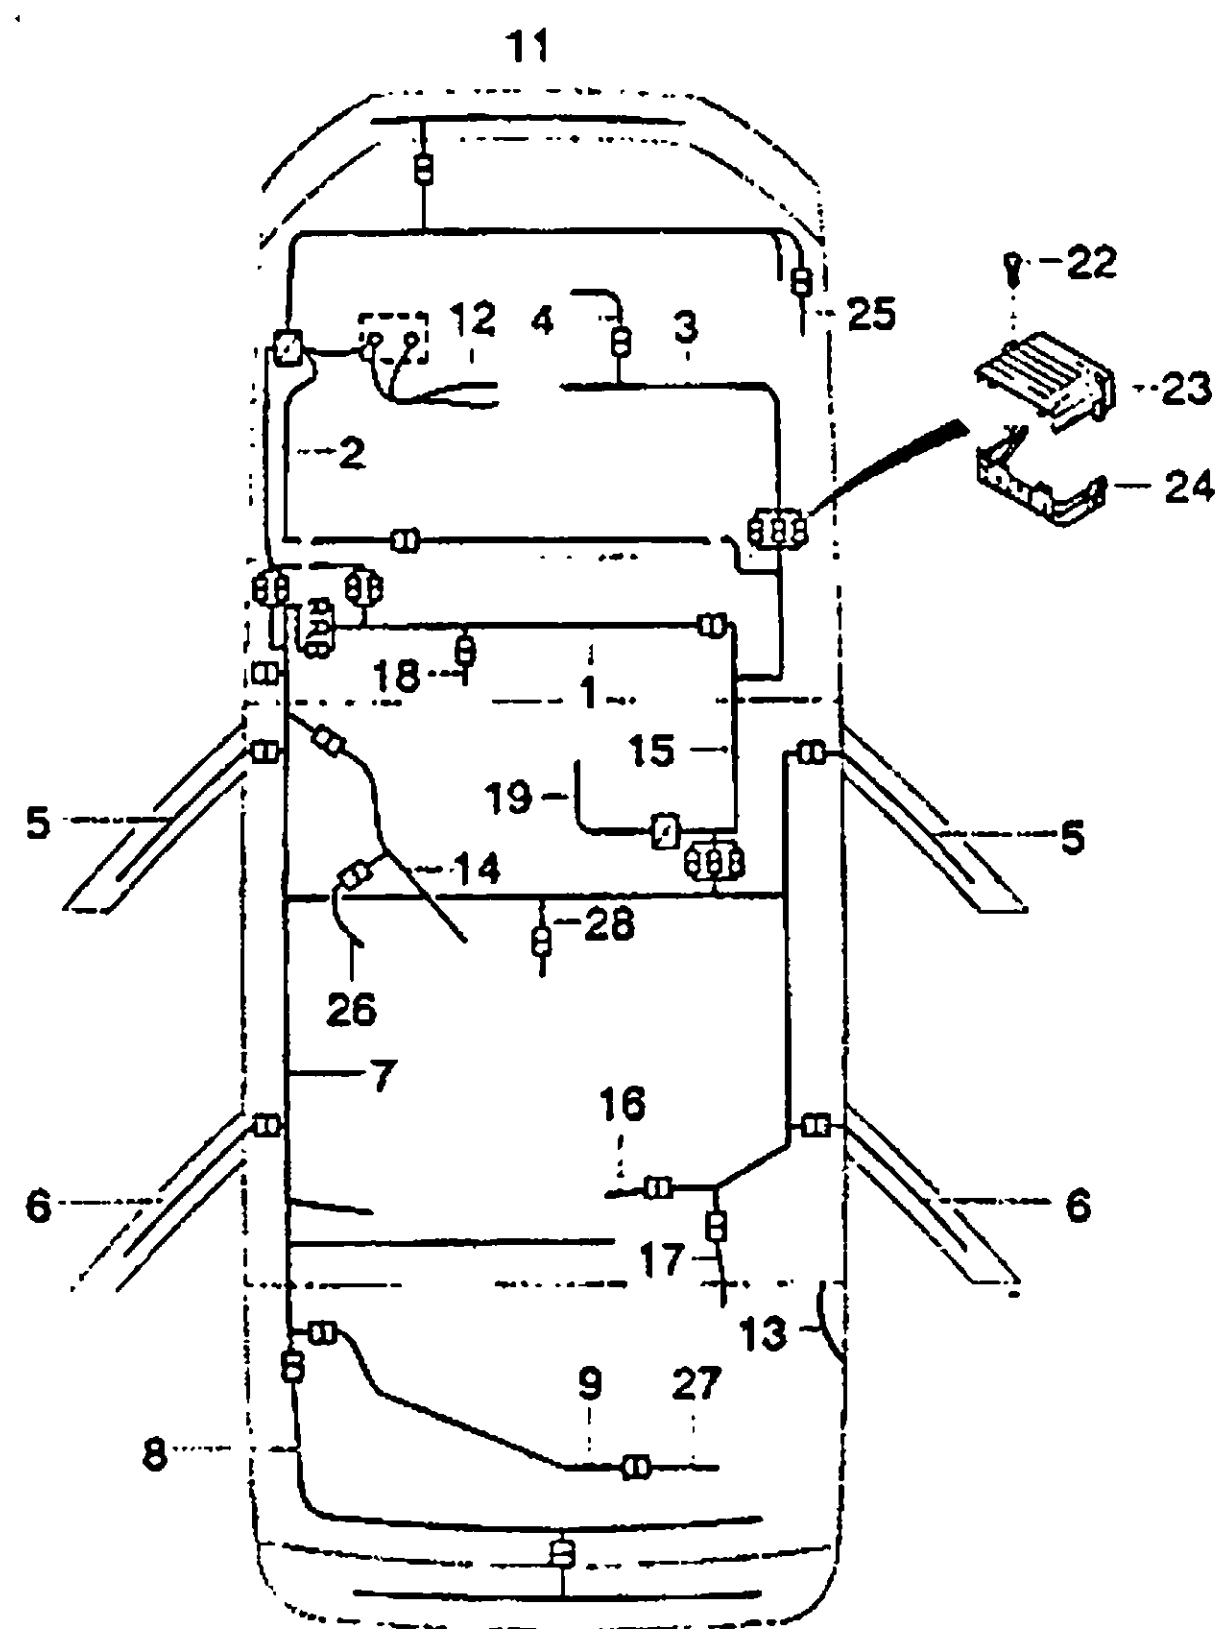




For ground
20

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E T N / G A	BODY			LEVEL					FROM	TO		
			4 N	3 H	5 H	S	S S S							
	96304994	.	.	B	B	B	S	S	S		1			3X
	[13]	(E)WIRING-BACK WDO HEATED (D)VERDRAHTUNG,HINTERE FENST												
	96306001	.	.	B	B	B	S	S	S		1			
	[14]	(E)WIRING-ROOF (D)VERDRAHTUNG												
	96304237	.	.	B	.	.	S	S	S	-C25	1	970602		6H
N	96255145	.	.	B	.	.	S	S	S	-C25	1	970602 971001		2F
N	96258770	.	.	B	B	B	S	S	S		1	971001		5J
	96242513	.	.	.	B	.	S	.	S	&C25	1	970602		7K
N	96255144	.	.	.	B	.	S	.	S	&C25	1	970602 971001		2E
N	96258769	.	.	.	B	.	S	.	S	&C25	1	971001		5H
	96242512	.	.	.	.	B	S	.	S	&C25	1	970602		7F
N	96255146	.	.	.	.	B	S	.	S	&C25	1	970602, 971001		2G
N	96258769	.	.	.	.	B	S	.	S	&C25	1	971001		5H
	[15]	(E)WIRING-ECM & ABS (D)VERDRAHTUNG												
	96243370	Y	M	B	B	B	S	S	S	&C46&NN4-JL9	1			9H
	96243378	Y	M	B	B	B	O	O	O	&C59/C60&NN4-JL9	1			9S
	96243371	Y	M	B	B	B	.	O	O	&C46&JL9&NN4	1			9J
	96243379	Y	M	B	B	B	.	O	O	&C59/C60&JL9&NN4	1			9T
	96243372	Y	A	B	B	B	O	O	O	&C46&NN4-JL9	1			9K
	96243380	Y	A	B	B	B	O	O	O	&C59/C60&NN4-JL9	1			9U
	96243373	Y	A	B	B	B	.	O	O	&C46&JL9&NN4	1			9L
	96243381	Y	A	B	B	B	.	O	O	&C59/C60&JL9&NN4	1			9V
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC G = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

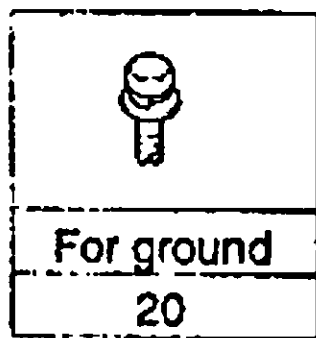
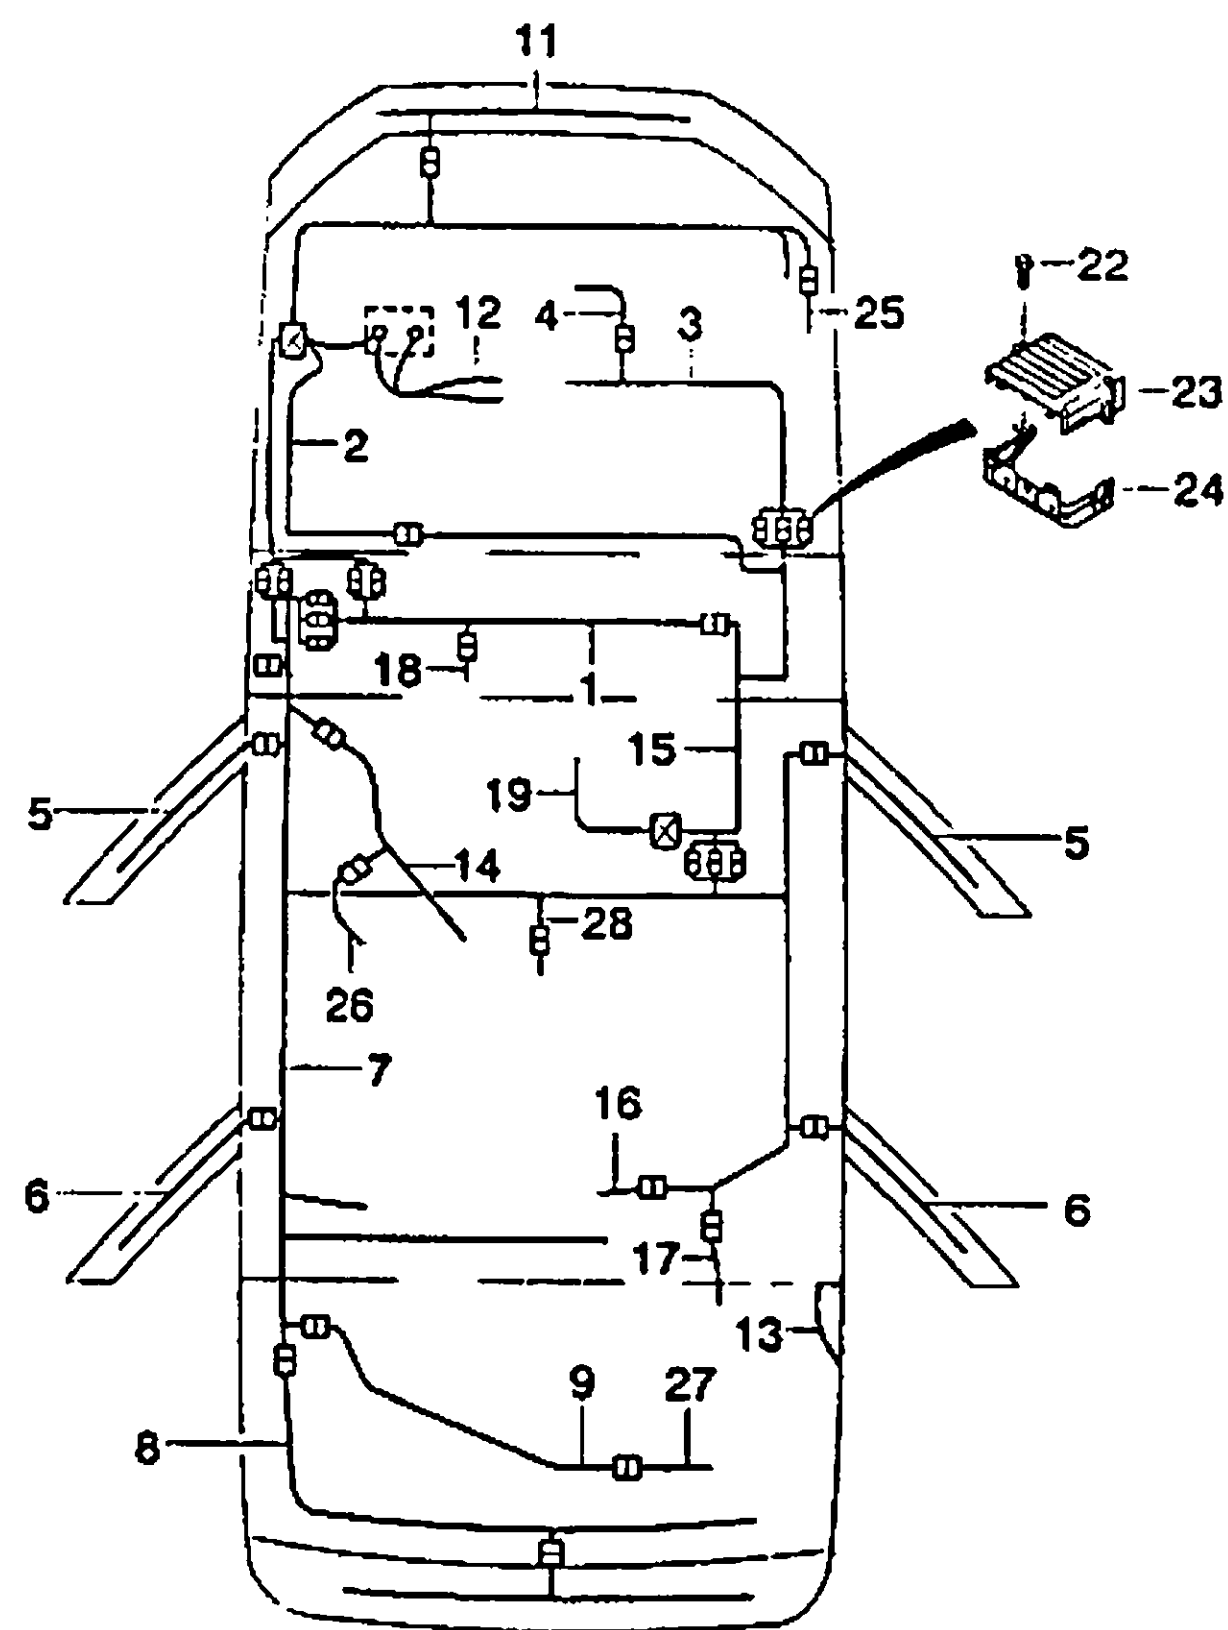


For ground
20

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	X
	96217037	Y	M	B	B	B	A	A	A	&C46&NN6-JL9	1			KA		
	96243343	Y	M	B	B	B	A	A	A	&C59/C60&NN6-JL9	1			8E		
	96235345	Y	M	B	B	B	A	A	A	&C46&NN7-JL9	1			6C		
	96243339	Y	M	B	B	B	A	A	A	&C59/C60&NN7-JL9	1			8A		
	96217038	Y	M	B	B	B	.	A	A	&C46&JL9&NN6	1			KB		
	96243344	Y	M	B	B	B	.	A	A	&C59/C60&JL9&NN6	1			8F		
	96235346	Y	M	B	B	B	.	A	A	&C46&JL9&NN7	1			6D		
	96243340	Y	M	B	B	B	.	A	A	&C59/C60&JL9&NN7	1			8B		
	96217039	Y	A	B	B	B	A	A	A	&C46&NN6-JL9	1			KC		
	96243346	Y	A	B	B	B	A	A	A	&C59/C60&NN6-JL9	1			8G		
	96235347	Y	A	B	B	B	A	A	A	&C46&NN7-JL9	1			6E		
	96243341	Y	A	B	B	B	A	A	A	&C59/C60&NN7-JL9	1			8C		
	96243342	Y	A	B	B	B	.	A	A	&C59/C60&JL9&NN7	1			8D		
	96217040	Y	A	B	B	B	.	A	A	&C46&JL9&NN6	1			KD		
	96243346	Y	A	B	B	B	.	A	A	&C59/C60&JL9&NN6	1			8H		
	96235348	Y	A	B	B	B	.	A	A	&C46&JL9&NN7	1			6F		
	96243374	6	M	B	B	B	.	.	O	&C46&NN4-JL9	1			9M		
	96243382	6	M	B	B	B	.	.	O	&C59/C60&NN4-JL9	1			9W		
	96243375	6	M	B	B	B	.	.	O	&C46&JL9&NN4	1			9N		
	96243383	6	M	B	B	B	.	.	O	&C59/C60&JL9&NN4	1			9X		
	96243376	6	A	B	B	B	.	.	O	&C46&NN4-JL9	1			9P		
	96243384	6	A	B	B	B	.	.	O	&C59/C60&NN4-JL9	1			9Y		
	96243377	6	A	B	B	B	.	.	O	&C46&JL9&NN4	1			9R		
	96243385	6	A	B	B	B	.	.	O	&C59/C60&JL9&NN4	1			9Z		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

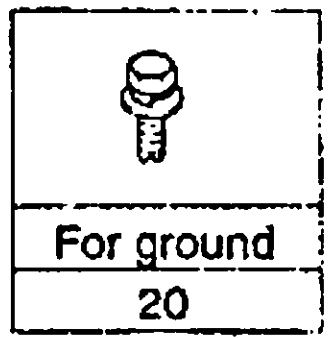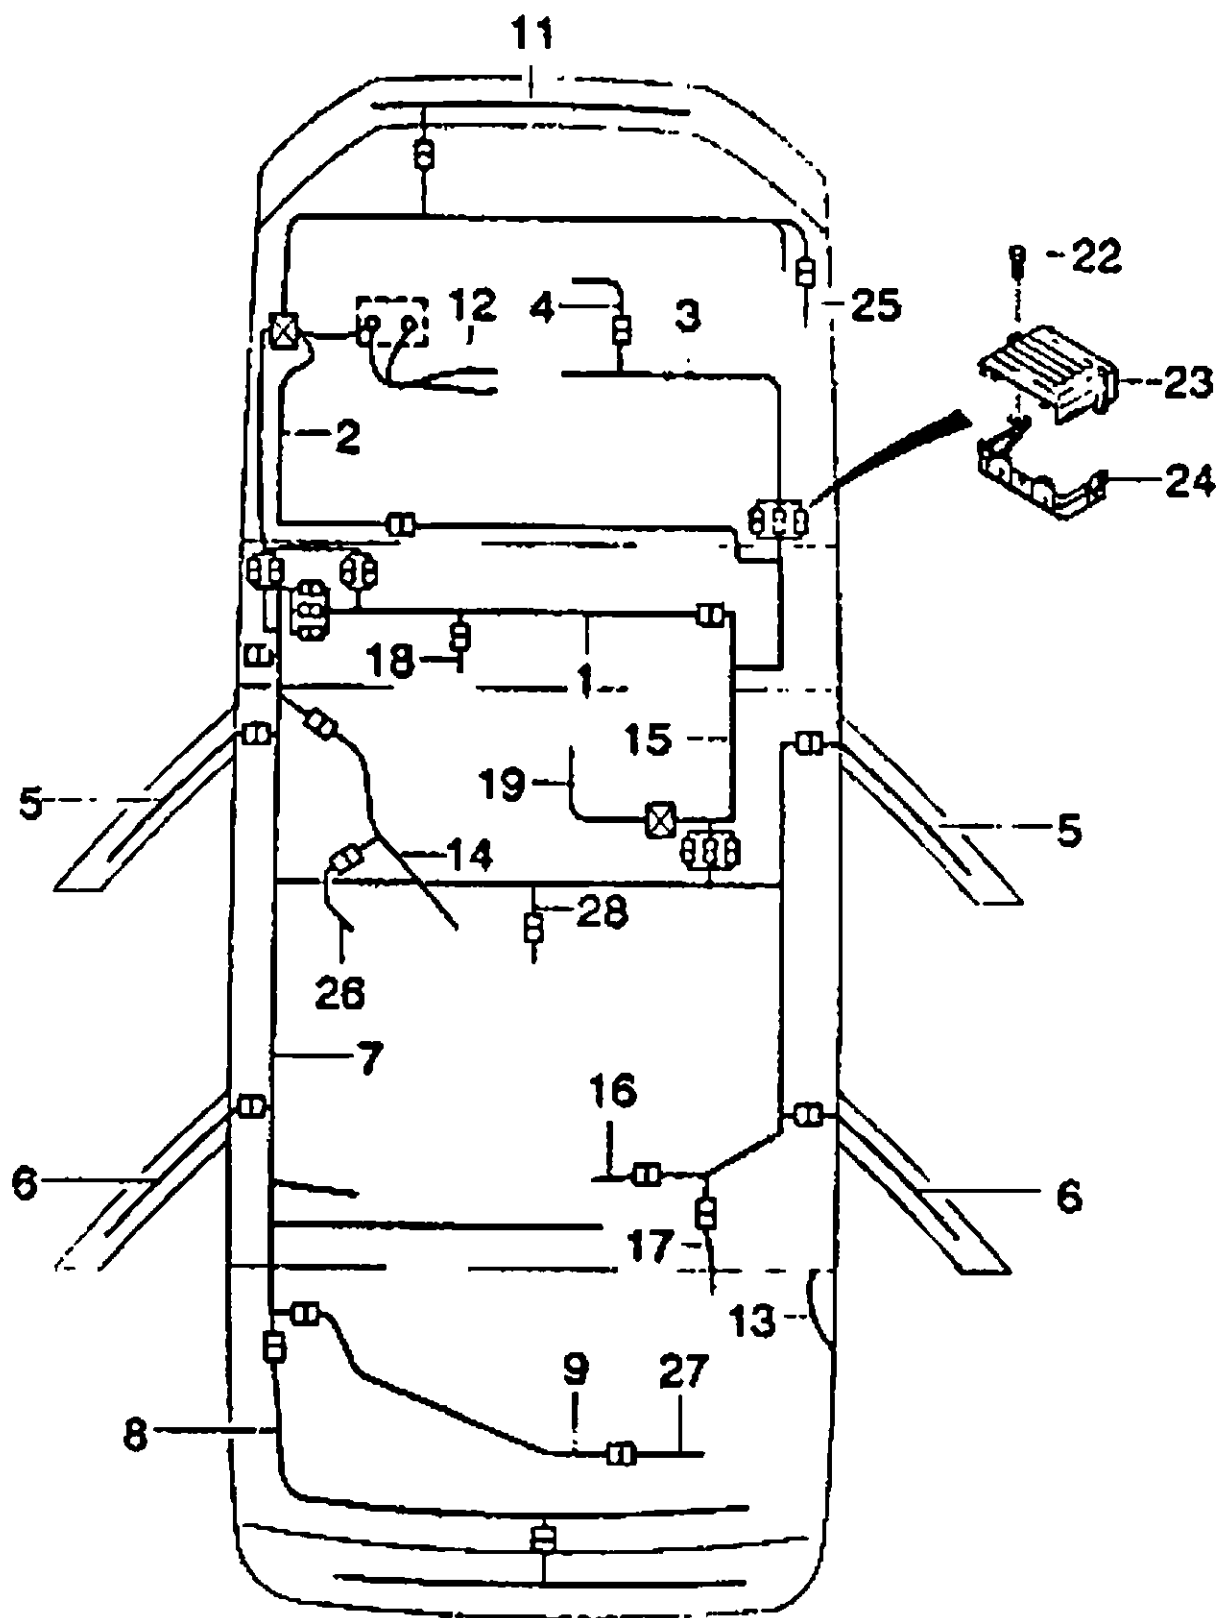


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S								S E	S X
	96217041	6	M	B	B	B	.	.	A	&C46&NN6-JL9	1			KE		
	96243347	6	M	B	B	B	.	.	A	&C59/C60&NN6-JL9	1			BJ		
	96217049	6	M	B	B	B	.	.	A	&C46&NN7-JL9	1			KM		
	96243353	6	M	B	B	B	.	.	A	&C59/C60&NN7-JL9	1			BQ		
	96217042	6	M	B	B	B	.	.	A	&C46&JL9&NN6	1			KF		
	96243348	6	M	B	B	B	.	.	A	&C59/C60&JL9&NN6	1			8K		
	96217050	6	M	B	B	B	.	.	A	&C46&JL9&NN7	1			KN		
	96243354	6	M	B	B	B	.	.	A	&C59/C60&JL9&NN7	1			8R		
	96217043	6	A	B	B	B	.	.	A	&C46&NN6-JL9	1			KG		
	96243349	6	A	B	B	B	.	.	A	&C59/C60&NN6-JL9	1			8L		
	96217051	6	A	B	B	B	.	.	A	&C46&NN7-JL9	1			KP		
	96243355	6	A	B	B	B	.	.	A	&C59/C60&NN7-JL9	1			BS		
	96217044	6	A	B	B	B	.	.	A	&C46&JL9&NN6	1			KH		
	96243350	6	A	B	B	B	.	.	A	&C59/C60&JL9&NN6	1			8M		
	96217052	6	A	B	B	B	.	.	A	&C46&JL9&NN7	1			KR		
	96243356	6	A	B	B	B	.	.	A	&C59/C60&JL9&NN7	1			8T		
	[16]	(E)WIRING-ABS REAR SENSOR (D)VERDRAHTUNG									(F)CABLAGE (S)INSTALACION ELECTRICA					
	96304995	.	.	B	B	B	.	.	O O	&JL9	1					
	[17]	(E)WIRING-FUEL TANK (D)VERDRAHTUNG									(F)CABLAGE (S)INSTALACION ELECTRICA					
	96232850	.	.	B	B	B	S	S	S		1			6A		
	[18]	(E)WIRE-CIGAR LIGHTER EXTENS (D)VERDRAHTUNG									(F)CABLES (S)ALAMBRE					
	96243388	.	.	B	B	B	S	S	S		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

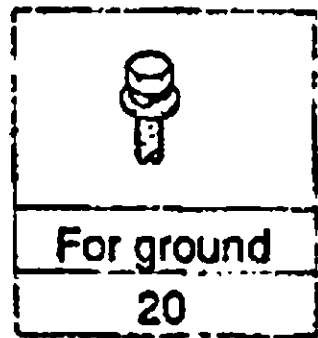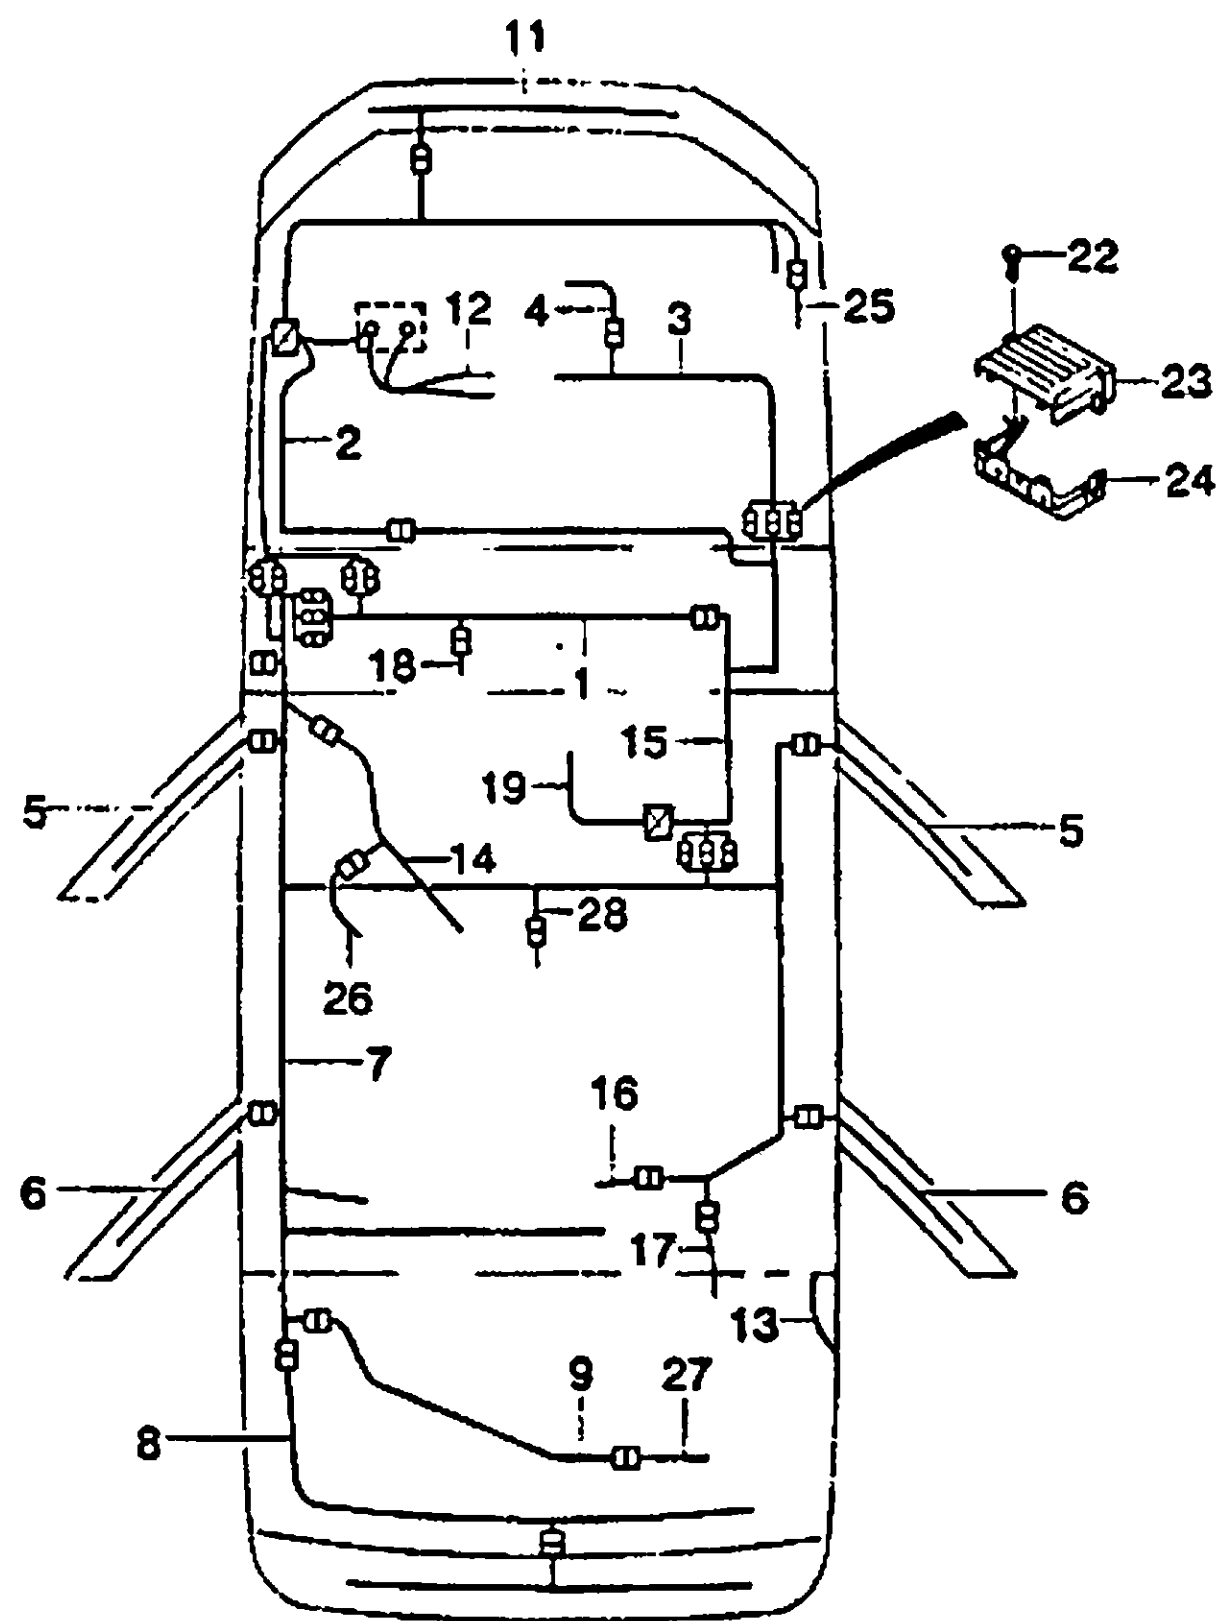

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[19]	(E)WIRING-R.O.N. JUMP	(D)VERDRAHTUNG							(F)CABLAGE	(S)INSTALACION ELECTRICA					
	96232850	. . . B B B S S S								1				6A		
	[20]	(E)BOLT	(D)SCHRAUBE							(F)BOULON	(S)PERNO					
	09115-06001	. . . B B B S S S								8						
	[22]	(E)BOLT-HEXAGON FLANGE	(D)SCHRAUBE							(F)BOULON	(S)PERNO					
	01514-06165	. . . B B B S S S								3						
	[23]	(E)COVER-CONNECTION BRACKET	(D)DECKEL							(F)CARTER	(S)CUBIERTA					
	96234604	. . . B B B S S S								1						
	[24]	(E)BRACKET-ENGINE CONT.HARNE	(D)TRÄGER							(F)SUPPORT	(S)SOPORTE					
	96234603	. . . B B B S S S								1						
	[25]	(E)WIRE-EXTN S/TURN SIG LAMP	(G)VERDRAHTUNG-VERLÄNGERUN							(F)CABLAGE-RALLONGE LAMPE	(S)INSTALACION ELECTRICA					
	- 96245540	. . . B B B A A A &FL6								RH 1						
	[26]	(E)WIRING-SUNROOF	(D)VERDRAHTUNG							(F)CABLAGE	(S)INSTALACION ELECTRICA					
	96242510	. . . B . . . O O O								1	970602					
N	96255147	. . . B . . . O O O								1	970602			2H		
	96250676	 B . . O . O								1	970602			PC		
N	96255149	 B . . O . O								1	970602			2K		
	96250675	 B O . O								1	970602			PB		
N	96255148	 B O . O								1	970602			2J		
	[27]	(E)WIRING-EXTENSION T/GATE	(D)VERDRAHTUNG-VERLÄNGERUN							(F)CABLAGE-RALLONGE	(S)INSTALACION ELECTRICA					
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

5710 WIRING HARNESS

5C07

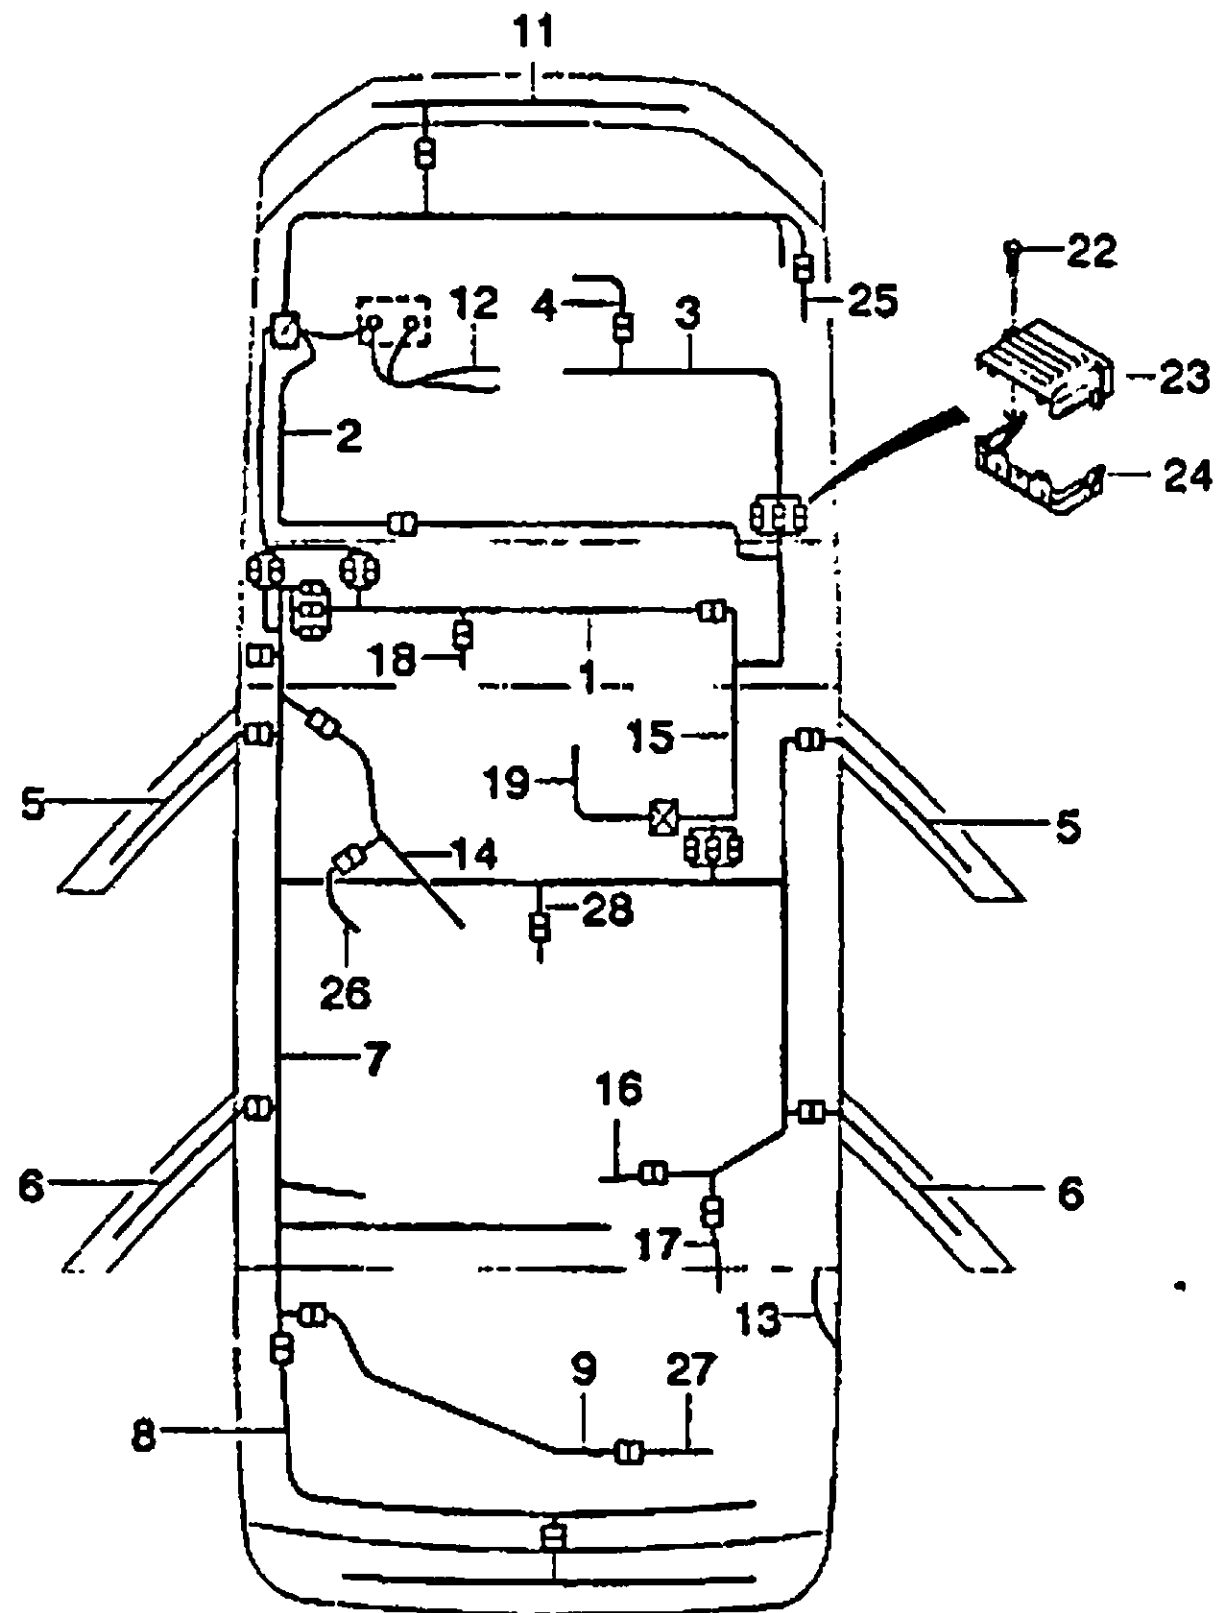



For ground

20

KEY NO.		PART NAME																		
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E					
		E N G	T / A	BODY			LEVEL					FROM	TO							
				4 N	3 H	5 H	S	S								S	X			
	96246695	.	.	.	B	B	S	.	S		1				RJ					
	[28]	(E)	W	RING-EXTENSION AT								(F)	CABLAGE-RALLONGE AT							
	96250974	(D)	VERDRAHTUNG-VERLÄNGERUN														(S)	INSTALACION ELECTRICA		
		.	A	B	B	B	O	O	O		1				PT					

6**BODY & EXTERIOR**



6110	HOOD PANEL	6430	ROOF PANEL	6750	MUD GUARD
6130	FRONT PANEL	6440	TRUNK LID PANEL		
6140	FENDER PANEL	6441	TAILGATE PANEL		
6150	DASH PANEL & COWL	6450	TRUNK LID LOCKING		
6210	FRONT DOOR PANEL	6451	TAILGATE LOCKING		
6220	FRONT DOOR LOCKING	6460	CAR LOCKING		
6230	FRONT WINDOW LIFTER	6510	FRONT FLOOR PANEL		
6240	FRONT WEATHERSTRIP	6520	REAR FLOOR PANEL		
6250	ELECTRIC DOOR LOCKING	6530	FRAME		
6310	REAR DOOR PANEL	6630	OUTSIDE MIRROR		
6320	REAR DOOR LOCKING	6640	GLASS I		
6330	REAR WINDOW LIFTER	6641	GLASS II		
6340	REAR WEATHERSTRIP	6650	EMBLEM & LETTERING		
6360	QUATER WINDOW LOCKING	6660	WHEELS & WHEEL COVER		
6410	SIDE BODY PANEL(N/B)	6670	LABEL & STICKER		
6411	SIDE BODY PANEL(5DOOR H/B)	6710	GRILLE		
6412	SIDE BODY PANEL(3DOOR H/B)	6720	FRONT BUMPER		
6420	FUEL FILLER LOCKING	6730	REAR BUMPER		

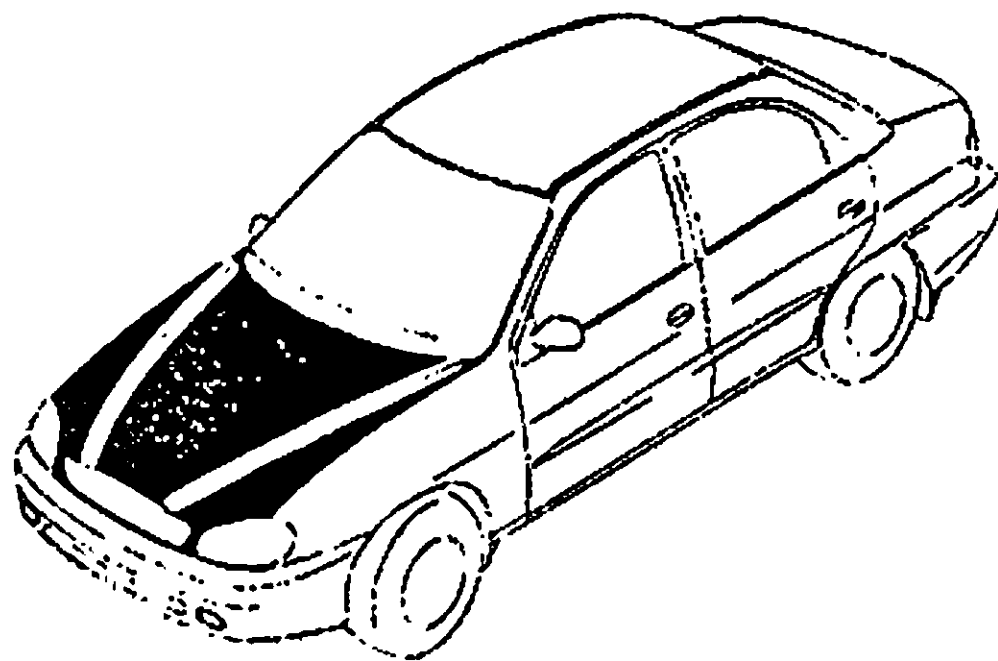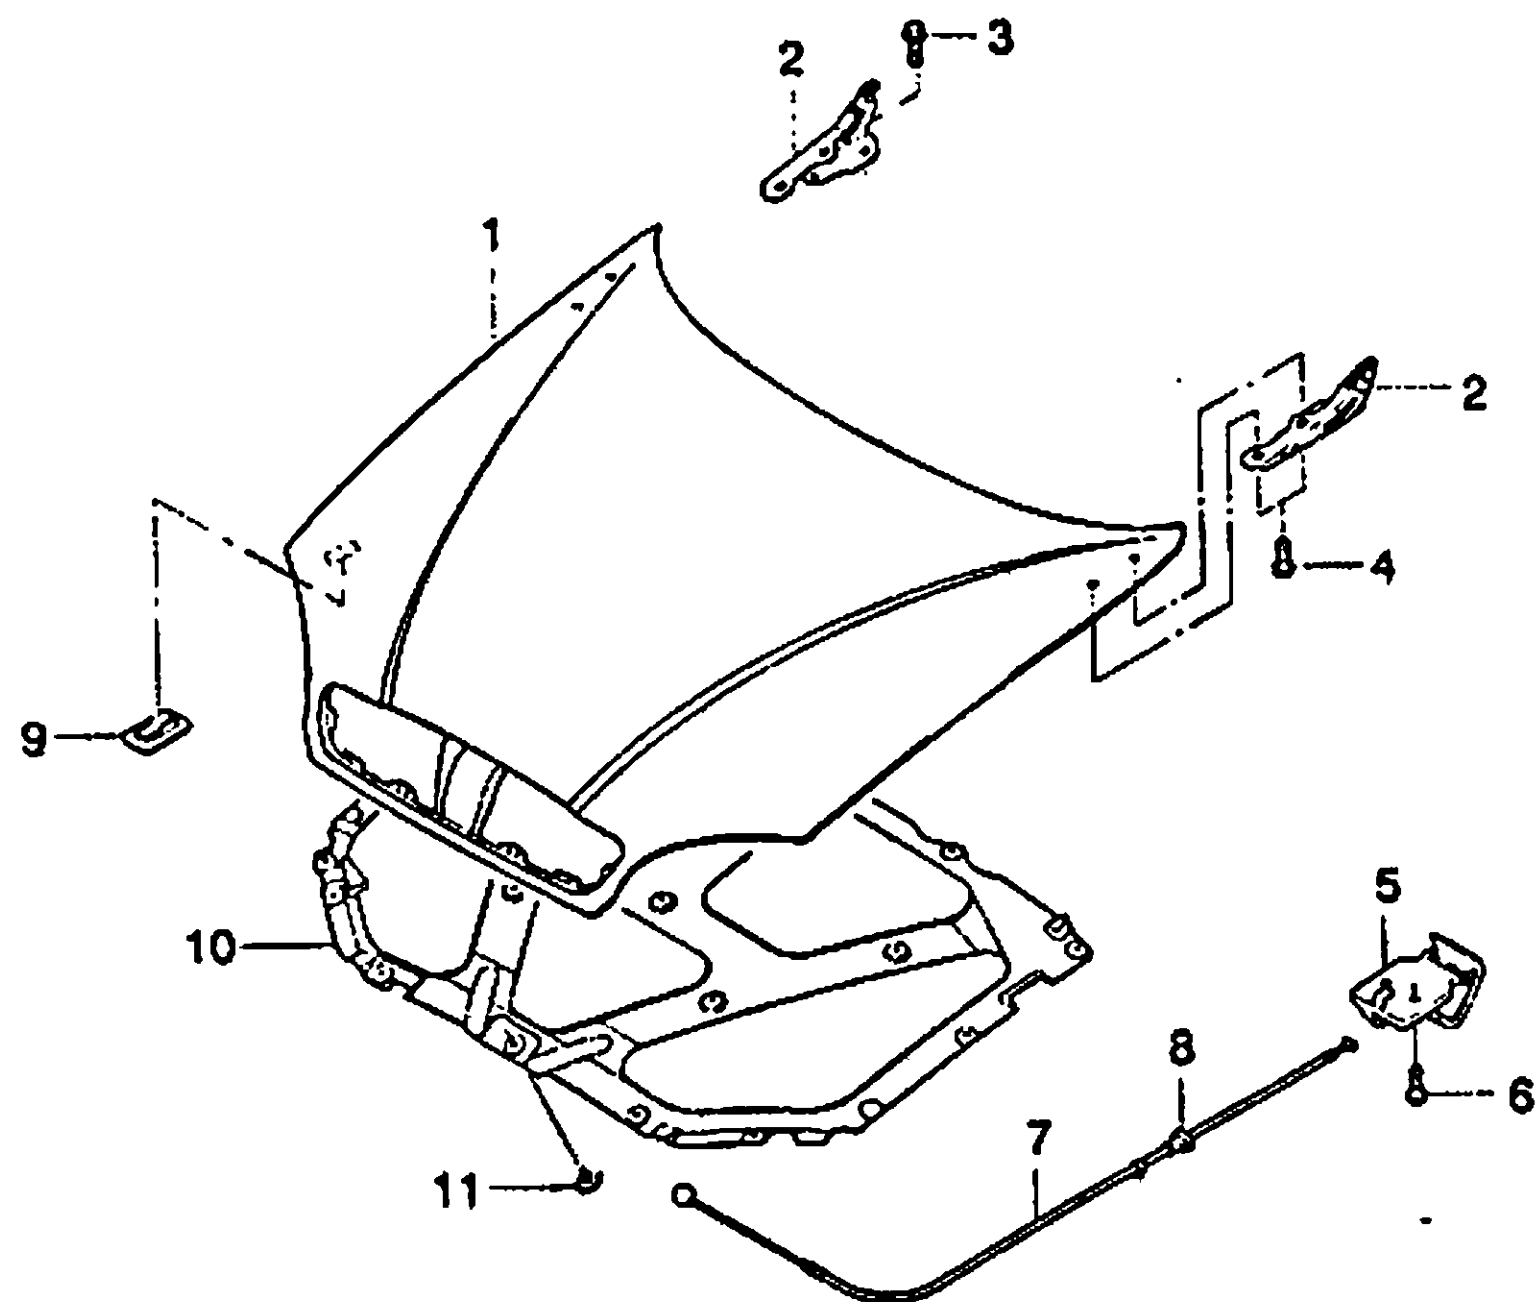


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01]	(E)PANEL A-HOOD (D)HAUBE,BLECH									(F)PANNEAU DE CAPOT (S)PANEL DEL CAPO					
	A96303303	.	.	B	B	B	S	S	S	&XCK	1	970502		HA		
O	A96255481	.	.	B	B	B	S	S	S	&XCK	1	970502				
	A96307013	.	.	B	B	B	A	A	A	&XCP	1	970502		HB		
O	A96255482	.	.	B	B	B	A	A	A	&XCP	1	970502				
	[02]	(E)HINGE A-HOOD (D)BESCHLAG,HAUBE									(F)CHARNIERE-CAPOT (S)BISAGRA					
	96303296	.	.	B	B	B	S	S	S		LH 1	970901				
	96255037	.	.	B	B	B	S	S	S	&XCK	LH 1	970901				
	96303296	.	.	B	B	B	A	A	A	&XCP	LH 1	970901				
	96304580	.	.	B	B	B	S	S	S		RH 1	970901				
	96255038	.	.	B	B	B	S	S	S	&XCK	RH 1	970901				
	96304580	.	.	B	B	B	A	A	A	&XCP	RH 1	970901				
	[03]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO					
	01127-08203	.	.	B	B	B	S	S	S		4					
	[04]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO					
	01127-08203	.	.	B	B	B	S	S	S		4					
	[05]	(E)LEVER A-HOOD RELEASE (D)HEBEL									(F)LEVIER (S)PALANCA					
	96236189	.	.	B	B	B	S	S	S		1		INCL #7,8	NS		
	[06]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	03151-48165	.	.	B	B	B	S	S	S		2					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

6110 HOOD PANEL


5C08

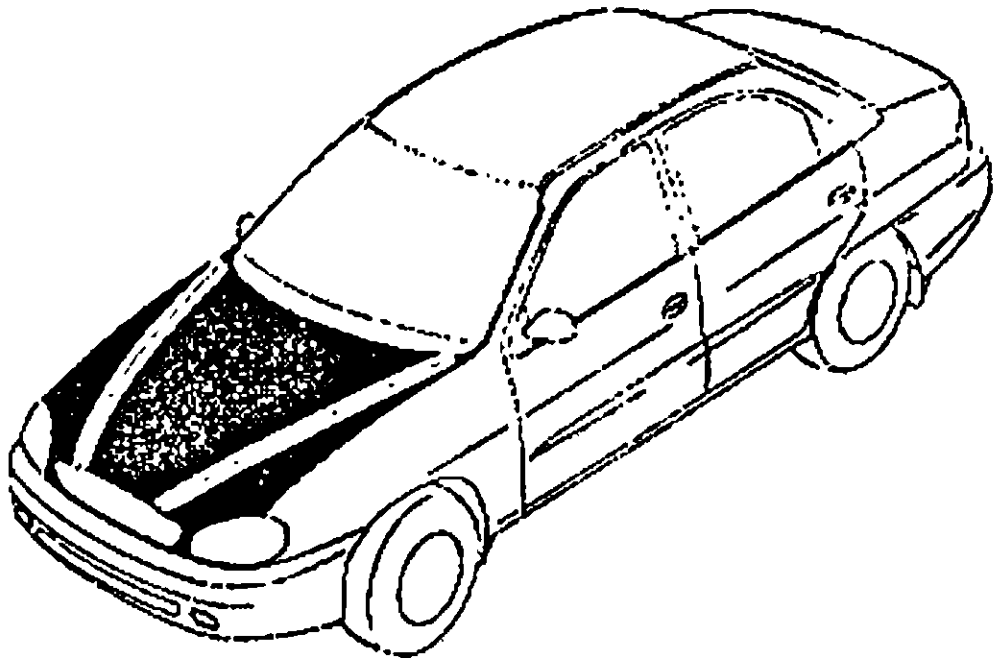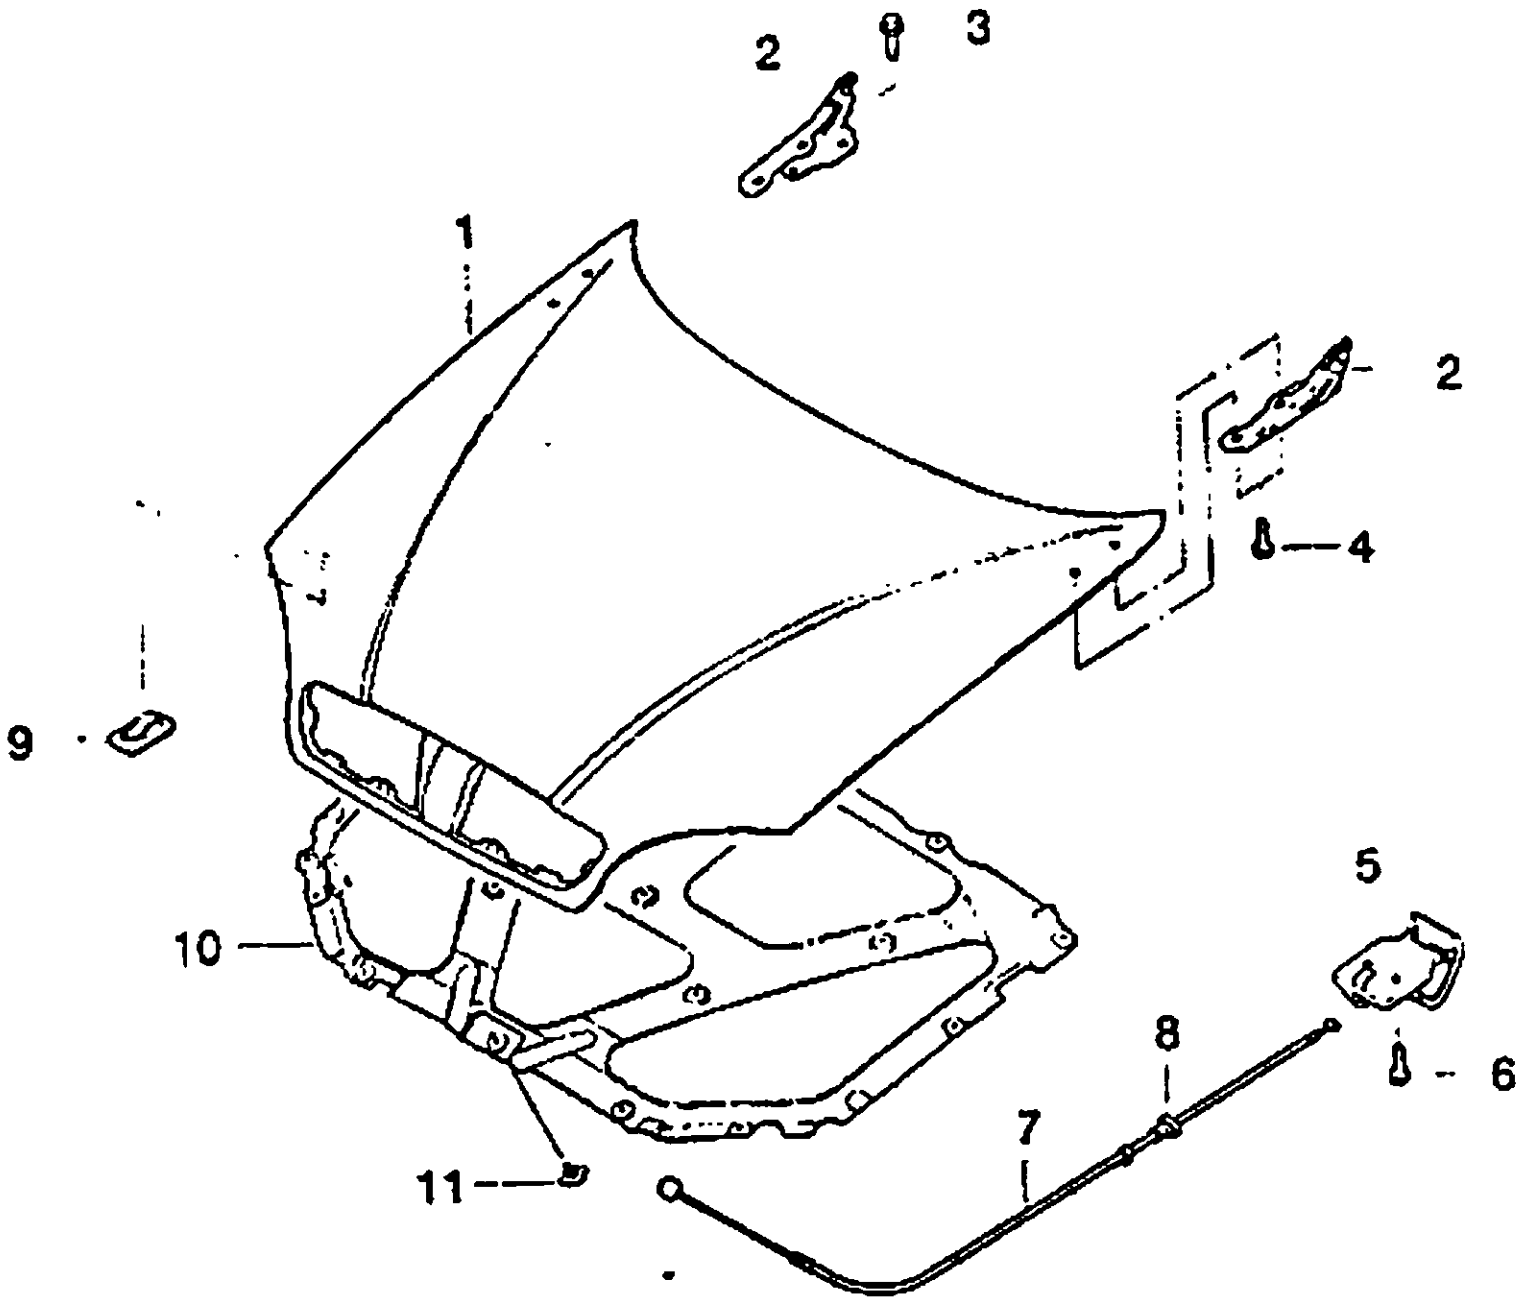


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S S								S S S	S S S
	[07]	(E)CABLE A-HOOD RELEASE (D)KABEL,HAUBE BOGEN									(F)CABLE-BOWDEN DE CAPOT (S)CABLE-CAPO BOWDEN					
	96303301	.	.	B	B	B	S	S	S		1		INCL #8			
	[08]	(E)GROMMET (D)ÖSE									(F)VIROLE (S)AISLANTE					
	96222846	.	.	B	B	B	S	S	S		1					
	[09]	(E)SEAT-HOOD HOLD OPEN ROD (D)SITZ,ÖFFNUNGS-STANGE									(F)SIEGE (S)ASIENTO					
	90149859	.	.	B	B	B	S	S	S		1					
	[10]	(E)INSULATION-HOOD (D)ISOLIERUNG									(F)ISOLATION (S)AISLAMIENTO					
	96254519	6	.	B	B	B	.	.	O	-2G3	1			TZ		
	96252558	6	.	B	B	B	.	.	A	&2G3	1			TV		
	[11]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	09409-06328	6	.	B	B	B	.	.	O		17					
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE										
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK										

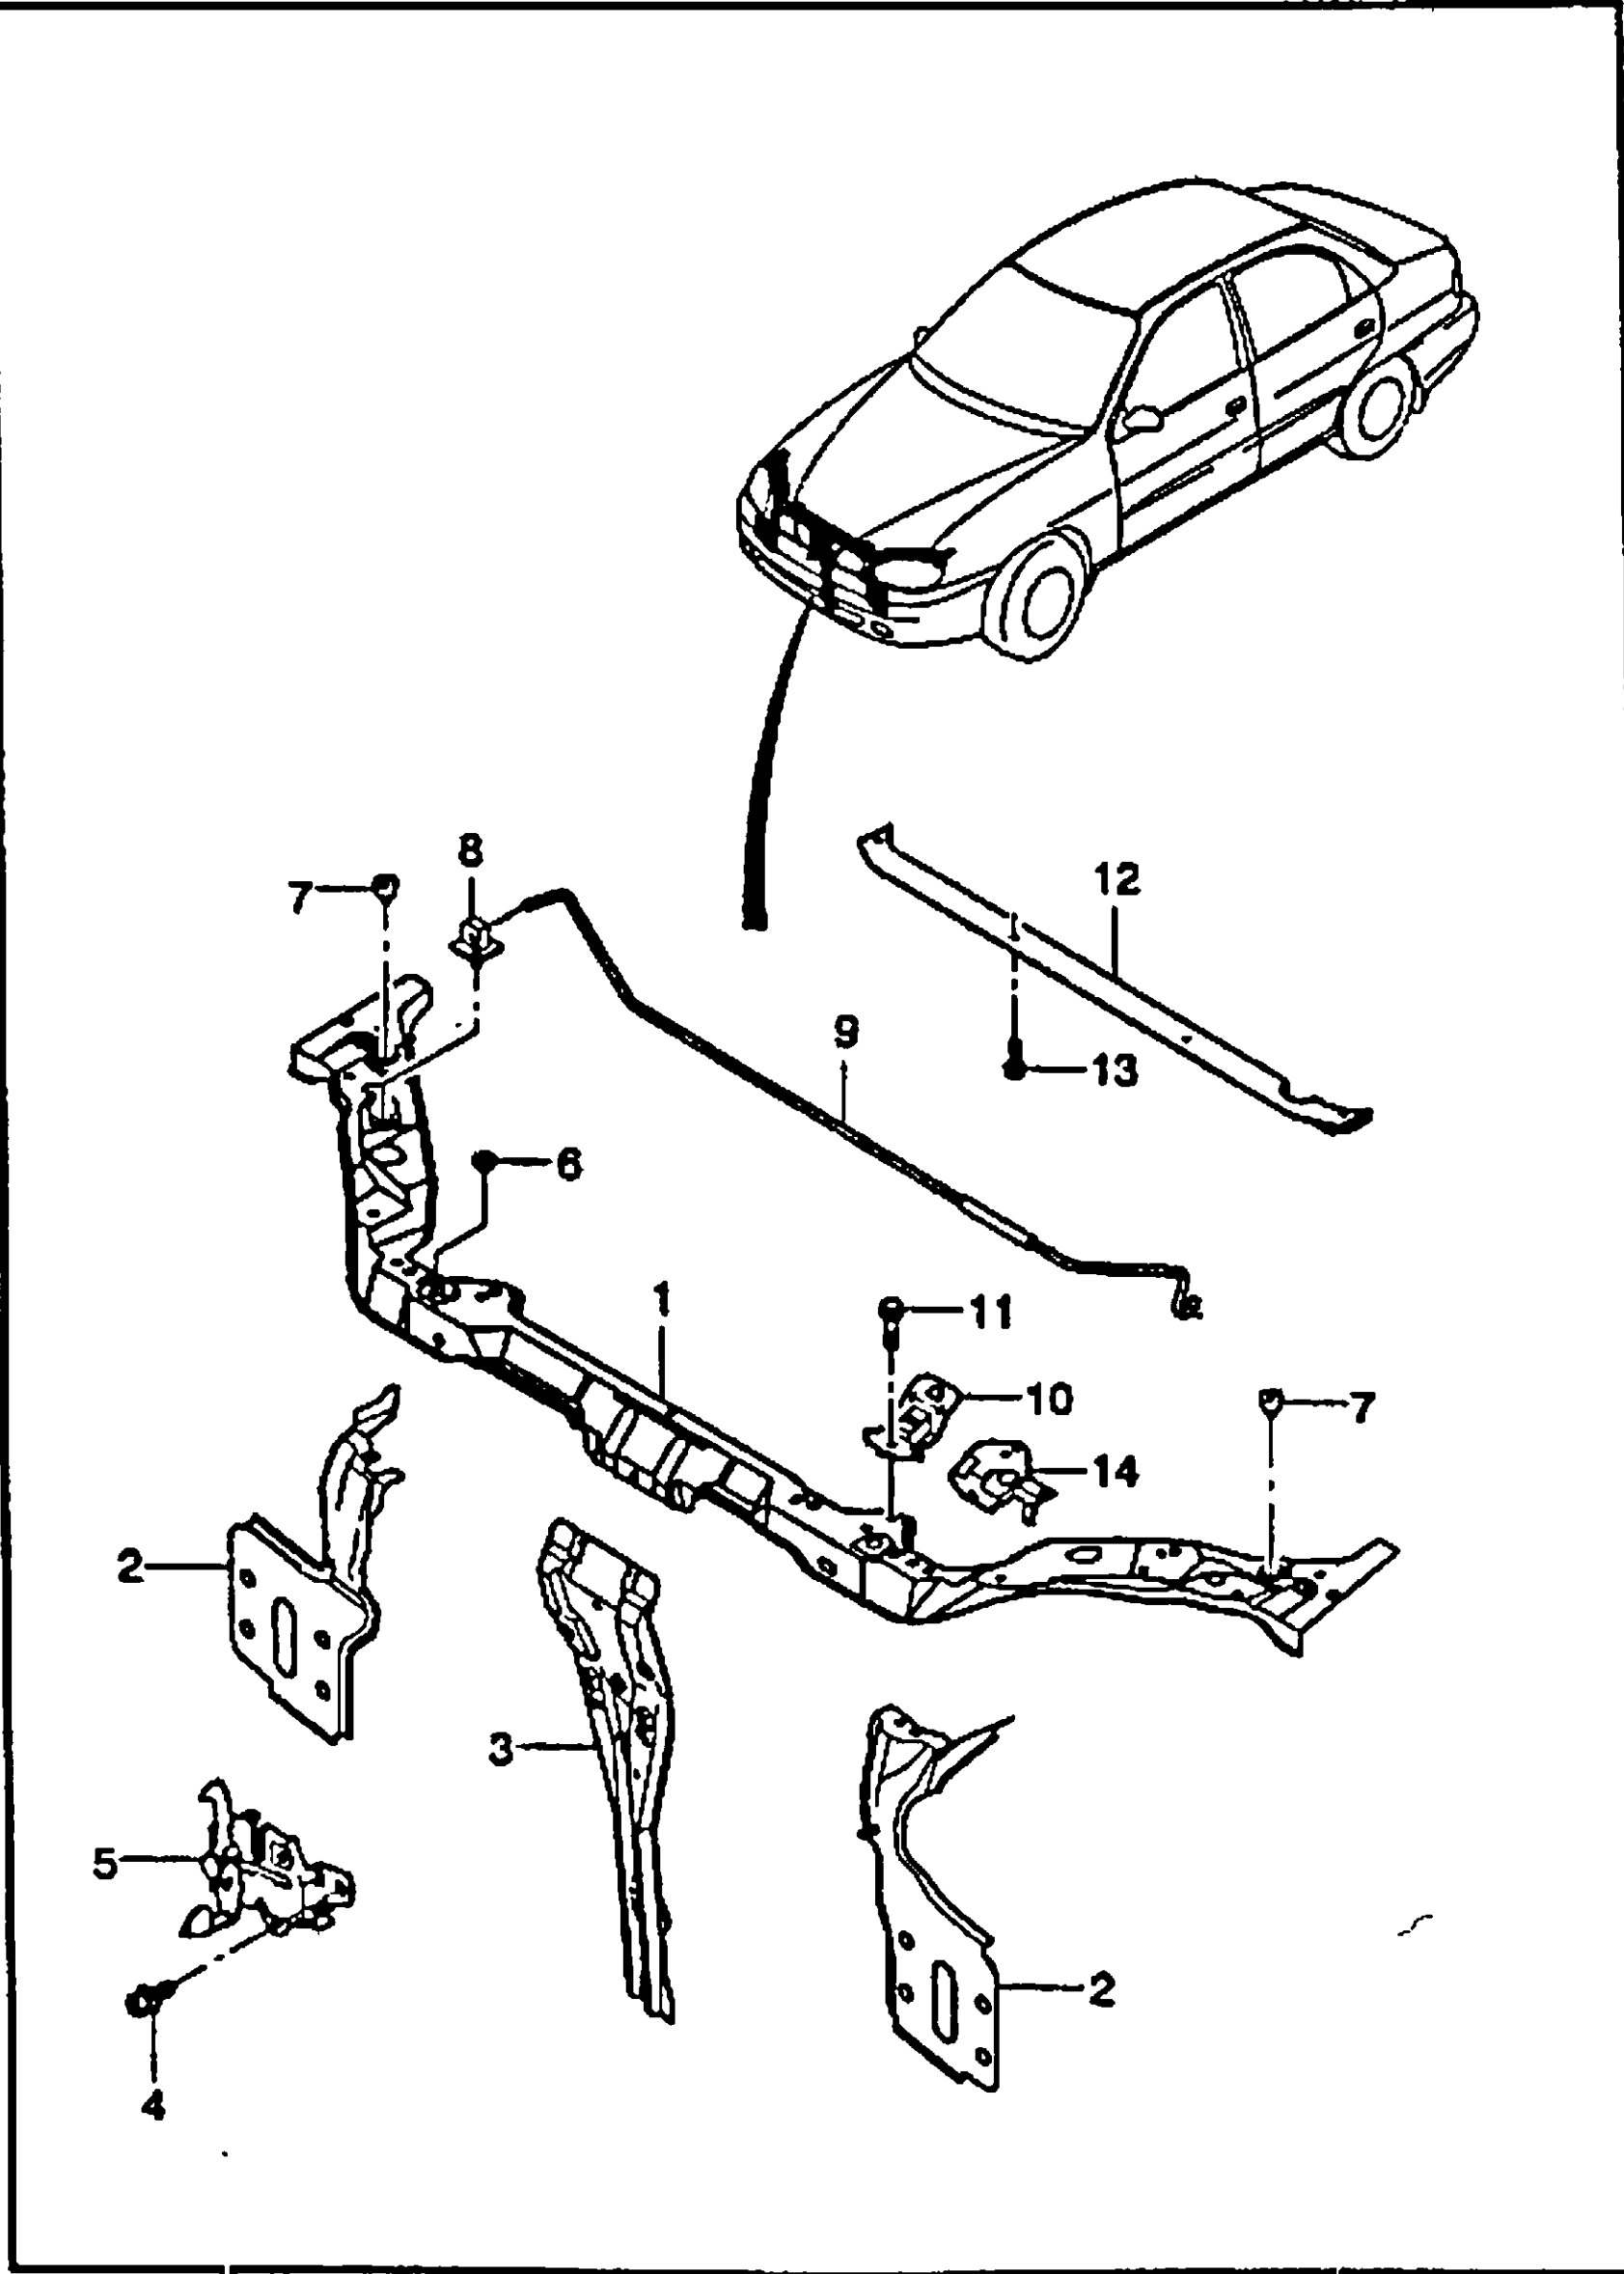


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01] 96303597	(E)PANEL A-FRONT,UPPER (D)VERKLEIDUNG,VORNE									(F)PANNEAU-AVANT (S)PANEL-FRENTE					
	[02] 96216195	(E)PANEL A-FRONT,SIDE (D)VERKLEIDUNG,VORNE									(F)PANNEAU-AVANT (S)PANEL-FRENTE					
	96216196															
	[03] 96303601	(E)SUPPORT A-FRONT PANEL (D)TRÄGER,VERKLEIDUNGSBLECH									(F)SUPPORT (S)SOPORTE					
	[04] 09118-06001	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO					
	[05] 96303295	(E)LATCH A-HOOD (D)VERSCHLUS,HAUBE-VERSCHLU									(F)LOQUET-VERROU DE CAPOT (S)PESTILLO					
	[06] 96245706	(E)BUMPER-HOOD,FRONT (D)STOBSTANGE,HAUBE,VORNE									(F)PARE-CHOC-CAPOT,AVANT (S)TOPE-CAPO,FRENTE					
	[07] 96169594	(E)BUMPER (D)STOBSTANGE									(F)PARE-CHOC (S)PARACHOQUES					
	[08] 96165268	(E)PIVOT A-SUPPORT HOOD (D)DREHTREIL,TRÄGERWELLE									(F)PIVOT-TRINGLE DE SUPPORT (S)PIVOTE-VARA DE APOYO					
	[09] 96233432	(E)ROD A-HOOD HOLD OPEN (D)STAB,HAUBE ÖFFNUNGS									(F)TRINGLE (S)VARILLA					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

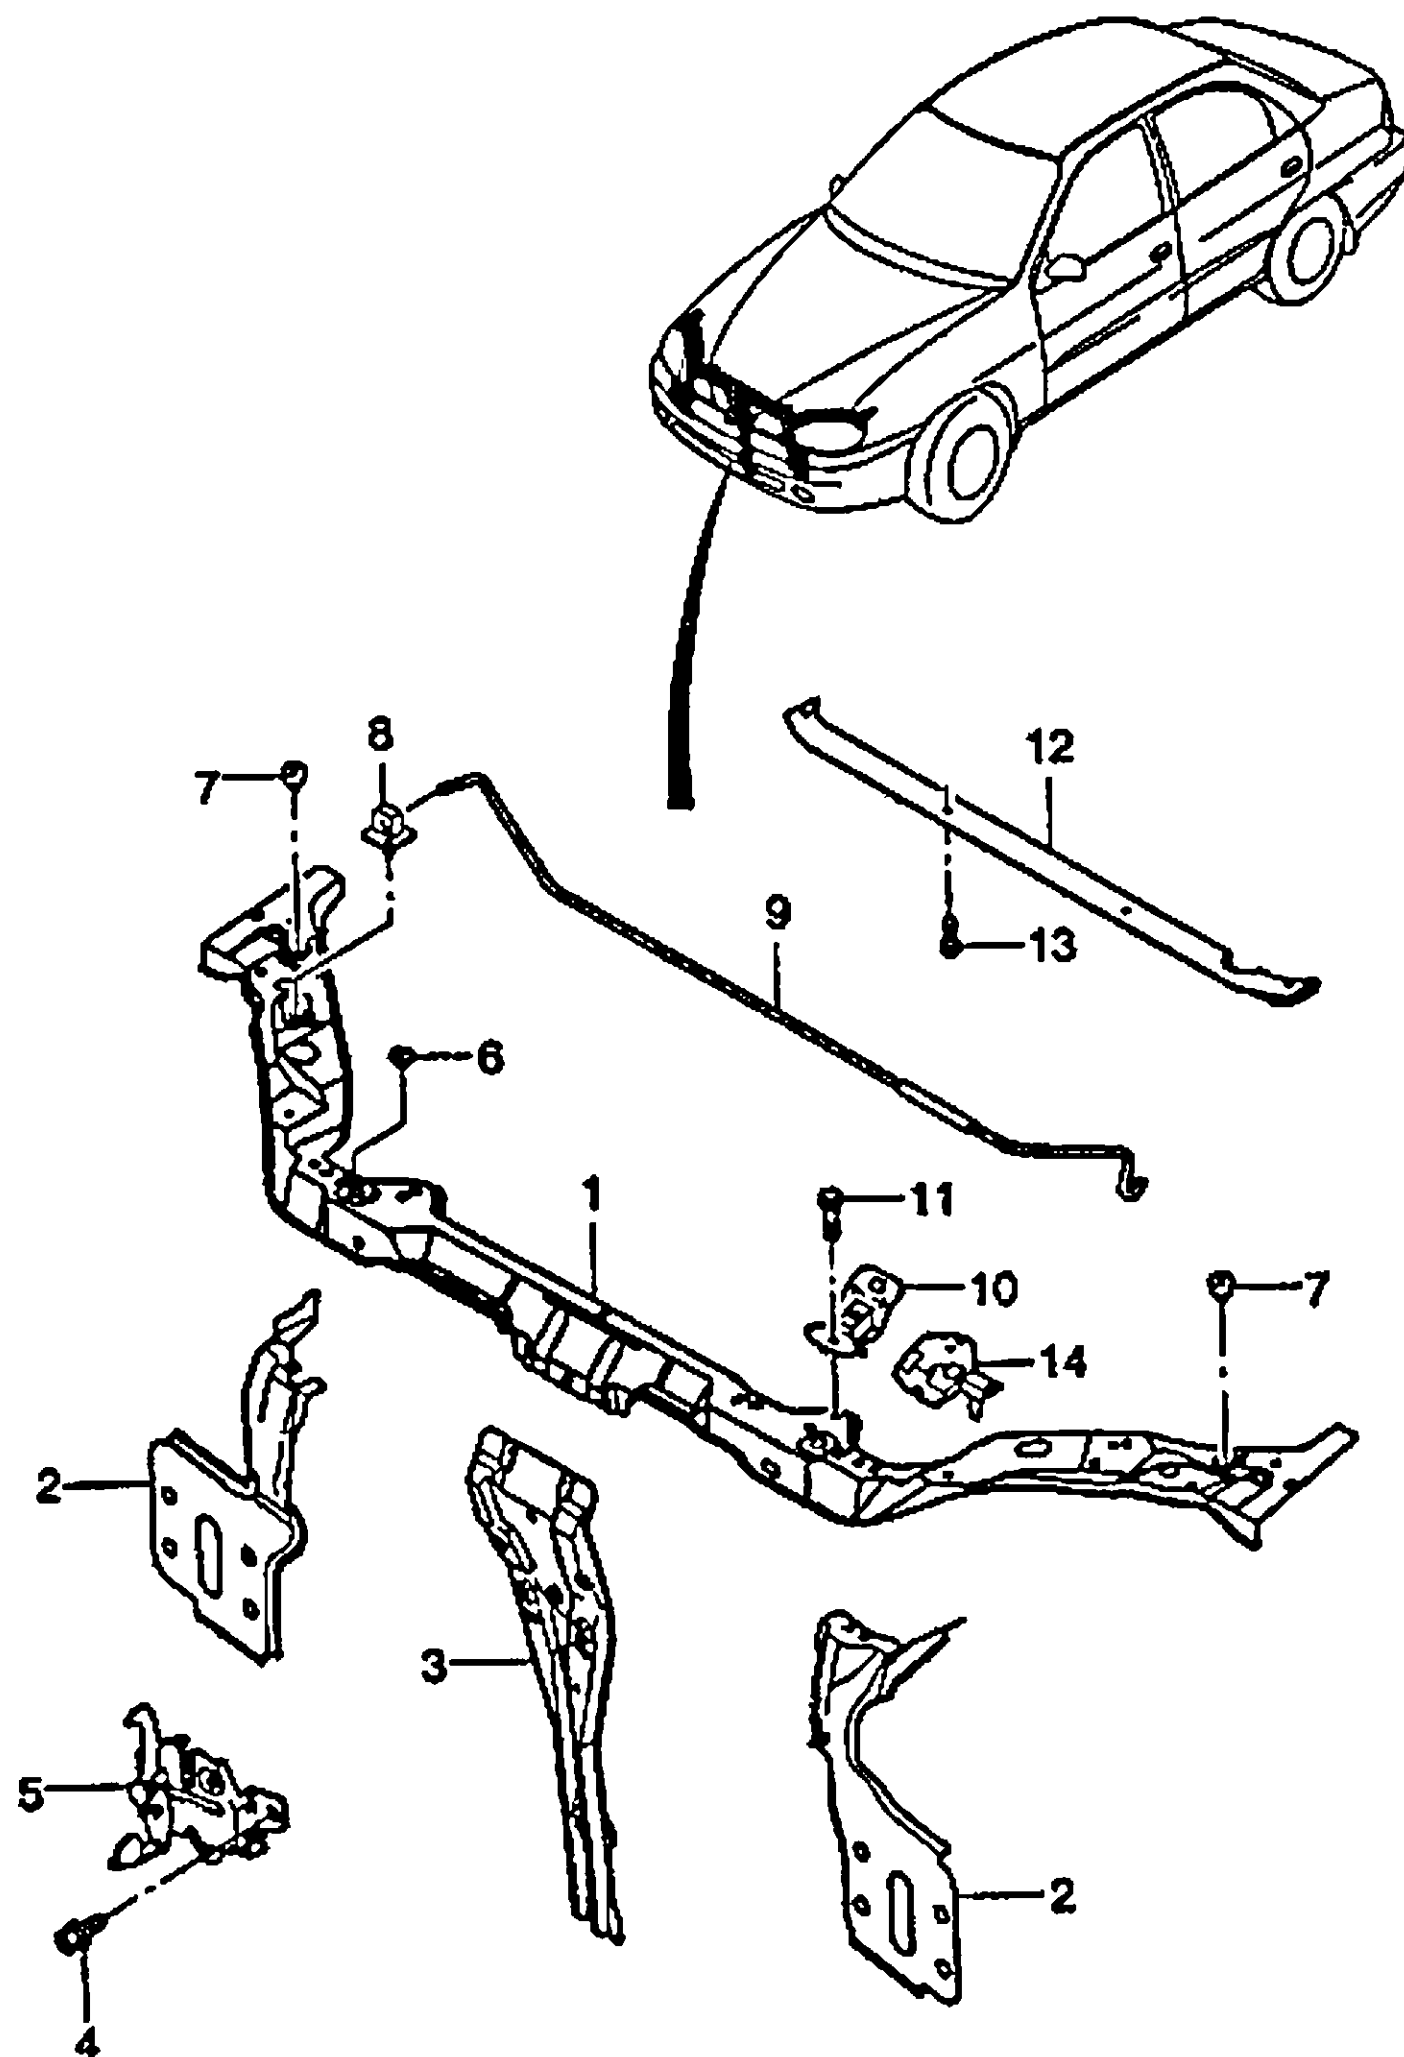


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[10] 96233191	(E)BRACKET A-HOOD ROD (D)TRÄGER, OFFNUNGSSTANGE			B	B	B	S	S	S			(F)SUPPORT (S)SOPORTE-VARA 1			
	[11] 09118-06002	(E)BOLT (D)SCHRAUBE			B	B	B	S	S	S			(F)BOULON (S)PERNO 1	W WASHER		
	[12] 96216960	(E)AIR DAM-FRONT (D)LUFTSPERRE, VORNE			B	B	B	S	S	S			(F)BARRAGE AIR-AVANT (S)PRESA DE AIRE-FRENTE 1			
	[13] 03152-63162	(E)SCREW-TAPPING (D)SCHRAUBE			B	B	B	S	S	S			(F)VIS (S)TORNILLO 4			
	[14] 96235371	(E)REINF A-HOOD ROD BRACKET (D)VERSTÄRKUNG			B	B	B	S	S	S			(F)RENFORCEMENT (S)REFUERZO 1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

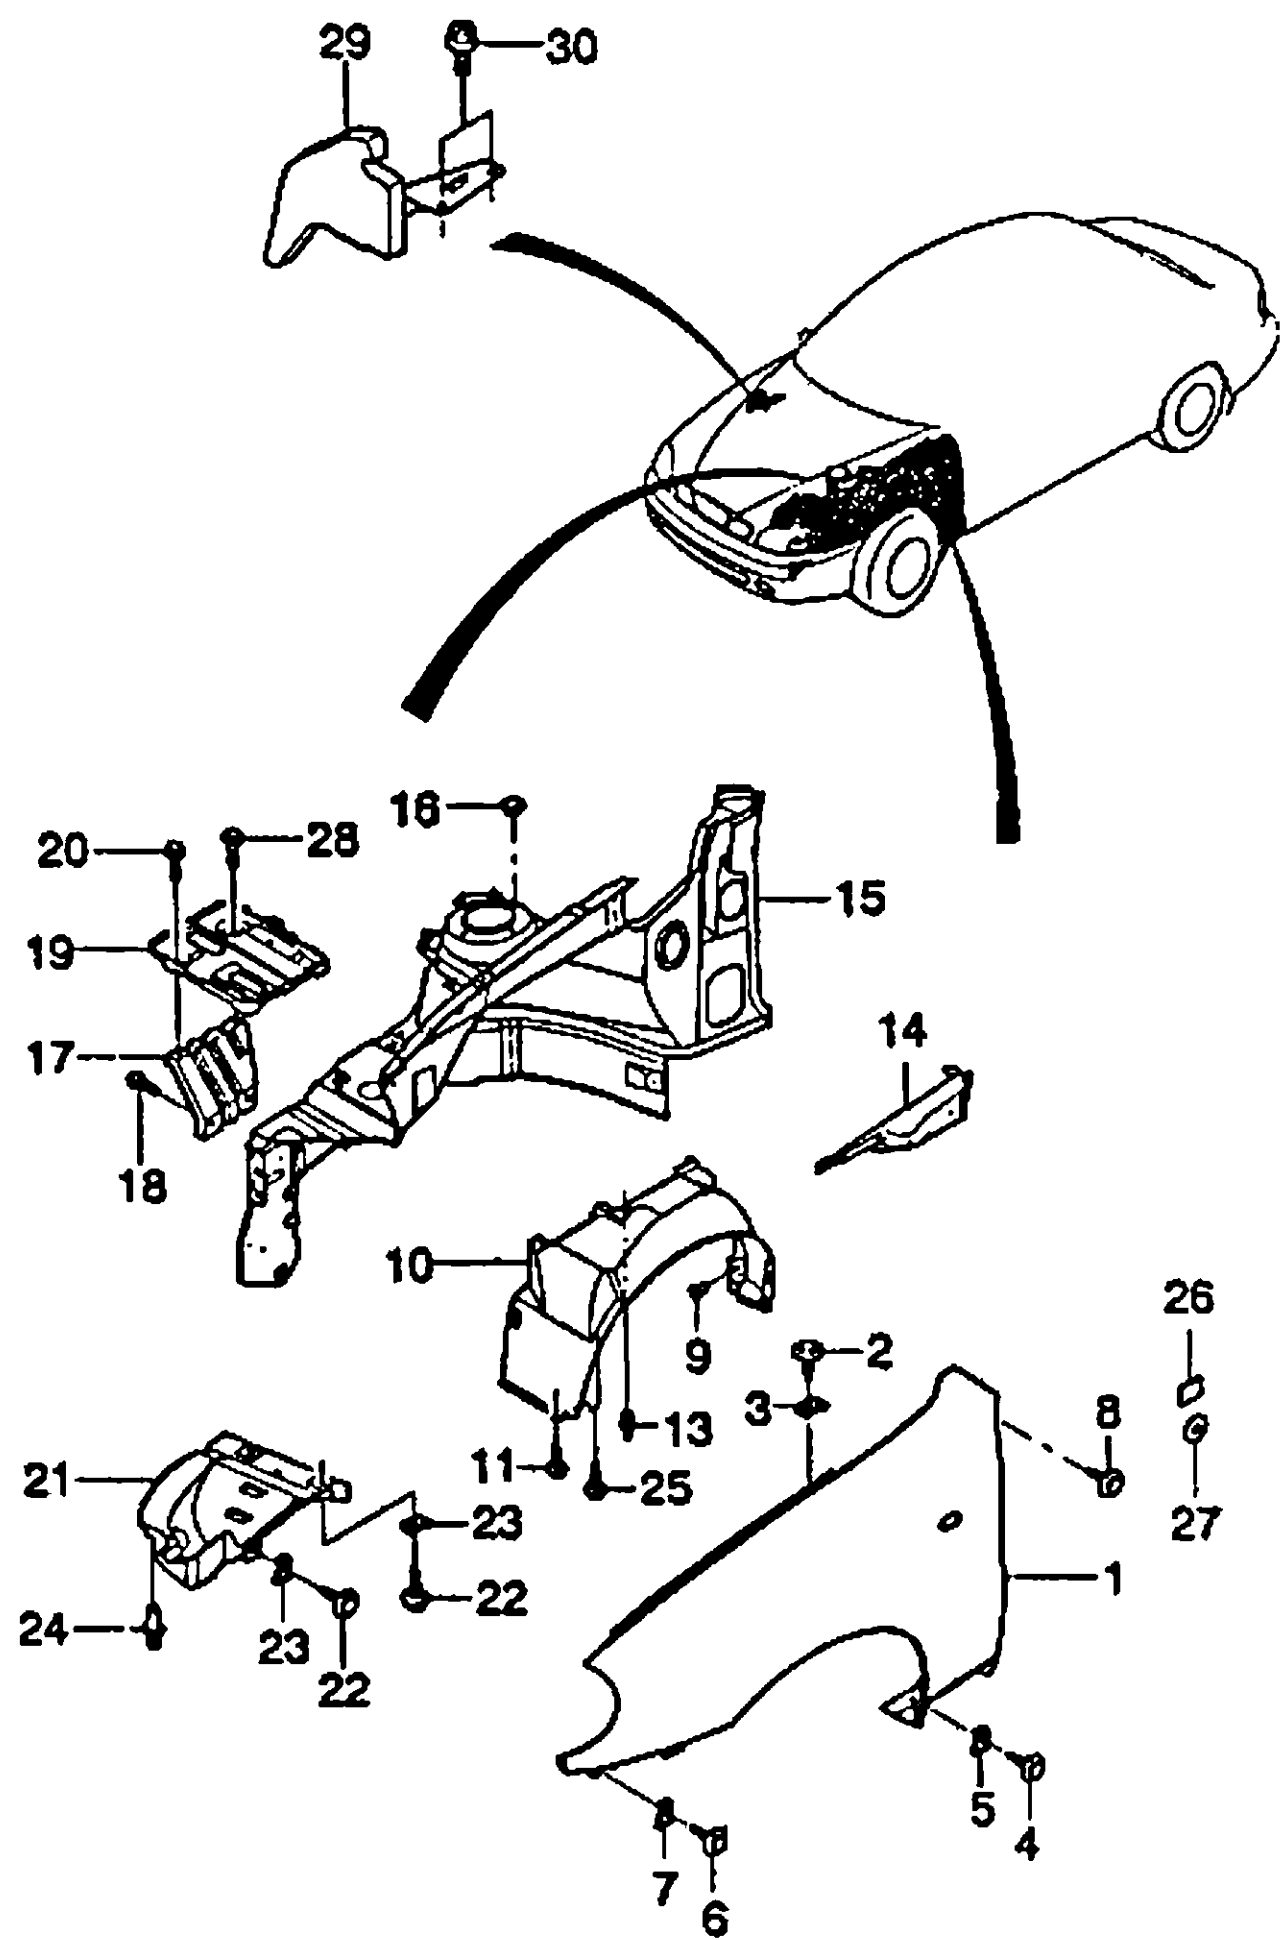


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)PANEL A-FENDER (D)VERKLEIDUNG,KOTFLÜGEL									(F)PANNEAU-GARDE-BOUE (S)ALETA DEL.					
	A96303294	.	.	B	B	B	S	S	S	&XCK-FL6	LH	1		FA		
	A96304579	.	.	B	B	B	S	S	S	&XCK-FL6	RH	1		FN		
	A96220732	.	.	B	B	B	A	A	A	&FL6&XCK	LH	1		FC		
	A96220733	.	.	B	B	B	A	A	A	&FL6&XCK	RH	1		FQ		
	A96221072	.	.	B	B	B	A	A	A	&FL6&XCP	LH	1		FD		
	A96221073	.	.	B	B	B	A	A	A	&FL6&XCP	RH	1		FR		
	[02]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	09139-06006	.	.	B	B	B	S	S	S			8				
	[03]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA					
	09148-06019	.	.	B	B	B	S	S	S			8				
	[04]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	09139-06006	.	.	B	B	B	S	S	S			4				
	[05]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA					
	09148-06019	.	.	B	B	B	S	S	S			4				
	[06]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	09139-06006	.	.	B	B	B	S	S	S			4				
	[07]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA					
	09148-06019	.	.	B	B	B	S	S	S			4				
	[08]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

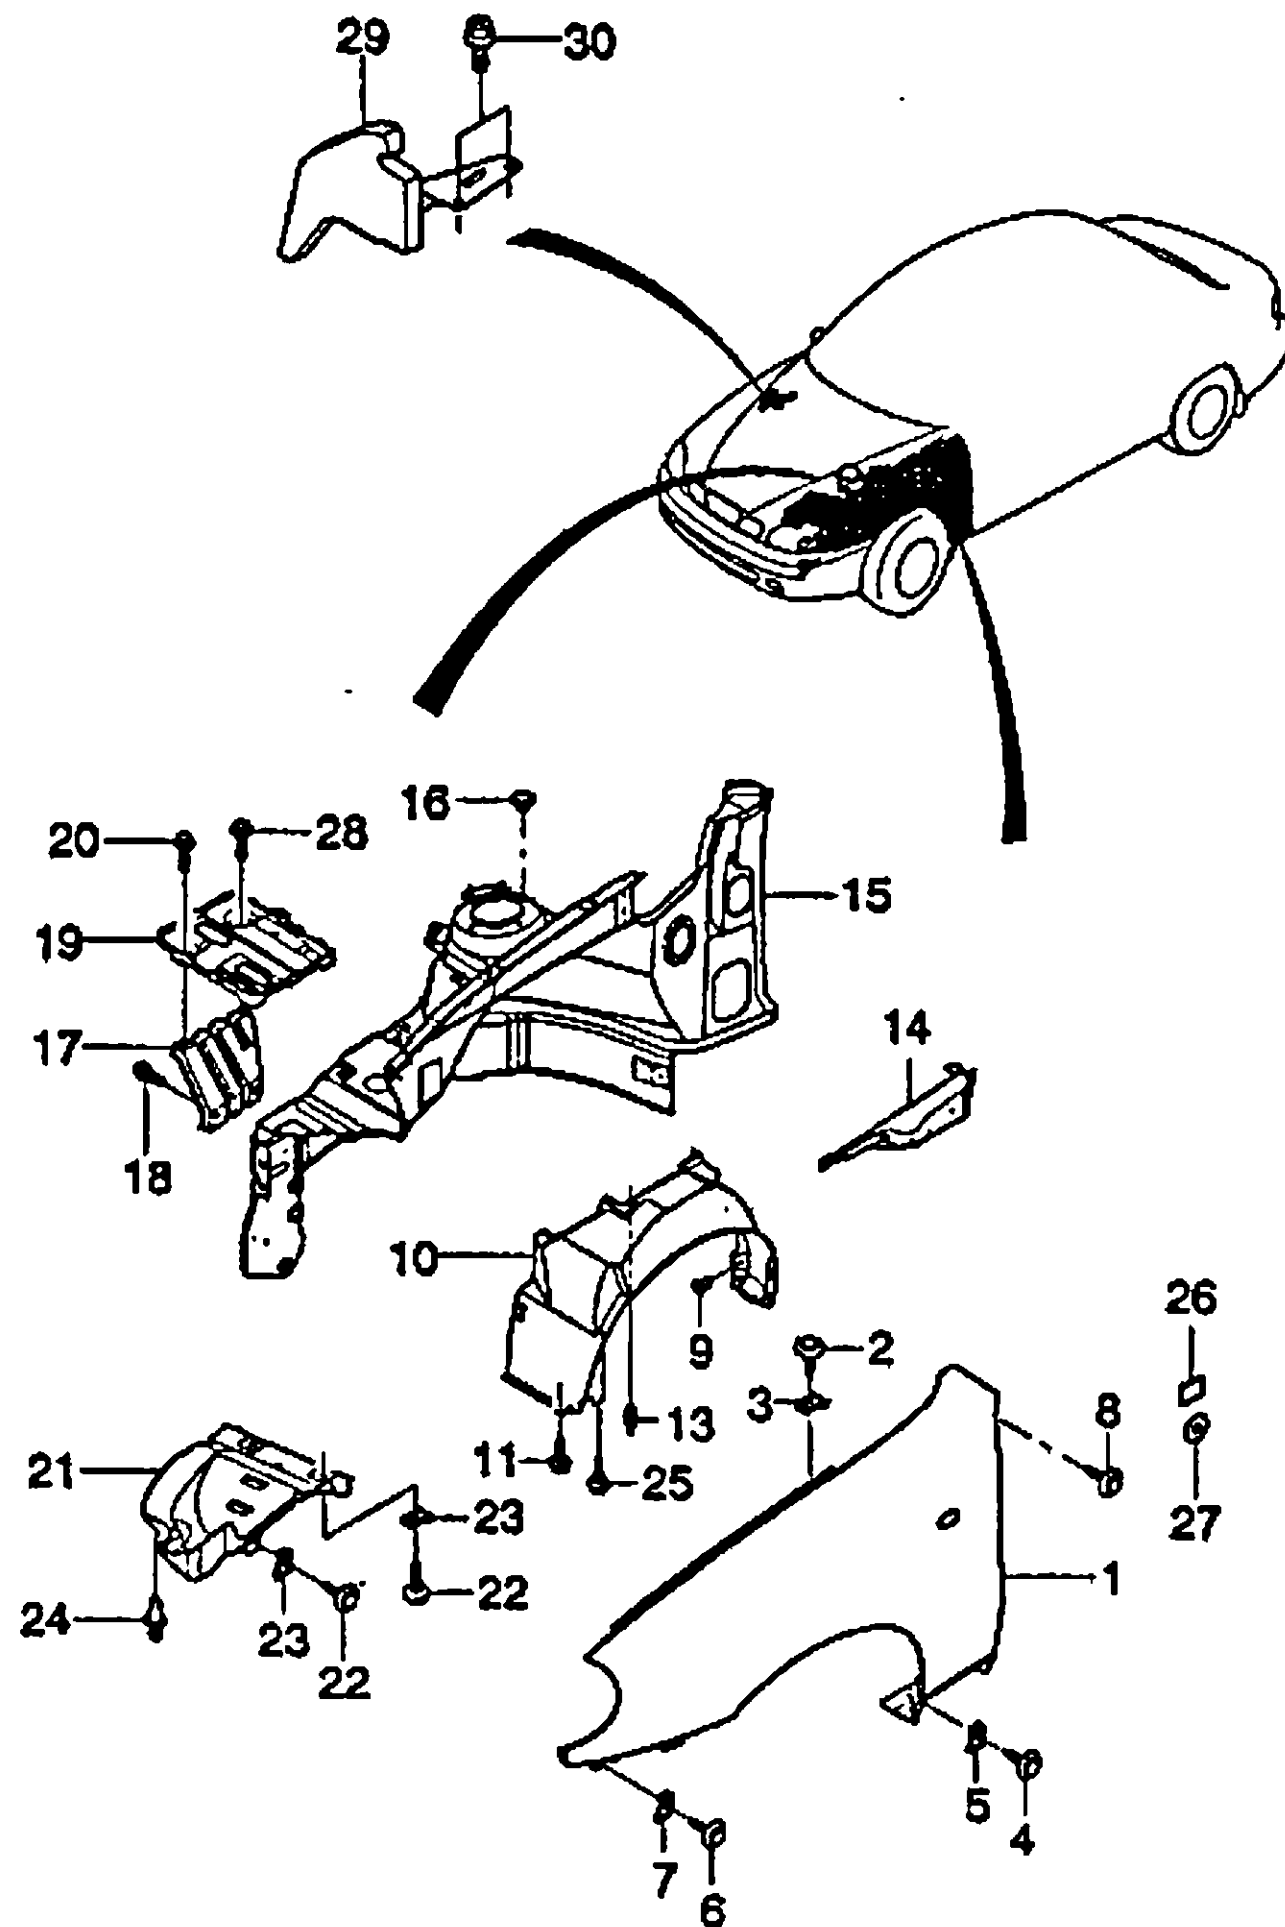


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	09139-06006 [09]	. .	B	B	B	S	S	S			2 (F)ECROU (S)TUERCA					
	09159-06006 [10]	. .	B	B	B	S	S	S			2 (F)GARNITURE-GARDE-BOUE (S)REVESTIMIENTO-GUARDAFANGO					
	96242551	. .	B	B	B	S	S	S			LH 1					
	96242552 [11]	. .	B	B	B	S	S	S			RH 1 (F)VIS (S)TORNILLO					
	09136-04005 [13]	. .	B	B	B	S	S	S			2 (F)ATTACHE (S)GRAPA					
	09409-07303 [14]	. .	B	B	B	S	S	S			8 (F)SUPPORT-TIMONERIE (S)REFUERZO-TIMONERA					
	96306384	. .	B	B	B	S	S	S			LH 1			HB		
	96306385 [15]	. .	B	B	B	S	S	S			RH 1 (F)PANNEAU-TIMONERIE AVANT (S)PANEL-VOLANTE DELANTERO			H2		
	96304491	. .	B	B	B	S	S	S			LH 1			WB		
	96250659	. .	B	B	B	S	S	S			RH 1	970604		W2		
Y	96252573 [16]	. .	B	B	B	S	S	S			RH 1 970604 (F)BOUCHON (S)TAPON			W3		
	09250-10001 [17]	. .	B	B	B	S	S	S			2 (F)SUPPORT (S)SOPORTE					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

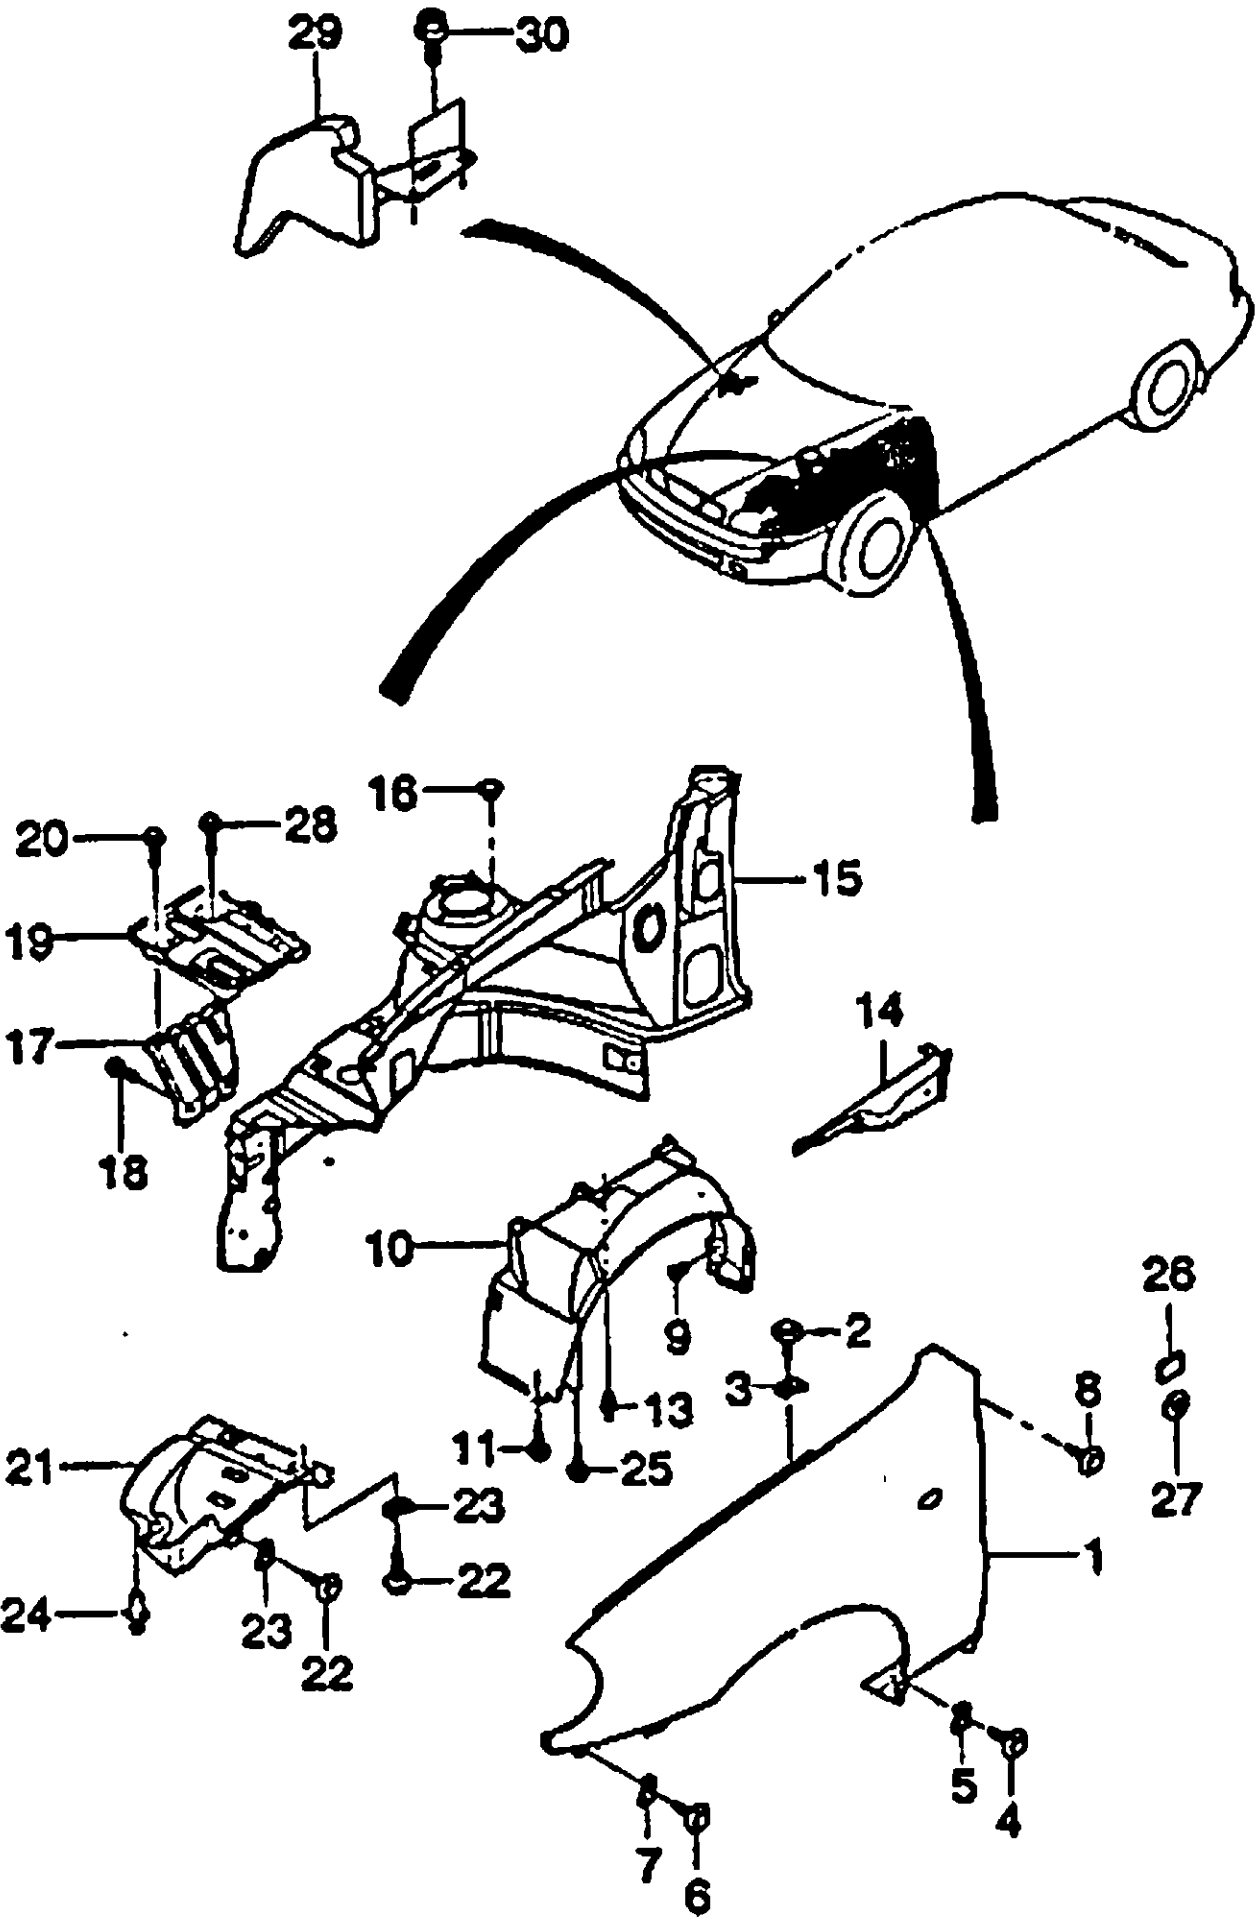

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	96226880	.	.	B	B	B	S	S	S		1					
	[18]										(F)BOULON					
											(S)PERNO					
	02860-08203	.	.	B	B	B	S	S	S		2		970509			
Y	01517-08163	.	.	B	B	B	S	S	S		2		970509			
	[19]										(F)PLATEAU-BATTERIE					
											(S)BANDEJA-BATERIA					
	96242192	.	.	B	B	B	S	S	S		1					
	[20]										(F)BOULON					
											(S)PERNO					
	02860-08203	.	.	B	B	B	S	S	S		1		970509			
Y	01517-08163	.	.	B	B	B	S	S	S		1		970509			
	[21]										(F)GARDE					
											(S)PROTECTOR					
	96251301	.	.	B	B	B	S	S	S		1					
	[22]										(F)VIS					
											(S)TORNILLO					
	09136-04005	.	.	B	B	B	S	S	S		3		970804			
Y	09136-04013	.	.	B	B	B	S	S	S		3		970804			
	[23]										(F)ECROU					
											(S)TUERCA					
	09148-04010	.	.	B	B	B	S	S	S		3					
	[24]										(F)CROCHET					
											(S)PERCHA					
	09410-00100	.	.	B	B	B	S	S	S		1					
	[25]										(F)VIS					
											(S)TORNILLO					
	09136-04005	.	.	B	B	B	S	S	S		4		970804			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

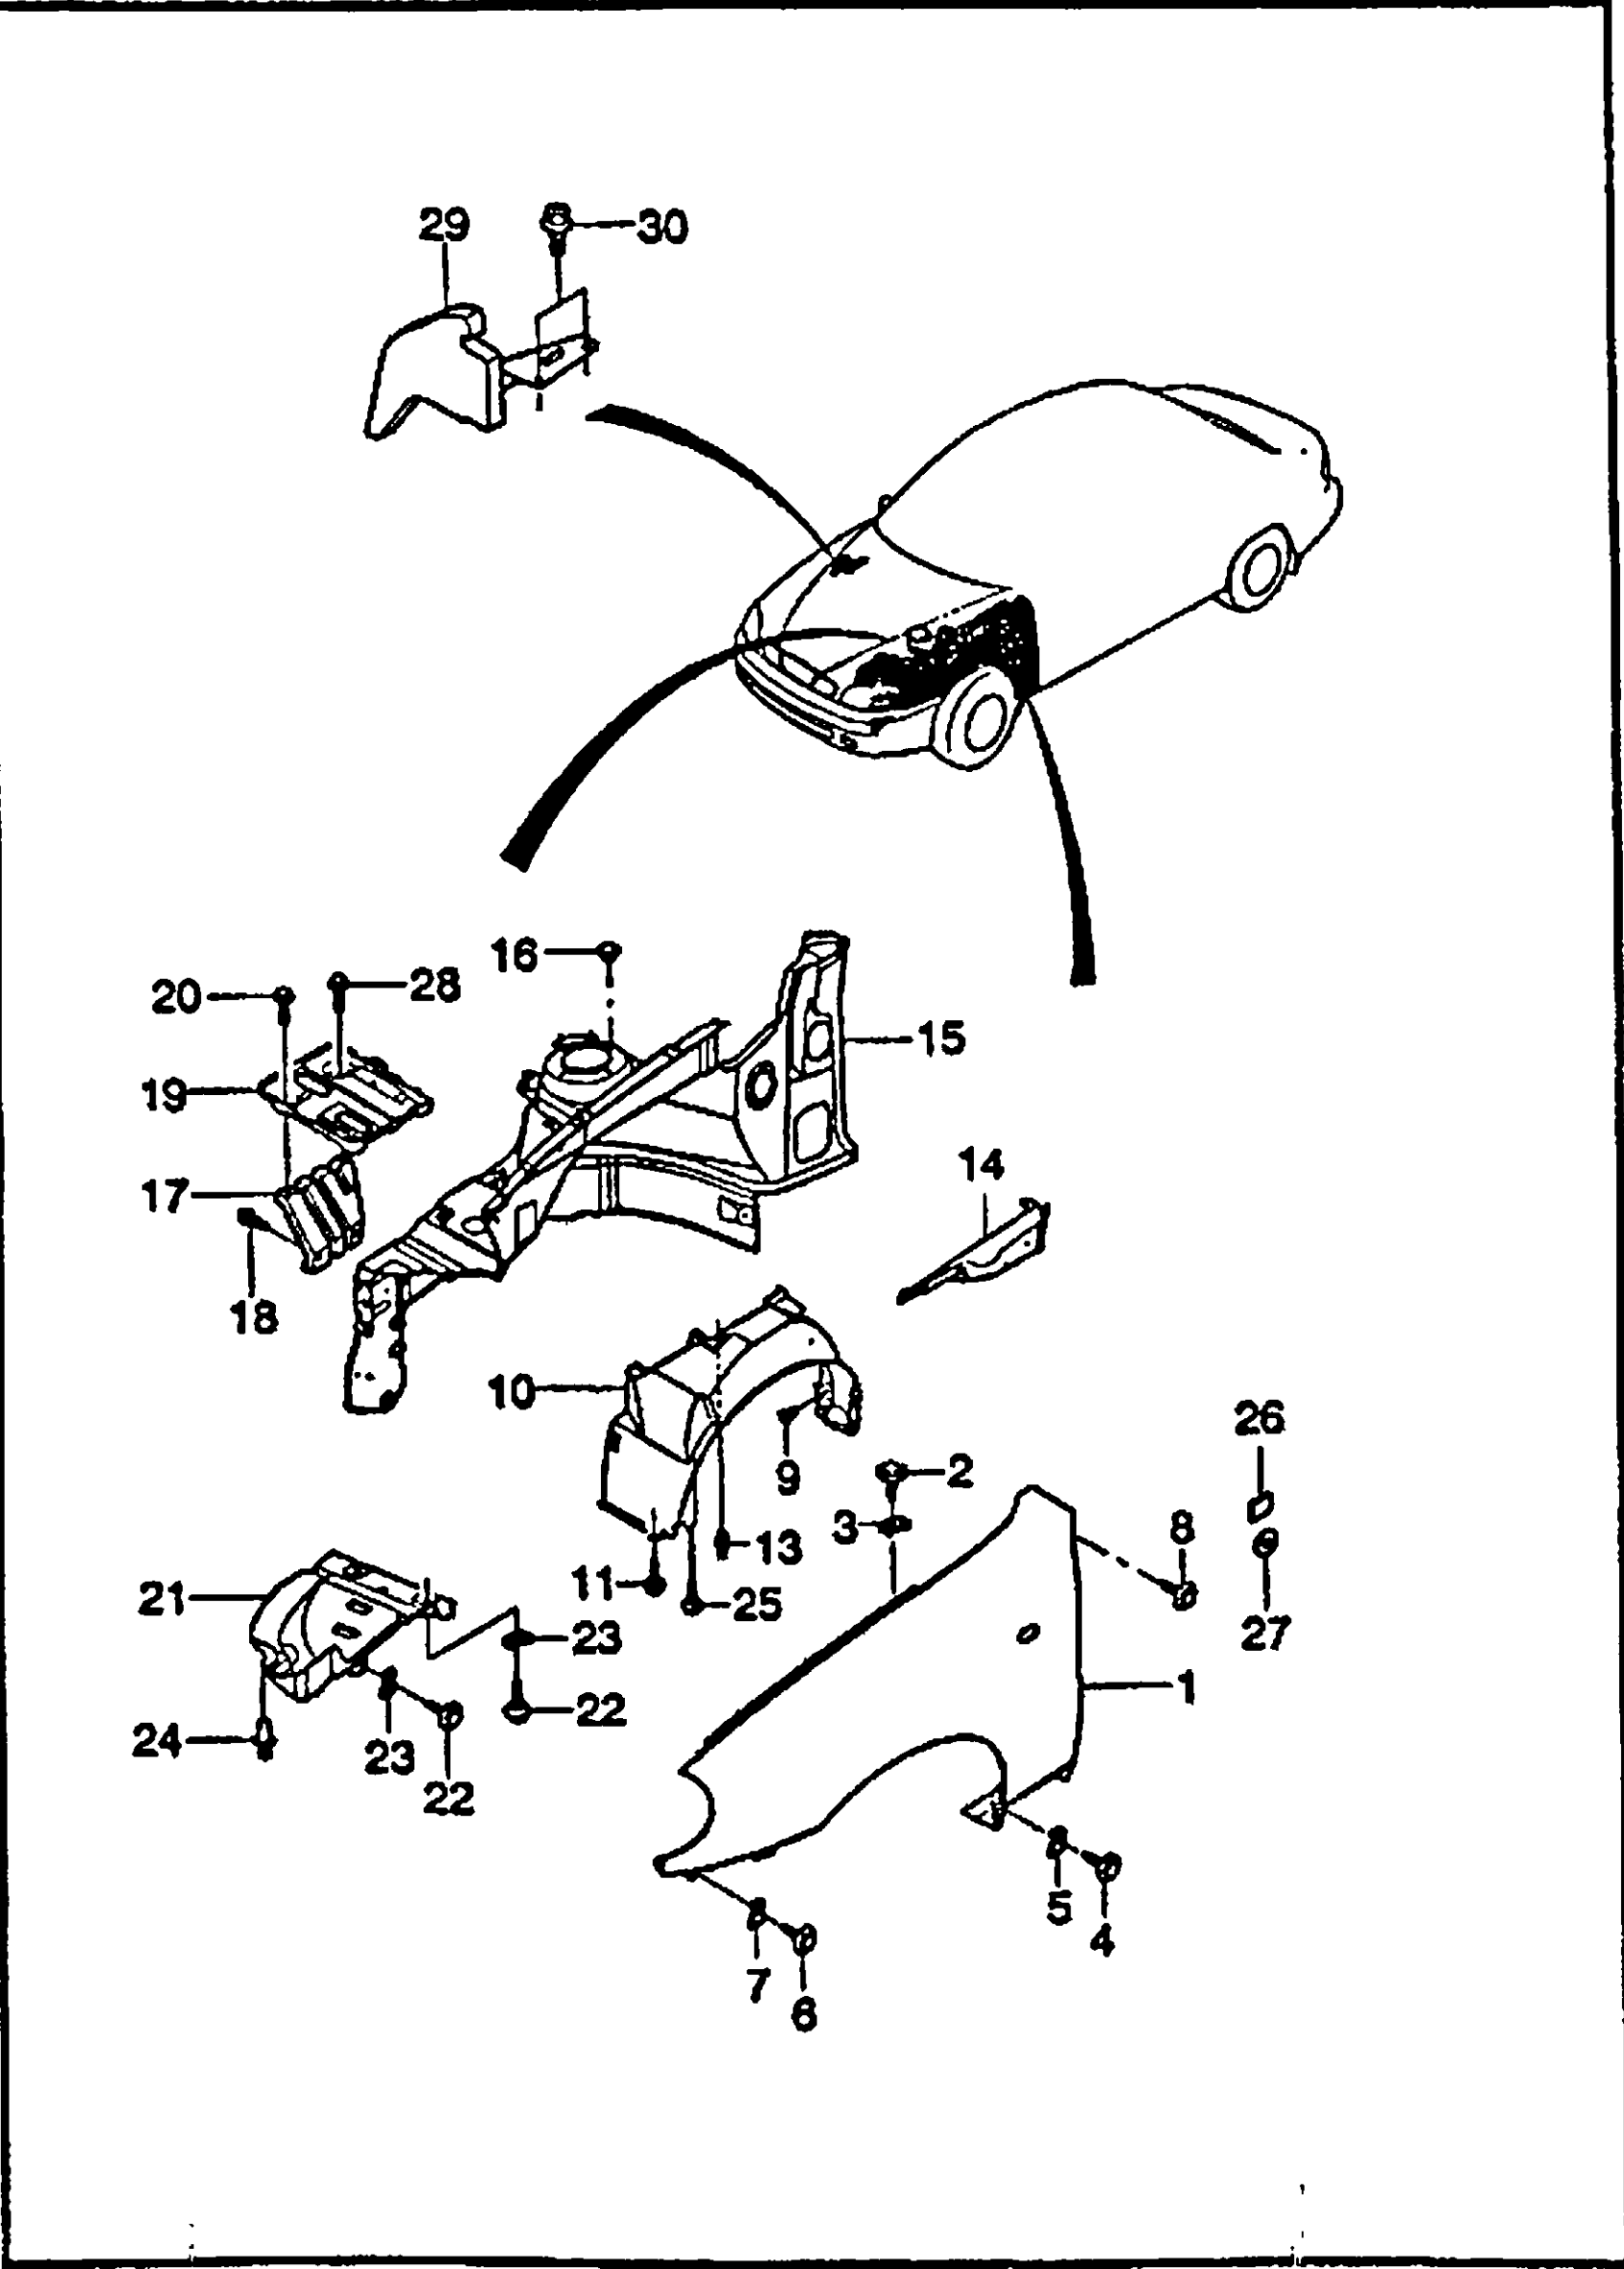


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N H	3 H	5 H	S S								S S
Y 09136-04013	[26]	.	.	B	B	B	S	S	S		4	970804			
													(F)JOINT		
													(S)SELLO		
96238376	[27]	.	.	B	B	B	S	S	S		2				
													(F)JOINT		
													(S)SELLO		
96245279	[28]	.	.	B	B	B	S	S	S		2				
													(F)BOULON		
													(S)PERNO		
01517-08162	[29]	.	.	B	B	B	S	S	S		3				
													(F)ISOLATION		
													(S)AISLAMIENTO		
96247387	[30]	.	.	B	B	B	S	S	S		1				
													(F)BOULON		
													(S)PERNO		
09116-06024		.	.	B	B	B	S	S	S		2		W	WASHER	
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							


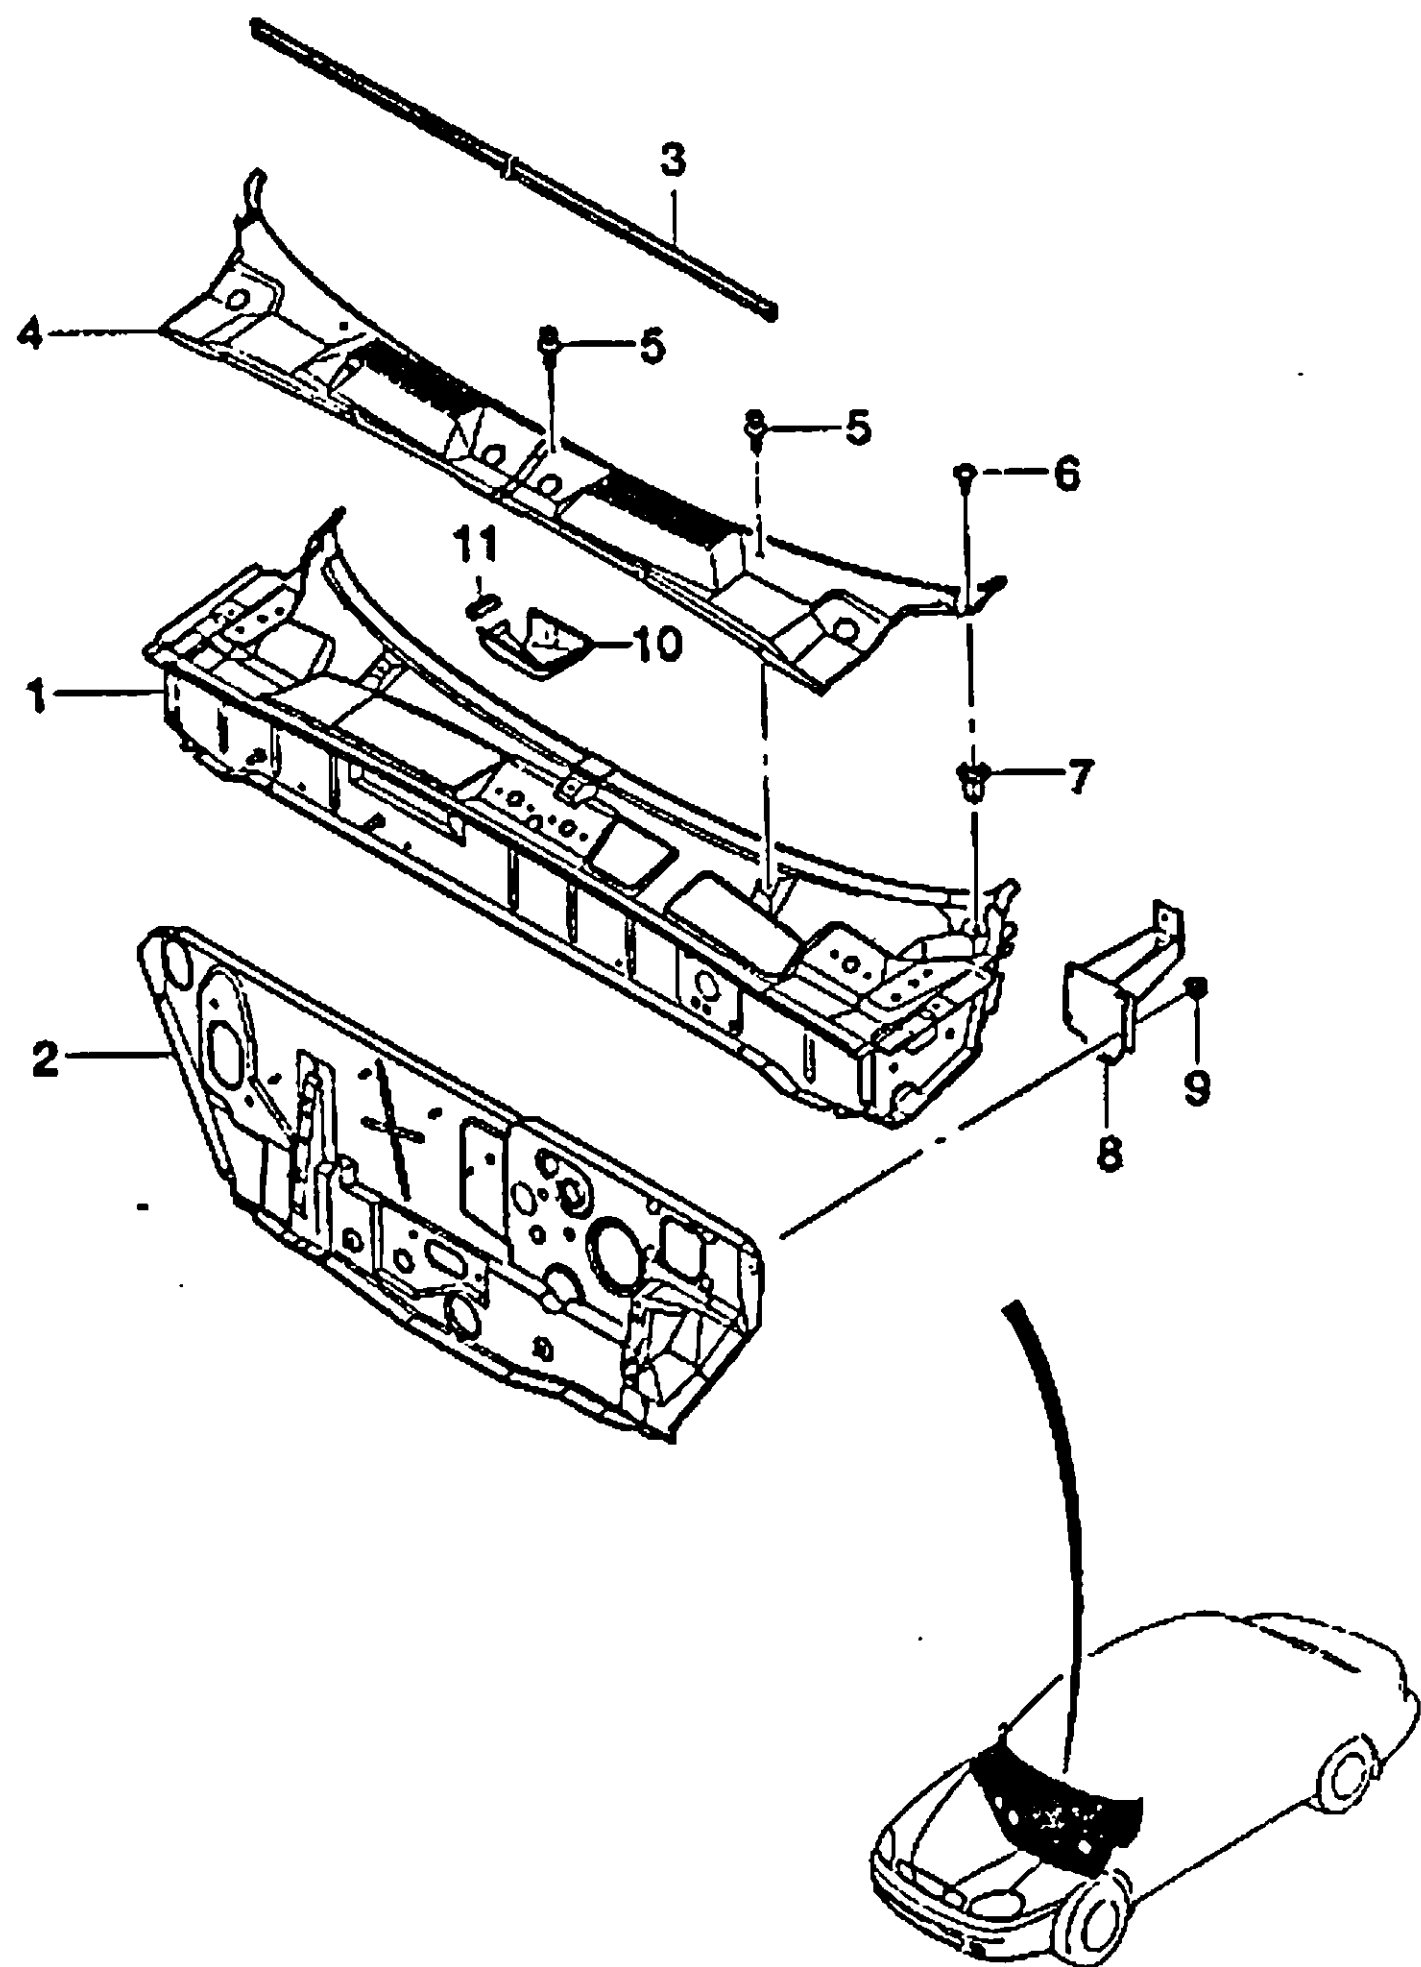


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N H	3 H	5 H	S S S S S S								
	[01]	(E) PANEL A-DASH, UPPER (D) VERKLEIDUNG, ARMATURENBRET									(F) PANNEAU-TABLEAU DE BORD (S) PANEL-SALPICAR				
	96218304	.	.	B	B	B	S	S	S	1				DB	
	[02]	(E) PANEL A-DASH, LOWER (D) PLATTE									(F) PLACA-GOLPEADOR (S) PLACA-GOLPEADOR				
	96246753	.	.	B	B	B	S	S	S	1				D4	
	[03]	(E) WEATHERSTRIP-HOOD (D) DICHTUNGSLEISTE									(F) ISOLATION EN BANDELETTE (S) BURLETE				
	96303226	.	.	B	B	B	S	S	S	1					
	[04]	(E) COWL (D) HAUBE									(F) CHAPEAU (S) CAPUCHA				
	96304672	.	.	B	B	B	S	S	S	LH 1					
	96304673	.	.	B	B	B	S	S	S	RH 1					
	[05]	(E) CLIP (D) KLEMME									(F) ATTACHE (S) GRAPA				
	09409-06327	.	.	B	B	B	S	S	S	5					
	[06]	(E) SCREW-TAPPING (D) SCHRAUBE									(F) VIS (S) TORNILLO				
	03160-42132	.	.	B	B	B	S	S	S	2		970602			
N	09132-05002	.	.	B	B	B	S	S	S	2		970602			
	[07]	(E) NUT-SPEED (D) MUTTER									(F) ECROU (S) TUERCA				
	09148-03001	.	.	B	B	B	S	S	S	2					
	[08]	(E) SUPPORT A-DASH PANEL (D) TRÄGER									(F) SUPPORT (S) SOPORTE				
	96233565	.	A	B	B	B	O	O	O	1		970512			
O	96247422	.	A	B	B	B	O	O	O	1		970512			


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

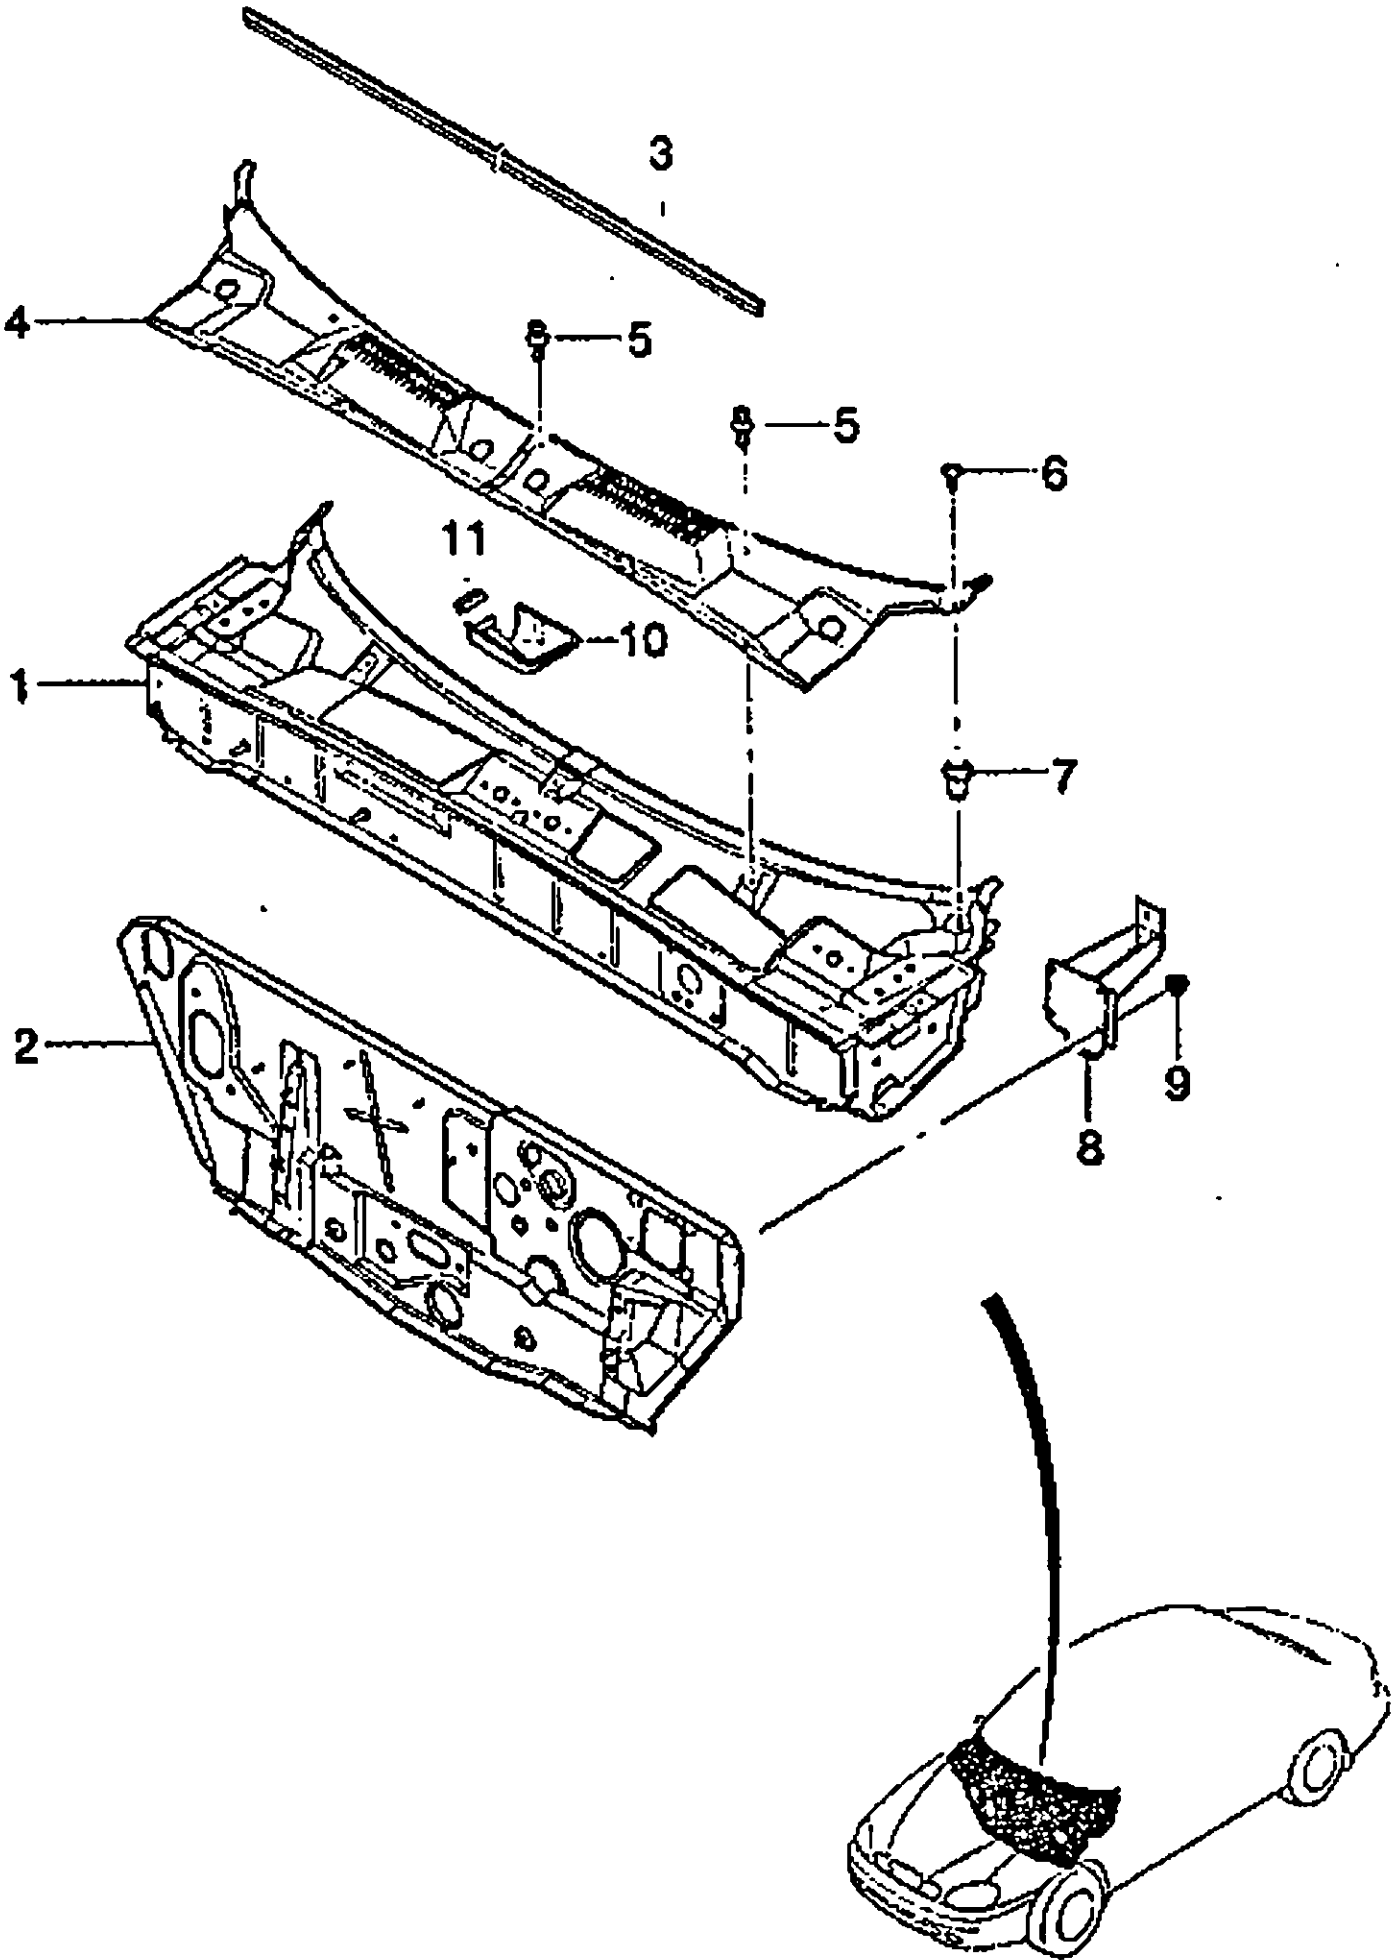


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[09] 09159-08003	(E)NUT (D)MUTTER . A B B B O O O									(F)ECROU (S)TUERCA 8					
	[10] 96242195	(E)COVER A-DASH, TOP (D)DECKEL . . B B B S S S									(F)COUVERCLE (S)CUBIERTA 1					
	[11] 96246176	(E)COVER-FLANGE, DASH TOP (D)DECKEL . . B B B S S S									(F)COUVERCLE (S)CUBIERTA 1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

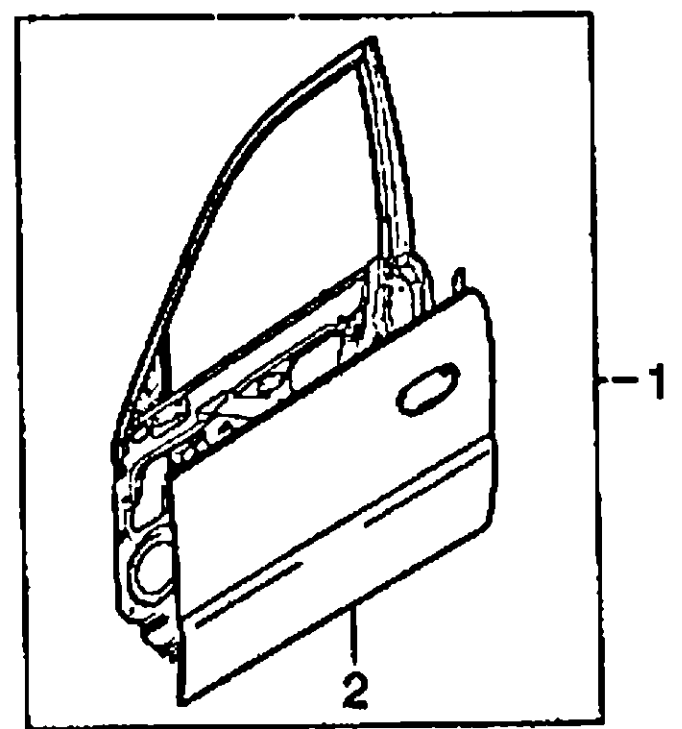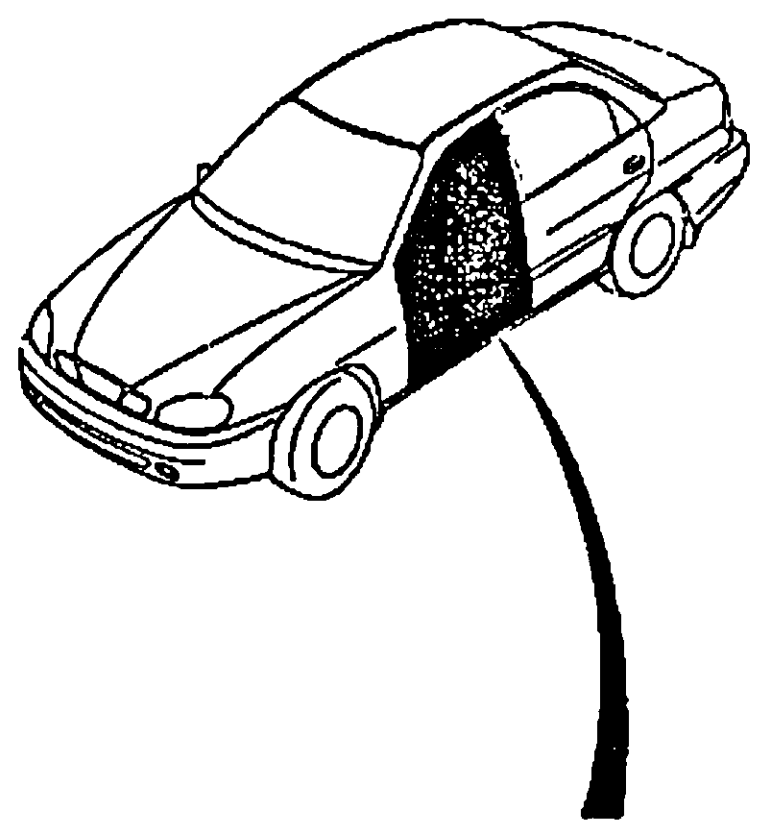


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N / G	T A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S X
	[01]	(E)PANEL A-FRONT DOOR (D)VERKLEIDUNG,VORDERTÜR										(F)PANNEAU-PORTE AVANT (S)PANEL-PUERTA DEL FRENTE				
	A96307283	.	.	B	.	B	S	S	S	&XCK	LH	1			RA	
	A96307284	.	.	B	.	B	S	S	S	&XCK	RH	1			R1	
	A96303836	.	.	B	.	B	A	A	A	&XCP	LH	1			RB	
	A96303837	.	.	B	.	B	A	A	A	&XCP	RH	1			R2	
	A96307281	.	.	.	B	.	S	.	S	&XCK	LH	1			KA	
	A96307282	.	.	.	B	.	S	.	S	&XCK	RH	1			K1	
	A96303834	.	.	.	B	.	A	.	A	&XCP	LH	1			KB	
	A96303835	.	.	.	B	.	A	.	A	&XCP	RH	1			K2	
	[02]	(E)PANEL-FRONT DOOR OUTER (D)VERKLEIDUNG										(F)PANNEAU (S)PANEL				
	A96310023	.	.	B	.	B	S	S	S	&XCK	LH	1				
	A96310024	.	.	B	.	B	S	S	S	&XCK	RH	1				
	A96303911	.	.	B	.	B	A	A	A	&XCP	LH	1				
	A96303912	.	.	B	.	B	A	A	A	&XCP	RH	1				
	A96310021	.	.	.	B	.	S	.	S	&XCK	LH	1				
	A96310022	.	.	.	B	.	S	.	S	&XCK	RH	1				
	A96303909	.	.	.	B	.	A	.	A	&XCP	LH	1				
	A96303910	.	.	.	B	.	A	.	A	&XCP	RH	1				
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

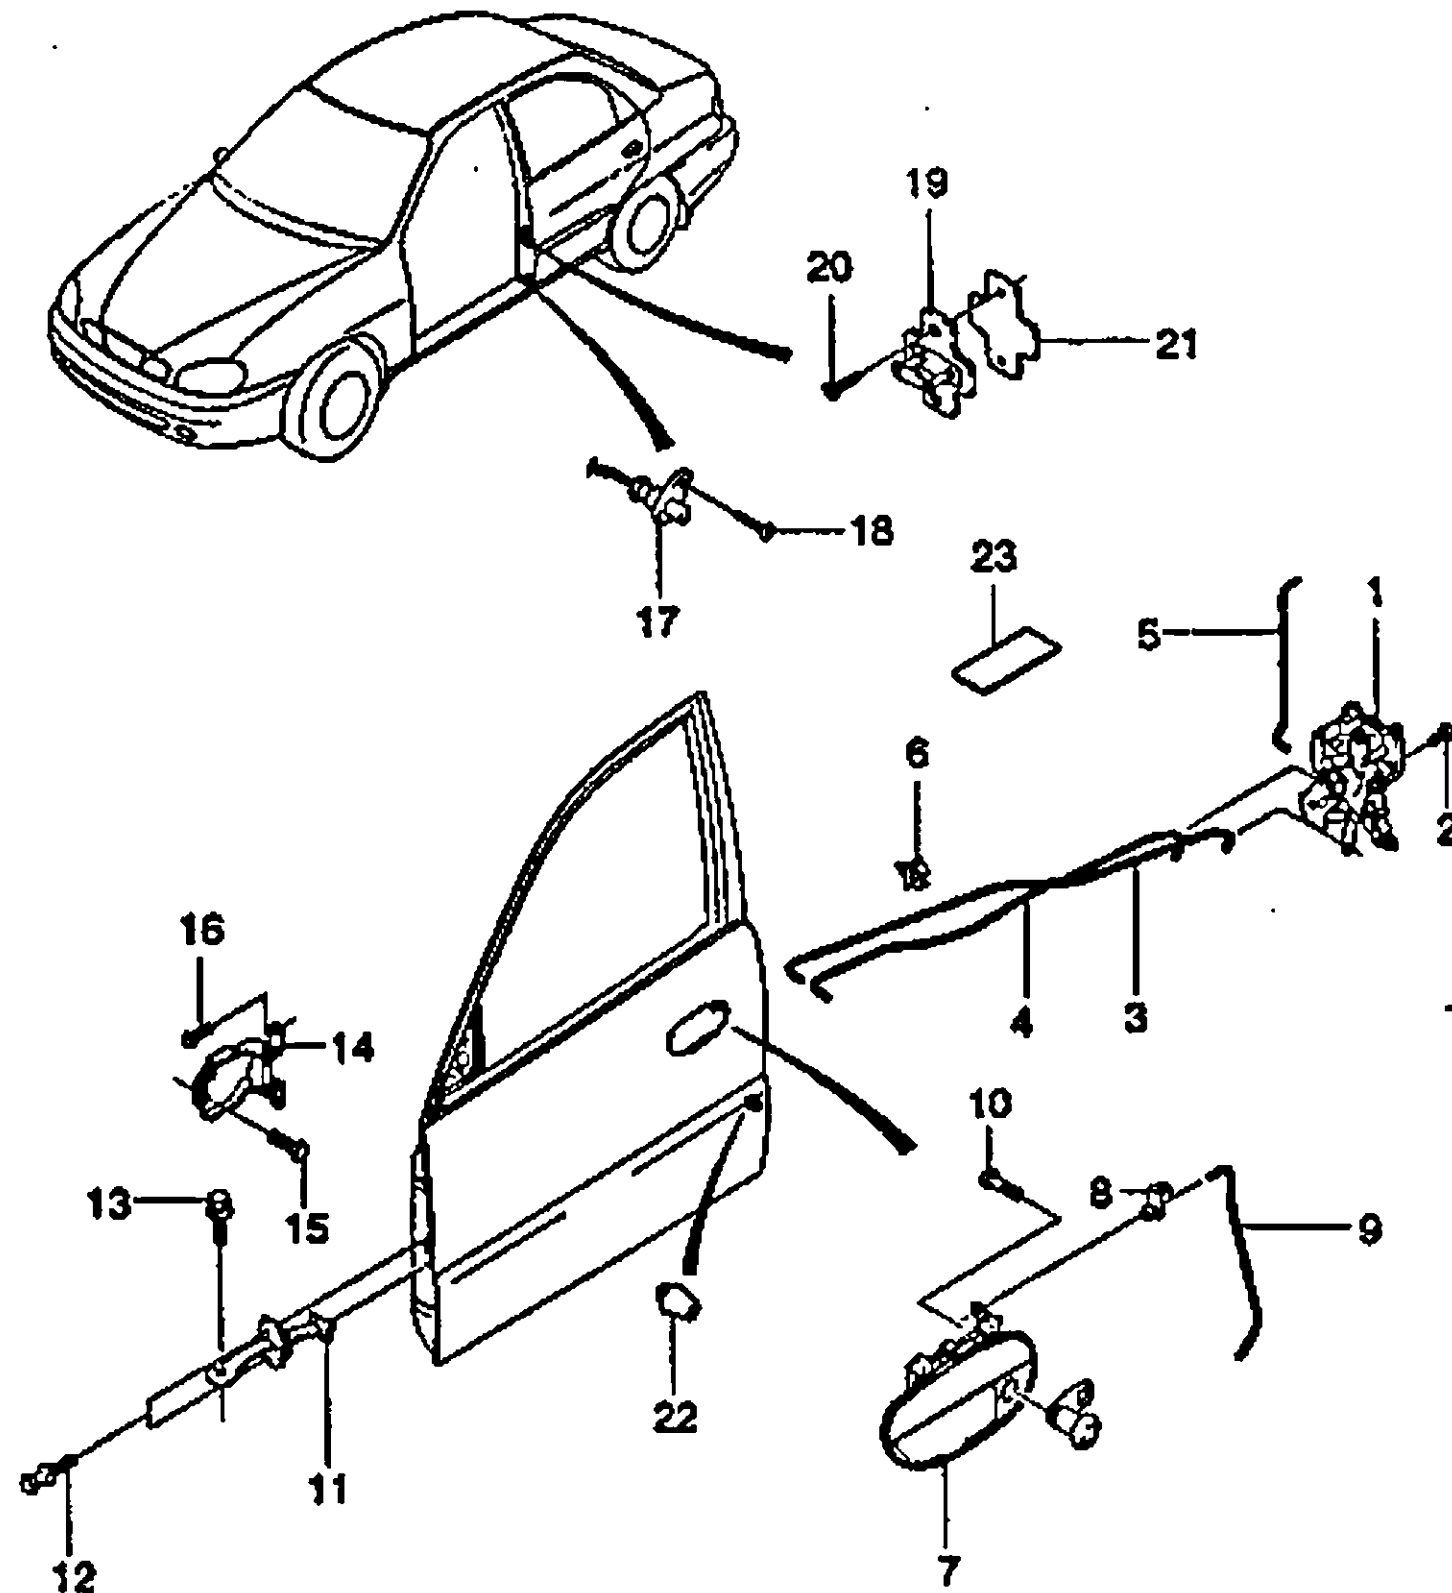


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L I R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	[01]	(E)LATCH A-FRONT DOOR (D)VERSCHLUß,VORDERTÜR										(F)LOQUET-PORTE AVANT (S)PESTILLO-PUERTA			
	96305416	.	.	B	B	B	S	S	.	-AU3		LH	1		
	96305418	.	.	B	B	B	S	S	.	-AU3		RH	1		
	96305409	.	.	B	B	B	O	O	S	&AU3		LH	1		
	96305412	.	.	B	B	B	O	O	S	&AU3		RH	1		
	[02]	(E)SCREW (D)SCHRAUBE										(F)VIS (S)TORNILLO			
	09125-06002	.	.	B	B	B	S	S	S				6		
	[03]	(E)ROD-FRONT DOOR LOCKING (D)STAB										(F)TRINGLE (S)VARILLA			
	96304033	.	.	B	.	B	S	S	S			LH	1		
	96304034	.	.	B	.	B	S	S	S			RH	1		
	96304756	.	.	.	B	.	S	.	S			LH	1		
	96304757	.	.	.	B	.	S	.	S			RH	1		
	[04]	(E)ROD-FRT DOOR INSIDE HANDL (D)STAB										(F)TRINGLE (S)VARILLA			
	96304031	.	.	B	.	B	S	S	S			LH	1		
	96304032	.	.	B	.	B	S	S	S			RH	1		
	96304754	.	.	.	B	.	S	.	S			LH	1		
	96304755	.	.	.	B	.	S	.	S			RH	1		
	[05]	(E)ROD-FRT DOOR KEY CYLINDER (D)STAB										(F)TRINGLE (S)VARILLA			
	96304000	.	.	B	.	B	S	S	S			LH	1		
	96304001	.	.	B	.	B	S	S	S			RH	1		
	96304752	.	.	.	B	.	S	.	S			LH	1		
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

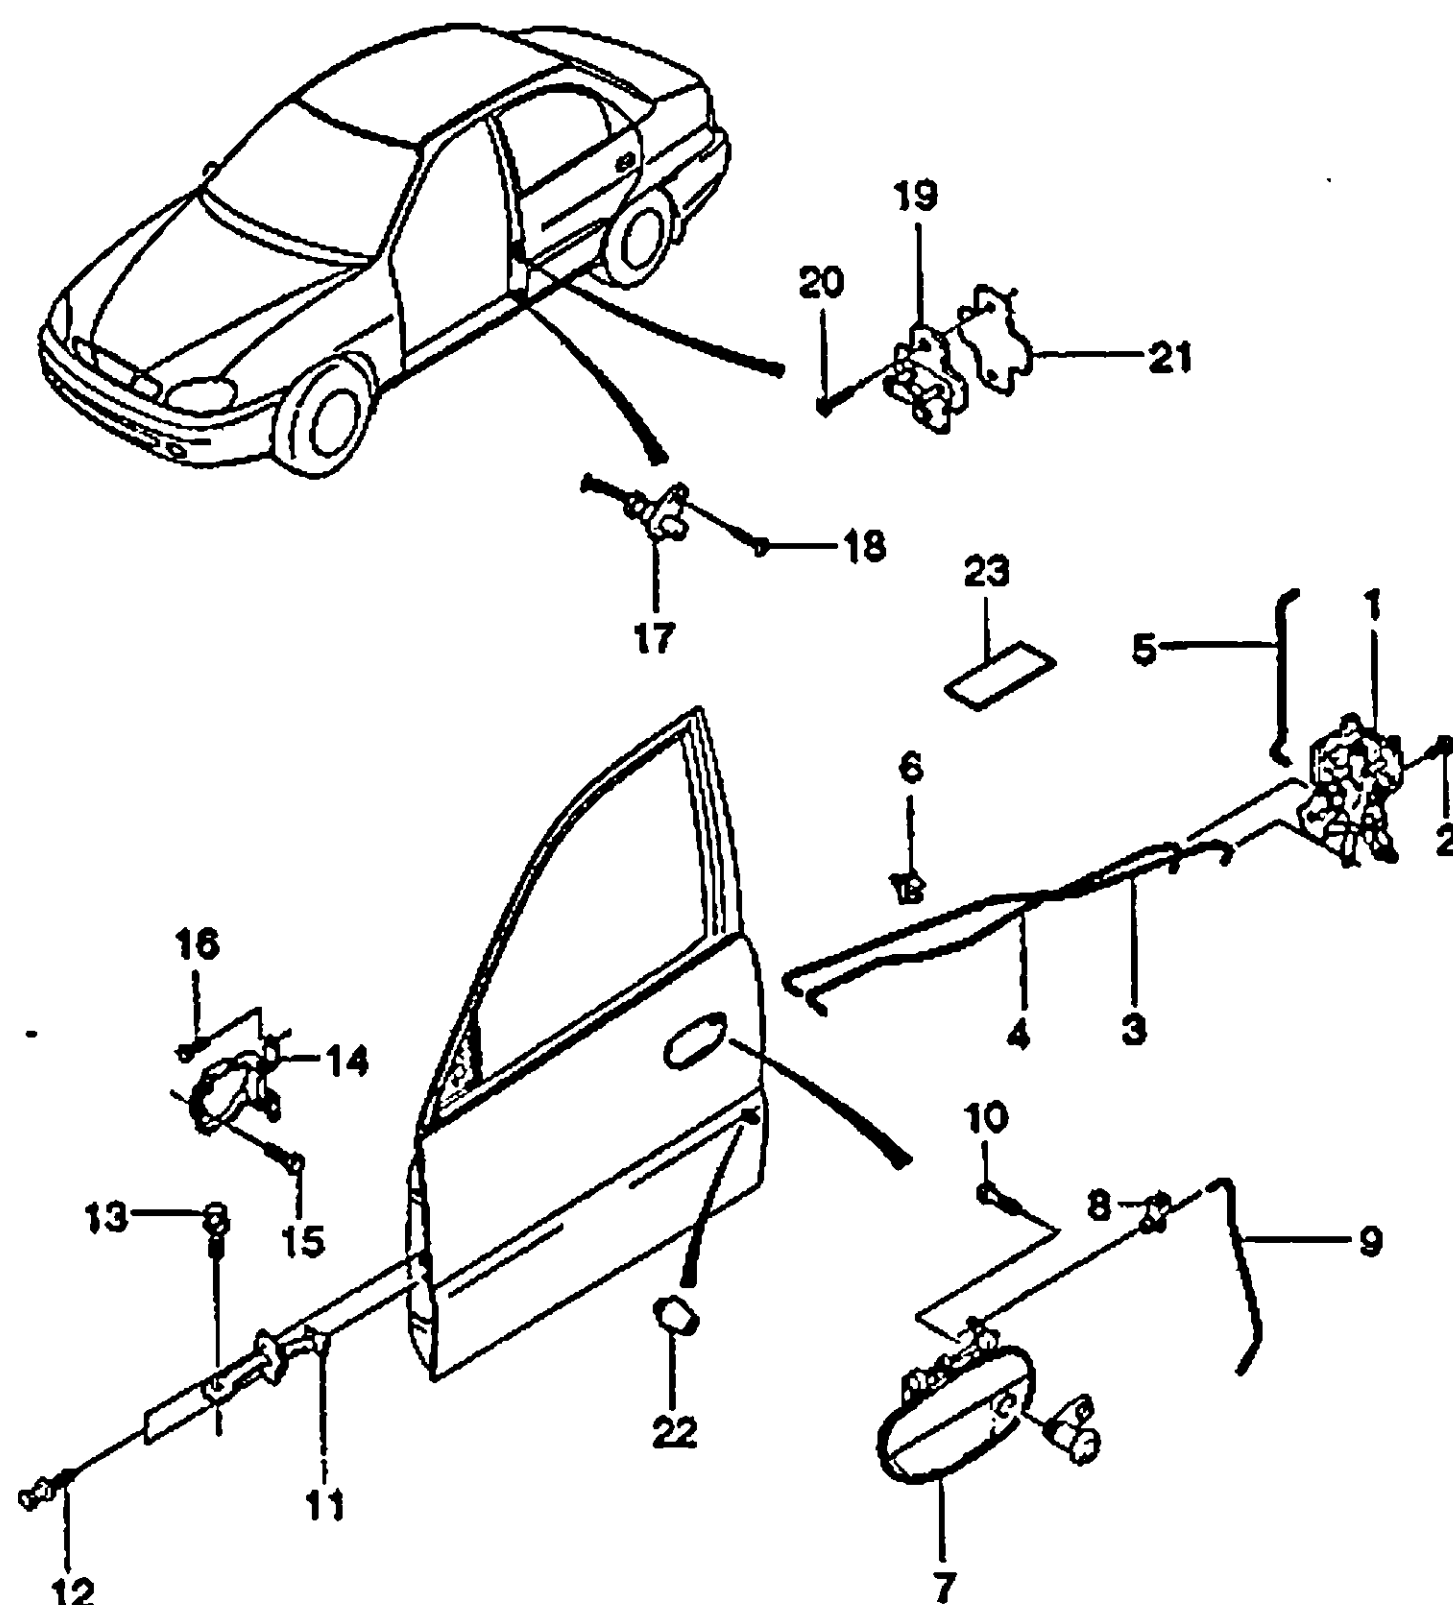


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q / T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	96304753	.	.	.	B	.	S	.	S		RH 1				
	[06]	(E)CLIP									(F)ATTACHE				
		(D)KLEMME									(S)GRAPA				
	09408-00021	.	.	B	B	B	S	S	S		2				
	[07]	(E)HANDLE A-FRT DOOR OUTSIDE									(F)POIGNEE-EXTERIEURE PORTE				
		(D)HENKEL,TÜR,AUßEN									(S)MANIJA-EXTERNA PUERTA				
	96226249	.	.	B	.	B	S	S	S		LH 1				NA
	96226250	.	.	B	.	B	S	S	S		RH 1				NB
	96226251	.	.	.	B	.	S	.	S		LH 1				NC
	96226252	.	.	.	B	.	S	.	S		RH 1				ND
	[08]	(E)CLAMP									(F)PINCE				
		(D)KLAMMER									(S)ABRAZADERA				
	09403-04301	.	.	B	B	B	S	S	S		2				
	[09]	(E)ROD-OUTSIDE HANDLE									(F)TRINGLE				
		(D)STAB,AUßEN-GRIFF									(S)VARILLA-MANIJA EXTERNA				
	96304016	.	.	B	.	B	S	S	S		2				
	96306632	.	.	.	B	.	S	.	S		2				
	[10]	(E)BOLT-HEXAGON									(F)BOULON				
		(D)SCHRAUBE									(S)PERNO				
	01114-06103	.	.	B	B	B	S	S	S		4				
	[11]	(E)CHECK A-FRONT DOOR									(F)ARRET-PORTE				
		(D)TÜR-PRÜF									(S)PUERTA DE VERIFICAR				
	96303990	.	.	B	B	B	S	S	S		LH 1				
	96303991	.	.	B	B	B	S	S	S		RH 1				
	[12]	(E)BOLT-HEXAGON									(F)BOULON				
		(D)SCHRAUBE									(S)PERNO				
	01117-06162	.	.	B	B	B	S	S	S		4				
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

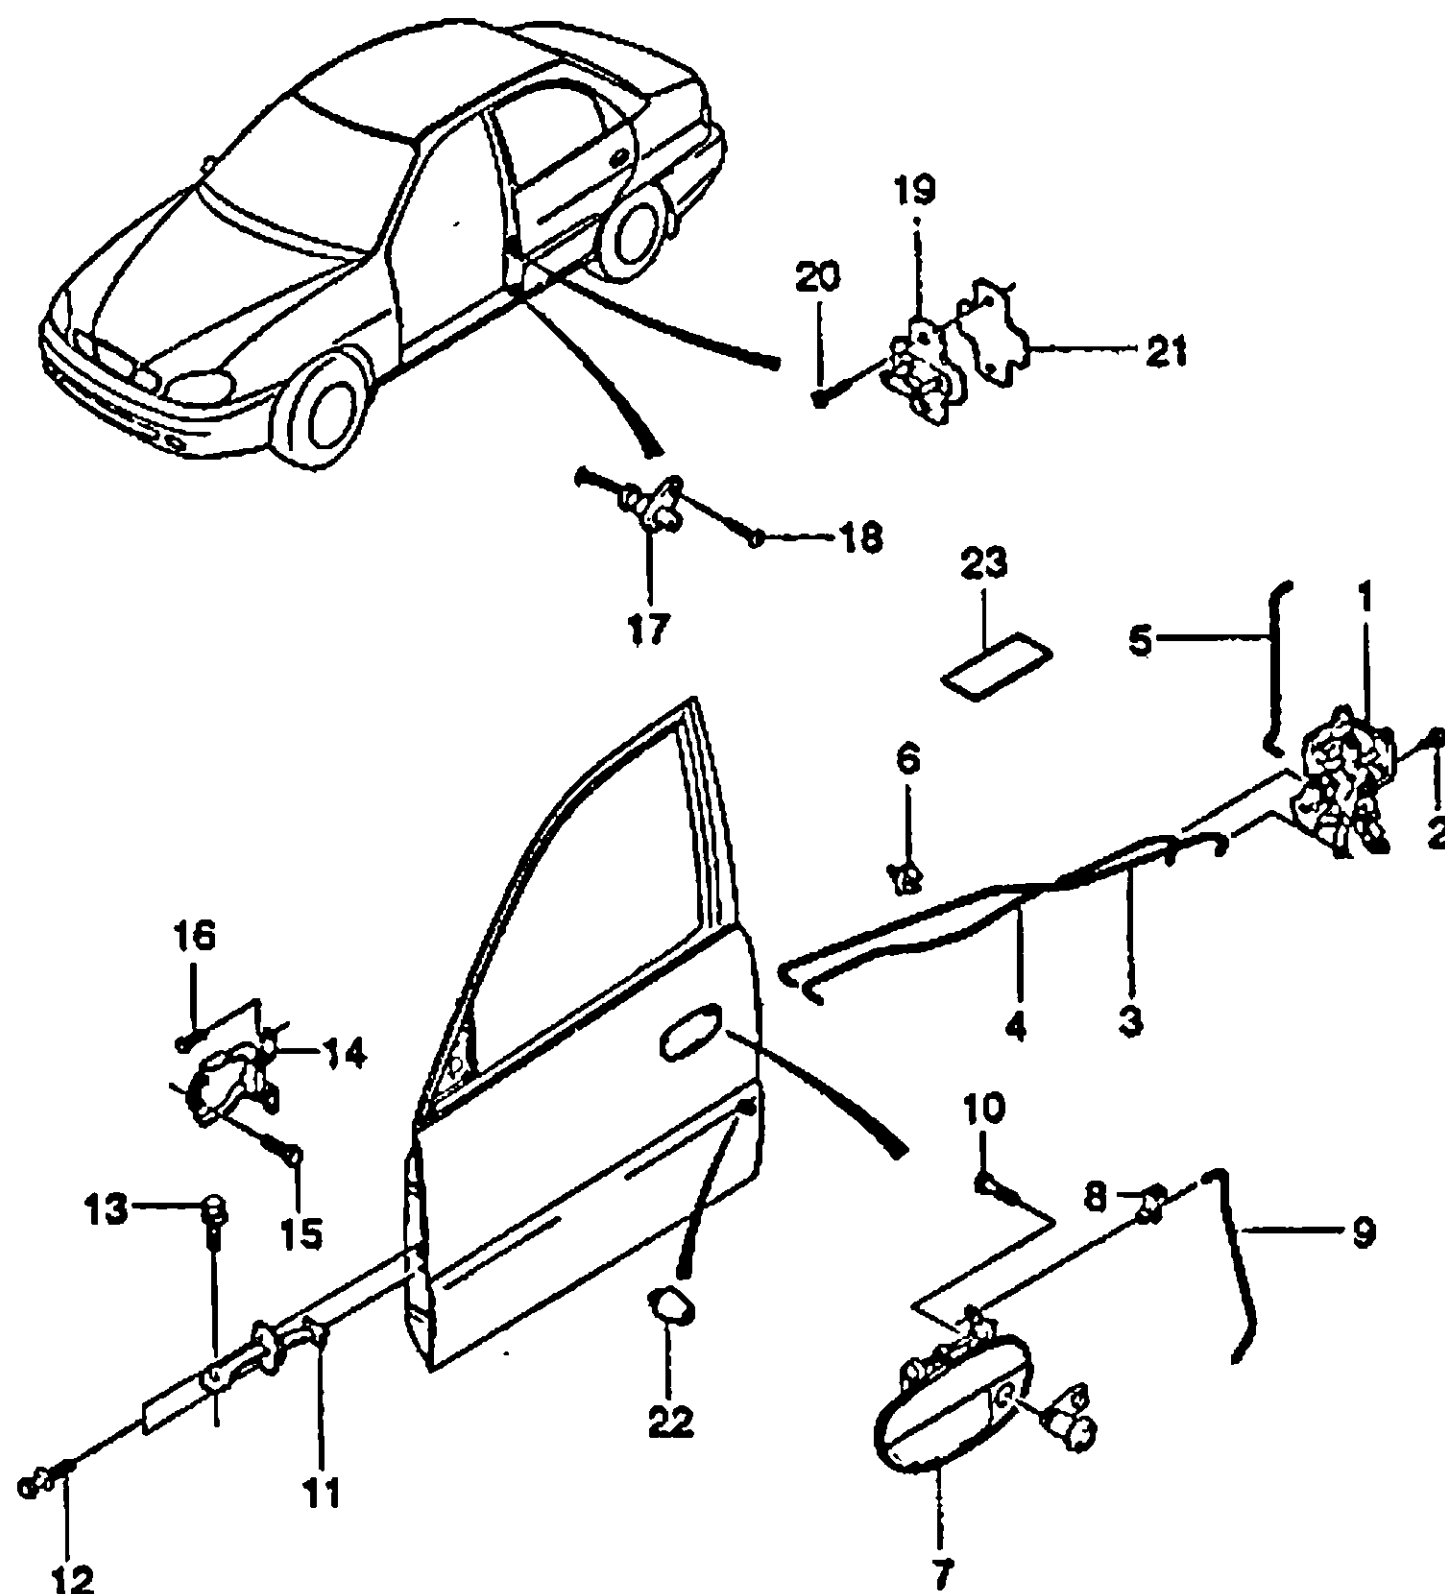


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E T N G	A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[13]	(E)BOLT									(F)BOULON				
		(D)SCHRAUBE									(S)PERNO				
	09118-08003	. . .	B	B	B	S	S	S			2	970512	WWASHER		
Y	09118-08009	. . .	B	B	B	S	S	S			2	970512	WWASHER		
	[14]	(E)HINGE A-FRONT DOOR									(F)CHARNIERE-PORTE AVANT				
		(D)BESCHLAG,VORDERTÜR									(S)BISAGRA-PUERTA				
	96224310	. . .	B	B	B	S	S	S			LH 1		UPPER	EA	
	96224311	. . .	B	B	B	S	S	S			LH 1		LOWER	EB	
	96224311	. . .	B	B	B	S	S	S			RH 1		UPPER	EB	
	96224310	. . .	B	B	B	S	S	S			RH 1		LOWER	EA	
	[15]	(E)BOLT									(F)BOULON				
		(D)SCHRAUBE									(S)PERNO				
	09118-08008	. . .	B	B	B	S	S	S			8		WWASHER		
	[16]	(E)BOLT-HEXAGON FLANGE									(F)BOULON				
		(D)SCHRAUBE									(S)PERNO				
	09103-08018	. . .	B	B	B	S	S	S			8				
	[17]	(E)SWITCH A-DOOR CONTACT									(F)COMMUTATEUR-CONTACT PORTE				
		(D)SCHALTER,TÜR KONTAKT									(S)INTERRUPTOR				
	96235956	. . .	B	B	B	S	S	S			2				
	[18]	(E)SCREW-TAPPING									(F)VIS				
		(D)SCHRAUBE									(S)TORNILLO				
	03170-42095	. . .	B	B	B	S	S	S			2				
	[19]	(E)STRIKER A-DOOR									(F)MARTEAU				
		(D)SCHLÄGER									(S)HUELGUISTA				
	96301658	. . .	B	B	B	S	S	S			2				
	[20]	(E)BOLT									(F)BOULON				
		(D)SCHRAUBE									(S)PERNO				
	09119-08026	. . .	B	B	B	S	S	S			4				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

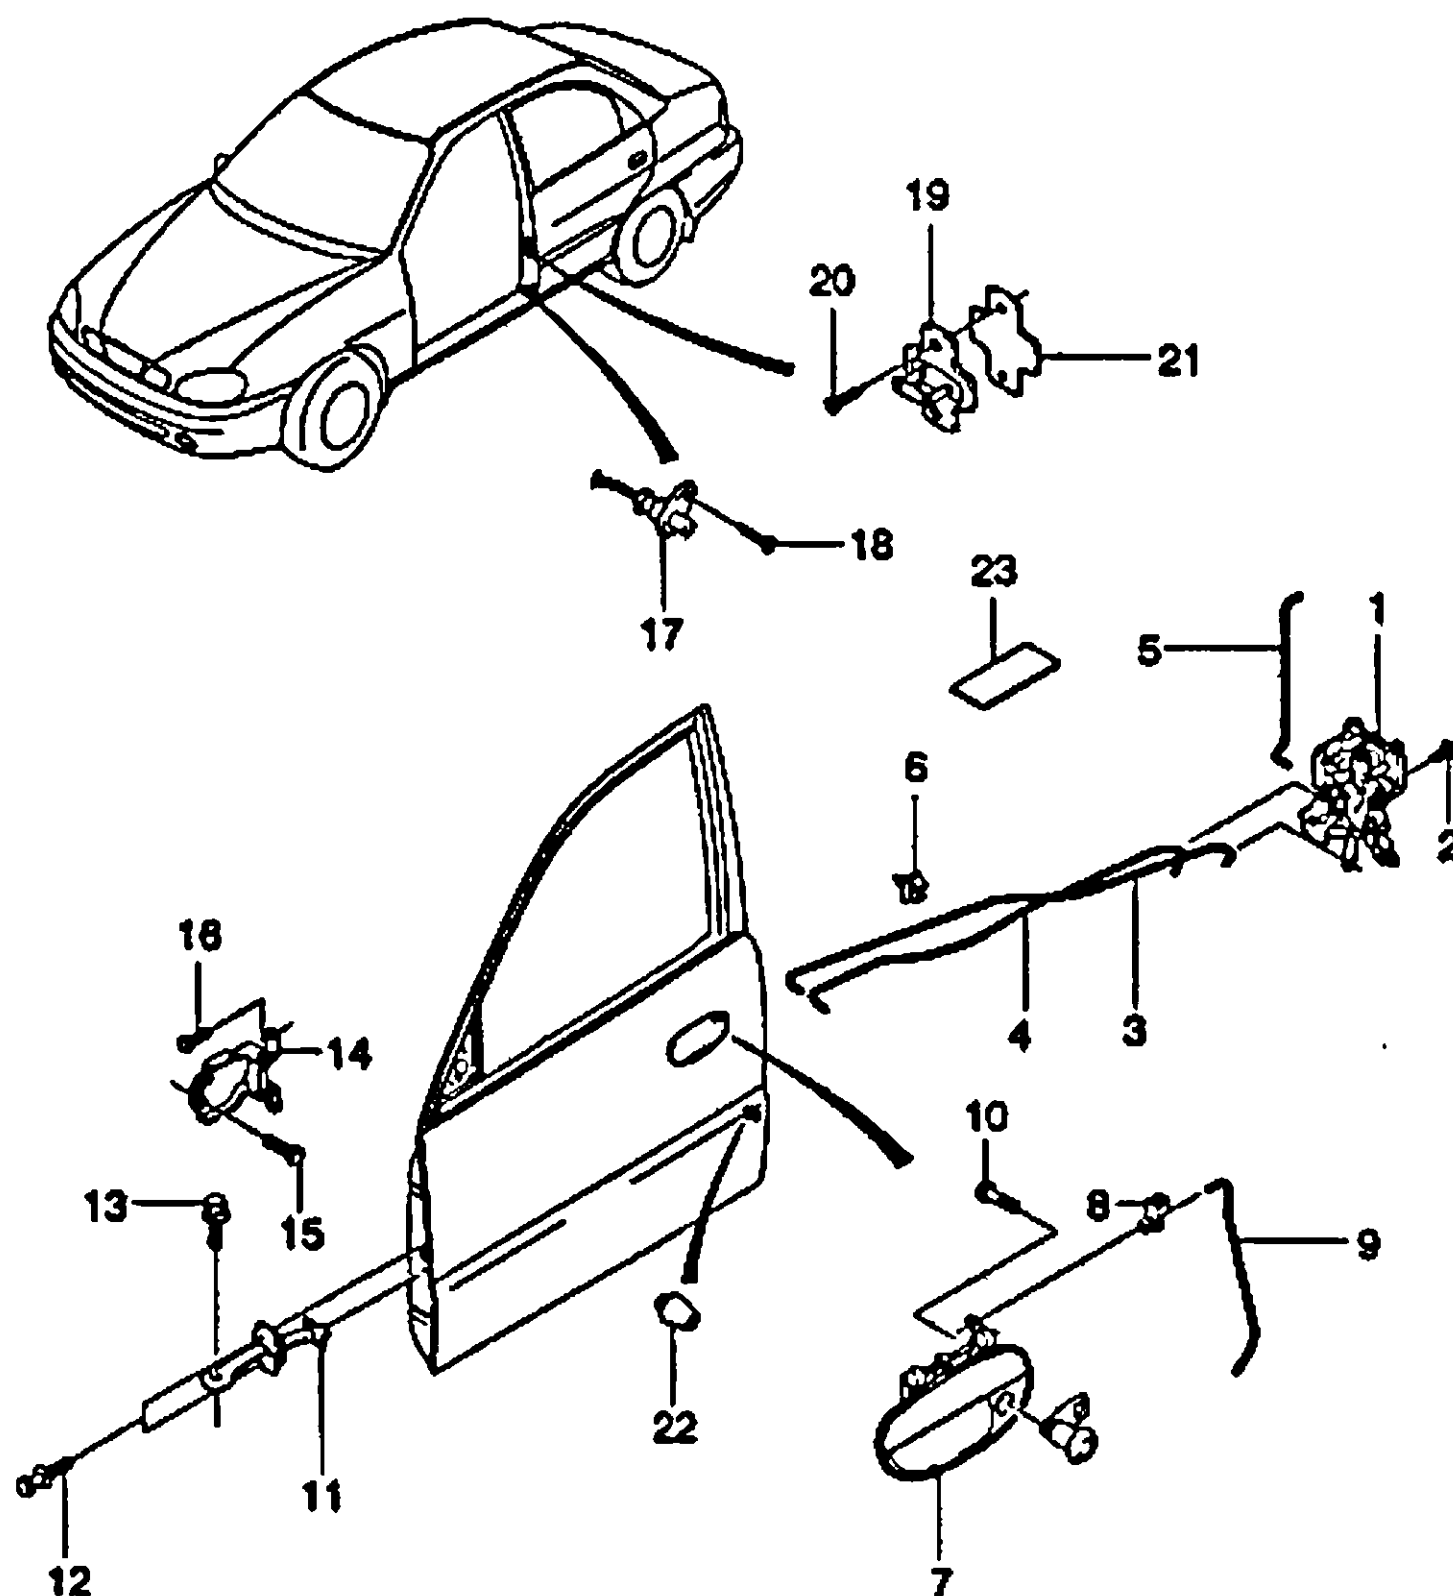


KEY NO.			PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[21] 96216377	(E)WASHER-DISTANCE (D)DICHTUNGSRING,DISTANZ	.	.	B	B	B	S	S	S		(F)RONDELLE-DISTANCE (S)ARANDELA-DISTANCIA				
	[22] 96240768 96169620	(E)BUMPER-TRUNK LID,LWR (D)STOßSTANGE	.	.	B	.	B	S	S	S		(F)PARE-CHOC (S)PARACHOQUES				
	[23] 96249231	(E)STRIP-INSULATING (D)AUSZIEHEN	.	.	.	B	.	S	.	S		(F)BANDE (S)FLEJE				
			.	.	B	B	B	S	S	S						
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

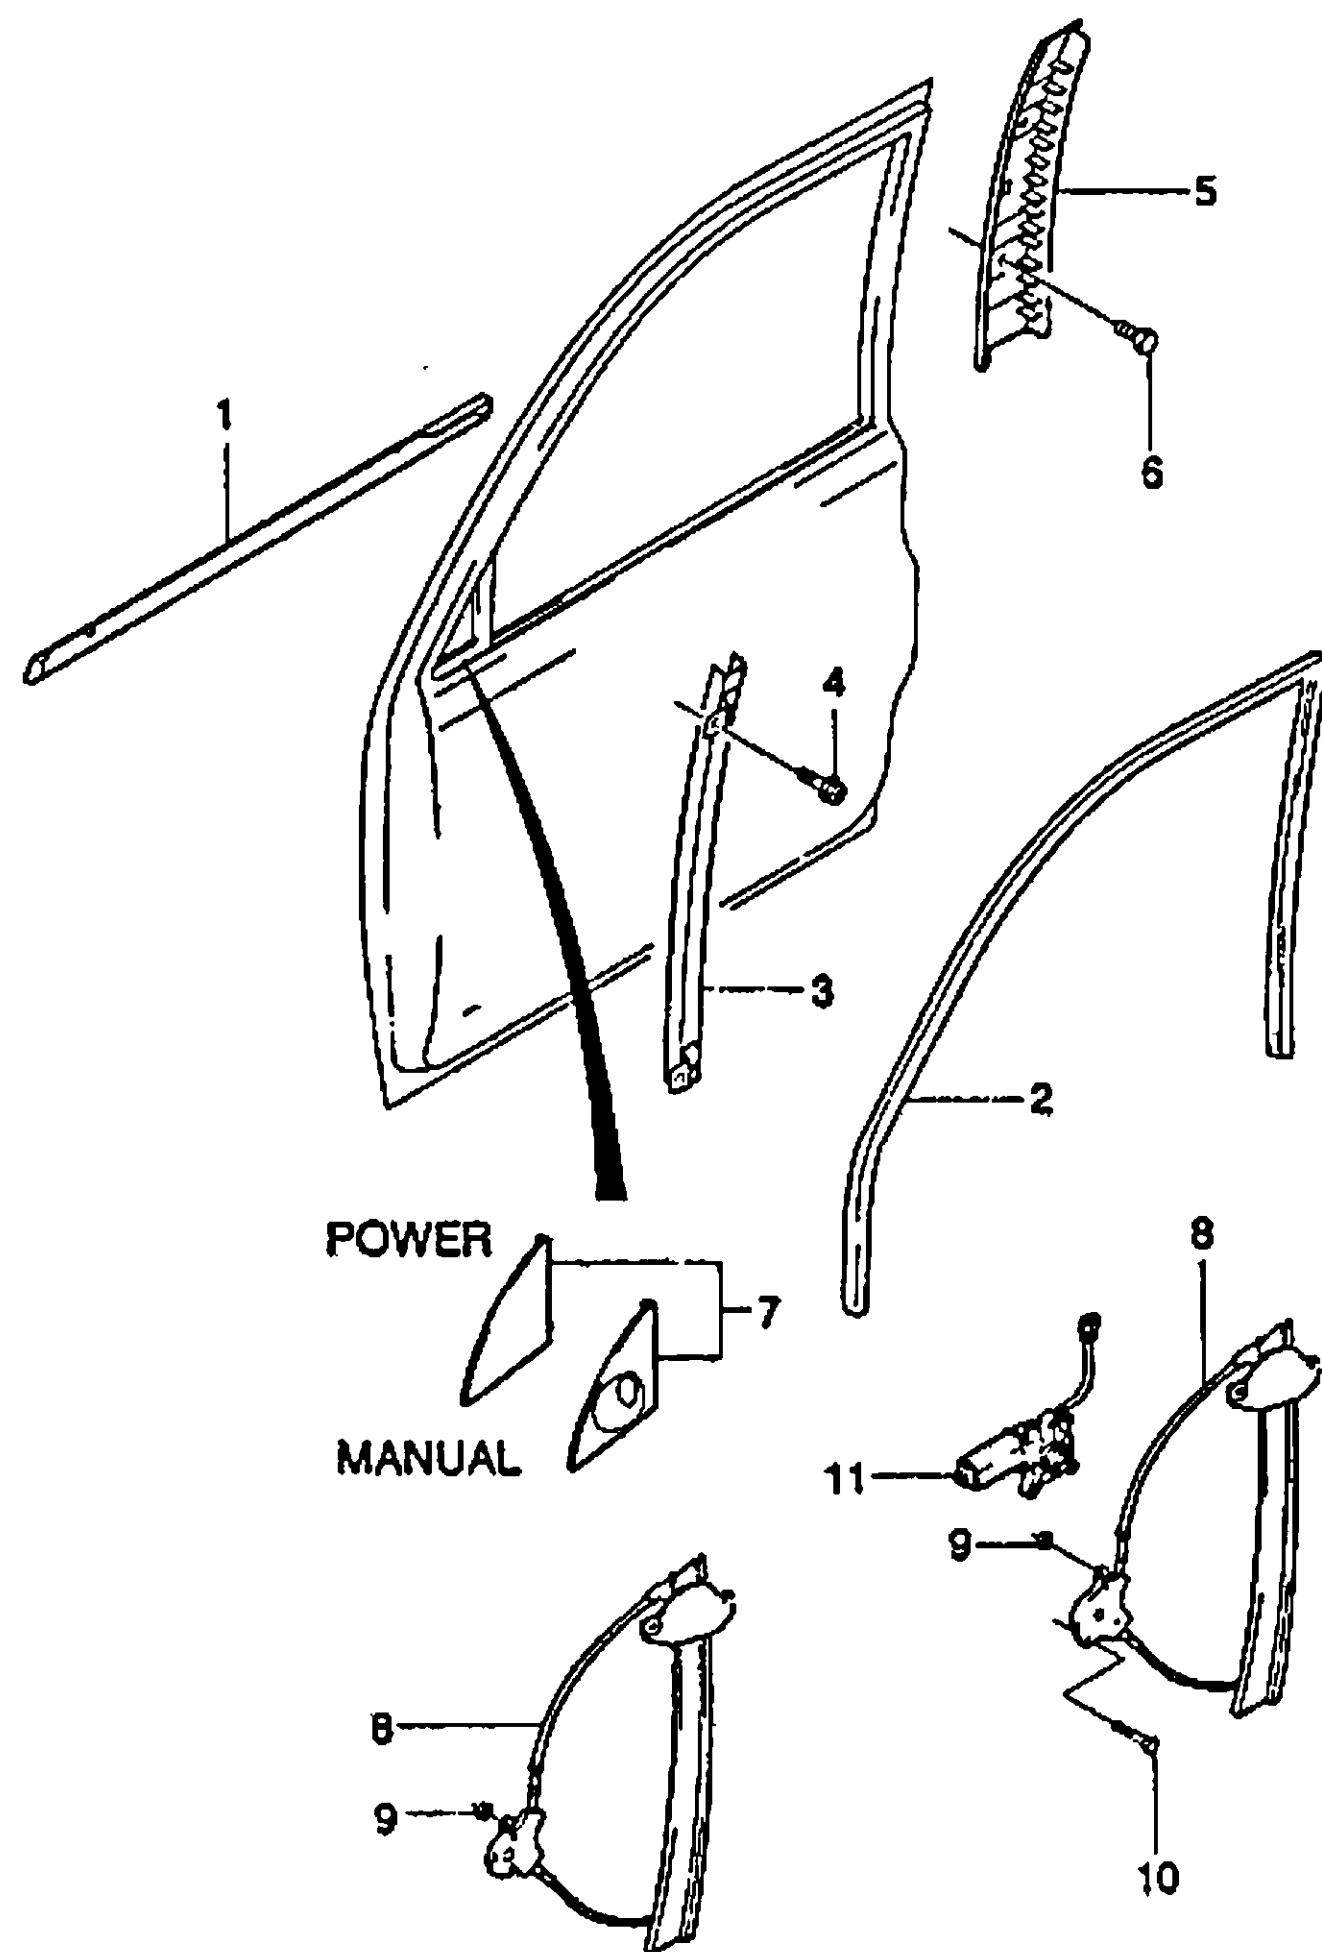

KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	[01]	(E)MOLDING A-FRT DOOR OTR CH (D)MOLDURA-PUERTA DELANTE										(F)MOULURE-PORTE AVANT (S)PREßTEIL,VORDERTÜR			
	96304086	.	.	B	.	B	S	S	S		LH	1			
	96304087	.	.	B	.	B	S	S	S		RH	1			
	96304084	.	.	.	B	.	S	.	S		LH	1			
	96304085	.	.	.	B	.	S	.	S		RH	1			
	[02]	(E)GLASS RUN-FRONT DOOR (D)RILLE,SCHEIBE,ABLAUF										(F)RAINURE-CHEMIN DE GLACE (S)CANAL-CORRIDA DE VIDRIO			
	96304082	.	.	B	.	B	S	S	S		LH	1			
	96304083	.	.	B	.	B	S	S	S		RH	1			
	96304080	.	.	.	B	.	S	.	S		LH	1			
	96304081	.	.	.	B	.	S	.	S		RH	1			
	[03]	(E)RAIL A-FRT DOOR GUIDE,RR (D)SCHIENE,FÜHRUNG										(F)RAIL-GUIDE (S)RIEL-GUIA			
	96246242	.	.	B	.	B	S	S	S		LH	1	970901		
Q	96257724	.	.	B	.	B	S	S	S		LH	1	970901		
	96246243	.	.	B	.	B	S	S	S		RH	1	970901		
Q	96257725	.	.	B	.	B	S	S	S		RH	1	970901		
	96303993	.	.	.	B	.	S	.	S		LH	1	970901		
Q	96267722	.	.	.	B	.	S	.	S		LH	1	970901		
	96303994	.	.	.	B	.	S	.	S		RH	1	970901		
Q	96257723	.	.	.	B	.	S	.	S		RH	1	970901		
	[04]	(E)BOLT (D)SCHRAUBE										(F)BOULON (S)PERNO			
	09116-06034	.	.	B	B	B	S	S	S			4		W/WASHER	
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE							
Y = 1.5SOHC 6 = 1.5DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

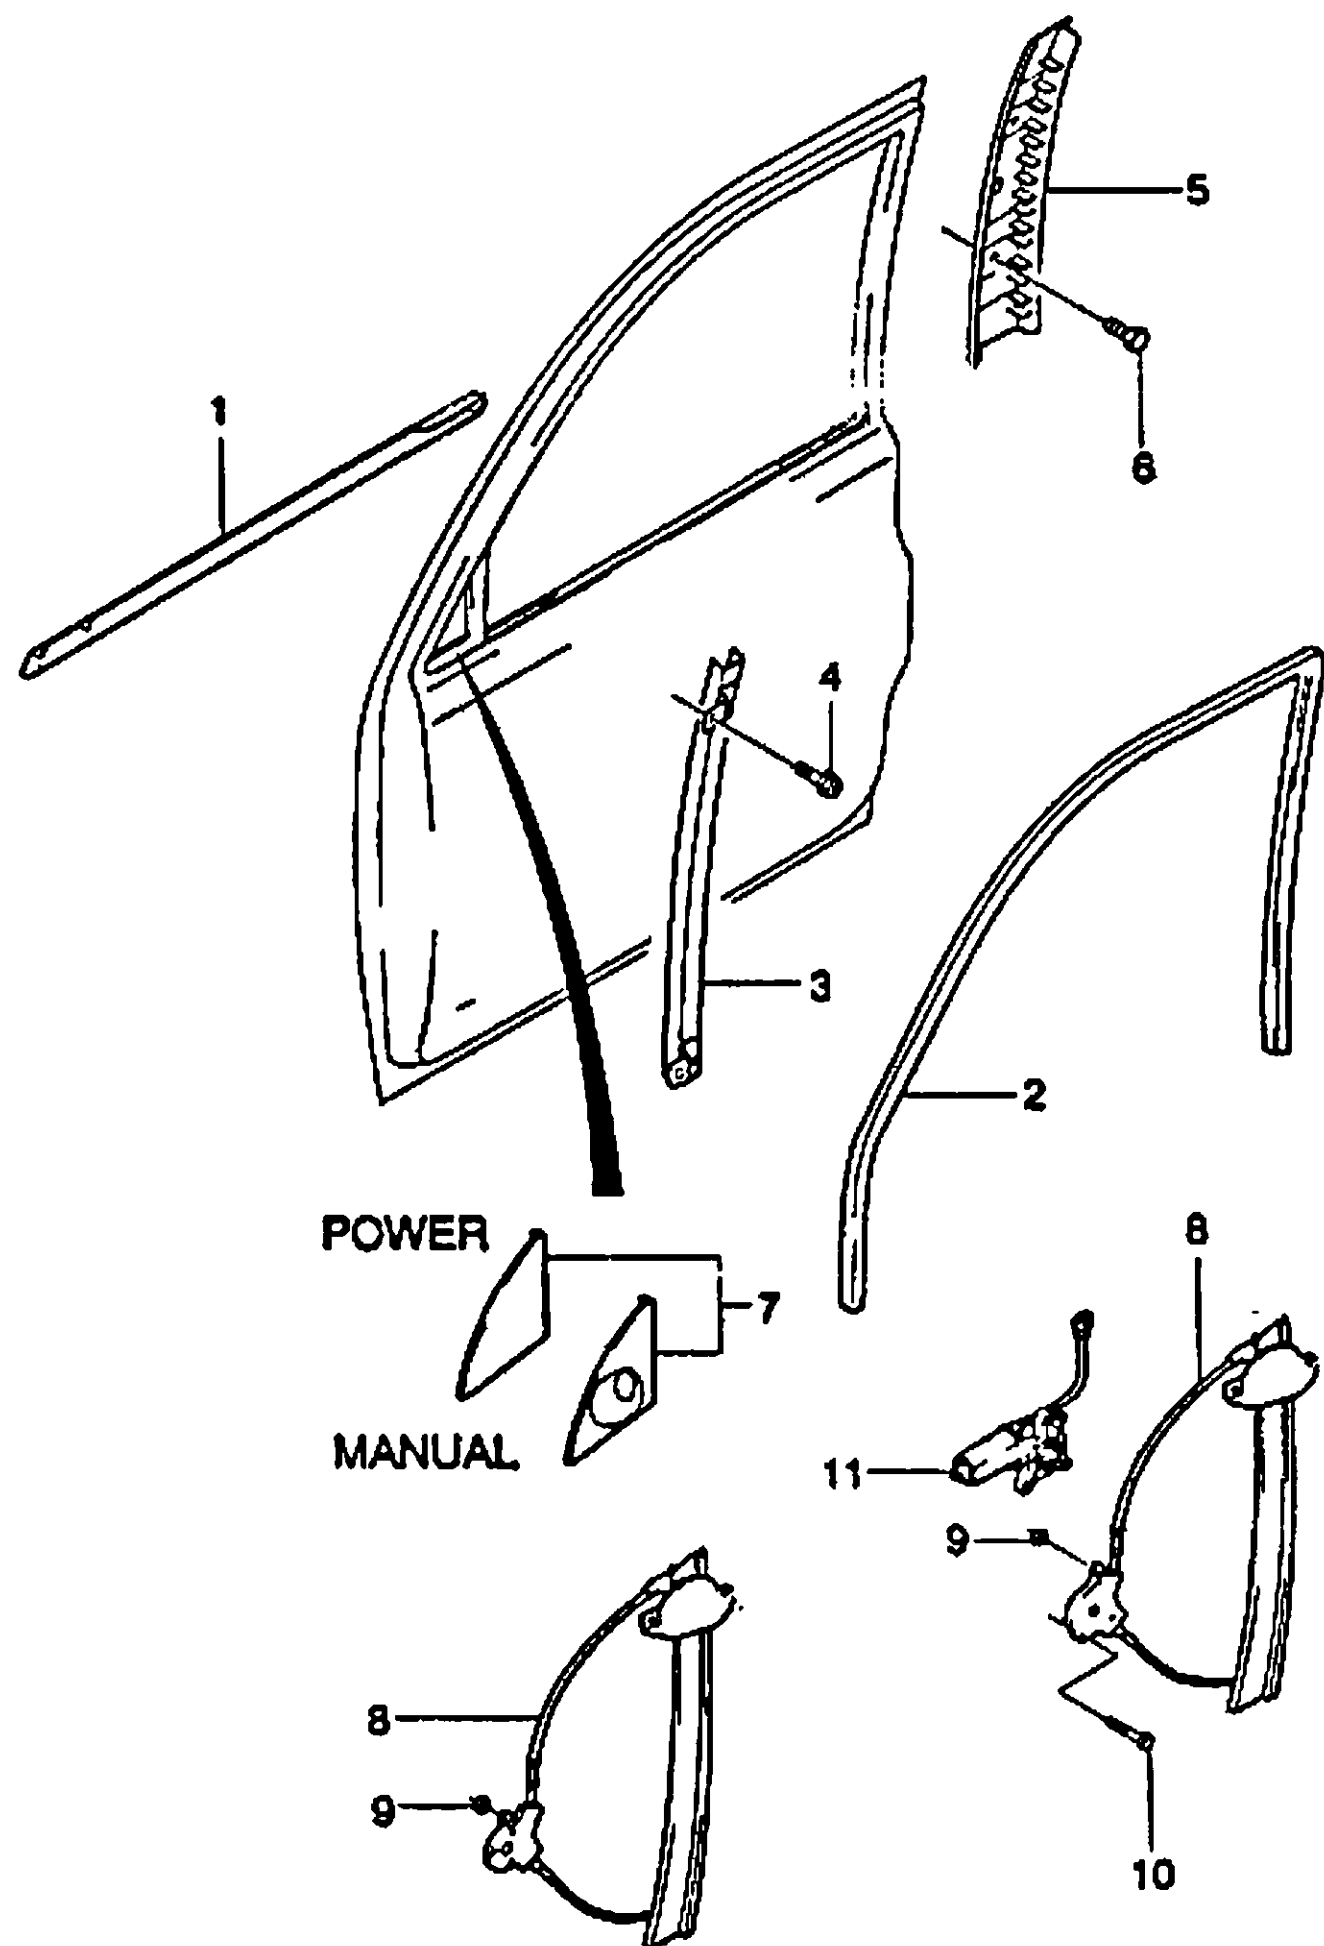


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[06]	(E)GARNISH-FRONT DOOR CENTER (D)VERZIERUNG										(F)GARNITURE (S)ORNAMENTO				
	96304715	.	.	B	.	B	S	S	S		LH	1				
	96304716	.	.	B	.	B	S	S	S		RH	1				
	96304713	.	.	.	B	.	S	.	S		LH	1				
	96304714	.	.	.	B	.	S	.	S		RH	1				
	[06]	(E)SCREW-TAPPING (D)SCHRAUBE										(F)VIS (S)TORNILLO				
	03111-42132	.	.	B	.	B	S	S	S		8					
	09132-04009	.	.	.	B	.	S	.	S		2	970701				
N	09136-04011	.	.	.	B	.	S	.	S		2	970701				
	[07]	(E)COVER A-WINDOW FRAME INR (D)DECKEL,FENSTERRAHMEN										(F)COUVERTURE (S)CUBIERTA-MARCO DE VENTANA				
	96304172	.	.	B	B	B	S	S	S	&D33	LH	1				
	96304173	.	.	B	B	B	S	S	S	&D39	RH	1				
	96304175	.	.	B	B	B	.	.	O	&DD4	RH	1				
	[08]	(E)LIFTER-FRT DOOR WINDOW (D)HEBER,FENSTERSCHEIBE										(F)LEVIER-FENETRE,AVANT (S)LEVANTADOR-VENTANA				
	96304038	.	.	B	.	B	S	S	.	&A30	LH	1		W1		
	96304040	.	.	B	.	B	S	S	.	&A30	RH	1		W2		
	96225383	.	.	B	.	B	O	O	S	&A32/A31	LH	1				
	96225384	.	.	B	.	B	O	O	S	&A32/A31	RH	1				
	96304039	.	.	.	B	.	S	.	.	&A30	LH	1		W3		
	96304041	.	.	.	B	.	S	.	.	&A30	RH	1		W4		
	96233470	.	.	.	B	.	O	.	S	&A32	LH	1				
	96233471	.	.	.	B	.	O	.	S	&A32	RH	1				
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC B = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

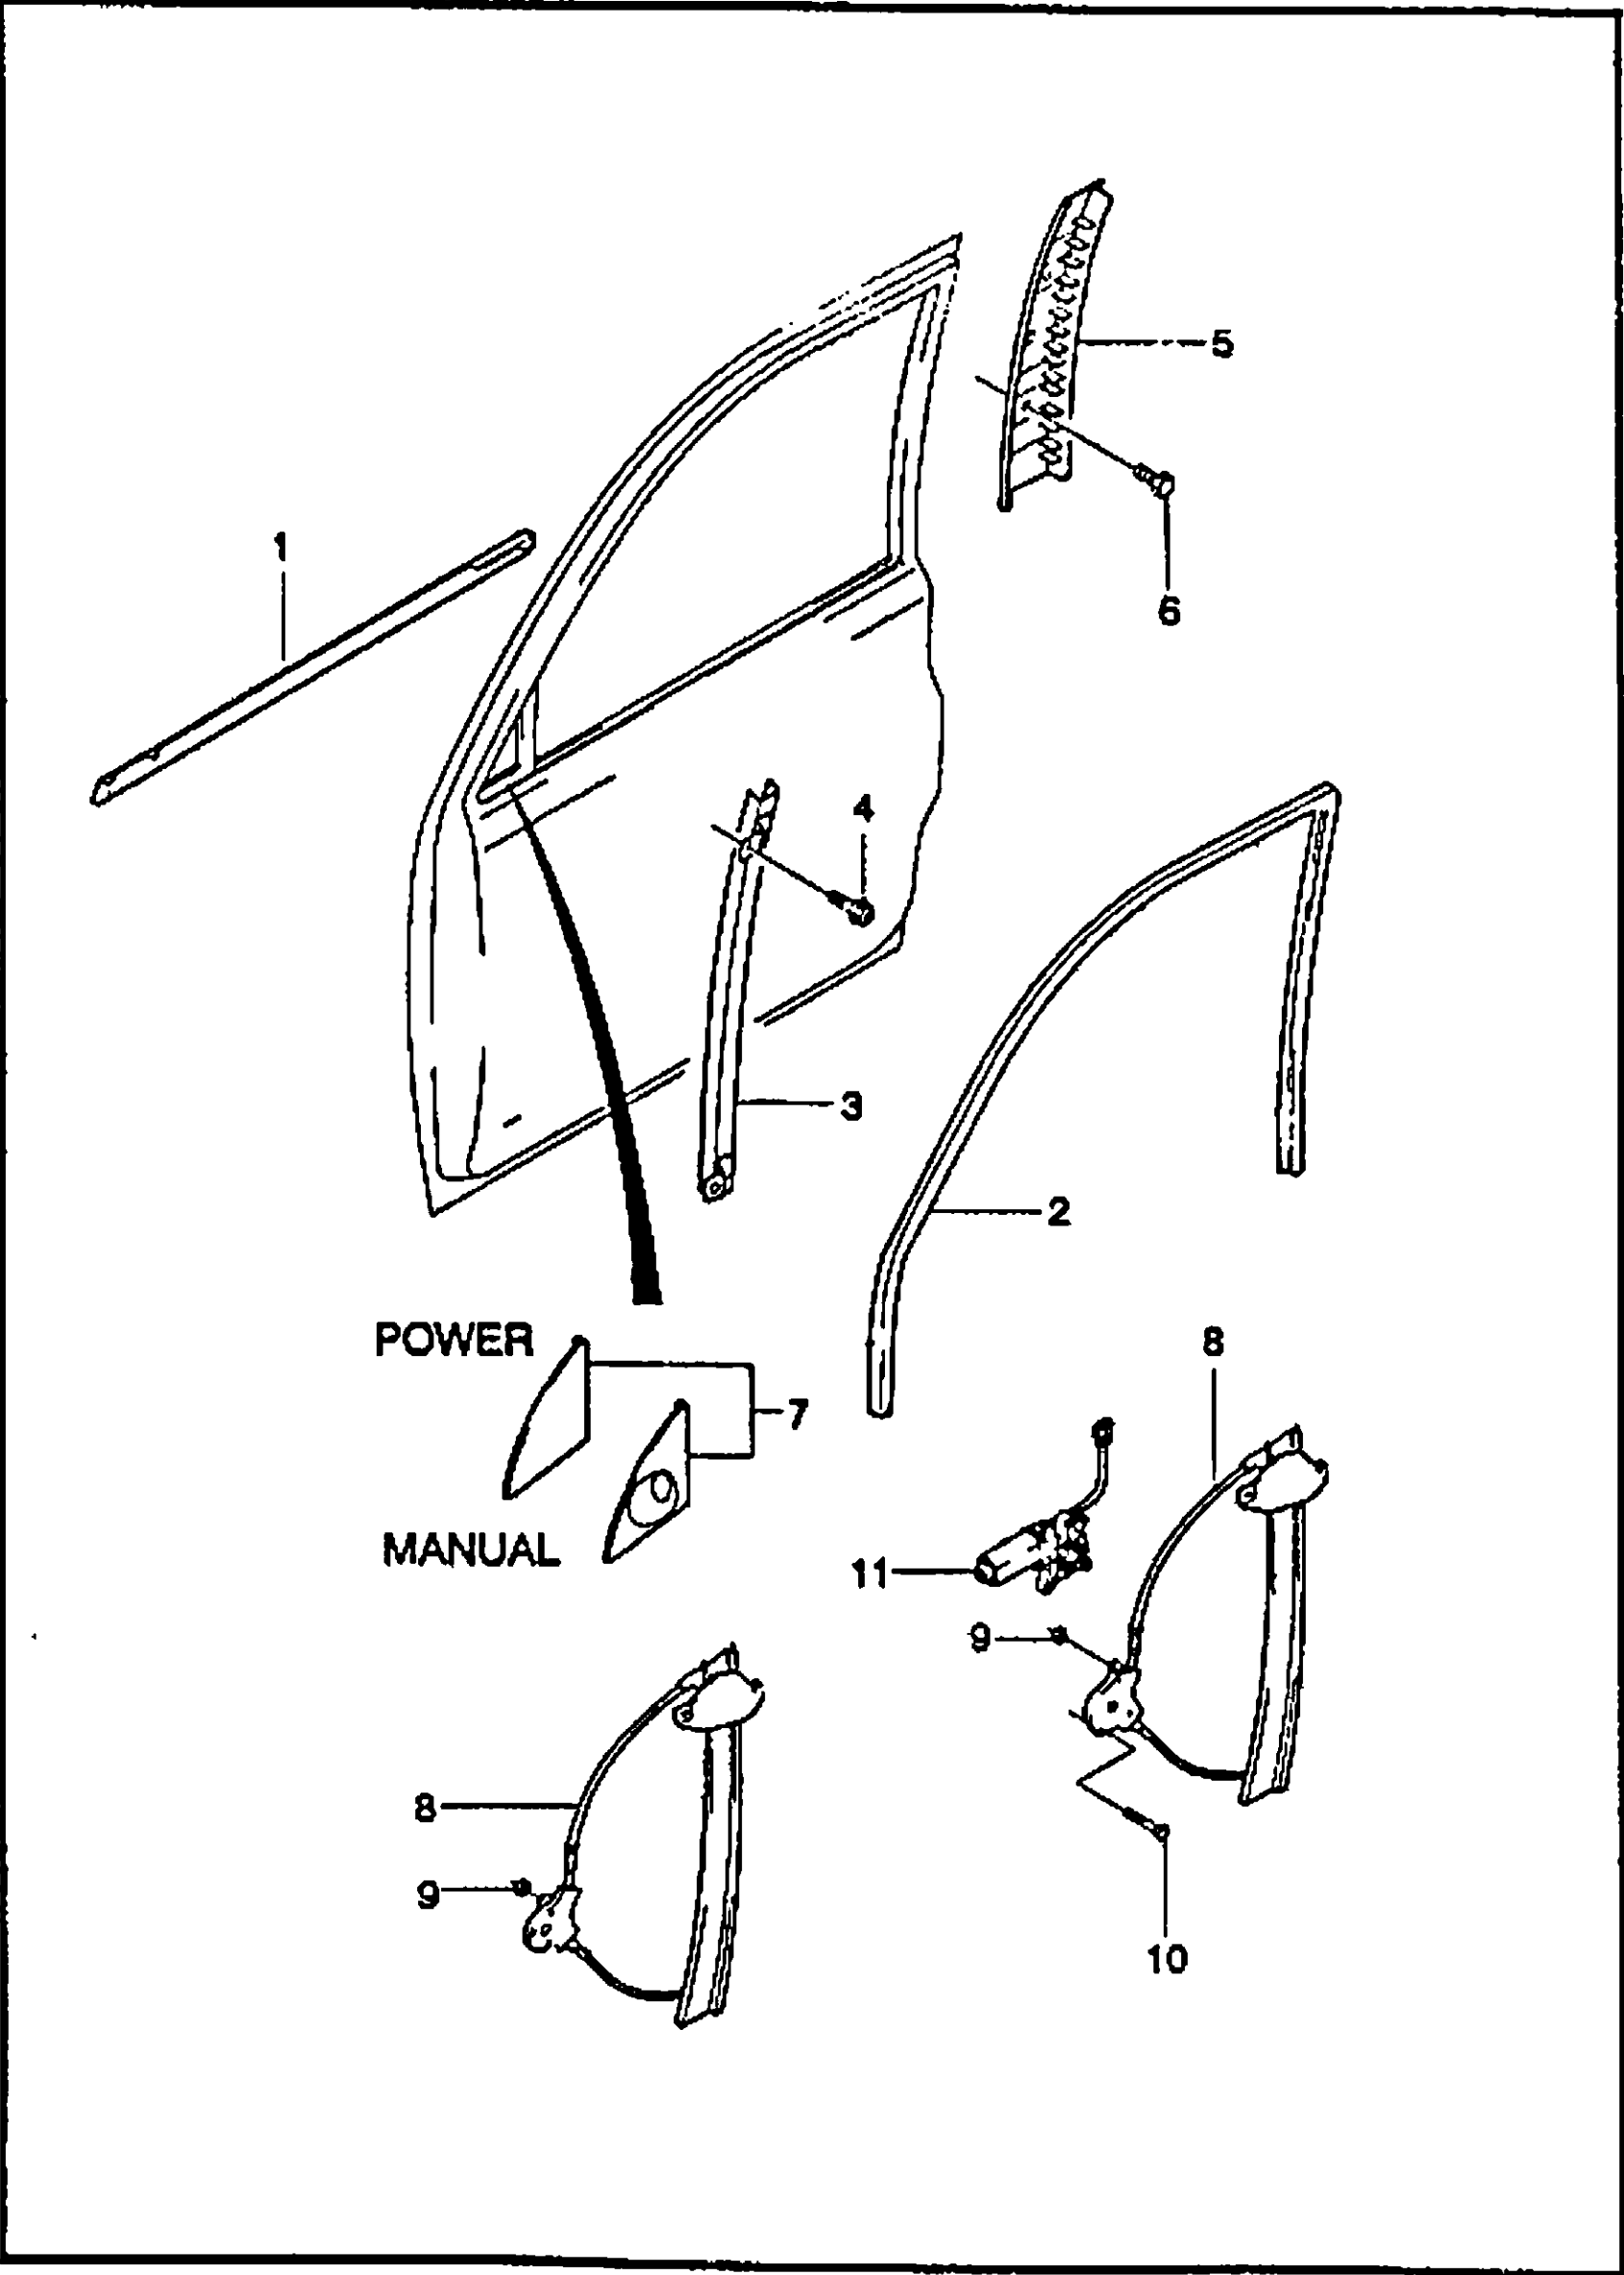


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	[09]	(E)NUT-HEXAGON FLANGE (D)MUTTER									(F)ECROU (S)TUERCA					
	08316-25063	.	.	B	B	B	S	S	.	&A30		12				
	08316-25063	.	.	B	B	B	O	O	S	&A32/A31		14				
	[10]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	96227795	.	.	B	B	B	O	O	S	&A32/A31		6				
	[11]	(E)MOTOR A-POWER WINDOW (D)MOTOR,FENSTERSCHEIBE									(F)MOTEUR (S)MOTOR-VENTANA ELECTRICA					
	96190207	.	.	B	B	B	O	O	S	&A32/A31		LH 1			TC	
	96190208	.	.	B	B	B	O	O	S	&A32/A31		RH 1			TD	
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

6240 FRONT WEATHERSTRIP



5H09

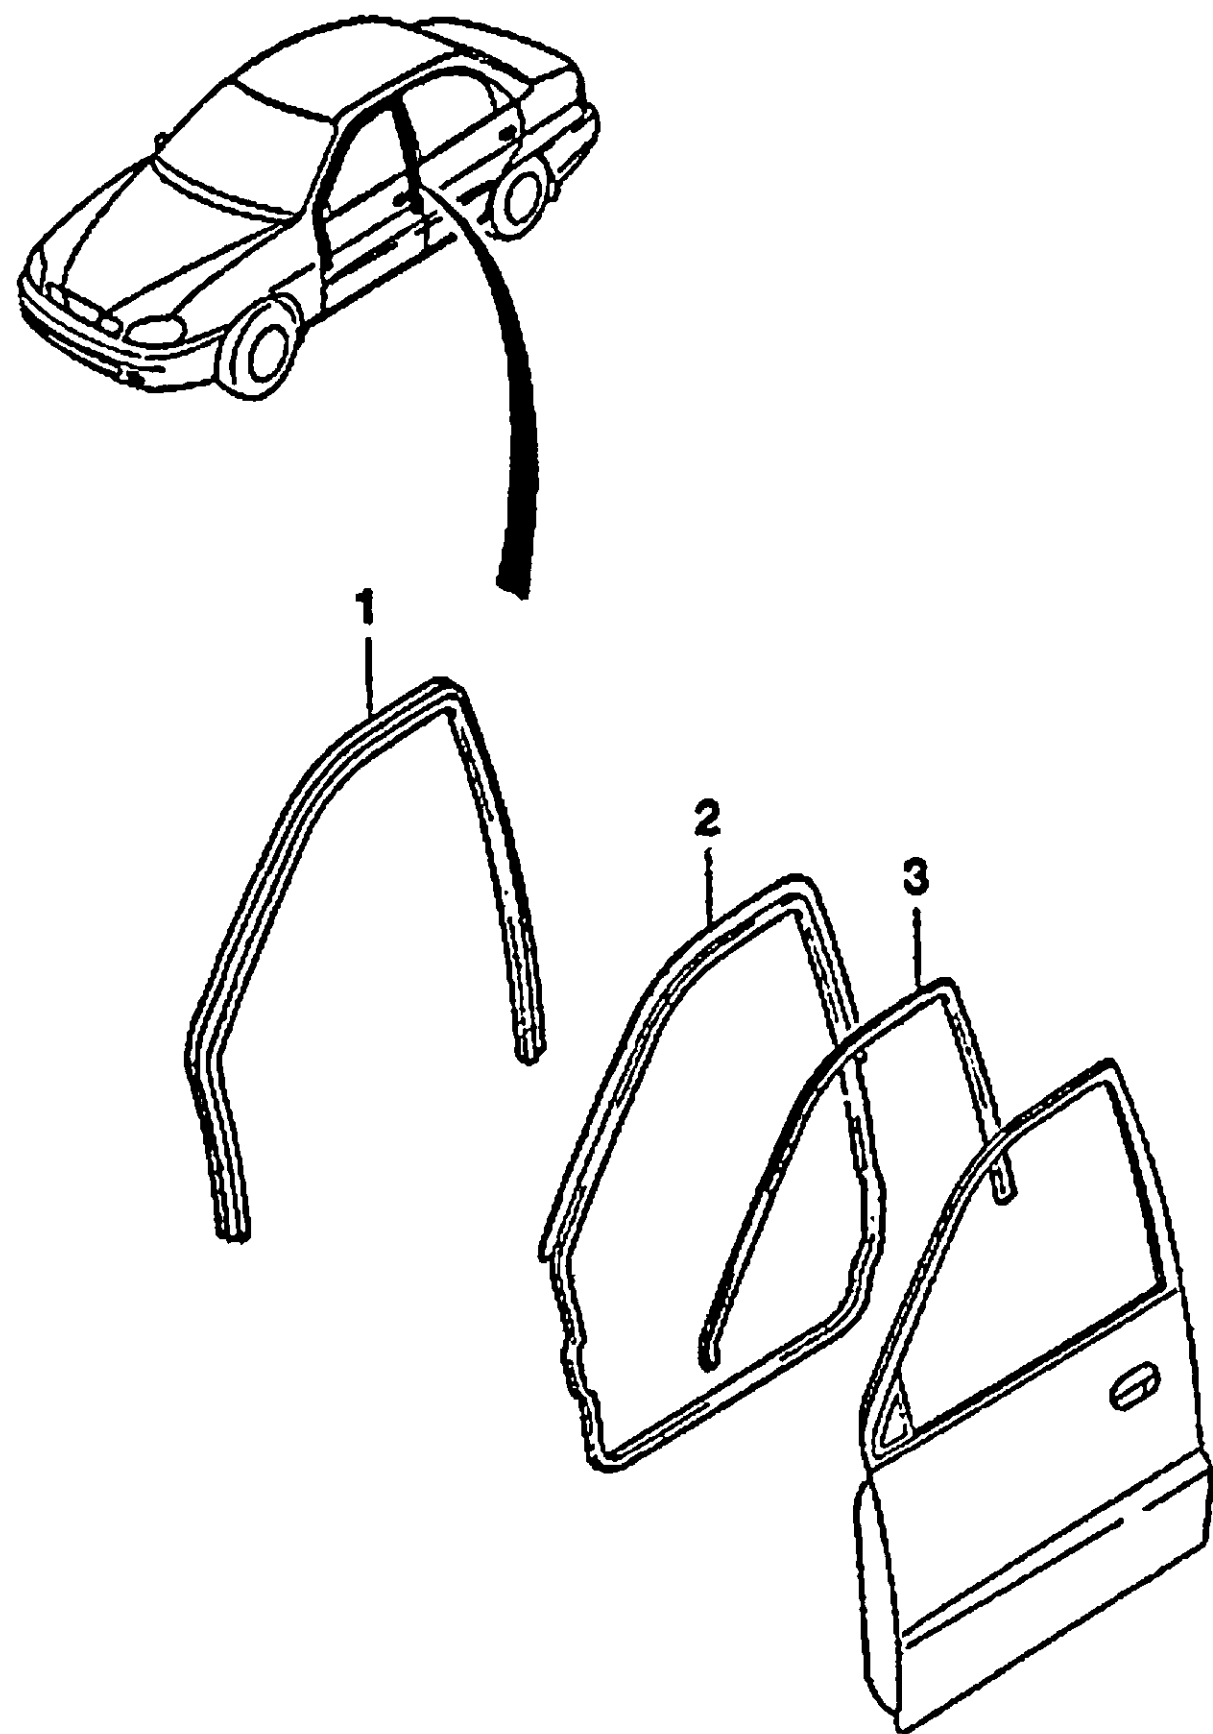


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N H	3 H	5 H	S S								S S
	[01]	(E)COVER-FRT DOOR OPEN FLANG (D)DECKEL									(F)CARTER (S)CUBIERTA				
	96238367	.	.	B	.	B	S	S	S			2			
	96238366	.	.	.	B	.	S	.	S			2			
	[02]	(E)WEATHERSTRIP A FRONT DOOR (D)DICHTUNGSLEISTE									(F)ISOLATION EN BANDELETTE (S)BURLETE				
	96304074	.	.	B	.	B	S	S	S			LH 1			
	96304075	.	.	B	.	B	S	S	S			RH 1			
	96304072	.	.	.	B	.	S	.	S			LH 1			
	96304073	.	.	.	B	.	S	.	S			RH 1			
	[03]	(E)WEATHERSTRIP-FR DOOR,2ND (D)DICHTUNGSLEISTE									(F)ISOLATION EN BANDELETTE (S)BURLETE				
	96304078	.	.	B	.	B	S	S	S			LH 1			
	96304079	.	.	B	.	B	S	S	S			RH 1			
	96304076	.	.	.	B	.	S	.	S			LH 1			
	96304077	.	.	.	B	.	S	.	S			RH 1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

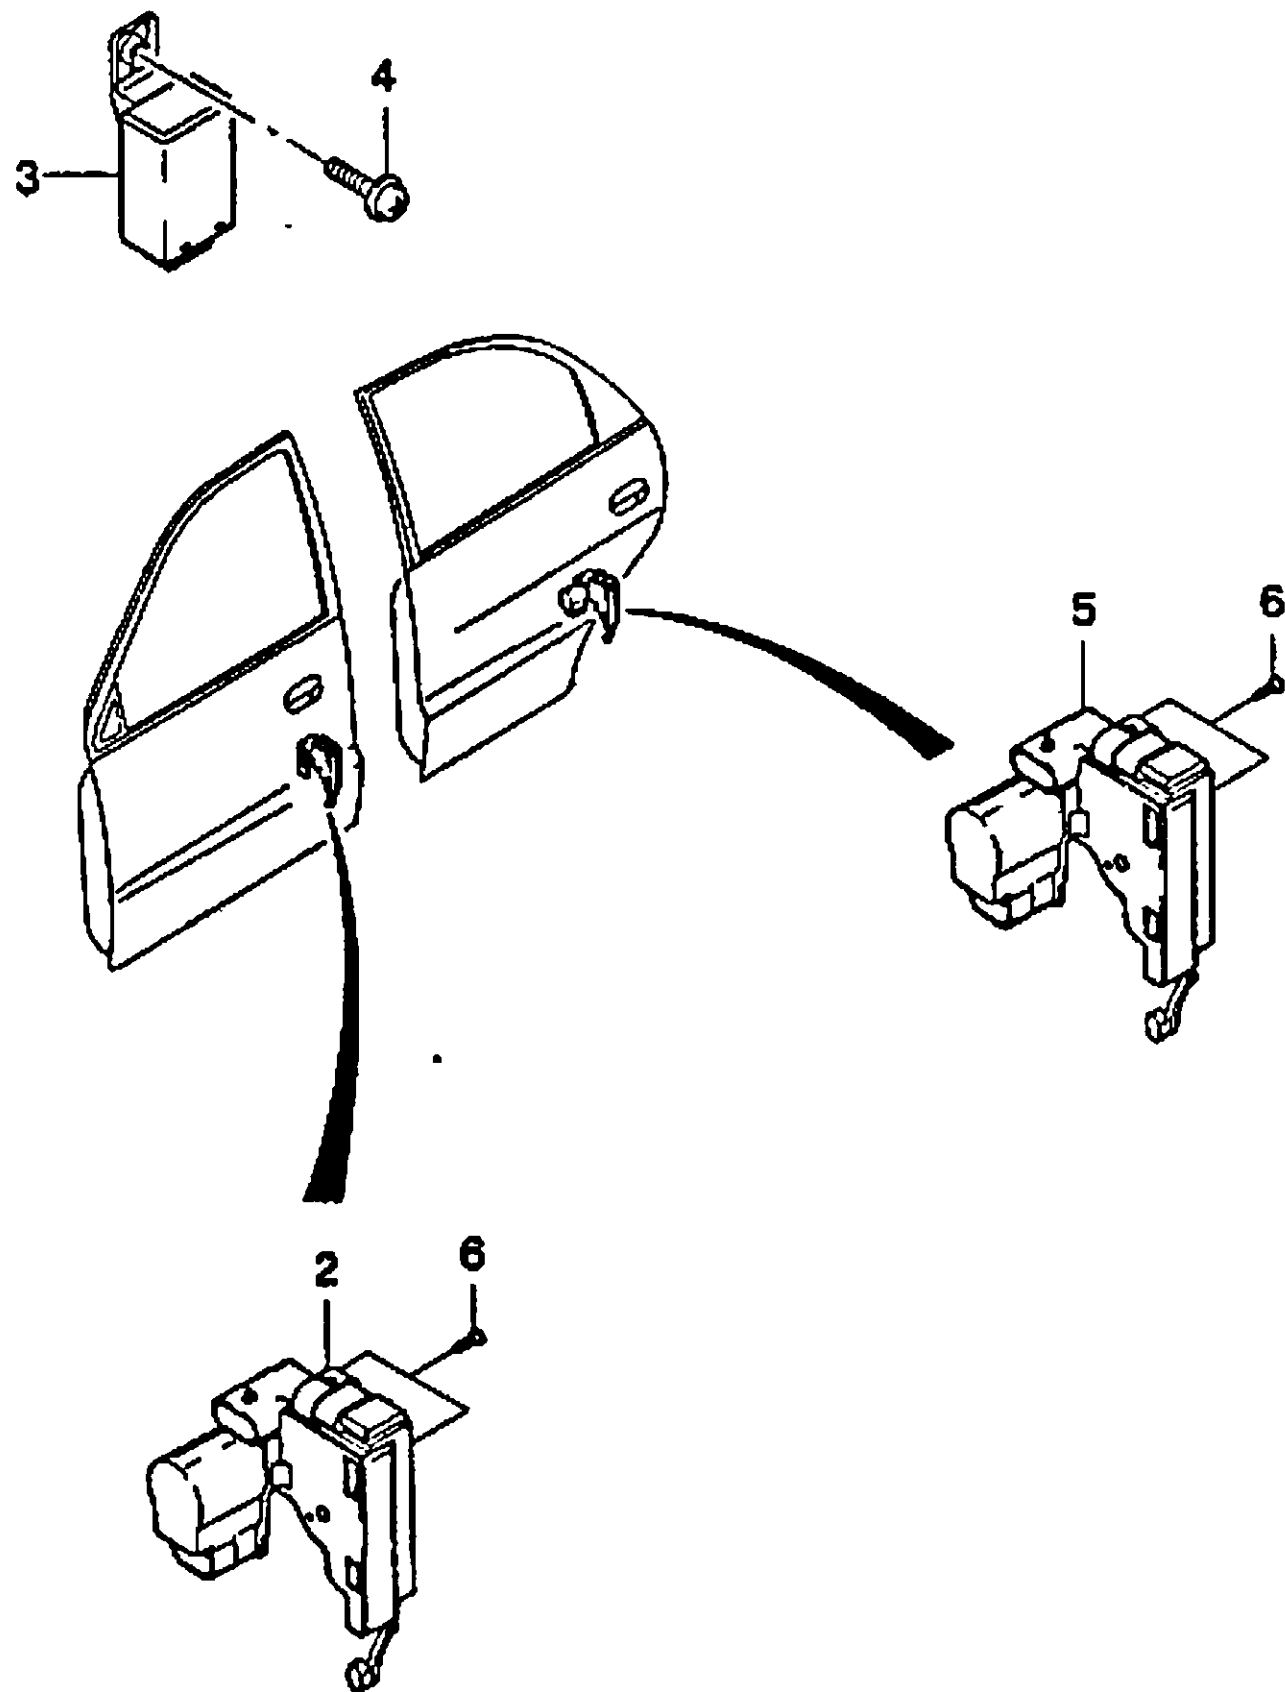


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[02] 96229552	(E)ACTUATOR A-DOOR (D)BETÄTIGUNG	.	.	B	B	B	O	O	S	&AU3	(F)ACTIONNEUR (S)ACTUADOR	1	CO DRIVE		
	[03] 96216279	(E)RELAY A-CENTRAL DOOR LOCK (D)RELAIS	.	.	B	B	B	O	O	S	&AU3	(F)RELA (S)RELEVADOR	1			
	[04] 01517-06123	(E)BOLT (D)SCHRAUBE	.	.	B	B	B	O	O	S	&AU3	(F)BOULON (S)PERNO	1			
	[05] 96229551	(E)ACTUATOR A-DOOR (D)BETÄTIGUNG	.	.	B	.	B	O	O	S	&AU3	(F)ACTIONNEUR (S)ACTUADOR	LH 1			
	96229552	(E)SCREW (D)SCHRAUBE	.	.	B	.	B	O	O	S	&AU3	(F)VIS (S)TORNILLO	RH 1			
	[06] 07-2012-0011		.	.	B	B	B	O	O	S	&AU3		1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

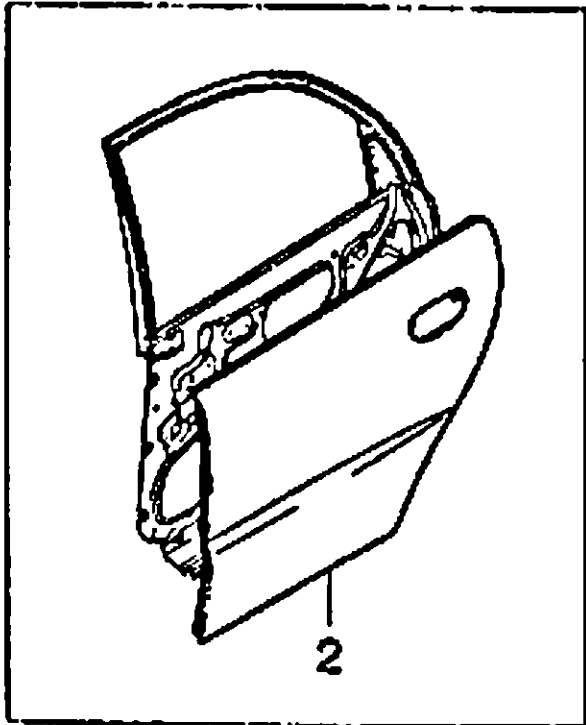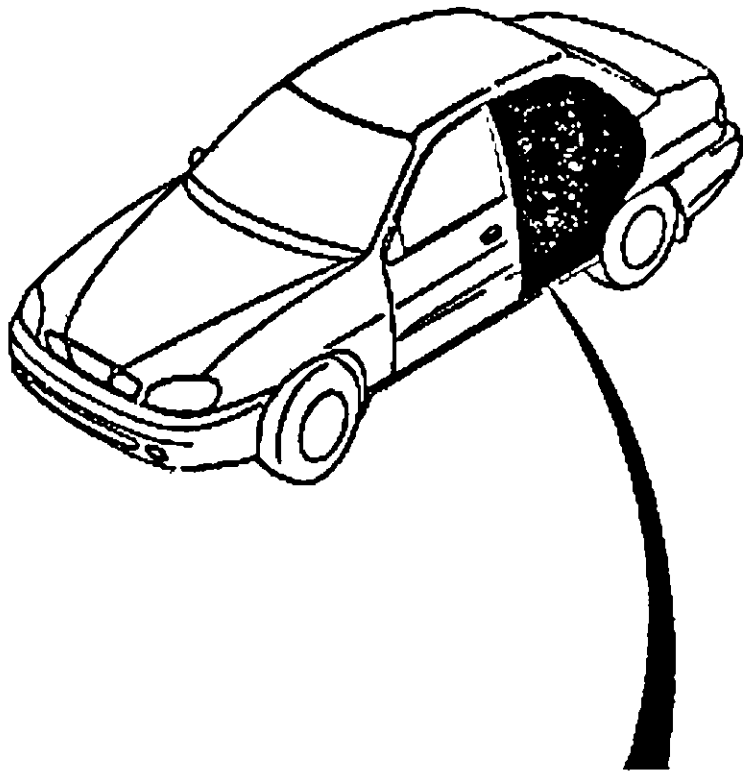


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)PANEL A-REAR DOOR (D)VERKLEIDUNG,HINTERTÜR									(F)PANNEAU-PORTE ARRIERE (S)PANEL-PUERTA TRASERA					
	A96310031	.	.	B	.	B	S	S	S	&XCK	LH	1		RA		
	A96310032	.	.	B	.	B	S	S	S	&XCK	RH	1		R1		
	A96303928	.	.	B	.	B	A	A	A	&XCP	LH	1		RB		
	A96303929	.	.	B	.	B	A	A	A	&XCP	RH	1		R2		
	[02]	(E)PANEL-REAR DOOR OUTER (D)VERKLEIDUNG									(F)PANNEAU (S)PANEL					
	A96310058	.	.	B	.	B	S	S	S	&XCK	LH	1				
	A96310059	.	.	B	.	B	S	S	S	&XCK	RH	1				
	A96303970	.	.	B	.	B	A	A	A	&XCP	LH	1				
	A96303971	.	.	B	.	B	A	A	A	&XCP	RH	1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

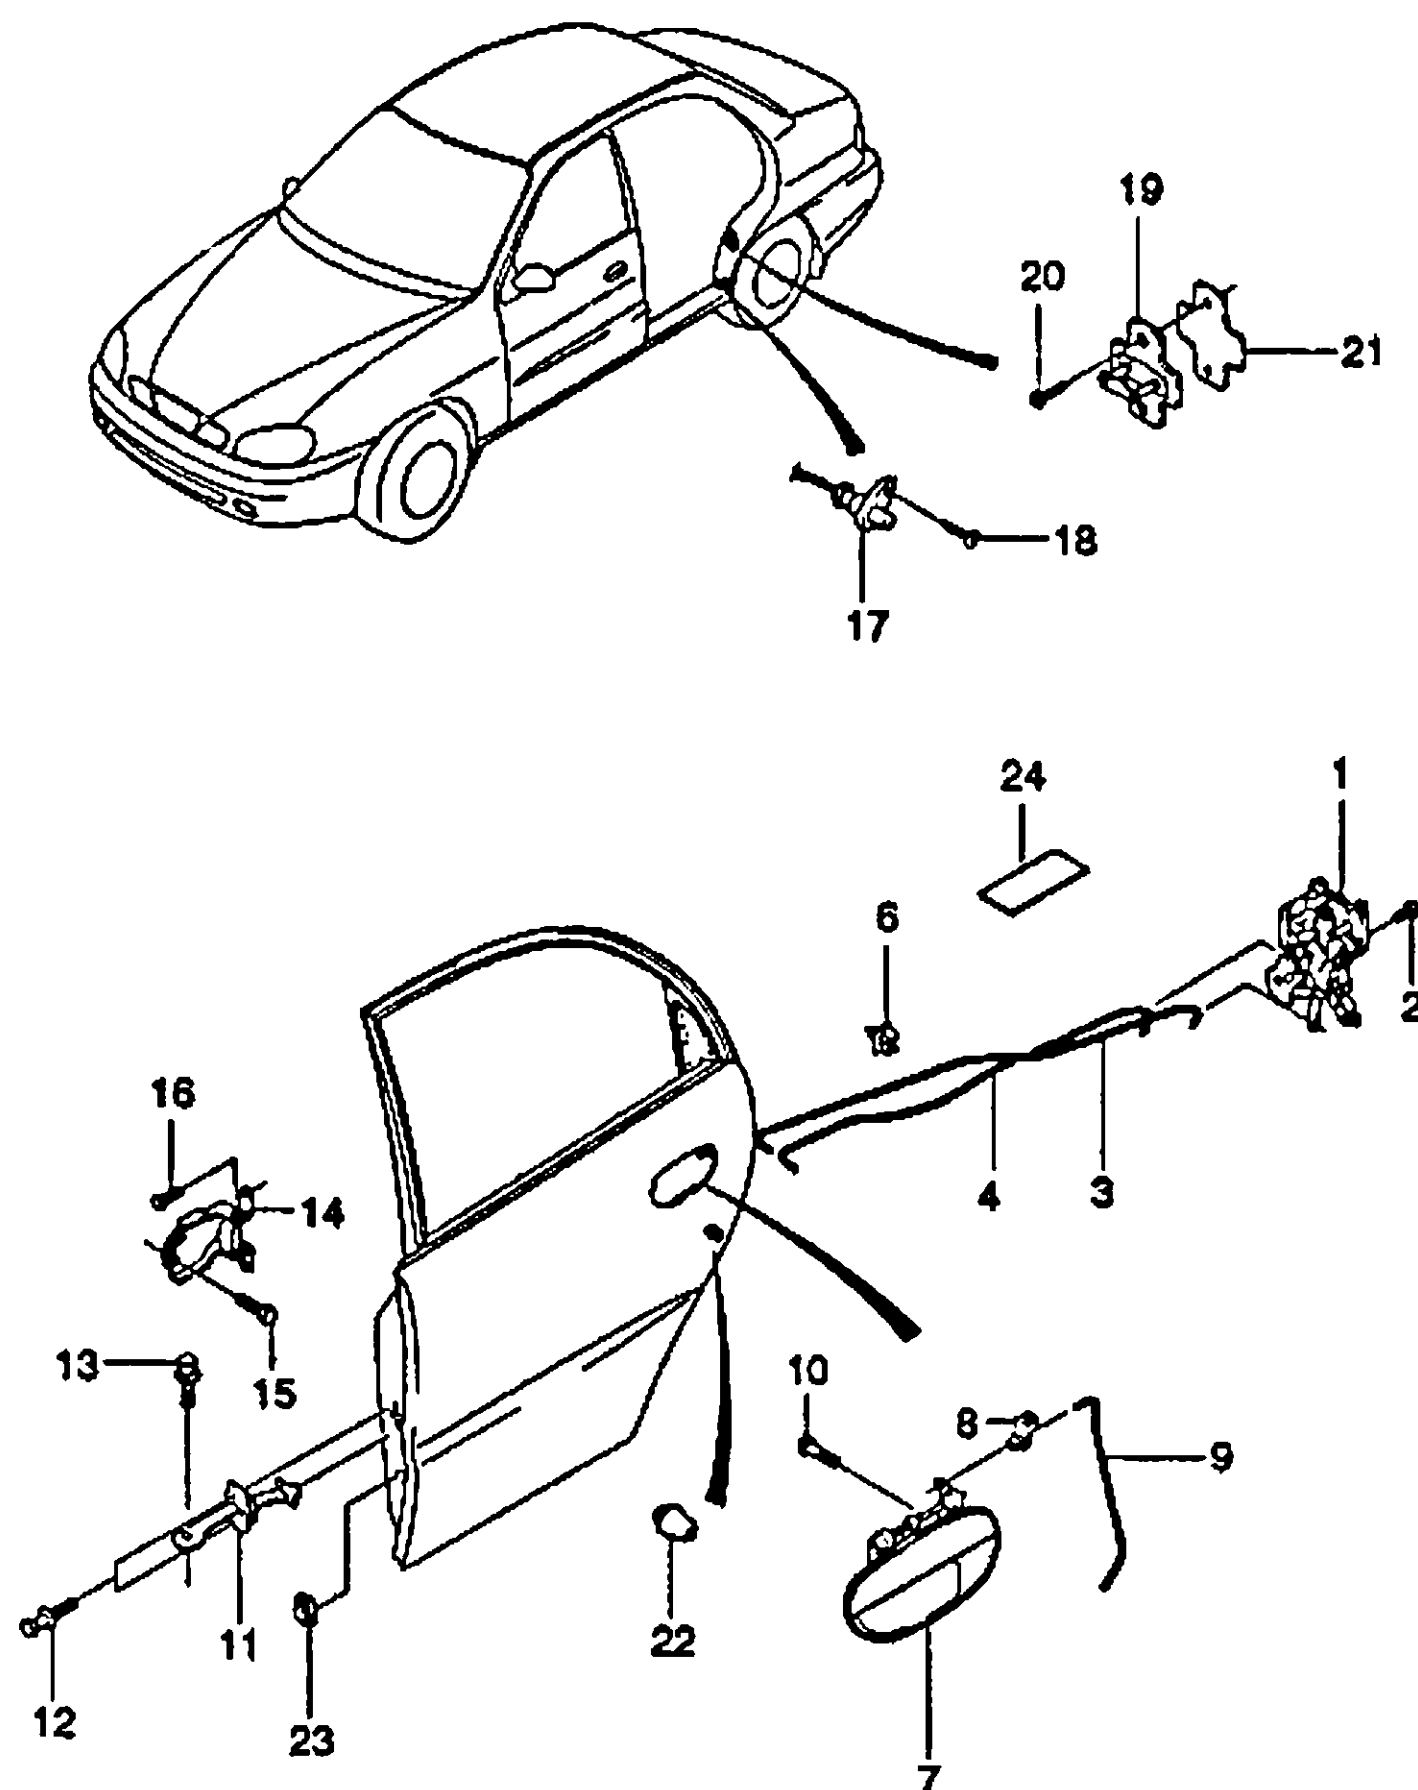


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01]	(E)LATCH A-REAR DOOR (D)VERSCHLUS, HINTERTÜR									(F)LOQUET-PORTE ARRIERE (S)PESTILLO-PUERTA TRASERA					
	96305419	.	.	B	.	B	S	S	.	-AU3	LH	1				
	96305420	.	.	B	.	B	S	S	.	-AU3	RH	1				
	96305413	.	.	B	.	B	O	O	S	&AU3	LH	1				
	96305414	.	.	B	.	B	O	O	S	&AU3	RH	1				
	[02]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	09125-06002	.	.	B	.	B	S	S	S			6				
	[03]	(E)ROD-REAR DOOR LOCKING (D)STAB									(F)TRINGLE (S)VARILLA-CON CIERRE DE PUE					
	96304127	.	.	B	.	B	S	S	S		LH	1				
	96304128	.	.	B	.	B	S	S	S		RH	1				
	[04]	(E)ROD-RR DOOR INSIDE HANDLE (D)STAB									(F)TRINGLE (S)VARILLA					
	96304125	.	.	B	.	B	S	S	S		LH	1				
	96304126	.	.	B	.	B	S	S	S		RH	1				
	[06]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	09408-00021	.	.	B	.	B	S	S	S			2				
	[07]	(E)HANDLE A-RR DOOR OUTSIDE (D)HENKEL, TÜR, AUSEN									(F)POIGNEE-EXTERIEURE PORTE (S)MANIJA-EXTERNA PUERTA					
	96226329	.	.	B	.	B	S	S	S		LH	1		NE		
	96226330	.	.	B	.	B	S	S	S		RH	1		NF		
	[08]	(E)CLAMP (D)KLAMMER									(F)PINCE (S)ABRAZADERA					
	09403-04301	.	.	B	.	B	S	S	S			2				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

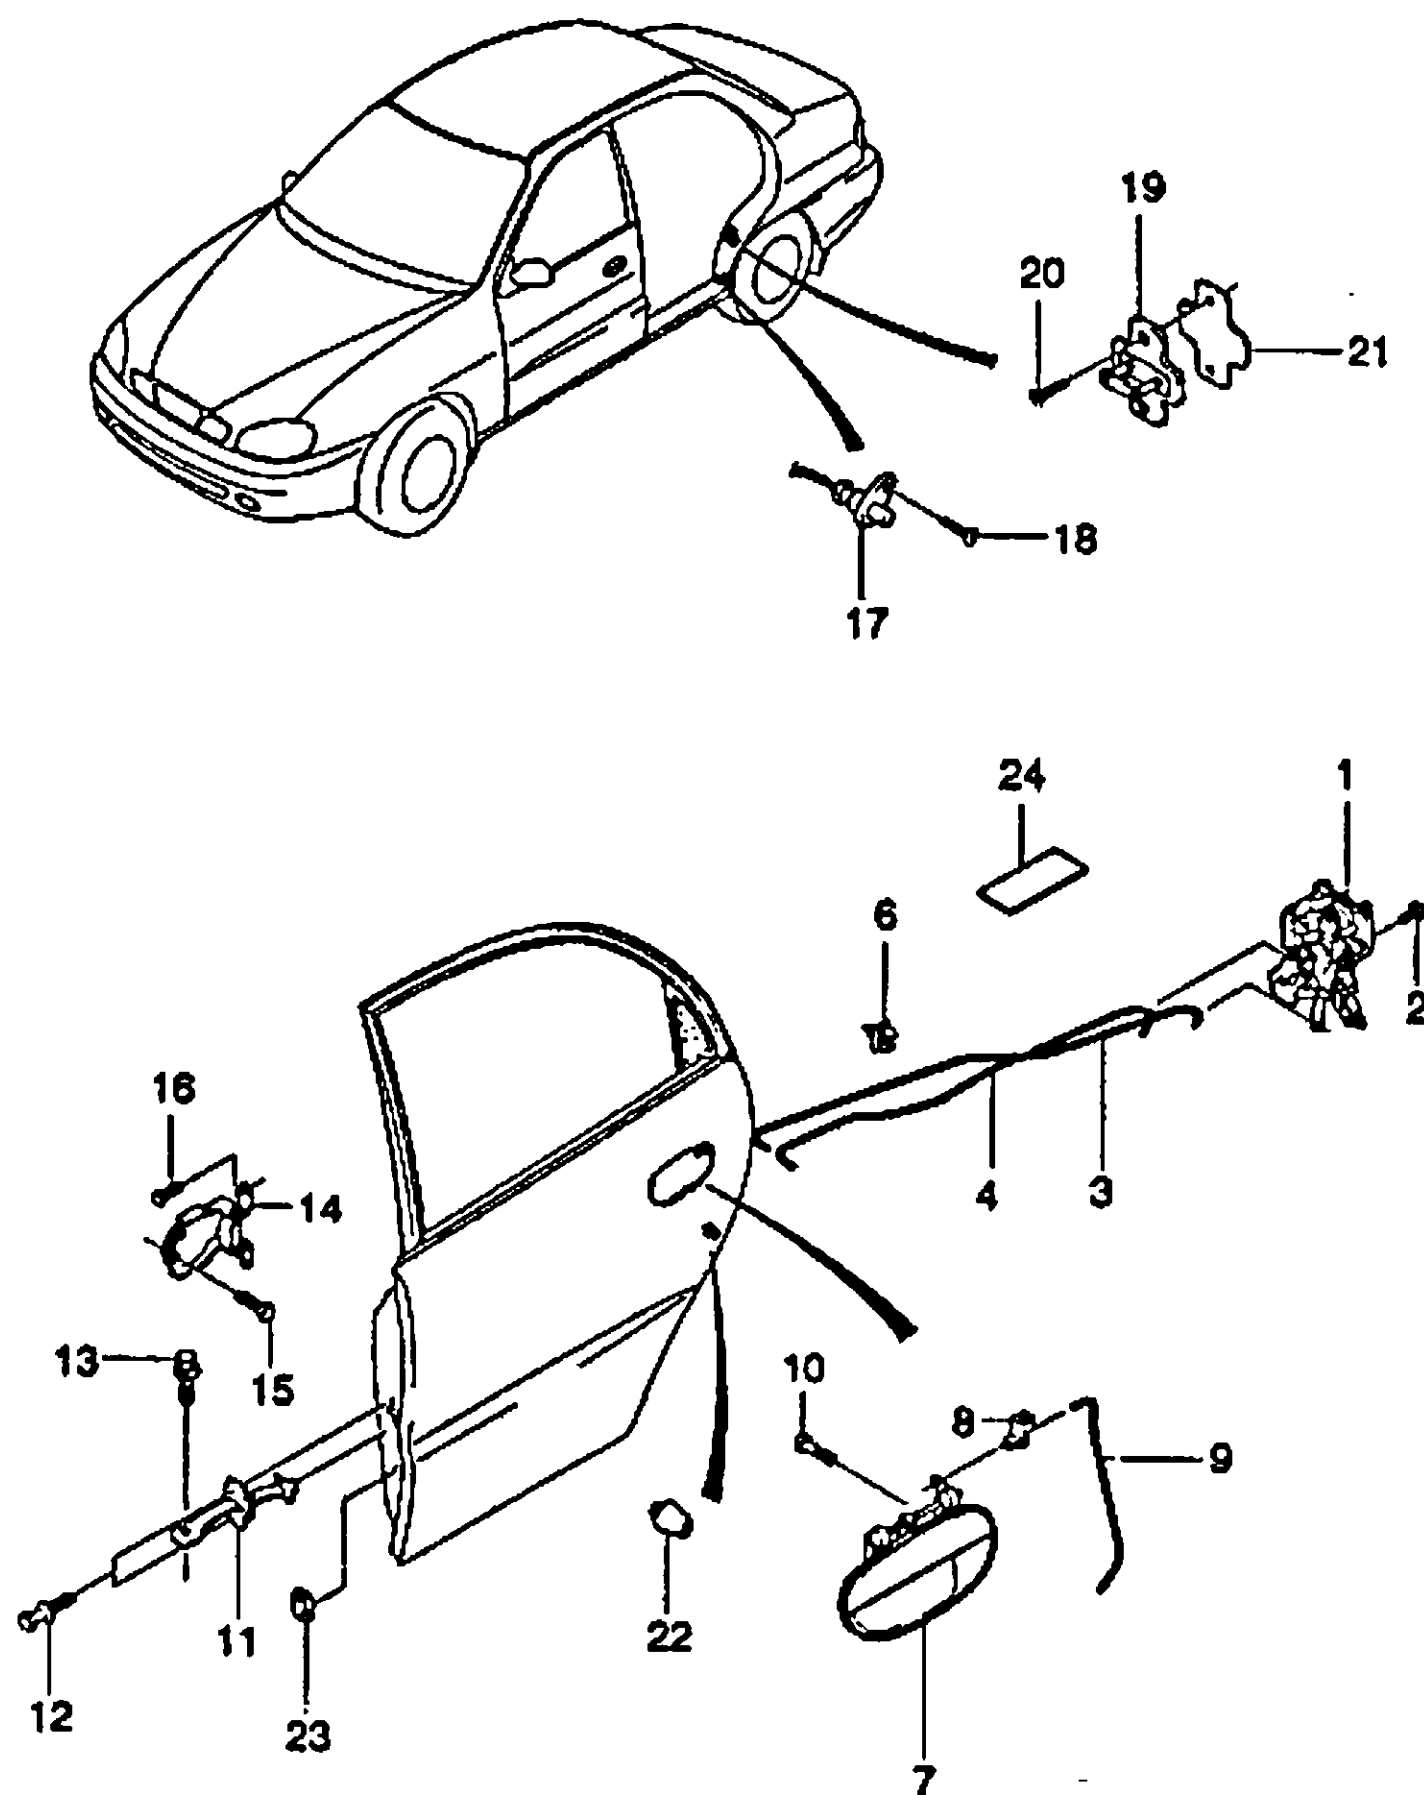

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q / T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[09] 96304110	(E)ROD-RR DOOR OUTSIDE HANDL (D)STAB,AUßEN-GRIFF	. .	B .	B .	S S S	S S S		(F)TRINGLE (S)VARILLA-MANJA EXTERNA	2					
	[10] 01114-06103	(E)BOLT-HEXAGON (D)SCHRAUBE	. .	B .	B .	S S S	S S S		(F)BOULON (S)PERNO	4					
	[11] 96304088 96304089	(E)CHECK A-REAR DOOR (D)TÜR-PRÜF	. .	B .	B .	S S S	S S S		(F)ARRET-PORTE (S)PUERTA DE VERIFICAR	LH 1 RH 1					
	[12] 01117-06162	(E)BOLT-HEXAGON (D)SCHRAUBE	. .	B .	B .	S S S	S S S		(F)BOULON (S)PERNO	4					
	[13] 09118-08003 Y 09118-08009	(E)BOLT (D)SCHRAUBE	. .	B .	B .	S S S	S S S		(F)BOULON (S)PERNO	2 2	970512 970512	WWASHER WWASHER			
	[14] 96224312 96224313 96224313 96224312	(E)HINGE A-REAR DOOR (D)BESCHLAG,HINTERTÜR	. .	B .	B .	S S S	S S S		(F)CHARNIERE-PORTE ARRIERE (S)BISAGRA-PUERTA	LH 1 LH 1 RH 1 RH 1		UPPER LOWER UPPER LOWER	HA HE HE HA		
	[15] 09118-08008	(E)BOLT (D)SCHRAUBE	. .	B .	B .	S S S	S S S		(F)BOULON (S)PERNO	8		WWASHER			
	[16]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE							(F)BOULON (S)PERNO						
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

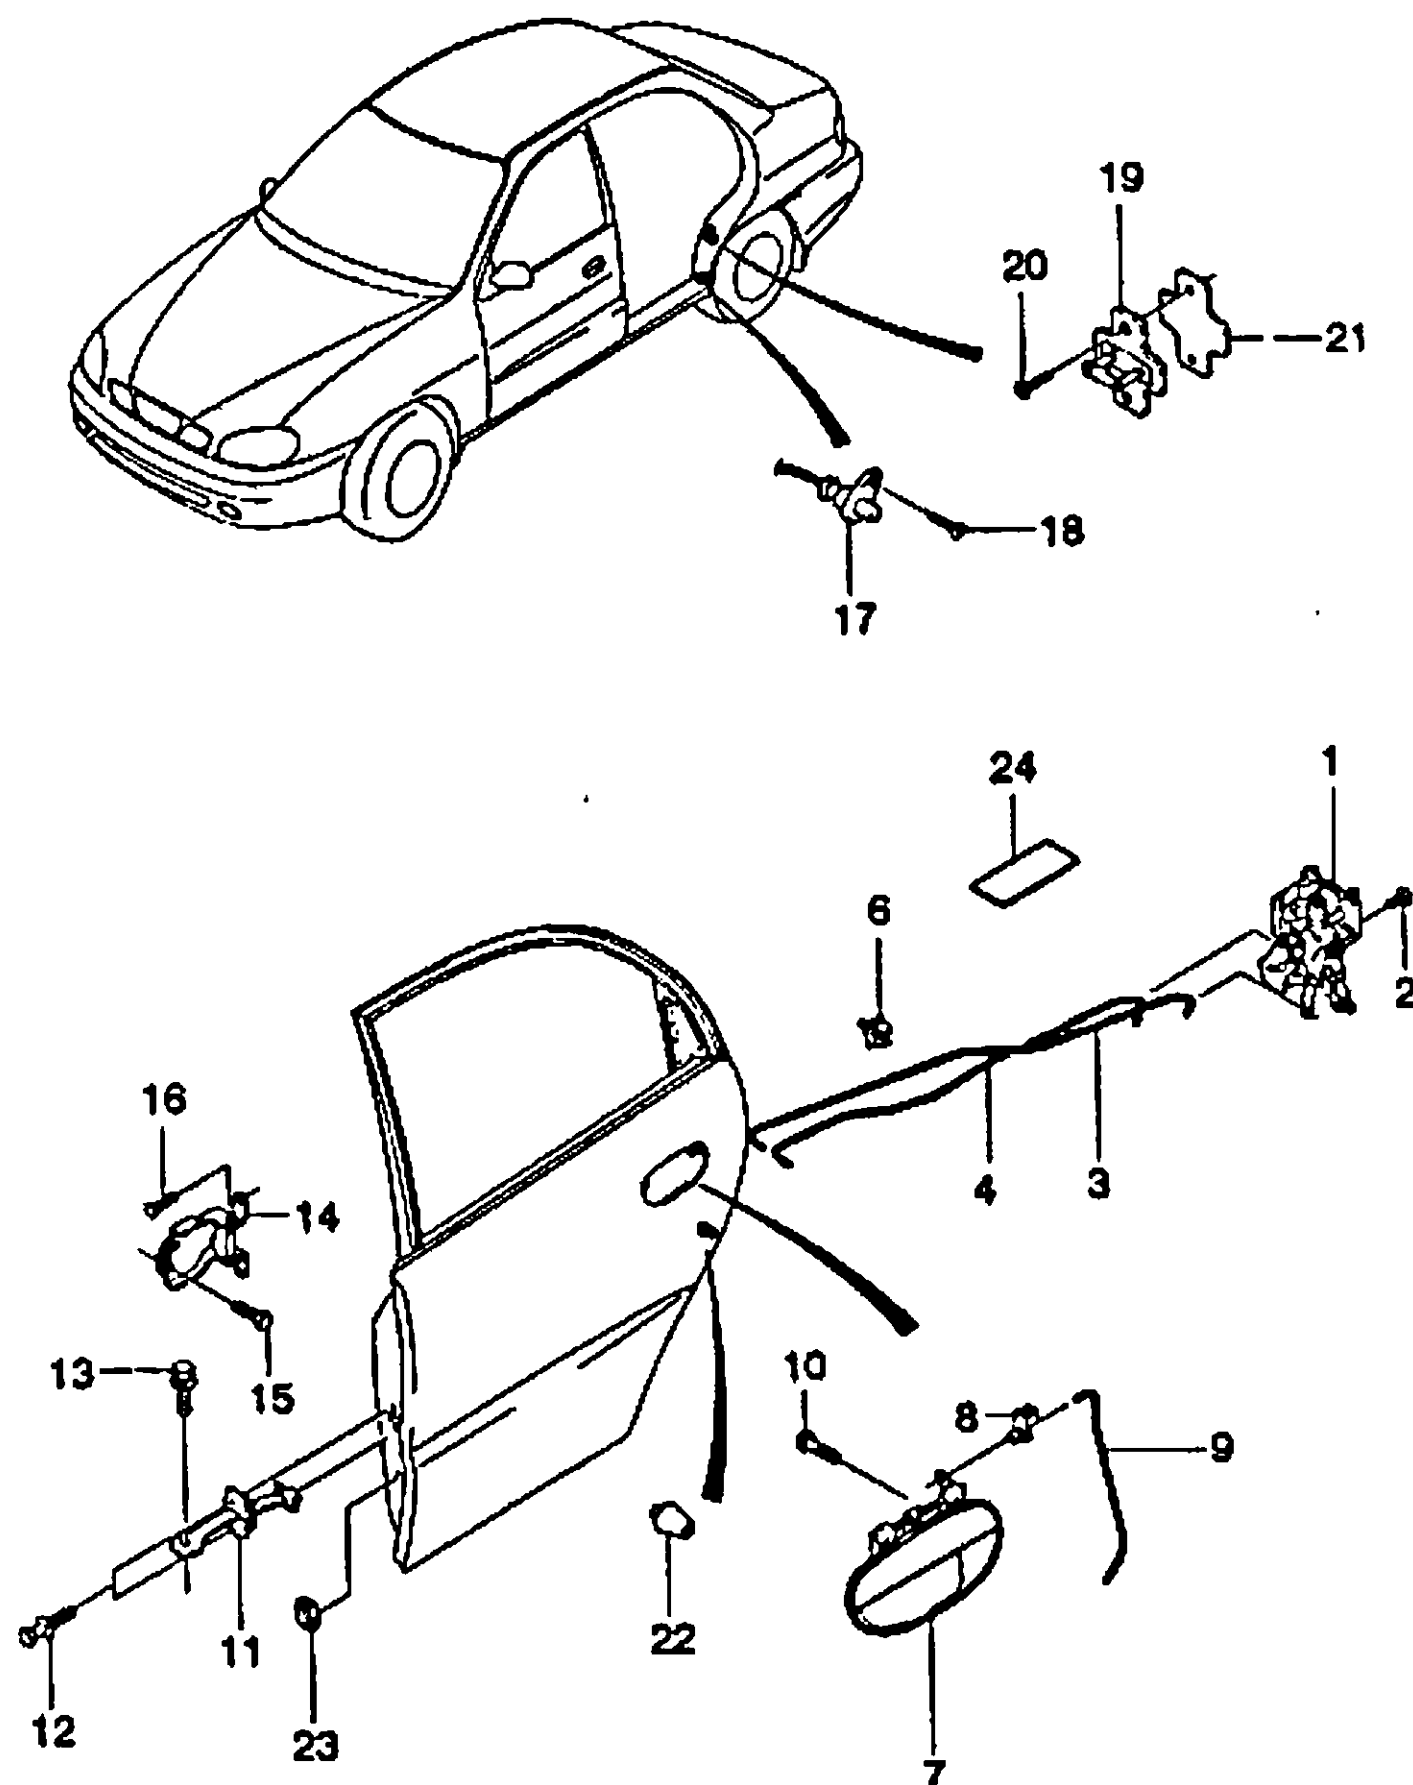

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	09103-08018	.	.	B	.	B	S	S	S	S			8			
	[17]	(E)SWITCH A-DOOR CONTACT (D)SCHALTER,TÜR KONTAKT														
	96235956	.	.	B	.	B	S	S	S	S			2			
	[18]	(E)SCREW-TAPPING (D)SCHRAUBE														
	03170-42095	.	.	B	.	B	S	S	S	S			2			
	[19]	(E)STRIKER A-DOOR (D)SCHLÄGER														
	96301668	.	.	B	.	B	S	S	S	S			2			
	[20]	(E)BOLT (D)SCHRAUBE														
	09119-08026	.	.	B	.	B	S	S	S	S			4			
	[21]	(E)WASHER-DISTANCE (D)DICHTUNGSRING,DISTANZ														
	96216377	.	.	B	.	B	S	S	S	S			2			
	[22]	(E)BUMPER-TRUNK LID,LWR (D)STOßSTANGE														
	96169620	.	.	B	.	B	S	S	S	S			2			
	[23]	(E)PLUG-REAR DOOR (D)STÖPSEL														
	96236225	.	.	B	.	B	S	S	S	S	AU3		2			
	[24]	(E)STRIP-INSULATING (D)AUSZIEHEN														
	96249231	.	.	B	.	B	S	S	S	S			2			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								




KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)MOLDING-RR DR OTR CHANNEL (D)MOLDURA-PUERTA TRASERA									(F)MOULURE-PORTE ARRIERE (S)PRESTEIL,HINTERTÜR				
	96304162	. . B . B S S S								LH 1					
	96304163	. . B . B S S S								RH 1					
	[02]	(E)GLASS RUN-REAR DOOR (D)RILLE,SCHEIBE,ABLAUF									(F)RAINURE-CHEMIN DE GLACE (S)CANAL-CORRIDA DE VIDRIO				
	96304158	. . B . B S S S								LH 1					
	96304159	. . B . B S S S								RH 1					
	[03]	(E)RAIL A-REAR DOOR GUIDE,RR (D)SCHIENE,FÜHRUNG									(F)RAIL-GUIDE (S)RIEL-GUIA				
	96247142	. . B . B S S S								LH 1					
	96247143	. . B . B S S S								RH 1					
	[04]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09116-06034	. . B . B S S S								4		W/WASHER			
	[06]	(E)GARNISH A-RR DOOR, CENTER (D)VERZIERUNG									(F)GARNITURE (S)ORNAMENTO				
	96304726	. . B . B S S S								LH 1					
	96304727	. . B . B S S S								RH 1					
	[07]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03111-42132	. . B . B S S S								6					
	[08]	(E)COVER-WINDOW FRAME INNER (D)DECKEL,FENSTERRAHMEN									(F)COUVERTURE (S)CUBIERTA-MARCO DE VENTANA				
	96238369	. . B . B S S S								LH 1	971001				
O	96256348	. . B . B S S S								LH 1	971001				
	96238370	. . B . B S S S								RH 1	971001				


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

6330 REAR WINDOW LIFTER


5C10

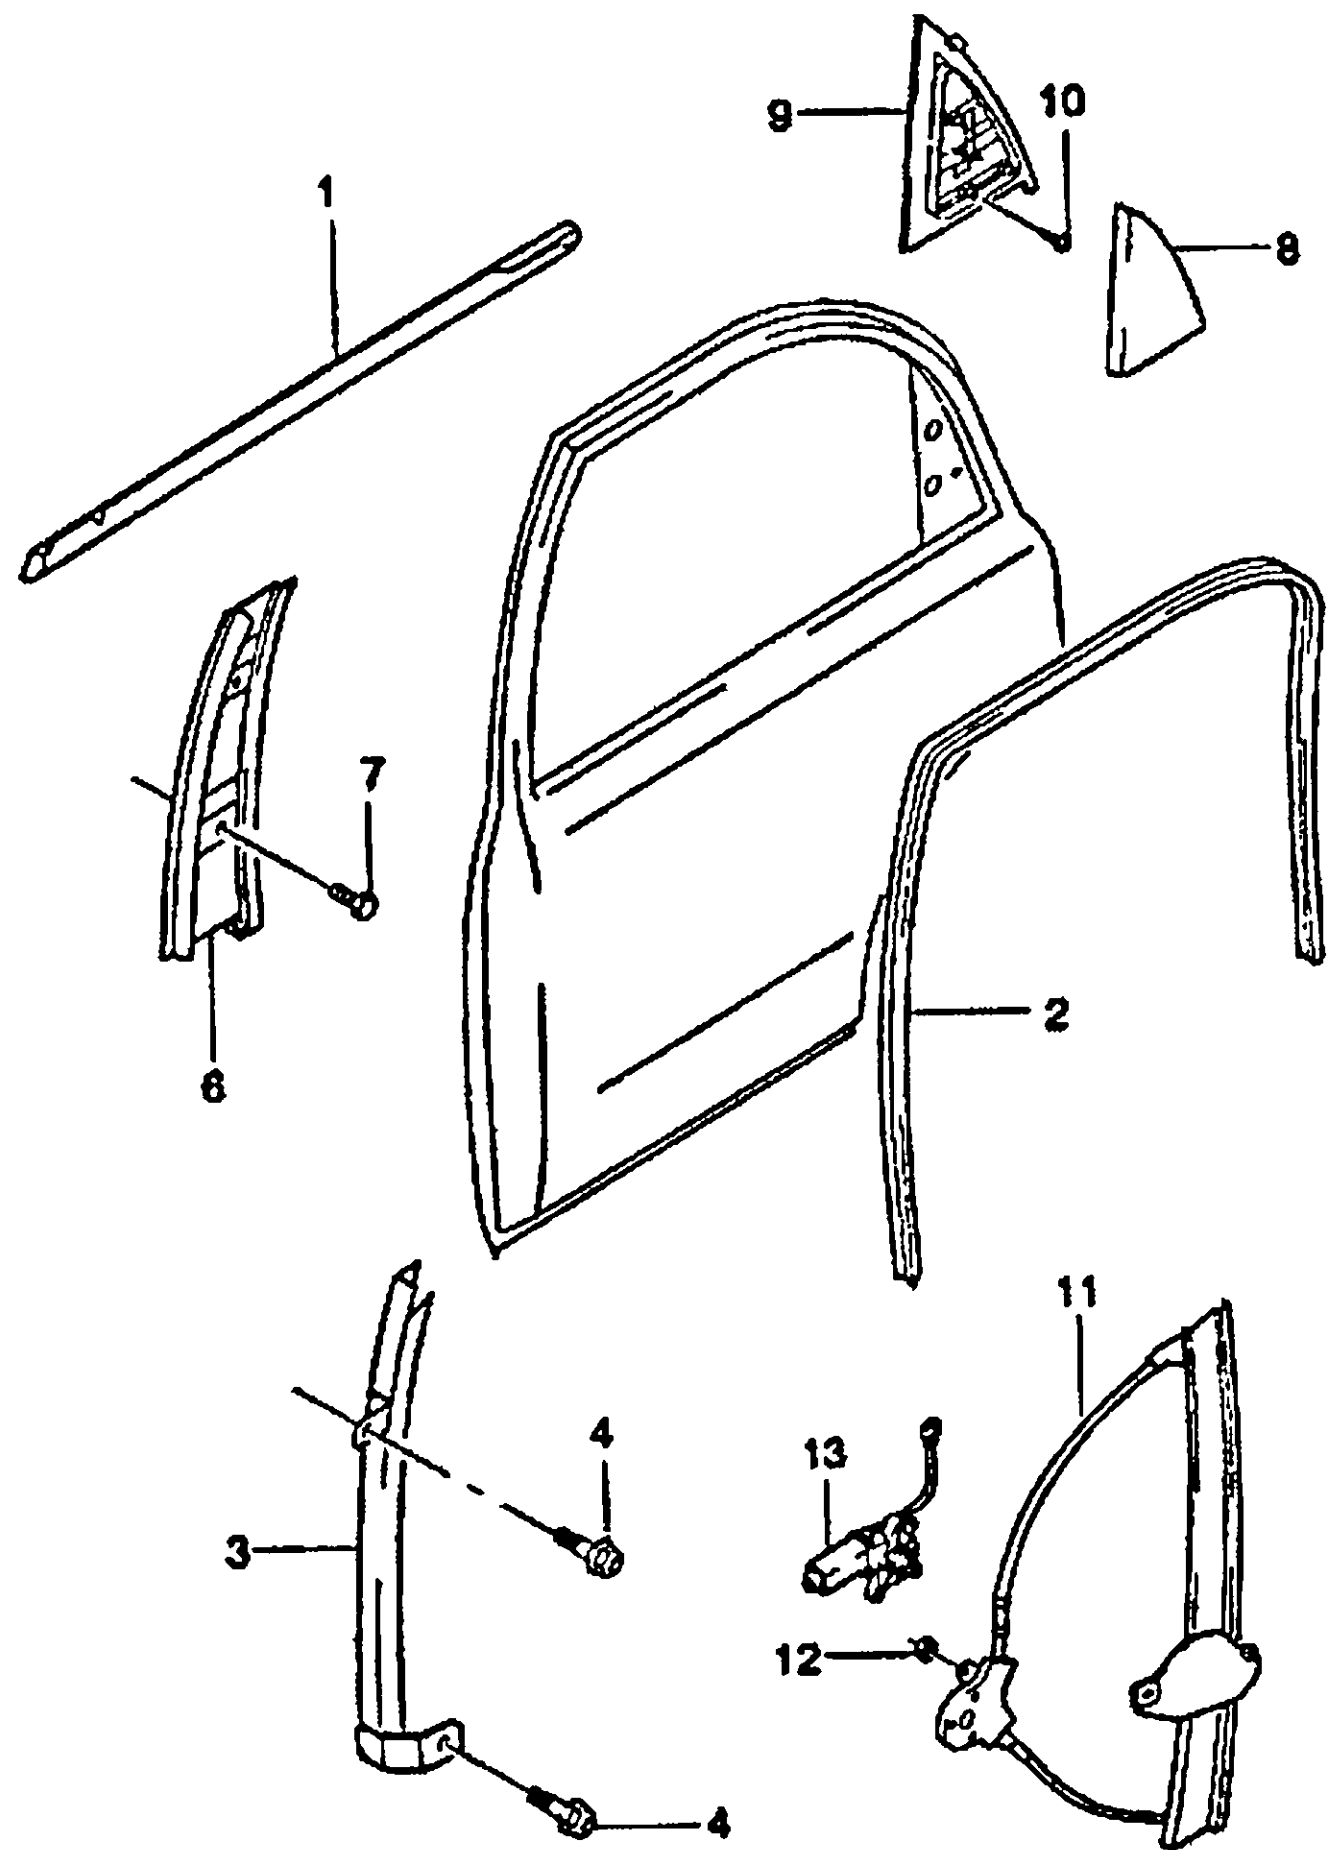




KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N G	3 H	5 H	S S								S S
O	96256349	.	.	B	.	B	S	S	S		RH	1	971001		
	[09]	(E)		GARNISH A-REAR DOOR, REAR								(F)	GARNITURE		
		(D)		VERZIERUNG								(S)	ORNAMENTO		
	96304733	.	.	B	.	B	S	S	S		LH	1			
	96304734	.	.	B	.	B	S	S	S		RH	1			
	[10]	(E)		SCREW-TAPPING								(F)	VIS		
		(D)		SCHRAUBE								(S)	TORNILLO		
	03140-42136	.	.	B	.	B	S	S	S			6			
	[11]	(E)		REGULATOR A-RR DOOR WDO								(F)	REGULATEUR		
		(D)		REGULATOR								(S)	REGULADOR		
	96304132	.	.	B	.	B	S	S	S	&A30/A32	LH	1			A1
	96304134	.	.	B	.	B	S	S	S	&A30/A32	RH	1			A2
	96245711	.	.	B	.	B	.	O	O	&A31	LH	1			
	96245712	.	.	B	.	B	.	O	O	&A31	RH	1			
	[12]	(E)		NUT-HEXAGON FLANGE								(F)	ECROU		
		(D)		MUTTER								(S)	TUERCA		
	08316-25063	.	.	B	.	B	S	S	S	&A30/A32		12			
	08316-25063	.	.	B	.	B	.	O	O	&A31		14			
	[13]	(E)		MOTOR A-POWER WINDOW								(F)	MOTEUR		
		(D)		MOTOR,FENSTERSCH EIBE								(S)	MOTOR-VENTANA ELECTRICA		
	96190207	.	.	B	.	B	.	O	O	&A31	LH	1			TC
	96190208	.	.	B	.	B	.	O	O	&A31	RH	1			TD
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

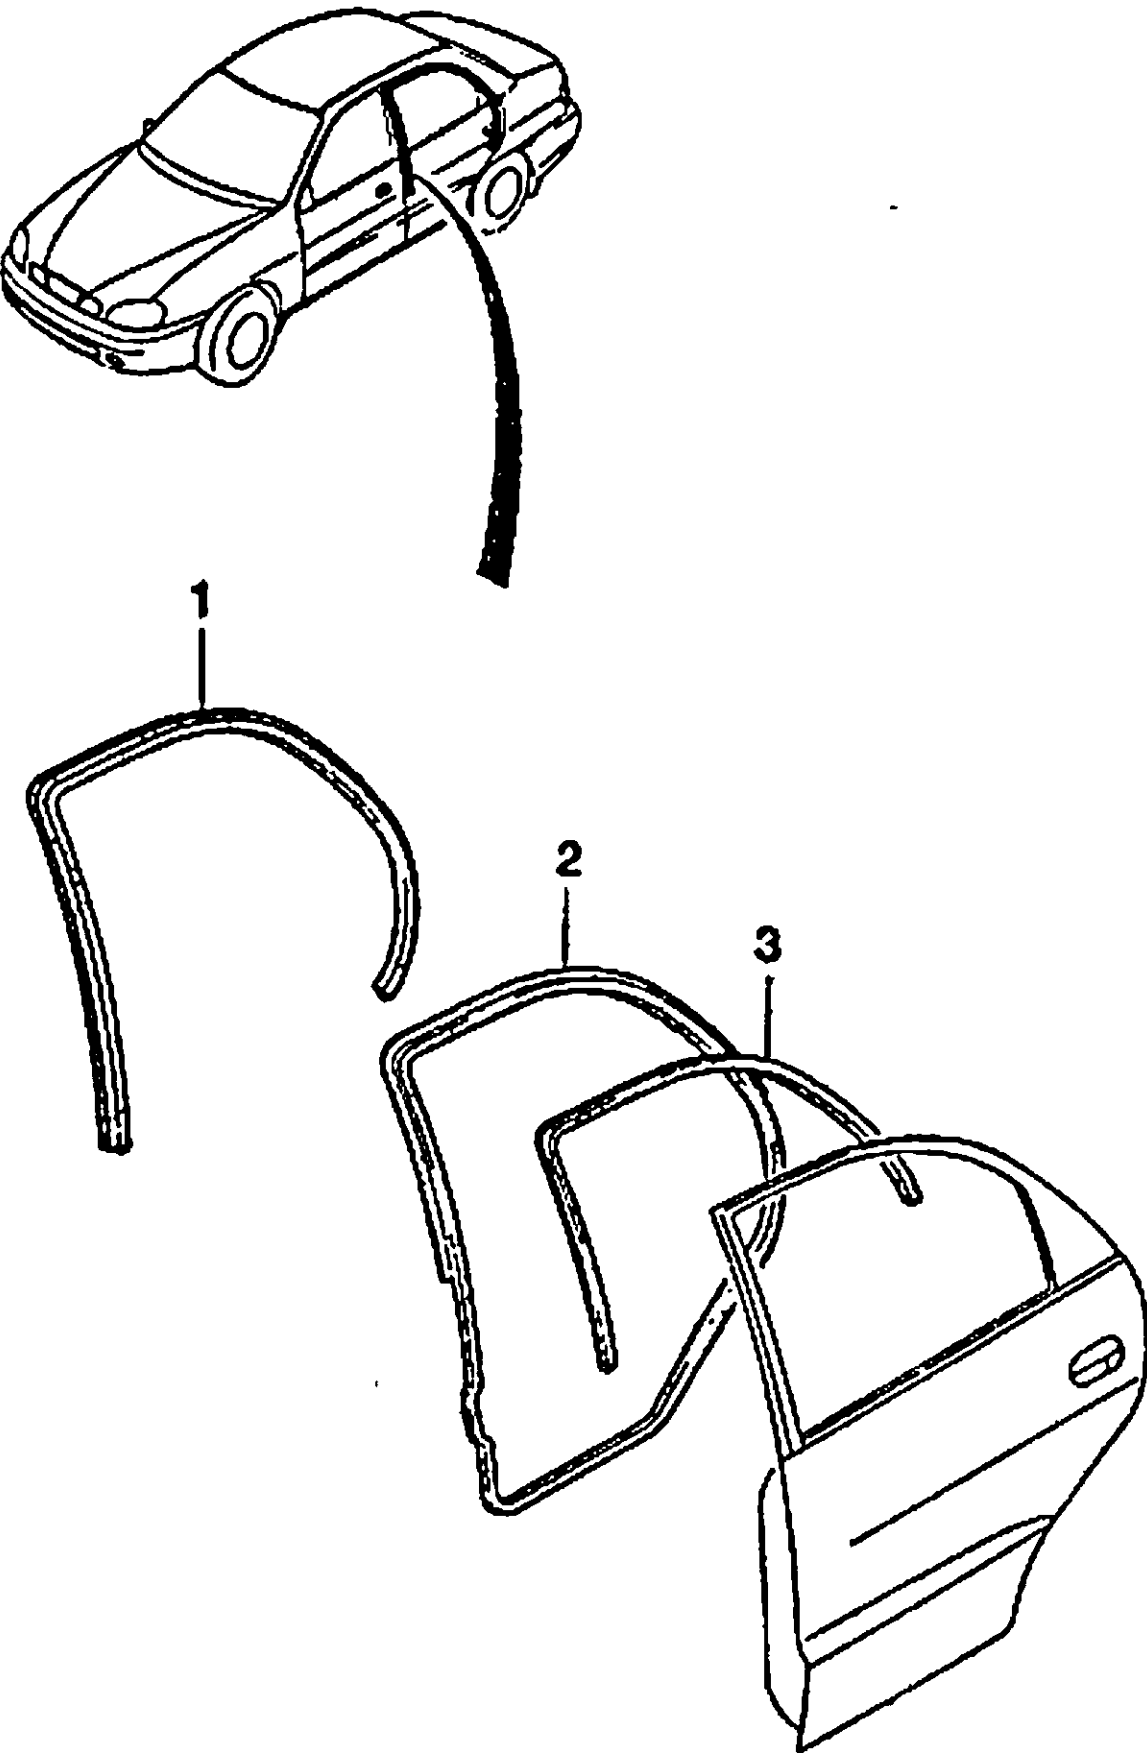

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01]	(E)COVER-RR DOOR OPEN'G FLAN (D)DECKEL									(F)CARTER (S)CUBIERTA					
	96238367	.	.	B	.	.	S	S	.	&AM6	2					
	96238366	.	.	B	.	.	.	.	S	&AM9	2					
	96238366	.	.	B	.	.	A	A	A	&AMB	2					
	96238366	.	.	.	.	B	S	.	S	&AMB/AM9	2					
	[02]	(E)WEATHERSTRIP A-REAR DOOR (D)DICHTUNGSLEISTE									(F)ISOLATION EN BANDELETTE (S)BURLETE					
	96304154	.	.	B	.	B	S	S	S		LH 1					
	96304155	.	.	B	.	B	S	S	S		RH 1					
	[03]	(E)WEATHERSTRIP-RR DOOR,2ND (D)DICHTUNGSLEISTE									(F)ISOLATION EN BANDELETTE (S)BURLETE					
	96304156	.	.	B	.	B	S	S	S		LH 1					
	96304157	.	.	B	.	B	S	S	S		RH 1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

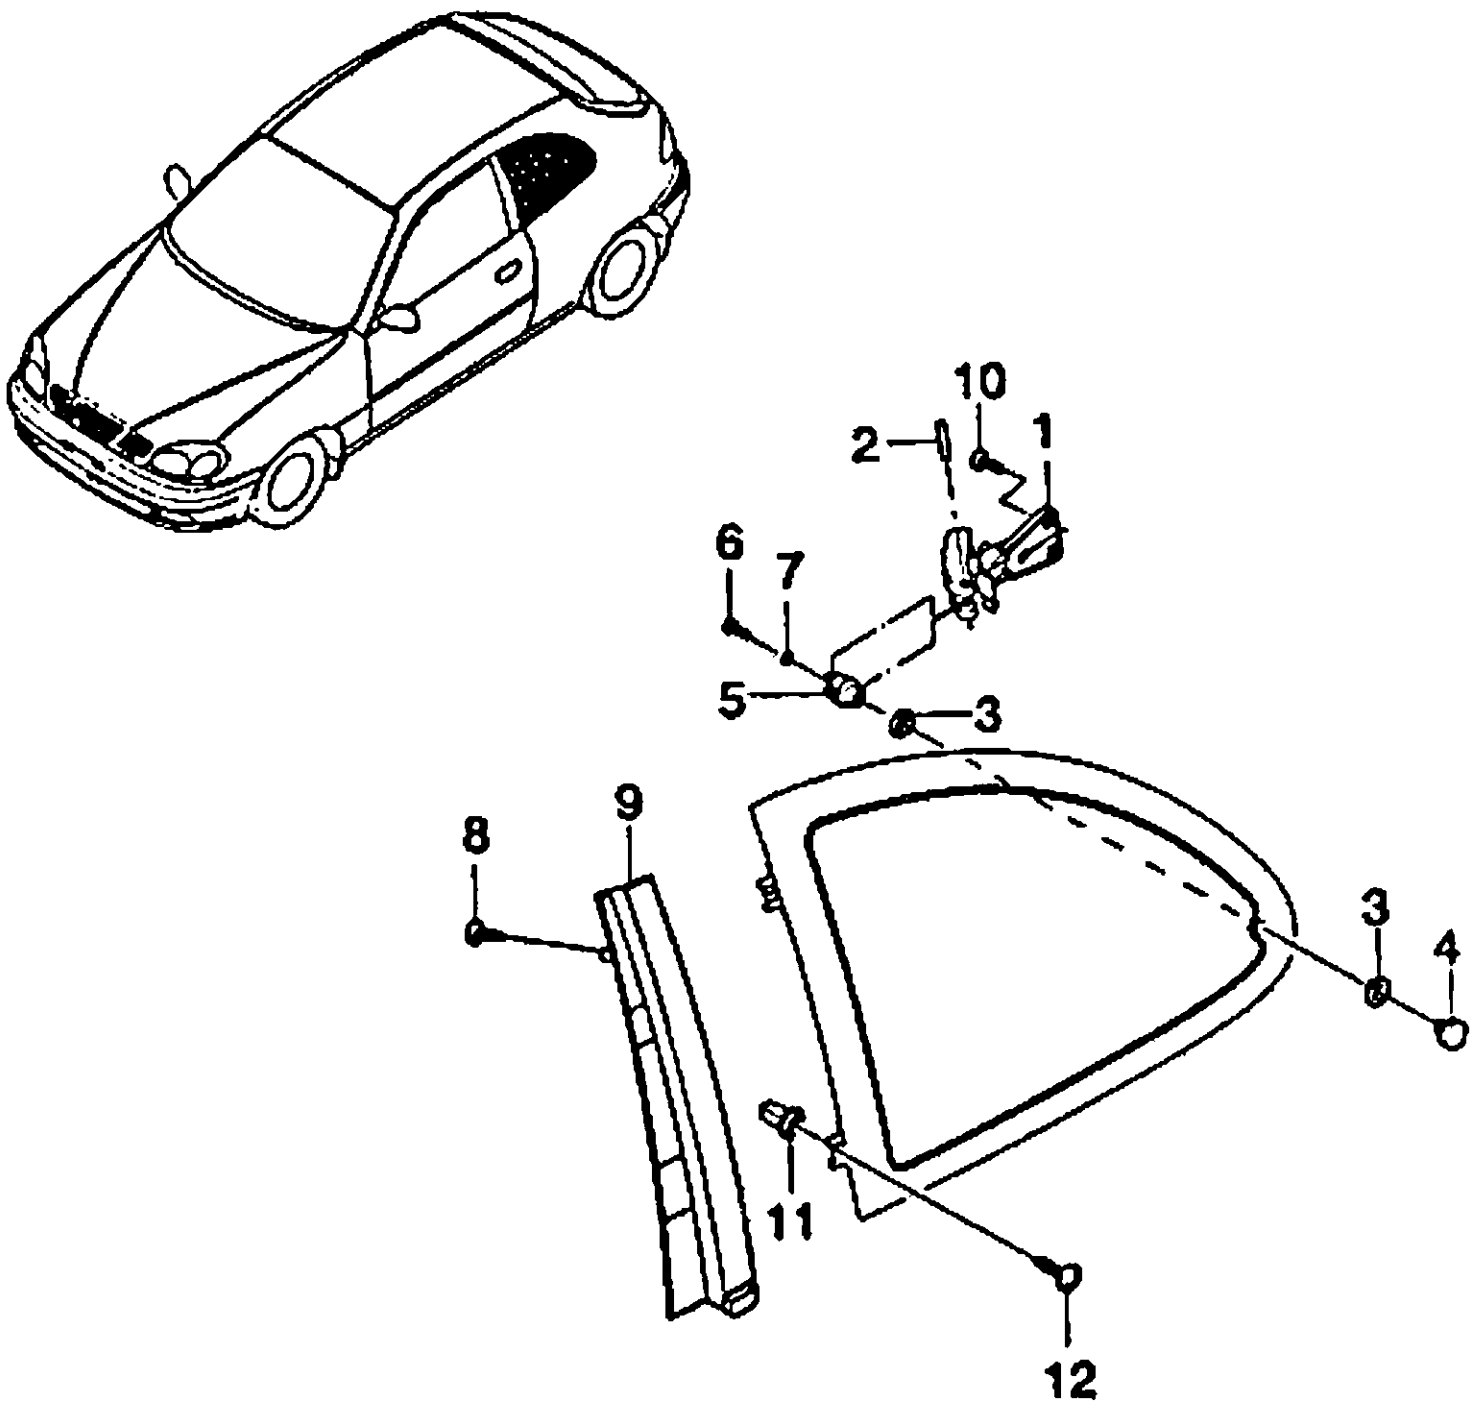


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)LOCK A-HINGED WINDOW (D)SCHLOß									(F)VERROU (S)CERRADURA-VENTANABISAGRA				
	96307266			B			S	S			2				
	[02]	(E)PIN-HINGED WINDOW LOCK (D)STIFT,FENSTERVERSCHLUß									(F)BROCHE (S)PASADOR				
	03437757			B			S	S			2	970325			
O	96251236			B			S	S			2	970325			
	[03]	(E)GROMMET (D)ÖSE									(F)VIROLE (S)AISLANTE				
	96222232			B			S	S			4				
	[04]	(E)NUT A-HINGED WINDOW (D)MUTTER									(F)ECROU (S)TUERCA				
	90047124			B			S	S			2				
	[05]	(E)SUPPORT-HINGED WDO PIVOT (D)TRÄGER									(F)SUPPORT (S)SOPORTE				
	03466314			B			S	S			2				
	[06]	(E)SCREW-CR MACHINE (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	02116-05083			B			S	S			2				
	[07]	(E)WASHER-TOOTHED LOCK (D)DICHTUNGSRING									(F)RONDELLE-VERROU DE DENT (S)ARANDELA-CIERRE DE DIENTE				
	09163-05002			B			S	S			2				
	[08]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03140-42135			B			S	S			6				
	[09]	(E)GARNISH-HINGED WINDOW (D)VERZIERUNG									(F)GARNITURE (S)ORNAMENTO				
	96251191			B			S	S			LH 1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

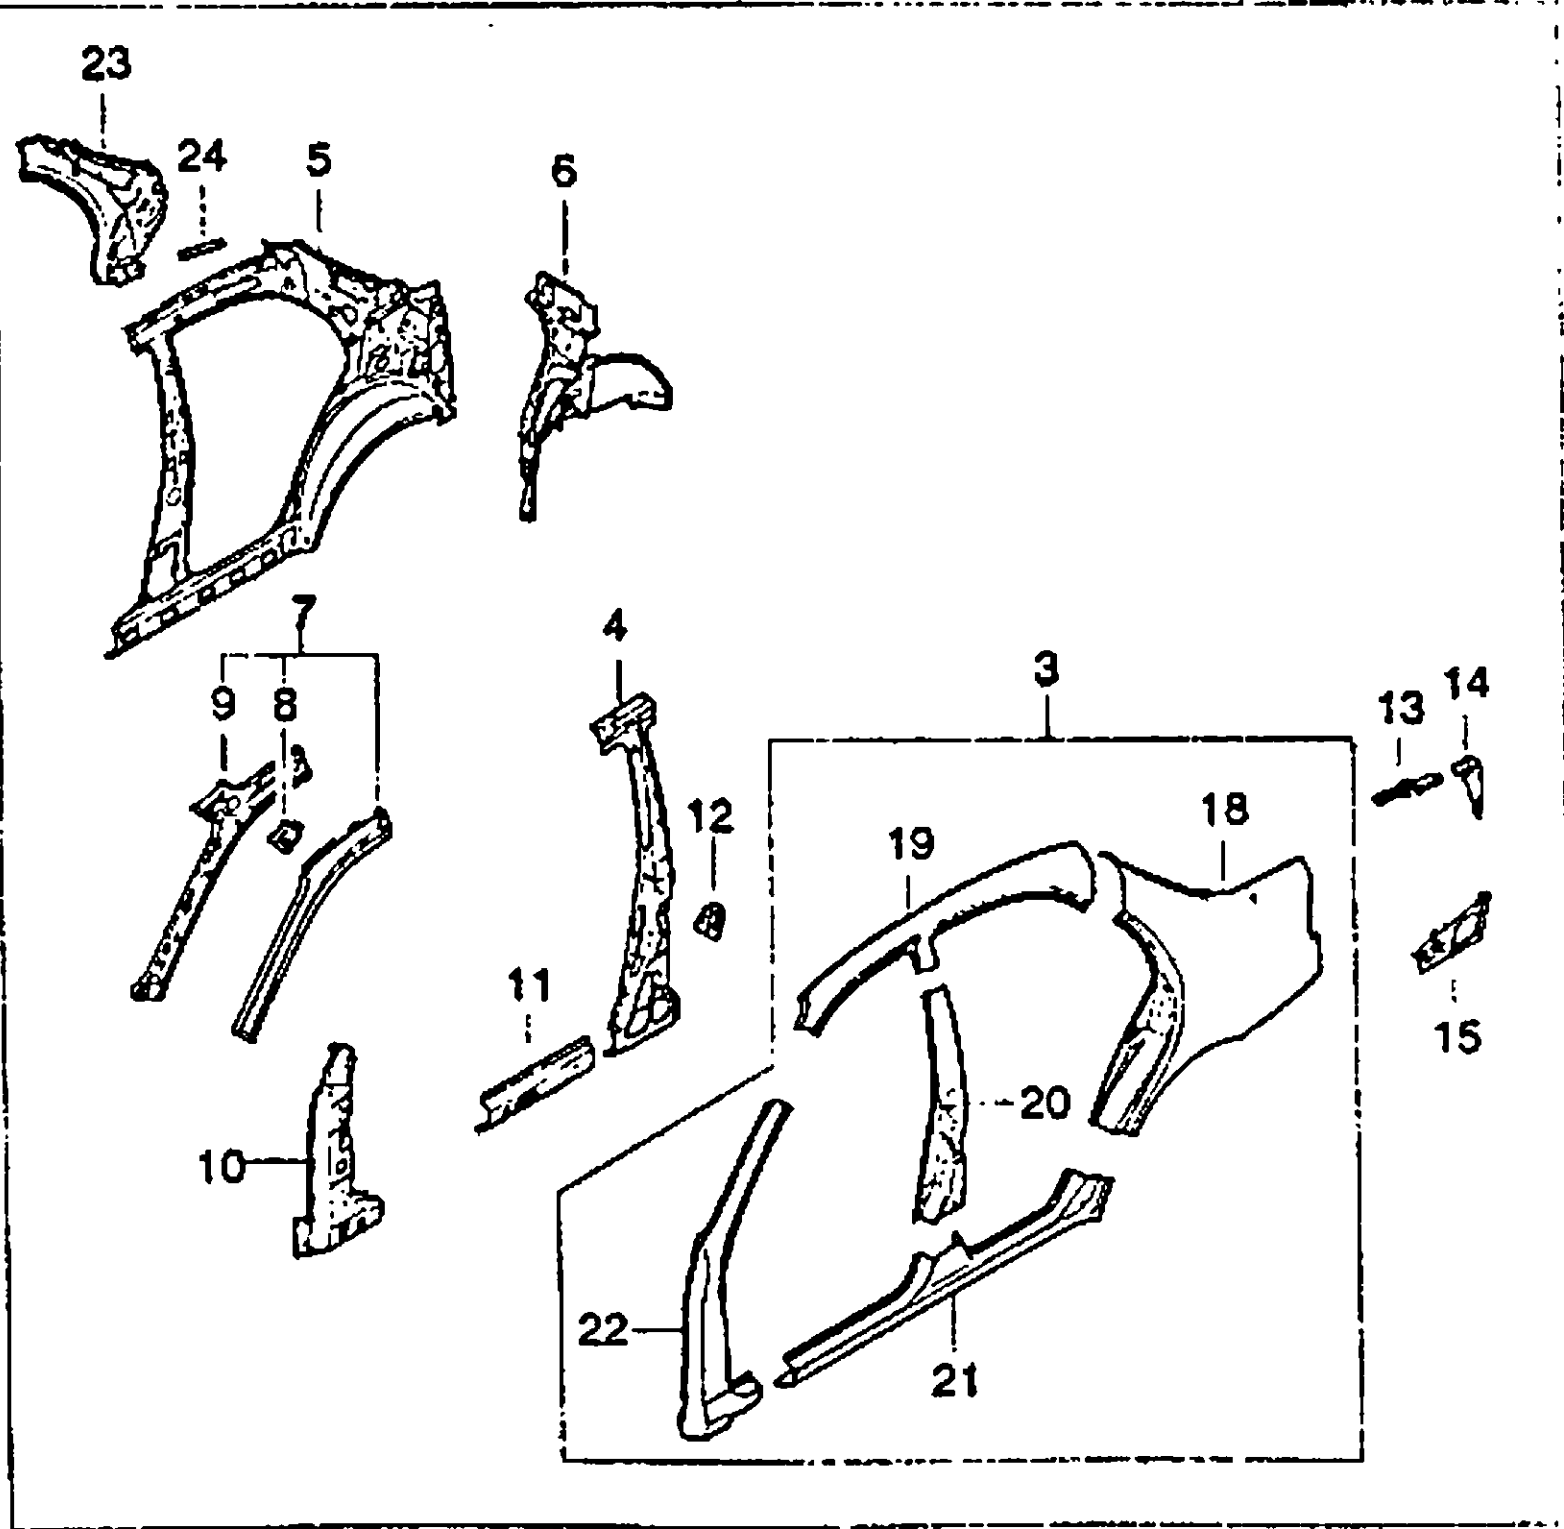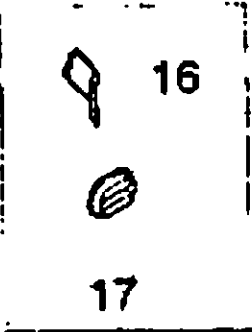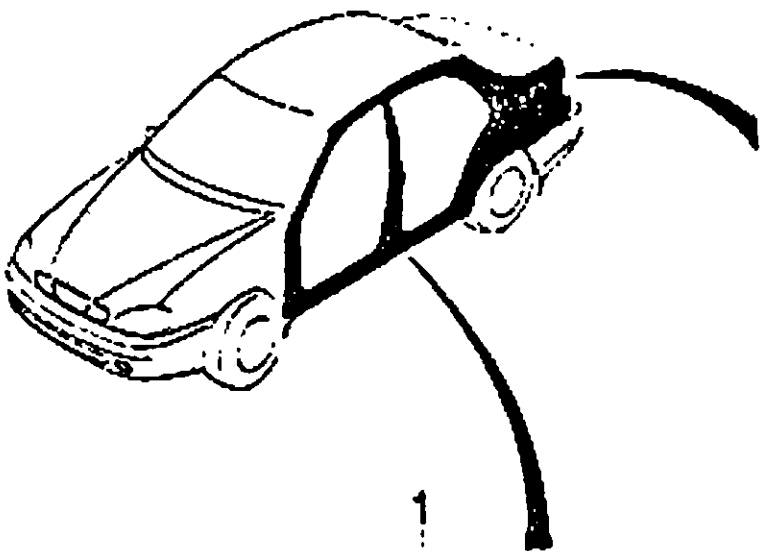



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[01]	(E)PANEL A1-SIDE (D)VERKLEIDUNG A1						SEITE,AUßEN			(F)PANNEAU A1-COTE EXTERNE (S)PANEL A1-LADO EXTERNO					
	A96226341	.	.	B	.	.	S	S	.	&AM6-CF6	LH	1		S6		
	A96226342	.	.	B	.	.	S	S	.	&AM6-CF6	RH	1		SF		
	A96248519	.	.	B	.	.	O	O	.	&AM6&CF6	LH	1		G3		
	A96248520	.	.	B	.	.	O	O	.	&AM6&CF6	RH	1		SM		
	A96306503	.	.	B	.	.	.	.	S	&AM9-CF6	LH	1		S8		
	A96306503	.	.	B	.	.	A	A	A	&AMB-CF6	LH	1		S8		
	A96306504	.	.	B	.	.	.	.	S	&AM9-CF6	RH	1		SH		
	A96306504	.	.	B	.	.	A	A	A	&AMB-CF6	RH	1		SH		
	A96248523	.	.	B	.	.	.	.	O	&AM9&CF6	LH	1		G5		
	A96248524	.	.	B	.	.	.	.	O	&AM9&CF6	RH	1		SP		
	[03]	(E)PANEL-SIDE OUTER (D)VERKLEIDUNG,SEITE,AUßEN									(F)PANNEAU-COTE EXTERNE (S)PANEL-LADO EXTERNO					
	A96306511	.	.	B	.	.	S	S	S		LH	1		S6		
	A96306512	.	.	B	.	.	S	S	S		RH	1	970623	SF		
N	A96255371	.	.	B	.	.	S	S	S		RH	1	970623	D6		
	[04]	(E)REINF A-CENTER PILLAR (D)VERSTÄRKUNG,ZENTRAL-SÄULE									(F)RENFORCEMENT (S)REFUERZO-PILAR DEL CENTRO					
	96244271	.	.	B	.	.	S	S	S		LH	1				
	96244272	.	.	B	.	.	S	S	S		RH	1				
	[05]	(E)PANEL-SIDE INNER (D)VERKLEIDUNG,SEITE,INNEN									(F)PANNEAU-COTE INTERNE (S)PANEL-LADO INTERNO					
	96306560	.	.	B	.	.	S	S	S		LH	1				
	96306561	.	.	B	.	.	S	S	S		RH	1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								



6410 SIDE BODY PANEL(N/B)

5H10


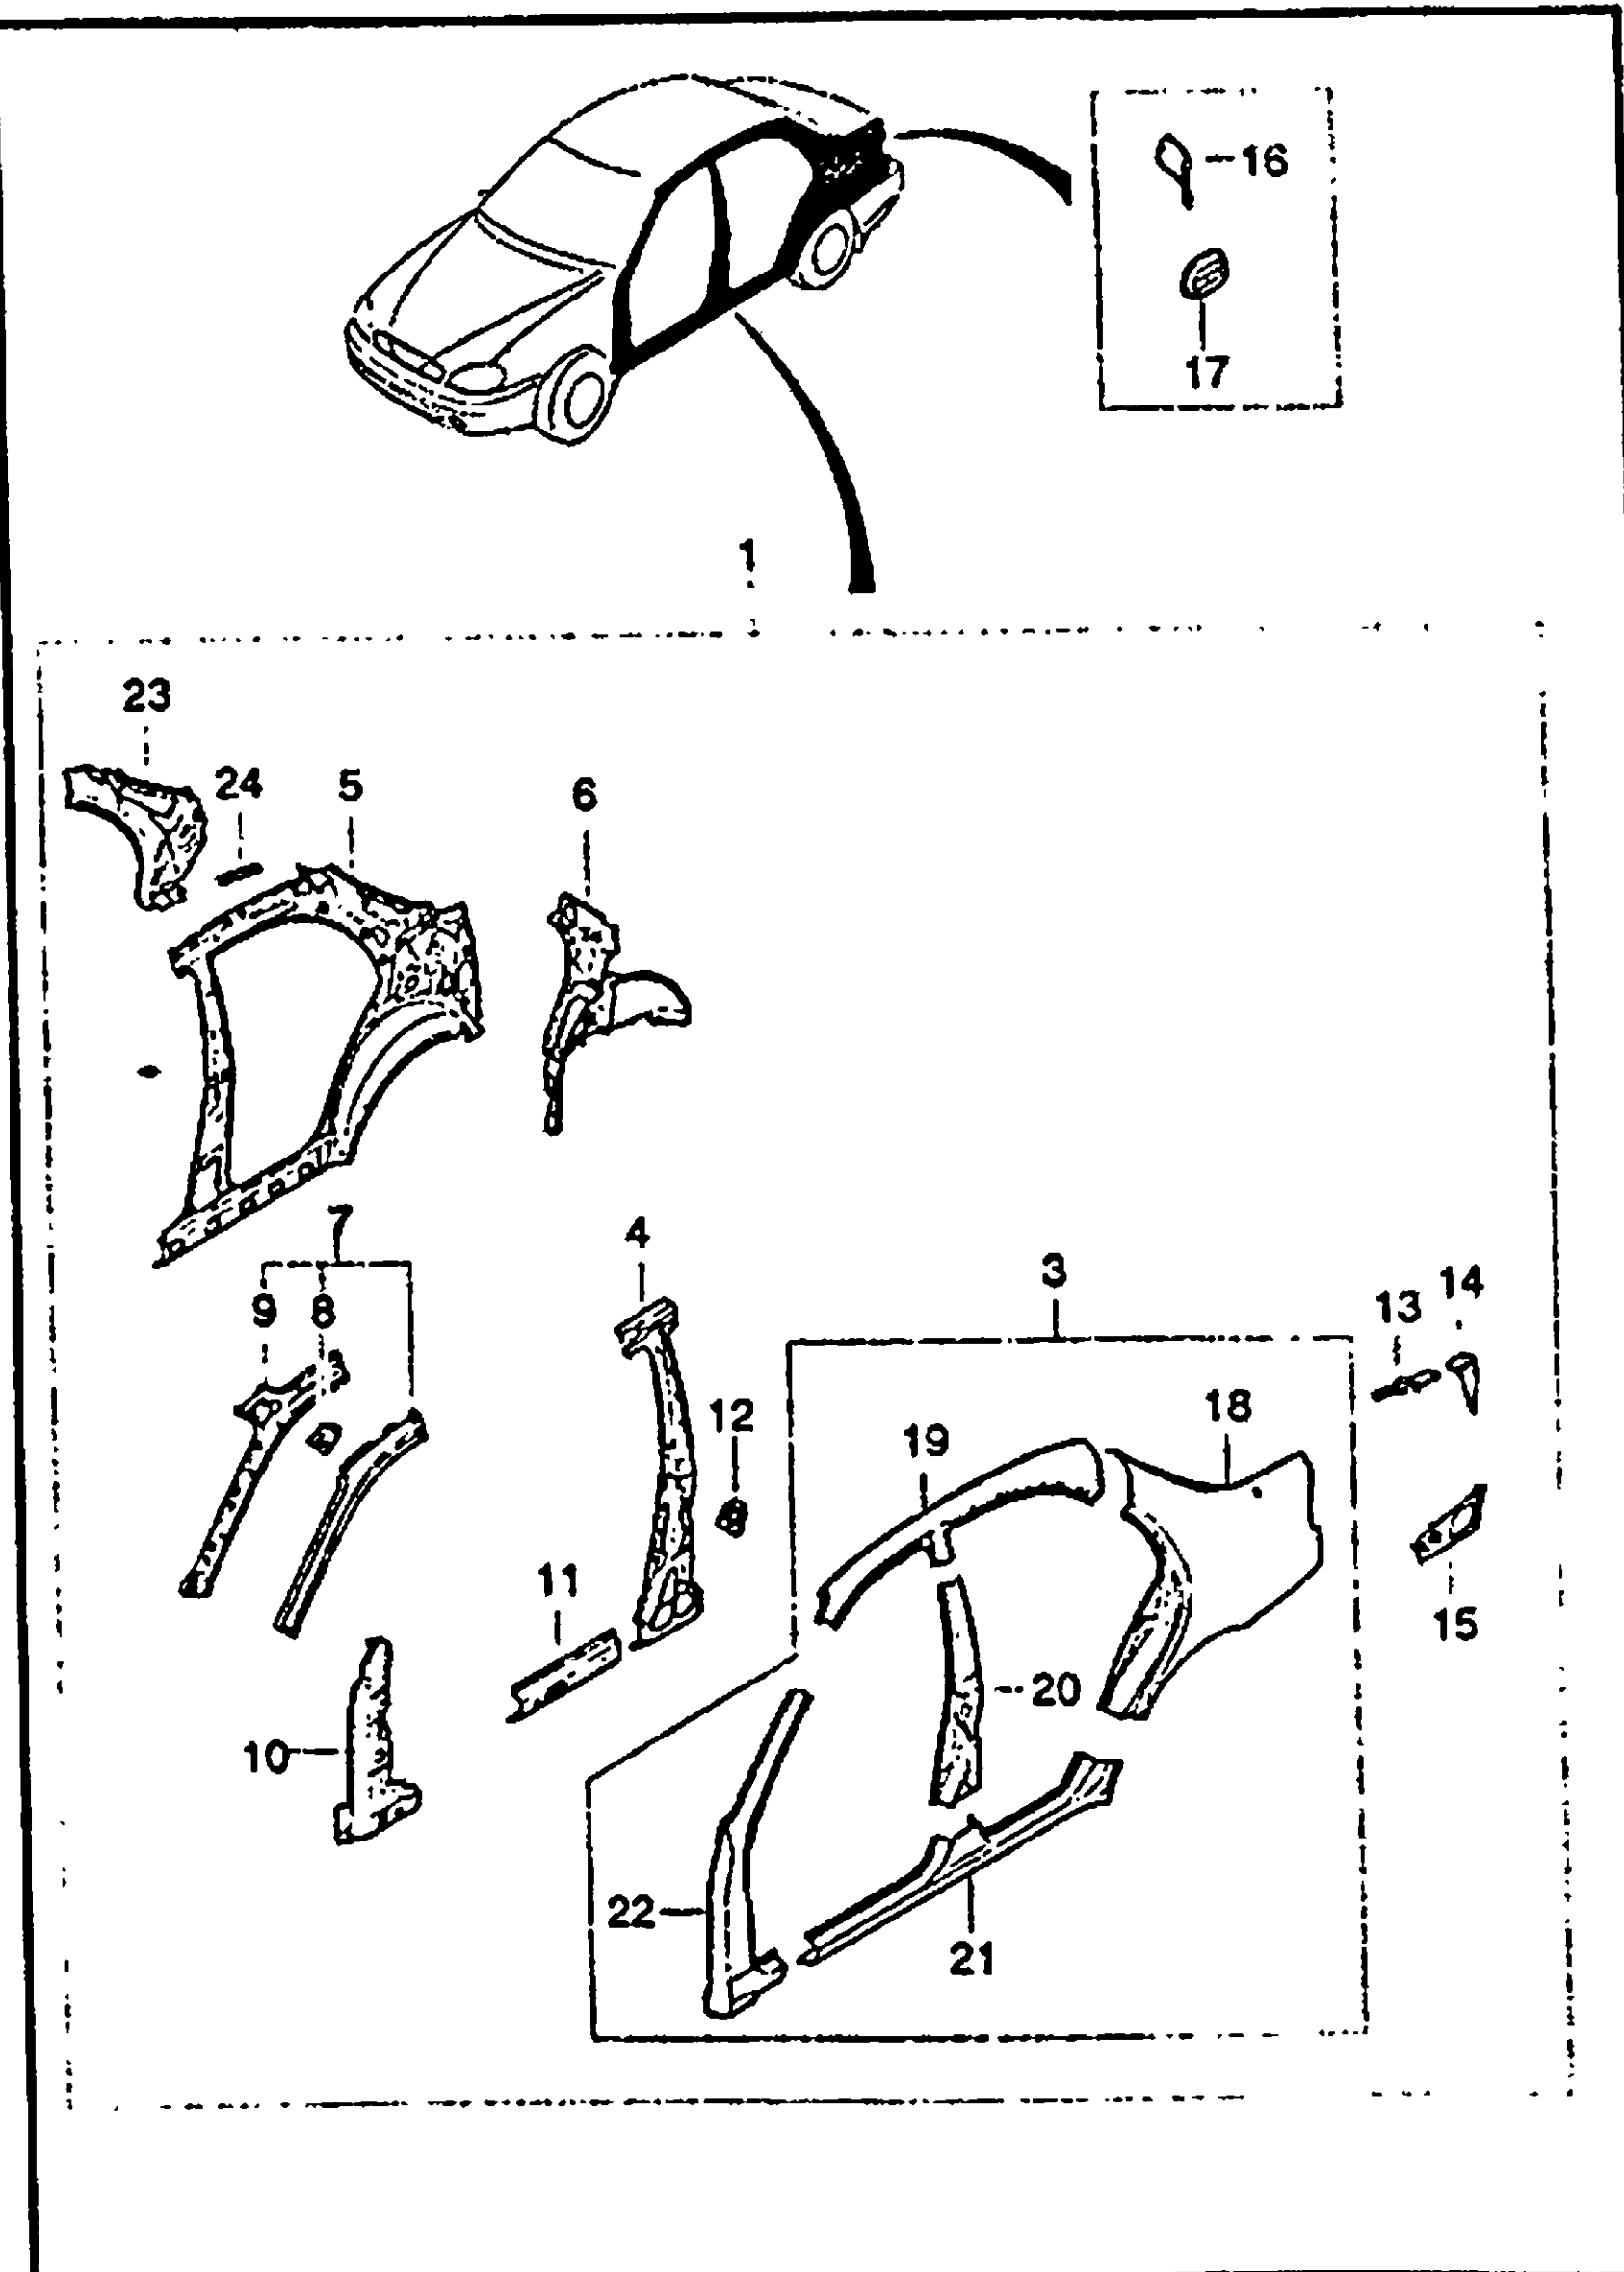


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N H	3 H	5 H								
	[06]	(E)WHEELHOUSE A-INNER (D)VERKLEIDUNG,RAD-GEHÄUSE									(F)PANNEAU-IMONERIE (S)PANEL-VOLANTE INTERNO			
	96307026	. .	B . .	S S .	&AM6			LH	1				WB	
	96307027	. .	B . .	S S .	&AM6			RH	1				W2	
	96226337	. .	B	S	&AM9			LH	1				WD	
	96226337	. .	B . .	A A A	&AMB			LH	1				WD	
	96226338	. .	B	S	&AM9			RH	1				W4	
	96226338	. .	B . .	A A A	&AMB			RH	1				W4	
	[07]	(E)PILAR A-FRONT (D)SÄULE,VORDER-KAROSSERIE									(F)PIER-CORPS AVANT (S)PILAR-FRENTE DE CUERPO			
	96303787	. .	B . .	S S S				LH	1				LA	
	96303788	. .	B . .	S S S				RH	1				L1	
	[08]	(E)PATCH-FRONT PILLAR (D)TEIL,VORDER-SÄULE									(F)PIECE-PIER,AVANT (S)PIEZA-FRENTE DE PILAR			
	96233763	. .	B . .	S S S				LH	1					
	96233764	. .	B . .	S S S				RH	1					
	[09]	(E)PILAR A-FRONT,INNER (D)SÄULE,VORDER-KAROSSERIE									(F)PIER-CORPS AVANT (S)PILAR-FRENTE DE CUERPO			
	96307046	. .	B . .	S S S				LH	1					
	96307047	. .	B . .	S S S				RH	1					
	[10]	(E)REINF A-FRONT PILLAR,LWR (D)VERSTÄRKUNG									(F)RENFORCEMENT (S)REFUERZO-BISAGRA			
	96306612	. .	B . .	S S S				LH	1				NA	
	96306613	. .	B . .	S S S				RH	1				N1	
	[11]	(E)REINFORCEMENT-ROCKER (D)VERSTÄRKUNG									(F)RENFORCEMENT (S)REFUERZO			
	96242967	. .	B . .	S S S				LH	1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

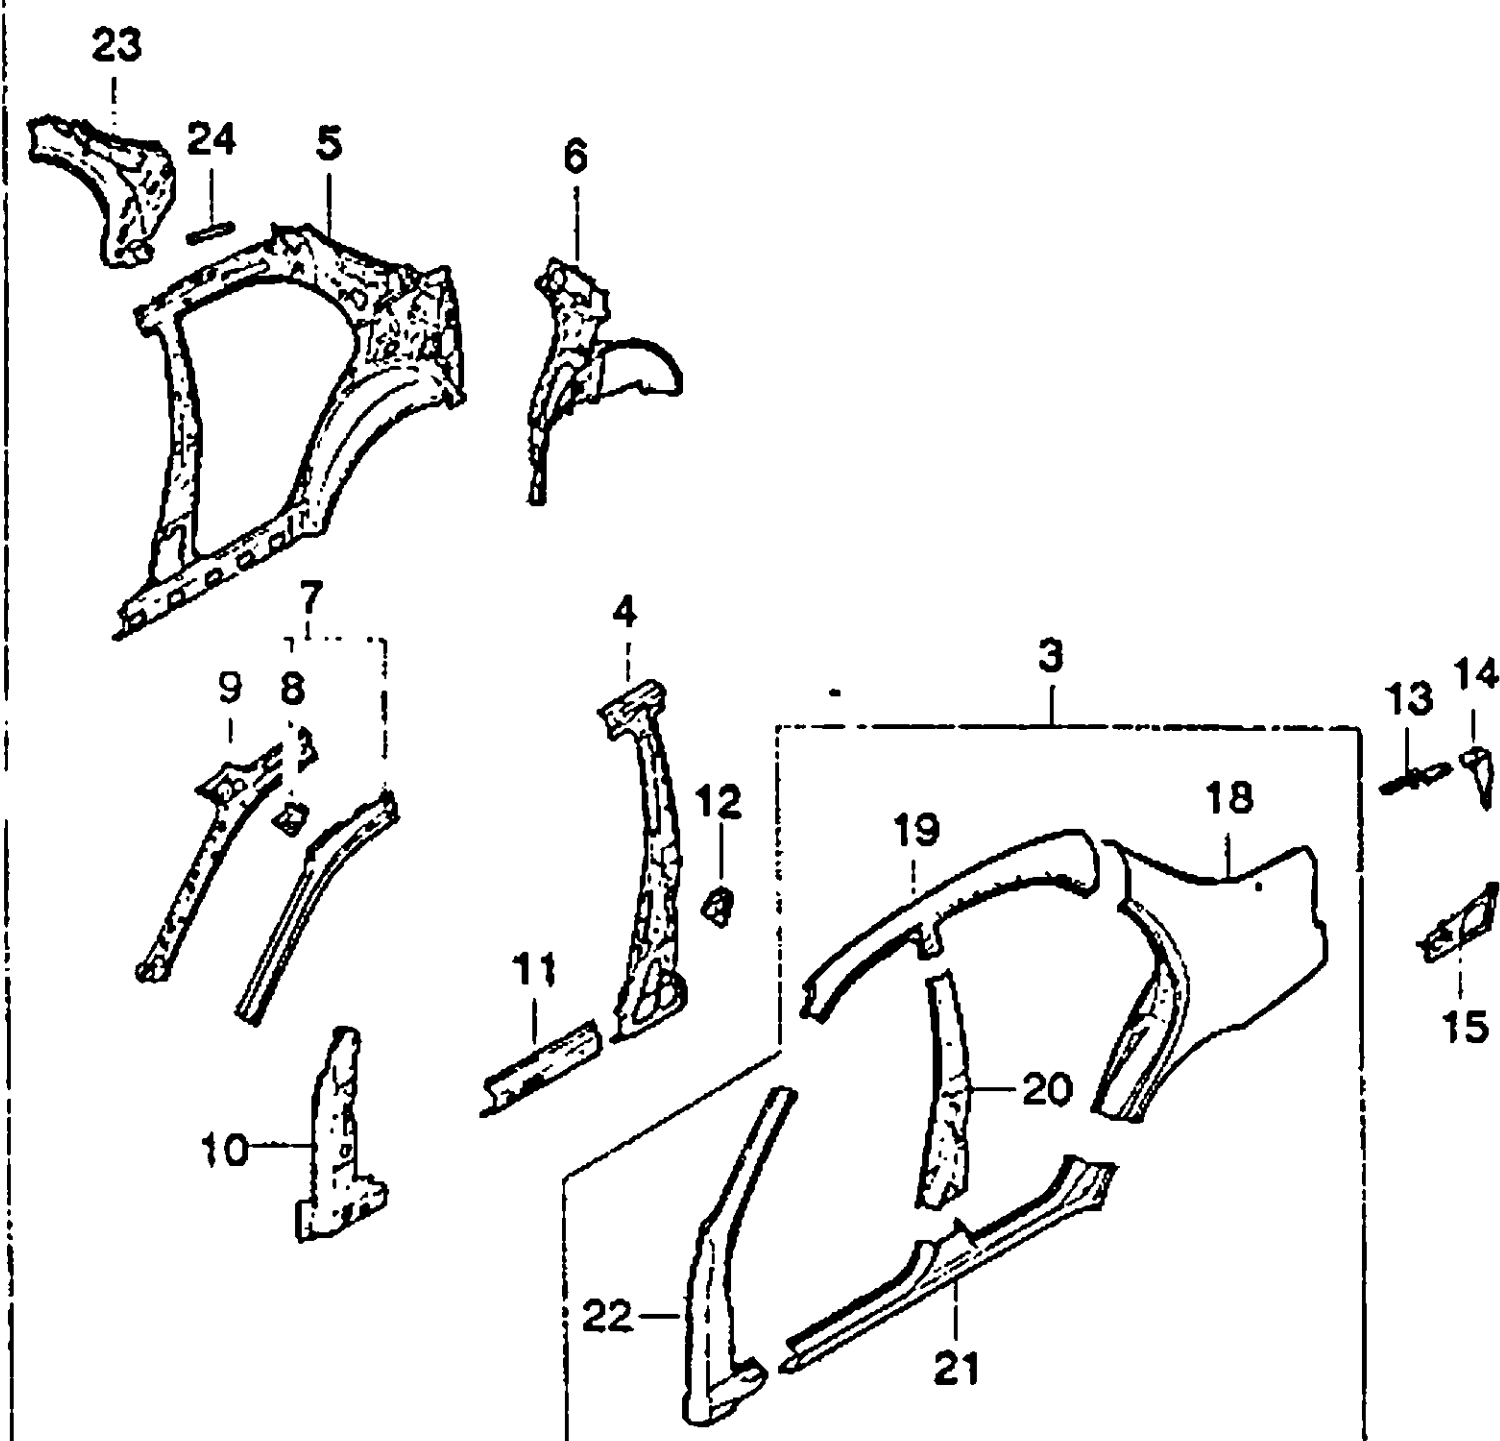
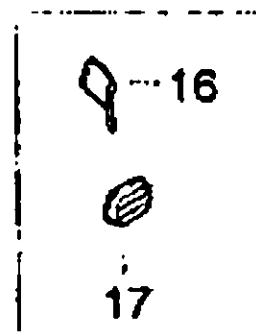
527

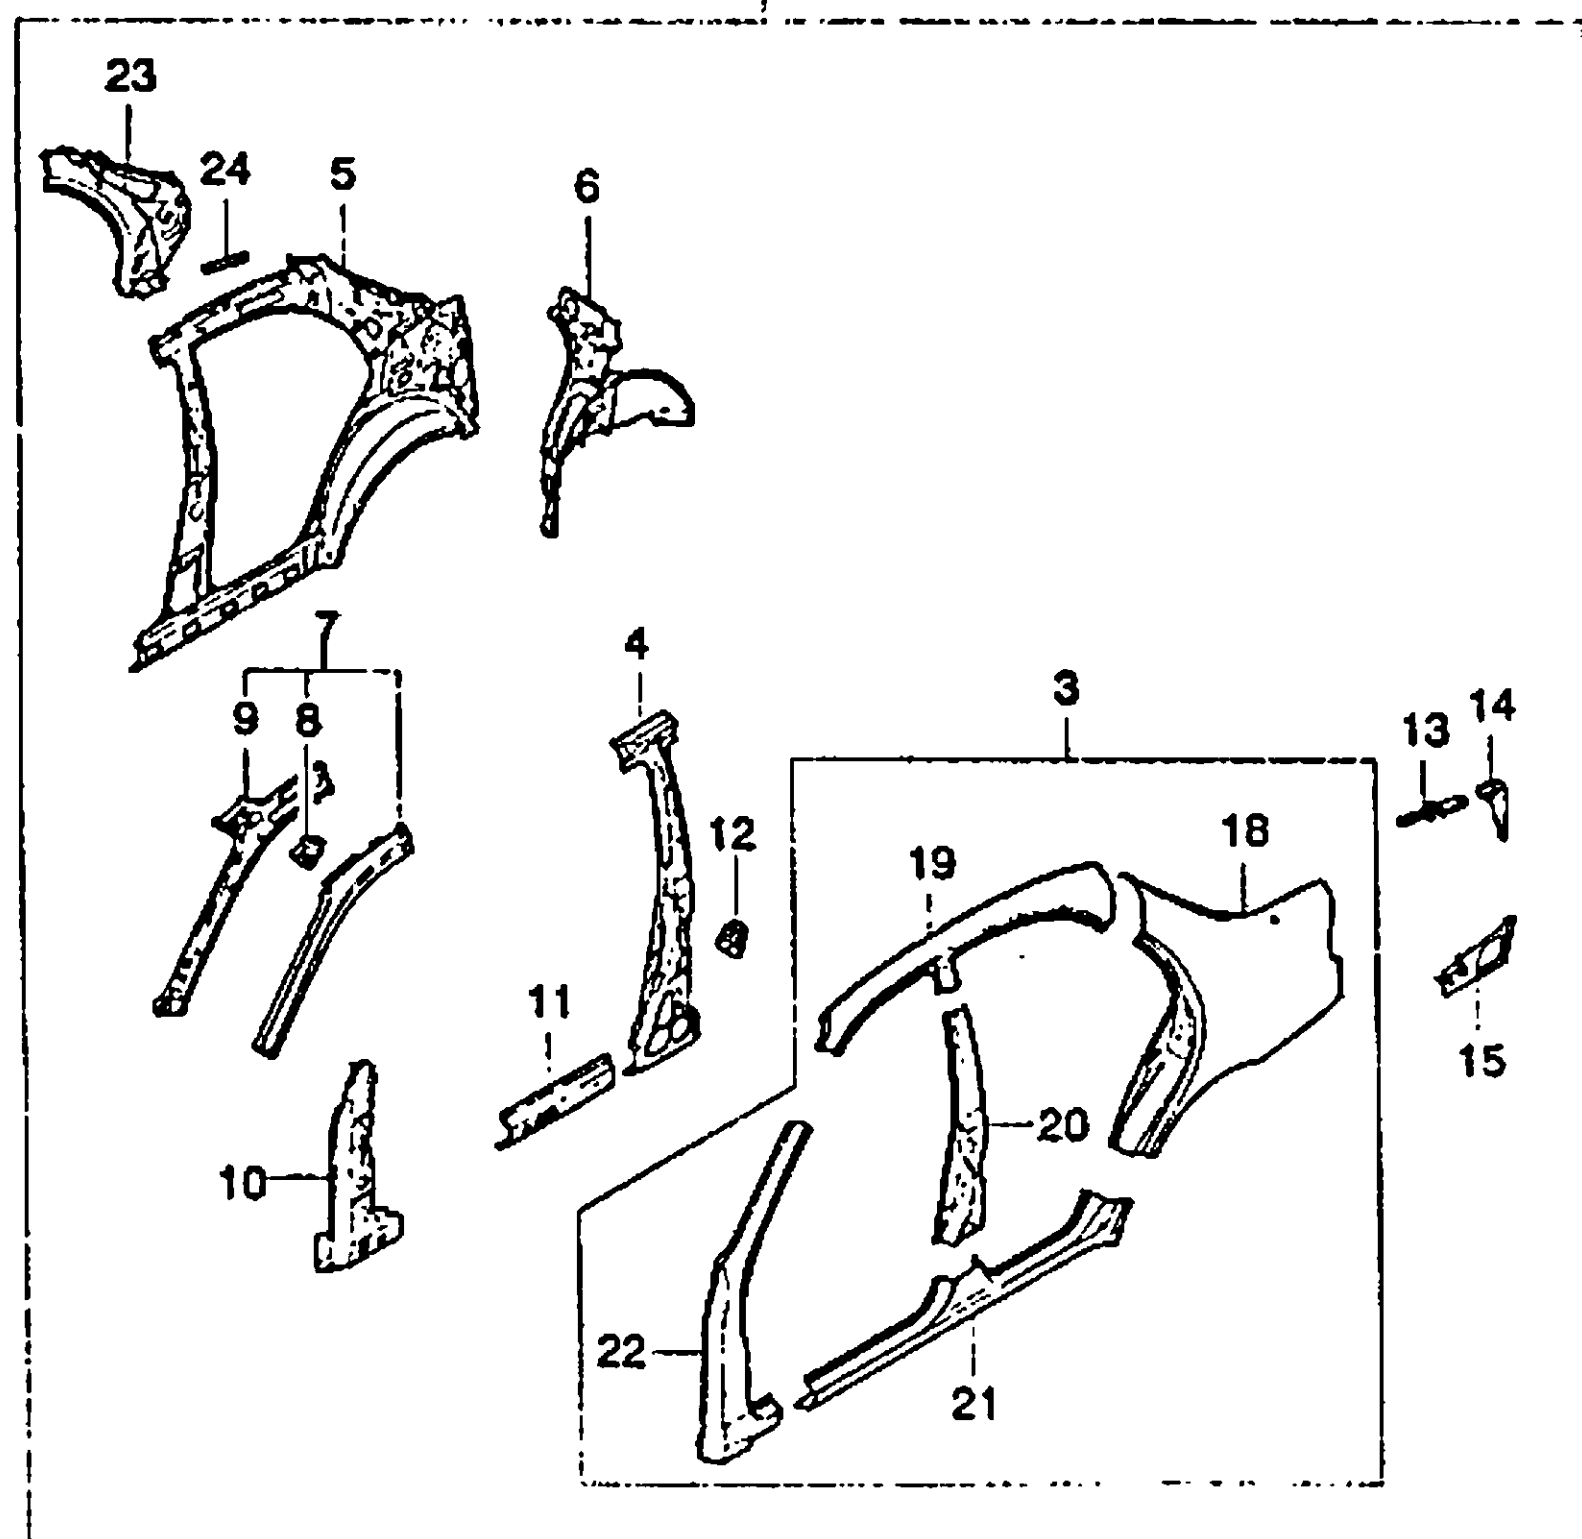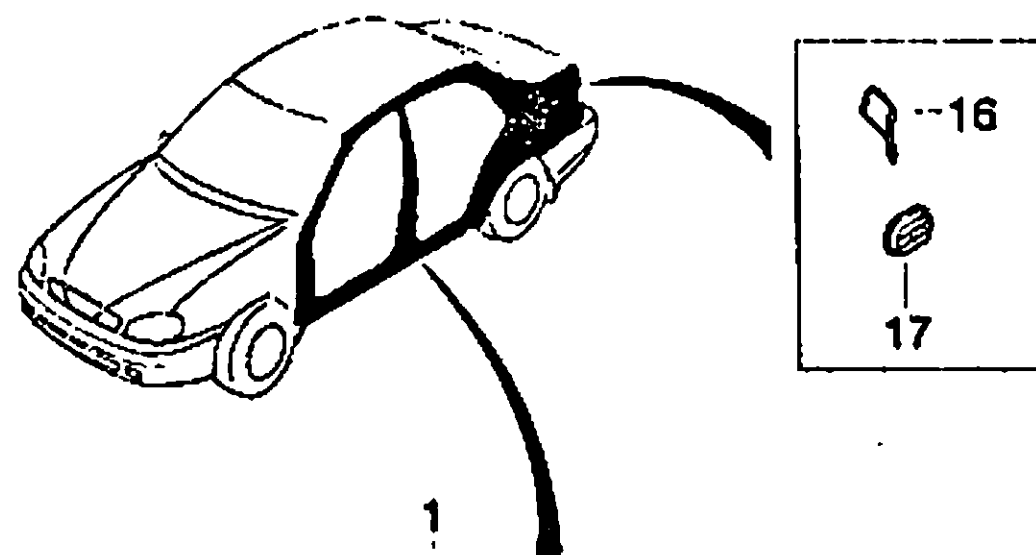




KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q / T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S S				S S	X		
	A96250422	.	.	B	.			S S S						
	[19]	(E)PANEL-ROOF SIDE (D)VERKLEIDUNG,SEITE,AUBEN											(F)PANNEAU-COTE EXTERNE (S)PANEL-LADO EXTERNO ,TECHO	
	A96248534	.	.	B	.			S S S						
	A96248535	.	.	B	.			S S S						
	[20]	(E)PANEL-HINHE PILLAR,CTR (D)VERKLEIDUNG,BESCHLAG,SÄUL											(F)PANNEAU (S)PANEL-PILAR BISAGAR	
	A96248536	.	.	B	.			S S S						
	A96248537	.	.	B	.			S S S						
	[21]	(E)PANEL-ROCKER (D)VERKLEIDUNG,SCHWENKUNG											(F)PANNEAU-CULBUTEUR (S)PANEL-ARCO EXTERNO	
	A96248538	.	.	B	.			S S S						
	A96248539	.	.	B	.			S S S						
	[22]	(E)PANEL-HINHE PILLAR,FRONT (D)VERKLEIDUNG,BESCHLAG,SÄUL											(F)PANNEAU (S)PANEL-PILAR BISAGRA	
	A96248540	.	.	B	.			S S S						
	A96248541	.	.	B	.			S S S						
	[23]	(E)REINF A-LOCK PILLAR (D)VERSTÄRKUNG											(F)RENFORCEMENT (S)REFUERZO	
	96303747	.	.	B	.	.	.	S S S						
	96303748	.	.	B	.	.	.	S S S						
	[24]	(E)REINF A-REAR ASSIST GRIP (D)VERSTÄRKUNG											(F)RENFORCEMENT (S)REFUERZO	
	96307023	.	.	B	.	.	.	S S S	-CF6					
	96240749	.	.	B	.	.	.	O O O	&CF6					
	96240750	.	.	B	.	.	.	O O O	&CF6					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

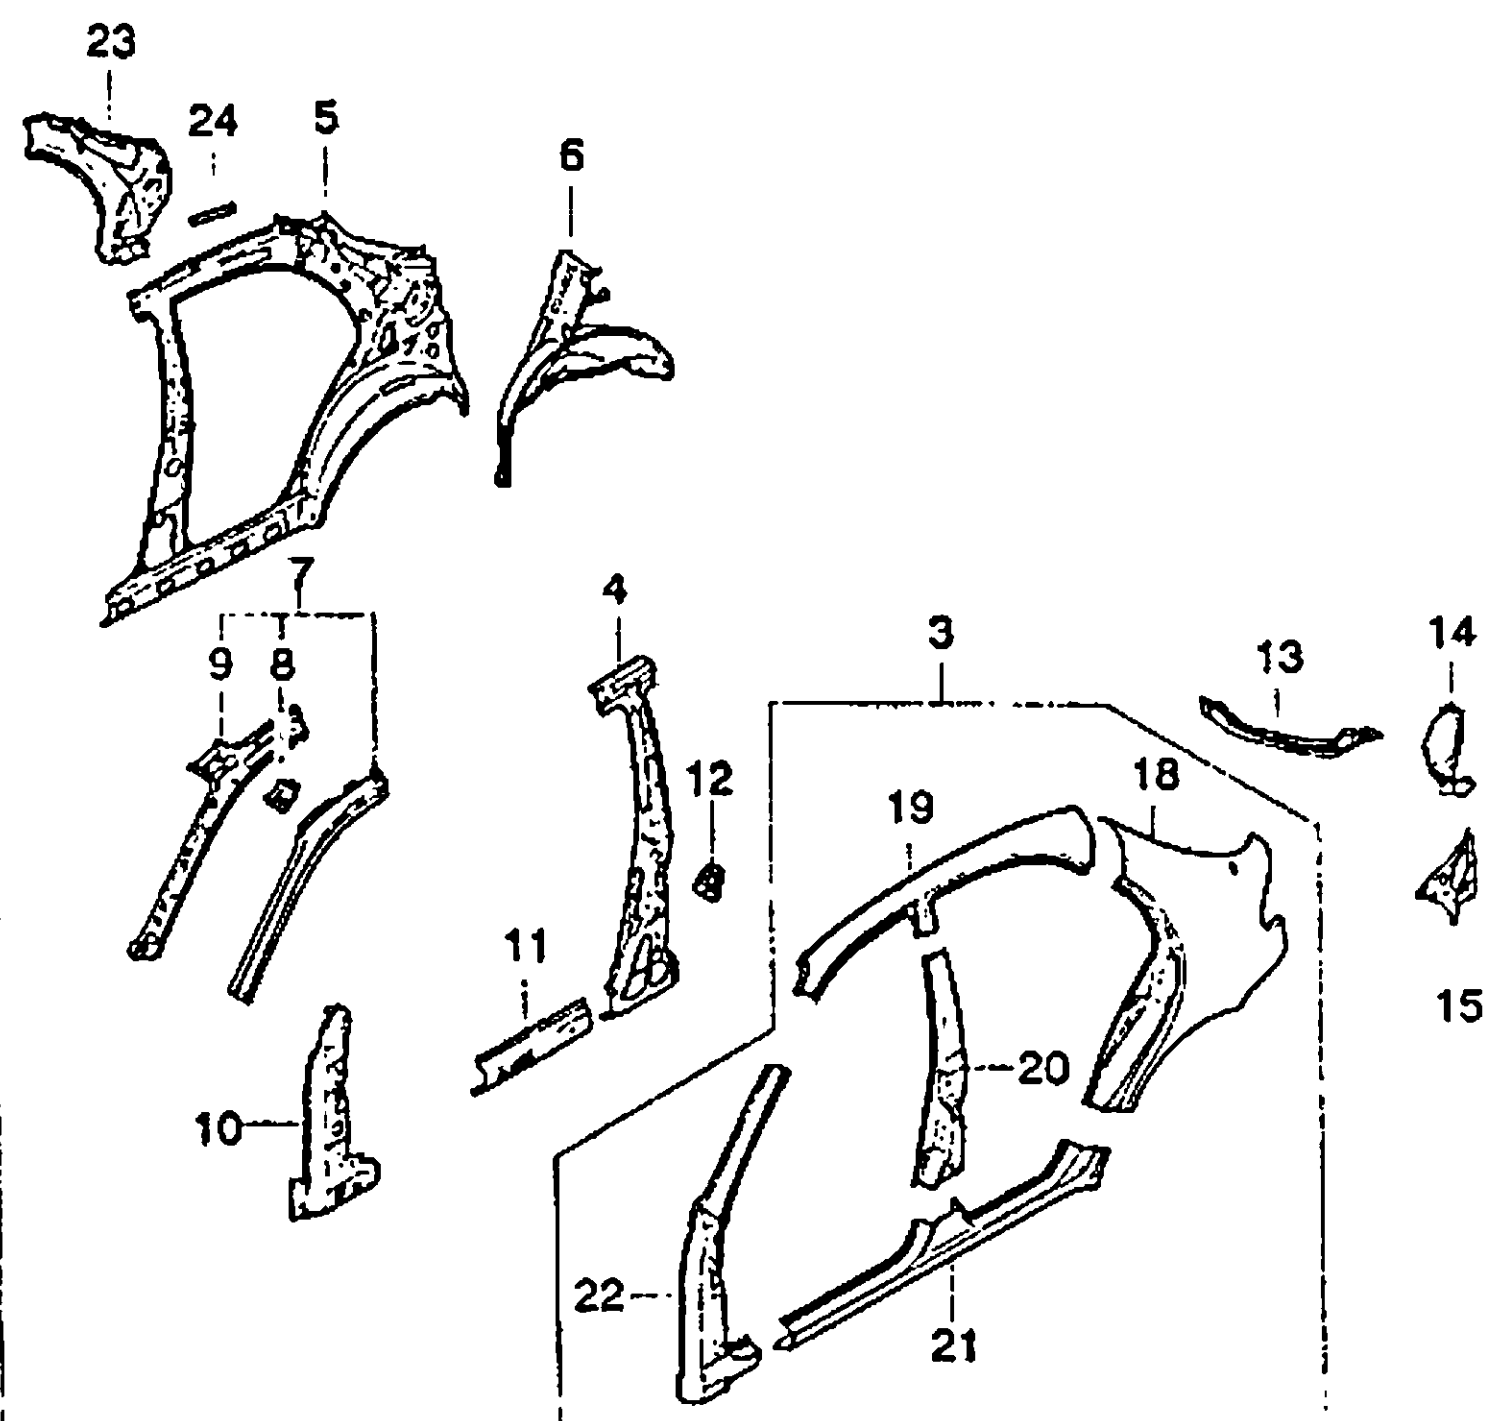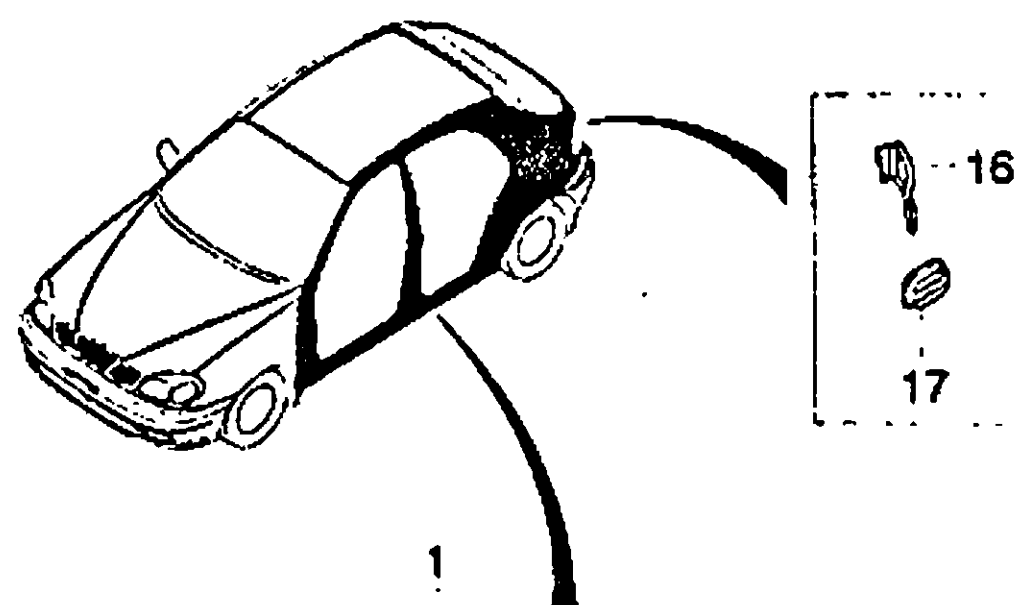

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q / Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S S				S S	X		
											FROM	TO		
	[01]	(E)PANEL A1-SIDE (D)VERKLEIDUNG A1,SEITE,AUßEN									(F)PANNEAU A1-COTE EXTERNE (S)PANEL A1-LADO EXTERNO			
	A96233181	 B S . S -CF6							LH	1				S4
	A96233182	 B S . S -CF6							RH	1				SD
	A96250400	 B O . O &CF6							LH	1				G7
	A96250401	 B O . O &CF6							RH	1				SR
	[03]	(E)PANEL-SIDE OUTER (D)VERKLEIDUNG,SEITE,AUßEN									(F)PANNEAU-COTE EXTERNE (S)PANEL-LADO EXTERNO			
	A96307223	 B S . S							LH	1				S4
	A96307224	 B S . S							RH	1	970630			SD
N	A96255367	 B S . S							RH	1	970630			D4
	[04]	(E)REINF A-CENTER PILLAR (D)VERSTÄRKUNG,ZENTRAL-SÄULE									(F)RENFORCEMENT (S)REFUERZO-PILAR DEL CENTRO			
	96244271	 B S . S							LH	1				
	96244272	 B S . S							RH	1				
	[05]	(E)PANEL-SIDE INNER (D)VERKLEIDUNG,SEITE,INNEN									(F)PANNEAU-COTE INTERNE (S)PANEL-LADO INTERNO			
	96307239	 B S . S							LH	1				
	96307240	 B S . S							RH	1				
	[06]	(E)WHEELHOUSE A-INNER (D)VERKLEIDUNG,RAD-GEHÄUSE									(F)PANNEAU-IMONERIE (S)PANEL-VOLANTE INTERNO			
	96307032	 B S . S							LH	1				WF
	96307033	 B S . S							RH	1				W6
	[07]	(E)PILLAR A-FRONT (D)SÄULE,VORDER-KAROSSERIE									(F)PILIER-CORPS AVANT (S)PILAR-FRENTE DE CUERPO			
	96303787	 B S . S							LH	1				LA
	96303788	 B S . S							RH	1				L1
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC = COMMON			M = MANUAL T/A A = AUTOMATIC T/A = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

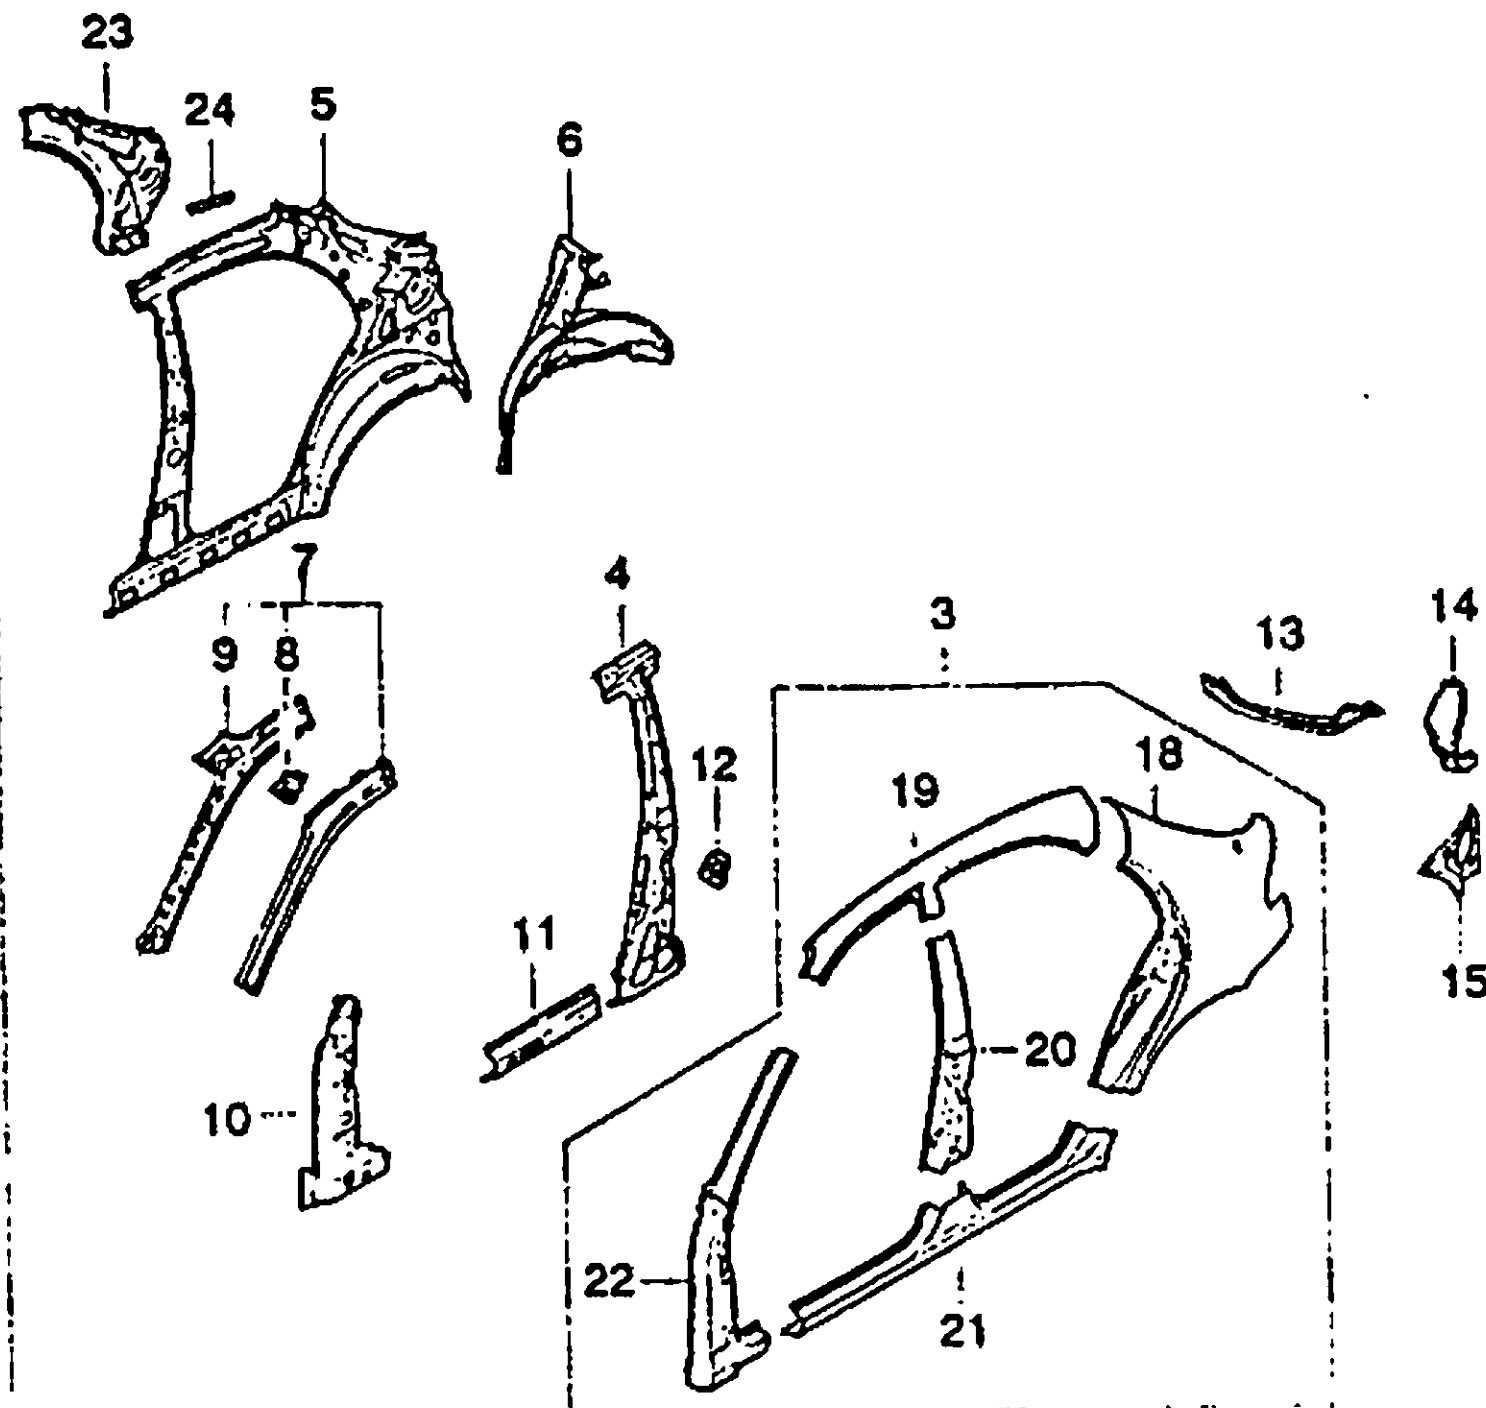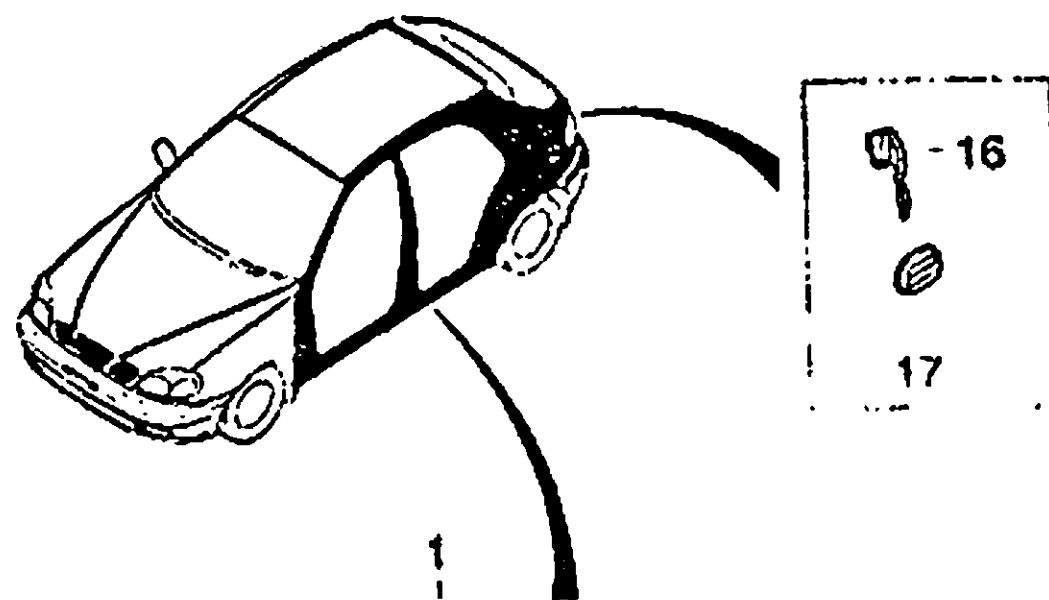


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / G	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[08]	(E)PATCH-FRONT PILLAR (D)TEIL,VORDER-SÄULE									(F)PIECE-PILIER,AVANT (S)PIEZA-FRENTE DE PILAR					
	96233763					B	S		S		LH	1				
	96233764					B	S		S		RH	1				
	[09]	(E)PILLAR A-FRONT,INNER (D)SÄULE,VORDER-KAROSSERIE									(F)PILIER-CORPS AVANT (S)PILAR-FRENTE DE CUERPO					
	96307046					B	S		S		LH	1				
	96307047					B	S		S		RH	1				
	[10]	(E)REINF A-FRONT PILLAR,LWR (D)VERSTÄRKUNG									(F)RENFORCEMENT (S)REFUERZO-BISAGRA					
	96306612					B	S		S		LH	1		NA		
	96306613					B	S		S		RH	1		NI		
	[11]	(E)REINFORCEMENT-ROCKER (D)VERSTÄRKUNG									(F)RENFORCEMENT (S)REFUERZO					
	96242967					B	S		S		LH	1				
	96242968					B	S		S		RH	1				
	[12]	(E)REINF A-STRIKER,REAR DOOR (D)VERSTÄRKUNG									(F)RENFORCEMENT (S)REFUERZO					
	96303715					B	S		S		LH	1		RA		
	96303716					B	S		S		RH	1		R1		
	[13]	(E)PIECE-SIDE PANEL OTR CONN (D)TEIL,VERBINDUNGS									(F)PIECE (S)PIEZA					
	96306524					B	S		S		LH	1		CB		
	96306525					B	S		S		RH	1		C2		
	[14]	(E)PATCH A-TAIL LAMP HOUSING (D)TEIL-GEHÄUSE									(F)PIECE-LOGEMENT (S)PIEZA-CARCASA					
	96310159					B	S		S		LH	1		LB		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

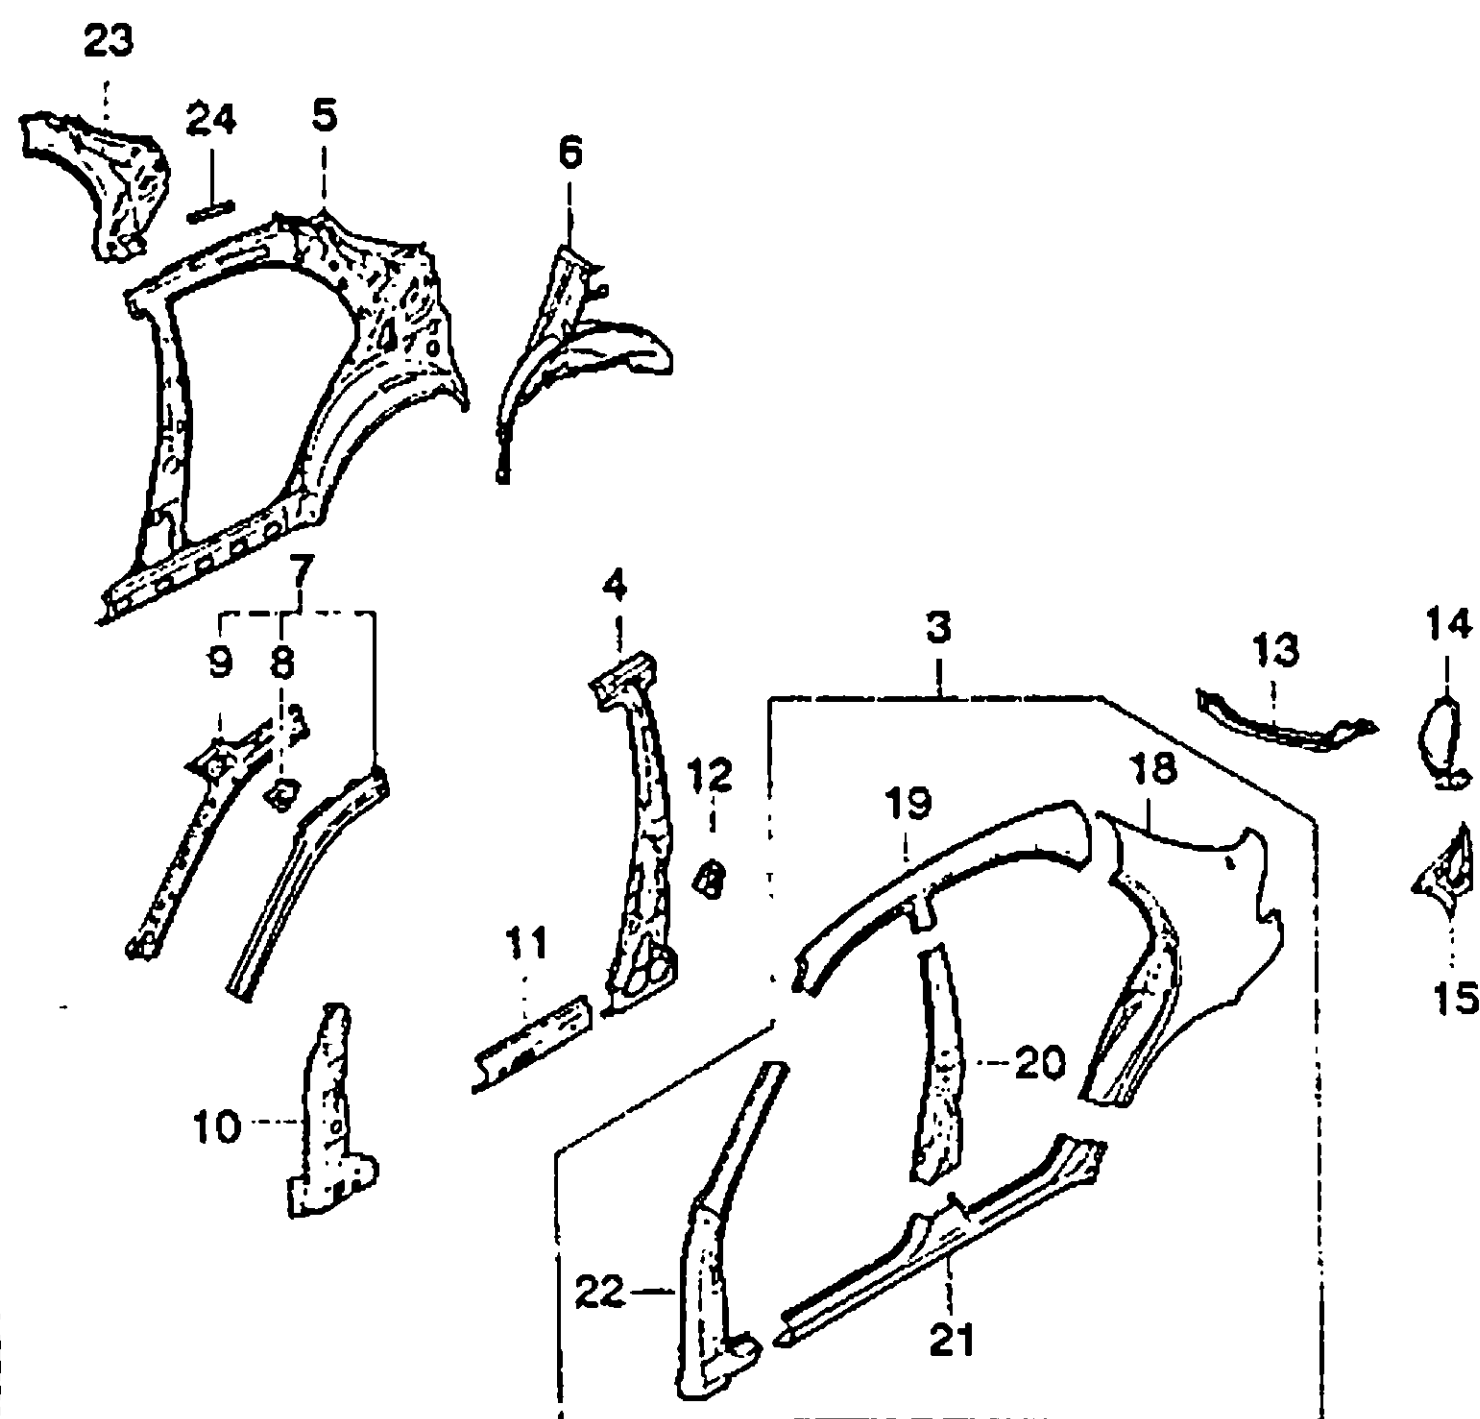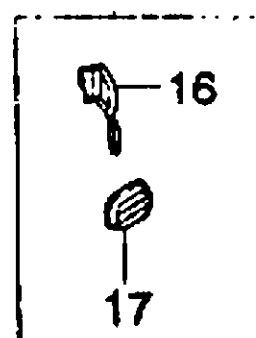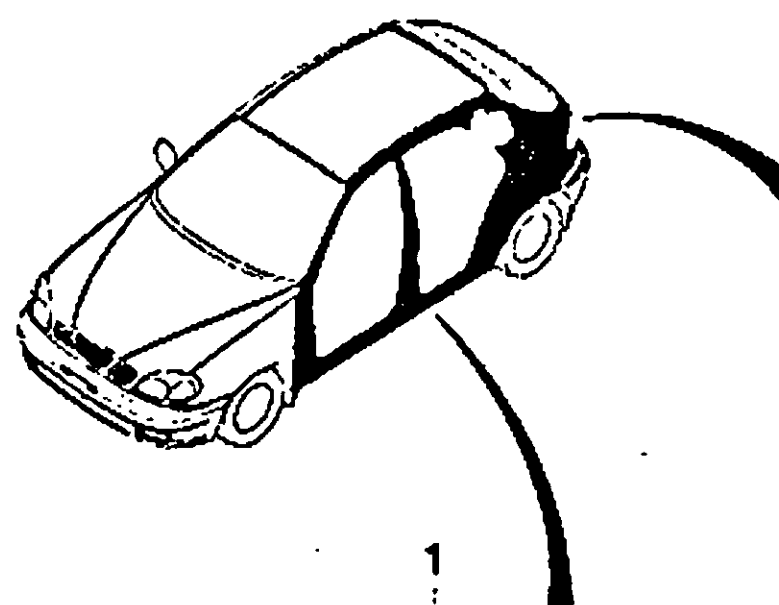


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N	3 H	5 H								
	96310160						B S . S				RH 1			L2
	[15]						(E)EXTENSION-SIDE PANEL,OTR (D)VERLÄNGERUNG,SEITE,AUßEN				(F)EXTENSION-COTE,EXTERIEUR (S)EXTENSION-LADO EXTERIOR			
	96306534						B S . S				LH 1			EB
	96306535						B S . S				RH 1			E2
	[16]						(E)SPACER A-SIDE BODY,REAR (D)DISTANZSTÜCK				(F)ENTRETOISE (S)ESPACIADOR			
	96307247						B S . S				LH 1			AB
	96307248						B S . S				RH 1			A2
	[17]						(E)INSERT A-VENTILATION (D)EINSATZ,VENTILATOR				(F)INSERTION-VENTILATION (S)REFUERZO-VENTILACION			
	96242978						B S . S				2			
	[18]						(E)PANEL-QUATER (D)VERKLEIDUNG,VIERTEL				(F)PANNEAU-QUART (S)PANEL-CUADRANTE			
	A96248552						B S . S				LH 1			
	A96248553						B S . S				RH 1			
	[19]						(E)PANEL-ROOF SIDE (D)VERKLEIDUNG,SEITE,AUßEN				(F)PANNEAU-COTE EXTERNE (S)PANEL-LADO EXTERNO,TECHO			
	A96248550						B S . S				LH 1			
	A96248551						B S . S				RH 1			
	[20]						(E)PANEL-HINHE PILLAR,CTR (D)VERKLEIDUNG,BESCHLAG,SÄUL				(F)PANNEAU (S)PANEL-PILAR BISAGAR			
	A96248554						B S . S				LH 1			
	A96248555						B S . S				RH 1			
	[21]						(E)PANEL-ROCKER (D)VERKLEIDUNG,SCHWENKUNG				(F)PANNEAU-CULBUTEUR (S)PANEL-ARCO EXTERNO			
	A96248556						B S . S				LH 1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

6411 SIDE BODY PANEL(5DOOR H/B)

5B11


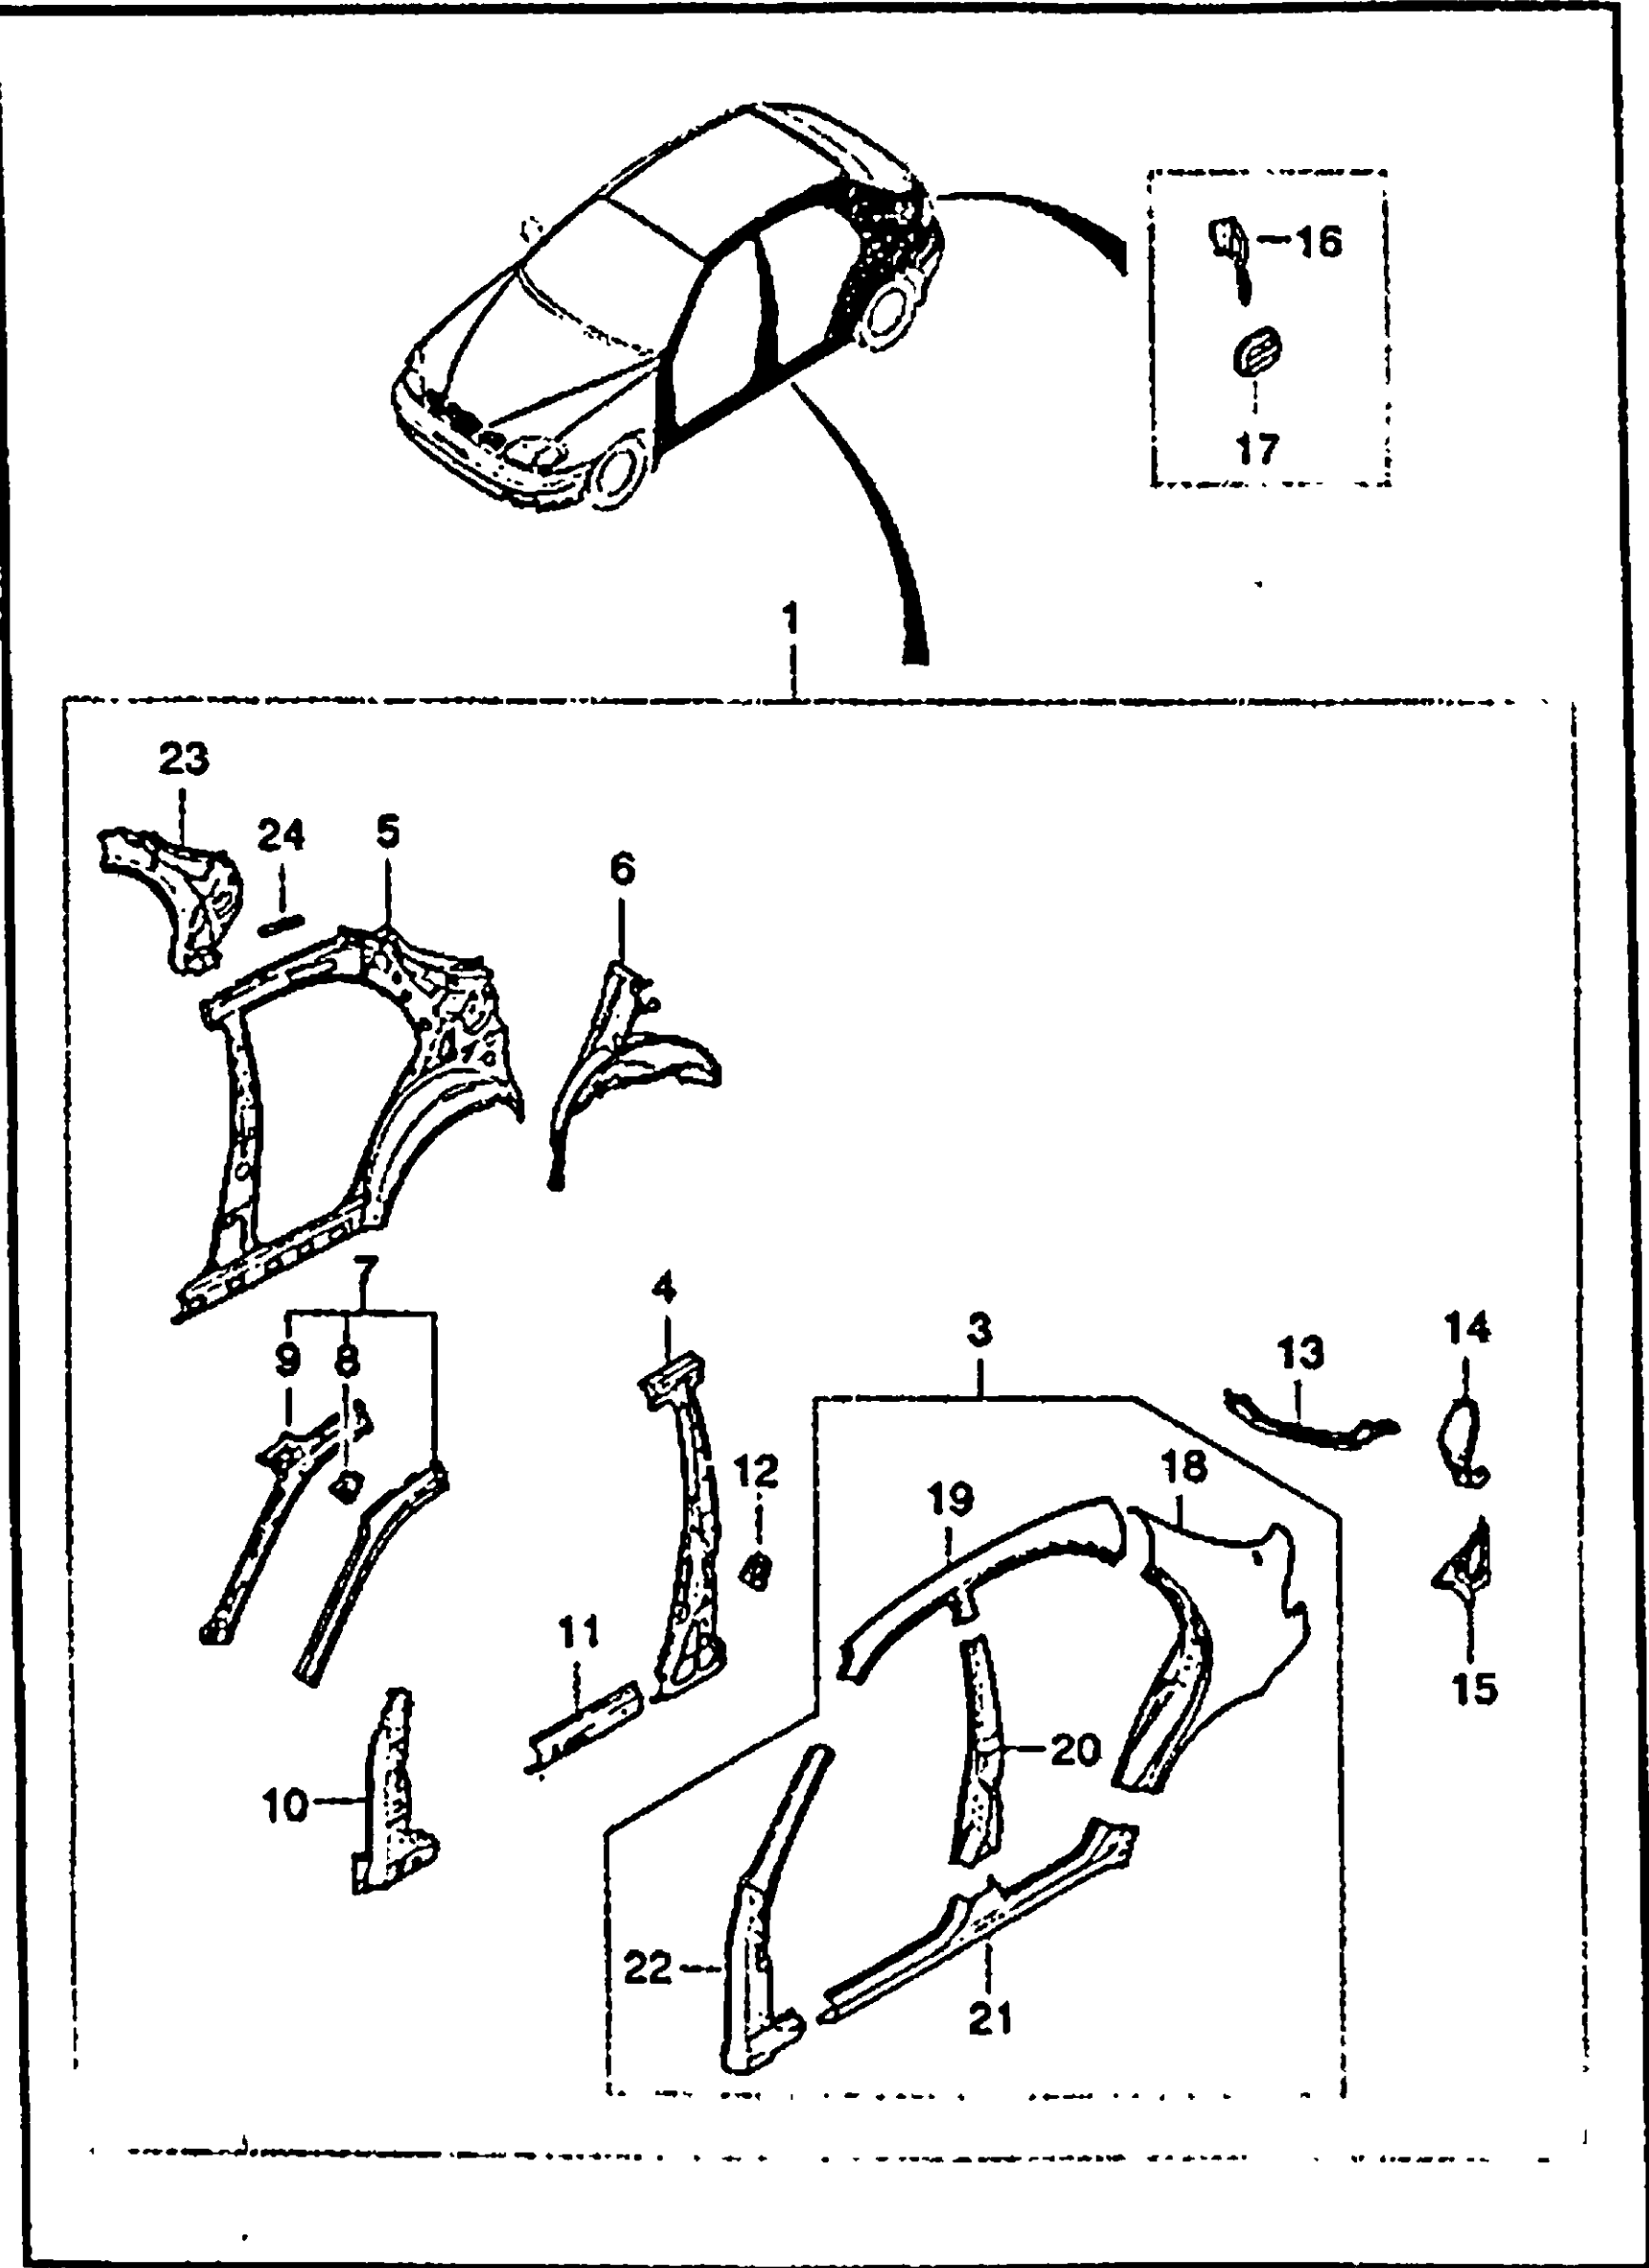


KEY NO.		PART NAME												
I C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N H	3 H	5 H	S S E X							
	A96248557	.	.	.	.	B	S . S				RH	1		
	[22]						(E)PANEL-HINHE PILLAR,FRONT (D)VERKLEIDUNG,BESCHLAG,SÄUL				(F)PANNEAU (S)PANEL-PILAR BISAGRA			
	A96248558	.	.	.	.	B	S . S				LH	1		
	A96248559	.	.	.	.	B	S . S				RH	1		
	[23]						(E)REINF A-LOCK PILLAR (D)VERSTÄRKUNG				(F)REINFORCEMENT (S)REFUERZO			
	96307241	.	.	.	.	B	S . S				LH	1		
	96307242	.	.	.	.	B	S . S				RH	1		
	[24]						(E)REINF A-REAR ASSIST GRIP (D)VERSTÄRKUNG				(F)REINFORCEMENT (S)REFUERZO			
	96307023	.	.	.	.	B	S . S -CF6					2		
	96240749	.	.	.	.	B	O . O &CF6				LH	1		
	96240750	.	.	.	.	B	O . O &CF6				RH	1		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

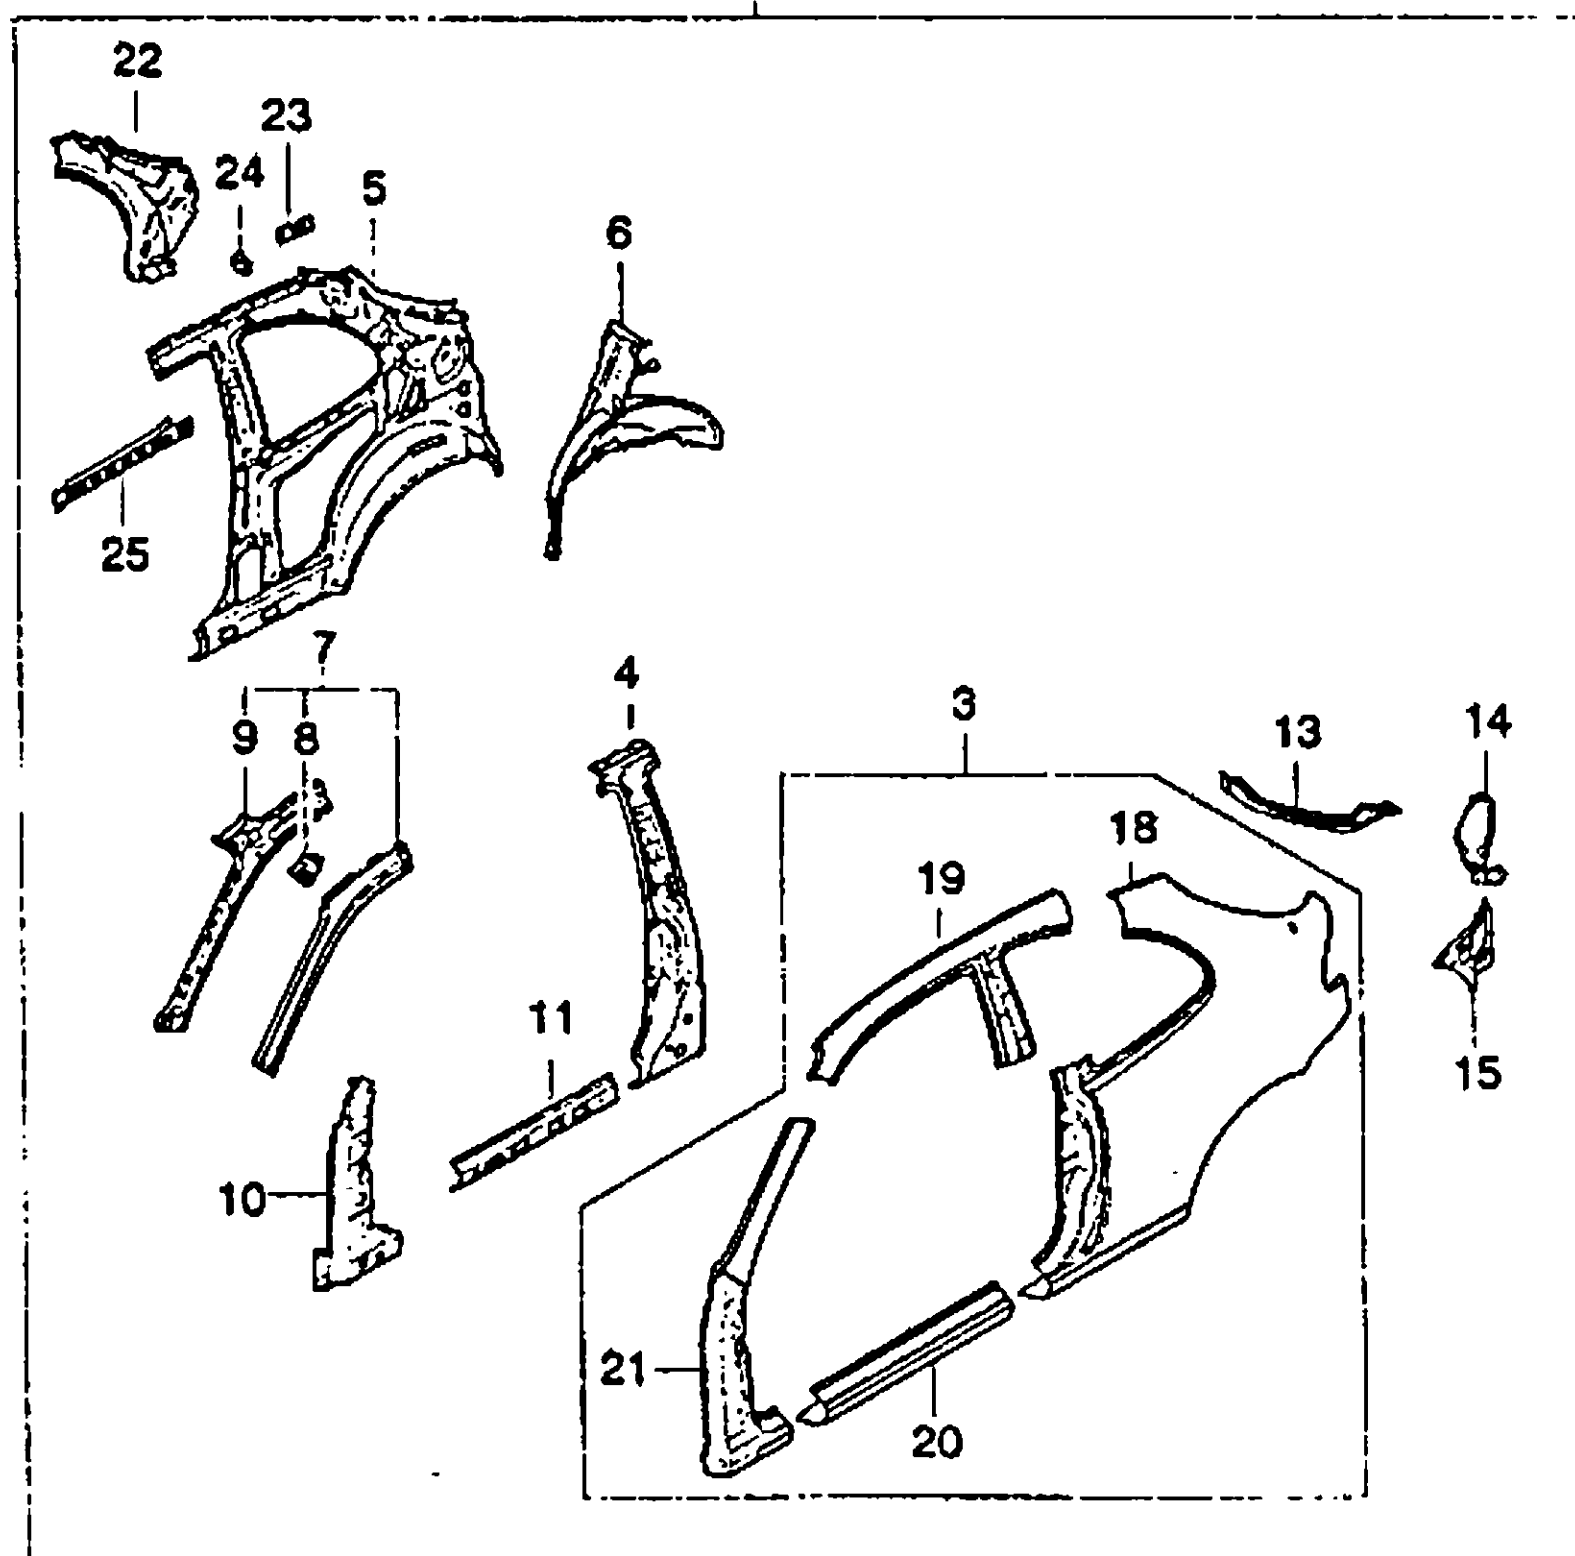

KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S E X									
	[01]	(E)PANEL A1-SIDE (D)VERKLEIDUNG A1,SEITE,AUßEN										(F)PANNEAU A1-COTE EXTERNE (S)PANEL A1-LADO EXTERNO				
	A96306501	.	.	.	B		S	.	S	-CF6	LH	1				
	A96306502	.	.	.	B		S	.	S	-CF6	RH	1				
	A96251001	.	.	.	B		O	.	O	&CF6	LH	1				
	A96251002	.	.	.	B		O	.	O	&CF6	RH	1				
	[03]	(E)PANEL-SIDE,OUTER (D)VERKLEIDUNG,SEITE,AUßEN										(F)PANNEAU-COTE EXTERNE (S)PANEL-LADO EXTERNO				
	A96251006	.	.	.	B	.	S	.	S		LH	1				
	A96251007	.	.	.	B	.	S	.	S		RH	1	970616			
N	A96255363	.	.	.	B	.	S	.	S		RH	1	970616			
	[04]	(E)REINF A-CENTER PILLAR (D)VERSTÄRKUNG,ZENTRAL-SÄULE										(F)RENFORCEMENT (S)REFUERZO-PILAR DEL CENTRO				
	96303686	.	.	.	B	.	S	.	S		LH	1				PA
	96303687	.	.	.	B	.	S	.	S		RH	1				P1
	[05]	(E)PANEL A-SIDE INNER (D)VERKLEIDUNG,SEITE,INNEN										(F)PANNEAU-COTE INTERNE (S)PANEL-LADO INTERNO				
	96306558	.	.	.	B	.	S	.	S		LH	1				
	96306559	.	.	.	B	.	S	.	S		RH	1				
	[06]	(E)WHEELHOUSE A-INNER (D)VERKLEIDUNG,RAD-GEHÄUSE										(F)PANNEAU-IMONERIE (S)PANEL-VOLANTE INTERNO				
	96307032	.	.	.	B	.	S	.	S		LH	1				WF
	96307033	.	.	.	B	.	S	.	S		RH	1				W6
	[07]	(E)PILLAR A-FRONT (D)SÄULE,VORDER-KAROSSERIE										(F)PILIER-CORPS AVANT (S)PILAR-FRENTE DE CUERPO				
	96303787	.	.	.	B	.	S	.	S		LH	1				LA
	96303788	.	.	.	B	.	S	.	S		RH	1				L1




ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

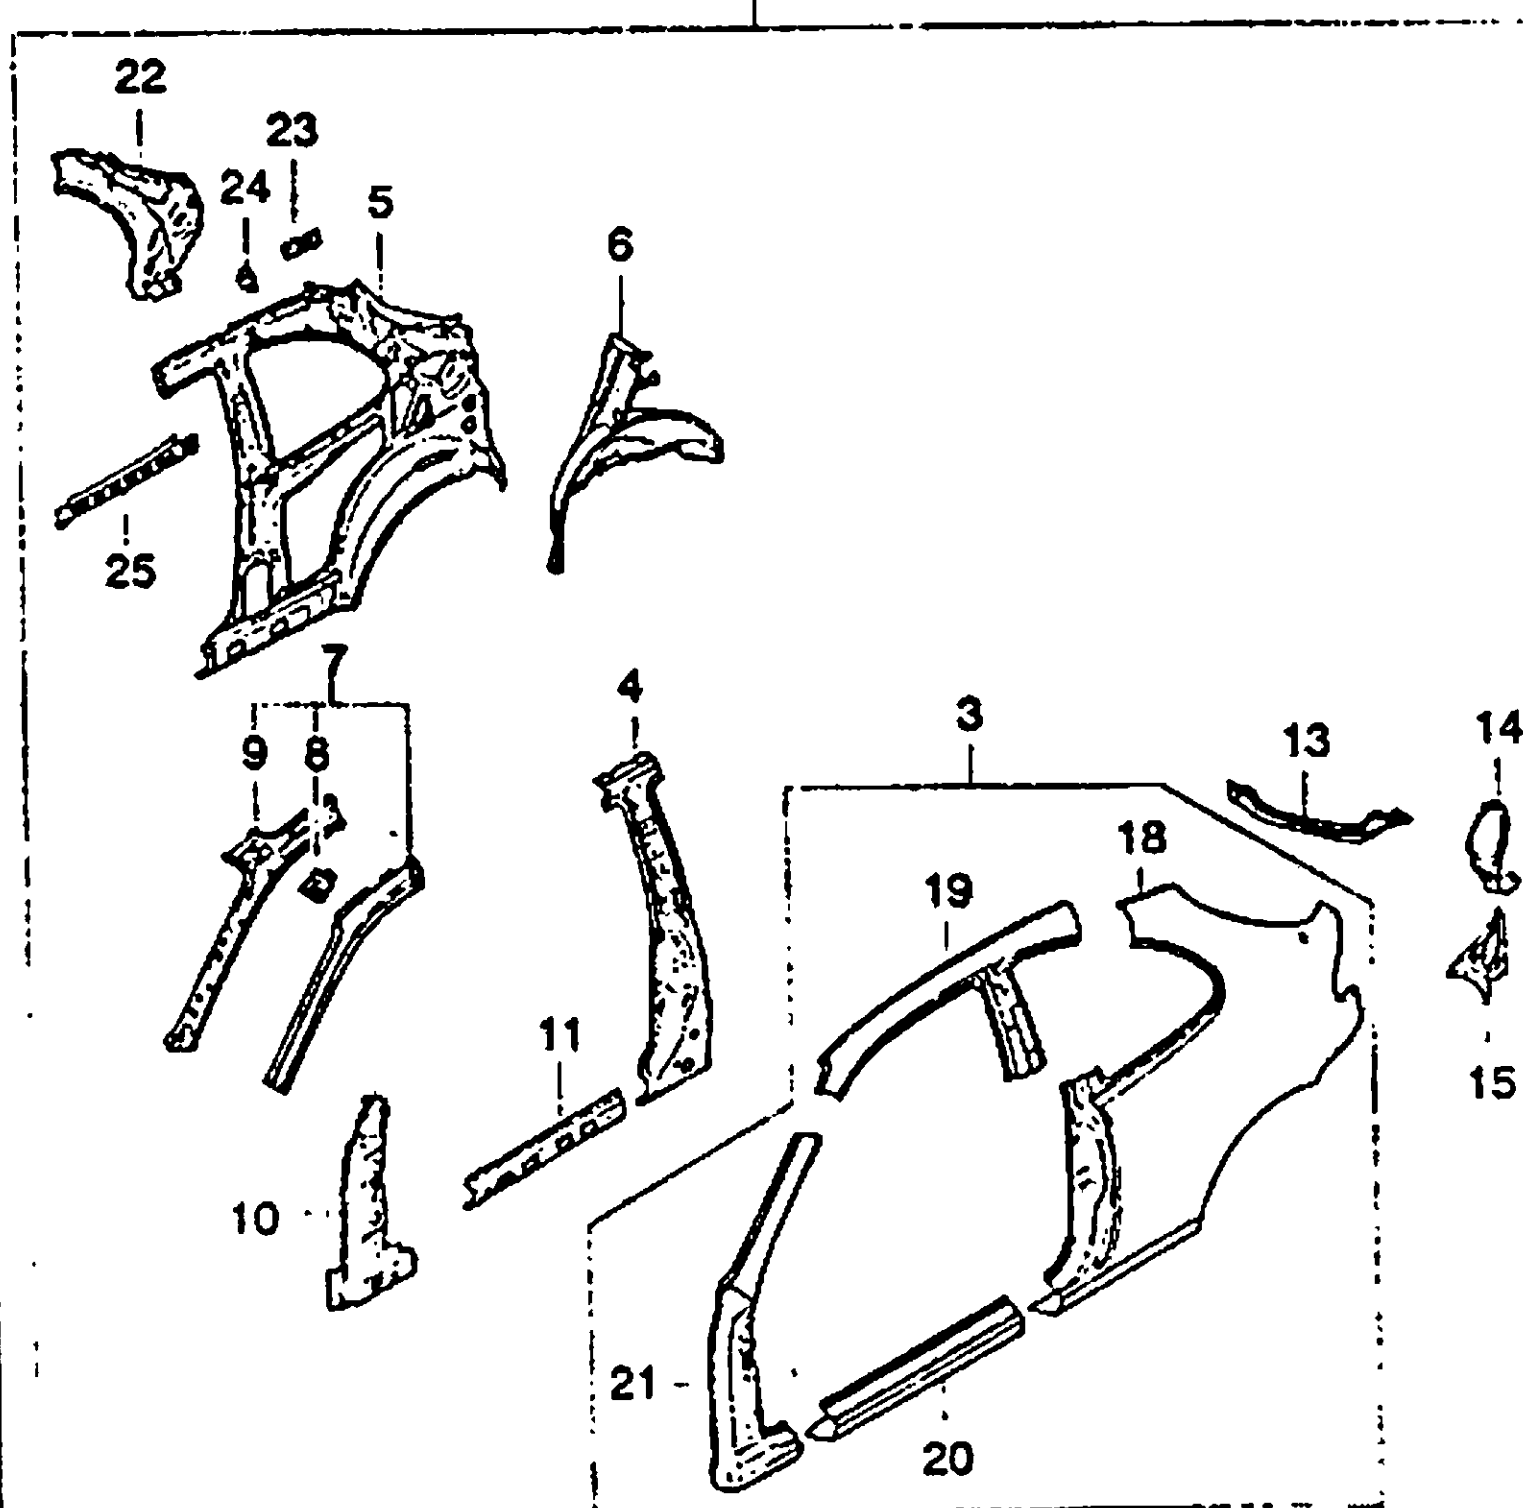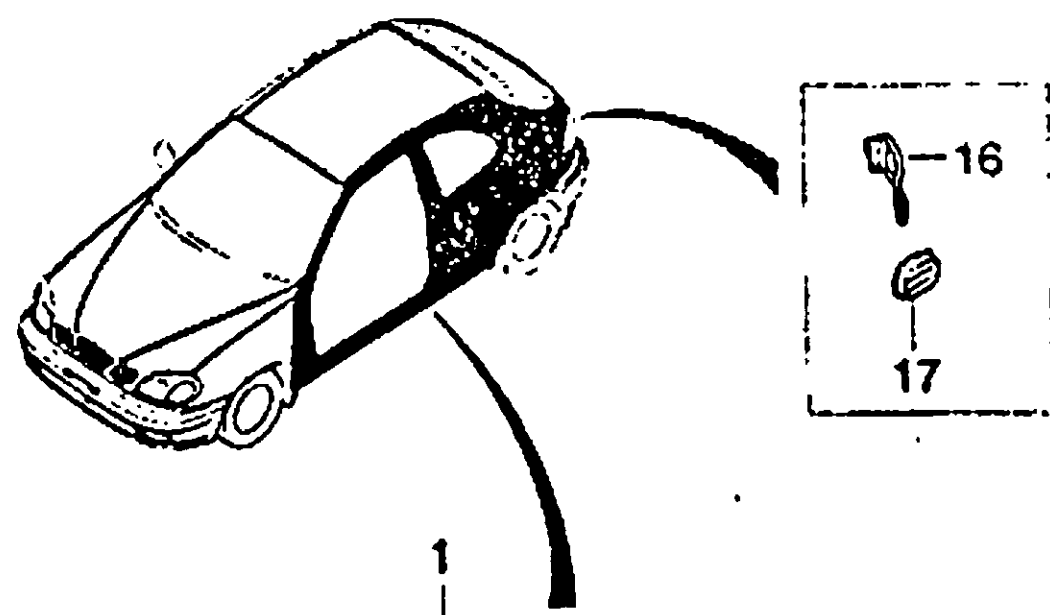

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q / T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[08]	(E)PATCH-FRONT PILLAR (D)TEIL,VORDER-SÄULE									(F)PIECE-PILIER,AVANT (S)PIEZA-FRENTE DE PILAR					
	96233763	. . . B . S . S									LH 1					
	96233764	. . . B . S . S									RH 1					
	[09]	(E)PILLAR A-FRONT,INNER (D)SÄULE,VORDER-KAROSSERIE									(F)PILIER-CORPS AVANT (S)PILAR-FRENTE DE CUERPO					
	96307046	. . . B . S . S									LH 1					
	96307047	. . . B . S . S									RH 1					
	[10]	(E)REINF A-FRONT PILLAR,LWR (D)VERSTÄRKUNG									(F)RENFORCEMENT (S)REFUERZO-BISAGRA					
	96306612	. . . B . S . S									LH 1			NA		
	96306613	. . . B . S . S									RH 1			N1		
	[11]	(E)REINFORCEMENT-ROCKER (D)VERSTÄRKUNG									(F)RENFORCEMENT (S)REFUERZO					
	96242806	. . . B . S . S									LH 1					
	96242807	. . . B . S . S									RH 1					
	[13]	(E)PIECE-SIDE PANEL OTR CONN (D)TEIL,VEREINDUNGS									(F)PIECE (S)PIEZA					
	96306524	. . . B . S . S									LH 1			CB		
	96306525	. . . B . S . S									RH 1			C2		
	[14]	(E)PATCH A-TAIL LAMP HOUSING (D)TEIL-GEHAUSE									(F)PIECE-LOGEMENT (S)PIEZA-CARCASA					
	96310159	. . . B . S . S									LH 1			L8		
	96310160	. . . B . S . S									RH 1			L2		
	[15]	(E)EXTENSION-SIDE PANEL,OTR (D)VERLÄNGERUNG,SEITE,AUßEN									(F)EXTENSION-COTE,EXTERIEUR (S)EXTENSION-LADO EXTERIOR					
	96306534	. . . B . S . S									LH 1			EB		
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							



6412 SIDE BODY PANEL(3DOOR H/B)

5E11

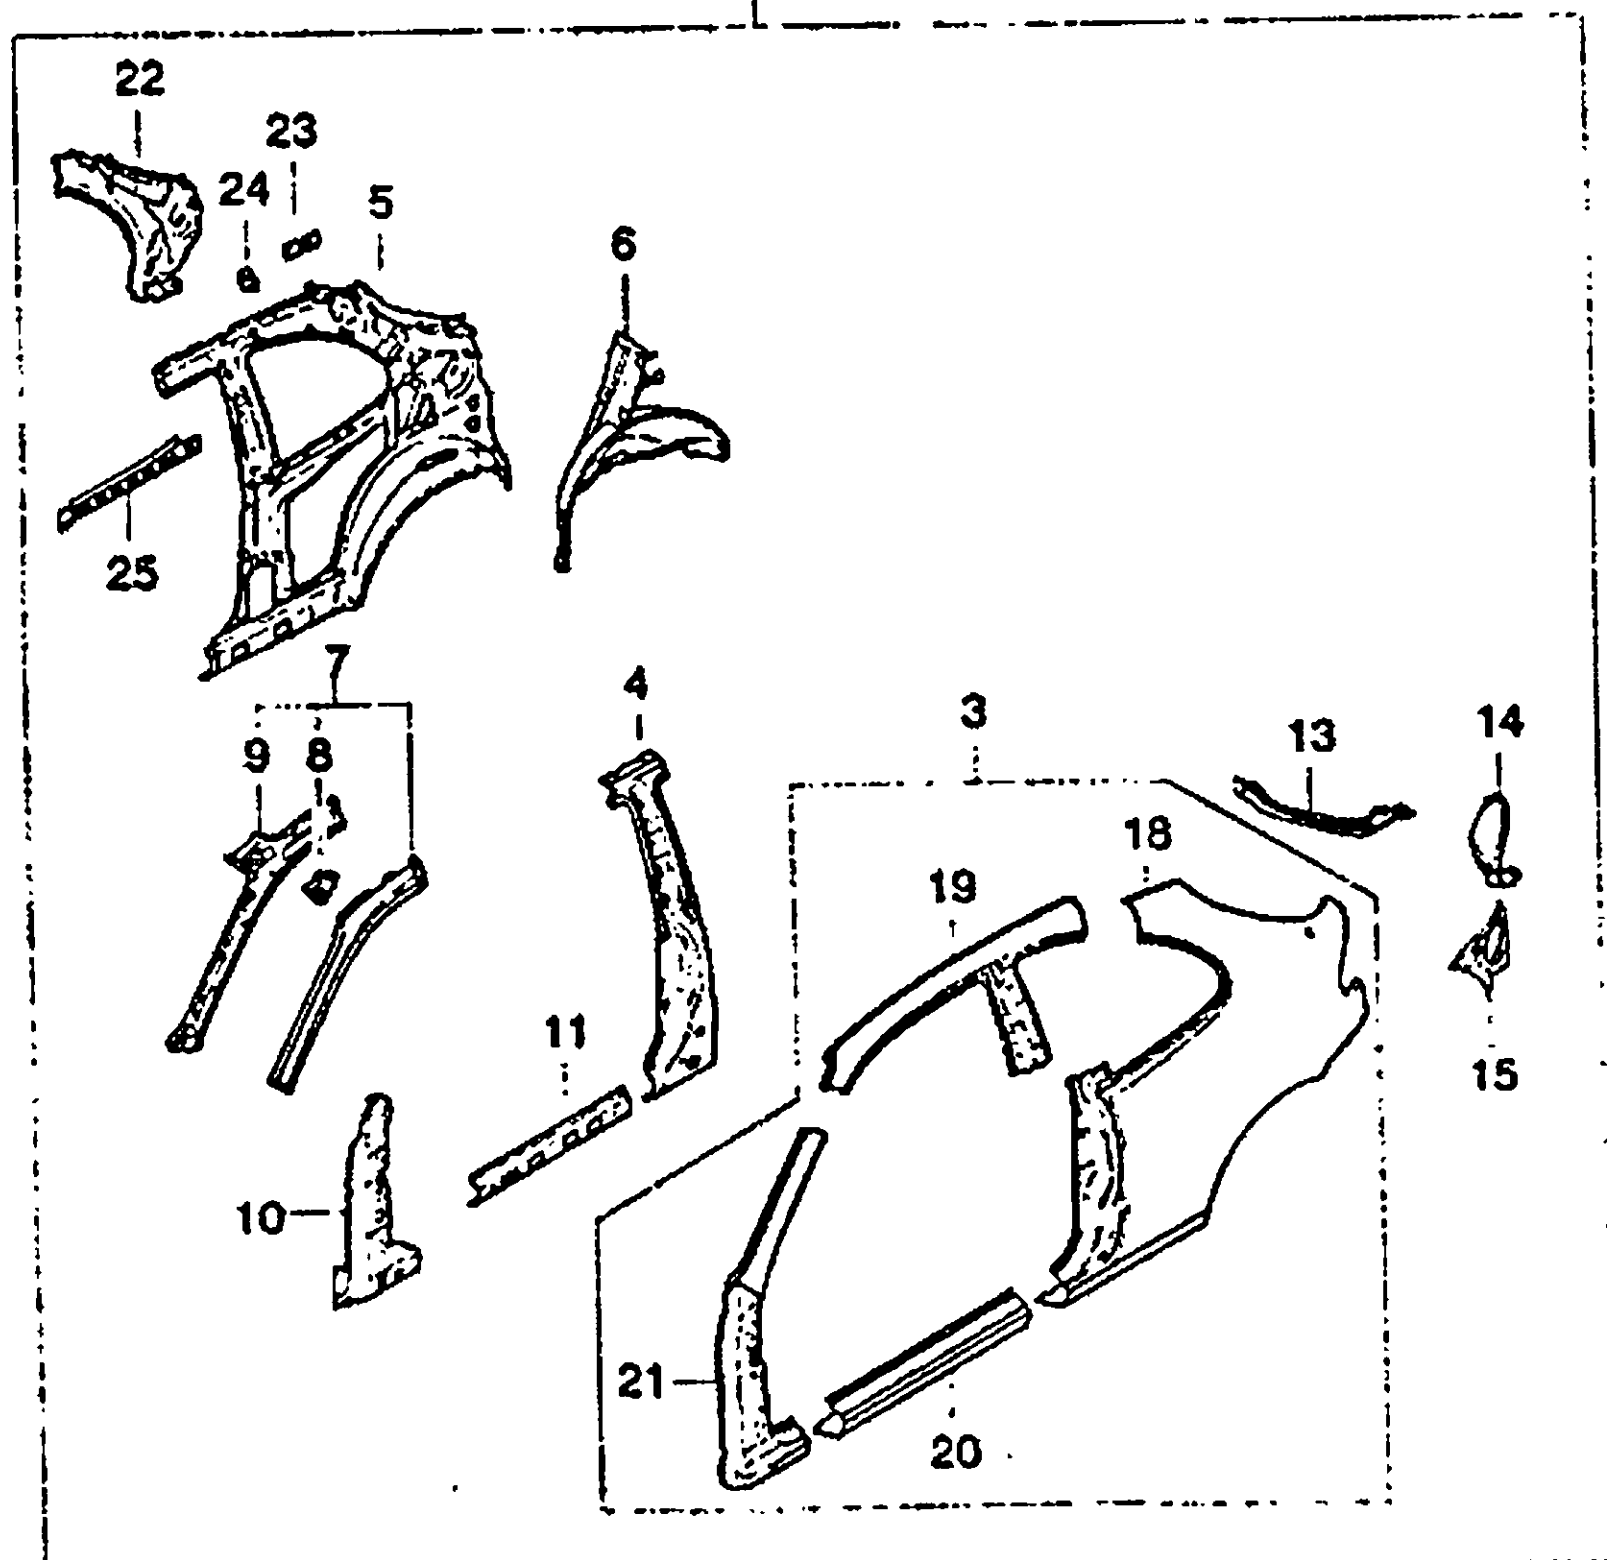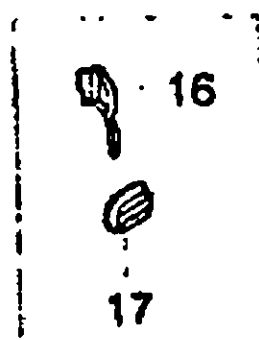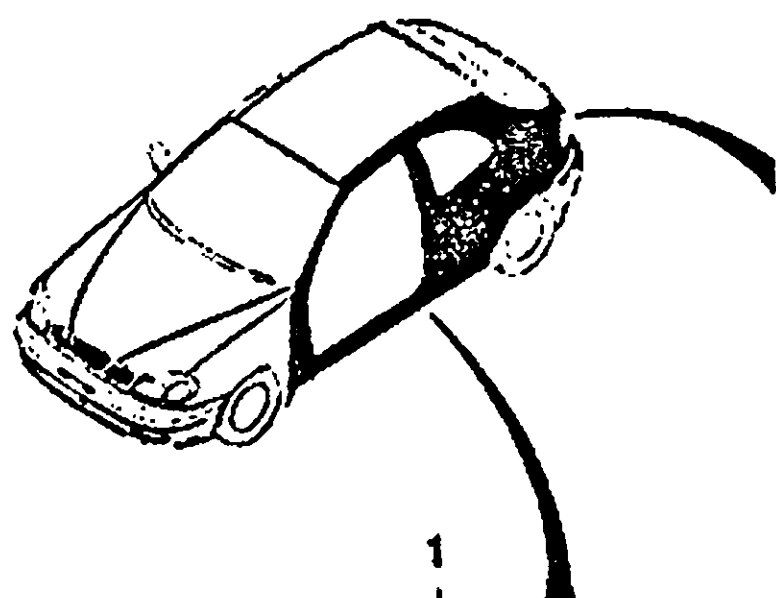


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL								
				4 N	3 H	5 H	S S	S S				S X			
											FROM	TO			
	96306535				B		S		S		RH	1		E2	
	[16]				(E)SPACER A-SIDE BODY,REAR						(F)ENTRETOISE				
					(D)DISTANZSTÜCK						(S)ESPACIADOR				
	96307247				B		S		S		LH	1		AB	
	96307248				B		S		S		RH	1		A2	
	[17]				(E)INSERT A-VENTILATION						(F)INSERTION-VENTILATION				
					(D)EINSATZ, VENTILATOR						(S)REFUERZO-VENTILACION				
	96242978				B		S		S			2			
	[18]				(E)PANEL- QUATER						(F)PANNEAU-QUART				
					(D)VERKLEIDUNG, VIERTEL						(S)PANEL-CUADRANTE				
	A96248544				B		S		S		LH	1			
	A96248545				B		S		S		RH	1			
	[19]				(E)PANEL-ROOF SIDE						(F)PANNEAU-COTE EXTERNE				
					(D)VERKLEIDUNG, SEITE, AUßEN						(S)PANEL-LADO EXTERNO, TECHO				
	A96248542				B		S		S		LH	1			
	A96248543				B		S		S		RH	1			
	[20]				(E)PANEL-ROCKER						(F)PANNEAU-CULBUTEUR				
					(D)VERKLEIDUNG, SCHWENKUNG						(S)PANEL-ARCO EXTERNO				
	A96248546				B		S		S		LH	1			
	A96248547				B		S		S		RH	1			
	[21]				(E)PANEL-HINHE PILLAR, FRONT						(F)PANNEAU				
					(D)VERKLEIDUNG, BESCHLAG, SÄUL						(S)PANEL-PILAR BISAGRA				
	A96248548				B		S		S		LH	1			
	A96248549				B		S		S		RH	1			
	[22]				(E)REINF A-LOCK PILLAR						(F)RENFORCEMENT				
					(D)VERSTÄRKUNG						(S)REFUERZO				
	96303749				B		S		S		LH	1			

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

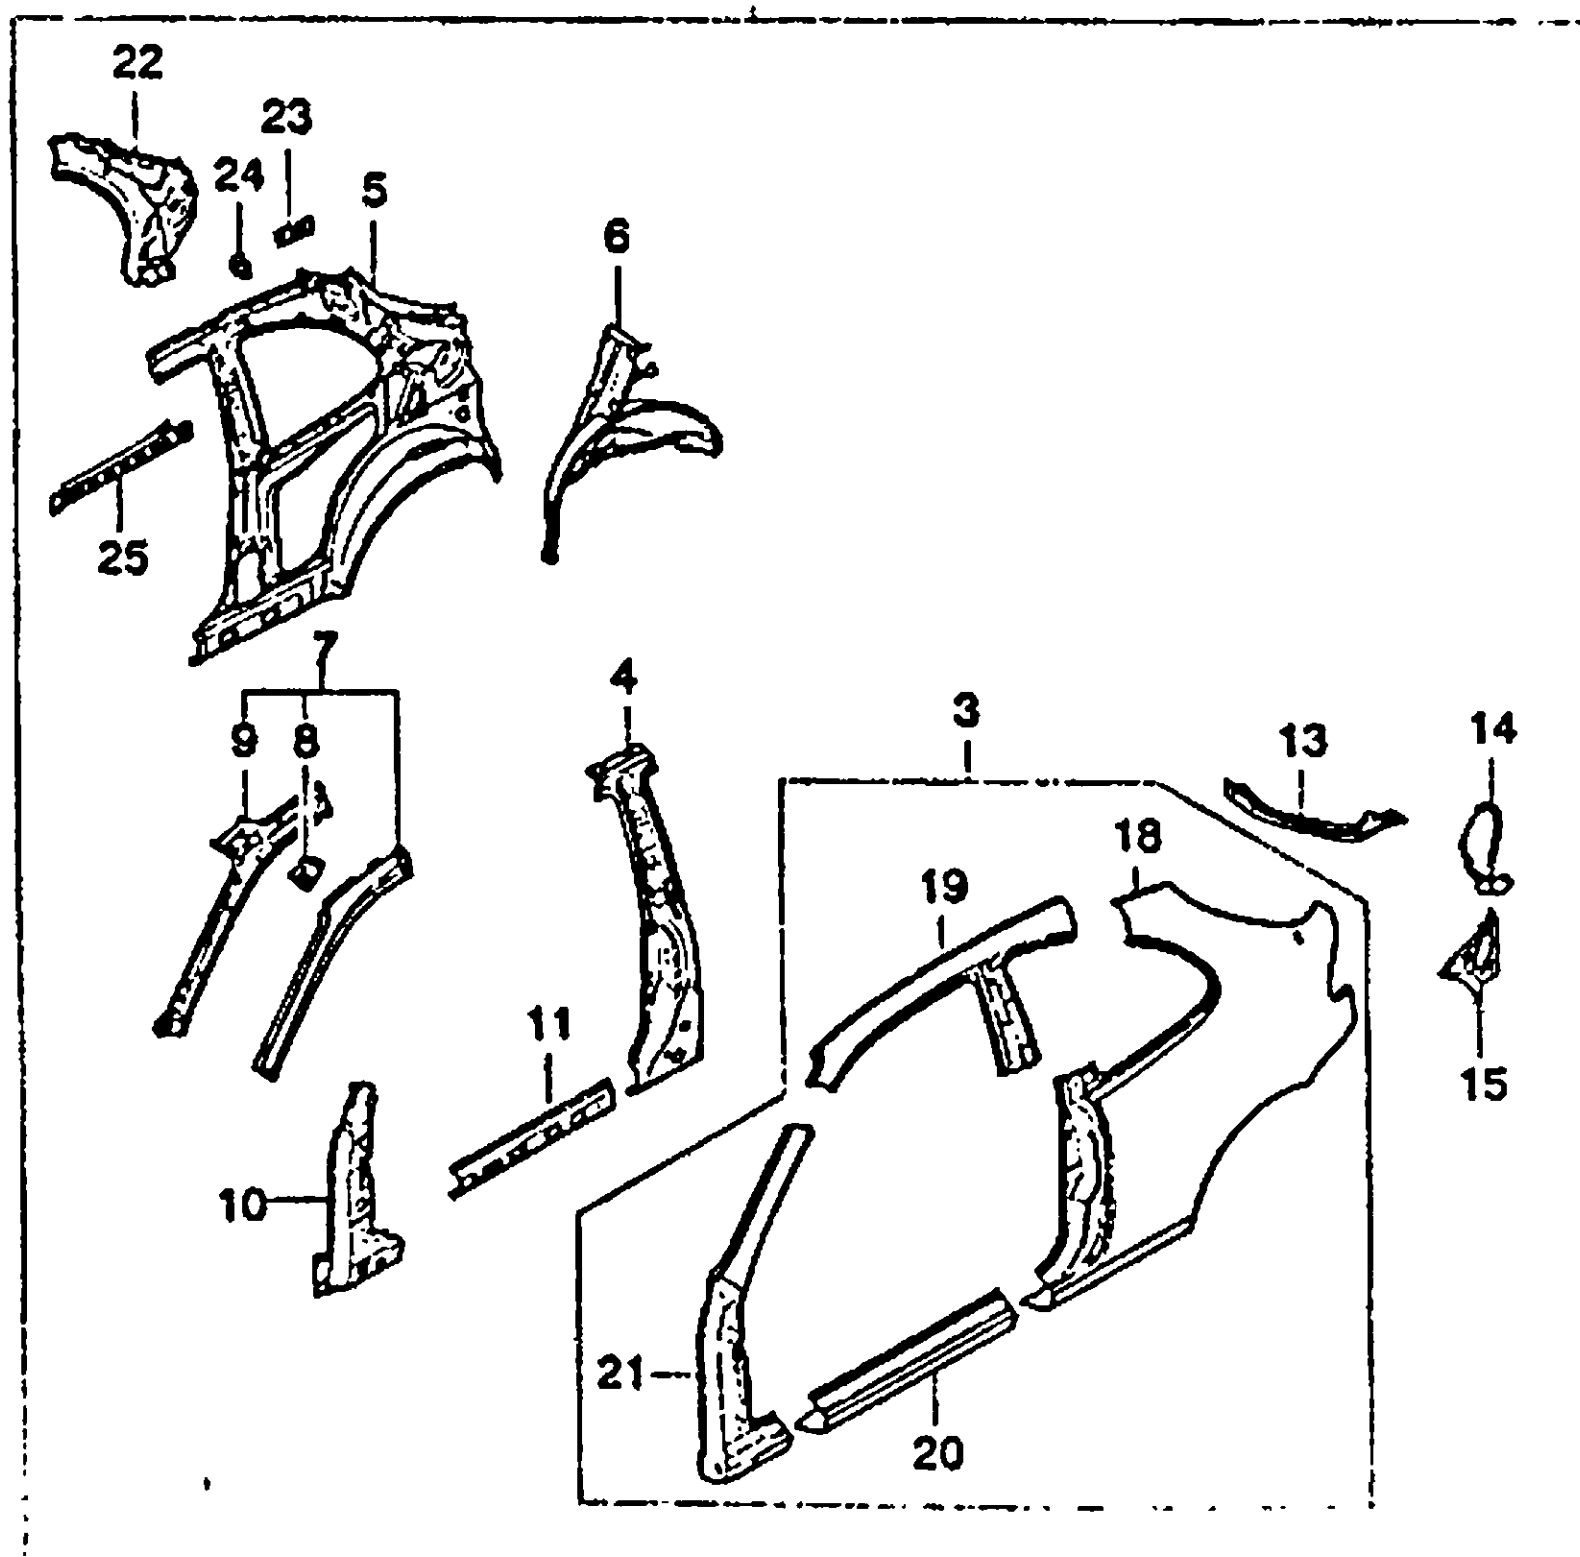
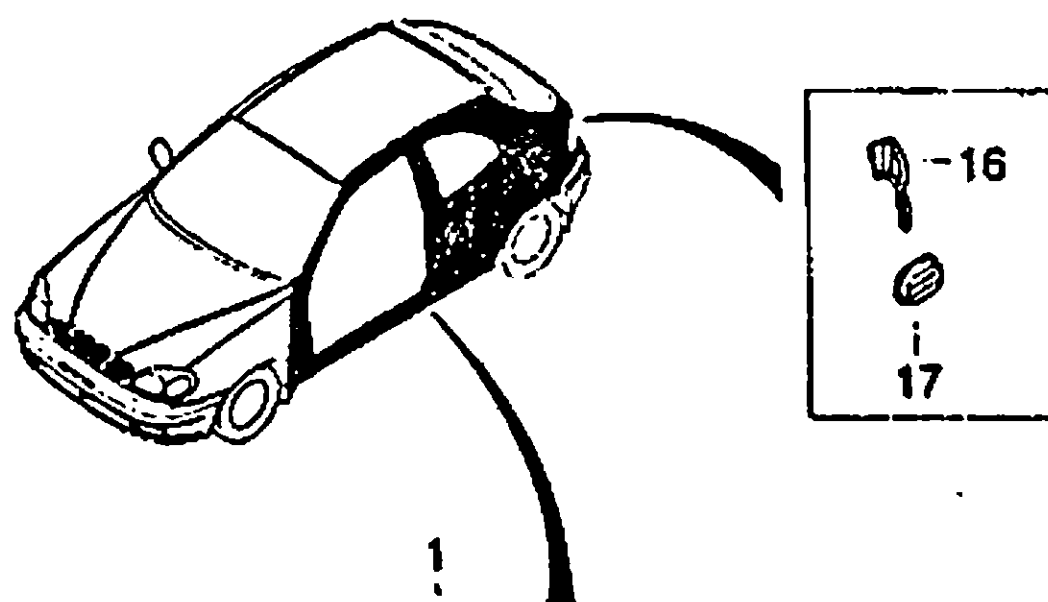


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S E	S X
	96303750	.	.	.	B	.	S	.	S		RH	1				
	[23]	(E)	REINF A-SUNROOF BRACKET							(F)	RENFORCEMENT					
		(D)	VERSTÄRKUNG							(S)	REFUERZO					
	96240740	.	.	.	B	.	O	.	O	&CF6	LH	1				
	96240741	.	.	.	B	.	O	.	O	&CF6	RH	1				
	[24]	(E)	REINFORCEMENT A-COAT HOOK							(F)	RENFORCEMENT					
		(D)	VERSTÄRKUNG							(S)	REFUERZO					
	96307022	.	.	.	B	.	S	.	S	-CF6	LH	1				
	96310175	.	.	.	B	.	S	.	S	-CF6	RH	1				
	[25]	(E)	RAIL-SIDE PANEL, INNER							(F)	RAIL-COTE INTERNE					
		(D)	SCHIENE, SEITE, INNEN							(S)	RIEL-LADO INTERNO					
	96307123	.	.	.	B	.	S	.	S		LH	1				
	96307124	.	.	.	B	.	S	.	S		RH	1				



ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC G = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

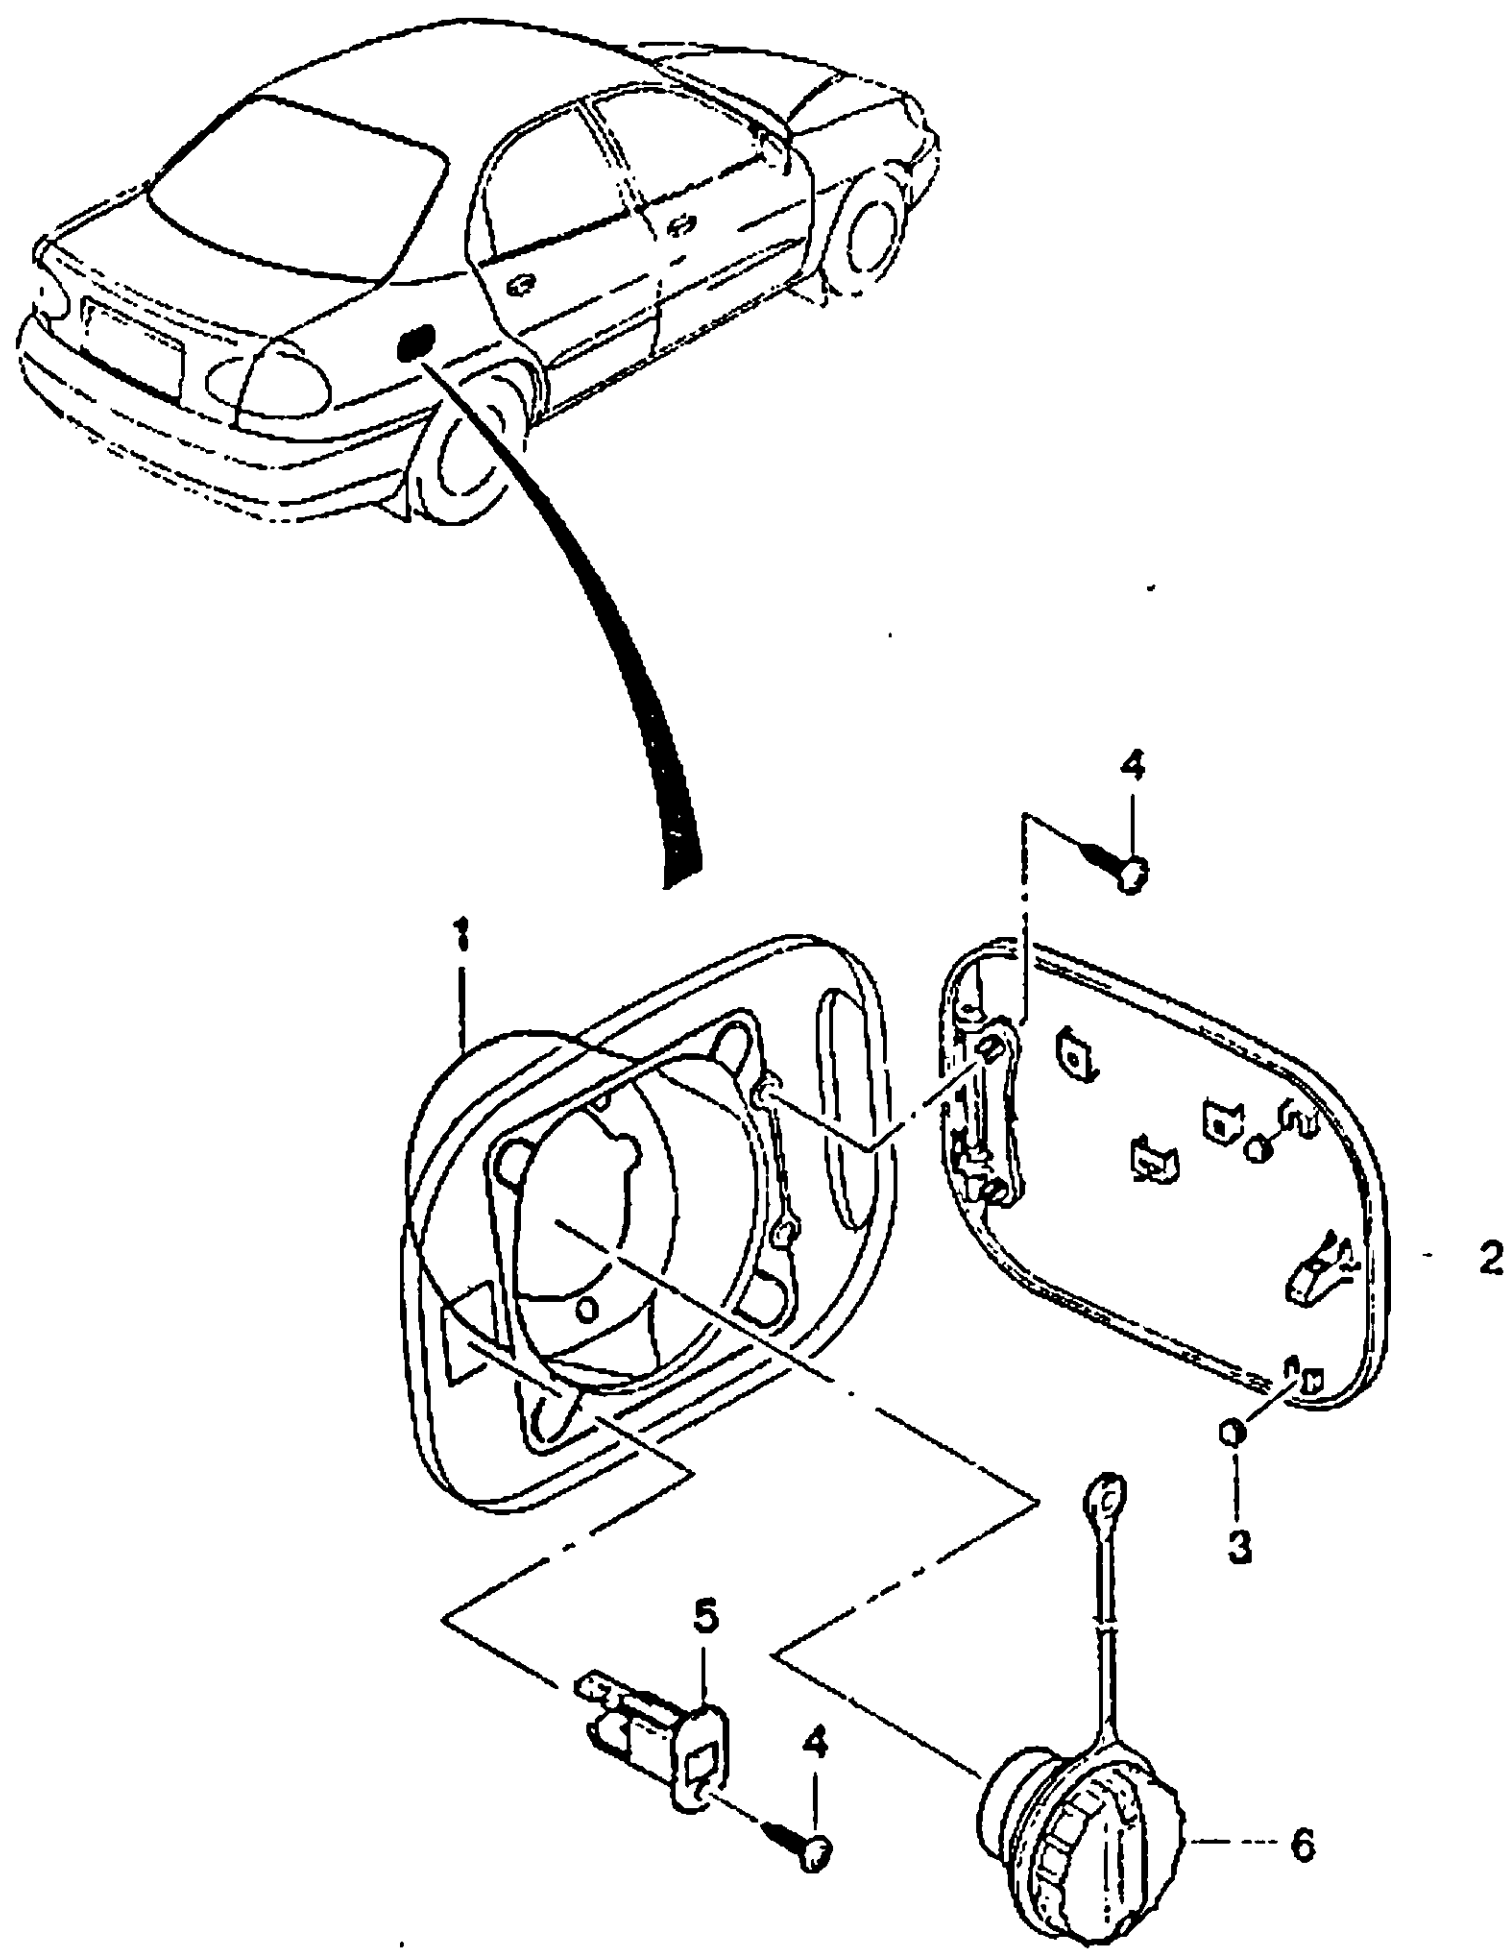


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01] 96306516	(E)CAP-FUEL FILLER (D)DECKEL,BENZINTANK			B	B	B	S	S	S		(F)CHAPEAU (S)TAPA-TOMA DE GASOLINA 1		FB		
	[02] 96303245 96303238 96307261	(E)DOOR A-FUEL FILLER (D)TÜR,BENZINTANK			B			S	S	S		1 1 1	INCL. #3 INCL. #3 INCL. #3			
	[03] 96246535	(E)BUMPER-FUEL FILLER DOOR (D)STOBSTANGE			B	B	B	S	S	S		2				
	[04] 03160-42132	(E)SCREW-TAPPING (D)SCHRAUBE			B	B	B	S	S	S		3				
	[05] 96248525 N 96250424	(E)LOCK A-FUEL FILLER DOOR (D)SCHLOß			B	B	B	S	S	S		1 1	970616 970616			
	[06] 22591475	(E)CAP-FUEL SCREW (D)SCHRAUBEDECKEL,BENZINTANK			B	B	B	S	S	S		1	(F)CHAPEAU (S)TAPA-TORNILLO			
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

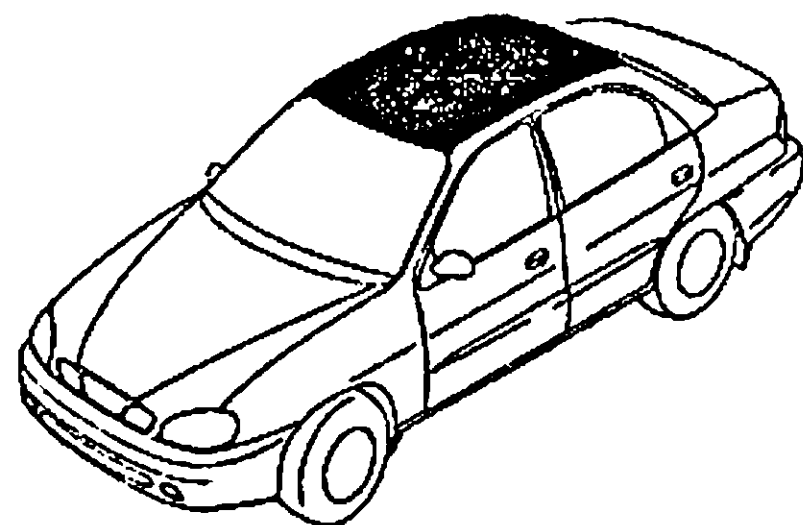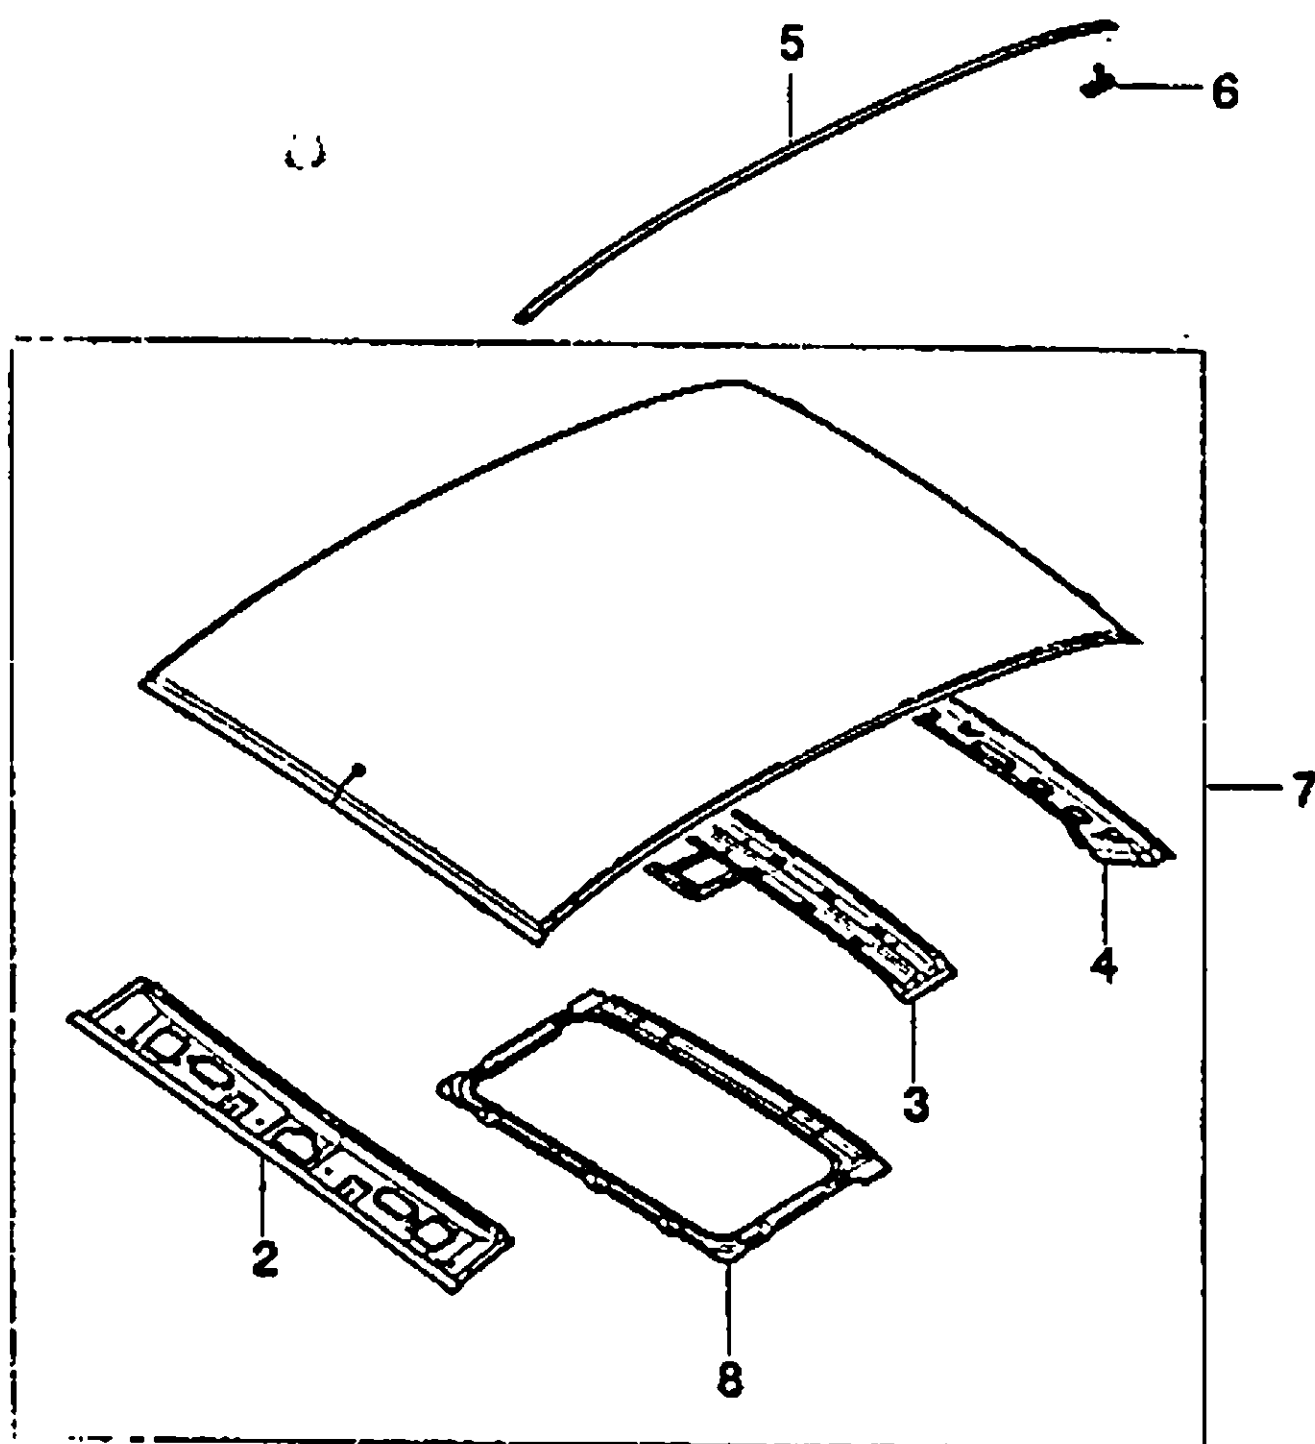


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[02]	(E)RAIL-WINDSHIELD HEADER									(F)RAIL-HAUT DE PARE-BRISE				
	96303820	(D)SCHIENE									(S)RIEL				
		. . B B B S S S									1				
	[03]	(E)SUPPORT A-ROOF,CENTER									(F)SUPPORT-TOIT				
	96307051	(D)TRÄGER,DACH									(S)SOPORTE-TECHO				
		. . B B B S S S									1				
	[04]	(E)FRAME-ROOF,REAR									(F)CADRE-TOIT ARRIERE				
	96303823	(D)RAHMEN,HINTERES DACH									(S)ARMADURA-TECHO TRASERO				
		. . B . . S S S									1				
	96303824	. . . B B S . S									1				
	[05]	(E)MOLDING A-ROOF									(F)MOULURE-TOIT				
	96303484	(D)PREßTEIL DACH									(S)MOLOURA-TECHO				
		. . B . . S S S									LH 1				
	96306107	. . B . . S S S									RH 1				
	96306233	. . . B B S . S									LH 1				
	96306234	. . . B B S . S									RH 1				
	[06]	(E)CLIP-ROOF MOLDING									(F)ATTACHE				
	96233387	(D)KLEMME									(S)GRAPA				
		. . B B B S S S									8				
	[07]	(E)PANEL A-ROOF									(F)PANNEAU-TOIT				
	A96303816	(D)VERKLEIDUNG,DACH									(S)PANEL-TECHO				
		. . B . . S S S									1			INCL.#2-4	
	96232378	. . B . . O O O									1			INCL.#2,4,8	
	A96303817	. . . B . S . S									1			INCL.#2-4	
	96232379	. . . B . O . O									1			INCL.#2,4,8	
	A96230852	 B S . S									1			INCL.#2-4	
	96232380	 B O . O									1			INCL.#2,4,8	
ENG(ENGINE)						T/A(TRANSAXLE)				BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON						M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

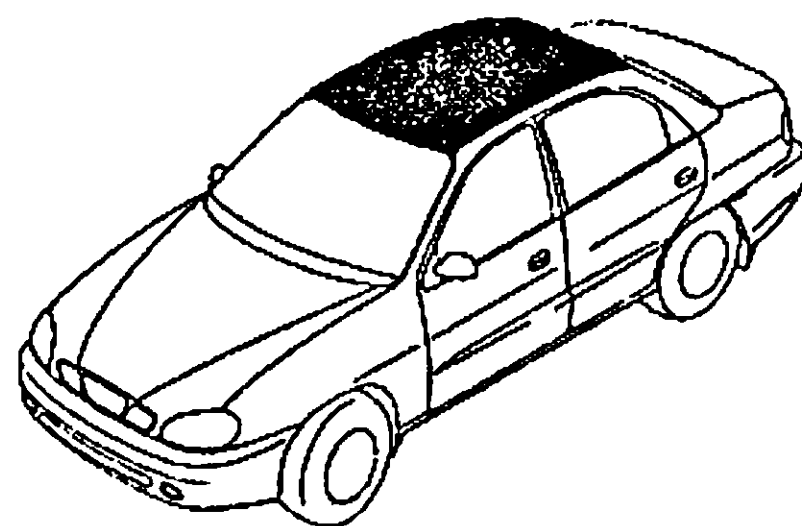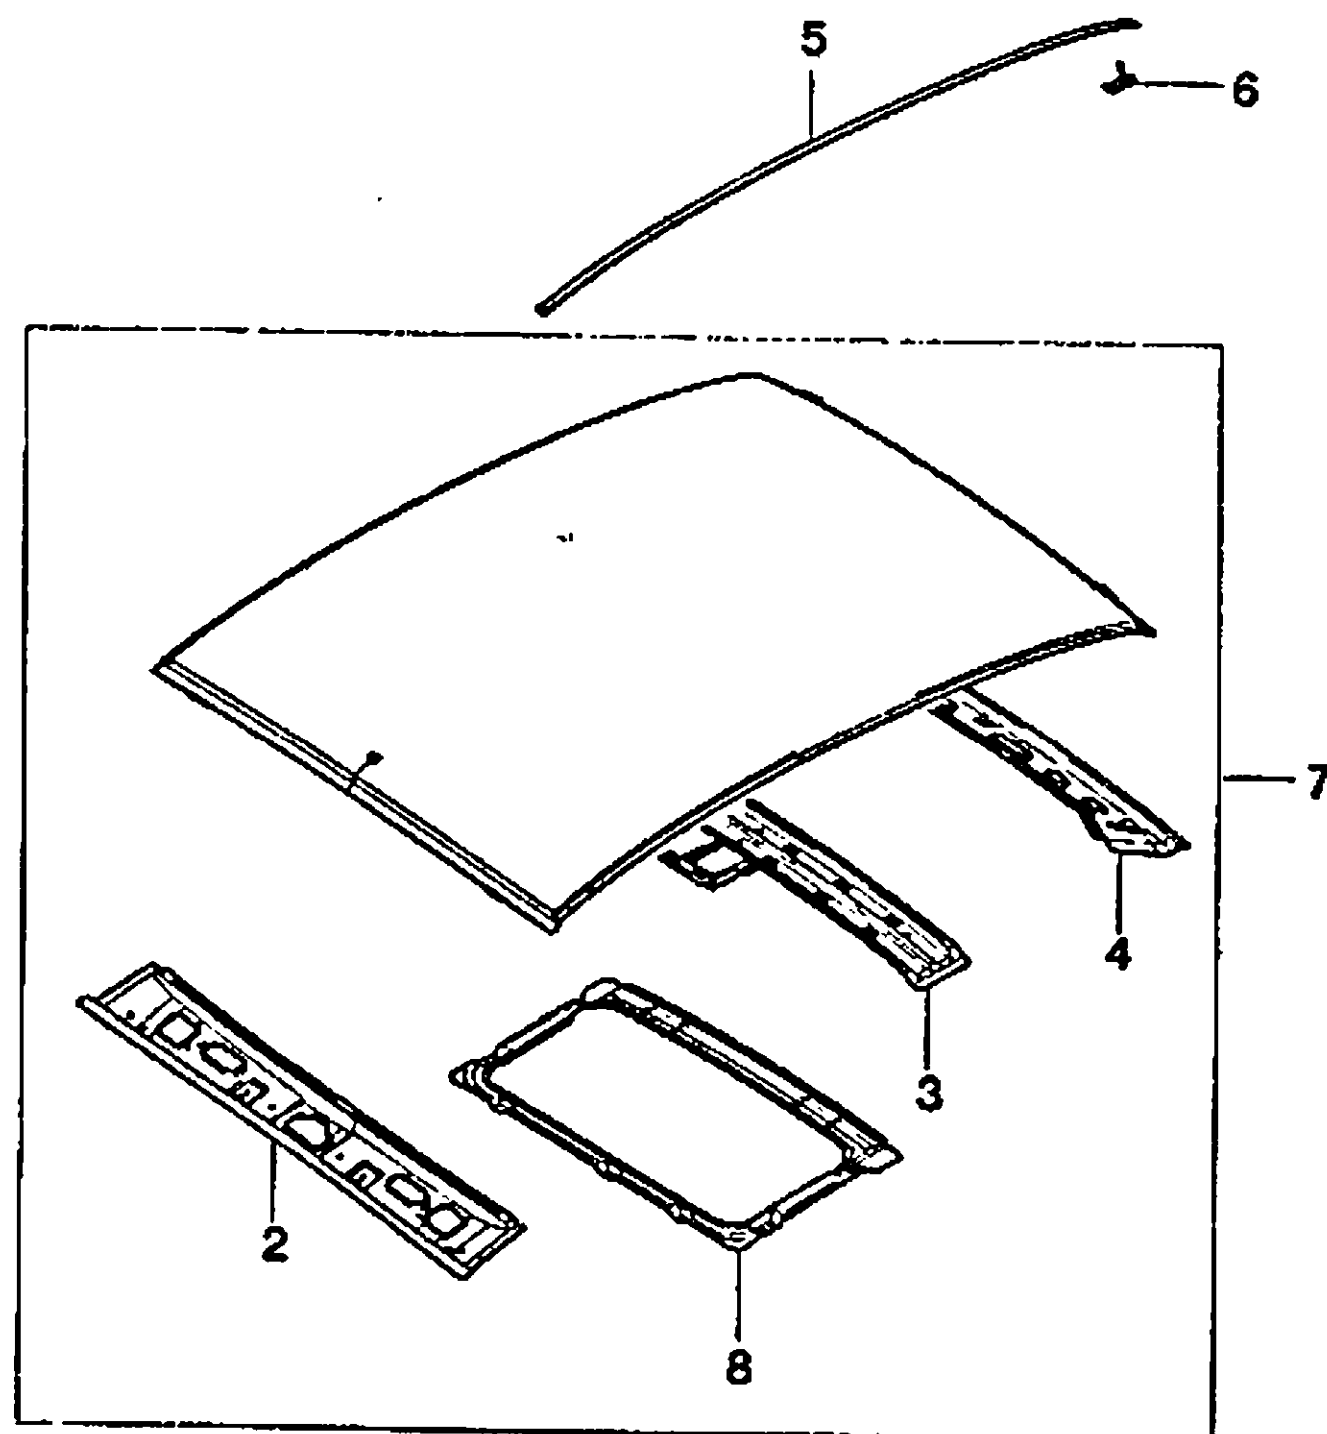

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[08]	(E)FRAME A-SUN ROOF (D)RAHMEN									(F)CADRE (S)ARMADURA					
	96240722	.	.	B	.	B	O	O	O	&CF6			1			
	96240723	.	.	.	B	.	O	.	O	&CF6			1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

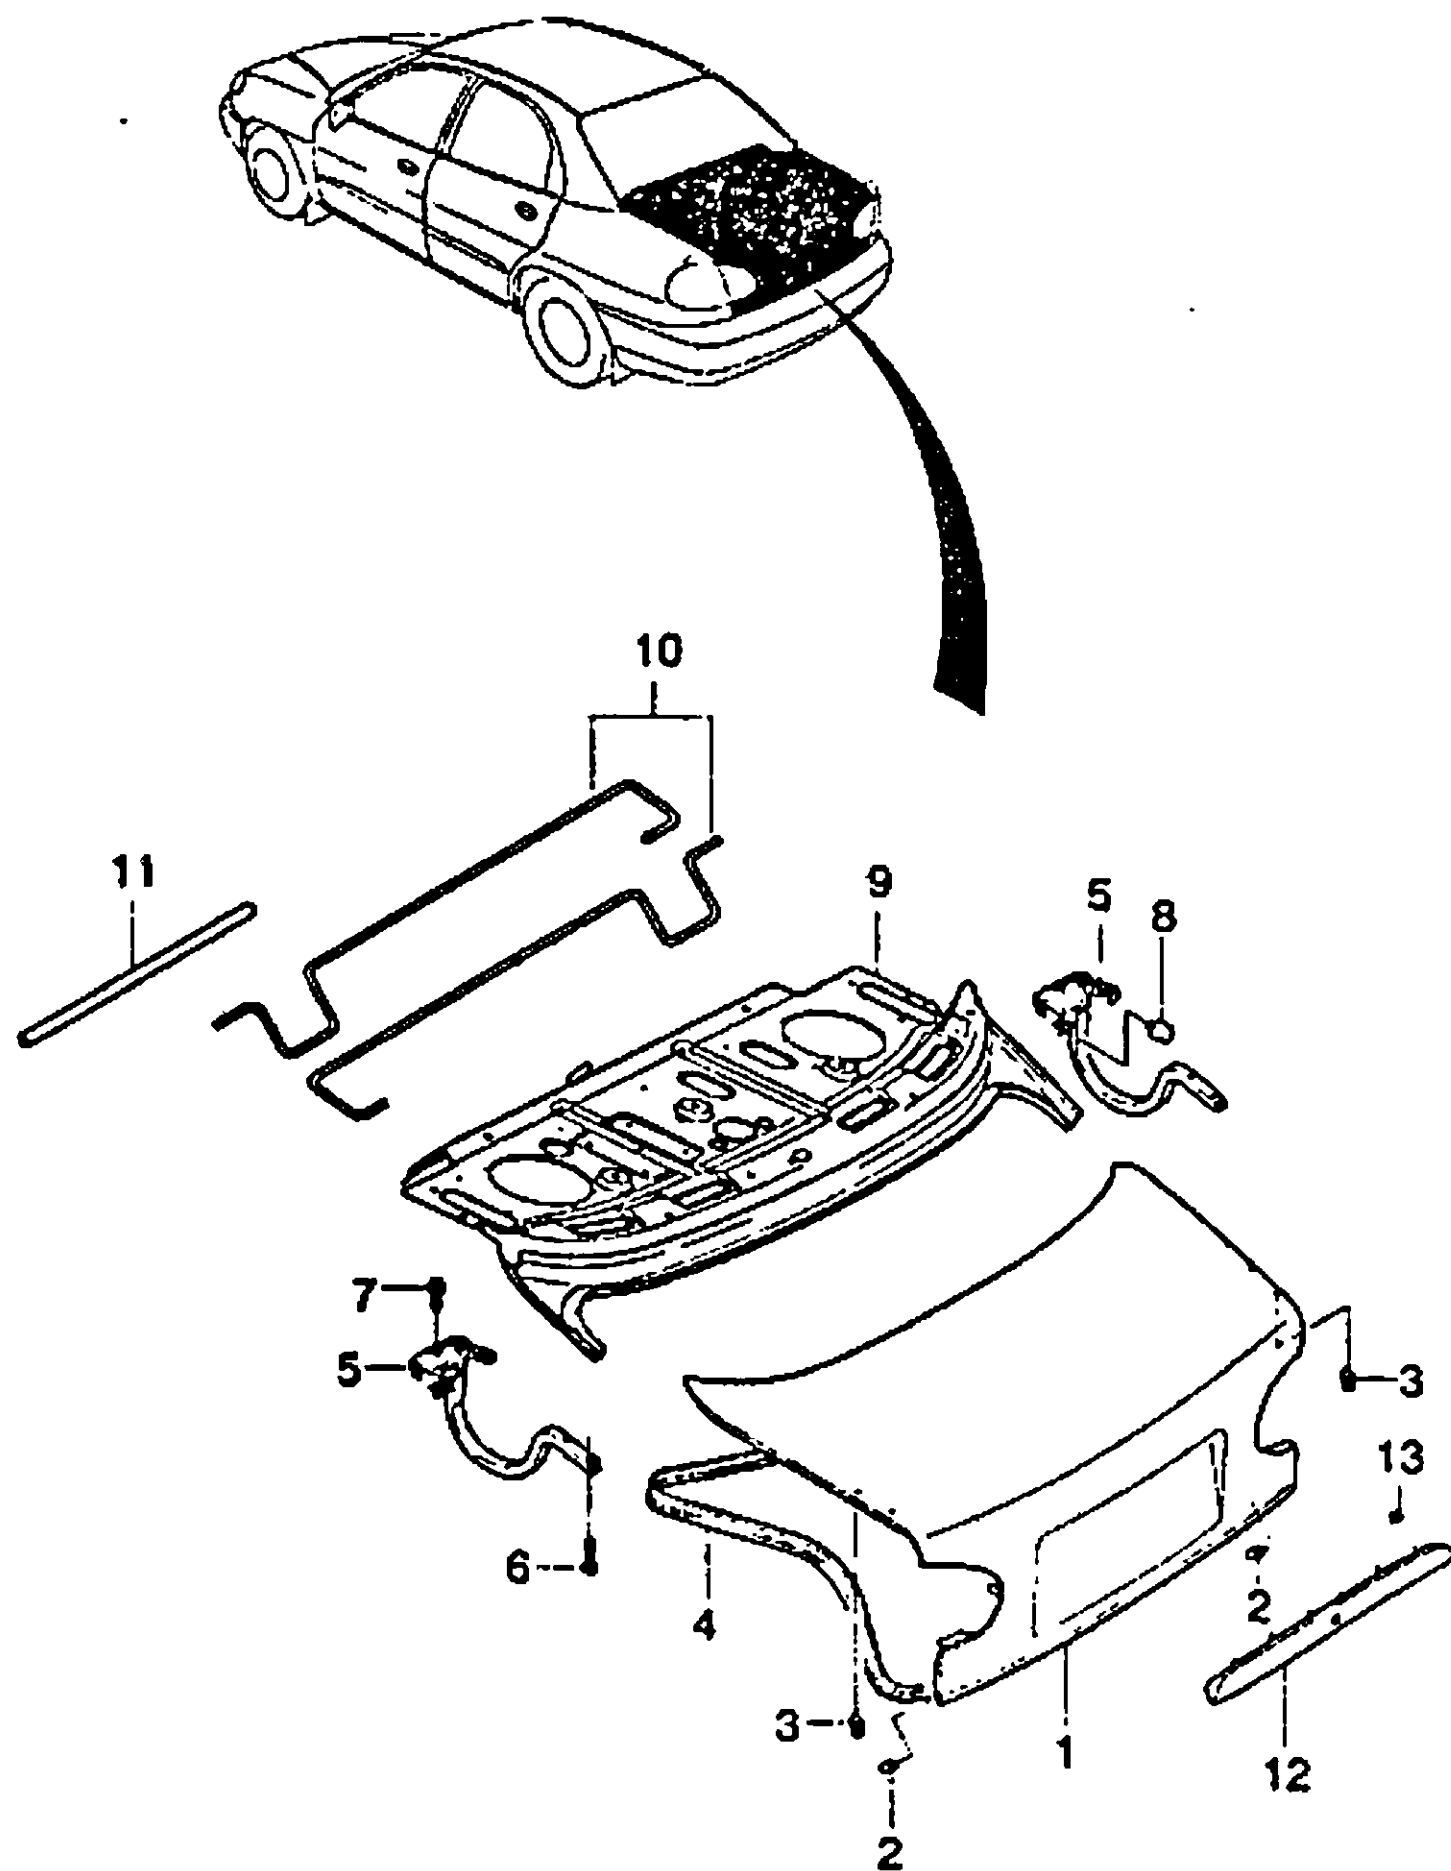


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)PANEL A-TRUNK LID (D)VERKLEIDUNG,KOFFERRAUM							(F)PANNEAU-CAPOT DE COFFRE (S)TAPA DEL PORTAEQUIPAJE						
	A96228756	.	.	B	.	.	S	S	S	&XCK-XBR	1			LB	
	A96303333	.	.	B	.	.	.	.	A	&XCK&XBR	1			LA	
	A96228757	.	.	B	.	.	A	A	A	&XCP	1			LD	
	[02]	(E)BUMPER-TRUNK LID LOWER (D)STOßSCHEIBE							(F)PARE-CHOC (S)TOPE-TAPA DE PORTAEQUIPAJ						
	96240768	.	.	B	.	.	S	S	S		2				
	[03]	(E)BUMPER (D)STOßSTANGE							(F)PARE-CHOC (S)PARACHOQUES						
	96169594	.	.	B	.	.	S	S	S		2				
	[04]	(E)WEATHERSTRIP A-TRUNK LID (D)DICHTUNGSLEISTE							(F)ISOLATION EN BANDELETTE (S)BURLETE						
	96303249	.	.	B	.	.	S	S	S		1	970901			
N	96250354	.	.	B	.	.	S	S	S		1	970901			
	[05]	(E)HINGE A-TRUNK LID (D)BESCHLAG,KOFFERRAUM							(F)CHARNIERE-CAPOT DE COFFRE (S)BISAGRA						
	96303325	.	.	B	.	.	S	S	S		LH 1			GA	
	96306119	.	.	B	.	.	S	S	S		RH 1			GI	
	[06]	(E)BOLT (D)SCHRAUBE							(F)BOULON (S)PERNO						
	09118-06004	.	.	B	.	.	S	S	S		4		WWASHER		
	[07]	(E)BOLT (D)SCHRAUBE							(F)BOULON (S)PERNO						
	09118-06003	.	.	B	.	.	S	S	S		6		WWASHER		
	[08]	(E)BUMPER-TRUNK LID HINGE AR (D)STOßSCHEIBE							(F)PARE-CHOC-CAPOT DE COFFRE (S)TOPE						
	96185310	.	.	B	.	.	S	S	S		2				
ENG(ENGINE)		T/A(TRANSAXLE)					BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

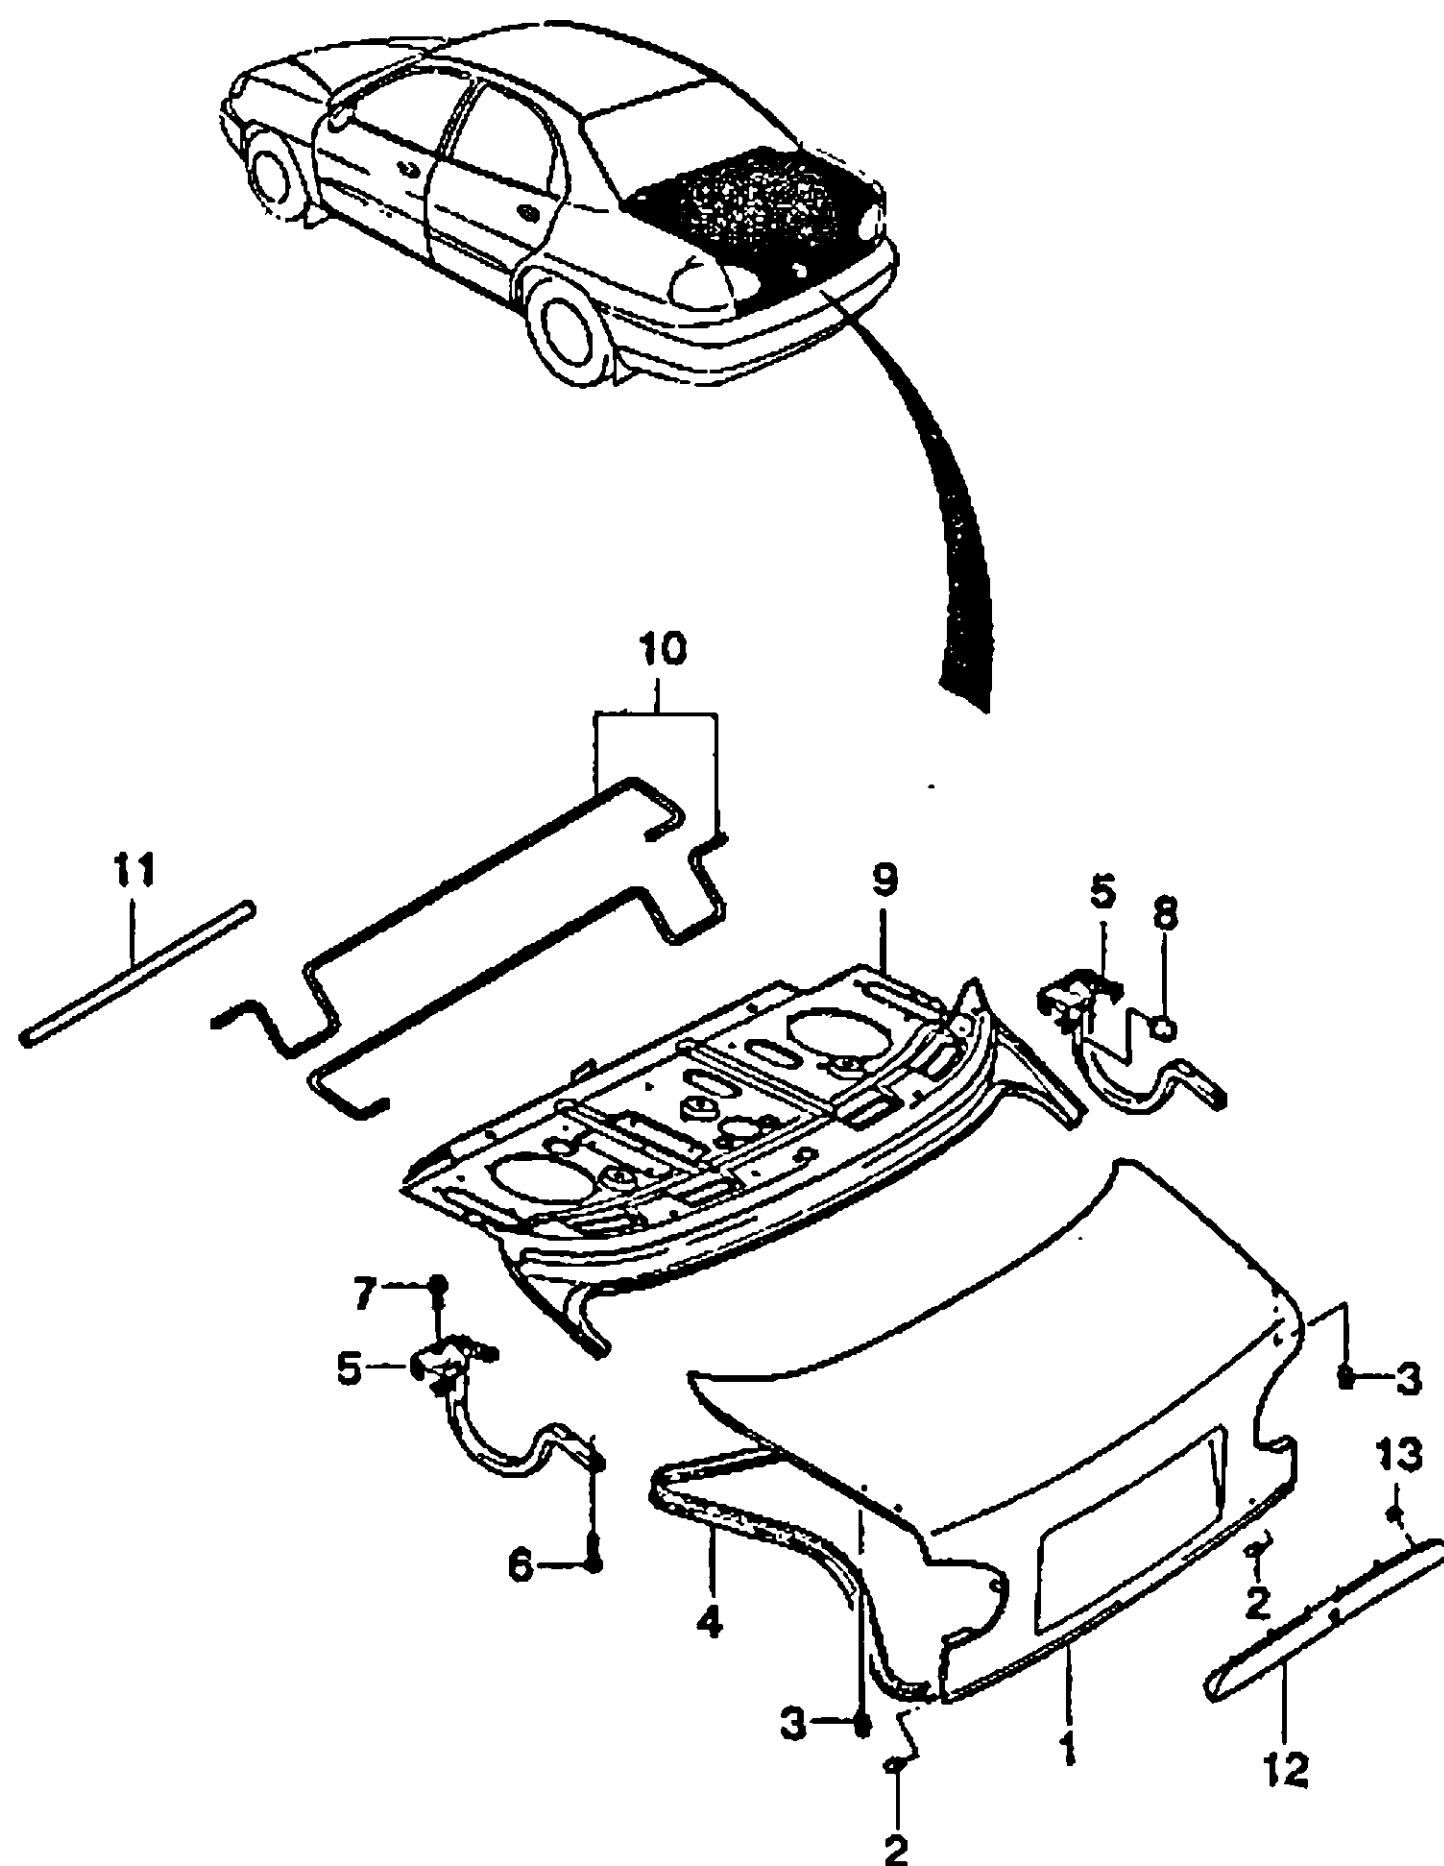


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[09]	(E)PANEL A-BACK,UPPER (D)VERKLEIDUNG,HINTEN,OBEN									(F)PANNEAU-ARRIERE HAUT (S)PANEL-RESPALDO SUPERIOR					
	96226339	. . B . . S S .						&AM6		1			BB			
	96303806	. . B S						&AM9		1			BD			
	96303806	. . B . . A A A						&AMB		1			BD			
	[10]	(E)BAR-TRUNK LID TORSION (D)STANGE									(F)BARRE (S)BARRA					
	96304597	. . B . . S S S								LH 1						
	96304598	. . B . . S S S								RH 1						
	[11]	(E)HOSE-SPRING (D)SCHLAUCH									(F)TUYAU (S)MANGUERA					
	94825352	. . B . . S S S								1						
	[12]	(E)HANDLE A-TRUNK LID (D)HENKEL									(F)POIGNEE (S)MANIJA					
	96303267	. . B . . S S S								1						
	[13]	(E)NUT-HEXAGON FLANGE (D)MUTTER									(F)ECROU (S)TUERCA					
	08316-25053	. . B . . S S S								4						

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

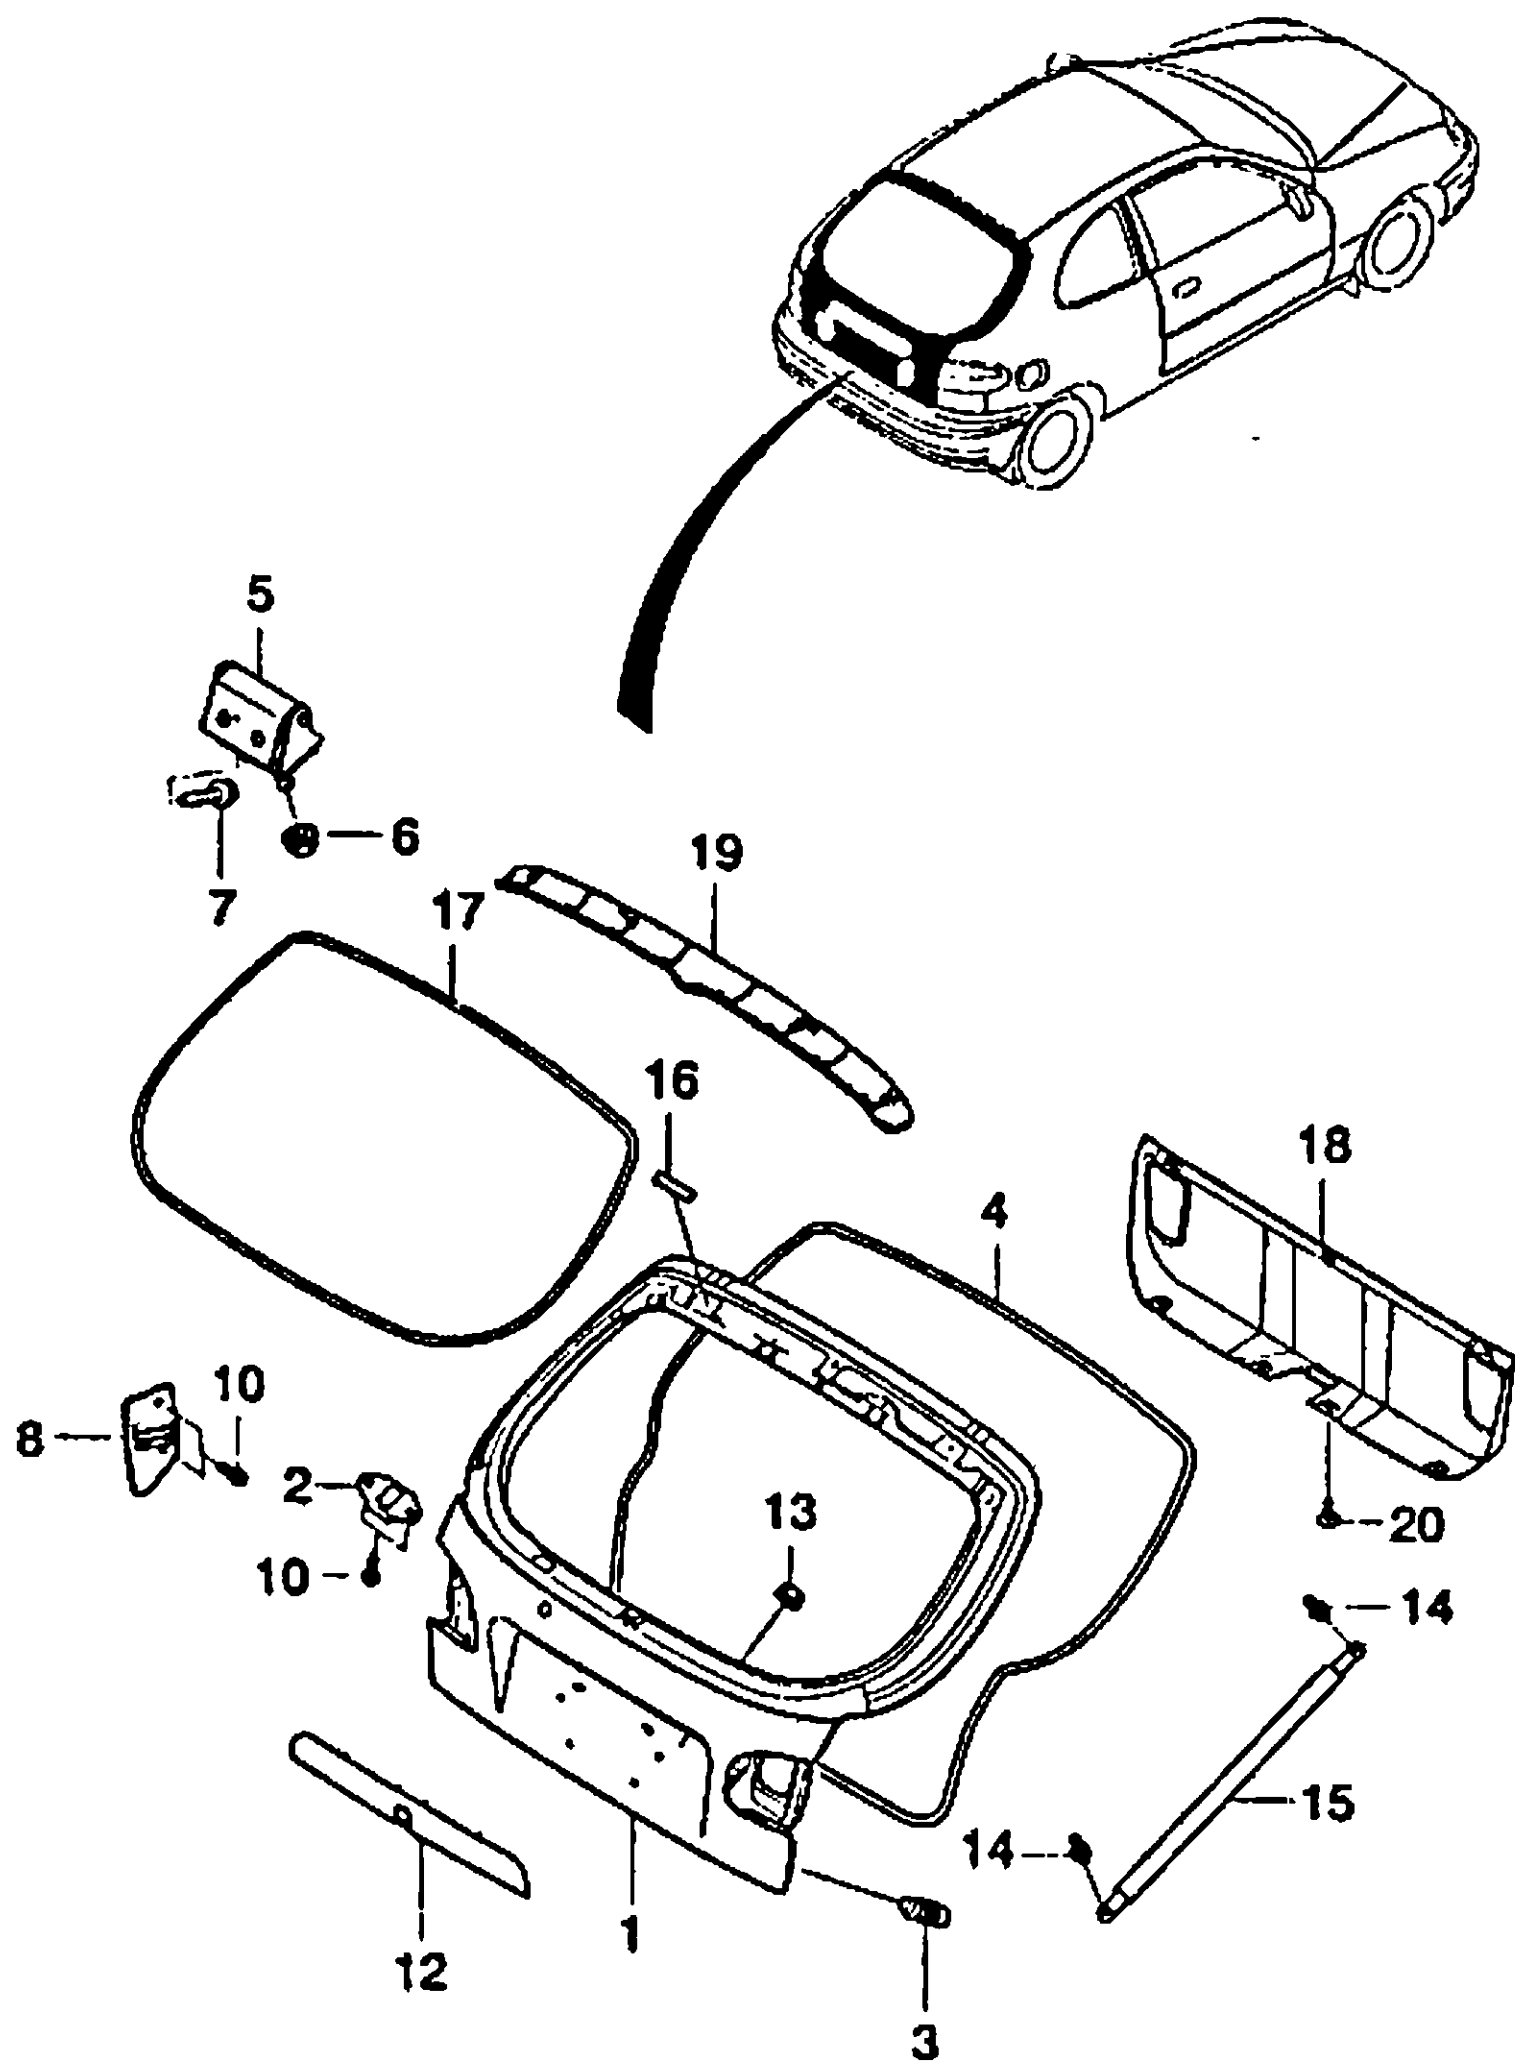

KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S X
	[01]	(E)PANEL A-TAILGATE (D)VERKLEIDUNG,HINTERTEIL										(F)PANNEAU-HAYON (S)PANEL-COMPUERTA DE COLA				
	A96224442	.	.	B	B	S	.	S	&XCK-XBR		1				TB	
	A96303345	.	.	B	B	.	.	A	&XCK&XBR		1				TA	
	A96224443	.	.	B	B	A	.	A	&XCP		1				TD	
	[02]	(E)BUMPER (D)STOBSTANGE										(F)PARE-CHOC (S)PARACHOQUES				
	96307168	.	.	B	B	S	.	S			2					
	[03]	(E)BUMPER (D)STOBSTANGE										(F)PARE-CHOC (S)PARACHOQUES				
	96169594	.	.	B	B	S	.	S			2					
	[04]	(E)WEATHERSTRIP A-TAIL GATE (D)DICHTUNGSLEISTE										(F)ISOLATION EN BANDELETTE (S)BURLETE				
	96250362	.	.	B	B	S	.	S			1					
	[05]	(E)HINGE A-TAILGATE (D)BESCHLAG										(F)CHARNIERE (S)BISAGRA				
	96306236	.	.	B	B	S	.	S		LH	1				GA	
	96232686	.	.	B	B	S	.	S		RH	1				GI	
	[06]	(E)NUT-HEXAGON FLANGE (D)MUTTER										(F)ECROU (S)TUERCA				
	08316-28083	.	.	B	B	S	.	S			4					
	[07]	(E)BOLT-GP HEXAGON FLANGE (D)SCHRAUBE										(F)BOULON (S)PERNO				
	01800-08163	.	.	B	B	S	.	S			4					
	[08]	(E)BUMPER-T/GATE SLIDING,LWR (D)STOBSTANGE										(F)PARE-CHOC (S)PARACHOQUES				
	96307169	.	.	B	B	S	.	S		LH	1					
	96224445	.	.	B	B	S	.	S		RH	1					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

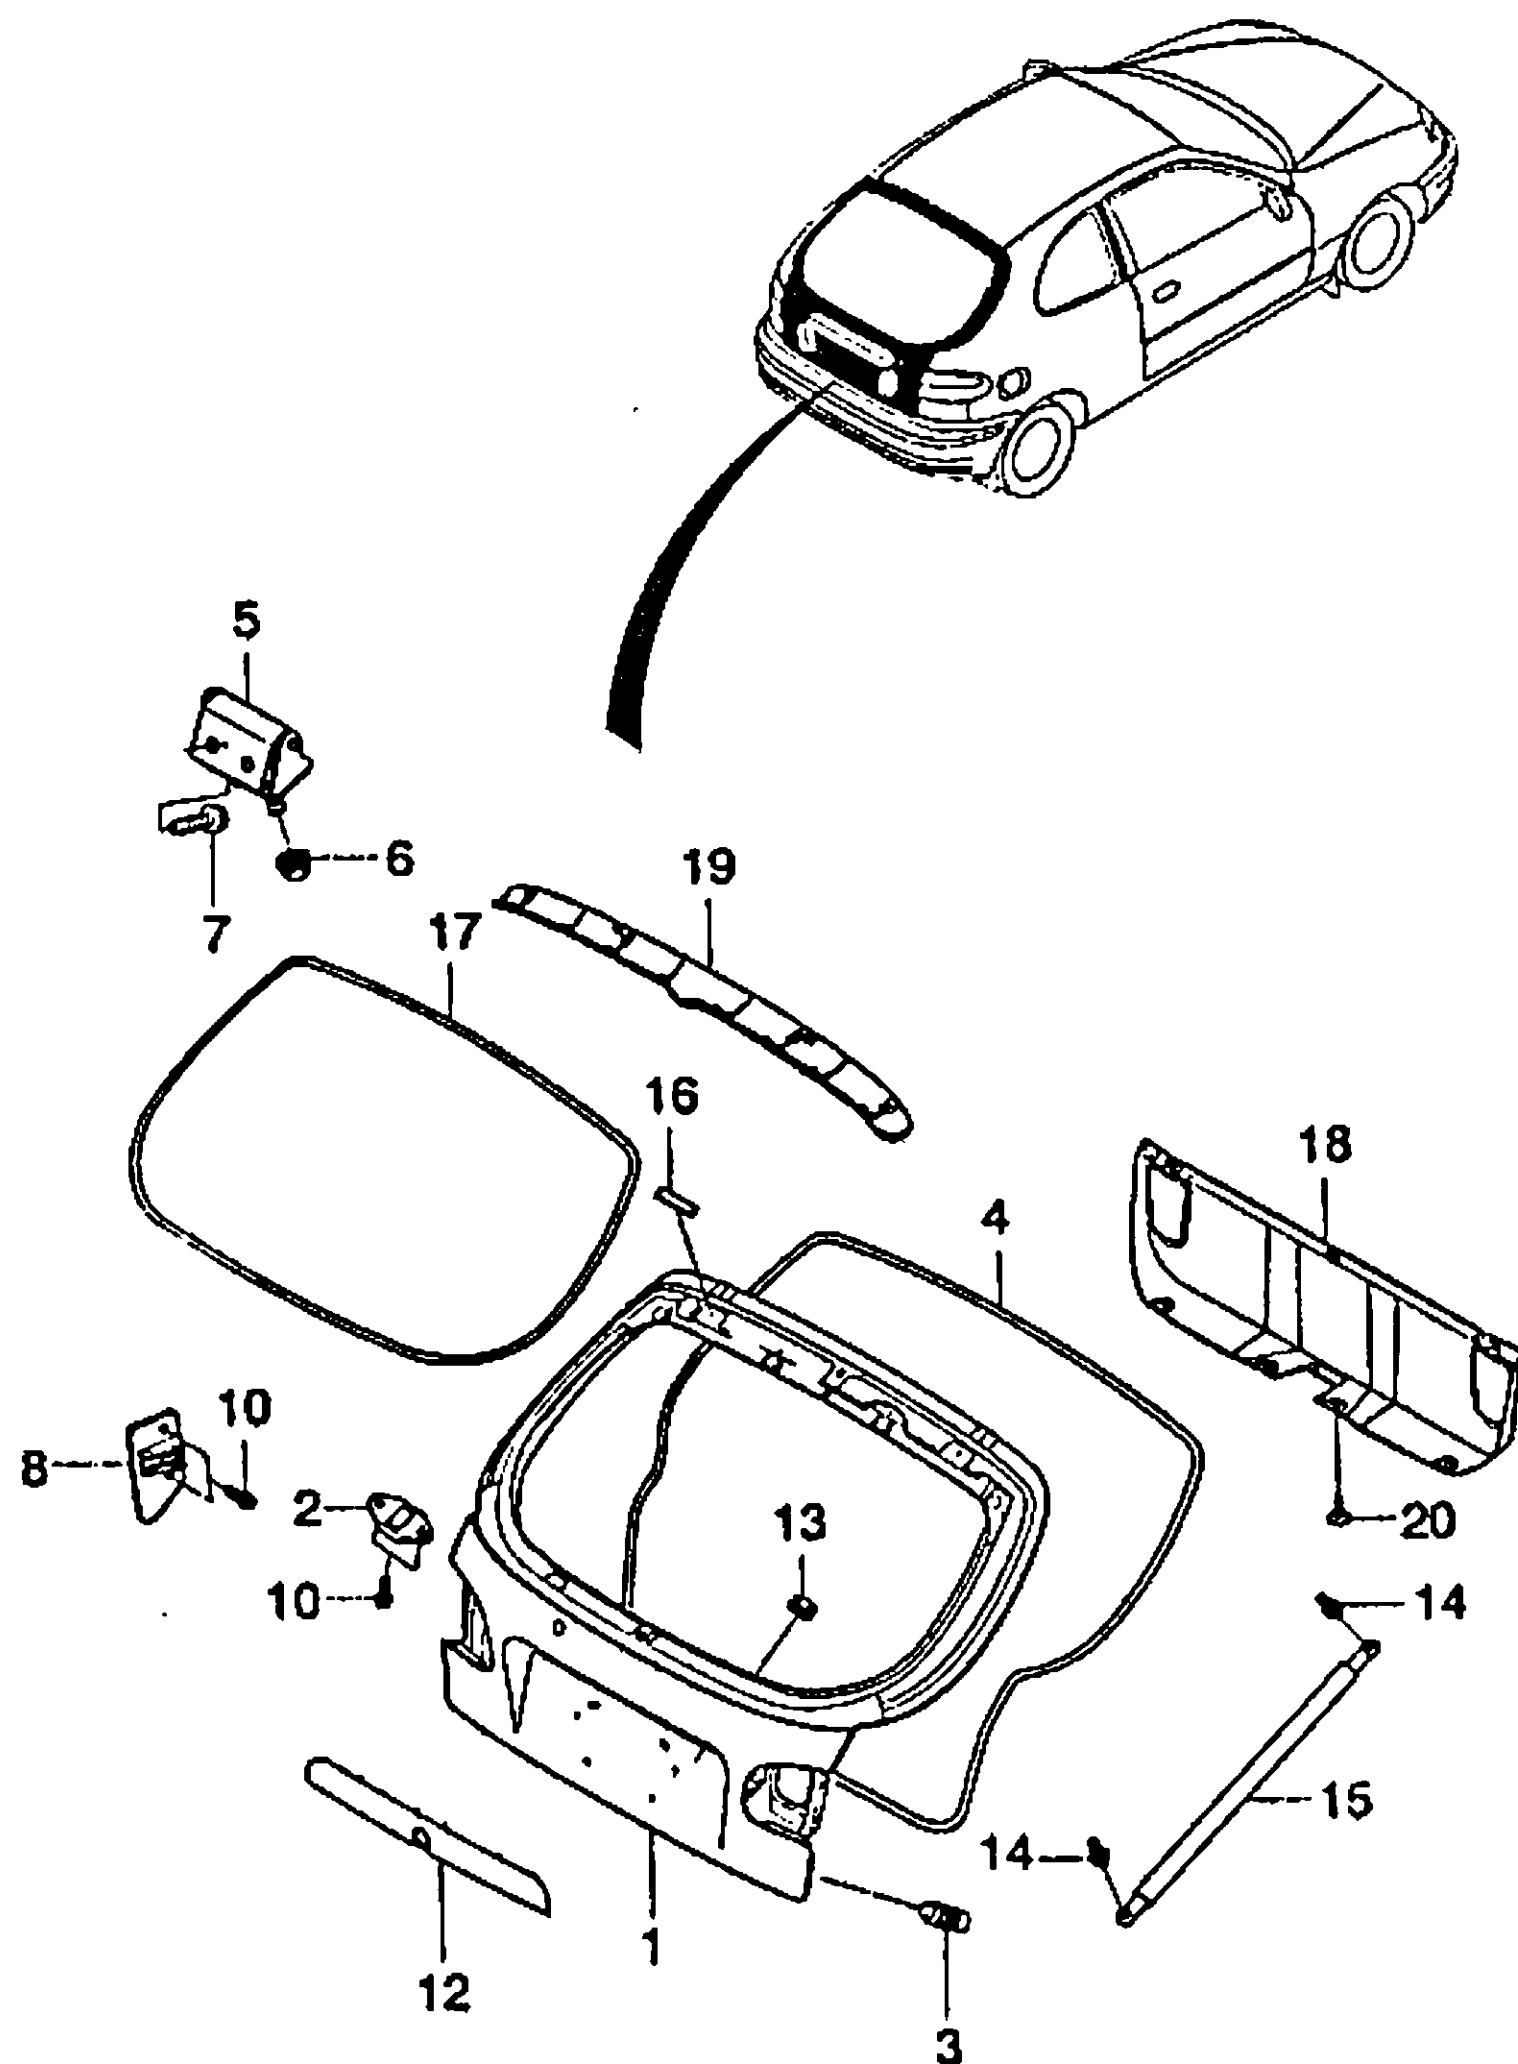


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S E
	[10] 01517-06165	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE	. . .	B	B	S	. S			(F)BOULON (S)PERNO	8				
	[12] 96234770	(E)HANDLE A-TAILGATE (D)HENKEL	. . .	B	B	S	. S			(F)POIGNEE (S)MANIJA	1				
	[13] 08316-25053	(E)NUT-HEXAGON FLANGE (D)MUTTER	. . .	B	B	S	. S			(F)ECROU (S)TUERCA	4				
	[14] 96228420	(E)JOINT A-BALL (D)GLIED,KUGEL	. . .	B	B	S	. S			(F)JOINT-BOULE (S)UNION-BOLA	4				
	[15] 96306157	(E)SPRING-TAILGATE GAS (D)FEDERUNG	. . .	B	B	S	. S			(F)RESSORT (S)RESORTE	2			H5	
	[16] 96303216	(E)FASTENER (D)BEFESTIGUNG	. . .	B	B	S	. S			(F)ATTACHE (S)GRAPA	2	970615			
	[17] 96237573	(E)COVER-TAILGATE GLASS (D)DECKEL	. . .	B	B	S	. S			(F)CARTER (S)CUBIERTA	1				
	[18] 96236114	(E)TRIM A-TAILGATE (D)VERKLEIDUNG,HINTERTEIL	. . .	B	B	S	. S			(F)GARNITURE-HAYON (S)ADORNO-COMPUERTA DE COLA	1				
	[19] 96236116	(E)COVER A-TAILGATE,UPR (D)DECKEL	. . .	B	B	S	. S			(F)CARTER (S)CUBIERTA	1				
	[20]	(E)CLIP (D)KLEMME	. . .	B	B	S	. S			(F)ATTACHE (S)GRAPA	1				


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

6441 TAILGATE PANEL

5B12

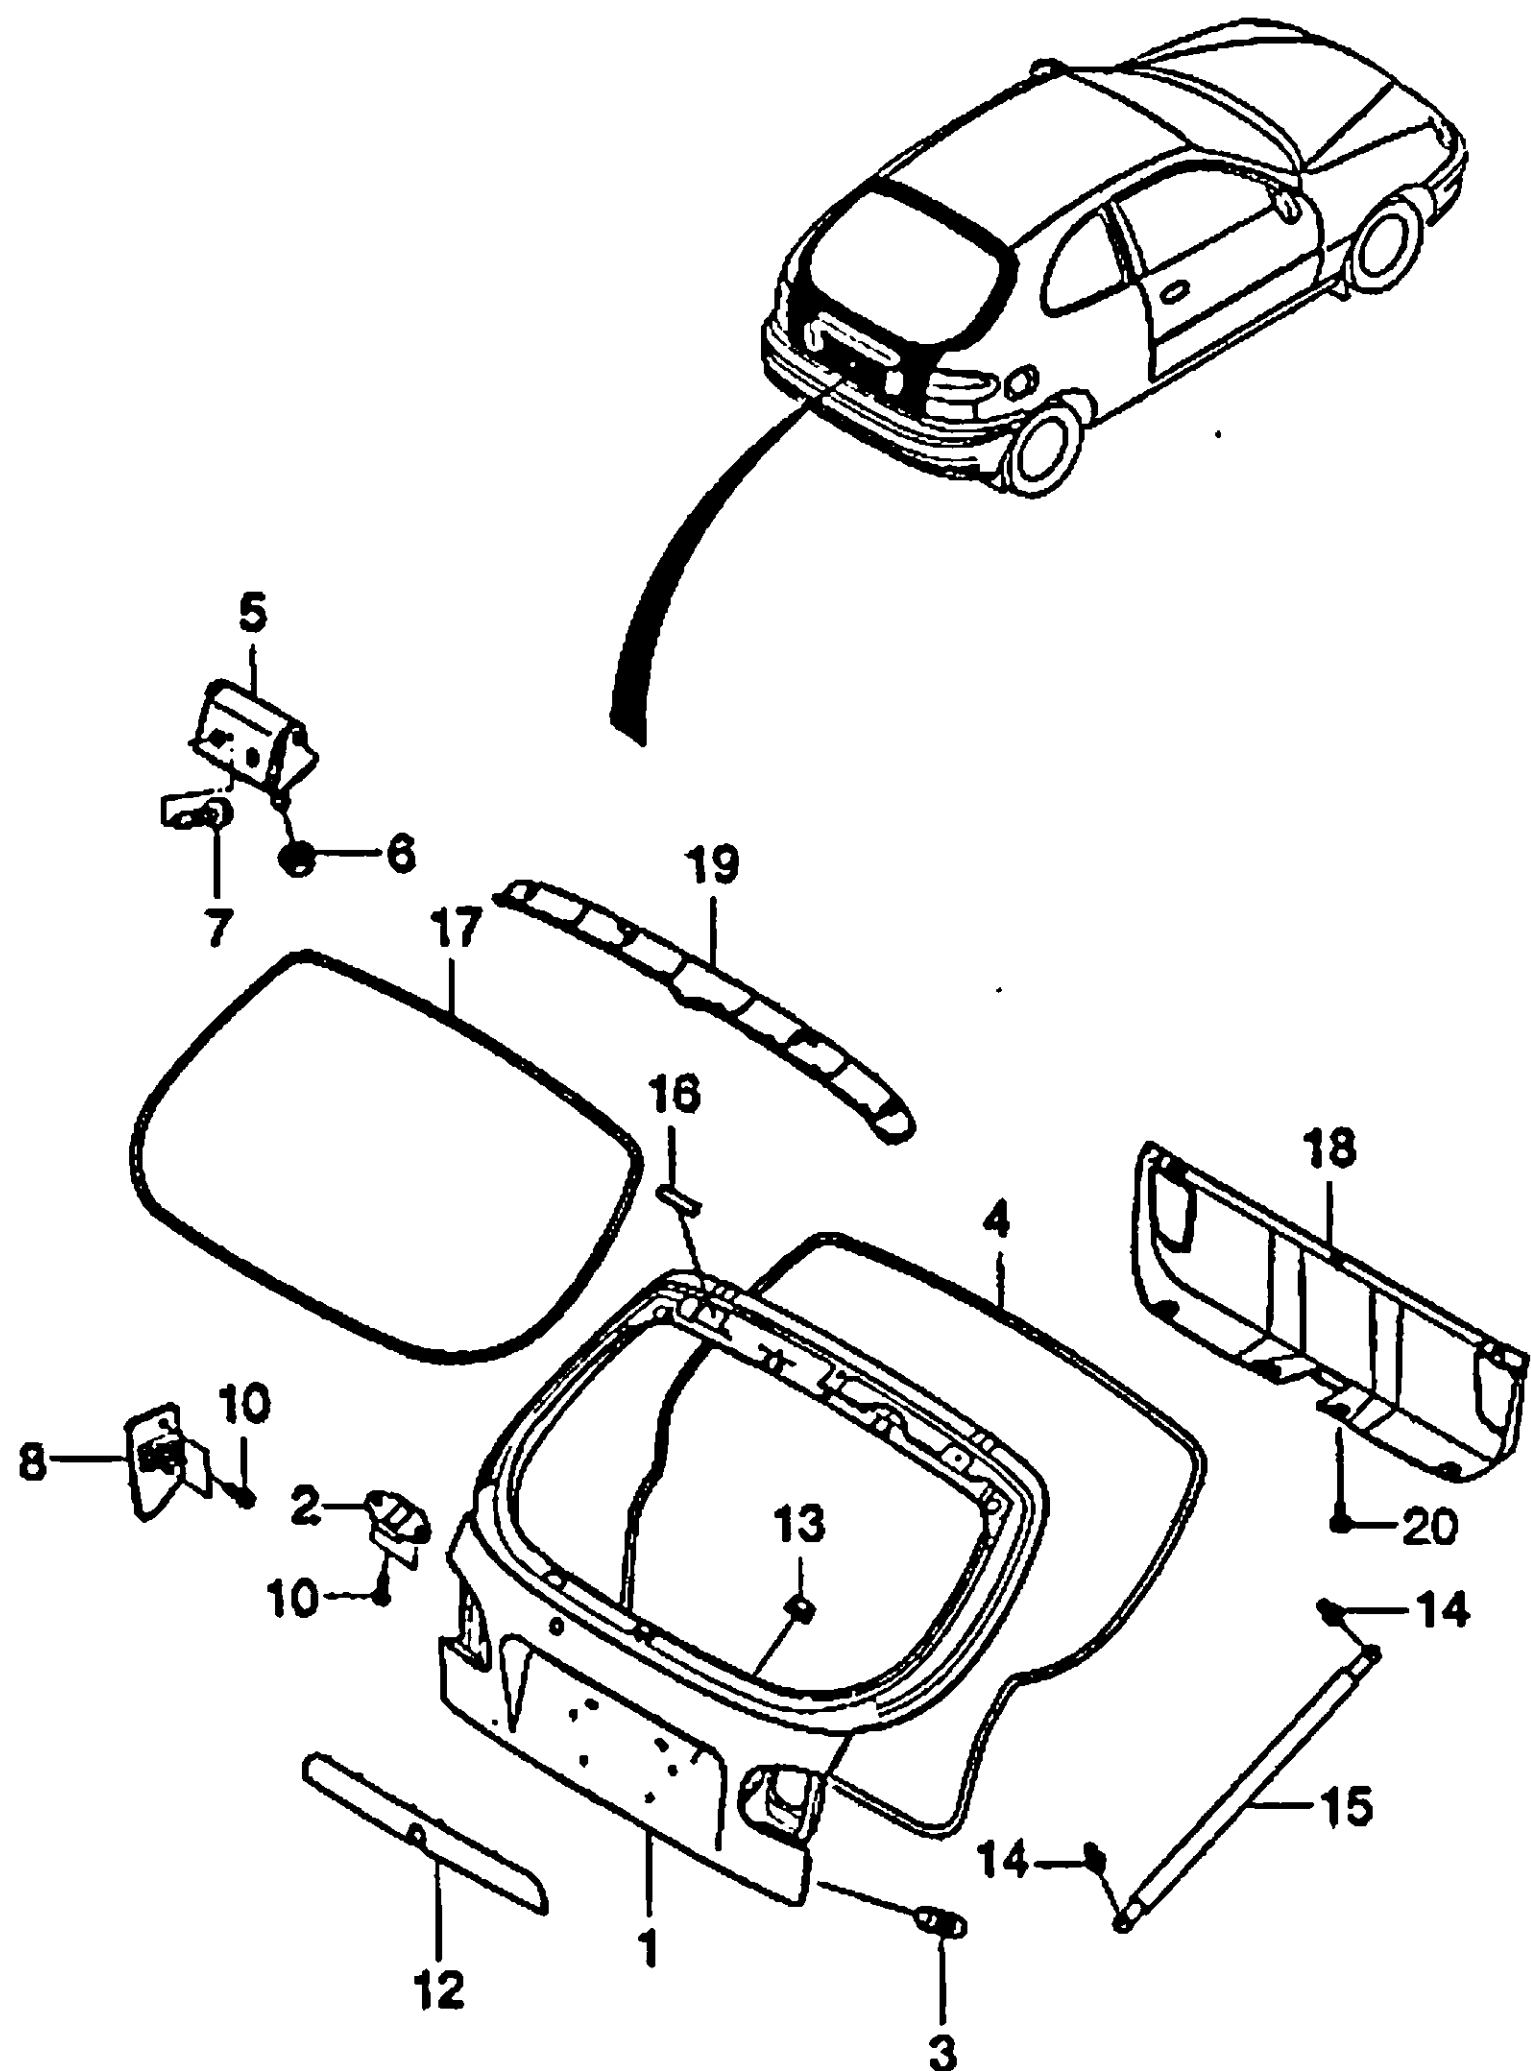


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	09409-07326	.	.	.	B	B	S	.	S			7				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

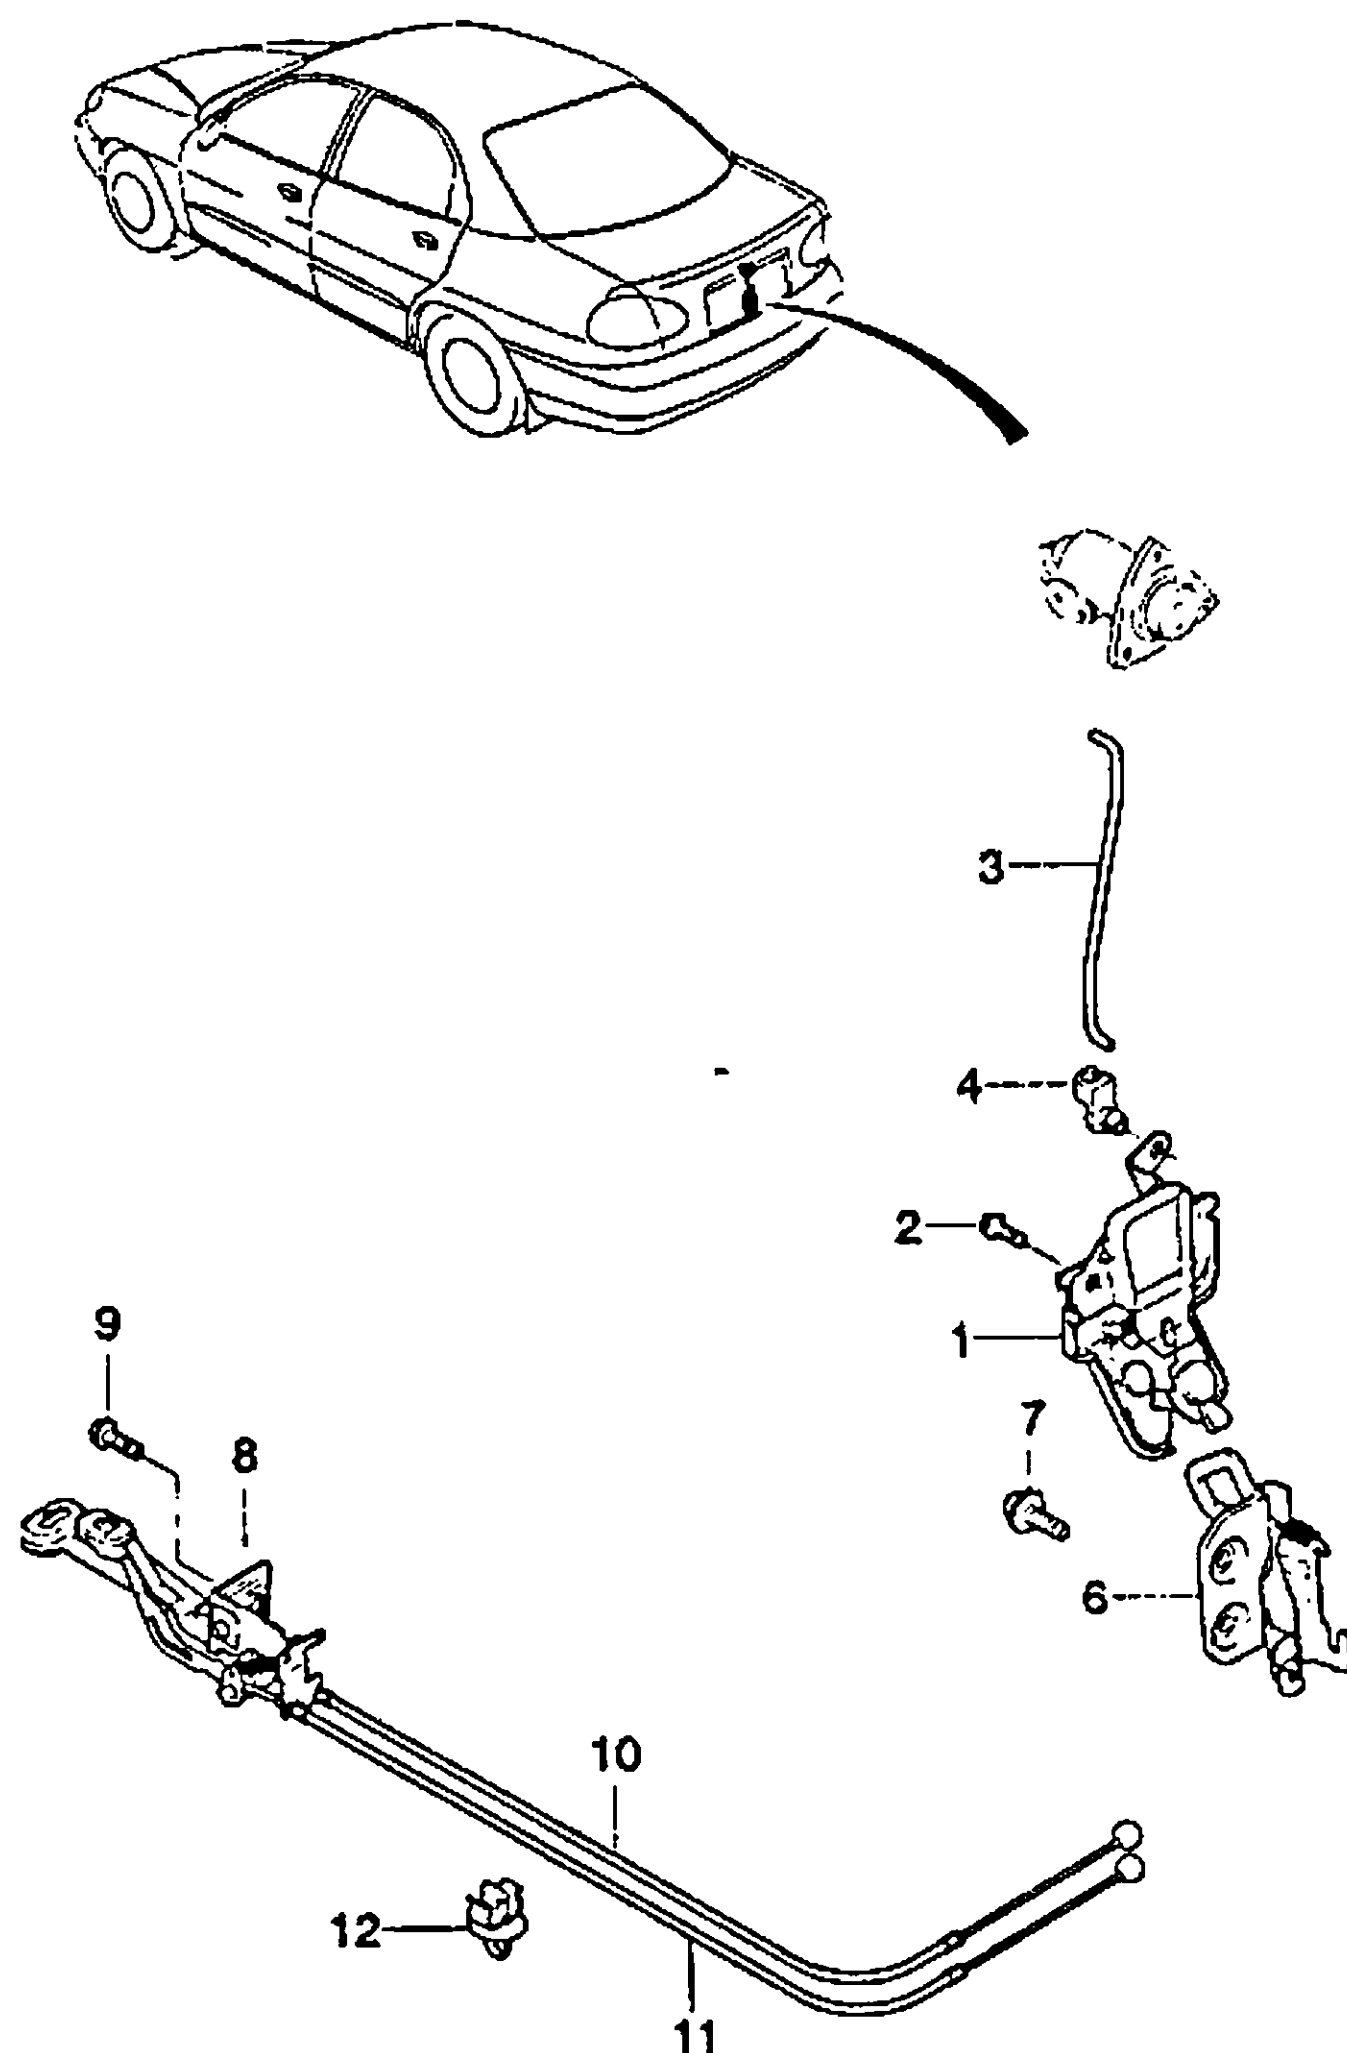

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S S				S S	S X		
	[01] 96214300	(E)LATCH A-TRUNK LID (D)VERSCHLUB,KOFFERRAUM									(F)LOQUET-CAPOT DE COFFRE (S)PESTILLO			
	[02] 09119-06023	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO			
	[03] 96304759	(E)ROD-LATCH PULLING (D)STAB,SCHLOß-ÖFFNUNG									(F)TRINGLE-LOQUET (S)VARILLA-PESTILLO DE JALAR			
	[04] 09403-03302	(E)CLAMP (D)KLAMMER									(F)PINCE (S)ABRAZADERA			
	[06] 96303364	(E)STRIKER A-LATCH (D)SCHLÄGER									(F)MARTEAU (S)HUELGUISTA			
	[07] 09118-06003	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO			
	[08] 96220202	(E)LEVER A-T/LID & F/FILLER (D)HEBEL									(F)LEVIER (S)PALANCA			
	[09] 09118-06003	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO			
	[10] 96216134	(E)CABLE A-TRUNK LID (D)KABEL									(F)CABLE (S)CABLE			
	[11]	(E)CABLE A-FUEL FILLER DOOR (D)KABEL									(F)CABLE (S)CABLE			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

6450 TRUNK LID LOCKING

5D12

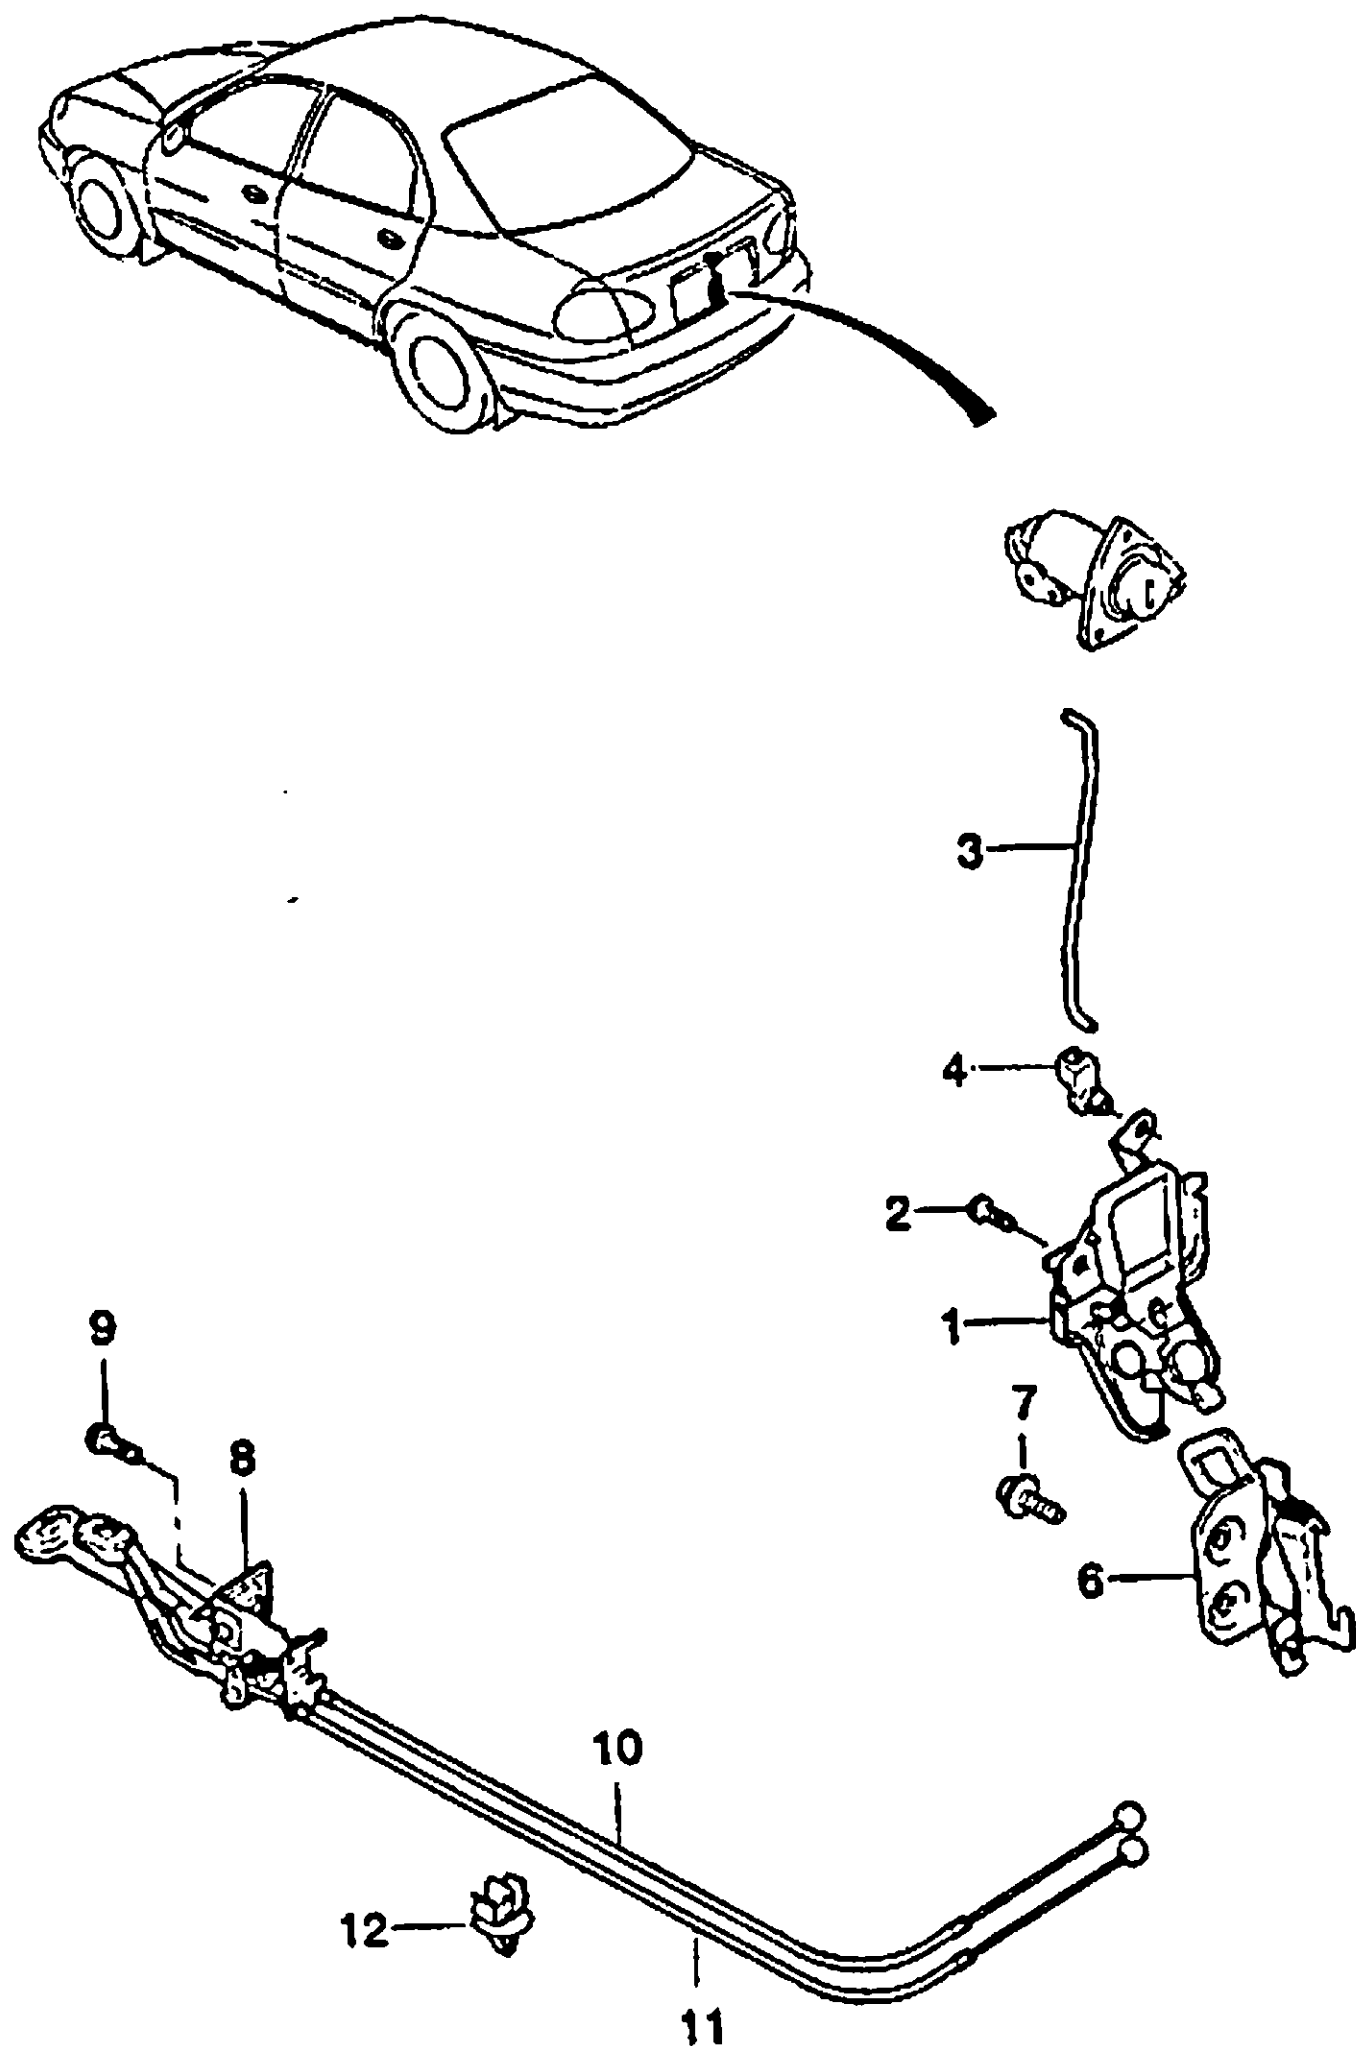


KEY NO.			PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S
	96216135	.	.	B	.	.	S	S	S		1				
	[12]	(E)	CLIP								(F)ATTACHE				
	09408-00018	.	.	B	.	.	S	S	S		(S)GRAPA				
											1				

This diagram illustrates the assembly of a rear suspension and brake system. The components are numbered as follows:


- 1**: Main suspension bracket or knuckle.
- 2**: A bolt or pin used for assembly.
- 3**: A long, curved suspension arm.
- 4**: A bush or spacer for the suspension arm.
- 5**: A small component, possibly a pin or clip.
- 6**: A rectangular component, likely a brake master cylinder or a sensor.
- 7**: A small bolt or pin.
- 8**: A bracket or support for the rear axle.
- 9**: A small component, possibly a pin or clip.
- 10**: A long, curved suspension arm.
- 11**: A long, curved suspension arm.
- 12**: A bush or spacer for the suspension arm.
- 13**: A rectangular component, likely a brake master cylinder or a sensor.
- 14**: A long, curved suspension arm.
- 15**: A bracket or support for the rear axle.
- 16**: A small component, possibly a pin or clip.
- 17**: A small component, possibly a pin or clip.
- 18**: A small component, possibly a pin or clip.
- 19**: A small component, possibly a pin or clip.
- 20**: A small component, possibly a pin or clip.

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S E	S X
	[01] 96232493	(E)LATCH A-TAILGATE (D)VERSCHLÜß,HINTERTEIL	. . .	B	B	S	. S			(F)LOQUET-HAYON (S)PESTILLO	1					
	[02] 09137-06001	(E)SCREW-MACHINE (D)SCHRAUBE	. . .	B	B	S	. S			(F)VIS (S)TORNILLO	3					
	[03] 96234313	(E)ROD-LATCH PULLING (D)STAB,SCHOB-ÖFFNUNG	. . .	B	B	S	. S			(F)TRINGLE-LOQUET (S)VARILLA-PESTILLO DE JALAR	1					
	[04] 09403-04301	(E)CLAMP (D)KLAMMER	. . .	B	B	S	. S			(F)PINCE (S)ABRAZADERA	1					
	[06] 96232494	(E)STRIKER A-TAILGATE (D)SCHLÄGER	. . .	B	B	S	. S			(F)MARTEAU (S)HUELGUISTA	1					
	[07] 09119-08026	(E)BOLT (D)SCHRAUBE	. . .	B	B	S	. S			(F)BOULON (S)PERNO	2					
	[08] 96310090	(E)LEVER A-FUEL FILLER DOOR (D)HEBEL	. . .	B	B	S	. S			(F)LEVIER (S)PALANCA	1			INCL #11	H3	
	[09] 09118-06003	(E)BOLT (D)SCHRAUBE	. . .	B	B	S	. S			(F)BOULON (S)PERNO	1			W/WASHER		
	[10] 96234309	(E)ROD-KEY CYLINDER (D)STAB	. . .	B	B	S	. S			(F)TRINGLE (S)VARILLA	1					
	[11]	(E)CABLE A-FUEL FILLER DOOR (D)KABEL								(F)CABLE (S)CABLE						

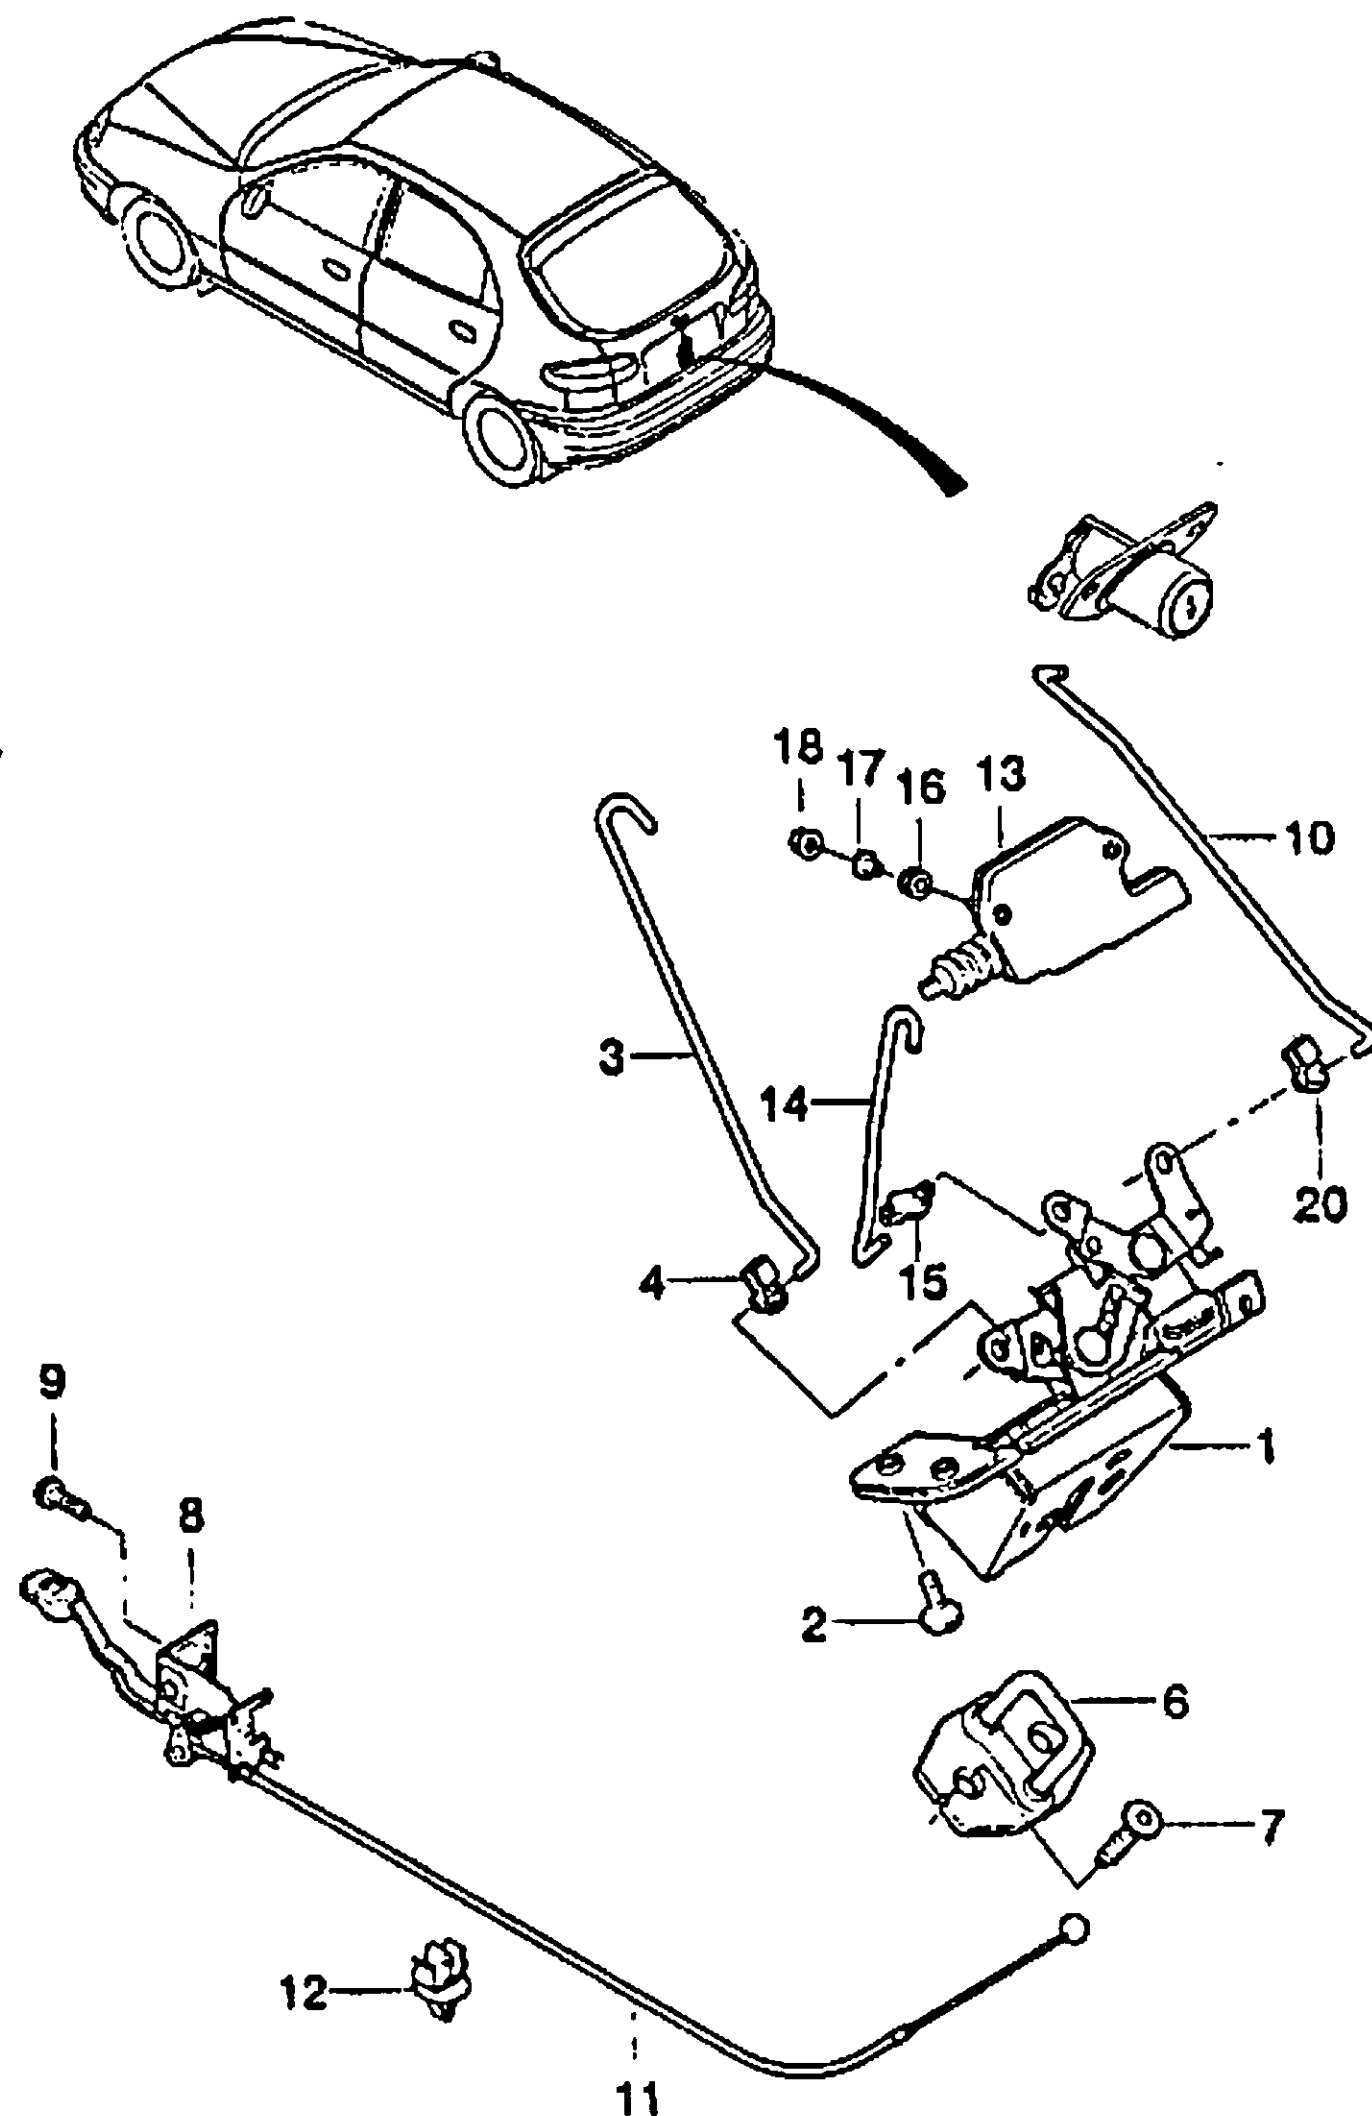


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S E
	96232709	.	.	.	B	B	S	.	S		1				
	[12]				(E)CLIP						(F)ATTACHE				
					(D)KLEMME						(S)GRAPA				
	09408-00018	.	.	.	B	B	S	.	S		1				
	[13]				(E)ACTUATOR A-TAILGATE						(F)ACTIONNEUR				
					(D)BETÄTIGUNG						(S)ACTUADOR				
	96237555	.	.	.	B	B	O	.	S	&AU3	1				
	[14]				(E)ROD-TAILGATE ACTUATOR						(F)TRINGLE				
					(D)STAB						(S)VARILLA				
	96234312	.	.	.	B	B	O	.	S	&AU3	1				
	[15]				(E)CLAMP						(F)PINCE				
					(D)KLAMMER						(S)ABRAZADERA				
	09403-03302	.	.	.	B	B	O	.	S	&AU3	1				
	[16]				(E)BUSHING						(F)MANCHON				
					(D)LAGERFUTTER						(S)BUJE DE BOQUILLA				
	09320-07001	.	.	.	B	B	O	.	S	&AU3	2				
	[17]				(E)BUSHING						(F)MANCHON				
					(D)LAGERFUTTER						(S)BUJE DE BOQUILLA				
	09306-04001	.	.	.	B	B	O	.	S	&AU3	2				
	[18]				(E)NUT						(F)ECROU				
					(D)MUTTER						(S)TUERCA				
	09159-04004	.	.	.	B	B	O	.	S	&AU3	2				
	[20]				(E)CLIP						(F)ATTACHE				
					(D)KLEMME						(S)GRAPA				
	09408-00077	.	.	.	B	B	S	.	S		1				

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

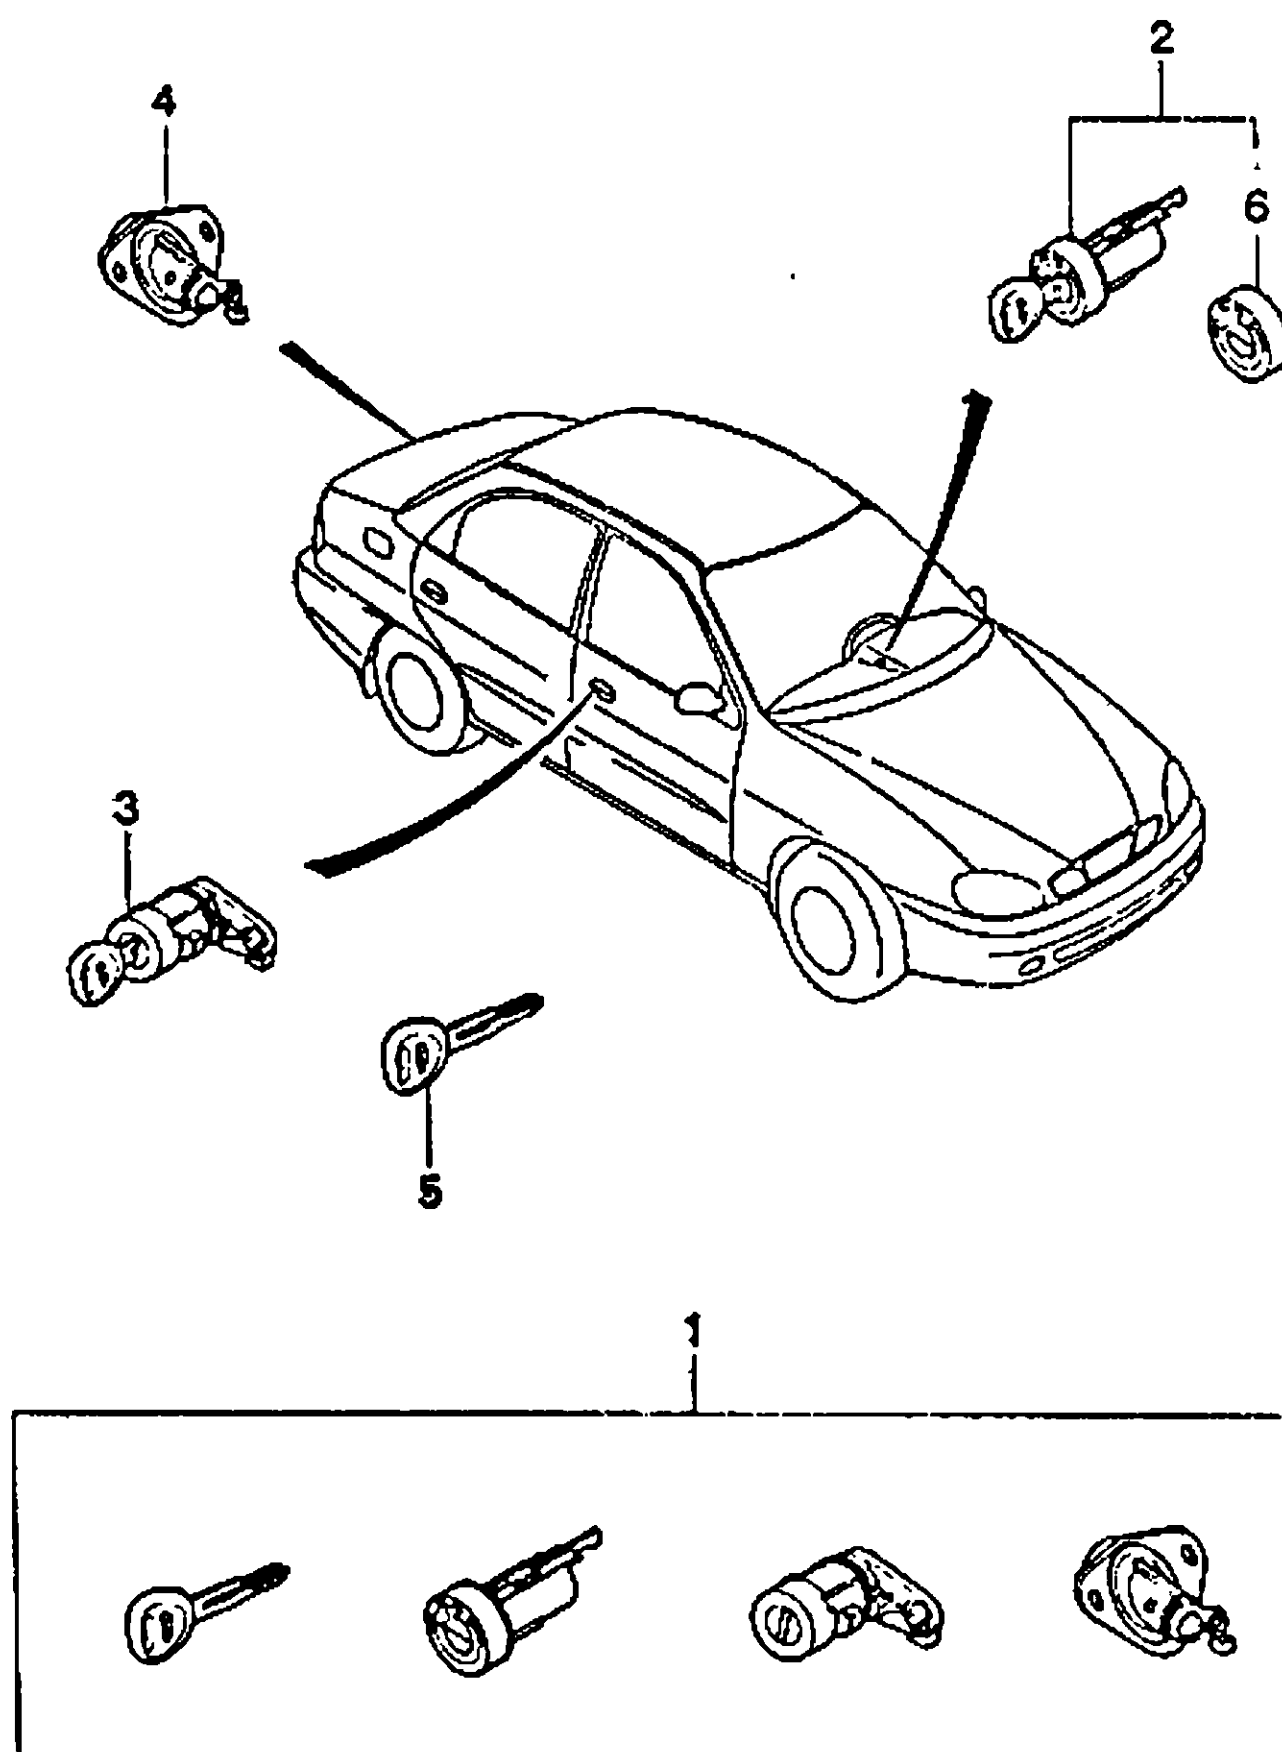


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01]	(E)LOCK SET-CAR (D)SCHLOß-SATZ,AUTOMOBIL									(F)JEU VERROU-VOITURE (S)JUEGO DE CERRADURA-CABINA					
	96213542	.	.	B	.	.	S	S	S	-UM1		1		T2		
	96304764	.	.	B	.	.	A	A	A	&UM1		1		T1		
	96236253	.	.	.	B	B	S	.	S	-UM1		1		T3		
	96236254	.	.	.	B	B	A	.	A	&UM1		1		T4		
	[02]	(E)LOCK SET-STEERING (D)SCHLOß-SATZ,LENKUNG									(F)JEU VERROU-DIRECTION (S)JUEGO DE CERRADURA					
	S6460020	.	.	B	B	B	S	S	S	-UM1		1				
	S6460037	.	.	B	B	B	A	A	A	&UM1		1				
	[03]	(E)LOCK SET-DOOR (D)SCHLOß-SATZ,TÜR									(F)JEU VERROU-PORTE (S)JUEGO DE CERRADURA-PUERTA					
	S6460021	.	.	B	B	B	S	S	S		LH	1				
	S6460022	.	.	B	B	B	S	S	S		RH	1				
	[04]	(E)LOCK SET-TRUNK (D)SCHLOß-SATZ,KOFFERRAUM									(F)JEU VERROU-COFFRE (S)JUEGO DE CERRADURA					
	S6460023	.	.	B	.	.	S	S	S			1		TRUNK LID		
	S6460043	.	.	.	B	B	S	.	S			1		TAILGATE		
	[05]	(E)KEY-BLANK (D)SCHLÜßEL,UNBEARBEITET									(F)CLE-BLANC (S)LLAVE-EN BLANCO					
	S6460019	.	.	B	B	B	S	S	S	-UM1		1				
	S6460042	.	.	B	B	B	A	A	A	&UM1		1				
	[06]	(E)CAP (D)DECKEL									(F)CHAPEAU (S)TAPA					
	96225803	.	.	B	B	B	S	S	S	-UM1		1				
	96303503	.	.	B	B	B	A	A	A	&UM1		1				


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

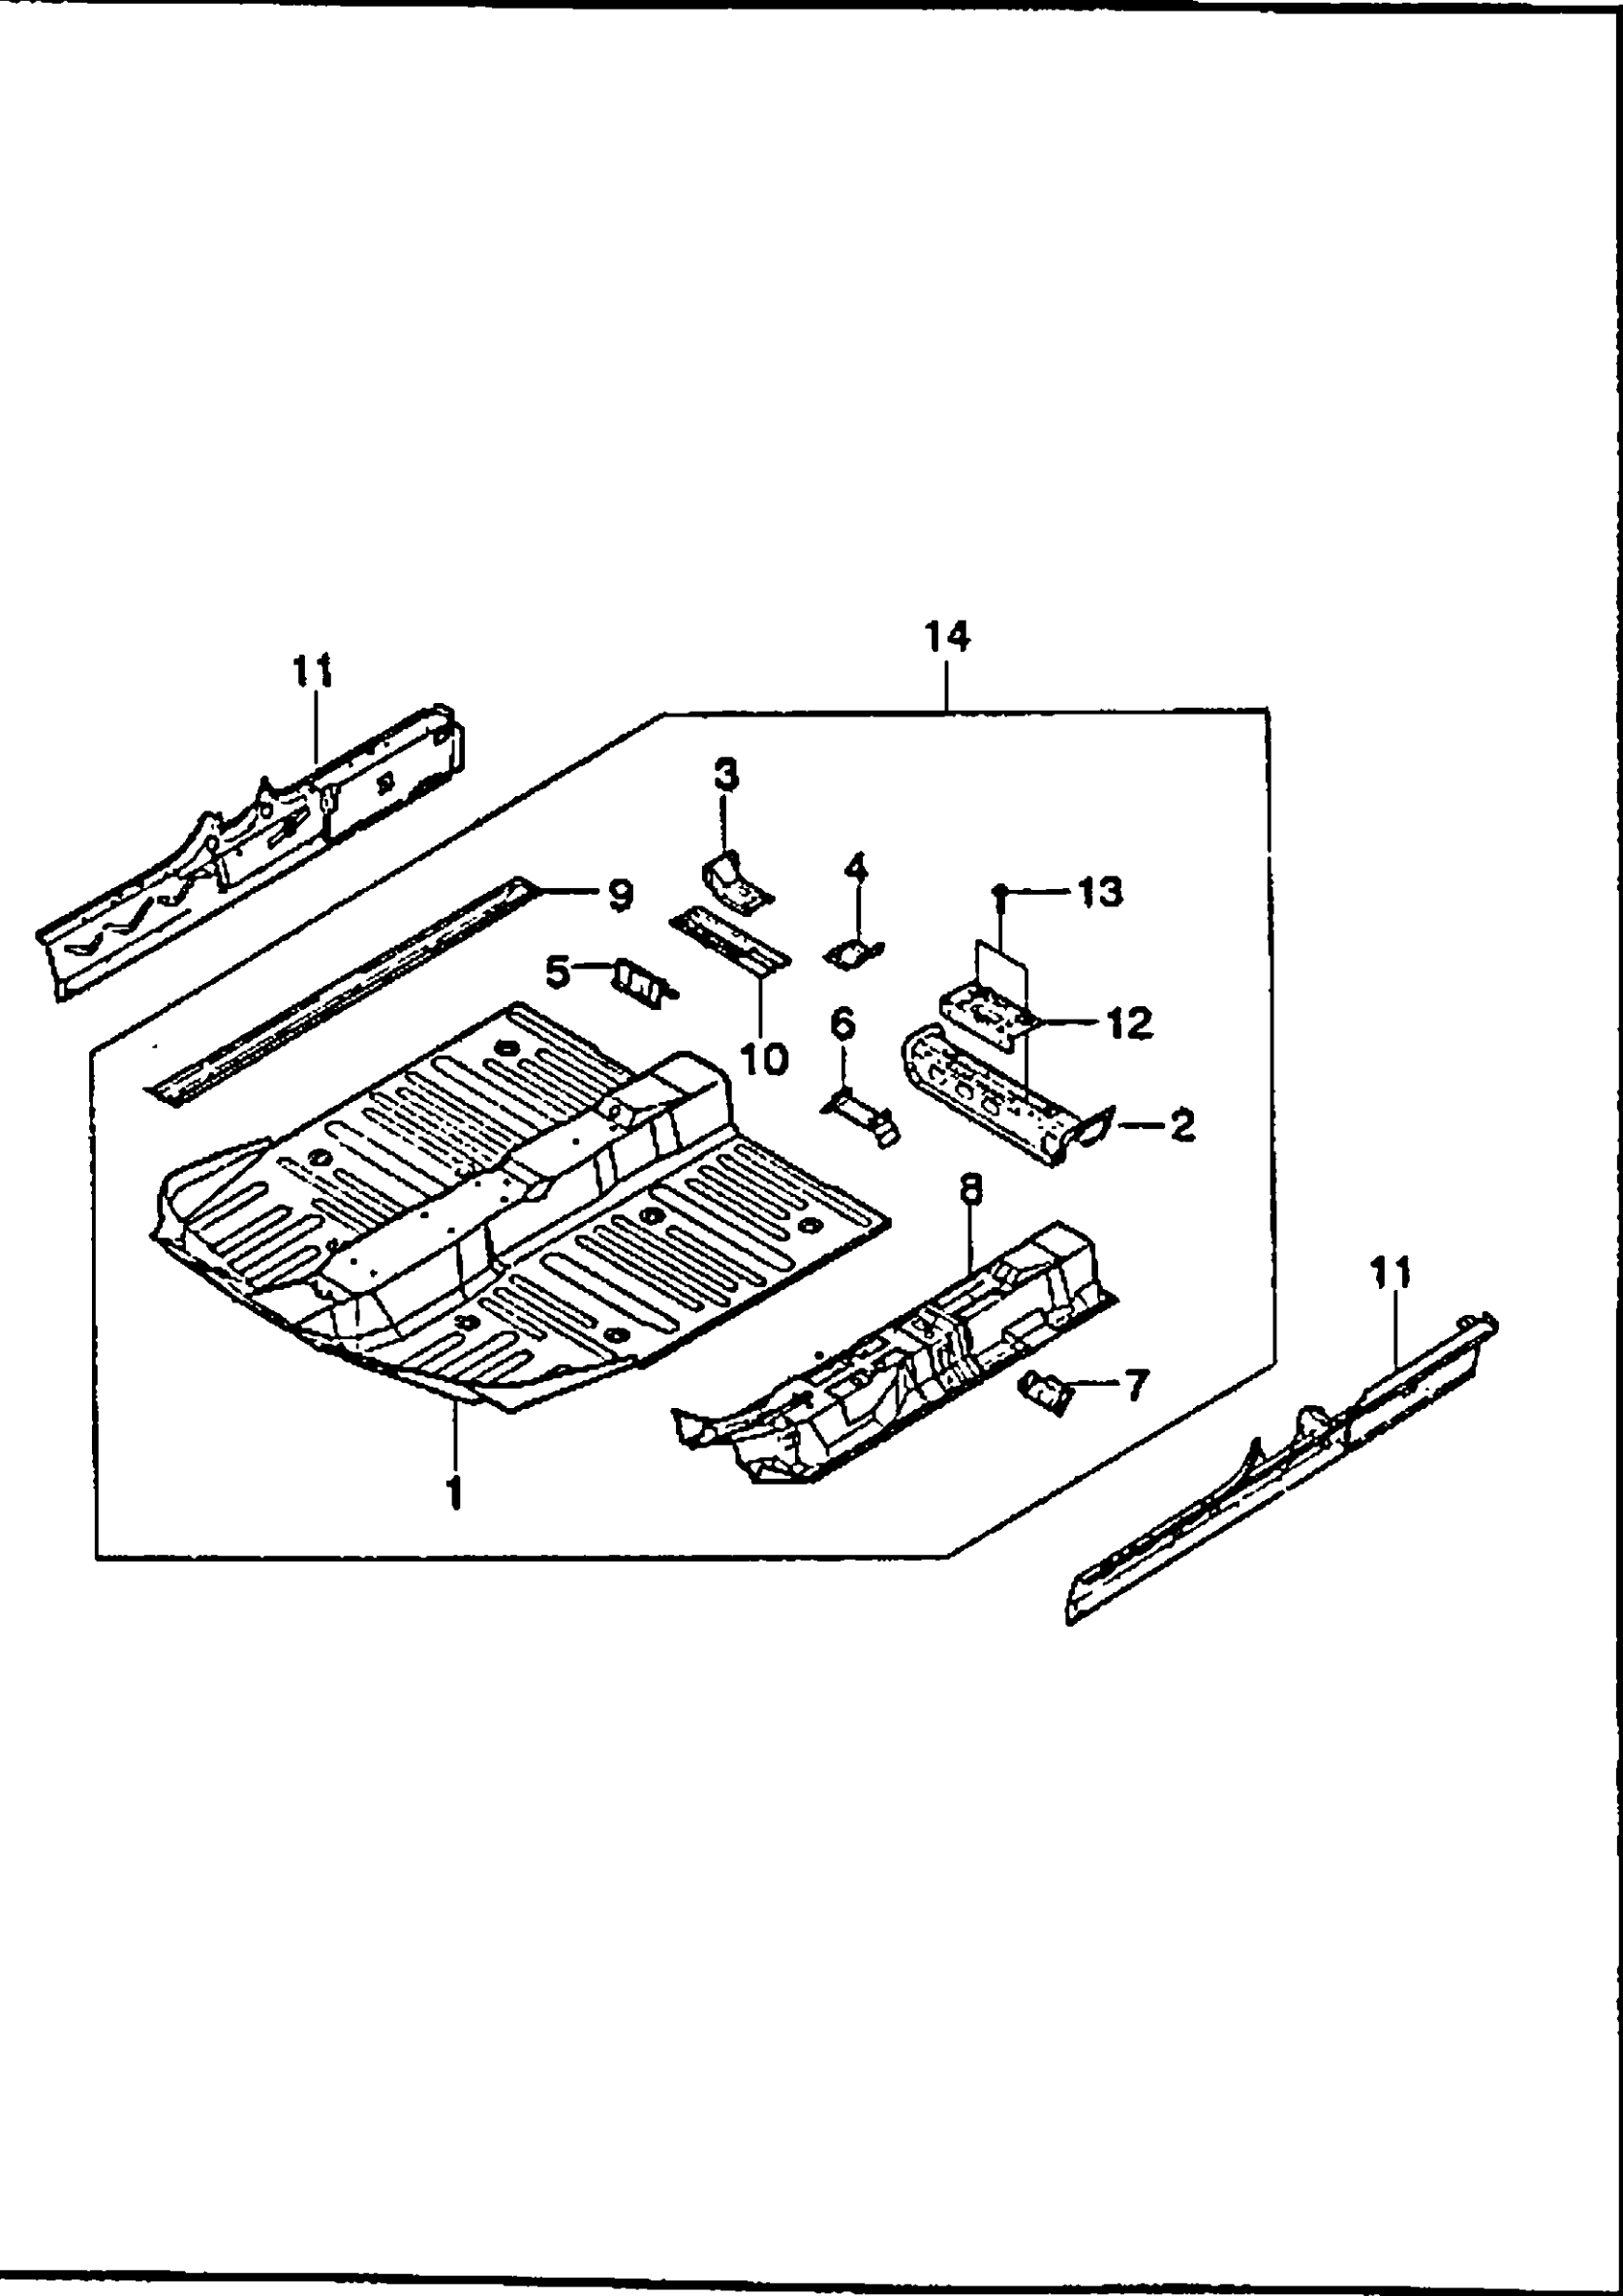



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	[01] A96306304	(E)PANEL A-FLOOR,FRONT (D)VERKLEIDUNG,BODEN,VORNE			B	B	B	S	S	S			(F)PANNEAU-PLANCHER,AVANT (S)PANEL-PISO,FRENTE	1	FD	
	[02] 96303380	(E)CROSSMEMBER A-FRONT SEAT (D)QUERTRÄGER,VORDERSITZ			B	B	B	S	S	S			(F)BARRE DE TRAVERSE (S)TRANSVERSAL-ASIENTO	LH 1	CA	
	96306121				B	B	B	S	S	S				RH 1	CB	
	[03] 96303382	(E)SUPPORT A-FRONT SEAT,OTR (D)TRÄGER			B	B	B	S	S	S			(F)SUPPORT (S)SOPORTE	LH 1 970624	SA	
O	96251599				B	B	B	S	S	S				LH 1 970624	SA	
	96306123				B	B	B	S	S	S				RH 1 970624	SI	
O	96251600				B	B	B	S	S	S				RH 1 970624	SI	
	[04] 96303383	(E)SUPPORT A-FRONT SEAT,INR (D)TRÄGER			B	B	B	S	S	S			(F)SUPPORT (S)SOPORTE	LH 1	NA	
	96306124				B	B	B	S	S	S				RH 1	N1	
	[05] 96215606	(E)BRACKET A-ECM (D)TRÄGER			B	B	B	S	S	S			(F)SUPPORT (S)SOPORTE	1		
	[06] 96303384	(E)BRACKET A-CONNECTING PIEC (D)TRÄGER			B	B	B	S	S	S			(F)SUPPORT (S)SOPORTE	1		
	[07] 96215387	(E)BRACKET-CONSOLE (D)TRÄGER			B	B	B	S	S	S			(F)SUPPORT (S)SOPORTE	1		
	[08]	(E)REINFORCEMENT A-TUNNEL (D)VERSTÄRKUNG											(F)RENFORCEMENT-TUNNEL AVANT (S)REFUERZO-TUNEL DEL FRENTE			
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

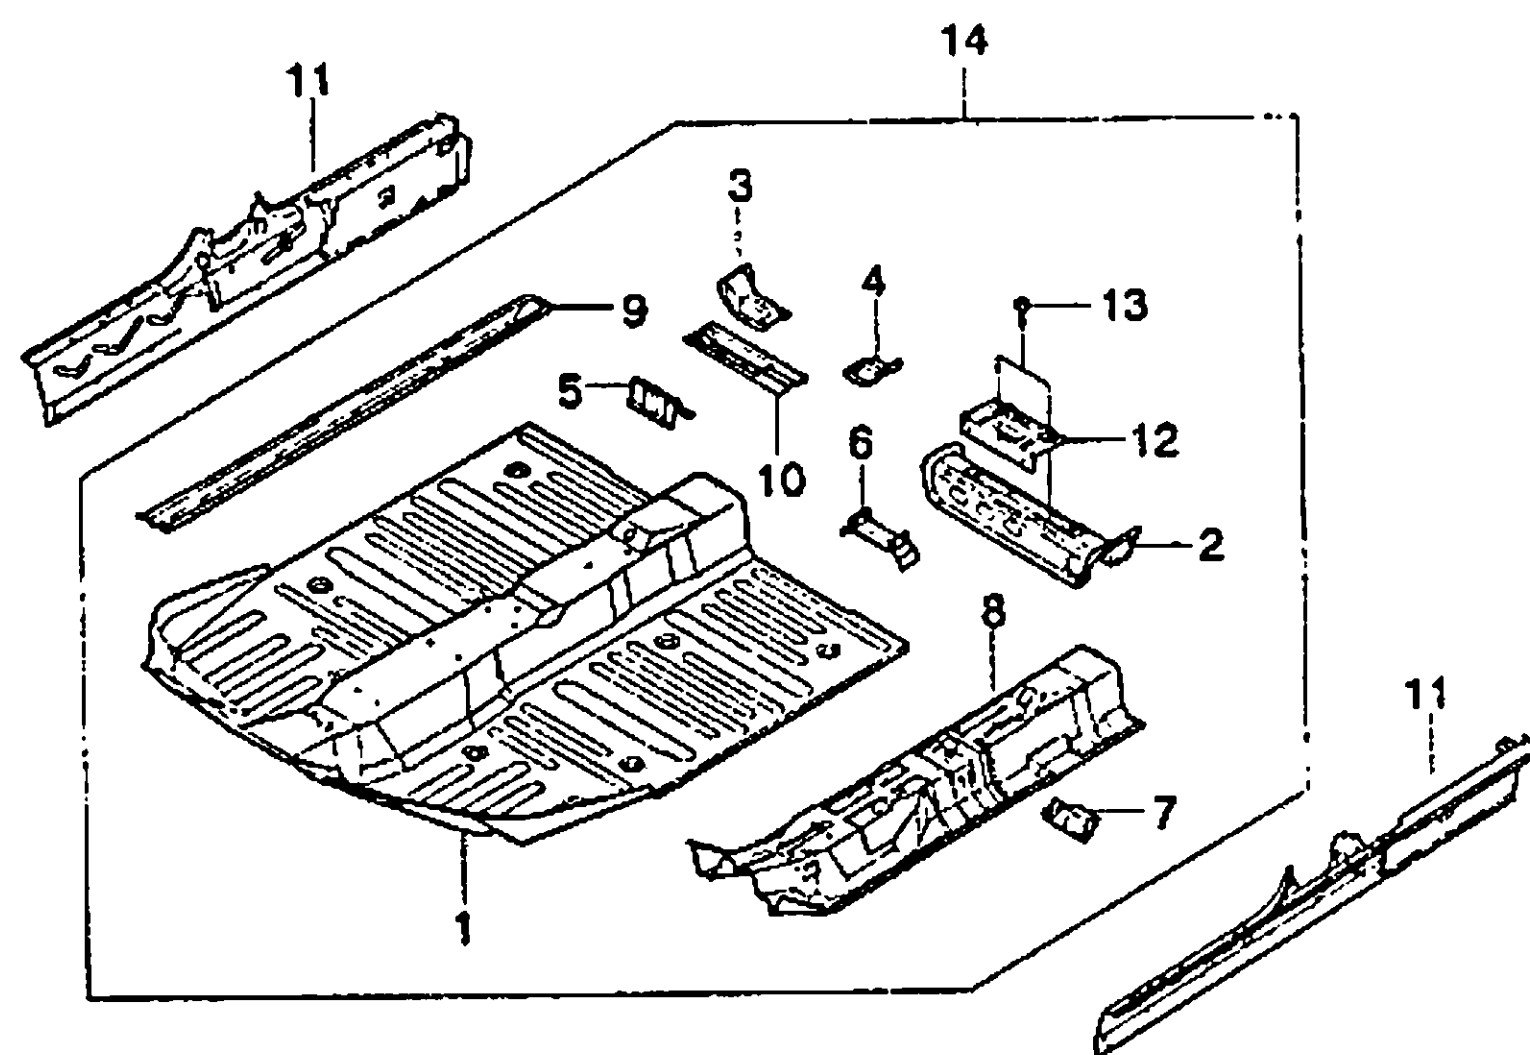


KEY NO.			PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	96250466	.	.	B	B	B	S	S	S		1				
	[09]										(F)CADRE-COTE				
											(S)ARMADURA-LADO				
	96306348	.	.	B	B	B	S	S	S	LH	1			BB	
	96306314	.	.	B	B	B	S	S	S	RH	1			B2	
	[10]										(F)BARRE DE TRAVERSE				
											(S)TRANSVERSAL				
	96227504	.	.	B	B	B	S	S	S		2			LB	
	[11]										(F)PANNEAU-PLANCHER,COTE				
											(S)PANEL-PISO,LADO				
	96306318	.	.	B	.	B	S	S	S	LH	1			SD	
	96306320	.	.	B	.	B	S	S	S	RH	1			S4	
	96306317	.	.	.	B	.	S	.	S	LH	1			SB	
	96306319	.	.	.	B	.	S	.	S	RH	1			S2	
	[12]										(F)SUPPORT				
											(S)SOPORTE				
	96248577	.	.	B	B	B	A	A	A		1		FOR		
													LEBANON,LIBYA		
	96248583	.	.	B	B	B	A	A	A		1		FOR		
													BRAZIL,POLAND		
	[13]										(F)VIS				
											(S)TORNILLO				
	09132-04004	.	.	B	B	B	A	A	A		2	971001	FOR		
													LEBANON,LIBYA		
O	09132-04013	.	.	B	B	B	A	A	A		2	971001	FOR		
													LEBANON,LIBYA		
	09132-04004	.	.	B	B	B	A	A	A		2	971001	FOR		
													BRAZIL,POLAND		
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

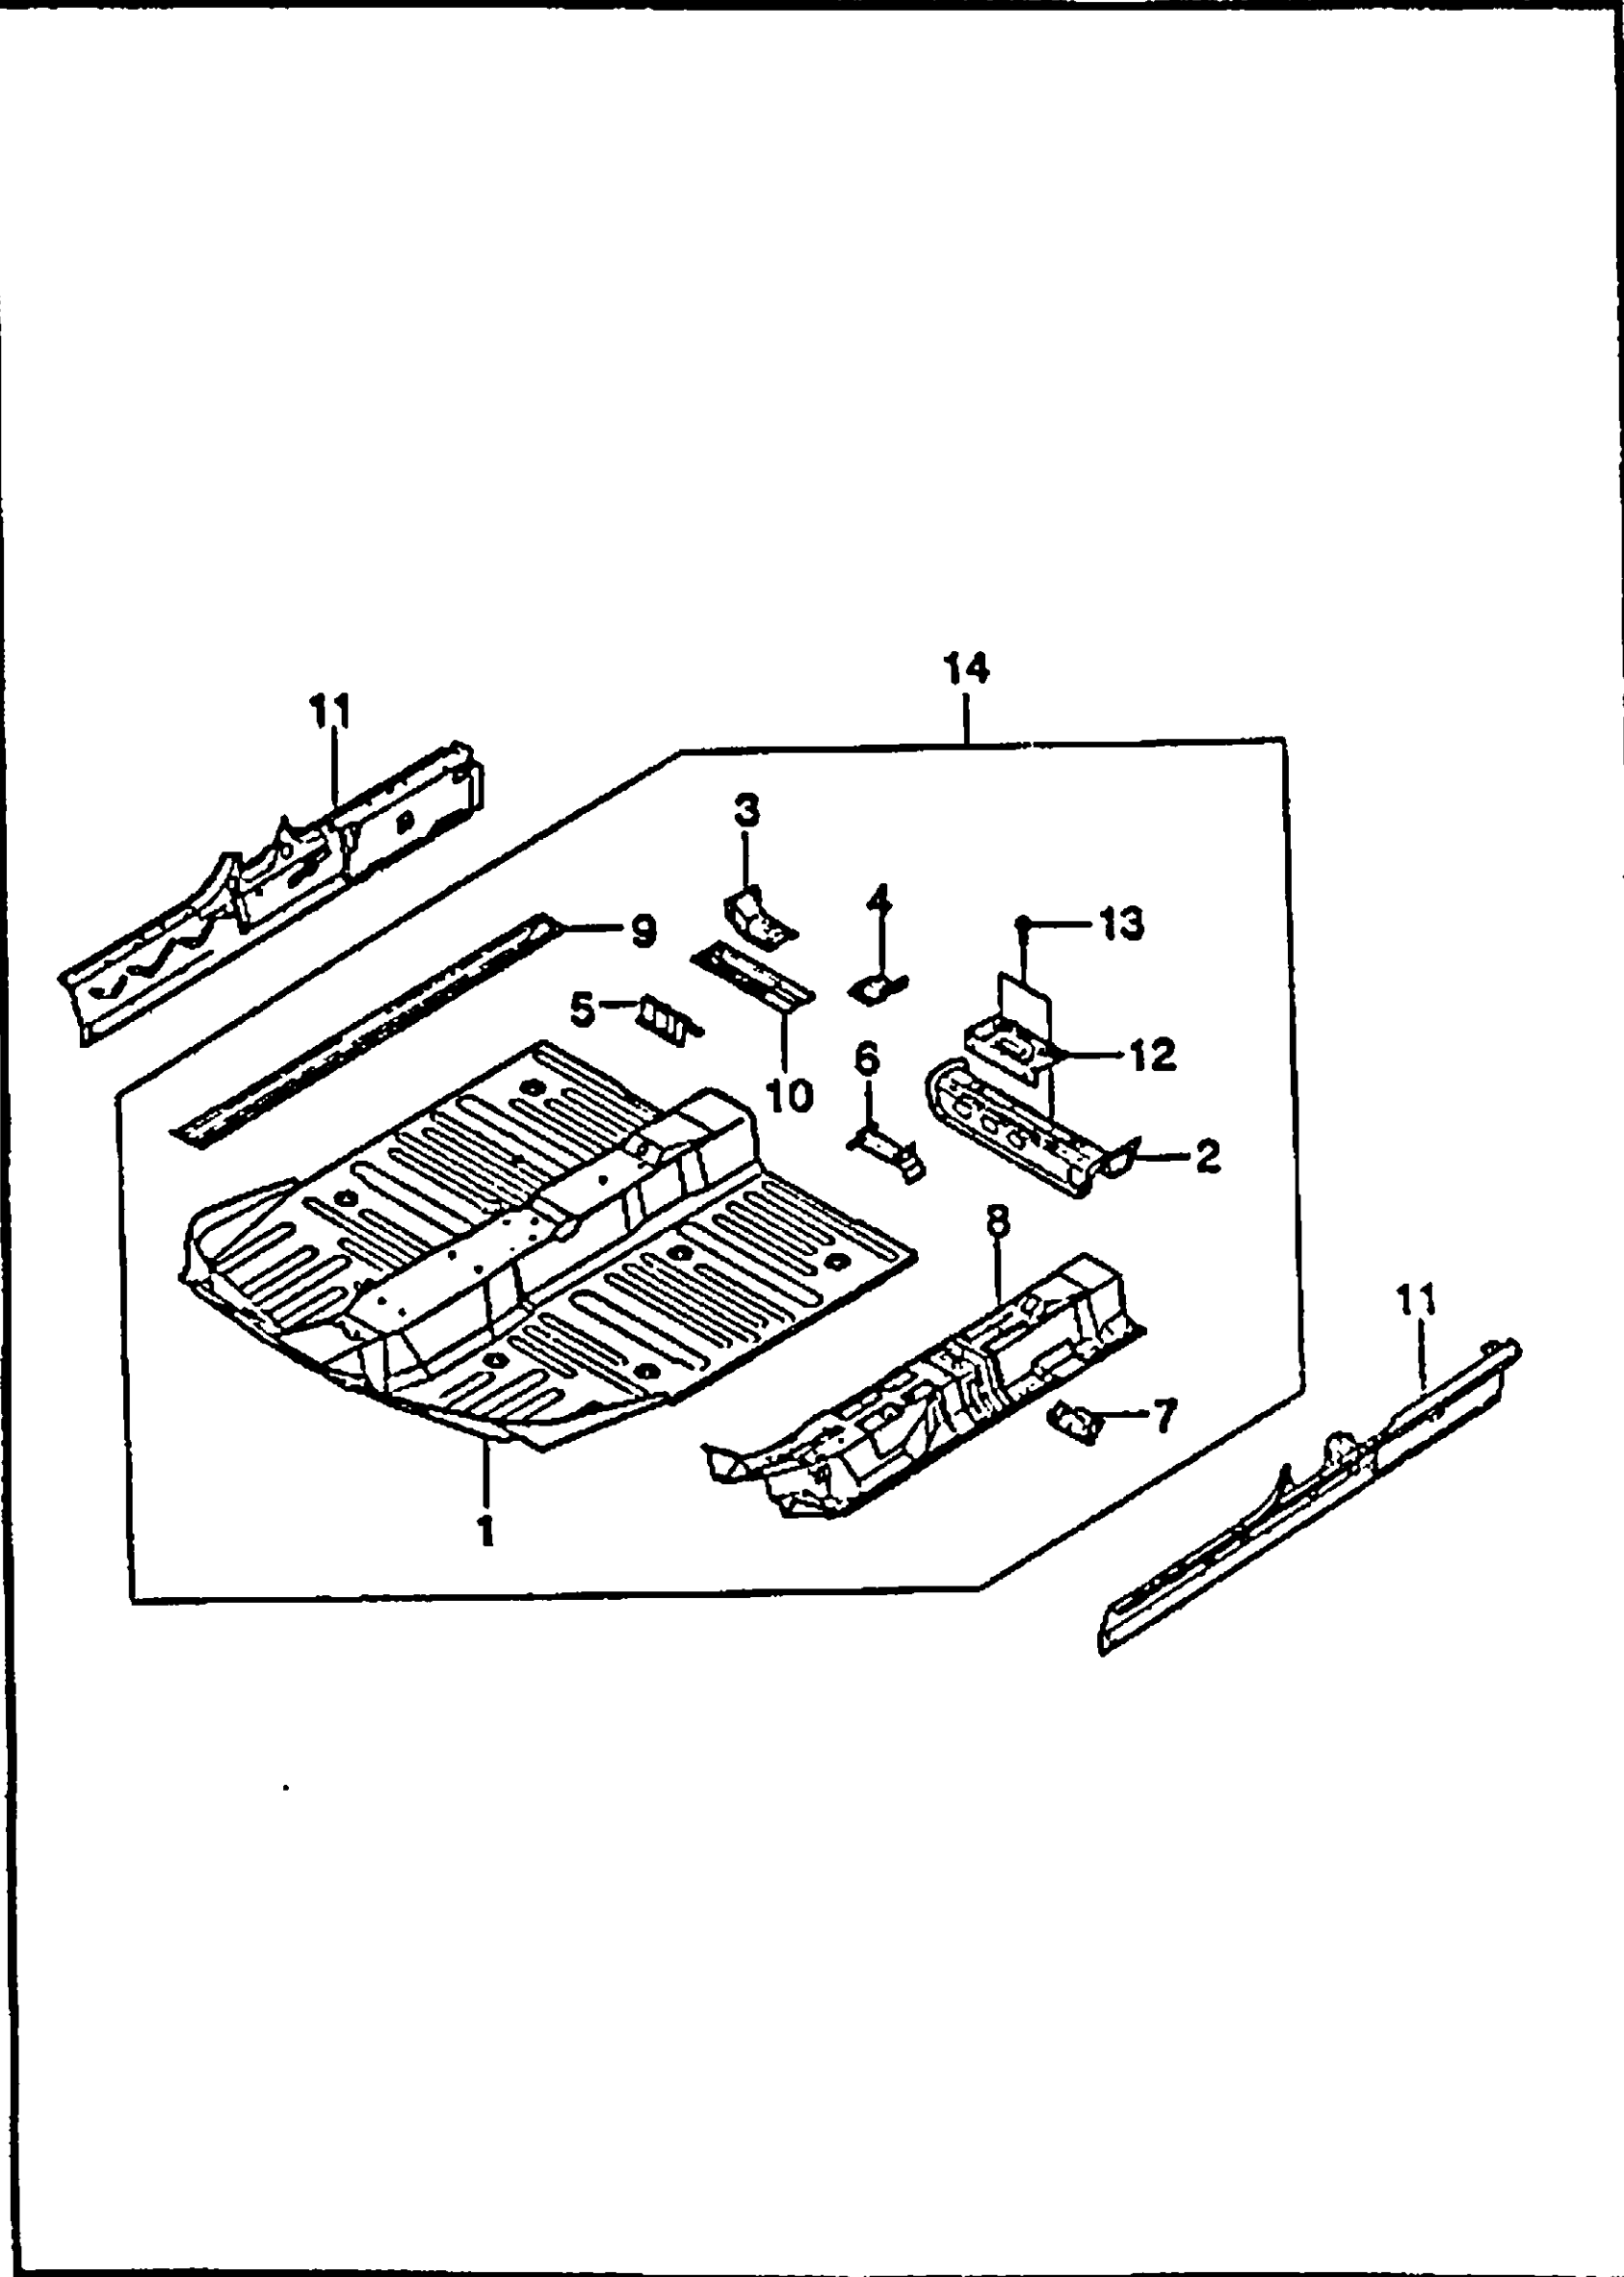

KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N / G A	T	BODY			LEVEL					FROM	TO			
				4 N H	3 H	5 H	S	S E								S X
O 09132-04013	. . B B B A A A								2 971001	FOR BRAZIL,POLAND						
[14]	(E)PANEL A-FLOOR,FRONT (D)VERKLEIDUNG,BODEN,VORNE								(F)PANNEAU-PLANCHER,AVANT (S)PANEL-PISO,FRENTE							
A96306303	. . B B S S S								1			FB				
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

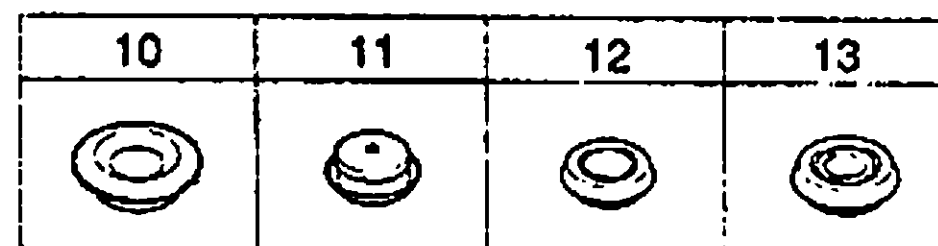
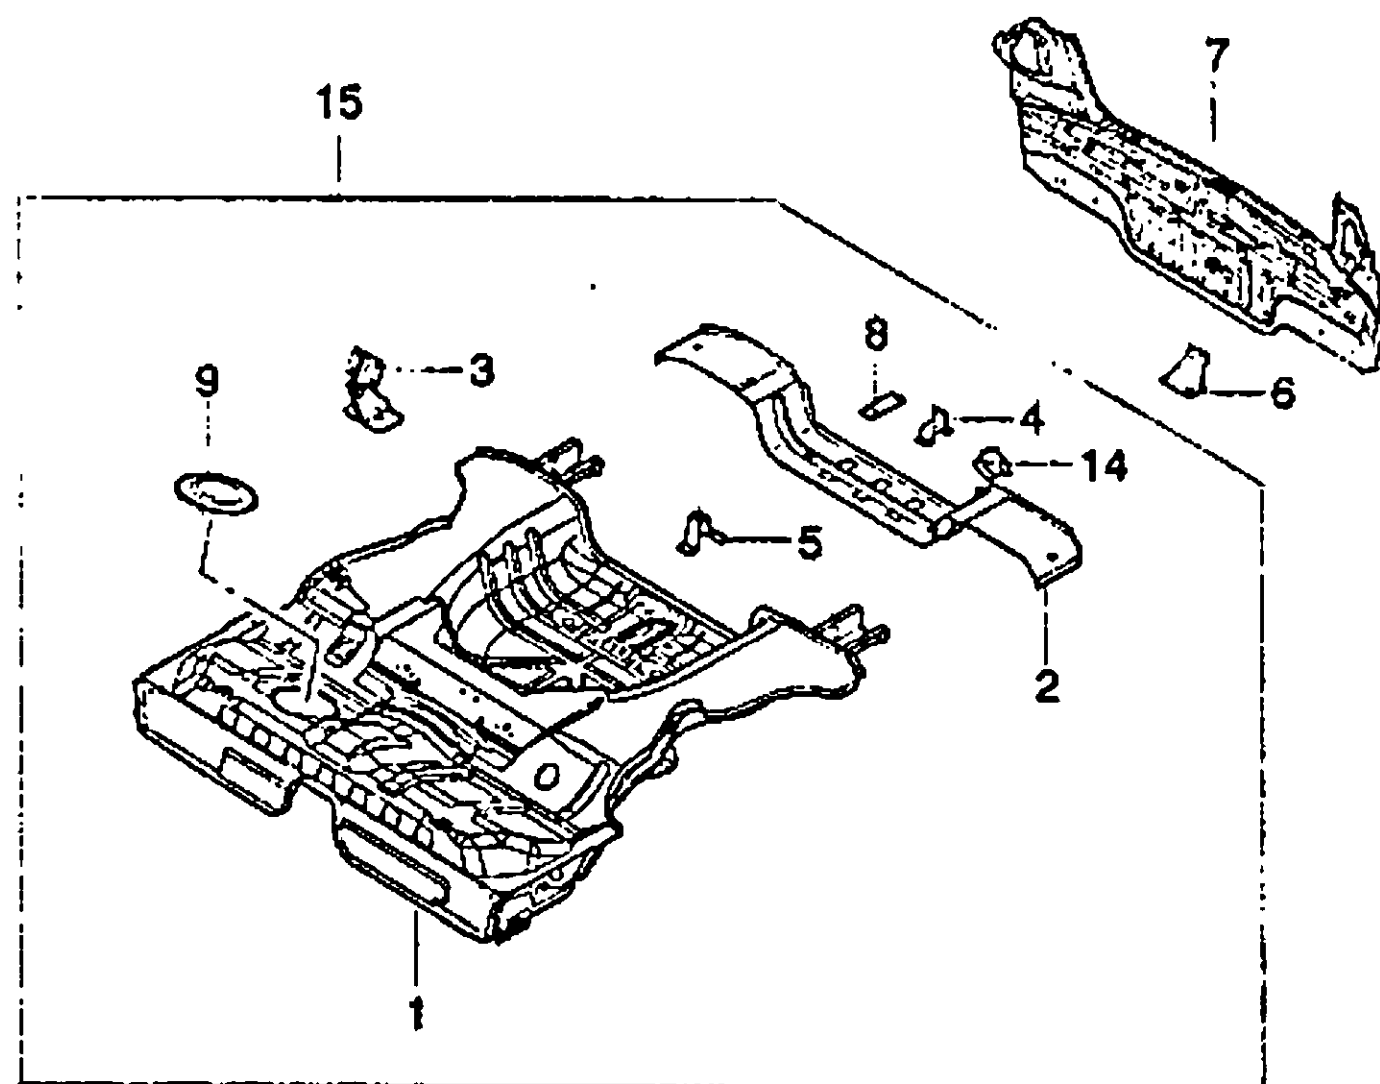


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[01]	(E)PANEL A-FLOOR,REAR (D)VERKLEIDUNG,BODEN,HINTEN									(F)PANNEAU-PLANCHER (S)PANEL-PISO,ATRAS					
	A96306407	. . . B . . . S S S									1					
	A96306408	 B B S . S									1					
	[02]	(E)EXTENSION-FLOOR PANEL,RR (D)VERLÄNGERUNG									(F)RALLONGE (S)EXTENSION-PANEL DEL PISO					
	A96306409	. . . B . . . S S S									1			EB		
	[03]	(E)BRACKET A-RR SEAT BACK,CT (D)TRÄGER									(F)SUPPORT (S)SOPORTE					
	96250617	. . . B B B S . S &AM9									1					
	96250617	. . . B B B A A A &AMB									1					
	[04]	(E)BRACKET A-JACK,NO.1 (D)TRÄGER									(F)SUPPORT (S)SOPORTE					
	96216610	. . . B . . . S S S									1					
	[05]	(E)STAND A-SPARE WHEEL (D)STÄNDER,ERSATZRAD									(F)SUPPORT-ROUE DE SECOURS (S)PIE-RUEDA DE REPUESTO					
	96303404	. . . B B B S S S									1					
	[06]	(E)REINFORCEMENT A-RR BUMPER (D)VERSTÄRKUNG									(F)RENFORCEMENT (S)REFUERZO					
	96303405	. . . B B B S S S									2					
	[07]	(E)PANEL A-BACK,LOWER (D)VERKLEIDUNG,HINTEN,UNTEN									(F)PANNEAU-ARRIERE BAS (S)PANEL-RESPALDO BAJA					
	96306372	. . . B . . . S S S									1			BD		
	96306370	 B B S . S									1			BB		
	[08]	(E)BRACKET JACK,NO.2 (D)TRÄGER									(F)SUPPORT (S)SOPORTE					
	96216613	. . . B . . . S S S									1					
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							


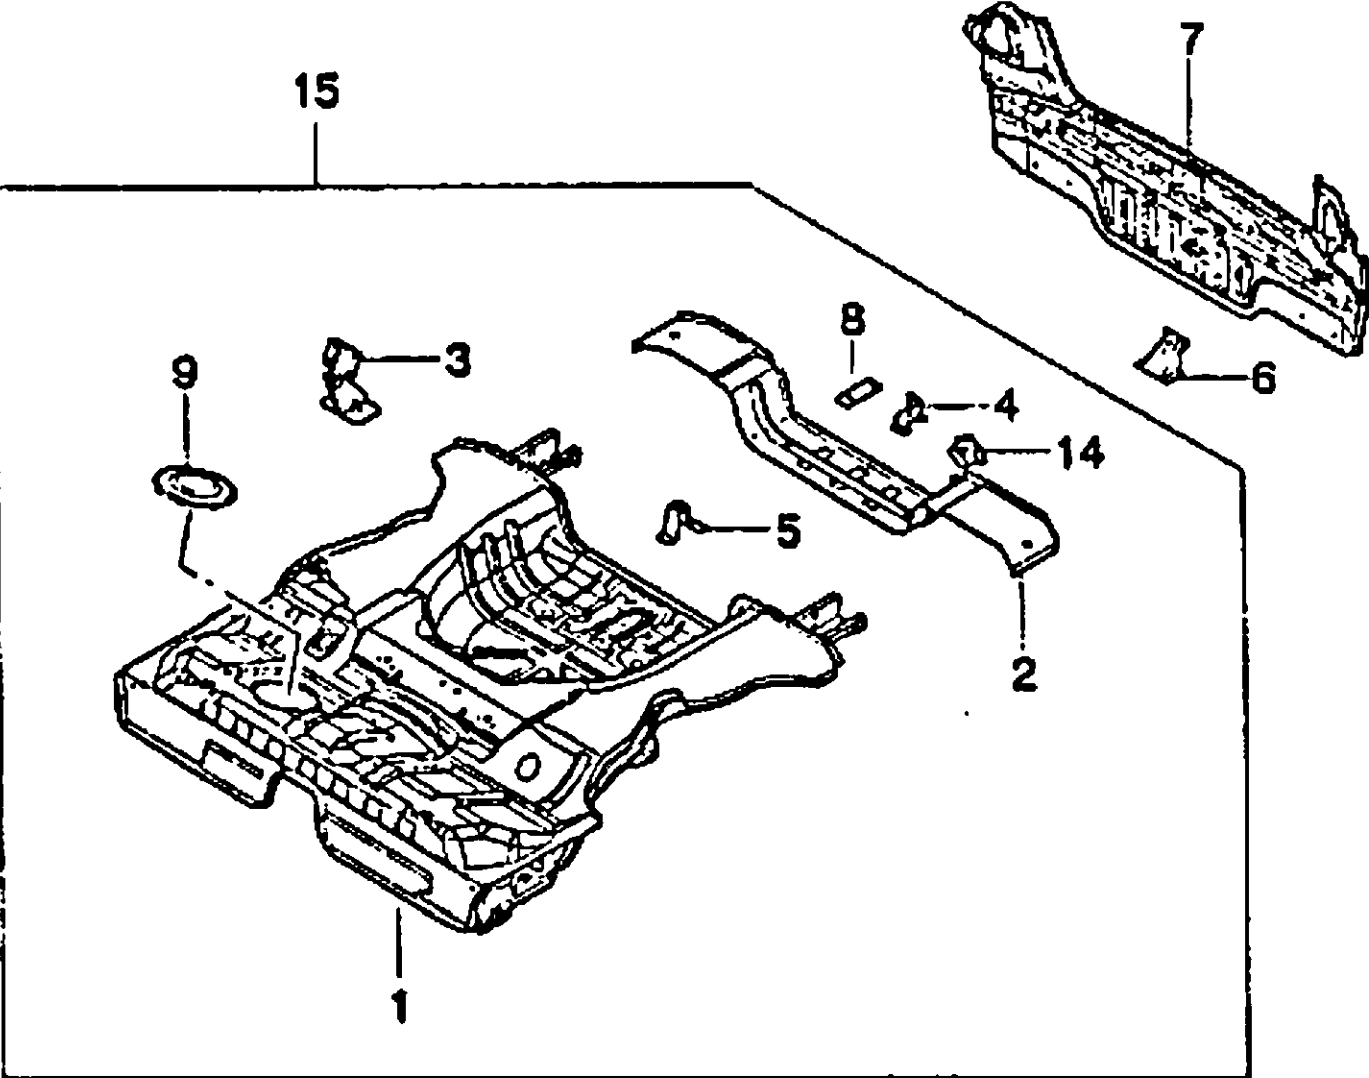


10	11	12	13



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S S								S S S	S S S
	[09]	(E)CAP-FUEL TANK SERVICE (D)DECKEL									(F)CHAPEAU (S)TAPA					
	96221241	.	.	B	B	B	S	S	S			1				
	[10]	(E)PLUG (D)STÖPSEL									(F)BOUCHON (S)TAPON					
	09241-40001	.	.	B	B	B	S	S	S			12				
	[11]	(E)PLUG (D)STÖPSEL									(F)BOUCHON (S)TAPON					
	09241-21001	.	.	B	B	B	S	S	S			9				
	[12]	(E)PLUG (D)STÖPSEL									(F)BOUCHON (S)TAPON					
	09241-30003	.	.	B	B	B	S	S	S			6				
	[13]	(E)PLUG (D)STÖPSEL									(F)BOUCHON (S)TAPON					
	09241-40002	.	.	B	B	B	S	S	S			1				
	[14]	(E)BRACKET JACK, LOWER (D)TRÄGER									(F)SUPPORT (S)SOPORTE					
	96225158	.	.	B	B	S	.	S	.			1				
	[15]	(E)PANEL A1 FLOOR, REAR (D)VERKLEIDUNG, BODEN, HINTEN									(F)PANNEAU-PLANCHER (S)PANEL-PISO, ATRAS					
	A96306389	.	.	B	.	.	S	S	.	&AM6		1				
	A96304541	.	.	B	.	.	.	S	.	&AM9		1				
	A96304541	.	.	B	.	.	A	A	A	&AMB		1				
	A96306394	.	.	B	B	S	.	S	.			1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

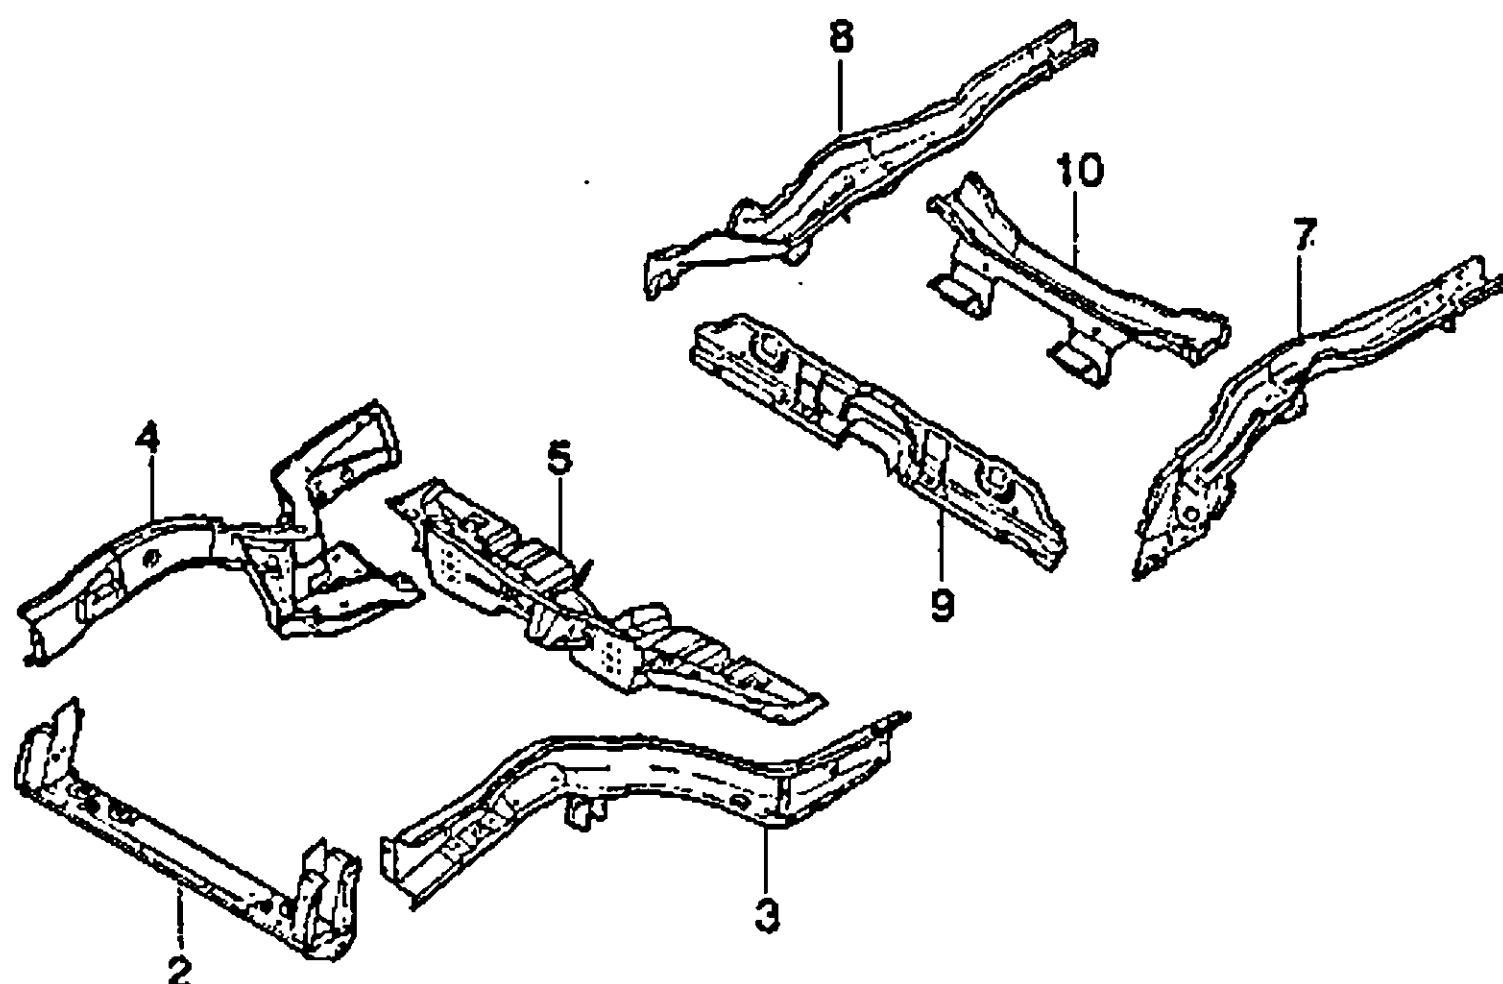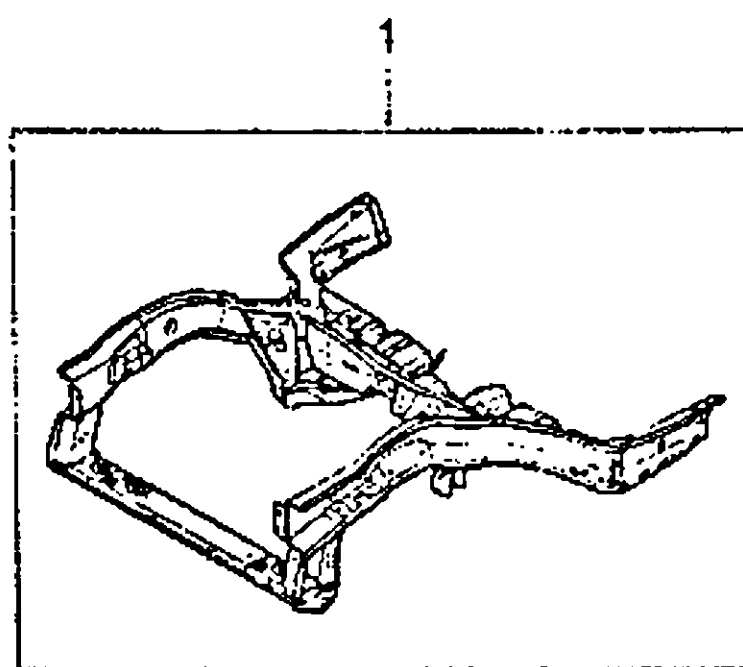


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L I R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E
		E N G	T / A	BODY		LEVEL								
				4 N	3 H	5 H	S S				S S	X		
											FROM	TO		
	[01]	(E)FRAMEWORK A-FRONT (D)AUSSTATTUNG GESTELL									(F)TRAVAIL-CADRE AVANT (S)TRABAJO-ARMADURA			
	A96306256	M B B B S S S								1				MD
	A96306255	A B B B O O O								1				MB
	[02]	(E)CROSSMEMBER A-RADIATOR (D)QUERTRÄGER,KÜHLER									(F)BARRE DE TRAVERSE (S)TRANSVERSAL-RADIADOR			
	96306685	. . B B B S S S								1	970407			CB
N	96251570	. . B B B S S S								1	970407			U2
	[03]	(E)LONGITUDINAL A-FRONT (D)LÄNGENTEIL,VORNE									(F)LONGITUDINAL-AVANT (S)LONGITUDINAL-FRENTE			
	96248574	. M B B B S S S								LH 1				M4
	96248576	. A B B B O O O								LH 1				M2
	[04]	(E)LONGITUDINAL A-FRONT (D)LÄNGENTEIL,VORNE									(F)LONGITUDINAL-AVANT (S)LONGITUDINAL-FRENTE			
	96306280	. . B B B S S S								RH 1				L2
	[05]	(E)CROSSMEMBER A-FLR PNL,FRT (D)QUERTRÄGER									(F)BARRE DE TRAVERSE (S)TRANSVERSAL			
	96303374	. . B B B S S S								1				PB
	[07]	(E)LONGITUDINAL A-REAR (D)LÄNGENTEIL,HINTEN									(F)LONGITUDINAL-ARRIERE (S)LONGITUDINAL-TRASERO			
	96250474	. . B . . S S S								LH 1				H4
	96250476	. . . B B S . S								LH 1				H2
	[08]	(E)LONGITUDINAL A-REAR (D)LÄNGENTEIL,HINTEN									(F)LONGITUDINAL-ARRIERE (S)LONGITUDINAL-TRASERO			
	96306437	. . B . . S S S								RH 1				L4
	96306438	. . . B B S . S								RH 1				L2
	[09]	(E)CMR A-RR FLOOR,PNL,FRT (D)QUERTRÄGER									(F)BARRE DE TRAVERSE (S)TRANSVERSAL			
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

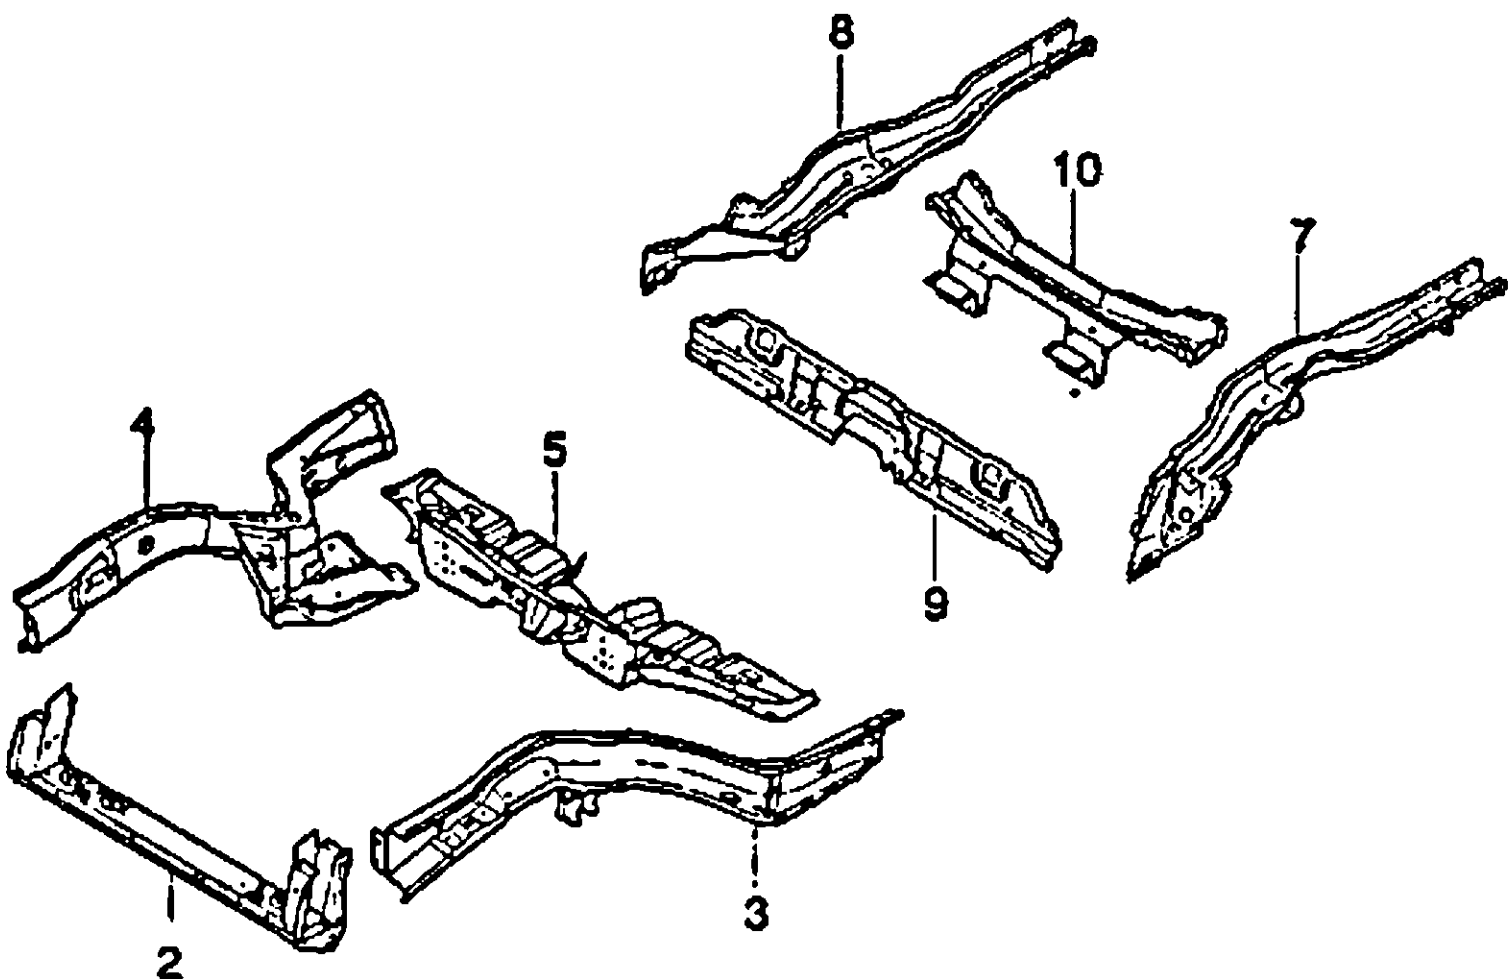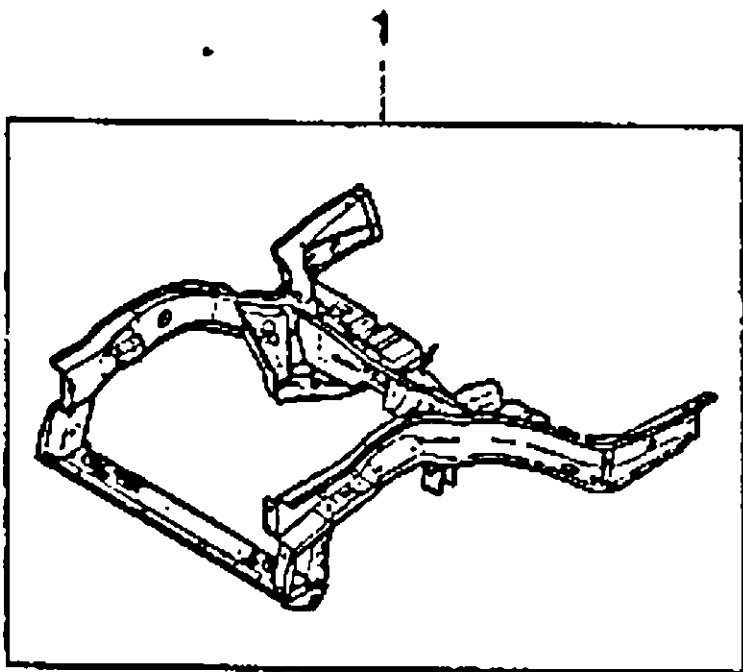


KEY NO.		PART NAME														
I T C.	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	96306466 [10] 96306472	. (E) (D) . .	. C Q . .	B M U B	B B B B	S A R S	S R R S	S F L S			1 (F) (S) 1		RB RB			
		ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE								
		Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

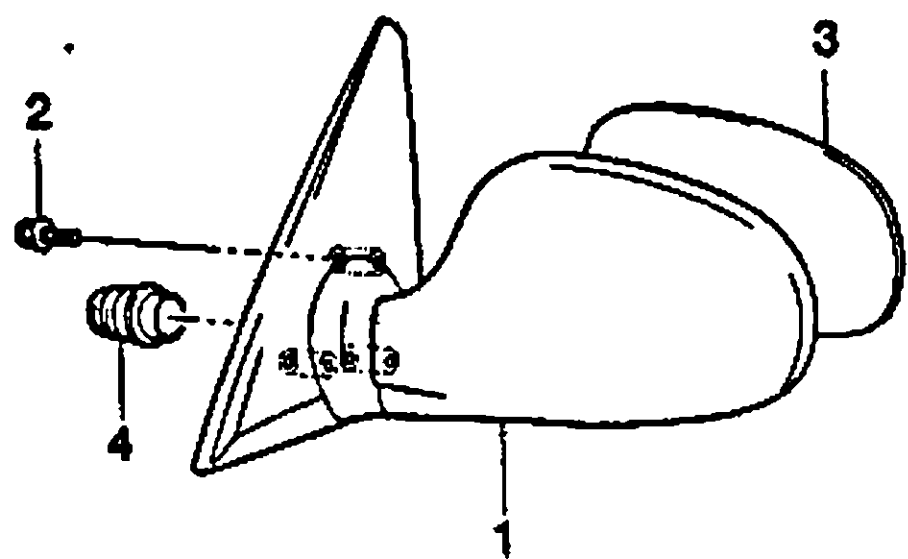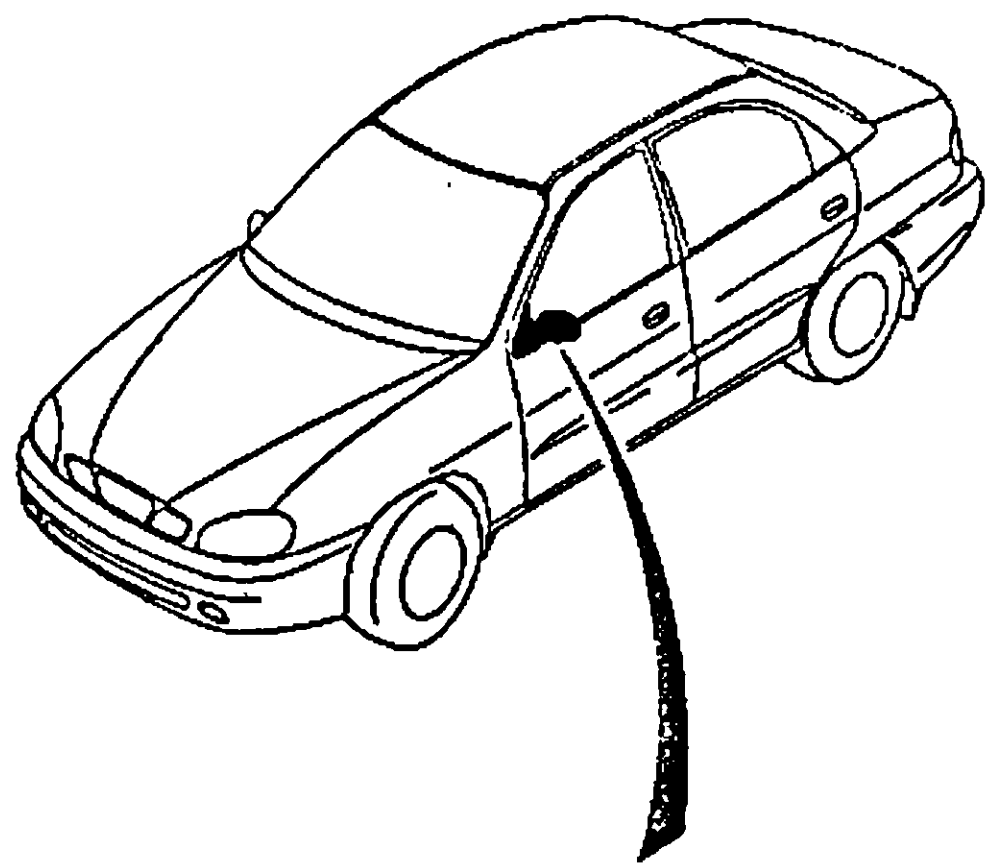


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)MIRROR A-OUTSIDE (D)SPIEGEL AUßEN									(F)RETROVISEUR-EXTERIEUR (S)ESPEJO-EXTERNO					
	96304167	.	.	B	B	B	S	S	S	&D33	LH	1		CA		
	96227724	.	.	B	B	B	S	S	S	&D39	RH	1		CE		
	96227725	.	.	B	B	B	.	.	O	&DD4	RH	1		EE		
	[02]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	09138-06027	.	.	B	B	B	S	S	S			6				
	[03]	(E)GLASS-MIRROR (D)GLAS									(F)GLACE (S)VIDRIO					
	S6630006	.	.	B	B	B	S	S	S		LH	1				
	S6630007	.	.	B	B	B	S	S	S		RH	1				
	[04]	(E)BOOT-KNOB (D)KOFFERRAUM									(F)GAINE (S)CAPUCHON					
	31121708	.	.	B	B	B	S	S	S			2				
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE										
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK										

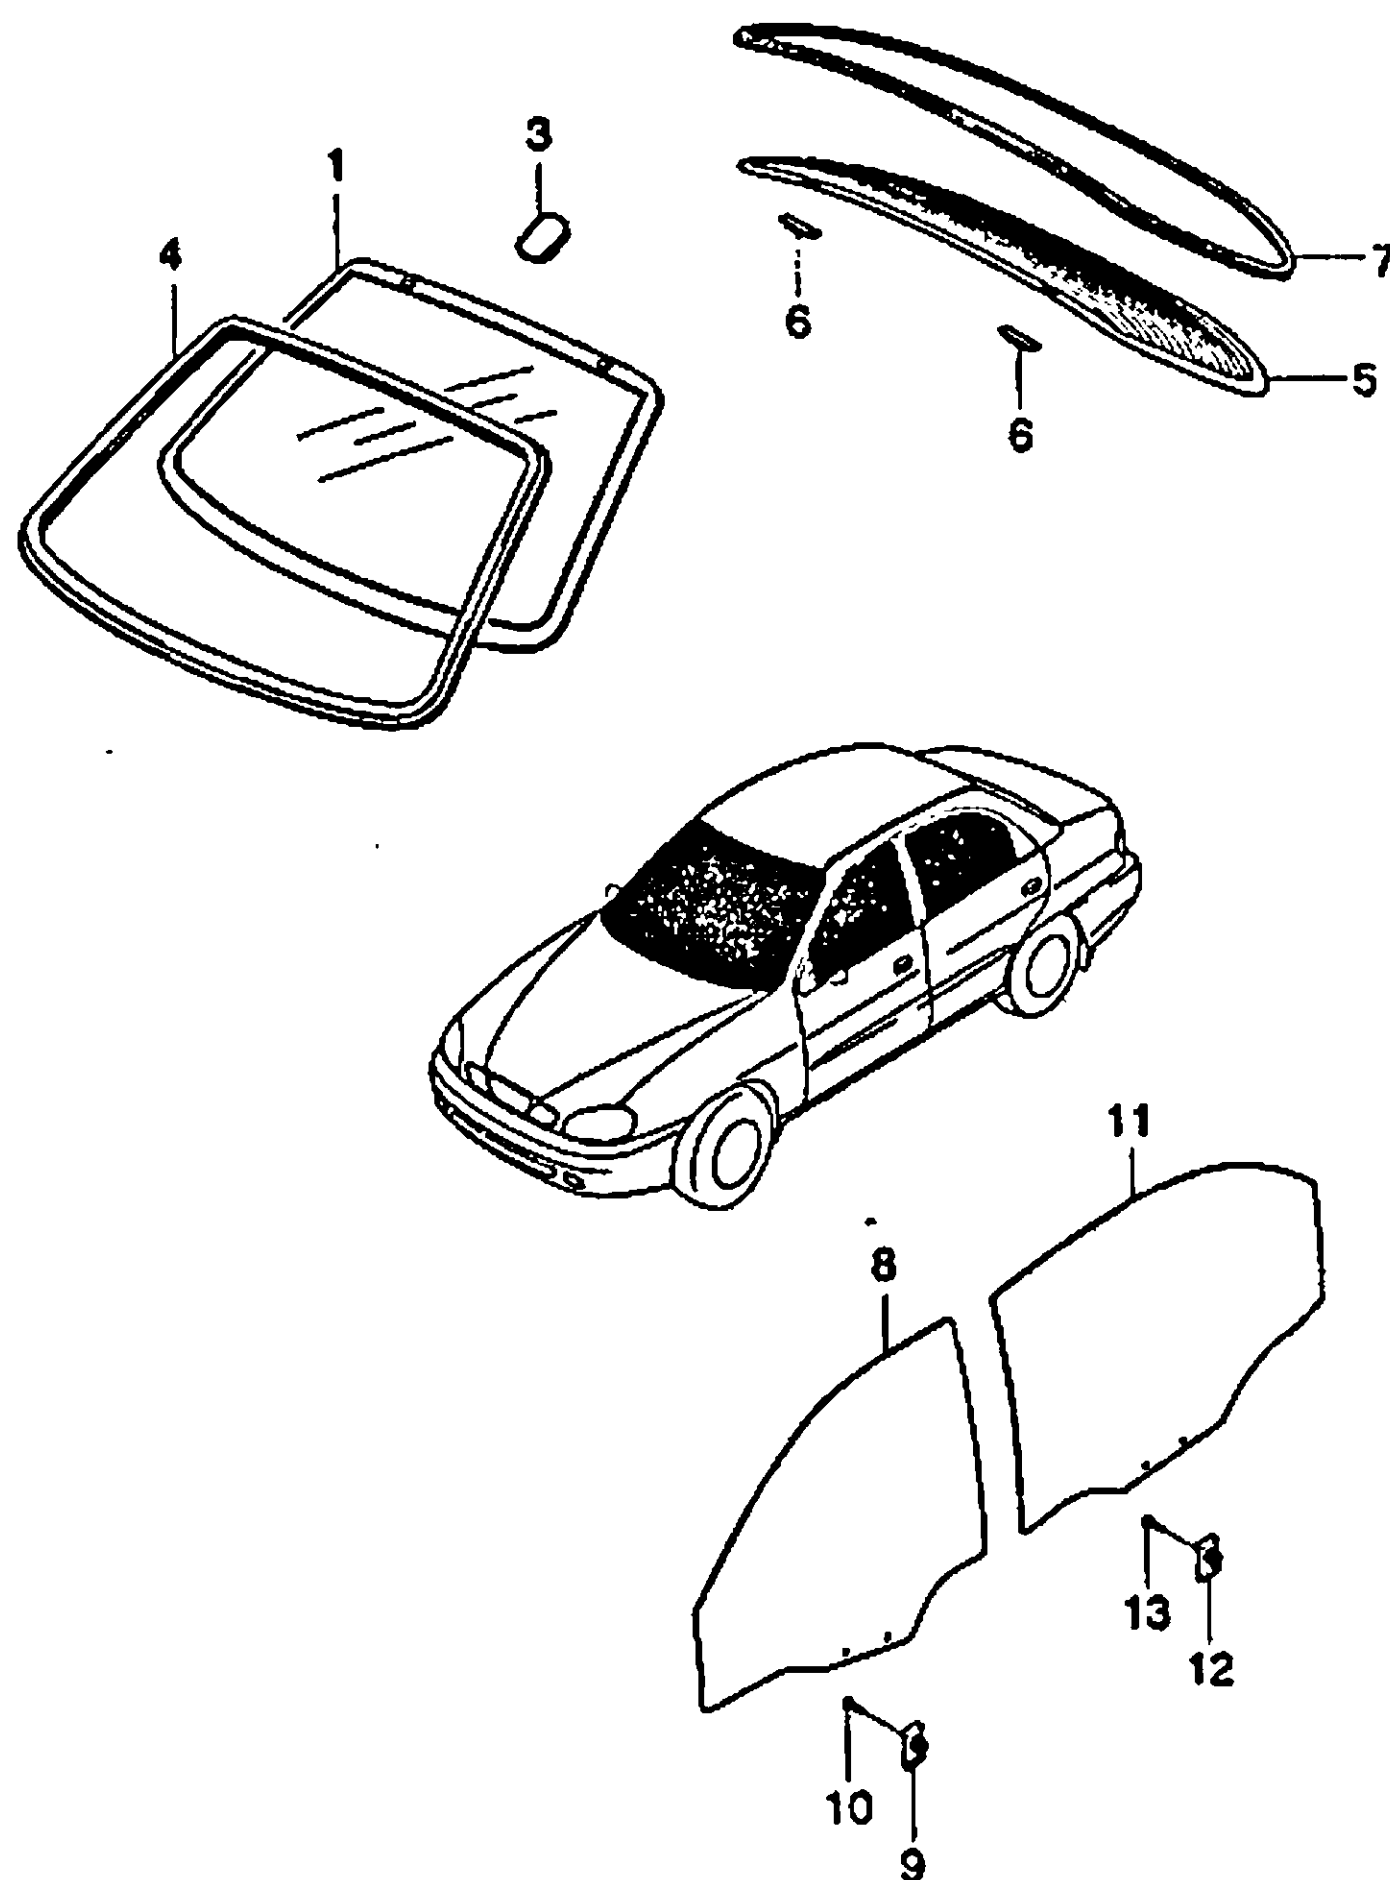



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	[01]	(E)GLASS A-WINDSHIELD (D)GLAS,WINDSCHUTZSCHEIBE									(F)GLACE-PARE-BRISE (S)VIDRIO-PARABRISAS					
	96303213	. . . B . . . S . . .						&A22		1	970526					
O	96256902	. . . B . . . S . . .						&A22		1	970526					
	96306108	. . . B . . . O S S						&A01		1						
	[03]	(E)PLATE-CARRIER (D)PLATTE									(F)PLAQUE (S)PLACA					
	90126071	. . . B . . . S S S								1						
	[04]	(E)MOLDING WINDSHIELD (D)PREßTEIL WINDSCHUTZSCHEIB									(F)MOULURE-PARE-BRISE (S)MOLOURA-PARABRISAS					
	96240757	. . . B . . . S S S								1						
	[05]	(E)GLASS A-BACK WINDOW (D)GLAS									(F)GLACE-FENETRE ARRIERE (S)VIDRIO-VENTANA TRASERA					
	96306110	. . . B . . . S . . .						&A22		1						
	96306112	. . . B . . . O S S						&A01		1						
	[06]	(E)STOPPER-GLASS,UPPER (D)STÖPSEL									(F)ARRETOIR OU BOUCHON (S)TAPON					
	96216138	. . . B . . . S S S								2						
	[07]	(E)MOLDING-BACK WINDOW (D)PREßTEIL FENSTERSCHEIBE									(F)MOULURE-FENETRE ARRIERE (S)MOLOURA-VENTANA TRASERA					
	96240758	. . . B . . . S S S								1						
	[08]	(E)GLASS-FRT DOOR WINDOW (D)GLAS									(F)GLACE-FENETRE AVANT (S)VIDRIO-VENTANA DELANTERA					
	96304048	. . . B . . . S . . .						&A22		LH 1						
	96304050	. . . B . . . S . . .						&A22		RH 1						
	96304052	. . . B . . . O S S						&A01		LH 1						
	96304054	. . . B . . . O S S						&A01		RH 1						
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

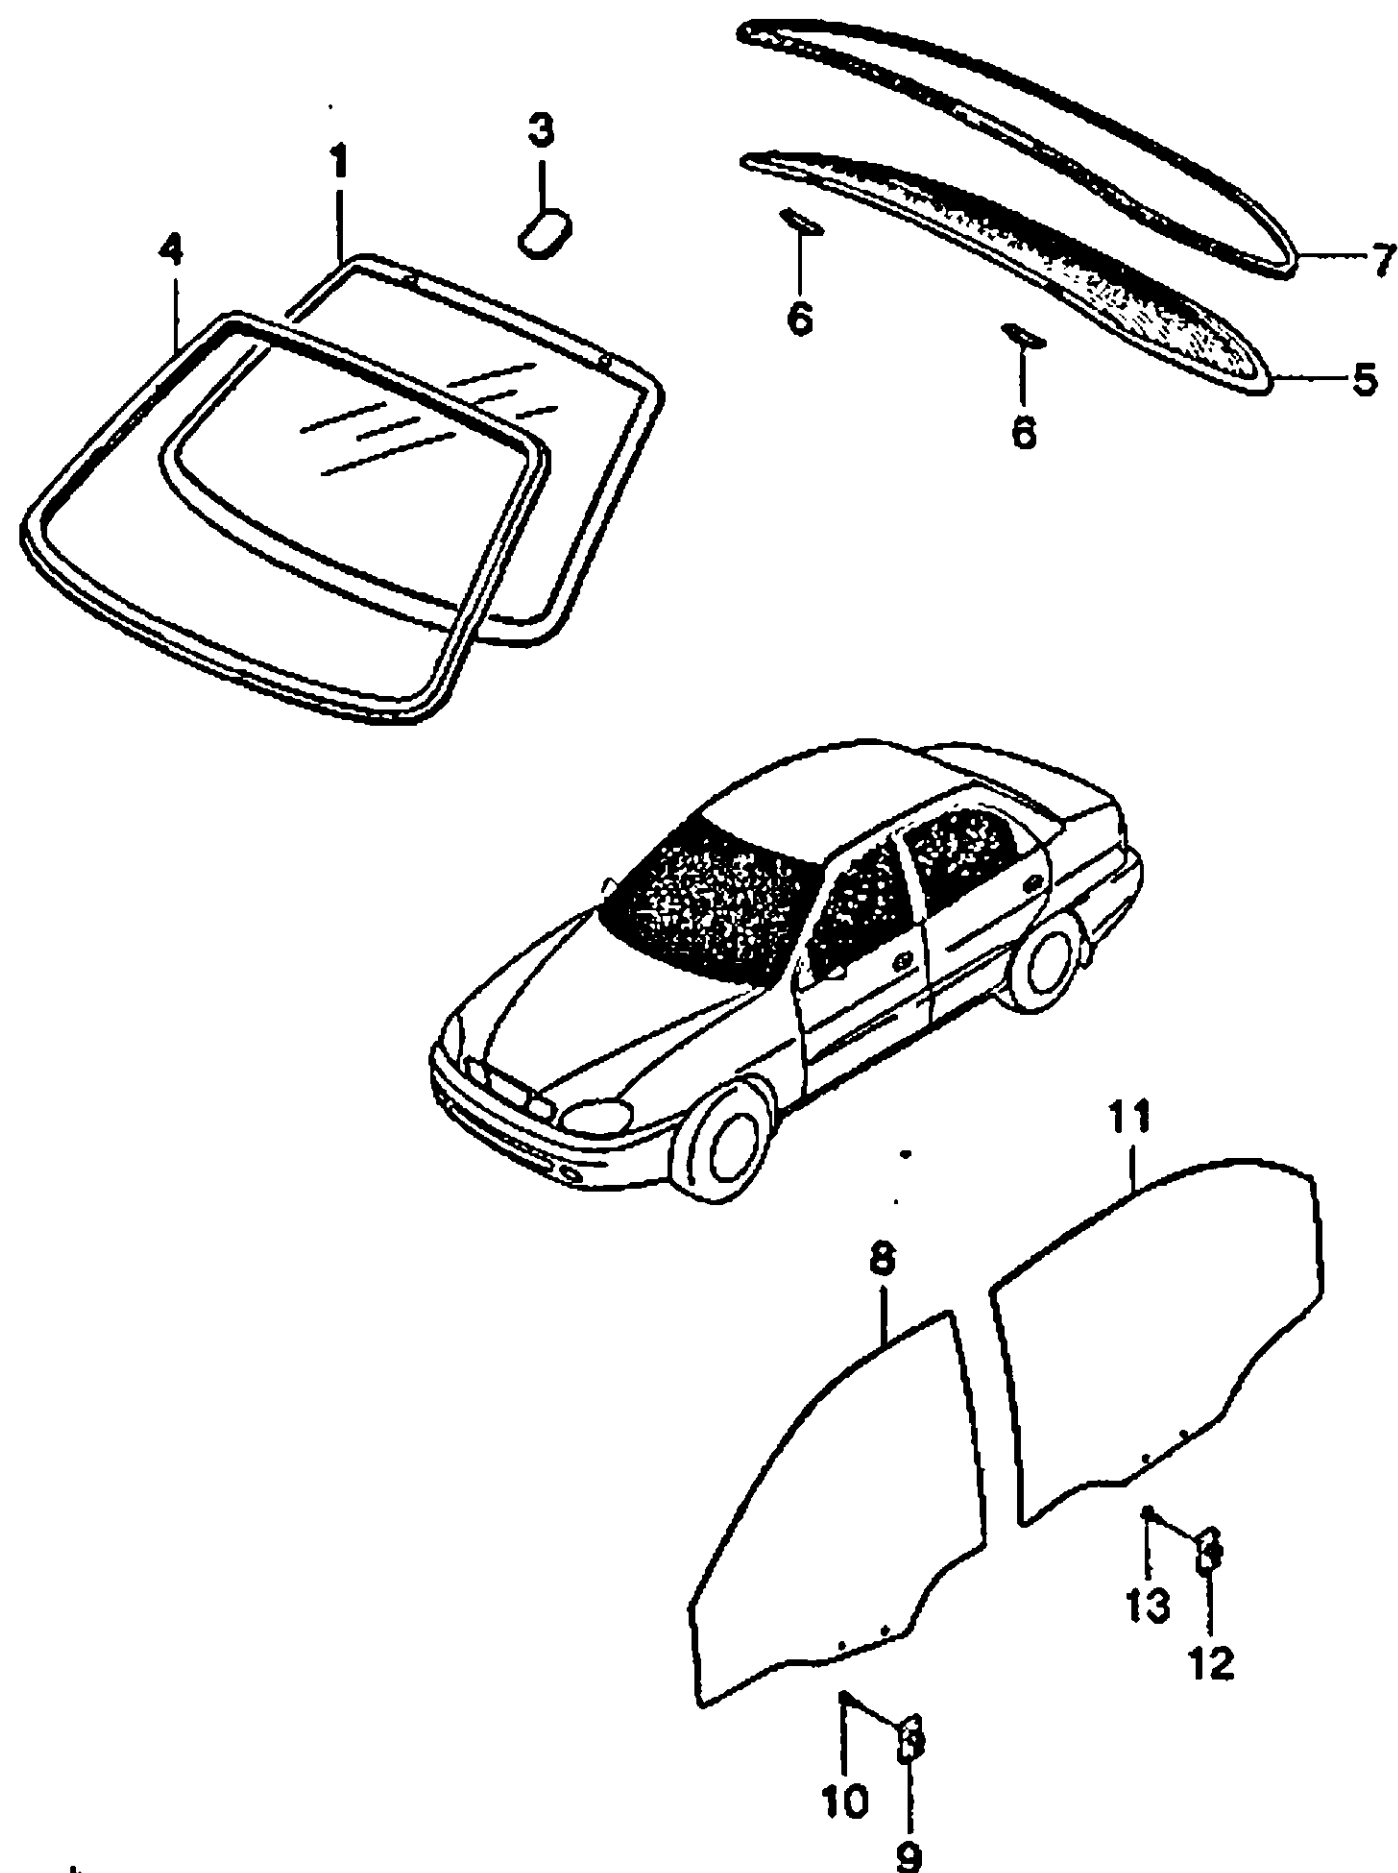


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[09]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA				
	09148-06002	. . . B . . . S S S									4				
	[10]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03140-63163	. . . B . . . S S S									4				
	[11]	(E)GLASS-RR DOOR WINDOW (D)GLAS									(F)GLACE-FENETRE ARRIERE (S)VIDRIO-VENTANA TRASERA				
	96304138	. . . B . . . S . .						&A22			LH 1				
	96304140	. . . B . . . S . .						&A22			RH 1				
	96304142	. . . B . . . O S S						&A01			LH 1				
	96304144	. . . B . . . O S S						&A01			RH 1				
	[12]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA				
	09148-06002	. . . B . . . S S S									4				
	[13]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03140-63163	. . . B . . . S S S									4				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

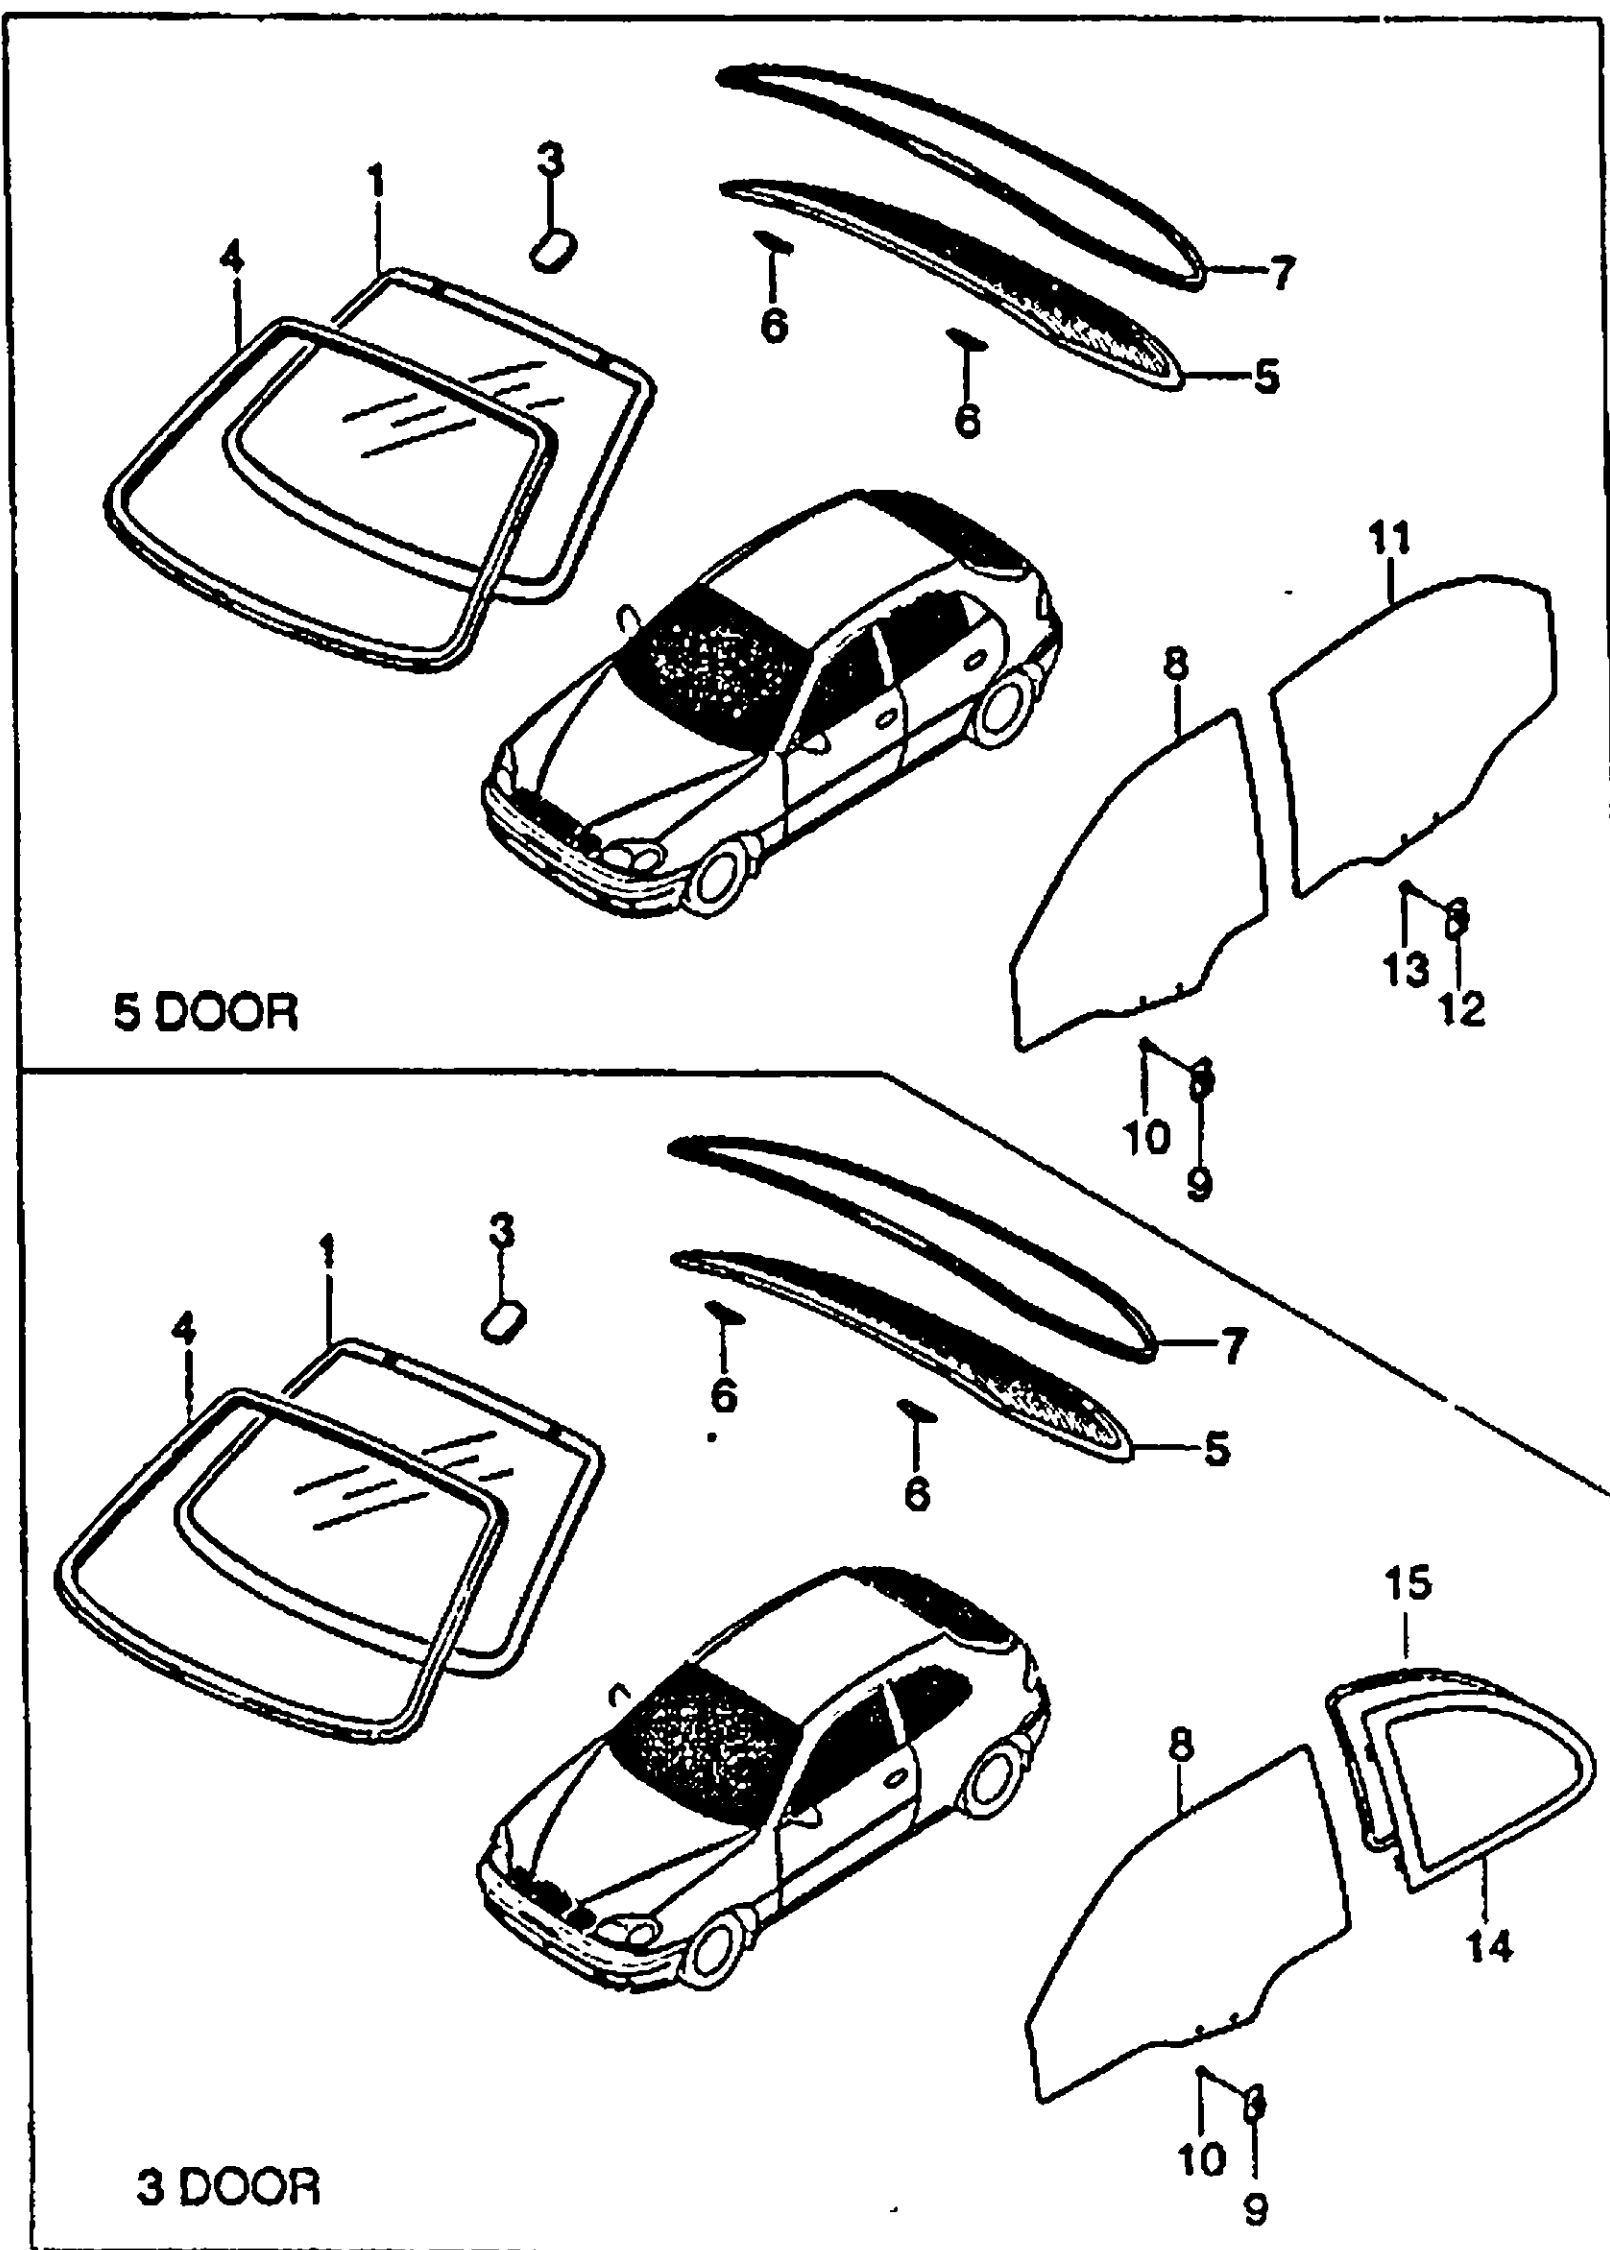


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)GLASS A-WINDSHIELD (D)GLAS,WINDSCHUTZSCHEIBE									(F)GLACE-PARE-BRISE (S)VIDRIO-PARABRISAS				
	96303213	. . . B B S . .					&A22			1	970526				
O	96256902	. . . B B S . .					&A22			1	970526				
	96306108	. . . B B O . S					&A01			1					
	[03]	(E)PLATE-CARRIER (D)PLATTE									(F)PLAQUE (S)PLACA				
	90126071	. . . B B S . S								1					
	[04]	(E)MOLDING-WINDSHIELD (D)PREßTEIL WINDSCHUTZSCHEIB									(F)MOULURE-PARE-BRISE (S)MOLOURA-PARABRISAS				
	96240757	. . . B B S . S								1					
	[05]	(E)GLASS A-TAILGATE (D)GLAS,HINTERTEIL									(F)GLACE-HAYON (S)VIDRIO-COMPUERTA DE COLA				
	96306141	. . . B B S . .					&A22-T45			1			K1		
	96306144	. . . B B O . S					&A01-T45			1			K4		
	96224320	. . . B B . . O					&A01&T45			1			K8		
	[06]	(E)STOPPER-GLASS, JPPER (D)STÖPSEL									(F)ARRETOIR OU BOUCHON (S)TAPON				
	96216138	. . . B B S . S								2					
	[07]	(E)MOLDING-TAILGATE GLASS (D)PREßTEIL GLAS,HINTERTEIL									(F)MOULURE-GLACE,HAYON (S)MOLOURA-VIDRIO				
	96233056	. . . B B S . S								1					
	[08]	(E)GLASS-FRT DOOR WINDOW (D)GLAS									(F)GLACE-FENETRE AVANT (S)VIDRIO-VENTANA DELANTERA				
	96304049	. . . B . S . .					&A22			LH 1					
	96304051	. . . B . S . .					&A22			RH 1					
	96304053	. . . B . O . S					&A01			LH 1					
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

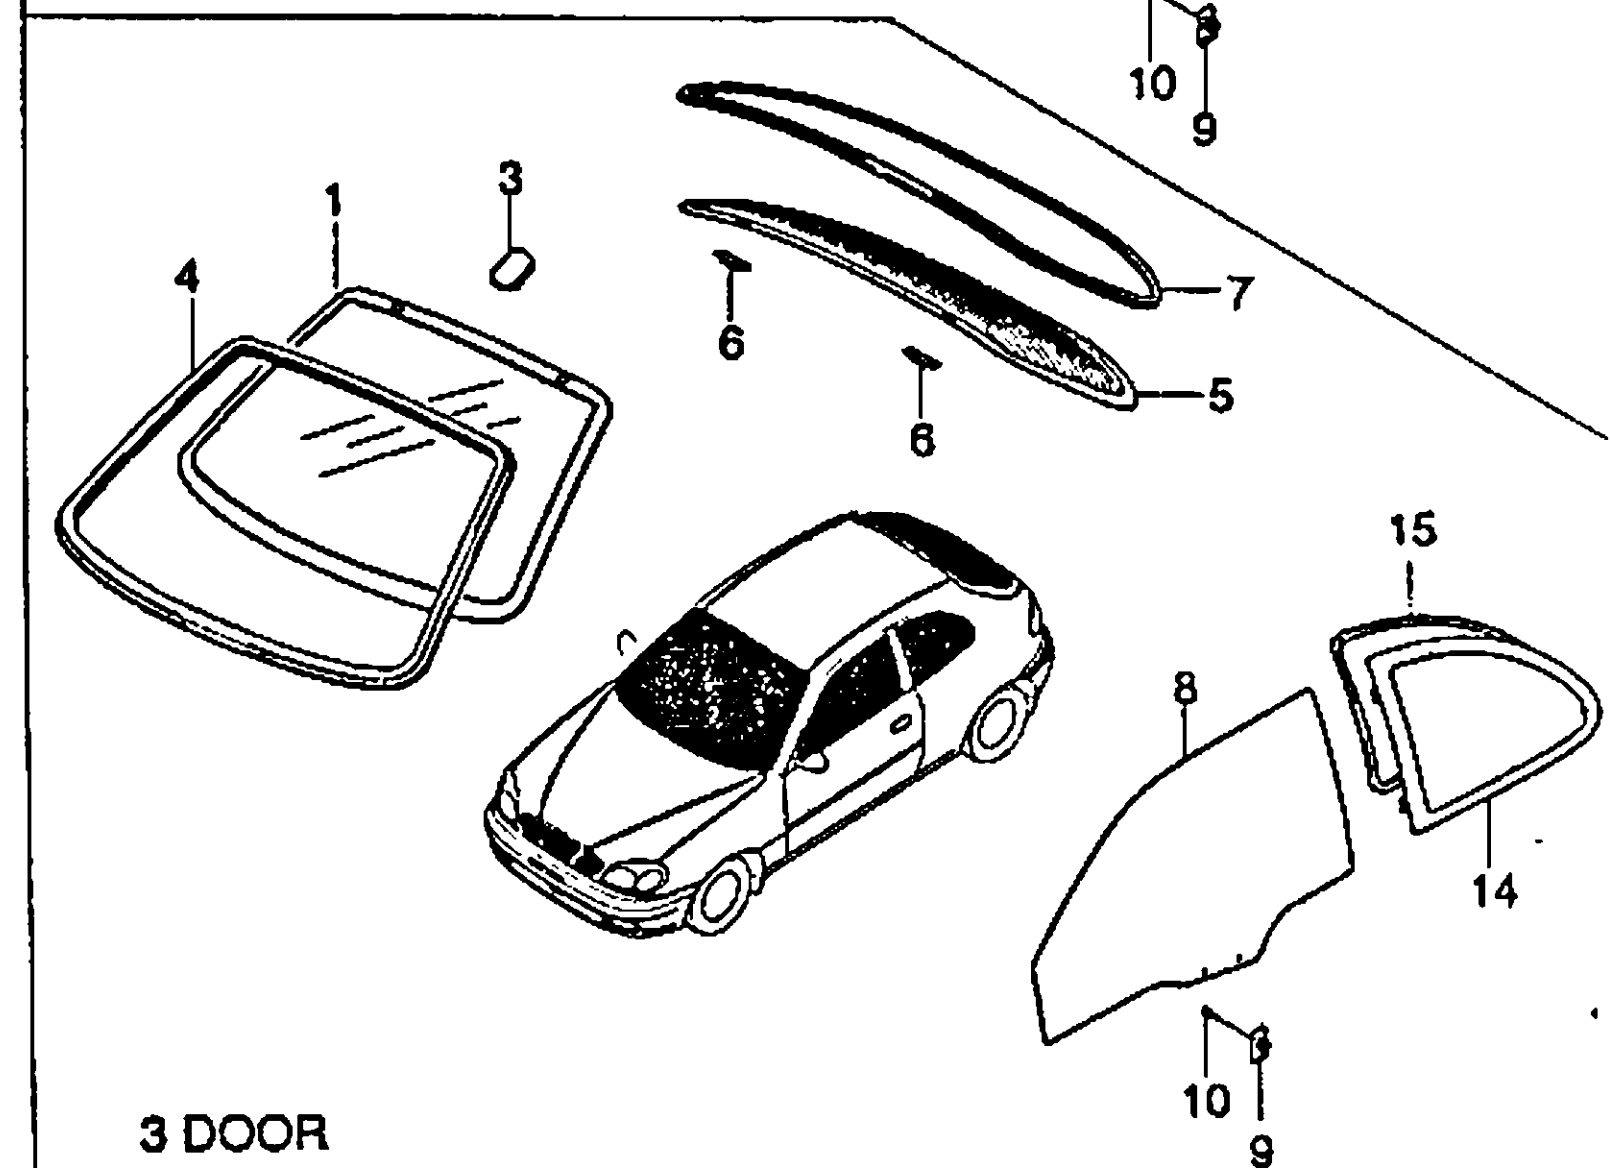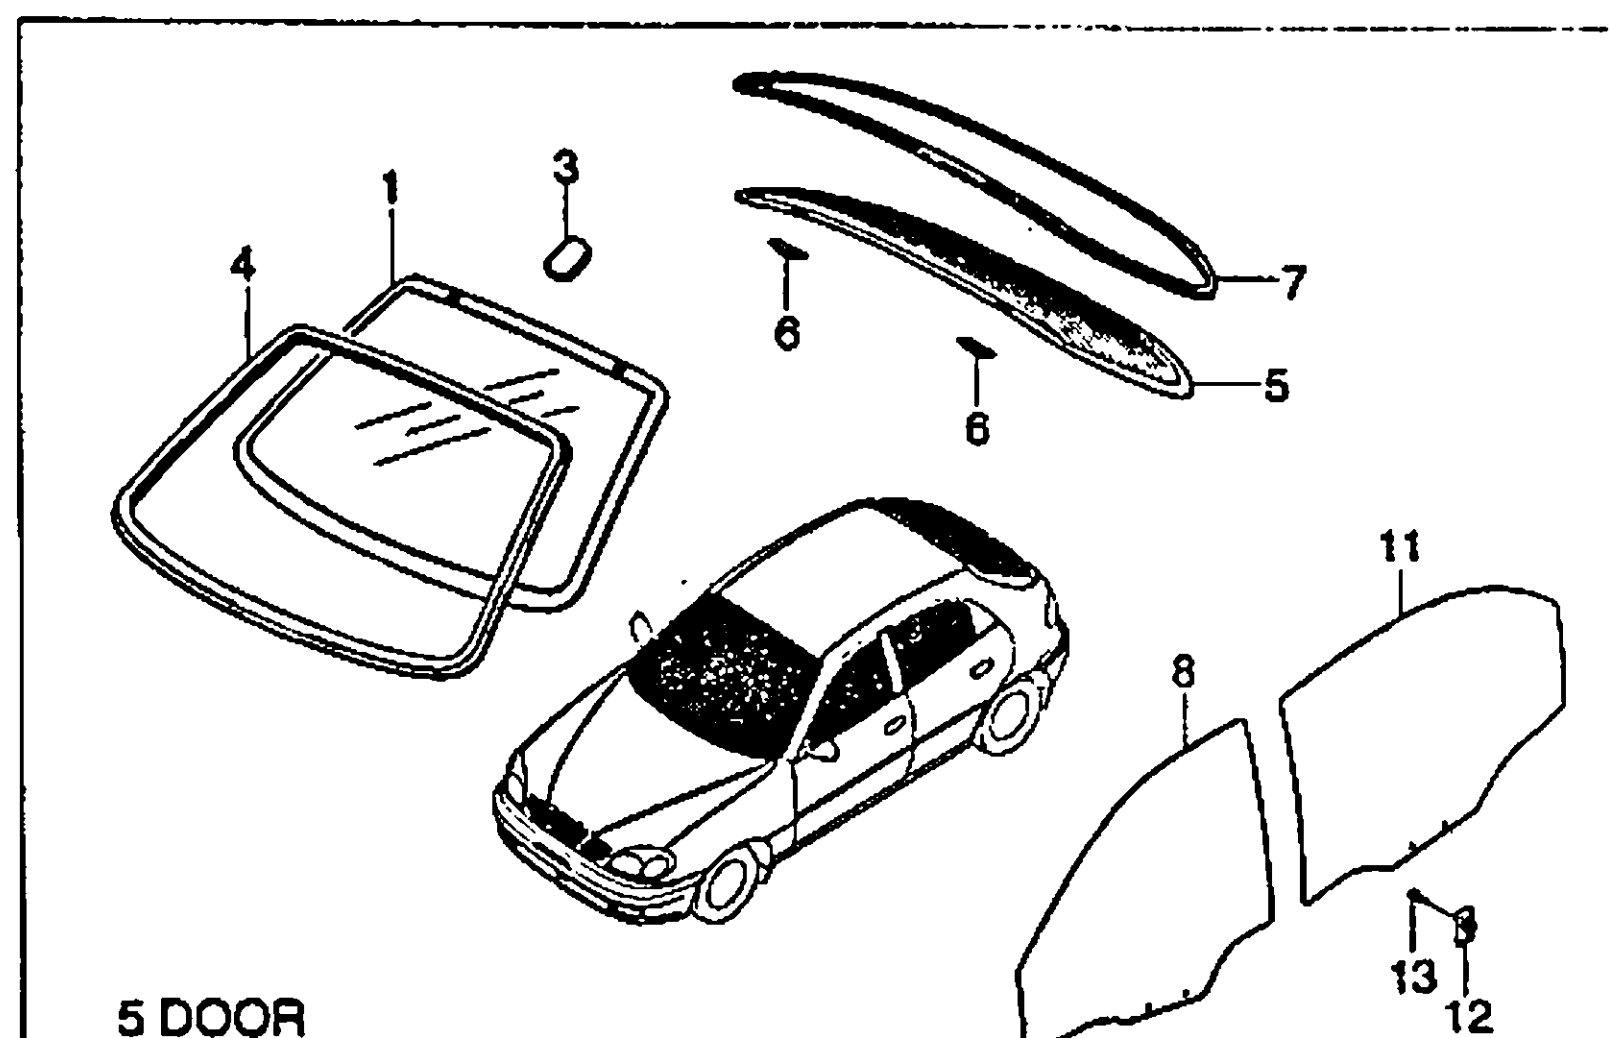



KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	96304055	.	.	.	B	.	O	.	S	&A01	RH	1			
	96304048	.	.	.	.	B	S	.	.	&A22	LH	1			
	96304050	.	.	.	.	B	S	.	.	&A22	RH	1			
	96304052	.	.	.	.	B	O	.	S	&A01	LH	1			
	96304054	.	.	.	.	B	O	.	S	&A01	RH	1			
	[09]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA				
	09148-06002	.	.	.	B	B	S	.	S			4			
	[10]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03140-63163	.	.	.	B	B	S	.	S			4			
	[11]	(E)GLASS-RR DOOR WINDOW (D)GLAS									(F)GLACE-FENETRE ARRIERE (S)VIDRIO-VENTANA TRASERA				
	96304138	.	.	.	.	B	S	.	.	&A22	LH	1			
	96304140	.	.	.	.	B	S	.	.	&A22	RH	1			
	96304142	.	.	.	.	B	O	.	S	&A01	LH	1			
	96304144	.	.	.	.	B	O	.	S	&A01	RH	1			
	[12]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA				
	09148-06002	.	.	.	.	B	S	.	S			4			
	[13]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03140-63163	.	.	.	.	B	S	.	S			4			
	[14]	(E)GLASS A-HINGED WINDOW (D)GLAS,KIPPFENSTER									(F)GLACE-FENETRE (S)VIDRIO-VENTANABISAGRA				
	96234660	.	.	.	B	.	S	.	.	&A22	LH	1			
	96234661	.	.	.	B	.	S	.	.	&A22	RH	1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

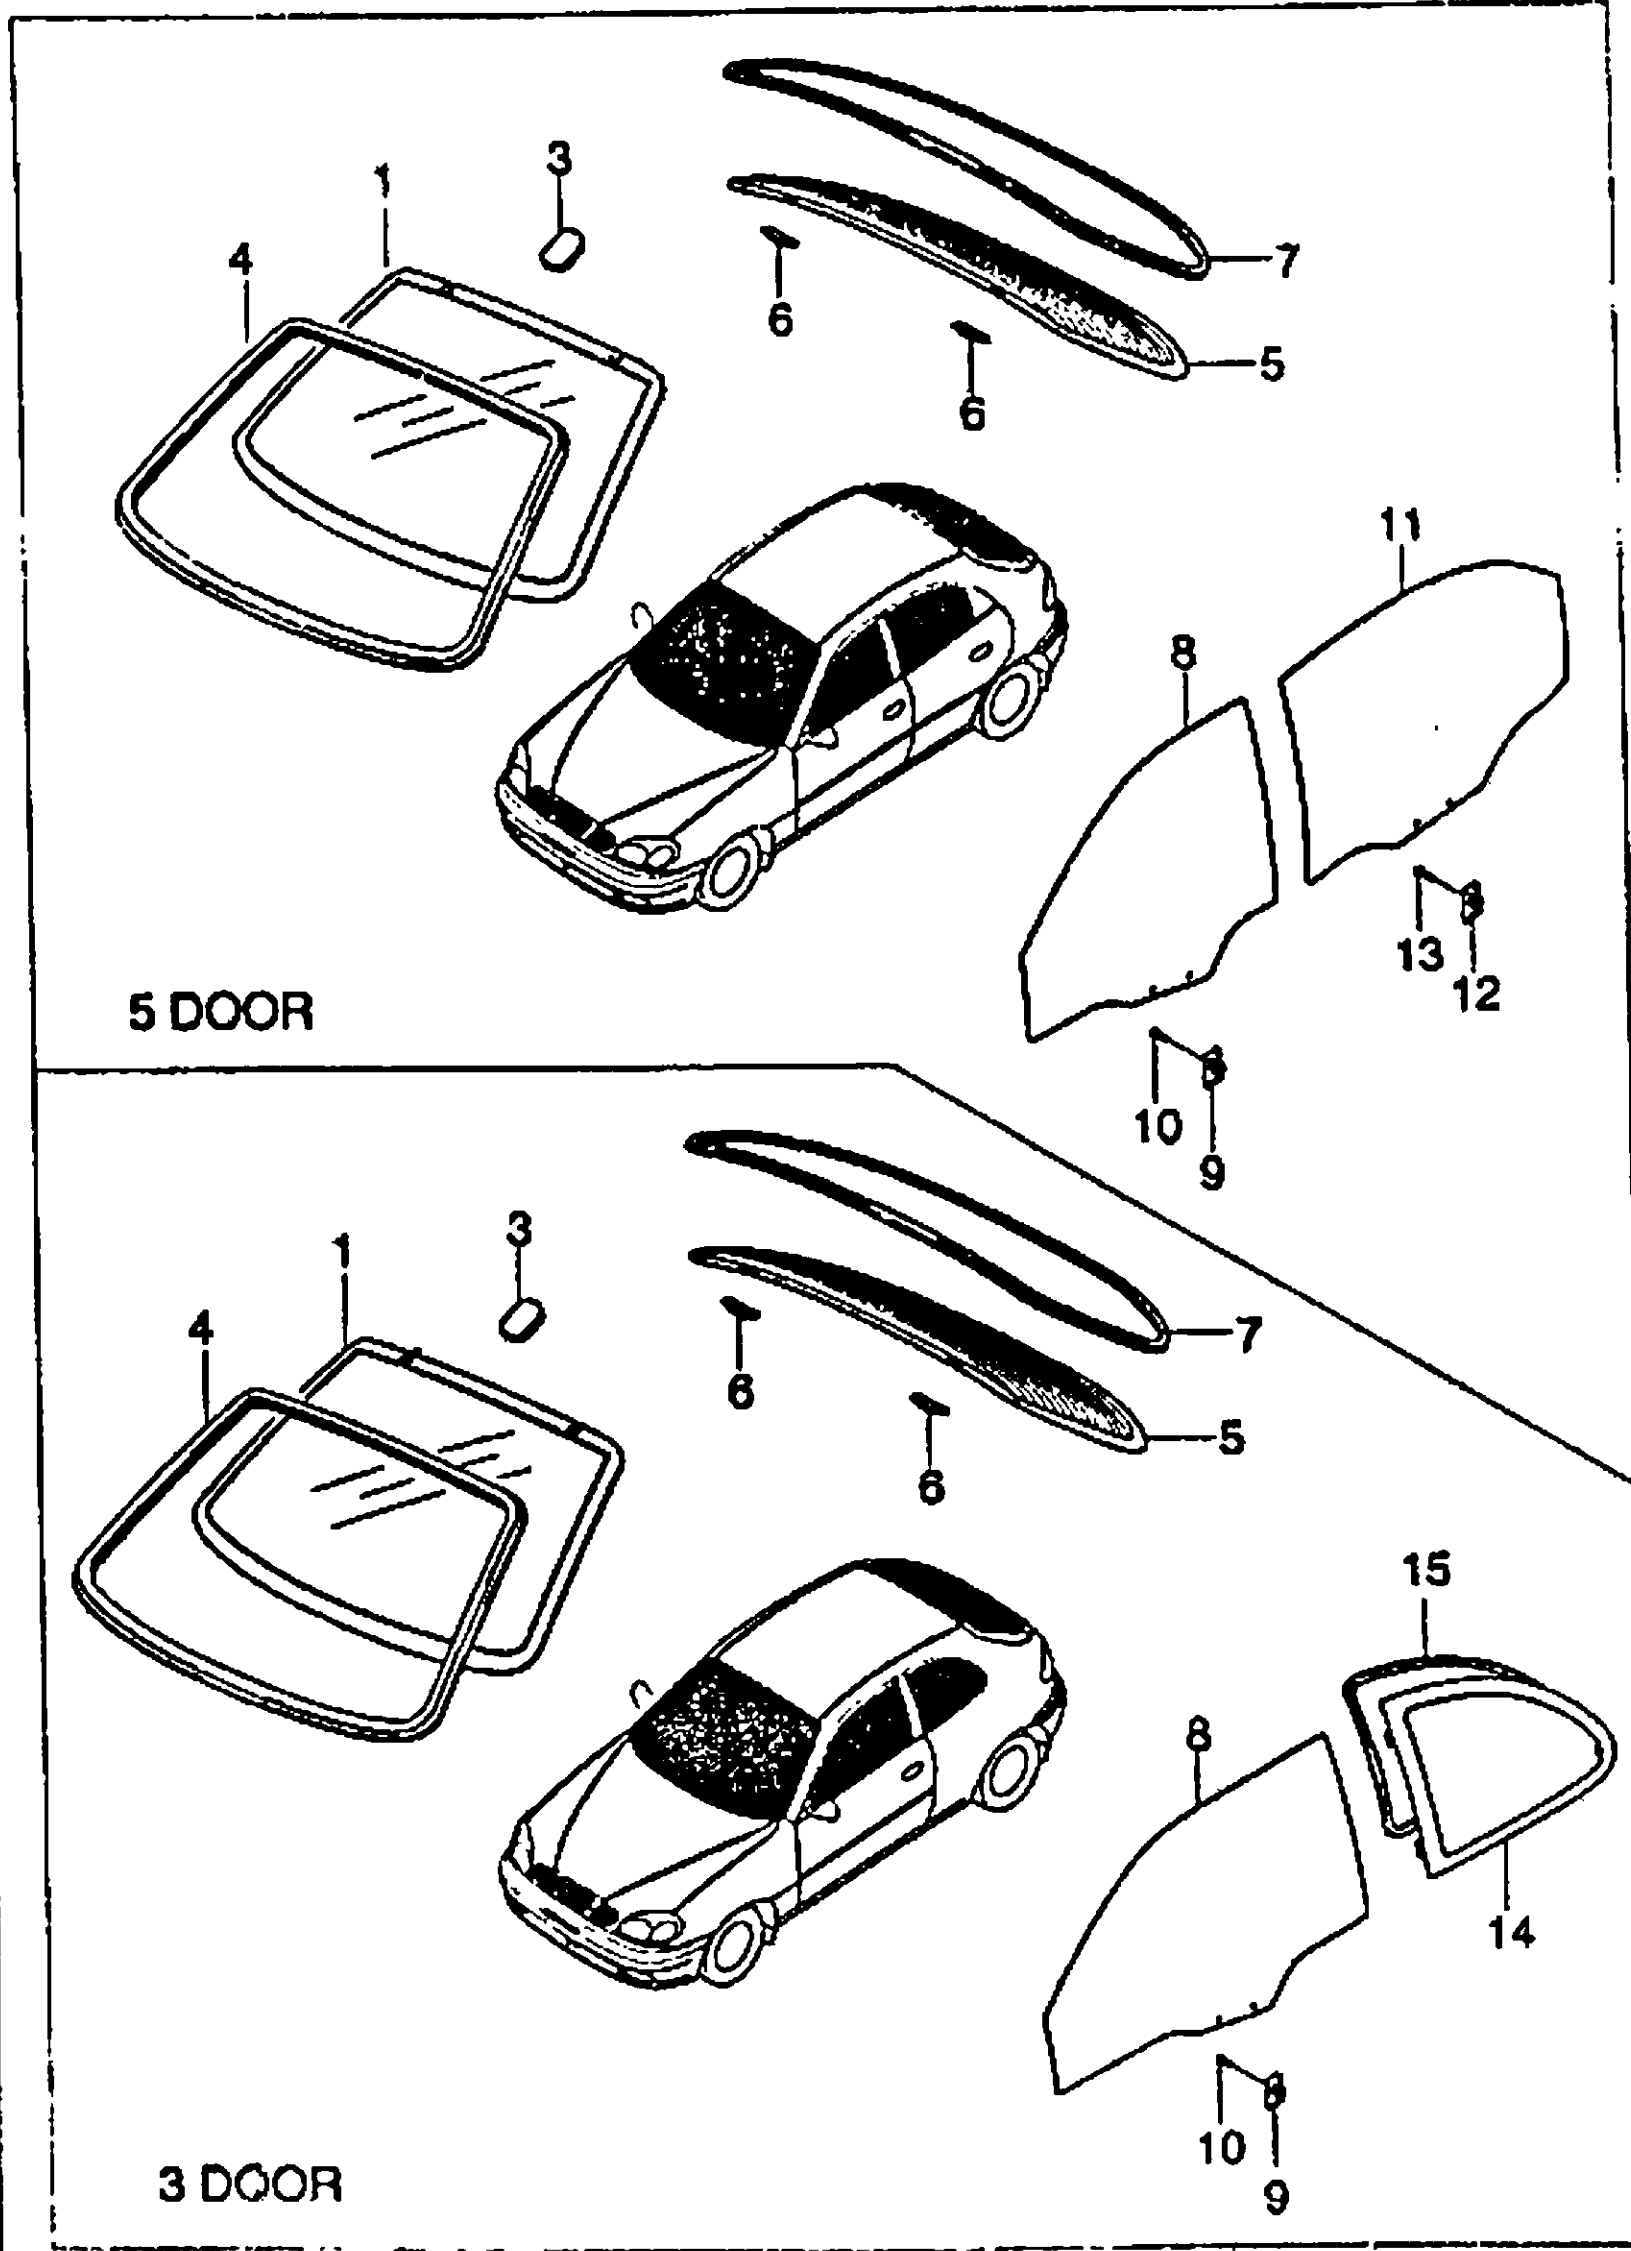



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	96234662	.	.	.	B	.	O	.	S	&A01			LH 1			
	96234663	.	.	.	B	.	O	.	S	&A01			RH 1			
	[15]	(E)WEATHERSTRIP-HINGED WDO (D)DICHTUNGSLEISTE														
	96303243	.	.	.	B	.	S	.	S				2			

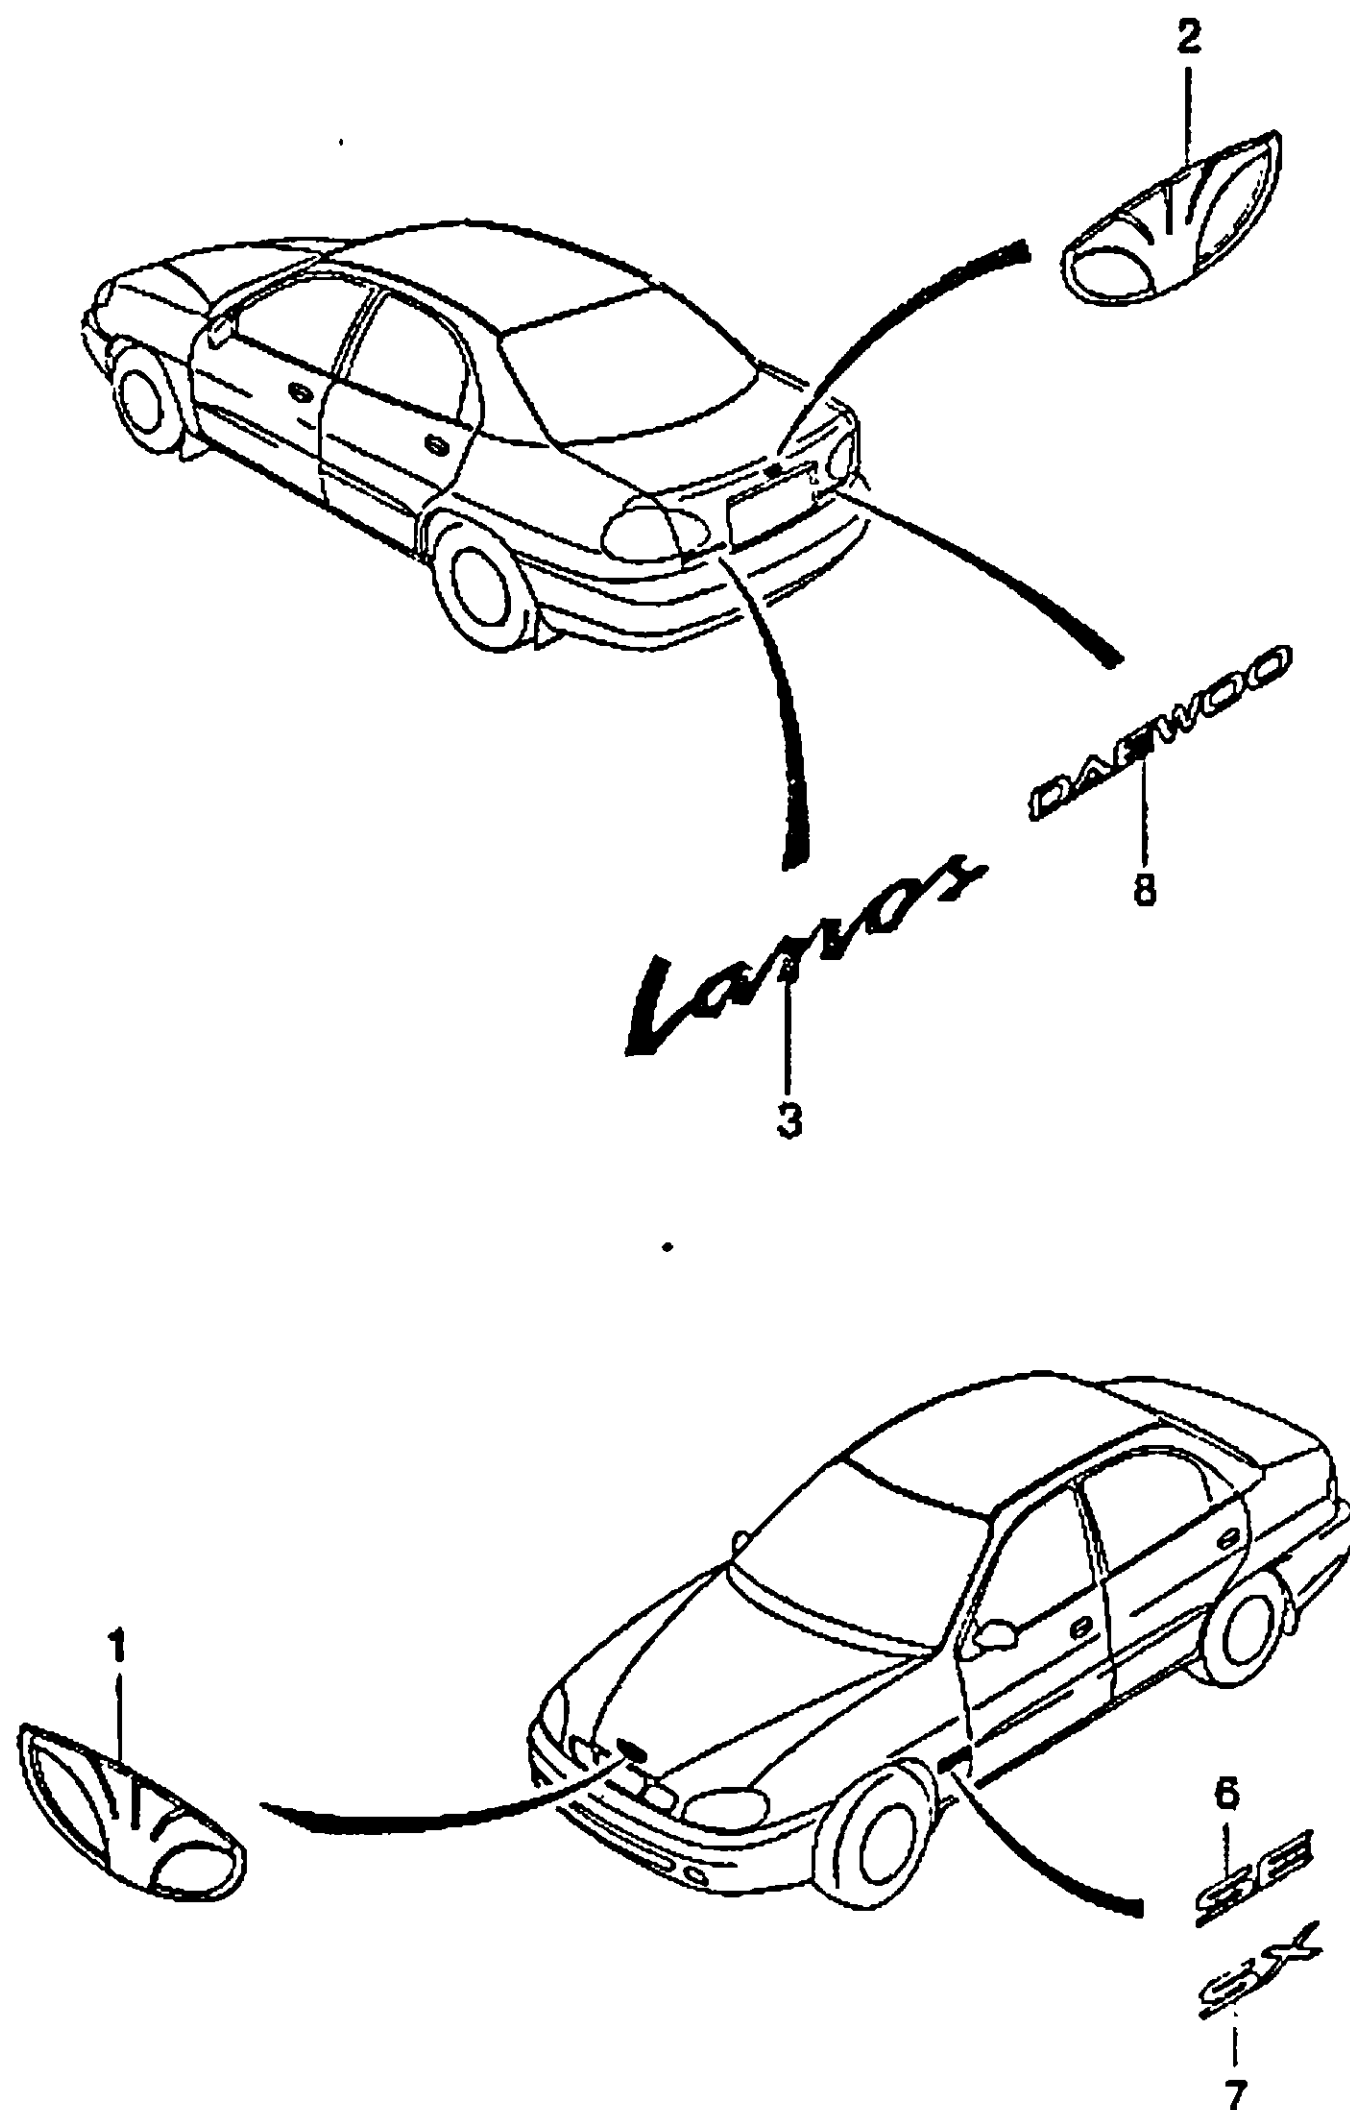



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E) EMBLEM-HOOD (D) ETIKETT									(F) EMBLEME (S) EMBLEMA					
	96303492	.	.	B	B	B	S	S	S		1					
	[02]	(E) EMBLEM A (D) ETIKETT									(F) EMBLEME (S) EMBLEMA					
	96303493	.	.	B	.	.	S	S	S		1		TRUNK LID			
	96243520	.	.	.	B	B	S	.	S		1		TAILGATE			
	[03]	(E) LETTERING A-LANOS (D) BESCHRIFTUNG-'LANOS'									(F) LETTRES-'LANOS' (S) LETRAS-'LANOS'					
	96226350	.	.	B	.	.	S	S	S		1		TRUNK LID			
	96245521	.	.	.	B	B	S	.	S		1		TAILGATE			
	[06]	(E) LETTERING A-SE (D) BESCHRIFTUNG-'SE'									(F) LETTRES-'SE' (S) LETRAS-'SE'					
	96250233	.	.	B	.	.	.	S	.		2					
	[07]	(E) LETTERING A-SX (D) BESCHRIFTUNG-'SX'									(F) LETTRES-'SX' (S) LETRAS-'SX'					
	96250234	.	.	B	B	B	.	.	S		2					
	[08]	(E) LETTERING A-DAEWOO (D) BESCHRIFTUNG-'DAEWOO'									(F) LETTRES-'DAEWOO' (S) LETRAS-'DAEWOO'					
	96303494	.	.	B	.	.	S	S	S		1					
	96249417	.	.	.	B	B	S	.	S		1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

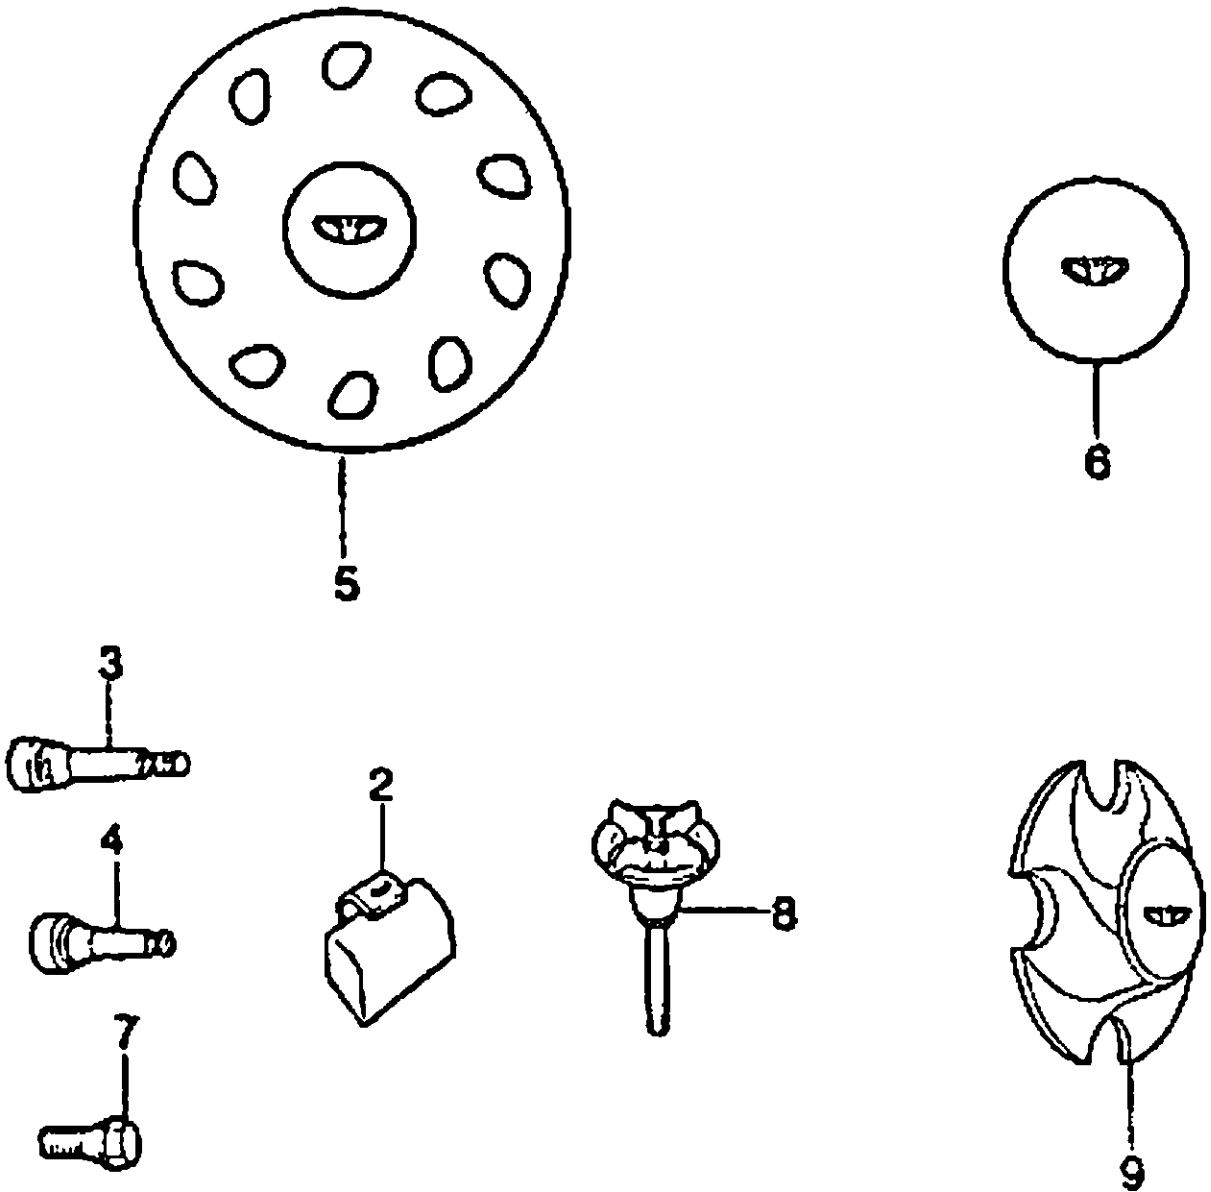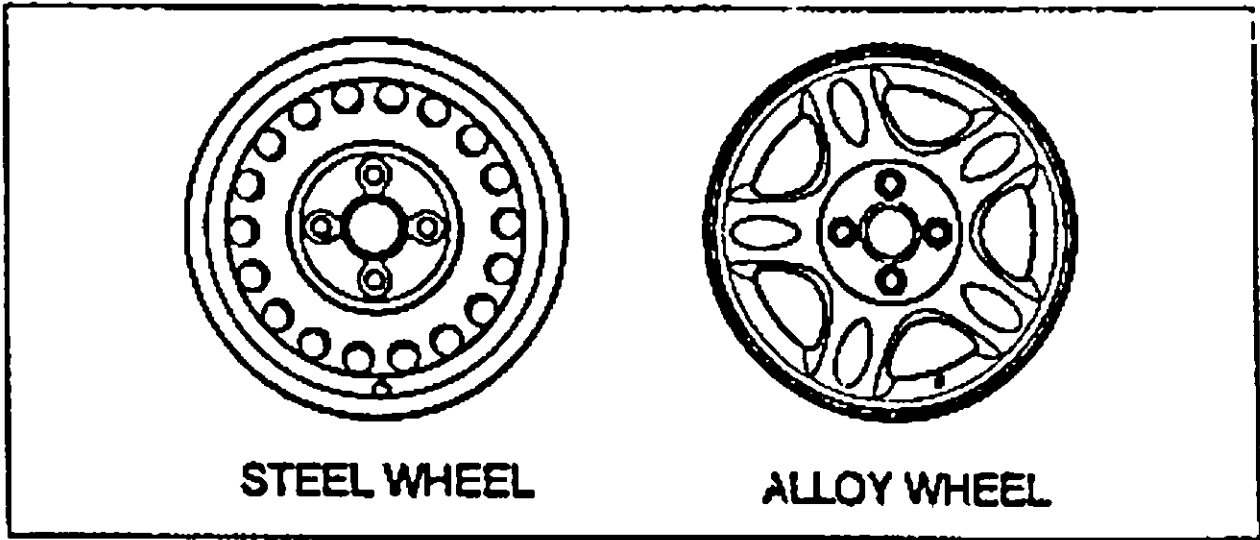


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)WHEEL A (D)RAD									(F)ROUE (S)RUEDA					
	96162637	.	.	B	B	B	S	.	.	&N76&W9U	5		5 JX13	WH		
	96162636	.	.	B	B	B	O	S	S	&N76&W9M	5		5 JX13	HF		
	90304218	.	.	B	B	B	.	.	O	&PX8	5		5 1/2JX14	HY		
	96303778	.	.	B	B	B	.	.	O	&PG4	5		5 1/2JX14	AL		
	[02]	(E)WEIGHT-BALANCE (D)GEWICHT/AUSGLEICH									(F)POIDS-EQUILIBRAGE (S)PESO-BALANCE					
	96209681	.	.	B	B	B	S	S	S	&N76/PX8	1		5G			
	96209715	.	.	B	B	B	S	S	S	&N76/PX8	1		10G			
	96209716	.	.	B	B	B	S	S	S	&N76/PX8	1		15G			
	96209717	.	.	B	B	B	S	S	S	&N76/PX8	1		20G			
	96209718	.	.	B	B	B	S	S	S	&N76/PX8	1		25G			
	96209719	.	.	B	B	B	S	S	S	&N76/PX8	1		30G			
	96209720	.	.	B	B	B	S	S	S	&N76/PX8	1		35G			
	96209721	.	.	B	B	B	S	S	S	&N76/PX8	1		40G			
	96209722	.	.	B	B	B	S	S	S	&N76/PX8	1		45G			
	96209723	.	.	B	B	B	S	S	S	&N76/PX8	1		50G			
	96209724	.	.	B	B	B	S	S	S	&N76/PX8	1		55G			
	96209725	.	.	B	B	B	S	S	S	&N76/PX8	1		60G			
	96209679	.	.	B	B	B	.	.	O	&PG4	1		5G			
	96209680	.	.	B	B	B	.	.	O	&PG4	1		10G			
	96209682	.	.	B	B	B	.	.	O	&PG4	1		15G			
	96209683	.	.	B	B	B	.	.	O	&PG4	1		20G			
	96209684	.	.	B	B	B	.	.	O	&PG4	1		25G			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

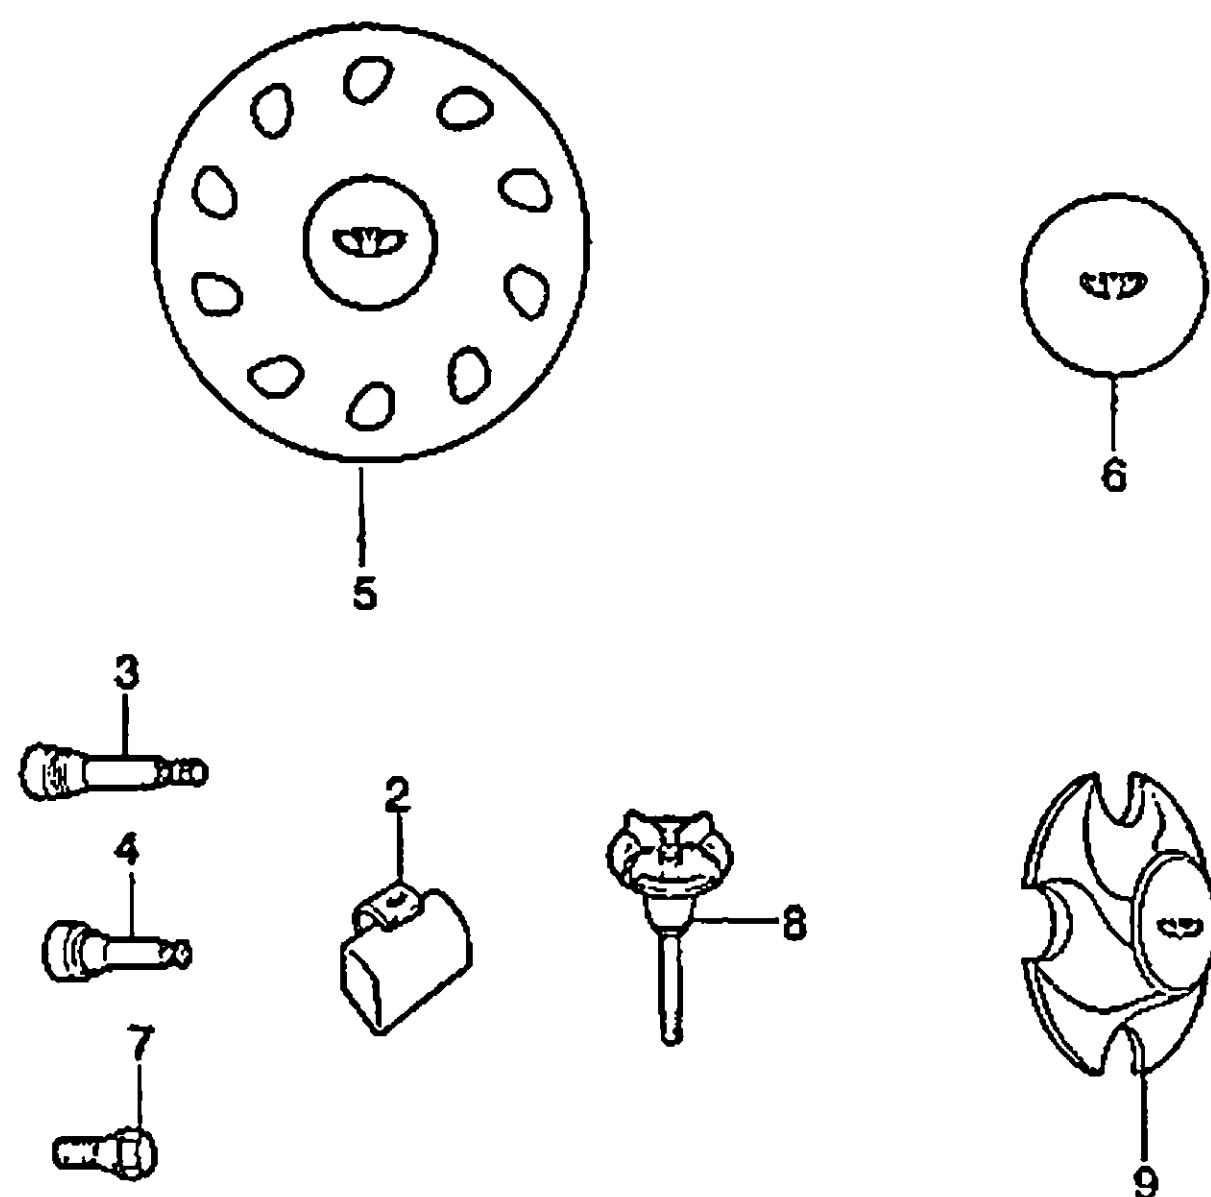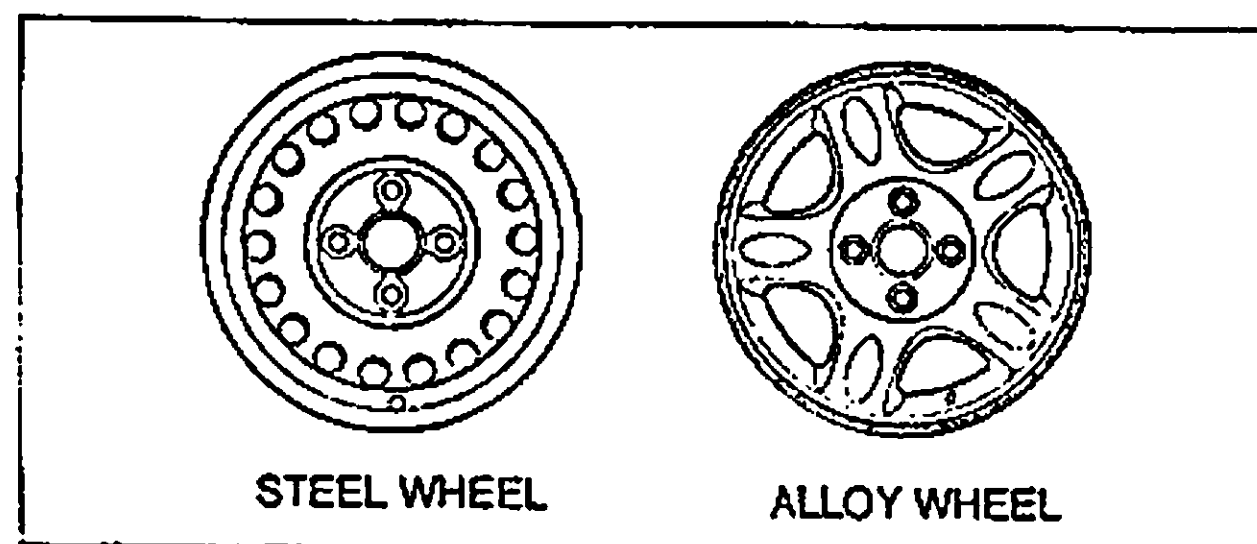


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S E
	96209685	.	.	B	B	B	.	.	O	&PG4	1		30G		
	96209686	.	.	B	B	B	.	.	O	&PG4	1		35G		
	96209687	.	.	B	B	B	.	.	O	&PG4	1		40G		
	96209688	.	.	B	B	B	.	.	O	&PG4	1		45G		
	96209689	.	.	B	B	B	.	.	O	&PG4	1		50G		
	96209690	.	.	B	B	B	.	.	O	&PG4	1		55G		
	96209691	.	.	B	B	B	.	.	O	&PG4	1		60G		
	[03]			(E)VALVE-TIRE (D)VENTIL,REIFEN								(F)SOUPAPE-PNEU (S)VALVULA-LLANTA			
	90223915	.	.	B	B	B	O	S	S	&W9M	5				
	[04]			(E)VALVE-RUBBER (D)VENTIL,GUMMI								(F)SOUPAPE-CAOUTCHOUC (S)VALVULA-LLANTA			
	11049239	.	.	B	B	B	S	.	O	&W9U/PG4	5				
	[05]			(E)COVER A-WHEEL (D)DECKEL,RAD								(F)CARTER-ROUE (S)CUBIERTA-RUEDA			
	96304348	.	.	B	B	B	O	S	S	&P13	4		13 Inch	T3	
	96306210	.	.	B	B	B	.	.	O	&P11	4		14 Inch	T4	
	[06]			(E)CAP-WHEEL HUB (D)DECKEL,RADNABE								(F)CHAPEAU-MOYEU DE ROUE (S)TAPA-CUBO DE RUEDA			
	96304347	.	.	B	B	B	.	.	O	&PG4	4				
	[07]			(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO			
	09119-12001	.	.	B	B	B	S	S	S		16				
	[08]			(E)BOLT A-SPARE WHEEL WING (D)SCHRAUBE								(F)BOULON (S)PERNO			
	96167631	.	.	B	B	B	S	S	S	&N76	1				
	96167632	.	.	B	B	B	.	.	O	&PX8/PG4	1				
ENG(ENGINE)				T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

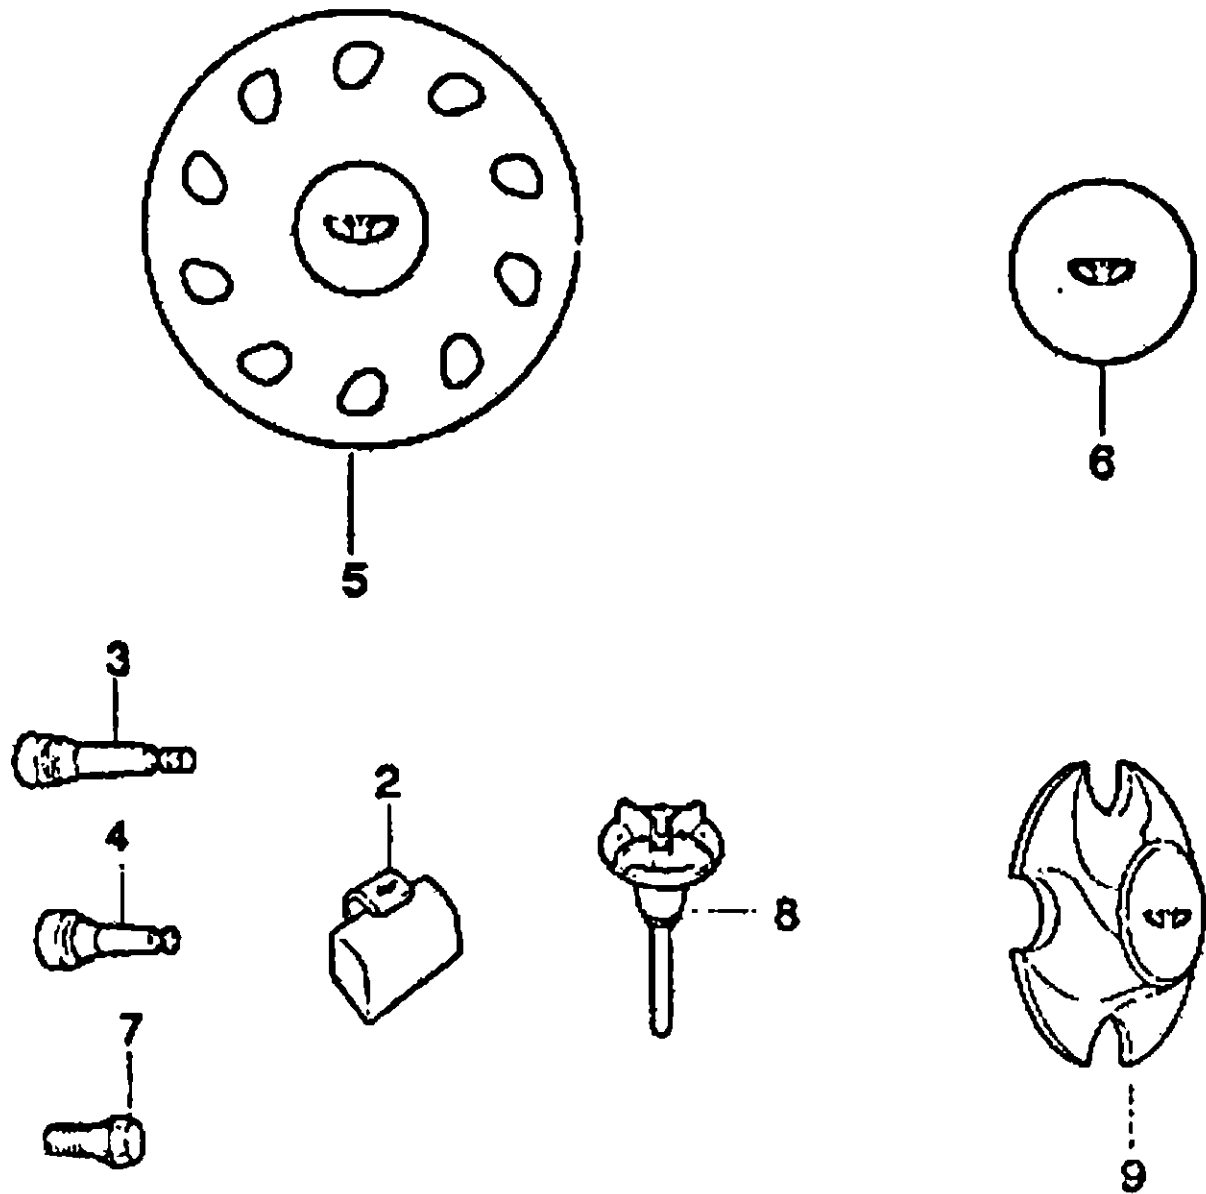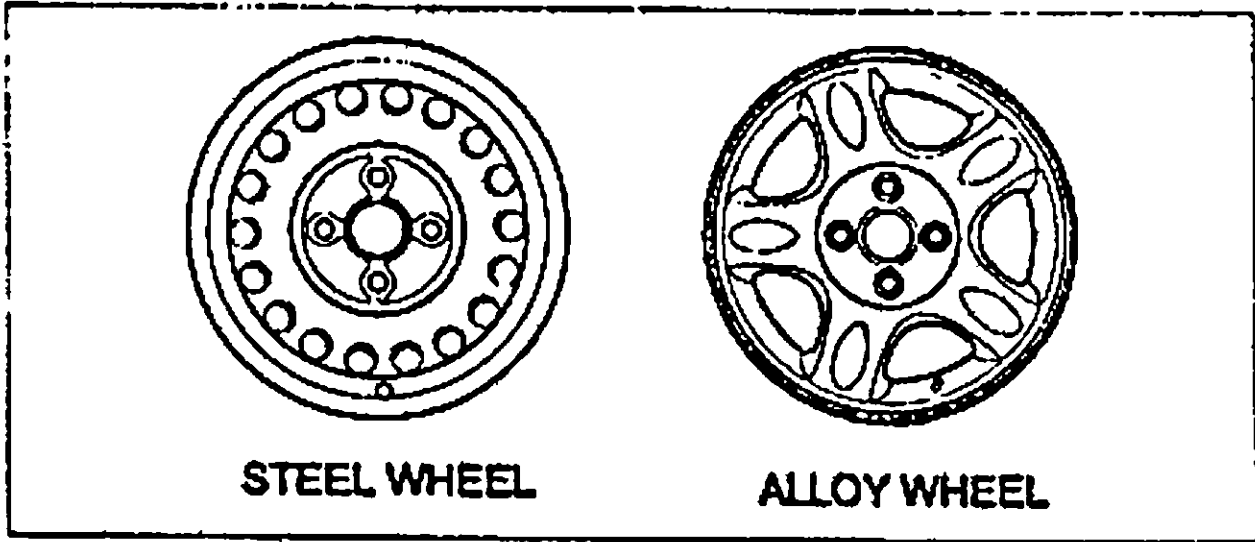

KEY NO.			PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S E								S X
	[09] 96304348	(E)CAP-HUB (D)DECKEL . .	B	B	B	S	.	.	&PA5		(F)CHAPEAU (S)TAPA 4					

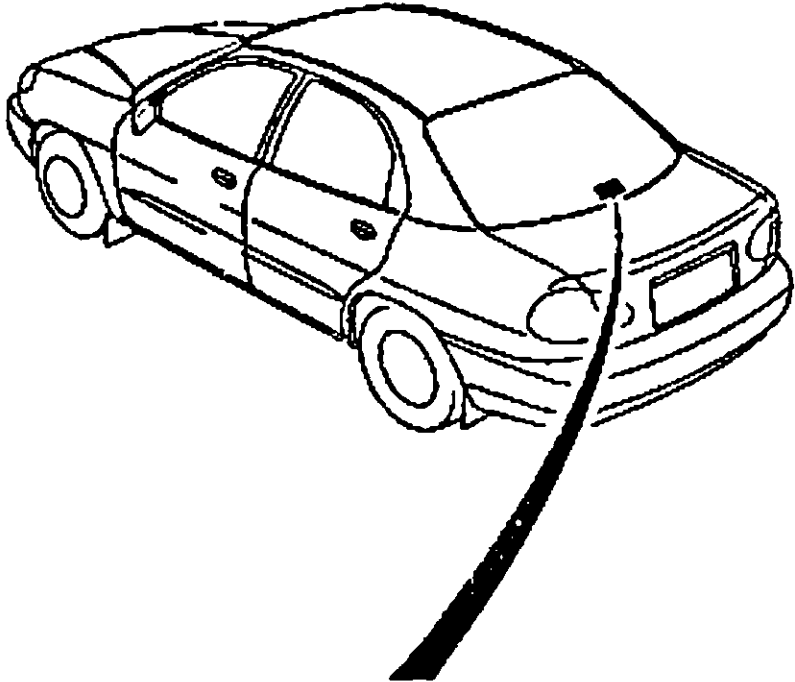


- 1- [ABS]
- 2- [AIR BAG]
- 3- [ABS-AIR BAG]
- 4- [DUAL AIR BAG]
- 5- [ABS-DUAL AIR BAG]

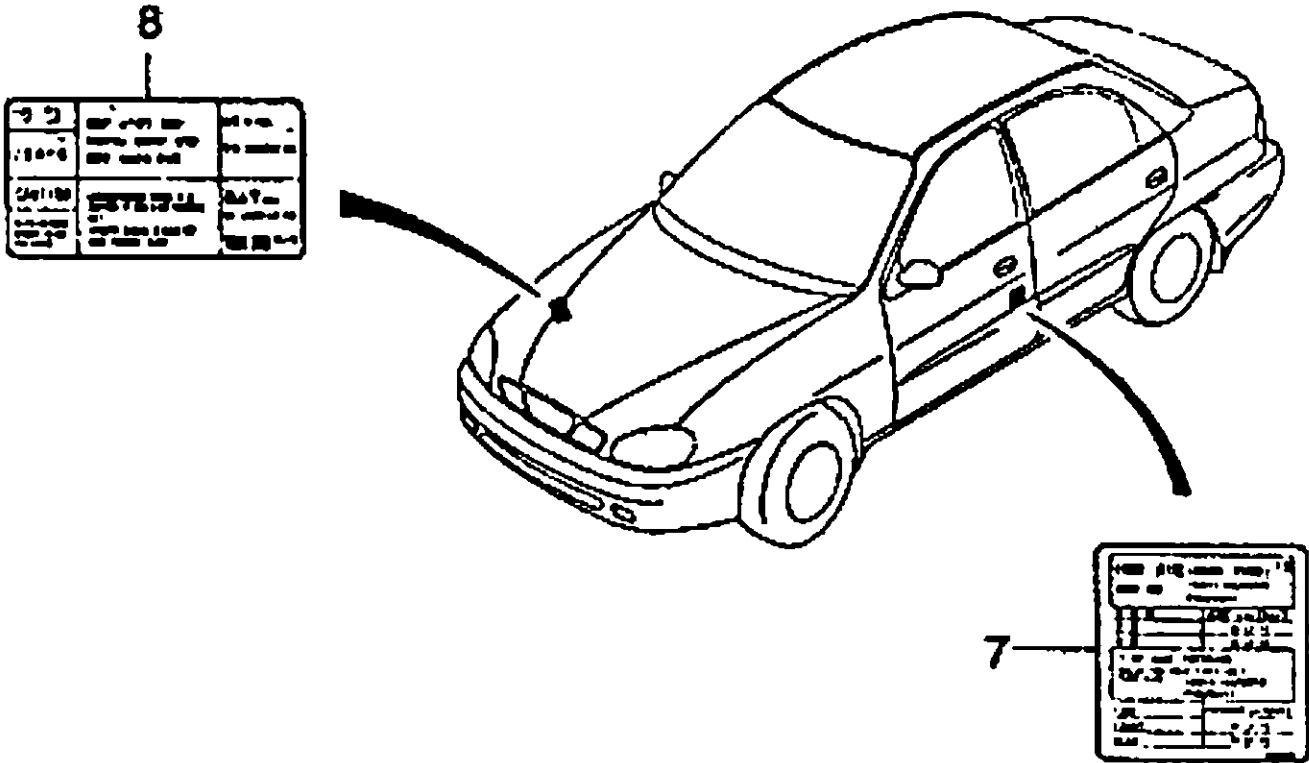


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S S								S E X
	[01]	(E)STICKER-ABS (D)ETIKETT-'ABS'									(F)VIGNETTE-'ABS' (S)ETIQUETA-'ABS'				
	96245663	.	.	B	B	B	.	O O	&JL9			1			
	[02]	(E)STICKER-AIR BAG (D)ETIKETT-'AIR BAG'									(F)VIGNETTE-'AIR BAG' (S)ETIQUETA-'AIR BAG'				
	96245664	.	.	B	B	B	.	O O	&AJ3			1			
	[03]	(E)STICKER-ABS & AIR BAG (D)ETIKETT-'ABS & AIR BAG'									(F)VIGNETTE-'ABS & AIR BAG' (S)ETIQUETA-'ABS & AIR BAG'				
	96245665	.	.	B	B	B	.	O O	&JL9&AJ3			1			
	[04]	(E)STICKER-DUAL AIR BAG (D)ETIKETT-'DUAL AIR BAG'									(F)VIGNETTE-'DUAL AIR BAG' (S)ETIQUETA-'DUAL AIR BAG'				
	96245666	.	.	B	B	B	.	O O	&ABF			1			
	[05]	(E)STICKER-ABS&DUAL AIR BAG (D)ETIKETT-'ABS&DUAL AIR BAG'									(F)VIGNETTE-'ABS&DUAL AIR BA (S)ETIQUETA-'ABS&DUAL AIR BA				
	96245667	.	.	B	B	B	.	O O	&JL9&ABF			1			
	[07]	(E)STICKER-TIRE PRESSURE (D)ETIKETT									(F)VIGNETTE (S)ETIQUETA				
	96304349	.	.	B	B	B	S	S	.	&QTF			1		
	96304466	.	.	B	B	B	O	O	S	&QTJ/QUS			1		
	[08]	(E)STICKER-AIR CONDITIONING (D)ETIKETT									(F)VIGNETTE (S)ETIQUETA				
	96242973	.	.	B	B	B	O	O	O	&C60			1		
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

6710 GRILLE


5B14

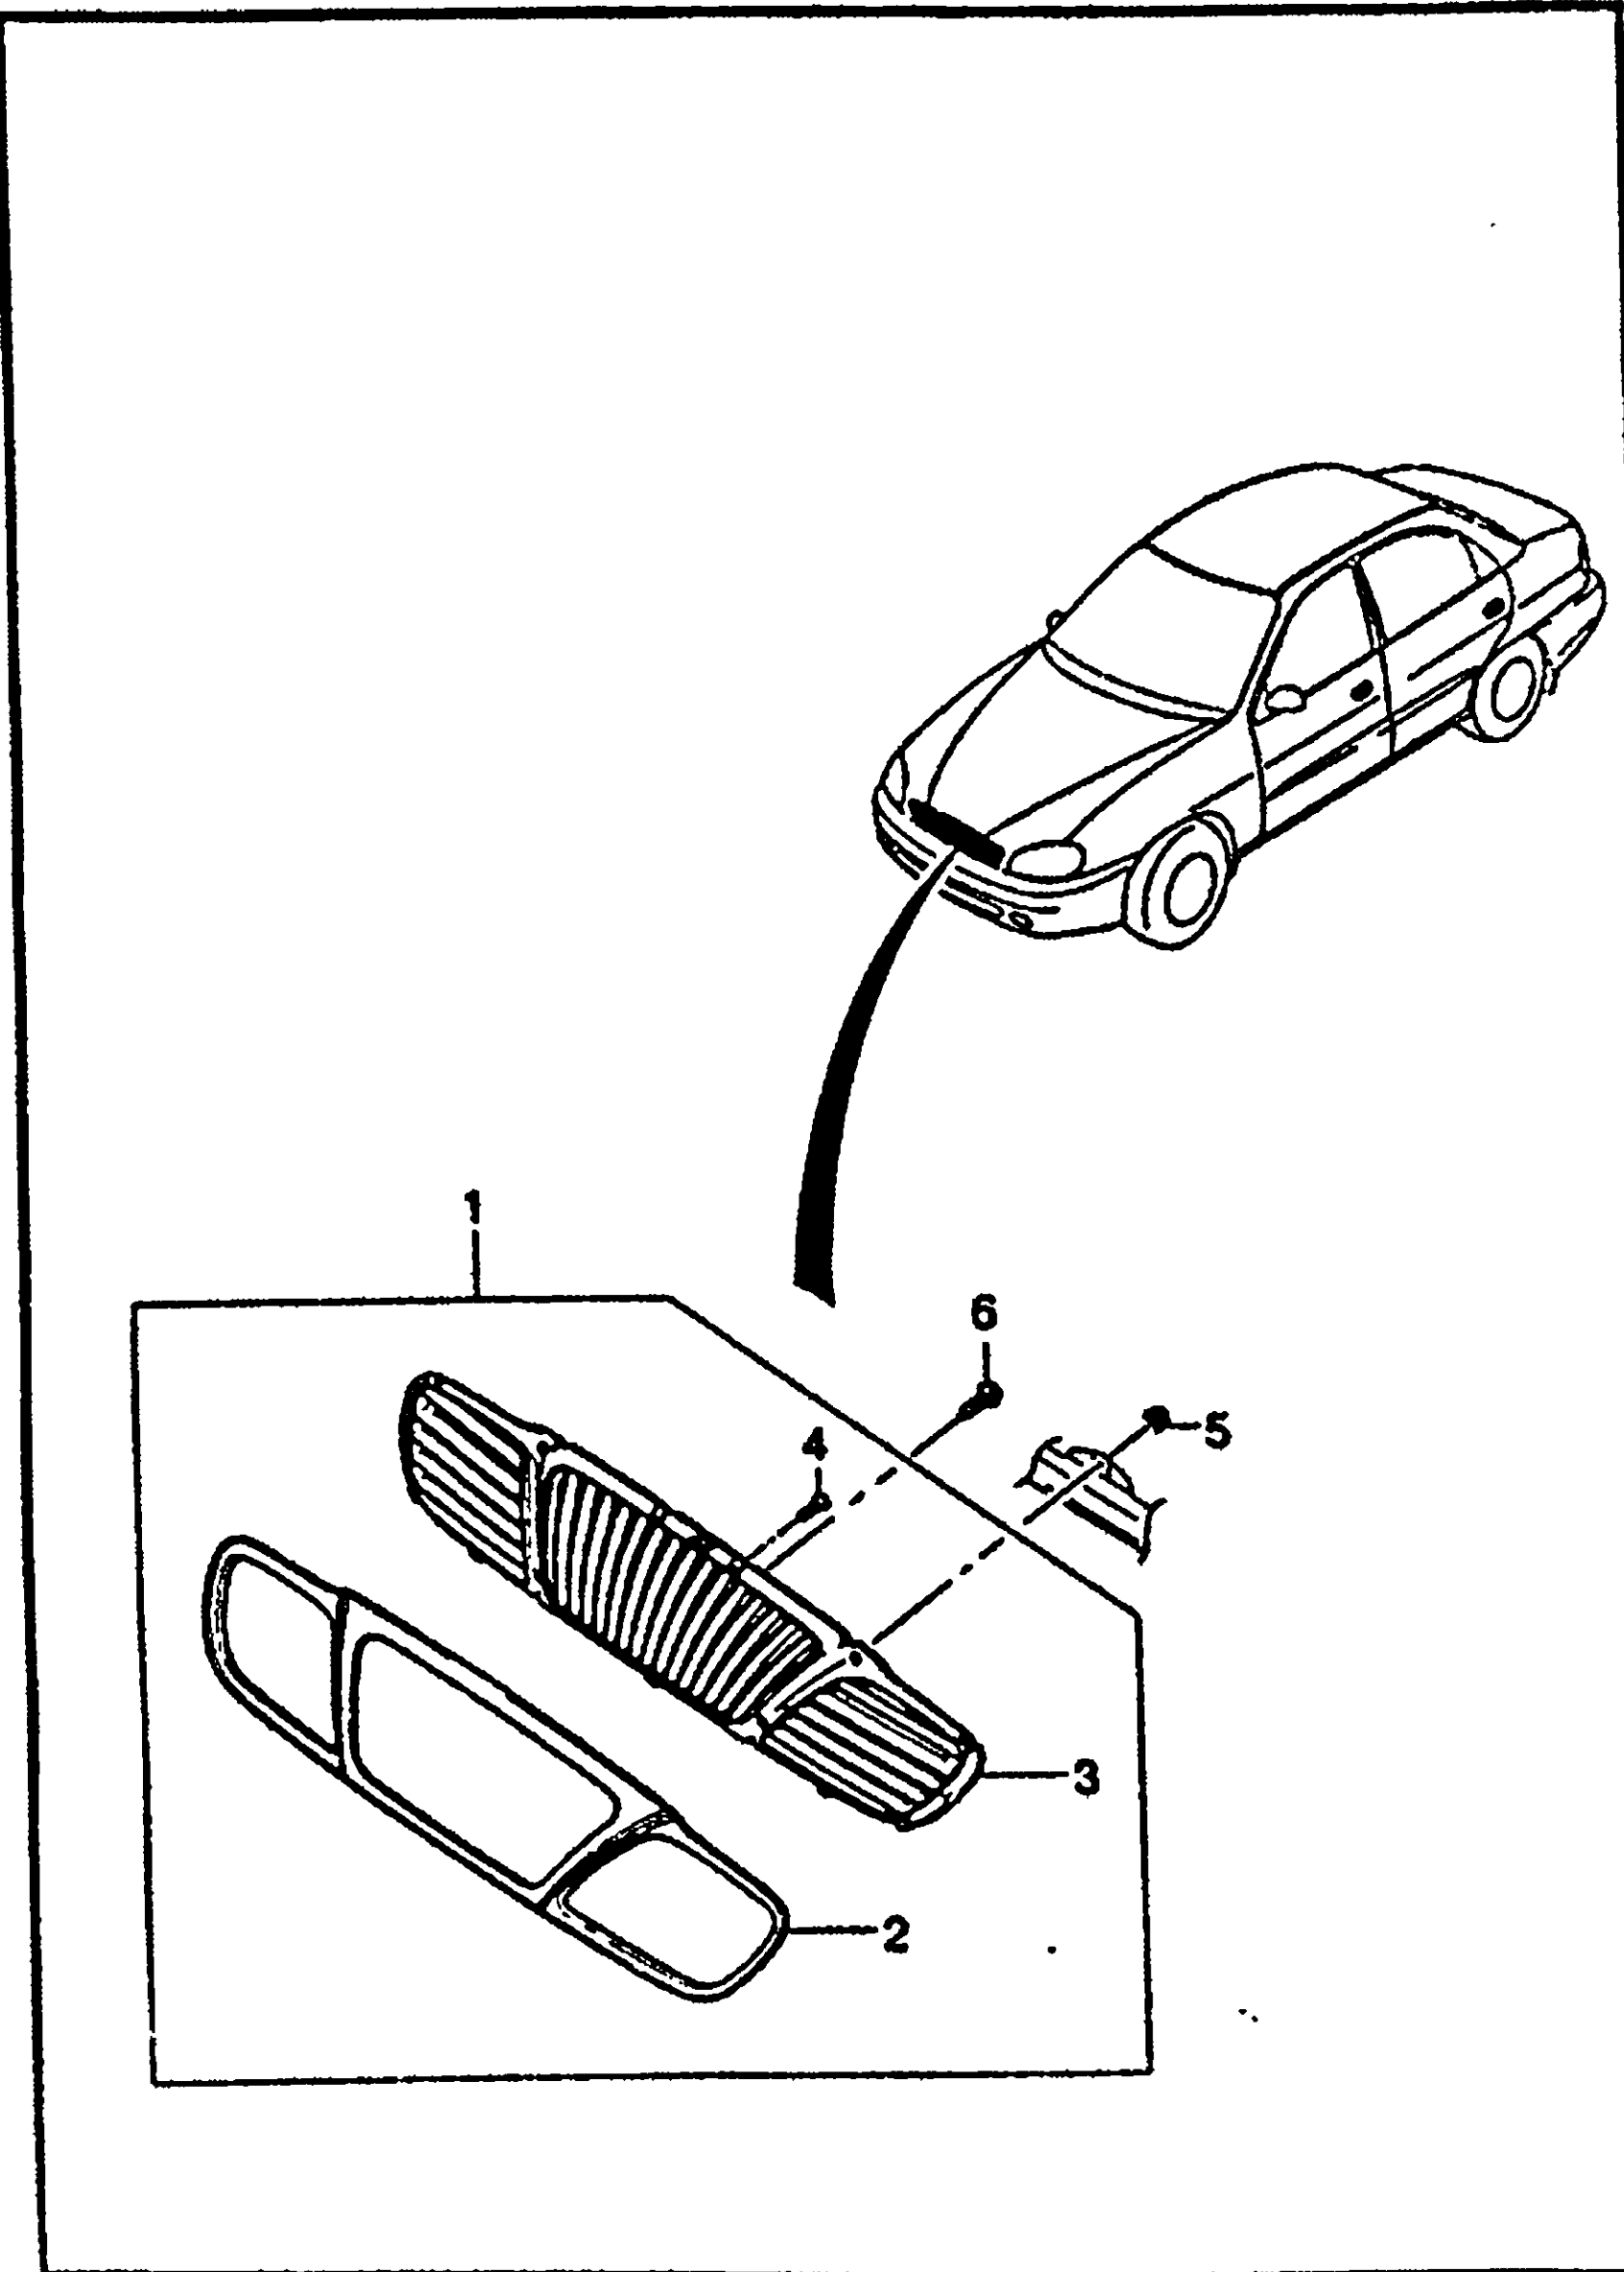


KEY NO.				PART NAME											
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E T N / G	BODY			LEVEL					FROM	TO			
			4 N	3 H	5 H	S	S								S
	[01]	(E)GRILLE A-RADIATOR (D)GITTER,KÜHLER									(F)GRILLE-RADIATEUR (S)REJA-RADIADOR				
	96303229	. . B B B S S S									1				
	[02]	(E)COVER-RADIATOR GRILLE (D)DECKEL									(F)CARTER (S)CUBIERTA				
	96215293	. . B B B S S S									1				
	[03]	(E)HOUSING A-RADIATOR GRILLE (D)GEHÄUSE									(F)LOGEMENT (S)CARCASA				
	96215294	. . B B B S S S									1				
	[04]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	09132-03001	. . B B B S S S									13				
	[05]	(E)NUT-HEXAGON FLANGE (D)MUTTER									(F)ECROU (S)TUERCA				
	08316-25042	. . B B B S S S									6				
	[06]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03151-42132	. . B B B S S S									2				
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

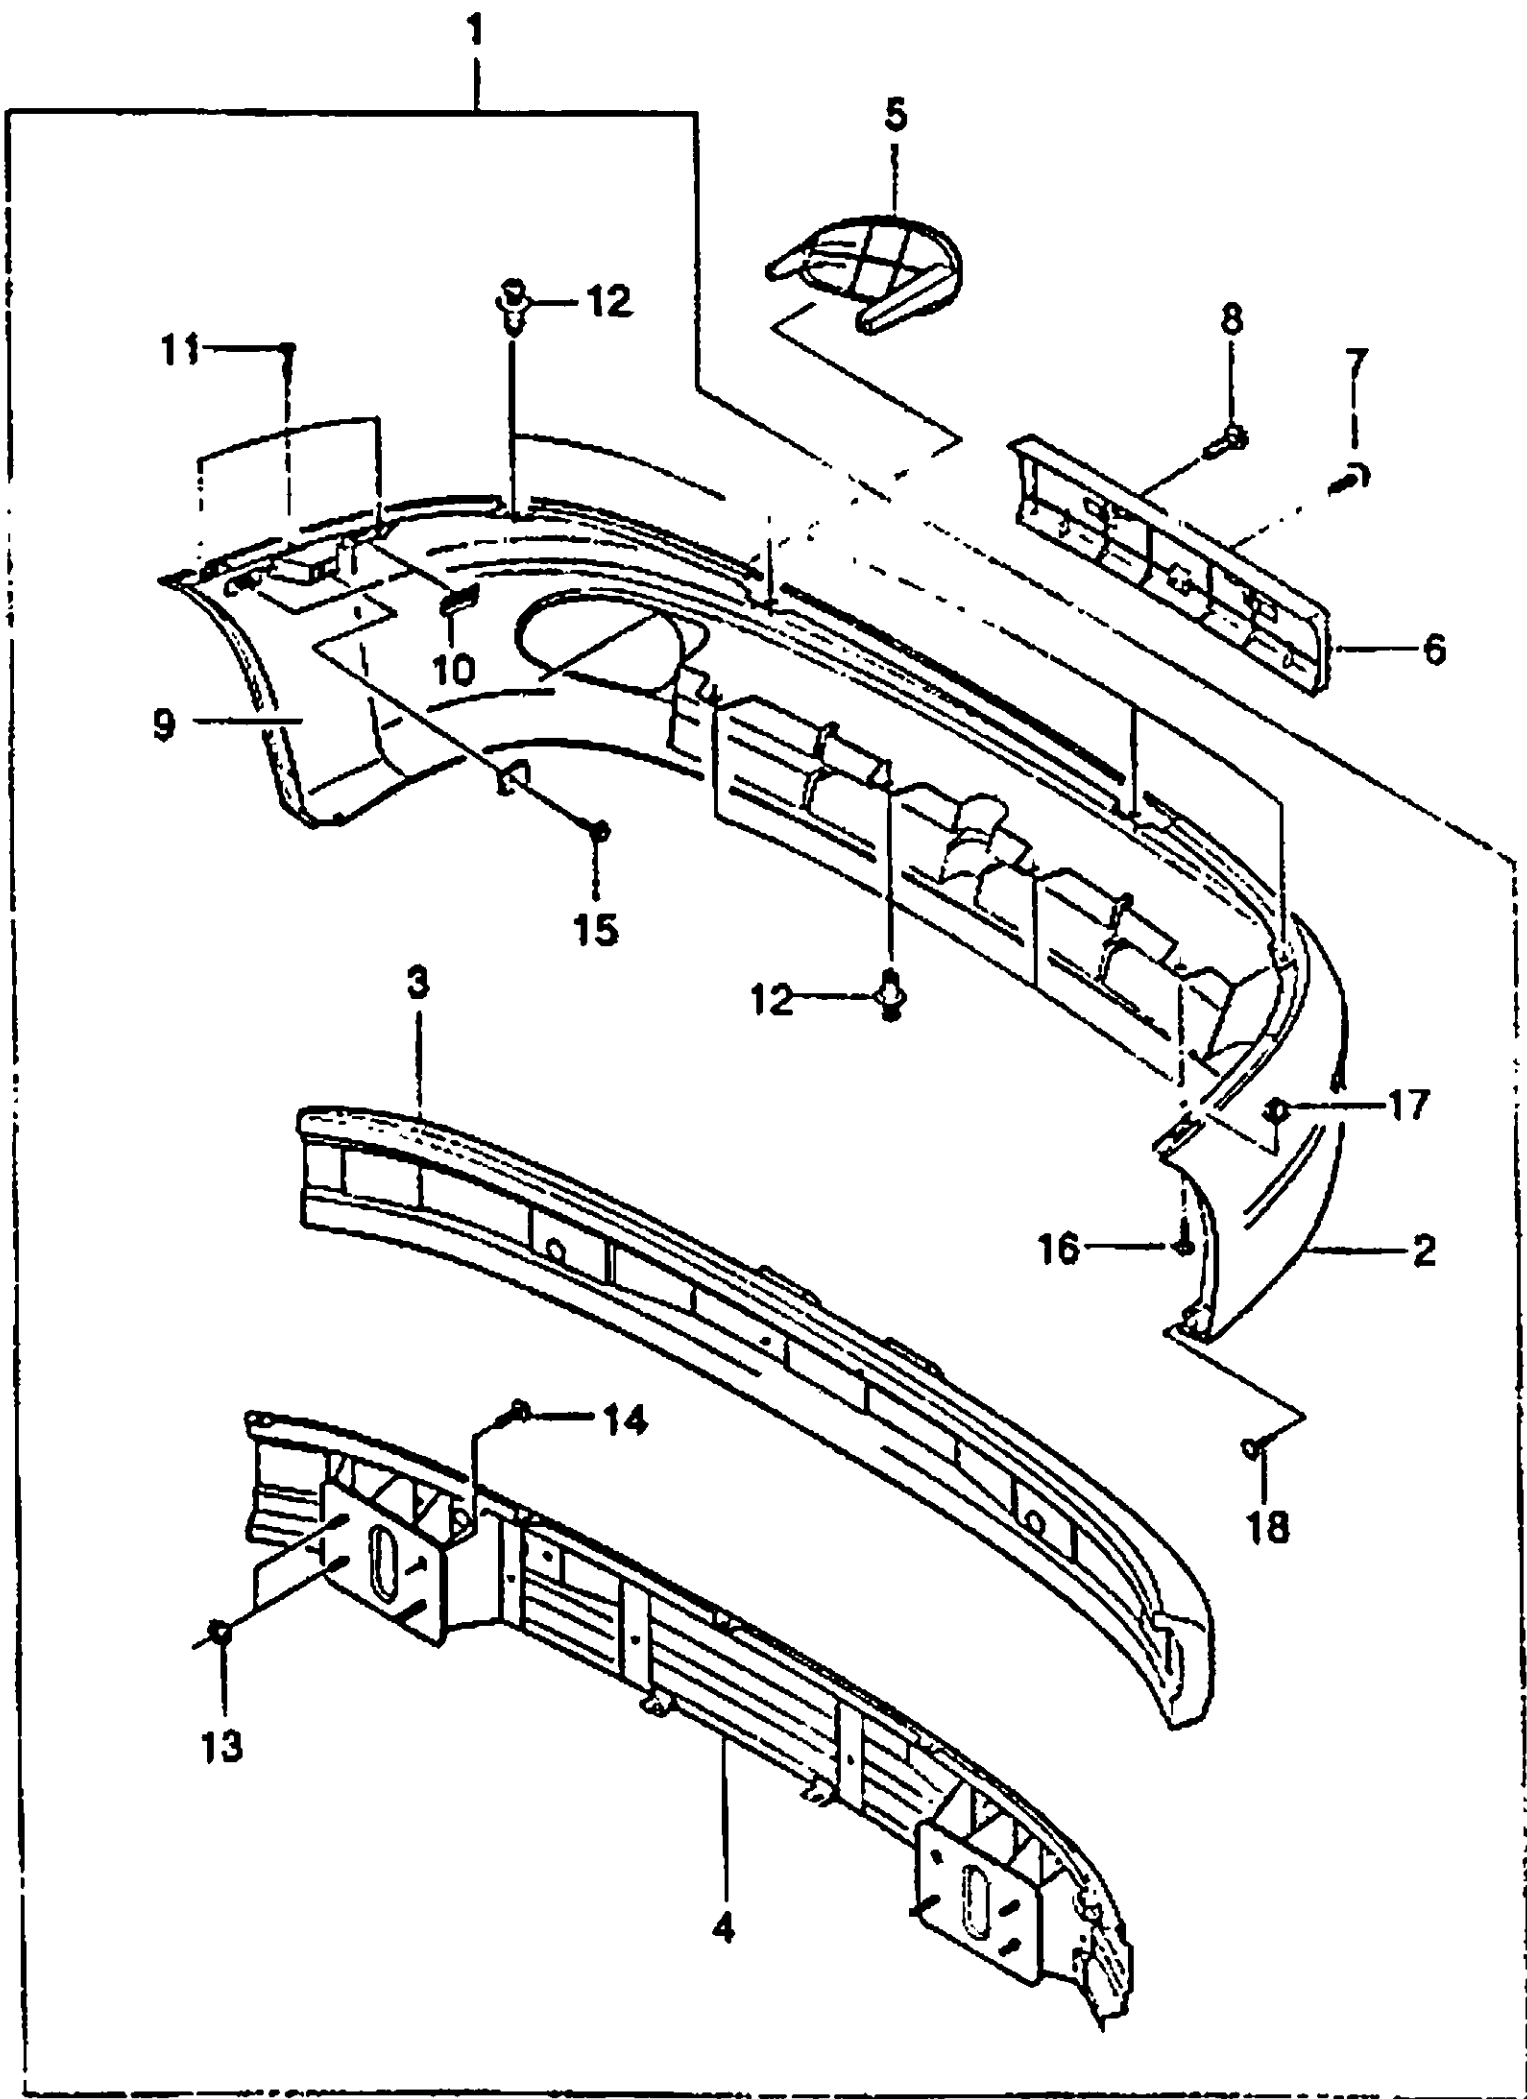


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01]	(E)BUMPER A-FRONT (D)STOBSTANGE,VORNE							(F)PARE-CHOC-AVANT (S)PARACHOQUES-FRENTE							
	S6720006	.	.	B	B	B	S	S	S	&VT2	1					
	S6720007	.	.	B	B	B	.	O	O	&VT3	1					
	[02]	(E)FASCIA A-BUMPER,FRONT (D)SCHILD,VORDERE STOBSTANGE							(F)BANDELETTES (S)PARACHOQUES							
	96226164	.	.	B	B	B	S	S	S		1					
	[03]	(E)ABSORBER-FRT BUMPER ENERG (D)VORDERE STOBSTANGE							(F)AMORTISSEUR (S)AMORTIGUADOR							
	96303216	.	.	B	B	B	S	S	S	&VT2	1					
	96214018	.	.	B	B	B	.	O	O	&VT3	1					
	[04]	(E)BEAM A-FRONT BUMPER IMPAC (D)STANGE,VORDERE STOBSTANGE							(F)BARRE (S)BARRA-IMPACTO							
	96303218	.	.	B	B	B	S	S	S	&VT2	1					
	96214019	.	.	B	B	B	.	O	O	&VT3	1					
	[05]	(E)GRILLE A-FRONT FOG LAMP (D)GITTER,VORDERE NEBELLAMPE							(F)GRILLE (S)REJA-LAMPARA DE NEBLINA							
	96303479	.	.	B	B	B	S	S	S	-T97	LH 1					
	96306248	.	.	B	B	B	S	S	S	-T97	RH 1					
	[06]	(E)BRACKET A-LICENSE PLATE (D)TRÄGER							(F)SUPPORT (S)SOPORTE							
	96215626	.	.	B	B	B	A	A	A	&T12	1					
	[07]	(E)SCREW-TAPPING (D)SCHRAUBE							(F)VIS (S)TORNILLO							
	03112-48222	.	.	B	B	B	A	A	A	&T12	1					
	[08]	(E)BOLT (D)SCHRAUBE							(F)BOULON (S)PERNO							
	09119-06017	.	.	B	B	B	A	A	A	&T12	2					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

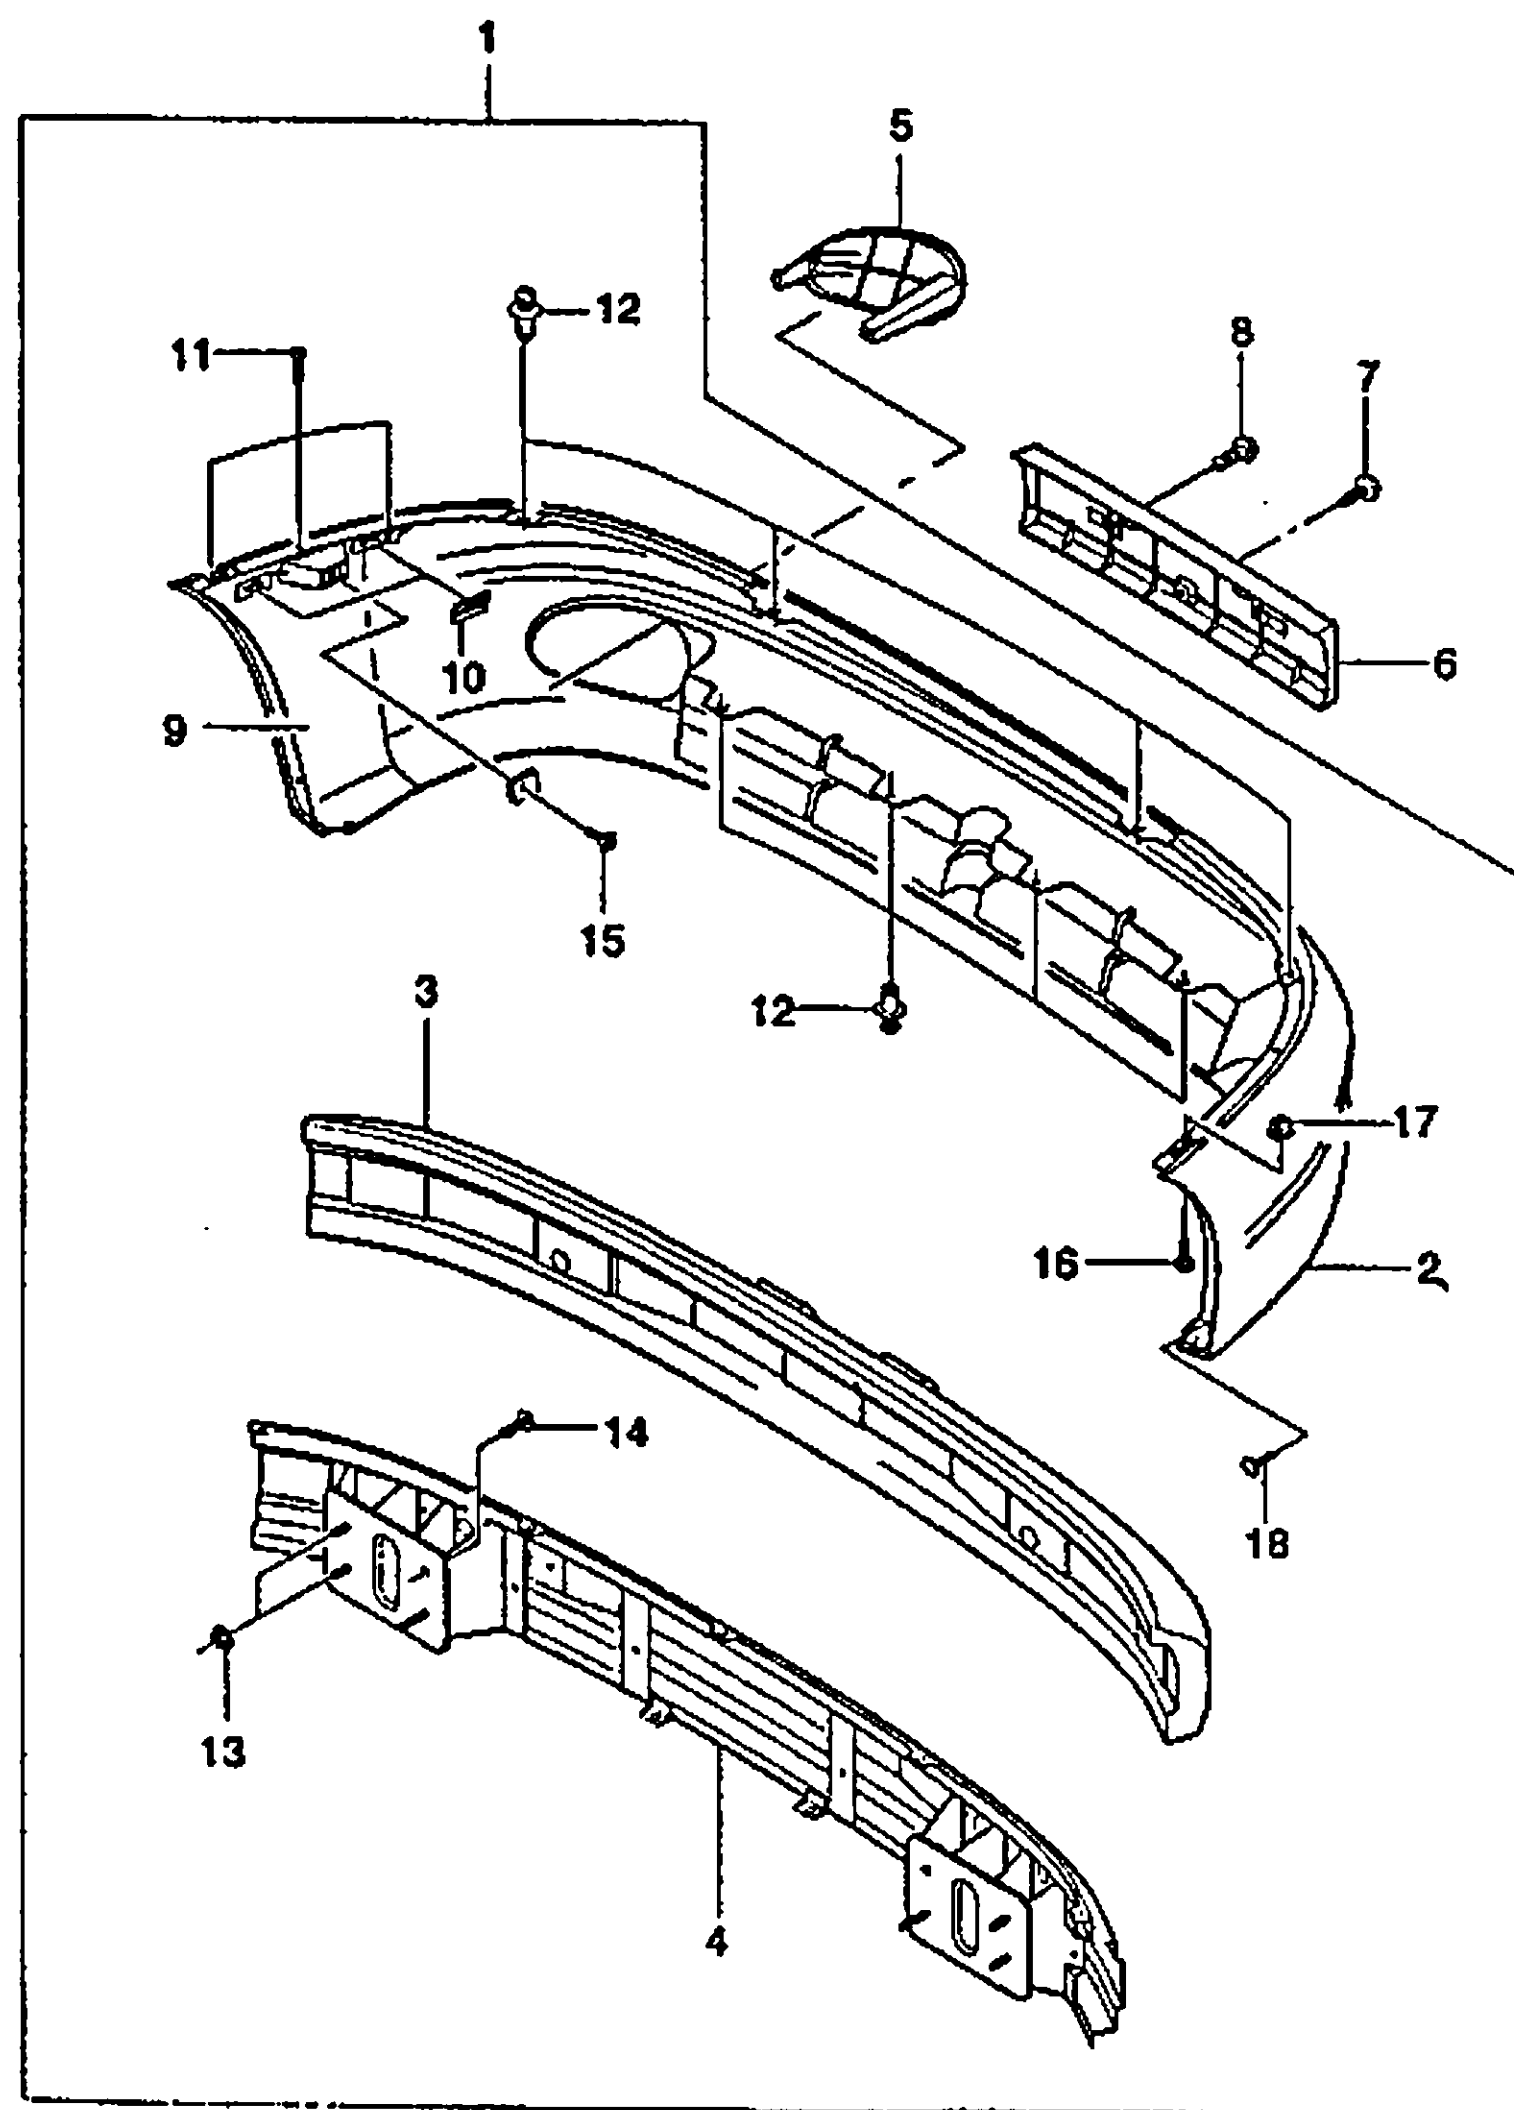


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / G	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[09]	(E)BRACKET	A-FRT BUMPER SIDE	(F)SUPPORT											
		(D)TRÄGER		(S)SOPORTE											
	96303220	. . B B B S S S		LH 1											
	96303221	. . B B B S S S		RH 1											
	[10]	(E)NUT-SPEED		(F)ECROU											
		(D)MUTTER		(S)TUERCA											
	09148-01001	. . B B B S S S		4											
	[11]	(E)SCREW-TAPPING		(F)VIS											
		(D)SCHRAUBE		(S)TORNILLO											
	03130-42133	. . B B B S S S		6											
	[12]	(E)CLIP		(F)ATTACHE											
		(D)KLEMME		(S)GRAPA											
	09409-09302	. . B B B S S S		9											
	[13]	(E)NUT		(F)ECROU											
		(D)MUTTER		(S)TUERCA											
	09159-08010	. . B B B S S S		4											
	[14]	(E)BOLT		(F)BOULON											
		(D)SCHRAUBE		(S)PERNO											
	09118-08003	. . B B B . O O	&VT3	2								W/WASHER			
	[15]	(E)BOLT		(F)BOULON											
		(D)SCHRAUBE		(S)PERNO											
	09119-06017	. . B B B S S S		2							970804				
Y	09116-06039	. . B B B S S S		2							970804				
	[16]	(E)SCREW-TAPPING		(F)VIS											
		(D)SCHRAUBE		(S)TORNILLO											
	09136-04005	. . B B B S S S		4											
	[17]	(E)NUT-SPEED		(F)ECROU											
		(D)MUTTER		(S)TUERCA											
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE									
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK									

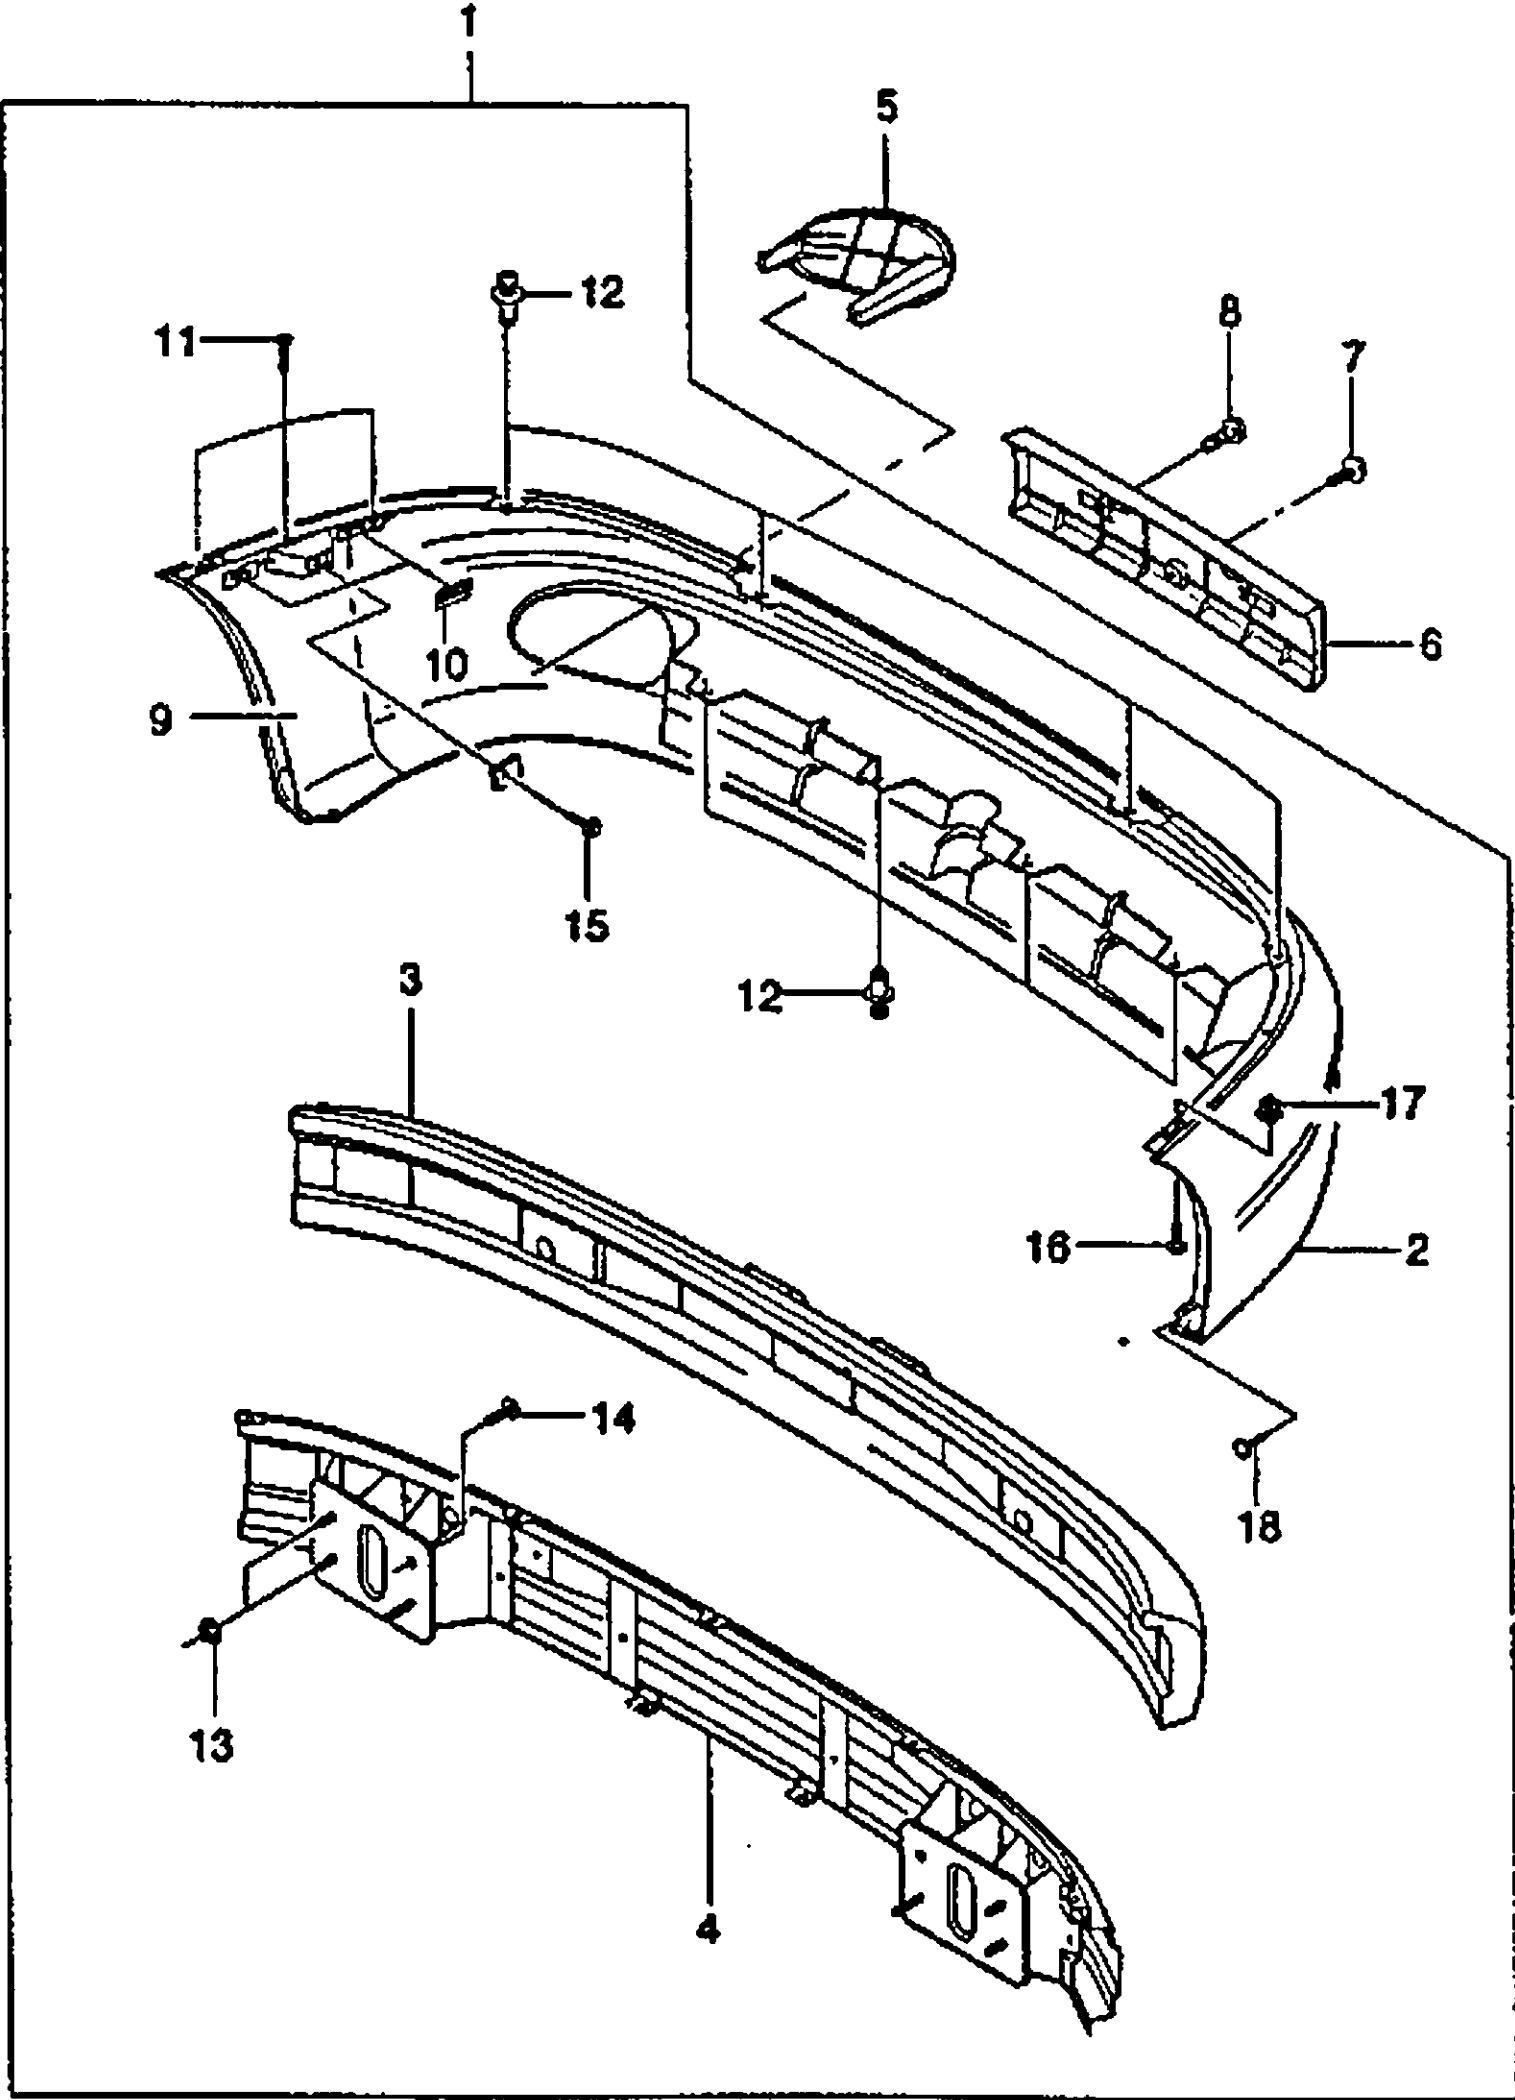


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S E
	09148-04003 [18]	.	.	B	B	B	S	S	S			2			
		(E)SCREW-TAPPING													
		(D)SCHRAUBE													
	09136-04005	.	.	B	B	B	S	S	S			2			
	</														

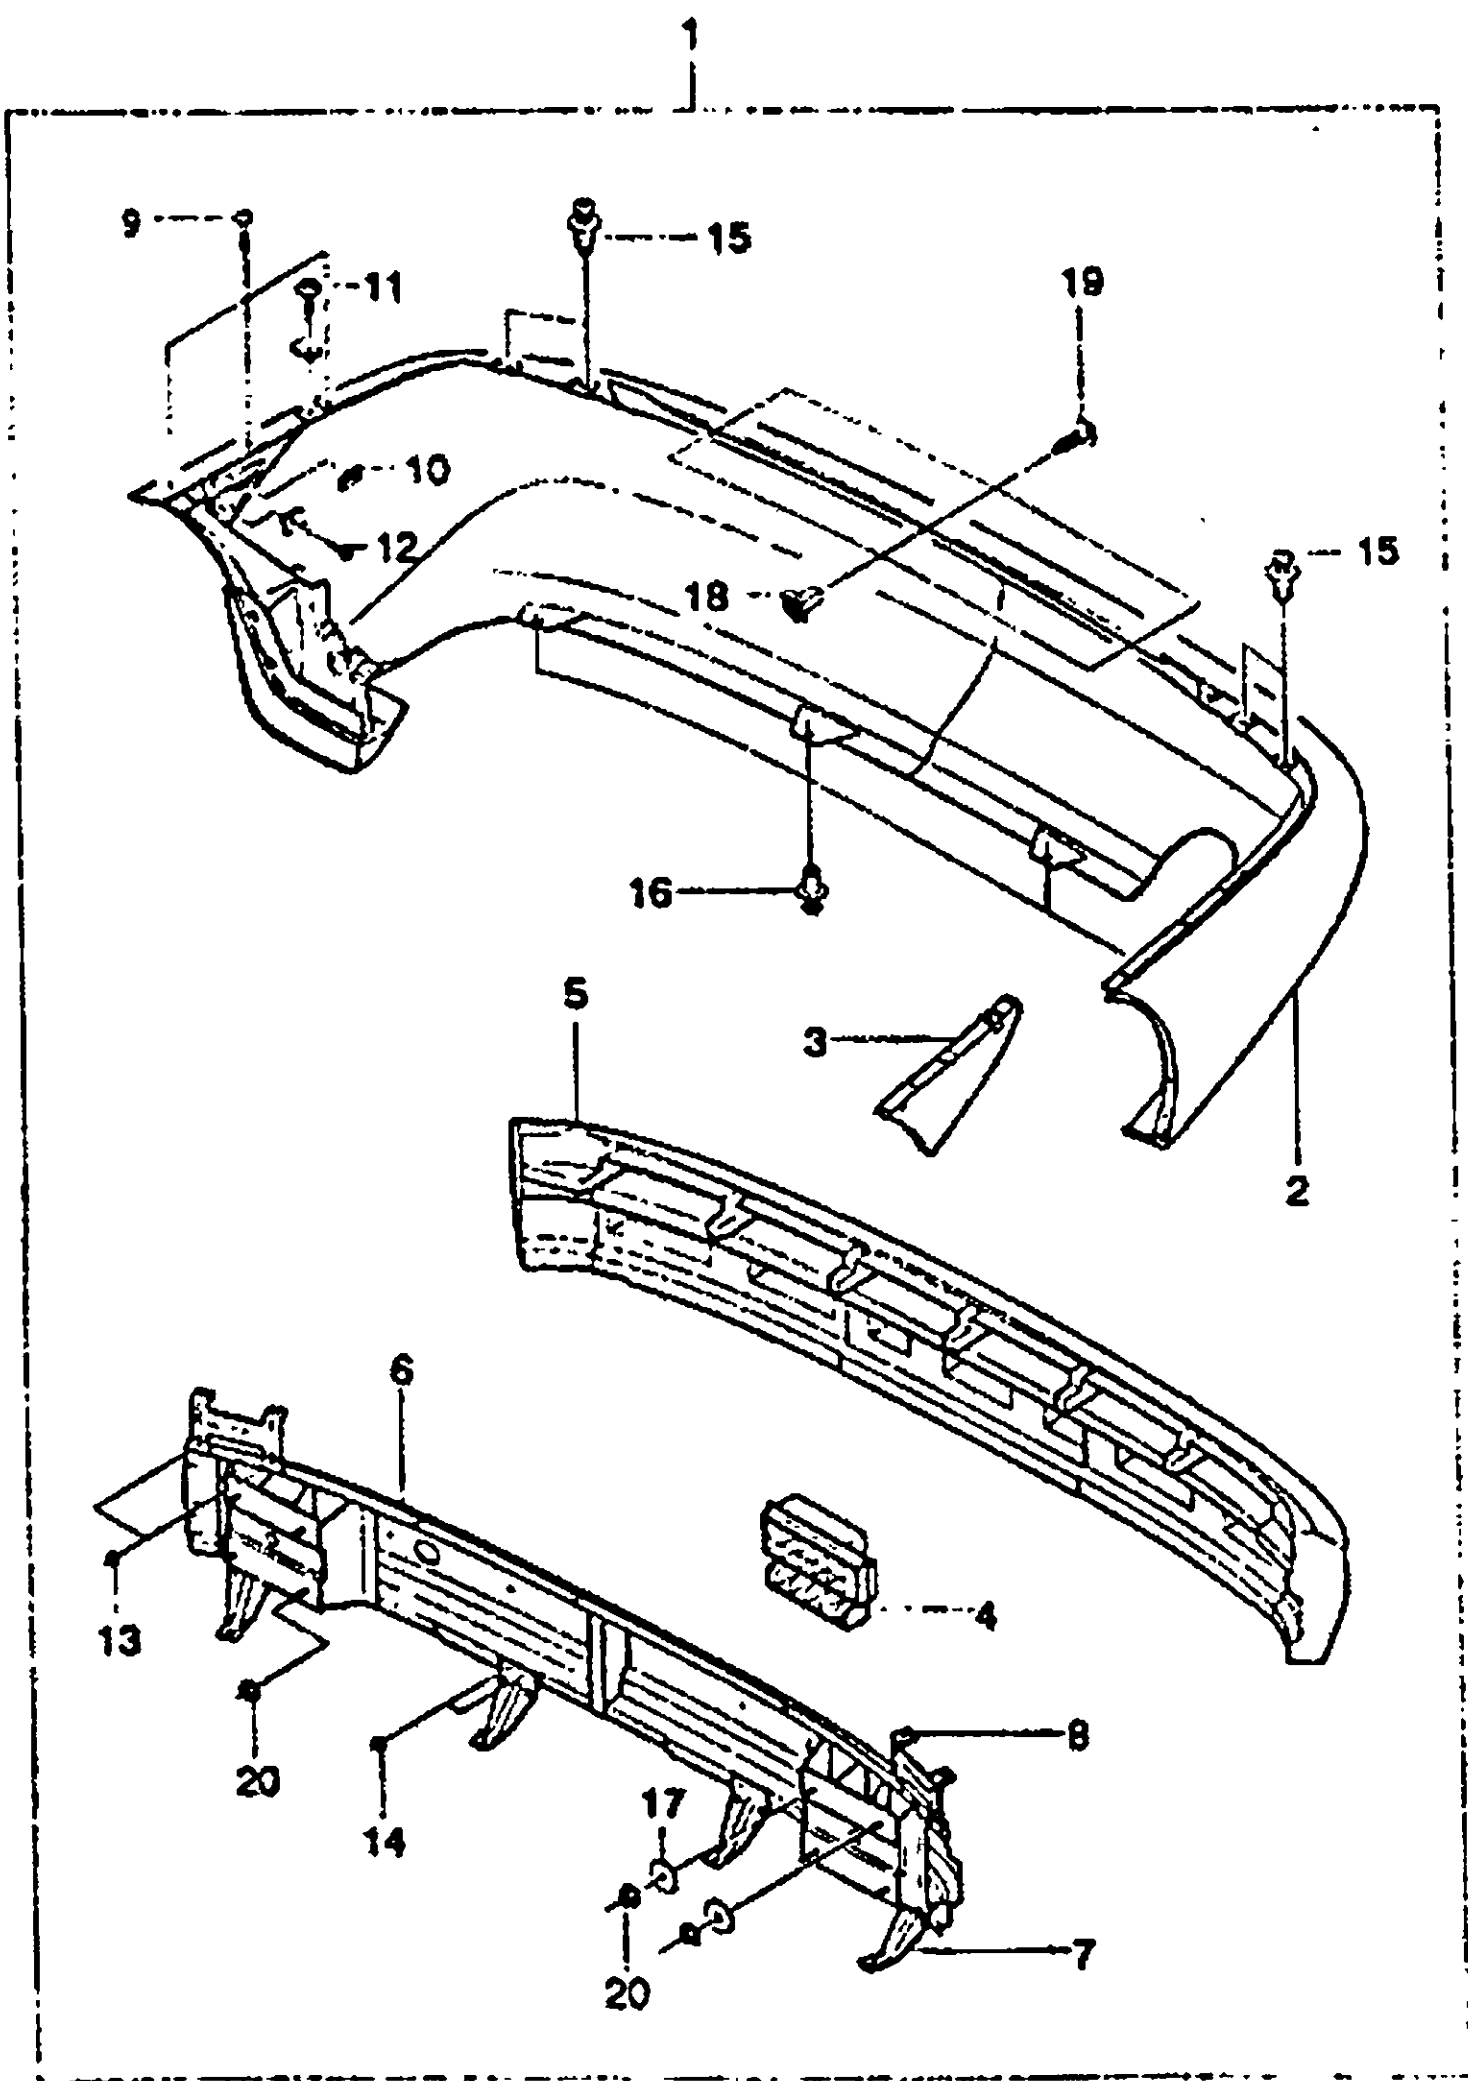


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S S								S S S	S S S
	[01]	(E)BUMPER A-REAR (D)STOBSTANGE,HINTEN									(F)PARE-CHOC-ARRIERE (S)PARACHOQUES-TRASERO					
	96303222	.	.	B	.	.	S	S	S			1				
	96232611	.	.	.	B	B	S	.	S			1				
	[02]	(E)FASCIA A-BUMPER,REAR (D)SCHILD,HINTERE STOBSTANGE									(F)BANDELETES (S)PARACHOQUES TRASERO					
	96226178	.	.	B	.	.	S	S	S			1				
	96226180	.	.	.	B	B	S	.	S			1				
	[03]	(E)BRACKET A-RR BUMPER SIDE (D)TRÄGER,HINTERE STOBSTANGE									(F)SUPPORT (S)SOPORTE-LADO					
	96303482	.	.	B	.	.	S	S	S			LH 1				
	96215644	.	.	B	.	.	S	S	S			RH 1				
	96215645	.	.	.	B	B	S	.	S			LH 1				
	96215646	.	.	.	B	B	S	.	S			RH 1				
	[05]	(E)ABSORBER-RR BUMPER ENERGY (D)HINTERE STOBSTANGE									(F)AMORTISSEUR (S)AMORTIGUADOR					
	96303225	.	.	B	.	.	S	S	S			1				
	96215632	.	.	.	B	B	S	.	S			1				
	[06]	(E)BEAM A-REAR BUMPER IMPACT (D)STANGE,HINTERE STOBSTANGE									(F)BARRE (S)BARRA-IMPACTO					
	96303227	.	.	B	B	B	S	S	S			1				
	[07]	(E)SUPPORT-REAR FASCIA,LOWER (D)TRÄGER									(F)SUPPORT (S)SOPORTE					
	96216493	.	.	B	.	.	S	S	S			4				
	96217114	.	.	.	B	B	S	.	S			LH 1				
	96217115	.	.	.	B	B	S	.	S			RH 1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

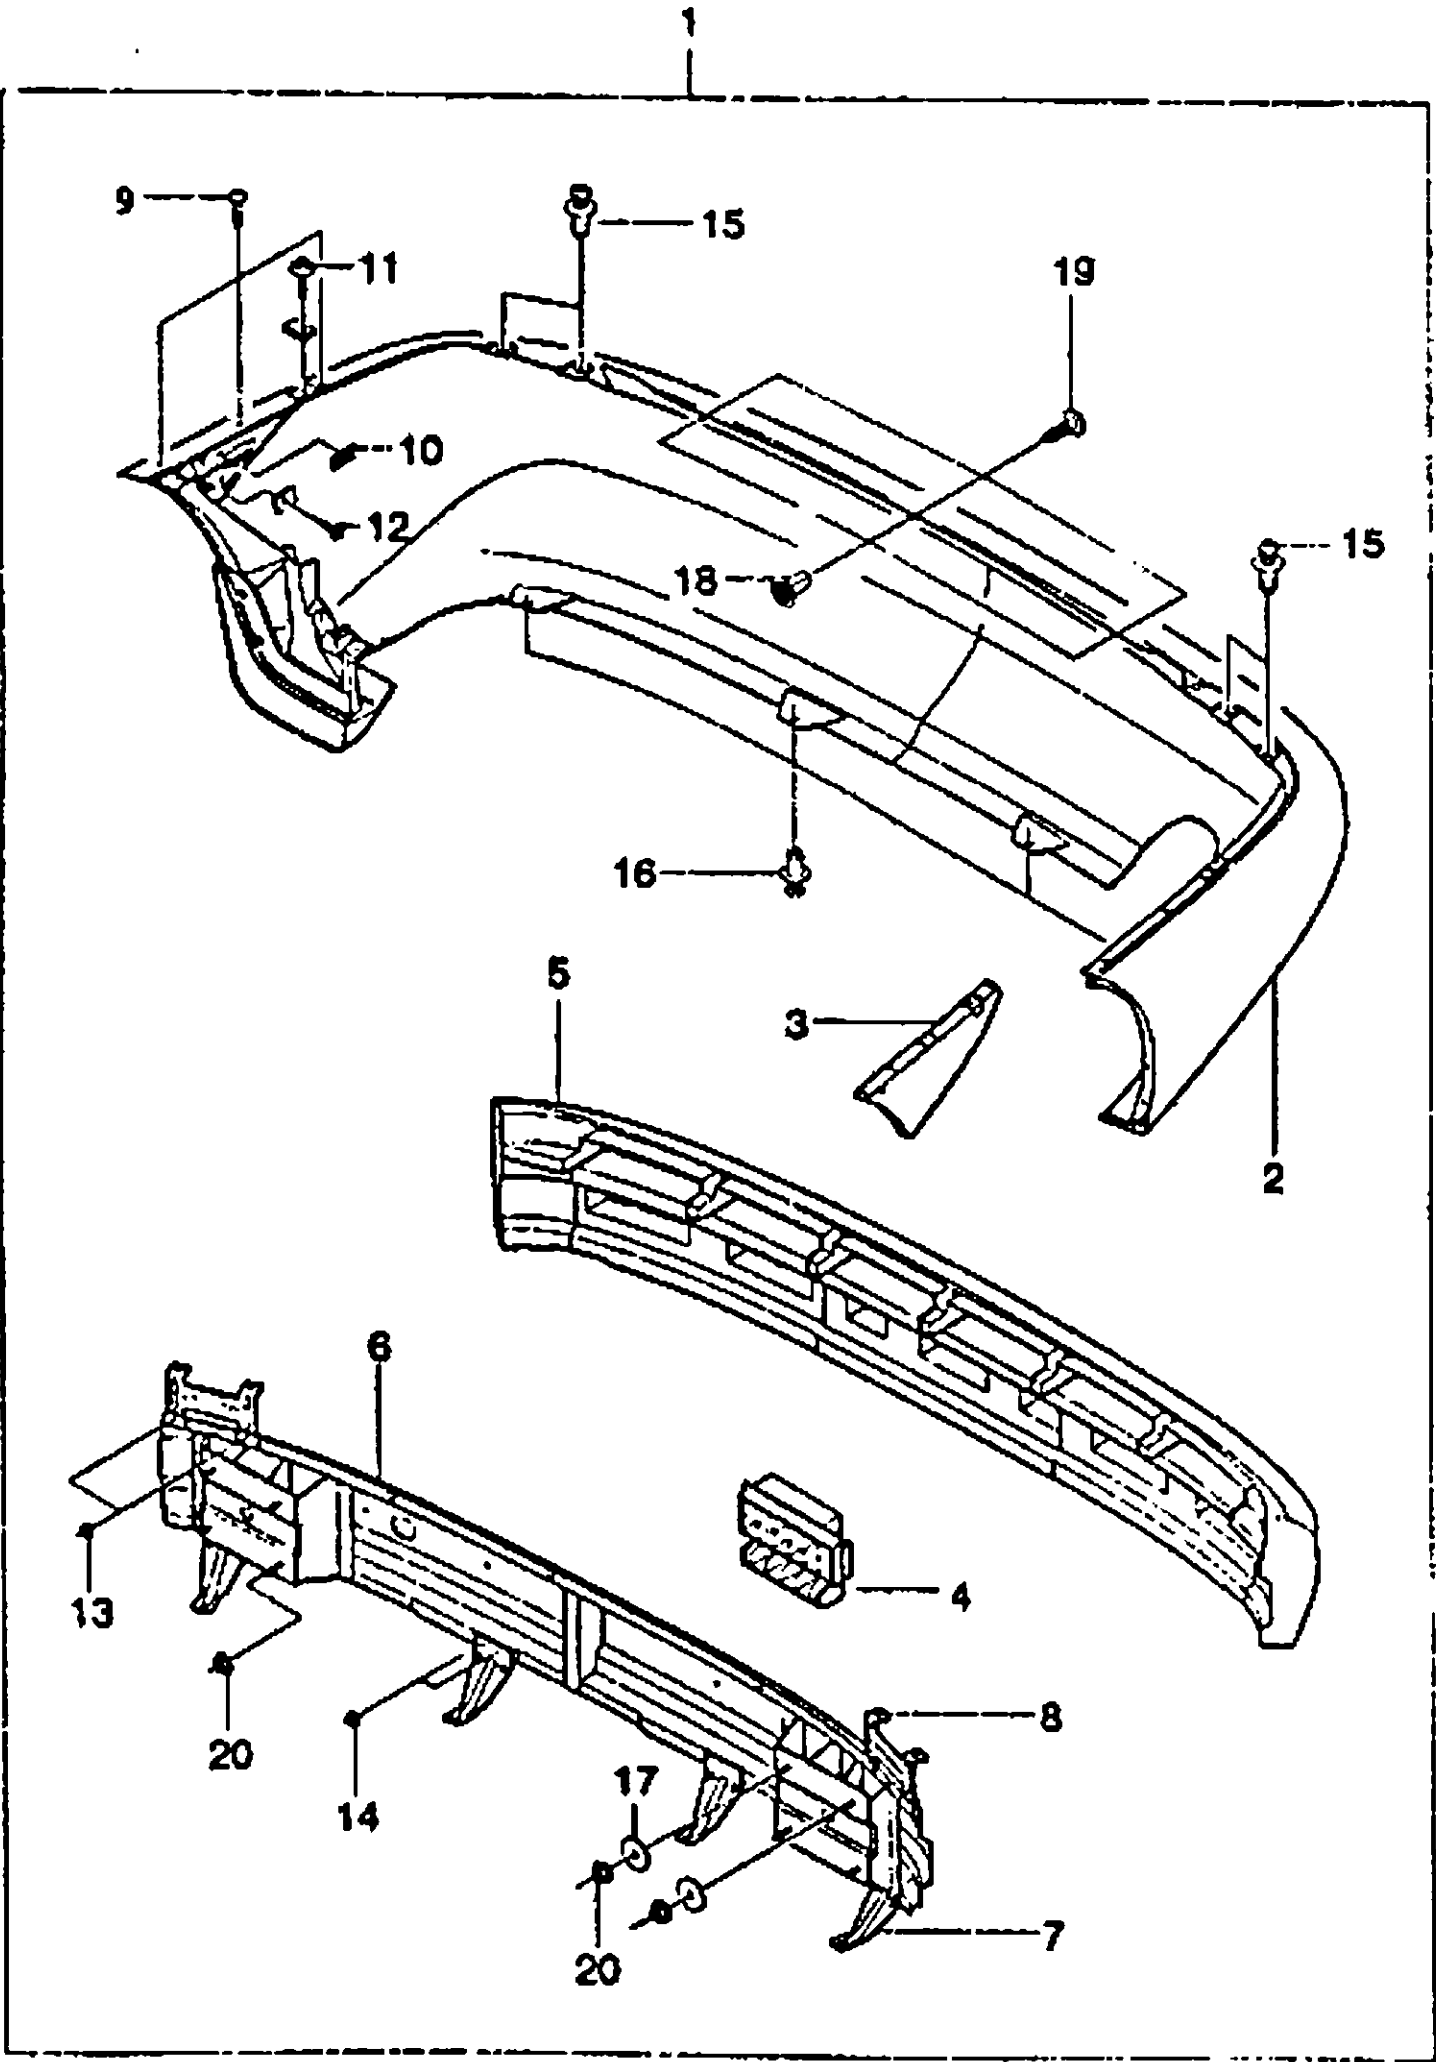


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[08]	(E)SUPPORT-REAR FASCIA,UPPER (D)TRÄGER									(F)SUPPORT (S)SOPORTE		-		
	96215642	.	.	.	B	B	S	.	S			LH 1			
	96226268	.	.	.	B	B	S	.	S			RH 1			
	[10]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA				
	09148-01001	.	.	B	B	B	S	S	S			2			
	[11]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09119-06020	.	.	B	B	B	S	S	S			2	970908		
Y	09119-06039	.	.	B	B	B	S	S	S			2	970908		
	[12]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO				
	09119-06017	.	.	B	B	B	S	S	S			2	970804		
Y	09116-06039	.	.	B	B	B	S	S	S			2	970804		
	[13]	(E)RIVET (D)NETE									(F)RIVET (S)ROBLON (REMACHE)				
	09229-04002	.	.	B	B	B	S	S	S			4			
	[14]	(E)RIVET (D)NETE									(F)RIVET (S)ROBLON (REMACHE)				
	09229-04002	.	.	B	B	B	S	S	S			8			
	[15]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA				
	09409-09302	.	.	B	B	B	S	S	S			4			
	[16]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA				
	09409-09302	.	.	B	B	B	S	S	S			4			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

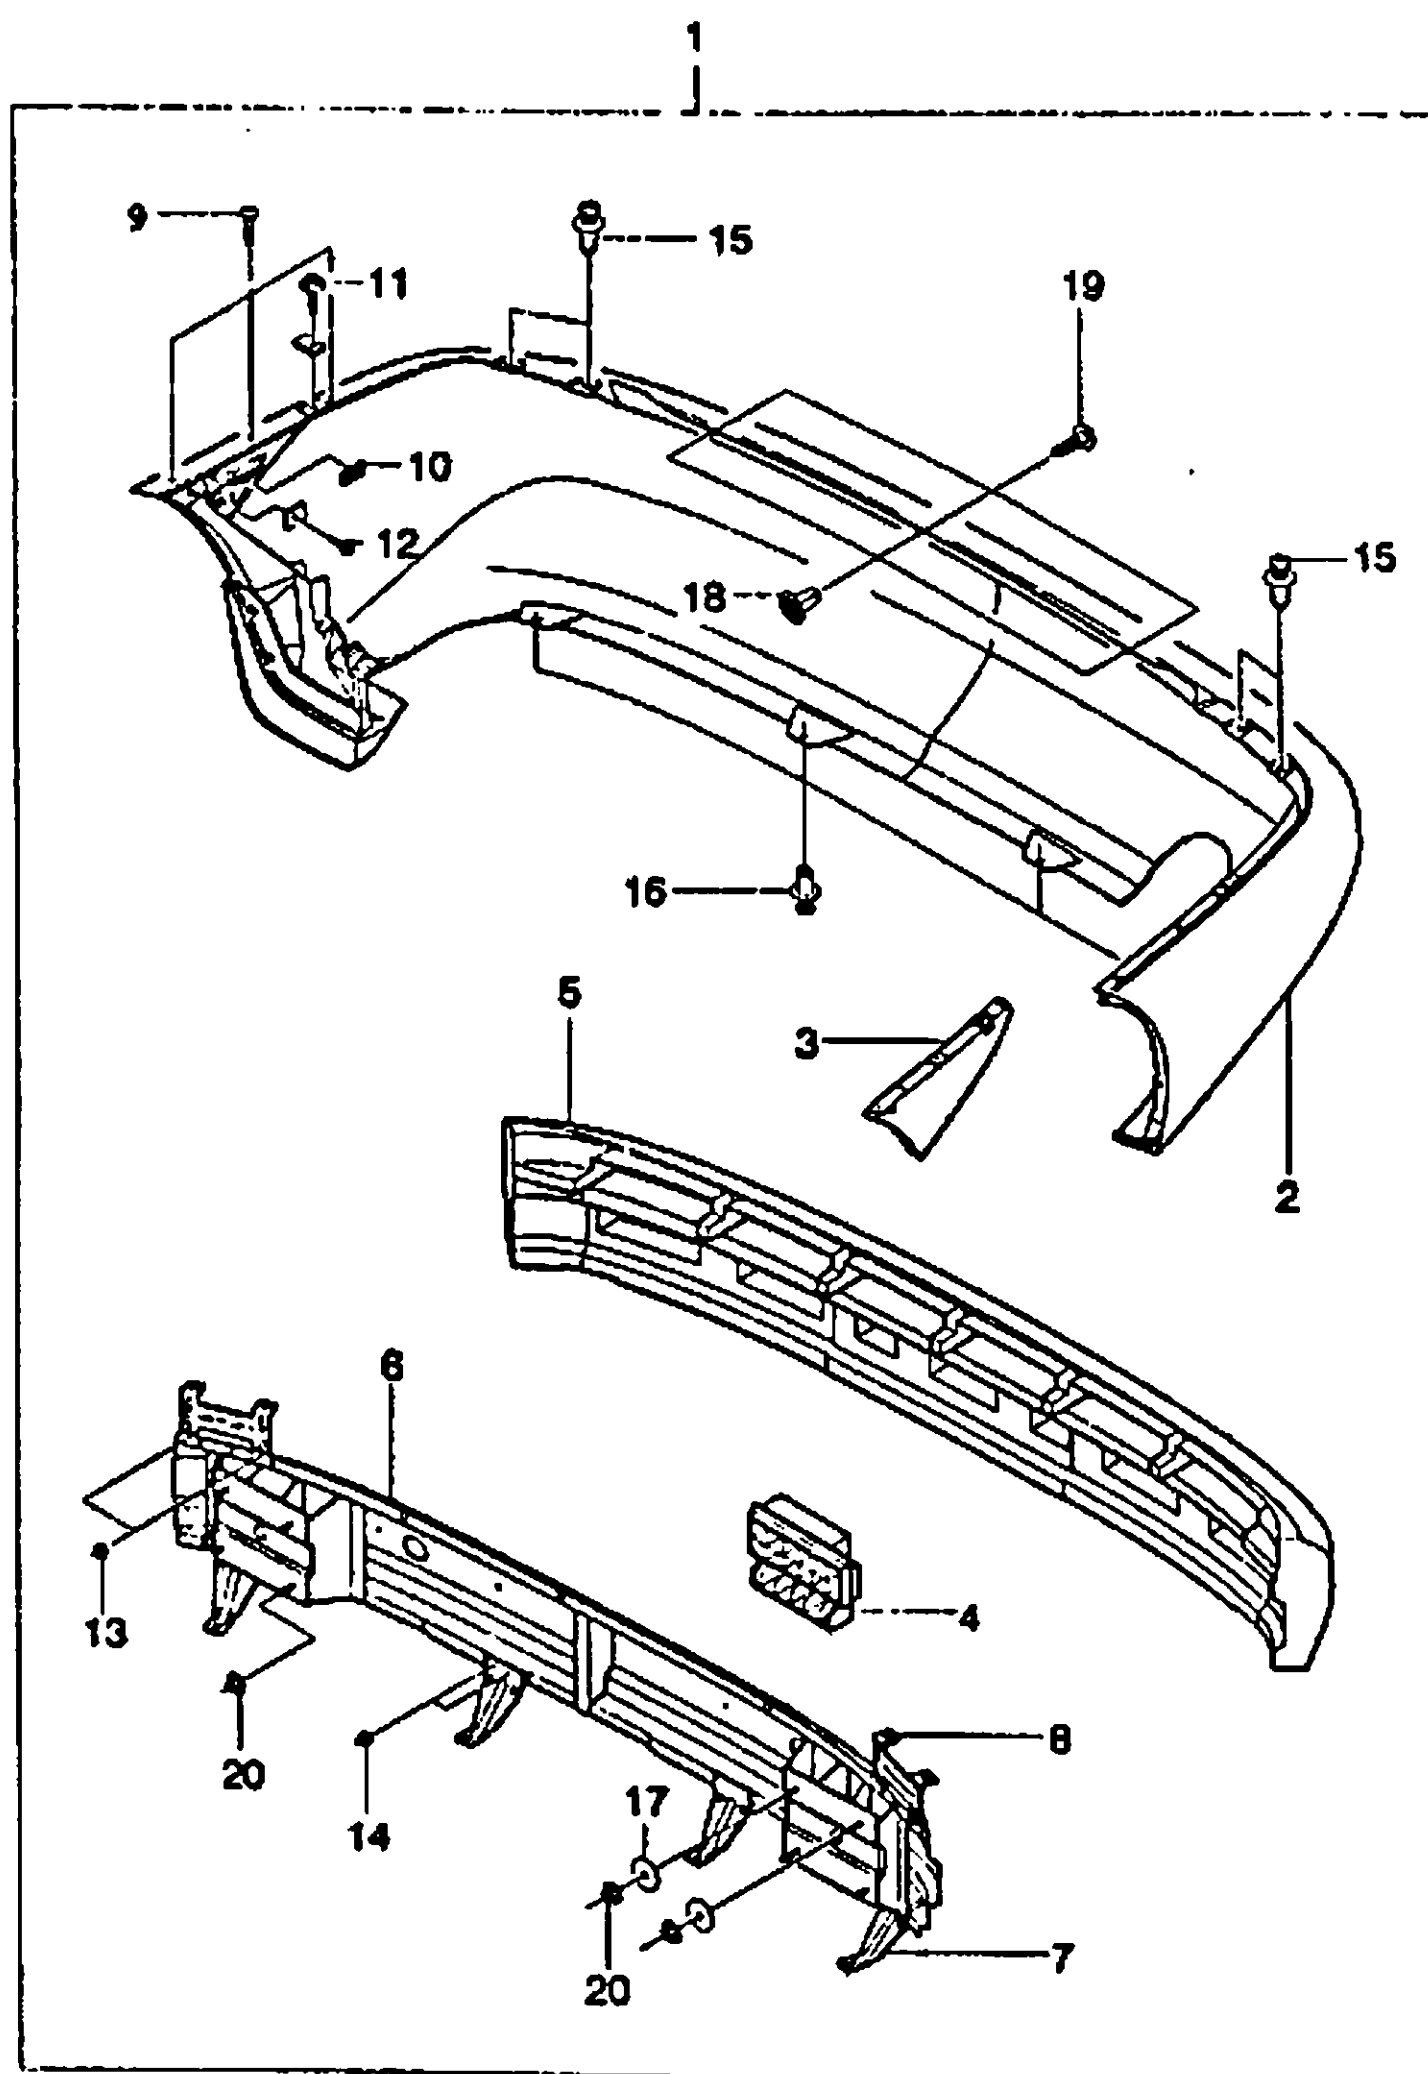

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[17]	(E)WASHER-PLAIN (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA					
	09161-07001	. . B B B S S S								4	970804					
Y	09161-09001	. . B B B S S S								4	970804					
	[18]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA					
	09148-03006	. . B B B S S S								3						
	[19]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	03160-42132	. . B B B S S S								3						
	[20]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA					
	09159-08010	. . B B B S S S								6						
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

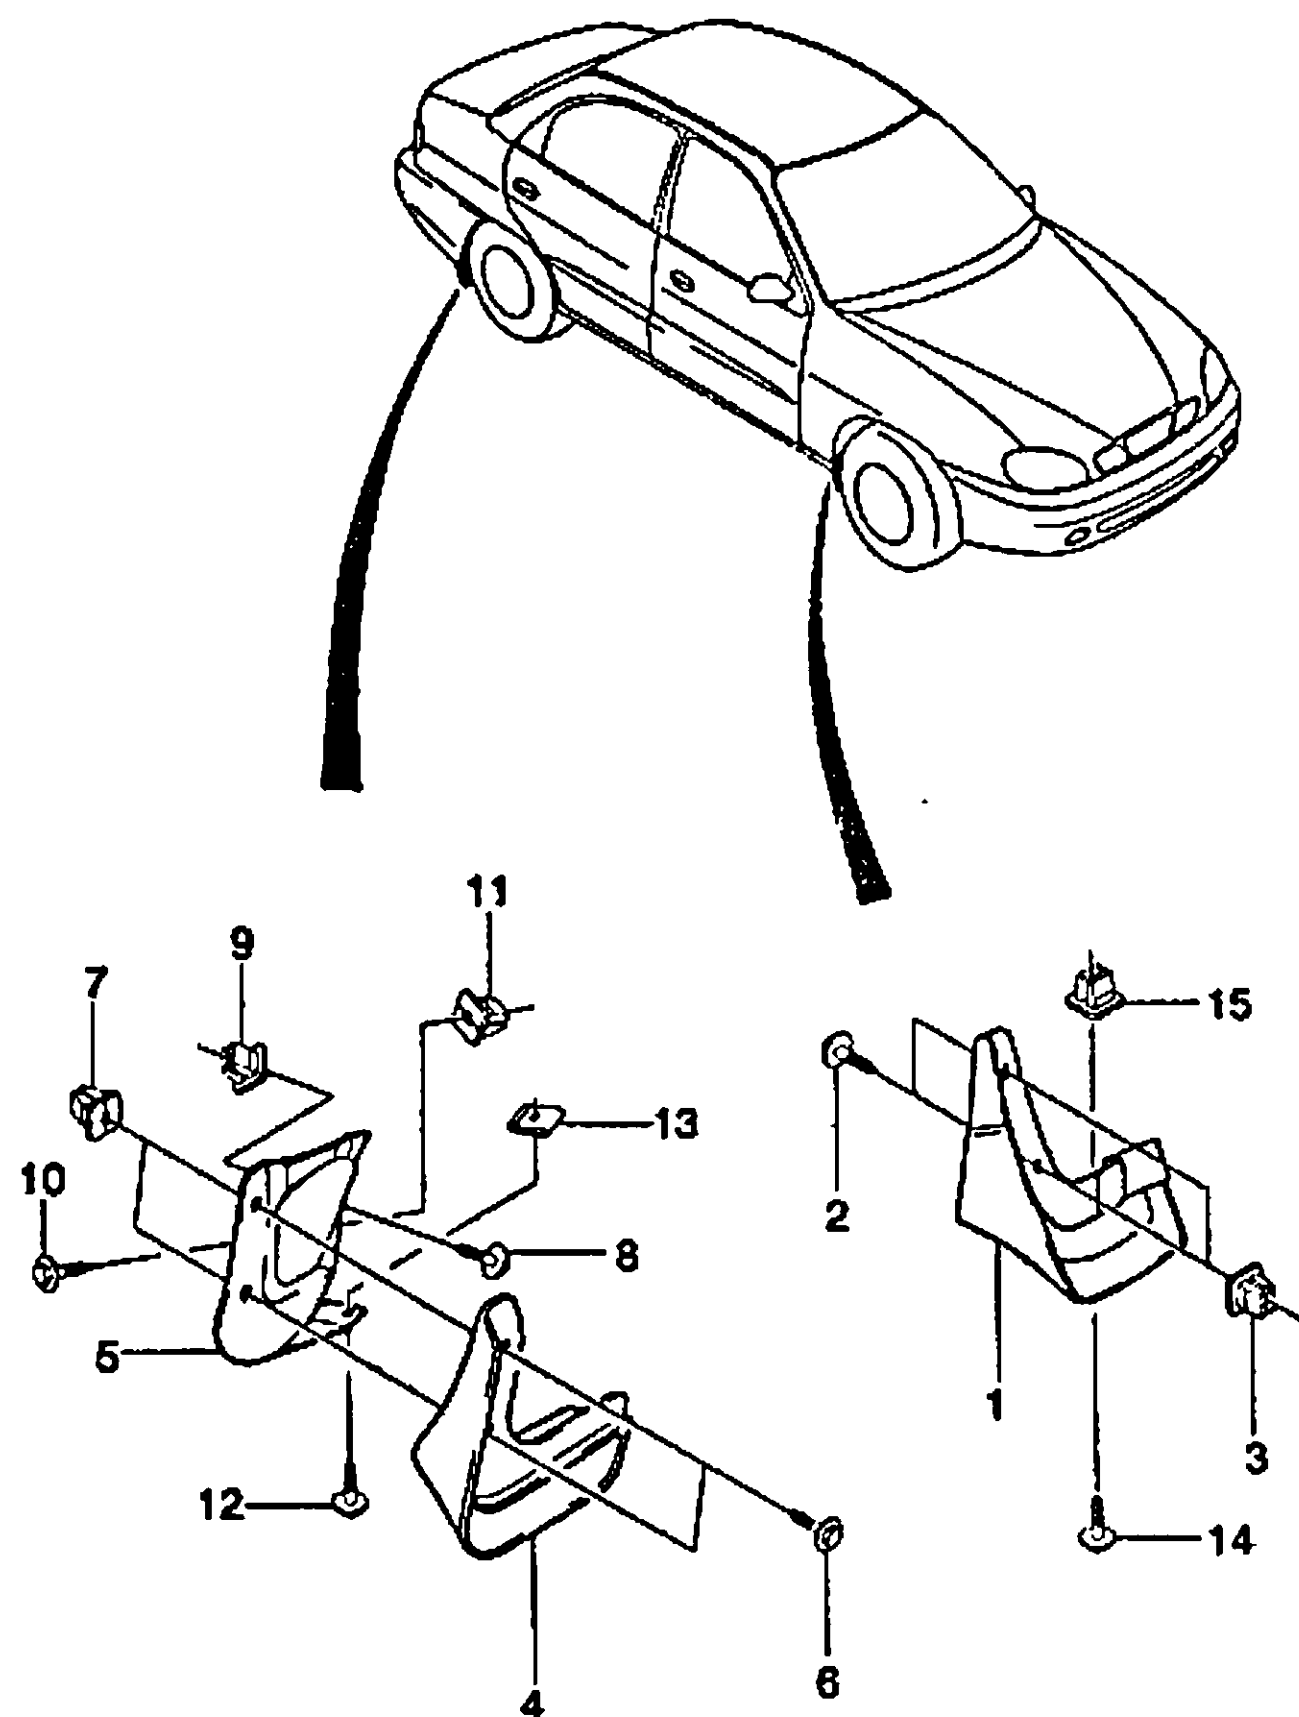


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N H	3 H	5 H	S S	S S							
	[01]	(E) GUARD A-MUD, FRONT (D) KOTFLÜGEL									(F) GARDE-GARDE-BOUE (S) PROTECTOR-GUARD AFANGO				
	96303235	. . B B B A A A									LH 1				
	96306140	. . B B B A A A									RH 1				
	[02]	(E) SCREW-TAPPING (D) SCHRAUBE									(F) VIS (S) TORNILLO				
	09136-04005	. . B B B A A A									4 970804				
Y	09136-04013	. . B B B A A A									4 970804				
	[03]	(E) NUT-SPEED (D) MUTTER									(F) ECROU (S) TUERCA				
	09148-04003	. . B B B A A A									4				
	[04]	(E) GUARD-MUD, REAR (D) KOTFLÜGEL, SCHLAMM									(F) GARDE-BOUE (S) PROTECTOR-LODO				
	96303233	. . B . . A A A									LH 1				
	96306249	. . B . . A A A									RH 1				
	96303239	. . . B B A . A									LH 1				
	96306250	. . . B B A . A									RH 1				
	[05]	(E) GUARD-WHEEL, REAR (D) KOTFLÜGEL, SCHLAMM									(F) GARDE-BOUE (S) PROTECTOR-LODO				
	96306231	. . B . . S S S									LH 1				
	96306232	. . B . . S S S									RH 1				
	96304674	. . . B B S . S									LH 1				
	96304675	. . . B B S . S									RH 1				
	[06]	(E) SCREW-TAPPING (D) SCHRAUBE									(F) VIS (S) TORNILLO				
	09136-04005	. . B B B A A A									4				
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

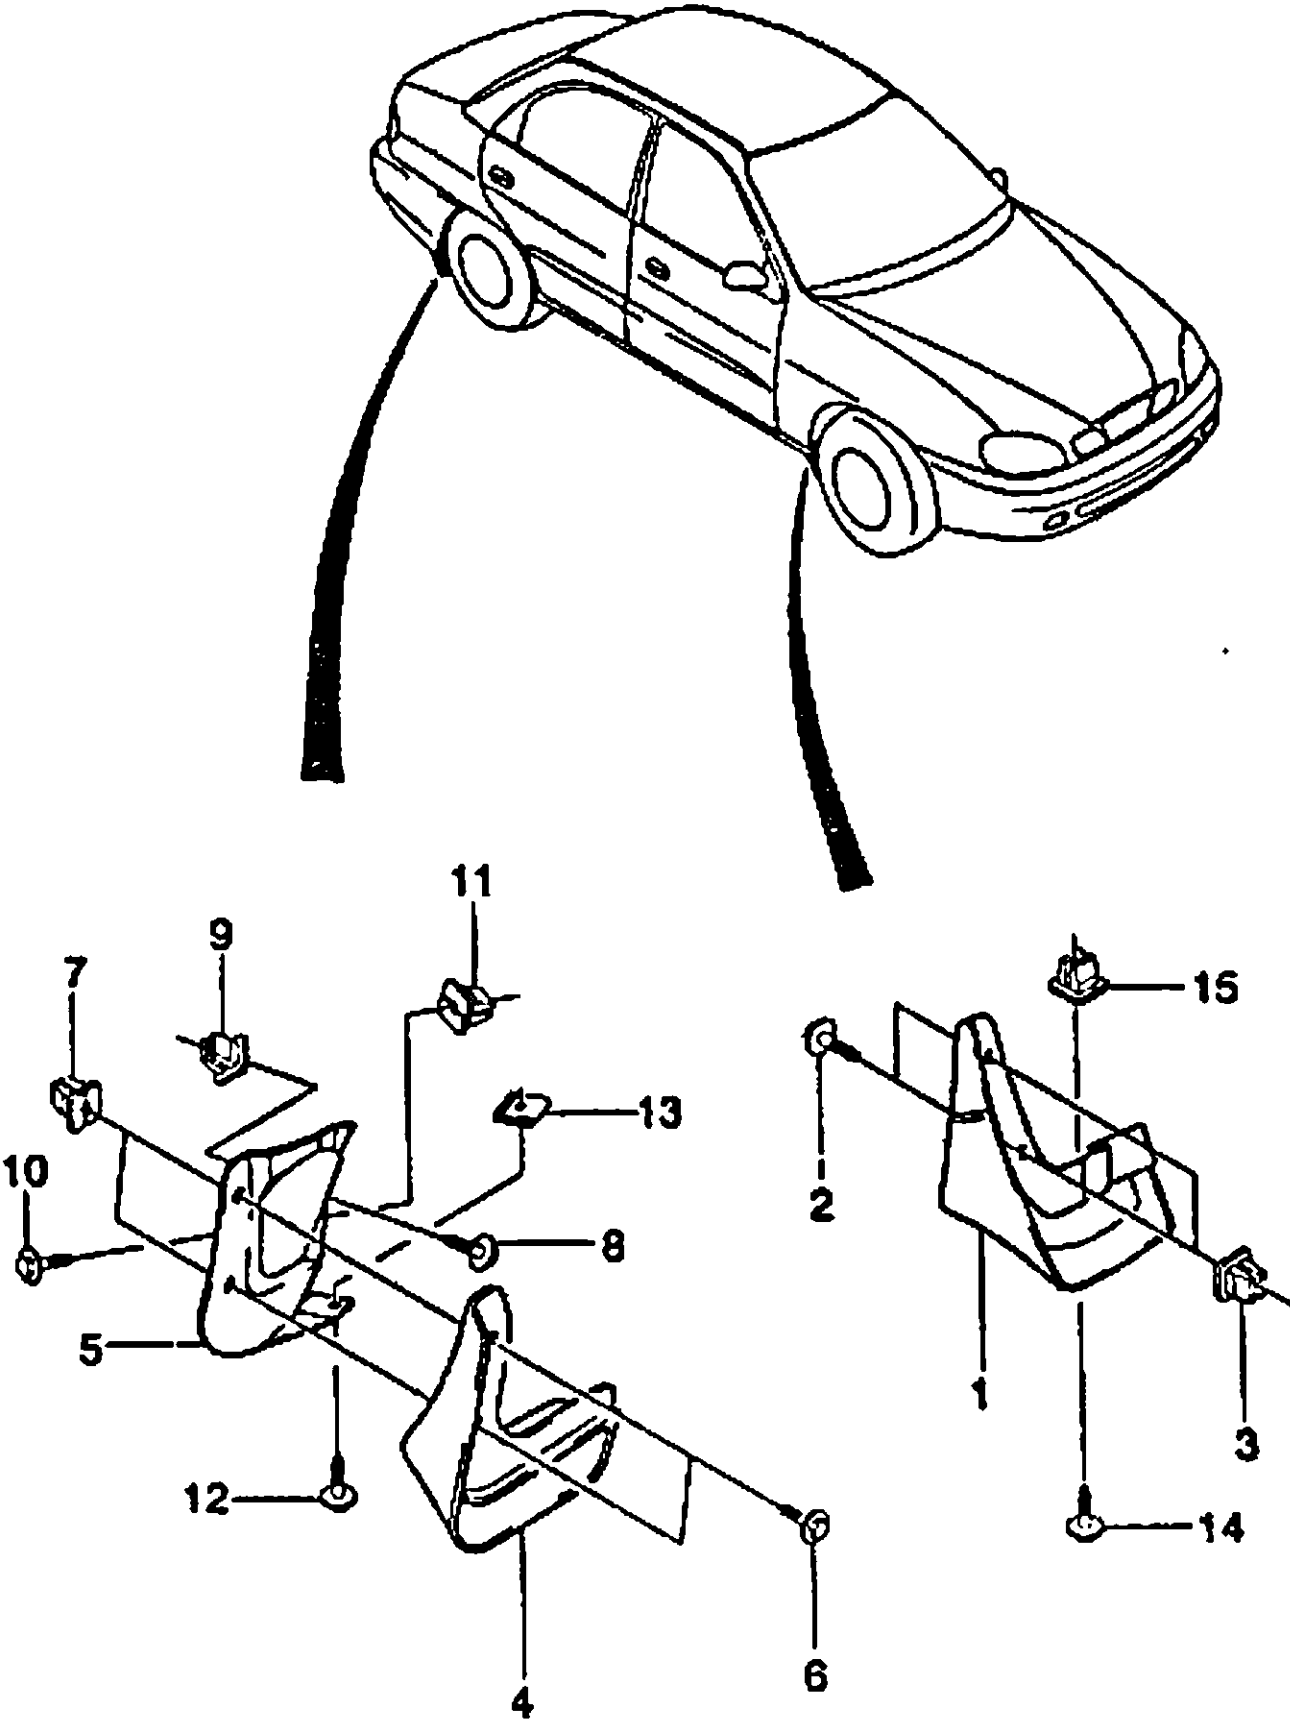

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[07]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA				
	09148-04010	. . B B B A A A									4				
	[08]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	09136-04005	. . B B B A A A									2				
	[09]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA				
	09148-04003	. . B B B A A A									2				
	[10]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	09136-04005	. . B B B A A A									2				
	[11]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA				
	09148-04003	. . B B B A A A									2				
	[12]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	09136-04005	. . B B B A A A									2				
	[13]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA				
	09148-04010	. . B B B A A A									2				
	[14]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	09136-04005	. . B B B A A A									2				
	[15]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA				
	09148-04003	. . B B B A A A									2				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

7**INTERIOR**


7110	INSTRUMENT PANEL	7540	REAR SEAT I
7120	MOLDING & SWITCH	7541	REAR SEAT II
7130	INSTRUMENT CENTER PARTS	7550	FRONT SEAT BELT
7140	CONSOLE	7560	REAR SEAT BELT
7210	FRONT DOOR TRIM	7610	FRONT FLOOR CARPET
7220	REAR DOOR TRIM	7620	REAR FLOOR CARPET
7310	HEADLINING	7630	DEADENER
7320	SHELF BACK PANEL		
7321	COVER-CENTER,LOAD COMPT		
7330	FRONT PILLAR TRIM (4DOOR N/B)		
7331	FRONT PILLAR TRIM (5DOOR H/B)		
7332	FRONT PILLAR TRIM (3DOOR H/B)		
7340	REAR PILLAR TRIM (N/B)		
7341	REAR PILLAR TRIM (H/B)		
7350	SUNSHADE & INSIDE MIRROR		
7510	FRONT SEAT		
7520	FRONT SEAT PARTS		
7530	SEAT GUIDE RAIL		

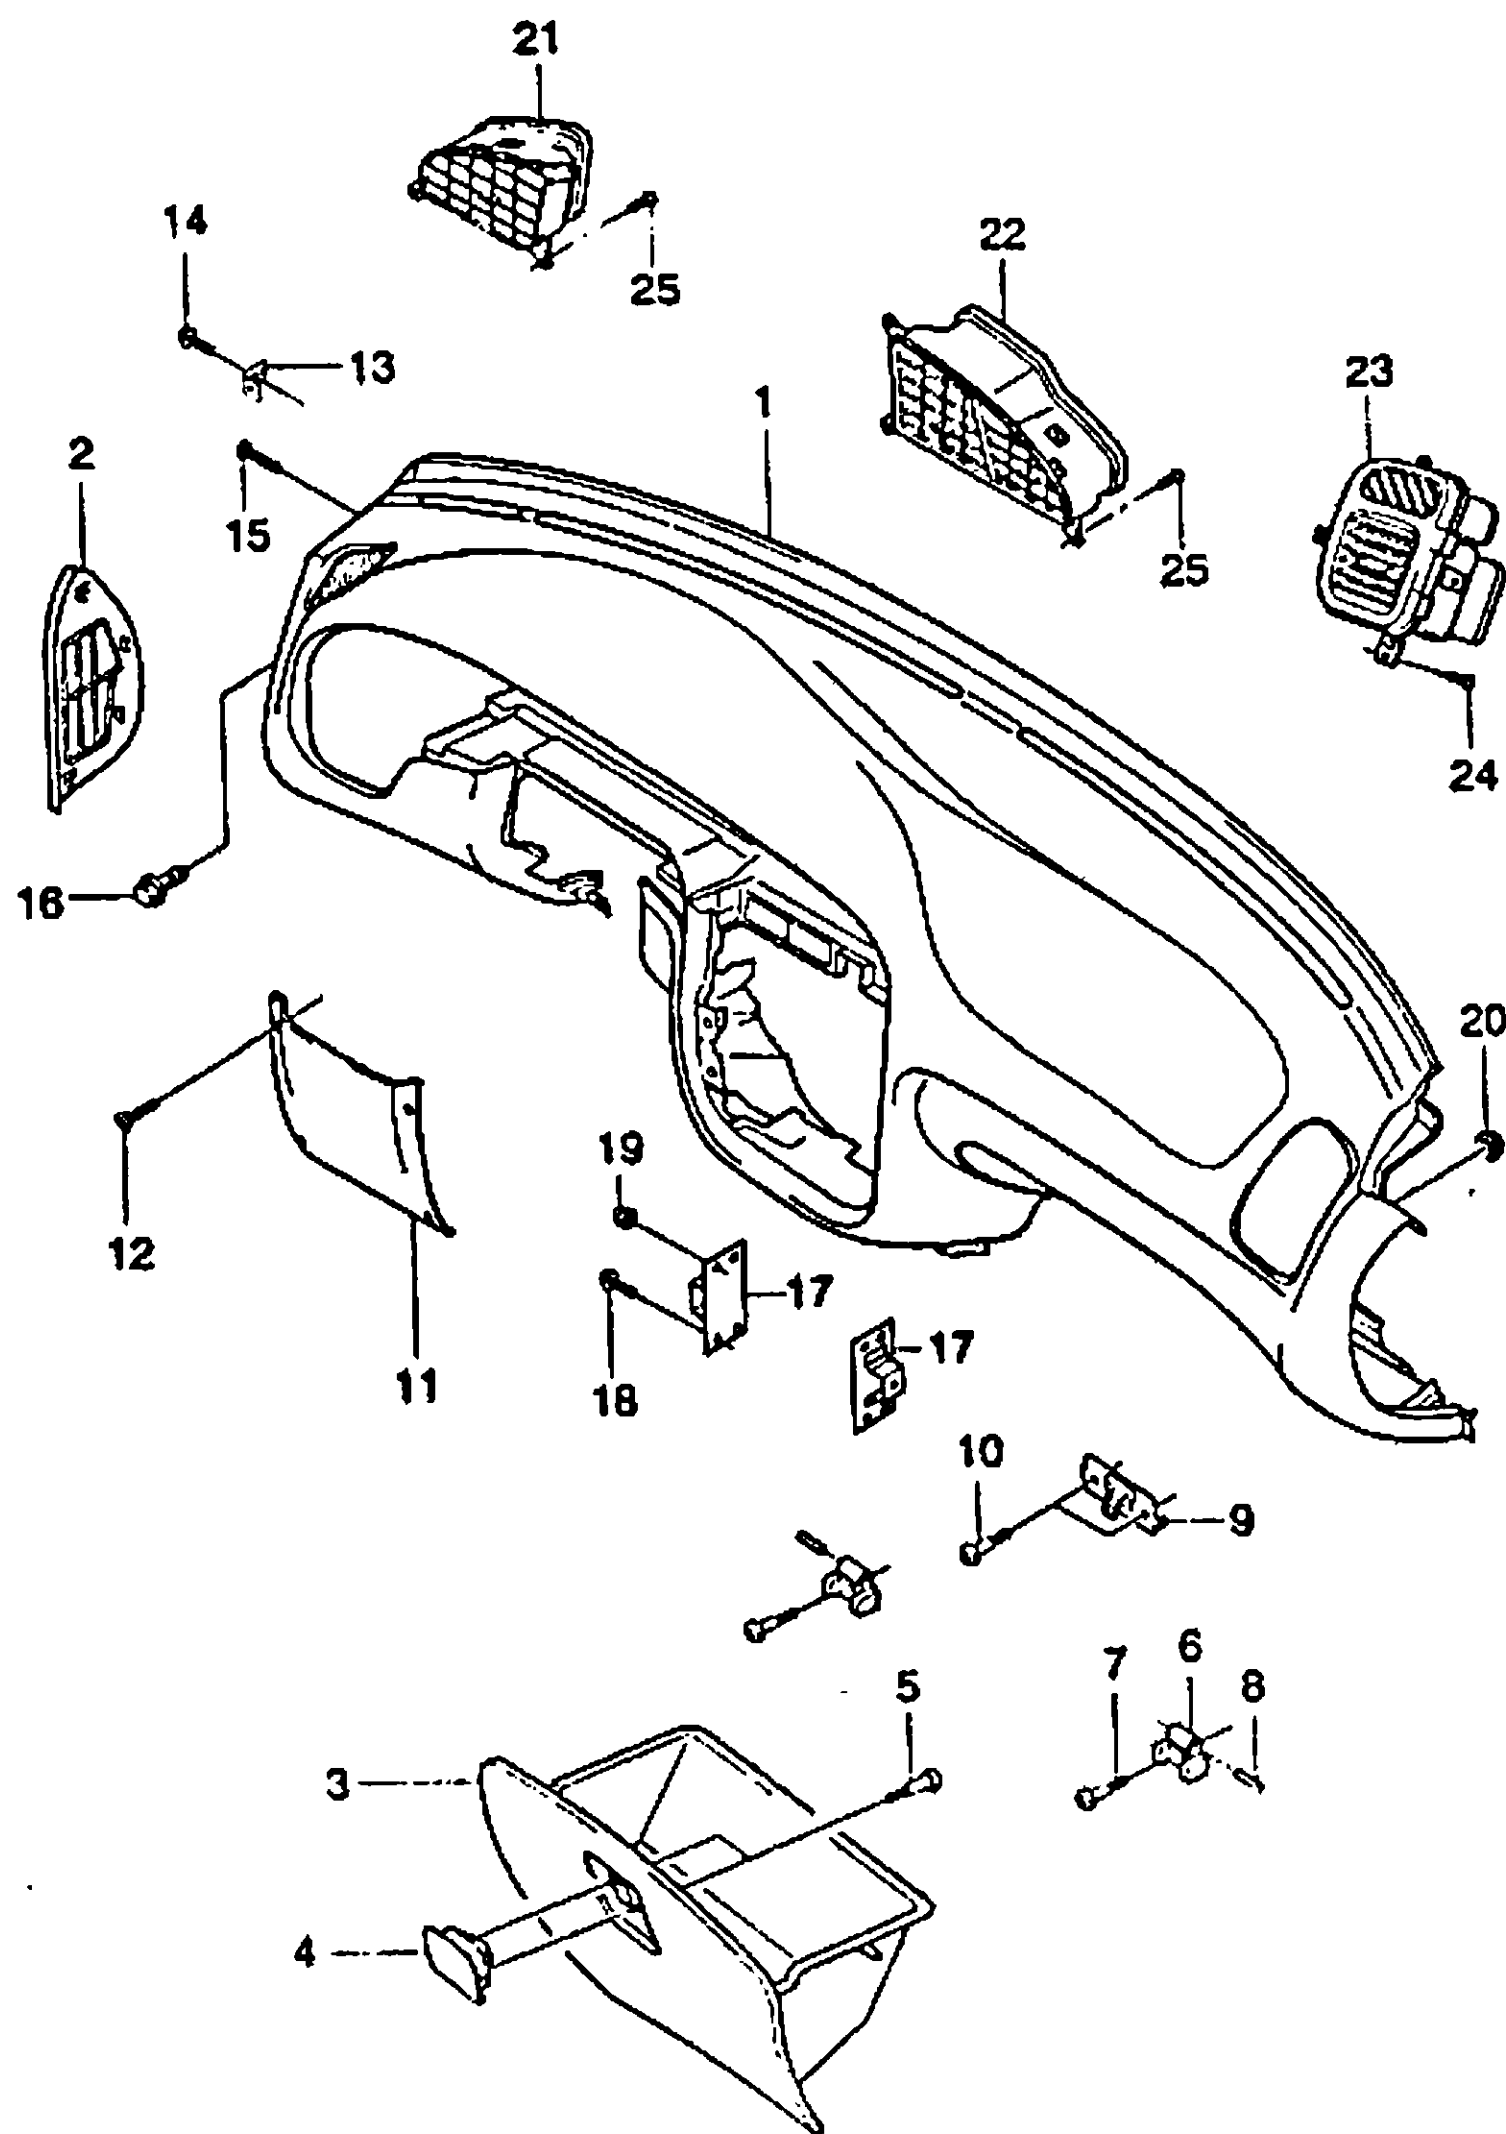


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)PANEL-INSTRUMENT (D)VERKLEIDUNG,INSTRUMENT									(F)PANNEAU-TABLEAU DE BORD (S)PANEL-INSTRUMENTO				
	96235802	. . B B B S S S -ABF								1					
	96235804	. . B B B . O O &ABF								1					
	[02]	(E)COVER-INST PANEL,SIDE (D)DECKEL									(F)CARTER (S)CUBIERTA				
	96246806	. . B B B S S S							LH	1				R3	
	96246808	. . B B B S S S							RH	1				R4	
	[03]	(E)BOX A-GLOVE (D)HANDSCHUHFACH									(F)BOITE-GANTS (S)CAJA-GUANTERA				
	96235825	. . B B B S S S -ABF								1		INCL. #4-6,8		R7	
	96235823	. . B B B . O O &ABF								1		INCL. #4-6,8		R5	
	[04]	(E)LOCK A-GLOVE BOX (D)SCHLOß,HANDSCHUHFACH									(F)VERROU-BOITE A GANTS (S)CERRADURA				
	96235836	. . B B B S S S								1					
	[05]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	02124-04123	. . B B B S S S								2					
	[06]	(E)HINGE-GLOVE BOX (D)BESCHLAG,HANDSCHUHFACH									(F)CHARNIERE-BOITE A GANTS (S)BISAGRA				
	96221361	. . B B B S S S								2					
	[07]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	02146-15205	. . B B B S S S								2					
	[08]	(E)PIN-GLOVE BOX (D)STIFT,HANDSCHUHFACH									(F)BROCHE-BOITE A GANTS (S)PASADOR-GUANTERA				
	96221307	. . B B B S S S								2					
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

7110 INSTRUMENT PANEL


5C15

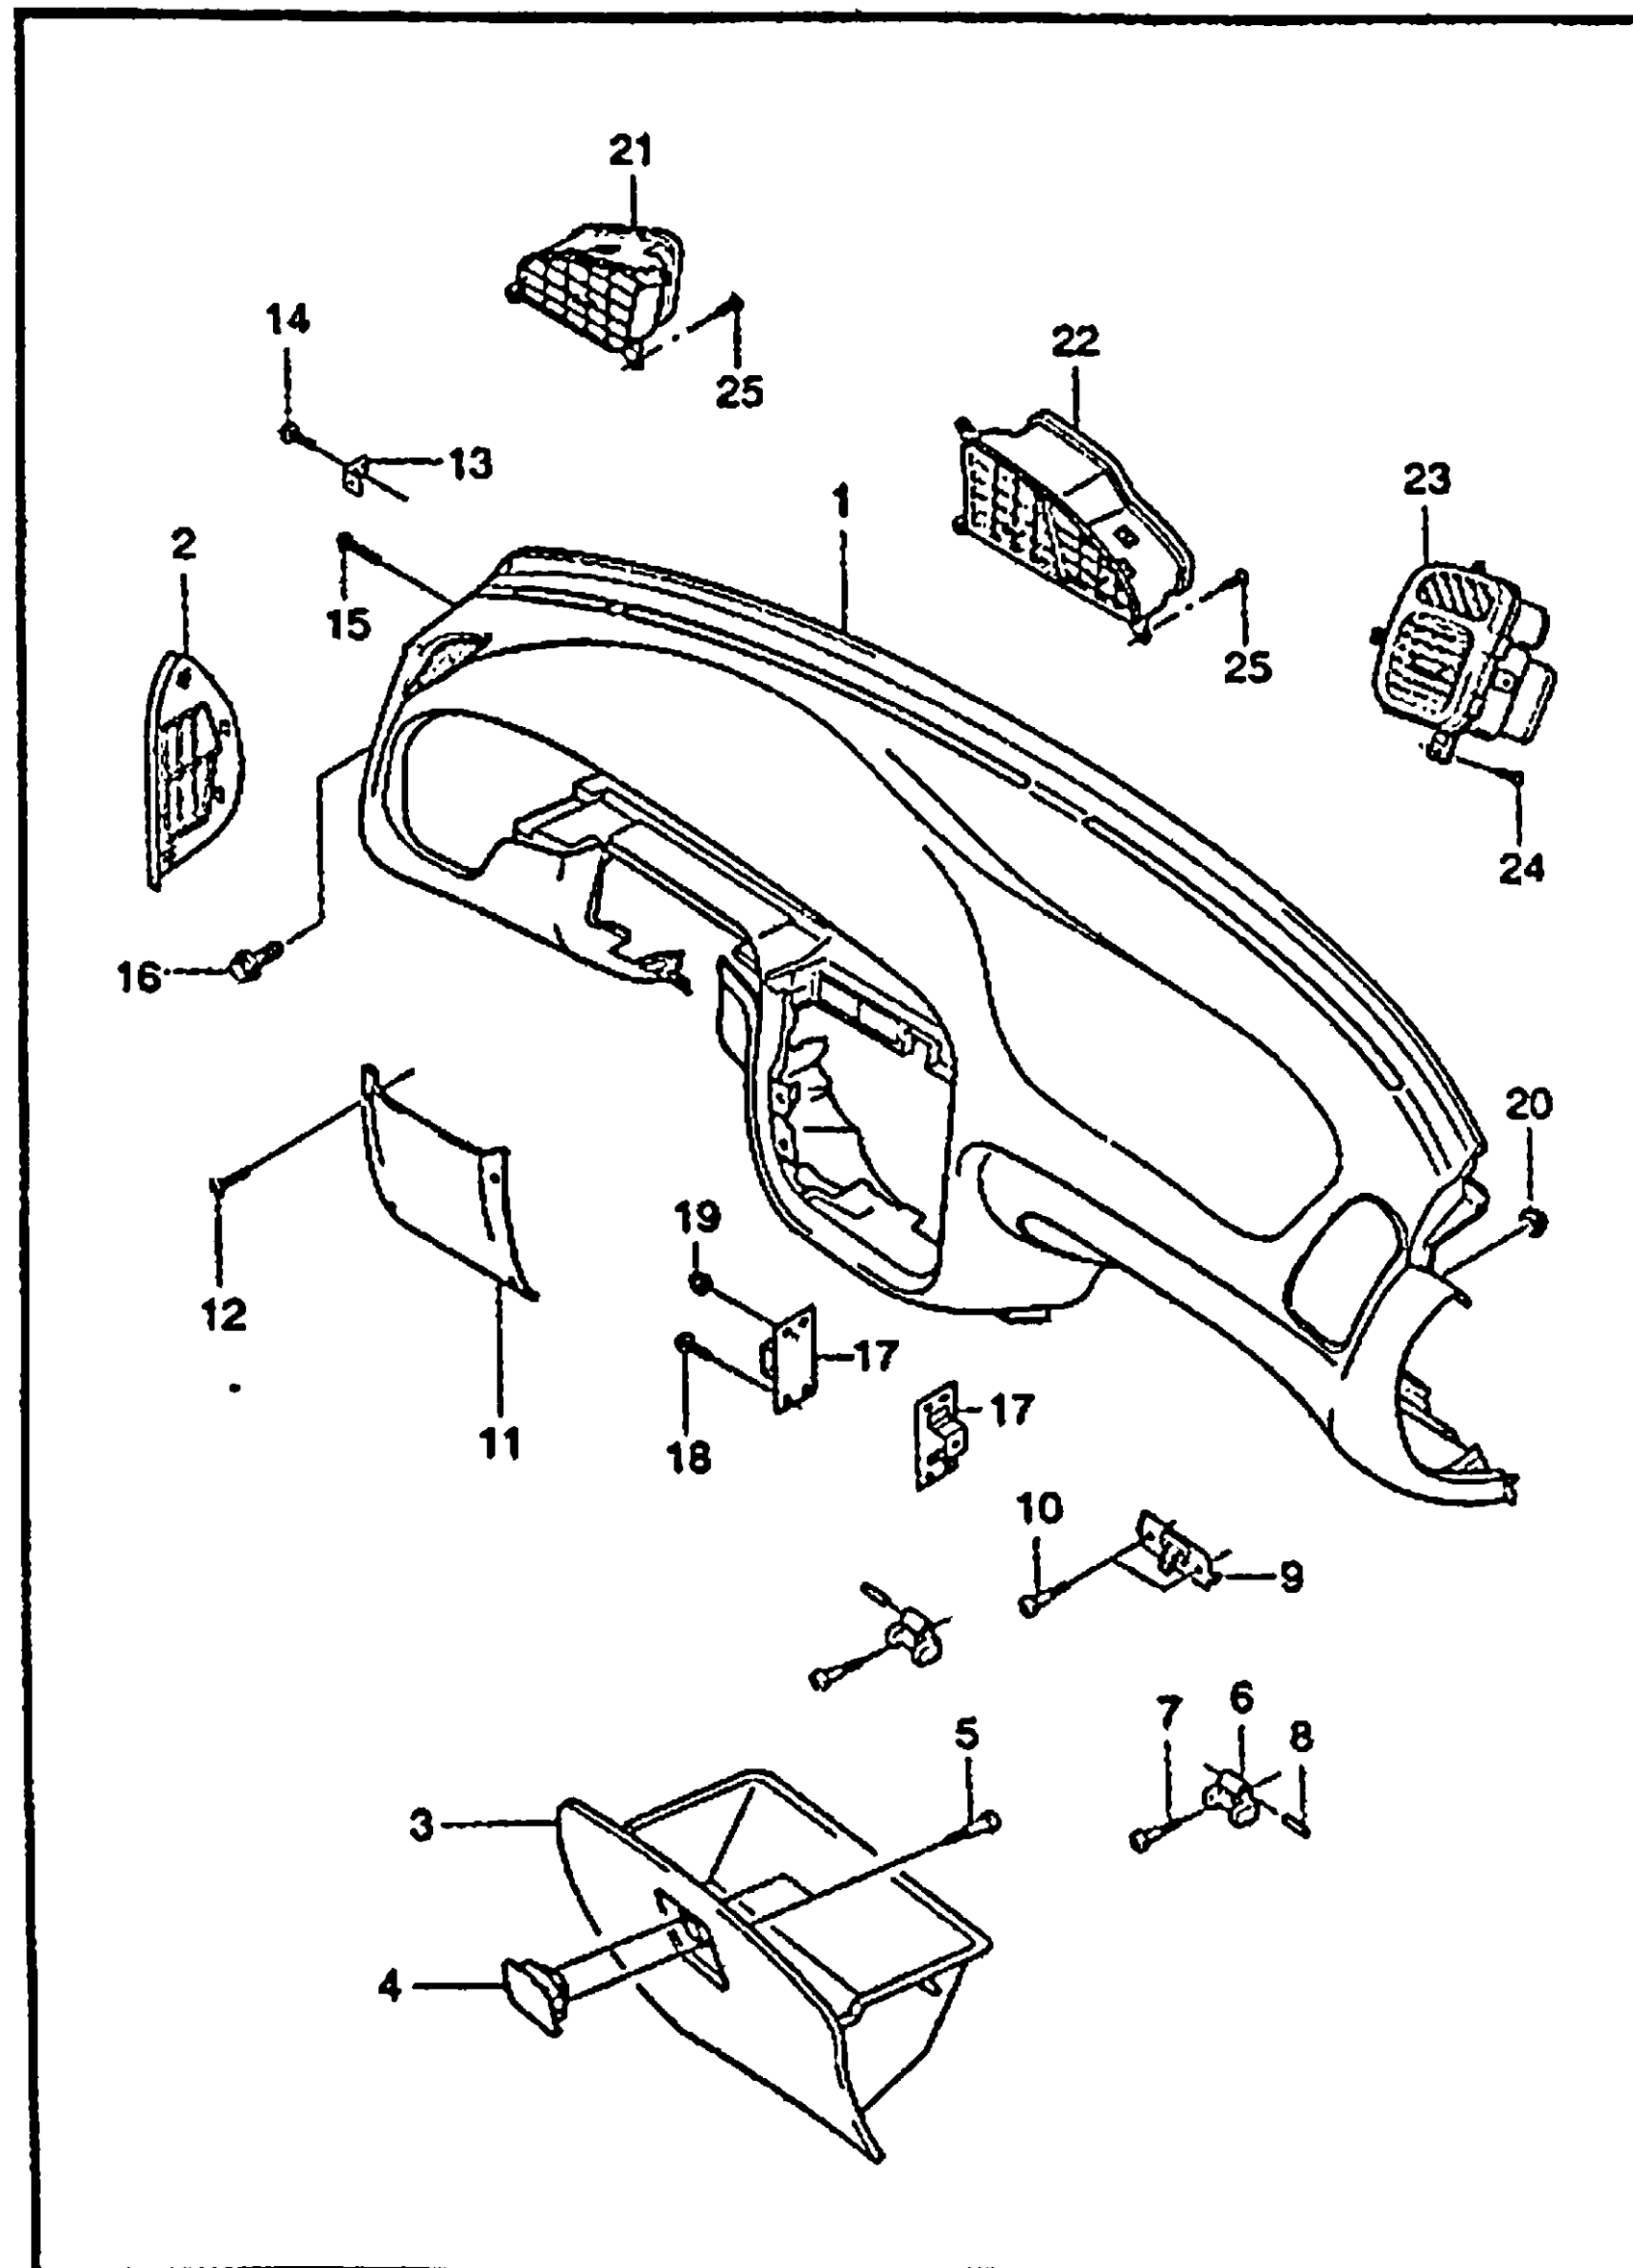

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E T N / G	BODY			LEVEL	FROM				TO			
			4 N H	3 H	6 S							S S S S S		
	[09]	(E)STRIKER A-GLOVE BOX (D)SCHLÄGER							(F)MARTEAU (S)HUELGUISTA					
	96221301	. . . B B B S S S							1					
	[10]	(E)SCREW (D)SCHRAUBE							(F)VIS (S)TORNILLO					
	02146-15165	. . . B B B S S S							2					
	[11]	(E)COVER-INST PANEL, LOWER (D)DECKEL							(F)CARTER (S)CUBIERTA					
	96235788	. . . B B B S S S							1					R3
	[12]	(E)SCREW-TAPPING (D)SCHRAUBE							(F)VIS (S)TORNILLO					
	03160-48165	. . . B B B S S S							4					
	[13]	(E)BRACKET A-INST PANEL, SIDE (D)TRÄGER							(F)SUPPORT (S)SOPORTE					
	96307185	. . . B B B S S S							2					
	[14]	(E)BOLT-HEXAGON (D)SCHRAUBE							(F)BOULON (S)PERNO					
	01107-06123	. . . B B B S S S							2					
	[15]	(E)SCREW (D)SCHRAUBE							(F)VIS (S)TORNILLO					
	02146-15165	. . . B B B S S S							2					
	[16]	(E)BOLT (D)SCHRAUBE							(F)BOULON (S)PERNO					
	09116-08008	. . . B B B S S S							6			WASHER		
	[17]	(E)PIECE A-CONNECTING (D)TEIL, VERBINDUNG							(F)PIECE-DE CONNEXION (S)PIEZA-CONEXION					
	96214161	. . . B B B S S S							LH 1					
	96214201	. . . B B B S S S							RH 1					
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

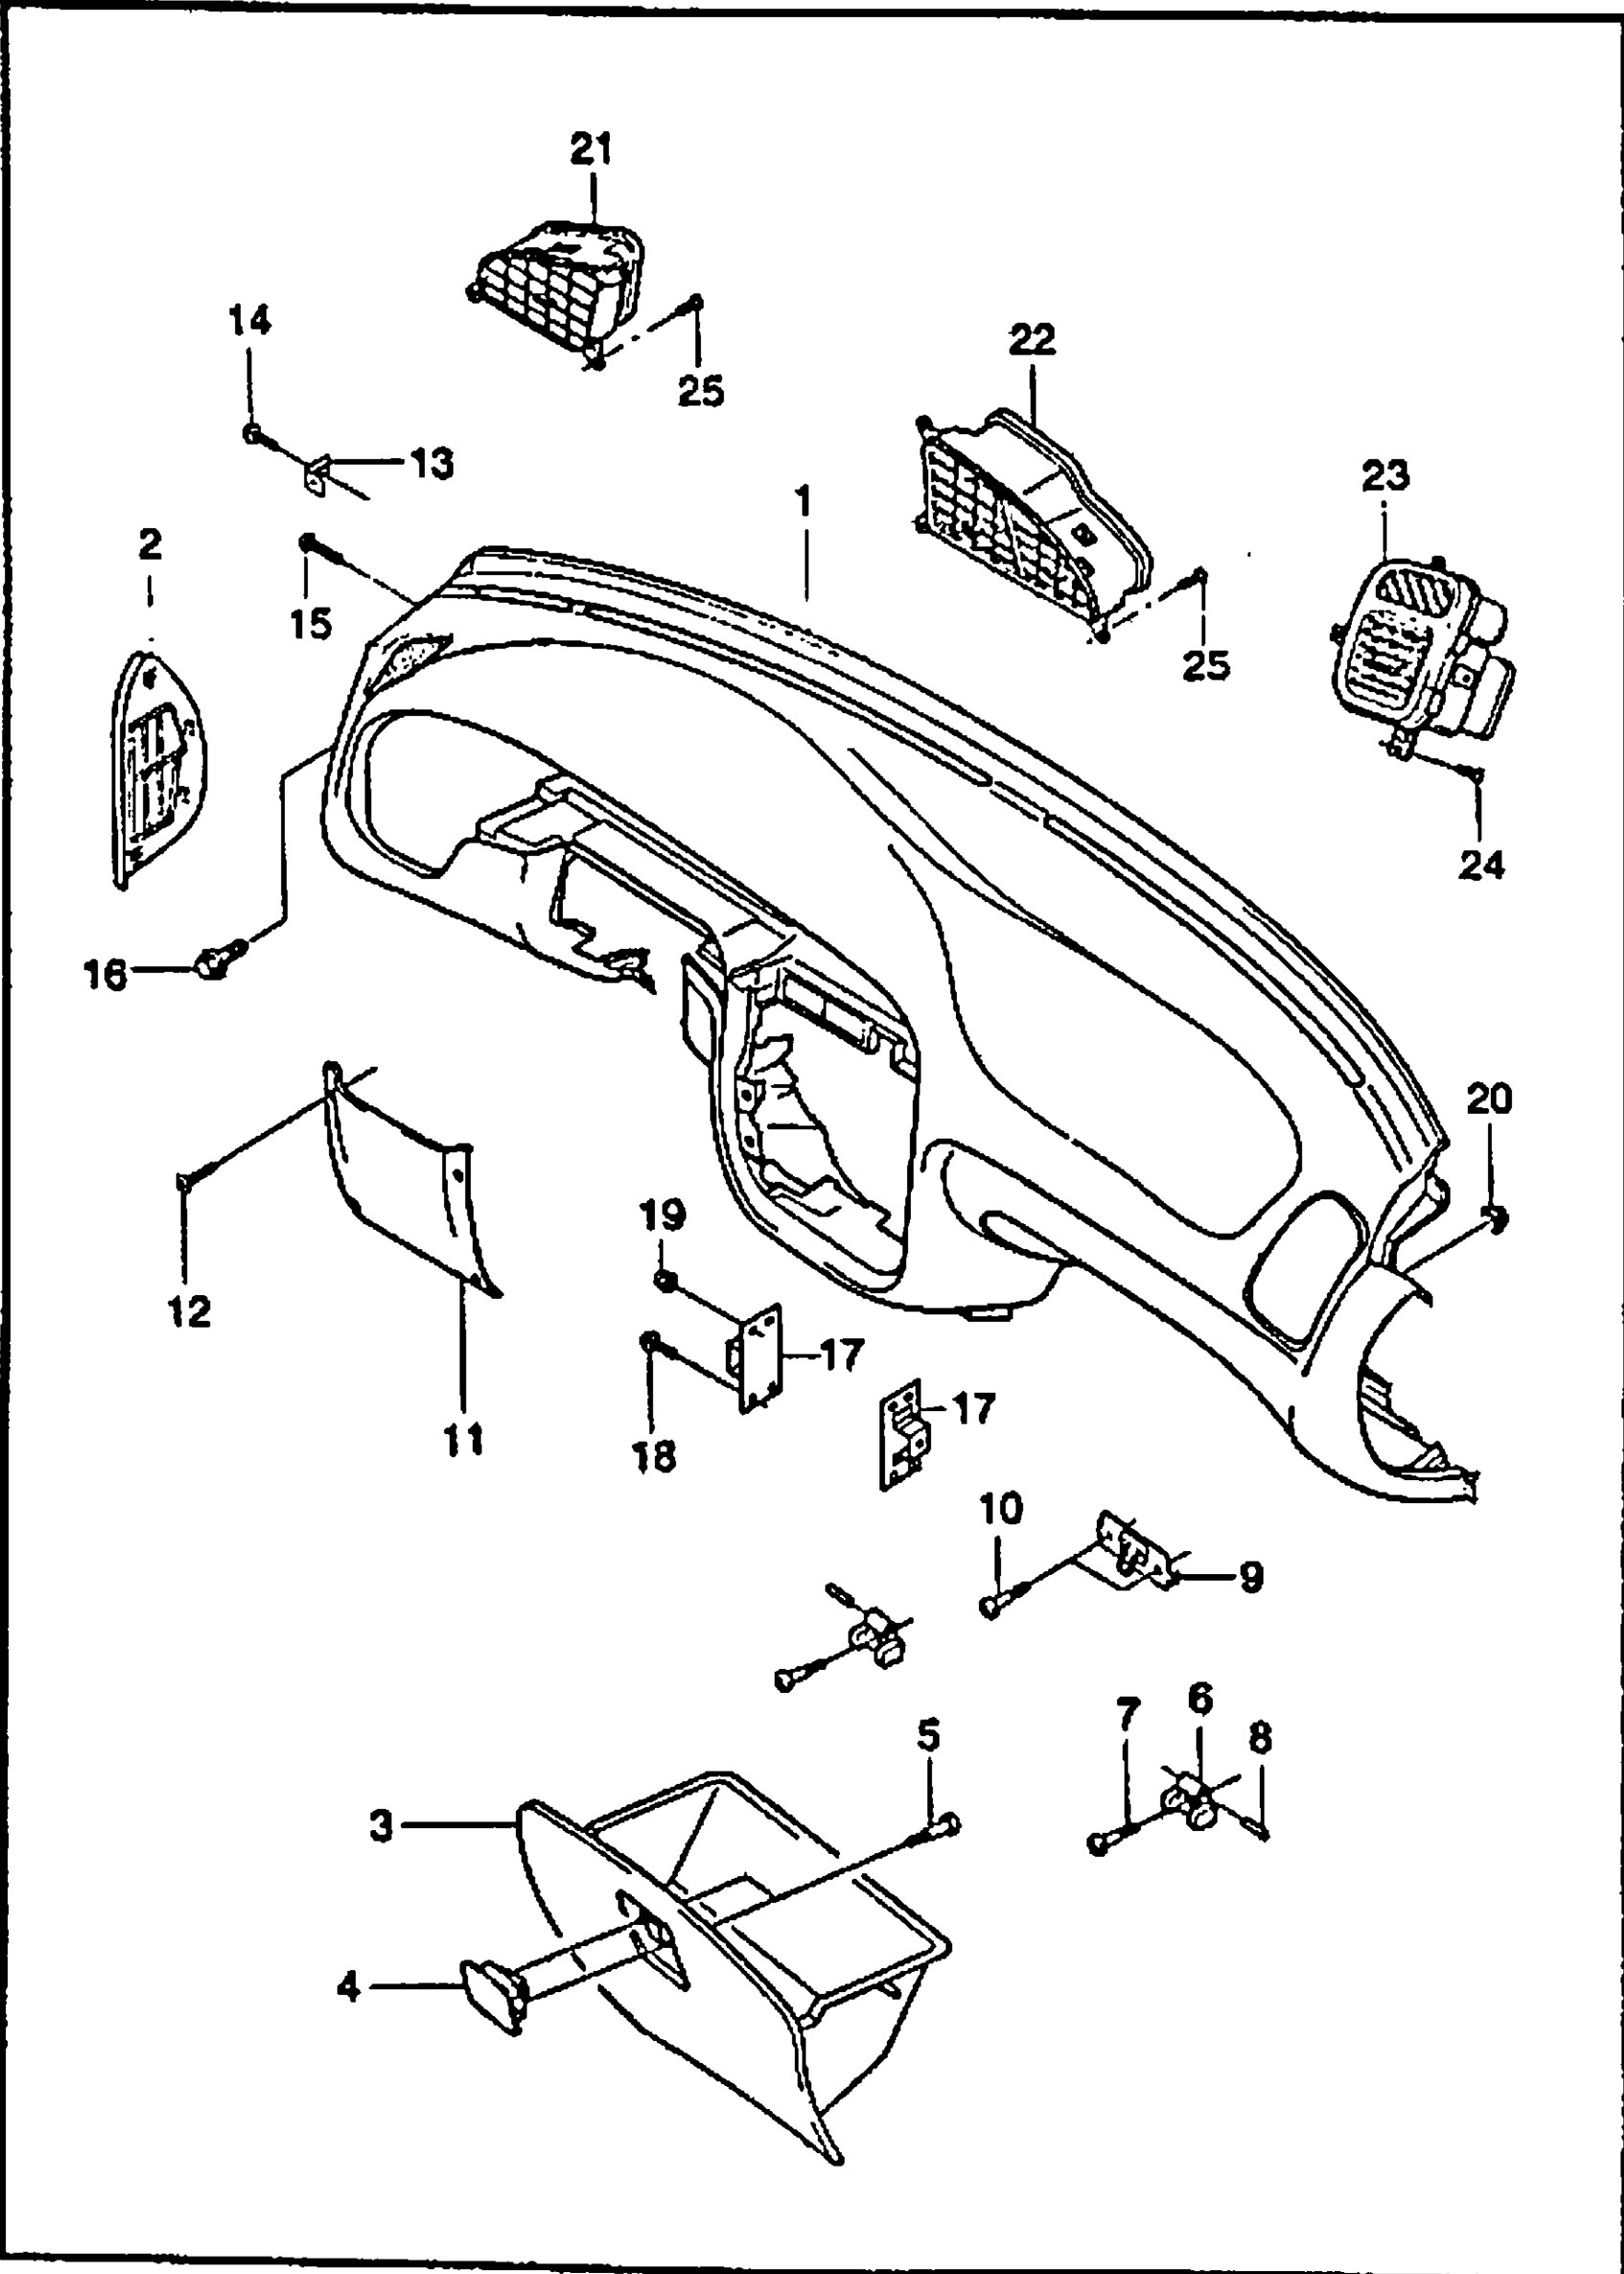


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[18] 01117-06123	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO					
		. . B B B S S S									4					
	[19] 08316-15063	(E)NUT-HEXAGON FLANGE (D)MUTTER									(F)ECROU (S)TUERCA					
		. . B B B S S S									4					
	[20] 08316-28083	(E)NUT-HEXAGON (D)MUTTER									(F)ECROU (S)TUERCA					
		. . B B B S S S									2					
	[21] 96241655	(E)NOZZLE A-VENT.,DRIVER (D)ABFLUß,LUFT									(F)SORTIE-AIR (S)SALIDA-AIRE					
		. . B B B S S S									LH 1					
	[22] 96241653	(E)NOZZLE A-VENT.,CENTER (D)ABFLUß,LUFT									(F)SORTIE-AIR (S)SALIDA-AIRE					
		. . B B B S S S									1					
	[23] 96235809	(E)NOZZLE A-VENT.,ASSIST. (D)ABFLUß,LUFT									(F)SORTIE-AIR (S)SALIDA-AIRE					
		. . B B B S S S									RH 1					
	[24] 03140-48165	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
		B B B														
	03160-48165	. . B B B S S S									4					
	[25] 03240-42165	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
		. . B B B S S S									6					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

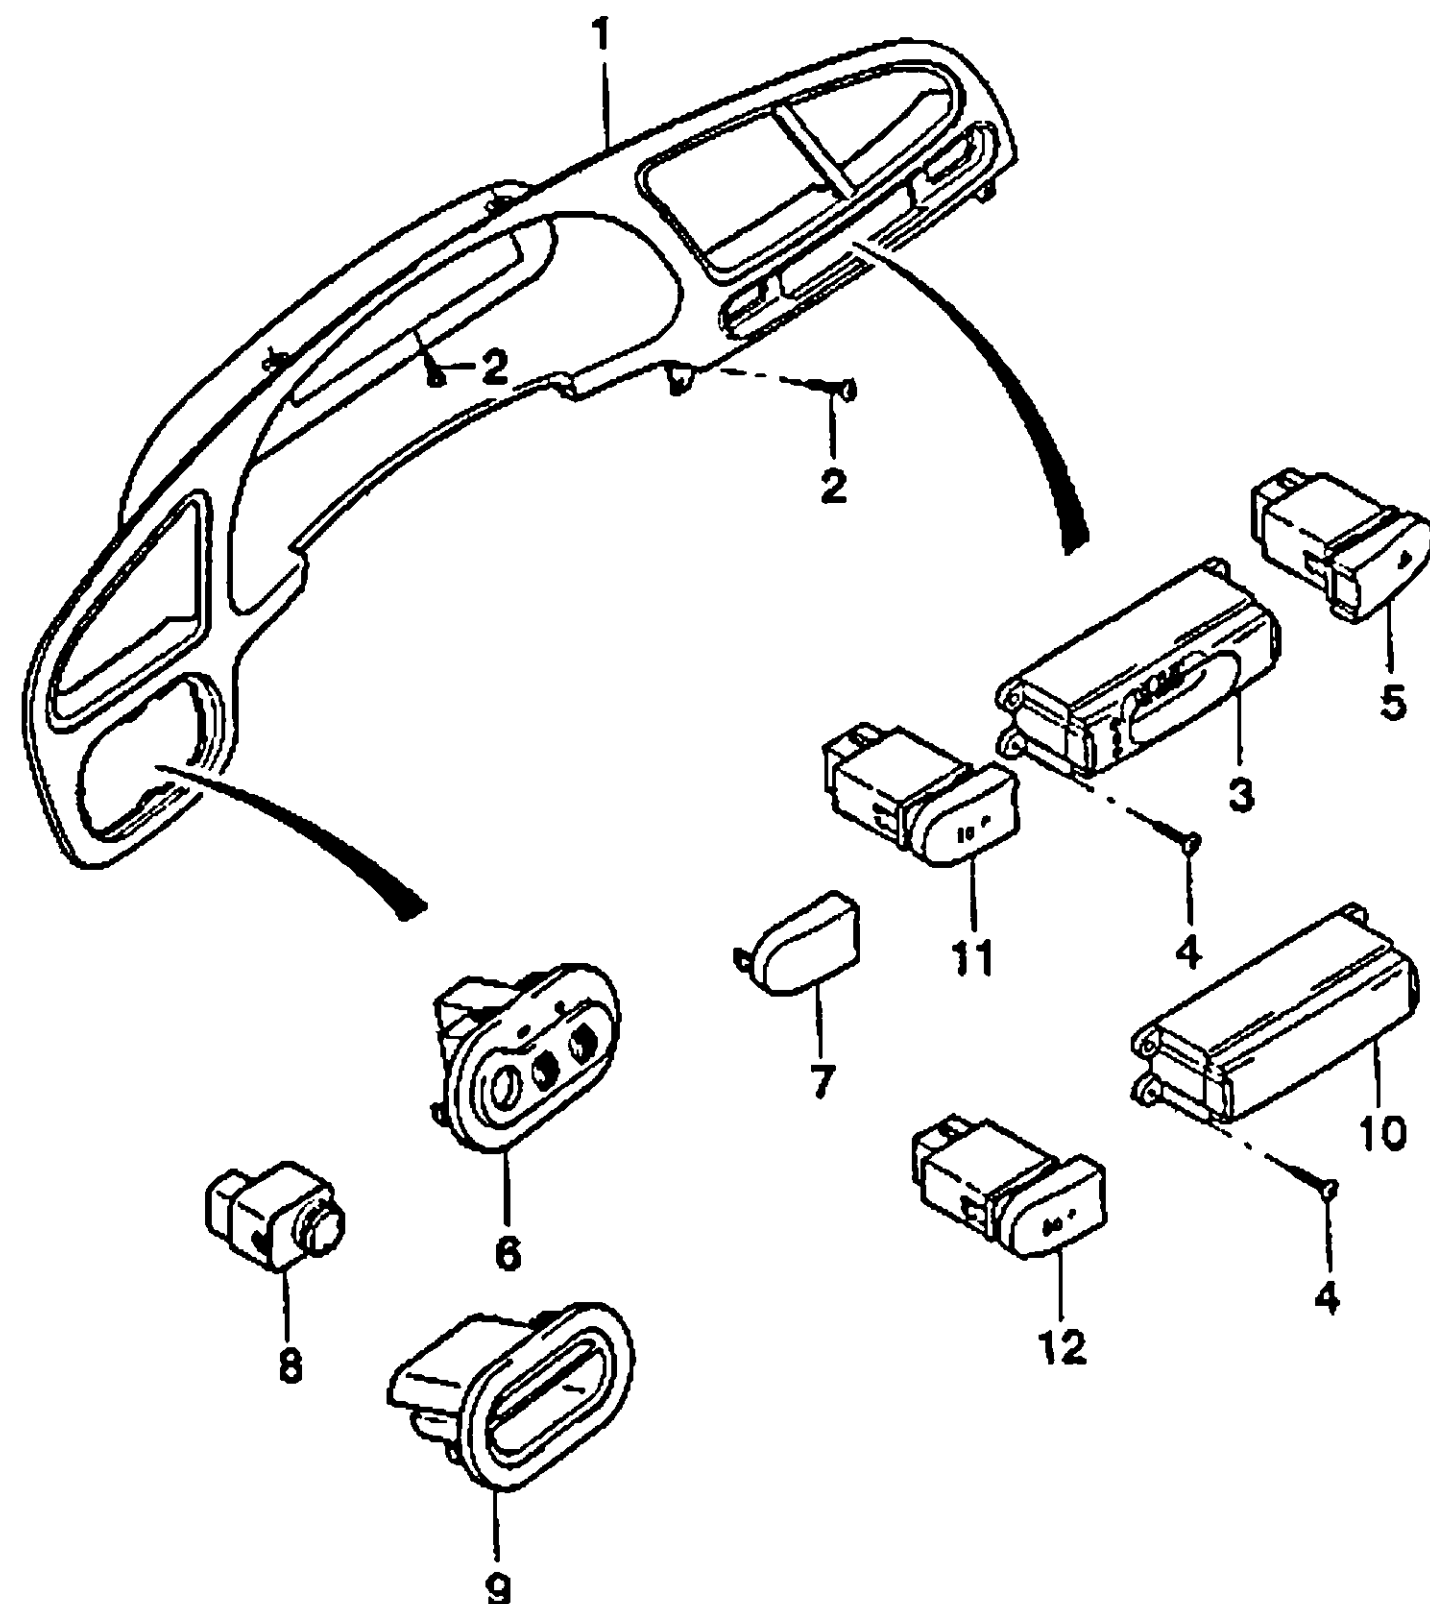


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q / Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S S				S S	X		
	[01]	(E)HOUSING-INSTRUMENT CLUSTE (D)GEHÄUSE ARMATURENBRETT									(F)LOGEMENT-GRAPPE (S)CARCASA-TABLERO DE INSTRU			
	96240807	. . B B B S S S								1	970602		B3	
	96255623	. . B B B S S S						-N33		1	970602		B5	
	96240807	. . B B B . . O						&N33		1	970602		B3	
	96240807	. . B B B . O O						&N33		1		POLAND ONLY	B3	
	[02]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO			
	03160-48165	. . B B B S S S								8				
	[03]	(E)CLOCK A-DIGITAL (D)UHR,DIGITAL									(F)HORLOGE-DIGITALE (S)RELOJ-DIGITAL			
	96236122	. . B B B O S S						-UM1		1			CA	
	96236123	. . B B B A A A						&UM1		1			CB	
	[04]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO			
	03110-42135	. . B B B S S S								2				
	[05]	(E)SWITCH A-HAZARD LIGHT (D)SCHALTER,WARNBLINKER									(F)COMMUTATEUR (S)INTERRUPTOR			
	96231858	. . B B B S S S								1			HY	
	[06]	(E)SWITCH A-HOUSING (D)SCHALTER									(F)COMMUTATEUR (S)INTERRUPTOR			
	96230809	. . B B B . . O						&DD4-HL4		1			ME	
	96230807	. . B B B . . A						&DD4&HL4		1			MB	
	96230811	. . B B B A A A						&HL4-DD4		1			MH	
	[07]	(E)COVER-BLANK, F/LAMP S/W (D)DECKEL									(F)COUVERCLE (S)CUBIERTA			
	96230804	. . B B B S S S						-T97/T98		1			DC	


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

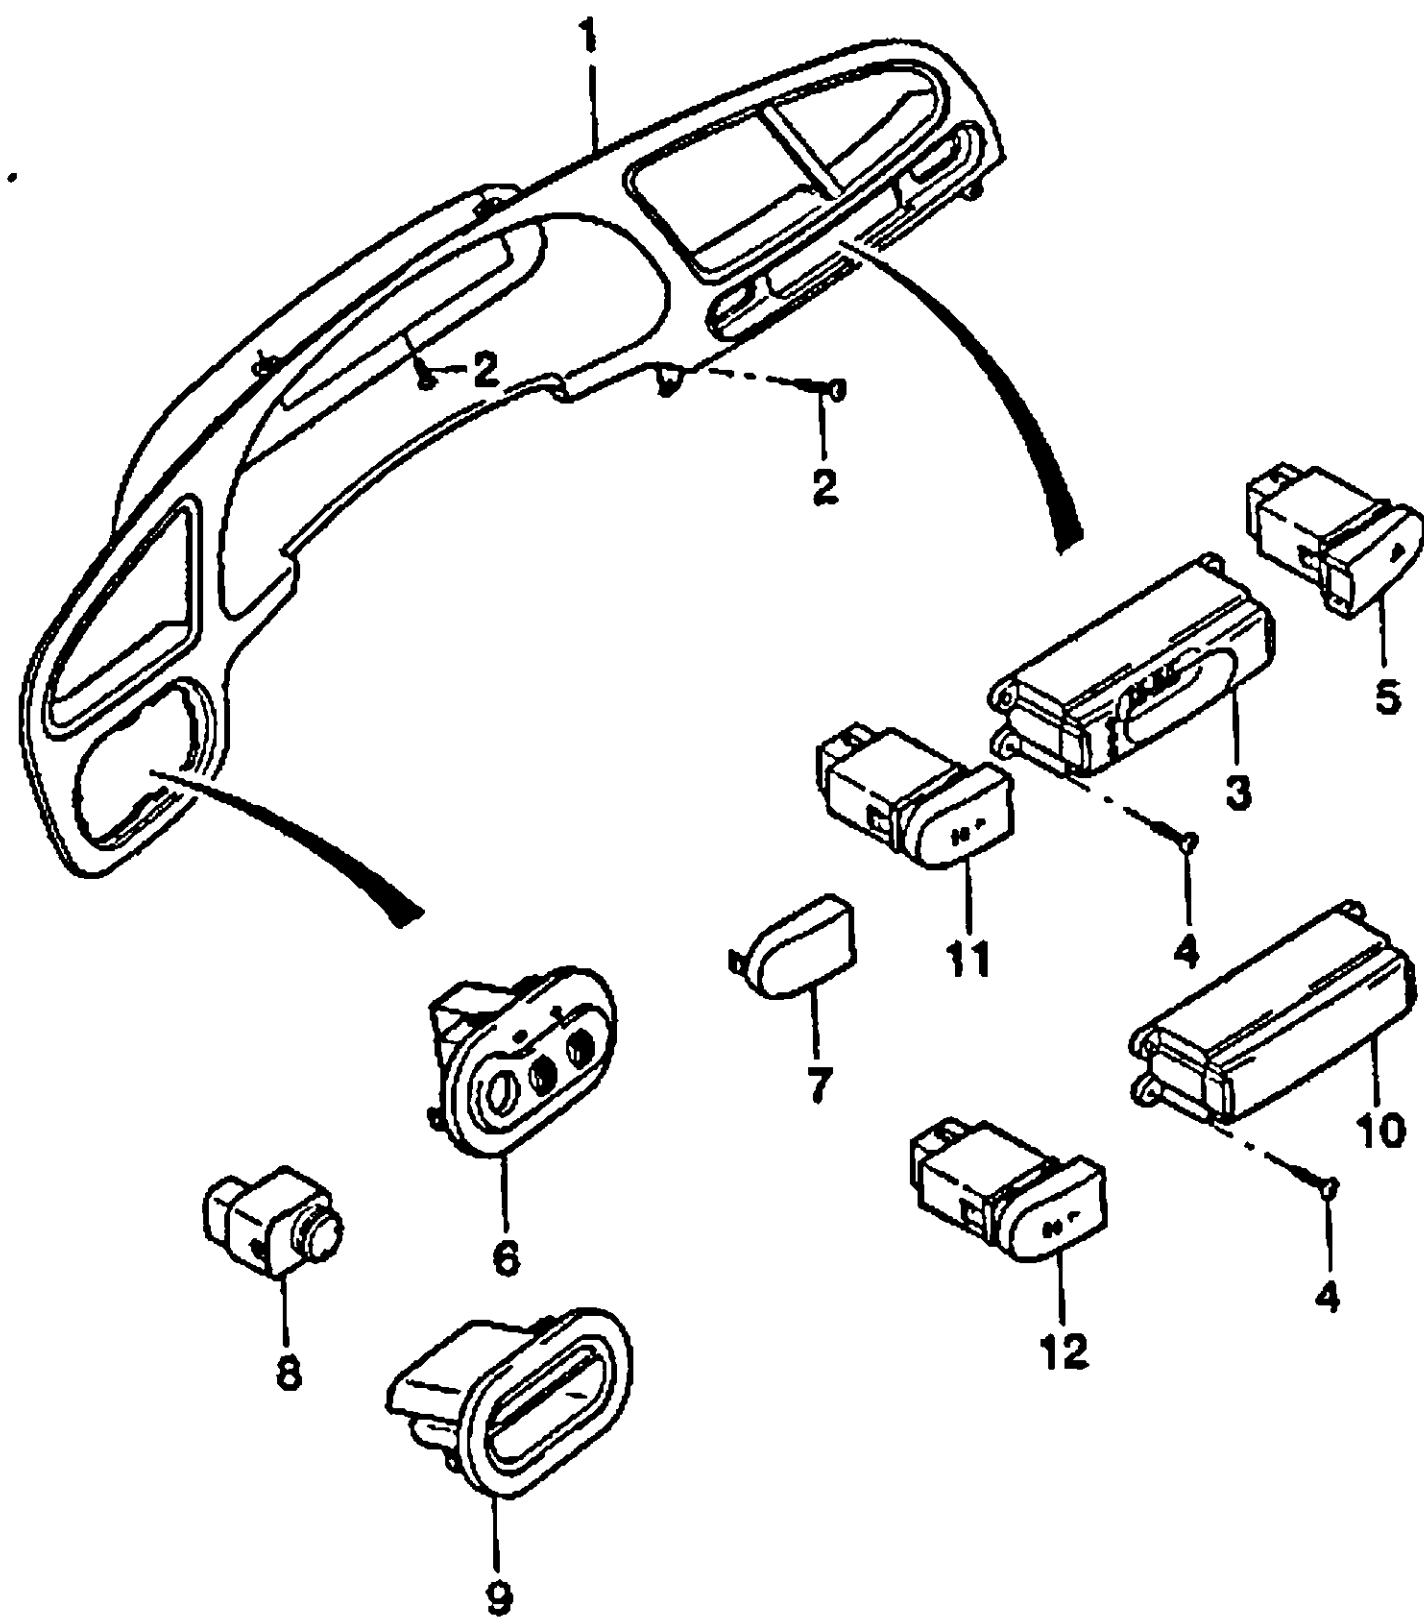


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[08] 96230818	(E)SWITCH A-MIRROR ADJUST (D)SCHALTER		B	B	B					O	&DD4	(F)COMMUTATEUR (S)INTERRUPTOR	1	KP	
	[09] 96242595	(E)BOX A-DEPOSIT, CARD (D)KASTEN		B	B	B		S	S	S			(F)BOITE-DEPOT (S)CAJA DE DEPOSITOS	1		
	[10] 96236126	(E)COVER-BLANK,CLOCK (D)DECKEL		B	B	B		S					(F)COUVERCLE (S)CUBIERTA	1	CC	
	96236127			B	B	B		A						1	CD	
	[11] 96230802	(E)SWITCH A-FOG LAMP (D)SCHALTER		B	B	B					O	O &T97-T98	(F)COMMUTATEUR (S)INTERRUPTOR	1	DA	
	[12] 96242528	(E)SWITCH A-FOG LAMP,REAR (D)SCHALTER		B	B	B		A	A	A			(F)COMMUTATEUR (S)INTERRUPTOR	1	DE	
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

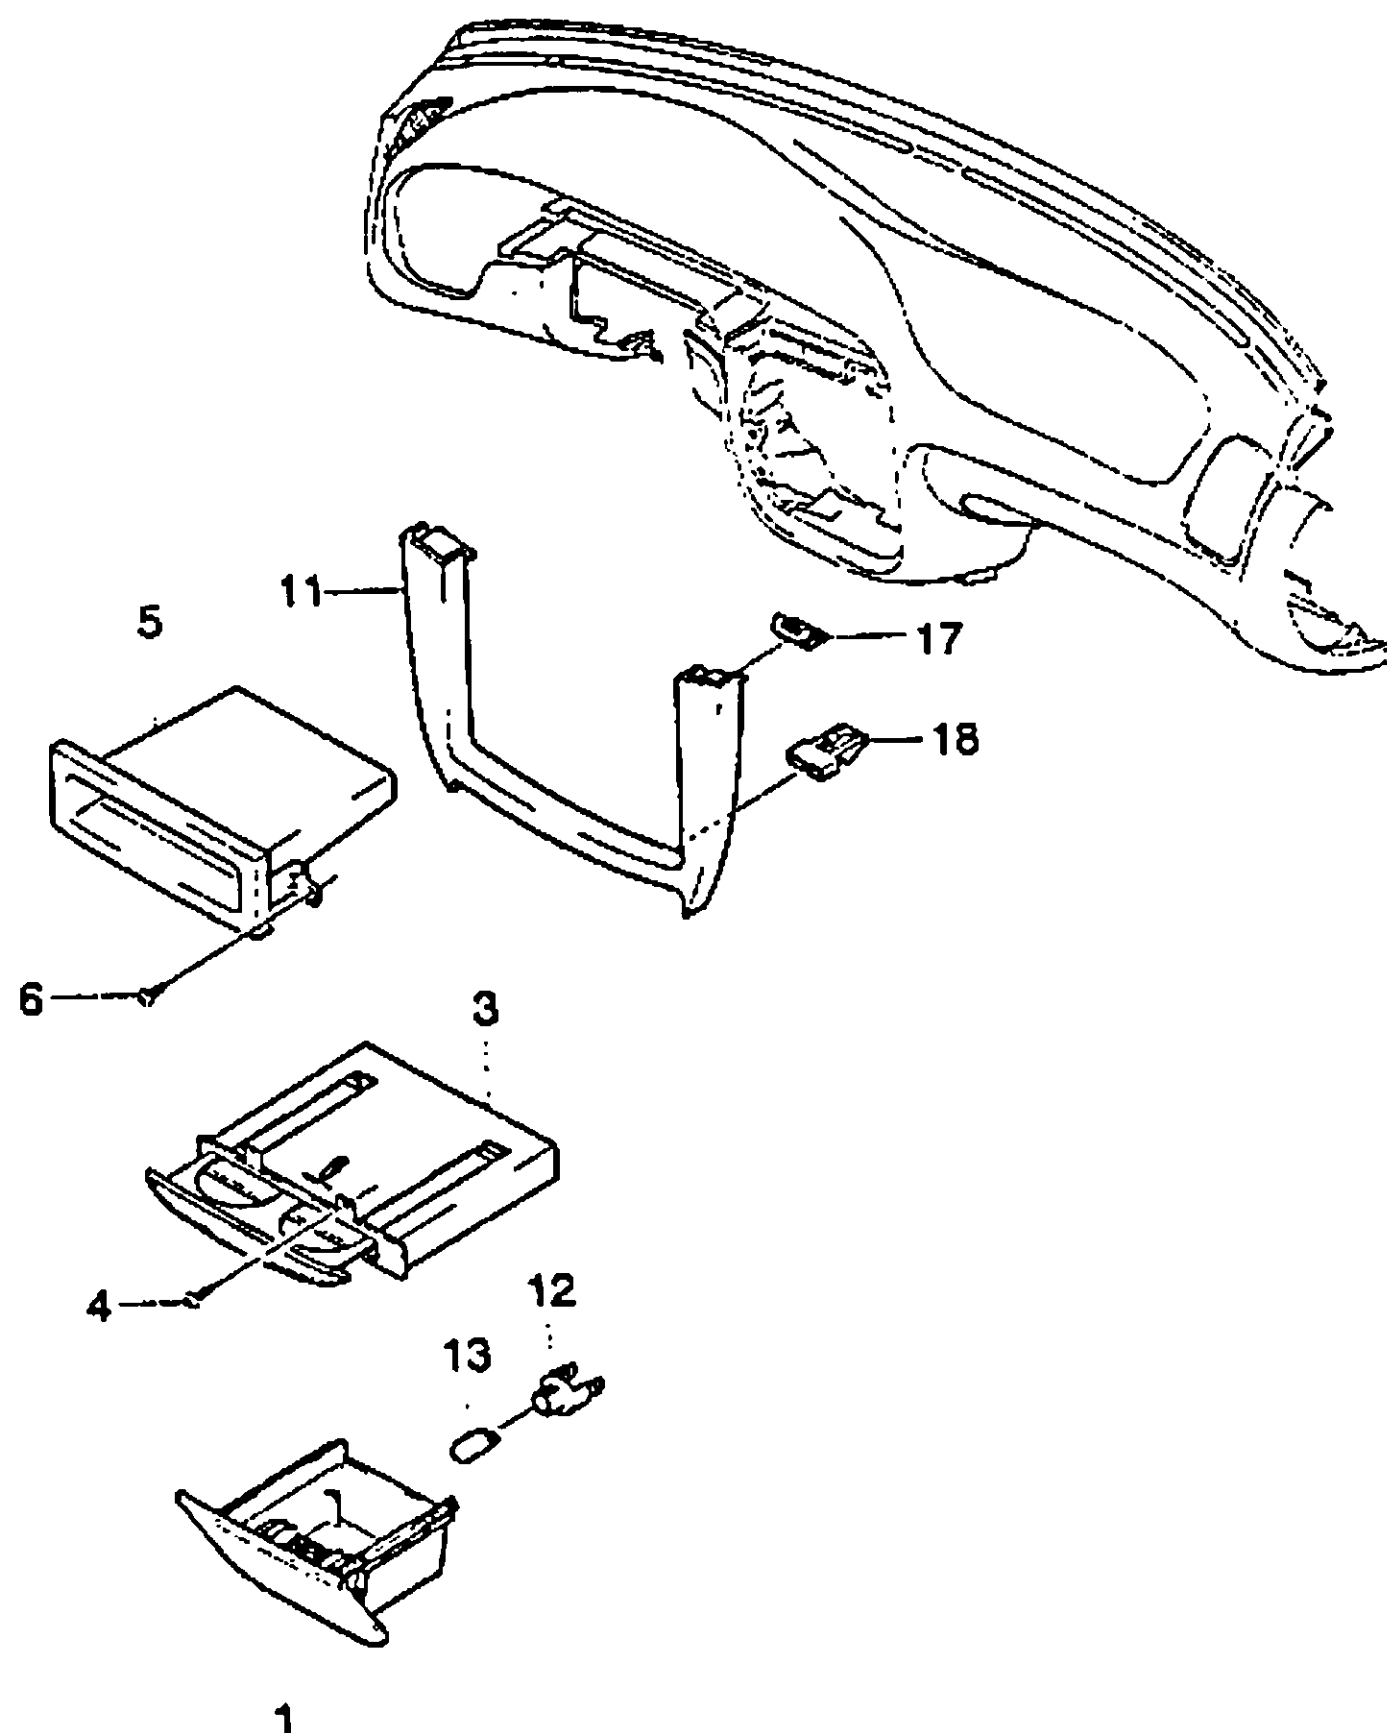

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01] 96235808	(E)ASHTRAY A-INSTRUMENT PNL (D)ASCHEMBECHER	. .	B	B	B	S	S	S		(F)CENDRIER-TABLEAU DE BORD (S)CENICERO	1			
	[03] 96242957	(E)HOLDER A-CUP (D)BEHÄLTER	. .	B	B	B	S	S	S		(F)MONTURE (S)RETNE DOR	1			
	[04] 03160-42165	(E)SCREW-TAPPING (D)SCHRAUBE	. .	B	B	B	S	S	S		(F)VIS (S)TORNILLO	2			
	[05] 96304289	(E)BOX-UP CENTER DEPOSIT (D)ZENTRAL-FACH	. .	B	B	B	S	S	S		(F)BOITE-DEPOT CENTRAL (S)CAJA-DEPOSITO	1		B1	
	[06] 02116-05165	(E)SCREW (D)SCHRAUBE	. .	B	B	B	S	S	S		(F)VIS (S)TORNILLO	2			
	[11] 96303173	(E)BEZEL A-AUDIO (D)KASTEN	. .	B	B	B	S	S	S		(F)BISEAU (S)BISEL	1		B2	
	[12] 11067612	(E)SOCKET (D)FASSUNG;BIRNE	. .	B	B	B	S	S	S		(F)CULOT-AMPOULE (S)ENCHUFE-BOMBILLA	1			
	[13] 11062449	(E)BULB (D)BIRNE	. .	B	B	B	S	S	S		(F)AMPOULE (S)BOMBILLA	1			
	Y 09471-12012	(E)FRAME-CASSETTE (D)RAHMEN-KASSETTE	. .	B	B	B	S	S	S			1			
	[16] 96254552	(E)FRAME-CASSETTE (D)RAHMEN-KASSETTE	. .	B	B	B	S	S	S		(F)CADRE-CASSETTE (S)ARMADURA-CASETE	1	A/S ONLY		
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

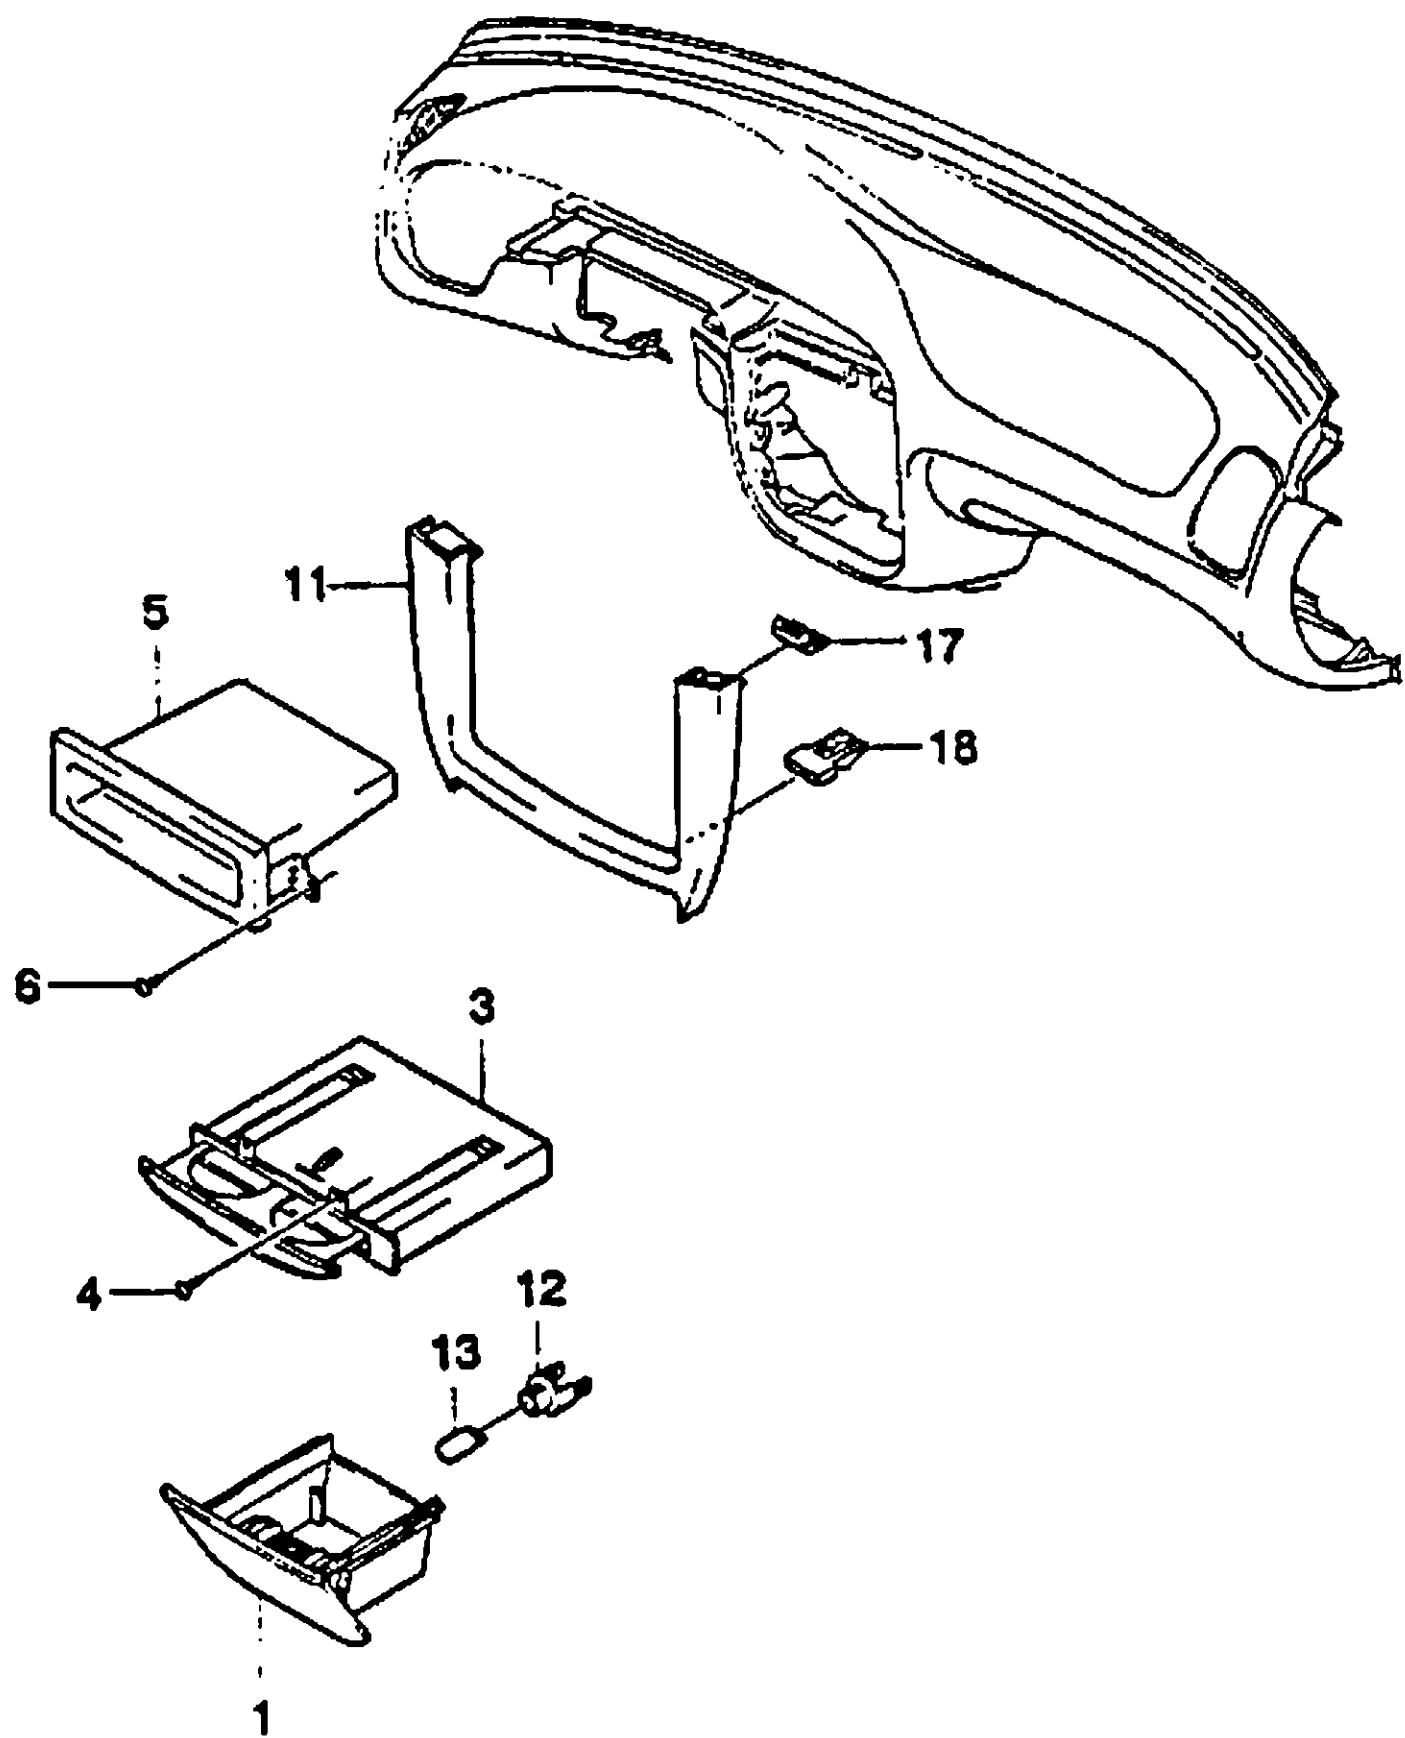

KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N H	3 H	6 H	S S S	S S S								S S S
	[17] 96232340	(E)CLIP-SPRING (D)RAHMEN-KASSETTE . . B B B S S S									(F)ATTACHE (S)GRAPA 2					
	[18] 96221359	(E)CLIP-SPRING (D)RAHMEN-KASSETTE . . B B B S S S									(F)ATTACHE (S)GRAPA 2					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

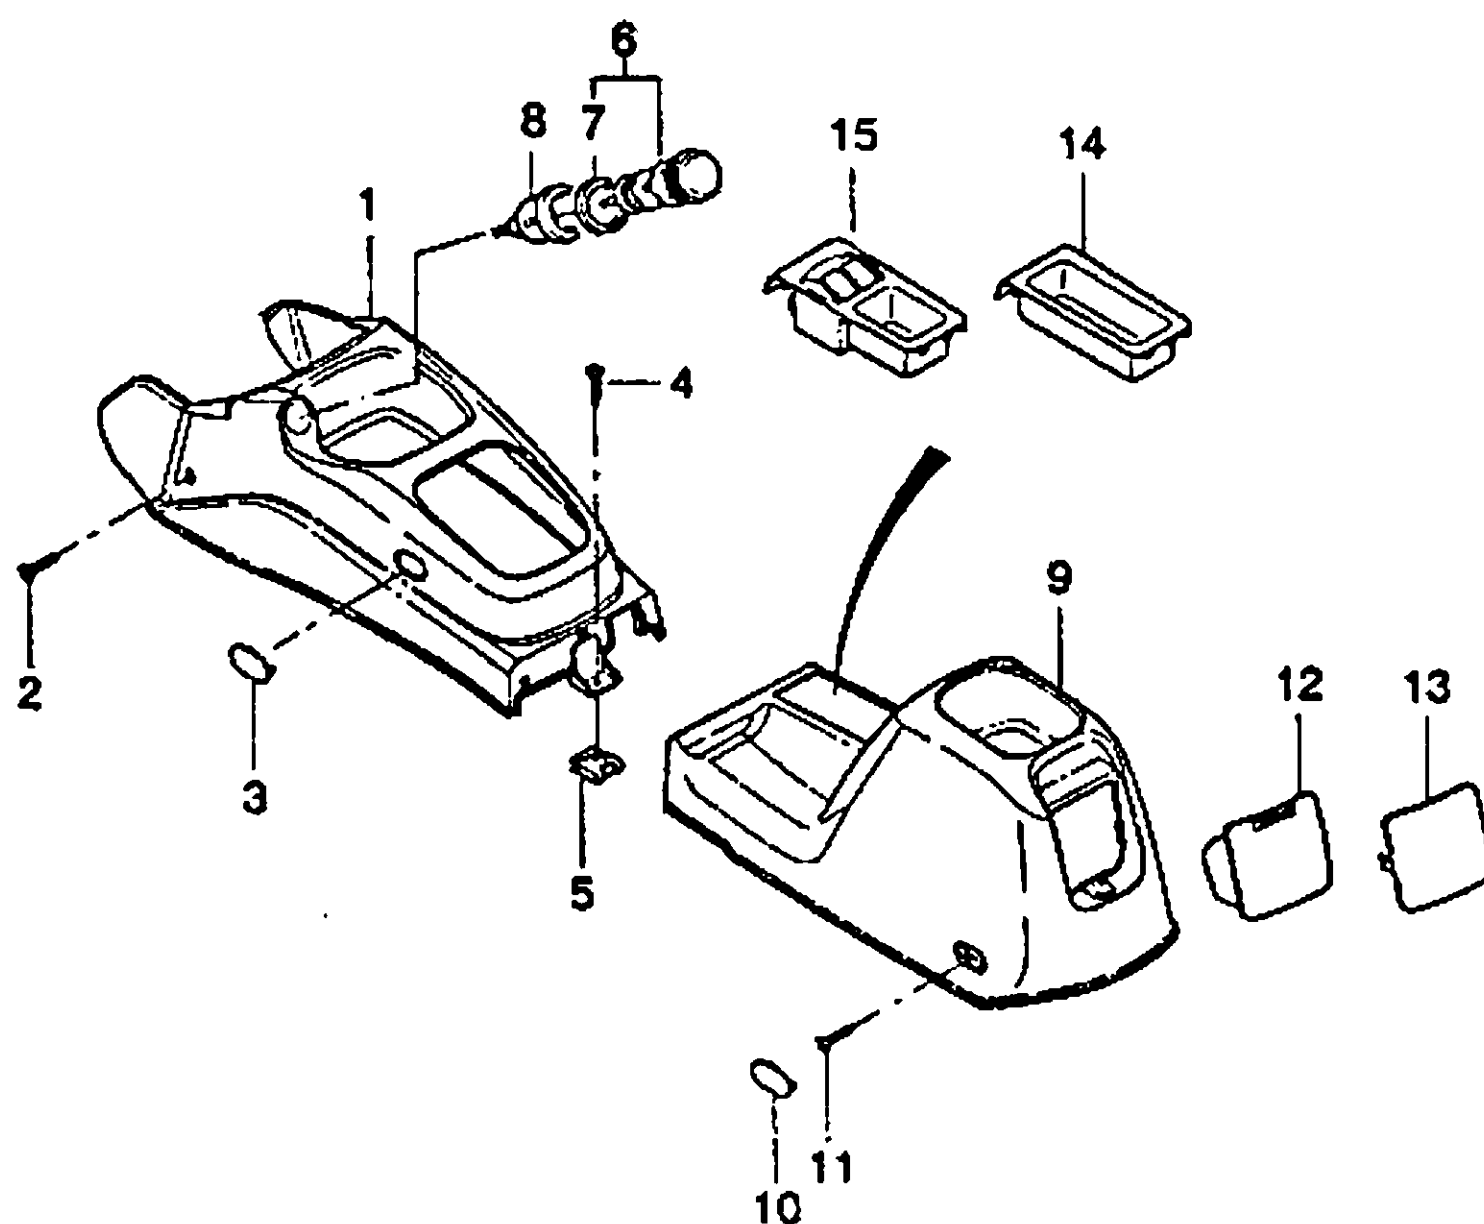


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)CONSOLE-FRONT (D)KONSOLE VORNE									(F)CONSOLE-AVANT (S)CONSOLA-FRENTE				
	96236781	. . B B B S S S								1	970701			LH	
N	96252617	. . B B B S S S								1	970701				
	[02]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03160-48165	. . B B B S S S								2					
	[03]	(E)PLUG-CONSOLE (D)STÖPSEL									(F)BOUCHON (S)TAPON				
	96236795	. . B B B S S S								1					
	[04]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03160-48165	. . B B B S S S								1					
	[05]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA				
	09148-04013	. . B B B S S S								1					
	[06]	(E)LIGHTER A-CIGAR (D)ANZÜNDER, ZIGARETTEN									(F)ALLUME-CIGARETTE (S)ENCENDEDOR				
	96160018	. . B B B S S S								1	970701				
N	96242635	. . B B B S S S								1	970701				
	[08]	(E)RING A-LIGHT (D)RING, ZIGARETTEN-ANZÜNDER									(F)ANNEAU-ALLUME-CIGARETTE (S)ANILLO-LUZ DE CIGARRILLO				
	96242616	. . B B B S S S								1	970701				
N	96233408	. . B B B S S S								1	970701				
	[09]	(E)CONSOLE A-REAR (D)KONSOLE HINTEN									(F)CONSOLE-ARRIERE (S)CONSOLA-TRASERO				
	96239363	. . B B B S S S								1	970807				
O	96252621	. . B B B S S S								1	970807				

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

7140 CONSOLE


5K15

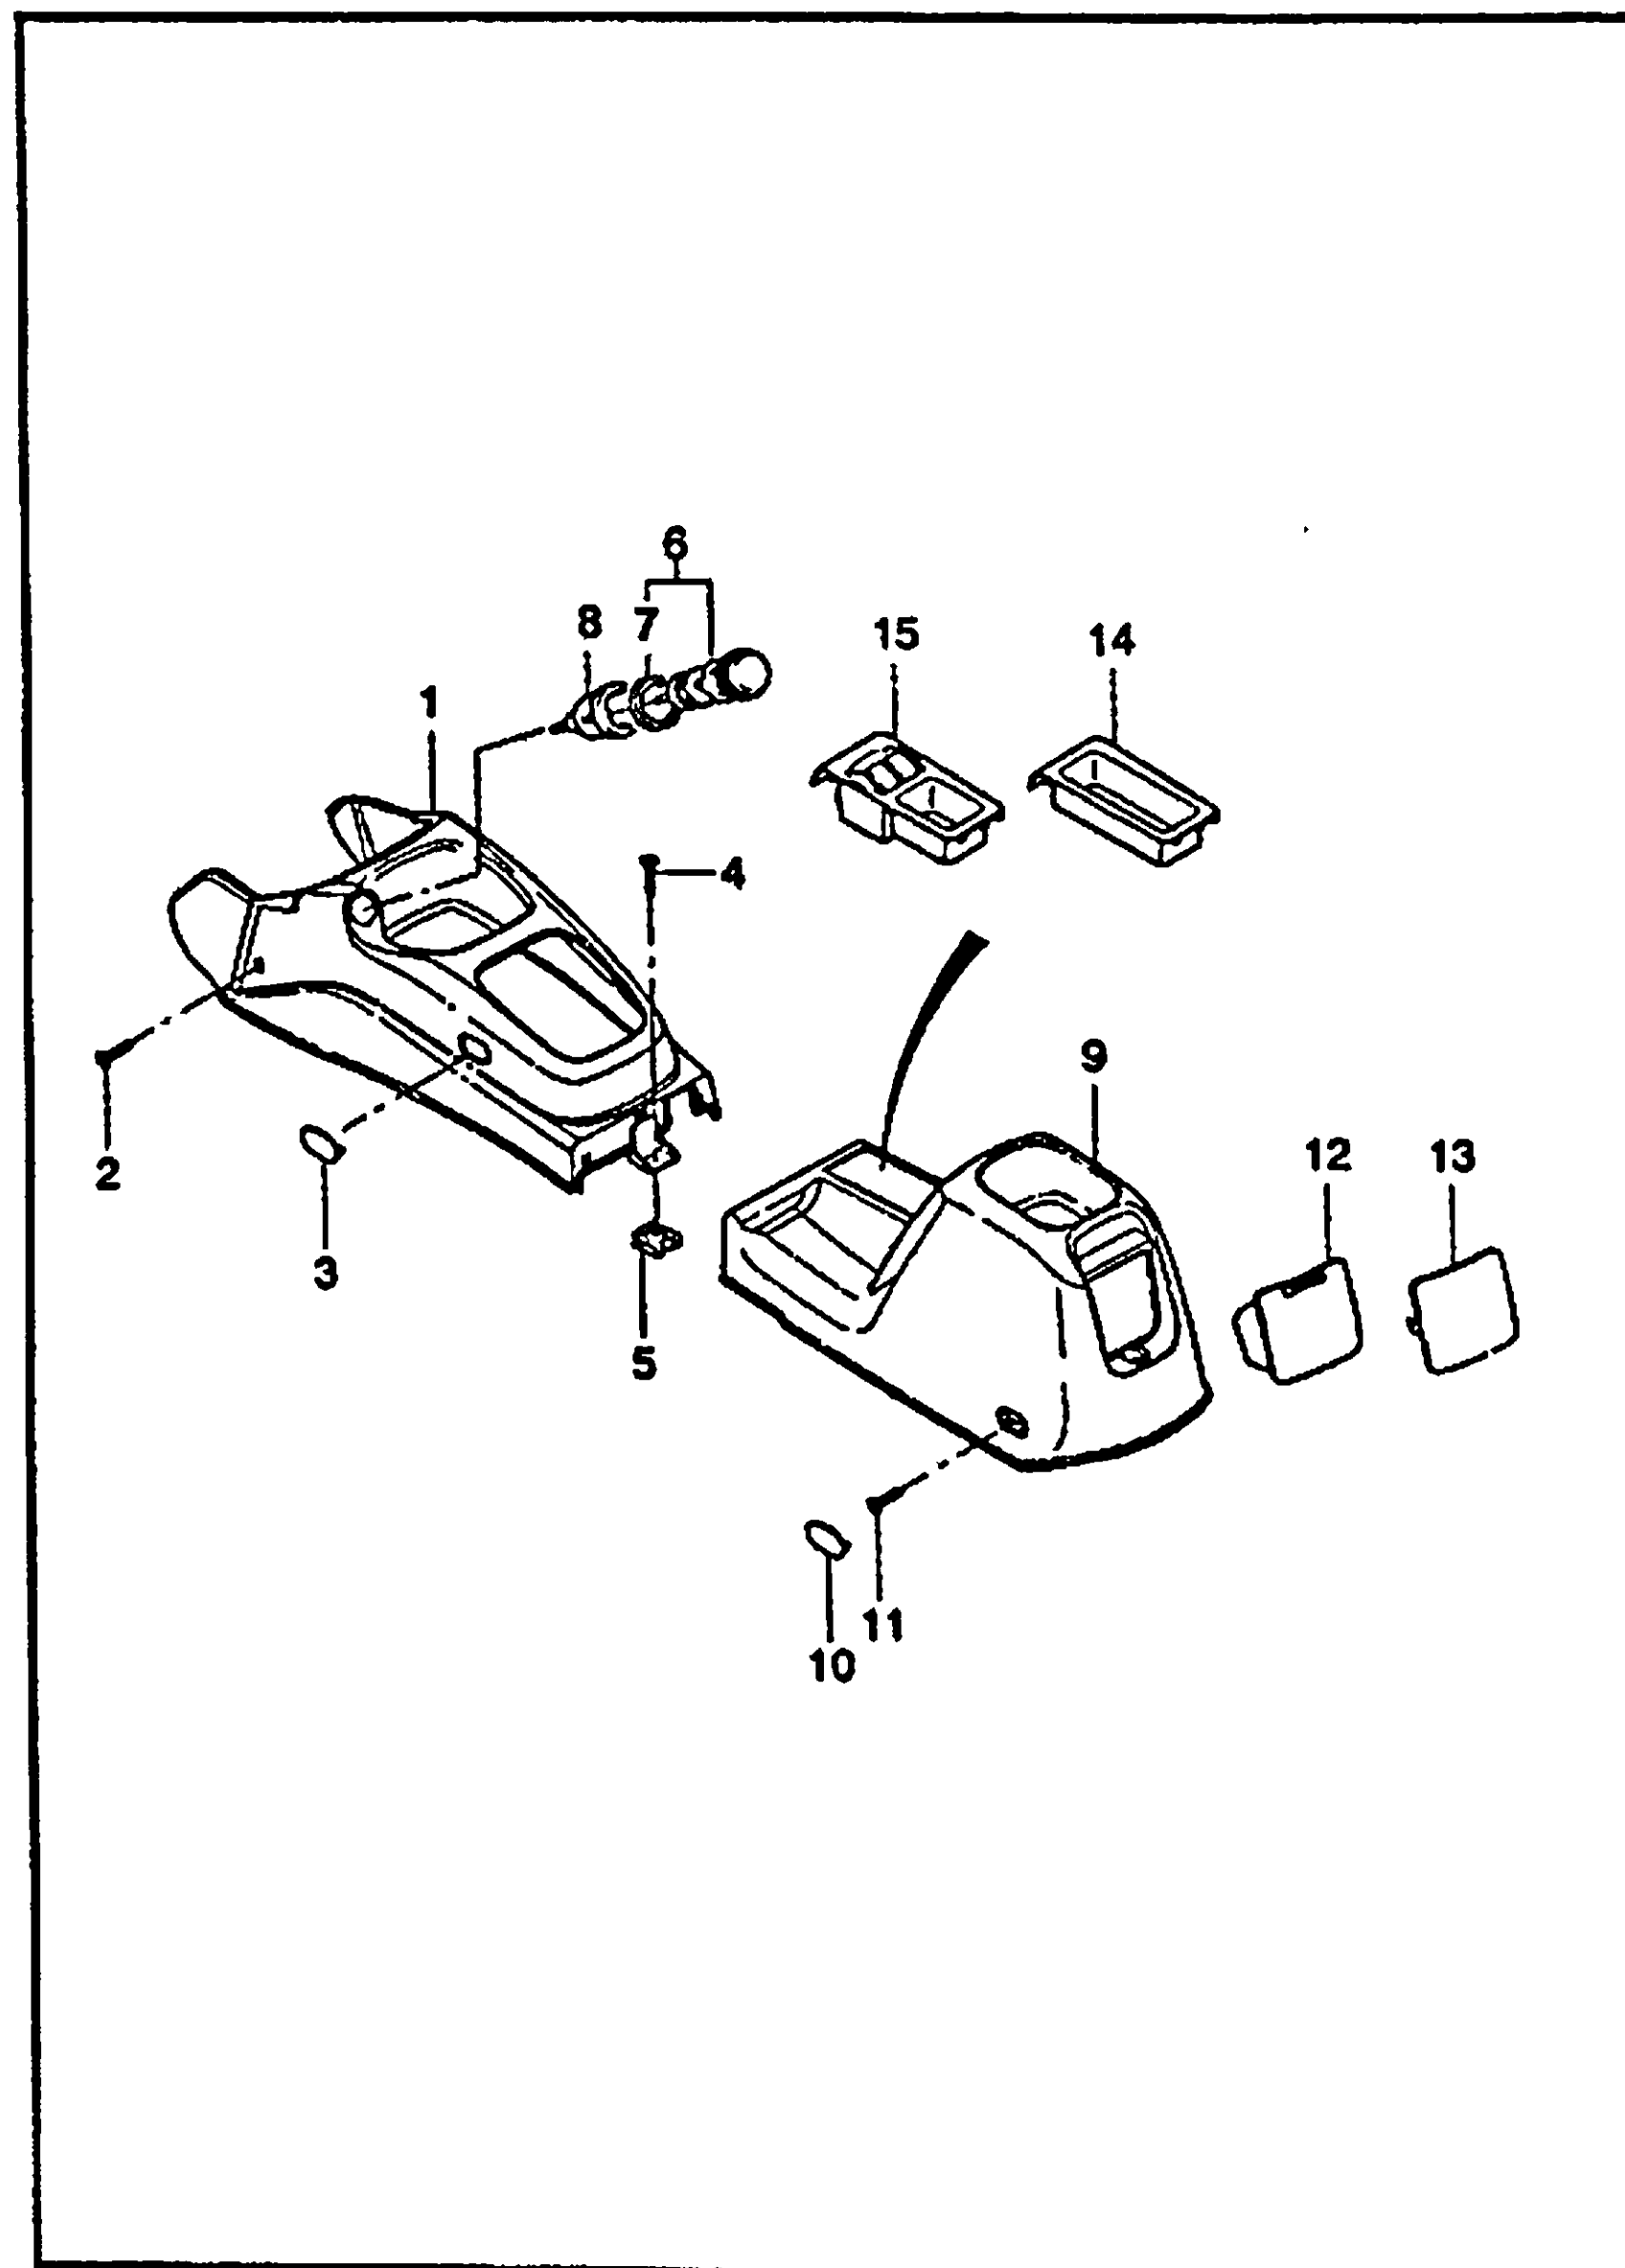


KEY NO.				PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[10]	(E)PLUG-CONSOLE (D)STOPSEL									(F)BOUCHON (S)TAPON					
	96236795	.	.	B	B	B	S	S	S		2	970907				
	[11]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	03240-48165	.	.	B	B	B	S	S	S		2					
Y	03160-48165	.	.	B	B	B	S	S	S		2					
	[12]	(E)ASHTRAY A-CONSOLE,REAR (D)ASCHENBECHER									(F)CENDRIER (S)CENICERO					
	96236792	.	.	B	B	B	.	.	S		1	970901				
	96236792	.	.	B	B	B	S	S	S		1	970901				
	[13]	(E)COVER-REAR CONSOLE (D)DECKEL									(F)COUVERCLE (S)CUBIERTA					
	96239325	.	.	B	B	B	S	S	.		1	970901				
	[14]	(E)COVER-BLANK,WDO LIFTER SW (D)DECKEL									(F)COUVERCLE (S)CUBIERTA					
	96233407	.	.	B	B	B	S	S	.	8A30	1			KB		
	[15]	(E)SWITCH A-WINDOW LIFTER (D)SCHALTER									(F)COMMUTATEUR (S)INTERRUPTOR					
	96233406	.	.	B	B	B	O	O	S	8A32	1			KA		
	96242532	.	.	B	.	B	.	.	O	8A31	1			KA		
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

7210 FRONT DOOR TRIM

5L15

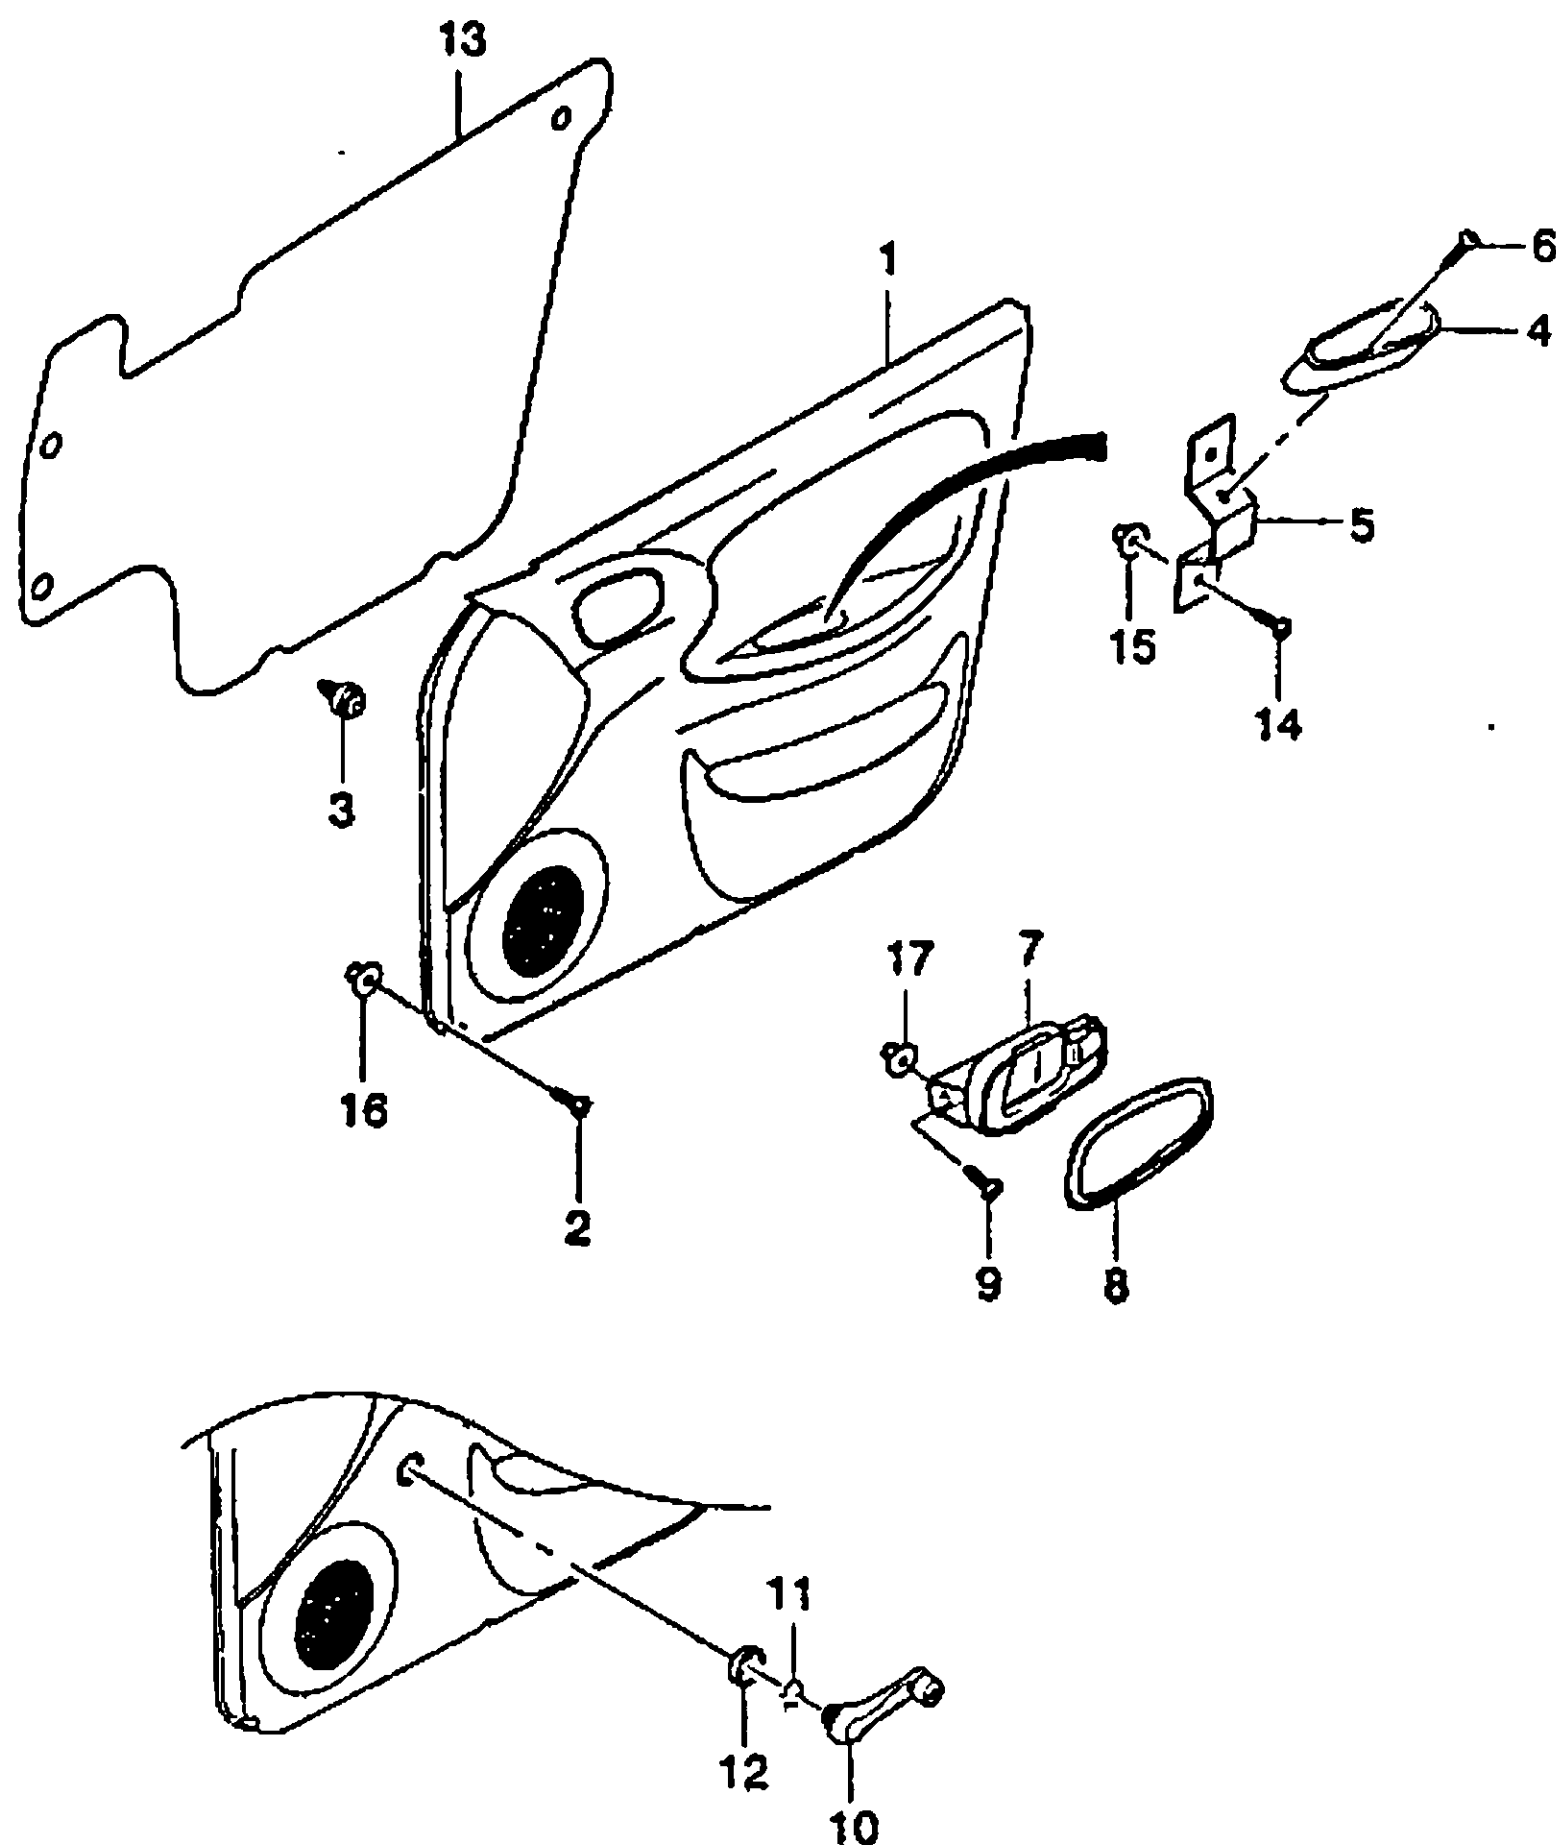


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S E								S X
	[01]	(E)TRIM A-FRONT DOOR (D)VERKLEIDUNG,VORDERTÜR										(F)GARNITURE-PORTE AVANT (S)ADORNO-PUERTA DELANTERA				
	96236137	.	.	B	.	B	S	.	.	&A30&TD1	LH	1			A1	
	96236138	.	.	B	.	B	S	.	.	&A30&TD1	RH	1			A2	
	96247276	.	.	B	.	B	O	S	.	&A30&TD2	LH	1			J5	
	96247277	.	.	B	.	B	O	S	.	&A30&TD2	RH	1			J6	
	96236141	.	.	B	.	B	O	O	S	&A31/A32&TD2	LH	1			A5	
	96236142	.	.	B	.	B	O	O	S	&A31/A32&TD2	RH	1			A6	
	96236145	.	.	.	B	.	S	.	.	&A30&TD1	LH	1			G1	
	96236146	.	.	.	B	.	S	.	.	&A30&TD1	RH	1			G2	
	96247284	.	.	.	B	.	O	.	.	&A30&TD2	LH	1			M3	
	96247285	.	.	.	B	.	O	.	.	&A30&TD2	RH	1			M4	
	96236149	.	.	.	B	.	O	.	S	&A32&TD2	LH	1			G5	
	96236150	.	.	.	B	.	O	.	S	&A32&TD2	RH	1			G6	
	[02]	(E)SCREW-TAPPING (D)SCHRAUBE										(F)VIS (S)TORNILLO				
	03160-48165	.	.	B	B	B	S	S	S			6				
	[03]	(E)CLIP (D)KLEMME										(F)ATTACHE (S)GRAPA				
	09409-08301	.	.	B	.	B	S	S	S			10				
	09409-08301	.	.	.	B	.	S	.	S			12				
	[04]	(E)HANDLE-DOOR POCKET (D)HENKEL										(F)POIGNEE (S)MANIJA				
	96236165	.	.	B	B	B	S	.	.	&TD1		2				
	96236166	.	.	B	B	B	O	S	S	&TD2		2				
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

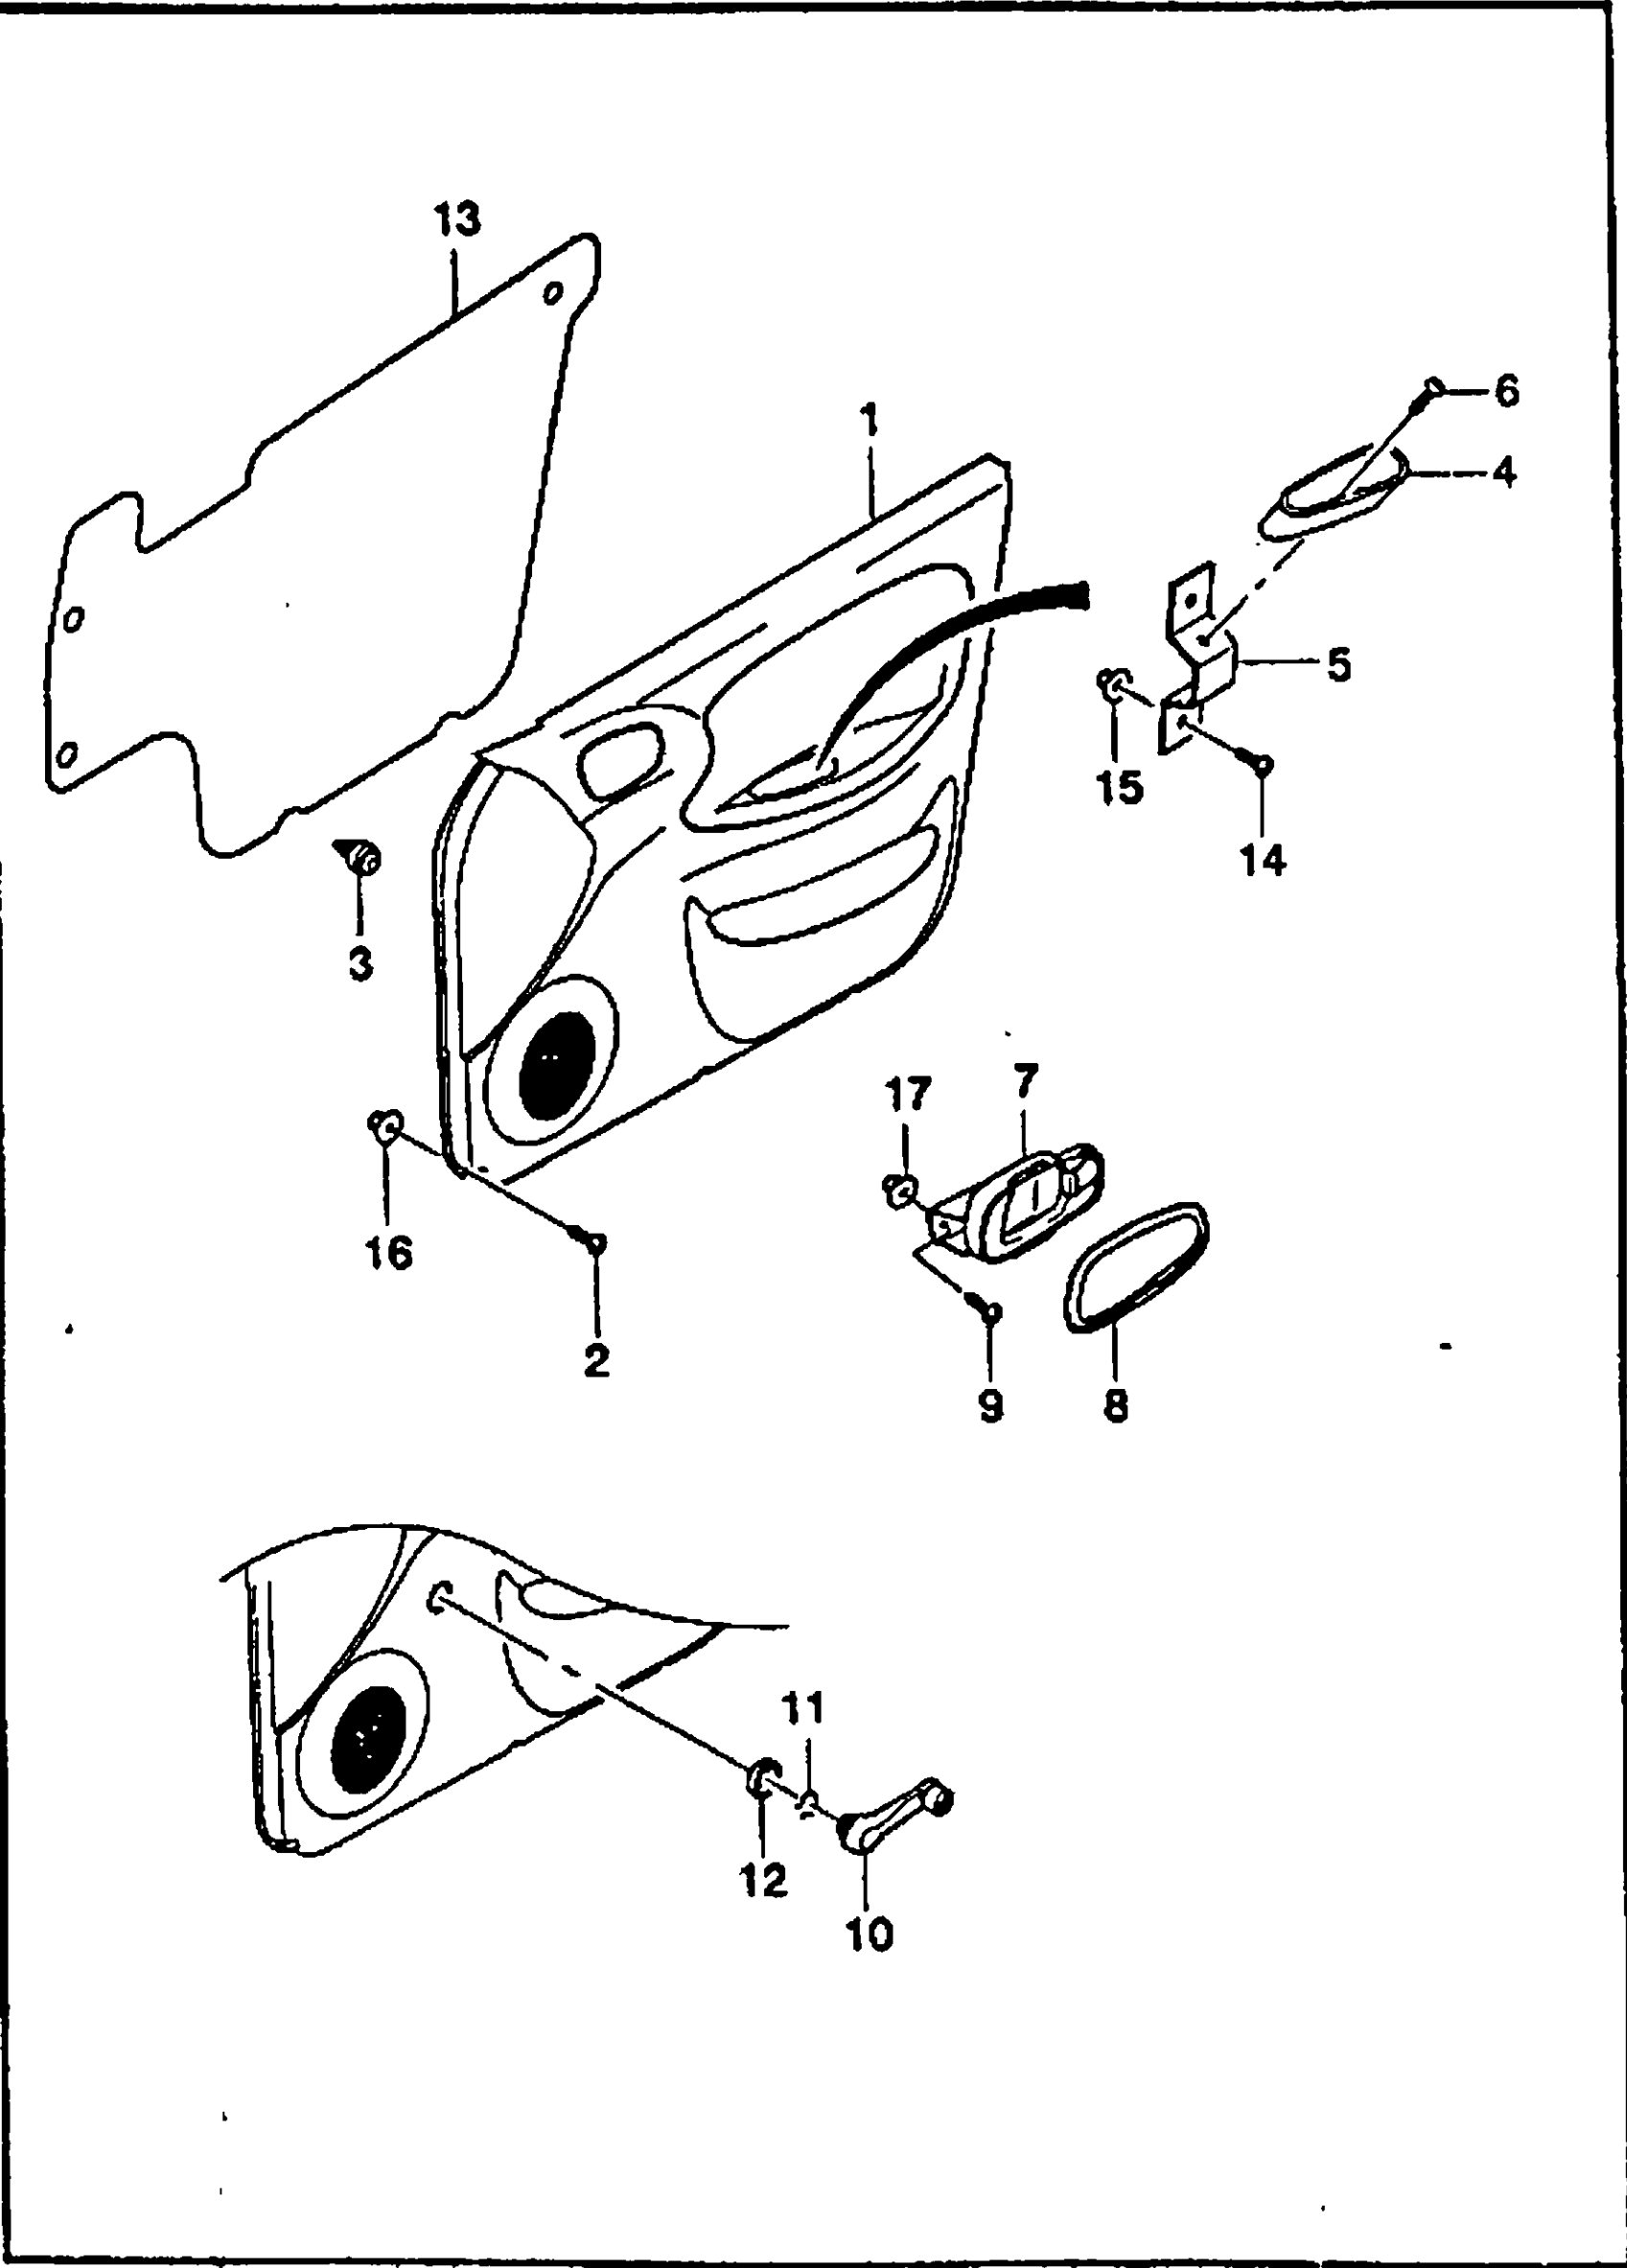


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[05]	(E)BRACKET-DOOR POCKET HANDL (D)TRÄGER									(F)SUPPORT (S)SOPORTE					
	96304828	.	.	B	B	B	S	S	S		2					
	[06]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	03160-48165	.	.	B	B	B	S	S	S		2					
	[07]	(E)HANDLE A-DOOR INSIDE (D)HENKEL									(F)POIGNEE (S)MANIJA					
	96238351	.	.	B	B	B	S	S	S	LH	1					
	96238352	.	.	B	B	B	S	S	S	RH	1					
	[08]	(E)ESCUTCHEON-INSIDE HANDLE (D)ESCHTCHÉON									(F)ECUSSON (S)EMBELLECÉDOR					
	96238359	.	.	B	B	B	S	S	S	LH	1					
	96238360	.	.	B	B	B	S	S	S	RH	1					
	[09]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	03160-48165	.	.	B	B	B	S	S	S		2					
	[10]	(E)CRANK A-WINDOW LIFTER (D)KURBEL,FENSTER HEBER									(F)MANIVELLE-SOULEVEUR (S)MANIVELA-LEVANTADOR					
	96238361	.	.	B	B	B	S	S	S	&A30	2					
	[11]	(E)RING (D)RING									(F)ANNEAU (S)ANILLO					
	09388-00001	.	.	B	B	B	S	S	S	&A30	2					
	[12]	(E)WASHER-WINDOW LIFTER CRAN (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA					
	96238365	.	.	B	B	B	S	S	S	&A30	2					
	[13]	(E)SEAL-FRONT DOOR TRIM (D)DICHTUNG									(F)JOINT (S)SELLO					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

7210 FRONT DOOR TRIM


5N15

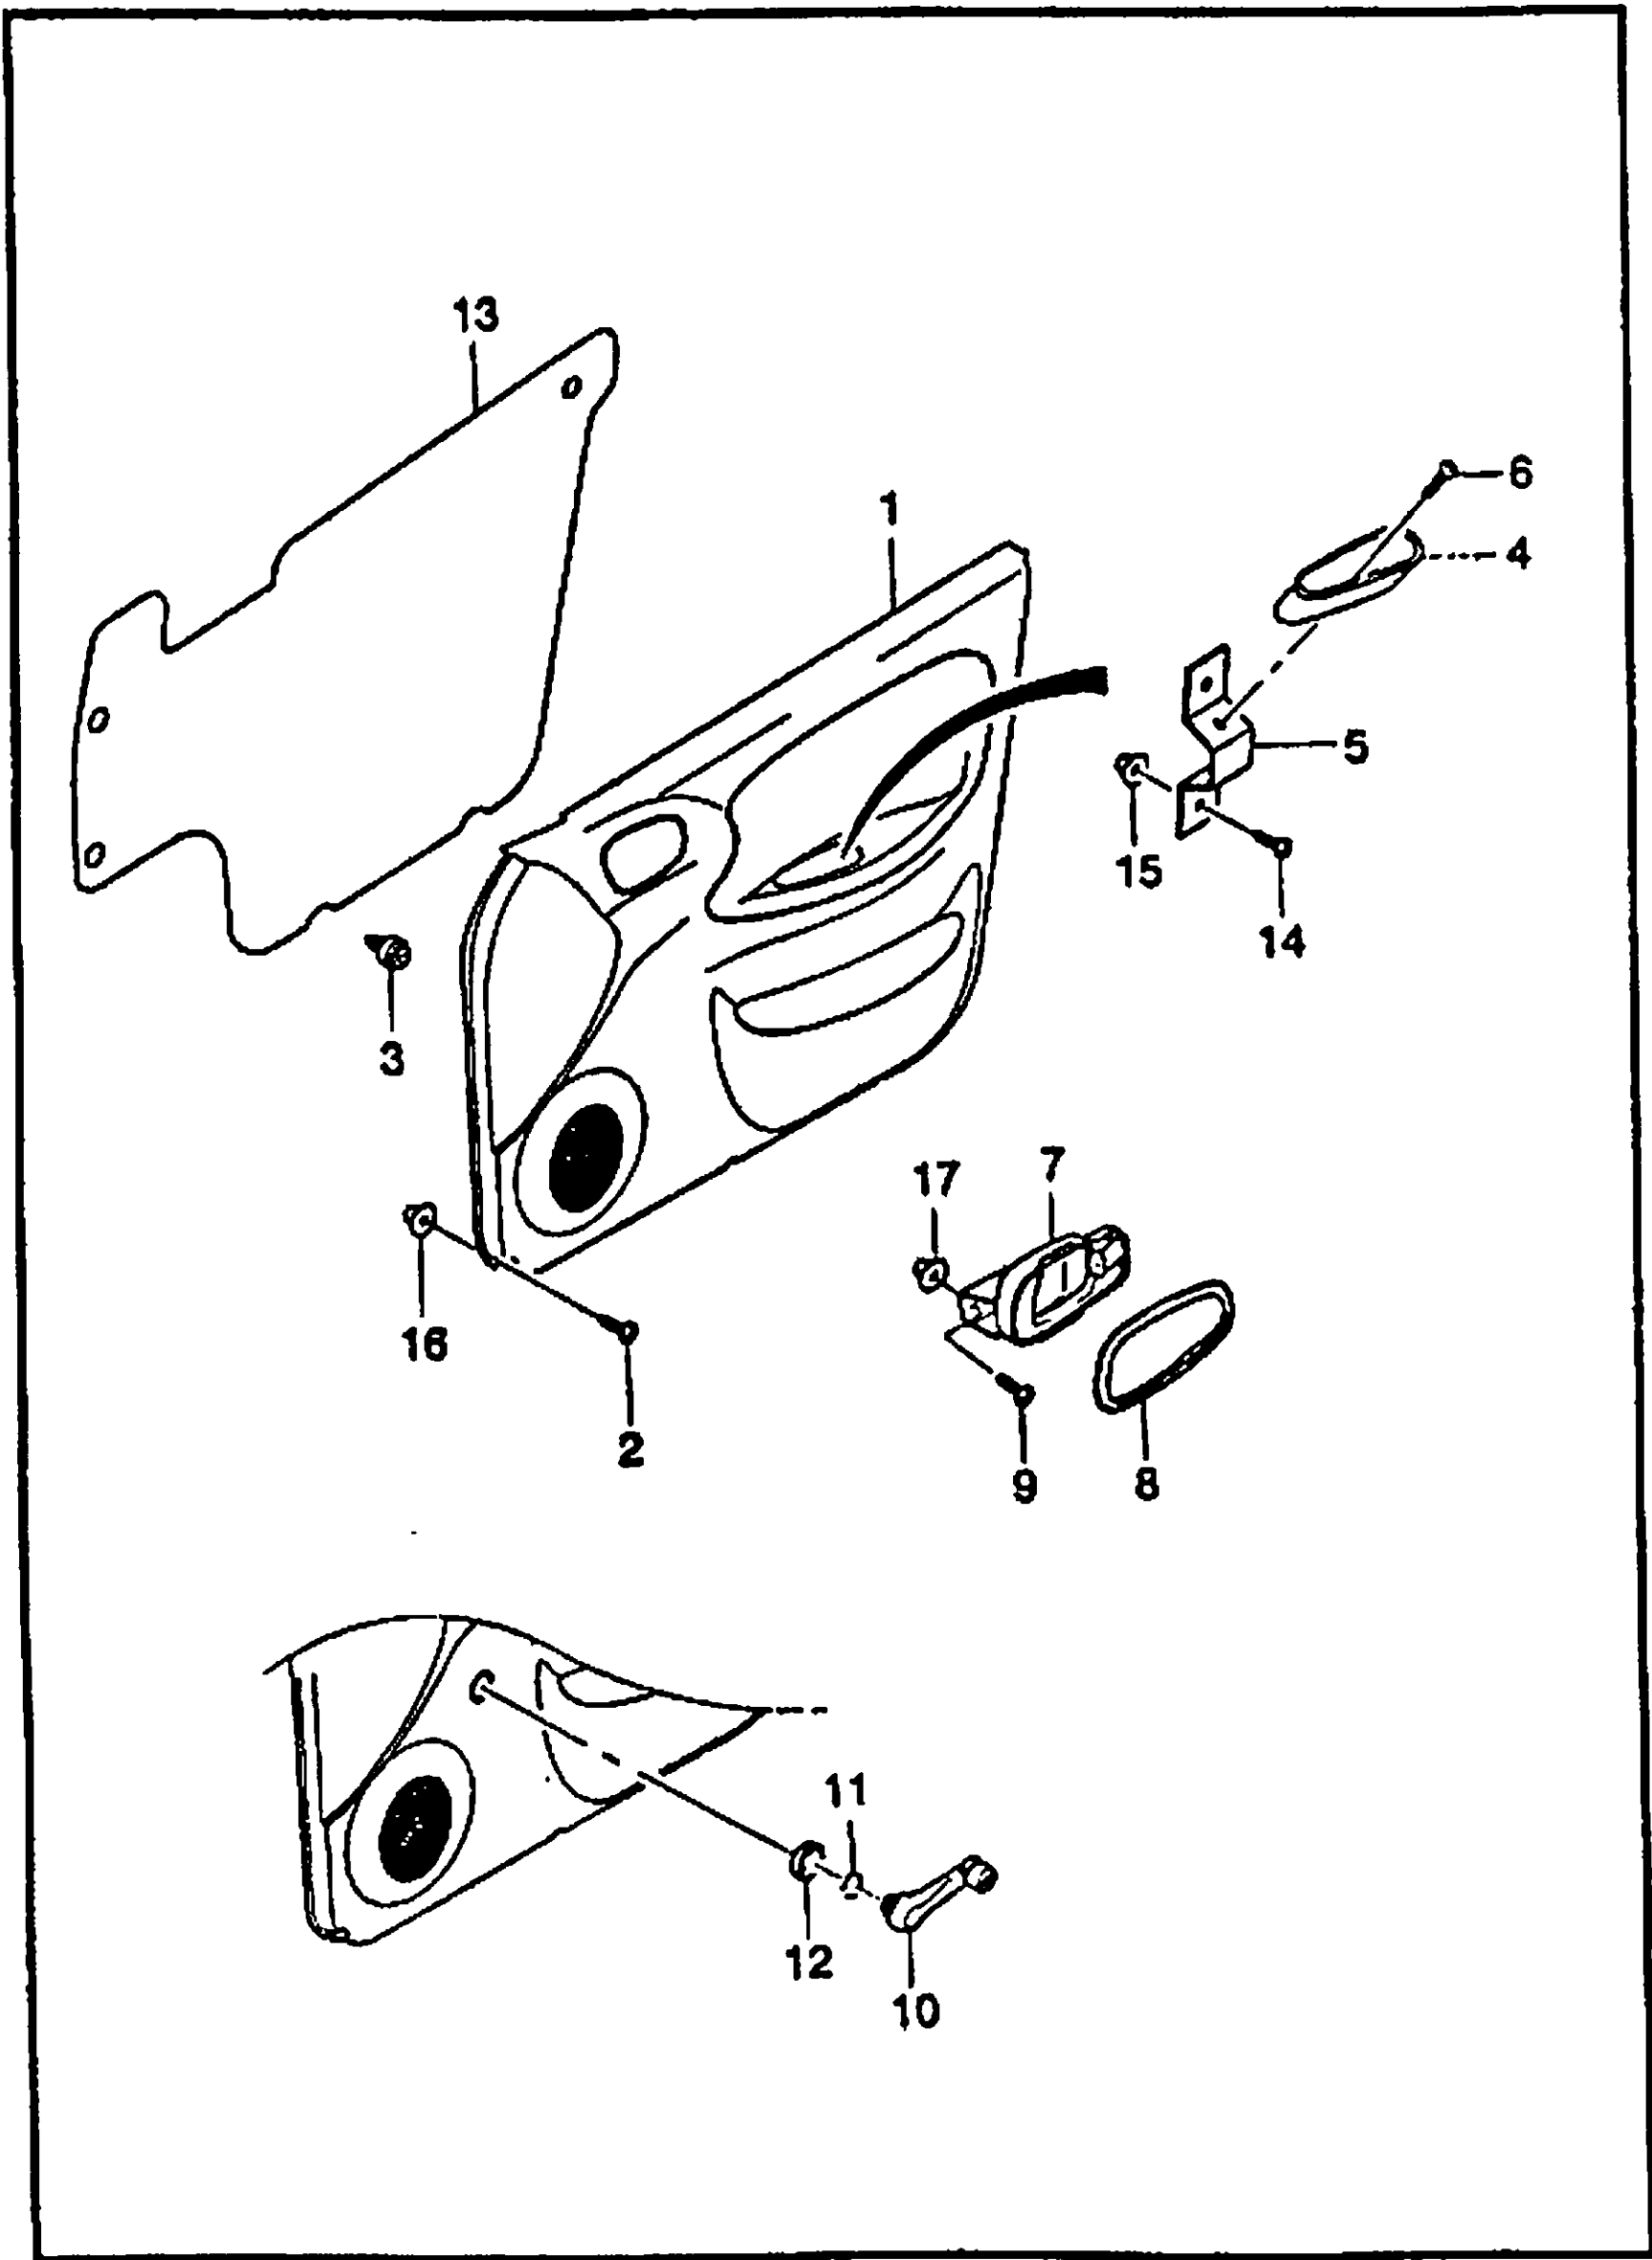


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	96304070	.	.	B	.	B	S	S	S		LH	1				
	96304071	.	.	B	.	B	S	S	S		RH	1				
	96304068	.	.	.	B	.	S	.	S		LH	1				
	96304069	.	.	.	B	.	S	.	S		RH	1				
	[14]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	03160-48165	.	.	B	B	B	S	S	S		4					
	[15]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA					
	09148-04005	.	.	B	B	B	S	S	S		4					
	[16]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA					
	09148-04005	.	.	B	B	B	S	S	S		6					
	[17]	(E)NUT-SPEED (D)MUTTER									(F)ECROU (S)TUERCA					
	09148-04005	.	.	B	B	B	S	S	S		2					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

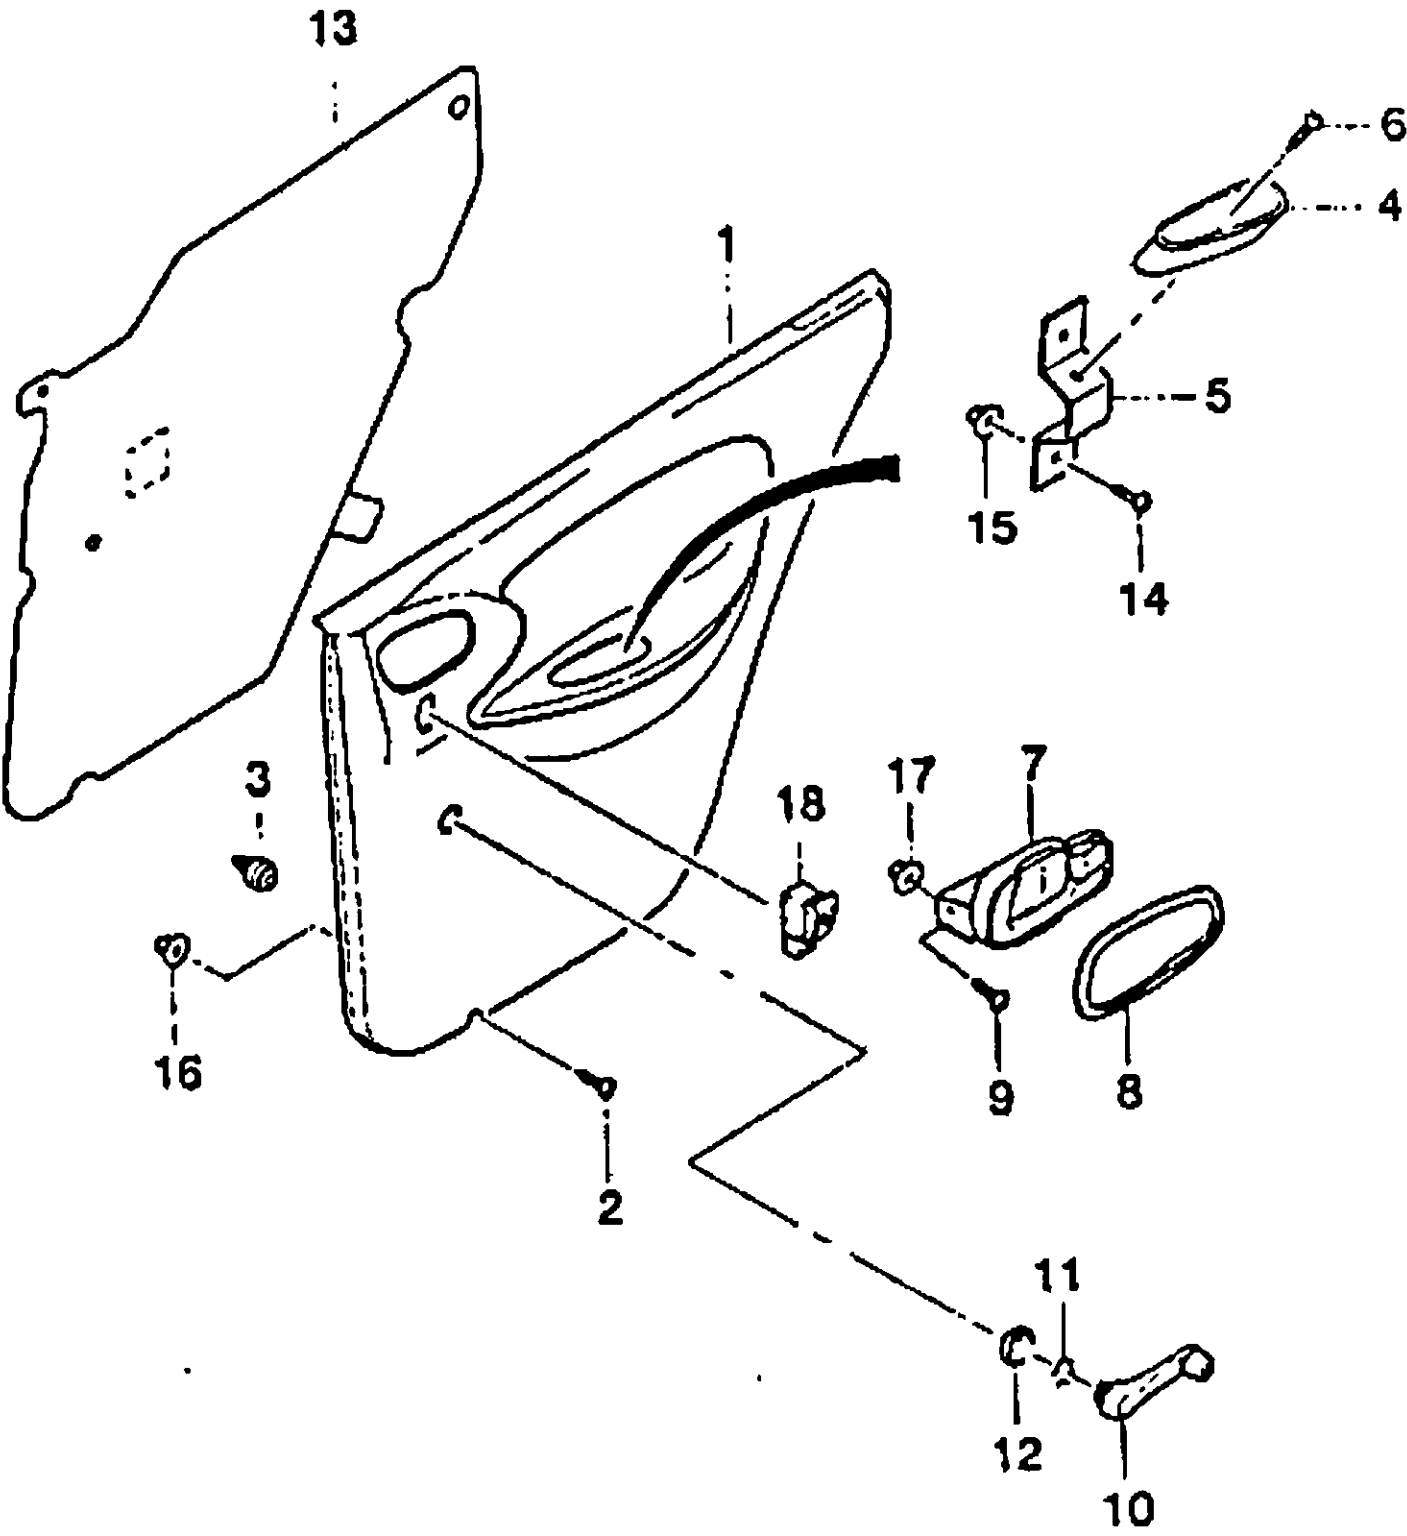


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)TRIM A-REAR DOOR (D)VERKLEIDUNG,HINTERTÜR									(F)GARNITURE-PORTE ARRIERE (S)ADORNO-PUERTA TRASERA				
	96236171	.	.	B	.	B	S	.	.	&TD1&A30/A32	LH	1		D1	
	96236172	.	.	B	.	B	S	.	.	&TD1&A30/A32	RH	1		D2	
	96236175	.	.	B	.	B	O	S	S	&TD2&A30/A32	LH	1		D5	
	96236176	.	.	B	.	B	O	S	S	&TD2&A30/A32	RH	1		D6	
	96246592	.	.	B	.	B	.	O	O	&TD2&A31	LH	1		Q1	
	96246593	.	.	B	.	B	.	O	O	&TD2&A31	RH	1		Q2	
	[02]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03160-48165	.	.	B	.	B	S	S	S			4			
	[03]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA				
	09409-08301	.	.	B	.	B	S	S	S			12			
	[04]	(E)HANDLE-DOOR POCKET (D)HENKEL									(F)POIGNEE (S)MANIJA				
	96236165	.	.	B	.	B	S	.	.	&TD1		2			
	96236166	.	.	B	.	B	O	S	S	&TD2		2			
	[05]	(E)BRACKET-DOOR POCKET HANDL (D)TRÄGER									(F)SUPPORT (S)SOPORTE				
	96304828	.	.	B	.	B	S	S	S			2			
	[06]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03160-48165	.	.	B	.	B	S	S	S			2			
	[07]	(E)HANDLE A-DOOR INSIDE (D)HENKEL									(F)POIGNEE (S)MANIJA				
	96238351	.	.	B	.	B	S	S	S		LH	1			
E/I(G(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

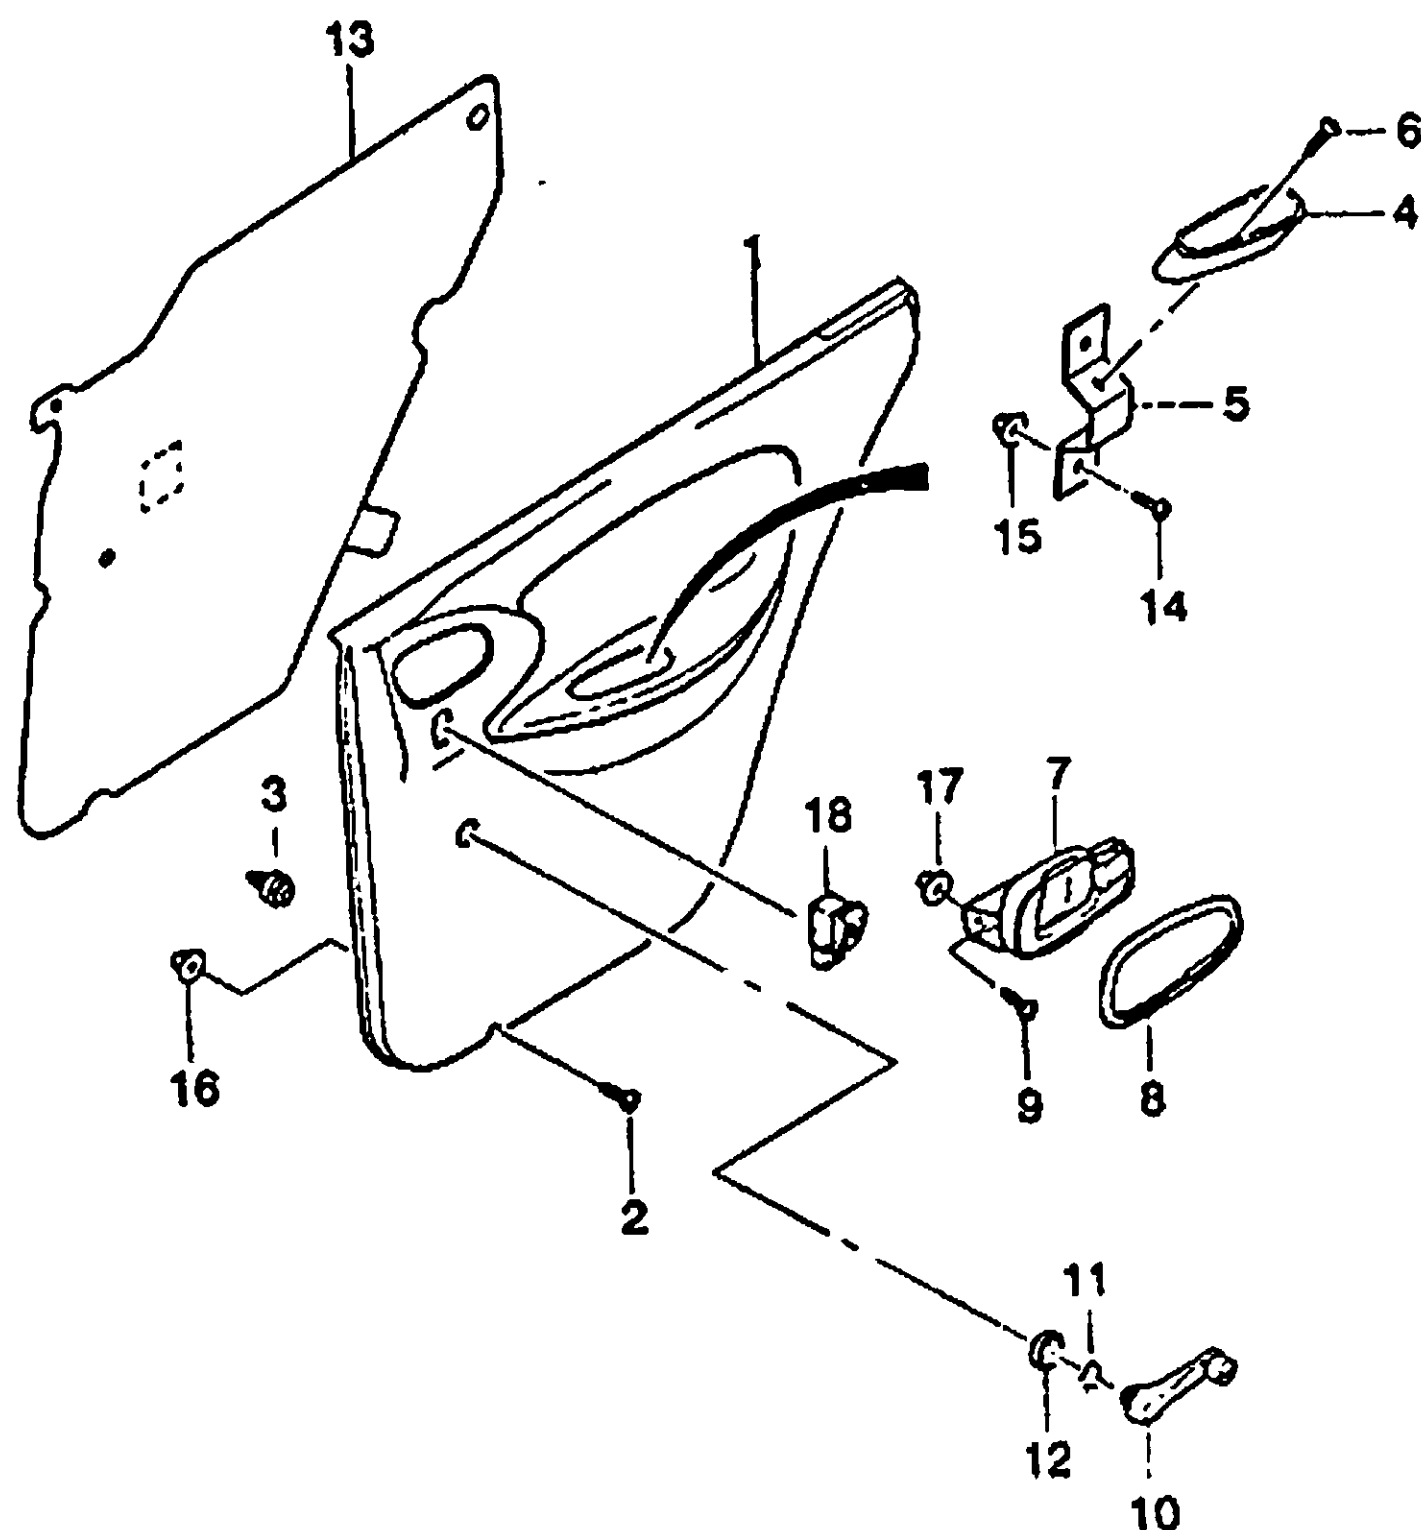

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	96238352	.	.	B	.	B	S	S	S			RH 1				
	[08]											(F)ECUSSON				
	96238359	.	.	B	.	B	S	S	S			LH 1				
	96238360	.	.	B	.	B	S	S	S			RH 1				
	[09]											(F)VIS				
	03160-48165	.	.	B	.	B	S	S	S			(S)TORNILLO				
	[10]											2				
	96238361	.	.	B	.	B	S	S	S	&A30/A32		(F)MANIVELLE-SOULEVEUR				
	[11]											(S)MANIVELA-LEVANTADOR				
	09388-00001	.	.	B	.	B	S	S	S	&A30/A32		2				
	[12]											(F)ANNEAU				
	96238365	.	.	B	.	B	S	S	S	&A30/A32		(S)ANILLO				
	[13]											2				
	96306640	.	.	B	.	B	S	S	S			(F)RONDELLE				
	96304151	.	.	B	.	B	S	S	S			(S)ARANDELA				
	[14]											2				
	03160-48165	.	.	B	.	B	S	S	S			(F)JOINT				
	[15]											(S)SELLO-ADORNO				
	09148-04005	.	.	B	.	B	S	S	S			LH 1				
												RH 1				
												(F)VIS				
												(S)TORNILLO				
												4				
												(F)ECROU				
												(S)TUERCA				
												4				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

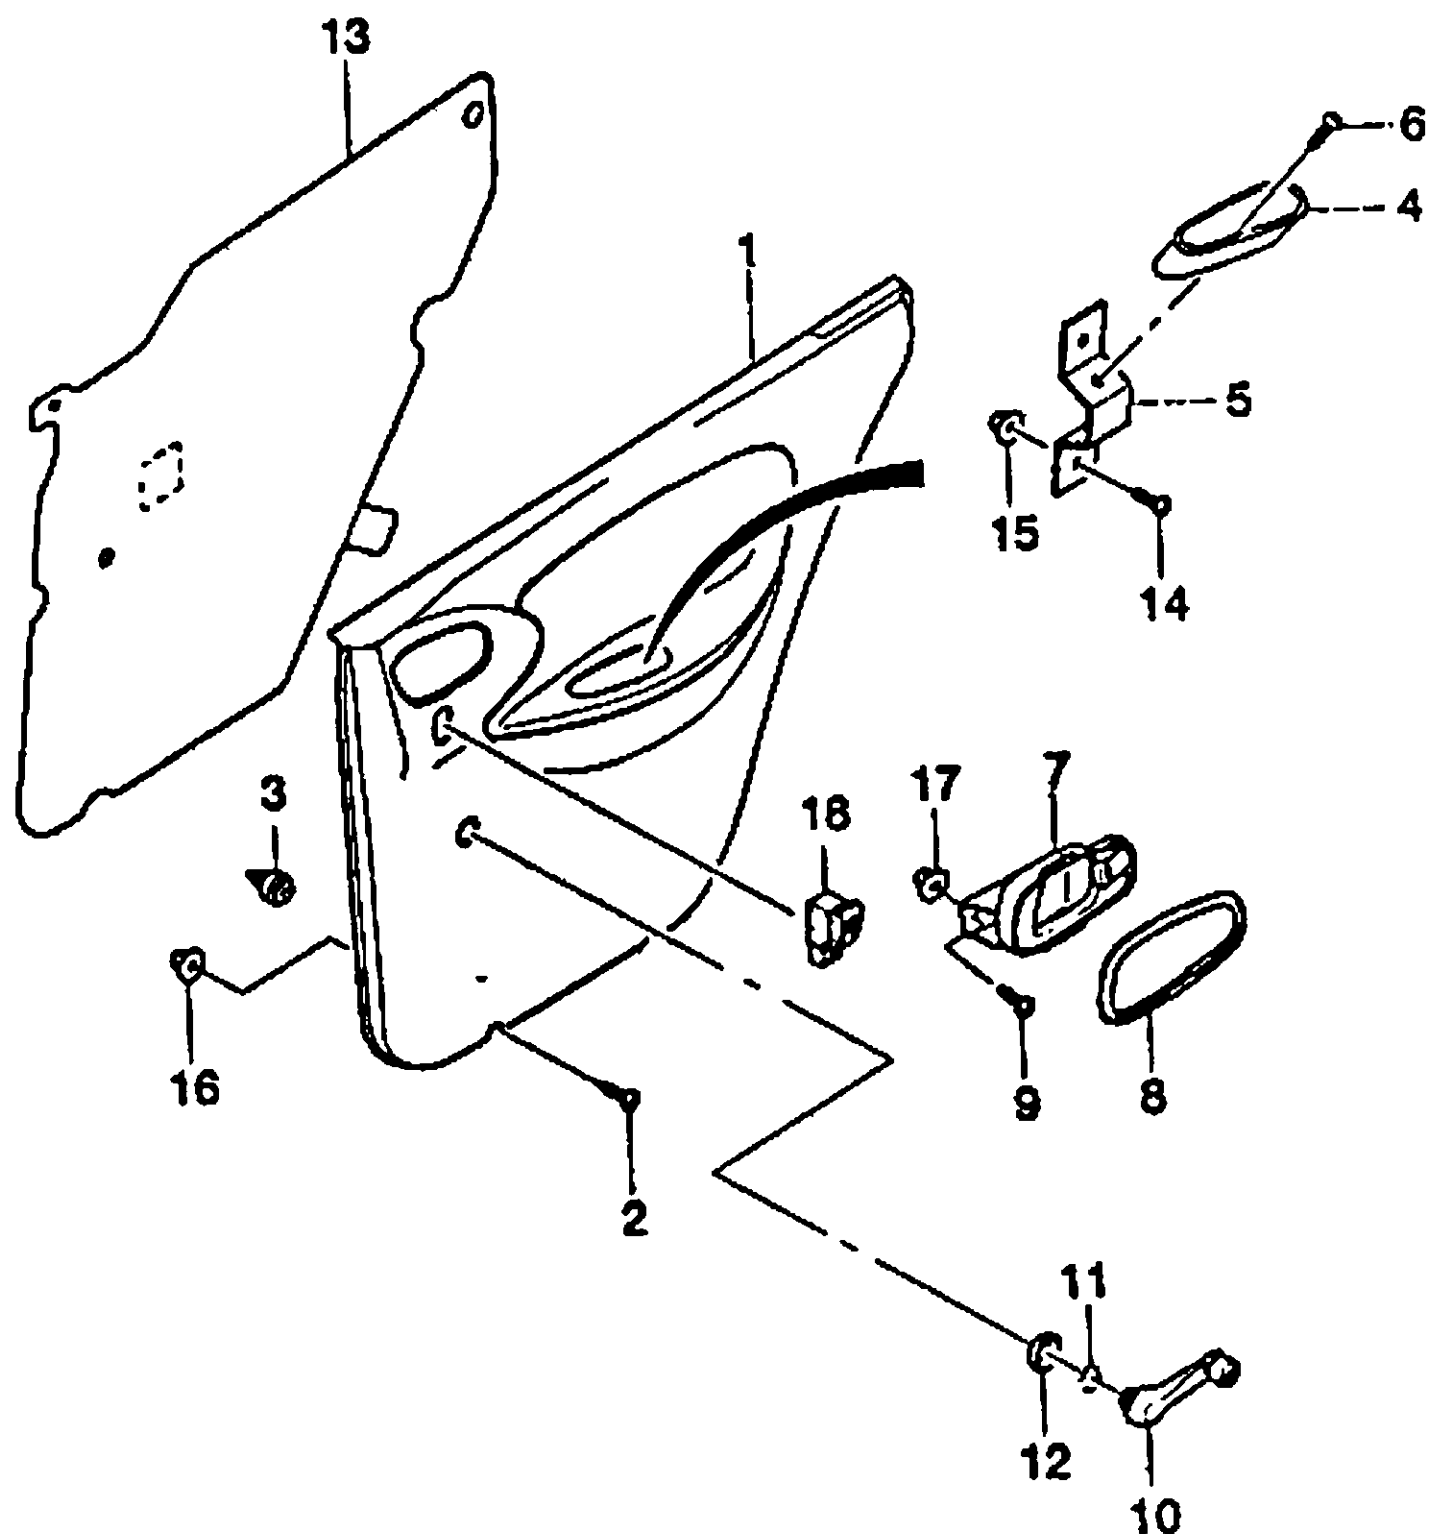


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[16] 09148-04005	(E)NUT-SPEED (D)MUTTER		. .	B .	B	S	S	S		(F)ECROU (S)TUERCA	4				
	[17] 09148-04005	(E)NUT-SPEED (D)MUTTER		. .	B .	B	S	S	S		(F)ECROU (S)TUERCA	2				
	[18] 96242533 96242534	(E)SWITCH A-POWER (D)SCHALTER			B .	B			O		(F)COMMUTATEUR (S)INTERRUPTOR	LH 1 RH 1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC = COMMON		M = MANUAL T/A A = AUTOMATIC T/A = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

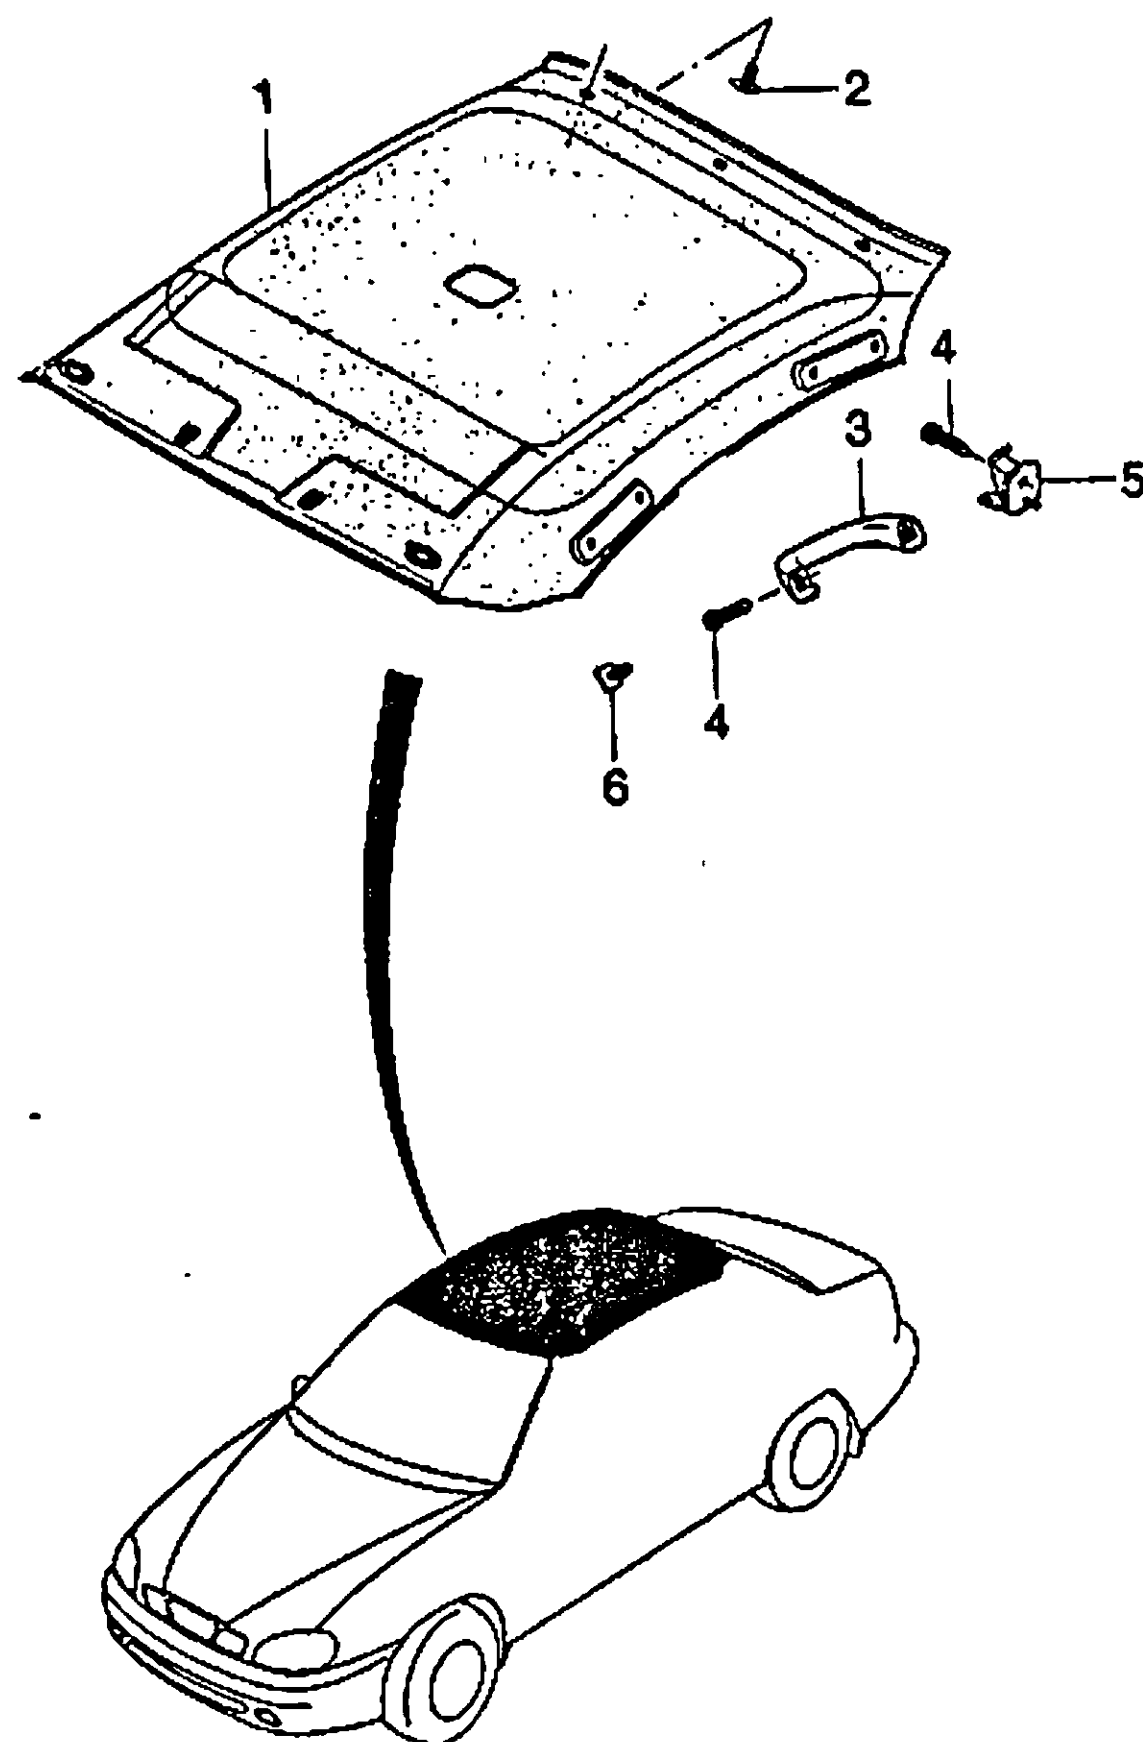


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[01]	(E)HEADLINING (D)KOPF AUSKLEIDUNG									(F)GARNITURE (S)FORRO DE CABECERA					
	96236011	.	.	B	.	.	S	S	S	-CF8	1	970901		D2		
O	96257410	.	.	B	.	.	S	S	S	-CF8	1	970901		E7		
	96243596	.	.	B	.	.	O	O	O	&CF8	1	970901		D5		
O	96257412	.	.	B	.	.	O	O	O	&CF8	1	970901		F7		
	96236010	.	.	.	B	.	S	.	S	-CF8	1	970901		D1		
O	96257406	.	.	.	B	.	S	.	S	-CF8	1	970901		C7		
	96243595	.	.	.	B	.	O	.	O	&CF8	1	970901		D4		
O	96257408	.	.	.	B	.	O	.	O	&CF8	1	970901		D7		
	96236012	.	.	.	.	B	S	.	S	-CF8	1	970901		D3		
O	96257414	.	.	.	.	B	S	.	S	-CF8	1	970901		H7		
	96243597	.	.	.	.	B	O	.	O	&CF8	1	970901		D6		
O	96257416	.	.	.	.	B	O	.	O	&CF8	1	970901		J7		
	[02]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	09409-07316	.	.	B	B	B	S	S	S		3					
	[03]	(E)HANDLE A (D)HENKEL									(F)POIGNEE (S)MANIJA					
	96238629	.	.	B	.	B	S	S	S		2	970901				
Y	96238629	.	.	B	.	B	S	S	S		3	970901				
	96238629	.	.	.	B	.	S	.	S		1					
	[04]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	09125-06004	.	.	B	.	B	S	S	S		5	970901				
Y	09125-06004	.	.	B	.	B	S	S	S		6	970901				


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

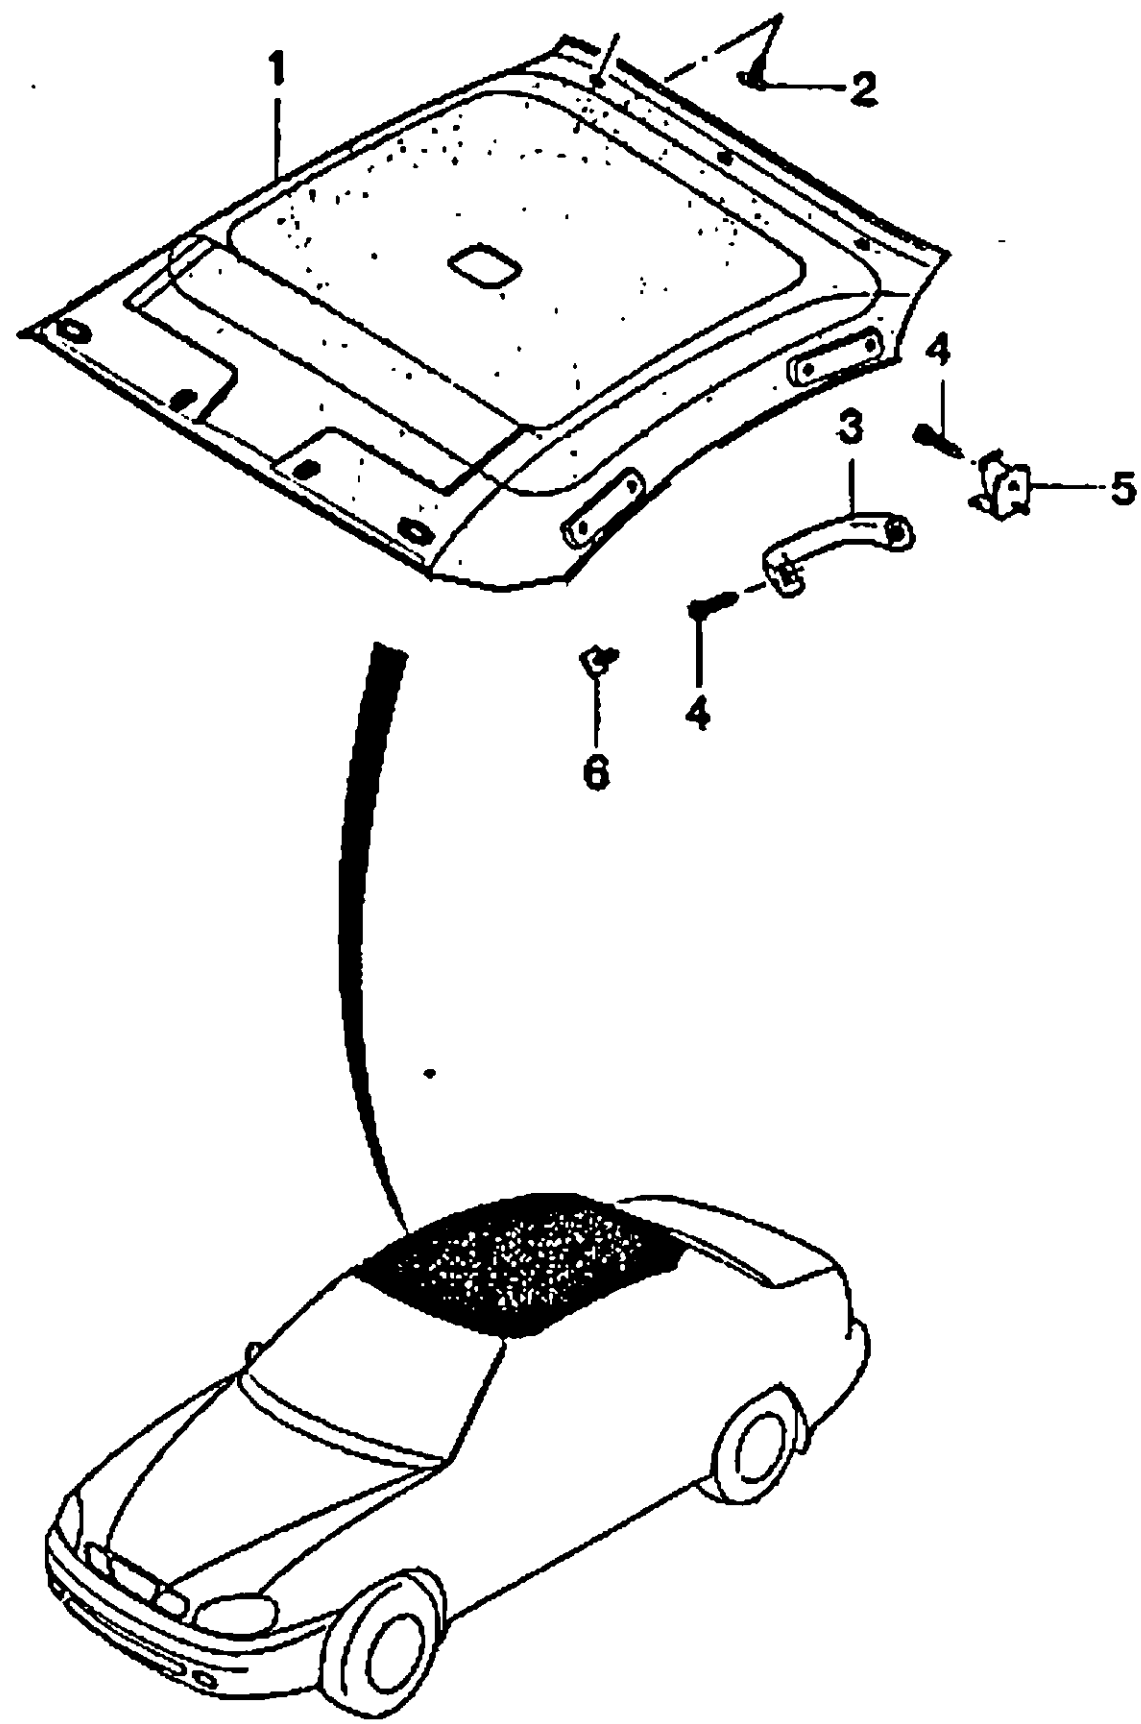


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	09125-06004	.	.	.	B	.	S	.	S		3					
	[05]						(E)HOOK-COAT				(F)CROCHET					
							(D)HAKEN				(S)PERCHA					
	96236801	.	.	B	.	B	S	S	S		1					
	96236801	.	.	.	B	.	S	.	S		1					
	[06]						(E)COVER-HANDLE				(F)COUVERCLE					
							(D)DECKEL				(S)CUBIERTA					
	96240529	.	.	B	B	B	S	S	S		3	970901				
Y	96240529	.	.	.	B	.	S	.	S		3	970901				
Y	96240529	.	.	B	.	B	S	S	S		2	970901				

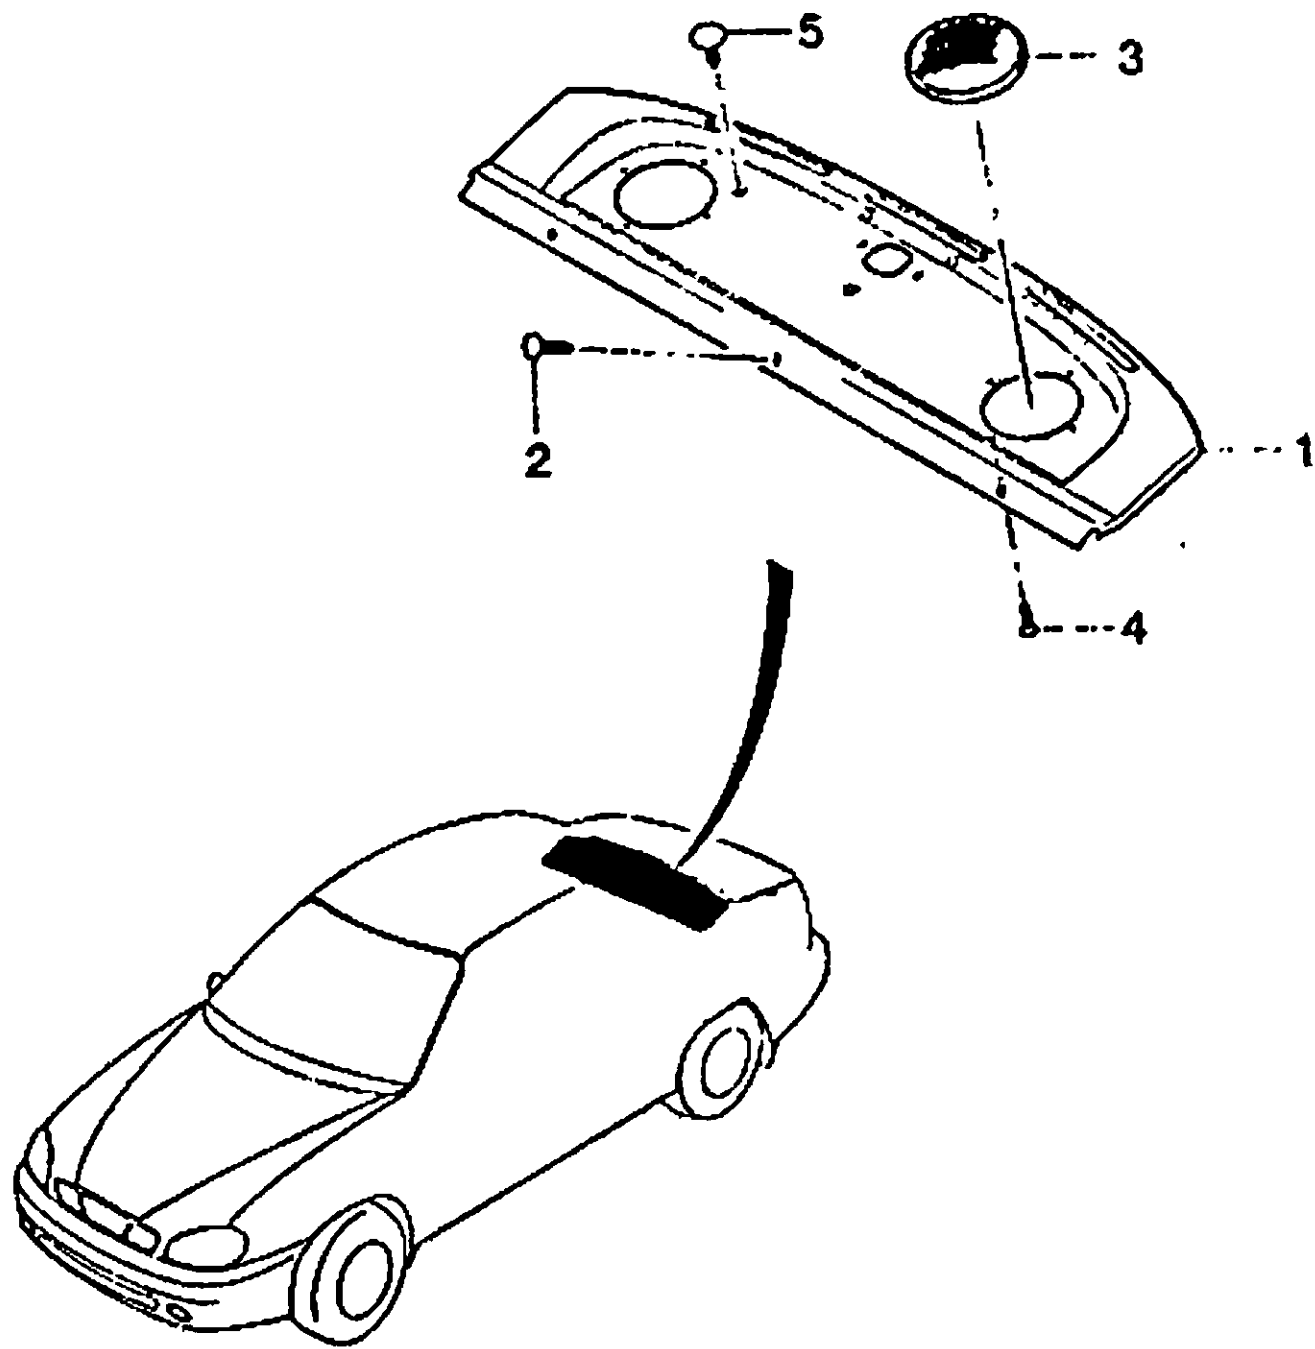


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[01]	(E)SHELF A-BACK PANEL,UPPER (D)REGAL,HINTERE VERKLEIDUNG									(F)ETAGERE-PANNEAU ARRIERE (S)ESTANTE-PANEL TRASERO					
	96236082	.	.	B	.	.	S	S	.	-T93	1		WOISPEAKER	E1		
	96236083	.	.	B	.	.	O	O	S	-T93	1		WISPEAKER	E2		
	96236084	.	.	B	.	.	A	A	.	&T93	1		WOISPEAKER	E3		
	96236085	.	.	B	.	.	A	A	A	&T93	1		WISPEAKER	E4		
	[02]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	09409-08315	.	.	B	.	.	S	S	S		3					
	[03]	(E)GRILLE A-SPEAKER,REAR (D)GITTER,LAUTSPRECHER									(F)GRILLE-HAUT-PARLEUR (S)REJA-ALTAVOZ					
	96236136	.	.	B	.	.	O	O	S		2					
	[04]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	03111-29065	.	.	B	.	.	O	O	S		8					
	[05]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	09409-12003	.	.	B	.	.	S	S	S		3					
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE										
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK										

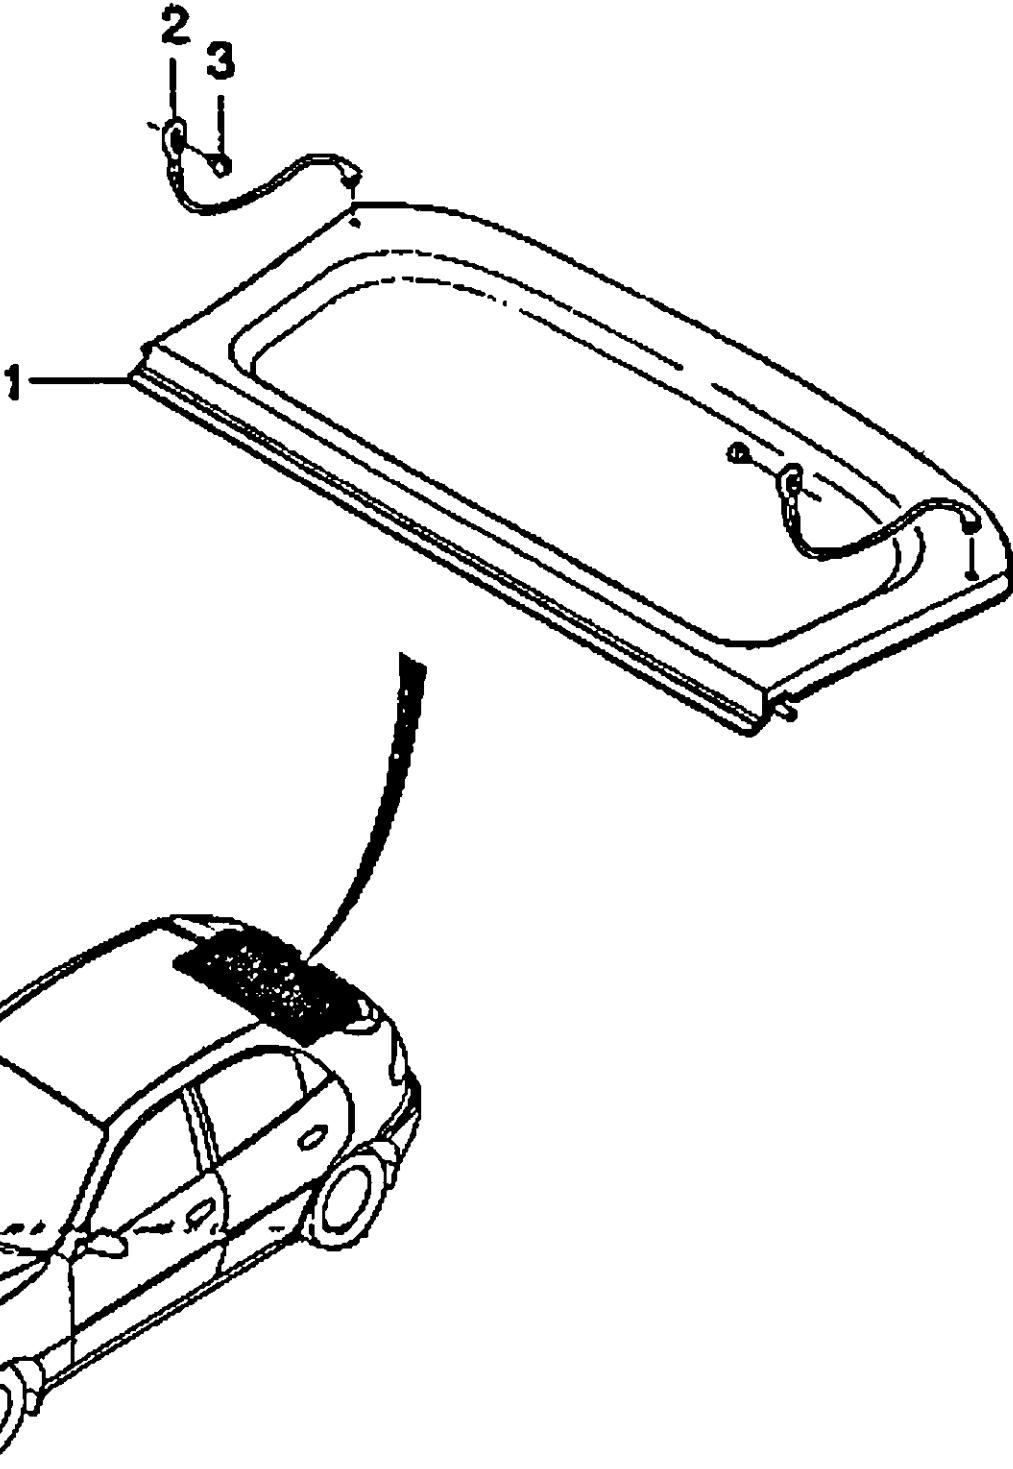

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)COVER A-LOAD COMPT.CENTER (D)DECKEL									(F)COUVERCLE (S)CUBIERTA					
	96236032	.	.	.	B	B	S	.	S	-T93	1		INCL. #2	F1		
	96236033	.	.	.	B	B	A	.	A	&T93	1		INCL. #2	F2		
	[02]	(E)STRAP-LOAD COMPART.COVER (D)BAND									(F)BRETELLE (S)BRIDA					
	90244194	.	.	.	B	B	S	.	S		2					
	[03]	(E)BUTTON-FIXING (D)KNOPF									(F)BOUTON (S)BOTON					
	90248700	.	.	.	B	B	S	.	S		2					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

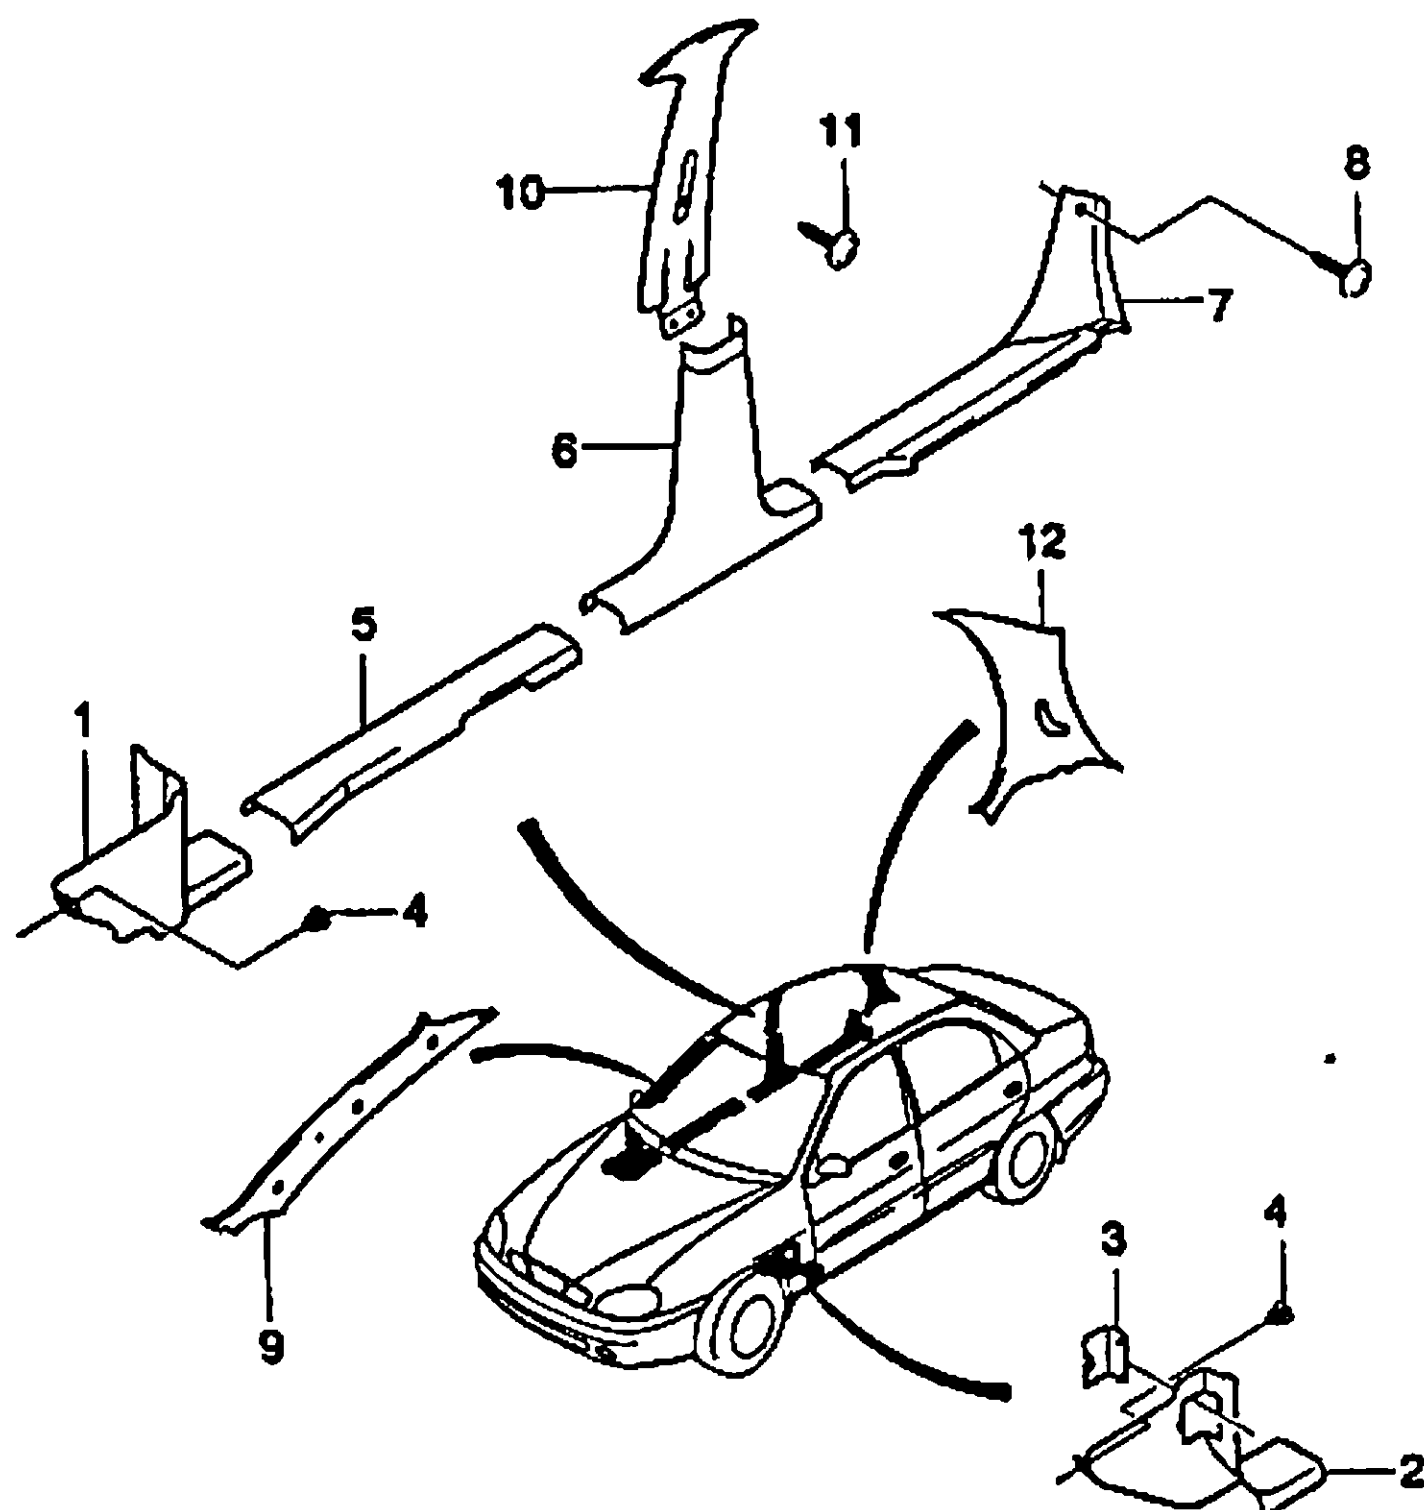


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G A	T / N G A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S S
	[01]	(E)TRIM A-SHROUD SIDE (D)VERKLEIDUNG,MANTEL SEITE									(F)GARNITURE (S)ADORNO-LADO DE CUBIERTA					
	96235985	. . B . . S S S									RH 1					
	[02]	(E)TRIM A-SHROUD SIDE (D)VERKLEIDUNG,MANTEL SEITE									(F)GARNITURE (S)ADORNO-LADO DE CUBIERTA					
	96235983	. . B . . S S S									LH 1					
	[03]	(E)COVER-SHROUD SIDE TRIM (D)DECKEL									(F)COUVERCLE (S)CUBIERTA					
	96235988	. . B . . S S S									1					
	[04]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	09409-05311	. . B . . S S S									2					
	[05]	(E)COVER A-ROCKER PANEL,FRON (D)DECKEL									(F)COUVERCLE (S)CUBIERTA					
	96235963	. . B . . S S S									LH 1					
	96235964	. . B . . S S S									RH 1					
	[06]	(E)TRIM-B PILLAR,LOWER (D)VERKLEIDUNG,B SAULE,UNTEN									(F)GARNITURE-B PILIER,BAS (S)ADORNO-PILAR B,BAJO					
	96236029	. . B . . S S S									LH 1					
	96236030	. . B . . S S S									RH 1					
	[07]	(E)COVER A-ROCKER PANEL,REAR (D)DECKEL									(F)COUVERCLE (S)CUBIERTA					
	96235967	. . B . . S S . &AM6									LH 1					
	96235968	. . B . . S S . &AM6									RH 1					
	96235969	. . B S &AM9									LH 1					
	96235969	. . B . . A . A									LH 1	970709		FOR POLAND		
	96235970	. . B S &AM9									RH 1					
ENG(ENGINE)			T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC B = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

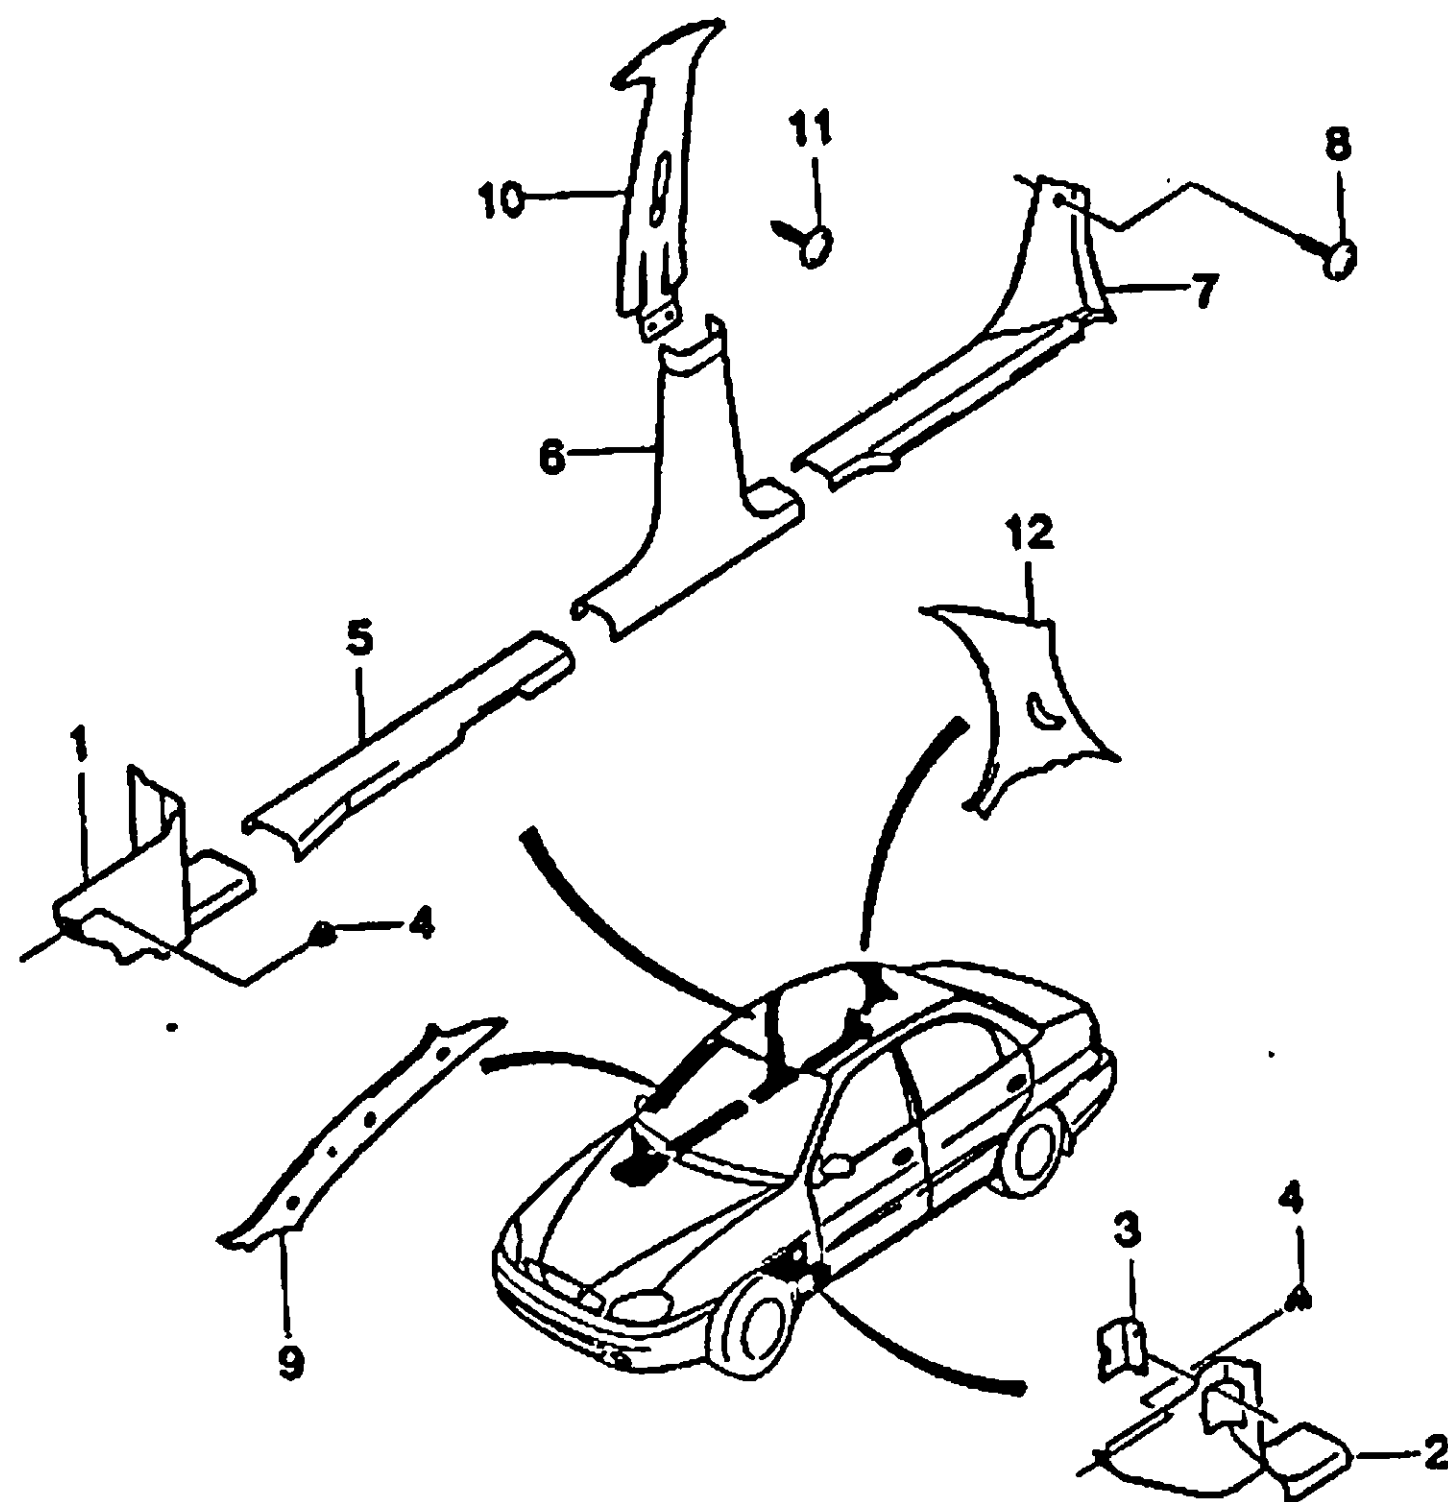

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	5 H	S				S	S		
	96235970	.	.	B	.	.	A	.	A		RH 1	970709	FOR POLAND	
	[08]	(E)SCREW-TAPPING (D)SCHRAUBE												
	03160-42135	.	.	B	.	.	S	S	.	&AM6	4			
	03160-42135	.	.	B	.	.	.	.	S	&AM9	2			
	03160-42135	.	.	B	.	.	A	.	A		2	970709	FOR POLAND	
	[09]	(E)TRIM A-A PILLAR (D)VERKLEIDUNG, A SÄULE												
	96235979	.	.	B	.	.	S	S	S		LH 1			
	96235980	.	.	B	.	.	S	S	S		RH 1			
	[10]	(E)TRIM A-B PILLAR, UPPER (D)VERKLEIDUNG, B SÄULE, OBEN												
	96236015	.	.	B	.	.	S	.	.	-AAC	LH 1			B3
	96236016	.	.	B	.	.	S	.	.	-AAC	RH 1			B4
	96236019	.	.	B	.	.	.	S	S	&AAC	LH 1			B7
	96236020	.	.	B	.	.	.	S	S	&AAC	RH 1			B8
	[11]	(E)SCREW-TAPPING (D)SCHRAUBE												
	03160-42163	.	.	B	.	.	S	S	S		4			
	[12]	(E)TRIM A-QUARTER WINDOW (D)VERKLEIDUNG												
	96236096	.	.	B	.	.	S	S	.	&AM6	LH 1			
	96236097	.	.	B	.	.	S	S	.	&AM6	RH 1			
	96236098	.	.	B	.	.	.	.	S	&AM9	LH 1			
	96236098	.	.	B	.	.	A	.	A		LH 1	970709	FOR POLAND	
	96236099	.	.	B	.	.	.	.	S	&AM9	RH 1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC S = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

7330 FRONT PILLAR TRIM (4DOOR N/B)

5L16

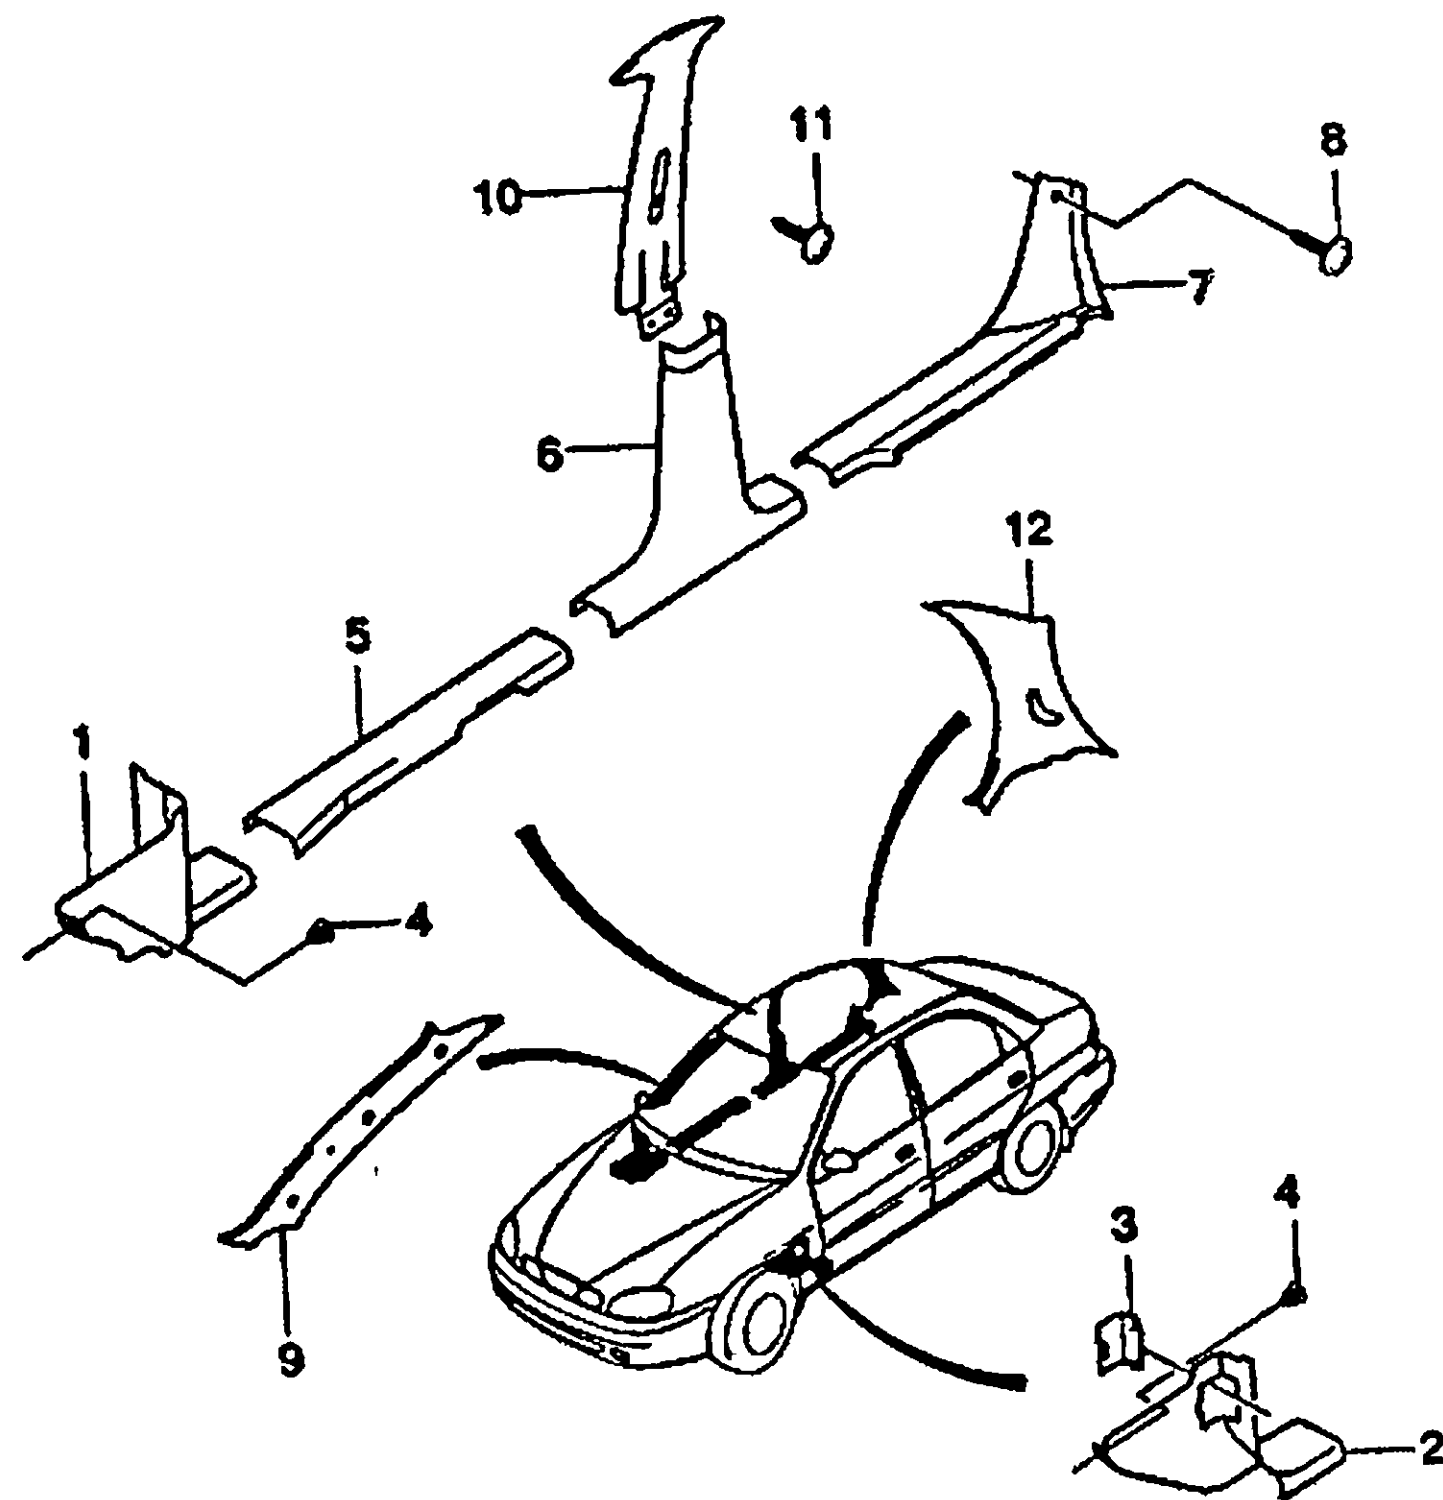


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	96236099	.	.	B	.	.	A	.	A		RH 1	970709	FOR POLAND			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								




KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)TRIM A-SHROUD SIDE (D)VERKLEIDUNG,MANTEL SEITE									(F)GARNITURE (S)ADORNO-LADO DE CUBIERTA				
	96235985	 B S . S									RH 1				
	[02]	(E)TRIM A-SHROUD SIDE (D)VERKLEIDUNG,MANTEL SEITE									(F)GARNITURE (S)ADORNO-LADO DE CUBIERTA				
	96235983	 B S . S									LH 1				
	[03]	(E)COVER-SHROUD SIDE TRIM (D)DECKEL									(F)COUVERCLE (S)CUBIERTA				
	96235988	 B S . S									1				
	[04]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA				
	09409-05311	 B S . S									2				
	[05]	(E)COVER A-ROCKER PANEL FRON (D)DECKEL									(F)COUVERCLE (S)CUBIERTA				
	96235963	 B S . S									LH 1				
	96235964	 B S . S									RH 1				
	[06]	(E)TRIM-B PILLAR,LOWER (D)VERKLEIDUNG,B SAULE,UNTEN									(F)GARNTTURE-B PILIER,BAS (S)ADORNO-PILAR E,BAJO				
	96236029	 B S . S									LH 1				
	96236030	 B S . S									RH 1				
	[07]	(E)COVER A-ROCKER PANEL REAR (D)DECKEL									(F)COUVERCLE (S)CUBIERTA				
	96235969	 B S . S									LH 1				
	96235969	 B A . A									LH 1 970709		FOR POLAND		
	96235970	 B S . S									RH 1				
	96235970	 B A . A									RH 1 970709		FOR POLAND		
	[08]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

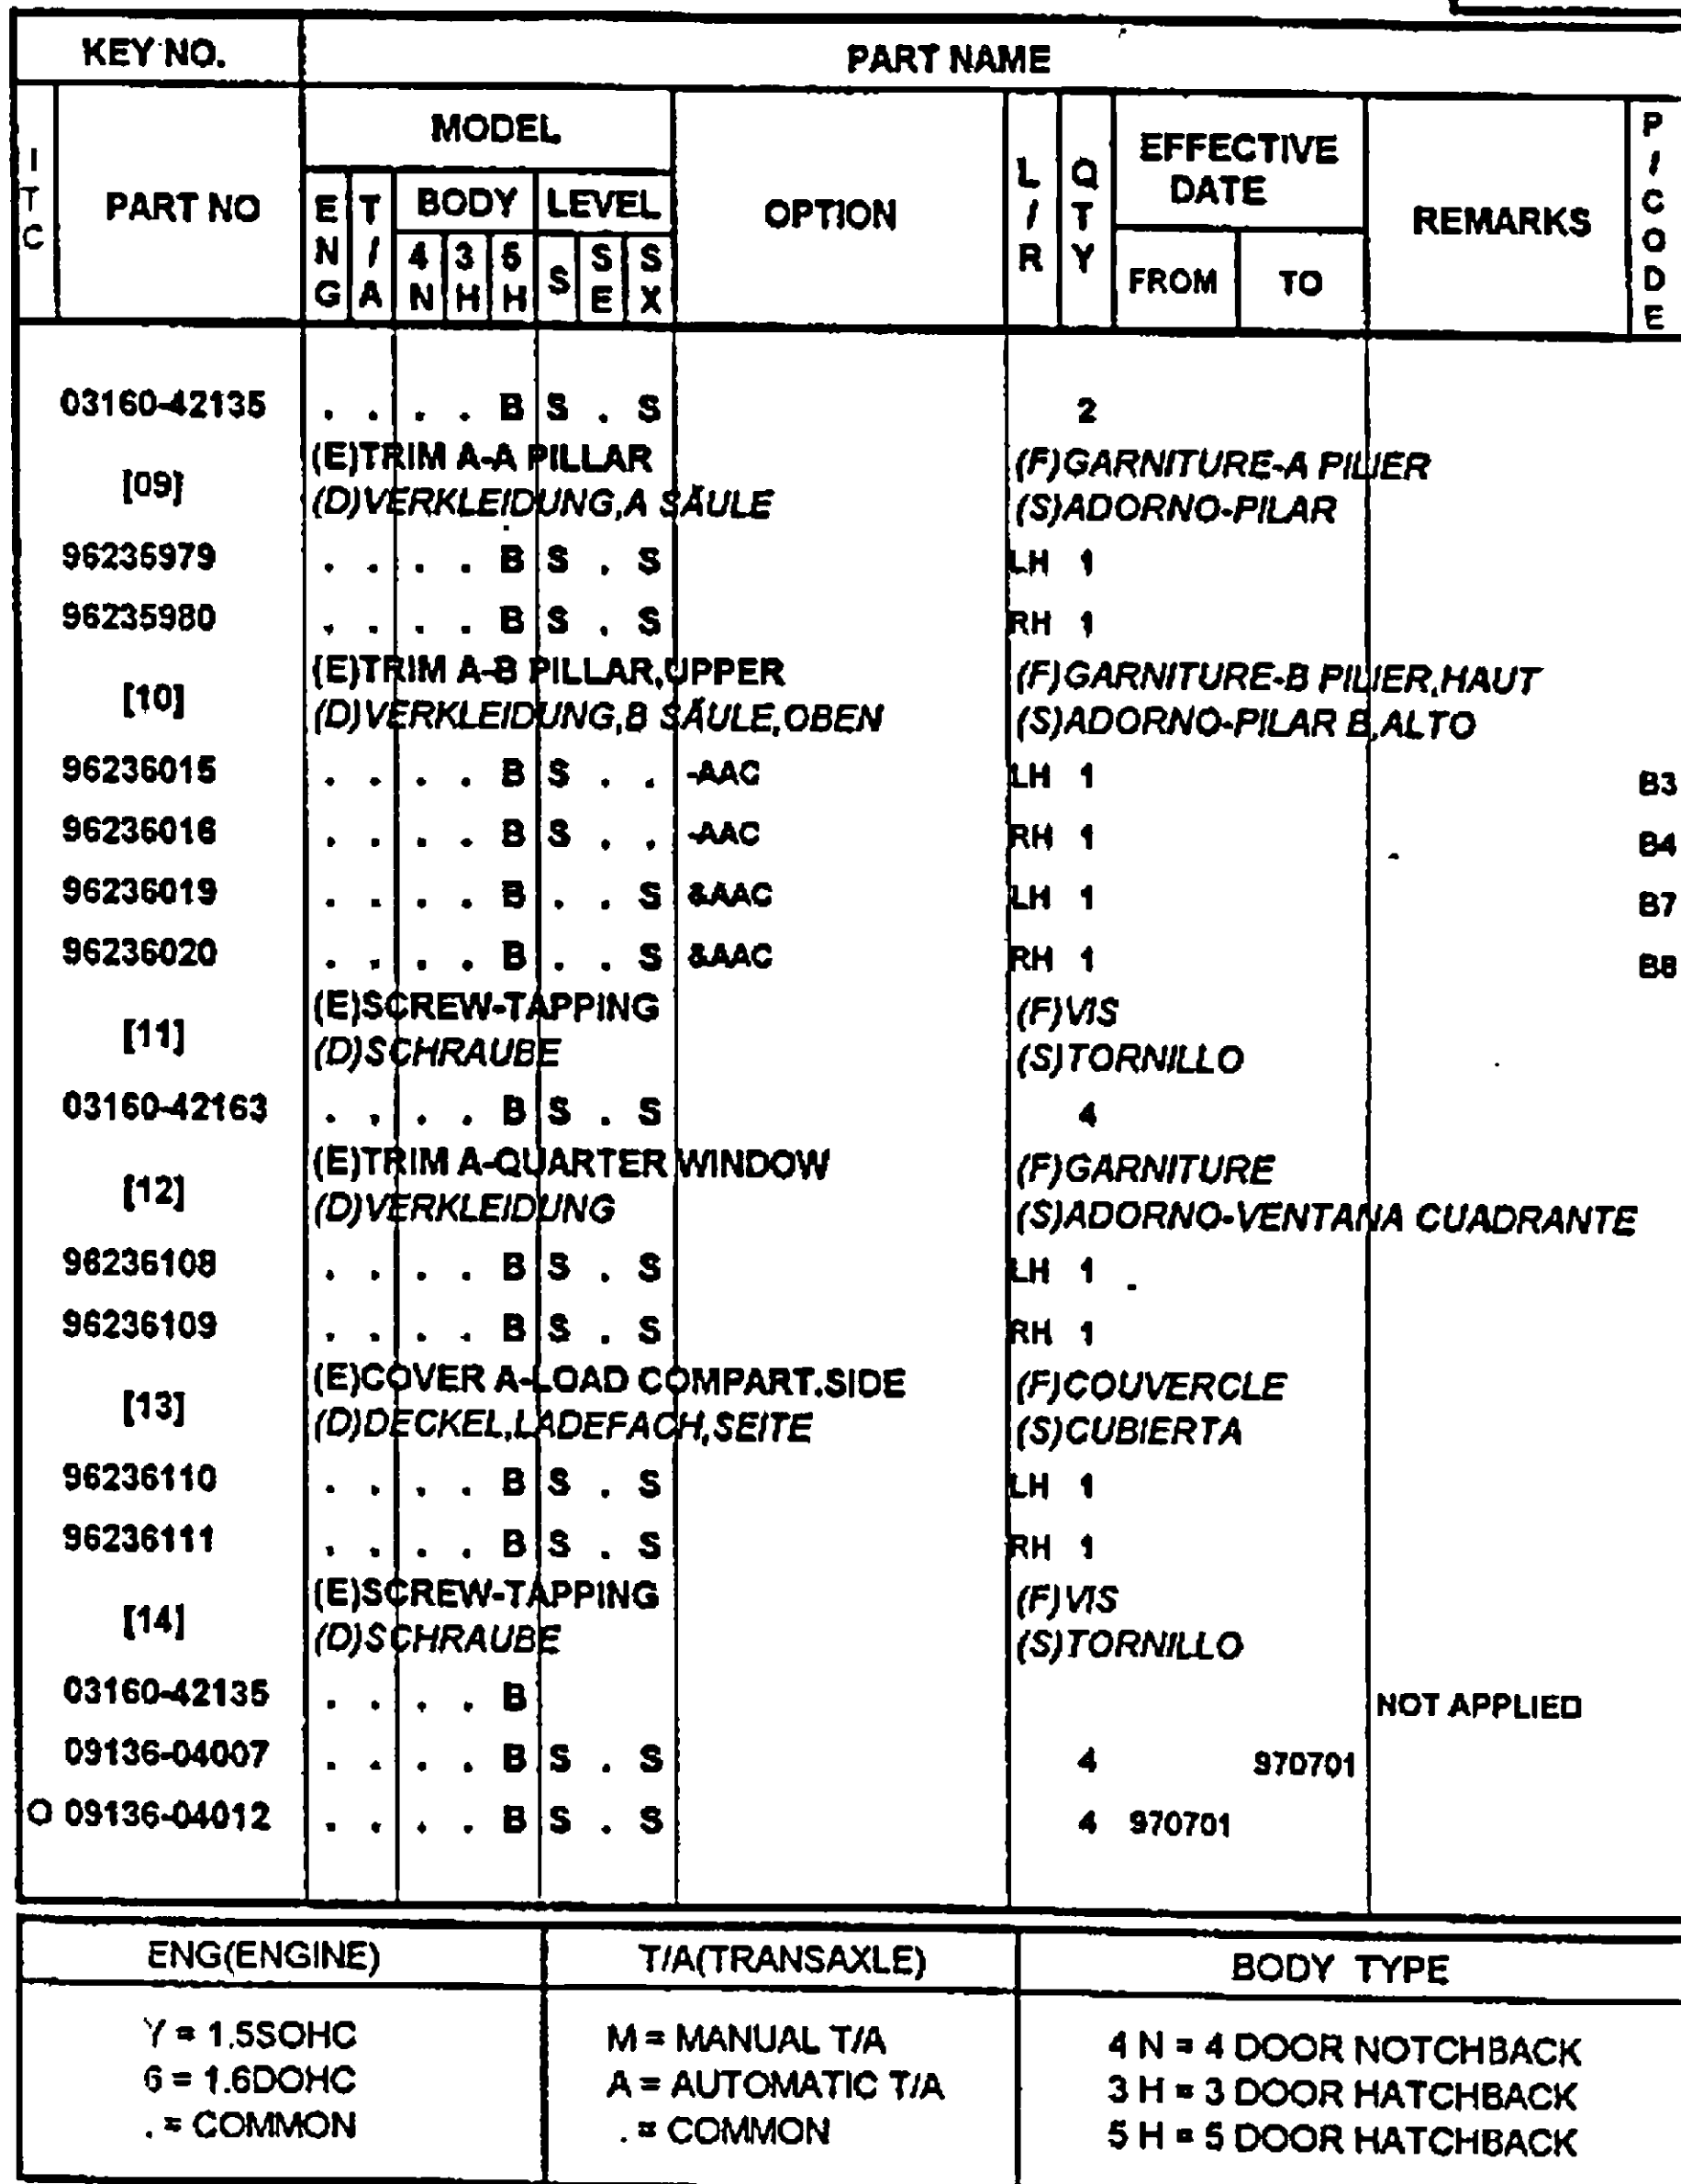


7331 FRONT PILLAR TRIM (5DOOR H/B)

6B05

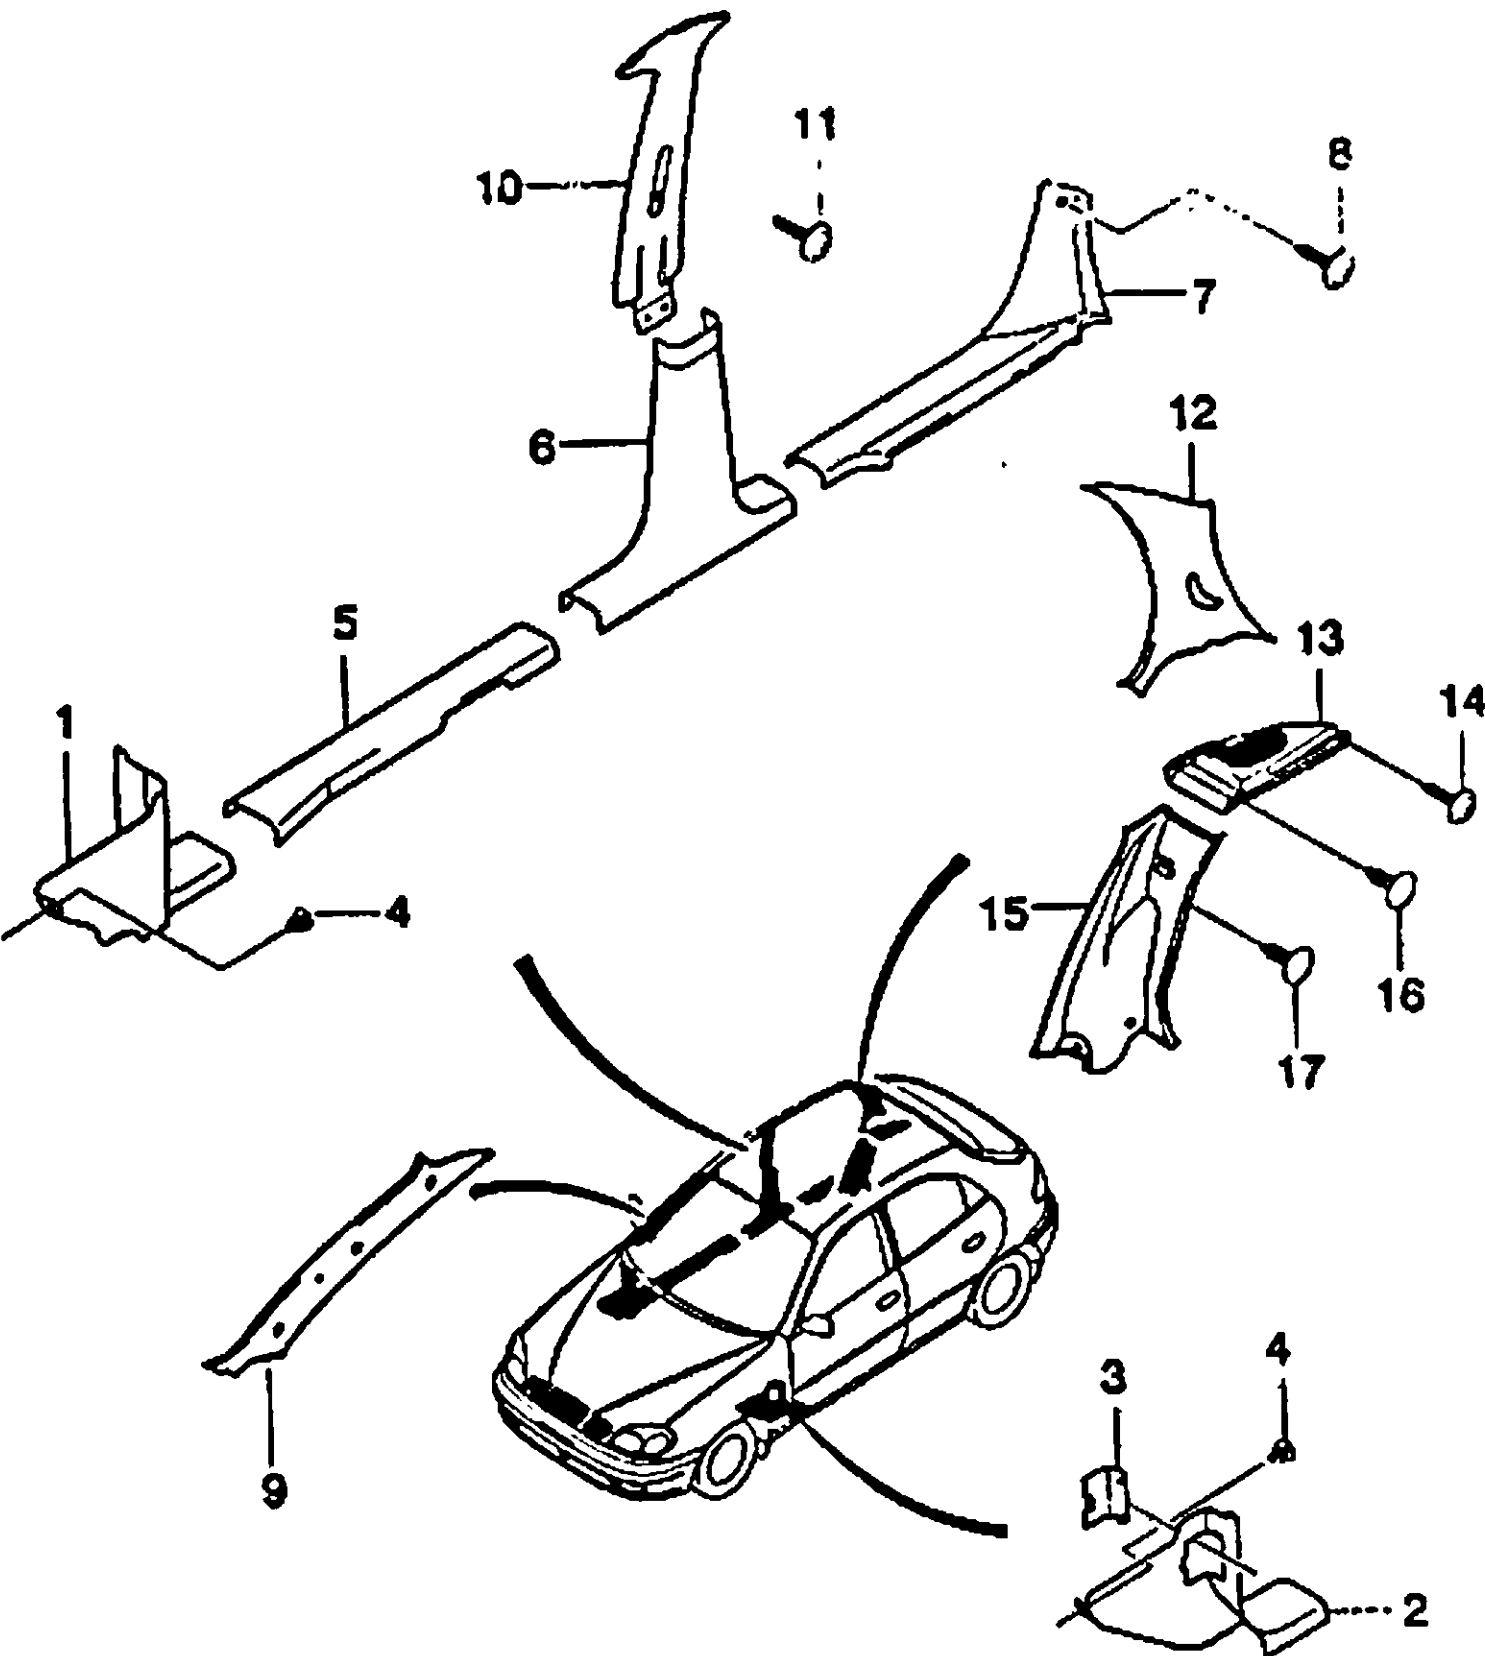


KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	[15]	(E)TRIM A-FRONT,WHEELHOUSE (D)VERKLEIDUNG,RADGEHÄUSE										(F)GARNITURE-TIMONERIE,AVANT (S)ADORNO-ENGRANAJE,FR			
	96236038	.	.	.	.	B	S	.	S			LH 1			
	96236039	.	.	.	.	B	S	.	S			RH 1			
	[16]	(E)CLIP (D)KLEMME										(F)ATTACHE (S)GRAPA			
	09409-07325	.	.	.	.	B	S	.	S			4		NOT APPLIED	
	[17]	(E)CLIP (D)KLEMME										(F)ATTACHE (S)GRAPA			
	09409-07325	.	.	.	.	B	S	.	S			4			
	09409-07325	.	.	.	.	B	A	.	A			4 970709		FOR POLAND	
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC = COMMON		M = MANUAL T/A A = AUTOMATIC T/A = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

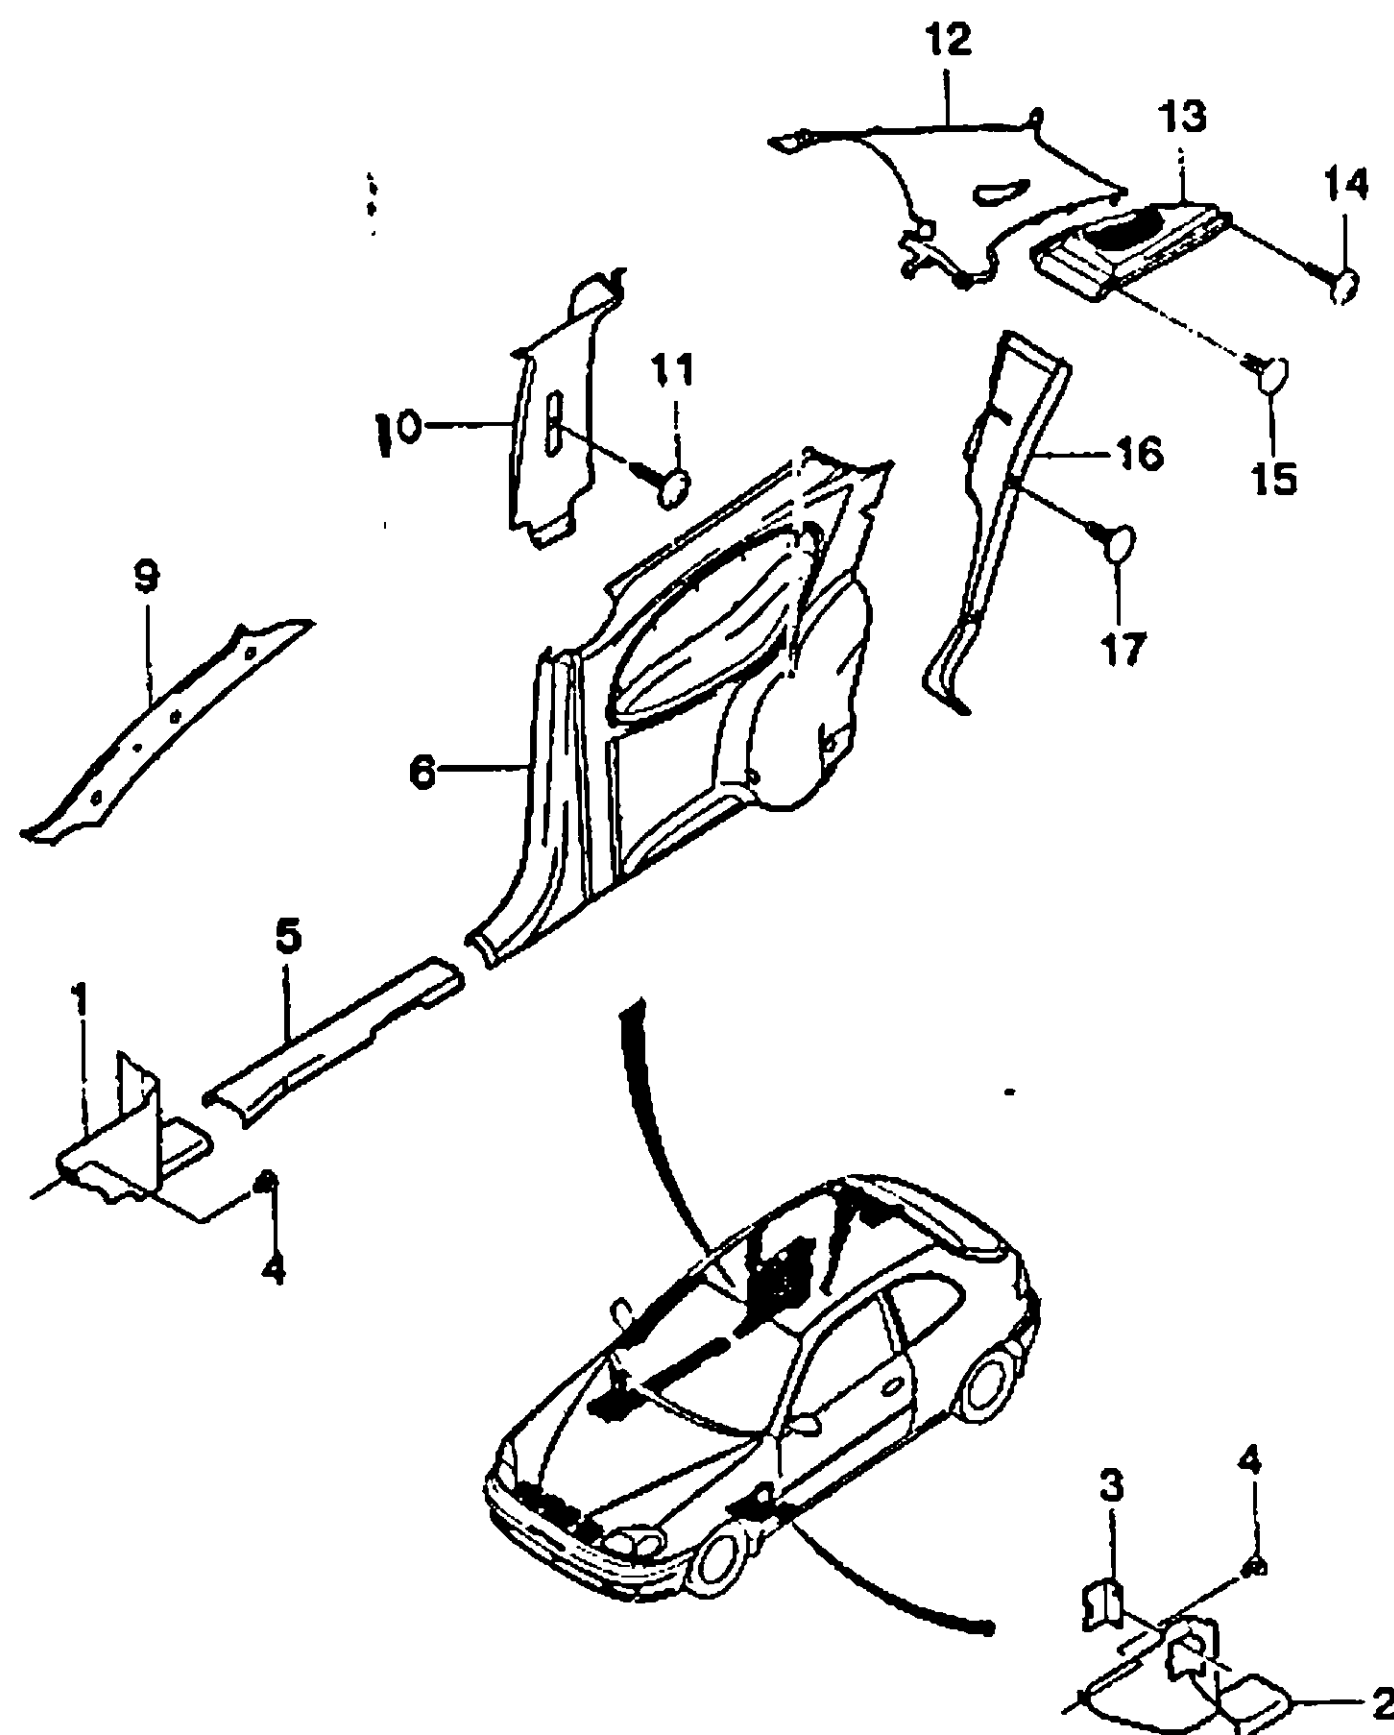

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T A	BODY		LEVEL								
				4 N H	5 H	S S	S S				S S	S S		
											FROM	TO		
	[01] 96235985	(E)TRIM A-SHROUD SIDE (D)VERKLEIDUNG,MANTEL SEITE B . S . S							(F)GARNITURE (S)ADORNO-LADO DE CUBIERTA RH 1					
	[02] 96235983	(E)TRIM A-SHROUD SIDE (D)VERKLEIDUNG,MANTEL SEITE B . S . S							(F)GARNITURE (S)ADORNO-LADO DE CUBIERTA LH 1					
	[03] 96235988	(E)COVER A-SHROUD SIDE TRIM (D)DECKEL B . S . S							(F)COUVERCLE (S)CUBIERTA 1					
	[04] 09409-05311	(E)CLIP (D)KLEMME B . S . S							(F)ATTACHE (S)GRAPA 2					
	[05] 96235976	(E)COVER A-ROCKER PANEL (D)DECKEL B . S . S							(F)COUVERCLE (S)CUBIERTA LH 1					
	[06] 96235976	(E)TRIM A-FRONT SIDE PANEL (D)VERKLEIDUNG B . S . S							(F)GARNITURE (S)ADORNO RH 1					
	[07] 96236067	(E)TRIM A-FRONT SIDE PANEL (D)VERKLEIDUNG B . S . S							(F)GARNITURE (S)ADORNO LH 1					K7
	[08] 96236068	(E)TRIM A-FRONT SIDE PANEL (D)VERKLEIDUNG B . S . S							(F)GARNITURE (S)ADORNO RH 1					K8
	[09] 96236057	(E)TRIM A-FRONT SIDE PANEL (D)VERKLEIDUNG B . O . S							(F)GARNITURE (S)ADORNO LH 1					K1
	[10] 96236058	(E)TRIM A-FRONT SIDE PANEL (D)VERKLEIDUNG B . O . S							(F)GARNITURE (S)ADORNO RH 1					K2
	[11] 96236013	(E)TRIM A-B PILLAR,UPPER (D)VERKLEIDUNG,B SAULE,OBEN B . S . S							(F)GARNITURE-B PILIER,HAUT (S)ADORNO-PILAR B,ALTO LH 1					B1
	[12] 96236014	(E)TRIM A-B PILLAR,UPPER (D)VERKLEIDUNG,B SAULE,OBEN B . S . S							(F)GARNITURE-B PILIER,HAUT (S)ADORNO-PILAR B,ALTO RH 1					B2
	[13] 96236014	(E)TRIM A-QUARTER WINDOW (D)VERKLEIDUNG B . S . S							(F)GARNITURE (S)ADORNO-VENTANA CUADRANTE RH 1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

7332 FRONT PILLAR TRIM (3DOOR H/B)


6D05

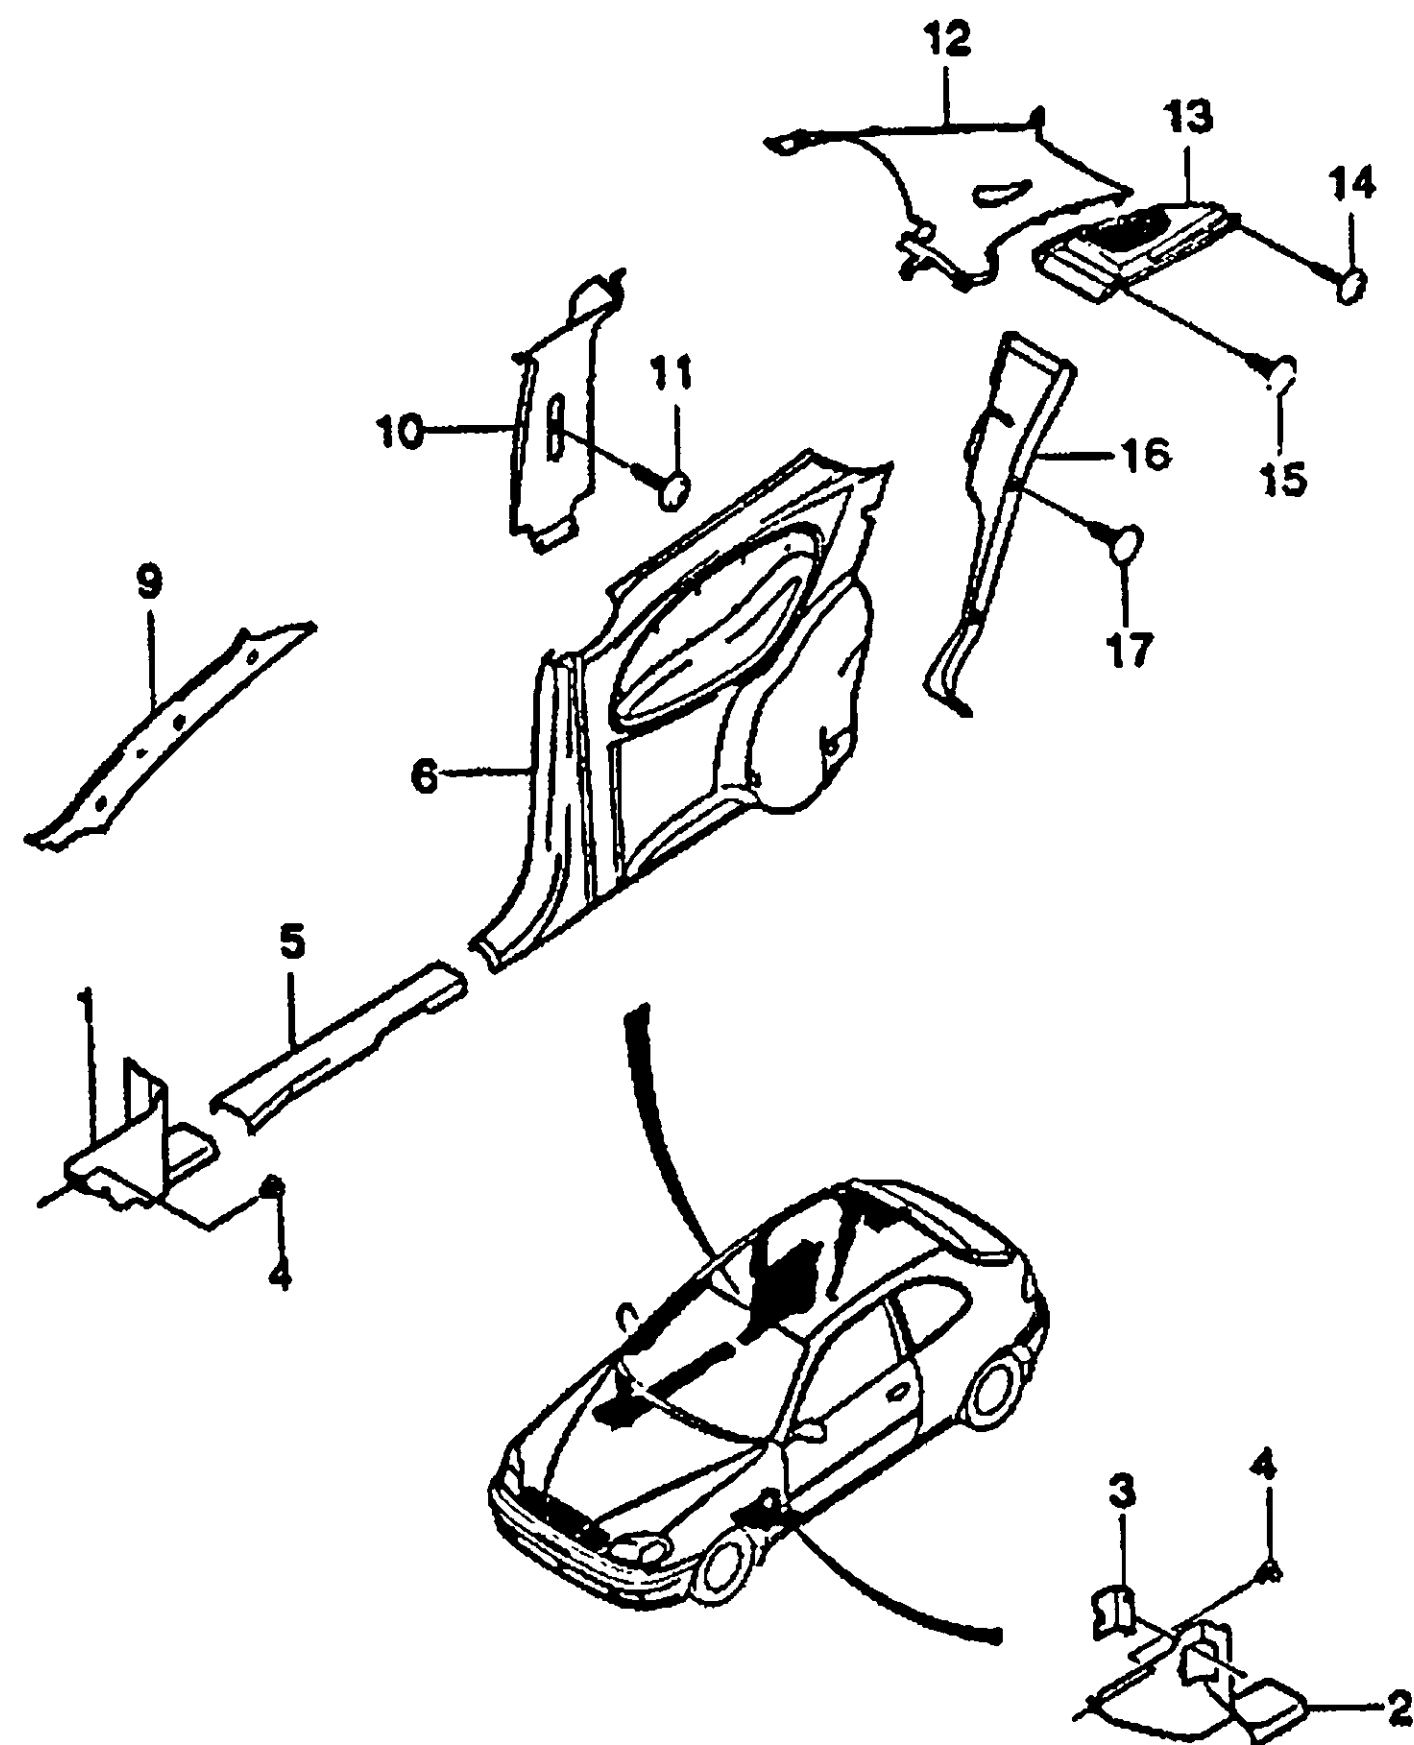


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	96236094	.	.	.	B	.	S	.	S						
	96236095	.	.	.	B	.	S	.	S						
	[13]	(E)COVER A-LOAD COMPART.SIDE (D)DECKEL,LADEFACH,SEITE													
	96236110	.	.	.	B	.	S	.	S						
	96236111	.	.	.	B	.	S	.	S						
	[14]	(E)SCREW-TAPPING (D)SCHRAUBE													
	03160-42135	.	.	.	B	.							NOT APPLIED		
	09136-04007	.	.	.	B	.	S	.	S	6		970701			
	O 09136-04012	.	.	.	B	.	S	.	S	6		970701			
	[15]	(E)CLIP (D)KLEMME													
	09409-07325	.	.	.	B	.							NOT APPLIED		
	[16]	(E)TRIM A-FRONT,WHEELHOUSE (D)VERKLEIDUNG,RADGEHÄUSE													
	96236040	.	.	.	B	.	S	.	S						
	96236041	.	.	.	B	.	S	.	S						
	[17]	(E)CLIP (D)KLEMME													
	09409-07325	.	.	.	B	.	S	.	S	4					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

7340 REAR PILLAR TRIM (N/B)


6E05

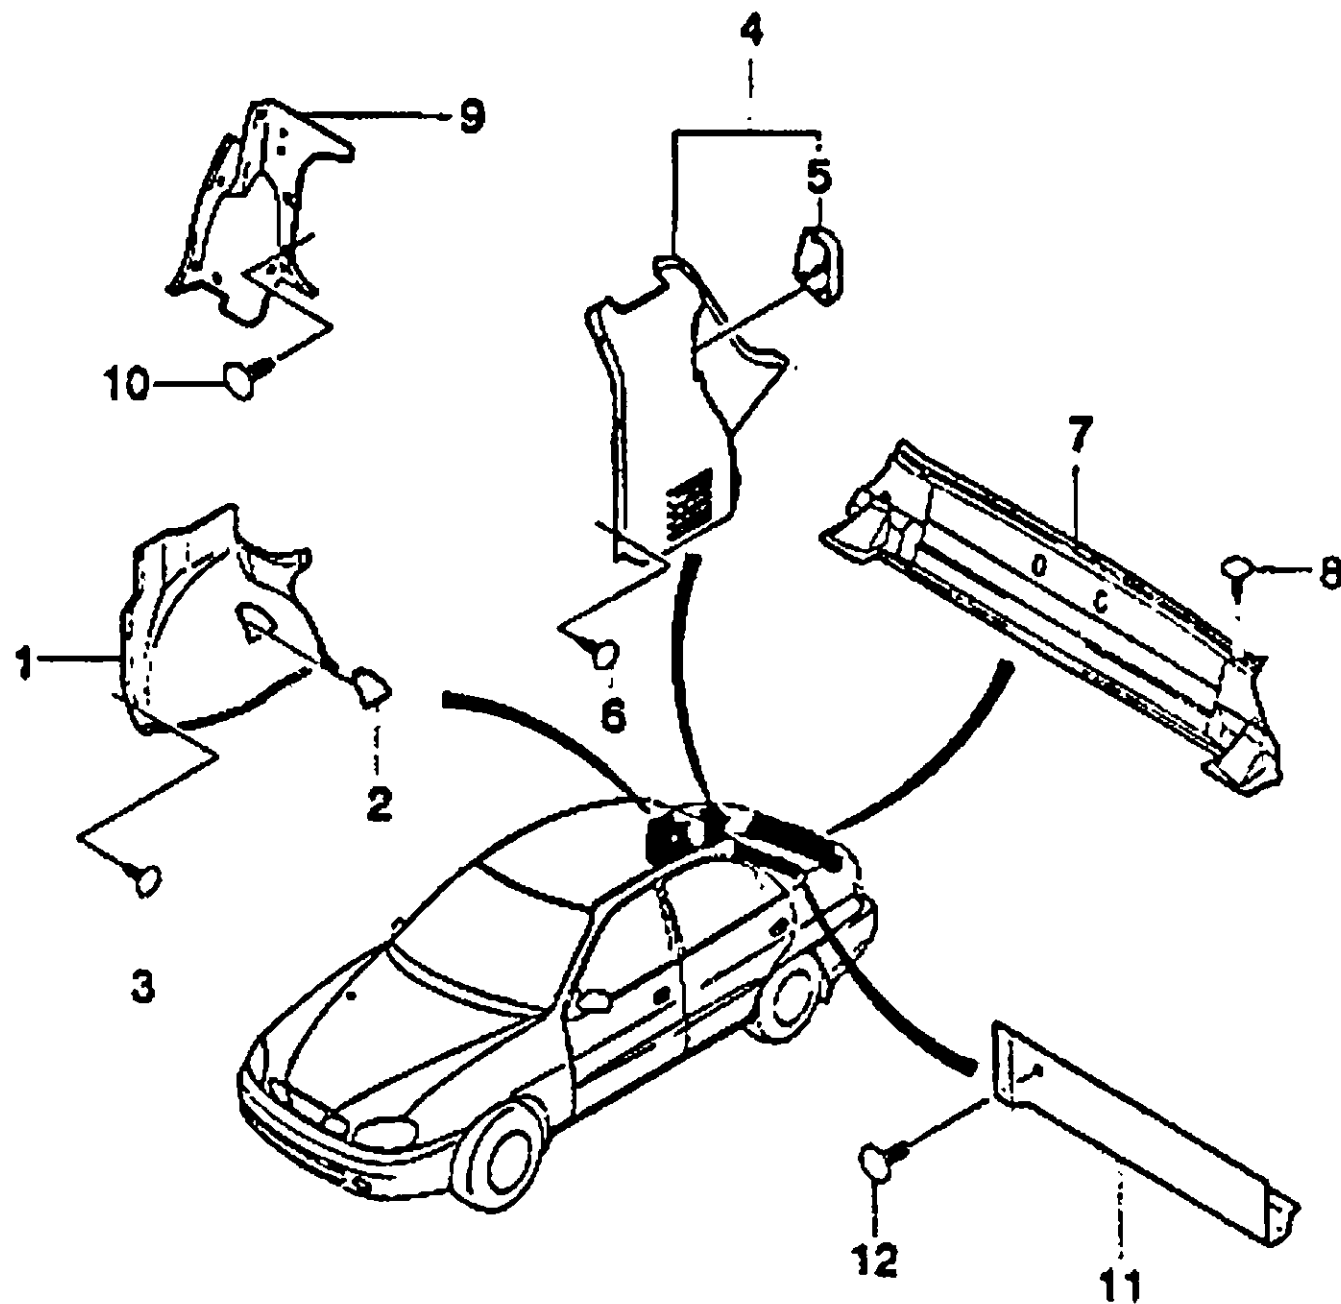


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S E	S X
[01]	(E)TRIM A-WHEELHOUSE REAR (D)VERKLEIDUNG,RADGEHÄUSE								(F)GARNITURE (S)ADORNO-ENGRANAJE,RR							
96236047		.	.	B	.	.	S	S	S	LH	1					
96238285		.	.	B	.	.	S	S	S	RH	1					
[02]	(E)COVER-SHOCK ABSORBER,REAR (D)DECKEL									(F)COUVERTURE (S)CUBIERTA						
96237855		.	.	B	.	.	S	S	S	2						
[03]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA						
09409-07326		.	.	B	.	.	S	S	S	4						
[04]	(E)TRIM A-REAR SIDE PANEL (D)VERKLEIDUNG									(F)GARNITURE (S)ADORNO						
96236073		.	.	B	.	.	S	S	S	LH	1					
96236074		.	.	B	.	.	S	S	S	RH	1					
[05]	(E)COVER-TAIL LAMP (D)DECKEL									(F)COUVERTURE (S)CUBIERTA						
96236079		.	.	B	.	.	S	S	S	LH	1					
96236080		.	.	B	.	.	S	S	S	RH	1					
[06]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA						
09409-07326		.	.	B	.	.	S	S	S	8						
[07]	(E)COVER-BACK PANEL,LOWER (D)DECKEL									(F)COUVERTURE (S)CUBIERTA						
96236056		.	.	B	.	.	S	S	S	1			L2			
[08]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA						
09409-07326		.	.	B	.	.	S	S	S	6	970509					
09409-07326		.	.	B	.	.	S	S	S	7	970509					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC C = 1.6DOHC = COMMON		M = MANUAL T/A A = AUTOMATIC T/A = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

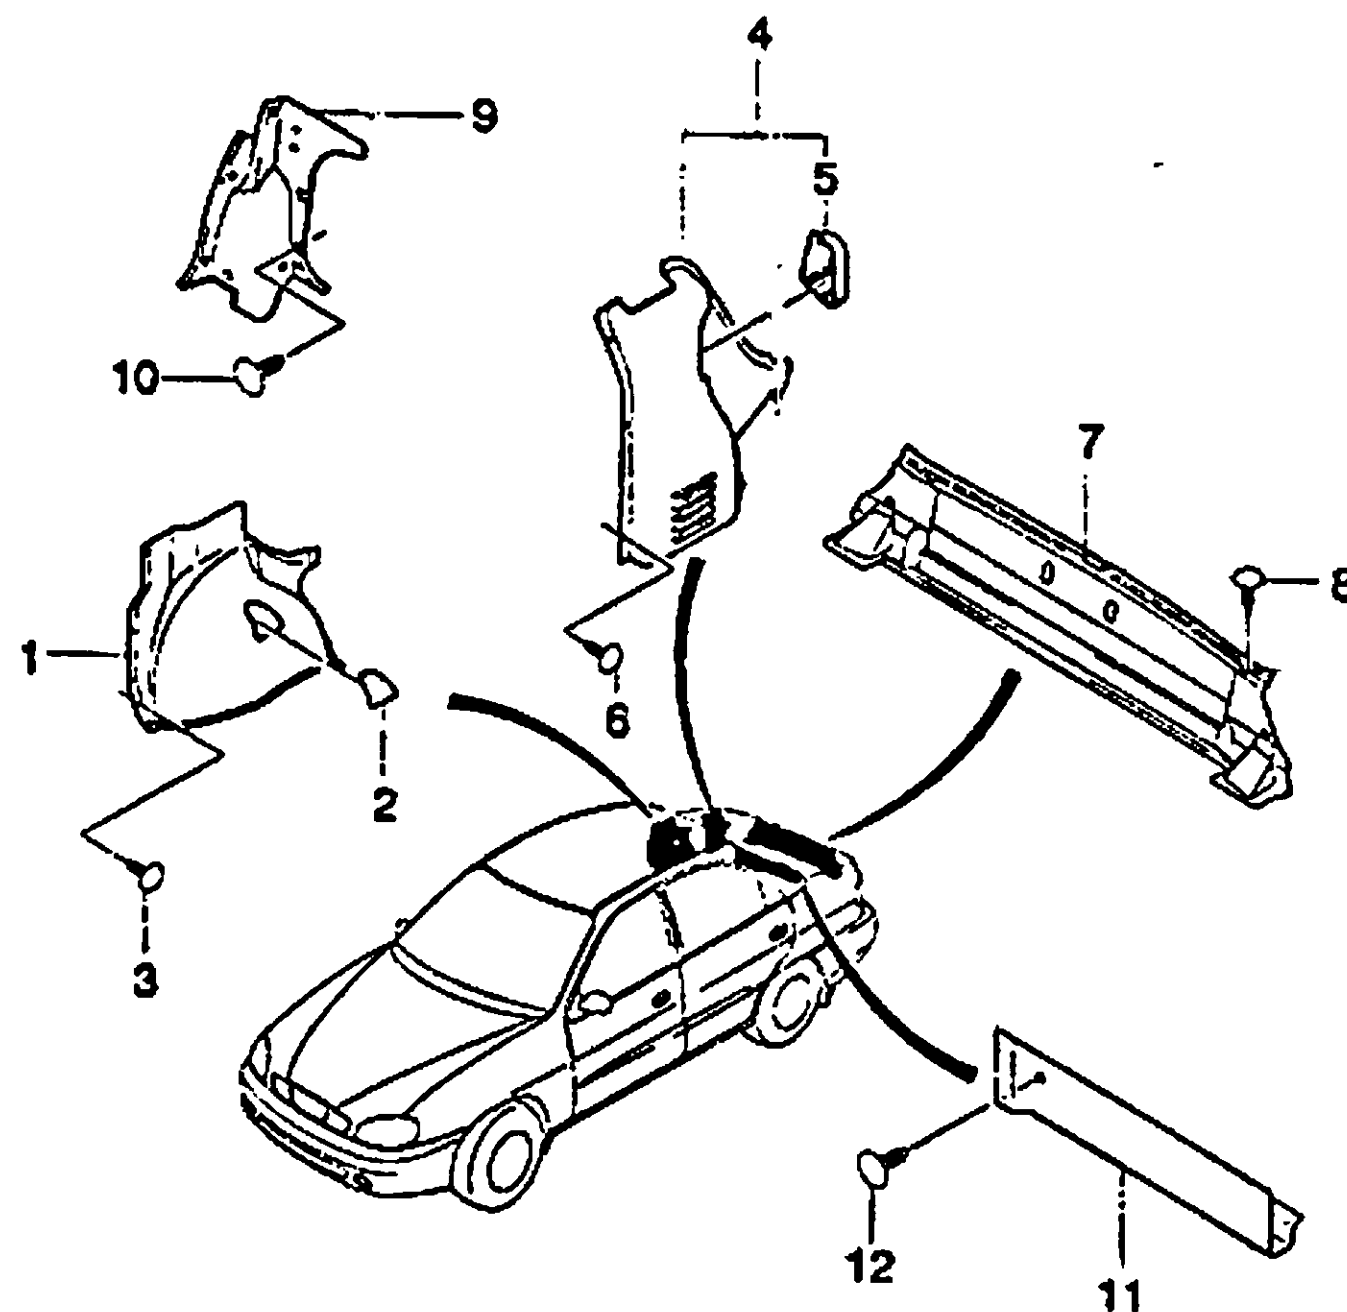

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	3 H	S S								S S	S S
	[09]	(E)COVER A-BACK PANEL,UPPER (D)DECKEL									(F)COUVERTURE (S)CUBIER/FA					
	96236053	.	.	B	.	.	.	S			1	.				
	96236053	.	.	B	.	.	A	A			1	970709	FOR POLAND			
	[10]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	09409-07325	.	.	B	.	.	.	S			2					
	09409-07325	.	.	B	.	.	A	A			2	970709	FOR POLAND			
	[11]	(E)TRIM A-FRONT,WHEELHOUSE (D)VERKLEIDUNG,RADGEHÄUSE									(F)GARNITURE-TIMONERIE,AVANT (S)ADORNO-ENGRANAJE,FR					
	96252543	.	.	B	.	.	.	S			LH 1					
	96252543	.	.	B	.	.	A	A			LH 1	970709	FOR POLAND			
	96252545	.	.	B	.	.	.	S	8AM9		RH 1					
	96252545	.	.	B	.	.	A	A			RH 1	970709	FOR POLAND			
	[12]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	09409-07325	.	.	B	.	.	S	S	.		4					
ENG(ENGINE)		T/A(TRANSAXLE)				BODY TYPE										
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK										

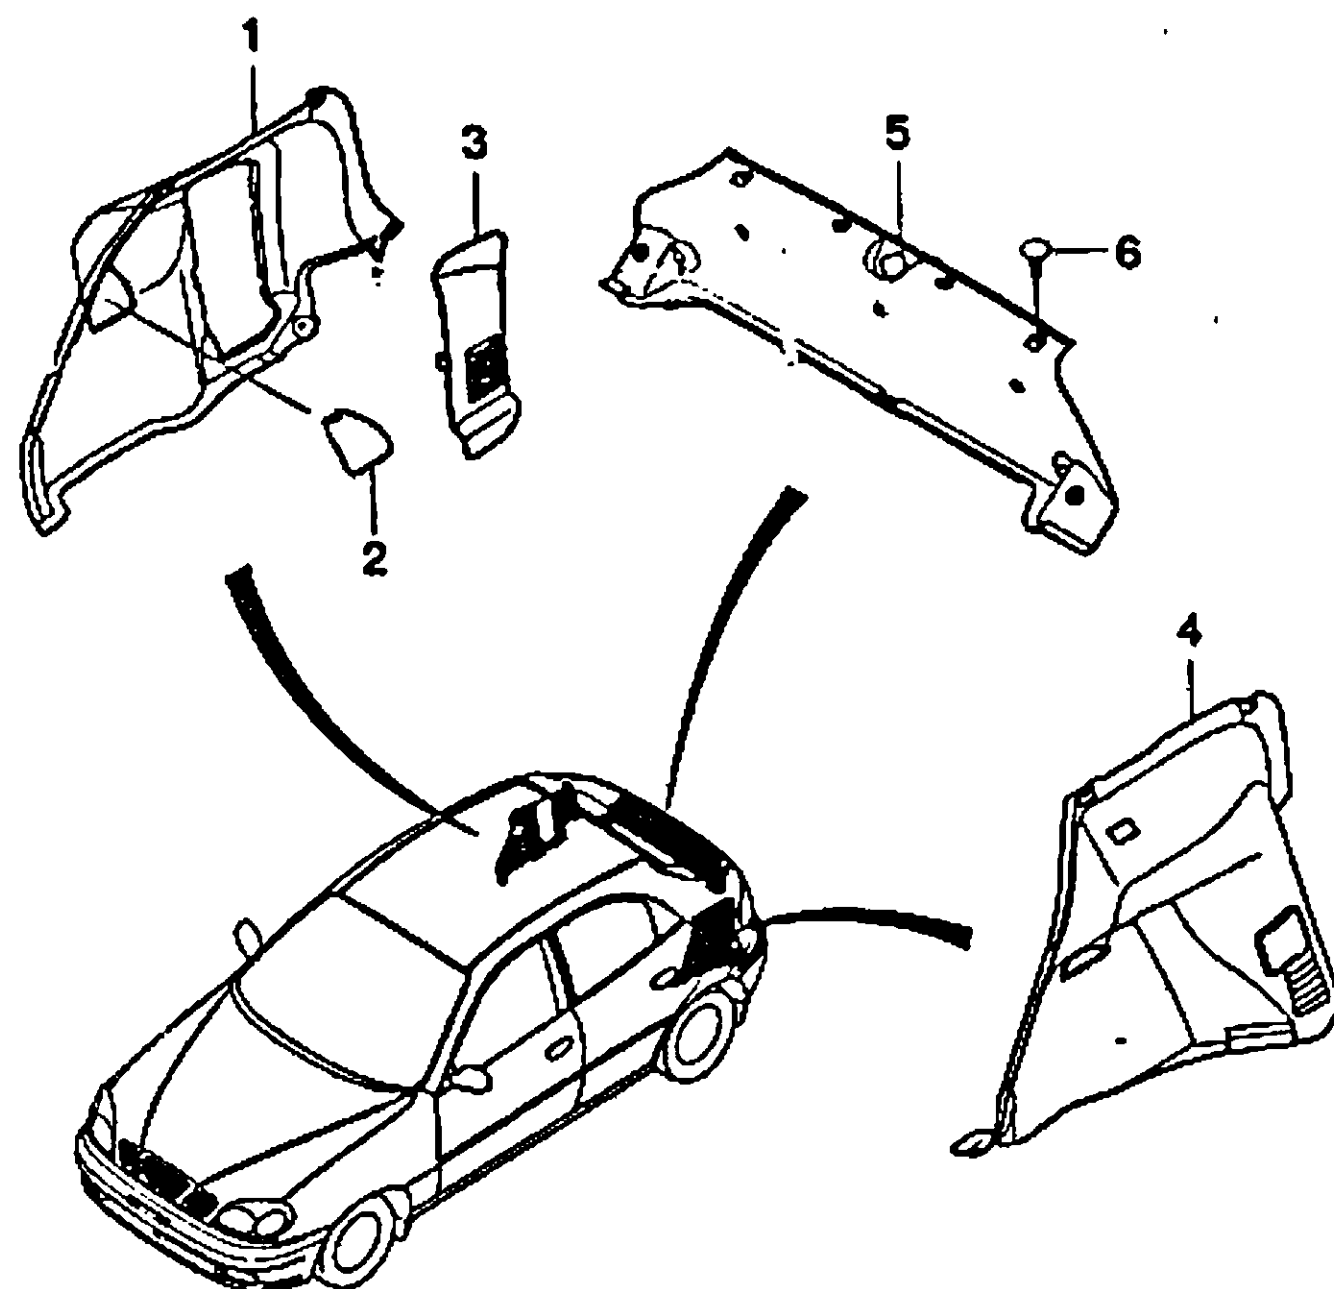

KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q / T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S S	S S							
	[01] 96236071	(E)TRIM A-REAR SIDE PANEL (D)VERKLEIDUNG . . . B B S . S									(F)GARNITURE (S)ADORNO LH 1		INCL #2.3		
	[02] 96237855	(E)COVER-SHOCK ABSORBER,REAR (D)DECKEL . . . B B S . S									(F)COUVERTURE (S)CUBIERTA 2				
	[03] 96236081	(E)COVER-TRUNK JACK (D)DECKEL . . . B B S . S									(F)COUVERTURE (S)CUBIERTA 1				
	[04] 96236072	(E)TRIM A-REAR SIDE PANEL (D)VERKLEIDUNG . . . B B S . S									(F)GARNITURE (S)ADORNO RH 1				
	[05] 96236055	(E)COVER-BACK PANEL,LOWER (D)DECKEL . . . B B S . S									(F)COUVERTURE (S)CUBIERTA 1			L1	
	[06] 09409-07326	(E)CLIP (D)KLEMME . . . B B S . S									(F)ATTACHE (S)GRAPA 6	970509			
	09409-07326	. . . B B S . S									7	970509			
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

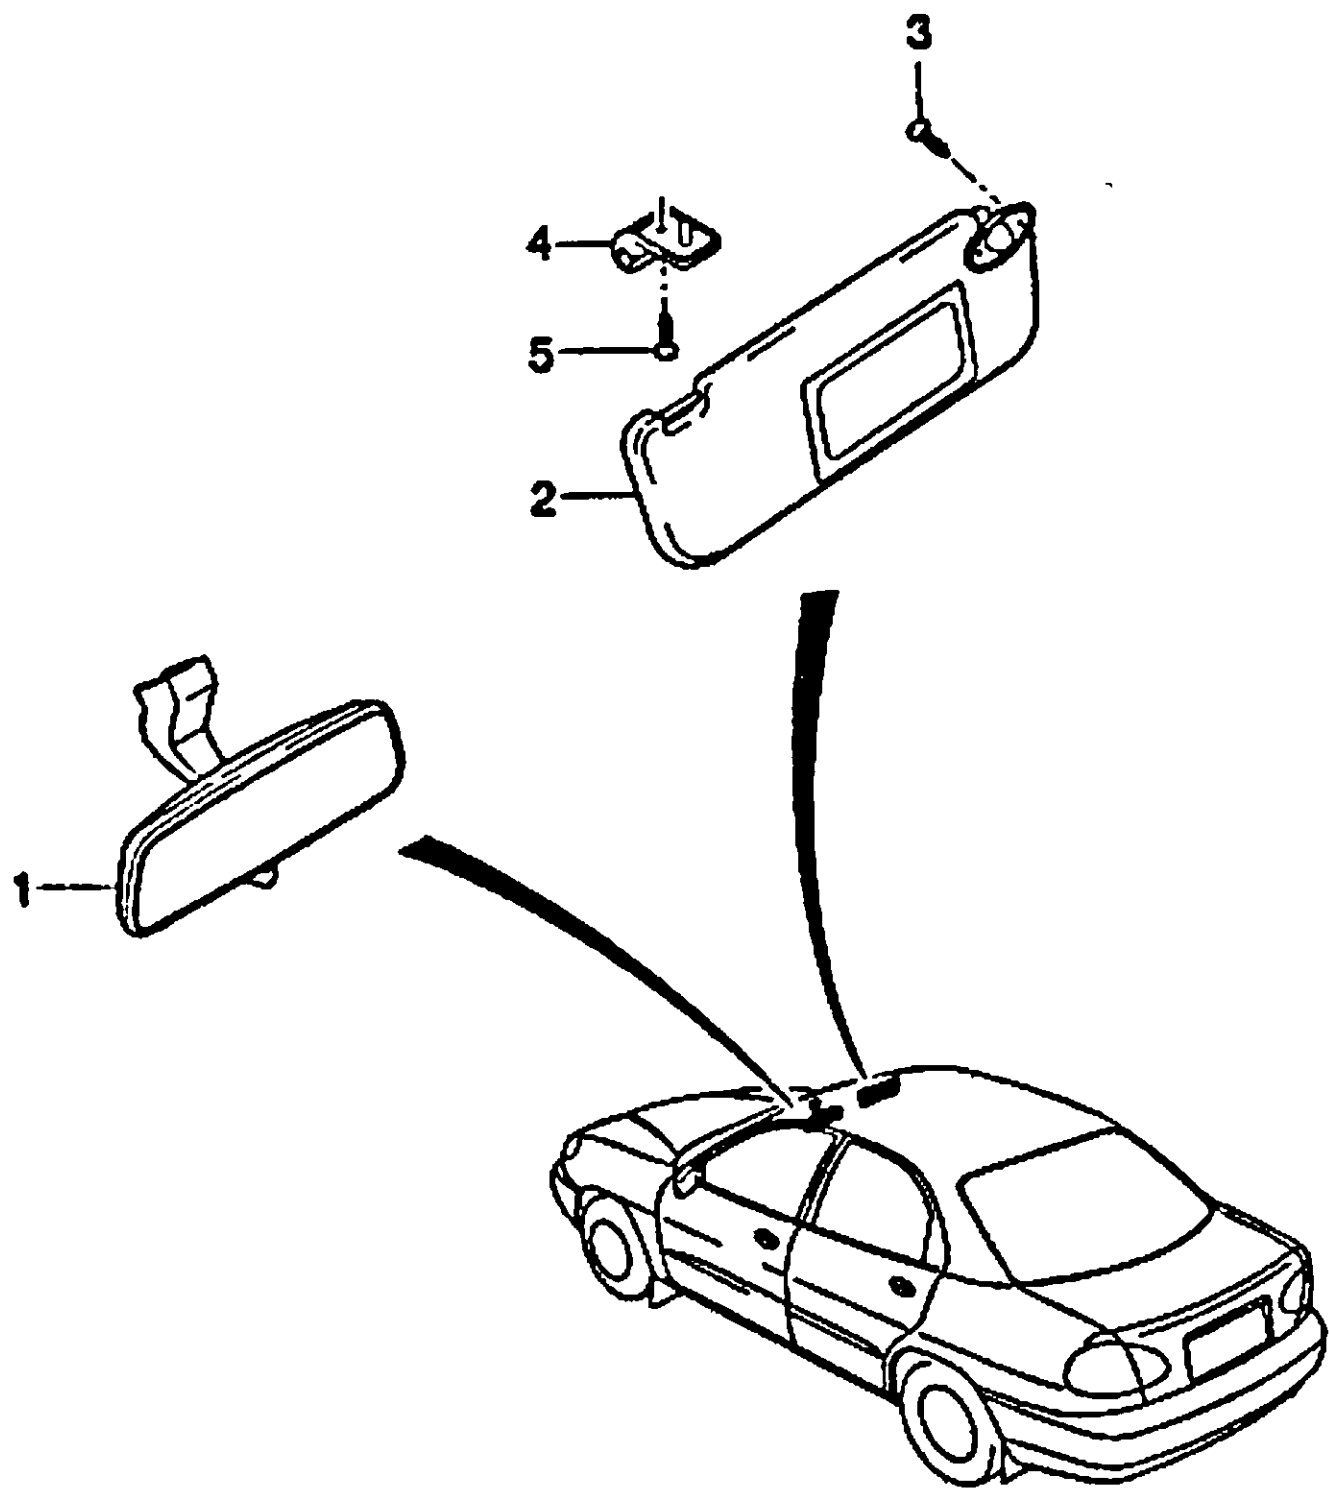


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E T / N G A	BODY			LEVEL					FROM	TO		
			4 N	3 H	6 H	S	S S S E X							
	[01]	(E)MIRROR A-INSIDE	TILTABLE					(F)RETROVISEUR						
		(D)SPIEGEL, VERSTELLBAR						(S)ESPEJO-INCLINABLE						
	96226345	. . .	B	B	B	S	S	S		1				
	[02]	(E)SUNSHADE A						(F)PARE-SOLEIL						
		(D)SONNENBLLENDE						(S)PARASOL						
	96235989	. . .	B	B	B	S	S	S	-ABF/AJ3	1			WO/MIRROR	M1
	96235996	. . .	B	B	B	.	O	O	&ABF/AJ3-VB4	LH 1	970508		WO/MIRROR	M3
N	96256547	. . .	B	B	B	.	O	O	&ABF/AJ3-VB4	LH 1	970508		WO/MIRROR	S2
	96235997	. . .	B	B	B	.	A	A	&ABF/AJ3&VB4	LH 1			WO/MIRROR	M4
	96235990	. . .	B	.	.	S	.	.	-ABF/AJ3	RH 1			WO/MIRROR	N1
	96235992	. . .	B	B	B	.	S	S	-ABF/AJ3	RH 1			W/MIRROR	N6
	96236004	. . .	B	B	B	.	O	O	&ABF-VB4	RH 1	970508		W/MIRROR	N8
N	96256551	. . .	B	B	B	.	O	O	&ABF-VB4	RH 1	970508		W/MIRROR	T2
	96236006	. . .	B	B	B	.	A	A	&ABF&VB4	RH 1			W/MIRROR	N9
	[03]	(E)SCREW-TAPPING						(F)VIS						
		(D)SCHRAUBE						(S)TORNILLO						
	03130-35198	. . .	B	B	B	S	S	S		4				
	[04]	(E)BRACKET-SUNSHADE						(F)SUPPORT						
		(D)TRÄGER						(S)SOPORTE						
	96236009	. . .	B	B	B	S	S	S		2				
	[05]	(E)SCREW-TAPPING						(F)VIS						
		(D)SCHRAUBE						(S)TORNILLO						
	03130-35198	. . .	B	B	B	S	S	S		2				
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE					
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK					

6J05

609


7520 FRONT SEAT PARTS

6K05

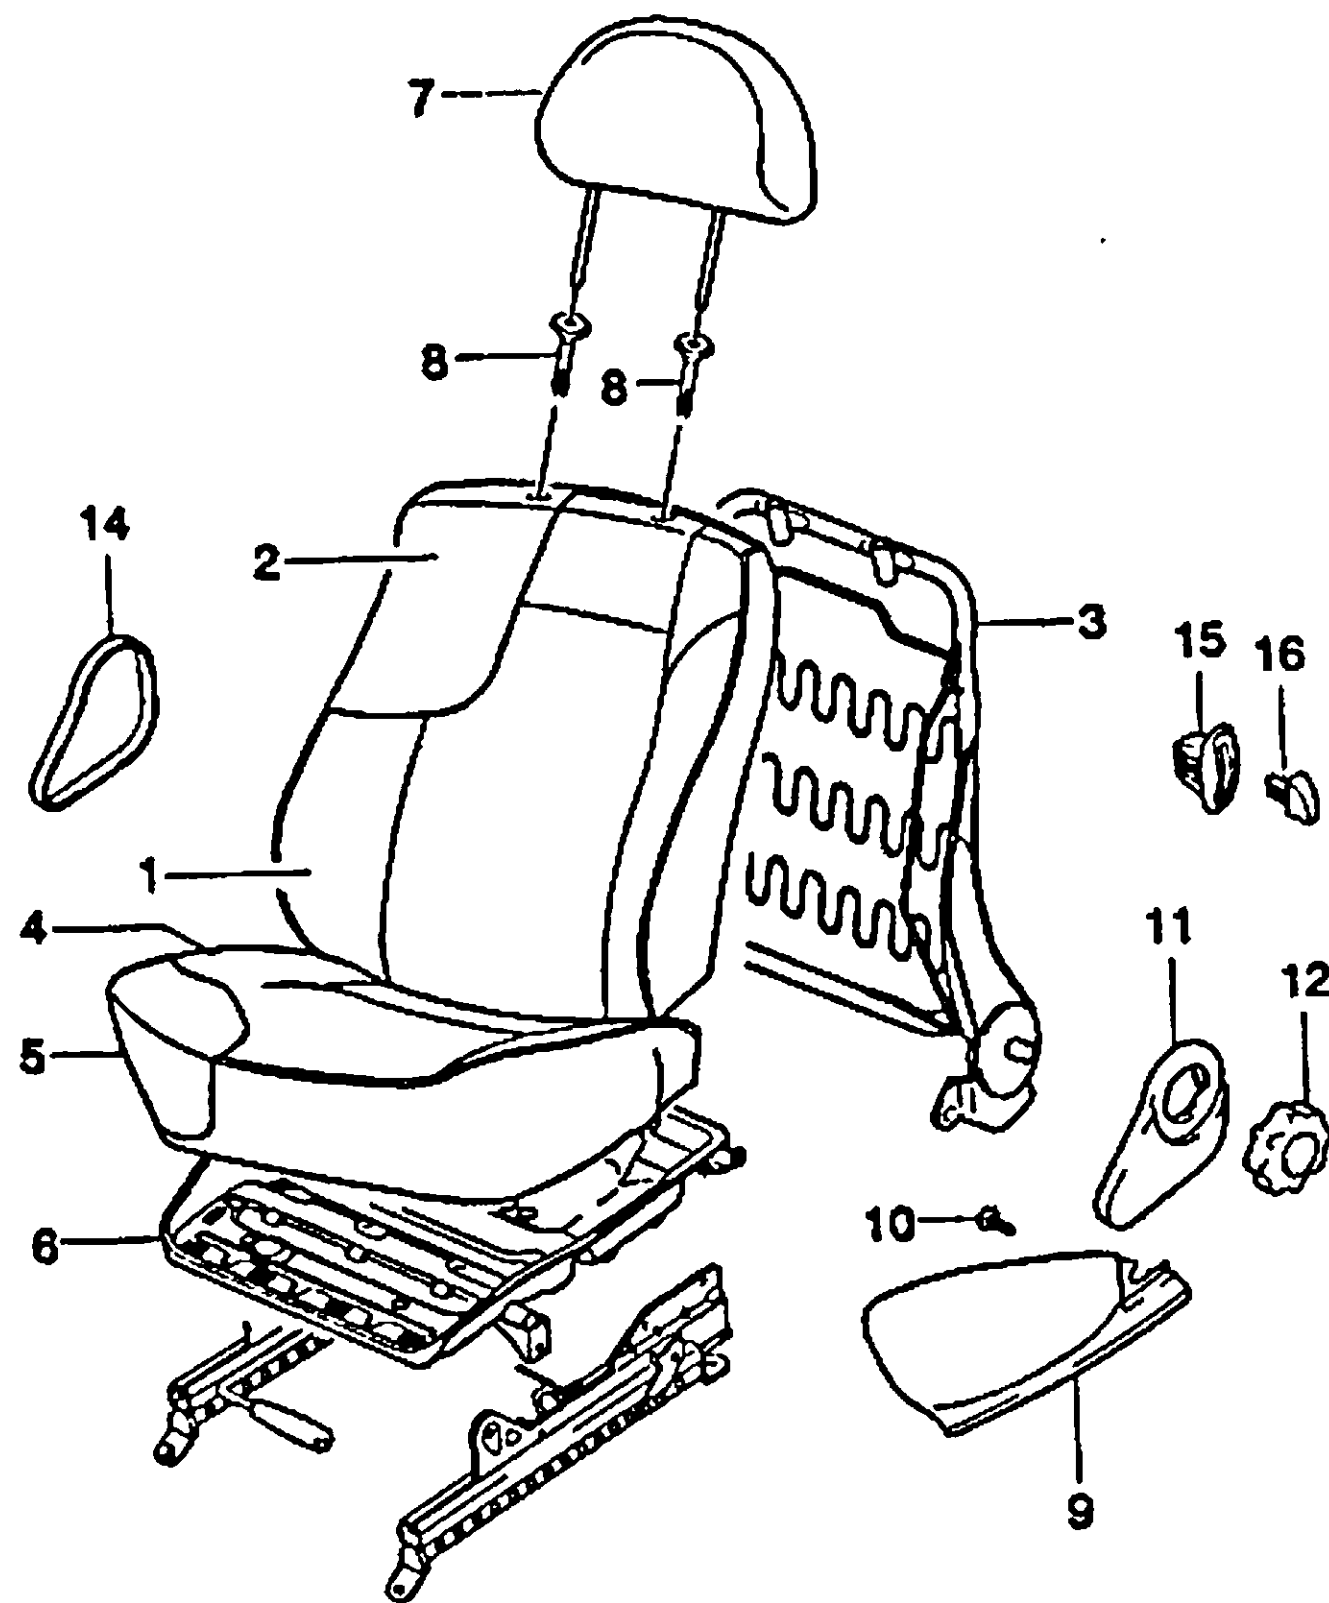


KEY NO.		PART NAME														
I T C	PART NO	MODEL								OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL		FROM				TO			
				4 N	3 H	5 H	S S	S S						S S		
	[01]	(E)COVERING-FRONT SEAT BACK (D)DECKEL											(F)COUVERTURE (S)CUBIERTA			
	96239314	.	.	B	B	B	S	.	.	&W6K			2			
	96239313	.	.	B	B	B	O	S	S	&W6E			2			
	[02]	(E)PAD-FRONT SEAT BACK (D)UNTERLAG											(F)PATIN (S)COJIN			
	96227651	.	.	B	B	B	S	S	S				2			
	[03]	(E)FRAME-FRONT SEAT BACK (D)RAHMEN											(F)CADRE (S)ARMADURA			
	96227653	.	.	B	.	B	S	S	S				LH 1			
	96227654	.	.	B	.	B	S	S	S				RH 1			
	96228641	.	.	.	B	.	S	.	S				LH 1			
	96228642	.	.	.	B	.	S	.	S				RH 1			
	[04]	(E)COVERING-FRT SEAT CUSHION (D)DECKEL											(F)COUVERTURE (S)CUBIERTA			
	96239316	.	.	B	B	B	S	.	.	&W6K			2			
	96239315	.	.	B	B	B	O	S	S	&W6E			2			
	[05]	(E)PAD-FRONT SEAT CUSHION (D)UNTERLAG											(F)PATIN (S)COJIN			
	96227652	.	.	B	B	B	S	S	S				2			
	[06]	(E)FRAME-FRONT SEAT CUSHION (D)RAHMEN											(F)CADRE (S)ARMADURA			
	96234775	.	.	B	B	B	S	S	S				LH 1			
	96234776	.	.	B	B	B	S	S	S				RH 1			
	[07]	(E)HEADREST A-FRONT SEAT (D)KOPFPOLSTER											(F)APPUI-TETE (S)APOYABRAZOS			
	96227633	.	.	B	B	B	S	.	.	&W6K			2			


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

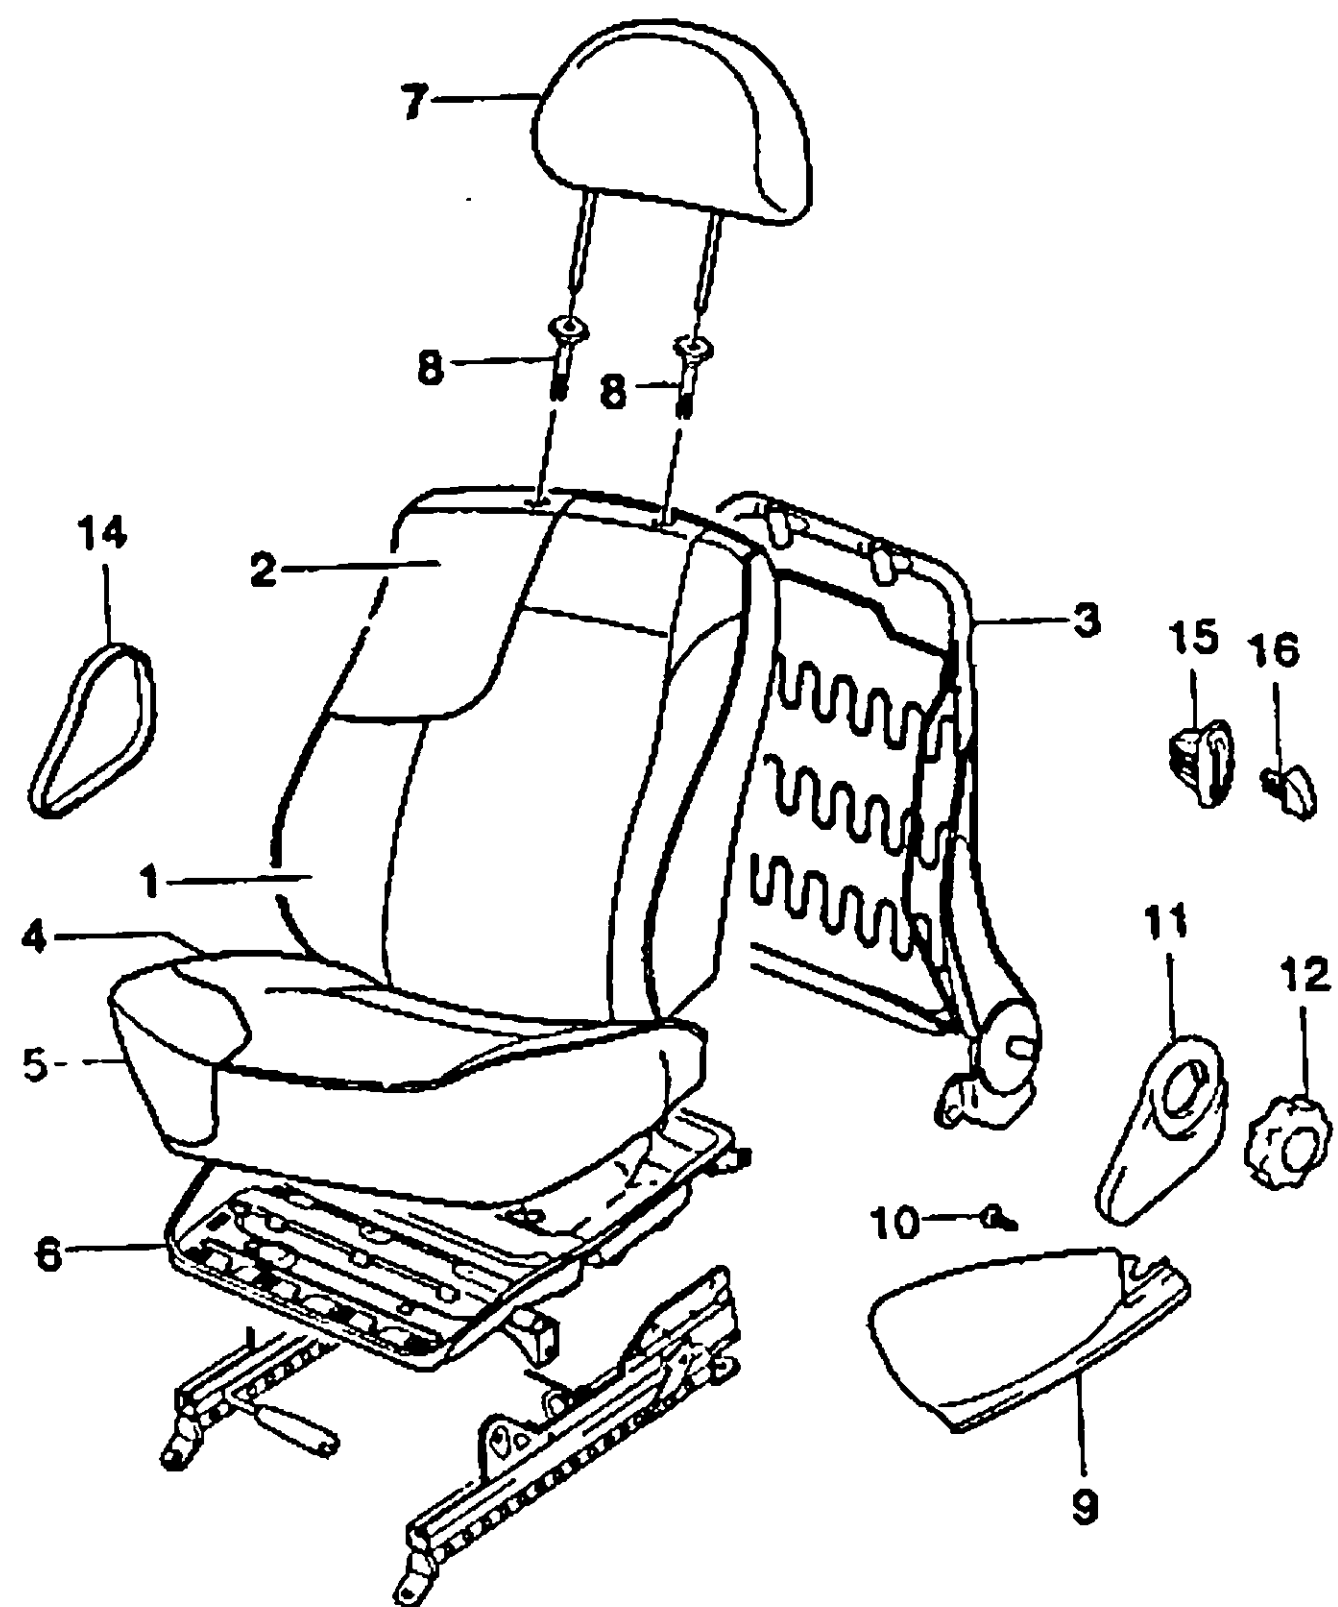


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	96227632	.	.	B	B	B	O	S	S	&W6E	2					
	[08]							(E)SLEEVE-HEADREST			(F)CHEMISE-APPUI-TETE					
								(D)HÜLSE,KOPFPOLSTER			(S)MANGA					
	96238404	.	.	B	B	B	S	S	S		2			W/LOCK		
	96238405	.	.	B	B	B	S	S	S		2			WO/LOCK		
	[09]							(E)COVER-FRONT SEAT OTR,LWR			(F)COUVERTURE					
								(D)DECKEL			(S)CUBIERTA					
	96238397	.	.	B	B	B	S	S	S		LH 1					
	96238398	.	.	B	B	B	S	S	S		RH 1					
	[10]							(E)SCREW-TAPPING			(F)VIS					
								(D)SCHRAUBE			(S)TORNILLO					
	03140-42229	.	.	B	B	B	S	S	S		4					
	[11]							(E)COVER-FRONT SEAT OTR,UPR			(F)COUVERTURE					
								(D)DECKEL			(S)CUBIERTA					
	96238399	.	.	B	B	B	S	S	S		LH 1					
	96238400	.	.	B	B	B	S	S	S		RH 1					
	[12]							(E)REGULATOR A-FRONT SEAT			(F)REGULATEUR					
								(D)REGULATOR			(S)REGULADOR					
	96238401	.	.	B	B	B	S	S	S		2					
	[14]							(E)COVER-FRONT SEAT OTR,UPR			(F)COUVERTURE					
								(D)SCHRAUBE			(S)TORNILLO					
	96238395	.	.	B	B	B	S	S	S		LH 1					
	96238396	.	.	B	B	B	S	S	S		RH 1					
	[15]							(E)COVER-SEAT BACK STOP			(F)CARTER					
								(D)DECKEL			(S)CUBIERTA					
	96238403	.	.	.	.	B	.	S	S	S	2					
	[16]							(E)KNOB-LEVER,SEAT BACK STOP			(F)BOUON					
								(D)KNOPF			(S)PERILLA					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

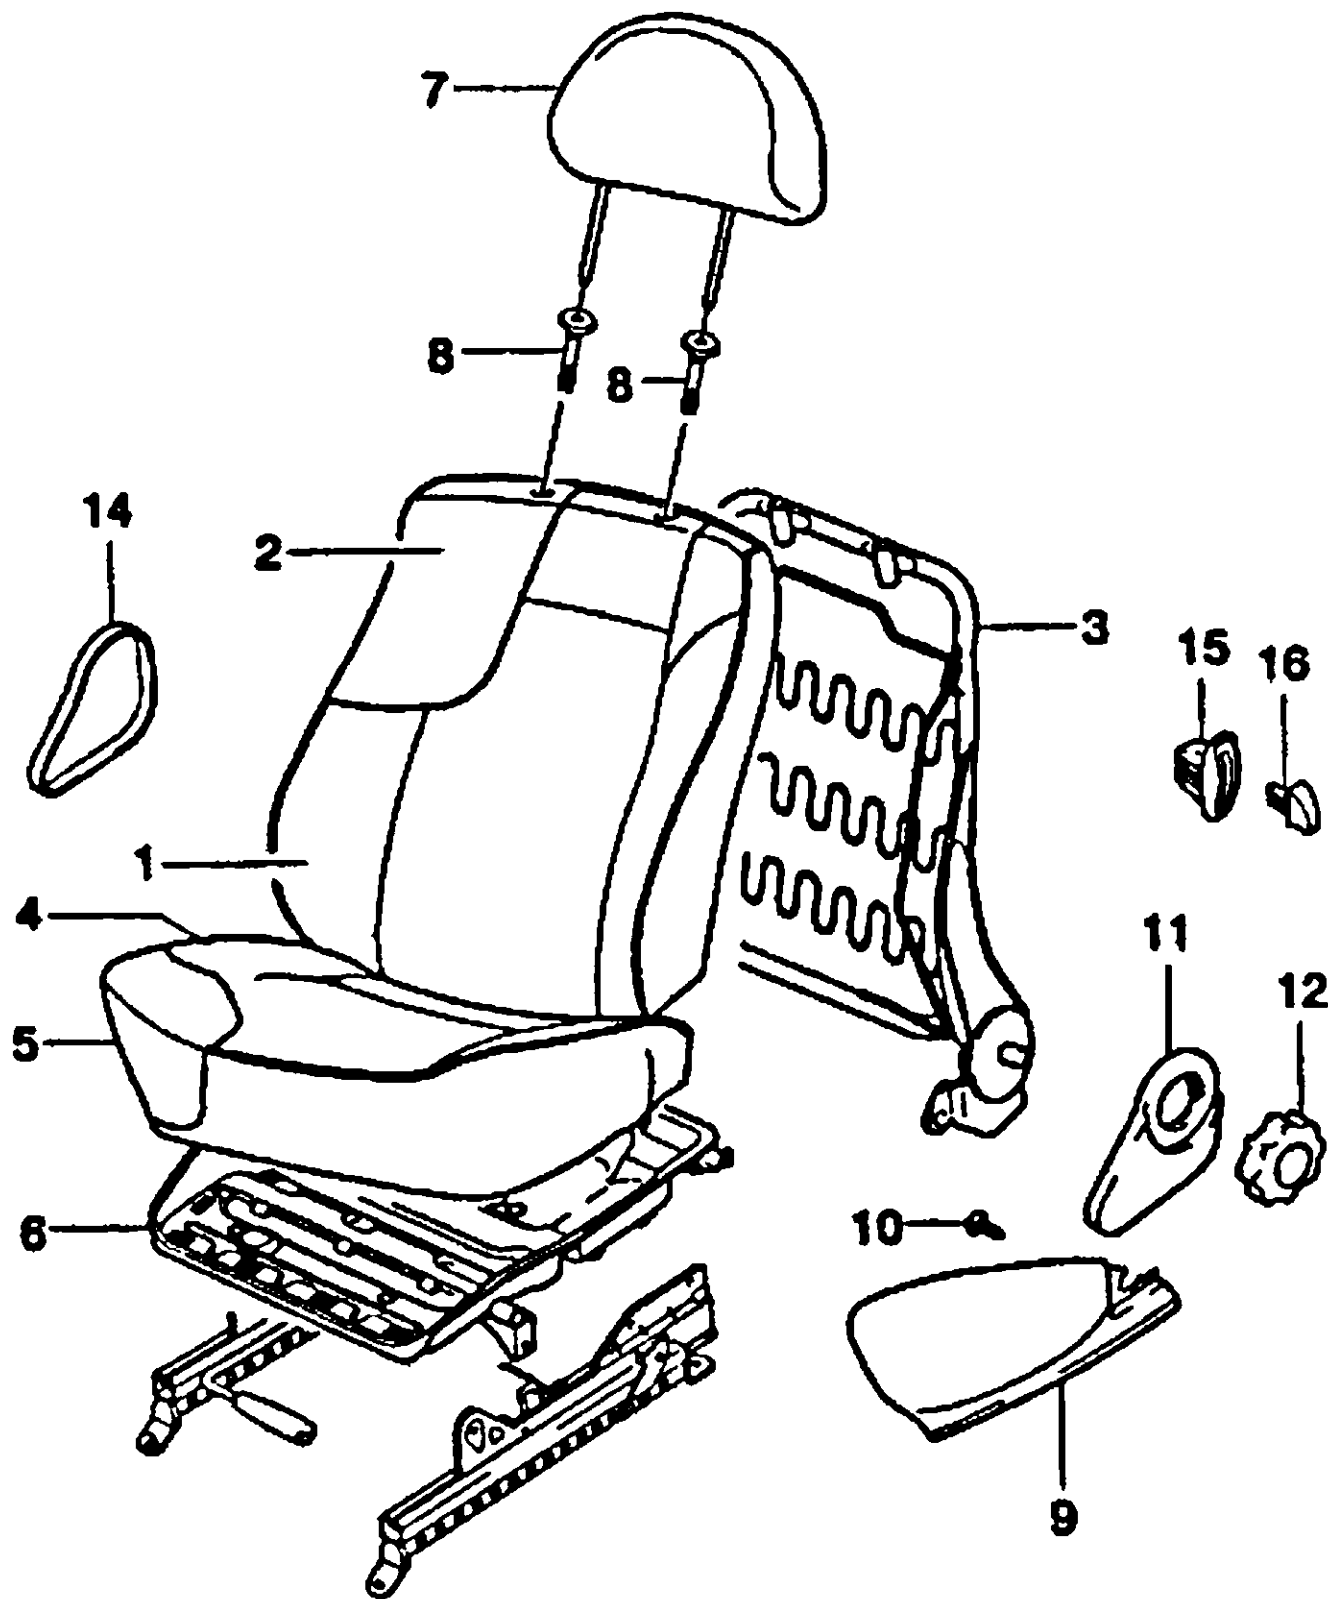


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	96238402	.	.	.	B	.	S	S	S			2				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

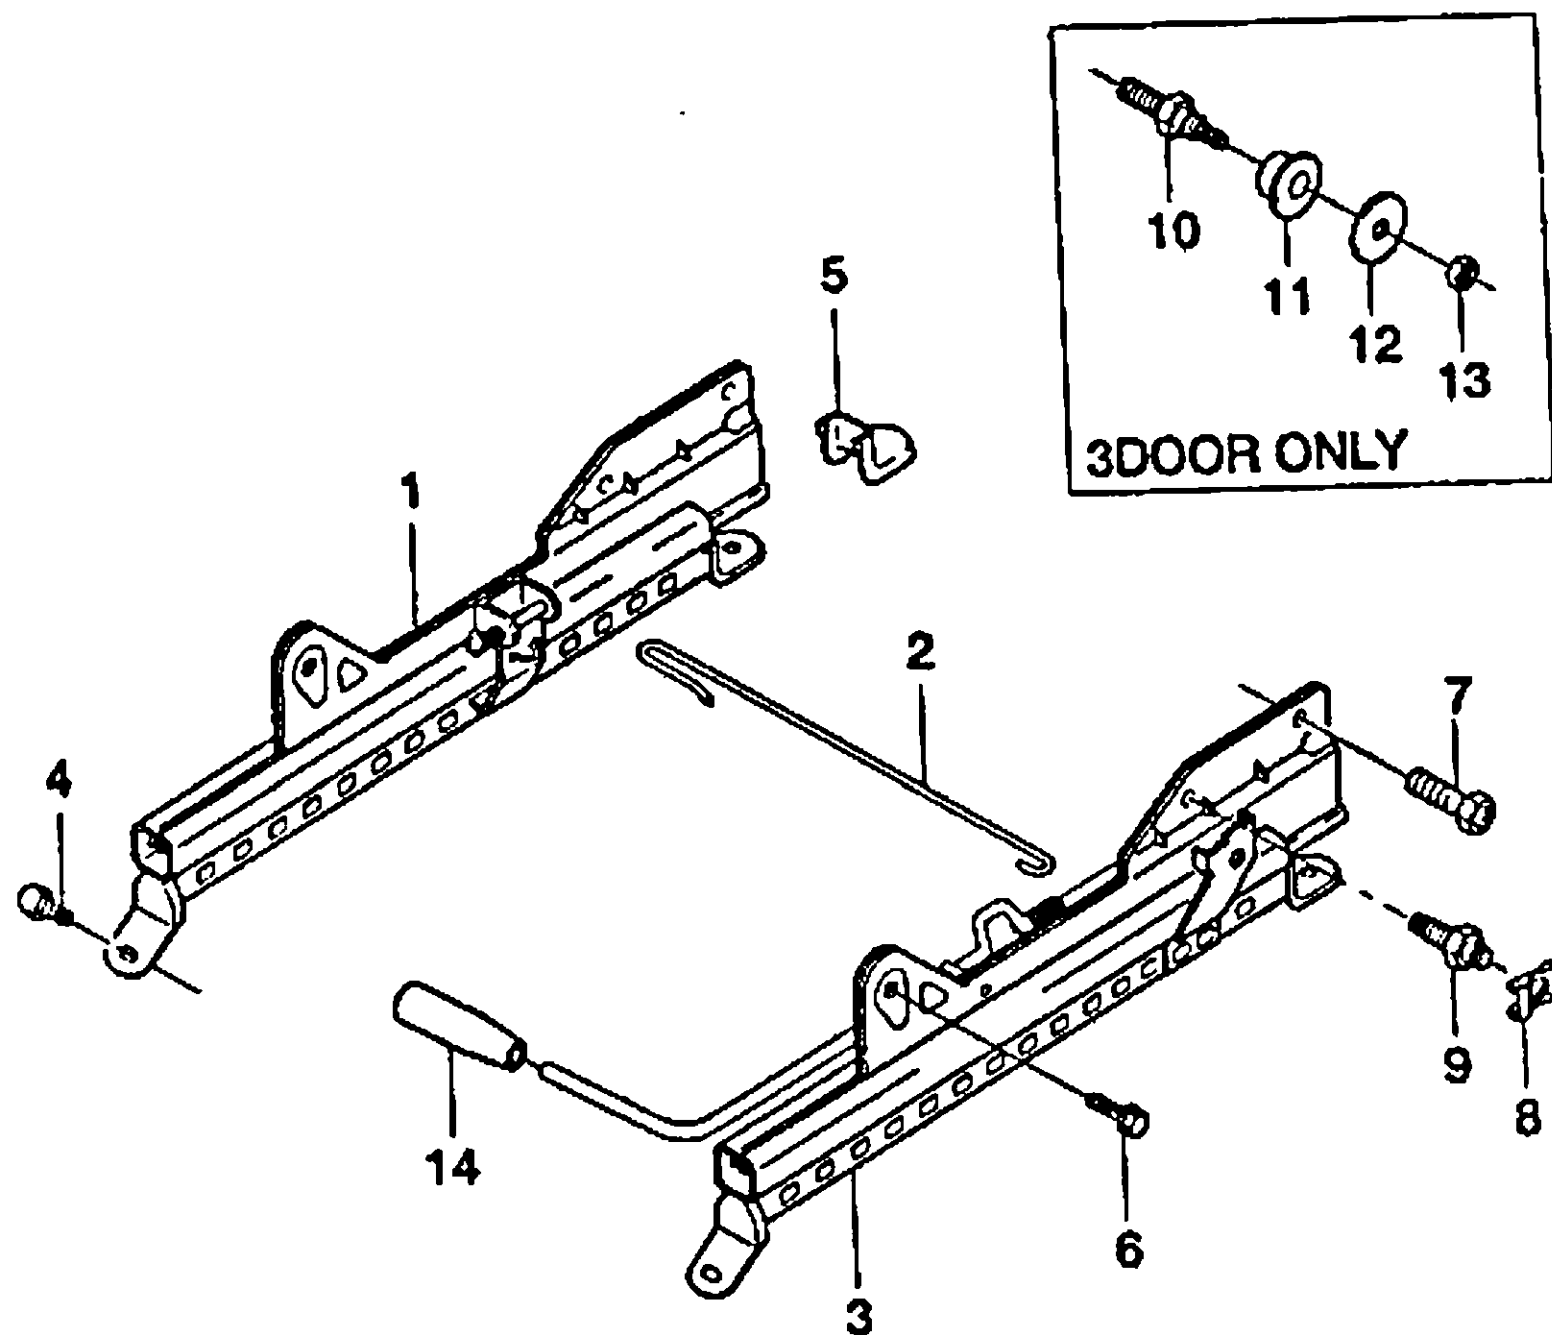


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q / T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)RAIL A-GUIDE OUTER (D)SCHIENE,AUßEN FÜHRUNG								(F)RAIL-GUIDE EXTERNE (S)RIEL-GUIA EXTERNA					
	96227634	. . B B B S S S								LH 1					
	96227635	. . B B B S S S								RH 1					
	[02]	(E)WIRE-SEAT ADJUSTER (D)VERDRAHTUNG,EINSTELLUNG								(F)CABLE-AJUSTEUR SIEGE (S)ALAMBRE					
	96227657	. . B B B S S S								2					
	[03]	(E)RAIL A-GUIDE INNER (D)SCHIENE,INNEN FÜHRUNG								(F)RAIL-GUIDE INTERNE (S)RIEL-GUIA INTERNA					
	96227636	. . B B B S S S								LH 1					
	96227637	. . B B B S S S								RH 1					
	[04]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO					
	09116-08001	. . B B B S S S								B		W	WASHER		
	[05]	(E)END PIECE-FRONT SEAT,REAR (D)TEIL,END								(F)PIECE (S)PIEZA					
	96238406	. . B B B S S S								4					
	[06]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO					
	01127-08259	. . B B B S S S								4					
	[07]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO					
	01107-10259	. . B . B S S S								4					
	[08]	(E)NUT-SPEED (D)MUTTER								(F)ECROU (S)TUERCA					
	09148-10001	. . B B B S S S								4					
	[09]	(E)PIN-LOCKING FRONT SEAT (D)STIFT								(F)BROCHE (S)PASADOR					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

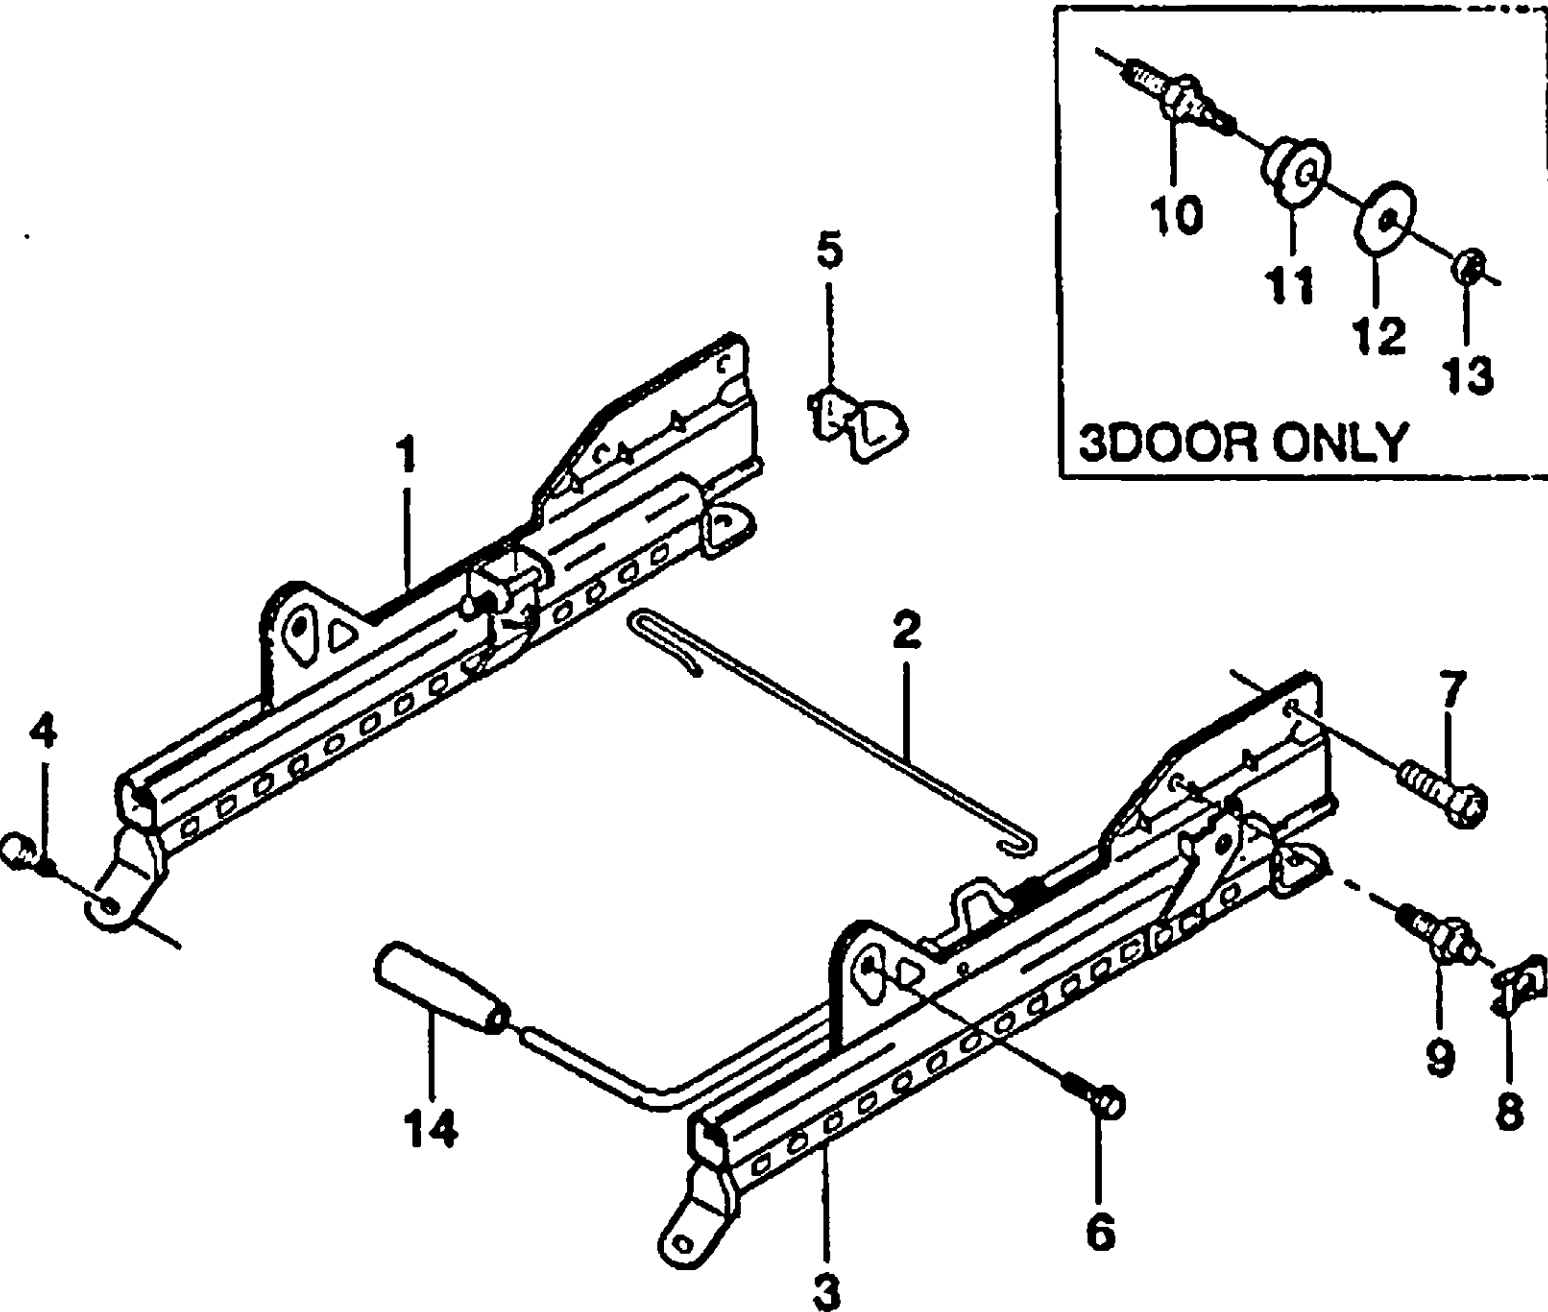


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	96228645	.	.	B	B	B	S	S	S		4					
	[10]										(F)BOULON					
											(S)PERNO					
	96228646	.	.	.	B	.	S	.	S		4					
	[11]										(F)ROULEAU					
											(S)RODILLO					
	96228647	.	.	.	B	.	S	.	S		4					
	[12]										(F)RONDELLE					
											(S)ARANDELA					
	09160-10006	.	.	.	B	.	S	.	S		4					
	[13]										(F)ECROU					
											(S)TUERCA					
	08310-21089	.	.	.	B	.	S	.	S		4					
	[14]										(F)BOUTON					
											(S)PERILLA					
	9401705	.	.	B	B	B	S	S	S		2					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

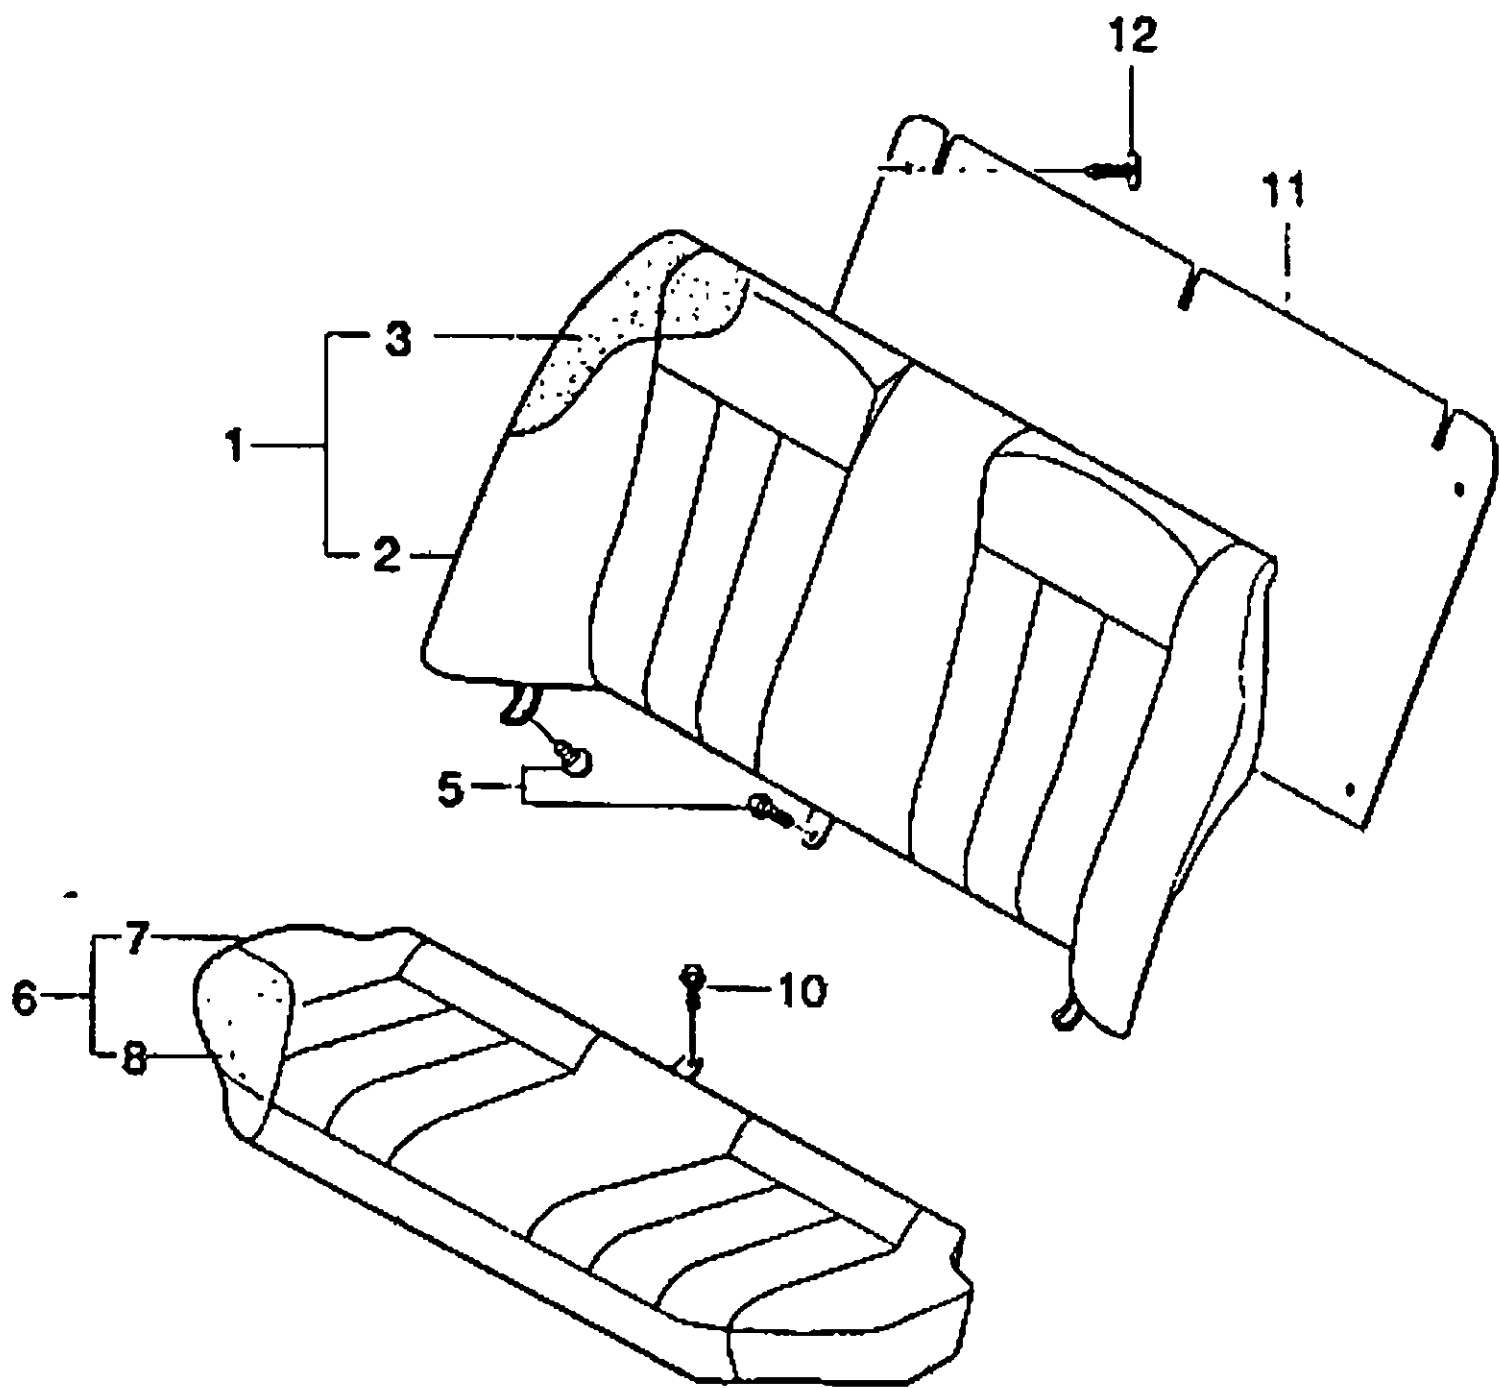


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01]	(E)BACK-REAR SEAT (D)SITZ									(F)SIEGE (S)ASIENTO					
	96239299	.	.	B	.	.	S	.	.	&W6K	1			Q1		
	96239300	.	.	B	.	.	O	S	.	&W6E	1			Q2		
	[02]	(E)COVERING A-REAR SEAT BACK (D)DECKEL									(F)COUVERTURE (S)CUBIERTA					
	96239307	.	.	B	.	.	S	.	.	&W6K	1					
	96239308	.	.	B	.	.	O	S	.	&W6E	1					
	[03]	(E)PAD A-REAR SEAT BACK (D)UNTERLAG									(F)PATIN (S)COJIN					
	96226019	.	.	B	.	.	S	S	.		1					
	[05]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO					
	09116-08001	.	.	B	.	.	S	S	.		3		WWASHER			
	[06]	(E)CUSHION-REAR SEAT (D)POLSTER,SITZ,HINTER									(F)COUSSIN-SIEGE,ARRIERE (S)COJIN-ASIENTO,TRASERO					
	96239297	.	.	B	.	.	S	.	.	&W6K	1			P1		
	96239298	.	.	B	.	.	O	S	.	&W6E	1			P2		
	[07]	(E)COVERING A-RR SEAT CUSHIO (D)DECKEL									(F)COUVERTURE (S)CUBIERTA					
	96239306	.	.	B	.	.	S	.	.	&W6K	1					
	96239305	.	.	B	.	.	O	S	.	&W6E	1					
	[08]	(E)PAD A-REAR SEAT CUSHION (D)UNTERLAG									(F)PATIN (S)COJIN					
	96226016	.	.	B	.	.	S	S	.		1					
	[10]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO					
	09116-08001	.	.	B	.	.	S	S	.		1		WWASHER			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

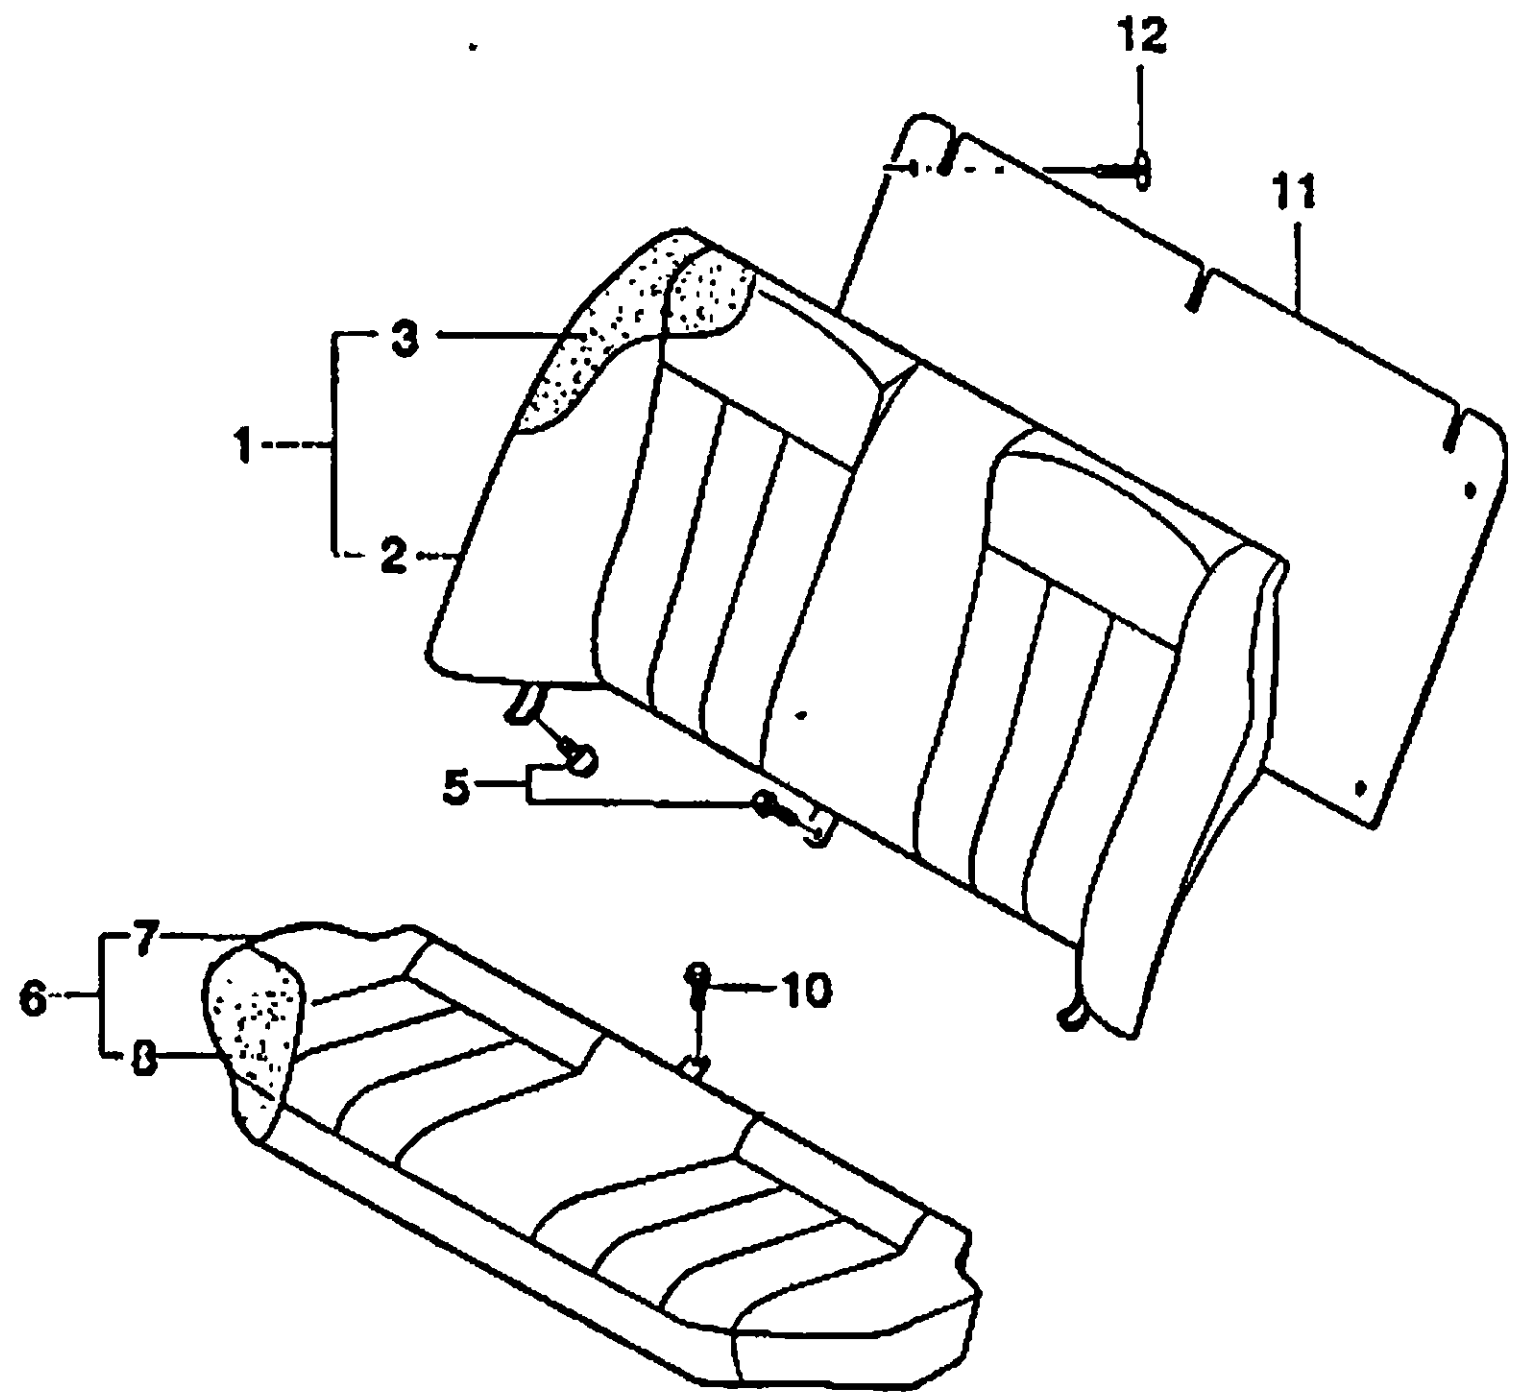


KEY NO.			PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[11] 96236052	(E)COVER-REAR SEAT BACK (D)DECKEL,SITZRÜCKEN			B			S	S			(F)COUVERTURE (S)CUBIERTA 1				
	[12] 09409-07330	(E)CLIP (D)KLEMME			B			S	S			(F)ATTACHE (S)GRAPA 4				

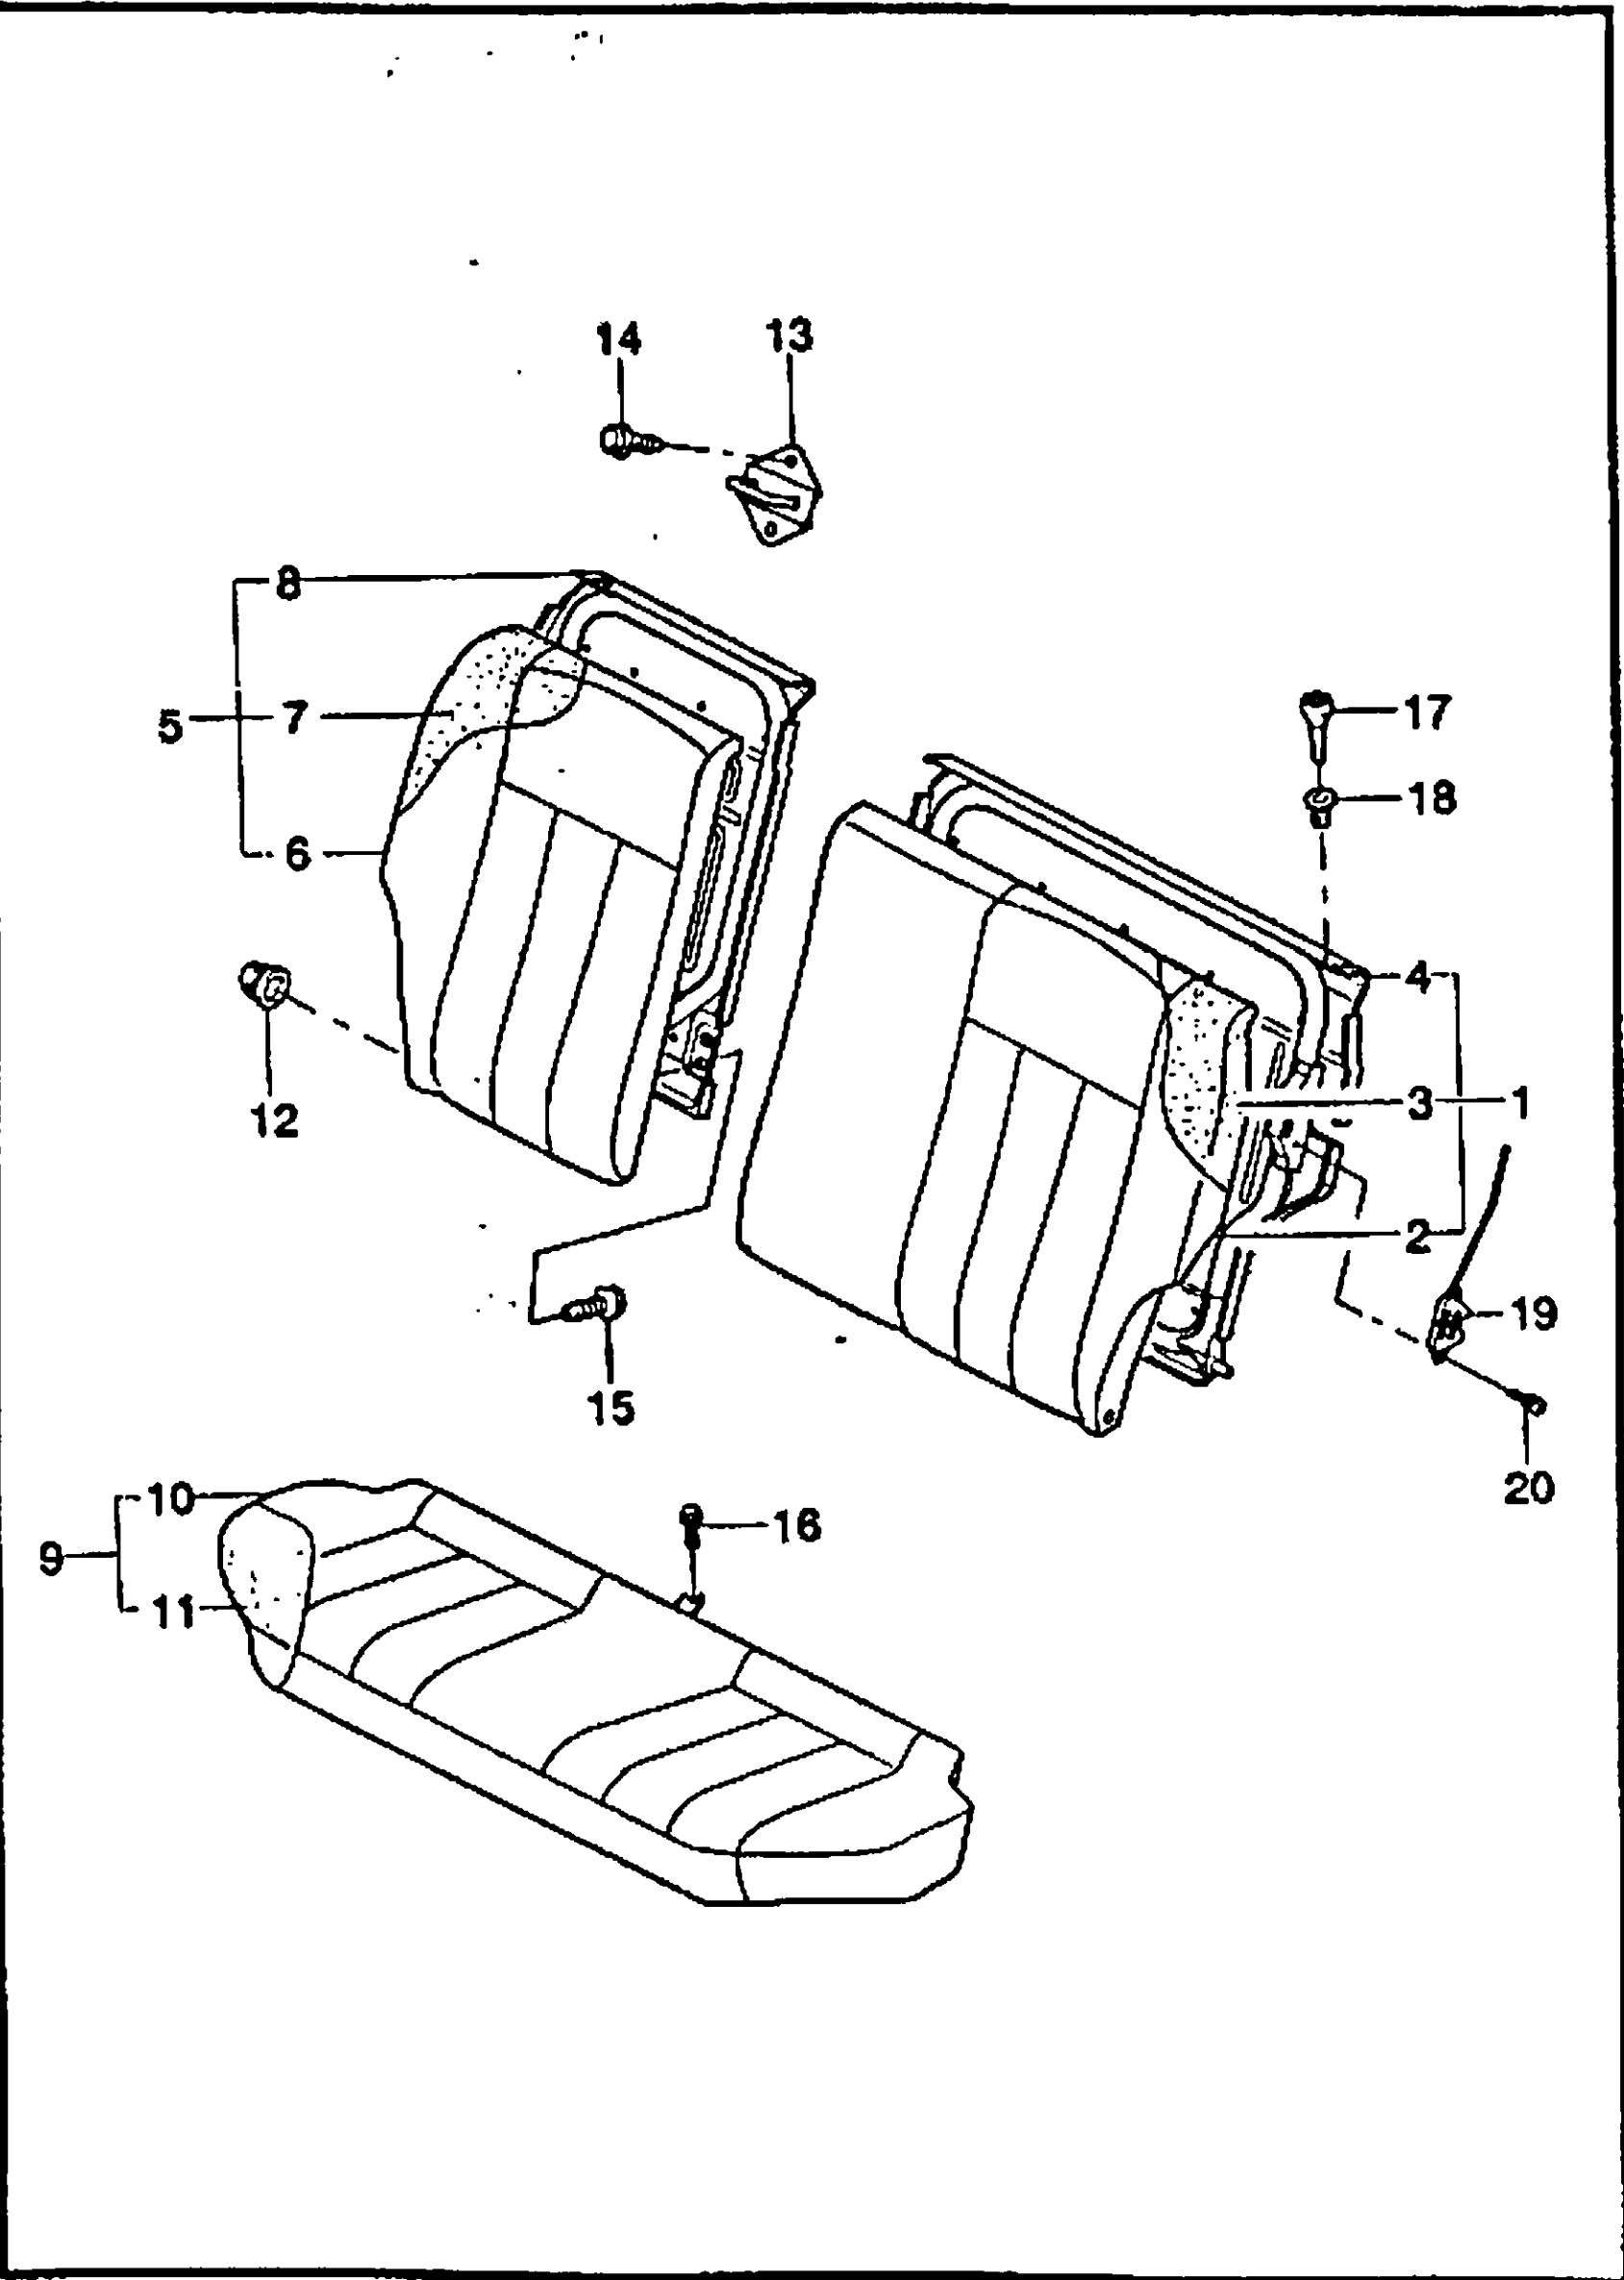


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q / T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[01]	(E)BACK-REAR SEAT (D)SITZ									(F)SIEGE (S)ASIENTO					
	96239301	.	.	B	.	.	.	S	&W6E		LH	1		R1		
	96239303	.	.	.	B	B	S	.	&W6K		LH	1		R3		
	96239301	.	.	.	B	B	O	.	S	&W6E		LH	1	R1		
	[02]	(E)COVERING A-REAR SEAT BACK (D)DECKEL									(F)COUVERTURE (S)CUBIERTA					
	96239311	.	.	B	.	.	O	.	S	&W6E		LH	1			
	96239309	.	.	.	B	B	S	.	&W6K		LH	1				
	96239311	.	.	.	B	B	O	.	S	&W6E		LH	1			
	[03]	(E)PAD A-REAR SEAT BACK (D)UNTERLAG									(F)PATIN (S)COJIN					
	96226024	.	.	B	.	.	.	S				LH	1			
	96226024	.	.	.	B	B	S	.	S			LH	1			
	[04]	(E)FRAME A-REAR SEAT BACK (D)RAHMEN									(F)CADRE (S)ARMADURA					
	96226030	.	.	B	.	.	.	S				LH	1			
	96226030	.	.	.	B	B	S	.	S			LH	1			
	[05]	(E)BACK-REAR SEAT (D)SITZ									(F)SIEGE (S)ASIENTO					
	96239302	.	.	B	.	.	.	S	&W6E		RH	1		R2		
	96239304	.	.	.	B	B	S	.	&W6K		RH	1		R4		
	96239302	.	.	.	B	B	O	.	S	&W6E		RH	1	R2		
	[06]	(E)COVERING A-REAR SEAT BACK (D)DECKEL									(F)COUVERTURE (S)CUBIERTA					
	96239312	.	.	B	.	.	.	S	&W6E		RH	1				
	96239310	.	.	.	B	B	S	.	&W6K		RH	1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC G = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

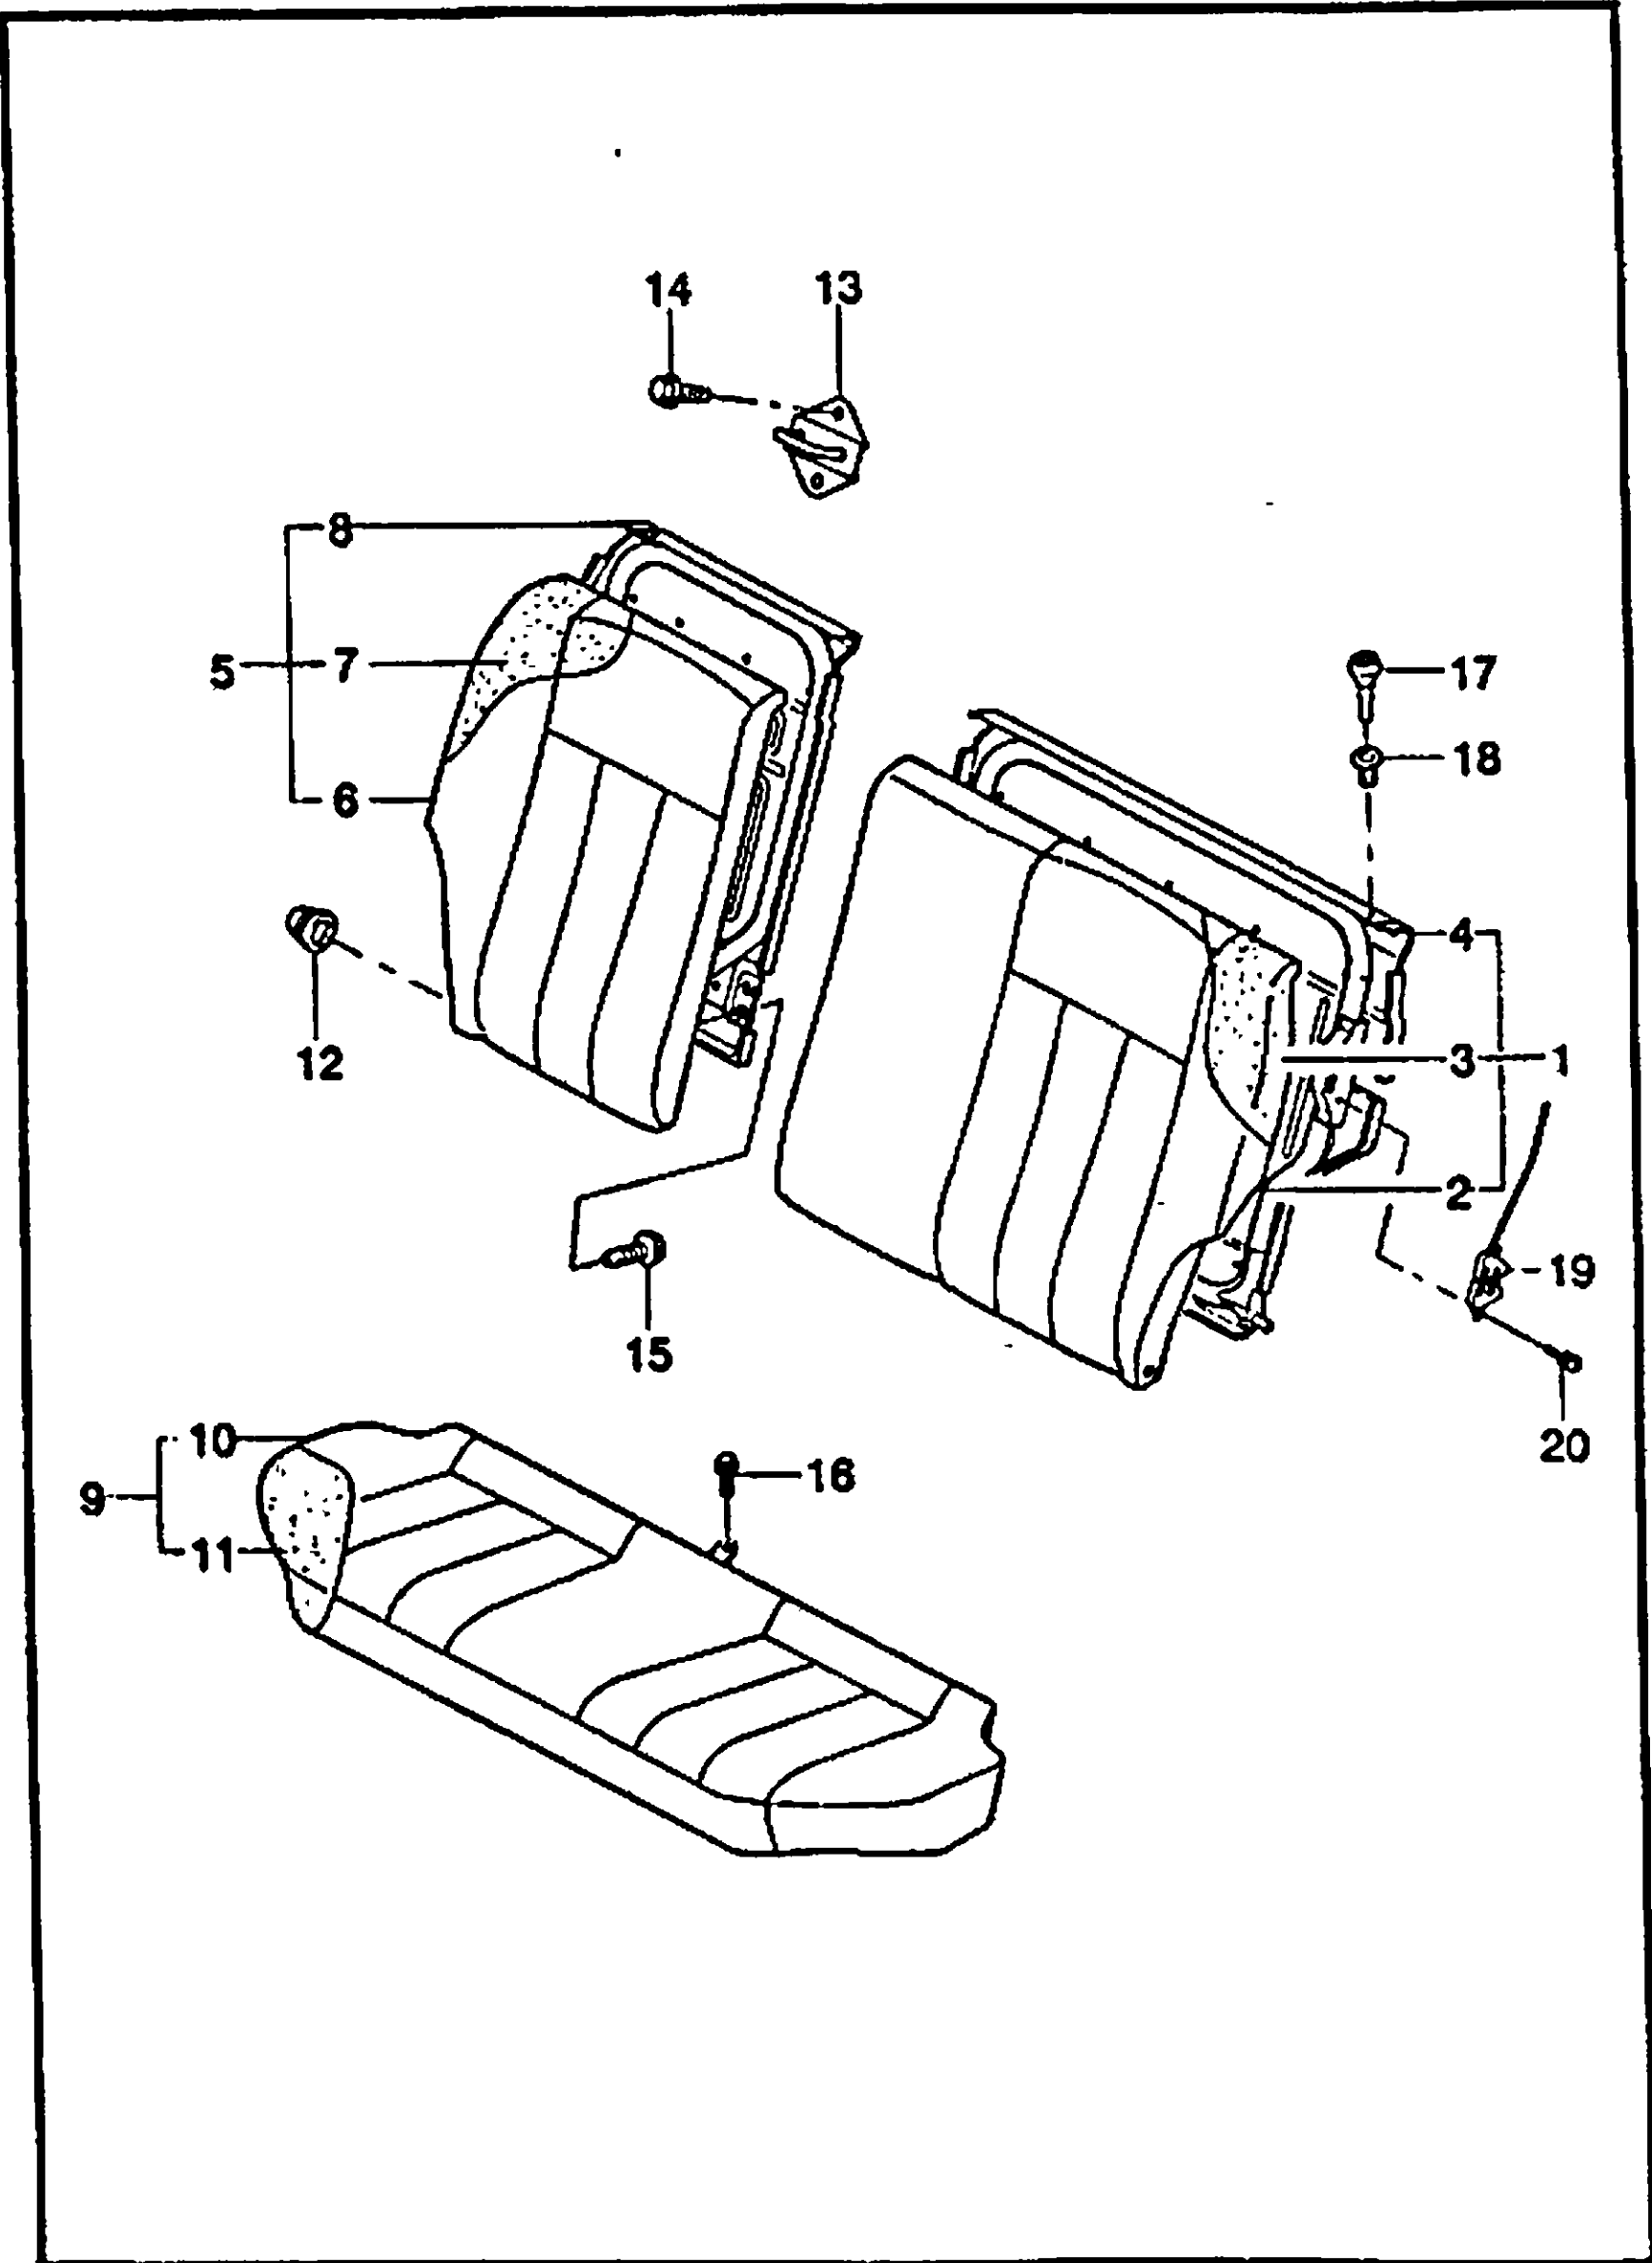

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N H	3 H H	5 S S	S E X								
	96239312	. . .	B	B	O	. S	&W6E		RH	1					
	[07]	(E)PAD A-REAR SEAT	BACK							(F)PATIN					
		(D)UNTERLAG								(S)COJIN					
	96226025	. .	B		S				RH	1					
	96226025	. . .	B	B	S	. S			RH	1					
	[08]	(E)FRAME A-REAR SEAT	BACK							(F)CADRE					
		(D)RAHMEN								(S)ARMADURA					
	96226031	. .	B		S				RH	1					
	96226031	. . .	B	B	S	. S			RH	1					
	[09]	(E)CUSHION-REAR SEAT								(F)COUSSIN-SIEGE,ARRIERE					
		(D)POLSTER,SITZ,HINTER								(S)COJIN-ASIENTO,TRASERO					
	96239298	. .	B		S	&W6E				1				P2	
	96239297	. . .	B	B	S	. .	&W6K			1				P1	
	96239298	. . .	B	B	O	. S	&W6E			1				P2	
	96254874		B	O	. S	&W6E				1	970709	FOR POLAND		P2	
	[10]	(E)COVERING A-RR SEAT CUSHIO								(F)COUVERTURE					
		(D)DECKEL								(S)CUBIERTA					
	96239305	. .	B		S	&W6E				1					
	96239306	. . .	B	B	S	. .	&W6K			1					
	96239305	. . .	B	B	O	. S	&W6E			1					
	[11]	(E)PAD A-REAR SEAT CUSHION								(F)PATIN					
		(D)UNTERLAG								(S)COJIN					
	96226016	. .	B		S					1					
	96226016	. . .	B	B	S	. S				1					
	[12]	(E)BUSHING								(F)MANCHON					
		(D)LAGERFUTTER								(S)BUJE DE BOQUILLA					
	96216145	. .	B		S					2					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

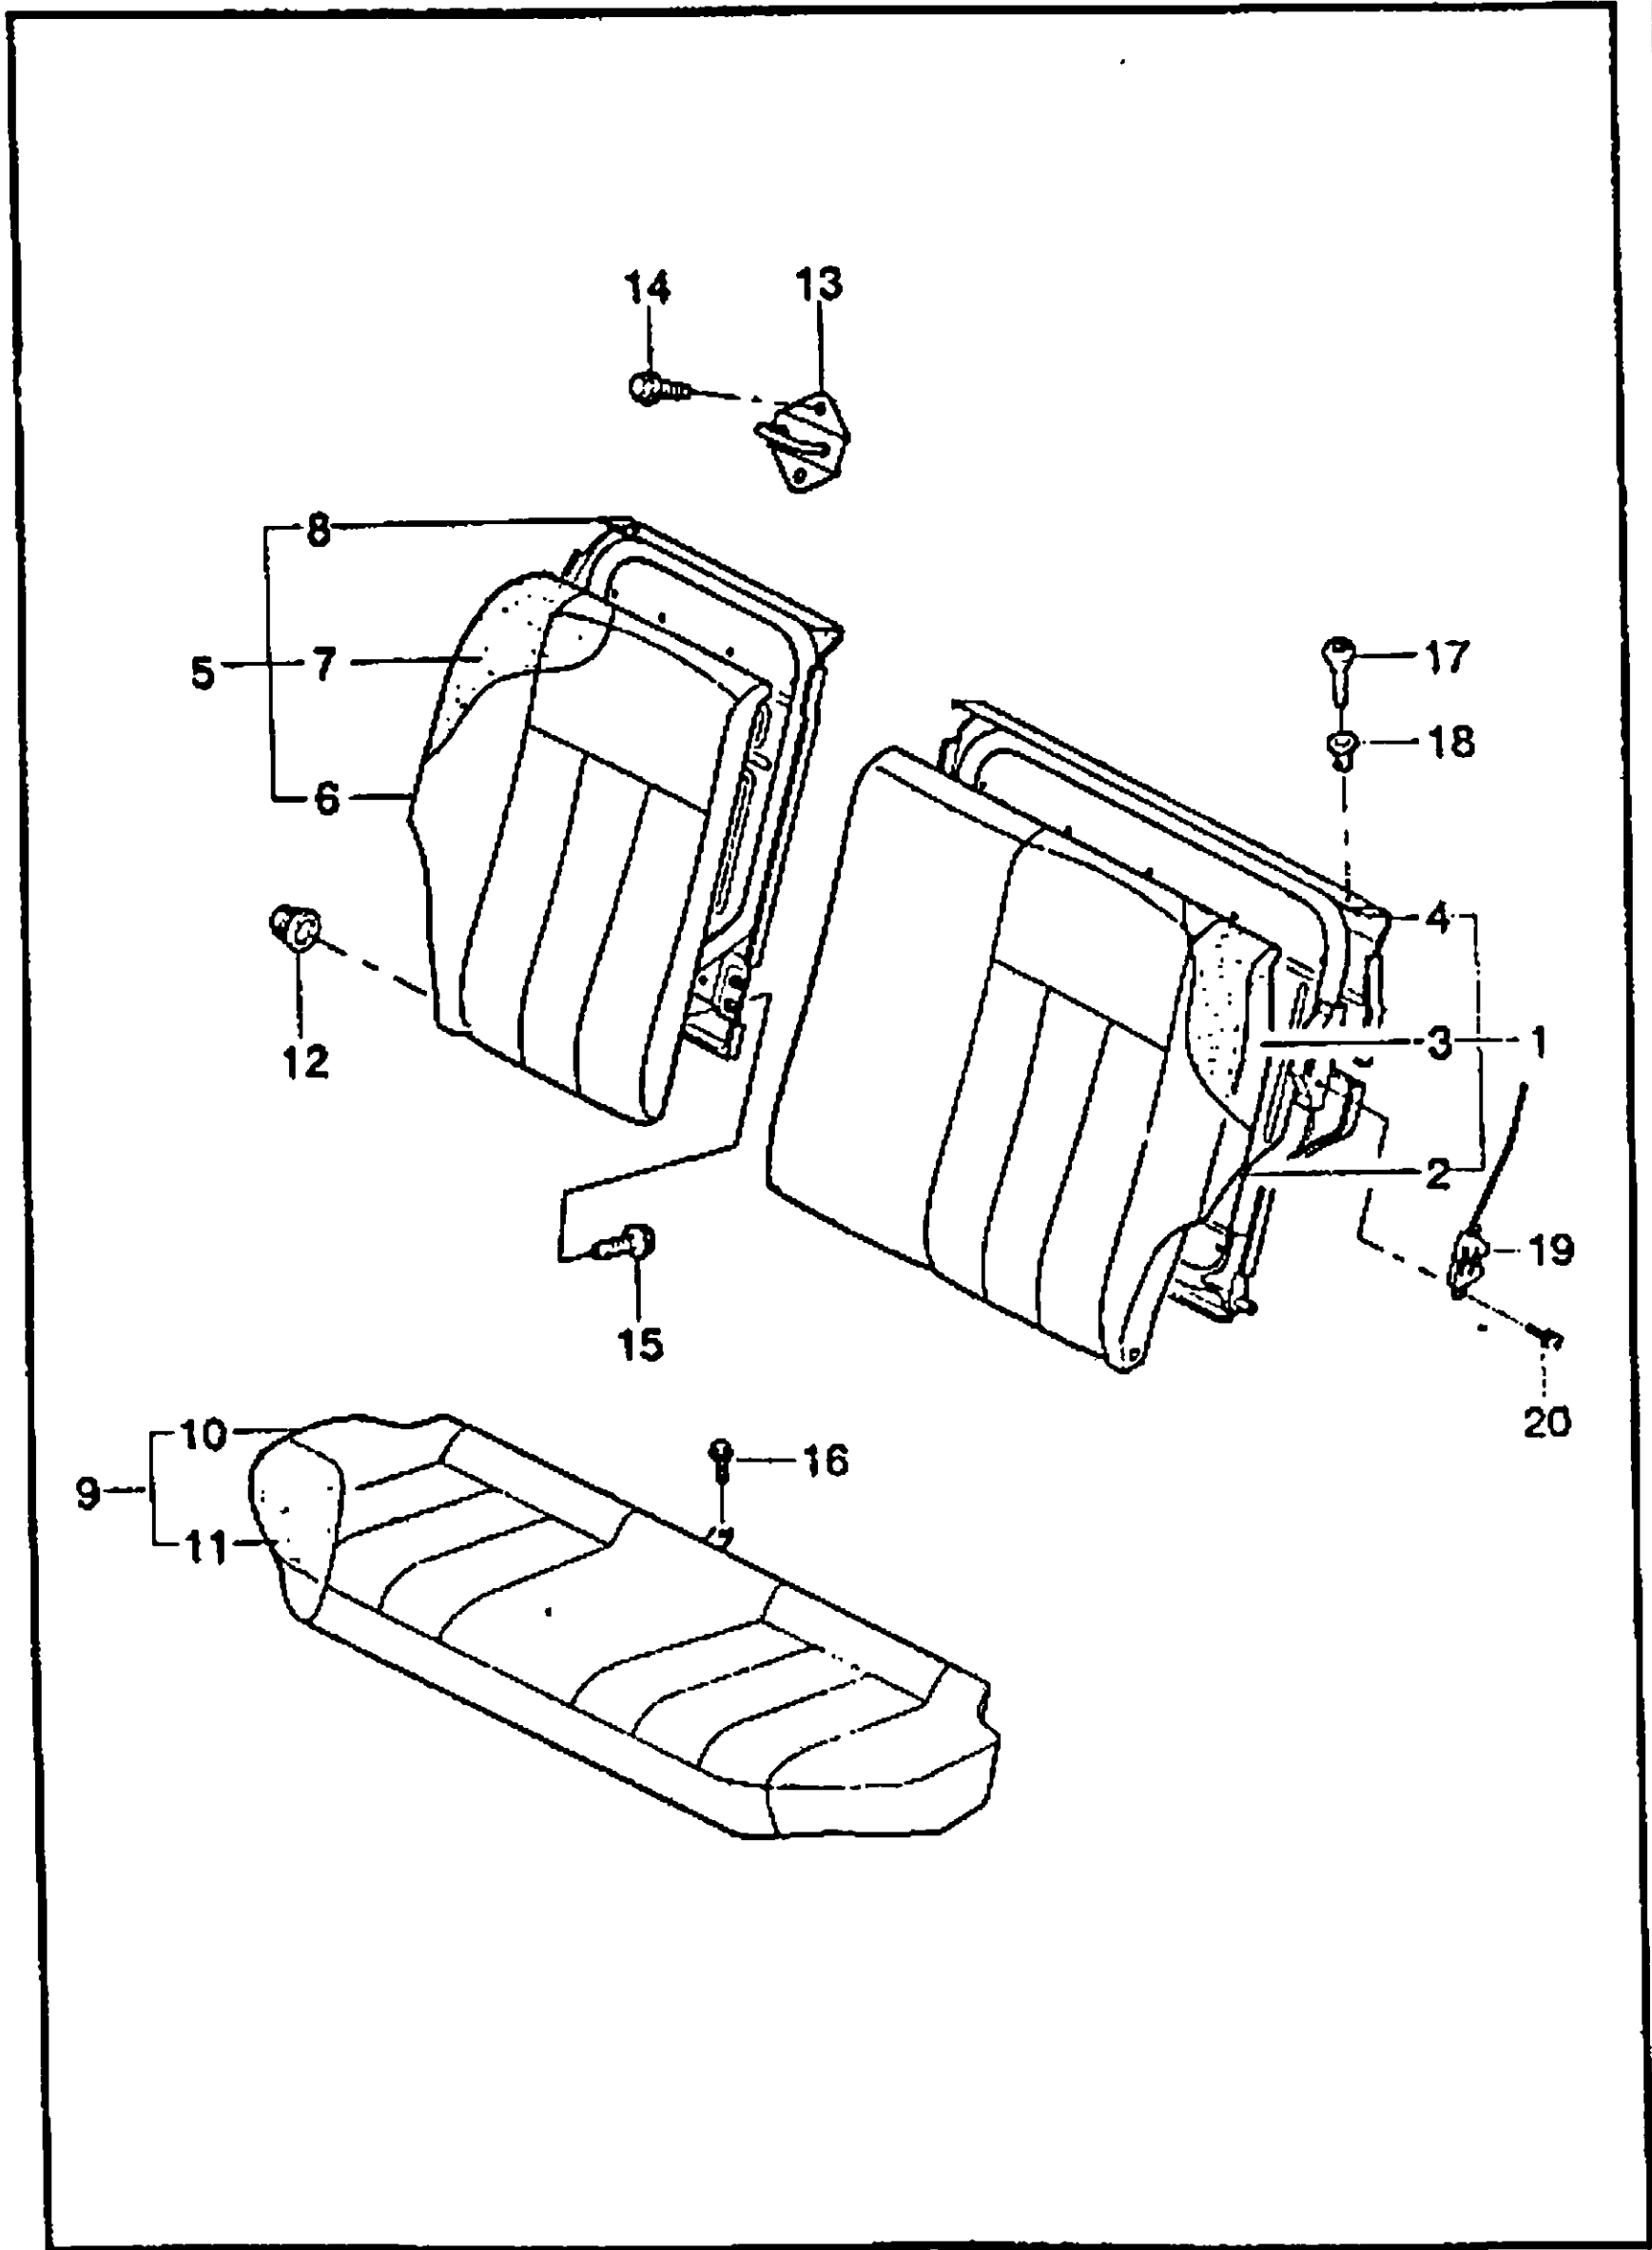





KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S								S
	96216145			B	.	.	A	.	A		2	970709		FOR POLAND		
	96216145			.	.	.	B	B	S	.	2					
	[13]			(E)STRIKER A (D)SCHLÄGER									(F)MARTEAU (S)HUELGUISTA			
	96303088			B	.	.	.	.	S		2					
	96303088			B	.	.	A	.	A		2	970709		FOR POLAND		
	96303088			.	.	.	B	A	.	A	2	970709		FOR POLAND		
	96303088			.	.	.	B	B	S	.	2					
	[14]			(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO			
	09116-08001			B	.	.	.	.	S		4			WWASHER		
	09116-08001			B	.	.	A	.	A		4	970709		FOR POLAND		
	09116-08001			.	.	.	B	B	S	.	4			WWASHER		
	[15]			(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO			
	09116-08001			B	.	.	.	.	S		4			WWASHER		
	09116-08001			B	.	.	A	.	A		4	970709		FOR POLAND		
	09116-08001			.	.	.	B	B	S	.	4			WWASHER		
	[16]			(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO			
	09116-08001			B	.	.	.	.	S		1			WWASHER		
	09116-08001			B	.	.	A	A	A		1	970709		FOR POLAND		
	09116-08001			.	.	.	B	B	S	.	1			WWASHER		
	[17]			(E)KNOB-REAR,SEAT BACK (D)KNOPF									(F)BOUTON (S)PERILLA			
	96238407			B	.	.	.	.	S		2					
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

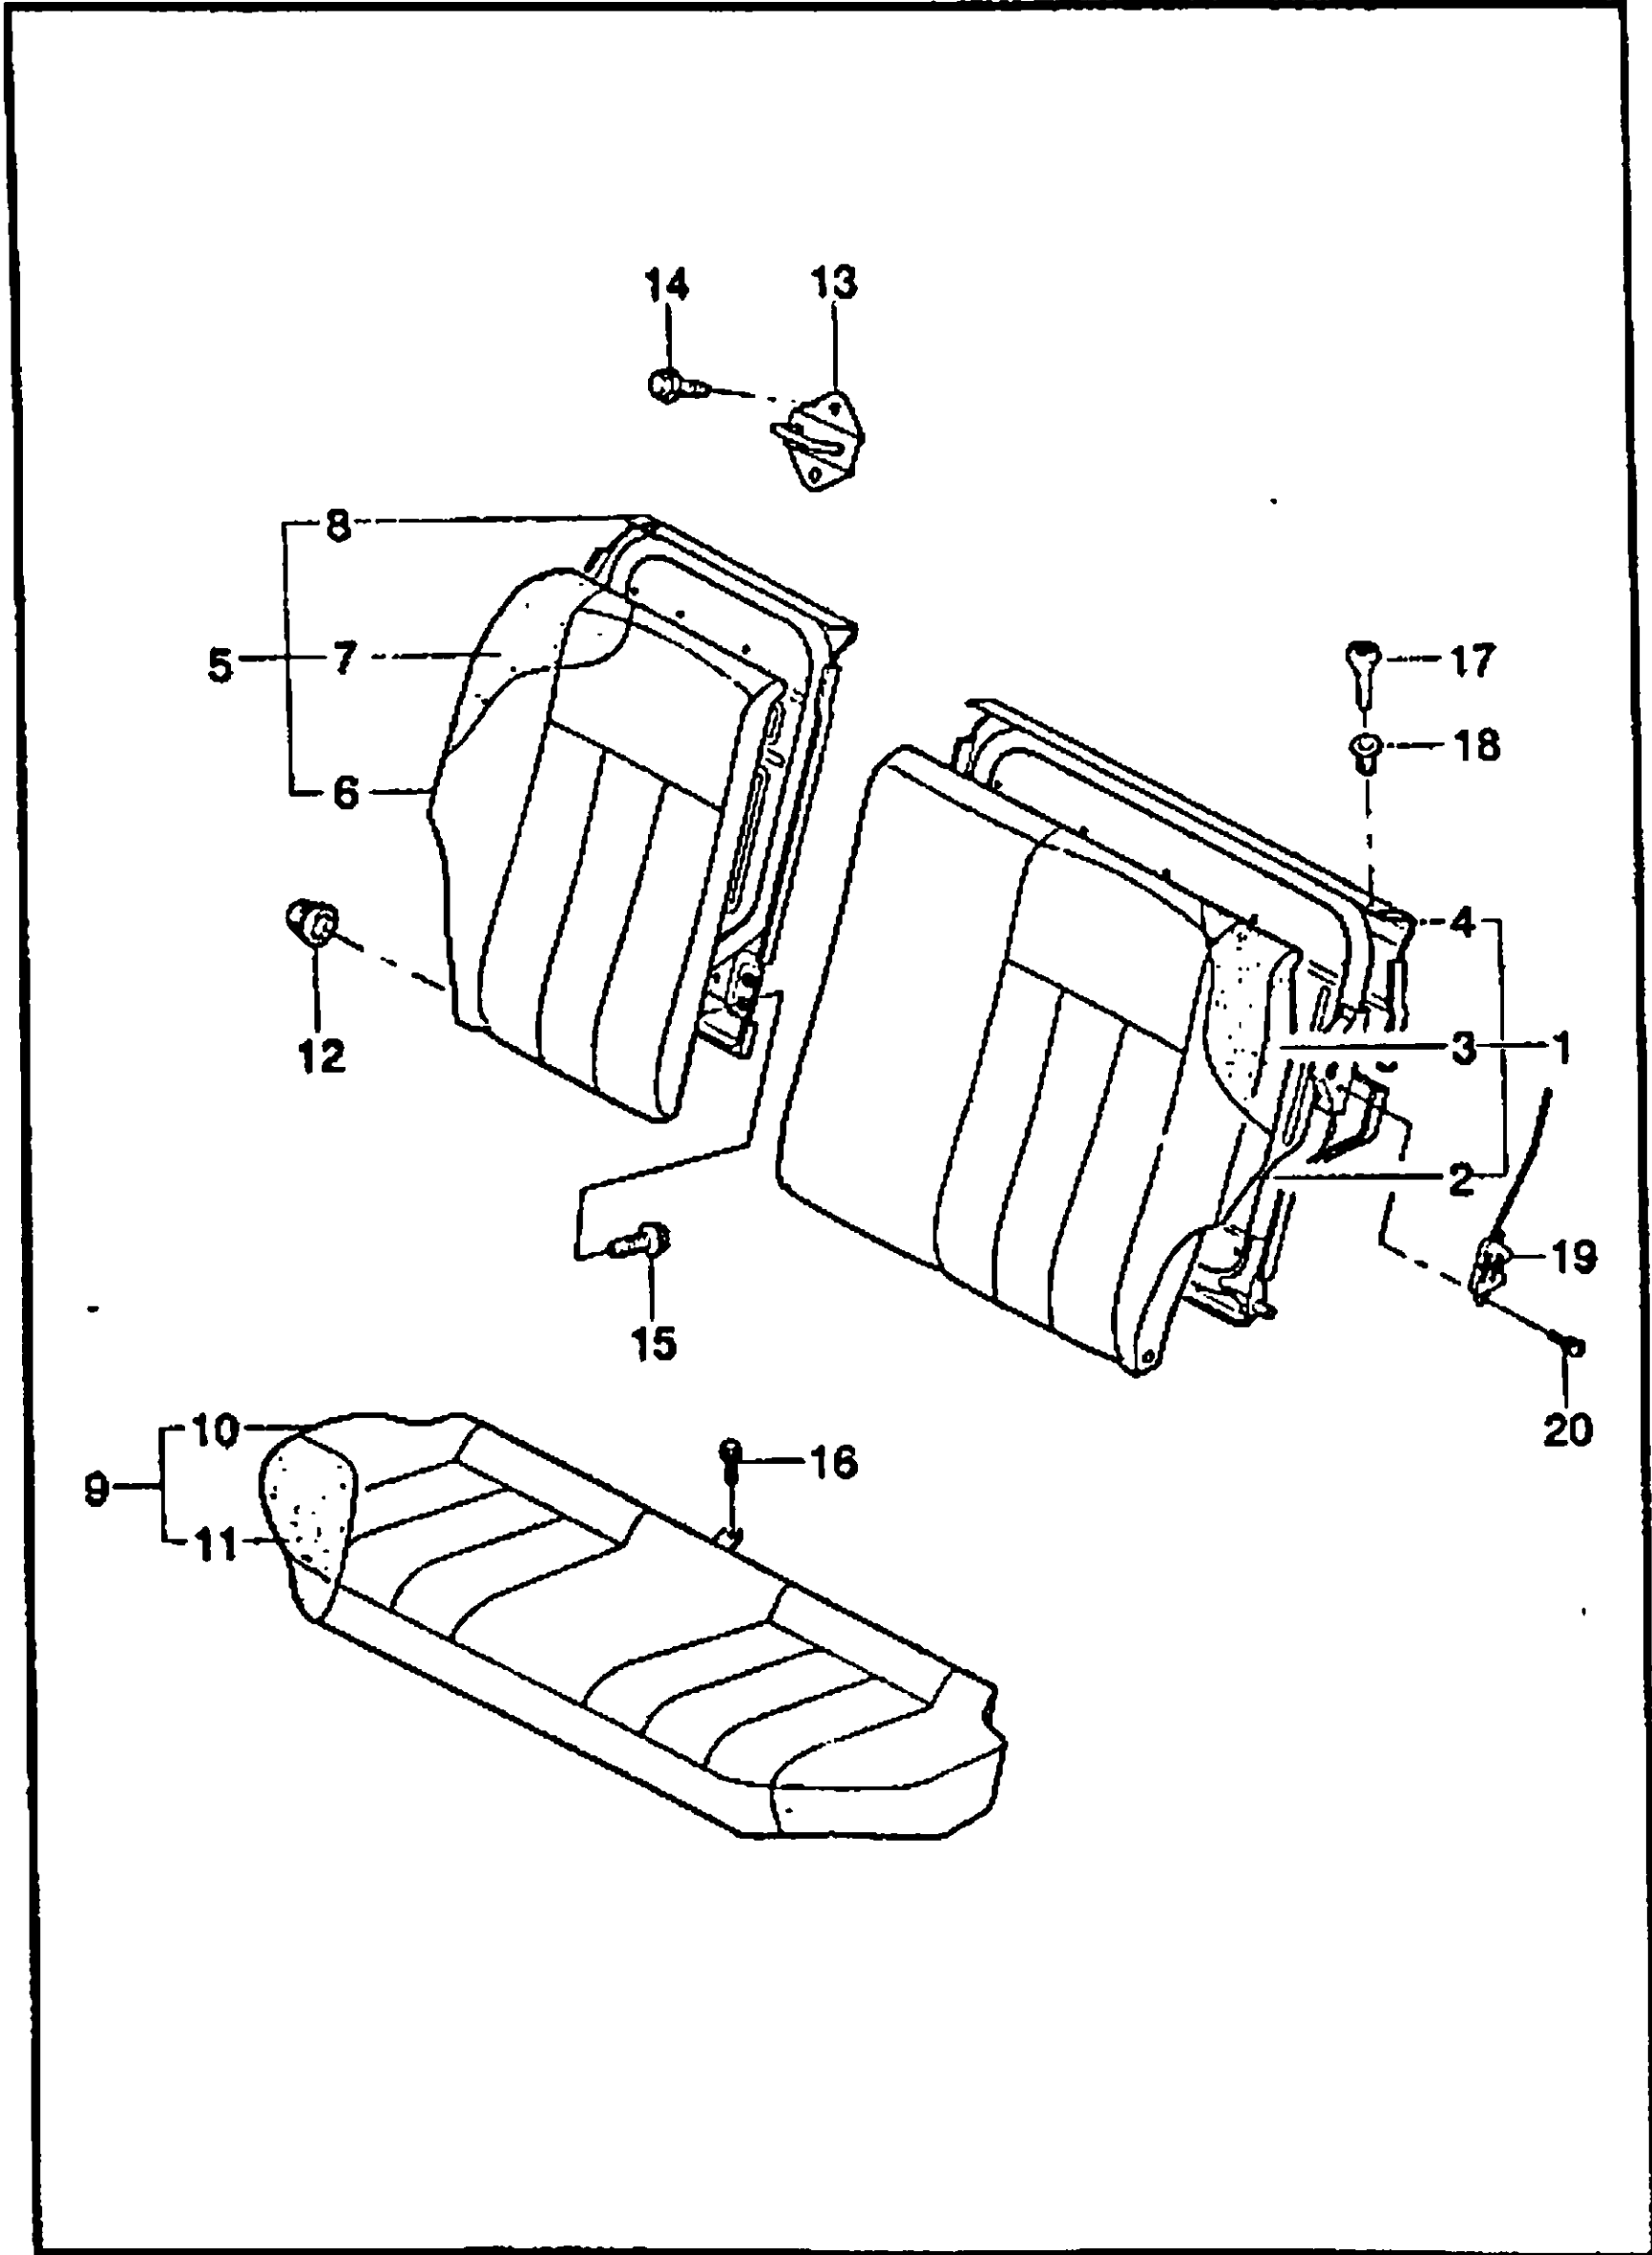

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	96238407	.	.	.	B	B	S	.	S		2					
	[18]	(E)SLEEVE-REAR,SEAT BACK									(F)CHEMISE					
		(D)HÜLSE									(S)MANGA					
	96238408	.	.	.	B	.	.	.	S		2					
	96238408	.	.	.	B	B	S	.	S		2					
	[19]	(E)LATCH A-REAR,SEAT BACK									(F)LOQUET					
		(D)VERSCHLÜß									(S)PESTILLO					
	96226034	.	.	.	B	.	.	.	S		LH 1					
	96226035	.	.	.	B	B	S	.	S		RH 1					
	96226034	.	.	.	B	.	.	.	S		LH 1					
	96226035	.	.	.	B	B	S	.	S		RH 1					
	[20]	(E)SCREW									(F)VIS					
		(D)SCHRAUBE									(S)TORNILLO					
	02116-76165	.	.	.	B	.	.	.	S		4					
	02116-76165	.	.	.	B	B	S	.	S		4					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

7550 FRONT SEAT BELT





6J06

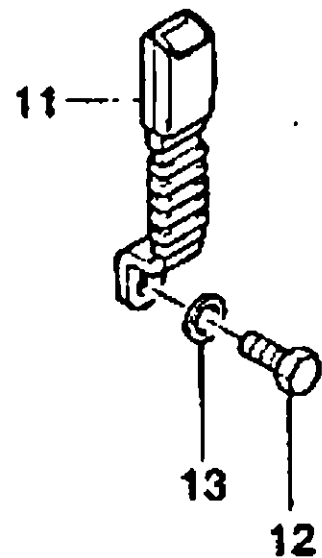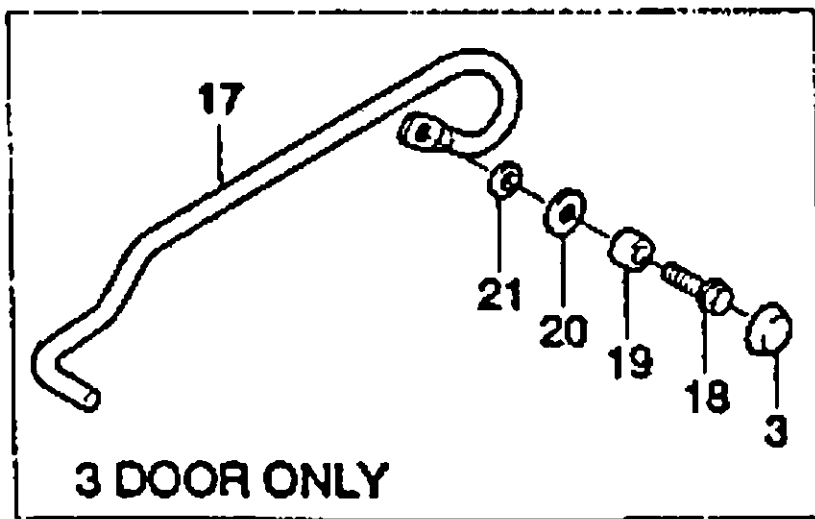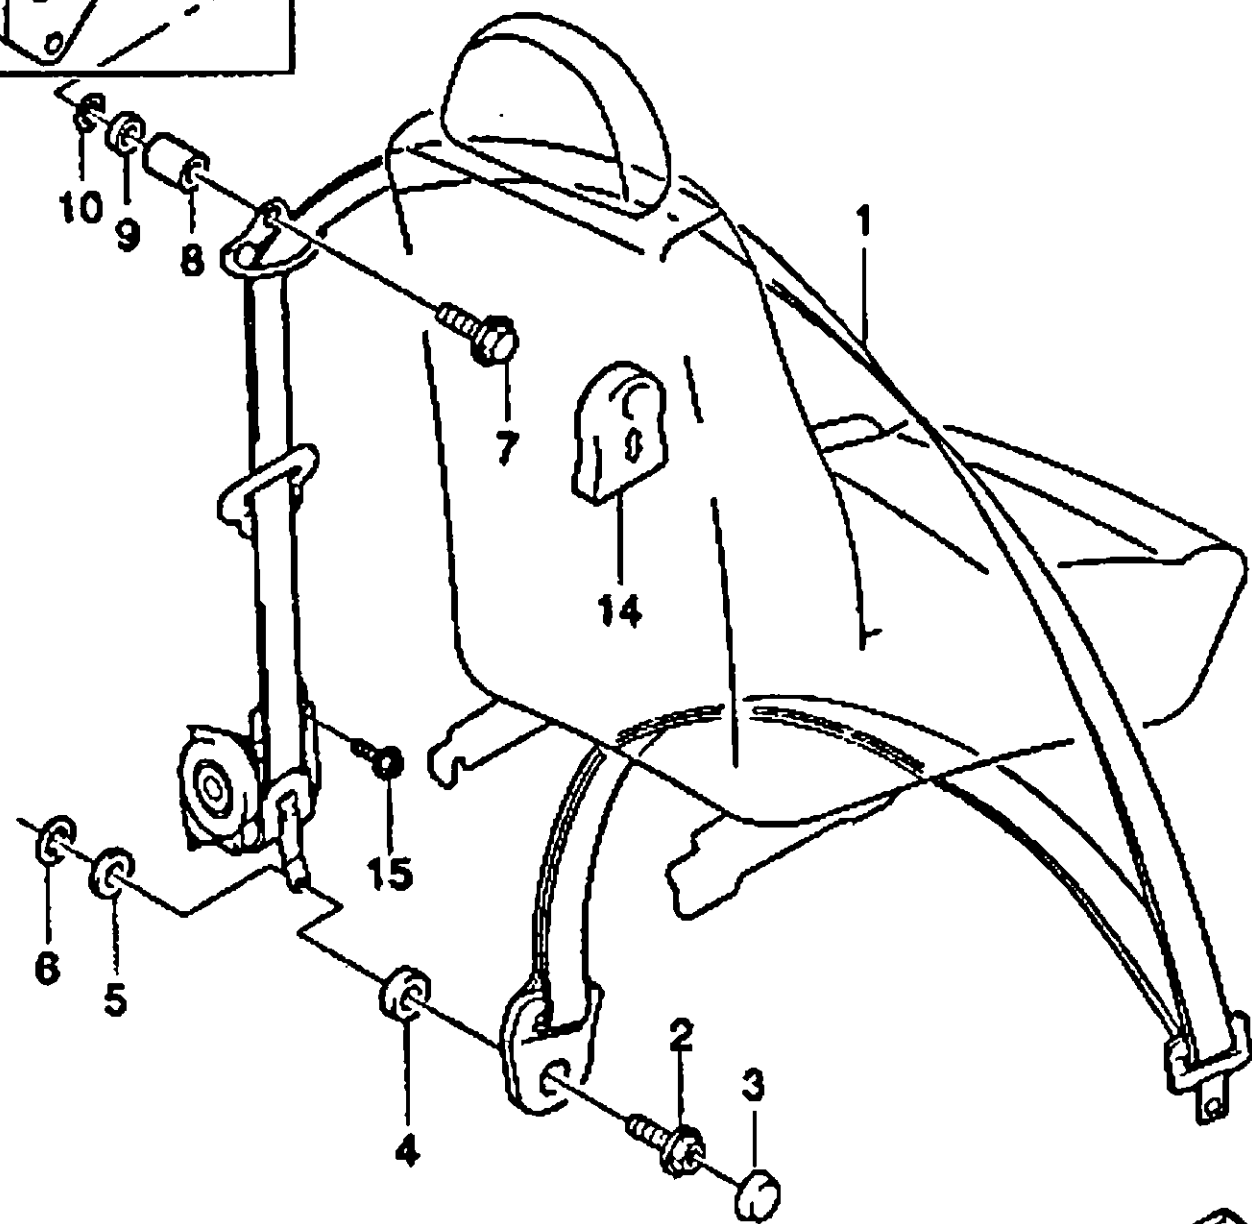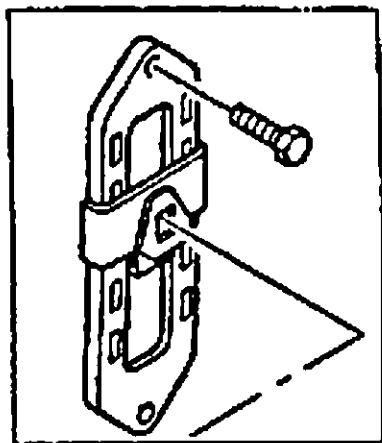


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
	[01]	(E)BELT A-FRONT SEAT (D)SICHERHEITSGURT							(F)CEINTURE-SIEGE AVANT (S)CINTURON-ASIENTO							
	96243252	.	.	B	.	B	S	.	.	-SGS/ABF/AJ3	LH	1		4L		
	96244251	.	.	B	.	B	S	.	.	-SGS/ABF	RH	1		4M		
	96248299	.	.	B	.	B	.	S	S	-SGS/ABF/AJ3	LH	1		5A		
	96248300	.	.	B	.	B	.	S	S	-SGS/AJ3	RH	1		5B		
	96243253	.	.	B	.	B	.	O	O	&ABF/AJ3-SGS	LH	1	NOT APPLIED	4N		
	96240897	.	.	B	.	B	.	O	O	&ABF/AJ3-SGS	LH	1		2A		
	96243254	.	.	B	.	B	.	O	O	&ABF-SGS	RH	1	NOT APPLIED	4O		
	96240898	.	.	B	.	B	.	O	O	&ABF-SGS	RH	1		1J		
	96240890	.	.	B	.	B	A	.	.	&SGS	LH	1		1A		
	96240891	.	.	B	.	B	A	.	.	&SGS	RH	1		1B		
	96254476	.	.	B	.	B	.	A	A	&SGS	LH	1		7A		
	96254476	.	.	B	.	B	.	A	A	&SGS	RH	1		7B		
	96243258	.	.	.	B	.	S	.	.	-SGS	LH	1		4T		
	96243259	.	.	.	B	.	S	.	.	-SGS	RH	1		4U		
	96248297	.	.	.	B	.	.	.	S	-SGS /ABF/AJ3	LH	1		5C		
	96248298	.	.	.	B	.	.	.	S	-SGS /ABF	RH	1		5D		
	96240878	.	.	.	B	.	.	.	O	&ABF/AJ3-SGS	LH	1		1M		
	96240879	.	.	.	B	.	.	.	O	&ABF-SGS	RH	1		1N		
	96240886	.	.	.	B	.	A	.	.	&SGS	LH	1		1S		
	96240887	.	.	.	B	.	A	.	.	&SGS	RH	1		1T		
	96254469	.	.	.	B	.	.	.	A	&SGS	LH	1		7G		
	96254470	.	.	.	B	.	.	.	A	&SGS	RH	1		7H		
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

7550 FRONT SEAT BELT

6K06

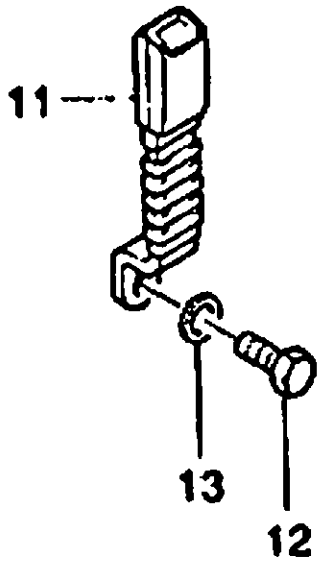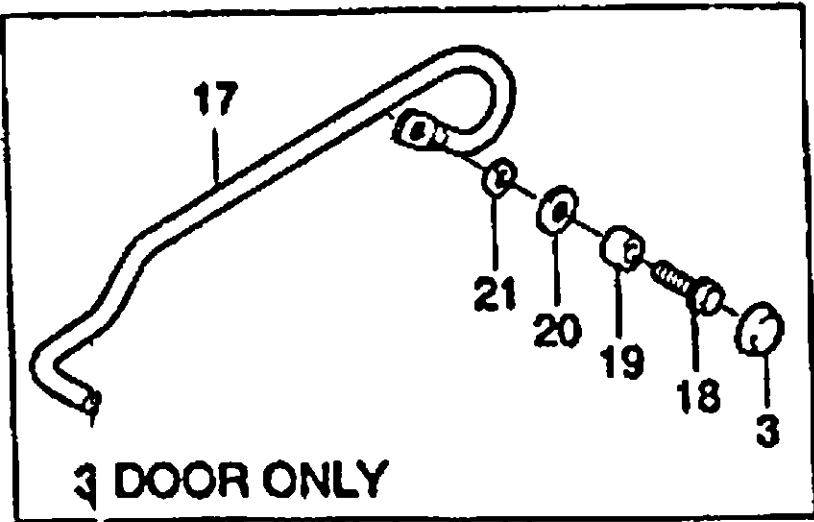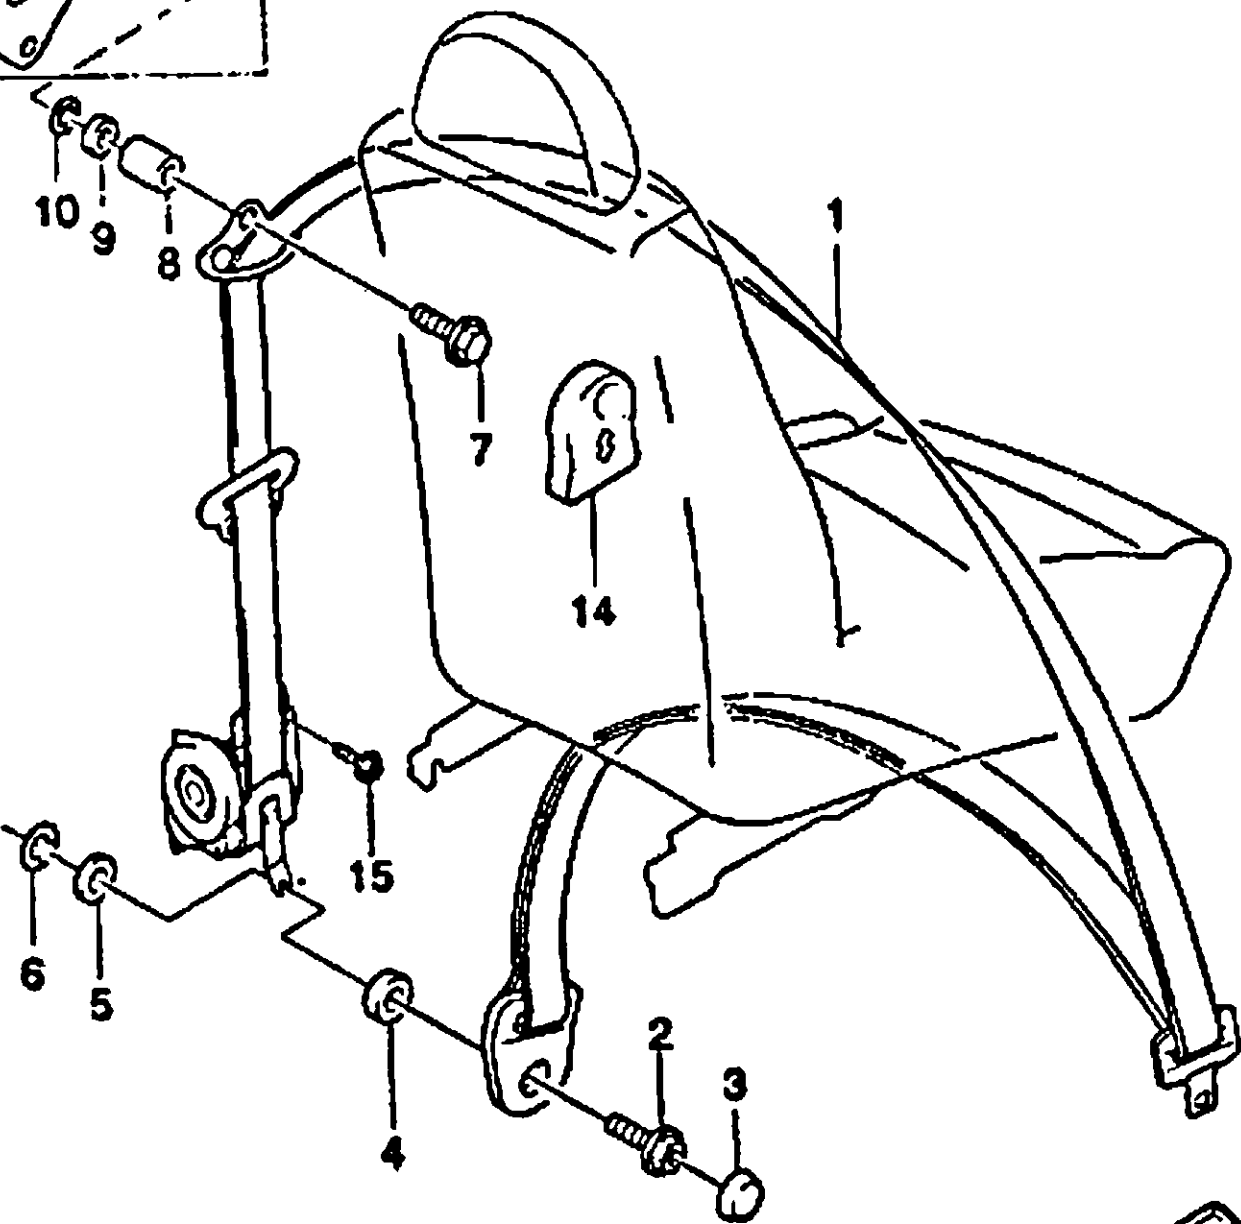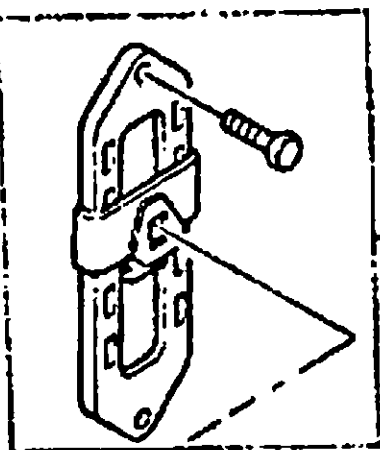


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[02]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO				
	CPZ01580	. . . B . B S S S									2		L=42		
	CPZ03380	 B . S . S									2		L=20		
	[03]	(E)CAP-FRONT SEAT (D)DECKEL						BELT BOLT			(F)CHAPEAU (S)TAPA				
	96236550	. . . B B B S S S									2				
	[04]	(E)SPACER (D)DISTANZSTÜCK									(F)ENTRETOISE (S)ESPACIADOR				
	CPZ46090	. . . B . B S S S									2		Φ 20,L=10		
	[05]	(E)SPACER (D)DISTANZSTÜCK									(F)ENTRETOISE (S)ESPACIADOR				
	CPZ46040	. . . B . B S S S									2		Φ 20,L=5		
	[06]	(E)WASHER-TOOTH (D)DICHTUNGSRING									(F)RONDELLE-VERROU DE DENT (S)ARANDELA-CIERRE DE DIENTE				
	CPZ42010	. . . B B B S S S									2				
	[07]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO				
	CPZ01420	. . . B B B S . .	-AAC								2		L=60		
	CPZ01470	. . . B B B . S S	&AAC								2		L=40		
	[08]	(E)SPACER (D)DISTANZSTÜCK									(F)ENTRETOISE (S)ESPACIADOR				
	CPZ46020	. . . B B B S . .	-AAC								2		Φ 20,L=20		
	CPZ46030	. . . B B B . S S	&AAC								2		Φ 20,L=16		
	[09]	(E)SPACER (D)DISTANZSTÜCK									(F)ENTRETOISE (S)ESPACIADOR				
	CPZ46360	. . . B B B S . .	-AAC								2		Φ 20,L=13		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

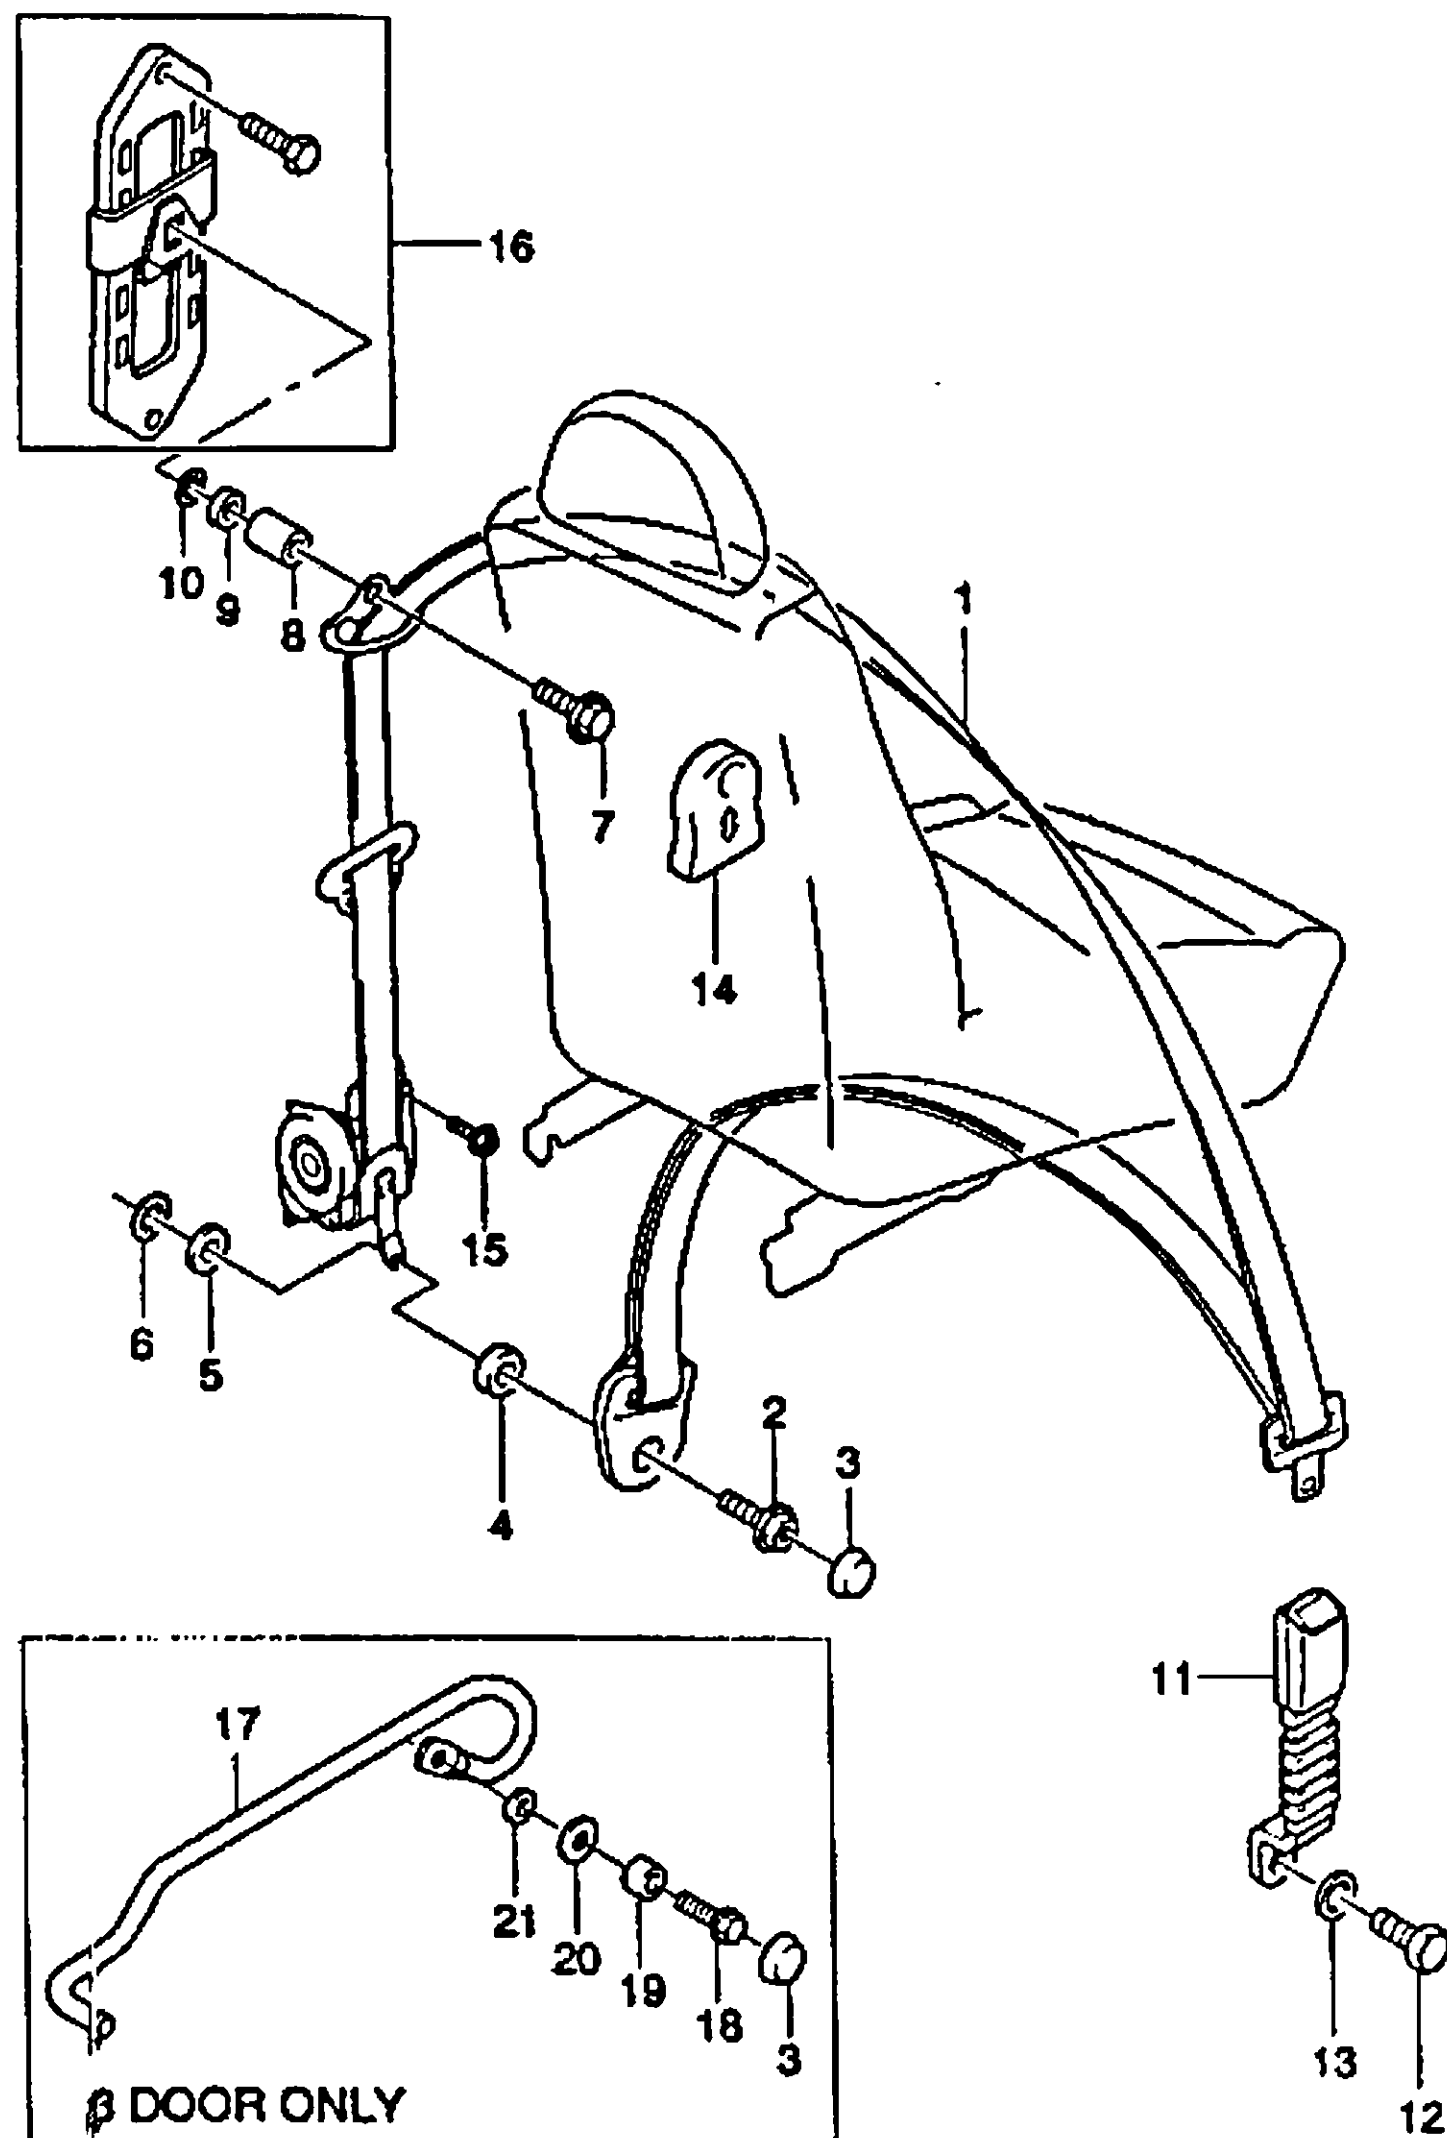

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T /br/>A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[10] CPZ42010	(E)WASHER-TOOTH (D)DICHTUNGSRING									(F)RONDELLE-VERROU DE DENT (S)ARANDELA-CIERRE DE DIENTE				
	[11] 96236531	(E)BUCKLE A-FRONT SEAT BELT (D)SCHNALLE, SICHERHEITSGURT									(F)BOUCLE-CEINTURE SIEGE (S)HEBILLA-CINTURON				
	96236532														
	[12] 96190876	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO				
	[13] 09162-17001	(E)WASHER-SPRING (D)DICHTUNGSRING									(F)RONDELLE (S)ARANDELA				
	[14] CPF12130	(E)COVER-PILLAR (D)DECKEL									(F)COUVERTURE (S)CUBIERTA				
	CPF12120														
	[15] 09119-06023	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO				
	Q 09119-06028														
	[16] 96190873	(E)ADJUSTER-SEAT BELT HEIGHT (D)EINSTELLVORRICHTUNG									(F)AJUSTEUR-HAUTEUR (S)AJUSTADOR				
	[17] 96226306	(E)BAR-FRT SEAT BELT SLIDING (D)STANGE, SICHERHEITSGURT									(F)BARRE (S)BARRA-DESLIZADOR				
	96226307														
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							


6M06



KEY NO.		PART NAME													
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL					FROM	TO		
				4 N	3 H	5 H	S	S							
	[18]	(E)BOLT									(F)BOULON				
	96238619	(D)SCHRAUBE									(S)PERNO				
		. . . B . S . S									2			7/16	
	[19]	(E)SPACER									(F)ENTRETOISE				
	96238620	(D)DISTANZSTÜCK									(S)ESPACIADOR				
		. . . B . S . S									2			Ø 20,L=14	
	[20]	(E)SPACER									(F)ENTRETOISE				
	96238621	(D)DISTANZSTÜCK									(S)ESPACIADOR				
		. . . B . S . S									2			Ø 34,L=3.4	
	[21]	(E)SPACER									(F)ENTRETOISE				
	96238622	(D)DISTANZSTÜCK									(S)ESPACIADOR				
		. . . B . S . S									2			Ø 20,L=4	

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK


6N06

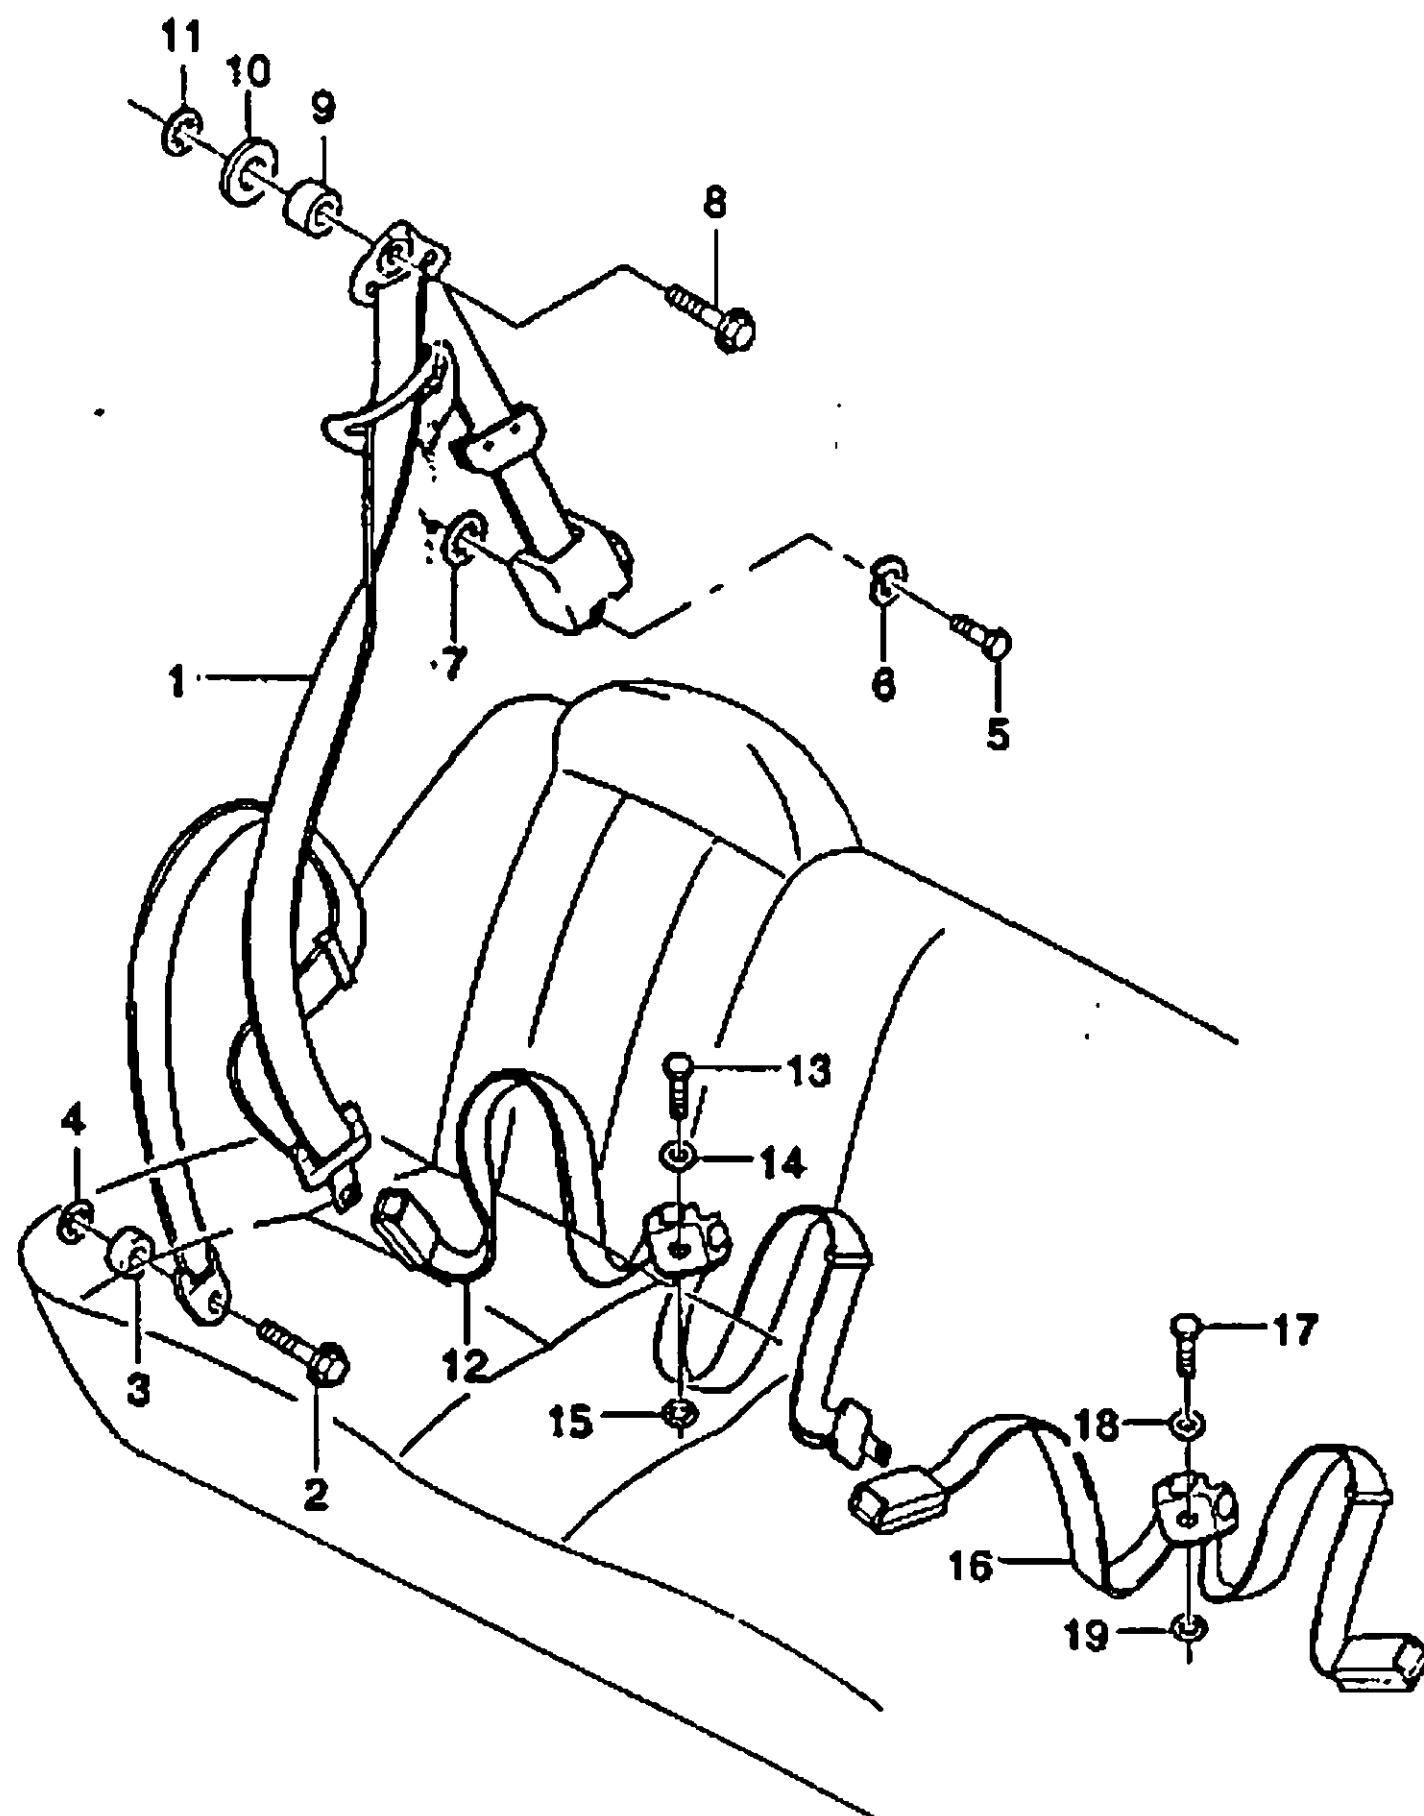

KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)BELT A-REAR SEAT (D)SICHERHEITSGURT										(F)CEINTURE-SIEGE ARRIERE (S)CINTURON-ASIENTO TRASERO			
	96240913	.	.	B	.	.	S S S	-SGS	LH	1				3C	
	96240914	.	.	B	.	.	S S S	-SGS	RH	1				3D	
	96240919	.	.	B	.	.	A A A	&SGS	LH	1				3E	
	96240920	.	.	B	.	.	A A A	&SGS	RH	1				3E	
	96240903	.	.	.	B	.	S . S	-SGS	LH	1				3M	
	96240904	.	.	.	B	.	S . S	-SGS	RH	1				3N	
	96240905	.	.	.	B	.	A . A	&SGS	LH	1				3O	
	96240906	.	.	.	B	.	A . A	&SGS	RH	1				3P	
	96242346	.	.	.	.	B	S . S	-SGS	LH	1				4C	
	96242348	.	.	.	.	B	S . S	-SGS	RH	1				4D	
	96242350	.	.	.	.	B	A . A	&SGS	LH	1				4E	
	96242352	.	.	.	.	B	A . A	&SGS	RH	1				4F	
	[02]	(E)BOLT (D)SCHRAUBE										(F)BOULON (S)PERNO			
	CPZ01480	.	.	B	B	B	S S S			2			L=30		
	[03]	(E)SPACER (D)DISTANZSTÜCK										(F)ENTRETOISE (S)ESPACIADOR			
	CPZ46040	.	.	B	B	B	S S S			2			Φ 20,L=5		
	[04]	(E)WASHER-TOOTH (D)DICHTUNGSRING										(F)RONDELLE-VERROU DE DENT (S)ARANDELA-CIERRE DE DIENTE			
	CPZ42010	.	.	B	B	B	S S S			2					
	[05]	(E)BOLT (D)SCHRAUBE										(F)BOULON (S)PERNO			
	CPZ03380	.	.	B	B	B	S S S			2			L=20		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

7560 REAR SEAT BELT

6B07

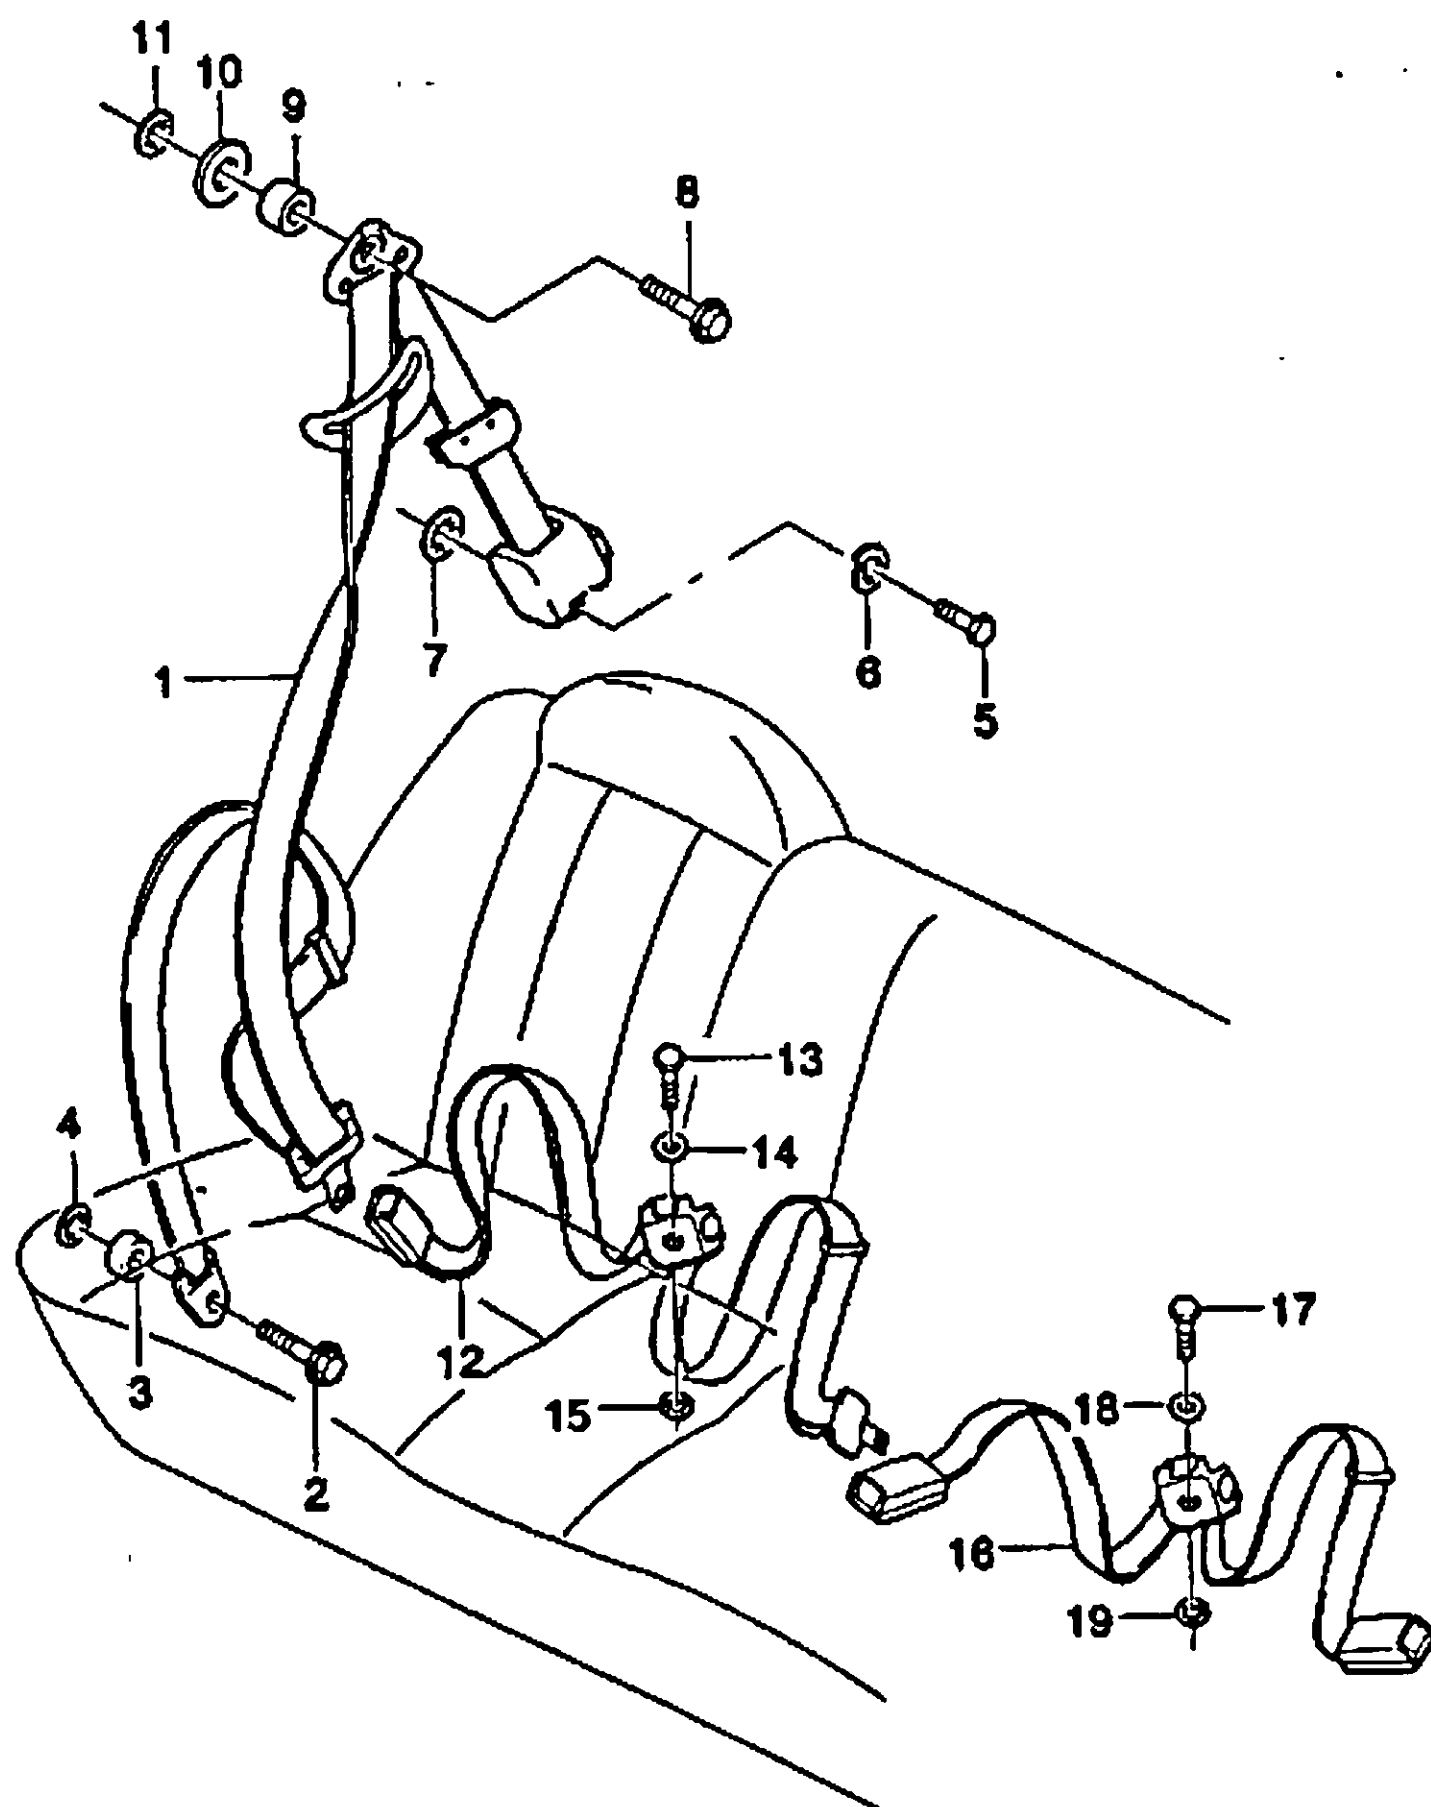


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[06] CPZ41010	(E)WASHER-SPRING (D)DICHTUNGSRING	.	.	B	B	B	S	S	S		(F)RONDELLE (S)ARANDELA	2		
	[07] CPZ42010	(E)WASHER-TOOTH (D)DICHTUNGSRING	.	.	B	B	B	S	S	S		(F)RONDELLE-VERROU DE DENT (S)ARANDELA-CIERRE DE DIENTE	2		
	[08] CPZ01650	(E)BOLT (D)SCHRAUBE	.	.	B	B	B	S	S	S		(F)BOULON (S)PERNO	2	L=32	
	[09] CPZ46040	(E)SPACER (D)DISTANZSTÜCK	.	.	B	B	.	S	S	S		(F)ENTRETOISE (S)ESPACIADOR	2	Φ 20,L=5	
	CPZ46090		.	.	.	.	B	.	S	S			2	Φ 20,L=10	
	[10] CPZ43240	(E)SPACER (D)DISTANZSTÜCK	.	.	B	.	.	.	S	S		(F)ENTRETOISE (S)ESPACIADOR	2	Φ 33,L=2	
	CPZ43220		.	.	.	.	B	S	S	S			2	Φ 26,L=3	
	[11] CPZ42010	(E)WASHER-TOOTH (D)DICHTUNGSRING	.	.	B	B	B	S	S	S		(F)RONDELLE-VERROU DE DENT (S)ARANDELA-CIERRE DE DIENTE	2		
	[12] 96240916	(E)BELT A-RR SEAT,CTR PELVIS (D)SICHERHEITSGURT,MITTE	.	.	B	B	B	S	S	S	SGS	(F)CEINTURE-PELVIS CENTRE (S)CINTURON-CENTRO PELVIS	1		3V
	96240918		.	.	B	B	B	A	A	A	SGS		1		3X
	[13] CPZ03440	(E)BOLT (D)SCHRAUBE	.	.	B	B	B	S	S	S		(F)BOULON (S)PERNO	1	L=25	

ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

7560 REAR SEAT BELT


6C07

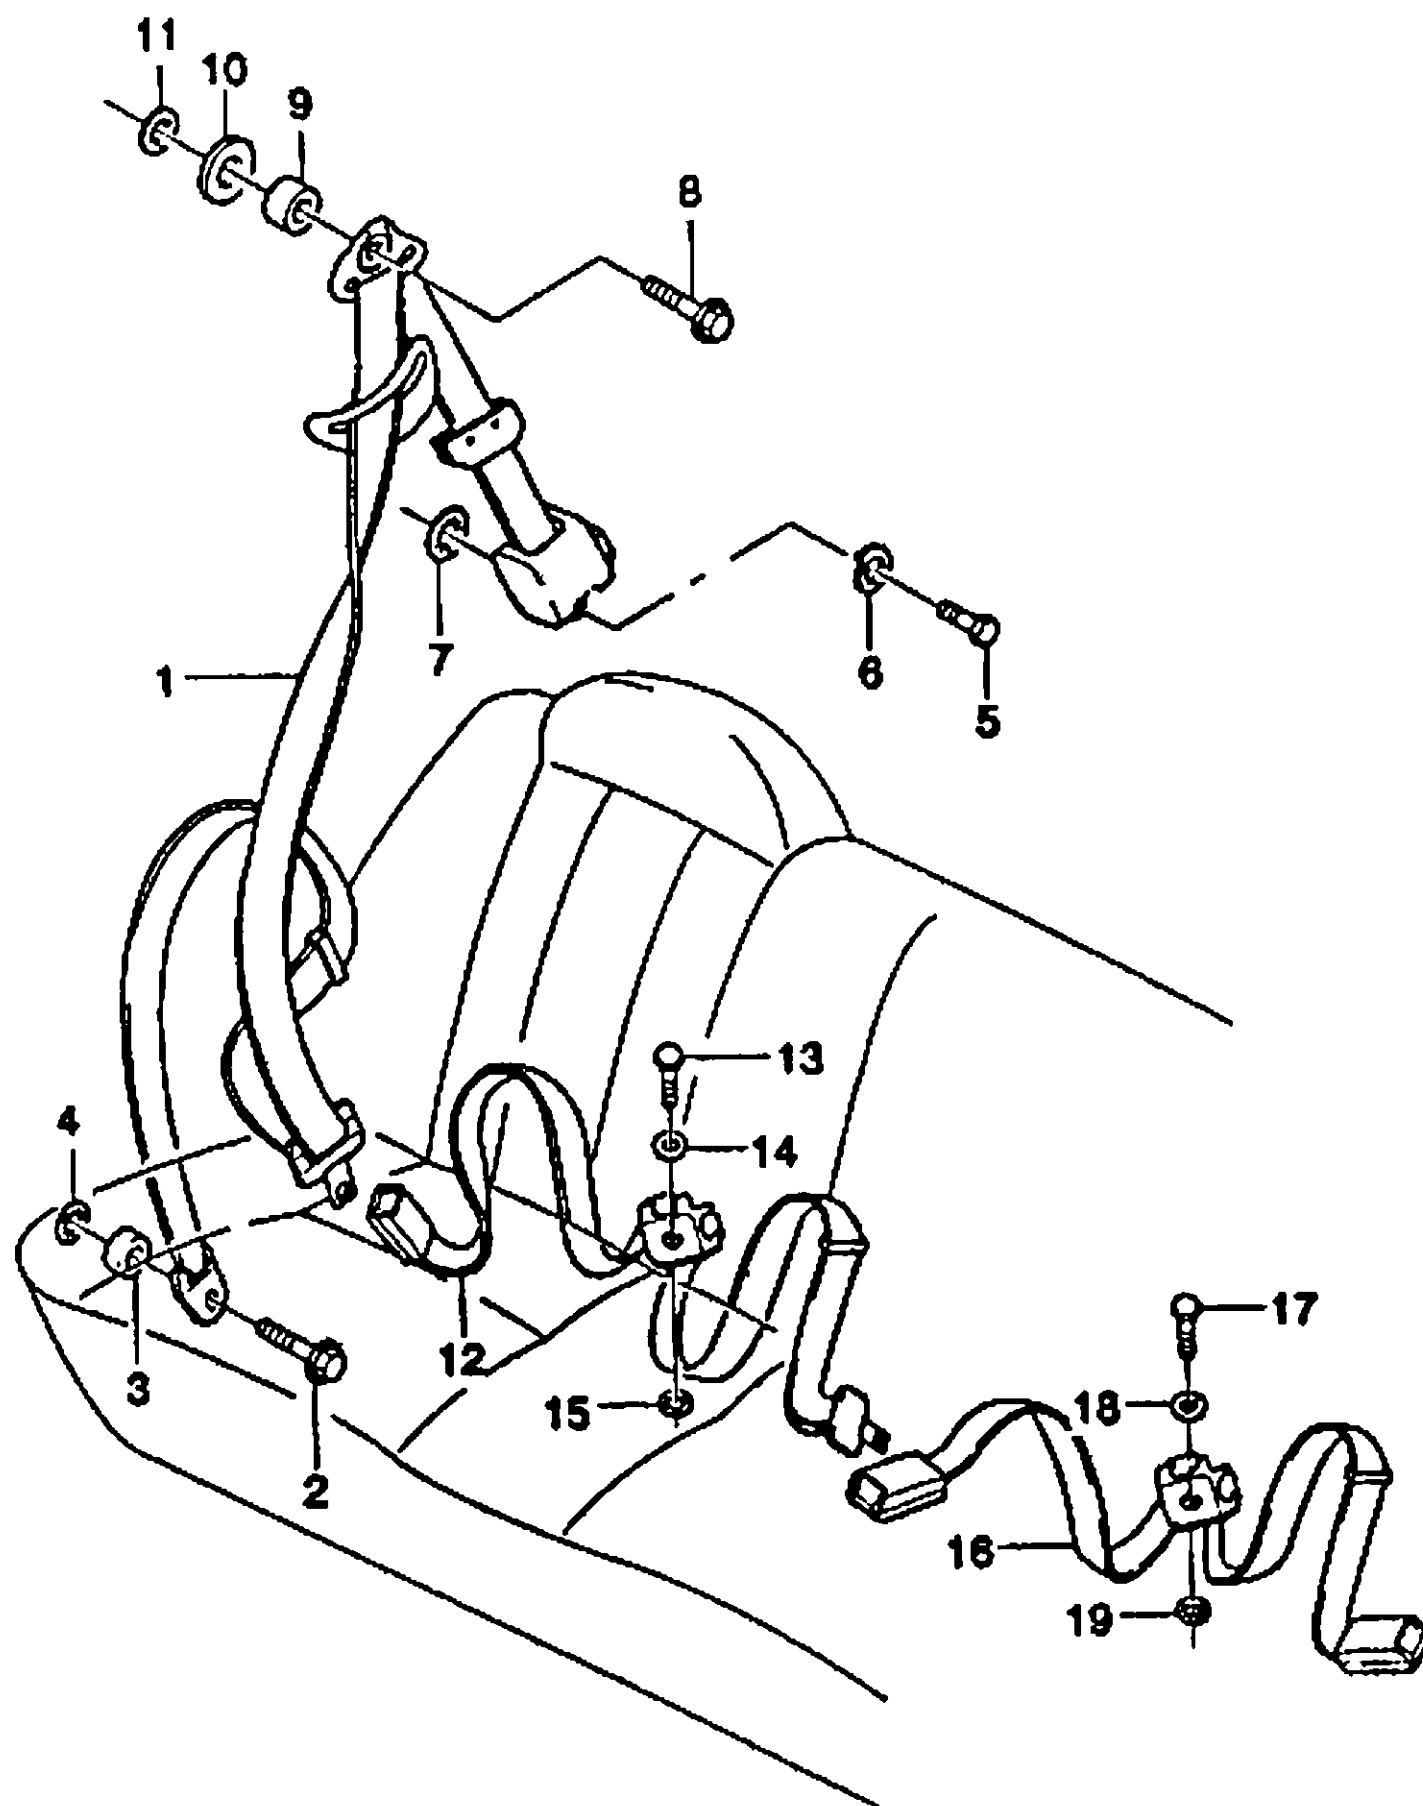

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S
	[14] CPZ43220	(E)SPACER (D)DISTANZSTÜCK . . . B B B S S S									(F)ENTRETOISE (S)ESPACIADOR 1		Φ 26,L=3			
	[15] CPZ42010	(E)WASHER-TOOTH (D)DICHTUNGSRING . . . B B B S S S									(F)RONDELLE-VERROU DE DENT (S)ARANDELA-CIERRE DE DIENTE 1					
	[16] 96240908	(E)BUCKLE A-REAR SEAT BELT (D)SCHNALLE,SICHERHEITSGURT . . . B B B S S S									(F)BOUCLE-CEINTURE SIEGE (S)HEBILLA-CINTURON 1			3T		
	[17] CPZ03440	(E)BOLT (D)SCHRAUBE . . . B B B S S S									(F)BOULON (S)PERNO 1		L=25			
	[18] CPZ43220	(E)SPACER (D)DISTANZSTÜCK . . . B B B S S S									(F)ENTRETOISE (S)ESPACIADOR 1		Φ 26,L=3			
	[19] CPZ42010	(E)WASHER-TOOTH (D)DICHTUNGSRING . . . B B B S S S									(F)RONDELLE-VERROU DE DENT (S)ARANDELA-CIERRE DE DIENTE 1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

7610 FRONT FLOOR CARPET


6D07

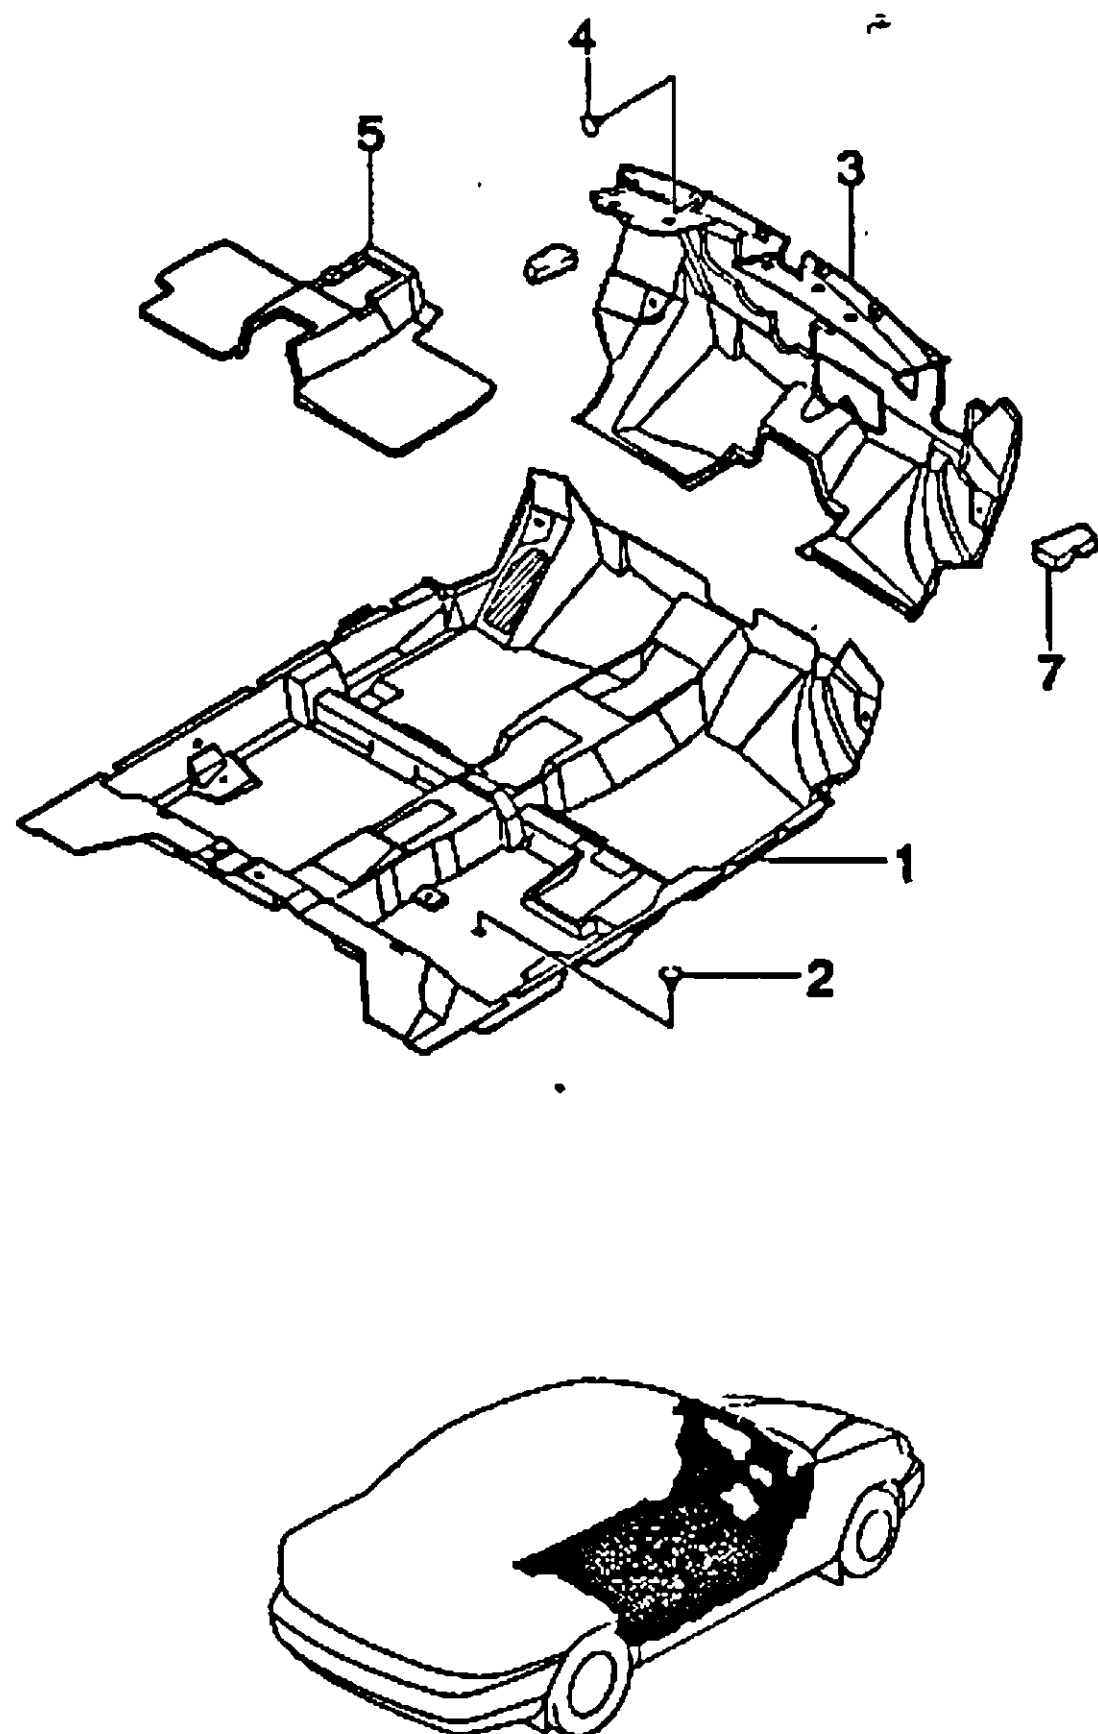

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S S
	[01]	(E)LINING-FLOOR PANEL (D)AUSKLEIDUNG									(F)GARNITURE (S)FORRO-PANEL DEL PISO					
	96243418	. . B . B S S S						-C35/V86		1				TR		
	96252208	. . B . B A A A						&V86-C35		1				TW		
	96252204	. . B . B A A A						&C35		1				TX		
	96258916	. . B . B A A A								1	970709	FOR POLAND		TQ		
	96238378	. . . B . S . S						-C35/V86		1				TM		
	96252209	. . . B . A . A						&V86-C35		1				TZ		
	96252205	. . . B . A . A						&C35		1				TY		
	[02]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	09409-06326	. . B B B S S S								1						
	[03]	(E)INSULATION-DASH PANEL INR (D)ISOLIERUNG									(F)ISOLATION (S)AISLAMIENTO					
	96124011	. . B B B S S S								1	970701			TQ		
	96124011	Y . B B B S S .								1	970701 970901			TQ		
	96252017	B . B B B . . S								1	970701 970901			TQ		
Y	96252017	. . B B B S S S								1	970901			TQ		
	[04]	(E)CLIP (D)KLEMME									(F)ATTACHE (S)GRAPA					
	09409-05311	. . B B B S S S								11						
	[05]	(E)INSULATION-FLOOR PNL,FRT (D)ISOLIERUNG									(F)ISOLATION (S)AISLAMIENTO					
	96124012	. . B B B S S S						-C35		1				TS		
	96245052	. . B B B A A A						&C35		1				TW		
	[07]	(E)INSULATION-FRT PILLAR,LWR (D)ISOLIERUNG									(F)ISOLATION (S)AISLAMIENTO					
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

7610 FRONT FLOOR CARPET


6E07

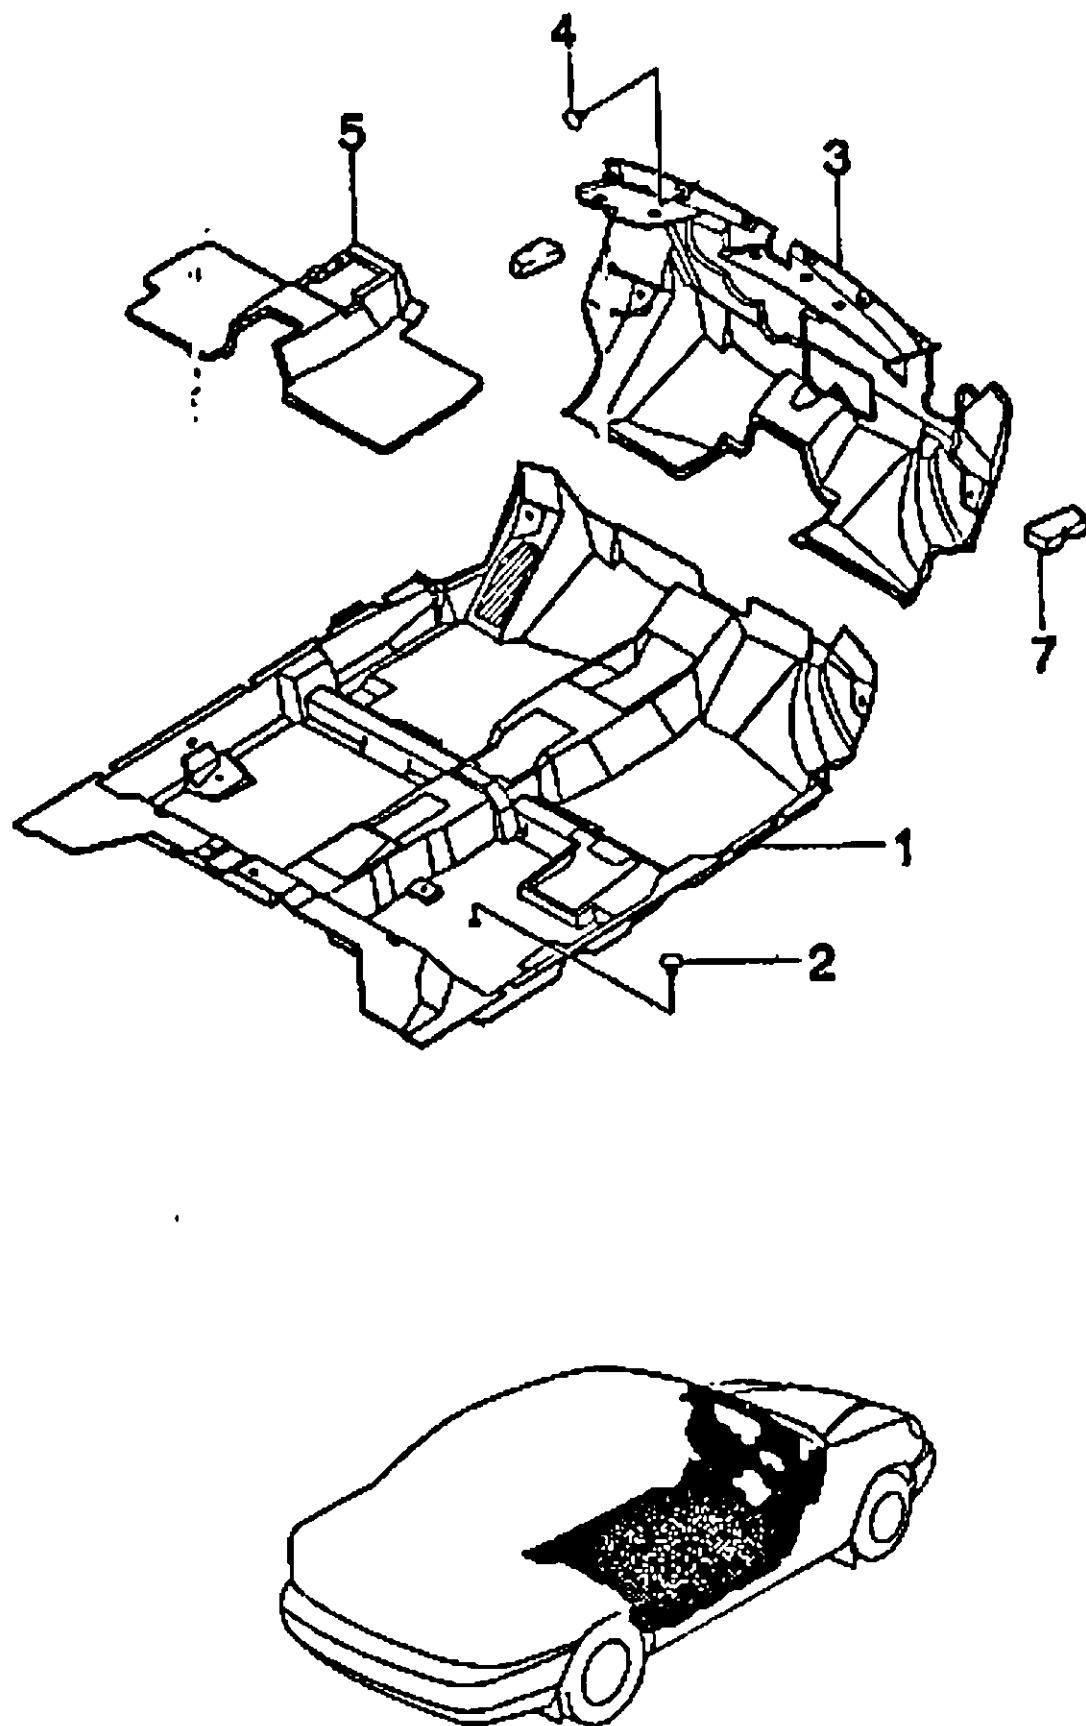



KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	96246330	.	.	B	B	B	S	S	S		LH	1				
	96246331	.	.	B	B	B	S	S	S		RH	1				

20 REAR FLOOR CARPET



6F07

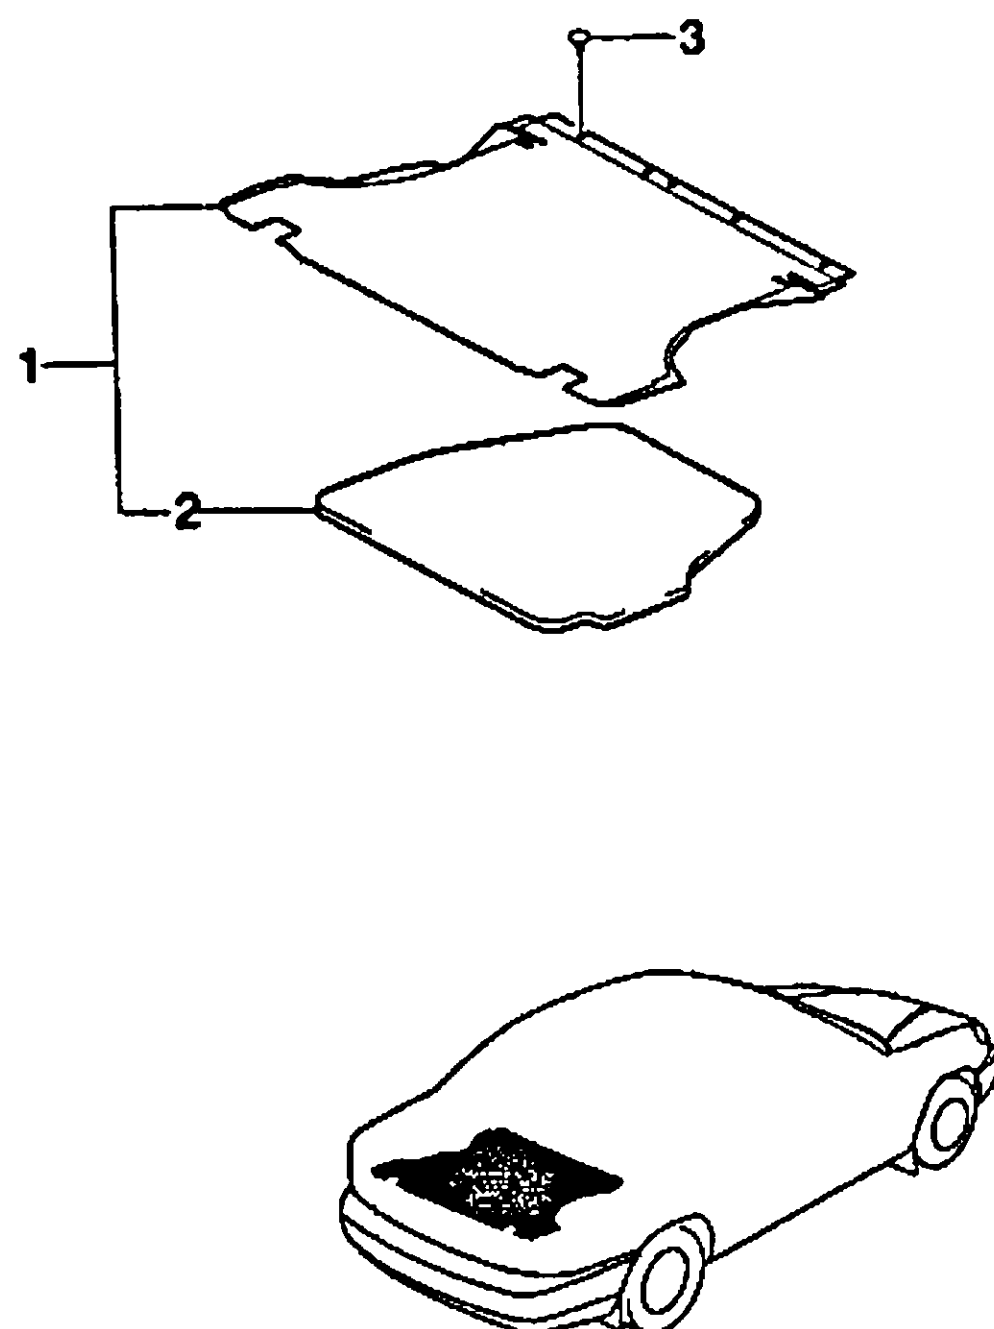



KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S S	S E X								
	[01]	(E)MAT A-FLOOR PANEL,TRUNK (D)AUSKLEIDUNG										(F)GARNITURE (S)FORRO				
	96237863	.	.	B	.	.	S	.	.		1	970509	INCL #2	G8		
O	96255259	.	.	B	.	.	S	.	.		1	970509 970901	INCL #2	R4		
	96237867	.	.	B	.	.	O S	.	.		1	970509	INCL #2	H5		
O	96255265	.	.	B	.	.	O S	.	.		1	970509 970901	INCL #2	S5		
	96255265	.	.	B	.	.	S S	.	.		1	970901	INCL #2	S5		
	96237866	.	.	B	.	.	.	S	.		1	970509	INCL #2	H4		
O	96255263	.	.	B	.	.	.	S	.		1	970509	INCL #2	S4		
	96255263	.	.	B	.	.	A . A	.	.		1	970709	FOR POLAND	S4		
	96237862	.	.	.	B B	.	S	.	.		1	970509	INCL #2	G7		
O	96255257	.	.	.	B B	.	S	.	.		1	970509 970901	INCL #2	R3		
	96237865	.	.	.	B B	O	.	S	.		1	970509	INCL #2	H3		
O	96255262	.	.	.	B B	O	.	S	.		1	970509 970901	INCL #2	S3		
	96255262	.	.	.	B B	.	S	.	S		1	970901	INCL #2	S3		
	[02]	(E)BOARD-FLOOR PANEL,TRUNK (D)BODENVERKLEIDUNG										(F)GARNITURE (S)TABLON DE MALETERO				
	96303140	.	.	B	.	.	S S S	.	.		1	970509				
O	96255266	.	.	B	.	.	S S S	.	.		1	970509				
	96303005	.	.	.	B B	.	S . S	.	.		1	970509				
	96255267	.	.	.	B B	.	S . S	.	.		1	970509				
	[03]	(E)PLUG (D)STÖPSEL										(F)BOUCHON (S)TAPON				
	09241-30003	.	.	B	B	B	.	.	.				NOT APPLIED			
	09409-07326	.	.	B	.	.	.	S	8AM9		5					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

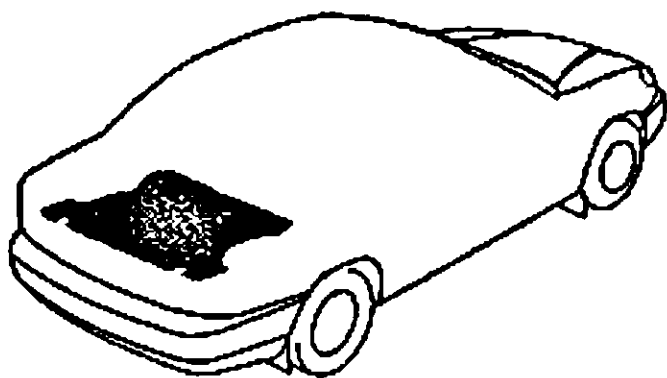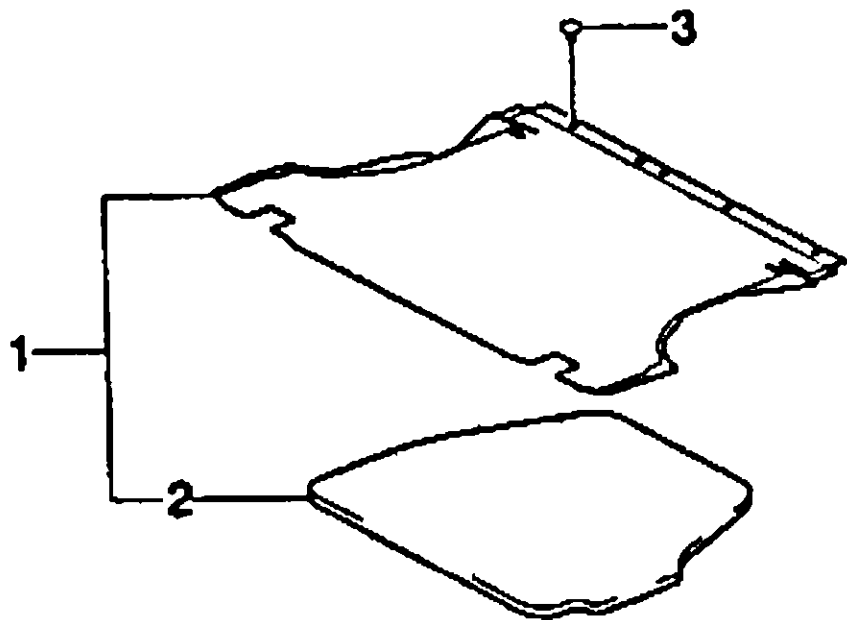

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	09409-07326	.	.	B	.	.	A	.	A	.	5		FOR POLAND			
	09409-07326	.	.	.	B	B	S	.	S	2AMS	5					
	09409-07326	.	.	.	.	B	A	.	A	.	5		FOR POLAND			

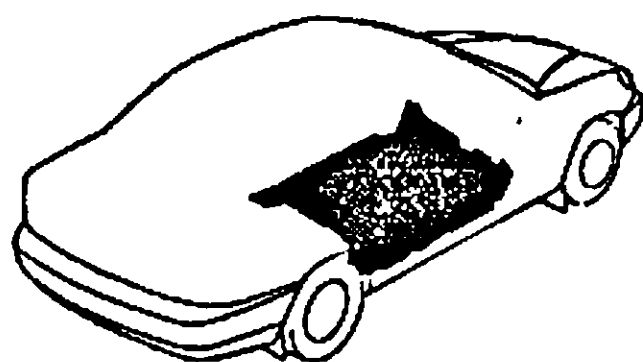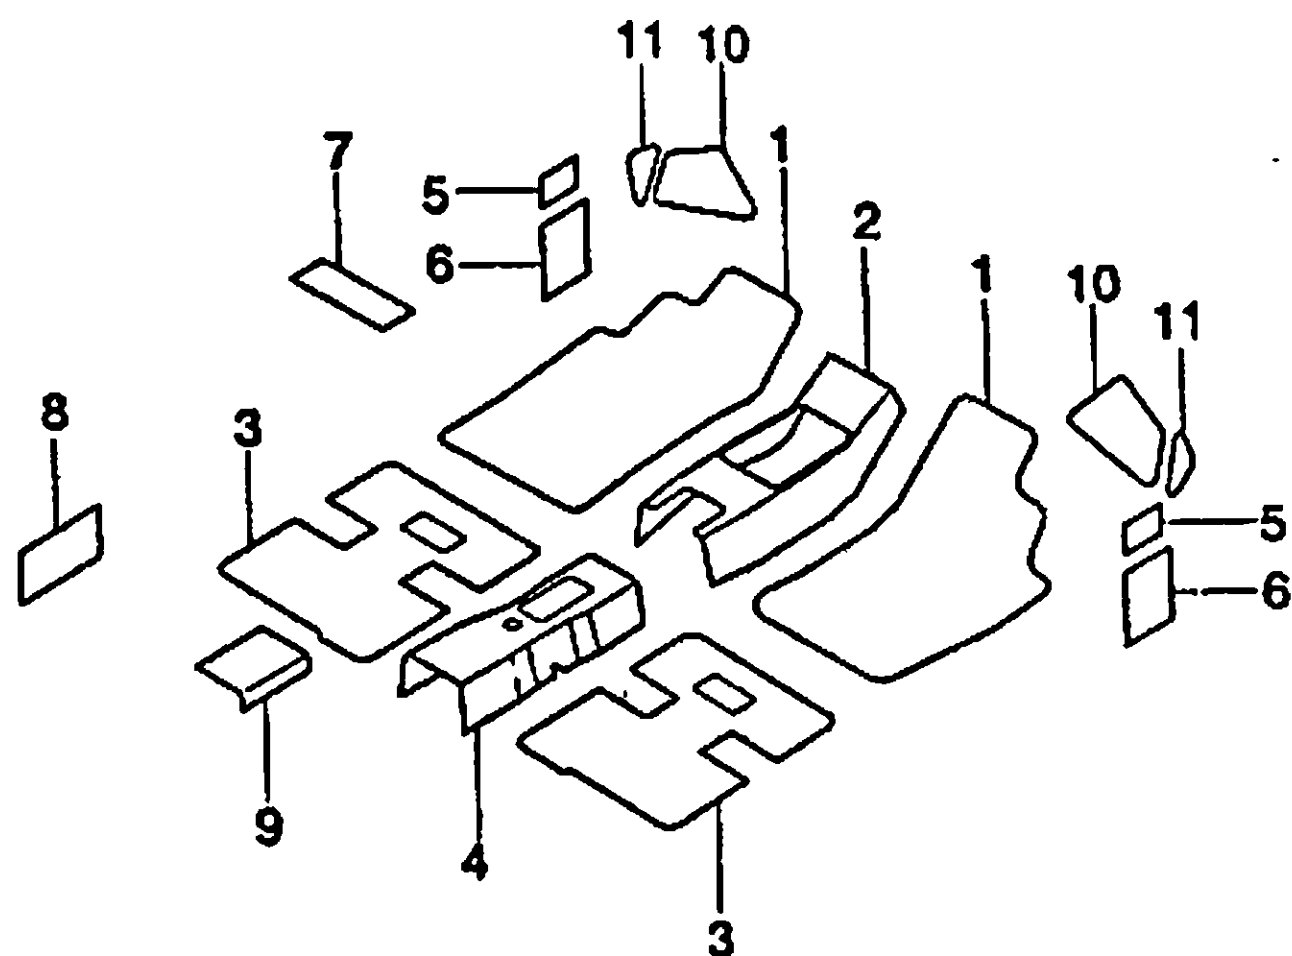


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q / T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01]	(E)DEADENER-FLOOR PANEL,FRT									(F)ASSOURDISSEUR				
		(D)ENDSTÜCK									(S)AMORTIGUADOR				
	96303091	. . B B B S S S									LH 1				
	96303092	. . B B B S S S									RH 1				
	[02]	(E)DEADENER-FLOOR,FRT TUNNEL									(F)ASSOURDISSEUR				
		(D)ENDSTÜCK									(S)AMORTIGUADOR				
	96303089	. . B B B S S S									1				
	[03]	(E)DEADENER-FLOOR PANEL,REAR									(F)ASSOURDISSEUR				
		(D)ENDSTÜCK									(S)AMORTIGUADOR				
	96303093	. . B B B S S S									LH 1				
	96303094	. . B B B S S S									RH 1				
	[04]	(E)DEADENER-FLOOR,RR TUNNEL									(F)ASSOURDISSEUR				
		(D)ENDSTÜCK									(S)AMORTIGUADOR				
	96303090	. . B B B S S S									1				
	[05]	(E)DEADENER-FRT P ILLAR UPPER									(F)ASSOURDISSEUR				
		(D)ENDSTÜCK									(S)AMORTIGUADOR				
	96226902	. . B B B S S S									2				
	[06]	(E)DEADENER-FRT P ILLAR,LOWER									(F)ASSOURDISSEUR				
		(D)ENDSTÜCK									(S)AMORTIGUADOR				
	96226915	. . B B B S S S									2				
	[07]	(E)DEADENER-ROOF PANEL									(F)ASSOURDISSEUR				
		(D)ENDSTÜCK									(S)AMORTIGUADOR				
	96229803	. . B B B S S S									1				
	[08]	(E)DEADENER-SIDE PANEL,TRUNK									(F)ASSOURDISSEUR				
		(D)ENDSTÜCK									(S)AMORTIGUADOR				
	96243410	. . B . . S S S									1				
	[09]	(E)DEADENER-RR FLR TRUNK SID									(F)ASSOURDISSEUR				
		(D)ENDSTÜCK									(S)AMORTIGUADOR				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

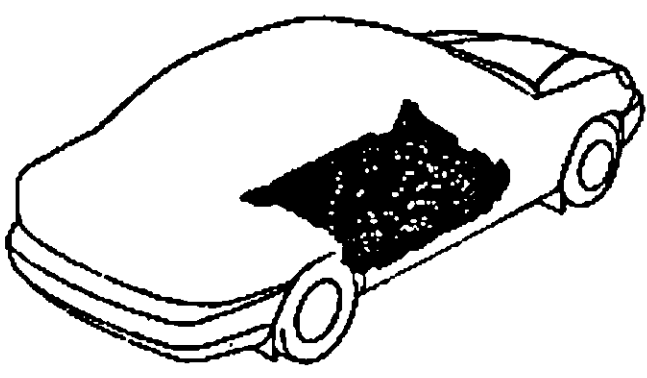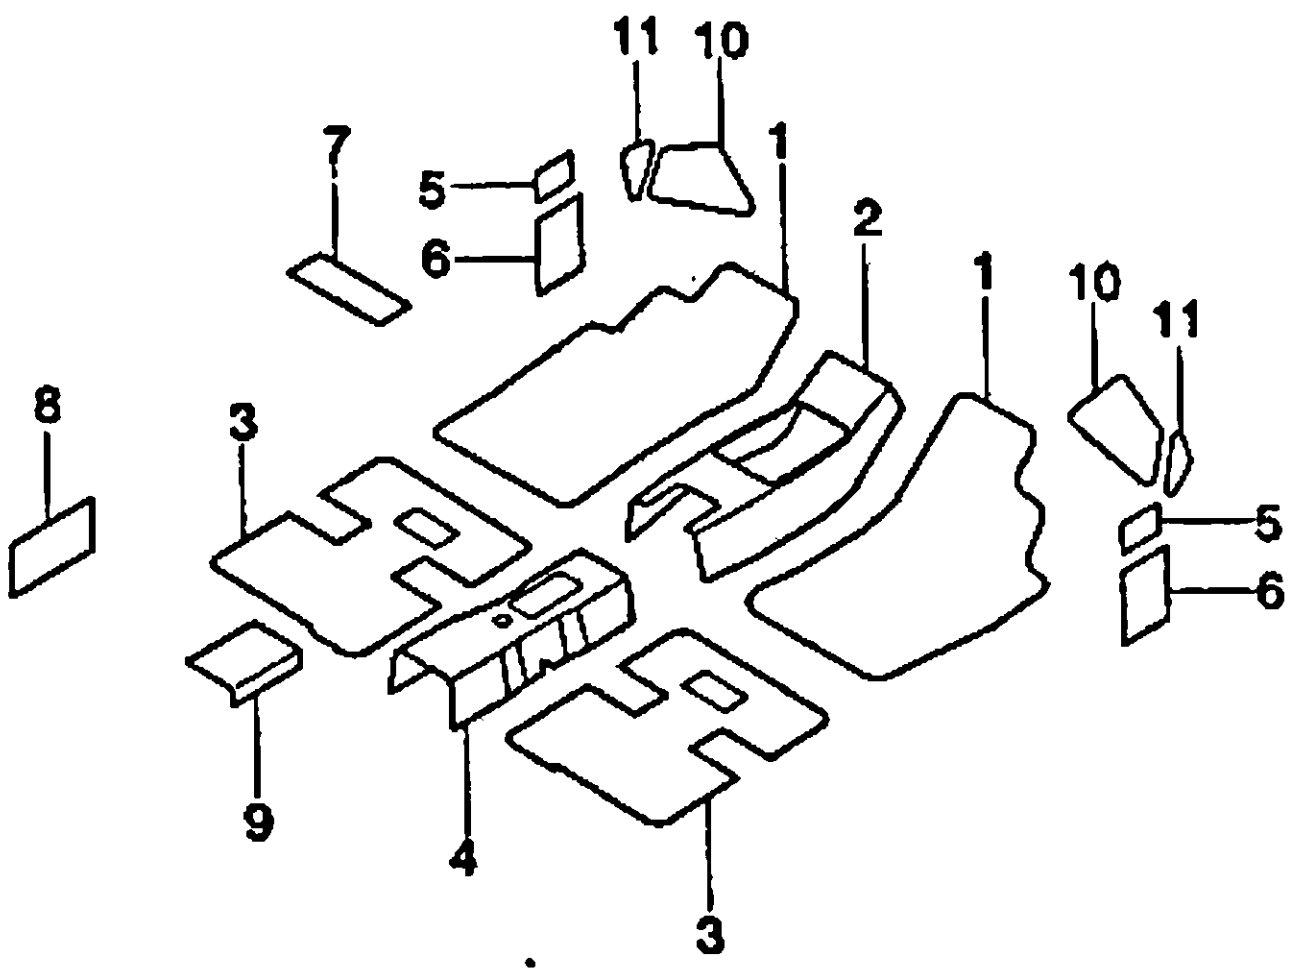


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	96252517	.	.	B	.	.	S	S	S			1				
	96252749	.	.	.	B	B	S	.	S			1				
	[10]	(E)DEADENER-FRT WHEEL HOUSIN (D)ENDSTÜCK										(F)ASSOURDISSEUR (S)AMORTIGUADOR				
	96238894	.	.	B	B	B	S	S	S			LH 2				
	96238896	.	.	B	B	B	S	S	S			RH 2				
	[11]	(E)DEADENER-FRT PILLAR, SIDE (D)ENDSTÜCK										(F)ASSOURDISSEUR (S)AMORTIGUADOR				
	96226915	.	.	B	B	B	S	S	S			2				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

8**HEATER & AIR CONDITIONER**


- 8110 AIR DISTRIBUTION
- 8210 MODULE-AIR CONDITIONER
- 8220 BLOWER
- 8230 EVAPORATOR
- 8310 CONDENSER A
- 8320 COMPRESSOR
- 8330 COMPRESSOR MOUNT
- 8340 AIR CONDITIONER HOSE & PIPE LINE(LHD)
- 8350 AIR CONDITIONER CONTROL SWITCH

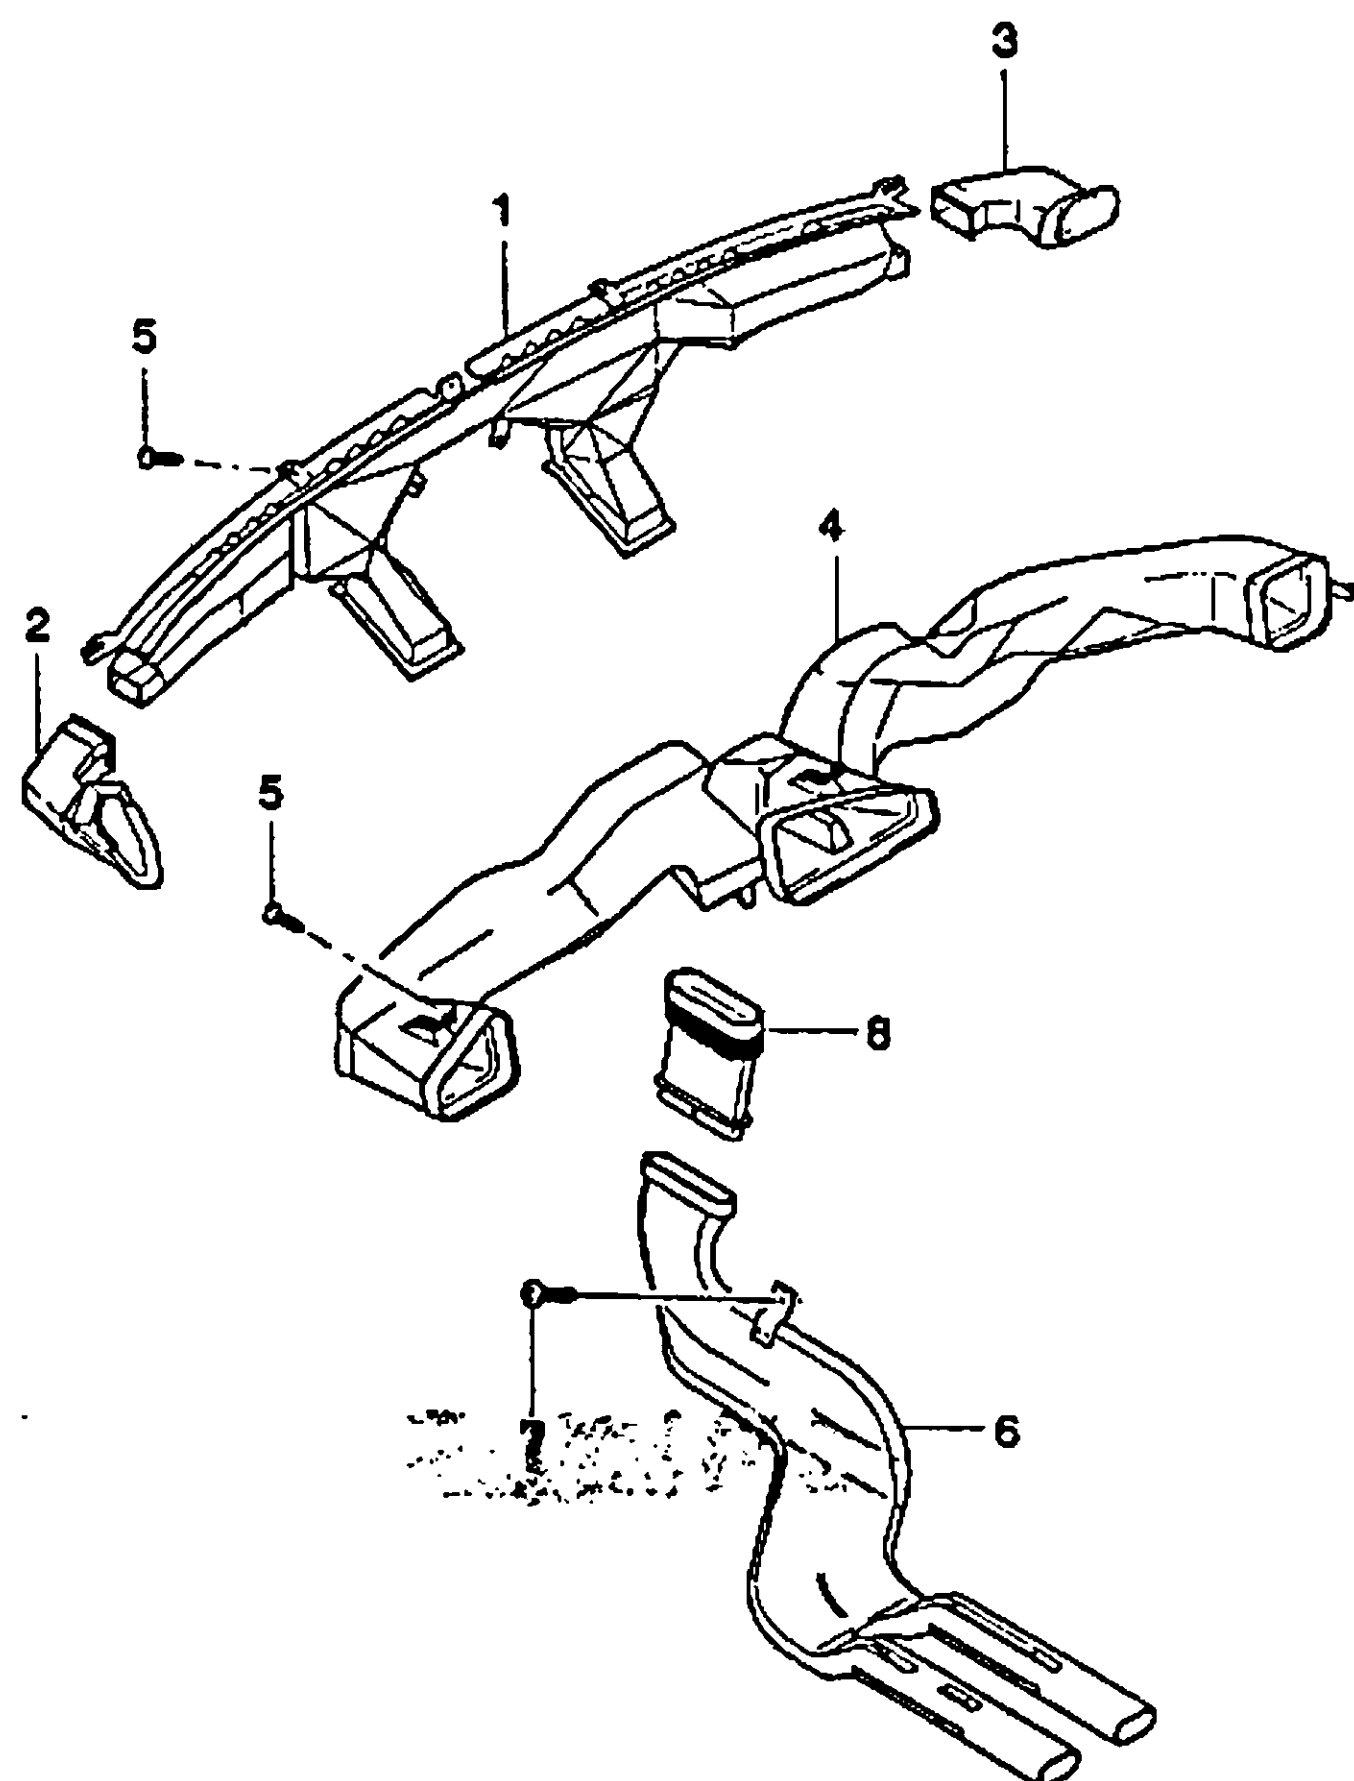

KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N H	3 H	5 H	S S S	S S S								S S S
	[01]	(E) DUCT A-INST PANEL UPR AIR (D) SCHACHT LUFTEINLAB										(F) CONDUIT-ENTREE D'AIR (S) CONDUCTO-ENTRADA DE AIRE				
	96252010	.	.	B	B	B	S	S	S		1					
	[02]	(E) HOSE A-SIDE DEFROSTER (D) SCHLAUCH, ENTFROSTER										(F) TUYAU-DEGIVREUR (S) MANGUERA-DESCONGELADOR				
	96217063	.	.	B	B	B	S	S	S	LH	1					
	[03]	(E) HOSE A-SIDE DEFROSTER (D) SCHLAUCH, ENTFROSTER										(F) TUYAU-DEGIVREUR (S) MANGUERA-DESCONGELADOR				
	96217064	.	.	B	B	B	S	S	S	RH	1					
	[04]	(E) HOSE A-VENTILATION (D) SCHLAUCH, VENTILATOR										(F) TUYAU-VENTILATION (S) MANGUERA-VENTILACION				
	96304300	.	.	B	B	B	S	S	S		1					
	[05]	(E) SCREW-TAPPING (D) SCHRAUBE										(F) VIS (S) TORNILLO				
	03240-48165	.	.	B	B	B	S	S	S		9	970401				
Y	03160-48165	.	.	B	B	B	S	S	S		9	970401				
	[06]	(E) DUCT A-LEG ROOM, REAR (D) SCHACHT										(F) CONDUIT (S) CONDUCTO				
	96235400	.	.	B	B	B	A	A	A	&C35	LH	1				
	96235401	.	.	B	B	B	A	A	A	&C35	RH	1				
	[07]	(E) SCREW (D) SCHRAUBE										(F) VIS (S) TORNILLO				
	03151-55133	.	.	B	B	B	A	A	A	&C35	2					
	[08]	(E) CONNECTOR A-AIR DISRIBUTOR (D) VERBINDUNG										(F) CONNECTEUR (S) CONECTOR				
	96251041	.	.	B	B	B	A	A	A	&C35	LH	1				
	96243680	.	.	B	B	B	A	A	A	&C35	RH	1				
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

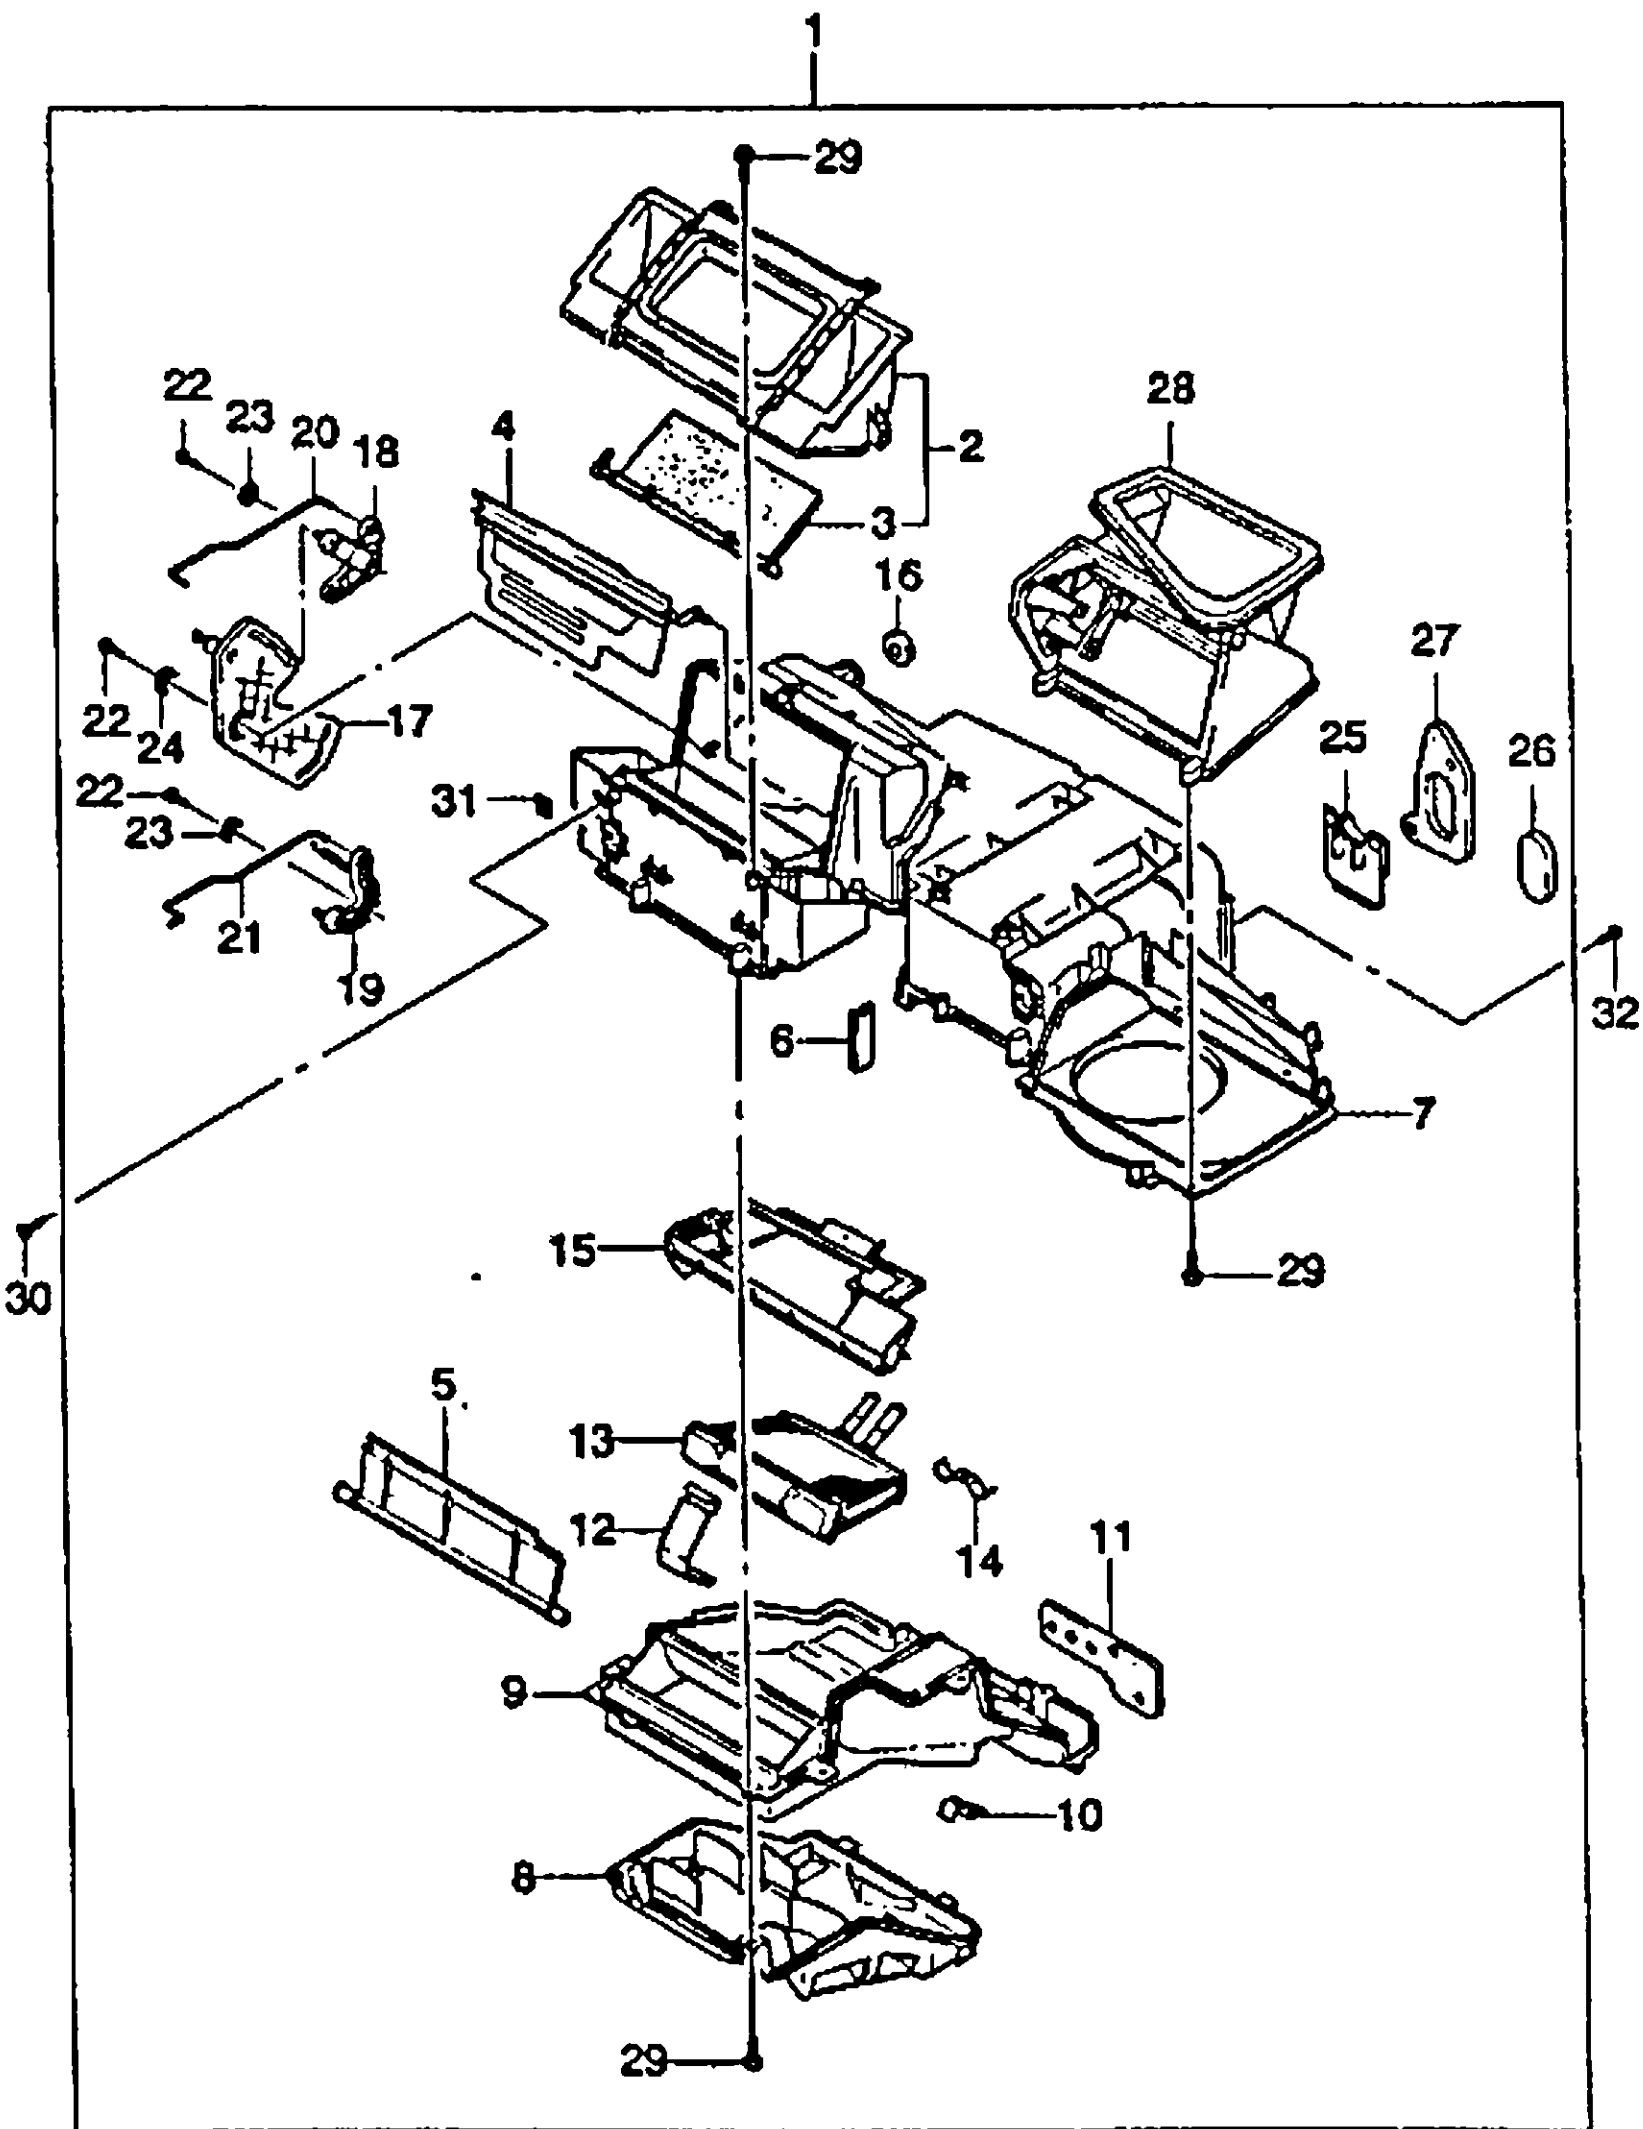


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N	3 H	5 H								
	[01]	(E)MODULE-AIR CONDITIONER (D)KLIMAANLAGE									(F)CLIMATISEUR (S)ACONDICIONADOR DE AIRE			
	96251693	.	.	B	B	B	S	S	S	&C46-C35	1			NS
	96237889	.	.	B	B	B	A	A	A	&C46&C35	1			NC
	96241129	.	.	B	B	B	O	O	O	&C59/C60-C35	1			NE
	96241130	.	.	B	B	B	A	A	A	&C59/C60&C35	1			NF
	[02]	(E)CASE A-DEFROSTER (D)KASTEN									(F)CARTER (S)CAJA			
	612418	.	.	B	B	B	S	S	S		1		INCL.#3	
	[03]	(E)VALVE A-MODE (D)VENTIL									(F)SOUPAPE (S)VALVULA			
	611722	.	.	B	B	B	S	S	S		1			
	[04]	(E)VALVE A-TEMPERATURE (D)VENTIL,TEMPERATUR									(F)SOUPAPE-TEMPERATURE (S)VALVULA-TEMPERATURA			
	612022	.	.	B	B	B	S	S	S		1			
	[05]	(E)VALVE A-HEATER/DEFROSTER (D)VENTIL									(F)SOUPAPE (S)VALVULA			
	611723	.	.	B	B	B	S	S	S		1			
	[06]	(E)CLIP-TEMP VALVE (D)KLEMME									(F)ATTACHE (S)GRAPA			
	611998	.	.	B	B	B	S	S	S		1			
	[07]	(E)CASE A-UPPER (D)KASTEN									(F)CARTER (S)CAJA			
	612962	.	.	B	B	B	S	S	S	&C46	1			
	612098	.	.	B	B	B	O	O	O	&C59/C60	1			
	[08]	(E)CASE-DISTRIBUTOR (D)KASTEN									(F)CARTER (S)CAJA			
	612116	.	.	B	B	B	S	S	S	-C35	1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

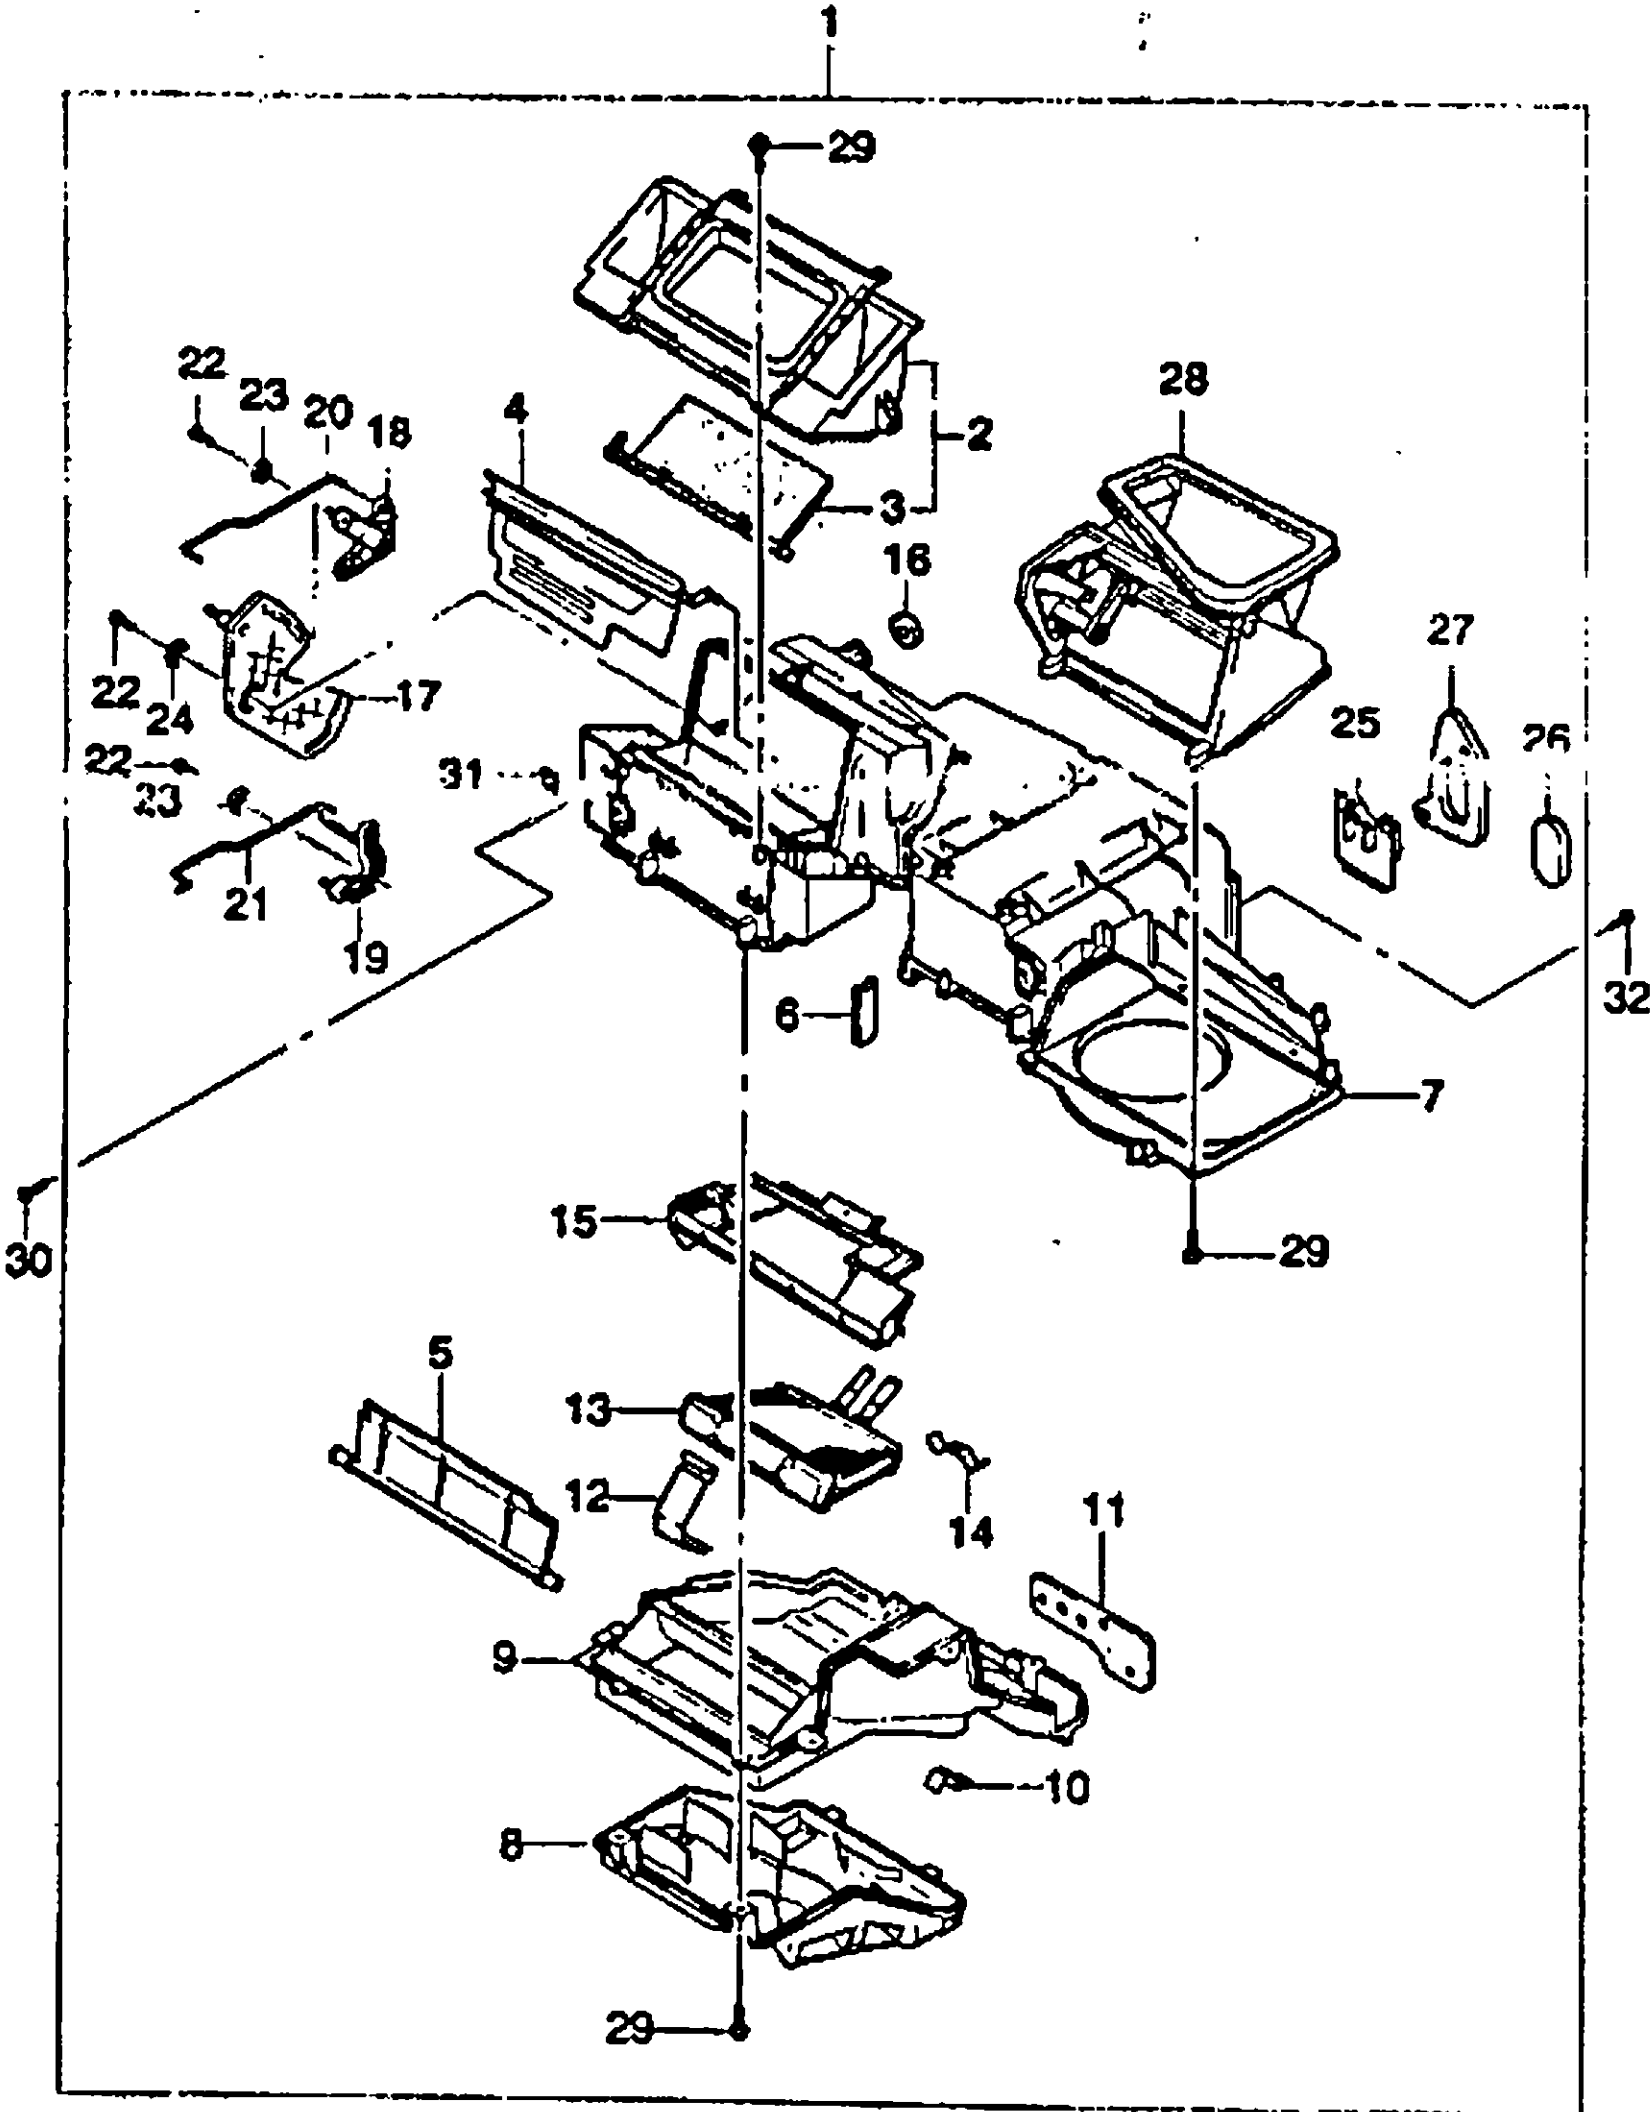


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL			FROM	TO			
				4 N H	3 H	5 H	S S S							S S S
	612112	.	.	B	B	B	A	A	A	&C35	1			
	[09]	(E)CASE-COVER (D)KASTEN								(F)CARTER (S)CAJA				
	612071	.	.	B	B	B	S	S	S		1			
	[10]	(E)CLIP-RETAINING (D)KLEMME								(F)ATTACHE (S)GRAPA				
	611984	.	.	B	B	B	S	S	S		2			
	[11]	(E)SEAL-HEATER PIPE (D)DICHTUNG								(F)JOINT D'ETANCHEITE (S)SELLO				
	612127	.	.	B	B	B	S	S	S		1			
	[12]	(E)CLIP-TANK MOUNTING (D)KLEMME								(F)ATTACHE (S)GRAPA				
	611977	.	.	B	B	B	S	S	S		1			
	[13]	(E)CORE-HEATER (D)GEHÄUSE HEIZUNG								(F)NOYAU-CHAUFFAGE (S)NUCLEO-CALENTADOR				
	96231949	.	.	B	B	B	S	S	S		1			
	[14]	(E)BRACKET-PIPE MOUNTING (D)TRÄGER								(F)SUPPORT (S)SOPORTE				
	611980	.	.	B	B	B	S	S	S		1			
	[15]	(E)CASE A-SHROUD (D)KASTEN								(F)CARTER (S)CAJA				
	612159	.	.	B	B	B	S	S	S		1			
	[16]	(E)SEAL-DASH MOUNTING RING (D)DICHTUNG								(F)JOINT D'ETANCHEITE (S)SELLO				
	612961	.	.	B	B	B	S	S	S		1			
	[17]	(E)LEVER-MAIN (D)HEBEL								(F)LEVIER (S)PALANCA				
	612108	.	.	B	B	B	S	S	S		1			


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

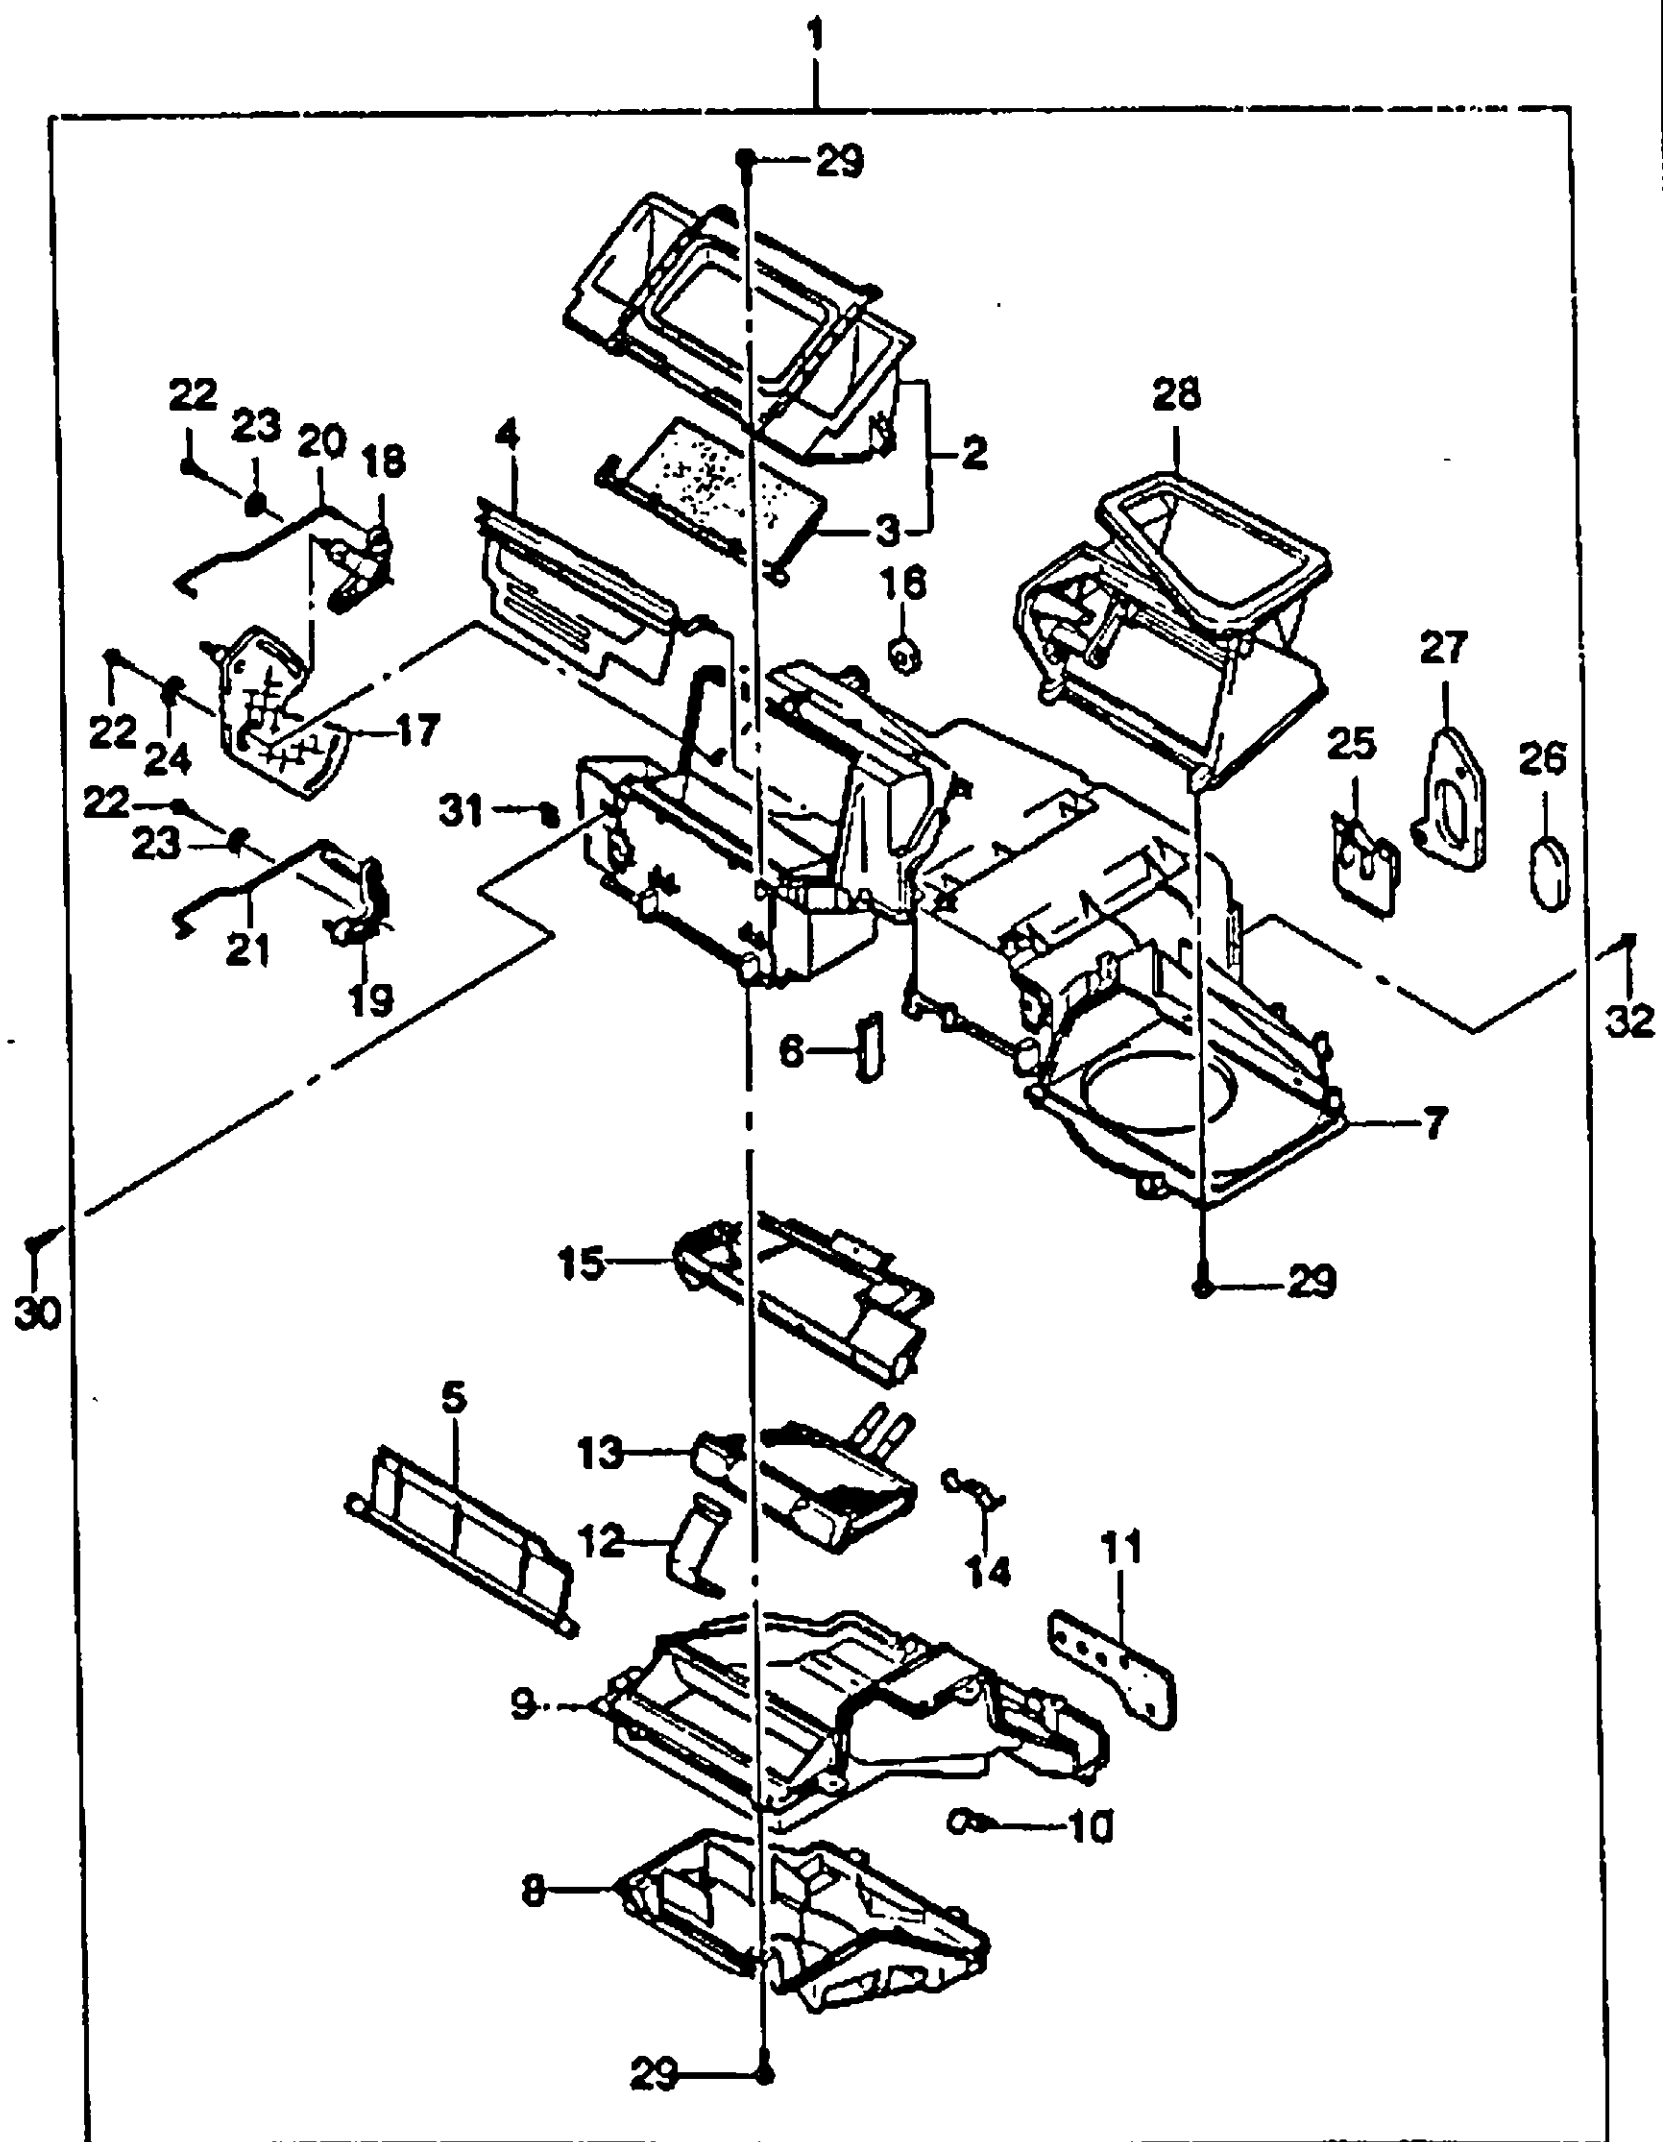


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	612124	.	.	B	B	B	S	S	S		1				
	[28]										(F)ENTREE D'AIR				
											(D)LUFTEINLAß				
	612104	.	.	B	B	B	O	O	O	&C59/C60	1				
	[29]										(F)VIS				
											(S)TORNILLO				
	611979	.	.	B	B	B	S	S	S		45				
	[30]										(F)VIS				
											(S)TORNILLO				
	03160-48165	.	.	B	B	B	S	S	S		2				
	[31]										(F)ECROU				
											(S)TUERCA				
	03511-48042	.	.	B	B	B	S	S	S		2				
	[32]										(F)VIS				
											(S)TORNILLO				
	09139-06003	.	.	B	B	B	S	S	S		5				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

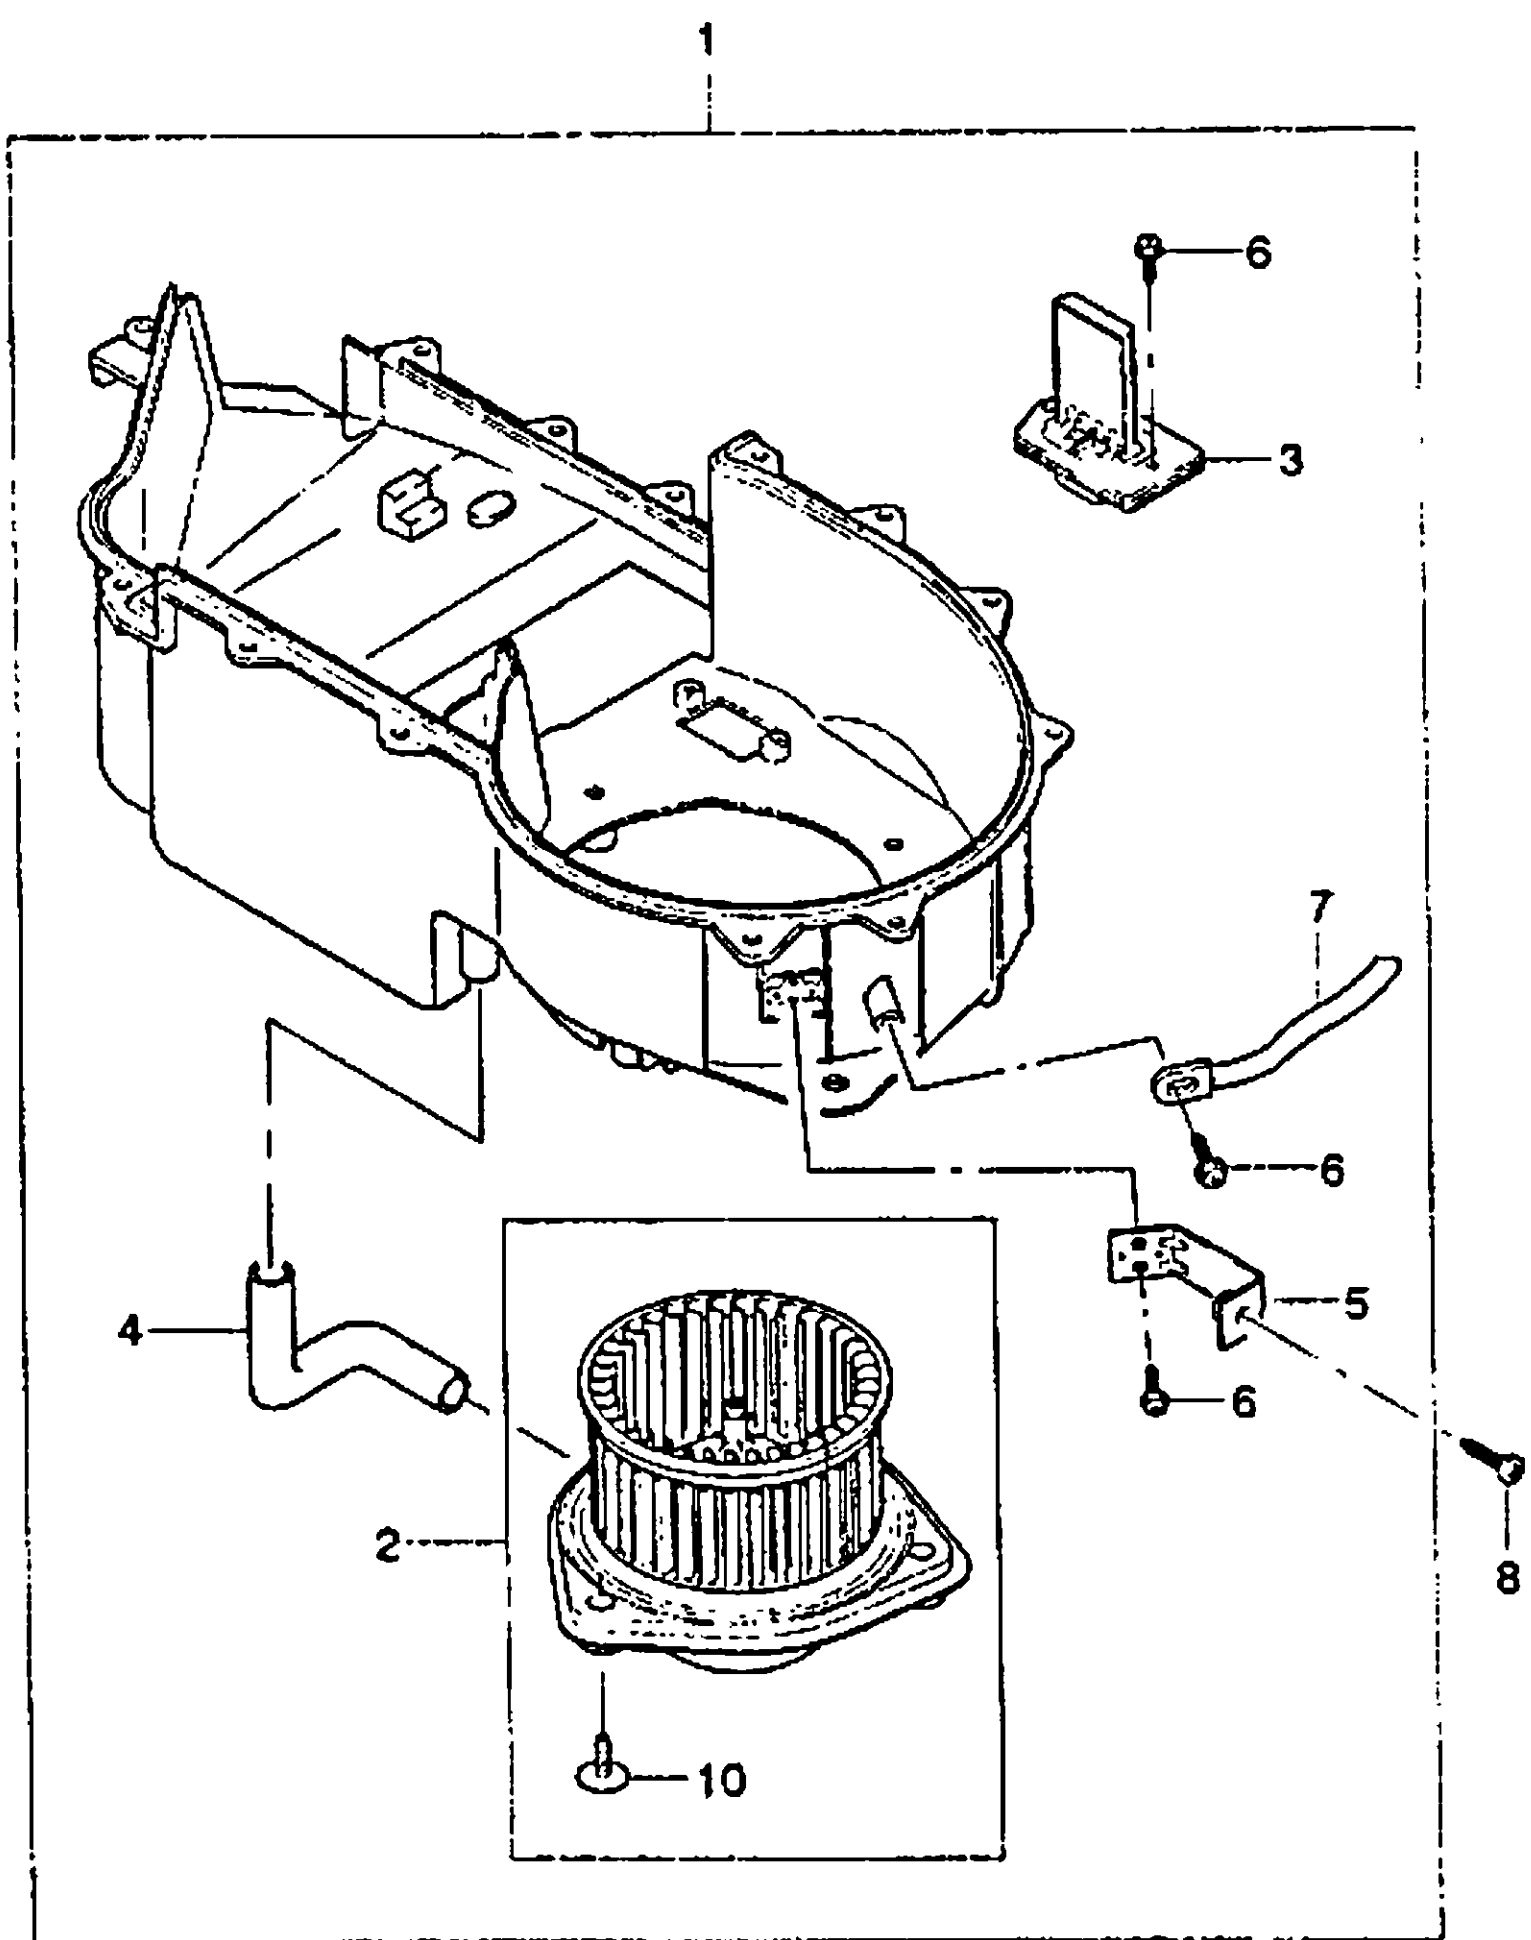


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N H	3 H	5 H	S S	S S								X
	[01]	(E)CASE A-LOWER (D)KASTEN										(F)CARTER (S)CAJA				
	612982	.	.	B	B	B	S	S	S	&C46	1					
	612980	.	.	B	B	B	O	O	O	&C59/C60	1					
	[02]	(E)MOTOR-BLOWER (D)MOTOR										(F)MOTEUR (S)MOTOR				
	96190671	.	.	B	B	B	S	S	S		1					
	[03]	(E)RESISTOR (D)WIDERSTAND										(F)RESISTANCE (S)RESISTOR				
	96247452	.	.	B	B	B	S	S	S		1					
	[04]	(E)TUBE-COOLING (D)ROHRLEITUNG										(F)TUYAU OU TUBE (S)TUBO				
	612030	.	.	B	B	B	S	S	S		1					
	[05]	(E)BRACKET-LOWER (D)TRÄGER										(F)SUPPORT (S)SOPORTE				
	612207	.	.	B	B	B	S	S	S		1					
	[06]	(E)SCREW (D)SCHRAUBE										(F)VIS (S)TORNILLO				
	611979	.	.	B	B	B	S	S	S		8					
	[07]	(E)CLIP-LEAD WIRE (D)KLEMME										(F)ATTACHE (S)GRAPA				
	610452	.	.	B	B	B	S	S	S		1					
	[08]	(E)SCREW (D)SCHRAUBE										(F)VIS (S)TORNILLO				
	02146-06123	.	.	B	B	B	S	S	S		1					
	[09]	(E)COVER-MOTOR (D)DECKEL										(F)CARTER (S)CUBIERTA				
	612971	.	.	B	B	B	S	S	S		1			NOT APPLIED		
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

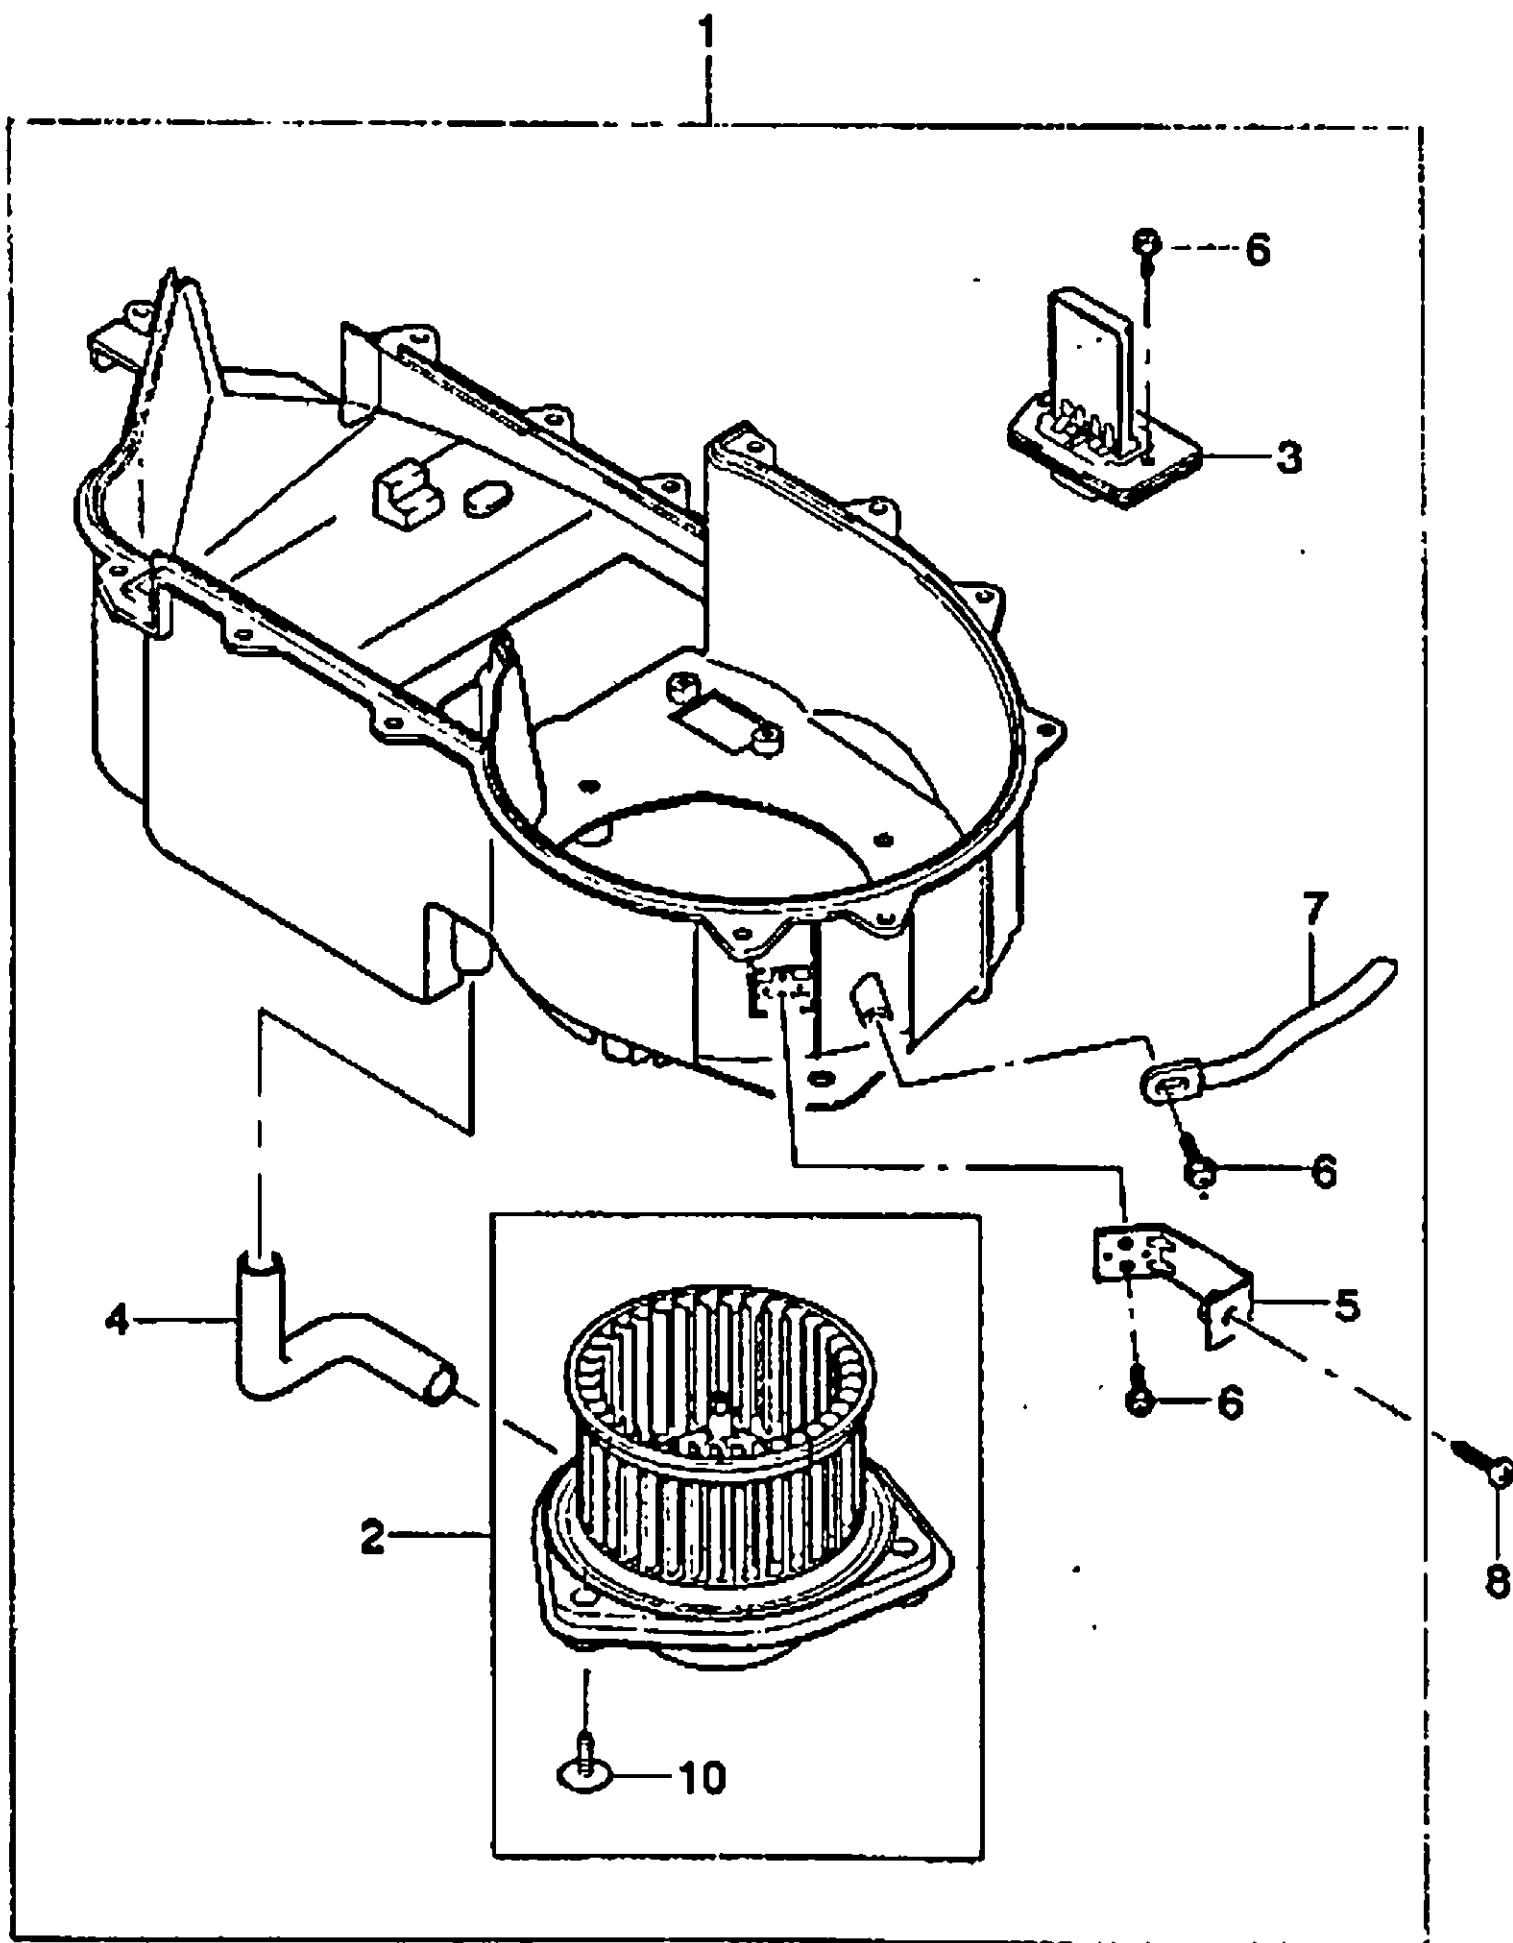

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[10] 611983	(E)SCREW (D)SCHRAUBE . .		B	B	B	S	S	S		(F)VIS (S)TORNILLO 3					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

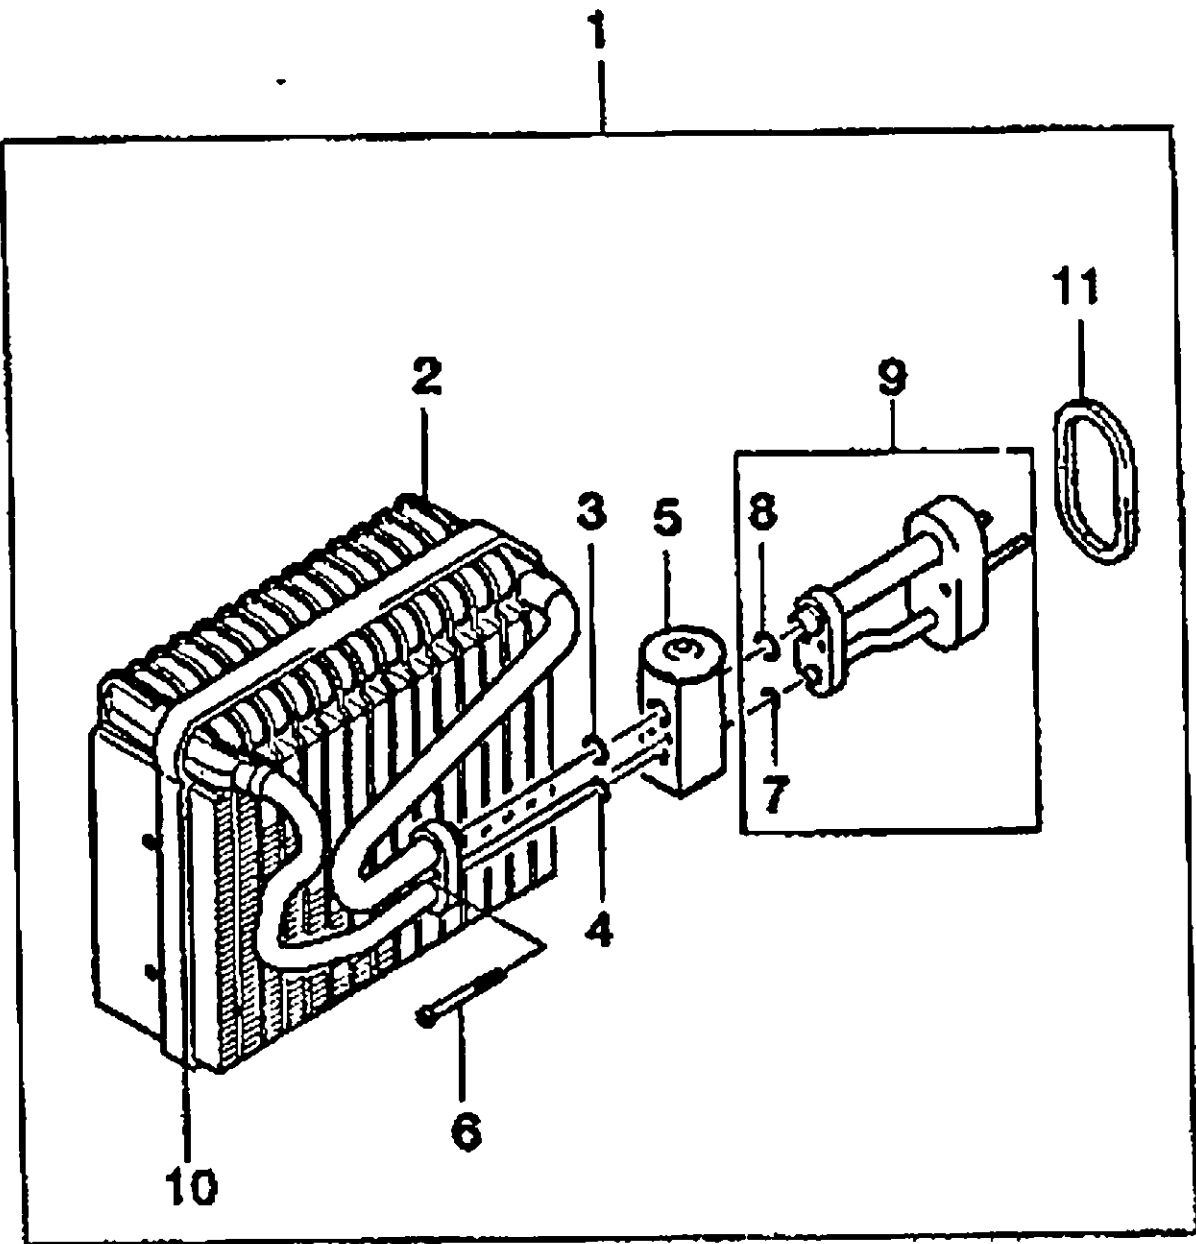


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S								S S
	[01]	(E)EVAPORATER A (D)VERDAMPFER								(F)EVAPORATEUR (S)EVAPORADOR					
	612122	. . B B B O O O &C59/C60								1					
	[02]	(E)CORE A-EVAPORATOR (D)GEHÄUSE VERDAMPFER								(F)NOYAU-EVAPORATEUR (S)NUCLEO-EVAPORADOR					
	612220	. . B B B O O O &C59/C60								1					
	[03]	(E)ORING-EVAPORATOR OUTLET (D)O RING								(F)JOINT TORIQUE (S)ANILLO EN O					
	3094215	. . B B B O O O &C59/C60								1					
	[04]	(E)ORING-EVAPORATOR INLET (D)O RING								(F)JOINT TORIQUE (S)ANILLO EN O					
	3094214	. . B B B O O O &C59/C60								1					
	[05]	(E)VALVE-THERMOSTATIC EXPANS (D)VENTIL								(F)SOUPAPE (S)VALVULA					
	96190670	. . B B B O O O &C59/C60								1					
	[06]	(E)BOLT (D)SCHRAUBE								(F)BOULON (S)PERNO					
	600098	. . B B B O O O &C59/C60								1					
	[07]	(E)ORING-DASH INLET (D)O RING								(F)JOINT TORIQUE (S)ANILLO EN O					
	3093509	. . B B B O O O &C59/C60								1					
	[08]	(E)ORING-DASH OUTLET (D)O RING								(F)JOINT TORIQUE (S)ANILLO EN O					
	3094215	. . B B B O O O &C59/C60								1					
	[09]	(E)FITTING&PIPE A-IN/OUT (D)BEFESTIGUNG								(F)MONTAGE (S)TUBERIA ENTRADA-SALIDA					
	612210	. . B B B O O O &C59/C60								1					
	[10]	(E)SEAL-EVAPORATOR (D)DICHTUNG								(F)JOINT (S)SELLO					
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

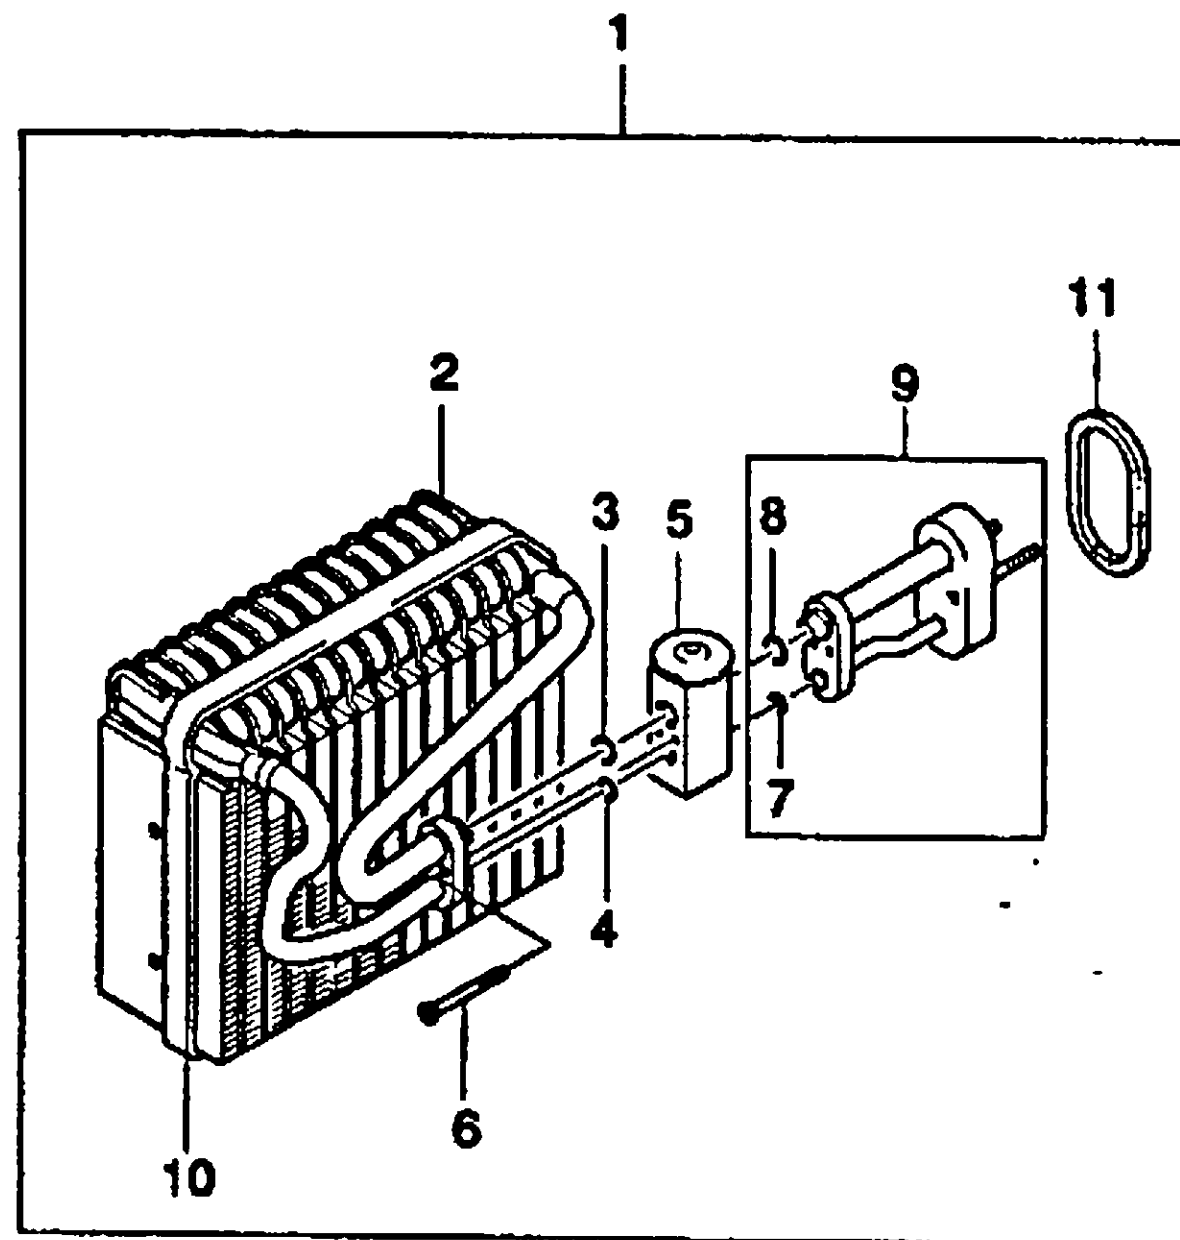


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	612054 [11] 612463	. .	B B B	O O O	&C59/C60					1 (F)JOINT (S)SELLO 1						


ENG(ENGINE)	T/A(TRANSAXLE)	BODY TYPE
Y = 1.5SOHC B = 1.6DOHC . = COMMON	M = MANUAL T/A A = AUTOMATIC T/A . = COMMON	4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK

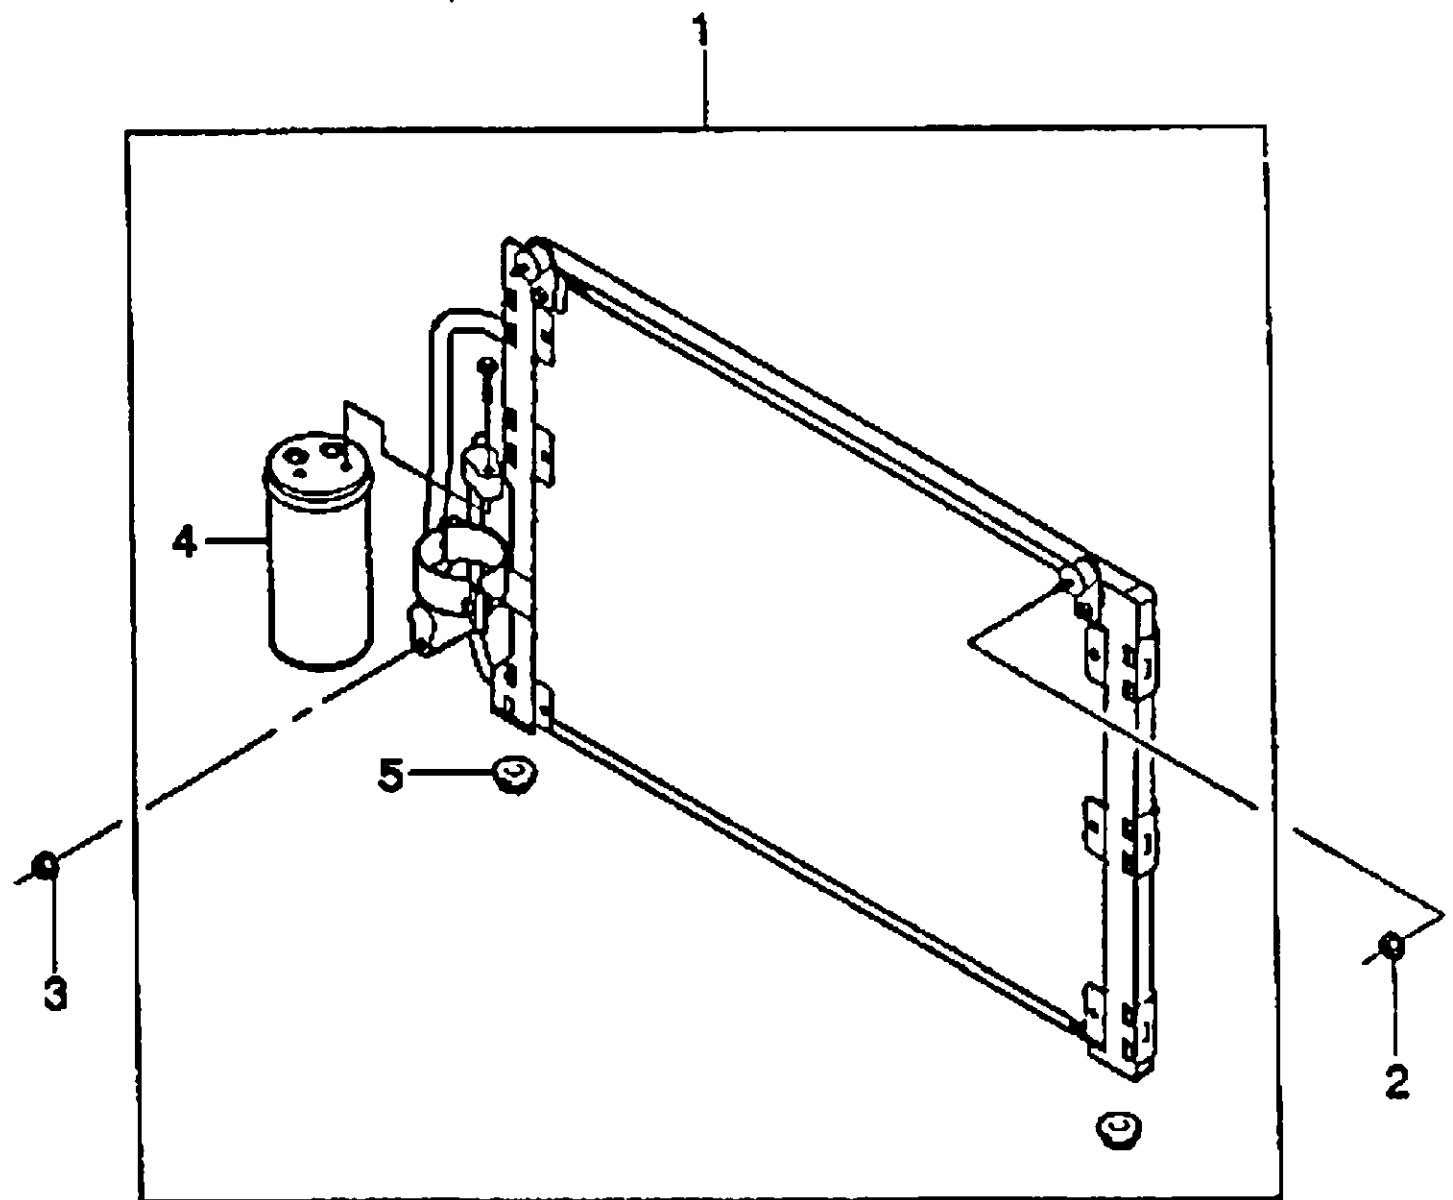


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S	S E								S X
	{01}	(E)CONDENSER A (D)KONDENSATOR										(F)CONDENSATEUR (S)CONDENSADOR			K1	
	96303204	.	.	B	B	B	O	O	O	&C60	1					
	{02}	(E)NUT (D)MUTTER										(F)ECROU (S)TUERCA				
	09159-06011	.	.	B	B	B	O	O	O	&C60	2					
	{03}	(E)NUT-HEXAGON (D)MUTTER										(F)ECROU (S)TUERCA				
	08310-12083	.	.	B	B	B	O	O	O	&C60	1					
	{04}	(E)DRYER-RECEIVER (D)FILTERTROCKNER										(F)RECEVEUR SEC (S)BOTELLA SECADORA				
	96225633	.	.	B	B	B	O	O	O	&C60	1					
	{05}	(E)GROMMET (D)ÓSE										(F)VIROLE (S)AISLANTE				
	09308-06006	.	.	B	B	B	O	O	O	&C60	2					
ENG(ENGINE)		T/A(TRANSAXLE)							BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON							4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

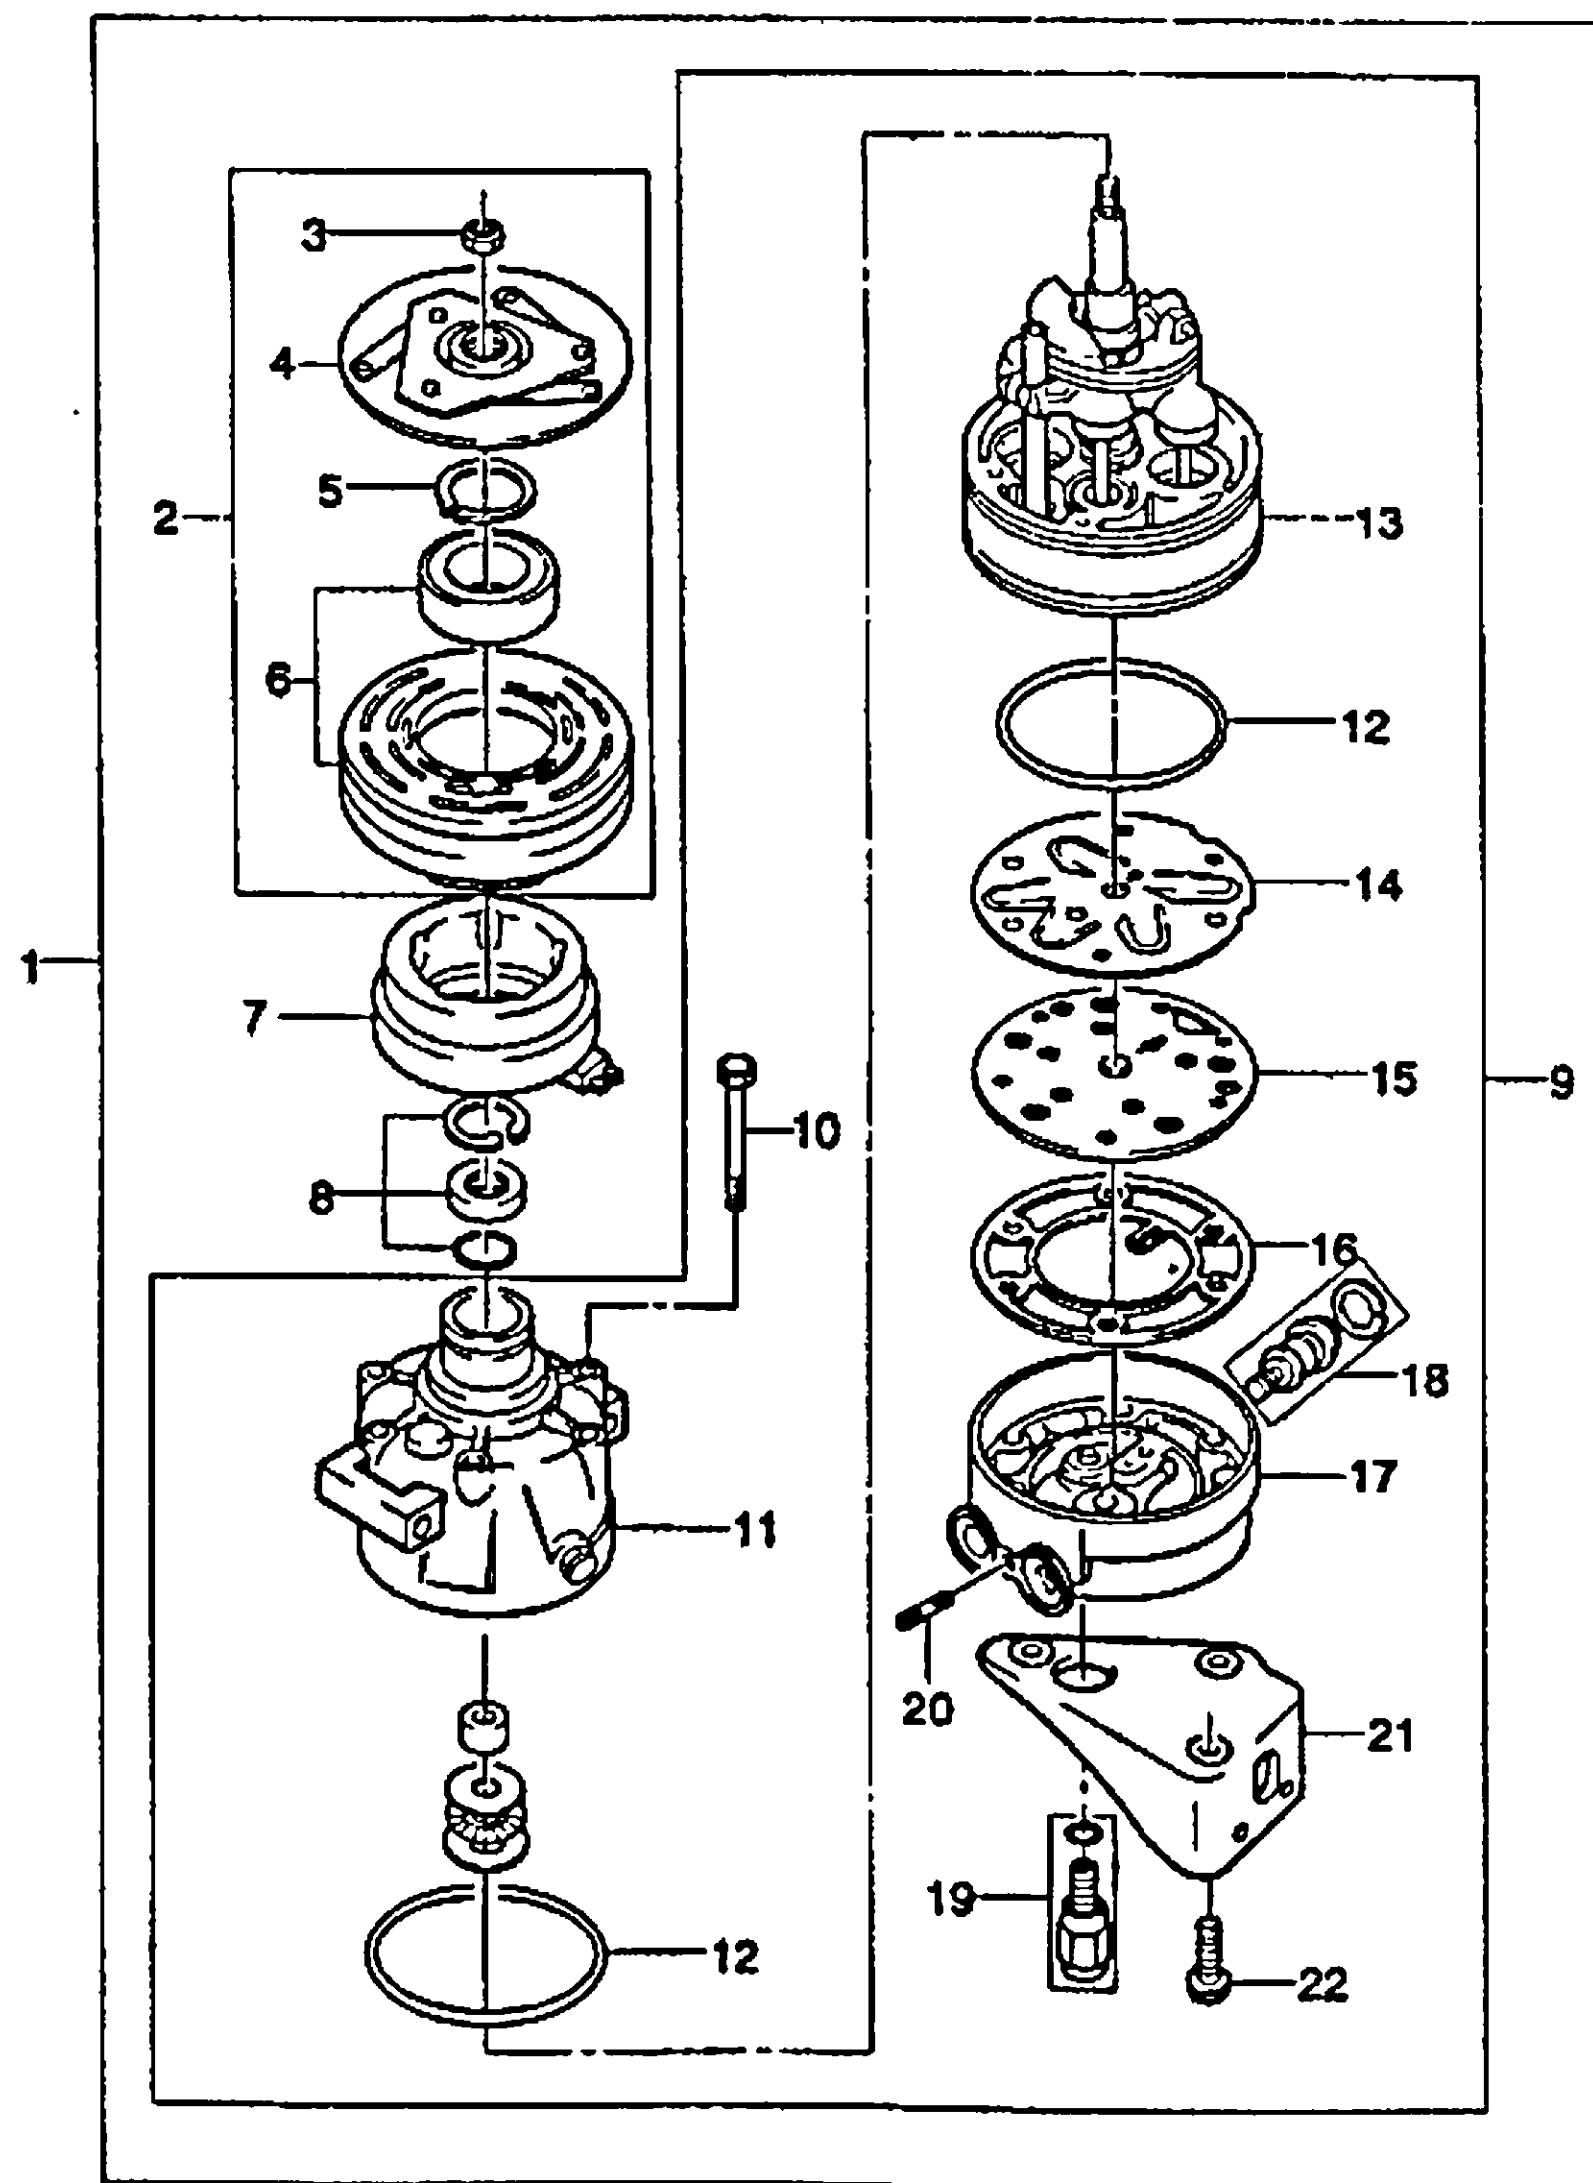


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	X
	[01]	(E)COMPRESSOR A (D)KOMPRESSOR									(F)COMPRESSEUR (S)COMPRESOR					
	96245943	. . B B B O O O					&C60			1	870715			KA		
N	96255980	. . B B B O O O					&C60			1	970715			KC		
	[02]	(E)CLUTCH&PULLEY KIT (D)KUPPLUNG&ROLLE SATZ									(F)TROUSSE EMBRAYAGE&POULIE (S)EMBRAGUE-& POLEA,JUEGO					
	NP1072	. . B B B O O O					&C60			1						
	[03]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA					
	6557414	. . B B B O O O					&C60			1						
	[04]	(E)DRIVE A-CLUTCH (D)ANTRIEB,KUPPLUNG									(F)ENTRAINEMENT-EMBRAYAGE (S)IMPULSADOR-EMBRAGUE					
	713402	. . B B B O O O					&C60			1						
	[05]	(E)RING-RETAINING (D)RING,HALTER									(F)ANNEAU-DE RETENTION (S)ANILLO-RETENEDOR					
	6557617	. . B B B O O O					&C60			1						
	[06]	(E)PULLEY&BEARING A (D)ROLLE&LAGER									(F)POULIE&ROULEMENT (S)POLEA Y COJINETE					
	713833	. . B B B O O O					&C60			1						
	[07]	(E)COIL&HOUSING A (D)WICKLUNG&LAGER									(F)BOBINE&ROULEMENT (S)BOBINA Y COJINETE					
	714142	. . B B B O O O					&C60			1						
	[08]	(E)LOCK&SLEEVE KIT (D)SCHLOß&HÜLSE SATZ									(F)TROUSSE VERROU&MANCHON (S)CERRADURA Y MANGA					
	713650	. . B B B O O O					&C60			1						
	[09]	(E)COMPRESSOR SUB A (D)KOMPRESSOR UNTER									(F)COMPRESSEUR SUB (S)COMPRESOR SUB					
	714144	. . B B B O O O					&C60			1						
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

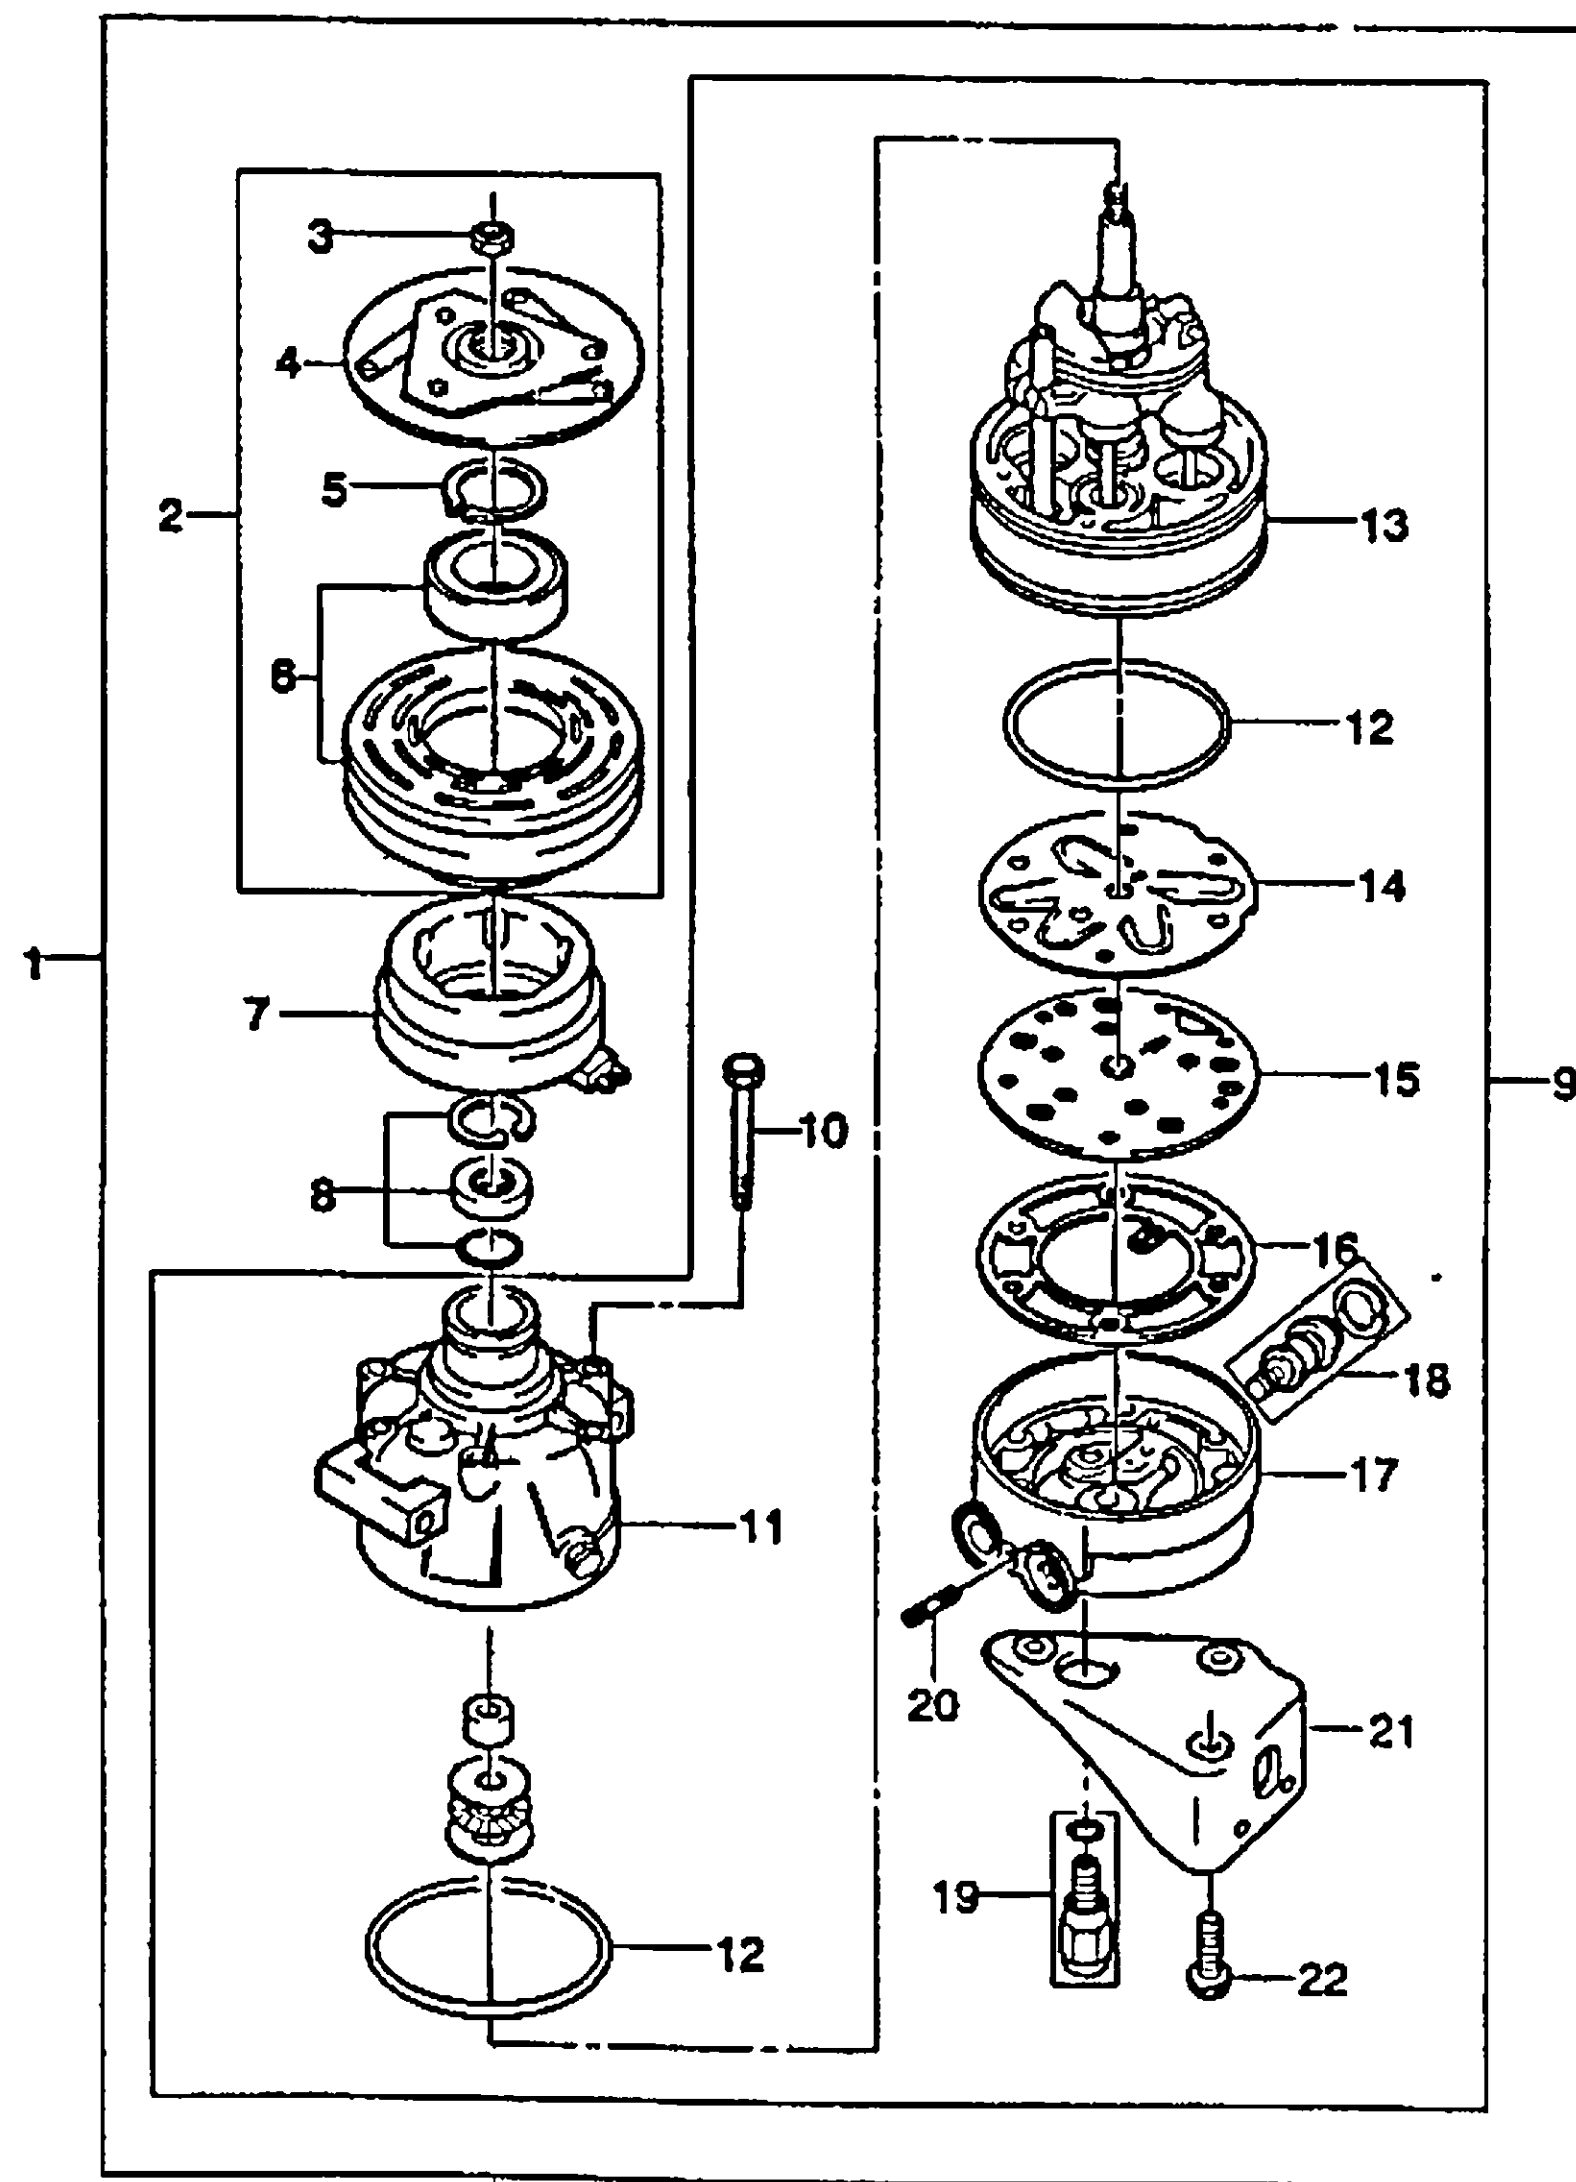


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S E	S X
	[10] 713247	(E)BOLT (D)SCHRAUBE . . . B B B O O O &C60								(F)BOULON (S)PERNO 6						
	[11] N/S(9)	(E)HEAD-FRONT (D)KOPF,VORNE								(F)CULASSE-AVANT (S)CABEZA-FRENTE						
	[12] 6557662	(E)O RING-FRT HEAD CYLINDER (D)O RING,VORDERER KOPF . . . B B B O O O &C60								(F)JOINT TORIQUE (S)ANILLO EN O 2						
	[13] N/S(9)	(E)CYLINDER-SHAFT&GUIDE PIN (D)ZYLINDER								(F)CYLINDRE-AXE&BROCHE GUIDE (S)CILINDRO						
	[14] 6559801	(E)REED-SUCTION (D)ROHR ANSAUGUNG . . . B B B O O O &C60								(F)ANCHE D'ASPIRATION (S)CAÑA-SUCCION 1						
	[15] 6553562	(E)PLATE-VALVE (D)PLATTE,VENTIL . . . B B B O O O &C60								(F)PLAQUE-SOUPAPE (S)PLACA-VALVULA 1						
	[16] 6559755	(E)GASKET-HEAD (D)DICHTUNG,KOPF . . . B B B O O O &C60								(F)JOINT-CULASSE (S)JUNTA-CABEZA 1						
	[17] N/S(9)	(E)HEAD-REAR (D)KOPF,HINTER O O O								(F)CULASSE-ARRIERE (S)CABEZA-TRASERA						
	[18] 5110156	(E)VALVE KIT-CONTROL (D)VENTIL SATZ,STEUERUNG . . . B B B O O O &C60								(F)TROUSSE DE SOUPAPE (S)JUEGO DE VALVULA-CONTROL 1						
	[19]	(E)VALVE-HIGH PRESSURE RELIF (D)VENTIL,HOCHDRUCK LÖSUNG								(F)SOUPAPE (S)VALVULA						
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

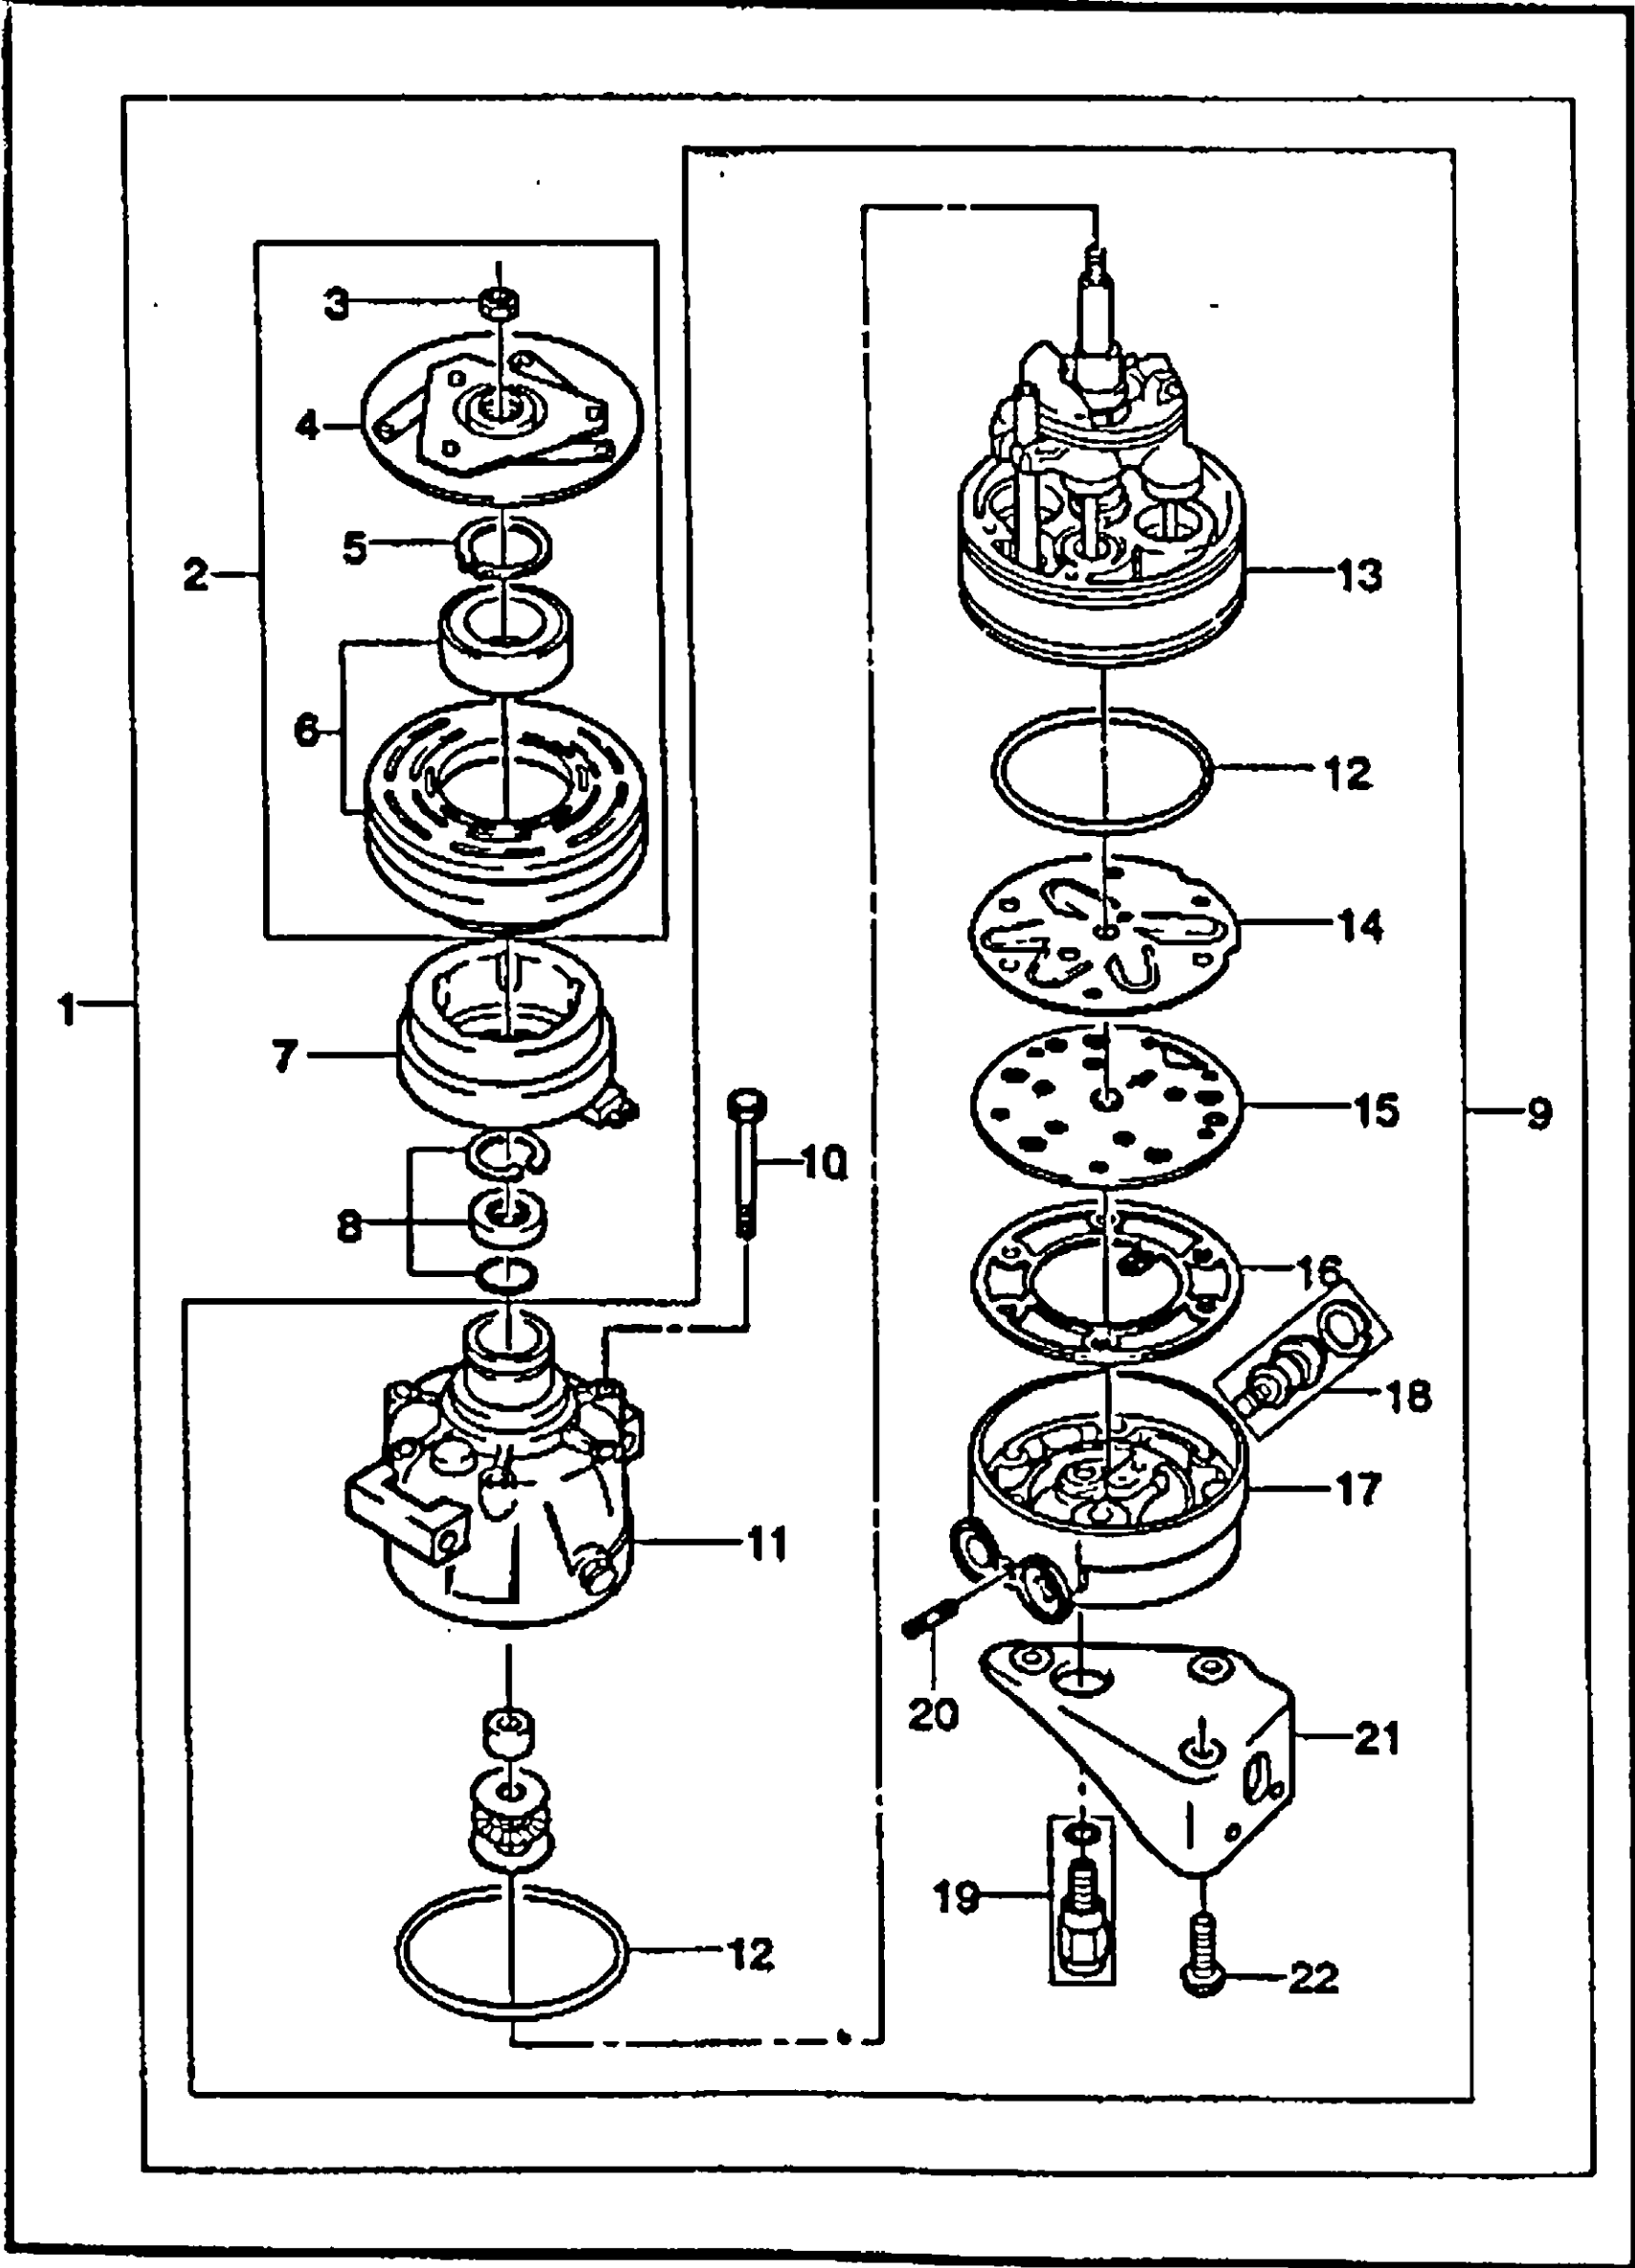


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	6552743	.	.	B	B	B	O	O	O	&C60	1					
	[20]										(F)BOULON-TETON					
											(S)PERNO-ESPIGA					
	6558459	.	.	B	B	B	O	O	O	&C60	1					
	[21]										(F)SUPPORT					
											(S)SOPORTE					
	96241910	.	.	B	B	B	O	O	O	&C60	1	970715				
	N 96255631	.	.	B	B	B	O	O	O	&C60	1	970715				
	[22]										(F)BOULON					
											(S)PERNO					
	713847	.	.	B	B	B	O	O	O	&C60	3					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

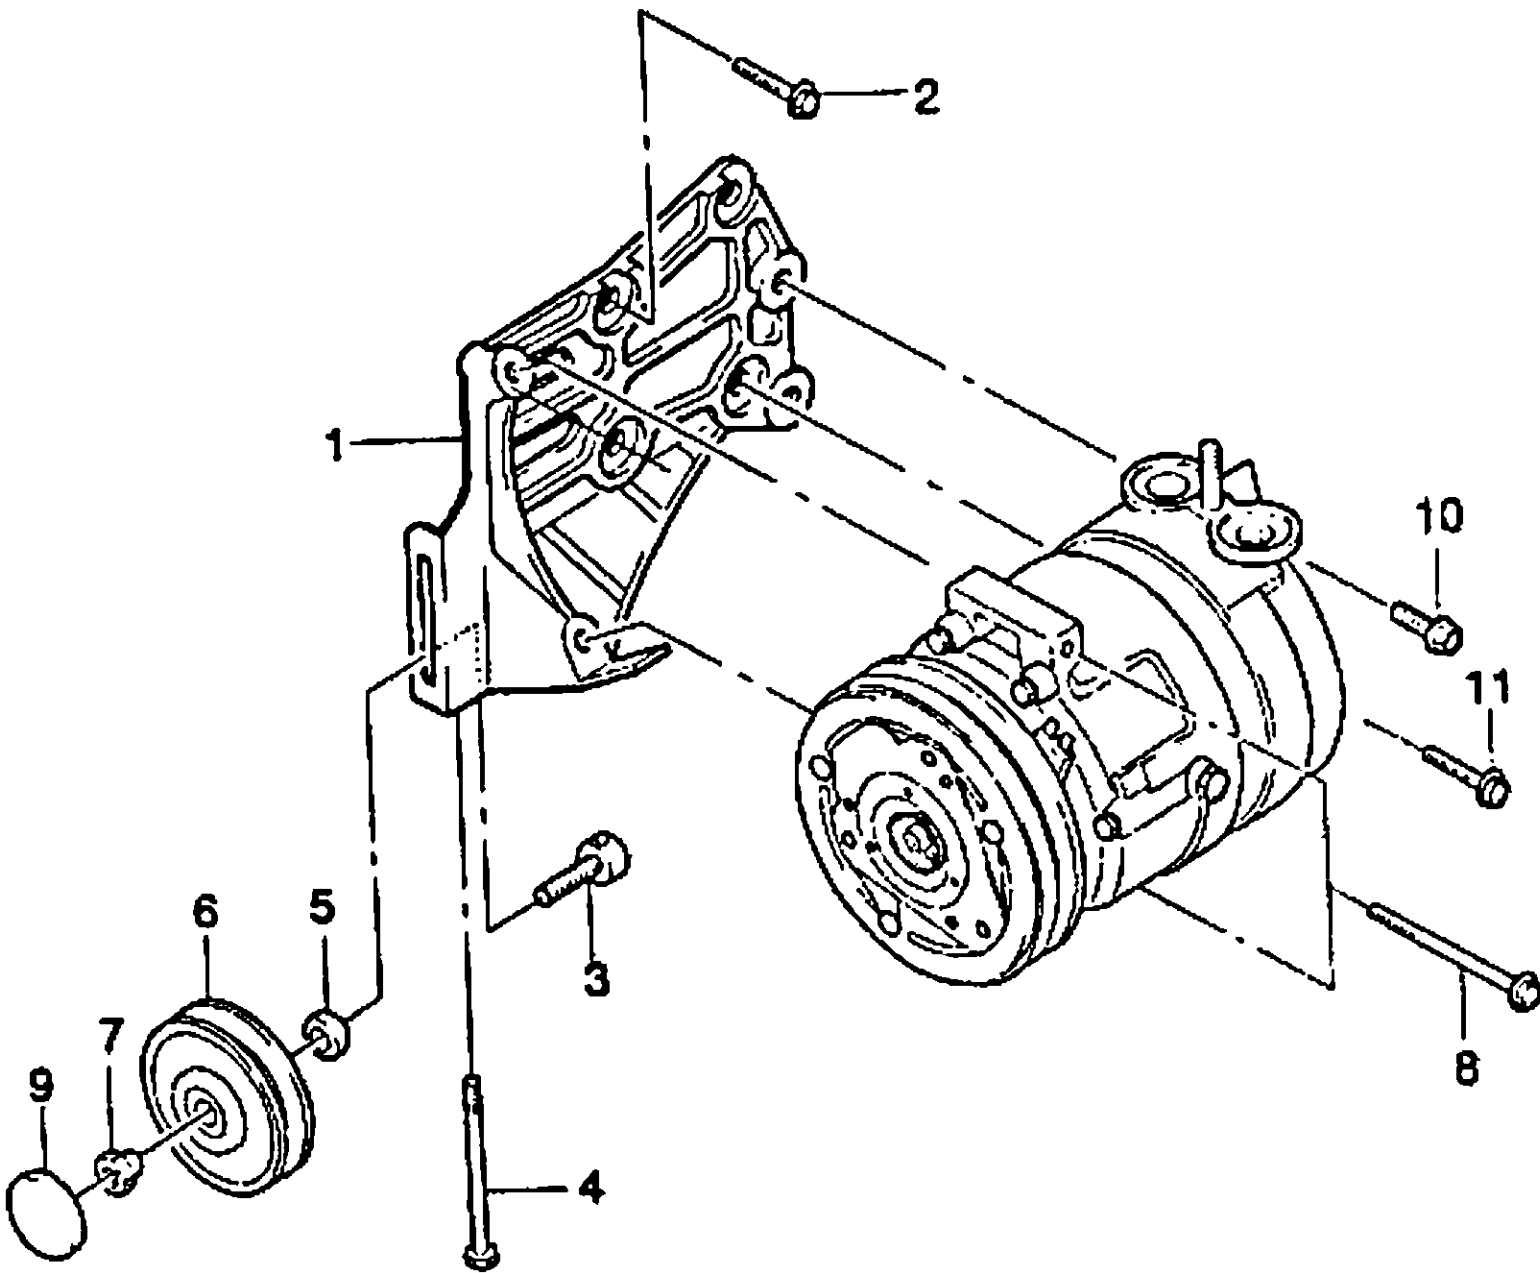


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N G	3 H A	5 H H	S S								S S	X
	[01]	(E)BRACKET-COMPRESSOR MAIN (D)TRÄGER,KOMPRESSOR									(F)SUPPORT-COMPRESSEUR (S)SOPORTE-COMPRESOR					
	96352039	1	.	B	B	B	O	O	O	&C60	1	970715				
N	96352642	1	.	B	B	B	O	O	O	&C60	1	970715				
	96352038	6	.	B	B	B	.	.	O	&C60	1	970715				
N	96352641	6	.	B	B	B	.	.	O	&C60	1	970715				
	[02]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE									(F)BOULON (S)PERNO					
	09103-10040	.	.	B	B	B	O	O	O	&C60	4	970715				
	09103-10040	.	.	B	B	B	O	O	O	&C60	3	970715				
	[03]	(E)PIECE-SLIDING (D)GLEIT-TEIL									(F)PIECE COULISSANTE (S)PIEZA DE DESLICE					
	96193361	.	.	B	B	B	O	O	O	&C60	1					
	[04]	(E)BOLT-HEXAGON (D)SCHRAUBE									(F)BOULON (S)PERNO					
	09117-08013	.	.	B	B	B	O	O	O	&C60	1	970901				
O	09100-08008	.	.	B	B	B	O	O	O	&C60	1	970901				
	[05]	(E)SPACER (D)Distanzstück									(F)ENTRETOISE (S)ESPACIADOR					
	96209433	.	.	B	B	B	O	O	O	&C60	1					
	[06]	(E)PULLEY A (D)ROLLE									(F)POULIE (S)POLEA					
	96208428	.	.	B	B	B	O	O	O	&C60	1					
	[07]	(E)NUT (D)MUTTER									(F)ECROU (S)TUERCA					
	09159-10001	.	.	B	B	B	O	O	O	&C60	1					
	[08]	(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE									(F)BOULON (S)PERNO					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

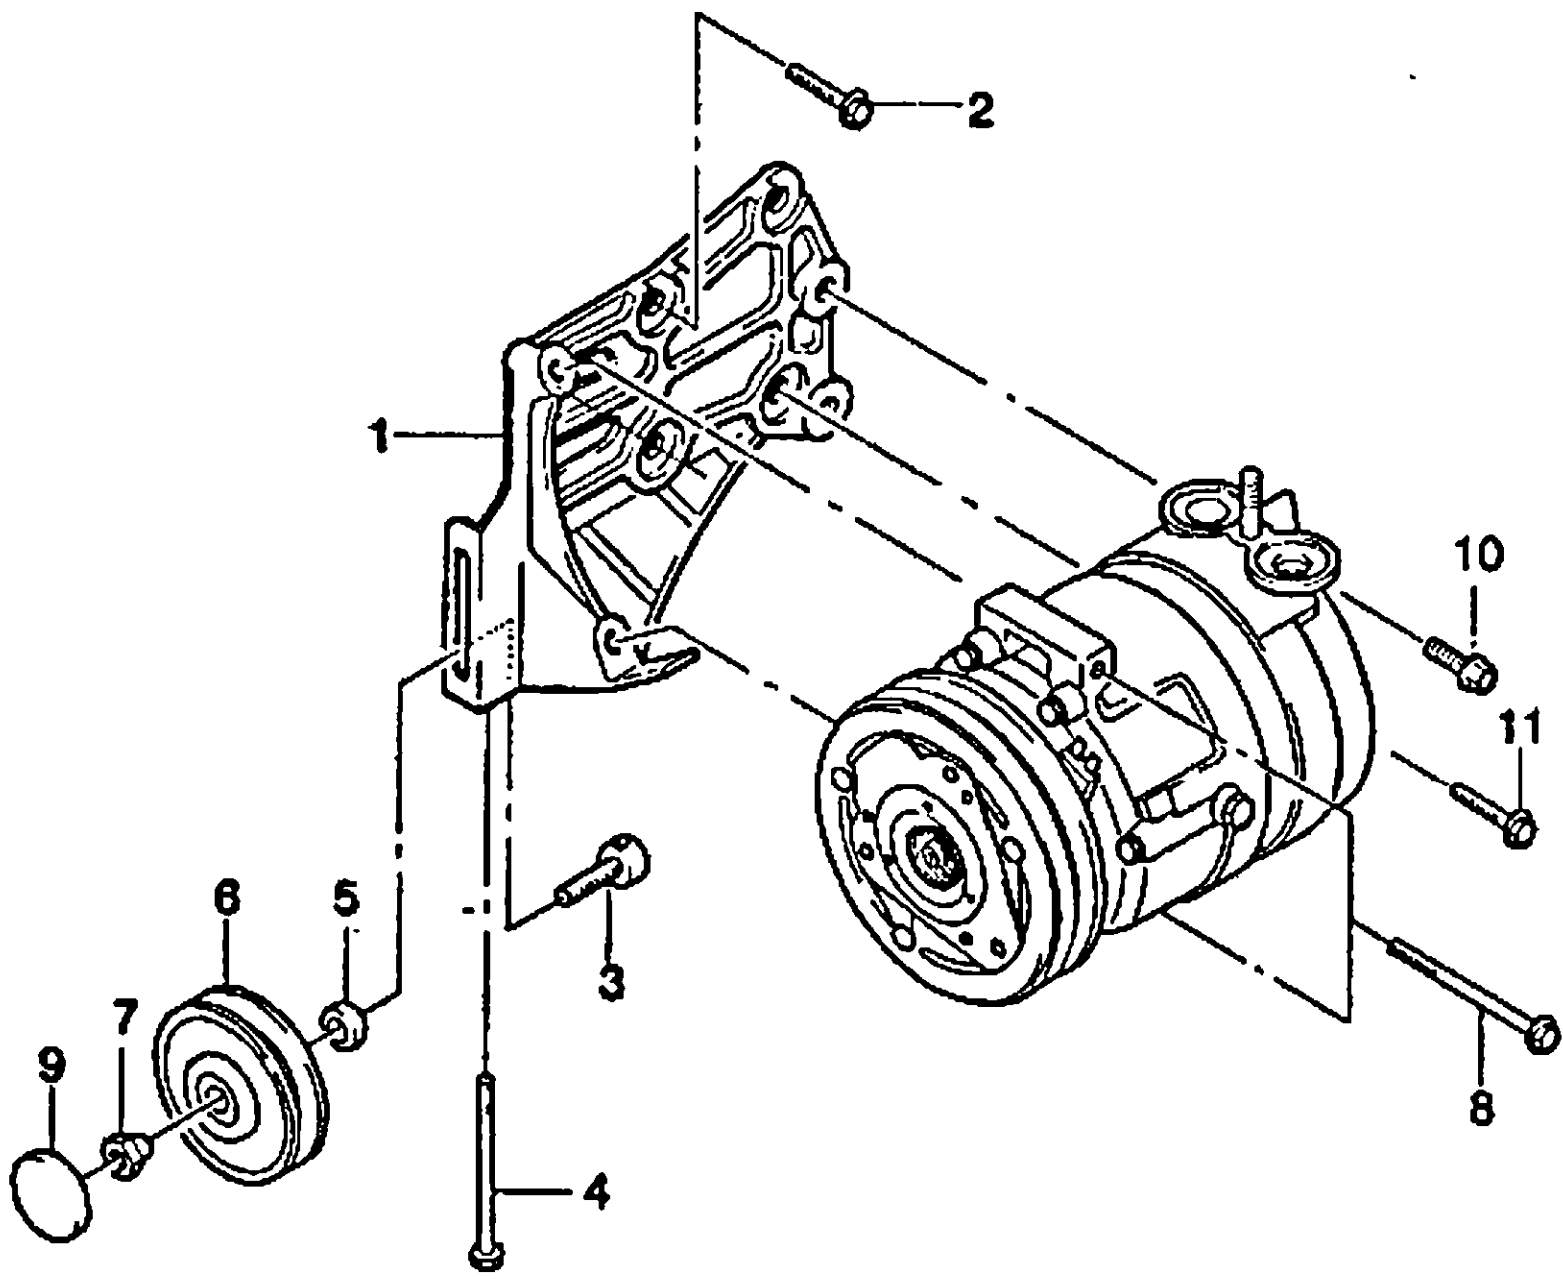

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	01517-08853 [09]	.	.	B	B	B	O	O	O	&C60	2			(E)COVER-DUST (D)STAUBDECKEL (F)COUVERTURE-POUSSIÈRE (S)CUBIERTA-POLVO		
	96187507 [10]	.	.	B	B	B	O	O	O	&C60	1			(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE (F)BOULON (S)PERNO		
	09103-08032 [11]	.	.	B	B	B	O	O	O	&C60	2			(E)BOLT-HEXAGON FLANGE (D)SCHRAUBE (F)BOULON (S)PERNO		
	09103-10061	.	.	B	B	B	O	O	O	&C60	1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

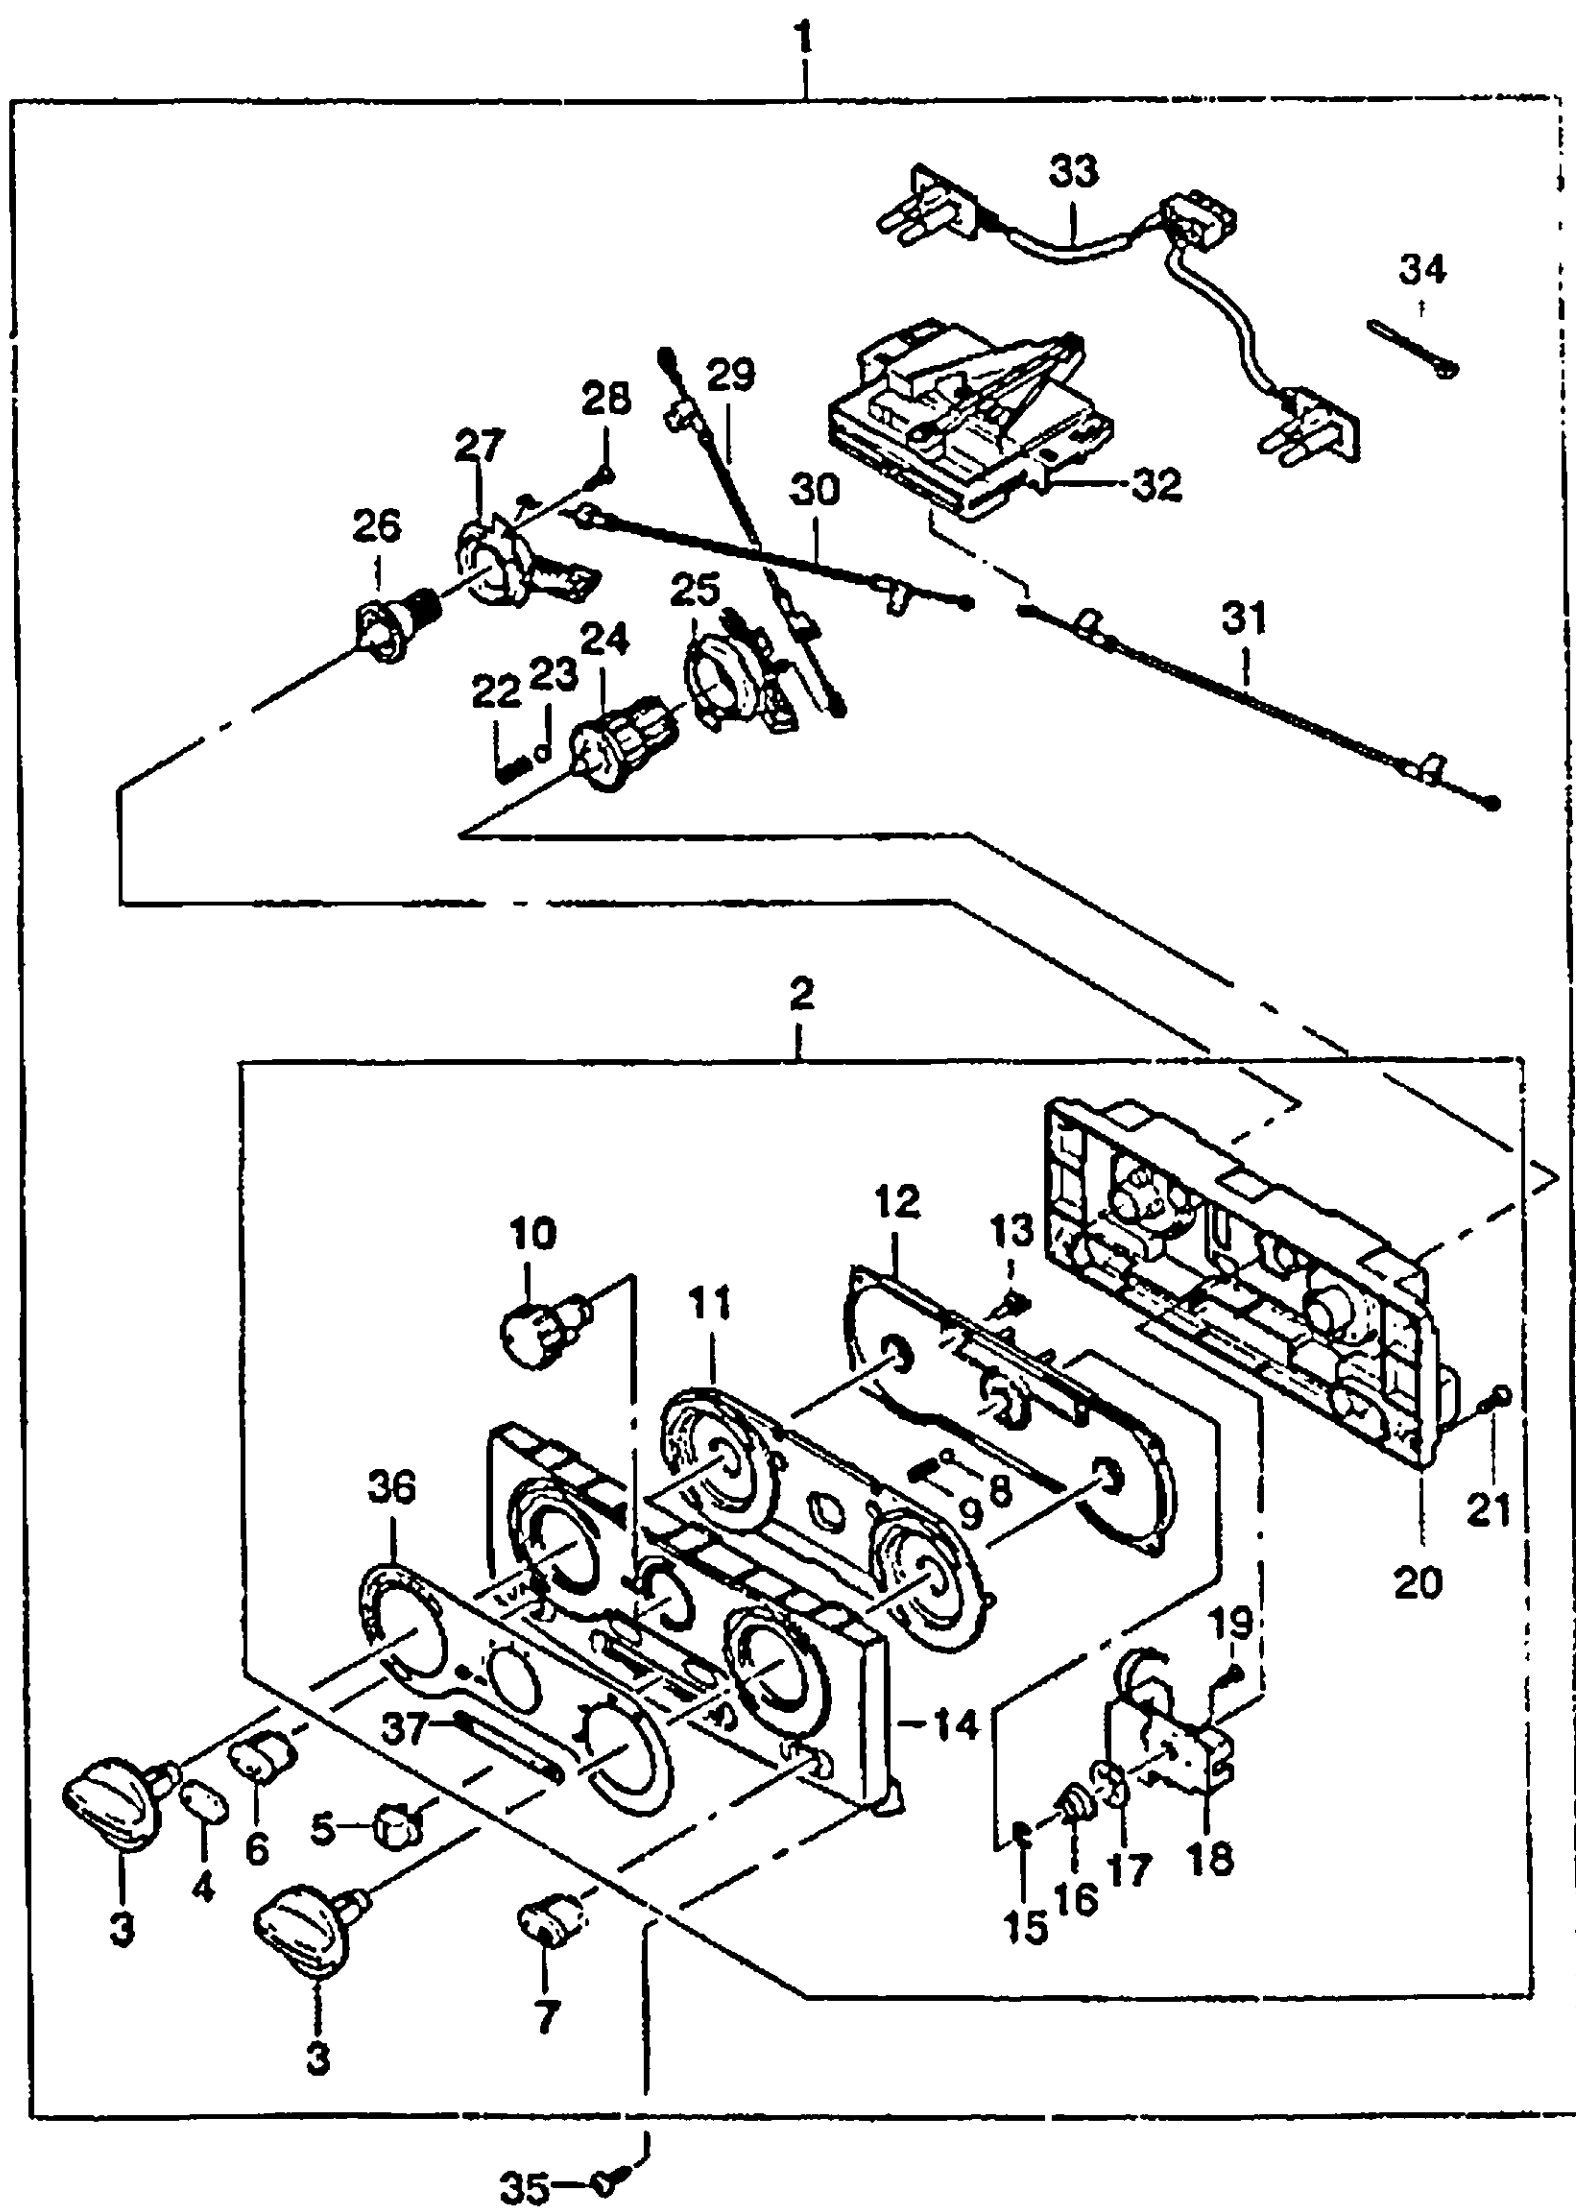


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / Q T Y R	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL			FROM	TO				
				4 N	3 H	5 H	S S S							S S S	S S S
	[01]	(E)SWITCH A-HEATER CONTROL (D)SCHALTER								(F)COMMUTATEUR (S)INTERRUPTOR					
	96242969	.	.	B	B	B	S	S	S	&C46	1		NJ		
	96242970	.	.	B	B	B	O	O	O	&C59/C60	1		NK		
	[02]	(E)PANEL A-FRONT (D)VERKLEIDUNG,VORNE								(F)PANNEAU-AVANT (S)PANEL-FRENTE					
	759189	.	.	B	B	B	S	S	S		1				
	[03]	(E)KNOB-TEMP.CONTROL (D)KNOPF								(F)BOUTON (S)PERILLA					
	759237	.	.	B	B	B	S	S	S		2				
	[04]	(E)COVER-BLANK (D)DECKEL								(F)COUVERCLE (S)CUBIERTA					
	159264	.	.	B	B	B	S	S	S	&C46	1				
	[05]	(E)KNOB-RECIRCULATION (D)KNOPF								(F)BOUTON (S)PERILLA					
	759203	.	.	B	B	B	S	S	S		1				
	[06]	(E)BUTTON A (D)KNOPF								(F)BOUTON (S)BOTON					
	759198	.	.	B	B	B	O	O	O	&C58/C60	1				
	[07]	(E)BUTTON-DEFROSTER (D)KNOPF								(F)BOUTON (S)BOTON					
	759199	.	.	B	B	B	S	S	S		1				
	[08]	(E)BALL-DETENT (D)KUGEL								(F)BOULE (S)BOLA					
	159102	.	.	B	B	B	S	S	S		1				
	[09]	(E)SPRING-BALL (D)FEDERUNG								(F)RESSORT (S)RESORTE					
	159245	.	.	B	B	B	S	S	S		1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							

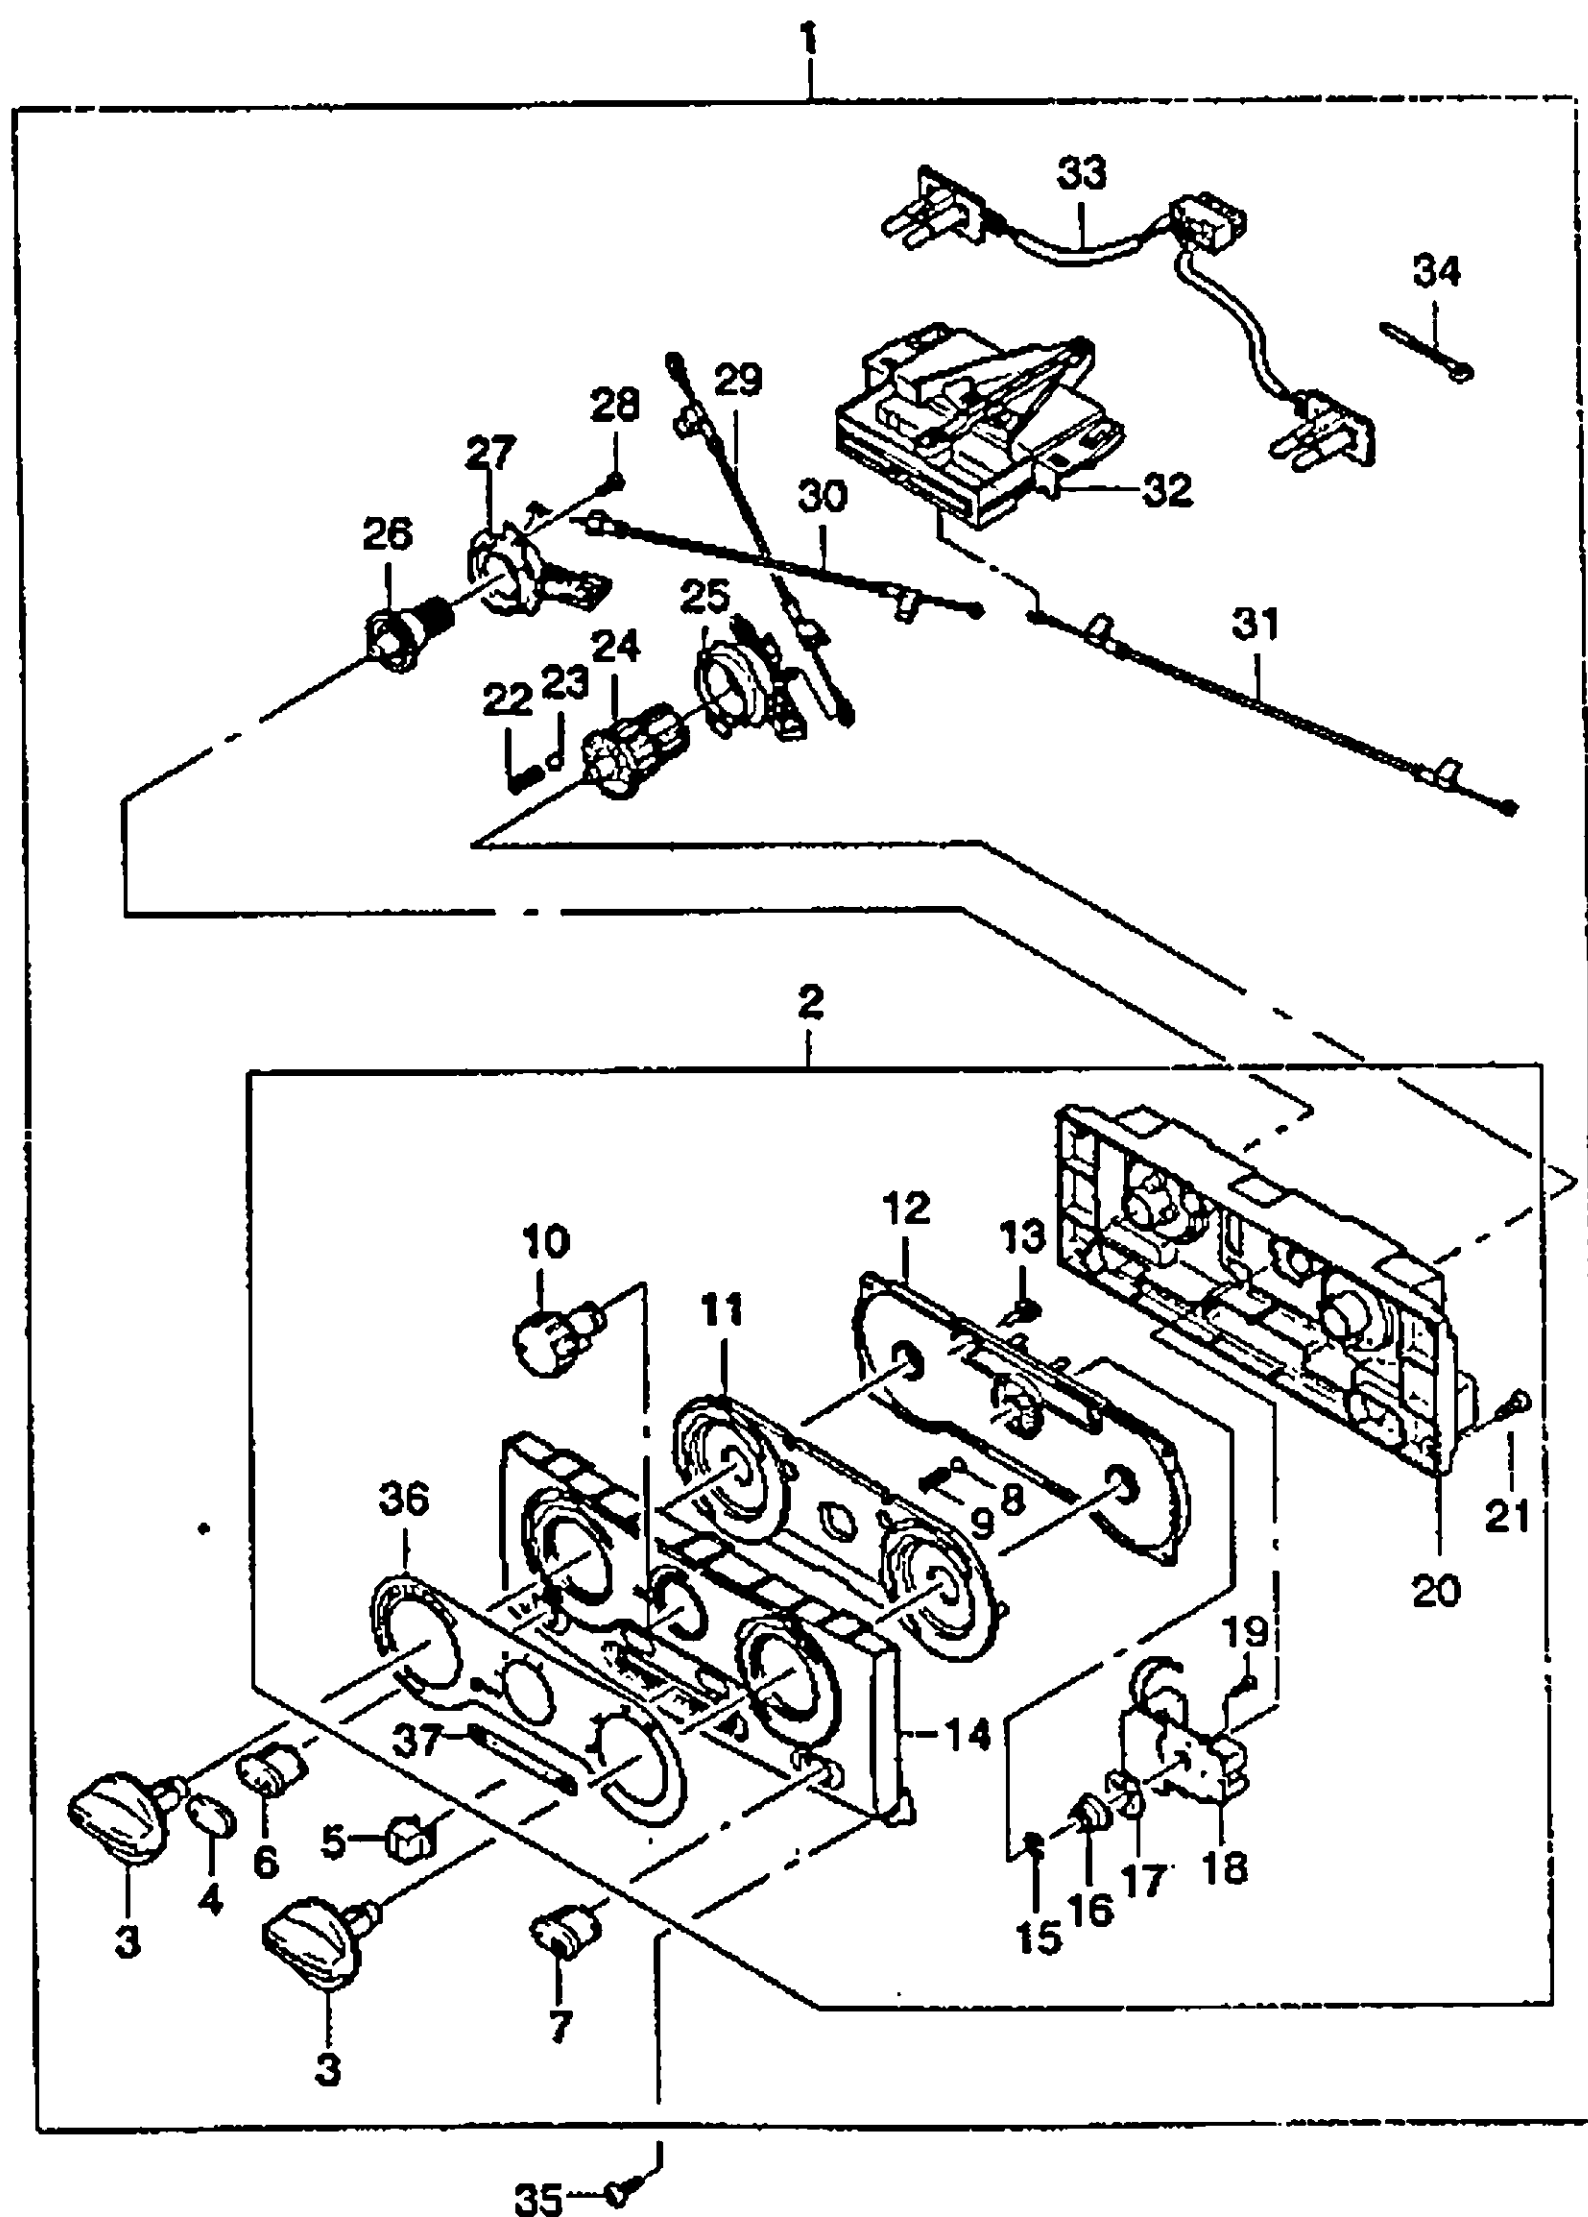


KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q / Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL				FROM	TO		
				4 N	3 H	5 H								
	[10]	(E)KNOB-BLOWER CONTROL (D)KNOPF								(F)BOUTON (S)PERILLA				
	759192	. . B B B S S S								1				
	[11]	(E)GUIDE-LIGHT (D)FUHRING								(F)GUIDE (S)GUIA				
	159241	. . B B B S S S								1				
	[12]	(E)BODY A-MAIN (D)KAROSSERIE								(F)CORPS (S)CARROCERIA				
	759190	. . B B B S S S								1				
	[13]	(E)BULBA (D)BIENE								(F)AMPOULE (S)BOMBILLA				
	759191	. . B B B S S S								2				
	[14]	(E)COVER-FRONT (D)DECKEL								(F)CARTER (S)CUBIERTA				
	159239	. . B B B S S S								1				
	[15]	(E)E-WASHER (D)DICHTUNGSRING								(F)RONDELLE (S)ARANDELA				
	159114	. . B B B S S S								1				
	[16]	(E)SPRING-CONICAL (D)FEDERUNG								(F)RESSORT (S)RESORTE				
	159105	. . B B B S S S								1				
	[17]	(E)CONTACTOR-MOVING (D)KONTAKTSTÜCK								(F)CONTACTEUR (S)CONTACTO				
	159106	. . B B B S S S								1				
	[18]	(E)BOARD A-CIRCUIT (D)PLATINE								(F)PLATINE (S)TABLA DE CIRCUITO				
	759194	. . B B B S S S								1				
	[19]	(E)SCREW (D)SCHRAUBE								(F)VIS (S)TORNILLO				
ENG(ENGINE)			T/A(TRANSAXLE)					BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON					4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

8350 AIR CONDITIONER CONTROL SWITCH

6J09

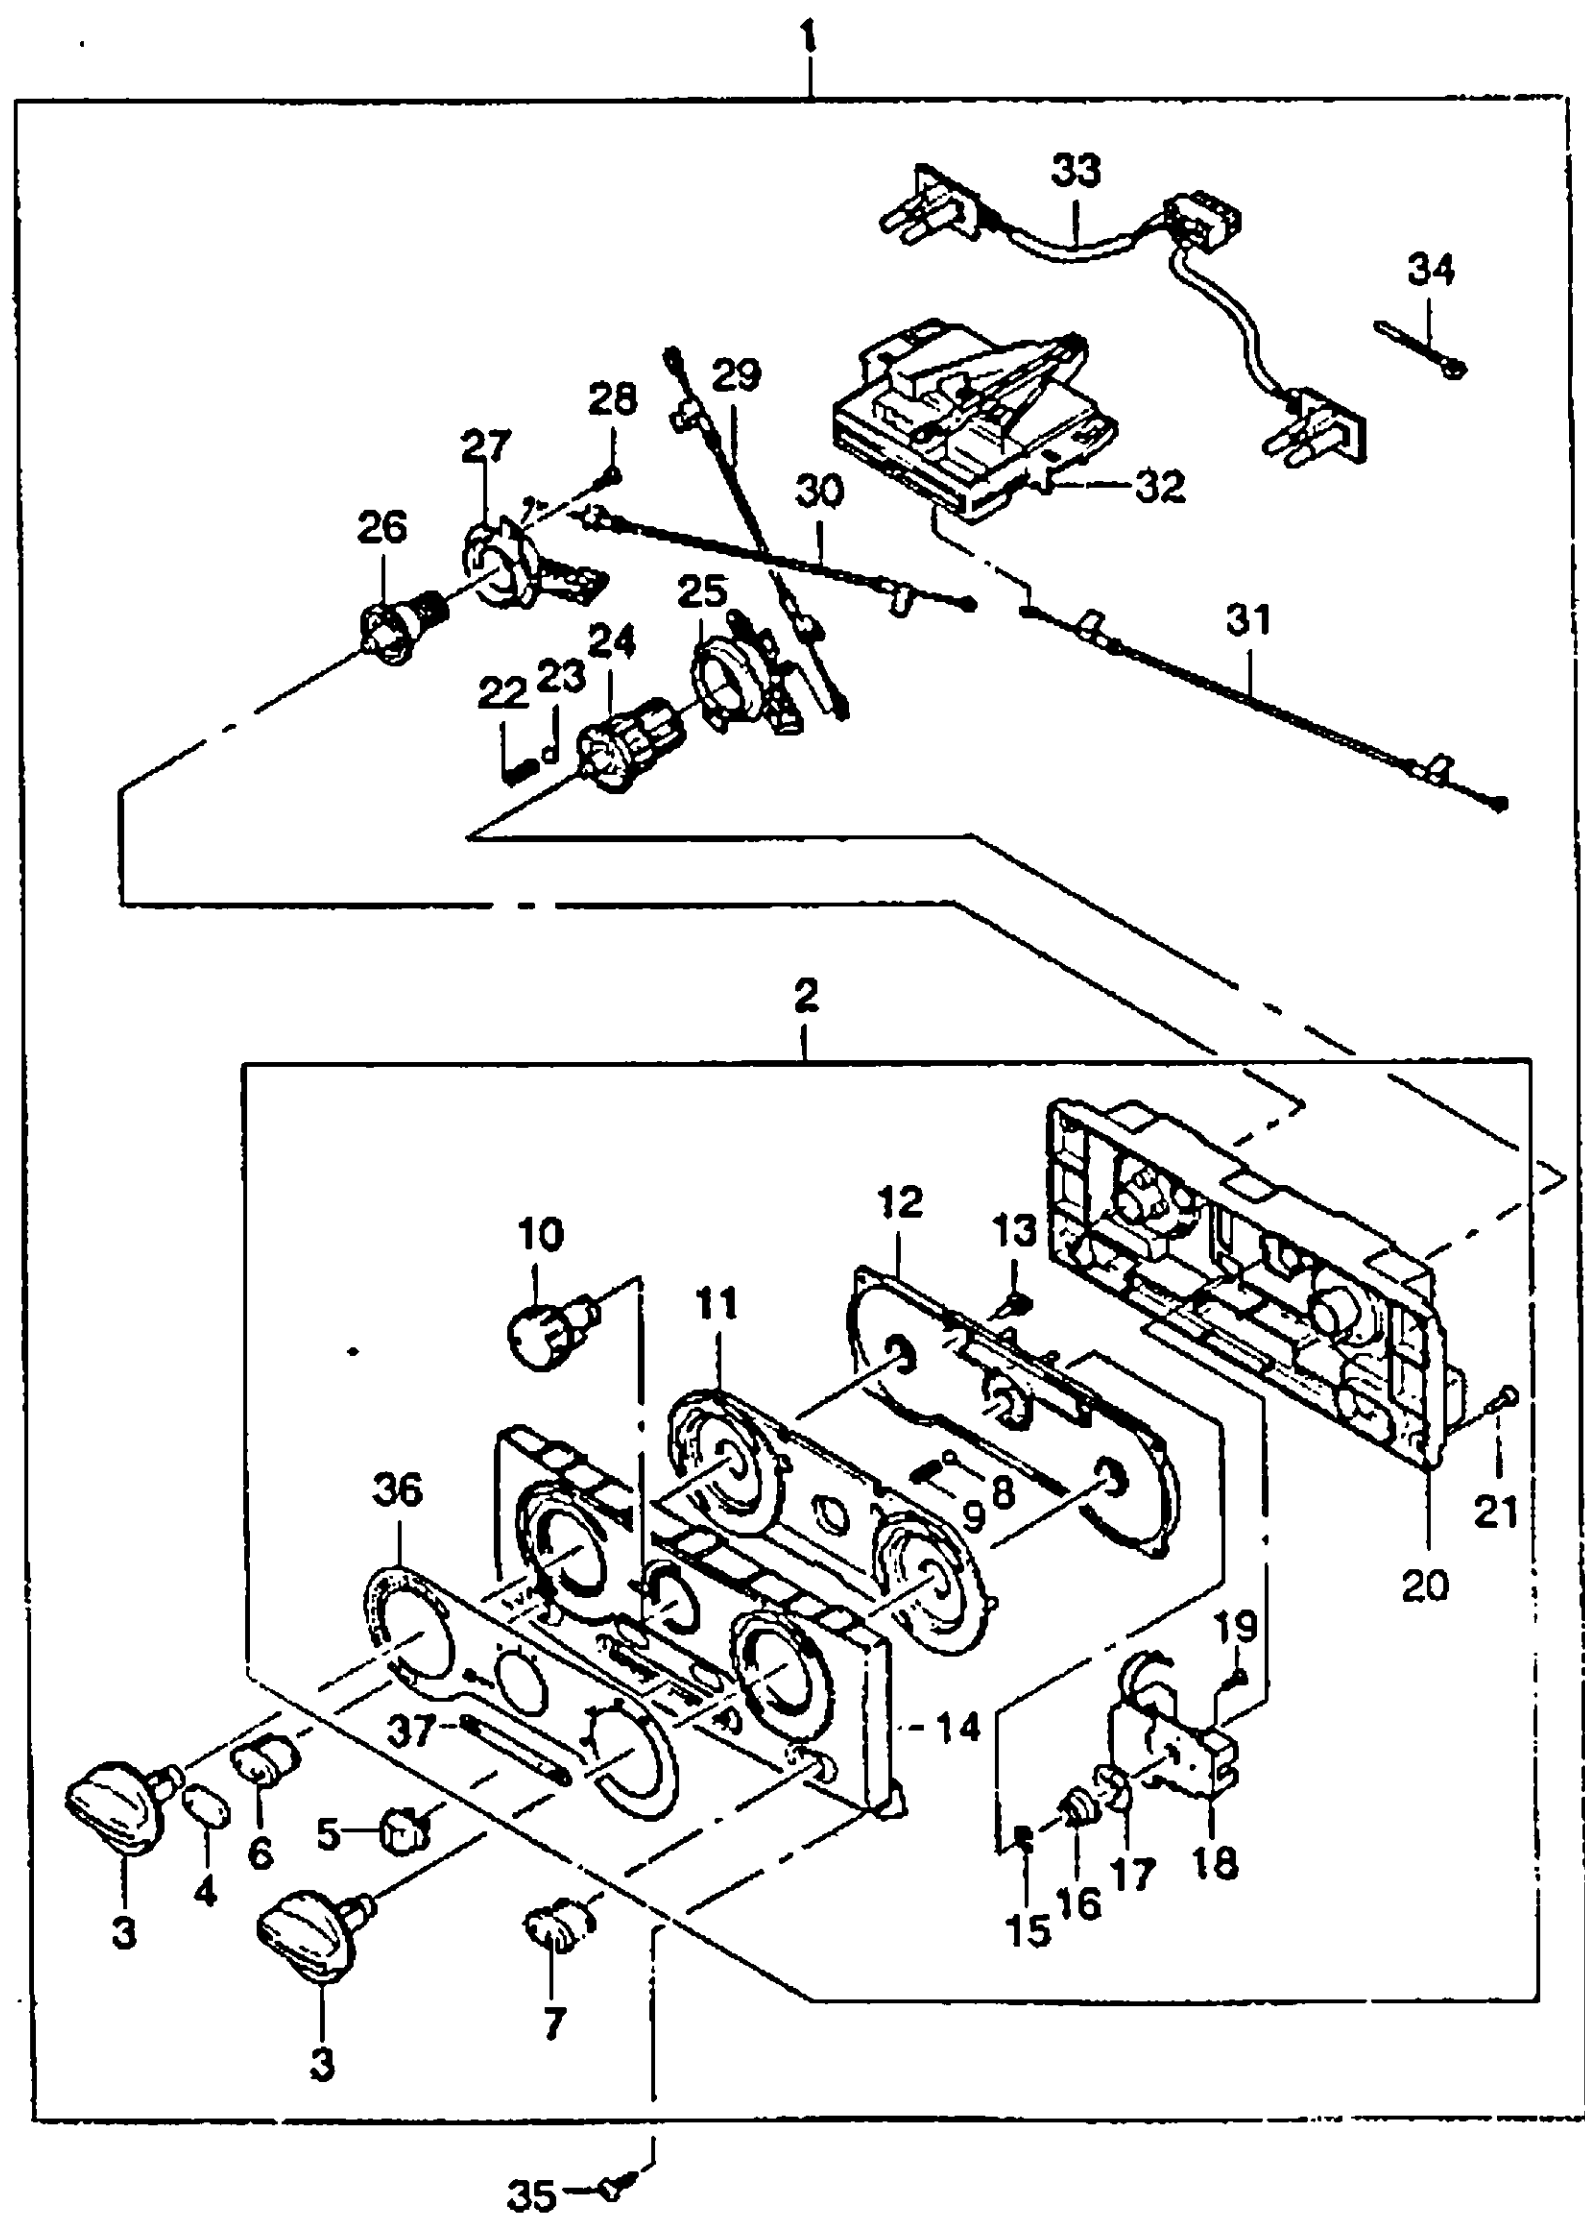


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S S								S S S	S S S
	155447 [20]	.	.	B	B	B	S	S	S		1 (F)CARTER (S)CUBIERTA					
	159233 [21]	.	.	B	B	B	S	S	S		1 (F)VIS (S)TORNILLO					
	159230 [22]	.	.	B	B	B	S	S	S		4 (F)RESSORT (S)RESORTE					
	159245 [23]	.	.	B	B	B	S	S	S		2 (F)BOULE (S)BOLA					
	159102 [24]	.	.	B	B	B	S	S	S		2 (F)PIGNON MODE (S)PINON					
	159246 [25]	.	.	B	B	B	S	S	S		1 (F)CONTROLE MODE (S)REJILLA					
	759195 [26]	.	.	B	B	B	S	S	S		1 (F)PIGNON (S)PIÑON					
	159103 [27]	.	.	B	B	B	S	S	S		1 (F)CONTROLE TEMPERATURE (S)REJILLA TEMPERATURA					
	759238 [28]	.	.	B	B	B	S	S	S		1 (F)VIS (S)TORNILLO					
	155424	.	.	B	B	B	S	S	S		4					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

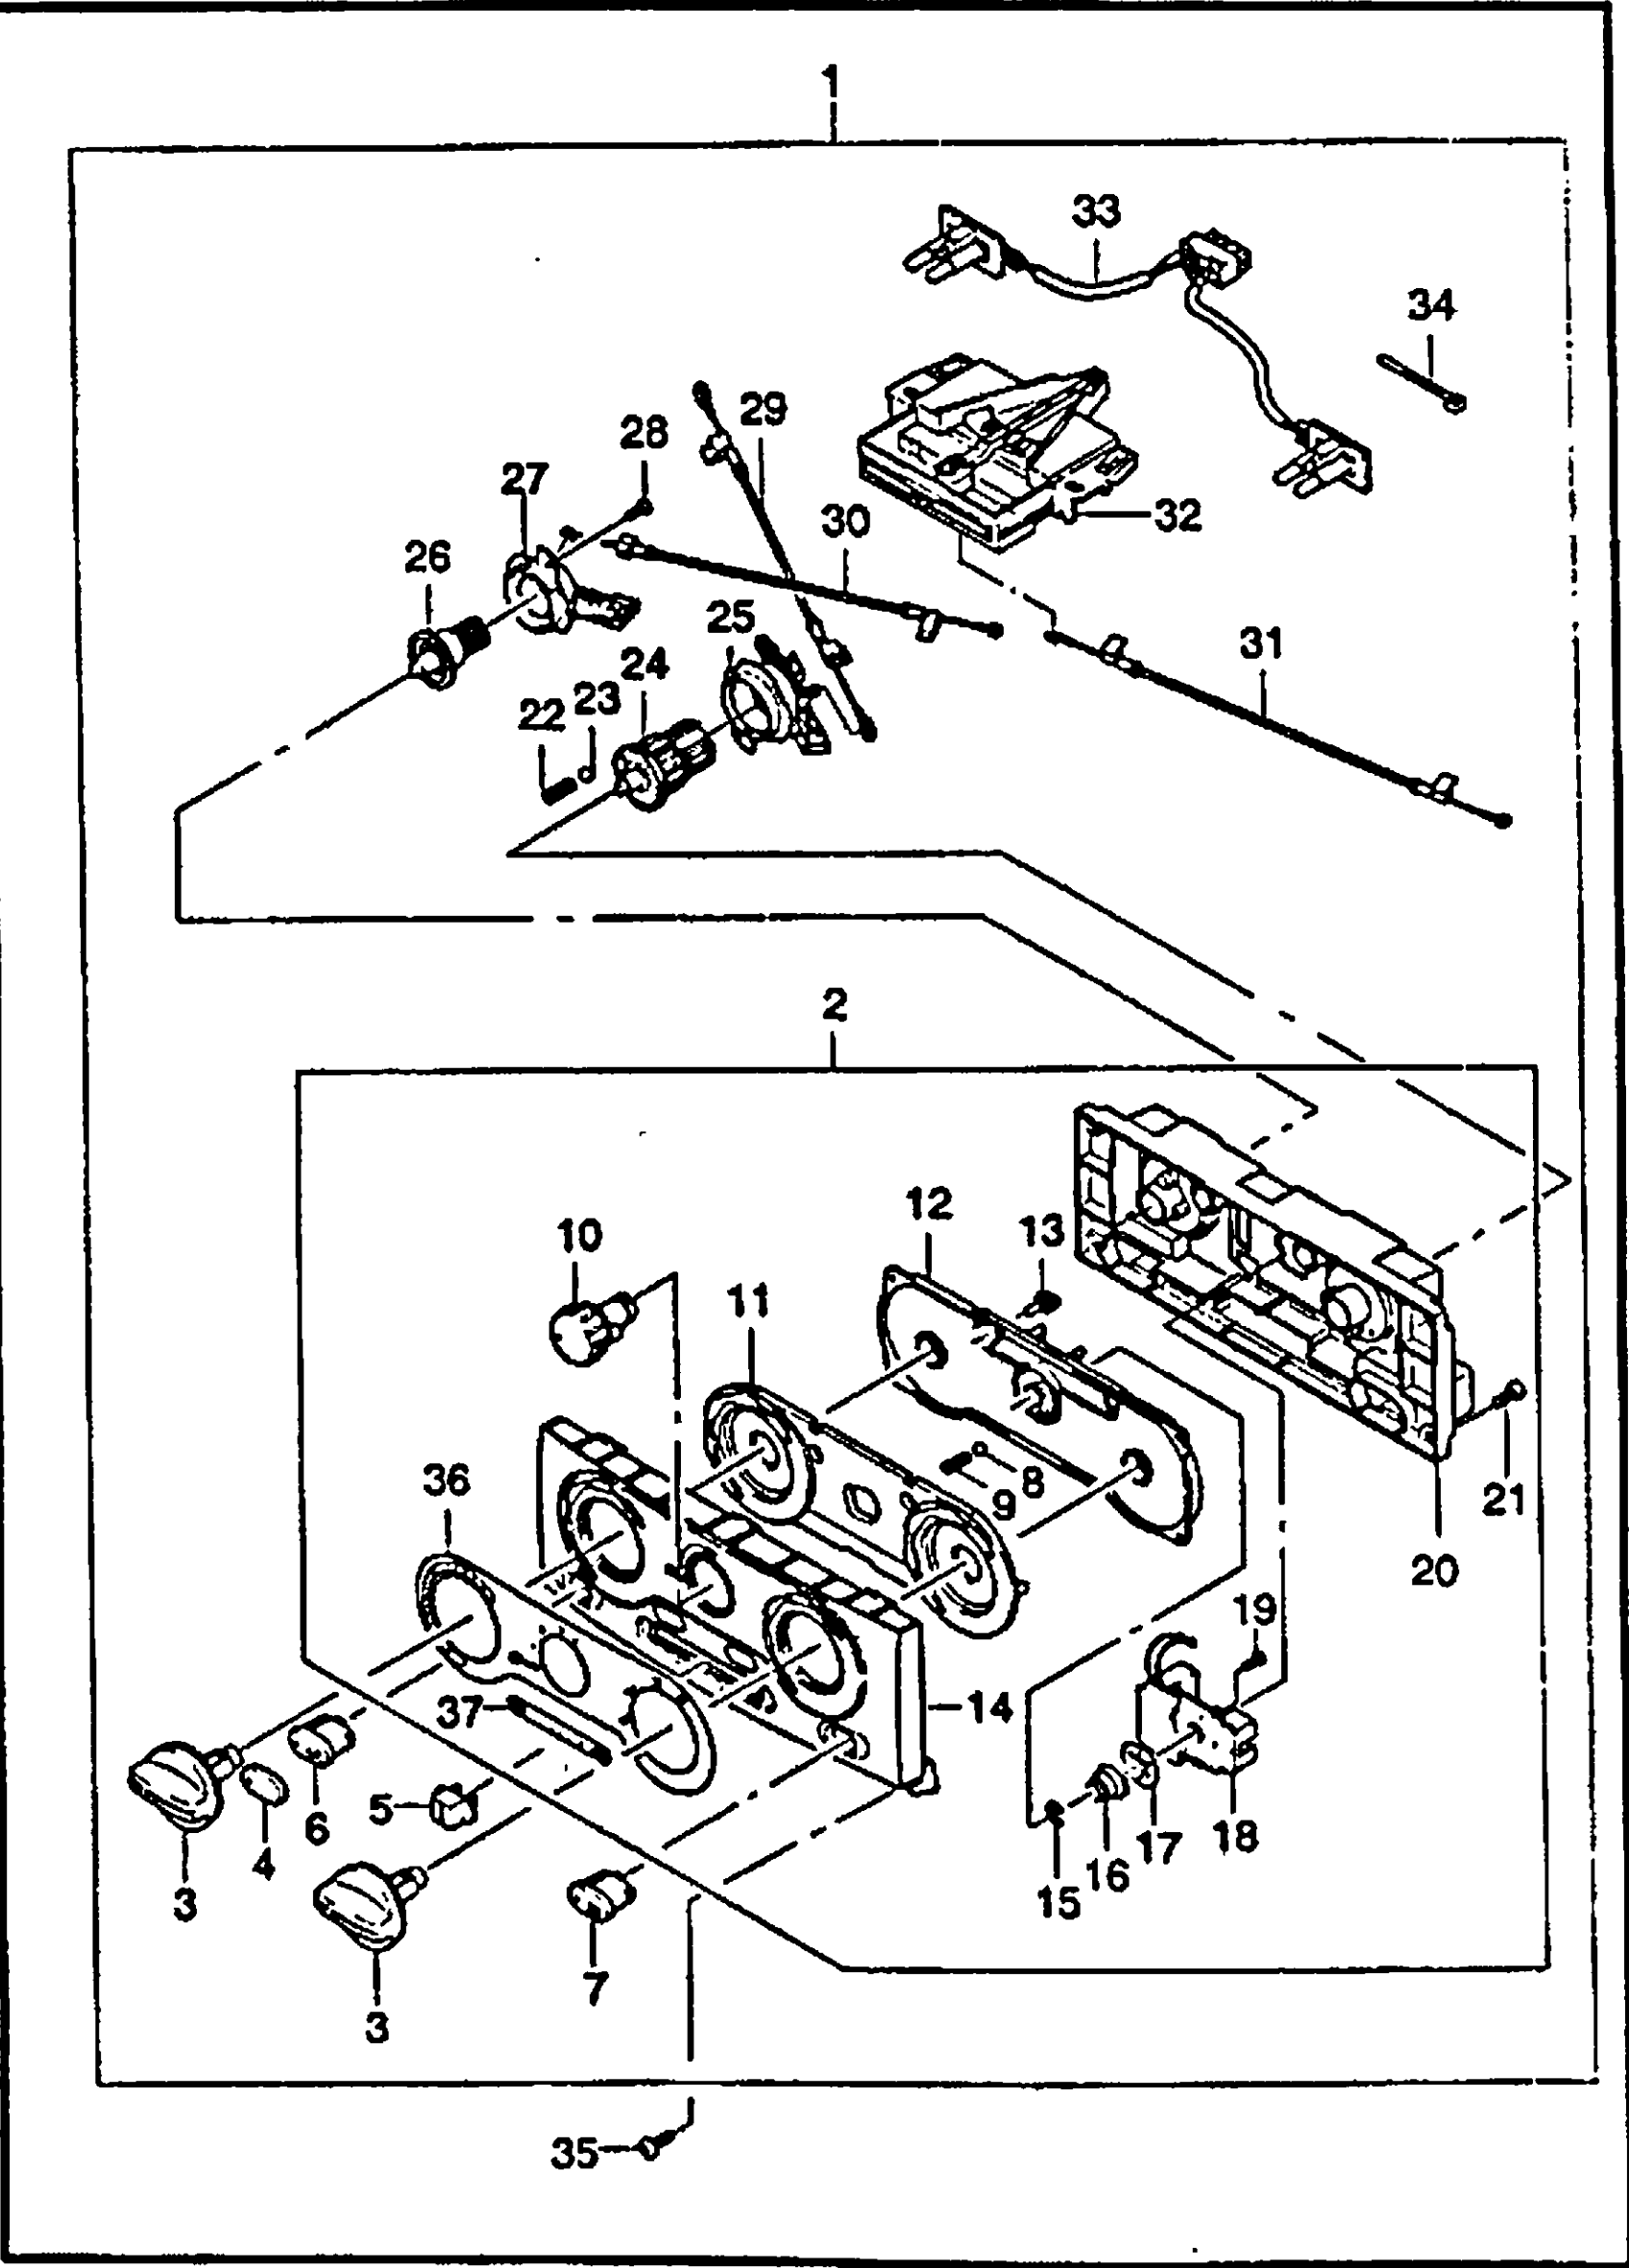


KEY NO.		PART NAME													
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[29]	(E)CABLE A-MODE (D)KABEL									(F)CABLE (S)CABLE				
	759205	.	.	B	B	B	S	S	S			1			
	[30]	(E)CABLE A-TEMPERATURE (D)KABEL									(F)CABLE (S)CABLE				
	759204	.	.	B	B	B	S	S	S			1			
	[31]	(E)CABLE A-RECIRCULATION (D)KABEL									(F)CABLE (S)CABLE				
	759206	.	.	B	B	B	S	S	S			1			
	[32]	(E)SWITCH A-RECIRCULATION (D)SCHALTER									(F)COMMUTATEUR (S)INTERRUPTOR				
	759202	.	.	B	B	B	S	S	S			1			
	[33]	(E)SWITCH A-PUSH (D)SCHALTER									(F)COMMUTATEUR (S)INTERRUPTOR				
	759264	.	.	B	B	B	S	S	S	&C46		1			
	759196A	.	.	B	B	B	O	O	O	&C59/C60		1			
	[34]	(E)GRIP- WIRE (D)GRIFF									(F)POIGNEE (S)ASIDERO				
	159261	.	.	B	B	B	S	S	S			1			
	[35]	(E)SCREW-TAPPING (D)SCHRAUBE									(F)VIS (S)TORNILLO				
	03110-48165	.	.	B	B	B	S	S	S			2			
	[36]	(E)PLATE-SYMBOL (D)PLATTE									(F)PLAQUE (S)PLACA				
	159238	.	.	B	B	B	S	S	S			1			
	[37]	(E)PLATE-RECIRCULAT. SYMBOL (D)PLATTE									(F)PLAQUE (S)PLACA				
	159240	.	.	B	B	B	S	S	S			1			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE							
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK							


9**O.V.M & ACCESSORY****9110 TOOL****9120 OIL & PAINT****9210 REAR SPOILER****9250 SUN ROOF****9260 SUN ROOF MOUNT**

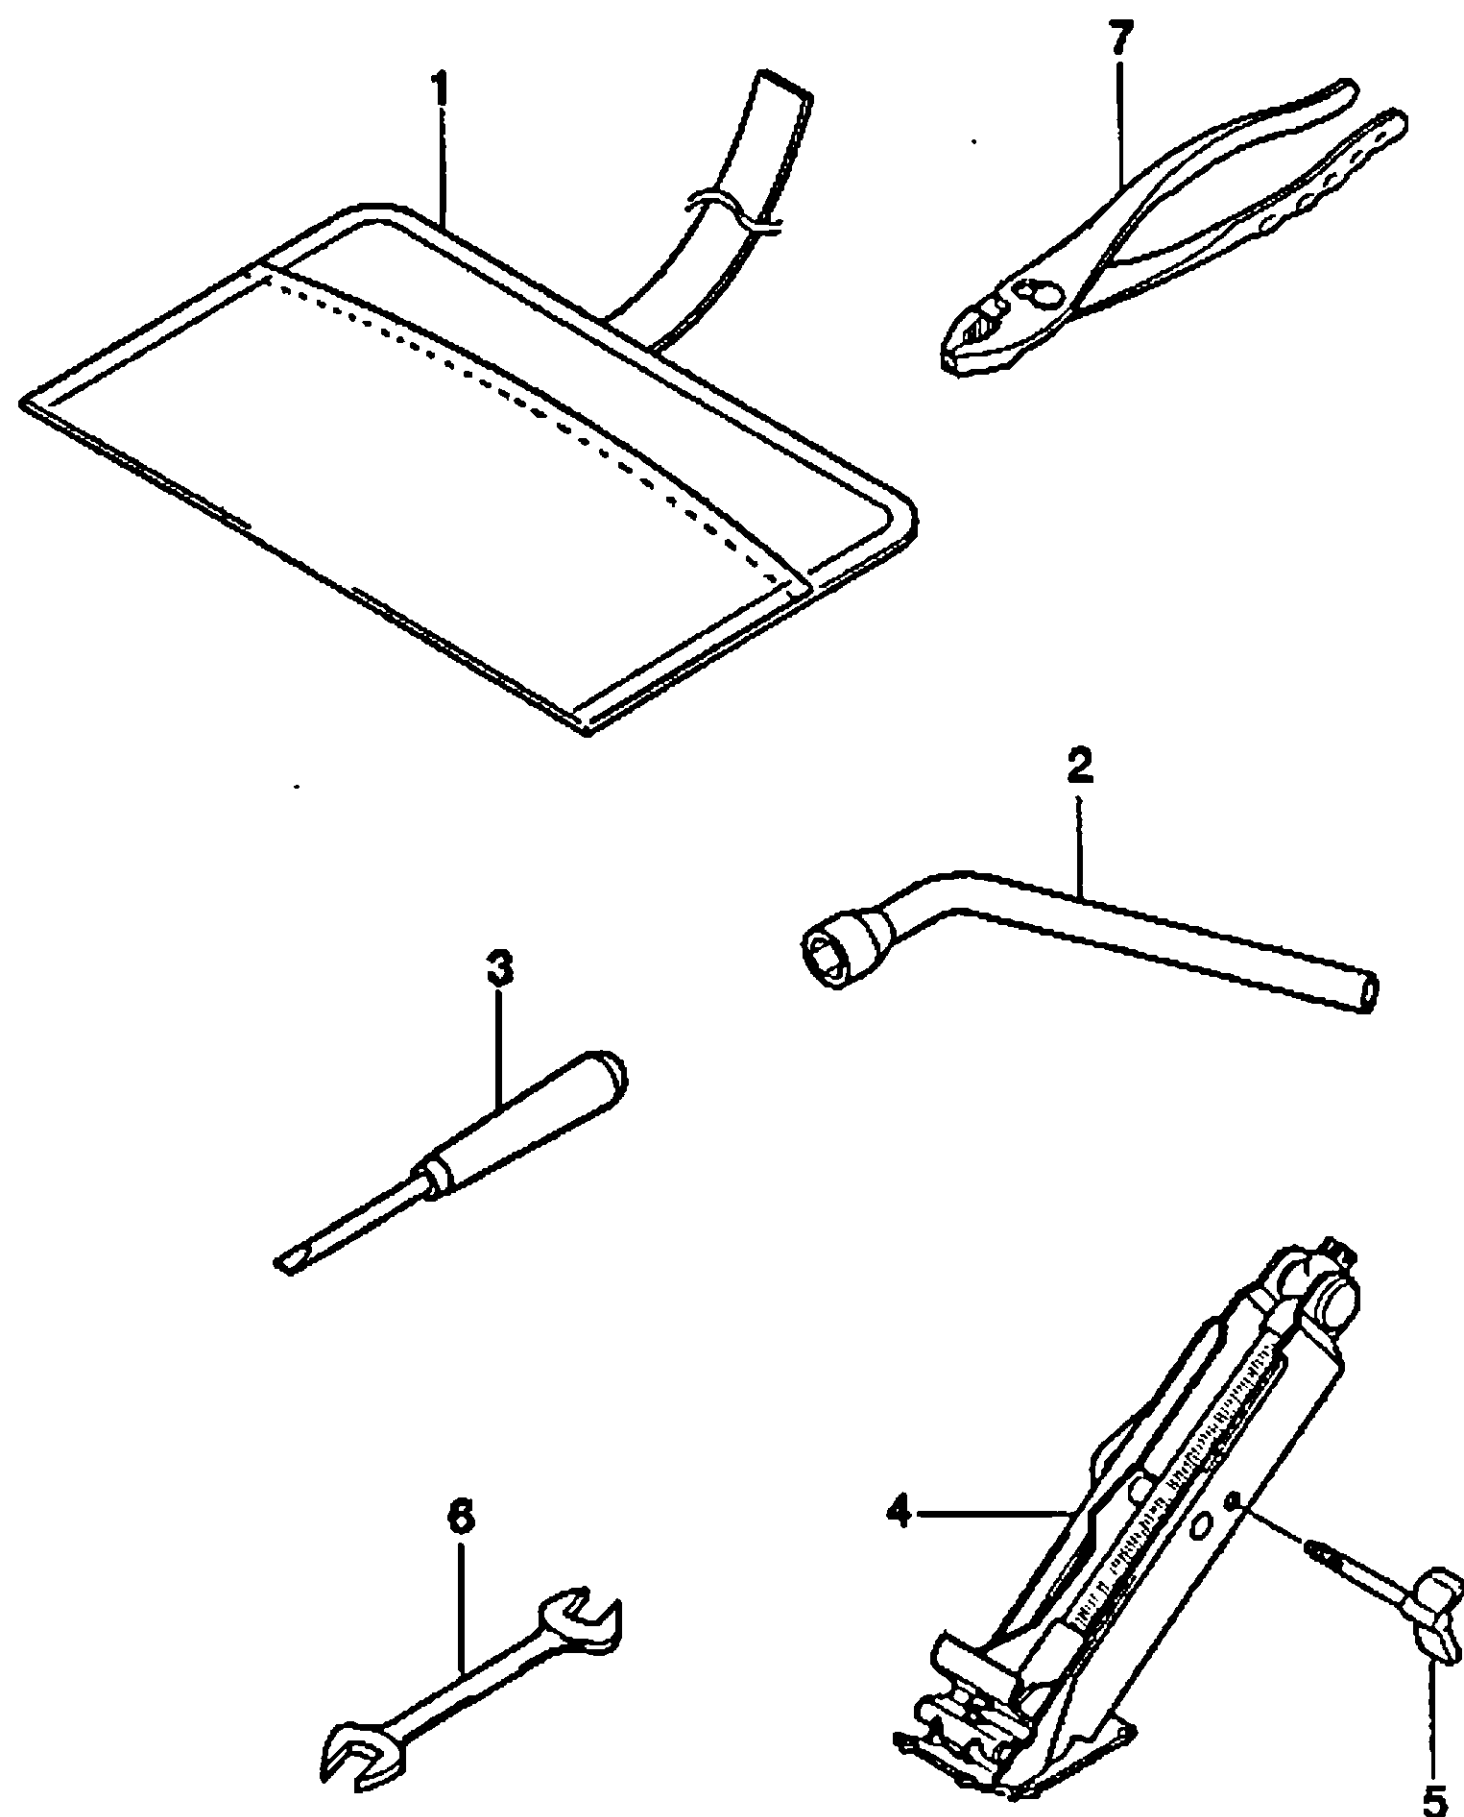


KEY NO.			PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL				FROM	TO			
				4 N	3 H	5 H	S S								S S
	[01] 09811-00001	(E)BAG-TOOL (D)WERKZEUGKASTEN . . . B B B S S S									(F)TROUSSE A OUTILS (S)CAJA-DEPOSITO 1				
	[02] 09816-19002	(E)WRENCH-WHEEL NUT (D)SCHRAUBENSCHLÜßEL,RAD . . . B B B S S S									(F)CLE-ECROU DE ROUE (S)LLAVE-TUERCA DE LLANTA 1				
	[03] 09814-12001	(E)DRIVER-SCREW (D)SCHRAUBENZIEHER . . . B B B S S S									(F)CONDUCTEUR (S)IMPULSADOR-TORNILLO 1				
	[04] 90278524	(E)JACK A (D)STECKER . . . B B B S S S									(F)CRIC (S)GATO 1				
	[05] 96219681	(E)BOLT A-JACK WING (D)SCHRAUBE . . . B B B S S S									(F)BOULON (S)PERNO 1				
	[06] 09813-08001	(E)SPANNER (D)SCHRAUBENSCHLÜßEL . . . B B B S S S									(F)CLEF (S)LLAVE FIJA 1				
	[07] 09812-42001	(E)PLIER (D)ZANGE . . . B B B S S S									(F)PINCE (S)ALICATE 1	970328			
ENG(ENGINE)			T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON			M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						

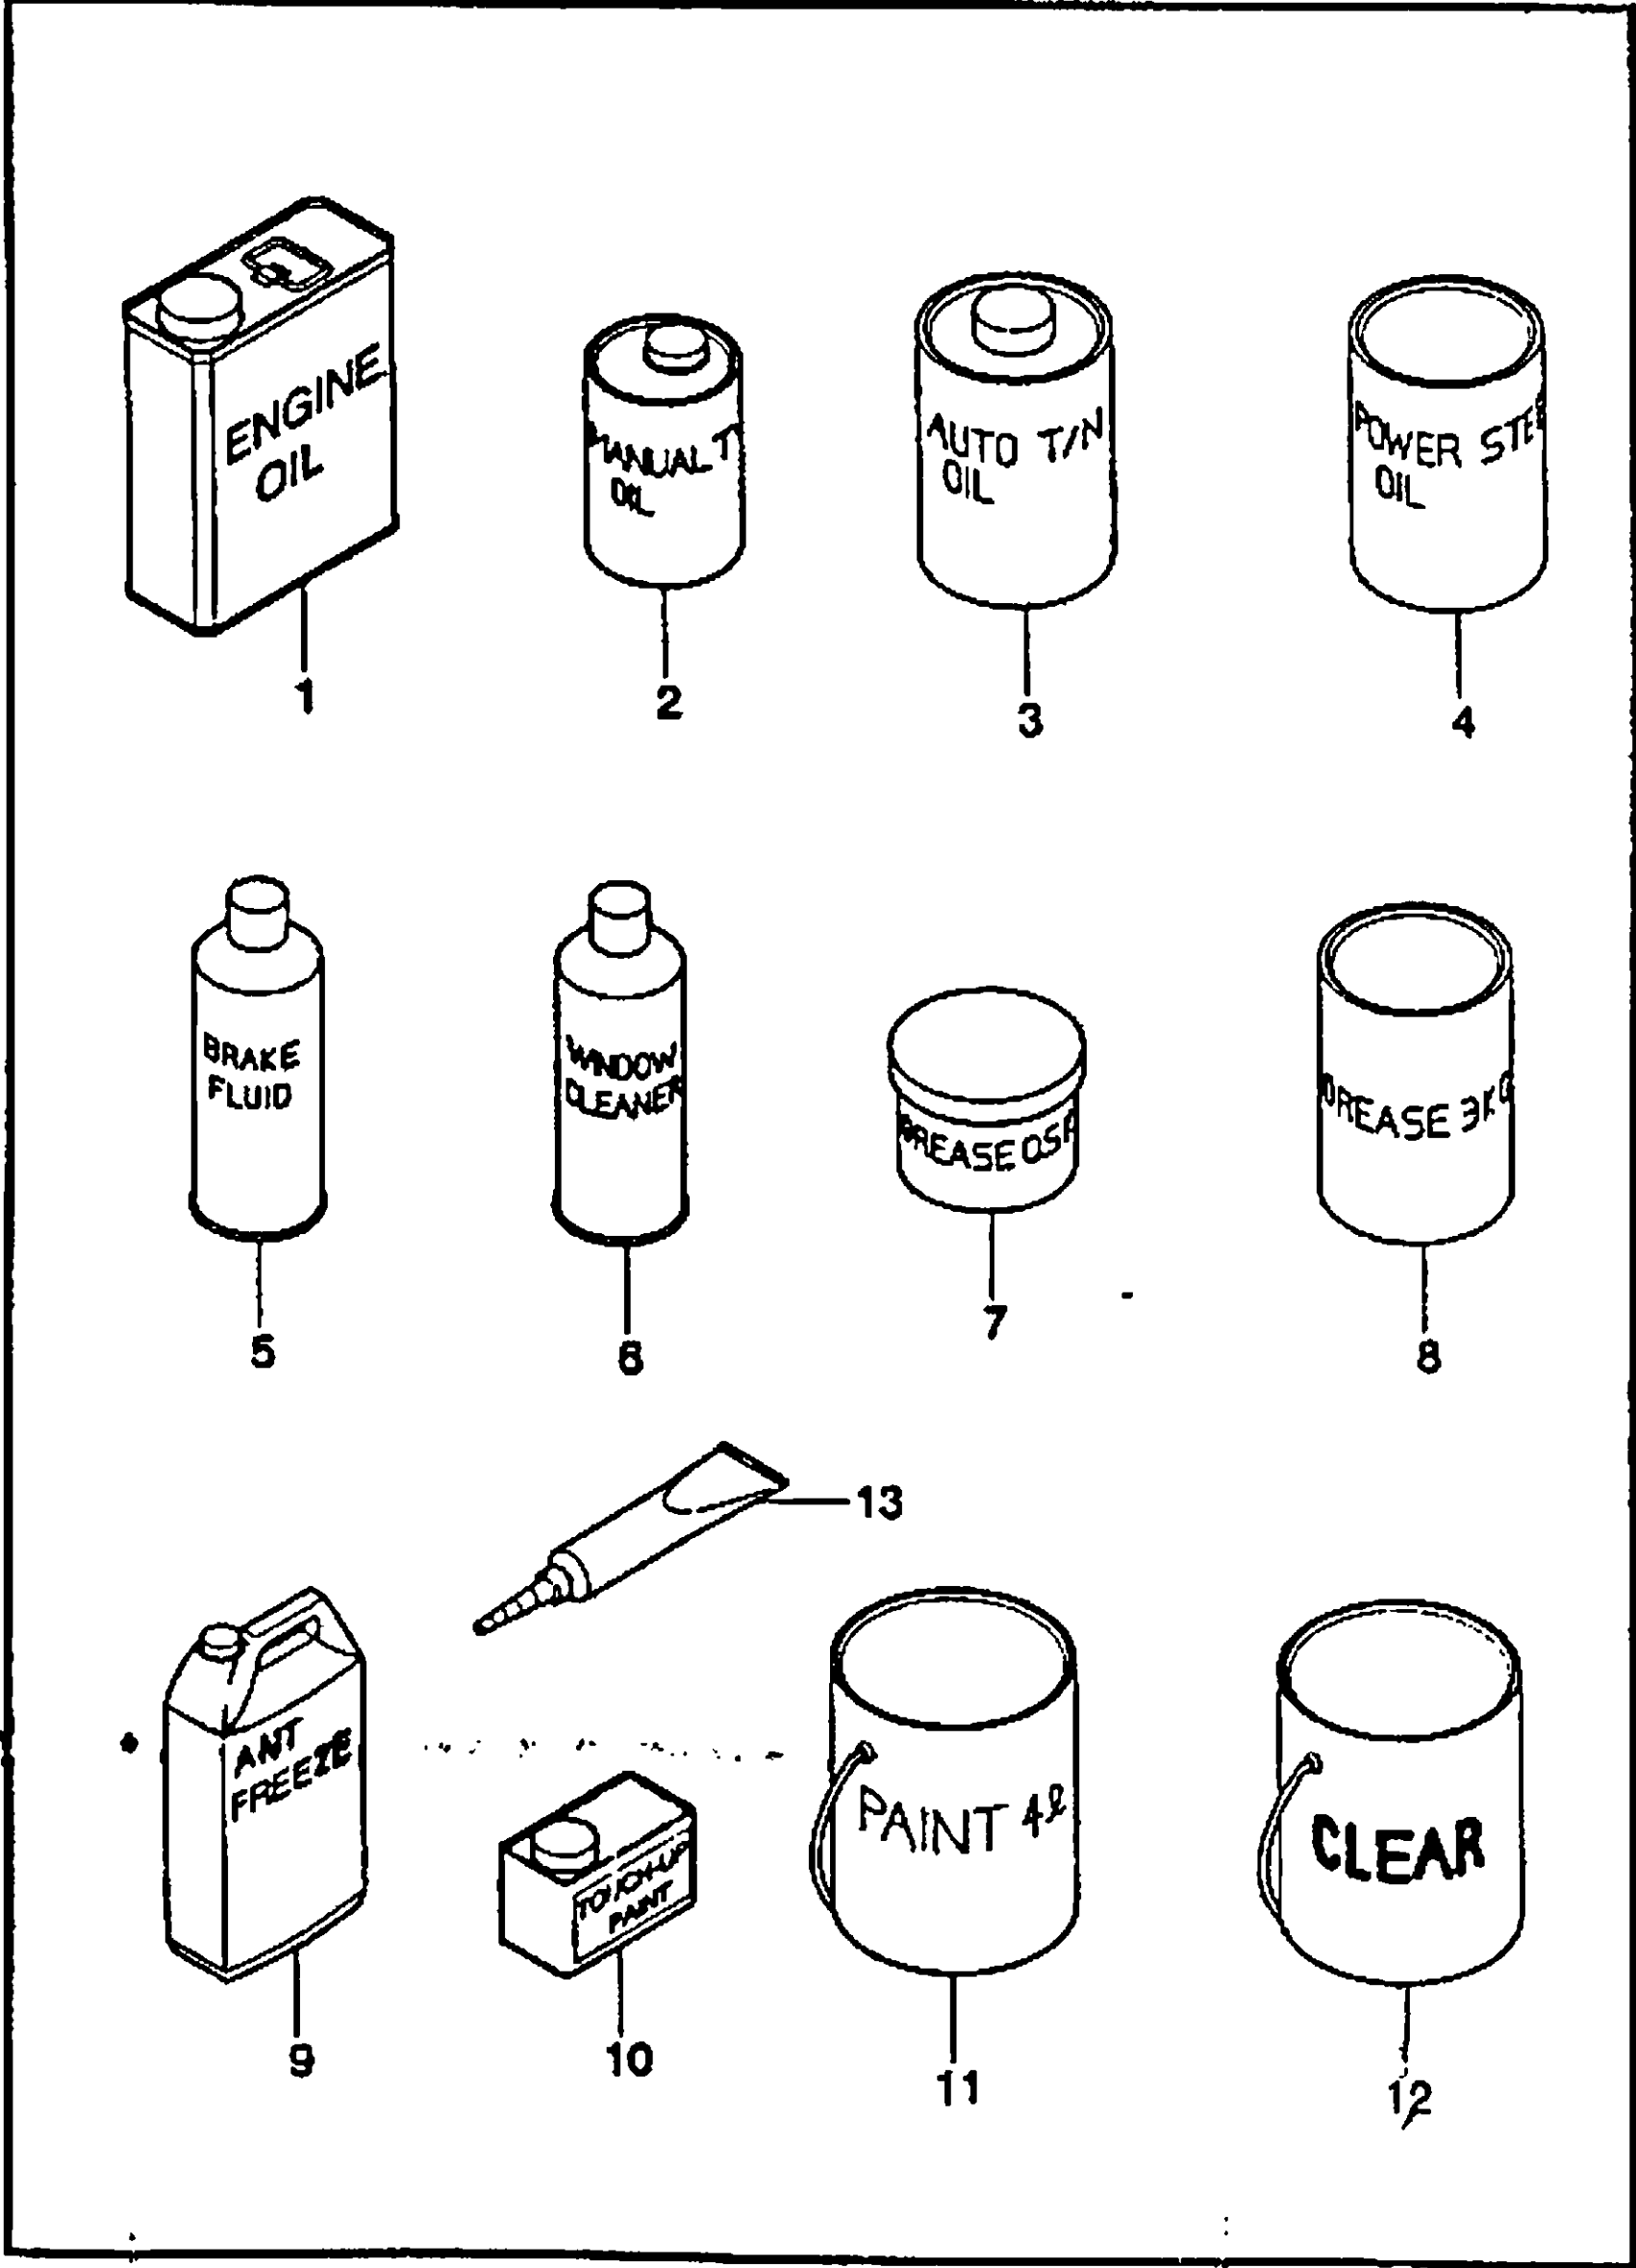


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S X
	[01]	(E)OIL-ENGINE (D)ÖL,MOTOR										(F)HUILE-MOTEUR (S)ACEITE-MOTOR				
	M-8045-1L	Y	.	B	B	B	S	S	S	-XCA	1		1L,10W30,SJ			
	M-8045-4L	Y	.	B	B	B	S	S	S	-XCA	1		4L,10W30,SJ			
	M-8044-1L	Y	.	B	B	B	A	A	A	&XCA	1		1L,5W30,SJ			
	M-8044-4L	Y	.	B	B	B	A	A	A	&XCA	1		4L,5W30,SJ			
	M-8044-1L	6	.	B	B	B	.	.	O	-XHA	1		1L,5W30,SJ			
	M-8044-4L	6	.	B	B	B	.	.	O	-XHA	1		4L,5W30,SJ			
	M-8045-1L	6	.	B	B	B	.	.	A	&XHA	1		1L,10W30,SJ			
	M-8045-4L	6	.	B	B	B	.	.	A	&XHA	1		4L,10W30,SJ			
	M-8045-1L	6	.	B	B	B	.	.	A	&KL9	1		1L,10W30,SJ			
	M-8045-4L	6	.	B	B	B	.	.	A	&KL9	1		4L,10W30,SJ			
	[02]	(E)OIL-MANUAL TRANSAXLE (D)ÖL,MANUELLE GANGSCHALTUNG										(F)HUILE-TRANS MANUELLE (S)ACEITE-EJE TRANSVERSAL				
	M-8027-1L	.	.	B	B	B	S	S	S		1		1L			
	[03]	(E)OIL-AUTOMATIC TRANSAXLE (D)ÖL,GANGSCHALTUNG										(F)HUILE-TRANS AUTOMATIQUE (S)ACEITE-EJE TRANSVERSAL				
	M-8039-1L	.	.	B	B	B	S	S	S		1		1L			
	M-8039-4L	.	.	B	B	B	S	S	S		1		4L			
	[04]	(E)OIL-POWER STEERING (D)ÖL,KRAFTLENKUNG										(F)HUILE-DIRECTION ASSISTEE (S)ACEITE-SERVODIRECCION				
	M-8036-1L	.	.	B	B	B	S	S	S		1		1L			
	[05]	(E)FLUID-BRAKE (D)FLÜSSIGKEIT,BREMSE										(F)LIQUIDE-FREIN (S)FLUIDO-FRENOS				
	05KGM4653M	.	.	B	B	B	S	S	S		1		0.5L			
	1KGM4653M	.	.	B	B	B	S	S	S		1		1L			
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

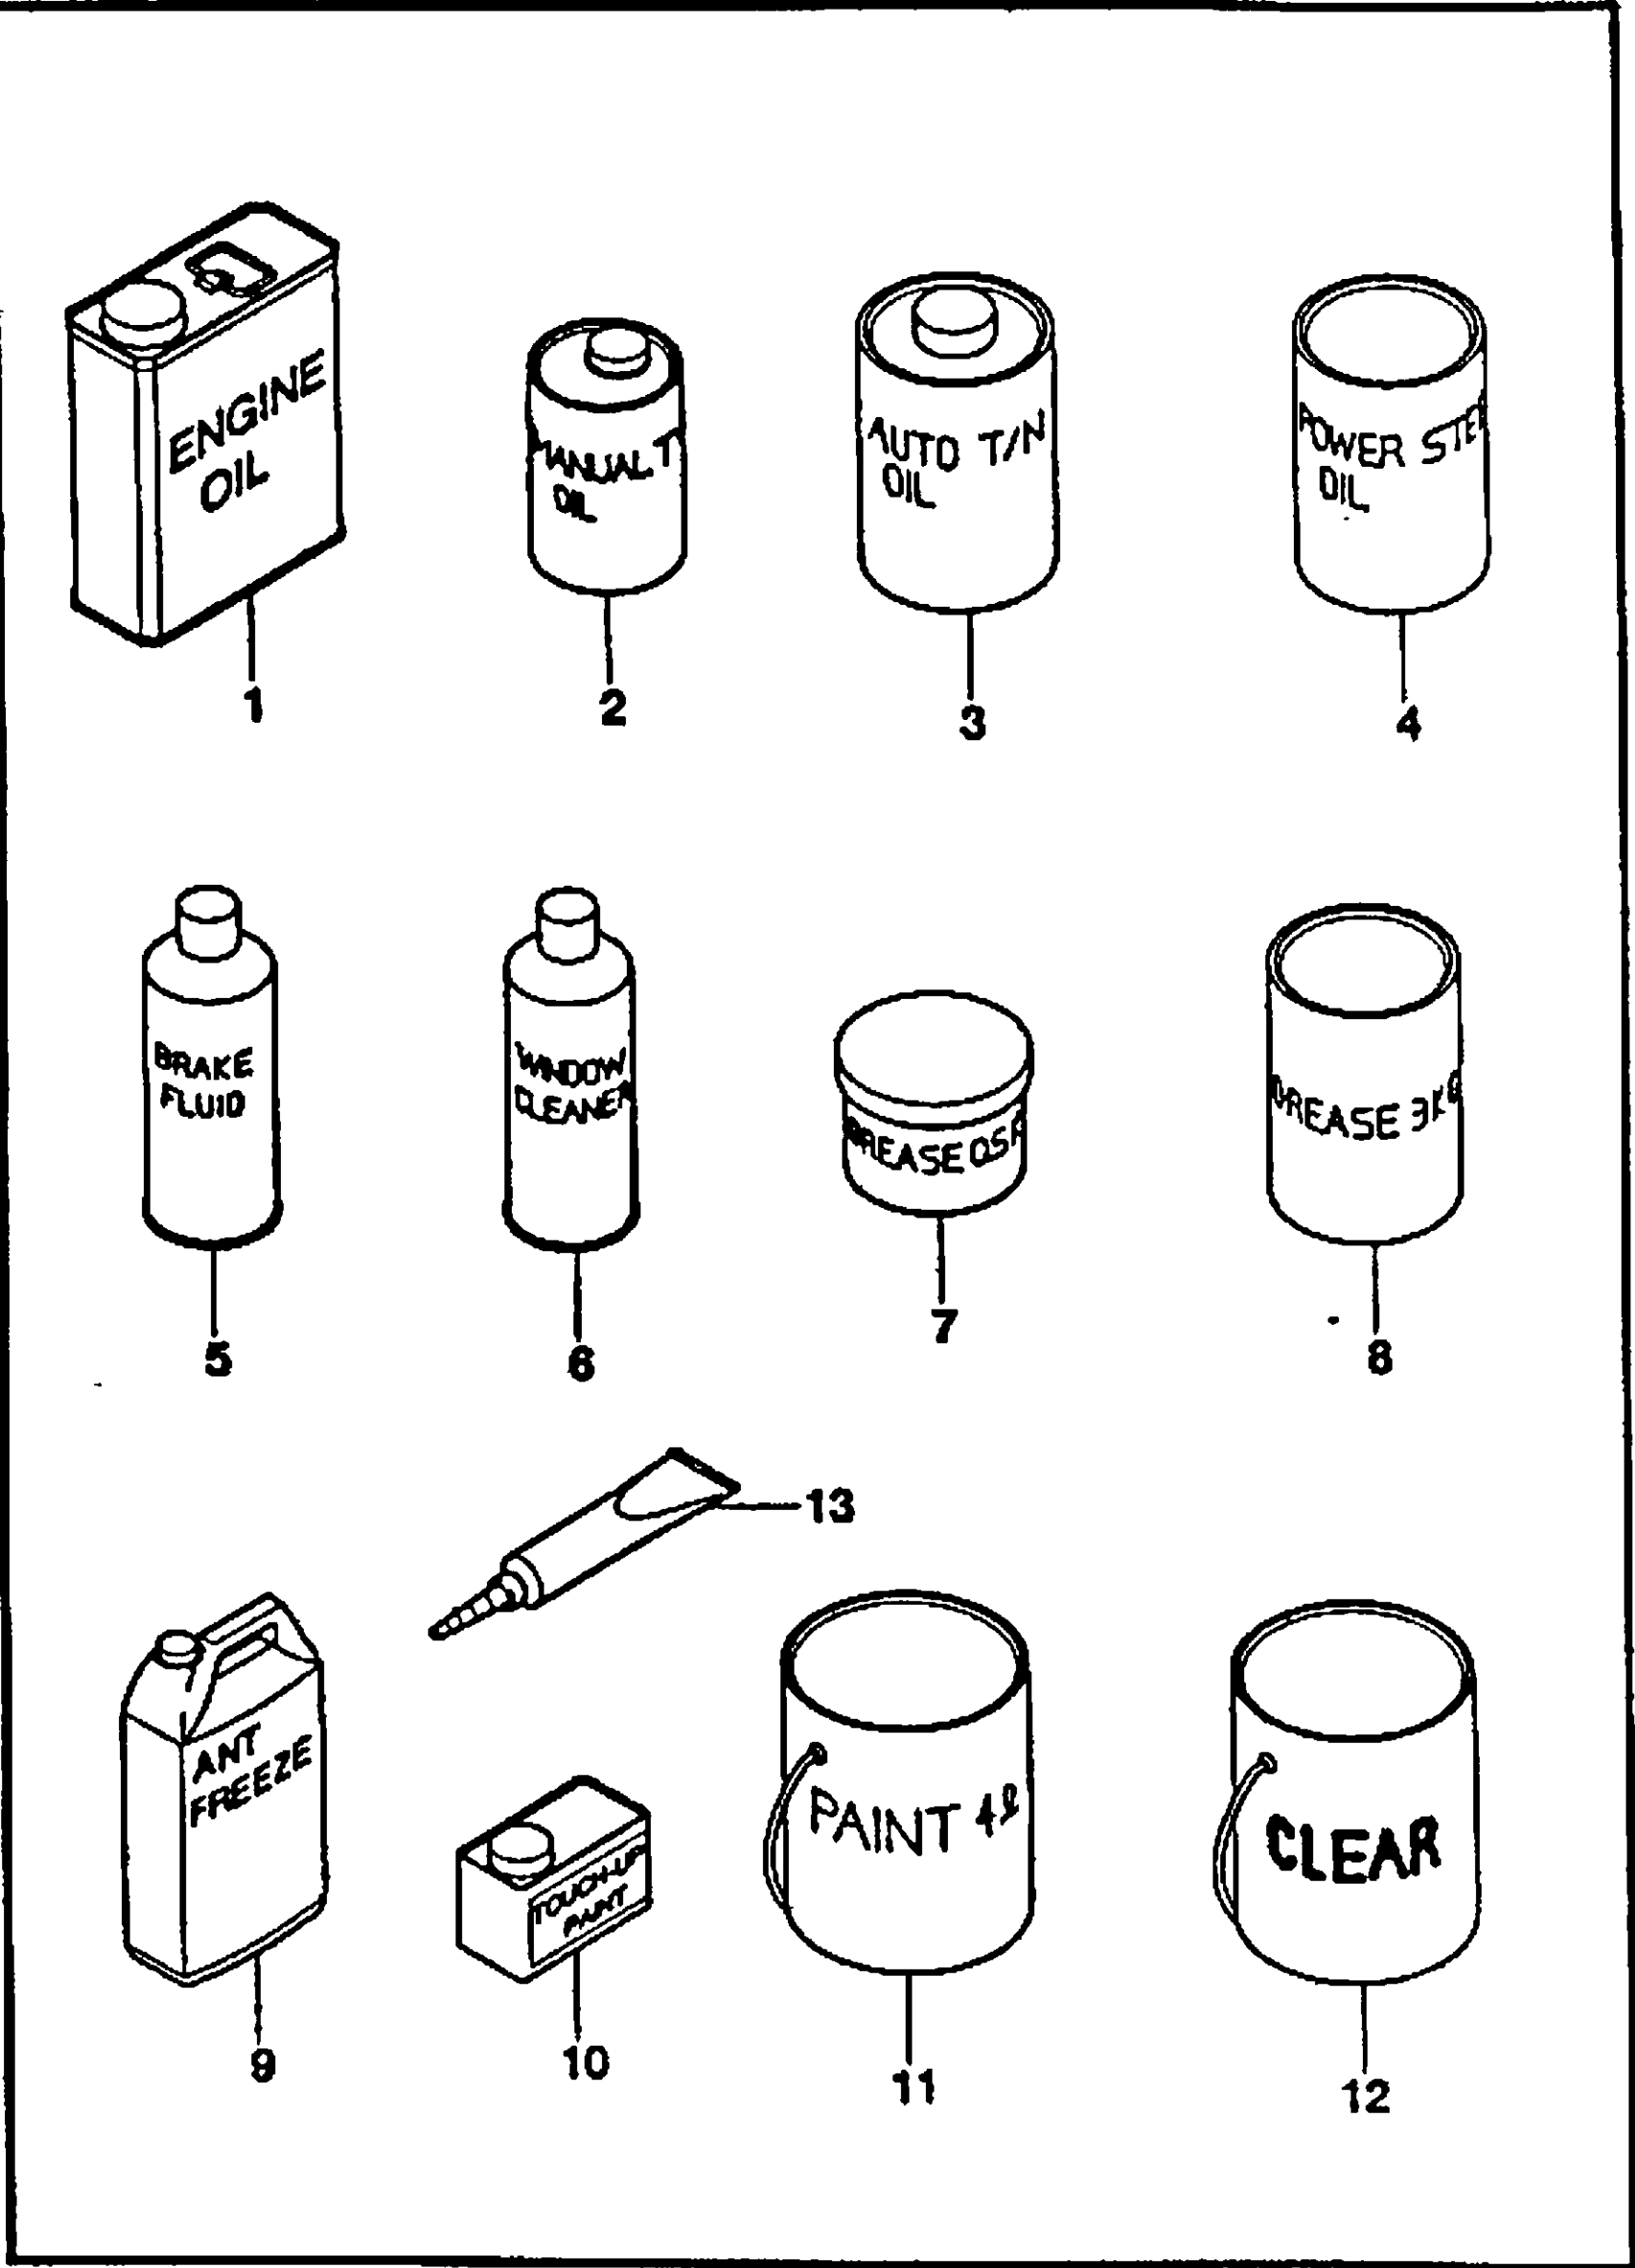


KEY NO.		PART NAME														
I T C	PART NO	MODEL							OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E	
		E N G	T / A	BODY			LEVEL					FROM	TO			
				4 N	3 H	5 H	S S	S S								S X
	[06]	(E)FLUID-WINDOW CLEANER (D)FLÜSSIGKEIT										(F)LIQUIDE-LAVE-GLACE (S)FLUIDO-LIMPIA PARABRISAS				
	M-8206-1L	.	.	B	B	B	S	S	S	-XCA	1					
	M-8209-1L	.	.	B	B	B	A	A	A	&XCA	1					
	[07]	(E)GREASE (D)SCHMIERMITTEL										(F)GRAISSE (S)GRASA				
	B0400625A	.	.	B	B	B	S	S	S		1		0.5 KG			
	[08]	(E)GREASE (D)SCHMIERMITTEL										(F)GRAISSE (S)GRASA				
	B0400625B	.	.	B	B	B	S	S	S		1		3 KG			
	[09]	(E)ANTIFREEZE (D)GEFRIERSCHUTZMITTEL										(F)ANTIGEL (S)ANTICONGELANTE				
	B0400240-4	.	.	B	B	B	S	S	S		1		4L			
	[10]	(E)PAINT-TOUCH UP (D)LACK,NACHLACKIEREN										(F)PEINTURE-RETOUCHES (S)PINTURA-RETOQUE				
	A/L-11U-0.5L	.	.	B	B	B	S	S	S		1		0.5L			
	A/L-21U-0.5L	.	.	B	B	B	O	O	O		1		0.5L			
	A/L-27U-0.5L	.	.	B	B	B	O	O	O		1		0.5L			
	A/L-42U-0.5L	.	.	B	B	B	O	O	O		1		0.5L			
	A/L-43U-0.5L	.	.	B	B	B	O	O	O		1		0.5L			
	A/L-73L-0.5L	.	.	B	B	B	O	O	O		1		0.5L			
	A/L-74U-0.5L	.	.	B	B	B	O	O	O		1		0.5L			
	A/L-81U-0.5L	.	.	B	B	B	O	O	O		1		0.5L			
	A/L-83L-0.5L	.	.	B	B	B	O	O	O		1		0.5L			
	A/L-92U-0.5L	.	.	B	B	B	O	O	O		1		0.5L			
	[11]	(E)PAINT (D)LACK										(F)PEINTURE (S)PINTURA				
ENG(ENGINE)				T/A(TRANSAXLE)				BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON				M = MANUAL T/A A = AUTOMATIC T/A . = COMMON				4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

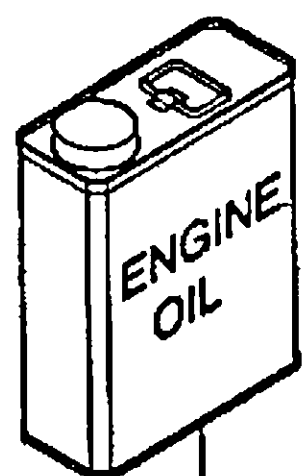


1

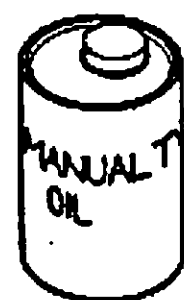

2

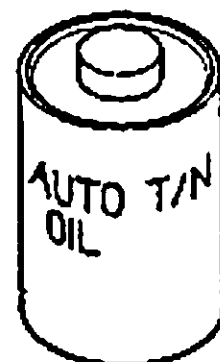

3

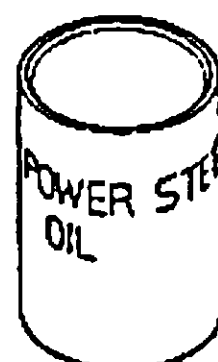

4




5




6



7

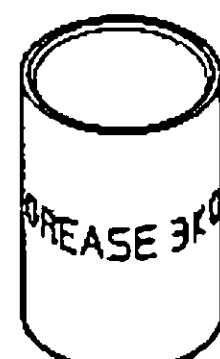


8

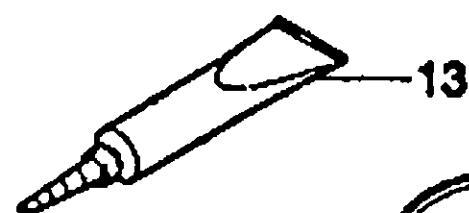

13



9

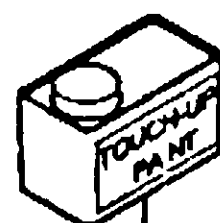

10




11




12


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S S								S S S	S S S
	U/T-11U-4L	.	.	B	B	B	S	S	S		1			4L		
	B/C-21U-4L	.	.	B	B	B	O	O	O		1			4L		
	B/C-27U-4L	.	.	B	B	B	O	O	O		1			4L		
	B/C-42U-4L	.	.	B	B	B	O	O	O		1			4L		
	B/C-43U-4L	.	.	B	B	B	O	O	O		1			4L		
	U/T-73L-4L	.	.	B	B	B	O	O	O		1			4L		
	B/C-74U-4L	.	.	B	B	B	O	O	O		1			4L		
	B/C-81U-4L	.	.	B	B	B	O	O	O		1			4L		
	B/C-83L-4L	.	.	B	B	B	O	O	O		1			4L		
	B/C-92U-4L	.	.	B	B	B	O	O	O		1			4L		
	[12]	(E)CLEAR -VARNISH (D)LACK								(F)PEINTURE (S)PINTURA						
	U/T-CLR-4L	.	.	B	B	B	S	S	S		1			4L		
	[13]	(E)GASKET (D)DICHTUNG								(F)JOINT (S)JUNTA						
	S9120016	.	.	B	B	B	S	S	S		1			50ml		
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A .. = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

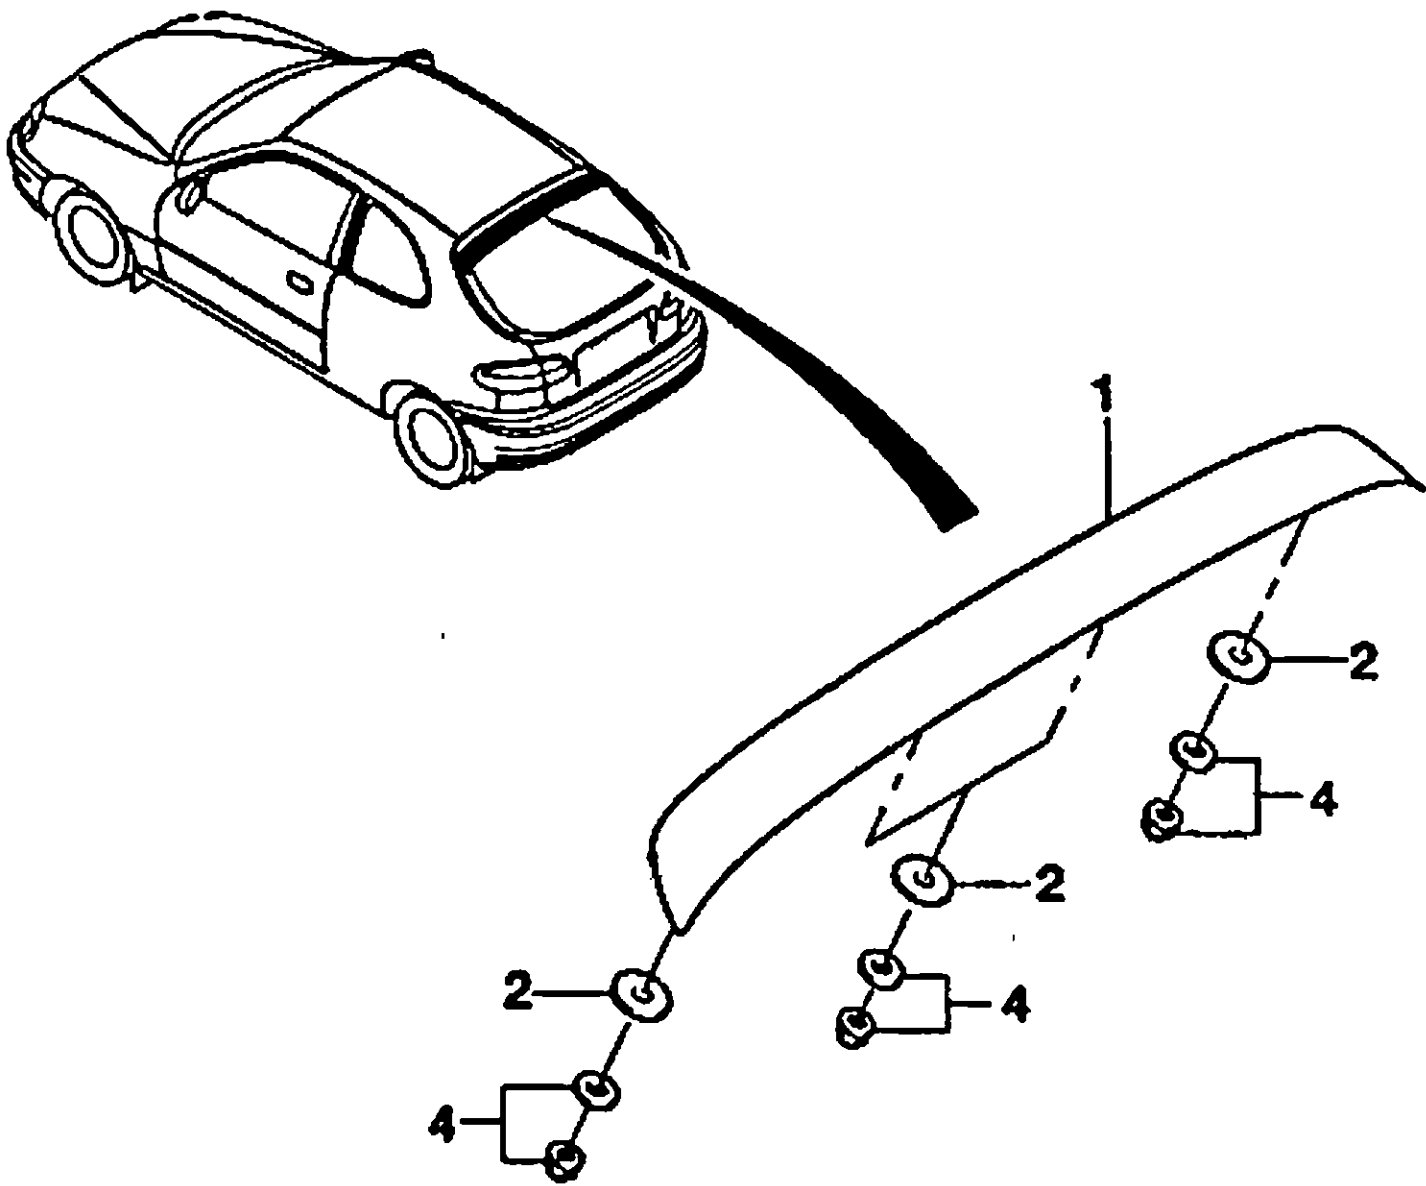


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P I C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	6 H	S								S E	S X
	[01] 96303489	(E)SPOILER A-REAR (D)SPOILER					B	B	O	.	O			(F)SPOILER (S)SPOILER	1	INCL #2
	[02] 09308-05001	(E)GROMMET (D)OSE					B	B	O	.	O			(F)VIROLE (S)AISLANTE	4	
	[04] 09159-06101	(E)NUT (D)MUTTER					B	B	O	.	O			(F)ECROU (S)TUERCA	4	
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

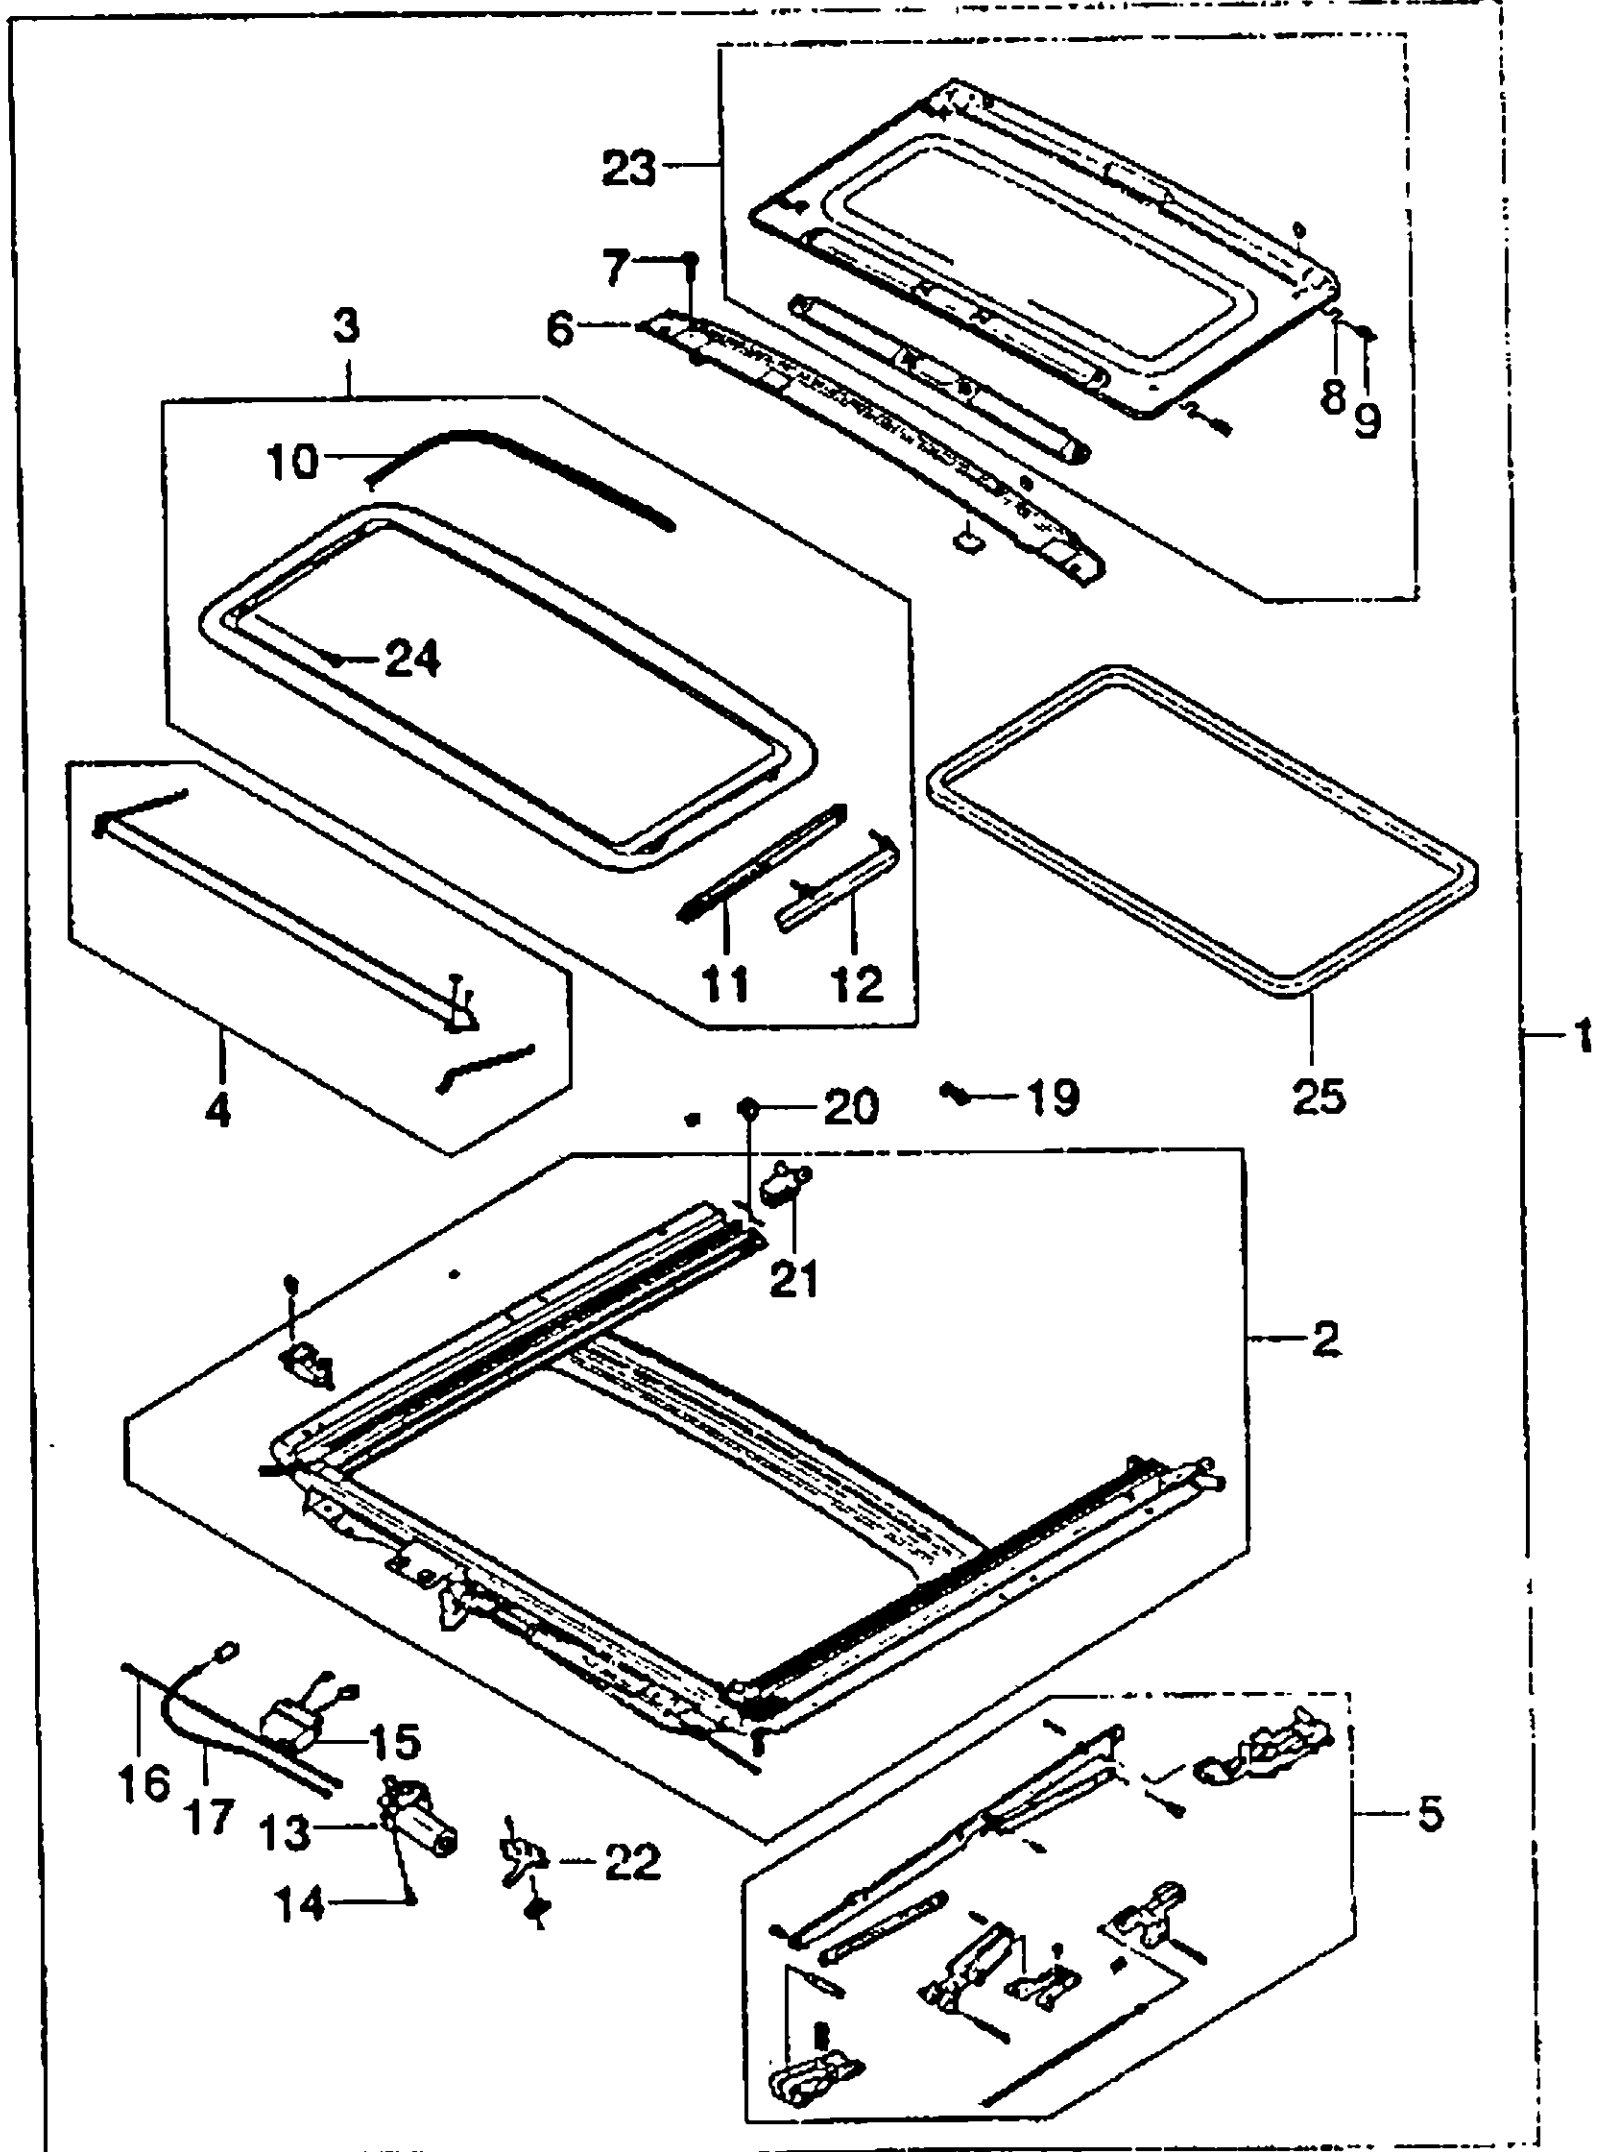


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S S	S X
[01]	(E)ROOF A-SUN (D)DACH,SONNEN								(F)TOIT-OUVRANT (S)TECHO-SOLAR							
96240744	. . B B B O O O								1							
[02]	(E)FRAME A (D)RAHMEN								(F)CADRE (S)ARMADURA							
44044480	. . B B B O O O								1							
[03]	(E)PANEL A-GLASS (D)VERKLEIDUNG, GLAS								(F)Panneau-GLACE (S)PANEL-VIDRIO							
44044460	. . B B B O O O								1							
[04]	(E)DEFLECTOR-WIND (D)WINDSCHUTZ-FLÜGEL								(F)DEFLECTEUR-VENT (S)DEFLECTOR-VIENTO							
44044450	. . B B B O O O								1							
[05]	(E)MECHANISM (D)MECHANISMUS								(F)MECANISME (S)MECANISMO							
44044150	. . B B B O O O								LH 1							
44044140	. . B B B O O O								RH 1							
[06]	(E)CHANNEL DRAIN (D)RILLE								(F)RAINURE (S)CANAL							
40109330	. . B B B O O O								1							
[07]	(E)SCREW (D)SCHRAUBE								(F)VIS (S)TORNILLO							
26158906	. . B B B O O O								2							
[08]	(E)SPRING-SLIDE BLOCK (D)FEDERUNG								(F)RESSORT (S)RESORTE							
40329190	. . B B B O O O								4							
[09]	(E)BLOCK-SLIDE (D)BLOCK								(F)BLOC (S)BLOQUE							
42309630	. . B B B O O O								4							
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

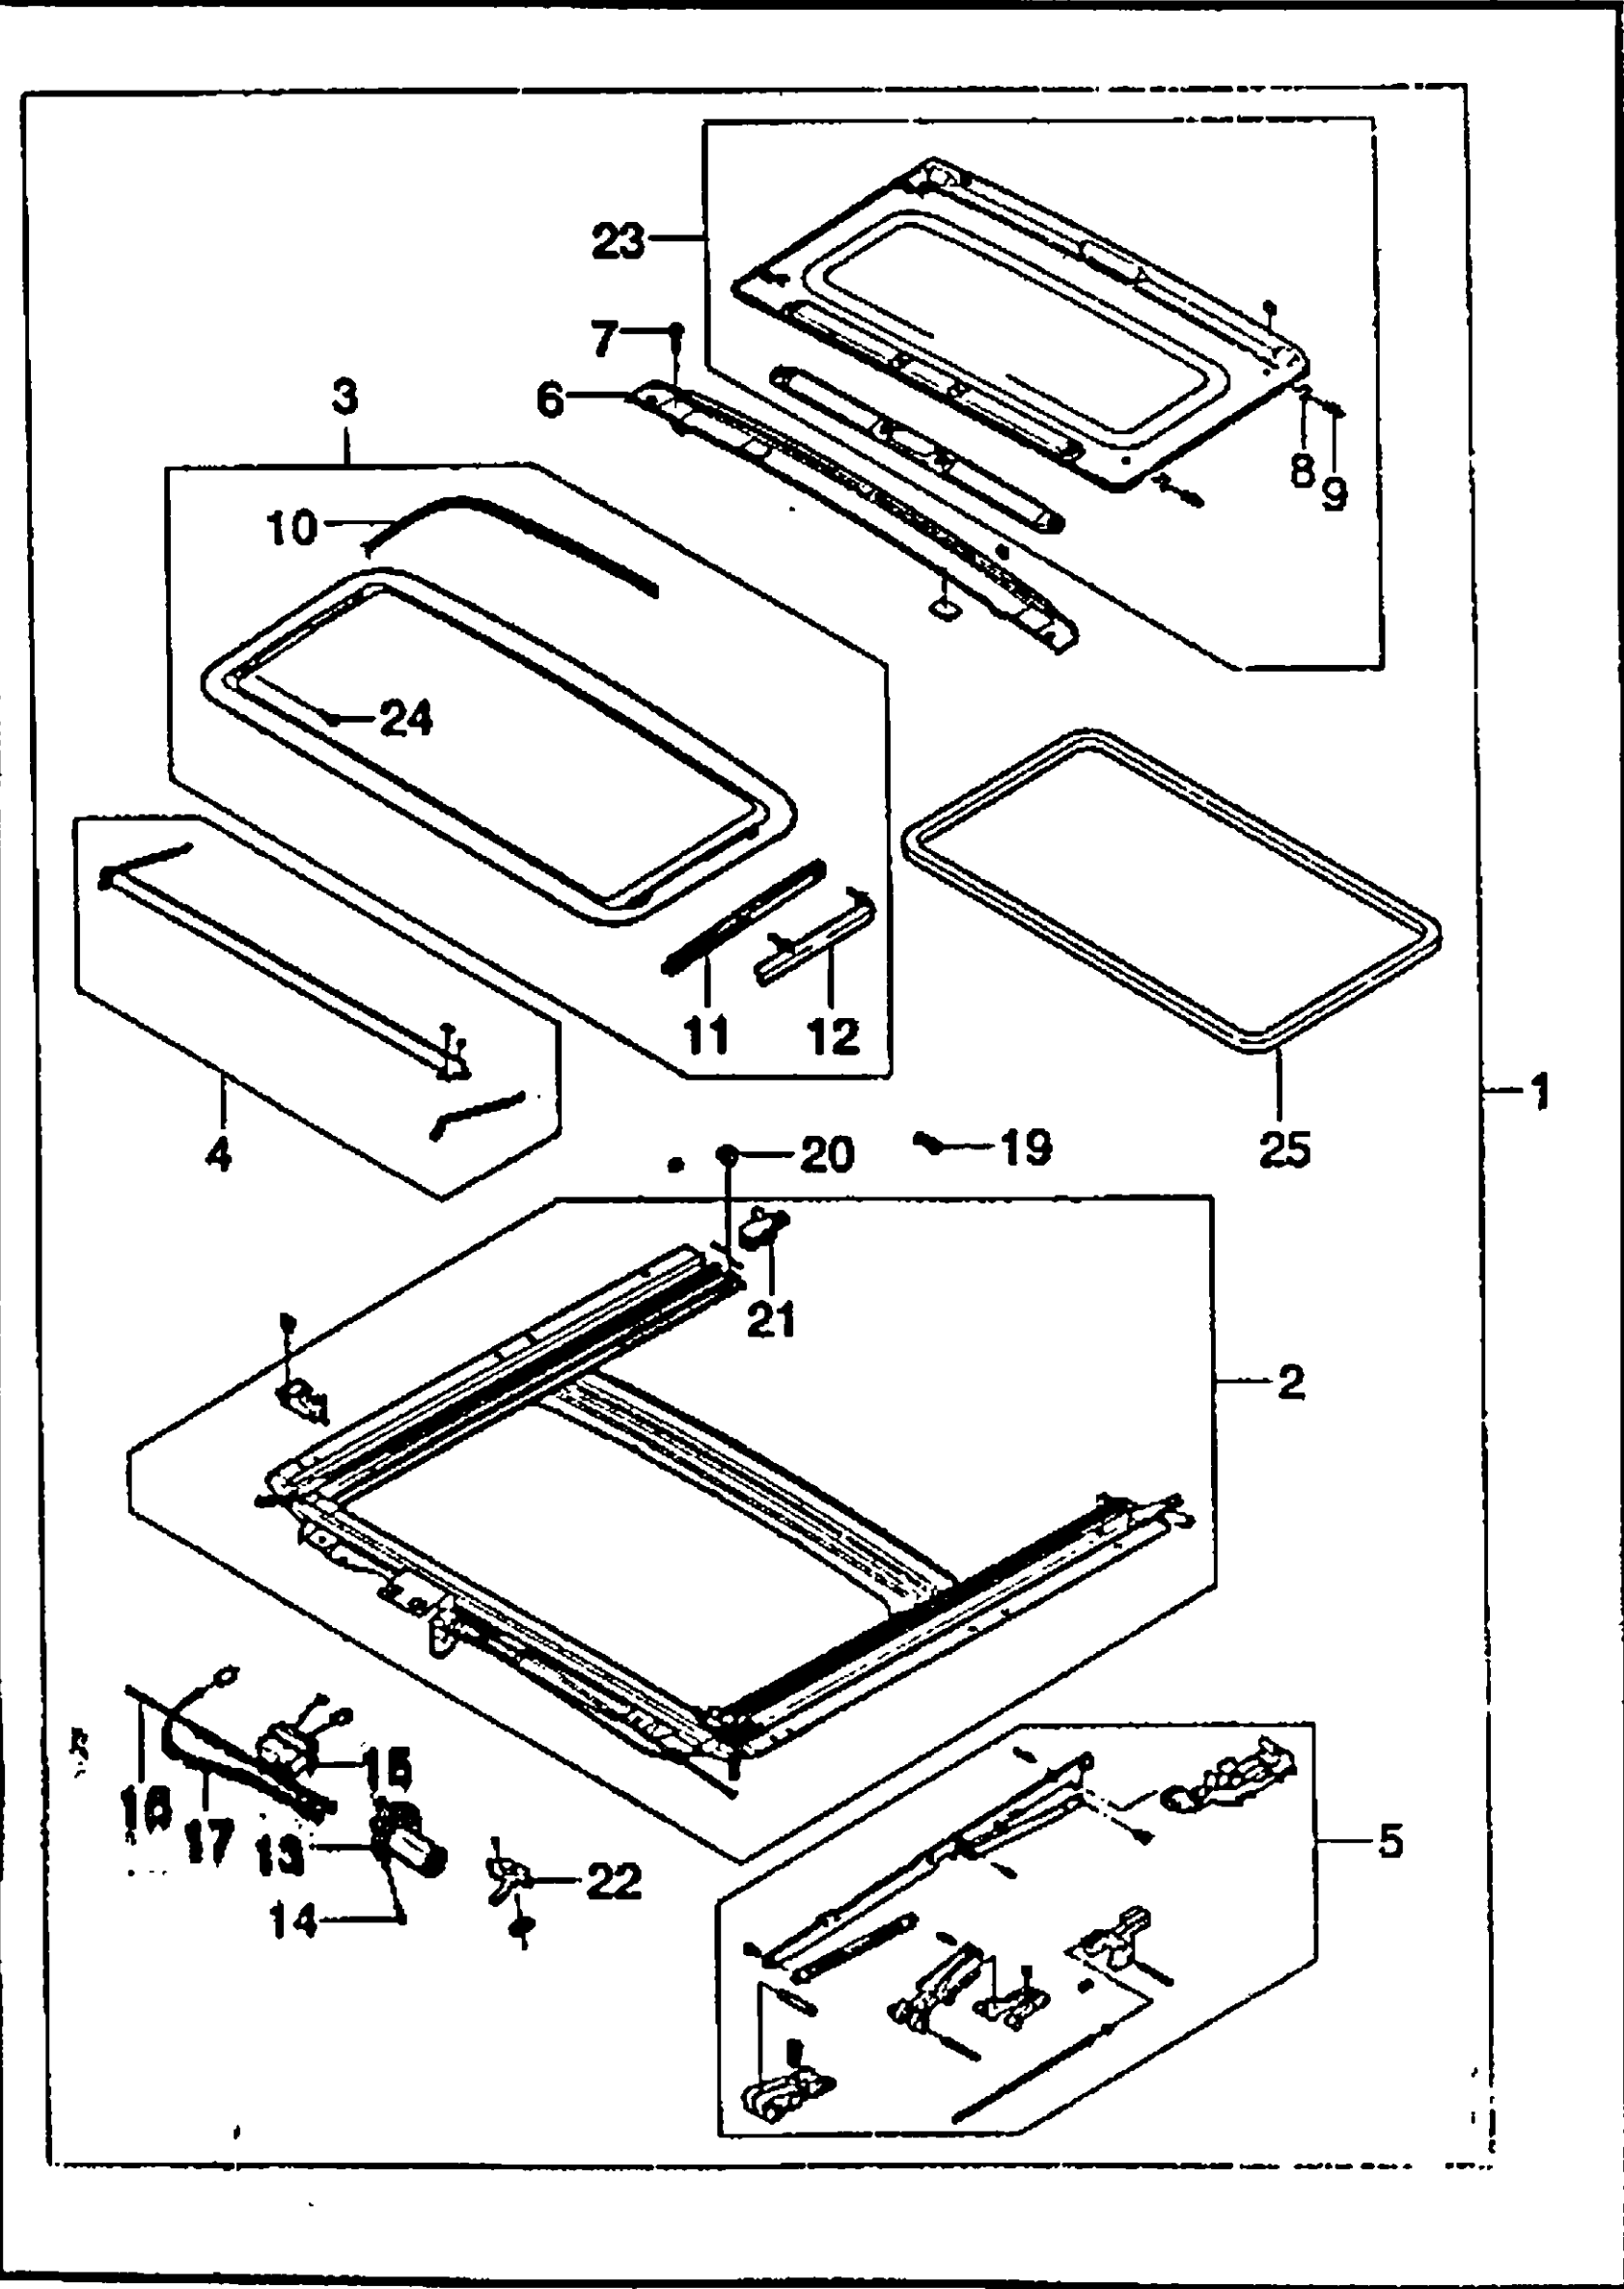


KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S								S	S
	[10]	(E)SEAL-GLASS PANEL (D)DICHTUNG									(F)JOINT (S)SELLO					
	42309750	. . B B B O O O									1					
	[11]	(E)COVER-SIDE,INNER (D)DECKEL									(F)CARTER (S)CUBIERTA					
	42409250	. . B B B O O O									LH 1					
	42409240	. . B B B O O O									RH 1					
	[12]	(E)COVER-SIDE,OUTER (D)DECKEL									(F)CARTER (S)CUBIERTA					
	42409230	. . B B B O O O									LH 1					
	42409220	. . B B B O O O									RH 1					
	[13]	(E)MOTER & DRIVE GEAR A (D)MOTOR-SATZ									(F)ENSEMBLE MOTEUR (S)JUEGO DE MOTOR					
	44249122	. . B B B O O O									1					
	[14]	(E)SCREW (D)SCHRAUBE									(F)VIS (S)TORNILLO					
	22715316	. . B B B O O O									3					
	[15]	(E)BOX A-RELAY (D)RELAISKASTEN									(F)BOITE-RELA (S)CAJA-RELEVADOR					
	44249340	. . B B B O O O									1					
	[16]	(E)TUBE-CABLE GUIDE (D)ROHRLEITUNG									(F)TUYAU OU TUBE (S)TUBO					
	42009562	. . B B B O O O									2					
	[17]	(E)TUBE-DRIVE (D)ROHRLEITUNG									(F)TUYAU OU TUBE (S)TUBO					
	40419390	. . B B B O O O									LH 1					
	40419380	. . B B B O O O									RH 1					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

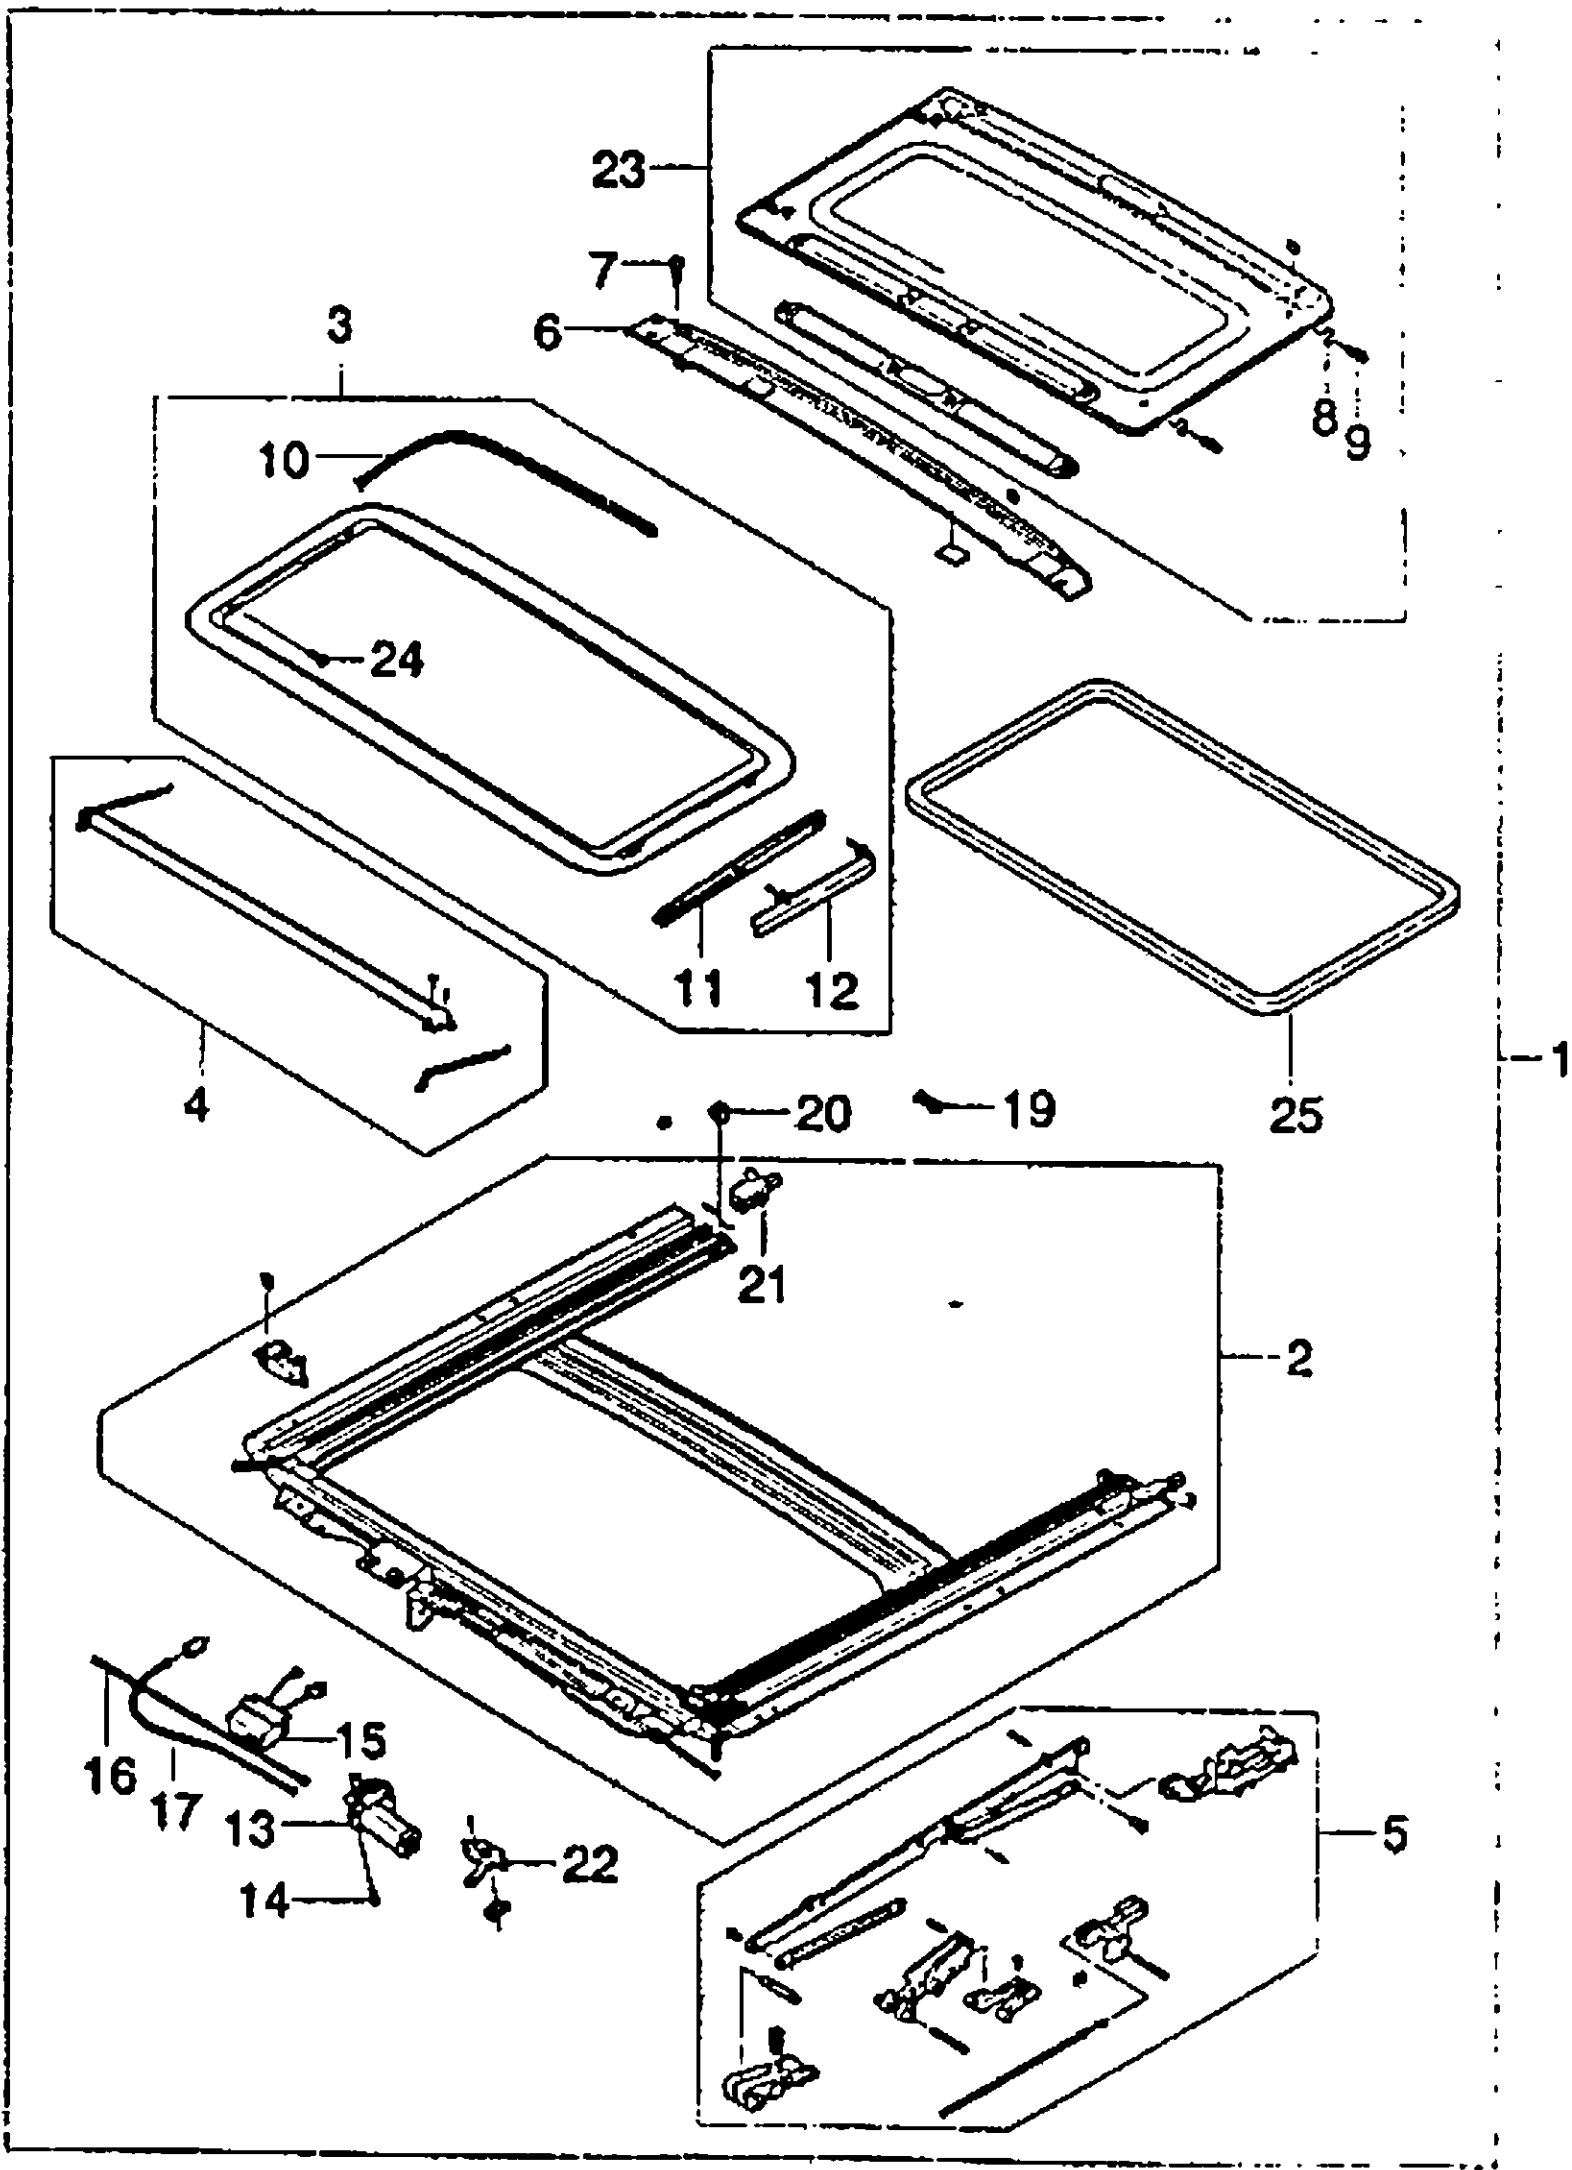

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A	BODY			LEVEL				FROM	TO				
				4 N H	3 H	5 H	S S								S S	S X
	[19]	(E)PLUG-GUIDE,RR (D)STÖPSEL									(F)BOUCHON (S)TAPON					
	42109830	.	.	B	B	B	O	O	O			LH 1				
	42109840	.	.	B	B	B	O	O	O			RH 1				
	[20]	(E)ARRETOIR OU BOUCHON (D)TAPON									(F)STÖPSEL (S)TAPON					
	42309710	.	.	B	B	B	O	O	O			2				
	[21]	(E)DRAINAGE PIECE-RR (D)DRANÄGE HINTERE									(F)DRAINAGE-ARRIERE (S)DRENAJE-TRASERO					
	42409670	.	.	B	B	B	O	O	O			LH 1				
	42409680	.	.	B	B	B	O	O	O			RH 1				
	[22]	(E)BRACKET (D)TRÄGER									(F)SUPPORT (S)SOPORTE					
	41109880	.	.	B	B	B	O	O	O			1				
	[23]	(E)SUNSHADE A (D)SONNENBLLENDE									(F)PARE-SOLEIL (S)PARASOL					
	44044470	.	.	B	B	B	O	O	O			1				
	[24]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO					
	40429881	.	.	B	B	B	O	O	O			4				
	[25]	(E)FINISHER-HEADLINER (D)FERTIGGESENK									(F)FINITION CARNITURE (S)COBERTOR					
	96245679	.	.	B	B	B	O	O	O			1				
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

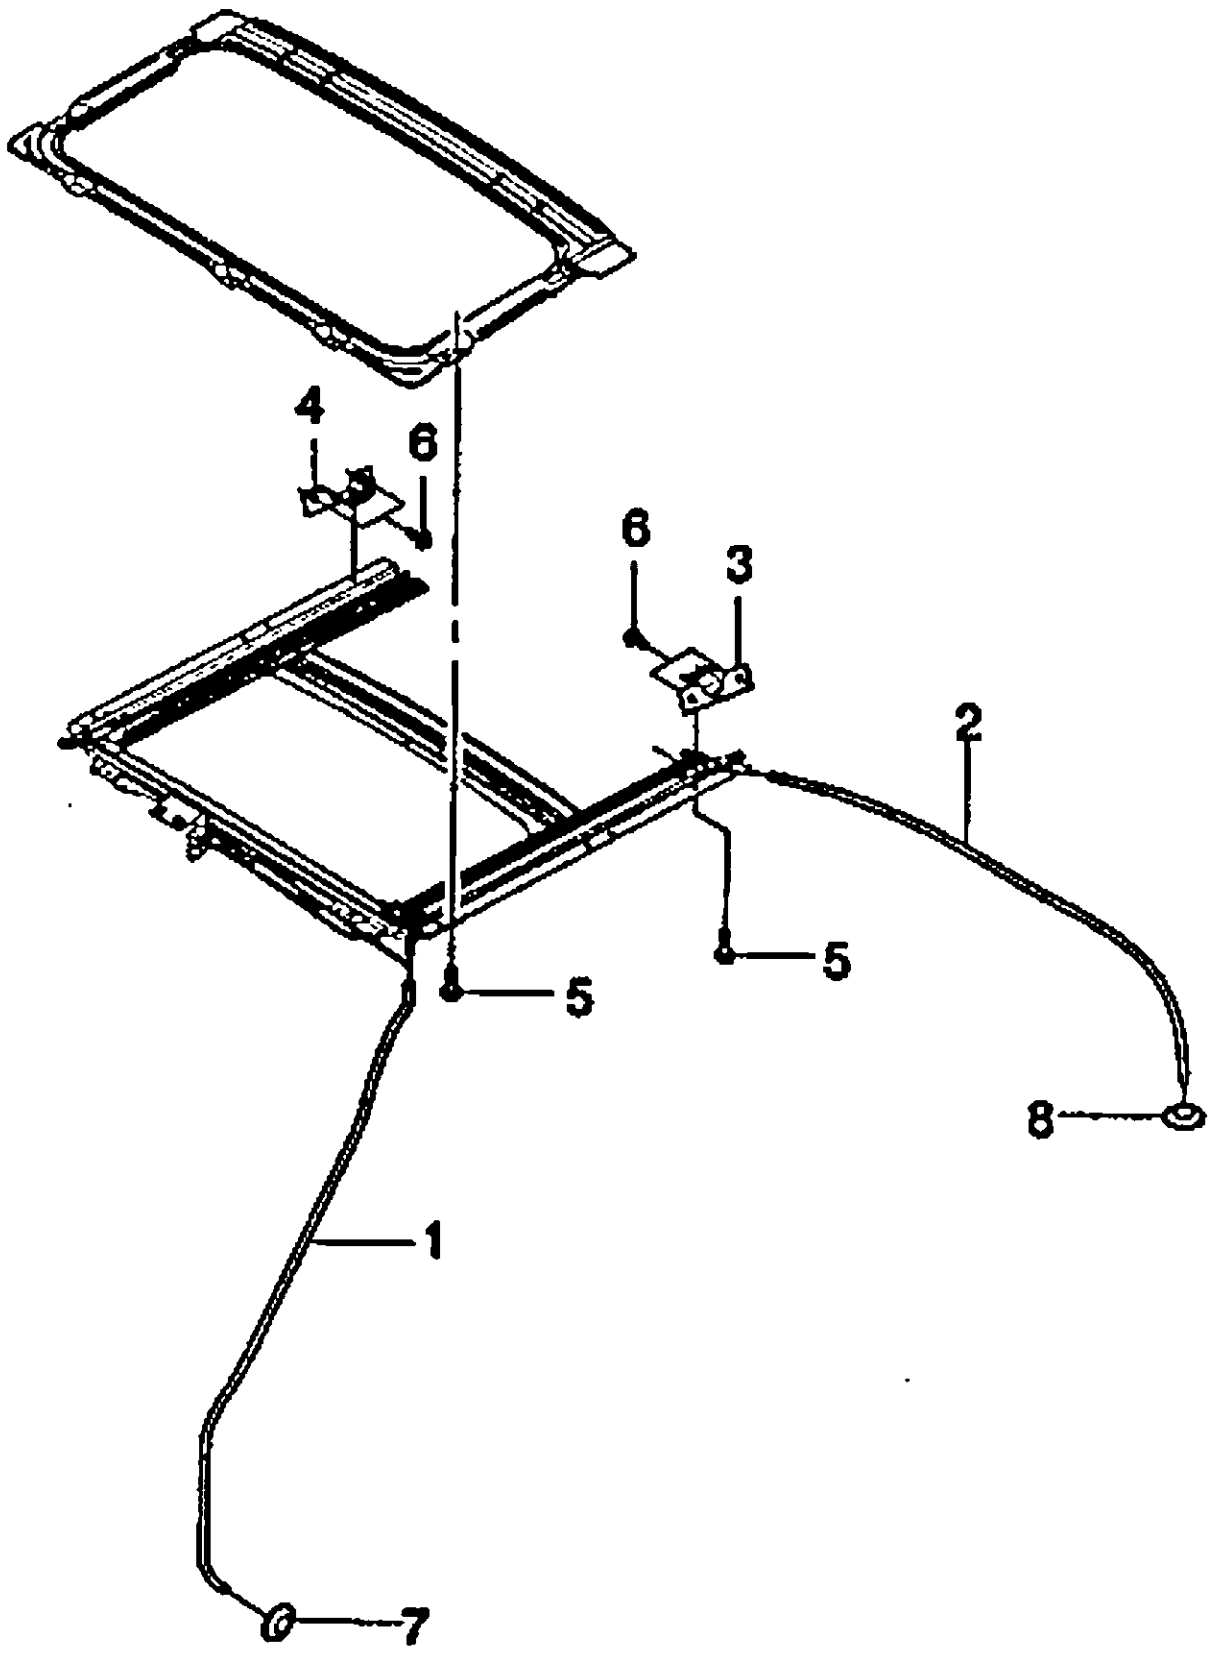

KEY NO.		PART NAME														
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E		
		E N G	T / A N	BODY			LEVEL				FROM	TO				
				4 N	3 H	5 H	S S								S E	S X
	[01]	(E)TUBE-DRAIN (D)ROHRLEITUNG									(F)TUYAU OU TUBE (S)TUBO					
	96240751	. . B B B O O O									2					
	[02]	(E)TUBE-DRAIN (D)ROHRLEITUNG									(F)TUYAU OU TUBE (S)TUBO					
	96240752	. . B . . O O O									2					
	96240753	. . . B B O . O								LH 1						
	96252576	. . . B B O . O								RH 1						
	[03]	(E)BRACKET A-SUN ROOF (D)TRÄGER									(F)SUPPORT (S)SOPORTE					
	96240728	. . B . B O O O								LH 1						
	96240732	. . . B . O . O								LH 1						
	[04]	(E)BRACKET A-SUN ROOF (D)TRÄGER									(F)SUPPORT (S)SOPORTE					
	96240729	. . B . B O O O								RH 1						
	96240733	. . . B . O . O								RH 1						
	[05]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO					
	02717-06163	. . B B B O O O								9	970403					
Y	09118-06012	. . B B B O O O								9	970403					
	[06]	(E)BOLT (D)SCHRAUBE									(F)BOULON (S)PERNO					
	02717-06163	. . B B B O O O								4						
	[07]	(E)GROMMET-DRAIN TUBE,FRONT (D)ÖSE									(F)VIROLE (S)AISLANTE					
	96245671	. . B B B O O O								2						
	[08]	(E)GROMMET-DRAIN TUBE (D)ÖSE									(F)VIROLE (S)AISLANTE					
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE								
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK								

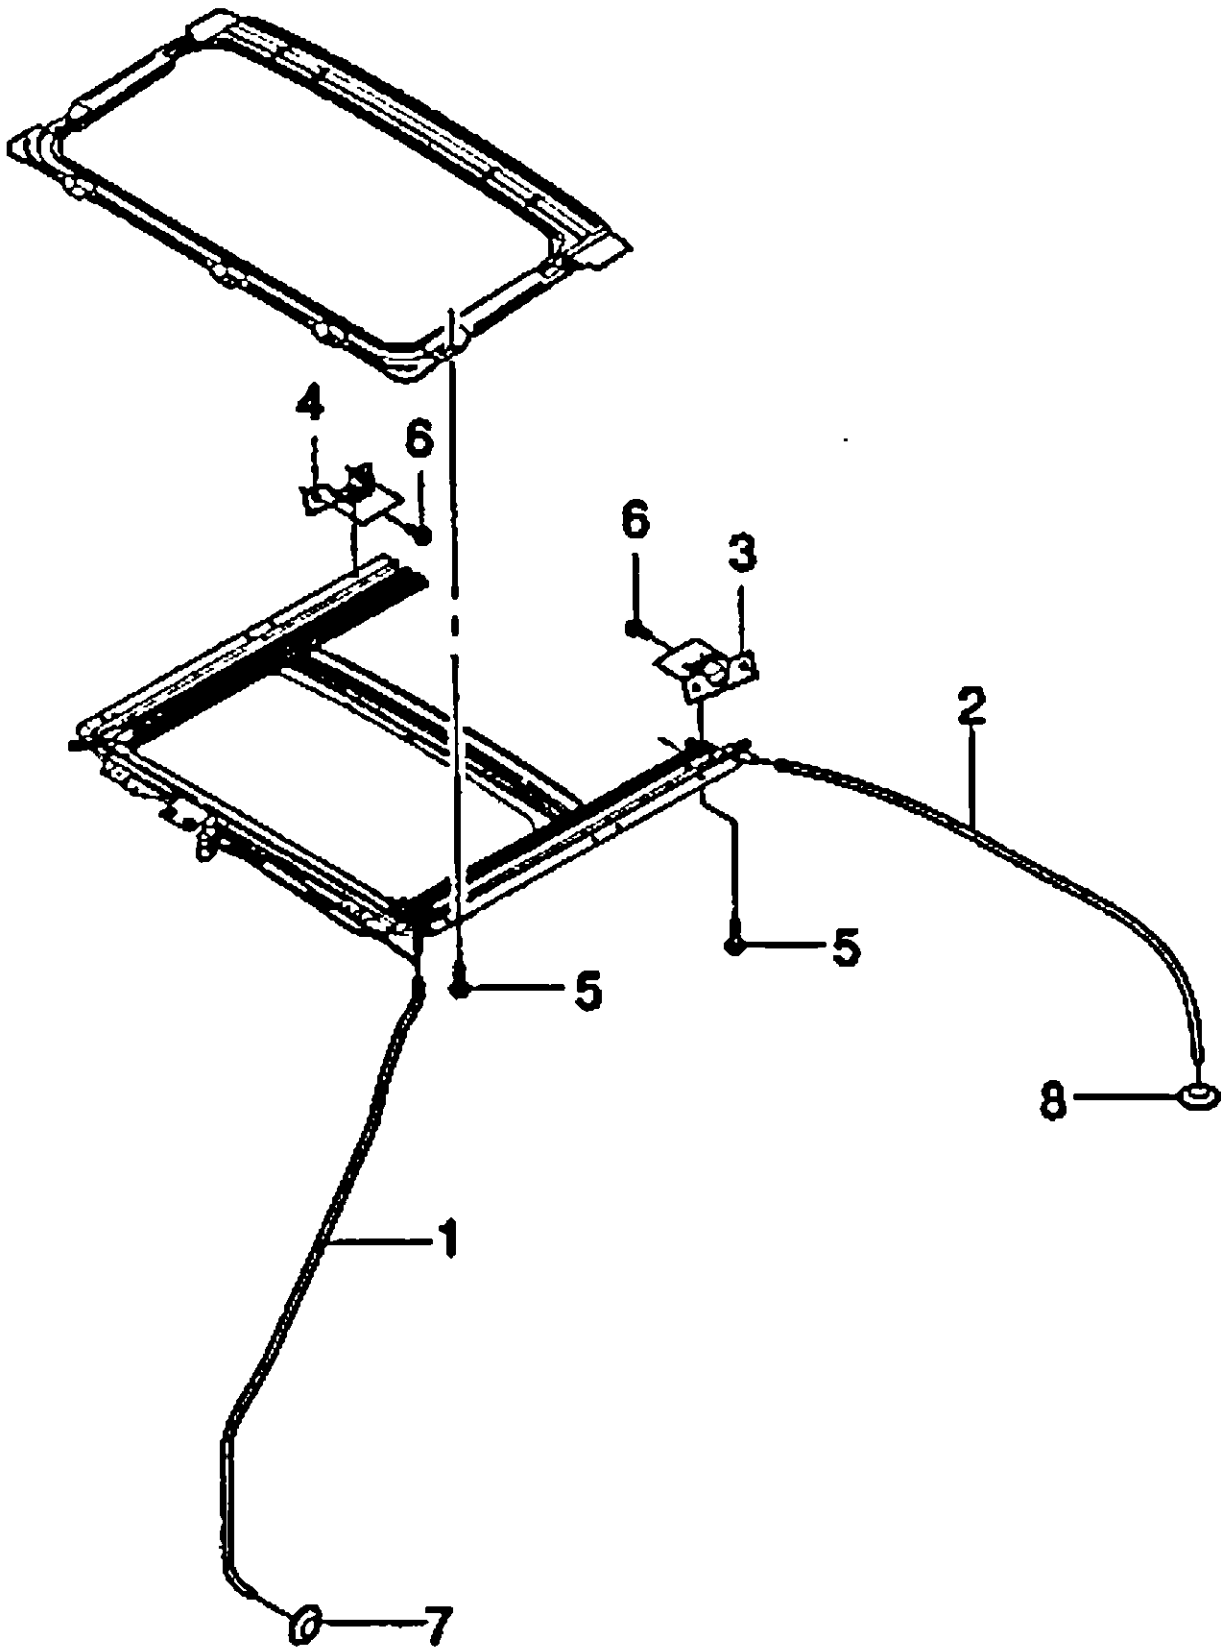

KEY NO.		PART NAME												
I T C	PART NO	MODEL						OPTION	L / R	Q T Y	EFFECTIVE DATE		REMARKS	P / C O D E
		E N G	T / A	BODY			LEVEL							
				4 N	3 H	6 H	S				S E	S X		
	96239613	.	.	B	B	B	O	O	O		2			
ENG(ENGINE)		T/A(TRANSAXLE)						BODY TYPE						
Y = 1.5SOHC 6 = 1.6DOHC . = COMMON		M = MANUAL T/A A = AUTOMATIC T/A . = COMMON						4 N = 4 DOOR NOTCHBACK 3 H = 3 DOOR HATCHBACK 5 H = 5 DOOR HATCHBACK						