FORD's HIGH CURRENT ACCESSORY wire connection: Requires (1) #775 Relay

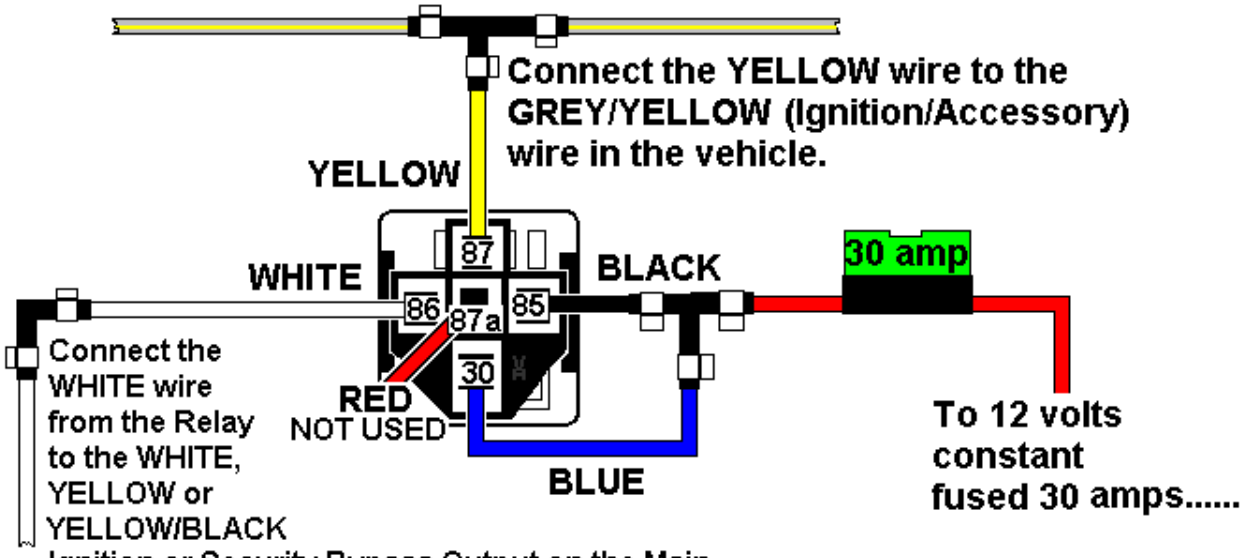

Ignition or Security Bypass Output on the Main harness, if you are connecting this relay to a unit that has a 4-Relay Pack harness, tie the WHITE wire from the # 775 relay into the thin WHITE/BLACK wire in the 3-Pin harness that is coming from the Relay pack harness that plugs into the Main Remote Starter unit.