PARKING BRAKE CABLE

COMPONENTS

PB

FF:

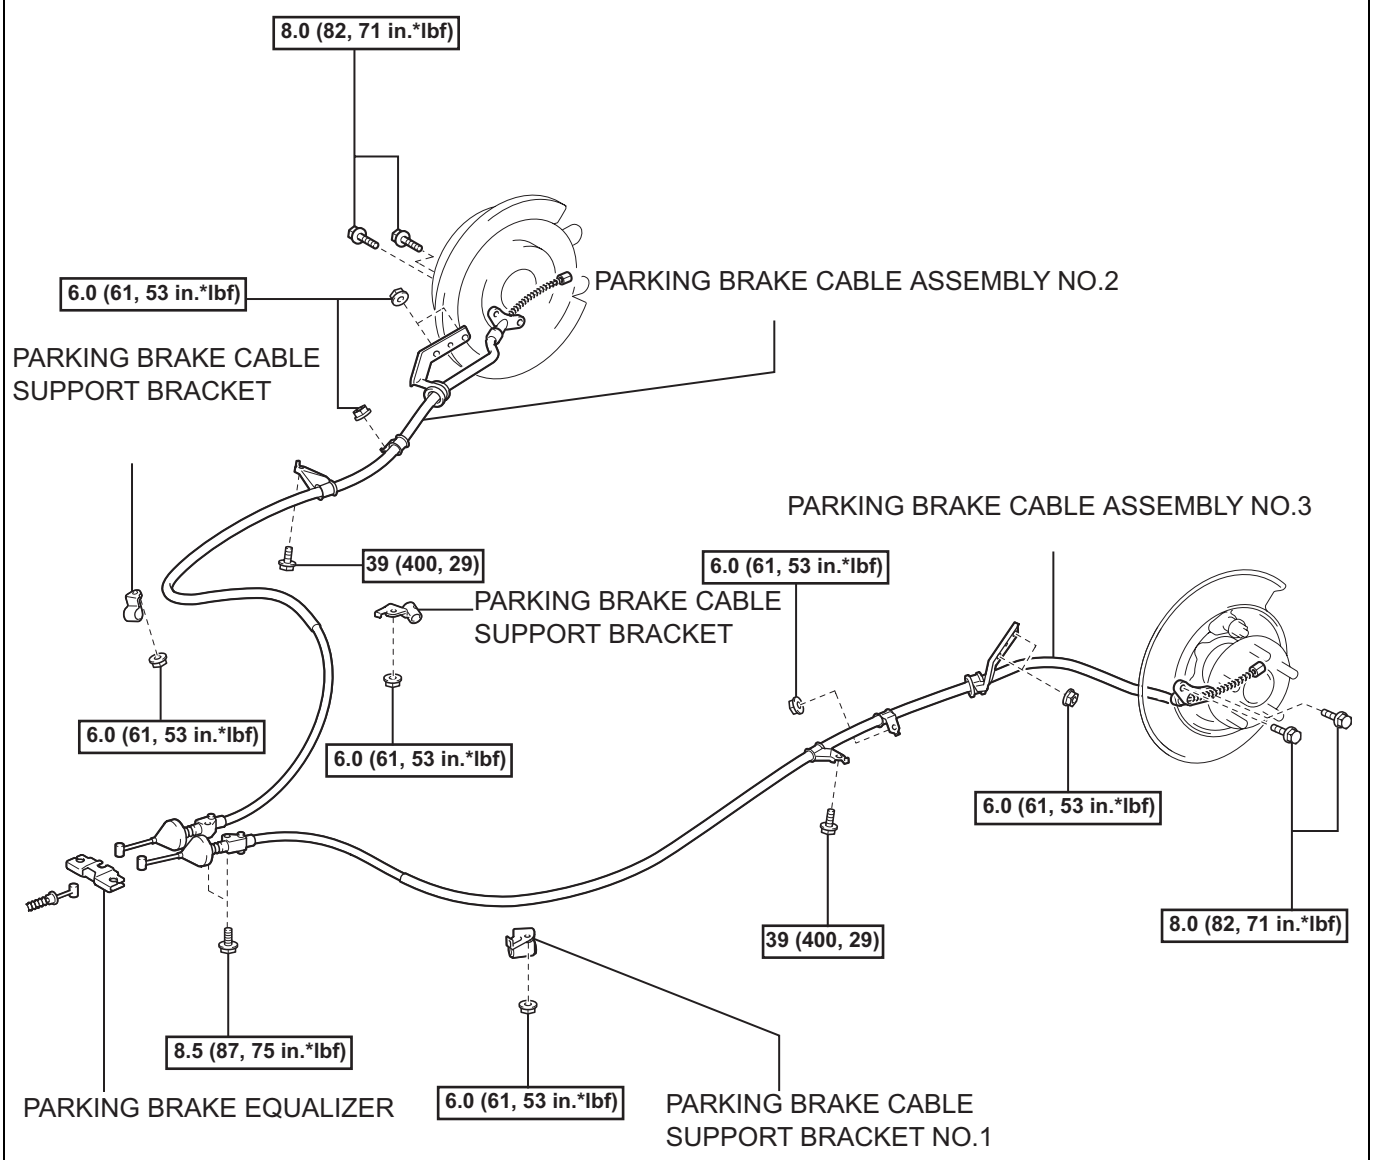

N*m (kgf*cm, ft.*lbf) : Specified torque

P

C118792E01

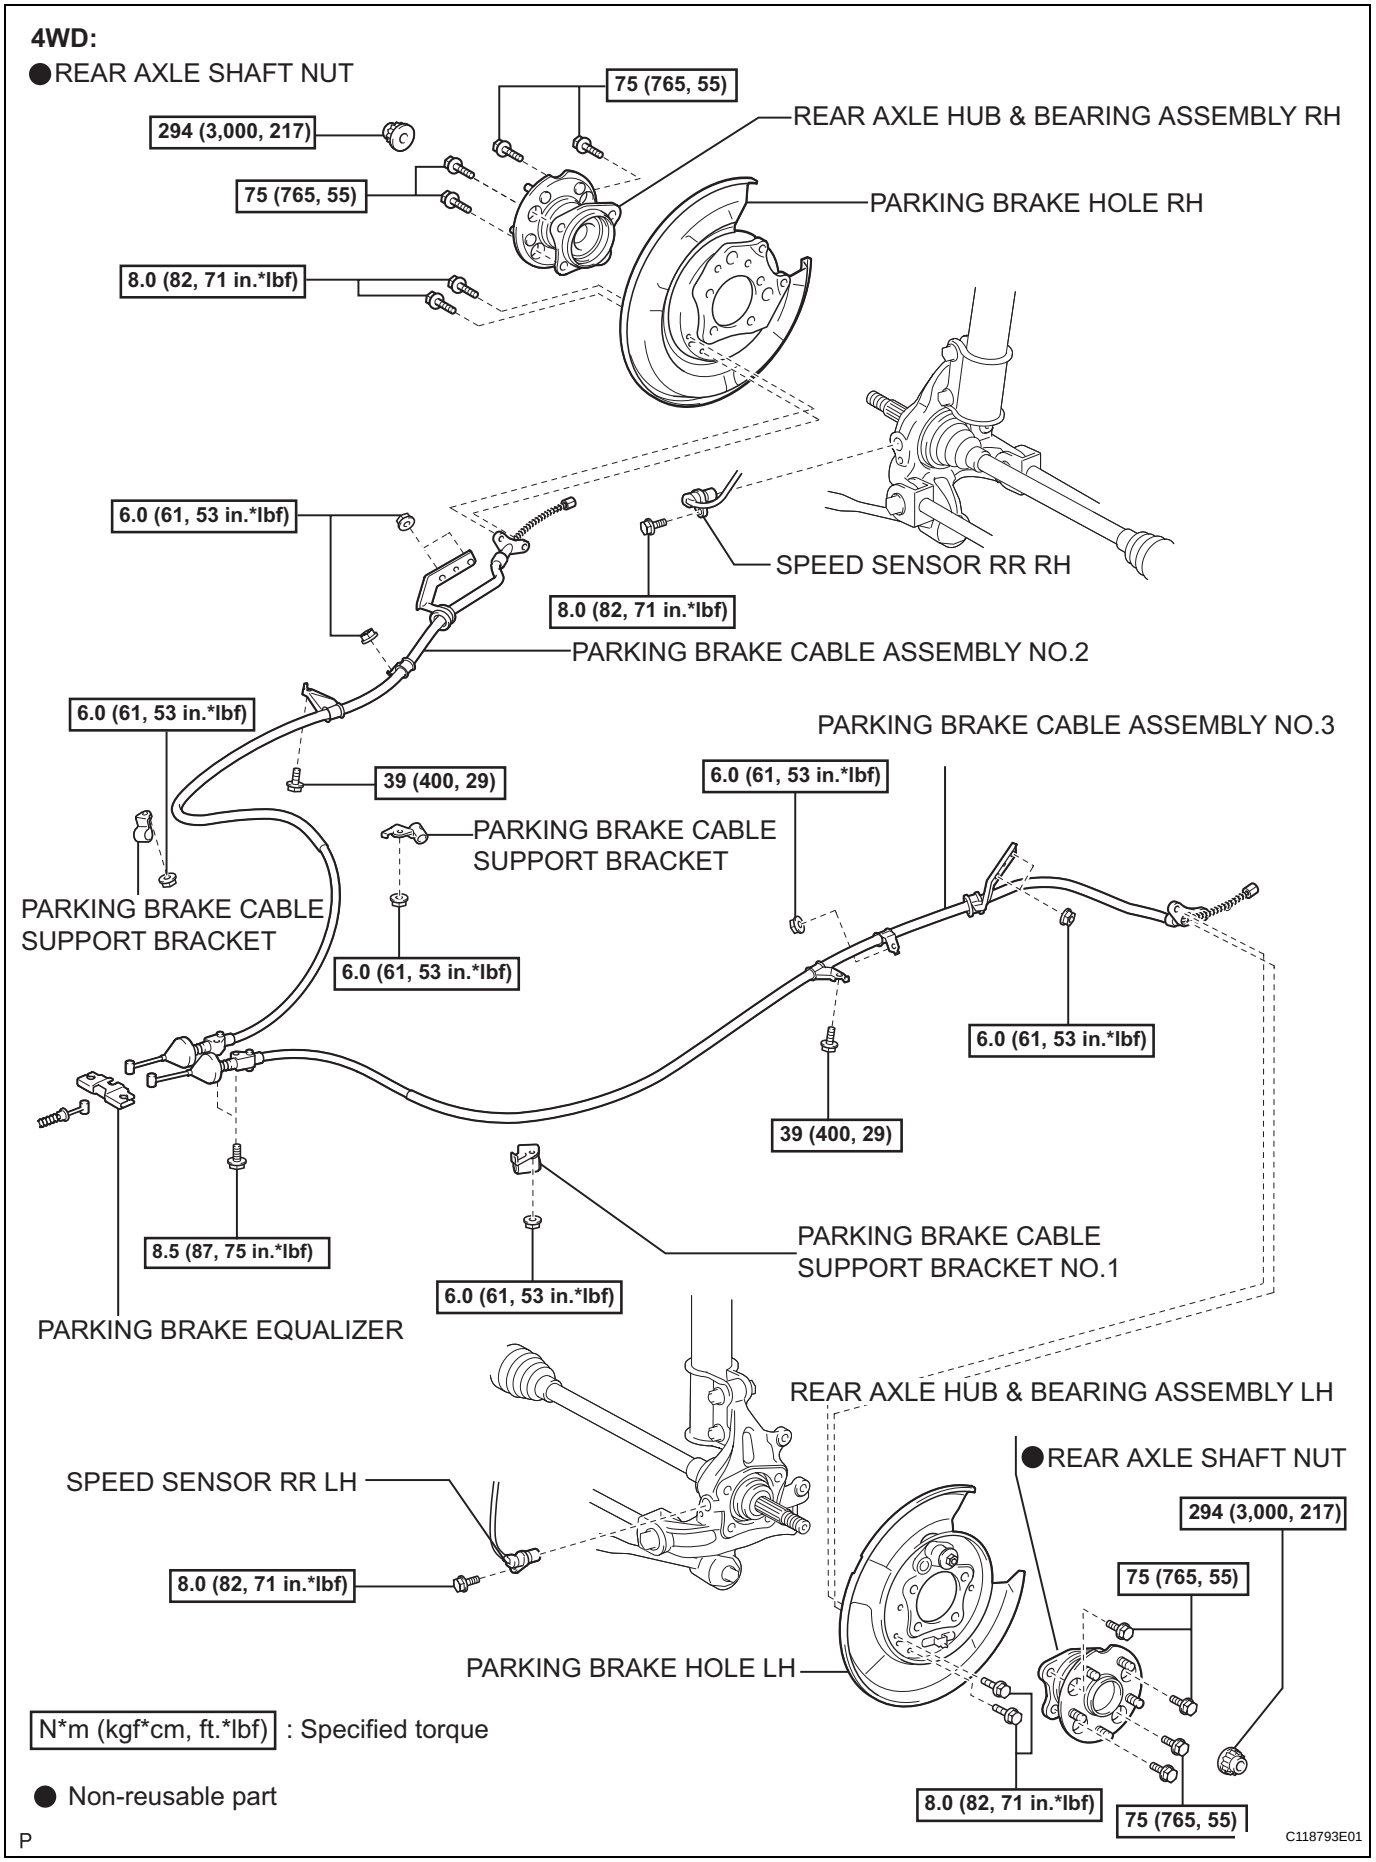
4WD:
●REAR AXLE SHAFT NUT
75 (765, 55)
294 (3,000, 217)
REAR AXLE HUB & BEARING ASSEMBLY RH
75 (765, 55)
PARKING BRAKE HOLE RH
8.0 (82, 71 in.*lbf)
6.0 (61, 53 in.*lbf)
SPEED SENSOR RR RH
8.0 (82, 71 in.*lbf)
PARKING BRAKE CABLE ASSEMBLY NO.2
6.0 (61, 53 in.*lbf)
PARKING BRAKE CABLE ASSEMBLY NO.3
39 (400, 29)
6.0 (61, 53 in.*lbf)
PARKING BRAKE CABLE SUPPORT BRACKET
PARKING BRAKE CABLE SUPPORT BRACKET
6.0 (61, 53 in.*lbf)
6.0 (61, 53 in.*lbf)
39 (400, 29)
8.5 (87, 75 in.*lbf)
PARKING BRAKE CABLE SUPPORT BRACKET NO.1
6.0 (61, 53 in.*lbf)
PARKING BRAKE EQUALIZER
REAR AXLE HUB & BEARING ASSEMBLY LH
●REAR AXLE SHAFT NUT
SPEED SENSOR RR LH
294 (3,000, 217)
75 (765, 55)
8.0 (82, 71 in.*lbf)
PARKING BRAKE HOLE LH
8.0 (82, 71 in.*lbf)
75 (765, 55)
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
P
C118793E01