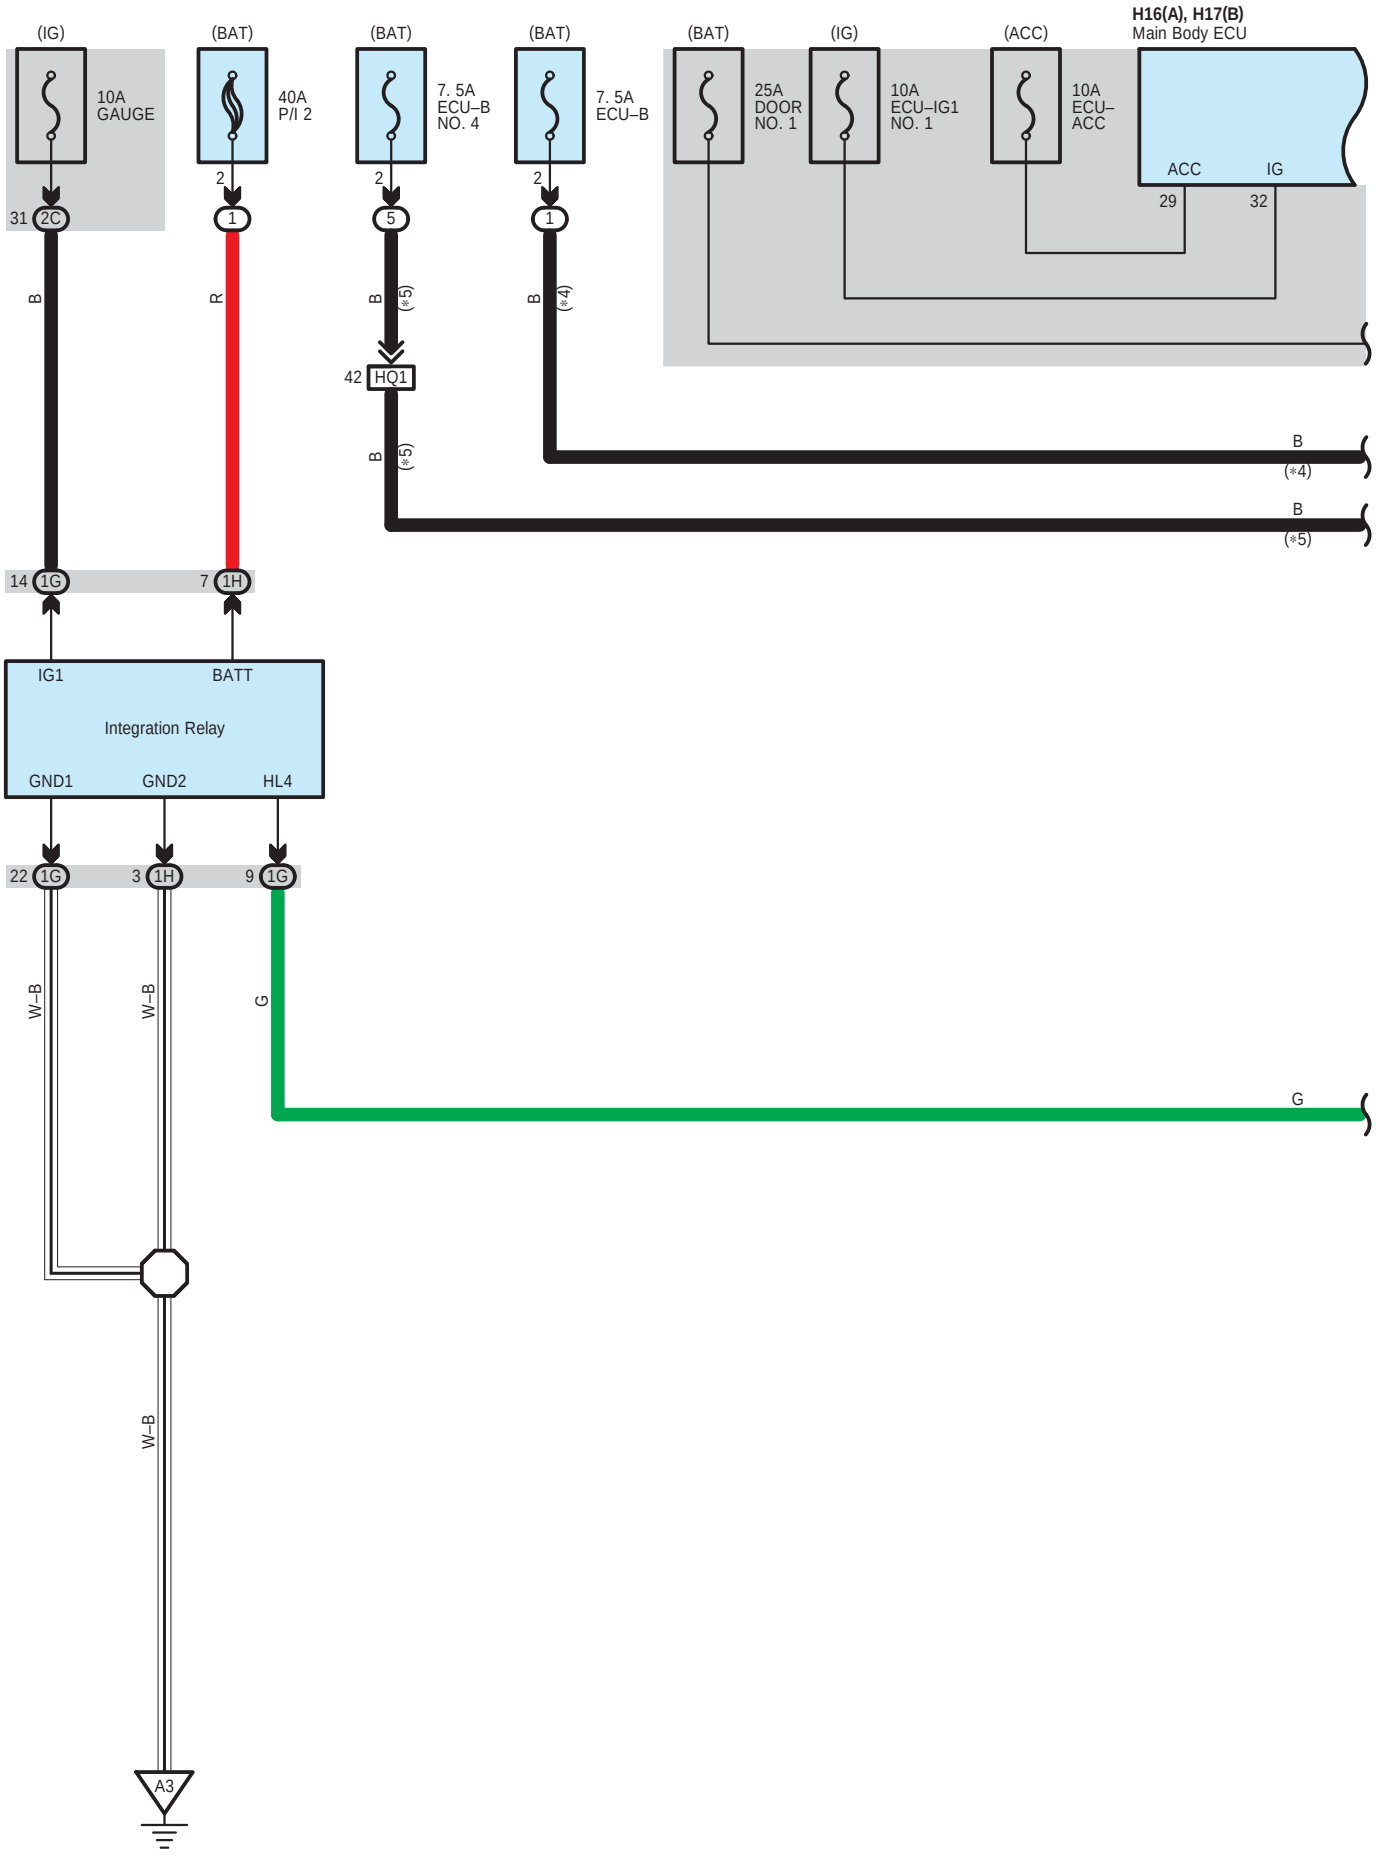
(IG)
10A
GAUGE
(BAT)
40A
P/I 2
(BAT)
7. 5A
ECU–B
NO. 4
(BAT)
7. 5A
ECU–B
(BAT)
25A
DOOR
NO. 1
(IG)
10A
ECU–IG1
NO. 1
(ACC)
10A
ECU–
ACC
H16(A), H17(B)
Main Body ECU
ACC
IG
29
32
31 2C
2
1
2
5
2
1
B
R
B
(*5)
B
(*4)
42 HQ1
B
(*5)
B
(*4)
B
(*5)
14 1G
7 1H
IG1
BATT
Integration Relay
GND1
GND2
HL4
22 1G
3 1H
9 1G
W–B
W–B
G
G
W–B
A3

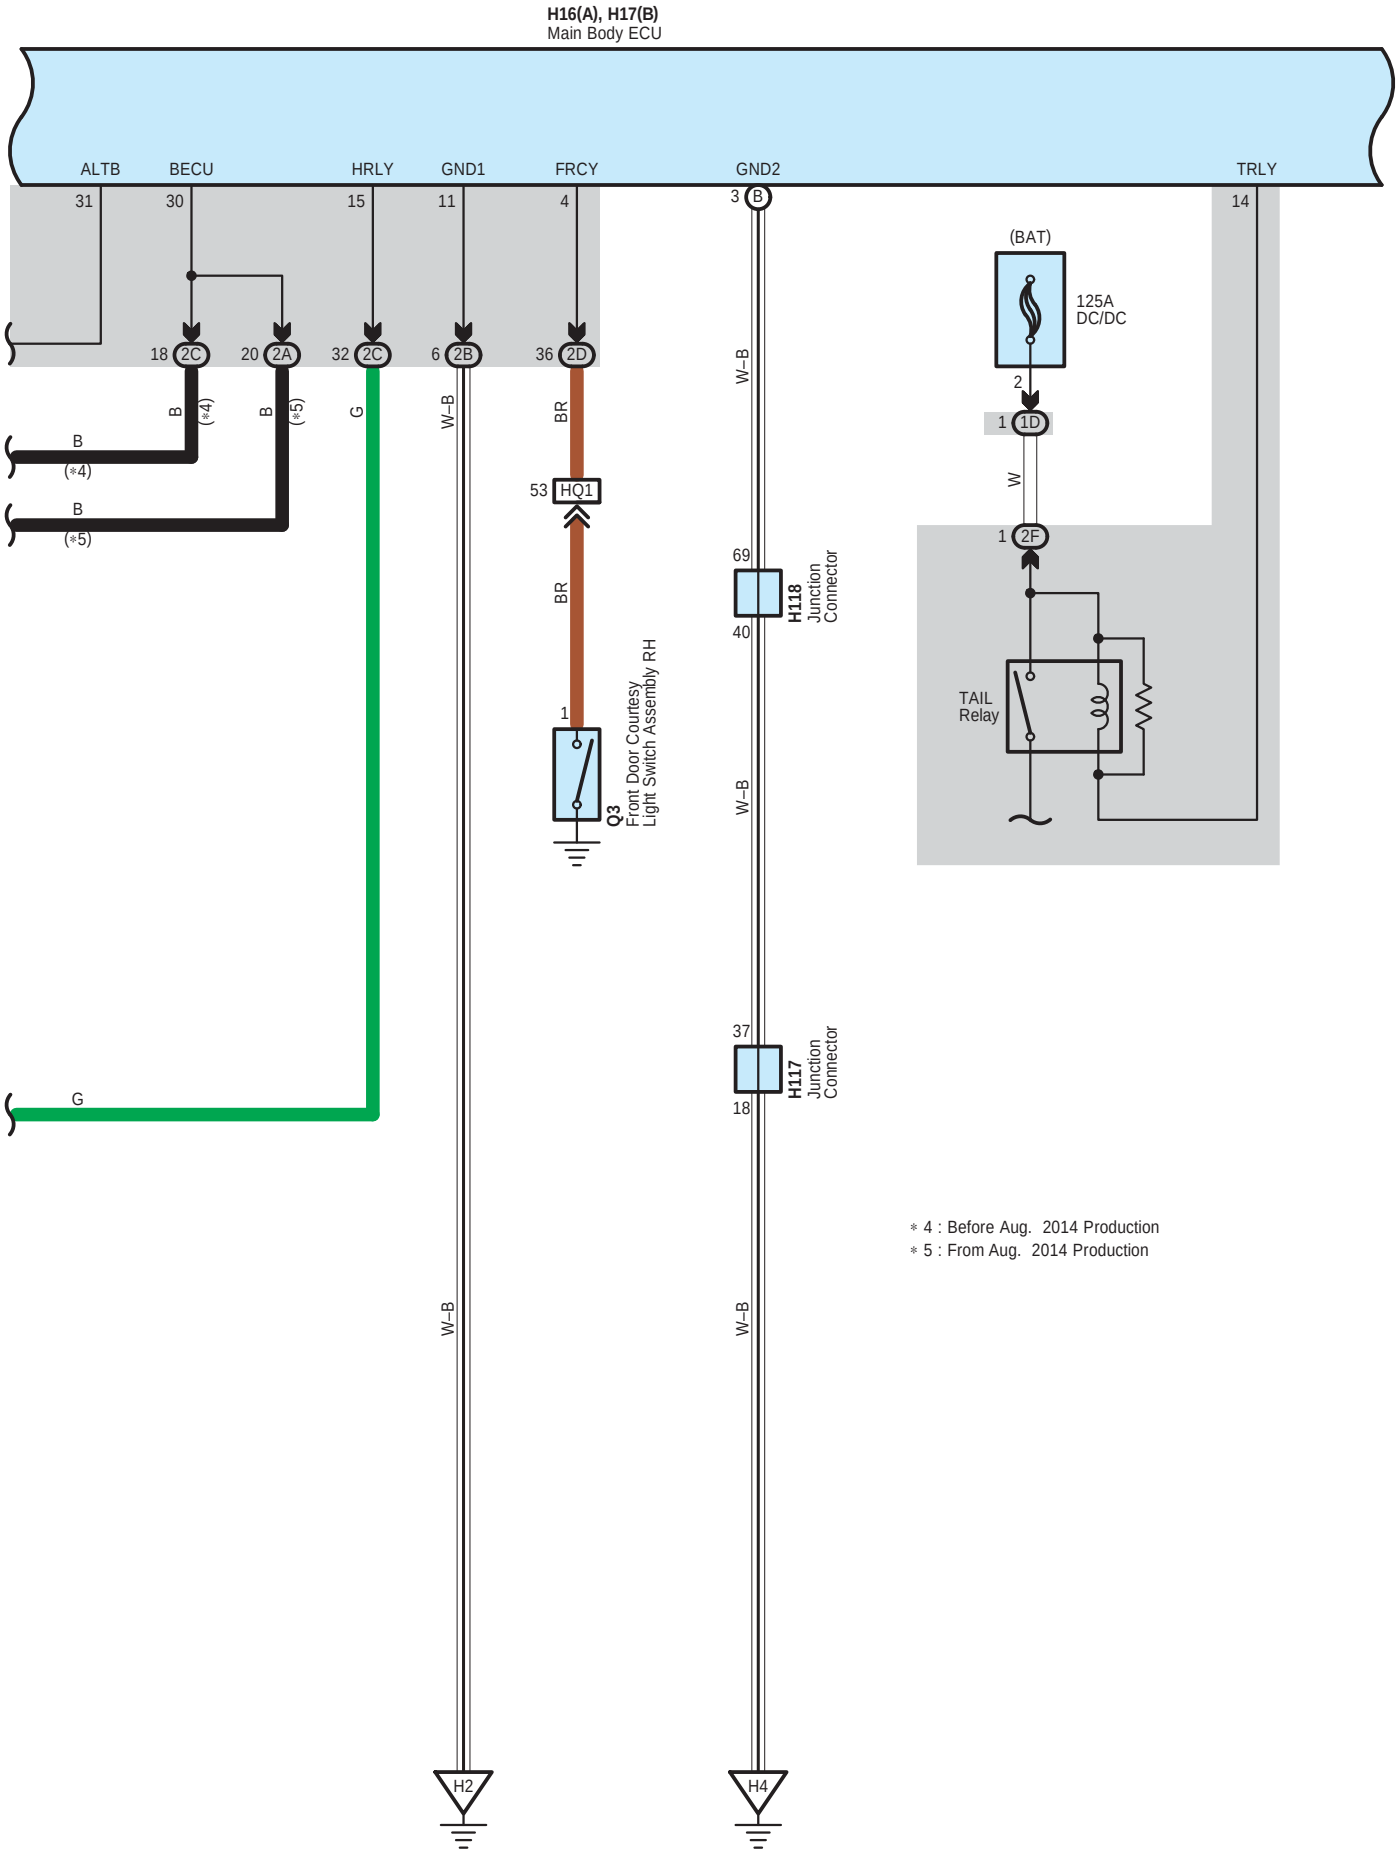


＊4 : Before Aug. 2014 Production
＊5 : From Aug. 2014 Production

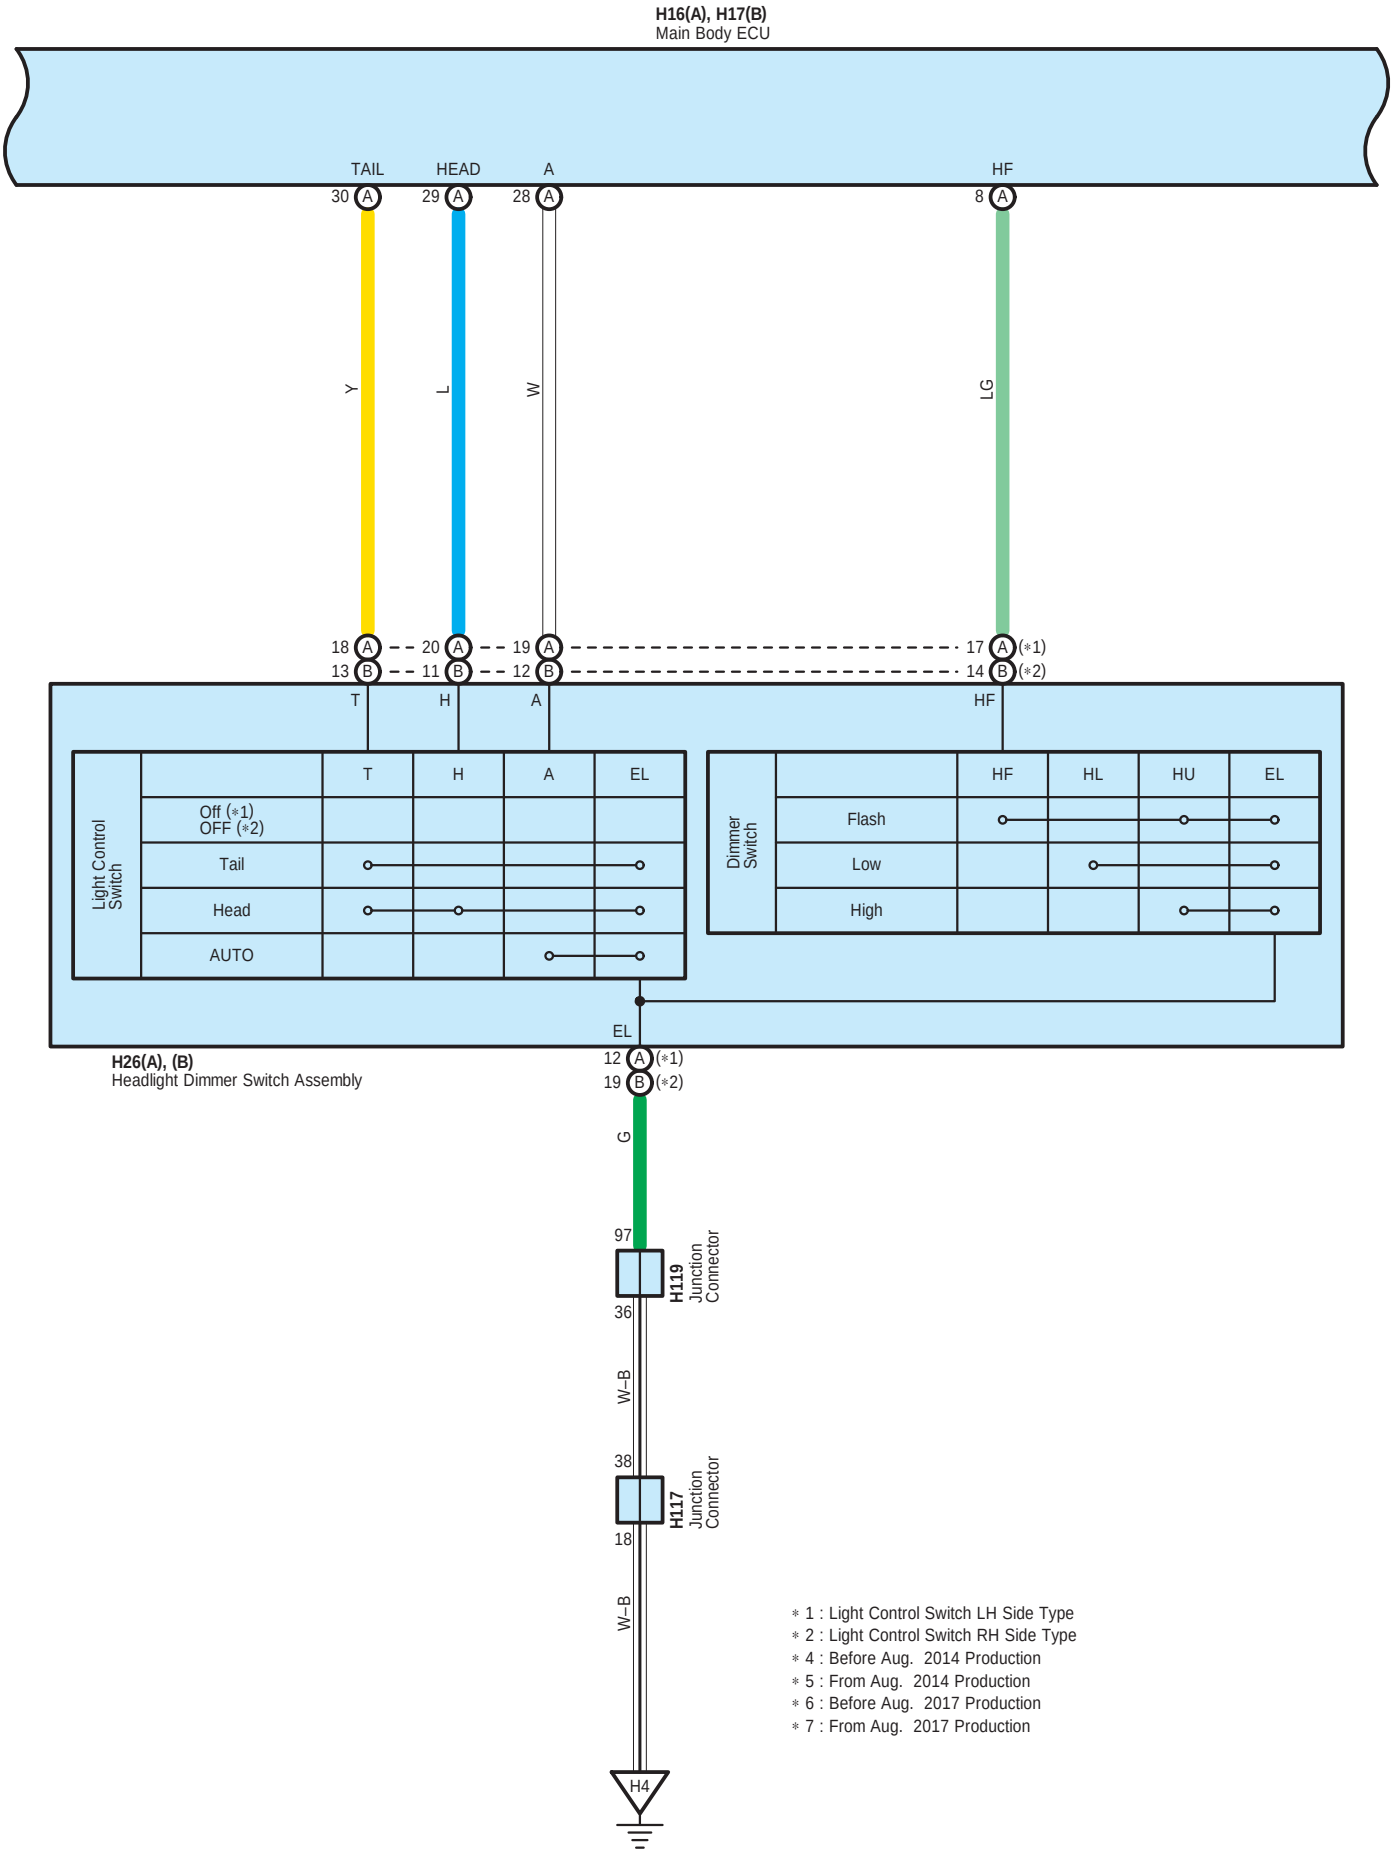


* 1 : Light Control Switch LH Side Type
* 2 : Light Control Switch RH Side Type
* 4 : Before Aug. 2014 Production
* 5 : From Aug. 2014 Production
* 6 : Before Aug. 2017 Production
* 7 : From Aug. 2017 Production

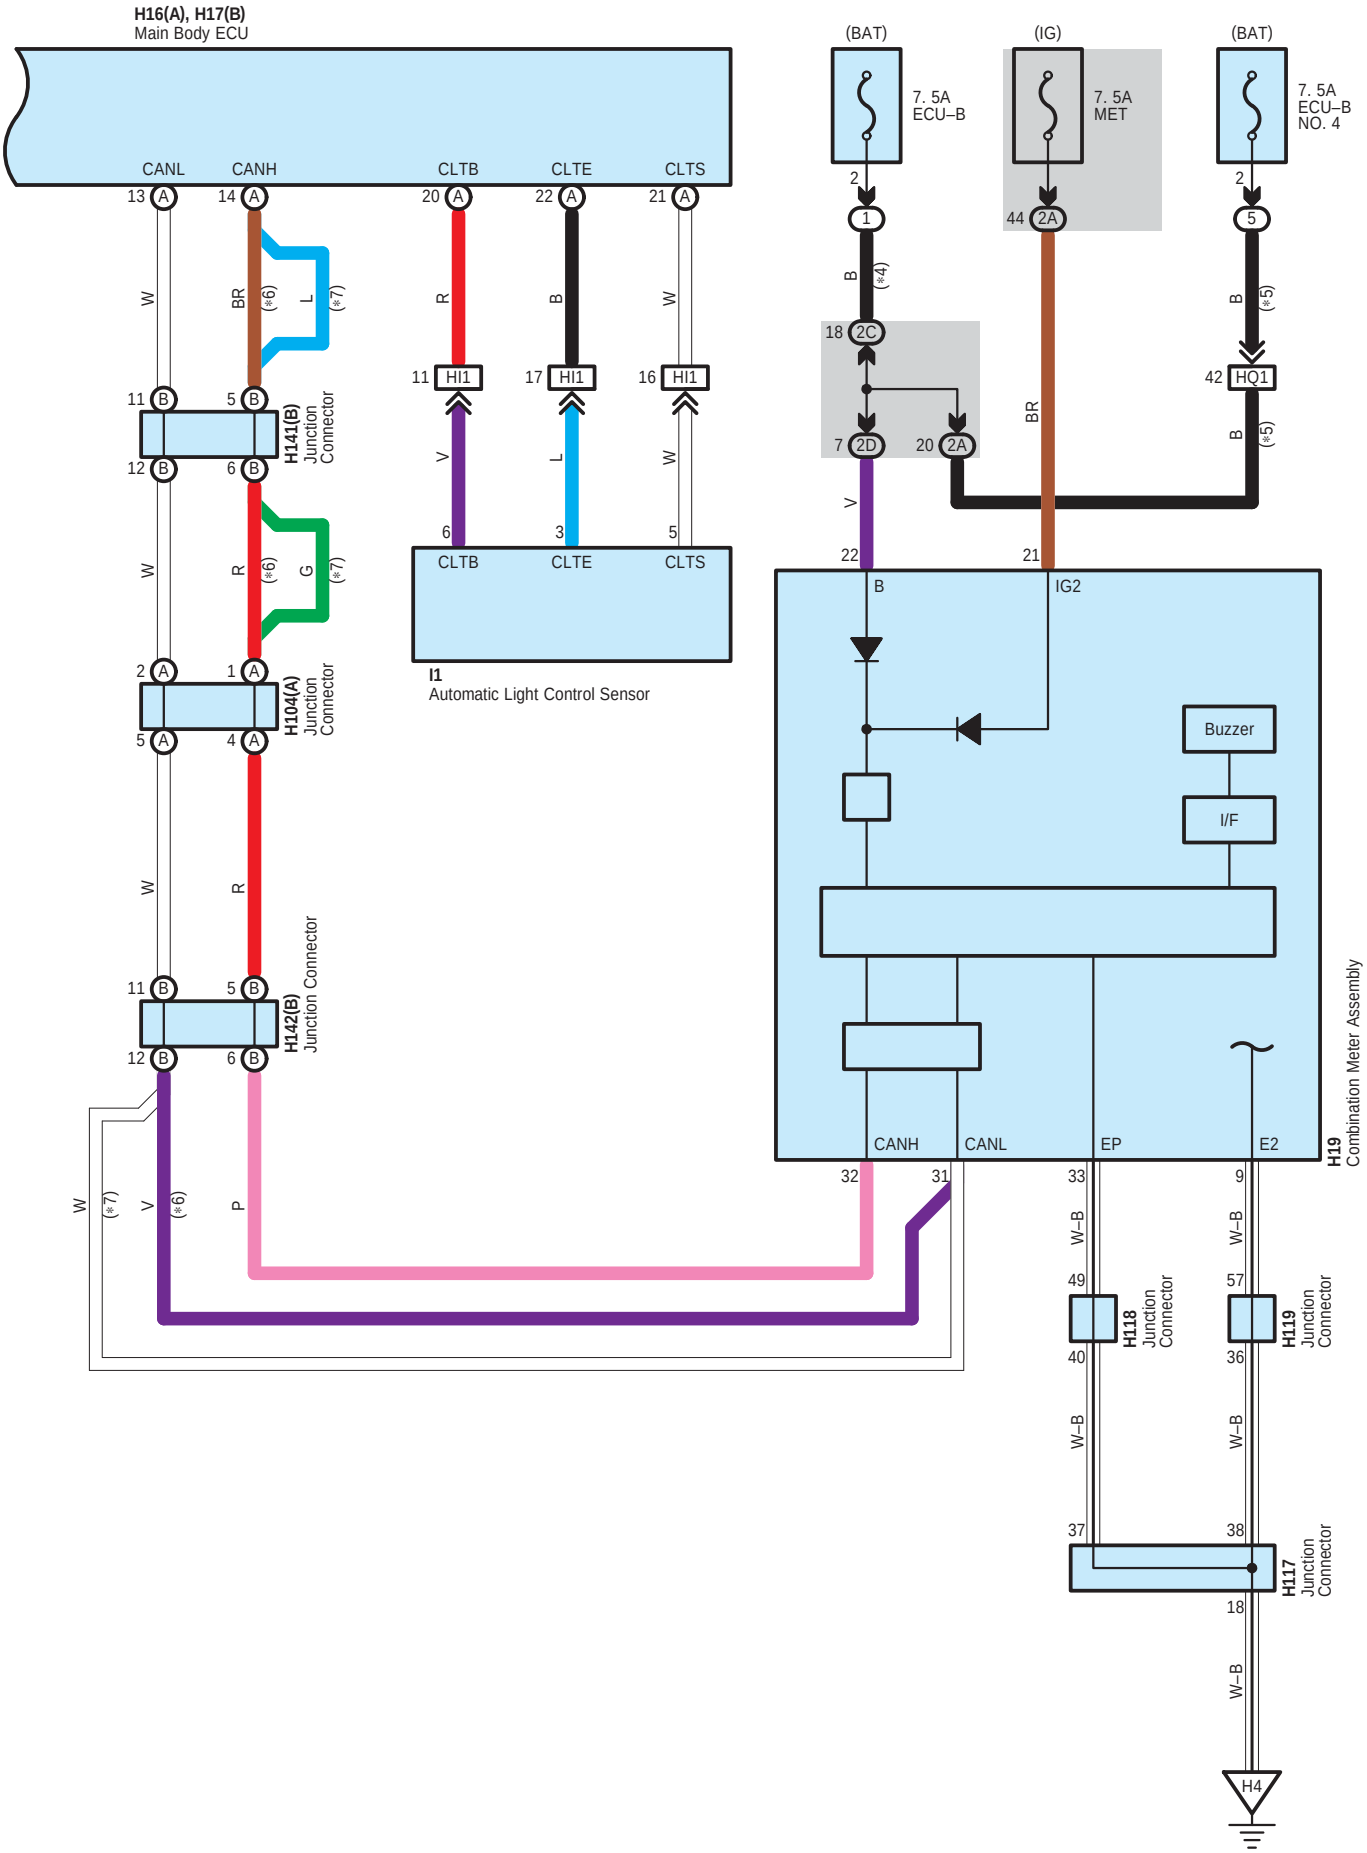
H16(A), H17(B)
Main Body ECU
CANL
CANH
CLTB
CLTE
CLTS
(BAT)
(IG)
(BAT)
7. 5A
ECU–B
7. 5A
MET
7. 5A
ECU–B
NO. 4
H141(B)
Junction
Connector
H104(A)
Junction
Connector
H142(B)
Junction Connector
I1
Automatic Light Control Sensor
HI1
HQ1
Buzzer
I/F
B
IG2
CANH
CANL
EP
E2
H19
Combination Meter Assembly
H118
Junction
Connector
H119
Junction
Connector
H117
Junction
Connector
H4

H 16
Black

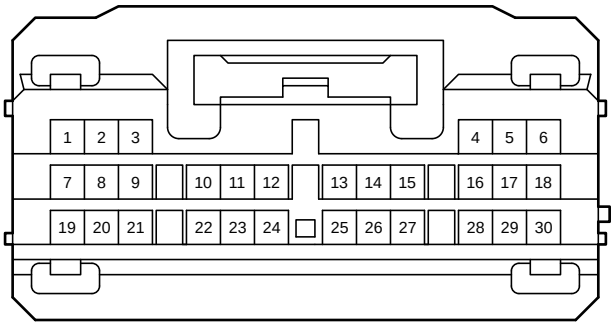


H 17
White

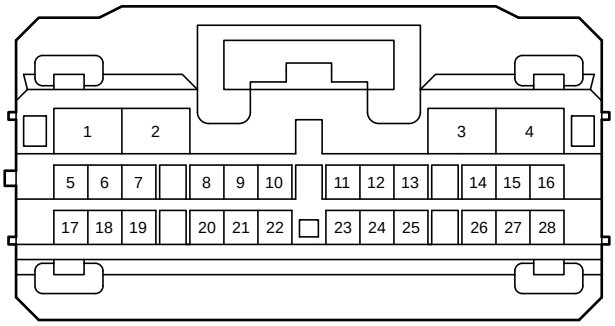


H 19
White

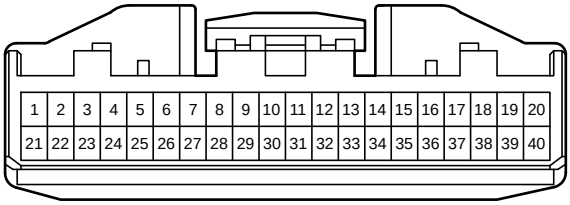


H 26
Black

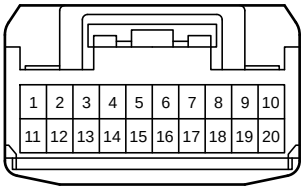


H104
White

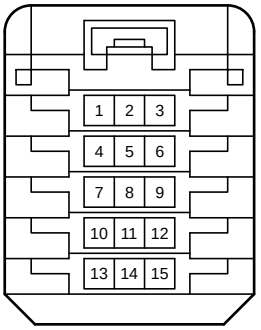


H117
White

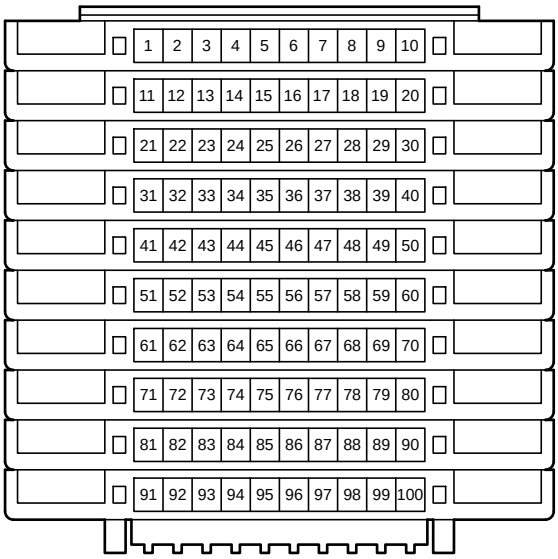


H118
White

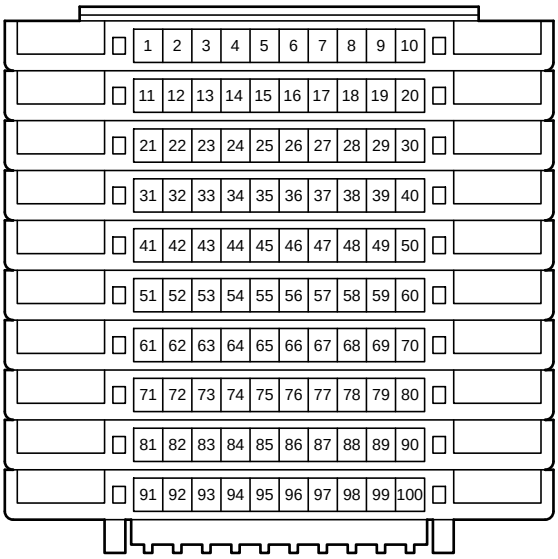

H119
White

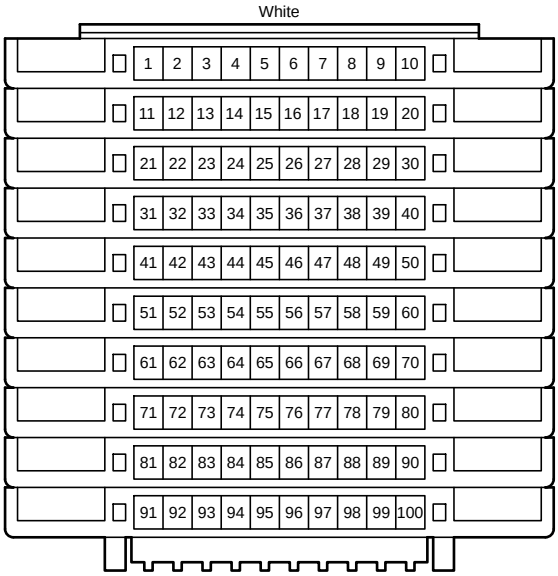


H141
Gray

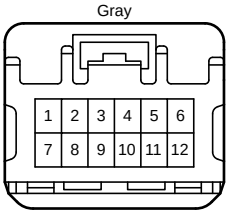


H142
Blue

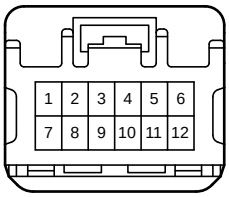


I 1
Blue

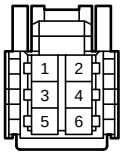


Q 3
White

1D
Black

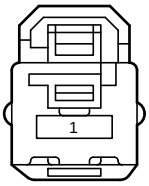


1G
White

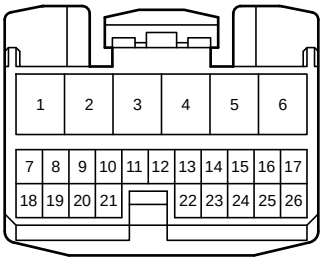


1H
White

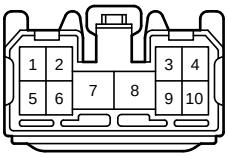


2A
White

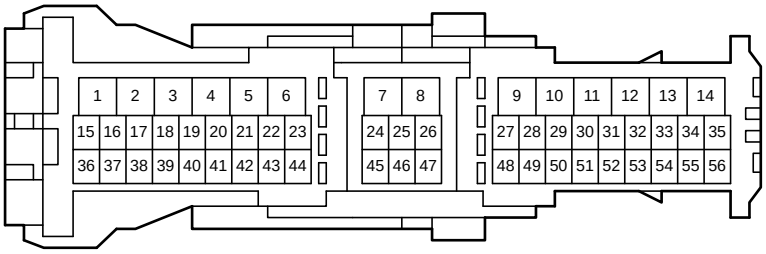


2B
White

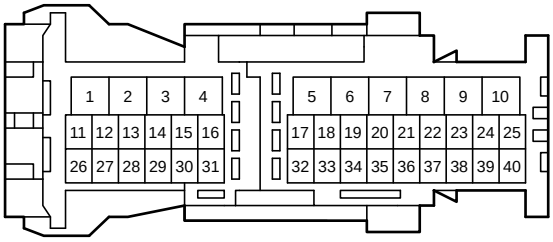


2C
White

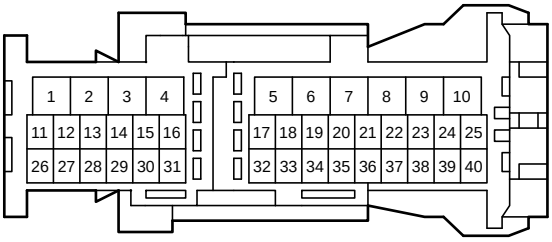

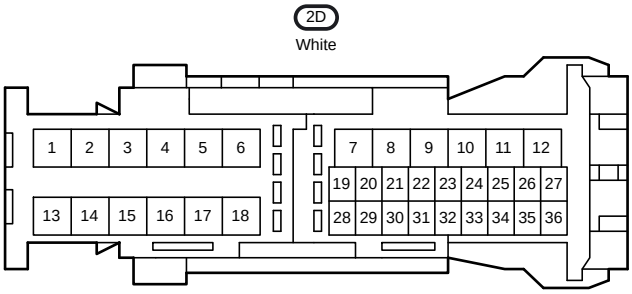
2D
White
1 2 3 4 5 6
7 8 9 10 11 12
19 20 21 22 23 24 25 26 27
13 14 15 16 17 18
28 29 30 31 32 33 34 35 36

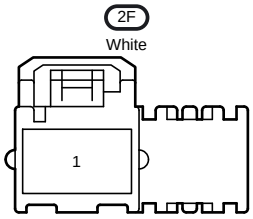
2F
White
1

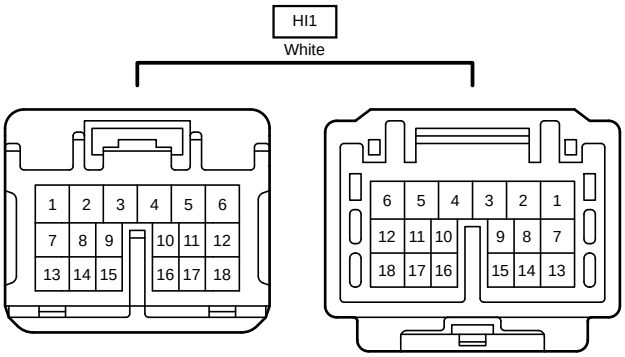
HI1
White
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13

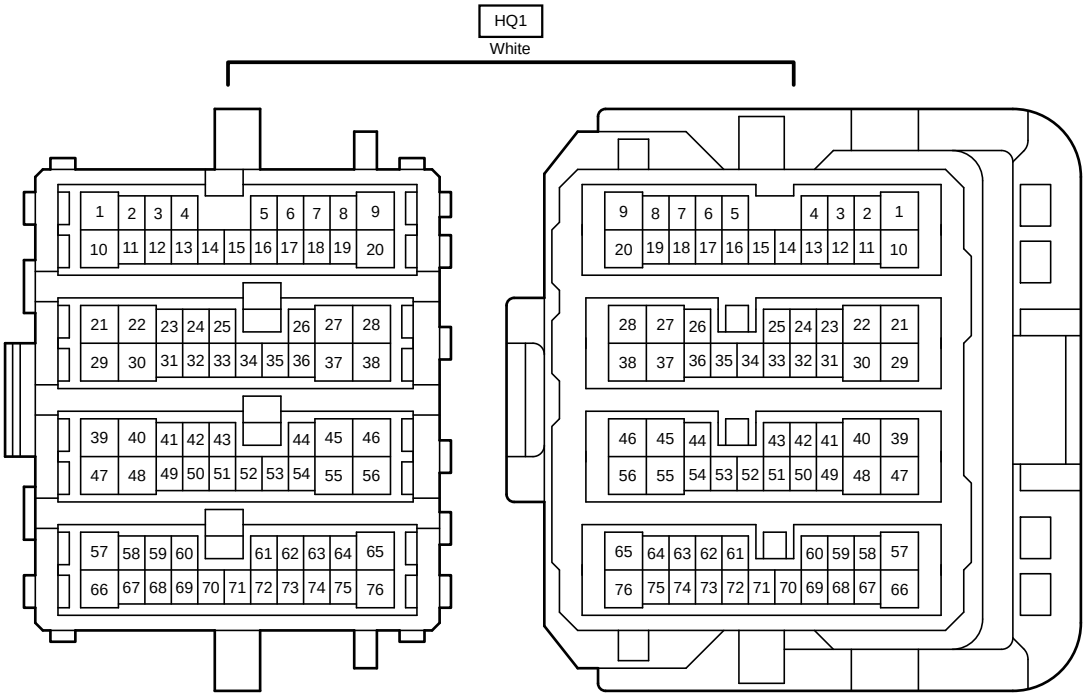
HQ1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40 41 42 43 44 45 46
47 48 49 50 51 52 53 54 55 56
57 58 59 60 61 62 63 64 65
66 67 68 69 70 71 72 73 74 75 76
9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11 10
28 27 26 25 24 23 22 21
38 37 36 35 34 33 32 31 30 29
46 45 44 43 42 41 40 39
56 55 54 53 52 51 50 49 48 47
65 64 63 62 61 60 59 58 57
76 75 74 73 72 71 70 69 68 67 66