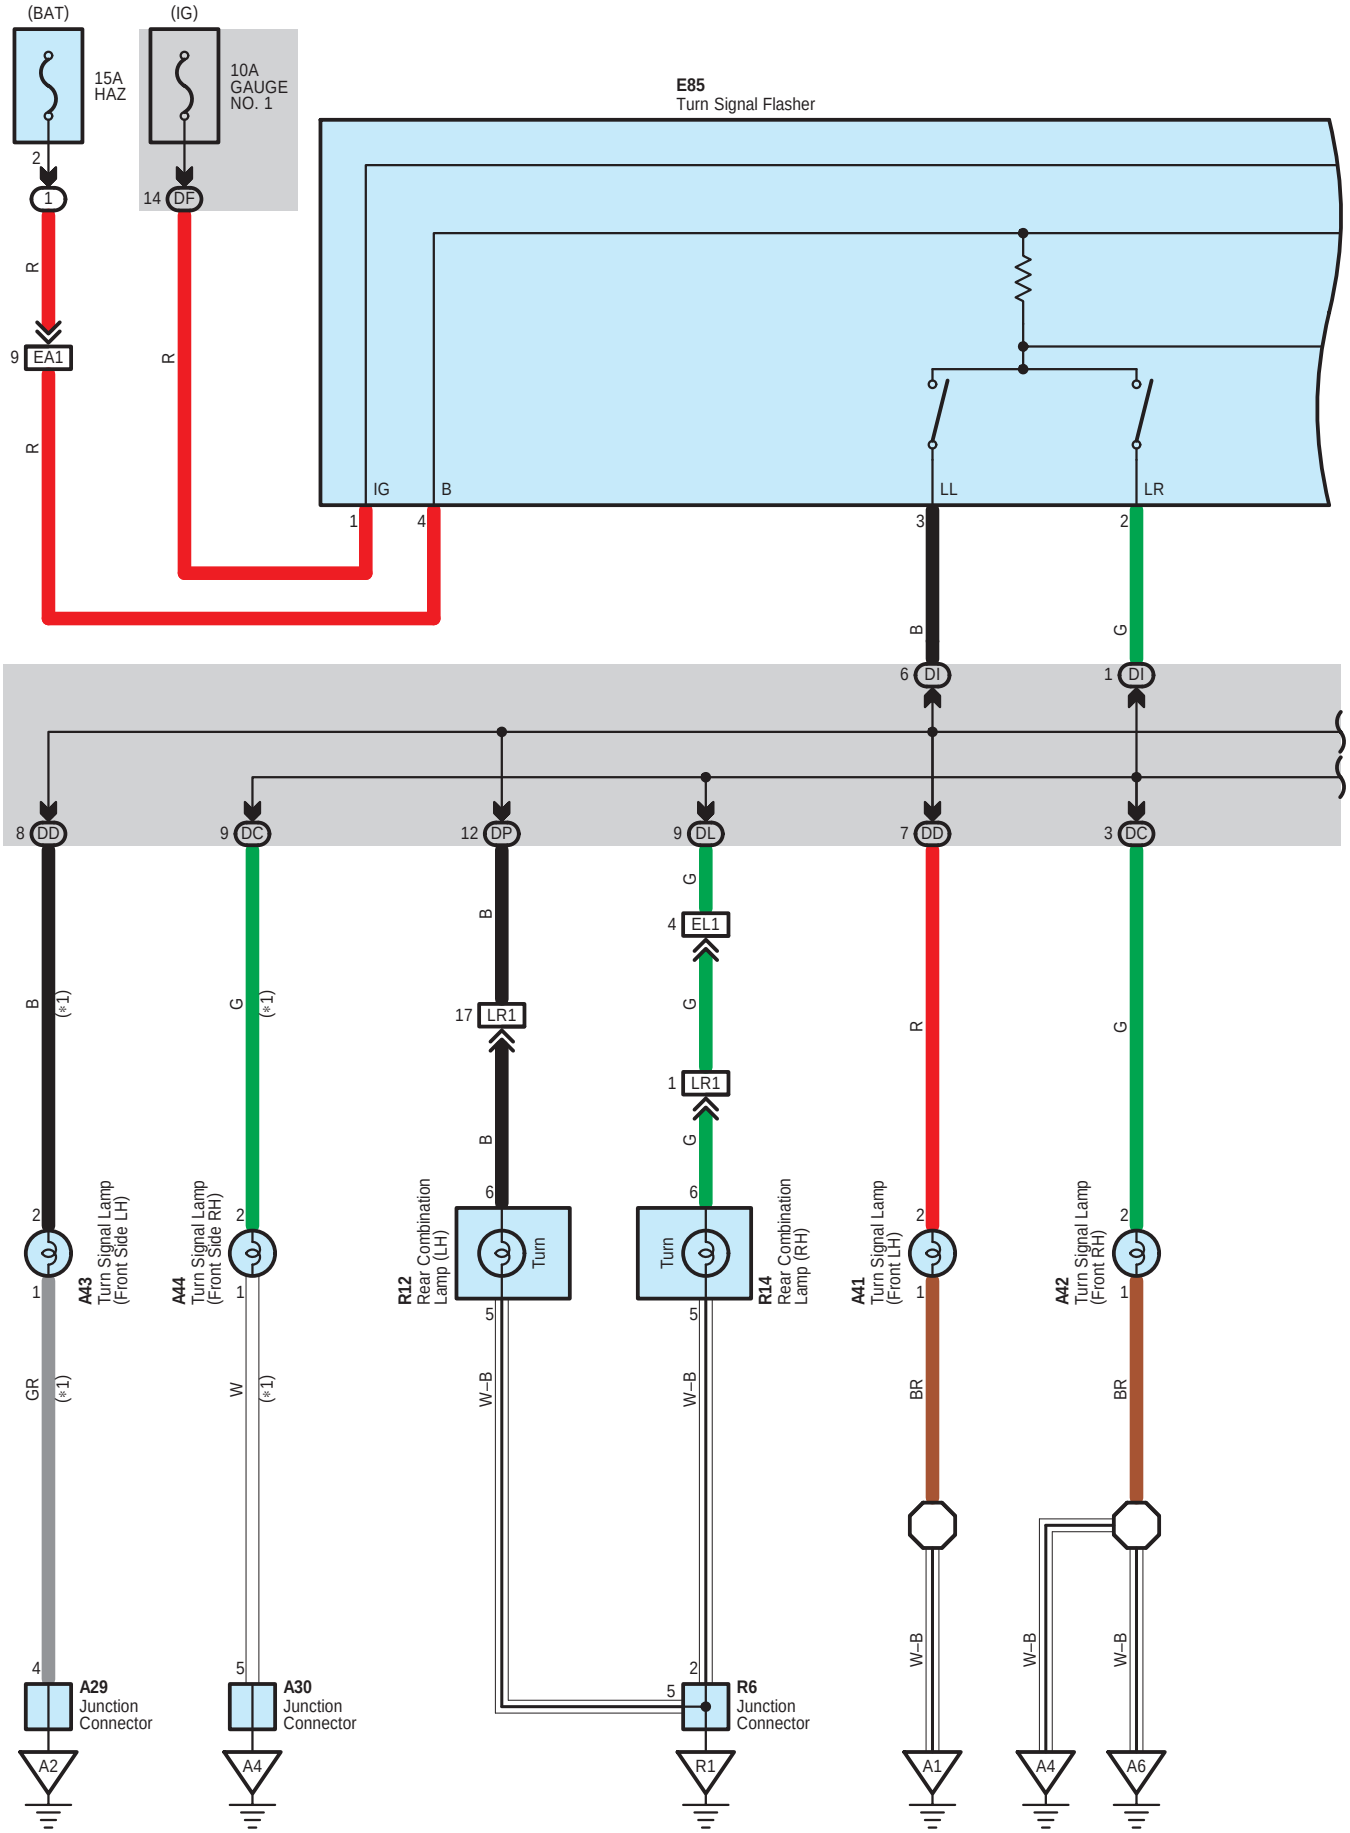
(BAT)
(IG)
15A
HAZ
10A
GAUGE
NO. 1
E85
Turn Signal Flasher
IG
B
LL
LR
EA1
DF
DI
DD
DC
DP
DL
EL1
LR1
A43
Turn Signal Lamp
(Front Side LH)
A44
Turn Signal Lamp
(Front Side RH)
R12
Rear Combination
Lamp (LH)
R14
Rear Combination
Lamp (RH)
Turn
A41
Turn Signal Lamp
(Front LH)
A42
Turn Signal Lamp
(Front RH)
A29
Junction
Connector
A30
Junction
Connector
R6
Junction
Connector
A2
A4
R1
A1
A6

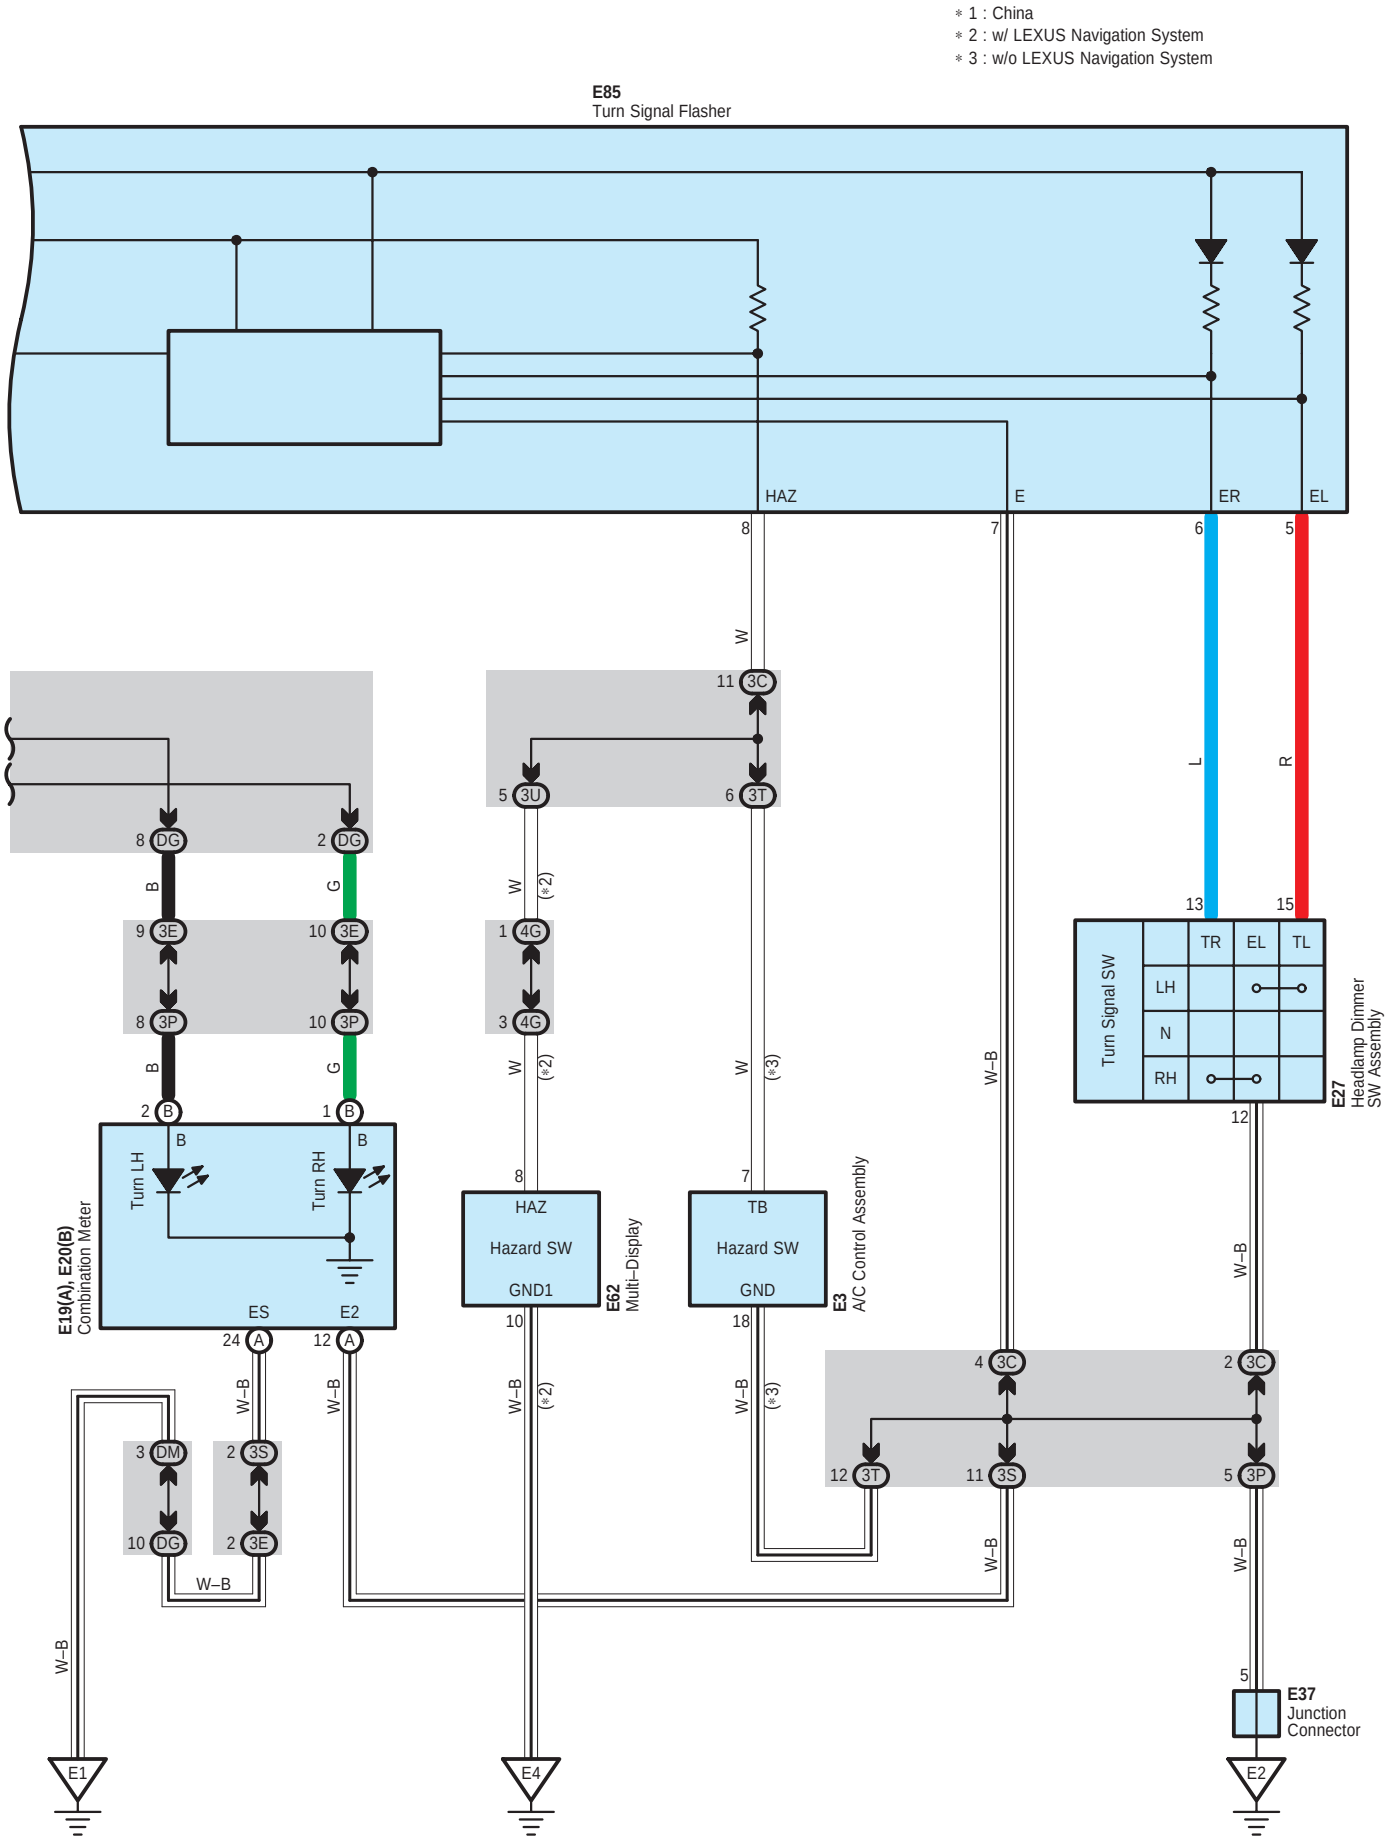
* 1 : China
* 2 : w/ LEXUS Navigation System
* 3 : w/o LEXUS Navigation System
E85
Turn Signal Flasher
HAZ
E
ER
EL
E19(A), E20(B)
Combination Meter
Turn LH
Turn RH
ES
E2
E62
Multi–Display
HAZ
Hazard SW
GND1
E3
A/C Control Assembly
TB
Hazard SW
GND
Turn Signal SW
TR
EL
TL
LH
N
RH
E27
Headlamp Dimmer
SW Assembly
E37
Junction
Connector
E1
E4
E2
W–B

A 29
Gray

A 30
Gray

A 41
Gray

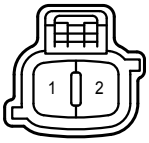

A 42
Gray

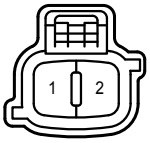

A 43
Gray



A 44
Gray

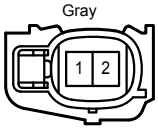

E 3
White

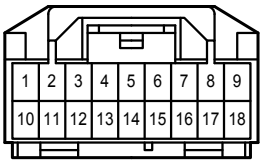

E 19
White

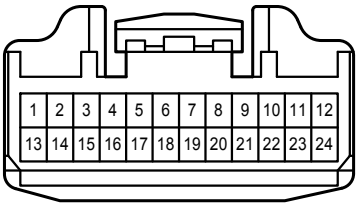

E 20
White

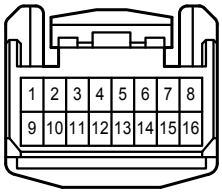

E 27
White

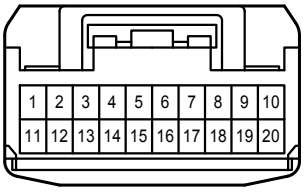

E 37
White

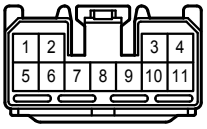

E 62
White

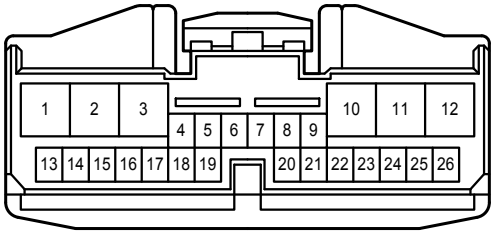

E 85
Black

R 6
White

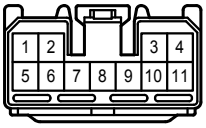

R 12
White



R 14
White



3C
White



3E
Gray



3P
White



3S
Gray



3T
White



3U
Gray



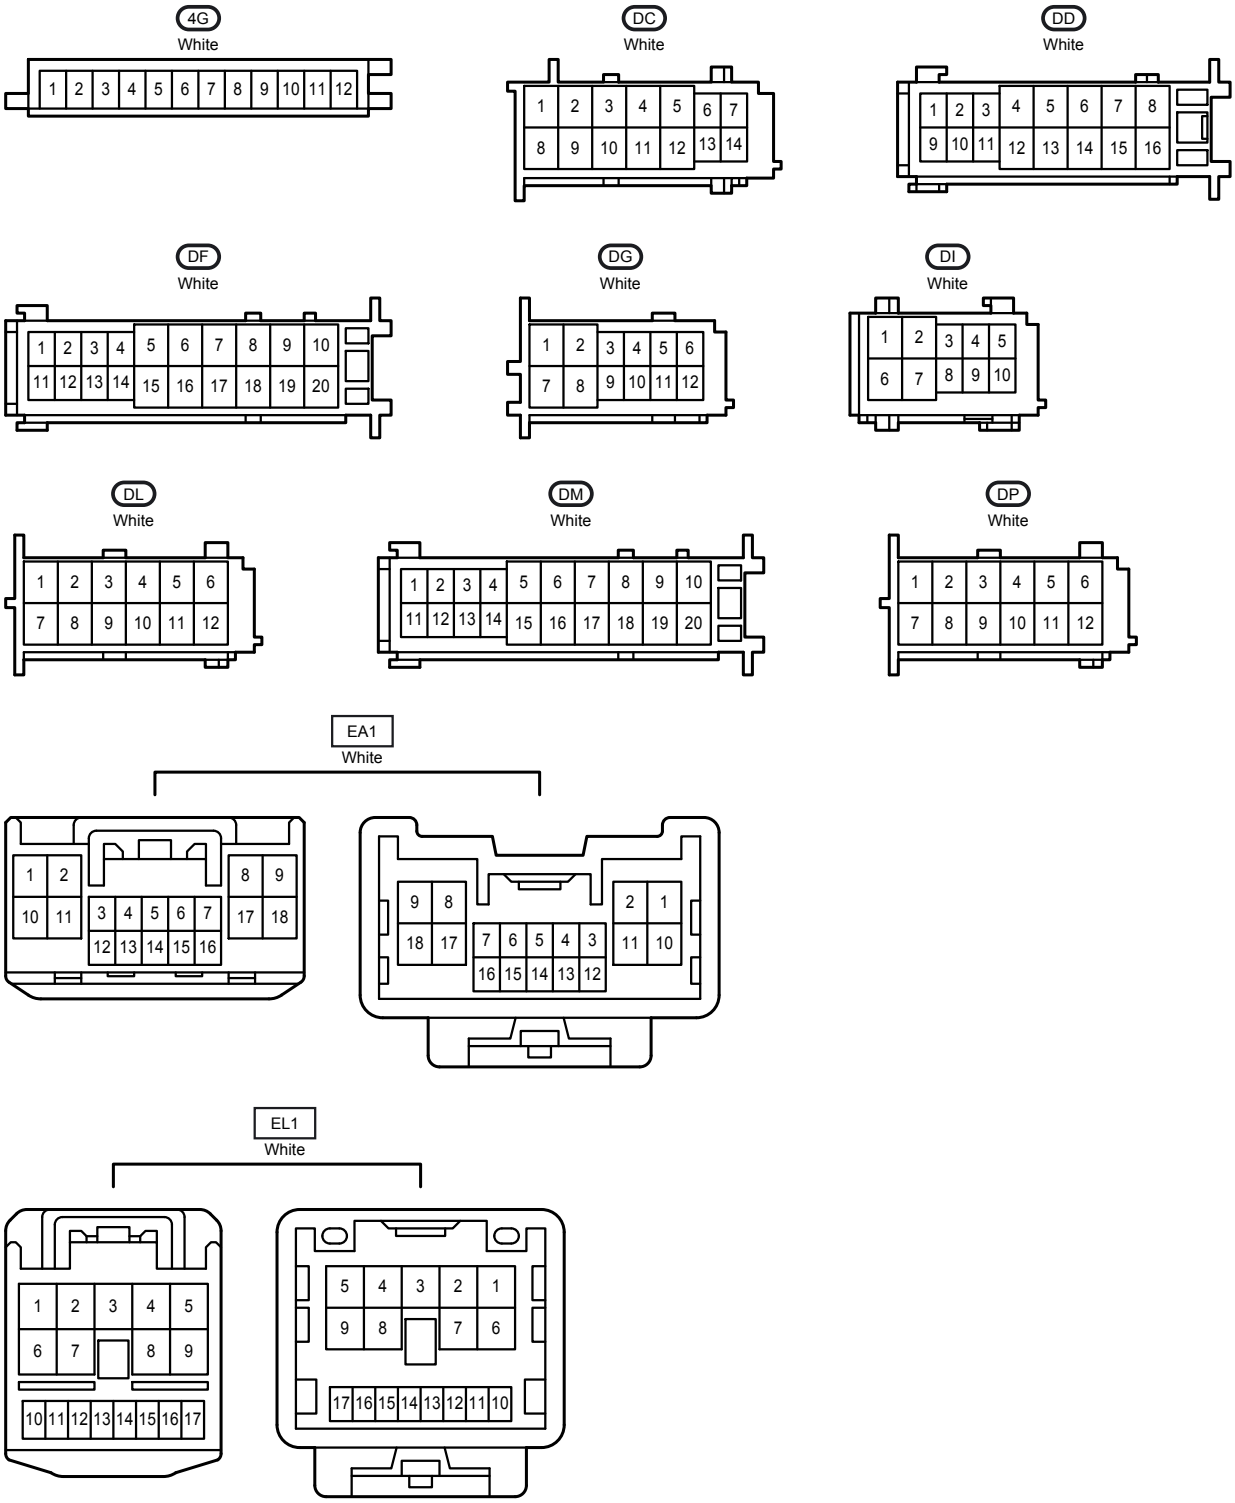
4G
White
DC
White
DD
White
DF
White
DG
White
DI
White
DL
White
DM
White
DP
White
EA1
White
EL1
White

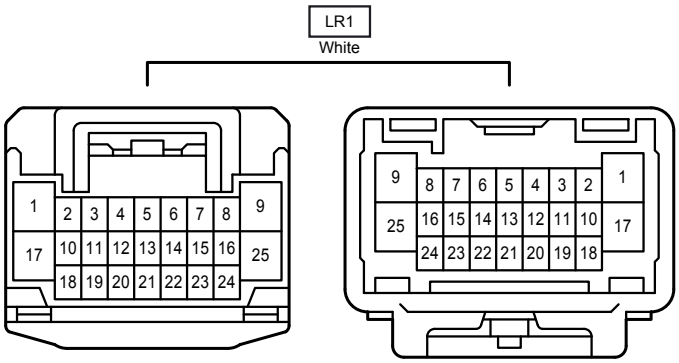
LR1
White
1
2
3
4
5
6
7
8
9
17
10
11
12
13
14
15
16
25
18
19
20
21
22
23
24
9
8
7
6
5
4
3
2
1
25
16
15
14
13
12
11
10
17
24
23
22
21
20
19
18