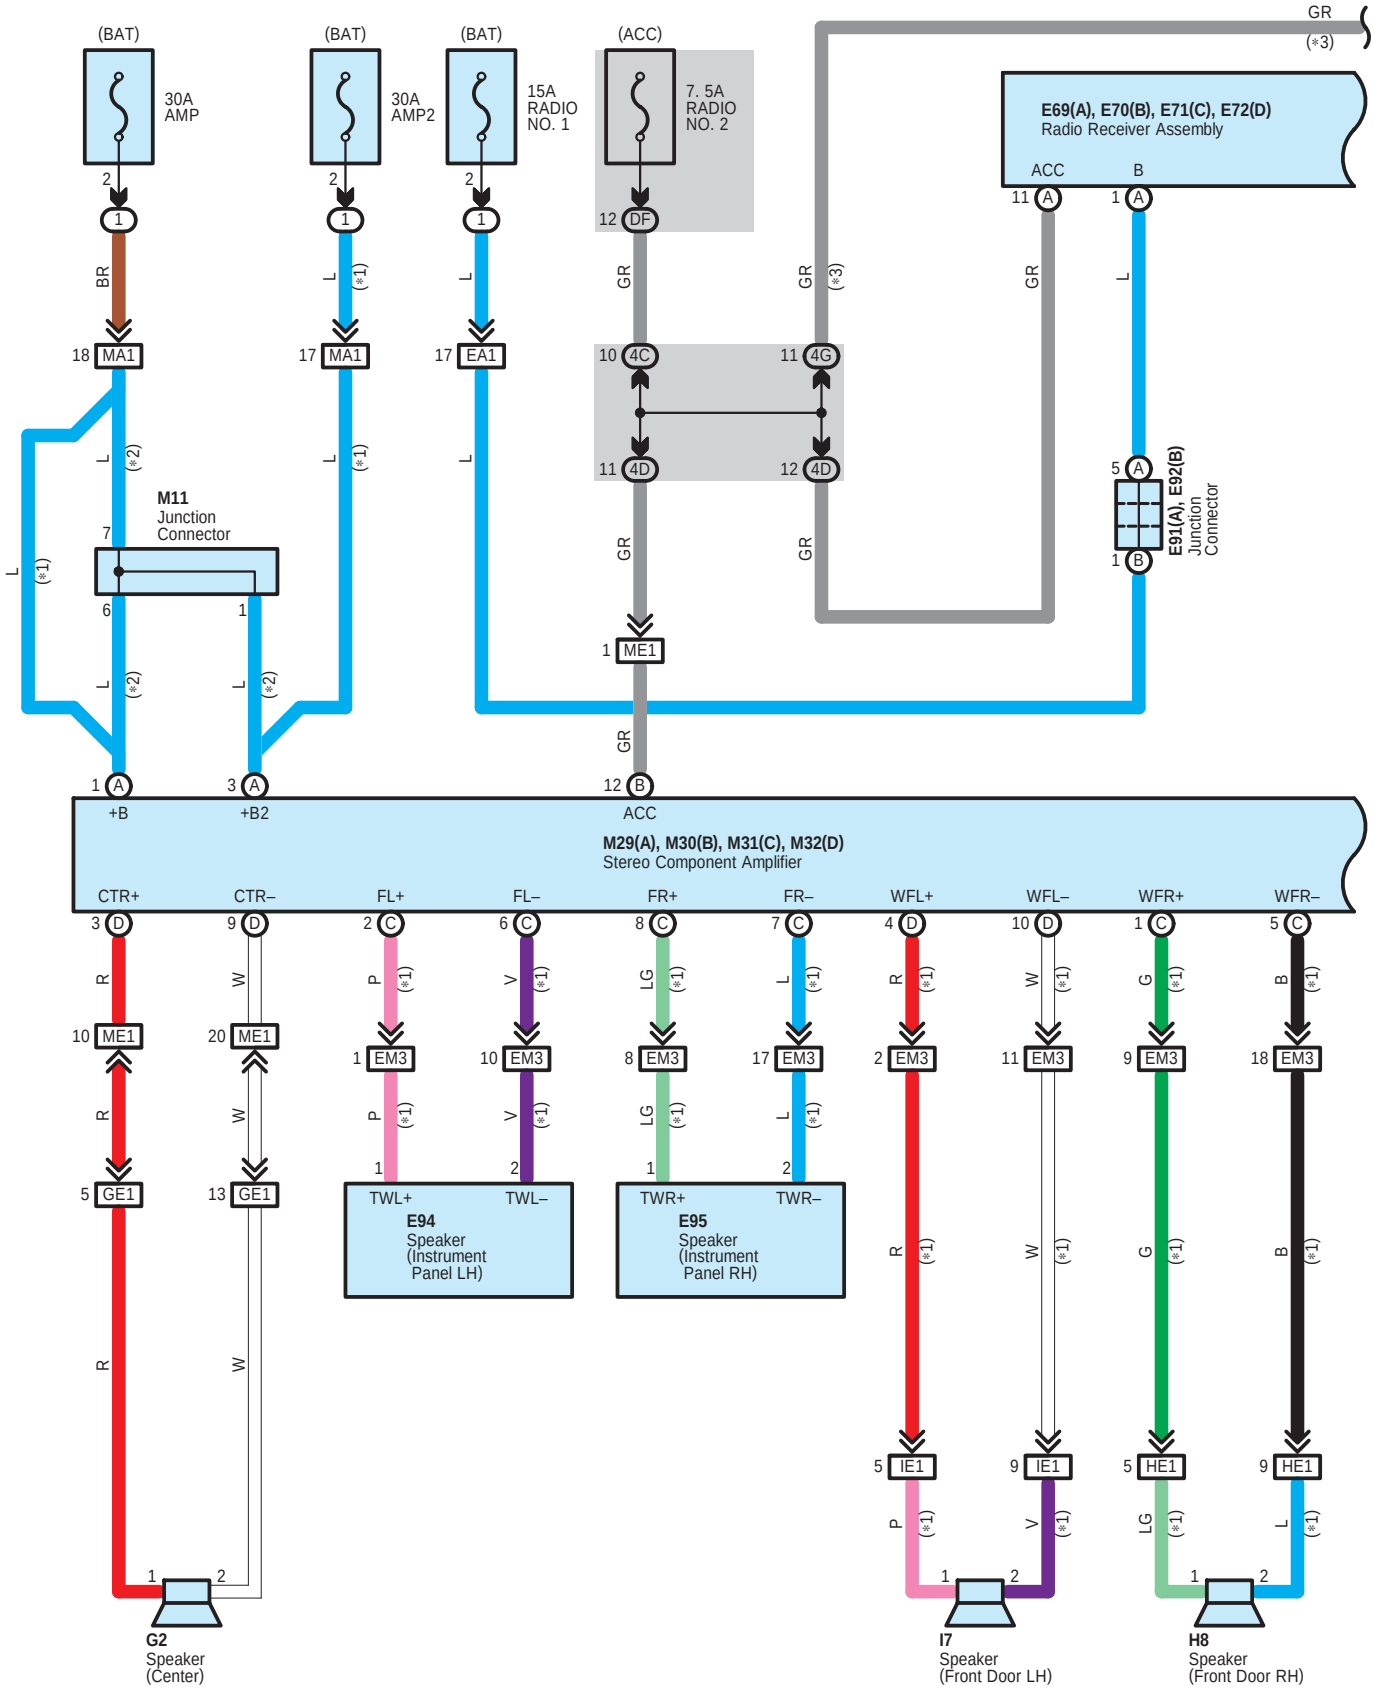
(BAT)
30A AMP
(BAT)
30A AMP2
(BAT)
15A RADIO NO. 1
(ACC)
7. 5A RADIO NO. 2
GR
(*3)
E69(A), E70(B), E71(C), E72(D)
Radio Receiver Assembly
ACC
B
M11
Junction Connector
E91(A), E92(B)
Junction Connector
+B
+B2
ACC
M29(A), M30(B), M31(C), M32(D)
Stereo Component Amplifier
CTR+
CTR–
FL+
FL–
FR+
FR–
WFL+
WFL–
WFR+
WFR–
TWL+
TWL–
E94
Speaker (Instrument Panel LH)
TWR+
TWR–
E95
Speaker (Instrument Panel RH)
G2
Speaker (Center)
I7
Speaker (Front Door LH)
H8
Speaker (Front Door RH)

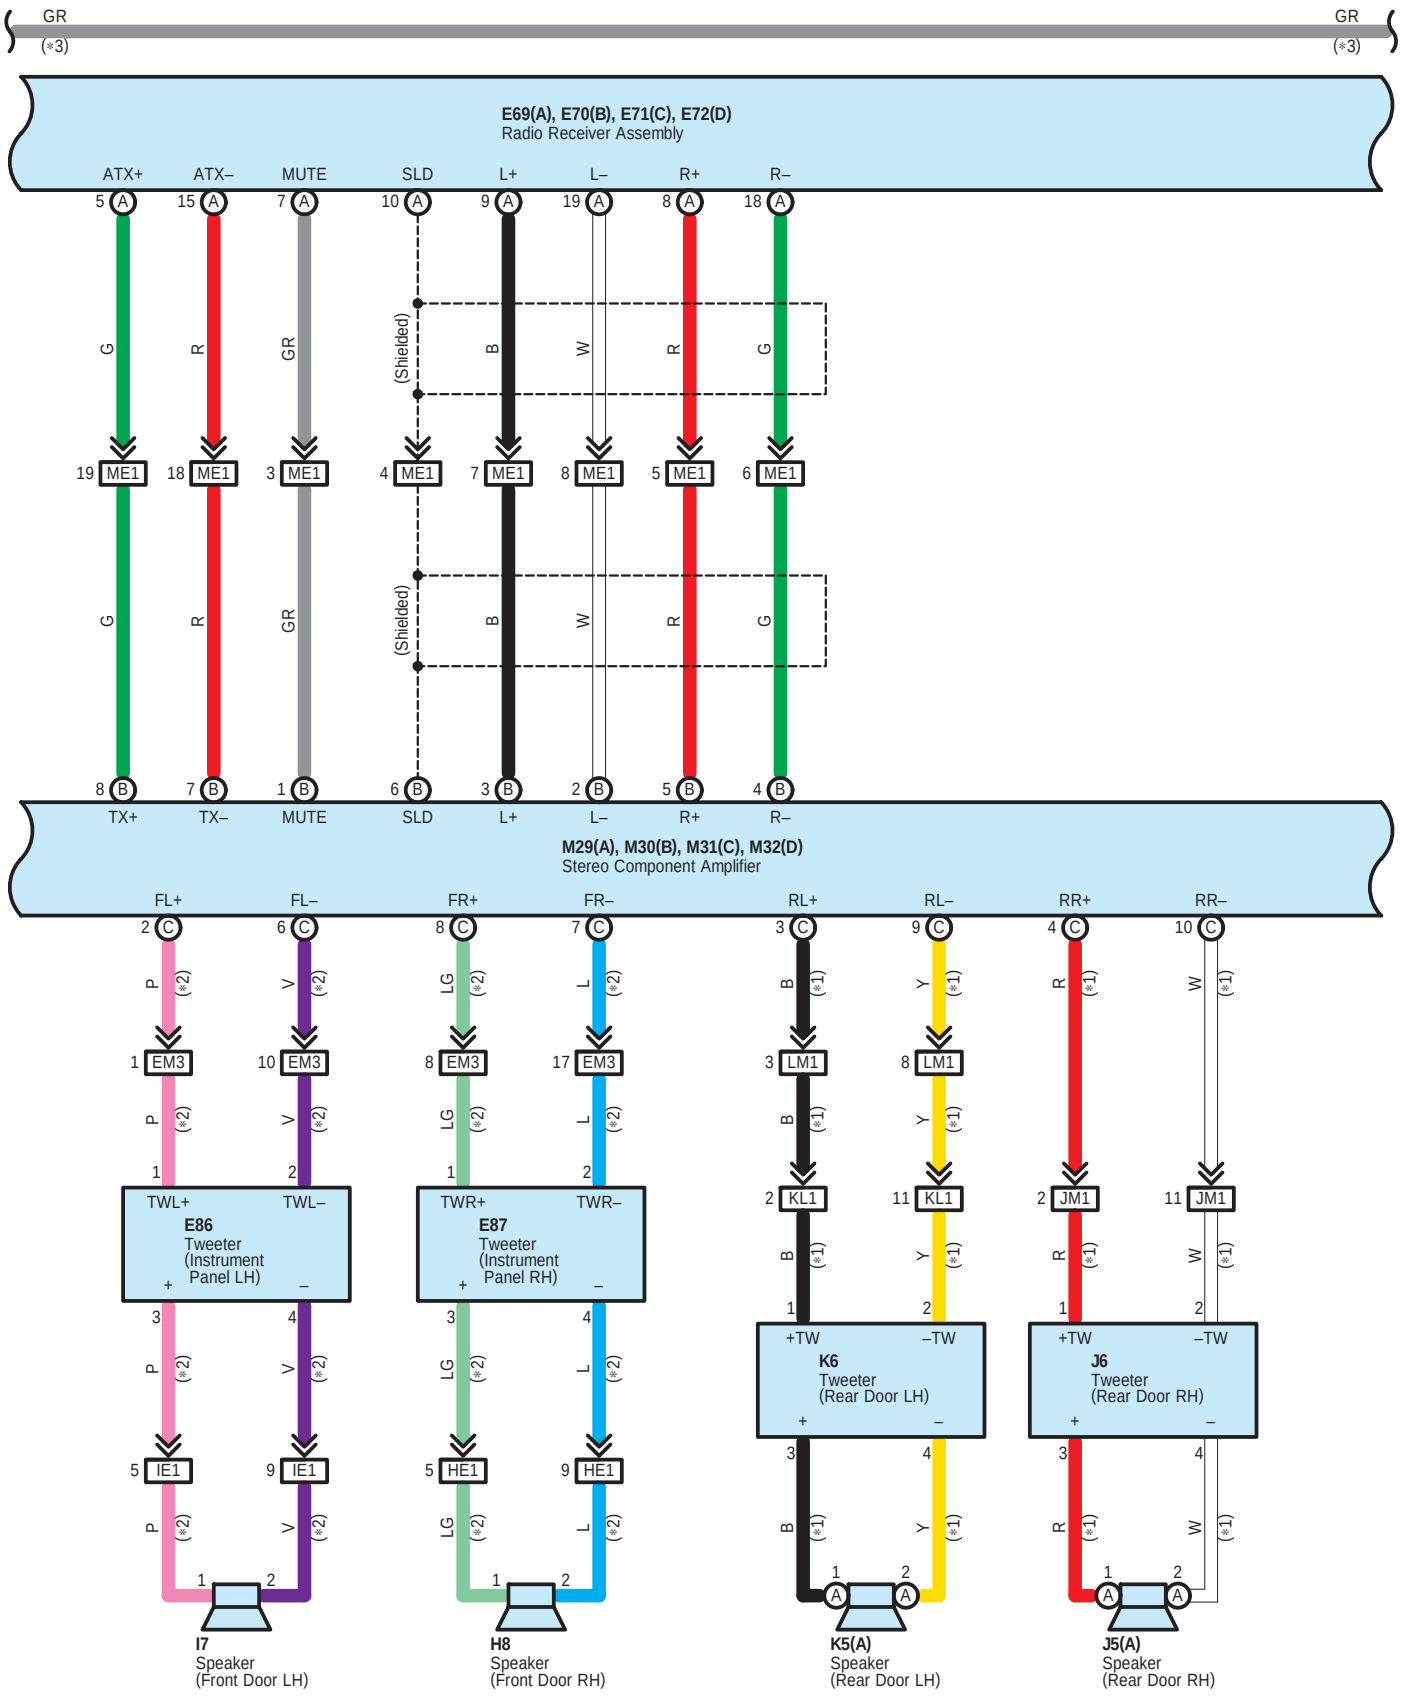

* 1 : 14 Speaker
* 2 : 8 Speaker
* 3 : w/ LEXUS Navigation System

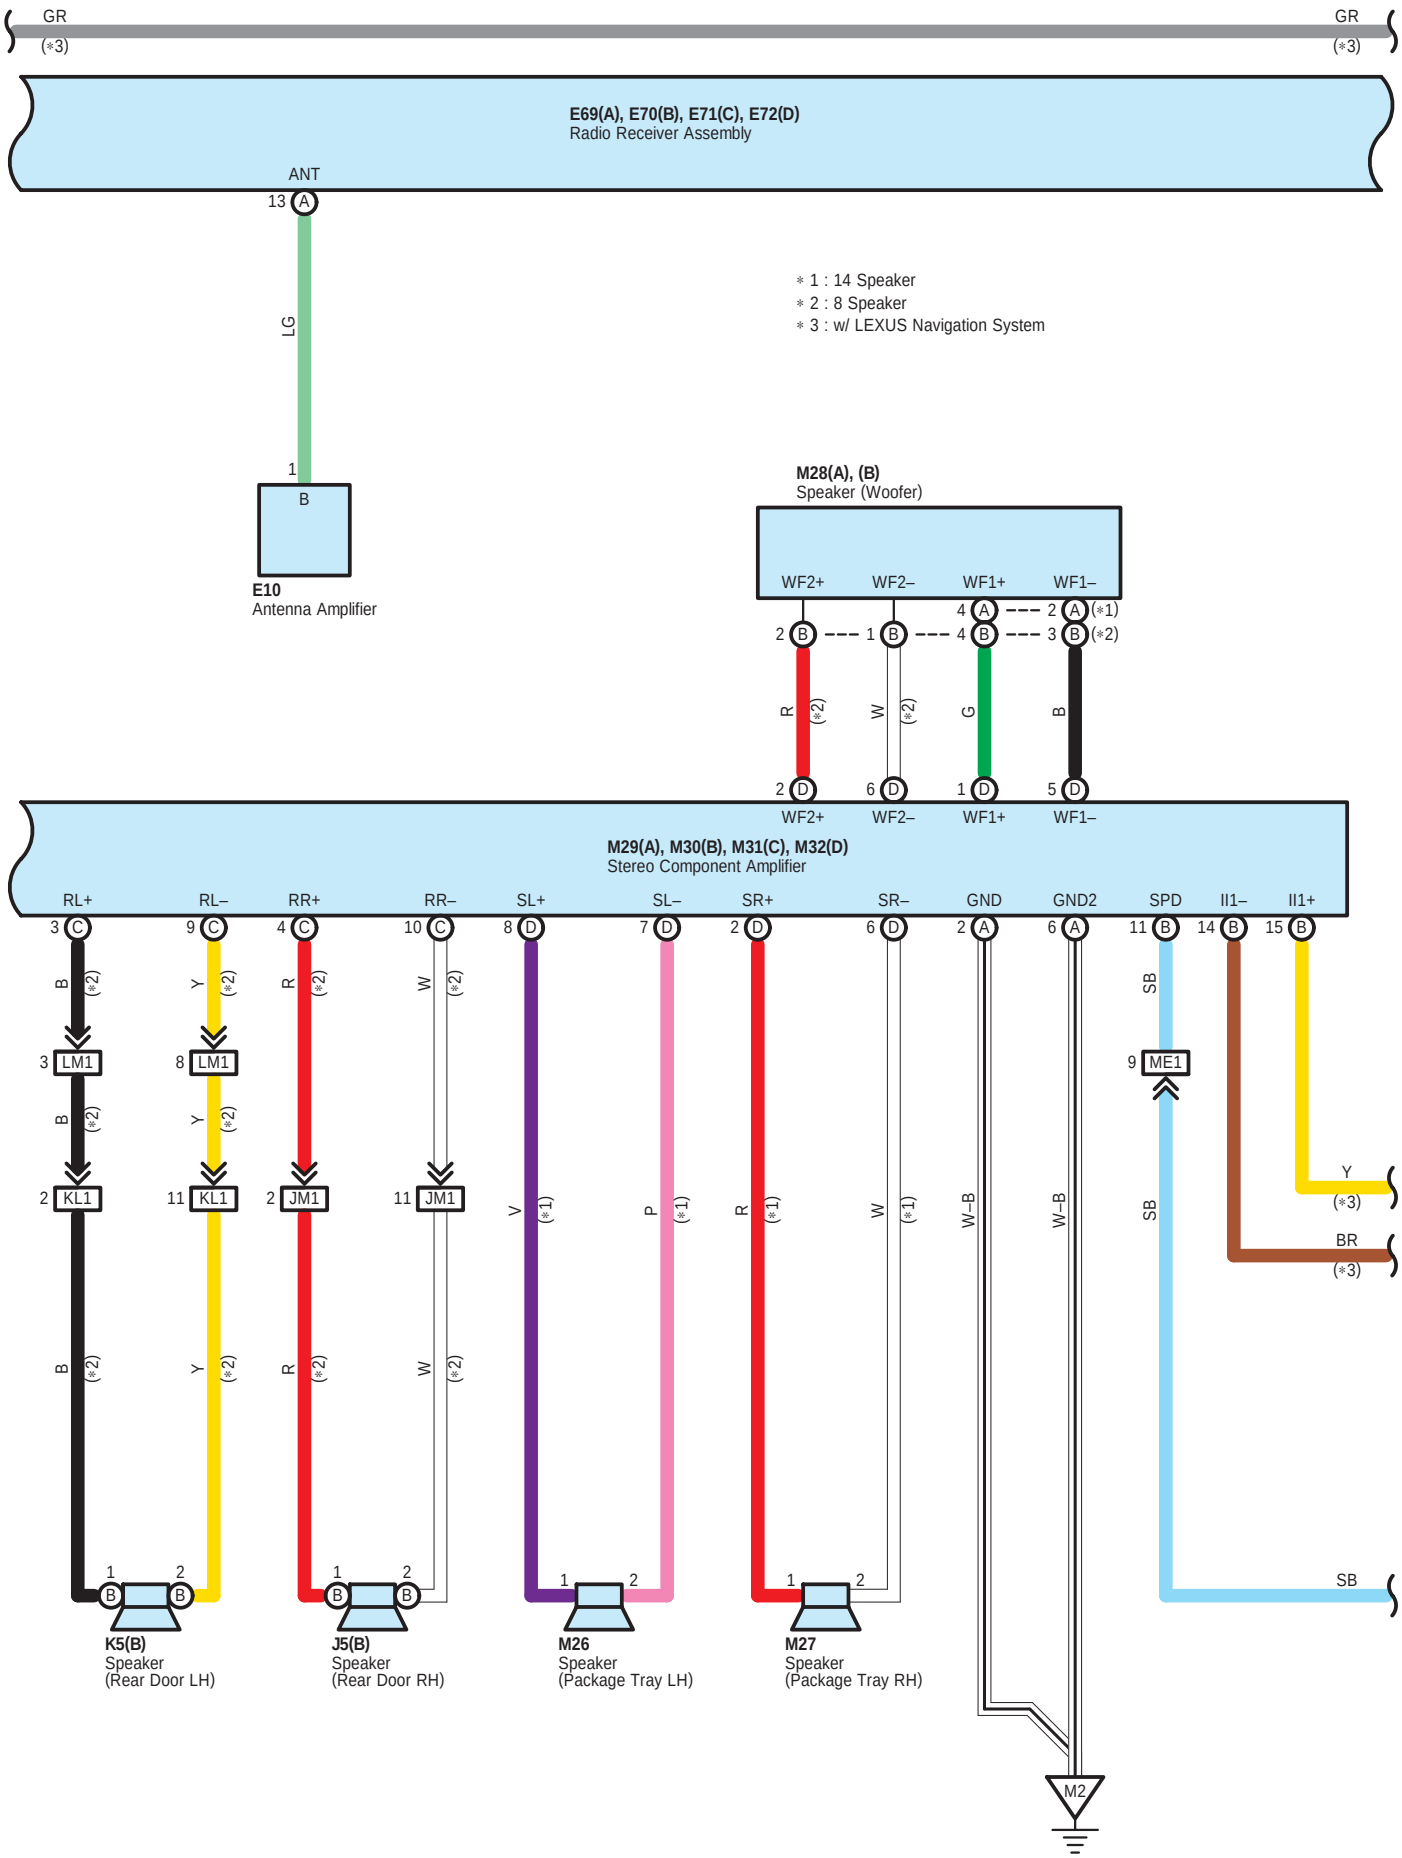
GR
(*3)
GR
(*3)
E69(A), E70(B), E71(C), E72(D)
Radio Receiver Assembly
ANT
13 A
LG
1
B
E10
Antenna Amplifier
* 1 : 14 Speaker
* 2 : 8 Speaker
* 3 : w/ LEXUS Navigation System
M28(A), (B)
Speaker (Woofer)
WF2+
WF2–
WF1+
WF1–
4 A
2 A (*1)
2 B
1 B
4 B
3 B (*2)
R (*2)
W (*2)
G
B
2 D
6 D
1 D
5 D
WF2+
WF2–
WF1+
WF1–
M29(A), M30(B), M31(C), M32(D)
Stereo Component Amplifier
RL+
RL–
RR+
RR–
SL+
SL–
SR+
SR–
GND
GND2
SPD
II1–
II1+
3 C
9 C
4 C
10 C
8 D
7 D
2 D
6 D
2 A
6 A
11 B
14 B
15 B
B (*2)
Y (*2)
R (*2)
W (*2)
SB
3 LM1
8 LM1
9 ME1
B (*2)
Y (*2)
2 KL1
11 KL1
2 JM1
11 JM1
V (*1)
P (*1)
R (*1)
W (*1)
W–B
W–B
SB
Y
(*3)
BR
(*3)
B (*2)
Y (*2)
R (*2)
W (*2)
SB
K5(B)
Speaker
(Rear Door LH)
J5(B)
Speaker
(Rear Door RH)
M26
Speaker
(Package Tray LH)
M27
Speaker
(Package Tray RH)
M2

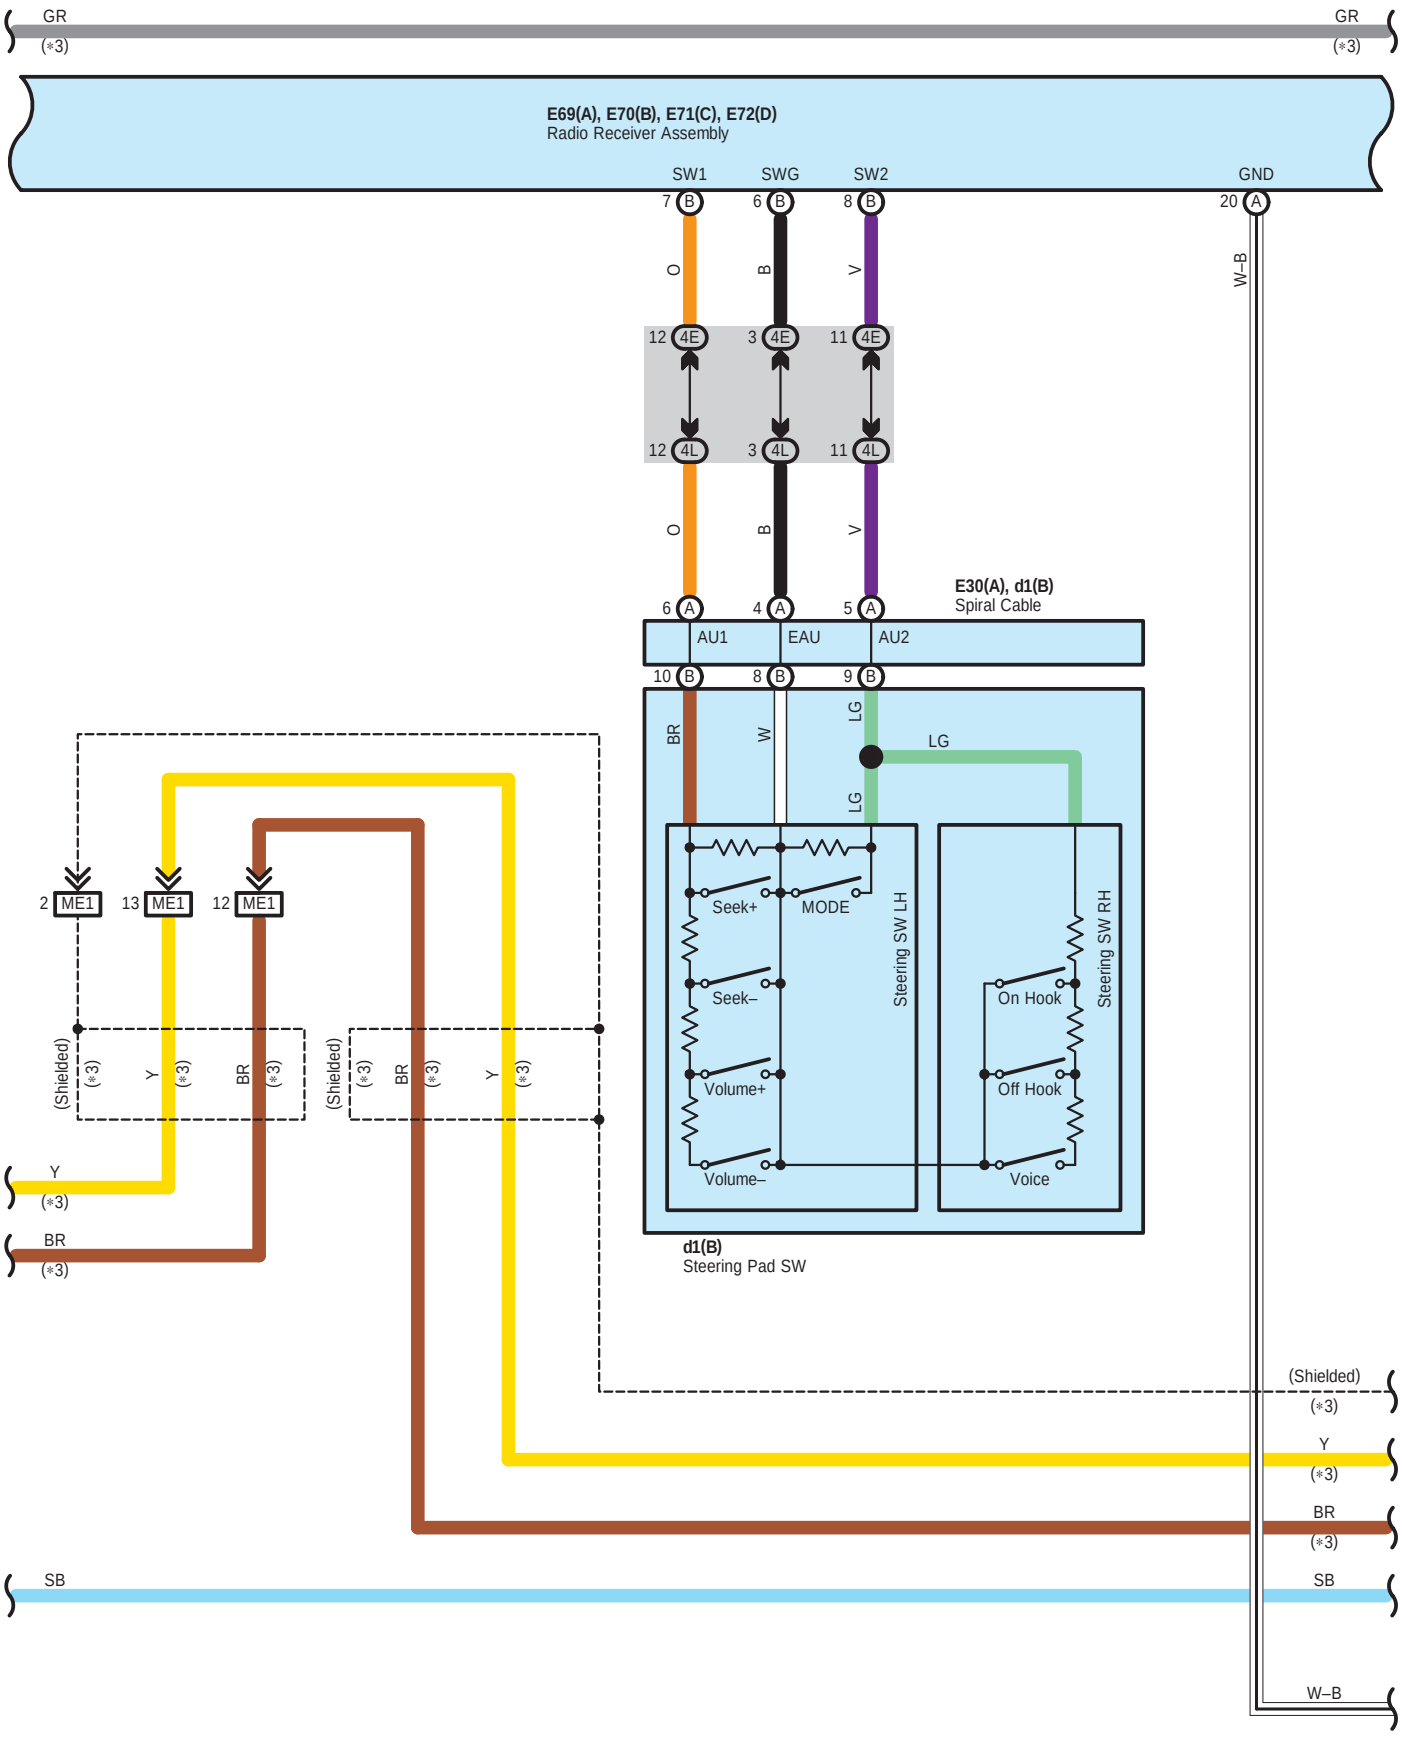
GR
(*3)
GR
(*3)
E69(A), E70(B), E71(C), E72(D)
Radio Receiver Assembly
SW1
SWG
SW2
GND
7 B
6 B
8 B
20 A
O
B
V
W–B
12 4E
3 4E
11 4E
12 4L
3 4L
11 4L
O
B
V
6 A
4 A
5 A
E30(A), d1(B)
Spiral Cable
AU1
EAU
AU2
10 B
8 B
9 B
BR
W
LG
LG
LG
Seek+
MODE
Seek–
Volume+
Volume–
Steering SW LH
On Hook
Off Hook
Voice
Steering SW RH
d1(B)
Steering Pad SW
2 ME1
13 ME1
12 ME1
(Shielded)
(*3)
Y
(*3)
BR
(*3)
(Shielded)
(*3)
BR
(*3)
Y
(*3)
Y
(*3)
BR
(*3)
(Shielded)
(*3)
Y
(*3)
BR
(*3)
SB
SB
W–B

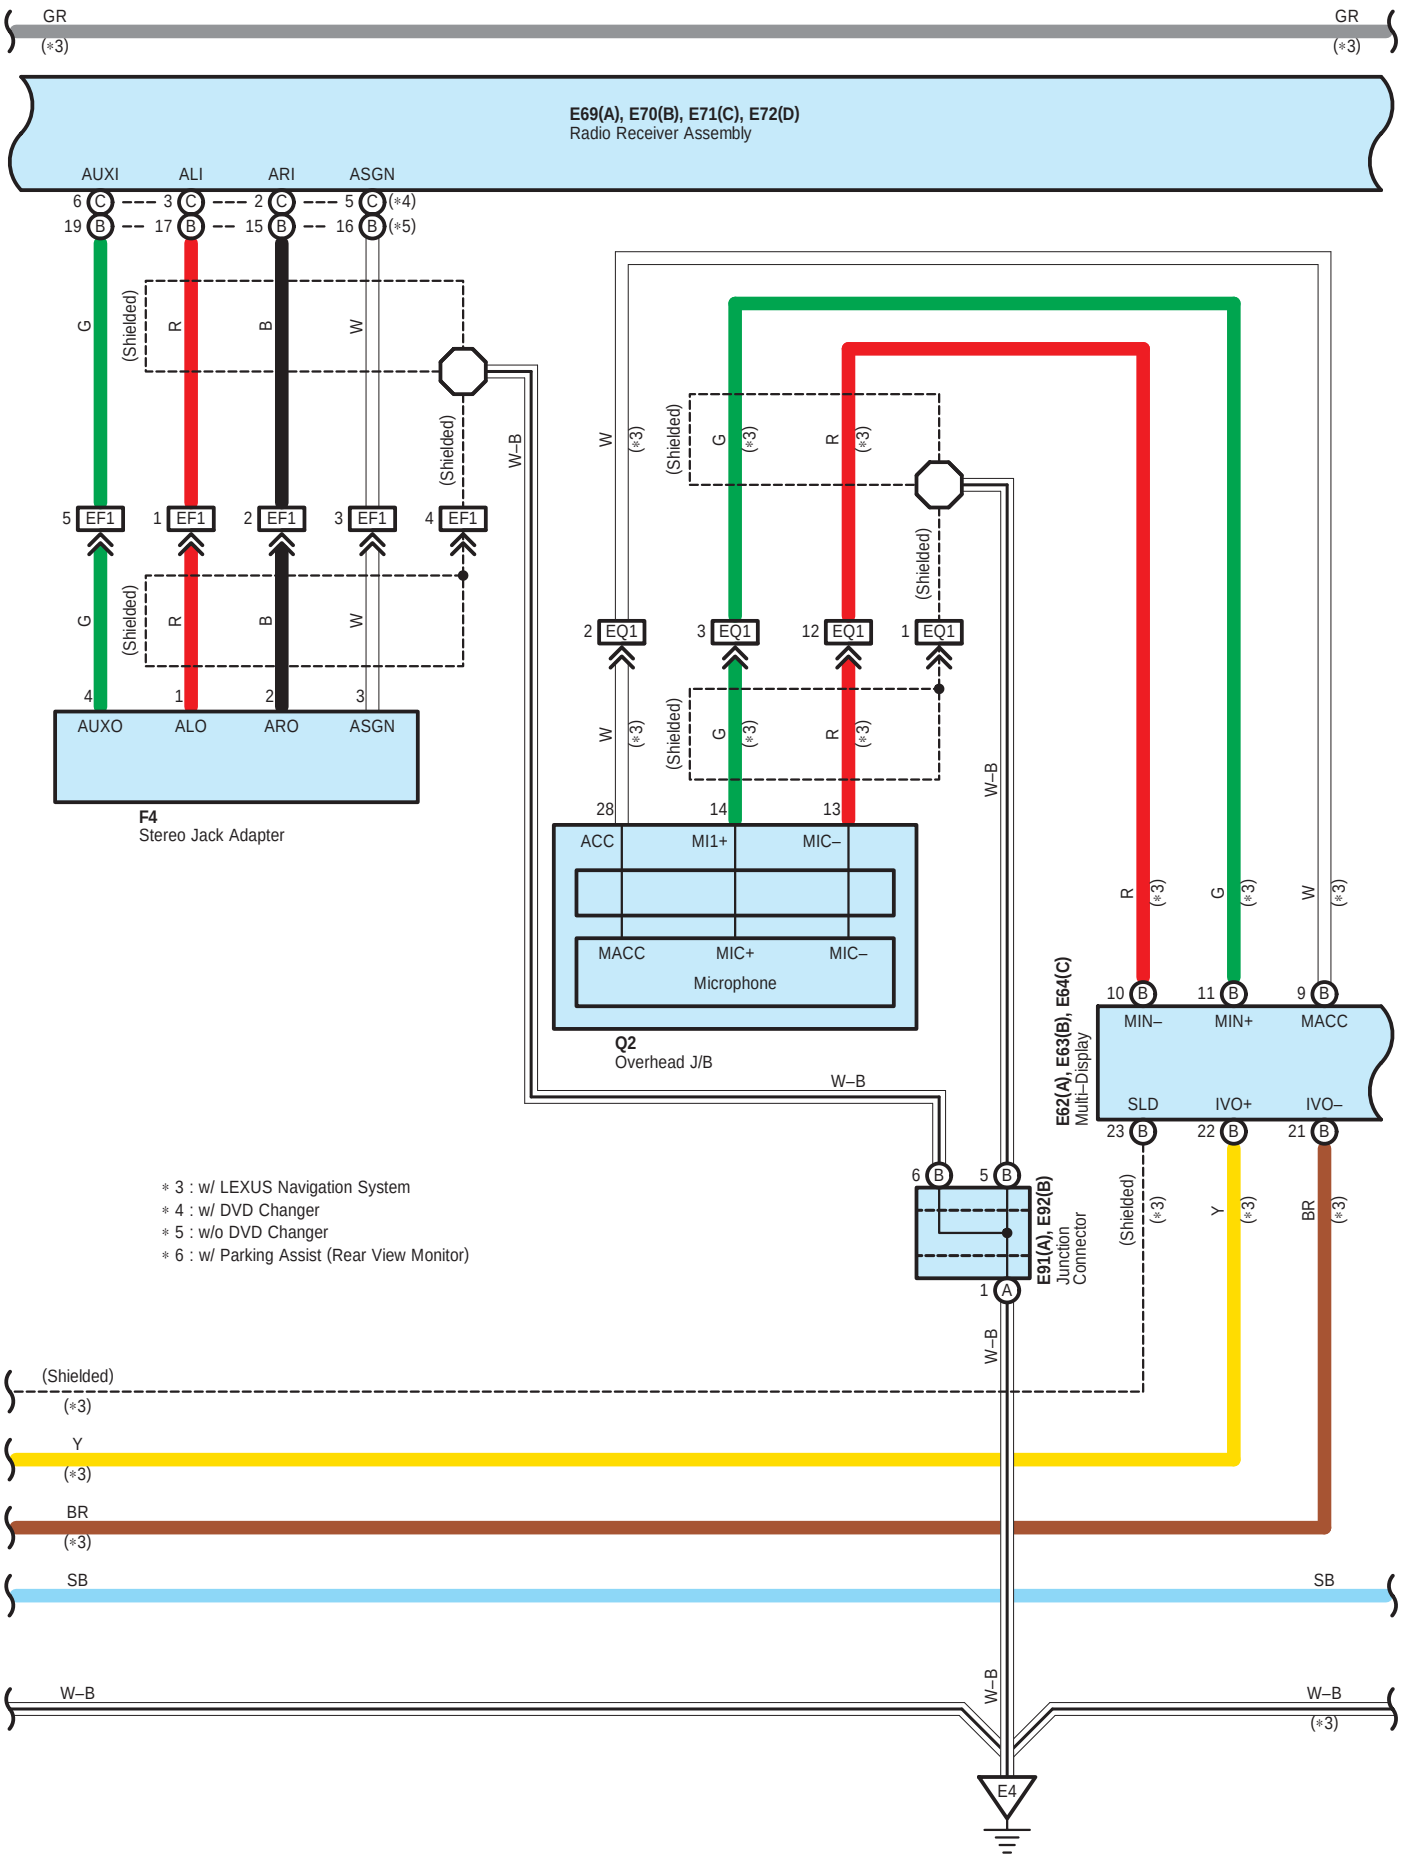
GR
(*3)
E69(A), E70(B), E71(C), E72(D)
Radio Receiver Assembly
AUXI
ALI
ARI
ASGN
(*4)
(*5)
(Shielded)
W–B
EF1
EQ1
AUXO
ALO
ARO
F4
Stereo Jack Adapter
ACC
MI1+
MIC–
MACC
MIC+
Microphone
Q2
Overhead J/B
MIN–
MIN+
MACC
SLD
IVO+
IVO–
E62(A), E63(B), E64(C)
Multi–Display
E91(A), E92(B)
Junction Connector
* 3 : w/ LEXUS Navigation System
* 4 : w/ DVD Changer
* 5 : w/o DVD Changer
* 6 : w/ Parking Assist (Rear View Monitor)
Y
BR
SB
E4

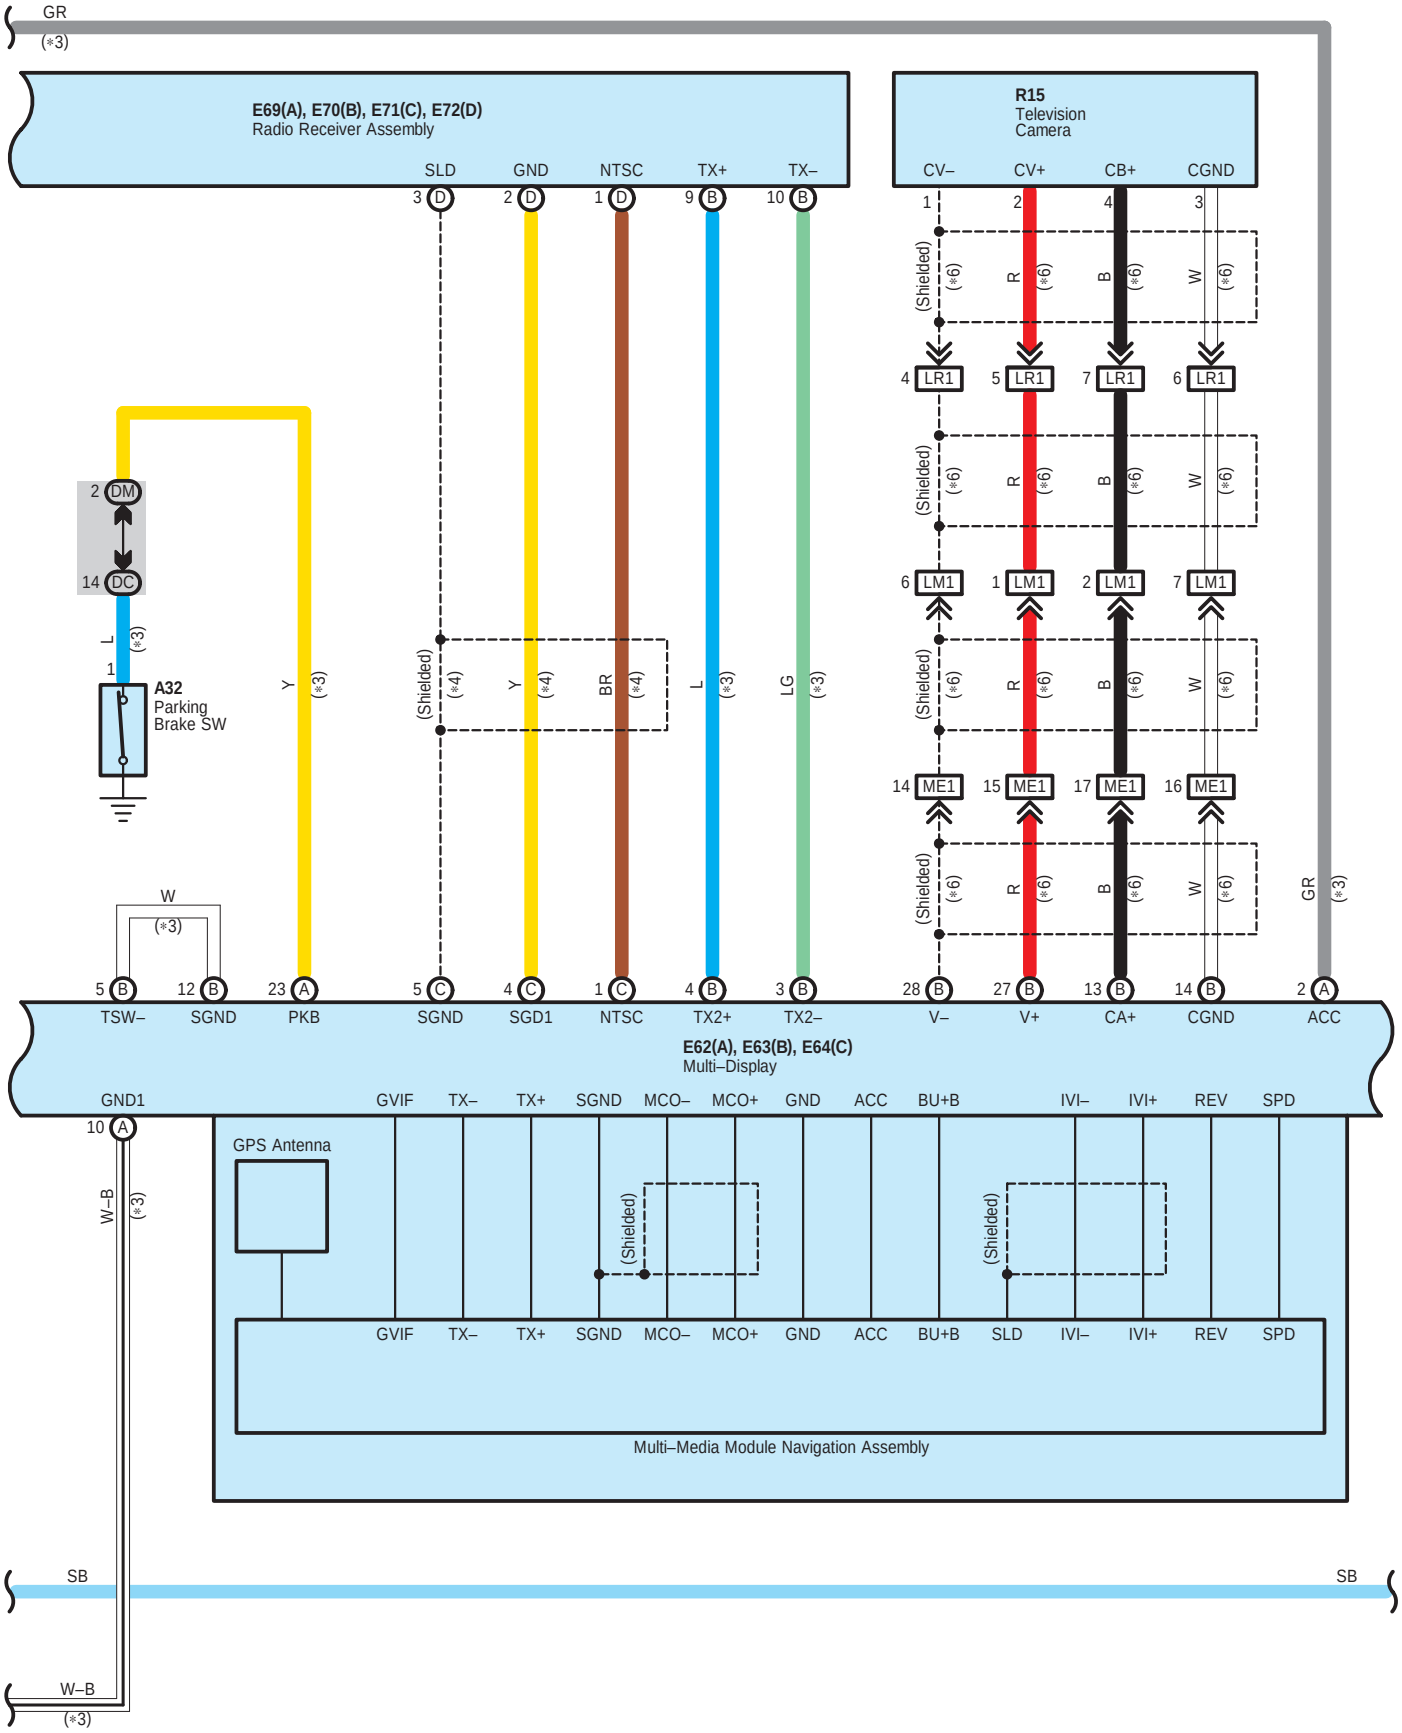
GR
(*3)
E69(A), E70(B), E71(C), E72(D)
Radio Receiver Assembly
SLD
GND
NTSC
TX+
TX–
R15
Television
Camera
CV–
CV+
CB+
CGND
(Shielded)
LR1
LM1
ME1
2 DM
14 DC
A32
Parking
Brake SW
W
(*3)
TSW–
SGND
PKB
SGND
SGD1
NTSC
TX2+
TX2–
V–
V+
CA+
CGND
ACC
E62(A), E63(B), E64(C)
Multi–Display
GND1
GVIF
TX–
TX+
SGND
MCO–
MCO+
GND
ACC
BU+B
IVI–
IVI+
REV
SPD
GPS Antenna
SLD
Multi–Media Module Navigation Assembly
SB
W–B

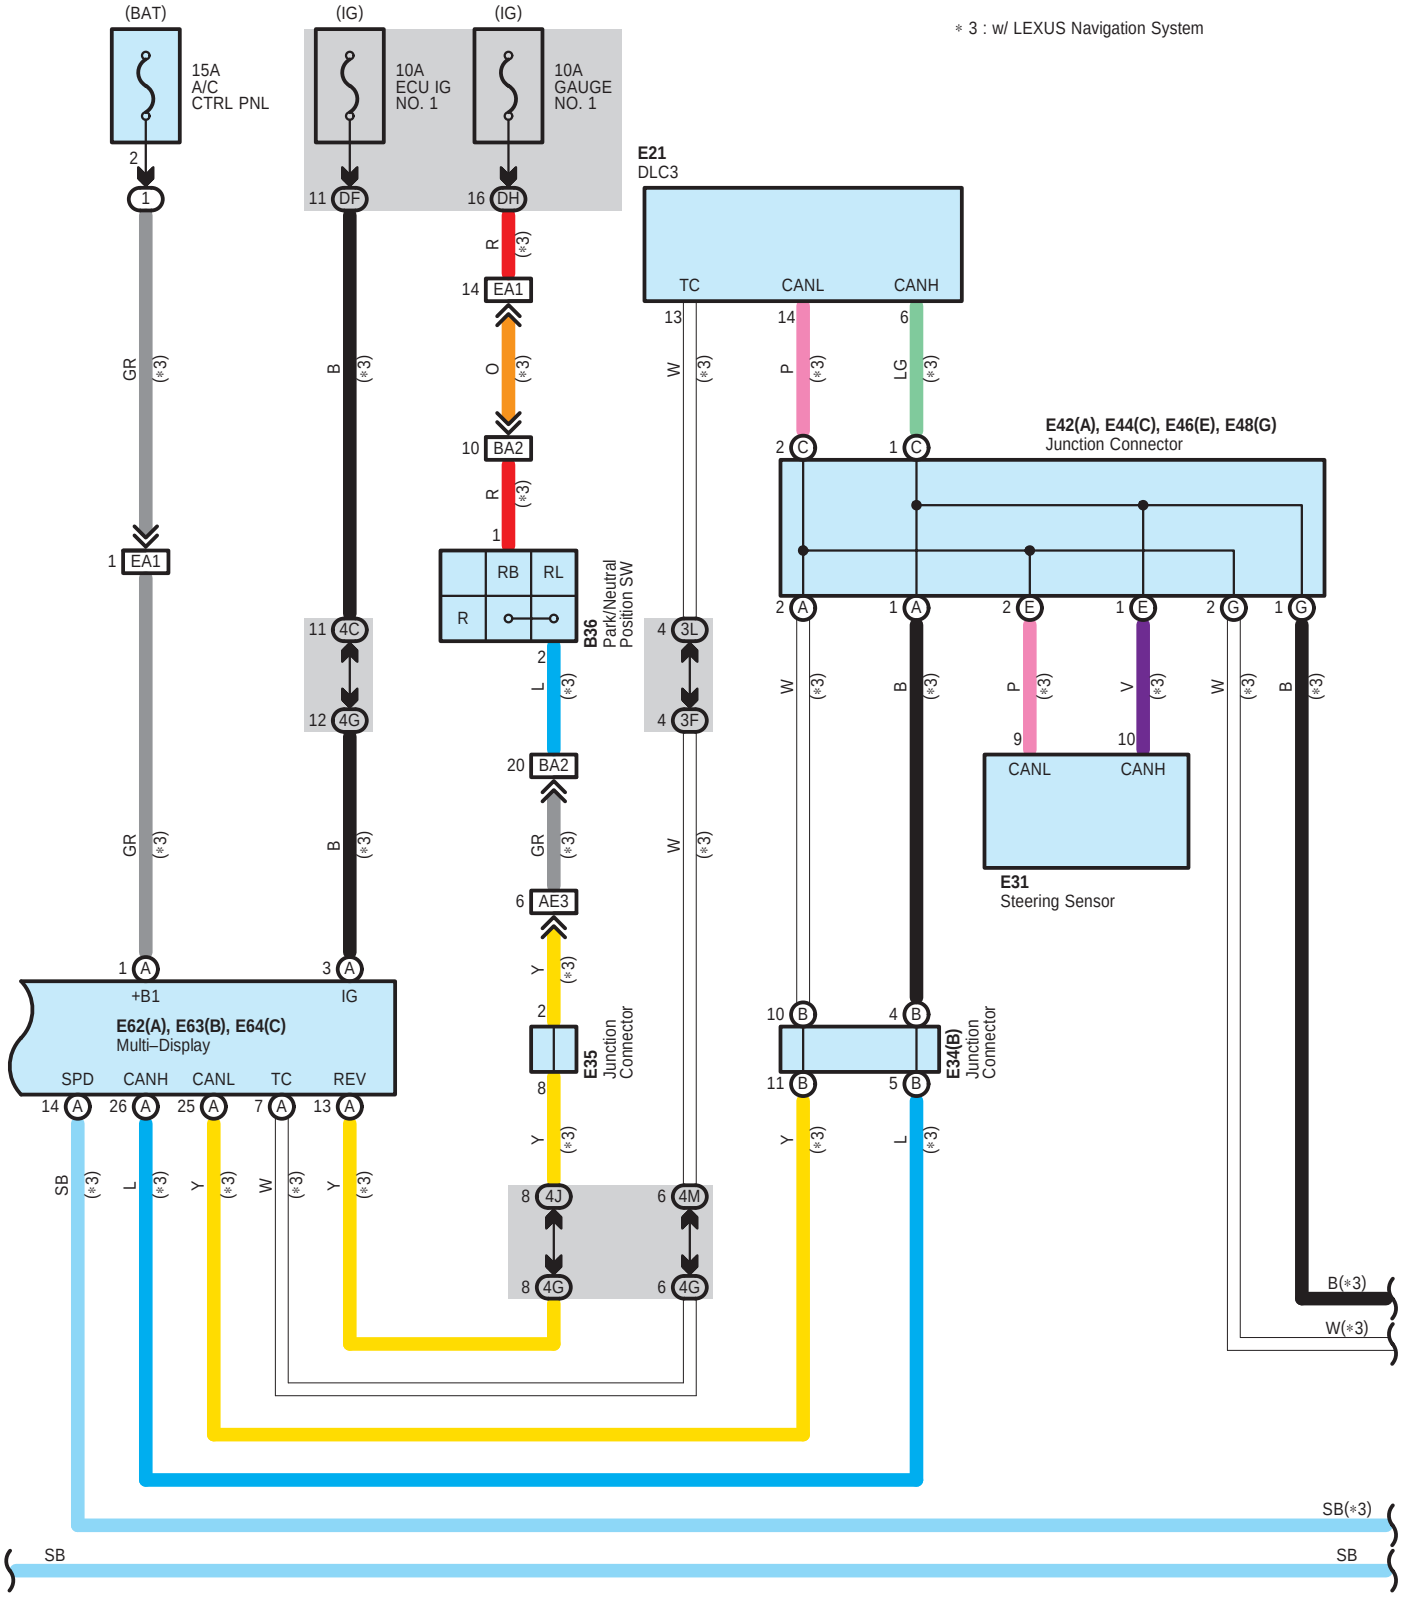
∗ 3 : w/ LEXUS Navigation System
(BAT)
15A
A/C
CTRL PNL
(IG)
10A
ECU IG
NO. 1
(IG)
10A
GAUGE
NO. 1
E21
DLC3
TC
CANL
CANH
E42(A), E44(C), E46(E), E48(G)
Junction Connector
B36
Park/Neutral
Position SW
RB
RL
R
E31
Steering Sensor
CANL
CANH
E62(A), E63(B), E64(C)
Multi–Display
+B1
IG
SPD
CANH
CANL
TC
REV
E35
Junction
Connector
E34(B)
Junction
Connector
B(∗3)
W(∗3)
SB(∗3)
SB
SB

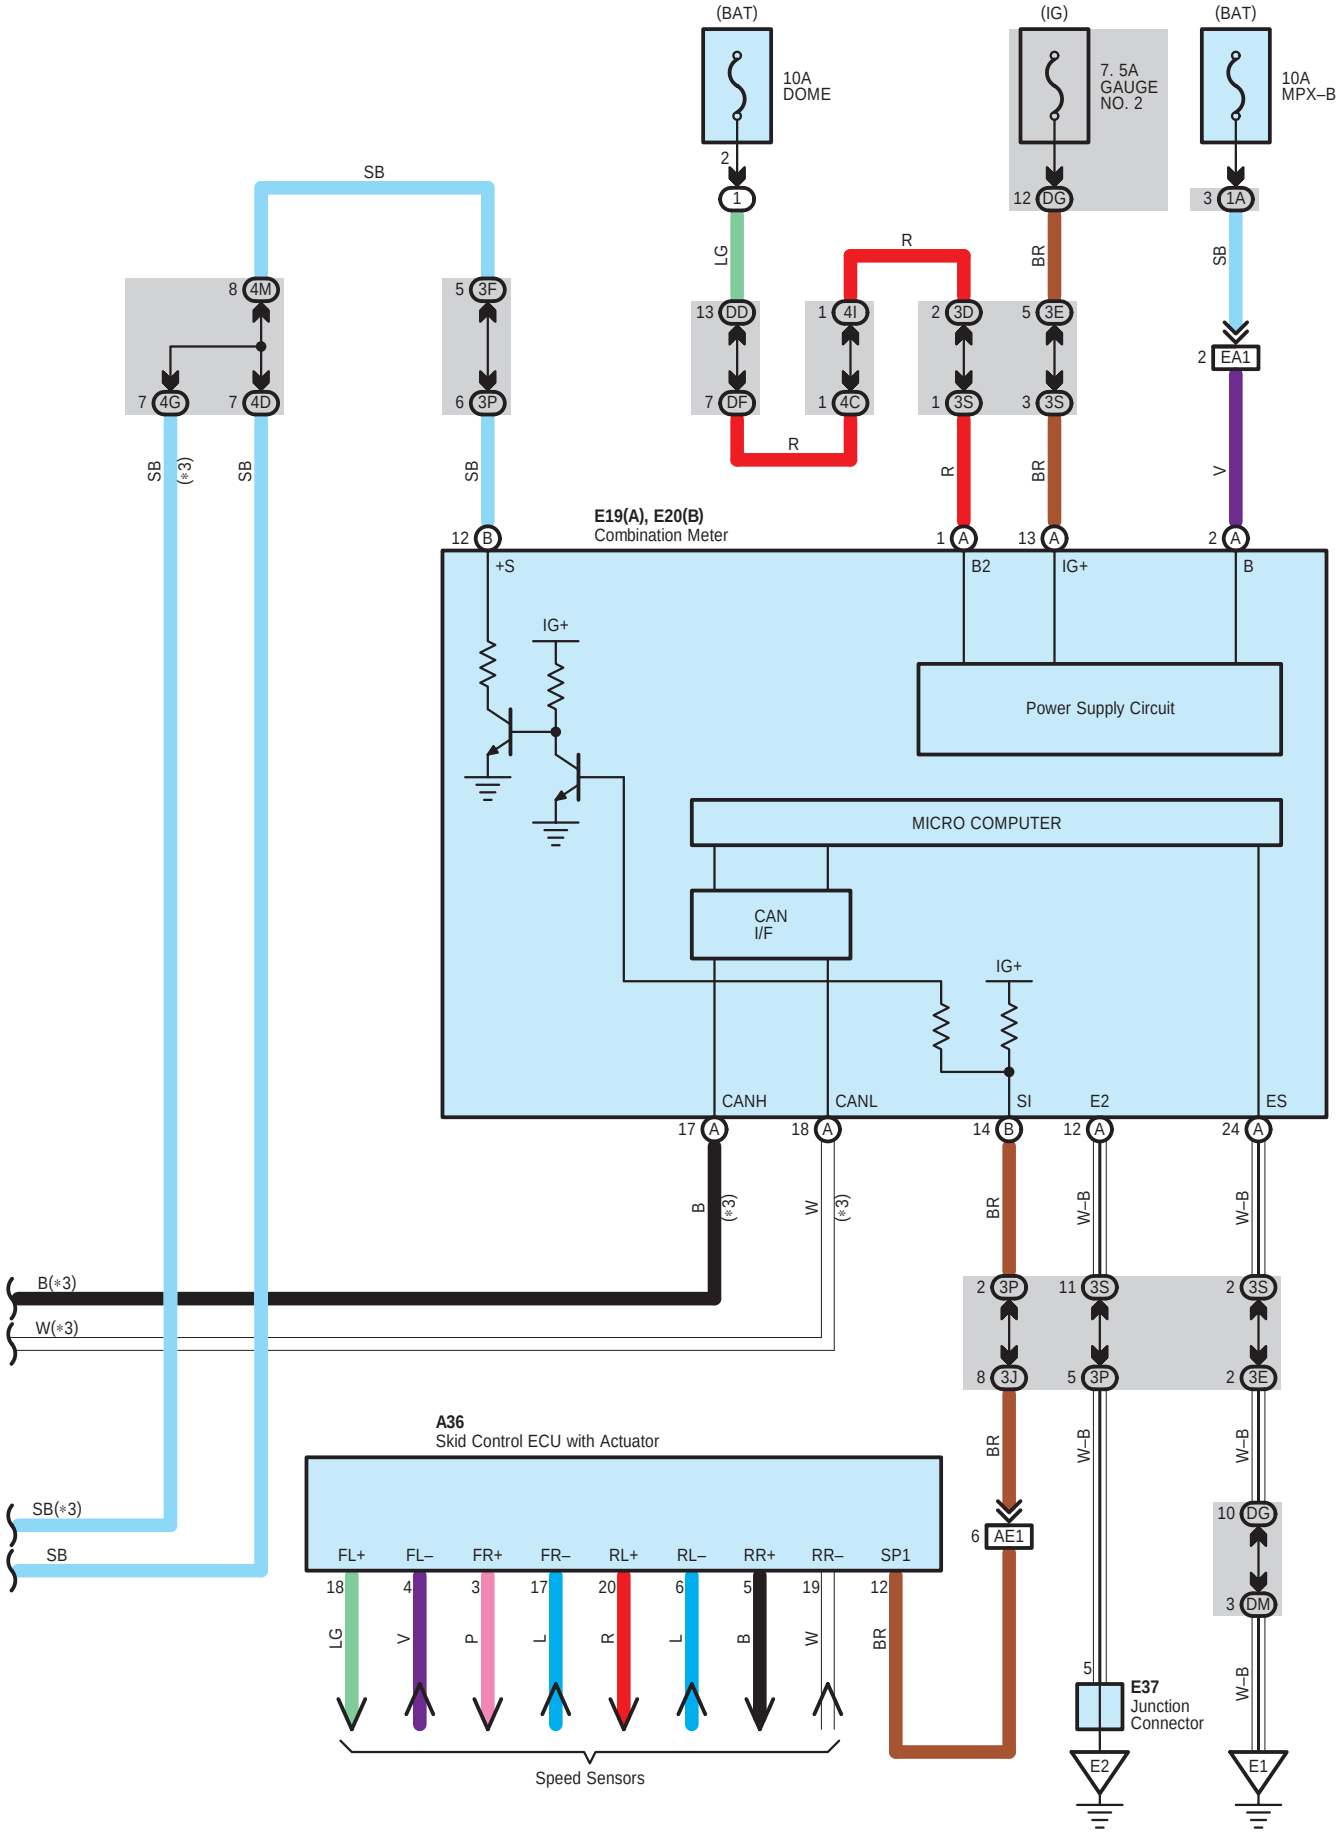
(BAT)
10A
DOME
(IG)
7. 5A
GAUGE
NO. 2
(BAT)
10A
MPX–B
SB
LG
R
BR
SB
V
E19(A), E20(B)
Combination Meter
+S
IG+
B2
IG+
B
Power Supply Circuit
MICRO COMPUTER
CAN
I/F
IG+
CANH
CANL
SI
E2
ES
B
W
BR
W–B
W–B
B(*3)
W(*3)
SB(*3)
SB
A36
Skid Control ECU with Actuator
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
SP1
Speed Sensors
E37
Junction
Connector
E2
E1

A 32
White

A 36
Black

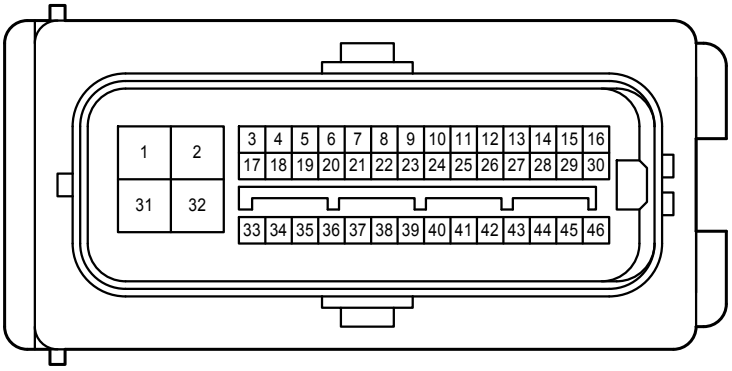

B 36
Gray

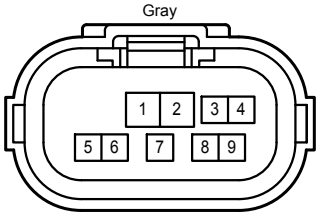

E 10
White

E 19
White

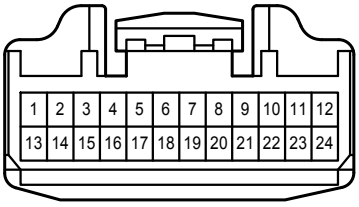

E 20
White

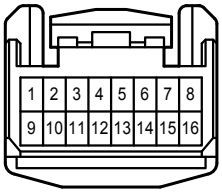

E 21
Black

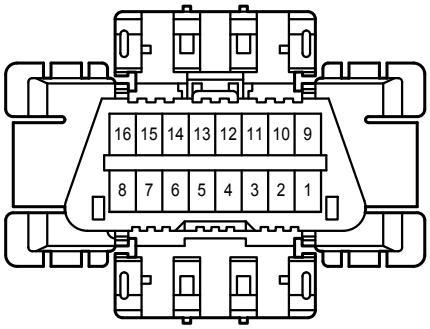

E 30
Black

E 31
Gray

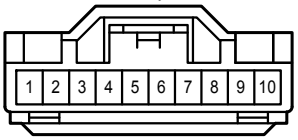

E 34
Blue

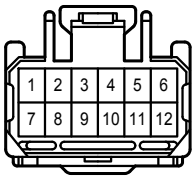

E 35
Blue

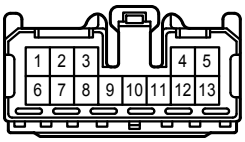

E 37
White

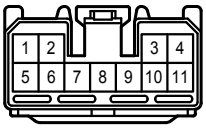

E 42
White



E 44
White



E 46
White



E 48
White



E 62
White

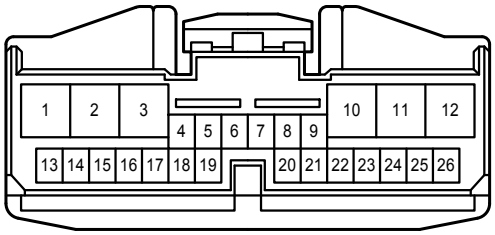

E 63
White

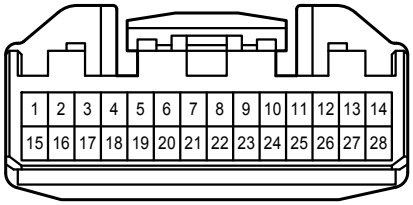

E 64
Blue

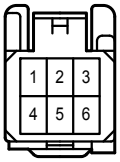

E 69
White

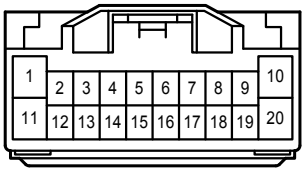

E 70
White

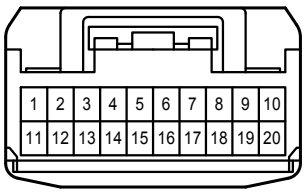

E 71
Blue

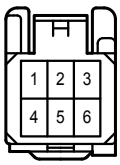

E 72
White

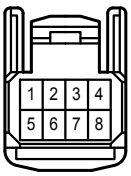

E 86
White

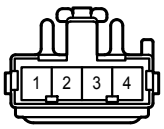

E 87
White

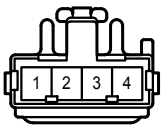

E 91
Black

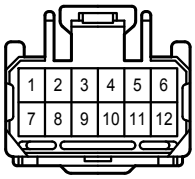

E 92
Black

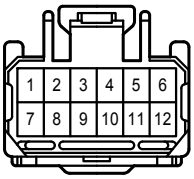

E 94
White

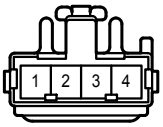

E 95
White

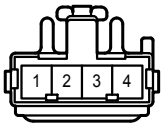

F 4
Gray

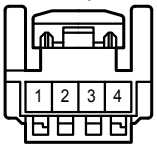

G 2
White



H 8
White

I 7
White

J 5
Gray

(8 Speaker)

J 5
White

(14 Speaker)

J 6
White

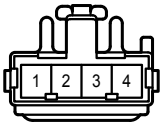

K 5
Gray



(8 Speaker)

K 5
White

(14 Speaker)

K 6
White

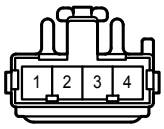

M 11
Blue

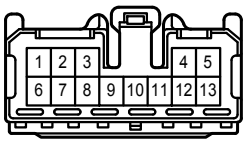

M 26
White



M 27
White



M 28
Blue

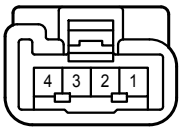

(8 Speaker)

M 28
White

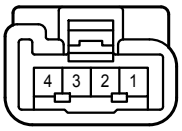

(14 Speaker)

M 29
White

M 30
White

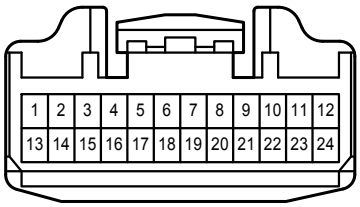

M 31
White

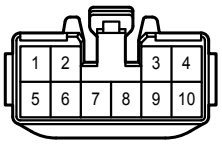

M 32
Blue

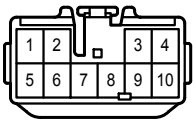

Q 2
White

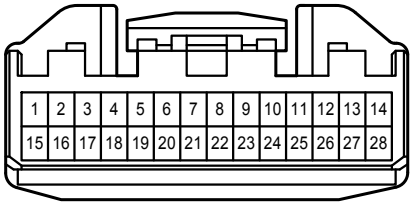

R 15
White



d 1
White

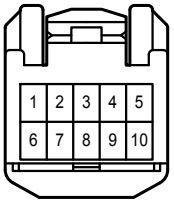

1A
White

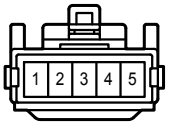

3D
White



3E
Gray



3F
White



3J
Gray



3L
Gray



3P
White



3S
Gray



4C
White



4D
Gray



4E
White



4G
White



4I
White



4J
Gray



4L
Gray



4M
White



DC
White

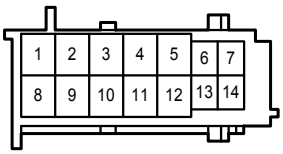

DD
White

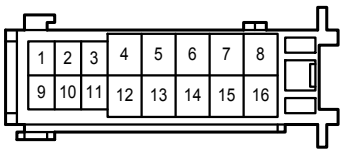

DF
White

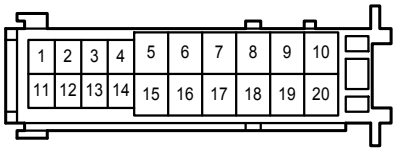

DG
White

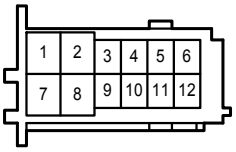

DH
White

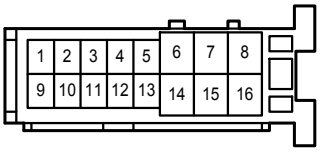

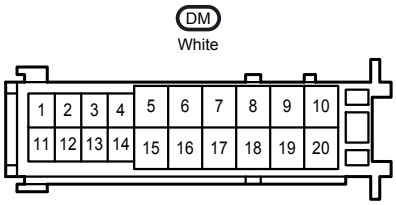
DM
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20

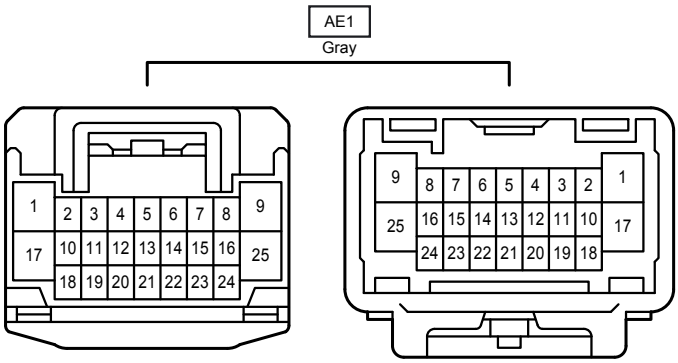
AE1
Gray
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18

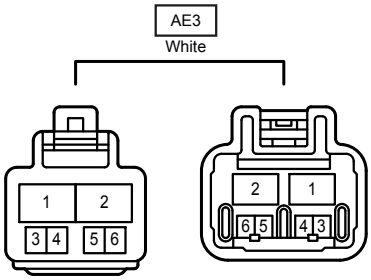
AE3
White
1 2
3 4 5 6
2 1
6 5 4 3

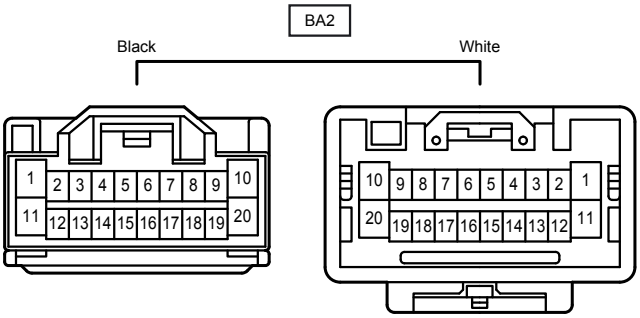
BA2
Black
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18 19 20
10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11

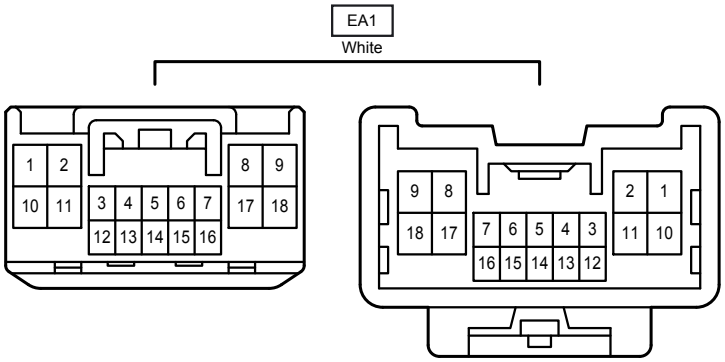
EA1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

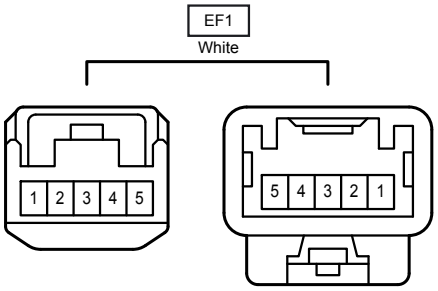
EF1
White
1 2 3 4 5
5 4 3 2 1

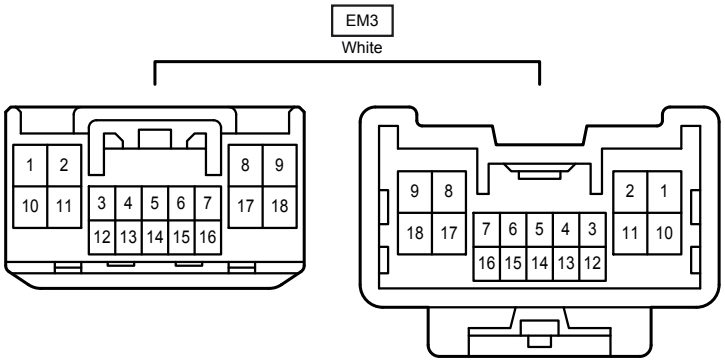
EM3
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10

EQ1
White

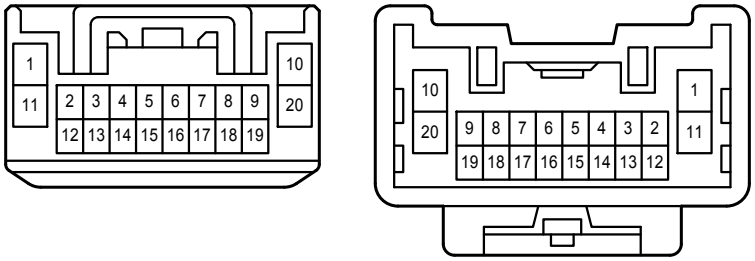

GE1
White

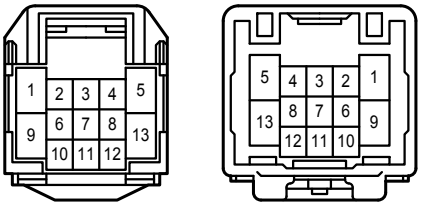

HE1
White

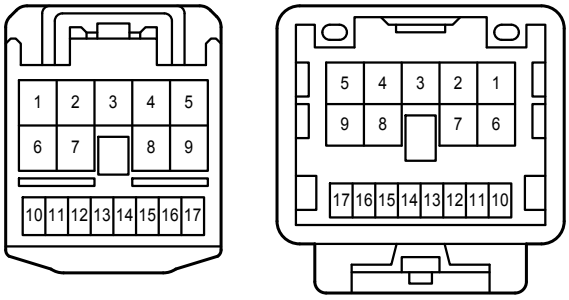

IE1
White

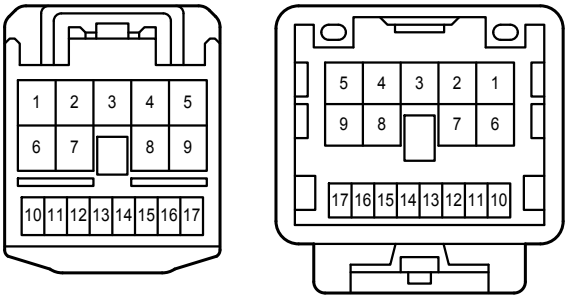

JM1
White

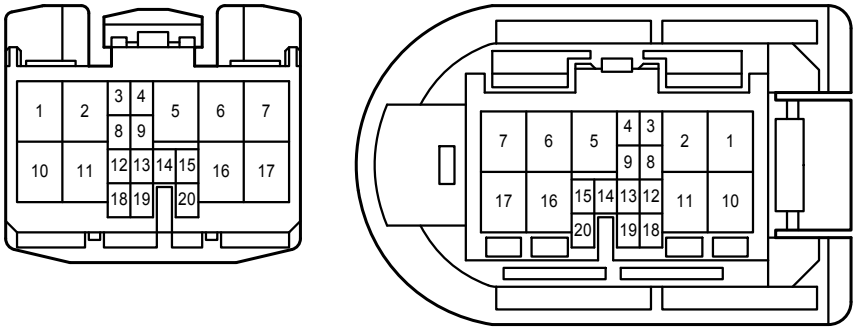

KL1
White

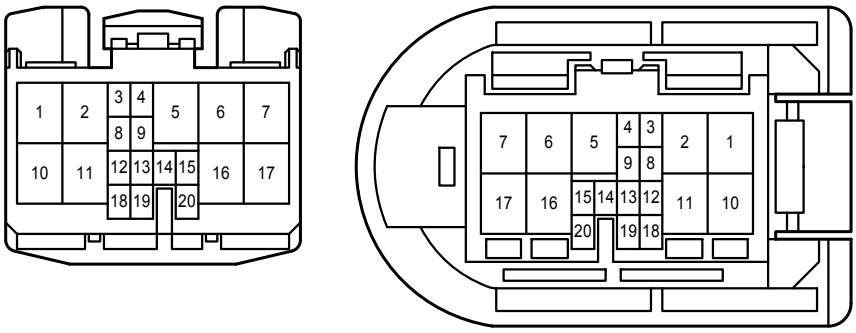

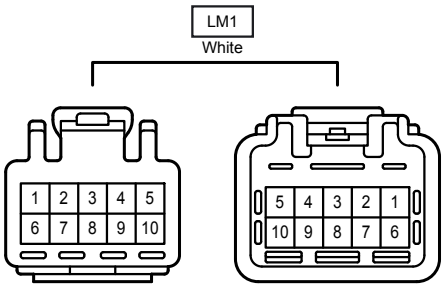
LM1
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6

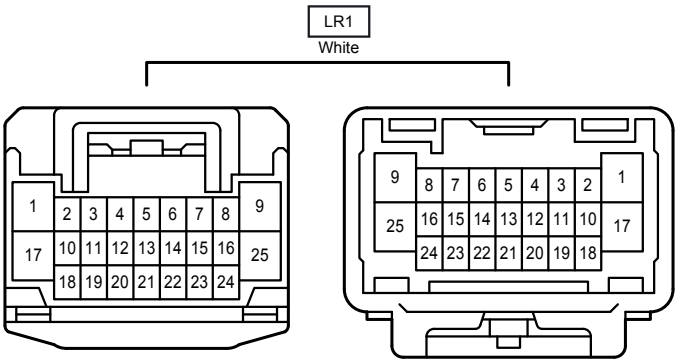
LR1
White
1 2 3 4 5 6 7 8 9
17 10 11 12 13 14 15 16 25
18 19 20 21 22 23 24
9 8 7 6 5 4 3 2 1
25 16 15 14 13 12 11 10 17
24 23 22 21 20 19 18

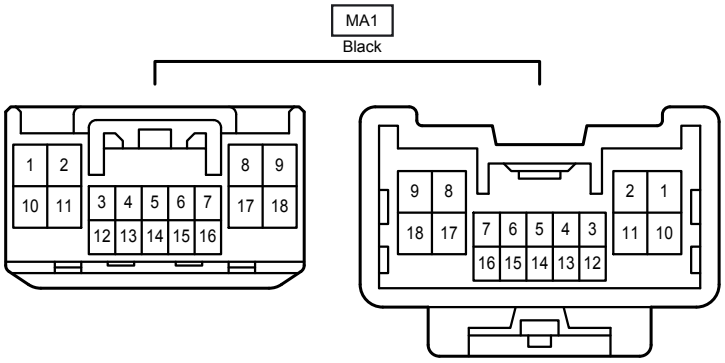
MA1
Black
1 2 8 9
10 11 3 4 5 6 7 17 18
12 13 14 15 16
9 8 2 1
18 17 7 6 5 4 3 11 10
16 15 14 13 12

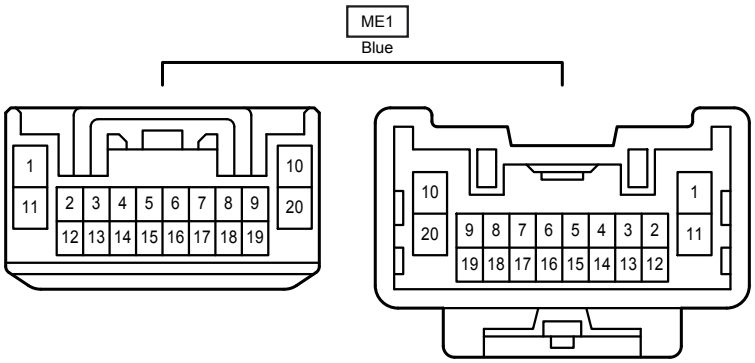
ME1
Blue
1 10
11 2 3 4 5 6 7 8 9 20
12 13 14 15 16 17 18 19
10 1
20 9 8 7 6 5 4 3 2 11
19 18 17 16 15 14 13 12