∗ 3 : w/ Rear Cross Traffic Alert Buzzer (Blind Spot Monitor Buzzer)
∗ 6 : Before Jul. 2015 Production
∗ 7 : From Jul. 2015 Production
∗ 9 : From Jul. 2015 Production until Aug. 2016 Production
∗10 : From Aug. 2016 Production

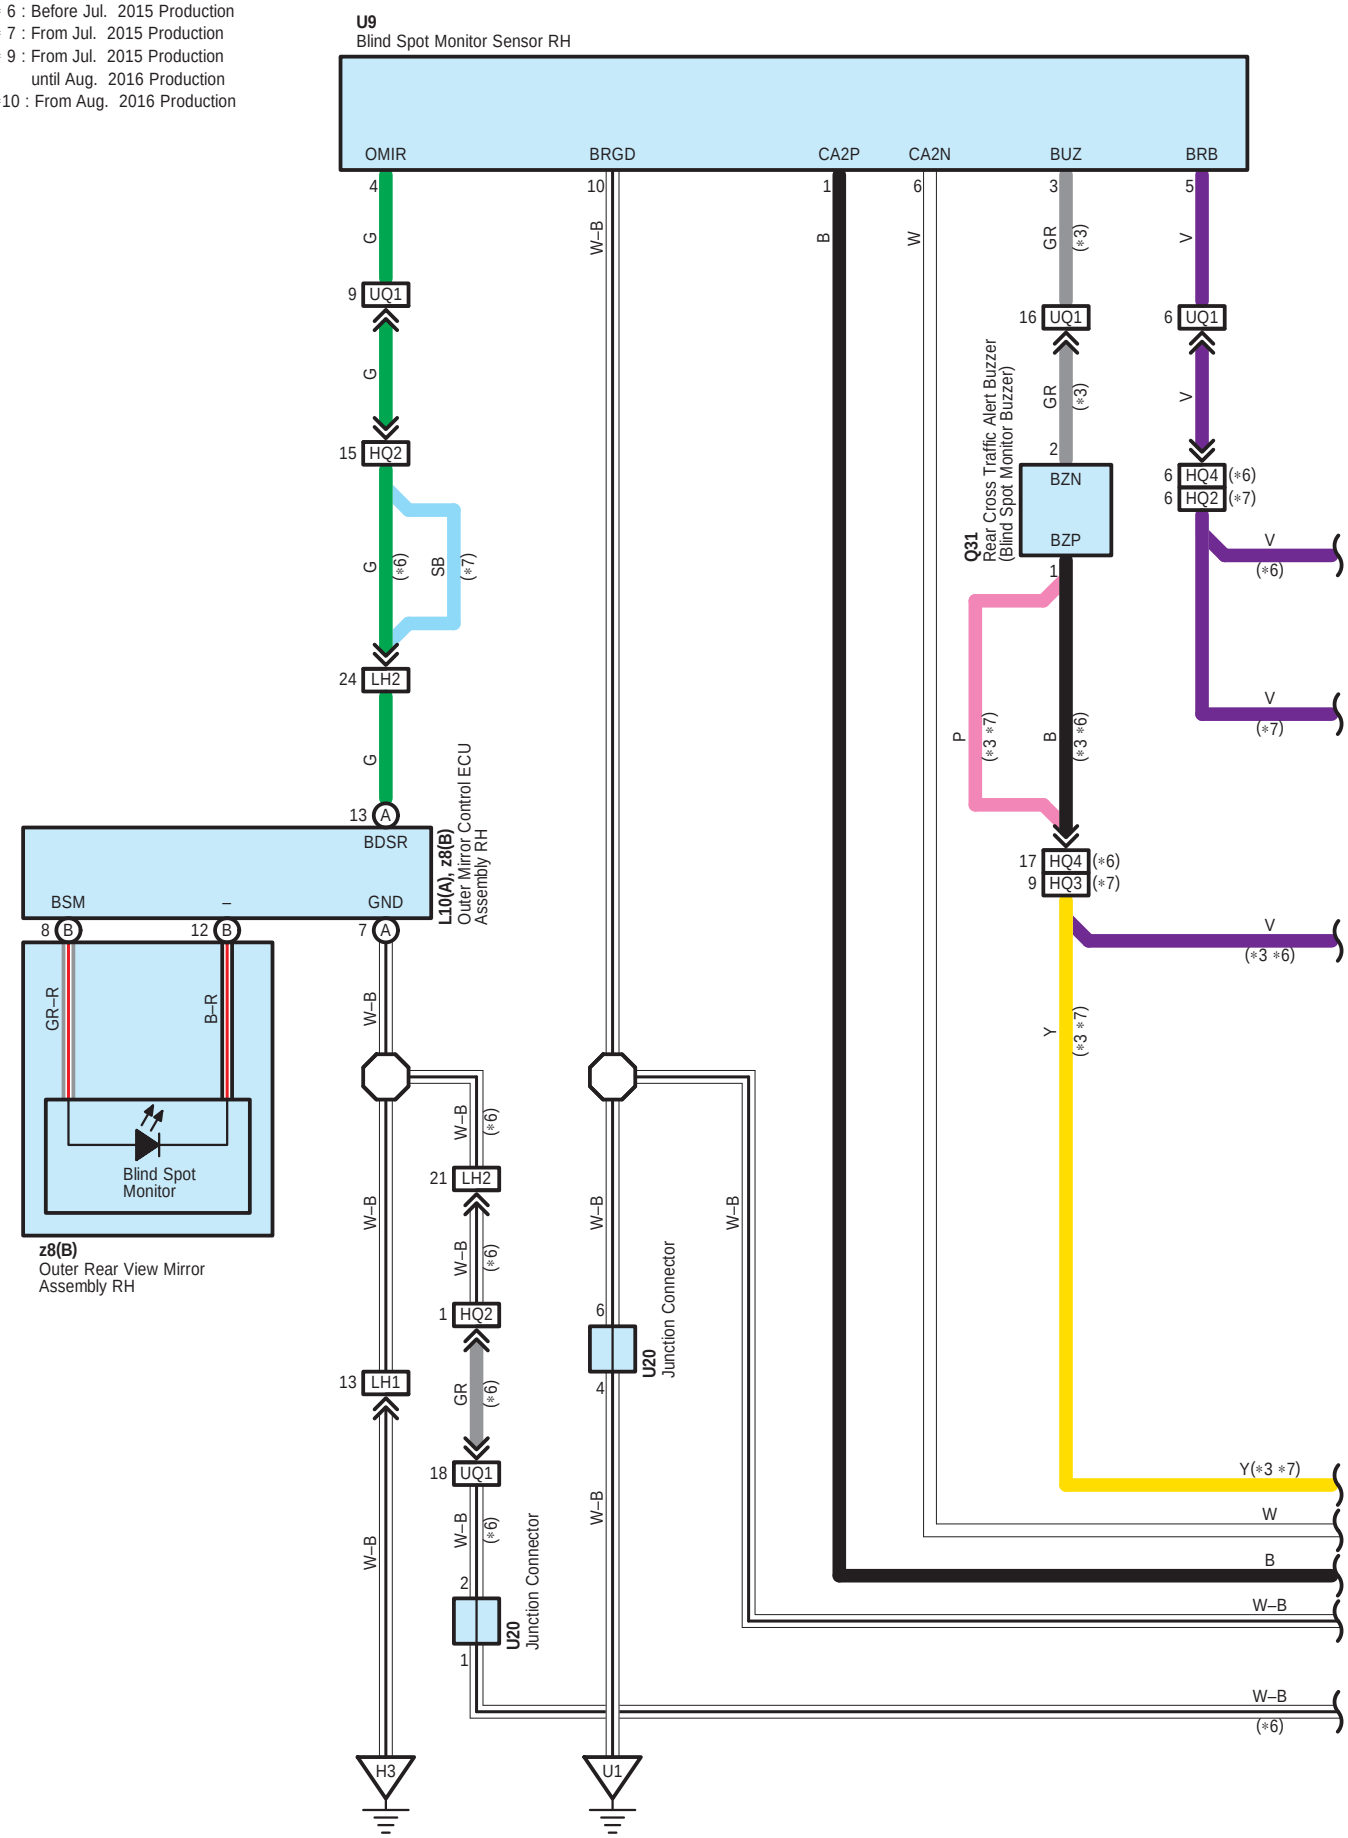

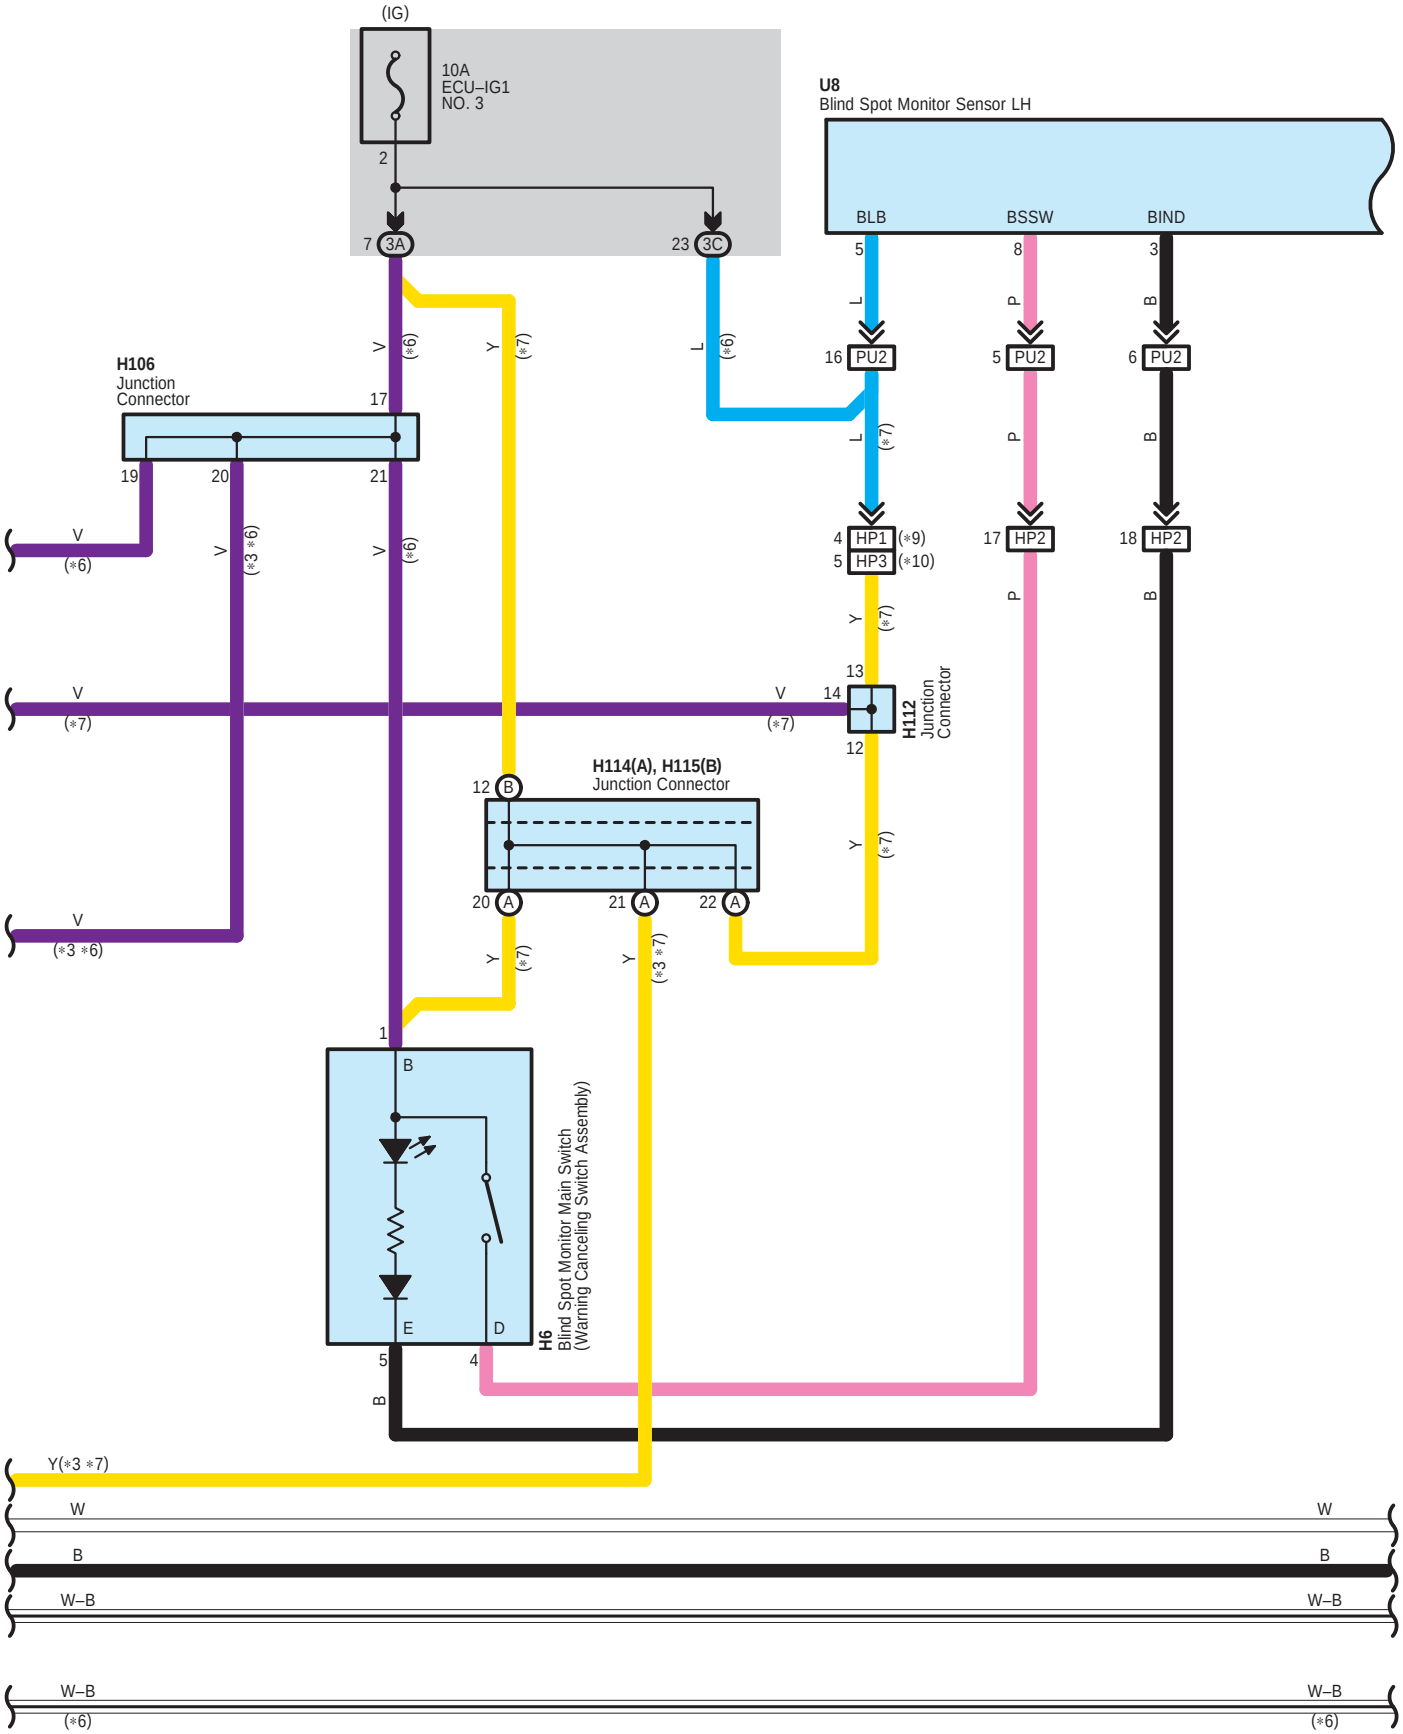
(IG)
10A
ECU–IG1
NO. 3
2
7 3A
23 3C
U8
Blind Spot Monitor Sensor LH
BLB
BSSW
BIND
5
8
3
16 PU2
5 PU2
6 PU2
H106
Junction
Connector
17
19
20
21
4 HP1 (*9)
5 HP3 (*10)
17 HP2
18 HP2
13
14
12
H112
Junction
Connector
H114(A), H115(B)
Junction Connector
12 B
20 A
21 A
22 A
1
B
E
D
5
4
H6
Blind Spot Monitor Main Switch
(Warning Canceling Switch Assembly)
Y(*3 *7)
W
B
W–B
(*6)

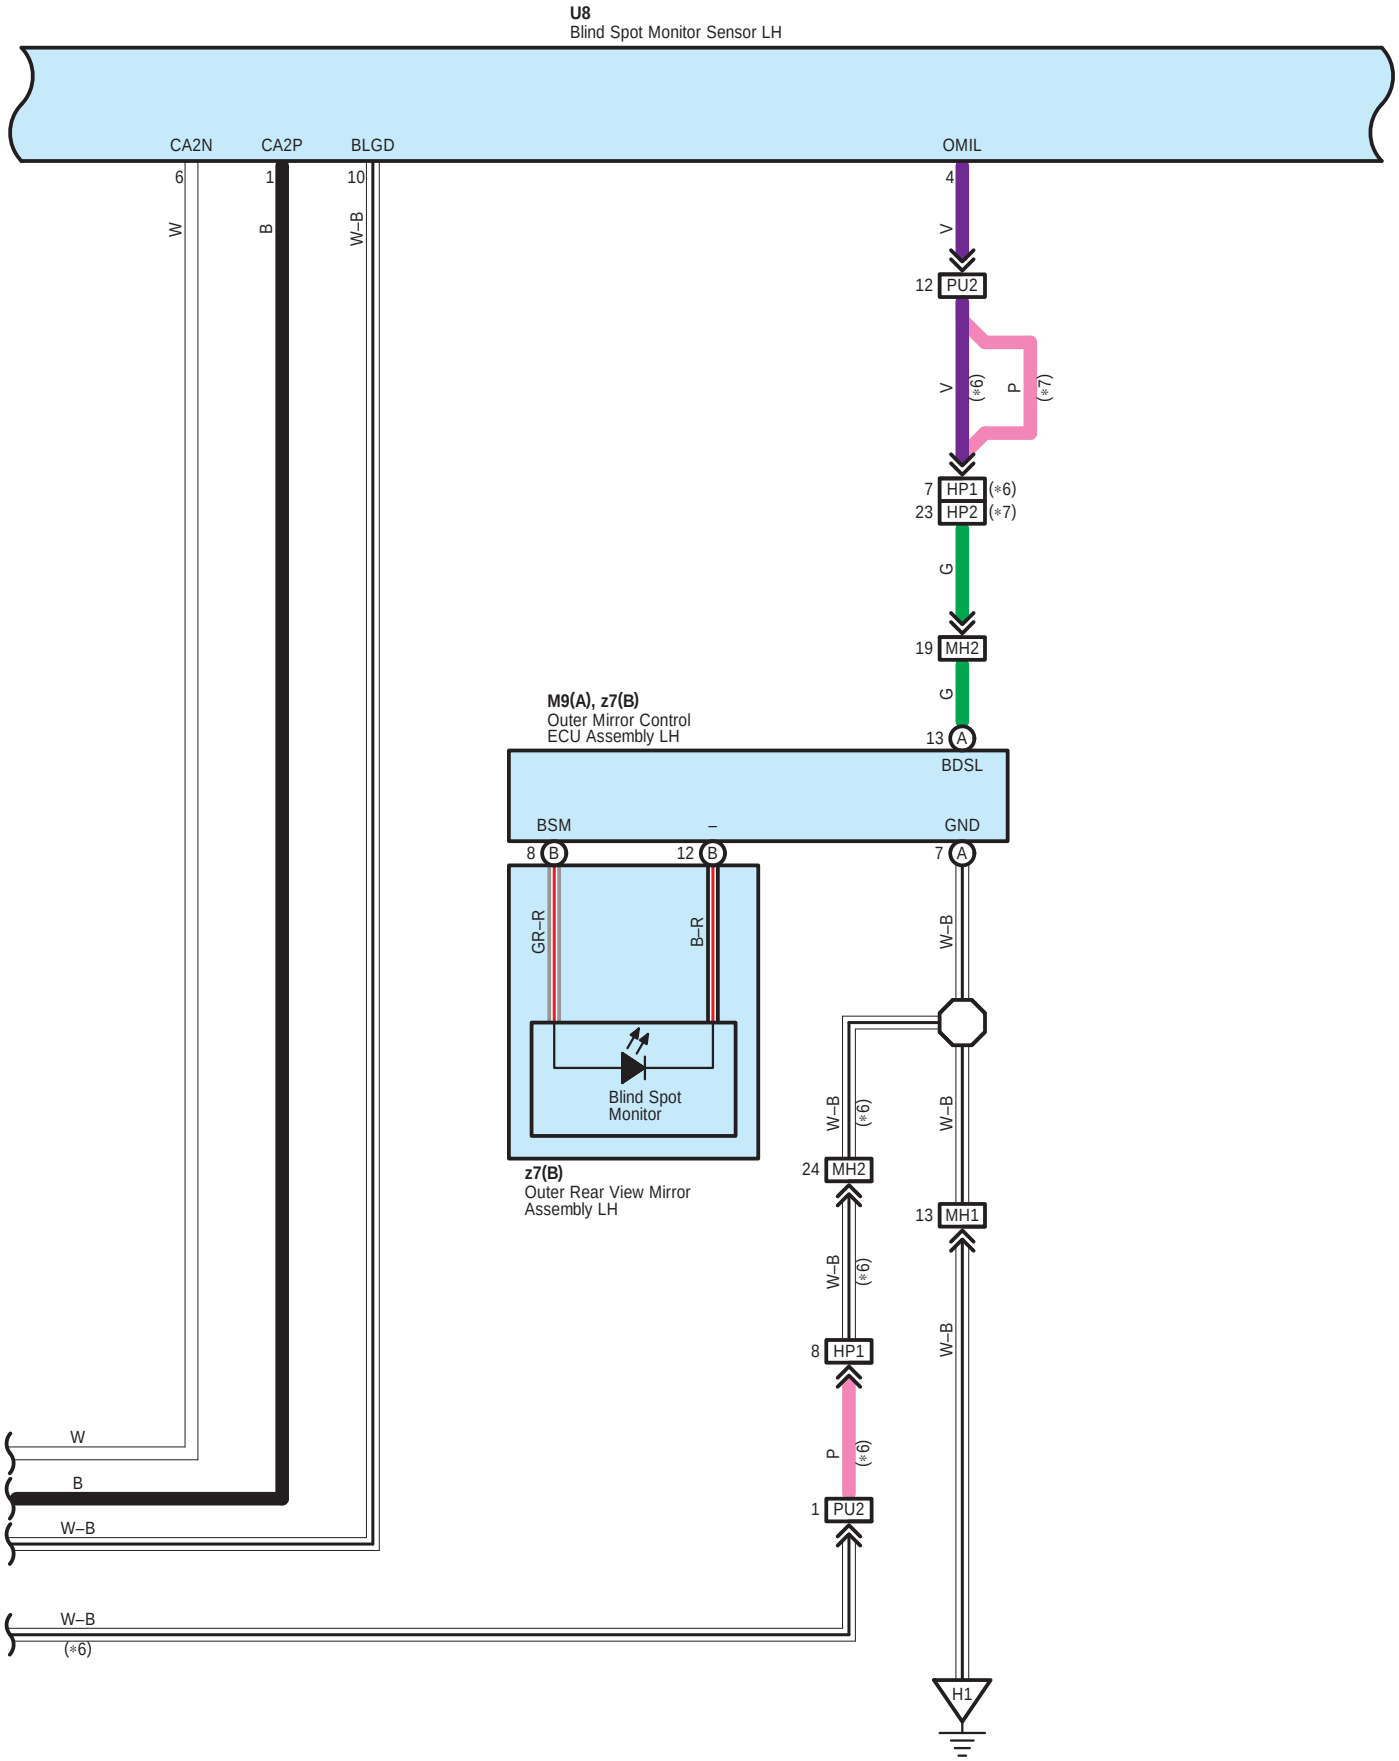
U8
Blind Spot Monitor Sensor LH
CA2N
CA2P
BLGD
OMIL
6
1
10
4
W
B
W–B
V
12 PU2
V
(*6)
P
(*7)
7 HP1 (*6)
23 HP2 (*7)
G
19 MH2
G
M9(A), z7(B)
Outer Mirror Control
ECU Assembly LH
13 A
BDSL
BSM
–
GND
8 B
12 B
7 A
GR–R
B–R
W–B
Blind Spot
Monitor
z7(B)
Outer Rear View Mirror
Assembly LH
W–B
(*6)
W–B
24 MH2
13 MH1
W–B
(*6)
W–B
8 HP1
P
(*6)
1 PU2
W
B
W–B
W–B
(*6)
H1

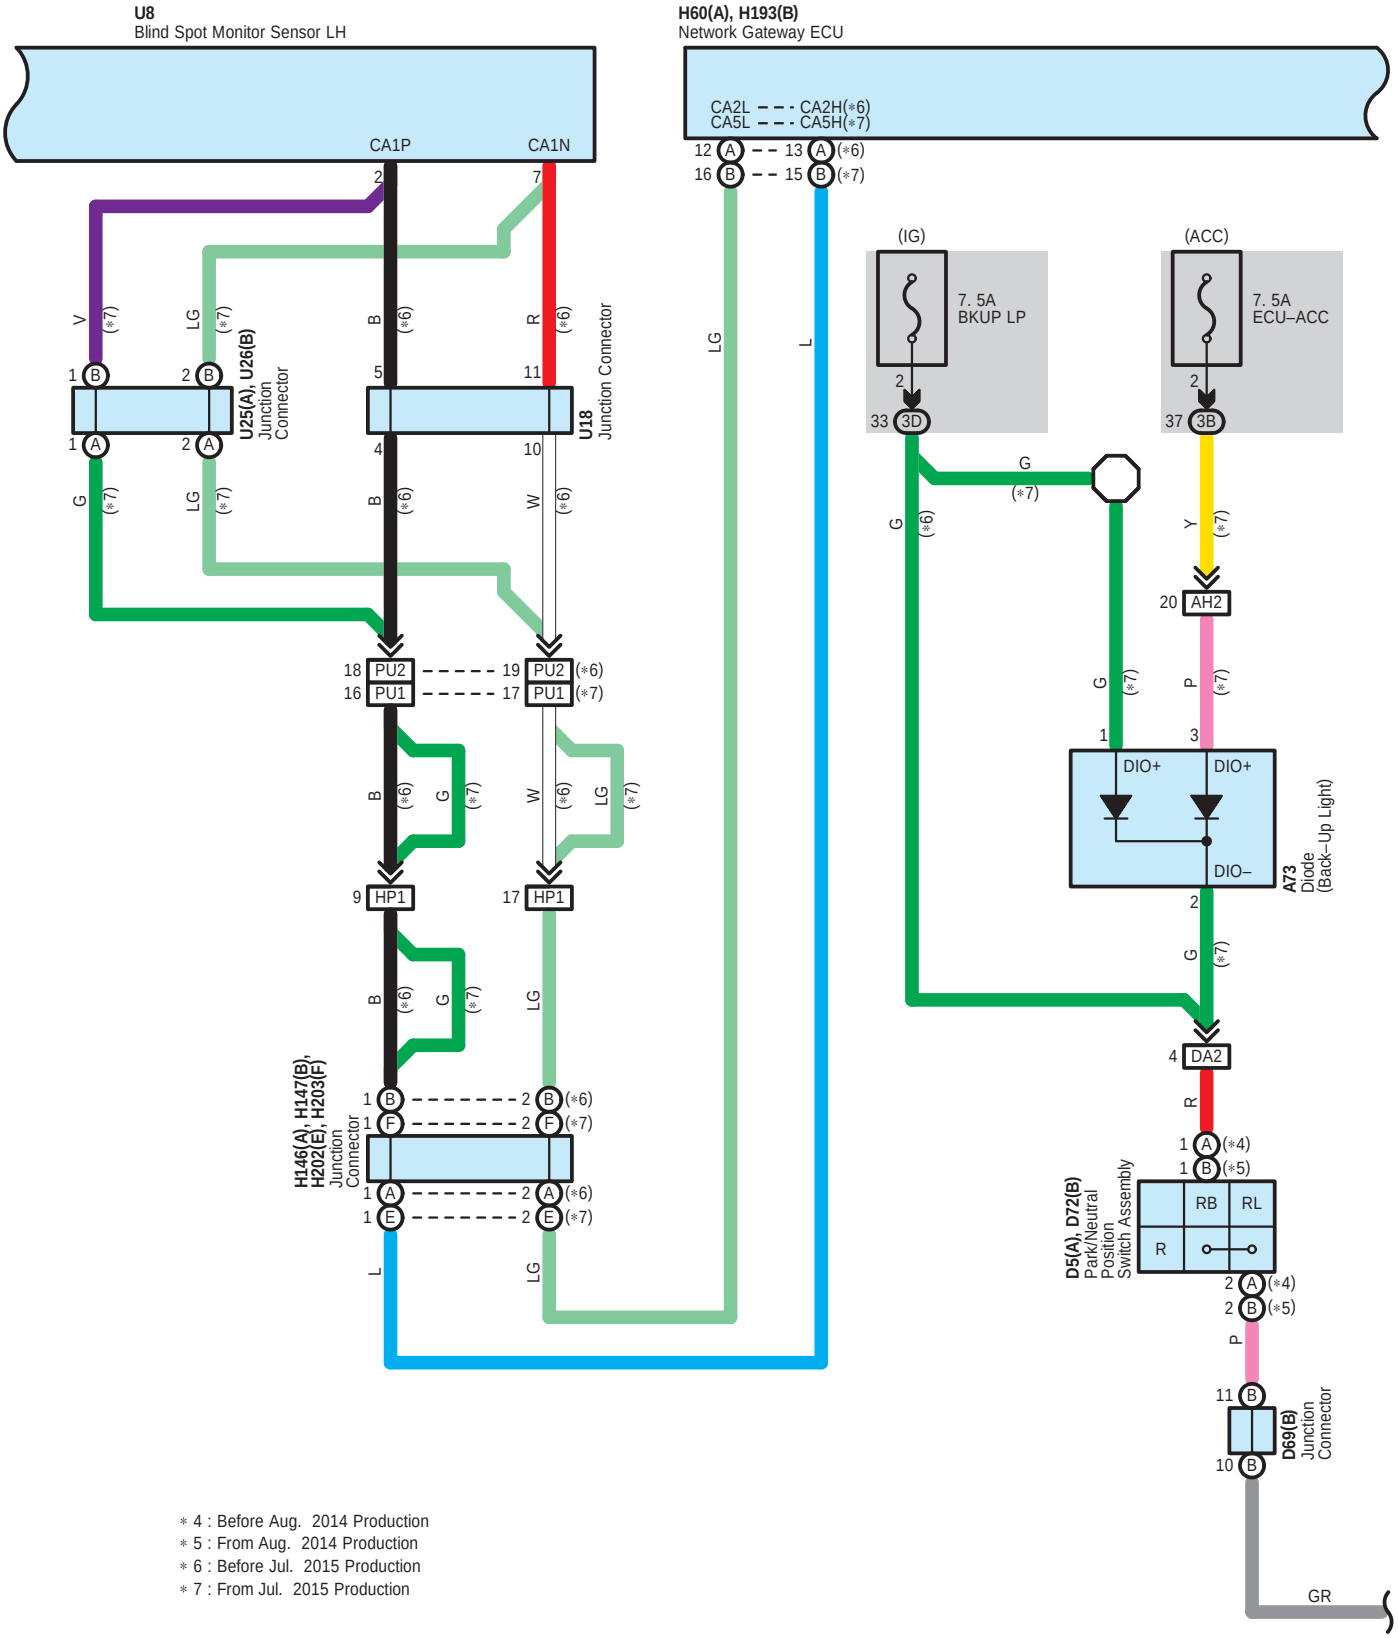

* 4 : Before Aug. 2014 Production
* 5 : From Aug. 2014 Production
* 6 : Before Jul. 2015 Production
* 7 : From Jul. 2015 Production

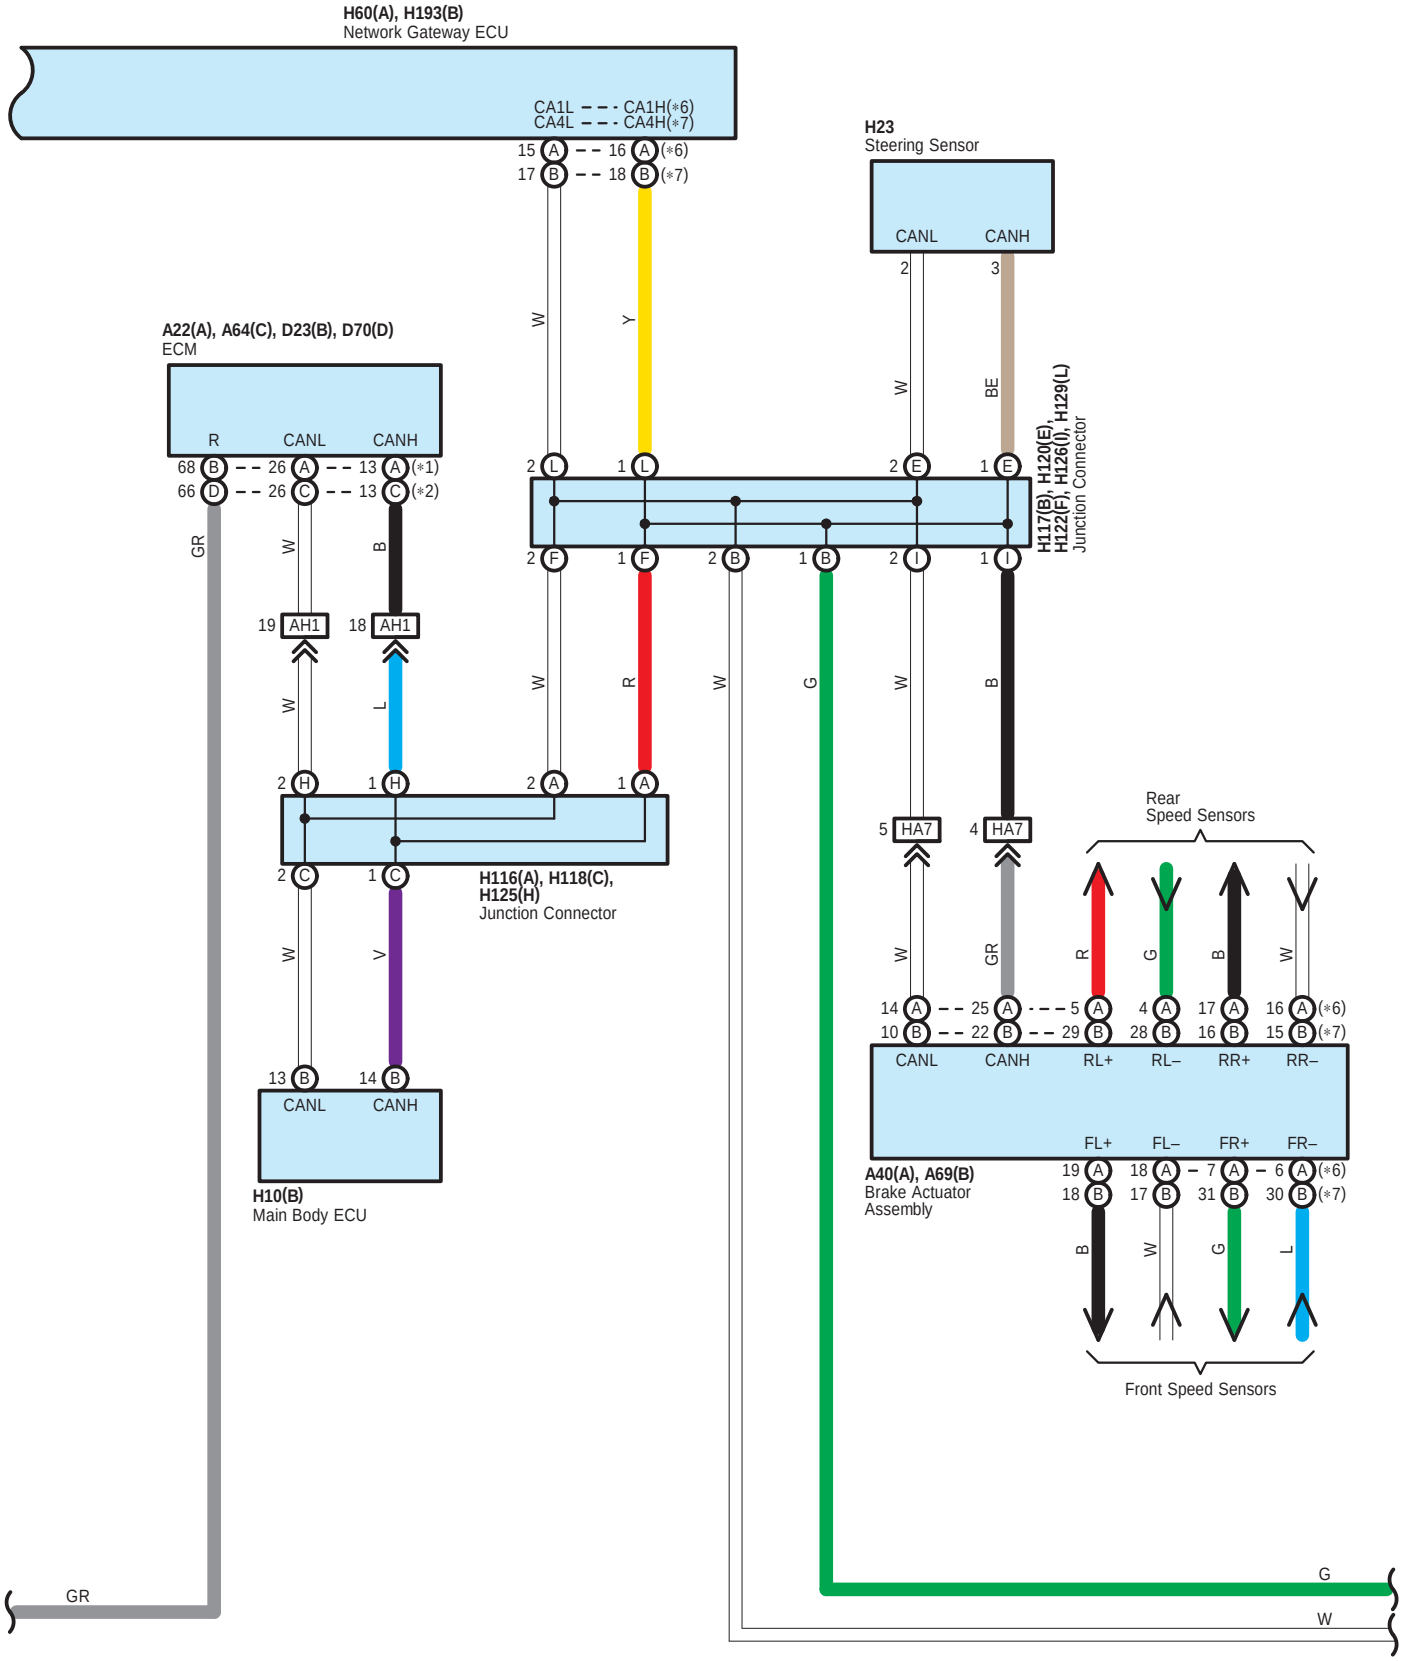
H60(A), H193(B)
Network Gateway ECU
CA1L CA1H(*6)
CA4L CA4H(*7)
15 A 16 A (*6)
17 B 18 B (*7)
H23
Steering Sensor
CANL CANH
2 3
A22(A), A64(C), D23(B), D70(D)
ECM
R CANL CANH
68 B 26 A 13 A (*1)
66 D 26 C 13 C (*2)
19 AH1 18 AH1
H117(B), H120(E),
H122(F), H126(I), H129(L)
Junction Connector
H116(A), H118(C),
H125(H)
Junction Connector
5 HA7 4 HA7
Rear
Speed Sensors
14 A 25 A 5 A 4 A 17 A 16 A (*6)
10 B 22 B 29 B 28 B 16 B 15 B (*7)
CANL CANH RL+ RL– RR+ RR–
FL+ FL– FR+ FR–
19 A 18 A 7 A 6 A (*6)
18 B 17 B 31 B 30 B (*7)
A40(A), A69(B)
Brake Actuator
Assembly
Front Speed Sensors
13 B 14 B
CANL CANH
H10(B)
Main Body ECU
GR
G
W

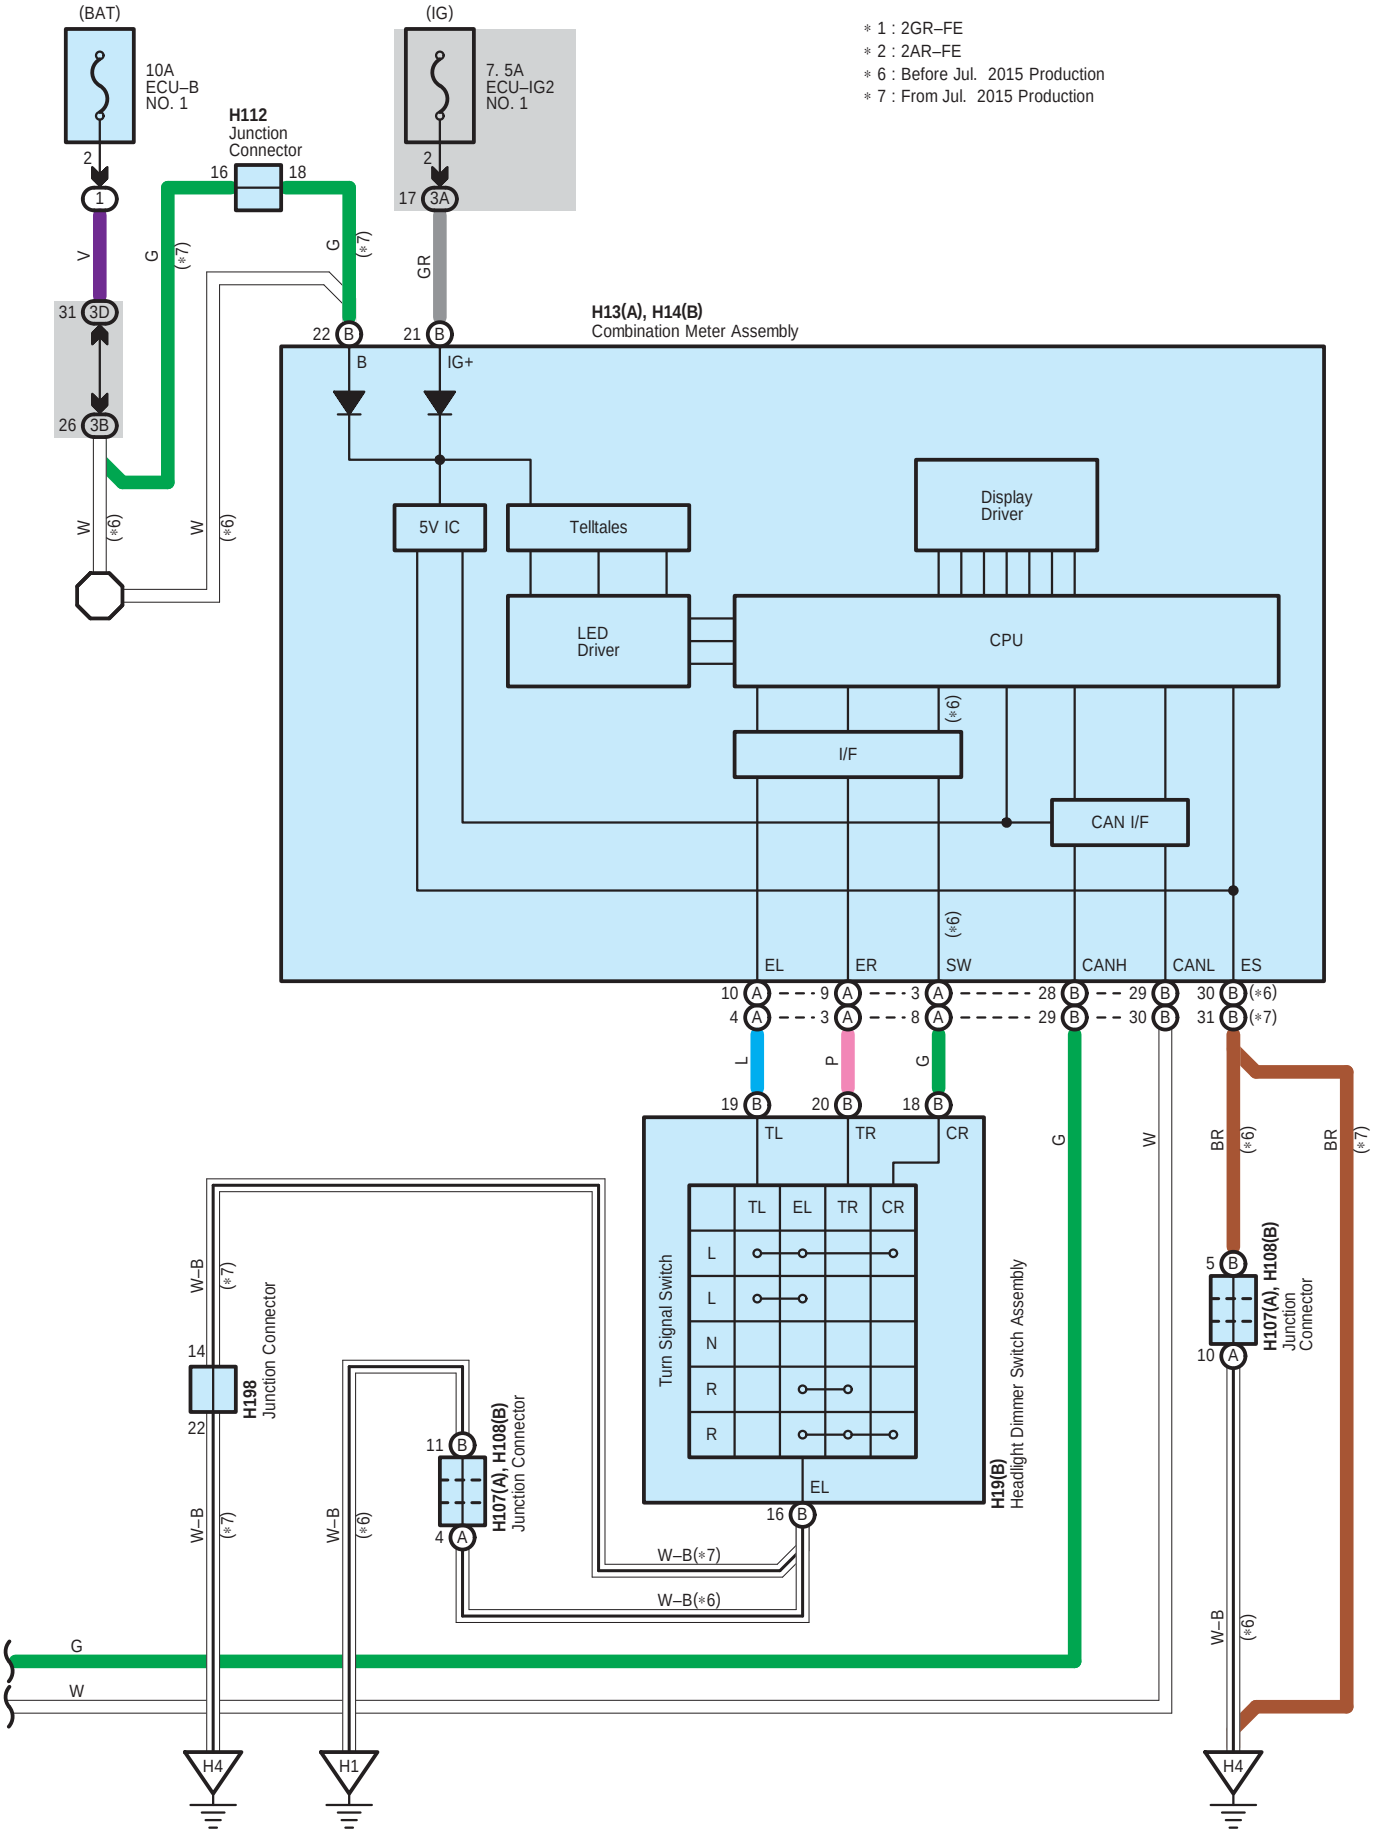
(BAT)
10A
ECU–B
NO. 1
(IG)
7. 5A
ECU–IG2
NO. 1
∗1 : 2GR–FE
∗2 : 2AR–FE
∗6 : Before Jul. 2015 Production
∗7 : From Jul. 2015 Production
H112
Junction
Connector
H13(A), H14(B)
Combination Meter Assembly
B
IG+
5V IC
Telltales
Display
Driver
LED
Driver
CPU
I/F
CAN I/F
EL
ER
SW
CANH
CANL
ES
TL
TR
CR
Turn Signal Switch
H19(B)
Headlight Dimmer Switch Assembly
H198
Junction Connector
H107(A), H108(B)
Junction Connector
W–B(∗7)
W–B(∗6)
H4
H1

A 22

Black

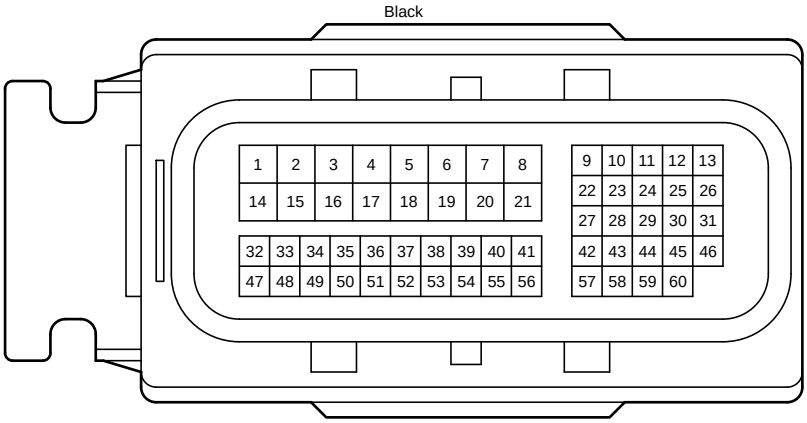

A 40

Black

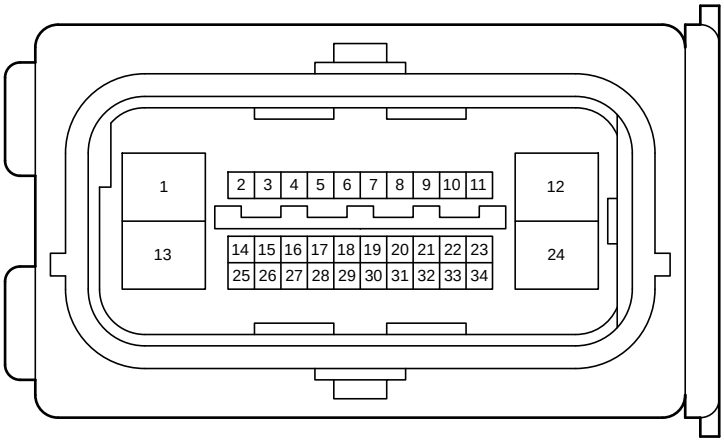

A 64

Black

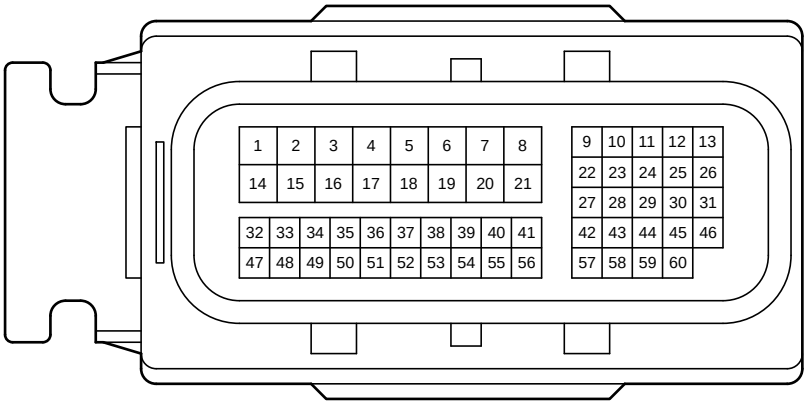

A 69
Black

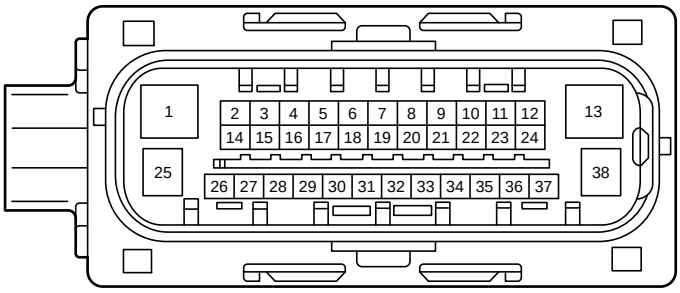

A 73
White



D 5
Gray

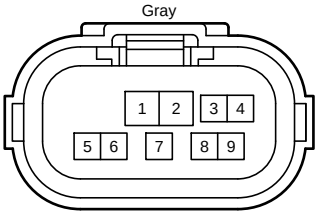

D 23
Black

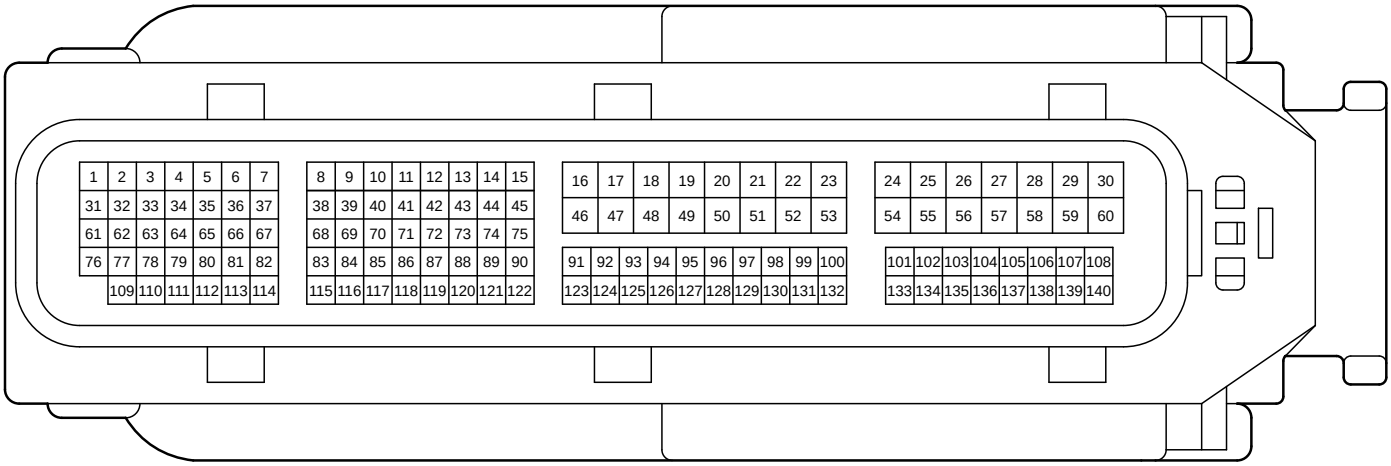

D 69
White

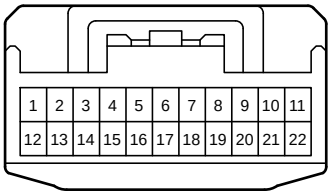

D 70
Black

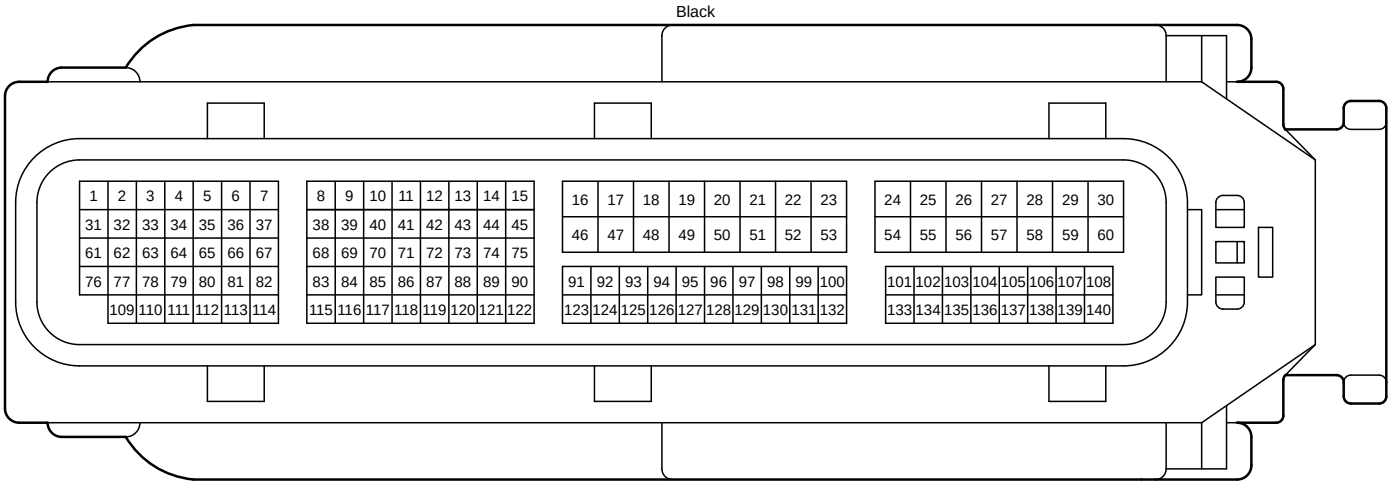

D 72
Gray

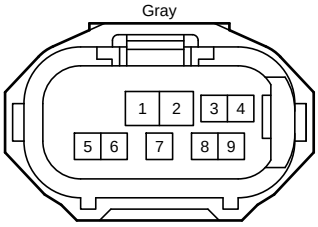

H 6
Black

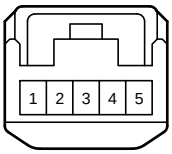

H 10
White

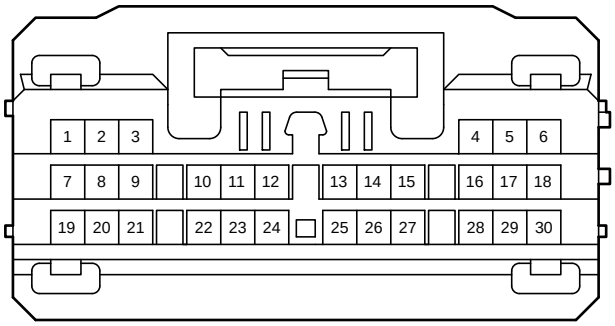

H 13
Black

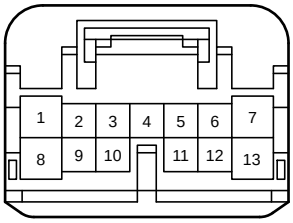

H 14
Black

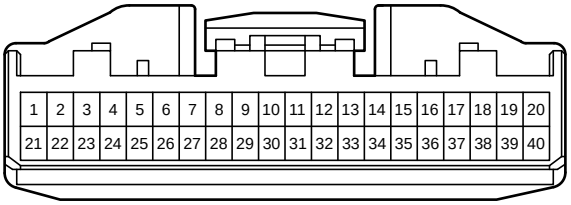

H 19
Black

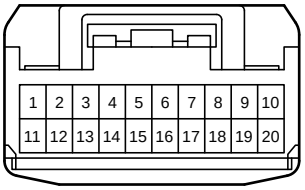

H 23
Blue

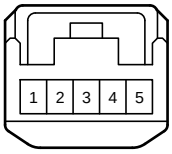

H 60
White

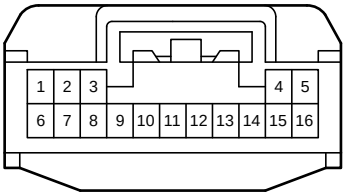

H106
Blue

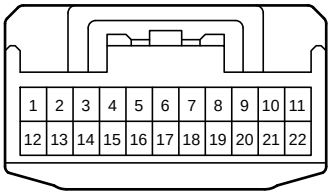

H107
Gray

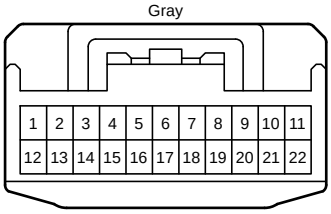

H108
Gray

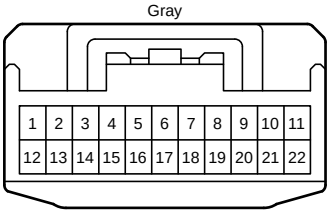

H112
White

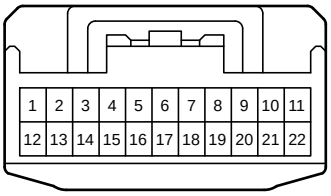

H114
Black

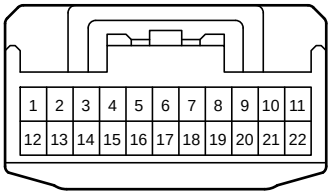

H115
Black

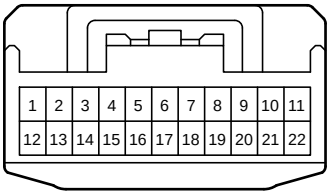

H116
White



H117
White



H118
White



H120
White



H122
White



H125
White



H126
White



H129
White



H146
White



H147
White



H193
Black

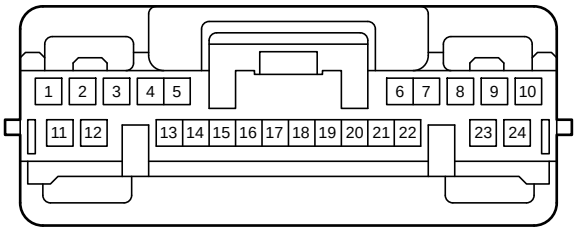

H198
White

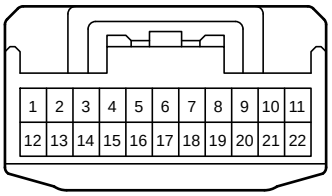

H202
White



H203
White



L 10
White

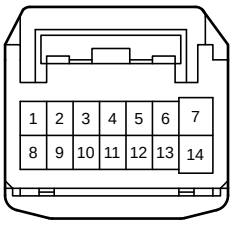

M 9
White

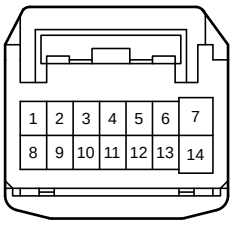

Q 31
Black



U 8
Black

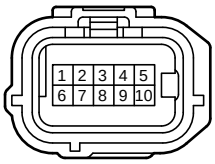

U 9
Black

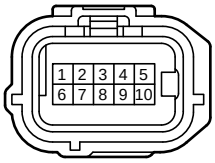

U 18
White

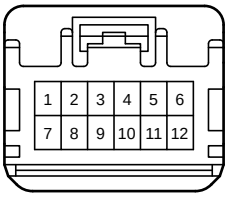

U 20
White

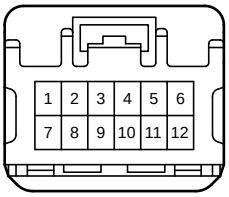

U 25
White



U 26
White



z 7
White

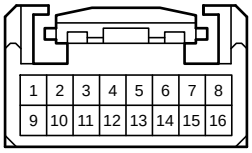

z 8
White

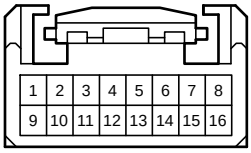

3A
White

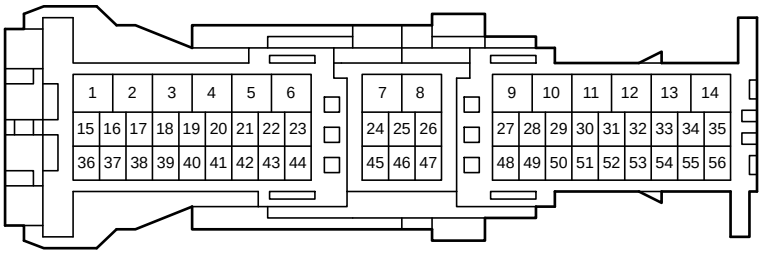

3B
White

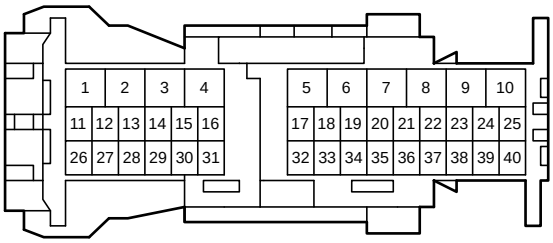

3C
White

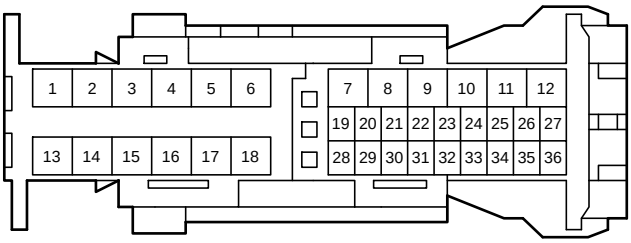

3D
White

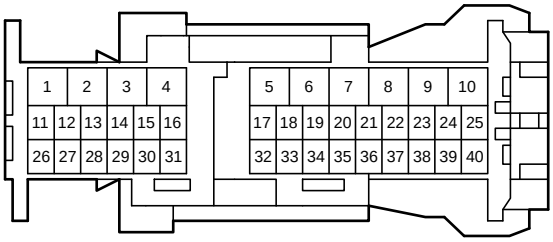

AH1
White

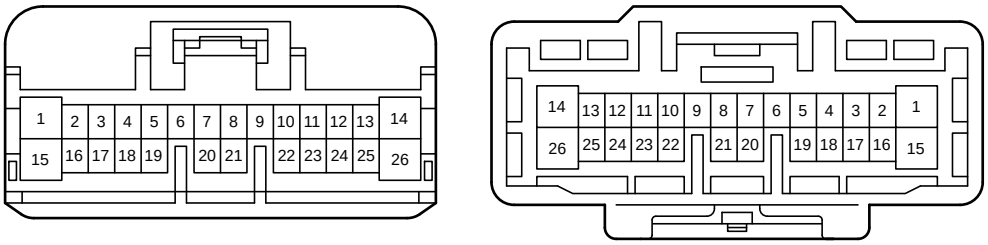

AH2
White

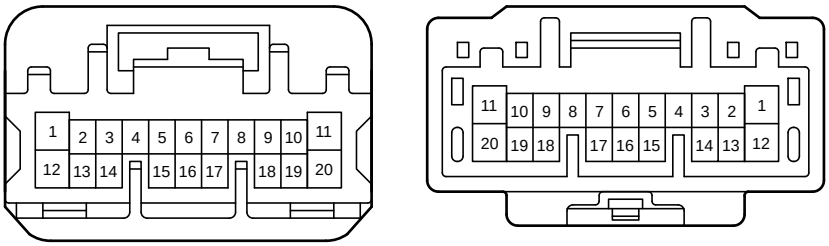

DA2
White

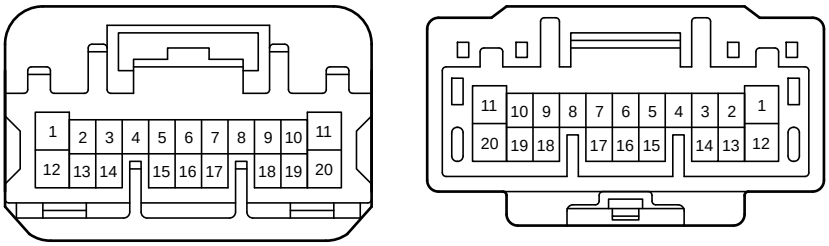

HA7
Gray

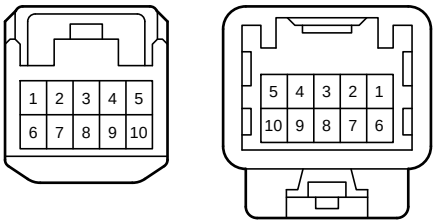

HP1
White

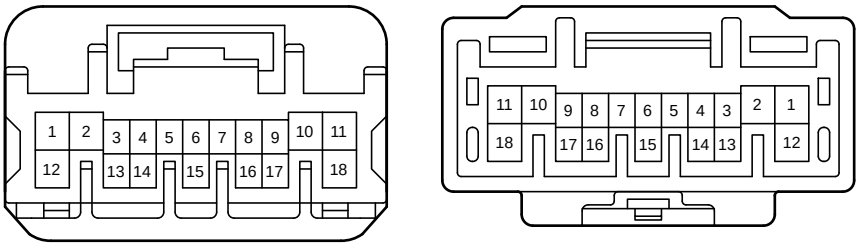

HP2
White

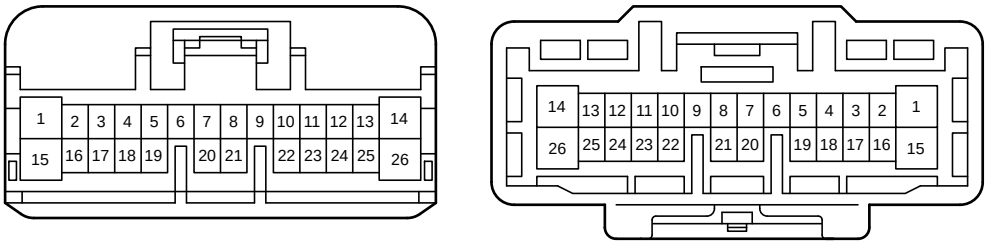

HP3
White

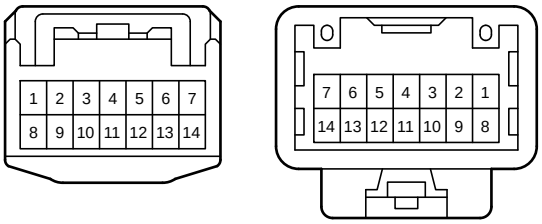

HQ2
White

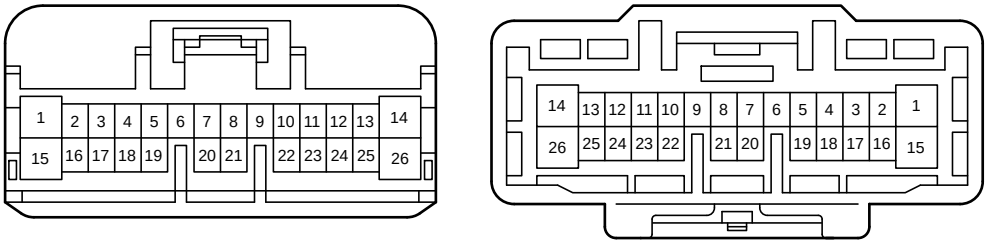

HQ3
Gray

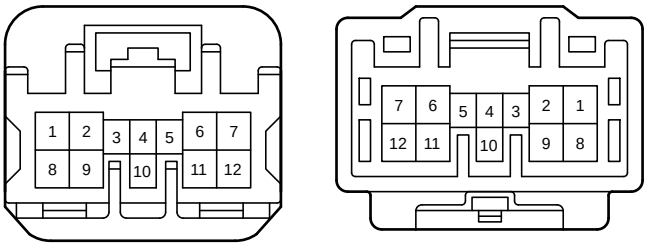

HQ4
White

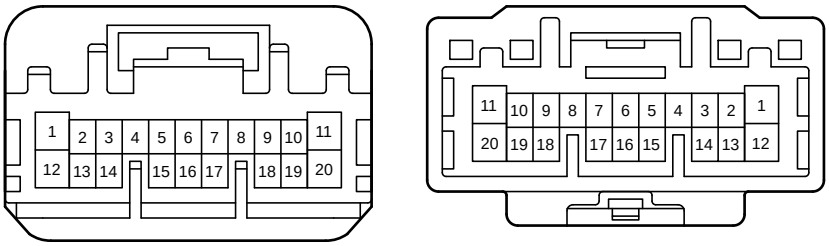

LH1
Gray

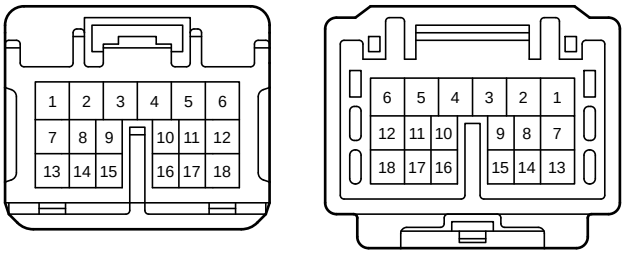

LH2
Blue

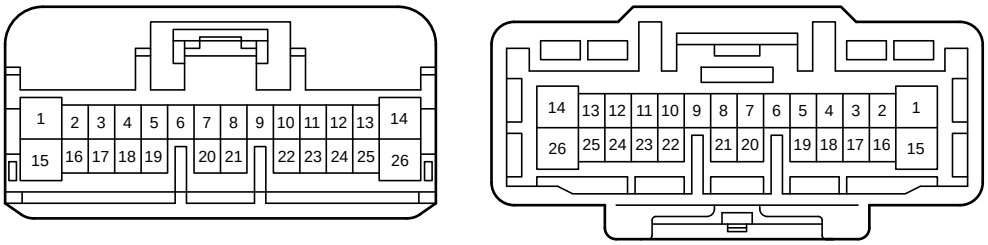

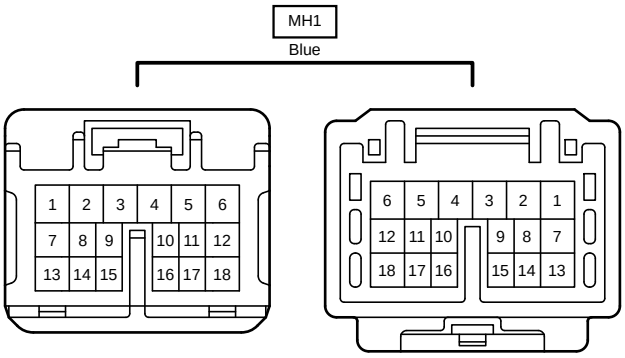
MH1
Blue
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13

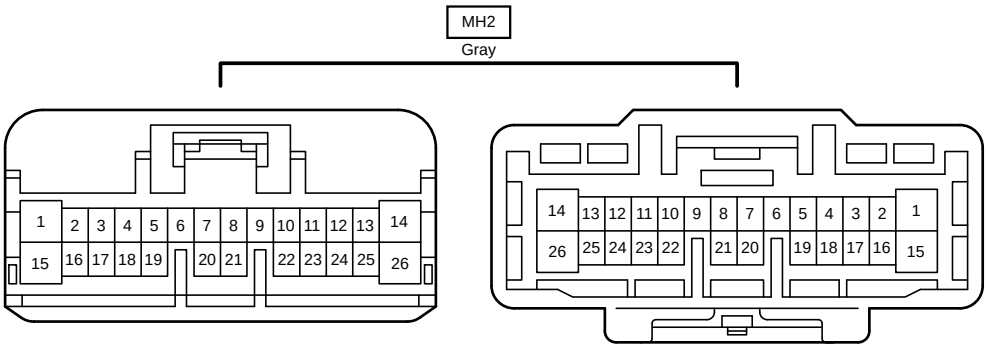
MH2
Gray
1 2 3 4 5 6 7 8 9 10 11 12 13 14
15 16 17 18 19 20 21 22 23 24 25 26
14 13 12 11 10 9 8 7 6 5 4 3 2 1
26 25 24 23 22 21 20 19 18 17 16 15

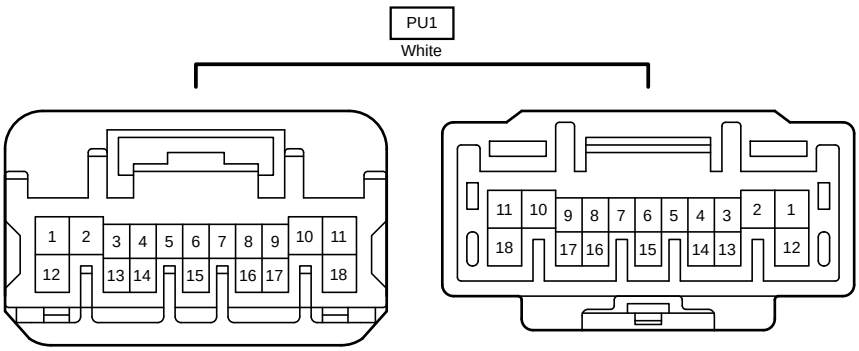
PU1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18
11 10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12

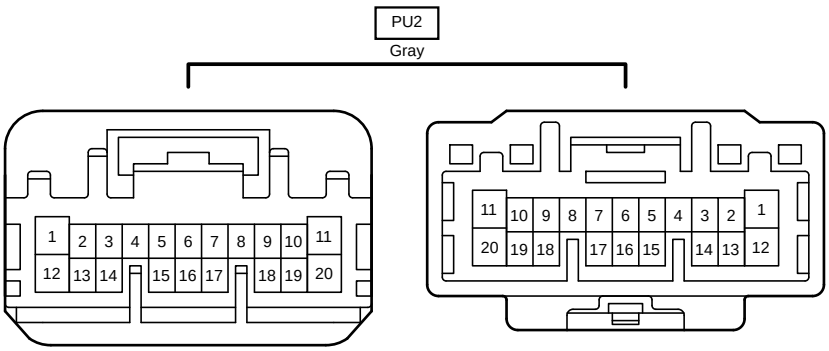
PU2
Gray
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20
11 10 9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12

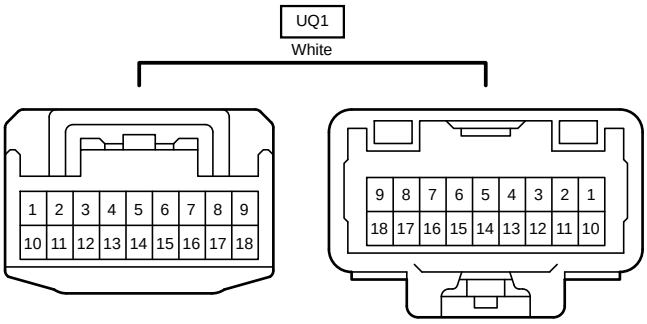
UQ1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10