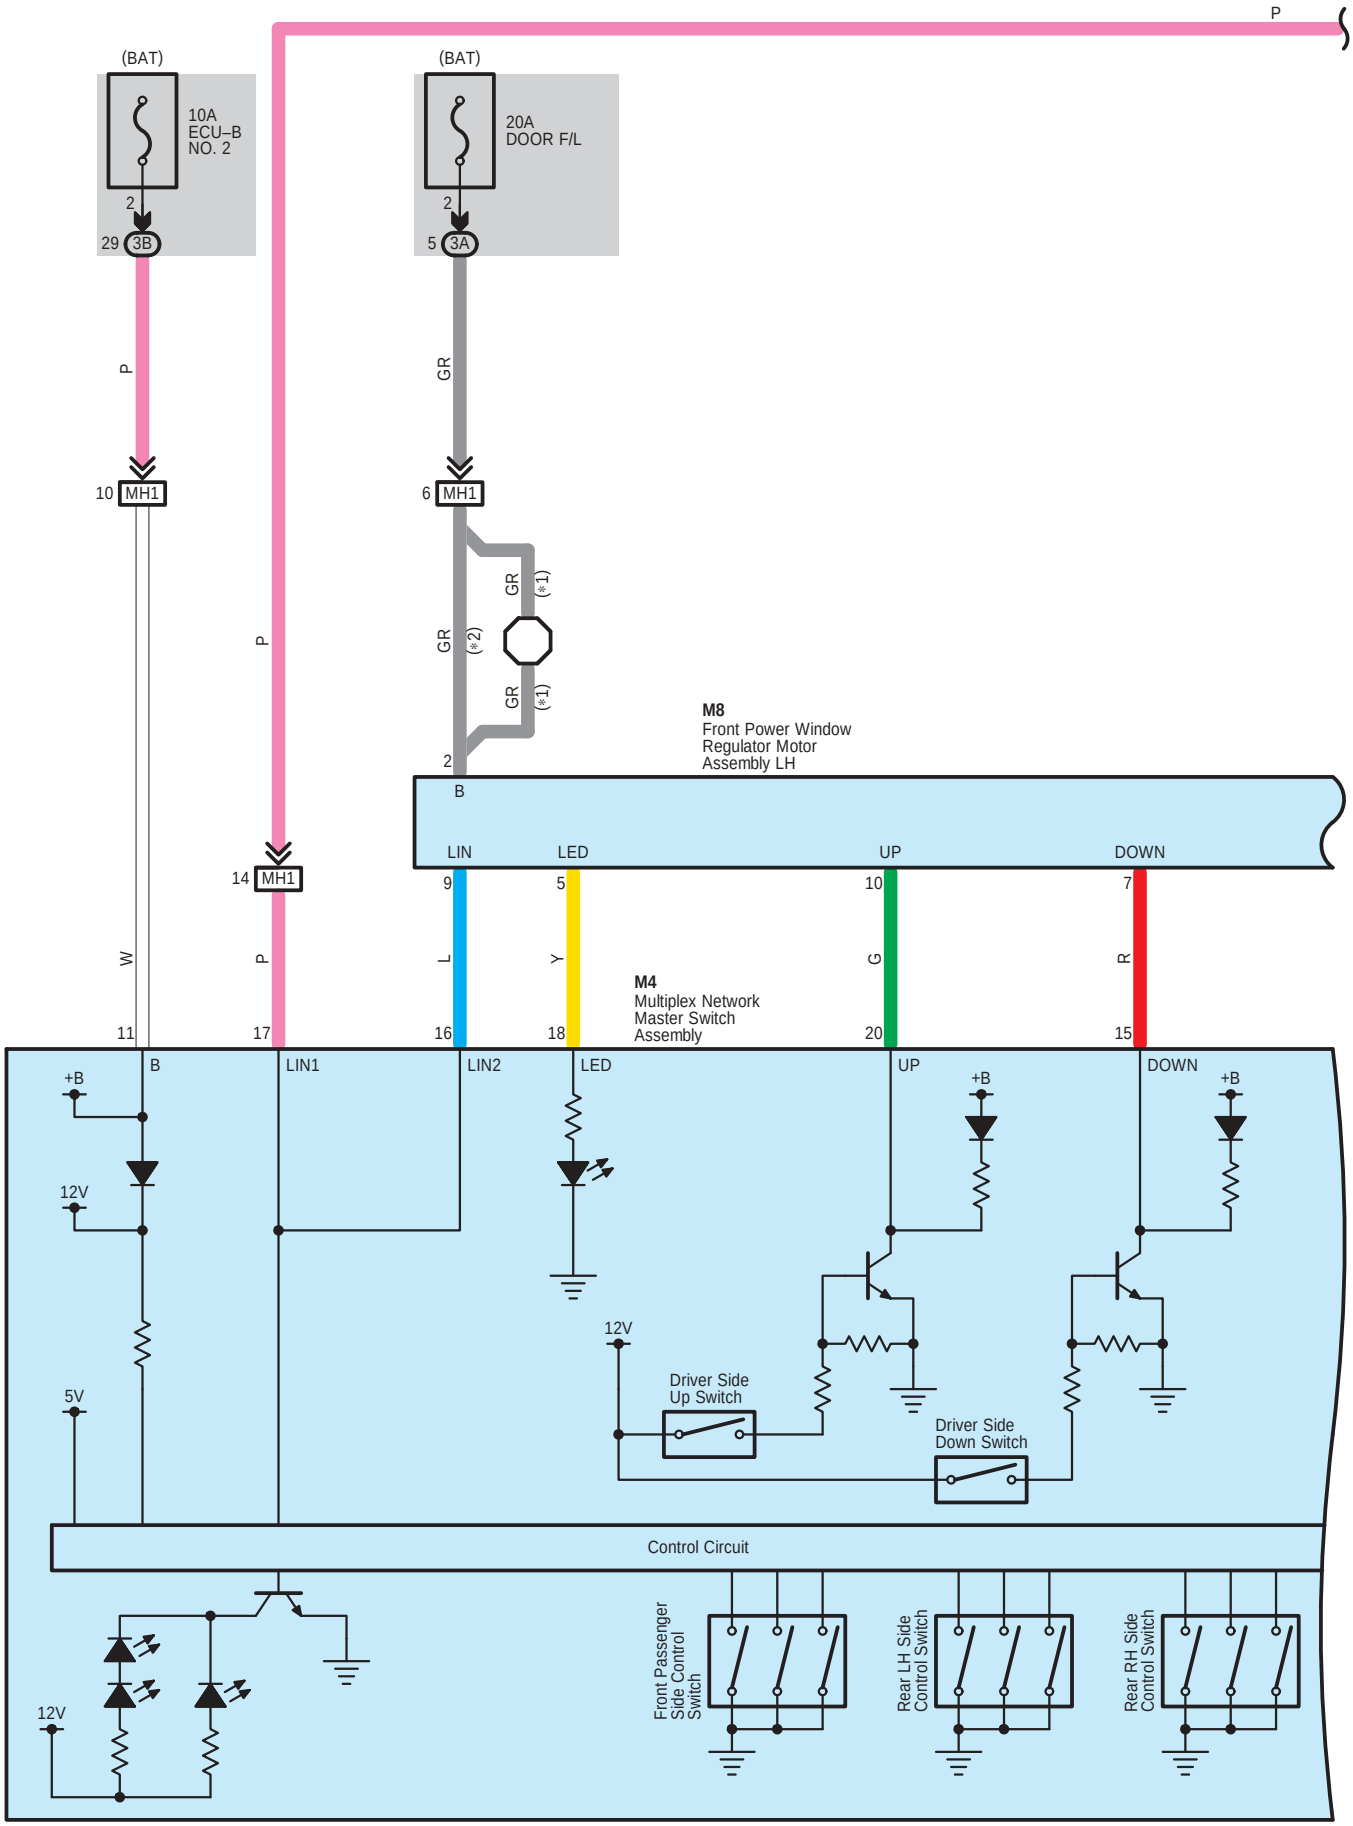
P
(BAT)
10A
ECU-B
NO. 2
2
29 3B
(BAT)
20A
DOOR F/L
2
5 3A
P
GR
10 MH1
6 MH1
GR
(*1)
GR
(*2)
GR
(*1)
P
2
B
M8
Front Power Window
Regulator Motor
Assembly LH
LIN
LED
UP
DOWN
14 MH1
9
5
10
7
W
P
L
Y
G
R
M4
Multiplex Network
Master Switch
Assembly
11
17
16
18
20
15
B
LIN1
LIN2
LED
UP
DOWN
+B
12V
5V
12V
Driver Side
Up Switch
Driver Side
Down Switch
Control Circuit
12V
Front Passenger
Side Control
Switch
Rear LH Side
Control Switch
Rear RH Side
Control Switch

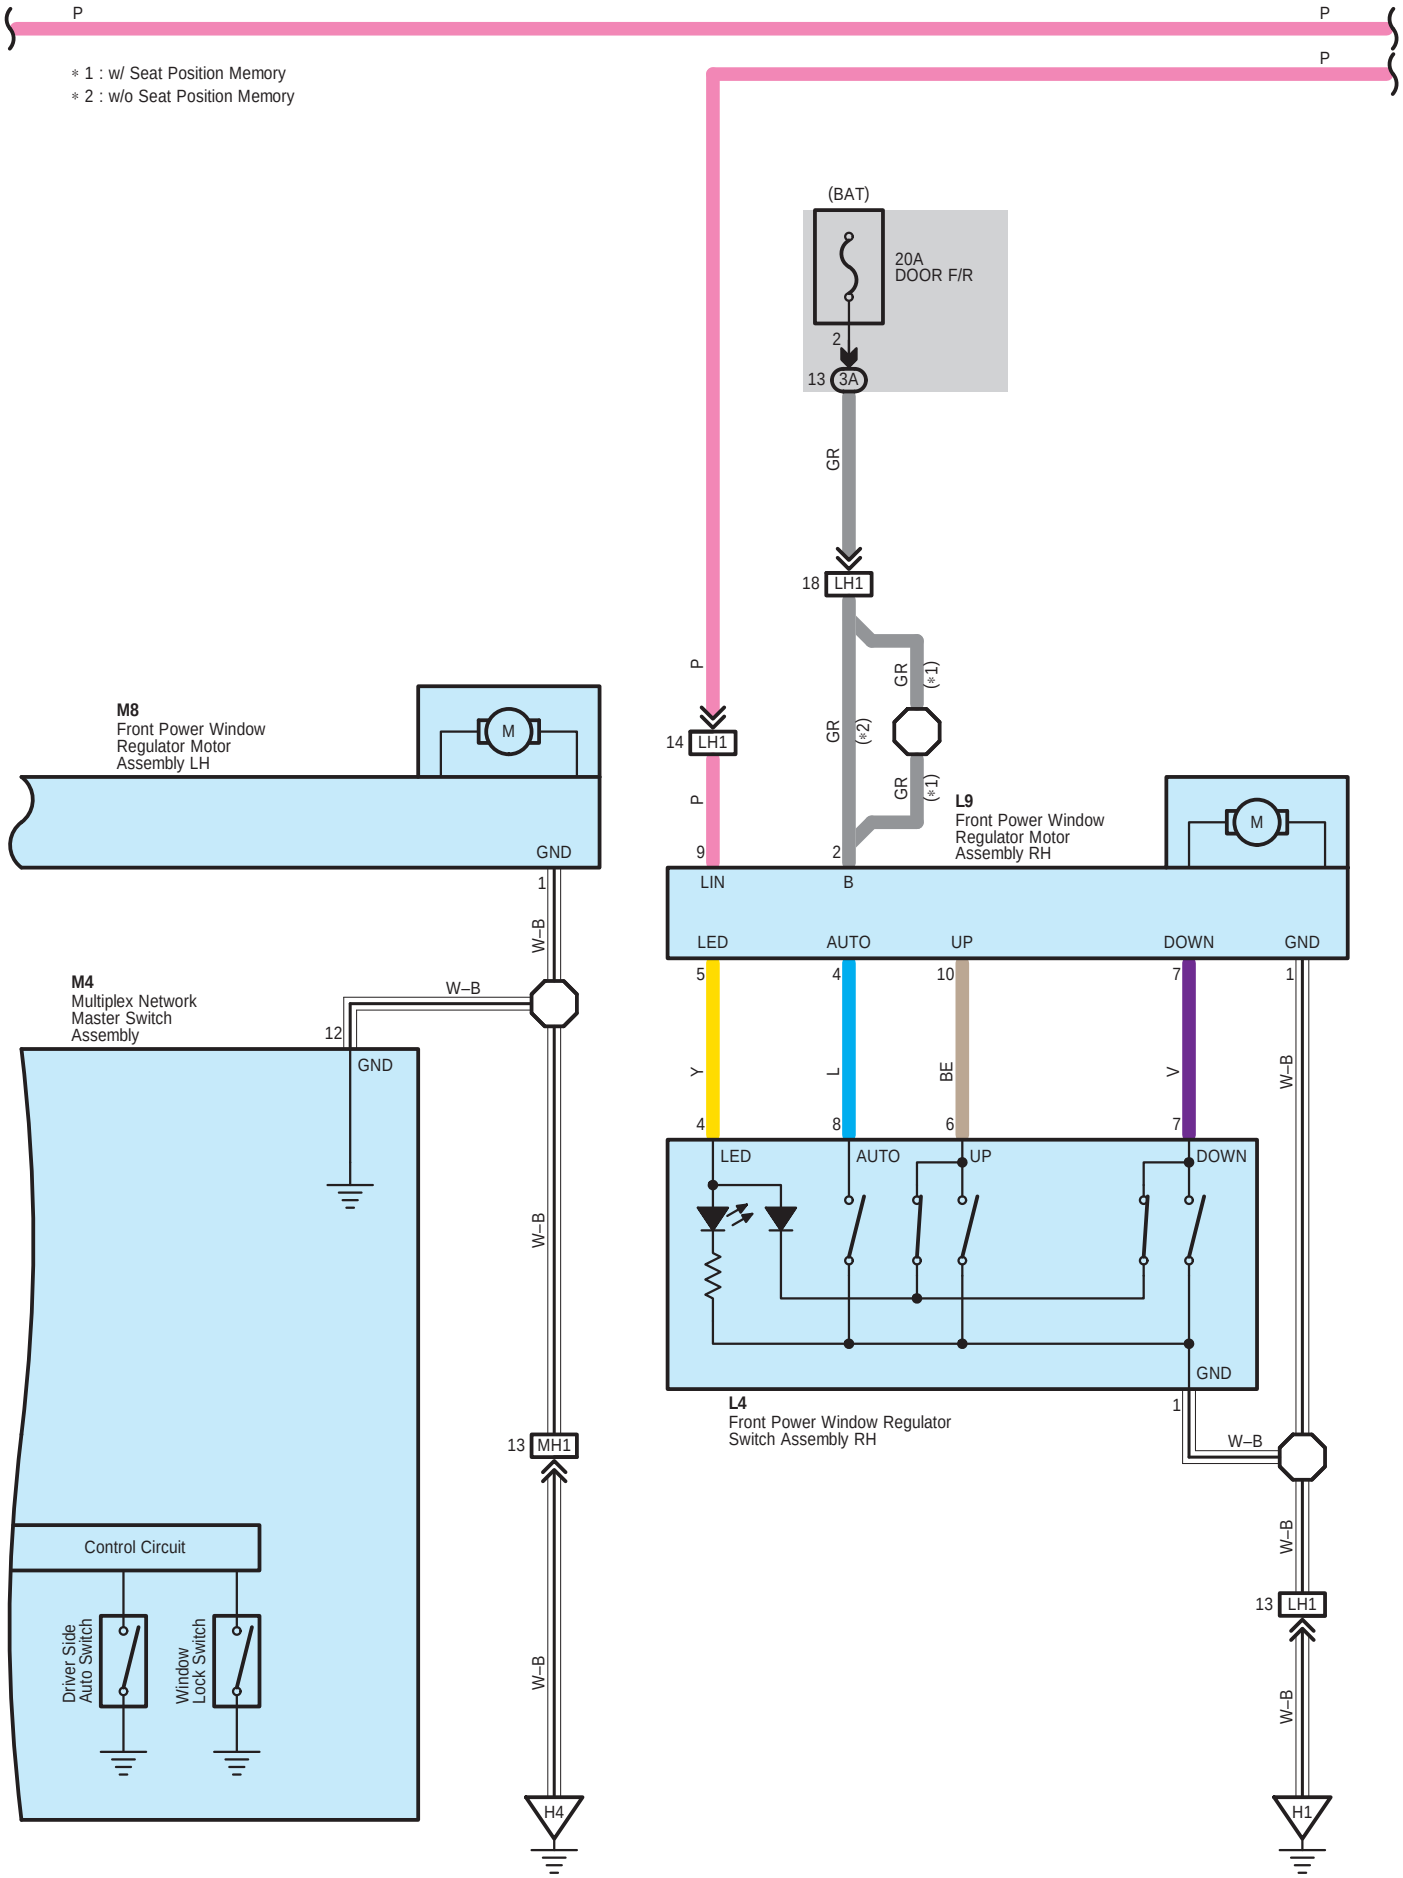
P
P
P
* 1 : w/ Seat Position Memory
* 2 : w/o Seat Position Memory
(BAT)
20A
DOOR F/R
2
13 3A
GR
18 LH1
P
14 LH1
P
9
GR
(*2)
GR
(*1)
GR
(*1)
2
M8
Front Power Window
Regulator Motor
Assembly LH
M
GND
1
W–B
L9
Front Power Window
Regulator Motor
Assembly RH
M
LIN
B
LED
AUTO
UP
DOWN
GND
5
4
10
7
1
Y
L
BE
V
W–B
4
8
6
7
M4
Multiplex Network
Master Switch
Assembly
W–B
12
GND
W–B
LED
AUTO
UP
DOWN
GND
L4
Front Power Window Regulator
Switch Assembly RH
1
W–B
13 MH1
Control Circuit
Driver Side
Auto Switch
Window
Lock Switch
W–B
W–B
13 LH1
W–B
H4
H1

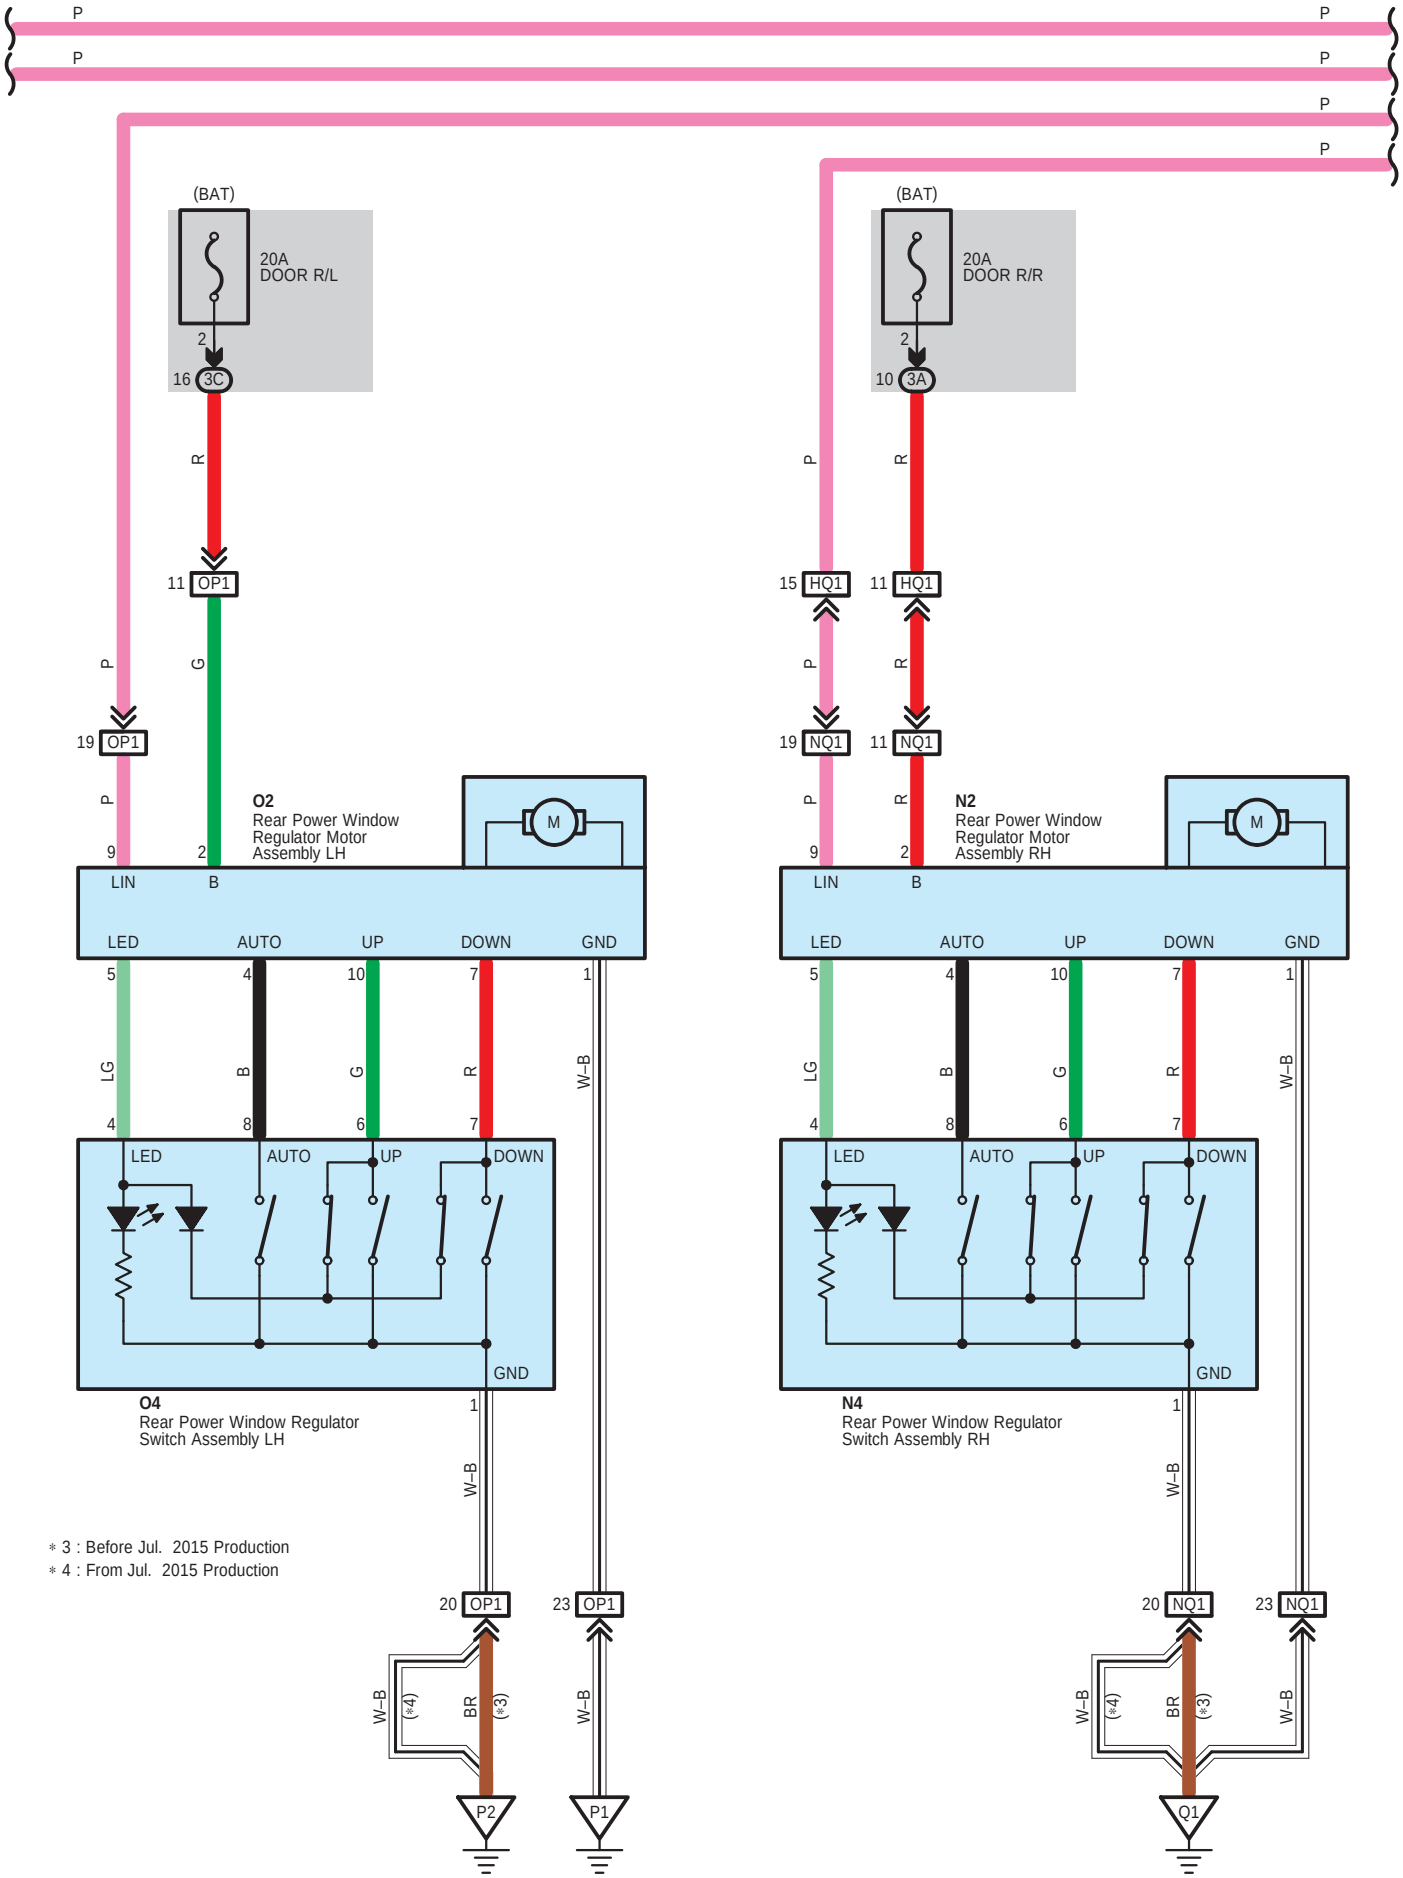

* 3 : Before Jul. 2015 Production
* 4 : From Jul. 2015 Production

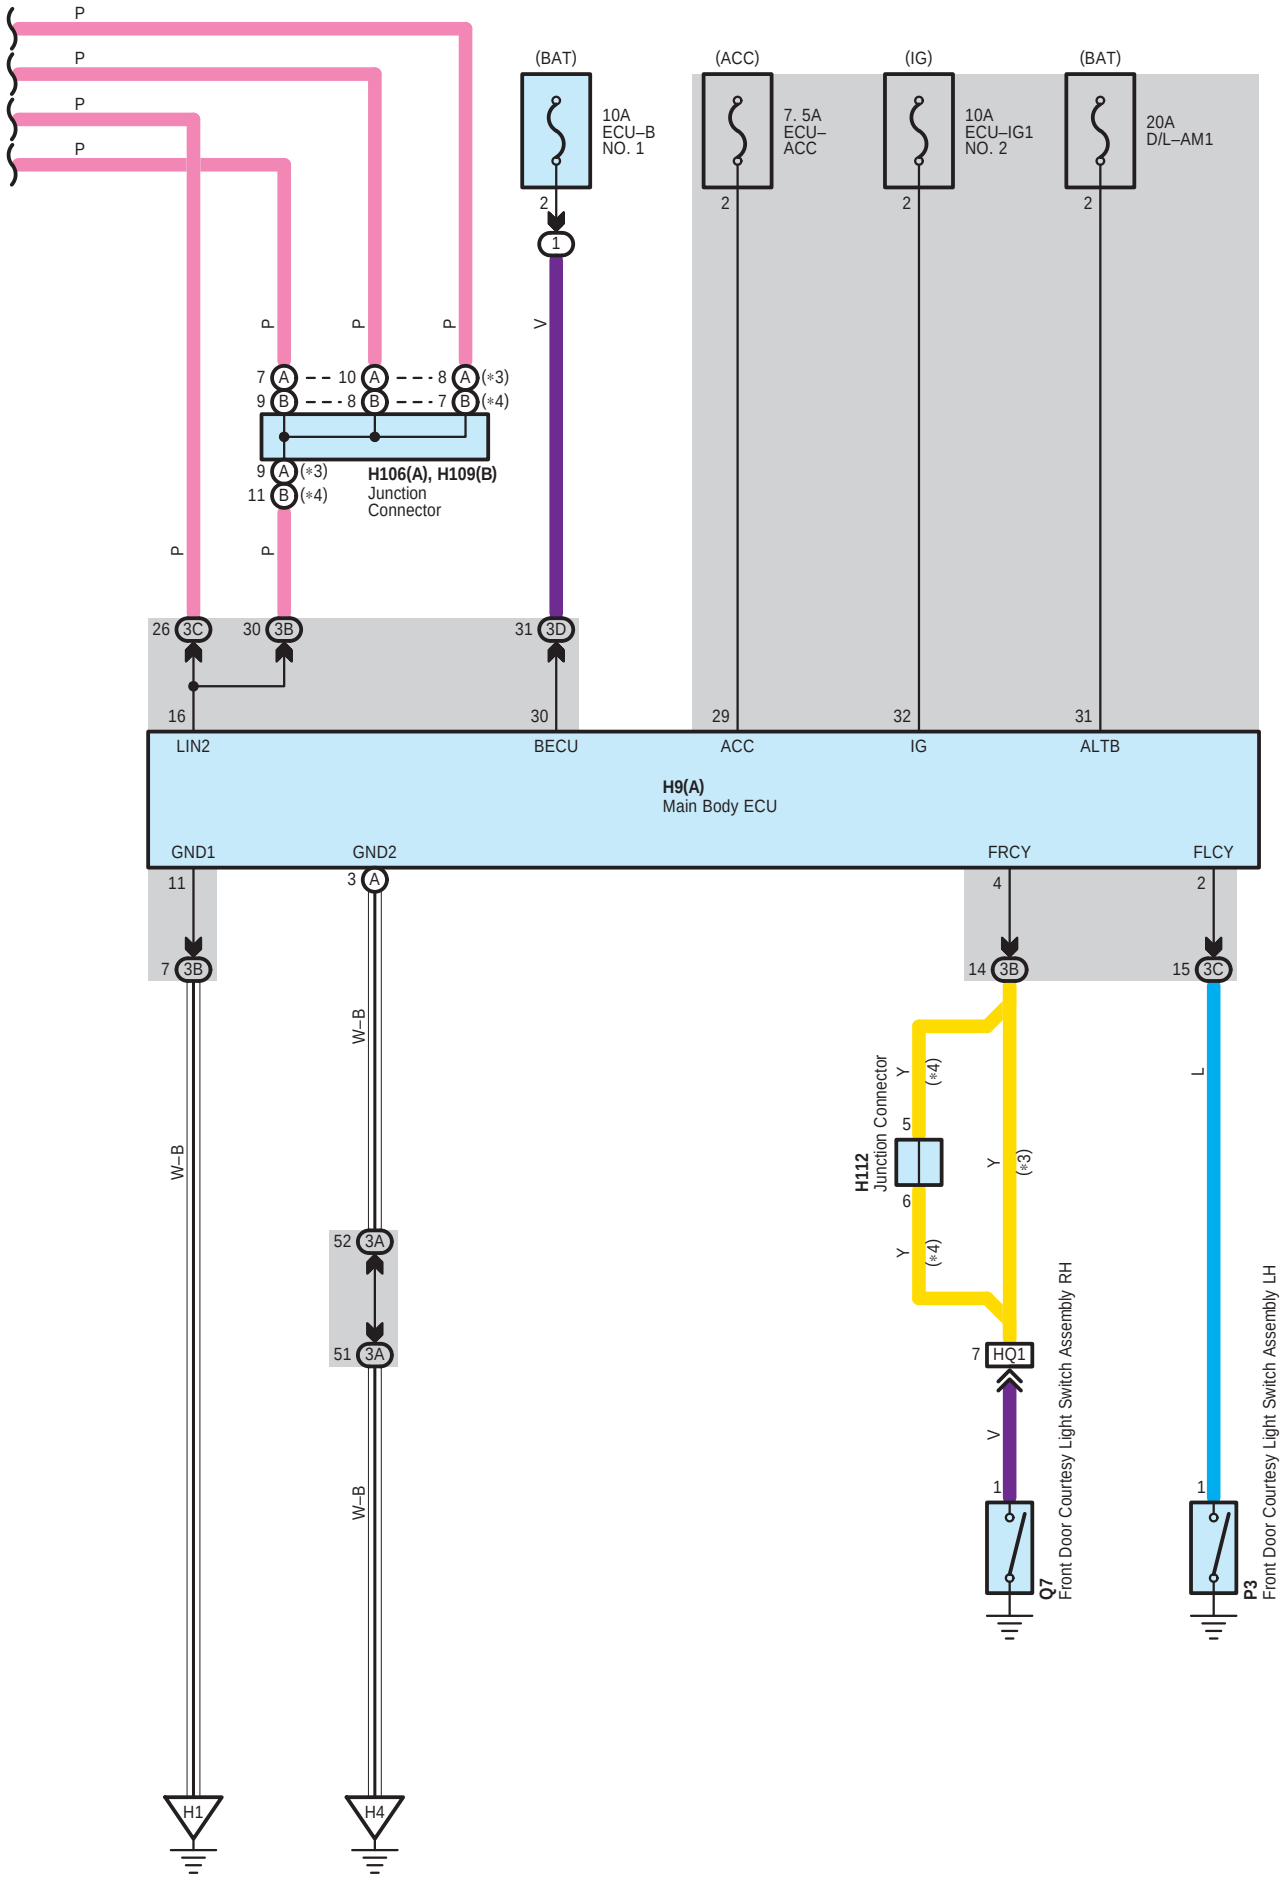
P
P
P
P
(BAT)
10A
ECU–B
NO. 1
(ACC)
7. 5A
ECU–
ACC
(IG)
10A
ECU–IG1
NO. 2
(BAT)
20A
D/L–AM1
2
1
V
7 A 10 A 8 A (*3)
9 B 8 B 7 B (*4)
9 A (*3)
11 B (*4)
H106(A), H109(B)
Junction
Connector
26 3C
30 3B
31 3D
16
30
29
32
31
LIN2
BECU
ACC
IG
ALTB
H9(A)
Main Body ECU
GND1
GND2
FRCY
FLCY
11
3 A
4
2
7 3B
14 3B
15 3C
W–B
W–B
52 3A
51 3A
W–B
H112
Junction Connector
5
6
Y
(*4)
Y
(*3)
Y
(*4)
L
7 HQ1
V
1
Q7
Front Door Courtesy Light Switch Assembly RH
1
P3
Front Door Courtesy Light Switch Assembly LH
H1
H4

H 9
White

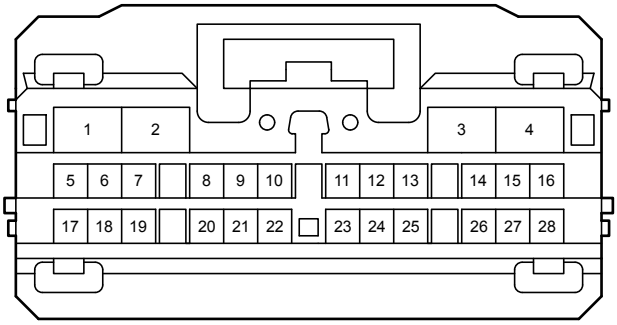

H106
Blue

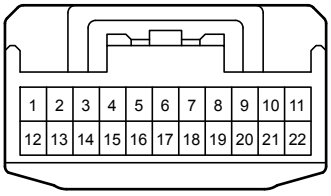

H109
Black

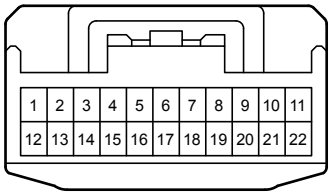

H112
White

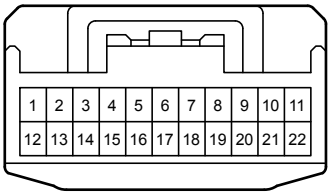

L 4
White

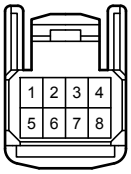

L 9
White

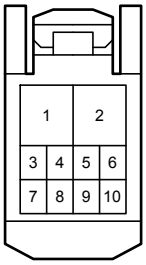

M 4
White

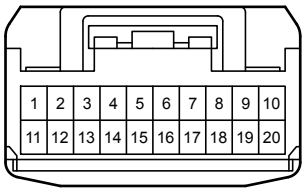

M 8
White

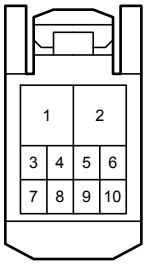

N 2
White

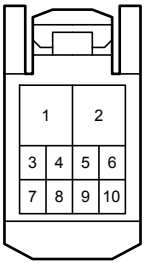

N 4
White

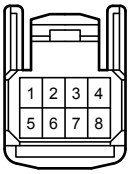

O 2
White

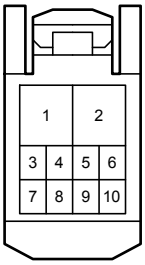

O 4
White

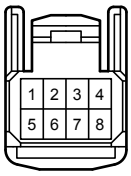

P 3
Black

Q 7
Black

3A
White

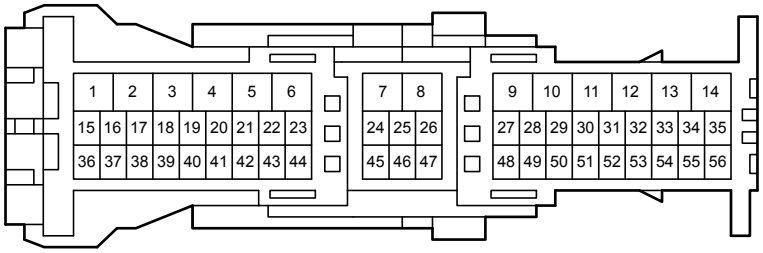

3B
White

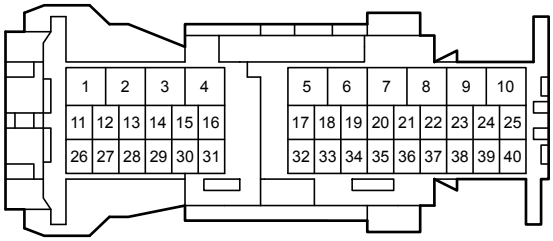

3C
White

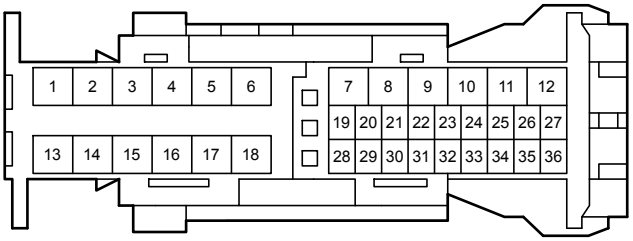

3D
White

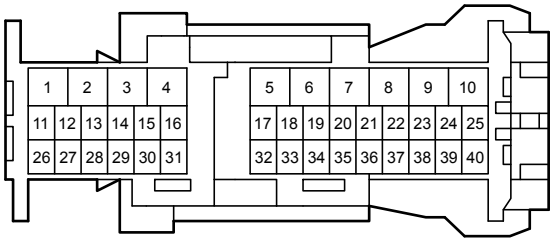

HQ1
White

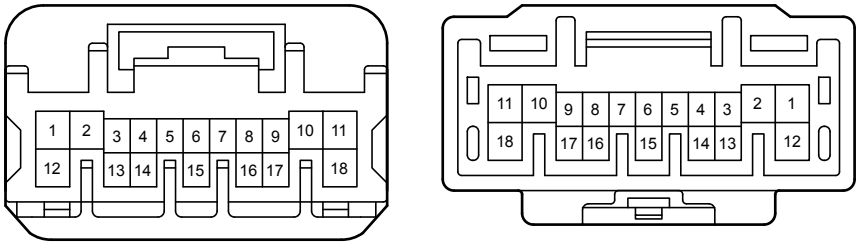

LH1
Gray

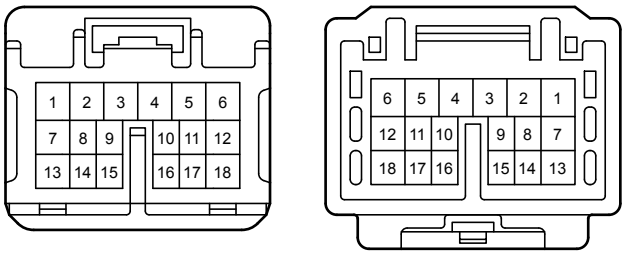

MH1
Blue

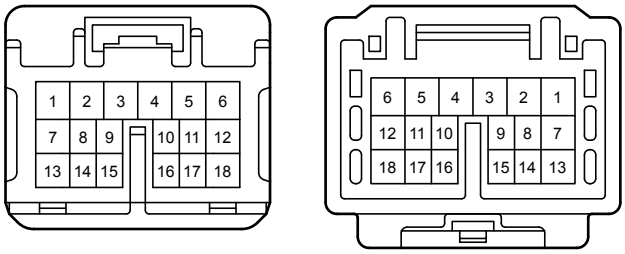

NQ1
White

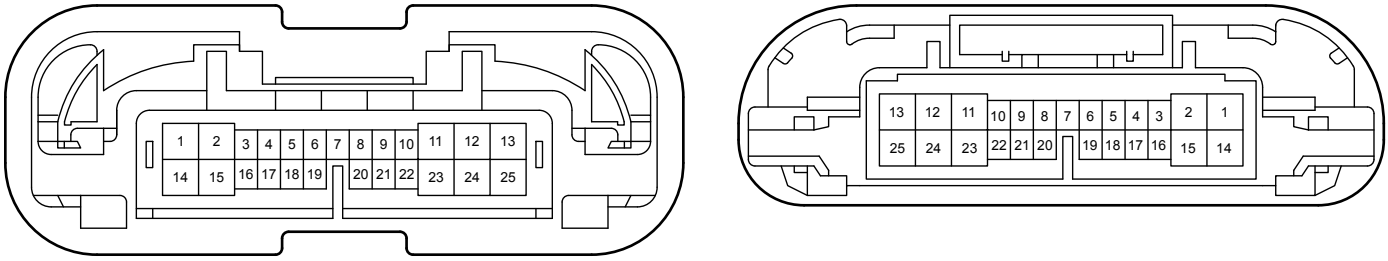
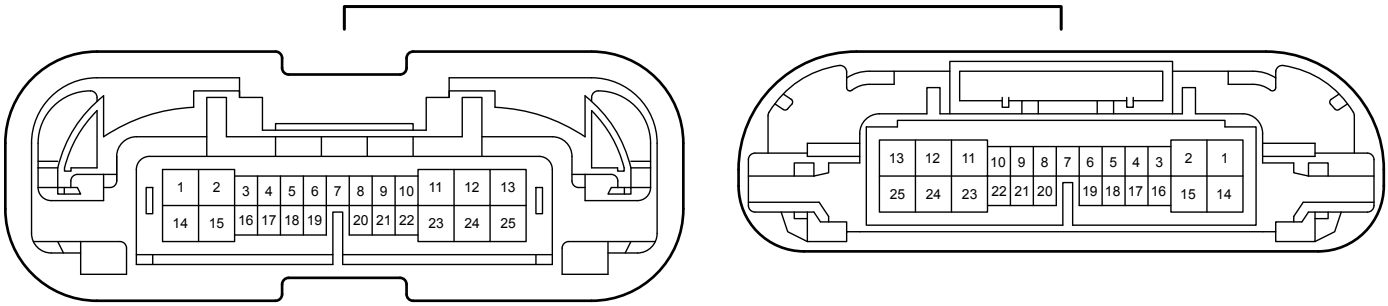
OP1
White