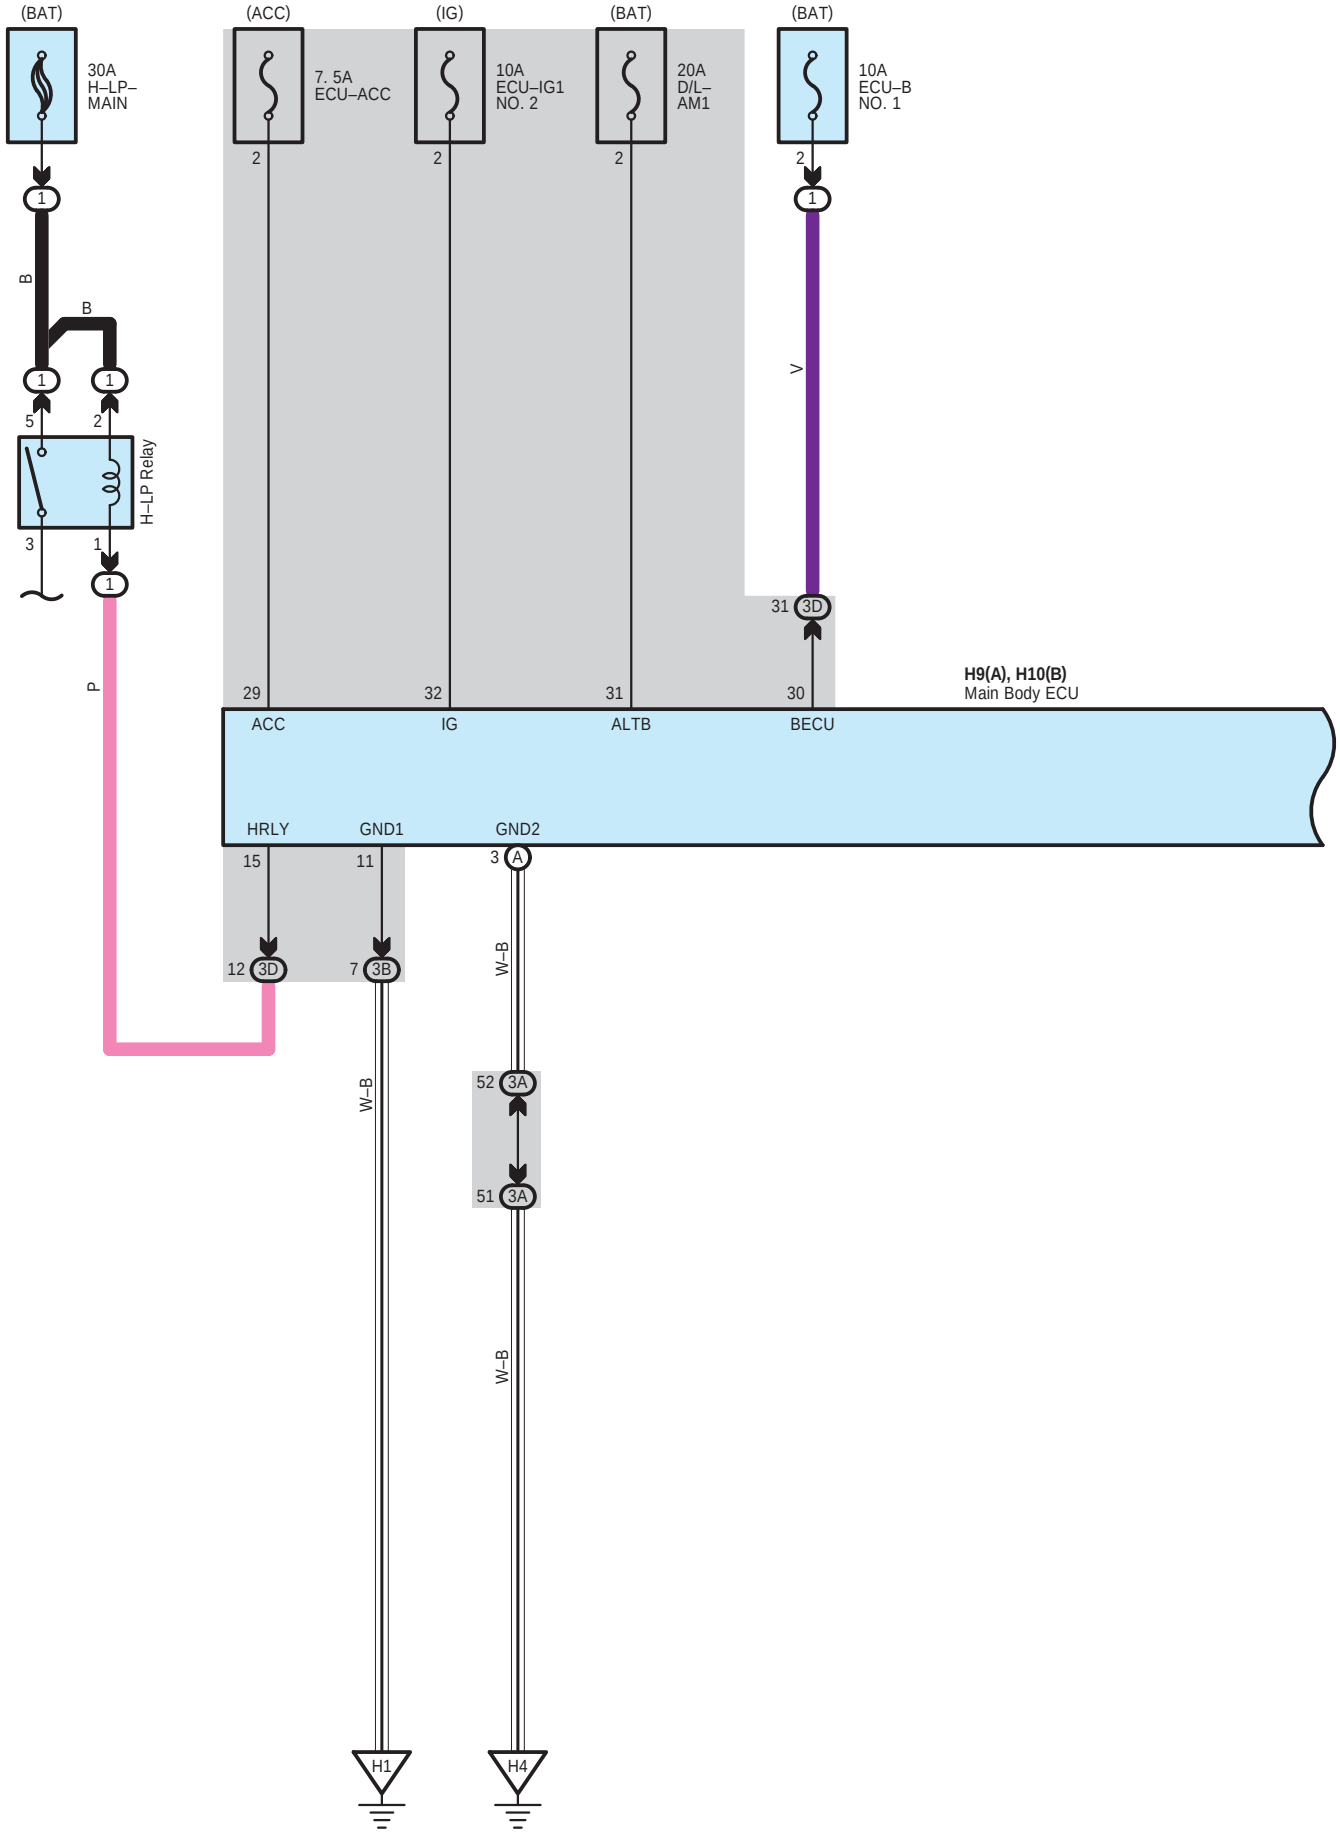
(BAT)
30A
H–LP–
MAIN
(ACC)
7. 5A
ECU–ACC
(IG)
10A
ECU–IG1
NO. 2
(BAT)
20A
D/L–
AM1
(BAT)
10A
ECU–B
NO. 1
B
B
V
P
H–LP Relay
H9(A), H10(B)
Main Body ECU
ACC
IG
ALTB
BECU
HRLY
GND1
GND2
W–B
W–B
W–B
H1
H4

∗ 1 : Before Jul. 2015 Production
∗ 2 : From Jul. 2015 Production

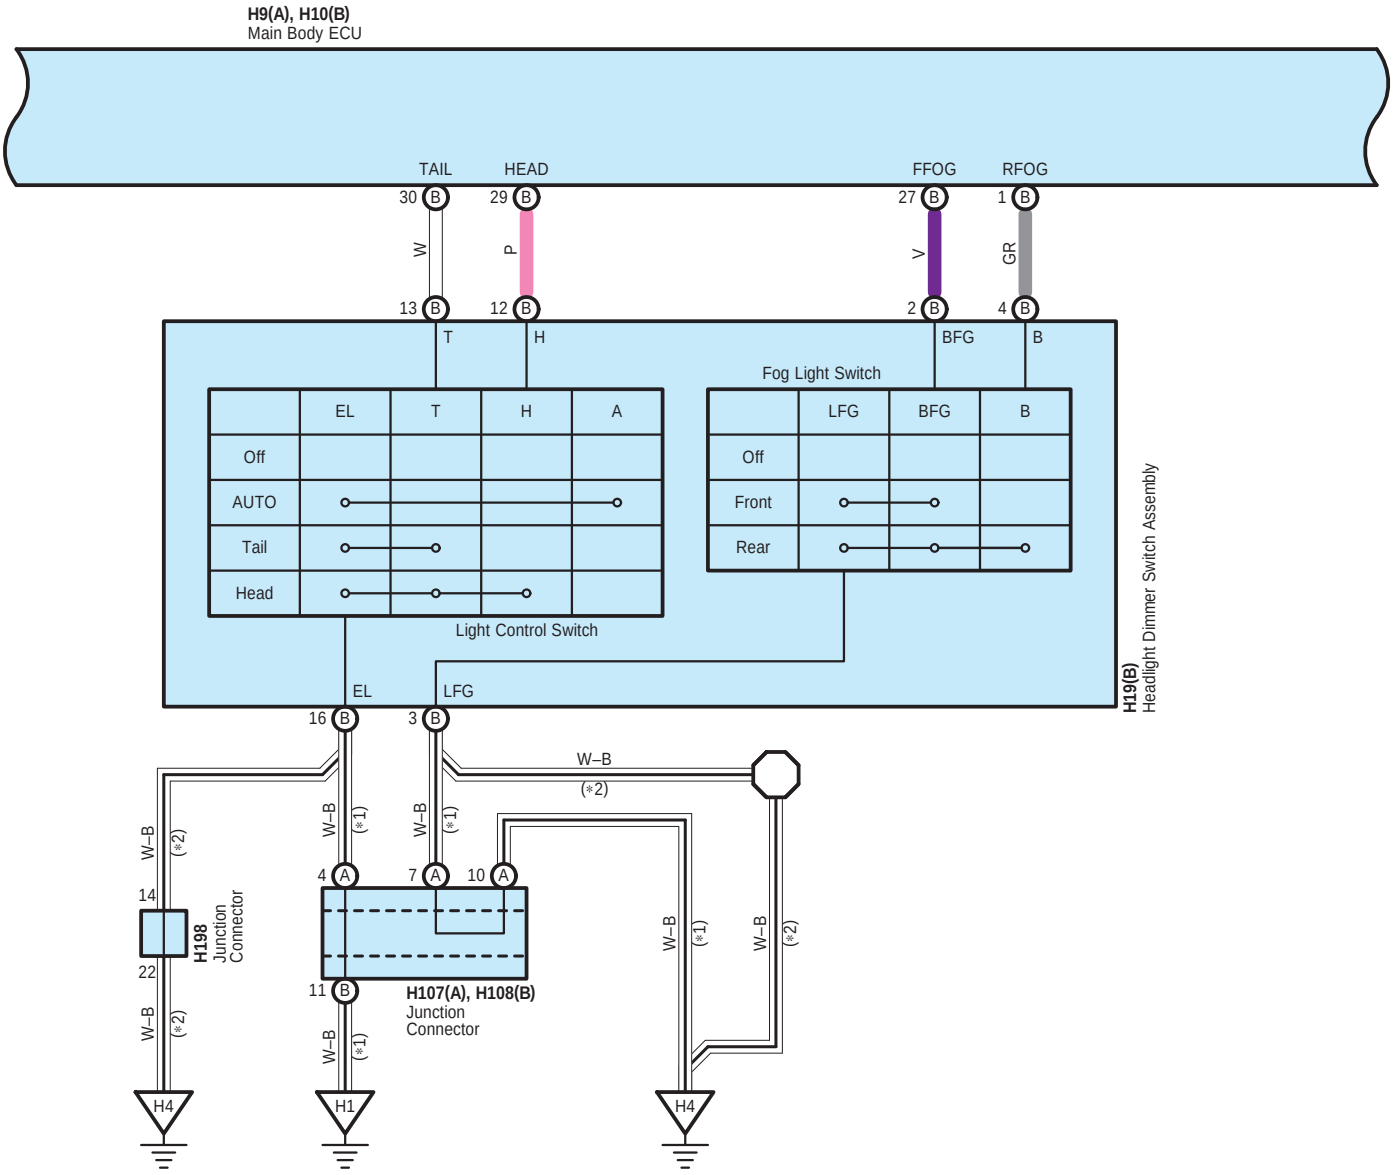

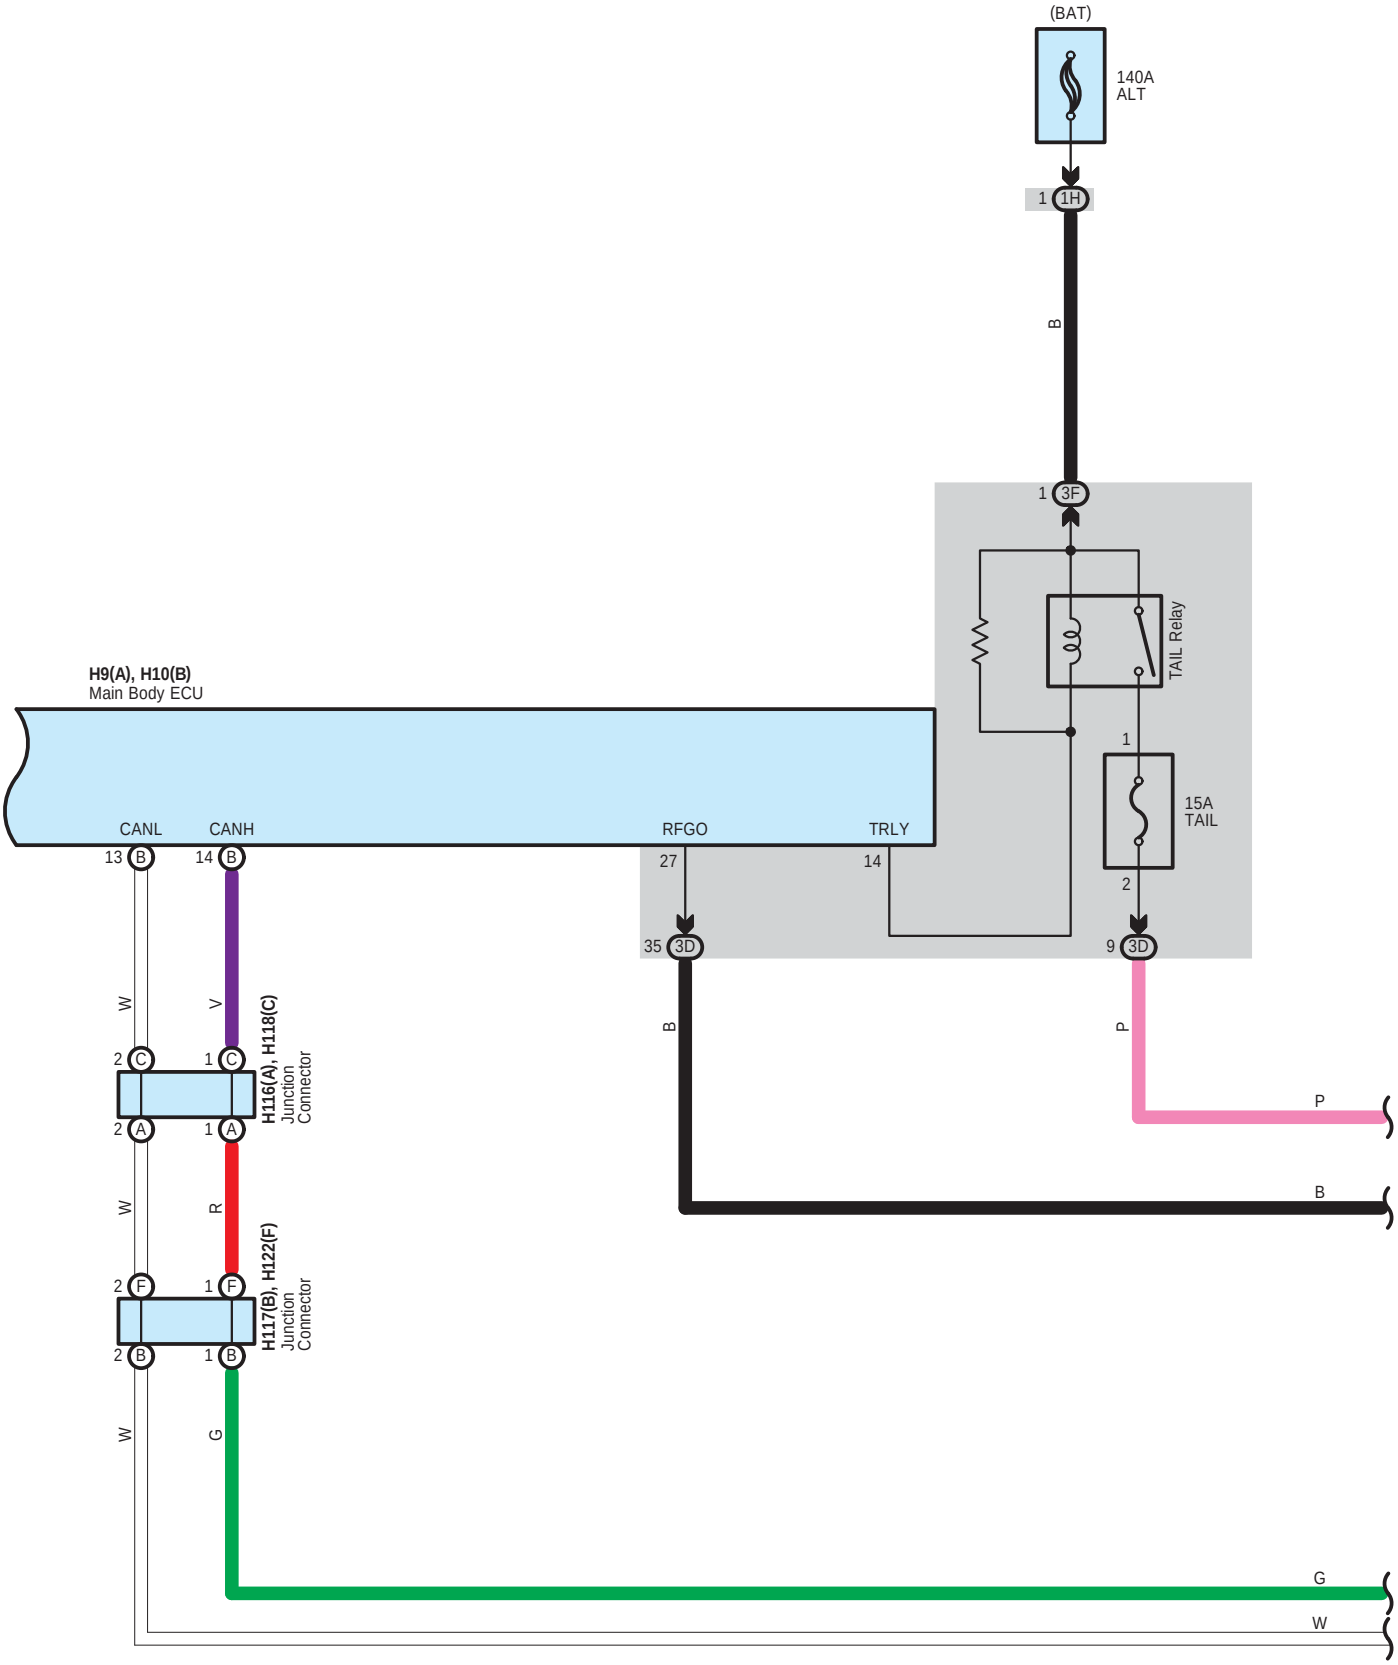
(BAT)
140A
ALT
1 1H
B
1 3F
TAIL Relay
1
15A
TAIL
2
9 3D
P
P
H9(A), H10(B)
Main Body ECU
CANL
CANH
RFGO
TRLY
13 B
14 B
27
14
35 3D
B
B
W
V
2 C
1 C
H116(A), H118(C)
Junction
Connector
2 A
1 A
W
R
2 F
1 F
H117(B), H122(F)
Junction
Connector
2 B
1 B
W
G
G
W

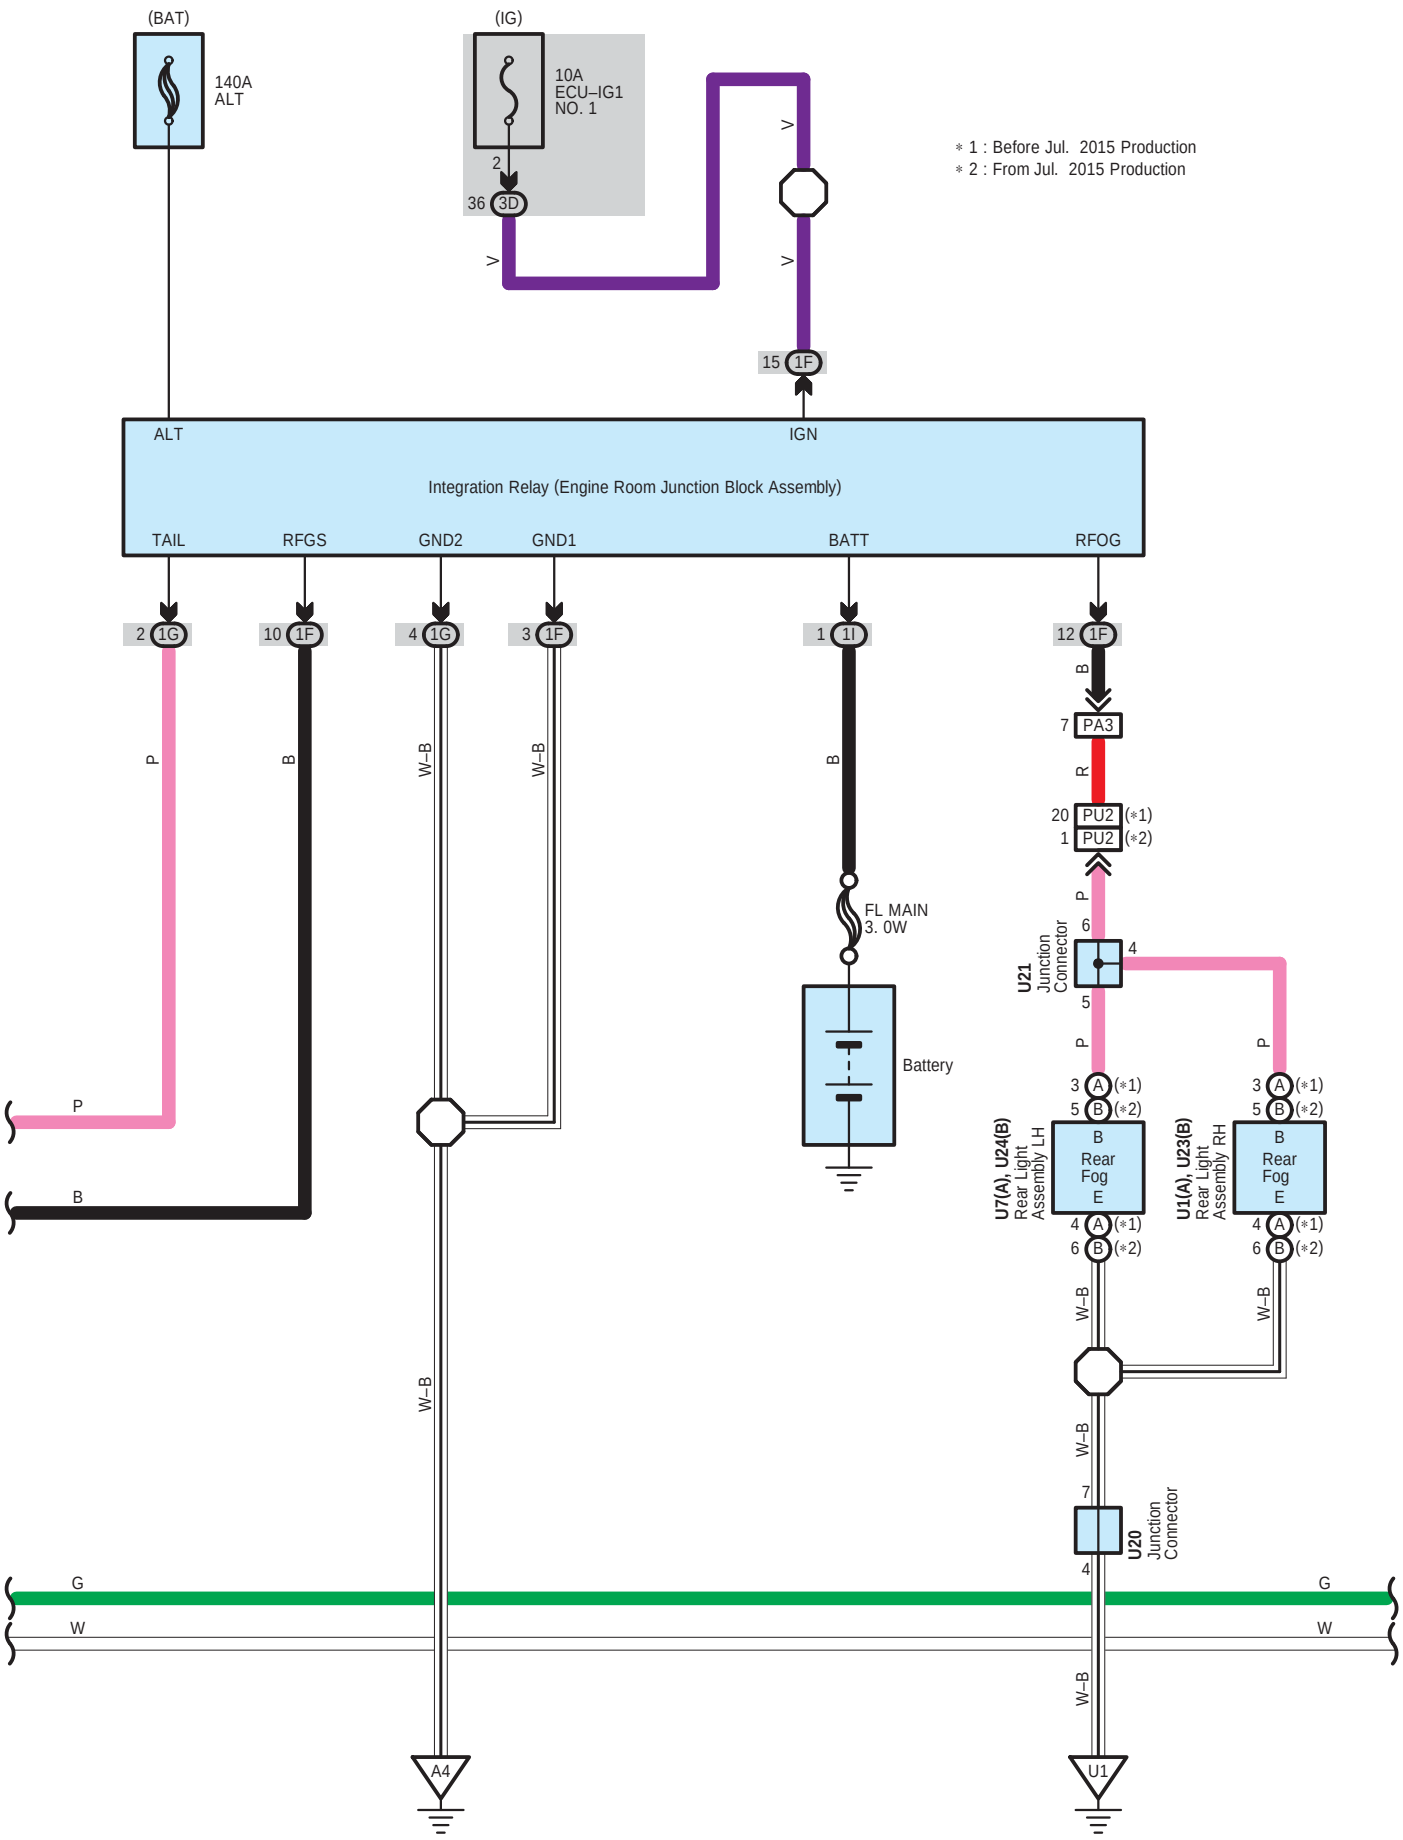
(BAT)
140A
ALT
(IG)
10A
ECU–IG1
NO. 1
2
36 3D
15 1F
∗ 1 : Before Jul. 2015 Production
∗ 2 : From Jul. 2015 Production
ALT
IGN
Integration Relay (Engine Room Junction Block Assembly)
TAIL
RFGS
GND2
GND1
BATT
RFOG
2 1G
10 1F
4 1G
3 1F
1 1I
12 1F
7 PA3
20 PU2 (∗1)
1 PU2 (∗2)
FL MAIN
3. 0W
Battery
U21
Junction
Connector
U7(A), U24(B)
Rear Light
Assembly LH
U1(A), U23(B)
Rear Light
Assembly RH
Rear
Fog
U20
Junction
Connector
P
B
W–B
G
W
A4
U1

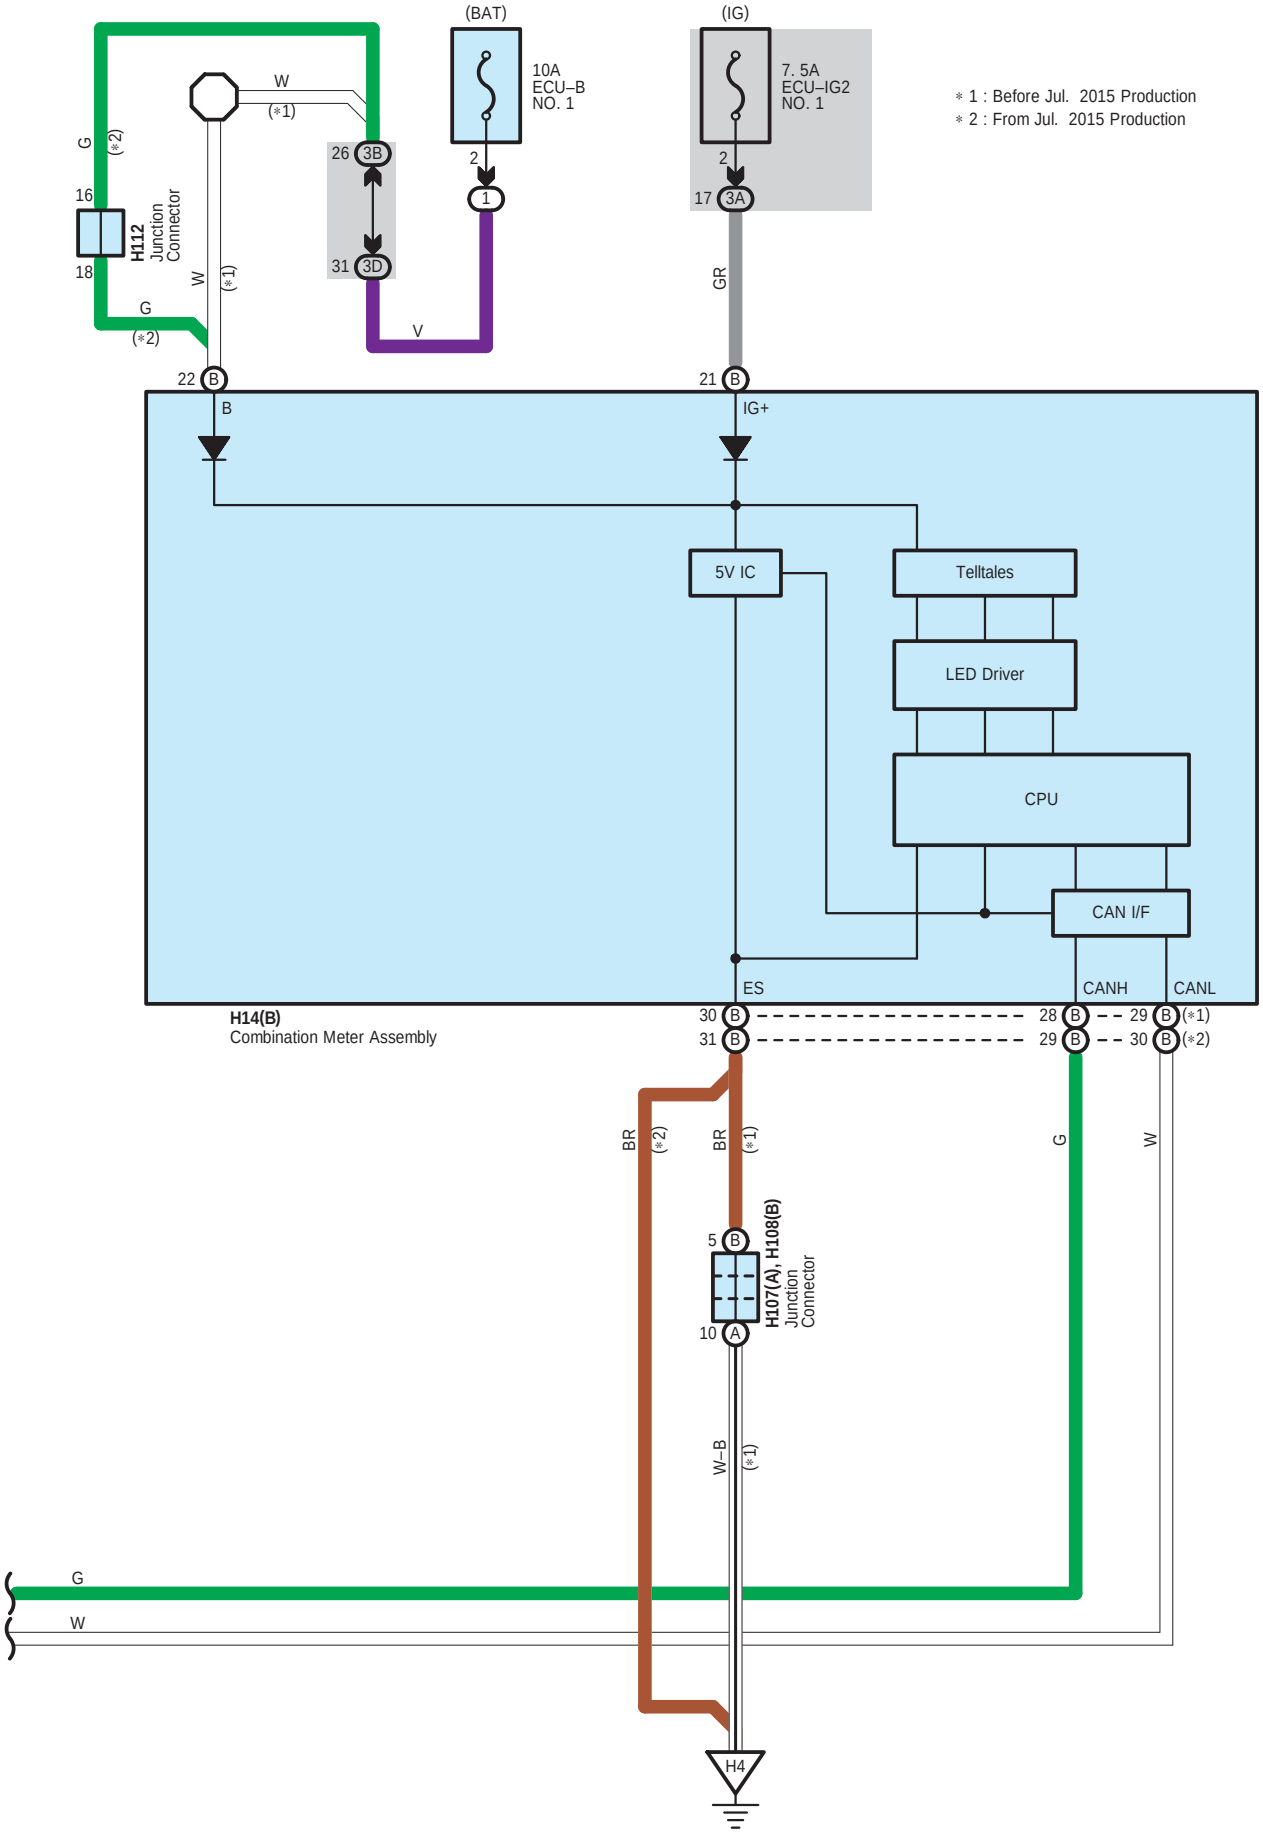
(BAT)
(IG)
10A
ECU–B
NO. 1
7. 5A
ECU–IG2
NO. 1
∗1 : Before Jul. 2015 Production
∗2 : From Jul. 2015 Production
W
(∗1)
G
(∗2)
16
18
H112
Junction
Connector
26 3B
31 3D
2
1
17 3A
GR
V
22 B
21 B
B
IG+
5V IC
Telltales
LED Driver
CPU
CAN I/F
ES
CANH
CANL
H14(B)
Combination Meter Assembly
30 B
31 B
28 B
29 B
29 B
30 B
(∗1)
(∗2)
BR
5 B
10 A
H107(A), H108(B)
Junction
Connector
W–B
H4

H 9
White

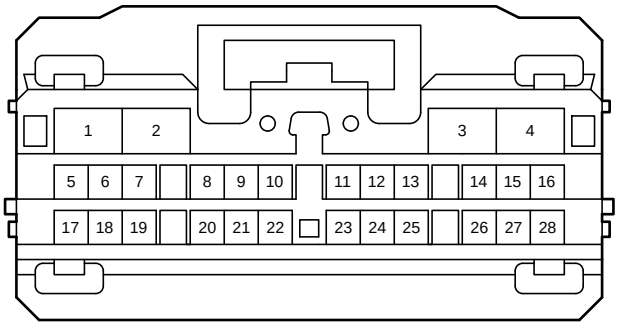

H 10
White

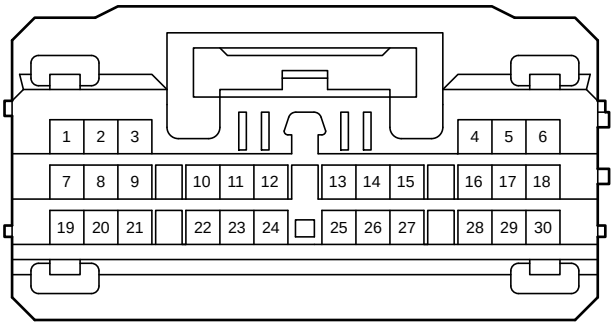

H 14
Black

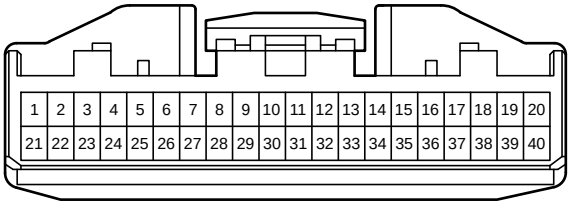

H 19
Black

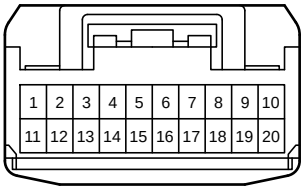

H107
Gray

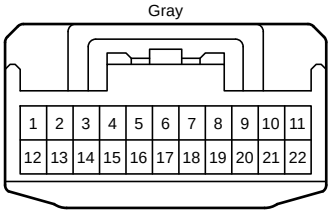

H108
Gray

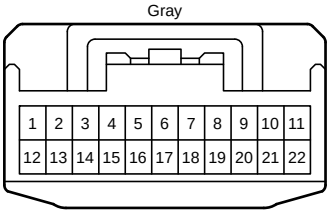

H112
White

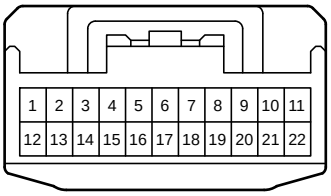

H116
White



H117
White



H118
White



H122
White



H198
White

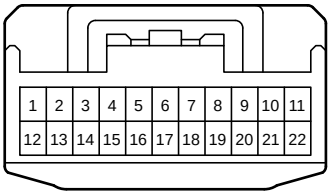

U 1
White

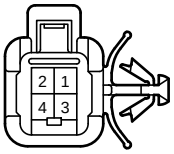

U 7
White

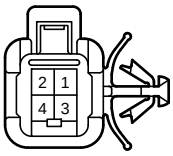

U 20
White

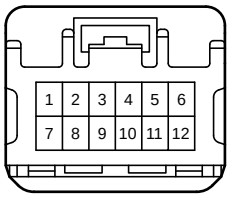

U 21
White

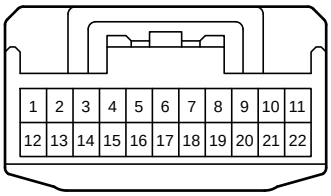

U 23
White

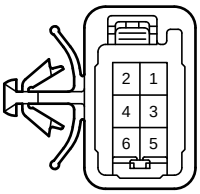

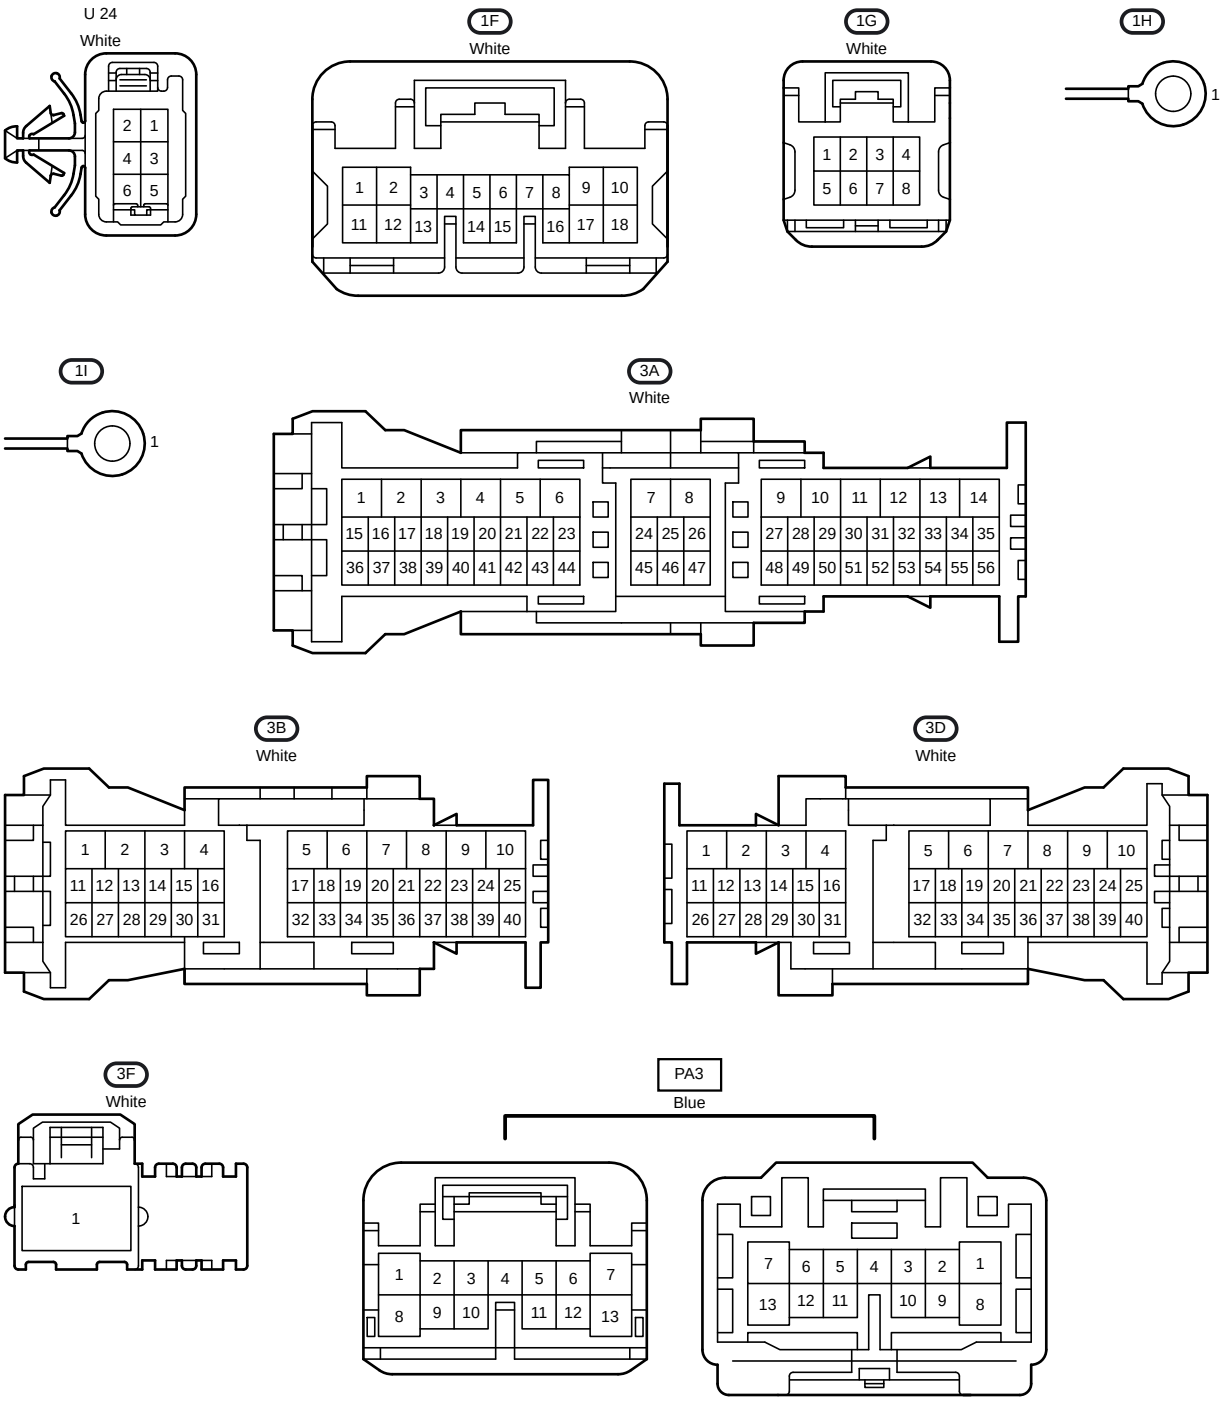
U 24
White
1F
White
1G
White
1H
1
1I
1
3A
White
3B
White
3D
White
3F
White
PA3
Blue

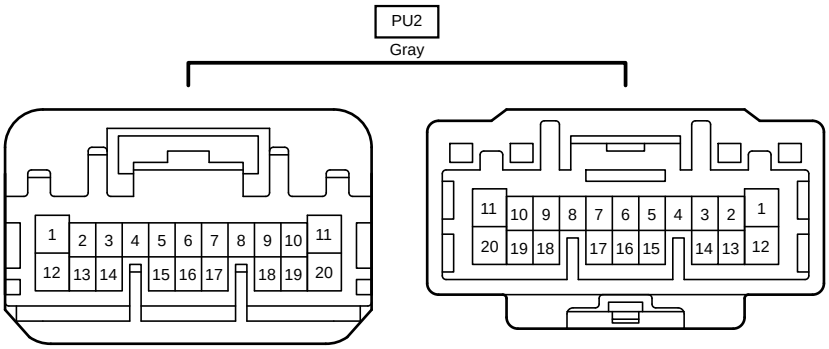
PU2
Gray
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
11
10
9
8
7
6
5
4
3
2
1
20
19
18
17
16
15
14
13
12