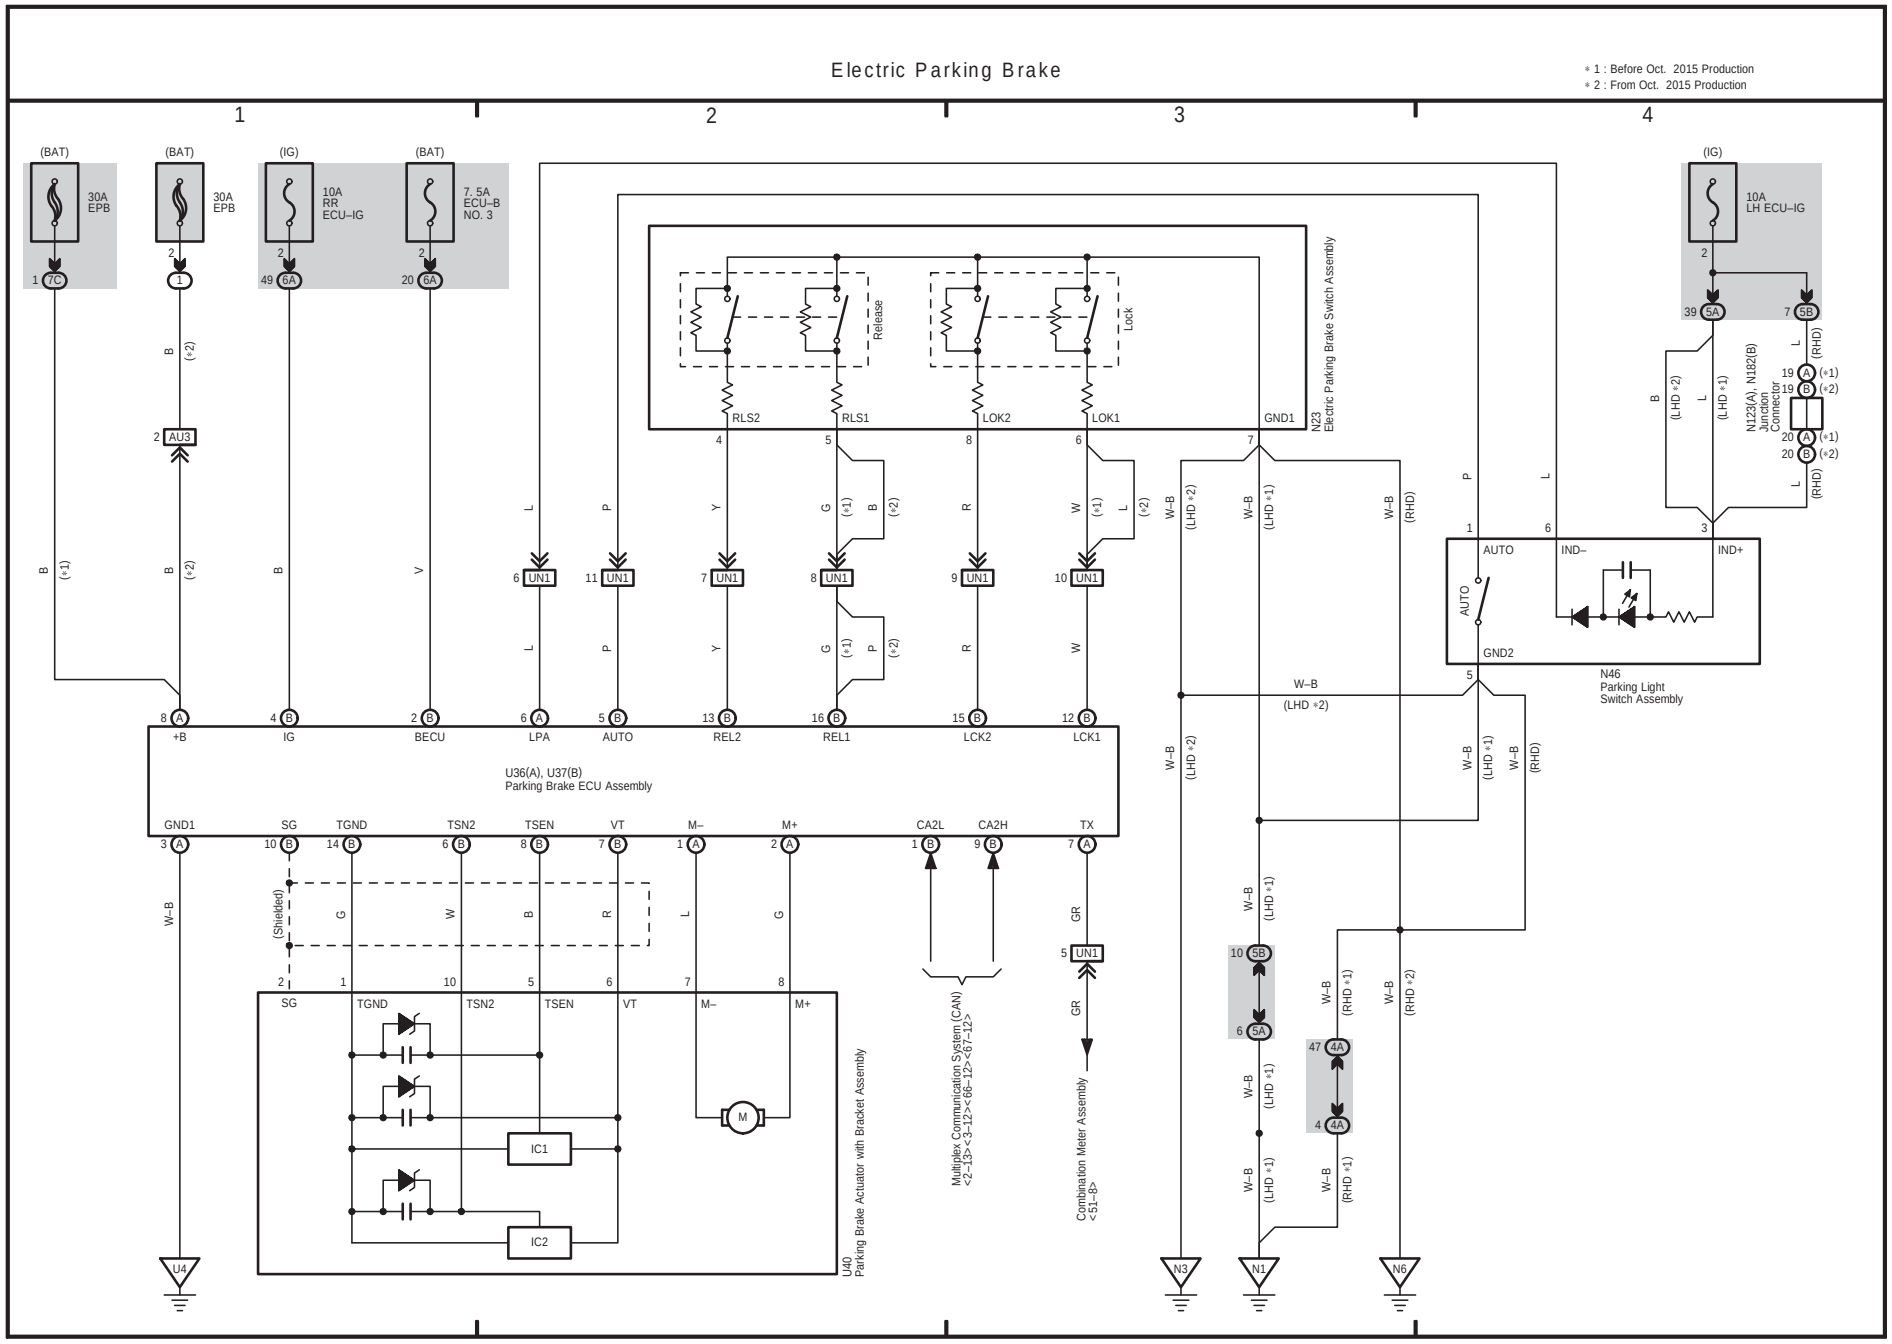
Electric Parking Brake
* 1 : Before Oct. 2015 Production
* 2 : From Oct. 2015 Production
1
2
3
4
(BAT)
30A EPB
(BAT)
30A EPB
(IG)
10A RR ECU–IG
(BAT)
7. 5A ECU–B NO. 3
(IG)
10A LH ECU–IG
AU3
UN1
N23 Electric Parking Brake Switch Assembly
Release
Lock
RLS2
RLS1
LOK2
LOK1
GND1
N123(A), N182(B) Junction Connector
N46 Parking Light Switch Assembly
AUTO
IND–
IND+
GND2
U36(A), U37(B) Parking Brake ECU Assembly
+B
IG
BECU
LPA
AUTO
REL2
REL1
LCK2
LCK1
GND1
SG
TGND
TSN2
TSEN
VT
M–
M+
CA2L
CA2H
TX
(Shielded)
IC1
IC2
M
U40 Parking Brake Actuator with Bracket Assembly
Multiplex Communication System (CAN) <2–13><3–12><66–12><67–12>
Combination Meter Assembly <51–8>
U4
N3
N1
N6