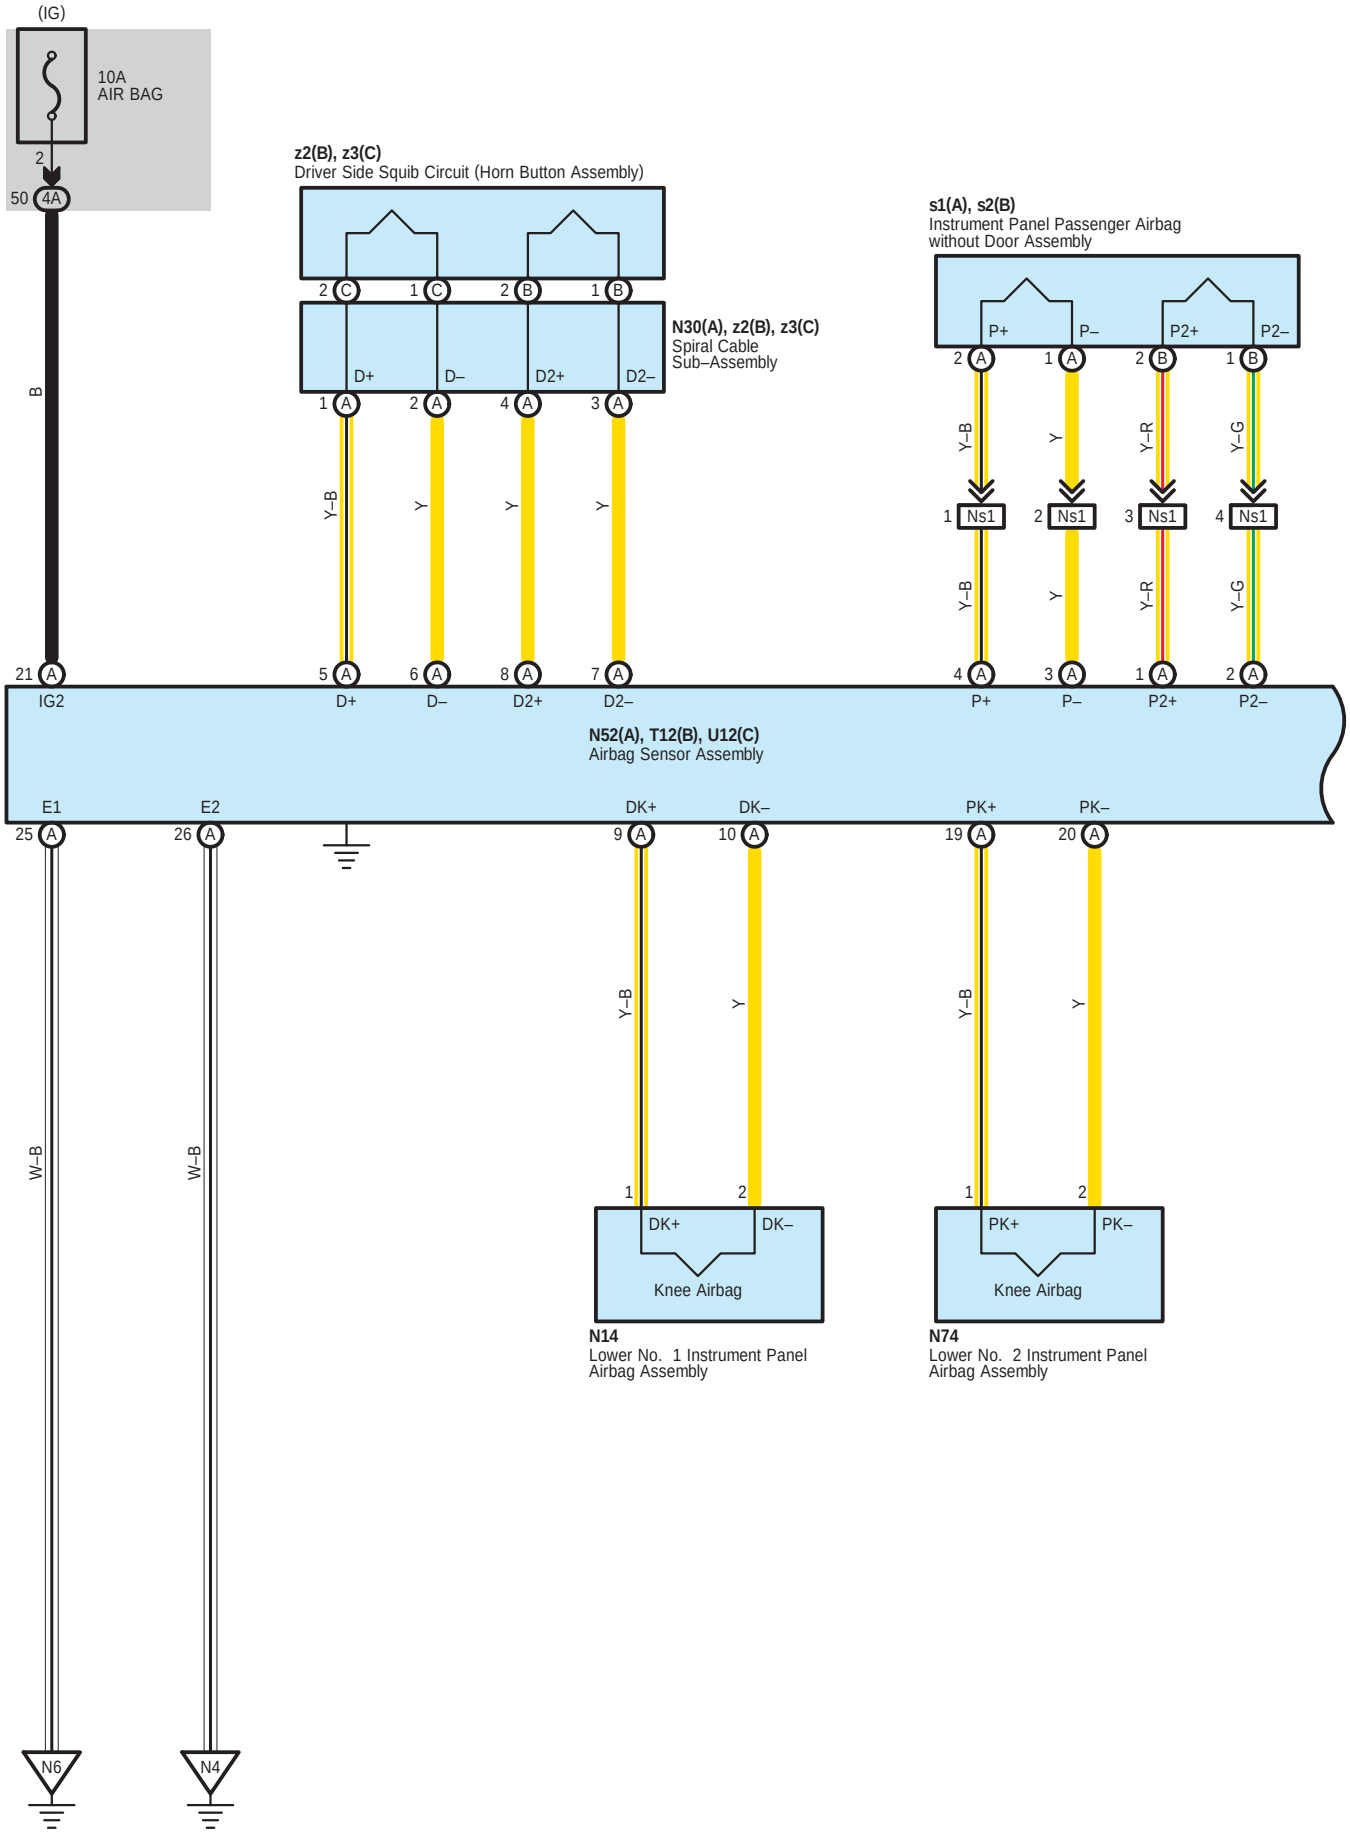
(IG)
10A
AIR BAG
2
50 4A
B
z2(B), z3(C)
Driver Side Squib Circuit (Horn Button Assembly)
2 C 1 C 2 B 1 B
N30(A), z2(B), z3(C)
Spiral Cable
Sub–Assembly
D+ D– D2+ D2–
1 A 2 A 4 A 3 A
Y–B Y Y Y
s1(A), s2(B)
Instrument Panel Passenger Airbag
without Door Assembly
P+ P– P2+ P2–
2 A 1 A 2 B 1 B
Y–B Y Y–R Y–G
1 Ns1 2 Ns1 3 Ns1 4 Ns1
Y–B Y Y–R Y–G
21 A 5 A 6 A 8 A 7 A 4 A 3 A 1 A 2 A
IG2 D+ D– D2+ D2–
P+ P– P2+ P2–
N52(A), T12(B), U12(C)
Airbag Sensor Assembly
E1 E2 DK+ DK– PK+ PK–
25 A 26 A 9 A 10 A 19 A 20 A
W–B W–B
Y–B Y Y–B Y
1 2 1 2
DK+ DK– PK+ PK–
Knee Airbag
Knee Airbag
N14
Lower No. 1 Instrument Panel
Airbag Assembly
N74
Lower No. 2 Instrument Panel
Airbag Assembly
N6
N4

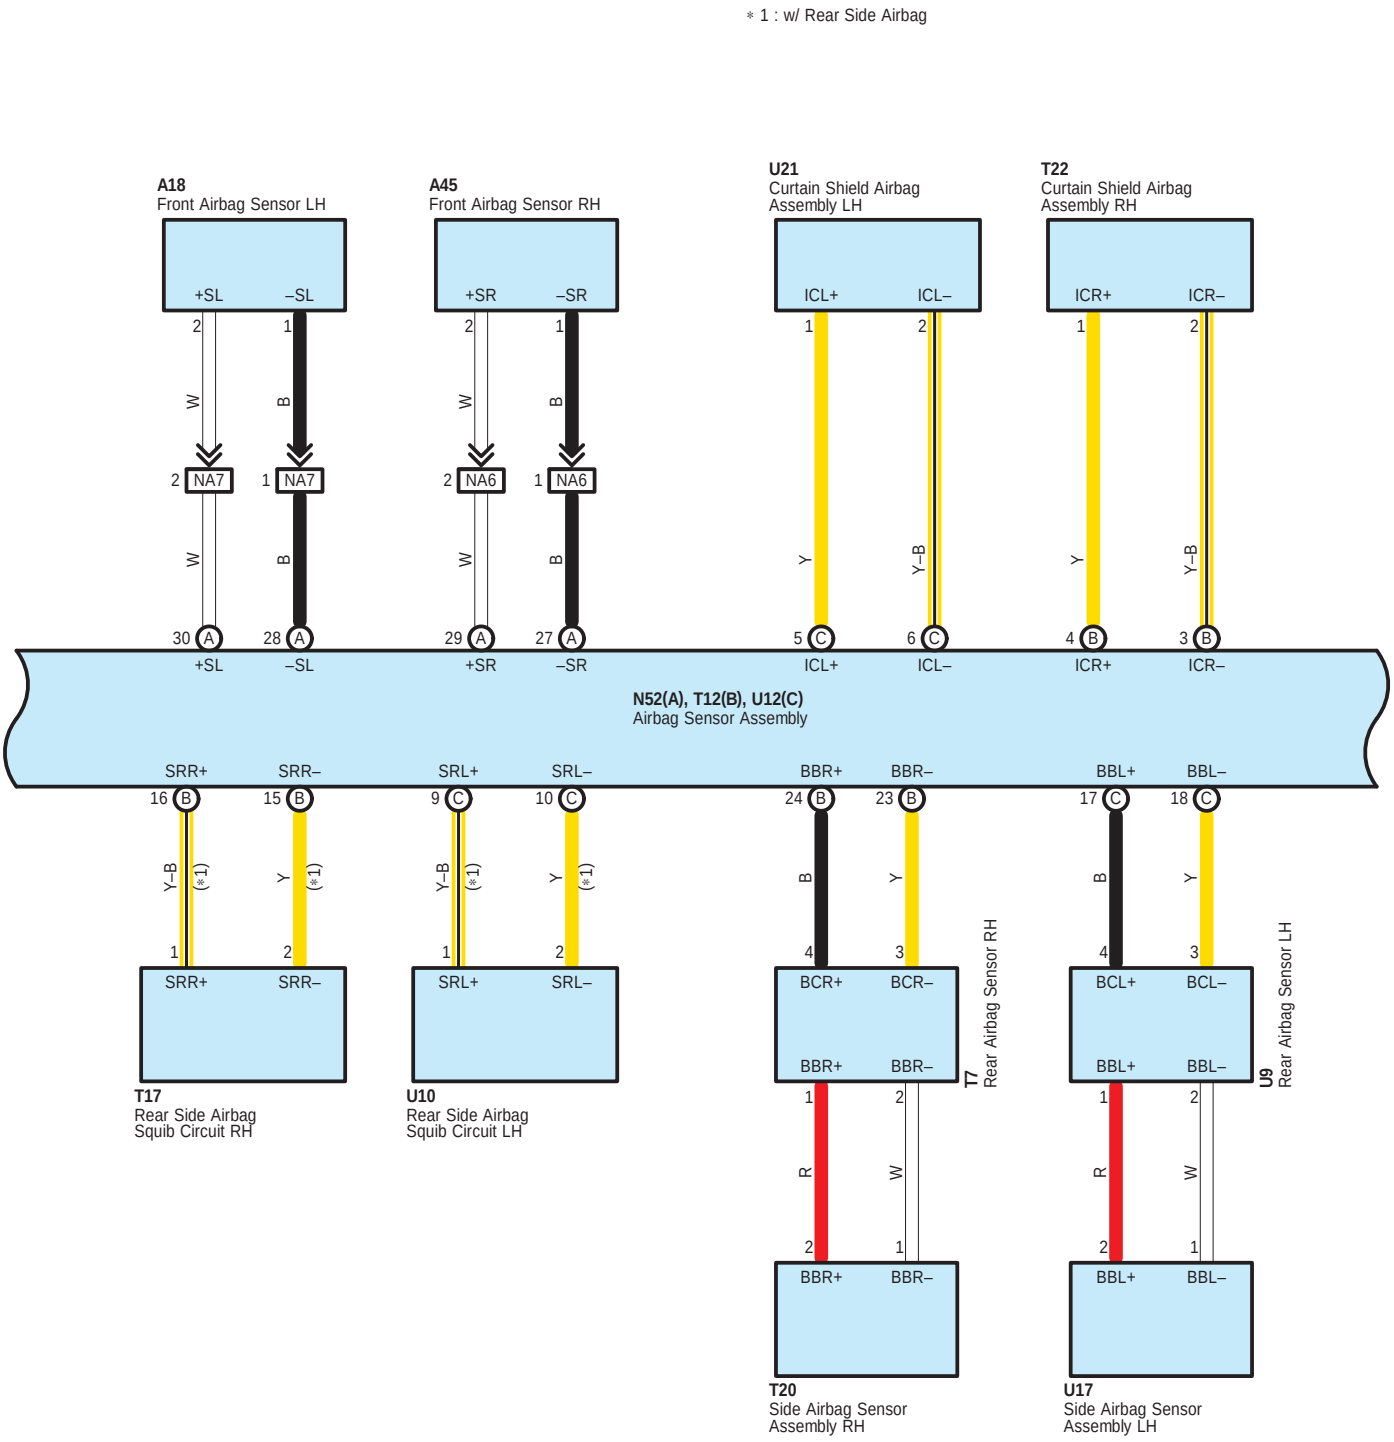
∗ 1 : w/ Rear Side Airbag
A18
Front Airbag Sensor LH
+SL
–SL
A45
Front Airbag Sensor RH
+SR
–SR
U21
Curtain Shield Airbag
Assembly LH
ICL+
ICL–
T22
Curtain Shield Airbag
Assembly RH
ICR+
ICR–
NA7
NA6
N52(A), T12(B), U12(C)
Airbag Sensor Assembly
SRR+
SRR–
SRL+
SRL–
BBR+
BBR–
BBL+
BBL–
BCR+
BCR–
BCL+
BCL–
T17
Rear Side Airbag
Squib Circuit RH
U10
Rear Side Airbag
Squib Circuit LH
T7
Rear Airbag Sensor RH
U9
Rear Airbag Sensor LH
T20
Side Airbag Sensor
Assembly RH
U17
Side Airbag Sensor
Assembly LH

∗ 2 : w/ PASSENGER AIRBAG ON/OFF Indicator
∗ 3 : w/ Telematics Transceiver
∗ 4 : w/ Airbag Cut Off Switch
∗ 5 : Before Sep. 2013 Production
∗ 6 : From Sep. 2013 Production
∗ 9 : Before Sep. 2014 Production
∗10 : From Sep. 2014 Production

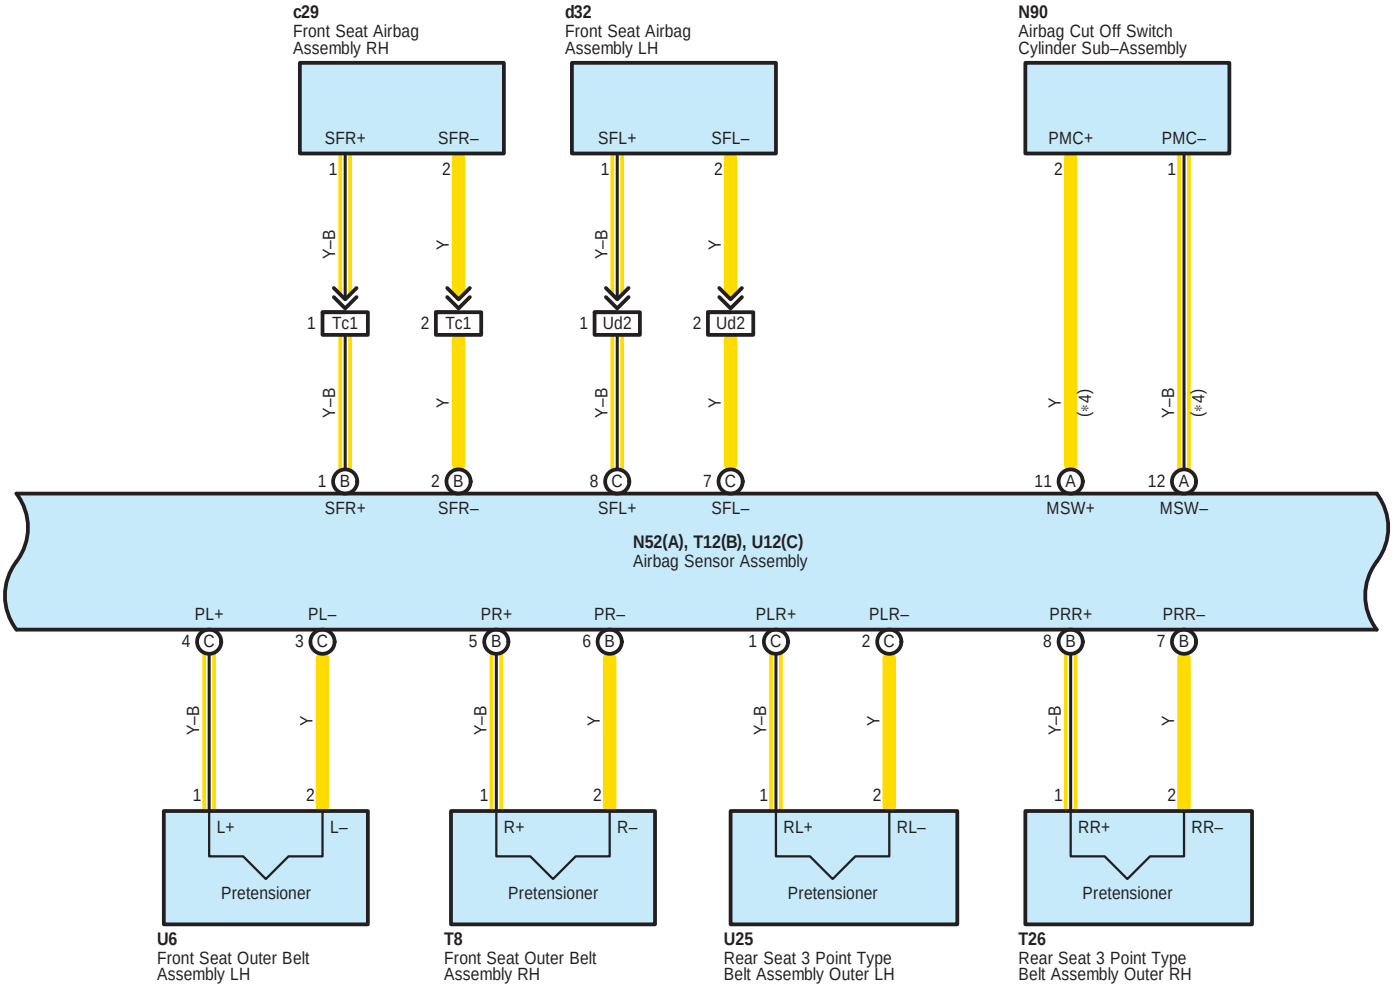

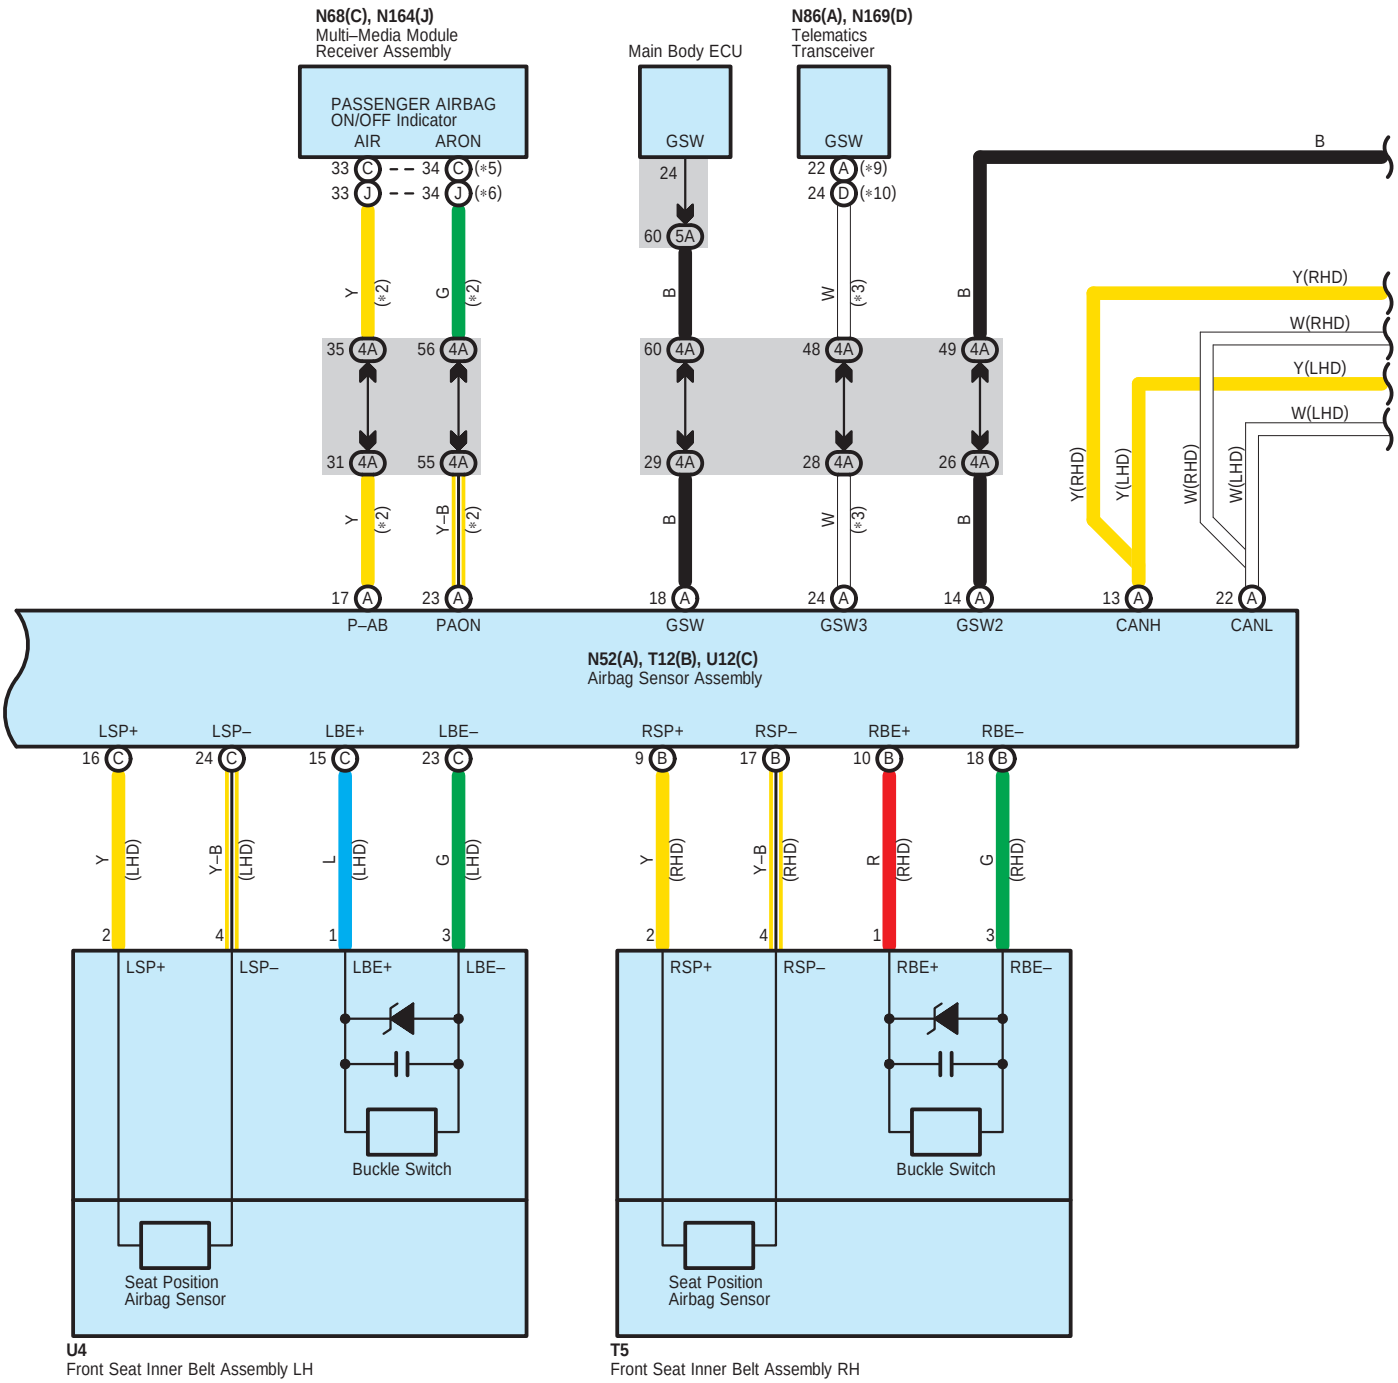
N68(C), N164(J)
Multi–Media Module
Receiver Assembly
PASSENGER AIRBAG
ON/OFF Indicator
AIR
ARON
Main Body ECU
GSW
N86(A), N169(D)
Telematics
Transceiver
GSW
B
Y(RHD)
W(RHD)
Y(LHD)
W(LHD)
P–AB
PAON
GSW
GSW3
GSW2
CANH
CANL
N52(A), T12(B), U12(C)
Airbag Sensor Assembly
LSP+
LSP–
LBE+
LBE–
RSP+
RSP–
RBE+
RBE–
Buckle Switch
Seat Position
Airbag Sensor
U4
Front Seat Inner Belt Assembly LH
T5
Front Seat Inner Belt Assembly RH

∗ 7 : 2GR–FXE
∗ 8 : 2AR–FSE

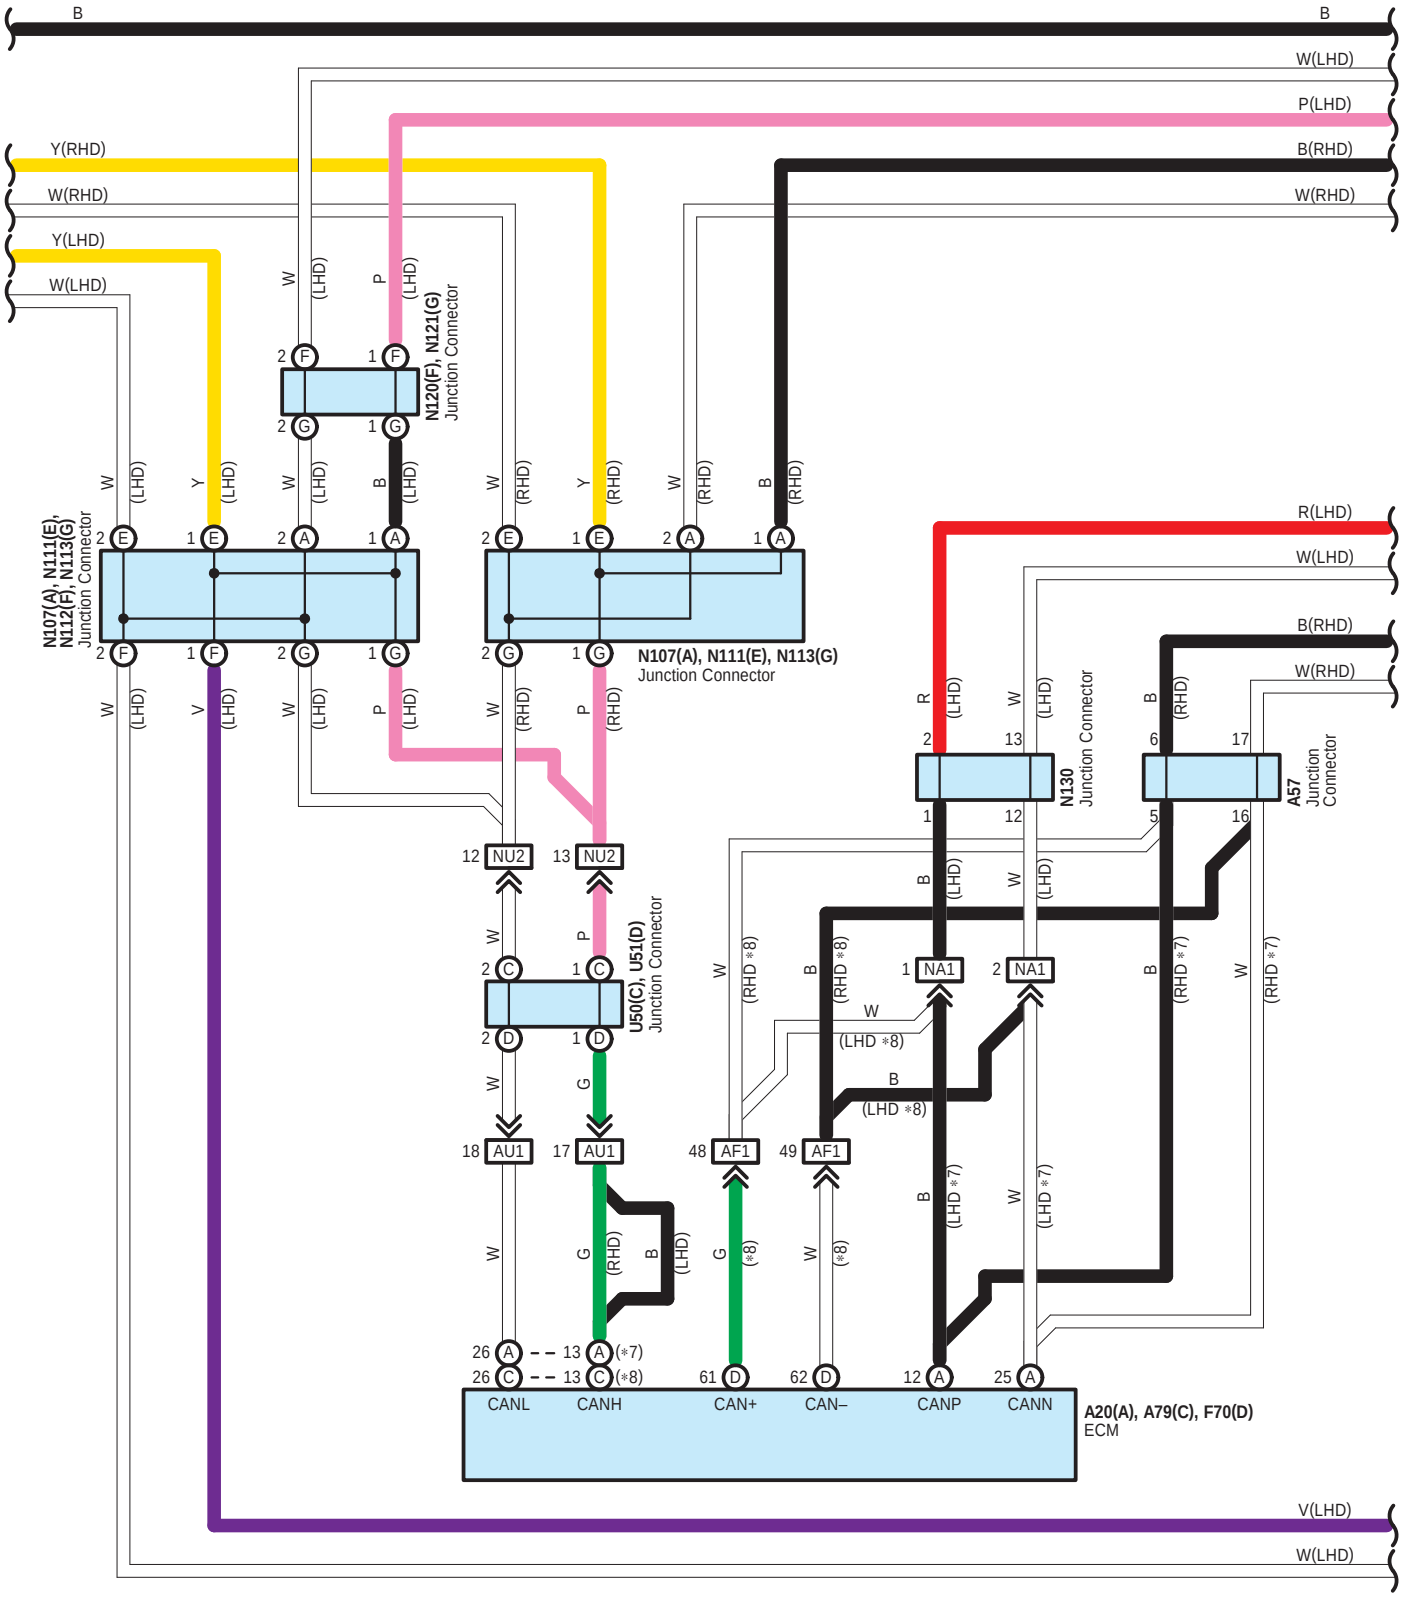

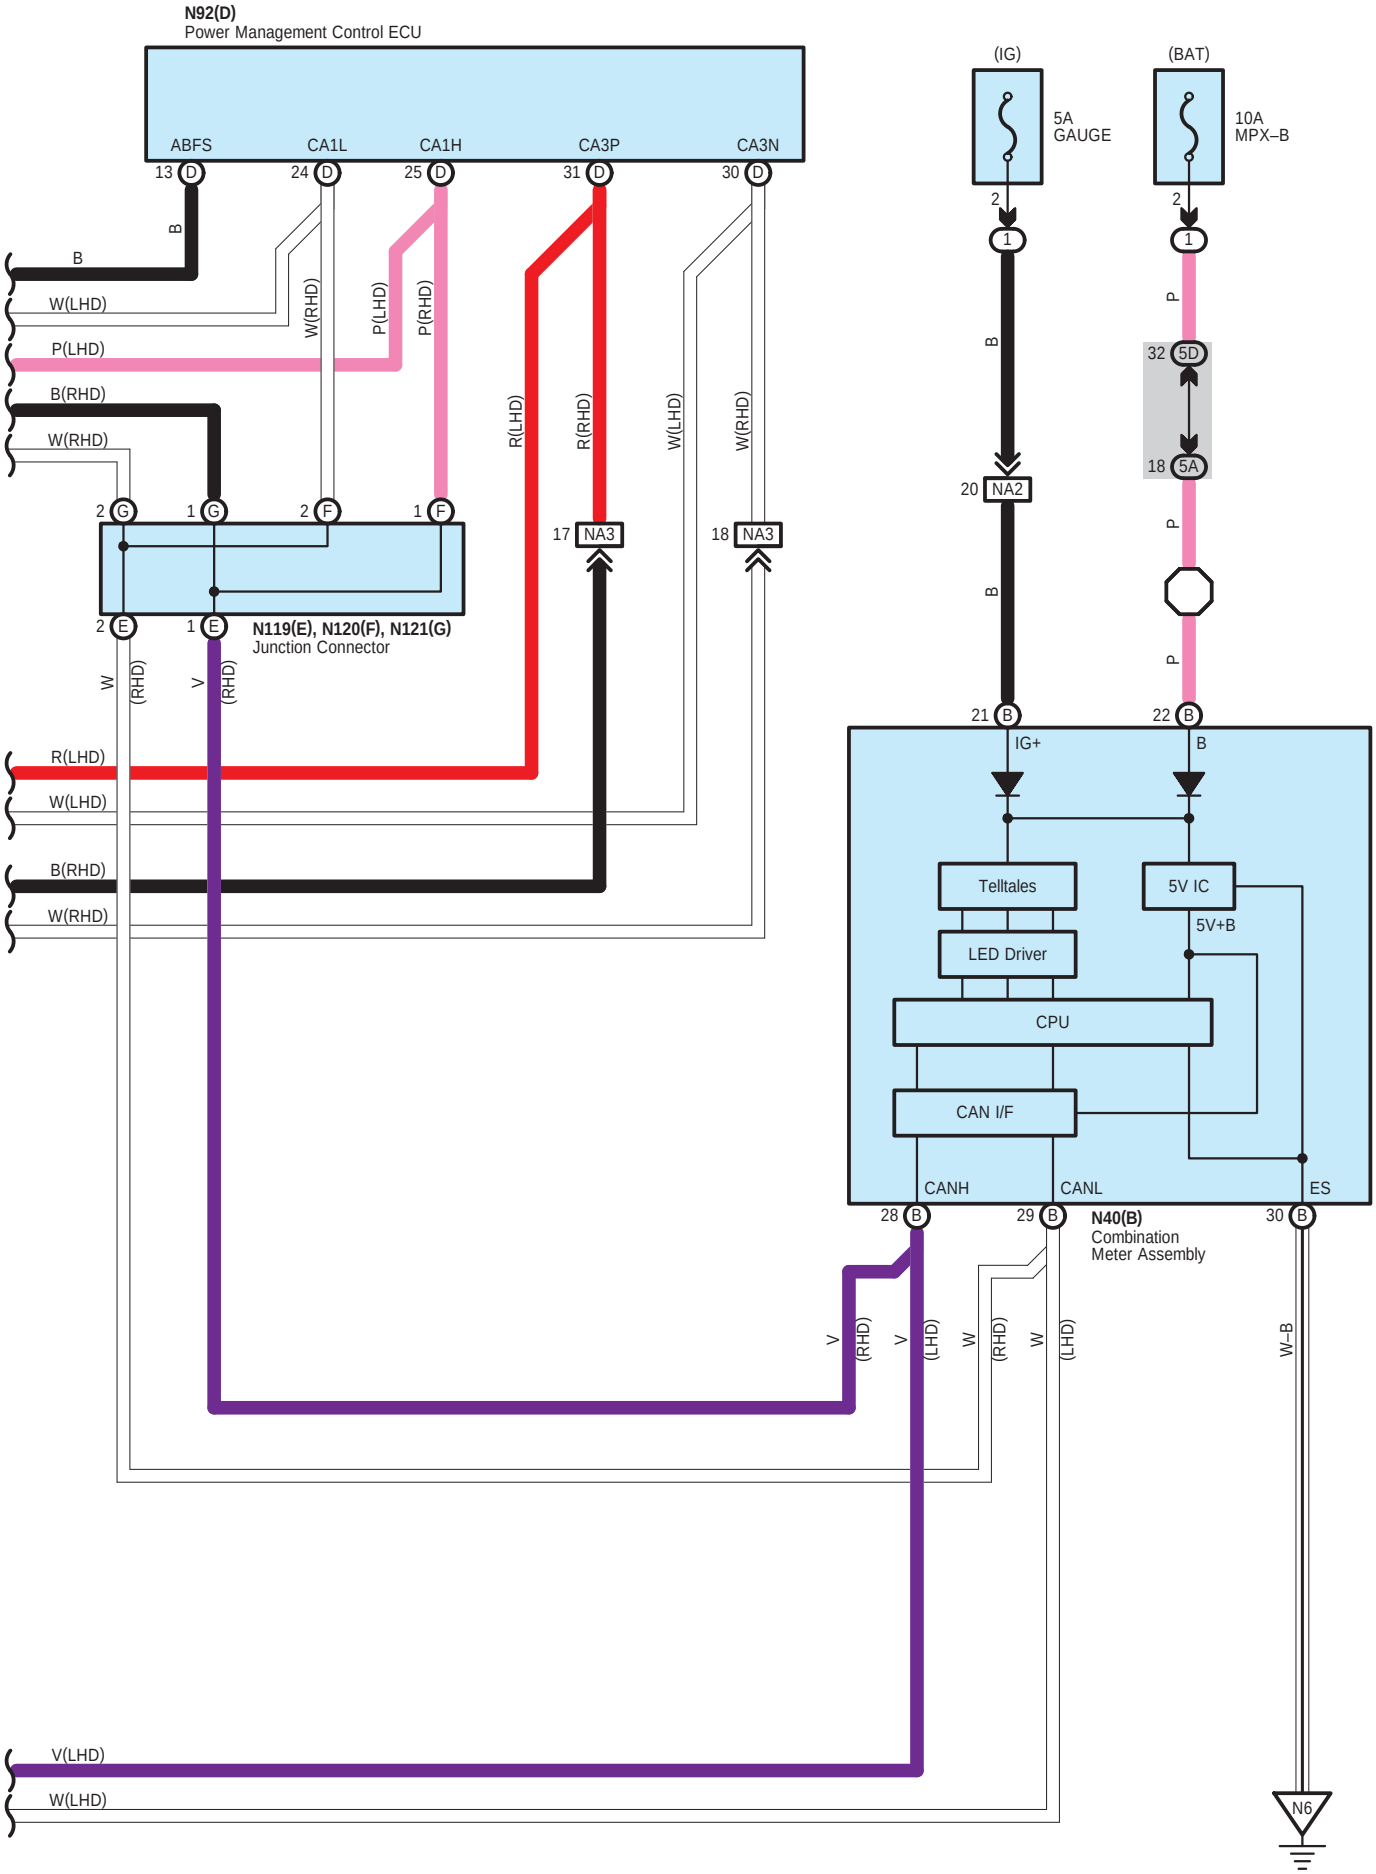
N92(D)
Power Management Control ECU
ABFS
CA1L
CA1H
CA3P
CA3N
13 D
24 D
25 D
31 D
30 D
B
W(LHD)
P(LHD)
B(RHD)
W(RHD)
W(RHD)
P(LHD)
P(RHD)
R(LHD)
R(RHD)
W(LHD)
W(RHD)
2 G
1 G
2 F
1 F
17 NA3
18 NA3
2 E
1 E
N119(E), N120(F), N121(G)
Junction Connector
W
(RHD)
V
(RHD)
R(LHD)
W(LHD)
B(RHD)
W(RHD)
(IG)
(BAT)
5A
GAUGE
10A
MPX–B
2
1
B
20 NA2
B
P
32 5D
18 5A
P
P
21 B
22 B
IG+
B
Telltales
5V IC
5V+B
LED Driver
CPU
CAN I/F
CANH
CANL
ES
28 B
29 B
30 B
N40(B)
Combination
Meter Assembly
V
(RHD)
V
(LHD)
W
(RHD)
W
(LHD)
W–B
V(LHD)
W(LHD)
N6

A 18
Yellow

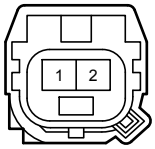

A 20
Black

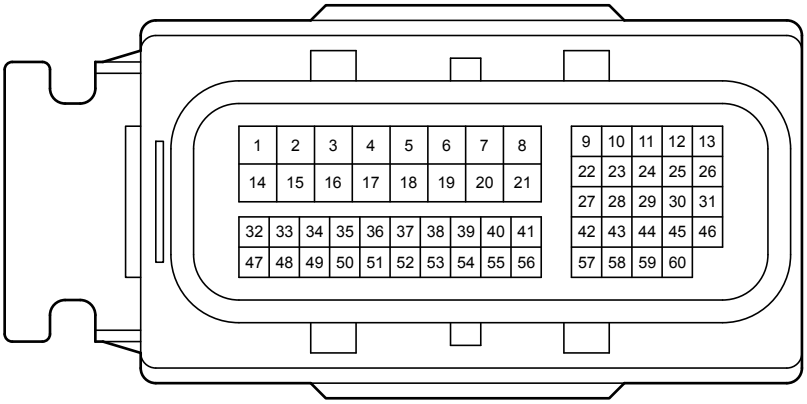

A 45
Yellow

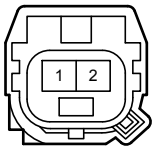

A 57
Blue

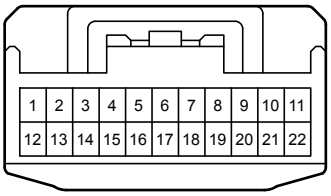

A 79
Black

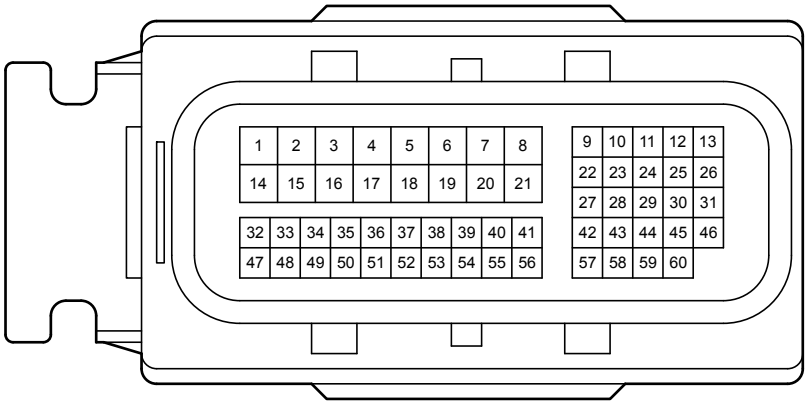

F 70
Black

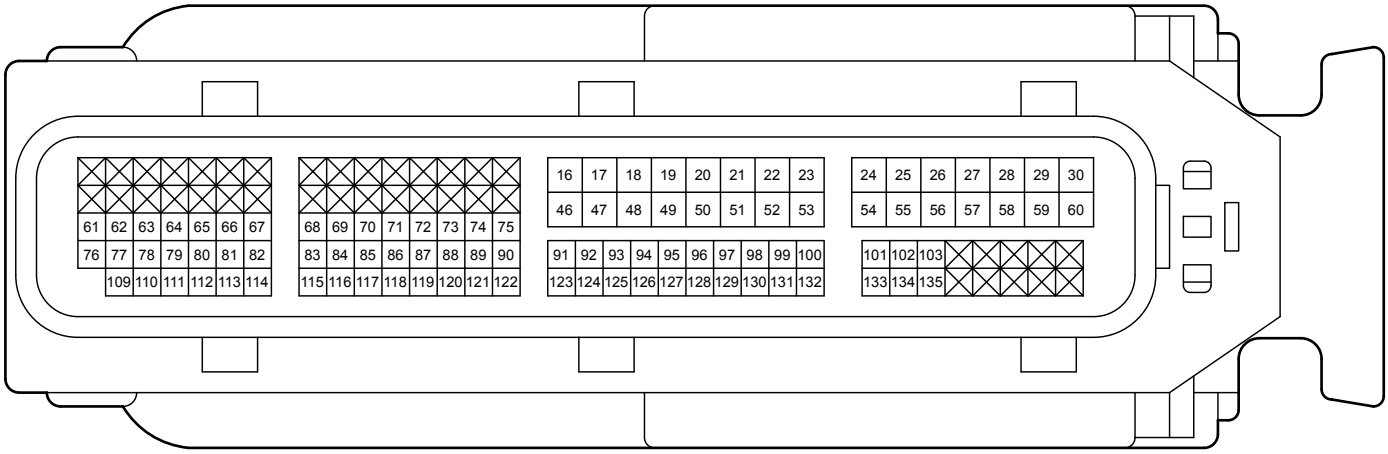

N 14
Black



N 30
Yellow

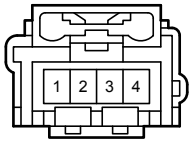

N 40
Black

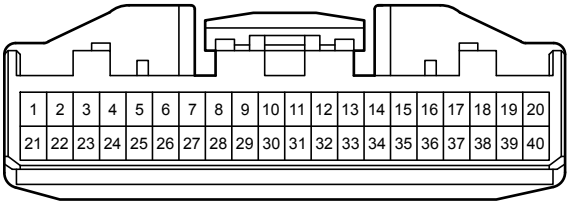

N 52
Yellow

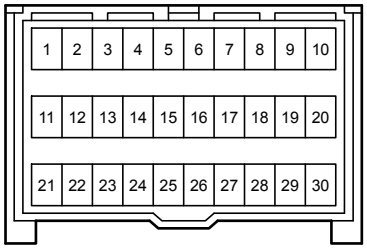

N 68
White

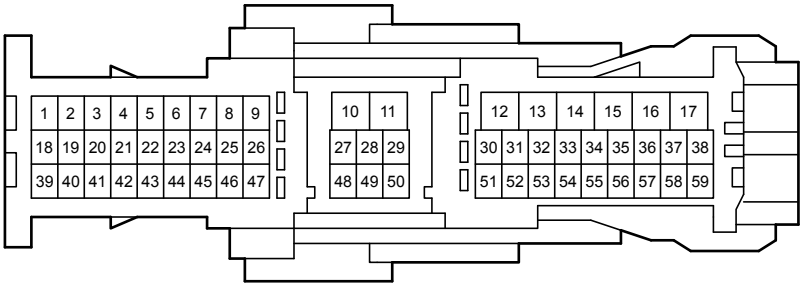

N 74
Yellow

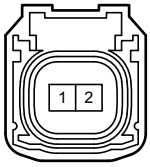

N 86
White

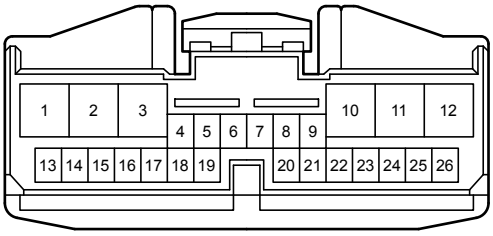

N 90
Black



N 92
Gray

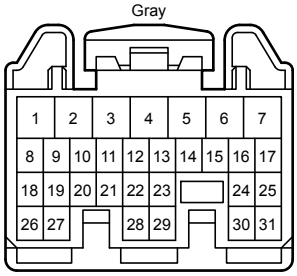

N107
White



N111
White



N112
White



N113
White



N119
White



N120
White



N121
White



N130
Black

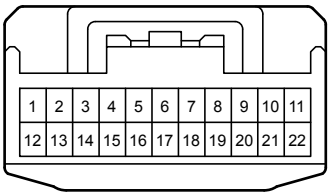

N164
White

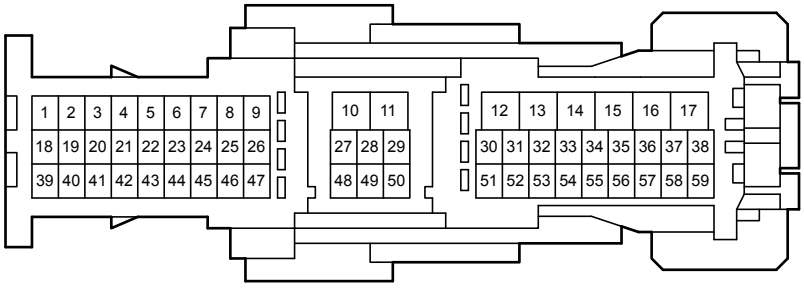

N169
White

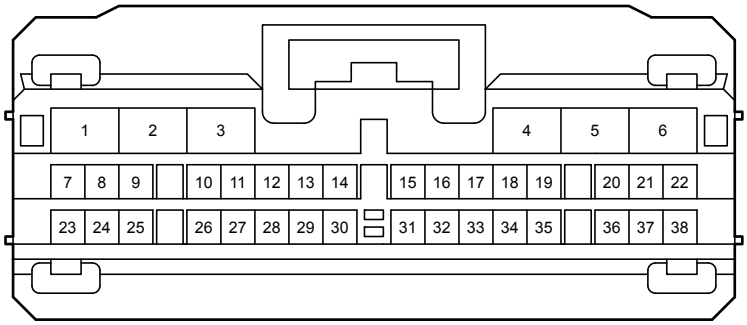

T 5
White

T 7
Yellow

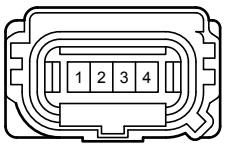

T 8
Black



T 12
Yellow

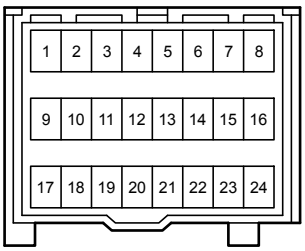

T 17
Yellow

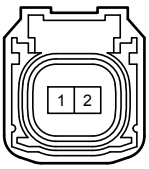

T 20
Yellow

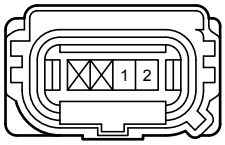

T 22
Black

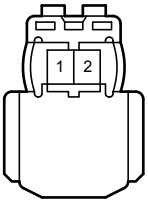

T 26
Black



U 4
White

U 6
Black



U 9
Yellow

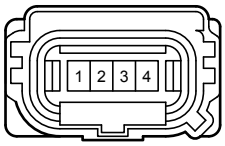

U 10
Yellow

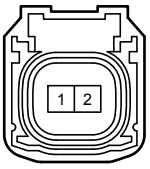

U 12
Yellow

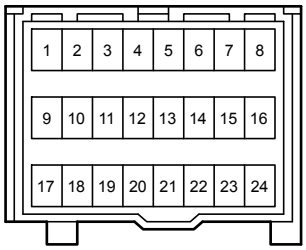

U 17
Yellow

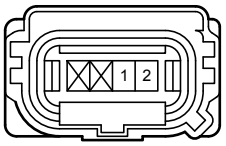

U 21
Black

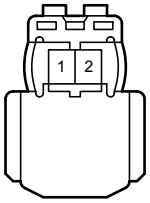

U 25
Black



U 50
White



U 51
White



c 29
Yellow

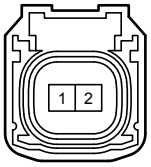

d 32
Yellow

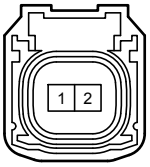

s 1
Orange



s 2
Black



z 2
Black



z 3
Orange



4A
White

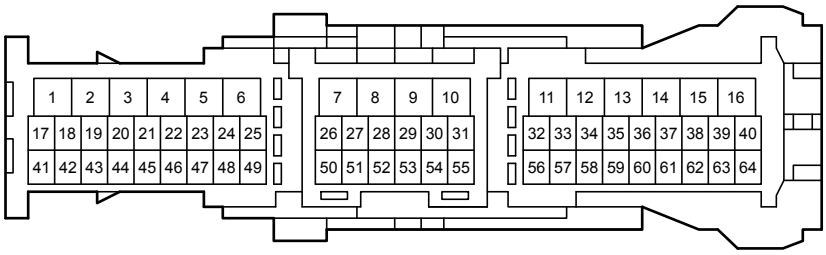

5A
White

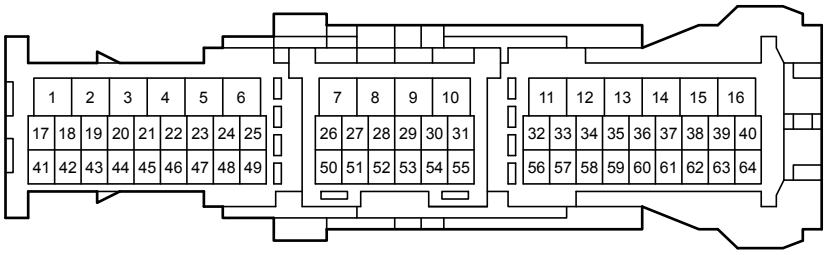

5D
White

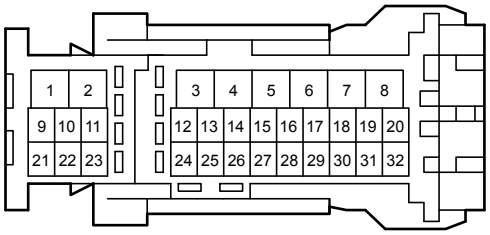

AF1
White

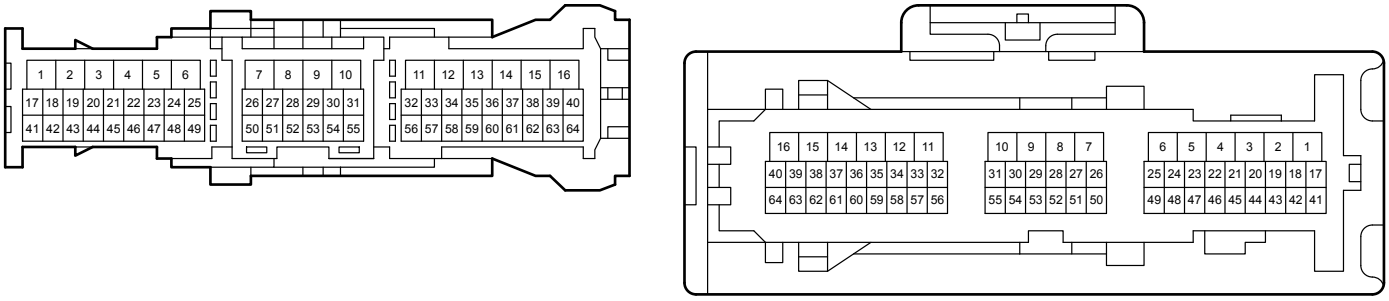

AU1
White

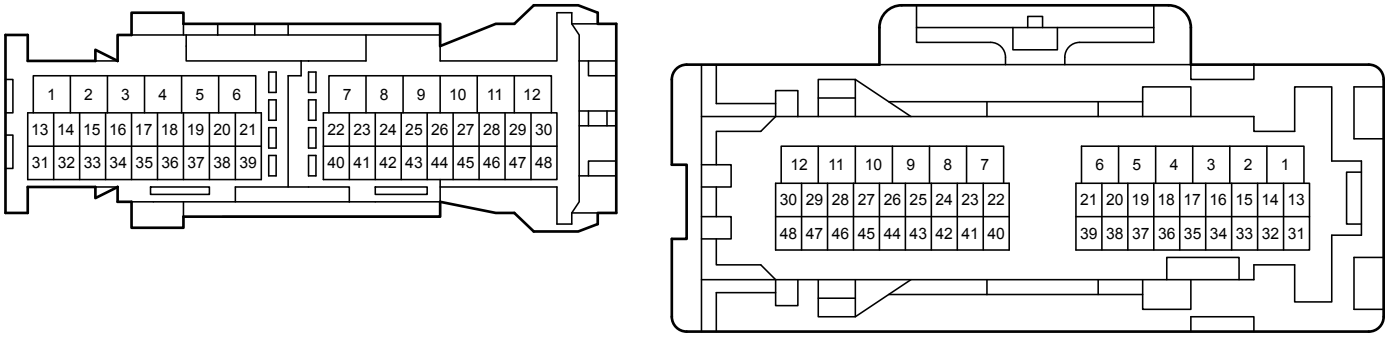

NA1
White

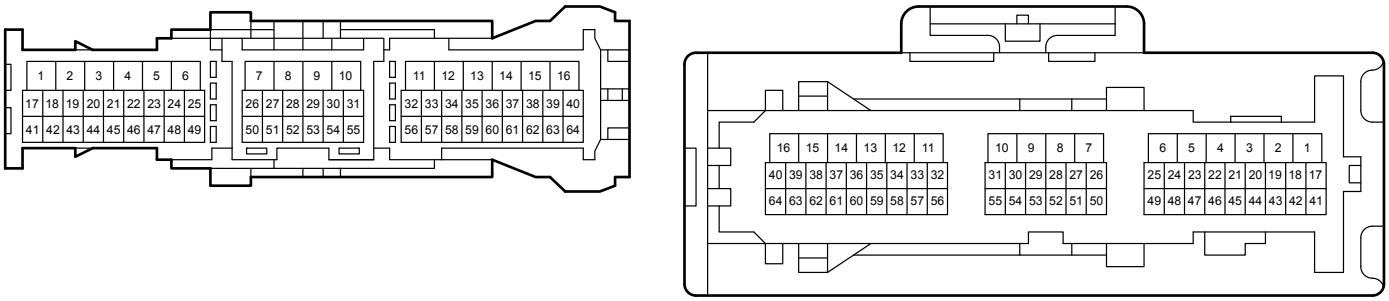

NA2
White

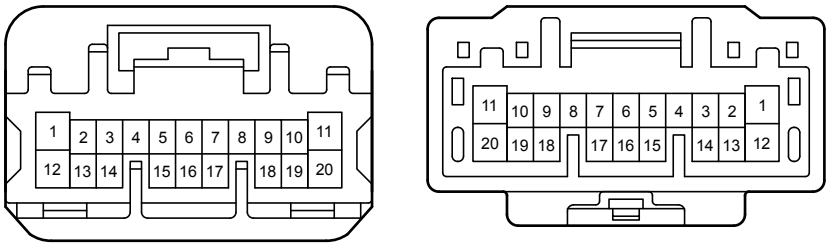

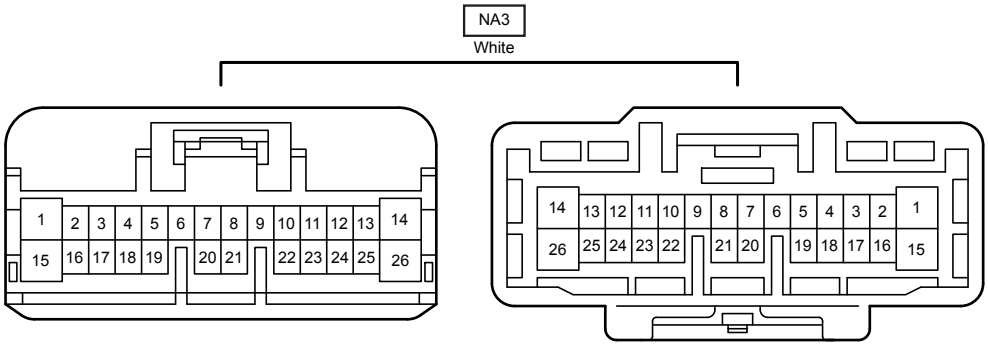
NA3
White
1 2 3 4 5 6 7 8 9 10 11 12 13 14
15 16 17 18 19 20 21 22 23 24 25 26
14 13 12 11 10 9 8 7 6 5 4 3 2 1
26 25 24 23 22 21 20 19 18 17 16 15

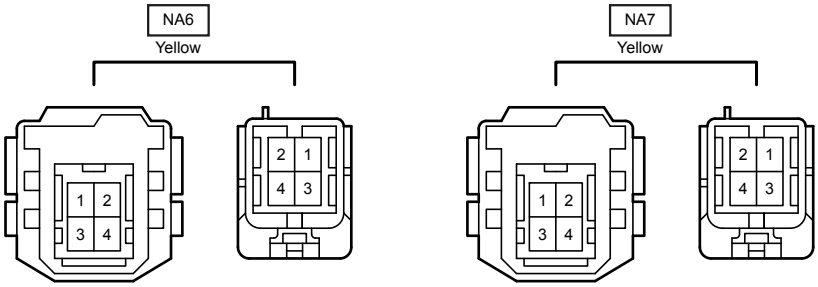
NA6
Yellow
1 2
3 4
2 1
4 3
NA7
Yellow
1 2
3 4
2 1
4 3

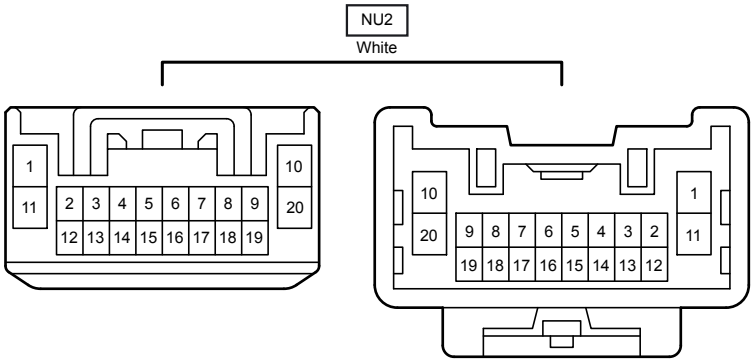
NU2
White
1 10
11 2 3 4 5 6 7 8 9 20
12 13 14 15 16 17 18 19
10 1
20 9 8 7 6 5 4 3 2 11
19 18 17 16 15 14 13 12

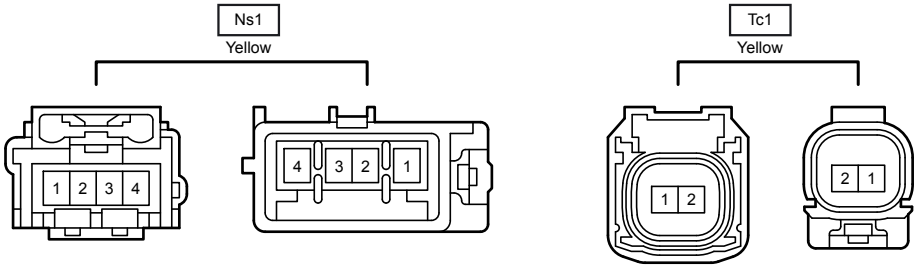
Ns1
Yellow
1 2 3 4
4 3 2 1
Tc1
Yellow
1 2
2 1

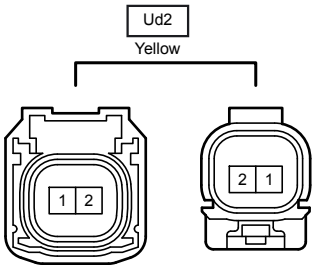
Ud2
Yellow
1 2
2 1