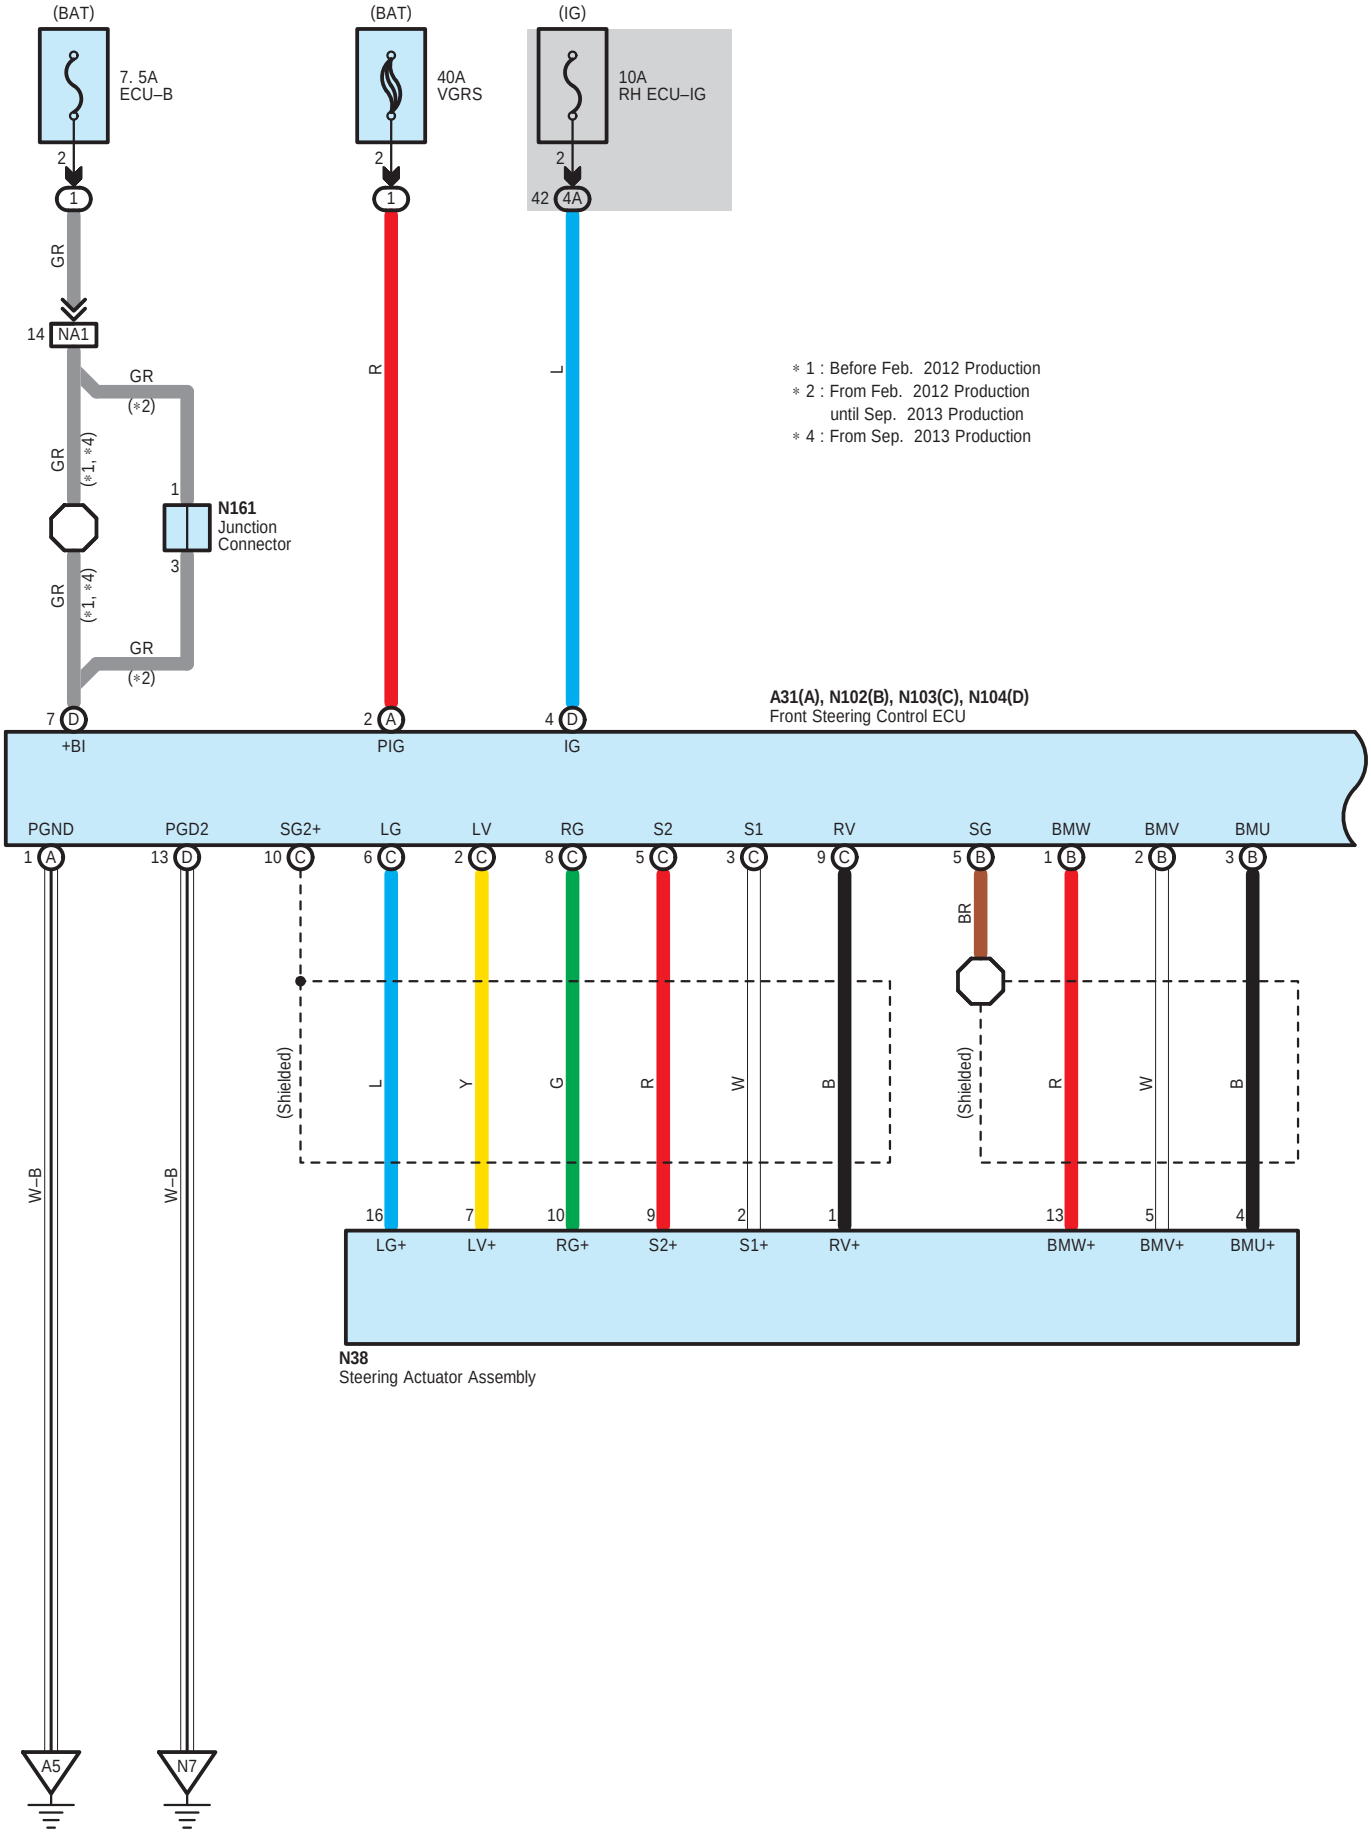
(BAT)
7. 5A
ECU–B
(BAT)
40A
VGRS
(IG)
10A
RH ECU–IG
GR
NA1
GR
(*2)
GR
(*1, *4)
N161
Junction
Connector
GR
(*1, *4)
GR
(*2)
R
L
* 1 : Before Feb. 2012 Production
* 2 : From Feb. 2012 Production
until Sep. 2013 Production
* 4 : From Sep. 2013 Production
A31(A), N102(B), N103(C), N104(D)
Front Steering Control ECU
+BI
PIG
IG
PGND
PGD2
SG2+
LG
LV
RG
S2
S1
RV
SG
BMW
BMV
BMU
BR
(Shielded)
(Shielded)
W–B
W–B
LG+
LV+
RG+
S2+
S1+
RV+
BMW+
BMV+
BMU+
N38
Steering Actuator Assembly
A5
N7

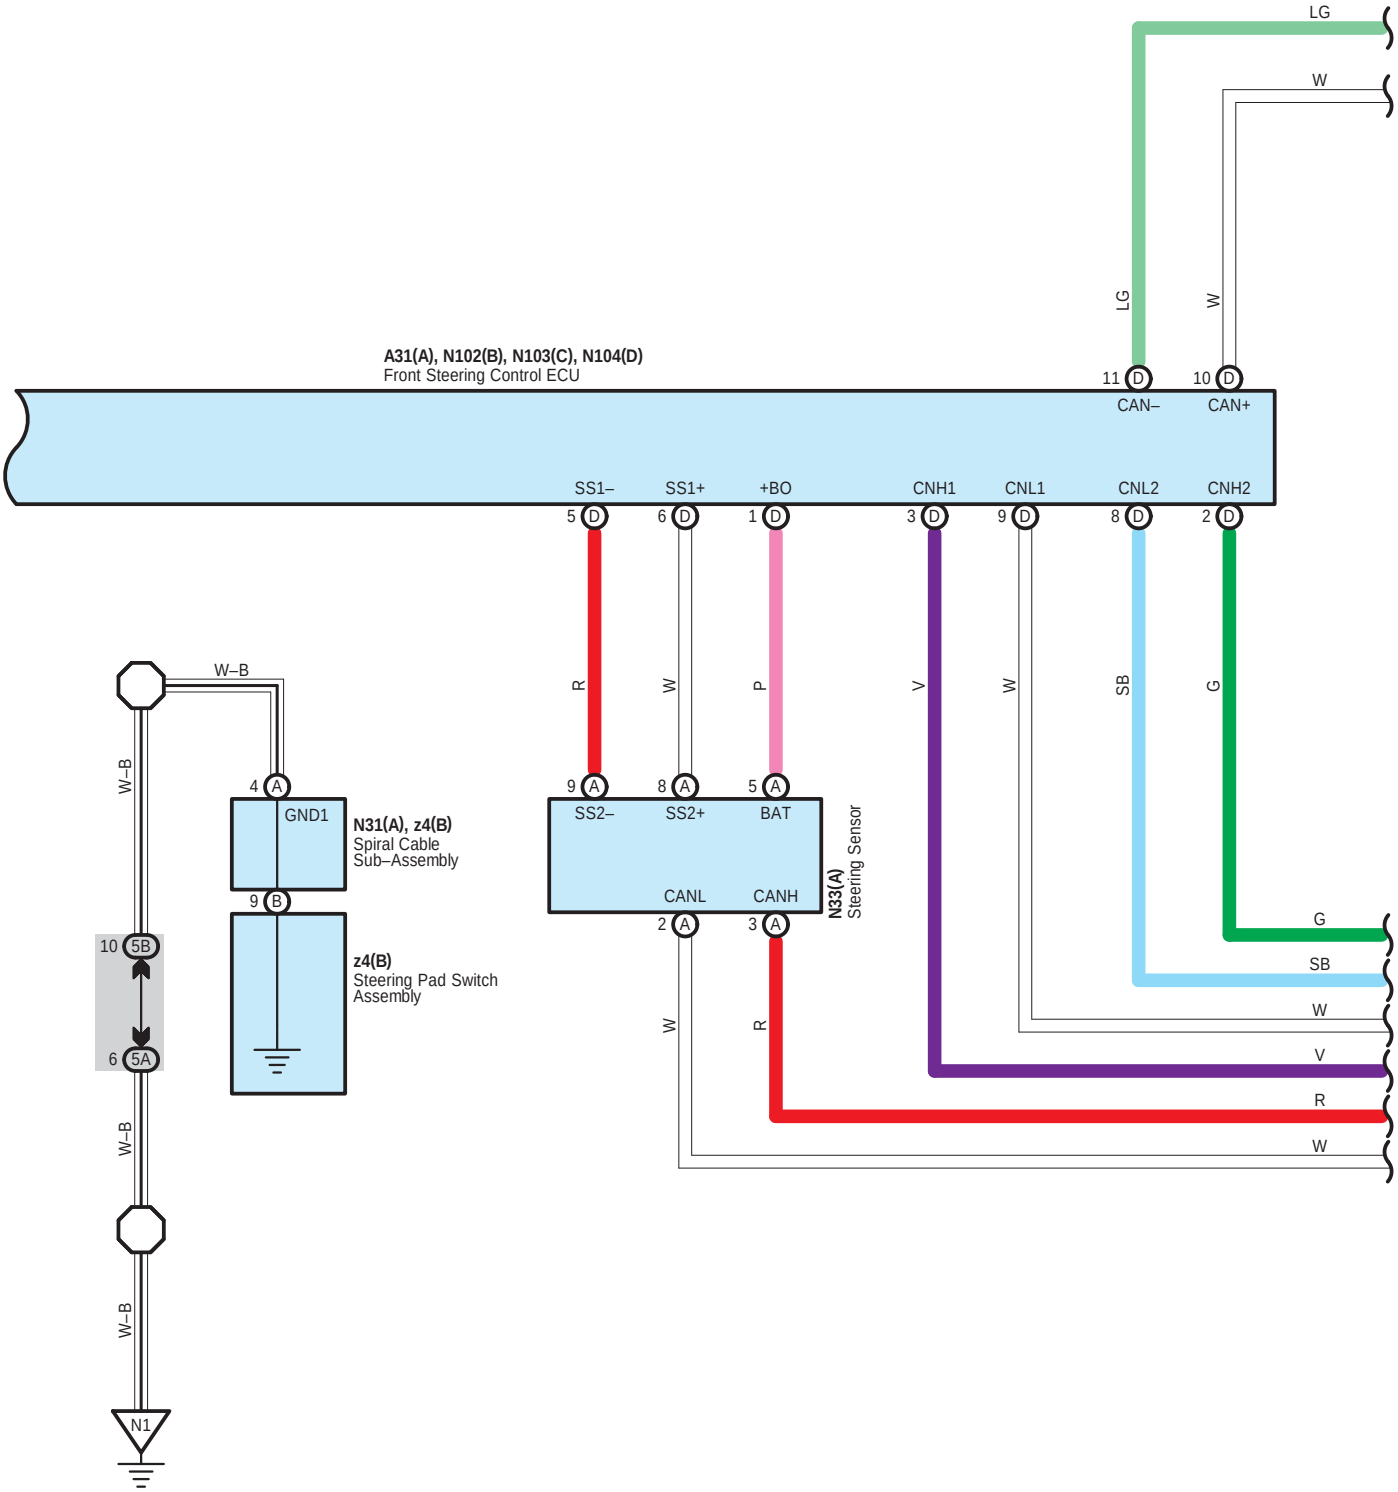
LG
W
LG
W
A31(A), N102(B), N103(C), N104(D)
Front Steering Control ECU
11 D
CAN–
10 D
CAN+
SS1–
SS1+
+BO
CNH1
CNL1
CNL2
CNH2
5 D
6 D
1 D
3 D
9 D
8 D
2 D
R
W
P
V
W
SB
G
W–B
W–B
4 A
GND1
N31(A), z4(B)
Spiral Cable
Sub–Assembly
9 B
z4(B)
Steering Pad Switch
Assembly
10 5B
6 5A
W–B
W–B
N1
9 A
8 A
5 A
SS2–
SS2+
BAT
CANL
CANH
2 A
3 A
N33(A)
Steering Sensor
W
R
G
SB
W
V
R
W

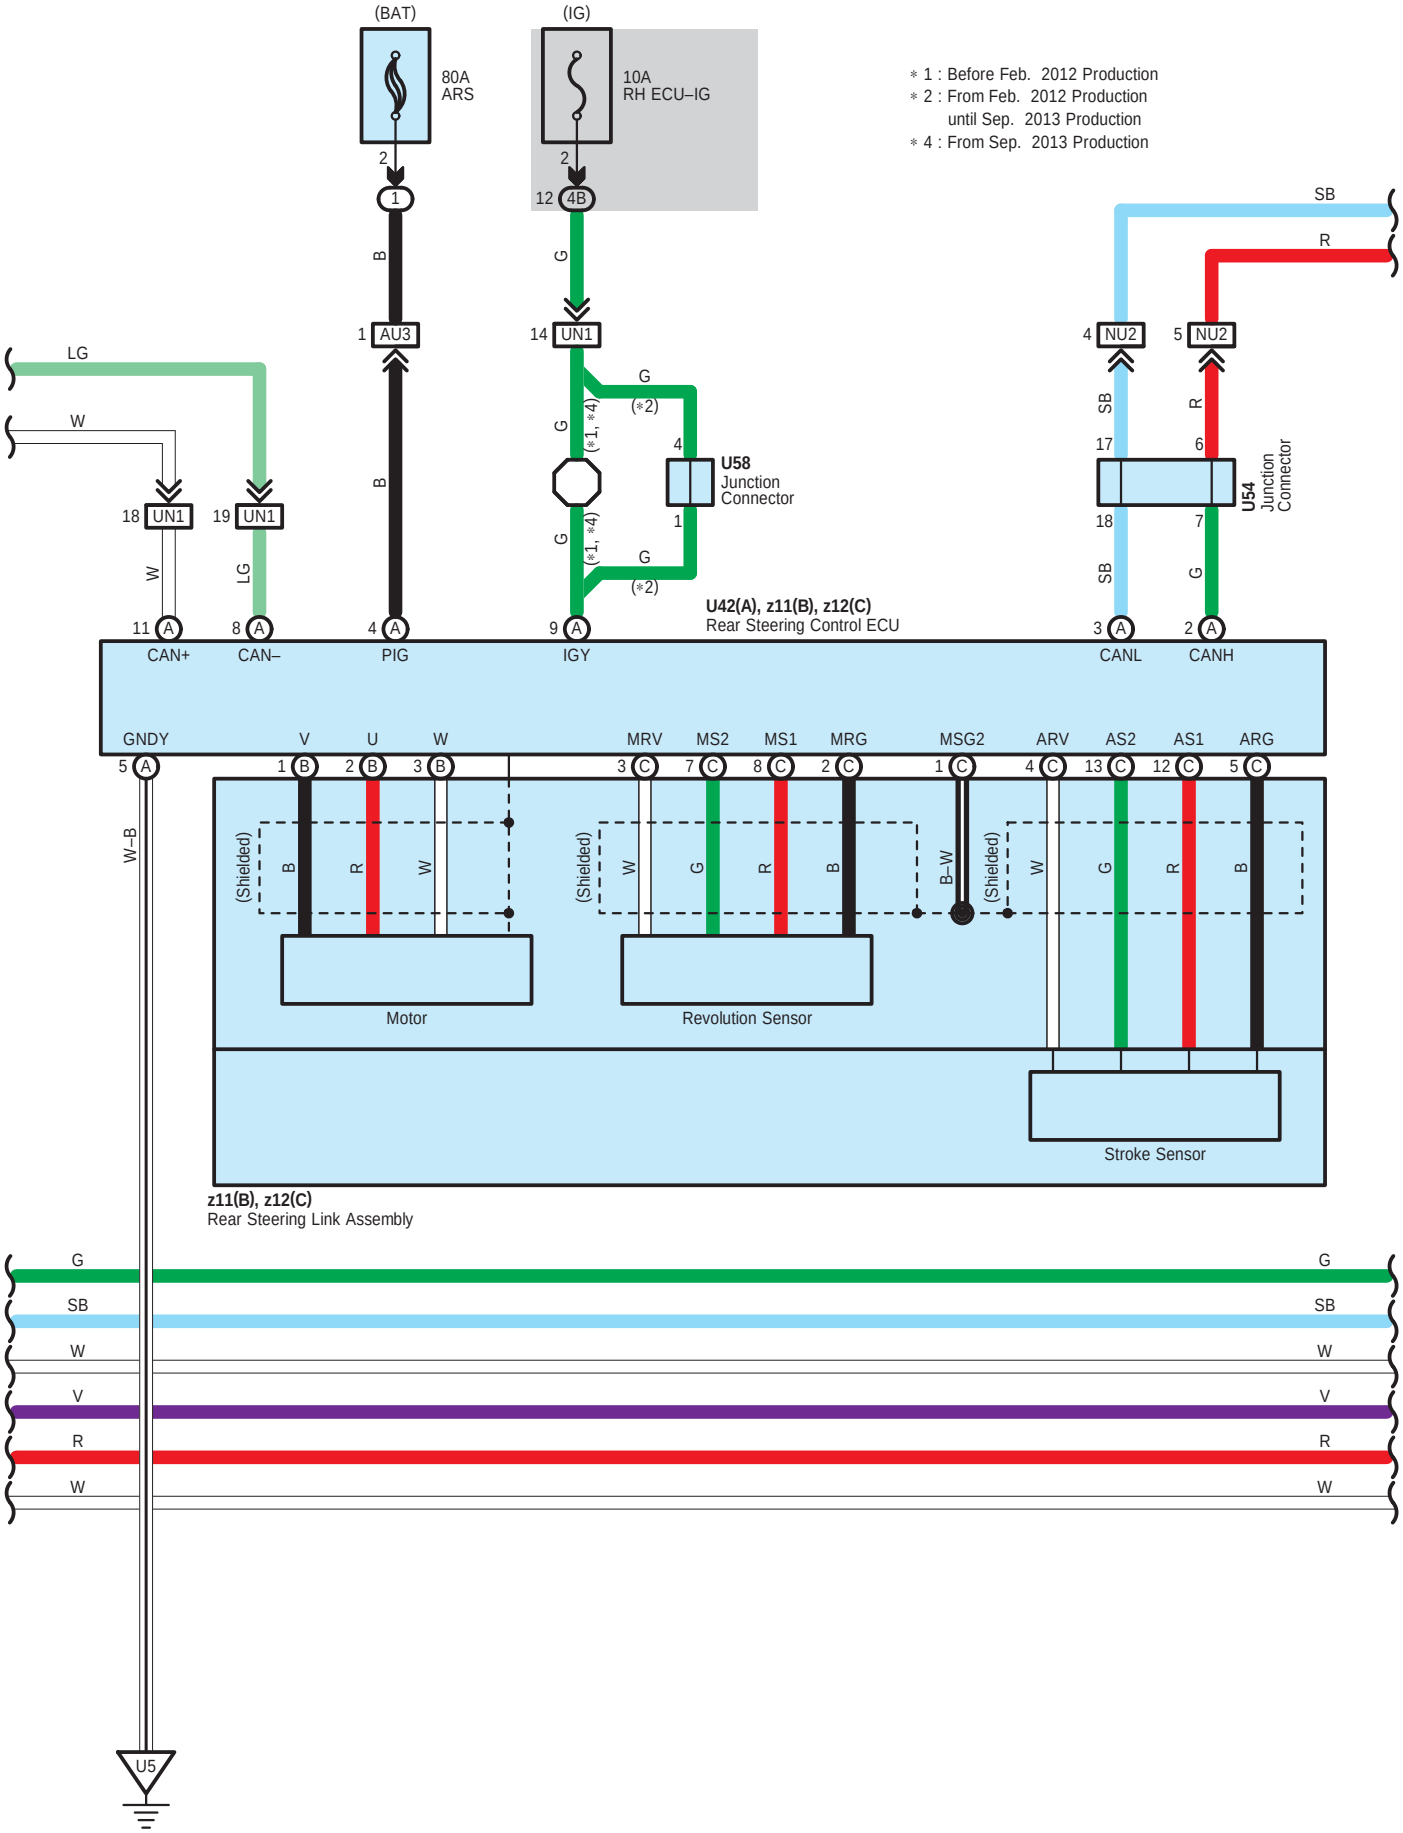
(BAT)
(IG)
80A
ARS
10A
RH ECU–IG
∗1 : Before Feb. 2012 Production
∗2 : From Feb. 2012 Production
until Sep. 2013 Production
∗4 : From Sep. 2013 Production
AU3
UN1
NU2
U58
Junction
Connector
U54
Junction
Connector
U42(A), z11(B), z12(C)
Rear Steering Control ECU
CAN+
CAN–
PIG
IGY
CANL
CANH
GNDY
MRV
MS2
MS1
MRG
MSG2
ARV
AS2
AS1
ARG
(Shielded)
Motor
Revolution Sensor
Stroke Sensor
z11(B), z12(C)
Rear Steering Link Assembly
U5

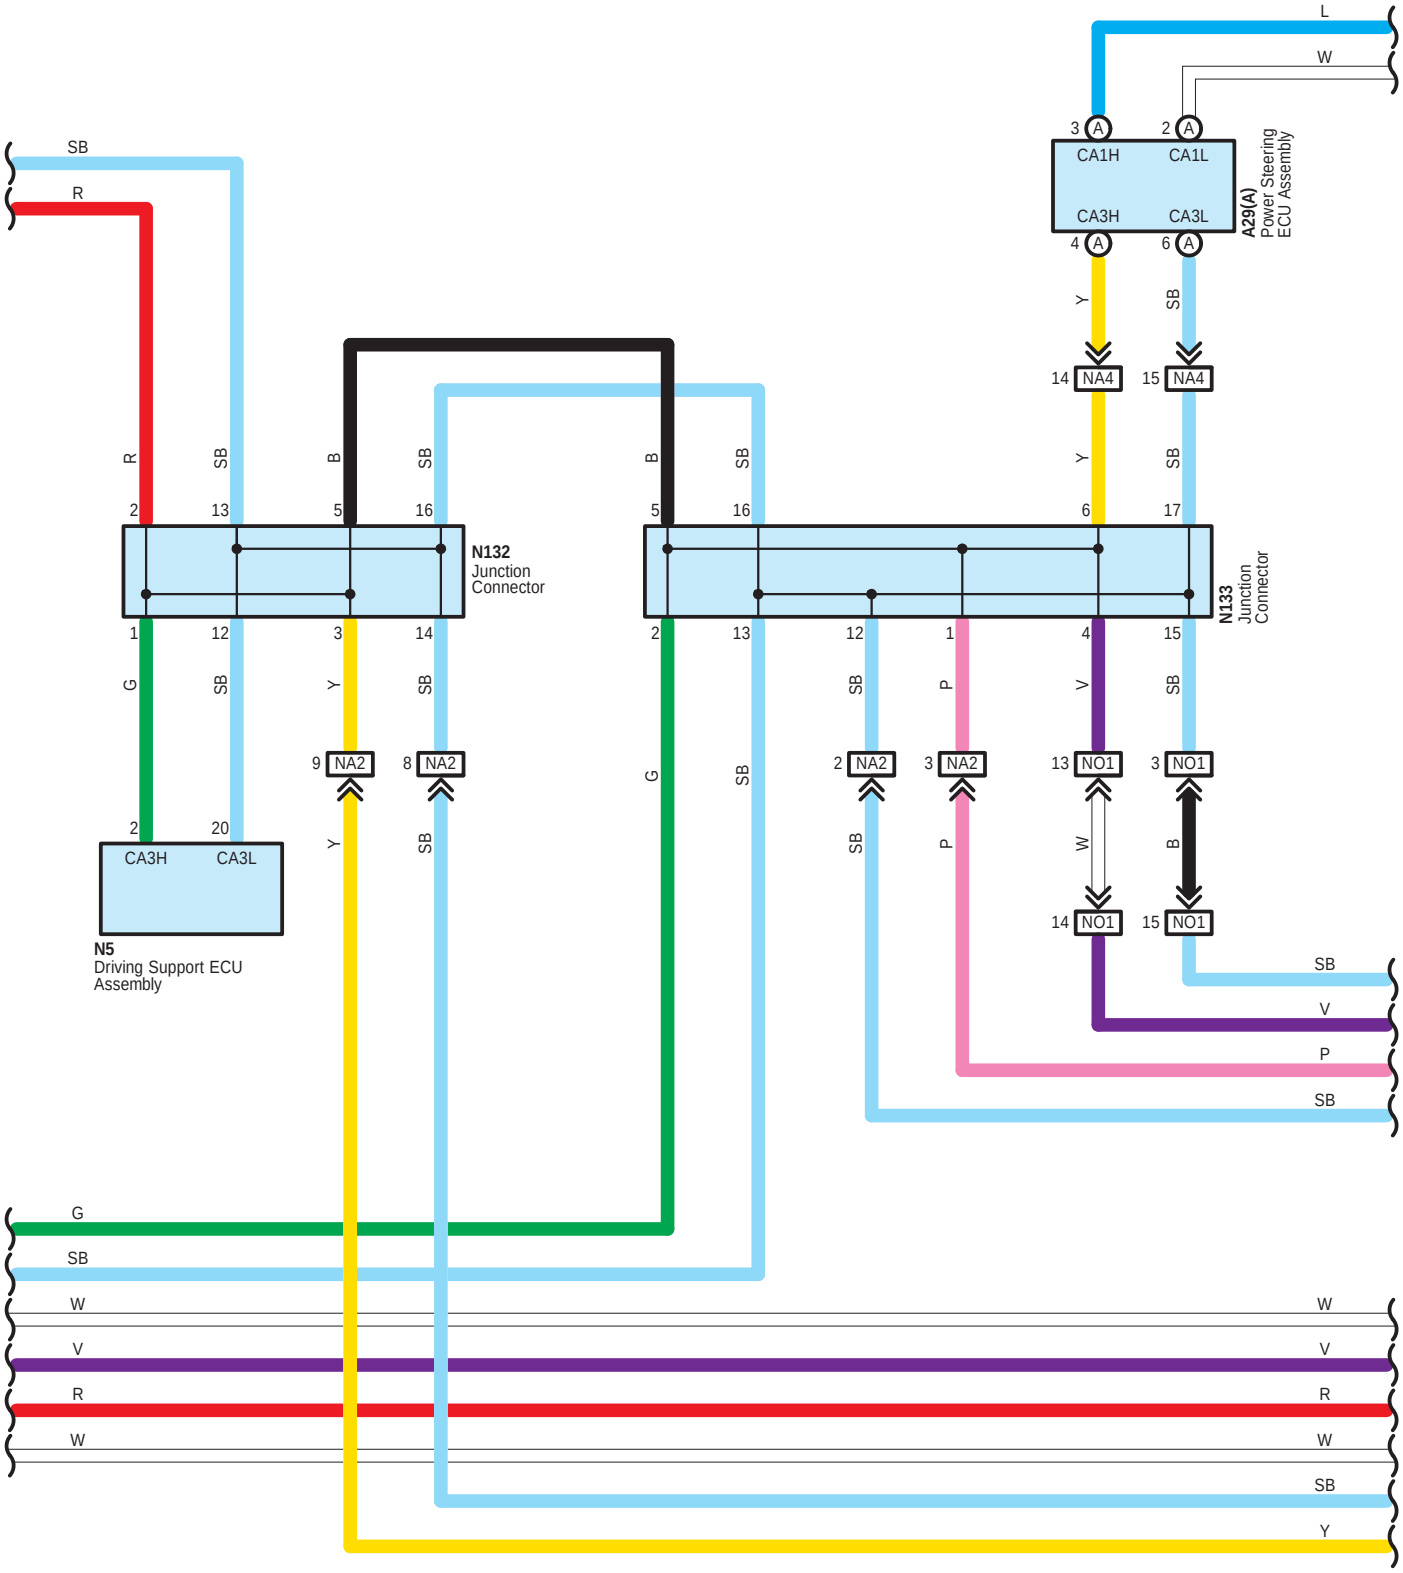
L
W
3 A
2 A
CA1H
CA1L
CA3H
CA3L
4 A
6 A
A29(A)
Power Steering
ECU Assembly
Y
SB
14 NA4
15 NA4
SB
R
R
SB
B
SB
B
SB
Y
SB
2
13
5
16
5
16
6
17
N132
Junction
Connector
N133
Junction
Connector
1
12
3
14
2
13
12
1
4
15
G
SB
Y
SB
SB
P
V
SB
9 NA2
8 NA2
2 NA2
3 NA2
13 NO1
3 NO1
G
SB
SB
P
W
B
2
20
CA3H
CA3L
Y
SB
14 NO1
15 NO1
N5
Driving Support ECU
Assembly
SB
V
P
SB
G
SB
W
V
R
W
W
V
R
W
SB
Y

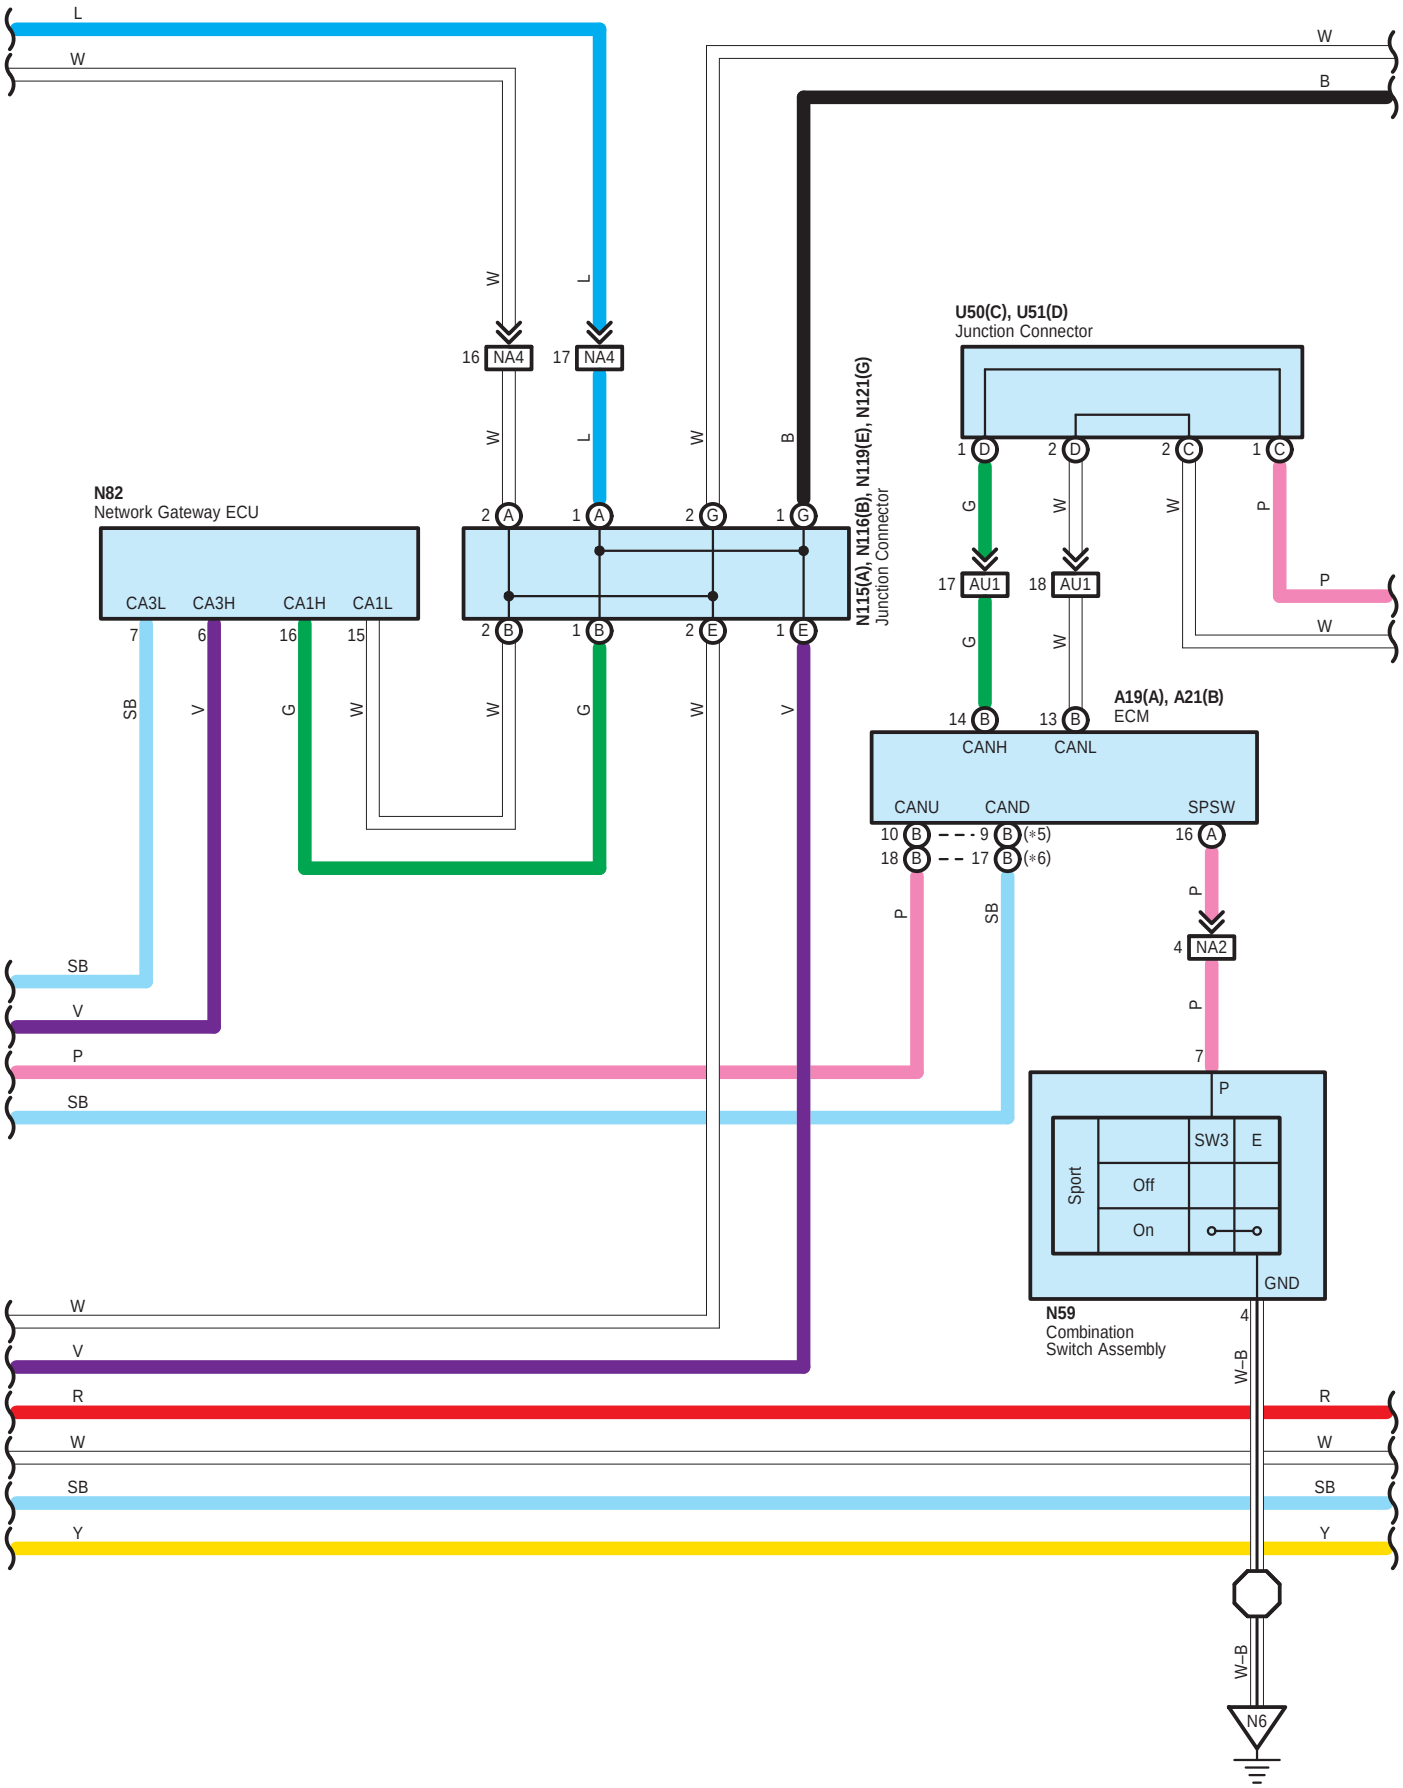
N82
Network Gateway ECU
CA3L
CA3H
CA1H
CA1L
N115(A), N116(B), N119(E), N121(G)
Junction Connector
U50(C), U51(D)
Junction Connector
A19(A), A21(B)
ECM
CANH
CANL
CANU
CAND
SPSW
Sport
Off
On
SW3
E
GND
N59
Combination
Switch Assembly
NA4
AU1
NA2
N6

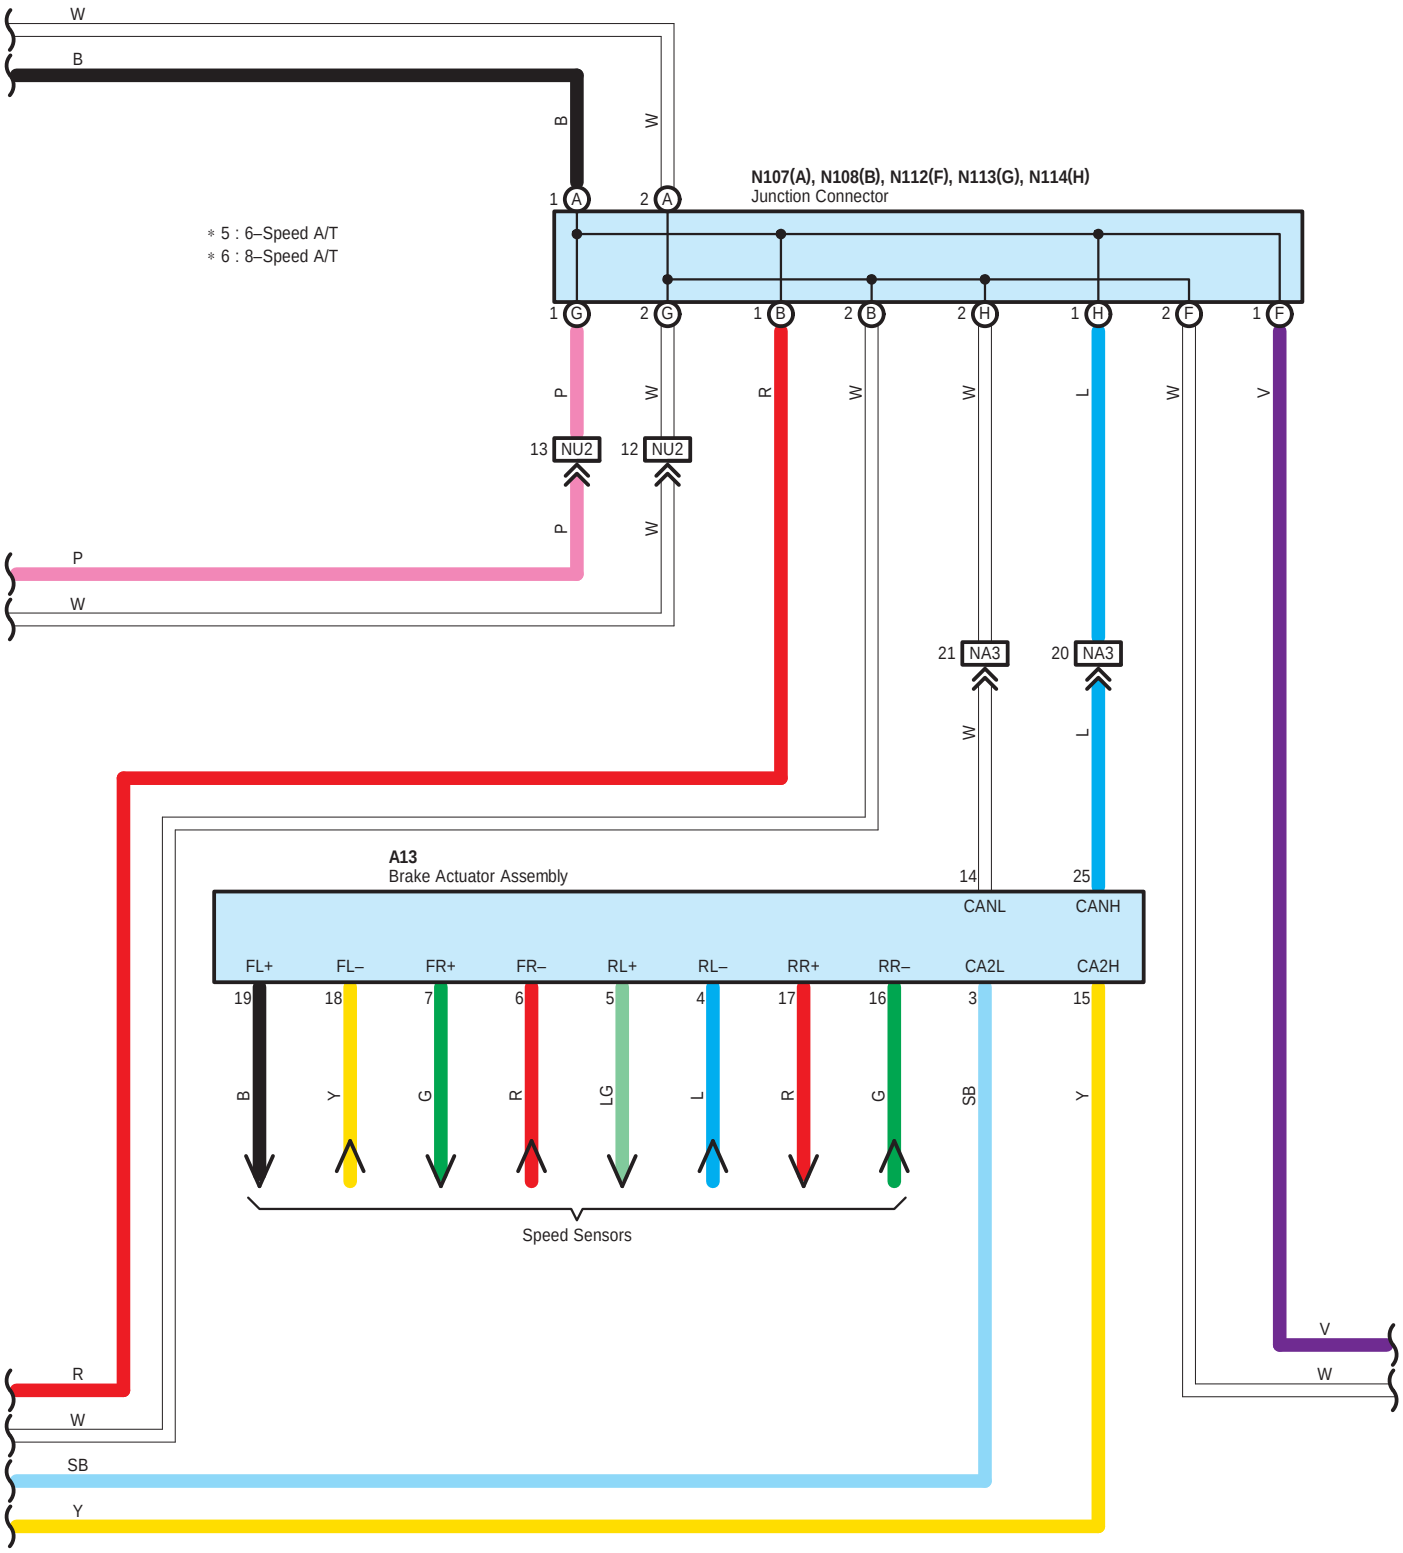
W
B
B
W
N107(A), N108(B), N112(F), N113(G), N114(H)
Junction Connector
1 A
2 A
∗ 5 : 6–Speed A/T
∗ 6 : 8–Speed A/T
1 G
2 G
1 B
2 B
2 H
1 H
2 F
1 F
P
W
R
W
W
L
W
V
13 NU2
12 NU2
P
W
P
W
21 NA3
20 NA3
W
L
A13
Brake Actuator Assembly
14
25
CANL
CANH
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
CA2L
CA2H
19
18
7
6
5
4
17
16
3
15
B
Y
G
R
LG
L
R
G
SB
Y
Speed Sensors
V
W
R
W
SB
Y

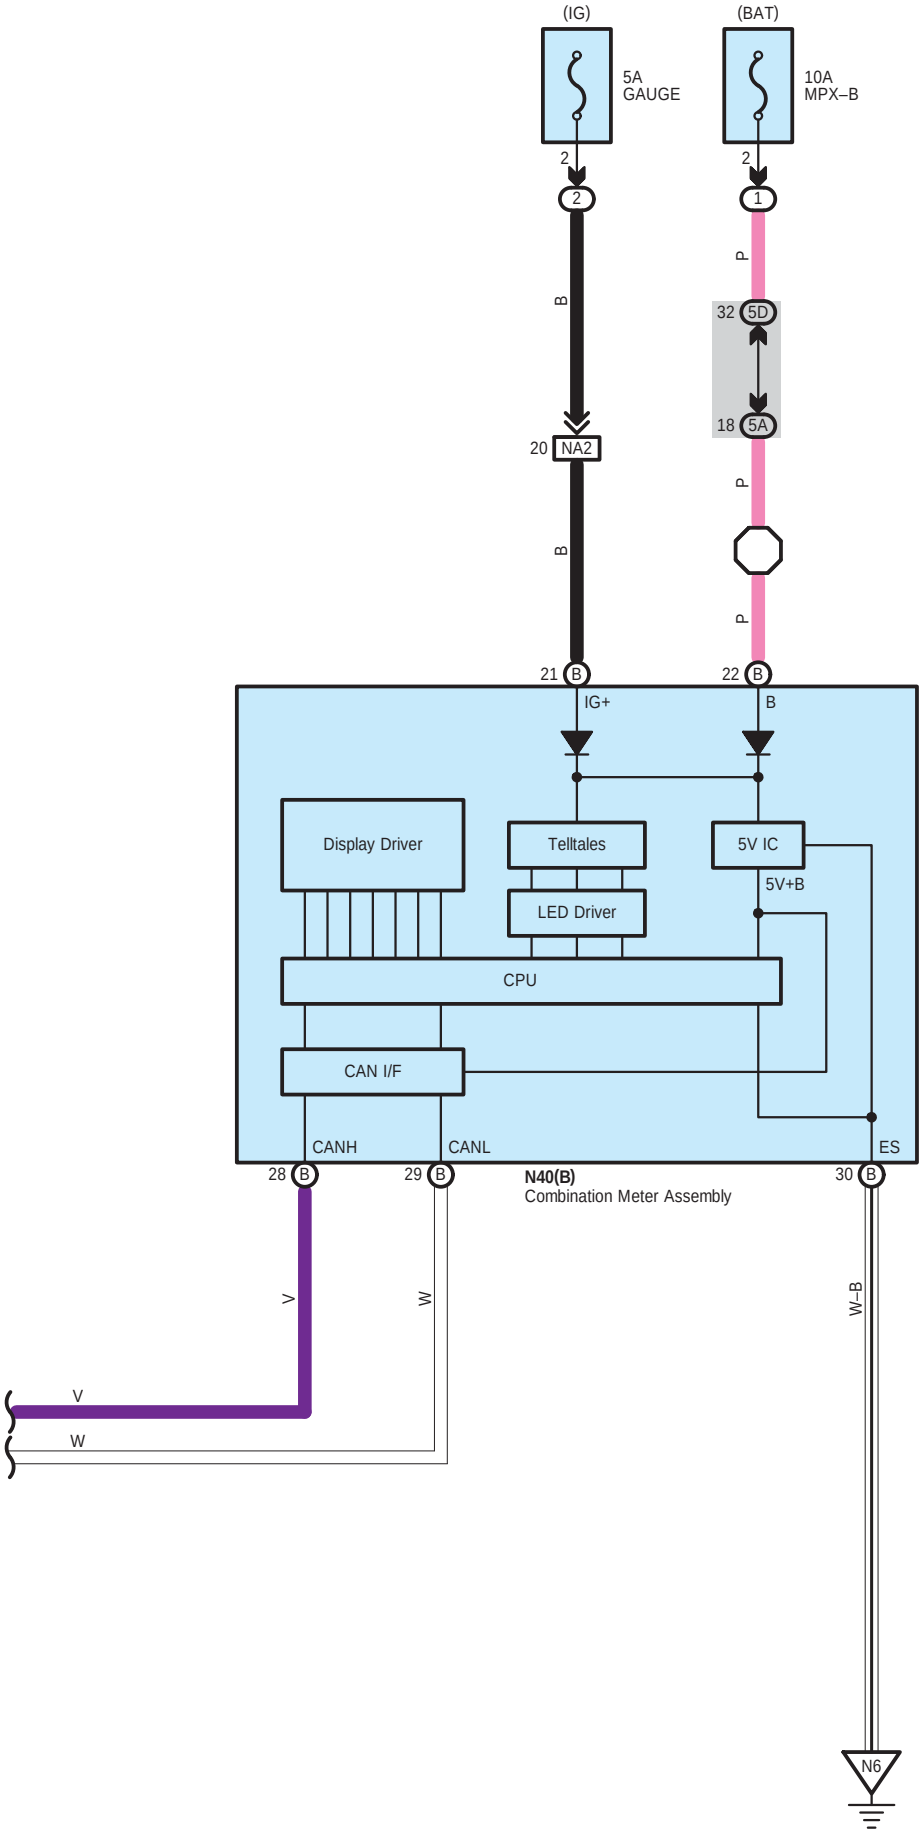
(IG)
(BAT)
5A
GAUGE
10A
MPX–B
2
2
2
1
B
P
32
5D
18
5A
20
NA2
B
P
P
21
B
22
B
IG+
B
Display Driver
Telltales
5V IC
5V+B
LED Driver
CPU
CAN I/F
CANH
CANL
ES
28
B
29
B
30
B
N40(B)
Combination Meter Assembly
V
W
W–B
V
W
N6

A 13
Black

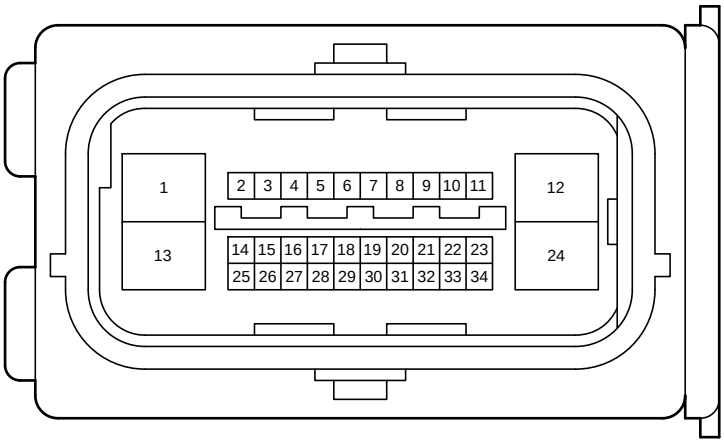

A 19
White

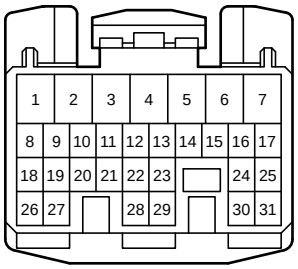

A 21
White

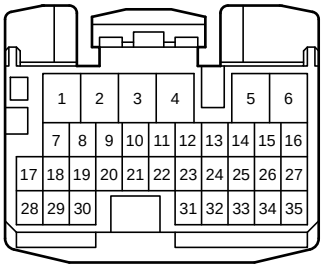

A 29
Black

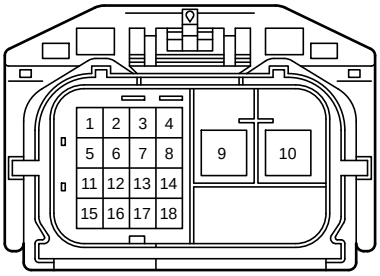

A 31
White

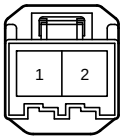

N 5
White

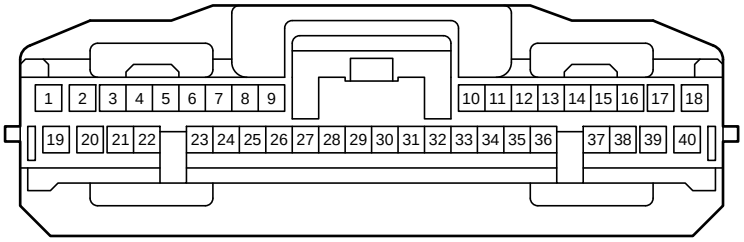

N 31
Black

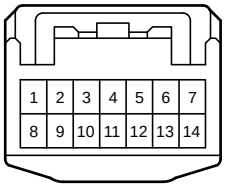

N 33
White

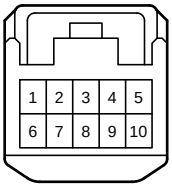

N 38
White

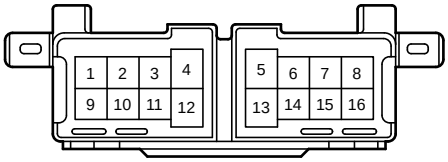

N 40
Black

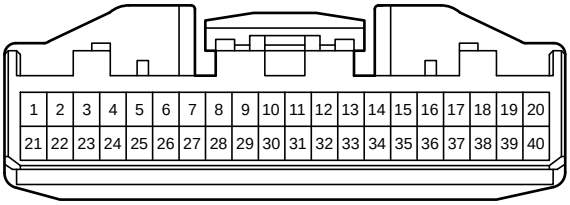

N 59
Black

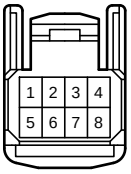

N 82
White

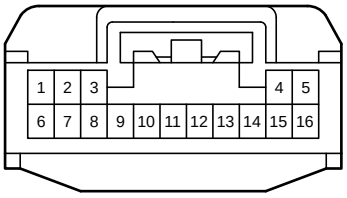

N102
White

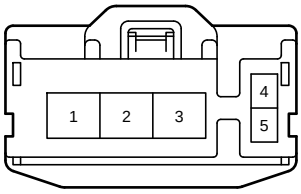

N103
White

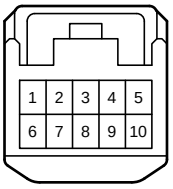

N104
White

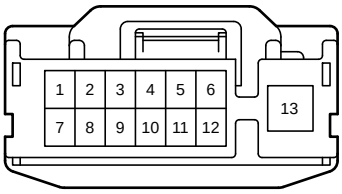

N107
White



N108
White



N112
White



N113
White



N114
White



N115
White



N116
White



N119
White



N121
White



N132
Black

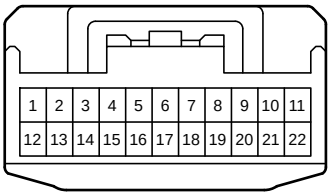

N133
Black

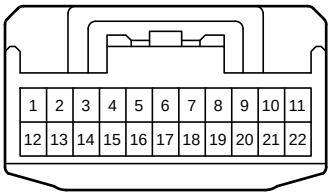

N161
Black



U 42
Black

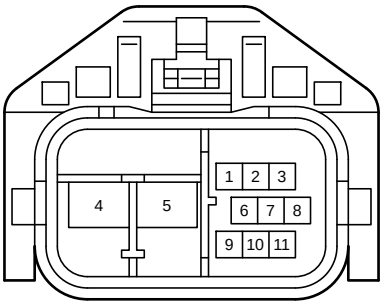

U 50
White



U 51
White



U 54
Blue

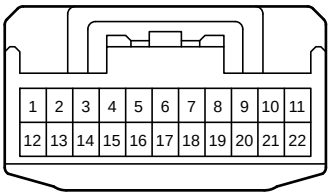

U 58
Black



z 4
Black

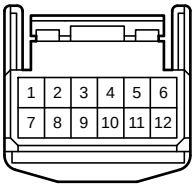

z 11
Black

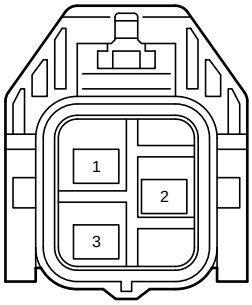

z 12
Black

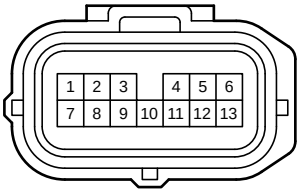

4A
White

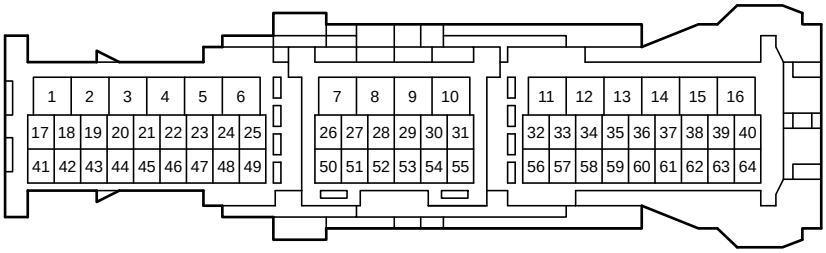

4B
White

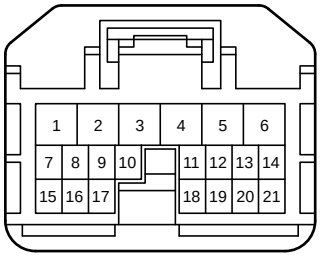

5A
White

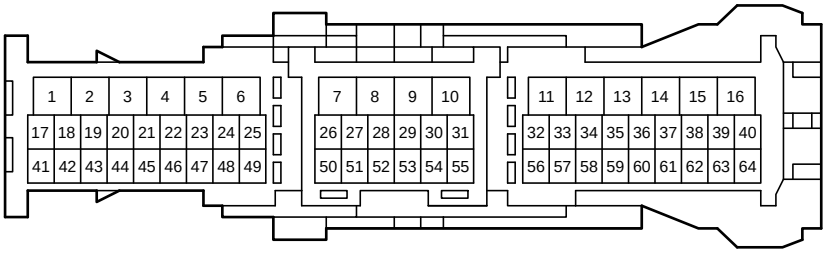

5B
White

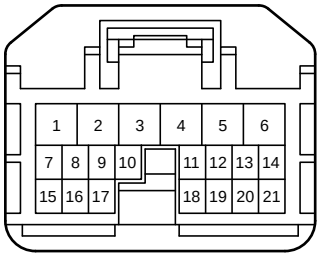

5D
White

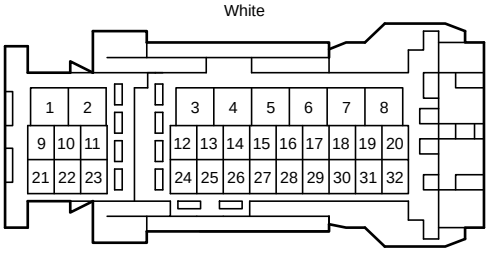

AU1
White

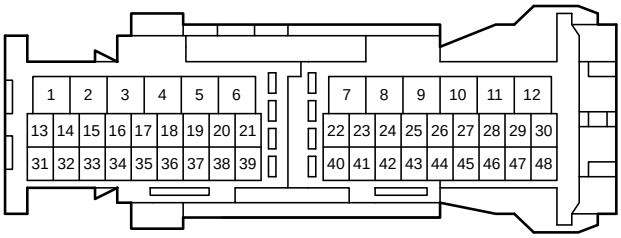

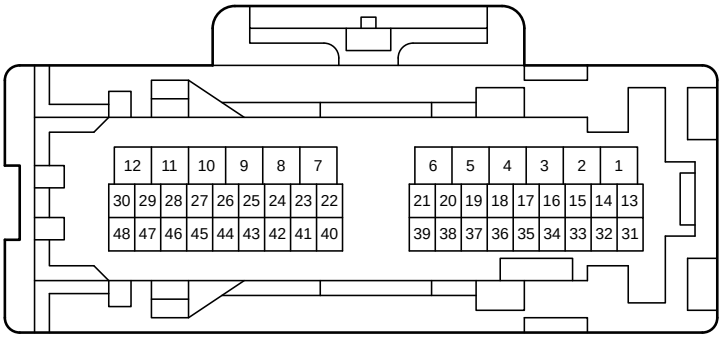

AU3
White

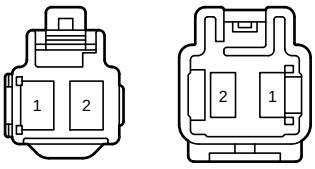

NA1
White

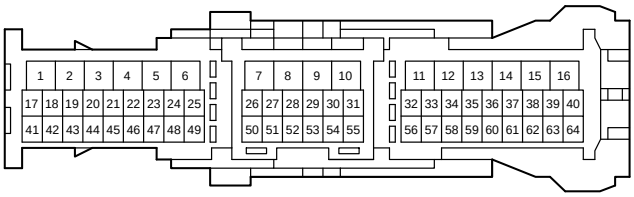

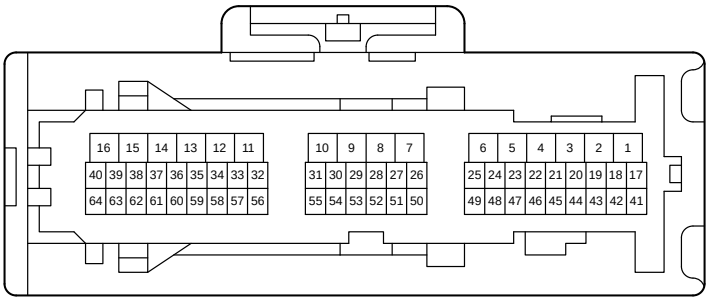

NA2
White

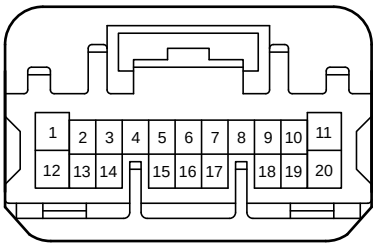

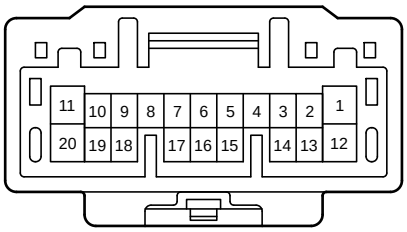

NA3
White

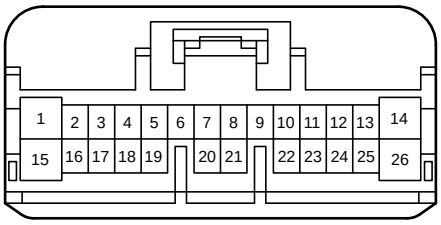

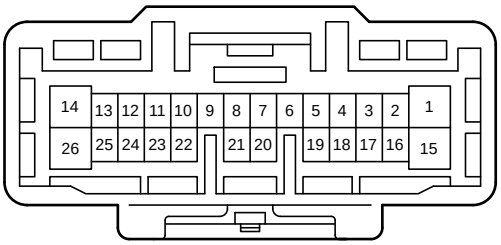

NA4
Gray

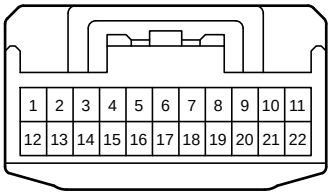

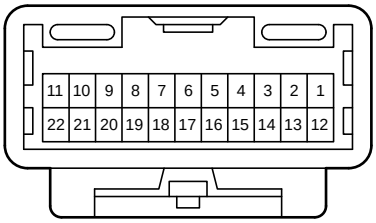

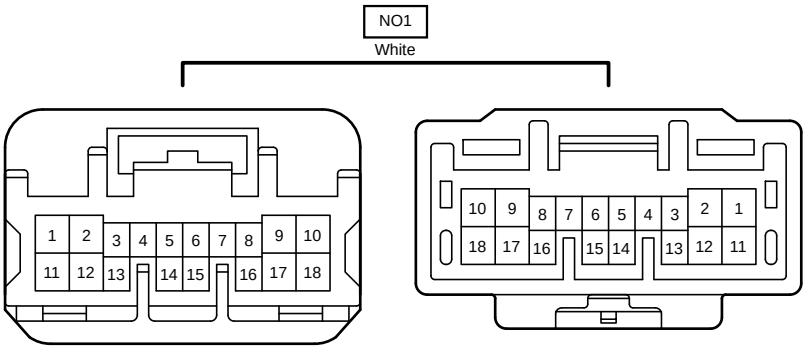
NO1
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11

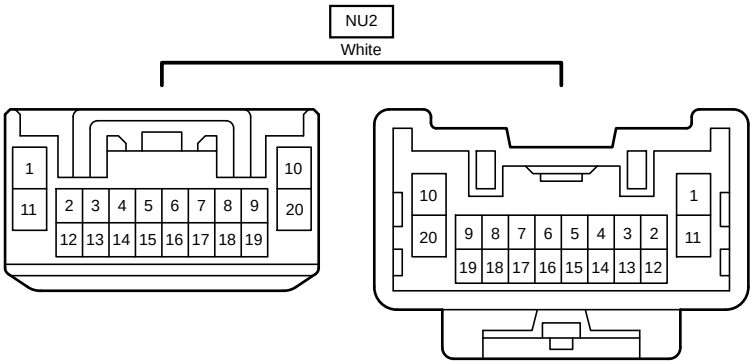
NU2
White
1 10
11 2 3 4 5 6 7 8 9 20
12 13 14 15 16 17 18 19
10 1
20 9 8 7 6 5 4 3 2 11
19 18 17 16 15 14 13 12

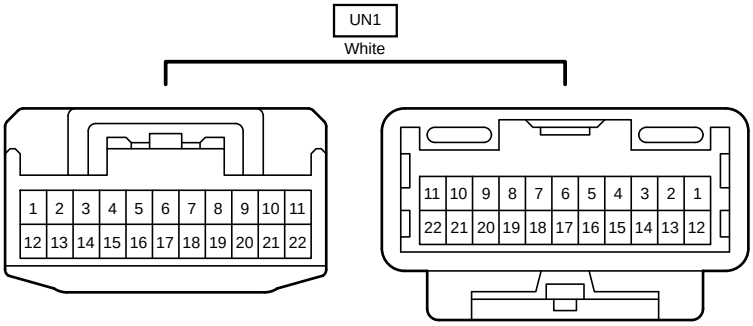
UN1
White
1 2 3 4 5 6 7 8 9 10 11
12 13 14 15 16 17 18 19 20 21 22
11 10 9 8 7 6 5 4 3 2 1
22 21 20 19 18 17 16 15 14 13 12