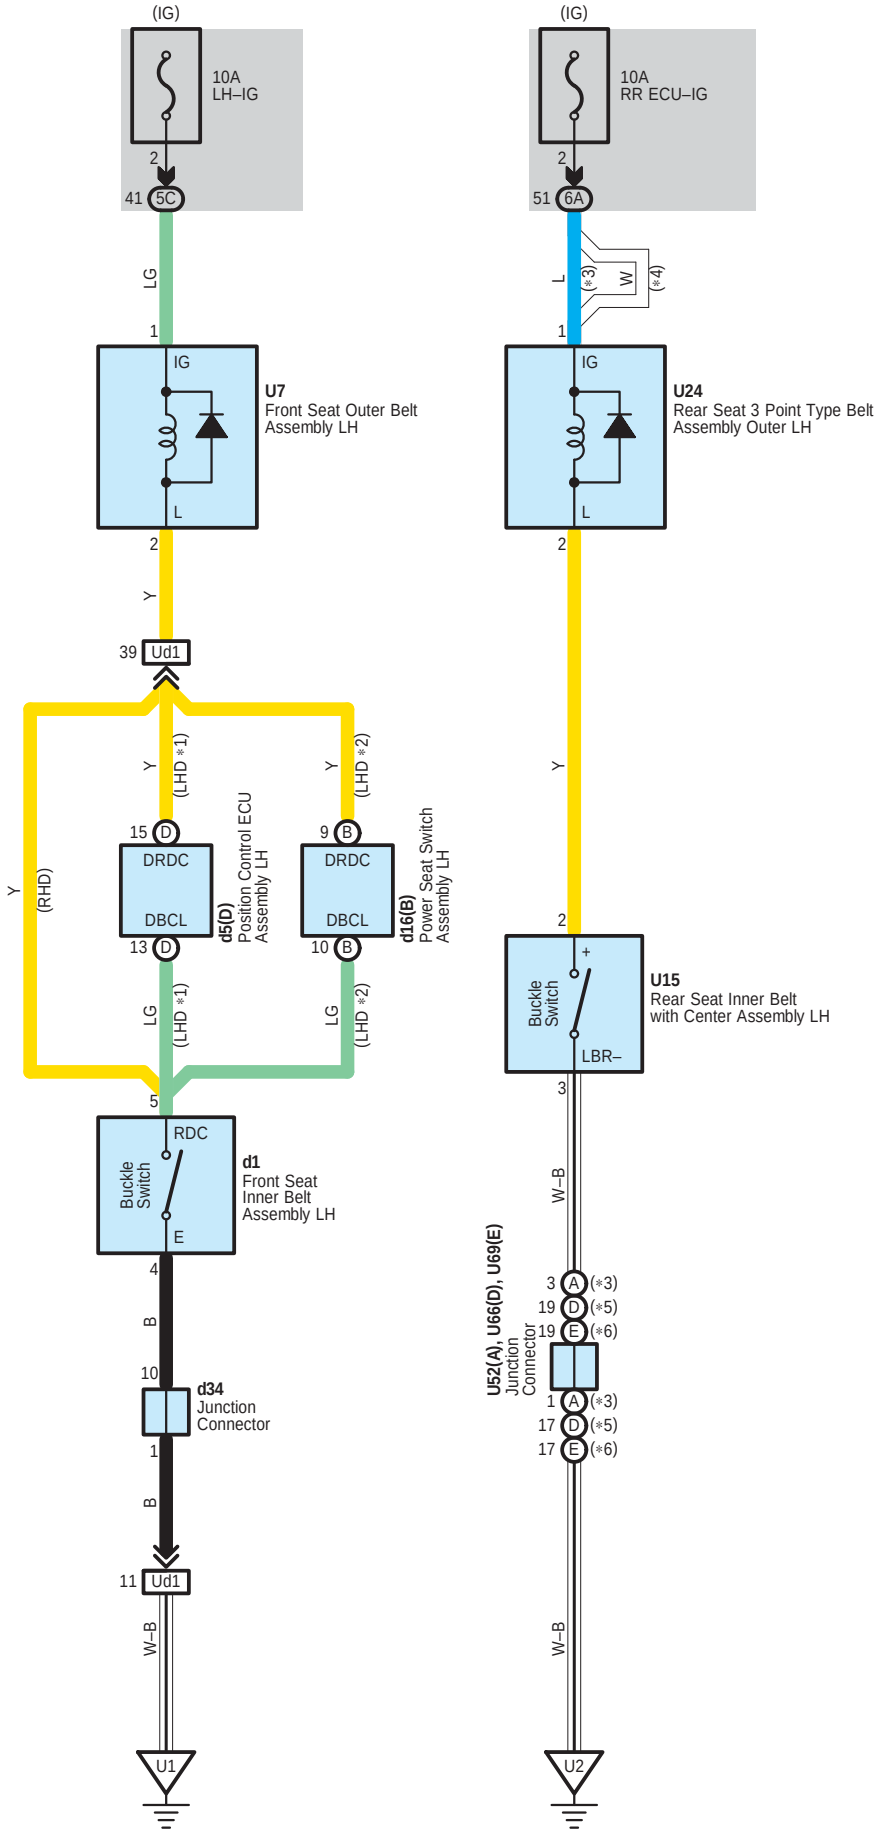
(IG)
10A
LH–IG
2
41 5C
LG
1
IG
U7
Front Seat Outer Belt
Assembly LH
L
2
Y
39 Ud1
Y (LHD *1)
Y (LHD *2)
Y (RHD)
15 D
DRDC
DBCL
13 D
d5(D)
Position Control ECU
Assembly LH
9 B
DRDC
DBCL
10 B
d16(B)
Power Seat Switch
Assembly LH
LG (LHD *1)
LG (LHD *2)
5
RDC
Buckle
Switch
E
d1
Front Seat
Inner Belt
Assembly LH
4
B
10
d34
Junction
Connector
1
B
11 Ud1
W–B
U1
(IG)
10A
RR ECU–IG
2
51 6A
L (*3)
W (*4)
1
IG
U24
Rear Seat 3 Point Type Belt
Assembly Outer LH
L
2
Y
2
+
Buckle
Switch
LBR–
U15
Rear Seat Inner Belt
with Center Assembly LH
3
W–B
U52(A), U66(D), U69(E)
Junction
Connector
3 A (*3)
19 D (*5)
19 E (*6)
1 A (*3)
17 D (*5)
17 E (*6)
W–B
U2

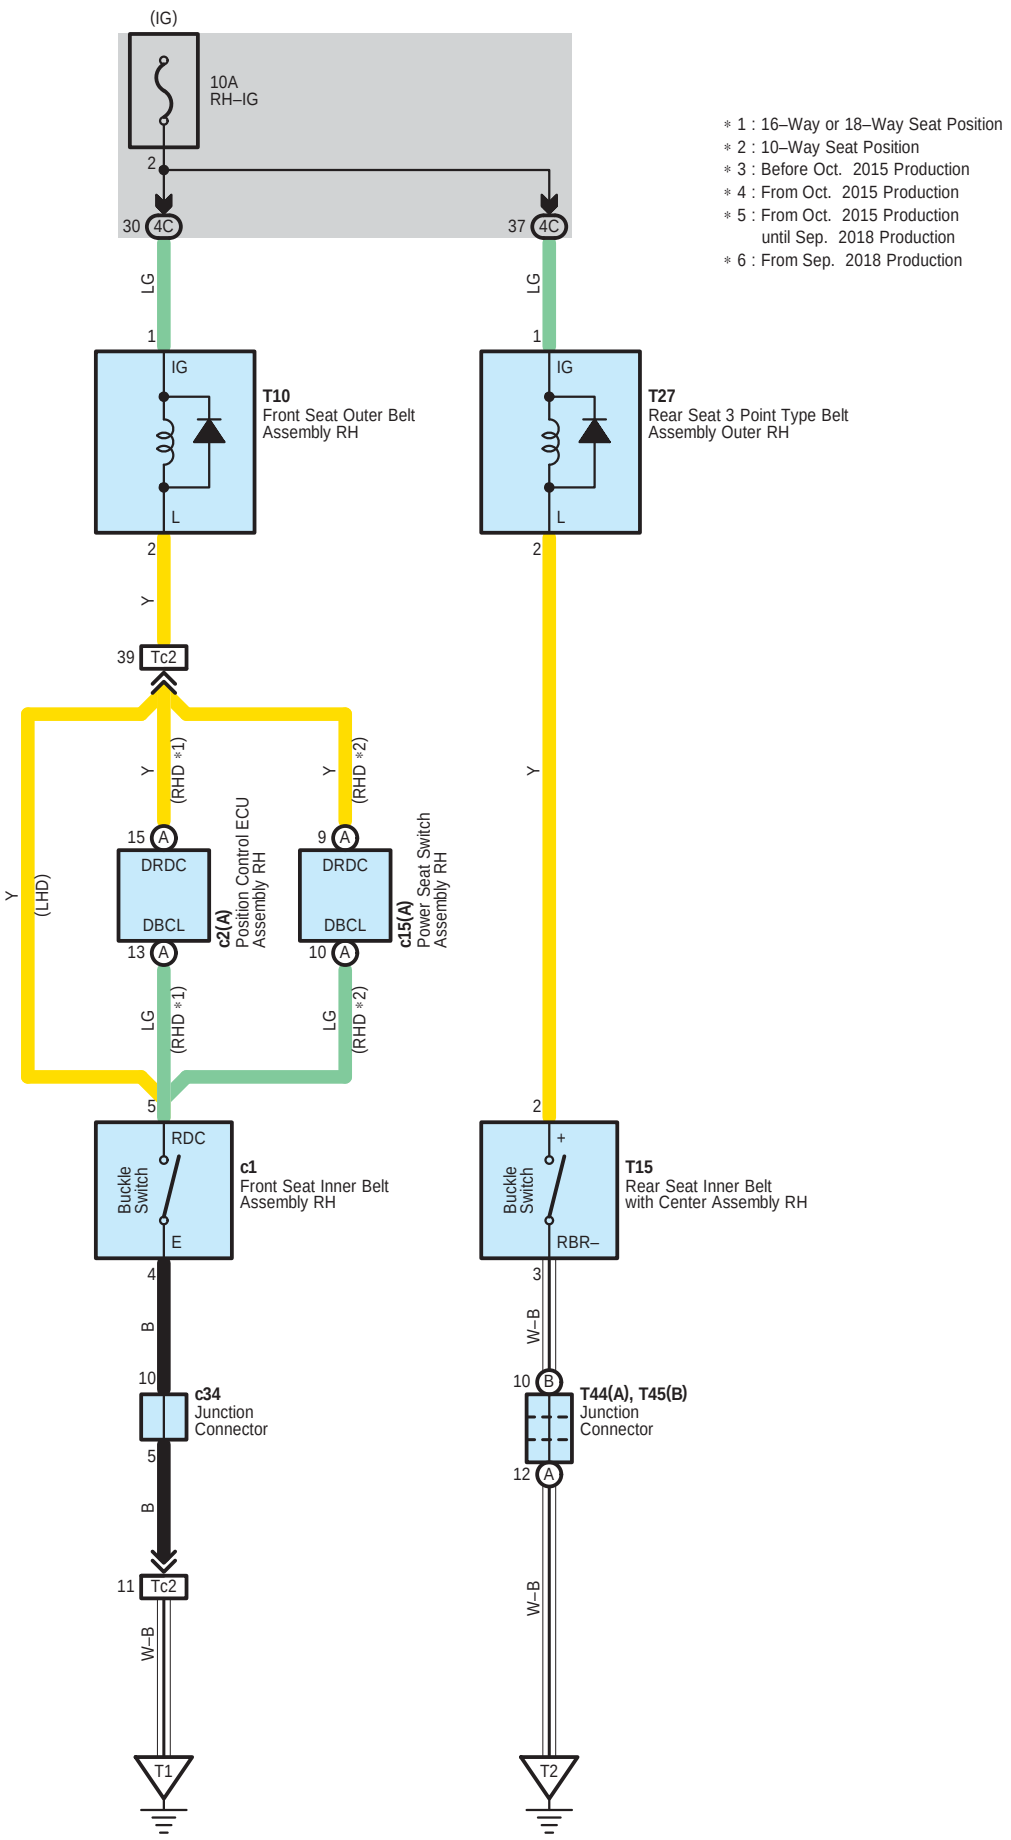
(IG)
10A
RH–IG
2
30 4C
37 4C
LG
1
IG
L
T10
Front Seat Outer Belt
Assembly RH
T27
Rear Seat 3 Point Type Belt
Assembly Outer RH
Y
39 Tc2
(RHD ∗1)
(RHD ∗2)
(LHD)
15 A
9 A
DRDC
DBCL
13 A
10 A
c2(A)
Position Control ECU
Assembly RH
c15(A)
Power Seat Switch
Assembly RH
5
RDC
E
Buckle
Switch
c1
Front Seat Inner Belt
Assembly RH
+
RBR–
T15
Rear Seat Inner Belt
with Center Assembly RH
4
B
10
c34
Junction
Connector
3
W–B
10 B
T44(A), T45(B)
Junction
Connector
12 A
11 Tc2
T1
T2
∗ 1 : 16–Way or 18–Way Seat Position
∗ 2 : 10–Way Seat Position
∗ 3 : Before Oct. 2015 Production
∗ 4 : From Oct. 2015 Production
∗ 5 : From Oct. 2015 Production
until Sep. 2018 Production
∗ 6 : From Sep. 2018 Production

T 10
White



T 15
White

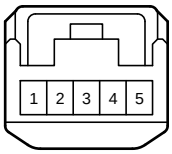

T 27
White



T 44
Blue

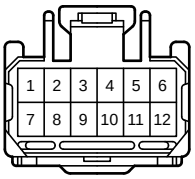

T 45
Blue

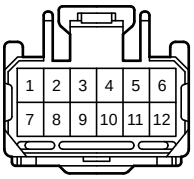

U 7
White



U 15
White

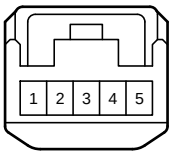

U 24
White



U 52
Blue

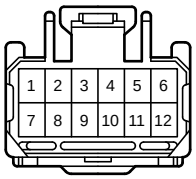

U 66
Gray

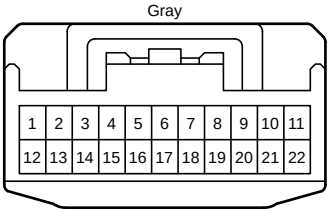

U 69
Black

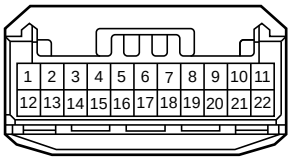

c 1
White

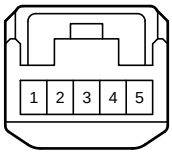

c 2
White

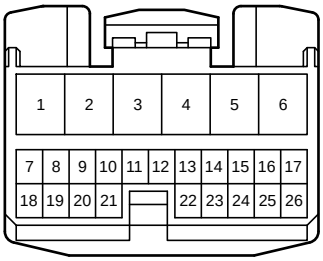

c 15
Black

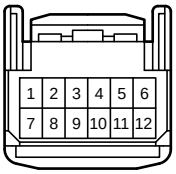

c 34
Black

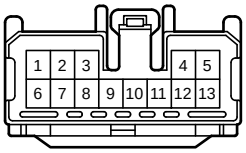

d 1
White

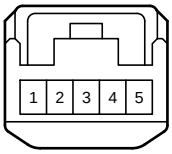

d 5
White

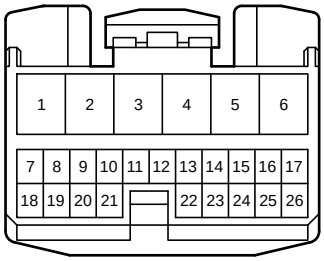

d 16
Black

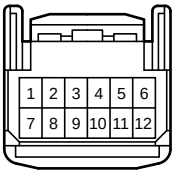

d 34
Black

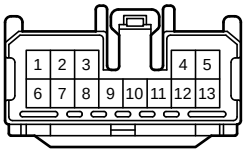

4C
White

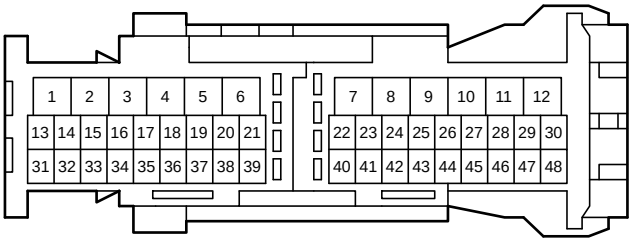

5C
White

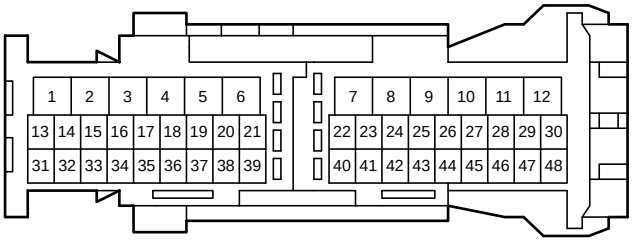

6A
White

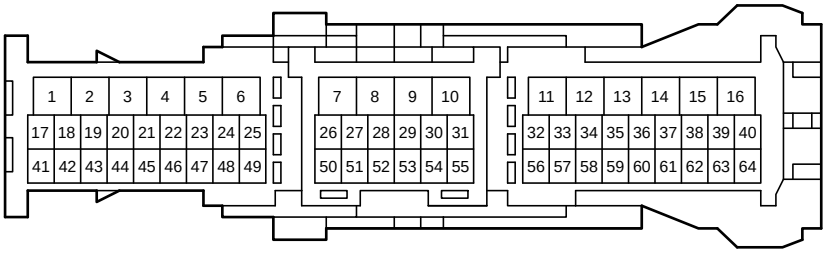

Tc2
White

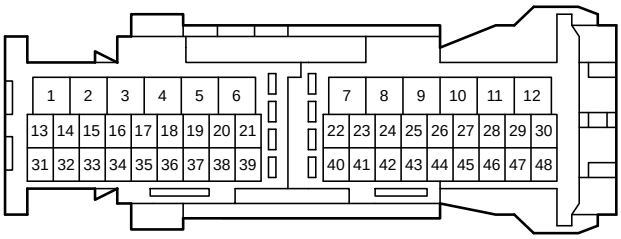

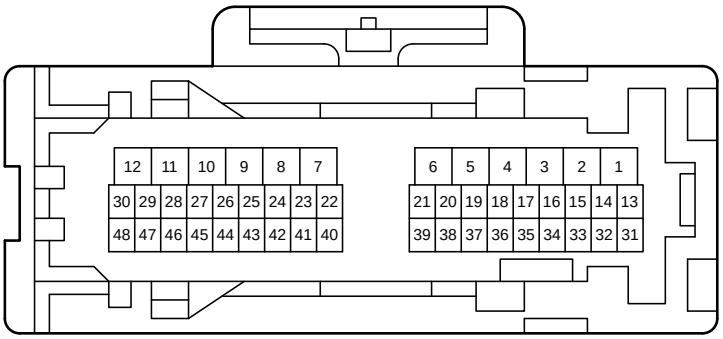
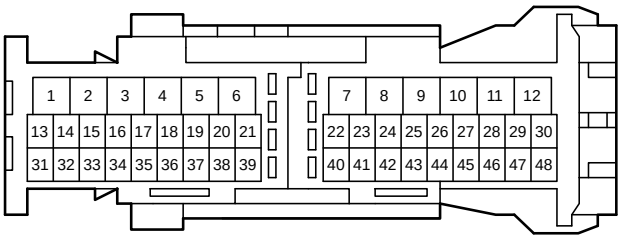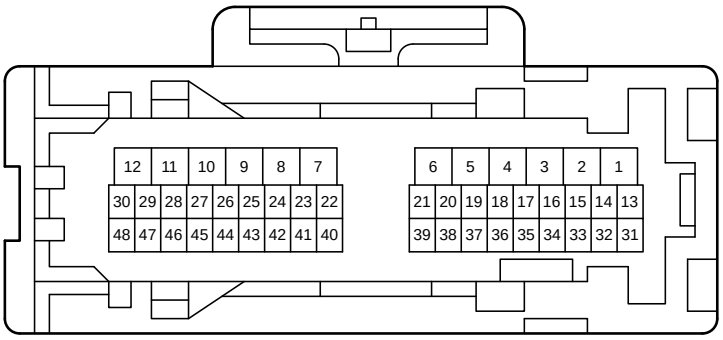
Ud1
White