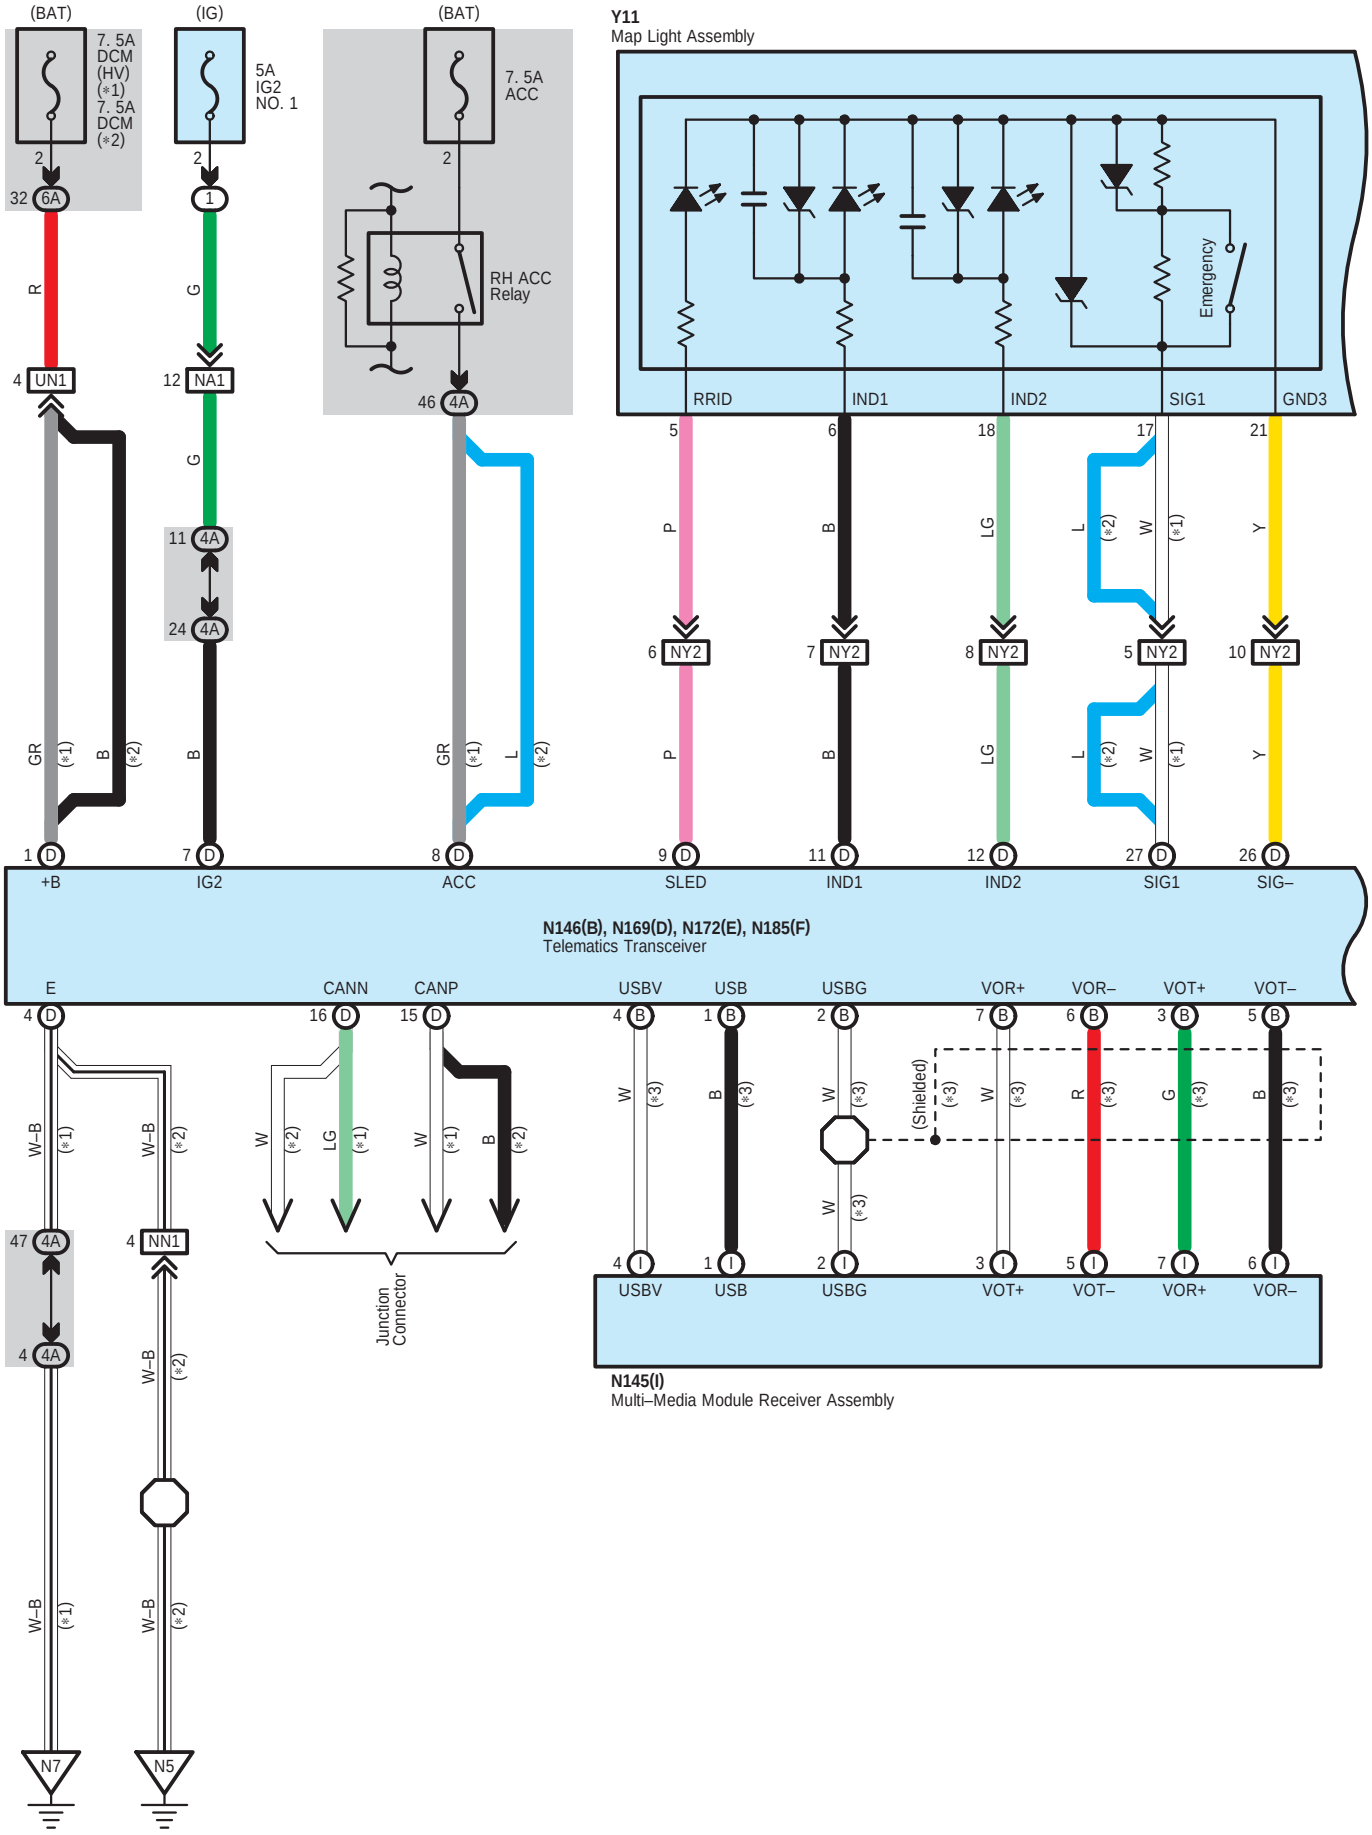
(BAT)
7. 5A DCM (HV) (*1)
7. 5A DCM (*2)
(IG)
5A IG2 NO. 1
(BAT)
7. 5A ACC
RH ACC Relay
Y11
Map Light Assembly
Emergency
RRID
IND1
IND2
SIG1
GND3
UN1
NA1
NY2
+B
IG2
ACC
SLED
IND1
IND2
SIG1
SIG–
N146(B), N169(D), N172(E), N185(F)
Telematics Transceiver
E
CANN
CANP
USBV
USB
USBG
VOR+
VOR–
VOT+
VOT–
(Shielded)
Junction Connector
NN1
N7
N5
N145(I)
Multi–Media Module Receiver Assembly

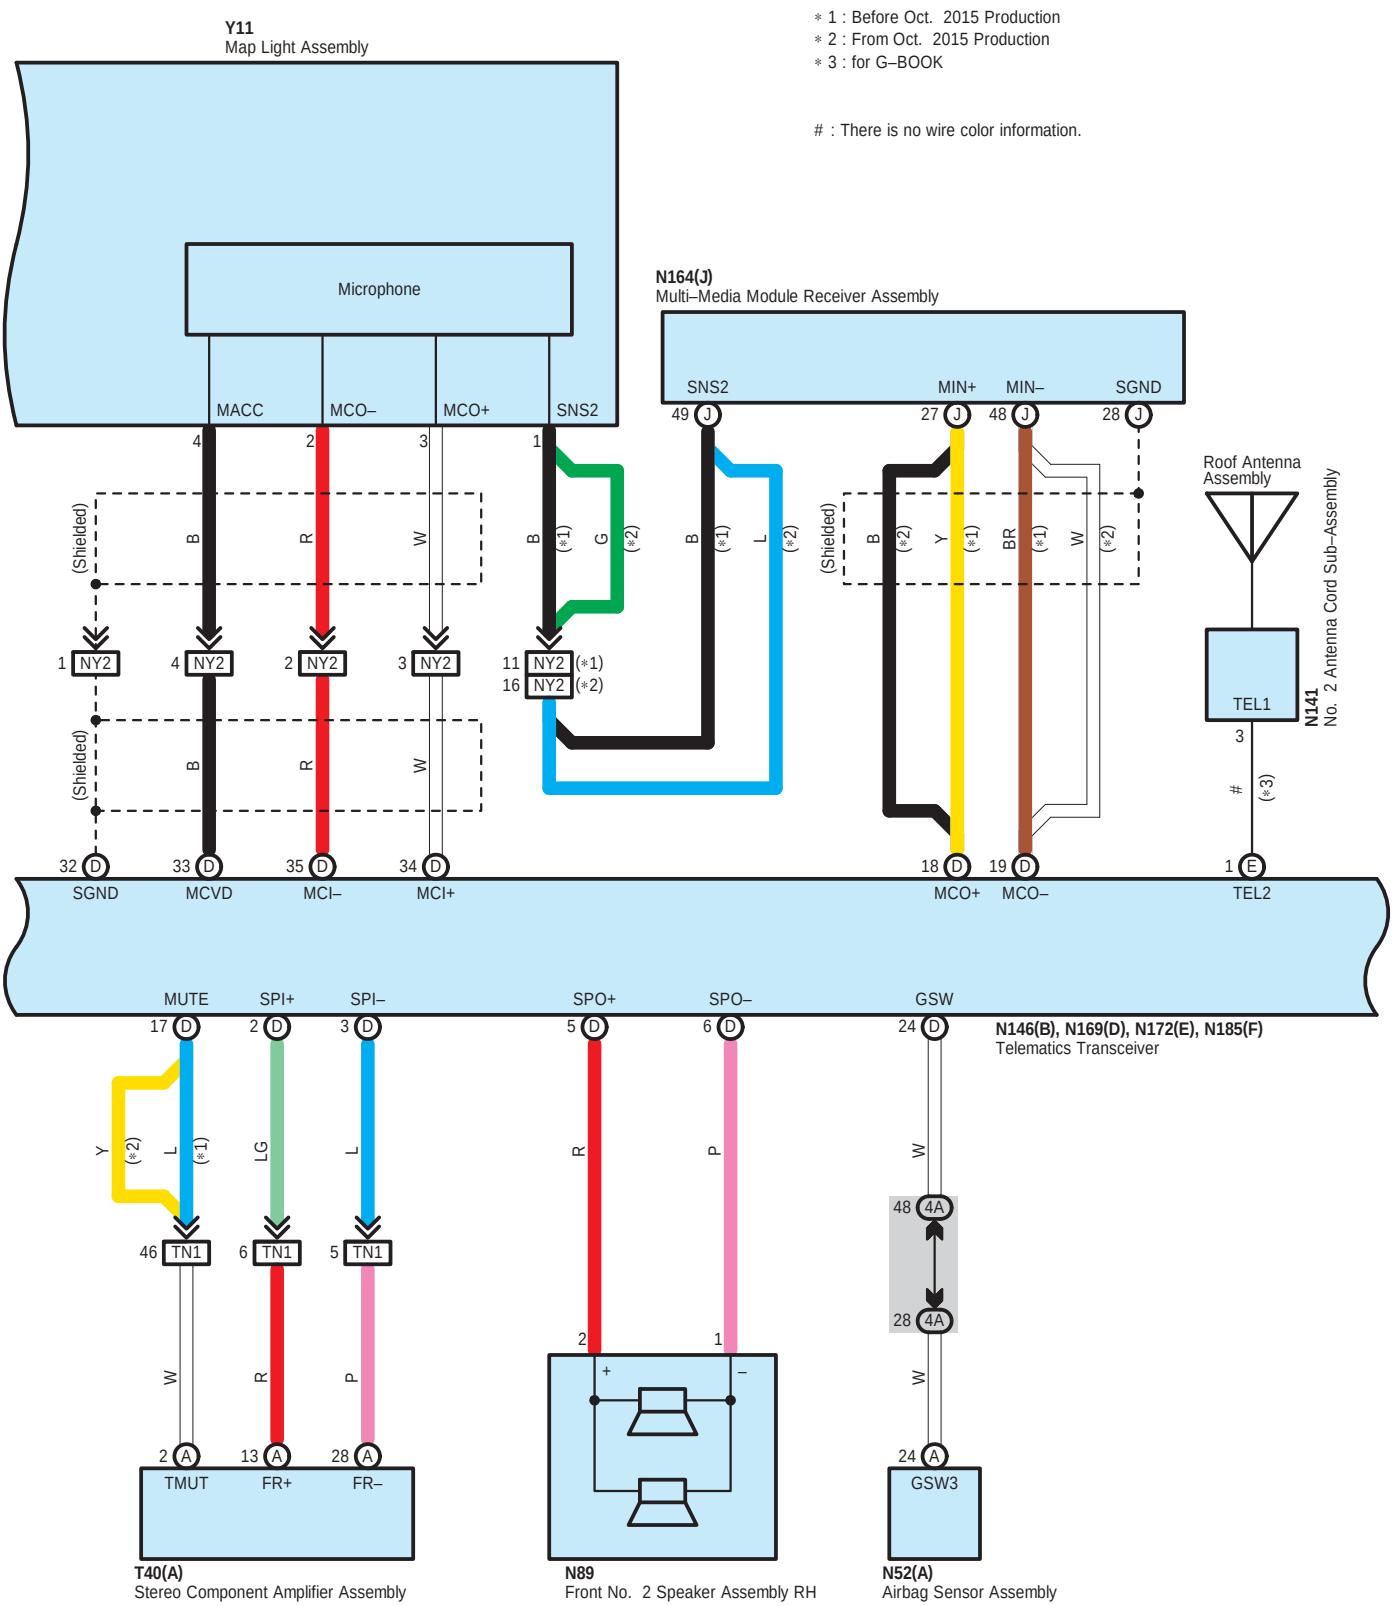
∗ 1 : Before Oct. 2015 Production
∗ 2 : From Oct. 2015 Production
∗ 3 : for G–BOOK
: There is no wire color information.
Y11
Map Light Assembly
Microphone
MACC
MCO–
MCO+
SNS2
N164(J)
Multi–Media Module Receiver Assembly
SNS2
MIN+
MIN–
SGND
Roof Antenna Assembly
TEL1
N141
No. 2 Antenna Cord Sub–Assembly
(Shielded)
NY2
SGND
MCVD
MCI–
MCI+
MCO+
MCO–
TEL2
MUTE
SPI+
SPI–
SPO+
SPO–
GSW
N146(B), N169(D), N172(E), N185(F)
Telematics Transceiver
TN1
TMUT
FR+
FR–
GSW3
T40(A)
Stereo Component Amplifier Assembly
N89
Front No. 2 Speaker Assembly RH
N52(A)
Airbag Sensor Assembly

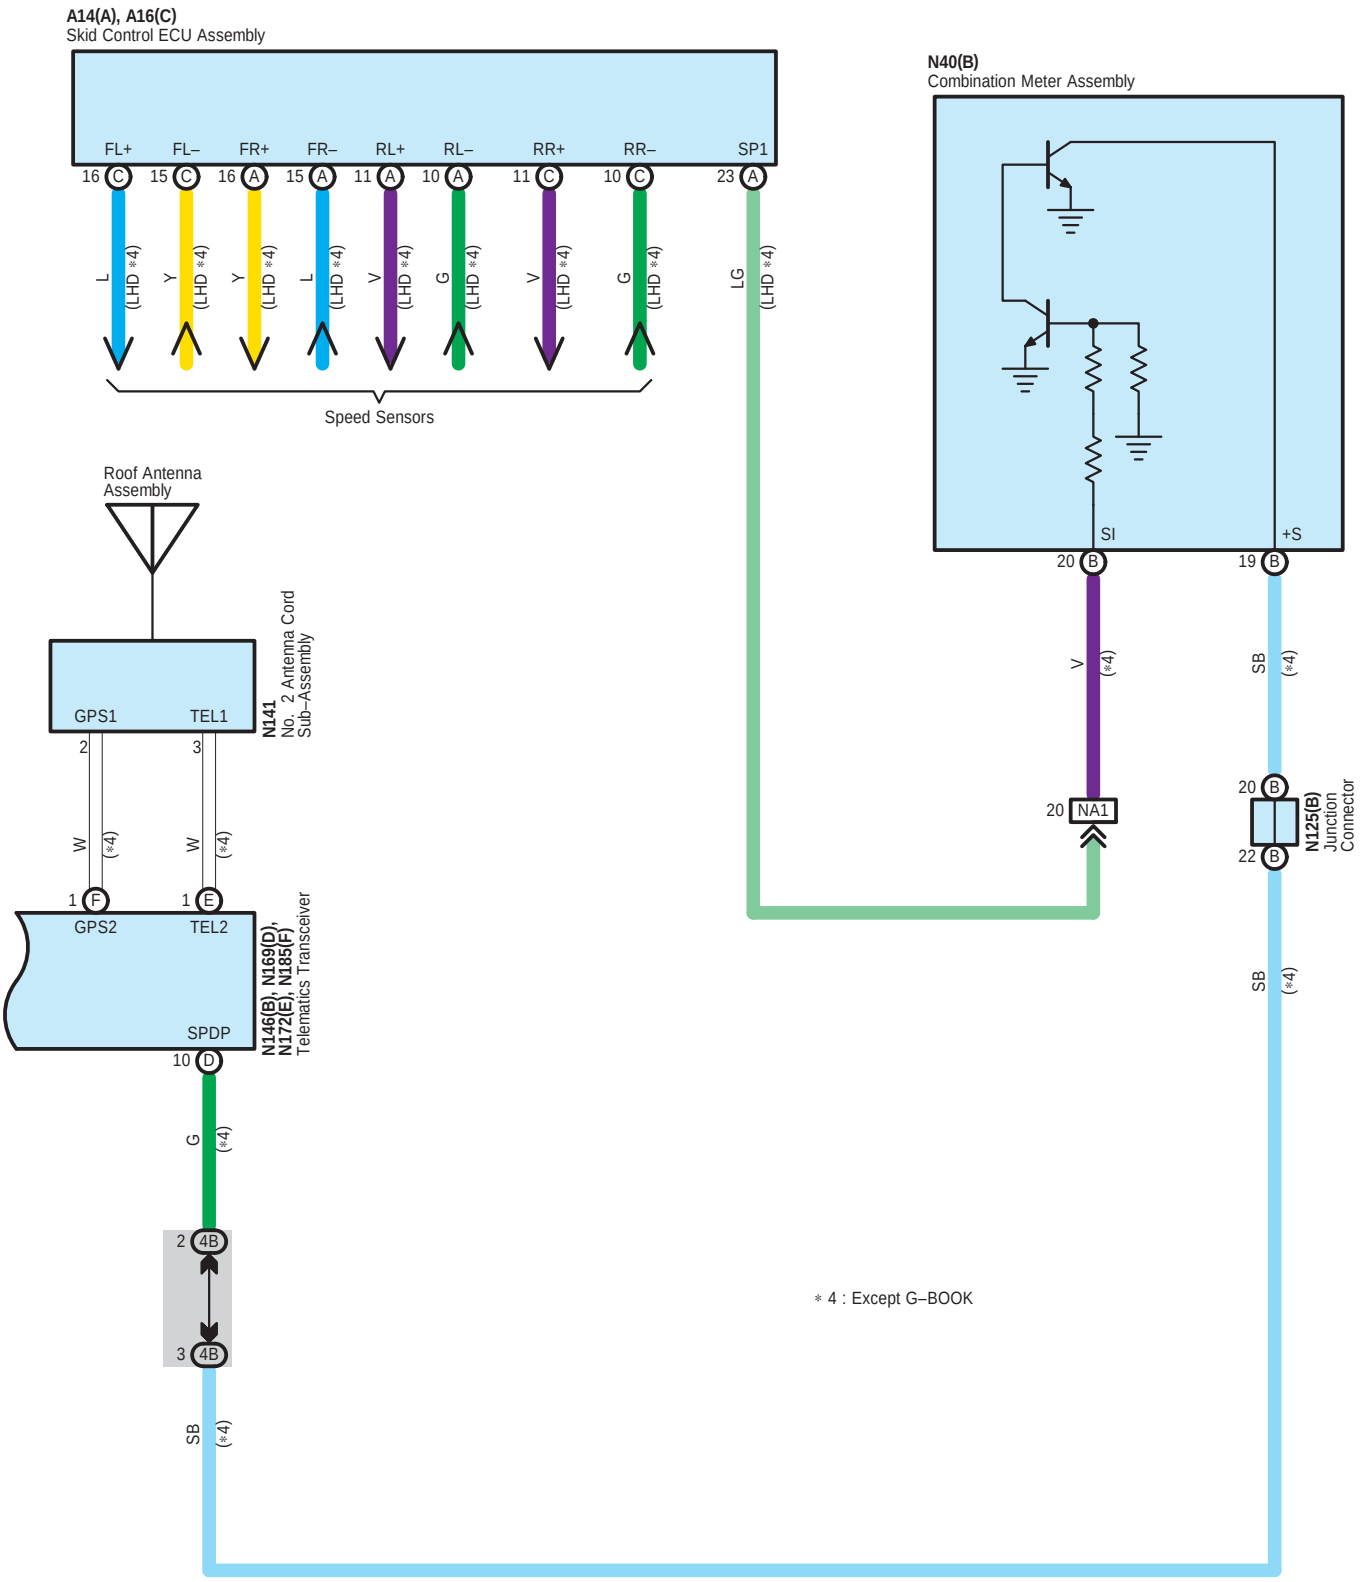
A14(A), A16(C)
Skid Control ECU Assembly
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
SP1
16 C
15 C
16 A
15 A
11 A
10 A
11 C
10 C
23 A
L (LHD *4)
Y (LHD *4)
Y (LHD *4)
L (LHD *4)
V (LHD *4)
G (LHD *4)
V (LHD *4)
G (LHD *4)
LG (LHD *4)
Speed Sensors
N40(B)
Combination Meter Assembly
SI
+S
20 B
19 B
V (*4)
SB (*4)
20 NA1
20 B
22 B
N125(B)
Junction Connector
SB (*4)
Roof Antenna Assembly
GPS1
TEL1
2
3
N141
No. 2 Antenna Cord Sub–Assembly
W (*4)
W (*4)
1 F
1 E
GPS2
TEL2
SPDP
10 D
N146(B), N169(D), N172(E), N185(F)
Telematics Transceiver
G (*4)
2 4B
3 4B
SB (*4)
* 4 : Except G–BOOK

A 14
Black

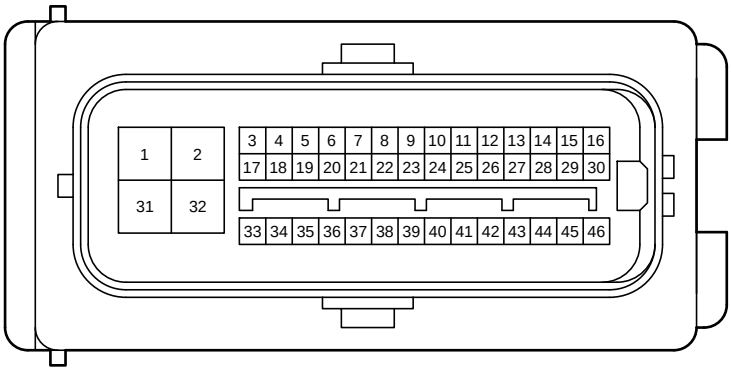

A 16
Gray

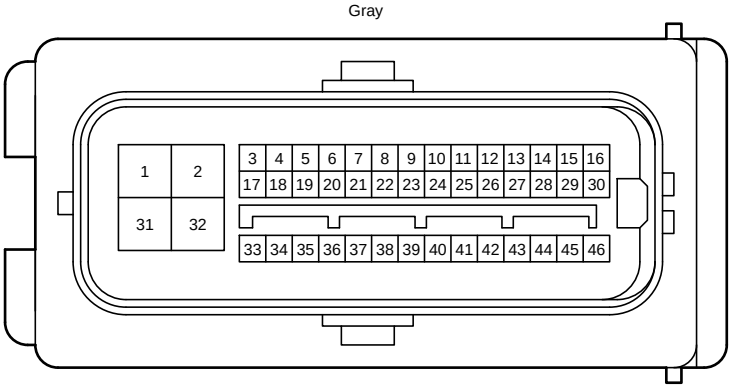

N 40
Black

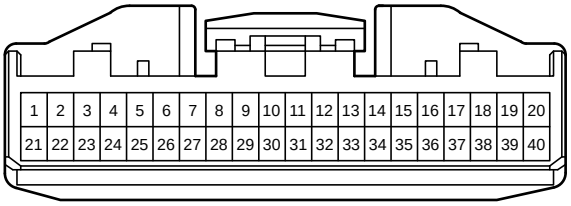

N 52
Yellow

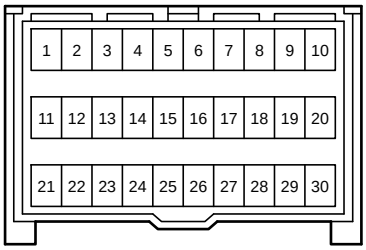

N 89
Black

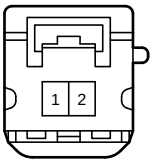

N125
Blue

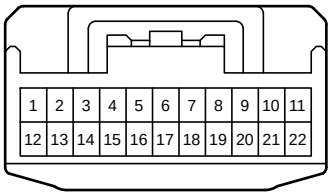

N141
Blue

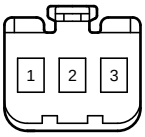

N145
White

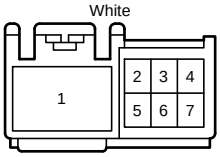

N146
White

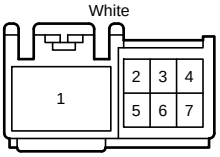

N164
White

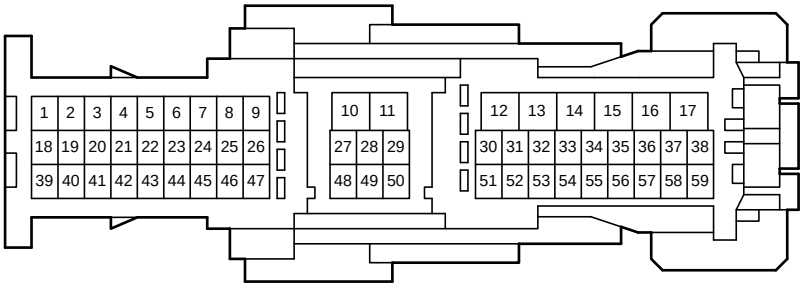

N169
White

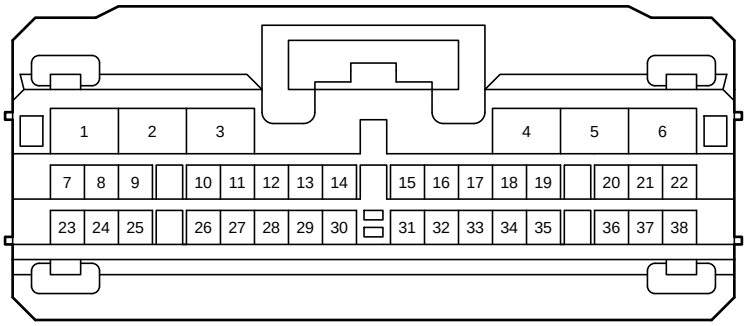

N172
Blue



N185
Gray



T 40
White

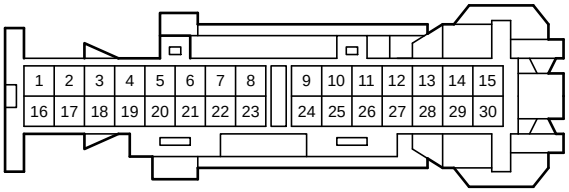

Y 11
White

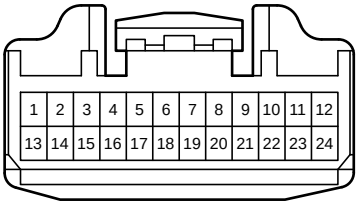

4A
White

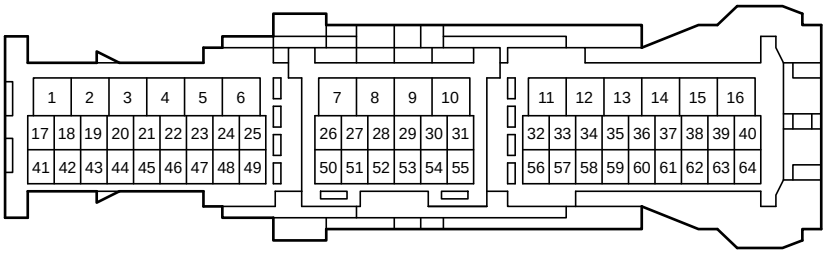

4B
White

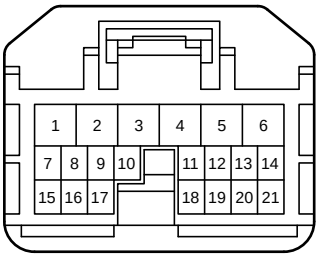

6A
White

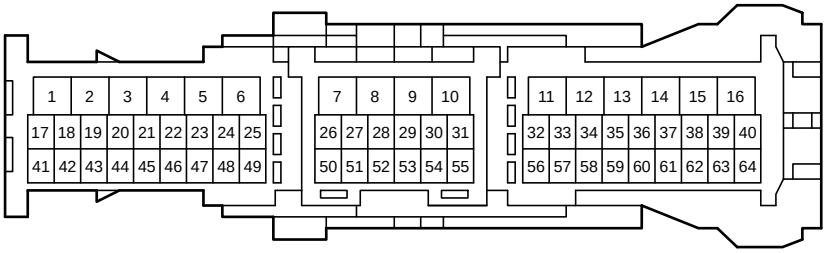

NA1
White

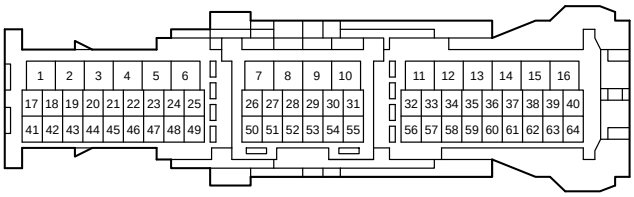

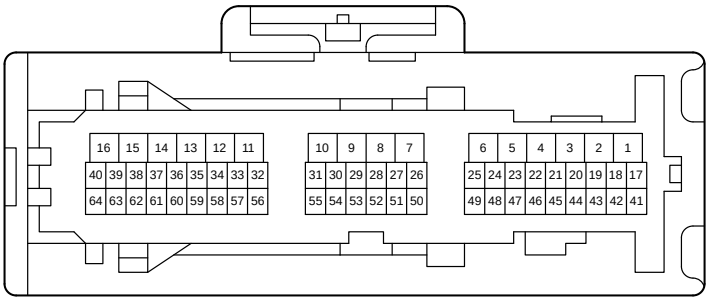

NN1
White

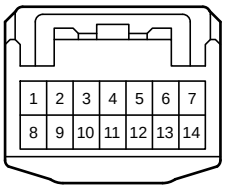

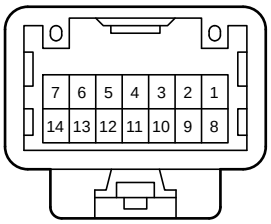

NY2
White

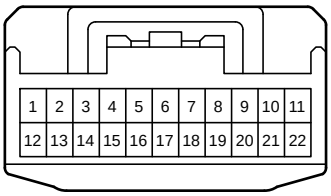

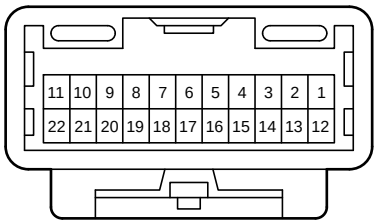

TN1
White

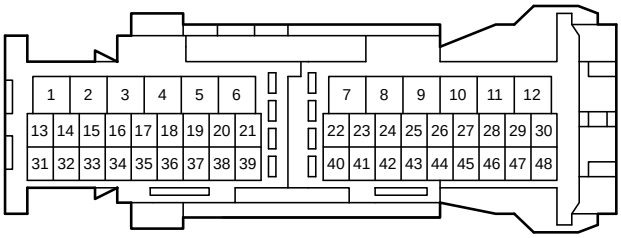

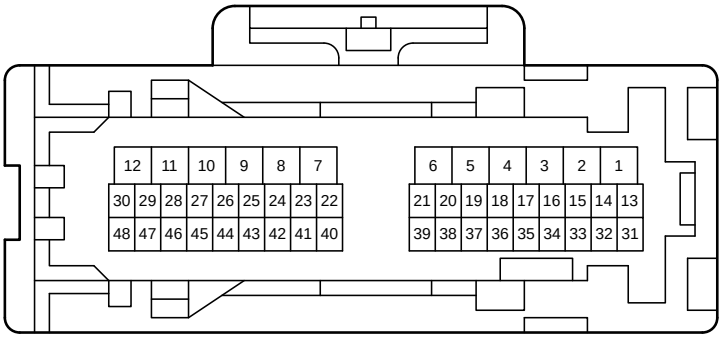
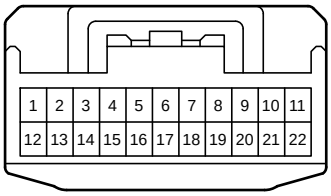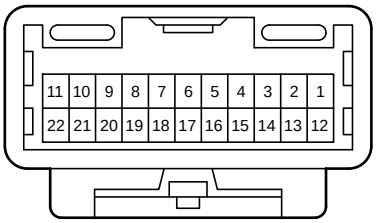
UN1
White