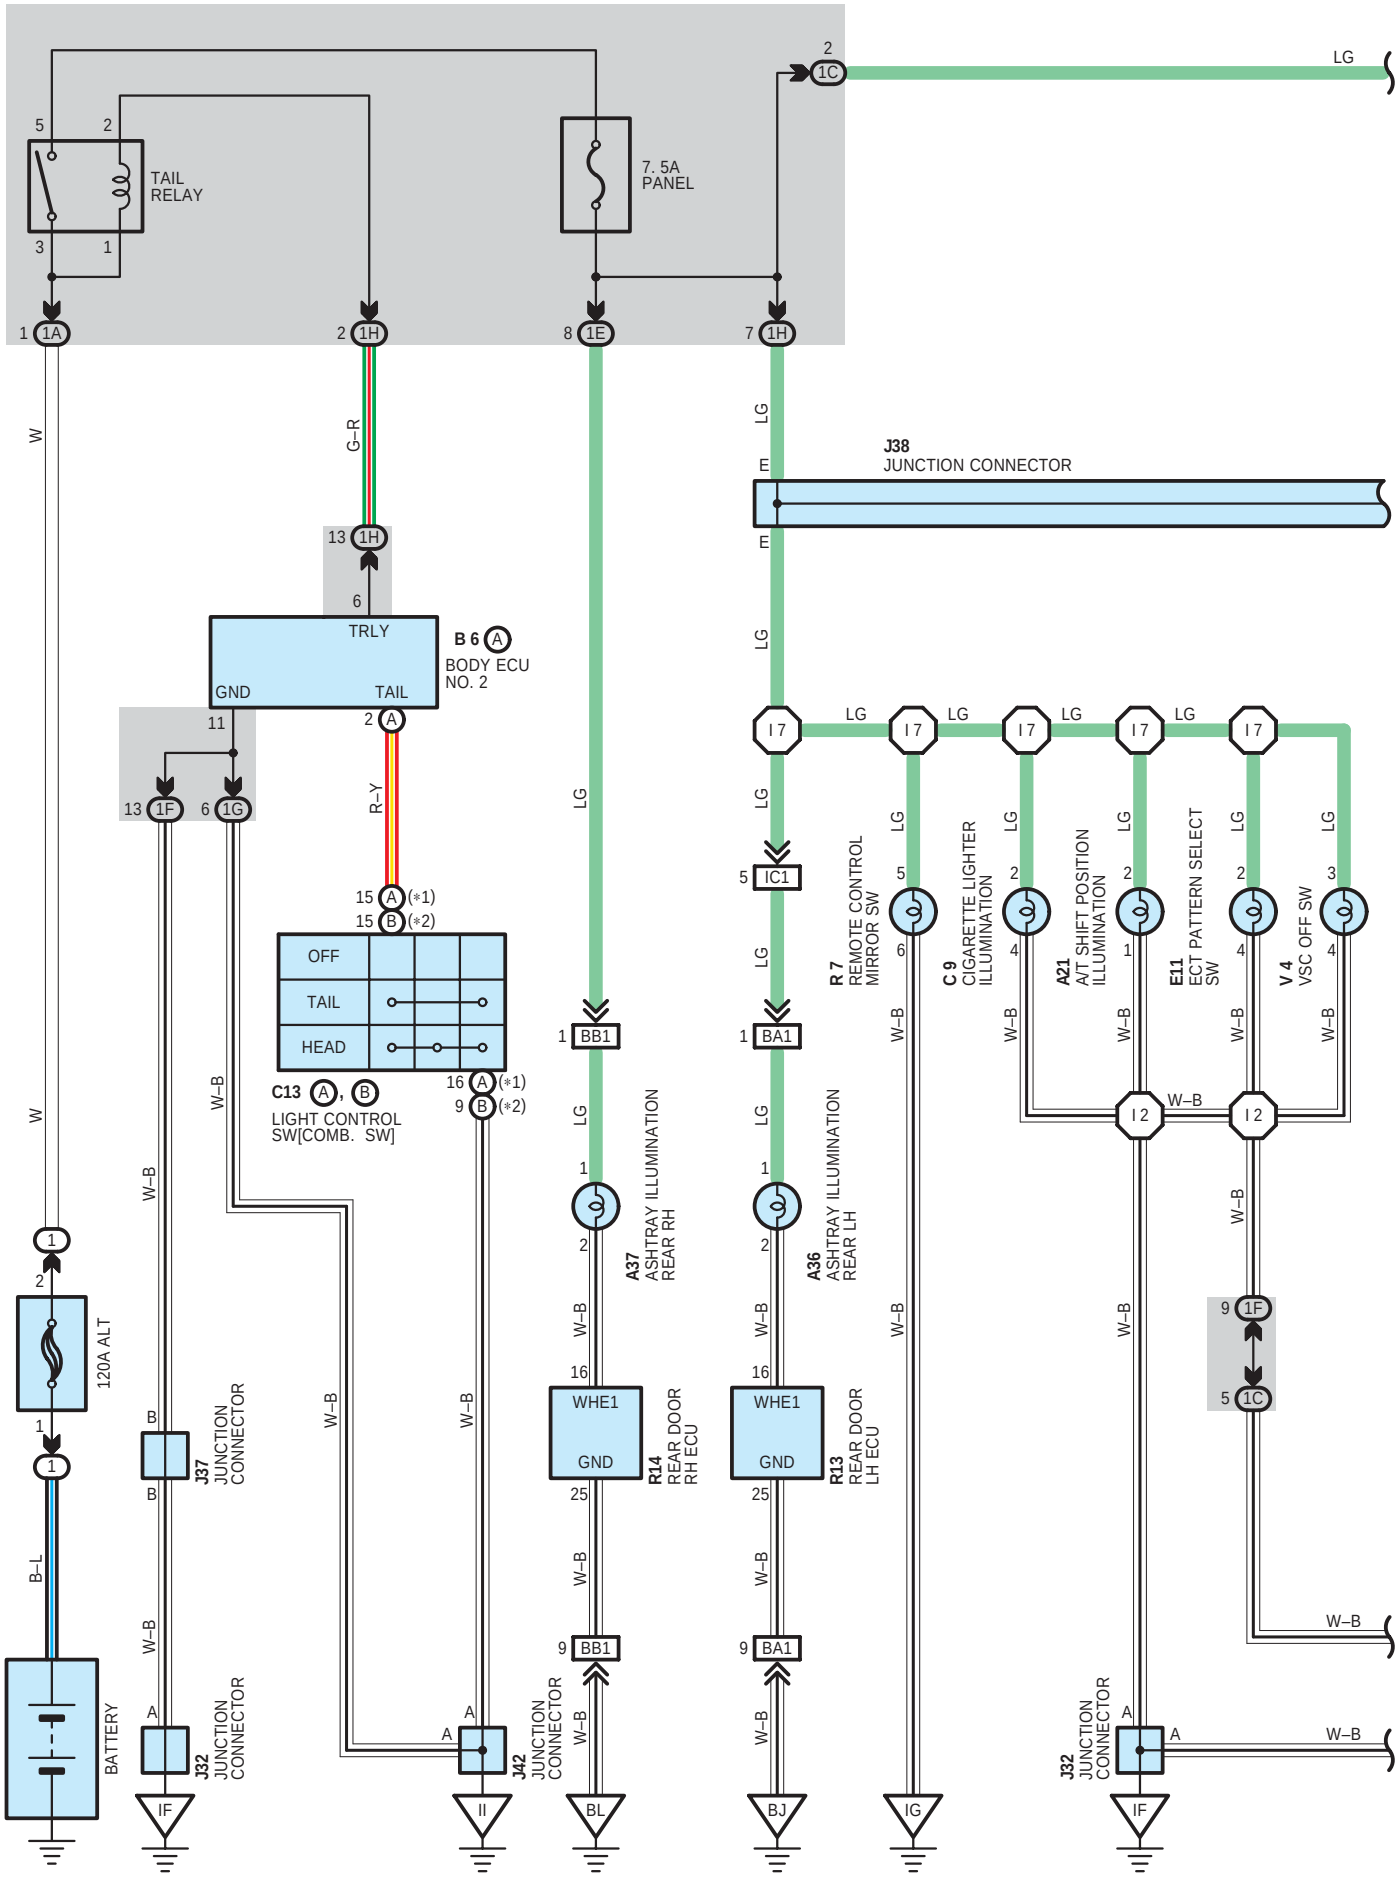
TAIL RELAY
7. 5A PANEL
J38 JUNCTION CONNECTOR
B 6 BODY ECU NO. 2
TRLY
GND
TAIL
C13 LIGHT CONTROL SW[COMB. SW]
OFF
TAIL
HEAD
120A ALT
BATTERY
J37 JUNCTION CONNECTOR
J32 JUNCTION CONNECTOR
J42 JUNCTION CONNECTOR
A37 ASHTRAY ILLUMINATION REAR RH
A36 ASHTRAY ILLUMINATION REAR LH
R14 REAR DOOR RH ECU
R13 REAR DOOR LH ECU
R 7 REMOTE CONTROL MIRROR SW
C 9 CIGARETTE LIGHTER ILLUMINATION
A21 A/T SHIFT POSITION ILLUMINATION
E11 ECT PATTERN SELECT SW
V 4 VSC OFF SW

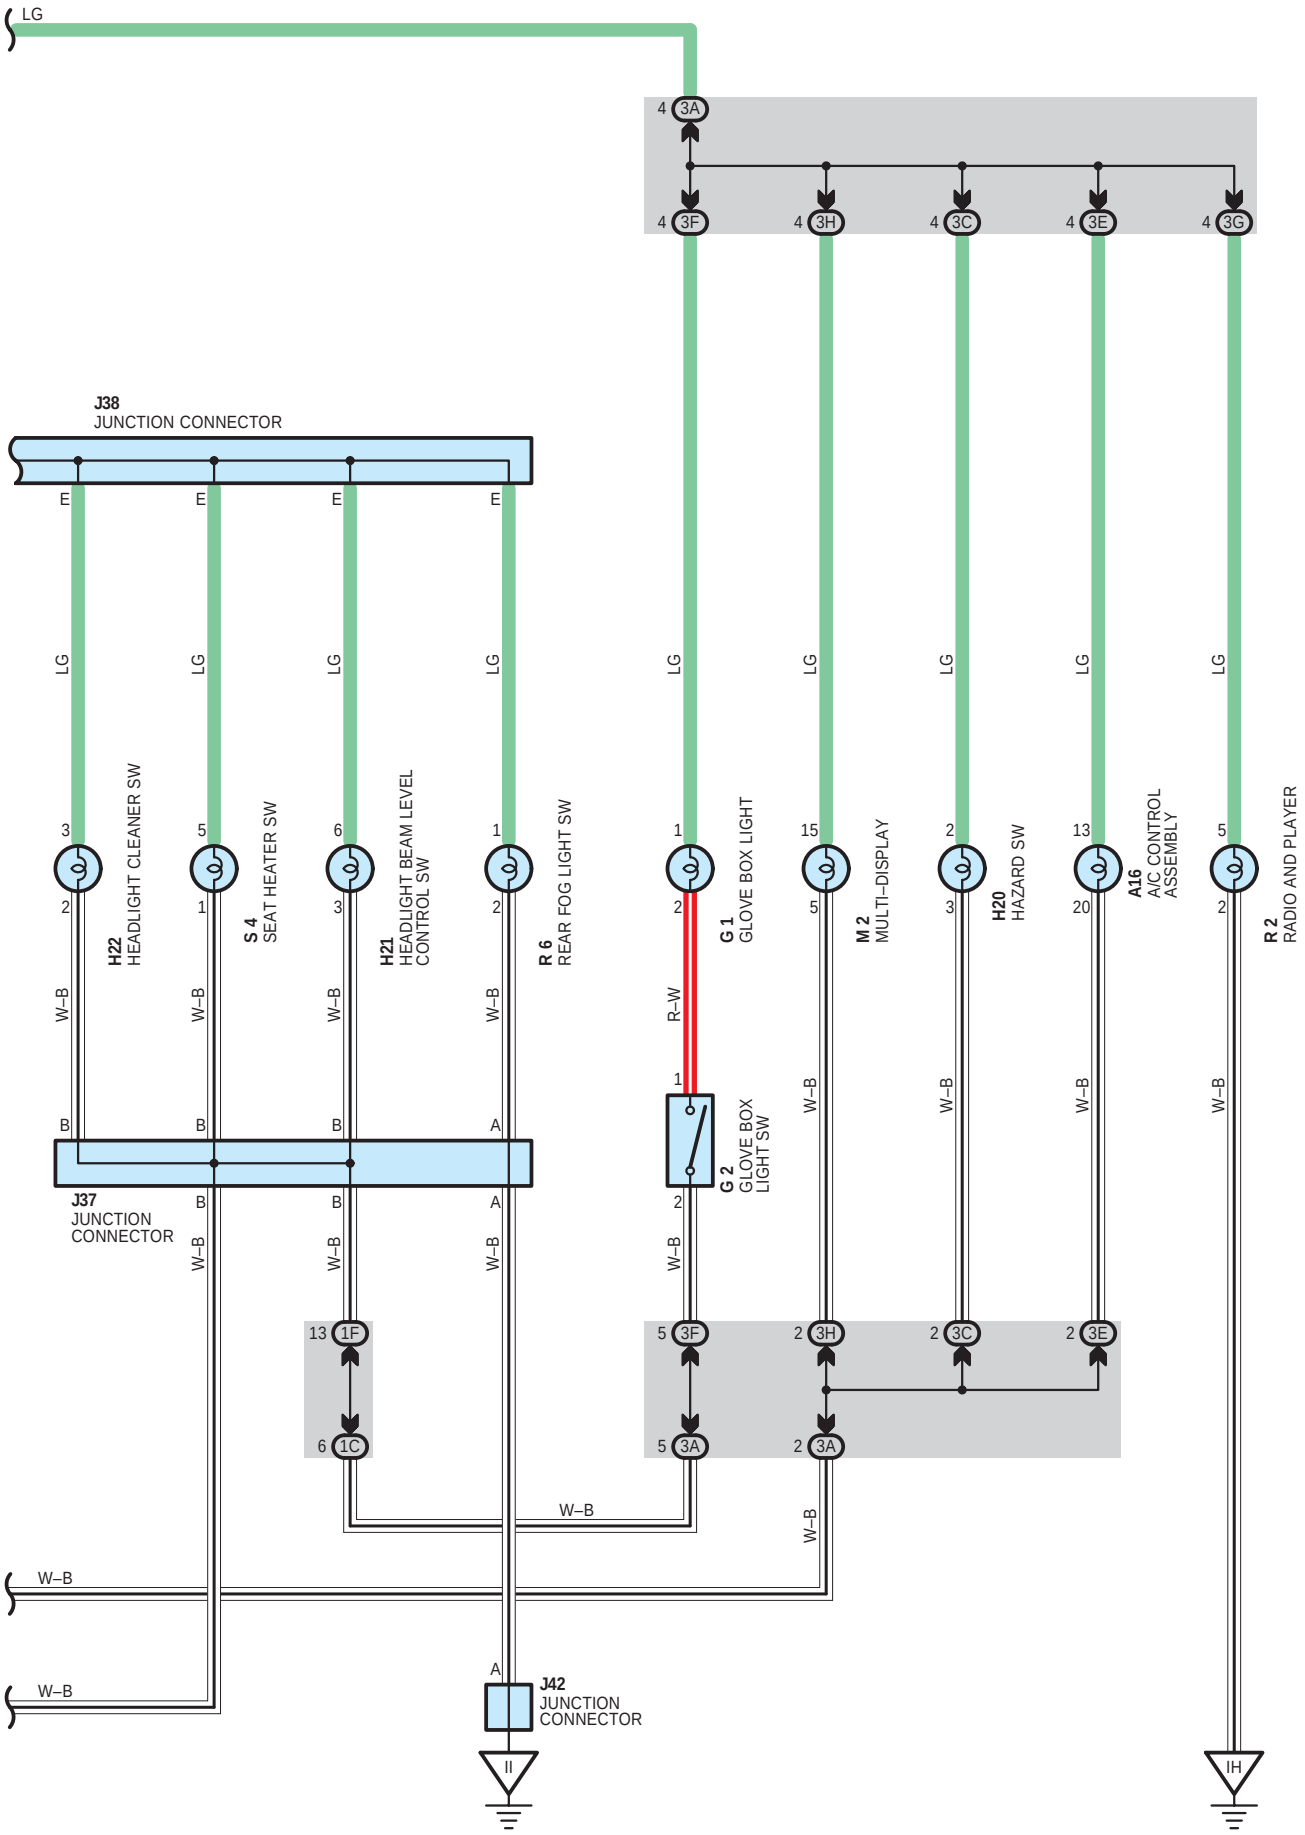
LG
4 3A
4 3F
4 3H
4 3C
4 3E
4 3G
J38
JUNCTION CONNECTOR
E
LG
3
2
H22
HEADLIGHT CLEANER SW
W–B
B
5
1
S 4
SEAT HEATER SW
6
3
H21
HEADLIGHT BEAM LEVEL
CONTROL SW
1
2
R 6
REAR FOG LIGHT SW
A
J37
JUNCTION
CONNECTOR
13 1F
6 1C
R–W
G 1
GLOVE BOX LIGHT
G 2
GLOVE BOX
LIGHT SW
15
5
M 2
MULTI–DISPLAY
2
3
H20
HAZARD SW
13
20
A16
A/C CONTROL
ASSEMBLY
R 2
RADIO AND PLAYER
5 3F
5 3A
2 3H
2 3A
2 3C
2 3E
J42
JUNCTION
CONNECTOR
II
IH