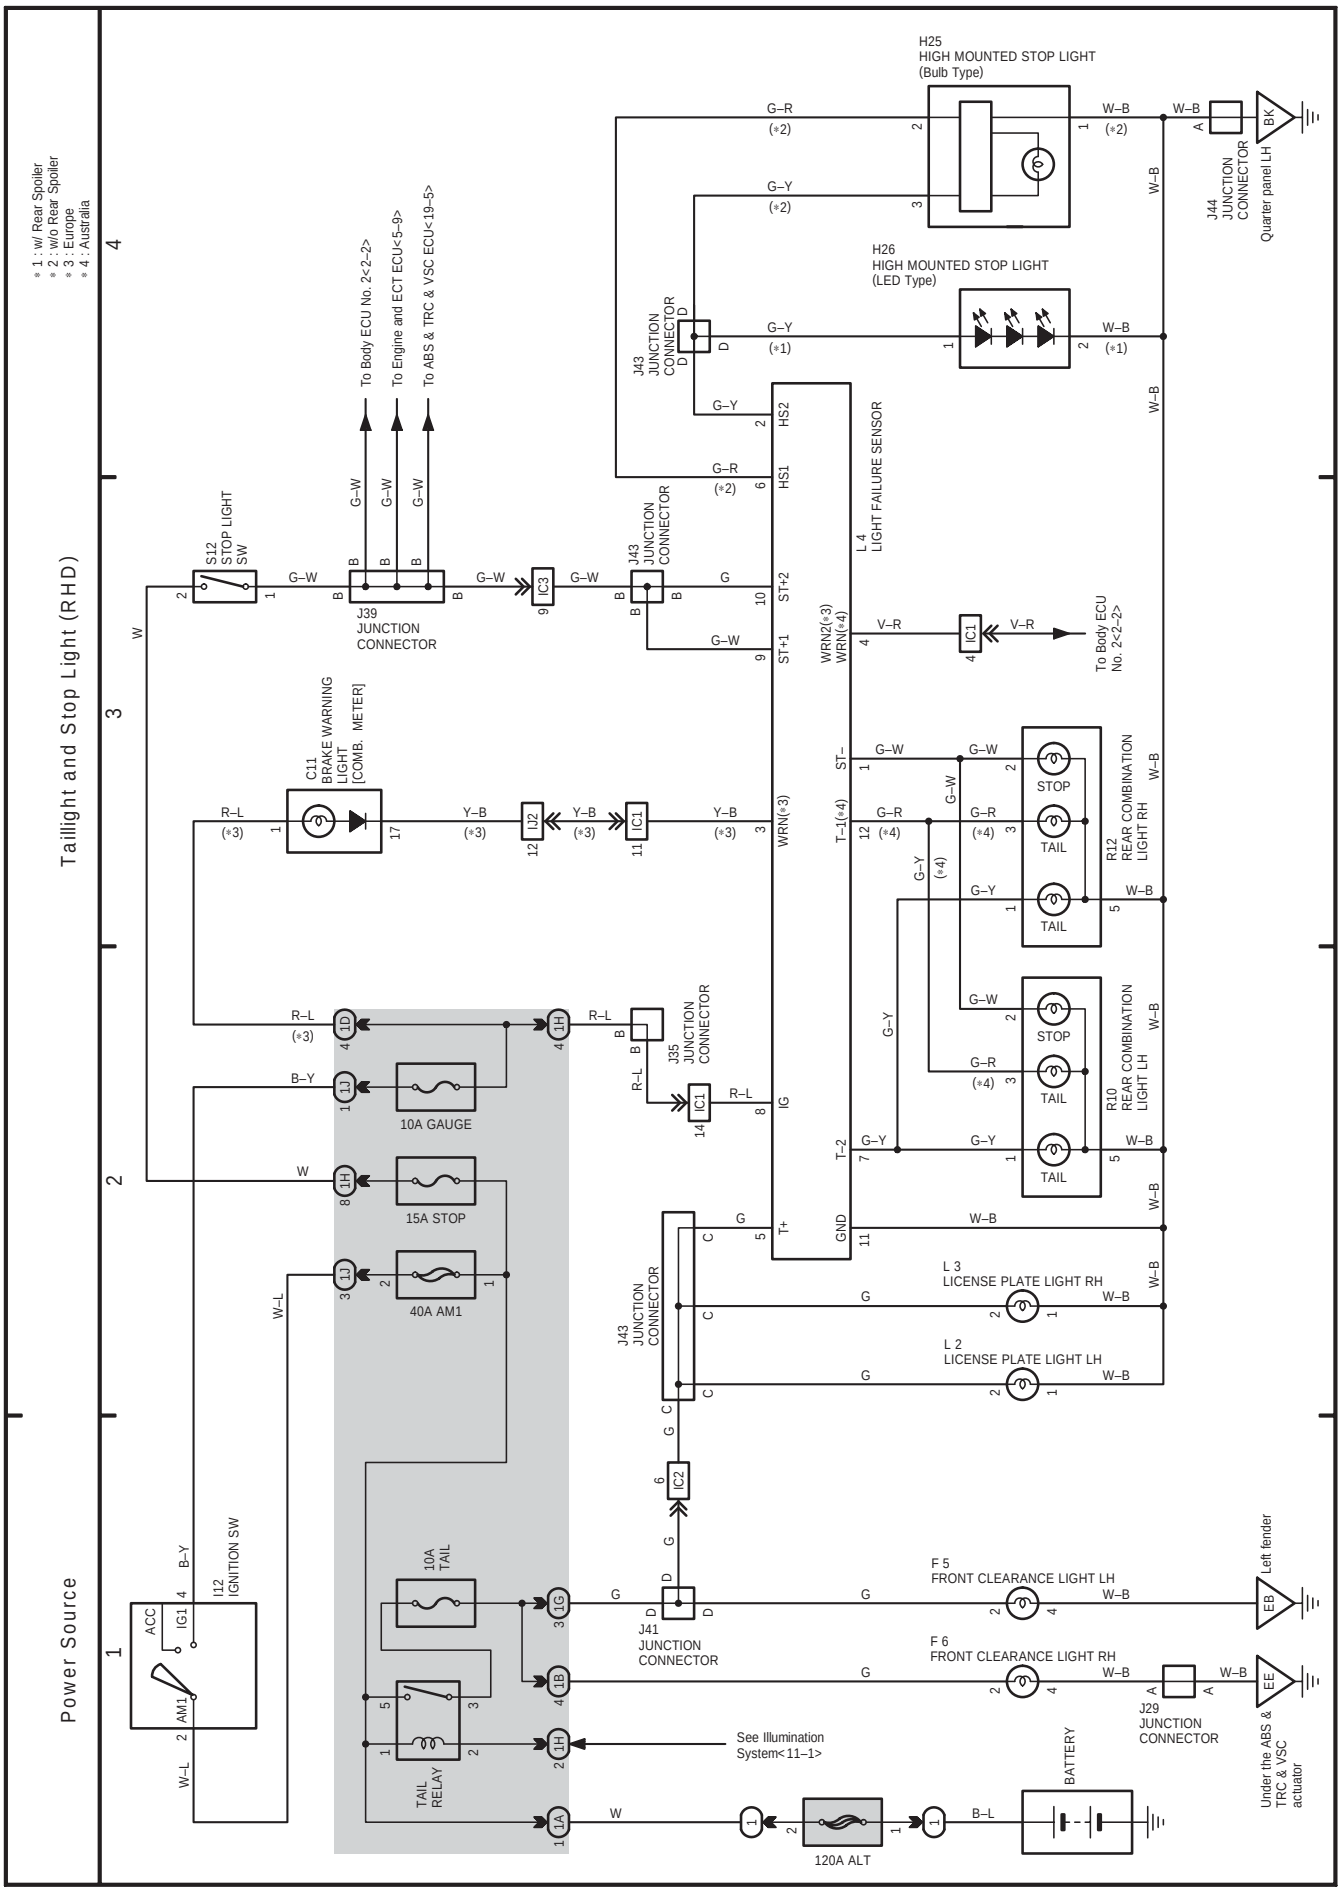
Taillight and Stop Light (RHD)
Power Source
* 1 : w/ Rear Spoiler
* 2 : w/o Rear Spoiler
* 3 : Europe
* 4 : Australia
H25
HIGH MOUNTED STOP LIGHT
(Bulb Type)
H26
HIGH MOUNTED STOP LIGHT
(LED Type)
J44
JUNCTION
CONNECTOR
Quarter panel LH
J43
JUNCTION
CONNECTOR
To Body ECU No. 2<2-2>
To Engine and ECT ECU<5-9>
To ABS & TRC & VSC ECU<19-5>
S12
STOP LIGHT
SW
J39
JUNCTION
CONNECTOR
L 4
LIGHT FAILURE SENSOR
C11
BRAKE WARNING
LIGHT
[COMB. METER]
R12
REAR COMBINATION
LIGHT RH
R10
REAR COMBINATION
LIGHT LH
STOP
TAIL
J35
JUNCTION
CONNECTOR
10A GAUGE
15A STOP
40A AM1
L 3
LICENSE PLATE LIGHT RH
L 2
LICENSE PLATE LIGHT LH
I12
IGNITION SW
ACC
IG1
AM1
10A
TAIL
TAIL
RELAY
J41
JUNCTION
CONNECTOR
F 5
FRONT CLEARANCE LIGHT LH
F 6
FRONT CLEARANCE LIGHT RH
Left fender
J29
JUNCTION
CONNECTOR
Under the ABS &
TRC & VSC
actuator
See Illumination
System<11-1>
BATTERY
120A ALT