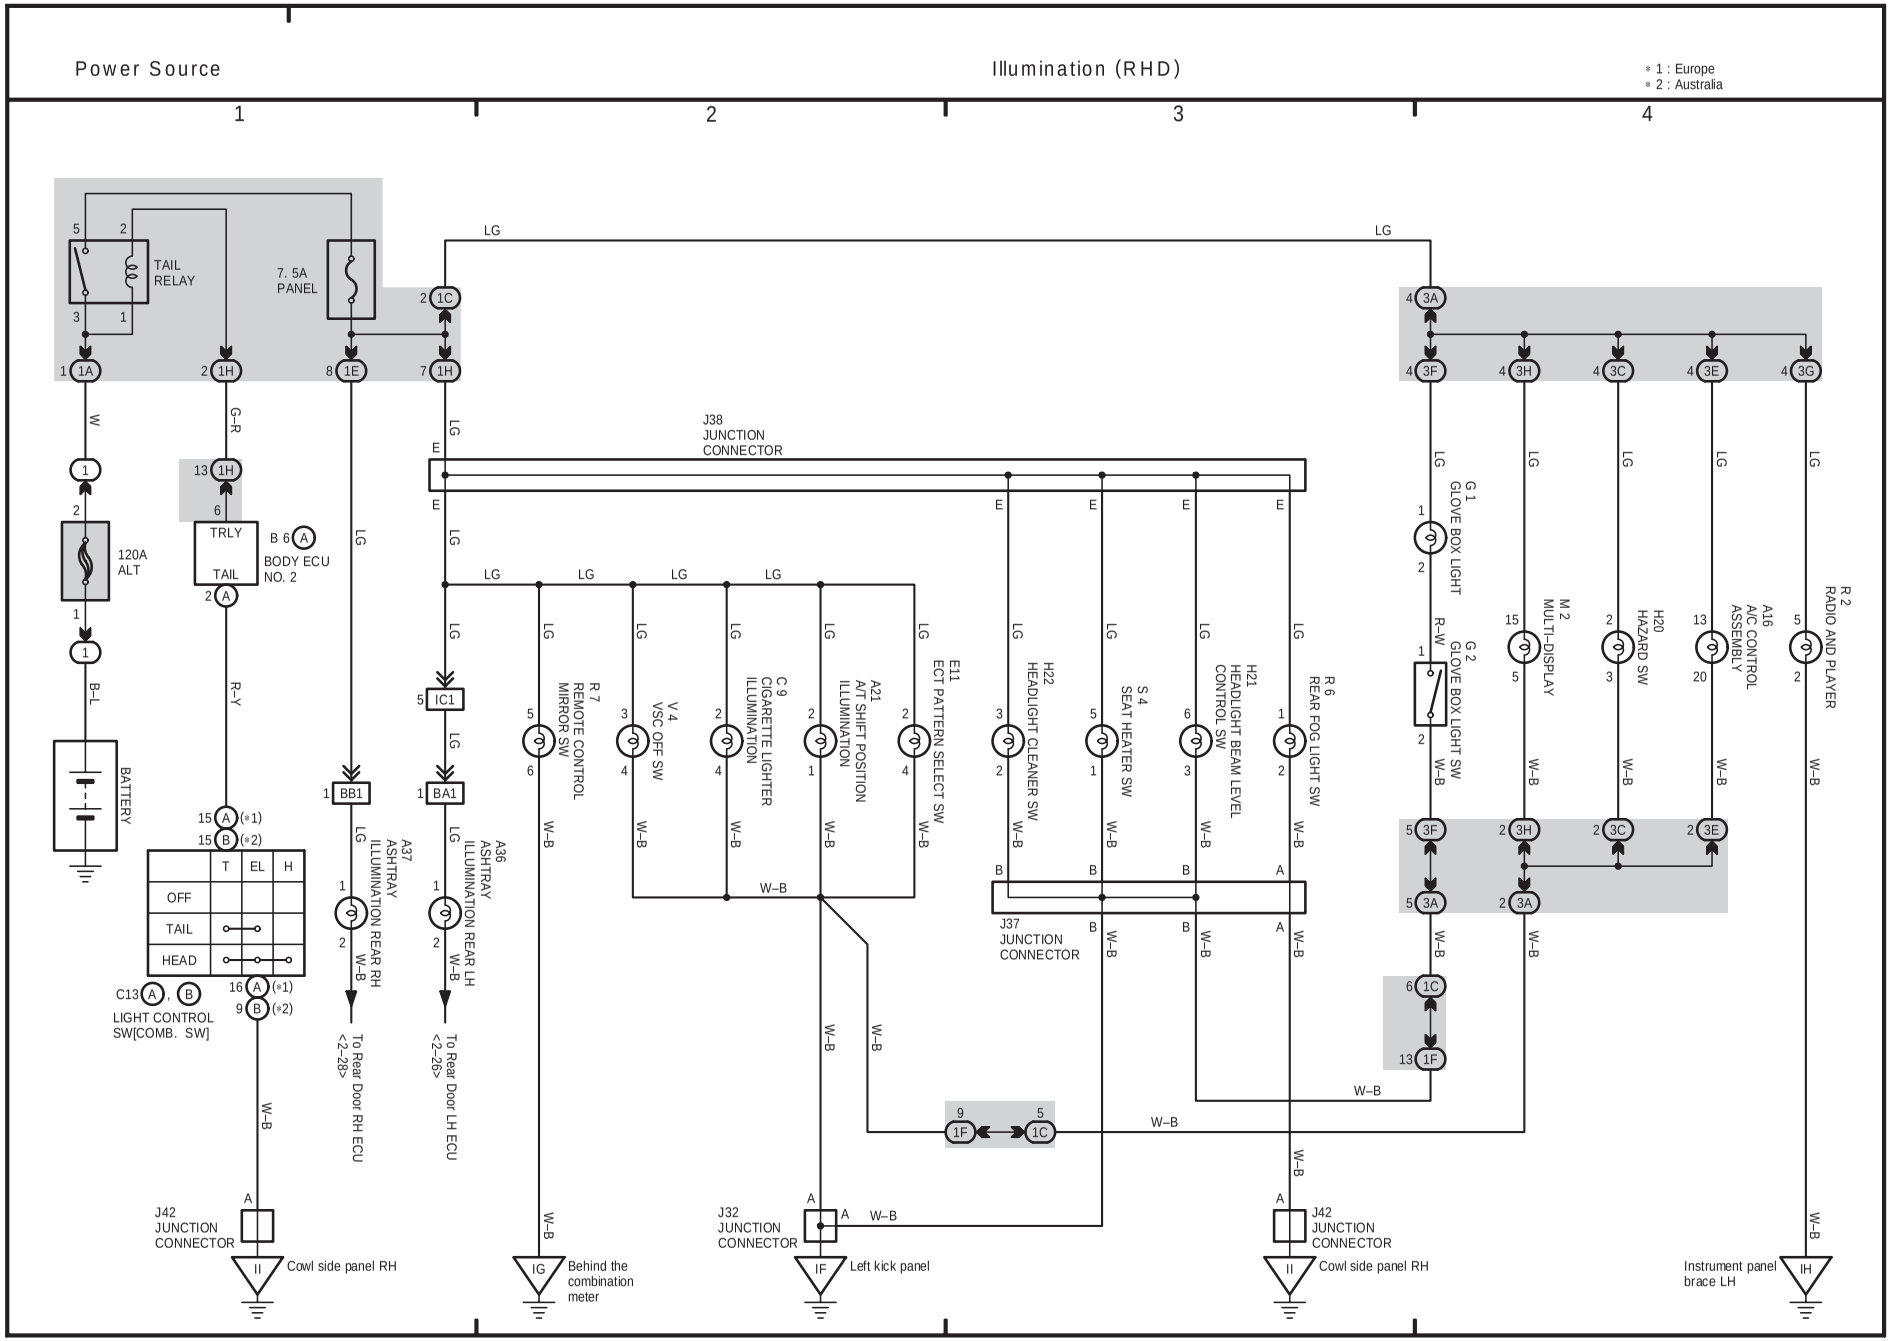
Power Source
Illumination (RHD)
* 1 : Europe
* 2 : Australia
1
2
3
4
TAIL RELAY
7. 5A PANEL
120A ALT
BATTERY
TRLY
TAIL
B 6
BODY ECU NO. 2
OFF
TAIL
HEAD
T
EL
H
C13
LIGHT CONTROL SW[COMB. SW]
J42 JUNCTION CONNECTOR
Cowl side panel RH
J38 JUNCTION CONNECTOR
J37 JUNCTION CONNECTOR
J32 JUNCTION CONNECTOR
Left kick panel
Behind the combination meter
A37 ASHTRAY ILLUMINATION REAR RH
A36 ASHTRAY ILLUMINATION REAR LH
To Rear Door RH ECU <2-2b>
To Rear Door LH ECU <2-2b>
R 7 REMOTE CONTROL MIRROR SW
V 4 VSC OFF SW
C 9 CIGARETTE LIGHTER ILLUMINATION
A21 A/T SHIFT POSITION ILLUMINATION
E11 ECT PATTERN SELECT SW
H22 HEADLIGHT CLEANER SW
S 4 SEAT HEATER SW
H21 HEADLIGHT BEAM LEVEL CONTROL SW
R 6 REAR FOG LIGHT SW
G 1 GLOVE BOX LIGHT
G 2 GLOVE BOX LIGHT SW
M 2 MULTI-DISPLAY
H20 HAZARD SW
A16 A/C CONTROL ASSEMBLY
R 2 RADIO AND PLAYER
Instrument panel brace LH

K