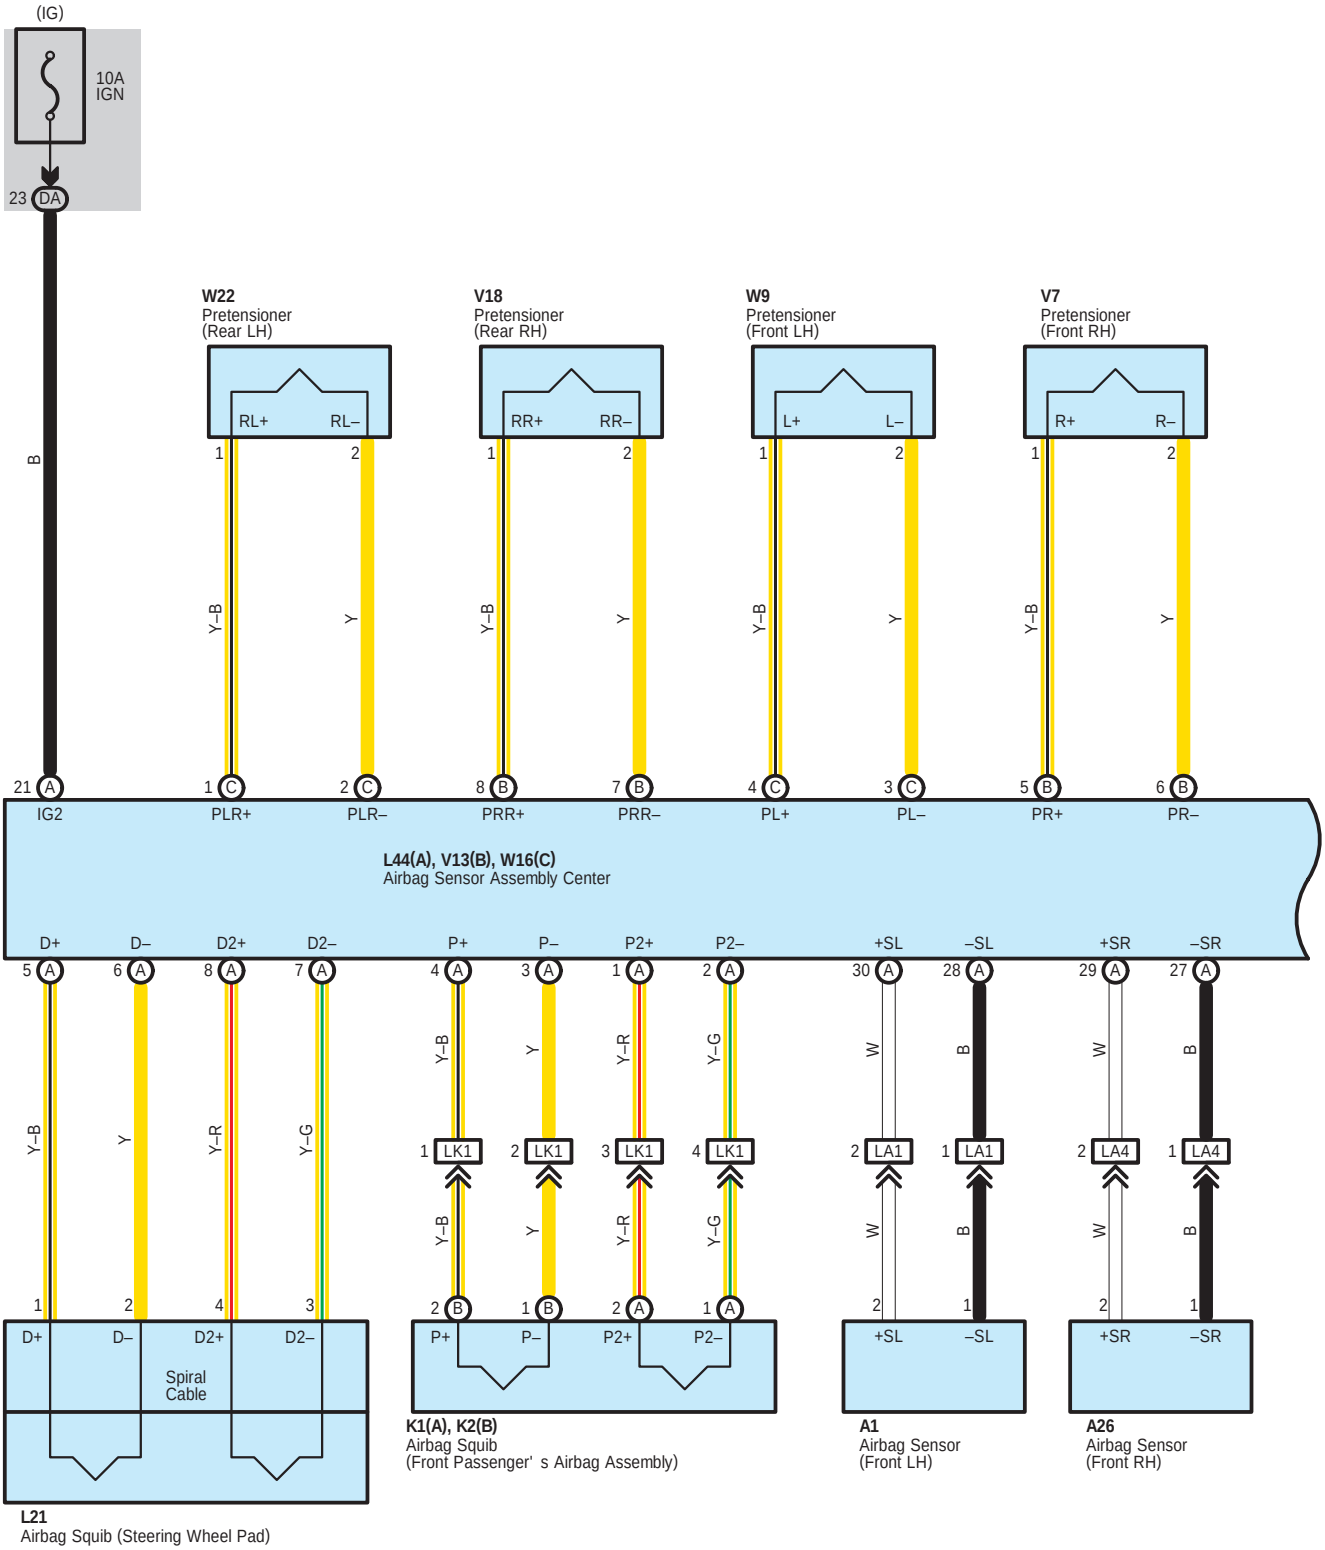
(IG)
10A
IGN
23 DA
B
W22
Pretensioner
(Rear LH)
RL+
RL–
V18
Pretensioner
(Rear RH)
RR+
RR–
W9
Pretensioner
(Front LH)
L+
L–
V7
Pretensioner
(Front RH)
R+
R–
Y–B
Y
21 A
IG2
1 C
PLR+
2 C
PLR–
8 B
PRR+
7 B
PRR–
4 C
PL+
3 C
PL–
5 B
PR+
6 B
PR–
L44(A), V13(B), W16(C)
Airbag Sensor Assembly Center
D+
D–
D2+
D2–
P+
P–
P2+
P2–
+SL
–SL
+SR
–SR
5 A
6 A
8 A
7 A
4 A
3 A
1 A
2 A
30 A
28 A
29 A
27 A
Y–R
Y–G
W
LK1
LA1
LA4
2 B
1 B
2 A
1 A
Spiral
Cable
K1(A), K2(B)
Airbag Squib
(Front Passenger' s Airbag Assembly)
A1
Airbag Sensor
(Front LH)
A26
Airbag Sensor
(Front RH)
L21
Airbag Squib (Steering Wheel Pad)

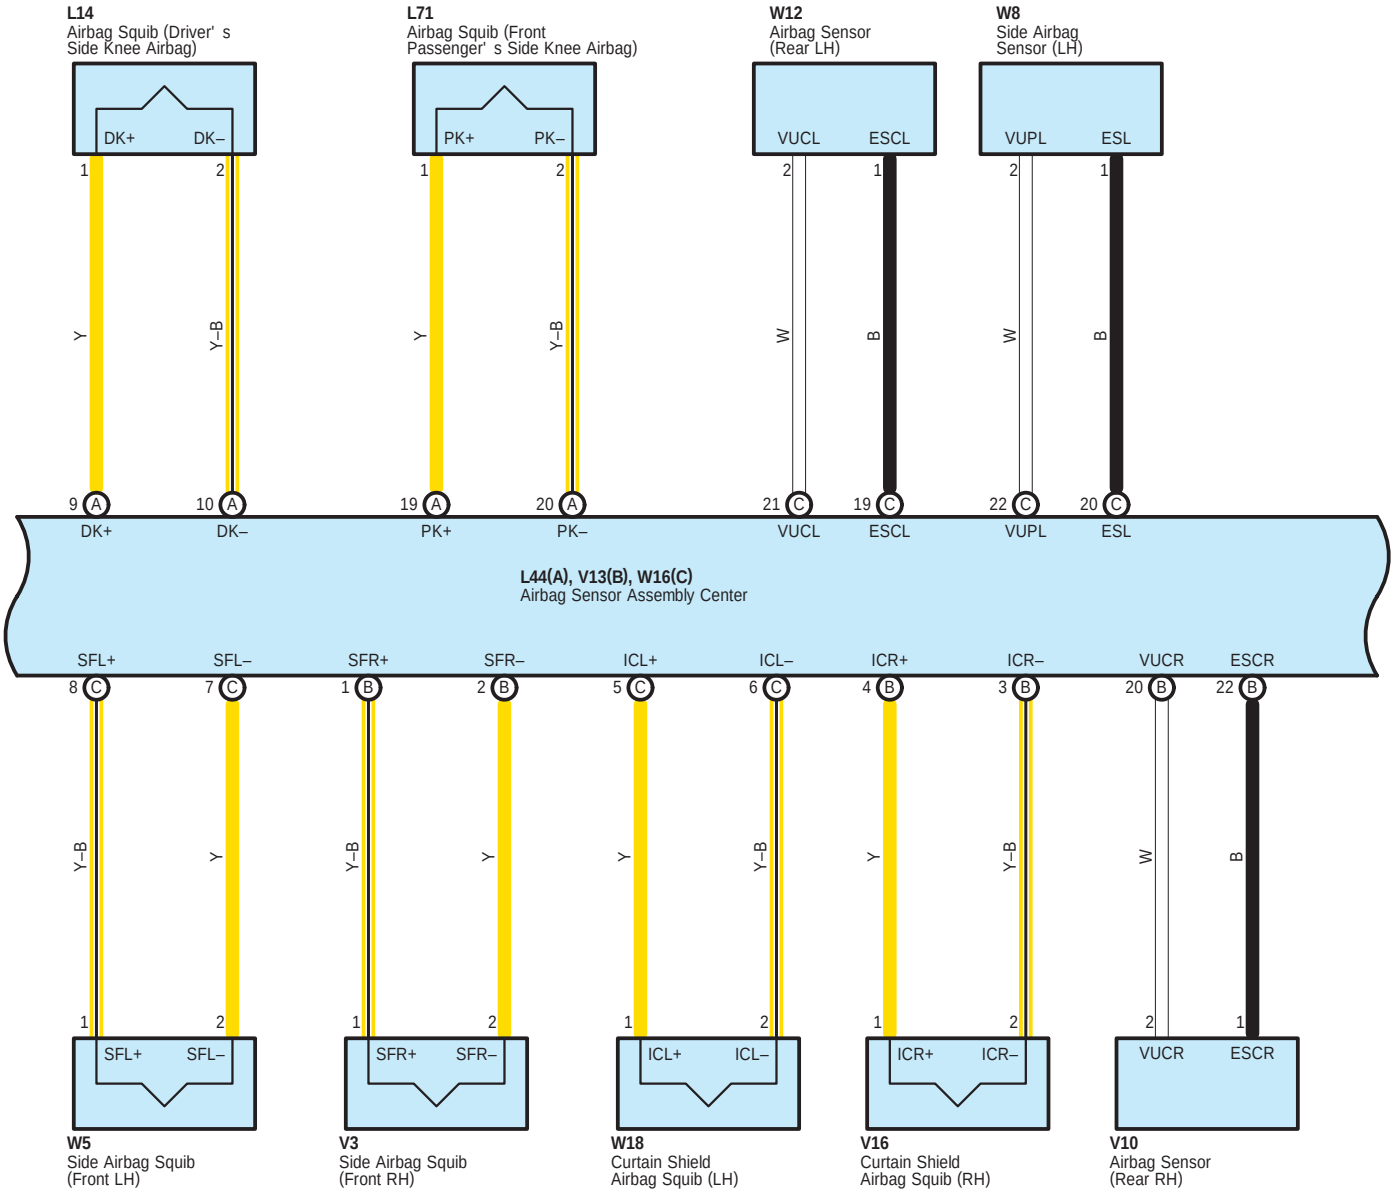
L14
Airbag Squib (Driver' s Side Knee Airbag)
DK+
DK–
L71
Airbag Squib (Front Passenger' s Side Knee Airbag)
PK+
PK–
W12
Airbag Sensor (Rear LH)
VUCL
ESCL
W8
Side Airbag Sensor (LH)
VUPL
ESL
Y
Y–B
W
B
9 A DK+
10 A DK–
19 A PK+
20 A PK–
21 C VUCL
19 C ESCL
22 C VUPL
20 C ESL
L44(A), V13(B), W16(C)
Airbag Sensor Assembly Center
SFL+
SFL–
SFR+
SFR–
ICL+
ICL–
ICR+
ICR–
VUCR
ESCR
8 C
7 C
1 B
2 B
5 C
6 C
4 B
3 B
20 B
22 B
W5
Side Airbag Squib (Front LH)
V3
Side Airbag Squib (Front RH)
W18
Curtain Shield Airbag Squib (LH)
V16
Curtain Shield Airbag Squib (RH)
V10
Airbag Sensor (Rear RH)

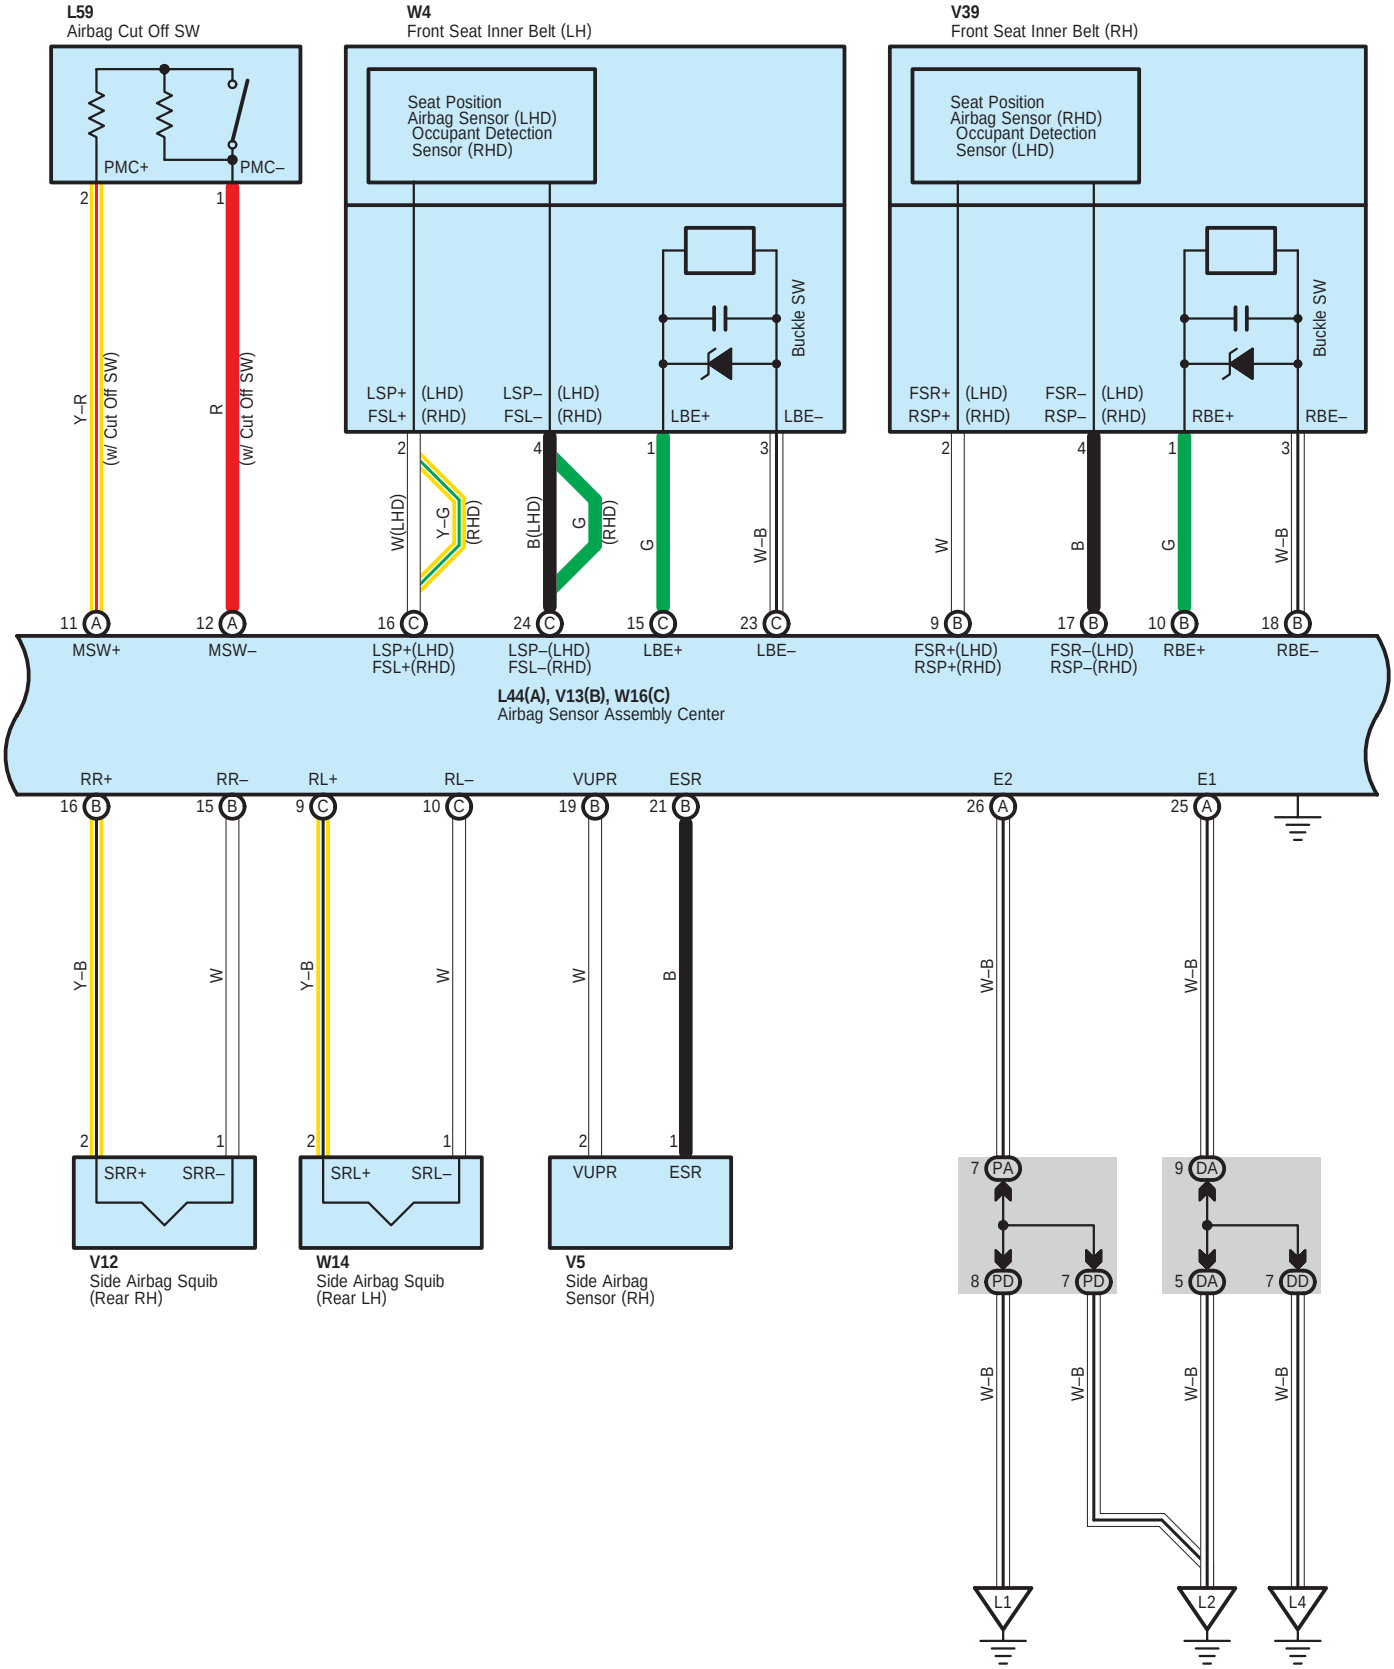
L59
Airbag Cut Off SW
PMC+
PMC–
W4
Front Seat Inner Belt (LH)
Seat Position
Airbag Sensor (LHD)
Occupant Detection
Sensor (RHD)
Buckle SW
LSP+ (LHD)
FSL+ (RHD)
LSP– (LHD)
FSL– (RHD)
LBE+
LBE–
V39
Front Seat Inner Belt (RH)
Seat Position
Airbag Sensor (RHD)
Occupant Detection
Sensor (LHD)
FSR+ (LHD)
RSP+ (RHD)
FSR– (LHD)
RSP– (RHD)
RBE+
RBE–
Y–R (w/ Cut Off SW)
R (w/ Cut Off SW)
W(LHD)
Y–G (RHD)
B(LHD)
G (RHD)
G
W–B
W
B
MSW+
MSW–
LSP+(LHD)
FSL+(RHD)
LSP–(LHD)
FSL–(RHD)
FSR+(LHD)
RSP+(RHD)
FSR–(LHD)
RSP–(RHD)
L44(A), V13(B), W16(C)
Airbag Sensor Assembly Center
RR+
RR–
RL+
RL–
VUPR
ESR
E2
E1
Y–B
SRR+
SRR–
SRL+
SRL–
V12
Side Airbag Squib
(Rear RH)
W14
Side Airbag Squib
(Rear LH)
V5
Side Airbag
Sensor (RH)
PA
PD
DA
DD
L1
L2
L4

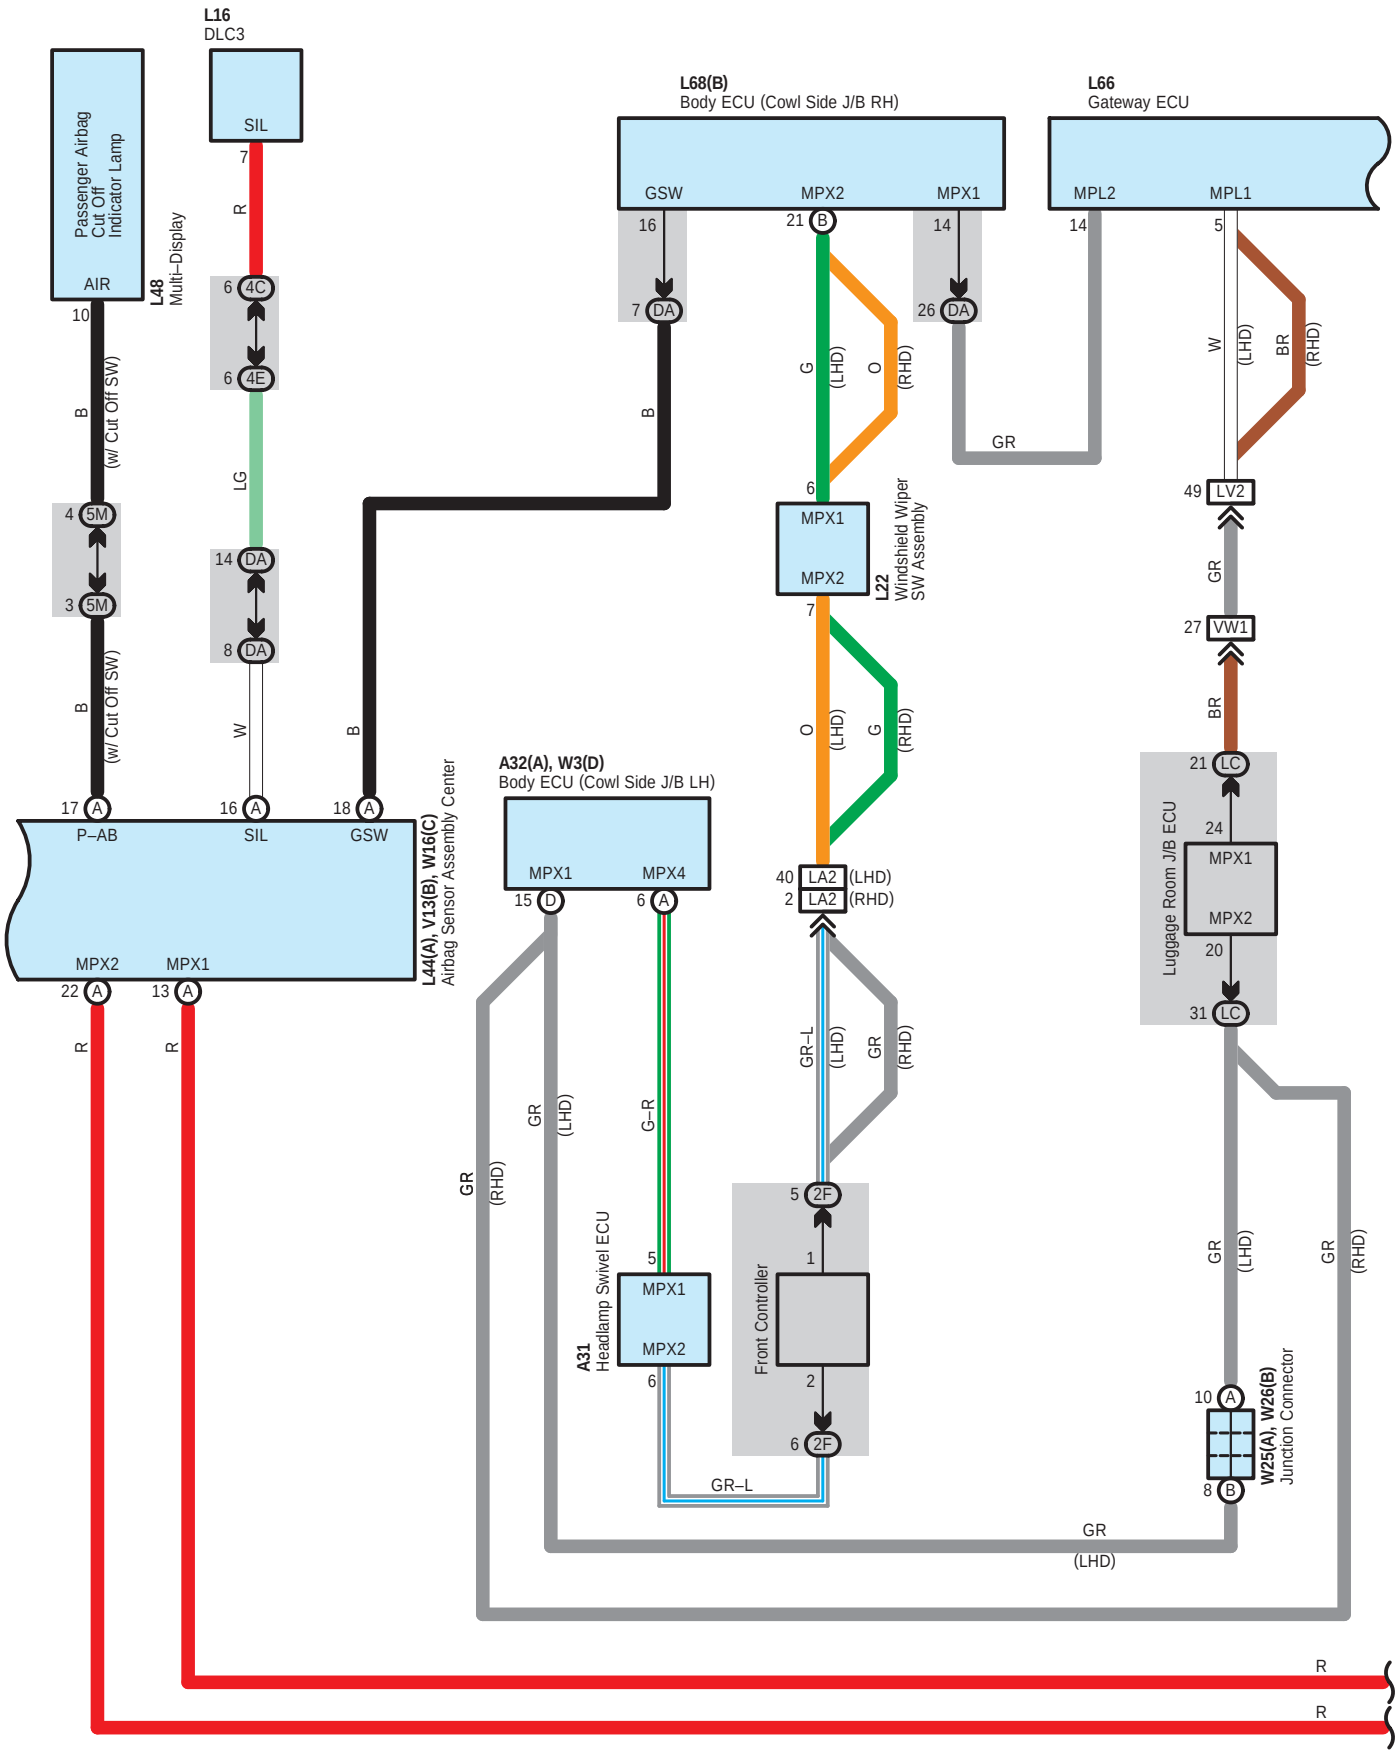
L16
DLC3
SIL
7
R
6 4C
6 4E
LG
14 DA
8 DA
W
Passenger Airbag Cut Off Indicator Lamp
AIR
10
L48
Multi–Display
B
(w/ Cut Off SW)
4 5M
3 5M
B
(w/ Cut Off SW)
17 A
P–AB
16 A
SIL
18 A
GSW
B
L44(A), V13(B), W16(C)
Airbag Sensor Assembly Center
MPX2
MPX1
22 A
13 A
R
R
L68(B)
Body ECU (Cowl Side J/B RH)
GSW
MPX2
MPX1
16
7 DA
21 B
14
26 DA
B
G
(LHD)
O
(RHD)
6
MPX1
MPX2
L22
Windshield Wiper SW Assembly
7
O
(LHD)
G
(RHD)
40 LA2 (LHD)
2 LA2 (RHD)
L66
Gateway ECU
MPL2
MPL1
14
5
GR
W
(LHD)
BR
(RHD)
49 LV2
GR
27 VW1
BR
21 LC
24
MPX1
MPX2
20
31 LC
Luggage Room J/B ECU
A32(A), W3(D)
Body ECU (Cowl Side J/B LH)
MPX1
MPX4
15 D
6 A
GR–L
(LHD)
GR
(RHD)
GR
(RHD)
GR
(LHD)
G–R
5
MPX1
MPX2
6
A31
Headlamp Swivel ECU
5 2F
1
2
6 2F
Front Controller
GR–L
GR
(LHD)
GR
(RHD)
10 A
8 B
W25(A), W26(B)
Junction Connector
GR
(LHD)
R
R

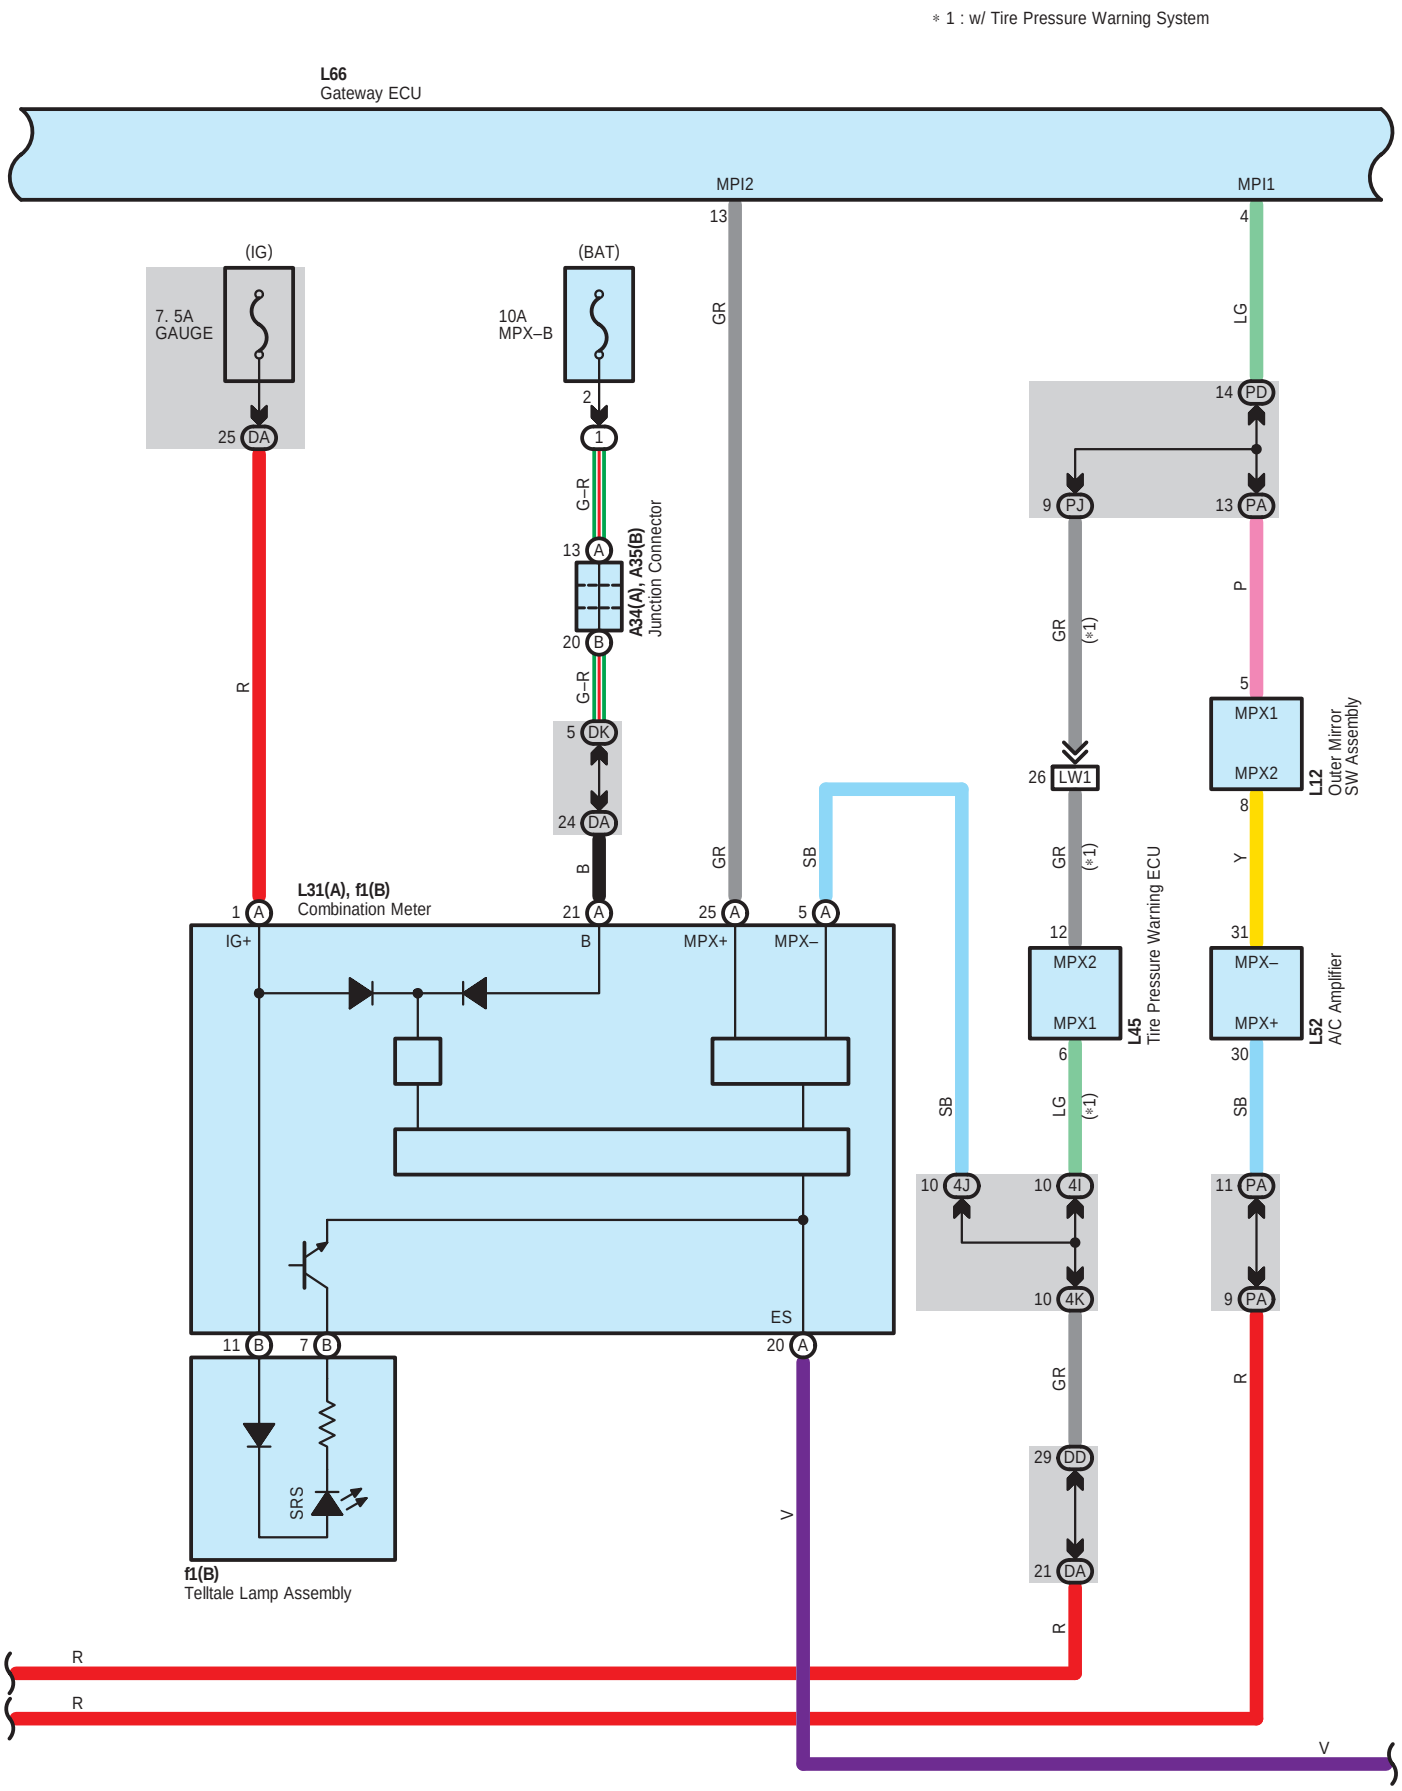
∗ 1 : w/ Tire Pressure Warning System
L66
Gateway ECU
MPI2
MPI1
13
4
(IG)
(BAT)
7. 5A
GAUGE
10A
MPX–B
25 DA
2
1
G–R
13 A
A34(A), A35(B)
Junction Connector
20 B
G–R
5 DK
24 DA
B
R
GR
LG
14 PD
9 PJ
13 PA
P
GR (∗1)
5
MPX1
MPX2
L12
Outer Mirror
SW Assembly
26 LW1
8
Y
GR (∗1)
SB
L31(A), f1(B)
Combination Meter
1 A
21 A
25 A
5 A
IG+
B
MPX+
MPX–
12
MPX2
MPX1
L45
Tire Pressure Warning ECU
31
MPX–
MPX+
L52
A/C Amplifier
6
30
SB
LG (∗1)
SB
10 4J
10 4I
11 PA
10 4K
9 PA
ES
11 B
7 B
20 A
GR
R
29 DD
SRS
V
21 DA
f1(B)
Telltale Lamp Assembly
R
R
R
V

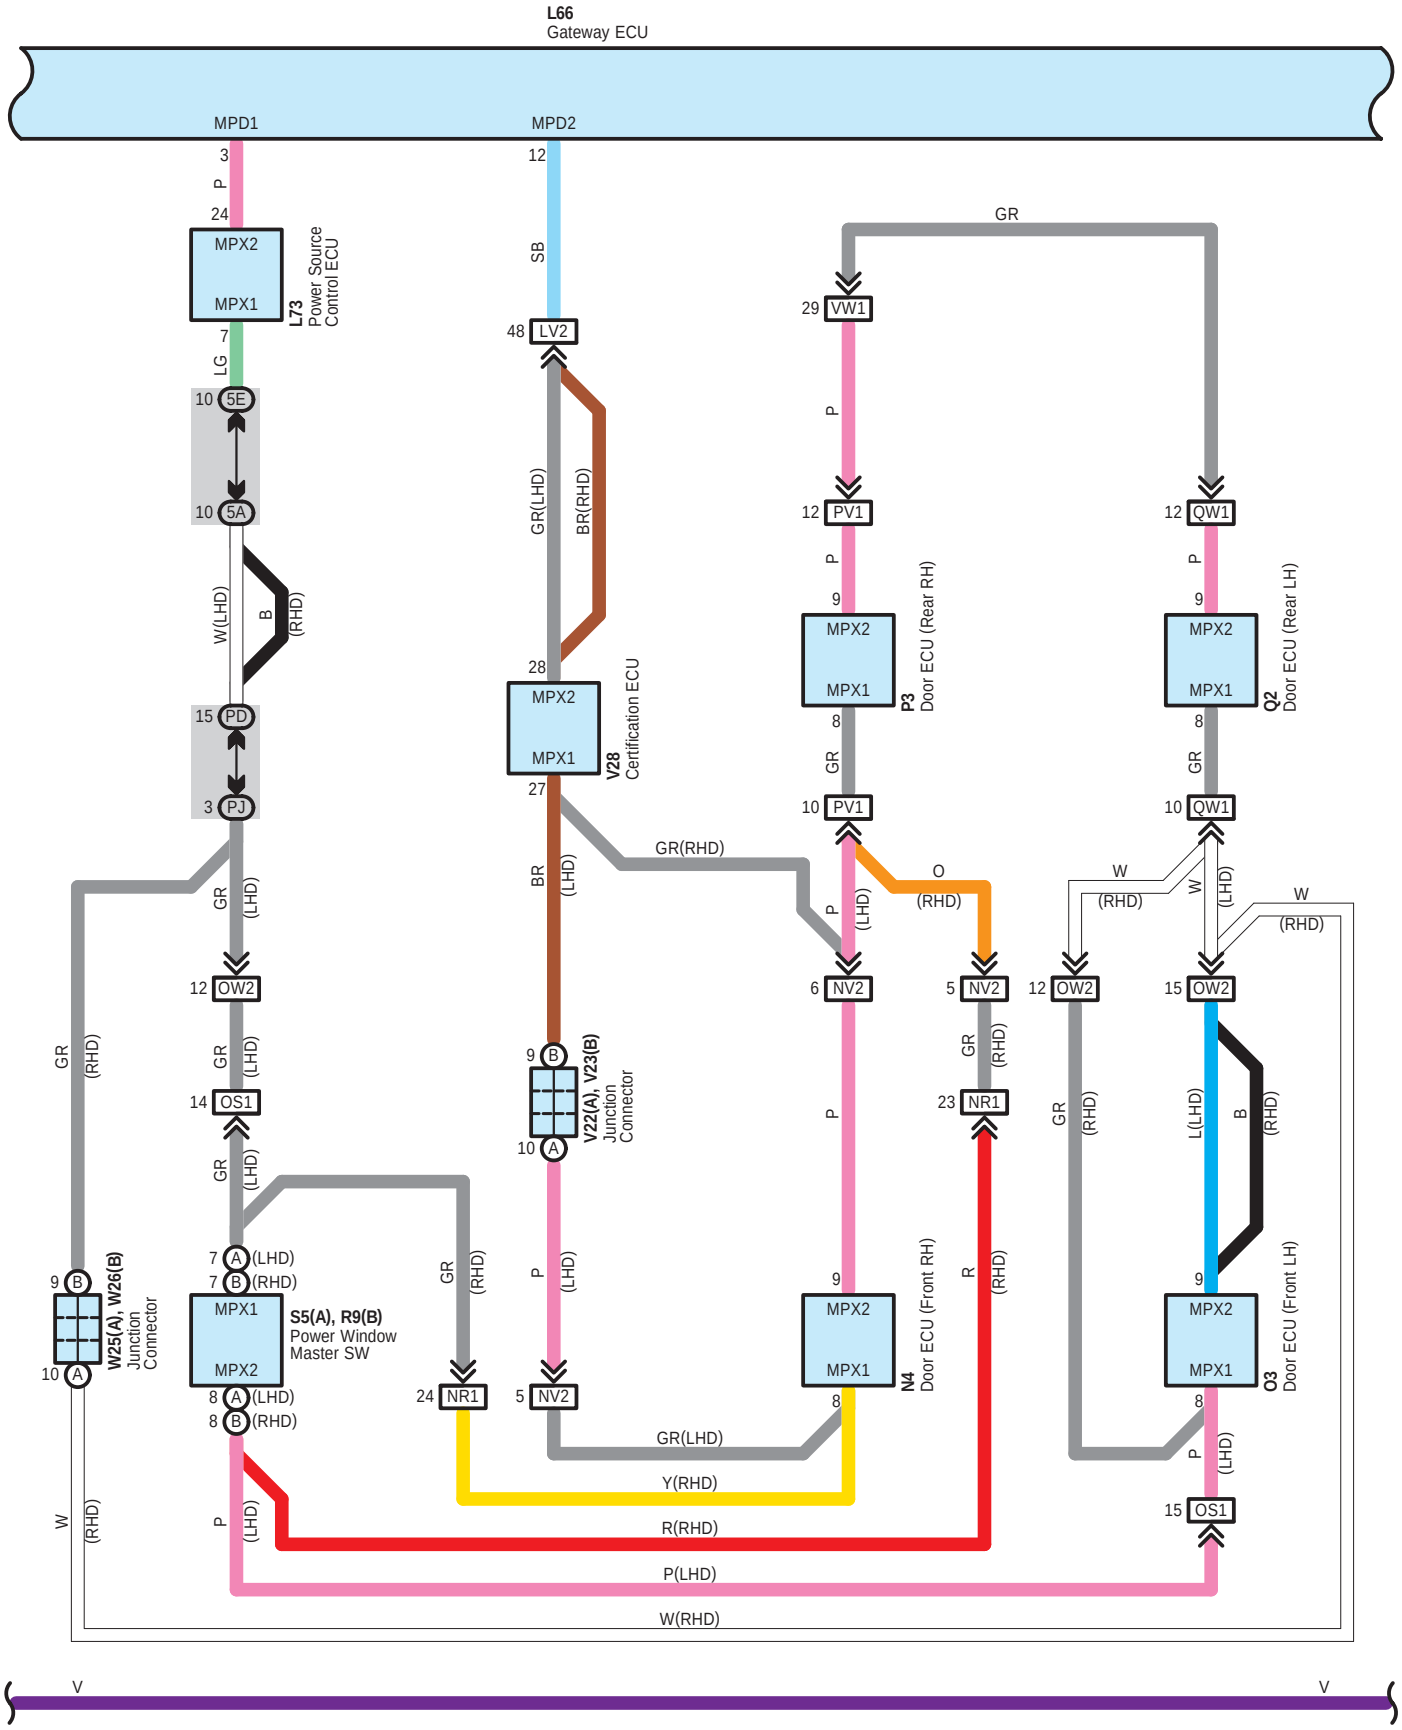
L66
Gateway ECU
MPD1
MPD2
L73
Power Source
Control ECU
MPX2
MPX1
V28
Certification ECU
P3
Door ECU (Rear RH)
Q2
Door ECU (Rear LH)
N4
Door ECU (Front RH)
O3
Door ECU (Front LH)
V22(A), V23(B)
Junction
Connector
W25(A), W26(B)
Junction
Connector
S5(A), R9(B)
Power Window
Master SW
5E
5A
PD
PJ
OW2
OS1
LV2
VW1
PV1
QW1
NV2
NR1
GR(LHD)
BR(RHD)
GR(RHD)
Y(RHD)
R(RHD)
P(LHD)
W(RHD)

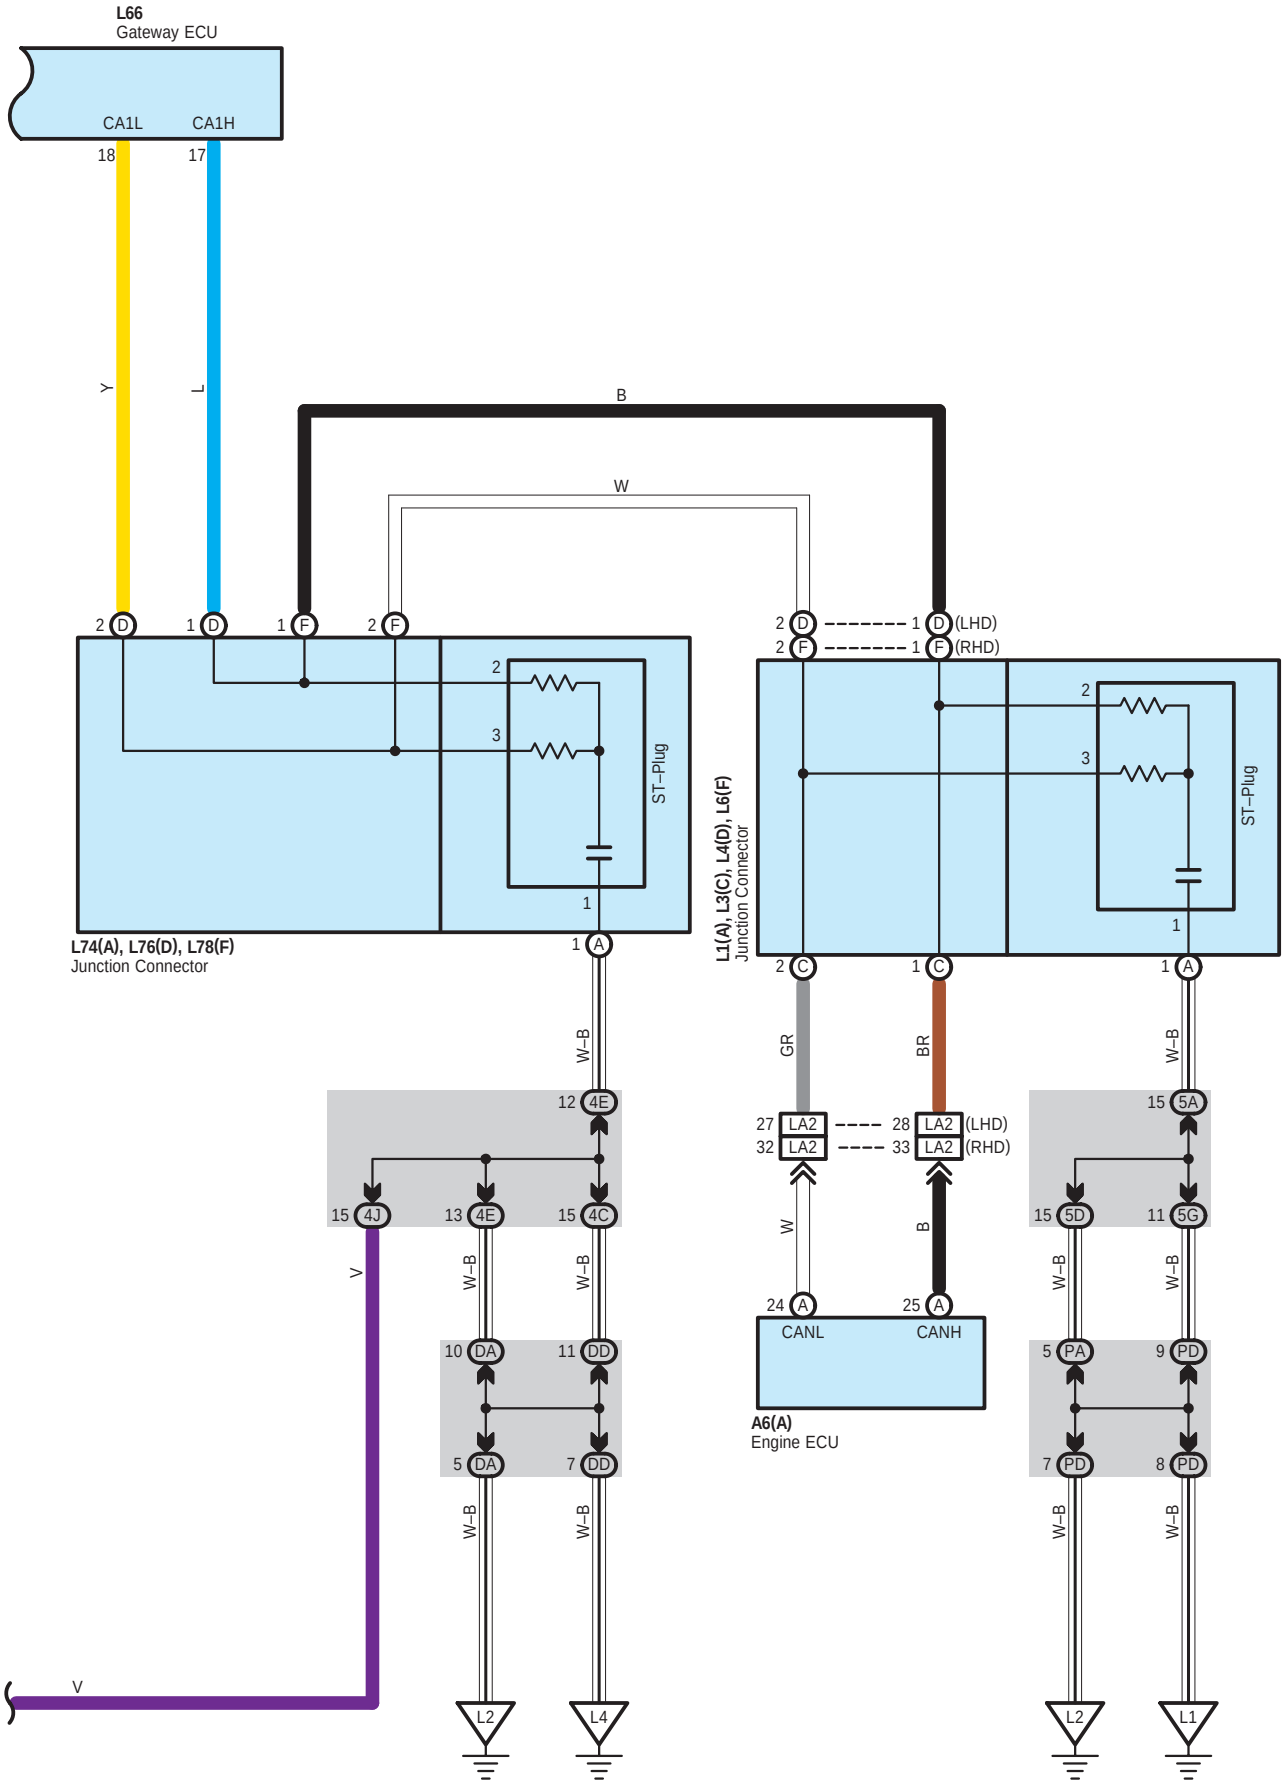
L66
Gateway ECU
CA1L
CA1H
18
17
Y
L
B
W
2 D
1 D
1 F
2 F
2 D
1 D (LHD)
2 F
1 F (RHD)
ST–Plug
L74(A), L76(D), L78(F)
Junction Connector
L1(A), L3(C), L4(D), L6(F)
Junction Connector
1 A
2 C
1 C
W–B
GR
BR
12 4E
27 LA2
32 LA2
28 LA2 (LHD)
33 LA2 (RHD)
15 5A
15 4J
13 4E
15 4C
15 5D
11 5G
V
24 A
25 A
CANL
CANH
A6(A)
Engine ECU
10 DA
11 DD
5 PA
9 PD
5 DA
7 DD
7 PD
8 PD
L2
L4
L1

A 1
Yellow

A 6
White

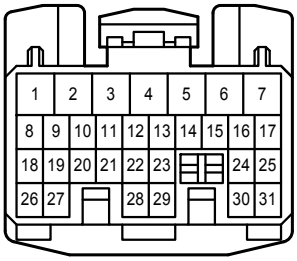

A 26
Yellow

A 31
White

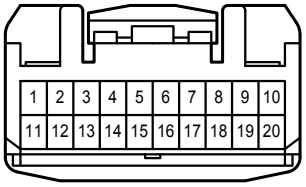

A 32
White

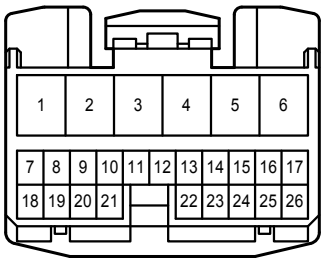

A 34
Blue

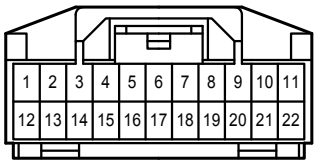

A 35
Blue

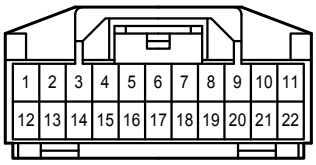

K 1
Black



K 2
Orange



L 1
White

L 3
White



L 4
White



L 6
White



L 12
White

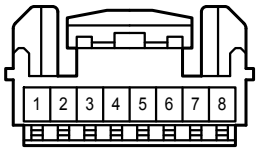

L 14
Black



L 16
White

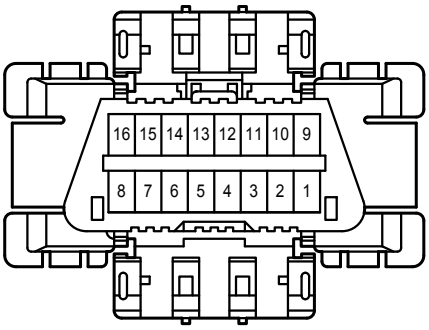

L 21
Yellow

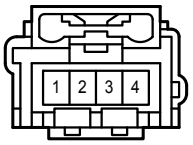

L 22
White

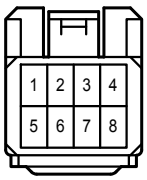

L 31
White

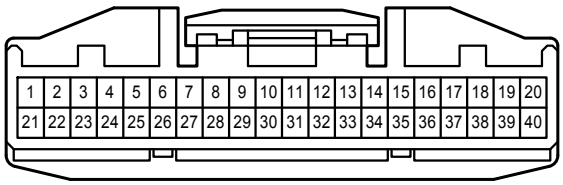

L 44
Yellow

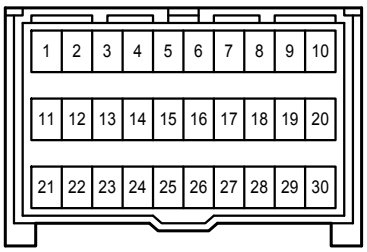

L 45
Black

L 48
White

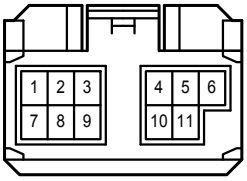

L 52
White

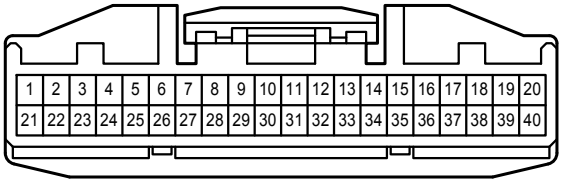

L 59
Black



L 66
White

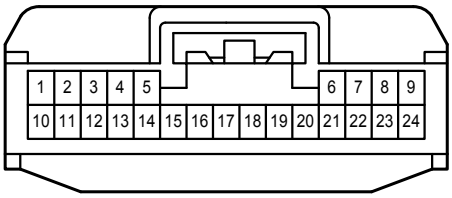

L 68
White

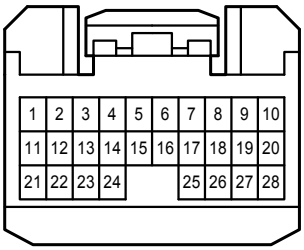

L 71
Black



L 73
White

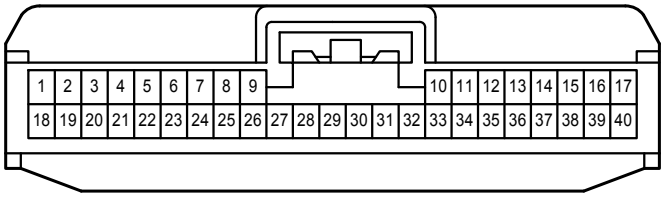

L 74
White

L 76
White



L 78
White



N 4
White

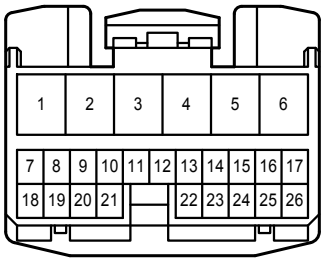

O 3
White

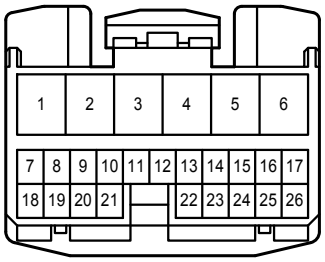

P 3
White

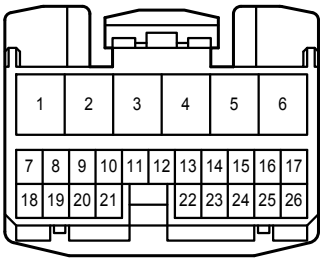

Q 2
White

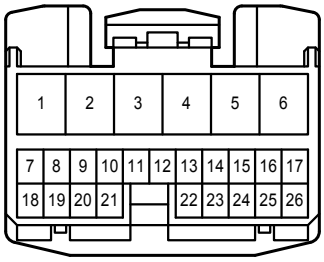

R 9
White

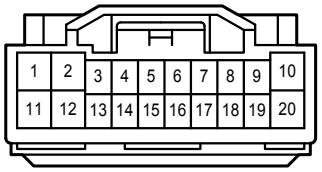

(Before Sep. 2007 Production)

R 9
White

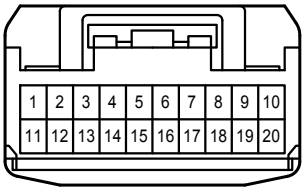

(From Sep. 2007 Production)

S 5
White

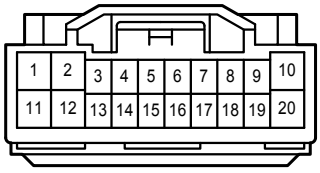

(Before Sep. 2007 Production)

S 5
White

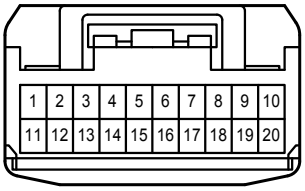

(From Sep. 2007 Production)

V 3
Yellow

V 5
Yellow

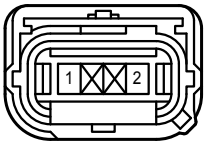

V 7
Yellow

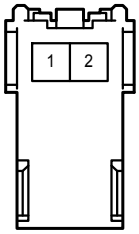

V 10
Yellow

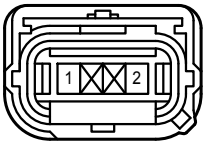

V 12
Yellow

V 13
Yellow

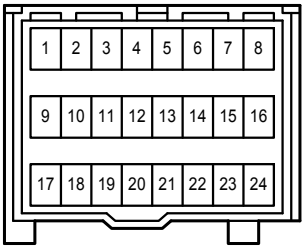

V 16
Black



V 18
Yellow

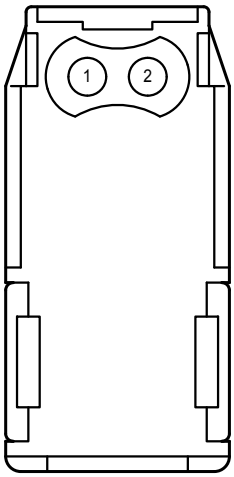

V 22
White

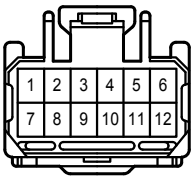

V 23
White

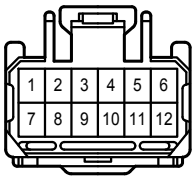

V 28
White

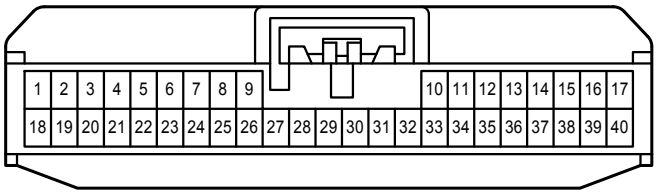

V 39
White

W 3
White

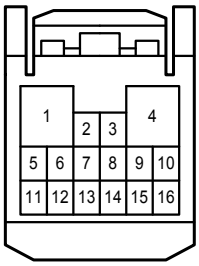

W 4
White

W 5
Yellow

W 8
Yellow

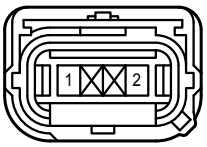

W 9
Yellow

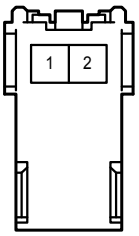

W 12
Yellow

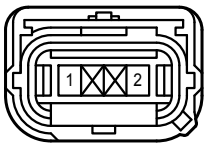

W 14
Yellow

W 16
Yellow

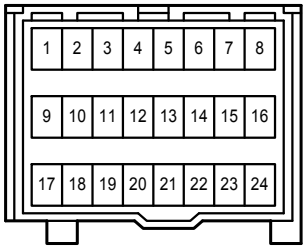

W 18
Black



W 22
Yellow

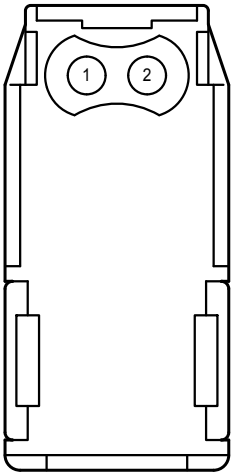

W 25
Gray

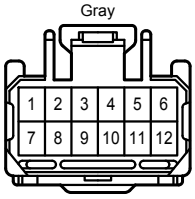

W 26
Gray

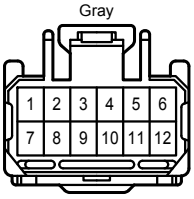

f 1
White

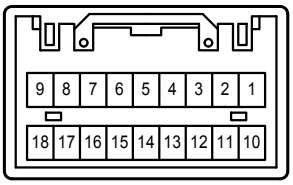

2F
Black

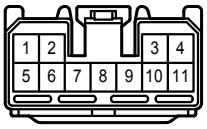

4C
White



4E
White



4I
White



4J
White



4K
White



5A
White



5D
White



5E
White



5G
White



5M
White



DA
White

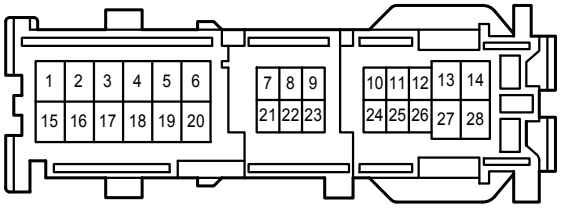

DD
White

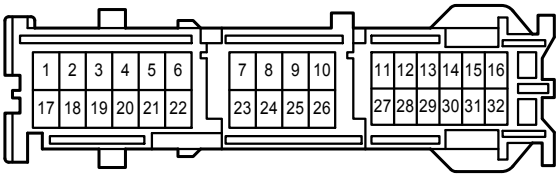

DK
Gray

LC
White

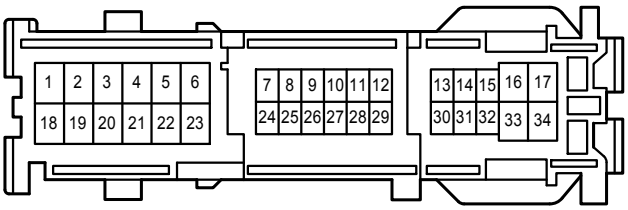

PA
White

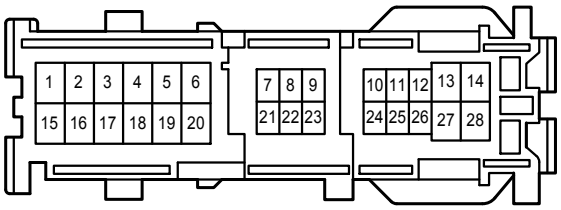

PD
White

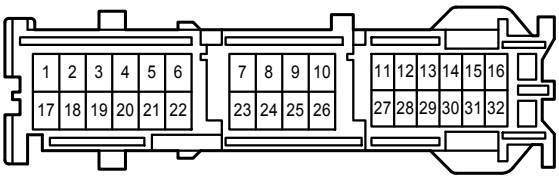

PJ
Gray

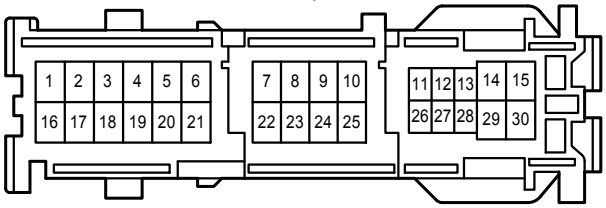

LA1
Yellow

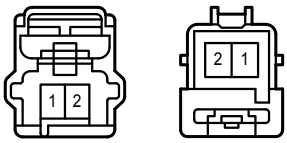

LA2
White

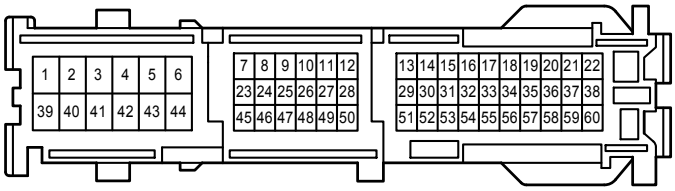

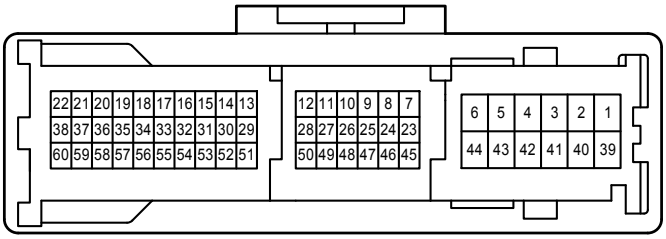

LA4
Yellow

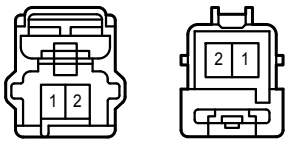

LK1
Yellow

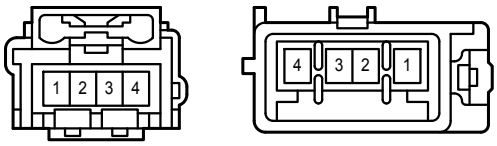

LV2
White

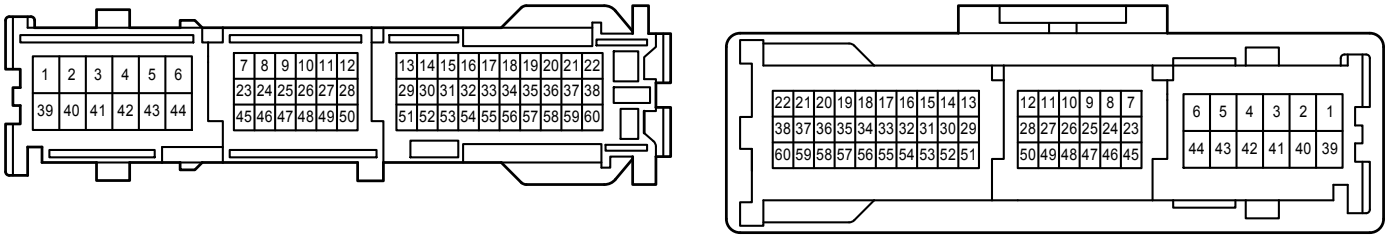

LW1
White

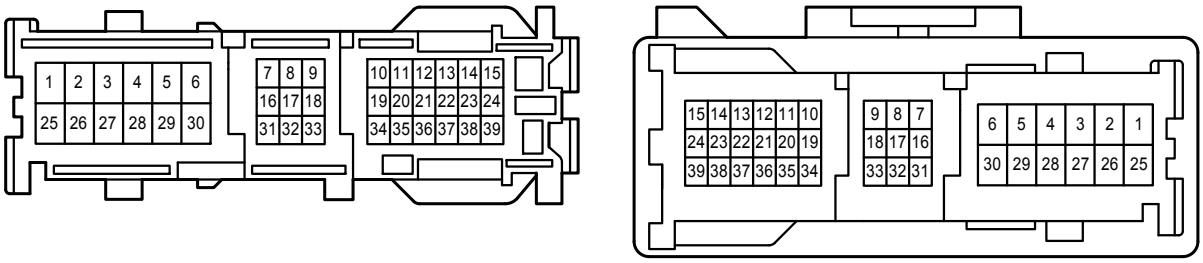

NR1
White

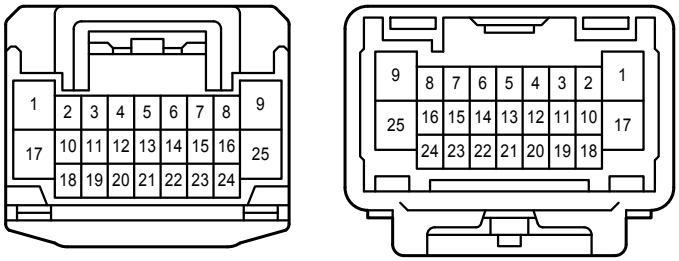

NV2
White

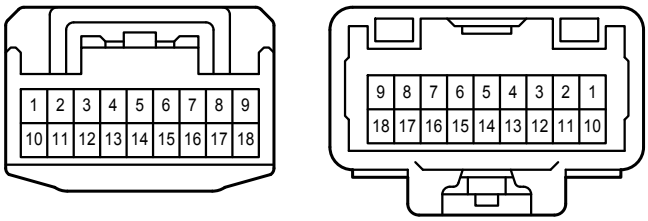

OS1
White

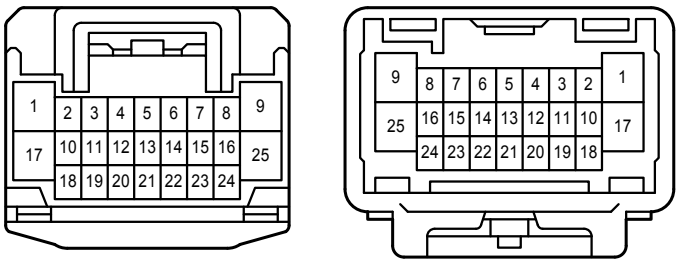

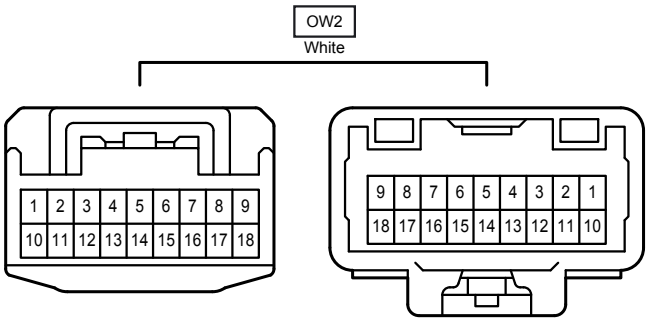
OW2
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10

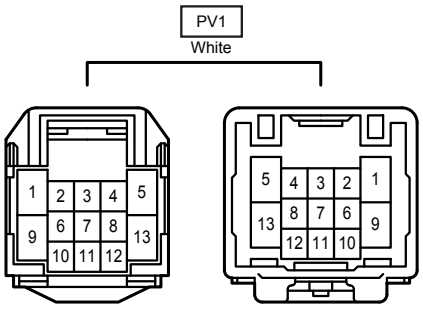
PV1
White
1 2 3 4 5
9 6 7 8 13
10 11 12
5 4 3 2 1
13 8 7 6 9
12 11 10

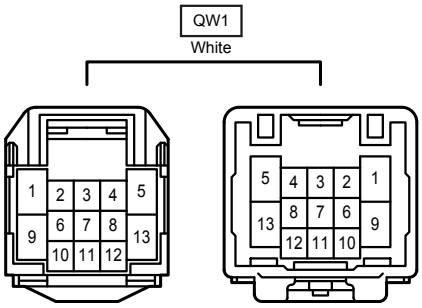
QW1
White
1 2 3 4 5
9 6 7 8 13
10 11 12
5 4 3 2 1
13 8 7 6 9
12 11 10

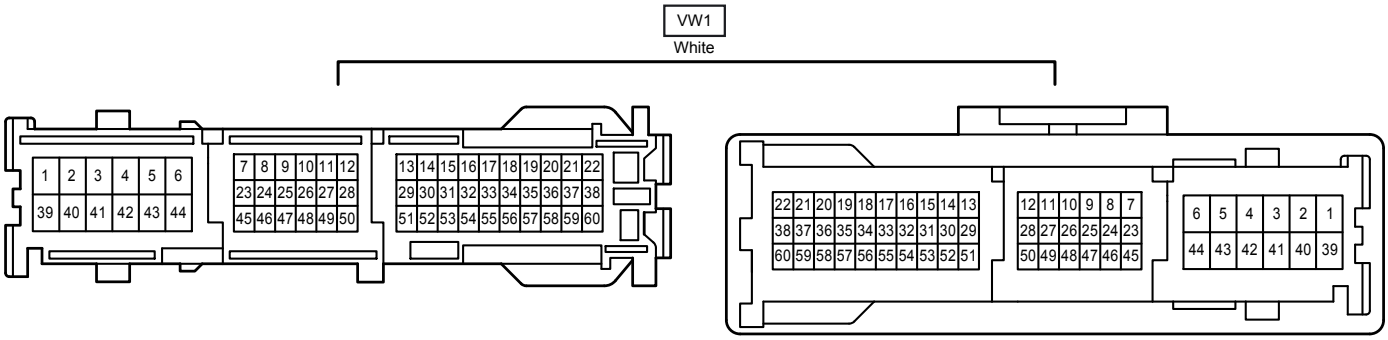
VW1
White
1 2 3 4 5 6
39 40 41 42 43 44
7 8 9 10 11 12
23 24 25 26 27 28
45 46 47 48 49 50
13 14 15 16 17 18 19 20 21 22
29 30 31 32 33 34 35 36 37 38
51 52 53 54 55 56 57 58 59 60
22 21 20 19 18 17 16 15 14 13
38 37 36 35 34 33 32 31 30 29
60 59 58 57 56 55 54 53 52 51
12 11 10 9 8 7
28 27 26 25 24 23
50 49 48 47 46 45
6 5 4 3 2 1
44 43 42 41 40 39