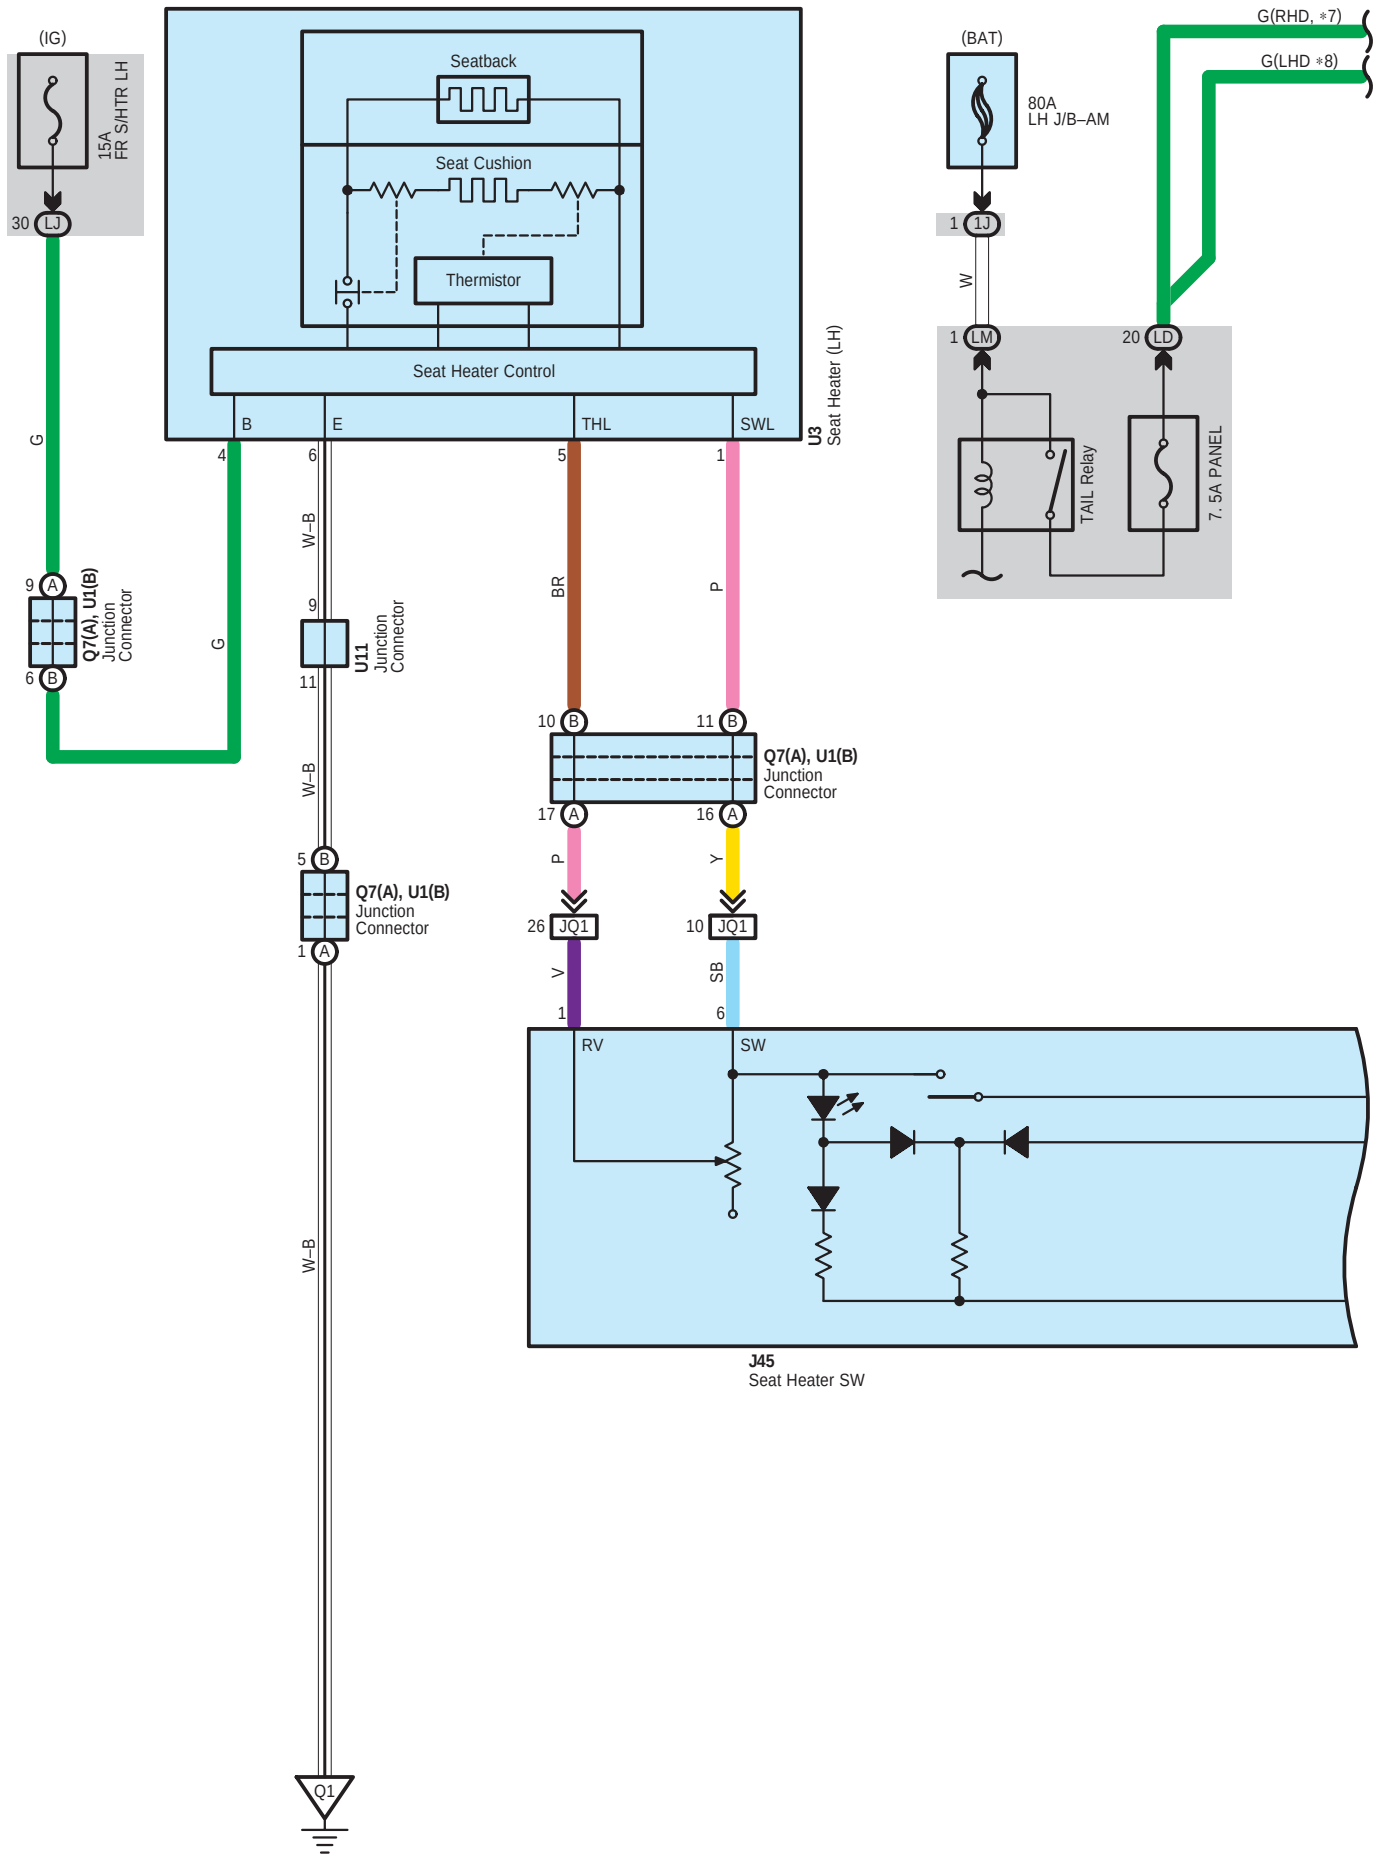
(IG)
15A
FR S/HTR LH
30 LJ
Seatback
Seat Cushion
Thermistor
Seat Heater Control
B
E
THL
SWL
U3
Seat Heater (LH)
4
6
5
1
G
W–B
BR
P
9 A
6 B
Q7(A), U1(B)
Junction
Connector
9
11
U11
Junction
Connector
10 B
11 B
Q7(A), U1(B)
Junction
Connector
17 A
16 A
5 B
1 A
Q7(A), U1(B)
Junction
Connector
Y
26 JQ1
10 JQ1
V
SB
1
6
RV
SW
J45
Seat Heater SW
Q1
(BAT)
80A
LH J/B–AM
1 1J
W
1 LM
20 LD
TAIL Relay
7. 5A PANEL
G(RHD, *7)
G(LHD *8)

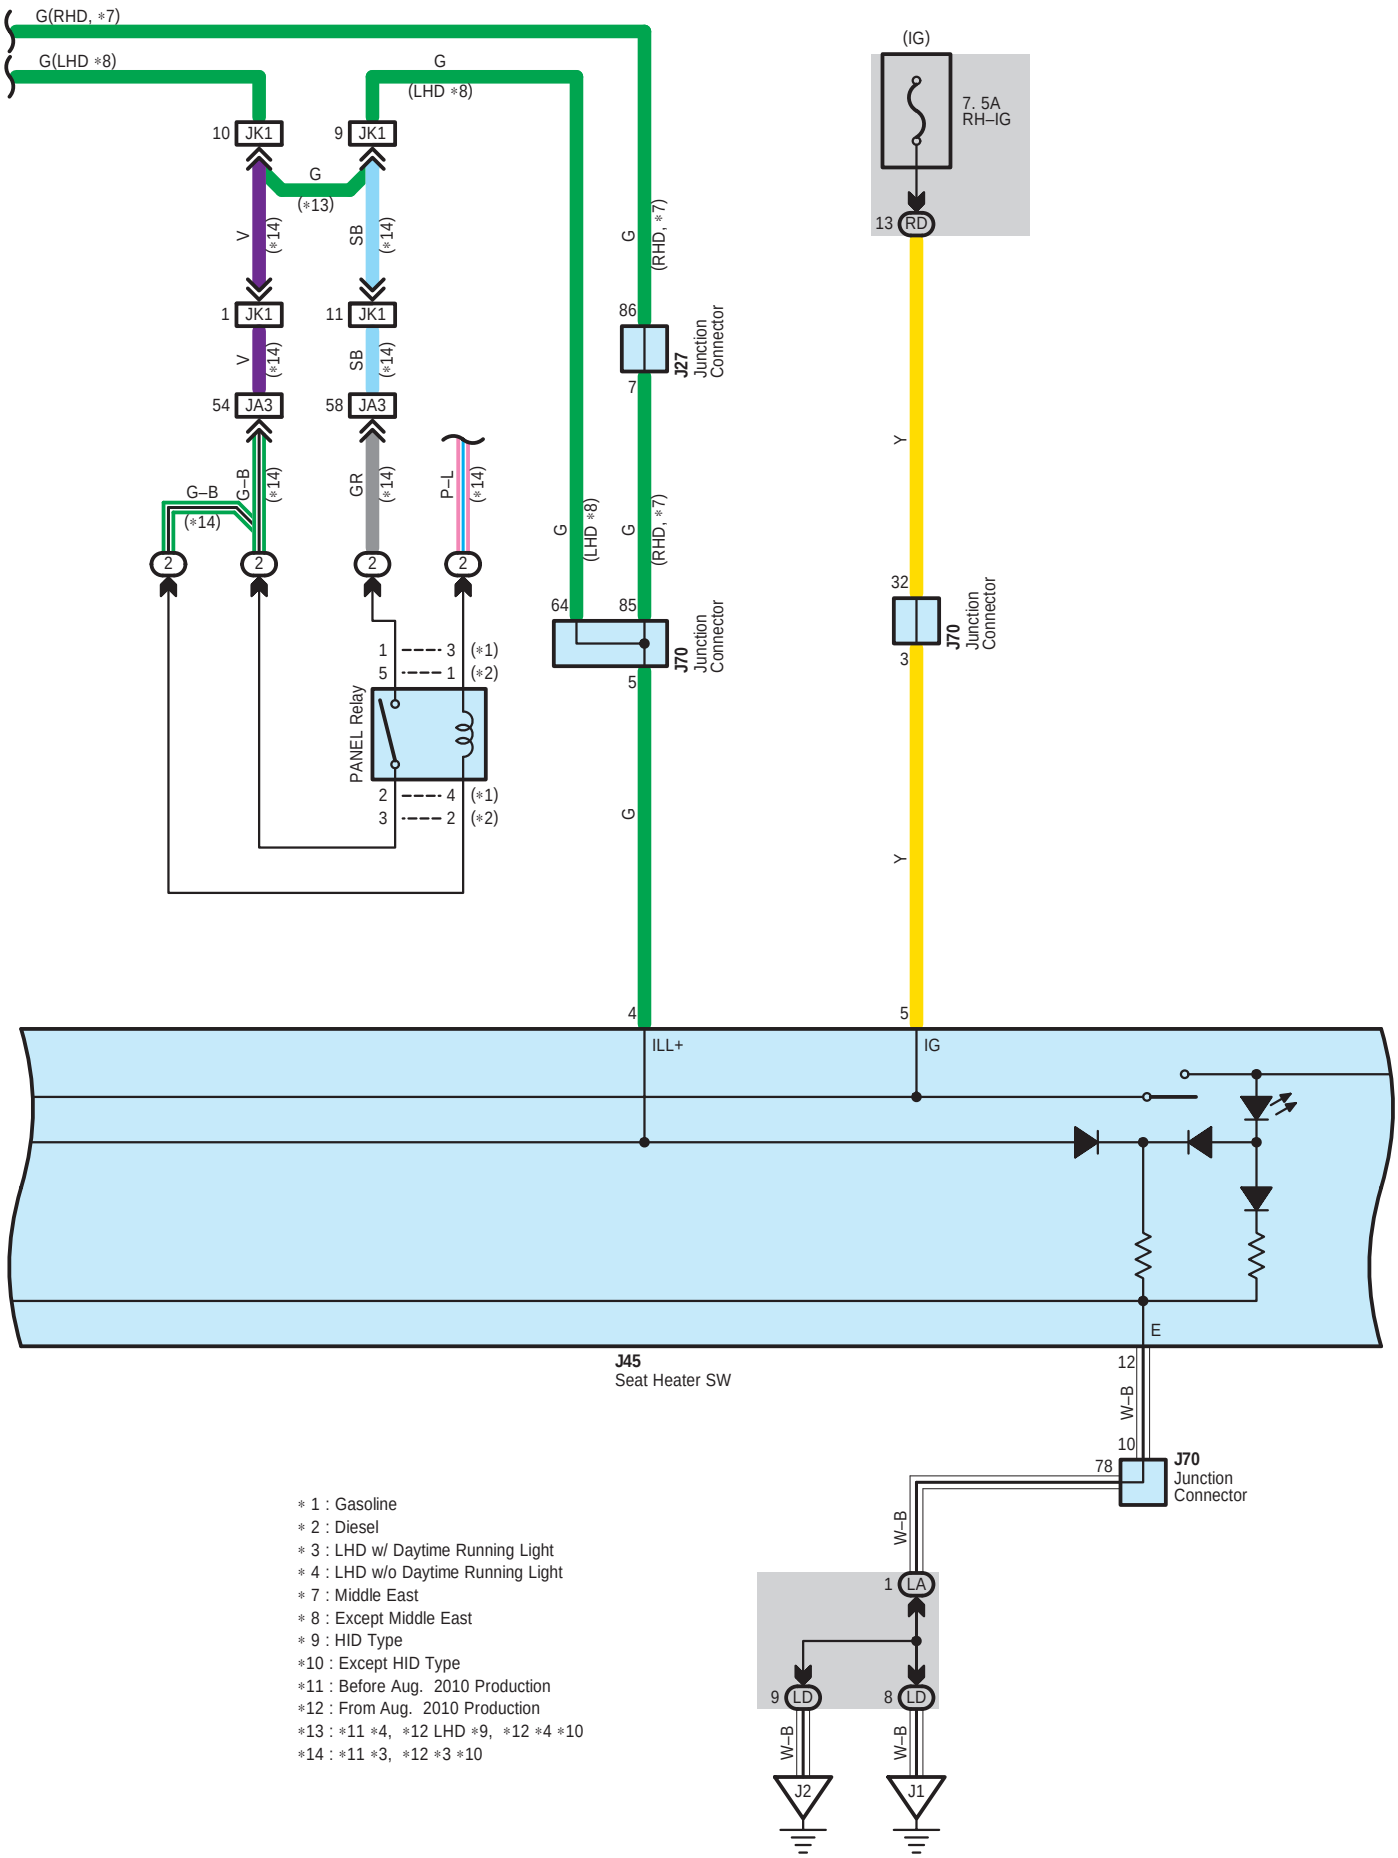

∗ 1 : Gasoline
∗ 2 : Diesel
∗ 3 : LHD w/ Daytime Running Light
∗ 4 : LHD w/o Daytime Running Light
∗ 7 : Middle East
∗ 8 : Except Middle East
∗ 9 : HID Type
∗10 : Except HID Type
∗11 : Before Aug. 2010 Production
∗12 : From Aug. 2010 Production
∗13 : ∗11 ∗4, ∗12 LHD ∗9, ∗12 ∗4 ∗10
∗14 : ∗11 ∗3, ∗12 ∗3 ∗10

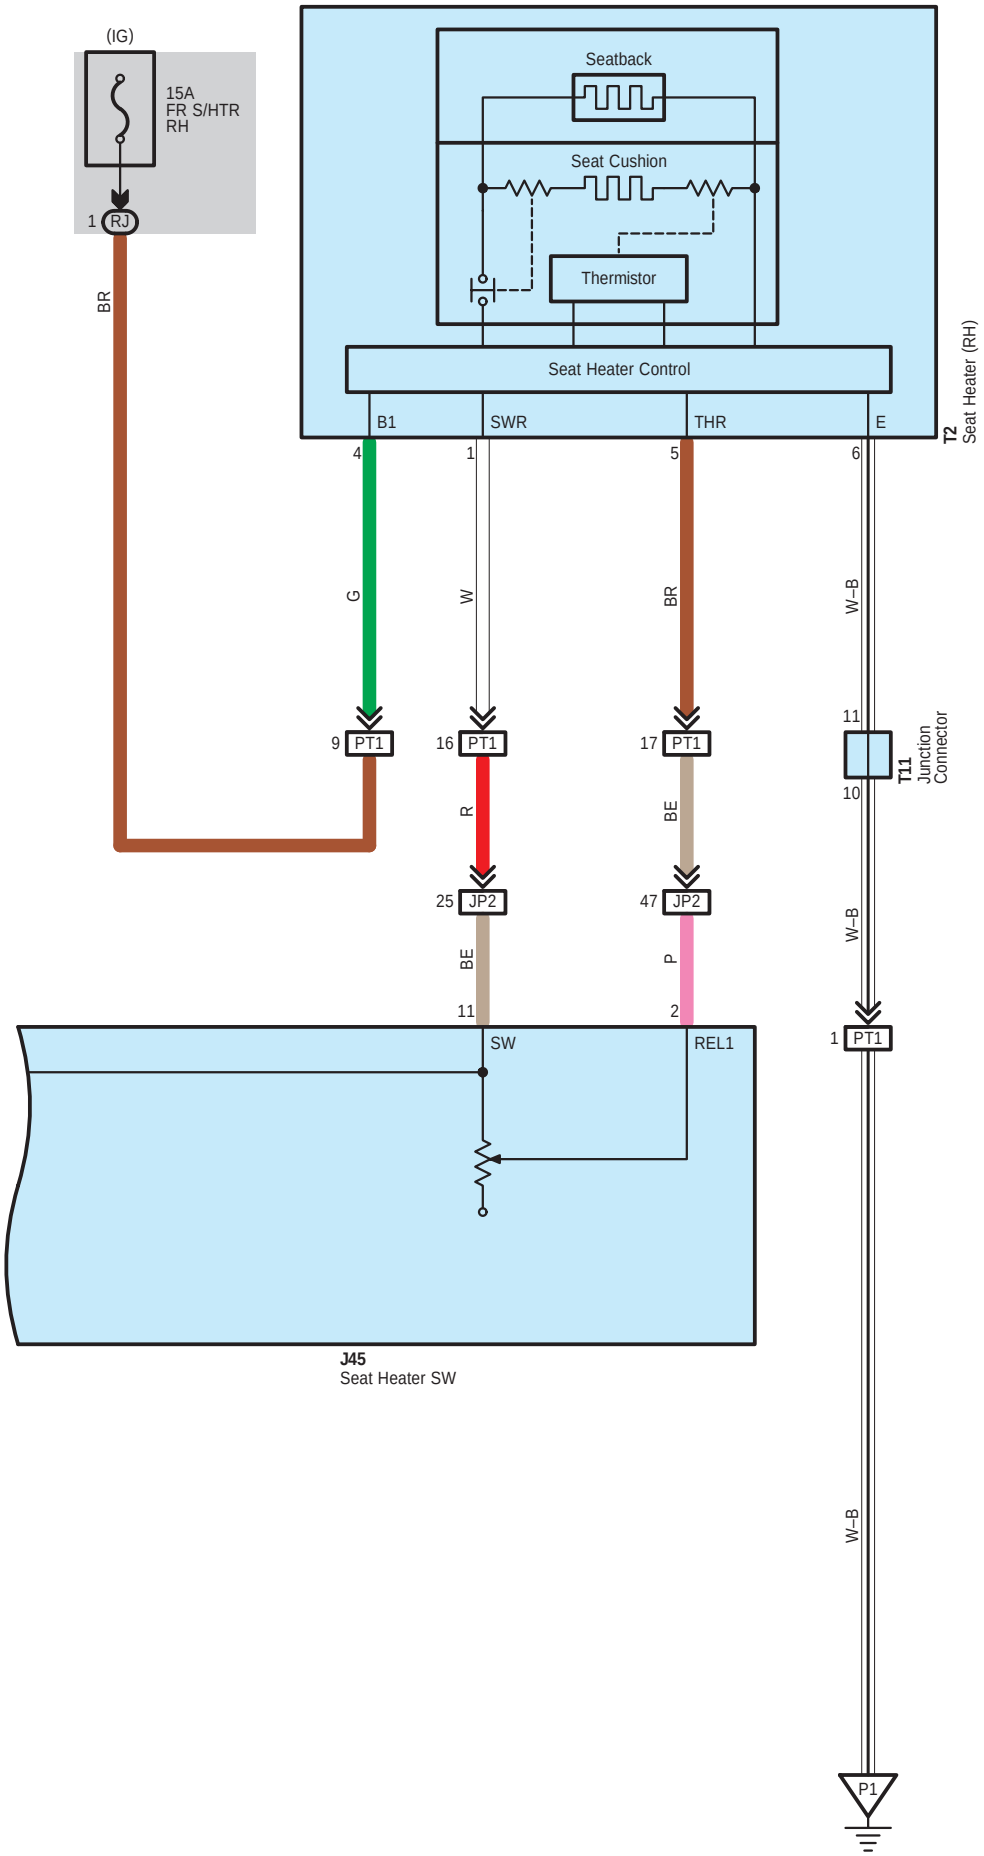
(IG)
15A
FR S/HTR
RH
1 RJ
BR
Seatback
Seat Cushion
Thermistor
Seat Heater Control
B1
SWR
THR
E
T2
Seat Heater (RH)
4
1
5
6
G
W
BR
W–B
9 PT1
16 PT1
17 PT1
11
10
T11
Junction
Connector
R
BE
25 JP2
47 JP2
W–B
BE
P
11
2
1 PT1
SW
REL1
J45
Seat Heater SW
W–B
P1

J 27
White

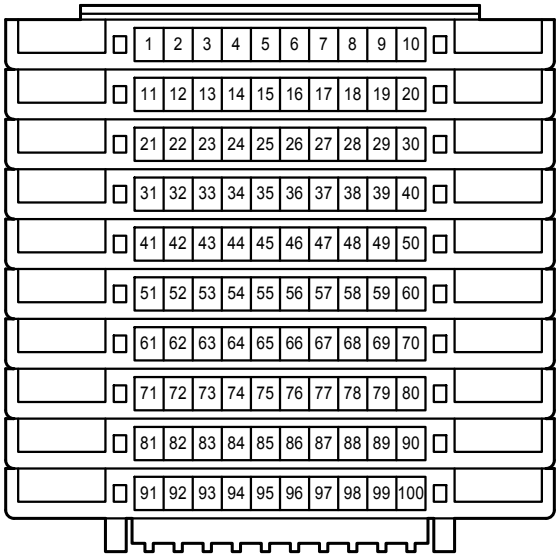

J 45
Black

J 70
White

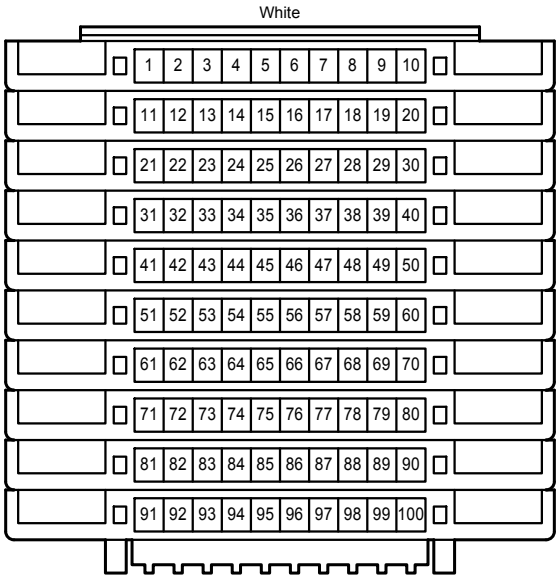

Q 7
White

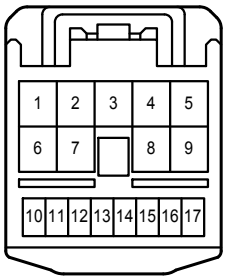

T 2
White

T 11
White

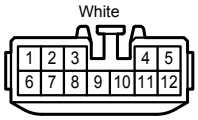

U 1
White

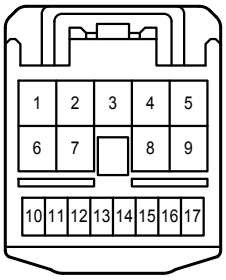

U 3
White

U 11
White

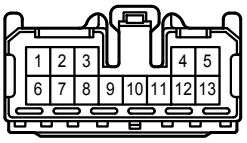

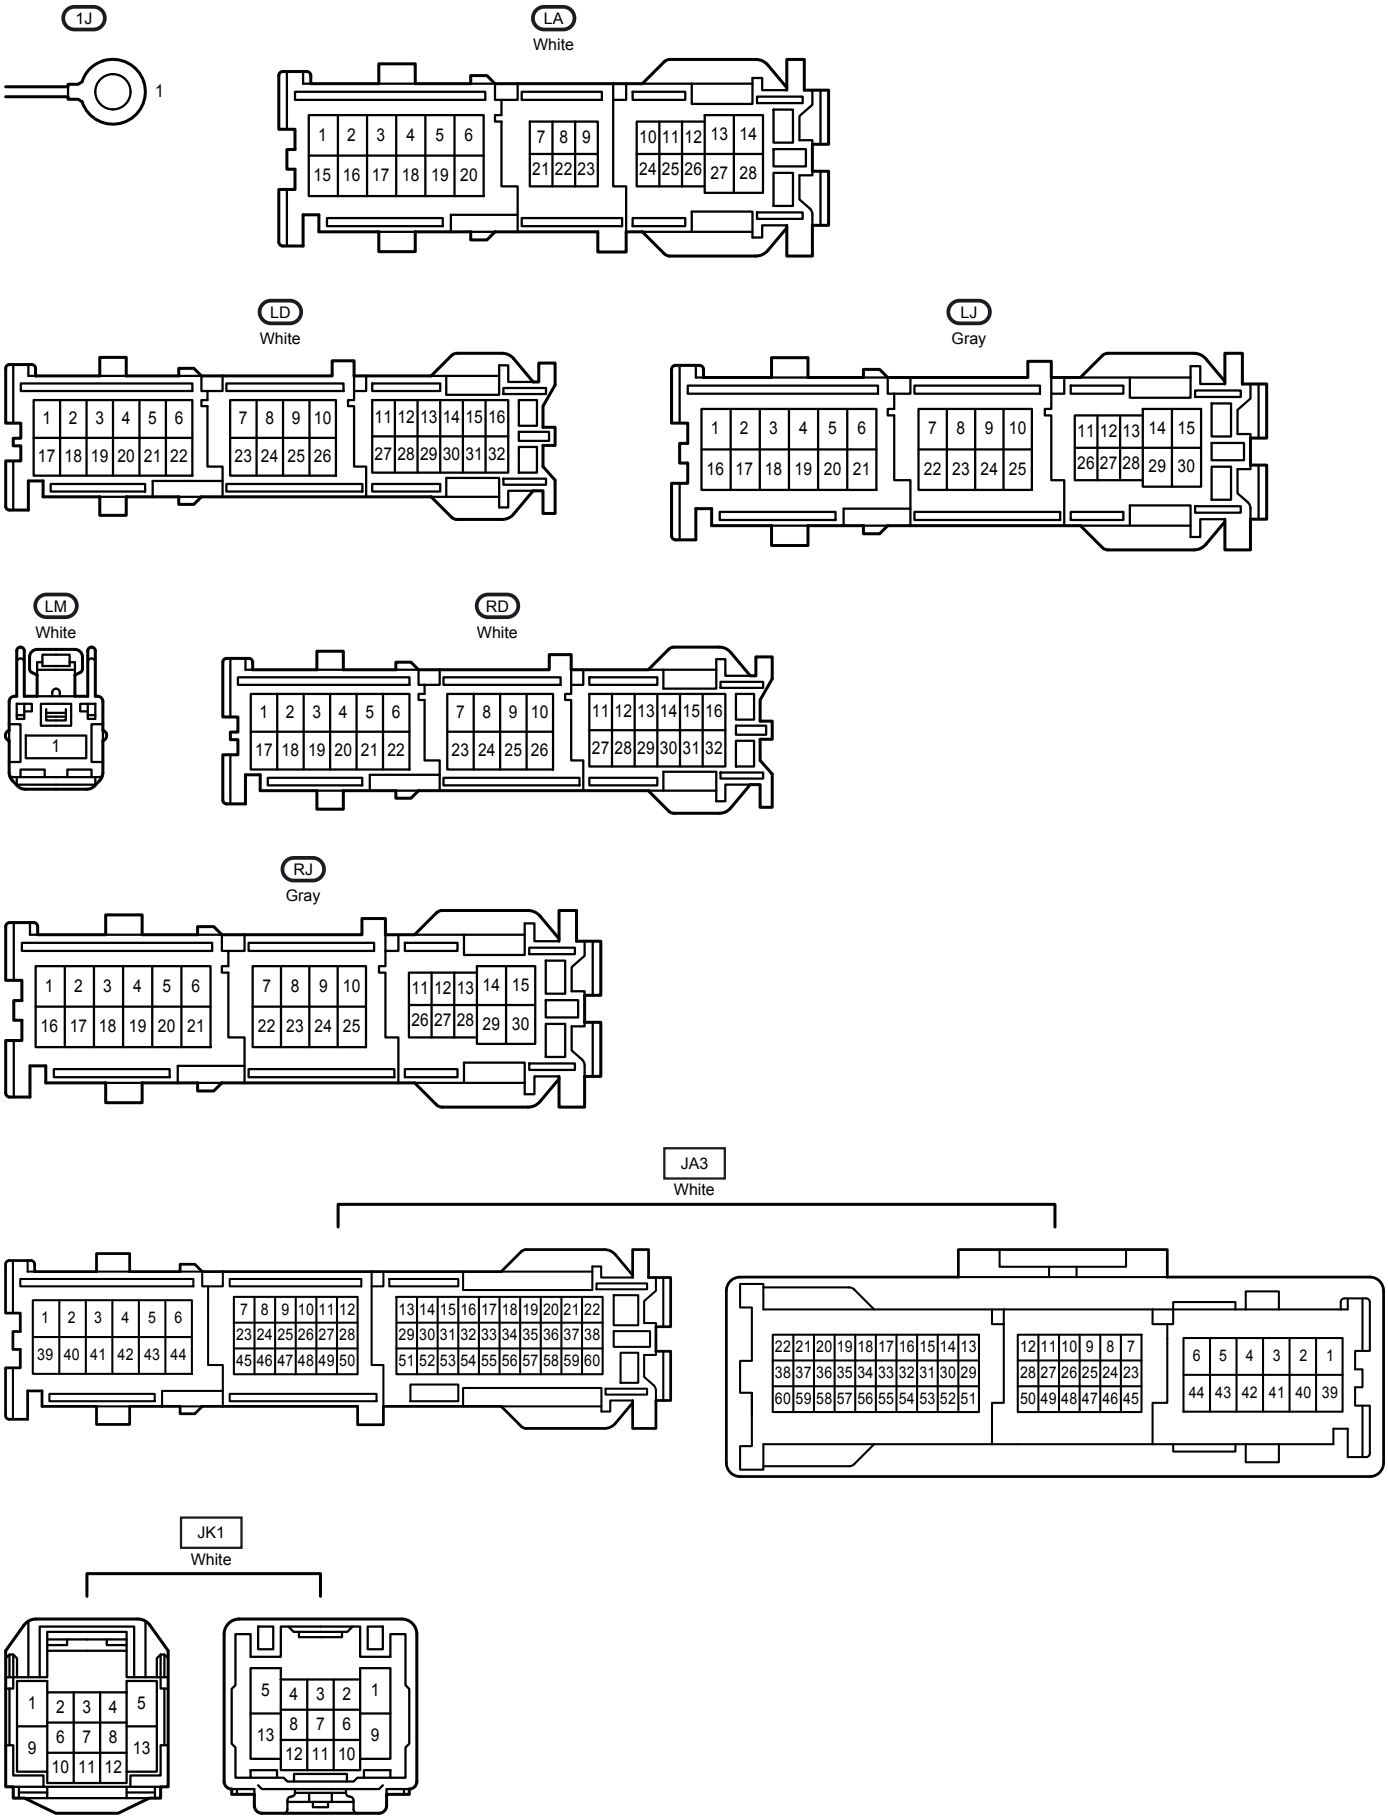
1J
1
LA
White
LD
White
LJ
Gray
LM
White
RD
White
RJ
Gray
JA3
White
JK1
White

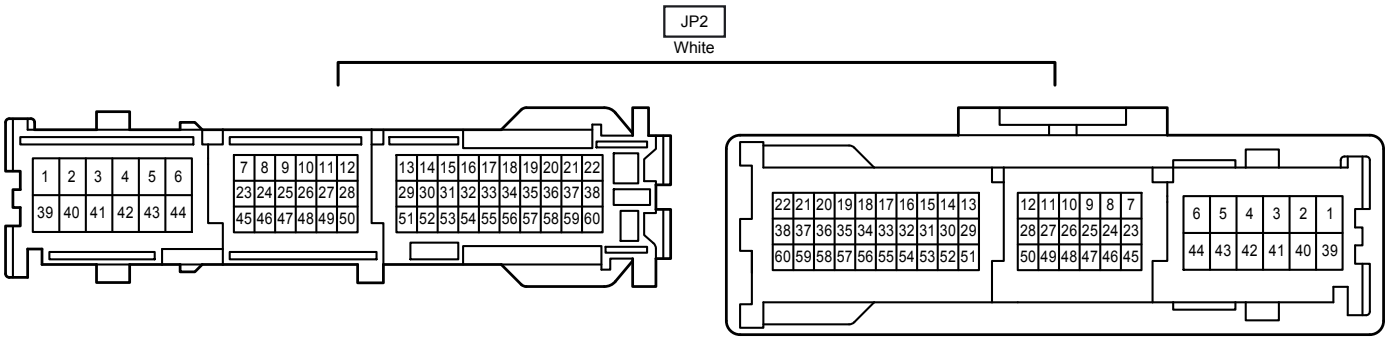
JP2
White
1 2 3 4 5 6
39 40 41 42 43 44
7 8 9 10 11 12
23 24 25 26 27 28
45 46 47 48 49 50
13 14 15 16 17 18 19 20 21 22
29 30 31 32 33 34 35 36 37 38
51 52 53 54 55 56 57 58 59 60
22 21 20 19 18 17 16 15 14 13
38 37 36 35 34 33 32 31 30 29
60 59 58 57 56 55 54 53 52 51
12 11 10 9 8 7
28 27 26 25 24 23
50 49 48 47 46 45
6 5 4 3 2 1
44 43 42 41 40 39

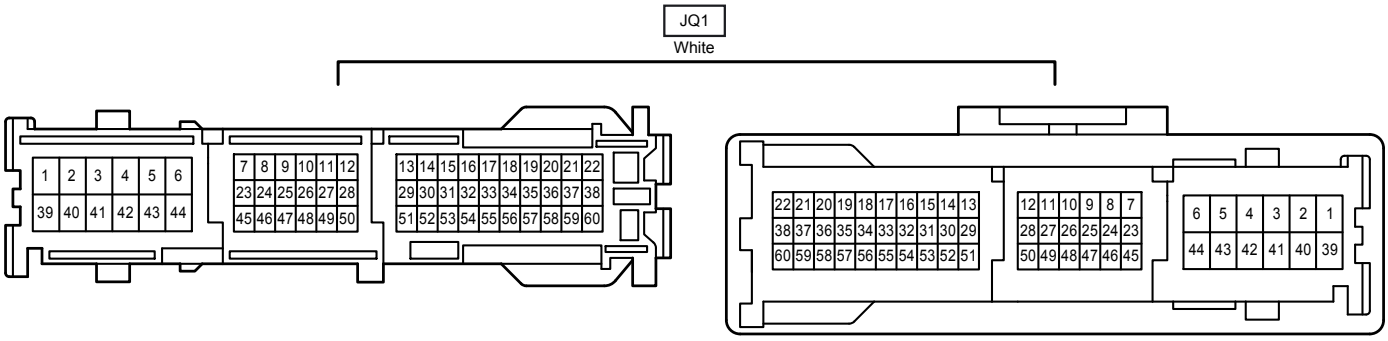
JQ1
White
1 2 3 4 5 6
39 40 41 42 43 44
7 8 9 10 11 12
23 24 25 26 27 28
45 46 47 48 49 50
13 14 15 16 17 18 19 20 21 22
29 30 31 32 33 34 35 36 37 38
51 52 53 54 55 56 57 58 59 60
22 21 20 19 18 17 16 15 14 13
38 37 36 35 34 33 32 31 30 29
60 59 58 57 56 55 54 53 52 51
12 11 10 9 8 7
28 27 26 25 24 23
50 49 48 47 46 45
6 5 4 3 2 1
44 43 42 41 40 39

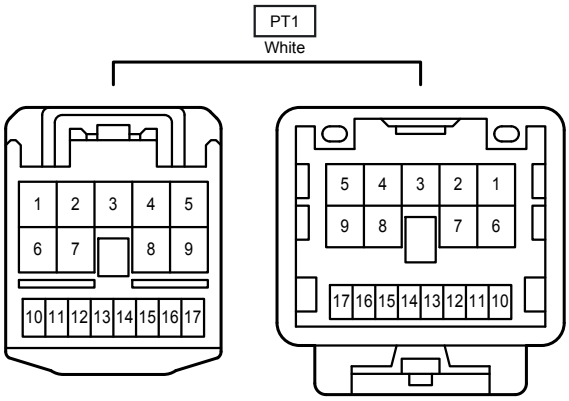
PT1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10