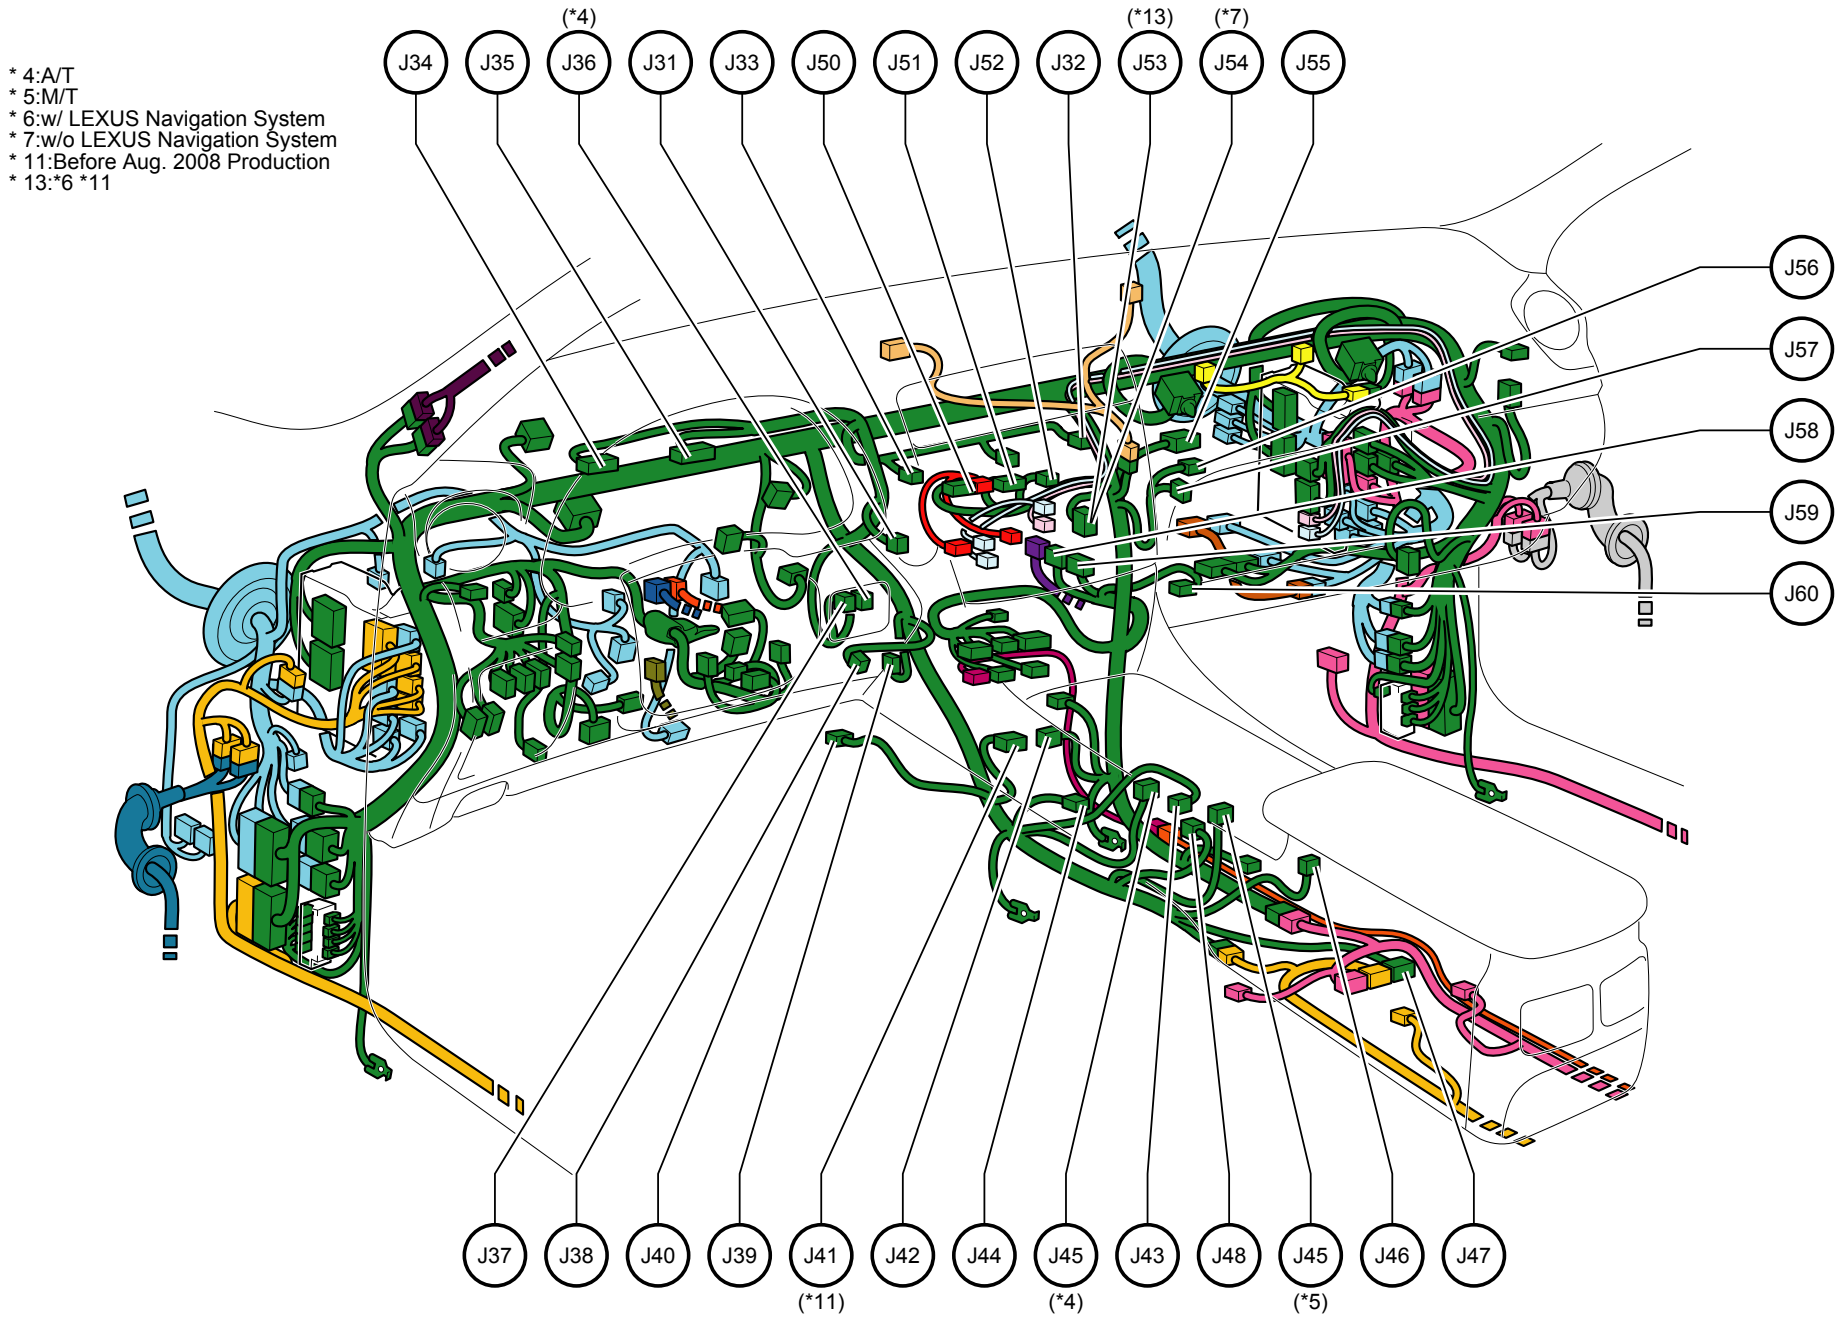
* 4:A/T
* 5:M/T
* 6:w/ LEXUS Navigation System
* 7:w/o LEXUS Navigation System
* 11:Before Aug. 2008 Production
* 13:*6 *11
J34
J35
(*4)
J36
J31
J33
J50
J51
J52
J32
(*13)
J53
(*7)
J54
J55
J56
J57
J58
J59
J60
J37
J38
J40
J39
J41
(*11)
J42
J44
J45
(*4)
J43
J48
J45
(*5)
J46
J47

J 31 Power SW
J 32 Register Illumination (Center RH)
J 33 Register Illumination (Center LH)
J 34 Combination Meter
J 35 Combination Meter
J 36 ECT Pattern Select SW
J 37 Traction Control SW
J 38 A/C Room Temp. Sensor
J 39 Clearance Warning Buzzer
J 40 Heated Oxygen Sensor (Bank 2 Sensor 2)
J 41 Yaw Rate Sensor
J 42 Cigarette Lighter
J 43 Transmission Control SW
J 44 A/T Shift Lever Illumination
J 45 Seat Heater SW
J 46 Console Box Lamp
J 47 Airbag Sensor Assembly Center
J 48 Shift Lock Control ECU
J 50 Multi-Display
J 51 Multi-Display
J 52 Multi-Display
J 53 Clock Assembly
J 54 Integration Control and Panel Assembly
J 55 Power Source Control ECU
J 56 Glove Box Lamp
J 57 Luggage Compartment Door Opener SW (Main)
J 58 A/C Amplifier
J 59 A/C Amplifier
J 60 Foot Lamp (RH)

J 31
Black

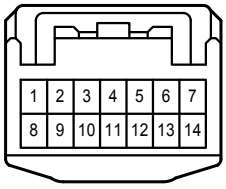

J 32
White

J 33
White



J 34
Black

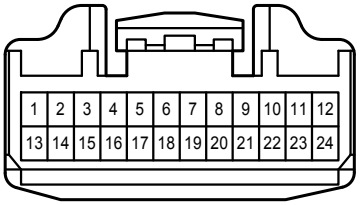

J 35
Black

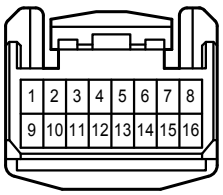

J 36
Black

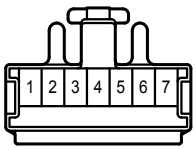

(w/ Snow Mode SW, Before Aug. 2011 Production)

J 36
White

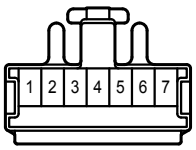

(w/o Snow Mode SW)

J 36
Blue

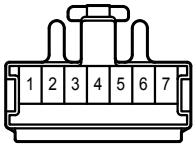

(From Aug. 2011 Production)

J 37
White



(Before Jul. 2006 Production)

J 37
Black



(From Jul. 2006 Production)

J 38
Black



J 39
Black



J 40
Dark Gray

J 41
Black

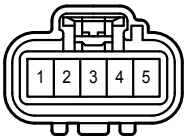

J 42
White

J 43
White

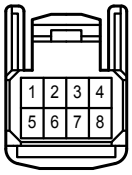

J 44
White

J 45
Black

J 46
White



J 47
Yellow

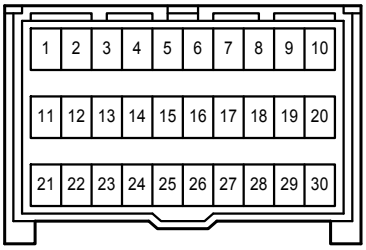

J 48
White

J 50
White

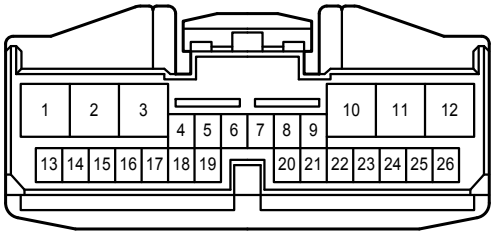

J 51
White

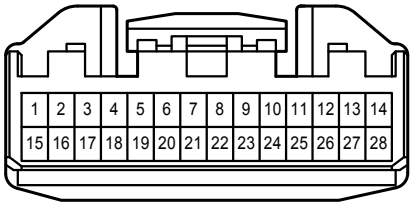

J 52
Blue

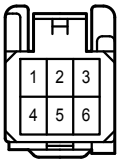

J 53
White

J 54
White

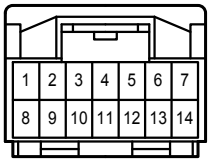

J 55
White

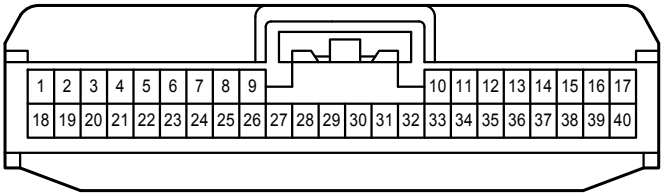

J 56
White



J 57
Blue



J 58
White

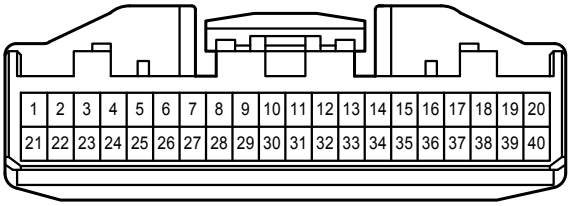

J 59
White

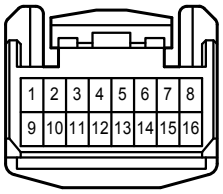

J 60
White