8 IS 300C / IS 250C

(Cont. next page)

Engine Control (4GR–FSE)

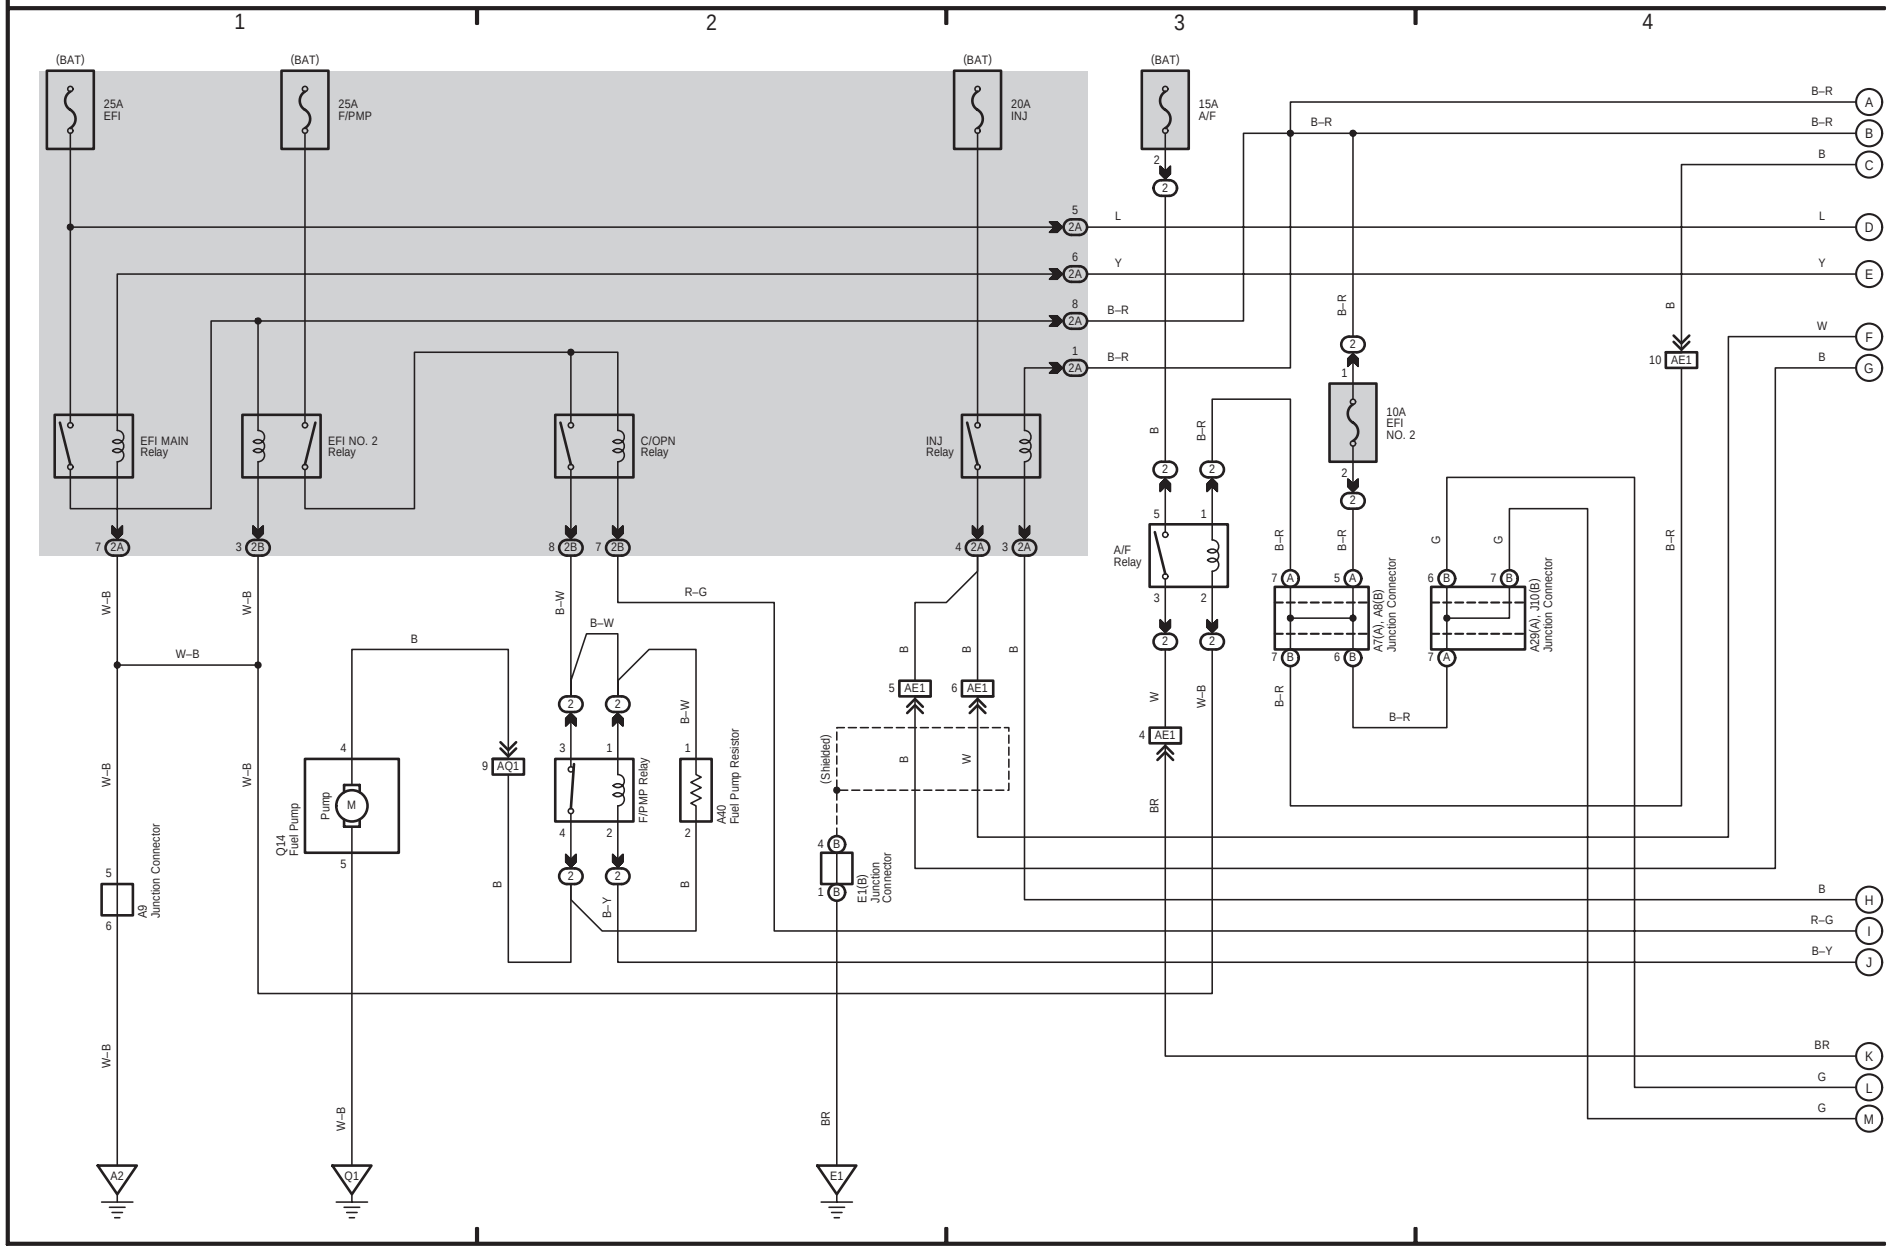

(Cont. next page)

Engine Control (4GR–FSE)

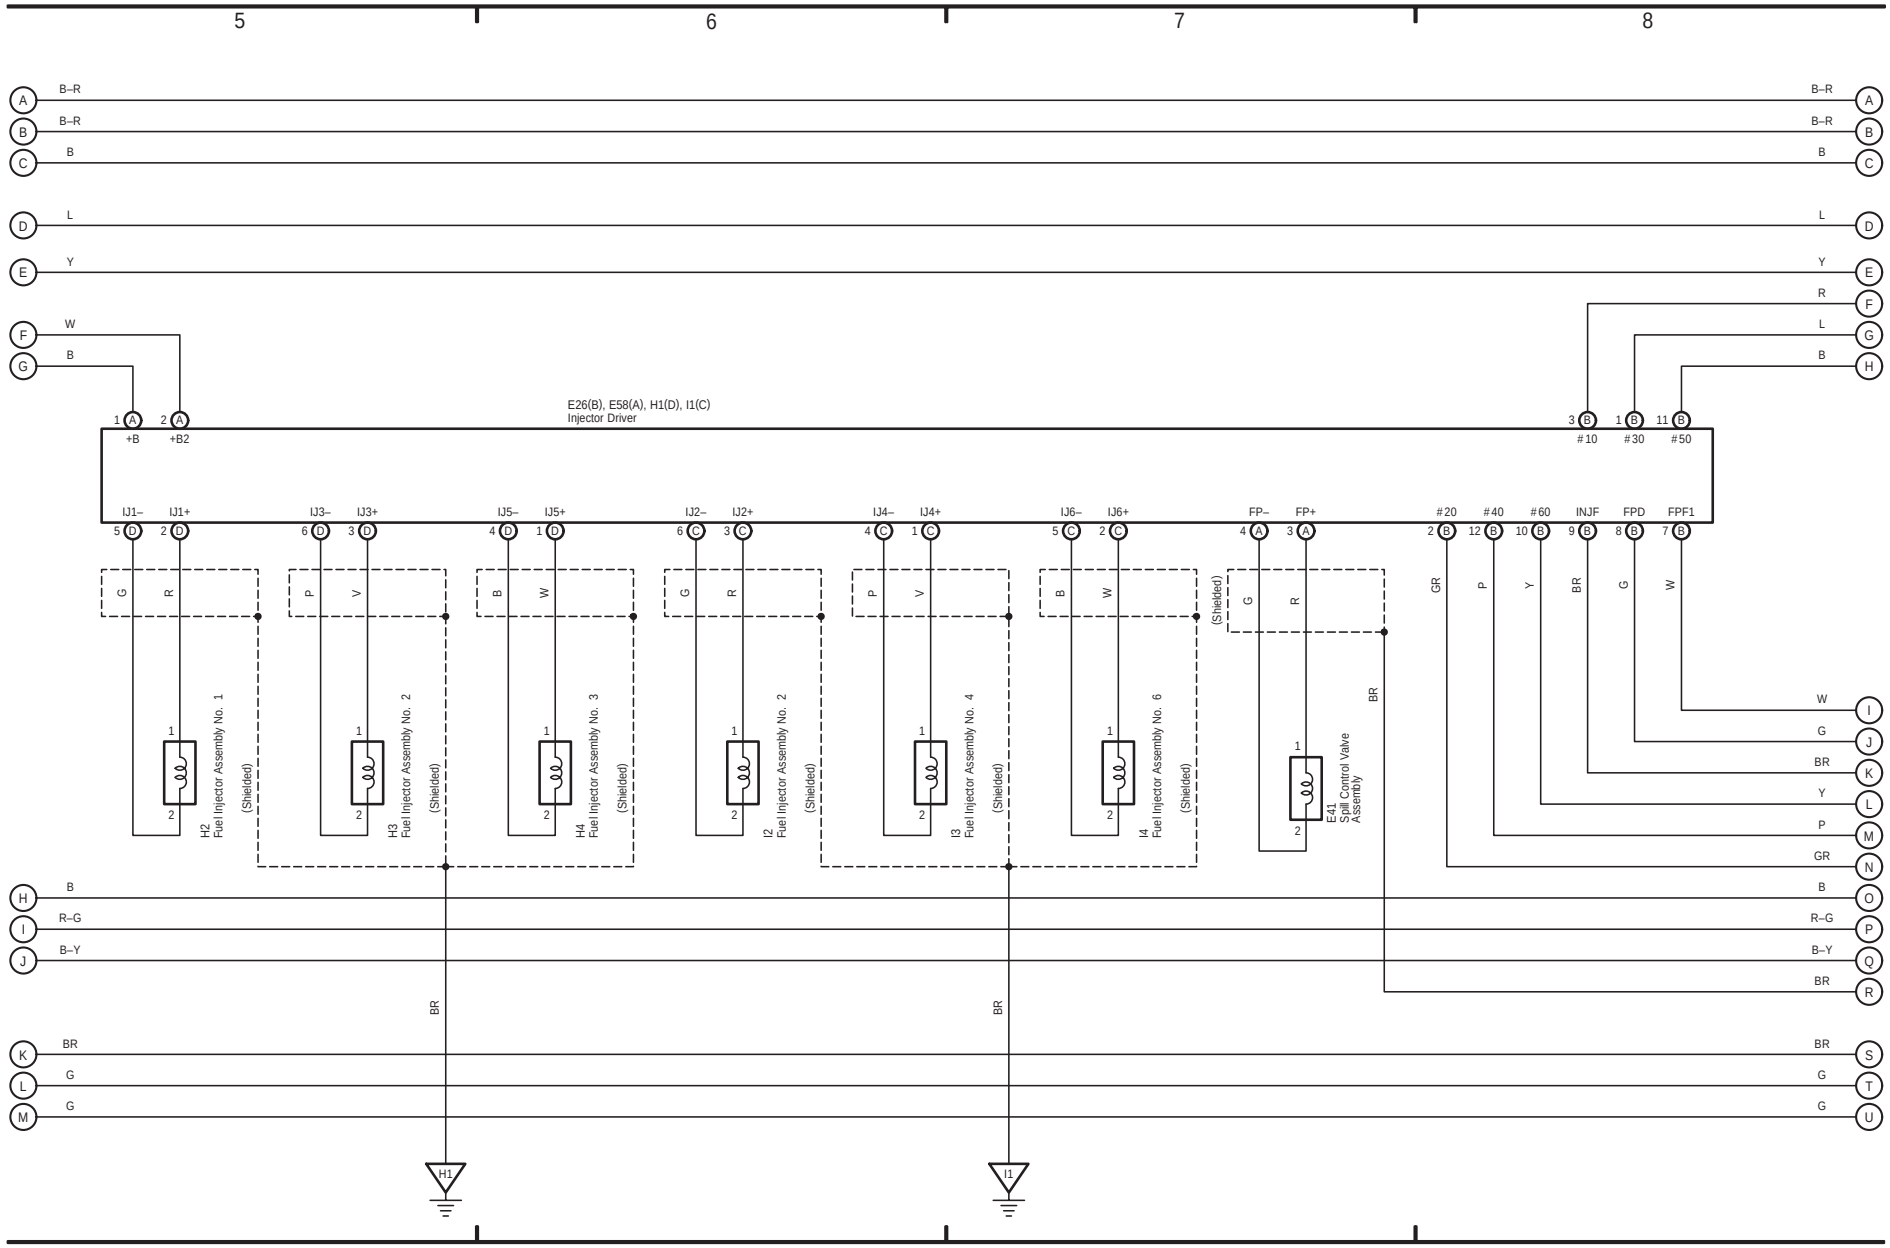

8 IS 300C / IS 250C (Cont' d)

(Cont. next page)

Engine Control (4GR–FSE)

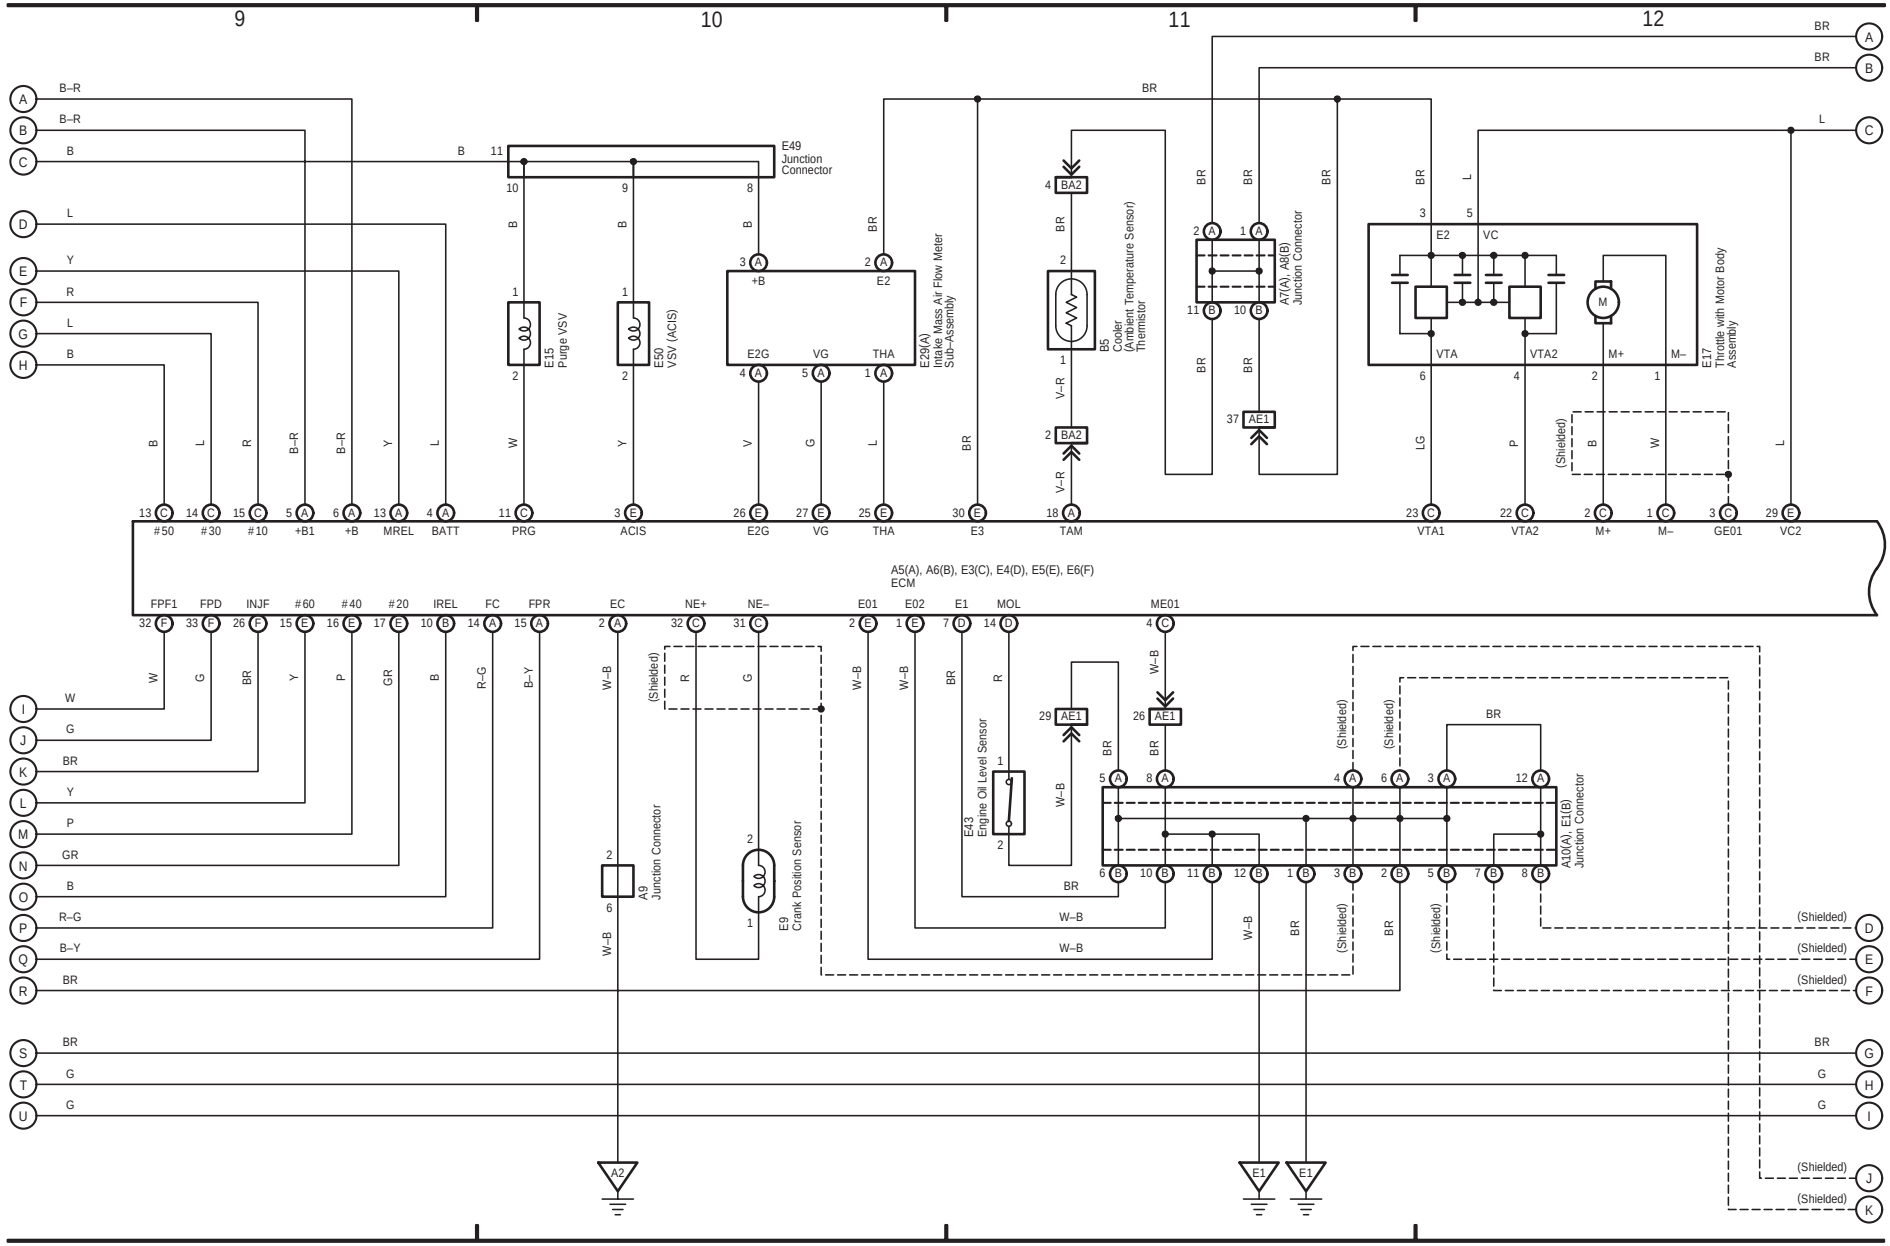

(Cont. next page)

Engine Control (4GR–FSE)

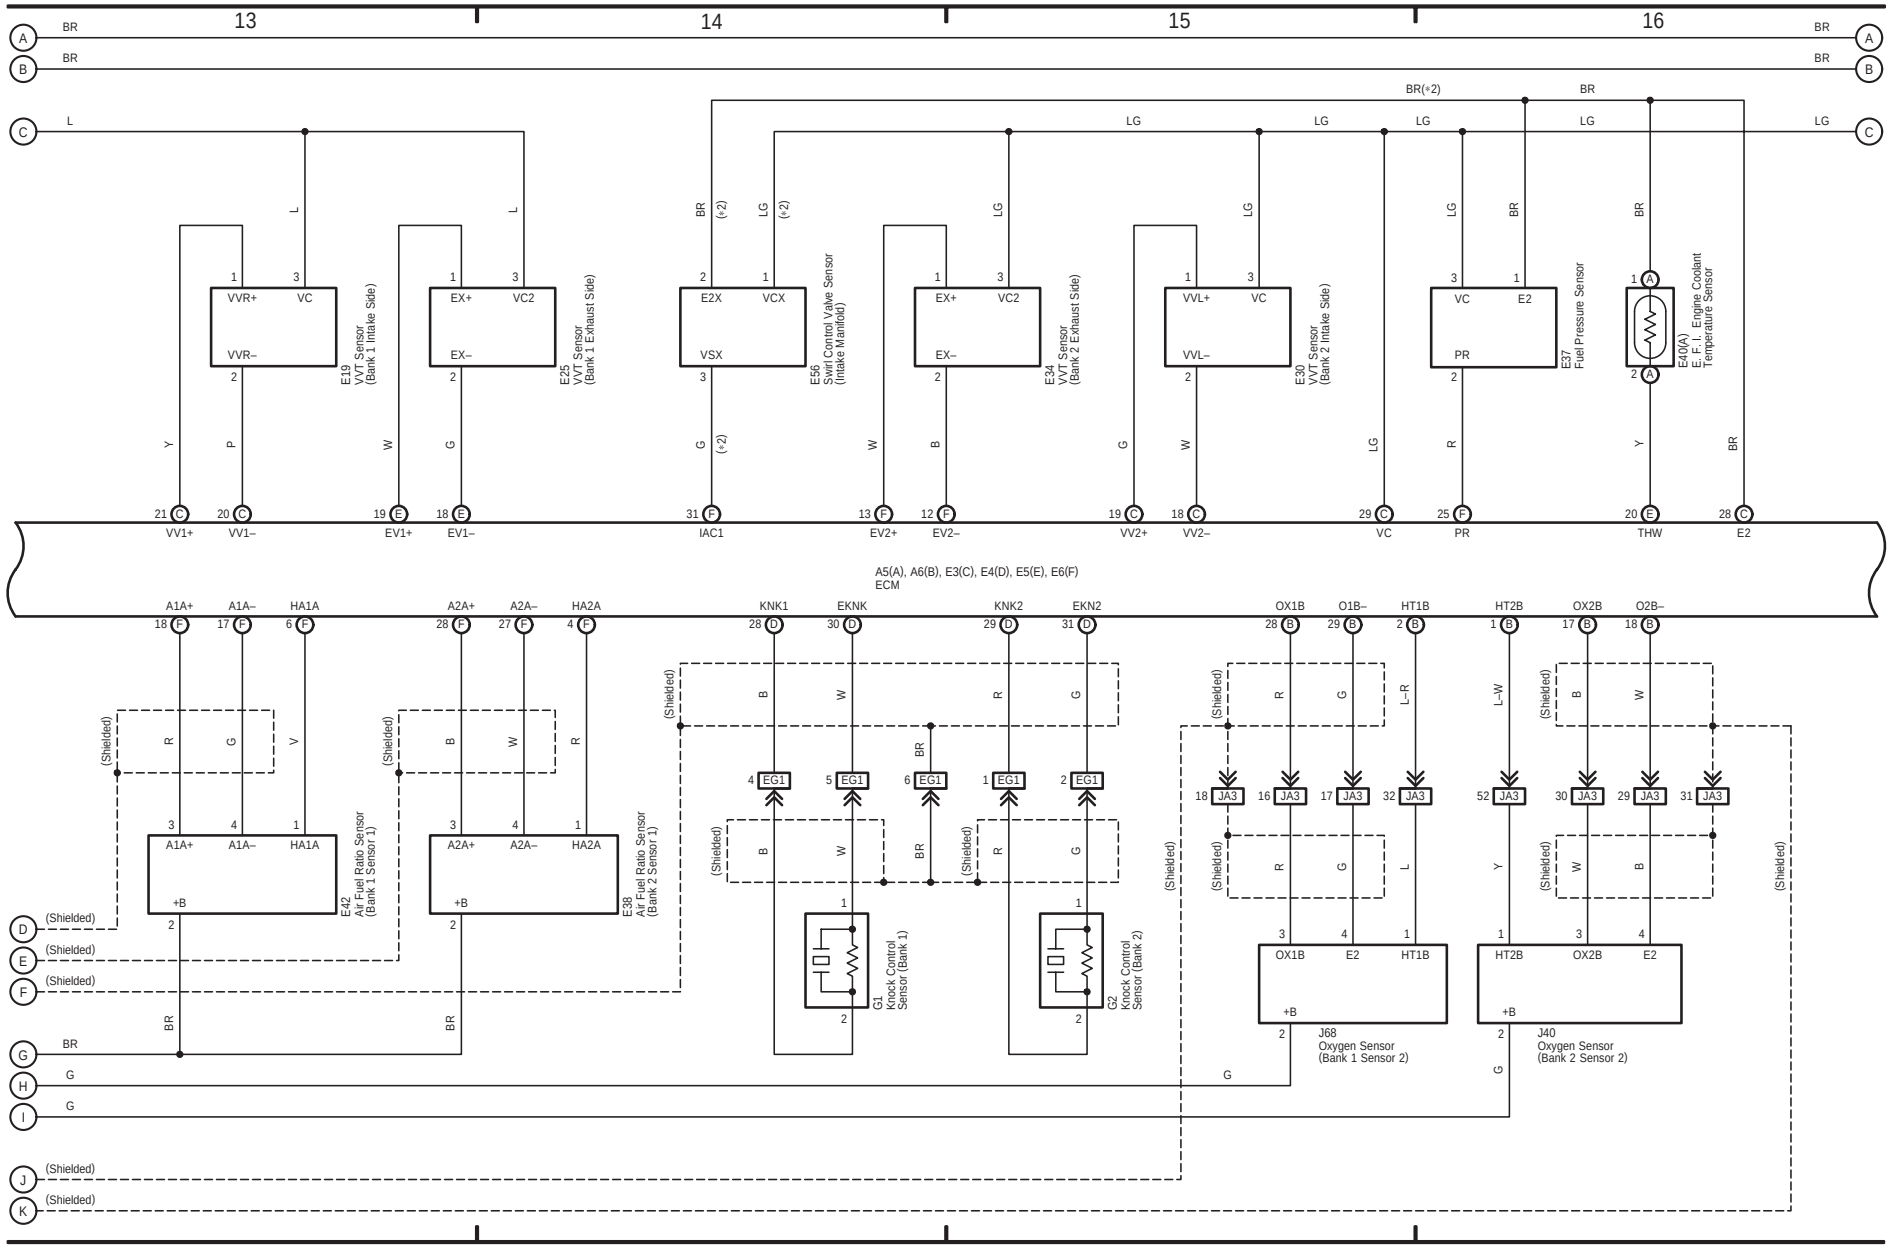

8 IS 300C / IS 250C (Cont' d)

(Cont. next page)

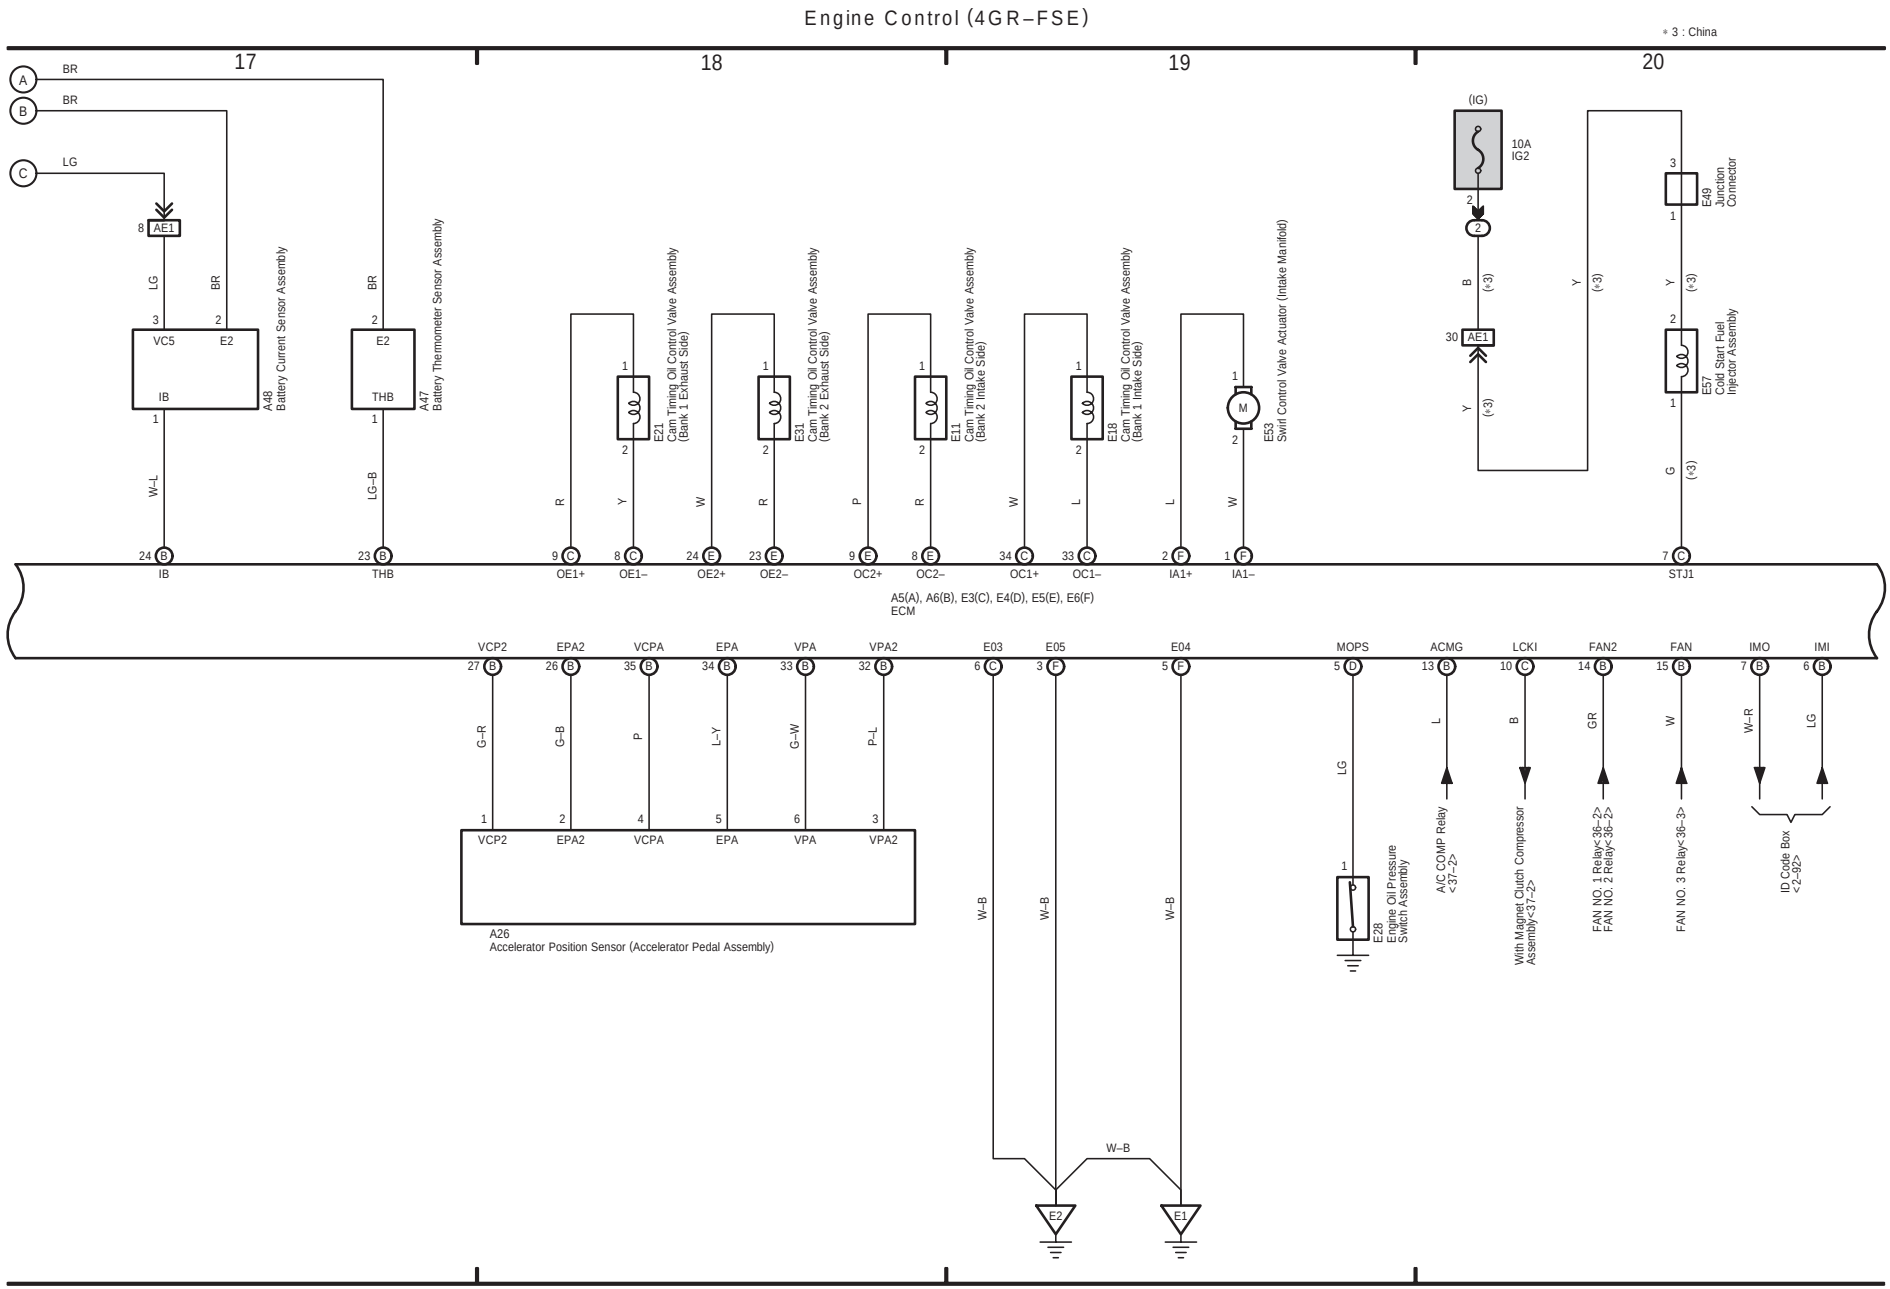

(Cont. next page)

Cruise Control (4GR–FSE) or Dynamic Radar Cruise Control (4GR–FSE)

∗1 : w/ Dynamic Radar Cruise Control

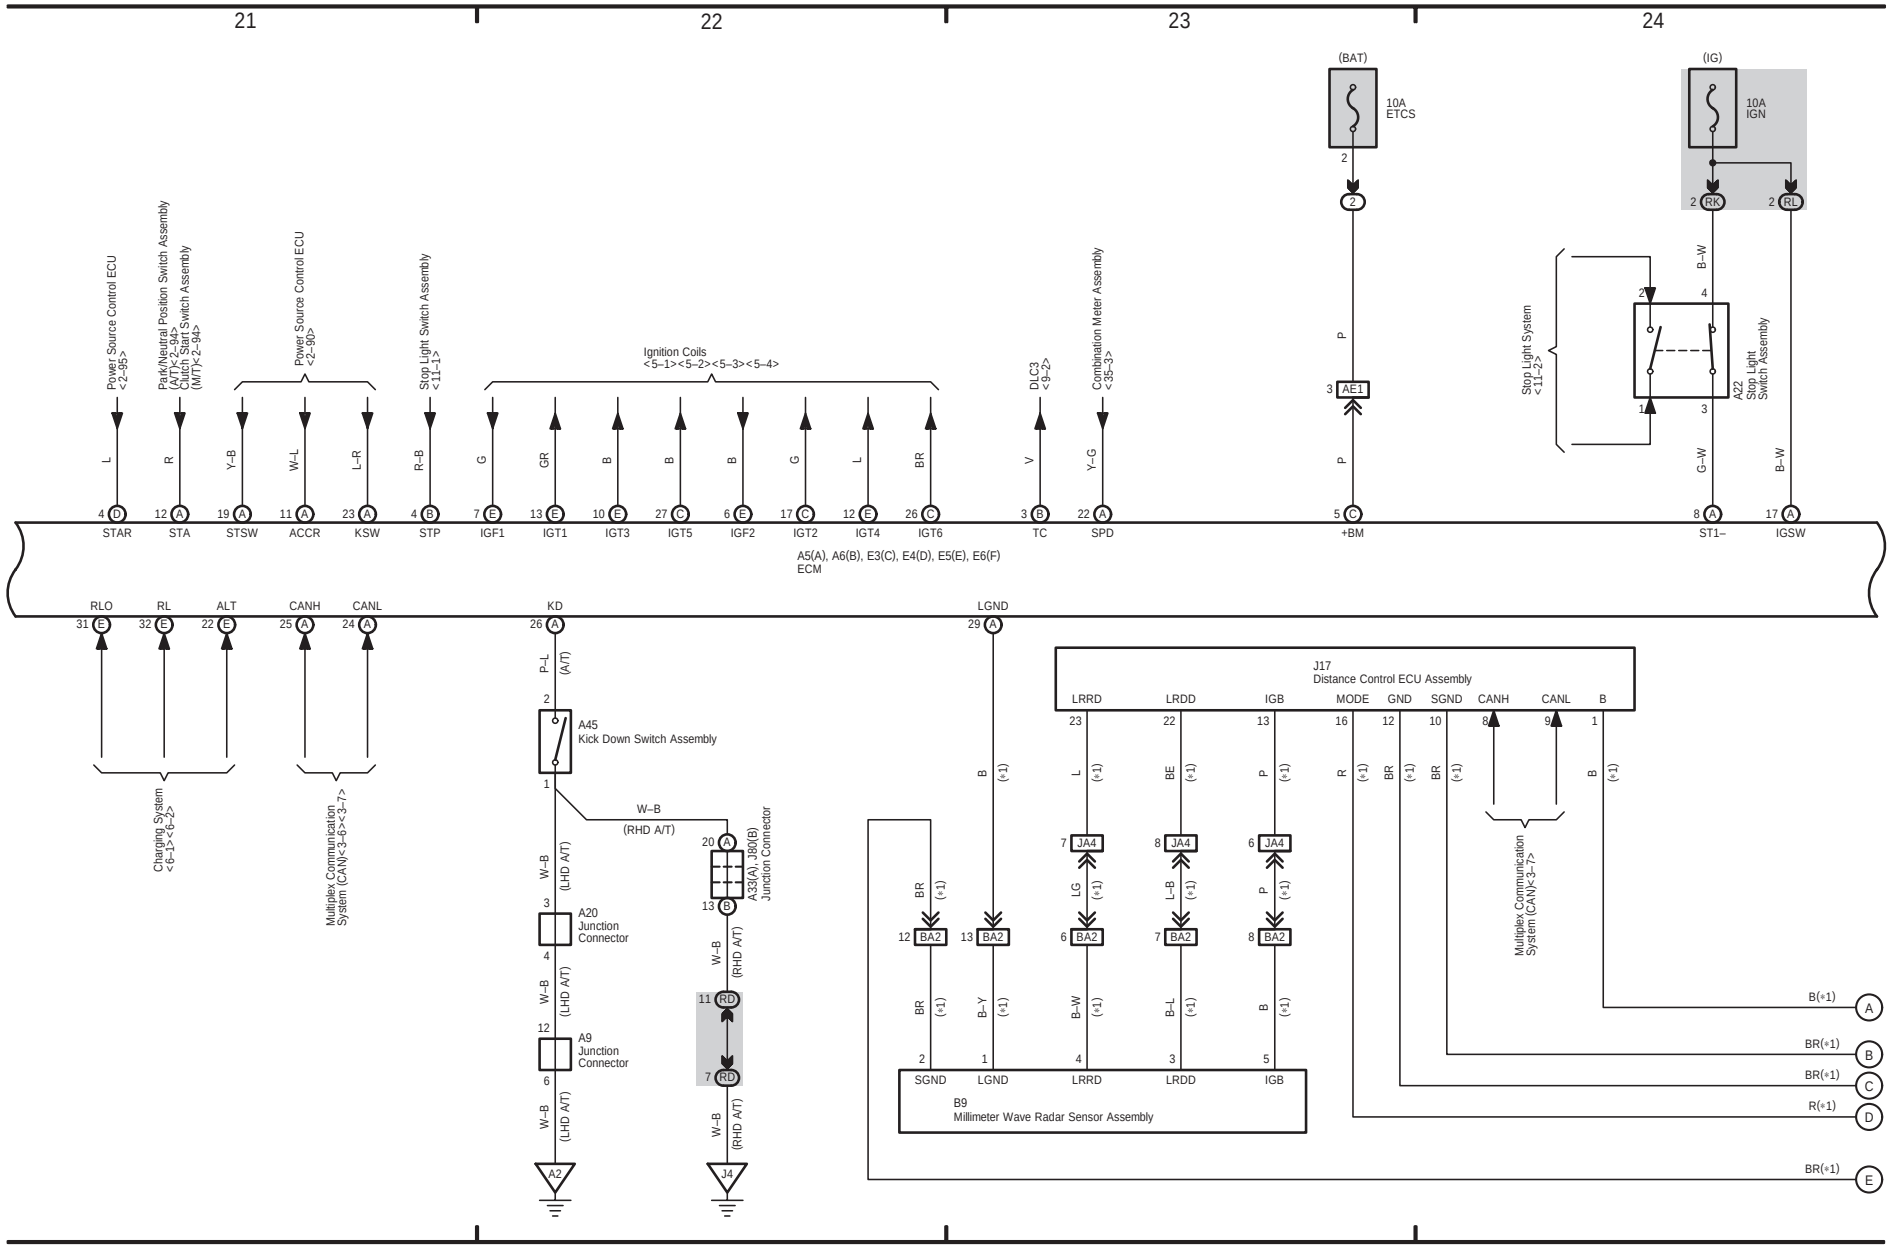

8 IS 300C / IS 250C (Cont' d)

(Cont. next page)

Cruise Control (4GR–FSE) or Dynamic Radar Cruise Control (4GR–FSE)

∗1 : w/ Dynamic Radar Cruise Control

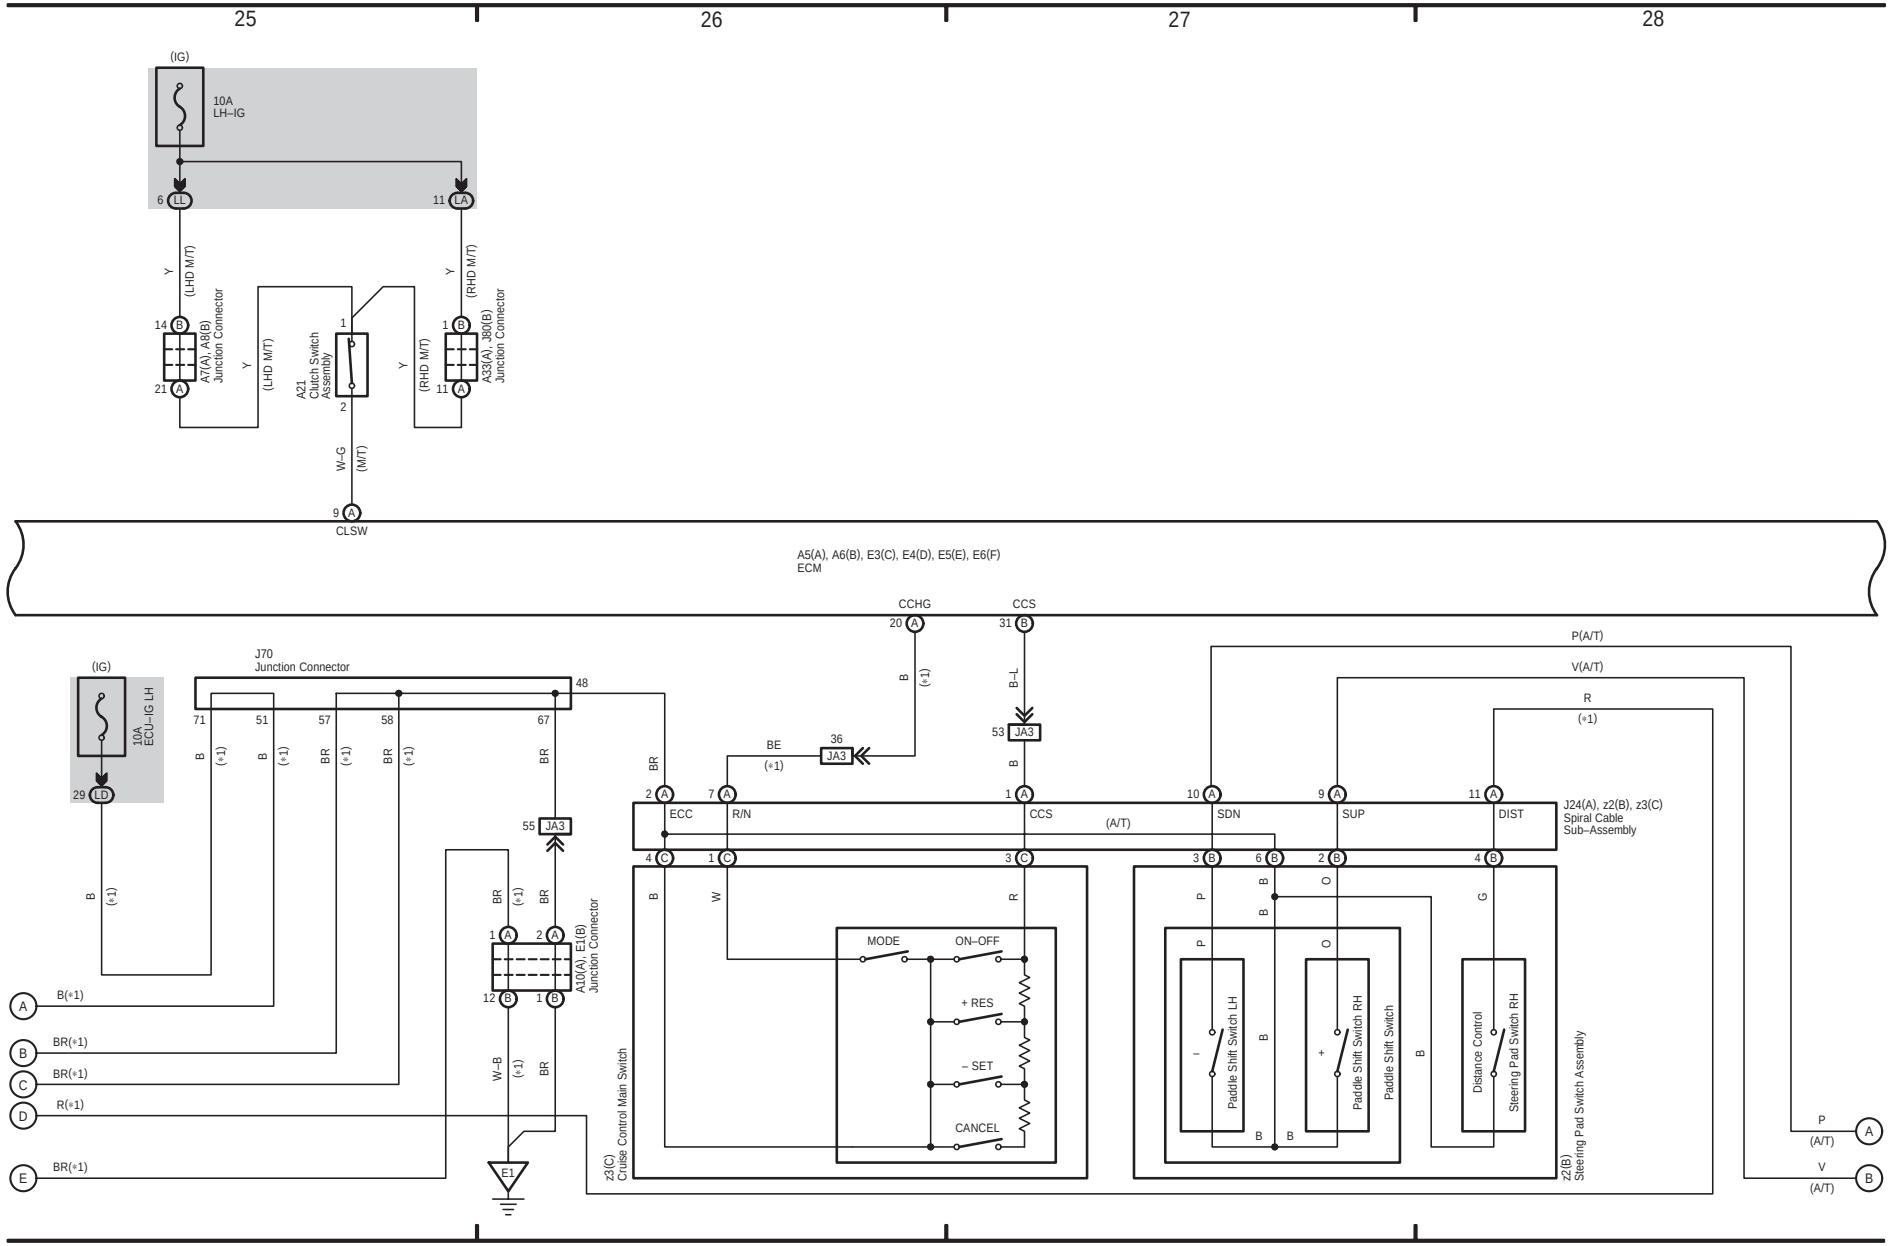

(Cont. next page)

ECT and A/T Indicator (4GR–FSE)

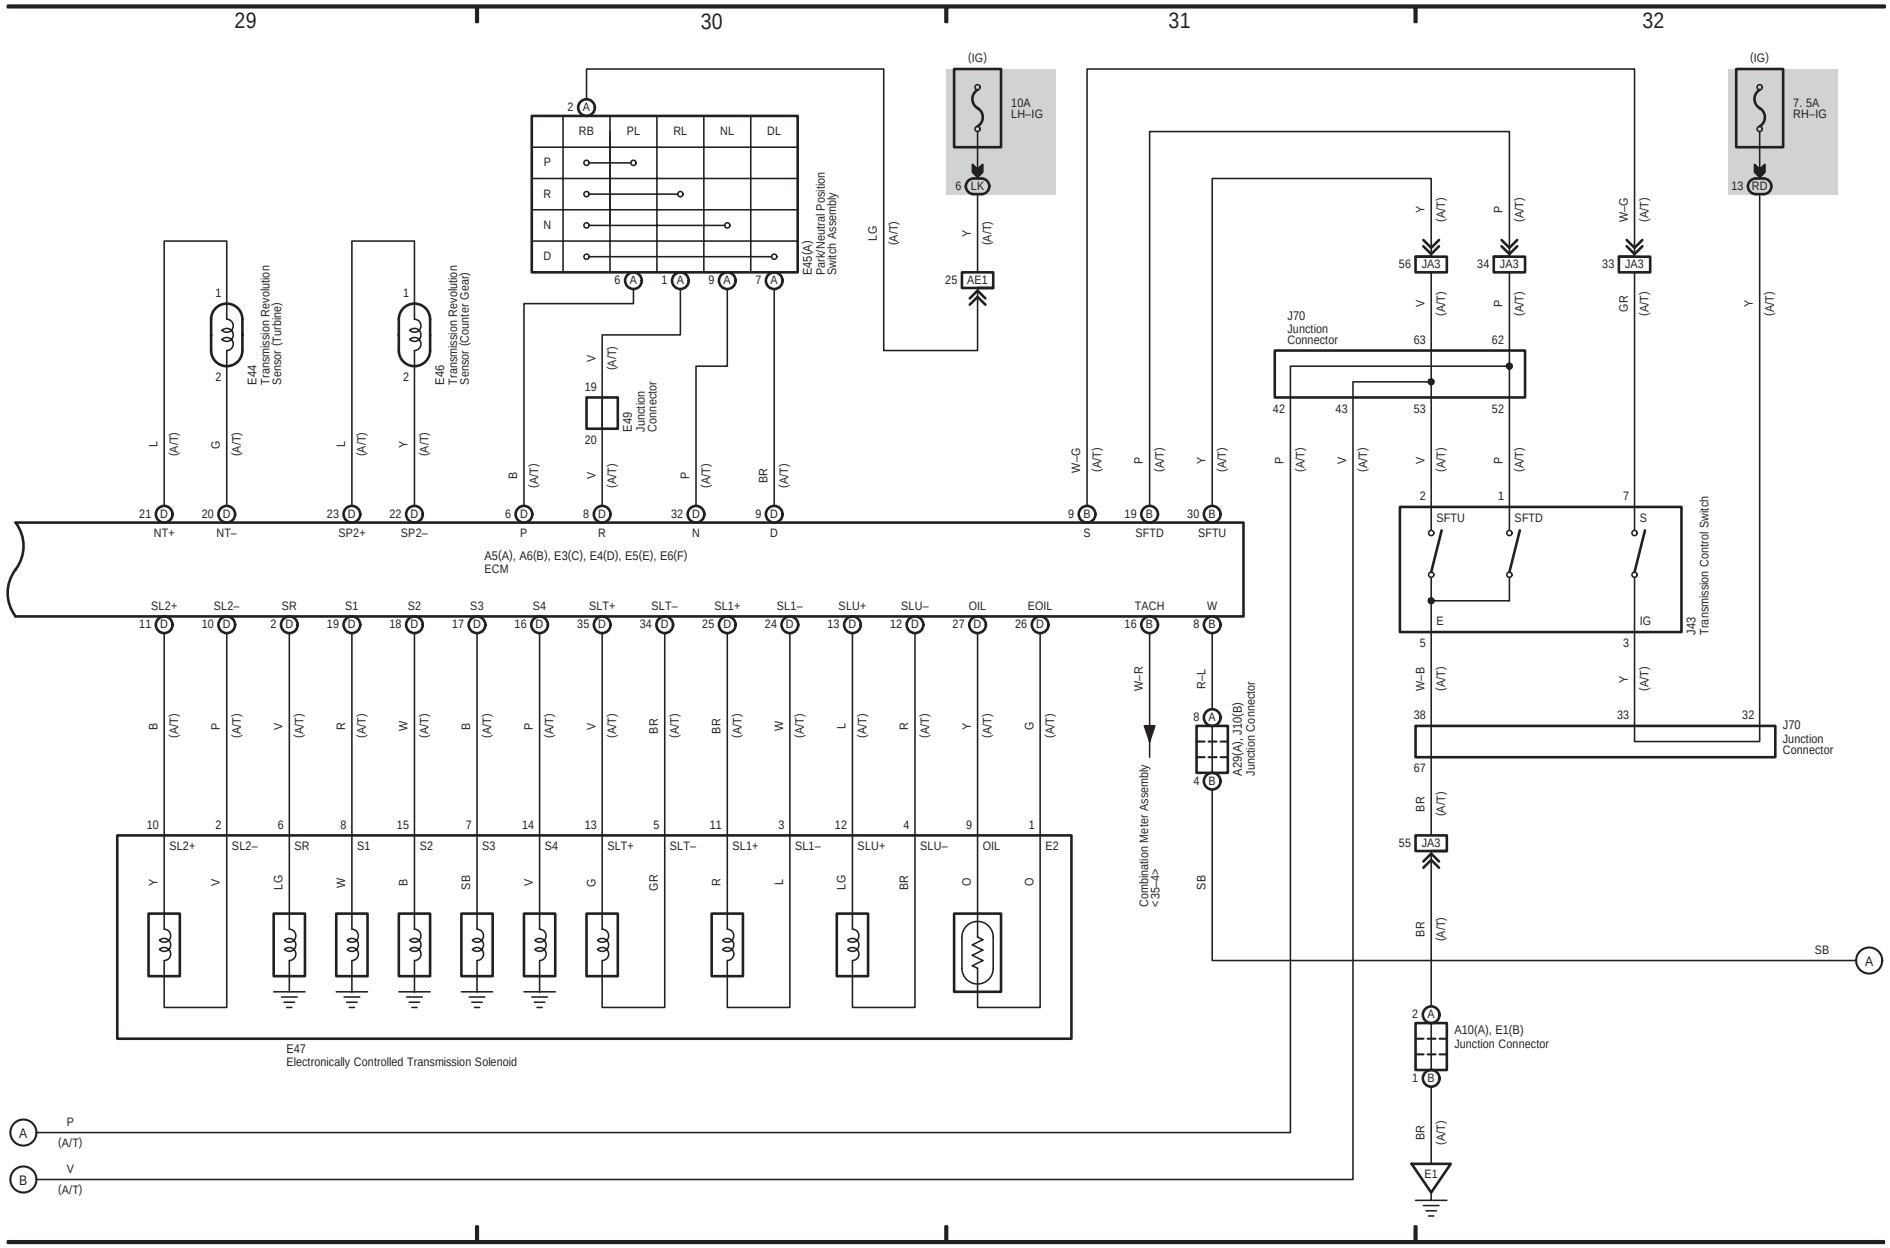
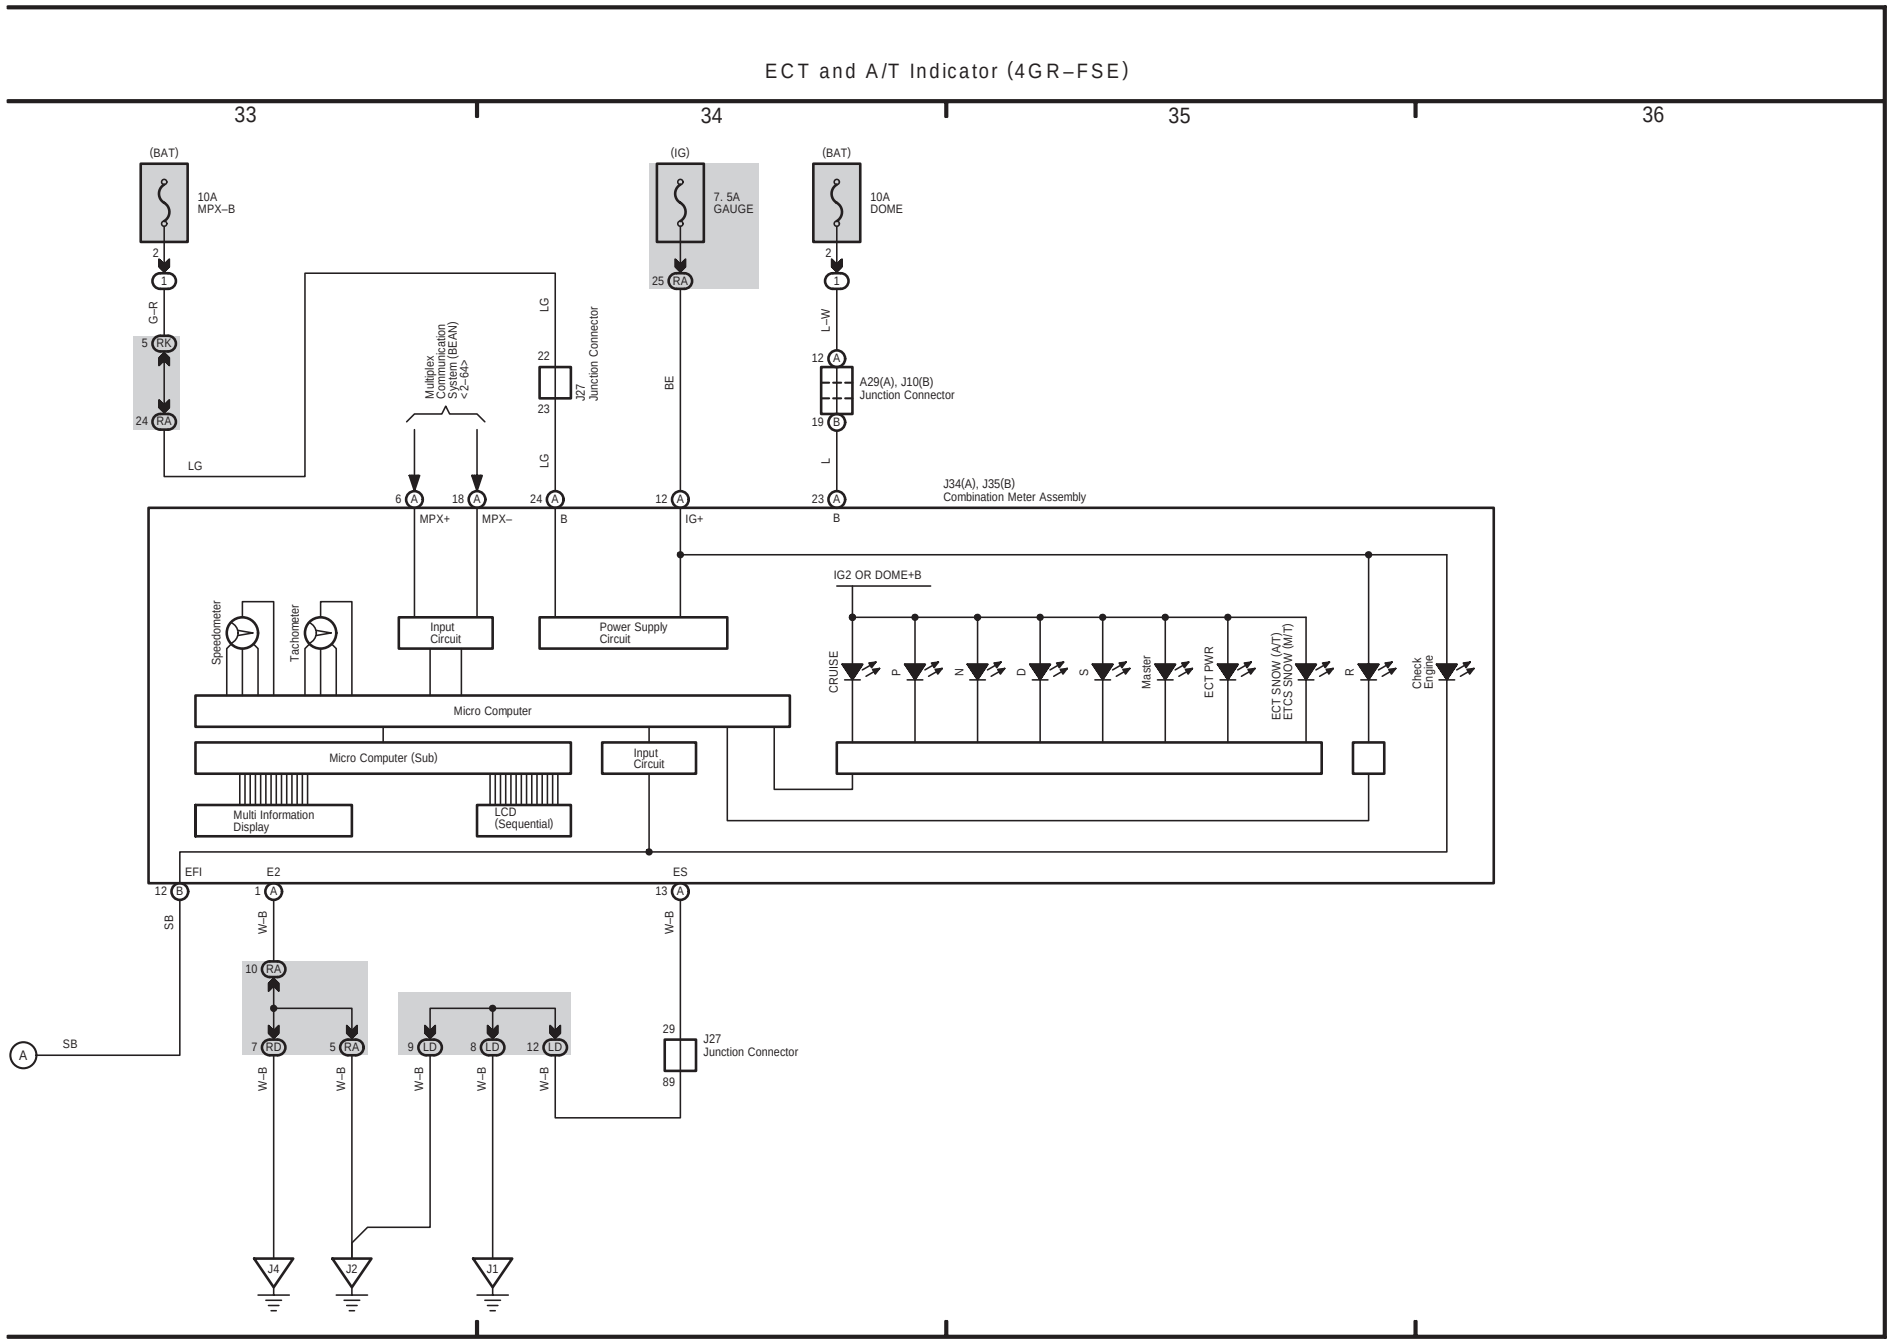
8 IS 300C / IS 250C (Cont' d)