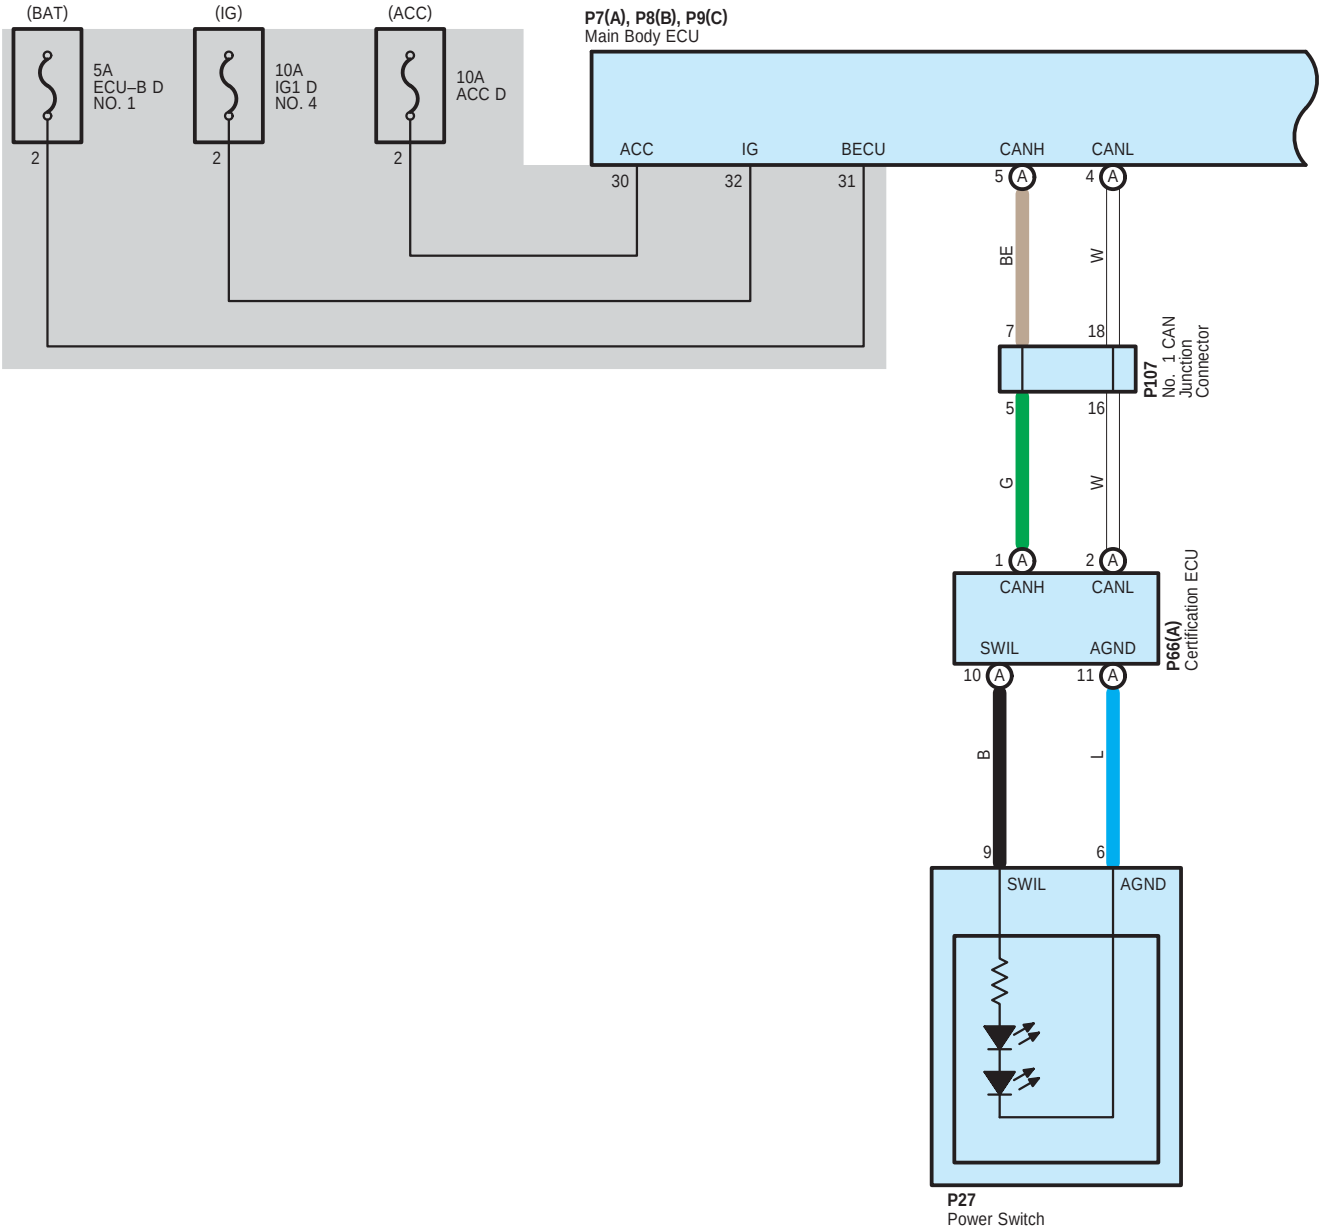
(BAT)
(IG)
(ACC)
5A
ECU–B D
NO. 1
10A
IG1 D
NO. 4
10A
ACC D
2
2
2
P7(A), P8(B), P9(C)
Main Body ECU
ACC
IG
BECU
CANH
CANL
30
32
31
5 A
4 A
BE
W
7
18
P107
No. 1 CAN
Junction
Connector
5
16
G
W
1 A
2 A
CANH
CANL
SWIL
AGND
P66(A)
Certification ECU
10 A
11 A
B
L
9
6
SWIL
AGND
P27
Power Switch

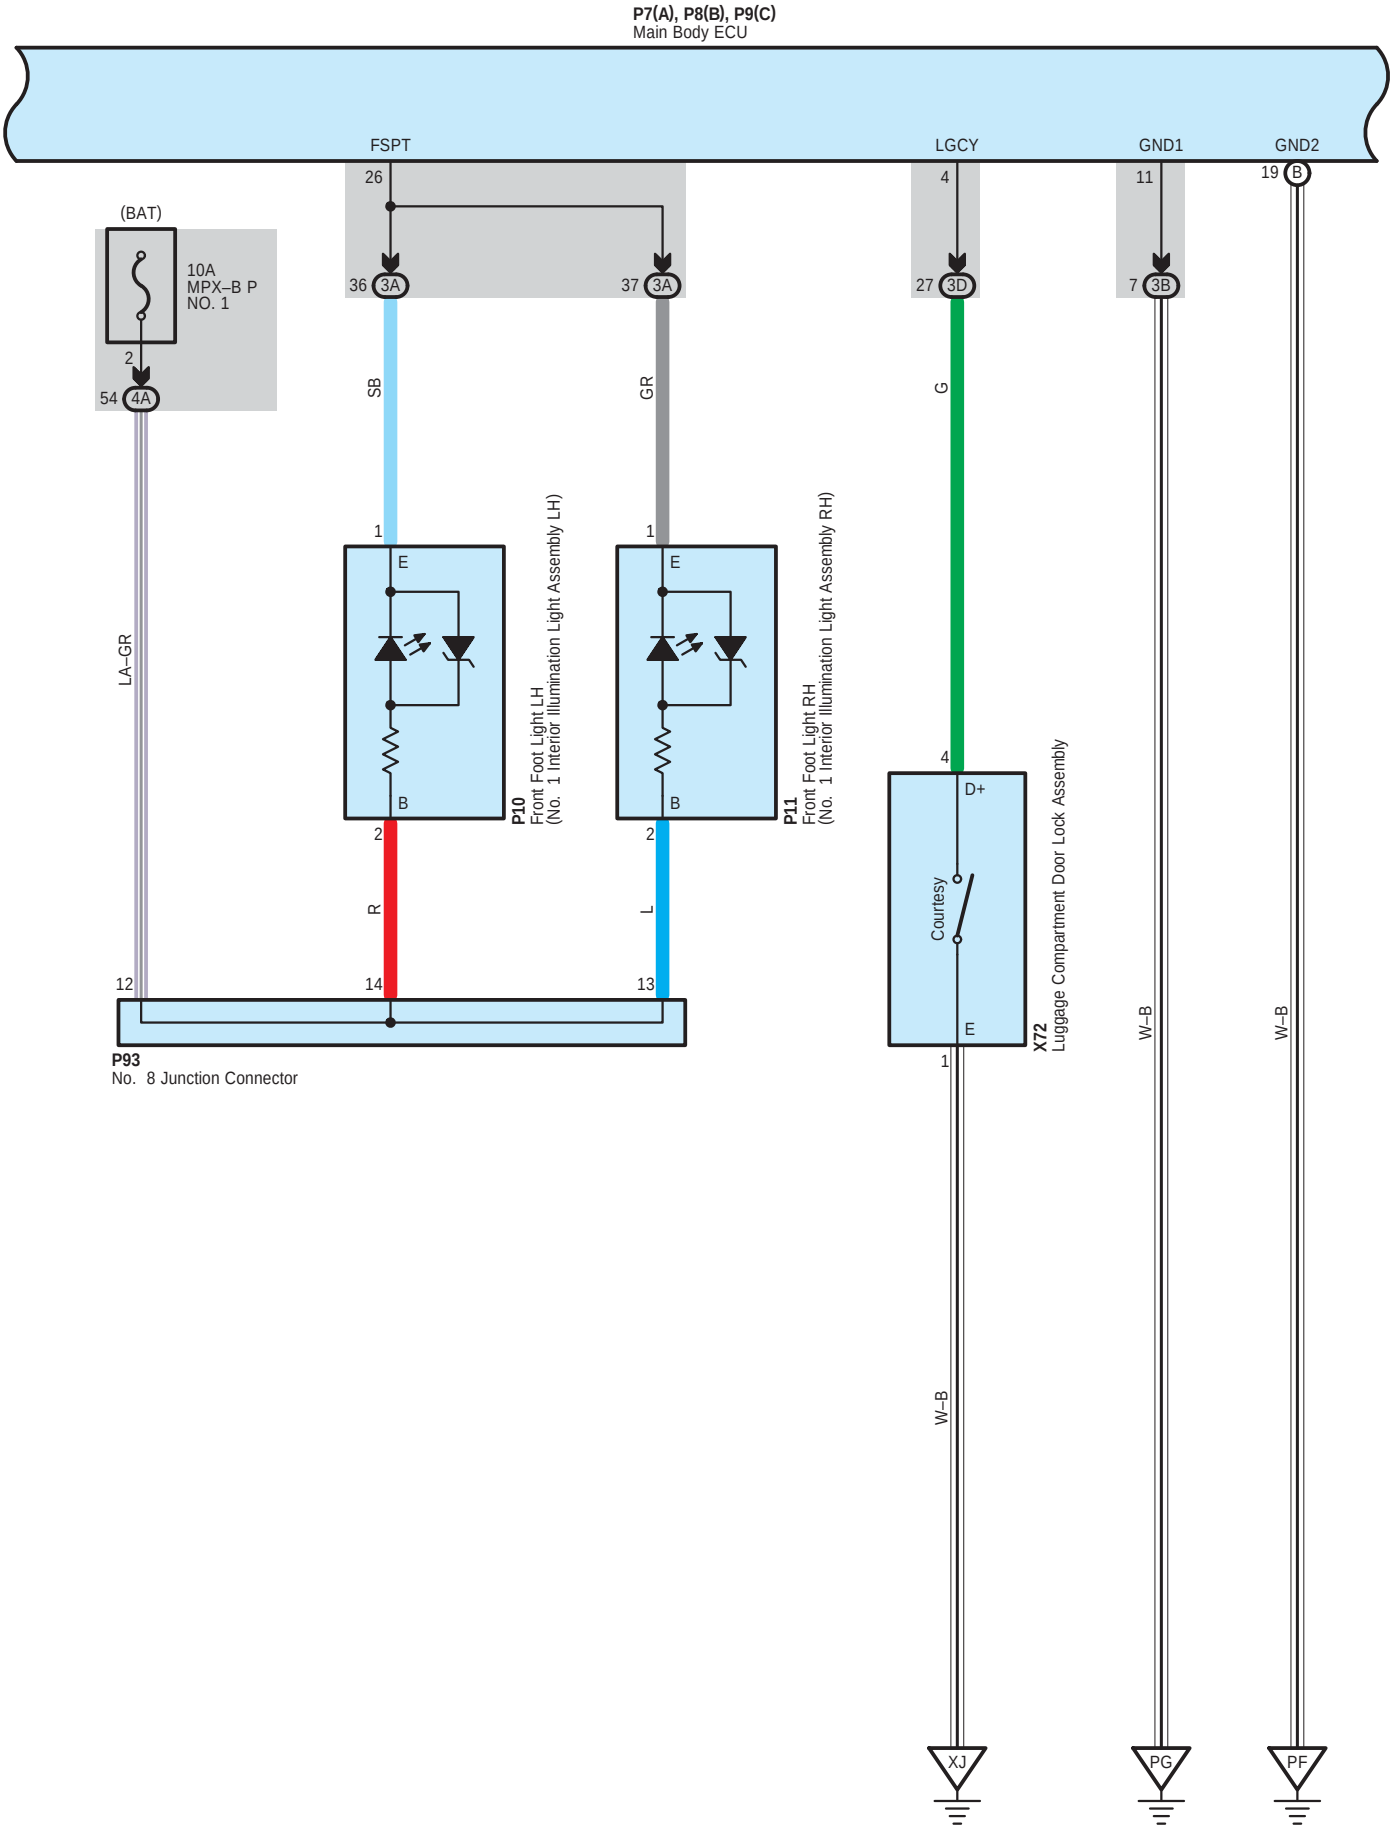
P7(A), P8(B), P9(C)
Main Body ECU
FSPT
LGCY
GND1
GND2
26
4
11
19 B
(BAT)
10A
MPX–B P
NO. 1
2
54 4A
36 3A
37 3A
27 3D
7 3B
SB
GR
G
1
E
B
2
R
L
P10
Front Foot Light LH
(No. 1 Interior Illumination Light Assembly LH)
P11
Front Foot Light RH
(No. 1 Interior Illumination Light Assembly RH)
LA–GR
12
14
13
P93
No. 8 Junction Connector
D+
Courtesy
X72
Luggage Compartment Door Lock Assembly
W–B
XJ
PG
PF

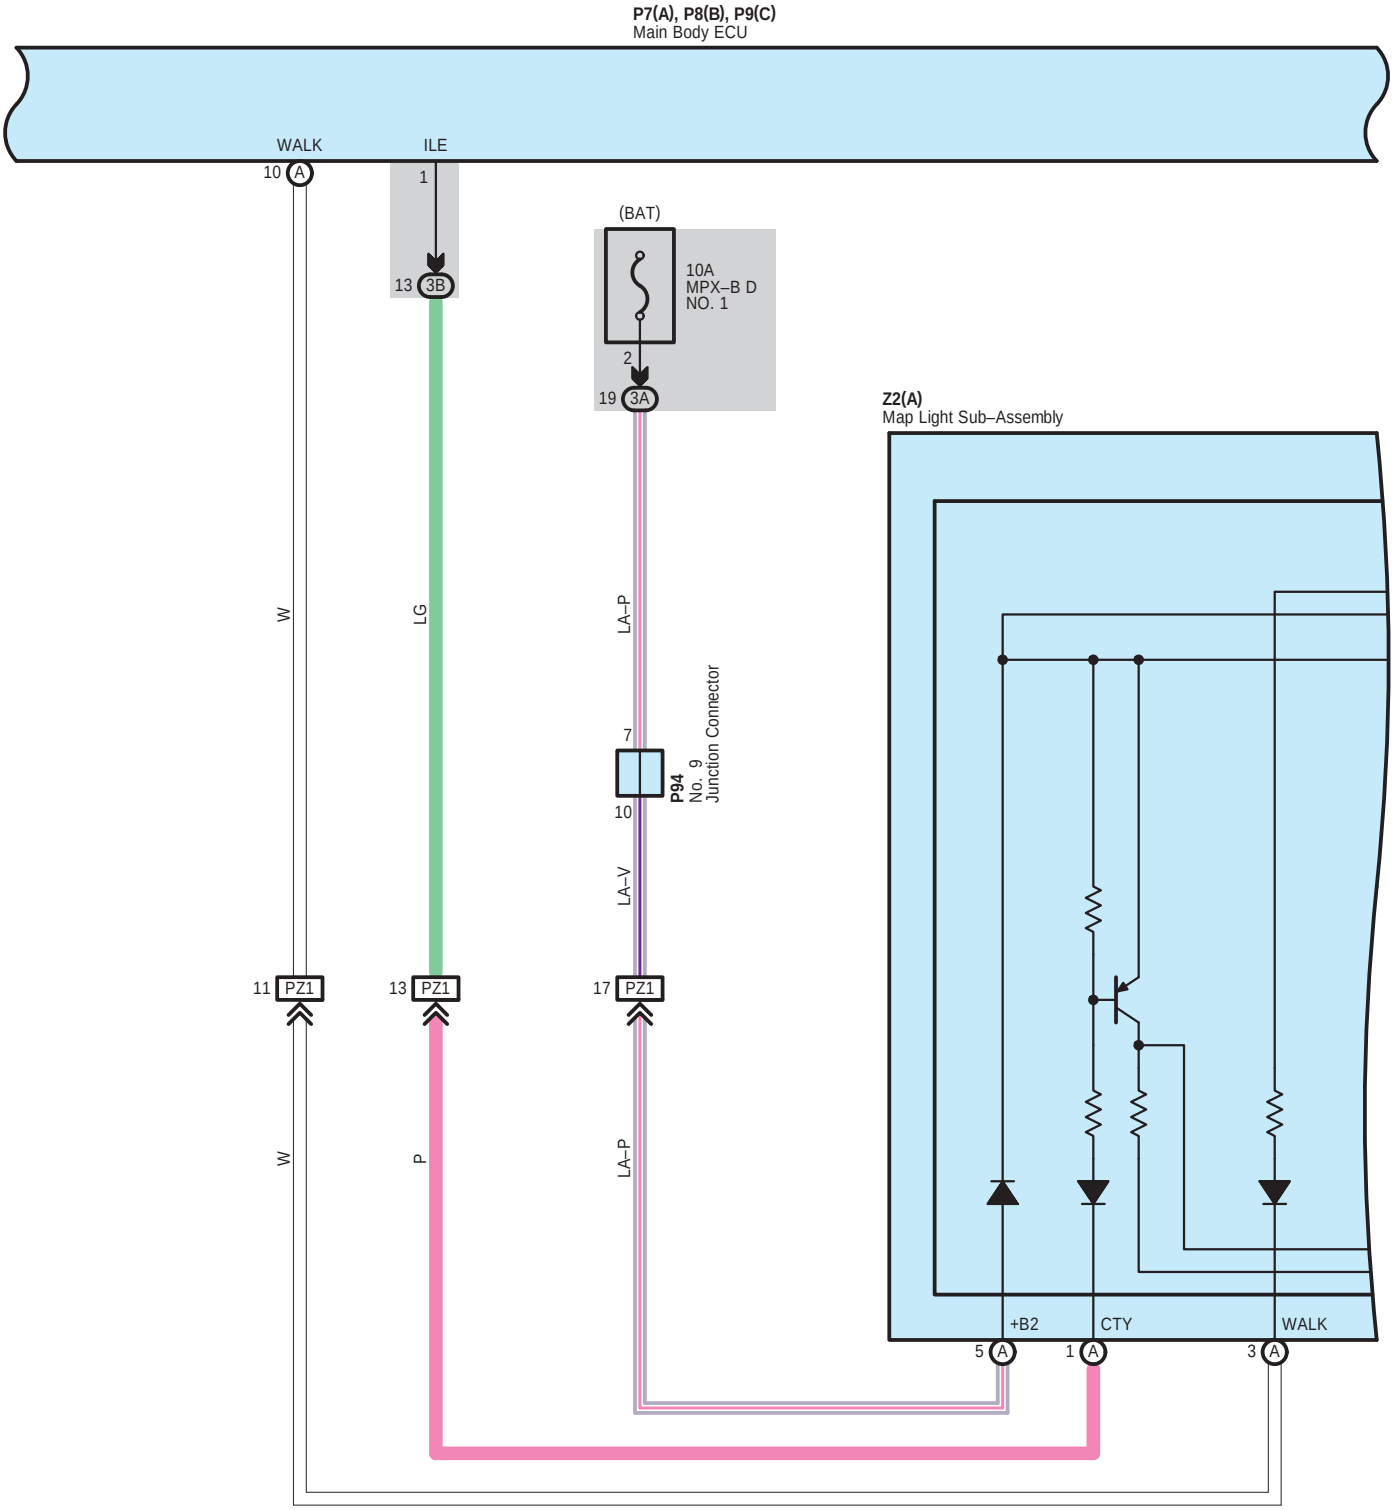
P7(A), P8(B), P9(C)
Main Body ECU
WALK
ILE
10 A
1
13 3B
(BAT)
10A
MPX–B D
NO. 1
2
19 3A
Z2(A)
Map Light Sub–Assembly
W
LG
LA–P
7
P94
No. 9
Junction Connector
10
LA–V
11 PZ1
13 PZ1
17 PZ1
W
P
LA–P
+B2
CTY
WALK
5 A
1 A
3 A

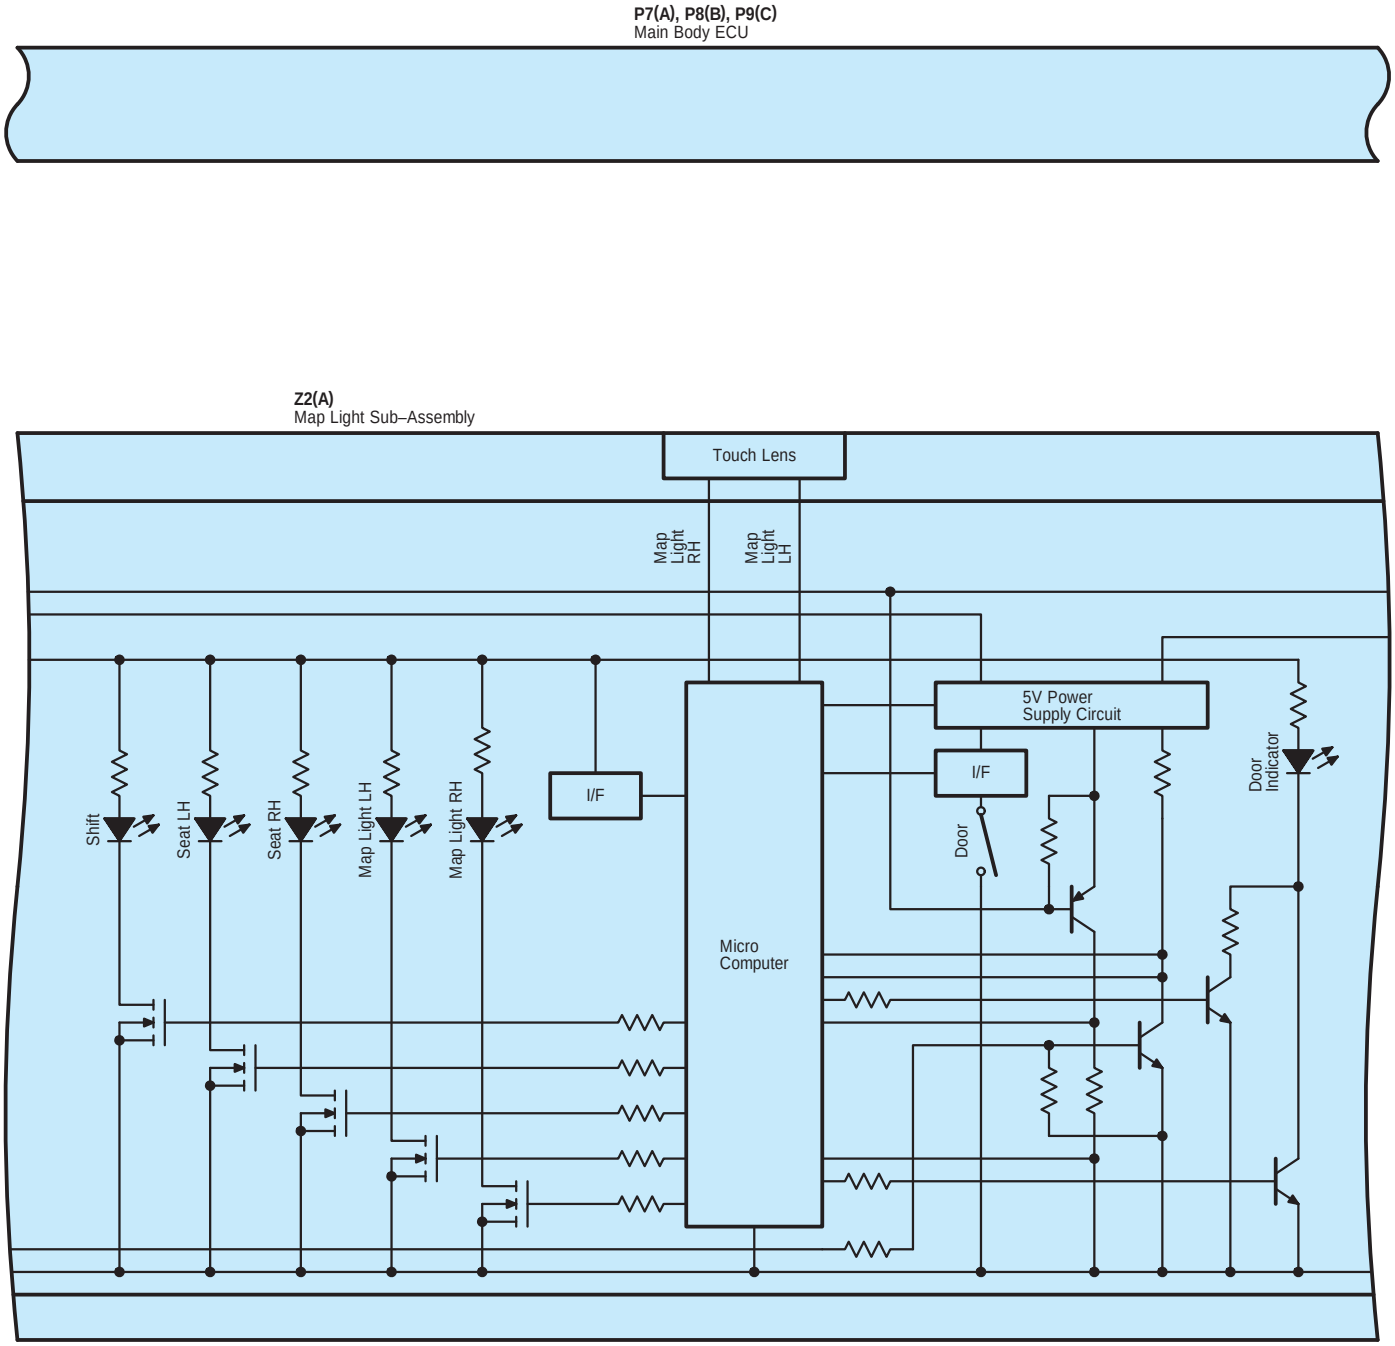
P7(A), P8(B), P9(C)
Main Body ECU
Z2(A)
Map Light Sub–Assembly
Touch Lens
Map Light RH
Map Light LH
5V Power Supply Circuit
I/F
I/F
Door
Door Indicator
Shift
Seat LH
Seat RH
Map Light LH
Map Light RH
Micro Computer

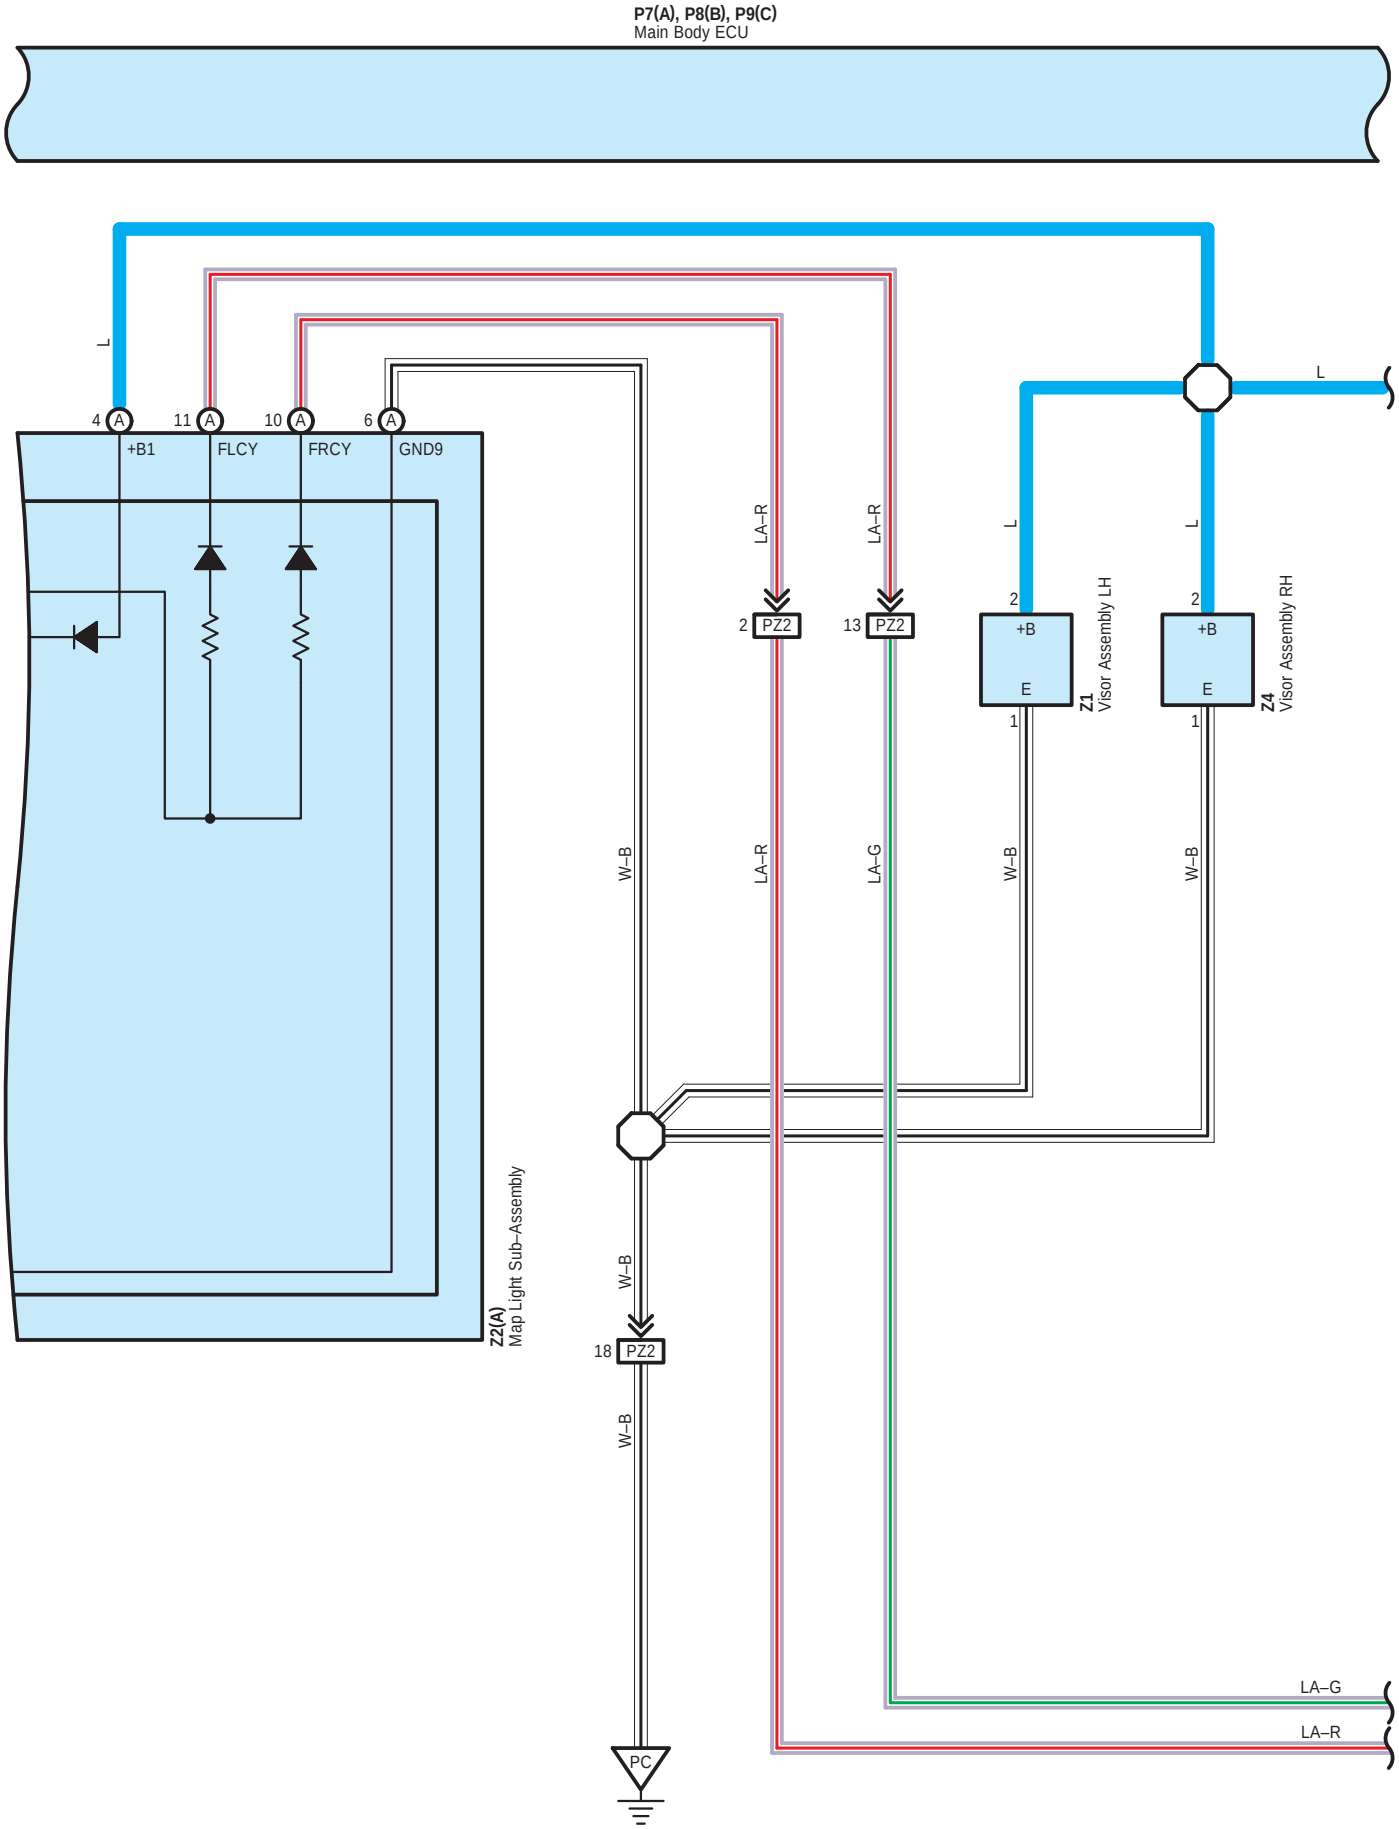
P7(A), P8(B), P9(C)
Main Body ECU
L
4 A
11 A
10 A
6 A
+B1
FLCY
FRCY
GND9
Z2(A)
Map Light Sub–Assembly
LA–R
LA–R
2 PZ2
13 PZ2
L
L
L
2
+B
E
1
Z1
Visor Assembly LH
2
+B
E
1
Z4
Visor Assembly RH
W–B
LA–R
LA–G
W–B
W–B
W–B
18 PZ2
W–B
PC
LA–G
LA–R

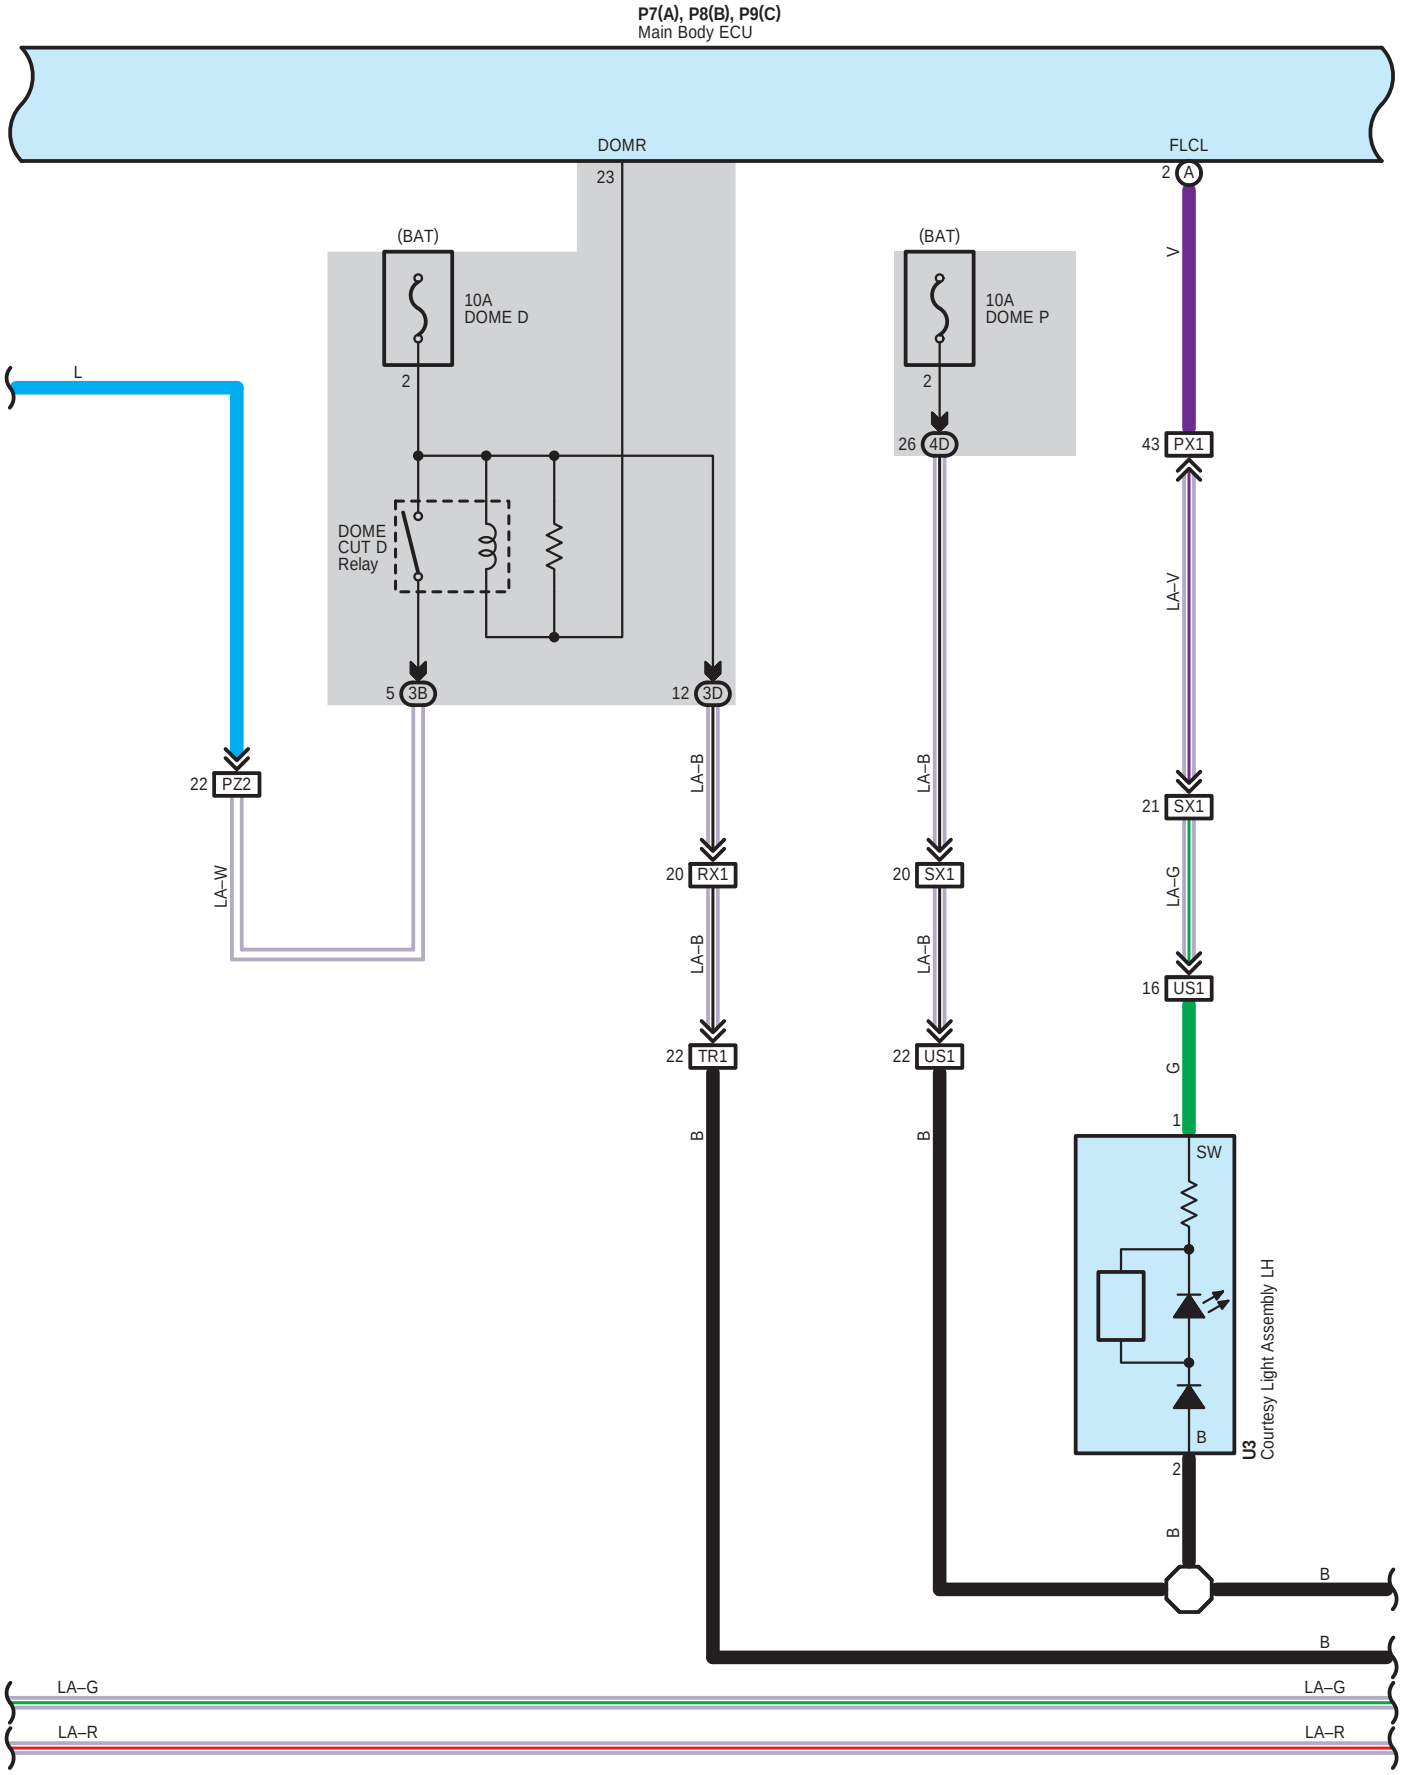
P7(A), P8(B), P9(C)
Main Body ECU
DOMR
23
FLCL
2 A
(BAT)
10A
DOME D
2
(BAT)
10A
DOME P
2
26 4D
V
43 PX1
L
DOME
CUT D
Relay
LA–V
5 3B
12 3D
22 PZ2
LA–B
LA–B
21 SX1
20 RX1
20 SX1
LA–G
LA–W
LA–B
16 US1
22 TR1
22 US1
G
B
B
1
SW
B
U3
Courtesy Light Assembly LH
2
B
B
B
LA–G
LA–G
LA–R
LA–R

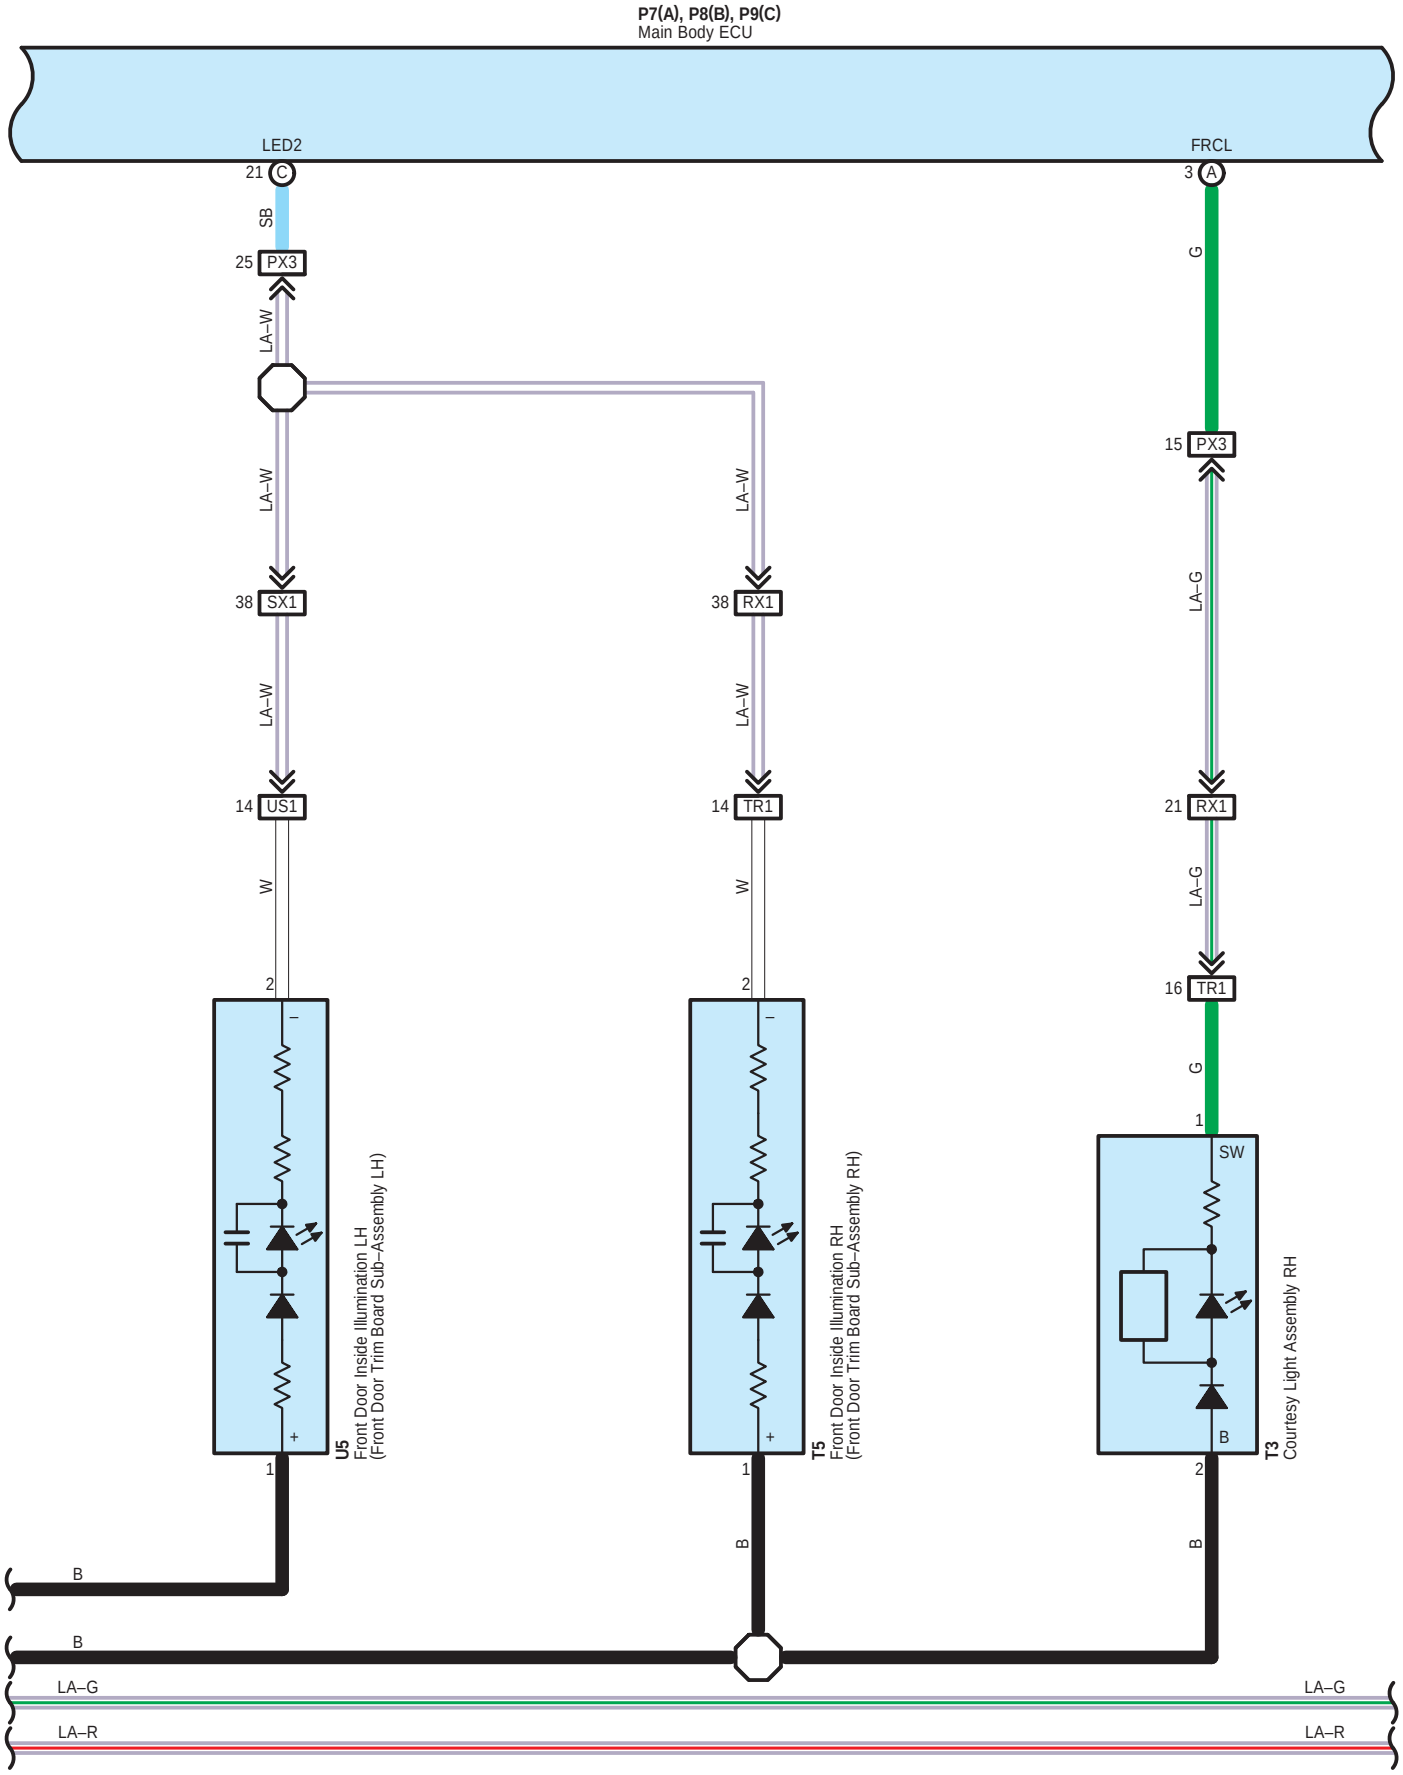
P7(A), P8(B), P9(C)
Main Body ECU
LED2
21 C
SB
25 PX3
LA–W
LA–W
38 SX1
LA–W
14 US1
W
2
1
U5
Front Door Inside Illumination LH
(Front Door Trim Board Sub–Assembly LH)
LA–W
38 RX1
LA–W
14 TR1
W
2
1
T5
Front Door Inside Illumination RH
(Front Door Trim Board Sub–Assembly RH)
FRCL
3 A
G
15 PX3
LA–G
21 RX1
LA–G
16 TR1
G
1
SW
B
2
T3
Courtesy Light Assembly RH
B
B
B
B
LA–G
LA–R
LA–G
LA–R

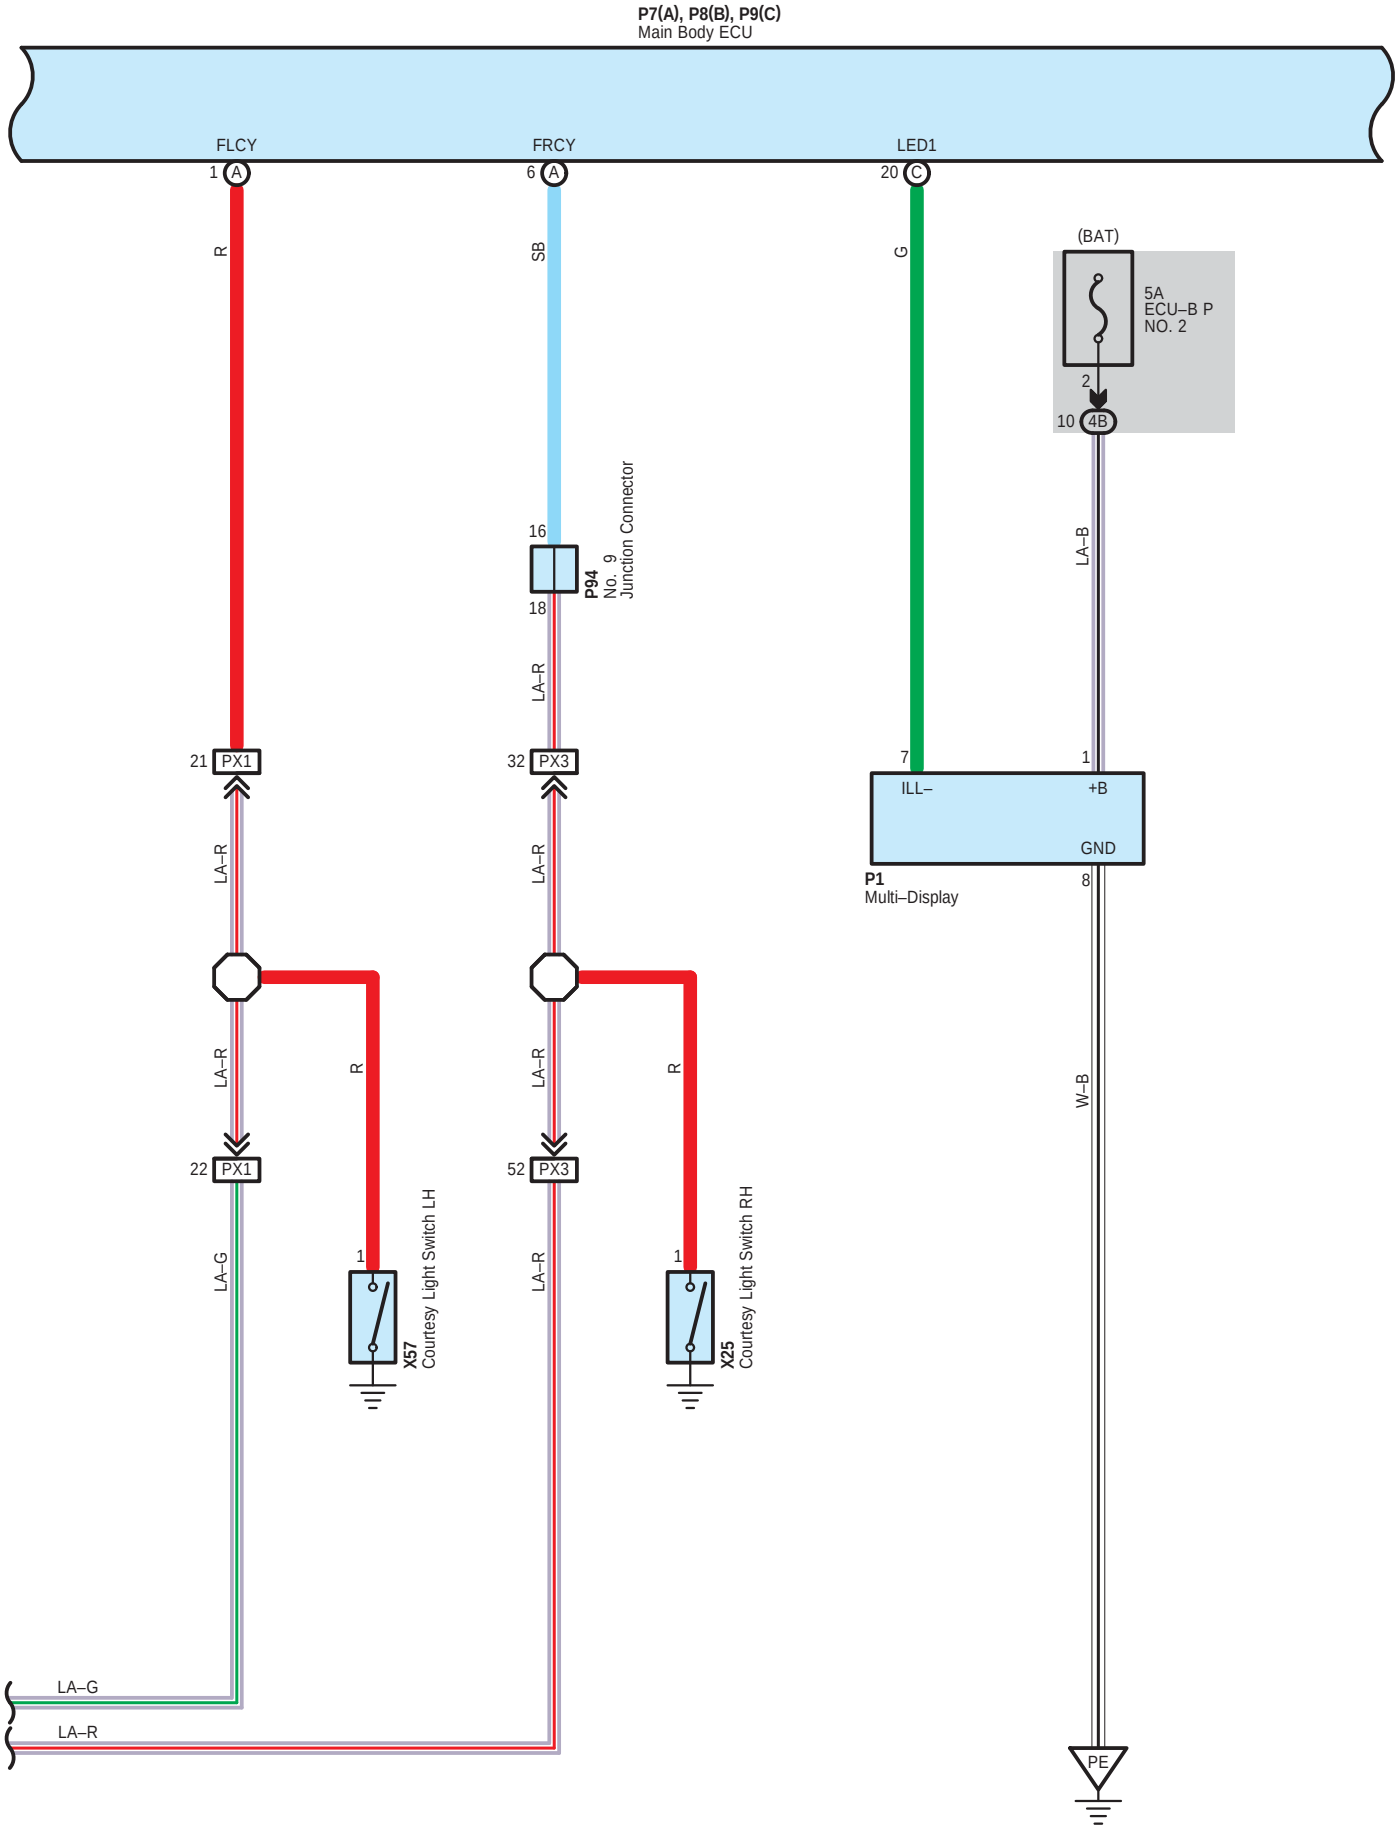
P7(A), P8(B), P9(C)
Main Body ECU
FLCY
FRCY
LED1
1 A
6 A
20 C
R
SB
G
(BAT)
5A
ECU–B P
NO. 2
2
10 4B
16
P94
No. 9
Junction Connector
18
LA–R
LA–B
21 PX1
32 PX3
7
1
ILL–
+B
GND
P1
Multi–Display
8
LA–R
LA–R
LA–R
LA–R
R
R
W–B
22 PX1
52 PX3
LA–G
LA–R
1
1
X57
Courtesy Light Switch LH
X25
Courtesy Light Switch RH
LA–G
LA–R
PE

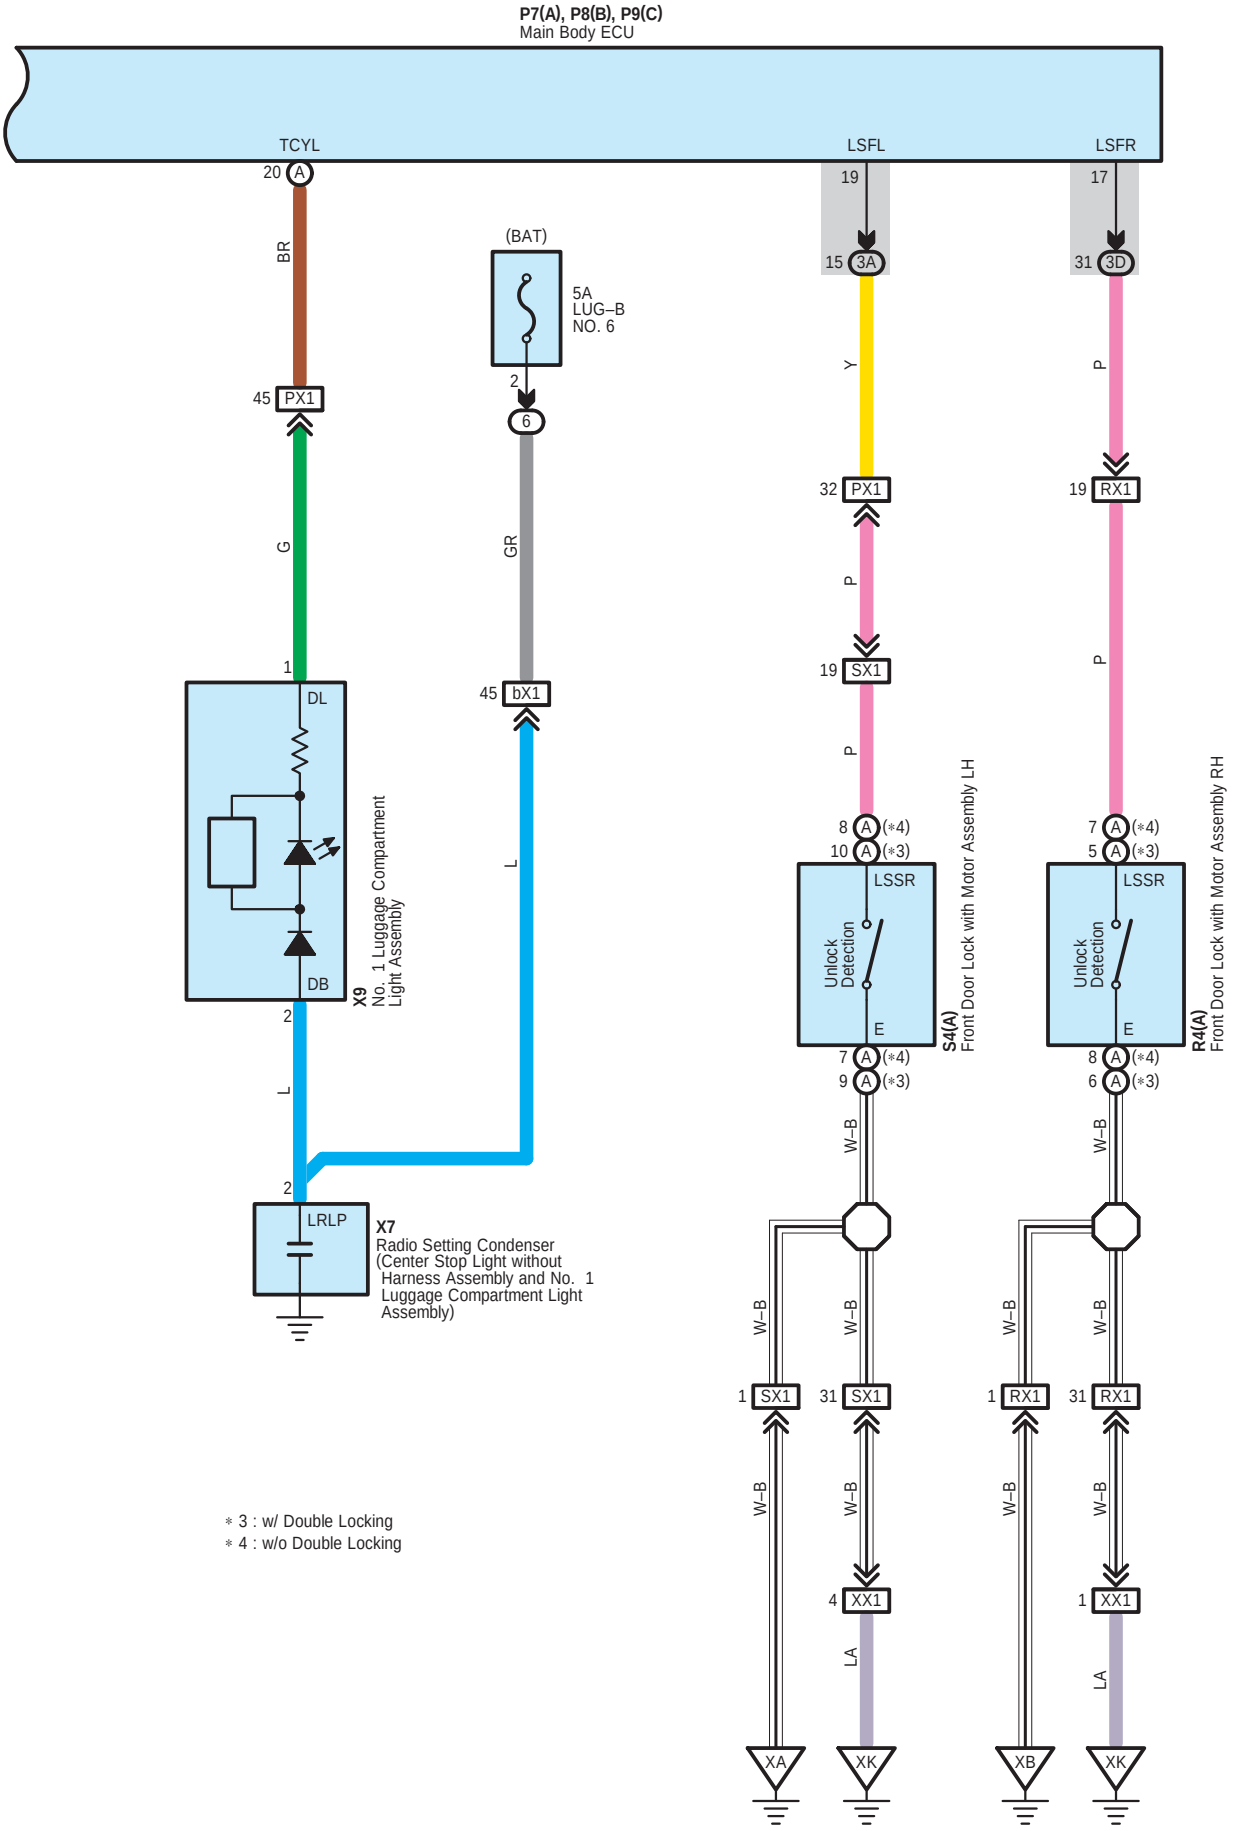
P7(A), P8(B), P9(C)
Main Body ECU
TCYL
LSFL
LSFR
20 A
19
17
BR
(BAT)
5A
LUG–B
NO. 6
15 3A
31 3D
Y
P
45 PX1
2
6
32 PX1
19 RX1
G
GR
P
1
DL
45 bX1
19 SX1
P
P
8 A (*4)
10 A (*3)
7 A (*4)
5 A (*3)
LSSR
Unlock Detection
E
S4(A)
Front Door Lock with Motor Assembly LH
R4(A)
Front Door Lock with Motor Assembly RH
DB
X9
No. 1 Luggage Compartment Light Assembly
L
2
7 A (*4)
9 A (*3)
8 A (*4)
6 A (*3)
W–B
L
2
LRLP
X7
Radio Setting Condenser (Center Stop Light without Harness Assembly and No. 1 Luggage Compartment Light Assembly)
1 SX1
31 SX1
1 RX1
31 RX1
4 XX1
1 XX1
LA
XA
XK
XB
XK
* 3 : w/ Double Locking
* 4 : w/o Double Locking

P1
Black

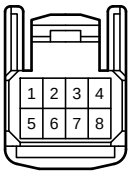


90980-12551

P7
Black

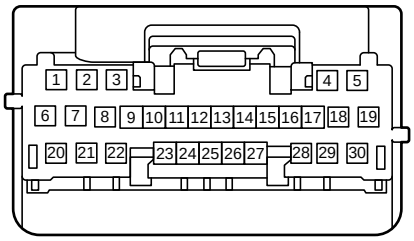


90980-12C62

P8
Black

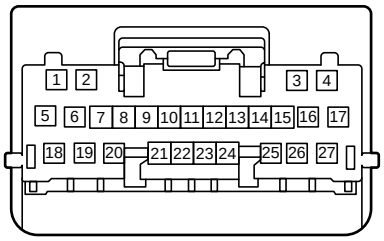


90980-12C63

P9
Black

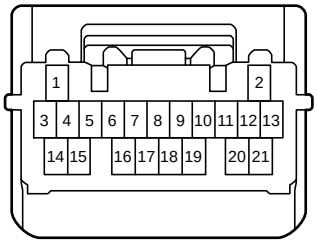


90980-12C61

P10
Gray




90980-11918
(Before Sep. 2018 Production)

P10
Black




90980-11918
(From Sep. 2018 Production)

P11
Gray




90980-11918
(Before Sep. 2018 Production)

P11
Black




90980-11918
(From Sep. 2018 Production)

P27
Black

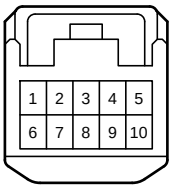


90980-12368

P66
White

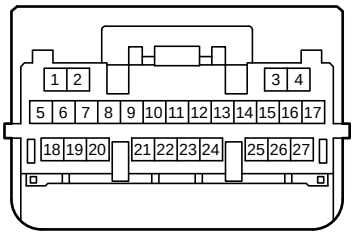


90980-12B78

P93
Blue

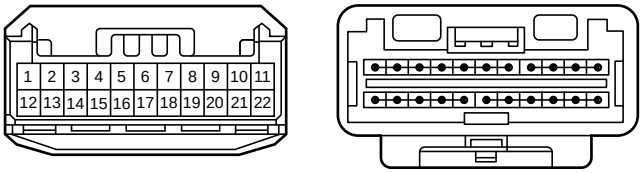


90980-12B54

P94
Blue

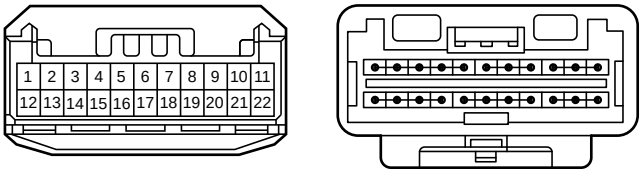


90980-12B54

P107
White

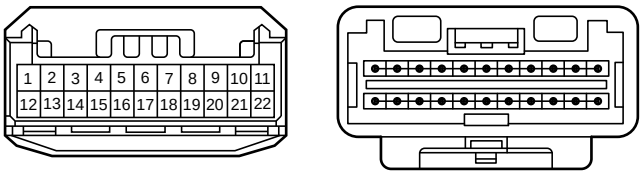


90980-12B54

R4
White

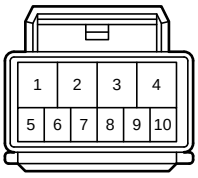


90980-12226

S4
White

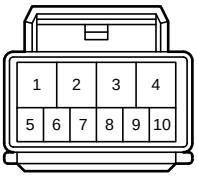


90980-12226

T3
White




90980-11918

T5
White




90980-12063

U3
White




90980-11918

U5
White




90980-12063

X7
Black




X9
White




90980-11918

X25
Black

90980-10871

X57
Black

90980-10871

X72
White




90980-12211

Z1
White

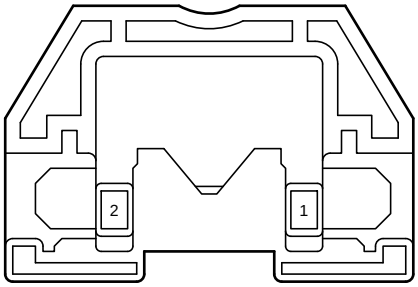


90980-12322

Z2
White

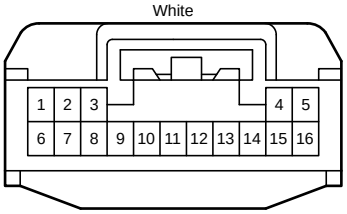


90980-12423

Z4
White

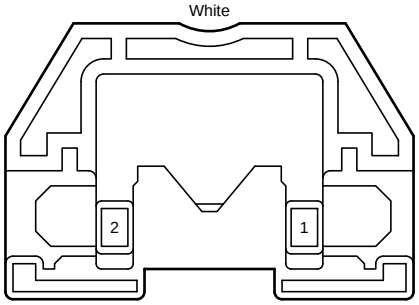


90980-12322

3A
White

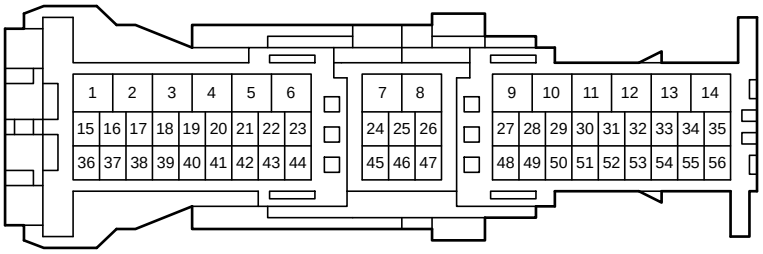


90980-12943

3B
White

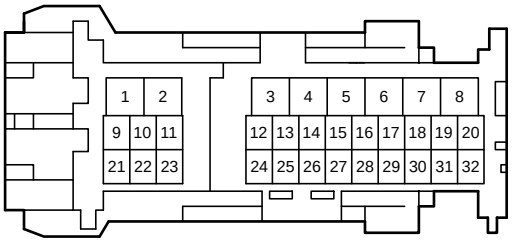


90980-12A48

3D
White

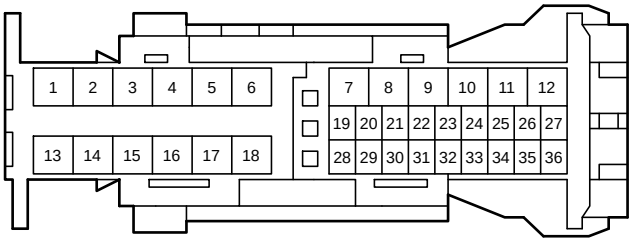


90980-12944

4A
White

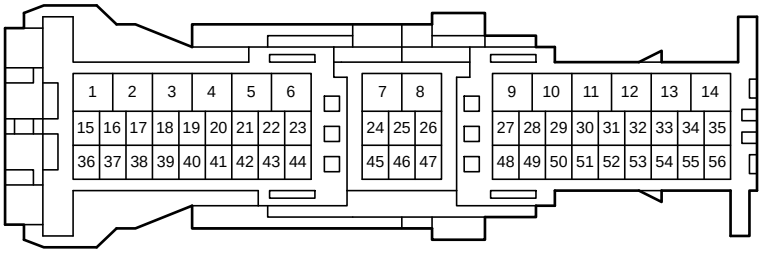


90980-12943

4B
White

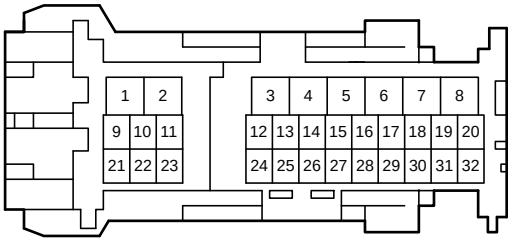


90980-12A48

4D
White

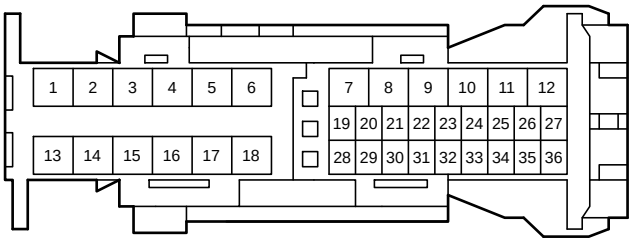


90980-12944

PX1
Gray

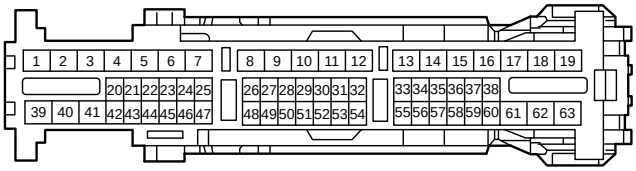


90980-12B20

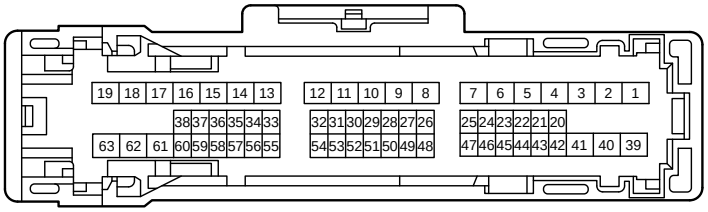


90980-12B19

PX3
Gray

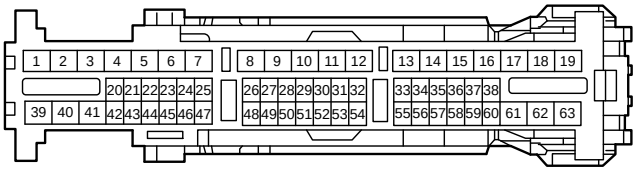


90980-12B20

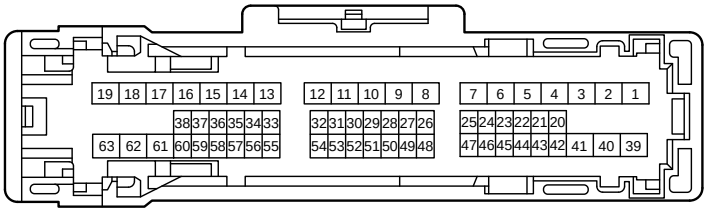


90980-12B19

PZ1
White

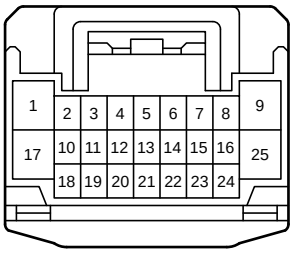


90980-12414

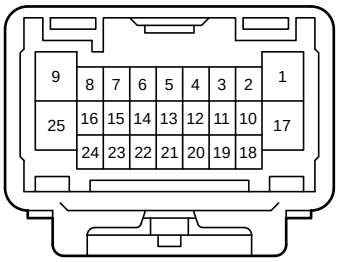


90980-12413

PZ2
Gray

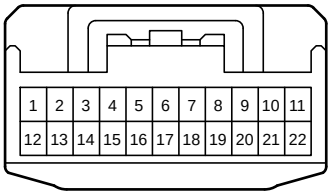


90980-12372

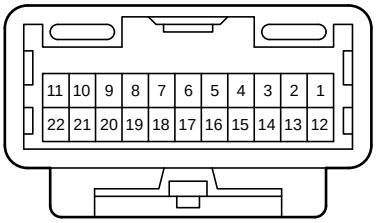


90980-12371

RX1
Yellow

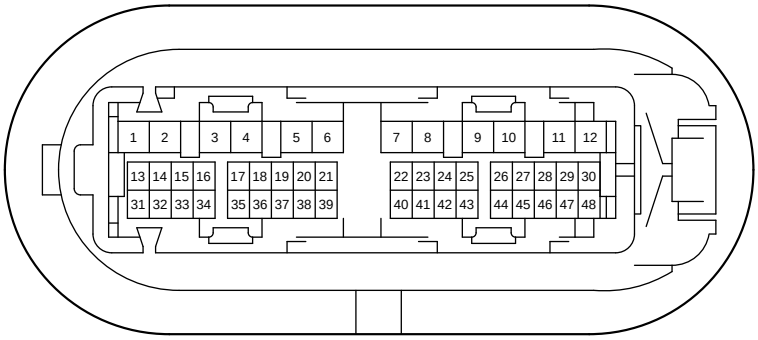


90980-12A09

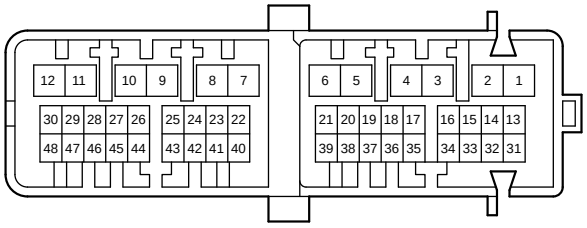


90980-12A06

SX1
Yellow

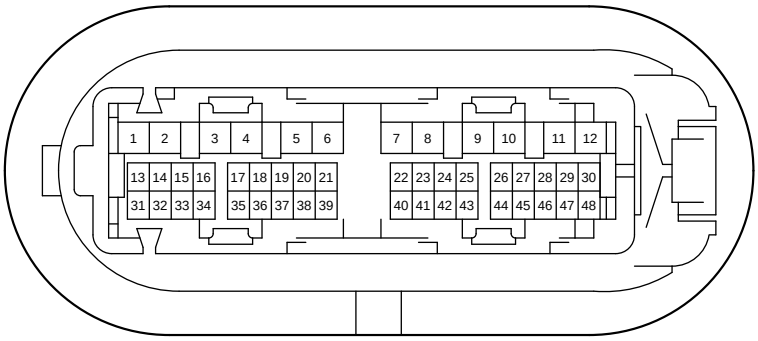


90980-12A09

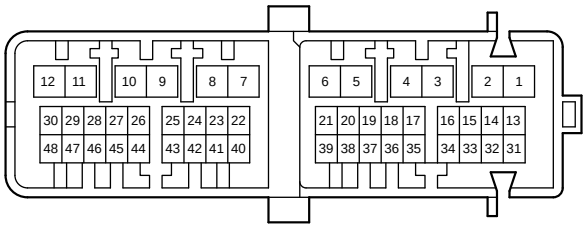


90980-12A06

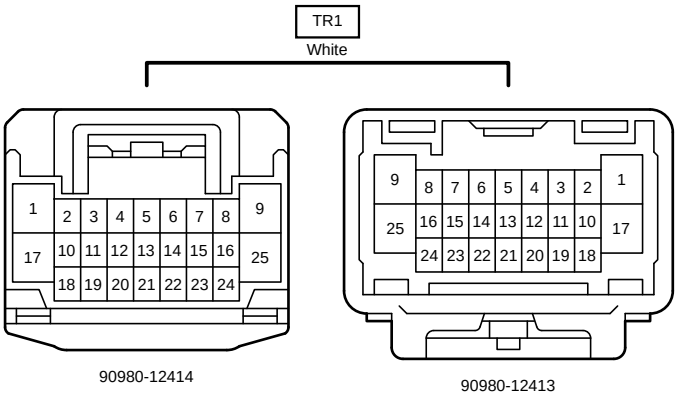
TR1
White
90980-12414
90980-12413

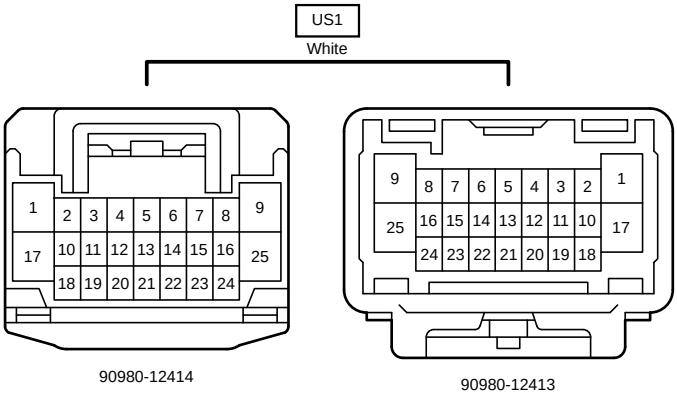
US1
White
90980-12414
90980-12413

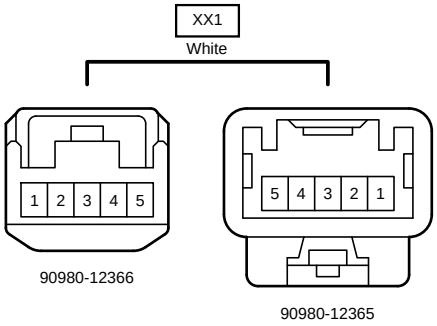
XX1
White
90980-12366
90980-12365

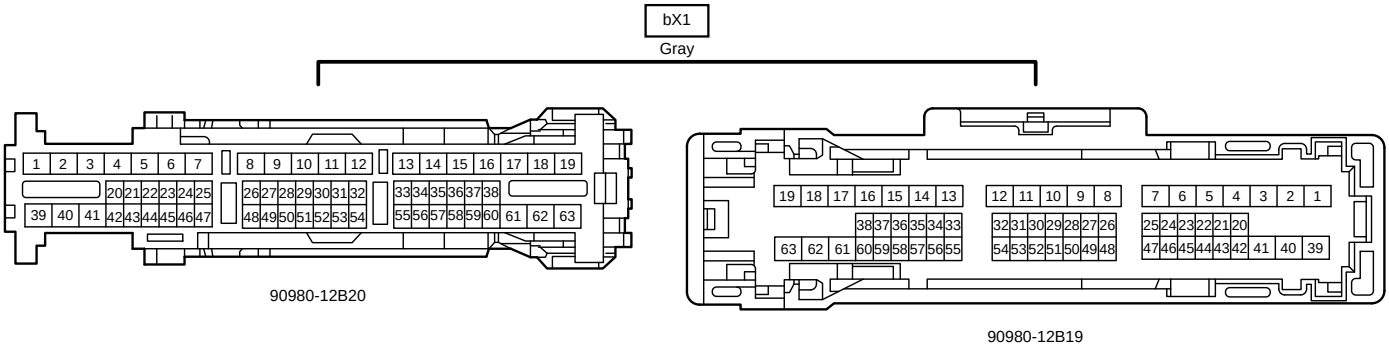
bX1
Gray
90980-12B20
90980-12B19