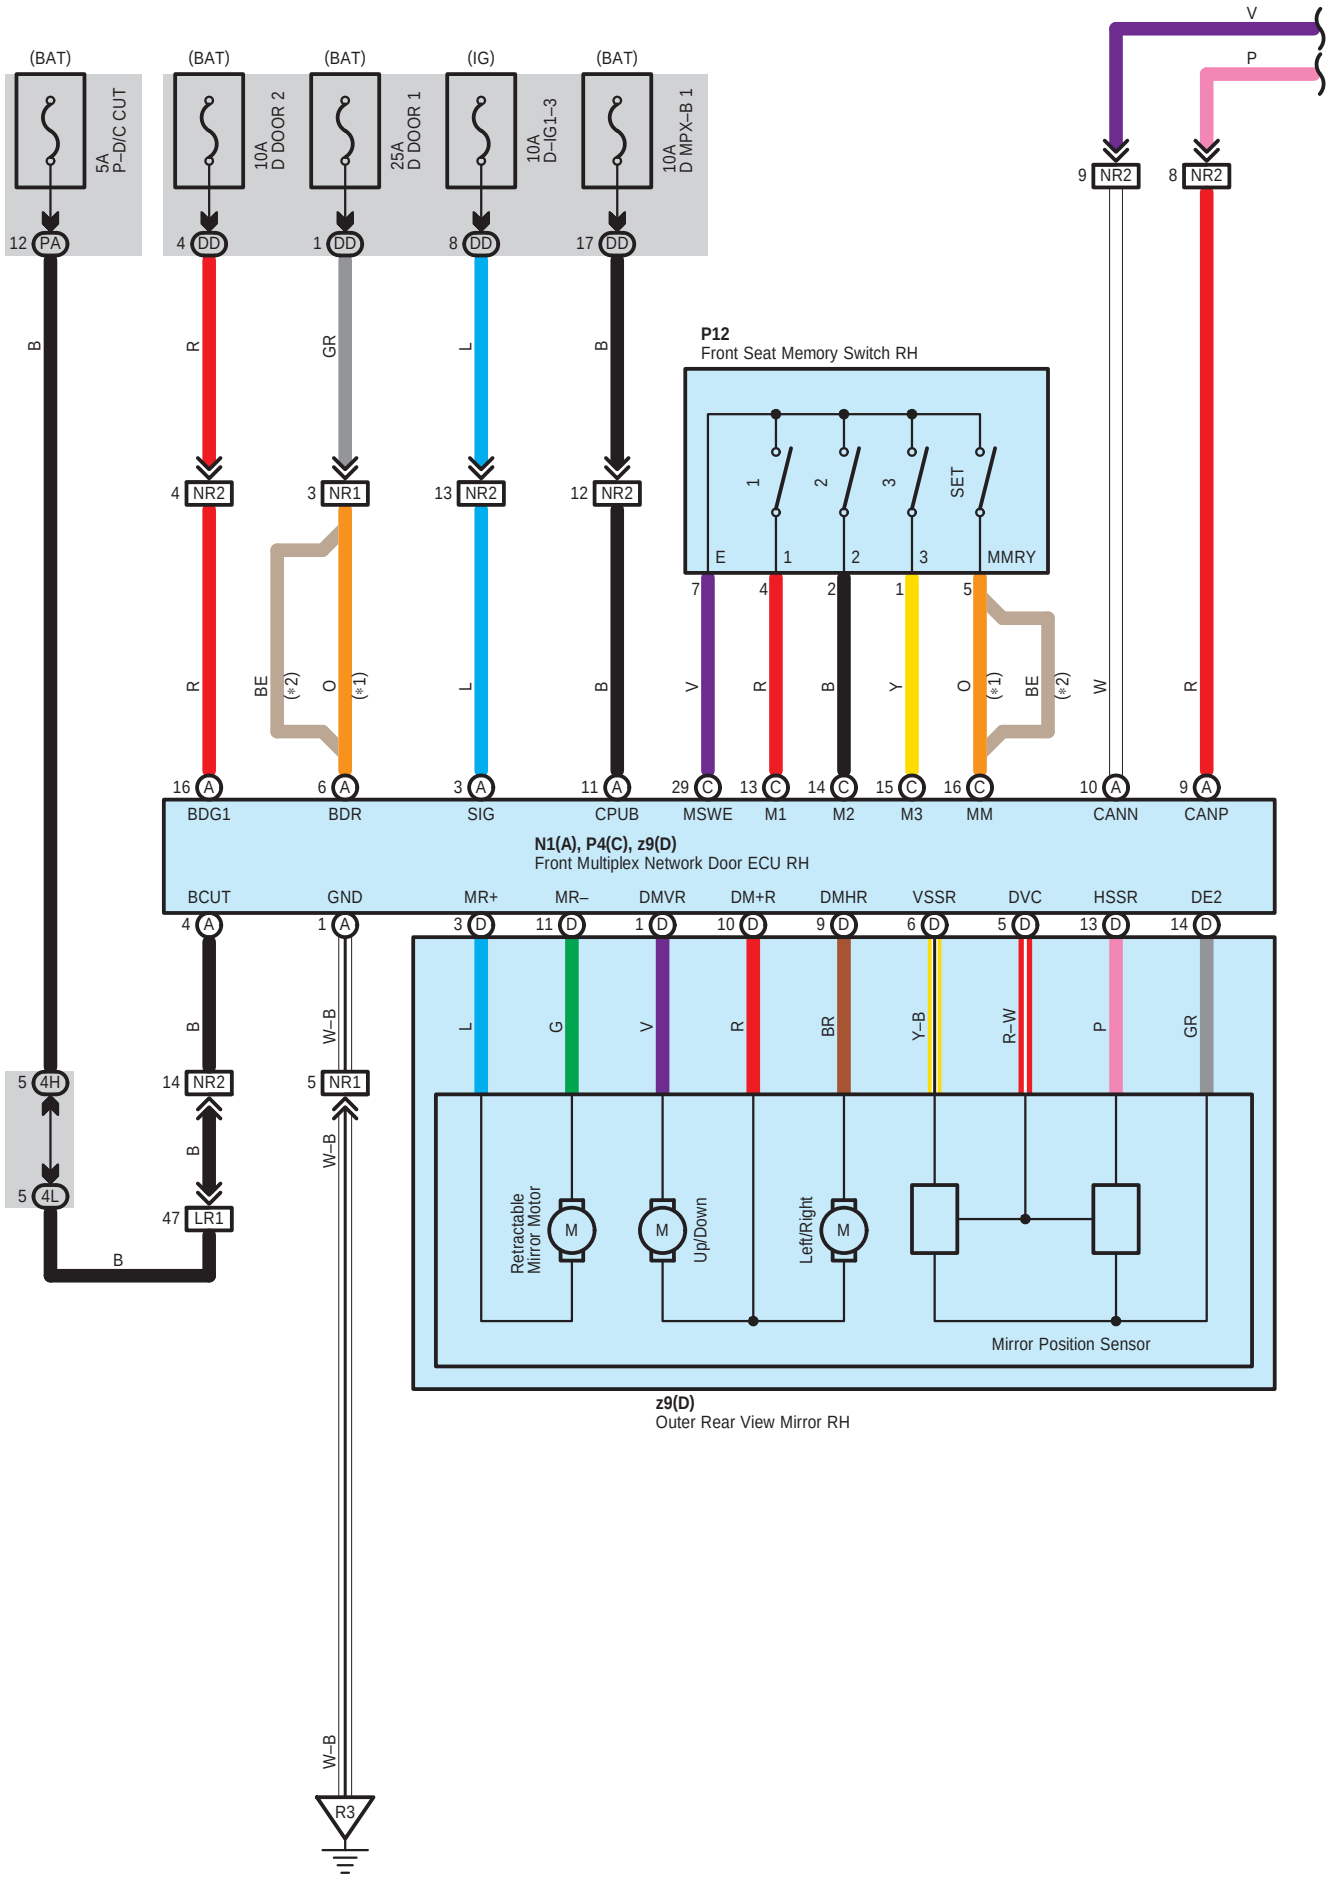
(BAT)
5A
P–D/C CUT
12 PA
(BAT)
10A
D DOOR 2
4 DD
(BAT)
25A
D DOOR 1
1 DD
(IG)
10A
D–IG1–3
8 DD
(BAT)
10A
D MPX–B 1
17 DD
V
P
9 NR2
8 NR2
P12
Front Seat Memory Switch RH
1
2
3
SET
E
1
2
3
MMRY
4 NR2
3 NR1
13 NR2
12 NR2
BE
(*2)
O
(*1)
16 A
6 A
3 A
11 A
29 C
13 C
14 C
15 C
16 C
10 A
9 A
BDG1
BDR
SIG
CPUB
MSWE
M1
M2
M3
MM
CANN
CANP
N1(A), P4(C), z9(D)
Front Multiplex Network Door ECU RH
BCUT
GND
MR+
MR–
DMVR
DM+R
DMHR
VSSR
DVC
HSSR
DE2
4 A
1 A
3 D
11 D
1 D
10 D
9 D
6 D
5 D
13 D
14 D
5 4H
5 4L
14 NR2
47 LR1
5 NR1
W–B
R3
Retractable
Mirror Motor
Up/Down
Left/Right
Mirror Position Sensor
z9(D)
Outer Rear View Mirror RH

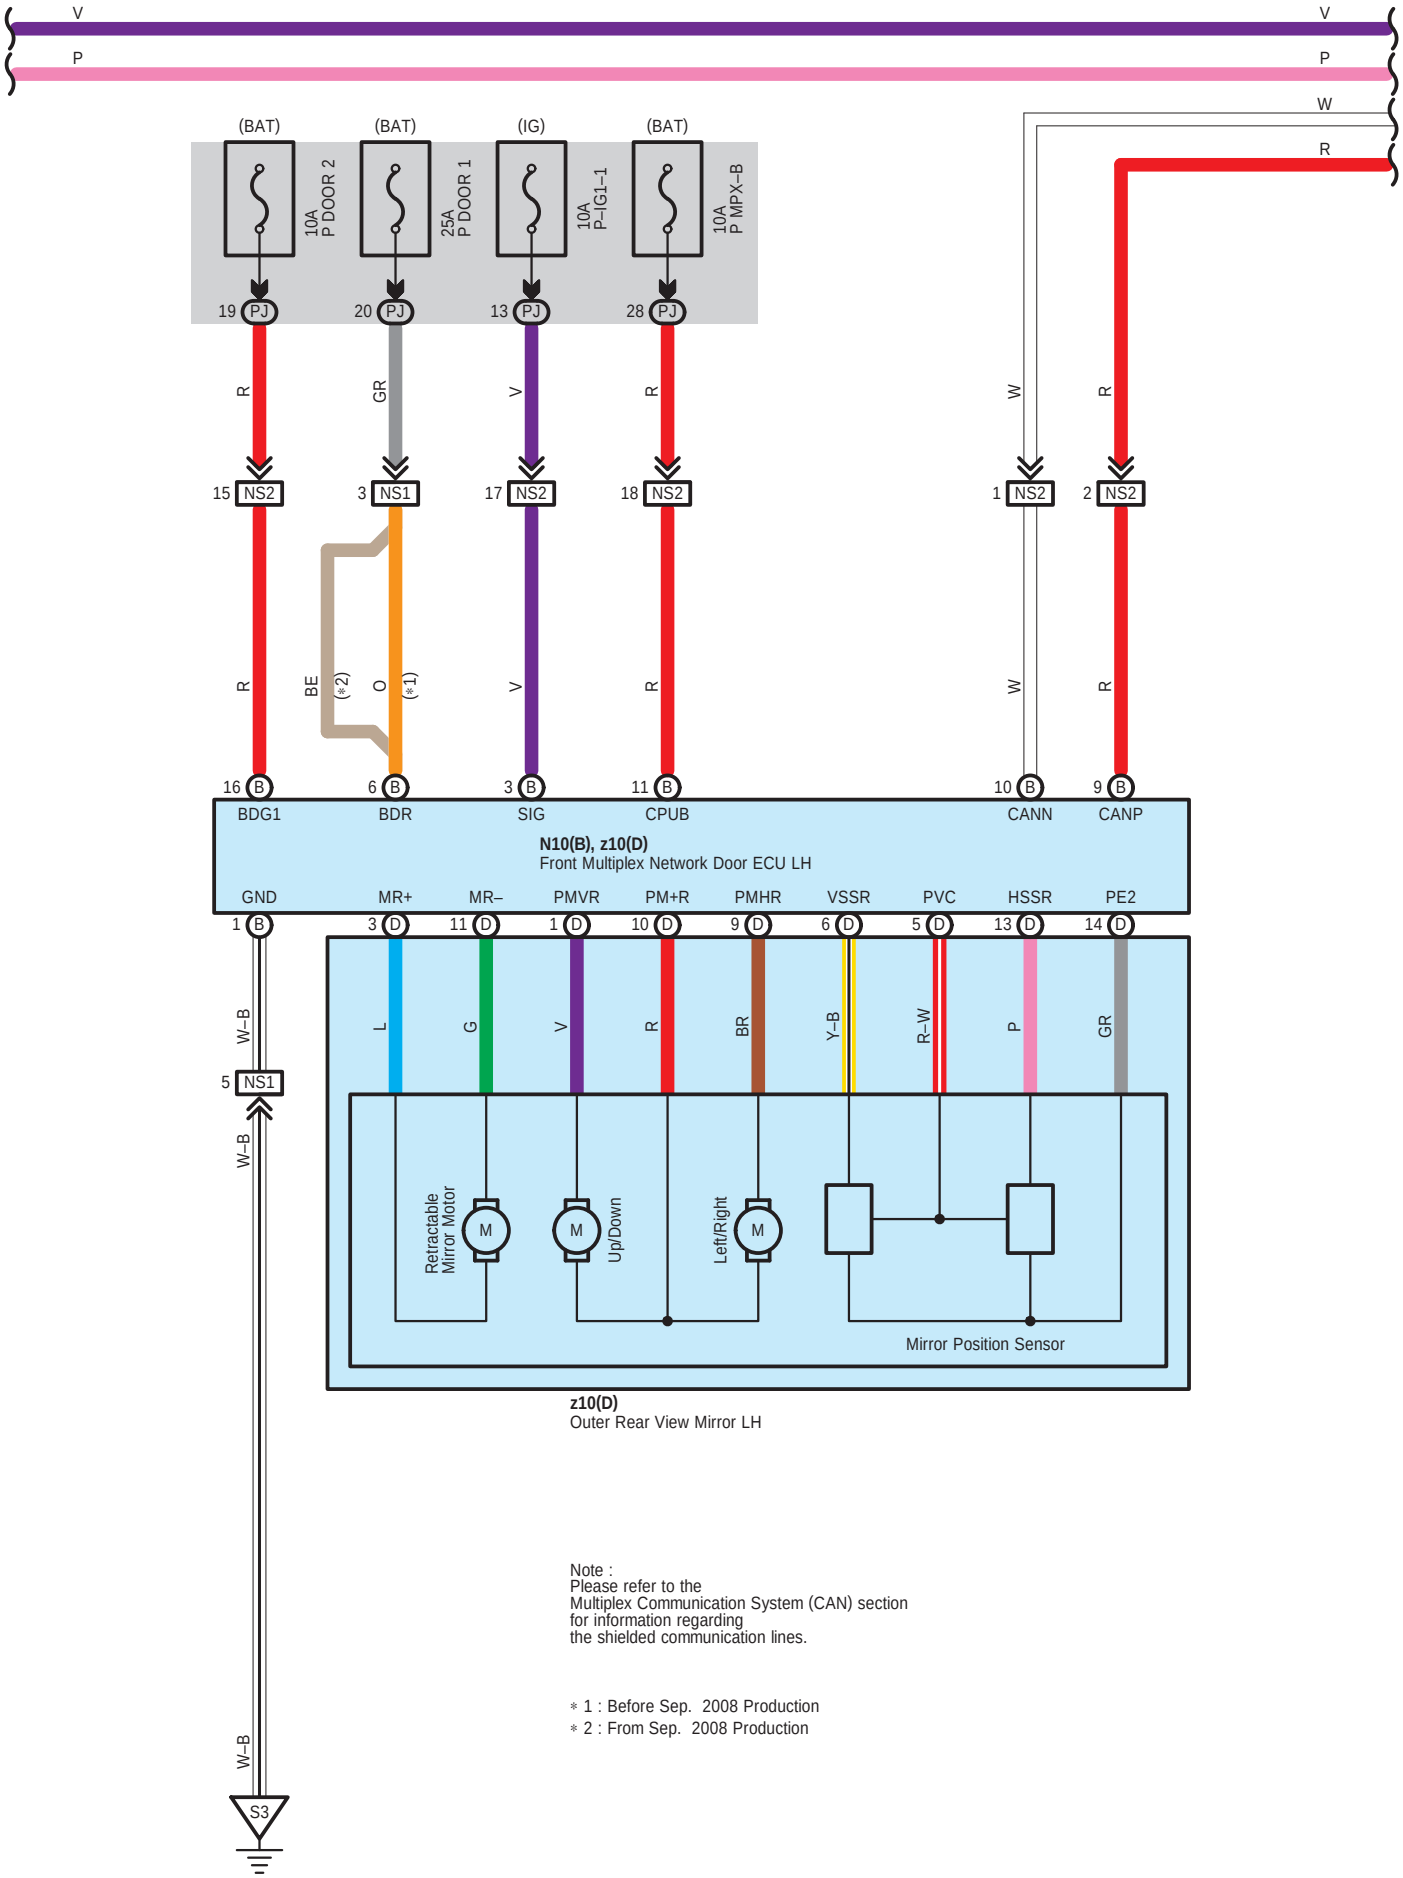

Note :
Please refer to the
Multiplex Communication System (CAN) section
for information regarding
the shielded communication lines.

＊1 : Before Sep. 2008 Production
＊2 : From Sep. 2008 Production

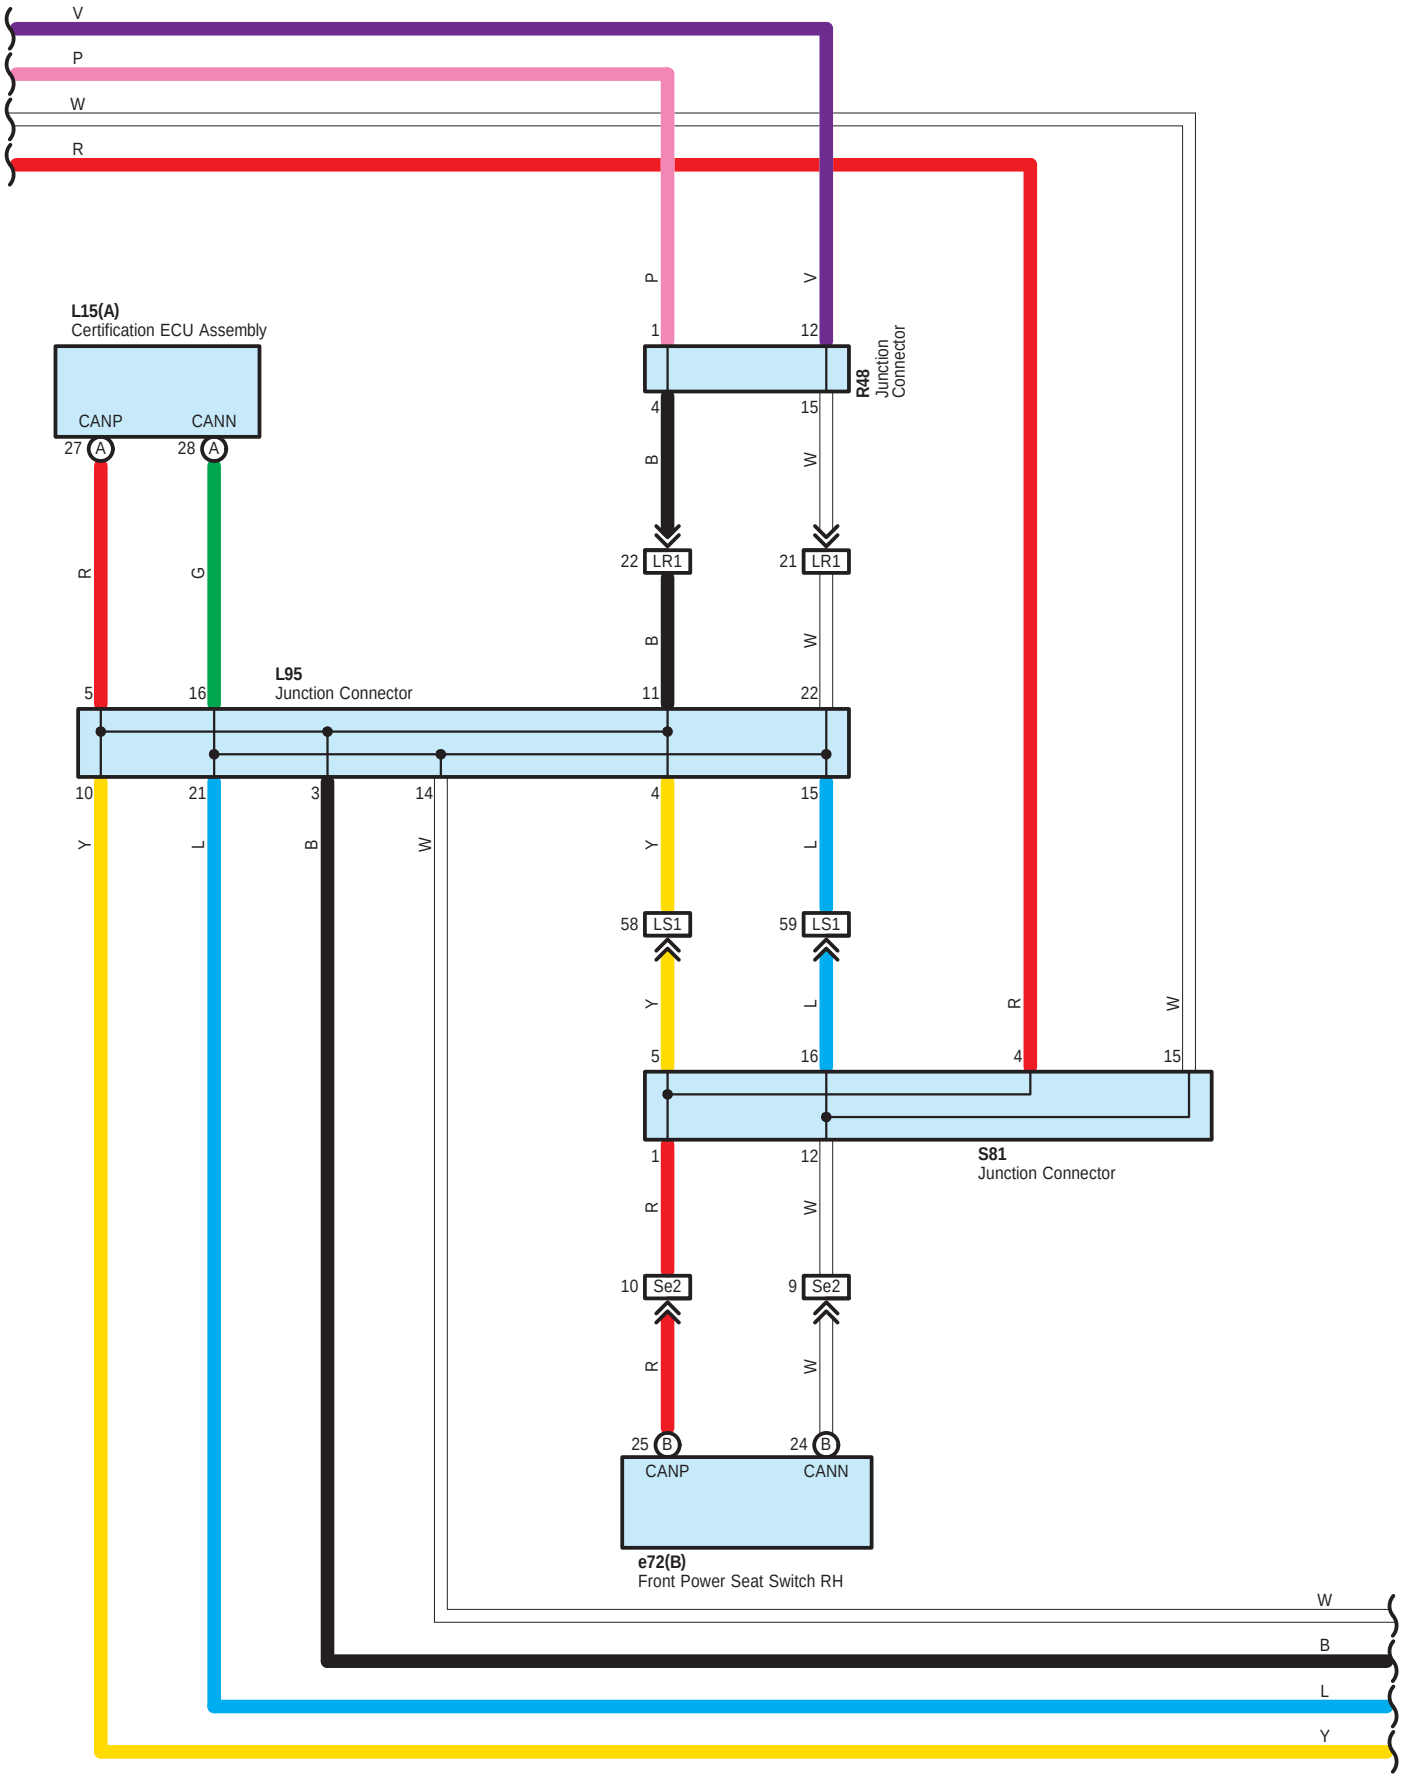
V
P
W
R
L15(A)
Certification ECU Assembly
CANP
CANN
27 A
28 A
R48
Junction
Connector
1
12
4
15
22 LR1
21 LR1
L95
Junction Connector
5
16
11
22
10
21
3
14
4
15
58 LS1
59 LS1
5
16
4
15
S81
Junction Connector
1
12
10 Se2
9 Se2
25 B
24 B
CANP
CANN
e72(B)
Front Power Seat Switch RH
W
B
L
Y

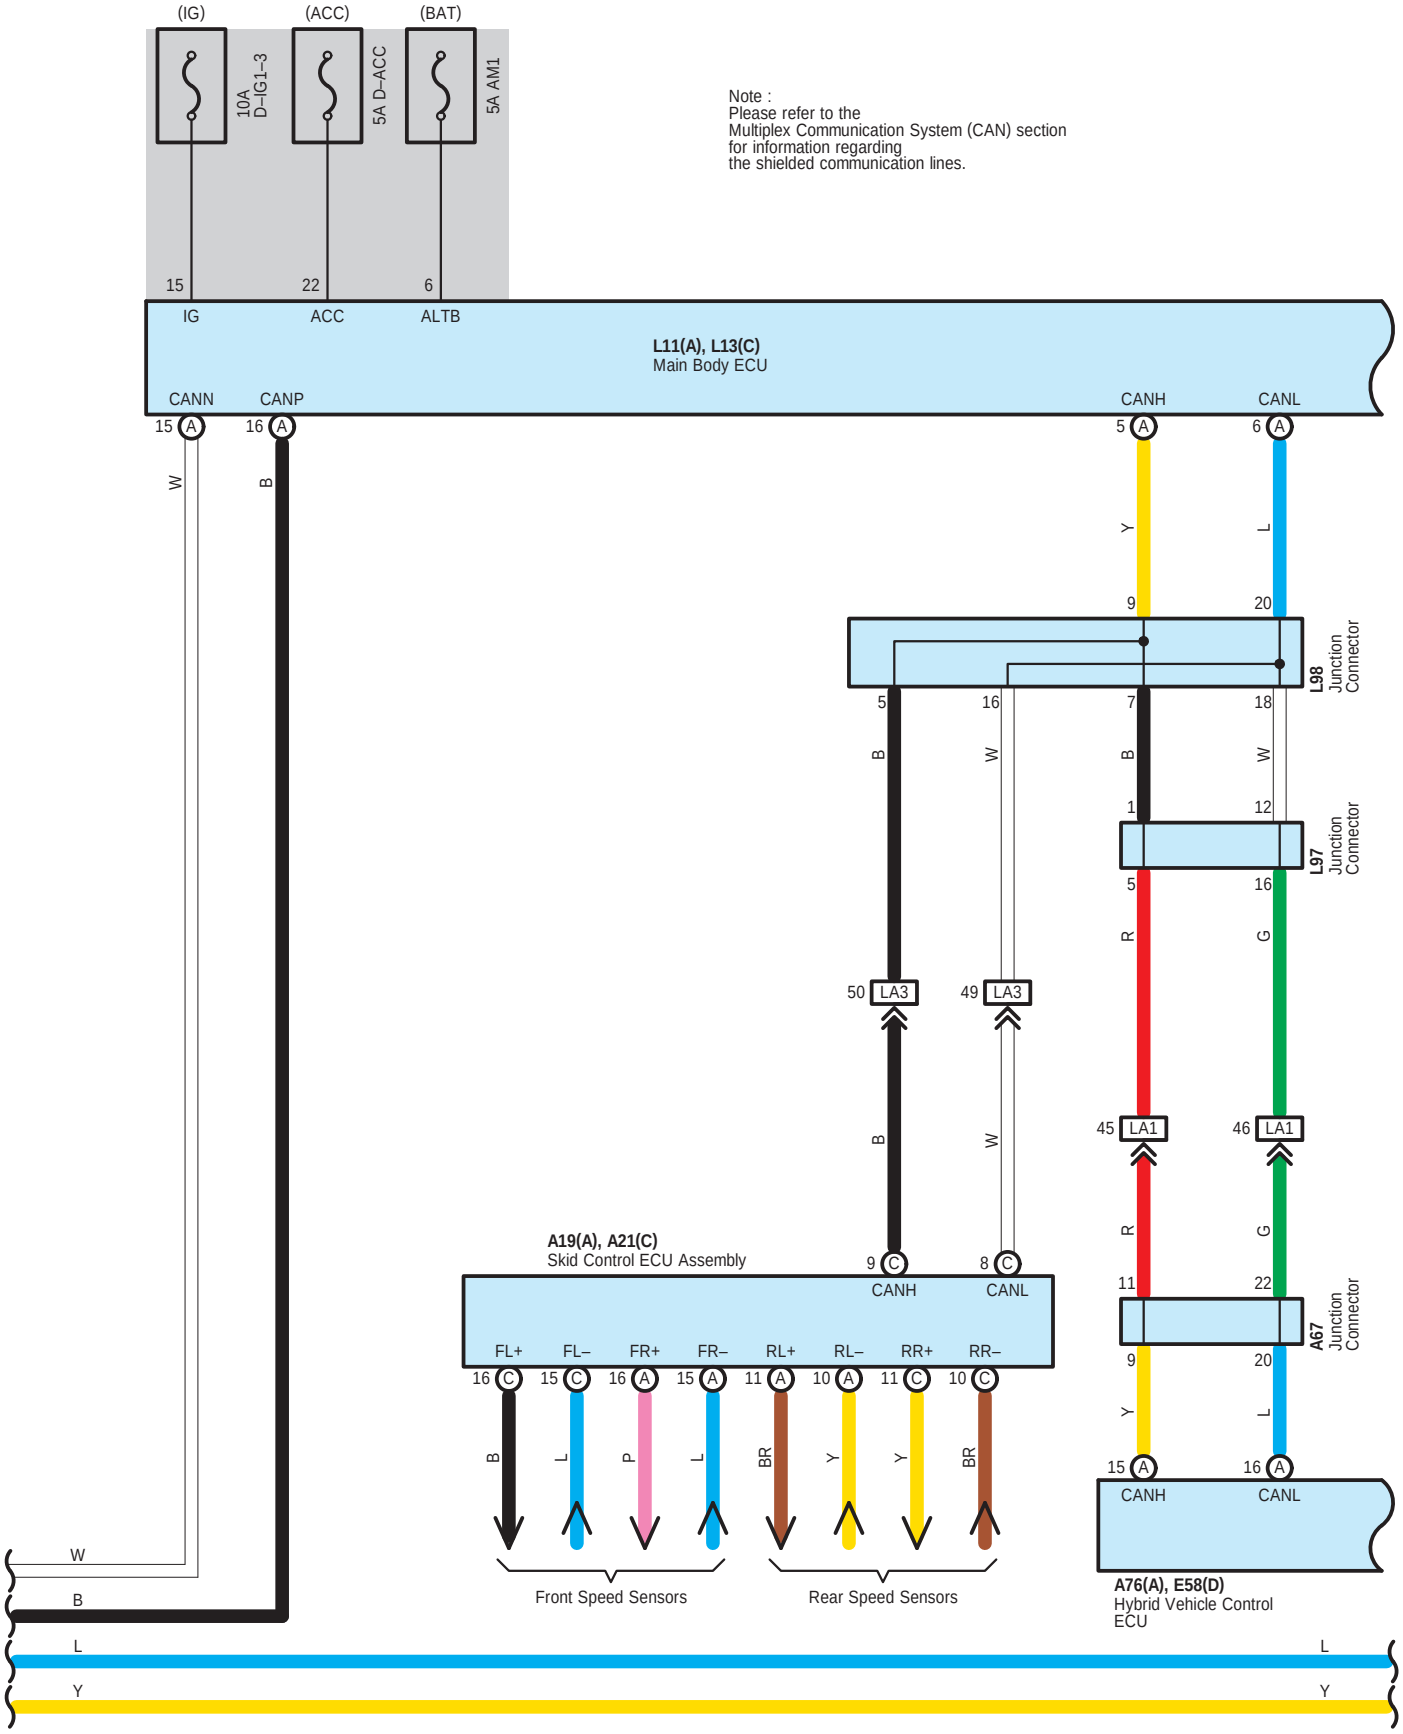
(IG)
(ACC)
(BAT)
10A D–IG1–3
5A D–ACC
5A AM1
15
22
6
IG
ACC
ALTB
Note :
Please refer to the
Multiplex Communication System (CAN) section
for information regarding
the shielded communication lines.
L11(A), L13(C)
Main Body ECU
CANN
CANP
CANH
CANL
L98 Junction Connector
L97 Junction Connector
A67 Junction Connector
LA3
LA1
A19(A), A21(C)
Skid Control ECU Assembly
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
Front Speed Sensors
Rear Speed Sensors
A76(A), E58(D)
Hybrid Vehicle Control
ECU

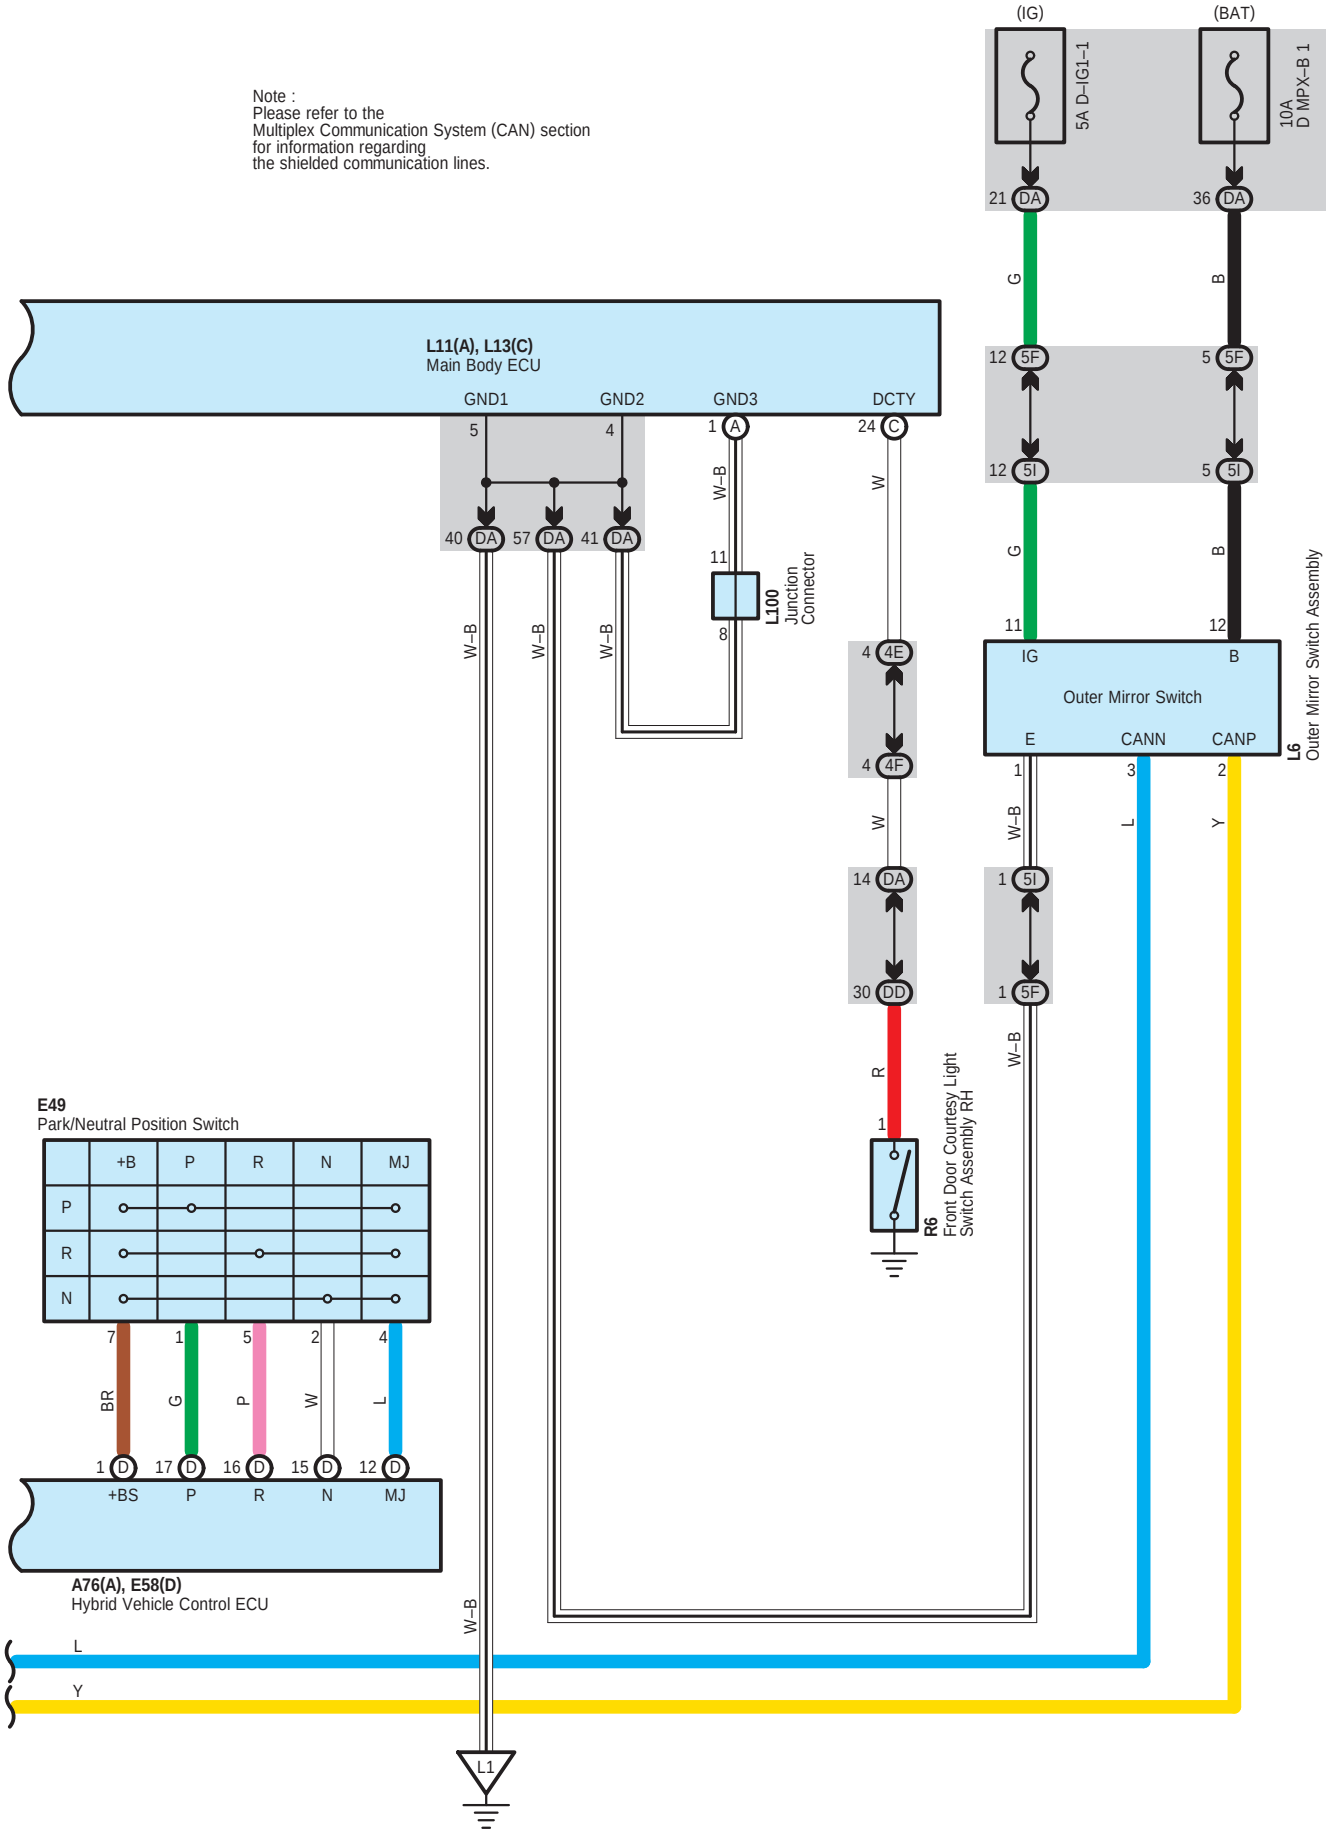
Note :
Please refer to the
Multiplex Communication System (CAN) section
for information regarding
the shielded communication lines.
(IG)
(BAT)
5A D–IG1–1
10A
D MPX–B 1
21 DA
36 DA
G
B
12 5F
5 5F
12 5I
5 5I
G
B
11
12
L11(A), L13(C)
Main Body ECU
GND1
GND2
GND3
DCTY
5
4
1 A
24 C
40 DA
57 DA
41 DA
W–B
W
11
8
L100
Junction
Connector
W–B
W–B
W–B
4 4E
4 4F
W
14 DA
30 DD
R
1
R6
Front Door Courtesy Light
Switch Assembly RH
IG
B
Outer Mirror Switch
E
CANN
CANP
L6
Outer Mirror Switch Assembly
1
3
2
W–B
L
Y
1 5I
1 5F
W–B
E49
Park/Neutral Position Switch
+B
P
R
N
MJ
P
R
N
7
1
5
2
4
BR
G
P
W
L
1 D
17 D
16 D
15 D
12 D
+BS
P
R
N
MJ
A76(A), E58(D)
Hybrid Vehicle Control ECU
W–B
L
Y
L1

A 19
Black

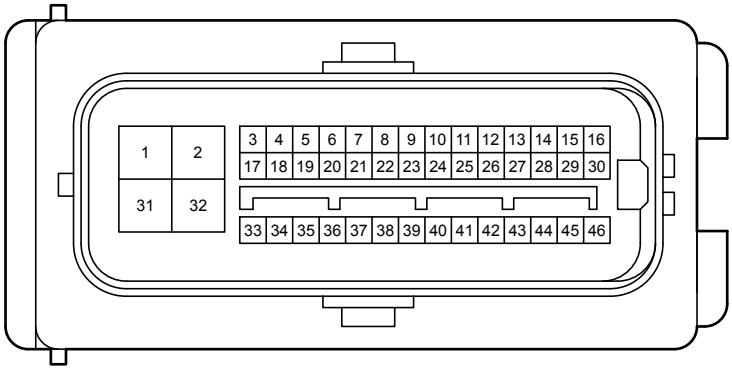

A 21
Gray

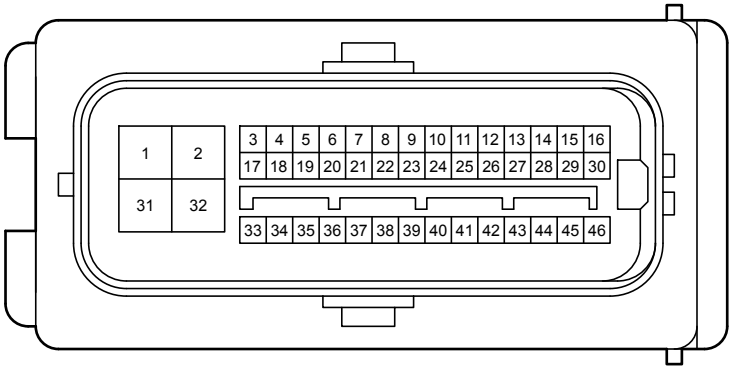

A 67
Black

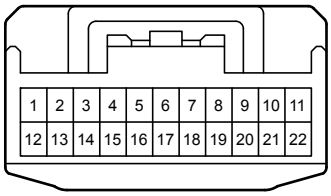

A 76
Gray

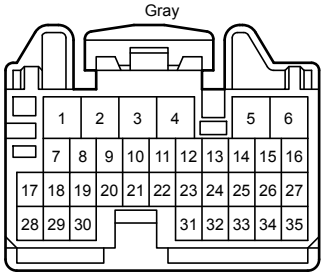

E 49
Gray

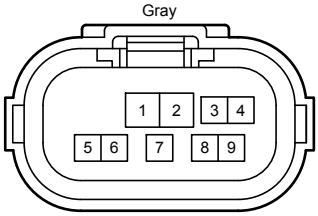

E 58
Gray

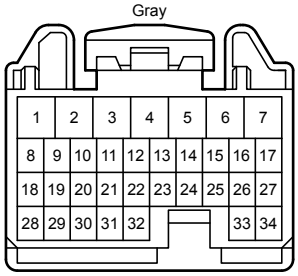

L 6
White

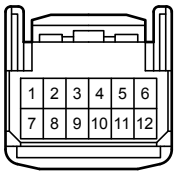

L 11
White

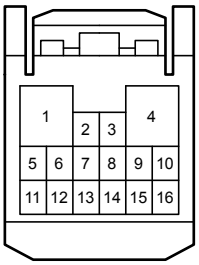

L 13
White

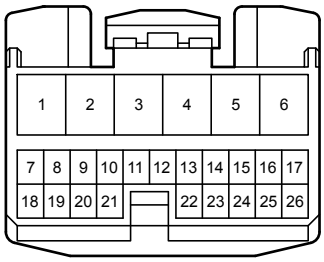

L 15
White

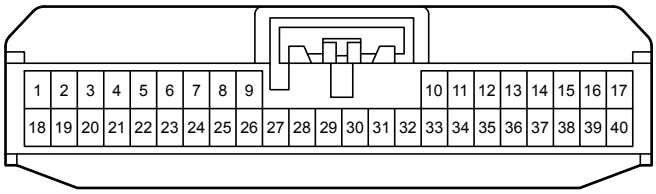

L 95
Gray

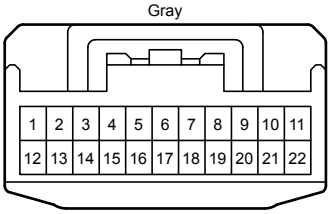

L 97
Black

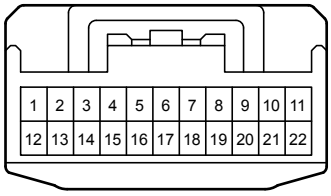

L 98
Gray

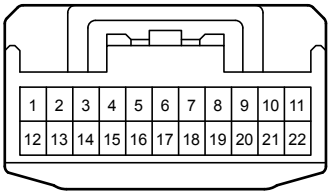

L100
Blue



N 1
White

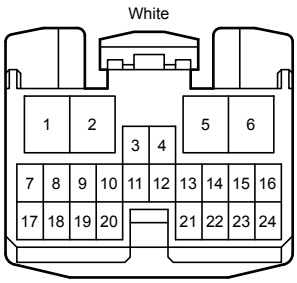

N 10
White

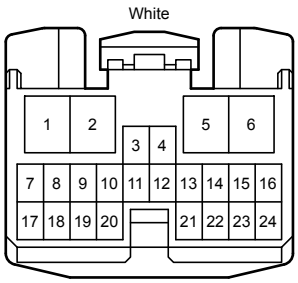

P 4
White

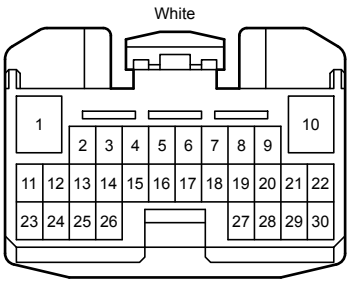

P 12
White

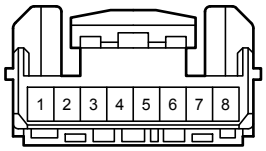

R 6
White

R 48
Black

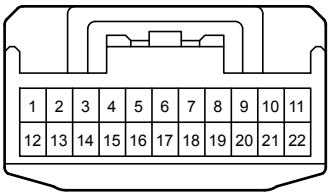

S 81
Gray

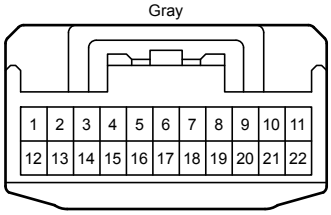

e 72
White

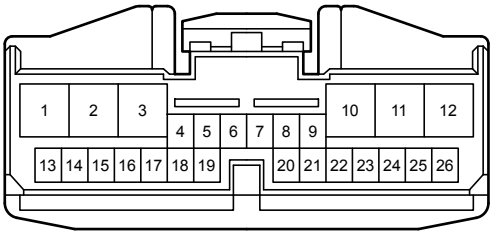

z 9
White

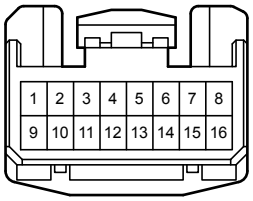

z 10
White

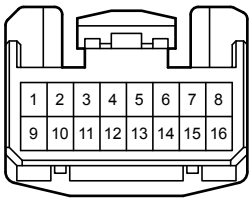

4E
White



4F
Gray



4H
Gray



4L
Gray



5F
Gray



5I
White



DA
White

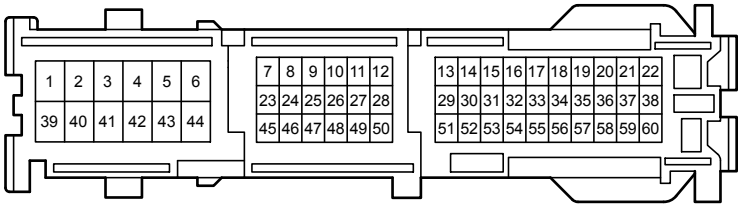

DD
Gray

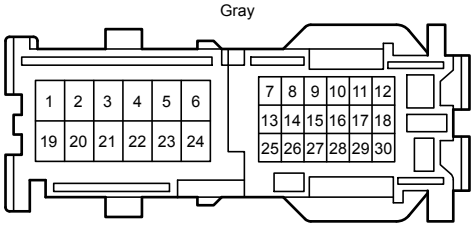

PA
White

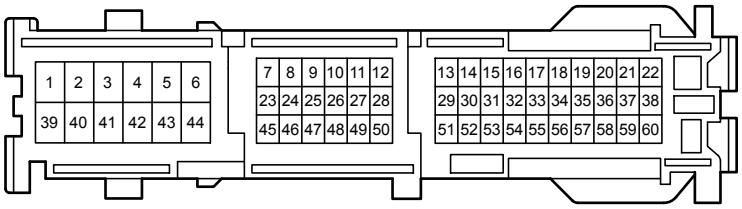

PJ
Gray

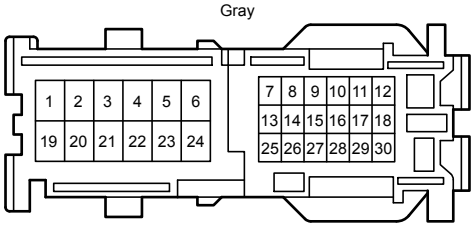

LA1
White

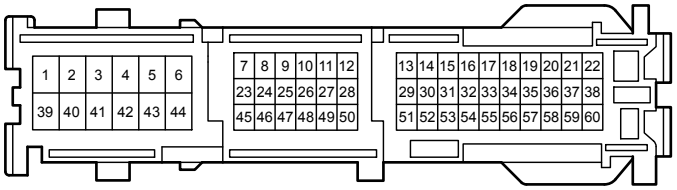

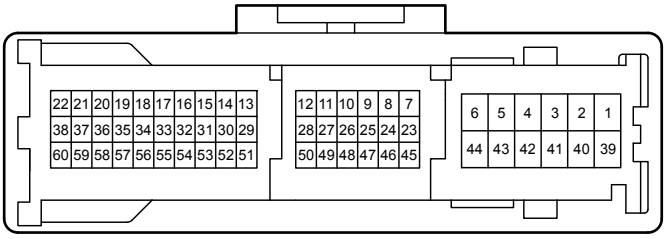

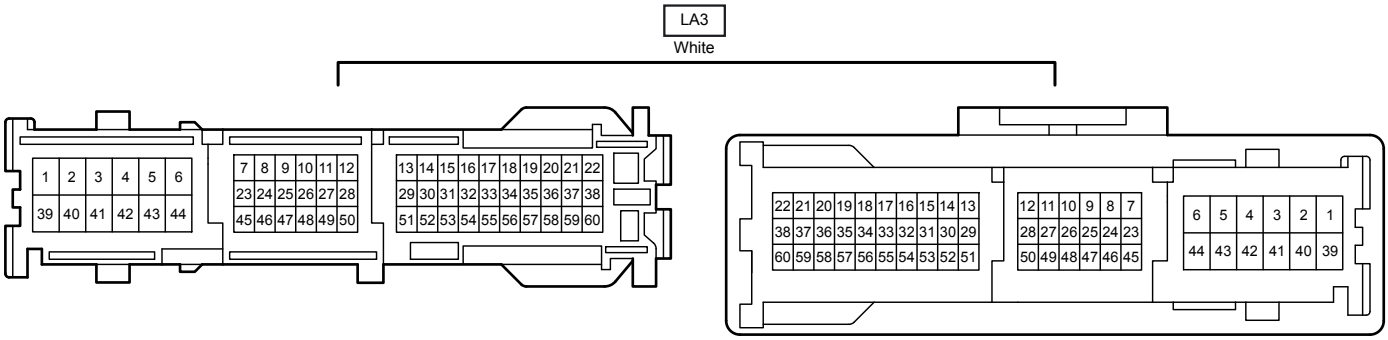
LA3
White

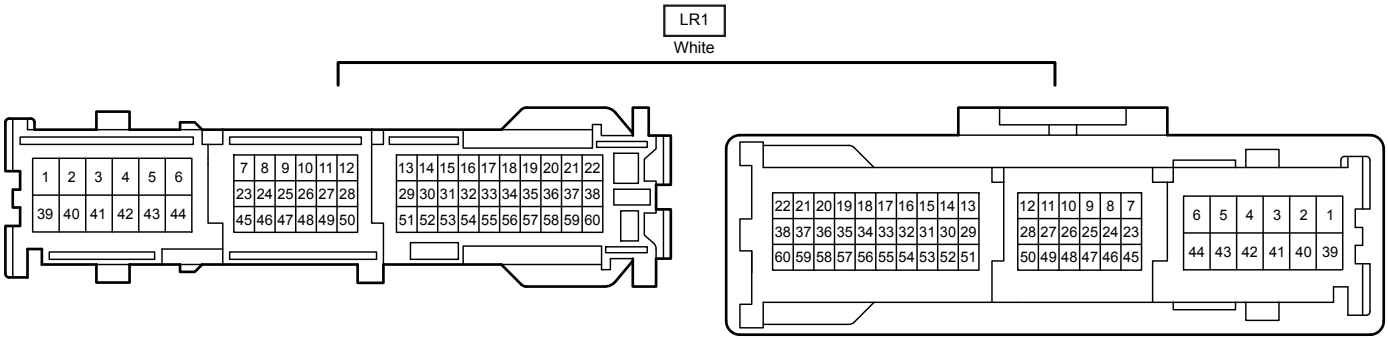
LR1
White

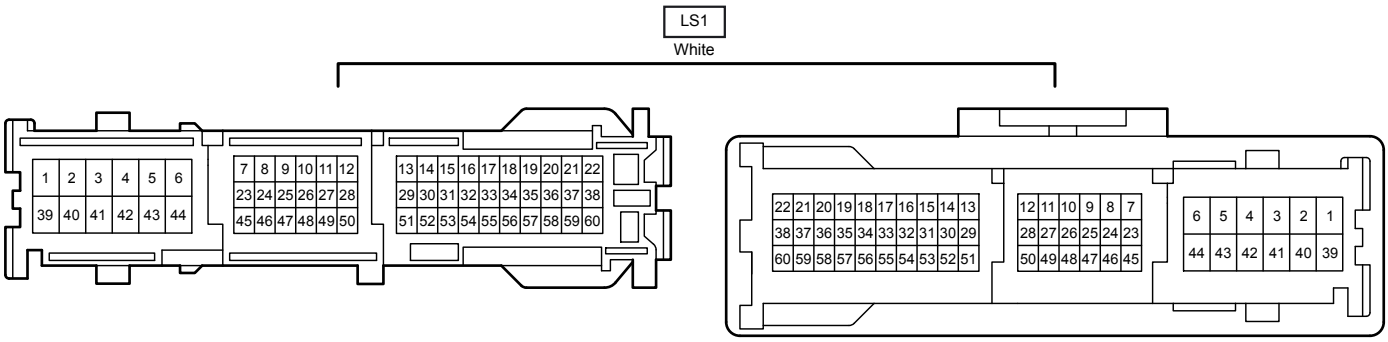
LS1
White

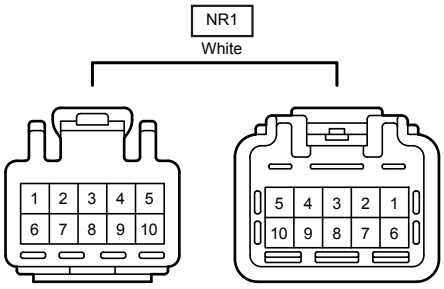
NR1
White

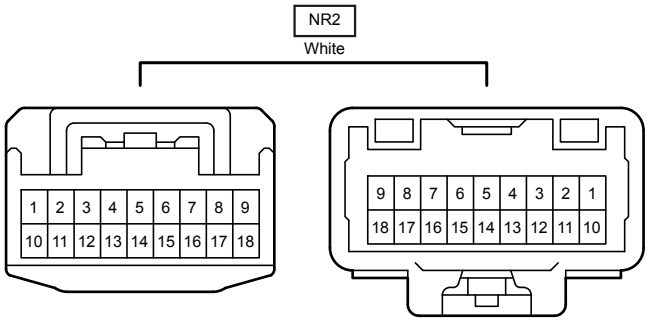
NR2
White

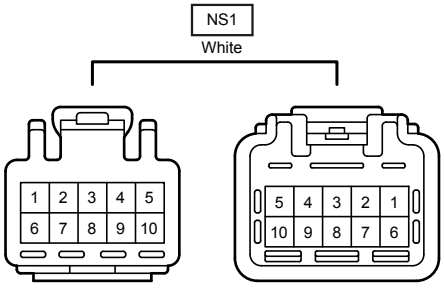
NS1
White

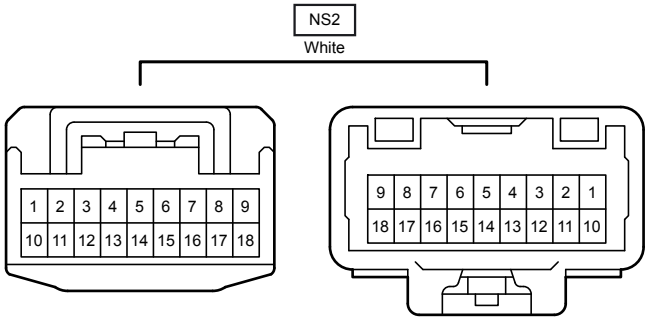
NS2
White

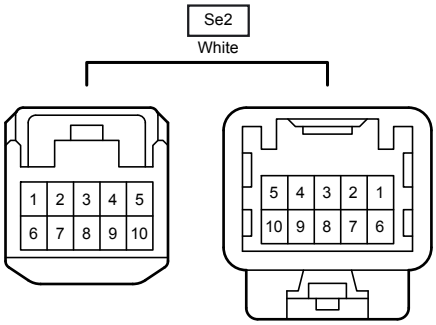
Se2
White
1 2 3 4 5
6 7 8 9 10
5 4 3 2 1
10 9 8 7 6